

SECTION **TF****CONTENTS**

<b>PRECAUTIONS</b> .....	2	HOW TO PERFORM TROUBLE DIAGNOSES FOR QUICK AND ACCURATE REPAIR.....	40
Supplemental Restraint System (SRS) "AIR BAG" .....	2	<b>TRouble DIAGNOSIS — BASIC INSPECTION</b> .....	41
Service Notice.....	2	Listen to Customer Complaints .....	41
Wiring Diagrams and Trouble Diagnosis.....	3	Transfer Fluid Check .....	41
<b>PREPARATION</b> .....	4	Road Test.....	41
Special Service Tools .....	4	PREPARATION FOR ROAD TEST .....	41
Commercial Service Tools .....	8	1. CHECK BEFORE ENGINE IS STARTED .....	42
<b>ALL-MODE 4WD SYSTEM</b> .....	9	2. CHECK AT IDLE .....	43
Cross-sectional View .....	9	3. CRUISE TEST .....	45
Control System .....	10	<b>TRouble DIAGNOSIS — GENERAL DESCRIPTION</b> .....	47
ALL-MODE 4WD TRANSFER BASIC CONTROL.....	11	TCM Terminals and Reference Value.....	47
HYDRAULIC CONTROL CIRCUITS.....	11	INSPECTION OF TCM .....	47
OUTLINE .....	11	TCM INSPECTION TABLE.....	47
CONTROL SYSTEM DIAGRAM .....	12	<b>VEHICLE SPEED SENSOR (FRONT REVOLUTION SENSOR)</b> .....	50
INDICATIONS OF 4WD WARNING LAMP.....	12	Diagnostic Procedure .....	50
Location of Electrical Parts.....	13	<b>4WD SOLENOID VALVE</b> .....	52
Circuit Diagram for Quick Pinpoint Check.....	14	Diagnostic Procedure .....	52
Wiring Diagram — TF — .....	15	<b>2-4WD SHIFT SOLENOID VALVE AND 4WD SHIFT SWITCH</b> .....	53
<b>ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION</b> .....	25	Diagnostic Procedure .....	53
Trouble Diagnosis without CONSULT .....	25	<b>TRANSFER MOTOR AND TRANSFER MOTOR RELAY</b> .....	55
DESCRIPTION .....	25	Diagnostic Procedure .....	55
SELF-DIAGNOSTIC PROCEDURE.....	26	<b>TRANSFER FLUID TEMPERATURE SENSOR</b> .....	57
INDICATIONS OF 4WD WARNING LAMP.....	27	Diagnostic Procedure .....	57
Trouble Diagnosis with CONSULT .....	28	<b>ATP SWITCH, WAIT DETECTION SWITCH AND NEUTRAL-4LO SWITCH</b> .....	59
SELF-DIAGNOSIS .....	28	Diagnostic Procedure .....	59
SELF-DIAGNOSTIC ITEMS .....	29	<b>CLUTCH PRESSURE SWITCH</b> .....	61
DATA MONITOR.....	30	Diagnostic Procedure .....	61
DATA MONITOR ITEMS.....	31	<b>LINE PRESSURE SWITCH</b> .....	63
REFERENCE VALUE IN DATA MONITOR MODE .....	33	Diagnostic Procedure .....	63
WORK SUPPORT .....	34	<b>ABS OPERATION SIGNAL</b> .....	65
CLUTCH FORCE RELEASE LIMIT ADJUSTMENT .....	35	Diagnostic Procedure .....	65
STARTING TORQUE OFFSET ADJUSTMENT .....	36	<b>DATA ERASE/DISPLAY</b> .....	67
<b>TRouble DIAGNOSIS — INTRODUCTION</b> .....	38	Diagnostic Procedure .....	67
Introduction .....	38		
DESCRIPTION .....	38		
DIAGNOSTIC WORKSHEET.....	38		
Work Flow.....	40		

# CONTENTS (Cont'd)

<b>TROUBLE DIAGNOSES FOR SYMPTOMS</b> .....	68	INSTALLATION.....	82	GI
Symptom 1. 4WD Shift Indicator Lamp Does Not Turn ON.....	68	Transfer Oil Filter.....	83	
Symptom 2. 4WD Warning Lamp Does Not Turn ON.....	69	REMOVAL.....	83	MA
Symptom 3. 4WD Shift Indicator Lamp Does Not Turn OFF.....	71	INSTALLATION.....	83	
Symptom 4. ATP Warning Lamp Does Not Turn ON.....	71	<b>REMOVAL AND INSTALLATION</b> .....	84	
Symptom 5. 4LO Indicator Lamp Does Not Turn ON.....	72	Removal.....	84	EM
Symptom 6. 4WD Shift Indicator Lamp Does Not Indicate "LOCK".....	73	Installation.....	84	
Symptom 7. 4WD Shift Indicator Lamp Repeats Flickering.....	74	<b>OVERHAUL</b> .....	85	
Symptom 8. Tight Corner Braking Symptom.....	75	Transfer Gear Control.....	85	LC
Symptom 9. 4WD System Does Not Operate.....	75	Transfer Components.....	86	
<b>COMPONENT INSPECTION</b> .....	77	<b>DISASSEMBLY</b> .....	88	
4WD Shift Switch.....	77	Rear Case.....	88	EC
2-4WD Shift Solenoid Valve and Transfer Fluid Temperature Sensor.....	77	DISASSEMBLY.....	88	
4WD Solenoid Valve, Clutch Pressure Switch and Line Pressure Switch.....	77	Center Case.....	88	FE
Front Revolution Sensor.....	78	DISASSEMBLY.....	88	
Transfer Dropping Resistor.....	78	Front Case.....	98	
ATP Switch, Neutral-4LO Switch and Wait Detection Switch.....	78	DISASSEMBLY.....	98	AT
Transfer Motor.....	79	<b>REPAIR FOR COMPONENT PARTS</b> .....	102	
Transfer Motor Relay.....	79	Front Case.....	102	
Transfer Sub-harness.....	79	INSPECTION.....	102	TF
FRONT REVOLUTION SENSOR SUB-HARNESS CONNECTOR.....	79	Center Case.....	103	
TRANSFER SWITCH ASSEMBLY SUB-HARNESS CONNECTOR.....	80	INSPECTION.....	103	
TRANSFER TERMINAL CORD ASSEMBLY SUB-HARNESS CONNECTOR.....	80	<b>ASSEMBLY</b> .....	106	PD
Transfer Indicator Lamp Relay.....	80	Front Case.....	106	
<b>ON-VEHICLE SERVICE</b> .....	81	ASSEMBLY.....	106	AX
Replacing Oil Seal.....	81	Center Case.....	110	
FRONT CASE OIL SEAL.....	81	ASSEMBLY.....	110	
SHIFT SHAFT OIL SEAL.....	82	Final Assembly.....	118	SU
REAR OIL SEAL.....	82	<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	122	
Transfer Motor.....	82	General Specifications.....	122	
REMOVAL.....	82	Inner Gear and Outer Gear.....	122	BR
		SUB-OIL PUMP.....	122	
		MAIN OIL PUMP.....	122	
		Control Valve.....	122	ST
		VALVE.....	122	
		SPRING.....	122	
		Clutch.....	123	RS
		DRIVE PLATE.....	123	
		RETURN SPRING.....	123	BT
		RETAINING PLATE.....	123	
		Seal Ring (Mainshaft side).....	123	HA
		Bearing Race (Thrust needle bearing side).....	124	
		Snap Ring (Sun gear side).....	124	HA
				SC
				EL
				IDX

# PRECAUTIONS

Supplemental Restraint System (SRS) "AIR BAG"

## Supplemental Restraint System (SRS) "AIR BAG"

NBTF0001

The Supplemental Restraint System "AIR BAG", used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger in a frontal collision.

The Supplemental Restraint System consists of air bag modules (located in the center of the steering wheel and on the instrument panel on the passenger side), a diagnosis sensor unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the **RS section** of this Service Manual.


### WARNING:

- **To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized INFINITI dealer.**
- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.**
- **Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses are covered with yellow insulation either just before the harness connectors or for the complete harness, for easy identification.**

### Service Notice

NBTF0002

- 1) Before proceeding with disassembly, thoroughly clean the outside of the all-mode 4WD transfer. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- 2) Disassembly should be done in a clean work area.
- 3) Use lint-free cloth or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the all-mode 4WD transfer.
- 4) Place disassembled parts in order for easier and proper assembly.
- 5) All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- 6) Gaskets, seals and O-rings should be replaced any time the all-mode 4WD transfer is disassembled.
- 7) When connecting TCM harness connector, tighten bolt until red projection is in line with connector.

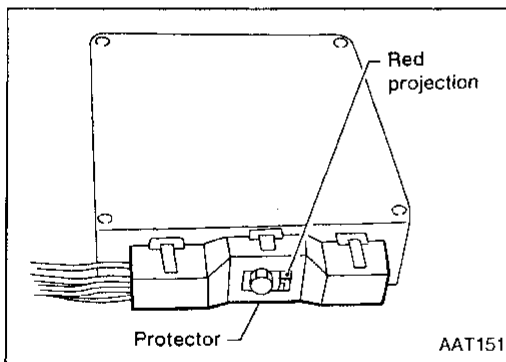

- 8) It is very important to perform functional tests whenever they are indicated.
- 9) The valve body contains precision parts and requires extreme care when parts are removed and serviced. Place removed parts in a parts rack in order to replace them in correct positions and sequences. Care will also prevent springs and small parts from becoming scattered or lost.
- 10) Properly installed valves, sleeves, plugs, etc. will slide along bores in valve body under their own weight.
- 11) Before assembly, apply a coat of recommended ATF to all parts. Apply petroleum jelly to protect O-rings and seals, and to hold bearings and washers in place during assembly. Do not use grease.
- 12) Extreme care should be taken to avoid damage to O-rings, seals and gaskets when assembling.
- 13) After overhaul, refill the transfer with new ATF.
- 14) When the all-mode 4WD transfer drain plug is removed, only some of the fluid is drained. Old all-mode 4WD transfer fluid will remain in torque converter and ATF cooling system. Always follow the procedures under "Changing All-mode 4WD Transfer Fluid" in the MA section when changing all-mode 4WD transfer fluid.

# PRECAUTIONS

Wiring Diagrams and Trouble Diagnosis

## Wiring Diagrams and Trouble Diagnosis

NBTF0003

When you read wiring diagrams, refer to the followings:

- "HOW TO READ WIRING DIAGRAMS" in GI section
- "POWER SUPPLY ROUTING" for power distribution circuit in EL section

When you perform trouble diagnosis, refer to the followings:

- "HOW TO FOLLOW TEST GROUP IN TROUBLE DIAGNOSIS" in GI section
- "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT" in GI section

GI

MA

EM

LC

EC

FE

AT

**TF**

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX







# PREPARATION

Special Service Tools

## Special Service Tools







NBFT0004

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

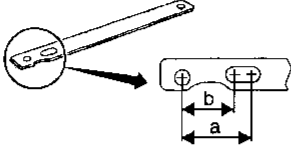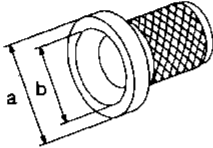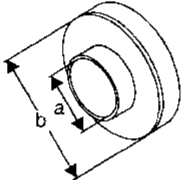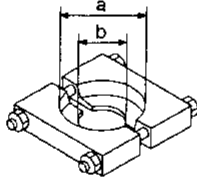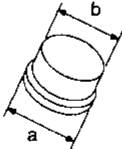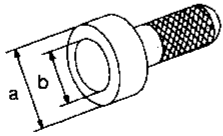Tool number (Kent-Moore No.) Tool name	Description
KV40104000 ( — ) Hub lock nut wrench	 <p style="text-align: right;">Removing companion flange  <b>a: 85 mm (3.35 in)</b>  <b>b: 65 mm (2.56 in)</b></p> <p style="text-align: left;">NT659</p>
KV40100621 (J26091) Drift	 <p style="text-align: right;">Installing front drive shaft bearing  <b>a: 76 mm (2.99 in) dia.</b>  <b>b: 69 mm (2.72 in) dia.</b></p> <p style="text-align: left;">NT086</p>
ST30032000 ( — ) Base	 <p style="text-align: right;">Installing front drive shaft bearing  <b>a: 38 mm (1.50 in) dia.</b>  <b>b: 80 mm (3.15 in) dia.</b></p> <p style="text-align: left;">NT660</p>
ST30031000 (J22912-01) Puller	 <p style="text-align: right;">Removing front drive shaft bearing  <b>a: 110 mm (4.33 in) dia.</b>  <b>b: 68 mm (2.68 in) dia.</b></p> <p style="text-align: left;">NT411</p>
ST33052000 ( — ) Adapter	 <p style="text-align: right;">Removing front drive shaft bearing  <b>a: 28 mm (1.10 in) dia.</b>  <b>b: 22 mm (0.87 in) dia.</b></p> <p style="text-align: left;">NT431</p>
ST35271000 (J26091) Drift	 <p style="text-align: right;">Installing rear oil seal                      Removing and installing press flange snap ring  <b>a: 72 mm (2.83 in) dia.</b>  <b>b: 63 mm (2.48 in) dia.</b></p> <p style="text-align: left;">NT115</p>

# PREPARATION


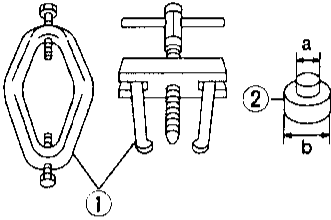
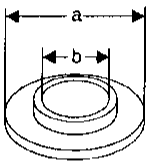
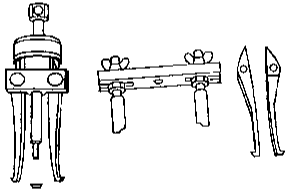
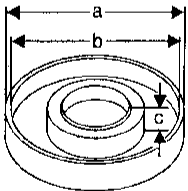
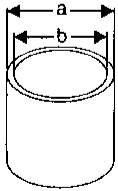
*Special Service Tools (Cont'd)*

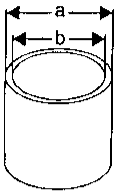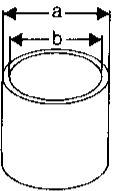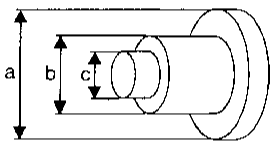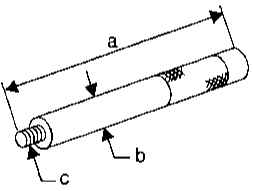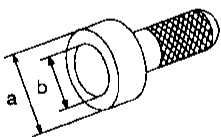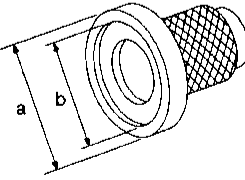Tool number (Kent-Moore No.) Tool name	Description	
ST27863000 ( — ) Support ring	 <p style="text-align: center;">NT661</p>	Removing and installing press flange snap ring <b>a: 74.5 mm (2.933 in) dia.</b> <b>b: 62.5 mm (2.461 in) dia.</b>
KV40104710 ( — ) Support ring	 <p style="text-align: center;">NT661</p>	Removing and installing press flange snap ring <b>a: 76.3 mm (3.004 in) dia.</b> <b>b: 67.9 mm (2.673 in) dia.</b>
ST35291000 ( — ) Remover	 <p style="text-align: center;">NT662</p>	Removing mainshaft rear bearing <b>a: 40 mm (1.57 in) dia.</b> <b>b: 29.5 mm (1.161 in) dia.</b> <b>c: 22.5 mm (0.886 in) dia.</b>
ST30090010 ( — ) Remover	 <p style="text-align: center;">NT663</p>	Removing mainshaft rear bearing <b>a: 165 mm (6.50 in)</b> <b>b: 25 mm (0.98 in) dia.</b> <b>c: M16 x P2.0</b>
KV38100500 ( — ) Drift	 <p style="text-align: center;">NT115</p>	Installing front drive shaft oil seal <b>a: 80 mm (3.15 in) dia.</b> <b>b: 60 mm (2.36 in) dia.</b>
KV40100621 (J25273) Drift	 <p style="text-align: center;">NT104</p>	Installing mainshaft rear bearing <b>a: 76 mm (2.99 in) dia.</b> <b>b: 69 mm (2.72 in) dia.</b>

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 AT  
**TF**  
 PD  
 AX  
 SU  
 BR  
 ST  
 RS  
 BT  
 HA  
 SC  
 EL  
 IDX







# PREPARATION

## Special Service Tools (Cont'd)

Tool number (Kent-Moore No.) Tool name	Description	
KV32101100 ( — ) Pin punch		Removing and installing L-H fork, 2-4 fork <b>a: 6 mm (0.24 in) dia.</b>
ST3306S001 (J22888-D) Differential side bearing puller set 1 ST33051001 ( — ) Puller 2 ST33061000 (J8107-2) Adapter		Installing mainshaft rear bearing Removing sun gear assembly <b>a: 28.5 mm (1.122 in) dia.</b> <b>b: 38 mm (1.50 in) dia.</b>
ST30911000 ( — ) Puller		Installing mainshaft and planetary carrier assembly <b>a: 98 mm (3.86 in) dia.</b> <b>b: 40.5 mm (1.594 in) dia.</b>
KV381054S0 ( — ) Outer race puller		Removing rear oil seal
KV40105230 ( — ) Adapter		Installing planetary carrier assembly <b>a: 92 mm (3.62 in) dia.</b> <b>b: 86 mm (3.39 in) dia.</b> <b>c: 12 mm (0.47 in)</b>
KV40105310 ( — ) Support ring		Installing planetary carrier assembly <b>a: 89.1 mm (3.508 in) dia.</b> <b>b: 80.7 mm (3.177 in) dia.</b>

# PREPARATION



Special Service Tools (Cont'd)

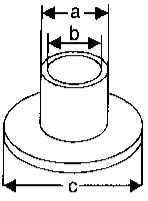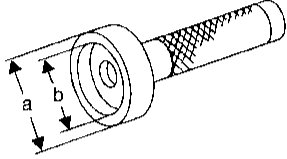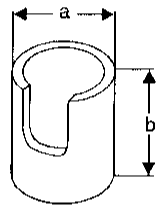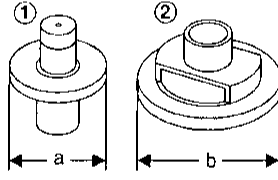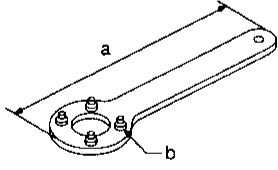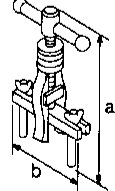Tool number (Kent-Moore No.) Tool name	Description	GI MA EM LC EC FE AT
KV40105500 ( — ) Support	 <p>Installing planetary carrier assembly  <b>a: 69 mm (2.72 in) dia.</b>  <b>b: 52 mm (2.05 in) dia.</b>  <b>c: 120 mm (4.72 in) dia.</b></p>	NT667
KV38100200 ( — ) Drift	 <p>Installing transfer cover oil seal  <b>a: 65 mm (2.56 in) dia.</b>  <b>b: 49 mm (1.93 in) dia.</b></p>	EC FE AT
KV31103300 ( — ) Drift	 <p>Removing and installing press flange snap ring  <b>a: 76.3 mm (3.004 in) dia.</b>  <b>b: 130 mm (5.12 in)</b></p>	<b>TF</b> PD AX
KV31103400 ( — ) Clutch piston attachment 1 Shaft-drift 2 Guide-cylinder	 <p>Installing clutch piston  <b>a: 88.5 mm (3.484 in) dia.</b>  <b>b: 158 mm (6.22 in) dia.</b></p>	SU BR ST
ST38060002 (J34311) Flange wrench	 <p>Removing companion flange nut          Installing companion flange nut  <b>a: 480 mm (18.90 in)</b>  <b>b: Pitch dia.: 75 mm (2.95 in)</b>  <b>Pin dia.: 12 mm (0.47 in)</b></p>	RS BT HA
ST33290001 (J25810-A) Puller	 <p>Removing center case oil seal          Removing rear oil seal  <b>a: 250 mm (9.84 in)</b>  <b>b: 160 mm (6.30 in)</b></p>	SC EL IDX




# PREPARATION

## Special Service Tools (Cont'd)

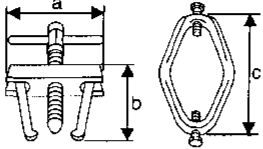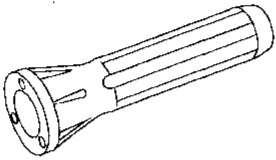Tool number (Kent-Moore No.) Tool name	Description
ST33051001 (J22888) Puller	<div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>Removing companion flange</p> <p><b>a: 135 mm (5.31 in)</b></p> <p><b>b: 100 mm (3.94 in)</b></p> <p><b>c: 170 mm (6.69 in)</b></p> </div> </div> <p style="text-align: left; margin-top: 10px;">NT670</p>
(J35864) Drift	<div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>Installing oil seal</p> </div> </div> <p style="text-align: left; margin-top: 10px;">NT671</p>


## Commercial Service Tools

NBTF0005

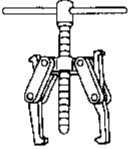Tool name	Description
Puller	<div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>Removing companion flange, clutch gear and mainshaft gear bearing</p> </div> </div> <p style="text-align: left; margin-top: 10px;">NT077</p>

## Cross-sectional View

NBTF0006

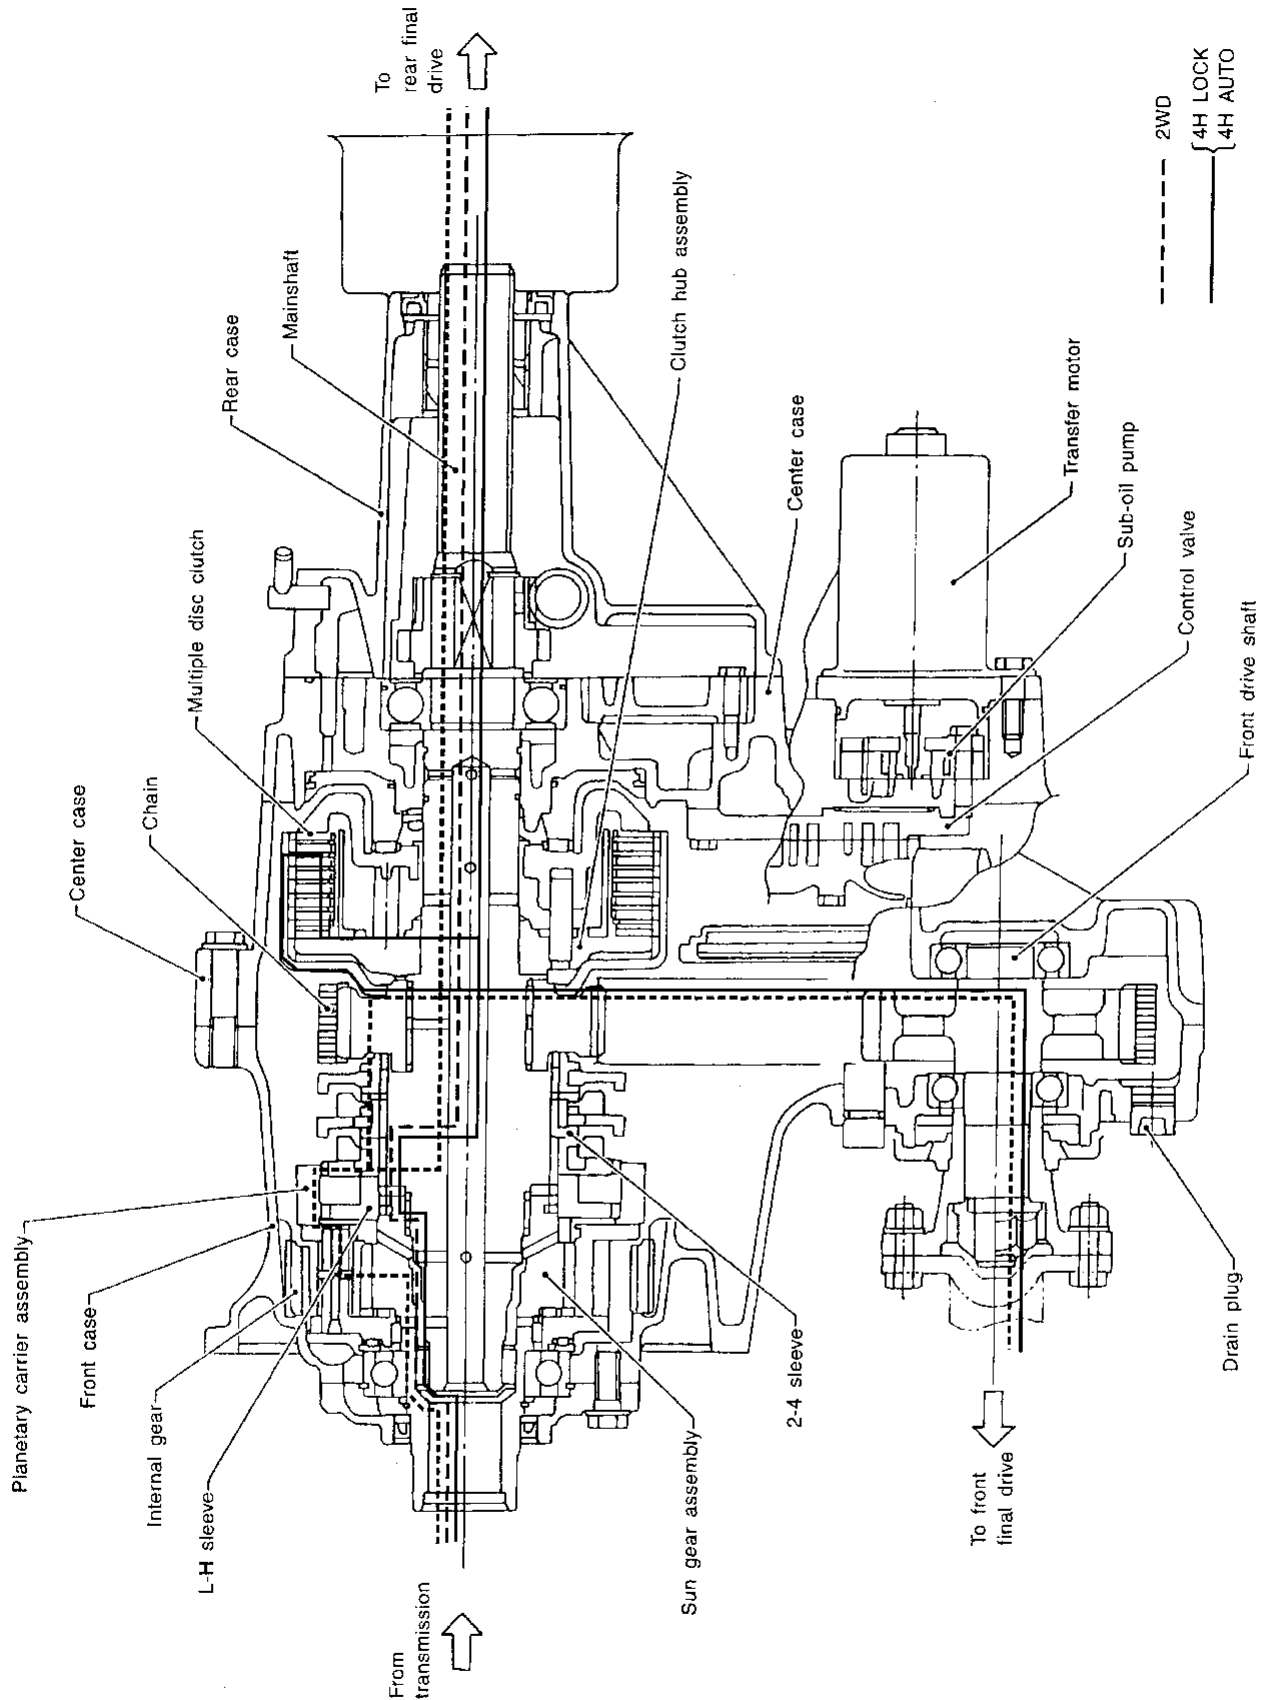

- GI
- MA
- EM
- LC
- EC
- FE
- AT
- TF**
- PD
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- LE
- IDX


SMT953CA

# ALL-MODE 4WD SYSTEM

Control System

NBTF0007


## Control System

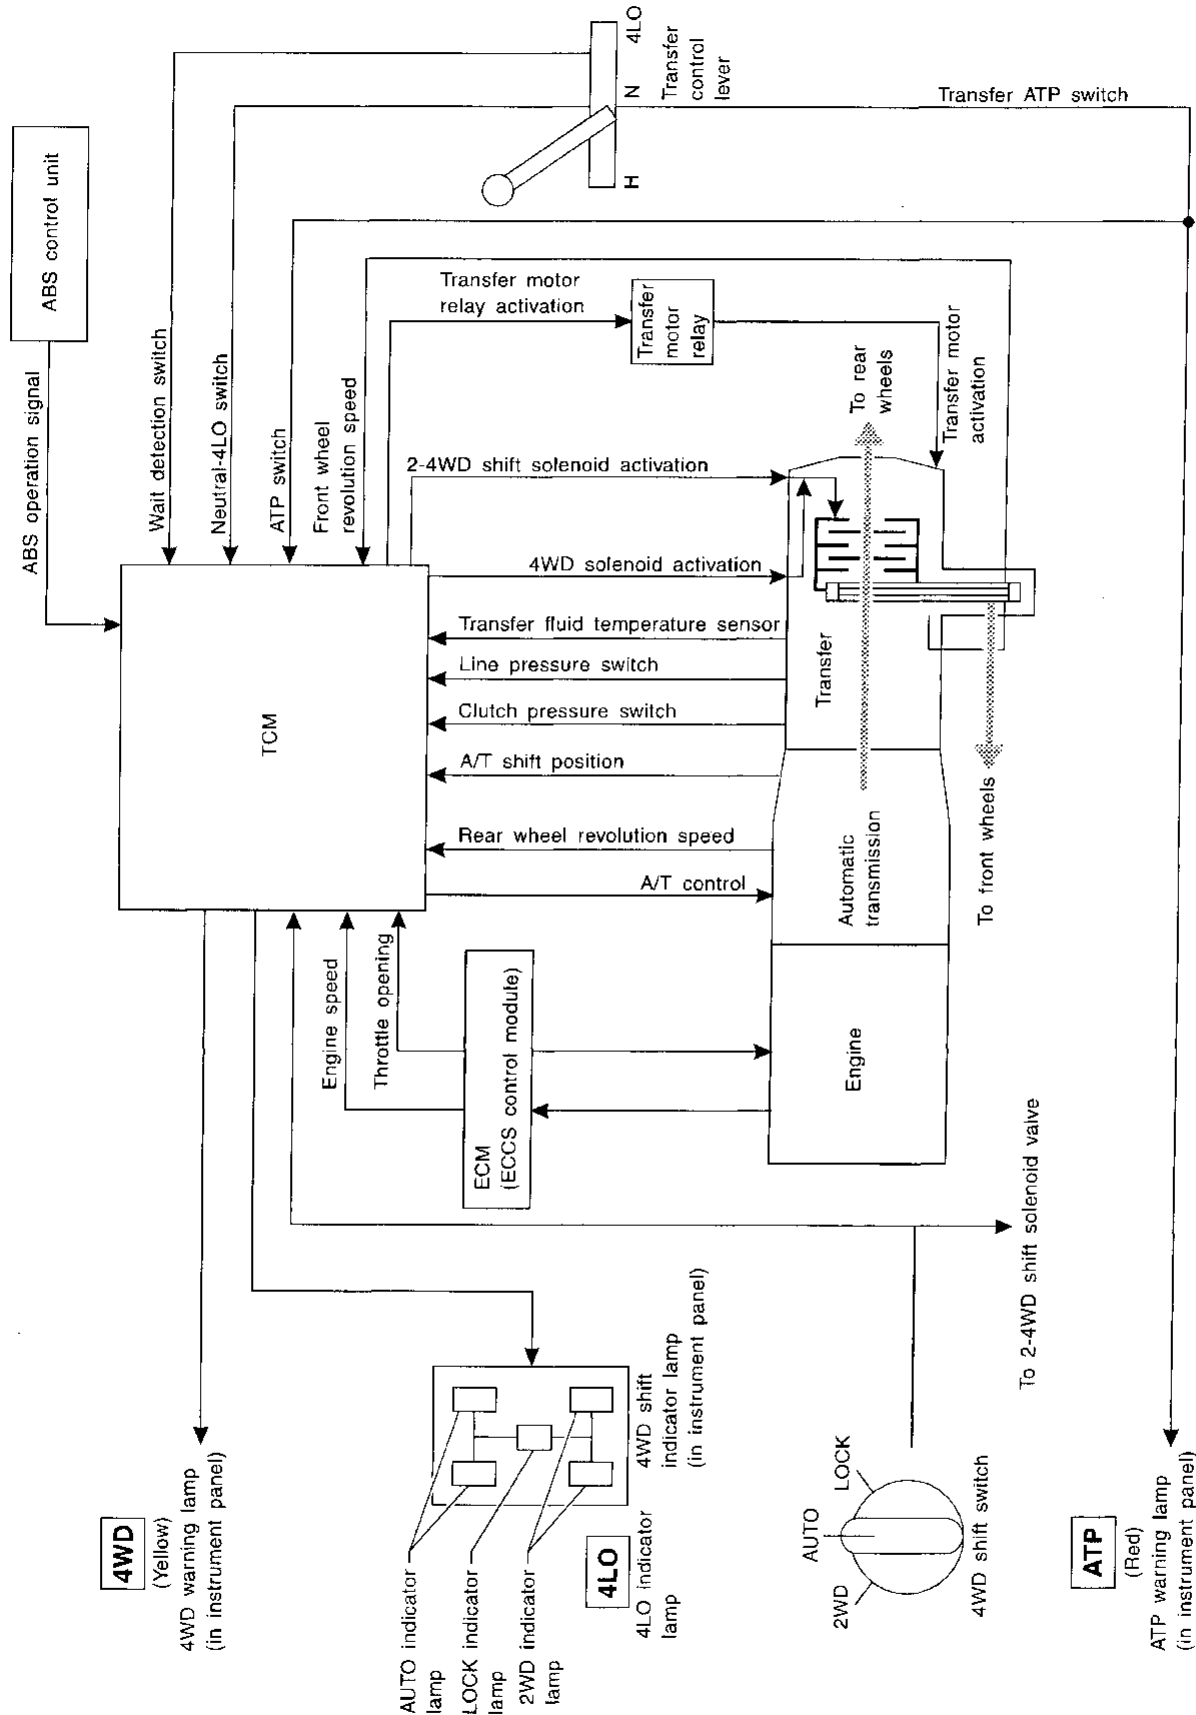

SMT044DA


## ALL-MODE 4WD TRANSFER BASIC CONTROL

NBTF0007S01

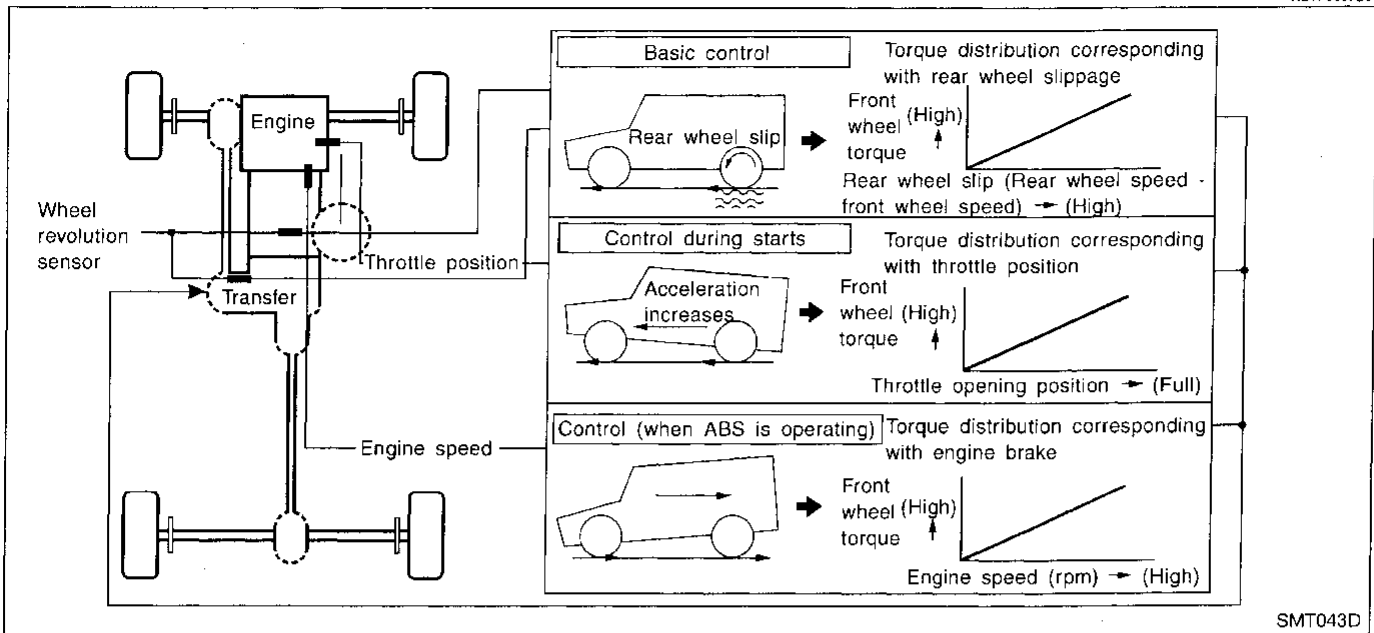

## HYDRAULIC CONTROL CIRCUITS

NBTF0007S02

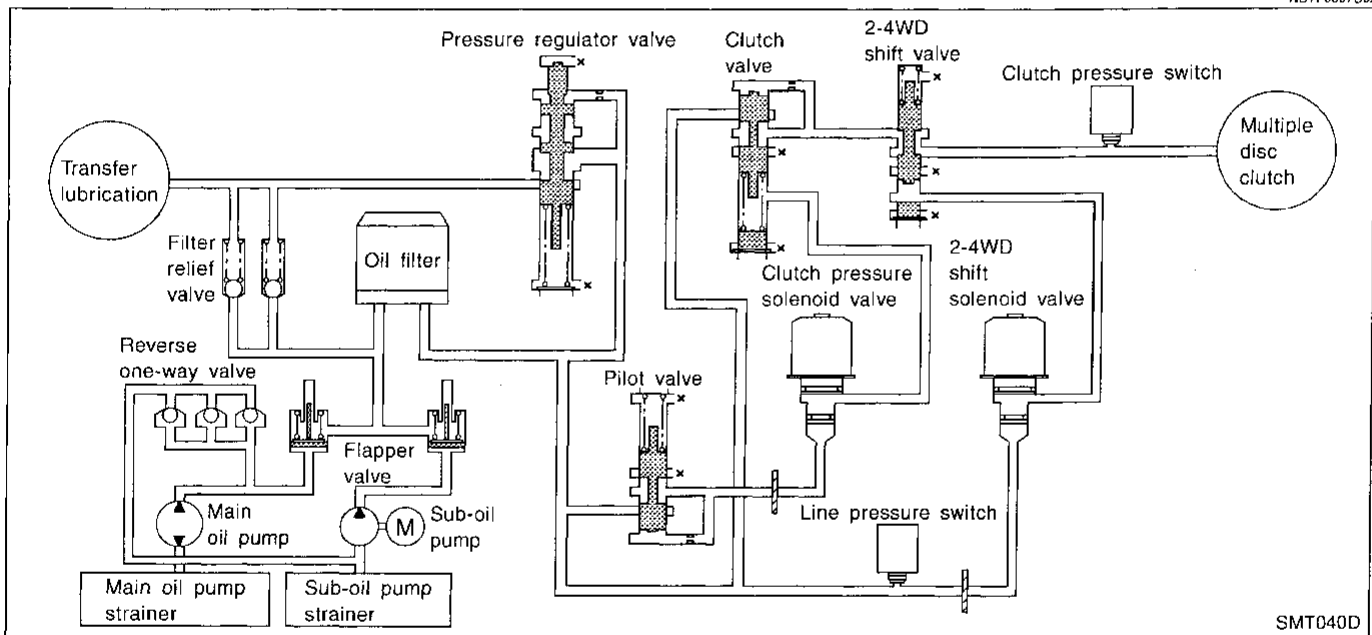

## OUTLINE

NBTF0007S03

All-mode 4WD transfer and A/T are controlled by the same control unit and sensors.

If a malfunction occurs in the all-mode 4WD system, the 4WD warning lamp lights up to indicate the system malfunction. There are two ways to identify the cause of the malfunction.


- 1) Performing the self-diagnosis. (The 4WD warning lamp will indicate what kind of malfunction has occurred by flickering.)
- 2) Performing diagnosis using CONSULT.

# ALL-MODE 4WD SYSTEM

Control System (Cont'd)

## CONTROL SYSTEM DIAGRAM

NBTF0007S04

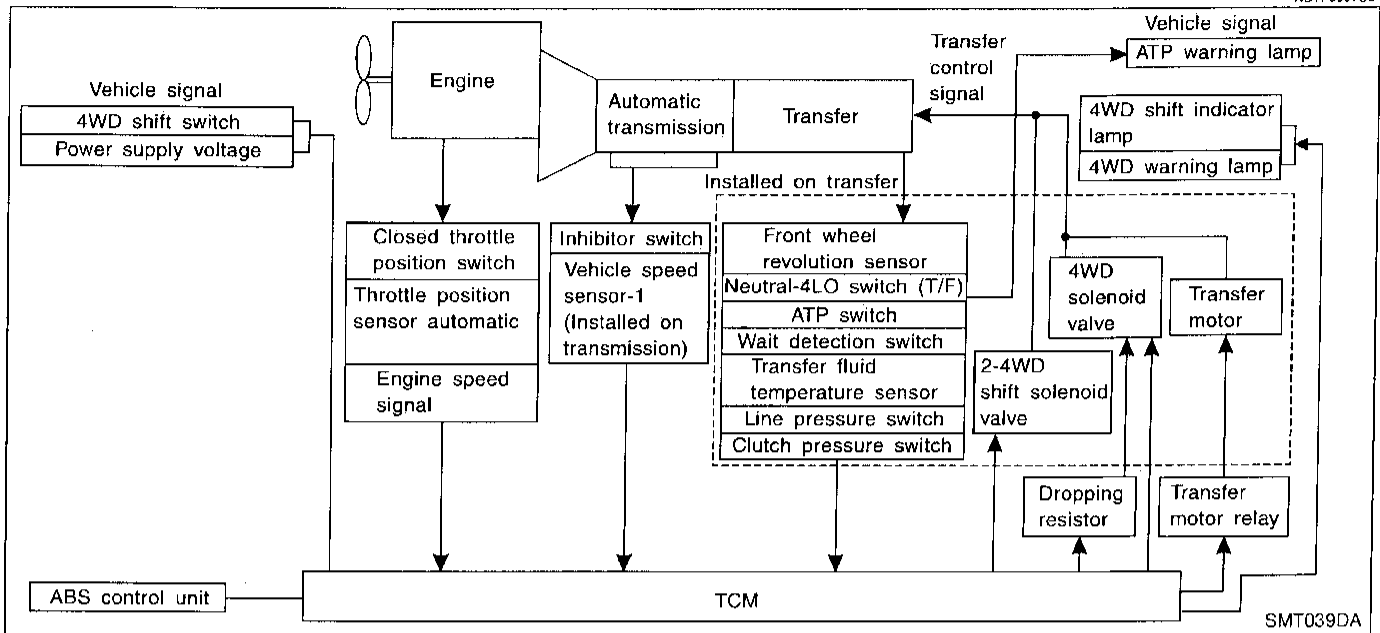

## INDICATIONS OF 4WD WARNING LAMP



NBTF0007S05

Condition	Content	4WD warning lamp
During self-diagnosis	Indicates the malfunction position by number of flickers.	Flickers at malfunction mode.
Lamp check*	Checks the lamp by turning ON during engine starting. After engine starts, it turns OFF if there are no malfunctions.	ON
Malfunction in 4WD system*	Turns ON to indicate malfunction. When ignition switch is turned to "OFF" or the malfunction is corrected, it turns OFF.	ON
When vehicle is driven with different diameters of front and rear tires	Flickers once every 2 seconds. Turns OFF when ignition switch is "OFF".	Flickers once every 2 seconds.
High fluid temperature in transfer unit	When fluid temperature is high or fluid temperature sensor circuit is shorted, it flickers twice every second. It turns OFF when fluid temperature becomes normal.	Flickers twice a second.
Other than above (System is normal.)	Lamp is OFF.	OFF

\*: When 4WD warning lamp is ON, all the 4WD shift indicator lamps turn OFF.

NBTF0008

## Location of Electrical Parts

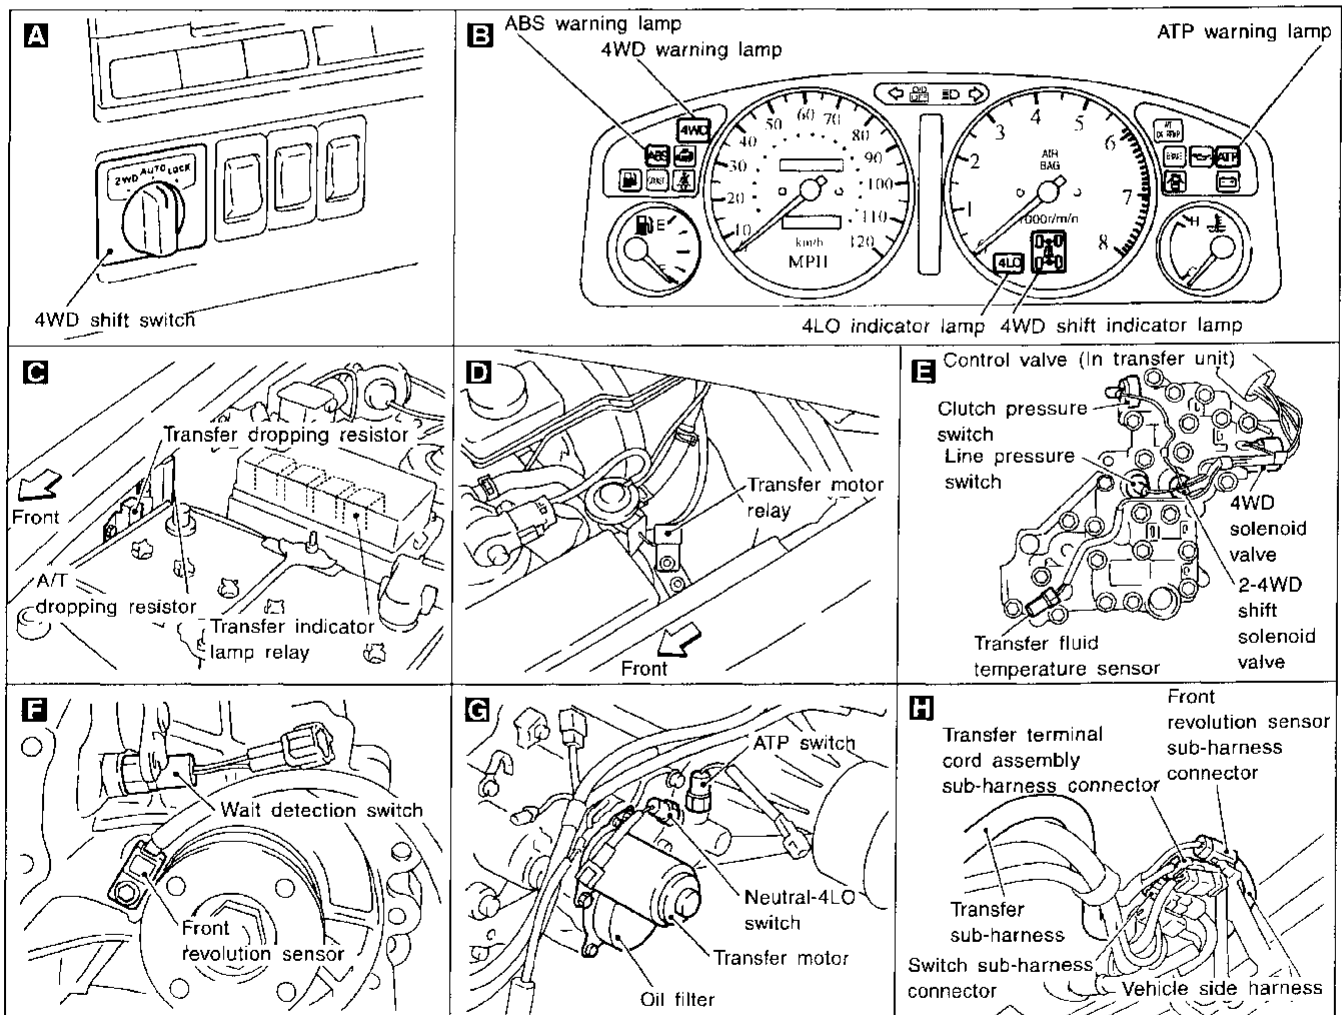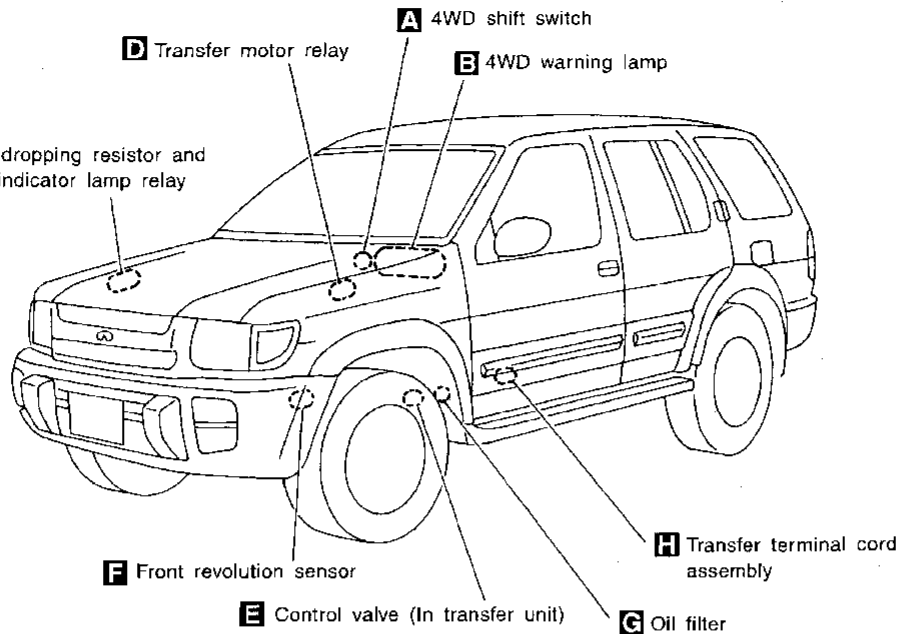

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX


SMT211D

# ALL-MODE 4WD SYSTEM

Circuit Diagram for Quick Pinpoint Check

## Circuit Diagram for Quick Pinpoint Check

NBTF009

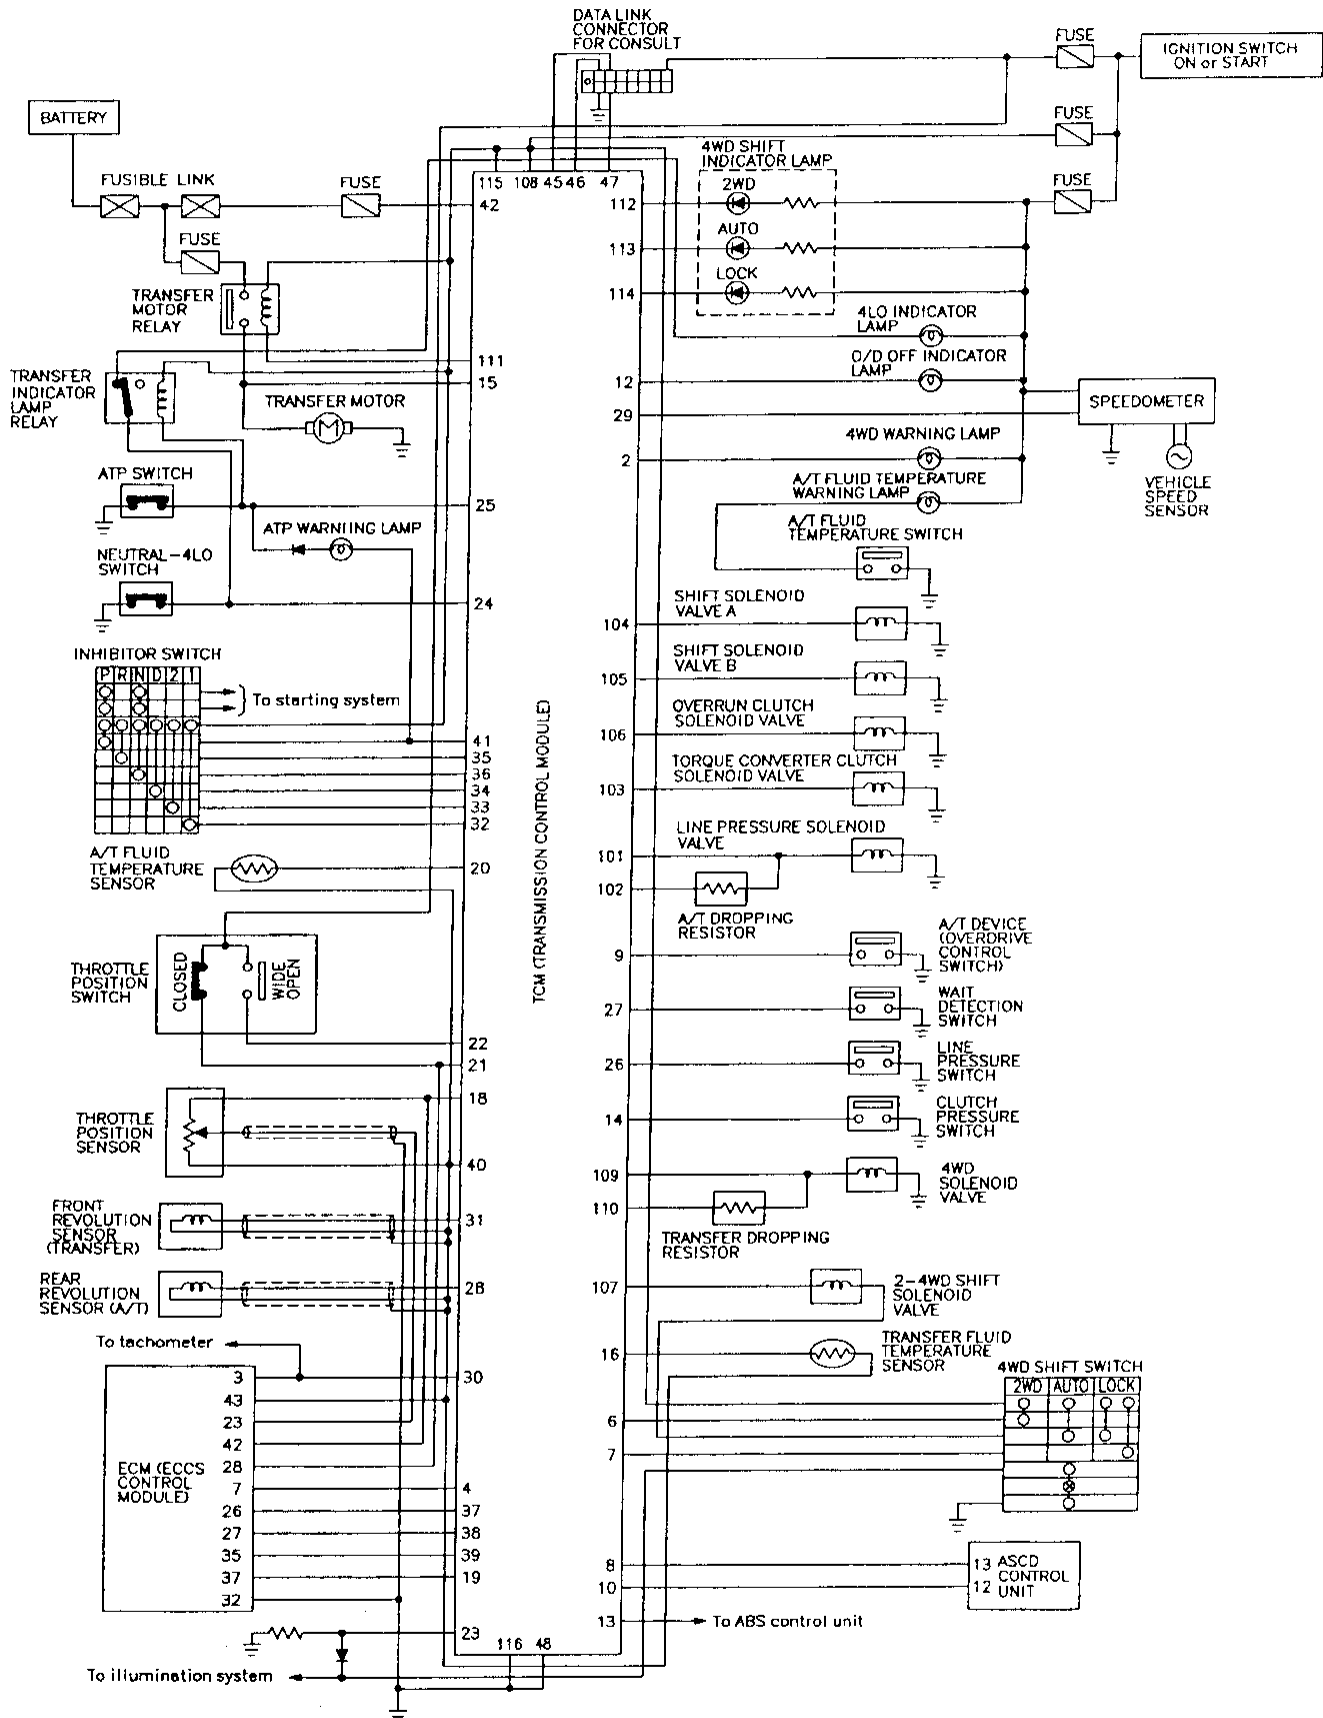

MTF014A

Wiring Diagram — TF —

NBTF0010

TF-T/F-01

CI

MA

EM

LC

EC

FE

AT

**TF**

PD

AX

SU

BR

ST

RS





BT

HA

SC

EL

DX

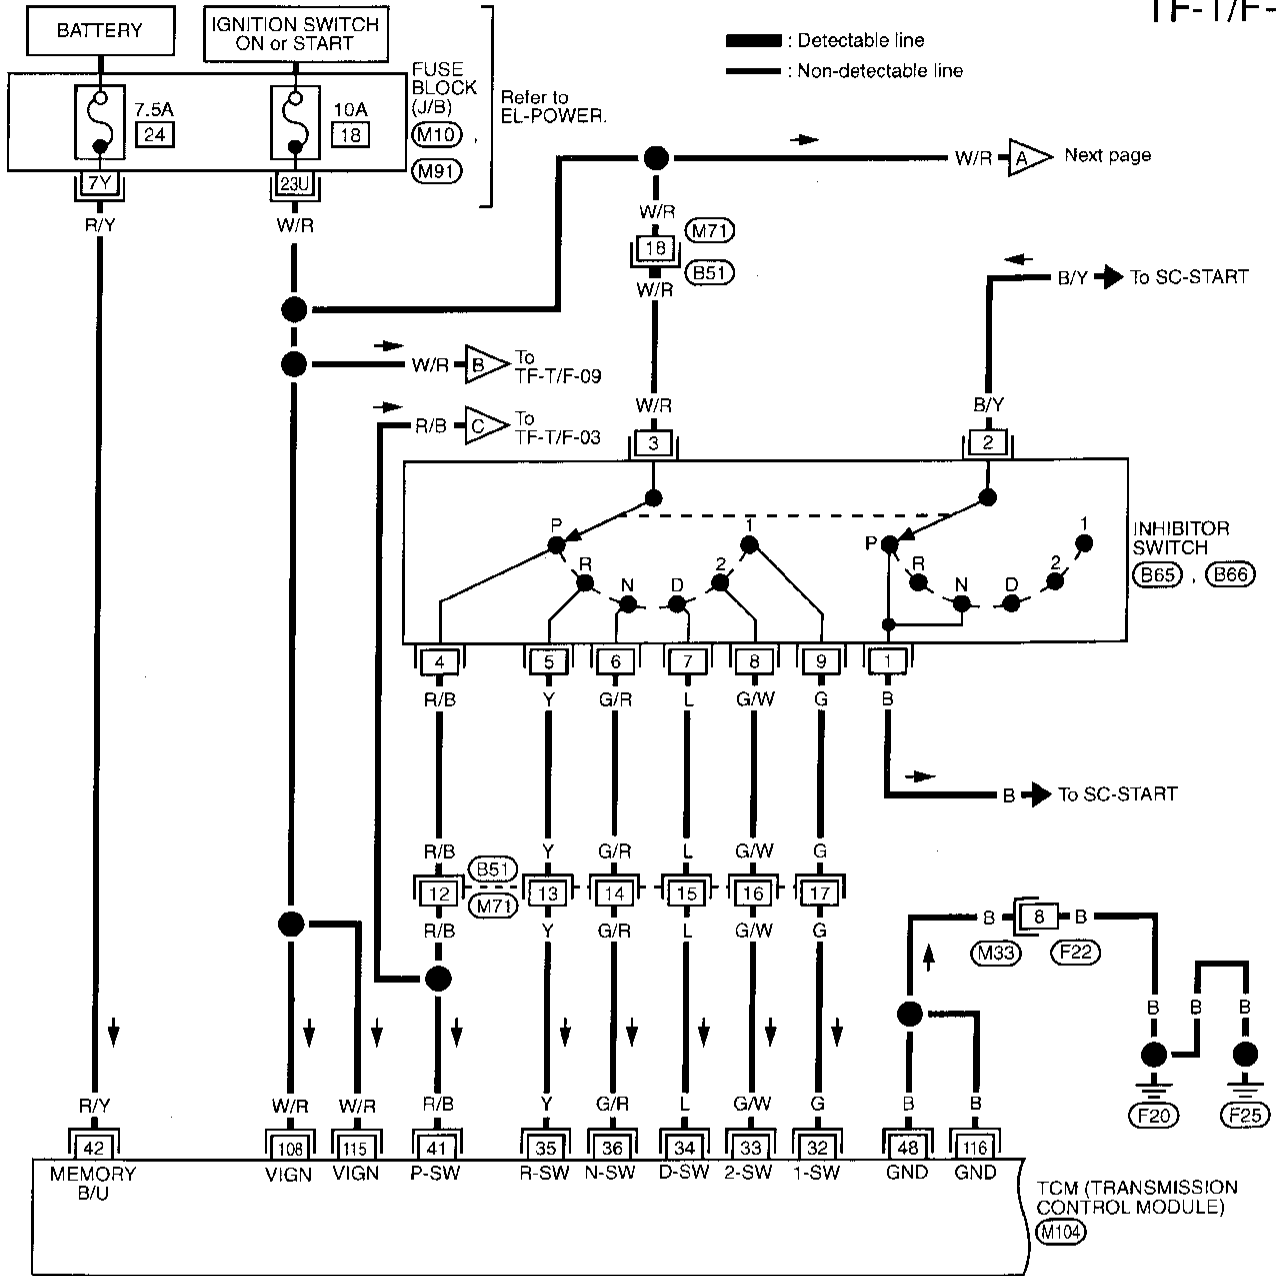

Refer to last page (Foldout page).

(M10)

(M9)










# ALL-MODE 4WD SYSTEM

Wiring Diagram — TF — (Cont'd)

TF-T/F-03 GI

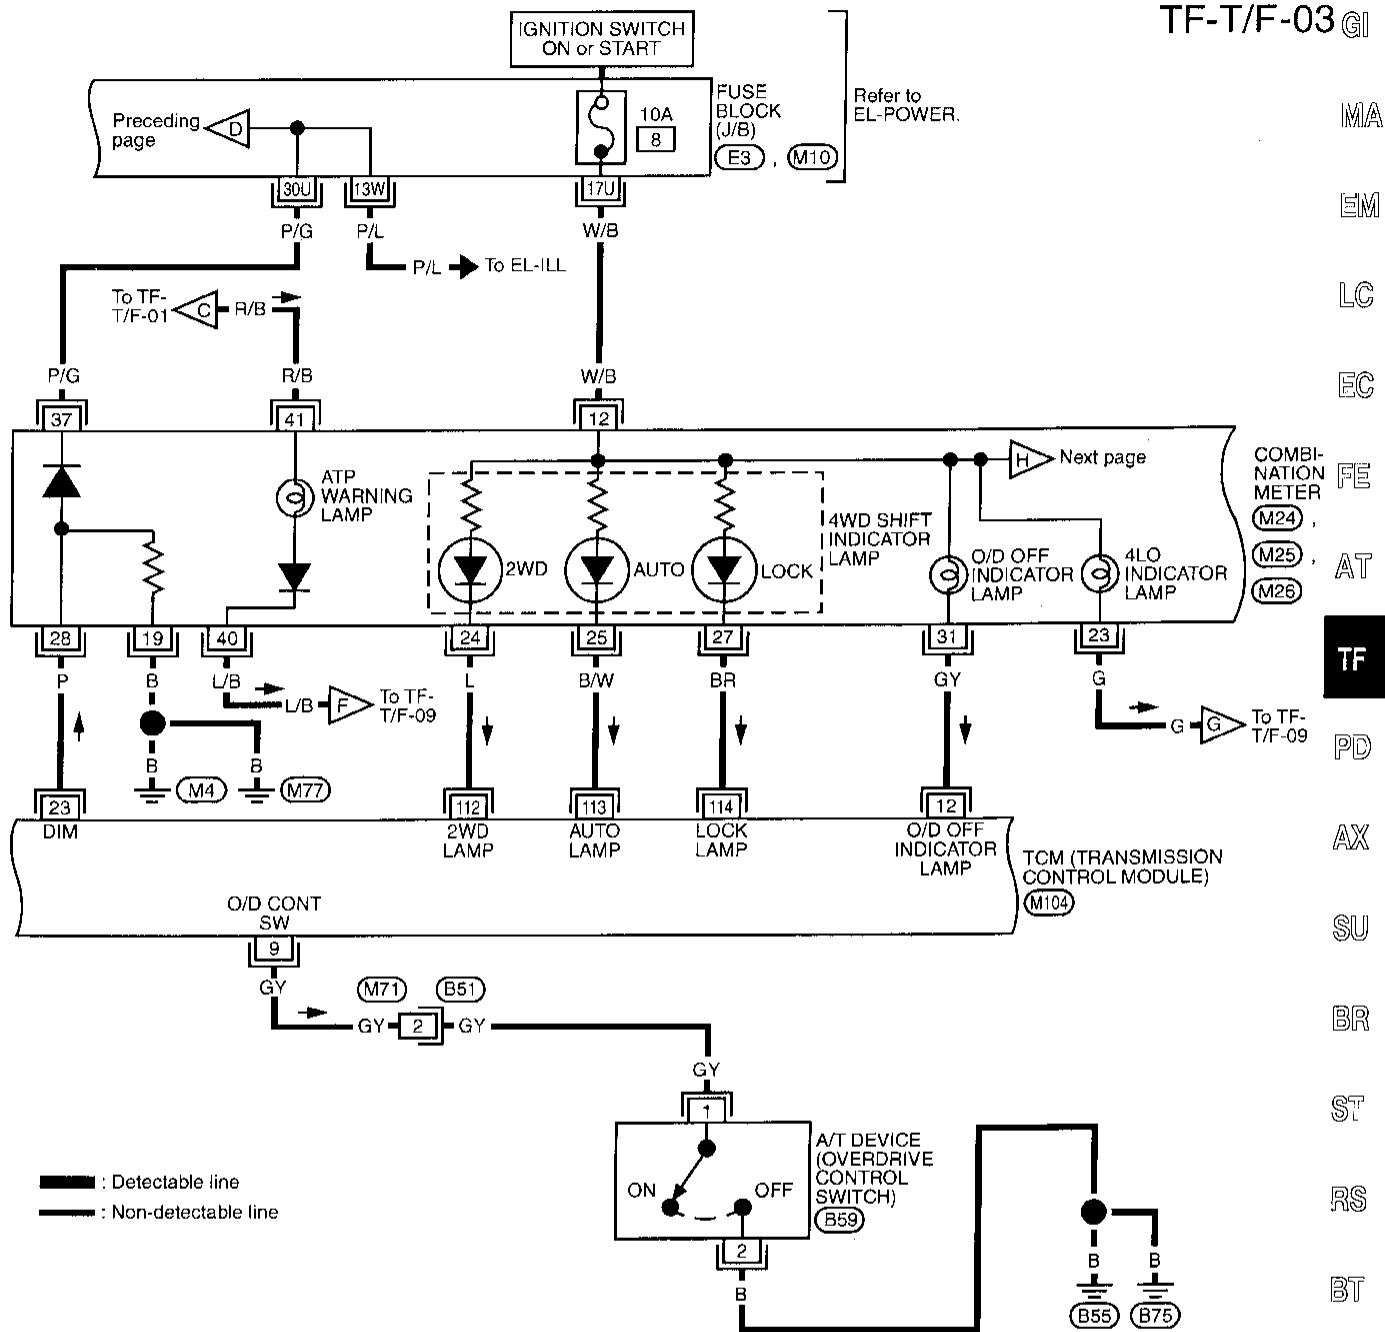

— : Detectable line  
 - - - : Non-detectable line



Refer to last page (Foldout page).  
 M10, E3






MA  
 EM  
 LC  
 EC  
 FE  
 AT  
**TF**  
 PD  
 AX  
 SU  
 BR  
 ST  
 RS  
 BT  
 HA  
 SC  
 EL  
 DX

MTF017A

# ALL-MODE 4WD SYSTEM

Wiring Diagram — TF — (Cont'd)

TF-T/F-04

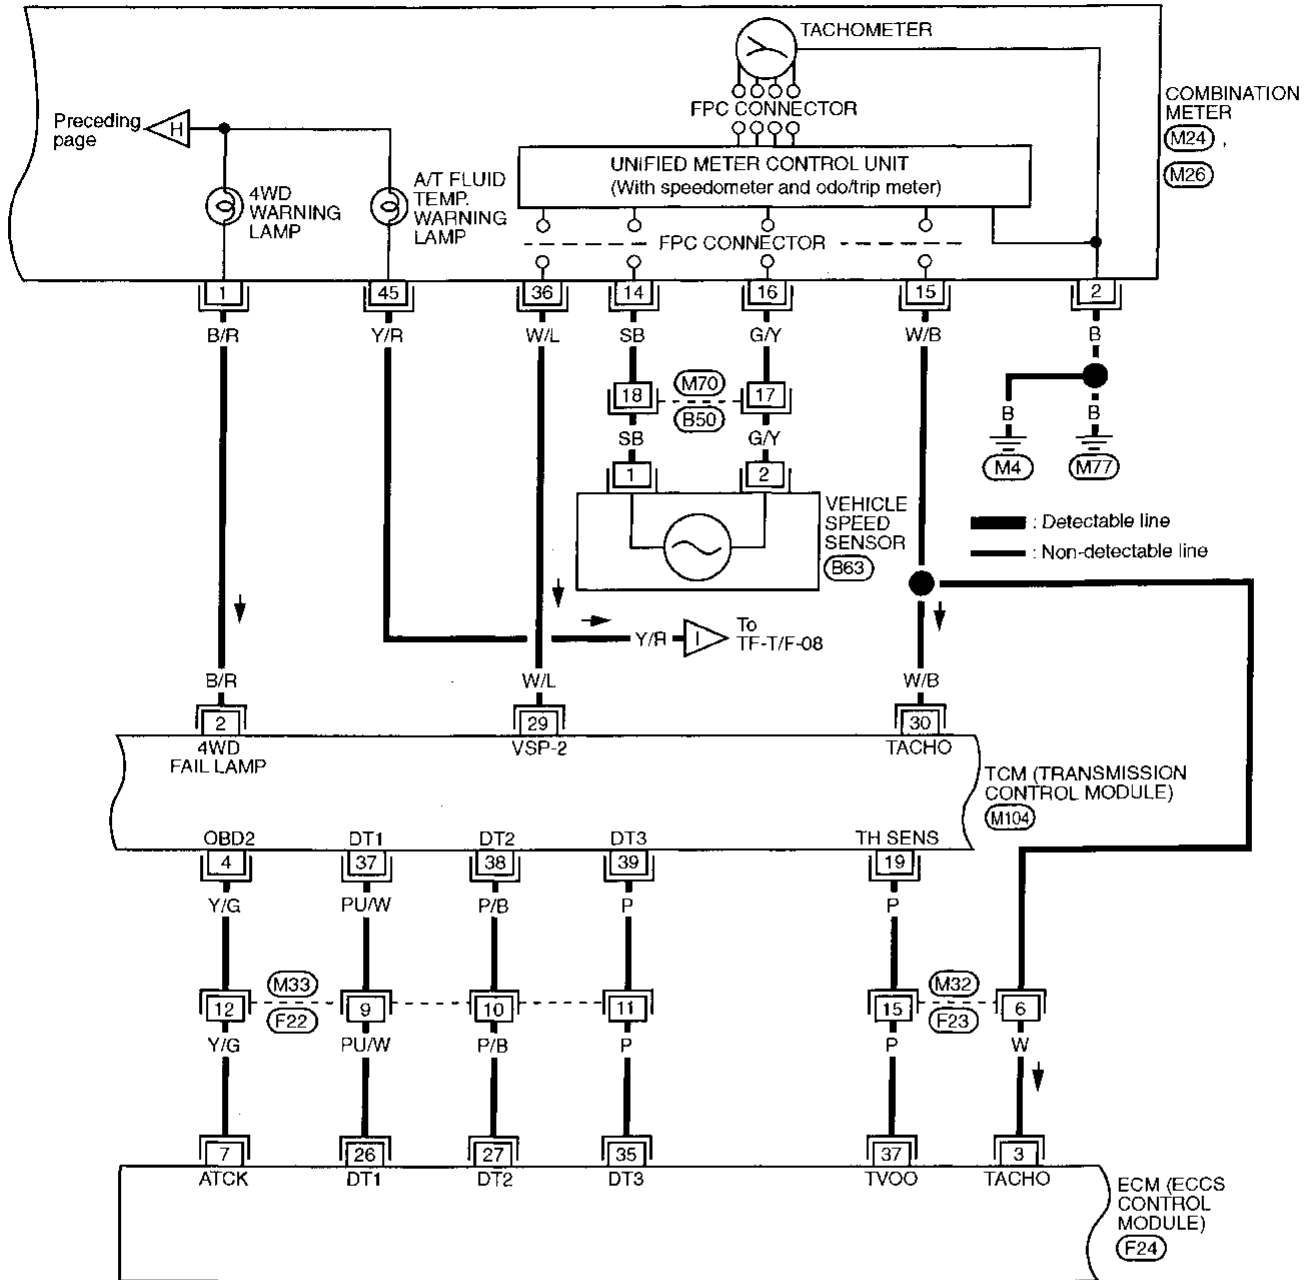

Refer to last page (Foldout page).

F24









MTF018A

# ALL-MODE 4WD SYSTEM

Wiring Diagram — TF — (Cont'd)

TF-T/F-05

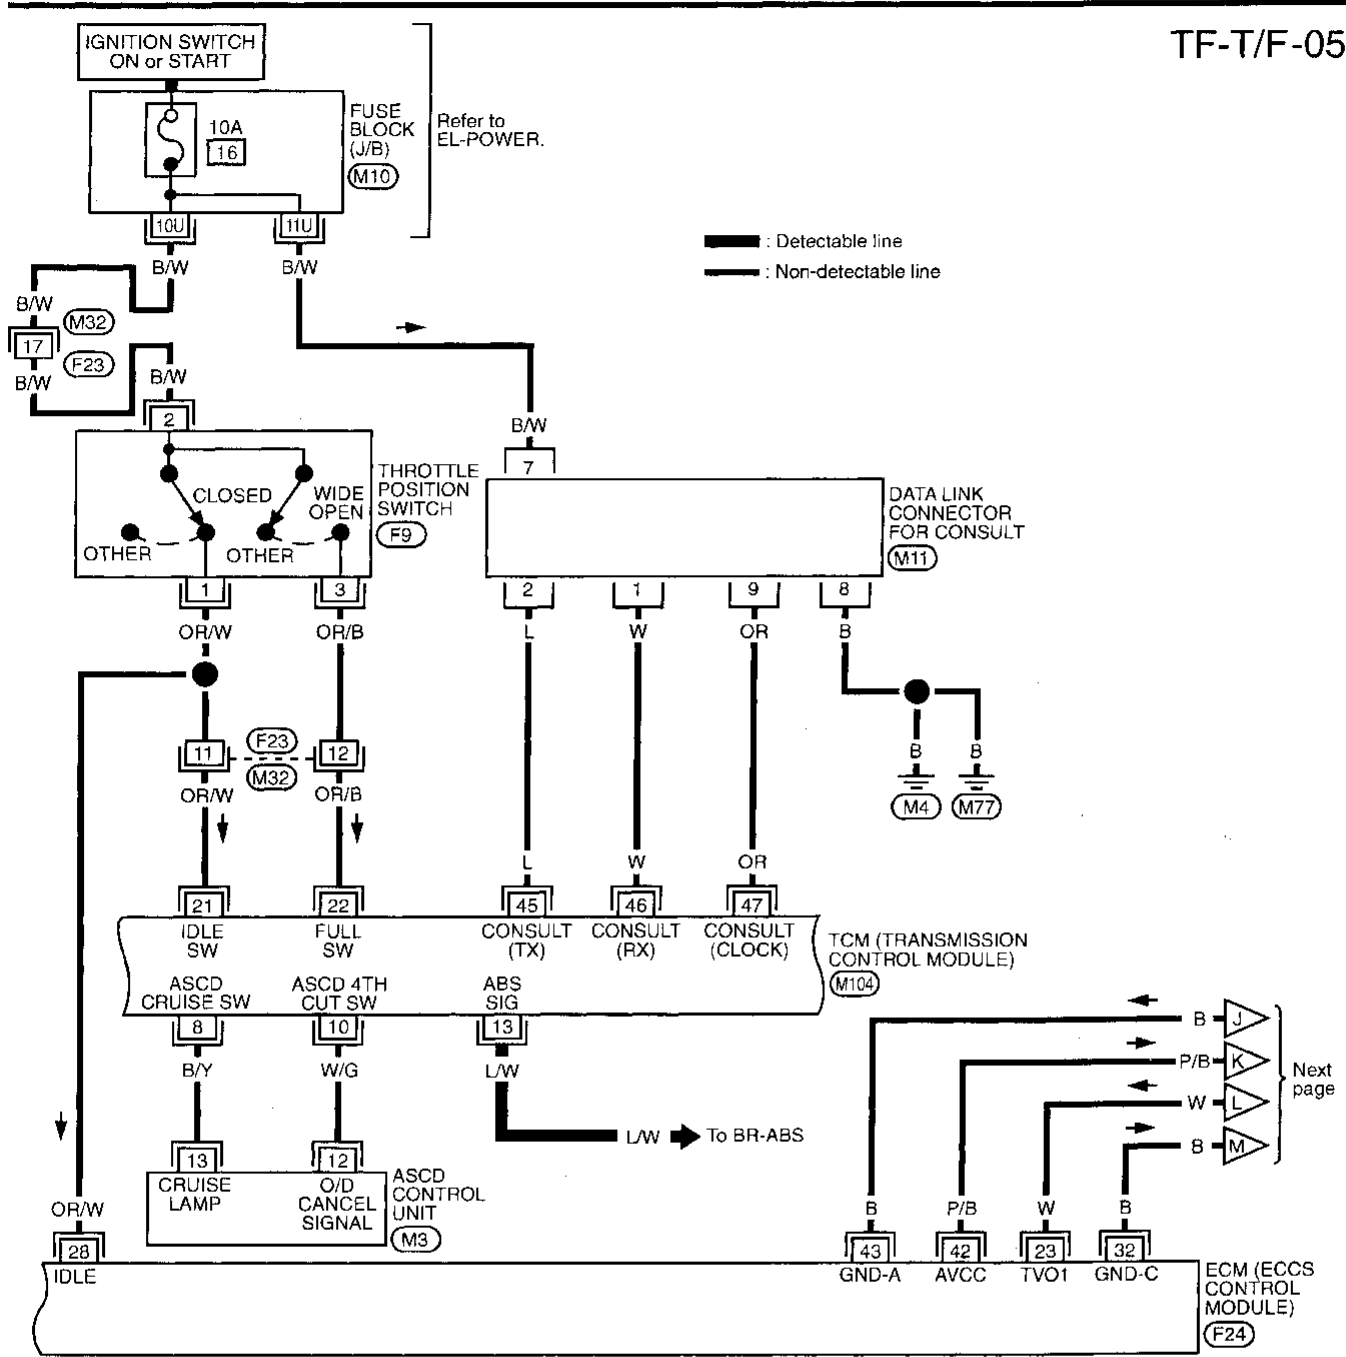

Refer to last page (Foldout page).

M10

F24



GI  
MA  
EM  
LC  
EC  
FE  
AT  
**TF**  
PD  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX


MTF019A

# ALL-MODE 4WD SYSTEM


Wiring Diagram — TF — (Cont'd)

TF-T/F-06

TCM  
(TRANSMISSION  
CONTROL  
MODULE)  
(M104)

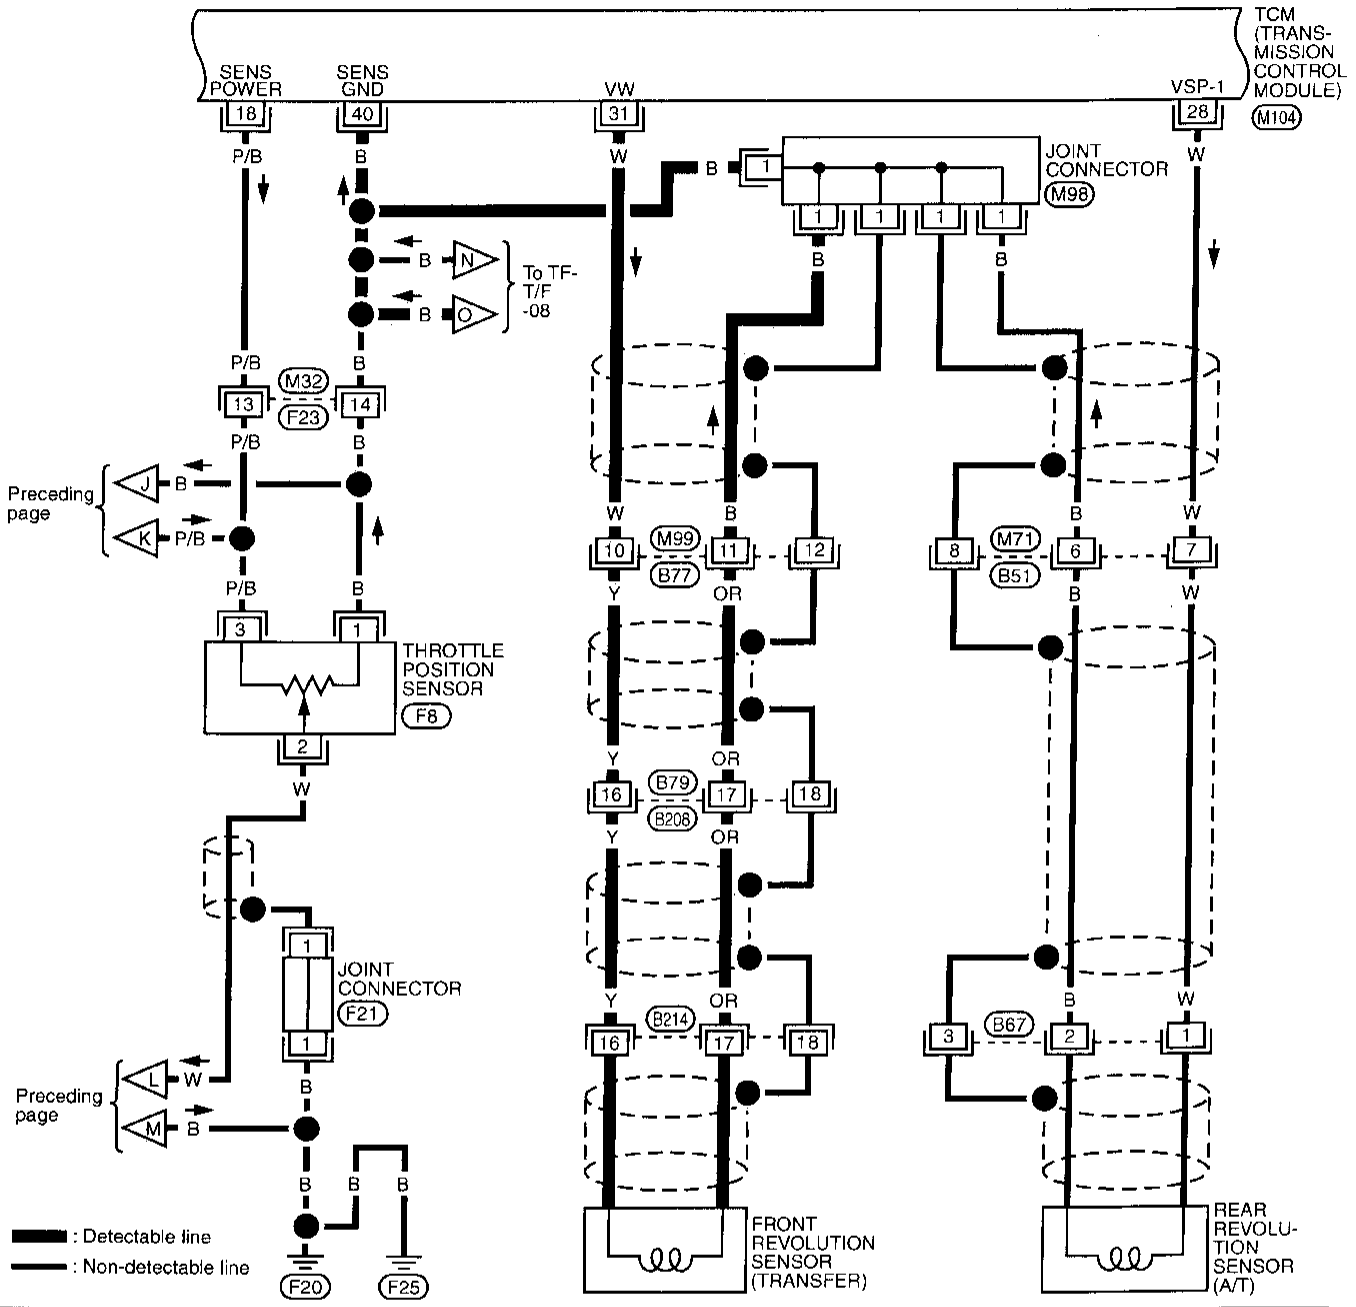

— : Detectable line  
- - - : Non-detectable line

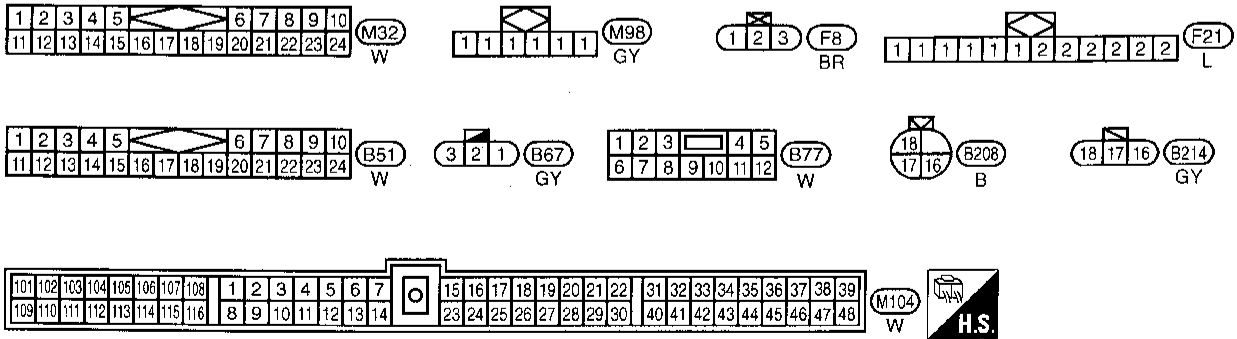





MTF020A

# ALL-MODE 4WD SYSTEM

Wiring Diagram — TF — (Cont'd)

TF-T/F-07

— : Detectable line  
 - - - : Non-detectable line

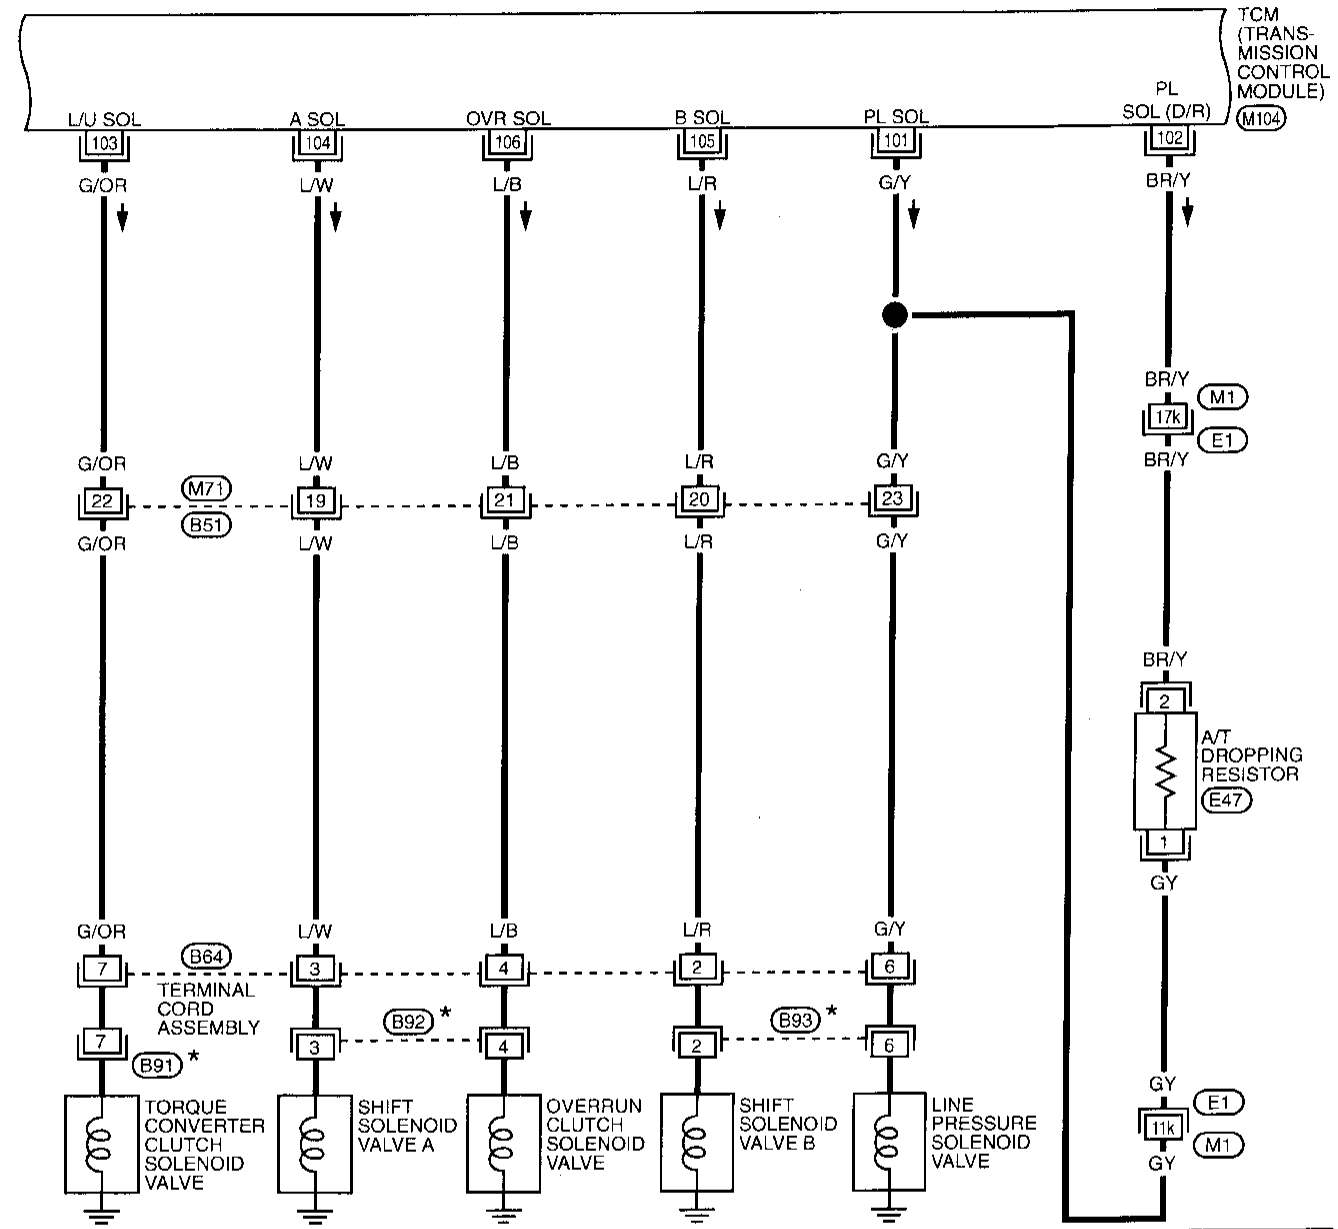

Refer to last page (Foldout page).

(M1), (E1)

\* : This connector is not shown in "HARNESS LAYOUT", EL section.









CI  
 MA  
 EM  
 LC  
 EC  
 FE  
 AT  
**TF**  
 PD  
 AX  
 SU  
 BR  
 ST  
 RS  
 BT  
 HA  
 SC  
 EL  
 DX

MTF021A

# ALL-MODE 4WD SYSTEM

Wiring Diagram — TF — (Cont'd)

TF-T/F-08


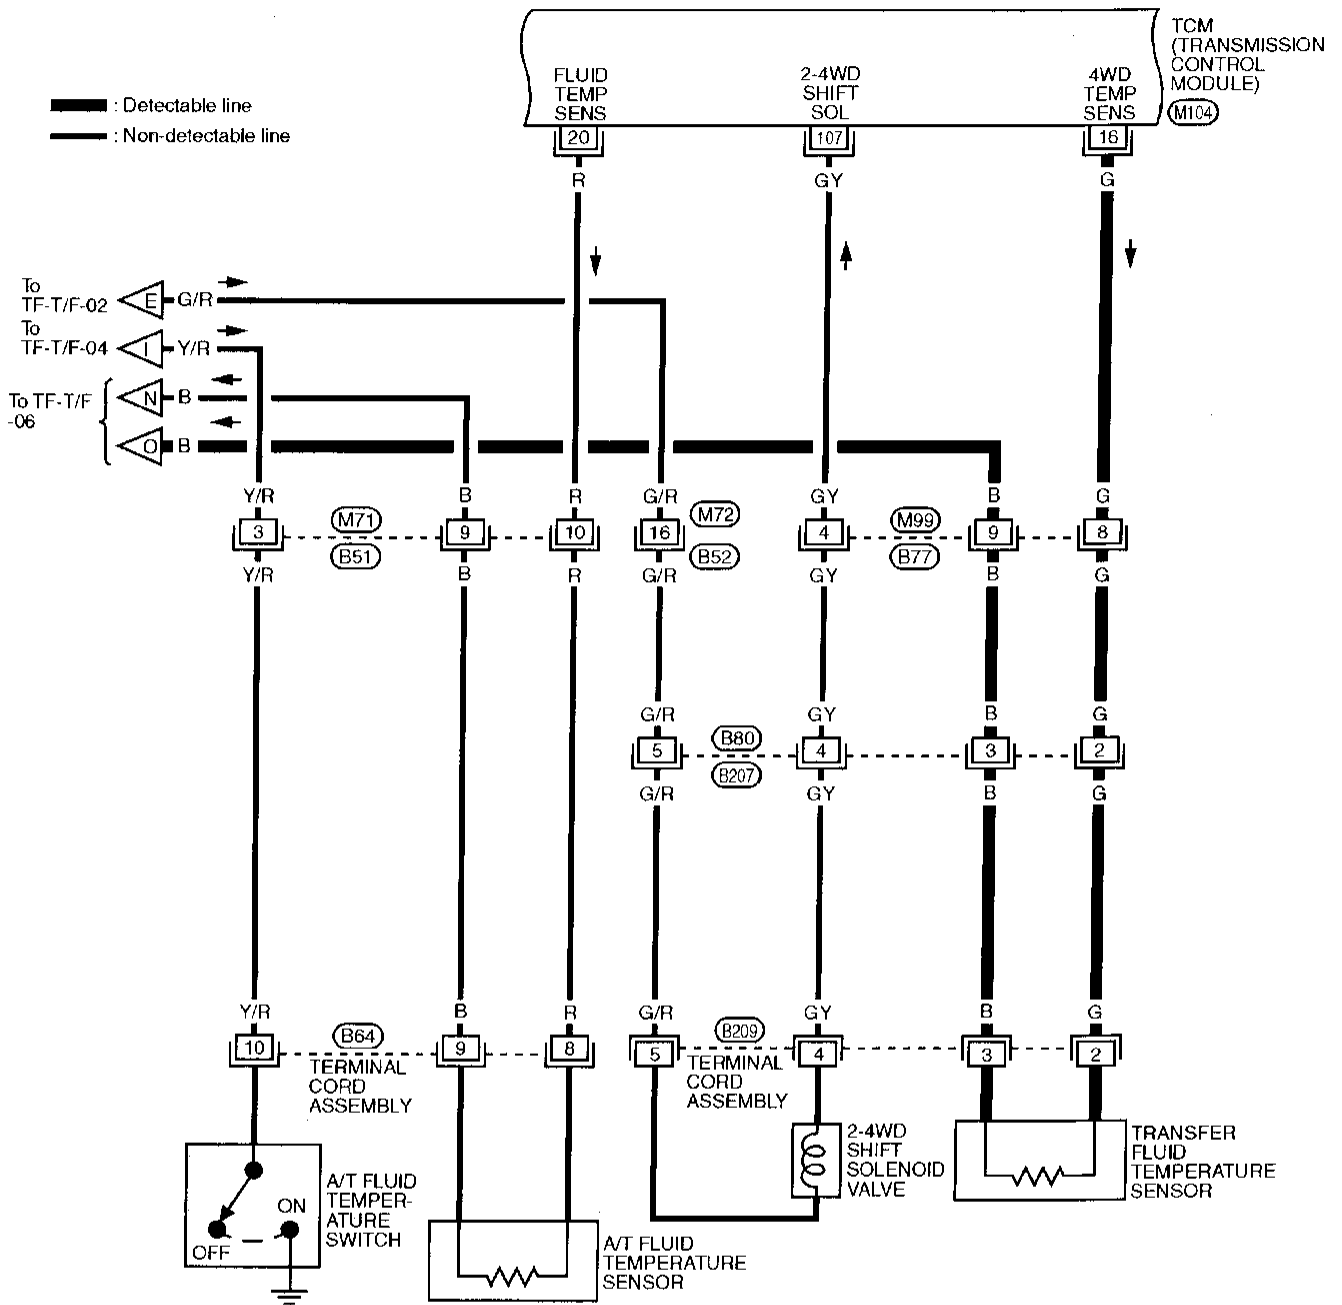


MTF022A

# ALL-MODE 4WD SYSTEM

Wiring Diagram — TF — (Cont'd)

## TF-T/F-09

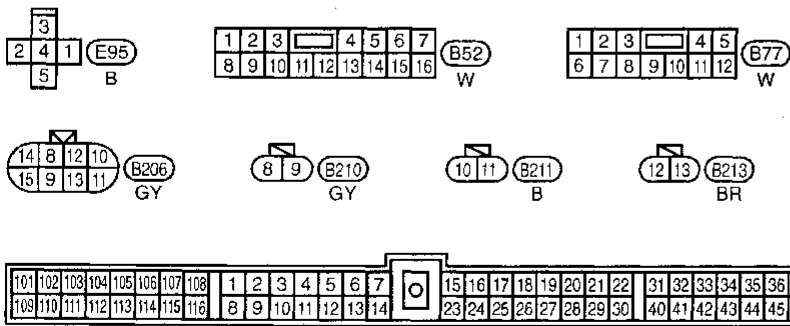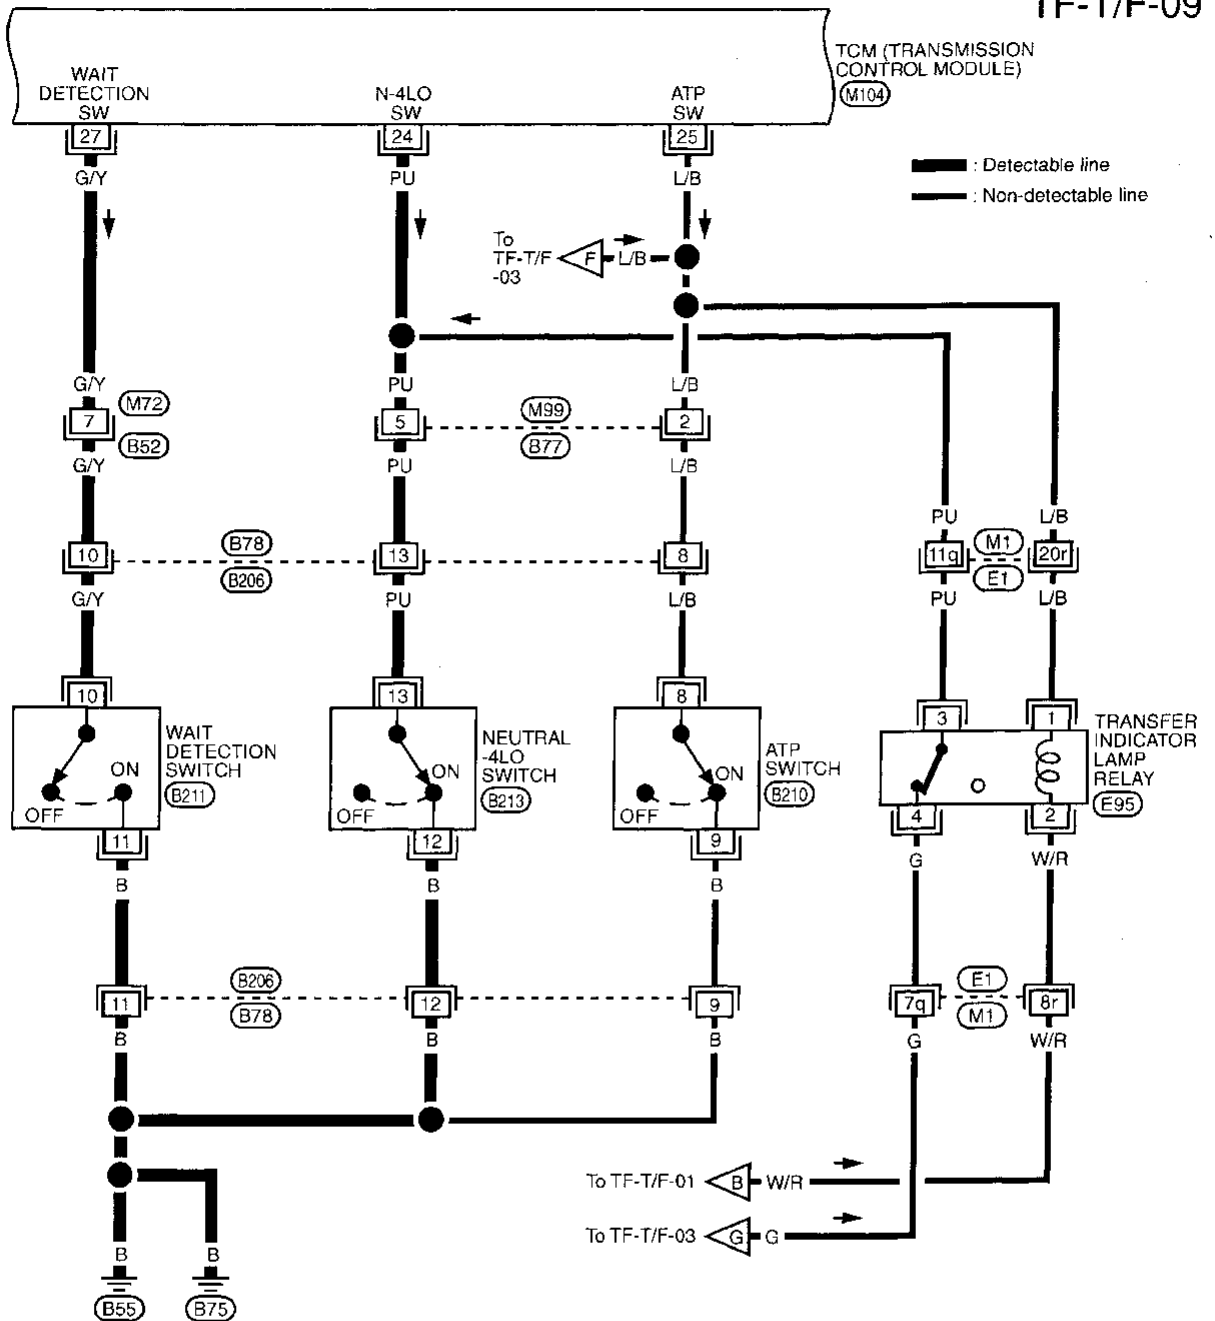

Refer to last page (Foldout page).

(M1) (E1)



MTF023A



# ALL-MODE 4WD SYSTEM

Wiring Diagram — TF — (Cont'd)

TF-T/F-10

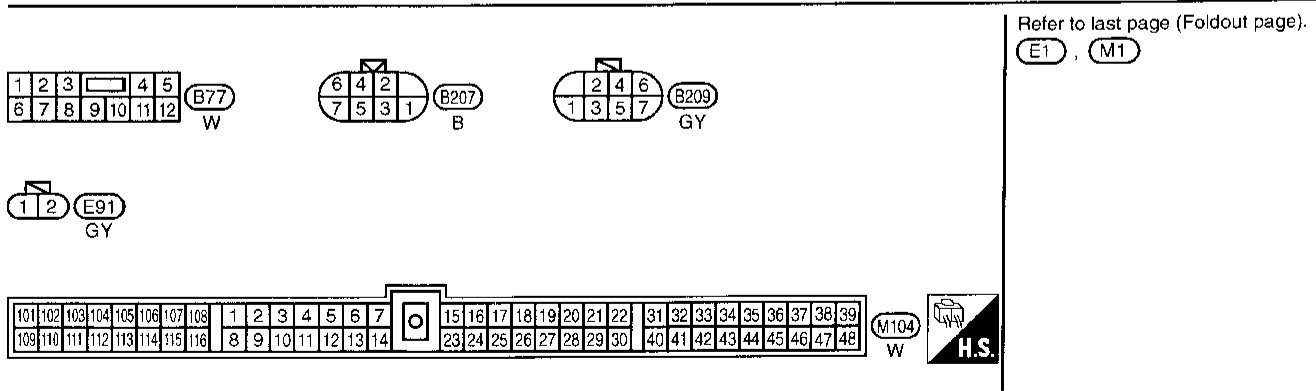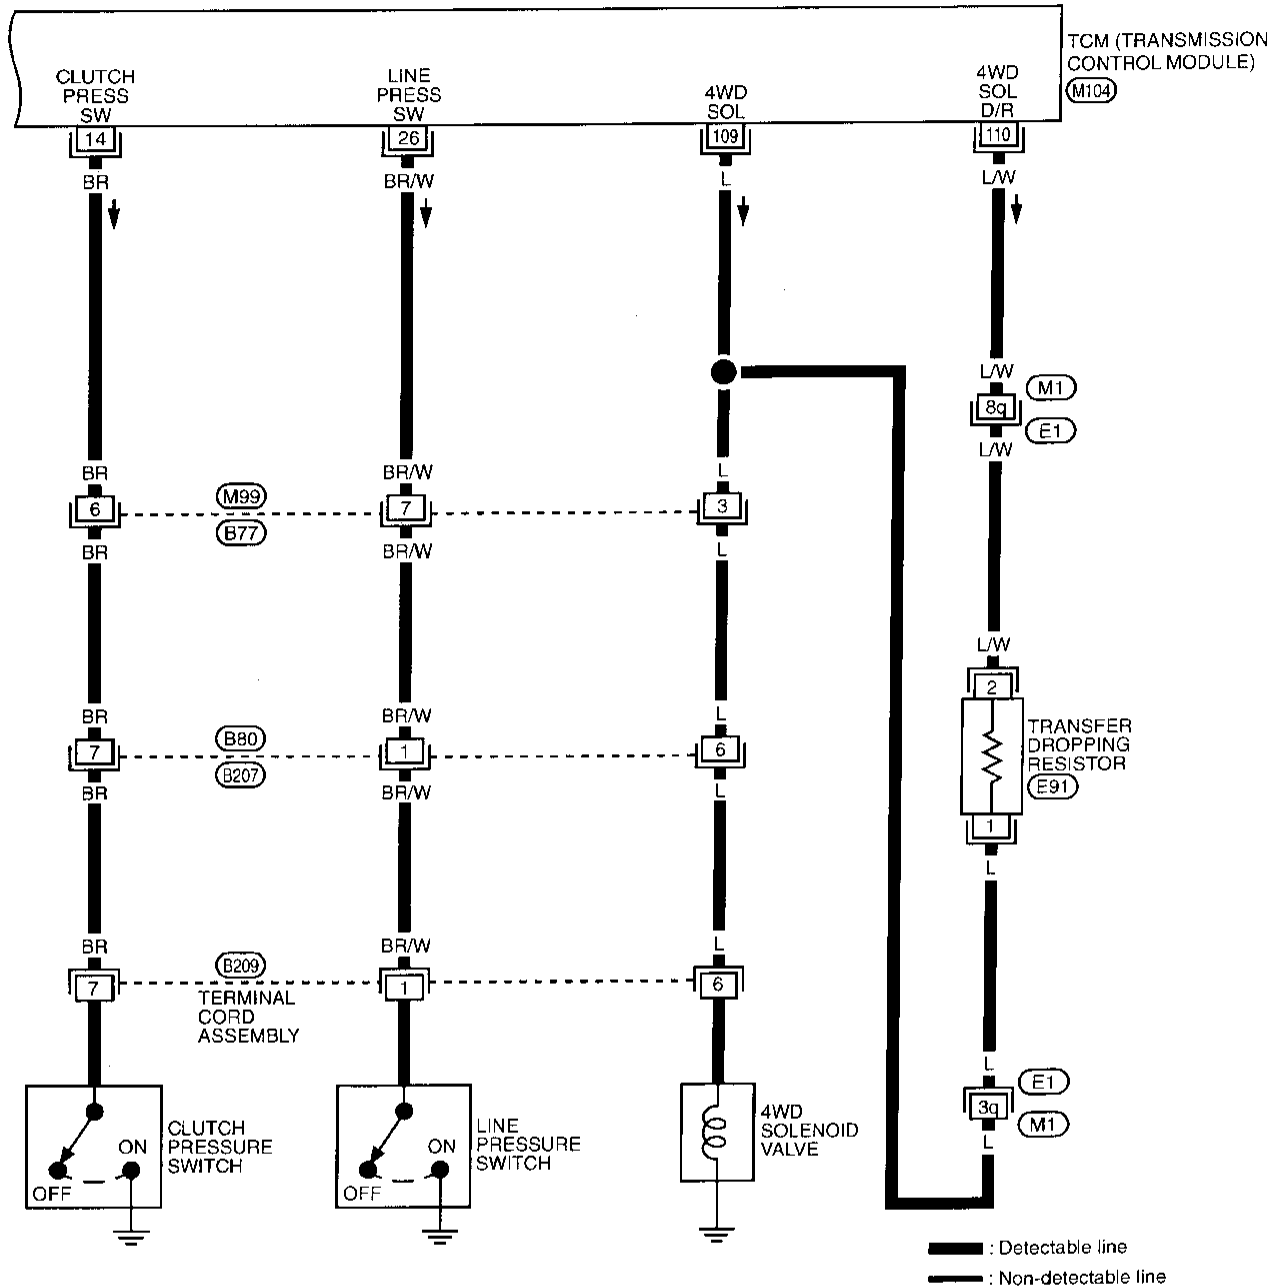

MTF024A

## Trouble Diagnosis without CONSULT

NBTF0011

### DESCRIPTION

NBTF0011S01

If the engine starts when there is something wrong with the all-mode 4WD system, the 4WD warning lamp turns ON or flickers in the combination meter. When the system functions properly, the warning lamp turns ON when the ignition switch is turned to "ON", and it turns OFF after engine starts.

To locate the cause of a problem, start the self-diagnosis function. The 4WD warning lamp in the combination meter will indicate the problem area by flickering according to the self-diagnostic results. As for the details of the 4WD warning lamp flickering patterns, refer to TF-27.

GI

MA

EM

LC

EC

FE

AT

**TF**

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL





IDX

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Trouble Diagnosis without CONSULT (Cont'd)

## SELF-DIAGNOSTIC PROCEDURE

NBTF0011S02

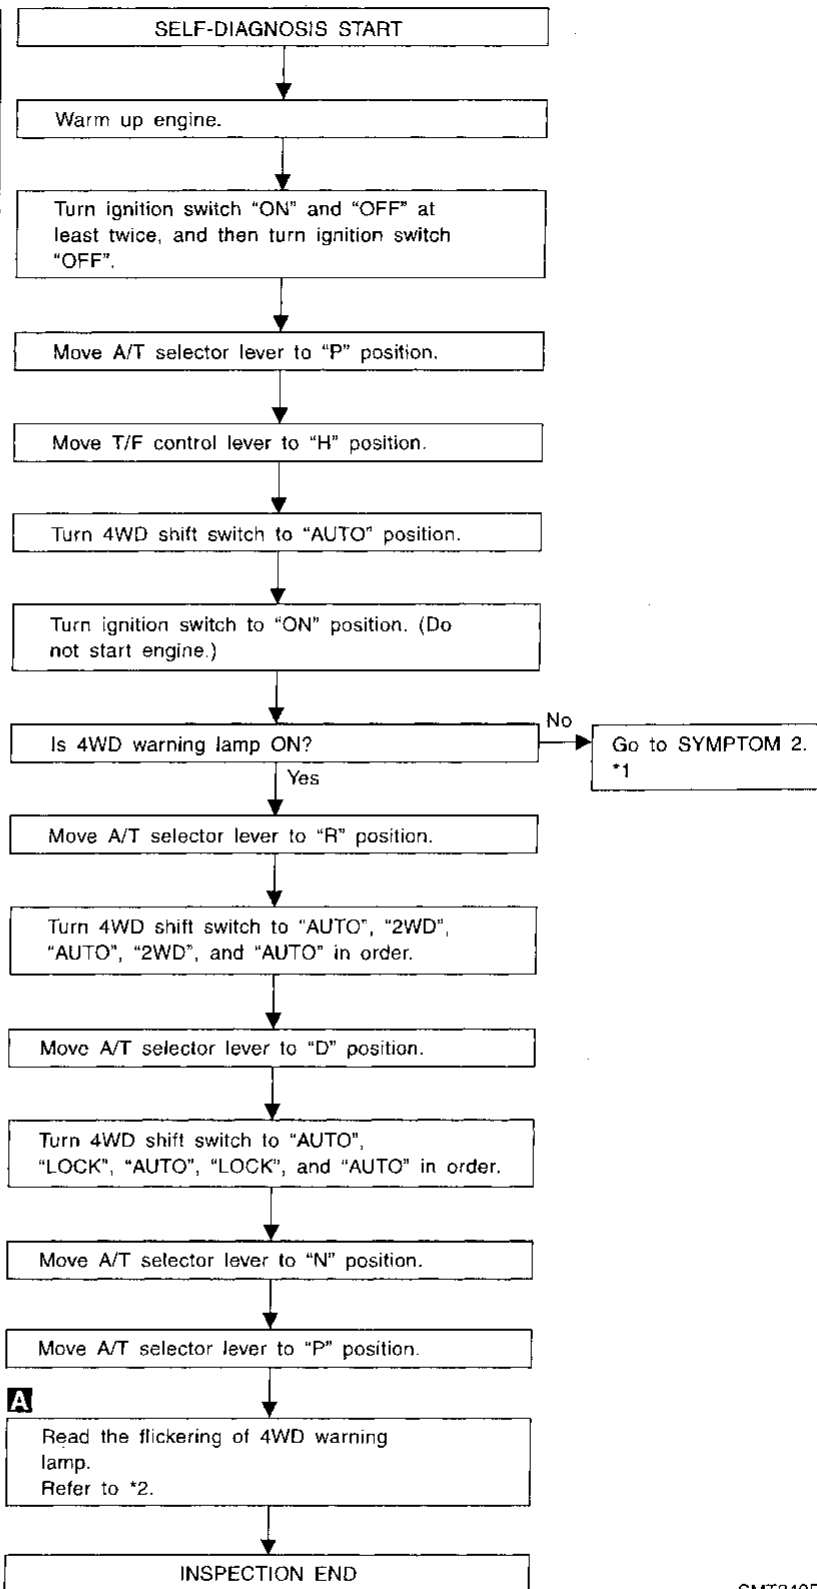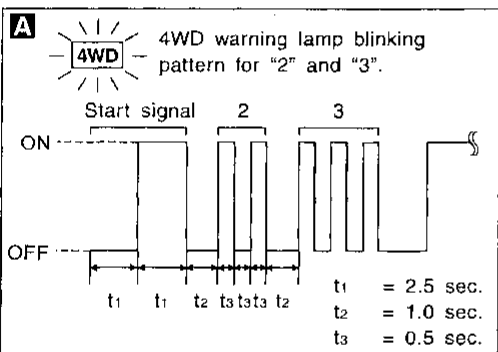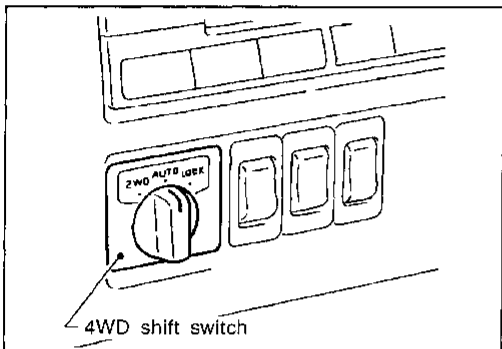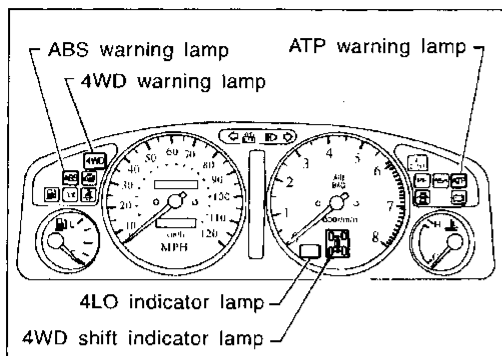

\*1: TF-69

\*2: TF-27

SMT249D

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Trouble Diagnosis without CONSULT (Cont'd)

## INDICATIONS OF 4WD WARNING LAMP


NBTF0011503

Flickering pattern or flickering condition	Malfunction	Check items	
1	Front revolution sensor circuit is shorted or open.	Revolution sensor (front) circuit, TF-50.	GI
2	Rear revolution sensor circuit is shorted or open.	Revolution sensor (rear) (For vehicle speed sensor-A/T, refer to AT section.)	MA EM
3	4WD solenoid valve circuit is shorted or open.	4WD solenoid valve circuit, TF-52.	LC
4	2-4WD shift solenoid valve circuit is shorted or 2WD switch of 4WD shift switch is shorted.	2-4WD shift solenoid valve circuit or 4WD shift switch circuit, TF-53.	EC
5	Transfer motor relay circuit is shorted or open.	Transfer motor relay circuit, TF-55.	FE
8	Power supply voltage of throttle position sensor is improper. Or A/D converter of TCM functions improperly.	Throttle position sensor (Refer to AT section.)	AT
9	Transfer fluid temperature sensor circuit is open.	Transfer fluid temperature sensor circuit, TF-57.	TF
10	Neutral-4LO switch circuit is shorted or open.	Neutral-4LO switch circuit, TF-59.	PD
11	Clutch pressure switch circuit, 2-4WD shift solenoid valve circuit or 2WD switch of 4WD shift switch is shorted or open.	Clutch pressure switch circuit, 2-4WD shift solenoid valve circuit or 4WD shift switch circuit, TF-53, 61.	AX
12	Line pressure switch circuit is shorted or open.	Line pressure switch circuit, TF-63.	SU
13	Engine speed signal circuit is shorted or open.	Engine speed signal (Refer to AT section.)	BR
14	Throttle position sensor circuit is shorted or open.	Throttle position sensor (Refer to AT section.)	ST
15	Failure in power supply circuit of TCM.	Power supply of TCM (Refer to AT section.)	RS
16	4WD shift switch circuit is shorted.	4WD shift switch circuit, TF-53.	BT
17	ABS operation signal circuit is shorted.	ABS operation signal circuit, TF-65.	HA
18	Wait detection switch, ATP switch or neutral-4LO switch circuit is shorted or open.	Wait detection switch, ATP switch, neutral-4LO switch circuit*, TF-59.	SC
Repeats flickering every 2 to 5 sec.	Circuits that the self-diagnosis covers have no malfunction.	—	EL
Repeats flickering every 0.25 sec.	Power supply failure of memory back-up Battery is disconnected for a long time. Battery performance is poor.	Data erase/display circuit, TF-67.	IDX
No flickering	Inhibitor switch or 4WD shift switch circuit is shorted or open.	Inhibitor switch (Refer to AT section.) or 4WD shift switch circuit, TF-53.	

\*: If revolution sensor malfunction is simultaneously detected, check revolution sensor first.

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Trouble Diagnosis with CONSULT

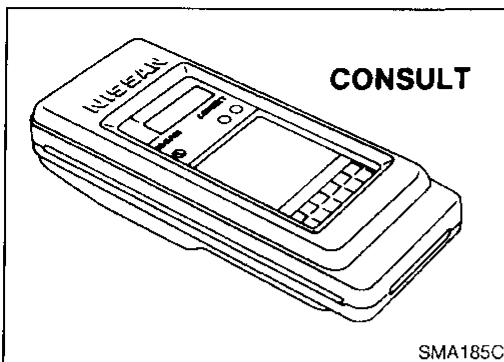


## Trouble Diagnosis with CONSULT SELF-DIAGNOSIS CONSULT Setting Procedure

NBTF0012


NBTF0012S01

NBTF0012S0101


1. Turn ignition switch to "OFF" position.

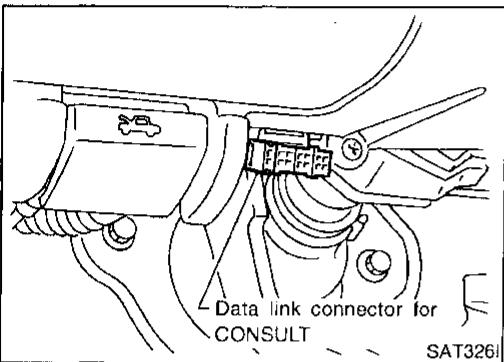


2. Connect CONSULT to data link connector for CONSULT. Data link connector for CONSULT is located in instrument lower panel on driver side.

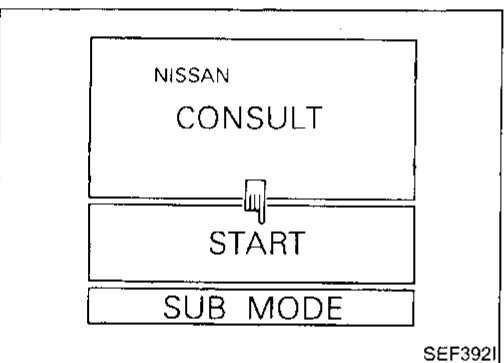

3. Start engine.
4. On CONSULT screen, touch "START".

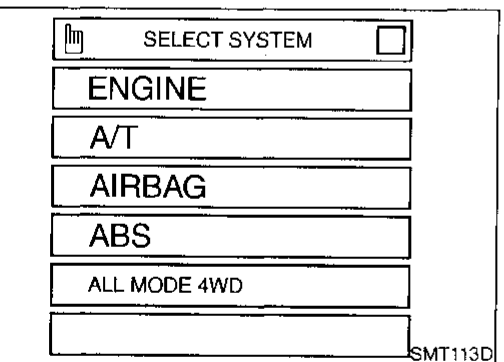


5. Touch "ALL MODE 4WD" on SELECT SYSTEM screen.

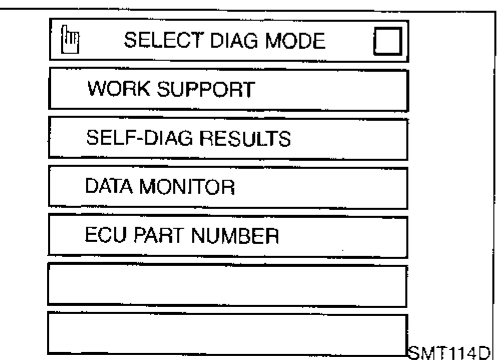

6. Touch "SELF-DIAG RESULTS" on SELECT DIAG MODE screen.

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Trouble Diagnosis with CONSULT (Cont'd)

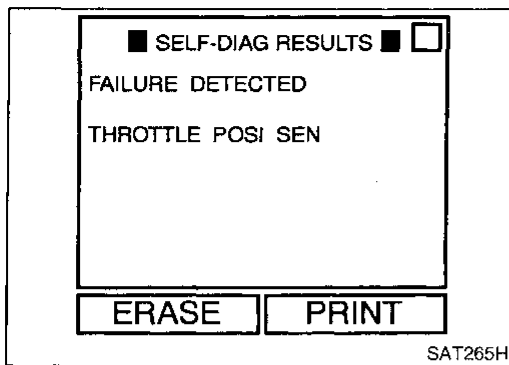

7. Self-diagnostic results are displayed.

GI

MA

EM

LC

## SELF-DIAGNOSTIC ITEMS

NBTF0012G02

Detected items (Screen terms for CONSULT, "SELF-DIAG RESULT" mode)	Malfunction is detected when...	Check items
Revolution sensor (front) (Note 3) (VHCL SPEED SEN-FR)	<ul style="list-style-type: none"> <li>Front revolution sensor (installed on T/F) signal is not input due to open circuit.</li> <li>Improper signal is input while driving.</li> </ul>	Revolution sensor (front) circuit, TF-50.
Revolution sensor (rear) (VHCL SPEED SEN-RR)	<ul style="list-style-type: none"> <li>Signal from vehicle speed sensor 1 (installed on A/T) is not input due to open circuit.</li> <li>Improper signal is input while driving.</li> </ul>	Revolution sensor (rear) (For vehicle speed sensor-A/T, refer to AT section.)
4WD solenoid valve (DUTY SOLENOID)	<ul style="list-style-type: none"> <li>Proper voltage is not applied to solenoid valve due to open or short circuit.</li> </ul>	4WD solenoid valve, TF-52.
2-4WD shift solenoid valve (2-4WD SOLENOID)		2-4WD shift solenoid valve or 4WD shift switch circuit, TF-53.
Transfer motor relay (MOTOR RELAY)	<ul style="list-style-type: none"> <li>Motor does not operate properly due to open or short circuit in transfer motor or motor relay.</li> </ul>	Transfer motor relay circuit, TF-55.
Transfer fluid temperature sensor (FLUID TEMP SENSOR)	<ul style="list-style-type: none"> <li>Signal voltage from fluid temperature sensor is abnormally high (T/F fluid temperature is abnormally low) while driving.</li> </ul>	Transfer fluid temperature sensor circuit, TF-57.
Neutral-4LO switch (N POSI SW TF)	<ul style="list-style-type: none"> <li>Improper signal is input while driving.</li> </ul>	Neutral-4LO switch, TF-59.
Clutch pressure (CLUTCH PRESSURE)	<ul style="list-style-type: none"> <li>Improper signal is input due to open or short circuit.</li> <li>Malfunction occurs in clutch pressure hydraulic circuit.</li> </ul>	Clutch pressure switch circuit (*1), TF-61.
Line pressure (LINE PRESSURE)	<ul style="list-style-type: none"> <li>Improper signal is input due to open or short circuit.</li> <li>Malfunction occurs in line pressure hydraulic circuit.</li> </ul>	Line pressure switch circuit (*1), TF-63.
Engine speed signal (Note 1) (ENGINE SPEED SIG)	<ul style="list-style-type: none"> <li>Engine speed is abnormally low while driving.</li> </ul>	Engine speed signal (Refer to AT section.)
Throttle position sensor (THRTL POSI SEN)	<ul style="list-style-type: none"> <li>Signal voltage from throttle position sensor is abnormally high.</li> <li>Signal voltage from throttle position sensor is abnormally low when closed throttle position switch is OFF.</li> </ul>	Throttle position sensor (Refer to AT section.)
TCM (ADC) C/U (ADC)/THRTL SEN	<ul style="list-style-type: none"> <li>Power supply voltage for throttle position sensor is improper or A/D converter system of TCM is faulty.</li> </ul>	Throttle position sensor (Refer to AT section.)
Battery voltage (Note 1) (BATTERY VOLTAGE)	<ul style="list-style-type: none"> <li>Power supply voltage for TCM is abnormally low while driving.</li> </ul>	Power supply circuit (Refer to AT section.)
4WD shift switch (4WD MODE SW)	<ul style="list-style-type: none"> <li>More than two switch inputs are simultaneously detected due to short circuit of 4WD shift switch.</li> </ul>	4WD shift switch circuit, TF-53.
ABS operation signal (ABS OPER SIGNAL)	<ul style="list-style-type: none"> <li>ABS operation signal is continuously input due to short circuit in ABS operation signal line.</li> </ul>	ABS operation signal circuit, TF-65.

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Trouble Diagnosis with CONSULT (Cont'd)

Detected items (Screen terms for CONSULT, "SELF-DIAG RESULT" mode)	Malfunction is detected when...	Check items
Wait detection switch (Note 2) (WAIT DETECT SWITCH)	<ul style="list-style-type: none"> <li>Improper signal is input due to open or short circuit.</li> </ul>	ATP switch, wait detection switch and neutral-4LO switch circuits (*2), TF-59.
Memory power supply stop	<ul style="list-style-type: none"> <li>Due to removal of battery which cuts off power supply to TCM, self-diagnosis memory function is suspended.</li> </ul>	Data erase/display circuit, TF-67.
TCM (RAM) [CONTROL UNIT (RAM)]	<ul style="list-style-type: none"> <li>Failure is detected in the memory (RAM) system of TCM.</li> </ul>	
TCM (ROM) [CONTROL UNIT (ROM)]	<ul style="list-style-type: none"> <li>Failure is detected in the memory (ROM) system of TCM.</li> </ul>	
TCM (EEPROM) [CONTROL UNIT (EEPROM)]	<ul style="list-style-type: none"> <li>Failure is detected in the memory (EEPROM) system of TCM.</li> </ul>	


Note 1: When a malfunction occurs, it is only displayed and not stored in the memory.

Note 2: When the wait detection switch has been properly fixed, malfunction information is erased from the memory.

Note 3: If T/F control lever is left between H and 4LO for a while, this indication may be displayed.

(\*1): If the malfunction is detected only while driving in reverse, check the continuity of A/T inhibitor "R" position switch. When there is nothing wrong with the electrical system, check the hydraulic system.

(\*2): If a revolution sensor malfunction is detected at the same time, check the revolution sensor circuit first.

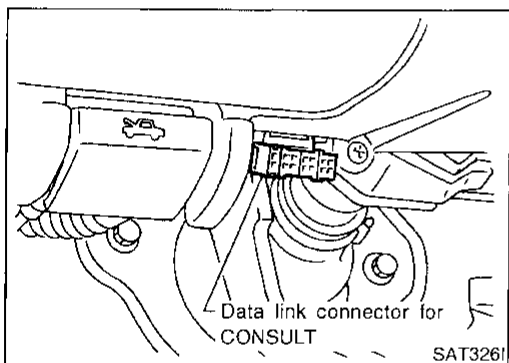



## DATA MONITOR

### CONSULT Setting Procedure

NBTF0012S03

NBTF0012S0301

- Turn ignition switch to "OFF" position.
- Connect CONSULT to data link connector for CONSULT. Data link connector for CONSULT is located in instrument lower panel on driver side.
- Turn ignition switch to "ON" position.
- Touch "START".
- Touch "ALL MODE 4WD".

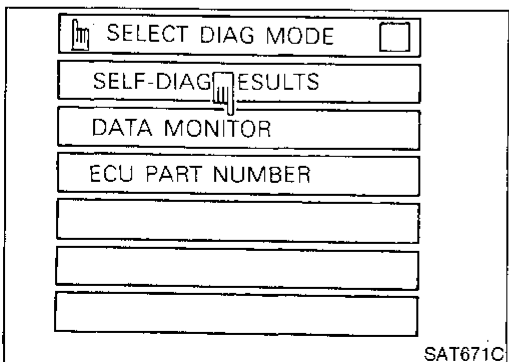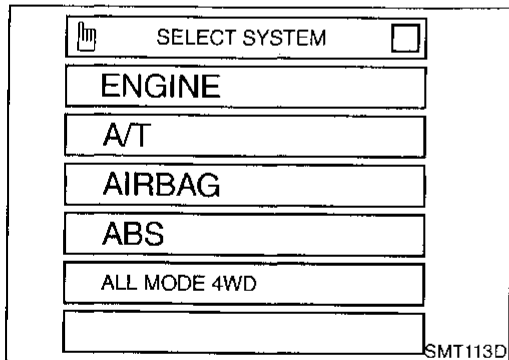

- Touch "DATA MONITOR".

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Trouble Diagnosis with CONSULT (Cont'd)

SAT902H

7. Touch "SETTING" to set record conditions.

SAT297C

8. Touch "LONG TIME" and then "ENTER" key.

9. Return to SELECT MONITOR ITEM screen and touch "MAIN SIGNALS".

10. Touch "START".

SMT047D

11. Monitored data are displayed.

## DATA MONITOR ITEMS

○: Standard ▼: Option

Item [Unit]	Monitor item			Remarks
	ECU input signals	Main signals	Item menu selection	
Revolution sensor-front [km/h (MPH)]	○		▼	Revolution sensor installed on T/F
Revolution sensor-rear [km/h (MPH)]	○		▼	Vehicle speed sensor-A/T
Engine speed [rpm]	○		▼	
Throttle position sensor [V]	○		▼	
Transfer fluid temperature sensor [V]	○		▼	
Battery voltage [V]	○		▼	
2WD switch [ON-OFF]	○		▼	2WD switch of 4WD shift switch
Lock switch [ON-OFF]	○		▼	LOCK switch of 4WD shift switch
Neutral-4LO switch [ON-OFF]	○		▼	T/F neutral-4LO switch
Line pressure switch [ON-OFF]	○		▼	Line pressure switch
Clutch pressure switch [ON-OFF]	○		▼	Clutch pressure switch



# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

*Trouble Diagnosis with CONSULT (Cont'd)*

Item [Unit]	Monitor item			Remarks
	ECU input signals	Main signals	Item menu selection	
ATP switch [ON-OFF]	○		▼	
N position switch [ON-OFF]	○		▼	A/T inhibitor "N" position switch
R position switch [ON-OFF]	○		▼	A/T inhibitor "R" position switch
P position switch [ON-OFF]	○		▼	A/T inhibitor "P" position switch
Closed throttle position switch [ON/OFF]	○		▼	Idle contact of throttle position switch
ABS operation switch [ON-OFF]	○		▼	ABS operation switch
Wait detection switch [ON-OFF]	○		▼	
Throttle opening		○	▼	Throttle opening recognized by TCM
4WD-mode		○	▼	4WD-mode recognized by TCM (AUTO, 2WD & lock)
Vehicle speed [km/h (MPH)]		○	▼	Vehicle speed recognized by TCM
*Control torque [N·m (kg·m, ft·lb)]		○	▼	Calculated torque recognized by TCM
Transfer 4WD solenoid valve [%]		○	▼	Control signal outputs of TCM
2-4WD shift solenoid valve [ON-OFF]		○	▼	
Transfer motor relay [ON-OFF]		○	▼	
2-4WD shift solenoid valve monitor [ON-OFF]			▼	
Transfer motor relay monitor [ON-OFF]			▼	Check signal (re-input signal) of TCM control signal output is displayed. If circuit is shorted or open, ON/OFF state does not change.
ABS control operation [ON-OFF]			▼	ABS control status of TCM
4WD FAIL lamp [ON-OFF]		○	▼	TCM control signal output for 4WD warning lamp
2WD indicator lamp [ON-OFF]			▼	TCM control signal output for 4WD shift indicator lamp (rear)
AUTO indicator lamp [ON-OFF]			▼	TCM control signal output for 4WD shift indicator lamp (front)
LOCK indicator lamp [ON-OFF]			▼	TCM control signal output for 4WD shift indicator lamp (center)
Offset at starting			▼	Starting torque offset value set in WORK SUPPORT
Clutch limit [N·m (kg·m, ft·lb)]			▼	Clutch force release limit value set in WORK SUPPORT
Voltage [V]			▼	Value measured by voltage probe is displayed.
Pulse [ms, Hz or %]			▼	Value measured by pulse probe is displayed. If measurement is impossible, "#" sign is displayed. "#" sign is also displayed at the final data value until the measurement result is obtained.

\* This item is indicated as "COMP CL TORQ".

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Trouble Diagnosis with CONSULT (Cont'd)

## REFERENCE VALUE IN DATA MONITOR MODE

NBTFO012S05

Indicated items (Screen terms for CONSULT, "DATA MONITOR" mode)	Display	Conditions										
Throttle position sensor (THRTL POS SEN)	Approx. 0.5 - 4.0V	Throttle valve fully closed to fully open				GI MA						
Transfer fluid temperature sensor (FLUID TEMP SE)	Approx. 1.1 - 0.3V	Transfer fluid temperature approx. 20 - 80°C (68 - 176°F)				EM						
Closed throttle position switch (CLOSED THL/SW)	ON	After engine warm-up, accelerator pedal is released.				LC						
	OFF	After engine warm-up, accelerator pedal is depressed.				EC						
ABS operation switch (ABS OPER SW)	OFF	ABS is not operating.				FE						
	ON	ABS is operating.				AT						
ABS control operation (ABS CONT OPER)	ON	ABS OPER SW is "ON". Control operation is accomplished in combination with ABS.				TF						
	OFF	ABS is not operating. When a message such as "improper ABS operation signal" appears on the display and ABS OPER SW is "ON", control operation is not accomplished in combination with ABS.				PD						
2WD position (2WD SW)	ON	4WD shift switch is in "2WD".				AX						
	OFF	Except the above condition				SU						
Lock position (LOCK SWITCH)	ON	4WD shift switch is in "LOCK".				BR						
	OFF	Except the above condition				ST						
Neutral-4LO switch (N POSI SW TF) ATP switch (ATP SWITCH) Wait detection switch (WAIT DETCT SW)	Transfer control lever position	H	N	4LO		RS						
	ATP switch	OFF	ON		OFF	BT						
	Neutral-4LO switch	OFF		ON		HA						
	Wait detection switch	OFF		ON		SC						
		See Note.					EL					
Note: When shifting from "4LO" to "H", it turns ON when "Wait" function is operating (and it turns OFF when "Wait" function is canceled).												
Transfer motor relay (MOTOR RELAY)	Fully closed	Transfer control lever	4WD shift switch	A/T selector lever	Motor relay	Remarks	EL					
						H	2WD	--	OFF	ON for approx. 2 sec. after shifting to "P" and "N"	JDX	
							LOCK	AUTO	P, N	OFF	ON for approx. 2 sec. after shifting to "P"	JDX
						P		Others	ON	OFF		JDX
								Others	P	OFF		ON
						Others			ON	OFF		ON
Line pressure switch (LINE PRES SW)	OFF		The vehicle has been left at room temperature for 5 minutes and more with ignition switch in "OFF" position.				JDX					
	ON		Ignition switch in "ON", T/F control lever in "H", 4WD shift switch in "AUTO" or "LOCK" and A/T selector lever in "D".				JDX					

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Trouble Diagnosis with CONSULT (Cont'd)

Indicated items (Screen terms for CONSULT, "DATA MONITOR" mode)	Display	Conditions	
Clutch pressure switch (CL PRES SW)	OFF	Ignition switch in "ON", T/F control lever in "H" and 4WD shift switch in "2WD". ("Wait" function is not operating.)	
	ON	Ignition switch in "ON", T/F control lever in "H" and 4WD shift switch in "AUTO" or "LOCK" and A/T selector lever in "D". ("Wait" function is not operating.)	
Control torque (COMP CL TORQ)	0 kg-m	4WD shift switch (Transfer control lever is in "H" and "wait" function is not operating.)	In "2WD" position
	39 - 1,079 N-m (4 - 110 kg-m, 29 - 796 ft-lb)		In "AUTO" position
	1,079 N-m (110 kg-m, 796 ft-lb)		In "LOCK" position
4WD solenoid (DUTY SOLENOID)	4%	4WD shift switch (Transfer control lever is in "H" and "wait" function is not operating.)	In "2WD" position
	94 - 4%		In "AUTO" position
	4%		In "LOCK" position
2-4WD shift solenoid valve (2-4WD SOL)	OFF	4WD shift switch (Transfer control lever is in "H" or "4LO".)	In "2WD" position
	ON		In "AUTO"/"LOCK" position
2-4WD shift solenoid valve (2-4WD SOL)	OFF	4WD shift switch (Transfer control lever is in "H" or "4LO".)	In "2WD" position
	ON ("Wait" function is operating.)		In "AUTO" position
	OFF ("Wait" function is not operating.)		
	ON ("Wait" function is operating.)	4WD shift switch (Transfer control lever is in "H" or "4LO".)	In "LOCK" position
	OFF ("Wait" function is not operating.)		
	OFF		In "2WD" position
	ON	4WD shift switch (Transfer control lever is between "H" and "4LO".)	In "AUTO"/"LOCK" position

## WORK SUPPORT

### Purpose

NBTF0012S06

When there is no problem with transfer and 4WD system, following symptoms in "AUTO" mode may be claimed by a customer.

- Tight corner braking symptom after accelerator (throttle) opening (Note 1)
- Vibration when accelerating on a low  $\mu$  road (snow-covered or icy road) (Note 2)

NBTF0012S0901

It is possible to deal with these symptoms by changing "CLUTCH FORCE RELEASE LIMIT VALUE" and "STARTING TORQUE OFFSET VALUE". However, be careful when changing the values because it may adversely affect driving performance.

(Priority of change is placed first on "CLUTCH FORCE RELEASE LIMIT VALUE", and then "STARTING TORQUE OFFSET VALUE".)

### NOTE:

- 1) When the accelerator is slightly open (approx. 1/8) or fully closed after being opened. The tight corner braking symptom during idle creep driving with accelerator fully closed cannot be solved by this method. Refer to SYMPTOM 8, TF-75.

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Trouble Diagnosis with CONSULT (Cont'd)


- 2) A slight shock is felt at a few hertz as if it were being pushed lightly from behind.

GI

MA

EM

LC

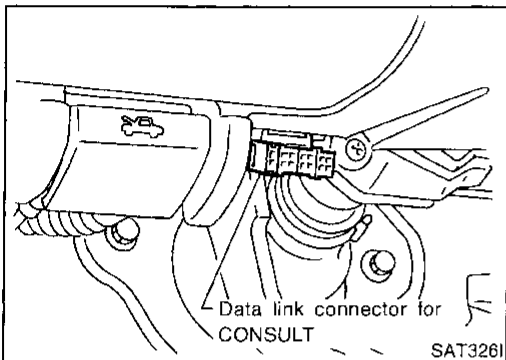

## CONSULT Setting Procedure

NBTF0012S0602


1. Turn ignition switch to "OFF" position.
2. Connect CONSULT to data link connector for CONSULT. Data link connector for CONSULT is located in instrument lower panel on driver side.
3. Turn ignition switch to "ON" position.
4. Touch "START".
5. Touch "ALL MODE 4WD".
6. Touch "WORK SUPPORT".

EC

FE

AT

TF

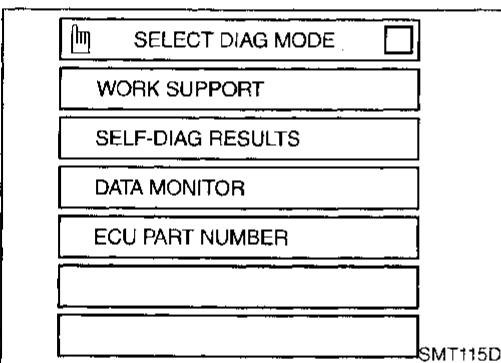

7. Select WORK ITEM by touching "CLUTCH/F RLS LIM ADJ".

PD

AX

SU


BR

ST

RS

BT

HA

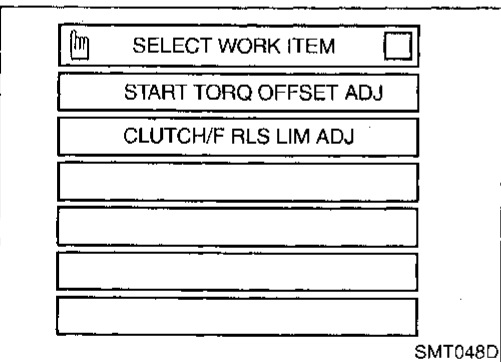

## CLUTCH FORCE RELEASE LIMIT ADJUSTMENT

NBTF0012S07

1.2 kg-m: Tight corner braking symptom is alleviated. However, vibration may occur when accelerating on a low  $\mu$  road (icy road, etc.).

0.3 kg-m: Initial set value

0.2 kg-m: Do not set to this value because the tight corner braking symptom will get worse.


SC

EL


IDX

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION


Trouble Diagnosis with CONSULT (Cont'd)

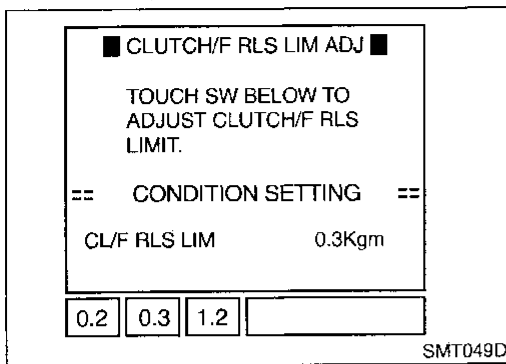


1. Current CLUTCH FORCE RELEASE LIMIT value "0.3 kg-m" appears under "CONDITION SETTING" on CONSULT display.

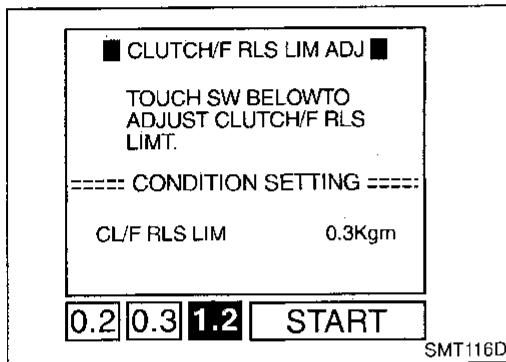

2. Touch "1.2", then "START".

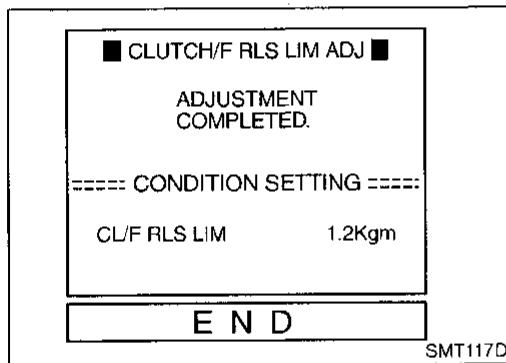

3. When clutch force release limit value is set to "1.2 kg-m", current value "0.3 kg-m" shown on display will be replaced by "1.2 kg-m" and "END" will appear at the same time. Clutch force release limit value setting is now complete.

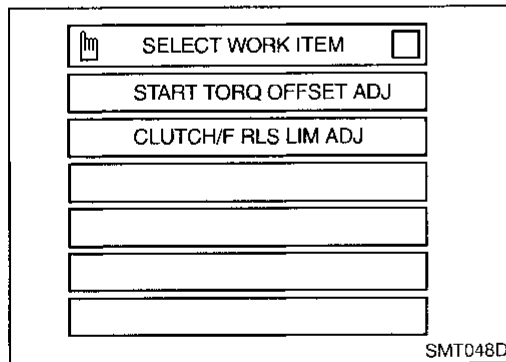


## STARTING TORQUE OFFSET ADJUSTMENT

NBTF0012S08

0.0/8: Initial set value  
 2/8: Tight corner braking symptom is alleviated. However, vehicle acceleration performance from standstill will get worse on a low  $\mu$  road (snow-covered or icy road).


1. Return to "SELECT WORK ITEM" on CONSULT display. Touch "START TORQ OFFSET ADJ".

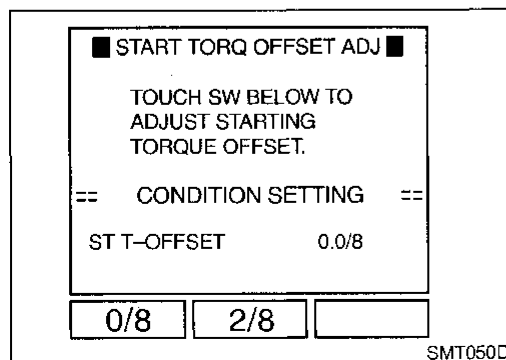


2. Current START TORQUE OFFSET value "0.0/8" appears under "CONDITION SETTING" on display.

# ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Trouble Diagnosis with CONSULT (Cont'd)

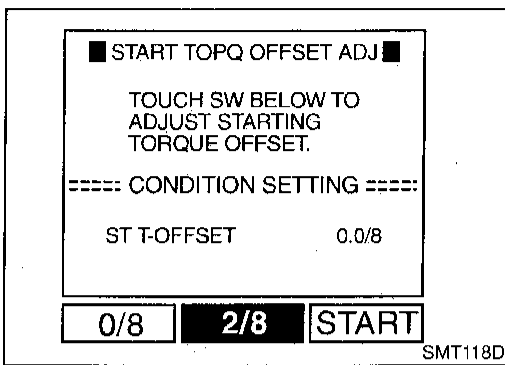

3. Touch "2/8" to adjust the starting torque offset from "0.0/8" to "2.0/8".

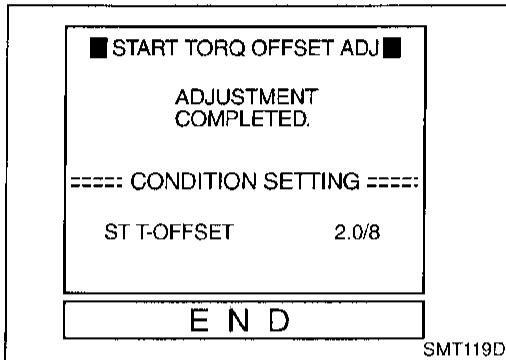

4. When start torque offset value is set to "2.0/8", current value "0.0/8" will be replaced by "2.0/8" and "END" will appear at the same time. Start torque offset value setting is now complete.

GI

MA

EM

LC

EC

FE

AT

**TF**

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

# TROUBLE DIAGNOSIS — INTRODUCTION

Introduction

## Introduction

### DESCRIPTION

NBTF0013

NBTF0013S01

When a malfunction (indicated by the 4WD warning lamp illumination) occurs, collect information first from the customer about how the malfunction occurs. Then, proceed with the diagnosis presuming it is the cause. Also inspect the electrical system, paying close attention to other possibilities such as fluid level and leaks.

All-mode 4WD transfer and A/T are controlled by one and the same TCM and common sensors.

If a malfunction occurs in the all-mode 4WD system, the 4WD warning lamp lights up to inform of the system malfunction. There are two ways to identify the cause of the malfunction.

- 1) Performing the self-diagnosis. (The 4WD warning lamp will indicate what kind of malfunction has occurred by flickering.)
- 2) Performing diagnosis using CONSULT.

### DIAGNOSTIC WORKSHEET

NBTF0013S02

#### Information from Customer

NBTF0013S0201

#### KEY POINTS

**WHAT** ..... Vehicle model

**WHEN**..... Date, Frequencies

**WHERE**..... Road conditions

**HOW**..... Operating conditions, Symptoms

#### Information sheet from customer

Customer name MR/MS	Model & Year	VIN
Transfer model ATX14A	Engine	Mileage
Incident Date	Manuf. Date	In Service Date
Frequency	<input type="checkbox"/> Continuous <input type="checkbox"/> Intermittent ( times a day)	
Symptoms	<input type="checkbox"/> 4WD shift indicator lamp does not turn on.	
	<input type="checkbox"/> 4WD warning lamp does not turn on.	
	<input type="checkbox"/> 4WD shift indicator lamp does not turn off.	
	<input type="checkbox"/> ATP warning lamp does not turn on.	
	<input type="checkbox"/> 4LO indicator lamp does not turn on.	
	<input type="checkbox"/> 4WD shift indicator lamp does not indicate "LOCK".	
	<input type="checkbox"/> 4WD shift indicator lamp repeats flicking.	
	<input type="checkbox"/> Tight corner braking symptom occurs.	
	<input type="checkbox"/> 4WD system does not operate.	
	<input type="checkbox"/> Others.	
4WD warning lamp	<input type="checkbox"/> Continuously lit	<input type="checkbox"/> Not lit

# TROUBLE DIAGNOSIS — INTRODUCTION

Introduction (Cont'd)

## Diagnostic Worksheet

NBTF0013S0202

1.	<input type="checkbox"/> Listen to customer complaints.	TF-41	GI
2.	<input type="checkbox"/> Check transfer fluid.	TF-41	MA
	<input type="checkbox"/> Leakage <input type="checkbox"/> Fluid condition <input type="checkbox"/> Fluid level		
3.	<input type="checkbox"/> Road testing	TF-41	EM
	<input type="checkbox"/> 1. Check before engine is started. <input type="checkbox"/> 2. Check at idle. <input type="checkbox"/> 3. Cruise test		
4.	<input type="checkbox"/> Perform self-diagnosis NG items (with CONSULT and without CONSULT).	TF-28, TF-25	EC
5.	<input type="checkbox"/> Check component. Repair or replace the damaged parts.	TF-77	
6.	<input type="checkbox"/> Perform final check. Perform road test (1 through 3).	TF-41	FE

AT

**TF**

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX



# TROUBLE DIAGNOSIS — INTRODUCTION

Work Flow

## Work Flow

### HOW TO PERFORM TROUBLE DIAGNOSES FOR QUICK AND ACCURATE REPAIR


-NDTF0014

NETF0014E01

A good understanding of the malfunction conditions can make troubleshooting faster and more accurate.

In general, each customer feels differently about a problem. It is important to fully understand the symptoms or conditions for a customer complaint.

Make good use of the two sheets provided, "Information from Customer" (Refer to TF-38.) and "Diagnostic Worksheet" (Refer to TF-39.), to perform the best troubleshooting possible.

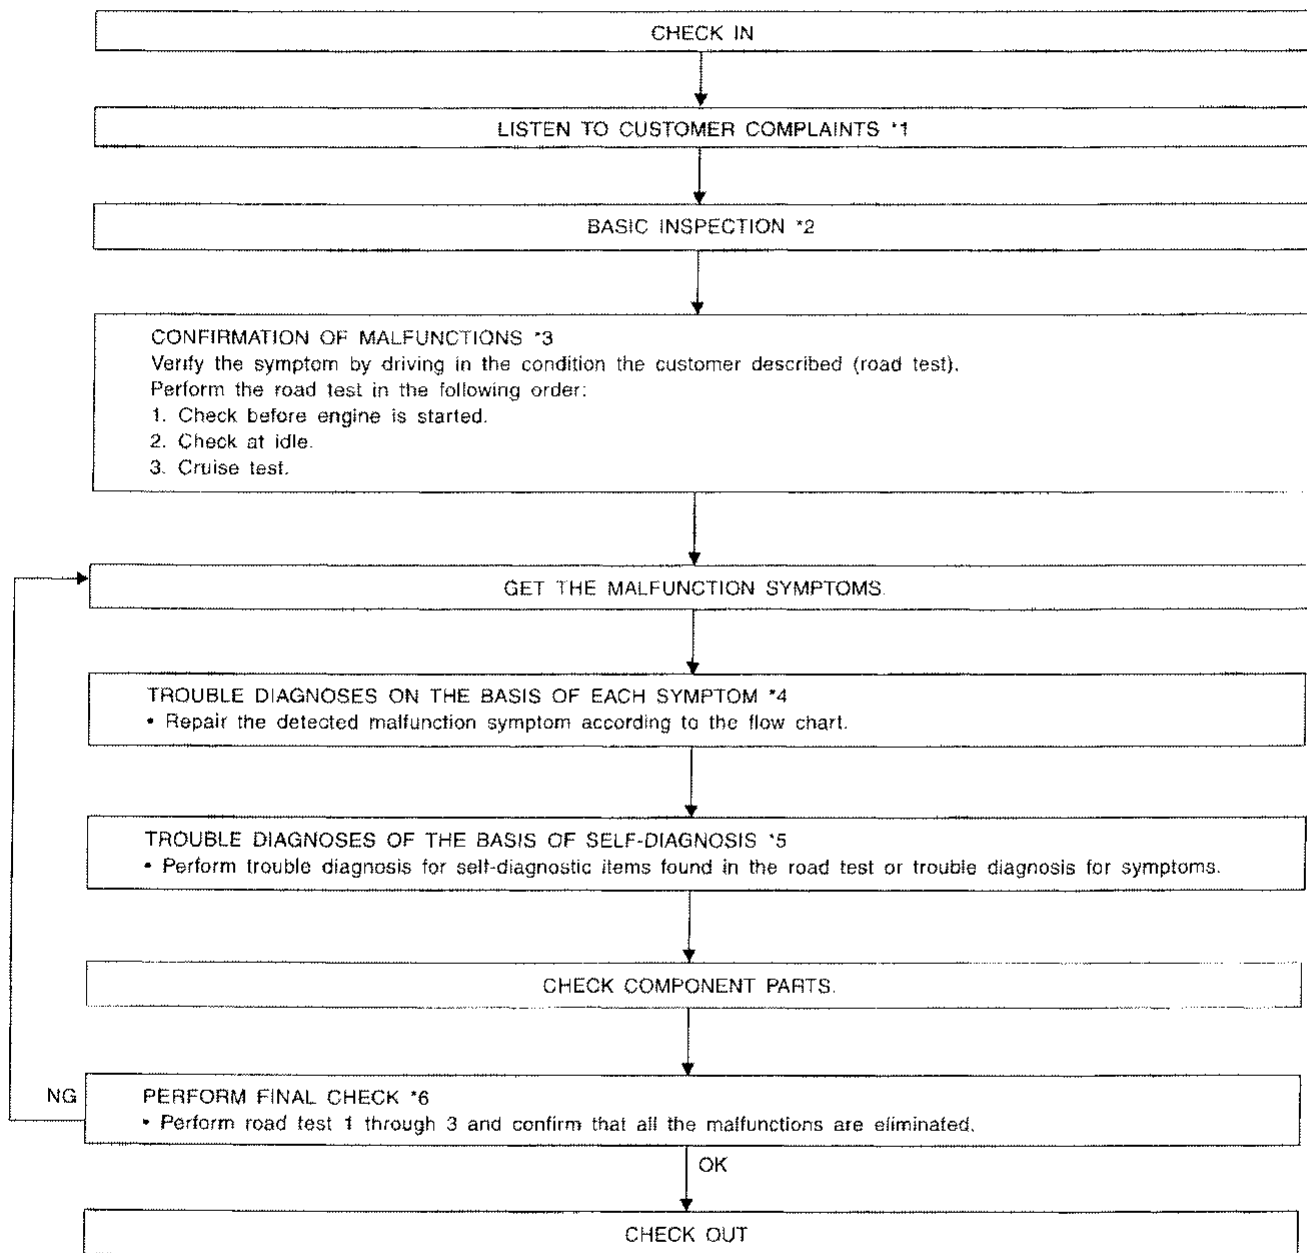

MTF013A

\*1: TF-41

\*3: TF-41

\*5: TF-50 - TF-67

\*2: TF-41

\*4: TF-68 - TF-75

\*6: TF-41

## Listen to Customer Complaints

- Each customer feels differently about a problem. It is important to fully understand the symptoms or conditions for a customer complaint. NBTF0015  
GI
- Listen to the customer about how and when the malfunction occurs, and make good use of it when performing the road test. MA

EM

LC


## Transfer Fluid Check

- Check fluid for leaks and fluid level. Refer to MA section ("CHASSIS AND BODY MAINTENANCE"). NBTF0016  
EC

FE

AT

**TF**

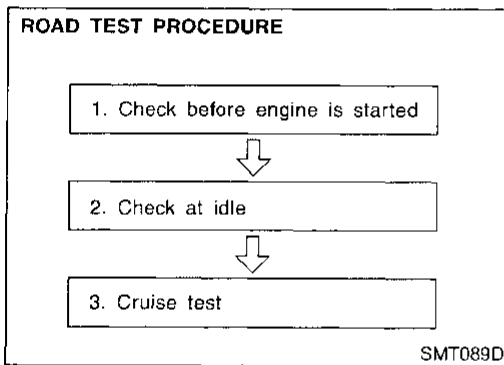

## Road Test

### PREPARATION FOR ROAD TEST

- The purpose of the test is to determine overall performance of transfer and analyze causes of problems. NBTF0017  
PD
- The road test consists of the following three parts: AX
- When a malfunction is found in any part of transfer, perform the road test to locate the malfunction area and repair the malfunction parts. SU
  1. Check before engine is started BR
  2. Check at idle
  3. Cruise test ST
- Perform road test and place checks for NG items on the diagnostic worksheet. Refer to TF-39. RS

RS

BT

HA

SC

EL




IDX


# TROUBLE DIAGNOSIS — BASIC INSPECTION

Road Test (Cont'd)

## 1. CHECK BEFORE ENGINE IS STARTED


-NBTF0017S02
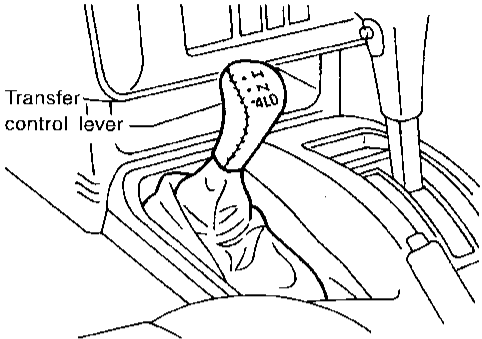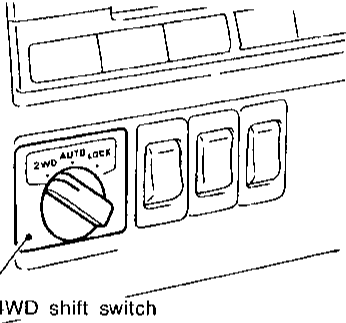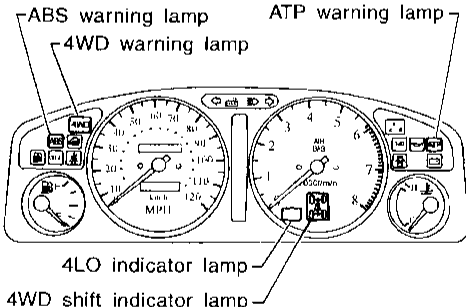
<b>1</b>	<b>CHECK 4WD SHIFT INDICATOR LAMP</b>
<ol style="list-style-type: none"> <li>1. Park vehicle on flat surface.</li> <li>2. Turn ignition switch to "OFF" position.</li> <li>3. Move A/T selector lever to "P" position.</li> <li>4. Move T/F control lever to "H" position.</li> </ol>	
 <p>Transfer control lever</p> <p style="text-align: right;">SMT120D</p>	
<ol style="list-style-type: none"> <li>5. Set 4WD shift switch to "2WD" position.</li> </ol>	
 <p>4WD shift switch</p> <p style="text-align: right;">SMT107D</p>	
<ol style="list-style-type: none"> <li>6. Turn ignition switch to "ON" position. (Do not start engine.)</li> <li>7. Does 4WD shift indicator lamp turn ON for approx. 1 second?</li> </ol>	
 <p>ABS warning lamp    ATP warning lamp</p> <p>4WD warning lamp</p> <p>4LO indicator lamp</p> <p>4WD shift indicator lamp</p> <p style="text-align: right;">SMT100DA</p>	
<b>Yes or No</b>	
Yes	▶ GO TO 2.
No	▶ Go to Symptom 1. Refer to TF-68.
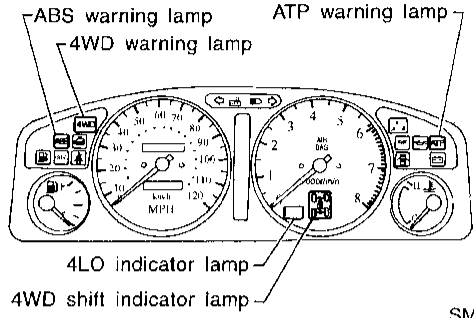
<b>2</b>	<b>CHECK 4WD WARNING LAMP</b>
<p>Is 4WD warning lamp turned ON?</p>	
 <p>ABS warning lamp    ATP warning lamp</p> <p>4WD warning lamp</p> <p>4LO indicator lamp</p> <p>4WD shift indicator lamp</p> <p style="text-align: right;">SMT100DA</p>	
<b>Yes or No</b>	
Yes	▶ <ol style="list-style-type: none"> <li>1. Turn ignition switch to "OFF" position.</li> <li>2. Perform self-diagnosis. Refer to "Trouble Diagnosis without CONSULT", TF-25.</li> <li>3. Go to "2. CHECK AT IDLE". Refer to TF-43.</li> </ol>
No	▶ Go to Symptom 2. Refer to TF-69.

NBT0017S03

## 2. CHECK AT IDLE

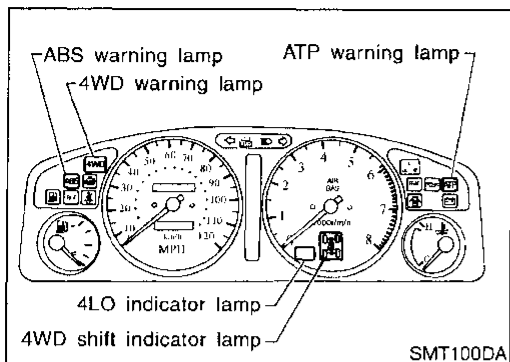

1	<b>CHECK 4WD SHIFT INDICATOR LAMP</b>
1. Park vehicle on flat surface. 2. Turn ignition switch to "OFF" position. 3. Move A/T selector lever to "P" or "N" position. 4. Move T/F control lever to "H" position. 5. Set 4WD shift switch to "2WD" position. 6. Start engine. 7. Is 4WD shift indicator lamp turned OFF?	
<b>Yes or No</b>	
Yes	▶ Go to ATP "ATP SWITCH, WAIT DETECTION SWITCH AND NEUTRAL-4LO SWITCH". Refer to TF-59.
No	▶ GO TO 2.

2	<b>CHECK 4WD WARNING LAMP</b>
Is 4WD warning lamp turned OFF?	
<b>Yes or No</b>	
Yes	▶ GO TO 3.
No	▶ Perform self-diagnosis. Refer to "Trouble Diagnosis without CONSULT", TF-25.

3	<b>CHECK 4WD SHIFT INDICATOR LAMP</b>
1. Set 4WD shift switch to "2WD", "AUTO", "LOCK", "AUTO" and "2WD" in order. (Stay at each switch position for at least 1 second.) 2. Does 4WD shift indicator lamp change properly and does buzzer sound?	
4WD shift switch operation	4WD shift indicator lamp
2WD	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 2px; text-align: center;">4WD</div> <div style="border: 1px solid black; padding: 2px; text-align: center;">OFF</div> </div>
↓	
AUTO	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 2px; text-align: center;">4WD</div> <div style="border: 1px solid black; padding: 2px; text-align: center;">OFF</div> </div>
↓	
LOCK	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 2px; text-align: center;">4WD</div> <div style="border: 1px solid black; padding: 2px; text-align: center;">OFF</div> </div>
↓	
AUTO	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 2px; text-align: center;">4WD</div> <div style="border: 1px solid black; padding: 2px; text-align: center;">OFF</div> </div>
↓	
2WD	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 2px; text-align: center;">4WD</div> <div style="border: 1px solid black; padding: 2px; text-align: center;">OFF</div> </div>
Buzzer sound	
"Pip"	
"Pip"	
"Pip"	
"Pip"	
"Pip"	
<b>Yes or No</b>	
Yes	▶ GO TO 4.
No	▶ Go to "2-4WD SHIFT SOLENOID VALVE AND 4WD SHIFT SWITCH". Refer to TF-53.




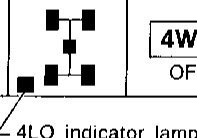

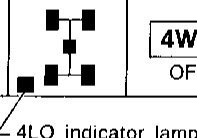

SMT090D








GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 AT  
**TF**  
 PD  
 AX  
 SU  
 BR  
 ST  
 RS  
 BT  
 FA  
 SC  
 EL  
 IDX

# TROUBLE DIAGNOSIS — BASIC INSPECTION

Road Test (Cont'd)

<b>4</b>	<b>CHECK 4WD WARNING LAMP</b>
Is 4WD warning lamp turned ON?	
<b>Yes or No</b>	
Yes	▶ Perform self-diagnosis. (Refer to "Trouble Diagnosis without CONSULT", TF-25.)
No	▶ GO TO 5.
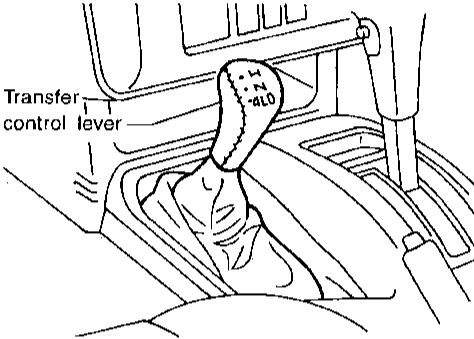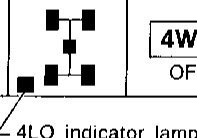
<b>5</b>	<b>CHECK 4WD SHIFT INDICATOR LAMP AND ATP WARNING LAMP</b>						
<p>1. Move A/T selector lever to "P" position.                  2. Move T/F control lever from "H" to "4LO".</p>							
 <p style="text-align: right;">SMT120D</p>							
<p>3. While shifting from "H" to "4LO", does 4WD shift indicator lamp turn OFF and ATP warning lamp turn ON? (*1)                  *1: After ATP warning lamp is turned ON when it is hard to shift to "4LO", move A/T selector lever to "N" position.</p>							
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 33%;">T/F control lever operation</td> <td style="width: 33%;">4WD shift indicator lamp</td> <td style="width: 33%;">4WD warning lamp</td> </tr> <tr> <td style="text-align: center;"><b>4LO</b></td> <td style="text-align: center;">  </td> <td style="text-align: center;">  </td> </tr> </table> <p style="text-align: right;">SMT121DA</p>		T/F control lever operation	4WD shift indicator lamp	4WD warning lamp	<b>4LO</b>		
T/F control lever operation	4WD shift indicator lamp	4WD warning lamp					
<b>4LO</b>							
<b>Yes or No</b>							
Yes	▶ GO TO 6.						
No	▶ Go to Symptoms 3 and 4. Refer to TF-71.						
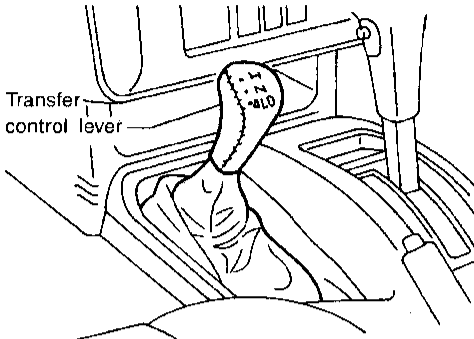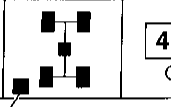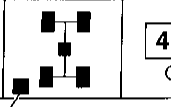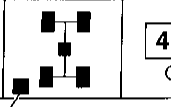
<b>6</b>	<b>CHECK 4WD SHIFT INDICATOR LAMP</b>						
Does 4WD shift indicator lamp indicate "LOCK" and 4LO indicator lamp turn ON when T/F control lever is set in "4LO"?							
 <p style="text-align: right;">SMT120D</p>							
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 33%;">T/F control lever operation</td> <td style="width: 33%;">4WD shift indicator lamp</td> <td style="width: 33%;">4WD warning lamp</td> </tr> <tr> <td style="text-align: center;"><b>4LO</b></td> <td style="text-align: center;">  </td> <td style="text-align: center;">  </td> </tr> </table> <p style="text-align: right;">SMT121DA</p>		T/F control lever operation	4WD shift indicator lamp	4WD warning lamp	<b>4LO</b>		
T/F control lever operation	4WD shift indicator lamp	4WD warning lamp					
<b>4LO</b>							
<b>Yes or No</b>							
Yes	▶ GO TO 7.						
No	▶ Go to "3. CRUISE TEST". Refer to TF-45.						

<b>7</b>	<b>CHECK 4WD SHIFT INDICATOR LAMP (*2)</b>
<p>1. Move T/F control lever from "4LO" to "H".                  2. Does 4WD shift indicator lamp flicker? (*2)                  *2: While "Wait" function is operating, 4WD shift indicator lamp flashes.</p>	
<b>Yes or No</b>	
Yes	▶ Go to Symptom 7. Refer to TF-74.
No	▶ Go to "3. CRUISE TEST". Refer to TF-45.

## 3. CRUISE TEST

-NBT0017504

<b>1</b>	<b>INSPECTION START</b>
SMT120D	
SMT100DA	
WITH CONSULT	▶ GO TO 2.
WITHOUT CONSULT	▶ GO TO 3.

<b>2</b>	<b>CHECK INPUT SIGNAL (WITH CONSULT)</b>																				
<ol style="list-style-type: none"> <li>1. Warm up engine sufficiently.</li> <li>2. Park vehicle on flat surface.</li> <li>3. Move A/T selector lever to "P" position.</li> <li>4. Move T/F control lever to "H" position.</li> <li>5. Set 4WD shift switch to "AUTO" position.</li> <li>6. Start engine.</li> <li>7. Drive for at least 30 seconds at a speed higher than 20 km/h (12 MPH). (Drive vehicle until "FLUID TEMP SE" exceeds 0.9V.)</li> <li>8. Park vehicle on flat surface.</li> <li>9. Move A/T selector lever to "P" position.</li> <li>10. Set 4WD shift switch to "2WD" position.</li> <li>11. Leave vehicle for at least 80 seconds with "FLUID TEMP SE" at 0.9V or less.</li> </ol>																					
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">☆ MONITOR</td> <td style="width: 50%;">☆ NO FAIL ▾</td> </tr> <tr> <td>VHCL/S SEN*FR</td> <td>0Km/h</td> </tr> <tr> <td>VHCL/S SEN*RR</td> <td>0Km/h</td> </tr> <tr> <td>ENGINE SPEED</td> <td>0rpm</td> </tr> <tr> <td>THRTL POS SEN</td> <td>0.5V</td> </tr> <tr> <td>FLUID TEMP SE</td> <td>1.0V</td> </tr> <tr> <td>BATTERY VOLT</td> <td>12.2V</td> </tr> <tr> <td>2WD SW</td> <td>ON</td> </tr> <tr> <td>LOCK SWITCH</td> <td>OFF</td> </tr> <tr> <td>N POSI SW TF</td> <td>OFF</td> </tr> </table>		☆ MONITOR	☆ NO FAIL ▾	VHCL/S SEN*FR	0Km/h	VHCL/S SEN*RR	0Km/h	ENGINE SPEED	0rpm	THRTL POS SEN	0.5V	FLUID TEMP SE	1.0V	BATTERY VOLT	12.2V	2WD SW	ON	LOCK SWITCH	OFF	N POSI SW TF	OFF
☆ MONITOR	☆ NO FAIL ▾																				
VHCL/S SEN*FR	0Km/h																				
VHCL/S SEN*RR	0Km/h																				
ENGINE SPEED	0rpm																				
THRTL POS SEN	0.5V																				
FLUID TEMP SE	1.0V																				
BATTERY VOLT	12.2V																				
2WD SW	ON																				
LOCK SWITCH	OFF																				
N POSI SW TF	OFF																				
<b>RECORD</b>																					
SMT106D																					
12. Is 4WD warning lamp turned ON?																					
<b>Yes or No</b>																					
Yes	▶ Perform self-diagnosis. Refer to "Trouble Diagnosis with CONSULT", TF-28.																				
No	▶ GO TO 4.																				

<b>3</b>	<b>CHECK INPUT SIGNAL (WITHOUT CONSULT)</b>
<ol style="list-style-type: none"> <li>1. Warm up engine sufficiently.</li> <li>2. Park vehicle on flat surface.</li> <li>3. Move A/T selector lever to "P" position.</li> <li>4. Move T/F control lever to "H" position.</li> <li>5. Set 4WD shift switch to "AUTO" position.</li> <li>6. Start engine.</li> <li>7. Drive vehicle for at least 30 seconds at a speed higher than 20 km/h (12 MPH).</li> <li>8. Park vehicle on flat surface.</li> <li>9. Move A/T selector lever to "P" position.</li> <li>10. Set 4WD shift switch to "2WD" position.</li> <li>11. Is 4WD warning lamp turned ON?</li> </ol>	
<b>Yes or No</b>	
Yes	▶ Perform self-diagnosis. Refer to "Trouble Diagnosis without CONSULT", TF-25.
No	▶ GO TO 4.

CI  
MA  
EM  
LC  
EC  
FE  
AT  
TF  
PD  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

# TROUBLE DIAGNOSIS — BASIC INSPECTION

Road Test (Cont'd)

<b>4</b>	<b>(1) CHECK TIGHT CORNER BRAKING SYMPTOM</b>	
1. Set 4WD shift switch to "AUTO" position. 2. Drive vehicle at speed lower than 20 km/h (12 MPH) with steering wheel fully turned. 3. Does tight corner braking symptom occur?		
<b>Yes or No</b>		
Yes	▶	GO TO 5.
No	▶	GO TO 6.


<b>5</b>	<b>CONFIRM SYMPTOM AGAIN</b>	
Confirm symptom and self-diagnosis again. Refer to "Trouble Diagnosis without CONSULT", TF-25 and "Trouble Diagnosis with CONSULT", TF-28.		
<b>OK or NG</b>		
OK	▶	GO TO 6.
NG	▶	Go to Symptoms 8 and 9. Refer to TF-75.

<b>6</b>	<b>(2) CHECK TIGHT CORNER BRAKING SYMPTOM</b>	
1. Set 4WD shift switch to "LOCK" position. 2. Drive vehicle at speed lower than 20 km/h (12 MPH) with steering wheel fully turned. 3. Does tight corner braking symptom occur?		
<b>Yes or No</b>		
Yes	▶	INSPECTION END
No	▶	GO TO 7.

<b>7</b>	<b>CONFIRM SYMPTOM AGAIN</b>	
Confirm symptom and self-diagnosis again. Refer to "Trouble Diagnosis without CONSULT", TF-25 and "Trouble Diagnosis with CONSULT", TF-28.		
<b>OK or NG</b>		
OK	▶	INSPECTION END
NG	▶	Go to Symptoms 8 and 9. Refer to TF-75.

# TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

TCM Terminals and Reference Value

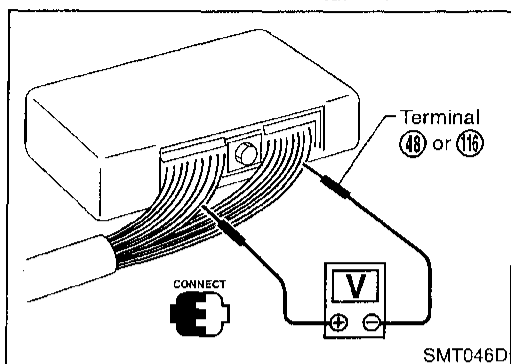

## TCM Terminals and Reference Value


NBTF0018

### INSPECTION OF TCM

NBTF0018S01

- Measure voltage between each terminal and terminal 48 or 116 by following "TCM INSPECTION TABLE".

- Pin connector terminal layout

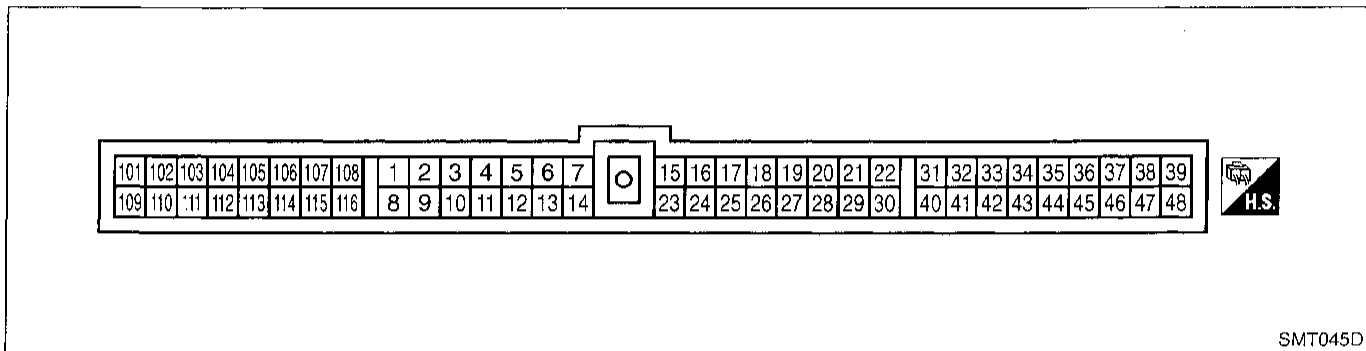

### TCM INSPECTION TABLE

(Data are reference values.)

NBTF0018S02


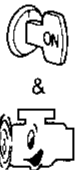
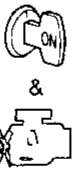


Terminal No.	Item	Condition	Judgement standard
2	4WD warning lamp	After IGN. ON (more than 2 seconds)	1V or less
		Except above	Battery voltage
6	4WD shift switch (2WD)	When 4WD shift switch is set to "2WD".	Battery voltage
		Except "2WD"	1V or less
7	4WD shift switch (LOCK)	When 4WD shift switch is set to "LOCK".	Battery voltage
		Except "LOCK"	1V or less
13	ABS signal	When ABS is being operated.	1V or less
		ABS is not operated.	4.5 - 5.5V

GI  
MA  
EM  
LC  
EC  
FE  
AT  
TF  
PD  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX















# TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

TCM Terminals and Reference Value (Cont'd)

Terminal No.	Item		Condition	Judgement standard
14	Clutch pressure switch		When 4WD shift switch is set to "2WD", "AUTO" or "LOCK" in D position and waiting mechanism is not operated.	Battery voltage
			When 4WD shift switch is set to "2WD", "AUTO" or "LOCK" in D position and waiting mechanism is being operated.	
15	Transfer motor relay monitor *1		When transfer motor relay is turned "ON". (more than 2 seconds)	Battery voltage
			When transfer motor relay is turned "OFF".	1V or less
16	Transfer fluid temperature sensor		At 20°C (68°F)	Approx. 1.5V
			At 80°C (176°F)	Approx. 0.5V
23	Dim terminal		When tail lamp is turned OFF.	1V or less
			When tail lamp is turned ON.	Battery voltage
24	Neutral-4LO switch		When transfer control lever is set to "4LO" position.	0V
			When transfer control lever is set to "H" position.	Battery voltage
25	ATP switch		When transfer control lever is set to "H" or "4LO" position.	Battery voltage
			When transfer control lever is set to between "H" and "4LO" position.	1V or less
26	Line pressure switch		When 4WD shift switch is set to "2WD", "AUTO" or "LOCK" in D position and waiting mechanism is not operated.	Battery voltage
			When 4WD shift switch is set to "2WD", "AUTO" or "LOCK" in D position and waiting mechanism is being operated.	1V or less
27	Wait detection switch		When transfer control lever is shifted to "H" position.	Battery voltage
			When transfer control lever is shifted to "4LO" position.	1V or less
31	Front revolution sensor		A/T, D position and brake ON	0V
			Driving at 30 km/h (19 MPH) in D position	Voltage is in proportion to vehicle speed [more than 1V at 30 km/h (19 MPH)].
48	Ground	—	—	—
107	2-4WD shift solenoid valve		When 4WD shift switch is set to "2WD".	1V or less
			When 4WD shift switch is set to "LOCK".	Battery voltage

# TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

TCM Terminals and Reference Value (Cont'd)

Terminal No.	Item		Condition	Judgement standard	
108	Power source	—	—	—	GI
109	4WD solenoid valve	 & 	When 4WD shift switch is set to "AUTO".	Approximately 2.8V	MA
			When 4WD shift switch is set to "2WD".	Less than 1V	EM
110	Transfer dropping resistor	 & 	When 4WD shift switch is set to "AUTO".	Battery voltage	LC
			When 4WD shift switch is set to "2WD".	Less than 1V	EC
111	Transfer motor relay *1	 & 	When transfer motor relay is turned ON. (more than 2 seconds)	1V or less	FE
			When transfer motor relay is turned OFF.	Battery voltage	AT
112	2WD indicator lamp	 & 	After engine is turned ON and 4WD shift switch is set to "2WD".	1V or less	TF
			4WD shift switch is set except "2WD".	Battery voltage	PD
113	AUTO indicator lamp	 & 	After engine is turned ON and 4WD shift switch is set to "AUTO".	1V or less	AX
			4WD shift switch is set except "AUTO".	Battery voltage	SU
114	LOCK indicator lamp	 & 	After engine is turned ON and 4WD shift switch is set to "LOCK".	1V or less	BR
			4WD shift switch is set except "AUTO".	Battery voltage	ST
115	Power source	—	—	—	RS
116	Ground	—	—	—	BT

\*1: Operation for transfer motor relay


Throttle valve	Transfer control lever	4WD shift Switch	A/T selector lever	Motor/Motor relay	Note
Full-open	H	2WD	—	OFF	—
		AUTO	P, N	OFF	After selected P or N
			Except P, N	ON	ON time is about two seconds.
		LOCK	P, N	OFF	After selected P or N
			Except P, N	ON	ON time is about two seconds.

# VEHICLE SPEED SENSOR (FRONT REVOLUTION SENSOR)

Diagnostic Procedure

## Diagnostic Procedure

NBTF0019

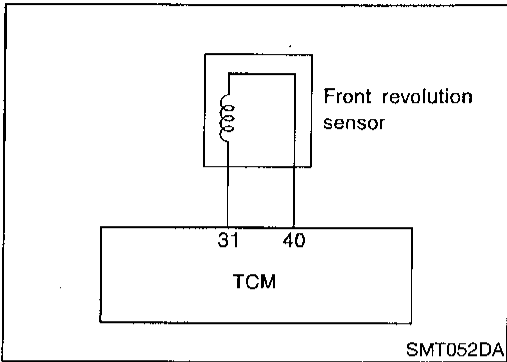

<b>1</b>	<b>FRONT REVOLUTION SENSOR</b>	
Refer to "Front Revolution Sensor", "COMPONENT INSPECTION", TF-78.		
<b>OK or NG</b>		
OK	▶	GO TO 3.
NG	▶	GO TO 2.



<b>2</b>	<b>CHECK CONTINUITY</b>	
Check the following.		
<ul style="list-style-type: none"> <li>Continuity of transfer sub-harness</li> </ul> Refer to "Transfer Sub-harness", "COMPONENT INSPECTION", TF-79.		
<b>OK or NG</b>		
OK	▶	Repair or replace front revolution sensor.
NG	▶	Repair or replace front revolution sensor and transfer sub-harness.

<b>3</b>	<b>CHECK INPUT SIGNAL</b>	
WITH CONSULT	▶	GO TO 4.
WITHOUT CONSULT	▶	GO TO 5.

<b>4</b>	<b>CHECK INPUT SIGNAL (WITH CONSULT)</b>																																		
1. Start engine. 2. Select "ECU INPUT SIGNALS" in Data Monitor. 3. Read out the value of "VEHICLE SPEED SENSOR (FRONT)" while driving.																																			
<table border="1"> <tr> <td>☆ MONITOR</td> <td>☆ NO FAIL</td> <td><input type="checkbox"/></td> </tr> <tr> <td>VHCL/S SEN • FR</td> <td>0Km/h</td> <td></td> </tr> <tr> <td>VHCL/S SEN • RR</td> <td>0Km/h</td> <td></td> </tr> <tr> <td>ENGINE SPEED</td> <td>0rpm</td> <td></td> </tr> <tr> <td>THRTL POS SEN</td> <td>0.4V</td> <td></td> </tr> <tr> <td>FLUID TEMP SE</td> <td>0.9V</td> <td></td> </tr> <tr> <td>BATTERY VOLT</td> <td>12.2V</td> <td></td> </tr> <tr> <td>2WD SW</td> <td>OFF</td> <td></td> </tr> <tr> <td>LOCK SWITCH</td> <td>OFF</td> <td></td> </tr> <tr> <td>N POSI SW TF</td> <td>OFF</td> <td></td> </tr> <tr> <td colspan="3" style="text-align: center;"><b>RECORD</b></td> </tr> </table>			☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>	VHCL/S SEN • FR	0Km/h		VHCL/S SEN • RR	0Km/h		ENGINE SPEED	0rpm		THRTL POS SEN	0.4V		FLUID TEMP SE	0.9V		BATTERY VOLT	12.2V		2WD SW	OFF		LOCK SWITCH	OFF		N POSI SW TF	OFF		<b>RECORD</b>		
☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>																																	
VHCL/S SEN • FR	0Km/h																																		
VHCL/S SEN • RR	0Km/h																																		
ENGINE SPEED	0rpm																																		
THRTL POS SEN	0.4V																																		
FLUID TEMP SE	0.9V																																		
BATTERY VOLT	12.2V																																		
2WD SW	OFF																																		
LOCK SWITCH	OFF																																		
N POSI SW TF	OFF																																		
<b>RECORD</b>																																			
SMT053D																																			
4. Check if the value changes according to accelerating and decelerating the vehicle.																																			
<b>OK or NG</b>																																			
OK	▶	GO TO 6.																																	
NG	▶	GO TO 7.																																	

# VEHICLE SPEED SENSOR (FRONT REVOLUTION SENSOR)

Diagnostic Procedure (Cont'd)
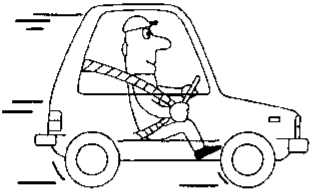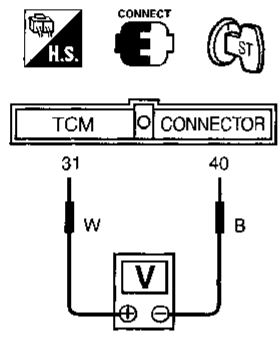
<b>5</b>	<b>CHECK INPUT SIGNAL (WITHOUT CONSULT)</b>
<p>1. Start engine.                  2. Check voltage between TCM harness connector terminals 31 and 40.                  (Measure it in AC range.)  <b>Voltage:</b>                  0 km/h (0 MPH): 0V                  30 km/h (19 MPH): More than 1V                  (Voltage rises gradually in response to vehicle speed.)</p>	
	
	
SMT218D	
<b>OK or NG</b>	
OK	▶ GO TO 6.
NG	▶ GO TO 7.


<b>7</b>	<b>CHECK HARNESS CONTINUITY BETWEEN TCM AND FRONT REVOLUTION SENSOR SUB-HARNESS CONNECTOR</b>
<b>OK or NG</b>	
OK	▶ GO TO 6.
NG	▶ Repair or replace sub-harness connector between TCM and front revolution sensor.

<b>6</b>	<b>PERFORM SELF-DIAGNOSIS AGAIN</b>
<p>After driving for a while, perform self-diagnosis again.                  Refer to "Trouble Diagnosis without CONSULT", TF-25.</p>	
<b>OK or NG</b>	
OK	▶ INSPECTION END
NG	▶ <ol style="list-style-type: none"> <li>1. Perform TCM input/output signal inspection. Refer to "TCM INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-47.</li> <li>2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</li> </ol>

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 AT  
**TF**  
 PD  
 AX  
 SU  
 BR  
 ST  
 RS  
 BT  
 HA  
 SC  
 EL  
 IDX

# 4WD SOLENOID VALVE

Diagnostic Procedure

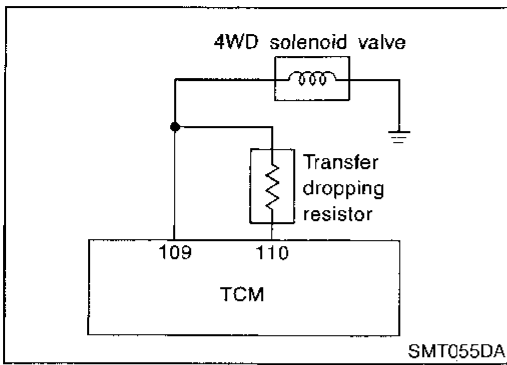

## Diagnostic Procedure

NBTF0020

<b>1</b>	<b>CHECK 4WD SOLENOID VALVE</b>
Refer to "4WD Solenoid Valve, Clutch Pressure Switch and Line Pressure Switch", "COMPONENT INSPECTION", TF-77.	
<b>OK or NG</b>	
OK	▶ GO TO 2.
NG	▶ <b>Check the following. If OK, repair or replace 4WD solenoid valve.</b> <ul style="list-style-type: none"> <li>Continuity of transfer sub-harness Refer to "TRANSFER TERMINAL CORD ASSEMBLY SUB-HARNESS CONNECTOR", "COMPONENT INSPECTION", TF-80.</li> </ul>

<b>2</b>	<b>CHECK POWER SOURCE CIRCUIT</b>
<ol style="list-style-type: none"> <li>Turn ignition switch to "OFF" position.</li> <li>Disconnect TCM harness connector.</li> <li>Check resistance between transfer terminal cord assembly sub-harness connector terminal 6 and TCM harness connector terminal 110.</li> </ol>	
Resistance: 11.2 - 12.8Ω	
<b>OK or NG</b>	
OK	▶ GO TO 3.
NG	▶ <b>Check the following.</b> <ul style="list-style-type: none"> <li>Transfer dropping resistor Refer to "Transfer Dropping Resistor", "COMPONENT INSPECTION", TF-78.</li> <li>Continuity between transfer terminal cord assembly sub-harness connector terminal 6 and TCM harness connector terminal 110</li> </ul>


<b>3</b>	<b>CHECK POWER SOURCE CIRCUIT</b>
<ol style="list-style-type: none"> <li>Turn ignition switch to "OFF" position.</li> <li>Check continuity between transfer terminal cord assembly sub-harness connector terminal 6 and TCM harness connector terminal 109.</li> </ol>	
<b>Continuity should exist.</b>	
<b>OK or NG</b>	
OK	▶ GO TO 4.
NG	▶ Repair or replace harness between transfer terminal cord assembly sub-harness connector terminal 6 and TCM harness connector terminal 109.

<b>4</b>	<b>PERFORM SELF-DIAGNOSIS</b>
After driving for a while, perform self-diagnosis. Refer to "Trouble Diagnosis without CONSULT", TF-25 and "Trouble Diagnosis with CONSULT", TF-28.	
<b>OK or NG</b>	
OK	▶ INSPECTION END
NG	▶ <ol style="list-style-type: none"> <li>Perform TCM input/output signal inspection. Refer to "TCM INSPECTION TABLE", TF-47.</li> <li>If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</li> </ol>

# 2-4WD SHIFT SOLENOID VALVE AND 4WD SHIFT SWITCH

Diagnostic Procedure

NBTF0021

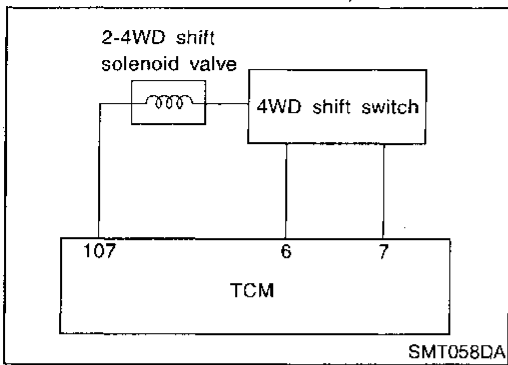

## Diagnostic Procedure

<b>1</b>	<b>CHECK 2-4WD SHIFT SOLENOID VALVE AND 4WD SHIFT SWITCH</b>	
Refer to "2-4WD Shift Solenoid Valve and Transfer Fluid Temperature Sensor", "COMPONENT INSPECTION", TF-77.		
<b>OK or NG</b>		
OK	▶	GO TO 2.
NG	▶	<b>Check the following. If OK, repair or replace 2-4WD shift solenoid valve and 4WD shift switch.</b> <ul style="list-style-type: none"> <li>Continuity of transfer sub-harness Refer to "TRANSFER TERMINAL CORD ASSEMBLY SUB-HARNESS CONNECTOR", "COMPONENT INSPECTION", TF-80.</li> </ul>

<b>2</b>	<b>CHECK INPUT SIGNAL (WITH CONSULT)</b>																															
<ol style="list-style-type: none"> <li>Select "ECU INPUT SIGNALS" in Data Monitor.</li> <li>Read out ON/OFF status of "2WD SW" and "LOCK SWITCH". Refer to "REFERENCE VALUE IN DATA MONITOR MODE", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION", TF-33.</li> </ol>																																
<table border="1" style="width: 100%;"> <tr> <td style="text-align: center;">☆ MONITOR</td> <td style="text-align: center;">☆ NO FAIL</td> <td style="text-align: center;">▼</td> </tr> <tr> <td>VHCL/S SEN • FR</td> <td>0Km/h</td> <td></td> </tr> <tr> <td>VHCL/S SEN • RR</td> <td>0Km/h</td> <td></td> </tr> <tr> <td>ENGINE SPEED</td> <td>0rpm</td> <td></td> </tr> <tr> <td>THRTL POS SEN</td> <td>0.4V</td> <td></td> </tr> <tr> <td>FLUID TEMP SE</td> <td>0.9V</td> <td></td> </tr> <tr> <td>BATTERY VOLT</td> <td>12.2V</td> <td></td> </tr> <tr> <td>2WD SW</td> <td>OFF</td> <td></td> </tr> <tr> <td>LOCK SWITCH</td> <td>OFF</td> <td></td> </tr> <tr> <td>N POSI SW TF</td> <td>OFF</td> <td></td> </tr> </table>			☆ MONITOR	☆ NO FAIL	▼	VHCL/S SEN • FR	0Km/h		VHCL/S SEN • RR	0Km/h		ENGINE SPEED	0rpm		THRTL POS SEN	0.4V		FLUID TEMP SE	0.9V		BATTERY VOLT	12.2V		2WD SW	OFF		LOCK SWITCH	OFF		N POSI SW TF	OFF	
☆ MONITOR	☆ NO FAIL	▼																														
VHCL/S SEN • FR	0Km/h																															
VHCL/S SEN • RR	0Km/h																															
ENGINE SPEED	0rpm																															
THRTL POS SEN	0.4V																															
FLUID TEMP SE	0.9V																															
BATTERY VOLT	12.2V																															
2WD SW	OFF																															
LOCK SWITCH	OFF																															
N POSI SW TF	OFF																															
<b>RECORD</b>																																
<b>OK or NG</b>																																
OK	▶	<ol style="list-style-type: none"> <li>Perform TCM input/output signal inspection. Refer to "TCM INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-47.</li> <li>If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</li> </ol>																														
NG	▶	GO TO 3.																														

SMT059D

GI  
MA  
EM  
LC  
EC  
FE  
AT  
TF  
PD  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

## 2-4WD SHIFT SOLENOID VALVE AND 4WD SHIFT SWITCH

Diagnostic Procedure (Cont'd)

<b>3</b>	<b>CHECK 4WD SHIFT SWITCH POWER SOURCE</b>
<ol style="list-style-type: none"> <li>1. Disconnect 4WD shift switch harness connector.</li> <li>2. Turn ignition switch to "ON" position.</li> <li>3. Check voltage between 4WD shift switch harness connector terminal 1 and body ground.</li> </ol> <p style="margin-left: 20px;"><b>Voltage: Battery voltage</b></p> <div style="text-align: center;"> <p>4WD shift switch harness connector (M105)</p> <p style="text-align: right;">SMT060D</p> </div> <p style="text-align: center; margin-top: 10px;"><b>OK or NG</b></p>	
OK	▶ GO TO 4.
NG	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>• No. 18 fuse (10A)</li> <li>• Continuity between ignition switch and 4WD shift switch</li> </ul>


<b>4</b>	<b>CHECK HARNESS CONTINUITY</b>
<ol style="list-style-type: none"> <li>1. Turn ignition switch to "OFF" position.</li> <li>2. Check continuity between the following terminals: <ul style="list-style-type: none"> <li>• TCM 6 and 4WD shift switch 2</li> <li>• TCM 7 and 4WD shift switch 5</li> <li>• TCM 107 and Transfer terminal cord assembly sub-harness connector 4</li> <li>• 4WD shift switch 4 and Transfer terminal cord assembly sub-harness connector 5</li> </ul> </li> </ol> <p style="margin-left: 20px;">Continuity should exist.</p> <div style="text-align: center;"> <p style="text-align: right;">SMT223D</p> </div> <p style="text-align: center; margin-top: 10px;"><b>OK or NG</b></p>	
OK	▶ GO TO 5.
NG	▶ Repair harness or connector.

<b>5</b>	<b>PERFORM SELF-DIAGNOSIS AGAIN</b>
<p>After driving for a while, perform self-diagnosis again. Refer to "Trouble Diagnosis without CONSULT", TF-25.</p> <p style="text-align: center;"><b>OK or NG</b></p>	
OK	▶ INSPECTION END
NG	<ol style="list-style-type: none"> <li>1. Perform TCM input/output signal inspection. Refer to "TCM INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-47.</li> <li>2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</li> </ol>

# TRANSFER MOTOR AND TRANSFER MOTOR RELAY

Diagnostic Procedure

NBTF0022

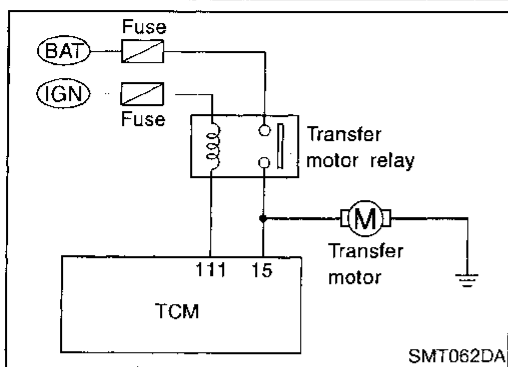

## Diagnostic Procedure

<b>1</b>	<b>CHECK TRANSFER MOTOR AND TRANSFER MOTOR RELAY</b>	
Refer to "Transfer Motor" and "Transfer Motor Relay", "COMPONENT INSPECTION", TF-79.		
<b>OK or NG</b>		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

<b>2</b>	<b>CHECK CONTINUITY</b>	
Check the following.		
<ul style="list-style-type: none"> <li>Continuity of transfer sub-harness</li> </ul> Refer to "TRANSFER SWITCH ASSEMBLY SUB-HARNESS CONNECTOR", "COMPONENT INSPECTION", TF-80.		
<b>OK or NG</b>		
OK	▶	Repair or replace transfer motor and transfer motor relay.
NG	▶	Repair or replace transfer sub-harness.

<b>3</b>	<b>CHECK INPUT SIGNAL (WITH CONSULT)</b>																												
1. Select "ECU INPUT SIGNALS" in Data Monitor. 2. Read out ON/OFF status of "MOTOR RELAY". Refer to "REFERENCE VALUE IN DATA MONITOR MODE", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION", TF-33.																													
<table border="1" style="width: 100%;"> <tr> <td>☆ MONITOR</td> <td>☆ NO FAIL</td> <td><input type="checkbox"/></td> </tr> <tr> <td>4WD MODE</td> <td>AUTO</td> <td></td> </tr> <tr> <td>COMP CL TORQ</td> <td>4.0Kgm</td> <td></td> </tr> <tr> <td>DUTY SOLENOID</td> <td>94%</td> <td></td> </tr> <tr> <td>2-4WD SOL</td> <td>O N</td> <td></td> </tr> <tr> <td>VHCL/S COMP</td> <td>0Km/h</td> <td></td> </tr> <tr> <td>THROTTLE POSI</td> <td>0.0/8</td> <td></td> </tr> <tr> <td>MOTOR RELAY</td> <td>OFF</td> <td></td> </tr> <tr> <td>4WD FAIL LAMP</td> <td>O N</td> <td></td> </tr> </table>			☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>	4WD MODE	AUTO		COMP CL TORQ	4.0Kgm		DUTY SOLENOID	94%		2-4WD SOL	O N		VHCL/S COMP	0Km/h		THROTTLE POSI	0.0/8		MOTOR RELAY	OFF		4WD FAIL LAMP	O N	
☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>																											
4WD MODE	AUTO																												
COMP CL TORQ	4.0Kgm																												
DUTY SOLENOID	94%																												
2-4WD SOL	O N																												
VHCL/S COMP	0Km/h																												
THROTTLE POSI	0.0/8																												
MOTOR RELAY	OFF																												
4WD FAIL LAMP	O N																												
<b>RECORD</b>																													
SMT047D																													
3. When the value is different from standard value although ON/OFF switching occurs, check the following items. <ul style="list-style-type: none"> <li>Inhibitor switch, throttle position sensor, closed throttle position switch circuits</li> </ul> Refer to AT section ("TROUBLE DIAGNOSES").																													
<b>OK or NG</b>																													
OK	▶	GO TO 4.																											
NG	▶	1. Perform TCM input/output signal inspection. Refer to "TCM INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-47. 2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.																											

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL


IDX



# TRANSFER MOTOR AND TRANSFER MOTOR RELAY

Diagnostic Procedure (Cont'd)
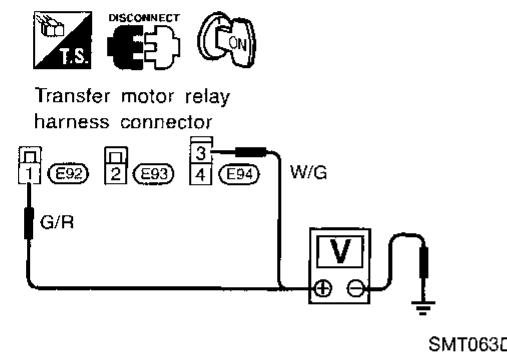
<b>4</b>	<b>CHECK TRANSFER MOTOR RELAY POWER SOURCE</b>
<ol style="list-style-type: none"> <li>1. Disconnect transfer motor relay harness connector.</li> <li>2. Turn ignition switch to "ON" position.</li> <li>3. Check voltage between transfer motor relay harness connector terminals 1, 3 and body ground.</li> </ol> <p><b>Voltage: Battery voltage</b></p>  <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ <b>Check the following.</b> <ul style="list-style-type: none"> <li>• No. 55 fuse (20A)</li> <li>• No. 18 fuse (10A)</li> <li>• Harness continuity between fuse and transfer motor relay</li> </ul>
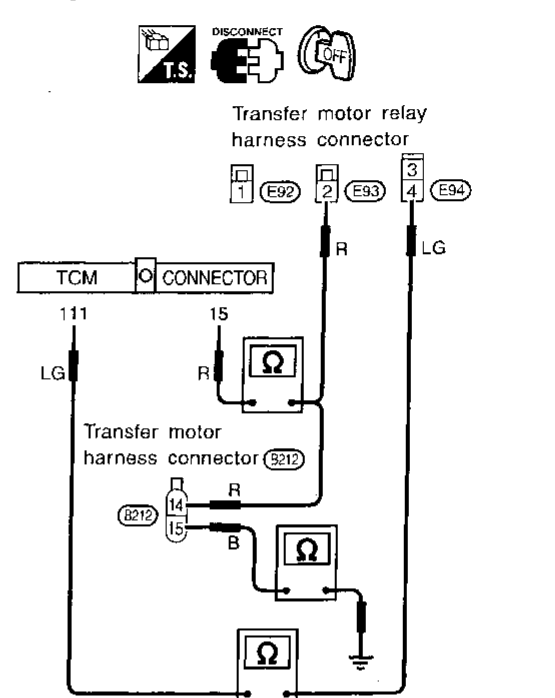
<b>5</b>	<b>CHECK HARNESS CONTINUITY</b>
<ol style="list-style-type: none"> <li>1. Turn ignition switch to "OFF" position.</li> <li>2. Check continuity between the following terminals. <ul style="list-style-type: none"> <li>• TCM 15 and Transfer motor 14</li> <li>• TCM 15 and Transfer motor relay 2</li> <li>• TCM 111 and Transfer motor relay 4</li> <li>• Transfer motor 15 and body ground</li> </ul>                     Continuity should exist.                 </li> </ol>  <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 6.
NG	▶ Repair or replace harness or connector.


<b>6</b>	<b>PERFORM SELF-DIAGNOSIS AGAIN</b>
<p>After driving for a while, perform self-diagnosis again. Refer to "Trouble Diagnosis without CONSULT", TF-25 and "Trouble Diagnosis with CONSULT", TF-28.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ INSPECTION END
NG	▶ <ol style="list-style-type: none"> <li>1. Perform TCM input/output signal inspection. Refer to "TCM INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-47.</li> <li>2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</li> </ol>

# TRANSFER FLUID TEMPERATURE SENSOR

Diagnostic Procedure

NSTF0023

## Diagnostic Procedure

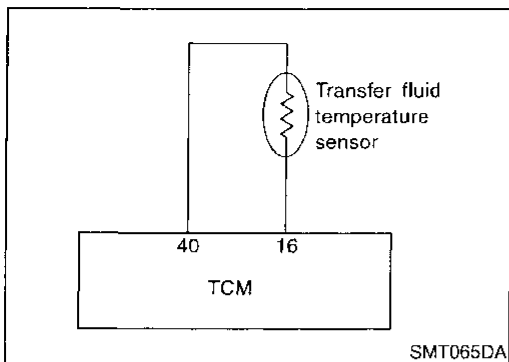

<b>1</b>	<b>CHECK TRANSFER FLUID TEMPERATURE SENSOR</b>
Refer to "2-4WD Shift Solenoid Valve and Transfer Fluid Temperature Sensor", "COMPONENT INSPECTION", TF-77.	
<b>OK or NG</b>	
OK	▶ GO TO 3.
NG	▶ GO TO 2.

<b>2</b>	<b>CHECK CONTINUITY</b>
Check the following.	
<ul style="list-style-type: none"> <li>Continuity of transfer sub-harness</li> </ul> Refer to "TRANSFER TERMINAL CORD ASSEMBLY SUB-HARNESS CONNECTOR", "COMPONENT INSPECTION", TF-80.	
<b>OK or NG</b>	
OK	▶ Repair or replace fluid temperature sensor.
NG	▶ Repair or replace transfer sub-harness.

<b>3</b>	<b>CHECK INPUT SIGNAL</b>
WITH CONSULT	▶ GO TO 4.
WITHOUT CONSULT	▶ GO TO 5.

<b>4</b>	<b>CHECK INPUT SIGNAL (WITH CONSULT)</b>																														
1. Start engine. 2. Select "ECU INPUT SIGNALS" in Data Monitor. 3. Read out the value of "FLUID TEMP SE". Refer to "REFERENCE VALUE IN DATA MONITOR MODE", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION", TF-33.																															
<b>Voltage:</b> 80°C (176°F): Approx. 0.5V 20°C (68°F): Approx. 1.5V																															
<table border="1"> <tr> <td>☆ MONITOR</td> <td>☆ NO FAIL</td> <td><input type="checkbox"/></td> </tr> <tr> <td>VHCL/S SEN • FR</td> <td>0Km/h</td> <td></td> </tr> <tr> <td>VHCL/S SEN • RR</td> <td>0Km/h</td> <td></td> </tr> <tr> <td>ENGINE SPEED</td> <td>0rpm</td> <td></td> </tr> <tr> <td>THRTL POS SEN</td> <td>0.4V</td> <td></td> </tr> <tr> <td>FLUID TEMP SE</td> <td>0.9V</td> <td></td> </tr> <tr> <td>BATTERY VOLT</td> <td>12.2V</td> <td></td> </tr> <tr> <td>2WD SW</td> <td>OFF</td> <td></td> </tr> <tr> <td>LOCK SWITCH</td> <td>OFF</td> <td></td> </tr> <tr> <td>N POSI SW TF</td> <td>OFF</td> <td></td> </tr> </table>		☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>	VHCL/S SEN • FR	0Km/h		VHCL/S SEN • RR	0Km/h		ENGINE SPEED	0rpm		THRTL POS SEN	0.4V		FLUID TEMP SE	0.9V		BATTERY VOLT	12.2V		2WD SW	OFF		LOCK SWITCH	OFF		N POSI SW TF	OFF	
☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>																													
VHCL/S SEN • FR	0Km/h																														
VHCL/S SEN • RR	0Km/h																														
ENGINE SPEED	0rpm																														
THRTL POS SEN	0.4V																														
FLUID TEMP SE	0.9V																														
BATTERY VOLT	12.2V																														
2WD SW	OFF																														
LOCK SWITCH	OFF																														
N POSI SW TF	OFF																														
<b>RECORD</b>																															
<b>OK or NG</b>																															
OK	▶ GO TO 6.																														
NG	▶ Check the following. <ul style="list-style-type: none"> <li>Continuity between TCM and transfer terminal cord assembly sub-harness connector</li> </ul>																														

SMT059D

CI  
MA  
EM  
LC  
EC  
FE  
AT  
TF  
PD  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

# TRANSFER FLUID TEMPERATURE SENSOR

Diagnostic Procedure (Cont'd)

<b>5</b>	<b>CHECK INPUT SIGNAL (WITHOUT CONSULT)</b>	
<p>1. Turn ignition switch to "ON" position.                  2. Check voltage between TCM harness connector terminals 16 and 40.  <b>Voltage:</b>                  80°C (176°F): Approx. 0.5V                  20°C (68°F): Approx. 1.5V</p>		
SMT227D		
<b>OK or NG</b>		
OK	▶	GO TO 6.
NG	▶	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>Continuity between TCM and transfer terminal cord assembly sub-harness connector</li> </ul>


<b>6</b>	<b>PERFORM SELF-DIAGNOSIS AGAIN</b>	
<p>After driving for a while, perform self-diagnosis again.                  Refer to "Trouble Diagnosis without CONSULT", TF-25.</p>		
<b>OK or NG</b>		
OK	▶	INSPECTION END
NG	▶	<p>1. Perform TCM input/output signal inspection. Refer to "TCM INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-47.</p> <p>2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</p>

# ATP SWITCH, WAIT DETECTION SWITCH AND NEUTRAL-4LO SWITCH

Diagnostic Procedure

NBTF0024

## Diagnostic Procedure

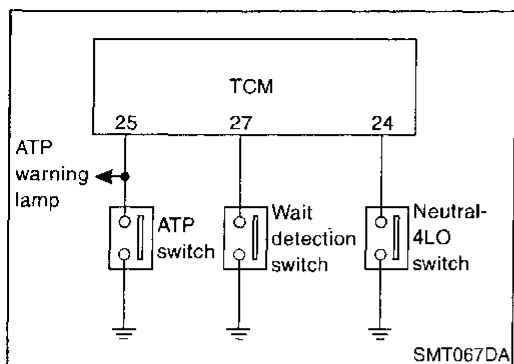

<b>1</b>	<b>CHECK ATP SWITCH, WAIT DETECTION SWITCH AND NEUTRAL-4LO SWITCH</b>
Refer to "ATP Switch, Neutral-4LO Switch and Wait Detection Switch", "COMPONENT INSPECTION", TF-78.	
<b>OK or NG</b>	
OK	▶ GO TO 3.
NG	▶ GO TO 2.

<b>2</b>	<b>CHECK CONTINUITY OF TRANSFER SUB-HARNESS</b>
Check the following.	
<ul style="list-style-type: none"> <li>Continuity of transfer sub-harness</li> </ul> Refer to "TRANSFER SWITCH ASSEMBLY SUB-HARNESS CONNECTOR", "COMPONENT INSPECTION", TF-80.	
<b>OK or NG</b>	
OK	▶ Repair or replace ATP switch, wait detection switch or neutral-4LO switch.
NG	▶ Repair or replace transfer sub-harness.

<b>3</b>	<b>CHECK INPUT SIGNAL</b>
WITH CONSULT	▶ GO TO 4.
WITHOUT CONSULT	▶ GO TO 5.

<b>4</b>	<b>CHECK INPUT SIGNAL (WITH CONSULT)</b>																														
1. Select "ECU INPUT SIGNALS" in Data Monitor. 2. Read out the ON/OFF status of "ATP SW", "WAIT DETCT SW" and "NEUTRAL SW". Refer to "REFERENCE VALUE IN DATA MONITOR MODE", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION", TF-33.																															
<table border="1"> <tr> <td>☆ MONITOR</td> <td>☆ NO FAIL</td> <td>▲</td> </tr> <tr> <td>LINE PRES SW</td> <td>OFF</td> <td></td> </tr> <tr> <td>CL PRES SW</td> <td>OFF</td> <td></td> </tr> <tr> <td>ATP SWITCH</td> <td>OFF</td> <td></td> </tr> <tr> <td>N POSI SW AT</td> <td>OFF</td> <td></td> </tr> <tr> <td>R POSI SW AT</td> <td>OFF</td> <td></td> </tr> <tr> <td>P POSI SW AT</td> <td>O N</td> <td></td> </tr> <tr> <td>CLOSED THL/SW</td> <td>O N</td> <td></td> </tr> <tr> <td>ABS OPER SW</td> <td>OFF</td> <td></td> </tr> <tr> <td>WAIT DETCT SW</td> <td>OFF</td> <td></td> </tr> </table>		☆ MONITOR	☆ NO FAIL	▲	LINE PRES SW	OFF		CL PRES SW	OFF		ATP SWITCH	OFF		N POSI SW AT	OFF		R POSI SW AT	OFF		P POSI SW AT	O N		CLOSED THL/SW	O N		ABS OPER SW	OFF		WAIT DETCT SW	OFF	
☆ MONITOR	☆ NO FAIL	▲																													
LINE PRES SW	OFF																														
CL PRES SW	OFF																														
ATP SWITCH	OFF																														
N POSI SW AT	OFF																														
R POSI SW AT	OFF																														
P POSI SW AT	O N																														
CLOSED THL/SW	O N																														
ABS OPER SW	OFF																														
WAIT DETCT SW	OFF																														
<b>RECORD</b>																															
SMT068D																															
<b>OK or NG</b>																															
OK	▶ GO TO 6.																														
NG	▶ <b>Check the following.</b> <ul style="list-style-type: none"> <li>Harness continuity between transfer switch assembly sub-harness connector and TCM</li> <li>Continuity between transfer switch assembly sub-harness connector and body ground</li> </ul>																														

GI  
MA  
EM  
LC  
EC  
FE  
AT  
TF  
PD  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
DX

# ATP SWITCH, WAIT DETECTION SWITCH AND NEUTRAL-4LO SWITCH


Diagnostic Procedure (Cont'd)

<b>5</b>	<b>CHECK INPUT SIGNAL (WITHOUT CONSULT)</b>
<p>1. Turn ignition switch to "OFF" position.</p> <p>2. Operate T/F control lever and check continuity between the following terminals.</p> <p><b>Continuity:</b></p> <p><b>Terminal 25 (ATP switch) and body ground</b>          "H" position: No continuity should exist.          Between "H" and "4LO": Continuity should exist.          "4LO" position: No continuity should exist.</p> <p><b>Terminal 24 (Neutral-4LO switch) and body ground</b>          "H" position: No continuity should exist.          "4LO" position: Continuity should exist.</p> <p><b>Terminal 27 (Wait detection switch) and body ground</b>          "H" position: No continuity should exist. (*1)          "4LO" position: Continuity should exist.</p> <p>*1: After shifting from "4LO" to "H", continuity exists while "Wait" function is operating in "H" position.          (No continuity exists when "Wait" function is canceled.)</p>	
<p>SMT229DA</p>	
<p>SMT120D</p>	
<b>OK or NG</b>	
OK	▶ GO TO 6.
NG	▶ <b>Check the following.</b> <ul style="list-style-type: none"> <li>● Harness continuity between transfer switch assembly sub-harness connector and TCM</li> <li>● Continuity between transfer switch assembly sub-harness connector and body ground</li> </ul>

<b>6</b>	<b>PERFORM SELF-DIAGNOSIS AGAIN</b>
<p>After driving for a while, perform self-diagnosis again. Refer to "Trouble Diagnosis without CONSULT", TF-25.</p>	
<b>OK or NG</b>	
OK	▶ INSPECTION END
NG	▶ <ol style="list-style-type: none"> <li>1. Perform TCM input/output signal inspection. Refer to "TCM INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-47.</li> <li>2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</li> </ol>

NBTf0025

## Diagnostic Procedure

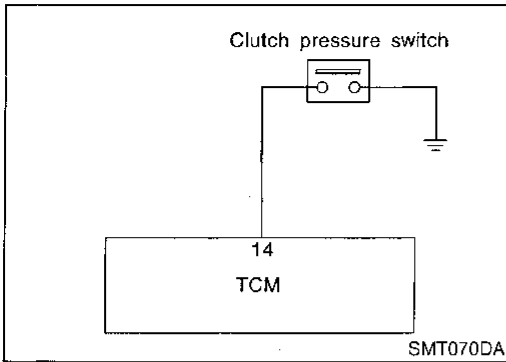

<b>1</b>	<b>CHECK MALFUNCTION</b>		
Is this malfunction detected only while driving in reverse?			
Yes or No			
Yes	▶	<b>CHECK A/T INHIBITOR "R" POSITION SWITCH.</b> Refer to AT section ("TROUBLE DIAGNOSES").	
No	▶	GO TO 2.	

<b>2</b>	<b>CHECK OTHER MALFUNCTION</b>		
Are other malfunctions also detected by self-diagnosis and CONSULT?			
Refer to "Trouble Diagnosis without CONSULT", TF-25 and "Trouble Diagnosis with CONSULT", TF-28.			
Yes or No			
Yes	▶	<b>CHECK FOR OTHER MALFUNCTIONS.</b> (When other malfunctions are eliminated, clutch pressure switch malfunction display may disappear.)	
No	▶	GO TO 3.	

<b>3</b>	<b>CHECK 2-4WD SHIFT SOLENOID VALVE AND 4WD SHIFT SWITCH CIRCUITS</b>		
Check 2-4WD shift solenoid valve and 4WD shift switch circuits.			
OK or NG			
OK	▶	GO TO 4.	
NG	▶	Check, repair or replace faulty parts.	

<b>4</b>	<b>CHECK INPUT SIGNAL</b>		
WITH CONSULT			
WITH CONSULT	▶	GO TO 5.	
WITHOUT CONSULT			
WITHOUT CONSULT	▶	GO TO 6.	

<b>5</b>	<b>CHECK INPUT SIGNAL (WITH CONSULT)</b>																																			
<ol style="list-style-type: none"> <li>1. Turn ignition switch to "ON" position.</li> <li>2. Select "ECU INPUT SIGNALS" in Data Monitor.</li> <li>3. Read out ON/OFF status of "CL PRES SW". Refer to "REFERENCE VALUE IN DATA MONITOR MODE", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION", TF-33.</li> </ol>																																				
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">☆ MONITOR</td> <td style="text-align: center;">☆ NO FAIL</td> <td style="text-align: center;">▲</td> </tr> <tr> <td>LINE PRES SW</td> <td style="text-align: center;">OFF</td> <td></td> </tr> <tr> <td>CL PRES SW</td> <td style="text-align: center;">OFF</td> <td></td> </tr> <tr> <td>ATP SWITCH</td> <td style="text-align: center;">OFF</td> <td></td> </tr> <tr> <td>N POSI SW AT</td> <td style="text-align: center;">OFF</td> <td></td> </tr> <tr> <td>R POSI SW AT</td> <td style="text-align: center;">OFF</td> <td></td> </tr> <tr> <td>P POSI SW AT</td> <td style="text-align: center;">O N</td> <td></td> </tr> <tr> <td>CLOSED THL/SW</td> <td style="text-align: center;">O N</td> <td></td> </tr> <tr> <td>ABS OPER SW</td> <td style="text-align: center;">OFF</td> <td></td> </tr> <tr> <td>WAIT DETCT SW</td> <td style="text-align: center;">OFF</td> <td></td> </tr> <tr> <td colspan="3" style="text-align: center;"><b>RECORD</b></td> </tr> </table>				☆ MONITOR	☆ NO FAIL	▲	LINE PRES SW	OFF		CL PRES SW	OFF		ATP SWITCH	OFF		N POSI SW AT	OFF		R POSI SW AT	OFF		P POSI SW AT	O N		CLOSED THL/SW	O N		ABS OPER SW	OFF		WAIT DETCT SW	OFF		<b>RECORD</b>		
☆ MONITOR	☆ NO FAIL	▲																																		
LINE PRES SW	OFF																																			
CL PRES SW	OFF																																			
ATP SWITCH	OFF																																			
N POSI SW AT	OFF																																			
R POSI SW AT	OFF																																			
P POSI SW AT	O N																																			
CLOSED THL/SW	O N																																			
ABS OPER SW	OFF																																			
WAIT DETCT SW	OFF																																			
<b>RECORD</b>																																				
SMT068D																																				
OK or NG																																				
OK	▶	GO TO 7.																																		
NG	▶	<b>Check the following.</b> <ul style="list-style-type: none"> <li>• Continuity between TCM and transfer terminal cord assembly sub-harness connector</li> <li>• Transfer sub-harness</li> <li>• Clutch pressure switch</li> </ul> Refer to "4WD Solenoid Valve, Clutch Pressure Switch and Line Pressure Switch", "COMPONENT INSPECTION", TF-77.																																		

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA



SC

EL

IDX


# CLUTCH PRESSURE SWITCH

Diagnostic Procedure (Cont'd)

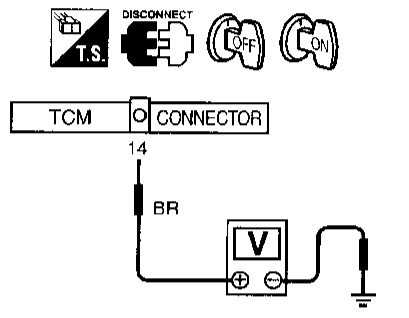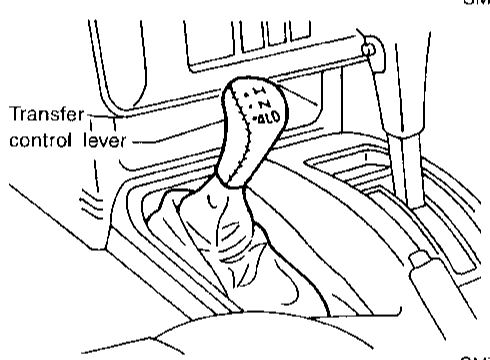6	<b>CHECK INPUT SIGNAL (WITHOUT CONSULT)</b>	7	<b>PERFORM SELF-DIAGNOSIS AGAIN</b>
<p>1. Turn ignition switch to "ON" position and set T/F control lever to "H" position.</p> <p>2. Check voltage between TCM harness connector terminal 14 and body ground.</p> <p><b>When 4WD shift switch is in "2WD":</b>  <b>Battery voltage should exist.</b></p> <p><b>When 4WD shift switch is in "AUTO" or "LOCK" and A/T selector lever is in "D":</b>  <b>"Wait" operating: Battery voltage should exist.</b>  <b>"Wait" not operating: Approx. 0 volts should exist.</b></p>  <p style="text-align: right;">SMT231D</p>  <p style="text-align: right;">SMT120D</p> <p style="text-align: center;"><b>OK or NG</b></p>		<p>1. Check hydraulic parts.</p> <p>2. After driving for a while, perform self-diagnosis again. Refer to "Trouble Diagnosis without CONSULT", TF-25.</p> <p style="text-align: center;"><b>OK or NG</b></p>	
<p>OK      ►</p>		<p>INSPECTION END</p>	
<p>NG      ►</p>		<p>1. Perform TCM input/output signal inspection. Refer to "TCM INSPECTION TABLE", TF-47.</p> <p>2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</p>	
<p>OK      ►</p>	<p>GO TO 7.</p>		
<p>NG      ►</p>	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● Continuity between TCM and transfer terminal cord assembly sub-harness connector</li> <li>● Transfer sub-harness</li> <li>● Clutch pressure switch</li> </ul> <p>Refer to "4WD Solenoid Valve, Clutch Pressure Switch and Line Pressure Switch", "COMPONENT INSPECTION", TF-77.</p>		

NBTF0026

## Diagnostic Procedure

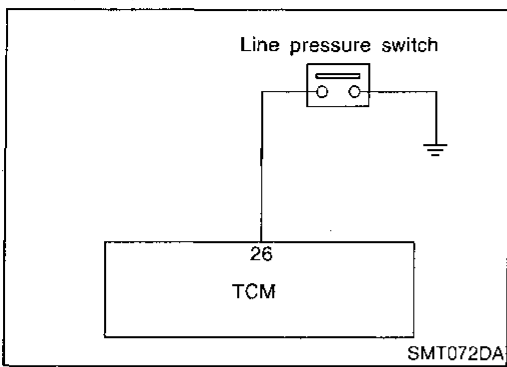

<b>1</b>	<b>CHECK MALFUNCTION</b>	
Is this malfunction detected only while driving in reverse?		
Yes or No		
Yes	▶	<b>CHECK A/T INHIBITOR "R" POSITION SWITCH.</b> Refer to AT section ("TROUBLE DIAGNOSES").
No	▶	GO TO 2.

<b>2</b>	<b>CHECK OTHER MALFUNCTIONS</b>	
Are other malfunctions also detected by self-diagnosis and CONSULT?		
Refer to "Trouble Diagnosis without CONSULT", TF-25 and "Trouble Diagnosis with CONSULT", TF-28.		
Yes or No		
Yes	▶	<b>CHECK FOR OTHER MALFUNCTIONS.</b> (When other malfunctions are eliminated, line pressure switch malfunction display may disappear.)
No	▶	GO TO 3.

<b>3</b>	<b>CHECK INPUT SIGNAL</b>	
WITH CONSULT	▶	GO TO 4.
WITHOUT CONSULT	▶	GO TO 5.



<b>4</b>	<b>CHECK INPUT SIGNAL (WITH CONSULT)</b>																															
1. Select "ECU INPUT SIGNALS" in Data Monitor. 2. Read out the ON/OFF status of "LINE PRES SW". Refer to "REFERENCE VALUE IN DATA MONITOR MODE", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION", TF-33.																																
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">☆ MONITOR</td> <td style="text-align: center;">☆ NO FAIL</td> <td style="text-align: center;">▲</td> </tr> <tr> <td>LINE PRES SW</td> <td style="text-align: center;">OFF</td> <td></td> </tr> <tr> <td>CL PRES SW</td> <td style="text-align: center;">OFF</td> <td></td> </tr> <tr> <td>ATP SWITCH</td> <td style="text-align: center;">OFF</td> <td></td> </tr> <tr> <td>N POSI SW AT</td> <td style="text-align: center;">OFF</td> <td></td> </tr> <tr> <td>R POSI SW AT</td> <td style="text-align: center;">OFF</td> <td></td> </tr> <tr> <td>P POSI SW AT</td> <td style="text-align: center;">O N</td> <td></td> </tr> <tr> <td>CLOSED THL/SW</td> <td style="text-align: center;">O N</td> <td></td> </tr> <tr> <td>ABS OPER SW</td> <td style="text-align: center;">OFF</td> <td></td> </tr> <tr> <td>WAIT DETCT SW</td> <td style="text-align: center;">OFF</td> <td></td> </tr> </table>			☆ MONITOR	☆ NO FAIL	▲	LINE PRES SW	OFF		CL PRES SW	OFF		ATP SWITCH	OFF		N POSI SW AT	OFF		R POSI SW AT	OFF		P POSI SW AT	O N		CLOSED THL/SW	O N		ABS OPER SW	OFF		WAIT DETCT SW	OFF	
☆ MONITOR	☆ NO FAIL	▲																														
LINE PRES SW	OFF																															
CL PRES SW	OFF																															
ATP SWITCH	OFF																															
N POSI SW AT	OFF																															
R POSI SW AT	OFF																															
P POSI SW AT	O N																															
CLOSED THL/SW	O N																															
ABS OPER SW	OFF																															
WAIT DETCT SW	OFF																															
<b>RECORD</b>																																
SMT068D																																
OK or NG																																
OK	▶	GO TO 6.																														
NG	▶	<b>Check the following.</b> <ul style="list-style-type: none"> <li>● Continuity between TCM and transfer terminal cord assembly sub-harness connector</li> <li>● Transfer sub-harness</li> <li>● Line pressure switch</li> </ul> Refer to "4WD Solenoid Valve, Clutch Pressure Switch and Line Pressure Switch", "COMPONENT INSPECTION", TF-77.																														

CI  
 MA  
 EM  
 LC  
 EC  
 PE  
 AT  
**TF**  
 PD  
 AX  
 SU  
 BR  
 ST  
 RS  
 BT  
 HA  
 SC  
 EL  
 DX



# LINE PRESSURE SWITCH


Diagnostic Procedure (Cont'd)
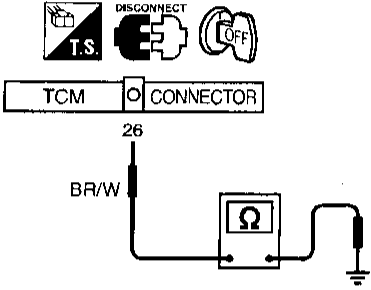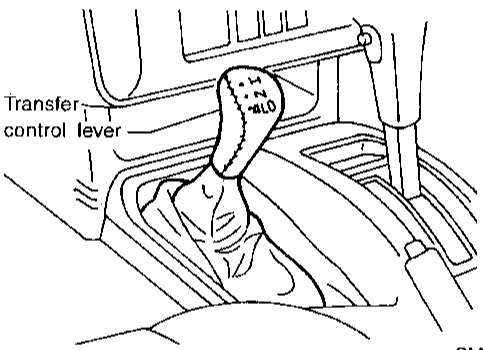
<b>5</b>	<b>CHECK INPUT SIGNAL (WITHOUT CONSULT)</b>
<p>1. Turn ignition switch to "OFF" position.                  2. Disconnect TCM harness connector.                  3. Check continuity between TCM harness connector terminal 26 and body ground.</p> <p><b>After the vehicle has been left for at least 5 minutes in a room temperature with ignition switch "OFF":</b>  <b>No continuity should exist.</b></p> <p><b>With ignition switch in "ON", T/F control lever in "H", 4WD shift switch in "AUTO" or "LOCK" and A/T selector lever in "D":</b>  <b>Continuity should exist.</b></p>	
	
	
<b>OK or NG</b>	
OK	▶ GO TO 6.
NG	<p>▶ <b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● Continuity between TCM and transfer terminal cord assembly sub-harness connector</li> <li>● Transfer sub-harness</li> <li>● Line pressure switch</li> </ul> <p>Refer to "4WD Solenoid Valve, Clutch Pressure Switch and Line Pressure Switch", "COMPONENT INSPECTION", TF-77.</p>

<b>6</b>	<b>PERFORM SELF-DIAGNOSIS AGAIN</b>
<p>1. Check hydraulic parts.                  2. After driving for a while, perform self-diagnosis again. Refer to "Trouble Diagnosis without CONSULT", TF-25.</p>	
<b>OK or NG</b>	
OK	▶ INSPECTION END
NG	<p>▶ 1. Perform TCM input/output signal inspection. Refer to TF-47.                  2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</p>

## Diagnostic Procedure

NBTF0027

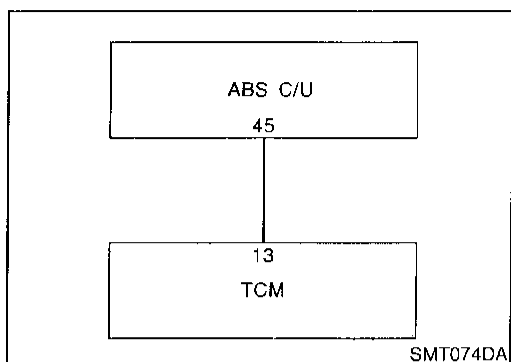

<b>1</b>	<b>CHECK INPUT SIGNAL</b>	
WITH CONSULT	▶	GO TO 2.
WITHOUT CONSULT	▶	GO TO 3.

<b>2</b>	<b>CHECK INPUT SIGNAL (WITH CONSULT)</b>	
<ol style="list-style-type: none"> <li>1. Turn ignition switch to "OFF" position.</li> <li>2. Disconnect ABS control unit harness connector.</li> <li>3. Turn ignition switch to "ON" position.</li> <li>4. Move T/F control lever to "H" position.</li> <li>5. Set 4WD shift switch to "AUTO" position.</li> <li>6. Read out the status of "ABS OPER SW" and "ABS CONTROL OPERATION".</li> </ol> <p><b>ABS operation switch: OFF</b>  <b>ABS control operation: OFF</b></p> <ol style="list-style-type: none"> <li>7. Connect ABS control unit harness connector terminal 45 to ground and confirm the displayed status.</li> </ol> <p><b>ABS operation switch: ON</b>  <b>ABS control operation: ON</b></p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>☆ MONITOR    ☆ NO FAIL    <input type="checkbox"/></p> <p>ABS OPER SW    OFF</p> <p>ABS CONT OPER    OFF</p> </div> <div style="border: 1px solid black; padding: 5px; margin: 10px 0; text-align: center;"> <p><b>RECORD</b></p> </div> <p style="text-align: right; margin-right: 20px;">SMT075D</p> <p style="text-align: center;"><b>OK or NG</b></p>		
OK	▶	GO TO 4.
NG	▶	Repair or replace harness or connector between ABS control unit and TCM.

<b>3</b>	<b>CHECK INPUT SIGNAL (WITHOUT CONSULT)</b>	
<ol style="list-style-type: none"> <li>1. Turn ignition switch to "OFF" position.</li> <li>2. Disconnect ABS control unit harness connector.</li> <li>3. Turn ignition switch to "OFF" position.</li> <li>4. Disconnect ABS control unit and TCM harness connectors.</li> <li>5. Check continuity between TCM harness connector terminal 13 and ABS control unit harness connector terminal 45.</li> </ol> <p><b>Continuity should exist.</b></p> <ol style="list-style-type: none"> <li>6. Check continuity between TCM harness connector terminal 13, ABS control unit harness connector terminal 45 and body ground.</li> </ol> <p><b>No continuity should exist.</b></p> <div style="text-align: center; margin: 10px 0;"> <p style="font-size: small;">SMT235DA</p> </div> <p style="text-align: center;"><b>OK or NG</b></p>		
OK	▶	GO TO 4.
NG	▶	Repair or replace harness or connector between ABS control unit and TCM.

GI  
MA  
EM  
LC  
EC  
FE  
AT  
TF  
PD  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

# ABS OPERATION SIGNAL

Diagnostic Procedure (Cont'd)

4		CHECK COMMUNICATION LINE
Check communication line between ABS control unit and TCM. (Refer to "Diagnostic Procedure 15", "TROUBLE DIAGNOSES FOR SYMPTOMS" in BR section.)		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Check, repair or replace faulty parts.

5		PERFORM SELF-DIAGNOSIS AGAIN
After driving for a while, perform self-diagnosis again. Refer to "Trouble Diagnosis without CONSULT", TF-25 and "Trouble Diagnosis with CONSULT", TF-28.		
OK or NG		
OK	▶	INSPECTION END
NG	▶	<ol style="list-style-type: none"><li>1. Perform TCM input/output signal inspection. Refer to "TCM INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-47.</li><li>2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</li></ol>

## Diagnostic Procedure

NBT0028

<b>1</b>	<b>CHECK TCM POWER SOURCE</b>	
<p>1. Turn ignition switch to "OFF" position and perform self-diagnosis again. Refer to "Trouble Diagnosis without CONSULT", TF-25 and "Trouble Diagnosis with CONSULT", TF-28.</p> <p>2. Turn ignition switch to "OFF" position.</p> <p>3. Disconnect TCM harness connector.</p> <p>4. Check voltage between TCM harness connector terminal 42 and body ground.</p> <p style="text-align: center;"><b>Voltage: Battery voltage</b></p> <div style="text-align: center;"> </div> <p style="text-align: right;">SMT236D</p> <p style="text-align: center;"><b>OK or NG</b></p>		
OK	▶	GO TO 2.
NG	▶	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● No. 24 fuse (7.5A)</li> <li>● Harness continuity between fuse and TCM</li> </ul>

<b>2</b>	<b>PERFORM SELF-DIAGNOSIS AGAIN</b>	
<p>After driving for a while, perform self-diagnosis again. Refer to "Trouble Diagnosis without CONSULT", TF-25 and "Trouble Diagnosis with CONSULT", TF-28.</p> <p style="text-align: center;"><b>OK or NG</b></p>		
OK	▶	INSPECTION END
NG	▶	<p>1. Perform TCM input/output signal inspection. Refer to "TCM INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-47.</p> <p>2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</p>

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX


# TROUBLE DIAGNOSES FOR SYMPTOMS

## Symptom 1. 4WD Shift Indicator Lamp Does Not Turn ON

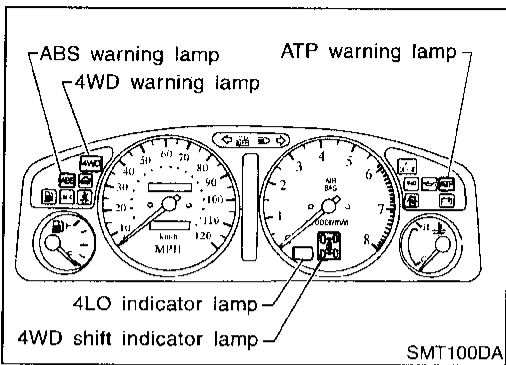

### Symptom 1. 4WD Shift Indicator Lamp Does Not Turn ON

**SYMPTOM:** Although ignition switch is turned "ON", all the 4WD shift indicator lamps do not turn ON for 1 second. NBTF0029

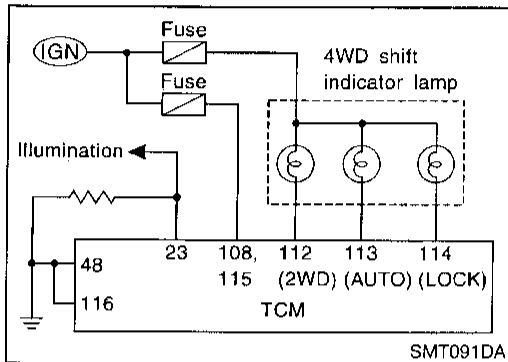

1	CHECK TCM POWER SOURCE
<ol style="list-style-type: none"> <li>Turn ignition switch to "OFF" position and disconnect TCM harness connector.</li> <li>Turn ignition switch to "ON" position. (Do not start engine.)</li> <li>Check voltage between TCM harness connector terminals 108, 115 and body ground. <b>Voltage: Battery voltage</b></li> </ol>	
OK or NG	
OK	▶ GO TO 2.
NG	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>Continuity between ignition switch and TCM</li> <li>Ignition switch and No. 18 fuse (10A)</li> </ul>

2	CHECK TCM GROUND CIRCUIT
<ol style="list-style-type: none"> <li>Turn ignition switch to "OFF" position.</li> <li>Disconnect TCM harness connector.</li> <li>Measure resistance between TCM harness connector terminals 48, 116 and body ground. <b>Resistance: 0Ω</b></li> </ol>	
OK or NG	
OK	▶ GO TO 3.
NG	▶ Check continuity between TCM and body ground.

# TROUBLE DIAGNOSES FOR SYMPTOMS

Symptom 1. 4WD Shift Indicator Lamp Does Not Turn ON (Cont'd)

<b>3</b>	<b>CHECK 4WD SHIFT INDICATOR LAMP CIRCUIT</b>
<p>1. Turn ignition switch to "OFF" position.                  2. Disconnect TCM harness connector.                  3. Check continuity between TCM harness connector terminal 23 and body ground.  <b>Continuity should exist.</b></p>	
SMT240D	
<b>OK or NG</b>	
OK	▶ GO TO 4.
NG	▶ <b>Check the following.</b> <ul style="list-style-type: none"> <li>• 4WD shift indicator lamp</li> <li>• Continuity between ignition switch and 4WD shift indicator lamp</li> <li>• Continuity between 4WD shift indicator lamp and TCM</li> </ul>

<b>4</b>	<b>CHECK PROCEDURES FROM THE BEGINNING AGAIN</b>
Check again.	
<b>OK or NG</b>	
OK	▶ INSPECTION END
NG	▶ <ol style="list-style-type: none"> <li>1. Perform TCM input/output signal inspection. Refer to "TCM INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-47.</li> <li>2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</li> </ol>

GI  
MA  
EM  
LC  
EC  
FE  
AT  
TF

PD

AX

SU

BR

ST

RS


BT

HA

SC

EL

IDX

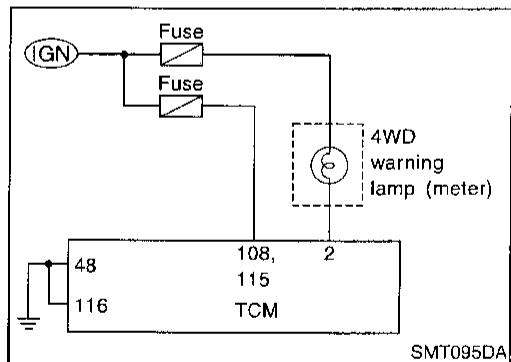



## Symptom 2. 4WD Warning Lamp Does Not Turn ON

**SYMPTOM:** Although ignition switch is turned "ON", 4WD warning lamp does not turn ON. NBTF0030

# TROUBLE DIAGNOSES FOR SYMPTOMS

Symptom 2. 4WD Warning Lamp Does Not Turn ON (Cont'd)

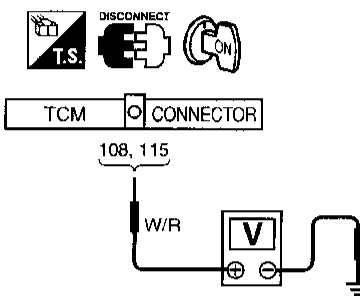1	CHECK TCM POWER SOURCE
<p>1. Turn ignition switch to "OFF" position and disconnect TCM harness connector.</p> <p>2. Turn ignition switch to "ON" position. (Do not start engine.)</p> <p>3. Check voltage between TCM harness connector terminals 108, 115 and body ground.</p> <p style="text-align: center;"><b>Voltage: Battery voltage</b></p> <div style="text-align: center;">  </div> <p style="text-align: right;">SMT242D</p> <p style="text-align: center;"><b>OK or NG</b></p>	
OK	▶ GO TO 2.
NG	<p><b>Check the following.</b></p> <ul style="list-style-type: none"> <li>● Continuity between ignition switch and TCM</li> <li>● Ignition switch and No. 18 fuse (10A)</li> </ul>

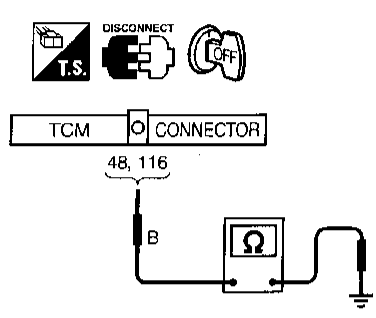
2	CHECK TCM GROUND CIRCUIT
<p>1. Turn ignition switch to "OFF" position.</p> <p>2. Disconnect TCM harness connector.</p> <p>3. Measure resistance between TCM harness connector terminals 48, 116 and body ground.</p> <p style="text-align: center;"><b>Resistance: 0Ω</b></p> <div style="text-align: center;">  </div> <p style="text-align: right;">SMT243D</p> <p style="text-align: center;"><b>OK or NG</b></p>	
OK	▶ GO TO 3.
NG	▶ Check continuity between TCM and body ground.

3	CHECK 4WD WARNING LAMP CIRCUIT
<p>Check the following.</p> <ul style="list-style-type: none"> <li>● 4WD warning lamp</li> <li>● Continuity between ignition switch and 4WD warning lamp</li> <li>● Continuity between 4WD warning lamp and TCM</li> </ul> <p style="text-align: center;"><b>OK or NG</b></p>	
OK	▶ GO TO 4.
NG	▶ <ul style="list-style-type: none"> <li>● Repair or replace harness or connector.</li> <li>● Replace 4WD warning lamp.</li> </ul>

4	CHECK PROCEDURES FROM THE BEGINNING AGAIN
Check again.	
<b>OK or NG</b>	
OK	▶ INSPECTION END
NG	▶ <ol style="list-style-type: none"> <li>1. Perform TCM input/output signal inspection. Refer to "TCM INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-47.</li> <li>2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</li> </ol>

# TROUBLE DIAGNOSES FOR SYMPTOMS

Symptom 3. 4WD Shift Indicator Lamp Does Not Turn OFF

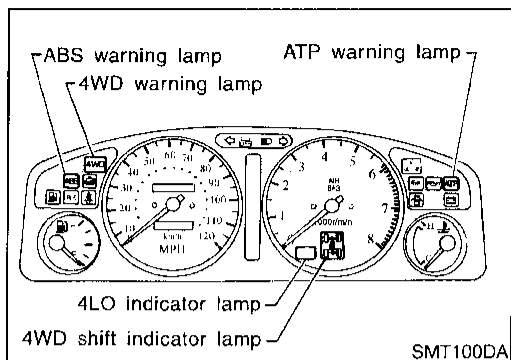


## Symptom 3. 4WD Shift Indicator Lamp Does Not Turn OFF

**SYMPTOM:** When T/F control lever is moved from "H" to "4LO", all the 4WD shift indicator lamps do not turn OFF. NBTF0031

<b>1</b>	<b>CHECK ATP SWITCH CIRCUIT</b>
Check ATP switch circuit. Refer to "Diagnostic Procedure", "ATP SWITCH, WAIT DETECTION SWITCH AND NEUTRAL-4LO SWITCH", TF-78.	
<b>OK or NG</b>	
OK	▶ GO TO 2.
NG	▶ Check, repair or replace faulty parts.

<b>2</b>	<b>CHECK PROCEDURE FROM THE BEGINNING AGAIN</b>
Check again.	
<b>OK or NG</b>	
OK	▶ INSPECTION END
NG	▶ Recheck each connector's pin terminals for damage or loose connection.

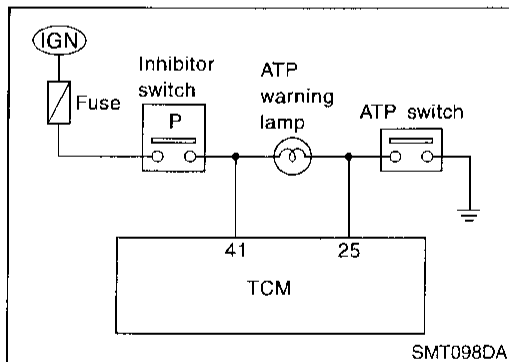

## Symptom 4. ATP Warning Lamp Does Not Turn ON

**SYMPTOM:** When T/F control lever is moved from "H" to "4LO" with A/T selector lever in "P" position, ATP warning lamp does not turn ON. NBTF0032

<b>1</b>	<b>CHECK ATP SWITCH CIRCUIT</b>
Check ATP switch circuit. Refer to "Diagnostic Procedure", "ATP SWITCH, WAIT DETECTION SWITCH AND NEUTRAL-4LO SWITCH", TF-78.	
<b>OK or NG</b>	
OK	▶ GO TO 2.
NG	▶ Check, repair or replace faulty parts.

GI  
MA  
EM  
LC  
EC  
FE  
AT  
TF  
PD  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX




# TROUBLE DIAGNOSES FOR SYMPTOMS

## Symptom 4. ATP Warning Lamp Does Not Turn ON (Cont'd)

<b>2</b>	<b>CHECK FOLLOWING ITEMS</b>	
Check the following. ● ATP warning lamp ● Continuity between inhibitor ("P" position) switch terminal 4 and ATP warning lamp ● Continuity between ATP warning lamp and ATP switch <p style="text-align: center;"><b>OK or NG</b></p>		
OK	▶	GO TO 3.
NG	▶	Repair or replace ATP warning lamp, harness or connector.


<b>3</b>	<b>CHECK INHIBITOR SWITCH CIRCUIT</b>	
Check inhibitor switch circuit. Refer to AT section ("DTC P0705 INHIBITOR SWITCH"). <p style="text-align: center;"><b>OK or NG</b></p>		
OK	▶	GO TO 4.
NG	▶	Check, repair or replace faulty parts.

<b>4</b>	<b>CHECK PROCEDURES FROM THE BEGINNING AGAIN</b>	
Check again. <p style="text-align: center;"><b>OK or NG</b></p>		
OK	▶	INSPECTION END
NG	▶	Recheck each connector's pin terminals for damage or loose connection.

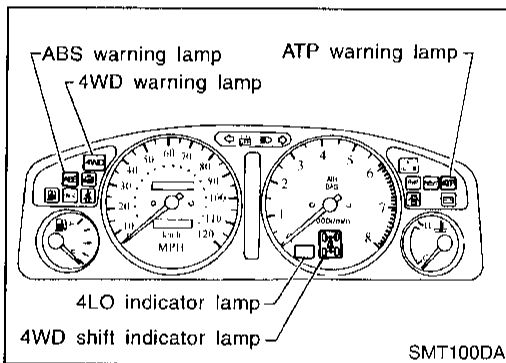

## Symptom 5. 4LO Indicator Lamp Does Not Turn ON

**SYMPTOM:** When T/F control lever is moved from "H" to "4LO" position, 4LO warning lamp does not turn ON. NBTF0033

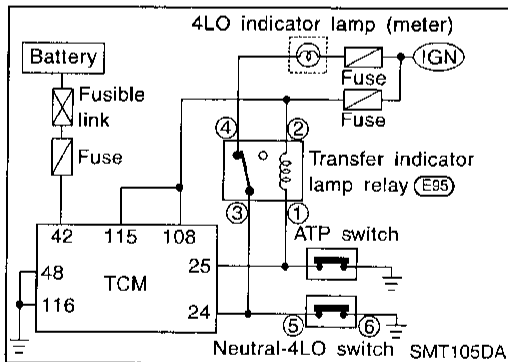

# TROUBLE DIAGNOSES FOR SYMPTOMS


Symptom 5. 4LO Indicator Lamp Does Not Turn ON (Cont'd)

<b>1</b>	<b>CHECK TCM POWER SUPPLY CIRCUIT</b>	
	<ol style="list-style-type: none"> <li>1. Disconnect battery negative terminal (-), then TCM connector.</li> <li>2. Connect battery negative terminal (-) and turn ignition switch "ON" (with engine stopped).</li> <li>3. Check voltage across TCM body-side connector terminals 42, 115, 108 and ground. <b>Voltage: Battery voltage</b></li> </ol> <p style="text-align: center;"><b>OK or NG</b></p>	
OK	▶	GO TO 2.
NG	▶	<b>Check the following.</b> <ul style="list-style-type: none"> <li>• Continuity between battery and TCM</li> <li>• Ignition switch (Refer to EL section.)</li> <li>• Fusible link, No. 24 fuse (7.5A) and No. 18 fuse (10A)</li> </ul>

<b>2</b>	<b>CHECK TCM GROUND CIRCUIT</b>	
	<ol style="list-style-type: none"> <li>1. Turn ignition switch "OFF," and disconnect TCM connector.</li> <li>2. Check for continuity between TCM body-side connector terminals 48, 116 and ground. <b>Continuity should exist.</b></li> </ol> <p style="text-align: center;"><b>OK or NG</b></p>	
OK	▶	GO TO 3.
NG	▶	<b>Check the following.</b> <ul style="list-style-type: none"> <li>• Continuity between TCM and ground</li> </ul>

<b>3</b>	<b>CHECK 4LO INDICATOR LAMP CIRCUIT</b>	
	Disconnect battery negative terminal (-) and check the following items: <ol style="list-style-type: none"> <li>1. Check condition of 4LO indicator lamp.</li> <li>2. Check continuity between battery and 4LO indicator lamp.</li> <li>3. Check continuity between 4LO indicator lamp and a point of contact 4 of transfer relay E95.</li> <li>4. Check condition of transfer indicator lamp relay.</li> <li>5. Check continuity between battery and coil winding 2 of transfer indicator lamp relay.</li> <li>6. Check continuity between a point of contact 3 of transfer indicator lamp relay ground and TCM connector terminal 24, neutral-4LO switch terminal 5.</li> <li>7. Check continuity between transfer indicator lamp relay ground contact point 1 of coil winding and TCM connector terminal 25.</li> <li>8. Check condition of neutral-4LO switch.</li> <li>9. Check continuity between neutral-4LO switch ground terminal 6 and ground.</li> </ol> <p style="text-align: center;"><b>OK or NG</b></p>	
OK	▶	GO TO 4.
NG	▶	<b>Check the following.</b> <ul style="list-style-type: none"> <li>• 4LO indicator lamp</li> <li>• Transfer indicator lamp relay</li> <li>• Neutral-4LO switch</li> </ul> Refer to "ATP Switch, Neutral-4LO Switch and Wait Detection Switch", "COMPONENT INSPECTION", TF-78.

<b>4</b>	<b>CHECK PROCEDURES FROM THE BEGINNING</b>	
	Check again.  <p style="text-align: center;"><b>OK or NG</b></p>	
OK	▶	INSPECTION END
NG	▶	<ol style="list-style-type: none"> <li>1. Perform TCM input/output signal inspection. Refer to "TCM INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-47.</li> <li>2. If NG, recheck TCM pin terminals for damage or loose connection with harness connector.</li> </ol>

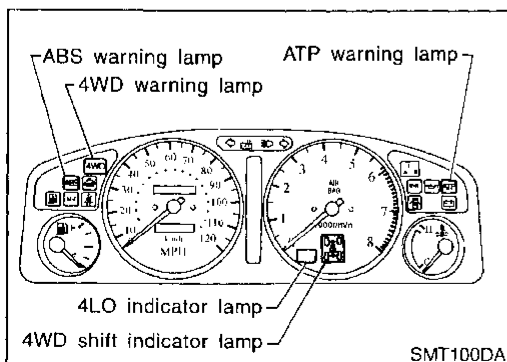

## Symptom 6. 4WD Shift Indicator Lamp Does Not Indicate "LOCK"

**SYMPTOM:** When T/F control lever is moved to "4LO", 4WD shift indicator lamp does not indicate "LOCK".

GI  
MA  
EM  
LC  
EC  
FE  
AT  
TF  
PD  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

# TROUBLE DIAGNOSES FOR SYMPTOMS

## Symptom 6. 4WD Shift Indicator Lamp Does Not Indicate "LOCK" (Cont'd)

<b>1</b>	<b>CHECK 4WD WARNING LAMP</b>	
Is 4WD warning lamp turned ON?		
Yes or No		
Yes	▶	Refer to "Trouble Diagnosis without CONSULT", TF-25.
No	▶	GO TO 2.

<b>2</b>	<b>CHECK FOLLOWING ITEMS</b>	
Check the following.		
<ul style="list-style-type: none"> <li>● Neutral-4LO switch circuit. Refer to TF-59.</li> <li>● Wait detection switch circuit. Refer to TF-59.</li> <li>● ATP switch circuit. Refer to TF-59.</li> </ul>		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Check, repair or replace faulty parts.

<b>3</b>	<b>CHECK PROCEDURES FROM THE BEGINNING AGAIN</b>	
Check again.		
OK or NG		
OK	▶	INSPECTION END
NG	▶	Recheck each connector's pin terminals for damage or loose connection.

## Symptom 7. 4WD Shift Indicator Lamp Repeats Flickering

**SYMPTOM: 4WD shift indicator lamp keeps flickering.**

NBTF0035

<b>1</b>	<b>CHECK 4WD SHIFT INDICATOR LAMP</b>	
<ol style="list-style-type: none"> <li>1. Set 4WD shift switch to "2WD" position.</li> <li>2. Move vehicle forward and backward. Or drive straight increasing or decreasing speed under 20 km/h (12 MPH).</li> <li>3. Does 4WD shift indicator lamp keep flickering?</li> </ol>		
Yes or No		
Yes	▶	GO TO 2.
No	▶	INSPECTION END

<b>2</b>	<b>CHECK TIGHT CORNER BRAKING SYMPTOM</b>	
Drive vehicle at speed under 20 km/h (12 MPH), turning steering wheel to the limit. Does tight corner braking symptom occur?		
Yes or No		
Yes	▶	GO TO 3.
No	▶	GO TO 4.

<b>3</b>	<b>CHECK 4WD SHIFT INDICATOR LAMP</b>	
Does the 4WD shift indicator lamp keep flickering when the front wheels are jacked up?		
Yes or No		
Yes	▶	Check transfer unit operating system.
No	▶	Check tires.

<b>4</b>	<b>CHECK 4WD WARNING LAMP</b>	
Does 4WD warning lamp flicker? (4WD shift indicator lamp is turned OFF.)		
Yes or No		
Yes	▶	Perform self-diagnoses. Refer to "Trouble Diagnosis without CONSULT", TF-25.
No	▶	GO TO 5.

<b>5</b>	<b>CHECK 4WD SHIFT INDICATOR LAMP</b>	
Does 4WD shift indicator lamp keep flickering?		
Yes or No		
Yes	▶	Check again.
No	▶	INSPECTION END

# TROUBLE DIAGNOSES FOR SYMPTOMS

Symptom 8. Tight Corner Braking Symptom

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
LINE PRES SW	OFF	
CL PRES SW	OFF	
ATP SWITCH	OFF	
N POSI SW AT	OFF	
R POSI SW AT	OFF	
P POSI SW AT	ON	
CLOSED THL/SW	OFF	
ABS OPER SW	OFF	
WAIT DETCT SW	OFF	
<b>RECORD</b>		

SMT122D

## Symptom 8. Tight Corner Braking Symptom

**SYMPTOM:** Tight corner braking symptom occurs. (Hydraulic system failure) NBTF0036

<b>1</b>	<b>CHECK INPUT SIGNAL</b>
<p><b>With CONSULT</b></p> <p>1. Select "ECU INPUT SIGNALS" in Data Monitor. 2. Read out the ON/OFF status of "CLUTCH PRES SW". Refer to "REFERENCE VALUE IN DATA MONITOR MODE", TF-33.</p>	
<p><b>Without CONSULT</b></p> <p>Check voltage between TCM harness connector terminal 14 and body ground. Refer to "TCM INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-47.</p>	
OK or NG	
OK	<p>▶ <b>Disassemble transfer unit and check the following.</b></p> <ul style="list-style-type: none"> <li>● Control valve assembly</li> <li>● 4WD solenoid valve</li> <li>● 2-4WD shift solenoid valve</li> <li>● Clutch piston</li> <li>● Clutch assembly</li> </ul>
NG	▶ GO TO 2.

<b>2</b>	<b>CHECK CLUTCH PRESSURE SWITCH CIRCUIT</b>
<p>Check clutch pressure switch circuit. Refer to "Diagnostic Procedure", "CLUTCH PRESSURE SWITCH", TF-61.</p>	
OK or NG	
OK	▶ GO TO 3.
NG	▶ Check, repair or replace faulty parts.

<b>3</b>	<b>CHECK PROCEDURES FROM THE BEGINNING AGAIN</b>
<p>Check again.</p>	
OK or NG	
OK	▶ INSPECTION END
NG	▶ Recheck each connector's pin terminals for damage or loose connection.

☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
LINE PRES SW	OFF	
CL PRES SW	OFF	
ATP SWITCH	OFF	
N POSI SW AT	OFF	
R POSI SW AT	OFF	
P POSI SW AT	ON	
CLOSED THL/SW	OFF	
ABS OPER SW	OFF	
WAIT DETCT SW	OFF	
<b>RECORD</b>		

SMT122D

## Symptom 9. 4WD System Does Not Operate

**SYMPTOM:** The vehicle cannot be put into 4WD mode. (Hydraulic system failure) NBTF0037

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

# TROUBLE DIAGNOSES FOR SYMPTOMS

## Symptom 9. 4WD System Does Not Operate (Cont'd)


<b>1</b>	<b>CHECK INPUT SIGNAL</b>	
<p><b>Ⓜ With CONSULT</b></p> <p>1. Select "ECU INPUT SIGNALS" in Data Monitor.                  2. Read out the ON/OFF status of "CLUTCH PRES SW".                  Refer to "REFERENCE VALUE IN DATA MONITOR MODE", "ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION", TF-33.</p>		
<p><b>ⓧ Without CONSULT</b></p> <p>Check voltage between TCM harness connector terminal 14 and body ground.                  Refer to "TCM INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-47.</p> <p style="text-align: center;"><b>OK or NG</b></p>		
OK	▶	<p>1. Check transfer fluid level.                  2. Disassemble transfer unit and check the following.</p> <ul style="list-style-type: none"> <li>● Transfer motor</li> <li>● Main oil pump assembly</li> <li>● Sub-oil pump assembly</li> <li>● Oil strainer</li> <li>● Control valve assembly</li> <li>● 2-4WD shift solenoid valve</li> <li>● Oil filter element</li> <li>● Lip seal</li> <li>● Strainer O-ring</li> <li>● Main oil pump drive gear</li> <li>● Seal ring</li> <li>● D-ring</li> <li>● Clutch piston</li> <li>● Clutch assembly</li> </ul>
NG	▶	GO TO 2.

<b>2</b>	<b>CHECK CLUTCH PRESSURE CIRCUIT</b>	
<p>Check clutch pressure switch circuit.                  Refer to "Diagnostic Procedure", "CLUTCH PRESSURE SWITCH", TF-61.</p> <p style="text-align: center;"><b>OK or NG</b></p>		
OK	▶	GO TO 3.
NG	▶	Check, repair or replace faulty parts.

<b>3</b>	<b>CHECK PROCEDURES FROM THE BEGINNING</b>	
<p>Check again.</p> <p style="text-align: center;"><b>OK or NG</b></p>		
OK	▶	INSPECTION END
NG	▶	Recheck each connector's pin terminals for damage or loose connection.

# COMPONENT INSPECTION

4WD Shift Switch

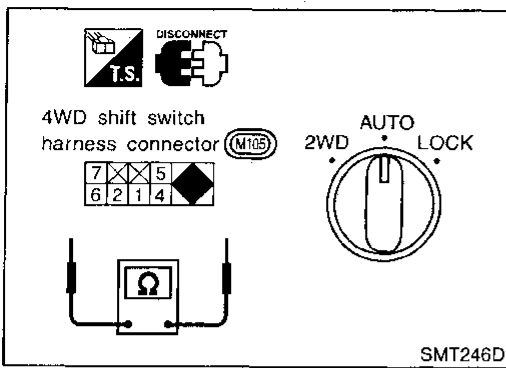


## 4WD Shift Switch

NBTF0038S01

Check continuity between each terminal.

Terminals	Switch position	Continuity
1 - 2	2WD	Yes
	Except 2WD	No
1 - 4	AUTO	Yes
	Except AUTO	No
1 - 5, 1 - 4	LOCK	Yes
	Except LOCK	No

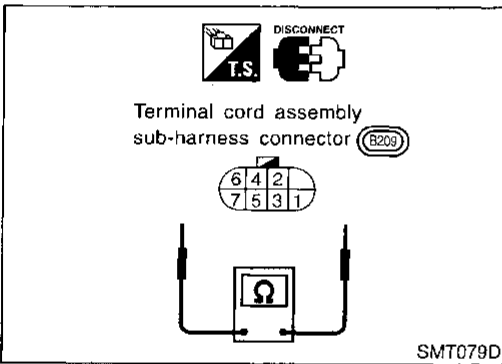


## 2-4WD Shift Solenoid Valve and Transfer Fluid Temperature Sensor

NBTF0038S02

Measure resistance between terminals of transfer terminal cord assembly sub-harness connector located on rear-right of transfer unit.

Component parts	Terminals	Resistance
2-4WD shift solenoid valve	4 - 5	Approx. 20°C (68°F): Approx. 22.8 - 25.2Ω
Transfer fluid temperature sensor	2 - 3	Approx. 20°C (68°F): Approx. 2.5 kΩ Approx. 80°C (176°F): Approx. 0.3 kΩ

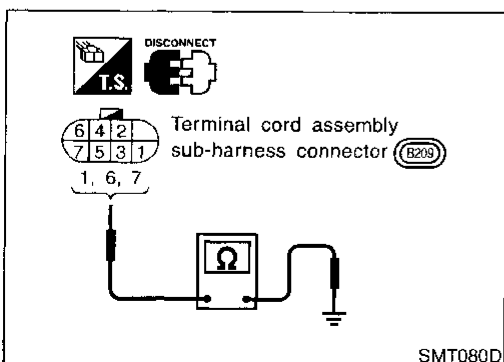

## 4WD Solenoid Valve, Clutch Pressure Switch and Line Pressure Switch


NBTF0038S03

Measure resistance between terminals of transfer terminal cord assembly sub-harness connector located on rear-right of transfer unit.

# COMPONENT INSPECTION

4WD Solenoid Valve, Clutch Pressure Switch and Line Pressure Switch (Cont'd)

Component parts	Terminals	Remarks
4WD solenoid valve	6	Approx. 20°C (68°F): Approx. 3.0 - 3.4Ω
Clutch pressure switch	7	In room temperature <ul style="list-style-type: none"> <li>• 2-4WD shift solenoid valve "OFF": No continuity</li> <li>• 2-4WD shift solenoid valve and transfer motor "ON": Continuity exists</li> </ul>
Line pressure switch	1	In room temperature <ul style="list-style-type: none"> <li>• Turn ignition switch to "OFF" position and leave vehicle for more than 5 minutes. (OFF): No continuity</li> <li>• Transfer motor "ON": Continuity exists</li> </ul>

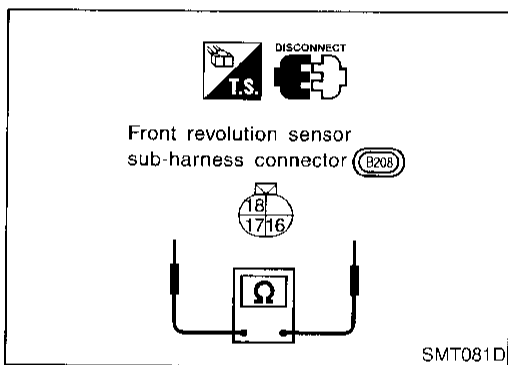


## Front Revolution Sensor

NBTF0038S04

Measure resistance between terminals of front revolution sensor sub-harness connector located on rear-right of transfer unit.

Terminals	Resistance
16 - 17	500 - 650Ω
18 - 17	No continuity
18 - 16	No continuity

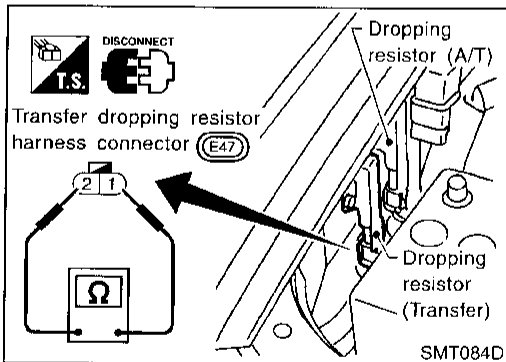


## Transfer Dropping Resistor

NBTF0038S07

Check resistance between terminals.

**Resistance: 11.2 - 12.8 Ω**

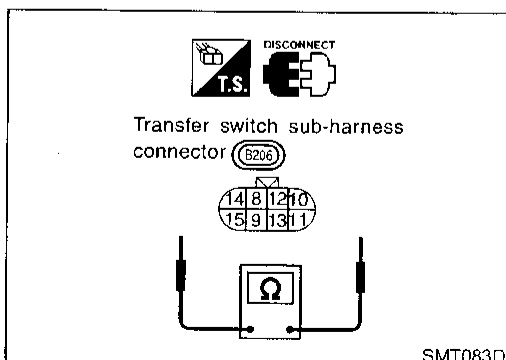

## ATP Switch, Neutral-4LO Switch and Wait Detection Switch

NBTF0038S06

Measure resistance between terminals of transfer switch assembly sub-harness connector located on rear-right of transfer unit.

# COMPONENT INSPECTION

ATP Switch, Neutral-4LO Switch and Wait Detection Switch (Cont'd)

Switch	Terminals	Transfer control lever position		
		H	N	4LO
ATP switch	8 - 9	No continuity	Continuity	No continuity
Neutral-4LO switch	12 - 13	No continuity		Continuity
Wait detection switch	10 - 11	No continuity		Continuity
		(Note) ←-----		

**NOTE:**

When shifting from "4LO" to "H", continuity exists while "Wait" function is operating. (No continuity exists when "Wait" function is canceled.)

GI  
MA  
EM  
LC

EC  
FE

AT

**TF**

PD

AX

SU

BR

ST

RS


BT

HA

SC

EL


IDX

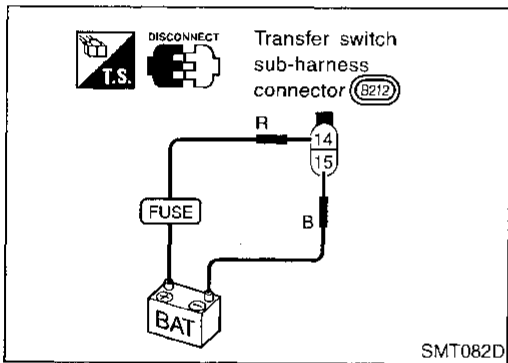

## Transfer Motor

NBTF0038S05

Apply battery voltage directly to transfer motor assembly sub-harness connector located on rear-right of transfer unit. (Positive: Terminal 14, Negative: Terminal 15) Transfer motor should operate.

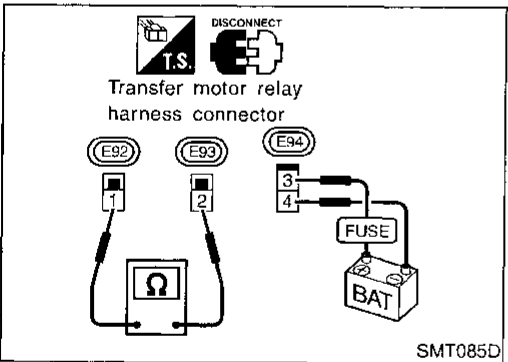


## Transfer Motor Relay

NBTF0038S08

1. Apply battery voltage directly to terminals 3 and 4.
2. Check continuity between terminals 1 and 2.

Condition	Continuity (1 - 2)
Battery voltage is applied	Yes
No voltage is applied	No

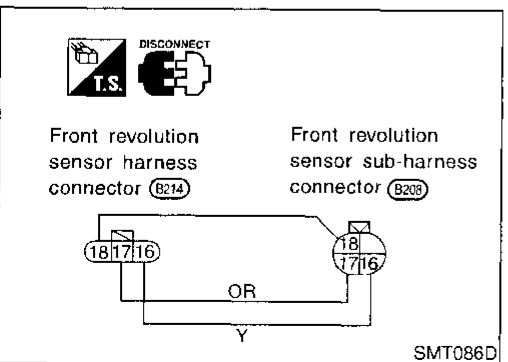

## Transfer Sub-harness

NBTF0038S09

### FRONT REVOLUTION SENSOR SUB-HARNESS CONNECTOR


NBTF0038S0901

Check continuity between terminals shown in the figure.



# COMPONENT INSPECTION


Transfer Sub-harness (Cont'd)

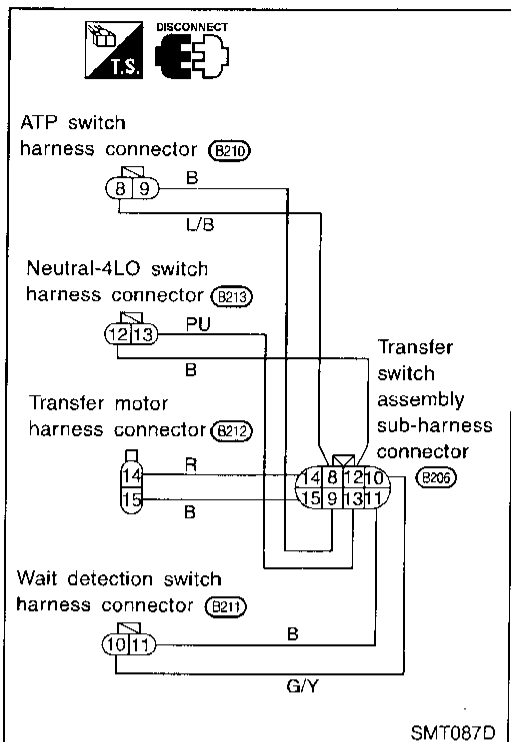

## TRANSFER SWITCH ASSEMBLY SUB-HARNESS CONNECTOR

NBTF0038S0902

Check continuity between terminals shown in the figure.

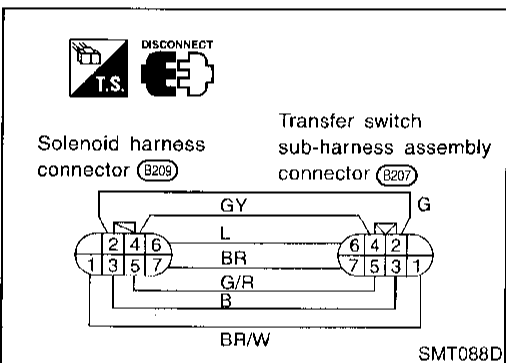


## TRANSFER TERMINAL CORD ASSEMBLY SUB-HARNESS CONNECTOR

NBTF0038S0903

Check continuity between terminals shown in the figure.

### Terminals on solenoid valve

Terminals	Components
6	4WD solenoid valve
4, 5	2-4WD shift solenoid valve
2, 3	Transfer fluid temperature sensor
7	Clutch pressure switch
1	Line pressure switch





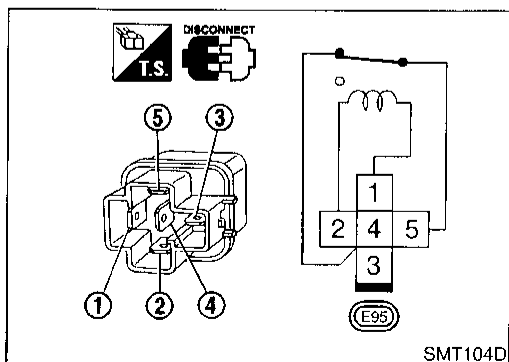


## Transfer Indicator Lamp Relay

NBTF0038S10

Check continuity between terminals 3 and 4.

Condition	Continuity
12V direct current supply between terminals 1 and 2	No
No current supply	Yes

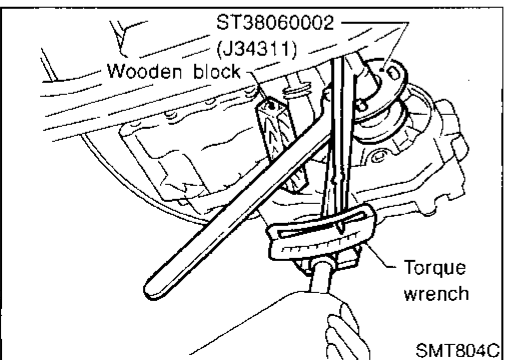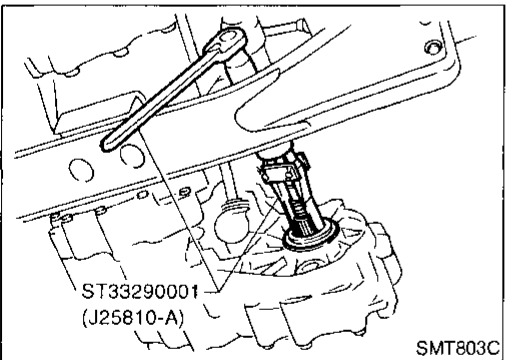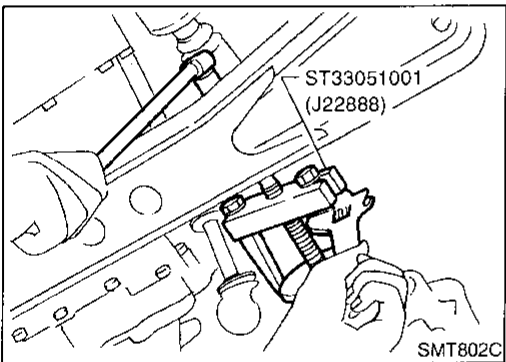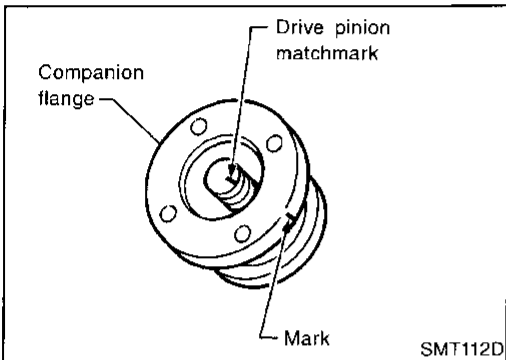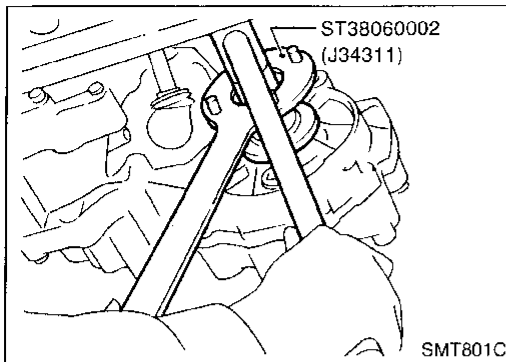

## Replacing Oil Seal FRONT CASE OIL SEAL






NBTF0039  
NBTF0039S01

1. Drain transfer fluid.
2. Remove exhaust front tube and heat insulator. Refer to "Removal", TF-84.
3. Remove front propeller shaft. Refer to PD section ("Removal and Installation", "PROPELLER SHAFT").
4. Remove companion flange lock nut.
  - **Do not reuse lock nut.**
5. Put a matchmark on top of drive pinion thread. The mark should be in line with the mark on the companion flange.
  - **Always mark top of drive pinion screw using paint.**
6. Remove companion flange.
7. Remove front case oil seal.
8. Install front case oil seal.
  - **Before installing, apply multi-purpose grease to seal lip.**
9. Install companion flange.
10. Tighten nut to the specified torque. Refer to TF-86.
11. Install front propeller shaft.

GI  
MA  
EM  
LC  
EC  
FE  
AT  
TF  
PD  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX

# ON-VEHICLE SERVICE

## Replacing Oil Seal (Cont'd)

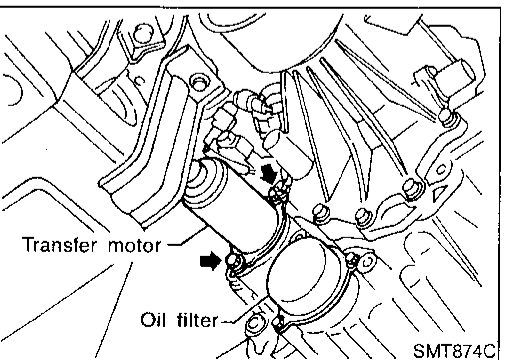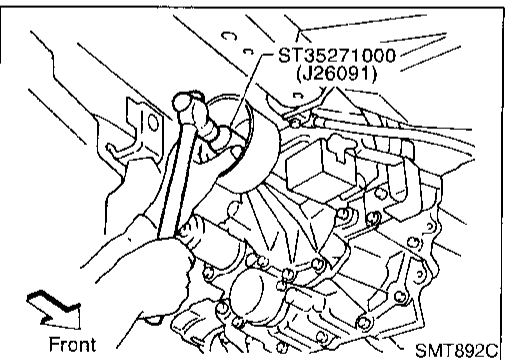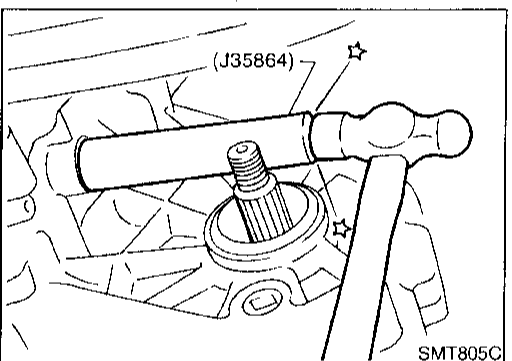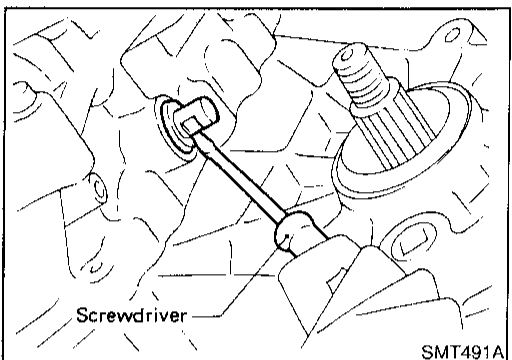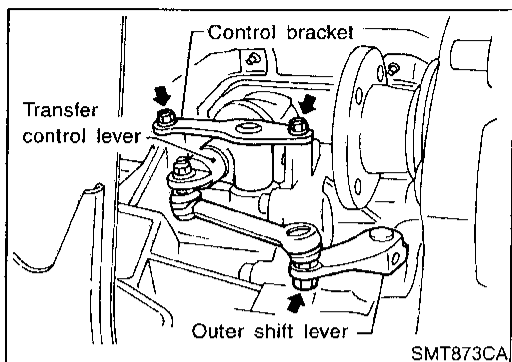

## SHIFT SHAFT OIL SEAL

NBTF0039S02

1. Remove front propeller shaft. Refer to PD section ("Removal and Installation", "PROPELLER SHAFT").
2. Remove companion flange. Refer to "FRONT CASE OIL SEAL", TF-81.
3. Remove transfer control lever from transfer outer shift lever. Then remove outer shift lever.
4. Remove shift shaft oil seal.
  - **Be careful not to damage cross shaft.**
5. Install shift shaft oil seal.
  - **Before installing, apply multi-purpose grease to seal lip.**
6. Install transfer control linkage.
7. Install companion flange. Refer to "FRONT CASE OIL SEAL", TF-81.
8. Install front propeller shaft.

## REAR OIL SEAL

NBTF0039S03

1. Remove rear propeller shaft. Refer to PD section ("Removal and Installation", "PROPELLER SHAFT").
2. Remove rear oil seal.
3. Install rear oil seal.
  - **Before installing, apply multi-purpose grease to seal lip.**
4. Install rear propeller shaft.

## Transfer Motor REMOVAL

NBTF0040

1. Disconnect transfer motor harness connector.
2. Remove breather pipe from transfer motor.
3. Remove bolts to detach transfer motor.
  - **After removing transfer motor, be sure to replace O-ring with new one.**

## INSTALLATION

NBTF0041

1. Apply petroleum jelly or ATF to O-ring.

2. Align width across flat-notch with oil pump groove, and install transfer motor.
3. Tighten bolts.
  - ☞ : 41 - 48 N·m (4.2 - 4.9 kg-m, 30 - 35 ft-lb)
4. Install breather pipe to transfer motor.
5. Connect transfer motor harness connector.

GI

MA

EM

LC

EC

NBTF0042

FE

AT

NBTF0043

TF

PD

AX

SU

BR

ST

RS


BT

HA

SC

EL

IDX

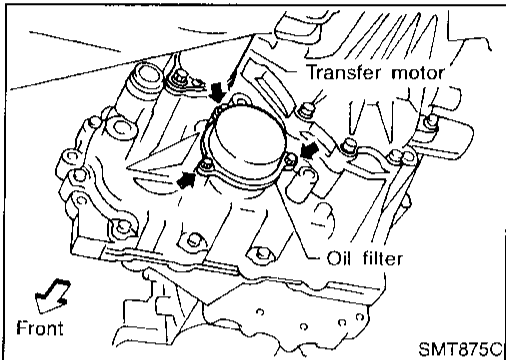

## Transfer Oil Filter

### REMOVAL






- Remove bolts to detach oil filter.
- **When removing oil filter from transfer, avoid damaging it. Be sure to loosen bolts evenly.**
- **When removing oil filter, be sure to replace O-ring with new one.**

### INSTALLATION

1. Apply petroleum jelly or ATF to O-ring.
2. Tighten bolts evenly to install oil filter.
  - ☞ : 7 - 9 N·m (0.7 - 0.9 kg-m, 61 - 78 in-lb)
- **Be sure not to damage oil filter.**

# REMOVAL AND INSTALLATION

## Removal

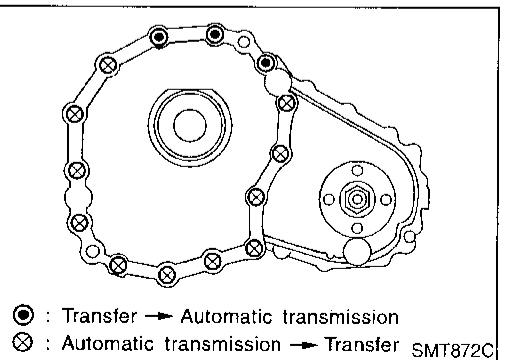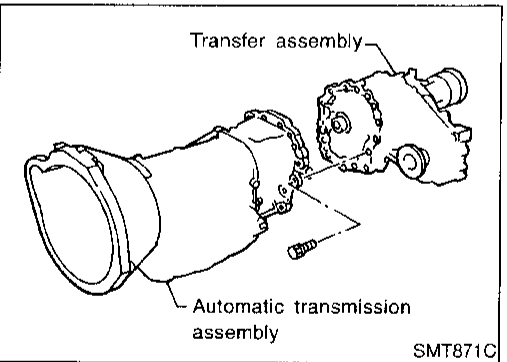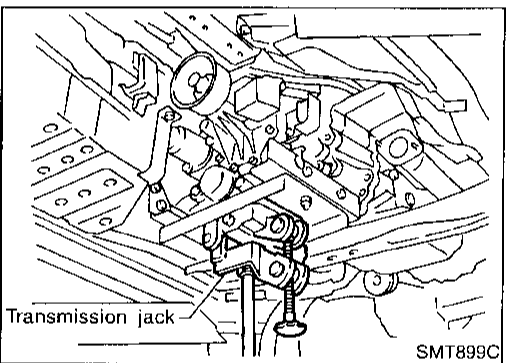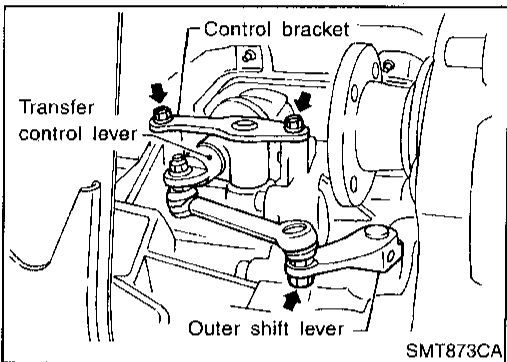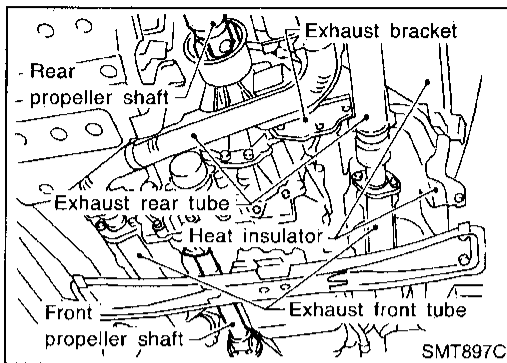

## Removal

NBTF0044

1. Remove exhaust front and rear tubes. Refer to FE section ("EXHAUST SYSTEM").
2. Remove front and rear propeller shaft. Refer to PD section ("Removal and Installation", "PROPELLER SHAFT").
3. Insert plug into rear oil seal after removing propeller shaft.
  - **Be careful not to damage spline, sleeve yoke and rear oil seal, when removing propeller shaft.**
4. Disconnect neutral-4LO switch, front revolution sensor, ATP switch, transfer motor and 4WD shift switch harness connectors.
5. Remove transfer control lever from transfer outer shift lever.
6. Remove transfer from transmission.
 

**WARNING:**  
Support transfer while removing it.

## Installation

NBTF0045



- Tighten bolts securing transfer.
  - Bolt length:**  
45 mm (1.77 in)
  - Tightening torque:**  
⊞ : 31 - 42 N·m (3.2 - 4.3 kg·m, 23 - 31 ft·lb)

## Transfer Gear Control

NBTF0046

SEC. 333

**Y**

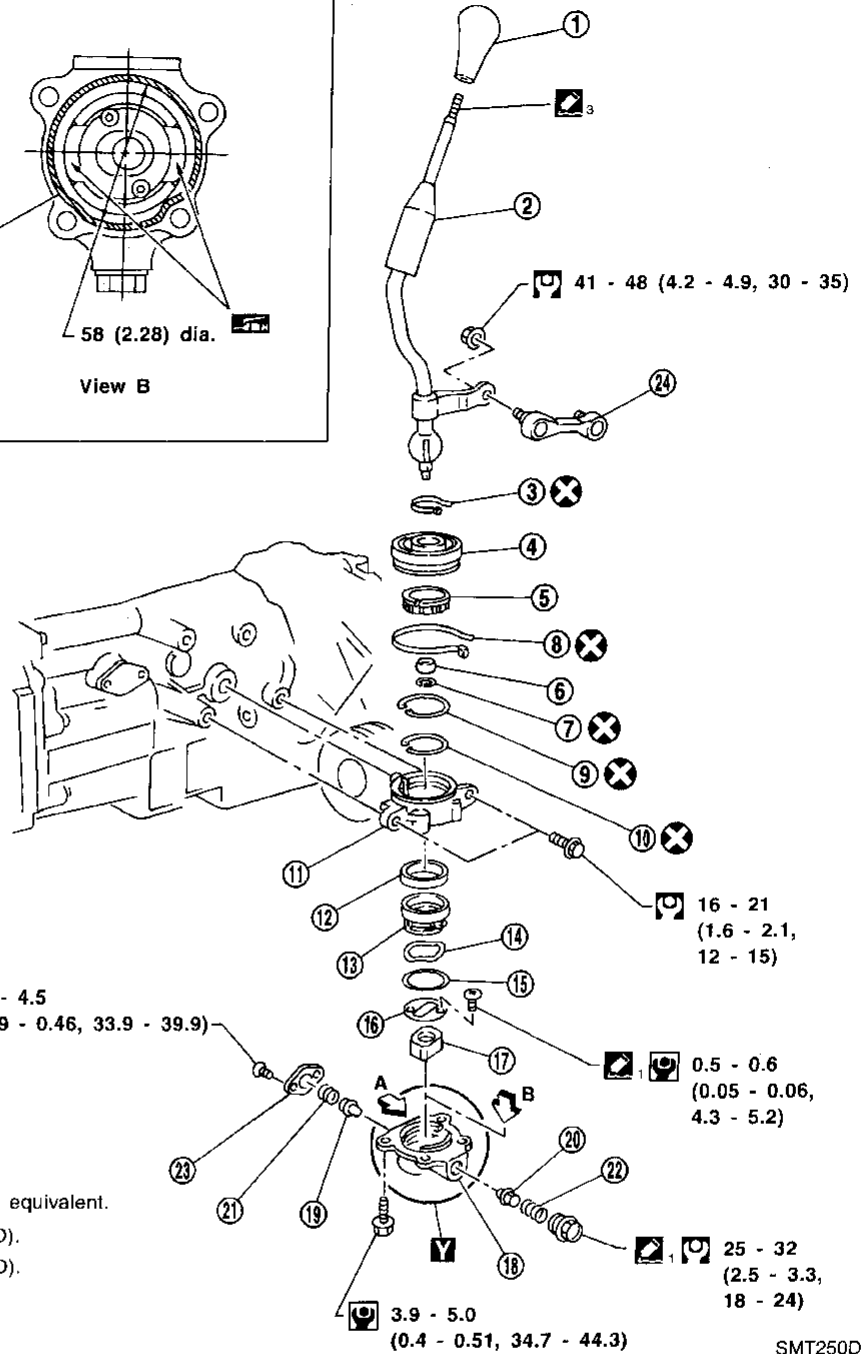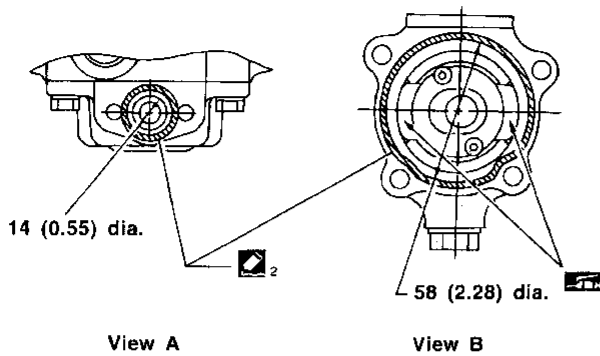

Unit: mm (in)

: N·m (kg-m, in-lb)

: N·m (kg-m, ft-lb)

: Fill multi-purpose grease up.

: Apply sealing fluid 648 (LOCTITE) or equivalent.

: Apply gasket fluid 1215 (THREE BOND).

: Apply gasket fluid 3000 (THREE BOND).

- |                           |                             |                               |
|---------------------------|-----------------------------|-------------------------------|
| 1. Control knob           | 9. Snap ring                | 17. Bush                      |
| 2. Transfer control lever | 10. Snap ring               | 18. Control cover             |
| 3. Tie cable              | 11. Shift cover, low & high | 19. Plunger                   |
| 4. Boot                   | 12. Socket-shift rod        | 20. Plunger                   |
| 5. Seat                   | 13. Socket                  | 21. Check ball spring (long)  |
| 6. Bush                   | 14. Wave washer             | 22. Check ball spring (short) |
| 7. Snap ring              | 15. Plain washer            | 23. Bracket control lever     |
| 8. Boot band              | 16. Shift cover             | 24. Ball joint linkage        |

SMT250D

GI  
MA  
EM  
LC  
EC  
FE  
AT  
**TF**  
PD  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX


# OVERHAUL

Transfer Components

## Transfer Components

NBTFO047

SEC. 330-331-332

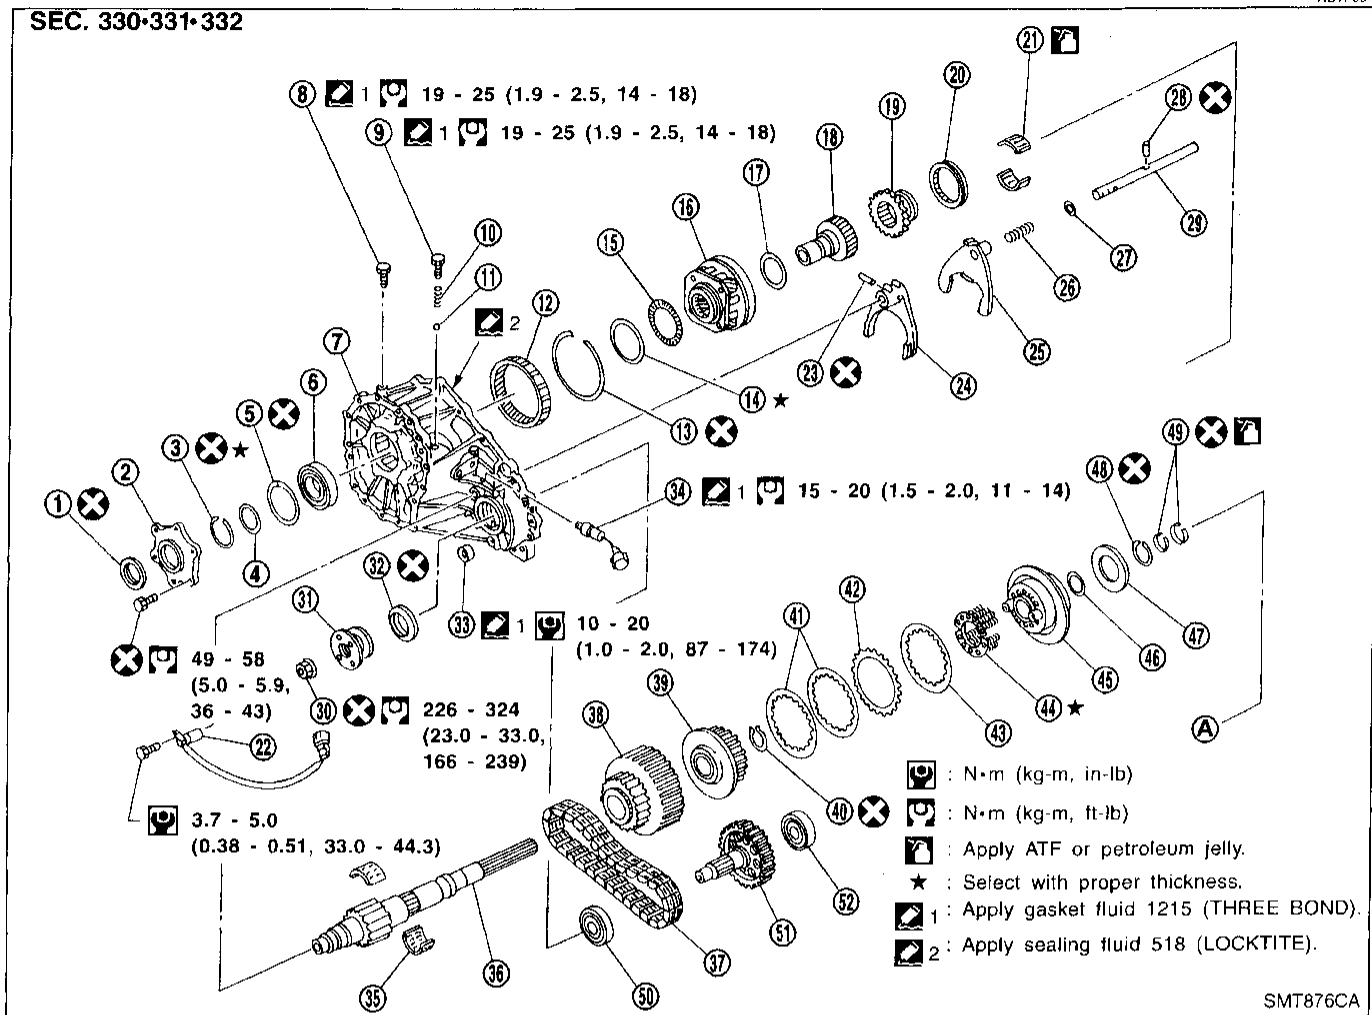


SMT876CA

- |                           |                             |                            |
|---------------------------|-----------------------------|----------------------------|
| 1. Oil seal               | 19. L-H sleeve              | 36. Mainshaft              |
| 2. Transfer cover         | 20. 2-4 sleeve              | 37. Drive chain            |
| 3. Snap ring              | 21. Radial needle bearing   | 38. Clutch drum            |
| 4. Washer                 | 22. Front revolution sensor | 39. Clutch hub             |
| 5. Snap ring              | 23. Roll pin                | 40. Snap ring              |
| 6. Main gear bearing      | 24. L-H fork                | 41. Driven plate           |
| 7. Front case             | 25. 2-4 fork                | 42. Drive plate            |
| 8. Plug bolt              | 26. Shift fork spring       | 43. Retaining plate        |
| 9. Check plug             | 27. Fork guide              | 44. Return spring assembly |
| 10. Check spring          | 28. Roll pin                | 45. Press flange           |
| 11. Check ball            | 29. Shift rod               | 46. Washer                 |
| 12. Internal gear         | 30. Self-lock nut           | 47. Thrust needle bearing  |
| 13. Snap ring             | 31. Companion flange        | 48. Snap ring              |
| 14. Bearing race          | 32. Oil seal                | 49. Seal ring              |
| 15. Thrust needle bearing | 33. Drain plug              | 50. Front bearing          |
| 16. Planetary carrier     | 34. Wait detection switch   | 51. Front drive shaft      |
| 17. Thrust needle bearing | 35. Needle bearing          | 52. Rear bearing           |
| 18. Sun gear              |                             |                            |

# OVERHAUL

Transfer Components (Cont'd)

SEC. 330•331•332

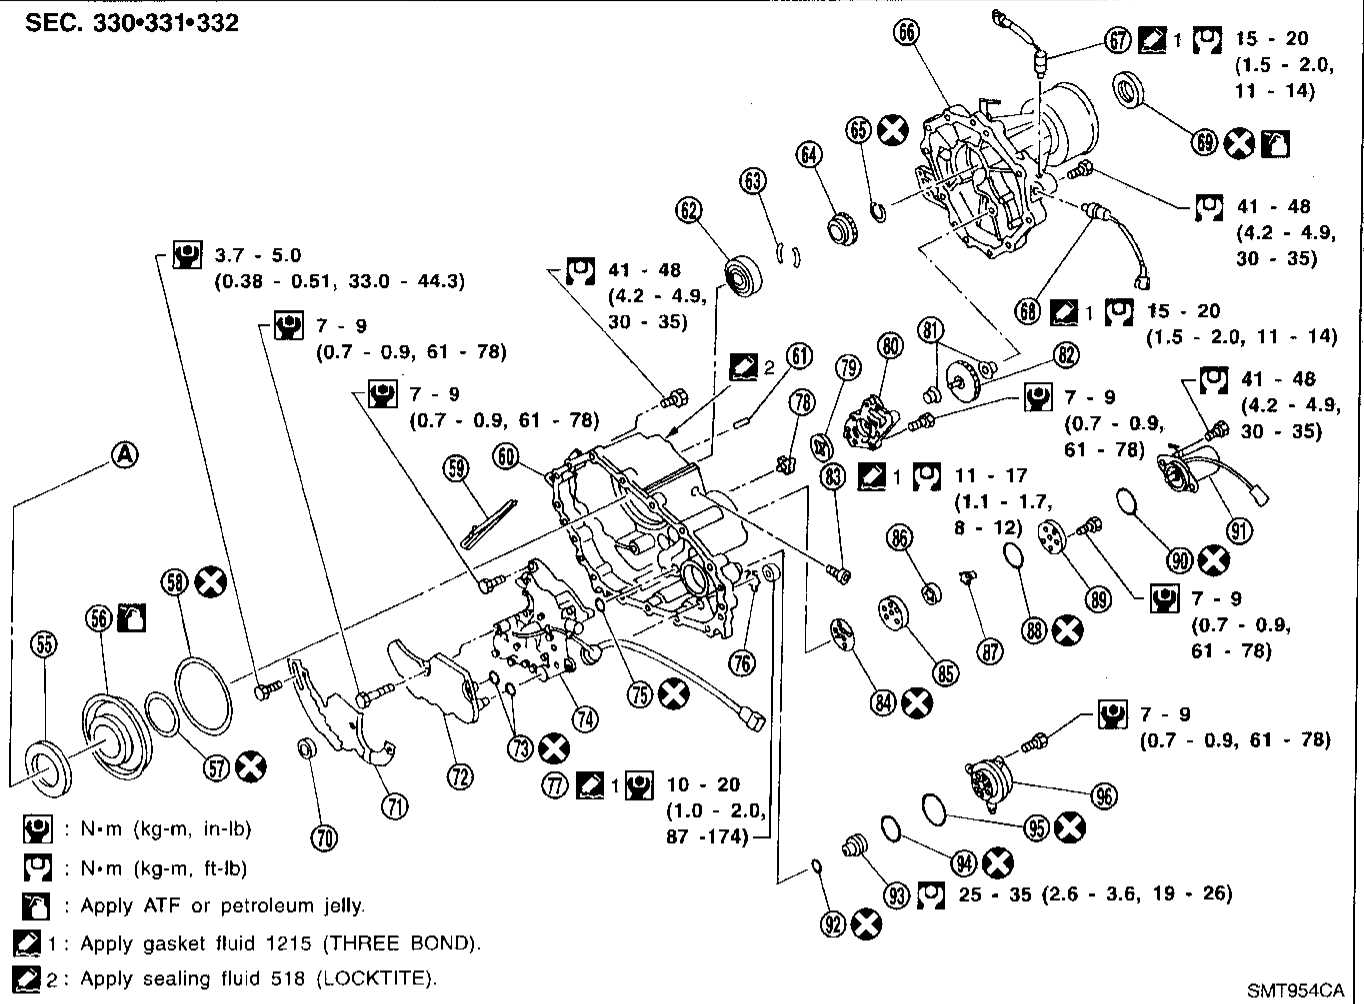

- 55. Thrust needle bearing race
- 56. Clutch piston
- 57. D-ring
- 58. Lip seal
- 59. Oil gutter
- 60. Center case
- 61. Stem bleeder
- 62. Mainshaft rear bearing
- 63. Thrust washer
- 64. Speedometer drive gear
- 65. Snap ring
- 66. Rear case
- 67. ATP switch
- 68. Neutral-4LO switch

- 69. Oil seal
- 70. Magnet
- 71. Baffle plate
- 72. Oil strainer
- 73. O-ring
- 74. Control valve assembly
- 75. Lip seal
- 76. Snap ring
- 77. Filler plug
- 78. Inner gear
- 79. Outer gear
- 80. Oil pump housing
- 81. Bushing
- 82. Oil pump shaft

- 83. Oil pressure check plug
- 84. Oil pump gasket
- 85. Sub-oil pump housing
- 86. Outer gear
- 87. Inner gear
- 88. O-ring
- 89. Sub-oil pump cover
- 90. O-ring
- 91. Transfer motor
- 92. O-ring
- 93. Oil filter stud
- 94. O-ring
- 95. O-ring
- 96. Oil filter

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX



# DISASSEMBLY


## Rear Case

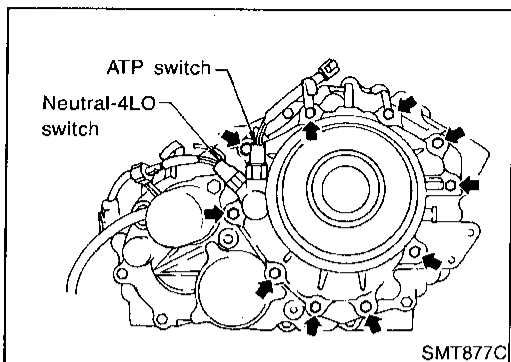


### Rear Case DISASSEMBLY

NBTF0048

1. Remove neutral-4LO switch and ATP switch.
2. Remove bolts.

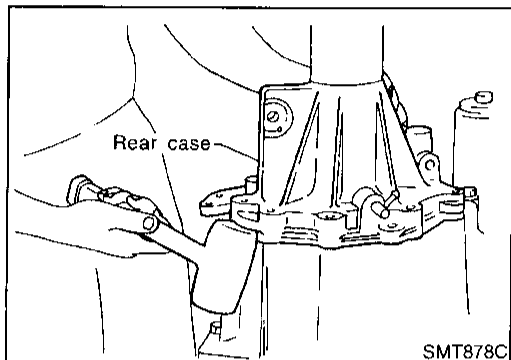


3. Remove rear case from center case by tapping it lightly with a plastic hammer.

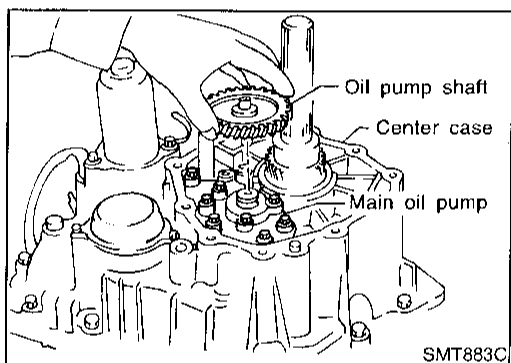


### Center Case DISASSEMBLY

NBTF0049


1. Remove oil pump shaft from main oil pump.

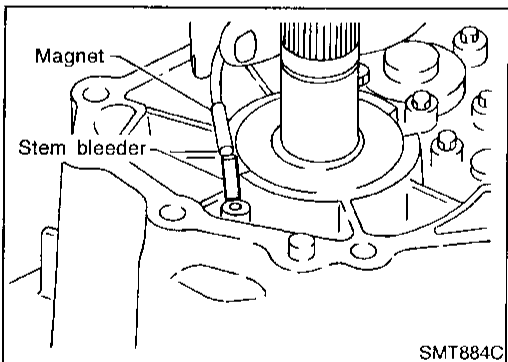


2. Remove stem bleeder from bleeder hole.

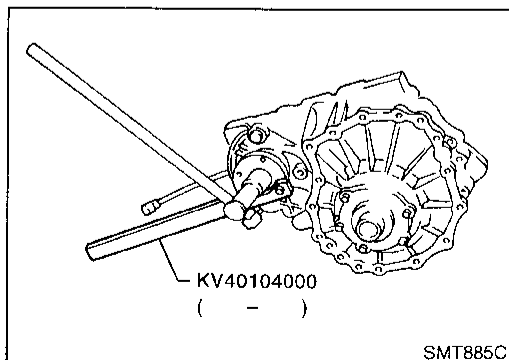


3. Remove lock nut from companion flange.
  - Do not reuse lock nut.

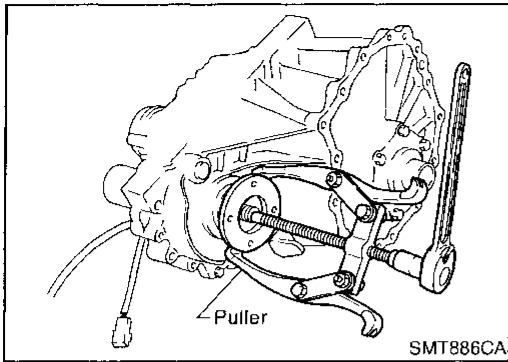


4. Remove companion flange.

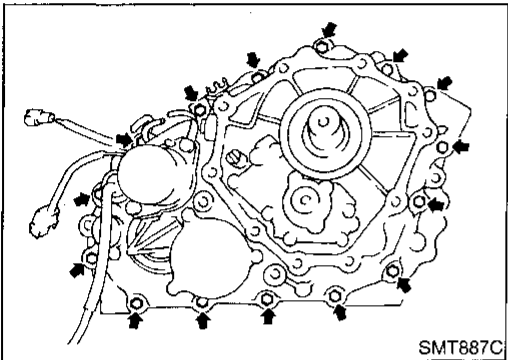


5. Remove bolts.

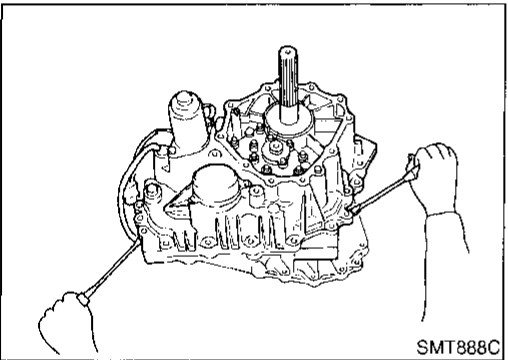

6. Insert screwdrivers as shown in the figure, and separate center case from front case. Then, remove center case by levering it up with a tire lever or the like.

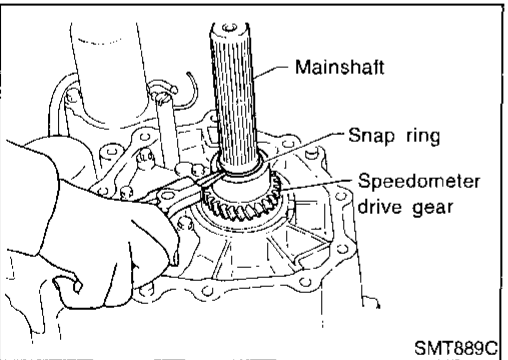

7. Remove snap ring from mainshaft.  
 • Do not reuse snap ring.

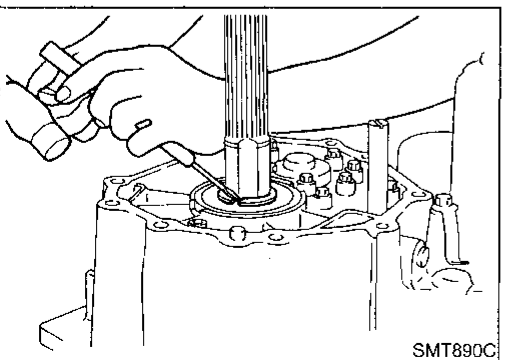

8. Remove C-rings from mainshaft bearing.

GI

MA

EM

LC

EC

FE

AT

**TF**

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

# DISASSEMBLY


## Center Case (Cont'd)

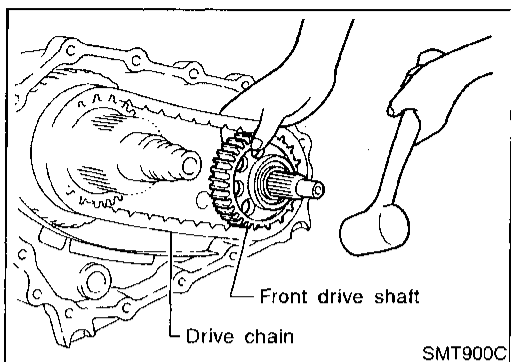


### Front Drive Shaft and Drive Chain

NBTF0049S01


1. Remove oil gutter from center case.
  2. With front drive shaft held by one hand as shown in the figure, tap center case with a plastic hammer to remove it with drive chain.
- Do not tap drive chain with a plastic hammer.

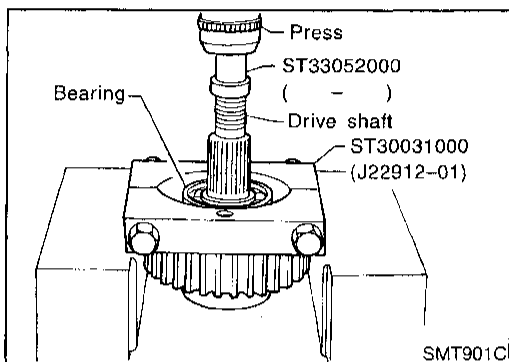

3. Set a puller (ST30031000) and an adapter (ST33052000). Remove front drive shaft front bearing.

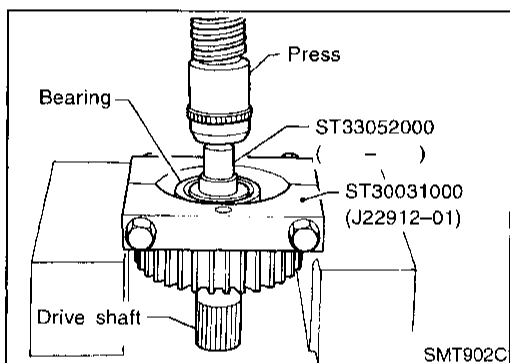


4. Set the puller (ST30031000) and the adapter (ST33052000). Remove front drive shaft rear bearing.

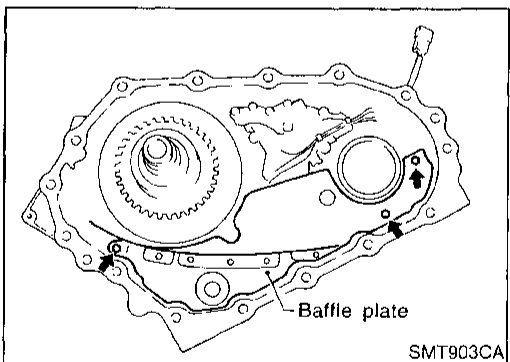


### Mainshaft and Clutch Drum

NBTF0049S02


1. Remove mounting bolts to detach baffle plate.

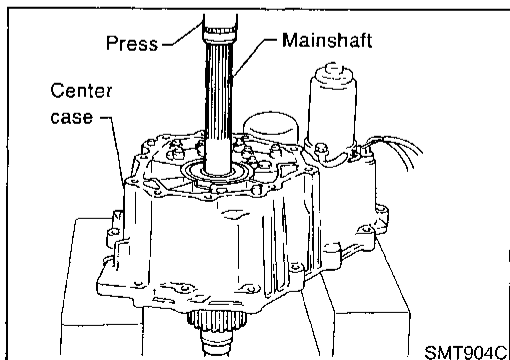

2. Set center case to press stand. Remove mainshaft from center case.

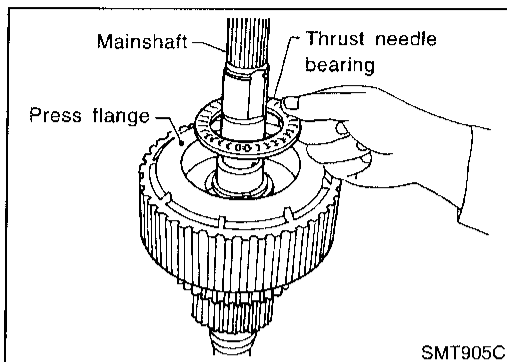


3. Remove thrust needle bearing from press flange.

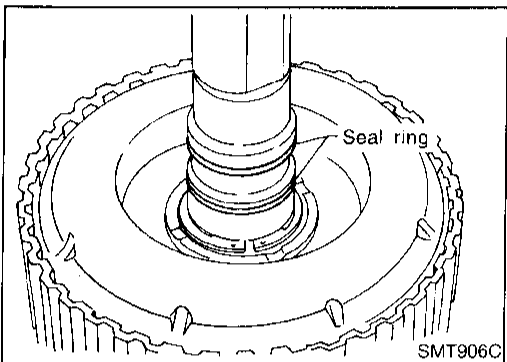


4. Remove seal ring from mainshaft.

- Do not reuse seal ring.

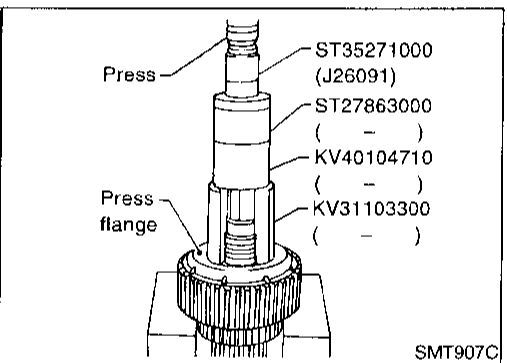


5. Set a drift (KV31103300), a support ring (KV40104710), a support ring (ST27863000) and a drift (ST35271000) to press flange as shown in the figure. Press drift until snap ring is out of place.

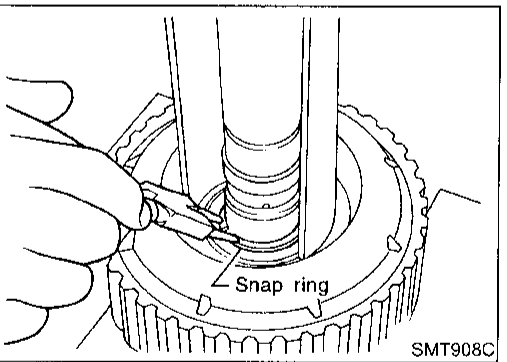

6. Remove snap ring from mainshaft.

- Do not reuse snap ring.

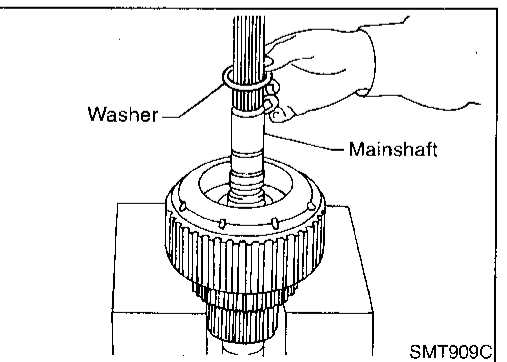

7. Remove washer.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL


IDX

# DISASSEMBLY


Center Case (Cont'd)

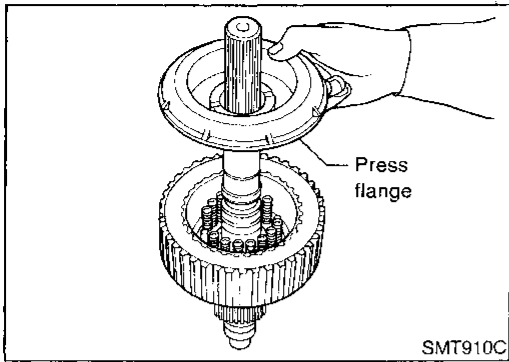


8. Remove press flange from mainshaft.

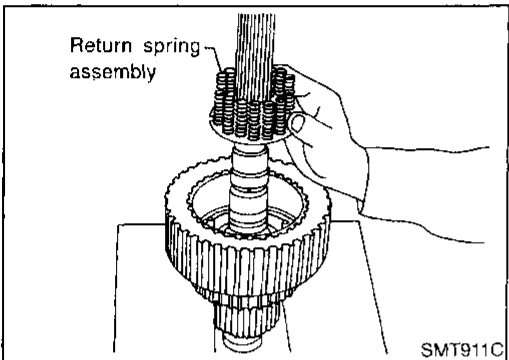

9. Remove return spring assembly from clutch hub.

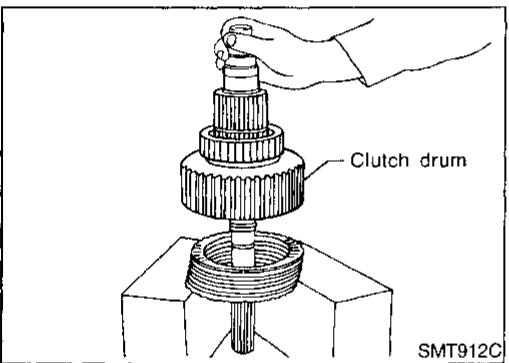


10. Remove each plate from clutch drum.

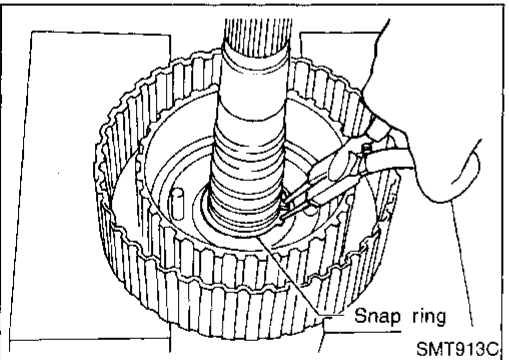

11. Remove snap ring from mainshaft.


- Do not reuse snap ring.

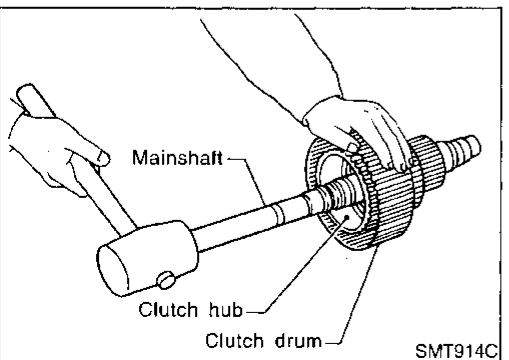

12. Tap mainshaft with a plastic hammer to remove it from clutch drum and clutch hub.

13. Remove needle bearing from mainshaft.

TF-92

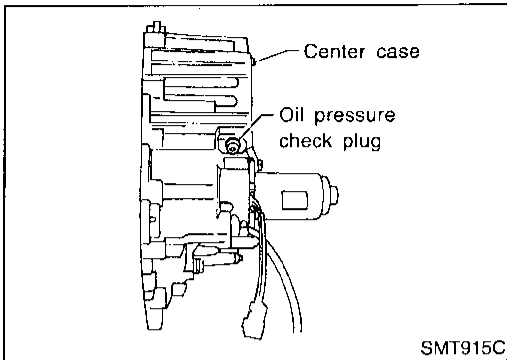

## Clutch Piston

NBTF0049S03

1. Remove oil pressure check plug from oil pressure check port.

GI

MA

EM


LC

2. Apply air gradually from oil pressure check port, and remove clutch piston from center case.

EC

FE

AT

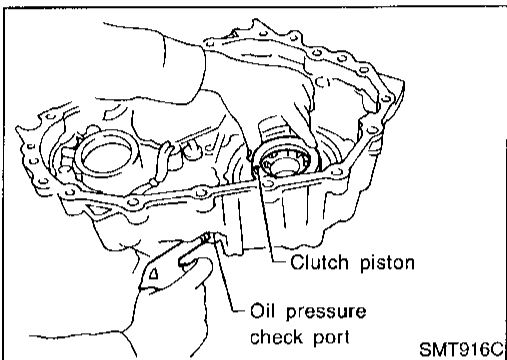

TF

3. Remove lip seal and D-ring from clutch piston.


- Do not reuse lip seal and D-ring.

PD

4. Remove thrust needle bearing race from clutch piston by hooking a screwdriver edge into 4 notches of thrust needle bearing race.

AX

SU

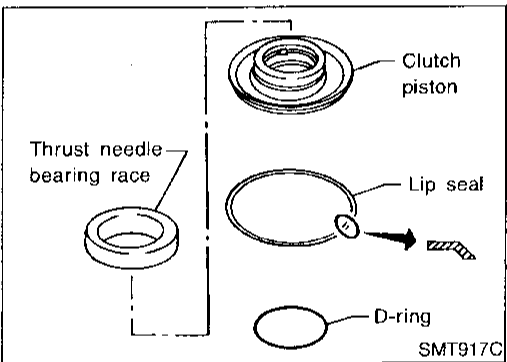

BR

## Control Valve

NBTF0049S04

### CAUTION:


- Do not reuse any part that has been dropped or damaged.
- Make sure valve is assembled in the proper direction.
- Do not use a magnet because residual magnetism stays during disassembly.

ST

RS

BT

HA

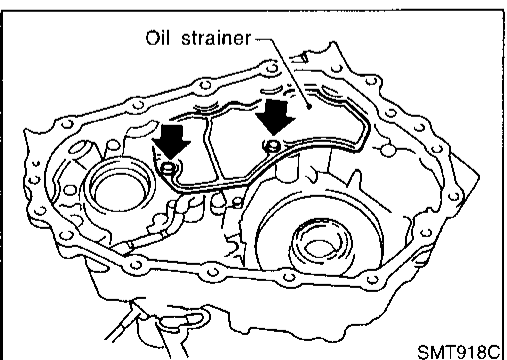

1. Remove bolts, and detach oil strainer.


SC

EL

IDX


# DISASSEMBLY

## Center Case (Cont'd)

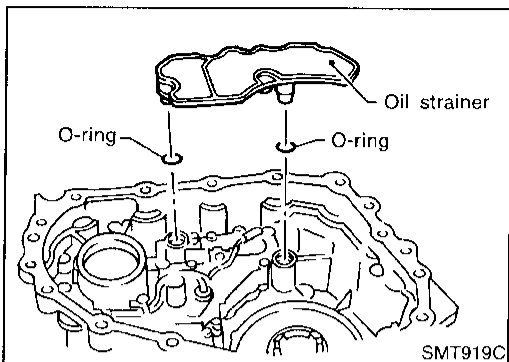


2. Remove O-rings from oil strainer.


- Do not reuse O-rings.

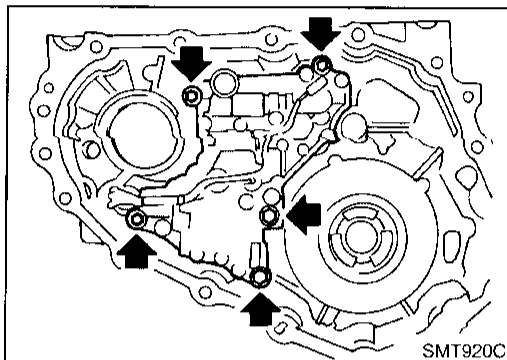

3. Remove bolts for control valve.

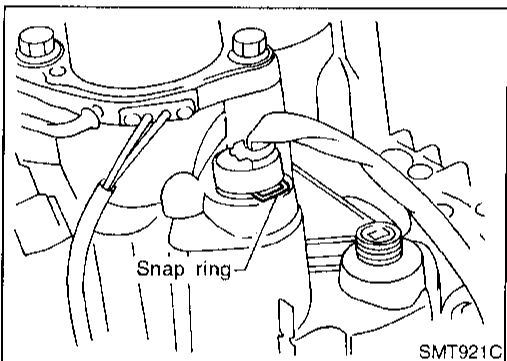


4. Remove snap ring. Then push terminal assembly into center case to remove control valve assembly.

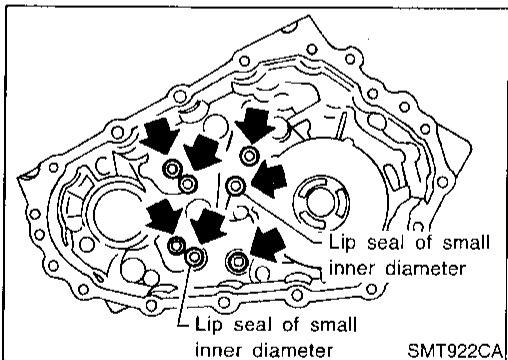

5. Remove lip seals from center case.


- Do not reuse lip seals.
- There are two kinds of lip seals (lip seal of large inner diameter: 5 pieces, lip seal of small inner diameter: 2 pieces). Confirm the position before disassembly.

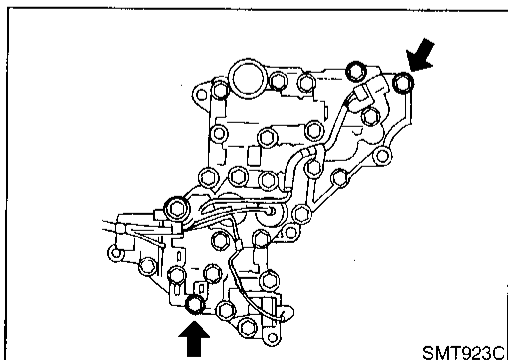

6. Remove all bolts except for two.

# DISASSEMBLY


Center Case (Cont'd)

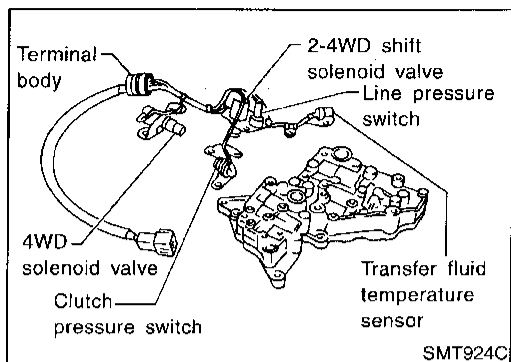

7. Remove 4WD solenoid valve, clutch pressure switch, 2-4WD shift solenoid valve, line pressure switch, and transfer fluid temperature sensor from control valve assembly.

8. Remove O-rings from each solenoid valve, switch and terminal body.


- Do not reuse O-rings.

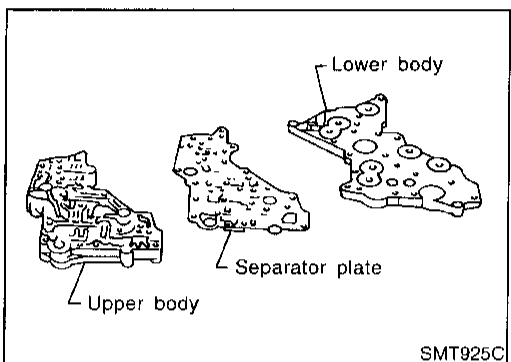


9. Place control valve with lower body facing up, remove two mounting bolts, and then remove lower body and separator plate from upper body.

**CAUTION:**


- Be careful not to drop relief balls. Detach lower body carefully.
- Do not reuse separator plate.

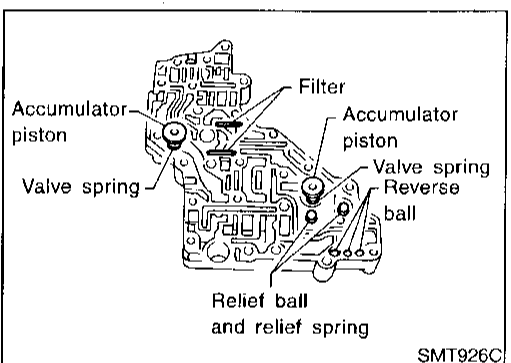

10. Make sure reverse balls, relief balls and relief springs, accumulator pistons, valve springs, and filters are securely installed as shown in the figure, and remove them.

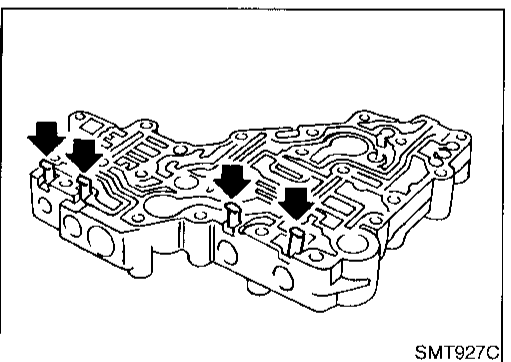

11. Remove retainer plates.

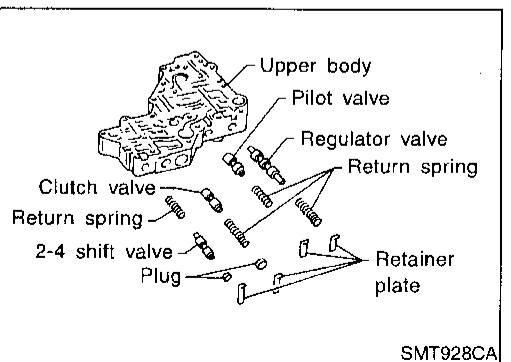

12. Remove each control valve, spring and plug.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX



# DISASSEMBLY


## Center Case (Cont'd)

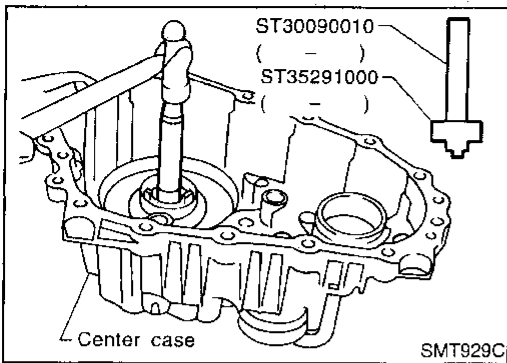

### Mainshaft Rear Bearing

NBTF0049S05


1. Remove mainshaft rear bearing from center case using a remover (ST35291000) and a remover (ST30090010).

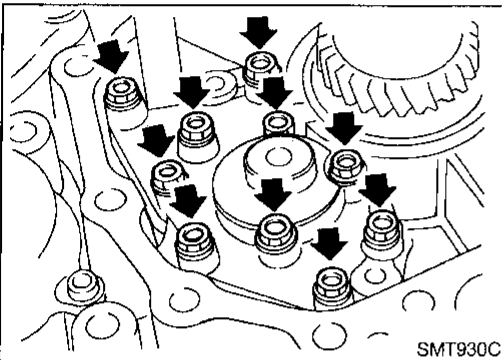


### Main Oil Pump

NBTF0049S06

1. Remove bolts as shown in figure to detach main oil pump.

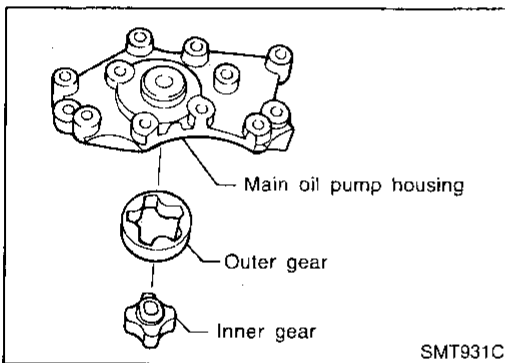

2. Remove outer gear and inner gear.

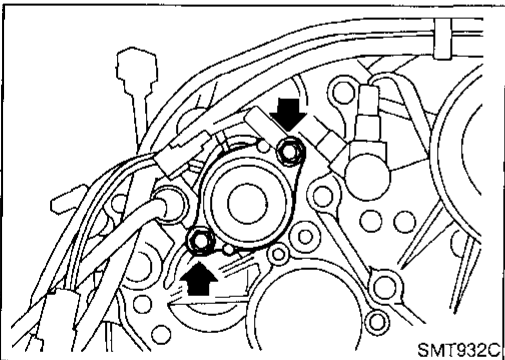


### Sub-oil Pump

NBTF0049S07

1. Remove bolts to detach transfer motor from center case. Then remove O-ring from the transfer motor.


- Do not reuse O-ring.

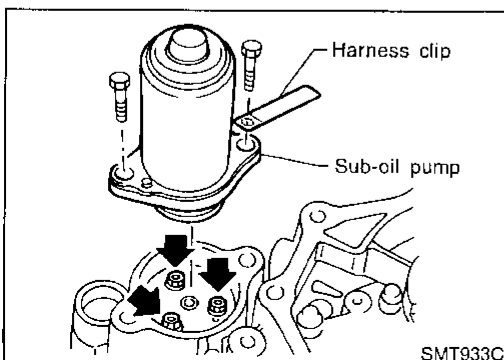

2. Remove sub-oil pump mounting bolts.

# DISASSEMBLY

Center Case (Cont'd)

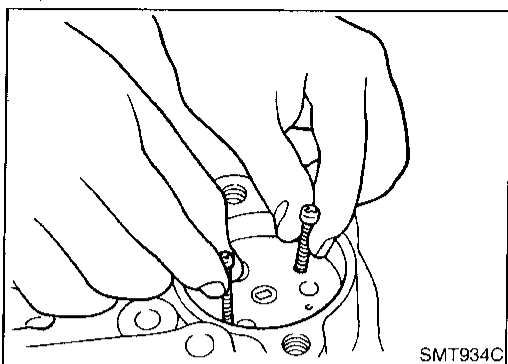


- Thread two bolts (M4 x 0.8) into the holes of sub-oil pump as shown in the figure, and pull out to remove sub-oil pump.

GI

MA

EM

LC

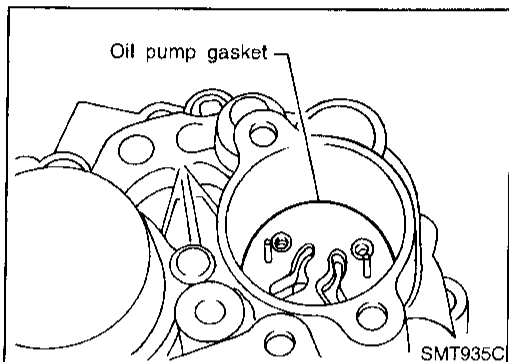


- Remove oil pump gasket.
  - Do not reuse gasket.

EC

FE

AT

TF

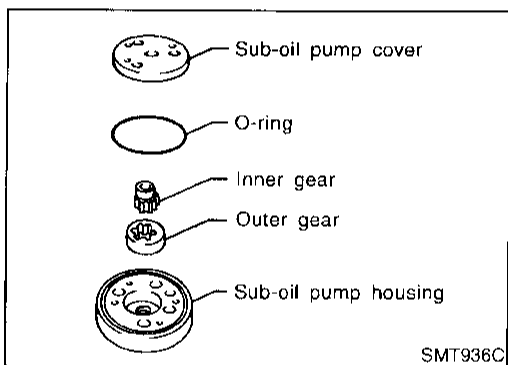

- Remove sub-oil pump cover, outer gear, inner gear and O-ring from sub-oil pump housing.
  - Do not reuse O-ring.

PD


AX

SU

BR

## Oil Filter

NBTF0049S08

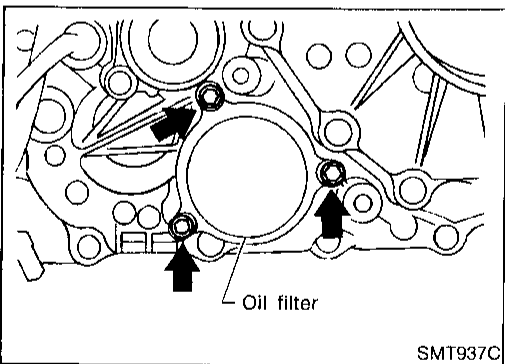


- Remove bolts for oil filter.

ST

RS

BT

HA

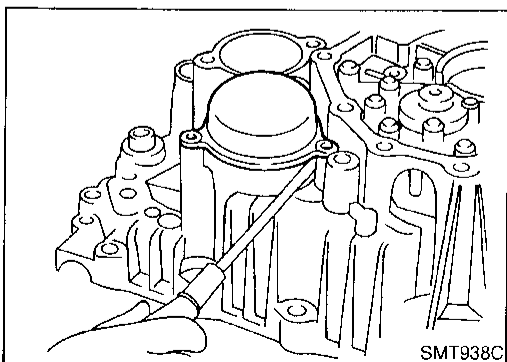

- Insert a screwdriver as shown in the figure to remove oil filter.


SC

EL


IDX

# DISASSEMBLY


## Center Case (Cont'd)

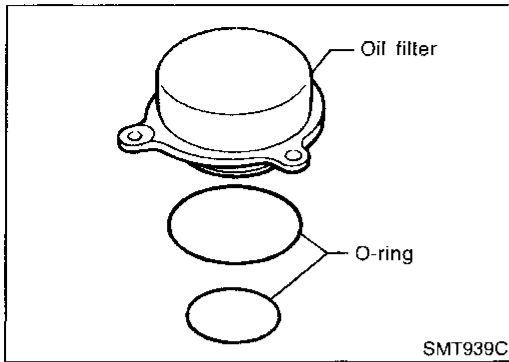


3. Remove O-rings from oil filter.
- Do not reuse O-rings.

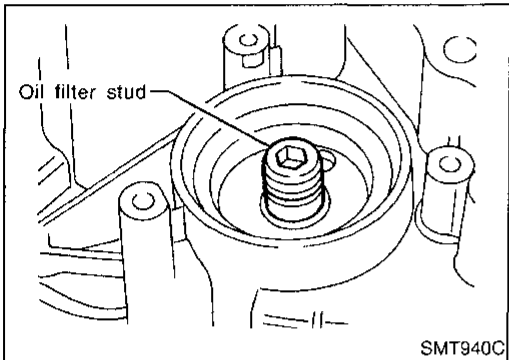

4. Remove oil filter stud.

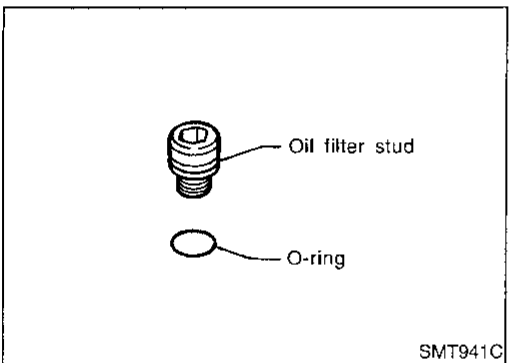


5. Remove O-ring from oil filter stud.
- Do not reuse O-ring.

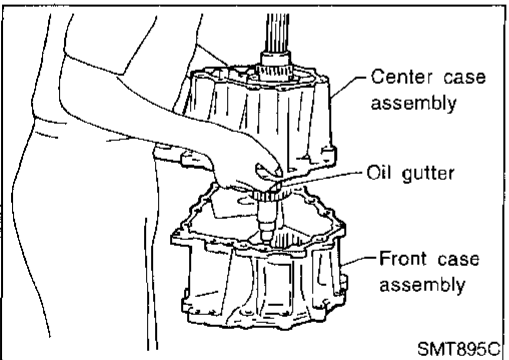

## Front Case DISASSEMBLY

1. Remove rear case from center case. Refer to TF-88.
2. Remove front case from center case.

NBTF0050

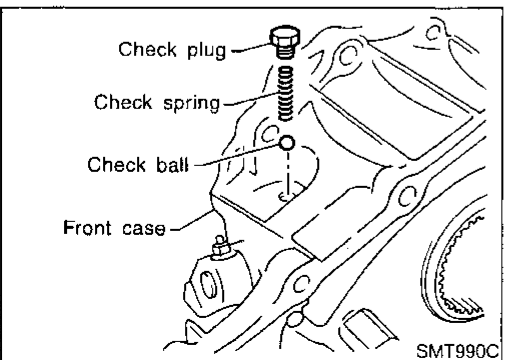


## Shift Rod Components

1. Remove check plug, then check spring and check ball.
2. Remove wait detection switch.


NBTF0050S01

# DISASSEMBLY


Front Case (Cont'd)

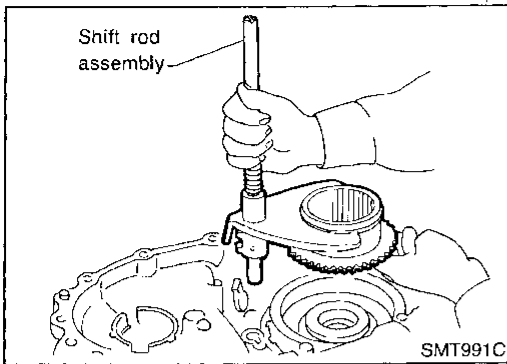


3. Remove shift rod components together with 2-4 sleeve and L-H sleeve.

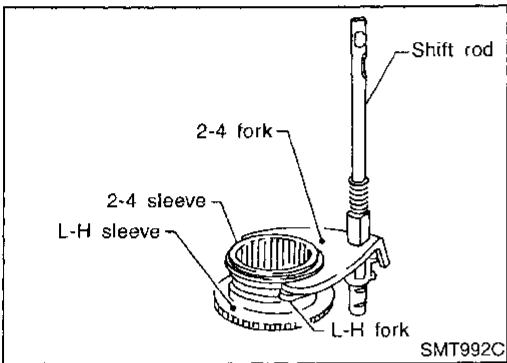


4. Remove 2-4 sleeve and L-H sleeve from 2-4 fork and L-H fork respectively.

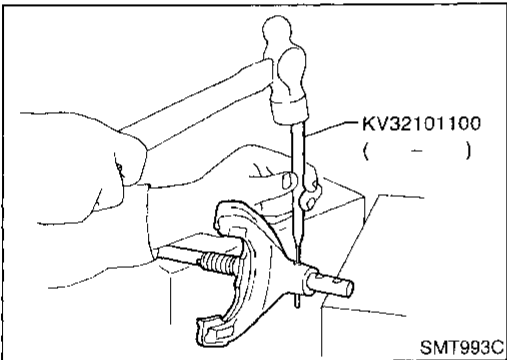

5. Drive out roll pin from shift rod.
  - Do not reuse roll pin.

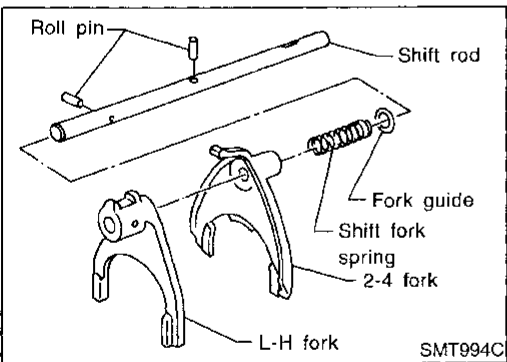

6. Remove L-H fork, 2-4 fork, shift fork spring and fork guide from shift rod.

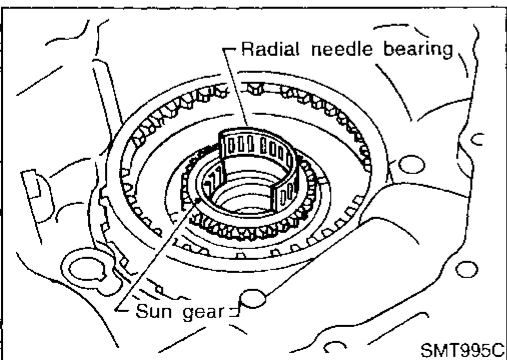

## Planetary Carrier, Sun Gear and Internal Gear

NBTF0050S02

1. Remove radial needle bearing from sun gear.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL


IDX

# DISASSEMBLY


## Front Case (Cont'd)

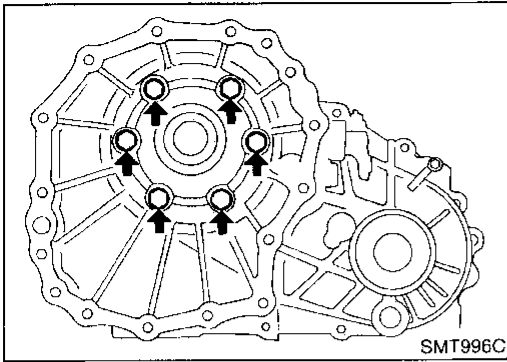


2. Remove bolts to detach transfer cover.
  - Do not reuse bolts.

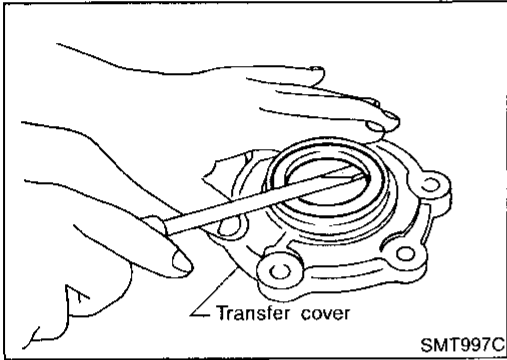


3. Remove oil seal from transfer cover.
  - Do not reuse oil seal.

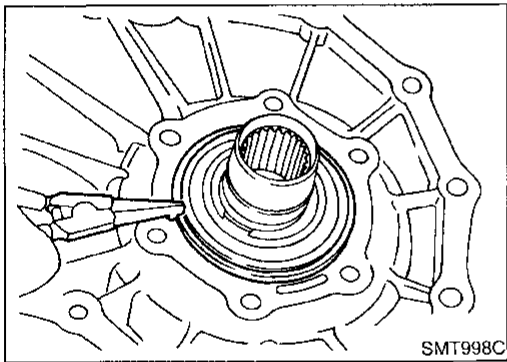

4. Remove snap ring from main gear bearing.
  - Do not reuse snap ring.

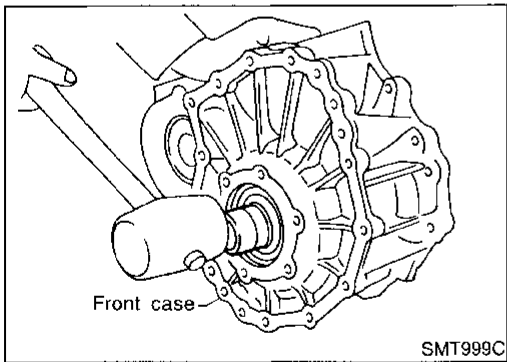


5. Remove sun gear by tapping it lightly.

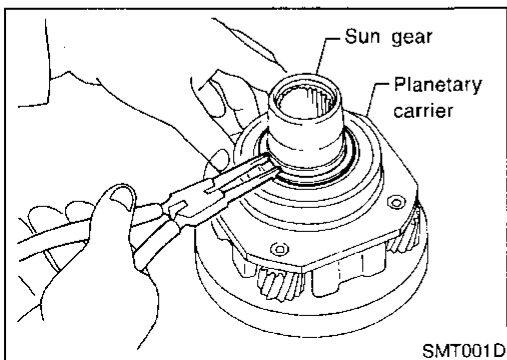

6. Remove snap ring from sun gear.
  - Do not reuse snap ring as it is a selective part.
7. Remove washer from sun gear.

# DISASSEMBLY

Front Case (Cont'd)

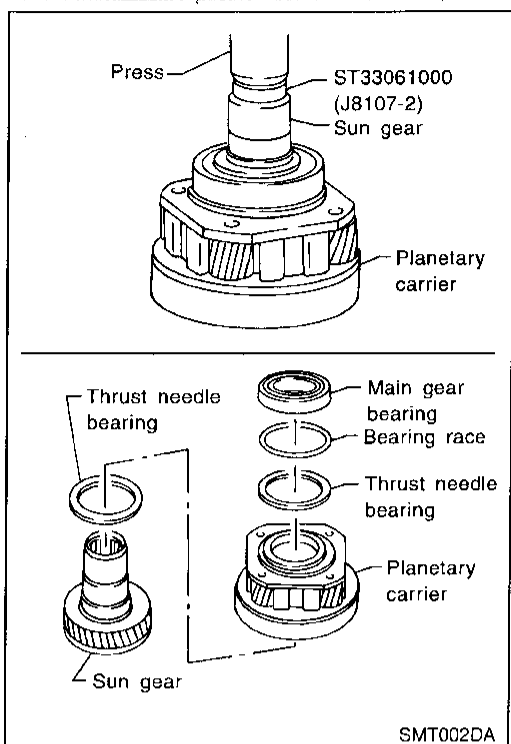

8. Set an adapter to sun gear as shown in the figure. Remove sun gear from planetary carrier. Remove main gear bearing, bearing race and thrust needle bearing (front and rear of planetary carrier) from sun gear.

GI

MA

EM


LC

EC

FE

AT

TF

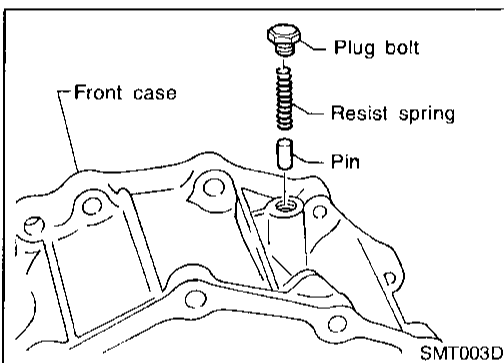


9. Remove plug bolt, then remove resist spring and pin.

PD

AX

SU

BR

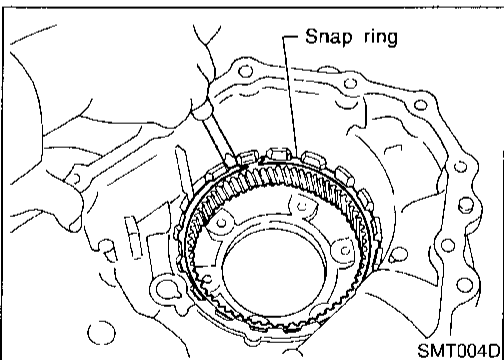

10. Remove snap ring, and remove internal gear.


- Do not reuse snap ring.

ST

RS

BT

HA

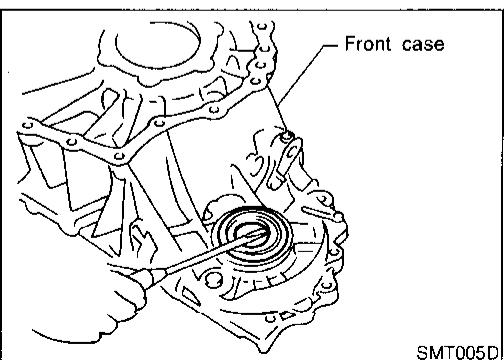

11. Remove front oil seal.

- Do not reuse oil seal.

12. Loosen nut of outer lever assembly to pull out cotter pin, and remove outer lever.


EL

13. Remove inner lever assembly.

IDX

# REPAIR FOR COMPONENT PARTS

Front Case

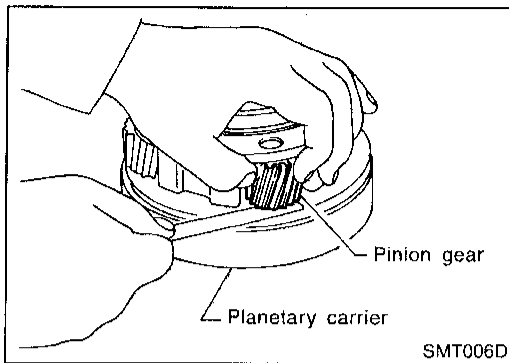

## Front Case

### INSPECTION

#### Planetary Carrier

NBTF0051


NBTF0051S01

- Measure end play of each pinion gear, and make sure the measurement is within specification shown below. If out of specification, replace planetary carrier with new one.

#### Pinion gear end play:

**0.1 - 0.7 mm (0.004 - 0.028 in)**


- Check working face of each gear, bearing and others for damage, burrs, partial wear, dents and other abnormality. If any is found, replace planetary carrier with new one.

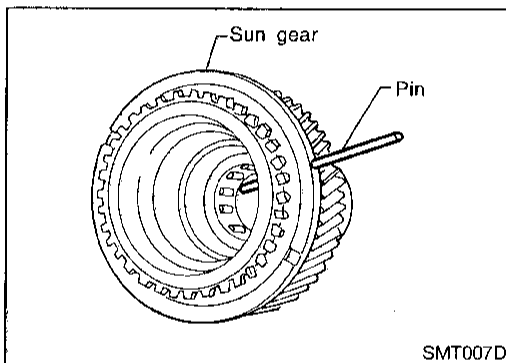

#### Sun Gear

NBTF0051S02


- Check if oil passage of sun gear is clogged. For this, try to pass a 3.6 mm (0.142 in) dia. wire through oil passage as shown in the figure.
- Check sliding/contact surface of each gear, bearing and others for damage, burrs, partial wear, dents, and other abnormality. If any is found, replace sun gear with new one.

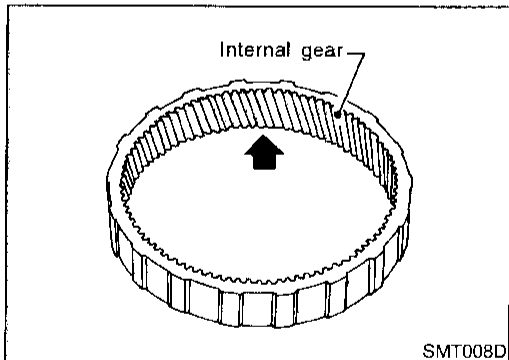

#### Internal Gear

NBTF0051S03


- Check internal gear teeth for damage, partial wear, dents and other abnormality. If any is found, replace internal gear with new one.

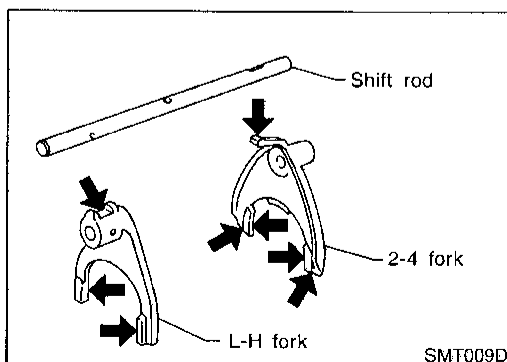

#### Shift Rod Components

NBTF0051S04


- Check working face of shift rod and fork for wear, partial wear, bending and other abnormality. If any is found, replace with new one.

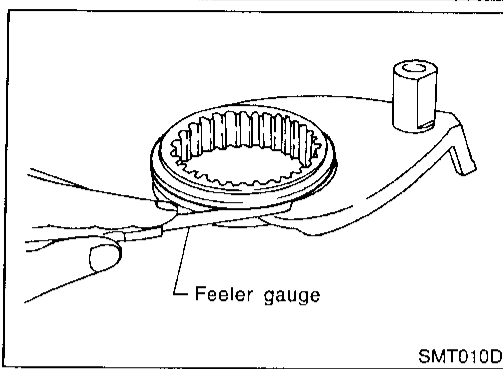

- Measure clearance between shift fork and sleeve. If it is out of specification, replace it with new one.

**Standard value:**

**Less than 0.36 mm (0.0142 in)**

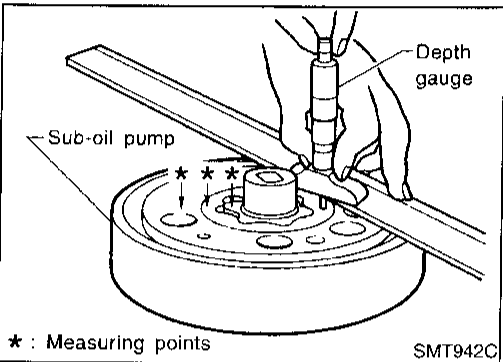

## Center Case

### INSPECTION

#### Sub-oil Pump

1. Check inner and outer circumference, tooth face, and side-face of inner and outer gears for damage or abnormal wear.
2. Measure side clearance between oil pump housing edge and inner gear/outer gear.
3. Make sure side clearance is within specification. If the measurement is out of specification, replace inner and outer gears together with new ones as a set.

**Specification:**

**0.15 - 0.35 mm (0.0059 - 0.0138 in)**

**For inner gear and outer gear, refer to SDS, TF-122.**

NBTF0052

NBTF0052S01

GI

MA

EM

LC

EC

FE

AT


TF

PD

AX

SU

BR

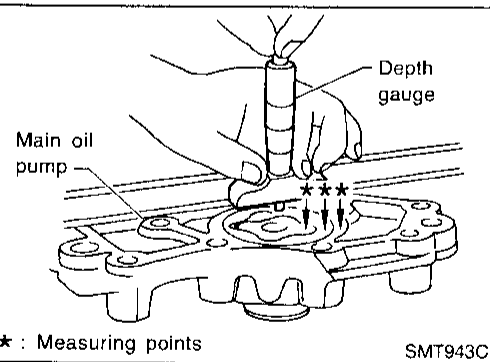

#### Main Oil Pump

1. Check inner and outer circumference, tooth face, and side-face of inner and outer gears for damage or abnormal wear.
2. Measure side clearance between oil pump housing edge and inner gear/outer gear.
3. Make sure side clearance is within specification. If the measurement is out of specification, replace inner and outer gears with new ones as a set.


**Specification:**

**0.15 - 0.35 mm (0.0059 - 0.0138 in)**

**For inner gear and outer gear, refer to SDS, TF-122.**

#### Mainshaft

- Check surfaces which contact sun gear, clutch drum, clutch hub, press flange, clutch piston, each bearing, etc. for damage, peel, partial wear, dents, bending, or other abnormal damage. If any is found, replace with new one.

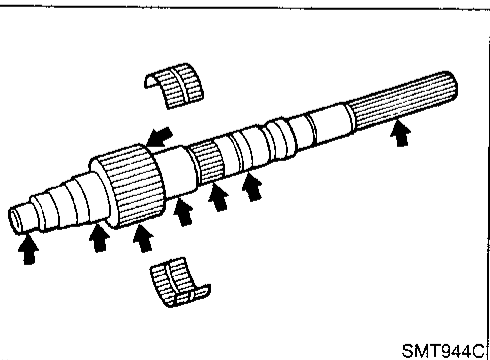

ST

RS

BT

HA

SC

EL

IDX






NBTF0052S02

NBTF0052S03



# REPAIR FOR COMPONENT PARTS

Center Case (Cont'd)

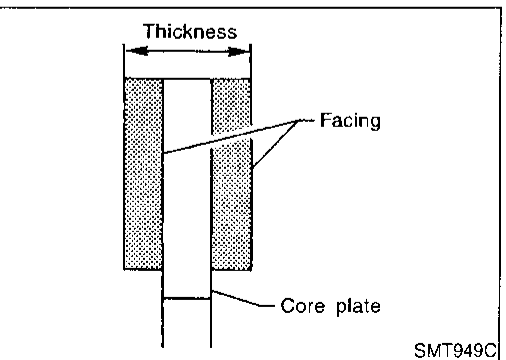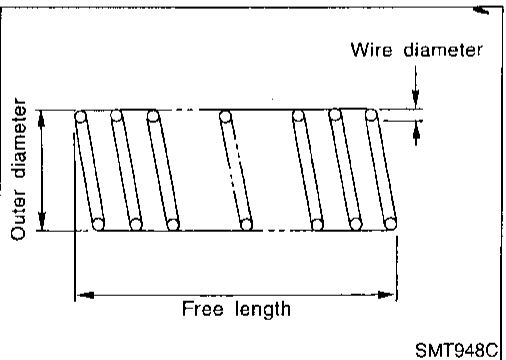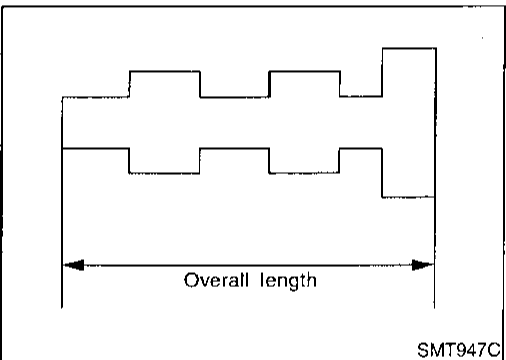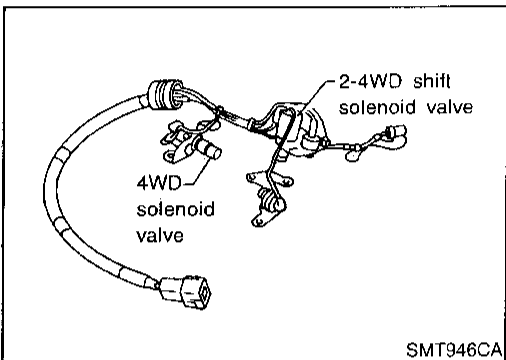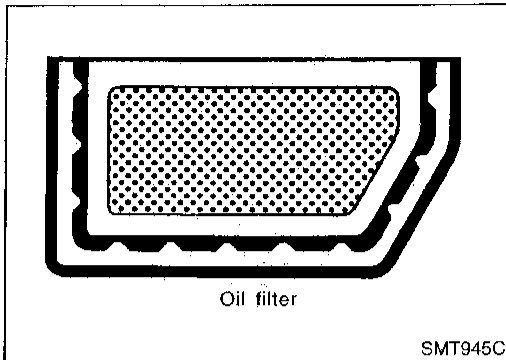

## Control Valve

NBTF0052S04

- Check oil filter screen for damage. If any is found, replace with new one.

- Check resistance between terminals of 4WD solenoid valve, 2-4WD shift solenoid valve and transfer fluid temperature sensor.

### Resistance:

Refer to "COMPONENT INSPECTION", TF-77.

- Check sliding faces of control valves and plugs for abnormality. If any is found, replace the control valve assembly with new one.

### CAUTION:

Replace control valve body together with clutch return spring as a set.

### Control valve:

Refer to SDS, TF-122.

- Check each control valve spring for damage or distortion, and also check its free length, outer diameter and wire diameter. If any damage or fatigue is found, replace control valve body with new one.

- Replace control valve body together with clutch return spring as a set.

### Inspection standard:

Refer to SDS, TF-122.

## Clutch

NBTF0052S05

- Check drive plate facing for damage, cracks or other abnormality. If any, replace with new one.
- Check the thickness of drive plate facing.

### Inspection standard:


Refer to SDS, TF-123.

### CAUTION:

- Measure facing thickness at 3 points to take an average.
- Check all the drive plates.
- Check return spring for damage or deformation.

# REPAIR FOR COMPONENT PARTS

Center Case (Cont'd)

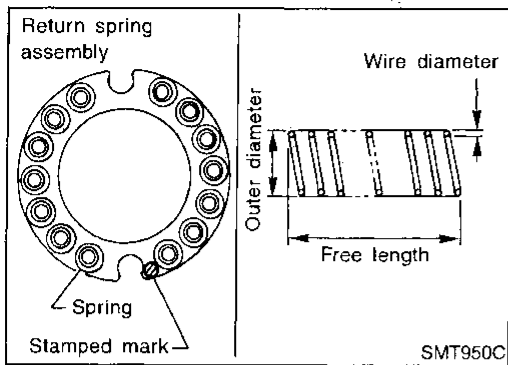

- Check stamped mark shown in the figure. Then, check that free length, outer diameter and wire diameter are within specifications. If any abnormality is found, replace with new return spring assembly of the same stamped number.

**Inspection standard:**

**Refer to SDS, TF-123.**

GI

MA

EM

LC

EC

FE

AT

**TF**

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

# ASSEMBLY

## Front Case

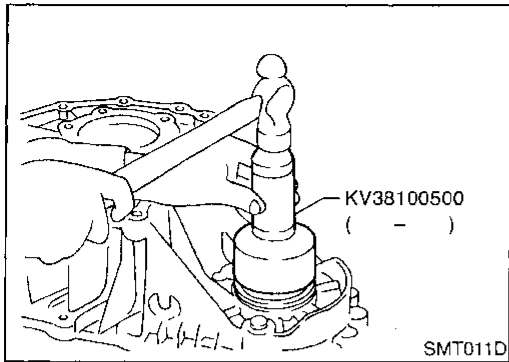

## Front Case

### ASSEMBLY


#### Planetary Carrier, Sun Gear and Internal Gear

NBTF0053

NBTF0053S01


1. Apply ATF to oil seal periphery, and install oil seal so that it is flush with the end face of front case.

- Do not reuse oil seal.

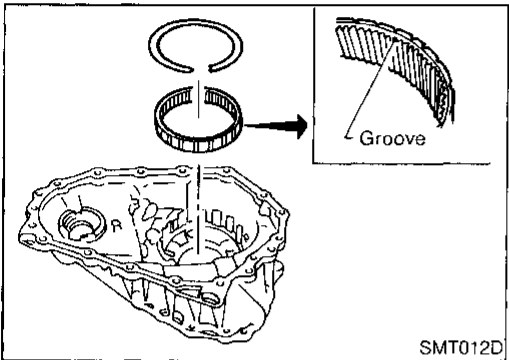


2. Install internal gear with its groove facing snap ring into front case. Then secure it with snap ring.


- Do not reuse snap ring.

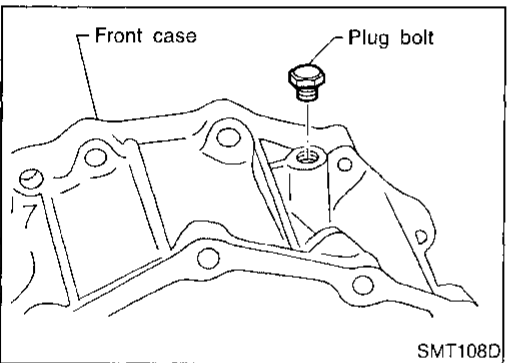

3. Remove all the liquid gasket on plug bolt and front case. Apply locking sealant to plug bolt, install it to front case and tighten it to specified torque.


- With one crest of plug bolt inserted in the hole, apply liquid gasket 1215 to the thread.

 : 19 - 25 N·m (1.9 - 2.5 kg·m, 14 - 18 ft·lb)

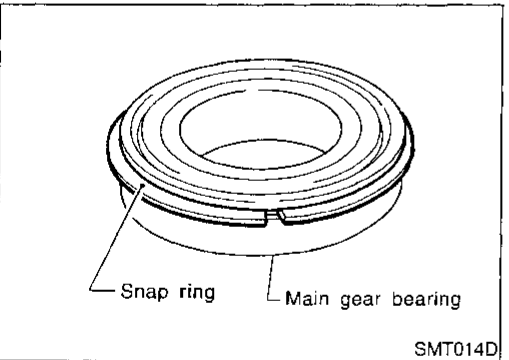


4. Install snap ring to main gear bearing.


- Do not reuse snap rings.

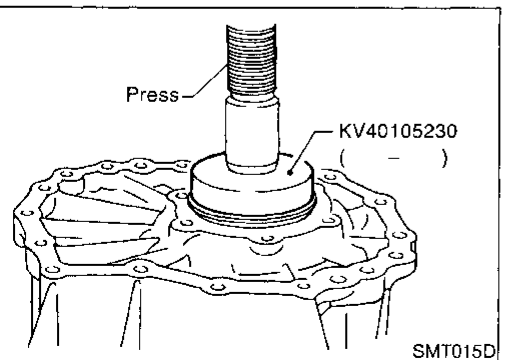


5. Set main gear bearing to front case, then press it.

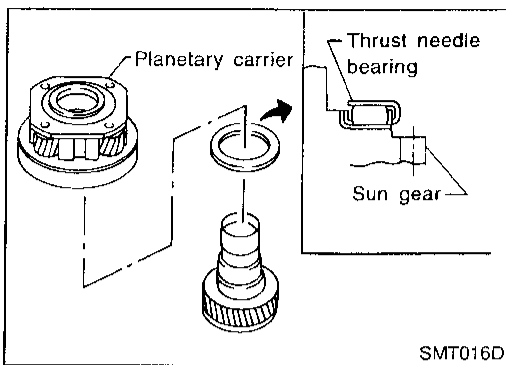

6. Install thrust needle bearing to sun gear.
7. Install sun gear to planetary carrier.

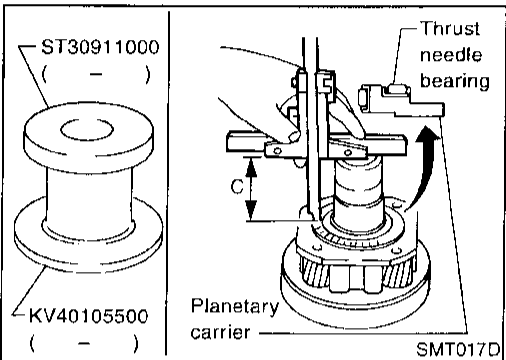

8. Set a support (KV40105500) to bushing replacer puller (ST30911000) as shown in the figure, and place planetary carrier on it.
9. Install thrust needle bearing to planetary carrier with its roller facing front case.
10. Measure "C" from the end of sun gear to the roller surface of thrust needle bearing.

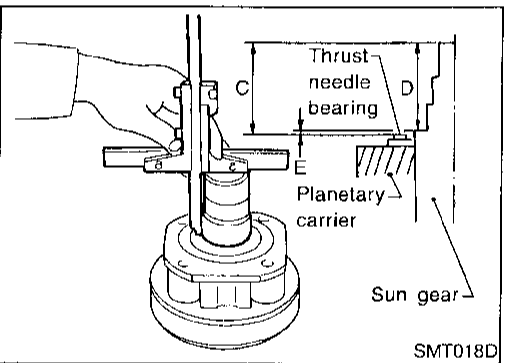

11. Measure "D" from the end of sun gear to the main gear bearing contact surface.
12. Calculate end play "E" using "C" and "D" obtained in steps 10 and 11. Select bearing race so that the end play becomes the standard value.

**Calculation formula:**

$$\text{End play "E"} = \text{"C"} - \text{"D"}$$



**Standard end play:**

$$0.1 - 0.25 \text{ mm (0.0039 - 0.0098 in)}$$

**Bearing race:**

**Refer to SDS, TF-124.**

13. Set planetary carrier to press in the status described in step 8. Then install the selected bearing race to planetary carrier.

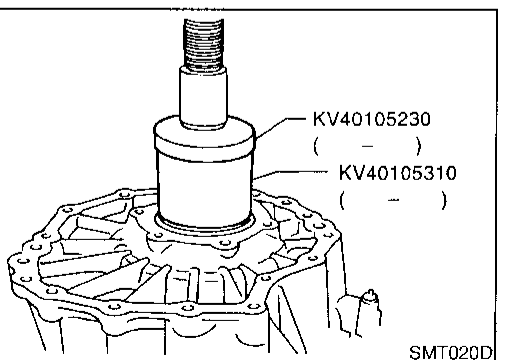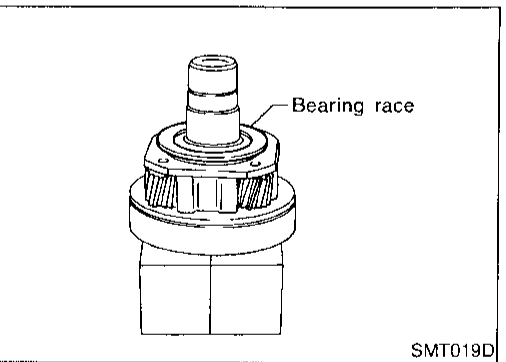

14. Install front case to planetary carrier. Set a support ring (KV40105310) and an adapter B (KV40105230) to main gear bearing inner race, then press it.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

# ASSEMBLY

## Front Case (Cont'd)

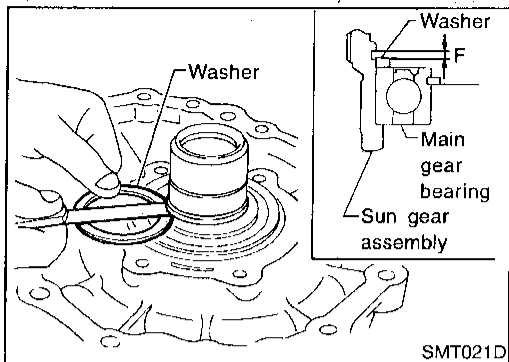


15. Install washer to sun gear assembly, and select proper snap ring so that end play "F" of sun gear is within specifications.

**Standard end play "F":**

**0 - 0.15 mm (0 - 0.0059 in)**

**Snap ring: Refer to SDS, TF-124.**

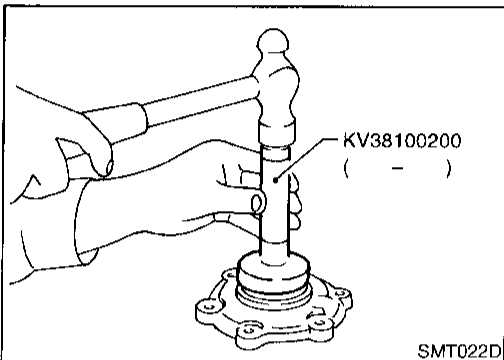


16. Install the selected snap ring.

- **Do not reuse snap rings.**

17. Apply ATF to the periphery of new transfer cover oil seal, and attach it at 1.5 mm (0.059 in) from the transfer cover and face.

- **Do not reuse oil seal.**

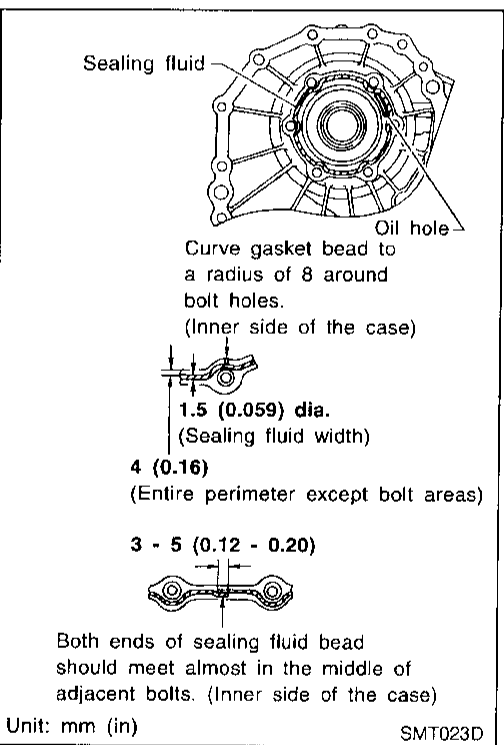


18. Apply sealing fluid (Loctite 518-C1335 x 25) to transfer cover mounting surface of front case as shown in the figure.

### CAUTION:

- **Remove all foreign materials such as water, oil, and grease from mating surfaces of front case and transfer cover.**

- **Prevent sealing fluid from entering into oil holes of front case.**

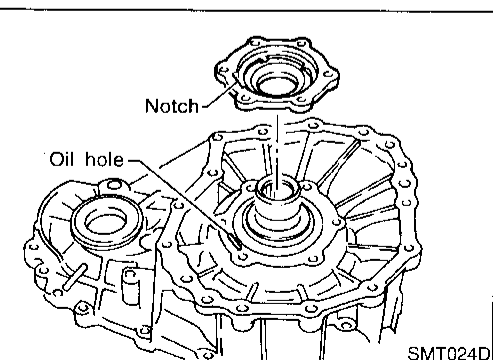


19. Align oil hole of front case with notch of transfer cover, and tighten bolts.

**Ⓜ : 49 - 58 N·m (5.0 - 5.9 kg·m, 36 - 43 ft·lb)**

- **Do not reuse bolts.**


# ASSEMBLY

Front Case (Cont'd)

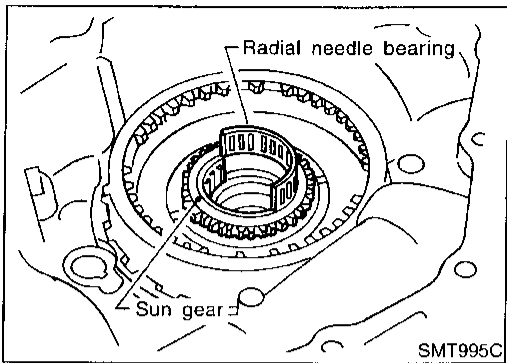

20. Apply petroleum jelly to radial needle bearing, and install it inside sun gear.
21. Install shift rod assembly to front case assembly. Refer to "Shift Rod Assembly", TF-109.
22. Install center case assembly to front case assembly. Refer to "Final Assembly", TF-118.
23. Install rear case assembly to center case. Refer to "Final Assembly", TF-118.

GI  
MA  
EM  
LC

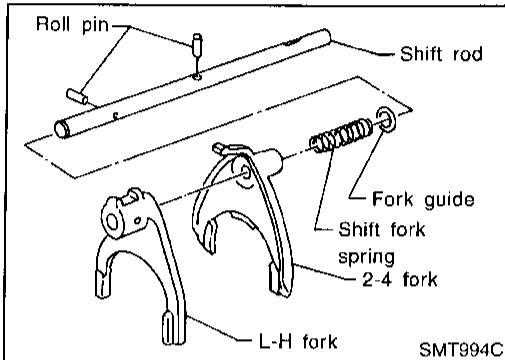


## Shift Rod Assembly

NBTF0053SD2

1. Install fork guide, shift fork spring, 2-4 fork, and L-H fork to shift rod, and secure them with roll pins.
- Do not reuse roll pins.


EC  
FE  
AT

TF

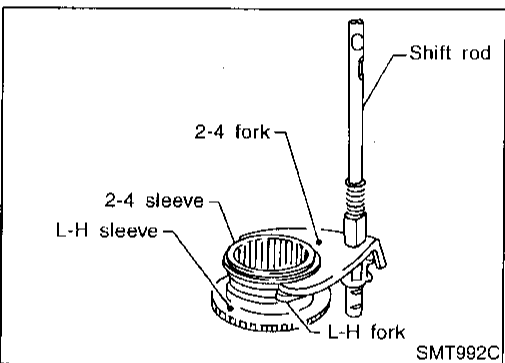


2. Install 2-4 sleeve and L-H sleeve to each fork.

PD  
AX  
SU  
BR

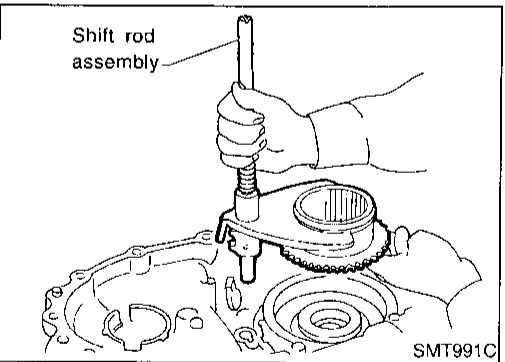

3. While aligning L-H sleeve with planetary carrier, install shift rod assembly to front case.

ST  
RS  
BT  
HA

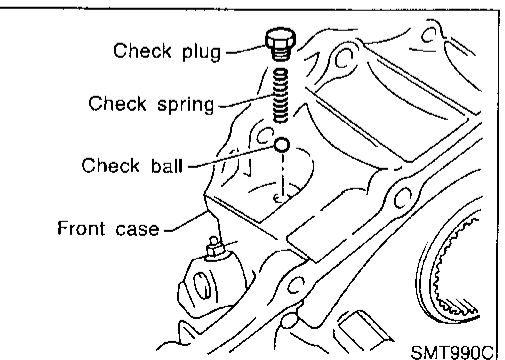

4. Remove all the liquid gasket on check plug and front case, and install check ball and check spring to front case. Apply gasket fluid 1215 (Three Bond) to check plug, install it to front case, and tighten it to specified torque.

SC  
EL


- With plug bolt threaded one pitch into the hole, apply gasket fluid 1215 (Three Bond) to the thread.

**Ⓜ : 19 - 25 N·m (1.9 - 2.5 kg·m, 14 - 18 ft·lb)**


IDX

5. Remove all the liquid gasket on the switch fitting and inner side of front case, and with wait detection switch threaded one pitch into the hole, apply gasket fluid 1215 (Three Bond) to the thread, install it, and tighten it to specified torque.

# ASSEMBLY

 : 15 - 20 N·m (1.5 - 2.0 kg-m, 11 - 14 ft-lb)

- Wait detection switch harness connector is black.
6. Install center case assembly to front case assembly. Refer to "Final Assembly", TF-118.
  7. Install rear case assembly to center case. Refer to "Final Assembly", TF-118.

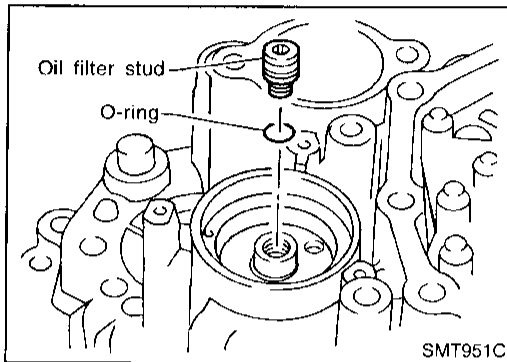


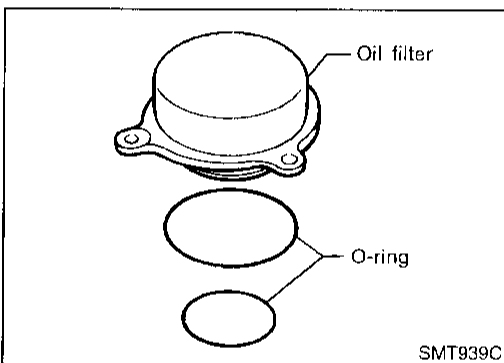
## Center Case ASSEMBLY


### Oil Filter


NBTF0054

NBTF0054S01

1. Apply ATF or petroleum jelly to new O-ring, and install it to oil filter stud.
- Do not reuse O-rings.
2. Install oil filter stud to center case, and tighten it.
-  : 25 - 35 N·m (2.6 - 3.6 kg-m, 19 - 26 ft-lb)




3. Apply ATF or petroleum jelly to two new O-rings, and install them to oil filter.
- Do not reuse O-rings.
4. Install oil filter to center case and tighten bolts.
-  : 7 - 9 N·m (0.7 - 0.9 kg-m, 61 - 78 in-lb)
- Do not knock oil filter with a tool such as a hammer.

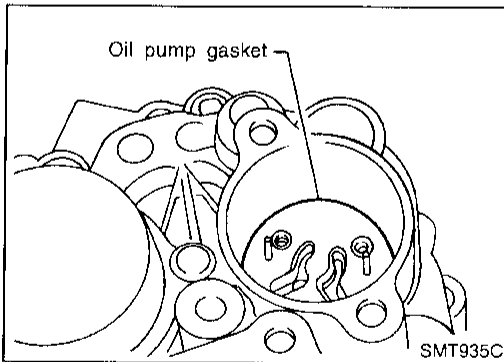

### Sub-oil Pump


NBTF0054S02

1. Install new oil pump gasket to center case by aligning it with dowel pin inside the center case.
- Do not reuse gaskets.

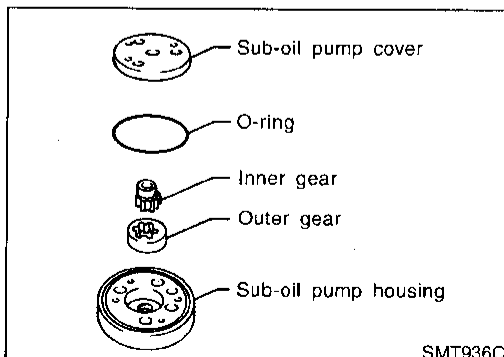

2. Install outer gear\* and inner gear to sub-oil pump housing, and measure side clearance. Refer to "Sub-oil Pump", "INSPECTION", TF-103.
  3. Set new O-ring to sub-oil pump housing, and install sub-oil pump cover.
- Do not reuse O-rings.

\* Identification mark "▼" is placed on the side of sub-oil pump cover.

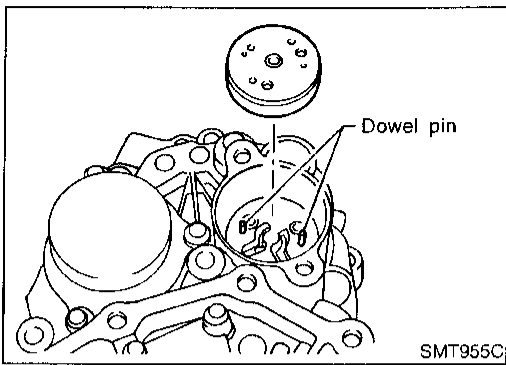

- Align dowel pin hole and mounting bolt hole of sub-oil pump assembly with center case. Then tighten bolts.


: 7 - 9 N·m (0.7 - 0.9 kg-m, 61 - 78 in-lb)

GI

MA

EM

LC

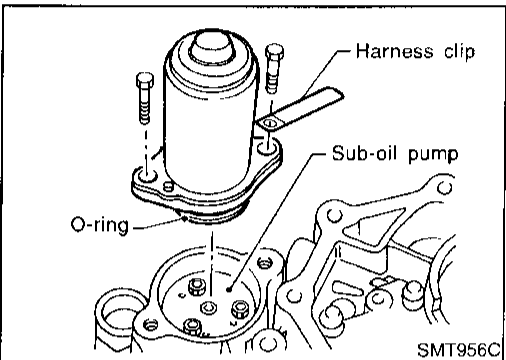

- Apply ATF or petroleum jelly to new O-ring and install it to transfer motor.

- Fit double-flat end of transfer motor shaft into slot of sub-oil pump assembly. Then tighten bolts.


: 41 - 48 N·m (4.2 - 4.9 kg-m, 30 - 35 ft-lb)

EC

FE

AT

TF

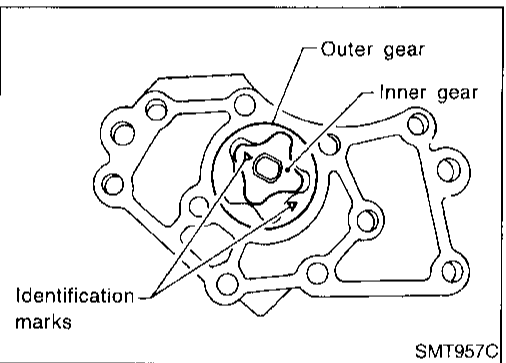

## Main Oil Pump

NBTF0054S03


- Install inner gear and outer gear in the main oil pump housing with their identification marks facing toward center case mounting surface side. Then, measure the side clearance. Refer to "Main Oil Pump", "Center Case", TF-103.

PD

AX

SU

BR

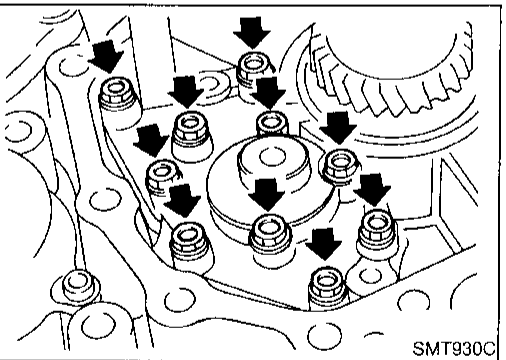

- Install main oil pump assembly to center case assembly, and tighten bolts.

: 7 - 9 N·m (0.7 - 0.9 kg-m, 61 - 78 in-lb)

- Install oil pump shaft to main oil pump, then install rear case assembly to center case. Refer to "Final Assembly", TF-118.

ST

RS

BT

HA

SC






EL

IDX



# ASSEMBLY

Center Case (Cont'd)

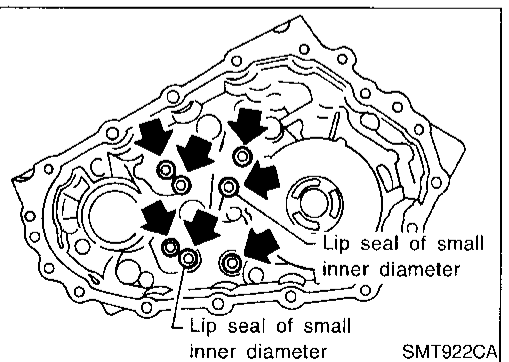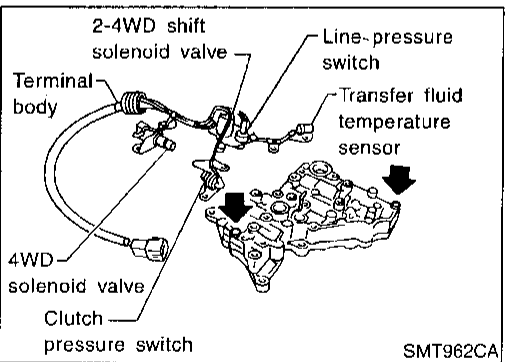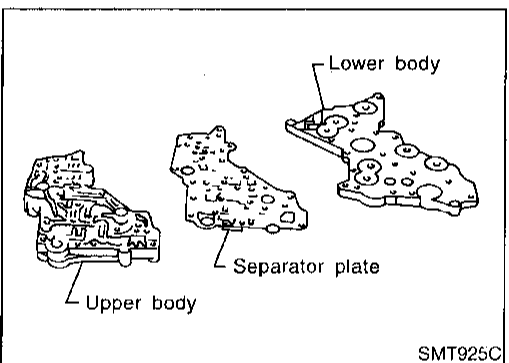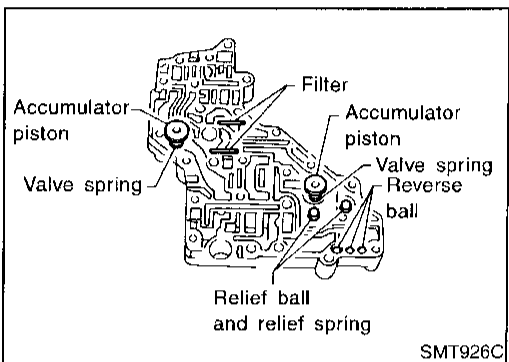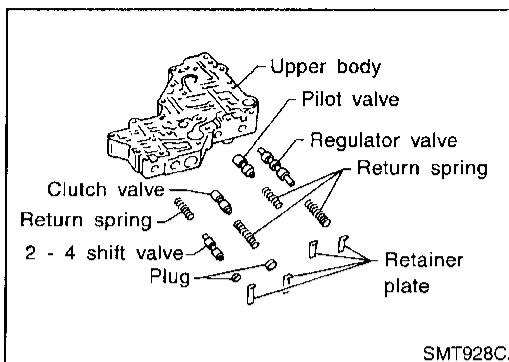

## Control Valve

NBT0054904

1. Clean upper body, control valves and springs with cleaning agent, and apply air blow.
2. Dip control valves in ATF, and apply ATF to the valve-mounting area of upper body.
3. Install each control valve, spring, and plug to upper body, and fix it with retainer plates.

### CAUTION:

- To insert control valves into upper body, place upper body on a level surface in order to prevent flaw or damage.
  - Make sure each control valve is smoothly inserted.
4. Install reverse balls, relief balls and relief springs, accumulator pistons, valve springs and two filters to upper body.

5. Install lower body and separator plate to upper body.
  - Do not reuse separator plates.


6. With lower body down, tighten two bolts in the position shown in the figure.

7. Apply ATF or petroleum jelly to new O-ring, and install it to 2-4WD shift solenoid valve, terminal body, line pressure switch and 4WD solenoid valve. Install them to control valve assembly.

- Do not reuse O-rings.

8. Apply ATF or petroleum jelly to lip seals, and install them to center case.


- Do not reuse lip seals.
- There are 2 kinds of lip seals (lip seal of large inner diameter: 5 pieces, lip seal of small inner diameter: 2 pieces). Confirm the position before installation.

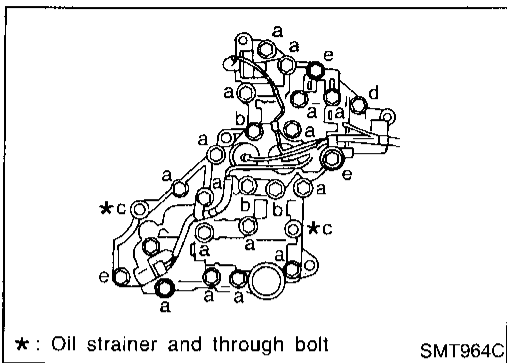

9. Install bolts as shown in the figure, and tighten them to specified torque.


Bolt symbol	a	b	*c	d	e
Length under head mm (in)	38 (1.50)	43.5 (1.713)	62 (2.44)	19 (0.75)	52 (2.05)
Q'ty	17	3	2	1	1
Tightening torque N·m(kg-m, in-lb)	6.9 - 8.8 (0.70 - 0.90, 61.1 - 77.9)				

\*: Tighten with oil strainer.

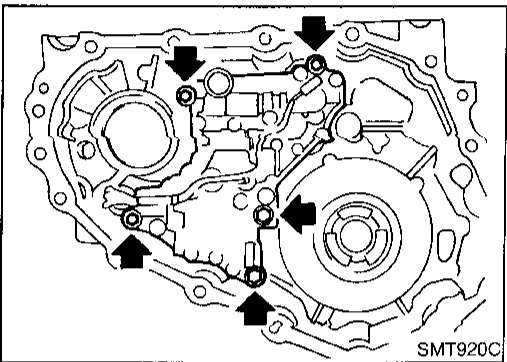


10. Install control valve assembly to center case, and tighten bolts.

: 6.9 - 8.8 N·m (0.70 - 0.90 kg-m, 61.1 - 77.9 in-lb)

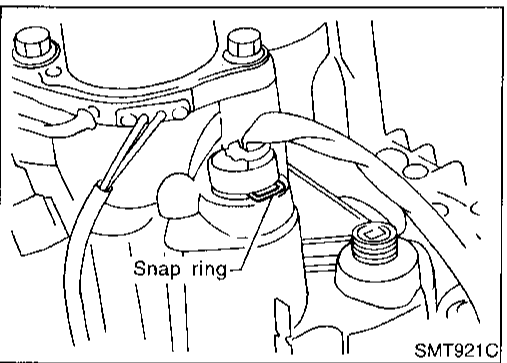

11. Secure terminal body with snap ring.

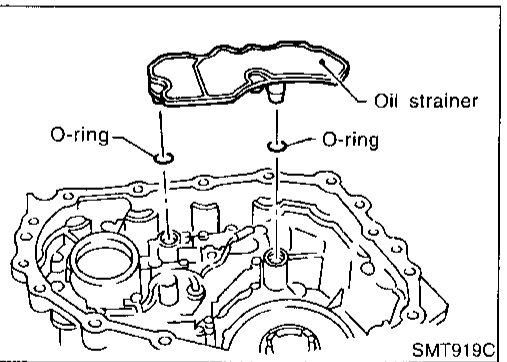

12. Apply ATF or petroleum jelly to O-rings, and install them to oil strainer.


**CAUTION:**

**Do not reuse snap ring.**

13. Install oil strainer to control valve assembly.

14. Install mainshaft and clutch drum to center case. Refer to "Mainshaft and Clutch Drum", TF-114.

15. Install front case assembly and rear case assembly. Refer to "Final Assembly", TF-118.

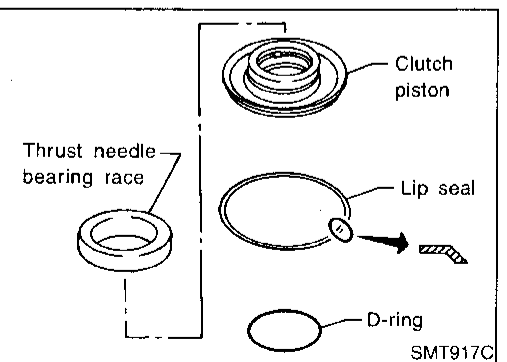

**Clutch Piston**

NBT0054S05

1. Apply ATF to D-ring and lip seal, and install them to clutch piston.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA






SC

EL

IDX

# ASSEMBLY

## Center Case (Cont'd)

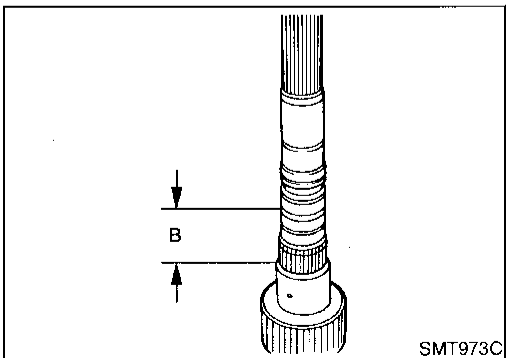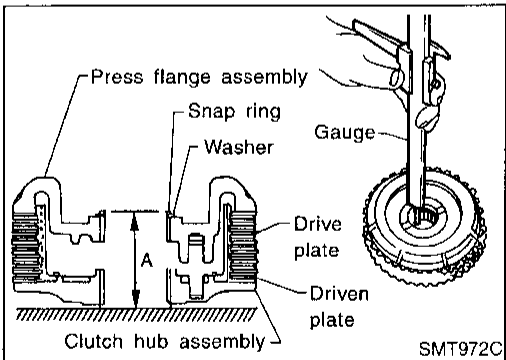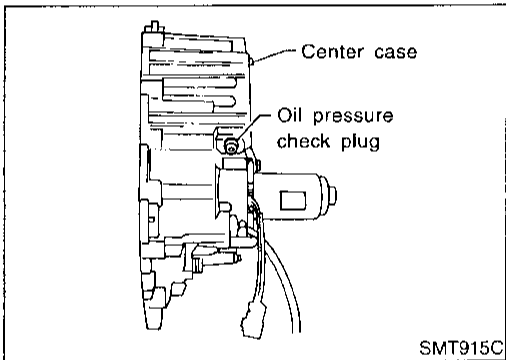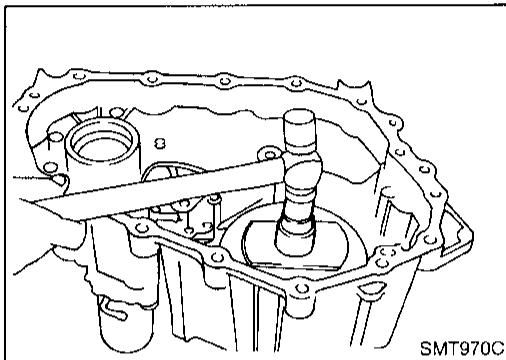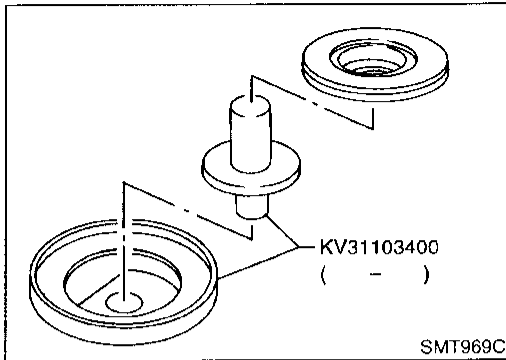

2. Set clutch piston to a clutch piston attachment (KV31103400).
3. Set the clutch piston attachment to center case, and install clutch piston, tap it lightly.
4. Install slide needle bearing race to clutch piston.
5. Remove all the liquid gasket from oil pressure check port and inside center case. With oil pressure check plug threaded in 1 or 2 pitches, apply gasket fluid 1215 (Three Bond) to the thread of plug, and tighten.
  - ⚙️ : 10 - 17 N·m (1.0 - 1.7 kg·m, 87 - 148 in·lb)
6. Install mainshaft and clutch drum. Refer to "Mainshaft and Clutch Drum", TF-114.

## Mainshaft and Clutch Drum

NBTF0054S06

1. Install drive plates, driven plates and press flange to clutch hub.
2. Place clutch hub on a surface plate and measure dimension "A" between snap ring mounting surface of press flange and clutch drum sliding face of clutch hub.

### CAUTION:

Measure at least 2 points, and take an average.

3. Measure dimension "B" between the gear end of mainshaft and the snap ring mounting portion.
4. Calculate end play using dimension "A" and dimension "B" (obtained in steps 2 and 3), and select proper retaining plate so that the end play is within specifications.

### Calculation formula:

$$\text{End play} = B - A - \text{Retaining plate thickness}$$


### Standard end play:

$$0.2 - 0.5 \text{ mm (0.008 - 0.020 in)}$$

### Retaining plate:

Refer to SDS, TF-123.

## TF-114

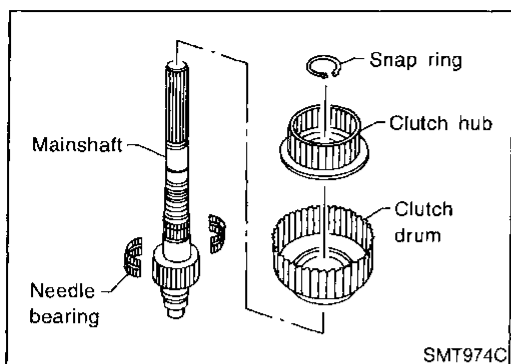


5. Install clutch drum, needle bearing and clutch hub to mainshaft, and secure them with snap ring.
  - Do not reuse snap ring.

GI

MA

EM

LC

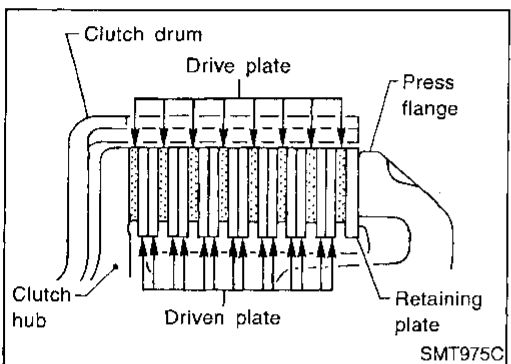


6. Install each clutch to clutch drum.

EC

FE

AT

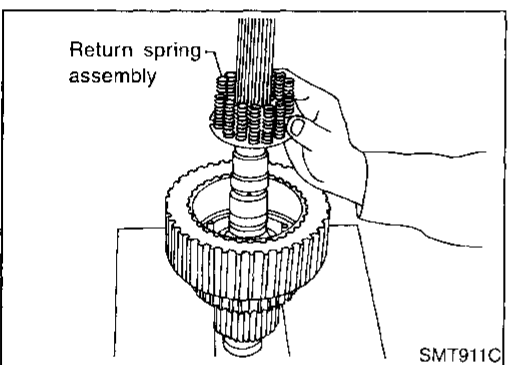

7. Align the notch of return spring assembly with the pin of clutch hub, and install it.


TF

PD

AX

SU

BR

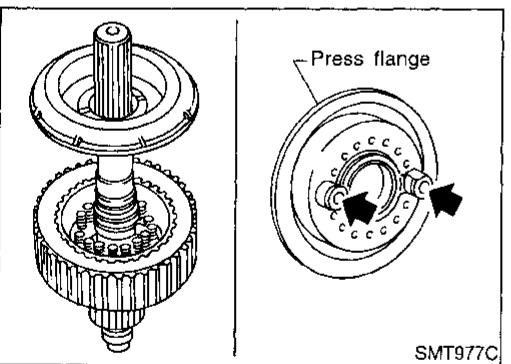


8. Install press flange (with the holes indicated by arrows aligned with pins of clutch hub).

ST

RS

BT

HA

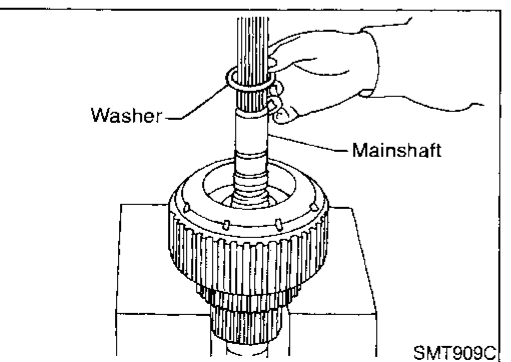

9. Install washer.


SC

EL

IDX


# ASSEMBLY

## Center Case (Cont'd)

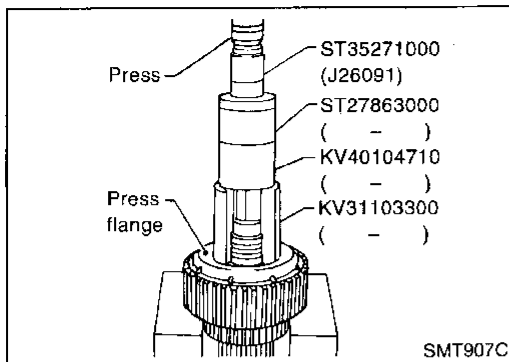


- Pass mainshaft through snap ring. Set a drift (KV31103300), a support ring (KV40104710), a support ring (ST27863000) and a drift (ST35271000) to press flange at the position shown in the figure, and press snap ring until it fits into snap ring groove on mainshaft.


- Do not reuse snap ring.

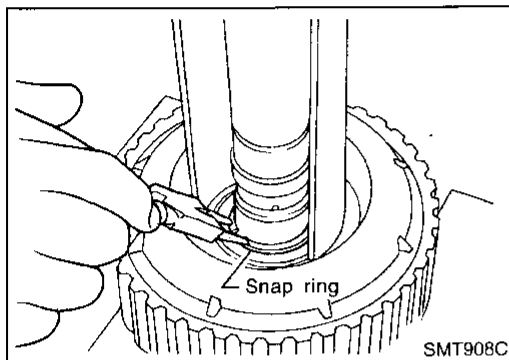

- Fix snap ring to mainshaft.

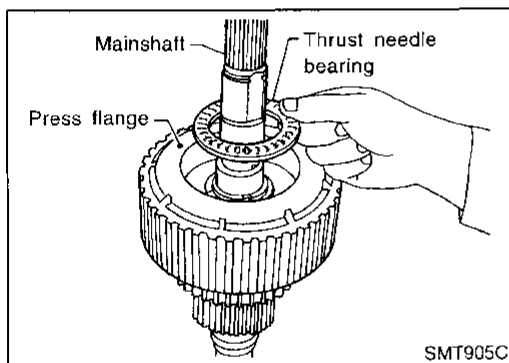

- Install thrust needle bearing to press flange.

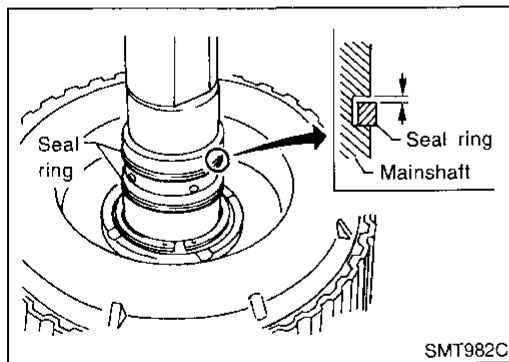

- Apply petroleum jelly to new seal rings, and install them to mainshaft. Measure clearance between seal ring and groove using feeler gauge.

**Standard clearance:**

0.05 - 0.30 mm (0.0020 - 0.0118 in)


**Limit clearance:**

0.30 mm (0.0118 in)


- Pass seal ring from mainshaft rear end to install it.

**Seal ring dimension:**

Refer to SDS, TF-123.

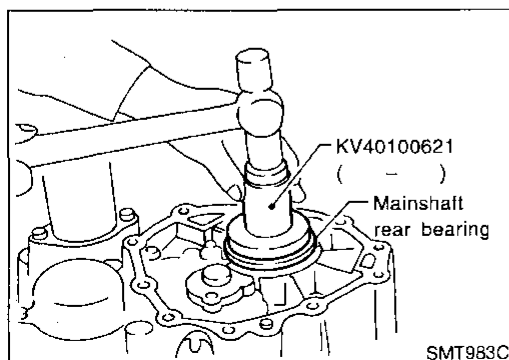


- Install mainshaft rear bearing to center case.

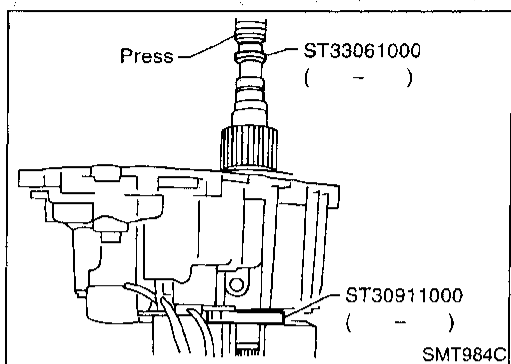

15. Place puller (ST30911000) to mainshaft rear bearing inner race, and set it to press stand.
16. Place adapter (ST33061000) to the tip of mainshaft, and press mainshaft into center case.

GI  
MA  
EM  
LC

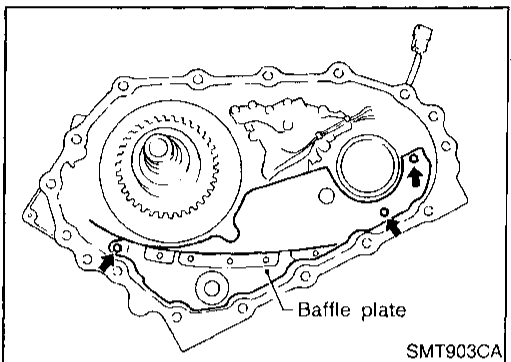


17. Install baffle plate to center case, and tighten bolts.  
 ⚙️ : 3.7 - 5.0 N-m (0.38 - 0.51 kg-m, 33.0 - 44.3 in-lb)
18. Install front drive shaft and drive chain. Refer to "Front Drive Shaft and Drive Chain" below.
19. Install front case assembly and rear case assembly. Refer to "Final Assembly", TF-118.

EC  
FE  
AT


**TF**

## Front Drive Shaft and Drive Chain

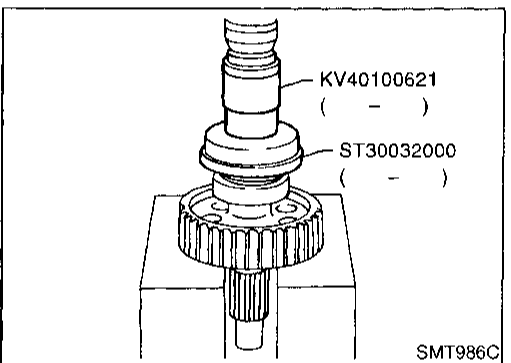


1. Place a base (ST30032000) to front drive shaft rear bearing inner race, and press it using a drift (KV40100621).

PD  
AX

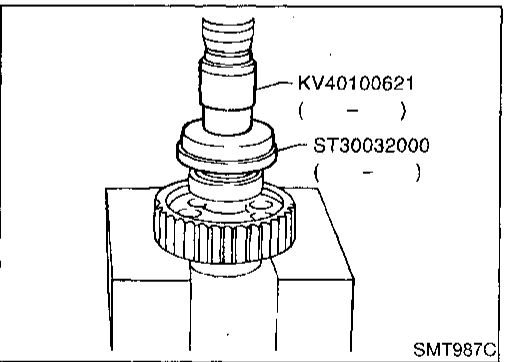

2. Place base (ST30032000) to front drive shaft front bearing inner race, and press it using the drift (KV40100621).

SU  
BR  
ST  
RS

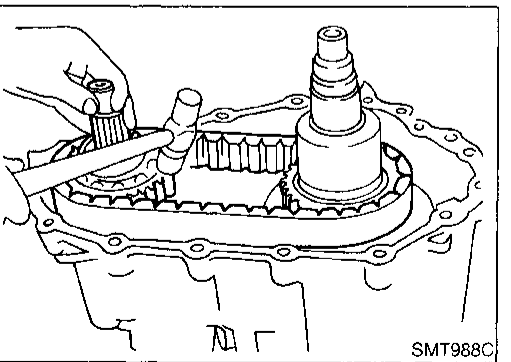


3. Install drive chain temporarily to front drive shaft and drive gear of clutch drum.
4. Tap front drive shaft with a plastic hammer while keeping it upright and press-fit front drive shaft rear bearing.
- **Be careful not to tap drive chain with a hammer.**


BT  
HA  
SC  
EL  
IDX

# ASSEMBLY

## Center Case (Cont'd)

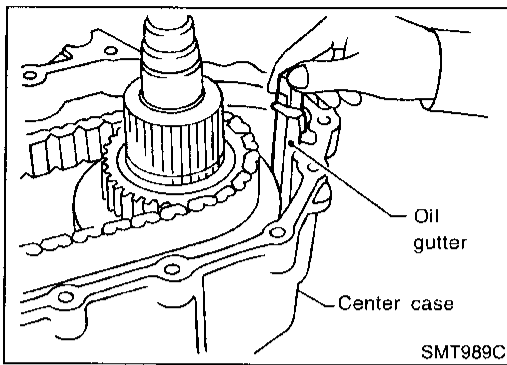


5. Align claw of oil gutter with center case, and install it.
6. Install front case assembly and rear case assembly. Refer to "Final Assembly", TF-118.

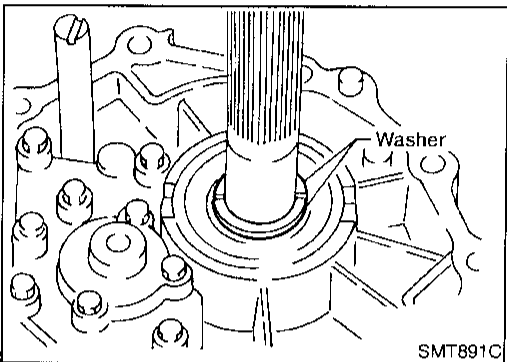

## Final Assembly


NB1F0055

1. Install C-rings to mainshaft rear bearing.

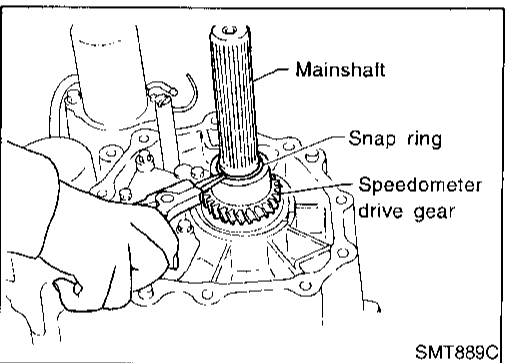

2. Check speedometer drive gear teeth for abnormal wear. Set speedometer drive gear properly on mainshaft, and secure it with snap ring.


- Do not reuse snap ring.

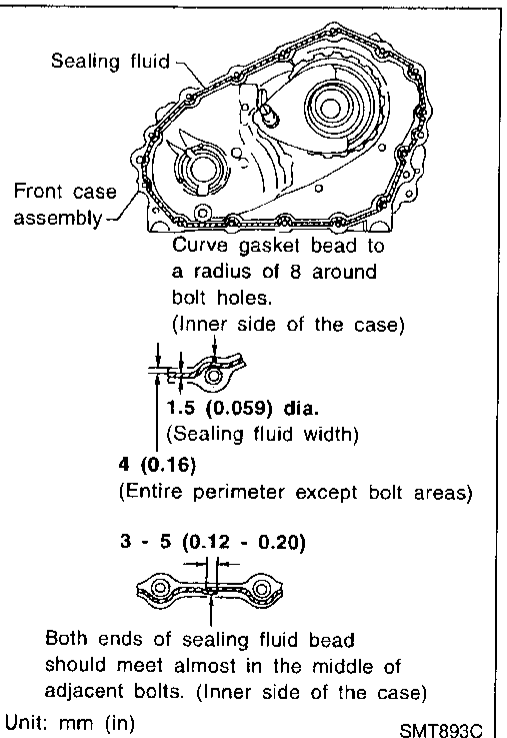


3. Apply sealing fluid 518 (Loctite) to the entire center case mounting surface of front case as shown in the figure.

### CAUTION:

Remove all foreign materials such as water, oil and grease from center case and front case mating surfaces.

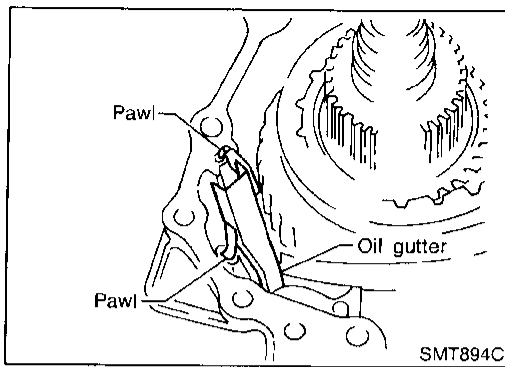

4. Make sure the two claws of oil gutter are securely attached to slots in center case.

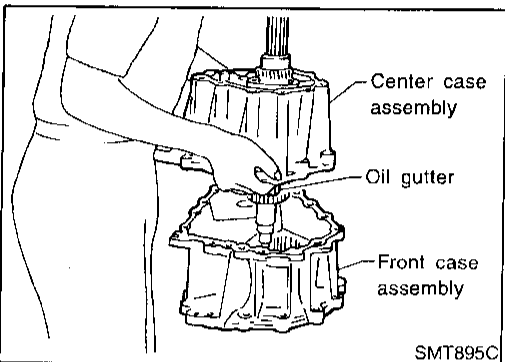


5. With the claws of oil gutter held by a finger, install center case assembly to front case assembly.

**CAUTION:**

Pay careful attention so that mainshaft end does not damage radial needle bearing in sun gear assembly.

6. Tap center case lightly with a rubber hammer or the like and press-fit front drive shaft bearing into front case.

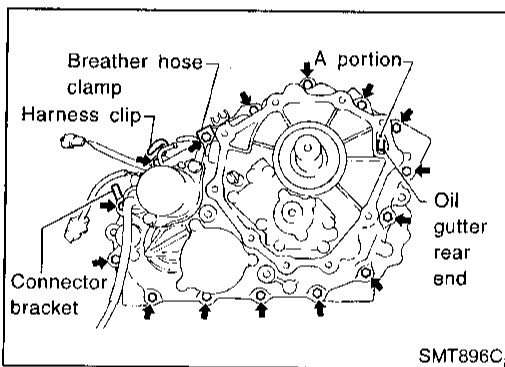


7. Make sure oil gutter rear end protrudes from point "A" in the figure.

8. Tighten bolts to specified torque.

$\square$  : 41 - 48 N·m (4.2 - 4.9 kg-m, 30 - 35 ft-lb)


- Be sure to install air breather hose clamp, connector bracket and harness clip.

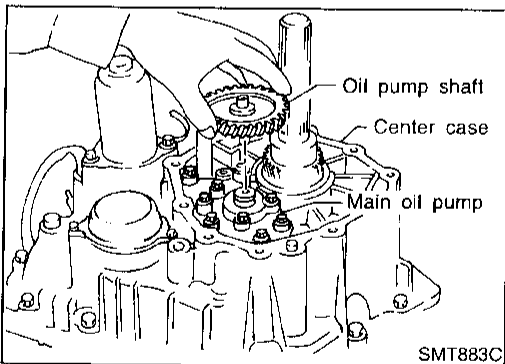

9. Fit double-flat end of oil pump shaft into slot of main oil pump and install it.

**NOTE:**

When oil pump shaft is rotated slightly, it drops into position where both parts fit.

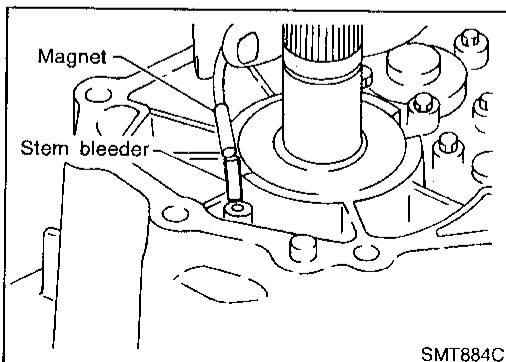


10. Install stem bleeder to center case.

GI  
MA  
EM  
LC  
EC  
FE  
AT  
TF  
PD  
AX  
SU  
BR  
ST  
RS  
BT  
HA  
SC  
EL  
IDX




# ASSEMBLY


Final Assembly (Cont'd)

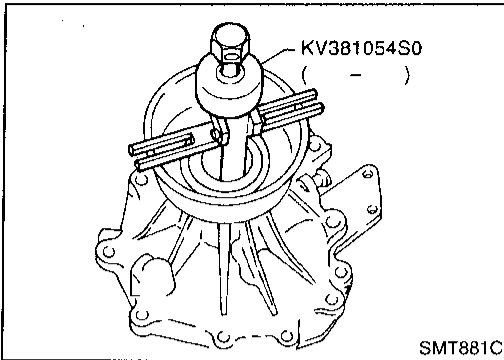

11. Remove rear oil seal.
  - **Do not reuse oil seal.**

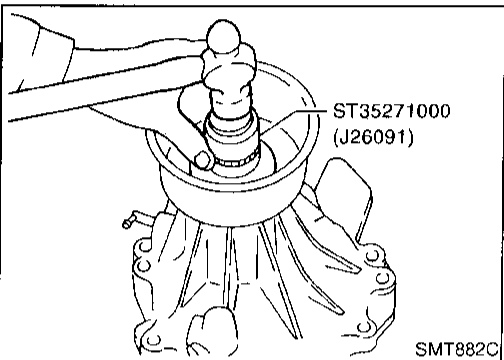


12. Apply ATF to the circumference of new rear oil seal, and tap it using a drift as shown in the figure so that it is aligned with case tip face.
  - **Apply multi-purpose grease to oil seal lip.**

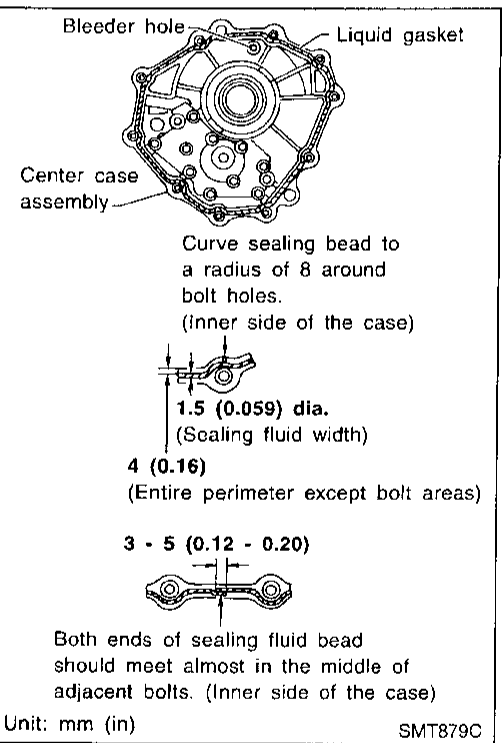

13. Apply sealing fluid 518 (Loctite) to entire rear case mounting surface of center case as shown in the figure.


**CAUTION:**

- **Remove all foreign materials such as water, oil, and grease from center case and rear case mating surfaces.**
  - **Be careful not to allow sealing fluid to clog bleeder hole.**
14. Install rear case to center case, and tighten bolts to specified torque.
    - ☞ : 41 - 48 N·m (4.2 - 4.9 kg·m, 30 - 35 ft·lb)
    - **Be sure to attach harness clips.**

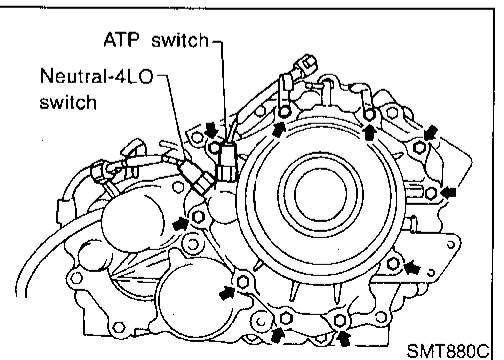


15. Remove all the gasket fluid 1215 (Three Bond) from switch mounting area and inside rear case, with ATP switch and neutral-4LO switch threaded in 1 to 2 pitches, apply gasket fluid 1215 (Three Bond) to the thread of the switches and tighten it to specified torque.
  - ☞ : 15 - 20 N·m (1.5 - 2.0 kg·m, 11 - 14 ft·lb)

16. Install rear case assembly to center case assembly.

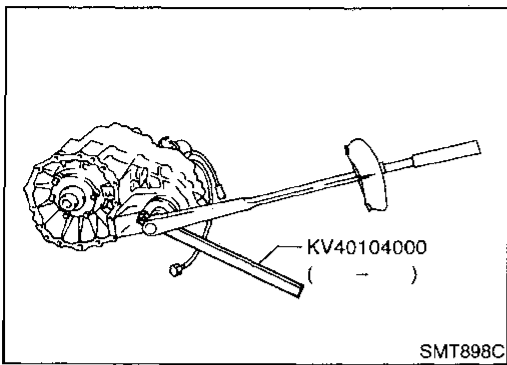

17. Install companion flange to front drive shaft, and tighten mounting nut.

 : 226 - 324 N·m (23.0 - 33.0 kg-m, 166 - 239 ft-lb)

GI

MA

EM

LC

EC

FE

AT

**TF**

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

# SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

## General Specifications

NBTF0056

Transfer model		ATX14A	
Gear ratio	High	1.000	
	Low	2.596	
Number of teeth	Planetary gear	Sun gear	57
		Internal gear	91
	Front drive sprocket		35
	Front drive shaft		35
Oil capacity ℓ (US qt, Imp qt)			3.0 (3-1/8, 2-5/8)

## Inner Gear and Outer Gear

NBTF0057

### SUB-OIL PUMP

NBTF0057S01

Allowable clearance	0.15 - 0.35 mm (0.0059 - 0.0138 in)	
Gear thickness mm (in)	Part No.	
	Inner gear	Outer gear
9.27 - 9.28 (0.3650 - 0.3654)	31346 0W422	31347 0W422
9.28 - 9.29 (0.3654 - 0.3657)	31346 0W421	31347 0W421
9.29 - 9.30 (0.3657 - 0.3661)	31346 0W420	31347 0W420

### MAIN OIL PUMP

NBTF0057/S02

Allowable clearance	0.15 - 0.35 mm (0.0059 - 0.0138 in)	
Gear thickness mm (in)	Part No.	
	Inner gear	Outer gear
14.67 - 14.68 (0.5776 - 0.5780)	31346 0W412	31347 0W412
14.68 - 14.69 (0.5780 - 0.5783)	31346 0W411	31347 0W411
14.69 - 14.70 (0.5783 - 0.5787)	31346 0W410	31347 0W410

## Control Valve

NBTF0058

### VALVE

NBTF0058S01

Mounting position	Part name	Part No.	Outer dia. mm (in)	Overall length mm (in)
L1	2-4 shift valve	31772 21X00	8.0 (0.315)	38.5 (1.516)
L2	Clutch valve	31772 80X11	10.0 (0.394)	40.0 (1.575)
L4	Pilot valve	31772 80X11	10.0 (0.394)	40.0 (1.575)
L5	Regulator valve	31741 0W410	12.0 (0.472)	68.0 (2.677)

### SPRING

NBTF0058S02

Mounting position	Part name	Part No.	Free length mm (in)	Outer dia. mm (in)	Wire dia. mm (in)	Winding direction
L1	2-4 shift valve spring	31742 0W400	31.85 (1.2539)	7.0 (0.276)	0.6 (0.024)	Clockwise
L2	Clutch valve spring	31742 0W405	40.6 (1.598)	9.0 (0.354)	0.8 (0.031)	Clockwise
L4	Pilot valve spring	31742 0W410	28.1 (1.106)	9.0 (0.354)	1.2 (0.047)	Clockwise
L5	Regulator valve spring	31742 0W415	39.7 (1.563)	11.0 (0.433)	1.3 (0.051)	Clockwise

TF-122

# SERVICE DATA AND SPECIFICATIONS (SDS)

Clutch

## Clutch

NBTF0059

### DRIVE PLATE

NBTF0059S01

Part No.	Initial thickness mm (in)	Limit value mm (in)
31532 0W410	2.0 (0.079)	1.8 (0.071)

### RETURN SPRING

NBTF0059S02

Stamped mark	Part No.	Free length mm (in)	Outer dia. mm (in)	Wire dia. mm (in)	Winding direction
1	31521 0W401	37.3 (1.496)	12.0 (0.472)	1.8 (0.071)	Clockwise
2	31521 0W402	37.8 (1.488)			
3	31521 0W403	38.4 (1.512)			
4	31521 0W404	38.9 (1.531)			
5	31521 0W405	39.4 (1.551)			
6	31521 0W406	40.0 (1.575)			
7	31521 0W407	36.8 (1.449)			
8	31521 0W408	40.5 (1.594)			

### RETAINING PLATE

NBTF0059S03

Standard end play	0.2 - 0.5 mm (0.008 - 0.020 in)	
Measured value mm (in)	Part No.	Thickness mm (in)
2.30 - 2.50 (0.0906 - 0.0984)	31537 0W410	2.1 (0.083)
2.50 - 2.70 (0.0984 - 0.1063)	31537 0W411	2.3 (0.091)
2.70 - 2.90 (0.1063 - 0.1142)	31537 0W412	2.5 (0.098)
2.90 - 3.10 (0.1142 - 0.1220)	31537 0W413	2.7 (0.106)
3.10 - 3.30 (0.1220 - 0.1299)	31537 0W414	2.9 (0.114)
3.30 - 3.50 (0.1299 - 0.1378)	31537 0W415	3.1 (0.122)
3.50 - 3.70 (0.1378 - 0.1457)	31537 0W416	3.3 (0.130)
3.70 - 3.90 (0.1457 - 0.1535)	31537 0W417	3.5 (0.138)
3.90 - 4.10 (0.1535 - 0.1614)	31537 0W418	3.7 (0.146)
4.10 - 4.30 (0.1614 - 0.1693)	31537 0W419	3.9 (0.154)
4.30 - 4.50 (0.1693 - 0.1772)	31537 0W420	4.1 (0.161)
4.50 - 4.70 (0.1772 - 0.1850)	31537 0W421	4.3 (0.169)
4.70 - 4.90 (0.1850 - 0.1929)	31537 0W422	4.5 (0.177)
4.90 - 5.10 (0.1929 - 0.2008)	31537 0W423	4.7 (0.185)

### Seal Ring (Mainshaft side)

NBTF0060

Standard clearance	0.05 - 0.30 mm (0.0020 - 0.0118 in)		
Limit clearance	0.30 mm (0.0118 in)		
Part No.	Outer dia. mm (in)	Inner dia. mm (in)	Thickness mm (in)
31525 0W410	40.8 (1.606)	36.9 (1.453)	1.97 (0.471)

# SERVICE DATA AND SPECIFICATIONS (SDS)

Bearing Race (Thrust needle bearing side)

## Bearing Race (Thrust needle bearing side)

NBTF0061

Standard end play	0.1 - 0.25 mm (0.0039 - 0.0098 in)	
End play (Dimension "E") mm (in)	Part No.	Thickness mm (in)
1,785 - 1,800 (0.0703 - 0.0709)	31439 0W410	1.6 (0.063)
1,800 - 1,900 (0.0709 - 0.0748)	31439 0W411	1.7 (0.067)
1,900 - 2,000 (0.0748 - 0.0787)	31439 0W412	1.8 (0.071)
2,000 - 2,100 (0.0787 - 0.0827)	31439 0W413	1.9 (0.075)
2,100 - 2,200 (0.0827 - 0.0866)	31439 0W414	2.0 (0.079)
2,200 - 2,270 (0.0866 - 0.0894)	31439 0W415	2.1 (0.083)

## Snap Ring (Sun gear side)

NBTF0062

Standard end play	0 - 0.15 mm (0 - 0.0059 in)	
End play (Dimension "F") mm (in)	Part No.	Thickness mm (in)
2.30 - 2.40 (0.0906 - 0.0945)	33112 0W410	2.3 (0.091)
2.40 - 2.50 (0.0945 - 0.0984)	33112 0W411	2.4 (0.094)
2.50 - 2.60 (0.0984 - 0.1024)	33112 0W412	2.5 (0.098)
2.60 - 2.70 (0.1024 - 0.1063)	33112 0W413	2.6 (0.102)
2.70 - 2.72 (0.1063 - 0.1071)	33112 0W414	2.7 (0.106)