

SECTION **LAN**
LAN SYSTEM

A
B
C

CONTENTS

D
E

CAN

PRECAUTIONS	3		
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3		
Precautions When Using CONSULT-II	3		
CHECK POINTS FOR USING CONSULT-II	3		
Precautions For Trouble Diagnosis	3		
CAN SYSTEM	3		
Precautions For Harness Repair	4		
CAN SYSTEM	4		
CAN COMMUNICATION	5		
System Description	5		
CAN Communication Unit	5		
TYPE1	5		
TYPE2	8		
TYPE 3	10		
TYPE 4	13		
CAN SYSTEM (TYPE 1)	16		
System Description	16		
Component Parts and Harness Connector Location..	16		
Schematic	17		
Wiring Diagram - CAN -	18		
Work Flow	21		
CHECK SHEET	23		
CHECK SHEET RESULTS (EXAMPLE)	25		
Circuit Check Between TCM and Driver Seat Control Unit	40		
Circuit Check Between Driver Seat Control Unit and Data Link Connector	41		
Circuit Check Between Data Link Connector and IPDM E/R	42		
ECM Circuit Check	43		
TCM Circuit Check	43		
Driver Seat Control Unit Circuit Check	44		
Combination Meter Circuit Check	44		
Display Control Unit Circuit Check	45		
BCM Circuit Check	45		
Data Link Connector Circuit Check	46		
Steering Angle Sensor Circuit Check	46		
Front Air Control Circuit Check	47		
ABS Actuator and Electric Unit (Control Unit) Circuit Check	47		
IPDM E/R Circuit Check	48		
CAN Communication Circuit Check	48		
IPDM E/R Ignition Relay Circuit Check	49		
Component Inspection	49		
ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION	49		
CAN SYSTEM (TYPE 2)	50		
System Description	50		
Component Parts and Harness Connector Location..	50		
Schematic	51		
Wiring Diagram - CAN -	52		
Work Flow	55		
CHECK SHEET	57		
CHECK SHEET RESULTS (EXAMPLE)	59		
Circuit Check Between TCM and ICC Sensor	78		
Circuit Check Between ICC Sensor and ICC Unit..	79		
Circuit Check Between ICC Unit and Driver Seat Control Unit	80		
Circuit Check Between Driver Seat Control Unit and Data Link Connector	80		
Circuit Check Between Data Link Connector and IPDM E/R	81		
ECM Circuit Check	82		
TCM Circuit Check	82		
ICC Sensor Circuit Check	83		
ICC Unit Circuit Check	83		
Driver Seat Control Unit Circuit Check	84		
Combination Meter Circuit Check	84		
Display Control Unit Circuit Check	85		
BCM Circuit Check	85		
Data Link Connector Circuit Check	86		
Steering Angle Sensor Circuit Check	86		
Front Air Control Circuit Check	87		
ABS Actuator and Electric Unit (Control Unit) Circuit Check	87		
IPDM E/R Circuit Check	88		
CAN Communication Circuit Check	88		

F
G
H
I
J
K
L
M

LAN

IPDM E/R Ignition Relay Circuit Check	89	CAN SYSTEM (TYPE 4)	126
Component Inspection	89	System Description	126
ECM/IPDM E/R INTERNAL CIRCUIT INSPEC-		Component Parts and Harness Connector Location	126
TION	89	Schematic	127
CAN SYSTEM (TYPE 3)	90	Wiring Diagram - CAN -	128
System Description	90	Work Flow	131
Component Parts and Harness Connector Location..	90	CHECK SHEET	133
Schematic	91	CHECK SHEET RESULTS (EXAMPLE)	136
Wiring Diagram - CAN -	92	Circuit Check Between TCM and ICC Sensor	156
Work Flow	95	Circuit Check Between ICC Sensor and ICC Unit.	157
CHECK SHEET	97	Circuit Check Between ICC Unit and Driver Seat	
CHECK SHEET RESULTS (EXAMPLE)	99	Control Unit	158
Circuit Check Between TCM and Driver Seat Con-		Circuit Check Between Driver Seat Control Unit and	
trol Unit	115	Data Link Connector	158
Circuit Check Between Driver Seat Control Unit and		Circuit Check Between Data Link Connector and	
Data Link Connector	116	IPDM E/R	159
Circuit Check Between Data Link Connector and		ECM Circuit Check	160
IPDM E/R	117	TCM Circuit Check	160
ECM Circuit Check	118	ICC Sensor Circuit Check	161
TCM Circuit Check	118	ICC Unit Circuit Check	161
Driver Seat Control Unit Circuit Check	119	Driver Seat Control Unit Circuit Check	162
Combination Meter Circuit Check	119	Combination Meter Circuit Check	162
Display Control Unit Circuit Check	120	Display Control Unit Circuit Check	163
BCM Circuit Check	120	BCM Circuit Check	163
Data Link Connector Circuit Check	121	Data Link Connector Circuit Check	164
Steering Angle Sensor Circuit Check	121	Steering Angle Sensor Circuit Check	164
Front Air Control Circuit Check	122	Front Air Control Circuit Check	165
Transfer Control Unit Circuit Check	122	Transfer Control Unit Circuit Check	165
ABS Actuator and Electric Unit (Control Unit) Circuit		ABS Actuator and Electric Unit (Control Unit) Circuit	
Check	123	Check	166
IPDM E/R Circuit Check	123	IPDM E/R Circuit Check	166
CAN Communication Circuit Check	124	CAN Communication Circuit Check	167
IPDM E/R Ignition Relay Circuit Check	124	IPDM E/R Ignition Relay Circuit Check	167
Component Inspection	125	Component Inspection	168
ECM/IPDM E/R INTERNAL CIRCUIT INSPEC-		ECM/IPDM E/R INTERNAL CIRCUIT INSPEC-	
TION	125	TION	168

PRECAUTIONS

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

UKS0017I

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions When Using CONSULT-II

UKS0017J

When connecting CONSULT-II to data link connector, connect them through CONSULT-II CONVERTER.

CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.

CHECK POINTS FOR USING CONSULT-II

1. Has CONSULT-II been used without connecting CONSULT-II CONVERTER on this vehicle?
 - If YES, GO TO 2.
 - If NO, GO TO 5.
2. Is there any indication other than indications relating to CAN communication system in the self-diagnosis results?
 - If YES, GO TO 3.
 - If NO, GO TO 4.
3. Based on self-diagnosis results unrelated to CAN communication, carry out the inspection.
4. Malfunctions may be detected in self-diagnosis depending on control units carrying out CAN communication. Therefore, erase the self-diagnosis results.
5. Diagnose CAN communication system. Refer to [LAN-5, "CAN Communication Unit"](#) .

**Precautions For Trouble Diagnosis
CAN SYSTEM**

UKS0017K


- Do not apply voltage of 7.0V or higher to the measurement terminals.
- Use the tester with its open terminal voltage being 7.0V or less.
- Be sure to turn ignition switch off and disconnect negative battery terminal before checking the circuit.

A
B
C
D
E
F
G
H
I
J
L
M


LAN

Precautions For Harness Repair CAN SYSTEM

- Solder the repaired parts, and wrap with tape. [Frays of twisted line must be within 110 mm (4.33 in)]

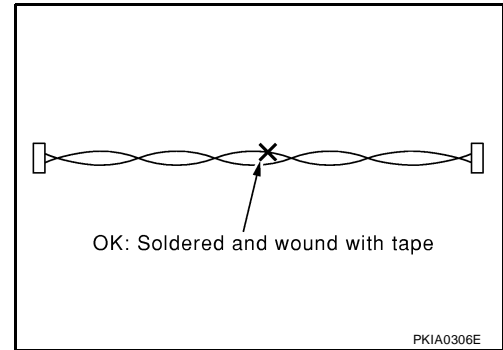

- Do not perform bypass wire connections for the repair parts. (The spliced wire will become separated and the characteristics of twisted line will be lost.)

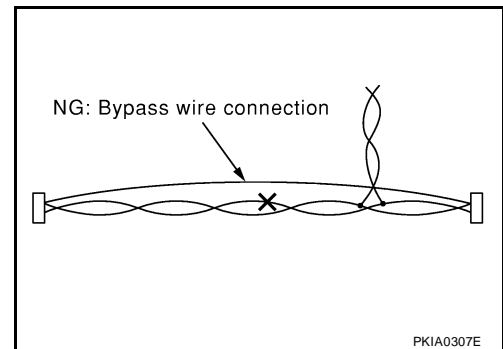

CAN COMMUNICATION

System Description

UKS000NU

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

UKS000NV


Go to CAN system, when selecting your CAN system type from the following table.

Body type	Wagon			
Axle	2WD		4WD	
Engine	VK56DE			
Transmission	A/T			
Brake control	VDC			
ICC system		×		×
CAN system type	1	2	3	4
CAN system trouble diagnosis	LAN-16	LAN-50	LAN-90	LAN-126

×: Applicable

NOTE:


Vehicles equipped with ICC can be identified by the presence of a ICC switch.

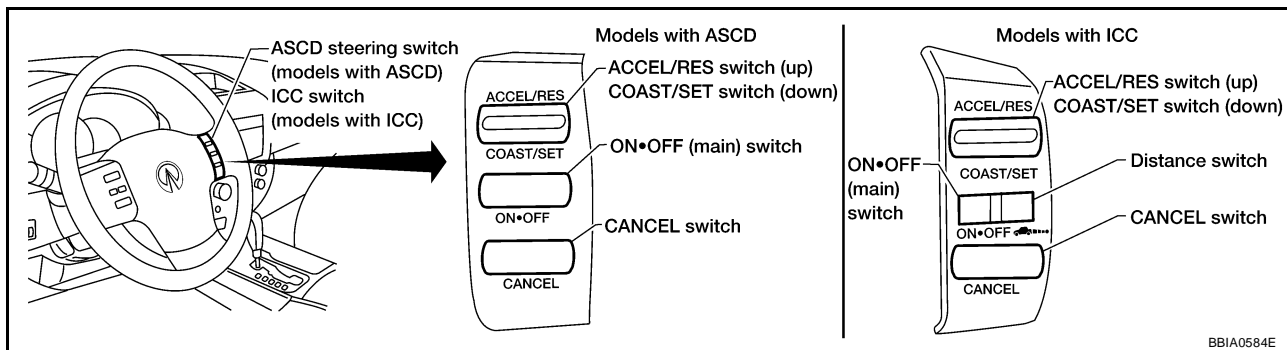

TYPE1

System diagram

- Type1

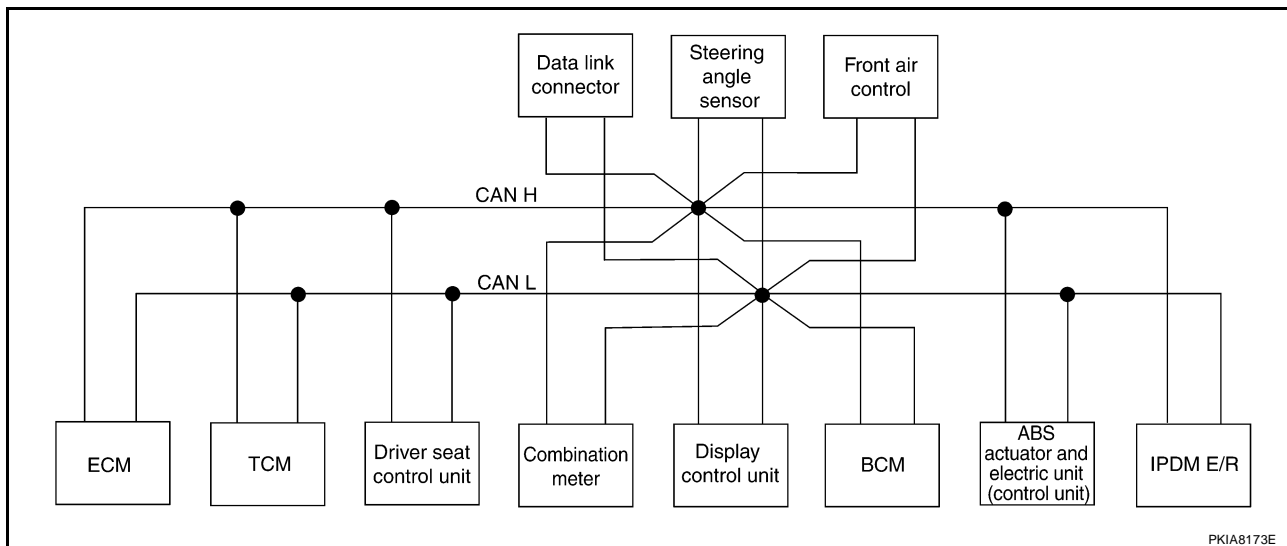

CAN COMMUNICATION

[CAN]

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	TCM	Driver seat control unit	Combination meter	Display control unit	BCM	Steering angle sensor	Front air control	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R		R	R				R	
Engine status signal	T					R		R		
Engine coolant temperature signal	T	R		R				R		
A/T self-diagnosis signal	R	T								
Accelerator pedal position signal	T	R							R	
Closed throttle position signal	T	R								
Wide open throttle position signal	T	R								
Battery voltage signal	T	R								
Key switch signal			R			T				
Ignition switch signal			R			T				R
P range signal		T	R							
Stop lamp switch signal		R		T						
Parking brake switch signal				T		R				
Fuel consumption monitor signal	T			R						
				T	R					
Turbine revolution signal	R	T								
Output shaft revolution signal	R	T								
A/C switch signal	R					T				
A/C compressor request signal	T							R		R
Blower fan motor switch signal	R					T		R		
A/C switch/indicator signal					T			R		
					R			T		
Cooling fan speed request signal	T							R		R
Position light request signal				R		T				R
Low beam request signal						T				R
Low beam status signal	R									T
High beam request signal				R		T				R
High beam status signal	R									T
Front fog light request signal						T				R
Day time running light request signal						T				R
Vehicle speed signal				R				R	T	
	R	R	R	T	R	R		R		
Sleep wake up signal				R		T				R
Door switch signal			R	R	R	T				R
Turn indicator signal				R		T				
Key fob ID signal			R			T				
Key fob door unlock signal			R			T				
Buzzer output signal				R		T				

CAN COMMUNICATION

[CAN]

Signals	ECM	TCM	Driver seat control unit	Combination meter	Display control unit	BCM	Steering angle sensor	Front air control	ABS actuator and electric unit (control unit)	IPDM E/R
Fuel level sensor signal	R			T						
Fuel level low warning signal				T	R					
ASCD SET lamp signal	T			R						
ASCD CRUISE lamp signal	T			R						
Malfunction indicator lamp signal	T			R						
Front wiper request signal						T				R
Front wiper stop position signal						R				T
Rear window defogger switch signal						T		R		R
Rear window defogger control signal	R				R			R		T
Hood switch signal						R				T
Theft warning horn request signal						T				R
Horn chirp signal						T				R
Steering angle sensor signal							T		R	
ABS warning lamp signal				R					T	
VDC OFF indicator lamp signal				R					T	
SLIP indicator lamp signal				R					T	
Brake warning lamp signal				R					T	
System setting signal			R		T					
			T		R					
Distance to empty signal				T	R					
ASCD operation signal	T	R								
ASCD OD cancel request	T	R								
A/T CHECK indicator lamp signal		T		R						
A/T position indicator lamp signal		T		R						
Tire pressure signal				R		T				
Tire pressure data signal					R	T				
1st position switch signal		R		T						
4th position switch signal		R		T						
Tow mode switch signal		R		T						
A/T fluid temperature sensor signal		T		R						

A
B
C
D
E
F
G
H
I
J


LAN

L
M

TYPE2

System diagram

- Type2

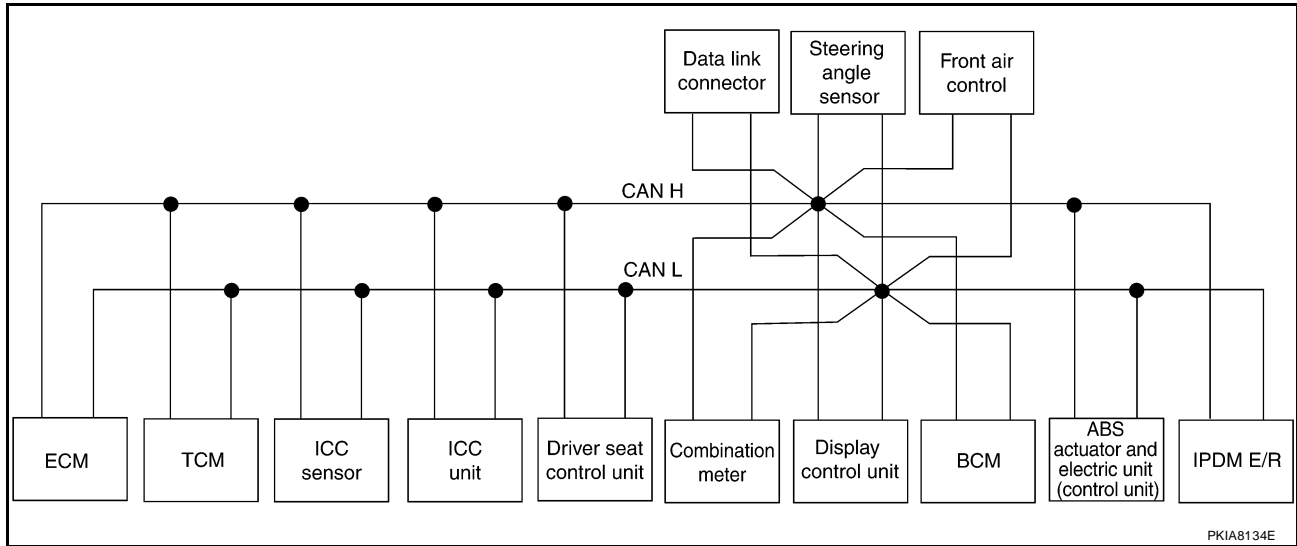

PKIA8134E

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	TCM	ICC sensor	ICC unit	Driver seat control unit	Combination meter	Display control unit	BCM	Steering angle sensor	Front air control	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R		R		R	R				R	
Engine status signal	T							R		R		
Engine coolant temperature signal	T	R				R				R		
A/T self-diagnosis signal	R	T										
Accelerator pedal position signal	T	R		R							R	
Closed throttle position signal	T	R		R								
Wide open throttle position signal	T	R										
Battery voltage signal	T	R										
Key switch signal					R			T				
Ignition switch signal					R			T				R
P range signal		T		R	R							
Stop lamp switch signal		R				T						
Parking brake switch signal						T		R				
Fuel consumption monitor signal	T					R						
						T	R					
Turbine revolution signal	R	T		R								
Output shaft revolution signal	R	T		R								
A/C switch signal	R							T				
A/C compressor request signal	T									R		R
Blower fan motor switch signal	R							T		R		

CAN COMMUNICATION

[CAN]

Signals	ECM	TCM	ICC sensor	ICC unit	Driver seat control unit	Combination meter	Display control unit	BCM	Steering angle sensor	Front air control	ABS actuator and electric unit (control unit)	IPD ME/R
A/C switch/indicator signal							T			R		
							R			T		
Cooling fan speed request signal	T									R		R
Position light request signal						R		T				R
Low beam request signal								T				R
Low beam status signal	R											T
High beam request signal						R		T				R
High beam status signal	R											T
Front fog light request signal								T				R
Day time running light request signal								T				R
Vehicle speed signal						R				R	T	
	R	R	R		R	T	R	R		R		
Sleep wake up signal						R		T				R
Door switch signal					R	R	R	T				R
Turn indicator signal						R		T				
Key fob ID signal					R			T				
Key fob door unlock signal					R			T				
Buzzer output signal						R		T				
				T		R						
Fuel level sensor signal	R					T						
Fuel level low warning signal						T	R					
Malfunction indicator lamp signal	T					R						
Front wiper request signal				R				T				R
Front wiper stop position signal								R				T
Rear window defogger switch signal								T		R		R
Rear window defogger control signal	R						R					T
Hood switch signal								R				T
Theft warning horn request signal								T				R
Horn chirp signal								T				R
Steering angle sensor signal									T		R	
ABS warning lamp signal						R					T	
VDC OFF indicator lamp signal				R		R					T	
SLIP indicator lamp signal						R					T	
Brake warning lamp signal						R					T	
VDC operation signal				R							T	
ABS malfunction signal				R							T	
TCS malfunction signal				R							T	
VDC malfunction signal				R							T	

A
B
C
D
E
F
G
H
I
J
LAN
L
M

CAN COMMUNICATION


[CAN]

Signals	ECM	TCM	ICC sensor	ICC unit	Driver seat control unit	Combination meter	Display control unit	BCM	Steering angle sensor	Front air control	ABS actuator and electric unit (control unit)	IPD M E/R
Brake pressure sensor signal				R							T	
System setting signal					R		T					
					T		R					
Distance to empty signal						T	R					
ASCD operation signal	T	R										
ASCD OD cancel request	T	R										
A/T CHECK indicator lamp signal		T				R						
A/T position indicator lamp signal		T		R		R						
Current gear position signal		T		R								
Tire pressure signal						R		T				
Tire pressure data signal							R	T				
1st position switch signal		R				T						
4th position switch signal		R				T						
Tow mode switch signal		R				T						
A/T fluid temperature sensor signal		T				R						
ICC operation signal	R	R		T								
ICC OD cancel request signal	R	R		T								
ICC sensor signal			T	R								
ICC system display signal				T		R						
ICC steering switch signal	T			R								

TYPE 3

System diagram

- Type3

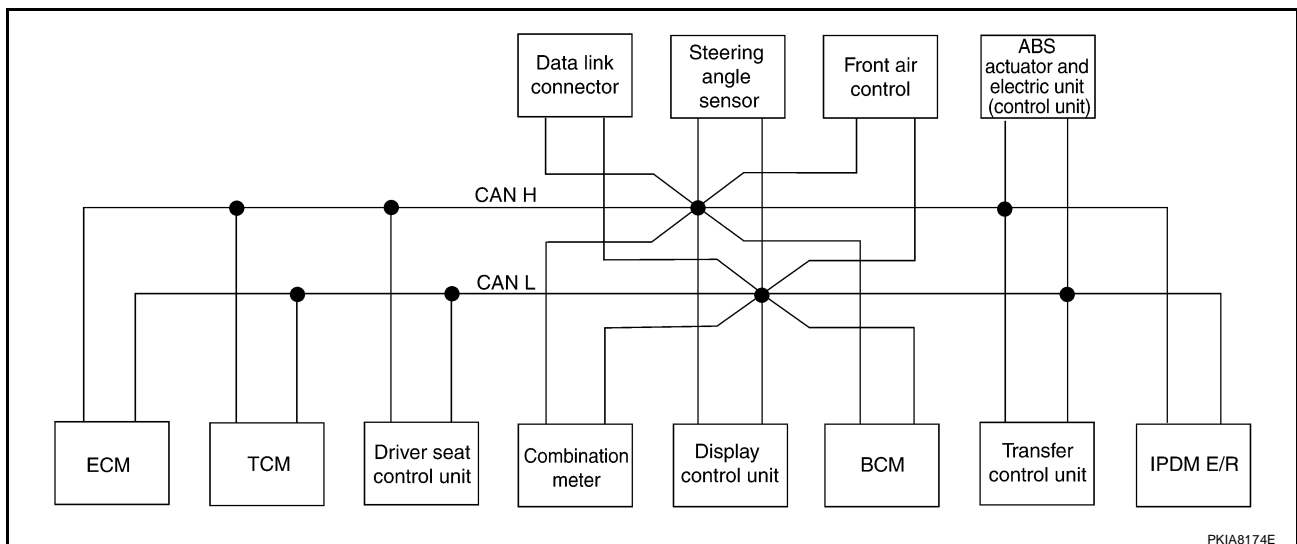

PKIA8174E

CAN COMMUNICATION

[CAN]

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	TCM	Driver seat control unit	Combination meter	Display control unit	BCM	Steering angle sensor	Front air control	Transfer control unit	ABS actuator and electric unit (control unit)	IPDM E/R
A/T self-diagnosis signal	R	T									
Stop lamp switch signal		R		T							
Parking brake switch signal				T		R					
Battery voltage signal	T	R									
Key switch signal			R			T					
Ignition switch signal			R			T					R
P range signal		T	R								
Closed throttle position signal	T	R									
Wide open throttle position signal	T	R									
Engine speed signal	T	R		R	R				R	R	
Engine status signal	T					R		R			
Engine coolant temperature signal	T	R		R				R			
Accelerator pedal position signal	T	R							R	R	
Fuel consumption monitor signal	T			R							
				T	R						
Turbine revolution signal	R	T									
Output shaft revolution signal	R	T							R		
A/C switch signal	R					T					
A/C compressor request signal	T							R			R
Blower fan motor switch signal	R					T		R			
A/C switch/indicator signal					T			R			
					R			T			
Cooling fan speed request signal	T							R			R
Position light request signal				R		T					R
Low beam request signal						T					R
Low beam status signal	R										T
High beam request signal				R		T					R
High beam status signal	R										T
Front fog light request signal						T					R
Day time running light request signal						T					R
Vehicle speed signal				R				R	R	T	
	R	R	R	T	R	R		R			
Sleep wake up signal				R		T					R
Door switch signal			R	R	R	T					R
Turn indicator signal				R		T					
Key fob ID signal			R			T					
Key fob door unlock signal			R			T					

A
B
C
D
E
F
G
H
I
J
LAN
L
M

CAN COMMUNICATION

[CAN]

Signals	ECM	TCM	Driver seat control unit	Combination meter	Display control unit	BCM	Steering angle sensor	Front air control	Transfer control unit	ABS actuator and electric unit (control unit)	IPDM E/R
Buzzer output signal				R		T					
Fuel level sensor signal	R			T							
ASCD SET lamp signal	T			R							
ASCD CRUISE lamp signal	T			R							
Malfunction indicator lamp signal	T			R							
Fuel level low warning signal				T	R						
Front wiper request signal						T					R
Front wiper stop position signal						R					T
Rear window defogger switch signal						T		R			R
Rear window defogger control signal	R				R			R			T
Hood switch signal						R					T
Theft warning horn request signal						T					R
Horn chirp signal						T					R
Steering angle sensor signal							T			R	
ABS warning lamp signal				R						T	
VDC OFF indicator lamp signal				R						T	
SLIP indicator lamp signal				R						T	
Brake warning lamp signal				R						T	
System setting signal			R		T						
			T		R						
Distance to empty signal				T	R						
ASCD operation signal	T	R									
ASCD OD cancel request	T	R									
A/T CHECK indicator lamp signal		T		R							
A/T position indicator lamp signal		T		R					R		
Tire pressure signal				R		T					
Tire pressure data signal					R	T					
1st position switch signal		R		T							
4th position switch signal		R		T							
Tow mode switch signal		R		T							
A/T fluid temperature sensor signal		T		R							


CAN COMMUNICATION

[CAN]

TYPE 4

System diagram

- Type4

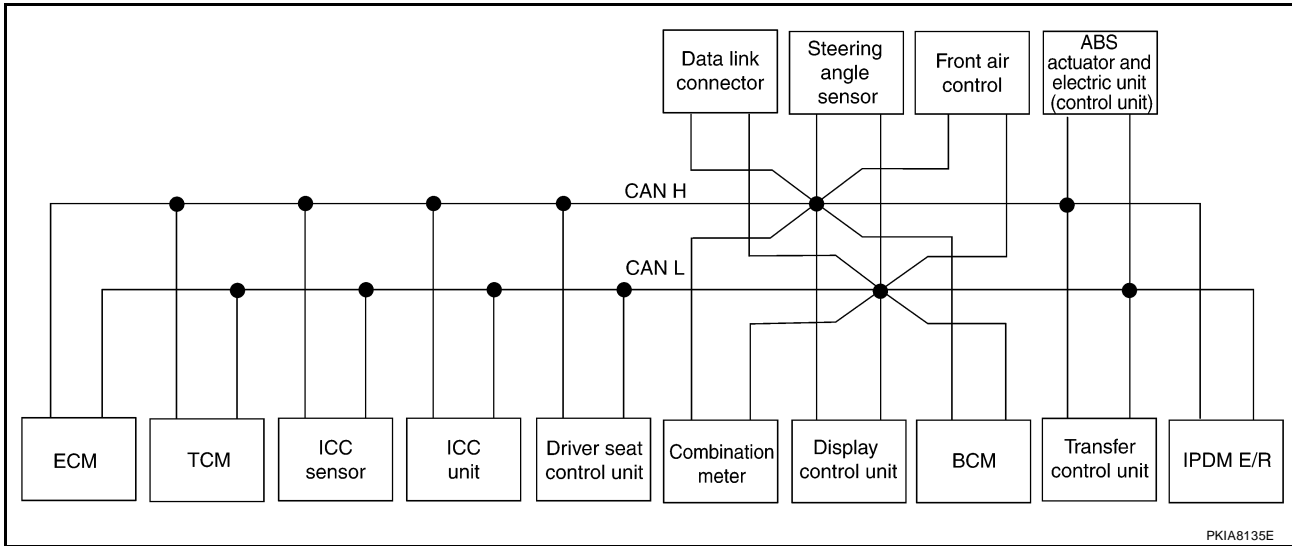

Input/output signal chart

T: Transmit R: Receive

Signals	ECM	TCM	ICC sensor	ICC unit	Driver seat control unit	Combination meter	Display control unit	BCM	Steering angle sensor	Front air control	Transfer control unit	ABS actuator and electric unit (control unit)	IPDM E/R
A/T self-diagnosis signal	R	T											
Stop lamp switch signal		R				T							
Parking brake switch signal						T							R
Battery voltage signal	T	R											
Key switch signal					R			T					
Ignition switch signal					R			T					R
P range signal		T		R	R								
Closed throttle position signal	T	R		R									
Wide open throttle position signal	T	R											
Engine speed signal	T	R		R		R	R				R	R	
Engine status signal	T							R		R			
Engine coolant temperature signal	T	R				R				R			
Accelerator pedal position signal	T	R		R							R	R	
Fuel consumption monitor signal	T					R							
						T	R						
Turbine revolution signal	R	T		R									
Output shaft revolution signal	R	T		R							R		
A/C switch signal	R							T					
A/C compressor request signal	T									R			R
Blower fan motor switch signal	R							T		R			

CAN COMMUNICATION

[CAN]

Signals	ECM	TCM	ICC sensor	ICC unit	Driver seat control unit	Com-bination meter	Dis-play control unit	BCM	Steering angle sensor	Front air control	Trans-fer control unit	ABS actuator and electric unit (control unit)	IPDM E/R
A/C switch/indicator signal							T			R			
							R			T			
Cooling fan speed request signal	T									R			R
Position light request signal						R		T					R
Low beam request signal								T					R
Low beam status signal	R												T
High beam request signal						R		T					R
High beam status signal	R												T
Front fog light request signal								T					R
Day time running light request signal								T					R
Vehicle speed signal						R				R	R	T	
	R	R	R		R	T	R	R		R			
Sleep wake up signal						R		T					R
Door switch signal					R	R	R	T					R
Turn indicator signal						R		T					
Key fob ID signal					R			T					
Key fob door unlock signal					R			T					
Buzzer output signal						R		T					
				T		R							
Fuel level sensor signal	R					T							
Malfunction indicator lamp signal	T					R							
Fuel level low warning signal						T	R						
Front wiper request signal				R				T					R
Front wiper stop position signal								R					T
Rear window defogger switch signal								T		R			R
Rear window defogger control signal	R						R			R			T
Hood switch signal								R					T
Theft warning horn request signal								T					R
Horn chirp signal								T					R
Steering angle sensor signal									T			R	
ABS warning lamp signal						R						T	
VDC OFF indicator lamp signal				R		R						T	
SLIP indicator lamp signal						R						T	
Brake warning lamp signal						R						T	
VDC operation signal				R								T	
ABS malfunction signal				R								T	

CAN COMMUNICATION

[CAN]

Signals	ECM	TCM	ICC sensor	ICC unit	Driver seat control unit	Combination meter	Display control unit	BCM	Steering angle sensor	Front air control	Transfer control unit	ABS actuator and electric unit (control unit)	IPD M E/R
TCS malfunction signal				R								T	
VDC malfunction signal				R								T	
Brake pressure sensor signal				R								T	
System setting signal					R		T						
					T		R						
Distance to empty signal						T	R						
ASCD operation signal	T	R											
ASCD OD cancel request	T	R											
A/T CHECK indicator lamp signal		T				R							
A/T position indicator lamp signal		T		R		R					R		
Current gear position signal		T		R									
Tire pressure signal						R		T					
Tire pressure data signal							R	T					
1st position switch signal		R				T							
4th position switch signal		R				T							
Tow mode switch signal		R				T							
A/T fluid temperature sensor signal		T				R							
ICC operation signal	R	R		T									
ICC OD cancel request signal	R	R		T									
ICC sensor signal			T	R									
ICC system display signal				T		R							
ICC steering switch signal	T			R									

A
B
C
D
E
F
G
H
I
J
LAN
L
M

CAN SYSTEM (TYPE 1)

PFP:23710


System Description

UKS000P0

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Component Parts and Harness Connector Location

UKS000P1

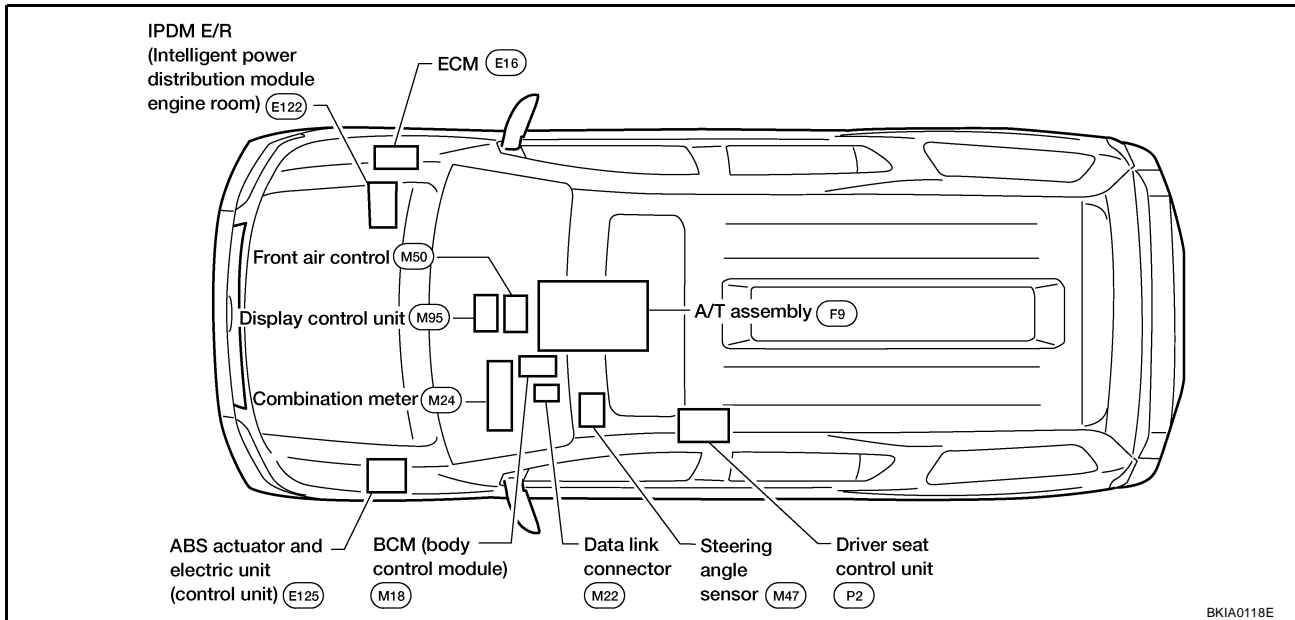


CAN SYSTEM (TYPE 1)

[CAN]

Schematic

UKS000P2

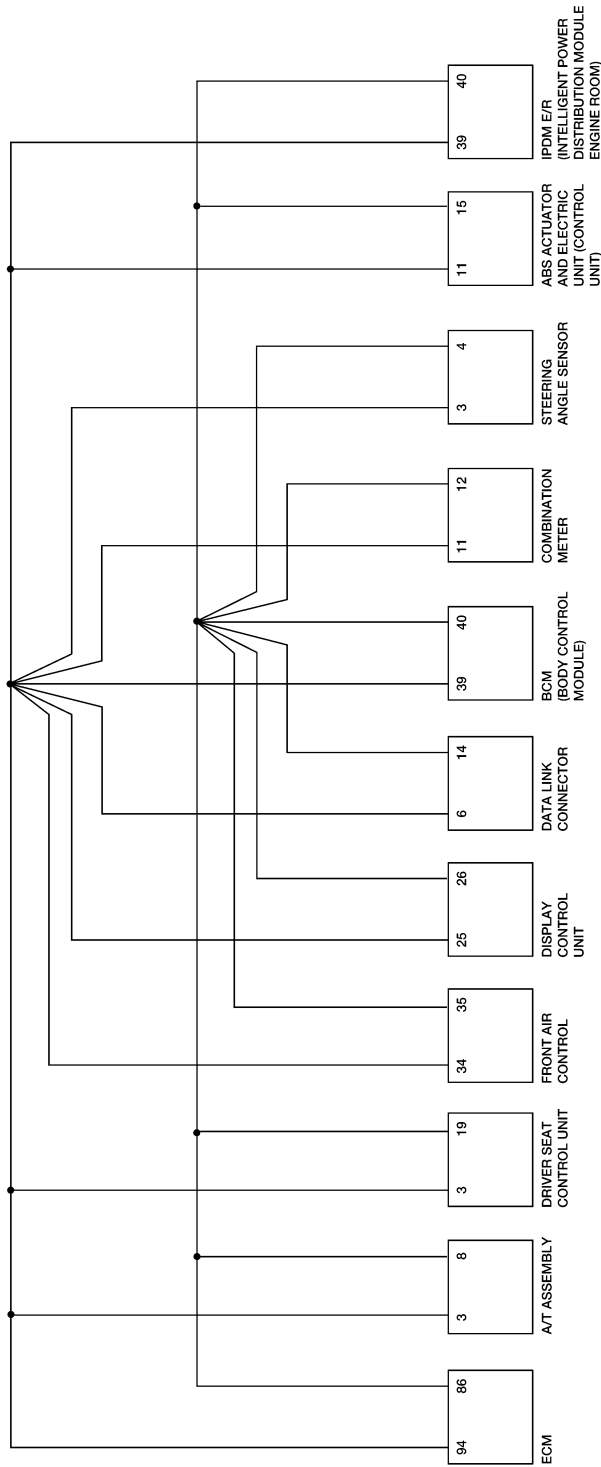

A

B

C

D

E

F

G

H

I

J

LAN

L

M

BKWA0078E

CAN SYSTEM (TYPE 1)


[CAN]

UKS000P3


Wiring Diagram - CAN -

LAN-CAN-01

▬ : DATA LINE

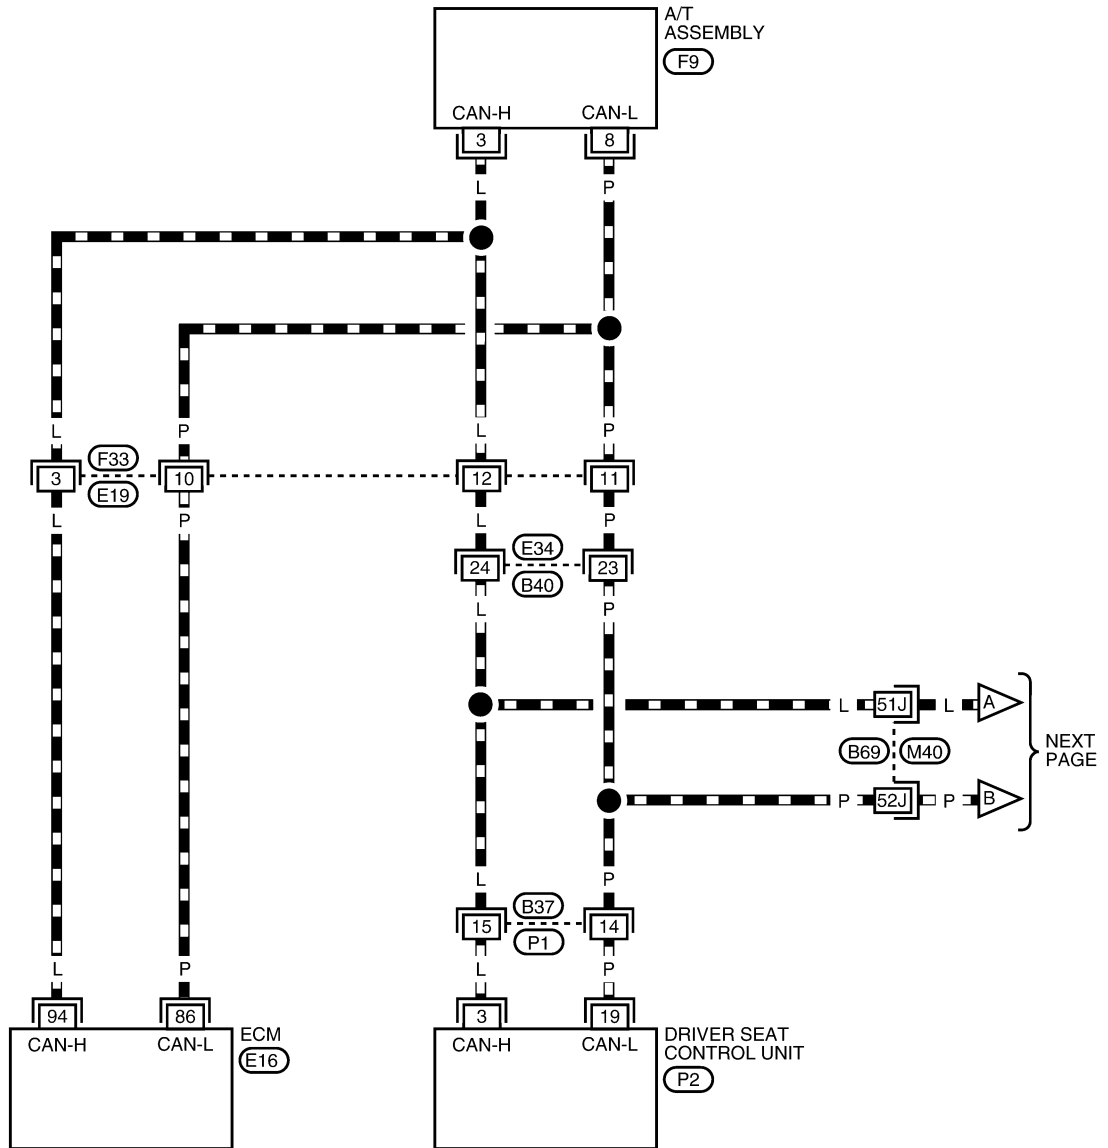

NEXT PAGE

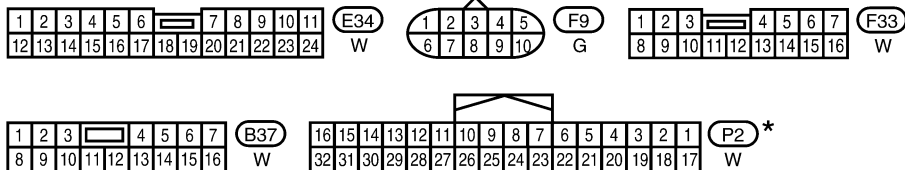

REFER TO THE FOLLOWING.
 (M40) - SUPER MULTIPLE JUNCTION (SMJ)
 (E16) - ELECTRICAL UNITS

* : THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT" OF PG SECTION.


BKWA0395E

CAN SYSTEM (TYPE 1)


[CAN]

LAN-CAN-02

— — — — — : DATA LINE

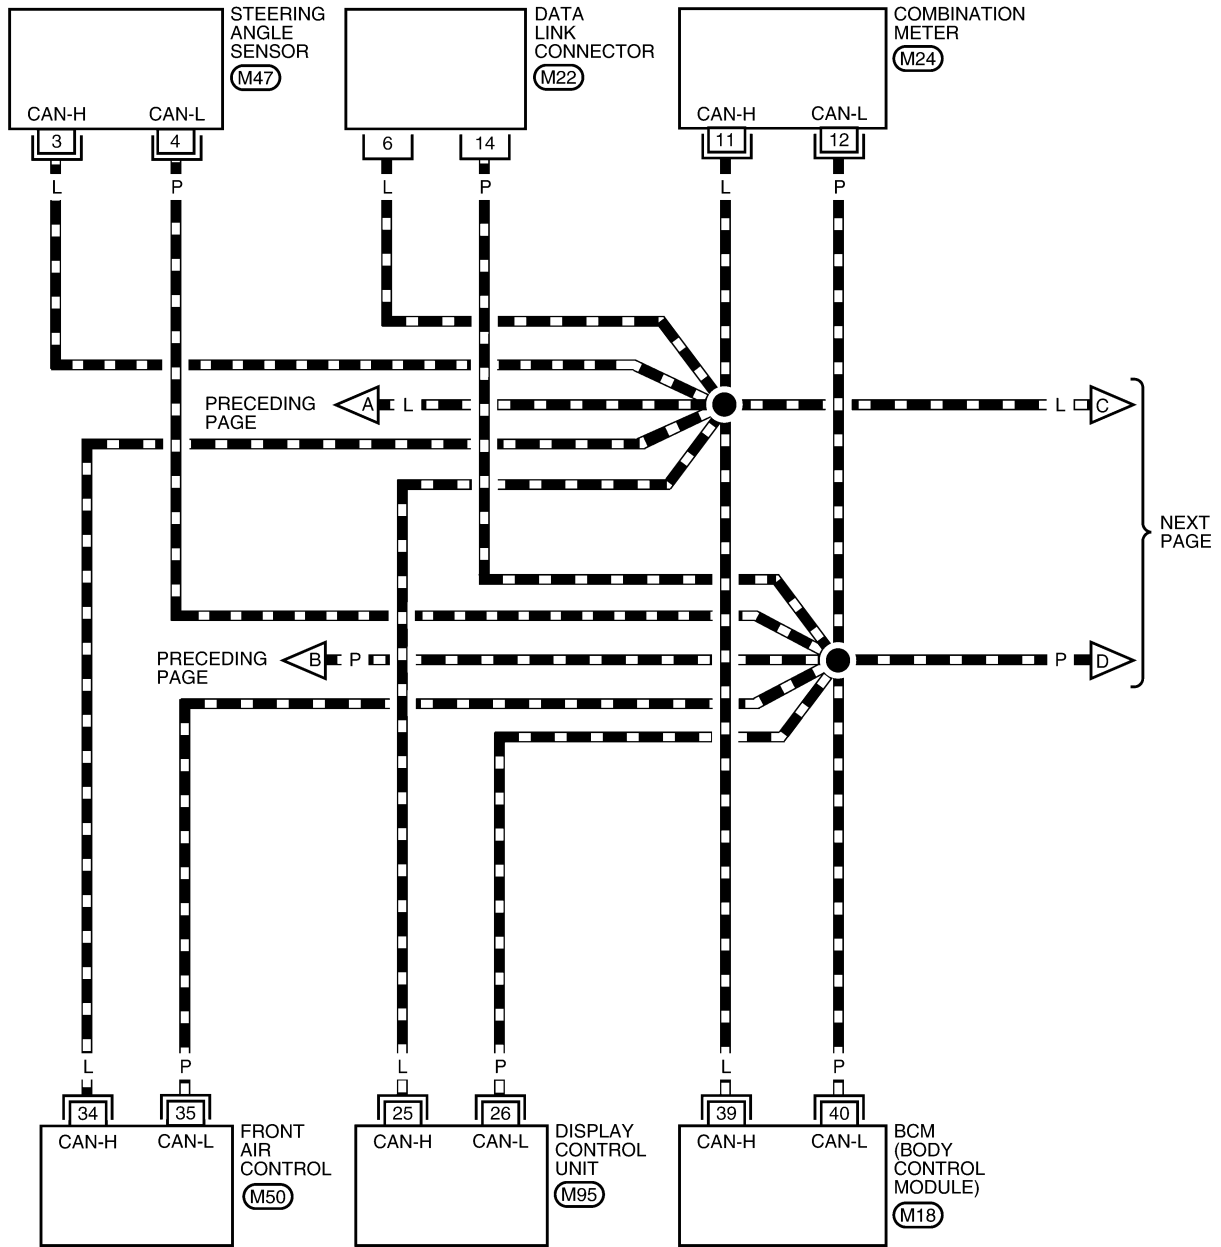


A
B
C
D
E
F
G
H
I
J
LAN
L
M

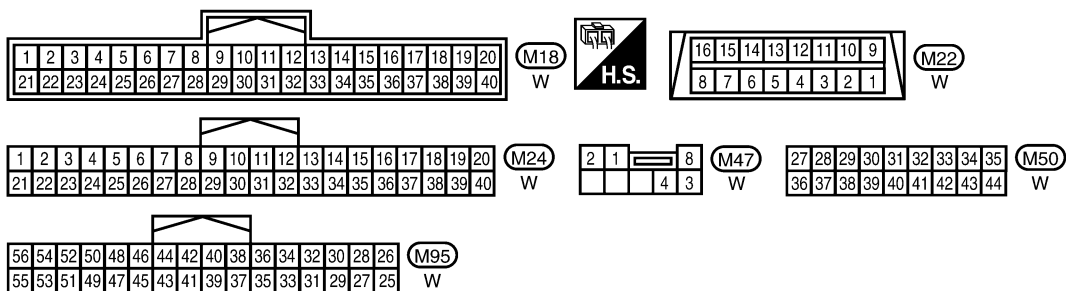

BKWA0396E

LAN-CAN-03

▬ : DATA LINE

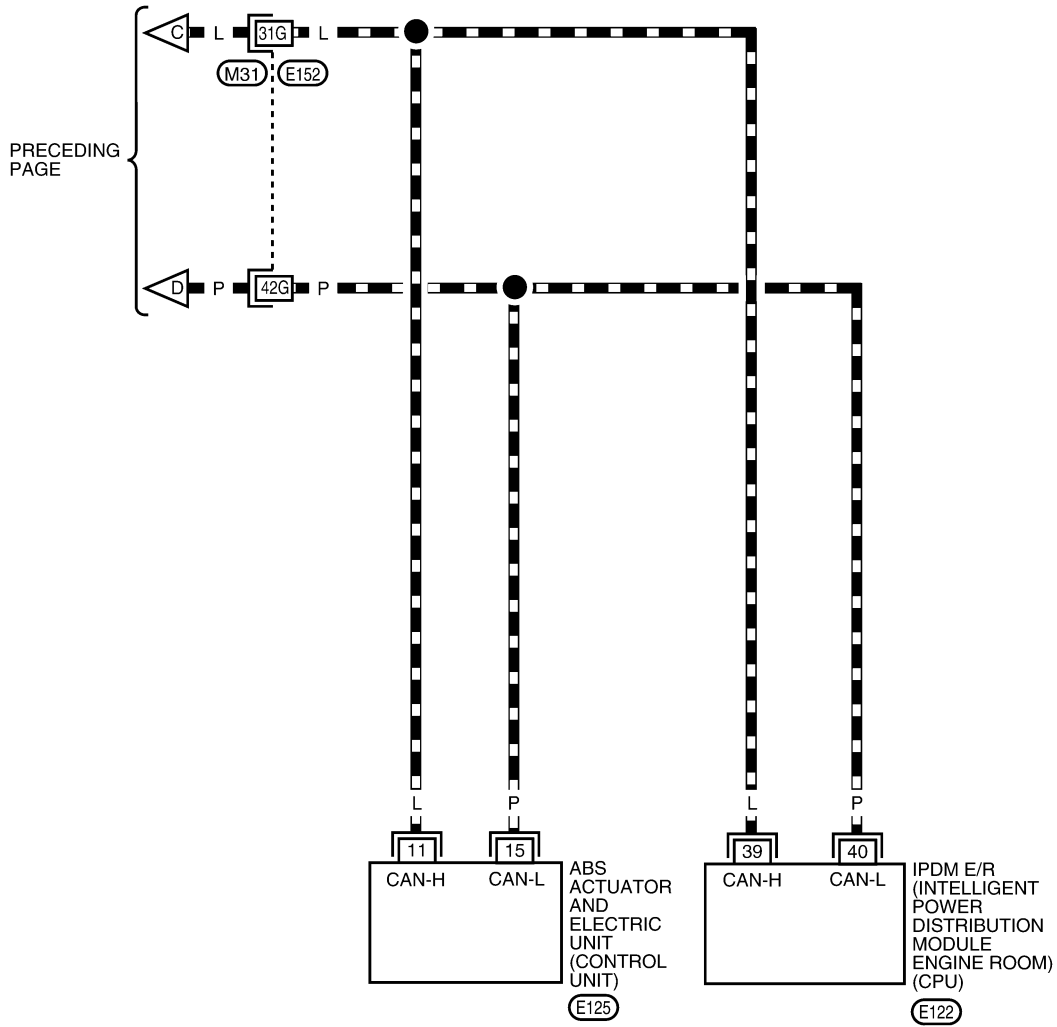

37	38	39	40	41	42
43	44	45	46	47	48

(E122) W

16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	
47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32


(E125) B

REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)


BKWA0397E

Work Flow


- When there are no indications of "AUTO DRIVE POS.", "BCM", "HVAC" or "IPDM E/R" on "SELECT SYSTEM" display of CONSULT-II, print the "SELECT SYSTEM".

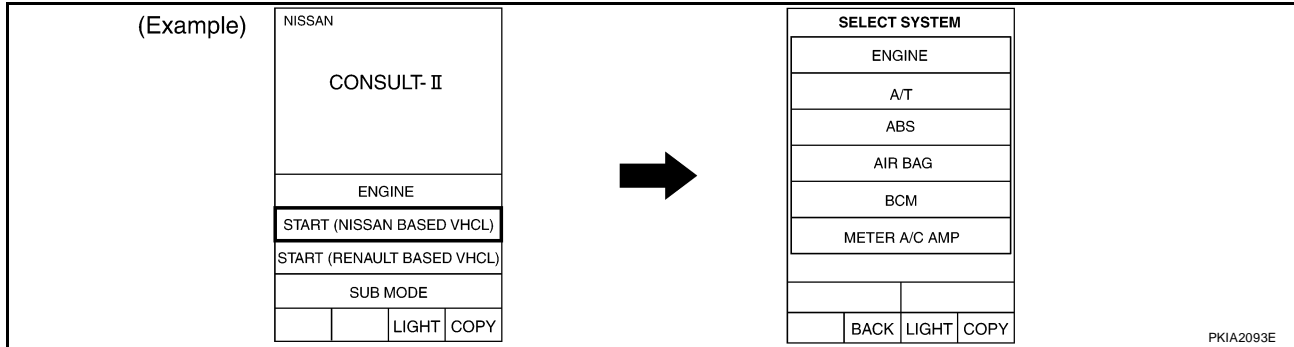

- Print all the data of "SELF-DIAG RESULTS" for "ENGINE", "A/T", "AUTO DRIVE POS.", "BCM", "HVAC", "ABS" and "IPDM E/R" displayed on CONSULT-II.

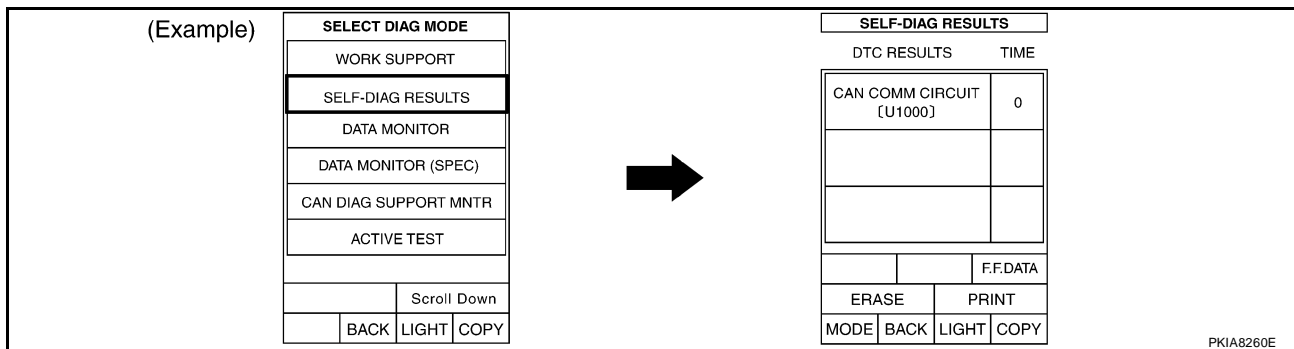

- Print all the data of "CAN DIAG SUPPORT MNTR" for "ENGINE", "A/T", "AUTO DRIVE POS.", "BCM", "HVAC", "ABS" and "IPDM E/R" displayed on CONSULT-II.

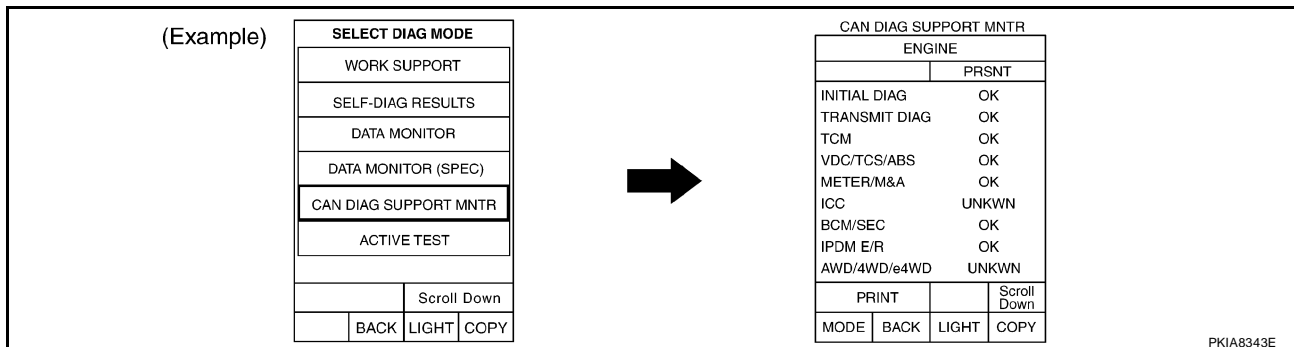

- Attach the printed sheet of "SELECT SYSTEM", "SELF-DIAG RESULTS" and "CAN DIAG SUPPORT MNTR" onto the check sheet. Refer to [LAN-23, "CHECK SHEET"](#).

- Based on the indications of "SELECT SYSTEM" and the results of "CAN DIAG SUPPORT MNTR", put marks "v" onto the items with "No indication", "NG" or "UNKWN" in the check sheet table. Refer to [LAN-23, "CHECK SHEET"](#).

NOTE:

- If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" as "CAN DIAG SUPPORT MNTR" for the diagnosed control unit, replace the control unit.
- The "CAN DIAG SUPPORT MNTR" items, which are not in check sheet table, are not related to diagnostic procedure on service manual.
So it is not necessary to check the status of the "CAN DIAG SUPPORT MNTR" items not in check sheet table.

- Check CAN communication line of the navigation system. Refer to [AV-131, "CAN Communication Line Check"](#).

- Attach the CAN DIAG SUPPORT MONITOR check sheet onto the check sheet. Refer to [LAN-23, "CHECK SHEET"](#).

A
B
C
D
E
F
G
H
I
J
L
M



CAN SYSTEM (TYPE 1)

[CAN]

-
8. Mark the "NG" or "UNKWN" item of the check sheet table with "v" from the result of CAN DIAG SUPPORT MONITOR check sheet. Refer to [LAN-23, "CHECK SHEET"](#) .

NOTE:

If "NG" is displayed on "CAN COMM" as "CAN DIAG SUPPORT MONITOR" for the diagnosed control unit, replace the control unit. Refer to [AV-131, "CAN Communication Line Check"](#) .

9. According to the check sheet results (example), start inspection. Refer to [LAN-25, "CHECK SHEET RESULTS \(EXAMPLE\)"](#) .

CAN SYSTEM (TYPE 1)

[CAN]

CHECK SHEET

NOTE:

If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" or "CAN COMM" for the diagnosed control unit, replace the control unit.

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR										
		Initial diagnosis	Transmit diagnosis	Receive diagnosis								
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	-	NG	UNKWN	-	UNKWN	UNKWN	-	UNKWN	-	-	UNKWN	UNKWN
A/T	-	NG	UNKWN	UNKWN	-	UNKWN	-	-	-	-	UNKWN	-
AUTO DRIVE POS.	No indication	NG	UNKWN	-	UNKWN	UNKWN	-	UNKWN	-	-	-	-
Display control unit	-	CAN COMM	CAN CIRC 1	CAN CIRC 3	-	CAN CIRC 5	-	CAN CIRC 2	-	CAN CIRC 4	-	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	-	UNKWN	-	-	-	-	-	UNKWN
HVAC	No indication	-	UNKWN	UNKWN	-	-	UNKWN	UNKWN	-	-	UNKWN	-
ABS	-	NG	UNKWN	UNKWN	UNKWN	-	-	-	UNKWN	-	-	-
IPDM E/R	No indication	-	UNKWN	UNKWN	-	-	-	UNKWN	-	-	-	-

Symptoms :

Attach copy of
SELECT SYSTEM

Attach copy of
SELECT SYSTEM

Attach copy of
display control unit
CAN DIAG SUPPORT MONITOR check sheet

PKIB6657E

A
B
C
D
E
F
G
H
I
J
L
M

LAN

CAN SYSTEM (TYPE 1)

[CAN]

Attach copy of
ENGINE
SELF-DIAG RESULTS

Attach copy of
A/T
SELF-DIAG RESULTS

Attach copy of
AUTO DRIVE POS.
SELF-DIAG RESULTS

Attach copy of
BCM
SELF-DIAG RESULTS

Attach copy of
HVAC
SELF-DIAG RESULTS

Attach copy of
ABS
SELF-DIAG RESULTS

Attach copy of
IPDM E/R
SELF-DIAG RESULTS

Attach copy of
ENGINE
CAN DIAG SUPPORT
MNTR

Attach copy of
A/T
CAN DIAG SUPPORT
MNTR

Attach copy of
AUTO DRIVE POS.
CAN DIAG SUPPORT
MNTR

Attach copy of
BCM
CAN DIAG SUPPORT
MNTR

Attach copy of
HVAC
CAN DIAG SUPPORT
MNTR

Attach copy of
ABS
CAN DIAG SUPPORT
MNTR

Attach copy of
IPDM E/R
CAN DIAG SUPPORT
MNTR

PKIB6658E

CAN SYSTEM (TYPE 1)

[CAN]

CHECK SHEET RESULTS (EXAMPLE)

NOTE:


If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" or "CAN COMM" for the diagnosed control unit, replace the control unit.

Case 1

Check harness between TCM and driver seat control unit. Refer to [LAN-40, "Circuit Check Between TCM and Driver Seat Control Unit"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR										
		Initial diagnosis	Transmit diagnosis	Receive diagnosis								
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—

PKIB6659E

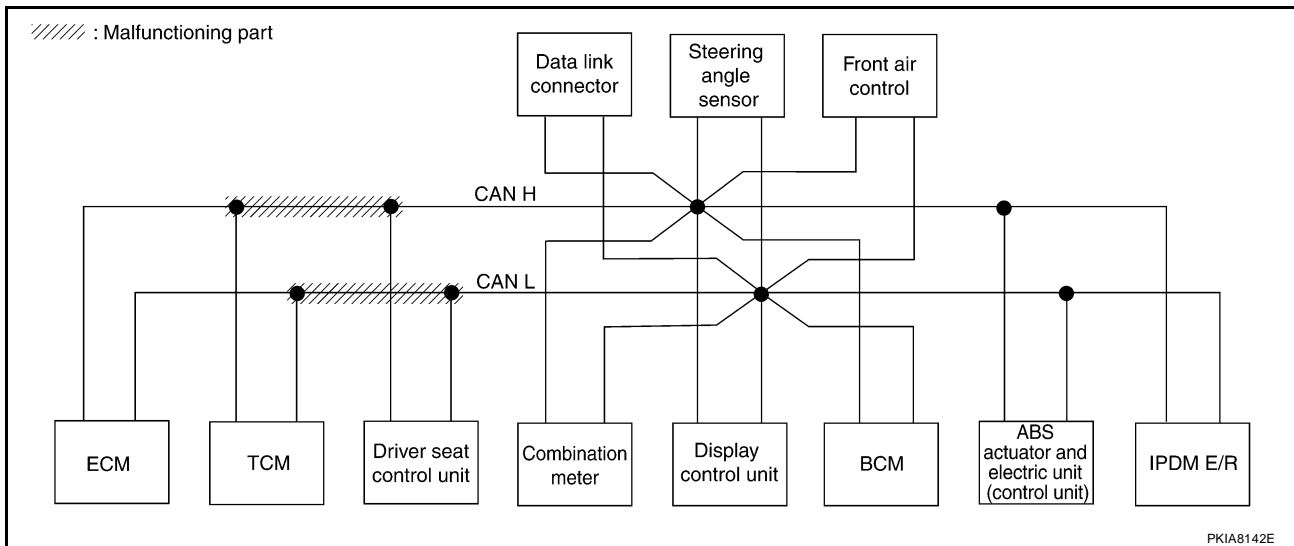

CAN SYSTEM (TYPE 1)


[CAN]

Case 2

Check harness between driver seat control unit and data link connector. Refer to [LAN-41, "Circuit Check Between Driver Seat Control Unit and Data Link Connector"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR										
		Initial diagnosis	Transmit diagnosis	Receive diagnosis								
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKW N	—	UNKW N	✓	—	✓	—	—	✓	✓
A/T	—	NG	UNKW N	UNKW N	—	✓	—	—	—	—	✓	—
AUTO DRIVE POS.	✓ No indication	NG	UNKW N	—	UNKW N	UNKW N	—	UNKW N	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	✓ CAN CIRC 3	—	✓ CAN CIRC 5	—	✓ CAN CIRC 2	—	✓ CAN CIRC 4	—	✓ CAN CIRC 7
BCM	✓ No indication	NG	UNKW N	✓	—	UNKW N	—	—	—	—	—	UNKW N
HVAC	✓ No indication	—	UNKW N	✓	—	—	UNKW N	UNKW N	—	—	UNKW N	—
ABS	—	NG	UNKW N	✓	✓	—	—	—	UNKW N	—	—	—
IPDM E/R	✓ No indication	—	UNKW N	✓	—	—	—	UNKW N	—	—	—	—

PKIB6660E

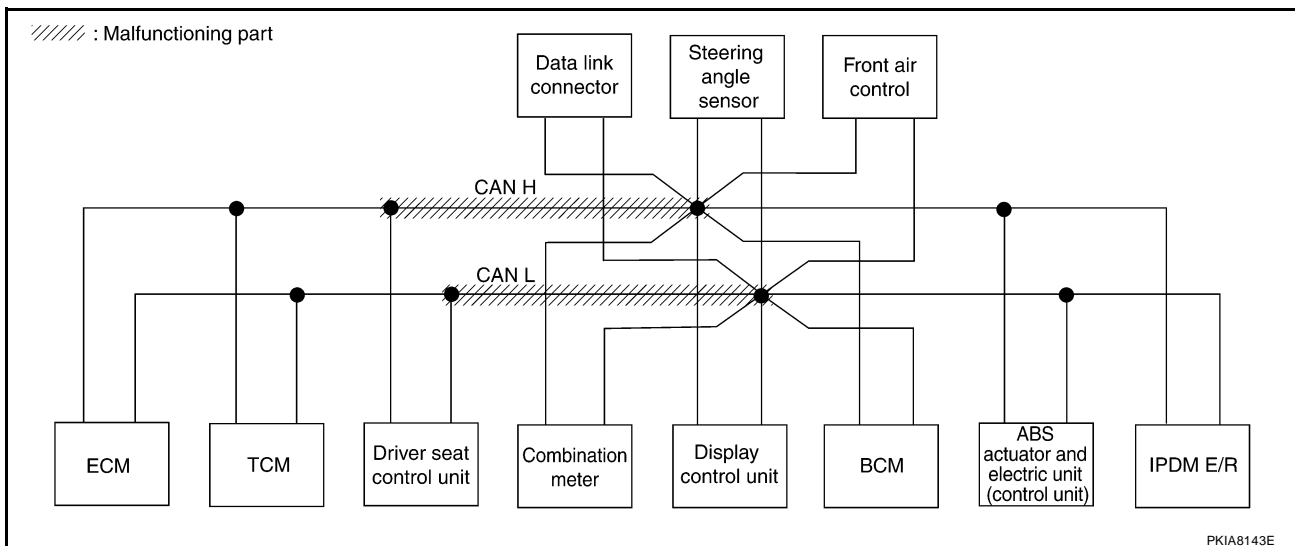

CAN SYSTEM (TYPE 1)


[CAN]

Case 3

Check harness between data link connector and IPDM E/R. Refer to [LAN-42, "Circuit Check Between Data Link Connector and IPDM E/R"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									IPDM E/R
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS		
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	—	
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7	
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	UNKWN	
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	UNKWN	—	
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	

PKIB6661E

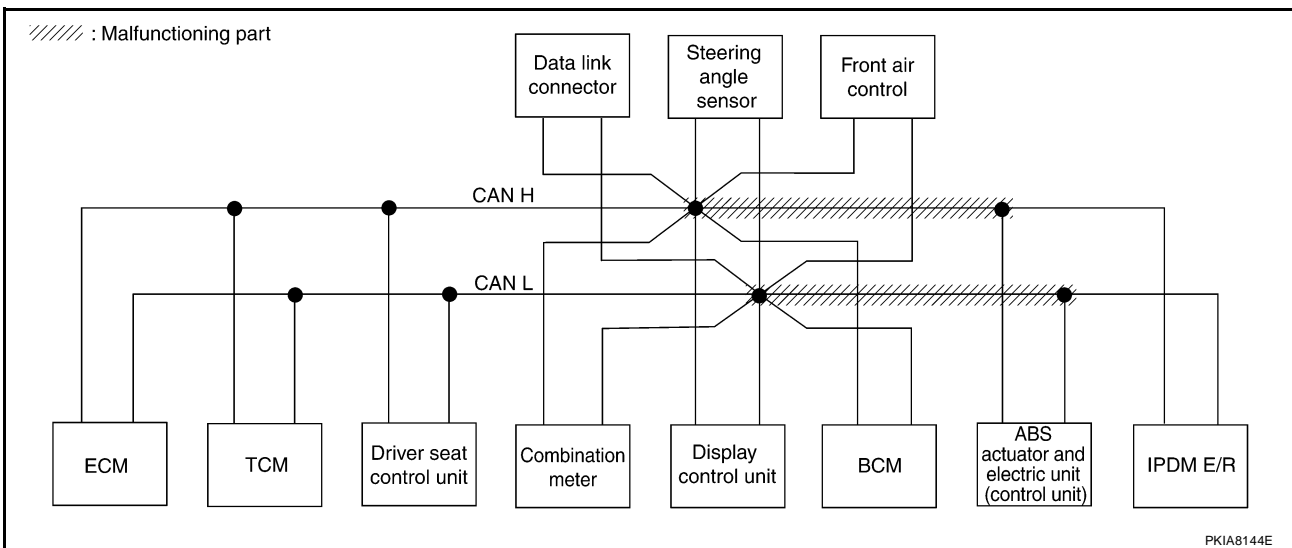

CAN SYSTEM (TYPE 1)


[CAN]

Case 4

Check ECM circuit. Refer to [LAN-43, "ECM Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR										
		Initial diagnosis	Transmit diagnosis	Receive diagnosis								
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKW [✓] N	—	UNKW [✓] N	UNKW [✓] N	—	UNKW [✓] N	—	—	UNKW [✓] N	UNKW [✓] N
A/T	—	NG	UNKW [✓] N	UNKW [✓] N	—	UNKW [✓] N	—	—	—	—	UNKW [✓] N	—
AUTO DRIVE POS.	No indication	NG	UNKW [✓] N	—	UNKW [✓] N	UNKW [✓] N	—	UNKW [✓] N	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKW [✓] N	UNKW [✓] N	—	UNKW [✓] N	—	—	—	—	—	UNKW [✓] N
HVAC	No indication	—	UNKW [✓] N	UNKW [✓] N	—	—	UNKW [✓] N	UNKW [✓] N	—	—	UNKW [✓] N	—
ABS	—	NG	UNKW [✓] N	UNKW [✓] N	—	—	—	—	UNKW [✓] N	—	—	—
IPDM E/R	No indication	—	UNKW [✓] N	UNKW [✓] N	—	—	—	UNKW [✓] N	—	—	—	—

PKIB662E

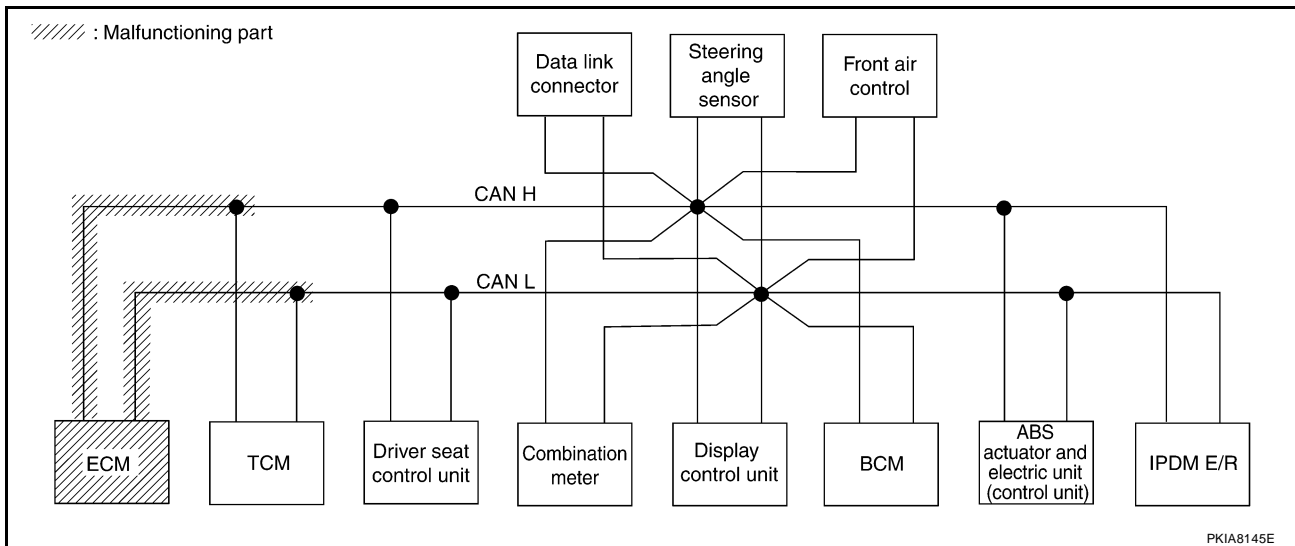

PKIA8145E

CAN SYSTEM (TYPE 1)


[CAN]

Case 5

Check TCM circuit. Refer to [LAN-43, "TCM Circuit Check"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR										
		Initial diagnosis	Transmit diagnosis	Receive diagnosis								
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—

PKIB663E

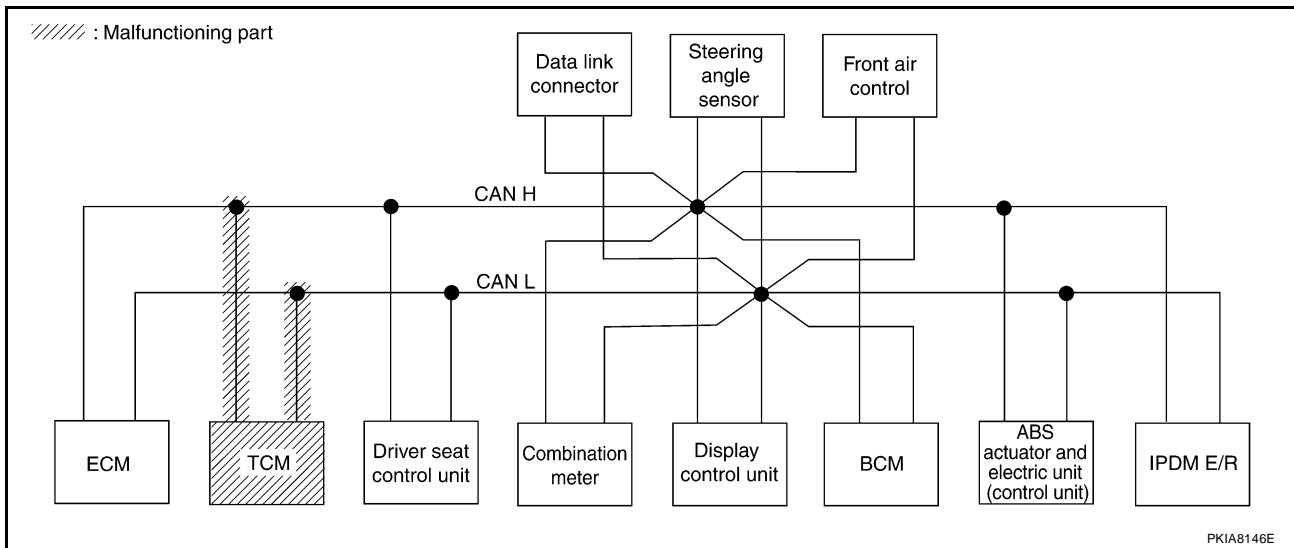

CAN SYSTEM (TYPE 1)


[CAN]

Case 6

Check driver seat control unit circuit. Refer to [LAN-44, "Driver Seat Control Unit Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R	
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	—	
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7	
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	UNKWN	
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	UNKWN	—	
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	

PKIB6664E

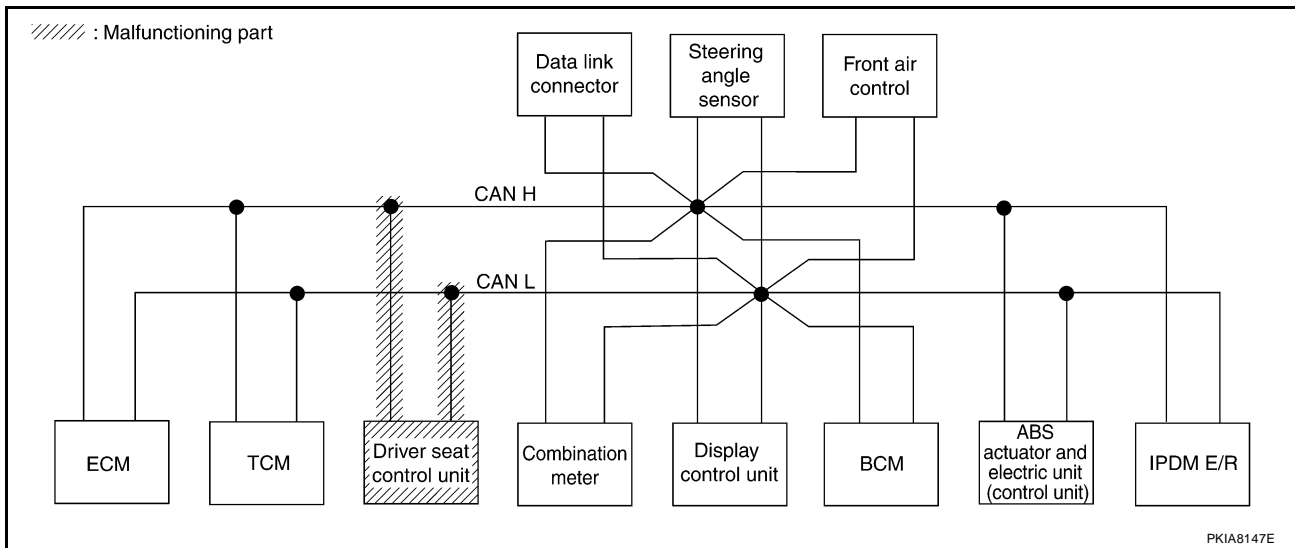

CAN SYSTEM (TYPE 1)


[CAN]

Case 7

Check combination meter circuit. Refer to [LAN-44, "Combination Meter Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR										
		Initial diagnosis	Transmit diagnosis	Receive diagnosis								
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	✓	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	✓	—	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	✓	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	✓	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	✓	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—

PKIB665E

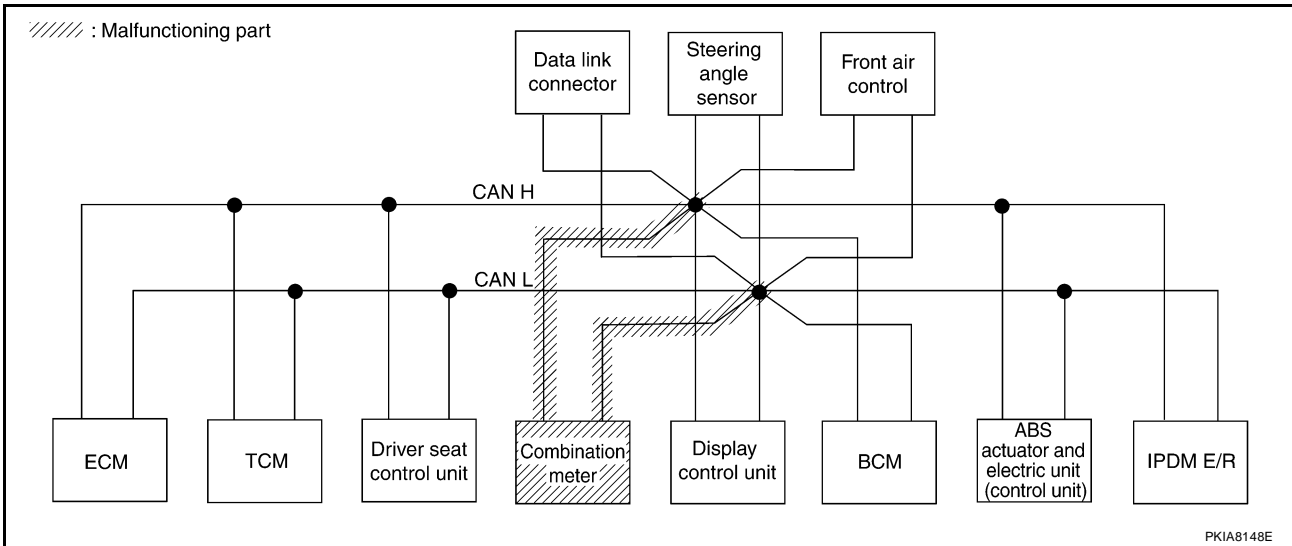

CAN SYSTEM (TYPE 1)


[CAN]

Case 8

Check display control unit circuit. Refer to [LAN-45, "Display Control Unit Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR										
		Initial diagnosis	Transmit diagnosis	Receive diagnosis								
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1 ✓	CAN CIRC 3 ✓	—	CAN CIRC 5 ✓	—	CAN CIRC 2 ✓	—	CAN CIRC 4 ✓	—	CAN CIRC 7 ✓
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN ✓	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—

PKIB666E

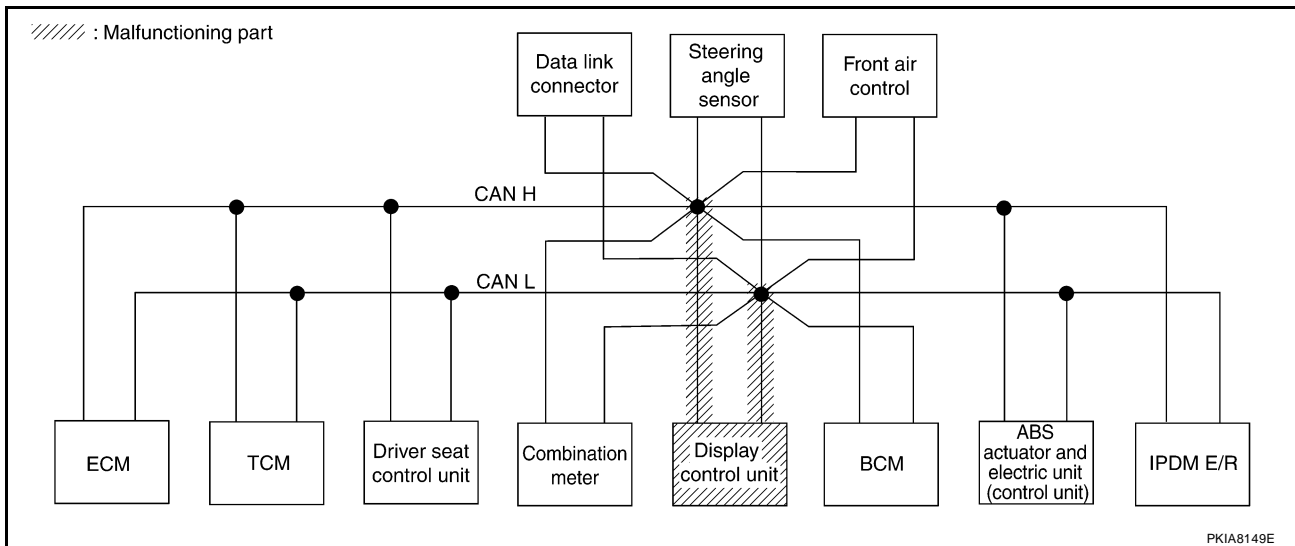

PKIA8149E

CAN SYSTEM (TYPE 1)


[CAN]

Case 9

Check BCM circuit. Refer to LAN-45, "BCM Circuit Check" .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR										
		Initial diagnosis	Transmit diagnosis	Receive diagnosis								
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN ✓	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN ✓	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2 ✓	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication ✓	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN ✓	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN ✓	—	—	—	—

PKIB667E

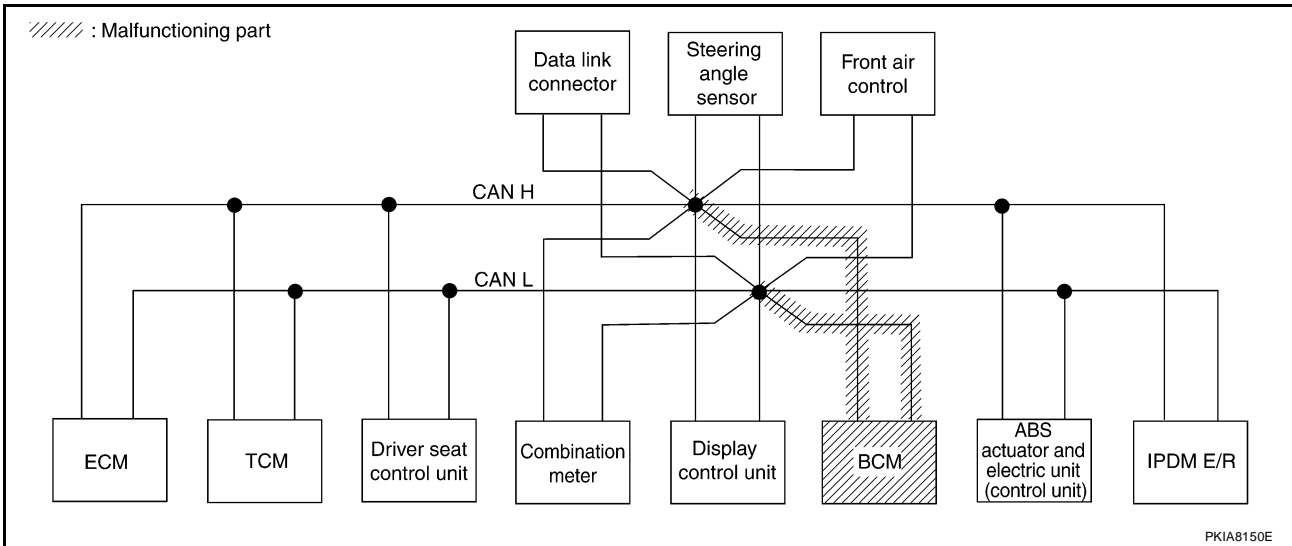

CAN SYSTEM (TYPE 1)


[CAN]

Case 10

Check data link connector circuit. Refer to [LAN-46, "Data Link Connector Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR										
		Initial diagnosis	Transmit diagnosis	Receive diagnosis								
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication ✓	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication ✓	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication ✓	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication ✓	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—

PKIB6668E

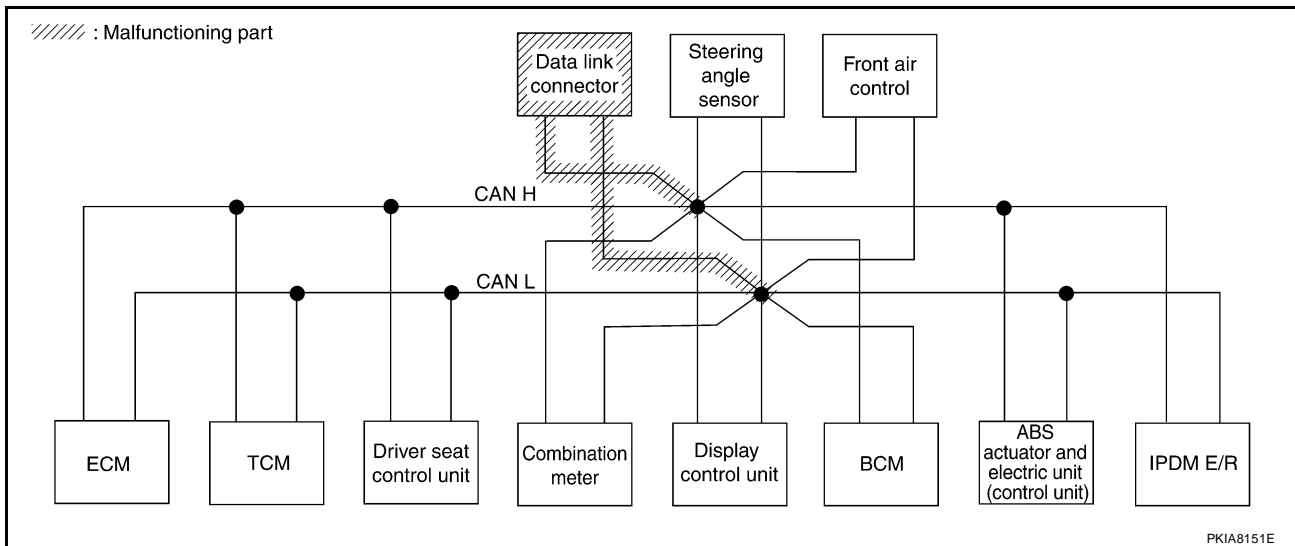

PKIA8151E

CAN SYSTEM (TYPE 1)


[CAN]

Case 11

Check steering angle sensor circuit. Refer to [LAN-46. "Steering Angle Sensor Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR										
		Initial diagnosis	Transmit diagnosis	Receive diagnosis								
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—

PKIB6669E

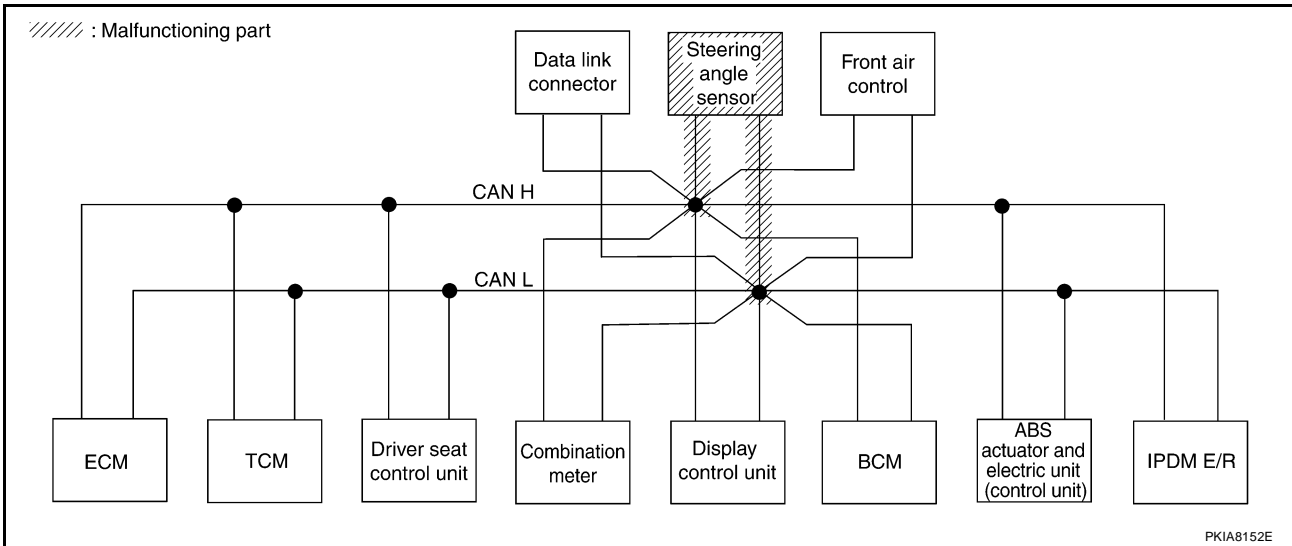

CAN SYSTEM (TYPE 1)


[CAN]

Case 12

Check front air control circuit. Refer to [LAN-47, "Front Air Control Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR										
		Initial diagnosis	Transmit diagnosis	Receive diagnosis								
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication ✓	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—

PKIB6670E

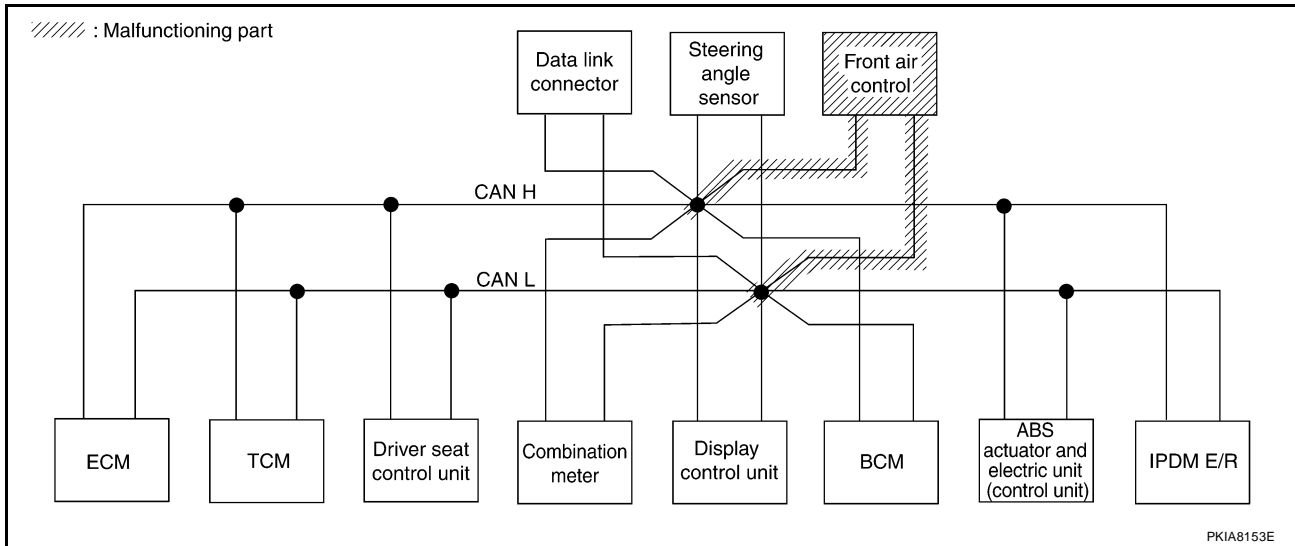

CAN SYSTEM (TYPE 1)


[CAN]

Case 13

Check ABS actuator and electric unit (control unit) circuit. Refer to [LAN-47, "ABS Actuator and Electric Unit \(Control Unit\) Circuit Check"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									IPDM E/R
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS		
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	—	
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7	
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	UNKWN	
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	UNKWN	—	
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	

PKIB6671E

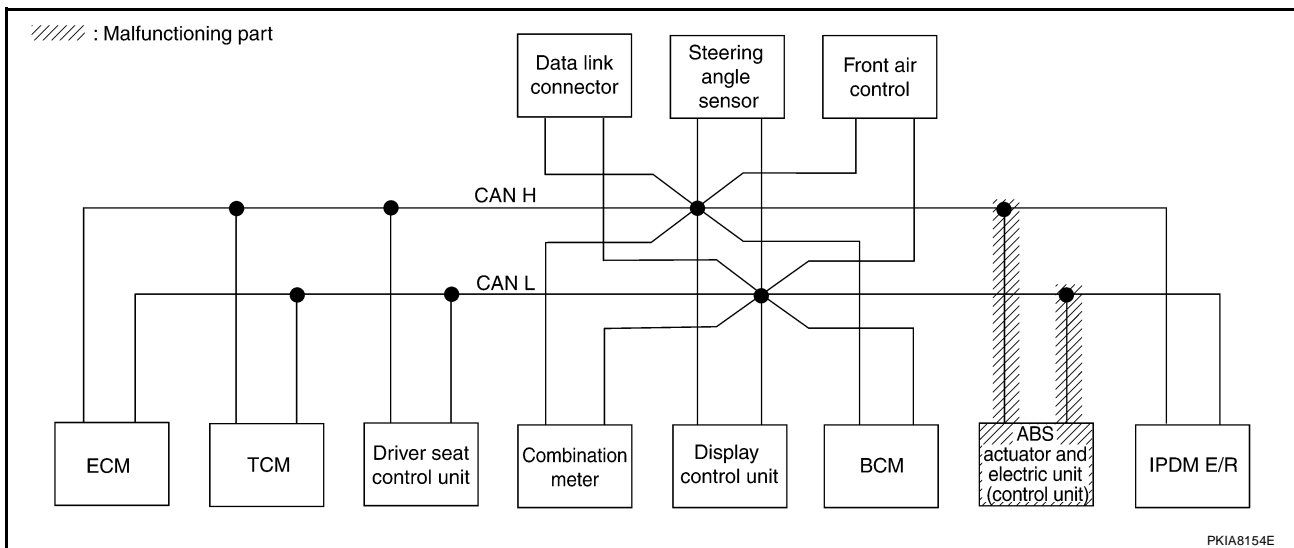

CAN SYSTEM (TYPE 1)


[CAN]

Case 14

Check IPDM E/R circuit. Refer to [LAN-48, "IPDM E/R Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									IPDM E/R
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS		
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN ✓	
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	—	
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7 ✓	
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	UNKWN ✓	
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	UNKWN	—	
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	
IPDM E/R	No indication ✓	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	

PKIB6672E

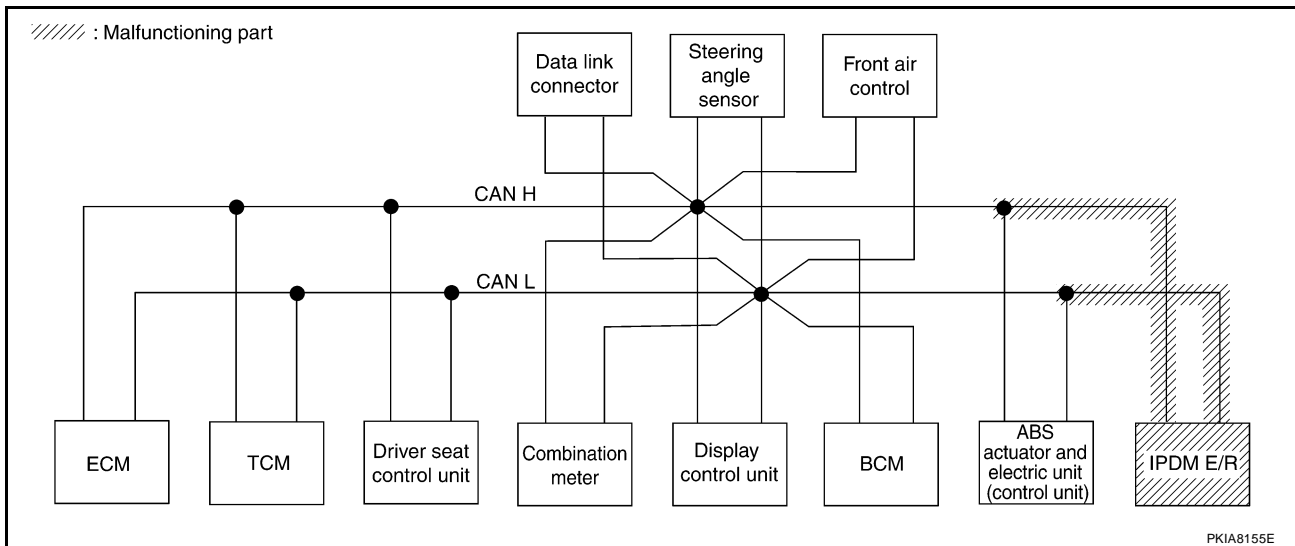

CAN SYSTEM (TYPE 1)

[CAN]

Case 15

Check CAN communication circuit. Refer to [LAN-48, "CAN Communication Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									IPDM E/R
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS		
ENGINE	—	NG	UNKW N	—	UNKW N	UNKW N	—	UNKW N	—	—	UNKW N	UNKW N	
A/T	—	NG	UNKW N	UNKW N	—	UNKW N	—	—	—	—	UNKW N	—	
AUTO DRIVE POS.	No indication	NG	UNKW N	—	UNKW N	UNKW N	—	UNKW N	—	—	—	—	
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7	
BCM	No indication	NG	UNKW N	UNKW N	—	UNKW N	—	—	—	—	—	UNKW N	
HVAC	No indication	—	UNKW N	UNKW N	—	—	UNKW N	UNKW N	—	—	UNKW N	—	
ABS	—	NG	UNKW N	UNKW N	UNKW N	—	—	—	UNKW N	—	—	—	
IPDM E/R	No indication	—	UNKW N	UNKW N	—	—	—	UNKW N	—	—	—	—	

PKIB6673E

Case 16

Check IPDM E/R ignition relay circuit continuously sticks "OFF". Refer to [LAN-49, "IPDM E/R Ignition Relay Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									IPDM E/R
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS		
ENGINE	—	NG	UNKW N	—	UNKW N	UNKW N	—	UNKW N	—	—	UNKW N	UNKW N	
A/T	—	NG	UNKW N	UNKW N	—	UNKW N	—	—	—	—	UNKW N	—	
AUTO DRIVE POS.	No indication	NG	UNKW N	—	UNKW N	UNKW N	—	UNKW N	—	—	—	—	
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7	
BCM	No indication	NG	UNKW N	UNKW N	—	UNKW N	—	—	—	—	—	UNKW N	
HVAC	No indication	—	UNKW N	UNKW N	—	—	UNKW N	UNKW N	—	—	UNKW N	—	
ABS	—	NG	UNKW N	UNKW N	UNKW N	—	—	—	UNKW N	—	—	—	
IPDM E/R	No indication	—	UNKW N	UNKW N	—	—	—	UNKW N	—	—	—	—	

PKIB6674E

Case 17

Check IPDM E/R ignition relay circuit continuously sticks "ON". Refer to [LAN-49, "IPDM E/R Ignition Relay Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR										
		Initial diagnosis	Transmit diagnosis	Receive diagnosis								
				ECM	TCM	METER /M&A	DISPLAY	BCM/SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKW	—	UNKW	UNKW	—	UNKW	—	—	UNKW	UNKW
A/T	—	NG	UNKW	UNKW	—	UNKW	—	—	—	—	UNKW	—
AUTO DRIVE POS.	No indication	NG	UNKW	—	UNKW	UNKW	—	UNKW	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKW	UNKW	—	UNKW	—	—	—	—	—	UNKW
HVAC	No indication	—	UNKW	UNKW	—	—	UNKW	UNKW	—	—	UNKW	—
ABS	—	NG	UNKW	UNKW	UNKW	—	—	—	UNKW	—	—	—
IPDM E/R	No indication	—	UNKW	UNKW	—	—	—	UNKW	—	—	—	—

PKIB6675E

Circuit Check Between TCM and Driver Seat Control Unit

UKS0018I

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector F33
 - Harness connector E19
 - Harness connector E34
 - Harness connector B40

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector and harness connector F33.
2. Check continuity between A/T assembly harness connector F9 terminals 3 (L), 8 (P) and harness connector F33 terminals 12 (L), 11 (P).


3 (L) - 12 (L) : Continuity should exist.

8 (P) - 11 (P) : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

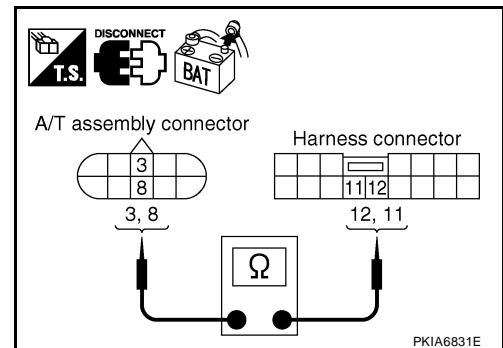


3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect harness connector E34.
2. Check continuity between harness connector E19 terminals 12 (L), 11 (P) and harness connector E34 terminals 24 (L), 23 (P).

12 (L) - 24 (L) : Continuity should exist.
11 (P) - 23 (P) : Continuity should exist.

OK or NG

- OK >> GO TO 4.
 NG >> Repair harness.

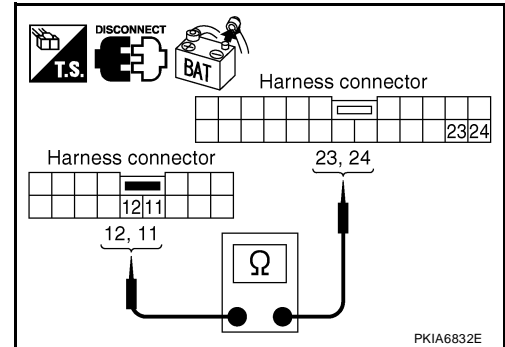


4. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector.
2. Check continuity between harness connector B40 terminals 24 (L), 23 (P) and driver seat control unit harness connector P2 terminals 3 (L), 19 (P).

24 (L) - 3 (L) : Continuity should exist.
23 (P) - 19 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-21, "Work Flow"](#).
 NG >> Repair harness.

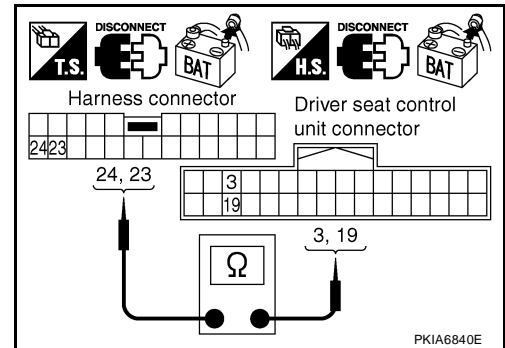

Circuit Check Between Driver Seat Control Unit and Data Link Connector

UKS0018J

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connector for damage, bend and loose connection (connector side and harness side).
 - Harness connector B69
 - Harness connector M40

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector and harness connector B69.
2. Check continuity between driver seat control unit harness connector P2 terminals 3 (L), 19 (P) and harness connector B69 terminals 51J (L), 52J (P).

3 (L) - 51J (L) : Continuity should exist.
19 (P) - 52J (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

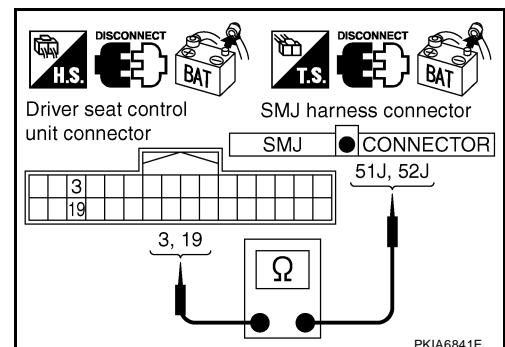

A
B
C
D
E
F
G
H
I
J
L
M

LAN

3. CHECK HARNESS FOR OPEN CIRCUIT


Check continuity between harness connector M40 terminals 51J (L), 52J (P) and data link connector M22 terminals 6 (L), 14 (P).

51J (L) - 6 (L) : Continuity should exist.

52J (P) - 14 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-21, "Work Flow"](#).
- NG >> Repair harness.

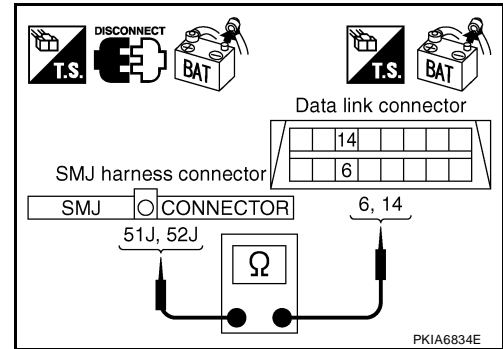

Circuit Check Between Data Link Connector and IPDM E/R

UKS0018K

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M31
 - Harness connector E152

OK or NG

- OK >> GO TO 2.
- NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect harness connector M31.
2. Check continuity between data link connector M22 terminals 6 (L), 14 (P) and harness connector M31 terminals 31G (L), 42G (P).

6 (L) - 31G (L) : Continuity should exist.

14 (P) - 42G (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness.

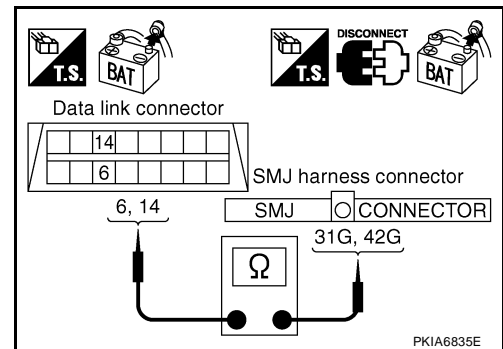

3. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect IPDM E/R connector.
2. Check continuity between harness connector E152 terminals 31G (L), 42G (P) and IPDM E/R harness connector E122 terminals 39 (L), 40 (P).

31G (L) - 39 (L) : Continuity should exist.

42G (P) - 40 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-21, "Work Flow"](#).
- NG >> Repair harness.

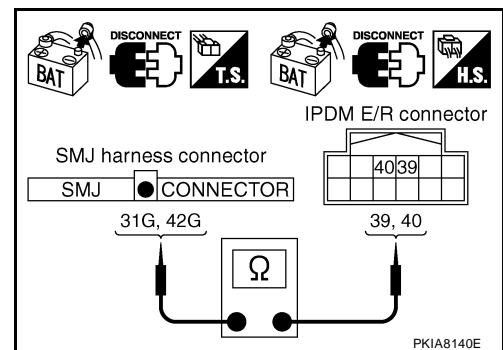

ECM Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (control module side and harness side).
 - ECM connector
 - Harness connector E19
 - Harness connector F33

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ECM connector.
2. Check resistance between ECM harness connector E16 terminals 94 (L) and 86 (P).

94 (L) - 86 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace ECM.
 NG >> Repair harness between ECM and A/T assembly.

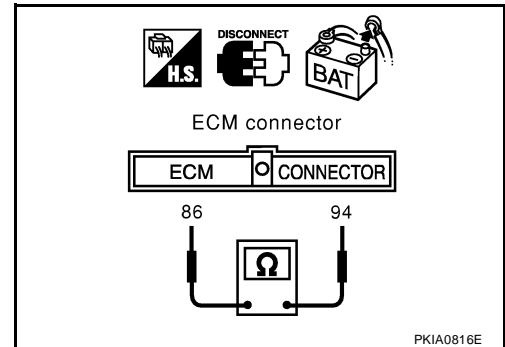**TCM Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of A/T assembly for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector.
2. Check resistance between A/T assembly harness connector F9 terminals 3 (L) and 8 (P).

3 (L) - 8 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace control valve with TCM.
 NG >> Repair harness between A/T assembly and harness connector F33.

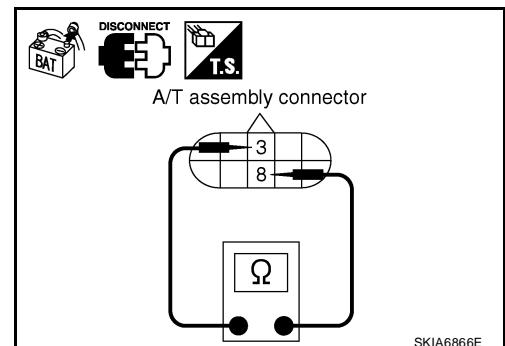

Driver Seat Control Unit Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (control unit side and harness side).
 - Driver seat control unit connector
 - Harness connector P1
 - Harness connector B37

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector.
2. Check resistance between driver seat control unit harness connector P2 terminals 3 (L) and 19 (P).

3 (L) - 19 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace driver seat control unit.
 NG >> Repair harness between driver seat control unit and harness connector B69.

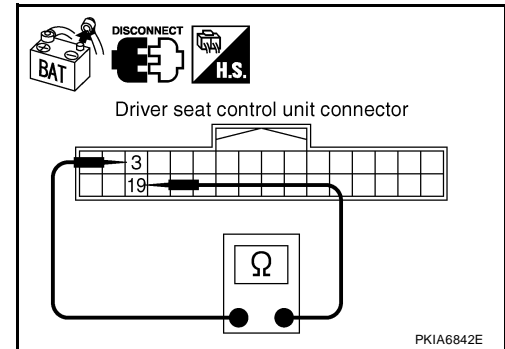**Combination Meter Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of combination meter for damage, bend and loose connection (meter side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect combination meter connector.
2. Check resistance between combination meter harness connector M24 terminals 11 (L) and 12 (P).

11 (L) - 12 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace combination meter.
 NG >> Repair harness between combination meter and data link connector.

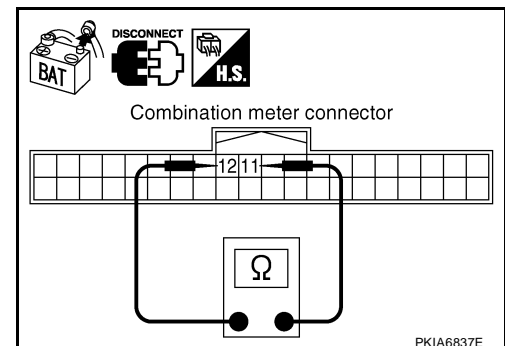

Display Control Unit Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of display control unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect display control unit connector.
2. Check resistance between display control unit harness connector M95 terminals 25 (L) and 26 (P).

25 (L) - 26 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace display control unit.
 NG >> Repair harness between display control unit and data link connector.

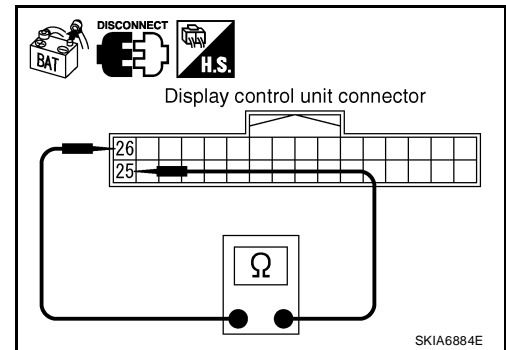**BCM Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of BCM for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect BCM connector.
2. Check resistance between BCM harness connector M18 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#) .
 NG >> Repair harness between BCM and data link connector.

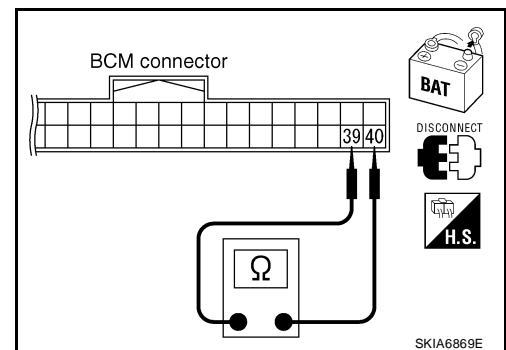

Data Link Connector Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of data link connector for damage, bend and loose connection (connector side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

Check resistance between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Diagnose again. Refer to [LAN-21, "Work Flow"](#) .
 NG >> Repair harness between data link connector and combination meter.

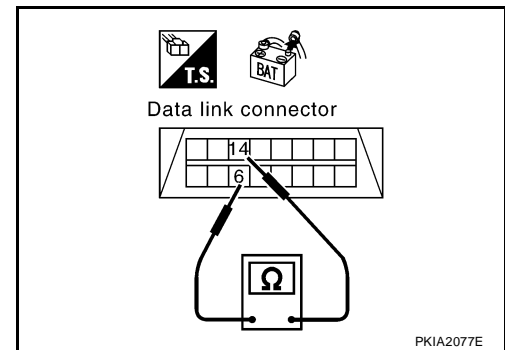**Steering Angle Sensor Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of steering angle sensor for damage, bend and loose connection (sensor side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect steering angle sensor connector.
2. Check resistance between steering angle sensor harness connector M47 terminals 3 (L) and 4 (P).

3 (L) - 4 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace steering angle sensor.
 NG >> Repair harness between steering angle sensor and data link connector.

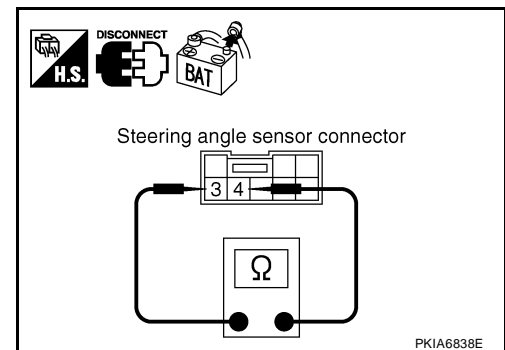

Front Air Control Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of front air control for damage, bend and loose connection (unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect front air control connector.
2. Check resistance between front air control harness connector M50 terminals 34 (L) and 35 (P).

34 (L) - 35 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace front air control.
 NG >> Repair harness between front air control and data link connector.

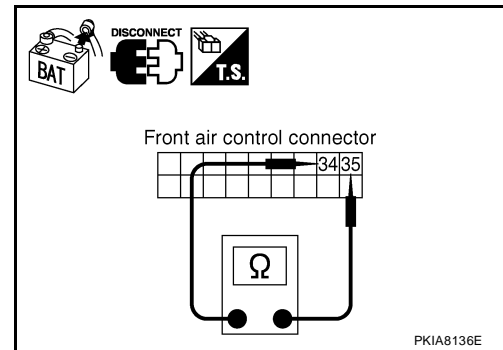**ABS Actuator and Electric Unit (Control Unit) Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ABS actuator and electric unit (control unit) for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check resistance between ABS actuator and electric unit (control unit) harness connector E125 terminals 11 (L) and 15 (P).

11 (L) - 15 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace ABS actuator and electric unit (control unit).
 NG >> Repair harness between ABS actuator and electric unit (control unit) and harness connector E152.

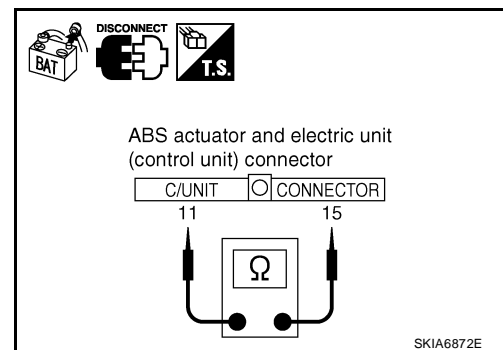

IPDM E/R Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of IPDM E/R for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check resistance between IPDM E/R harness connector E122 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness between IPDM E/R and harness connector E152.

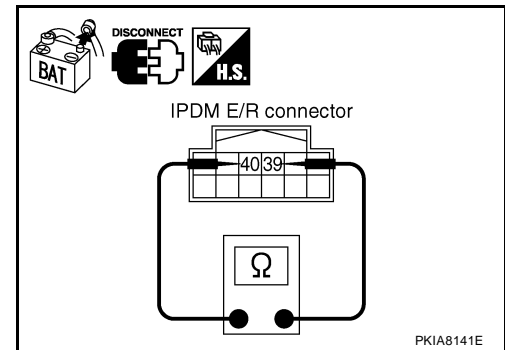**CAN Communication Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect the following module and control unit connectors and check terminals for deformation, disconnection, looseness or damage.
 - ECM
 - A/T assembly
 - Driver seat control unit
 - Combination meter
 - Display control unit
 - BCM
 - Steering angle sensor
 - Front air control
 - ABS actuator and electric unit (control unit)
 - IPDM E/R

OK or NG

- OK >> GO TO 2.
 NG >> Repair or replace as necessary.


2. CHECK HARNESS FOR SHORT CIRCUIT

With all module and control unit connectors disconnected, check continuity between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Continuity should not exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness.

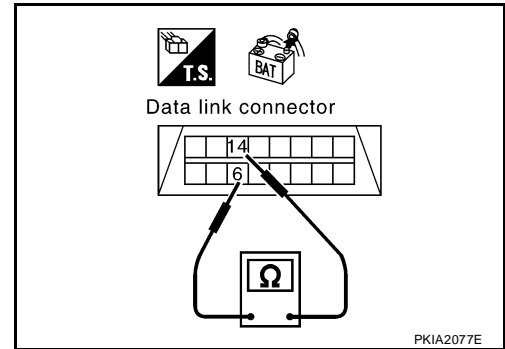

3. CHECK HARNESS FOR SHORT CIRCUIT


Check continuity between data link connector M22 terminals 6 (L), 14 (P) and ground.

6 (L) - Ground : Continuity should not exist.

14 (P) - Ground : Continuity should not exist.

OK or NG

- OK >> Check ECM and IPDM E/R. Refer to [LAN-49, "ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION"](#).
- NG >> Repair harness.

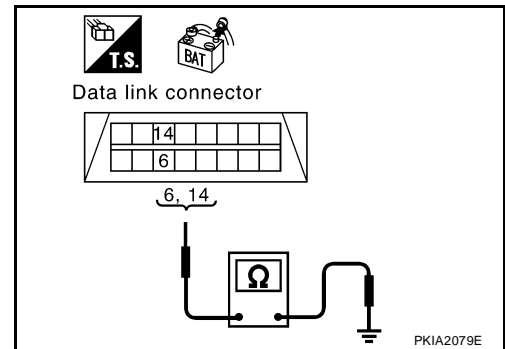

IPDM E/R Ignition Relay Circuit Check


Check the following. If no malfunction is found, replace the IPDM E/R.

- IPDM E/R power supply circuit. Refer to [PG-26, "IPDM E/R Power/Ground Circuit Inspection"](#).
- Ignition power supply circuit. Refer to [PG-13, "IGNITION POWER SUPPLY — IGNITION SW. IN ON AND/OR START"](#).

Component Inspection ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION

- Remove ECM and IPDM E/R from vehicle.
- Check resistance between ECM terminals 94 and 86.
- Check resistance between IPDM E/R terminals 39 and 40.

Unit	Terminal	Resistance value (Ω) (Approx.)
ECM	94 - 86	108 - 132
IPDM E/R	39 - 40	

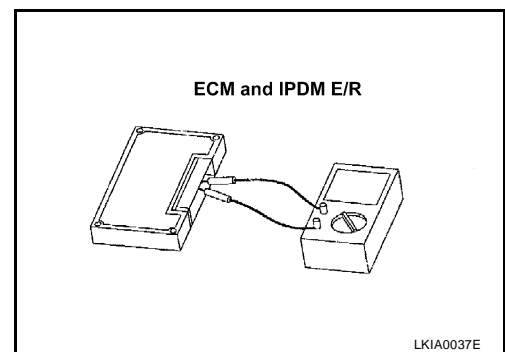

CAN SYSTEM (TYPE 2)

PFP:23710


System Description

UKS001N3

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Component Parts and Harness Connector Location

UKS001N4

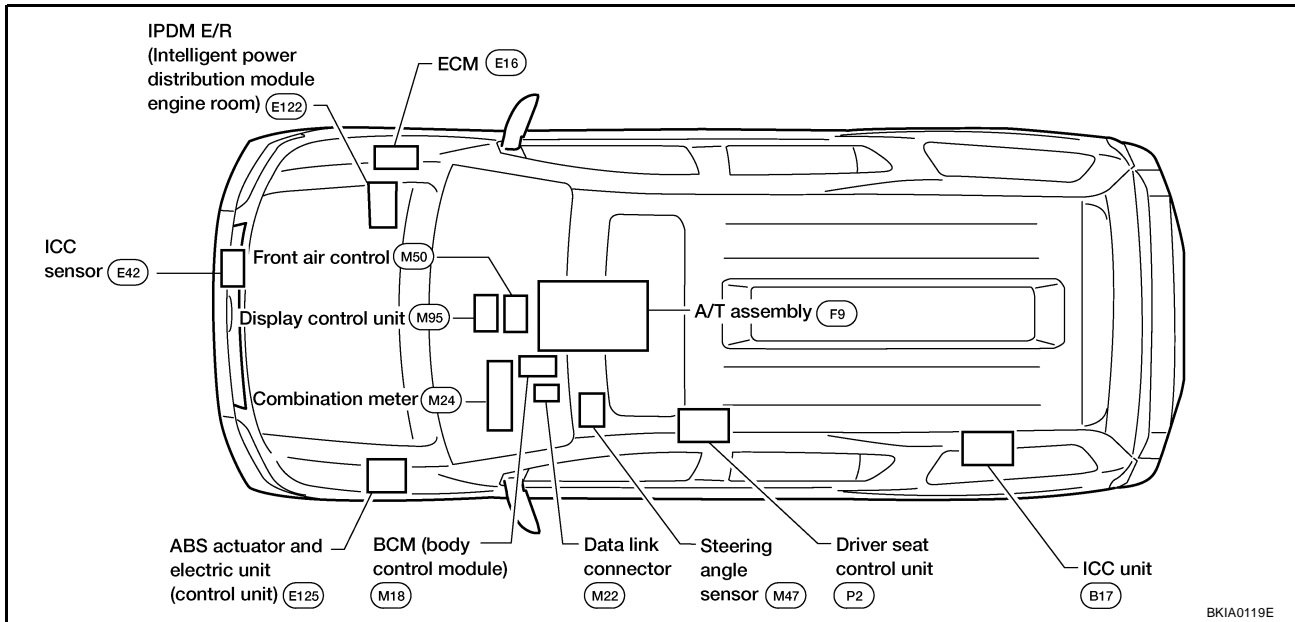


CAN SYSTEM (TYPE 2)

[CAN]

Schematic

UKS001N5

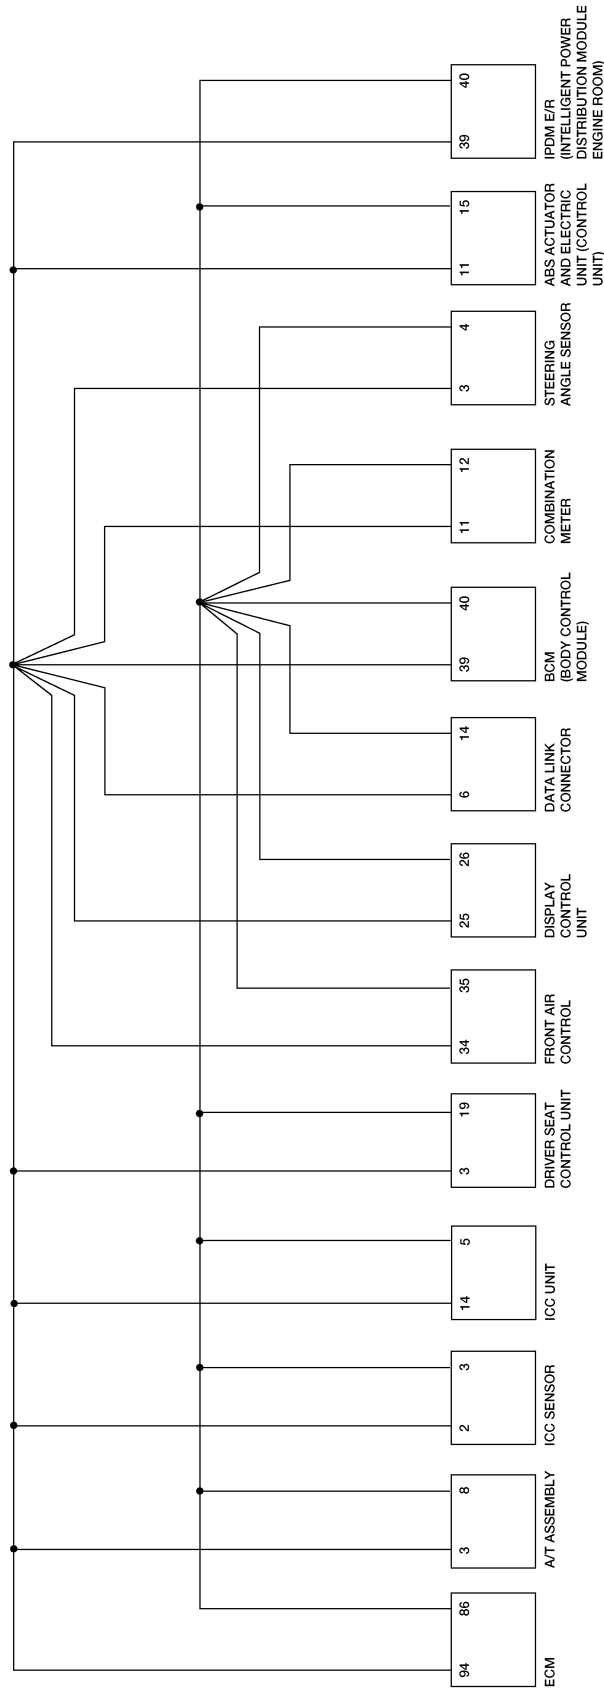

A

B

C

D

E

F

G

H

I

J

LAN

L

M

BKWA0074E

CAN SYSTEM (TYPE 2)





[CAN]

UKS001N6

Wiring Diagram - CAN -

LAN-CAN-04

▬ : DATA LINE

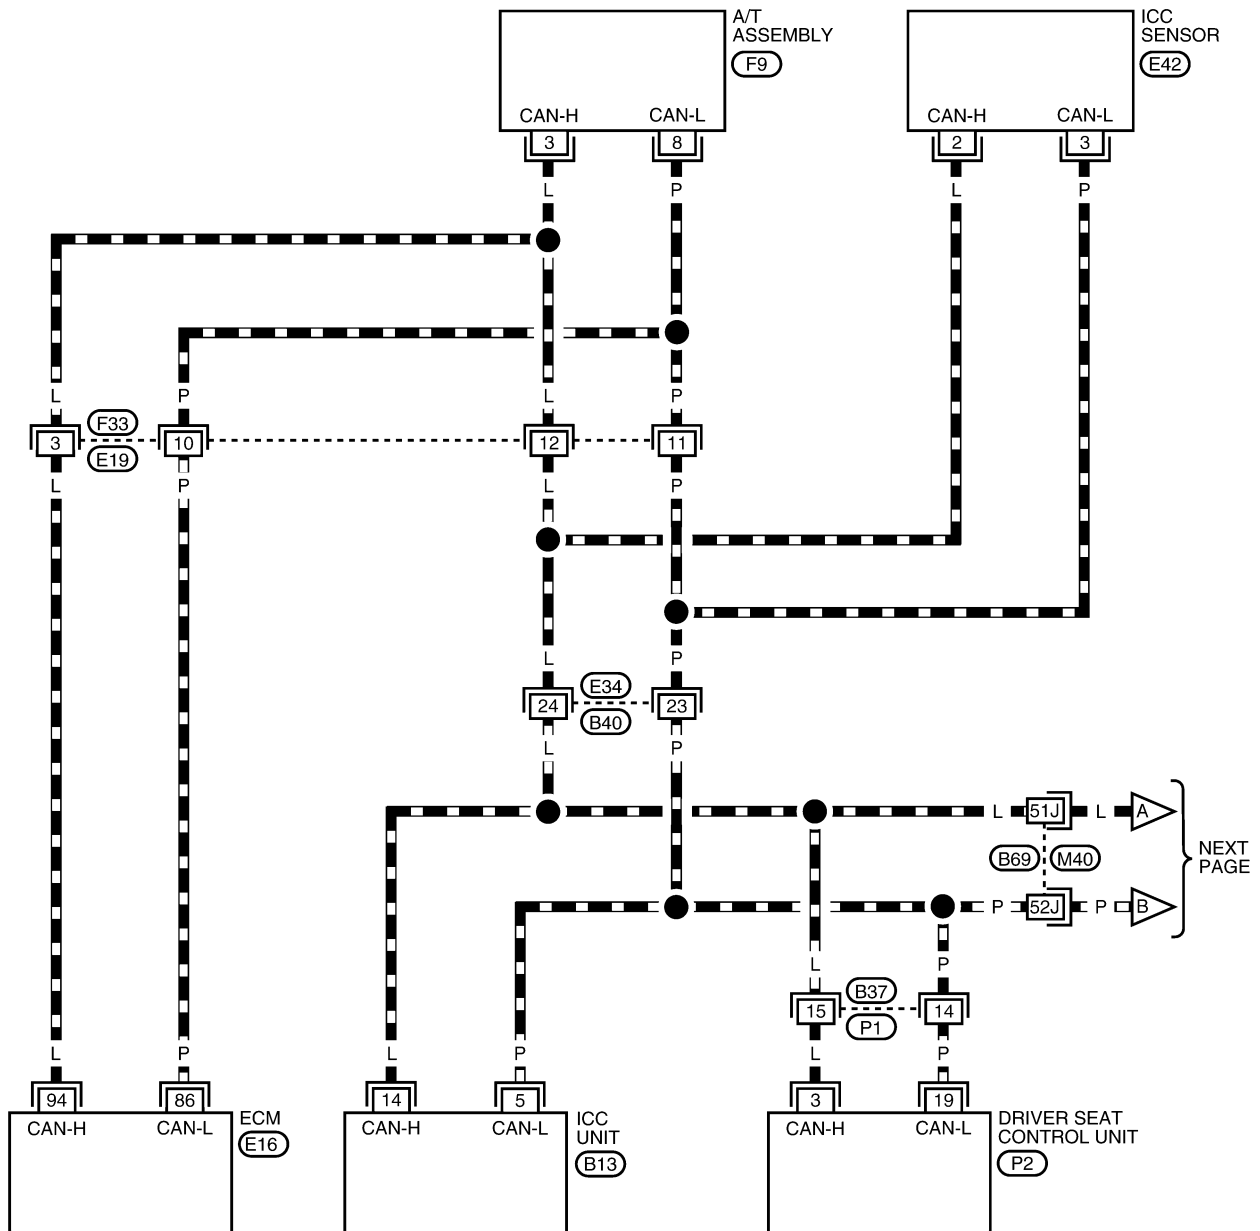

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

REFER TO THE FOLLOWING.

(M40) - SUPER MULTIPLE JUNCTION (SMJ)

(E16) - ELECTRICAL UNITS



BKWA0398E

CAN SYSTEM (TYPE 2)

[CAN]

LAN-CAN-05




— : DATA LINE

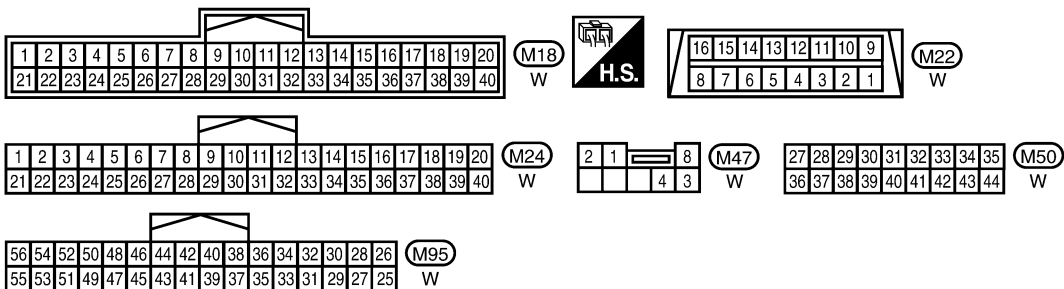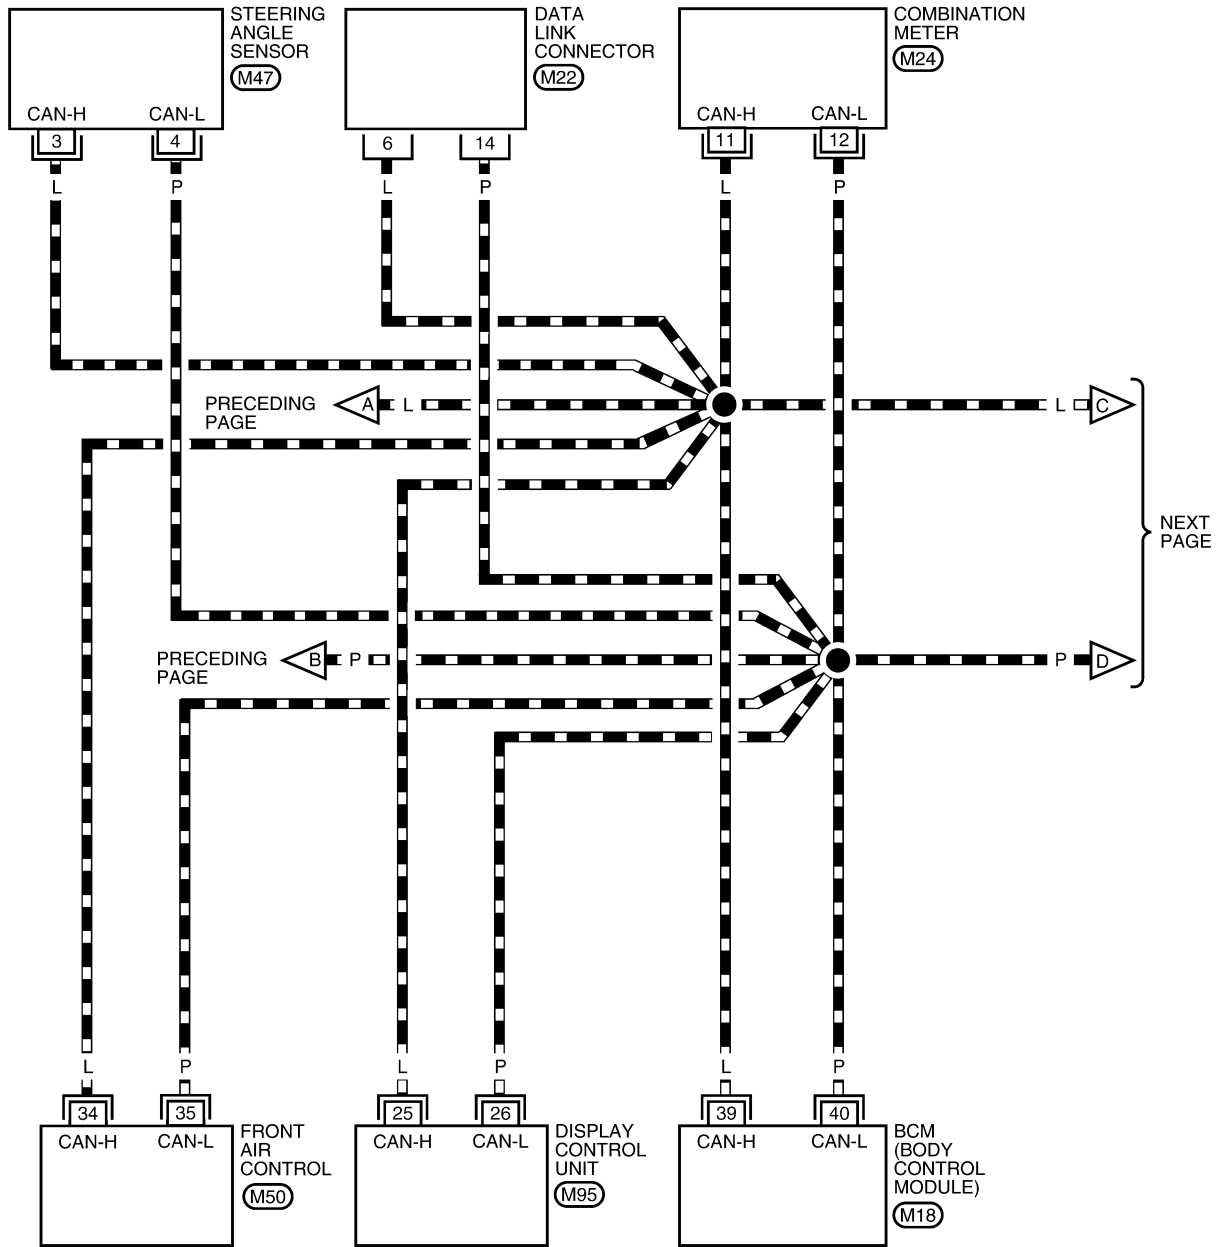

BKWA0399E

LAN-CAN-06

▬ : DATA LINE

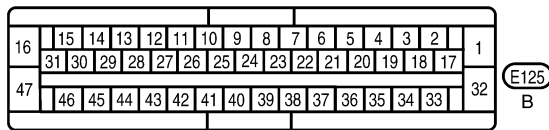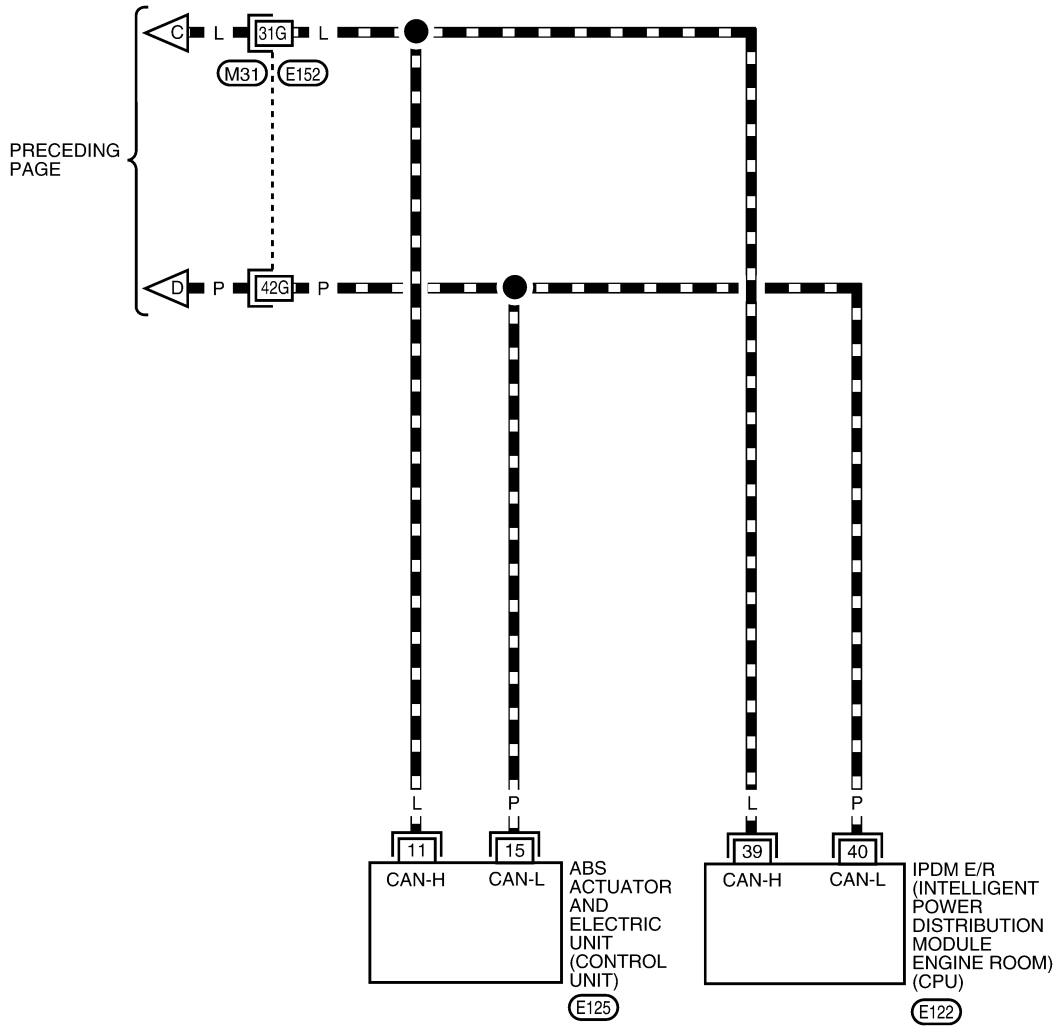

REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

BKWA0400E


CAN SYSTEM (TYPE 2)

[CAN]


UKS001N7

Work Flow


- When there are no indications of "AUTO DRIVE POS.", "BCM", "HVAC" or "IPDM E/R" on "SELECT SYSTEM" display of CONSULT-II, print the "SELECT SYSTEM".

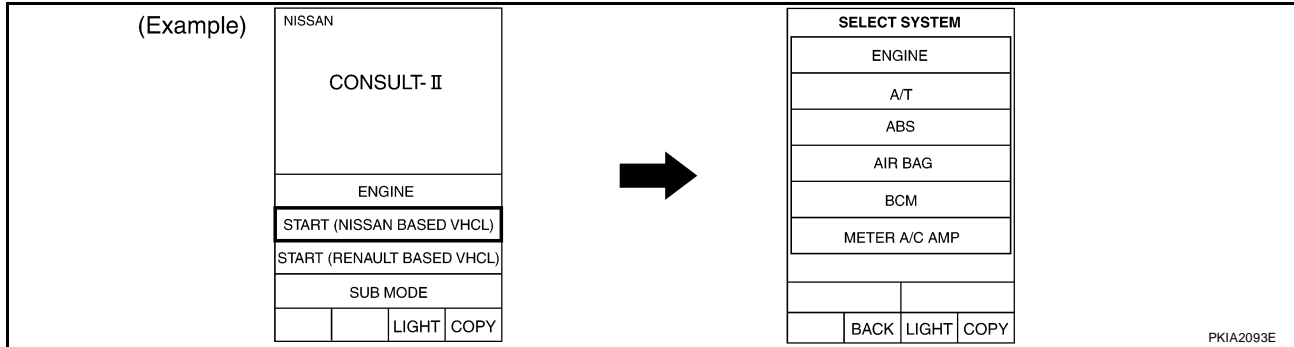

- Print all the data of "SELF-DIAG RESULTS" for "ENGINE", "A/T", "ICC", "AUTO DRIVE POS.", "BCM", "HVAC", "ABS" and "IPDM E/R" displayed on CONSULT-II.

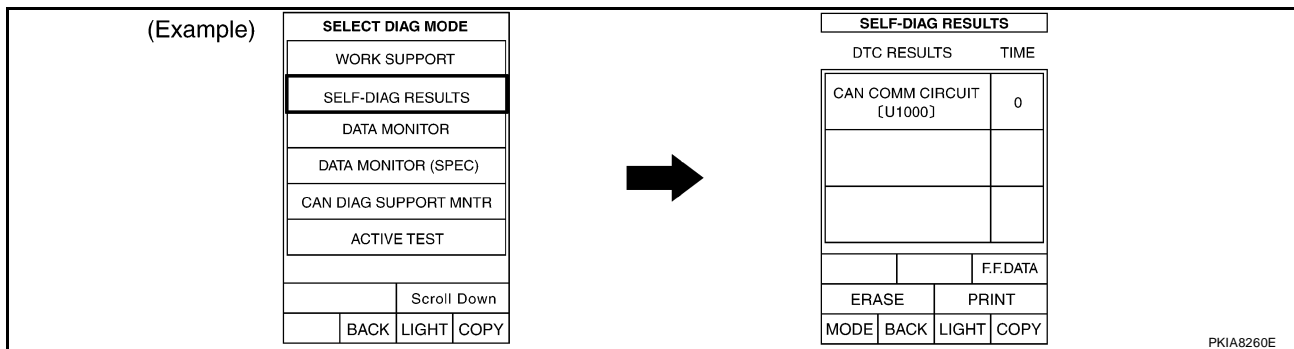

- Print all the data of "CAN DIAG SUPPORT MNTR" for "ENGINE", "A/T", "ICC", "AUTO DRIVE POS.", "BCM", "HVAC", "ABS" and "IPDM E/R" displayed on CONSULT-II.

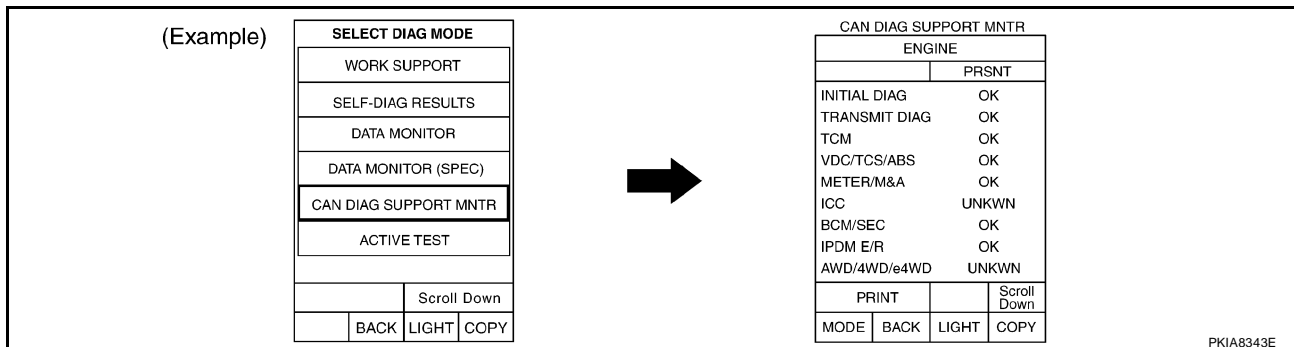

- Attach the printed sheet of "SELECT SYSTEM", "SELF-DIAG RESULTS" and "CAN DIAG SUPPORT MNTR" onto the check sheet. Refer to [LAN-57, "CHECK SHEET"](#) .

- Based on the indications of "SELECT SYSTEM" and the results of "CAN DIAG SUPPORT MNTR", put marks "v" onto the items with "No indication", "NG" or "UNKWN" in the check sheet table. Refer to [LAN-57, "CHECK SHEET"](#) .

NOTE:

- If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" as "CAN DIAG SUPPORT MNTR" for the diagnosed control unit, replace the control unit.
- The "CAN DIAG SUPPORT MNTR" items, which are not in check sheet table, are not related to diagnostic procedure on service manual. So it is not necessary to check the status of the "CAN DIAG SUPPORT MNTR" items not in check sheet table.

- Check CAN communication line of the navigation system. Refer to [AV-131, "CAN Communication Line Check"](#) .

- Attach the CAN DIAG SUPPORT MONITOR check sheet onto the check sheet. Refer to [LAN-57, "CHECK SHEET"](#) .

A
B
C
D
E
F
G
H
I
J
L
M

LAN

CAN SYSTEM (TYPE 2)

[CAN]

-
8. Mark the "NG" or "UNKWN" item of the check sheet table with "v" from the result of CAN DIAG SUPPORT MONITOR check sheet. Refer to [LAN-57, "CHECK SHEET"](#) .

NOTE:

If "NG" is displayed on "CAN COMM" as "CAN DIAG SUPPORT MONITOR" for the diagnosed control unit, replace the control unit. Refer to [AV-131, "CAN Communication Line Check"](#) .

9. According to the check sheet results (example), start inspection. Refer to [LAN-59, "CHECK SHEET RESULTS \(EXAMPLE\)"](#) .

CAN SYSTEM (TYPE 2)

[CAN]

CHECK SHEET

NOTE:

If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" or "CAN COMM" for the diagnosed control unit, replace the control unit.

Check sheet table														
SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	-	NG	UNKWN	-	UNKWN	-	UNKWN	UNKWN	-	UNKWN	-	-	UNKWN	UNKWN
A/T	-	NG	UNKWN	UNKWN	-	-	UNKWN	UNKWN	-	-	-	-	UNKWN	-
ICC	-	NG	UNKWN	UNKWN	UNKWN	UNKWN	-	-	-	UNKWN	-	-	UNKWN	-
AUTO DRIVE POS.	No indication	NG	UNKWN	-	UNKWN	-	-	UNKWN	-	UNKWN	-	-	-	-
Display control unit	-	CAN COMM	CAN CIRC 1	CAN CIRC 3	-	-	-	CAN CIRC 5	-	CAN CIRC 2	-	CAN CIRC 4	-	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	-	-	-	UNKWN	-	-	-	-	-	UNKWN
HVAC	No indication	-	UNKWN	UNKWN	-	-	-	-	UNKWN	UNKWN	-	-	UNKWN	-
ABS	-	NG	UNKWN	UNKWN	UNKWN	-	-	-	-	-	UNKWN	-	-	-
IPDM E/R	No indication	-	UNKWN	UNKWN	-	-	-	-	-	UNKWN	-	-	-	-

Symptoms :

Attach copy of
SELECT SYSTEM

Attach copy of
SELECT SYSTEM

Attach copy of
display control unit
CAN DIAG SUPPORT MONITOR check sheet

SKIB3455E

A
B
C
D
E
F
G
H
I
J
L
M

LAN

CAN SYSTEM (TYPE 2)

[CAN]

Attach copy of ENGINE SELF-DIAG RESULTS	Attach copy of A/T SELF-DIAG RESULTS	Attach copy of ICC SELF-DIAG RESULTS	Attach copy of AUTO DRIVE POS. SELF-DIAG RESULTS
Attach copy of BCM SELF-DIAG RESULTS	Attach copy of HVAC SELF-DIAG RESULTS	Attach copy of ABS SELF-DIAG RESULTS	Attach copy of IPDM E/R SELF-DIAG RESULTS
Attach copy of ENGINE CAN DIAG SUPPORT MNTR	Attach copy of A/T CAN DIAG SUPPORT MNTR	Attach copy of ICC CAN DIAG SUPPORT MNTR	Attach copy of AUTO DRIVE POS. CAN DIAG SUPPORT MNTR
Attach copy of BCM CAN DIAG SUPPORT MNTR	Attach copy of HVAC CAN DIAG SUPPORT MNTR	Attach copy of ABS CAN DIAG SUPPORT MNTR	Attach copy of IPDM E/R CAN DIAG SUPPORT MNTR

SKIB3452E

CHECK SHEET RESULTS (EXAMPLE)

NOTE:


If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" or "CAN COMM" for the diagnosed control unit, replace the control unit.

Case 1

Check harness between TCM and ICC sensor. Refer to [LAN-78, "Circuit Check Between TCM and ICC Sensor"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R	
ENGINE	—	NG	UNKWN	—	UNKWN	—	✓	✓	—	—	✓	—	—	✓	✓
A/T	—	NG	UNKWN	UNKWN	—	—	✓	✓	—	—	—	—	—	✓	—
ICC	—	NG	UNKWN	✓	✓	UNKWN	—	—	—	—	UNKWN	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	✓	—	—	—	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	✓	—	—	—	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	✓	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ABS	—	NG	UNKWN	✓	✓	—	—	—	—	—	UNKWN	—	—	—	—
IPDM E/R	No indication	—	UNKWN	✓	—	—	—	—	—	—	UNKWN	—	—	—	—

SKIB3456E

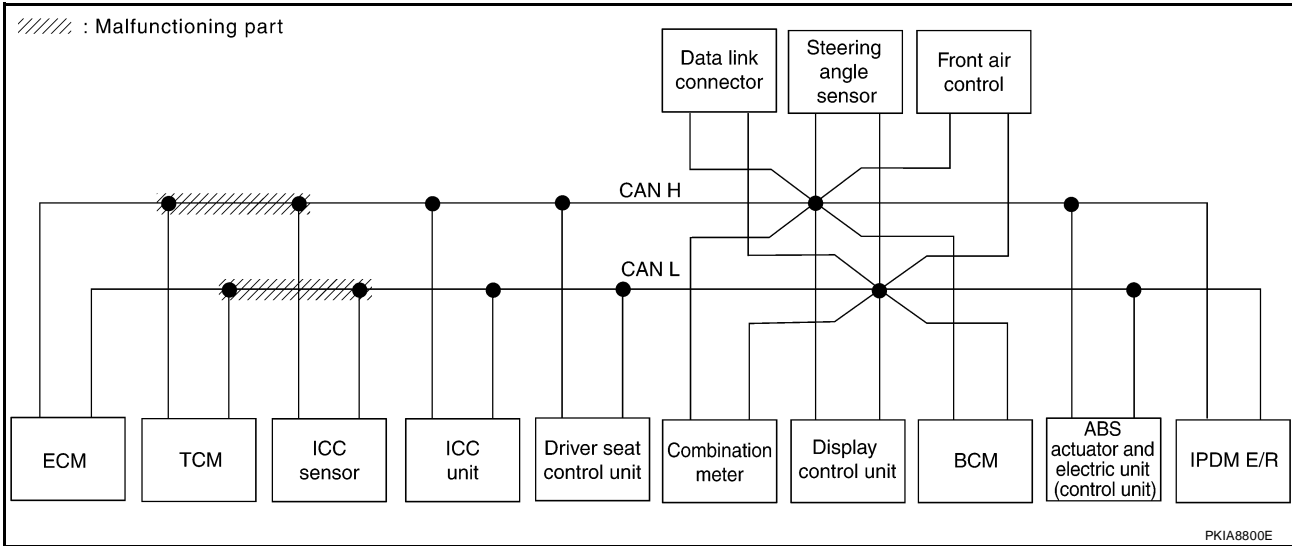

CAN SYSTEM (TYPE 2)


[CAN]

Case 2

Check harness between ICC sensor and ICC unit. Refer to [LAN-79, "Circuit Check Between ICC Sensor and ICC Unit"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKW	—	UNKW	—	UNKW	UNKW	—	UNKW	—	—	UNKW	UNKW
A/T	—	NG	UNKW	UNKW	—	—	UNKW	UNKW	—	—	—	—	UNKW	—
ICC	—	NG	UNKW	UNKW	UNKW	UNKW	—	—	—	UNKW	—	—	UNKW	—
AUTO DRIVE POS.	No indication	NG	UNKW	—	UNKW	—	—	UNKW	—	UNKW	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKW	UNKW	—	—	—	UNKW	—	—	—	—	—	UNKW
HVAC	No indication	—	UNKW	UNKW	—	—	—	—	UNKW	UNKW	—	—	UNKW	—
ABS	—	NG	UNKW	UNKW	UNKW	—	—	—	—	—	UNKW	—	—	—
IPDM E/R	No indication	—	UNKW	UNKW	—	—	—	—	—	UNKW	—	—	—	—

SKIB3457E

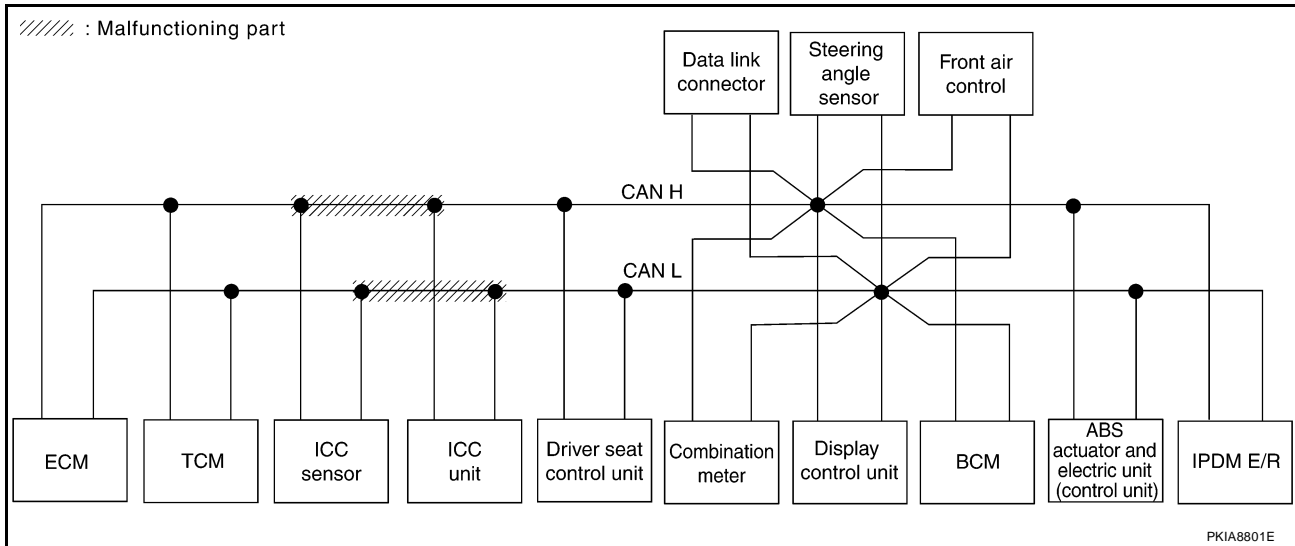


PKIA8801E

Case 3

Check harness between ICC unit and driver seat control unit. Refer to [LAN-80, "Circuit Check Between ICC Unit and Driver Seat Control Unit"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R	
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	UNKWN	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	—	
ICC	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	UNKWN	—	—	UNKWN	—	
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7	
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	UNKWN	
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	UNKWN	—	
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	

SKIB3458E

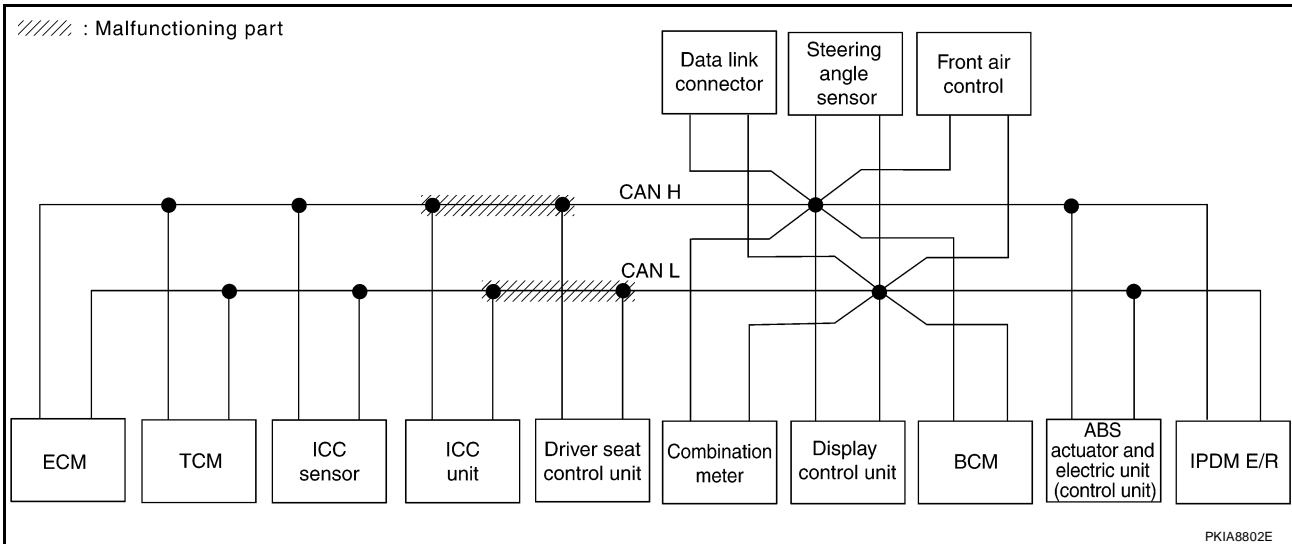


PKIA8802E

Case 4

Check harness between driver seat control unit and data link connector. Refer to [LAN-80, "Circuit Check Between Driver Seat Control Unit and Data Link Connector"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	UNKWN	UNKWN	
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—	
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	UNKWN	—	
AUTO DRIVE POS.	No indication ✓	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	UNKWN	
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	UNKWN	—	
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	

SKIB3459E

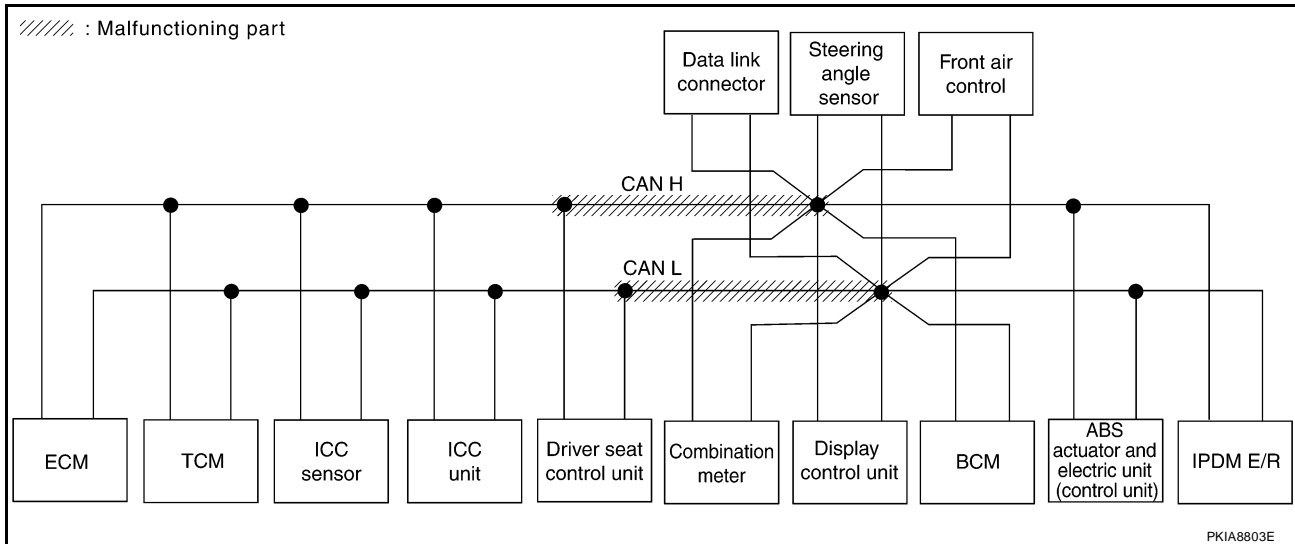


PKIA8803E

Case 5

Check harness between data link connector and IPDM E/R. Refer to [LAN-81, "Circuit Check Between Data Link Connector and IPDM E/R"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										IPDM E/R
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	UNKWN	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—

SKIB3460E

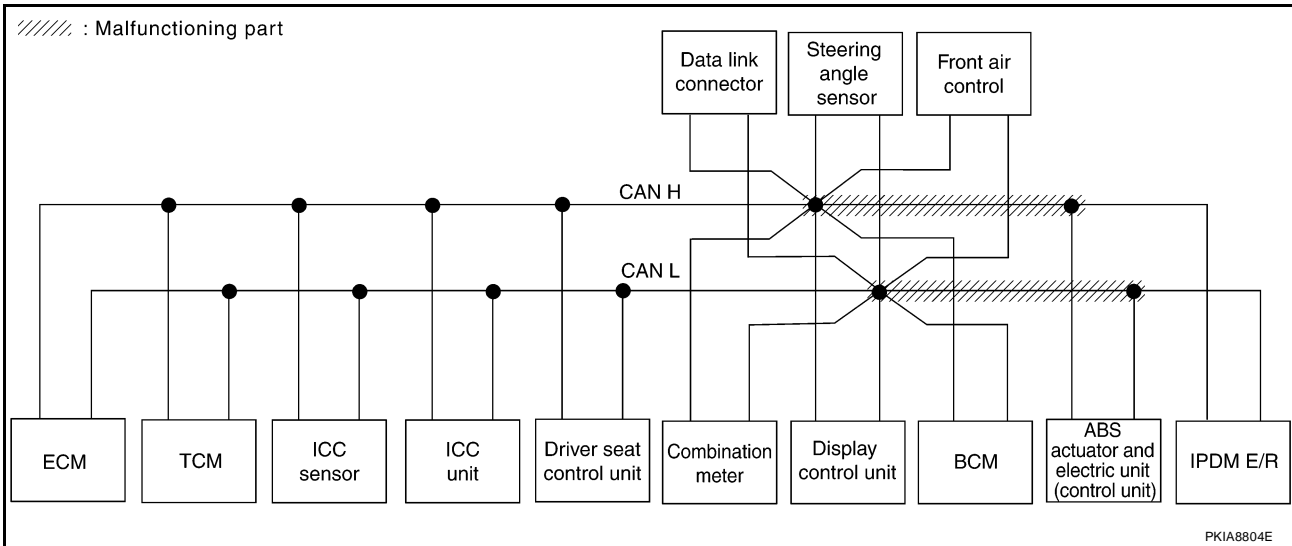

CAN SYSTEM (TYPE 2)


[CAN]

Case 6

Check ECM circuit. Refer to [LAN-82. "ECM Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										VDC/TCS /ABS	IPDM E/R
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control			
ENGINE	—	NG	UNKW [✓] N	—	UNKW [✓] N	—	UNKW [✓] N	UNKW [✓] N	—	UNKW [✓] N	—	—	UNKW [✓] N	UNKW [✓] N	
A/T	—	NG	UNKW [✓] N	UNKW [✓] N	—	—	UNKW [✓] N	UNKW [✓] N	—	—	—	—	UNKW [✓] N	—	
ICC	—	NG	UNKW [✓] N	UNKW [✓] N	UNKW [✓] N	—	—	—	—	UNKW [✓] N	—	—	UNKW [✓] N	—	
AUTO DRIVE POS.	No indication	NG	UNKW [✓] N	—	UNKW [✓] N	—	—	UNKW [✓] N	—	UNKW [✓] N	—	—	—	—	
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7	
BCM	No indication	NG	UNKW [✓] N	UNKW [✓] N	—	—	—	UNKW [✓] N	—	—	—	—	—	UNKW [✓] N	
HVAC	No indication	—	UNKW [✓] N	UNKW [✓] N	—	—	—	—	UNKW [✓] N	UNKW [✓] N	—	—	UNKW [✓] N	—	
ABS	—	NG	UNKW [✓] N	UNKW [✓] N	—	—	—	—	—	—	UNKW [✓] N	—	—	—	
IPDM E/R	No indication	—	UNKW [✓] N	UNKW [✓] N	—	—	—	—	—	UNKW [✓] N	—	—	—	—	

SKIB3461E

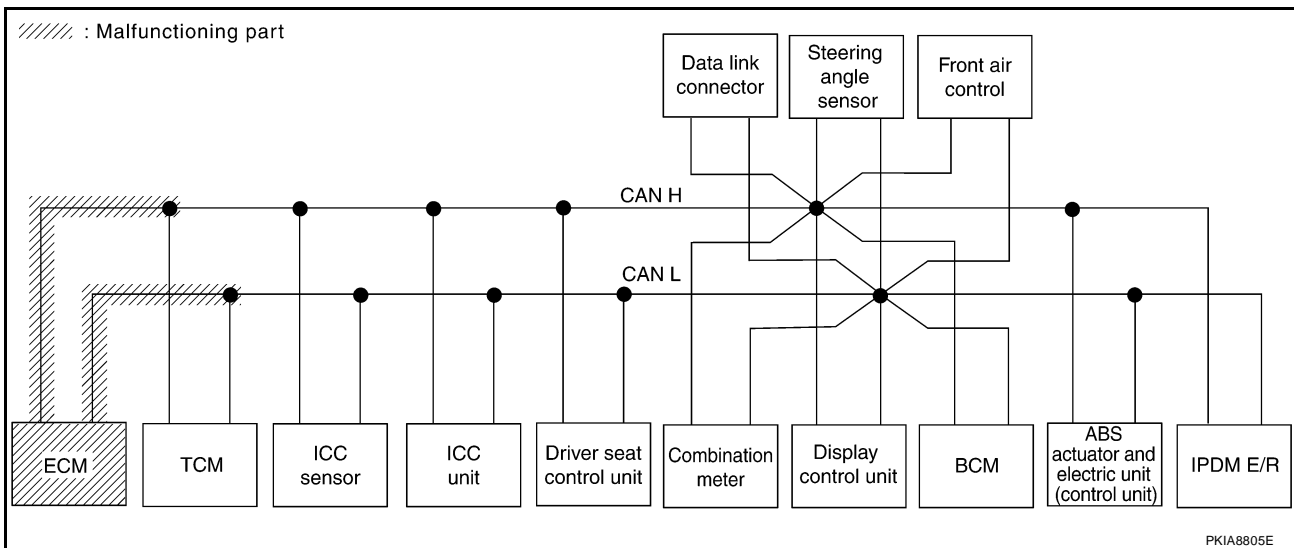

PKIA8805E

CAN SYSTEM (TYPE 2)


[CAN]

Case 7

Check TCM circuit. Refer to [LAN-82, "TCM Circuit Check"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	UNKWN	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—

SKIB3462E

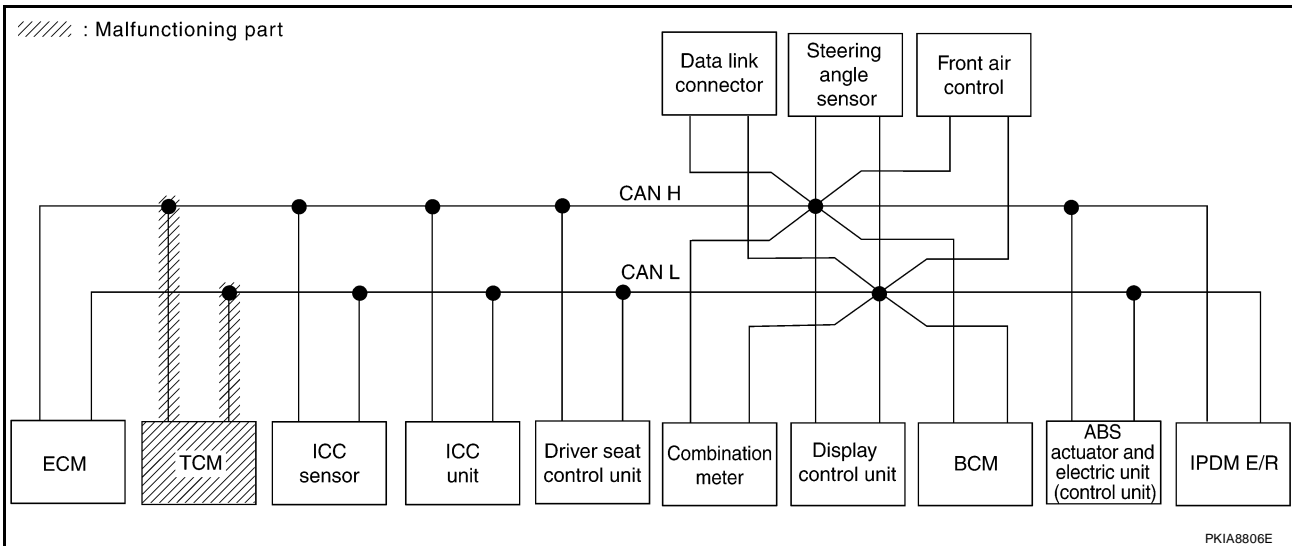

PKIA8806E

CAN SYSTEM (TYPE 2)


[CAN]

Case 8

Check ICC sensor circuit. Refer to [LAN-83, "ICC Sensor Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—

SKIB3463E

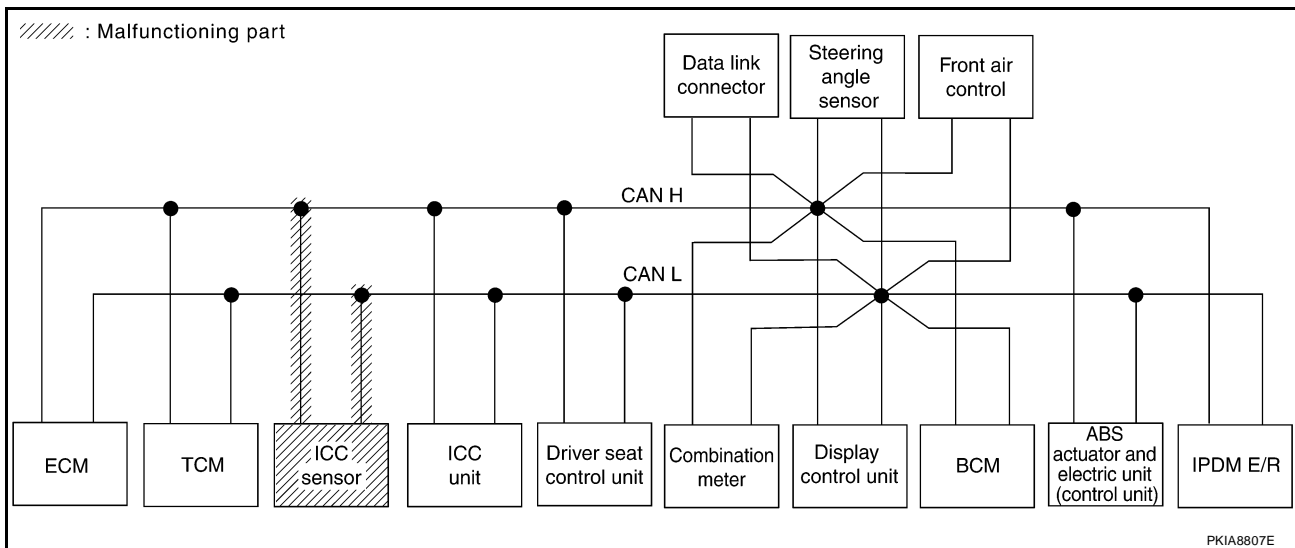

PKIA8807E

CAN SYSTEM (TYPE 2)


[CAN]

Case 9

Check ICC unit circuit. Refer to [LAN-83, "ICC Unit Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—

SKIB3464E

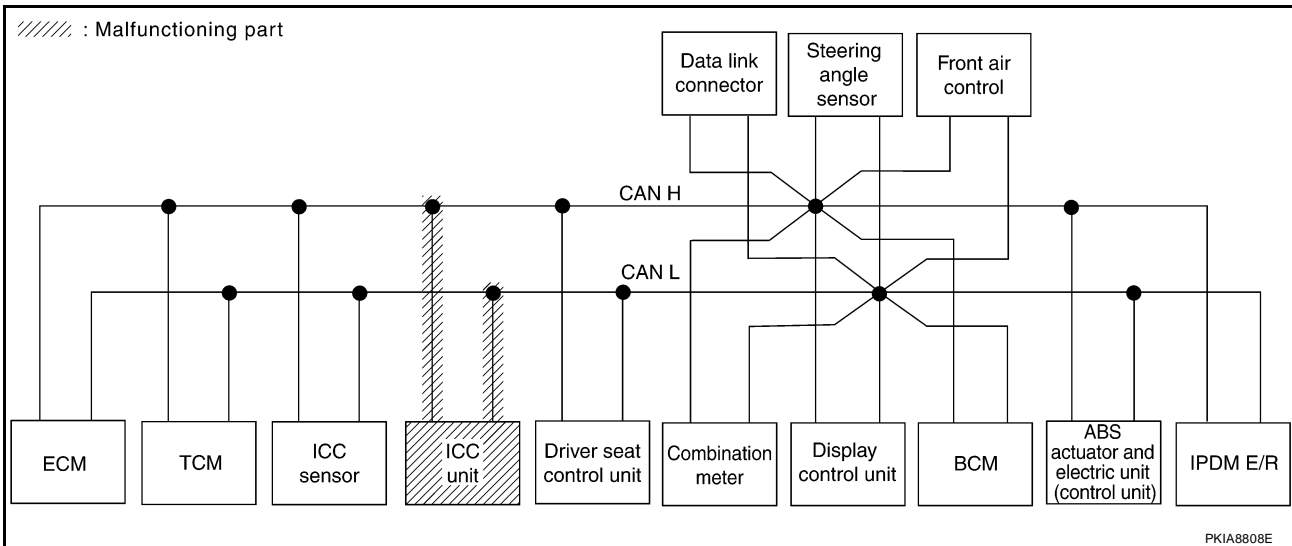

PKIA8808E

CAN SYSTEM (TYPE 2)


[CAN]

Case 10

Check driver seat control unit circuit. Refer to [LAN-84, "Driver Seat Control Unit Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—

SKIB3465E

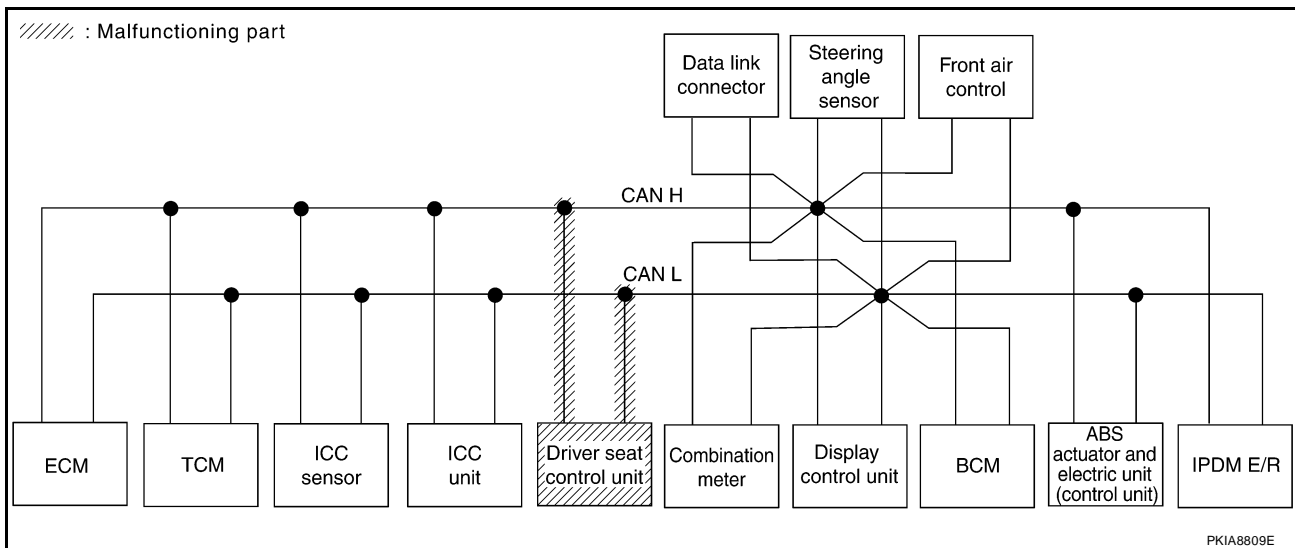


PKIA8809E

Case 11

Check combination meter circuit. Refer to [LAN-84, "Combination Meter Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										IPDM E/R	
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS		
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	✓	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	✓	—	—	—	—	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—	
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	✓	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	✓	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	✓	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	UNKWN	—	
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	

SKIB3466E

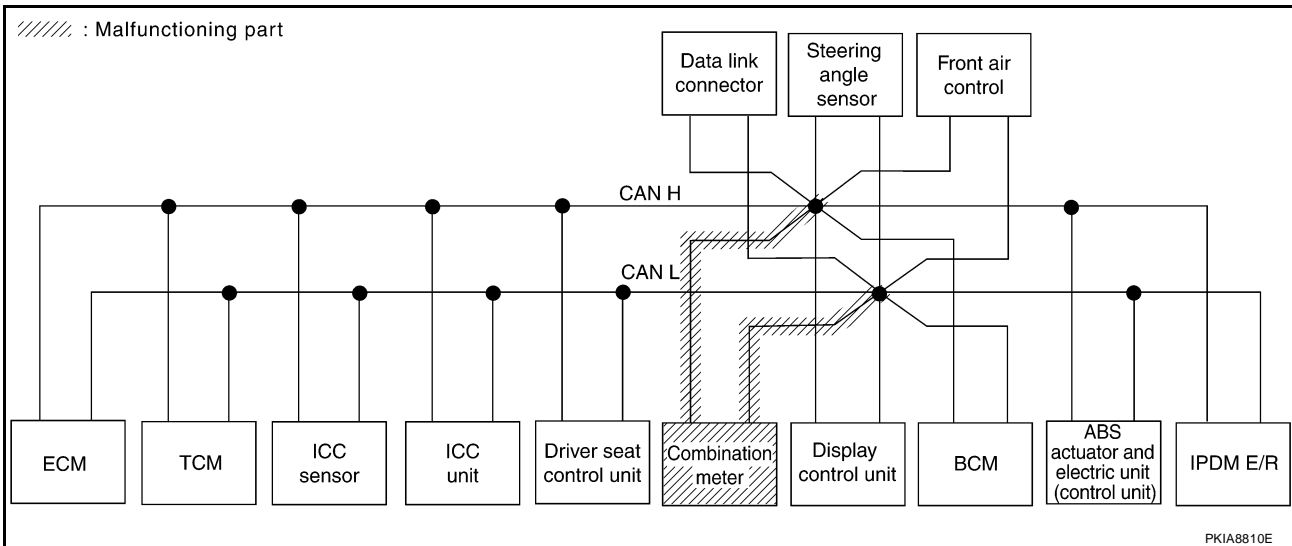

PKIA8810E

CAN SYSTEM (TYPE 2)


[CAN]

Case 12

Check display control unit circuit. Refer to [LAN-85, "Display Control Unit Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										IPDM E/R
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CINC 1	CAN CINC 3	—	—	—	CAN CINC 5	—	CAN CINC 2	—	CAN CINC 4	—	CAN CINC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	—	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—

SKIB3467E

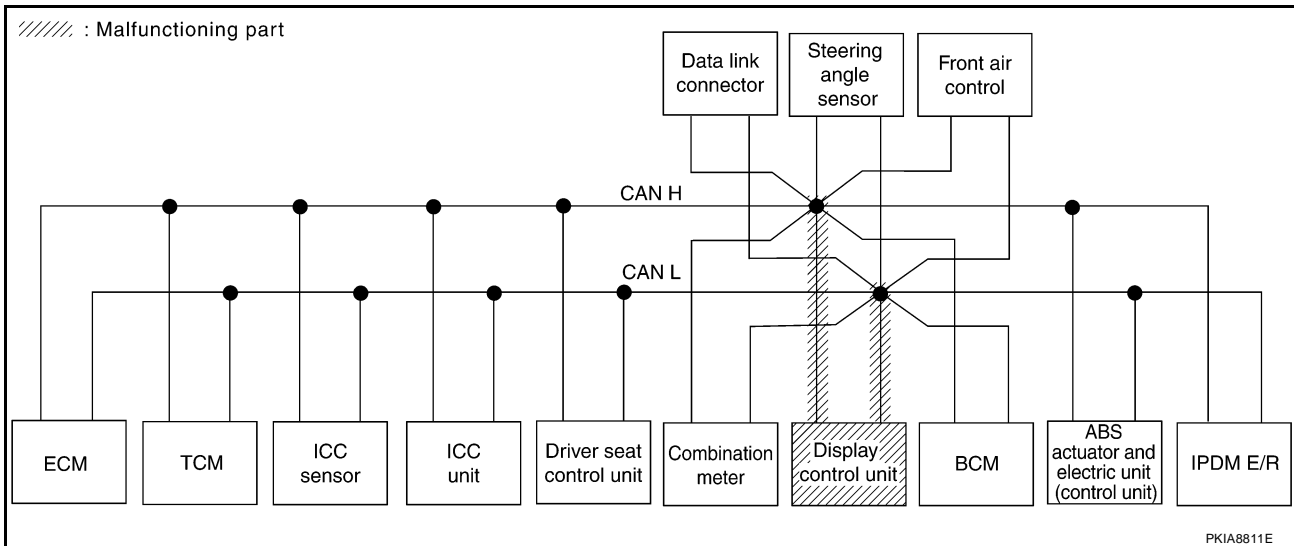

PKIA8811E

CAN SYSTEM (TYPE 2)


[CAN]

Case 13

Check BCM circuit. Refer to [LAN-85, "BCM Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	UNKWN	UNKWN	
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—	
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	UNKWN	—	
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	UNKWN	
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	UNKWN	—	
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	

SKIB3468E

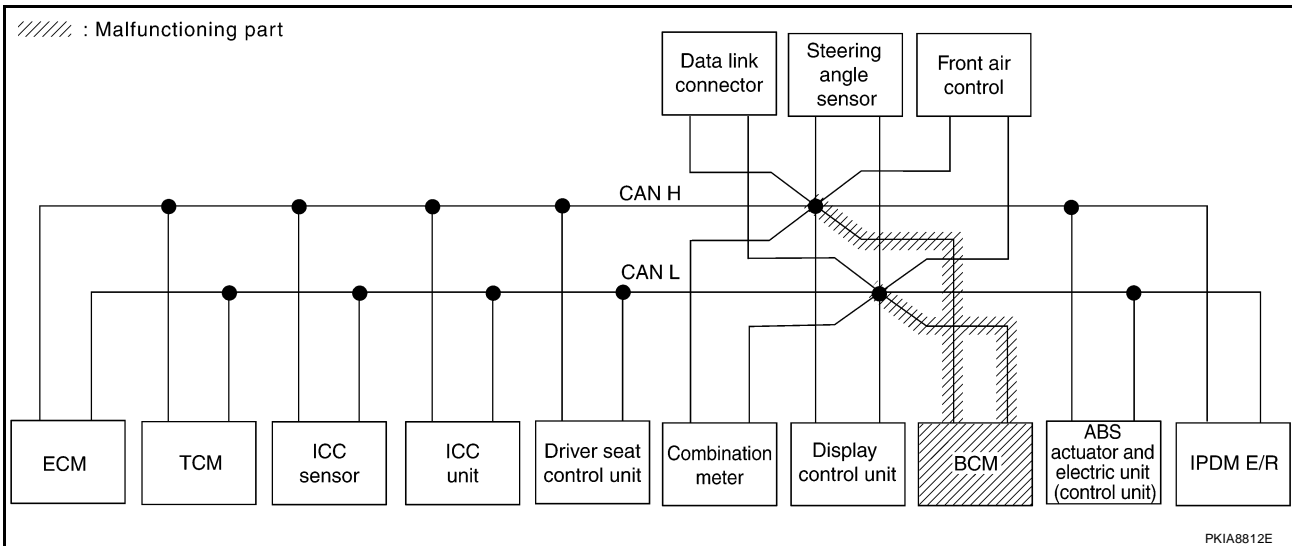

CAN SYSTEM (TYPE 2)


[CAN]

Case 14

Check data link connector circuit. Refer to [LAN-86, "Data Link Connector Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—

SKIB3469E

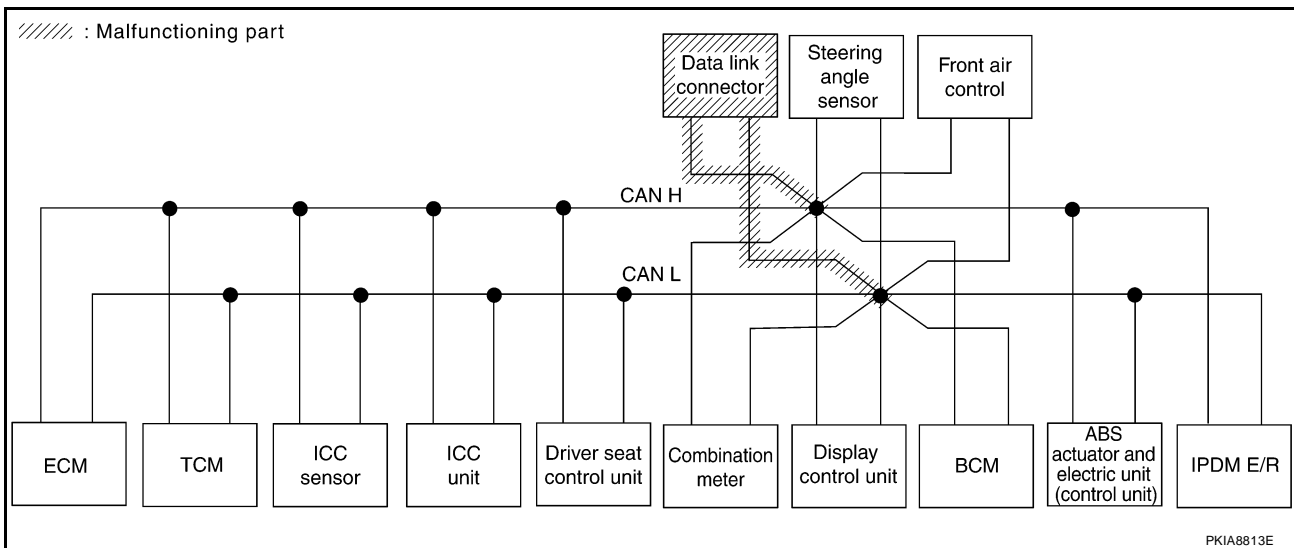

PKIA8813E

CAN SYSTEM (TYPE 2)


[CAN]

Case 15

Check steering angle sensor circuit. Refer to [LAN-86. "Steering Angle Sensor Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—

SKIB3470E

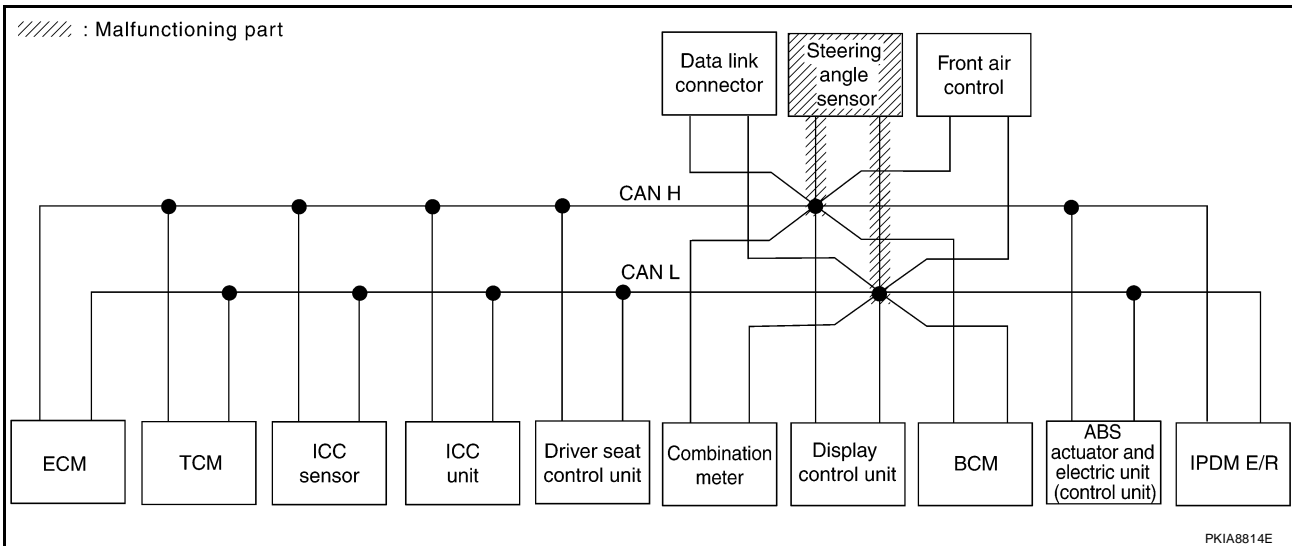

CAN SYSTEM (TYPE 2)


[CAN]

Case 16

Check front air control circuit. Refer to [LAN-87, "Front Air Control Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—

SKIB3471E

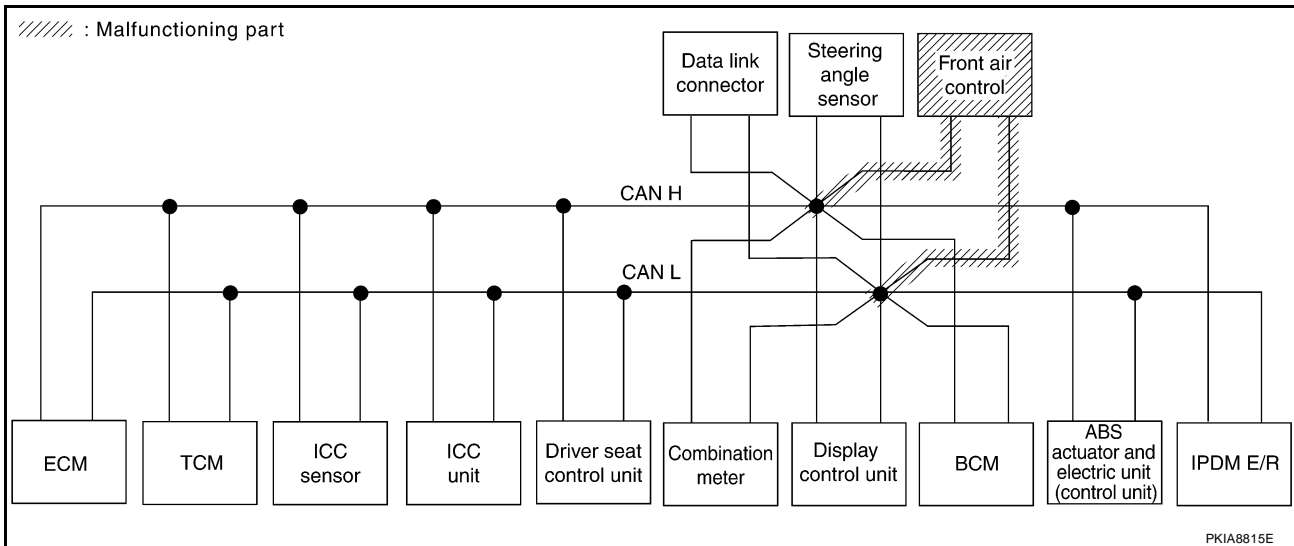


PKIA8815E

Case 17

Check ABS actuator and electric unit (control unit) circuit. Refer to [LAN-87, "ABS Actuator and Electric Unit \(Control Unit\) Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—

SKIB3472E

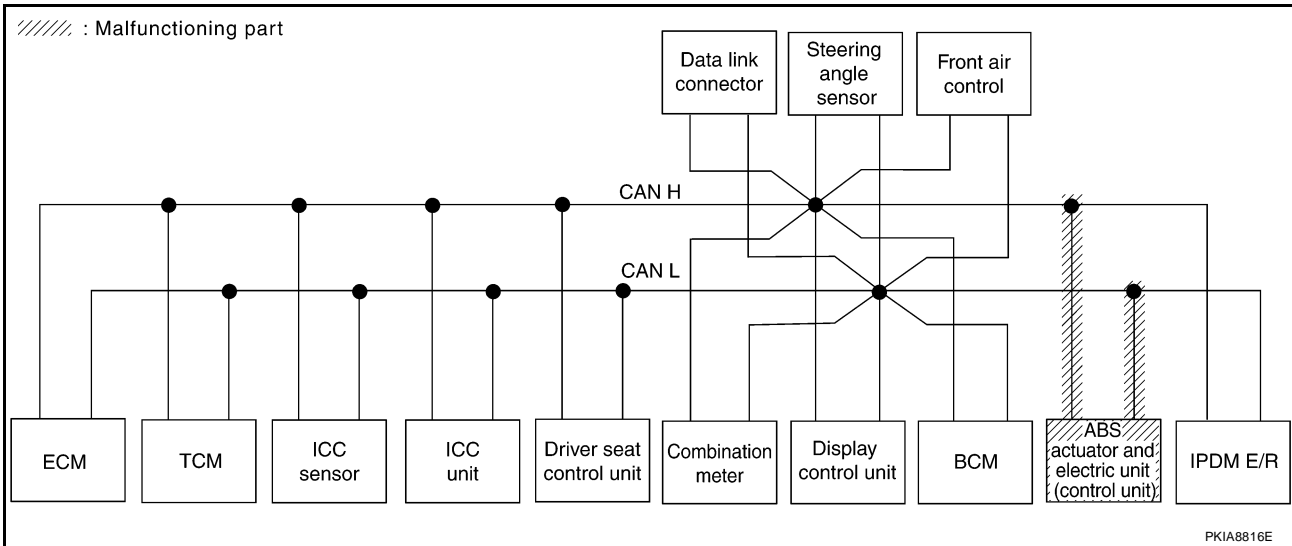

CAN SYSTEM (TYPE 2)


[CAN]

Case 18

Check IPDM E/R circuit. Refer to [LAN-88, "IPDM E/R Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										IPDM E/R
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN ✓
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	UNKWN ✓
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—

SKIB3473E

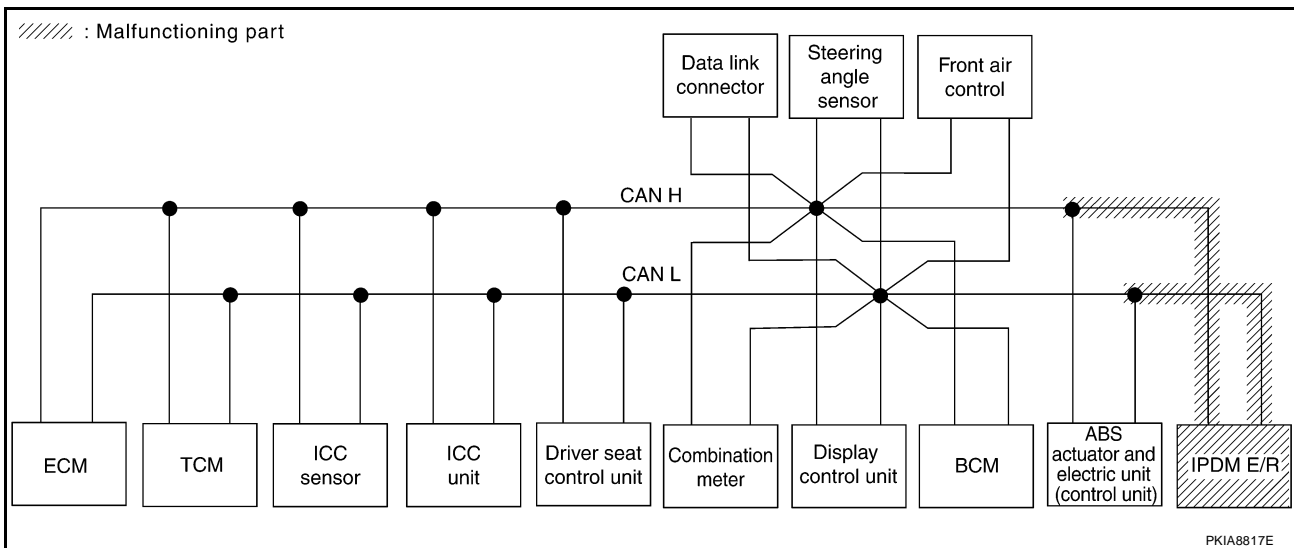

PKIA8817E

CAN SYSTEM (TYPE 2)

[CAN]

Case 19

Check CAN communication circuit. Refer to [LAN-88, "CAN Communication Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										IPDM E/R
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	
ENGINE	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN
AUTO DRIVE POS.	No indication	NG	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN
ABS	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN
IPDM E/R	No indication	—	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN

SKIB3474E

Case 20

Check IPDM E/R ignition relay circuit continuously sticks "OFF". Refer to [LAN-89, "IPDM E/R Ignition Relay Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										IPDM E/R
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	
ENGINE	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN
AUTO DRIVE POS.	No indication	NG	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN
ABS	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN
IPDM E/R	No indication	—	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN	UNKWN

SKIB3475E

Case 21

Check IPDM E/R ignition relay circuit continuously sticks "ON". Refer to [LAN-89, "IPDM E/R Ignition Relay Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKW	—	UNKW	—	UNKW	UNKW	—	UNKW	—	—	UNKW	UNKW
A/T	—	NG	UNKW	✓	—	—	✓	✓	—	—	—	—	UNKW	—
ICC	—	NG	UNKW	UNKW	UNKW	UNKW	—	—	—	UNKW	—	—	UNKW	—
AUTO DRIVE POS.	No indication	NG	UNKW	—	UNKW	—	—	UNKW	—	UNKW	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 7
BCM	No indication	NG	UNKW	UNKW	—	—	—	UNKW	—	—	—	—	—	UNKW
HVAC	No indication	—	UNKW	UNKW	—	—	—	—	UNKW	UNKW	—	—	UNKW	—
ABS	—	NG	UNKW	✓	UNKW	—	—	—	—	—	✓	—	—	—
IPDM E/R	No indication	—	UNKW	UNKW	—	—	—	—	—	UNKW	—	—	—	—

SKIB3476E

Circuit Check Between TCM and ICC Sensor

UKS001N8

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector F33
 - Harness connector E19

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector and harness connector F33.
2. Check continuity between A/T assembly harness connector F9 terminals 3 (L), 8 (P) and harness connector F33 terminals 12 (L), 11 (P).


3 (L) - 12 (L) : Continuity should exist.

8 (P) - 11 (P) : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

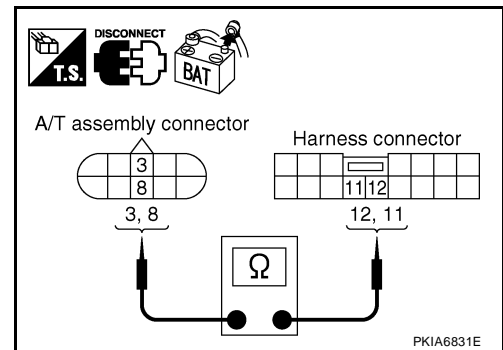


3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ICC sensor connector.
2. Check continuity between harness connector E19 terminals 12 (L), 11 (P) and ICC sensor connector E42 terminals 2 (L), 3 (P).

12 (L) - 2 (L) : Continuity should exist.
11 (P) - 3 (P) : Continuity should exist.

OK or NG

- OK >> Connect all connectors and diagnose again. Refer to [LAN-55, "Work Flow"](#) .
 NG >> Repair harness.

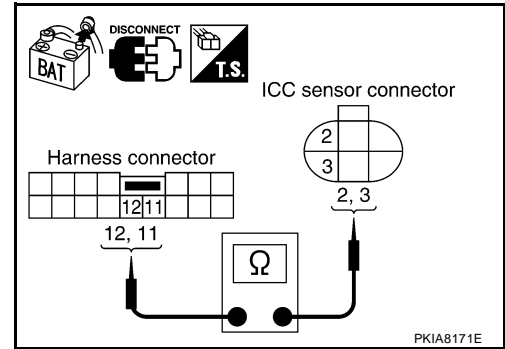

Circuit Check Between ICC Sensor and ICC Unit

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E34
 - Harness connector B40

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ICC sensor connector and harness connector E34.
2. Check continuity between ICC sensor connector E42 terminals 2 (L), 3 (P) and harness connector E34 terminals 24 (L), 23 (P).

2 (L) - 24 (L) : Continuity should exist.
3 (P) - 23 (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

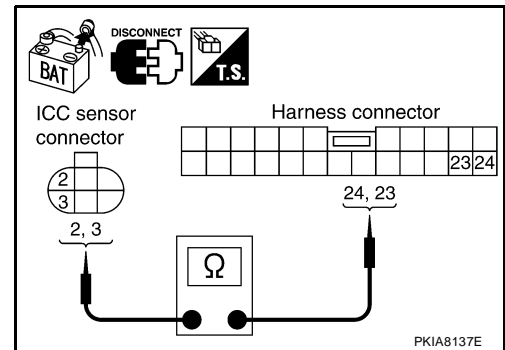


3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ICC unit connector.
2. Check continuity between harness connector B40 terminals 24 (L), 23 (P) and ICC unit connector B13 terminals 14 (L), 5 (P).

24 (L) - 14 (L) : Continuity should exist.
23 (P) - 5 (P) : Continuity should exist.

OK or NG

- OK >> Connect all connectors and diagnose again. Refer to [LAN-55, "Work Flow"](#) .
 NG >> Repair harness.

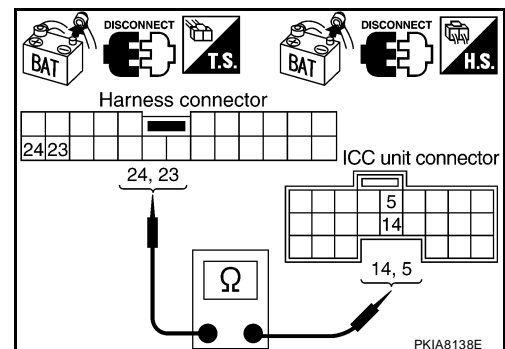

Circuit Check Between ICC Unit and Driver Seat Control Unit

1. CHECK CONNECTOR


1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect ICC unit connector and driver seat control unit connector.
4. Check continuity between ICC unit connector B13 terminals 14 (L), 5 (P) and driver seat control unit connector P2 terminals 3 (L), 19 (P).

14 (L) - 3 (L) : Continuity should exist.

5 (P) - 19 (P) : Continuity should exist.

OK or NG

- OK >> Connect all connectors and diagnose again. Refer to [LAN-55, "Work Flow"](#).
- NG >> Repair harness.

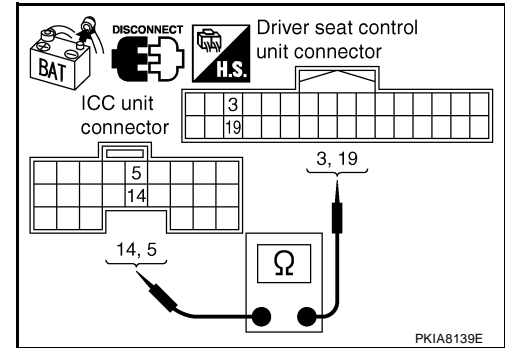

Circuit Check Between Driver Seat Control Unit and Data Link Connector

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B69
 - Harness connector M40

OK or NG

- OK >> GO TO 2.
- NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect driver seat control unit connector and harness connector B69.
2. Check continuity between driver seat control unit harness connector P2 terminals 3 (L), 19 (P) and harness connector B69 terminals 51J (L), 52J (P).

3 (L) - 51J (L) : Continuity should exist.

19 (P) - 52J (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness.

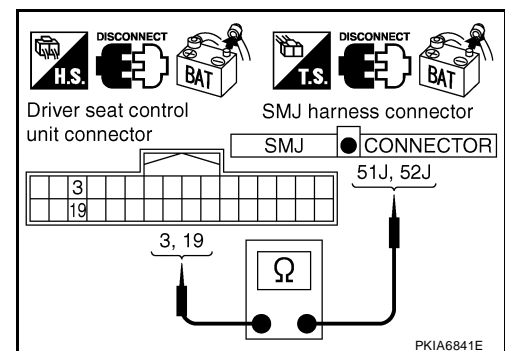

3. CHECK HARNESS FOR OPEN CIRCUIT


Check continuity between harness connector M40 terminals 51J (L), 52J (P) and data link connector M22 terminals 6 (L), 14 (P).

51J (L) - 6 (L) : Continuity should exist.

52J (P) - 14 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-55, "Work Flow"](#).
- NG >> Repair harness.

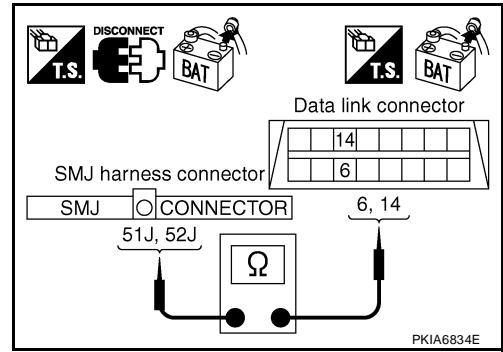

Circuit Check Between Data Link Connector and IPDM E/R

UKS001NA

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M31
 - Harness connector E152

OK or NG

- OK >> GO TO 2.
- NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect harness connector M31.
2. Check continuity between data link connector M22 terminals 6 (L), 14 (P) and harness connector M31 terminals 31G (L), 42G (P).

6 (L) - 31G (L) : Continuity should exist.

14 (P) - 42G (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness.

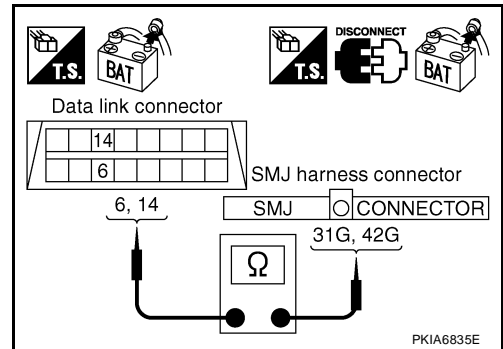

3. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect IPDM E/R connector.
2. Check continuity between harness connector E152 terminals 31G (L), 42G (P) and IPDM E/R harness connector E122 terminals 39 (L), 40 (P).

31G (L) - 39 (L) : Continuity should exist.

42G (P) - 40 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-55, "Work Flow"](#).
- NG >> Repair harness.

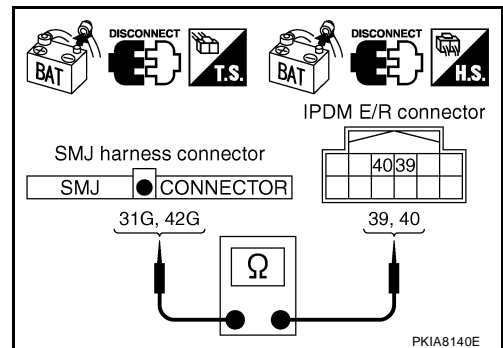

ECM Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (control module side and harness side).
 - ECM connector
 - Harness connector E19
 - Harness connector F33

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ECM connector.
2. Check resistance between ECM harness connector E16 terminals 94 (L) and 86 (P).

94 (L) - 86 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace ECM.
 NG >> Repair harness between ECM and A/T assembly.

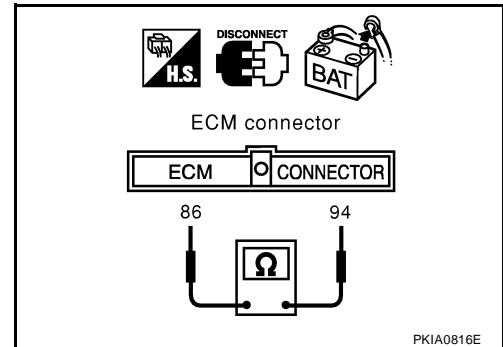**TCM Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of A/T assembly for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector.
2. Check resistance between A/T assembly harness connector F9 terminals 3 (L) and 8 (P).

3 (L) - 8 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace control valve with TCM.
 NG >> Repair harness between A/T assembly and harness connector F33.

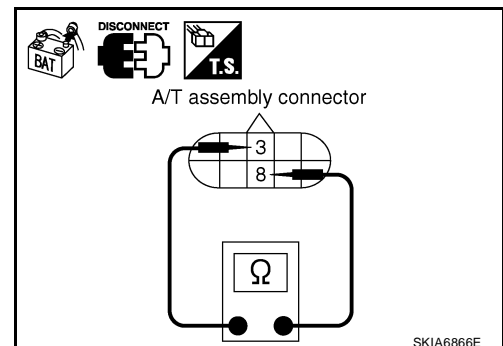

ICC Sensor Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ICC sensor for damage, bend and loose connection (sensor side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ICC sensor connector.
2. Check resistance between ICC sensor harness connector E42 terminals 2 (L) and 3 (P).

2 (L) - 3 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace ICC sensor.
 NG >> Repair harness between ICC sensor and harness connector E34.

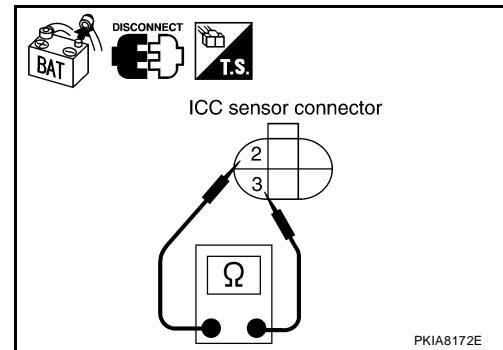**ICC Unit Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ICC unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ICC unit connector.
2. Check resistance between ICC unit harness connector B13 terminals 14 (L) and 5 (P).

14 (L) - 5 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace ICC unit.
 NG >> Repair harness between ICC unit and harness connector B69.

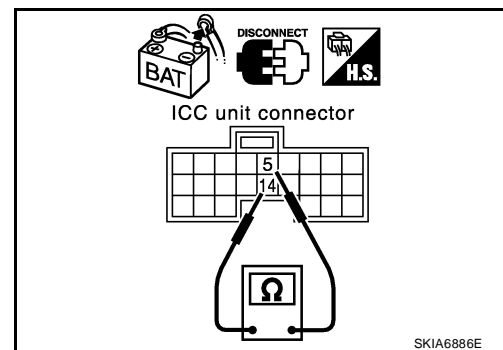

Driver Seat Control Unit Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (control unit side and harness side).
 - Driver seat control unit connector
 - Harness connector P1
 - Harness connector B37

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector.
2. Check resistance between driver seat control unit harness connector P2 terminals 3 (L) and 19 (P).

3 (L) - 19 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace driver seat control unit.
 NG >> Repair harness between driver seat control unit and harness connector B69.

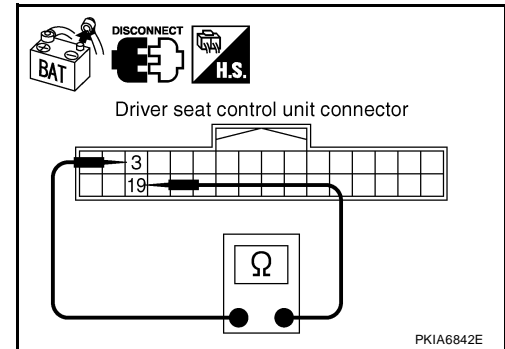

Combination Meter Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of combination meter for damage, bend and loose connection (meter side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect combination meter connector.
2. Check resistance between combination meter harness connector M24 terminals 11 (L) and 12 (P).

11 (L) - 12 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace combination meter.
 NG >> Repair harness between combination meter and data link connector.

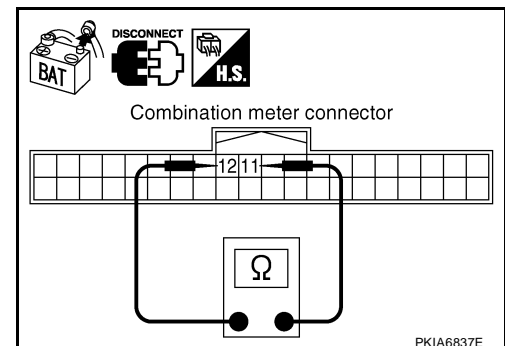

Display Control Unit Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of display control unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect display control unit connector.
2. Check resistance between display control unit harness connector M95 terminals 25 (L) and 26 (P).

25 (L) - 26 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace display control unit.
 NG >> Repair harness between display control unit and data link connector.

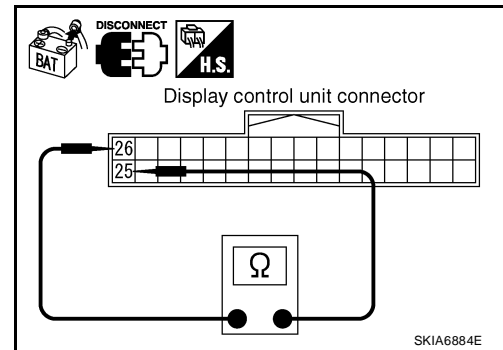**BCM Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of BCM for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect BCM connector.
2. Check resistance between BCM harness connector M18 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#) .
 NG >> Repair harness between BCM and data link connector.

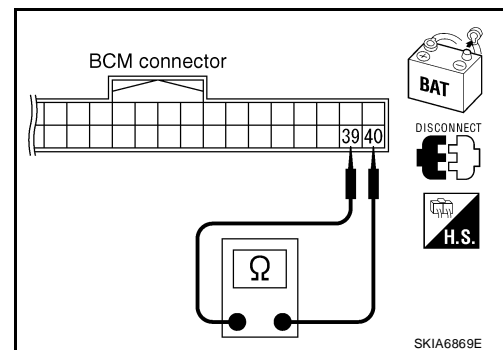

Data Link Connector Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of data link connector for damage, bend and loose connection (connector side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

Check resistance between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Diagnose again. Refer to [LAN-55, "Work Flow"](#) .
 NG >> Repair harness between data link connector and combination meter.

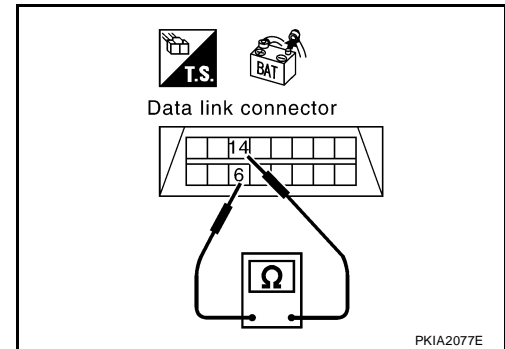**Steering Angle Sensor Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of steering angle sensor for damage, bend and loose connection (sensor side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect steering angle sensor connector.
2. Check resistance between steering angle sensor harness connector M47 terminals 3 (L) and 4 (P).

3 (L) - 4 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace steering angle sensor.
 NG >> Repair harness between steering angle sensor and data link connector.

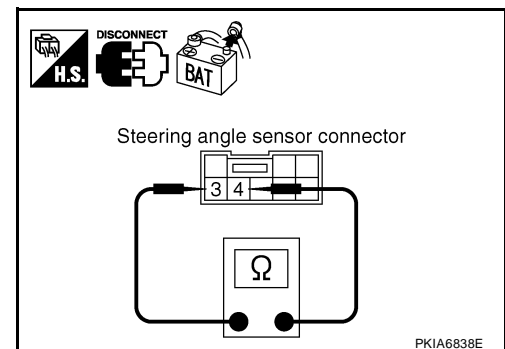

Front Air Control Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of front air control for damage, bend and loose connection (unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect front air control connector.
2. Check resistance between front air control harness connector M50 terminals 34 (L) and 35 (P).

34 (L) - 35 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace front air control.
 NG >> Repair harness between front air control and data link connector.

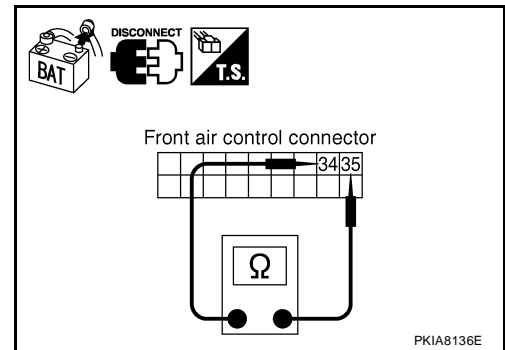**ABS Actuator and Electric Unit (Control Unit) Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ABS actuator and electric unit (control unit) for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check resistance between ABS actuator and electric unit (control unit) harness connector E125 terminals 11 (L) and 15 (P).

11 (L) - 15 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace ABS actuator and electric unit (control unit).
 NG >> Repair harness between ABS actuator and electric unit (control unit) and harness connector E152.

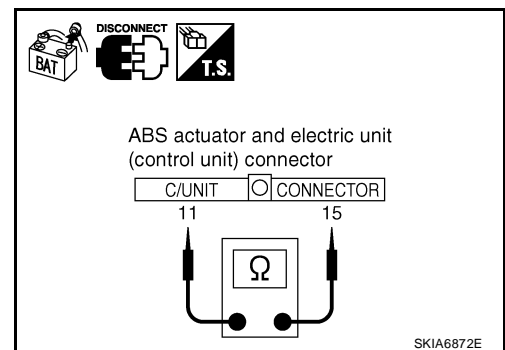

IPDM E/R Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of IPDM E/R for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check resistance between IPDM E/R harness connector E122 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness between IPDM E/R and harness connector E152.

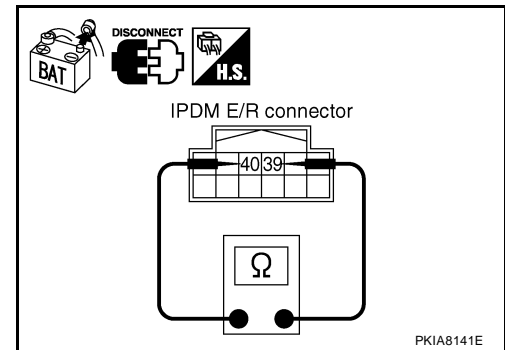**CAN Communication Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect the following module and control unit connectors and check terminals for deformation, disconnection, looseness or damage.
 - ECM
 - A/T assembly
 - ICC sensor
 - ICC unit
 - Driver seat control unit
 - Combination meter
 - Display control unit
 - BCM
 - Steering angle sensor
 - Front air control
 - ABS actuator and electric unit (control unit)
 - IPDM E/R

OK or NG

- OK >> GO TO 2.
 NG >> Repair or replace as necessary.


2. CHECK HARNESS FOR SHORT CIRCUIT

With all module and control unit connectors disconnected, check continuity between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Continuity should not exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness.

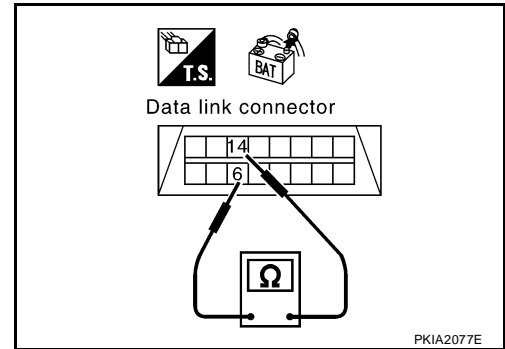

3. CHECK HARNESS FOR SHORT CIRCUIT


Check continuity between data link connector M22 terminals 6 (L), 14 (P) and ground.

6 (L) - Ground : Continuity should not exist.

14 (P) - Ground : Continuity should not exist.

OK or NG

- OK >> Check ECM and IPDM E/R. Refer to [LAN-89, "ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION"](#).
- NG >> Repair harness.

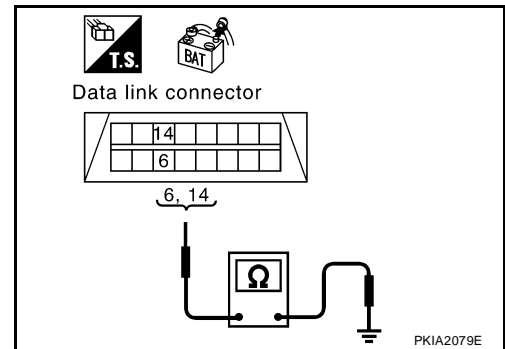

IPDM E/R Ignition Relay Circuit Check


Check the following. If no malfunction is found, replace the IPDM E/R.

- IPDM E/R power supply circuit. Refer to [PG-26, "IPDM E/R Power/Ground Circuit Inspection"](#).
- Ignition power supply circuit. Refer to [PG-13, "IGNITION POWER SUPPLY — IGNITION SW. IN ON AND/OR START"](#).

Component Inspection ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION

- Remove ECM and IPDM E/R from vehicle.
- Check resistance between ECM terminals 94 and 86.
- Check resistance between IPDM E/R terminals 39 and 40.

Unit	Terminal	Resistance value (Ω) (Approx.)
ECM	94 - 86	108 - 132
IPDM E/R	39 - 40	

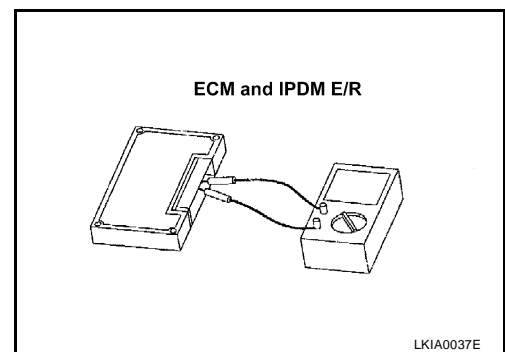

A
B
C
D
E
F
G
H
I
J

LAN

L
M

CAN SYSTEM (TYPE 3)

PF2:23710


System Description

UKS000QY

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Component Parts and Harness Connector Location

UKS000QZ

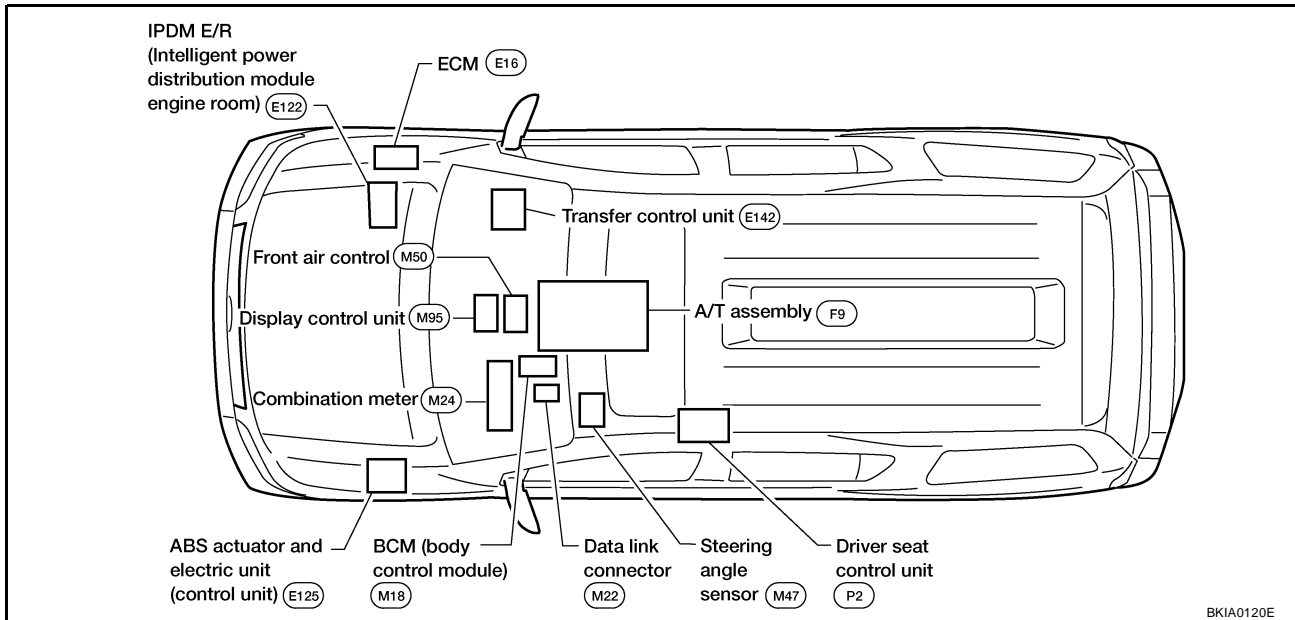


CAN SYSTEM (TYPE 3)

[CAN]

Schematic

UKS000R0

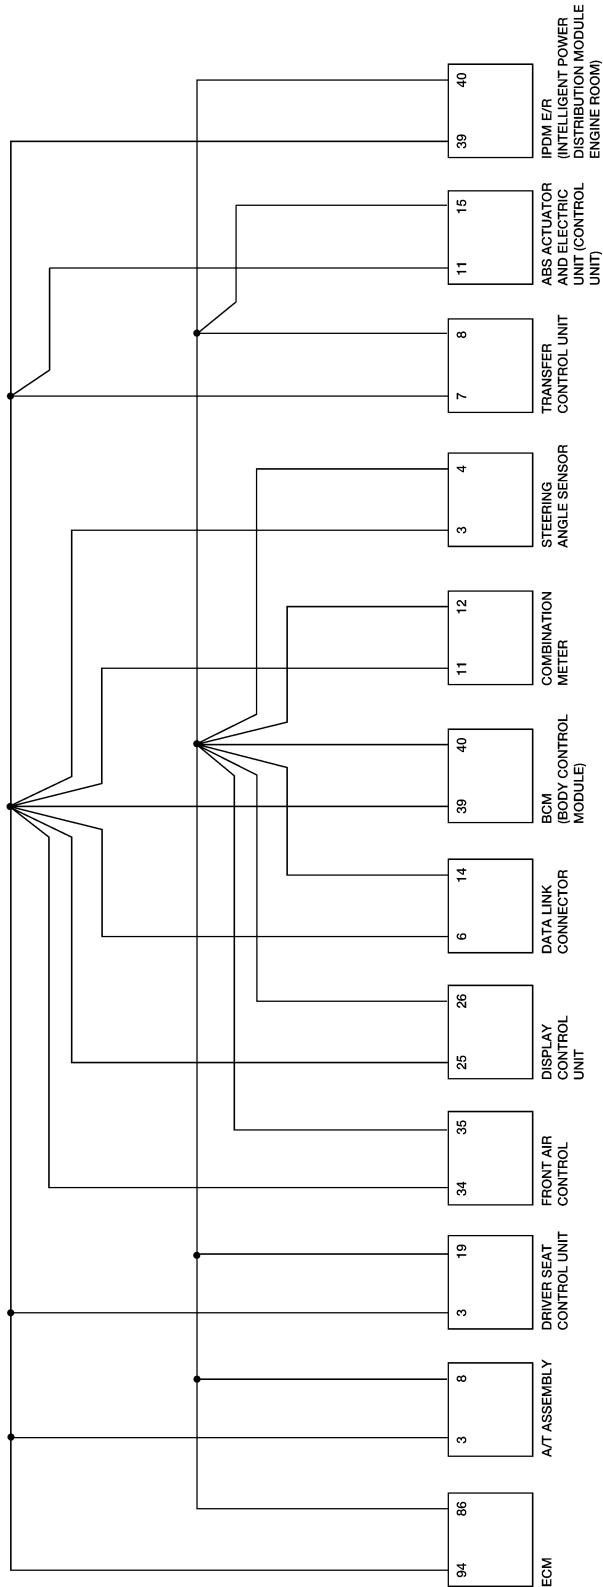

A
B
C
D
E
F
G
H
I
J
L
M

LAN

BKWA0001E

CAN SYSTEM (TYPE 3)


[CAN]

UKS000R1


Wiring Diagram - CAN -

LAN-CAN-07

▬ : DATA LINE

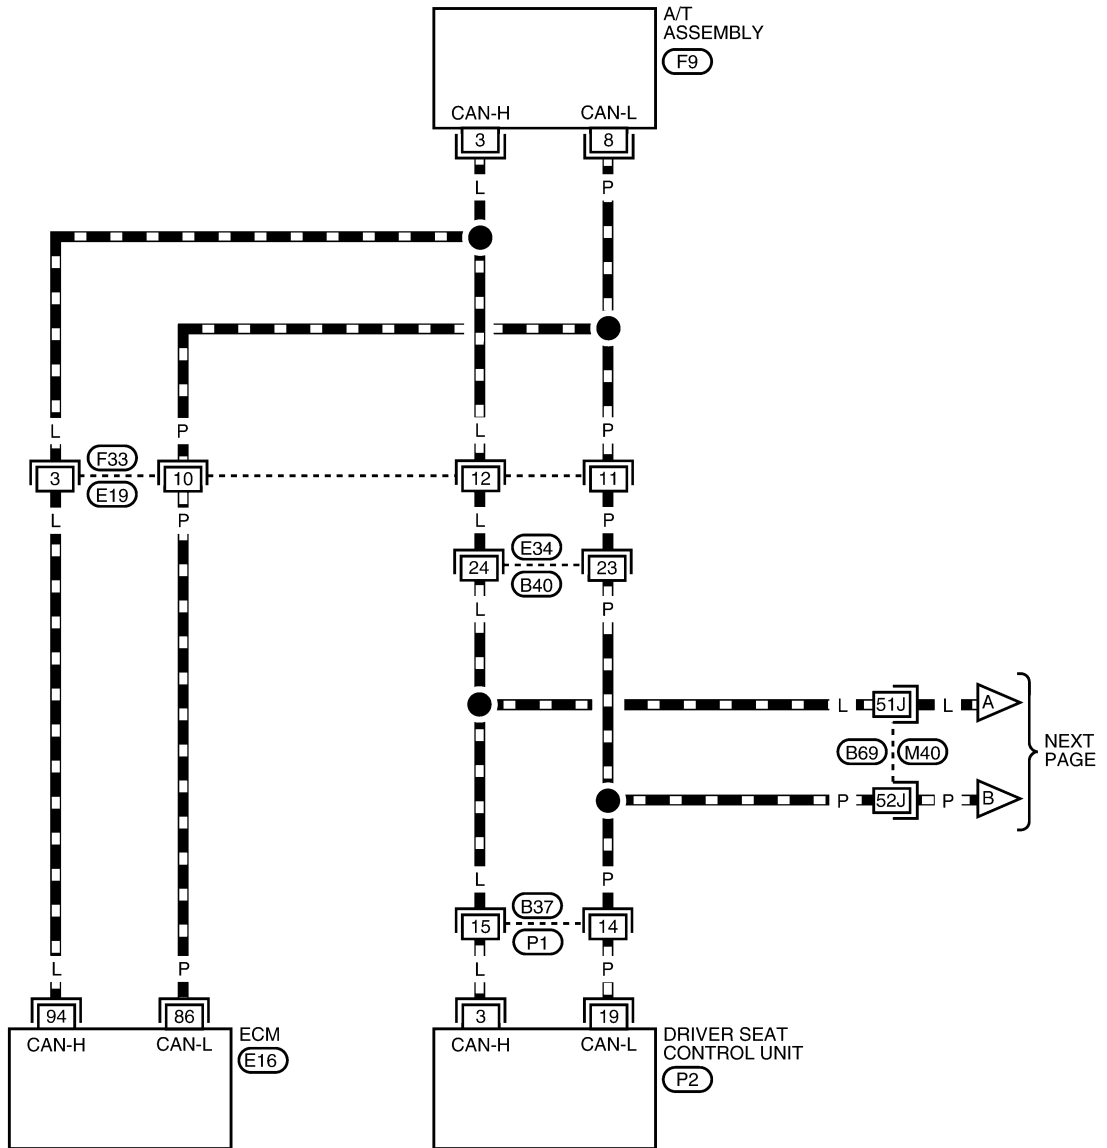

NEXT PAGE

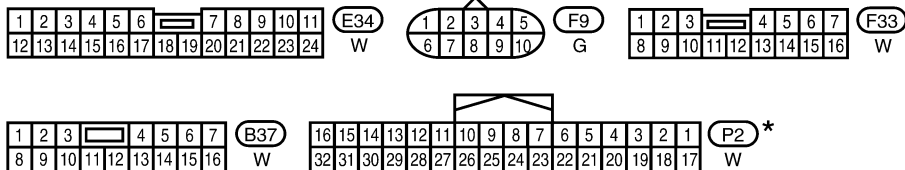

REFER TO THE FOLLOWING.
(M40) - SUPER MULTIPLE JUNCTION (SMJ)
(E16) - ELECTRICAL UNITS

* : THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT" OF PG SECTION.



BKWA0401E

CAN SYSTEM (TYPE 3)

[CAN]

LAN-CAN-08





— : DATA LINE

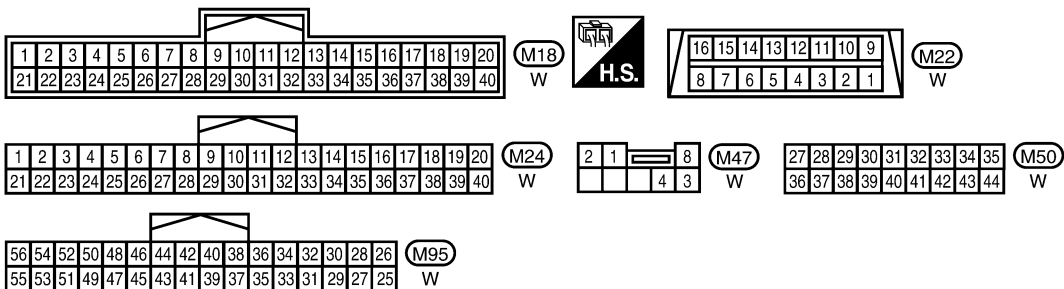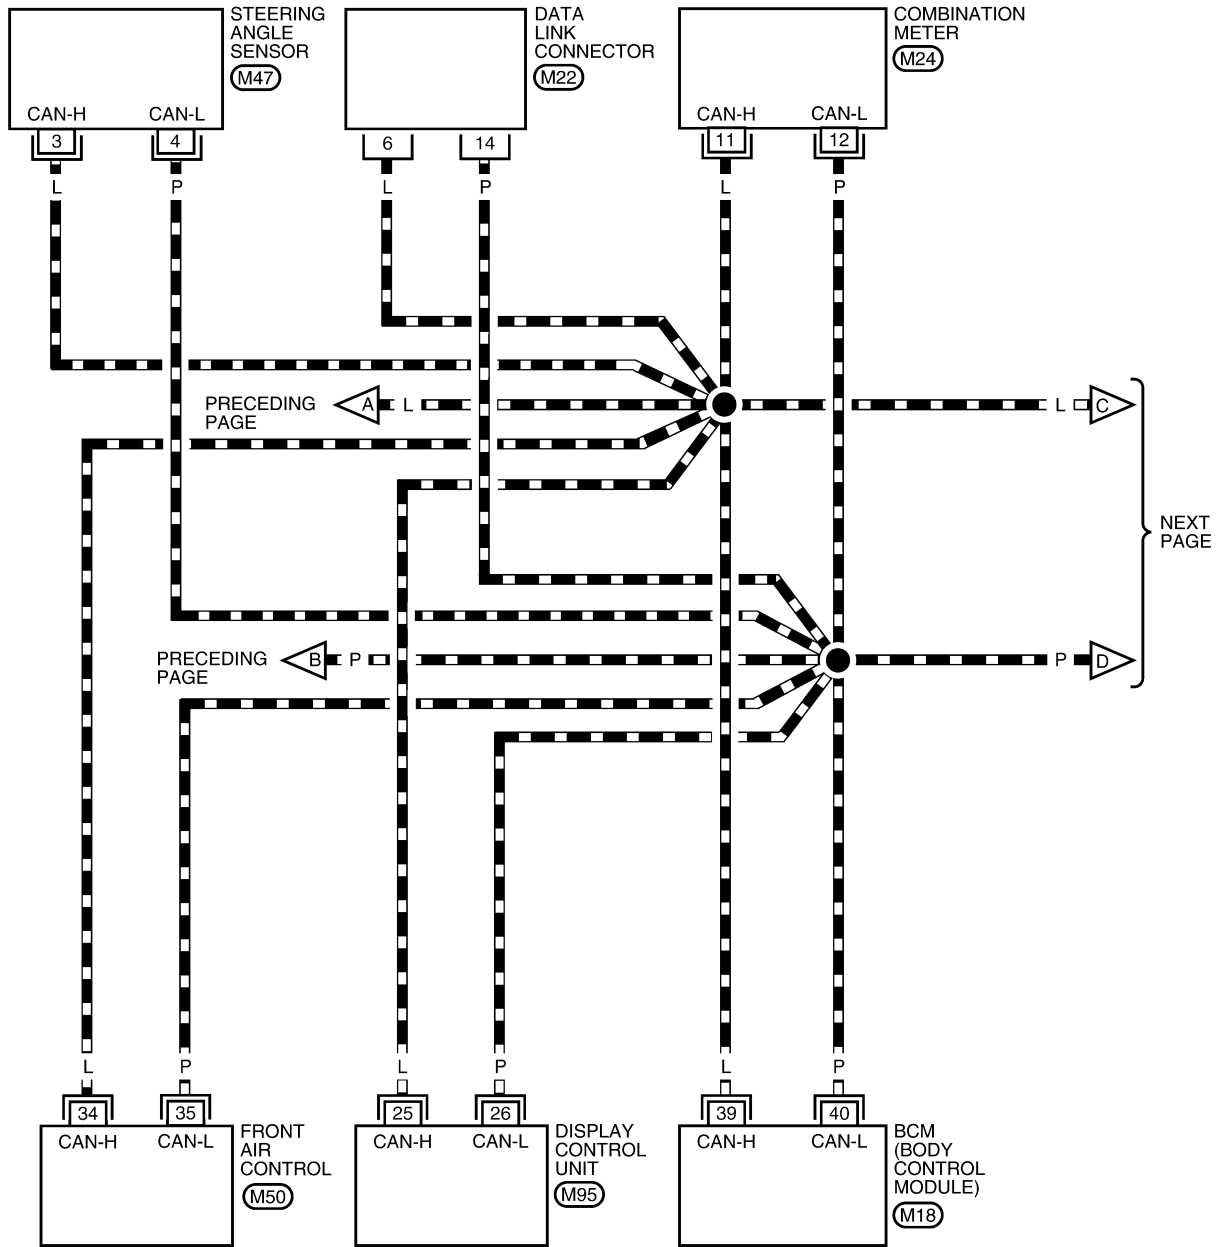

BKWA0402E

LAN-CAN-09

▬ : DATA LINE

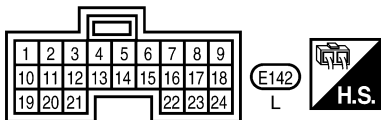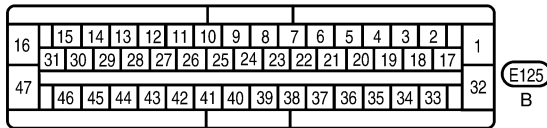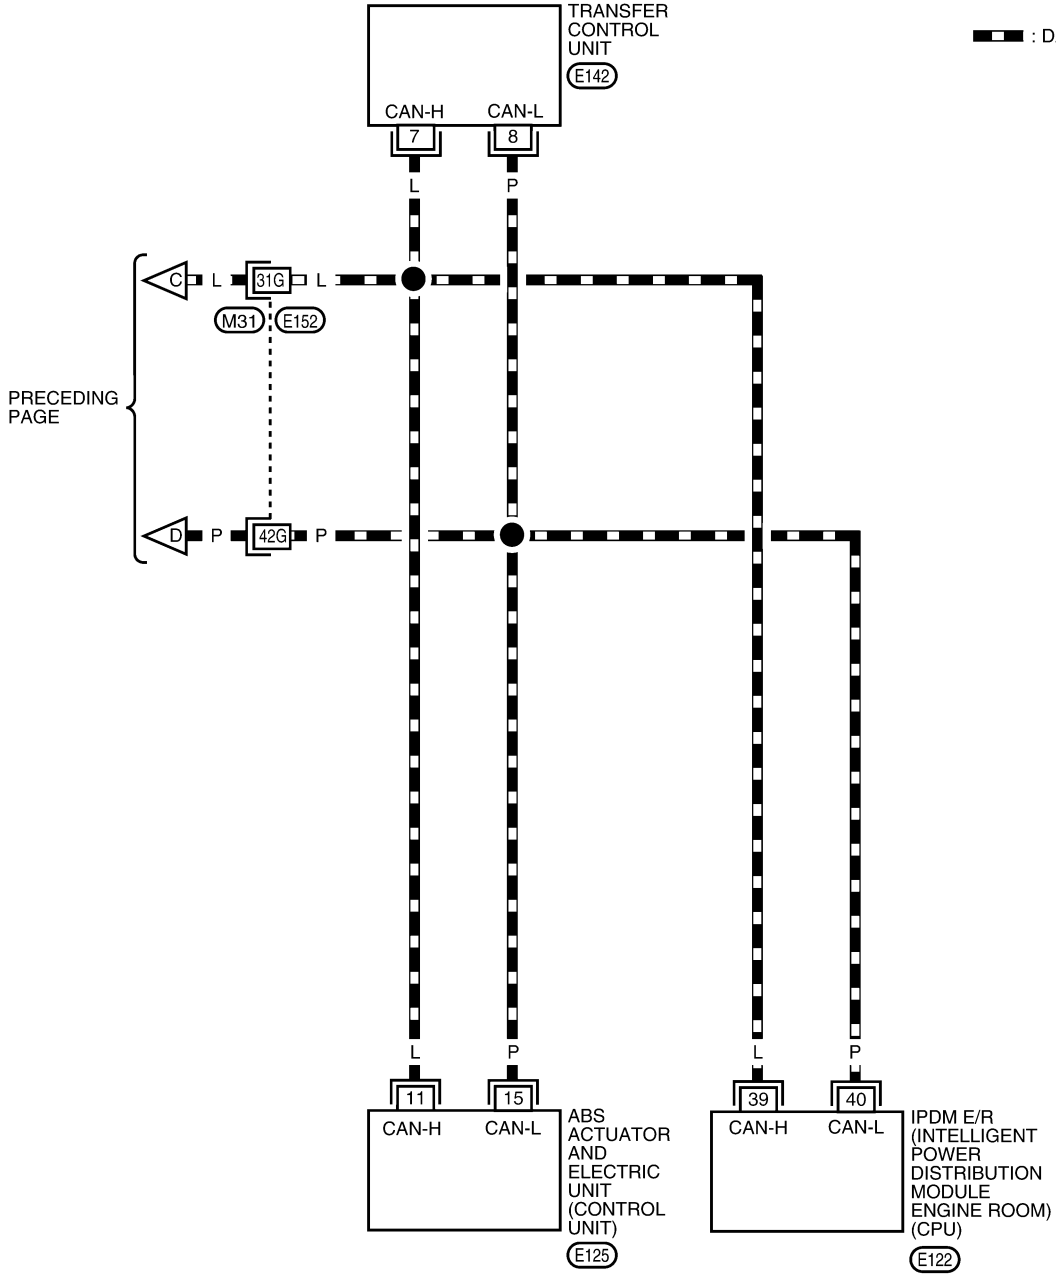

REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

BKWA0403E


CAN SYSTEM (TYPE 3)

[CAN]


UKS0019V

Work Flow


- When there are no indications of "AUTO DRIVE POS.", "BCM", "HVAC", "ALL MODE AWD/4WD" or "IPDM E/R" on "SELECT SYSTEM" display of CONSULT-II, print the "SELECT SYSTEM".

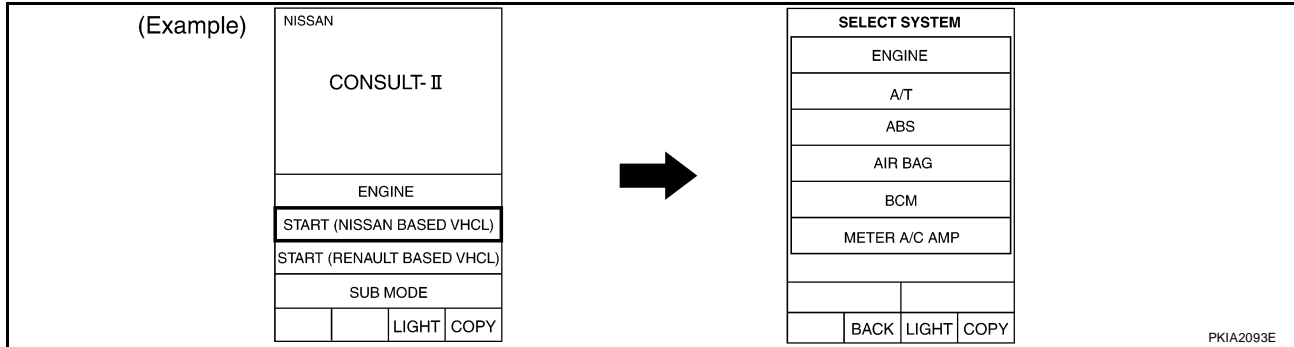

- Print all the data of "SELF-DIAG RESULTS" for "ENGINE", "A/T", "AUTO DRIVE POS.", "BCM", "HVAC", "ALL MODE AWD/4WD", "ABS" and "IPDM E/R" displayed on CONSULT-II.

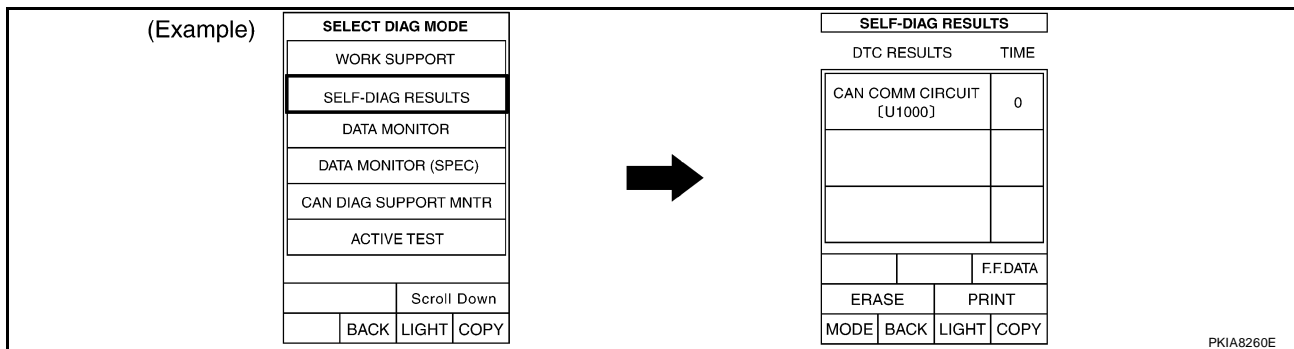


- Print all the data of "CAN DIAG SUPPORT MNTR" for "ENGINE", "A/T", "AUTO DRIVE POS.", "BCM", "HVAC", "ALL MODE AWD/4WD", "ABS" and "IPDM E/R" displayed on CONSULT-II.

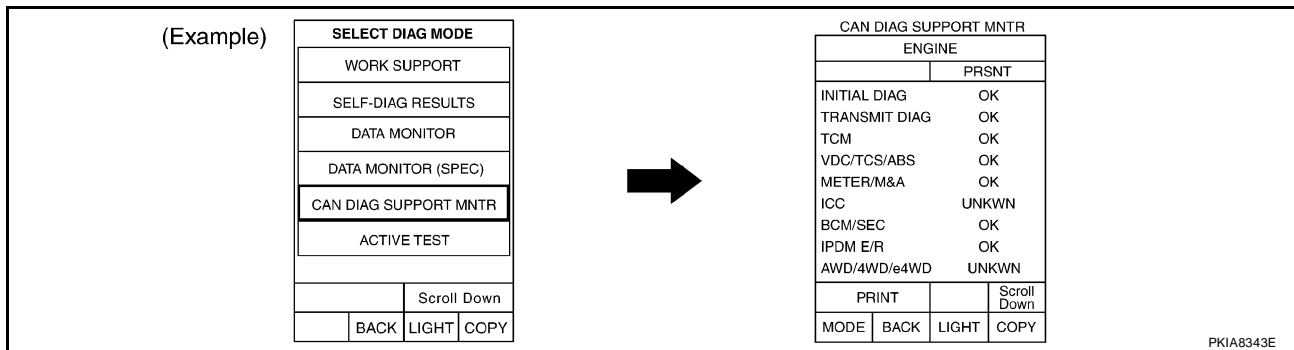

- Attach the printed sheet of "SELECT SYSTEM", "SELF-DIAG RESULTS" and "CAN DIAG SUPPORT MNTR" onto the check sheet. Refer to [LAN-97, "CHECK SHEET"](#).
- Based on the indications of "SELECT SYSTEM" and the results of "CAN DIAG SUPPORT MNTR", puts a check mark onto the items with "No indication", "NG" or "UNKWN" in the check sheet table. Refer to [LAN-97, "CHECK SHEET"](#).

CAUTION:

"ALL MODE AWD/4WD" puts a check mark on the check sheet when "Present" is "UNKWN" and "Past" is "0".

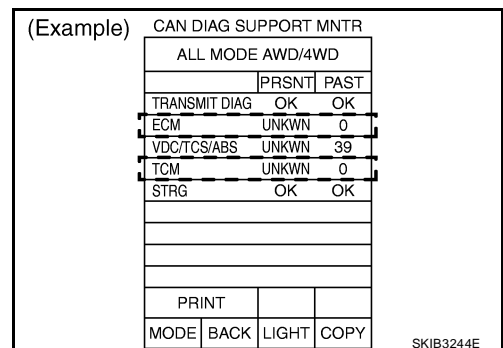

NOTE:

- If “NG” is displayed on “INITIAL DIAG (Initial diagnosis)” as “CAN DIAG SUPPORT MNTR” for the diagnosed control unit, replace the control unit.
- The “CAN DIAG SUPPORT MNTR” items, which are not in check sheet table, are not related to diagnostic procedure on service manual.
So it is not necessary to check the status of the “CAN DIAG SUPPORT MNTR” items not in check sheet table.

6. Check CAN communication line of the navigation system. Refer to [AV-131, "CAN Communication Line Check"](#) .
7. Attach the CAN DIAG SUPPORT MONITOR check sheet onto the check sheet. Refer to [LAN-97, "CHECK SHEET"](#) .
8. Mark the “NG” or “UNKWN” item of the check sheet table with “v” from the result of CAN DIAG SUPPORT MONITOR check sheet. Refer to [LAN-97, "CHECK SHEET"](#) .

NOTE:

If “NG” is displayed on “CAN COMM” as “CAN DIAG SUPPORT MONITOR” for the diagnosed control unit, replace the control unit. Refer to [AV-131, "CAN Communication Line Check"](#) .

9. According to the check sheet results (example), start inspection. Refer to [LAN-99, "CHECK SHEET RESULTS \(EXAMPLE\)"](#) .

CAN SYSTEM (TYPE 3)

[CAN]

CHECK SHEET

NOTE:

If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" or "CAN COMM" for the diagnosed control unit, replace the control unit.

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	-	NG	UNKWN	-	UNKWN	UNKWN	-	UNKWN	-	-	UNKWN	UNKWN	UNKWN
A/T	-	NG	UNKWN	UNKWN	-	UNKWN	-	-	-	-	UNKWN	UNKWN	-
AUTO DRIVE POS.	No indication	NG	UNKWN	-	UNKWN	UNKWN	-	UNKWN	-	-	-	-	-
Display control unit	-	CAN COMM	CAN CIRC 1	CAN CIRC 3	-	CAN CIRC 5	-	CAN CIRC 2	-	CAN CIRC 4	-	-	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	-	UNKWN	-	-	-	-	-	-	UNKWN
HVAC	No indication	-	UNKWN	UNKWN	-	-	UNKWN	UNKWN	-	-	-	UNKWN	-
ALL MODE AWD/4WD	No indication	-	UNKWN	UNKWN	UNKWN	-	-	-	UNKWN	-	-	UNKWN	-
ABS	-	NG	UNKWN	UNKWN	UNKWN	-	-	-	UNKWN	-	UNKWN	-	-
IPDM E/R	No indication	-	UNKWN	UNKWN	-	-	-	UNKWN	-	-	-	-	-

Symptoms :

Attach copy of
SELECT SYSTEM

Attach copy of
SELECT SYSTEM

Attach copy of
display control unit
CAN DIAG SUPPORT MONITOR check sheet

SKIB3364E

A
B
C
D
E
F
G
H
I
J
L
M

LAN

CAN SYSTEM (TYPE 3)

[CAN]

Attach copy of
ENGINE
SELF-DIAG RESULTS

Attach copy of
A/T
SELF-DIAG RESULTS

Attach copy of
AUTO DRIVE POS.
SELF-DIAG RESULTS

Attach copy of
BCM
SELF-DIAG RESULTS

Attach copy of
HVAC
SELF-DIAG RESULTS

Attach copy of
ALL MODE AWD/4WD
SELF-DIAG RESULTS

Attach copy of
ABS
SELF-DIAG RESULTS

Attach copy of
IPDM E/R
SELF-DIAG RESULTS

Attach copy of
ENGINE
CAN DIAG SUPPORT
MNTR

Attach copy of
A/T
CAN DIAG SUPPORT
MNTR

Attach copy of
AUTO DRIVE POS.
CAN DIAG SUPPORT
MNTR

Attach copy of
BCM
CAN DIAG SUPPORT
MNTR

Attach copy of
HVAC
CAN DIAG SUPPORT
MNTR

Attach copy of
ALL MODE AWD/4WD
CAN DIAG SUPPORT
MNTR

Attach copy of
ABS
CAN DIAG SUPPORT
MNTR

Attach copy of
IPDM E/R
CAN DIAG SUPPORT
MNTR

PKIB6773E

CHECK SHEET RESULTS (EXAMPLE)

NOTE:


If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" or "CAN COMM" for the diagnosed control unit, replace the control unit.

Case 1

Check harness between TCM and driver seat control unit. Refer to [LAN-115, "Circuit Check Between TCM and Driver Seat Control Unit"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R	
ENGINE	—	NG	UNKWN	—	UNKWN	✓	—	✓	—	—	—	✓	✓	✓
A/T	—	NG	UNKWN	UNKWN	—	✓	—	—	—	—	—	✓	✓	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	✓	UNKWN	—	UNKWN	—	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	✓	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	✓	—	UNKWN	—	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	✓	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—
ALL MODE AWD/4WD	No indication	—	UNKWN	✓	✓	—	—	—	UNKWN	—	—	UNKWN	—	—
ABS	—	NG	UNKWN	✓	✓	—	—	—	UNKWN	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	✓	—	—	—	UNKWN	—	—	—	—	—	—

SKIB3365E

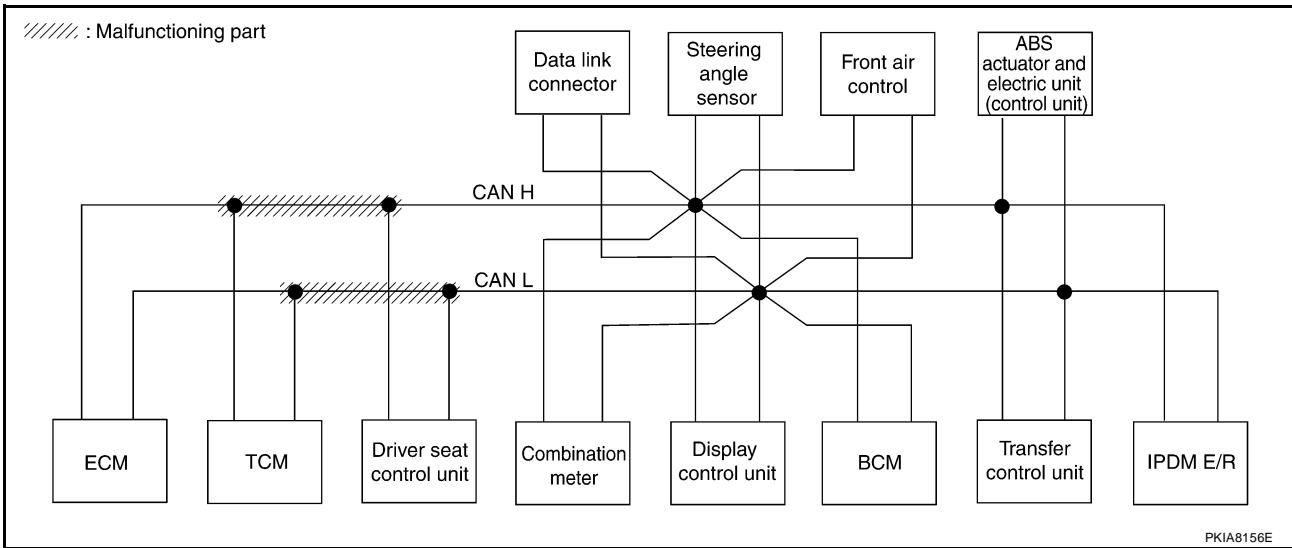

CAN SYSTEM (TYPE 3)


[CAN]

Case 2

Check harness between driver seat control unit and data link connector. Refer to [LAN-116, "Circuit Check Between Driver Seat Control Unit and Data Link Connector"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN ✓	—	UNKWN ✓	—	—	UNKWN ✓	UNKWN ✓	UNKWN ✓
A/T	—	NG	UNKWN	UNKWN	—	UNKWN ✓	—	—	—	—	UNKWN ✓	UNKWN ✓	—
AUTO DRIVE POS.	No indication ✓	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN ✓	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN ✓	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN ✓	UNKWN ✓	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN ✓	UNKWN ✓	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN ✓	—	—	—	UNKWN	—	—	—	—	—

SKIB3366E

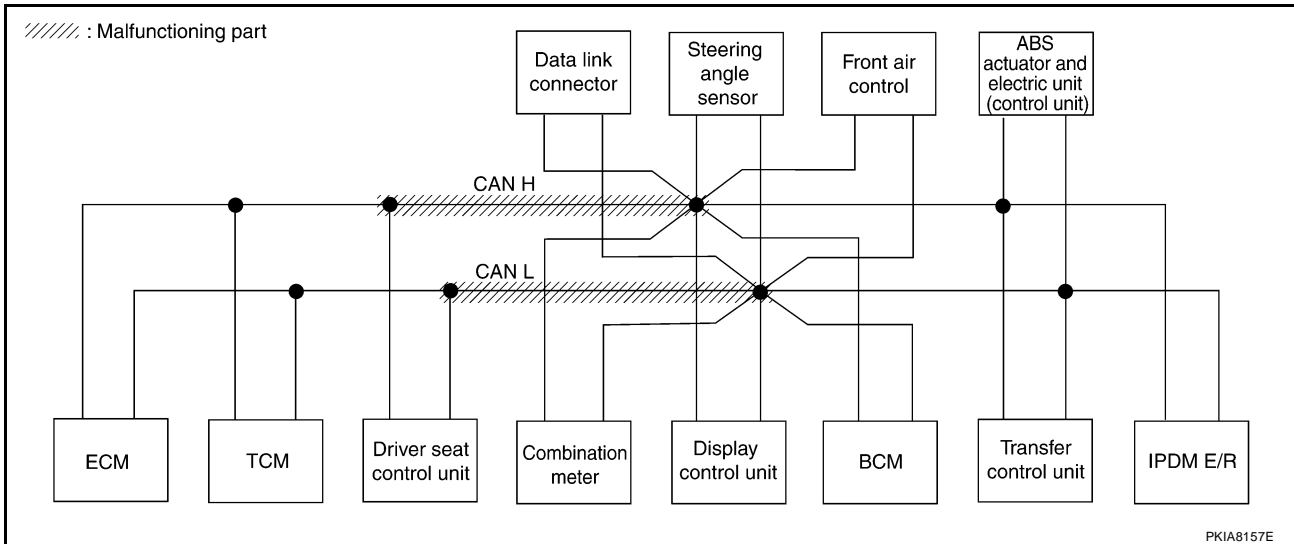

PKIA8157E

CAN SYSTEM (TYPE 3)


[CAN]

Case 3

Check harness between data link connector and IPDM E/R. Refer to [LAN-117, "Circuit Check Between Data Link Connector and IPDM E/R"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R	
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	UNKWN	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—

SKIB3367E

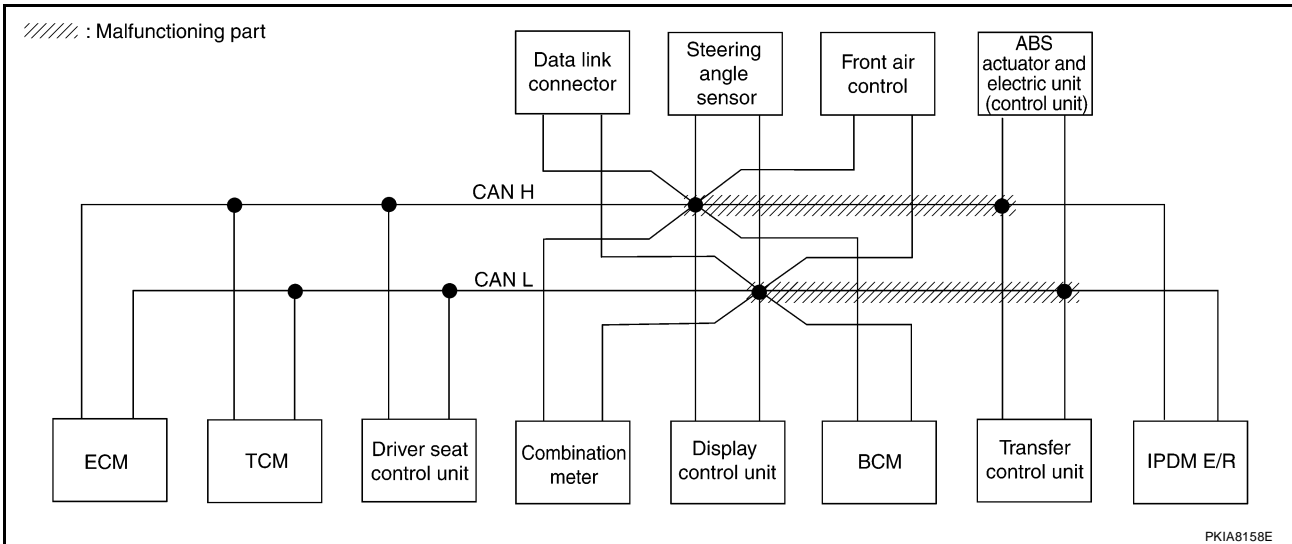

CAN SYSTEM (TYPE 3)


[CAN]

Case 4

Check ECM circuit. Refer to [LAN-118, "ECM Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UN KN W N	—	UN KN W N	UN KN W N	—	UN KN W N	—	—	UN KN W N	UN KN W N	UN KN W N
A/T	—	NG	UN KN W N	UN KN W N	—	UN KN W N	—	—	—	—	UN KN W N	UN KN W N	—
AUTO DRIVE POS.	No indication	NG	UN KN W N	—	UN KN W N	UN KN W N	—	UN KN W N	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UN KN W N	UN KN W N	—	UN KN W N	—	—	—	—	—	—	UN KN W N
HVAC	No indication	—	UN KN W N	UN KN W N	—	—	UN KN W N	UN KN W N	—	—	—	UN KN W N	—
ALL MODE AWD/4WD	No indication	—	UN KN W N	UN KN W N	UN KN W N	—	—	—	UN KN W N	—	—	UN KN W N	—
ABS	—	NG	UN KN W N	UN KN W N	UN KN W N	—	—	—	UN KN W N	—	UN KN W N	—	—
IPDM E/R	No indication	—	UN KN W N	UN KN W N	—	—	—	UN KN W N	—	—	—	—	—

SKIB3368E

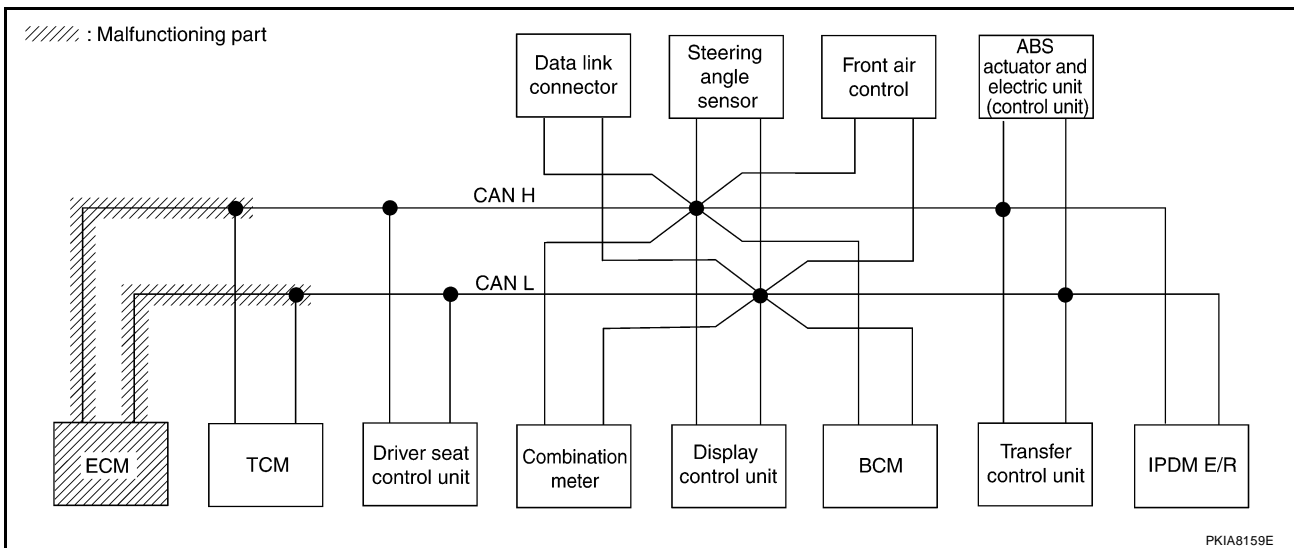

PKIA8159E

CAN SYSTEM (TYPE 3)


[CAN]

Case 5

Check TCM circuit. Refer to [LAN-118, "TCM Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWVN	—	UNKWVN	UNKWVN	—	UNKWVN	—	—	UNKWVN	UNKWVN	UNKWVN
A/T	—	NG	UNKWVN	UNKWVN	—	UNKWVN	—	—	—	—	UNKWVN	UNKWVN	—
AUTO DRIVE POS.	No indication	NG	UNKWVN	—	UNKWVN	UNKWVN	—	UNKWVN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWVN	UNKWVN	—	UNKWVN	—	—	—	—	—	—	UNKWVN
HVAC	No indication	—	UNKWVN	UNKWVN	—	—	UNKWVN	UNKWVN	—	—	—	UNKWVN	—
ALL MODE AWD/4WD	No indication	—	UNKWVN	UNKWVN	UNKWVN	—	—	—	UNKWVN	—	—	UNKWVN	—
ABS	—	NG	UNKWVN	UNKWVN	UNKWVN	—	—	—	UNKWVN	—	UNKWVN	—	—
IPDM E/R	No indication	—	UNKWVN	UNKWVN	—	—	—	UNKWVN	—	—	—	—	—

SKIB3369E

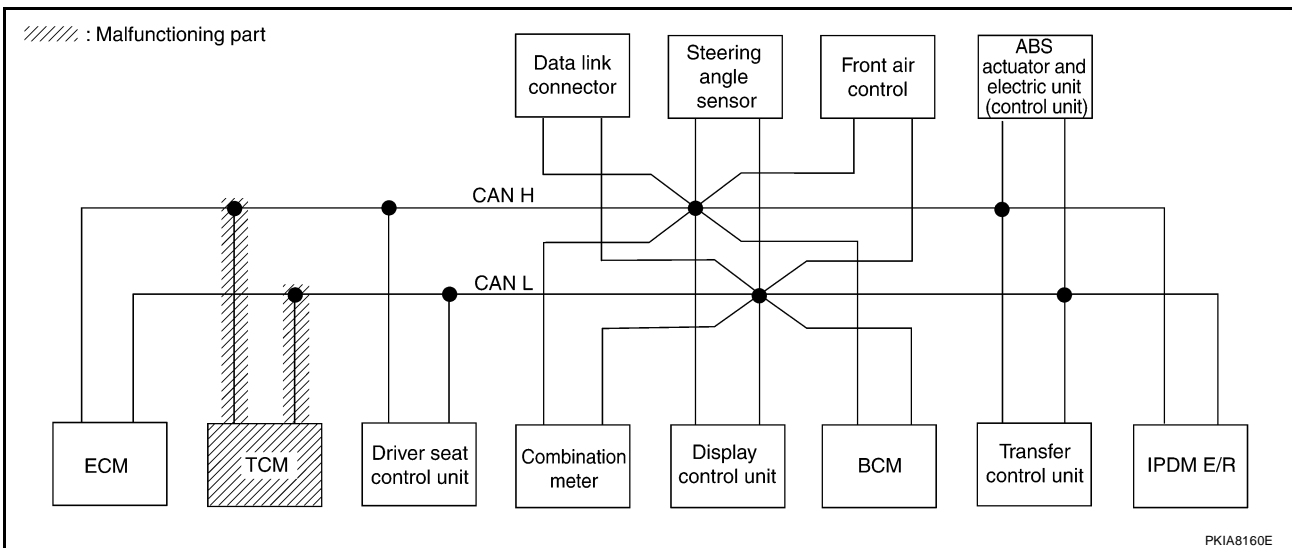

CAN SYSTEM (TYPE 3)


[CAN]

Case 6

Check driver seat control unit circuit. Refer to [LAN-119, "Driver Seat Control Unit Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—

SKIB3370E

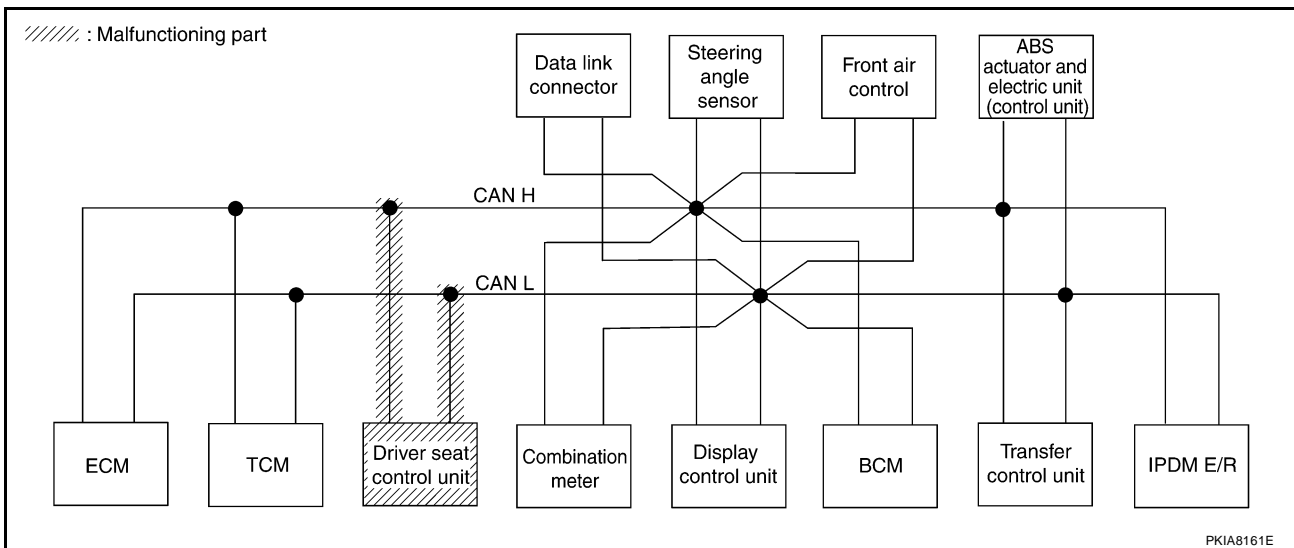


PKIA8161E

Case 7

Check combination meter circuit. Refer to [LAN-119, "Combination Meter Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R	
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	UNKWN	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—

SKIB3371E

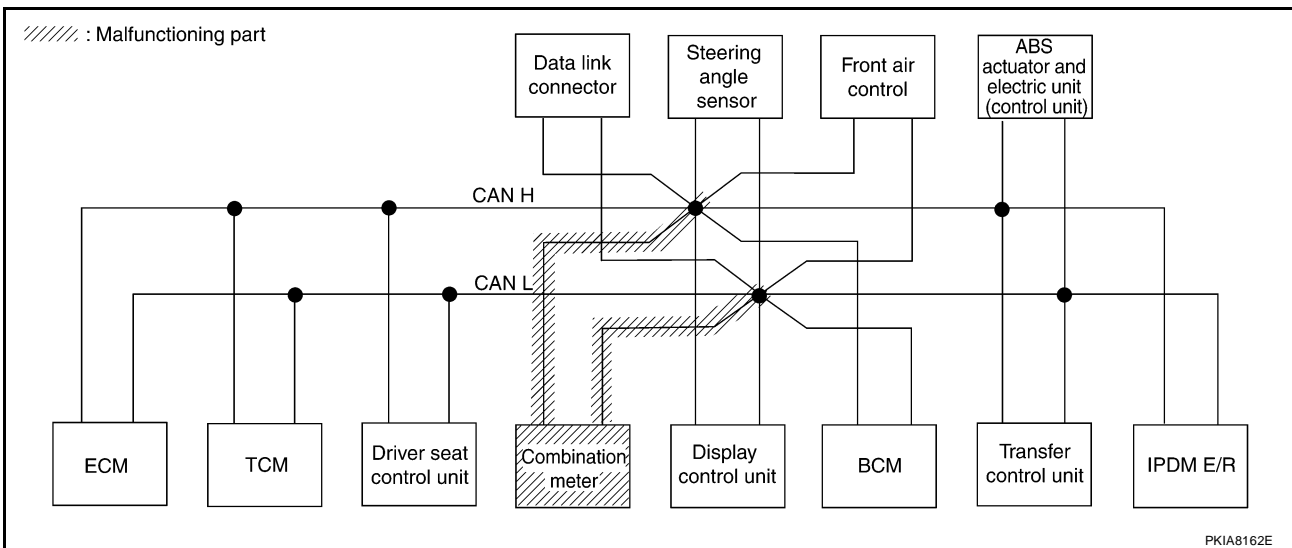

CAN SYSTEM (TYPE 3)


[CAN]

Case 8

Check display control unit circuit. Refer to [LAN-120, "Display Control Unit Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—

SKIB3372E

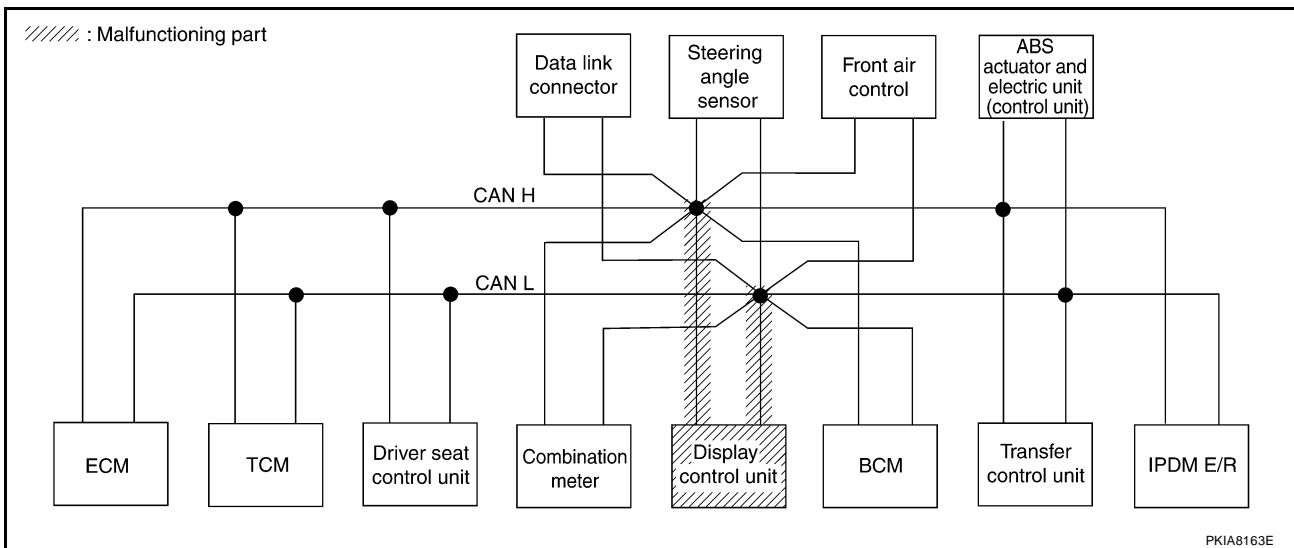

PKIA8163E

CAN SYSTEM (TYPE 3)


[CAN]

Case 9

Check BCM circuit. Refer to [LAN-120, "BCM Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—

SKIB3373E

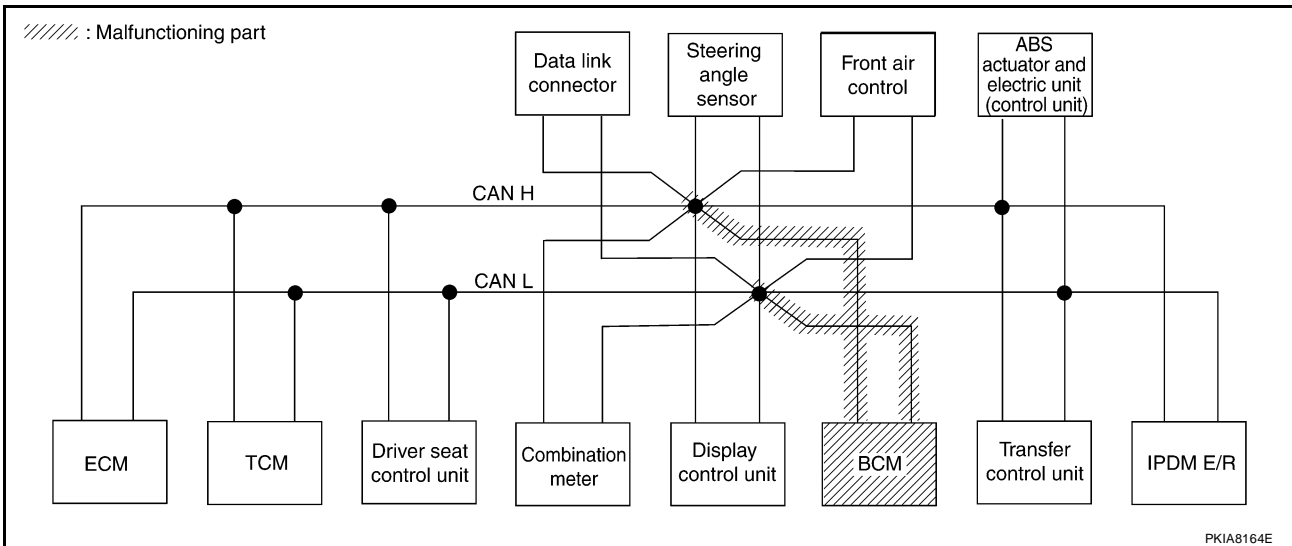

CAN SYSTEM (TYPE 3)


[CAN]

Case 10

Check data link connector circuit. Refer to [LAN-121, "Data Link Connector Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R	
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	UNKWN	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—

SKIB3374E

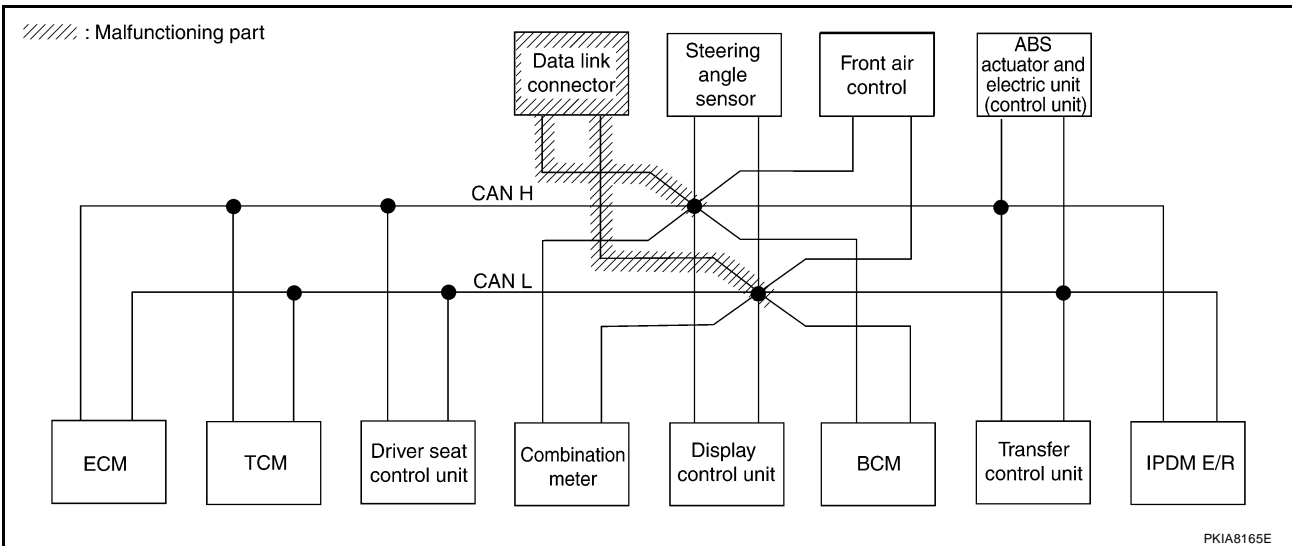

PKIA8165E

CAN SYSTEM (TYPE 3)


[CAN]

Case 11

Check steering angle sensor circuit. Refer to [LAN-121, "Steering Angle Sensor Circuit Check"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN ✓	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN ✓	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—

SKIB3375E

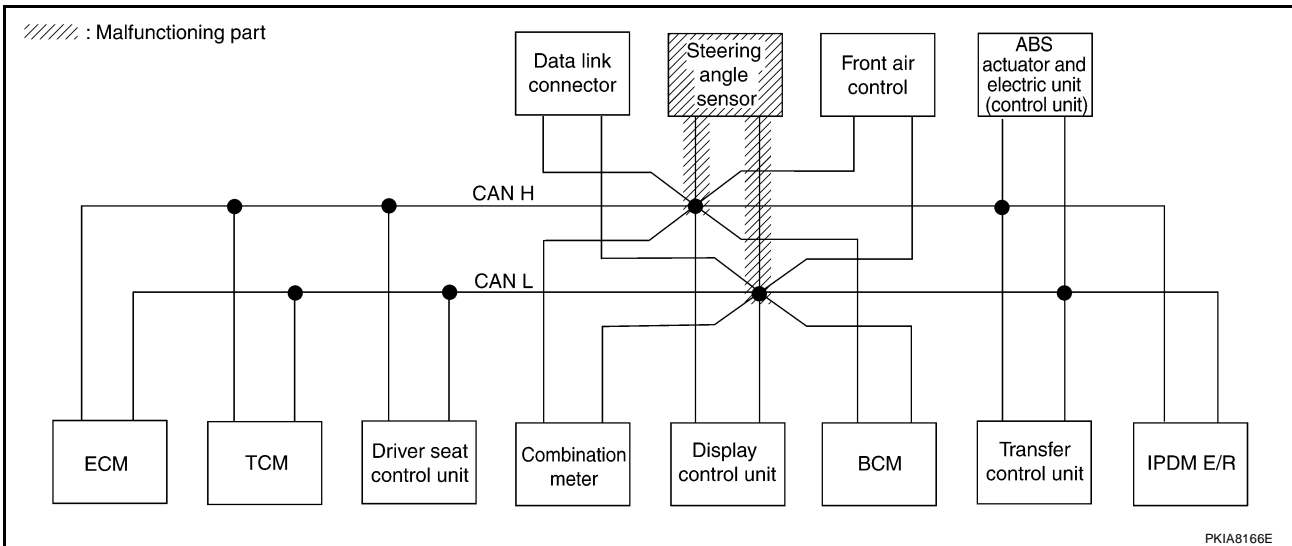

CAN SYSTEM (TYPE 3)


[CAN]

Case 12

Check front air control circuit. Refer to [LAN-122, "Front Air Control Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R	
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	UNKWN	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—

SKIB3429E

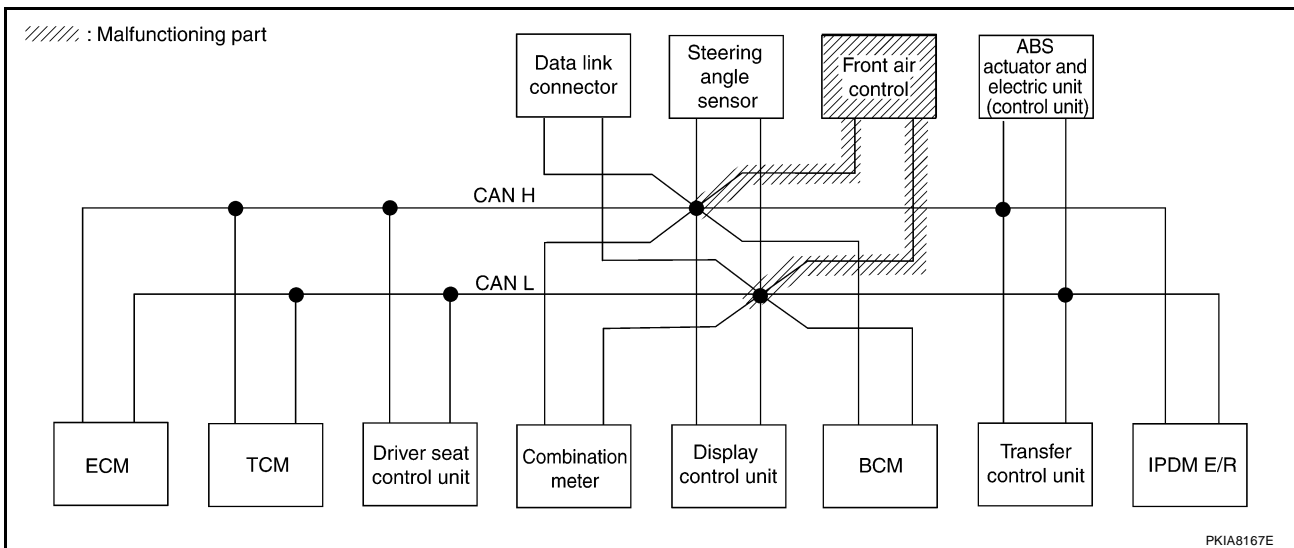

PKIA8167E

CAN SYSTEM (TYPE 3)


[CAN]

Case 13

Check transfer control unit circuit. Refer to LAN-122, "Transfer Control Unit Circuit Check".

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—

SKIB3376E

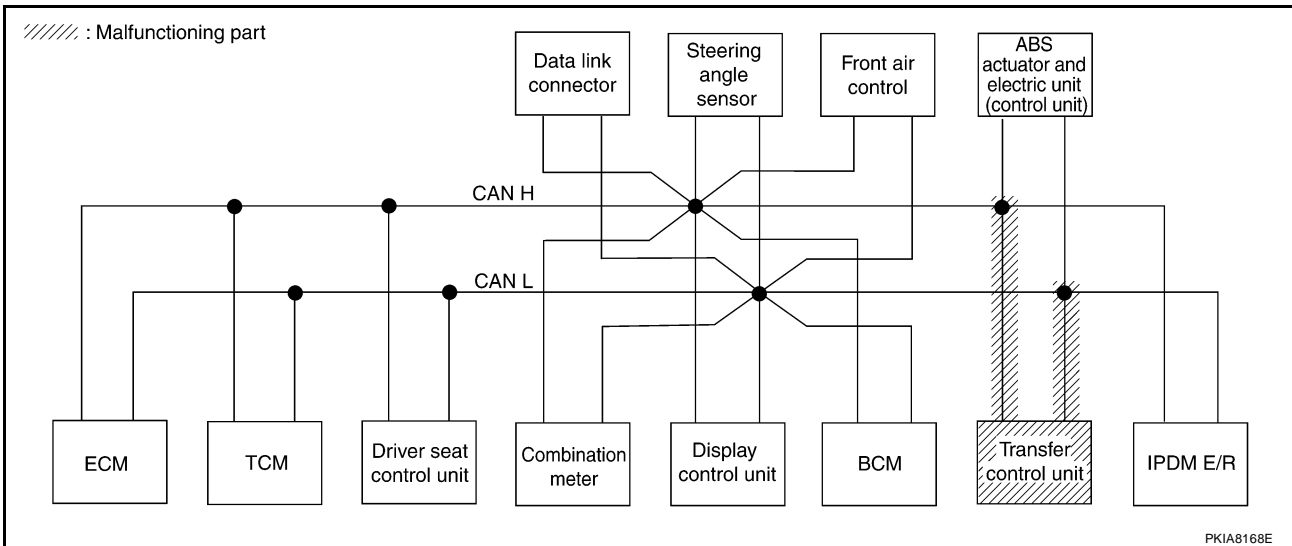

CAN SYSTEM (TYPE 3)


[CAN]

Case 14

Check ABS actuator and electric unit (control unit) circuit. Refer to [LAN-123, "ABS Actuator and Electric Unit \(Control Unit\) Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN ✓	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	UNKWN ✓	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	UNKWN ✓	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN ✓	—
ABS	—	NG ✓	UNKWN ✓	UNKWN ✓	UNKWN ✓	—	—	—	UNKWN ✓	—	UNKWN ✓	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—

SKIB3377E

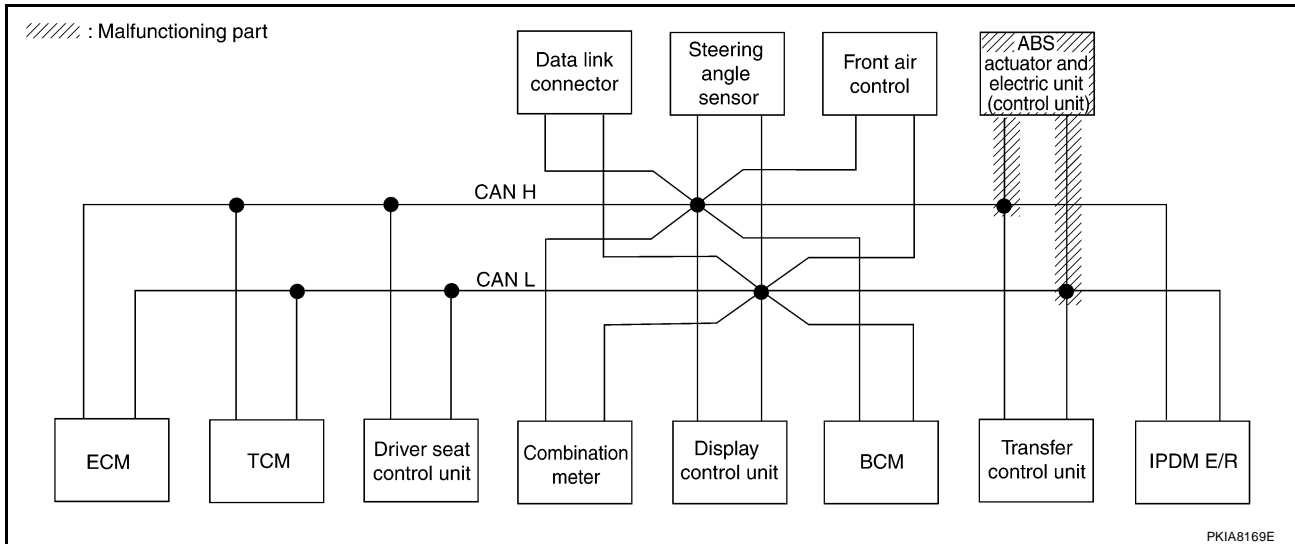

CAN SYSTEM (TYPE 3)


[CAN]

Case 15

Check IPDM E/R circuit. Refer to [LAN-123, "IPDM E/R Circuit Check"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR											
		Initial diagnosis	Transmit diagnosis	Receive diagnosis									
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN ✓
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	UNKWN	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7 ✓
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—	UNKWN ✓
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—

SKIB3378E

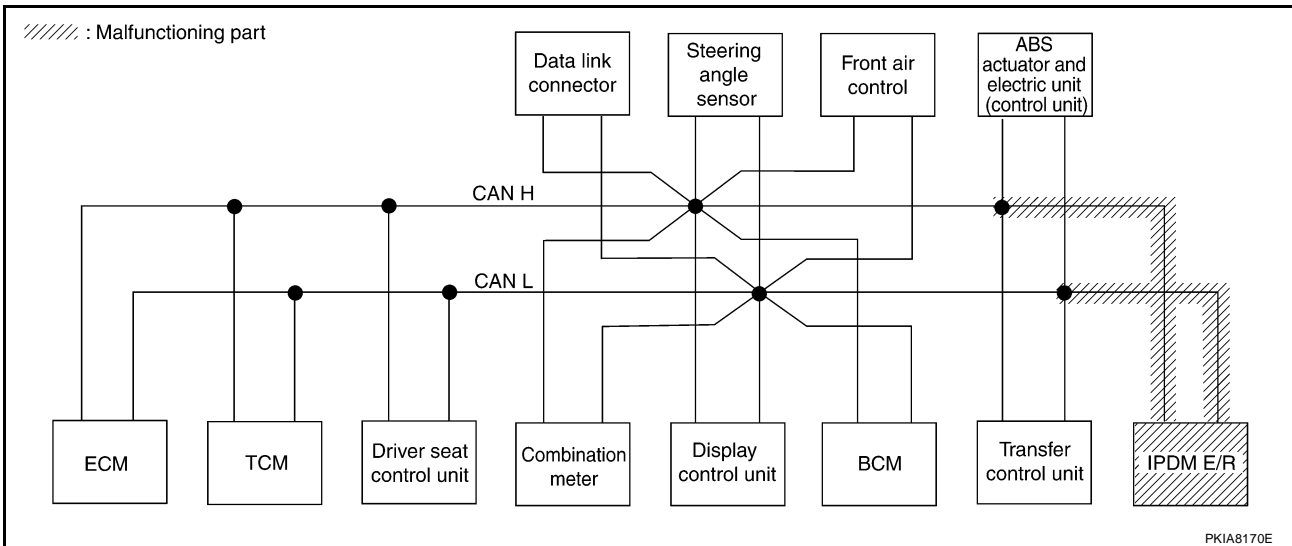

CAN SYSTEM (TYPE 3)

[CAN]

Case 16

Check CAN communication circuit. Refer to [LAN-124, "CAN Communication Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R	
ENGINE	—	NG	UNKW N	—	UNKW N	UNKW N	—	UNKW N	—	—	—	UNKW N	UNKW N	UNKW N
A/T	—	NG	UNKW N	UNKW N	—	UNKW N	—	—	—	—	—	UNKW N	UNKW N	—
AUTO DRIVE POS.	No indication	NG	UNKW N	—	UNKW N	UNKW N	—	UNKW N	—	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	—	CAN CIRC 7
BCM	No indication	NG	UNKW N	UNKW N	—	UNKW N	—	—	—	—	—	—	—	UNKW N
HVAC	No indication	—	UNKW N	UNKW N	—	—	UNKW N	UNKW N	—	—	—	UNKW N	—	—
ALL MODE AWD/4WD	No indication	—	UNKW N	UNKW N	UNKW N	—	—	—	UNKW N	—	—	UNKW N	—	—
ABS	—	NG	UNKW N	UNKW N	UNKW N	—	—	—	UNKW N	—	UNKW N	—	—	—
IPDM E/R	No indication	—	UNKW N	UNKW N	—	—	—	UNKW N	—	—	—	—	—	—

SKIB3379E

Case 17

Check IPDM E/R ignition relay circuit continuously sticks "OFF". Refer to [LAN-124, "IPDM E/R Ignition Relay Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R	
ENGINE	—	NG	UNKW N	—	UNKW N	UNKW N	—	UNKW N	—	—	—	UNKW N	UNKW N	UNKW N
A/T	—	NG	UNKW N	UNKW N	—	UNKW N	—	—	—	—	—	UNKW N	UNKW N	—
AUTO DRIVE POS.	No indication	NG	UNKW N	—	UNKW N	UNKW N	—	UNKW N	—	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	—	CAN CIRC 7
BCM	No indication	NG	UNKW N	UNKW N	—	UNKW N	—	—	—	—	—	—	—	UNKW N
HVAC	No indication	—	UNKW N	UNKW N	—	—	UNKW N	UNKW N	—	—	—	UNKW N	—	—
ALL MODE AWD/4WD	No indication	—	UNKW N	UNKW N	UNKW N	—	—	—	UNKW N	—	—	UNKW N	—	—
ABS	—	NG	UNKW N	UNKW N	UNKW N	—	—	—	UNKW N	—	UNKW N	—	—	—
IPDM E/R	No indication	—	UNKW N	UNKW N	—	—	—	UNKW N	—	—	—	—	—	—

SKIB3380E

Case 18

Check IPDM E/R ignition relay circuit continuously sticks "ON". Refer to [LAN-124, "IPDM E/R Ignition Relay Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR												
		Initial diagnosis	Transmit diagnosis	Receive diagnosis										
				ECM	TCM	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R	
ENGINE	—	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	UNKWN	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	UNKWN	—	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	UNKWN	—	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—

SKIB3381E

Circuit Check Between TCM and Driver Seat Control Unit

UKS0019W

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector F33
 - Harness connector E19
 - Harness connector E34
 - Harness connector B40

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector and harness connector F33.
2. Check continuity between A/T assembly harness connector F9 terminals 3 (L), 8 (P) and harness connector F33 terminals 12 (L), 11 (P).

3 (L) - 12 (L) : Continuity should exist.
8 (P) - 11 (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

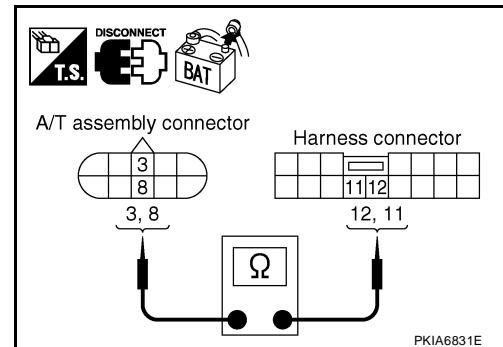


3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect harness connector E34.
2. Check continuity between harness connector E19 terminals 12 (L), 11 (P) and harness connector E34 terminals 24 (L), 23 (P).

12 (L) - 24 (L) : Continuity should exist.
11 (P) - 23 (P) : Continuity should exist.

OK or NG

- OK >> GO TO 4.
 NG >> Repair harness.

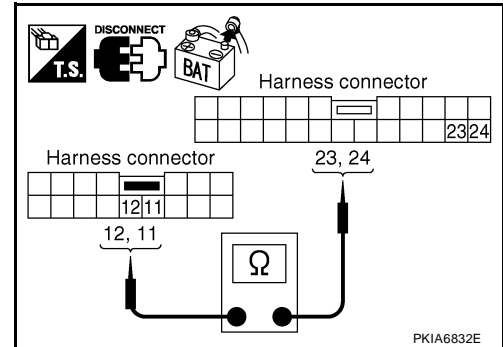


4. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector.
2. Check continuity between harness connector B40 terminals 24 (L), 23 (P) and driver seat control unit harness connector P2 terminals 3 (L), 19 (P).

24 (L) - 3 (L) : Continuity should exist.
23 (P) - 19 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-95, "Work Flow"](#).
 NG >> Repair harness.

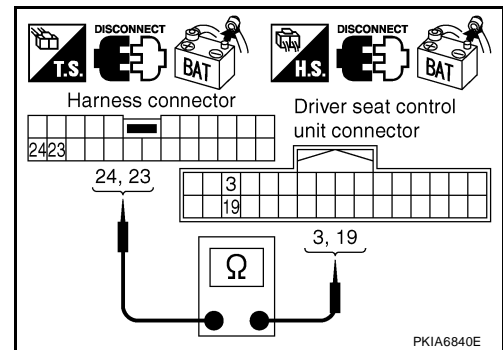

Circuit Check Between Driver Seat Control Unit and Data Link Connector

UKS0019X

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B69
 - Harness connector M40

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector and harness connector B69.
2. Check continuity between driver seat control unit harness connector P2 terminals 3 (L), 19 (P) and harness connector B69 terminals 51J (L), 52J (P).

3 (L) - 51J (L) : Continuity should exist.
19 (P) - 52J (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

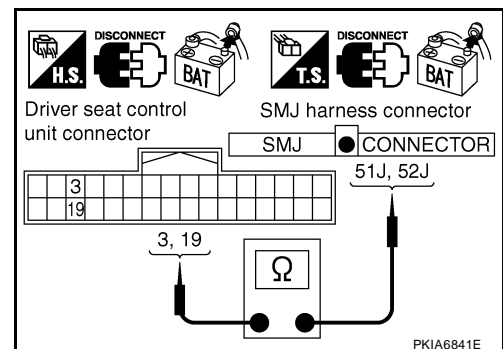

3. CHECK HARNESS FOR OPEN CIRCUIT


Check continuity between harness connector M40 terminals 51J (L), 52J (P) and data link connector M22 terminals 6 (L), 14 (P).

51J (L) - 6 (L) : Continuity should exist.

52J (P) - 14 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-95, "Work Flow"](#).
- NG >> Repair harness.

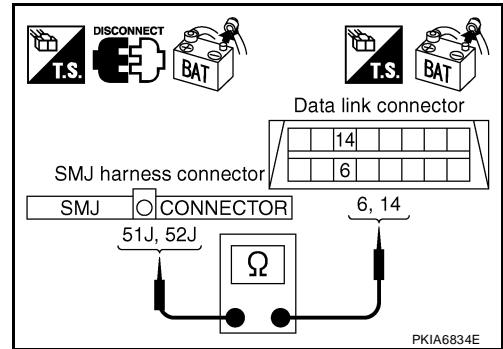

Circuit Check Between Data Link Connector and IPDM E/R

UKS0019Y

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M31
 - Harness connector E152

OK or NG

- OK >> GO TO 2.
- NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect harness connector M31.
2. Check continuity between data link connector M22 terminals 6 (L), 14 (P) and harness connector M31 terminals 31G (L), 42G (P).

6 (L) - 31G (L) : Continuity should exist.

14 (P) - 42G (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness.

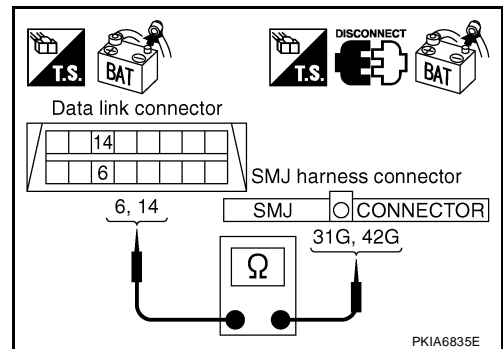

3. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect IPDM E/R connector.
2. Check continuity between harness connector E152 terminals 31G (L), 42G (P) and IPDM E/R harness connector E122 terminals 39 (L), 40 (P).

31G (L) - 39 (L) : Continuity should exist.

42G (P) - 40 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-95, "Work Flow"](#).
- NG >> Repair harness.

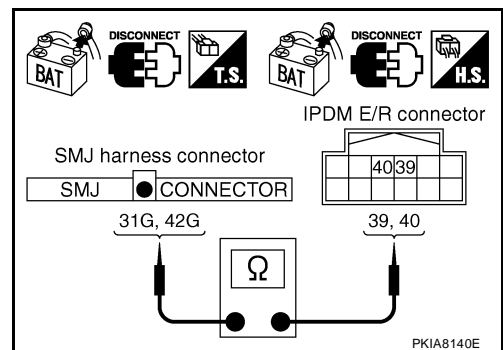

ECM Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (control module side and harness side).
 - ECM connector
 - Harness connector E19
 - Harness connector F33

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ECM connector.
2. Check resistance between ECM harness connector E16 terminals 94 (L) and 86 (P).

94 (L) - 86 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace ECM.
 NG >> Repair harness between ECM and A/T assembly.

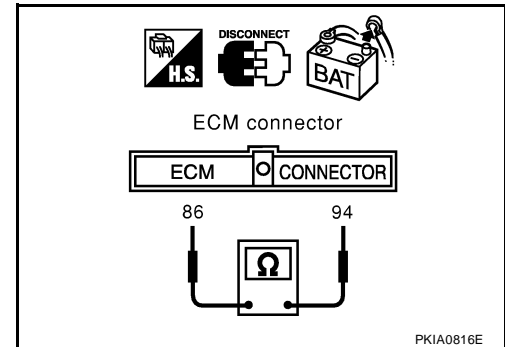**TCM Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of A/T assembly for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector.
2. Check resistance between A/T assembly harness connector F9 terminals 3 (L) and 8 (P).

3 (L) - 8 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace control valve with TCM.
 NG >> Repair harness between A/T assembly and harness connector F33.

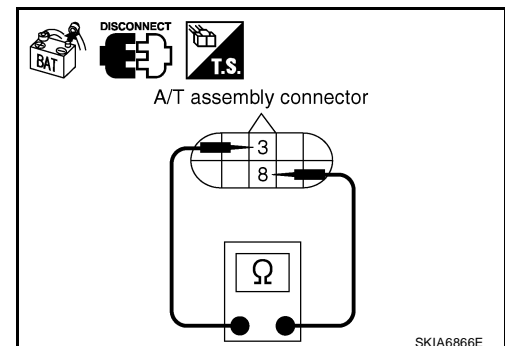

Driver Seat Control Unit Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (control unit side and harness side).
 - Driver seat control unit connector
 - Harness connector P1
 - Harness connector B37

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector.
2. Check resistance between driver seat control unit harness connector P2 terminals 3 (L) and 19 (P).

3 (L) - 19 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace driver seat control unit.
 NG >> Repair harness between driver seat control unit and harness connector B69.

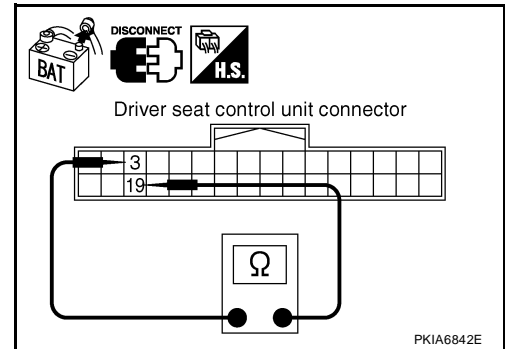**Combination Meter Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of combination meter for damage, bend and loose connection (meter side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect combination meter connector.
2. Check resistance between combination meter harness connector M24 terminals 11 (L) and 12 (P).

11 (L) - 12 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace combination meter.
 NG >> Repair harness between combination meter and data link connector.

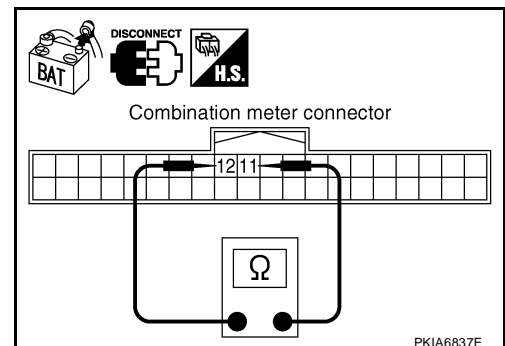A
B
C
D
E
F
G
H
I
J

LAN

L
M

Display Control Unit Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of display control unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect display control unit connector.
2. Check resistance between display control unit harness connector M95 terminals 25 (L) and 26 (P).

25 (L) - 26 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace display control unit.
NG >> Repair harness between display control unit and data link connector.

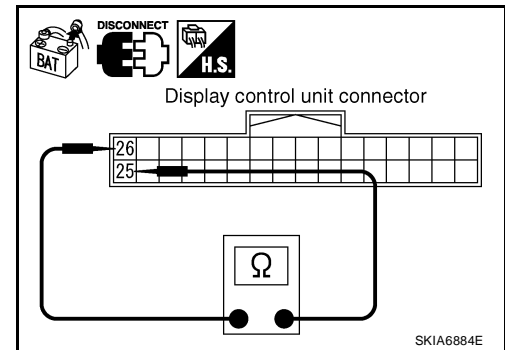

BCM Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of BCM for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect BCM connector.
2. Check resistance between BCM harness connector M18 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#) .
NG >> Repair harness between BCM and data link connector.

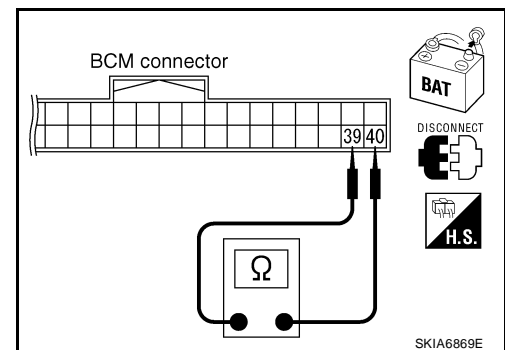

Data Link Connector Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check the terminals and connector of data link connector for damage, bend and loose connection (connector side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

Check resistance between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Diagnose again. Refer to [LAN-95, "Work Flow"](#) .
 NG >> Repair harness between data link connector and combination meter.

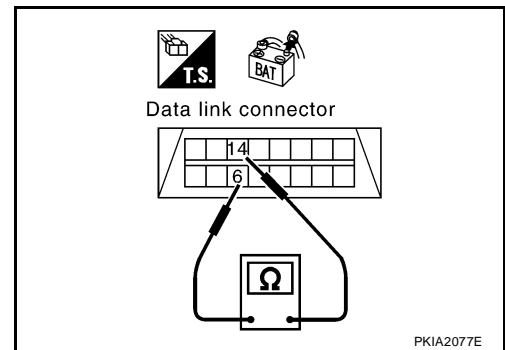**Steering Angle Sensor Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of steering angle sensor for damage, bend and loose connection (sensor side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect steering angle sensor connector.
2. Check resistance between steering angle sensor harness connector M47 terminals 3 (L) and 4 (P).

3 (L) - 4 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace steering angle sensor.
 NG >> Repair harness between steering angle sensor and data link connector.

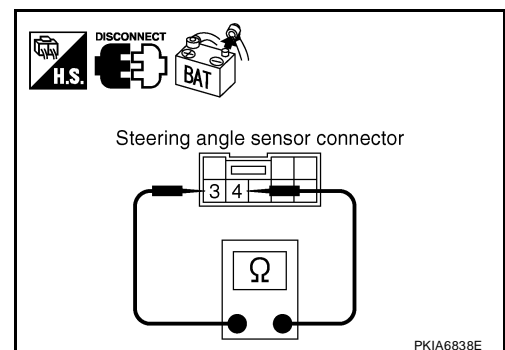

Front Air Control Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of front air control for damage, bend and loose connection (unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect front air control connector.
2. Check resistance between front air control harness connector M50 terminals 34 (L) and 35 (P).

34 (L) - 35 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace front air control.
 NG >> Repair harness between front air control and data link connector.

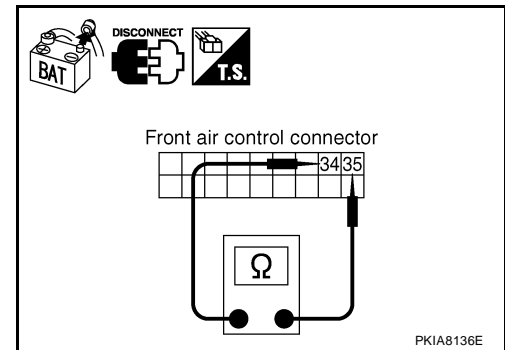

Transfer Control Unit Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of transfer control unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect transfer control unit connector.
2. Check resistance between transfer control unit harness connector E142 terminals 7 (L) and 8 (P).

7 (L) - 8 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace transfer control unit.
 NG >> Repair harness between transfer control unit and harness connector E152.

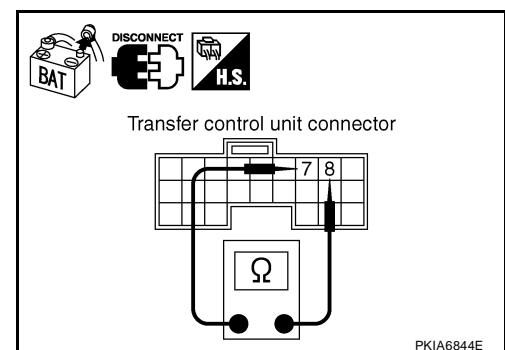

ABS Actuator and Electric Unit (Control Unit) Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ABS actuator and electric unit (control unit) for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
- NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check resistance between ABS actuator and electric unit (control unit) harness connector E125 terminals 11 (L) and 15 (P).

11 (L) - 15 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace ABS actuator and electric unit (control unit).
- NG >> Repair harness between ABS actuator and electric unit (control unit) and harness connector E152.

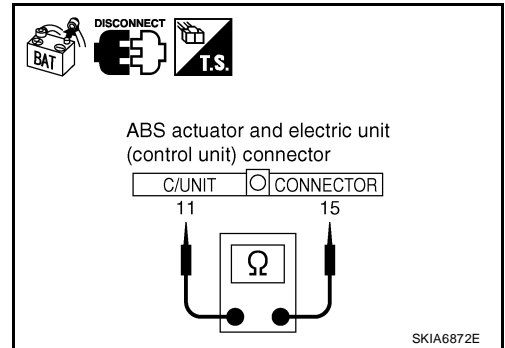

IPDM E/R Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of IPDM E/R for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
- NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check resistance between IPDM E/R harness connector E122 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace IPDM E/R.
- NG >> Repair harness between IPDM E/R and harness connector E152.

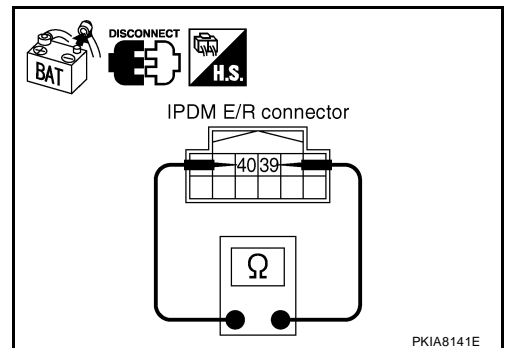

A
B
C
D
E
F
G
H
I
J
L
M

LAN

CAN Communication Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect the following module and control unit connectors and check terminals for deformation, disconnection, looseness or damage.
 - ECM
 - A/T assembly
 - Driver seat control unit
 - Combination meter
 - Display control unit
 - BCM
 - Steering angle sensor
 - Front air control
 - Transfer control unit
 - ABS actuator and electric unit (control unit)
 - IPDM E/R

OK or NG

- OK >> GO TO 2.
 NG >> Repair or replace as necessary.


2. CHECK HARNESS FOR SHORT CIRCUIT

With all module and control unit connectors disconnected, check continuity between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Continuity should not exist.

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

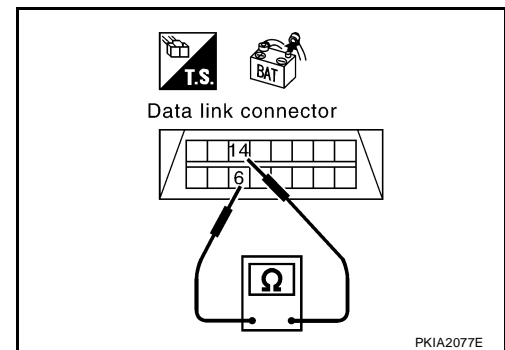

3. CHECK HARNESS FOR SHORT CIRCUIT


Check continuity between data link connector M22 terminals 6 (L), 14 (P) and ground.

6 (L) - Ground : Continuity should not exist.

14 (P) - Ground : Continuity should not exist.

OK or NG

- OK >> Check ECM and IPDM E/R. Refer to [LAN-125, "ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION"](#).
 NG >> Repair harness.

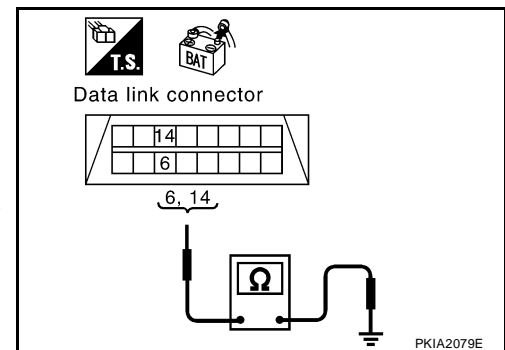

IPDM E/R Ignition Relay Circuit Check

Check the following. If no malfunction is found, replace the IPDM E/R.

- IPDM E/R power supply circuit. Refer to [PG-26, "IPDM E/R Power/Ground Circuit Inspection"](#).
- Ignition power supply circuit. Refer to [PG-13, "IGNITION POWER SUPPLY — IGNITION SW. IN ON AND/OR START"](#).


UKS001AD

Component Inspection

ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION

- Remove ECM and IPDM E/R from vehicle.
- Check resistance between ECM terminals 94 and 86.
- Check resistance between IPDM E/R terminals 39 and 40.

Unit	Terminal	Resistance value (Ω) (Approx.)
ECM	94 - 86	108 - 132
IPDM E/R	39 - 40	

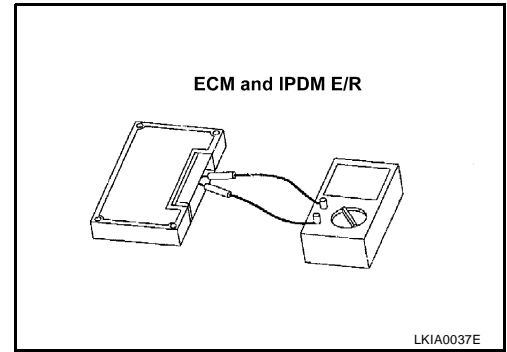

A
B
C
D
E
F
G
H
I
J
L
M

LAN

CAN SYSTEM (TYPE 4)

PFP:23710


System Description

UKS001NP

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Component Parts and Harness Connector Location

UKS001NQ

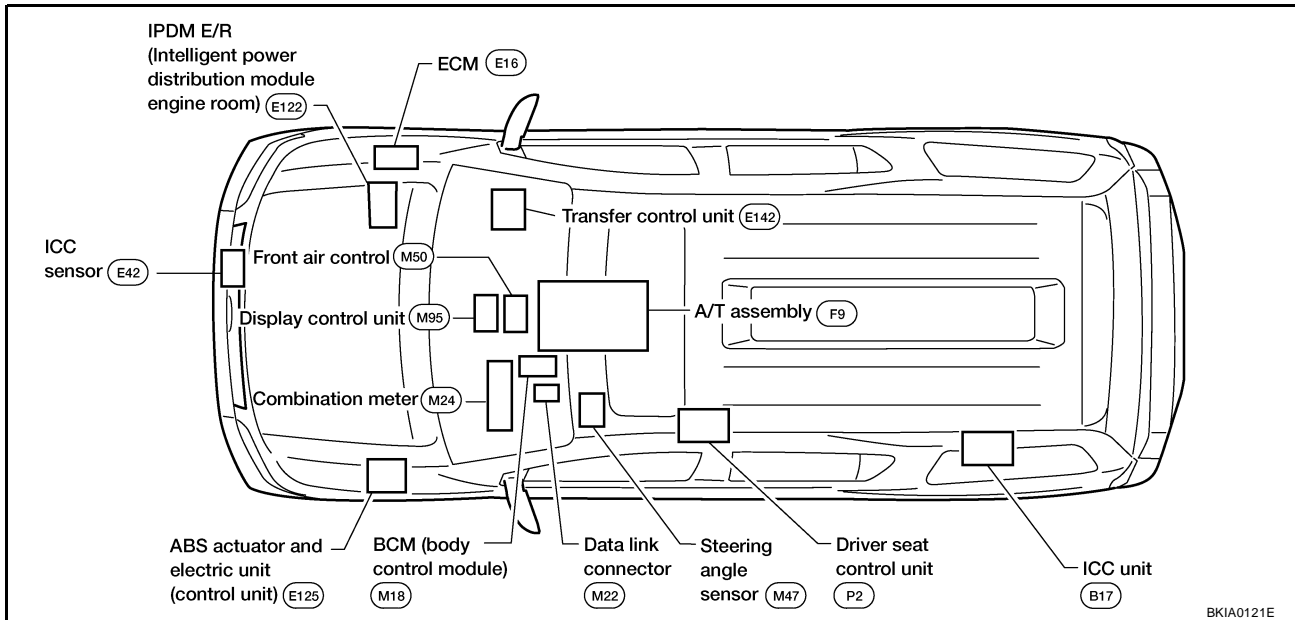


CAN SYSTEM (TYPE 4)

[CAN]

Schematic

UKS001NR

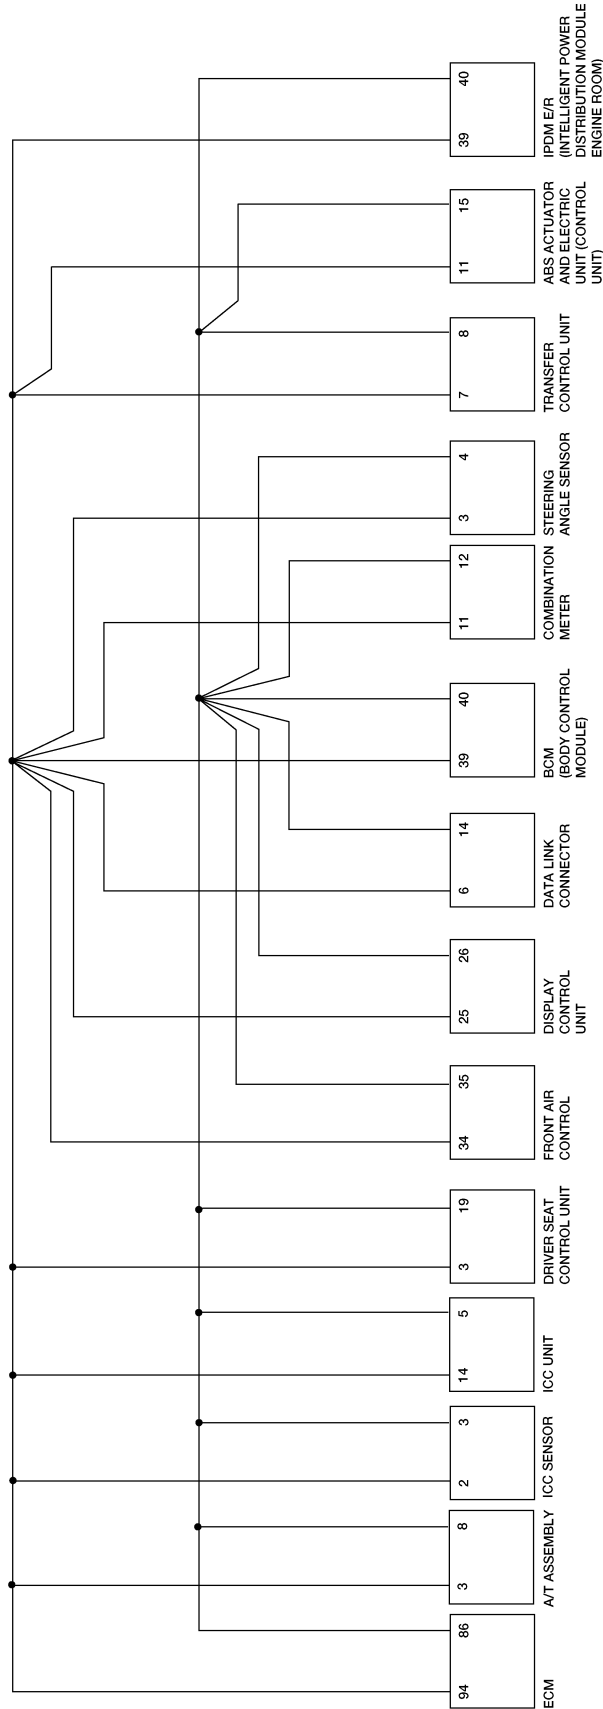

A
B
C
D
E
F
G
H
I
J
L
M

LAN

BKWA0067E

CAN SYSTEM (TYPE 4)





[CAN]

UKS001NS

Wiring Diagram - CAN -

LAN-CAN-10

▬ : DATA LINE

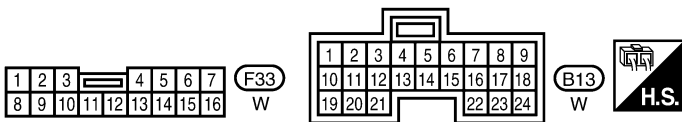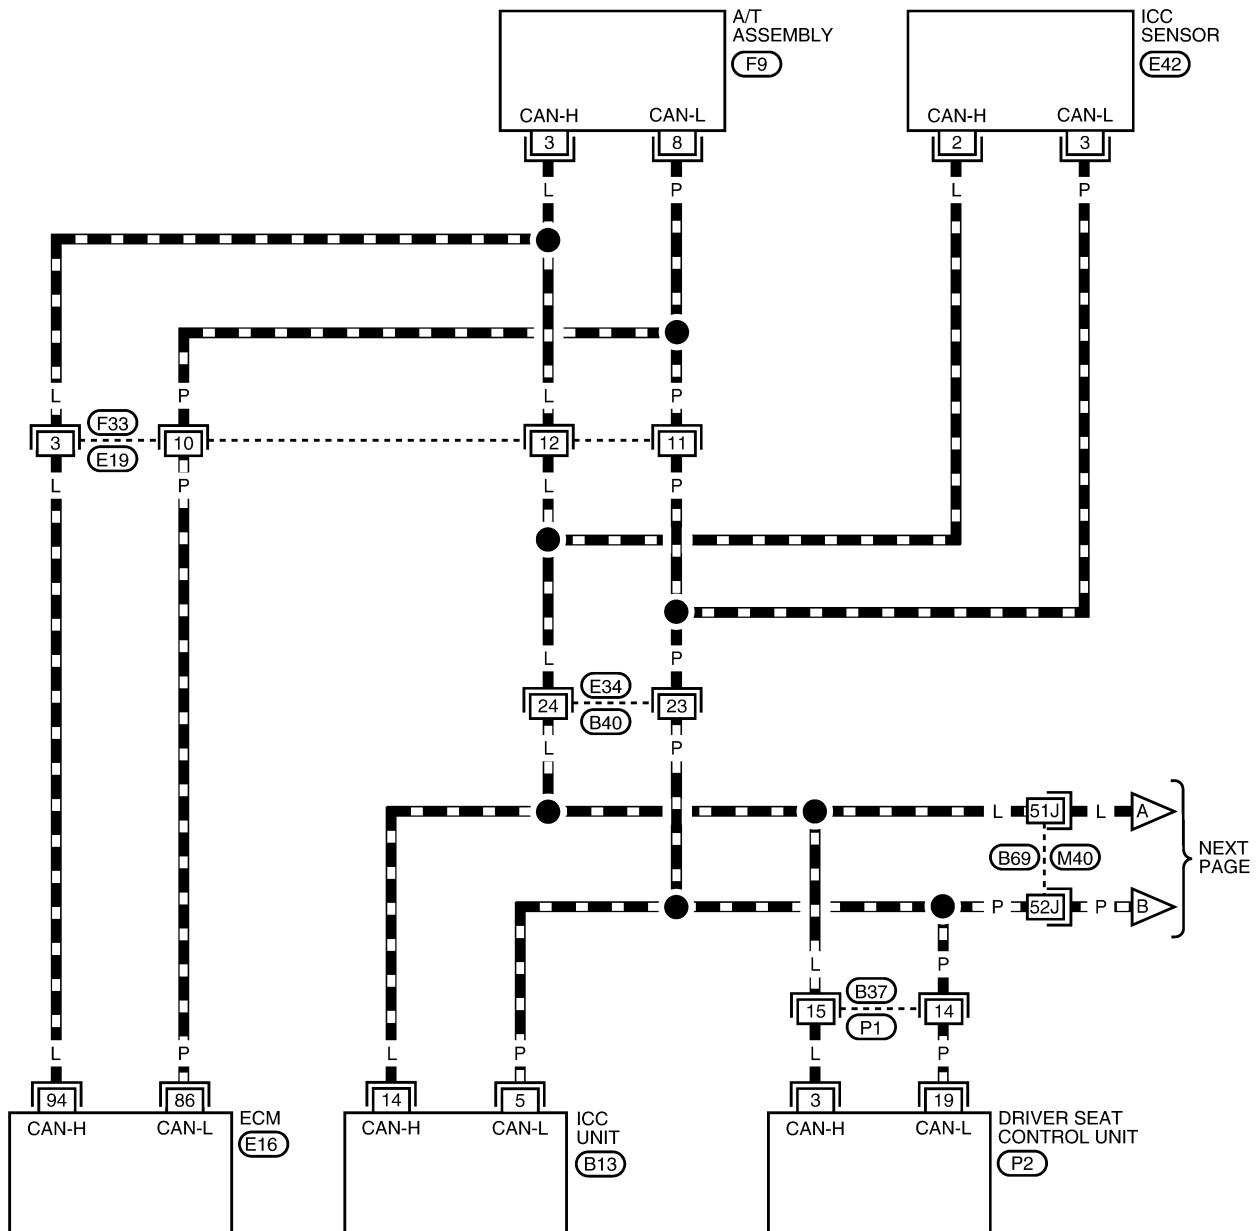

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

REFER TO THE FOLLOWING.

- (M40) - SUPER MULTIPLE JUNCTION (SMJ)
- (E16) - ELECTRICAL UNITS



BKWA0404E

CAN SYSTEM (TYPE 4)

[CAN]

LAN-CAN-11



— : DATA LINE

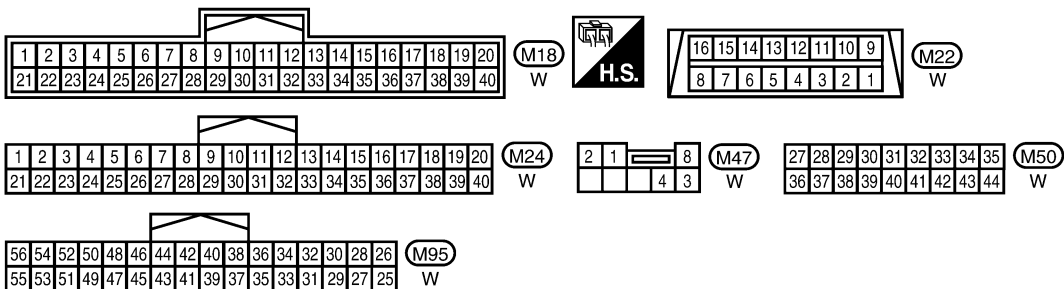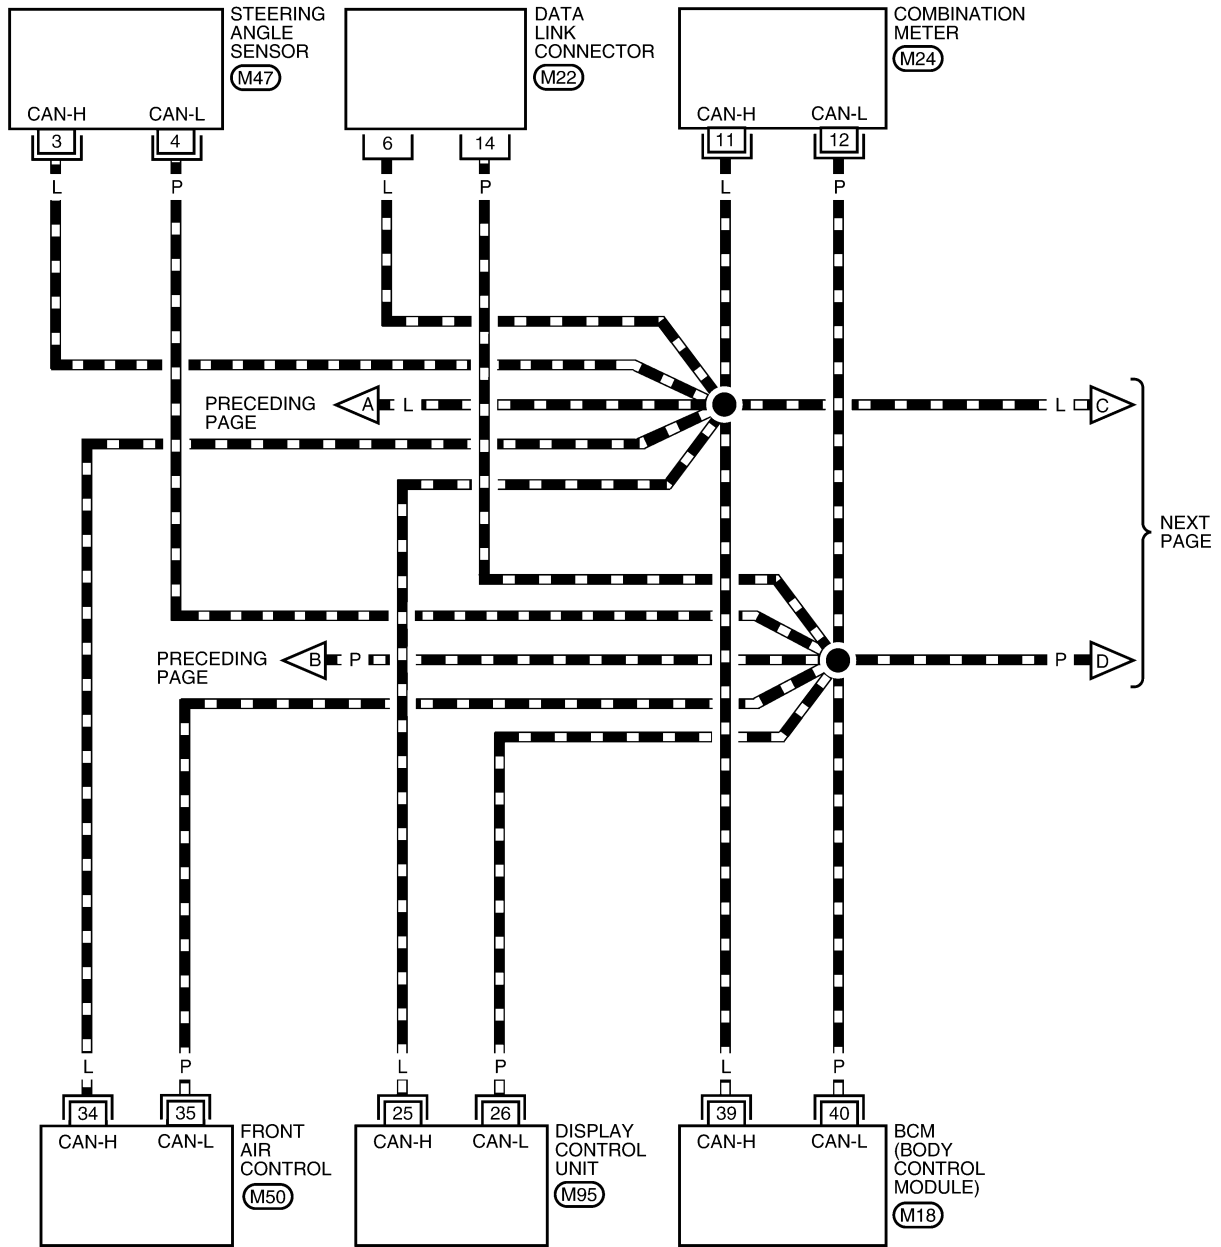

BKWA0405E

LAN-CAN-12

▬ : DATA LINE

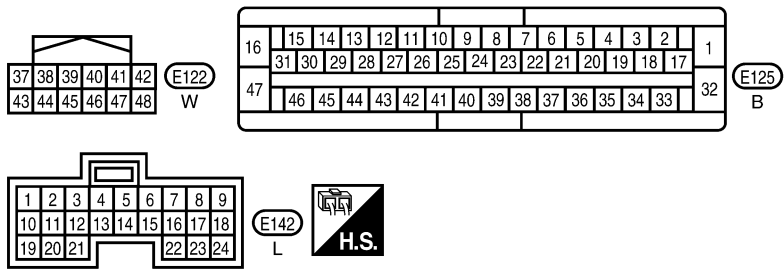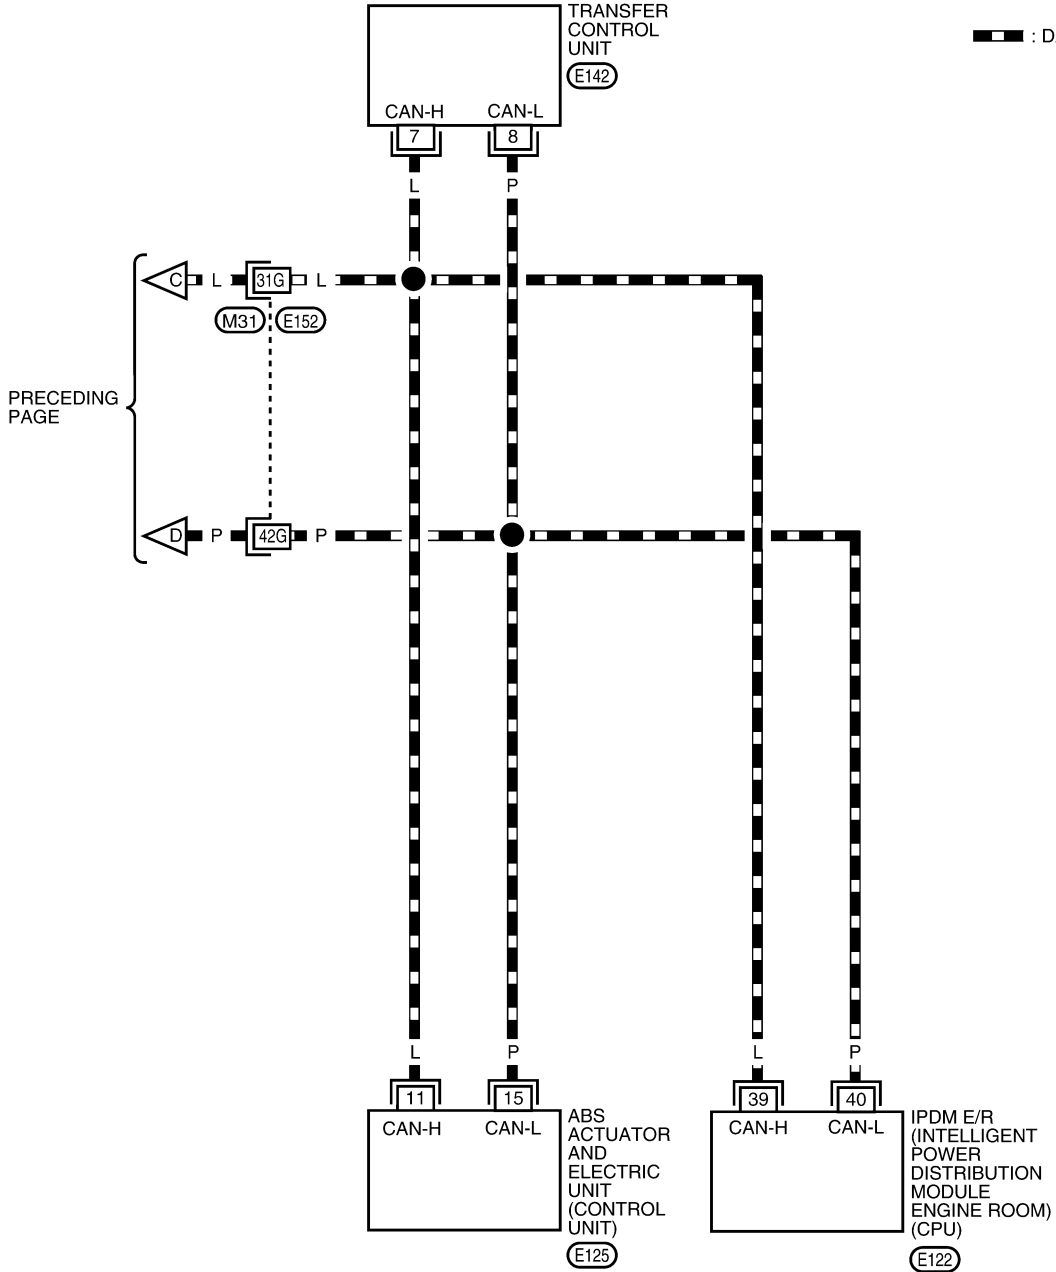

REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

BKWA0406E

CAN SYSTEM (TYPE 4)

[CAN]

UKS001NT

Work Flow

- When there are no indications of "AUTO DRIVE POS.", "BCM", "HVAC", "ALL MODE AWD/4WD" or "IPDM E/R" on "SELECT SYSTEM" display of CONSULT-II, print the "SELECT SYSTEM".

(Example)

NISSAN	
CONSULT-II	
ENGINE	
START (NISSAN BASED VHCL)	
START (RENAULT BASED VHCL)	
SUB MODE	
LIGHT	COPY

➔

SELECT SYSTEM		
ENGINE		
A/T		
ABS		
AIR BAG		
BCM		
METER A/C AMP		
BACK	LIGHT	COPY

PKIA2093E

- Print all the data of "SELF-DIAG RESULTS" for "ENGINE", "A/T", "ICC", "AUTO DRIVE POS.", "BCM", "HVAC", "ALL MODE AWD/4WD", "ABS" and "IPDM E/R" displayed on CONSULT-II.

(Example)

SELECT DIAG MODE	
WORK SUPPORT	
SELF-DIAG RESULTS	
DATA MONITOR	
DATA MONITOR (SPEC)	
CAN DIAG SUPPORT MNTR	
ACTIVE TEST	
Scroll Down	
BACK	LIGHT COPY

➔

SELF-DIAG RESULTS	
DTC RESULTS	
TIME	
CAN COMM CIRCUIT [U1000]	0
F.F.DATA	
ERASE	PRINT
MODE	BACK LIGHT COPY

PKIA8260E

- Print all the data of "CAN DIAG SUPPORT MNTR" for "ENGINE", "A/T", "ICC", "AUTO DRIVE POS.", "BCM", "HVAC", "ALL MODE AWD/4WD", "ABS" and "IPDM E/R" displayed on CONSULT-II.

(Example)

SELECT DIAG MODE	
WORK SUPPORT	
SELF-DIAG RESULTS	
DATA MONITOR	
DATA MONITOR (SPEC)	
CAN DIAG SUPPORT MNTR	
ACTIVE TEST	
Scroll Down	
BACK	LIGHT COPY

➔

CAN DIAG SUPPORT MNTR	
ENGINE	
	PRSN
INITIAL DIAG	OK
TRANSMIT DIAG	OK
TCM	OK
VDC/TCS/ABS	OK
METER/M&A	OK
ICC	UNKWN
BCM/SEC	OK
IPDM E/R	OK
AWD/4WD/e4WD	UNKWN
PRINT	Scroll Down
MODE	BACK LIGHT COPY

PKIA8343E

- Attach the printed sheet of "SELECT SYSTEM", "SELF-DIAG RESULTS" and "CAN DIAG SUPPORT MNTR" onto the check sheet. Refer to [LAN-133, "CHECK SHEET"](#).
- Based on the indications of "SELECT SYSTEM" and the results of "CAN DIAG SUPPORT MNTR", puts a check mark onto the items with "No indication", "NG" or "UNKWN" in the check sheet table. Refer to [LAN-133, "CHECK SHEET"](#).

CAUTION:

"ALL MODE AWD/4WD" puts a check mark on the check sheet when "Present" is "UNKWN" and "Past" is "0".

(Example)

CAN DIAG SUPPORT MNTR		
ALL MODE AWD/4WD		
	PRSN	PAST
TRANSMIT DIAG	OK	OK
ECM	UNKWN	0
VDC/TCS/ABS	UNKWN	39
TCM	UNKWN	0
STRG	OK	OK
PRINT		
MODE	BACK	LIGHT COPY

SKIB3244E

NOTE:

- If “NG” is displayed on “INITIAL DIAG (Initial diagnosis)” as “CAN DIAG SUPPORT MNTR” for the diagnosed control unit, replace the control unit.
- The “CAN DIAG SUPPORT MNTR” items, which are not in check sheet table, are not related to diagnostic procedure on service manual.
So it is not necessary to check the status of the “CAN DIAG SUPPORT MNTR” items not in check sheet table.

6. Check CAN communication line of the navigation system. Refer to [AV-131, "CAN Communication Line Check"](#) .
7. Attach the CAN DIAG SUPPORT MONITOR check sheet onto the check sheet. Refer to [LAN-133, "CHECK SHEET"](#) .
8. Mark the “NG” or “UNKWN” item of the check sheet table with “v” from the result of CAN DIAG SUPPORT MONITOR check sheet. Refer to [LAN-133, "CHECK SHEET"](#) .

NOTE:

If “NG” is displayed on “CAN COMM” as “CAN DIAG SUPPORT MONITOR” for the diagnosed control unit, replace the control unit. Refer to [AV-131, "CAN Communication Line Check"](#) .

9. According to the check sheet results (example), start inspection. Refer to [LAN-136, "CHECK SHEET RESULTS \(EXAMPLE\)"](#) .

CAN SYSTEM (TYPE 4)

[CAN]

CHECK SHEET

NOTE:

If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" or "CAN COMM" for the diagnosed control unit, replace the control unit.

Check sheet table

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	—

Symptoms :

Attach copy of
SELECT SYSTEM

Attach copy of
SELECT SYSTEM

Attach copy of
display control unit
CAN DIAG SUPPORT MONITOR check sheet

SKIB3382E

A
B
C
D
E
F
G
H
I
J
L
M

LAN

CAN SYSTEM (TYPE 4)

[CAN]

Attach copy of
ENGINE
SELF-DIAG RESULTS

Attach copy of
A/T
SELF-DIAG RESULTS

Attach copy of
ICC
SELF-DIAG RESULTS

Attach copy of
AUTO DRIVE POS.
SELF-DIAG RESULTS

Attach copy of
BCM
SELF-DIAG RESULTS

Attach copy of
HVAC
SELF-DIAG RESULTS

Attach copy of
ALL MODE AWD/4WD
SELF-DIAG RESULTS

Attach copy of
ABS
SELF-DIAG RESULTS

Attach copy of
IPDM E/R
SELF-DIAG RESULTS

SKIB3453E

CAN SYSTEM (TYPE 4)

[CAN]

A
B
C
D
E
F
G
H
I
J
L
M

Attach copy of
ENGINE
CAN DIAG SUPPORT
MNTR

Attach copy of
A/T
CAN DIAG SUPPORT
MNTR

Attach copy of
ICC
CAN DIAG SUPPORT
MNTR

Attach copy of
AUTO DRIVE POS.
CAN DIAG SUPPORT
MNTR

Attach copy of
BCM
CAN DIAG SUPPORT
MNTR

Attach copy of
HVAC
CAN DIAG SUPPORT
MNTR

Attach copy of
ALL MODE AWD/4WD
CAN DIAG SUPPORT
MNTR

Attach copy of
ABS
CAN DIAG SUPPORT
MNTR

Attach copy of
IPDM E/R
CAN DIAG SUPPORT
MNTR

LAN

SKIB3454E

CAN SYSTEM (TYPE 4)

[CAN]

CHECK SHEET RESULTS (EXAMPLE)

NOTE:


If "NG" is displayed on "INITIAL DIAG (Initial diagnosis)" or "CAN COMM" for the diagnosed control unit, replace the control unit.

Case 1

Check harness between TCM and ICC sensor. Refer to [LAN-156, "Circuit Check Between TCM and ICC Sensor"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR														
		Initial diagnosis	Transmit diagnosis	Receive diagnosis												
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R	
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	✓	✓	—	✓	—	—	✓	✓	✓
A/T	—	NG	UNKWN	UNKWN	—	—	✓	✓	—	—	—	—	✓	✓	—	—
ICC	—	NG	UNKWN	✓	✓	UNKWN	—	—	—	UNKWN	—	—	—	UNKWN	—	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	✓	—	—	UNKWN	—	UNKWN	—	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	✓	—	—	—	UNKWN	—	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	✓	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—
ALL MODE AWD/4WD	No indication	—	UNKWN	✓	✓	—	—	—	—	—	UNKWN	—	—	UNKWN	—	—
ABS	—	NG	UNKWN	✓	✓	—	—	—	—	—	UNKWN	—	UNKWN	—	—	—
IPDM E/R	No indication	—	UNKWN	✓	—	—	—	—	—	UNKWN	—	—	—	—	—	—

SKIB3383E

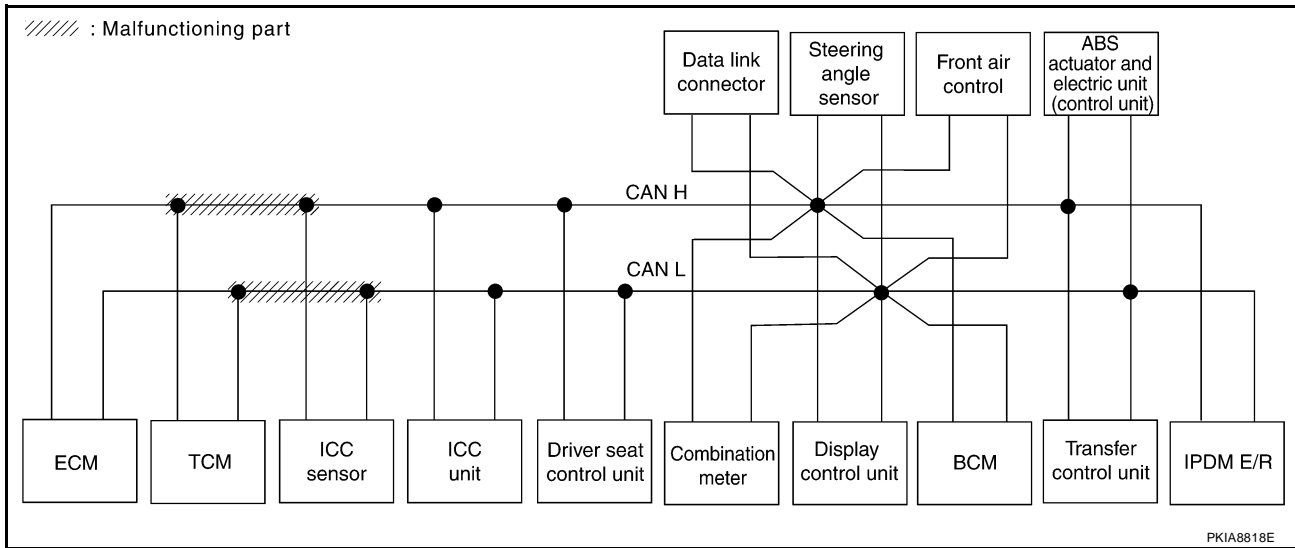

PKIA8818E

CAN SYSTEM (TYPE 4)


[CAN]

Case 2

Check harness between ICC sensor and ICC unit. Refer to [LAN-157, "Circuit Check Between ICC Sensor and ICC Unit"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	—

SKIB3384E

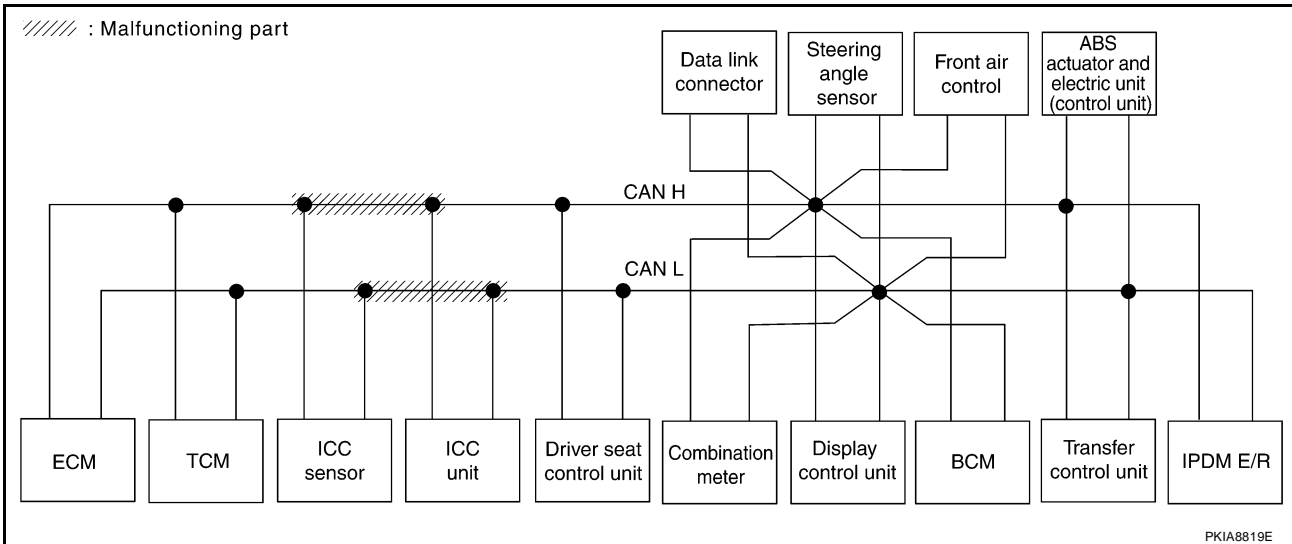

PKIA8819E

CAN SYSTEM (TYPE 4)


[CAN]

Case 3

Check harness between ICC unit and driver seat control unit. Refer to [LAN-158, "Circuit Check Between ICC Unit and Driver Seat Control Unit"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	✓	—	✓	—	—	✓	✓	✓
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	✓	—	—	—	—	✓	✓	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	✓	—	—	—	✓	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	✓	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	✓	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	✓	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	✓	✓	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	✓	✓	—	—	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	✓	—	—	—	—	—	UNKWN	—	—	—	—	—

SKIB3385E

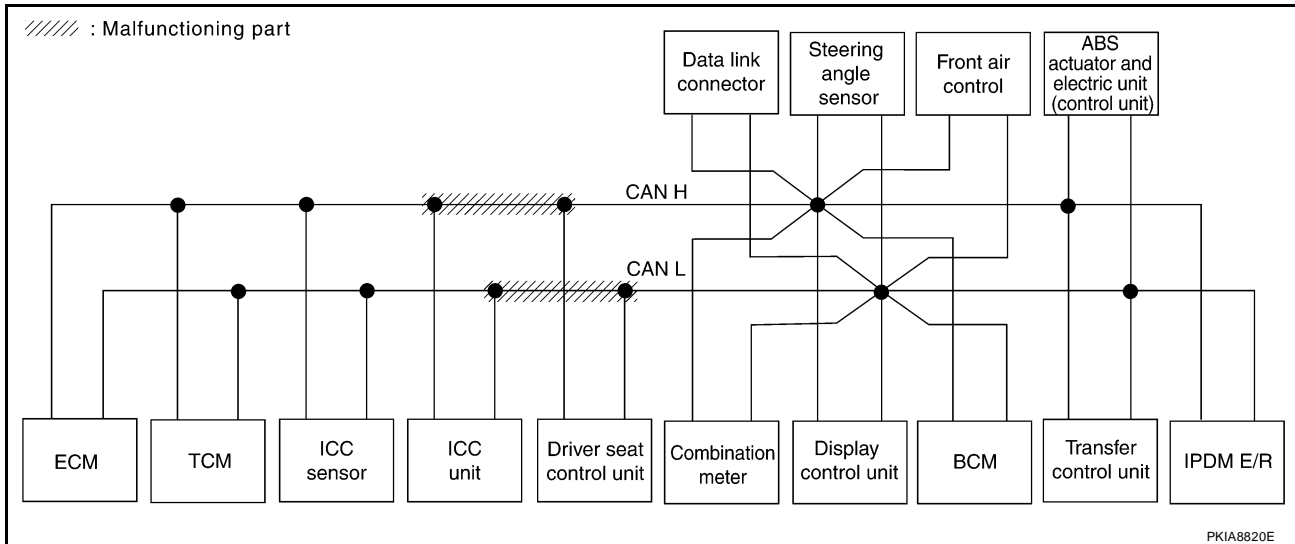

PKIA8820E

CAN SYSTEM (TYPE 4)


[CAN]

Case 4

Check harness between driver seat control unit and data link connector. Refer to [LAN-158, "Circuit Check Between Driver Seat Control Unit and Data Link Connector"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UN ✓ KN	—	UN ✓ KN	—	—	UN ✓ KN	UN ✓ KN	UN ✓ KN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UN ✓ KN	—	—	—	—	UN ✓ KN	UN ✓ KN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UN ✓ KN	—	—	—	UN ✓ KN	—
AUTO DRIVE POS.	No ✓ indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UN ✓ KN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UN ✓ KN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UN ✓ KN	UN ✓ KN	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UN ✓ KN	UN ✓ KN	—	—	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UN ✓ KN	—	—	—	—	—	UNKWN	—	—	—	—	—

SKIB3386E

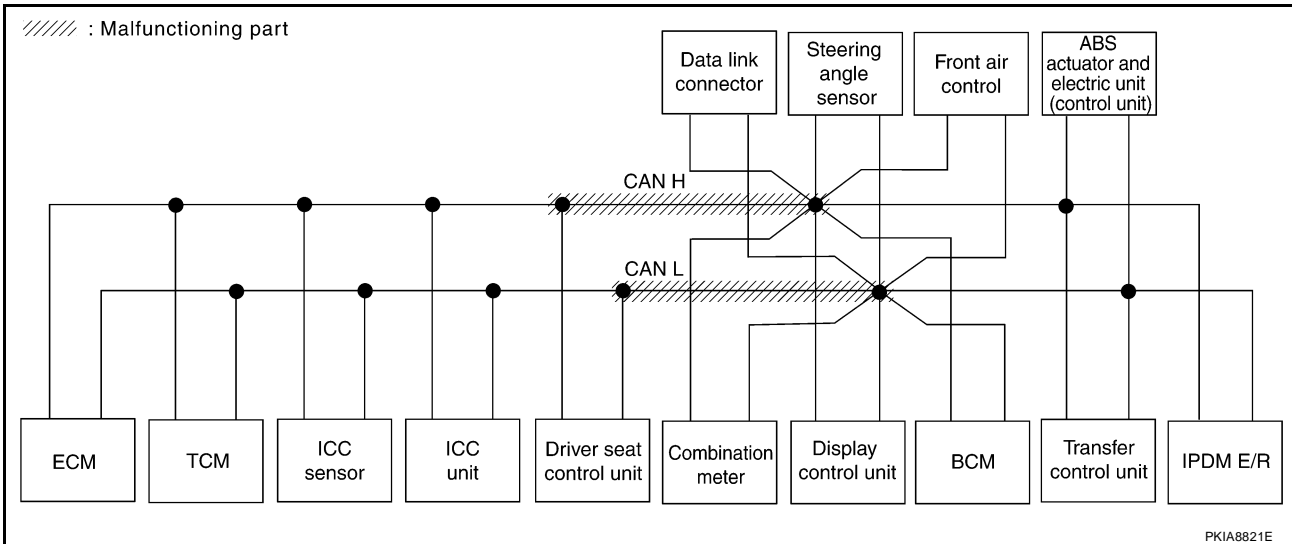

PKIA8821E

CAN SYSTEM (TYPE 4)


[CAN]

Case 5

Check harness between data link connector and IPDM E/R. Refer to [LAN-159, "Circuit Check Between Data Link Connector and IPDM E/R"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	—

SKIB3387E

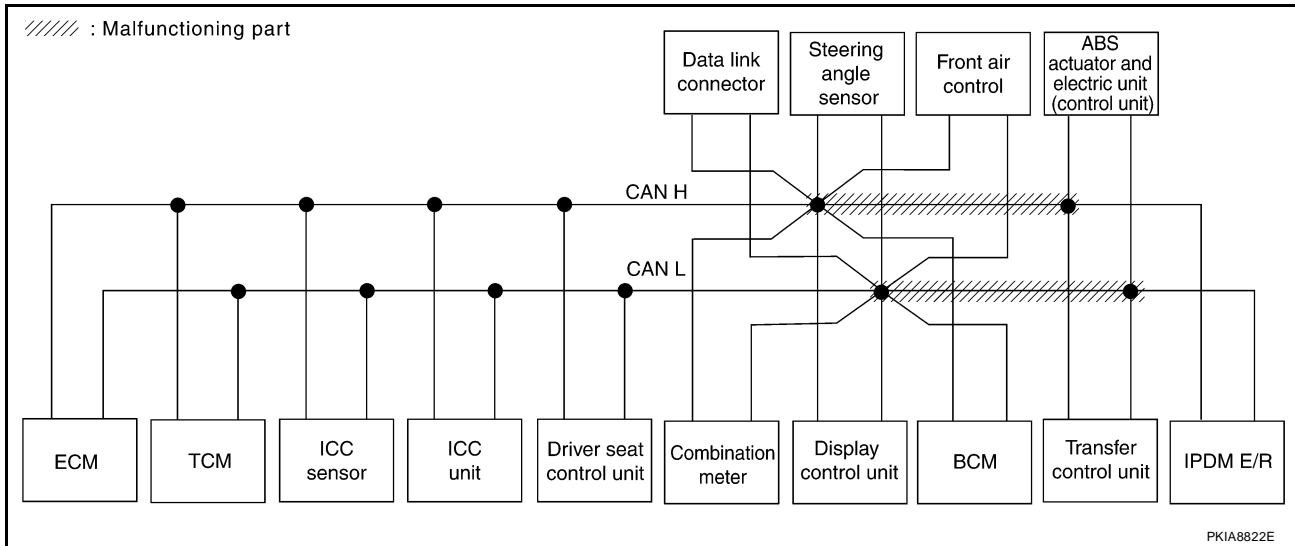


PKIA8822E

Case 6

Check ECM circuit. Refer to [LAN-160, "ECM Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N
A/T	—	NG	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N
ICC	—	NG	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N
AUTO DRIVE POS.	No indication	NG	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N
HVAC	No indication	—	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N
ALL MODE AWD/4WD	No indication	—	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N
ABS	—	NG	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N
IPDM E/R	No indication	—	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N	UNKW N

SKIB3388E

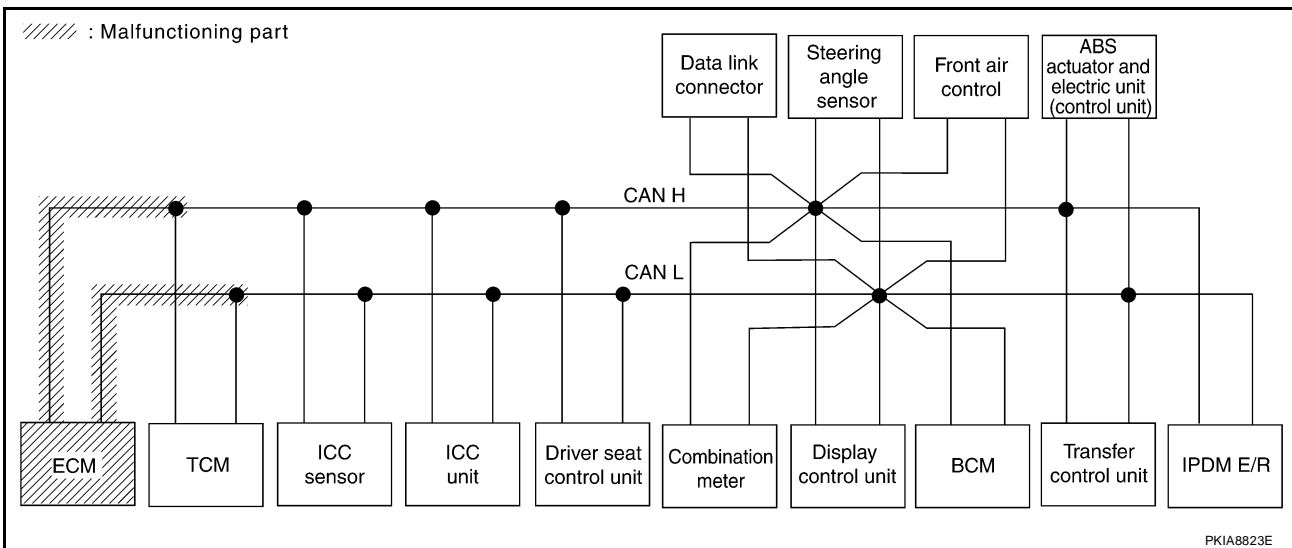

CAN SYSTEM (TYPE 4)


[CAN]

Case 7

Check TCM circuit. Refer to [LAN-160, "TCM Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UN KN ✓WN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UN KN ✓WN	—	—	UN KN ✓WN	UN KN ✓WN	—	—	—	—	UN KN ✓WN	UN KN ✓WN	—
ICC	—	NG	UNKWN	UNKWN	UN KN ✓WN	UNKWN	—	—	—	UNKWN	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UN KN ✓WN	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UN KN ✓WN	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UN KN ✓WN	—	—	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	—

SKIB3389E

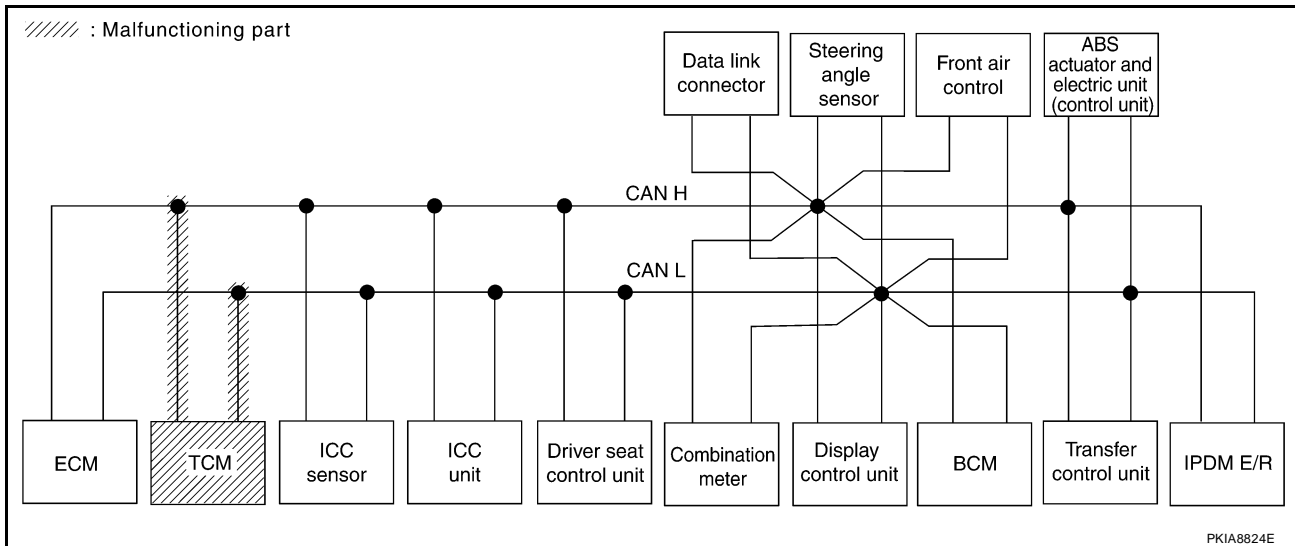

PKIA8824E

CAN SYSTEM (TYPE 4)


[CAN]

Case 8

Check ICC sensor circuit. Refer to [LAN-161, "ICC Sensor Circuit Check"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	—

SKIB3390E

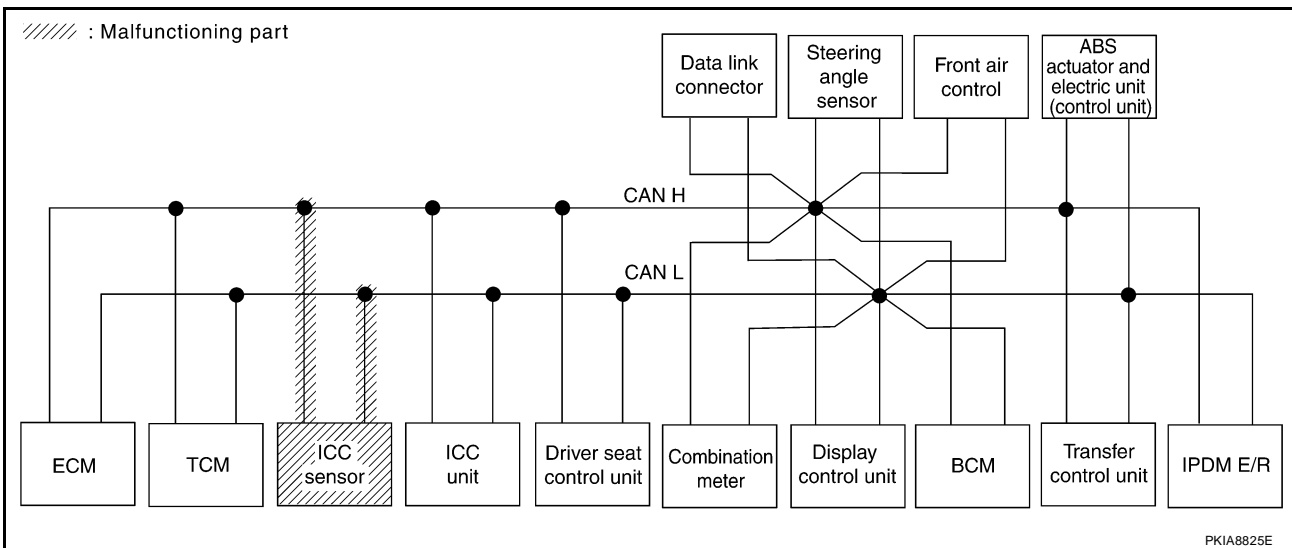

PKIA8825E

CAN SYSTEM (TYPE 4)


[CAN]

Case 9

Check ICC unit circuit. Refer to [LAN-161, "ICC Unit Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR														
		Initial diagnosis	Transmit diagnosis	Receive diagnosis												
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R	
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	UNKWN	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	UNKWN	—	
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—	
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7	
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN	
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—	
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—	
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	UNKWN	—	—	
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	—	

SKIB3391E

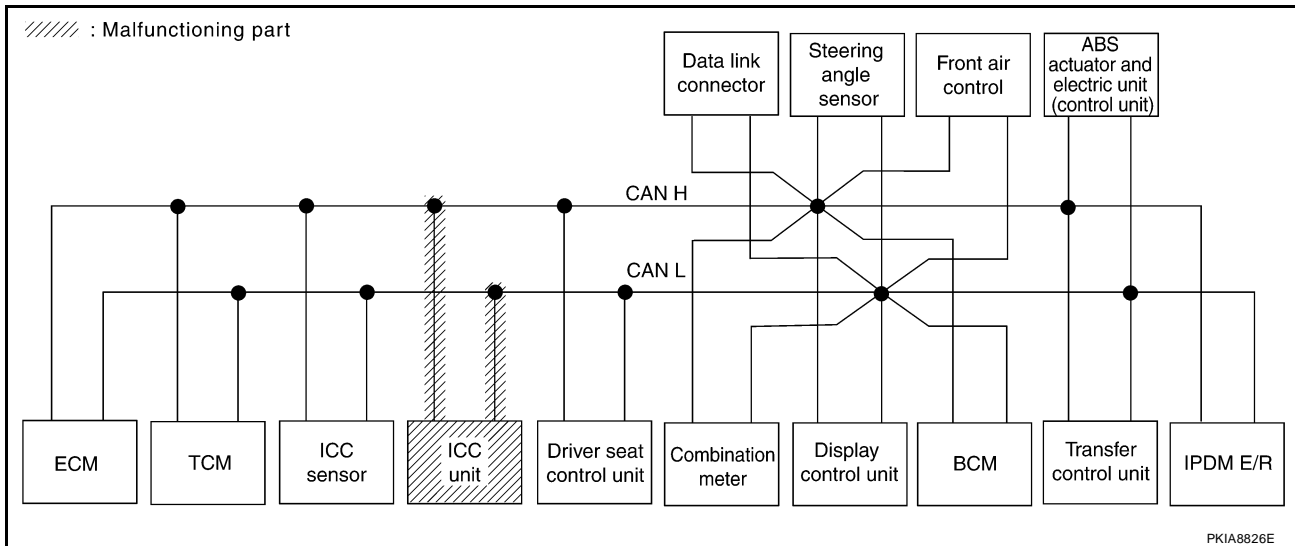

PKIA8826E

CAN SYSTEM (TYPE 4)


[CAN]

Case 10

Check driver seat control unit circuit. Refer to [LAN-162, "Driver Seat Control Unit Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	UNKWN	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	—	UNKWN	—	—	—	—

SKIB3392E

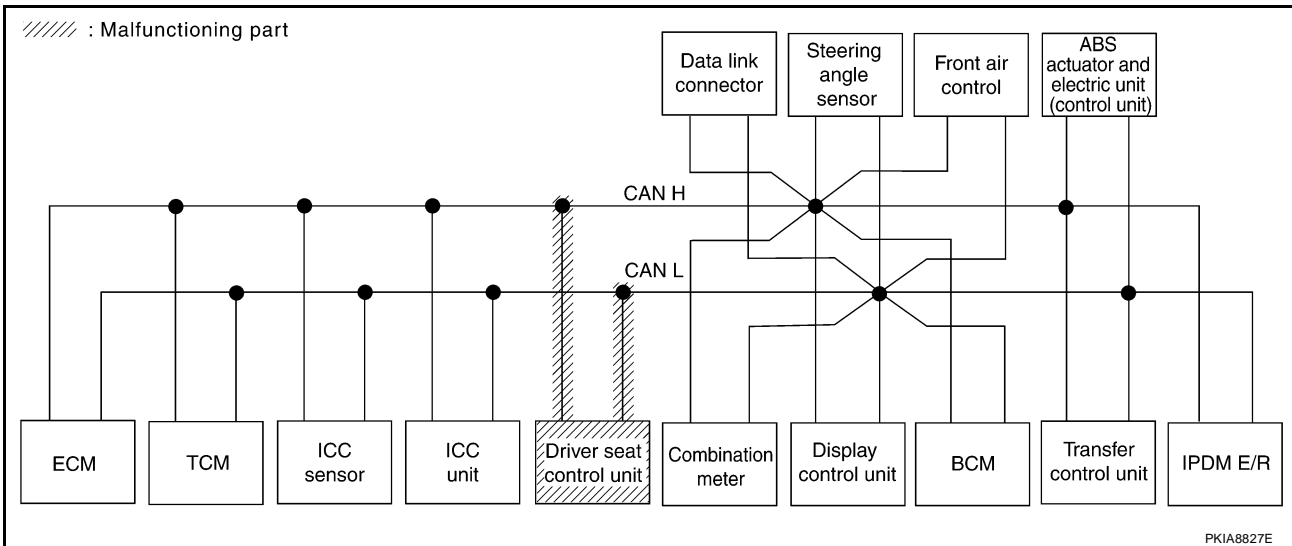

PKIA8827E

CAN SYSTEM (TYPE 4)


[CAN]

Case 11

Check combination meter circuit. Refer to [LAN-162, "Combination Meter Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UN ✓ KN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UN ✓ KN	—	—	—	—	UNKWN	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UN ✓ KN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UN ✓ KN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	—

SKIB3393E

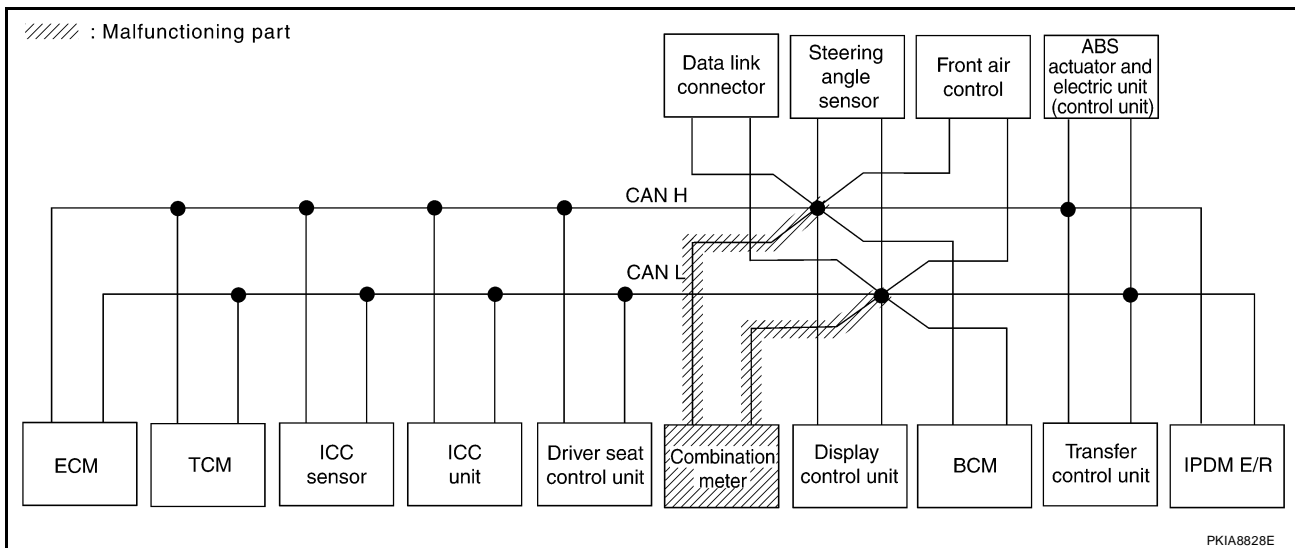


PKIA8828E

Case 12

Check display control unit circuit. Refer to [LAN-163, "Display Control Unit Circuit Check"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	UNKWN	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CINC 1 ✓	CAN CINC 3 ✓	—	—	—	CAN CINC 5 ✓	—	CAN CINC 2 ✓	—	CAN CINC 4 ✓	—	—	CAN CINC 7 ✓
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN ✓	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	—	UNKWN	—	—	—	—

SKIB3394E

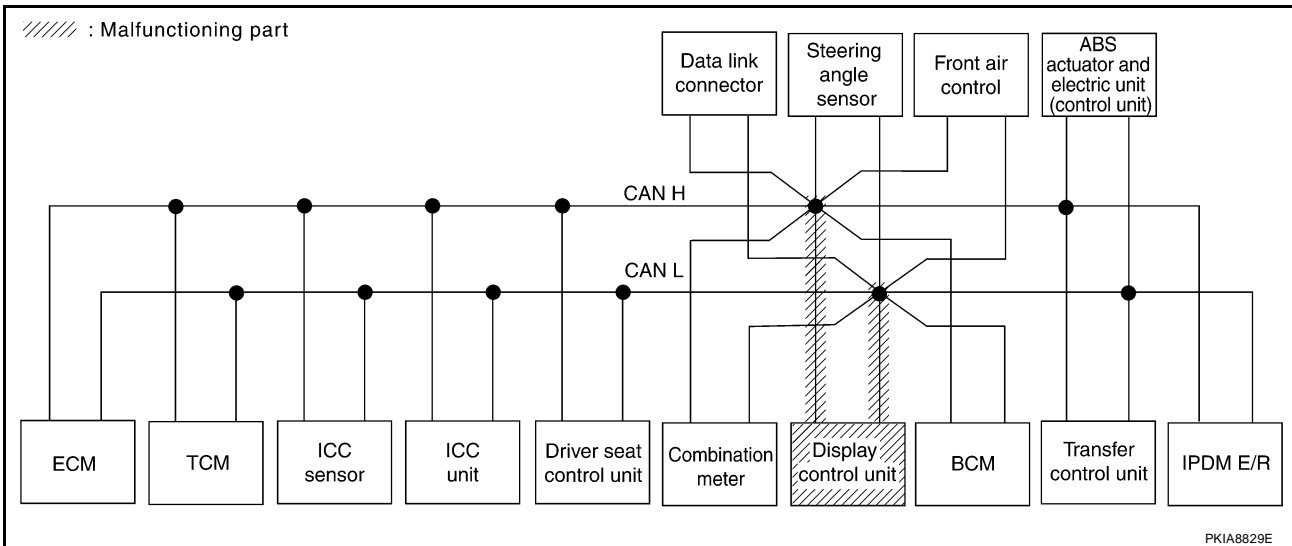

CAN SYSTEM (TYPE 4)


[CAN]

Case 13

Check BCM circuit. Refer to [LAN-163, "BCM Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR														
		Initial diagnosis	Transmit diagnosis	Receive diagnosis												
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R	
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	UNKWN	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	UNKWN	—	
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—	
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7	
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN	
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—	
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—	
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	UNKWN	—	—	
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	—	

SKIB3395E

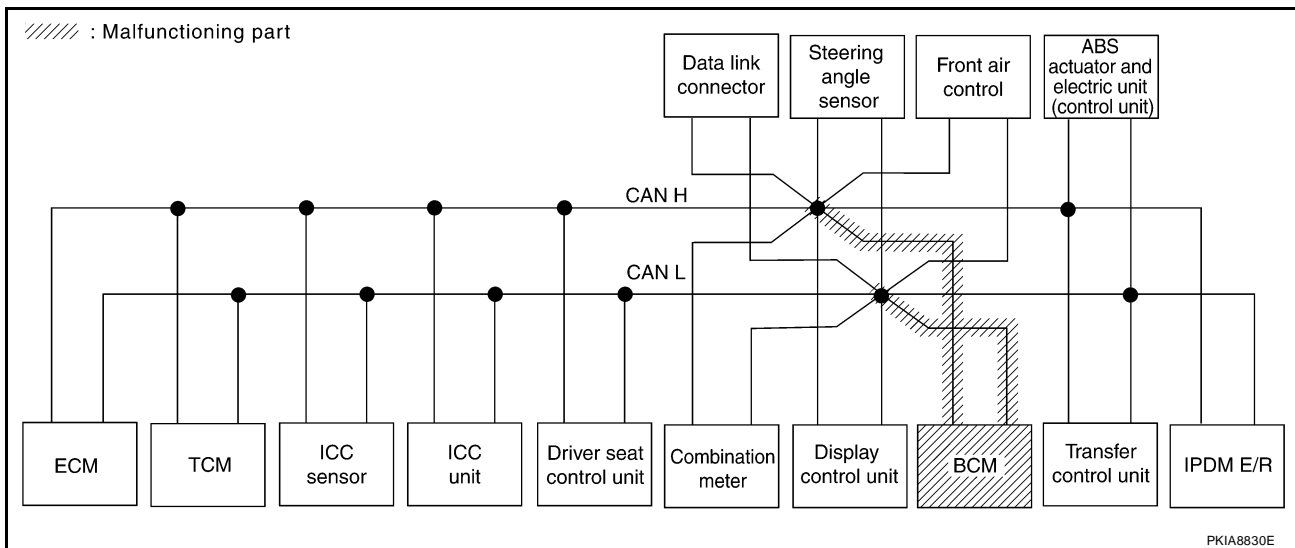


PKIA8830E

Case 14

Check data link connector circuit. Refer to [LAN-164, "Data Link Connector Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	UNKWN	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	—	UNKWN	—	—	—	—

SKIB3396E

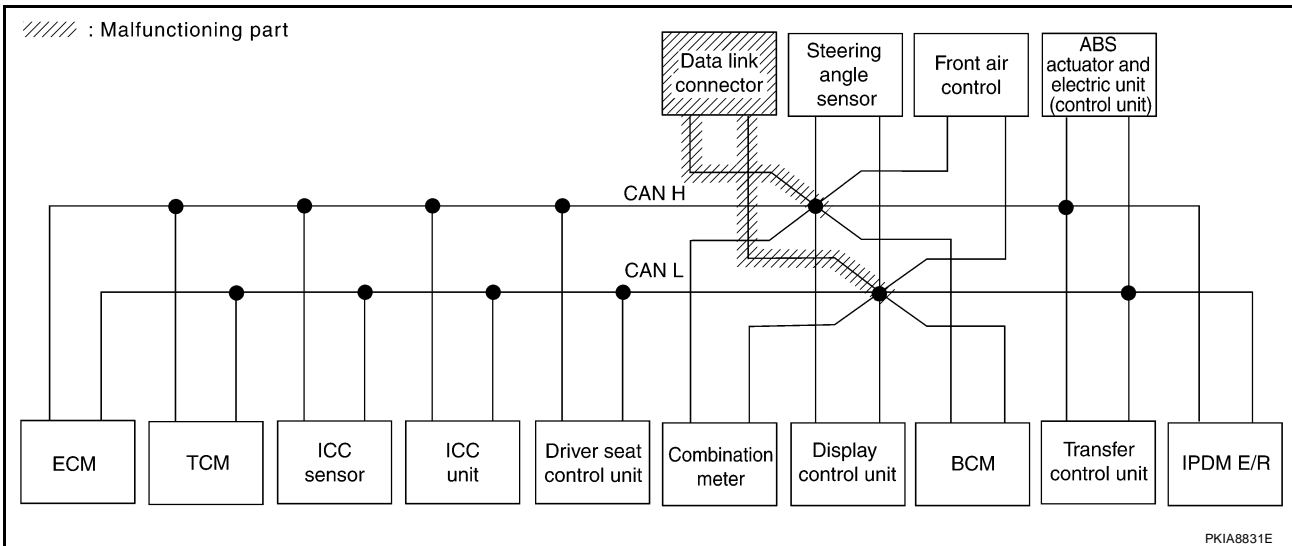

CAN SYSTEM (TYPE 4)


[CAN]

Case 15

Check steering angle sensor circuit. Refer to [LAN-164. "Steering Angle Sensor Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	—

SKIB3397E

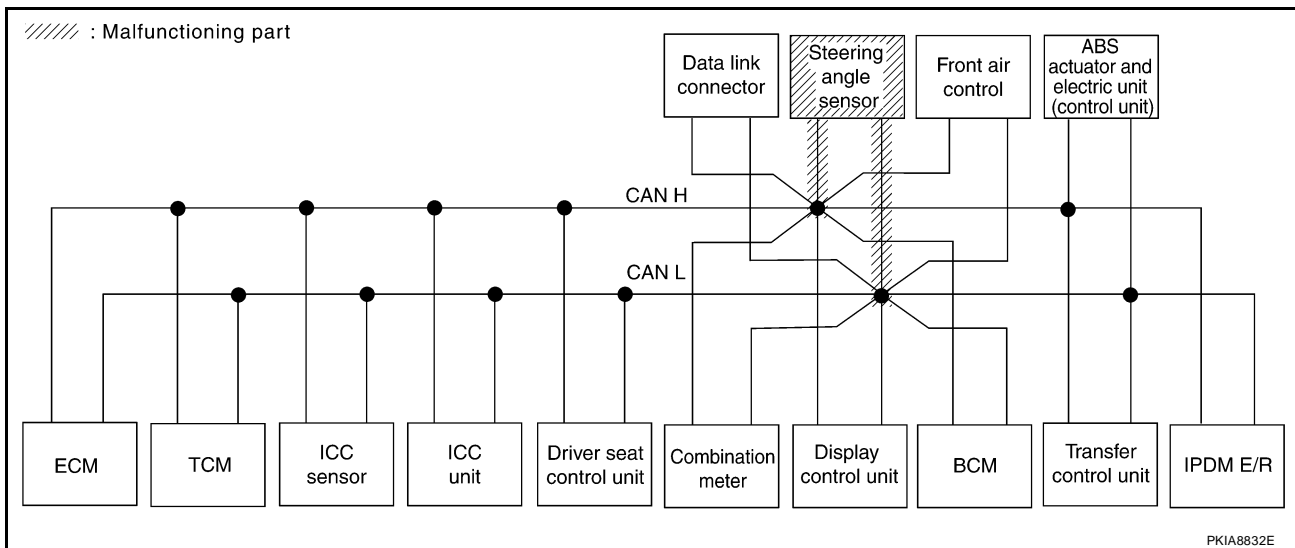


PKIA8832E

Case 16

Check front air control circuit. Refer to [LAN-165, "Front Air Control Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	UNKWN	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	—	UNKWN	—	—	—	—

SKIB3398E

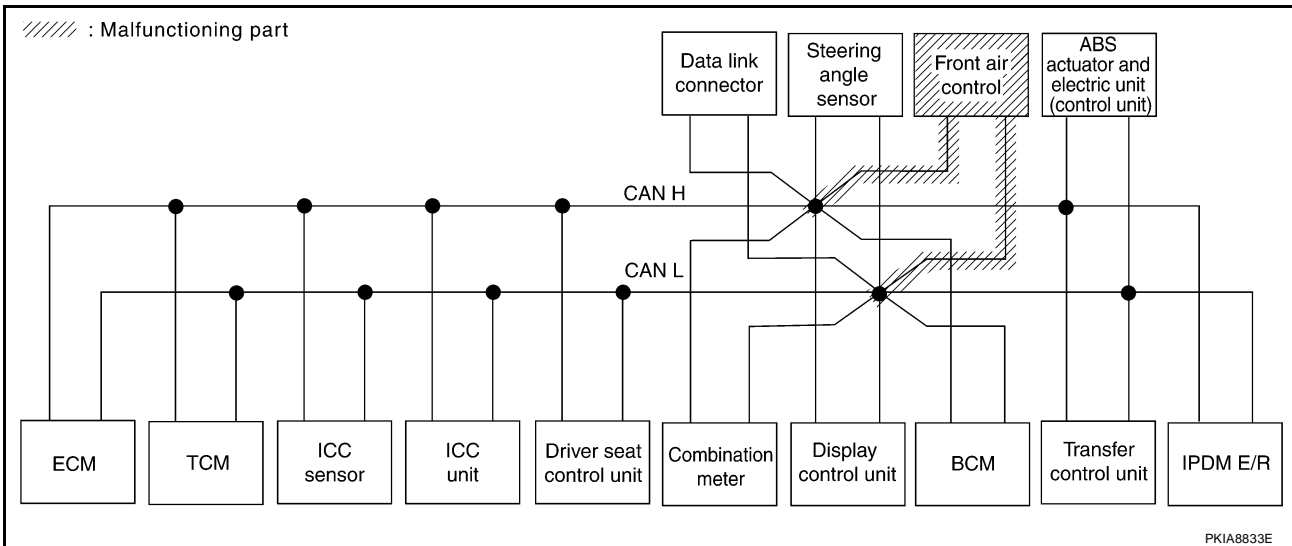

CAN SYSTEM (TYPE 4)


[CAN]

Case 17

Check transfer control unit circuit. Refer to [LAN-165, "Transfer Control Unit Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	—

SKIB3399E

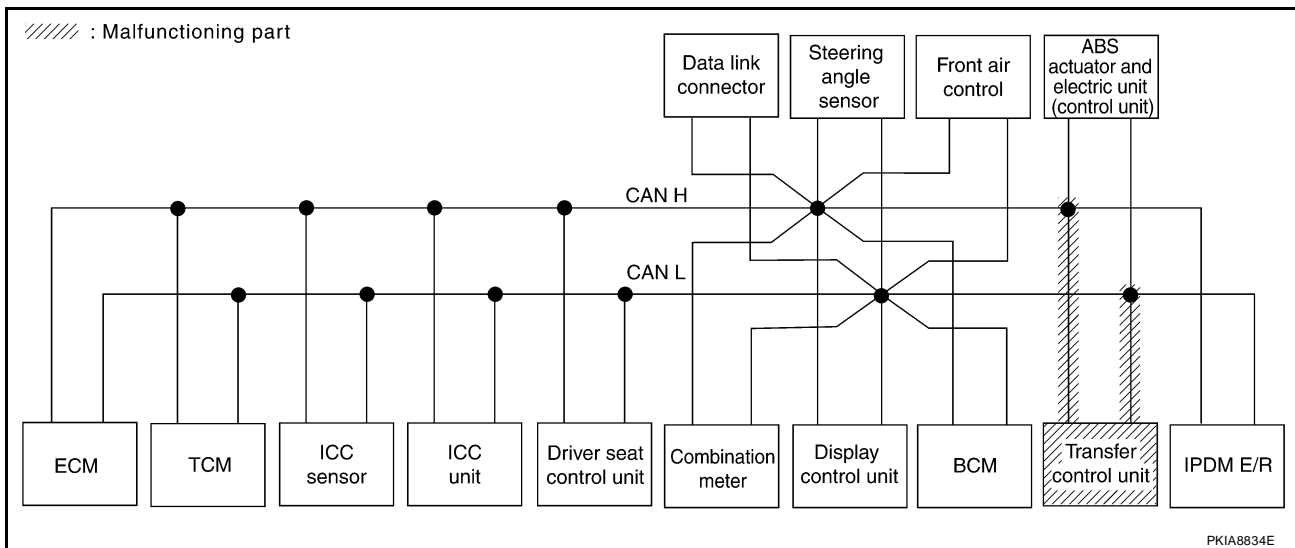

PKIA8834E

CAN SYSTEM (TYPE 4)


[CAN]

Case 18

Check ABS actuator and electric unit (control unit) circuit. Refer to [LAN-166, "ABS Actuator and Electric Unit \(Control Unit\) Circuit Check"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	—

SKIB3400E

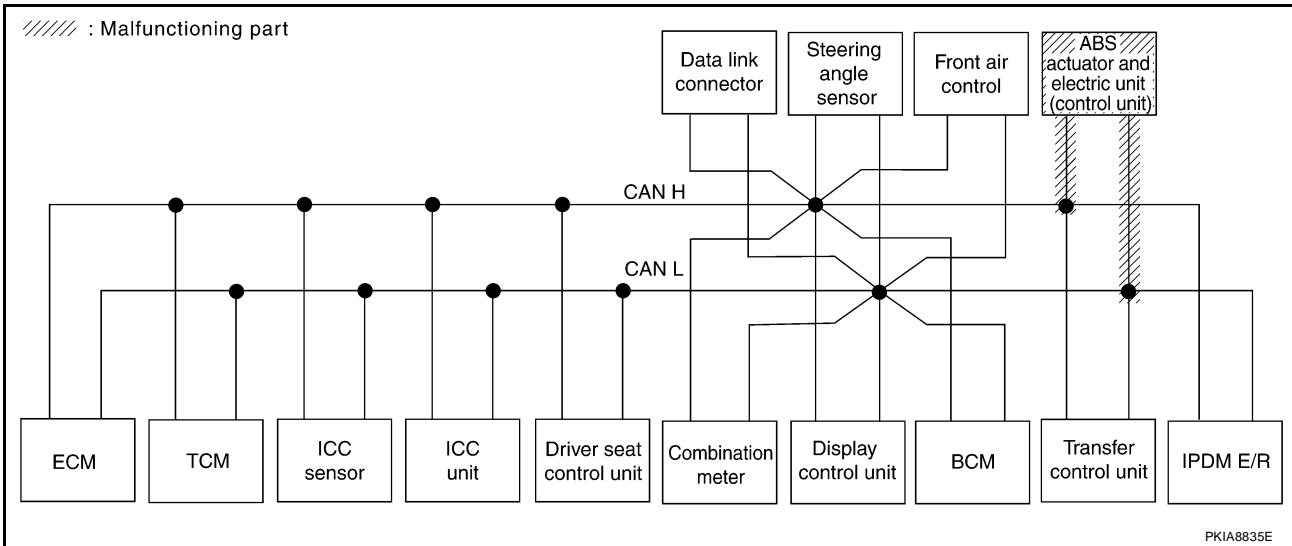

CAN SYSTEM (TYPE 4)


[CAN]

Case 19

Check IPDM E/R circuit. Refer to [LAN-166, "IPDM E/R Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR															
		Initial diagnosis	Transmit diagnosis	Receive diagnosis													
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R		
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	UNKWN	—	UNKWN	UNKWN	UNKWN	✓
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	UNKWN	—	—	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	—	CAN CIRC 7	✓
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	—	UNKWN	✓
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—	—	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	UNKWN	—	—	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	—	—	—

SKIB3401E

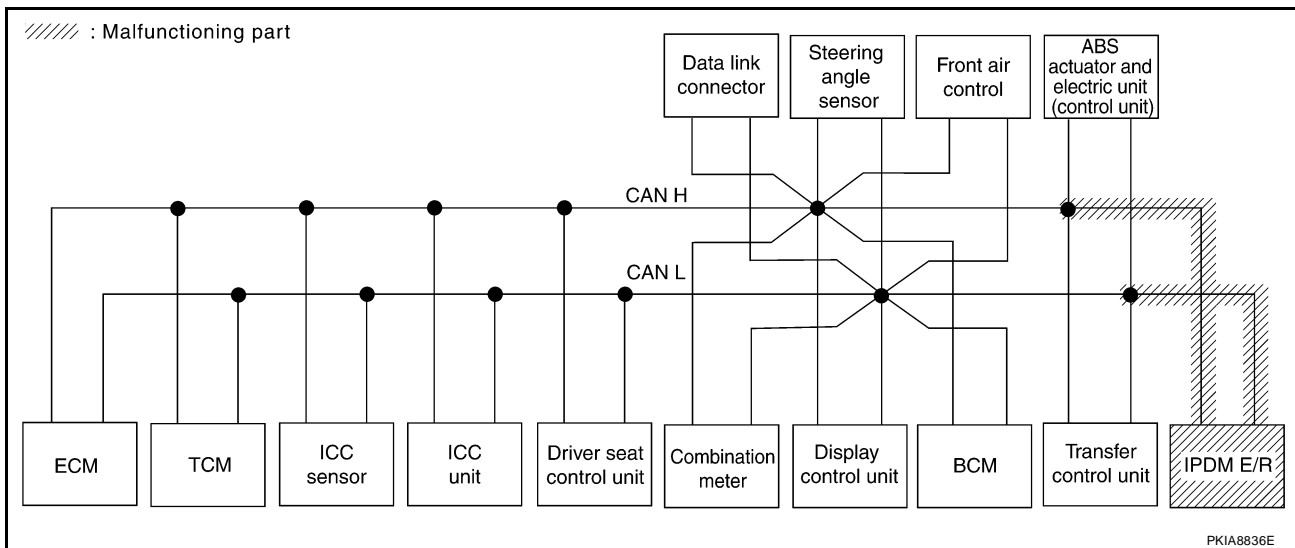

PKIA8836E

CAN SYSTEM (TYPE 4)

[CAN]

Case 20

Check CAN communication circuit. Refer to [LAN-167, "CAN Communication Circuit Check"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN ✓	—	UNKWN ✓	—	UNKWN ✓	UNKWN ✓	—	UNKWN ✓	—	—	UNKWN ✓	UNKWN ✓	UNKWN ✓
A/T	—	NG	UNKWN	UNKWN ✓	—	—	UNKWN ✓	UNKWN ✓	—	—	—	—	UNKWN ✓	UNKWN ✓	—
ICC	—	NG	UNKWN ✓	UNKWN ✓	UNKWN ✓	UNKWN ✓	—	—	—	UNKWN ✓	—	—	—	UNKWN ✓	—
AUTO DRIVE POS.	No indication ✓	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1 ✓	CAN CIRC 3 ✓	—	—	—	CAN CIRC 5 ✓	—	CAN CIRC 2 ✓	—	CAN CIRC 4 ✓	—	—	CAN CIRC 7 ✓
BCM	No indication ✓	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication ✓	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication ✓	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG ✓	UNKWN ✓	UNKWN ✓	UNKWN ✓	—	—	—	—	—	UNKWN ✓	—	UNKWN ✓	—	—
IPDM E/R	No indication ✓	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	—

SKIB3402E

Case 21

Check IPDM E/R ignition relay circuit continuously sticks "OFF". Refer to [LAN-167, "IPDM E/R Ignition Relay Circuit Check"](#).

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN ✓	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN ✓	UNKWN
A/T	—	NG	UNKWN	UNKWN	—	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN ✓	UNKWN	—	—	—	UNKWN	—	—	—	UNKWN ✓	—
AUTO DRIVE POS.	No indication ✓	NG	UNKWN	—	UNKWN ✓	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1 ✓	CAN CIRC 3 ✓	—	—	—	CAN CIRC 5 ✓	—	CAN CIRC 2 ✓	—	CAN CIRC 4 ✓	—	—	CAN CIRC 7 ✓
BCM	No indication ✓	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication ✓	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN ✓	—
ALL MODE AWD/4WD	No indication ✓	—	UNKWN	UNKWN	UNKWN ✓	—	—	—	—	—	UNKWN	—	—	UNKWN ✓	—
ABS	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	UNKWN	—	—
IPDM E/R	No indication ✓	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	—

SKIB3403E

Case 22

Check IPDM E/R ignition relay circuit continuously sticks "ON". Refer to [LAN-167, "IPDM E/R Ignition Relay Circuit Check"](#) .

SELECT SYSTEM screen		CAN DIAG SUPPORT MNTR													
		Initial diagnosis	Transmit diagnosis	Receive diagnosis											
				ECM	TCM	ICC SENSOR	ICC /e4WD	METER /M&A	DISPLAY	BCM /SEC	STRG	Front air control	AWD/4WD /e4WD	VDC/TCS /ABS	IPDM E/R
ENGINE	—	NG	UNKWN	—	UNKWN	—	UNKWN	UNKWN	—	UNKWN	—	—	UNKWN	UNKWN	UNKWN
A/T	—	NG	UNKWN	✓	—	—	✓	✓	—	—	—	—	✓	UNKWN	—
ICC	—	NG	UNKWN	UNKWN	UNKWN	—	—	—	—	UNKWN	—	—	—	UNKWN	—
AUTO DRIVE POS.	No indication	NG	UNKWN	—	UNKWN	—	—	UNKWN	—	UNKWN	—	—	—	—	—
Display control unit	—	CAN COMM	CAN CIRC 1	CAN CIRC 3	—	—	—	CAN CIRC 5	—	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 7
BCM	No indication	NG	UNKWN	UNKWN	—	—	—	UNKWN	—	—	—	—	—	—	UNKWN
HVAC	No indication	—	UNKWN	UNKWN	—	—	—	—	UNKWN	UNKWN	—	—	—	UNKWN	—
ALL MODE AWD/4WD	No indication	—	UNKWN	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	UNKWN	—
ABS	—	NG	UNKWN	✓	UNKWN	—	—	—	—	—	✓	—	✓	—	—
IPDM E/R	No indication	—	UNKWN	UNKWN	—	—	—	—	—	UNKWN	—	—	—	—	—

SKIB3404E

Circuit Check Between TCM and ICC Sensor

UKS001NU

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector F33
 - Harness connector E19

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector and harness connector F33.
2. Check continuity between A/T assembly harness connector F9 terminals 3 (L), 8 (P) and harness connector F33 terminals 12 (L), 11 (P).


3 (L) - 12 (L) : Continuity should exist.

8 (P) - 11 (P) : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

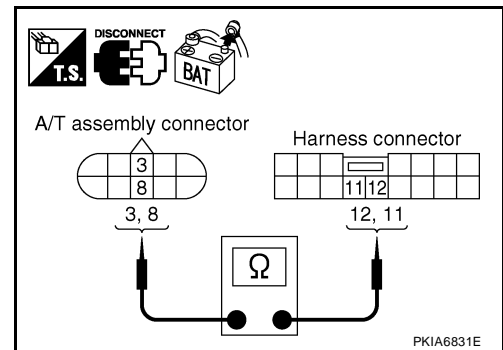


3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ICC sensor connector.
2. Check continuity between harness connector E19 terminals 12 (L), 11 (P) and ICC sensor connector E42 terminals 2 (L), 3 (P).

12 (L) - 2 (L) : Continuity should exist.
11 (P) - 3 (P) : Continuity should exist.

OK or NG

- OK >> Connect all connectors and diagnose again. Refer to [LAN-131, "Work Flow"](#) .
 NG >> Repair harness.

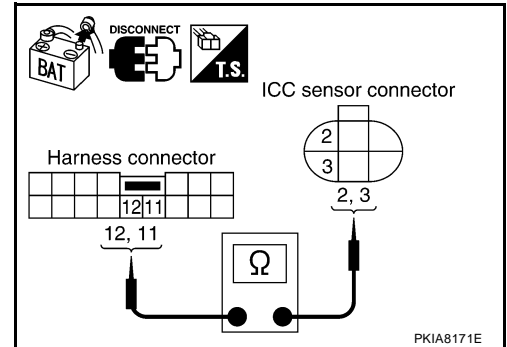

Circuit Check Between ICC Sensor and ICC Unit

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E34
 - Harness connector B40

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ICC sensor connector and harness connector E34.
2. Check continuity between ICC sensor connector E42 terminals 2 (L), 3 (P) and harness connector E34 terminals 24 (L), 23 (P).

2 (L) - 24 (L) : Continuity should exist.
3 (P) - 23 (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

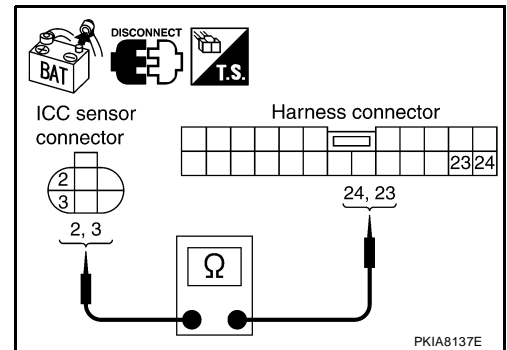


3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ICC unit connector.
2. Check continuity between harness connector B40 terminals 24 (L), 23 (P) and ICC unit connector B13 terminals 14 (L), 5 (P).

24 (L) - 14 (L) : Continuity should exist.
23 (P) - 5 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-131, "Work Flow"](#) .
 NG >> Repair harness.

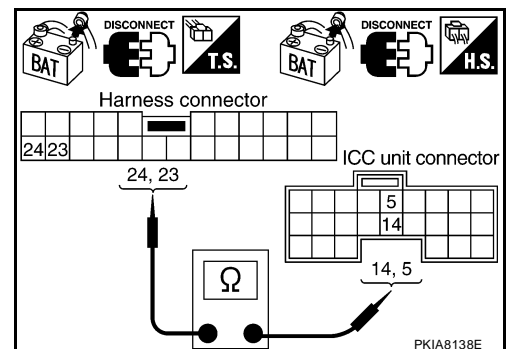

Circuit Check Between ICC Unit and Driver Seat Control Unit

1. CHECK CONNECTOR


1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect ICC unit connector and driver seat control unit connector.
4. Check continuity between ICC unit connector B13 terminals 14 (L), 5 (P) and driver seat control unit connector P2 terminals 3 (L), 19 (P).

14 (L) - 3 (L) : Continuity should exist.

5 (P) - 19 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-131, "Work Flow"](#).
- NG >> Repair harness.

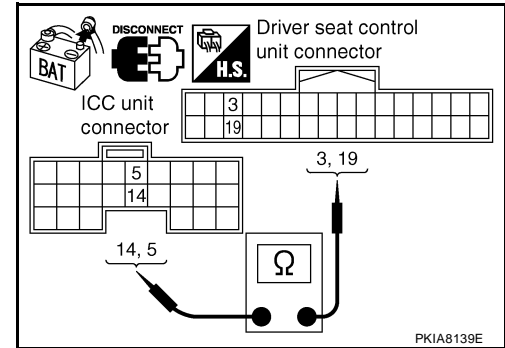

Circuit Check Between Driver Seat Control Unit and Data Link Connector

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B69
 - Harness connector M40

OK or NG

- OK >> GO TO 2.
- NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect driver seat control unit connector and harness connector B69.
2. Check continuity between driver seat control unit harness connector P2 terminals 3 (L), 19 (P) and harness connector B69 terminals 51J (L), 52J (P).

3 (L) - 51J (L) : Continuity should exist.

19 (P) - 52J (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness.

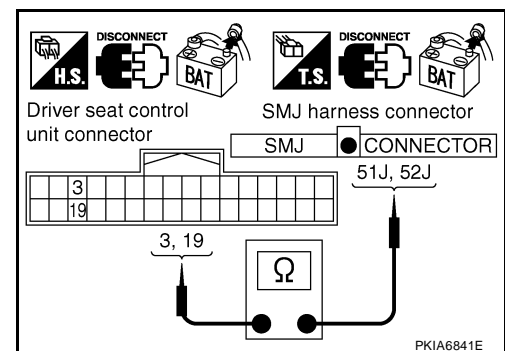

3. CHECK HARNESS FOR OPEN CIRCUIT


Check continuity between harness connector M40 terminals 51J (L), 52J (P) and data link connector M22 terminals 6 (L), 14 (P).

51J (L) - 6 (L) : Continuity should exist.

52J (P) - 14 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-131, "Work Flow"](#).
- NG >> Repair harness.

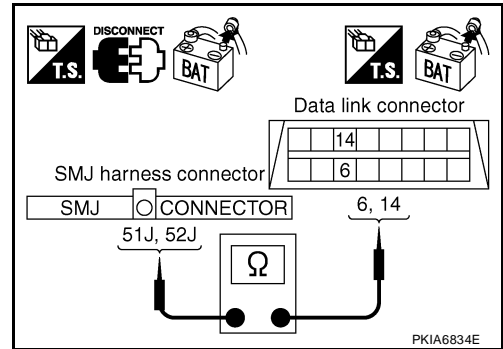

Circuit Check Between Data Link Connector and IPDM E/R

UKS001NW

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M31
 - Harness connector E152

OK or NG

- OK >> GO TO 2.
- NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect harness connector M31.
2. Check continuity between data link connector M22 terminals 6 (L), 14 (P) and harness connector M31 terminals 31G (L), 42G (P).

6 (L) - 31G (L) : Continuity should exist.

14 (P) - 42G (P) : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness.

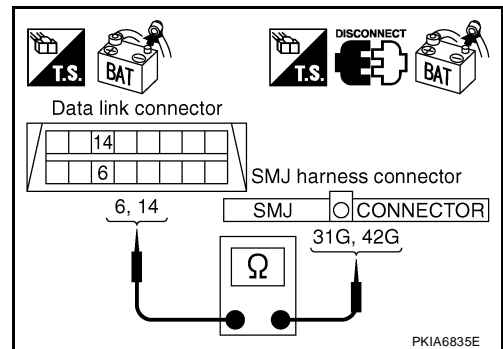

3. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect IPDM E/R connector.
2. Check continuity between harness connector E152 terminals 31G (L), 42G (P) and IPDM E/R harness connector E122 terminals 39 (L), 40 (P).

31G (L) - 39 (L) : Continuity should exist.

42G (P) - 40 (P) : Continuity should exist.

OK or NG

- OK >> Connect all the connectors and diagnose again. Refer to [LAN-131, "Work Flow"](#).
- NG >> Repair harness.

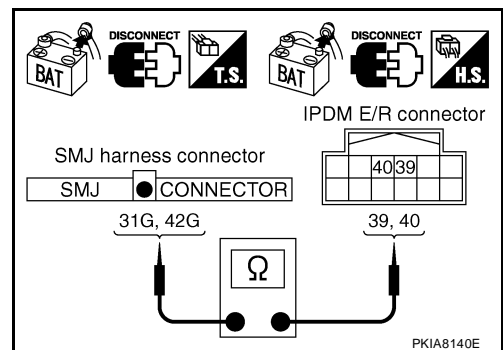

ECM Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (control module side and harness side).
 - ECM connector
 - Harness connector E19
 - Harness connector F33

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ECM connector.
2. Check resistance between ECM harness connector E16 terminals 94 (L) and 86 (P).

94 (L) - 86 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace ECM.
 NG >> Repair harness between ECM and A/T assembly.

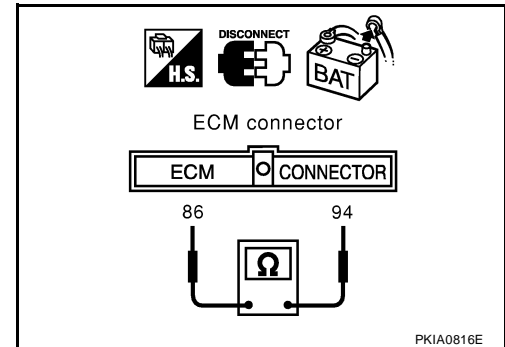**TCM Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of A/T assembly for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector.
2. Check resistance between A/T assembly harness connector F9 terminals 3 (L) and 8 (P).

3 (L) - 8 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace control valve with TCM.
 NG >> Repair harness between A/T assembly and harness connector F33.

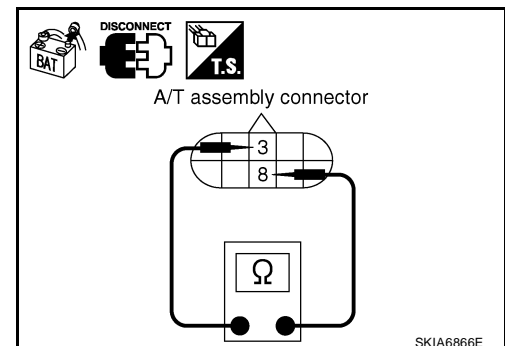

ICC Sensor Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ICC sensor for damage, bend and loose connection (sensor side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ICC sensor connector.
2. Check resistance between ICC sensor harness connector E42 terminals 2 (L) and 3 (P).

2 (L) - 3 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace ICC sensor.
 NG >> Repair harness between ICC sensor and harness connector E34.

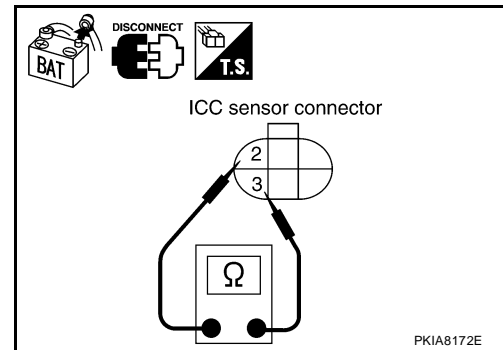**ICC Unit Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ICC unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ICC unit connector.
2. Check resistance between ICC unit harness connector B13 terminals 14 (L) and 5 (P).

14 (L) - 5 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace ICC unit.
 NG >> Repair harness between ICC unit and harness connector B69.

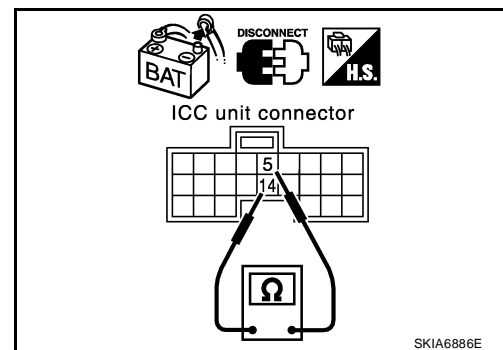

Driver Seat Control Unit Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connectors for damage, bend and loose connection (control unit side and harness side).
 - Driver seat control unit connector
 - Harness connector P1
 - Harness connector B37

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect driver seat control unit connector.
2. Check resistance between driver seat control unit harness connector P2 terminals 3 (L) and 19 (P).

3 (L) - 19 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace driver seat control unit.
 NG >> Repair harness between driver seat control unit and harness connector B69.

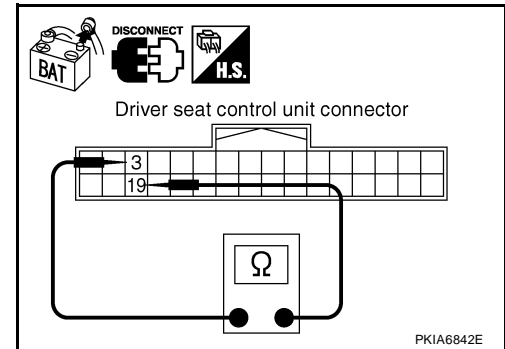**Combination Meter Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of combination meter for damage, bend and loose connection (meter side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect combination meter connector.
2. Check resistance between combination meter harness connector M24 terminals 11 (L) and 12 (P).

11 (L) - 12 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace combination meter.
 NG >> Repair harness between combination meter and data link connector.

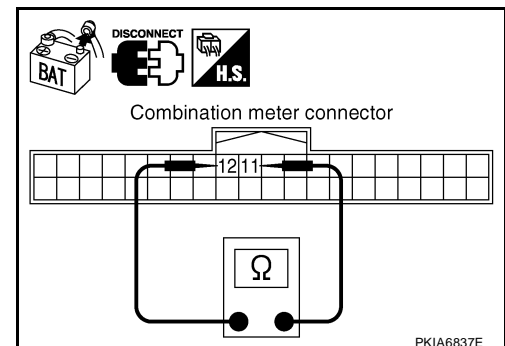

Display Control Unit Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of display control unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect display control unit connector.
2. Check resistance between display control unit harness connector M95 terminals 25 (L) and 26 (P).

25 (L) - 26 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace display control unit.
 NG >> Repair harness between display control unit and data link connector.

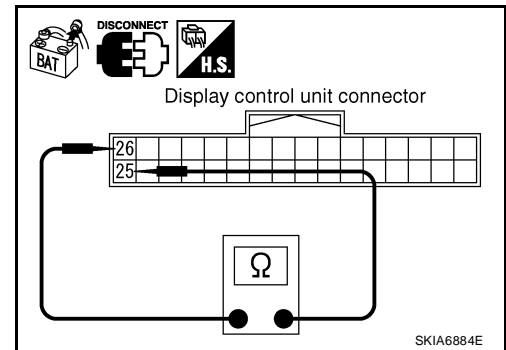**BCM Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of BCM for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect BCM connector.
2. Check resistance between BCM harness connector M18 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation of BCM"](#).
 NG >> Repair harness between BCM and data link connector.

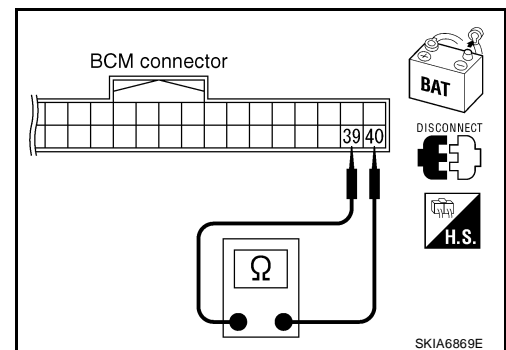

Data Link Connector Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of data link connector for damage, bend and loose connection (connector side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

Check resistance between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Diagnose again. Refer to [LAN-131, "Work Flow"](#) .
 NG >> Repair harness between data link connector and combination meter.

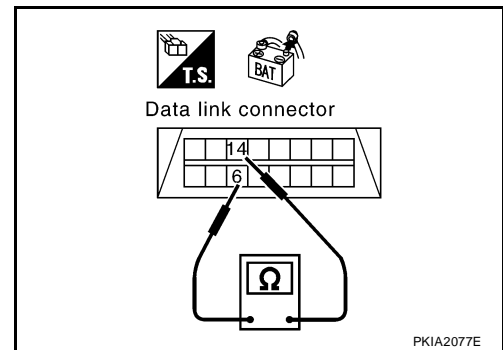**Steering Angle Sensor Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of steering angle sensor for damage, bend and loose connection (sensor side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect steering angle sensor connector.
2. Check resistance between steering angle sensor harness connector M47 terminals 3 (L) and 4 (P).

3 (L) - 4 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace steering angle sensor.
 NG >> Repair harness between steering angle sensor and data link connector.

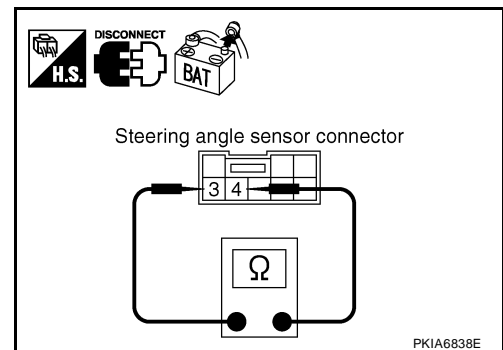

Front Air Control Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of front air control for damage, bend and loose connection (unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect front air control connector.
2. Check resistance between front air control harness connector M50 terminals 34 (L) and 35 (P).

34 (L) - 35 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace front air control.
 NG >> Repair harness between front air control and data link connector.

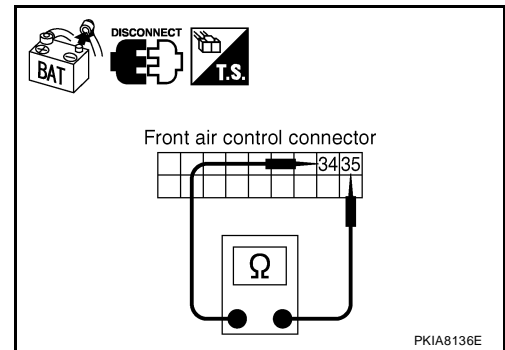**Transfer Control Unit Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of transfer control unit for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect transfer control unit connector.
2. Check resistance between transfer control unit harness connector E142 terminals 7 (L) and 8 (P).

7 (L) - 8 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace transfer control unit.
 NG >> Repair harness between transfer control unit and harness connector E152.

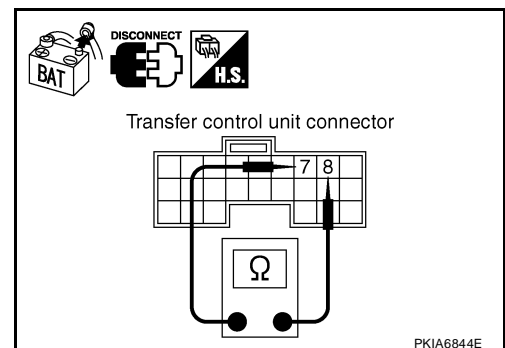

ABS Actuator and Electric Unit (Control Unit) Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ABS actuator and electric unit (control unit) for damage, bend and loose connection (control unit side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check resistance between ABS actuator and electric unit (control unit) harness connector E125 terminals 11 (L) and 15 (P).

11 (L) - 15 (P) : Approx. 54 - 66 Ω

OK or NG

- OK >> Replace ABS actuator and electric unit (control unit).
 NG >> Repair harness between ABS actuator and electric unit (control unit) and harness connector E152.

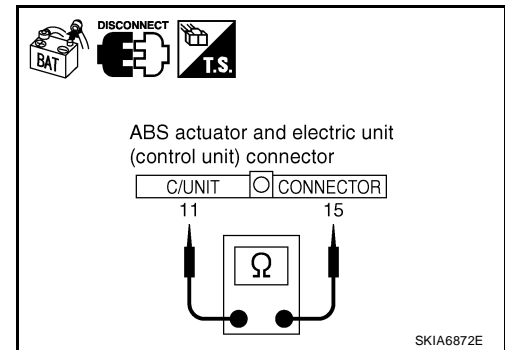**IPDM E/R Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of IPDM E/R for damage, bend and loose connection (control module side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check resistance between IPDM E/R harness connector E122 terminals 39 (L) and 40 (P).

39 (L) - 40 (P) : Approx. 108 - 132 Ω

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness between IPDM E/R and harness connector E152.

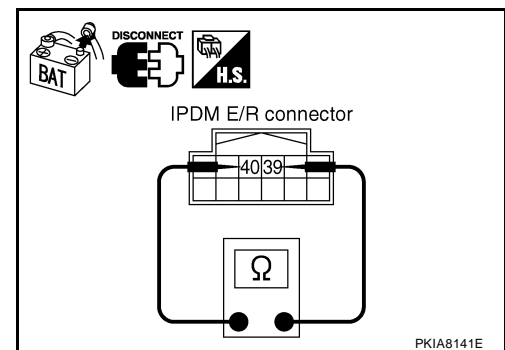

CAN Communication Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect the following module and control unit connectors and check terminals for deformation, disconnection, looseness or damage.
 - ECM
 - A/T assembly
 - ICC sensor
 - ICC unit
 - Driver seat control unit
 - Combination meter
 - Display control unit
 - BCM
 - Steering angle sensor
 - Front air control
 - Transfer control unit
 - ABS actuator and electric unit (control unit)
 - IPDM E/R

OK or NG

- OK >> GO TO 2.
 NG >> Repair or replace as necessary.


2. CHECK HARNESS FOR SHORT CIRCUIT

With all module and control unit connectors disconnected, check continuity between data link connector M22 terminals 6 (L) and 14 (P).

6 (L) - 14 (P) : Continuity should not exist.

OK or NG

- OK >> GO TO 3.
 NG >> Repair harness.

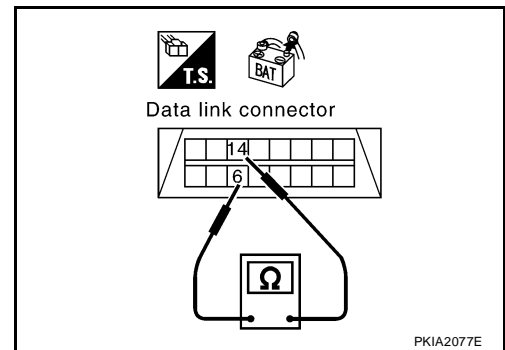
**3. CHECK HARNESS FOR SHORT CIRCUIT**

Check continuity between data link connector M22 terminals 6 (L), 14 (P) and ground.

6 (L) - Ground : Continuity should not exist.
14 (P) - Ground : Continuity should not exist.

OK or NG

- OK >> Check ECM and IPDM E/R. Refer to [LAN-168, "ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION"](#).
 NG >> Repair harness.

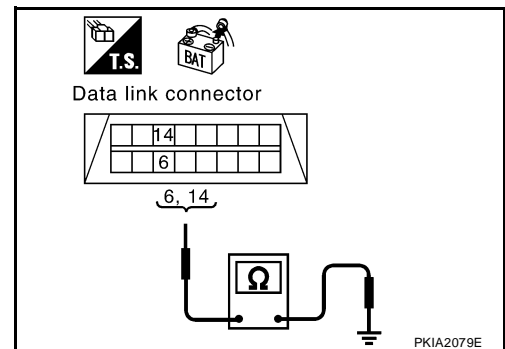**IPDM E/R Ignition Relay Circuit Check**

Check the following. If no malfunction is found, replace the IPDM E/R.

- IPDM E/R power supply circuit. Refer to [PG-26, "IPDM E/R Power/Ground Circuit Inspection"](#).

- Ignition power supply circuit. Refer to [PG-13, "IGNITION POWER SUPPLY — IGNITION SW. IN ON AND/OR START"](#) .

Component Inspection

UKS0010B

ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION

- Remove ECM and IPDM E/R from vehicle.
- Check resistance between ECM terminals 94 and 86.
- Check resistance between IPDM E/R terminals 39 and 40.

Unit	Terminal	Resistance value (Ω) (Approx.)
ECM	94 - 86	108 - 132
IPDM E/R	39 - 40	

