

A
B
C
D
E
F
G
H
I
J
L
M

DI

SECTION

DRIVER INFORMATION SYSTEM

CONTENTS

<p>METERS AND GAUGES 3</p> <p>Component Parts and Harness Connector Location... 3</p> <p>System Description 4</p> <p> UNIFIED CONTROL METER 4</p> <p> HOW TO CHANGE THE DISPLAY FOR ODO/ TRIP METER 4</p> <p> POWER SUPPLY AND GROUND CIRCUIT 4</p> <p> WATER TEMPERATURE GAUGE 4</p> <p> TACHOMETER 5</p> <p> FUEL GAUGE 5</p> <p> SPEEDOMETER 5</p> <p>Combination Meter 6</p> <p> WITHOUT TACHOMETER 6</p> <p> WITH TACHOMETER (QG18DE MODELS) 7</p> <p> WITH TACHOMETER (QR25DE MODELS) 8</p> <p>Schematic 9</p> <p> WITHOUT TACHOMETER 9</p> <p> WITH TACHOMETER 10</p> <p>Wiring Diagram — METER — 11</p> <p> WITHOUT TACHOMETER 11</p> <p> WITH TACHOMETER (QG18DE MODELS) 12</p> <p> WITH TACHOMETER (QR25DE MODELS) 13</p> <p>Meter/Gauge Operation and Odo/Trip Meter Segment Check in Diagnosis Mode 14</p> <p> DIAGNOSIS FUNCTION 14</p> <p> HOW TO ALTERNATE DIAGNOSIS MODE 14</p> <p>Trouble Diagnoses 15</p> <p> PRELIMINARY CHECK 15</p> <p> SYMPTOM CHART 16</p> <p> POWER SUPPLY AND GROUND CIRCUIT CHECK 17</p> <p> INSPECTION/VEHICLE SPEED SENSOR 18</p> <p> INSPECTION/ENGINE REVOLUTION SIGNAL... 19</p> <p> INSPECTION/FUEL LEVEL SENSOR UNIT AND FUEL PUMP 20</p> <p> INSPECTION/THERMAL TRANSMITTER (QG18DE MODELS) 21</p> <p> INSPECTION/WATER TEMPERATURE</p>	<p> GAUGE (QR25DE MODELS) 22</p> <p> Electrical Components Inspection 23</p> <p> FUEL LEVEL SENSOR UNIT CHECK 23</p> <p> THERMAL TRANSMITTER CHECK (QG18DE MODELS) 23</p> <p> VEHICLE SPEED SENSOR SIGNAL CHECK ... 23</p> <p>WARNING LAMPS 24</p> <p> Schematic 24</p> <p> WITHOUT TACHOMETER 24</p> <p> WITH TACHOMETER 25</p> <p> Wiring Diagram — WARN — 26</p> <p> WITHOUT TACHOMETER 26</p> <p> WITH TACHOMETER 29</p> <p> Electrical Components Inspection 33</p> <p> FUEL WARNING LAMP OPERATION CHECK... 33</p> <p> OIL PRESSURE SWITCH CHECK 33</p> <p> DIODE CHECK 33</p> <p>WARNING CHIME 34</p> <p> Component Parts and Harness Connector Location.. 34</p> <p> System Description 35</p> <p> WITHOUT POWER DOOR LOCKS 35</p> <p> WITH POWER DOOR LOCKS 35</p> <p> Wiring Diagram — CHIME — 37</p> <p> WITHOUT POWER DOOR LOCKS 37</p> <p> WITH POWER DOOR LOCKS 38</p> <p> CONSULT-II Inspection Procedure (With Power Door Locks) 39</p> <p> “KEY WARN ALM”/“LIGHT WARN ALM”/“SEAT BELT ALM” 39</p> <p> CONSULT-II Application Items (With Power Door Locks) 40</p> <p> “KEY WARN ALARM” 40</p> <p> “LIGHT WARN ALM” 40</p> <p> “SEAT BELT ALM” 40</p> <p> Trouble Diagnoses (Without Power Door Locks) ... 41</p> <p> SYMPTOM CHART 41</p> <p> POWER SUPPLY AND GROUND CIRCUIT CHECK 41</p> <p> DIAGNOSTIC PROCEDURE 1 (LIGHTING SWITCH INPUT SIGNAL CHECK) 43</p>
---	--

DIAGNOSTIC PROCEDURE 2 (KEY SWITCH INSERT SIGNAL CHECK)	44	CHECK	47
DIAGNOSTIC PROCEDURE 3 (SEAT BELT BUCKLE SWITCH LH CHECK)	45	DIAGNOSTIC PROCEDURE 1 (LIGHTING SWITCH INPUT SIGNAL CHECK)	49
DIAGNOSTIC PROCEDURE 4	45	DIAGNOSTIC PROCEDURE 2 (KEY SWITCH INSERT SIGNAL CHECK)	50
Trouble Diagnoses (With Power Door Locks)	47	DIAGNOSTIC PROCEDURE 3 (SEAT BELT BUCKLE SWITCH LH CHECK)	51
SYMPTOM CHART	47	DIAGNOSTIC PROCEDURE 4	52
POWER SUPPLY AND GROUND CIRCUIT			


METERS AND GAUGES

METERS AND GAUGES

PF24814

Component Parts and Harness Connector Location

EKS002B3

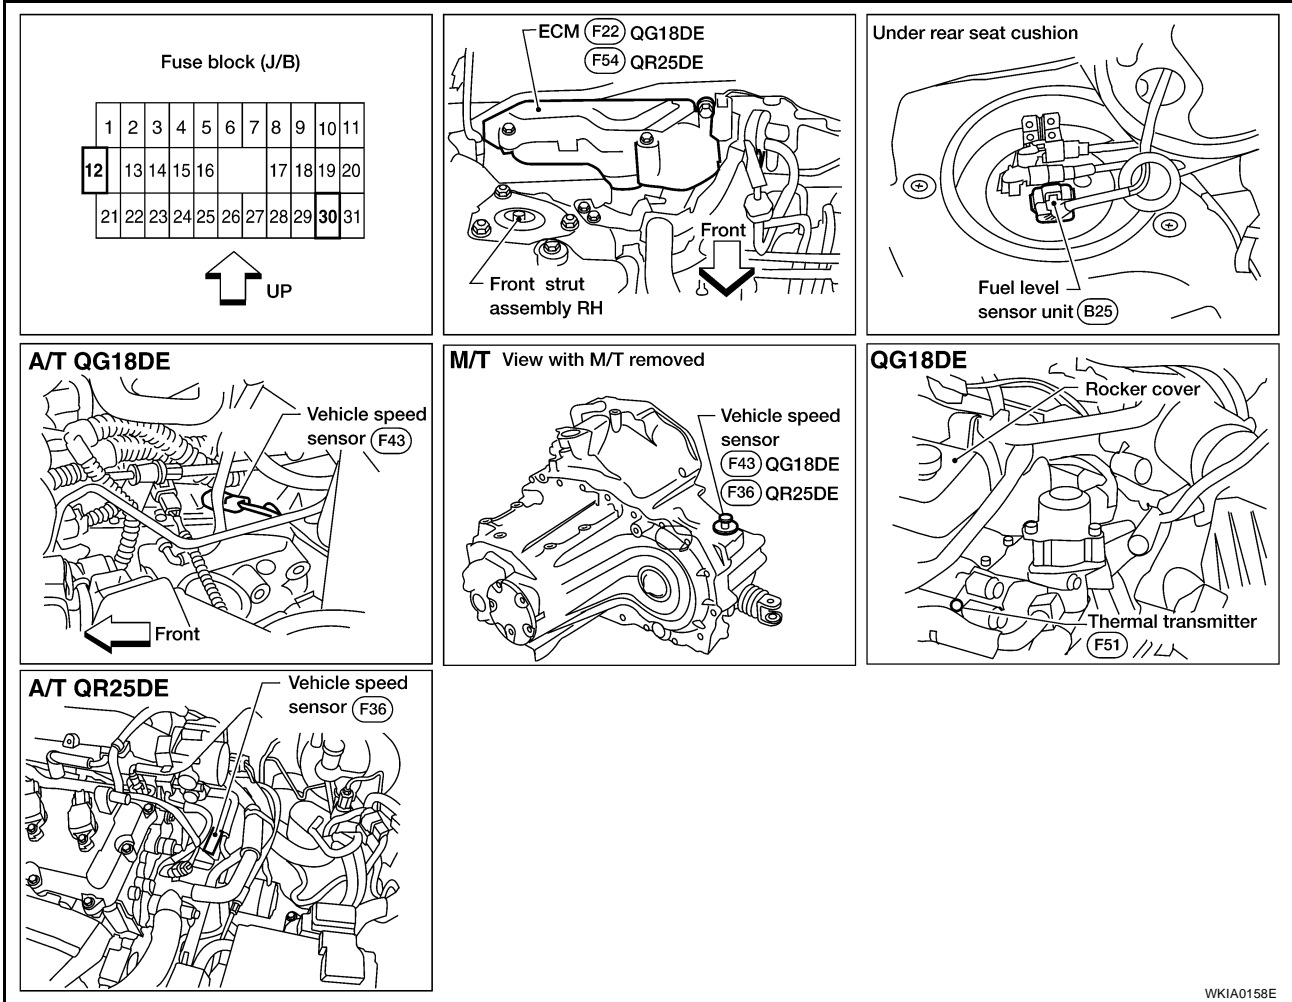

WKIA0158E

A
B
C
D
E
F
G
H
I
J
DI
L
M


METERS AND GAUGES

EKS002B4

System Description UNIFIED CONTROL METER

- Speedometer, odo/trip meter, tachometer (if equipped), fuel gauge and water temperature gauge are controlled totally by control unit built-in combination meter.
- Digital meter is adopted for odo/trip meter.*
*The record of the odometer is kept even if the battery cable is disconnected. The record of the trip meter is erased when the battery cable is disconnected.
- Odo/trip meter segment can be checked in diagnosis mode.
- Meter/gauge can be checked in diagnosis mode.

HOW TO CHANGE THE DISPLAY FOR ODO/TRIP METER

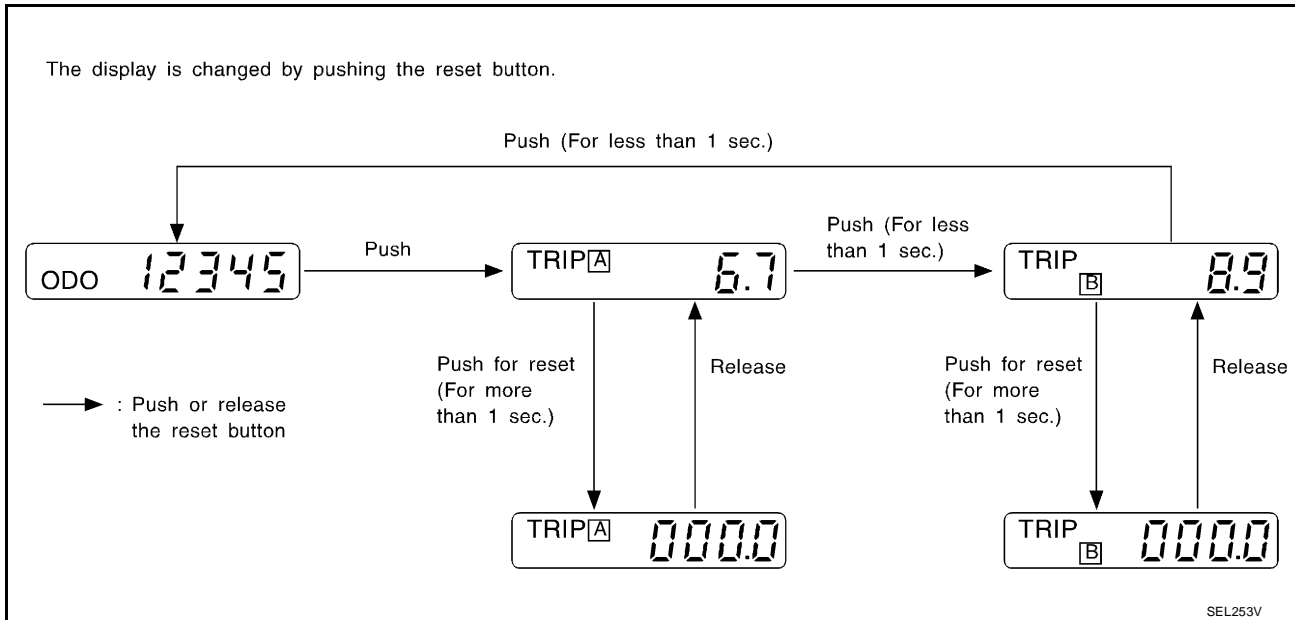

NOTE:

Turn ignition switch to the ON position to operate odo/trip meter.

POWER SUPPLY AND GROUND CIRCUIT

Power is supplied at all times:

- through 10A fuse [No. 12, located in the fuse block (J/B)]
- to combination meter terminal 25 (without tachometer) or 42 (with tachometer).

With the ignition switch in the ON or START position, power is supplied:

- through 10A fuse [No. 30, located in the fuse block (J/B)]
- to combination meter terminal 26 (without tachometer) or 41 (with tachometer).

Ground is supplied:

- to combination meter terminal 27 (without tachometer) or 48 (with tachometer)
- through body grounds M28 and M54.

WATER TEMPERATURE GAUGE

QG18DE

The water temperature gauge indicates the engine coolant temperature. The reading on the gauge is based on the resistance of the thermal transmitter.

As the temperature of the coolant increases, the resistance of the thermal transmitter decreases. A variable ground is supplied to terminal 31 (without tachometer) or 43 (with tachometer) of the combination meter for the water temperature gauge. The needle on the gauge moves from "C" to "H".

QR25DE

The water temperature gauge indicates the engine coolant temperature. The reading on the gauge is based on the signal from the ECM.

The water temperature gauge is regulated by a signal:

- from terminal 32 of the ECM

METERS AND GAUGES

- to combination meter terminal 43 for the water temperature gauge.

TACHOMETER

The tachometer indicates engine speed in revolutions per minute (rpm).

The tachometer is regulated by a signal:

- from terminal 32 (with QG18DE), or terminal 36 (with QR25DE) of the ECM
- to combination meter terminal 45 for the tachometer.

FUEL GAUGE

The fuel gauge indicates the approximate fuel level in the fuel tank.

The fuel gauge is regulated by a variable ground signal supplied:

- to combination meter terminal 30 (without tachometer) or 44 (with tachometer) for the fuel gauge
- from terminal 2 of the fuel level sensor unit and fuel pump
- through terminal 5 of the fuel level sensor unit and fuel pump, and
- through body grounds B13 and B19.

SPEEDOMETER

The combination meter receives a voltage signal from the vehicle speed sensor for the speedometer.

The voltage is supplied:

- to combination meter terminal 29 (without tachometer) or 47 (with tachometer) for the speedometer
- from terminal 1 (with QG18DE), or terminal + (with QR25DE) of the vehicle speed sensor.

The speedometer converts the voltage into the vehicle speed displayed.

A

B

C

D

E

F

G

H

I

J

DI



L

M

METERS AND GAUGES

Combination Meter WITHOUT TACHOMETER

EKS002B5

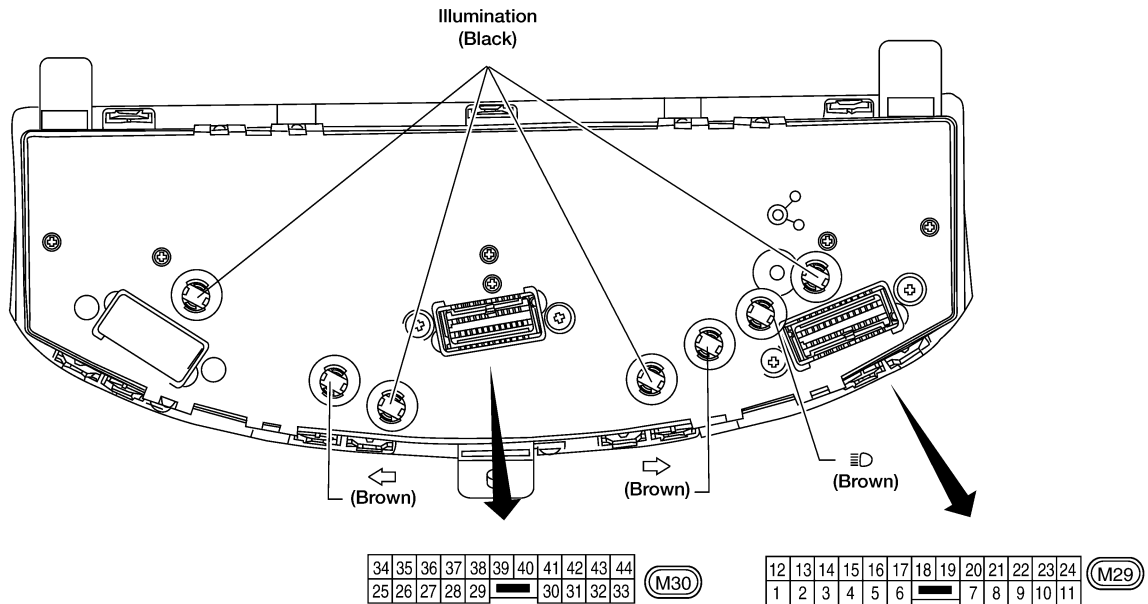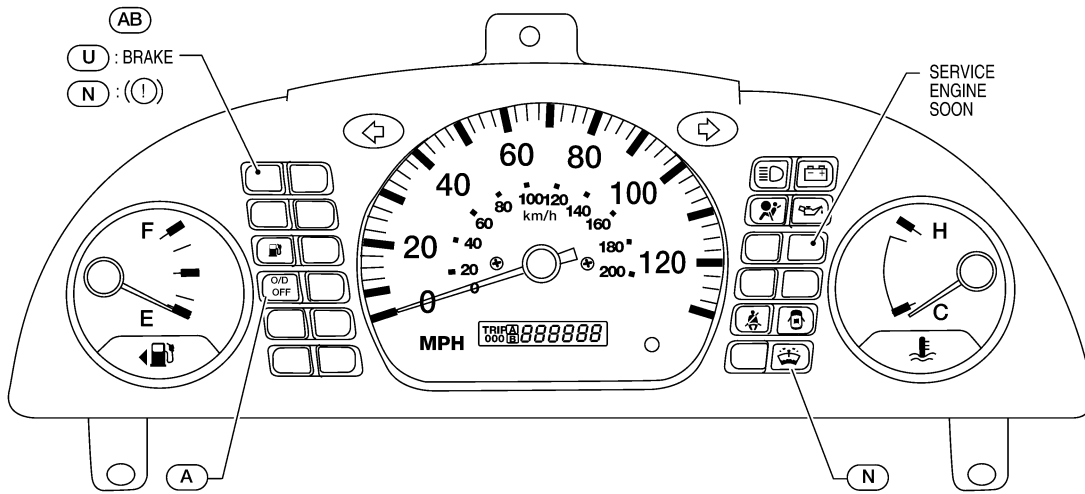

- U : For U.S.A
- N : For Canada
- A : With A/T



Bulb socket color	Bulb wattage
Brown	1.4W
Black	3.0W

(): Bulb socket color

WKIA0005E

METERS AND GAUGES

WITH TACHOMETER (QG18DE MODELS)

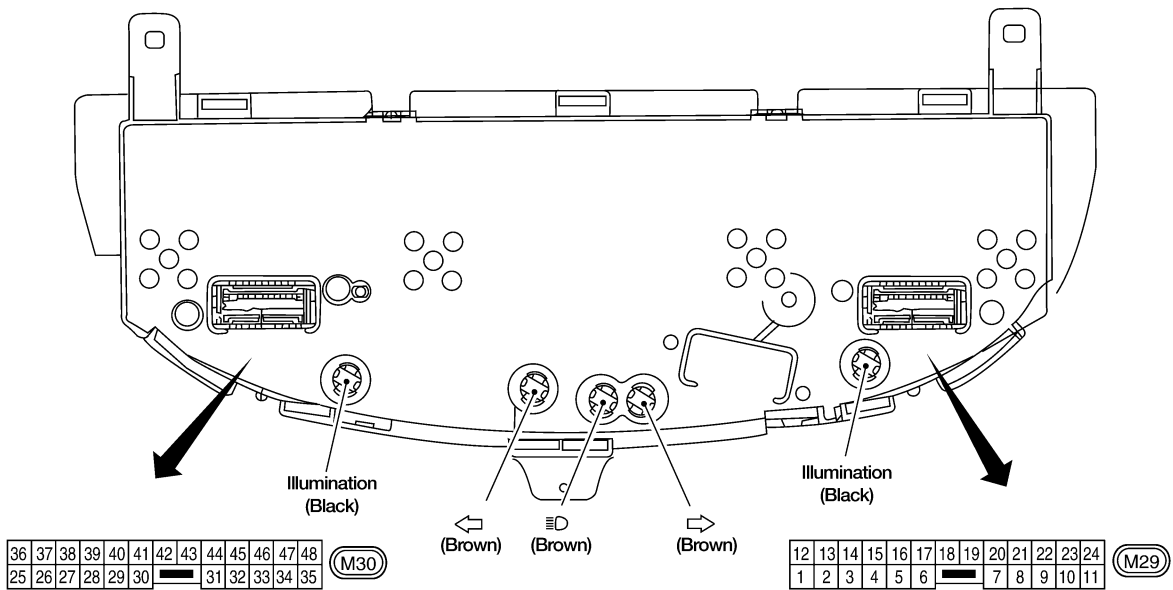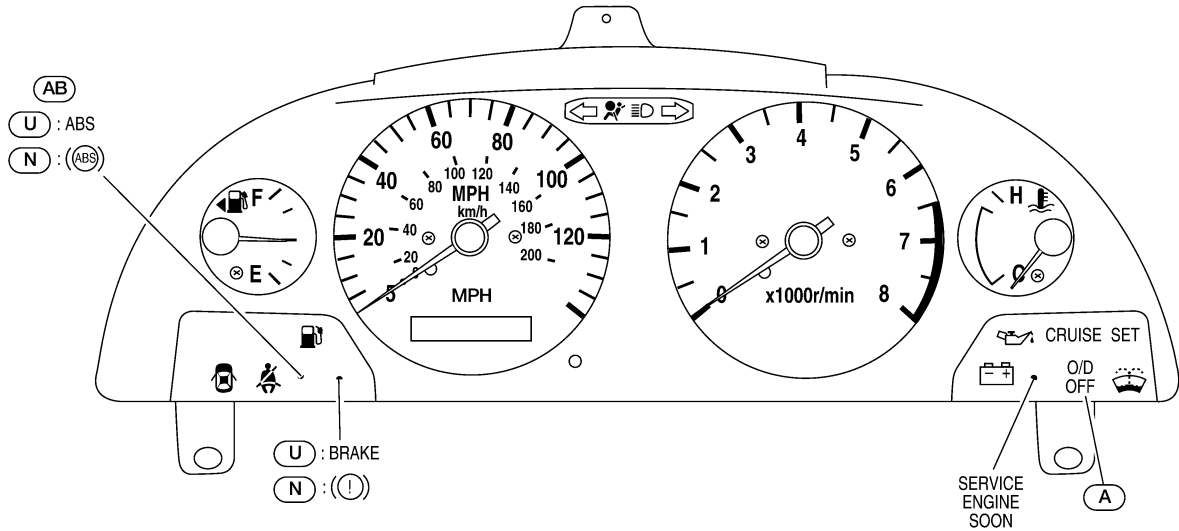



- U : For USA
- N : For Canada
- A : With A/T
- AB : With ABS

Bulb socket color	Bulb wattage
Brown	1.4W
Black	3.0W

(): Bulb socket color

METERS AND GAUGES

WITH TACHOMETER (QR25DE MODELS)

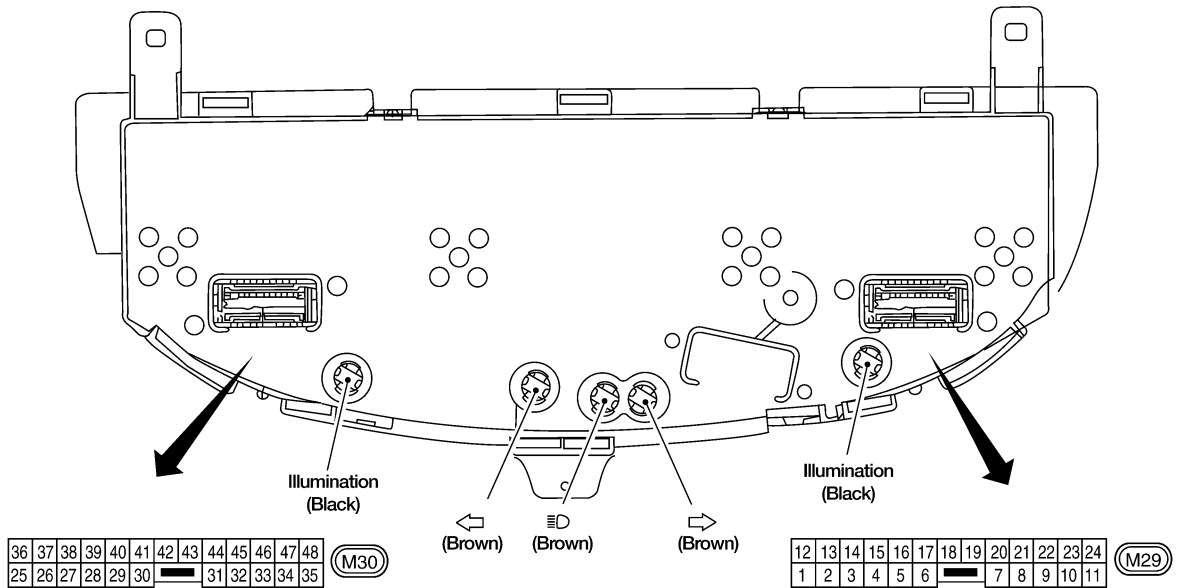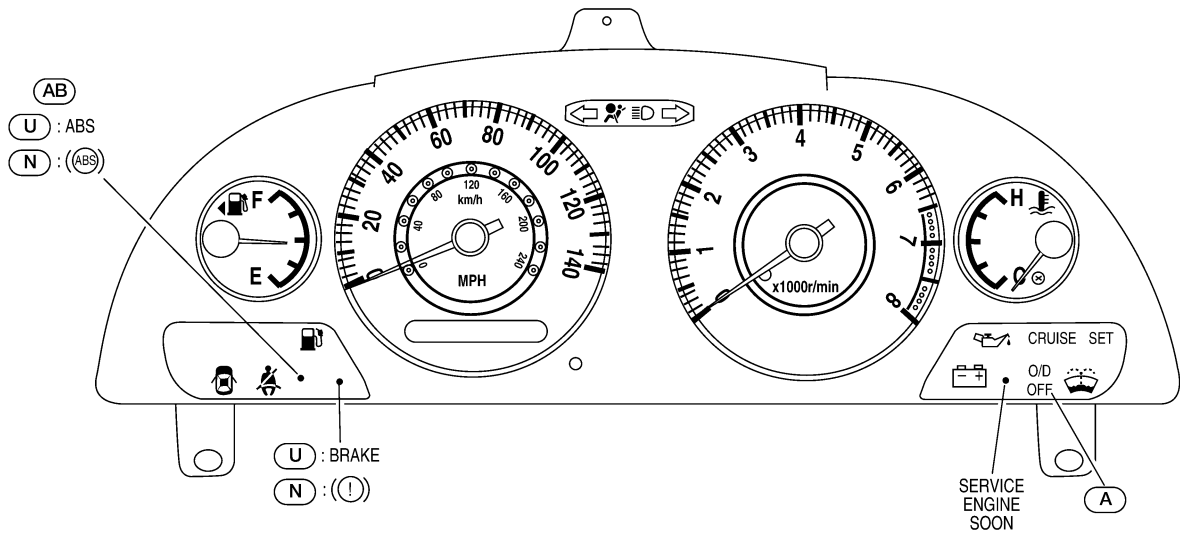

- U** : For USA
- N** : For Canada
- A** : With A/T
- AB** : With ABS


Bulb socket color	Bulb wattage
Brown	1.4W
Black	3.0W

(): Bulb socket color

METERS AND GAUGES

Schematic WITHOUT TACHOMETER

EKS002B6

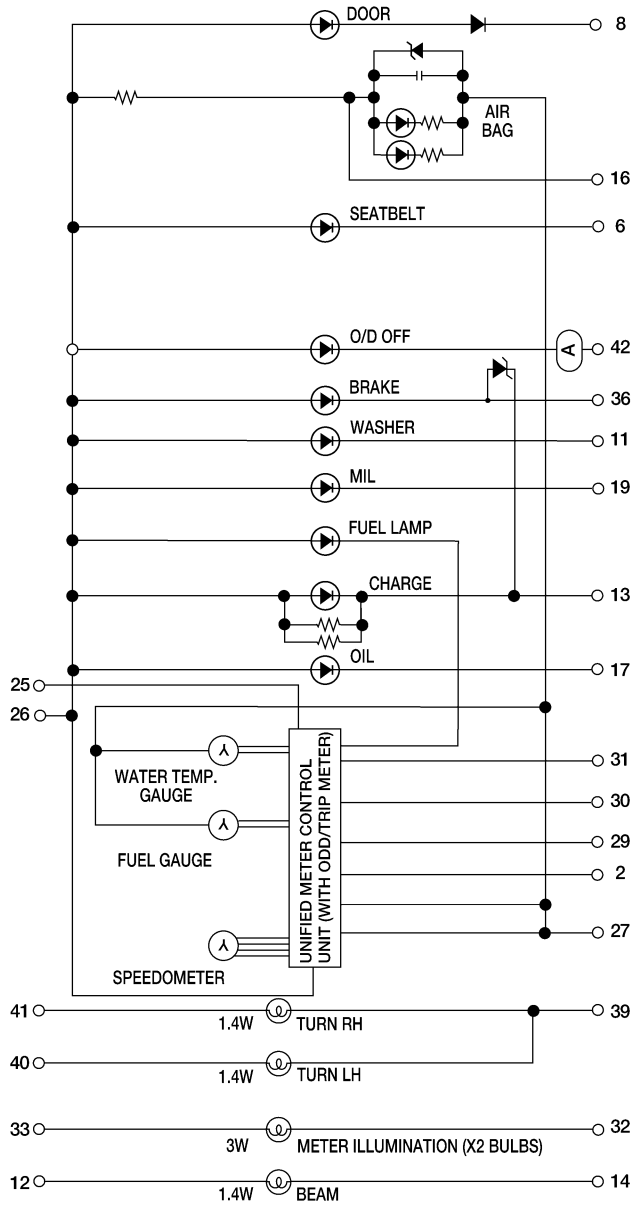


(A) : With A/T

A
B
C
D
E
F
G
H
I
J
DI
L
M

WKWA0045E

METERS AND GAUGES

WITH TACHOMETER

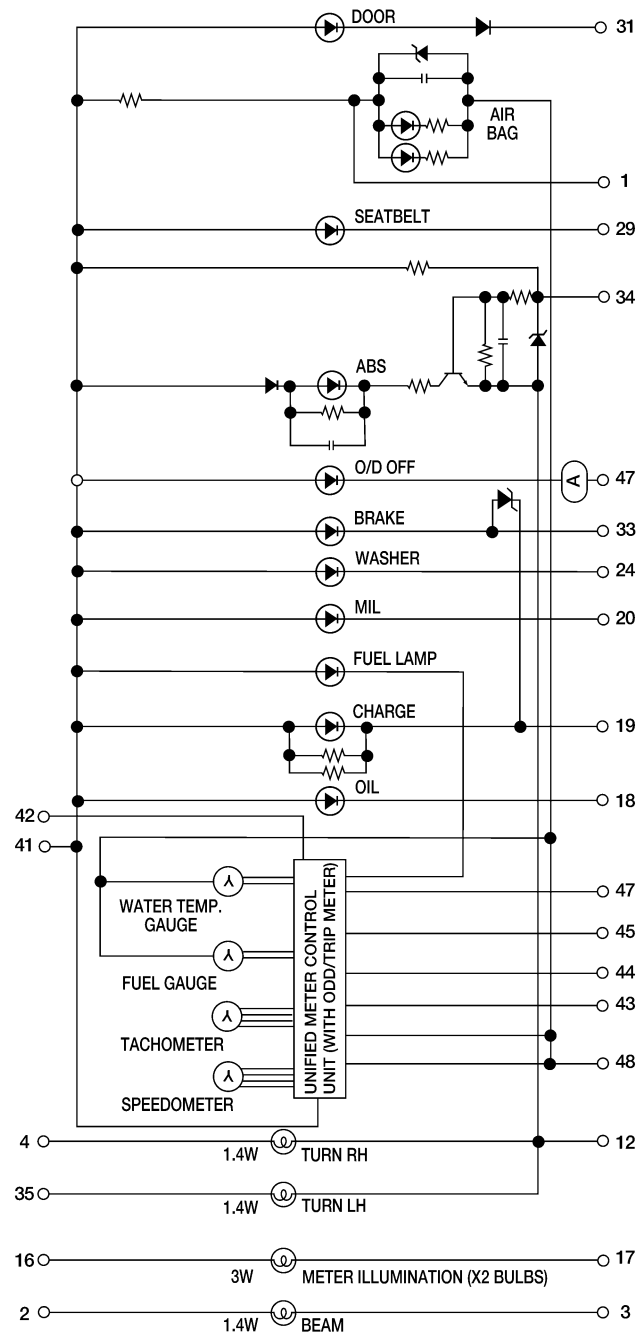




(A) : With A/T

METERS AND GAUGES

Wiring Diagram — METER — WITHOUT TACHOMETER

EKS002B7

DI-METER-01




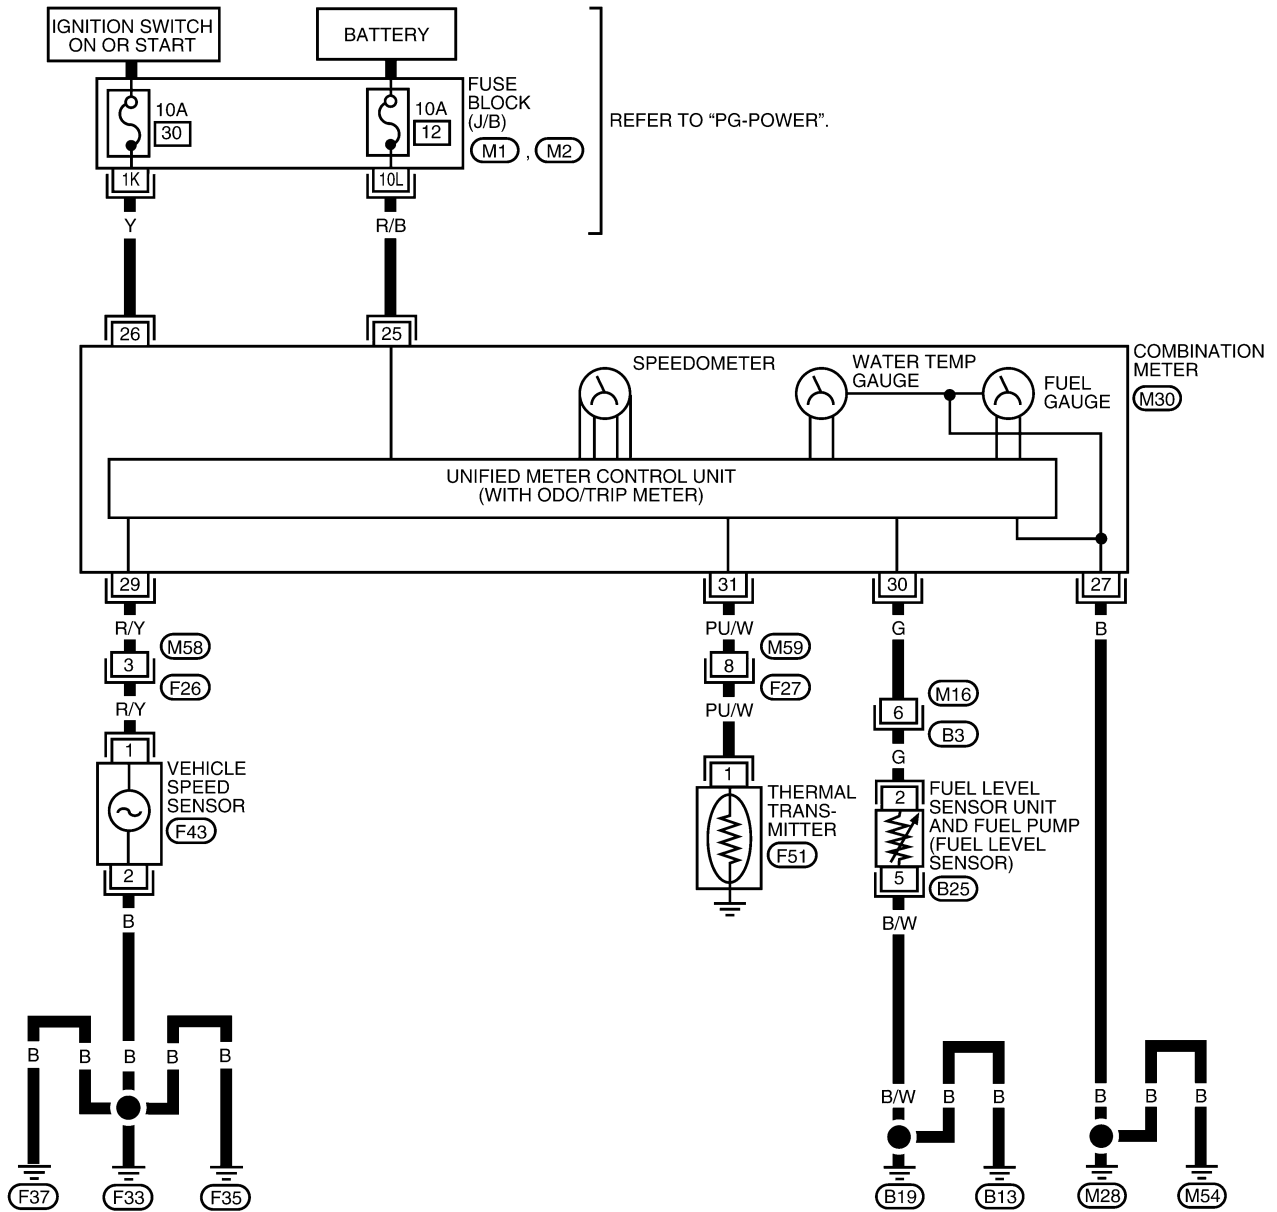


WKWA0047E

METERS AND GAUGES

WITH TACHOMETER (QG18DE MODELS)



DI-METER-02

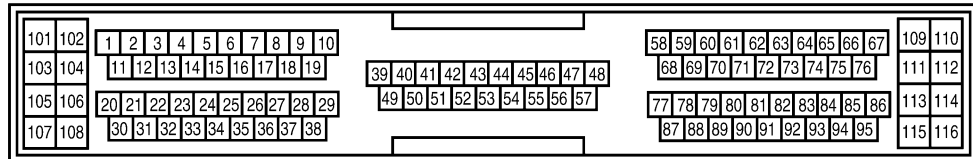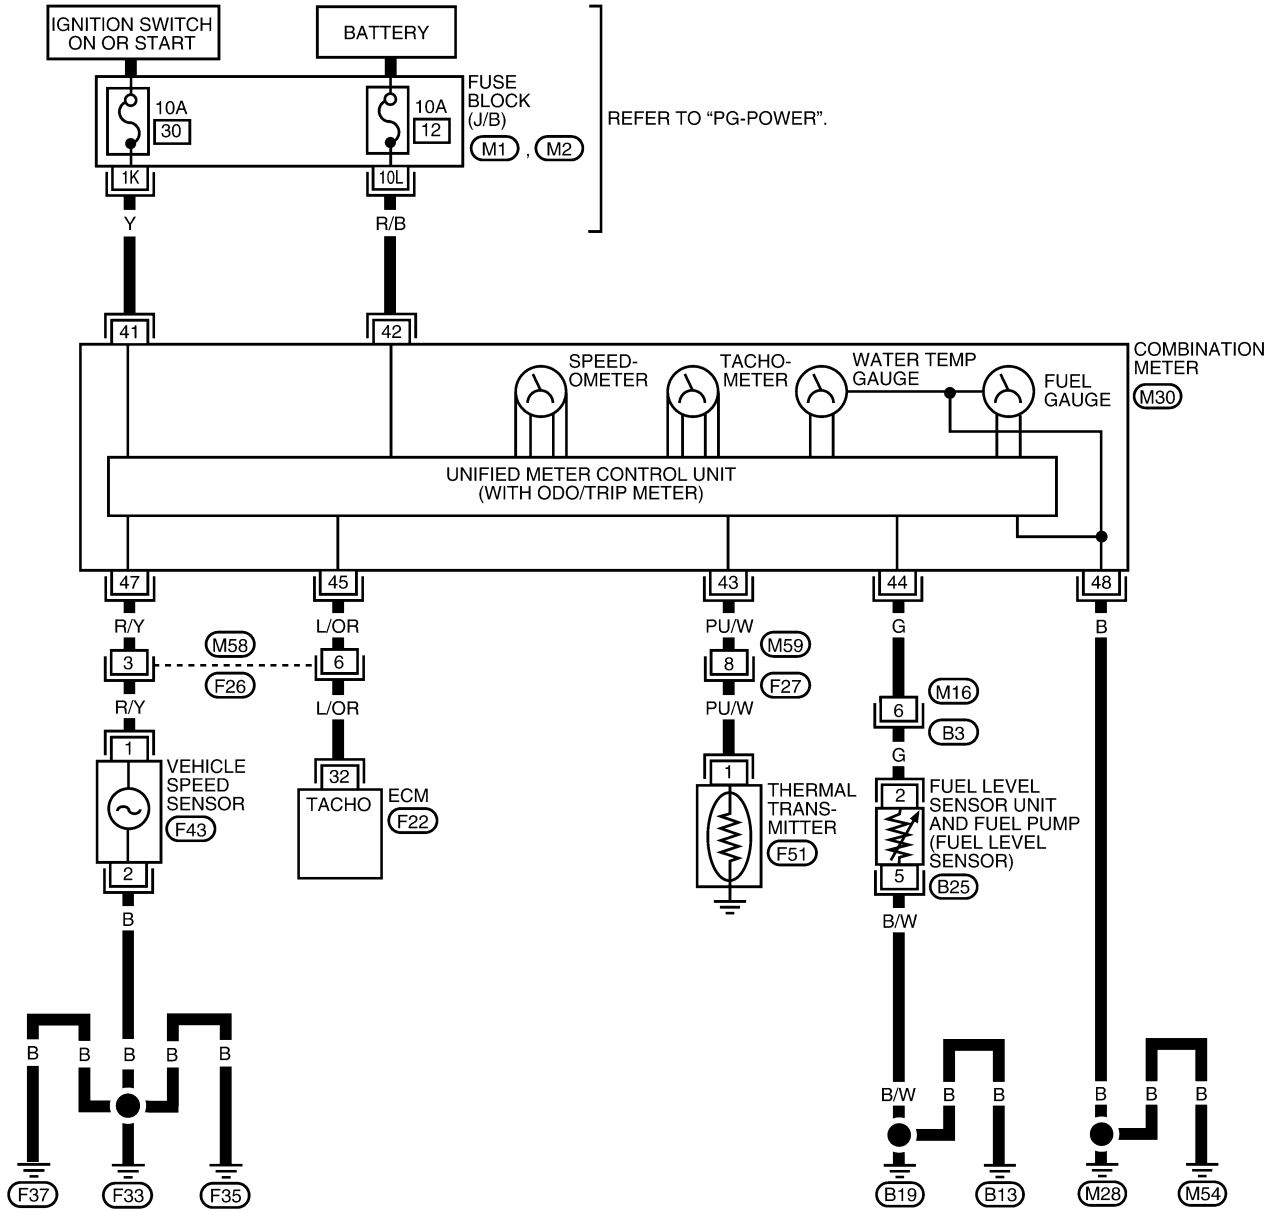

METERS AND GAUGES

WITH TACHOMETER (QR25DE MODELS)

DI-METER-03

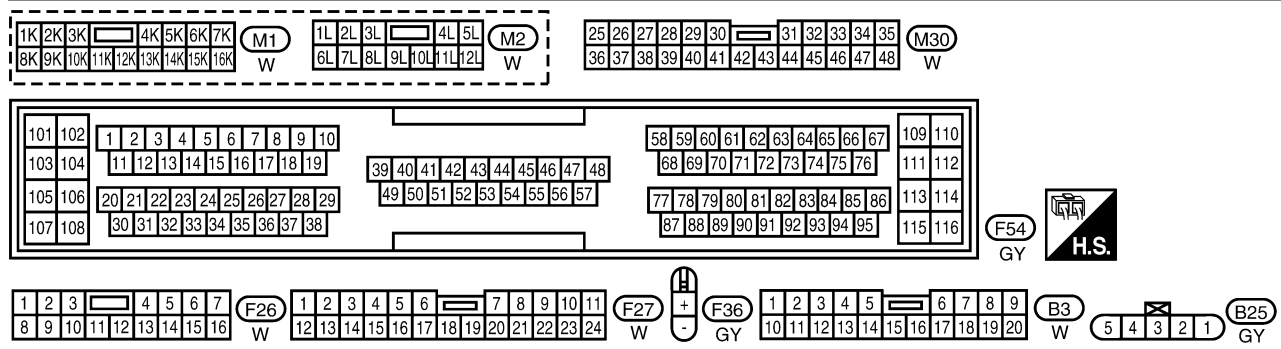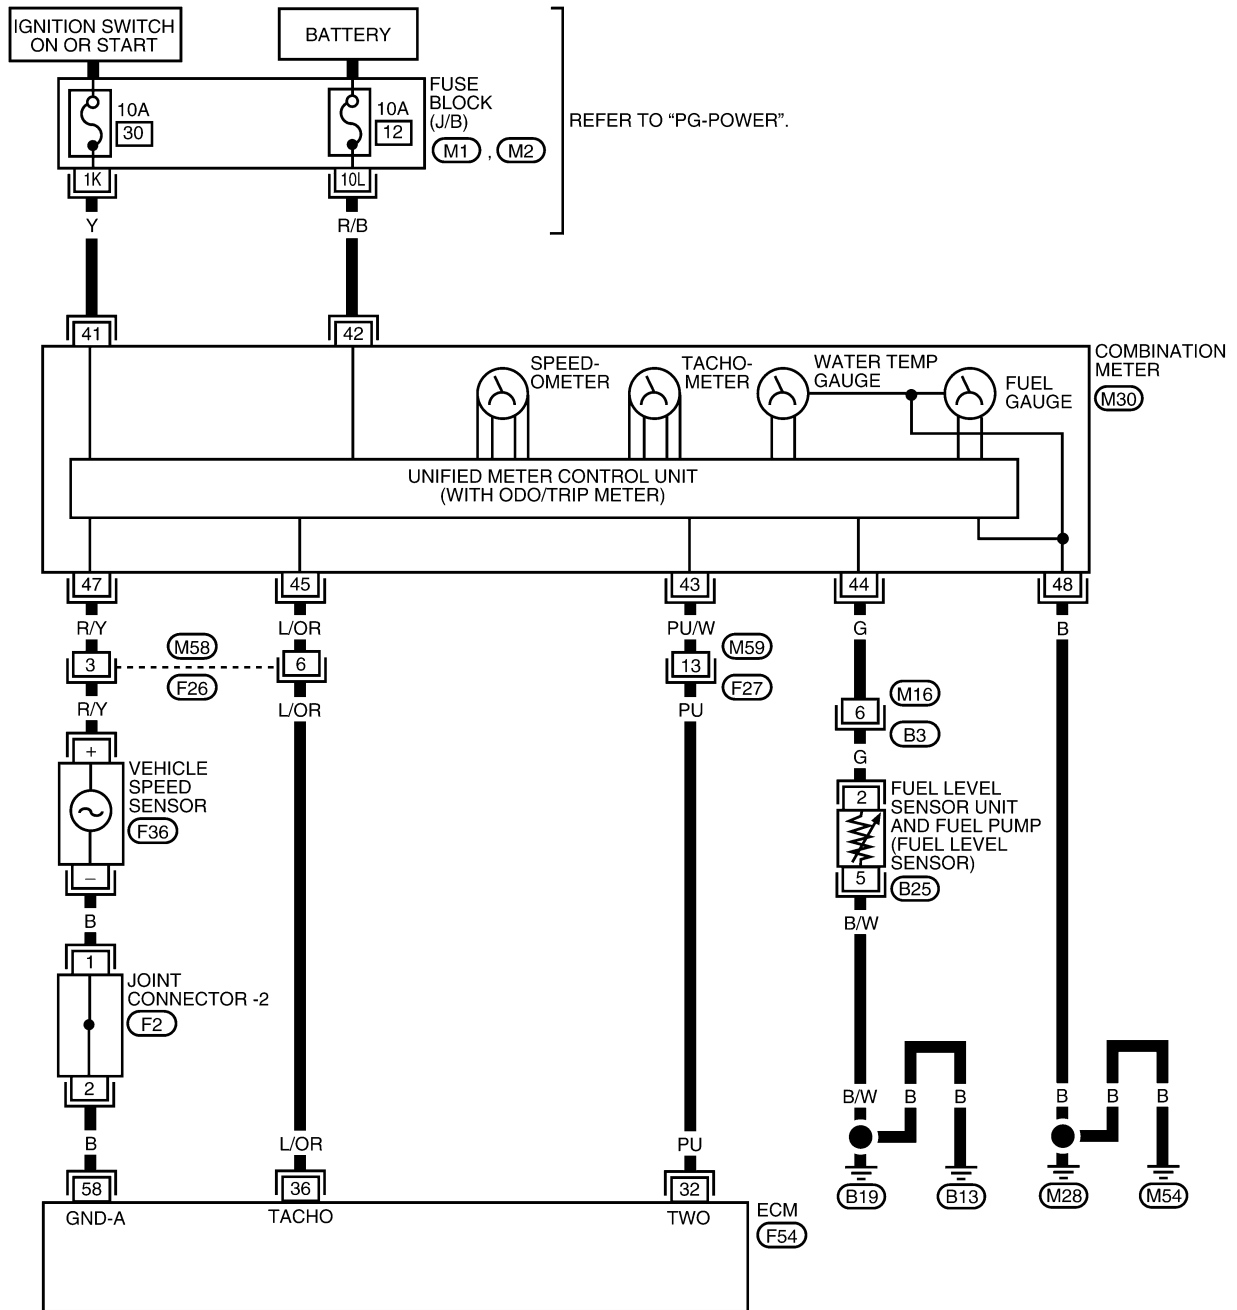

WKWA0049E

METERS AND GAUGES

Meter/Gauge Operation and Odo/Trip Meter Segment Check in Diagnosis Mode

EKS002B8

DIAGNOSIS FUNCTION

- Odo/trip meter segment can be checked in diagnosis mode.
- Meters/gauges can be checked in diagnosis mode.


HOW TO ALTERNATE DIAGNOSIS MODE

1. Turn ignition switch to ON and change odo/trip meter to "TRIP A" or "TRIP B".
2. Turn ignition switch to OFF.
3. Turn ignition switch to ON when pushing odo/trip meter switch.
4. Release odo/trip meter switch 1 second after ignition switch is turned ON.
5. Push odo/trip meter switch three times within 7 seconds.
6. All odo/trip meter segments should be turned on.

NOTE:

If some segments are not turned on, combination meter should be replaced.

At this point, the unified control meter is turned to diagnosis mode.

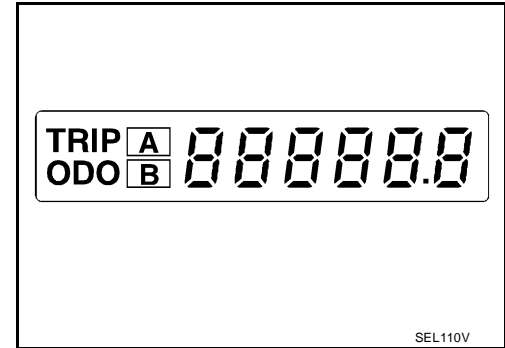


7. Push odo/trip meter switch. Indication of each meter/gauge should be as shown in figure during pushing odo/trip meter switch.

NOTE:

It takes a few seconds for indication of fuel gauge and water temperature gauge to become stable.


8. Turn ignition switch to OFF or start engine to cancel diagnosis mode.

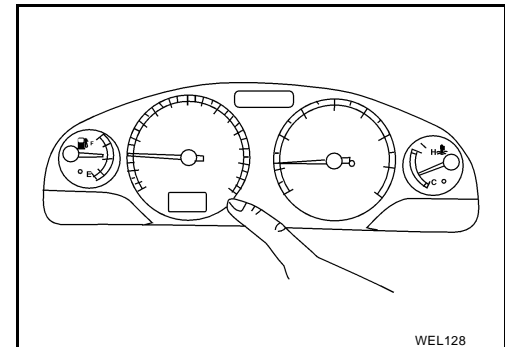

METERS AND GAUGES

Trouble Diagnoses PRELIMINARY CHECK

EKS002B9

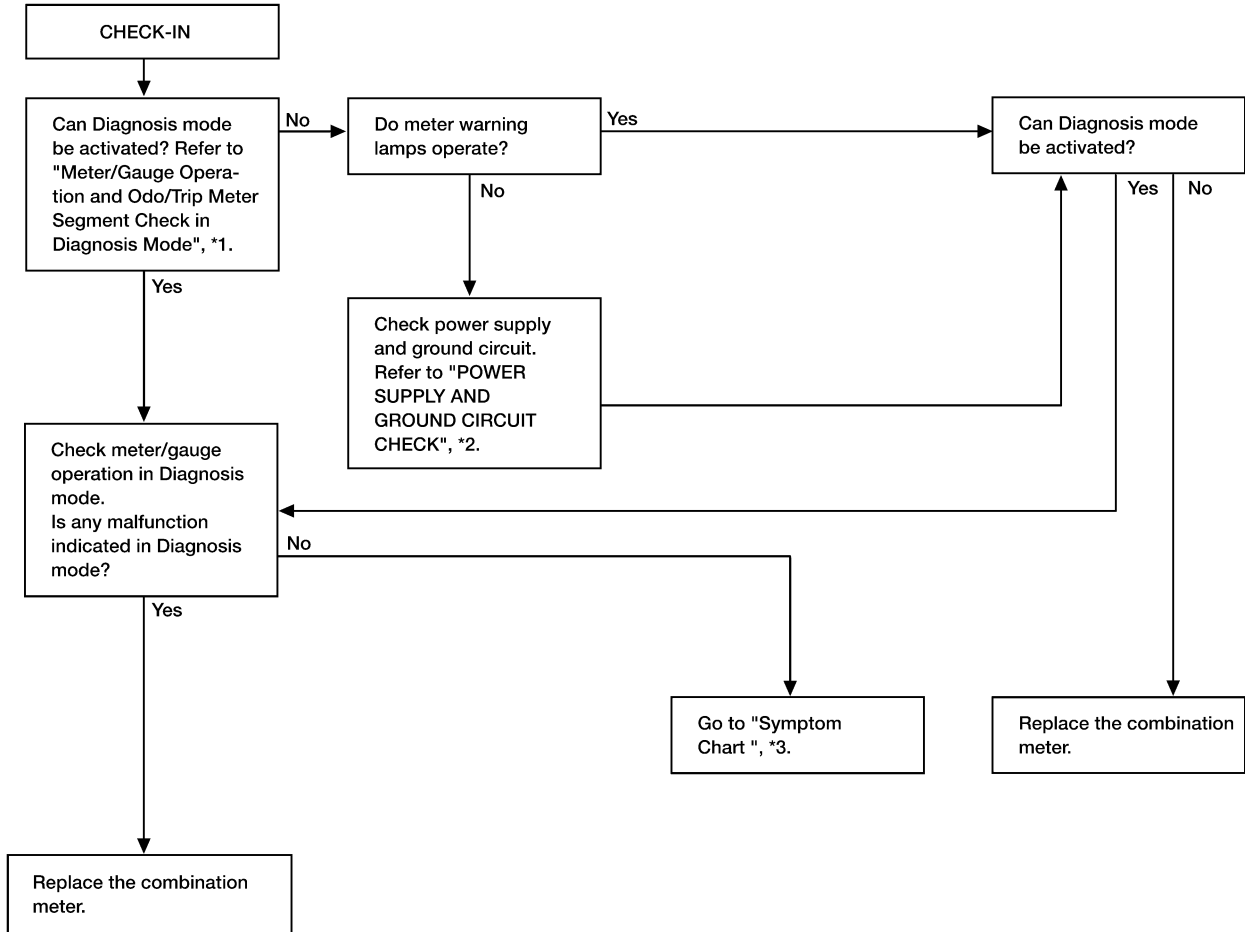

*1: [DI-14](#)

*2: [DI-17](#)

*3: [DI-16](#)

WKIA0159E

A
B
C
D
E
F
G
H
I
J
DI
L
M

METERS AND GAUGES

SYMPTOM CHART

Symptom	Possible causes	Repair order
One meter/gauge (speedometer/tachometer/fuel gauge/water temp. gauge) is malfunctioning.	1. Sensor signal <ul style="list-style-type: none"> - Vehicle speed signal - Engine revolution signal - Fuel gauge - Water temp. gauge 	1. Check the sensor for malfunctioning meter/gauge. DI-18, "INSPECTION/VEHICLE SPEED SENSOR" DI-19, "INSPECTION/ENGINE REVOLUTION SIGNAL" DI-20, "INSPECTION/FUEL LEVEL SENSOR UNIT AND FUEL PUMP" DI-21, "INSPECTION/THERMAL TRANSMITTER (QG18DE MODELS)" DI-22, "INSPECTION/WATER TEMPERATURE GAUGE (QR25DE MODELS)"
Multiple meters/gauges (except odo/trip meter) are malfunctioning.	2. Unified meter control unit	2. Replace combination meter assembly.

Before starting trouble diagnoses below, perform "PRELIMINARY CHECK", [DI-15, "PRELIMINARY CHECK"](#) .

METERS AND GAUGES

POWER SUPPLY AND GROUND CIRCUIT CHECK


Power Supply Circuit Check

WITHOUT TACHOMETER

Terminals		Ignition switch position		
(+)	(-)	OFF	ACC	ON
25	Ground	Battery voltage	Battery voltage	Battery voltage
26	Ground	0V	0V	Battery voltage

WITH TACHOMETER

Terminals		Ignition switch position		
(+)	(-)	OFF	ACC	ON
42	Ground	Battery voltage	Battery voltage	Battery voltage
41	Ground	0V	0V	Battery voltage

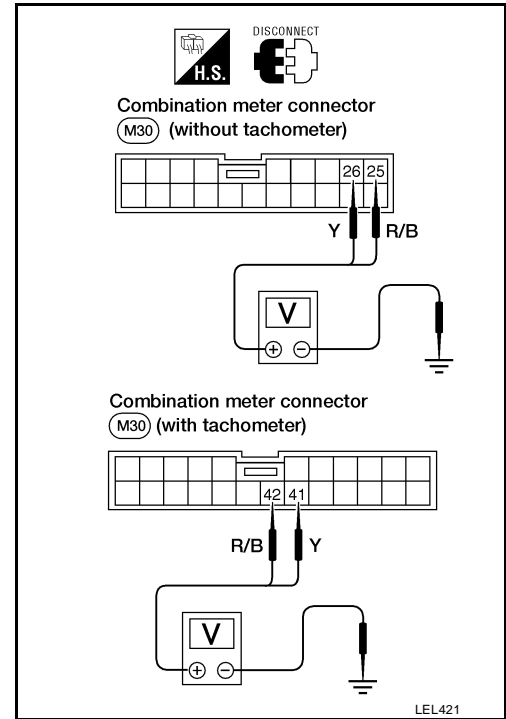

If NG, check the following.

- 10A fuse [No. 12, located in fuse block (J/B)]
- 10A fuse [No. 30, located in fuse block (J/B)]
- Harness for open or short between fuse and combination meter


Ground Circuit Check

WITHOUT TACHOMETER

Terminals		(-)	Continuity
(+)			
Connector	Terminal (Wire color)		
M30	27 (B)	Ground	Yes

WITH TACHOMETER

Terminals		(-)	Continuity
(+)			
Connector	Terminal (Wire color)		
M30	48 (B)	Ground	Yes

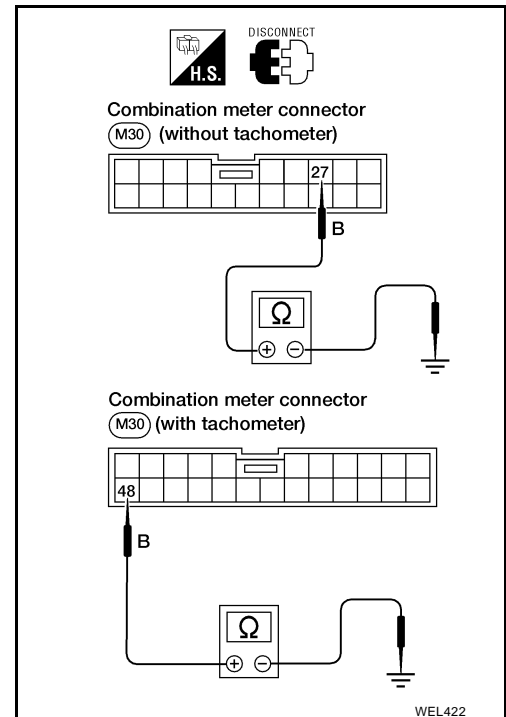

A
B
C
D
E
F
G
H
I
J
L
M


DI

METERS AND GAUGES

INSPECTION/VEHICLE SPEED SENSOR

1. CHECK VEHICLE SPEED SENSOR OUTPUT

1. Remove vehicle speed sensor from transmission.
2. Check voltage between combination meter terminal 29 (without tachometer) or 47 (with tachometer) and ground while quickly turning speed sensor pinion.

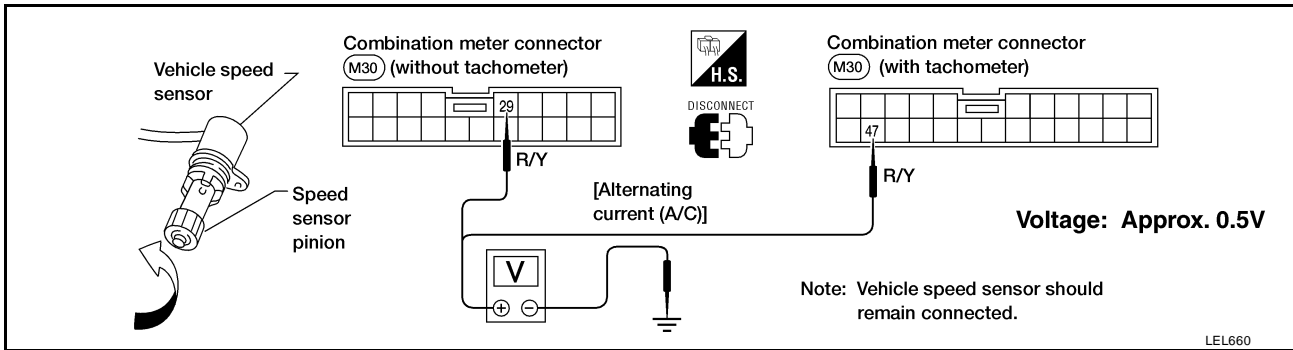

OK or NG

- OK >> Vehicle speed sensor is OK.
NG >> GO TO 2.


2. CHECK VEHICLE SPEED SENSOR

Check resistance between vehicle speed sensor connector F43 terminals 1 and 2 (with QG18DE), or connector F36 terminals + and - (with QR25DE).

Resistance **Approx. 250Ω**

OK or NG

- OK >> Check the following.
- Harness between combination meter and vehicle speed sensor.
 - Vehicle speed sensor ground circuit.
- NG >> Replace vehicle speed sensor.

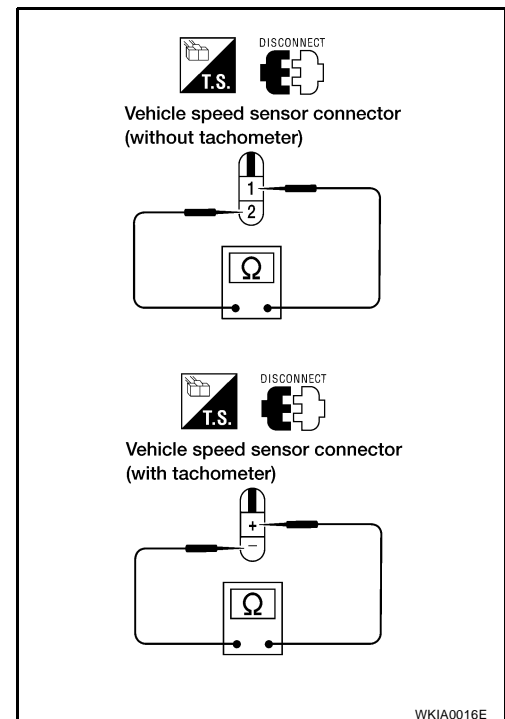


METERS AND GAUGES

INSPECTION/ENGINE REVOLUTION SIGNAL

1. CHECK ECM OUTPUT

1. Start engine.
2. Check voltage between combination meter terminal 45 and ground at idle and 2,000 rpm.

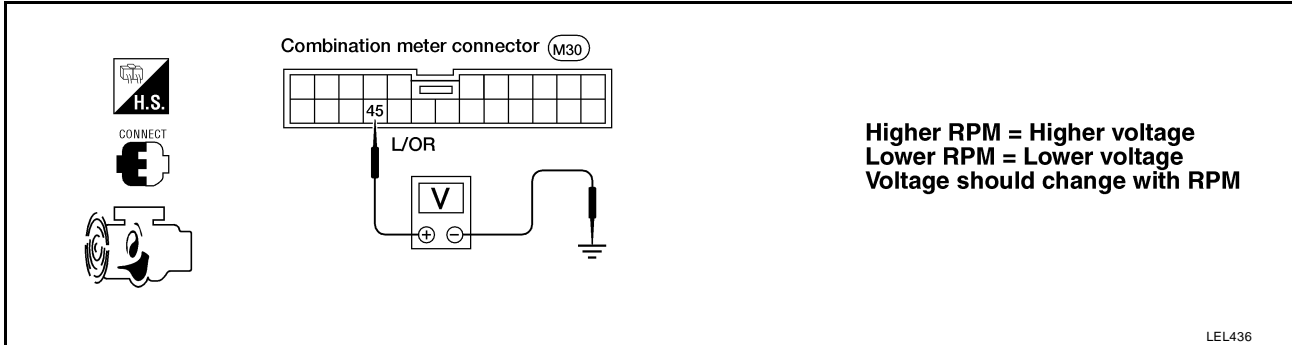

OK or NG

- OK >> Engine revolution signal is OK.
- NG >> Harness for open or short between ECM and combination meter.

A

B

C

D

E

F

G

H

I

J

DI

L


M

METERS AND GAUGES

INSPECTION/FUEL LEVEL SENSOR UNIT AND FUEL PUMP

1. CHECK GROUND CIRCUIT FOR FUEL LEVEL SENSOR UNIT

Check harness continuity between fuel level sensor unit and fuel pump connector terminal 5 and ground.

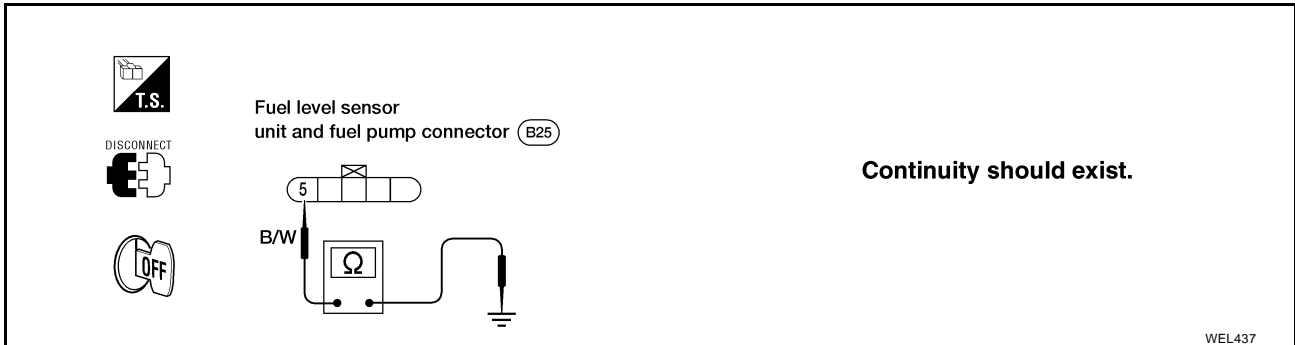

OK or NG

OK >> GO TO 2.

NG >> Repair harness or connector.

2. CHECK FUEL LEVEL SENSOR UNIT

Refer to [DI-23, "FUEL LEVEL SENSOR UNIT CHECK"](#) .

OK or NG

OK >> GO TO 3.


NG >> Replace fuel level sensor unit.

3. CHECK HARNESS FOR OPEN OR SHORT

1. Disconnect combination meter connector and fuel level sensor unit and fuel pump connector.
2. Check continuity between combination meter terminal 30 (without tachometer) or terminal 44 (with tachometer) and fuel level sensor unit and fuel pump connector terminal 2.

Continuity should exist.

3. Check continuity between combination meter terminal 30 (without tachometer) or terminal 44 (with tachometer) and ground.

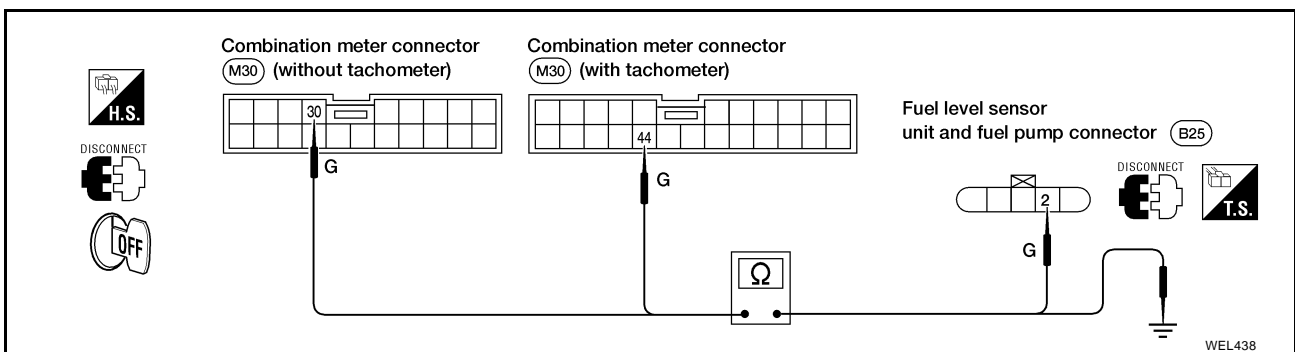

OK or NG

OK >> Fuel level sensor unit is OK.

NG >> Repair harness or connector.

METERS AND GAUGES

INSPECTION/THERMAL TRANSMITTER (QG18DE MODELS)

1. CHECK THERMAL TRANSMITTER

Refer to [DI-23, "THERMAL TRANSMITTER CHECK \(QG18DE MODELS\)"](#) .


OK or NG

OK >> GO TO 2.

NG >> Replace thermal transmitter.

2. CHECK HARNESS FOR OPEN OR SHORT

1. Disconnect combination meter connector and thermal transmitter connector.
2. Check continuity between combination meter terminal 31 (without tachometer) or terminal 43 (with tachometer) and thermal transmitter terminal 1.
Continuity should exist.
3. Check continuity between combination meter terminal 31 (without tachometer) or terminal 43 (with tachometer) and ground.
Continuity should not exist.

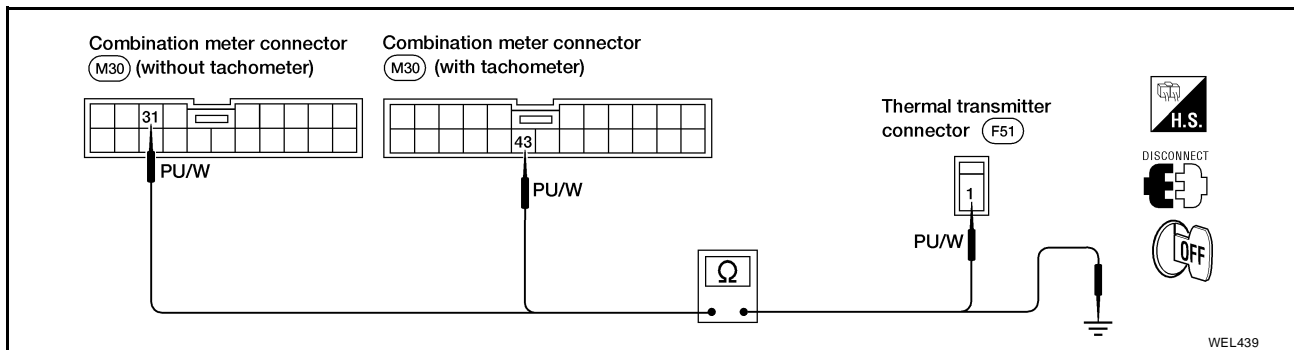

OK or NG

OK >> Thermal transmitter is OK.

NG >> Repair harness or connector.

A
B
C
D
E
F
G
H
I
J
L
M

DI

METERS AND GAUGES

INSPECTION/WATER TEMPERATURE GAUGE (QR25DE MODELS)


1. CHECK ECM OUTPUT

1. Disconnect combination meter.
2. Check voltage between combination meter harness connector M30 terminal 43 (PU/W) and ground.

Battery voltage should exist.

OK or NG

- OK >> GO TO 3.
NG >> GO TO 2.

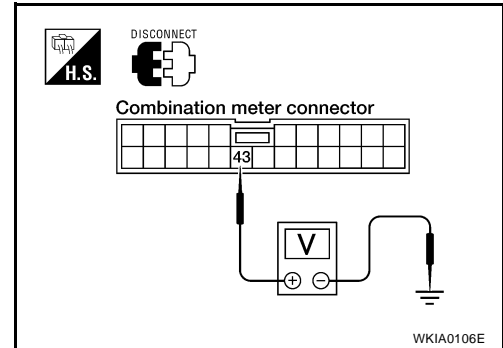

2. CHECK HARNESS FOR OPEN OR SHORT

1. Disconnect ECM connector.
2. Check continuity between combination meter harness connector M30 terminal 43 (PU/W) and ECM harness connector F54 terminal 32 (PU).


Continuity should exist.

3. Check continuity between combination meter harness connector M30 terminal 43 (PU/W) and ground.

Continuity should not exist.

OK or NG

- OK >> GO TO 3.
NG >> Repair harness or connector.

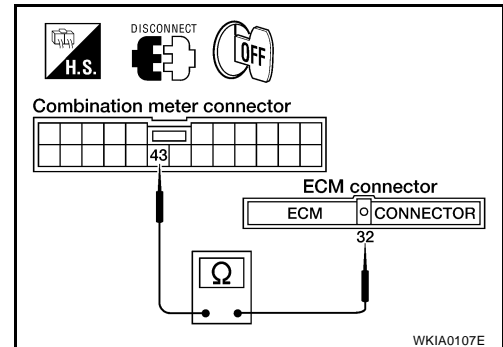


3. CHECK WATER TEMPERATURE OUTPUT SIGNAL

1. Connect combination meter connector and ECM connector.
2. Start engine.
3. Check output signal between combination meter harness connector M30 terminal 43 (PU/W) and ground. (Use "SIMPLE OSCILLOSCOPE" in "SUB MODE" with CONSULT-II.)

Reading should be as shown.

OK or NG

- OK >> Replace combination meter.
NG >> Check ECM.

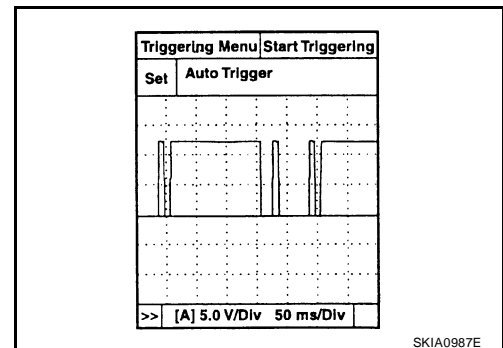

METERS AND GAUGES

EKS002BA


Electrical Components Inspection FUEL LEVEL SENSOR UNIT CHECK

- For removal, refer to [FL-3, "Removal"](#) (with QG18DE except CALIF. CA), or [FL-7, "Removal"](#) (with QG18DE CALIF. CA and QR25DE).

Check the resistance between terminals 2 and 5.

Ohmmeter		Float position mm (in)			Resistance (Approximate)
(+)	(-)				
2	5	*1	Full	136.1 (5.358)	4.5 - 5.5 Ω
		*2	1/2	89.8 (3.535)	31.5 - 33.5 Ω
		*3	Empty	31.3 (1.232)	80 - 83 Ω


*1 and *3: When float rod is in contact with stopper.

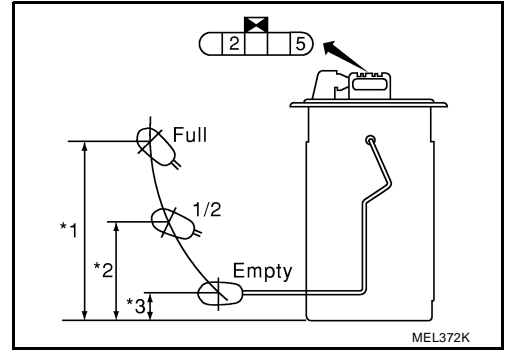

THERMAL TRANSMITTER CHECK (QG18DE MODELS)


Check the resistance between the terminals of thermal transmitter and body ground.

Water temperature	Resistance (Approximate)
60°C (140°F)	170 - 210Ω
100°C (212°F)	47 - 53Ω

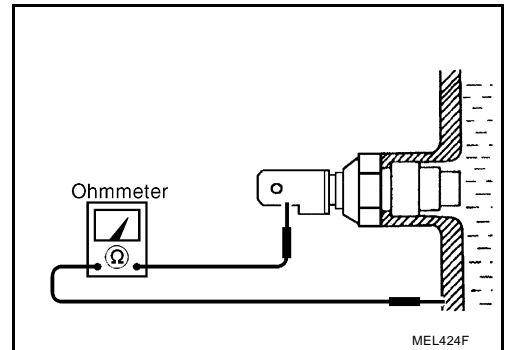

VEHICLE SPEED SENSOR SIGNAL CHECK

- Remove vehicle speed sensor from transmission.
- Turn vehicle speed sensor pinion quickly and measure voltage across terminals 1 and 2 (with QG18DE), or terminals + and - (with QR25DE).

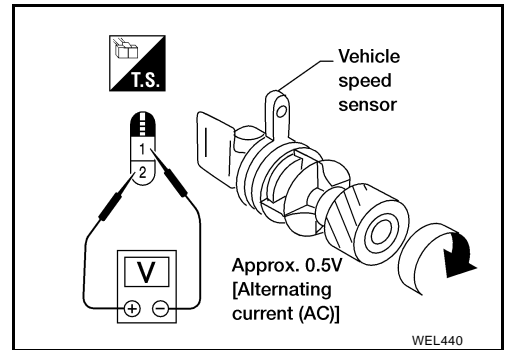

A
B
C
D
E
F
G
H
I
J
DI
L
M

WARNING LAMPS


PFP:24814

WARNING LAMPS

Schematic WITHOUT TACHOMETER

EKS002BB

U : USA
N : CANADA

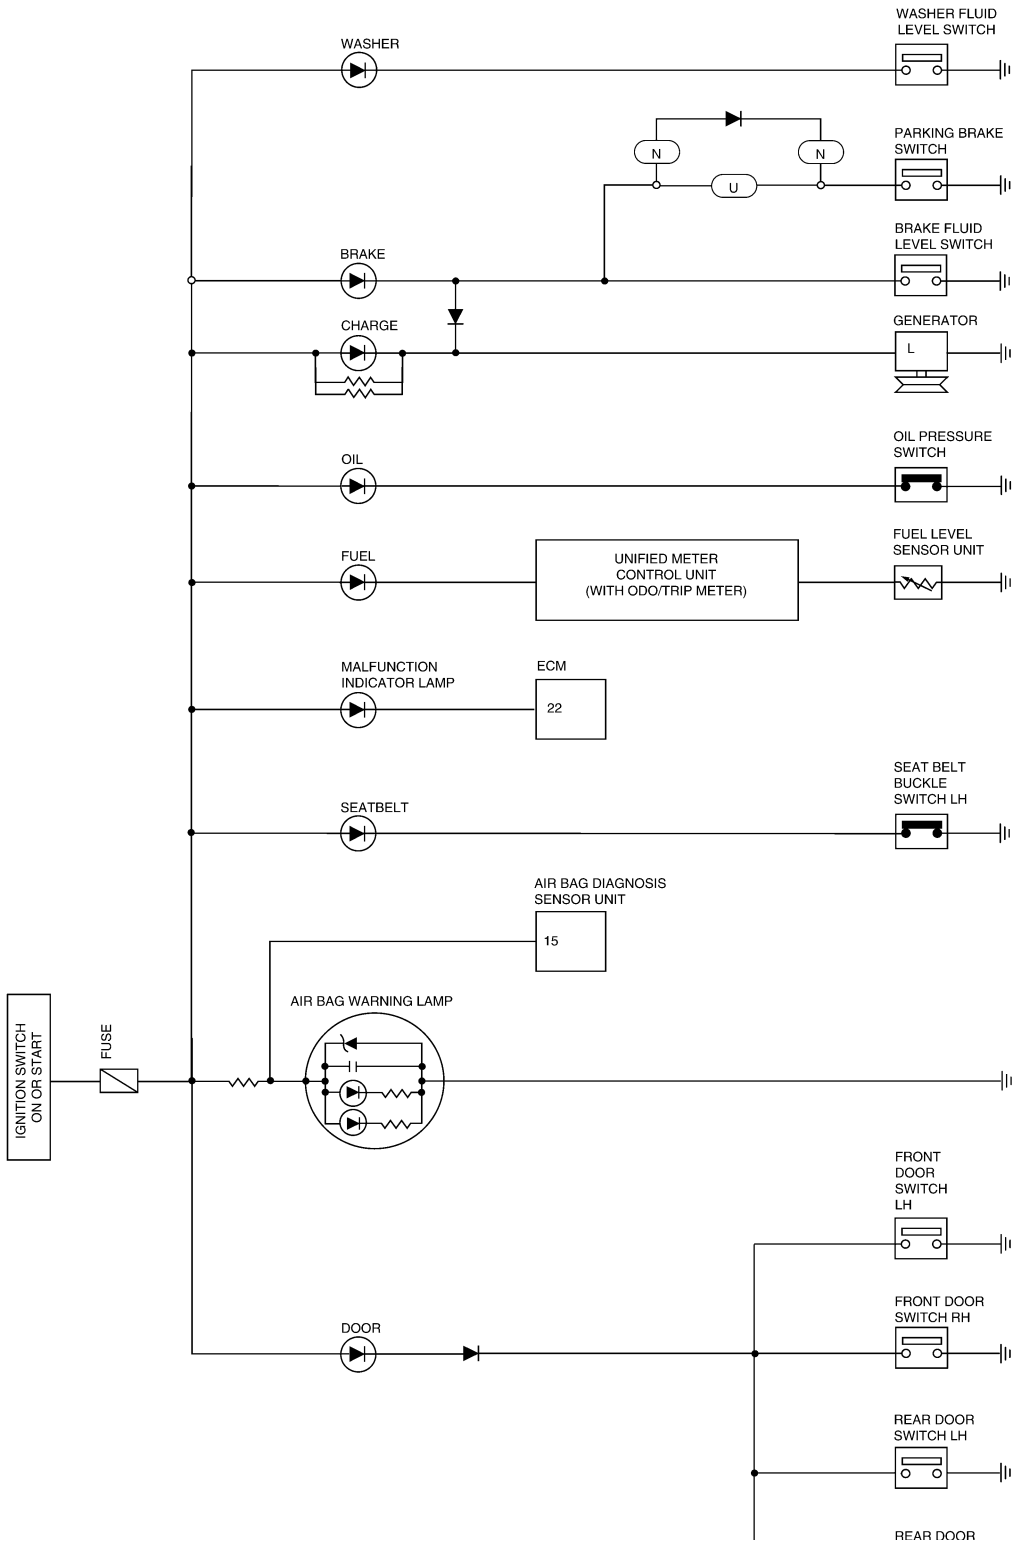


WKWA0395E

WARNING LAMPS

WITH TACHOMETER

- MR : WITH REMOTE KEYLESS ENTRY SYSTEM
- OM : WITHOUT REMOTE KEYLESS ENTRY SYSTEM
- U : USA
- N : CANADA
- () : EXCEPT QR25DE

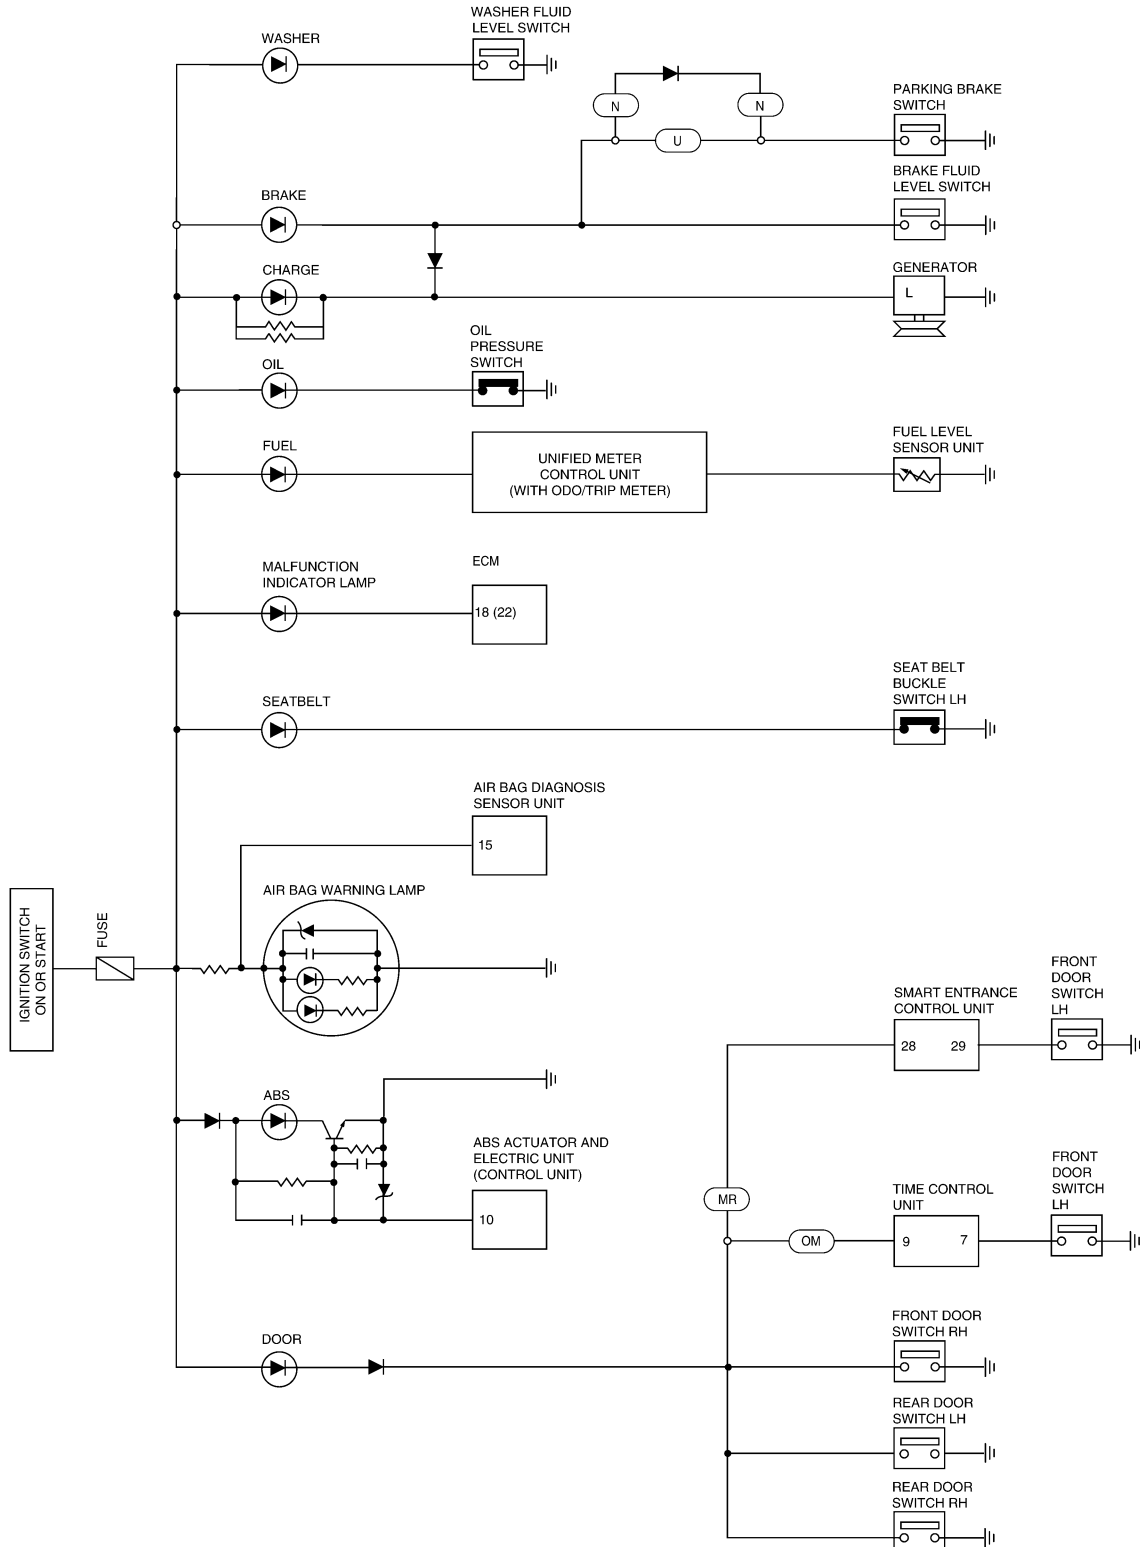



A
B
C
D
E
F
G
H
I
J
DI
L
M

WARNING LAMPS

Wiring Diagram — WARN — WITHOUT TACHOMETER

EKS002BC

DI-WARN-01

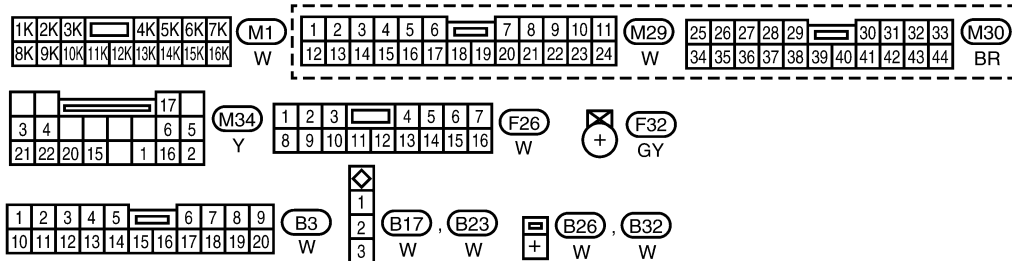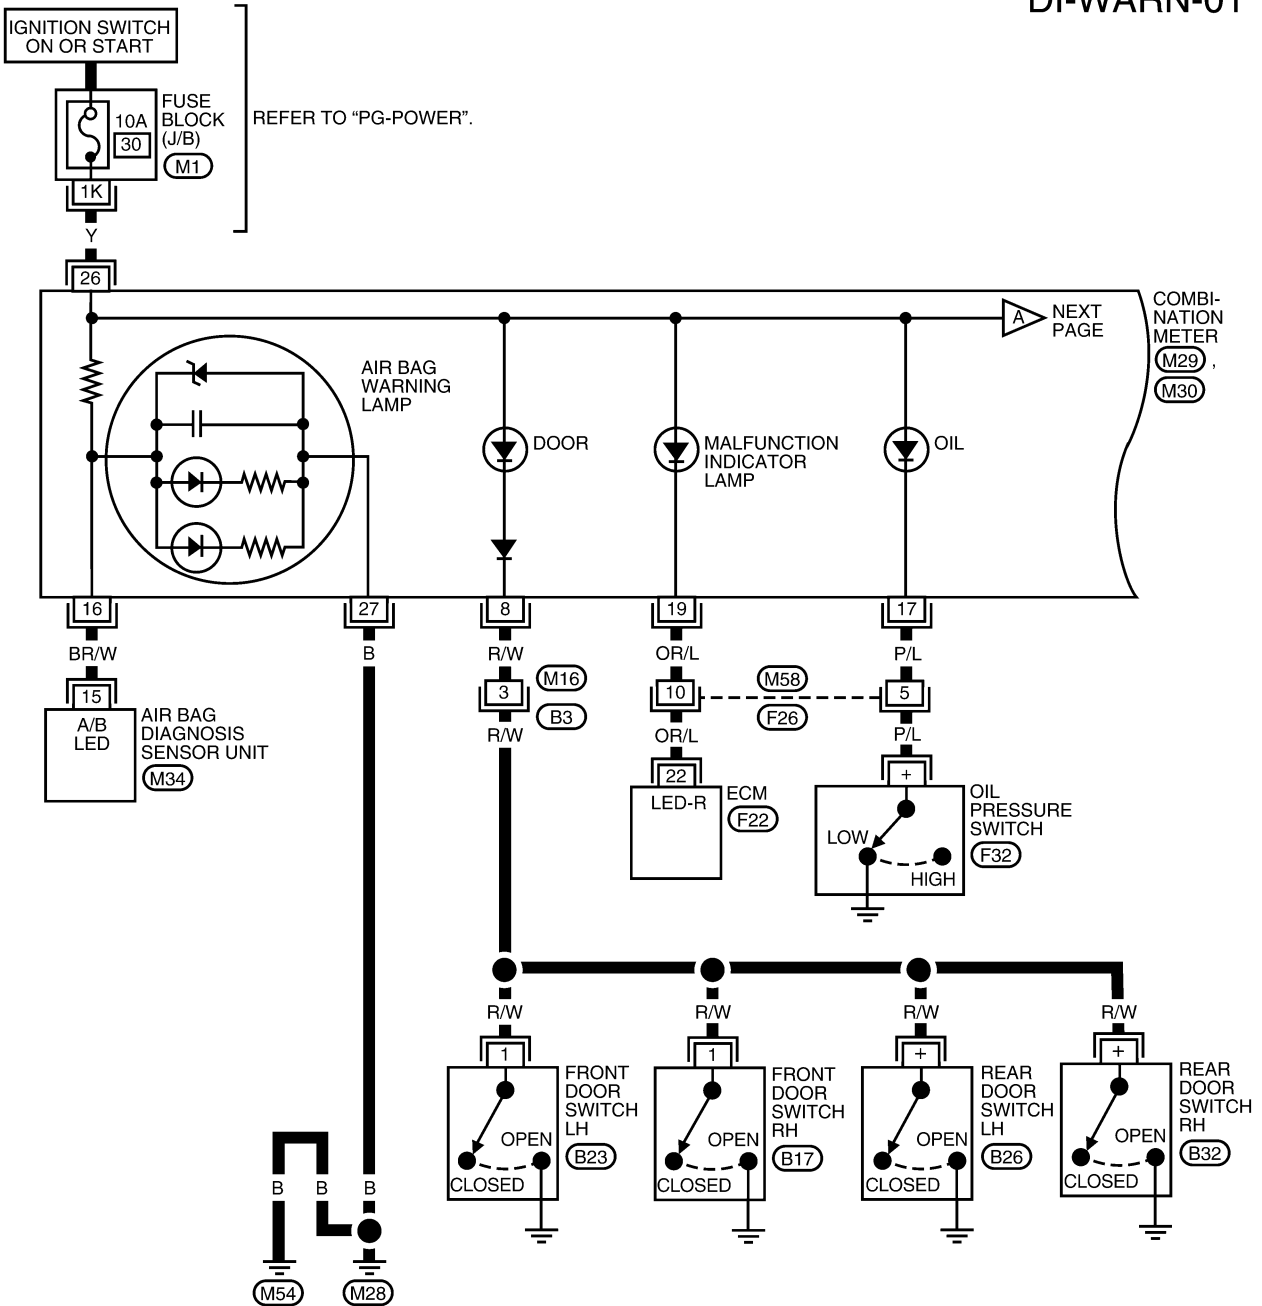


REFER TO THE FOLLOWING.
(F22) - ELECTRICAL UNITS






WKWA0019E

WARNING LAMPS

DI-WARN-02

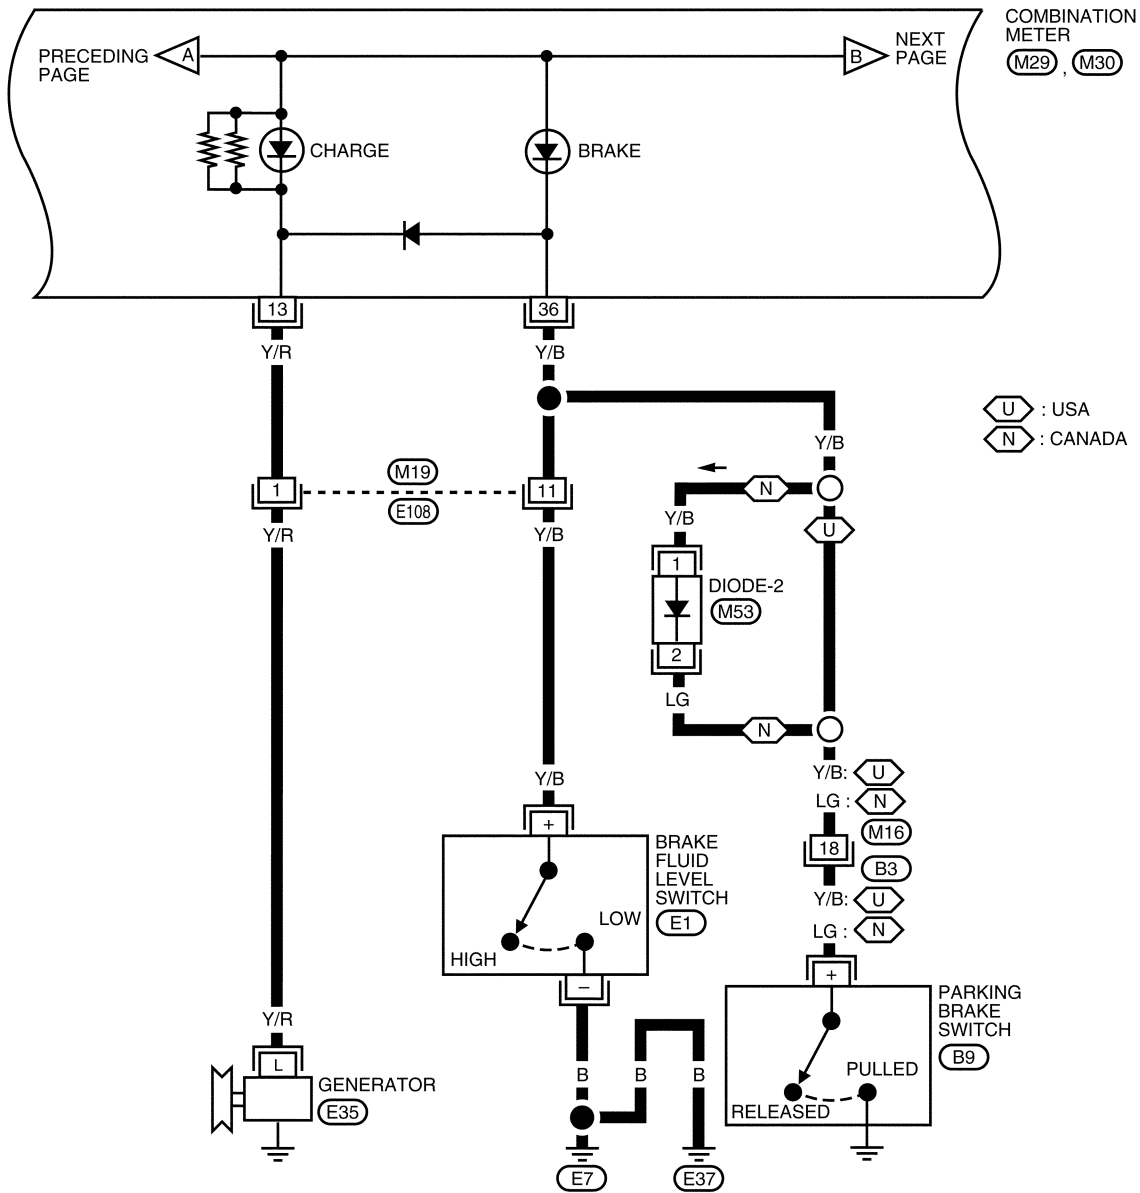







U : USA
N : CANADA



WKWA0401E

WARNING LAMPS





DI-WARN-03

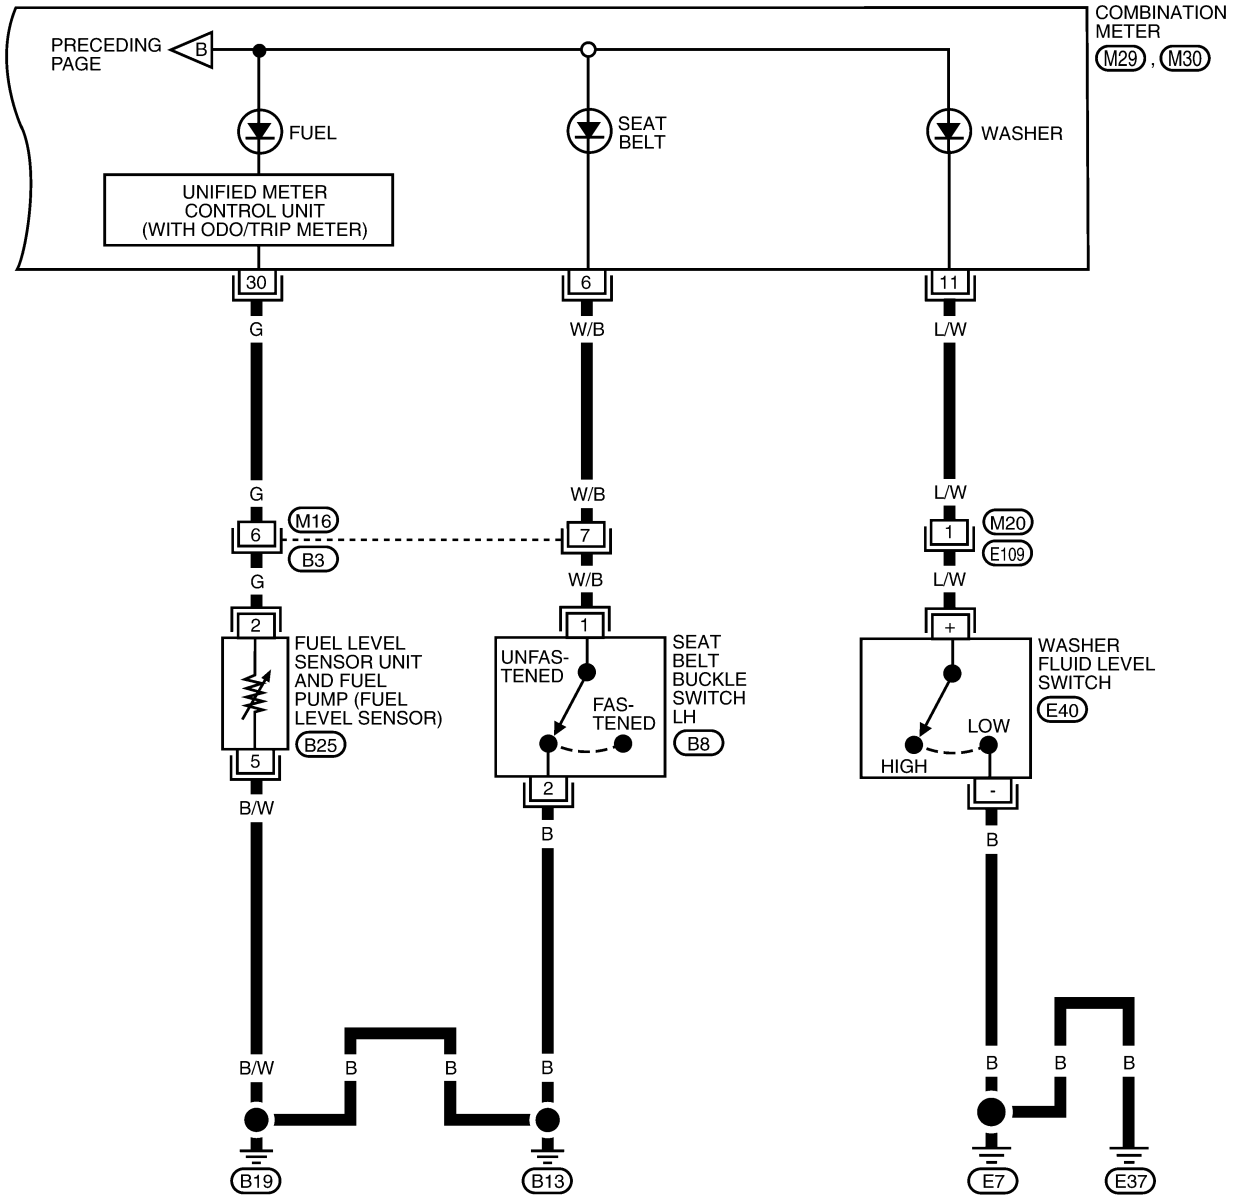

WARNING LAMPS

WITH TACHOMETER


DI-WARN-04

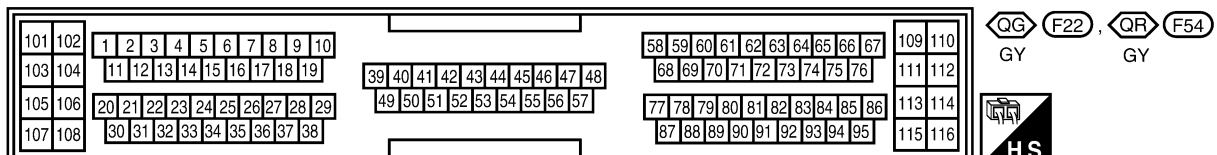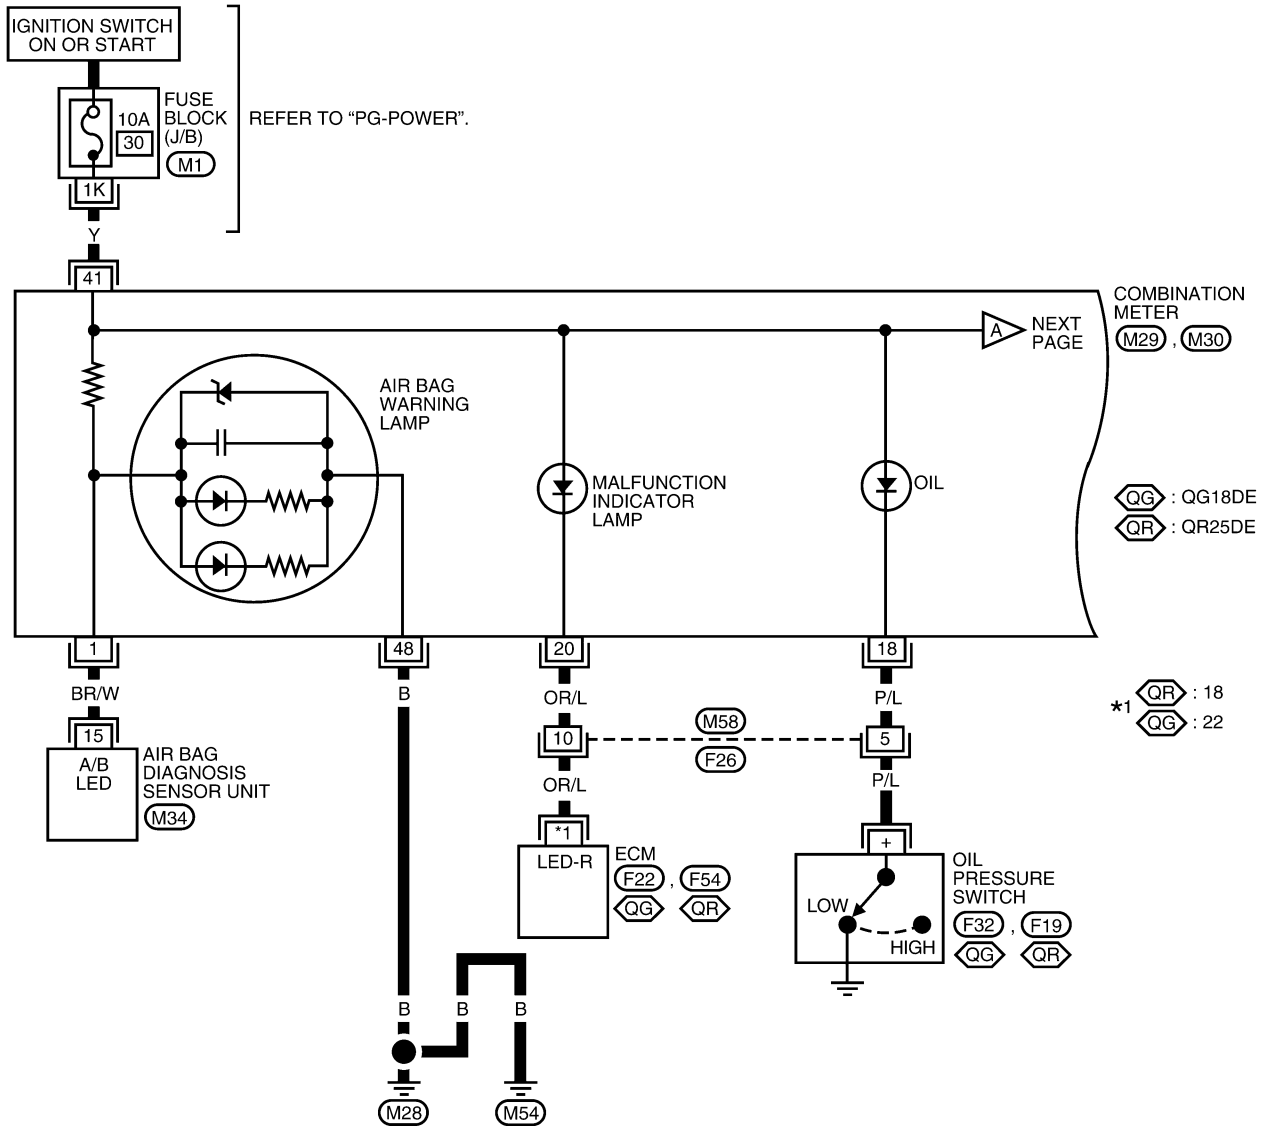


WKWA0038E

WARNING LAMPS

DI-WARN-05

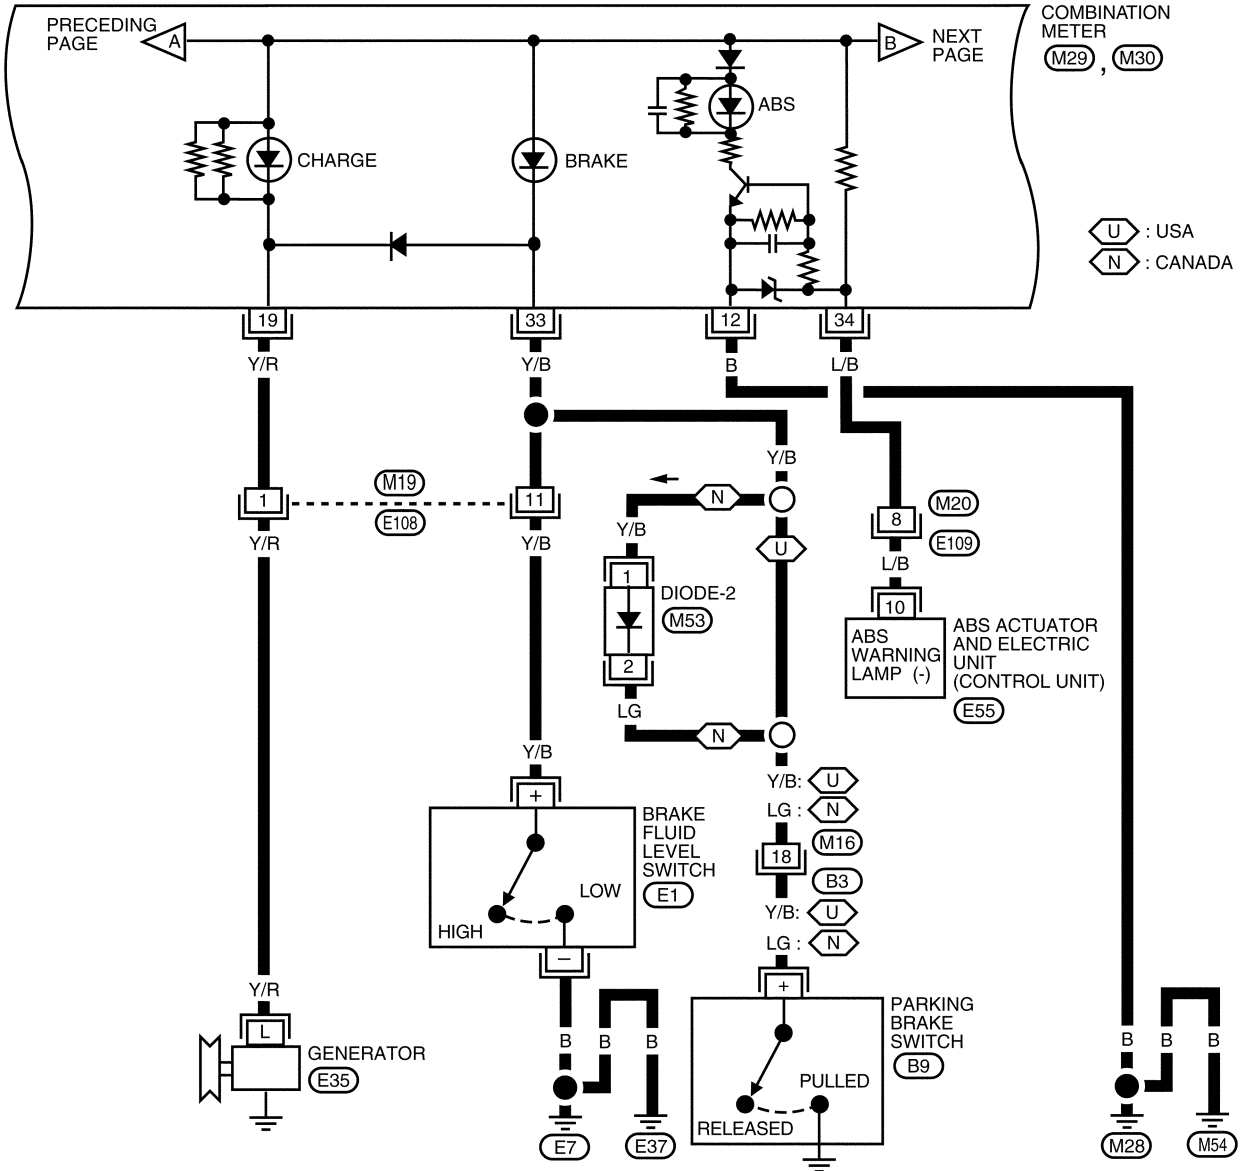

U : USA
N : CANADA


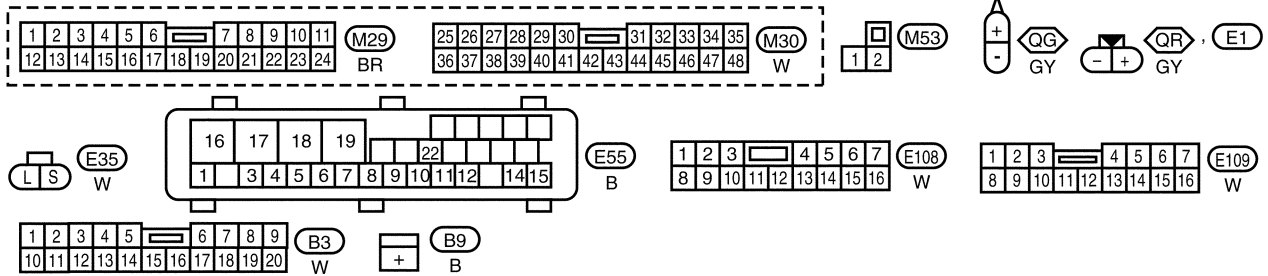


WKWA0402E
WKWA0402E

WARNING LAMPS

DI-WARN-06




MR : WITH REMOTE KEYLESS ENTRY SYSTEM
 OM : WITHOUT REMOTE KEYLESS ENTRY SYSTEM

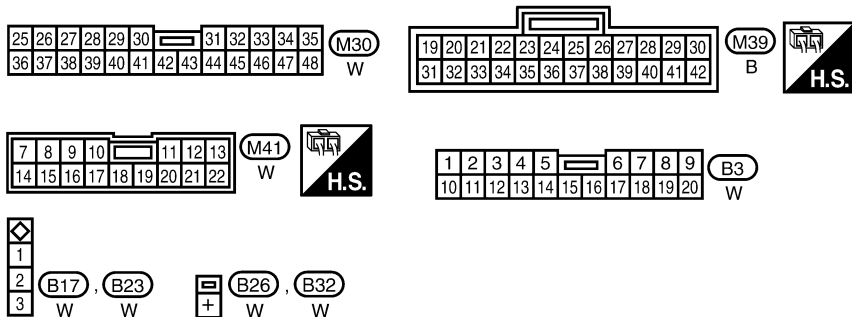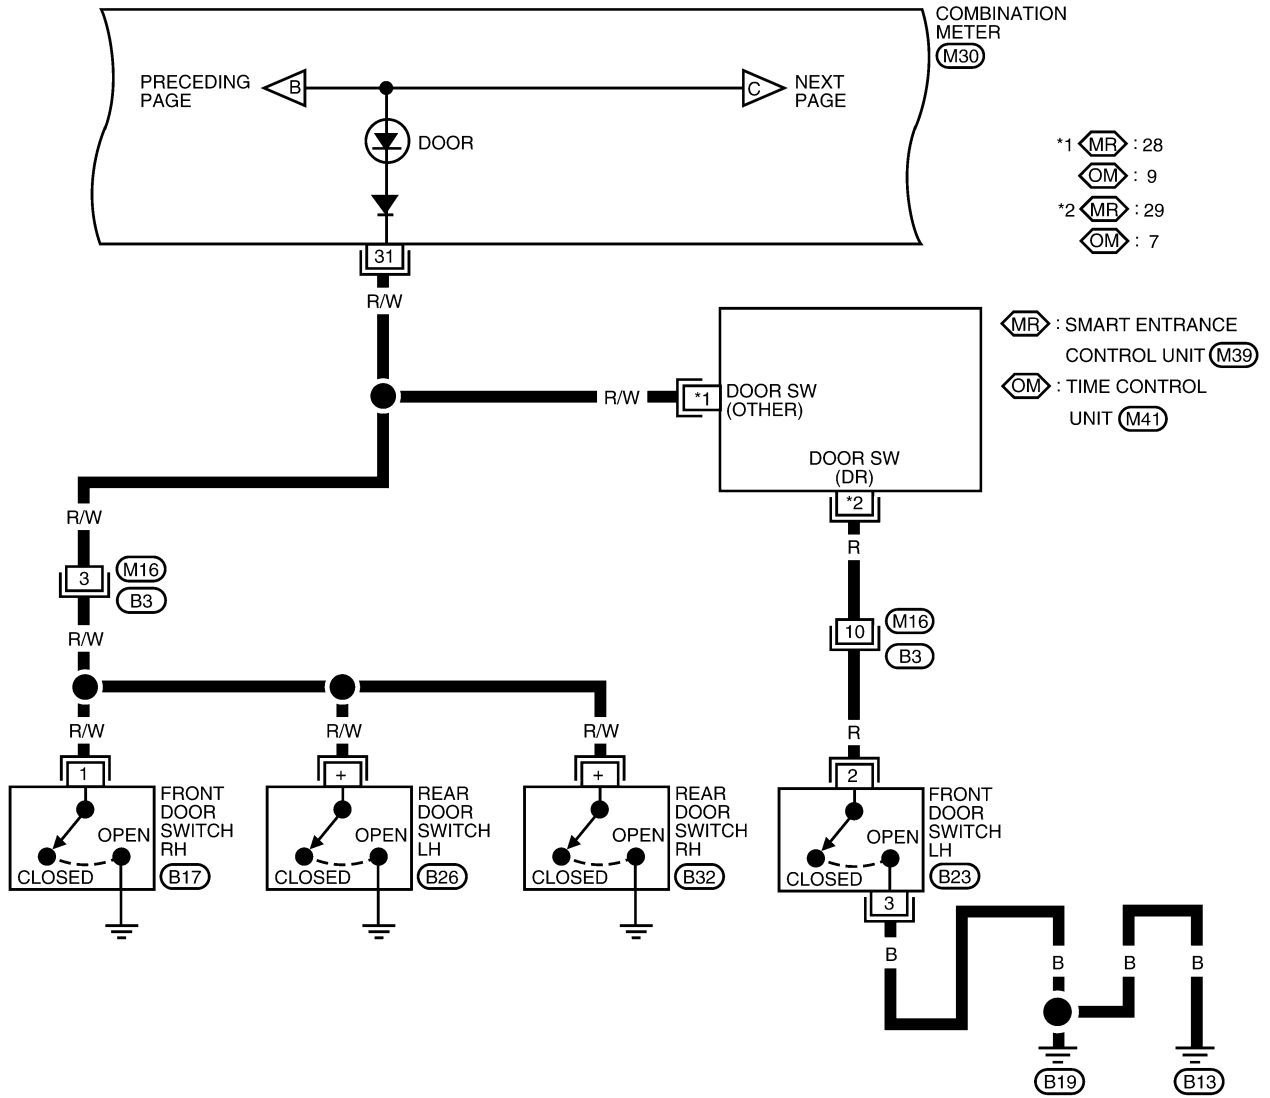

WKWA0040E

WARNING LAMPS

DI-WARN-07

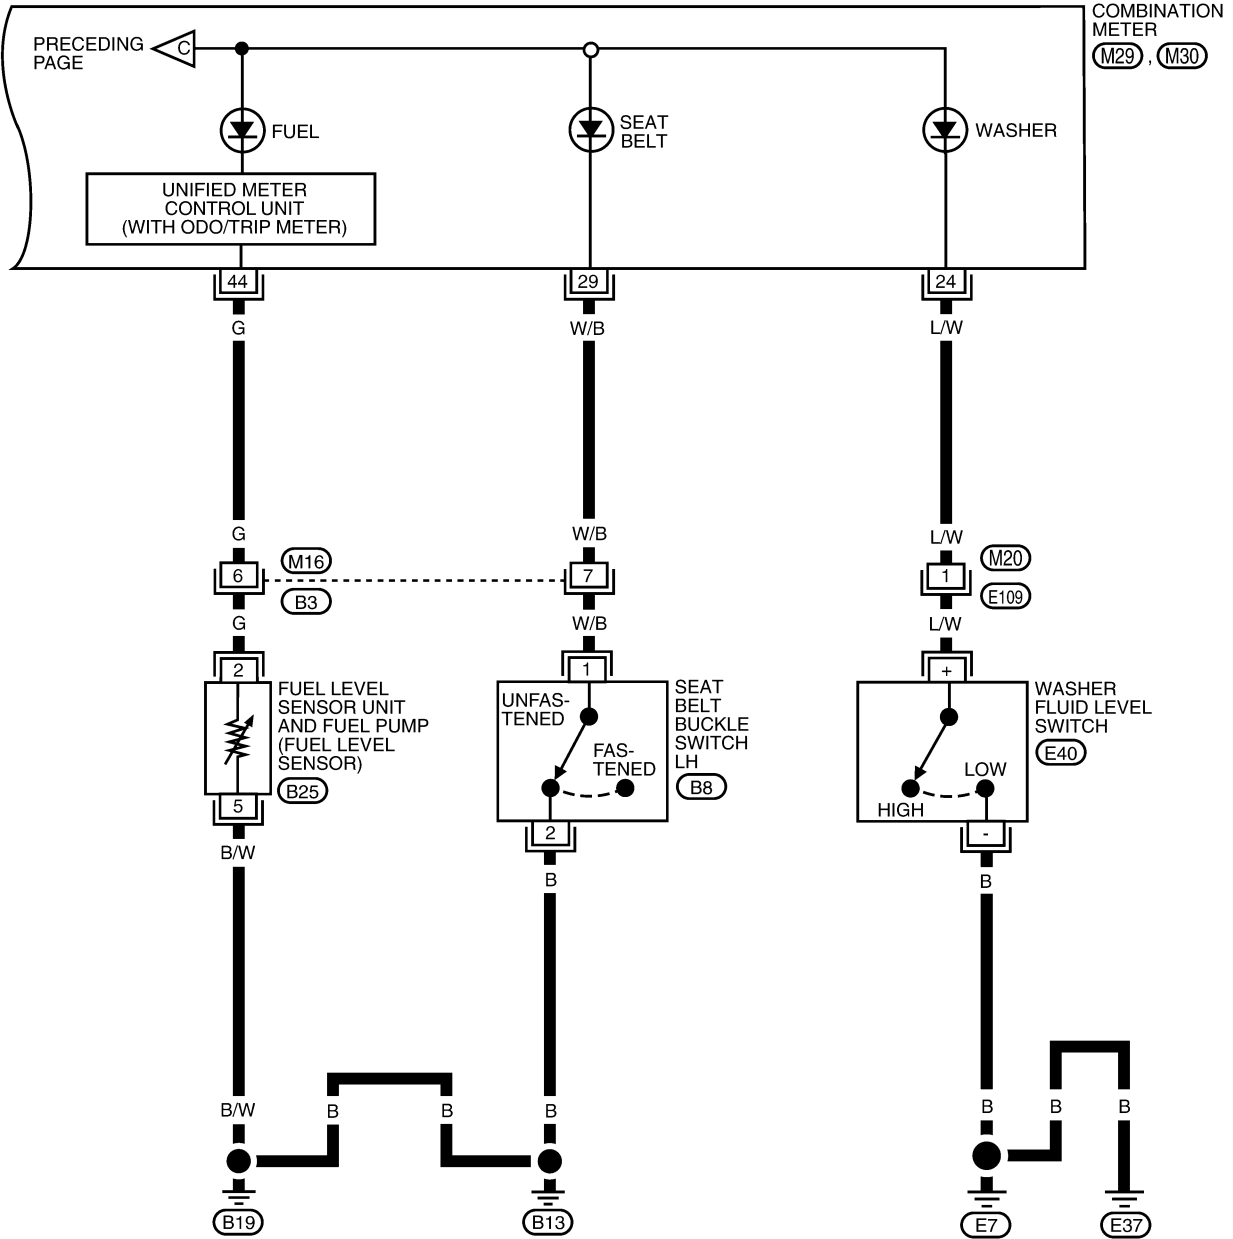

WKWA0398E

WARNING LAMPS

EKS002BD

Electrical Components Inspection FUEL WARNING LAMP OPERATION CHECK

1. Turn ignition switch OFF.
2. Disconnect fuel level sensor unit and fuel pump harness connector B25.
3. Connect a resistor (80Ω) between fuel level sensor unit and fuel pump harness connector terminals 2 and 5.
4. Turn ignition switch ON.


The fuel warning lamp should come on.

NOTE:

ECM might store the 1st trip DTC P0180 and the 1st trip DTC P0464 during this inspection.

If the DTC is stored in ECM memory, erase the DTC after reconnecting fuel level sensor unit and fuel pump harness connector.


Refer to [EC-73, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION"](#) [QG18DE (except Calif. CA Model)], [EC-637, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION"](#) [QG18DE (Calif. CA Model)], or [EC-1271, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION"](#) (QR25DE).

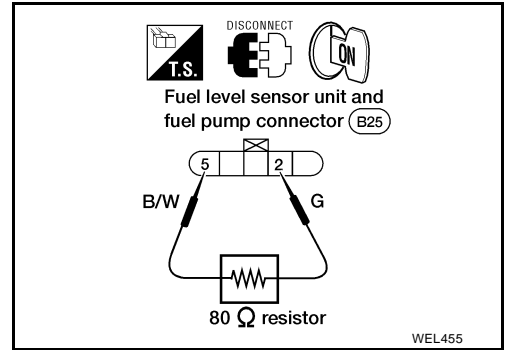

OIL PRESSURE SWITCH CHECK

	Oil pressure kPa (kg/cm ² , psi)	Continuity
Engine running	More than 10 - 20 (0.1 - 0.2, 1 - 3)	No
Engine not running	Less than 10 - 20 (0.1 - 0.2, 1 - 3)	Yes

Check the continuity between the terminals of oil pressure switch and body ground.

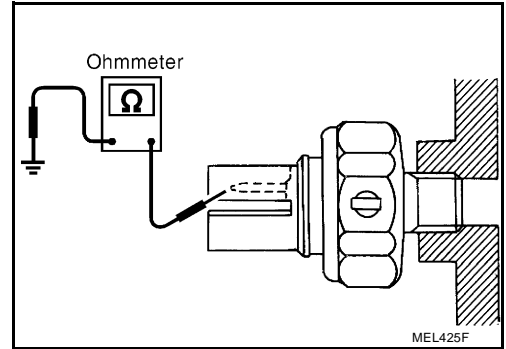


DIODE CHECK

- Check continuity using an ohmmeter.
- Diode is functioning properly if test results are as shown in the figure.
- Check diodes at the combination meter harness connector instead of on the combination meter assembly. Refer to [DI-26, "Wiring Diagram — WARN —"](#).

NOTE:

Specification may vary depending on the type of tester. Before performing this inspection, be sure to refer to the instruction manual for the tester to be used.

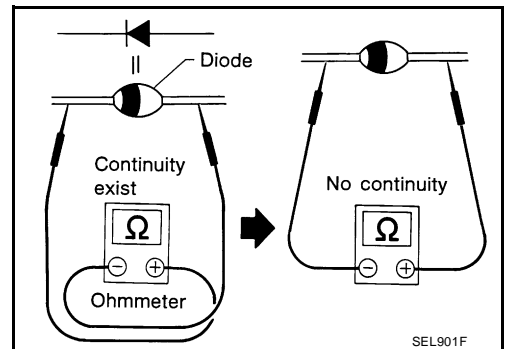


WARNING CHIME

WARNING CHIME

PF2:24814

Component Parts and Harness Connector Location

EKS002BE

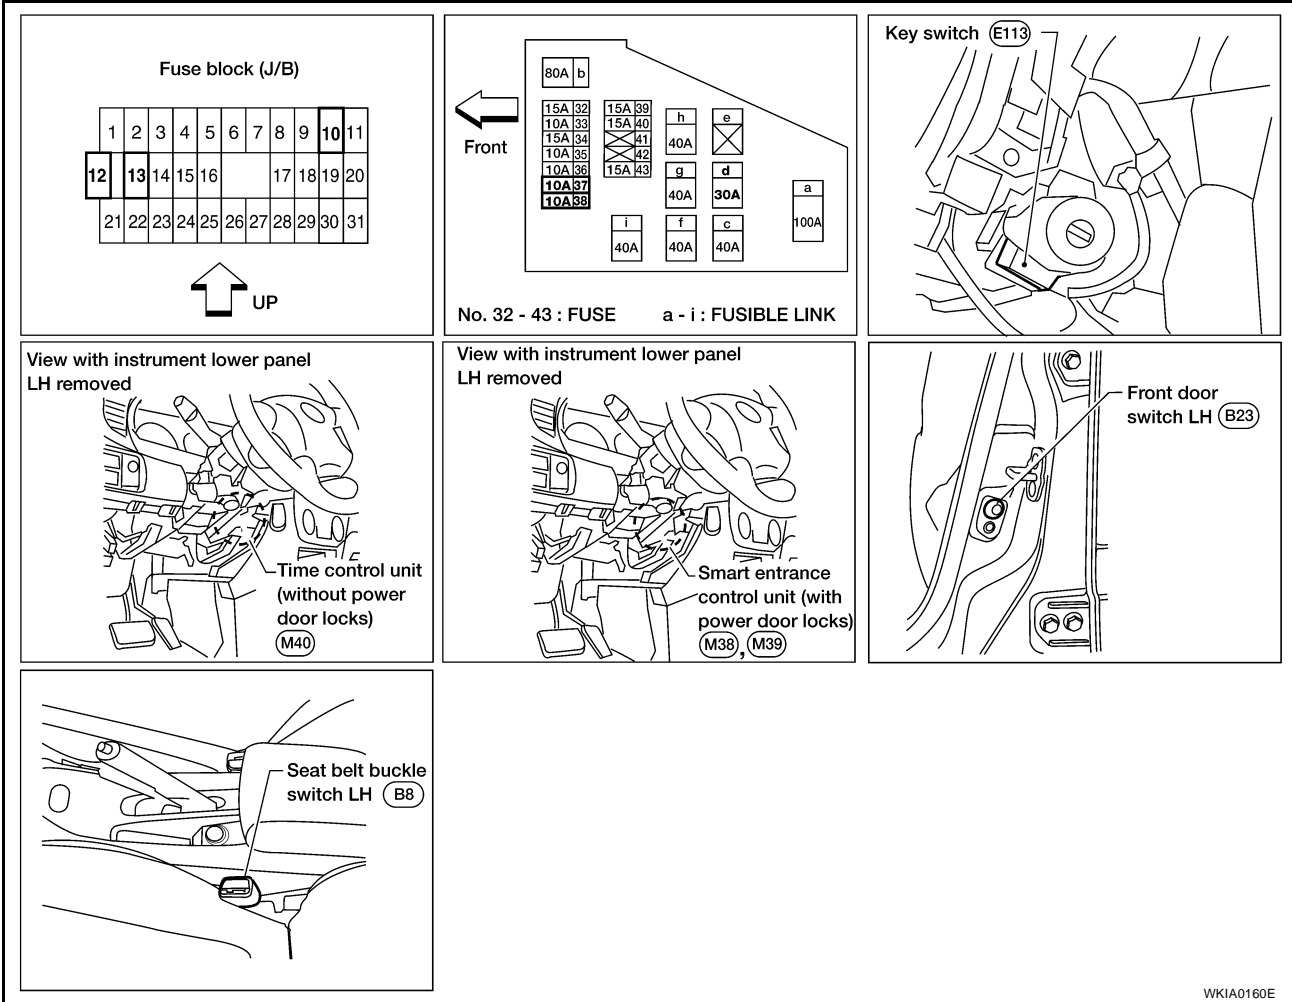

WKIA0160E

WARNING CHIME

EKS002BF

System Description WITHOUT POWER DOOR LOCKS

The warning chime is controlled by the time control unit.

The warning chime is located in the time control unit.

Power is supplied at all times:

- through 10A fuse [No. 13, located in fuse block (J/B)]
- to time control unit terminal 7
- through 10A fuse [No. 12, located in the fuse block (J/B)]
- to key switch terminal 2, and
- through 10A fuse (No. 38, located in the fuse and fusible link box)
- to lighting switch terminal 11.

With the ignition switch in the ON or START position, power is supplied:

- through 10A fuse [No. 10, located in the fuse block (J/B)]
- to time control unit terminal 9.

Ground is supplied to time control unit terminal 8 through body grounds M28 and M54.

When a signal, or combination of signals, is received by the time control unit, the warning chime will sound.

Ignition Key Warning Chime

With the key in the ignition switch, the ignition switch in the OFF position, and the driver door open, the warning chime will sound.

Power is supplied:

- from key switch terminal 1
- to time control unit terminal 4.

Ground is supplied:

- from front door switch LH terminal 2
- to time control unit terminal 2.

Front door switch LH terminal 3 is grounded through body grounds B13 and B19.

Light Warning Chime

With ignition switch OFF, driver door open, and lighting switch in parking lamp (1ST) or ON (2ND) position, warning chime will sound.

Power is supplied:

- from lighting switch terminal 12
- to time control unit terminal 5.

Ground is supplied:

- from front door switch LH terminal 2
- to time control unit terminal 2.

Front door switch LH terminal 3 is grounded through body grounds B13 and B19.

Seat Belt Warning Chime

With ignition switch turned ON and seat belt unfastened (seat belt buckle switch LH ON), warning chime will sound for approximately 6 seconds.

Ground is supplied:

- from seat belt buckle switch LH terminal 1
- to time control unit terminal 1.

Seat belt buckle switch LH terminal 2 is grounded through body grounds B13 and B19.

WITH POWER DOOR LOCKS

The warning chime is controlled by the smart entrance control unit.

The warning chime is located in the smart entrance control unit.

Power is supplied at all times:

- through 10A fuse (No. 37, located in fuse and fusible link box)
- to smart entrance control unit terminal 10,
- through 10A fuse [No. 12, located in the fuse block (J/B)]

A

B

C

D

E

F

G

H

I

J

DI

L

M

WARNING CHIME

- to key switch terminal 2, and
- through 10A fuse (No. 38, located in the fuse and fusible link box)
- to lighting switch terminal 11.

With the ignition switch in the ON or START position, power is supplied:

- through 10A fuse [No. 10, located in the fuse block (J/B)]
- to smart entrance control unit terminal 33.

Ground is supplied to smart entrance control unit terminal 16 through body grounds M28 and M54.

When a signal, or combination of signals, is received by the smart entrance control unit, the warning chime will sound.

Ignition Key Warning Chime

With the key in the ignition switch, the ignition switch in the OFF position, and the driver door open, the warning chime will sound.

Power is supplied:

- from key switch terminal 1
- to smart entrance control unit terminal 32.

Ground is supplied:

- from front door switch LH terminal 2
- to smart entrance control unit terminal 29.

Front door switch LH terminal 3 is grounded through body grounds B13 and B19.

Light Warning Chime

With ignition switch OFF, driver door open, and lighting switch in parking lamp (1ST) or ON (2ND) position, warning chime will sound.

Power is supplied:

- from lighting switch terminal 12
- to smart entrance control unit terminal 34.

Ground is supplied:

- from front door switch LH terminal 2
- to smart entrance control unit terminal 29.

Front door switch LH terminal 3 is grounded through body grounds B13 and B19.

Seat Belt Warning Chime

With ignition switch turned ON and seat belt unfastened (seat belt switch ON), warning chime will sound for approximately 6 seconds.

Ground is supplied:

- from seat belt buckle switch LH terminal 1
- to smart entrance control unit terminal 22.





Seat belt buckle switch LH terminal 2 is grounded through body grounds B13 and B19.

WARNING CHIME

EKS002BG

Wiring Diagram — CHIME — WITHOUT POWER DOOR LOCKS

DI-CHIME-01

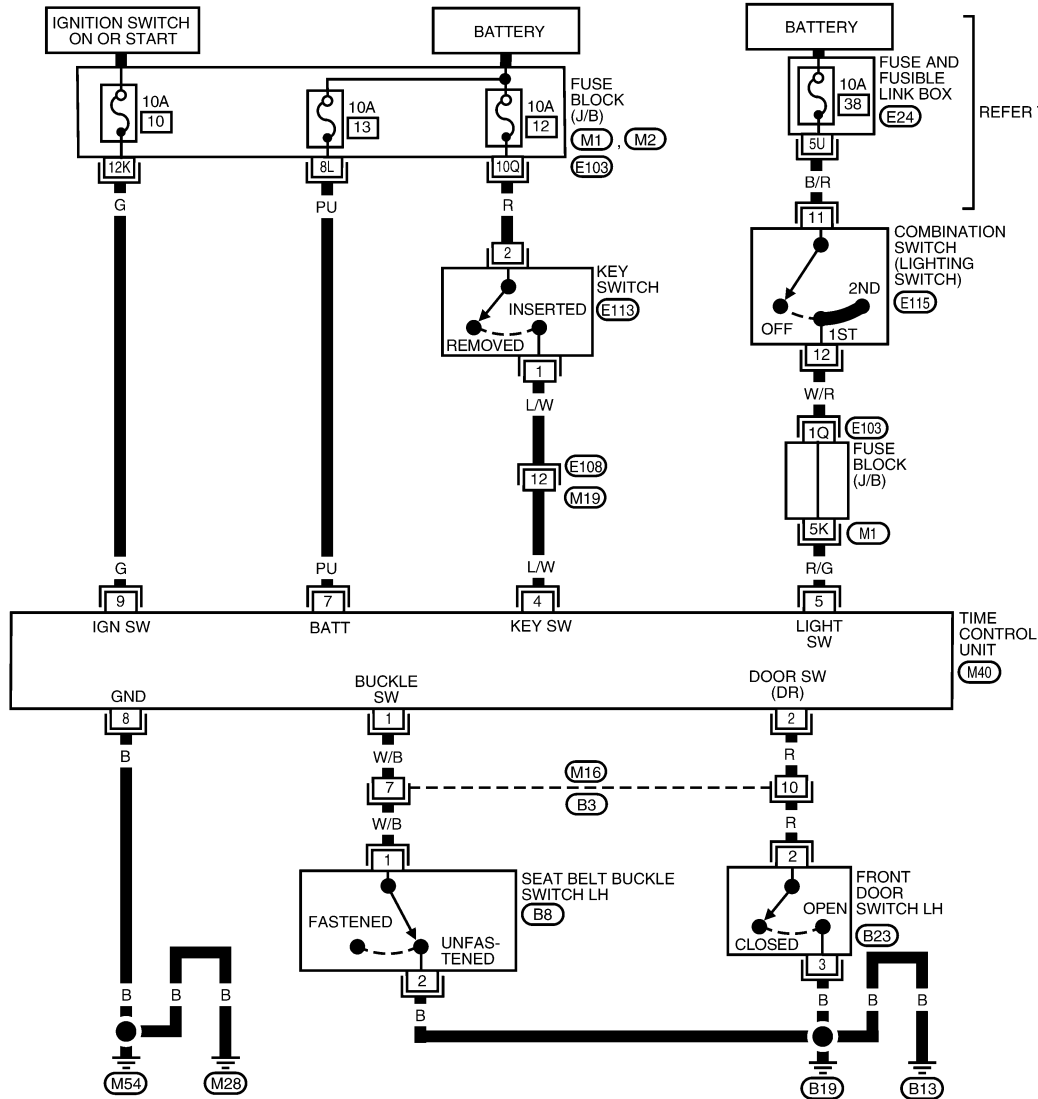

WKWA0042E

TIME CONT. UNIT (WITHOUT POWER DOOR LOCKS) TERMINALS AND REFERENCE VALUE MEASURED BETWEEN EACH TERMINAL AND GROUND

TERMINAL	WIRE COLOR	ITEM	CONDITION	DATA (DC)
1	W/B	SEAT BELT BUCKLE SWITCH LH	UNFASTEN (IGNITION KEY IN ON POSITION)	0V
			FASTEN (IGNITION SWITCH IN ON POSITION)	5V
2	R	FRONT DOOR SWITCH LH	OFF (CLOSED)	5V
			ON (OPEN)	0V
4	L/W	IGNITION KEY SWITCH (INSERT)	IGNITION KEY IS INSERTED	12V
			IGNITION KEY IS REMOVED	0V
5	R/G	COMBINATION SWITCH (LIGHTING SWITCH)	1ST, 2ND POSITIONS: ON	12V
			OFF	0V
7	PU	POWER SOURCE (FUSE)	—	12V
8	B	GROUND	—	—
9	G	IGNITION SWITCH (ON)	IGNITION KEY IS IN ON POSITION	12V
			IGNITION SWITCH (START)	12V


LEL597

WARNING CHIME


CONSULT-II Inspection Procedure (With Power Door Locks) “KEY WARN ALM”/“LIGHT WARN ALM”/“SEAT BELT ALM”

EKS002BH


1. Turn ignition switch OFF.
2. Connect “CONSULT-II” to the data link connector.

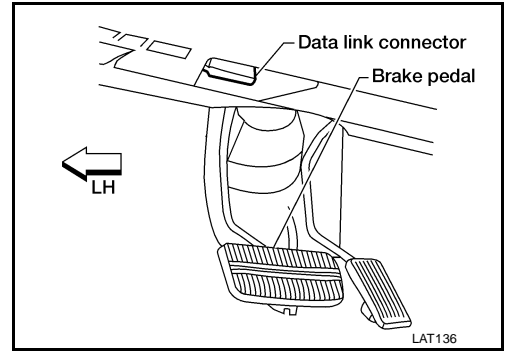


3. Turn ignition switch ON.
4. Touch “START”.

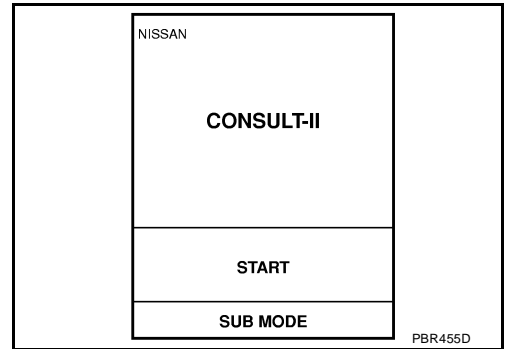

5. Touch “SMART ENTRANCE”.

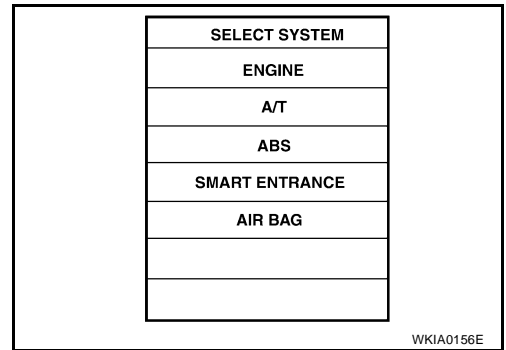


6. Touch “KEY WARN ALM”, “LIGHT WARN ALM” or “SEAT BELT ALM”.

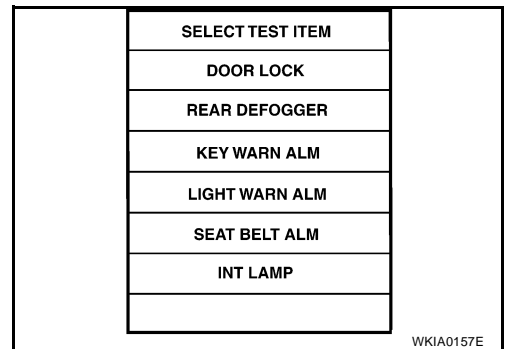

A
B
C
D
E
F
G
H
I
J
DI
L
M

WARNING CHIME

7. Select diagnosis mode. “DATA MONITOR” and “ACTIVE TEST” are available for the warning chime.

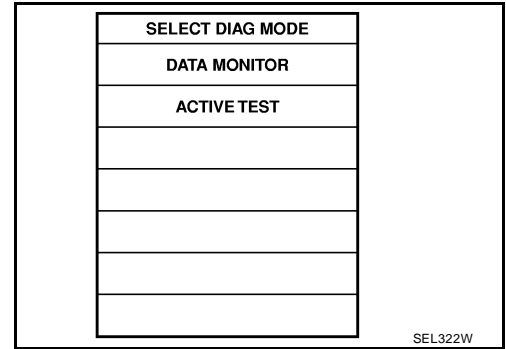

CONSULT-II Application Items (With Power Door Locks) “KEY WARN ALARM”

EKS002BI

Data Monitor

Monitored Item	Description
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.
KEY ON SW	Indicates [ON/OFF] condition of key switch.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch LH.

Active Test

Test Item	Description
CHIME	This test is able to check key warning chime operation. Key warning chime sounds for 2 seconds after touching “ON” on CONSULT-II screen.

“LIGHT WARN ALM”

Data Monitor

Monitored Item	Description
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.
HD/LMP 1ST SW	Indicates [ON/OFF] condition of lighting switch.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch LH.

Active Test

Test Item	Description
CHIME	This test is able to check light warning chime operation. Light warning chime sounds for 2 seconds after touching “ON” on CONSULT-II screen.

“SEAT BELT ALM”

Data Monitor

Monitored Item	Description
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.
SEAT BELT SW	Indicates [ON/OFF] condition of seat belt buckle switch LH.

Active Test

Test Item	Description
CHIME	This test is able to check seat belt warning chime operation. Seat belt warning chime sounds for 2 seconds after touching “ON” on CONSULT-II screen.

WARNING CHIME

Trouble Diagnoses (Without Power Door Locks) SYMPTOM CHART

EKS002BJ


REFERENCE PAGE	DI-41	DI-43	DI-44	DI-45	DI-45
SYMPTOM	POWER SUPPLY AND GROUND CIRCUIT CHECK	DIAGNOSTIC PROCEDURE 1 (LIGHTING SWITCH INPUT SIGNAL CHECK)	DIAGNOSTIC PROCEDURE 2 (KEY SWITCH INSERT SIGNAL CHECK)	DIAGNOSTIC PROCEDURE 3 (SEAT BELT BUCKLE SWITCH LH CHECK)	DIAGNOSTIC PROCEDURE 4
Light warning chime does not activate.	X	X			X
Ignition key warning chime does not activate.	X		X		X
Seat belt warning chime does not activate.	X			X	X
All warning chimes do not activate.	X				X

X: Applicable

POWER SUPPLY AND GROUND CIRCUIT CHECK

Power Supply Circuit Check

Terminals		(-)	Ignition switch position			
(+)	Connector		Terminal (Wire color)	OFF	ACC	ON
	M40	7 (PU)	Ground	Battery voltage	Battery voltage	Battery voltage
	M40	9 (G)	Ground	0V	0V	Battery voltage

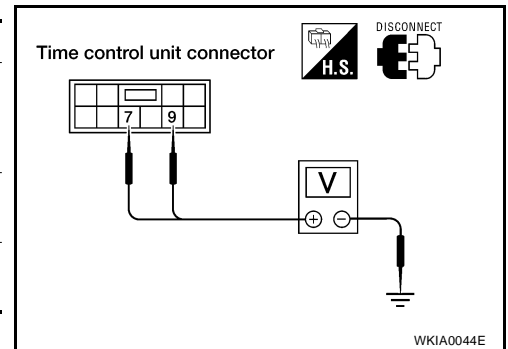


WKIA0044E

WARNING CHIME

Ground Circuit Check

Terminals			Continuity
(+)		(-)	
Connector	Terminal (Wire color)		
M40	8 (B)	Ground	Yes

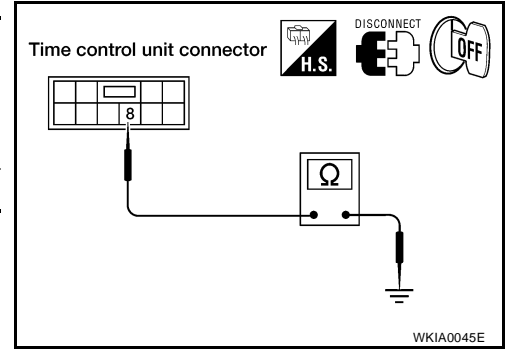

WARNING CHIME

DIAGNOSTIC PROCEDURE 1 (LIGHTING SWITCH INPUT SIGNAL CHECK)

1. CHECK LIGHTING SWITCH INPUT SIGNAL

Check voltage between time control unit terminal 5 and ground.


Terminals		Condition of lighting switch			
(+)		(-)	1st position	2nd position	OFF
Connector	Terminal (Wire color)		Battery voltage	Battery voltage	0V
M40	5 (R/G)	Ground	Battery voltage	Battery voltage	0V

OK or NG

OK >> Lighting switch is OK.

NG >> Check the following.

- 10A fuse (No. 38, located in the fuse and fusible link box)
- Harness for open or short between control unit and lighting switch

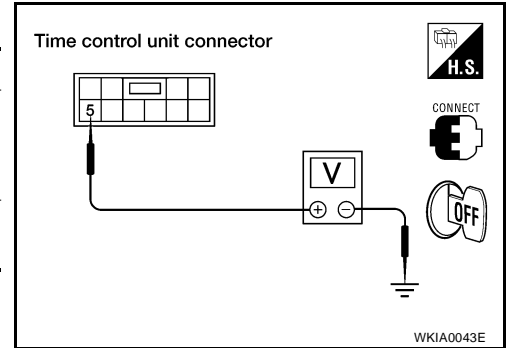

A
B
C
D
E
F
G
H
I
J
L
M

DI

WARNING CHIME

DIAGNOSTIC PROCEDURE 2 (KEY SWITCH INSERT SIGNAL CHECK)


1. CHECK KEY SWITCH INPUT SIGNAL

Check voltage between time control unit terminal 4 and ground.

Terminals		Condition of key switch		
(+)		(-)	Key inserted	Key removed
Connector	Terminal (Wire color)			
M40	4 (L/W)	Ground	Battery voltage	0V


OK or NG

- OK >> Key switch is OK.
- NG >> GO TO 2.

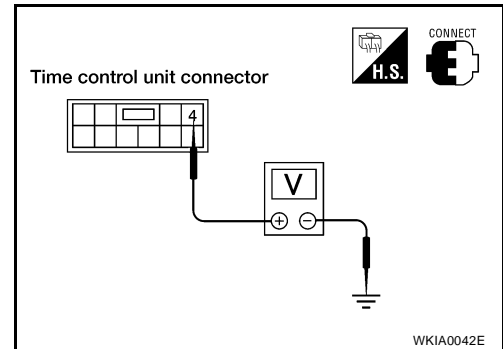

2. CHECK KEY SWITCH

Check continuity between terminals 1 and 2.

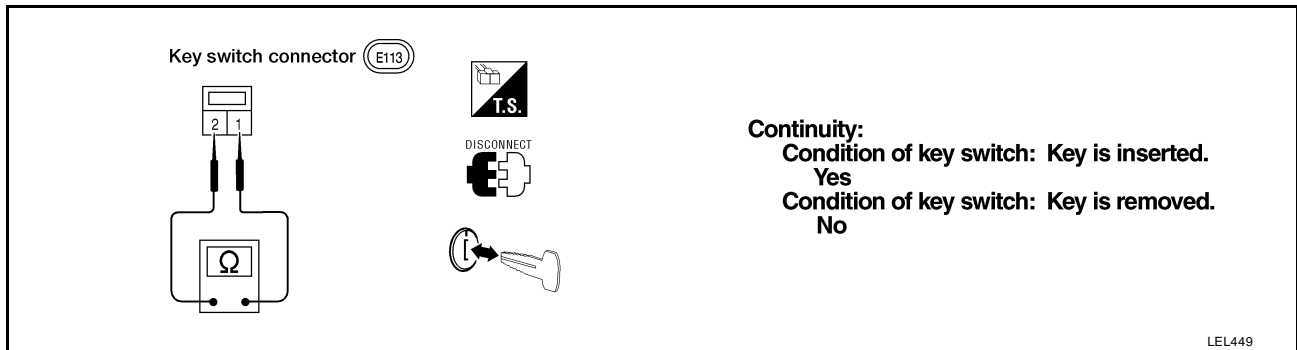

OK or NG

- OK >> Check the following.
 - 10A fuse [No. 12, located in fuse block (J/B)]
 - Harness for open or short between key switch and fuse
 - Harness for open or short between time control unit and key switch
- NG >> Replace key switch.

WARNING CHIME

DIAGNOSTIC PROCEDURE 3 (SEAT BELT BUCKLE SWITCH LH CHECK)


1. CHECK SEAT BELT BUCKLE SWITCH LH INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between time control unit terminal 1 and ground.

Terminals		Condition of seat belt buckle switch LH		
(+)		(-)	Fastened	Unfastened
Connector	Terminal (Wire color)			
M40	1 (W/B)	Ground	Approx. 5V	0V


OK or NG

- OK >> Seat belt buckle switch LH is OK.
 NG >> GO TO 2.

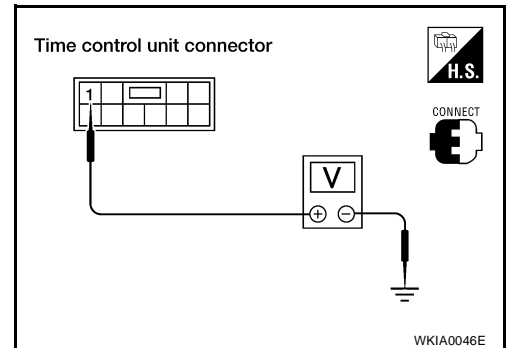

2. CHECK SEAT BELT BUCKLE SWITCH LH

Check continuity between terminals 1 and 2 when seat belt is fastened and unfastened.

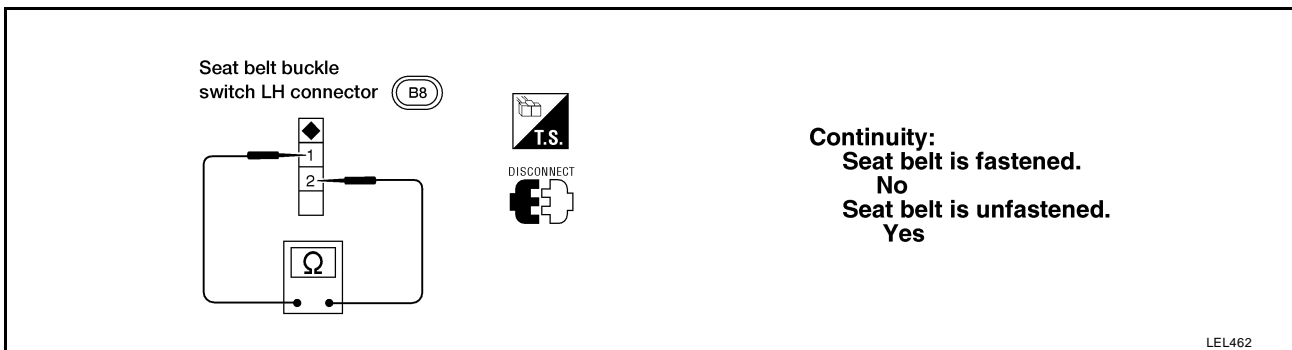

OK or NG

- OK >> Check the following.
- Seat belt buckle switch LH ground circuit
 - Harness for open or short between time control unit and seat belt buckle switch LH
- NG >> Replace seat belt buckle switch LH.

DIAGNOSTIC PROCEDURE 4


1. CHECK IGNITION ON SIGNAL

Check voltage between time control unit terminal 9 and ground.

Terminals		Ignition switch position		
(+)	(-)	OFF	ACC	ON
9 (G)	Ground	0V	0V	Battery voltage

OK or NG

- OK >> GO TO 2.
 NG >> Check the following.
- 10A fuse [No. 10, located in fuse block (J/B)]
 - Harness for open or short between time control unit and fuse

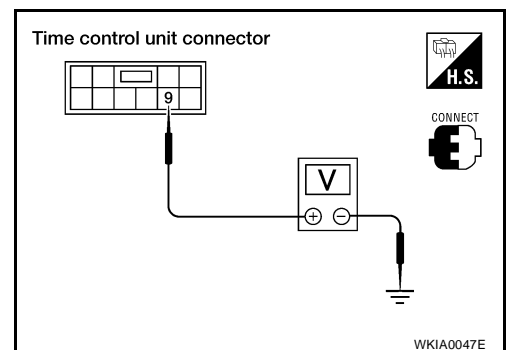

WARNING CHIME


2. CHECK FRONT DOOR SWITCH LH INPUT SIGNAL

With ignition switch OFF, check voltage between time control unit terminal 2 and ground.

Terminals		Condition of driver's door		
(+)		(-)	Closed	Open
Connector	Terminal (Wire color)			
M40	2 (R)	Ground	Approx. 5V	0V


OK or NG

- OK >> System is OK.
- NG >> GO TO 3.

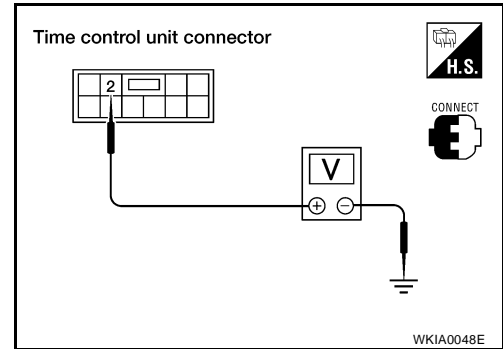

3. CHECK FRONT DOOR SWITCH LH

Check continuity between terminals 2 and 3.

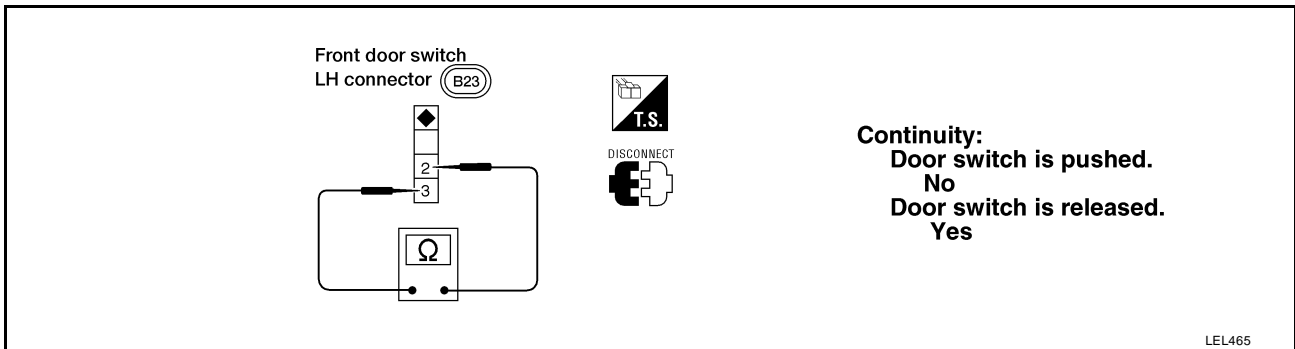

OK or NG

- OK >> Check the following.
 - Front door switch LH ground circuit and condition
 - Harness for open or short between time control unit and front door switch LH
- NG >> Replace front door switch LH.

WARNING CHIME

Trouble Diagnoses (With Power Door Locks) SYMPTOM CHART

EKS002BK


REFERENCE PAGE	DI-47	DI-49	DI-50	DI-51	DI-52
SYMPTOM	POWER SUPPLY AND GROUND CIRCUIT CHECK	DIAGNOSTIC PROCEDURE 1 (LIGHTING SWITCH INPUT SIGNAL CHECK)	DIAGNOSTIC PROCEDURE 2 (KEY SWITCH INSERT SIGNAL CHECK)	DIAGNOSTIC PROCEDURE 3 (SEAT BELT BUCKLE SWITCH LH CHECK)	DIAGNOSTIC PROCEDURE 4
Light warning chime does not activate.	X	X			X
Ignition key warning chime does not activate.	X		X		X
Seat belt warning chime does not activate.	X			X	X
All warning chimes do not activate.	X				X

X: Applicable

POWER SUPPLY AND GROUND CIRCUIT CHECK

Power Supply Circuit Check


Terminals		Ignition switch position		
(+)	(-)	OFF	ACC	ON
10	Ground	Battery voltage	Battery voltage	Battery voltage

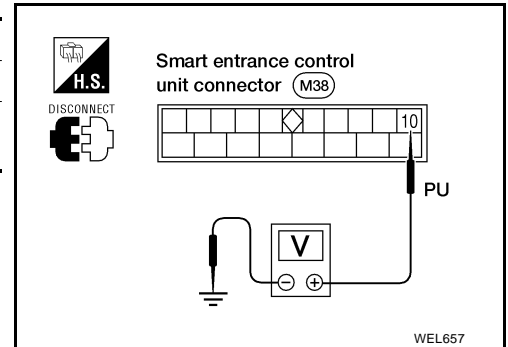

WARNING CHIME

Ground Circuit Check

Terminals			Continuity
(+)		(-)	
Connector	Terminal (Wire color)		
M38	16 (B)	Ground	Yes

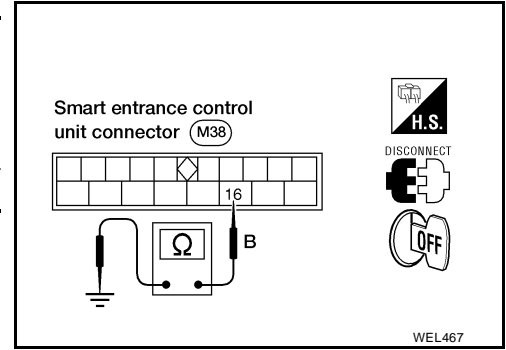

WARNING CHIME

DIAGNOSTIC PROCEDURE 1 (LIGHTING SWITCH INPUT SIGNAL CHECK)

1. CHECK LIGHTING SWITCH INPUT SIGNAL

④ With CONSULT-II

Check lighting switch ("HD/LMP 1ST SW") in "DATA MONITOR" mode with CONSULT-II.

DATA MONITOR	
MONITOR	
HD/LMP 1ST SW	OFF

When lighting switch is in 1st or 2nd position:
HD/LMP 1ST SW ON

When lighting switch is in OFF position:
HD/LMP 1ST SW OFF

SEL316W

⊗ Without CONSULT-II

Check voltage between smart entrance control unit terminal 34 and ground.

Smart entrance control unit connector (M39)

34

R/G

V

H.S.

CONNECT

OFF

Voltage [V]:
Condition of lighting switch: Parking lamp (1ST) or ON (2ND)
Approx. 12
Condition of lighting switch: OFF
0

WEL468

OK or NG

OK >> Lighting switch is OK.

NG >> Check the following.

- 10A fuse (No. 38, located in the fuse and fusible link box)
- Harness for open or short between smart entrance control unit and lighting switch

WARNING CHIME

DIAGNOSTIC PROCEDURE 2 (KEY SWITCH INSERT SIGNAL CHECK)

1. CHECK KEY SWITCH INPUT SIGNAL

④ With CONSULT-II

Check key switch ("KEY ON SW") in "DATA MONITOR" mode with CONSULT-II.

DATA MONITOR	
MONITOR	
KEY ON SW	ON

When key is inserted to ignition key cylinder:
KEY ON SW ON

When key is removed from ignition key cylinder:
KEY ON SW OFF

SEL315W

⊗ Without CONSULT-II

Check voltage between smart entrance control unit terminal 32 and ground.

Smart entrance control unit connector (M39)

CONNECT

Voltage [V]:

Condition of key switch: Key is inserted.
Approx. 12

Condition of key switch: Key is removed.
0

WEL469

OK or NG

- OK >> Key switch is OK.
- NG >> GO TO 2.

2. CHECK KEY SWITCH

Check continuity between terminals 1 and 2.

Key switch connector (E113)

T.S.

DISCONNECT

Continuity:

Condition of key switch: Key is inserted.
Yes

Condition of key switch: Key is removed.
No

LEL449

OK or NG

- OK >> Check the following.
 - 10A fuse [No. 12, located in fuse block (J/B)]
 - Harness for open or short between key switch and fuse
 - Harness for open or short between smart entrance control unit and key switch
- NG >> Replace key switch.

WARNING CHIME

DIAGNOSTIC PROCEDURE 3 (SEAT BELT BUCKLE SWITCH LH CHECK)

1. CHECK SEAT BELT BUCKLE SWITCH LH INPUT SIGNAL

With CONSULT-II

Check seat belt buckle switch LH ("SEAT BELT SW") in "DATA MONITOR" mode with CONSULT-II.

DATA MONITOR	
MONITOR	
SEAT BELT SW	ON


When seat belt is fastened:
SEAT BELT SW OFF

When seat belt is released:
SEAT BELT SW ON

LEL658

Without CONSULT-II

1. Turn ignition switch ON.
2. Check voltage between smart entrance control unit terminal 22 and ground.

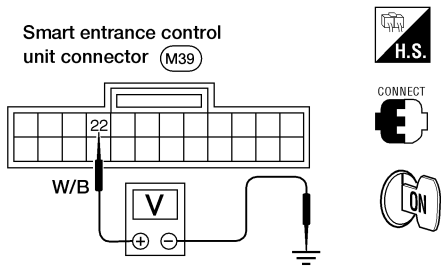

Smart entrance control unit connector (M39)

W/B

V

H.S.

CONNECT

ON

Voltage [V]:
Condition of seat belt buckle switch LH: Fastened
Approx. 5
Condition of seat belt buckle switch LH: Unfastened
0


WEL470

OK or NG

- OK >> Seat belt buckle switch LH is OK.
NG >> GO TO 2.

2. CHECK SEAT BELT BUCKLE SWITCH LH

Check continuity between terminals 1 and 2 when seat belt is fastened and unfastened.

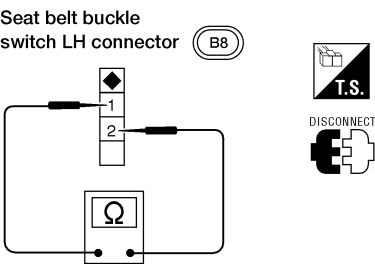

Seat belt buckle switch LH connector (B8)

1

2

Ω

T.S.

DISCONNECT

Continuity:
Seat belt is fastened.
No
Seat belt is unfastened.
Yes

LEL462

OK or NG

- OK >> Check the following.
- Seat belt buckle switch LH ground circuit
 - Harness for open or short between smart entrance control unit and seat belt buckle switch LH
- NG >> Replace seat belt buckle switch LH.

WARNING CHIME

DIAGNOSTIC PROCEDURE 4

1. CHECK IGNITION ON SIGNAL

④ With CONSULT-II

Check ignition switch ON signal ("IGN ON SW") in "DATA MONITOR" mode with CONSULT-II.


	<table border="1" style="border-collapse: collapse; width: 100%;"> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td style="width: 50%;">IGN ON SW</td> <td style="width: 50%;">ON</td> </tr> </table>	DATA MONITOR		MONITOR		IGN ON SW	ON	<p>When ignition switch is ON: IGN ON SW ON</p> <p>When ignition switch is OFF: IGN ON SW OFF</p>
DATA MONITOR								
MONITOR								
IGN ON SW	ON							


SEL318W


⊗ Without CONSULT-II

Check voltage between smart entrance control unit terminal 33 and ground.

Smart entrance control unit connector (M39)

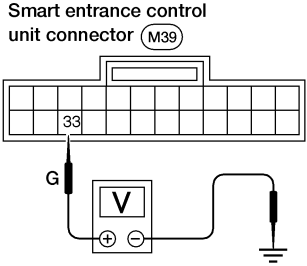





Terminals		Ignition switch position		
(+)	(-)	OFF	ACC	ON
33	Ground	0V	0V	Battery voltage

WEL471

OK or NG

OK >> GO TO 2.

NG >> Check the following.

- 10A fuse [No. 10, located in fuse block (J/B)]
- Harness for open or short between smart entrance control unit and fuse

WARNING CHIME

2. CHECK FRONT DOOR SWITCH LH INPUT SIGNAL

With CONSULT-II

Check front door switch LH signal ("DOOR SW-DR") in "DATA MONITOR" mode with CONSULT-II.

DATA MONITOR	
MONITOR	
DOOR SW-DR	OFF


When driver's door is open:
DOOR SW-DR ON

When driver's door is closed:
DOOR SW-DR OFF

SEL319W

Without CONSULT-II

Check voltage between smart entrance control unit terminal 29 and ground.

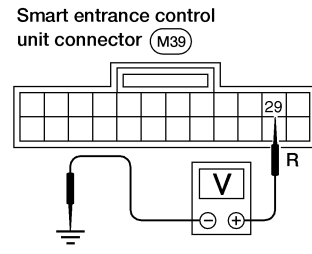

Smart entrance control unit connector (M39)

H.S.
CONNECT

Voltage [V]:
Condition of driver's door: **CLOSED**
Approx. 5
Condition of driver's door: **OPENED**
0


WEL472

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 3.

3. CHECK FRONT DOOR SWITCH LH

Check continuity between terminals 2 and 3.

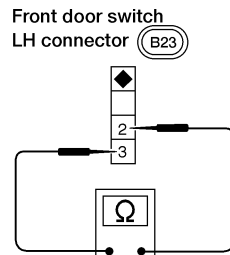

Front door switch LH connector (B23)

T.S.
DISCONNECT

Continuity:
Door switch is pushed.
No
Door switch is released.
Yes

LEL465

OK or NG

- OK >> Check the following.
 - Front door switch LH ground circuit and condition
 - Harness for open or short between smart entrance control unit and front door switch LH
- NG >> Replace front door switch LH.

WARNING CHIME

4. CHECK WARNING CHIME

With CONSULT-II

Perform "CHIME" in "ACTIVE TEST" mode with CONSULT-II.

	ACTIVE TEST	
	CHIME OFF	
	ON <input type="checkbox"/>	

Warning chime should operate.

SEL320W

OK or NG

- OK >> System is OK.
- NG >> Replace smart entrance control unit.