

# SECTION EM

## CONTENTS

|  |  |
|--|--|
| <b>PRECAUTIONS AND PREPARATION</b> .....2    | Front Oil Seal.....25                                |
| Supplemental Restraint System (SRS)          | Rear Oil Seal.....26                                 |
| “AIR BAG”.....2                              | <b>CYLINDER HEAD</b> .....28                         |
| Parts Requiring Angular Tightening.....2     | Removal and Installation.....29                      |
| Liquid Gasket Application Procedure.....2    | Disassembly.....29                                   |
| Special Service Tools.....4                  | Inspection.....30                                    |
| Commercial Service Tools.....7               | Assembly.....35                                      |
| <b>NOISE, VIBRATION AND HARSHNESS (NVH)</b>  | Valve Clearance.....35                               |
| <b>TROUBLESHOOTING</b> .....8                | Checking.....35                                      |
| NVH Troubleshooting Chart—Engine Noise.....9 | Adjusting.....36                                     |
| <b>OUTER COMPONENT PARTS</b> .....10         | <b>ENGINE REMOVAL</b> .....38                        |
| <b>COMPRESSION PRESSURE</b> .....13          | Removal.....39                                       |
| Measurement of Compression Pressure.....13   | Installation.....40                                  |
| <b>OIL PAN</b> .....14                       | <b>CYLINDER BLOCK</b> .....41                        |
| Removal.....14                               | Disassembly.....42                                   |
| Installation.....15                          | Inspection.....42                                    |
| <b>TIMING CHAIN</b> .....16                  | Assembly.....48                                      |
| Removal.....18                               | <b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....52 |
| Upper Timing Chain.....18                    | General Specifications.....52                        |
| Lower Timing Chain.....20                    | Compression Pressure.....52                          |
| Inspection.....21                            | Inspection and Adjustment.....52                     |
| Installation.....21                          | Cylinder Head.....52                                 |
| Lower Timing Chain.....21                    | Valve.....52   |
| Upper Timing Chain.....22                    | Camshaft And Camshaft Bearing.....56                 |
| <b>OIL SEAL REPLACEMENT</b> .....25          | Piston, Piston Ring And Piston Pin.....57            |
| Valve Oil Seal.....25                        | Connecting Rod.....57                                |
| Oil Seal Installing Direction.....25         |  |

## Supplemental Restraint System (SRS) “AIR BAG”

The Supplemental Restraint System “AIR BAG”, used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger in a frontal collision. The Supplemental Restraint System consists of air bag modules (located in the center of the steering wheel and in the instrument panel on the passenger side), a diagnosis sensor unit, a crash zone sensor (4WD models), warning lamp, wiring harness and spiral cable.

The vehicle is equipped with a passenger air bag deactivation switch. Because no rear seat exists where a rear-facing child restraint can be placed, the switch is designed to turn off the passenger air bag so that a rear-facing child restraint can be used in the front passenger seat. The switch is located in the center of the instrument panel, near the ashtray. When the switch is turned to the ON position, the passenger air bag is enabled and could inflate in a frontal collision. When the switch is turned to the OFF position, the passenger air bag is disabled and will not inflate in a frontal collision. A passenger air bag OFF indicator on the instrument panel lights up when the passenger air bag is switched OFF. The driver air bag always remains enabled and is not affected by the passenger air bag deactivation switch.


Information necessary to service the system safely is included in the **RS section** of this Service Manual.

### WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance should be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses are covered with yellow insulation either just before the harness connectors or on the complete harness, for easy identification.
- The vehicle is equipped with a passenger air bag deactivation switch which can be operated by the customer. When the passenger air bag is switched OFF, the passenger air bag is disabled and will not inflate in a frontal collision. When the passenger air bag is switched ON, the passenger air bag is enabled and could inflate in a frontal collision. After SRS maintenance or repair, make sure the passenger air bag deactivation switch is in the same position (ON or OFF) as when the vehicle arrived for service.

### Parts Requiring Angular Tightening

- Use an angle wrench for the final tightening of the following engine parts:
  - (1) Cylinder head bolts
  - (2) Connecting rod cap nuts
- Do not use a torque value for final tightening.
- The torque values for these parts are for a preliminary step.
- Ensure thread and seat surfaces are clean and coated with engine oil.

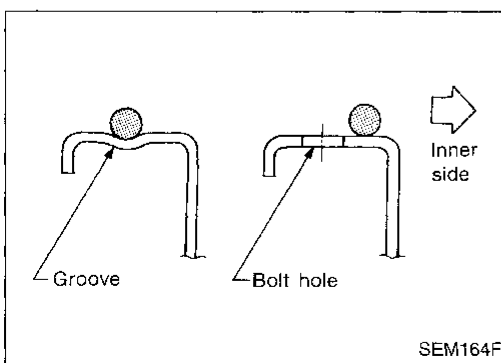


### Liquid Gasket Application Procedure

- a. Use a scraper to remove all traces of old liquid gasket from mating surfaces and grooves. Also, completely clean any oil from these areas.
- b. Apply a continuous bead of liquid gasket to mating surfaces. (Use Genuine RTV Silicone Sealant, Part No. 999 MP-A7007, Three Bond TB1207D or equivalent.)
  - For oil pan, be sure liquid gasket diameter is 3.5 to 4.5 mm (0.138 to 0.177 in).
  - For areas except oil pan, be sure liquid gasket diameter is 2.0 to 3.0 mm (0.079 to 0.118 in).

# PRECAUTIONS AND PREPARATION

## Liquid Gasket Application Procedure (Cont'd)

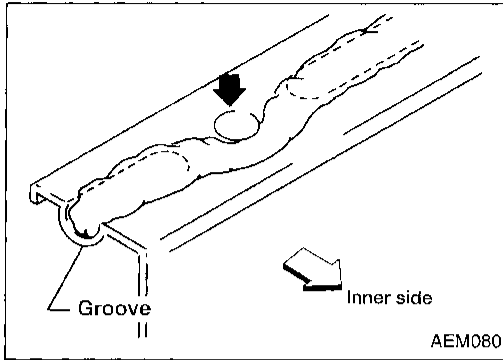

- c. Apply liquid gasket around the inner side of bolt holes (unless otherwise specified).
- d. Assembly should be done within 5 minutes after coating.
- e. Wait at least 30 minutes before refilling engine oil and engine coolant.

GI

MA

**EM**

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA





EL

IDX

# PRECAUTIONS AND PREPARATION








## Special Service Tools

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.
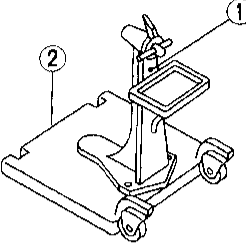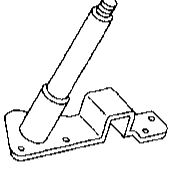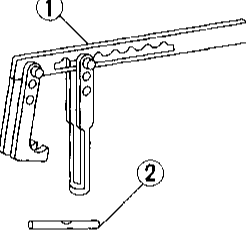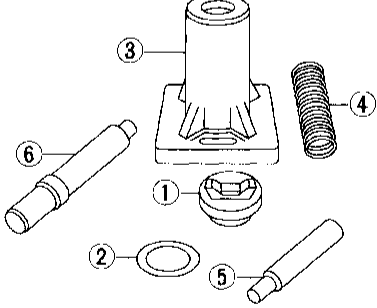
| Tool number<br>(Kent-Moore No.)<br>Tool name  | Description   |
|---|---|
| ST0501S000<br>( — )<br>Engine stand assembly<br>① ST05011000<br>( — )<br>Engine stand<br>② ST05012000<br>( — )<br>Base  |  <p>Disassembling and assembling</p> <p>NT042</p>                              |
| KV10105001<br>( — )<br>Engine attachment  |  <p>NT031</p>  |
| KV101092S0<br>(J26336-B)<br>Valve spring compressor<br>① KV10109210<br>( — )<br>Compressor<br>② KV10109220<br>( — )<br>Adapter  |  <p>Disassembling and assembling valve components)</p> <p>NT021</p>           |
| KV10110300<br>( — )<br>Piston pin press stand assembly<br>① KV10110310<br>( — )<br>Cap<br>② KV10110330<br>( — )<br>Spacer<br>③ ST13030020<br>( — )<br>Press stand<br>④ ST13030030<br>( — )<br>Spring<br>⑤ KV10110340<br>( — )<br>Drift<br>⑥ KV10110320<br>( — )<br>Center shaft |  <p>Disassembling and assembling piston with connecting rod</p> <p>NT036</p> |

# PRECAUTIONS AND PREPARATION




## Special Service Tools (Cont'd)
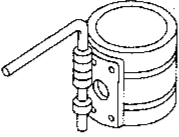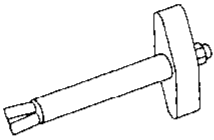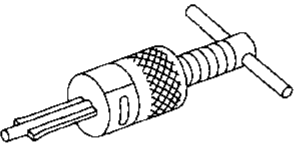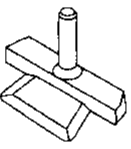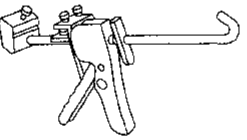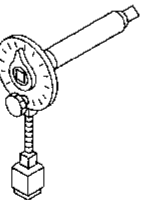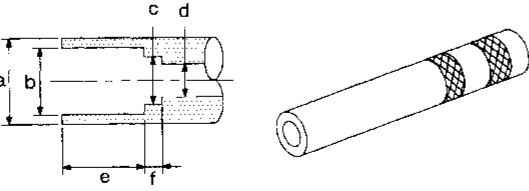
| Tool number<br>(Kent-Moore No.)<br>Tool name    | Description   |   |
|---|---|---|
| EM03470000<br>(J8037)<br>Piston ring compressor |    | Installing piston assembly into cylinder bore   |
| (J36467)<br>Valve oil seal remover              |    | Removing valve oil seal   |
| ST16610001<br>(J23907)<br>Pilot bushing puller  |    | Removing crankshaft pilot bushing   |
| KV10111100<br>(J37228)<br>Seal cutter           |   | Removing oil pan  |
| WS39930000<br>( — )<br>Tube presser             |  | Pressing the tube of liquid gasket  |
| KV10112100<br>(BT8653-A)<br>Angle wrench        |  | Tightening bolts for bearing cap, cylinder head, etc.   |
| KV10116300<br>(J-38955)<br>Valve oil seal drift |  | Installing valve oil seal<br><br>a: 25 (0.98) dia.<br>b: 14.4 (0.567) dia.<br>c: 11.8 (0.465) dia.<br>d: 10 (0.39) dia.<br>e: 11 (0.43)<br>f : 9 (0.35) |

Unit: mm (in)







# PRECAUTIONS AND PREPARATION

## Special Service Tools (Cont'd)
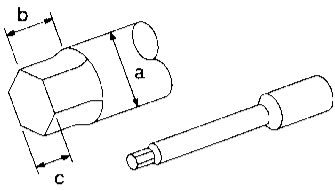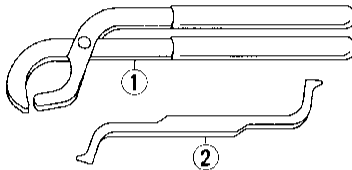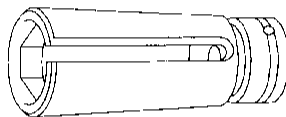
| Tool number<br>(Kent-Moore No.)<br>Tool name  | Description  |
|---|--|
| ST10120000<br>(J24239-01)<br>Cylinder head bolt wrench  | <div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>Loosening and tightening cylinder head bolt</p> <p><b>a: 13 (0.51) dia.</b><br/><b>b: 12 (0.47)</b><br/><b>c: 10 (0.39)</b></p> <p style="text-align: right;">Unit: mm (in)</p> </div> </div> <p style="margin-top: 10px;">NT583</p> |
| KV101151S0<br>(J38972)<br>Lifter stopper set<br>① KV10115110<br>(J38972-1)<br>Camshaft pliers<br>② KV10115120<br>(J38972-2)<br>Lifter stopper | <div style="display: flex; align-items: center;">  </div> <p>Changing valve lifter shims</p> <p style="margin-top: 10px;">NT041</p>   |
| KV10117100<br>(J36471-A)<br>Front heated oxygen sensor wrench   | <div style="display: flex; align-items: center;">  </div> <p>Removing and installing front heated oxygen sensor [22 mm (0.87 in) type]</p> <p style="margin-top: 10px;">NT630</p>   |

# PRECAUTIONS AND PREPARATION

## Commercial Service Tools
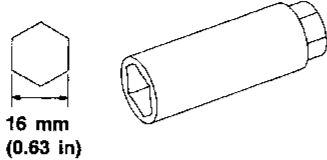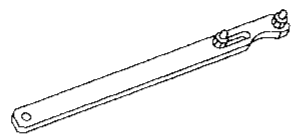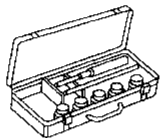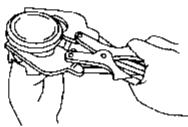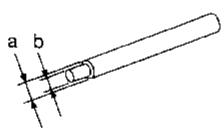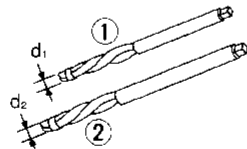
| Tool name             | Description   |  |           |         |  |                  |                |              |                |                 |
|-----------------------|---|--|-----------|---------|--|------------------|----------------|--------------|----------------|-----------------|
| Spark plug wrench     |  <p style="text-align: center;">16 mm<br/>(0.63 in)</p> <p style="text-align: center;">NT047</p> | Removing and installing spark plug   |           |         |  |                  |                |              |                |                 |
| Pulley holder         |  <p style="text-align: center;">NT035</p>  | Holding camshaft pulley while tightening or loosening camshaft bolt  |           |         |  |                  |                |              |                |                 |
| Valve seat cutter set |  <p style="text-align: center;">NT048</p>  | Finishing valve seat dimensions  |           |         |  |                  |                |              |                |                 |
| Piston ring expander  |  <p style="text-align: center;">NT030</p>  | Removing and installing piston ring  |           |         |  |                  |                |              |                |                 |
| Valve guide drift     |  <p style="text-align: center;">NT015</p>  | Removing and installing valve guide<br><br><table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Diameter</th> <th style="text-align: right;">mm (in)</th> </tr> </thead> <tbody> <tr> <td></td> <td style="text-align: center;">Intake &amp; Exhaust</td> </tr> <tr> <td style="text-align: center;">a</td> <td style="text-align: center;">10.5 (0.413)</td> </tr> <tr> <td style="text-align: center;">b</td> <td style="text-align: center;">6.6 (0.260)</td> </tr> </tbody> </table>  | Diameter  | mm (in) |  | Intake & Exhaust | a              | 10.5 (0.413) | b              | 6.6 (0.260)     |
| Diameter              | mm (in)   |  |           |         |  |                  |                |              |                |                 |
|                       | Intake & Exhaust  |  |           |         |  |                  |                |              |                |                 |
| a                     | 10.5 (0.413)  |  |           |         |  |                  |                |              |                |                 |
| b                     | 6.6 (0.260)   |  |           |         |  |                  |                |              |                |                 |
| Valve guide reamer    |  <p style="text-align: center;">NT016</p>  | Reaming valve guide (①) or hole for over-size valve guide (②)<br><br><table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Diameter:</th> <th style="text-align: right;">mm (in)</th> </tr> </thead> <tbody> <tr> <td></td> <td style="text-align: center;">Intake &amp; Exhaust</td> </tr> <tr> <td style="text-align: center;">d<sub>1</sub></td> <td style="text-align: center;">7 (0.28)</td> </tr> <tr> <td style="text-align: center;">d<sub>2</sub></td> <td style="text-align: center;">11.175 (0.4400)</td> </tr> </tbody> </table> | Diameter: | mm (in) |  | Intake & Exhaust | d <sub>1</sub> | 7 (0.28)     | d <sub>2</sub> | 11.175 (0.4400) |
| Diameter:             | mm (in)   |  |           |         |  |                  |                |              |                |                 |
|                       | Intake & Exhaust  |  |           |         |  |                  |                |              |                |                 |
| d <sub>1</sub>        | 7 (0.28)  |  |           |         |  |                  |                |              |                |                 |
| d <sub>2</sub>        | 11.175 (0.4400)   |  |           |         |  |                  |                |              |                |                 |

GI

MA

**EM**

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS


BT

HA

EL

IDX

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

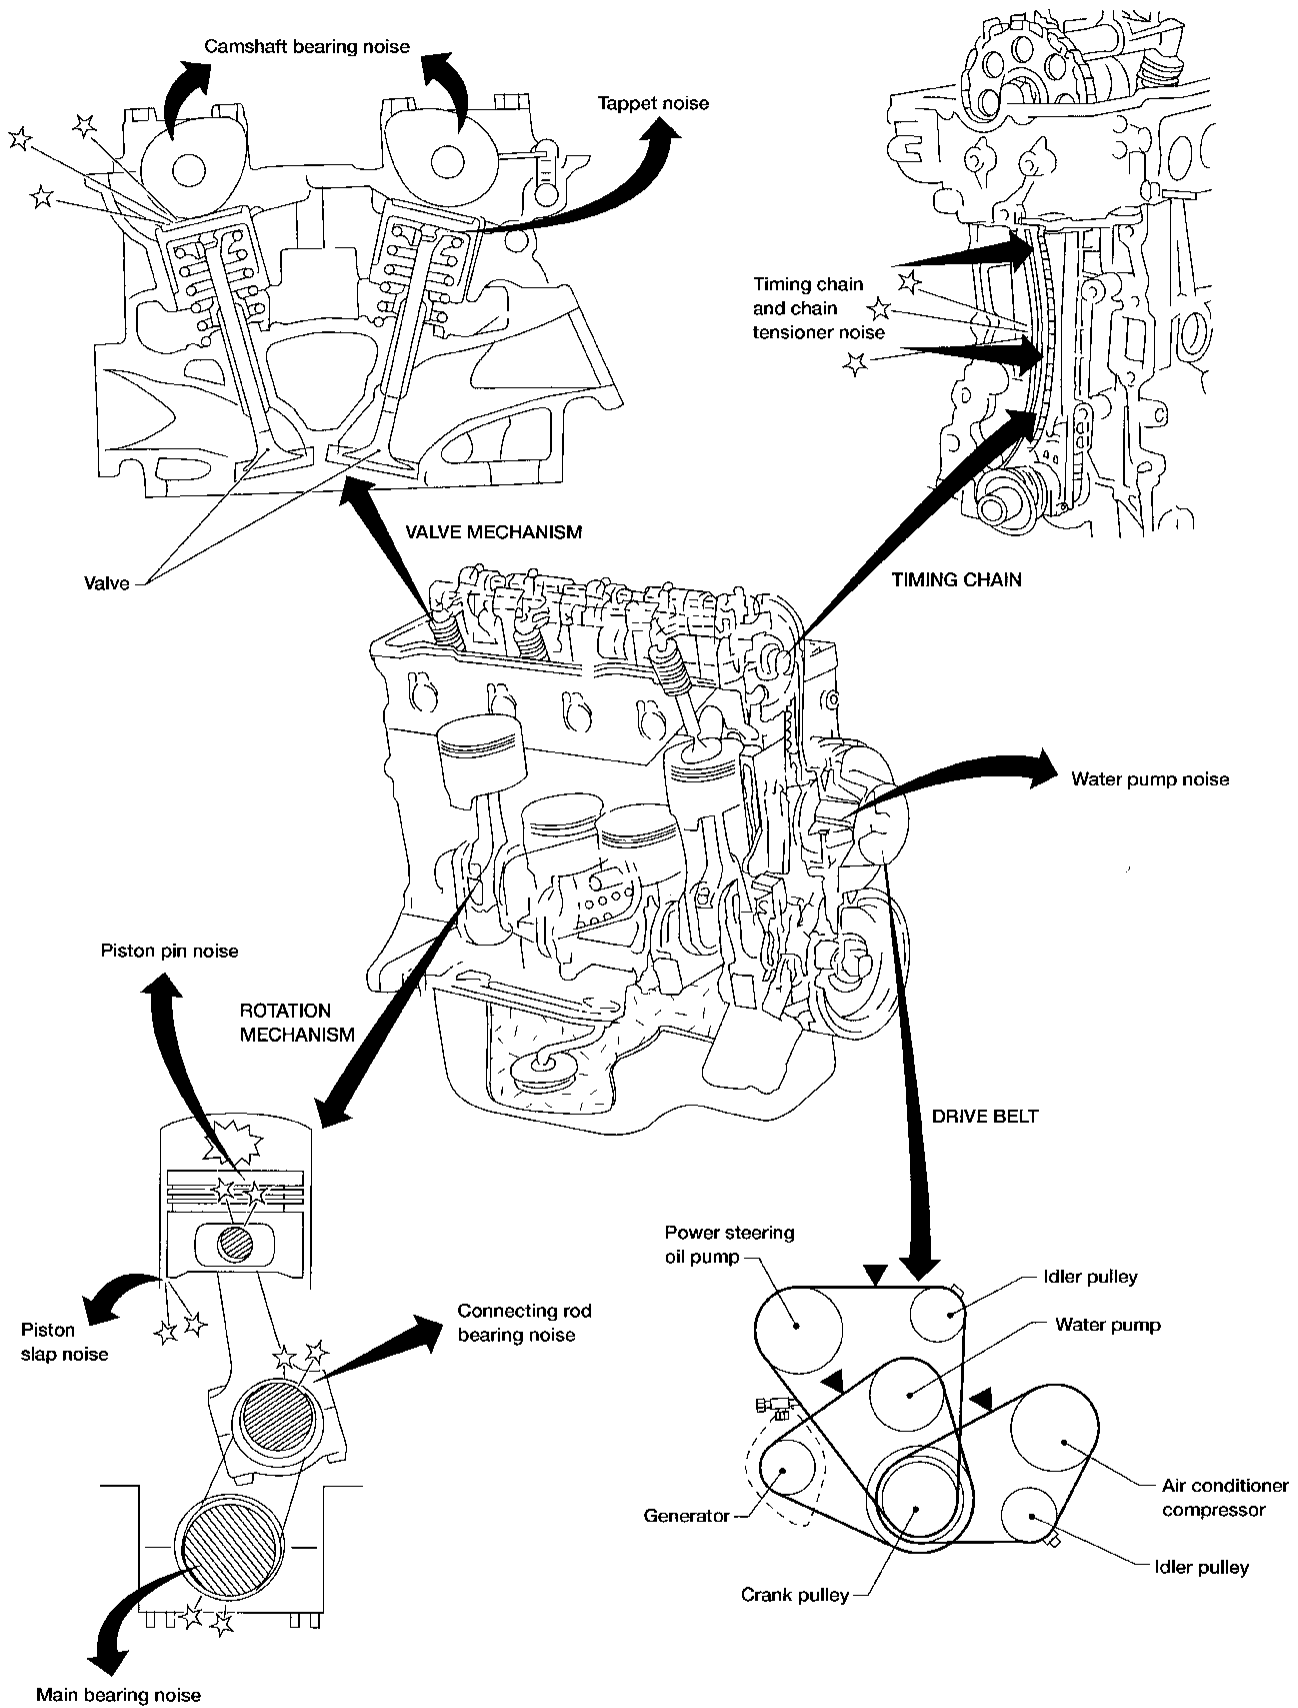



# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

## NVH Troubleshooting Chart—Engine Noise

Use the chart below to help you find the cause of the symptom.

1. Locate the area where noise occurs.
2. Confirm the type of noise.
3. Specify the operating condition of the engine.
4. Check the specified noise source.

If necessary, repair or replace these parts.

| Location of noise   | Type of noise        | Operating condition of engine |               |               |             |              |               | Source of noise                          | Check item   | Reference page  |
|---|----------------------|-------------------------------|---------------|---------------|-------------|--------------|---------------|--|--|---|
|   |                      | Before warm-up                | After warm-up | When starting | When idling | When revving | While driving |  |  |   |
| Top of engine<br>Rocker cover<br>Cylinder head                                | Ticking or clicking  | C                             | A             | —             | A           | B            | —             | Tappet noise                             | Valve clearance  | EM-35   |
|   | Rattle               | C                             | A             | —             | A           | B            | C             | Camshaft bearing noise                   | Camshaft journal clearance<br>Camshaft runout  | EM-30   |
| Crankshaft pulley<br><br>Cylinder block (upper side of engine)<br><br>Oil pan | Slap or knock        | —                             | A             | —             | B           | B            | —             | Piston pin noise                         | Piston and piston pin clearance<br>Connecting rod bushing clearance  | EM-42, 48   |
|   | Slap or rap          | A                             | —             | —             | B           | B            | A             | Piston slap noise                        | Piston ring side clearance<br>Piston ring end gap<br>Connecting rod bend and torsion<br>Piston-to-bore clearance | EM-43, 44   |
|   | Knock                | A                             | B             | C             | B           | B            | B             | Connecting rod-bearing noise             | Connecting rod bearing clearance (Big end)<br>Connecting rod bushing clearance (Small end)                       | EM-47, 48   |
|   | Knock                | A                             | B             | —             | A           | B            | C             | Main bearing noise                       | Crankshaft runout<br>Main bearing oil clearance  | EM-45   |
| Front of engine<br>Timing chain cover   | Tapping or ticking   | A                             | A             | —             | B           | B            | B             | Timing chain and chain tensioner noise   | Timing chain cracks and wear   | EM-21   |
| Front of engine   | Squeaking or fizzing | A                             | B             | —             | B           | —            | C             | Other drive belts (Sticking or slipping) | Drive belt deflection  | MA Section ("Checking Drive Belts", "ENGINE MAINTENANCE")     |
|   | Creaking             | A                             | B             | A             | B           | A            | B             | Other drive belts (Slipping)             | Idler pulley bearing operation   |   |
|   | Squall creak         | A                             | B             | —             | B           | A            | B             | Water pump noise                         | Water pump operation   | LC Section ("Water Pump Inspection", "ENGINE COOLING SYSTEM") |

A: Closely related    B: Related    C: Sometimes related    —: Not related

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX


# OUTER COMPONENT PARTS

SEC. 120 • 140 • 147 • 150 • 163 • 164 • 210 • 220 • 221 • 230 • 231

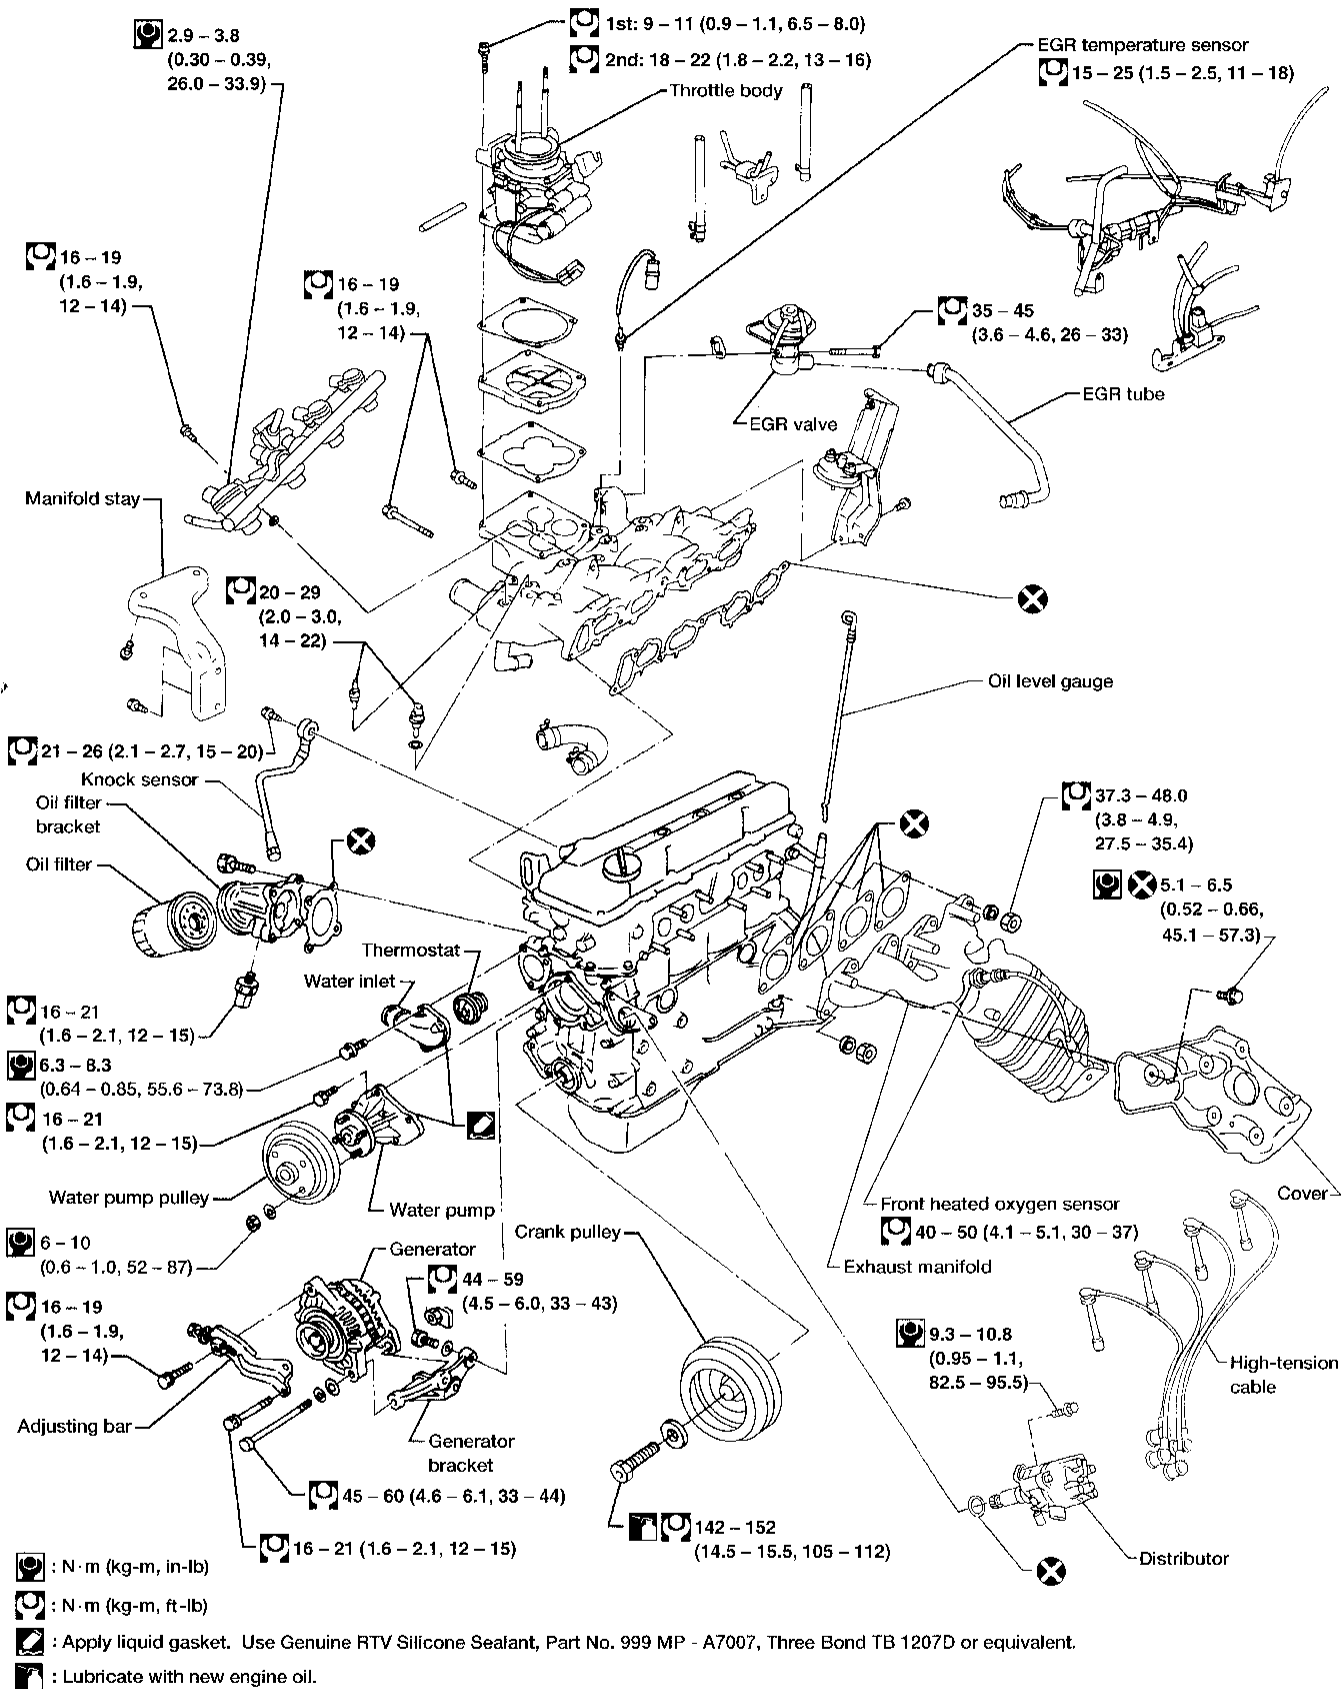

# OUTER COMPONENT PARTS

SEC. 140 • 147 • 220 • 221 • 226

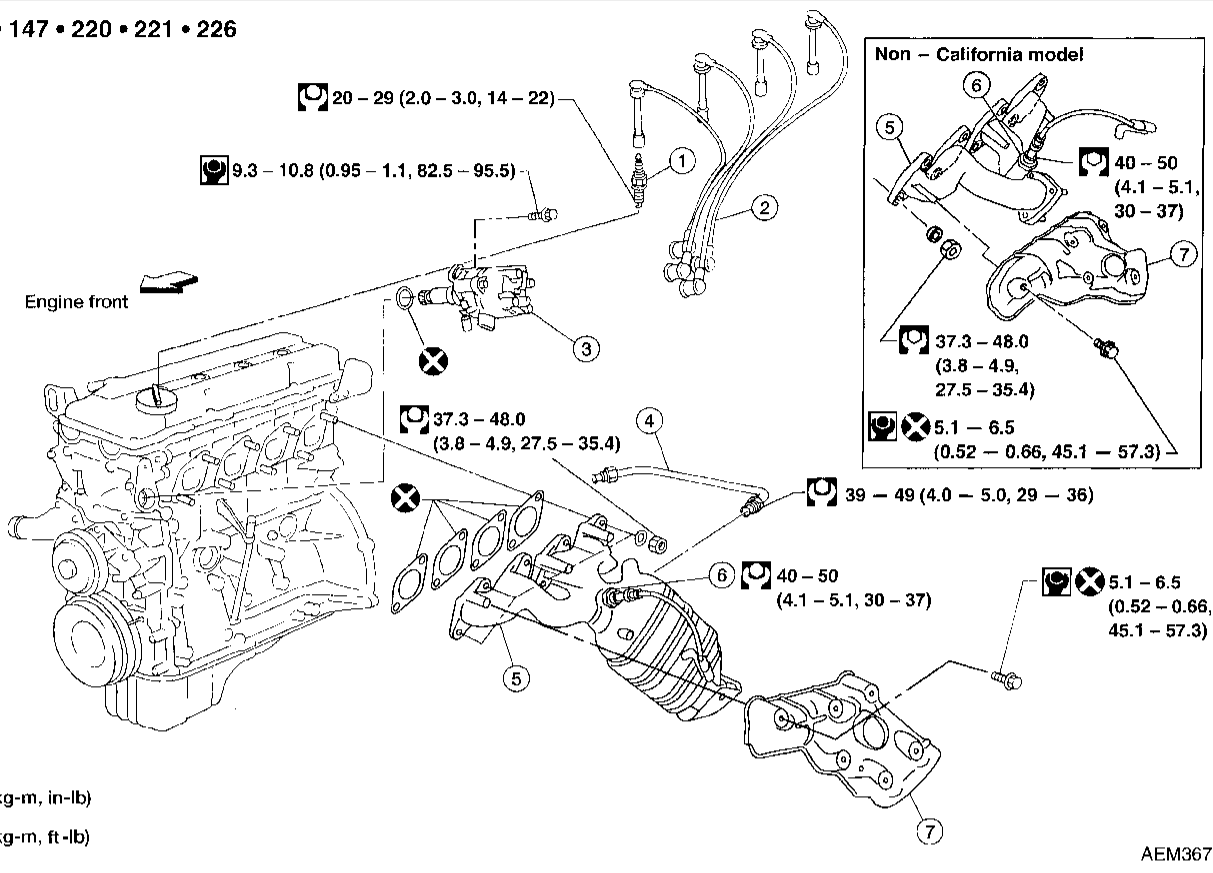


- ① Spark plug
- ② Ignition wire
- ③ Camshaft position sensor built into distributor

- ④ EGR tube
- ⑤ Exhaust manifold


- ⑥ Front heated oxygen sensor
- ⑦ Exhaust manifold cover

GI  
WA  
**EM**  
LC  
EC  
FE  
CL  
MT  
AT  
TF  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

## Intake manifold

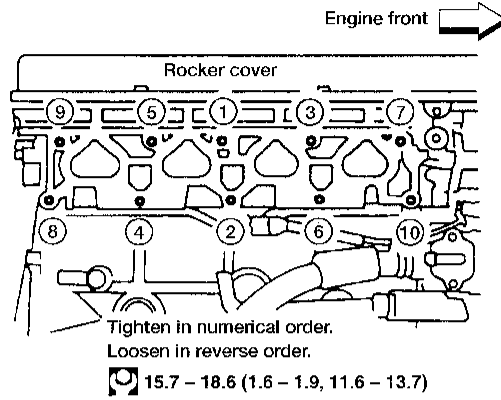

## Exhaust manifold

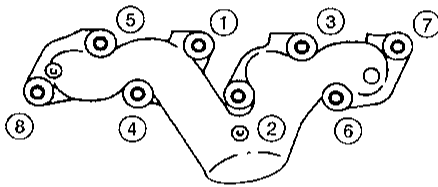


Tighten in numerical order.  
Loosen in reverse order.

37.3 – 48.0 (3.8 – 4.9, 27.5 – 35.4)

: N·m (kg-m, ft-lb)

## Throttle body

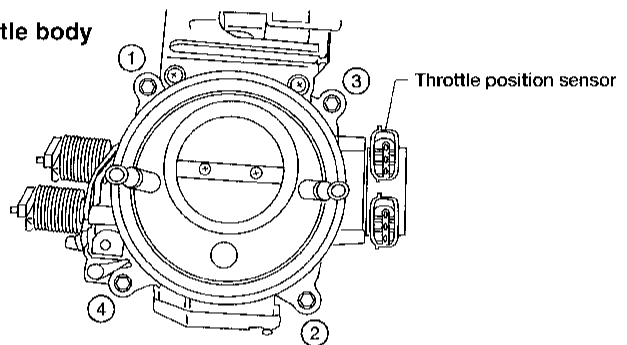


Tighten in numerical order.  
Loosen in reverse order.

1st: 9 – 11 (0.9 – 1.1, 6.5 – 8.0)  
2nd: 18 – 22 (1.8 – 2.2, 13 – 16)

AEM368

## Measurement of Compression Pressure

1. Warm up engine.
2. Turn ignition switch off.
3. Release fuel pressure.  
Refer to EC section ("Fuel Pressure Release", "BASIC SERVICE PROCEDURE").
4. Remove all spark plugs.
5. Disconnect distributor center cable.

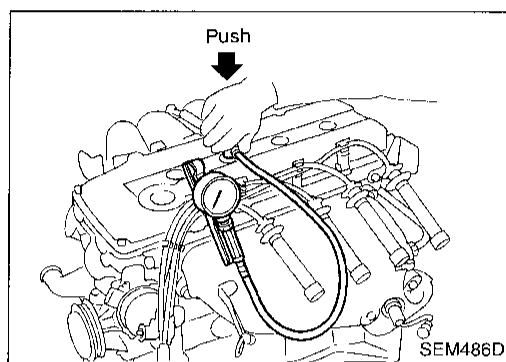

6. Attach a compression tester to No. 1 cylinder.
  7. Depress accelerator pedal fully to keep throttle valve wide open.
  8. Crank engine and record highest gauge indication.
  9. Repeat the measurement on each cylinder as shown above.
- **Always use a fully-charged battery to obtain specified engine speed.**

**Compression pressure: kPa (kg/cm<sup>2</sup>, psi)/rpm**

**Standard**

**1,226 (12.5, 178)/300**

**Minimum**

**1,030 (10.5, 149)/300**

**Difference limit between cylinders**

**98 (1.0, 14)/300**

10. If compression in one or more cylinders is low:
  - a. Pour a small amount of engine oil into cylinders through spark plug holes.
  - b. Retest compression.
  - **If adding oil improves cylinder compression, piston rings may be worn or damaged. If so, replace piston rings after checking piston.**
  - **If pressure stays low, a valve may be sticking or seating improperly. Inspect and repair valve and valve seat. (Refer to SDS, EM-52 and EM-54.) If valve or valve seat is damaged excessively, replace it.**
  - **If compression stays low in two cylinders that are next to each other:**
    - a. **The cylinder head gasket may be leaking, or**
    - b. **Both cylinders may have valve component damage. Inspect and repair as necessary.**

GI

MA

EM

LC

EC

FE

GL

MT

AI

TF

PD

FA

RA

BR

ST

RS

BT

HA


EL


IDX


# OIL PAN


SEC. 110


 Oil pan

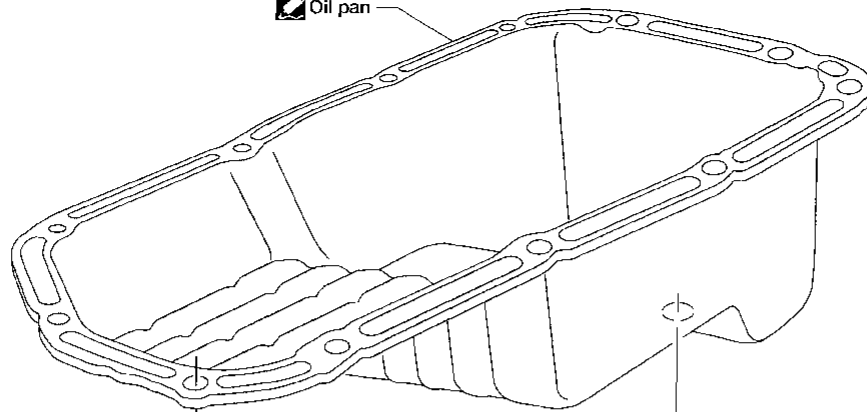


 : N-m (kg-m, in-lb)


 : N-m (kg-m, ft-lb)

 : Apply liquid gasket. Use Genuine RTV Silicone Sealant, Part No. 999 MP - A7007, Three Bond TB 1207D or equivalent.


 5.9 - 6.9  
(0.6 - 0.7, 52 - 61)

Washer 

Drain plug 


 29.4 - 39.2  
(3.00 - 4.00, 21.69 - 28.91)

AEM369

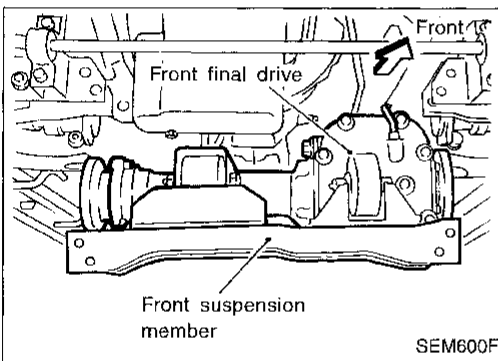


## Removal

1. Raise vehicle and support it with safety stands.
2. Remove engine under cover.
3. Drain engine oil.
4. Remove front final drive together with differential mounting member. Refer to PD section ("Removal and Installation", "Front final drive") — 4WD models only.
5. Remove front suspension member.





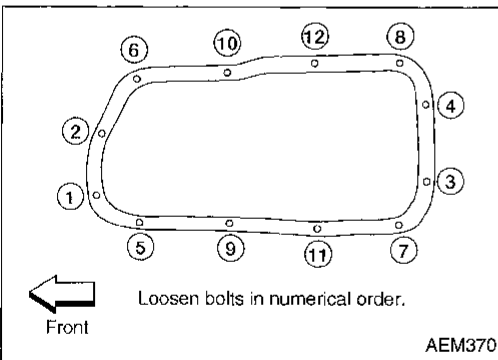


6. Remove oil pan bolts.

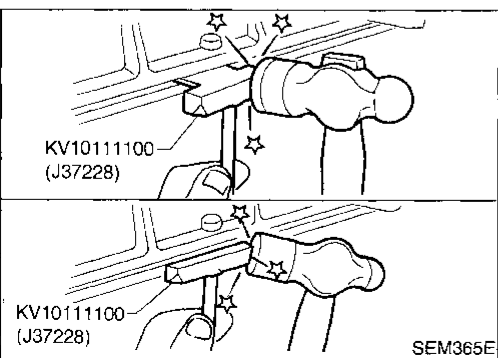

7. Remove oil pan.
  - a. Insert Tool between cylinder block and oil pan.
    - Be careful not to damage aluminum mating surface.
    - Do not insert screwdriver, or oil pan flange will be damaged.
  - b. Slide Tool by tapping on the side of the Tool with a hammer.
8. Pull out oil pan from front side.

# OIL PAN

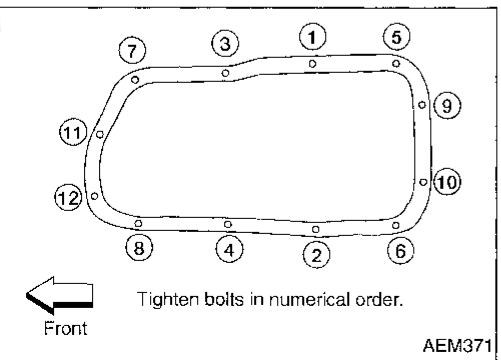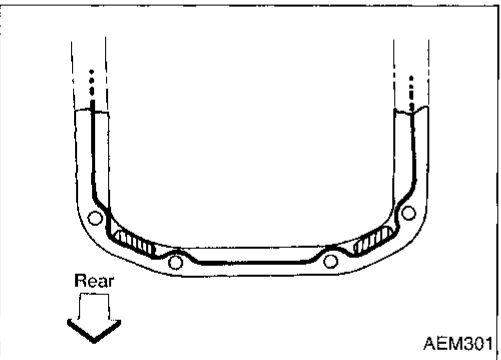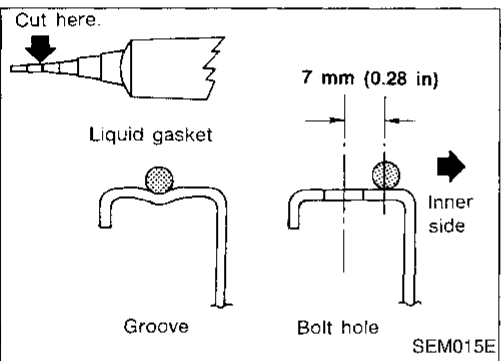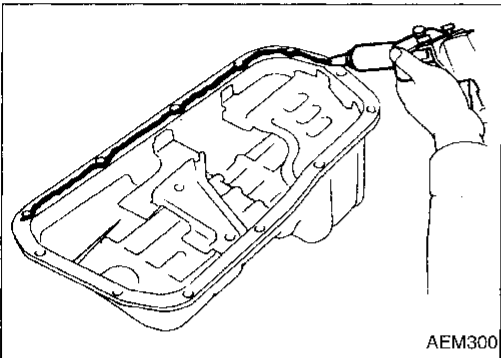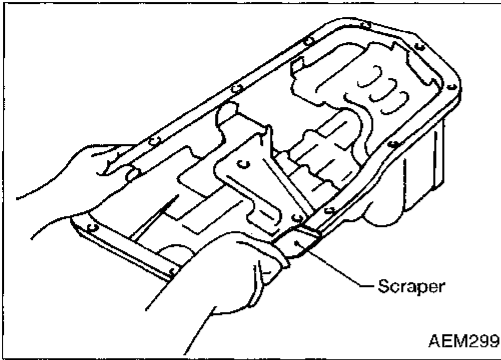

## Installation

1. Use a scraper to remove old liquid gasket from mating surface of oil pan.
  - Also remove traces of liquid gasket from mating surface of cylinder block.

2. Apply a continuous bead of liquid gasket to mating surface of oil pan.
  - Use Genuine RTV Silicone Sealant, Part No. 999 MP-A7007, Three Bond TB1207D or equivalent.
  - Apply to groove on mating surface.
  - Allow 7 mm (0.28 in) clearance around bolt hole.

- Be sure liquid gasket diameter is 3.5 to 4.5 mm (0.138 to 0.177 in).
- Attaching should be done within 5 minutes after coating.

3. Install oil pan.
  - Tighten oil pan bolts in numerical order.
    - ☛: 5.9 - 6.9 N·m (0.6 - 0.7 kg·m, 52 - 61 in·lb)
  - Wait at least 30 minutes before refilling engine oil.
4. Install parts in reverse order of removal.

CL

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX

# TIMING CHAIN

SEC. 120 • 130 • 135 • 210

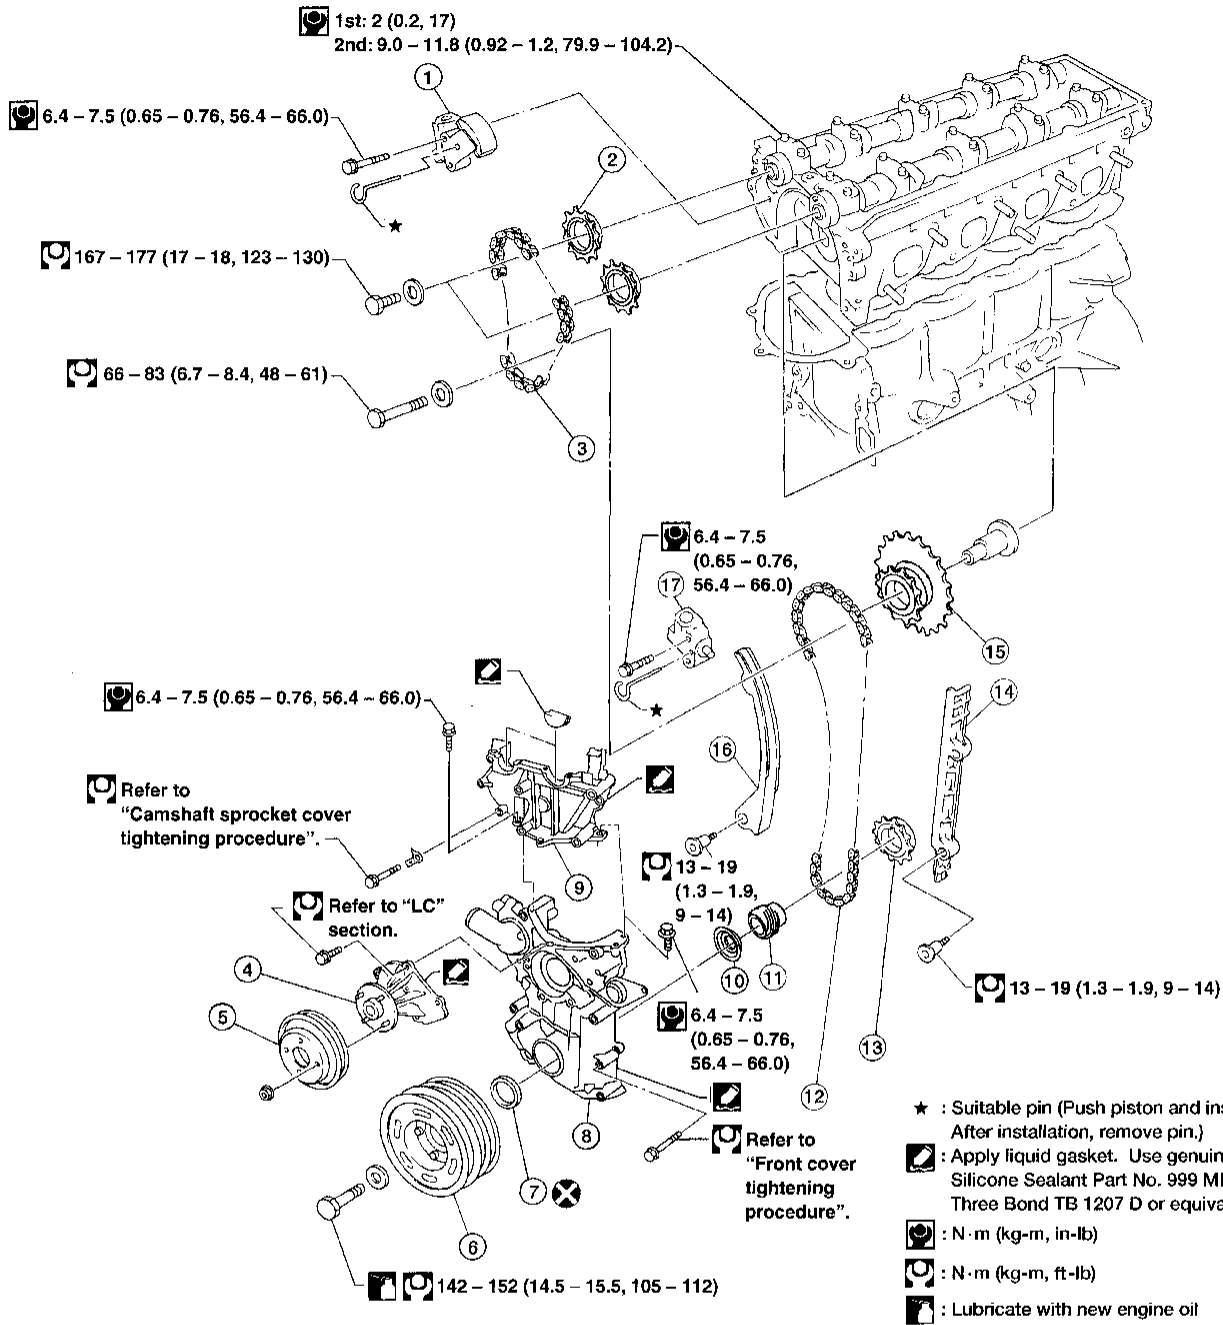

AEM372


- |                                |                           |                                |
|--------------------------------|---------------------------|--------------------------------|
| ① Upper timing chain tensioner | ⑦ Front oil seal          | ⑬ Crankshaft sprocket          |
| ② Cam sprocket                 | ⑧ Front cover             | ⑭ Chain guide                  |
| ③ Upper timing chain           | ⑨ Camshaft sprocket cover | ⑮ Idler sprocket               |
| ④ Water pump                   | ⑩ Oil slinger             | ⑯ Chain tension arm            |
| ⑤ Water pump pulley            | ⑪ Oil pump drive gear     | ⑰ Lower timing chain tensioner |
| ⑥ Crankshaft pulley            | ⑫ Lower timing chain      |                                |



# TIMING CHAIN




## SEC. 135 Front cover

## Camshaft sprocket cover

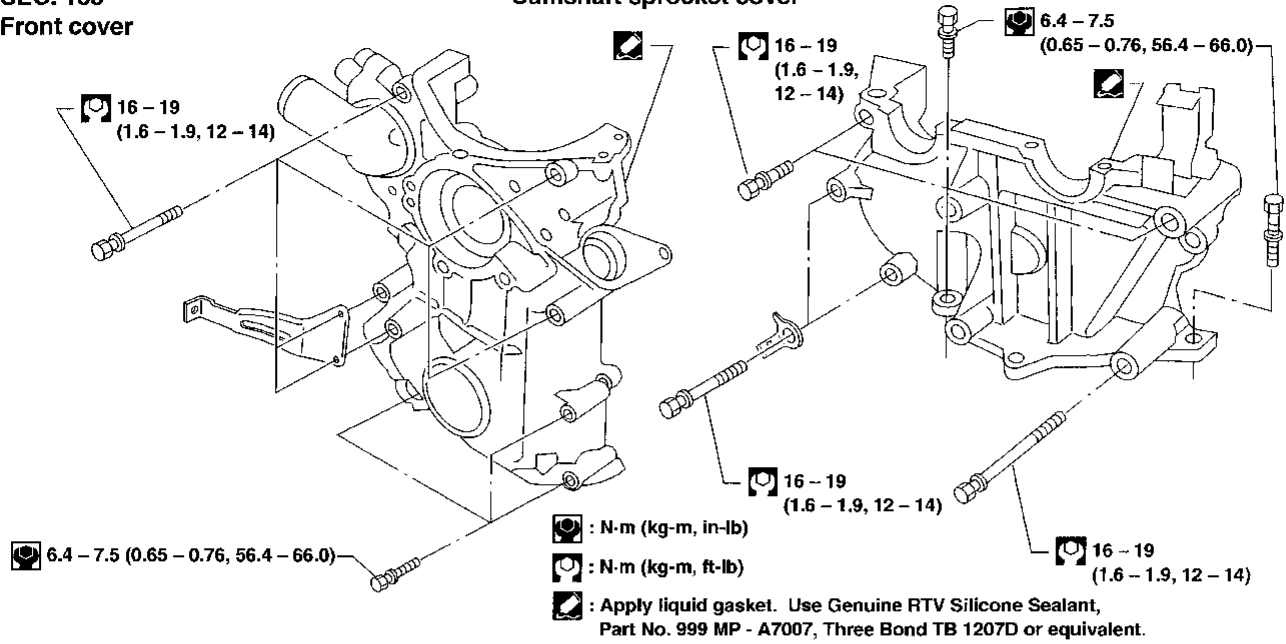

AEM376

## Liquid gasket application places

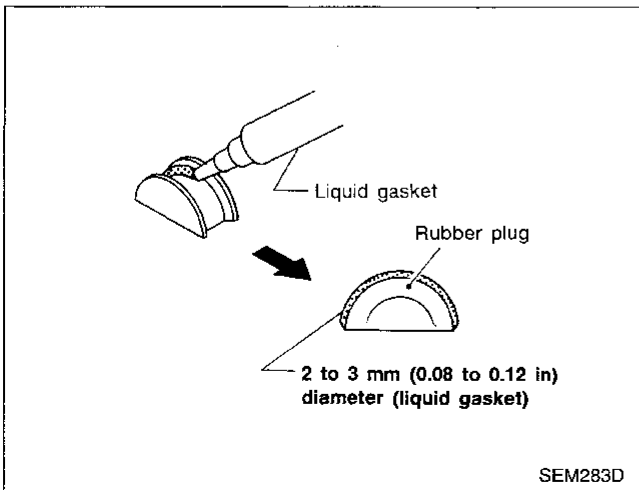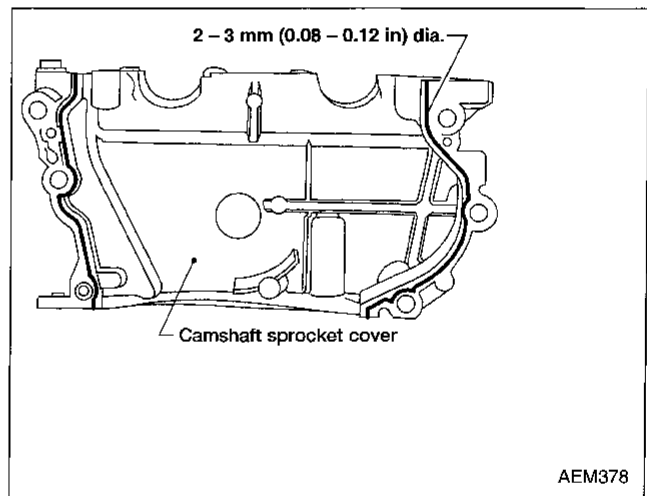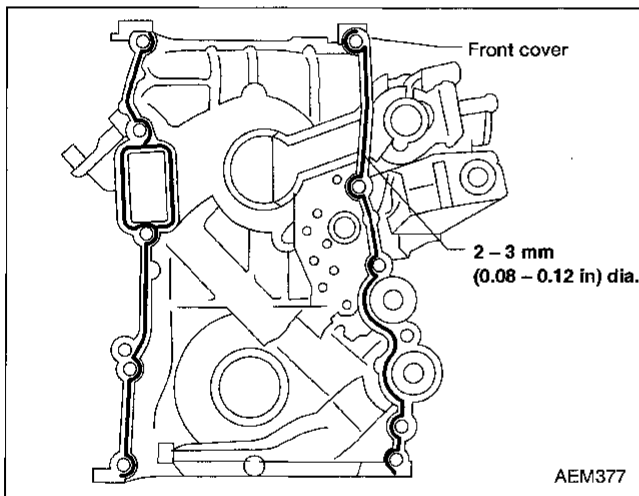

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
TF  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# TIMING CHAIN


## CAUTION:

- After removing timing chain, do not turn crankshaft and camshaft separately, or valves will strike piston heads.
- When installing camshafts, chain tensioners, oil seals, or other sliding parts, lubricate contacting surfaces with new engine oil.
- Apply new engine oil to bolt threads and seat surfaces when installing cylinder head, camshaft sprockets, crankshaft pulley, and camshaft brackets.
- Before disconnecting fuel hose, release fuel pressure. Refer to EC section ("Fuel Pressure Release", "BASIC SERVICE PROCEDURE").
- Do not spill engine coolant on drive belts.


## Removal

### UPPER TIMING CHAIN

1. Drain coolant from both cylinder block drain plug and radiator drain cock. Refer to MA section.
2. Remove vacuum hoses, fuel tubes, wires, harness and connectors and so on.
3. Remove exhaust manifold cover and front exhaust tube.
4. Remove exhaust manifold.
5. Remove the following parts.
  - Air duct
  - Cooling fan with coupling
  - Radiator shroud
6. Disconnect injector harness connector and remove injector tube assembly with injectors.
7. Remove all spark plugs and high-tension wires.

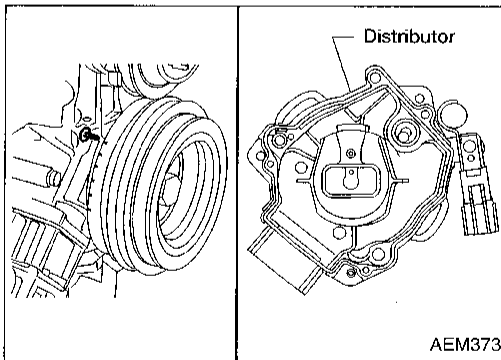


8. Set No. 1 piston at TDC on its compression stroke.
9. Remove distributor.
  - **Mark the position of the distributor and rotor before removing it.**

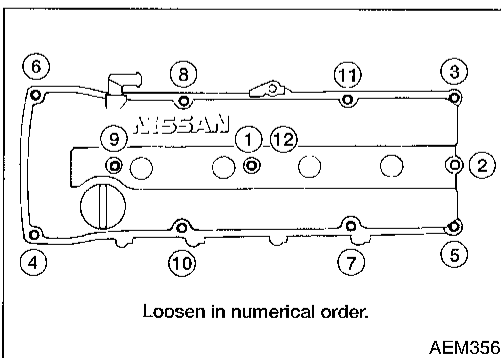


10. Remove rocker cover.
  - **Remove in numerical order, as shown.**

# TIMING CHAIN


## Removal (Cont'd)

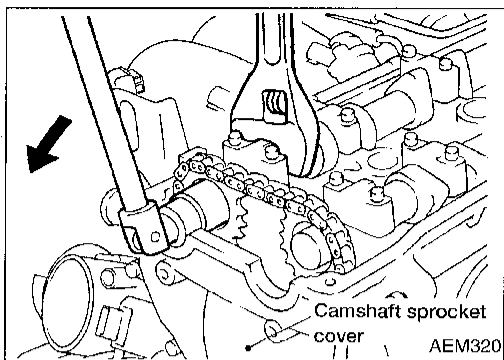

11. Remove intake cam sprocket.
  - For retiming in cylinder head removal, apply paint marks to timing chain matched with mating marks of both cam sprockets.

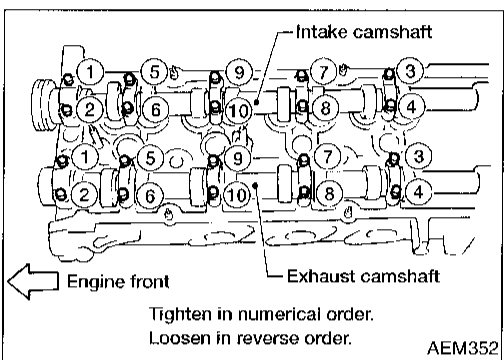


12. Remove cam brackets and camshafts.
  - Mark these parts' original positions for reassembly.

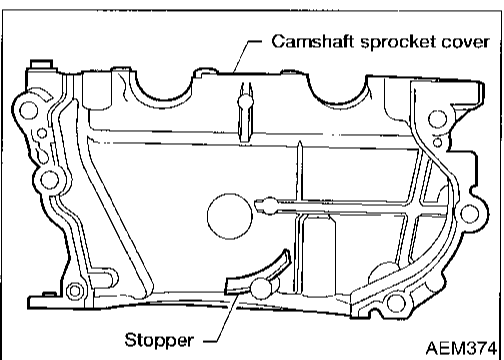


13. Remove camshaft sprocket cover.
  - Upper timing chain will not be disengaged from idler sprocket. For this reason, a stopper need not be used.

**Cast portion of camshaft sprocket cover is located on lower side of idler sprocket so upper timing chain need not be disengaged from idler sprocket.**

14. Remove upper chain tensioner.  
(Push piston and insert a suitable pin into pin hole.)

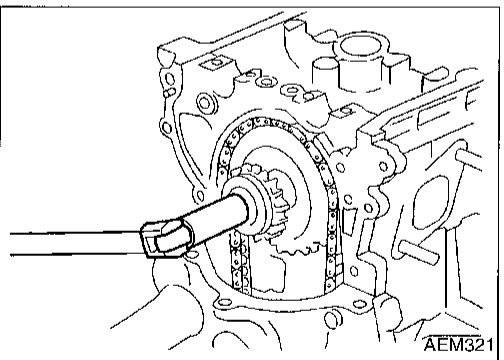

15. Remove upper timing chain.
16. Remove idler sprocket bolt.
  - For retiming in cylinder head removal, apply paint marks to timing chain matched with mating mark of idler sprocket.

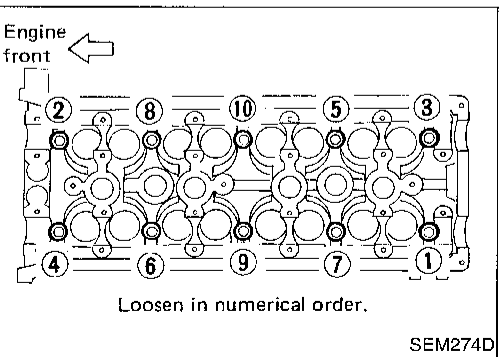

17. Loosen cylinder head bolts in numerical order.
  - A warped or cracked cylinder head could result from removing in incorrect order.
  - Cylinder head bolts should be loosened in two or three steps.

GI

MA

EM

LC

EC

FE

CL

MT

AI

TF

PD

FA

RA

BR

ST

RS

BT


HA

FI


IDX

## TIMING CHAIN

### Removal (Cont'd)

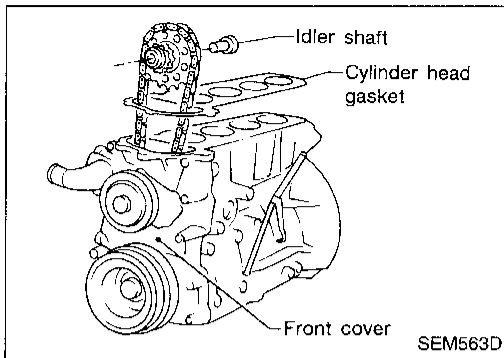


18. Remove cylinder head.
19. Remove cylinder head gasket.

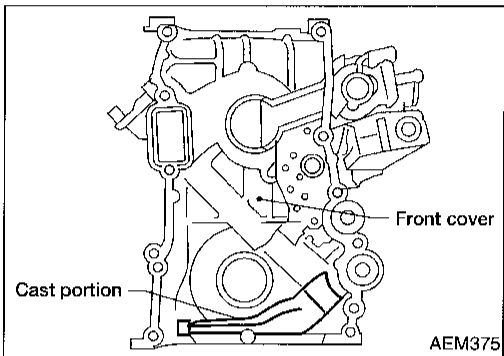


- Lower timing chain will not be disengaged from crankshaft sprocket. For this reason, a stopper need not be used.

**Cast portion of front cover is located on lower side of crankshaft sprocket so lower timing chain need not be disengaged from idler sprocket.**

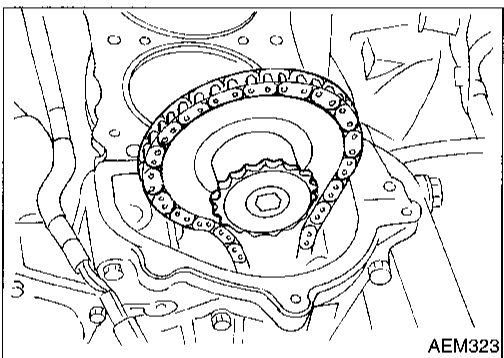

### LOWER TIMING CHAIN


1. Remove upper timing chain.  
**Refer to "UPPER TIMING CHAIN" in "Removal" (EM-18).**
2. Drain engine oil from drain plug of oil pan.

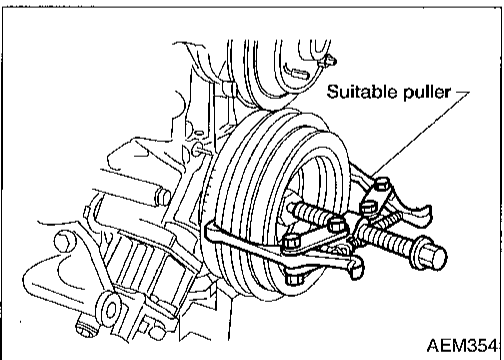

3. Remove oil pan.  
**Refer to "Removal" in "OIL PAN" (EM-14).**
4. Remove oil strainer.
5. Remove the following parts.
  - Power steering drive belt
  - Alternator drive belt
  - A/C compressor drive belt
  - A/C compressor idler pulley
6. Remove crankshaft pulley.
7. Remove oil pump.
8. Remove front cover.
  - Inspect for oil leakage at front oil seal. Replace seal if oil leak is present.

# TIMING CHAIN

## Removal (Cont'd)

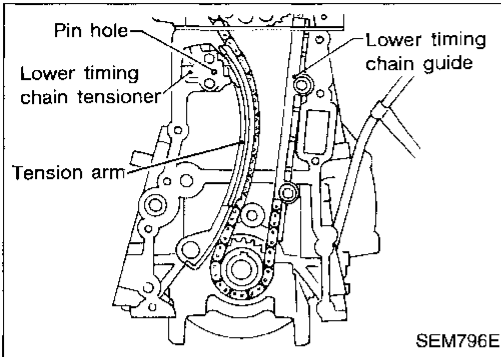


9. Remove the following parts.

- Lower timing chain tensioner (Push piston and insert a suitable pin into pin hole.)
  - Chain tension arm
  - Lower timing chain guide
10. Remove lower timing chain and idler sprocket.

## Inspection


Check for cracks and excessive wear at roller links. Replace chain if necessary.

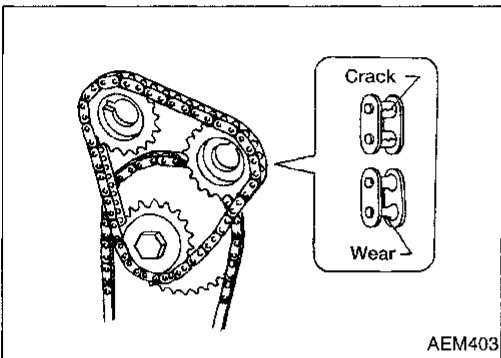

## Installation


### LOWER TIMING CHAIN

1. Install crankshaft sprocket, oil pump drive gear and oil thrower.
  - **Make sure that mating marks of crankshaft sprocket face front of engine.**
2. Position crankshaft so that No. 1 piston is set at TDC.

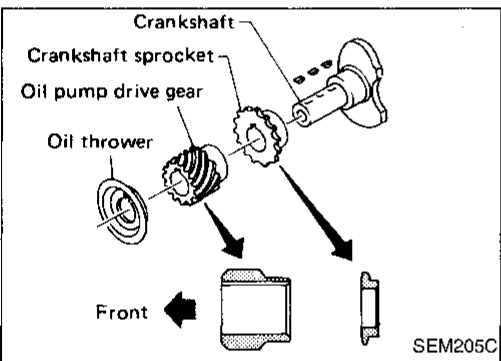


3. Install idler sprocket and lower timing chain.

- **Set lower timing chain on the sprockets, aligning mating marks.**
  - **Be careful not to damage cylinder head gasket when installing lower timing chain.**
4. Install chain tension arm and chain guide.
  5. Install lower timing chain tensioner.
    - **When installing, insert a suitable pin into pin hole to stop piston.**
    - **After installation remove the pin to release piston.**

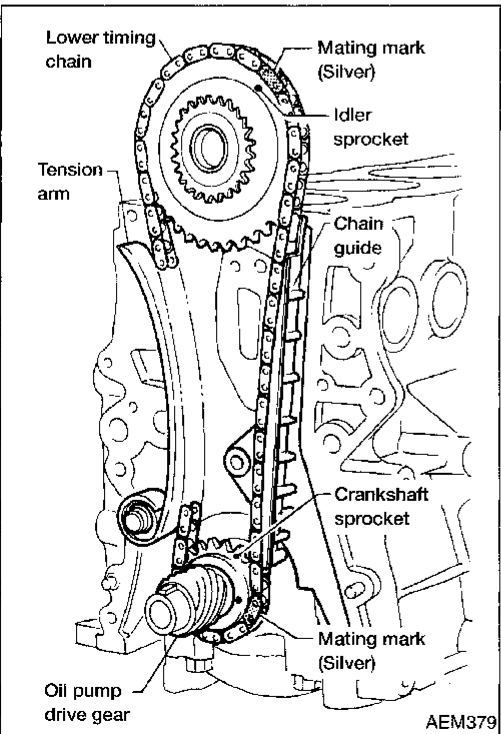


## TIMING CHAIN


### Installation (Cont'd)

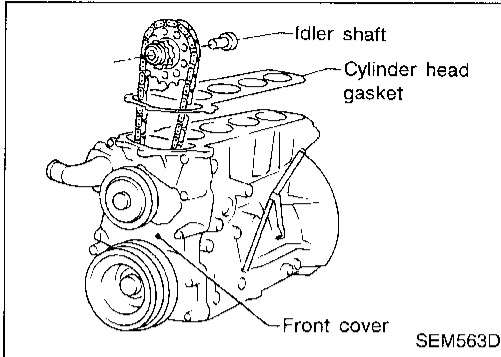


6. Install front cover.
  - Use a scraper to remove all traces of liquid gasket from mating surface.
  - Also remove traces of liquid gasket from mating surface of cylinder block.
  - **Apply a continuous bead of liquid gasket to front cover (Refer to EM-17).**
  - **Use Genuine RTV Silicone Sealant, Part No. 999 MP-A7007, Three Bond TB1207D or equivalent.**
  - **Be careful not to damage cylinder head gasket.**
  - **Be sure to install new front oil seal. Refer to EM-25.**

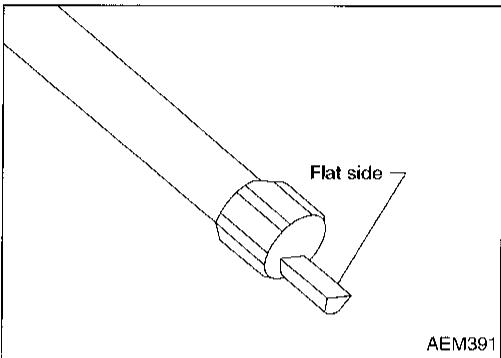

7. Install the following parts:
  - Crankshaft pulley
  - Oil strainer and oil pan
  - Component parts below the engine
  - A/C compressor idler pulley
  - New cylinder head gasket
  - Idler shaft
8. Install the oil pump.
  - **Make sure the flat side of the distributor drive shaft is facing the engine.**

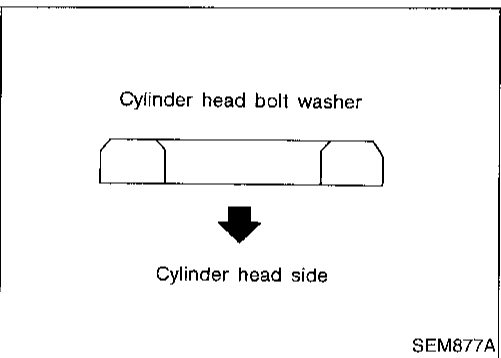


9. Install cylinder head and temporarily tighten cylinder head bolts when installing front cover.
  - **Apply new engine oil to bolt threads and seat surfaces.**
  - **Temporarily tighten cylinder head bolts. This is necessary to avoid damaging cylinder head gasket.**
  - **Be sure to install washers between bolts and cylinder head.**

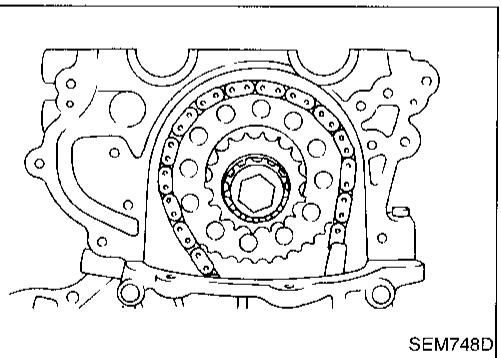

### UPPER TIMING CHAIN


1. Install lower timing chain.  
Refer to "LOWER TIMING CHAIN" in "Installation" (EM-21).

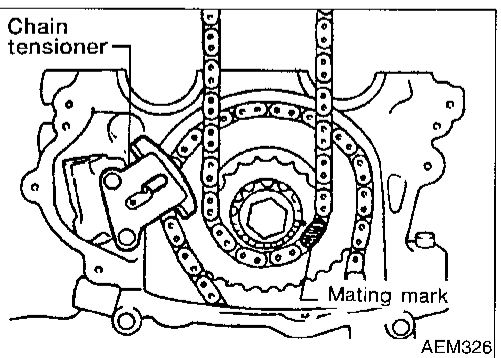

2. Install upper timing chain, chain tensioner.
  - **Set upper timing chain on the idler sprockets, aligning mating marks.**
  - **When installing chain tensioner, insert a suitable pin into pin hole to stop piston.**
  - **After installation remove the pin to release piston.**


# TIMING CHAIN

## Installation (Cont'd)

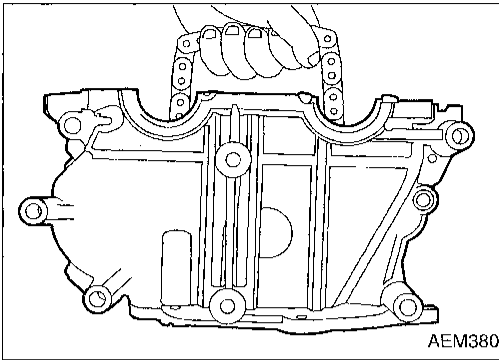


AEM380

3. Install camshaft sprocket cover.
  - Use a scraper to remove all traces of liquid gasket from mating surface.
  - Also remove traces of liquid gasket from mating surface of cylinder block.
  - **Apply a continuous bead of liquid gasket to camshaft sprocket cover (Refer to EM-17).**
  - **Use Nissan Genuine RTV Silicone Sealant, Part No. 999 MP-A7007, Three Bond TB1207D or equivalent.**
  - **Be careful not to damage cylinder head gasket.**
  - **Be careful upper timing chain does not slip or jump when installing camshaft sprocket cover.**

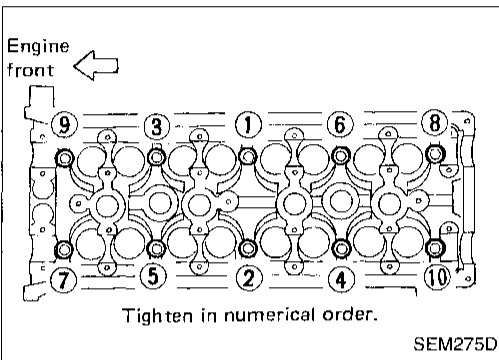


SEM275D

4. Tighten cylinder head bolts in numerical order.
  - **Tightening procedure**
    - a. Tighten all bolts to 29 N·m (3.0 kg-m, 22 ft-lb).
    - b. Tighten all bolts to 79 N·m (8.1 kg-m, 59 ft-lb).
    - c. Loosen all bolts completely
    - d. Tighten all bolts to 25 to 34 N·m (2.5 to 3.5 kg-m, 18 to 25 ft-lb).
    - e. Turn all bolts  $86^{+5}_0$  degrees clockwise, or if an angle wrench is not available, tighten bolts to 75 to 84 N·m (7.6 to 8.6 kg-m, 55 to 62 ft-lb).

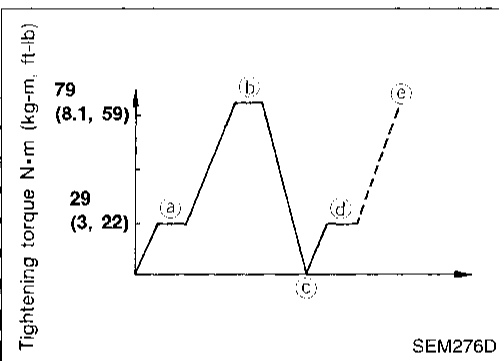


SEM276D

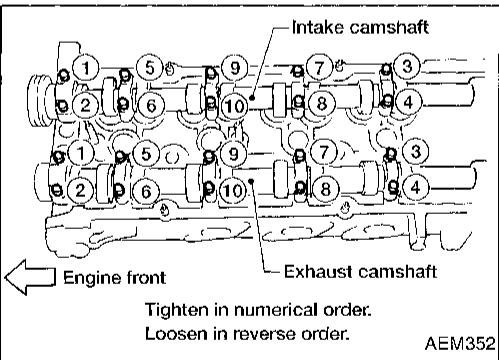

AEM352

5. Install camshafts and camshaft brackets.
  - **Tightening procedure**
    - a. Tighten all bolts to 2 N·m (0.2 kg-m, 17 in-lb).
    - b. Tighten all bolts to 9.0 to 11.8 N·m (0.92 to 1.2 kg-m, 79.9 - 104.2 in-lb).
  - **Apply new engine oil to bolt threads and seat surfaces.**

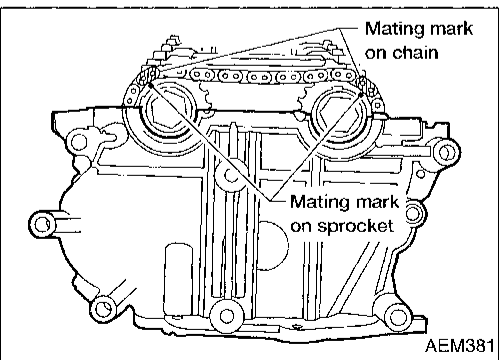


AEM381

6. Install camshaft sprockets.


GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
TF  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

## TIMING CHAIN


### Installation (Cont'd)

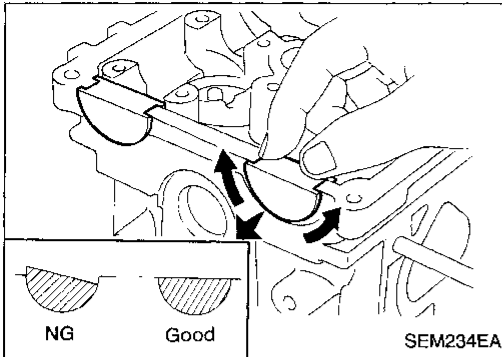

7. Install rubber plugs as follows.
  - (1) Apply liquid gasket to rubber plugs.
  - (2) Install rubber plugs, then move them by hand to uniformly spread the gasket on cam sprocket cover surface.
  - Rubber plugs should be installed flush with the cylinder head surface.

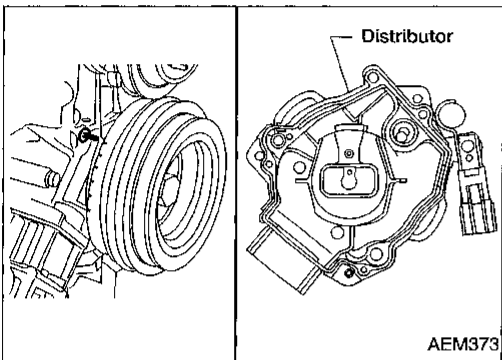

8. Install distributor.
  - Make sure that No. 1 piston is set at TDC and that distributor rotor is set at No. 1 cylinder spark position. Refer to marks made at removal.

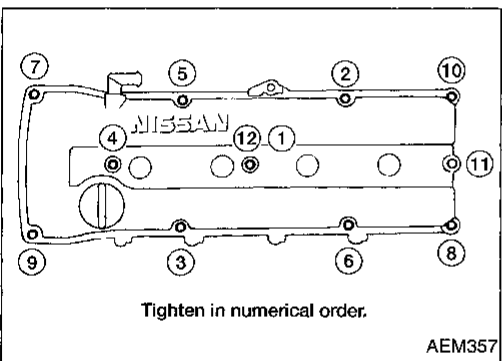

9. Install rocker cover.
  - ⚙: 8 - 11 N·m (0.8 - 1.1 kg-m, 69 - 95 in-lb).
10. Install all spark plugs with high-tension cords.
11. Connect injector harness connector and replace injector tube assembly with injectors.
12. Install the following parts.
  - Radiator shroud
  - Cooling fan with coupling
  - Air duct
13. Install vacuum hoses, fuel tubes, wires, harness and connectors and so on.






# OIL SEAL REPLACEMENT

## VALVE OIL SEAL

1. Remove rocker cover.
2. Remove camshaft. Refer to "TIMING CHAIN" (EM-16).
3. Remove valve spring and valve oil seal with Tool or a suitable tool.


**Piston concerned should be set at TDC to prevent valve from falling.**

4. Apply engine oil to new valve oil seal and install it with Tool.

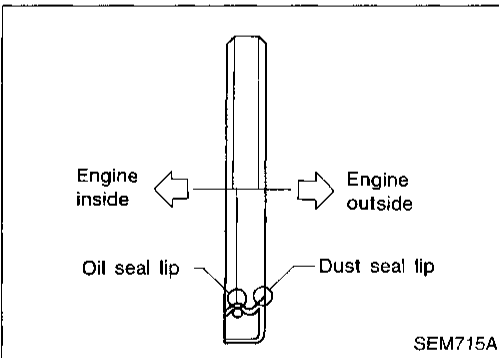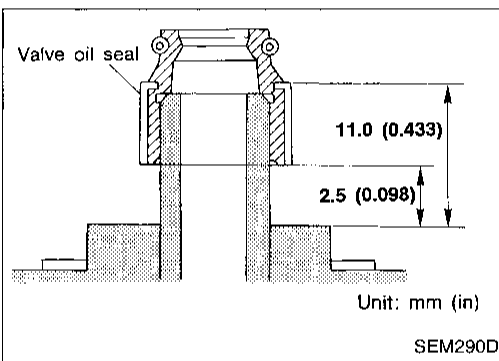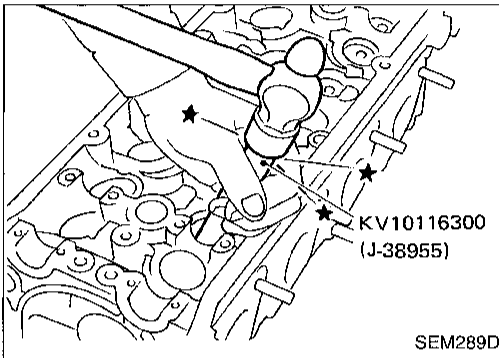

## OIL SEAL INSTALLING DIRECTION

- Install new oil seal in the direction shown.

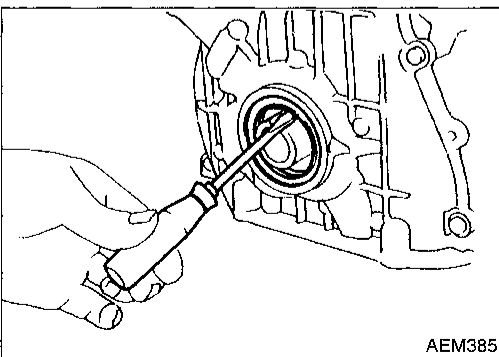

## FRONT OIL SEAL

1. Remove radiator shroud and crankshaft pulley.
  2. Remove front oil seal
- **Be careful not to scratch front cover.**

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS


BT

HA


EL

IDX

# OIL SEAL REPLACEMENT

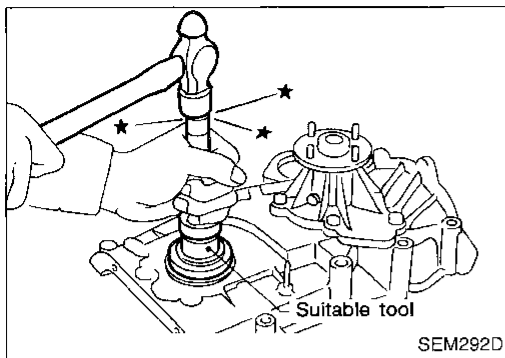


3. Apply engine oil to new oil seal and install it using a suitable tool.

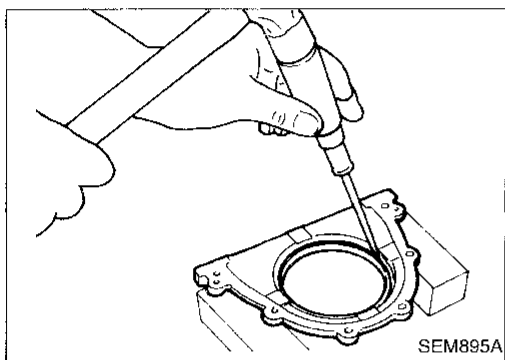


## REAR OIL SEAL


1. Remove flywheel or drive plate.
  2. Remove rear oil seal retainer.
  3. Remove rear oil seal from retainer.
- **Be careful not to scratch rear oil seal retainer.**

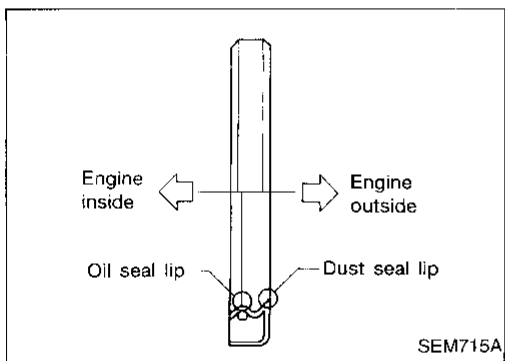


4. Apply engine oil to new oil seal and install it using suitable tool.
- **Install new oil seal in the direction shown.**

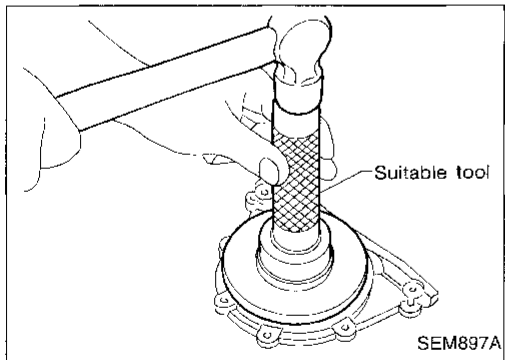

5. Install rear oil seal retainer.
- a. Before installing rear oil seal retainer, remove all traces of liquid gasket from mating surface using a scraper.
- **Also remove traces of liquid gasket from mating surface of cylinder block.**

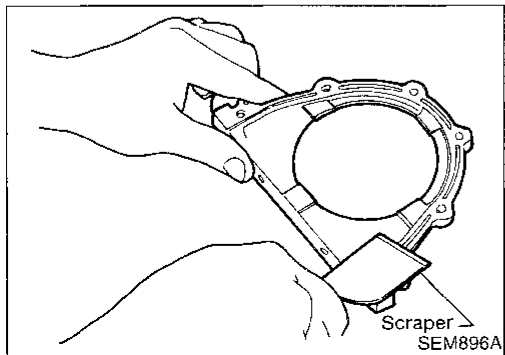

# OIL SEAL REPLACEMENT

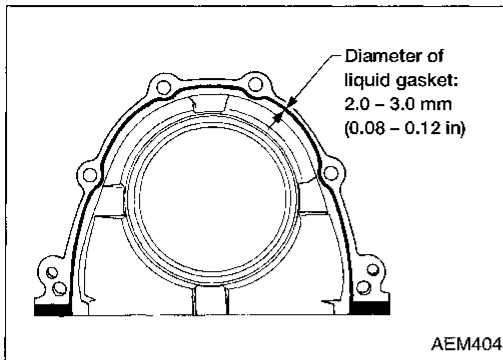

- b. Apply a continuous bead of liquid gasket to mating surface of rear oil seal retainer.
- **Use Genuine RTV Silicone Sealant, Part No. 999 MP-A7007, Three Bond TB1207D or equivalent.**
  - **Apply around inner side of bolt holes.**

GI

MA

EM

LC

EC

FE

GL

MT

AT

TF

PD

PA

RA

BR

ST

RS

BT


HA

EL

IDX

# CYLINDER HEAD

SEC. 111 • 130

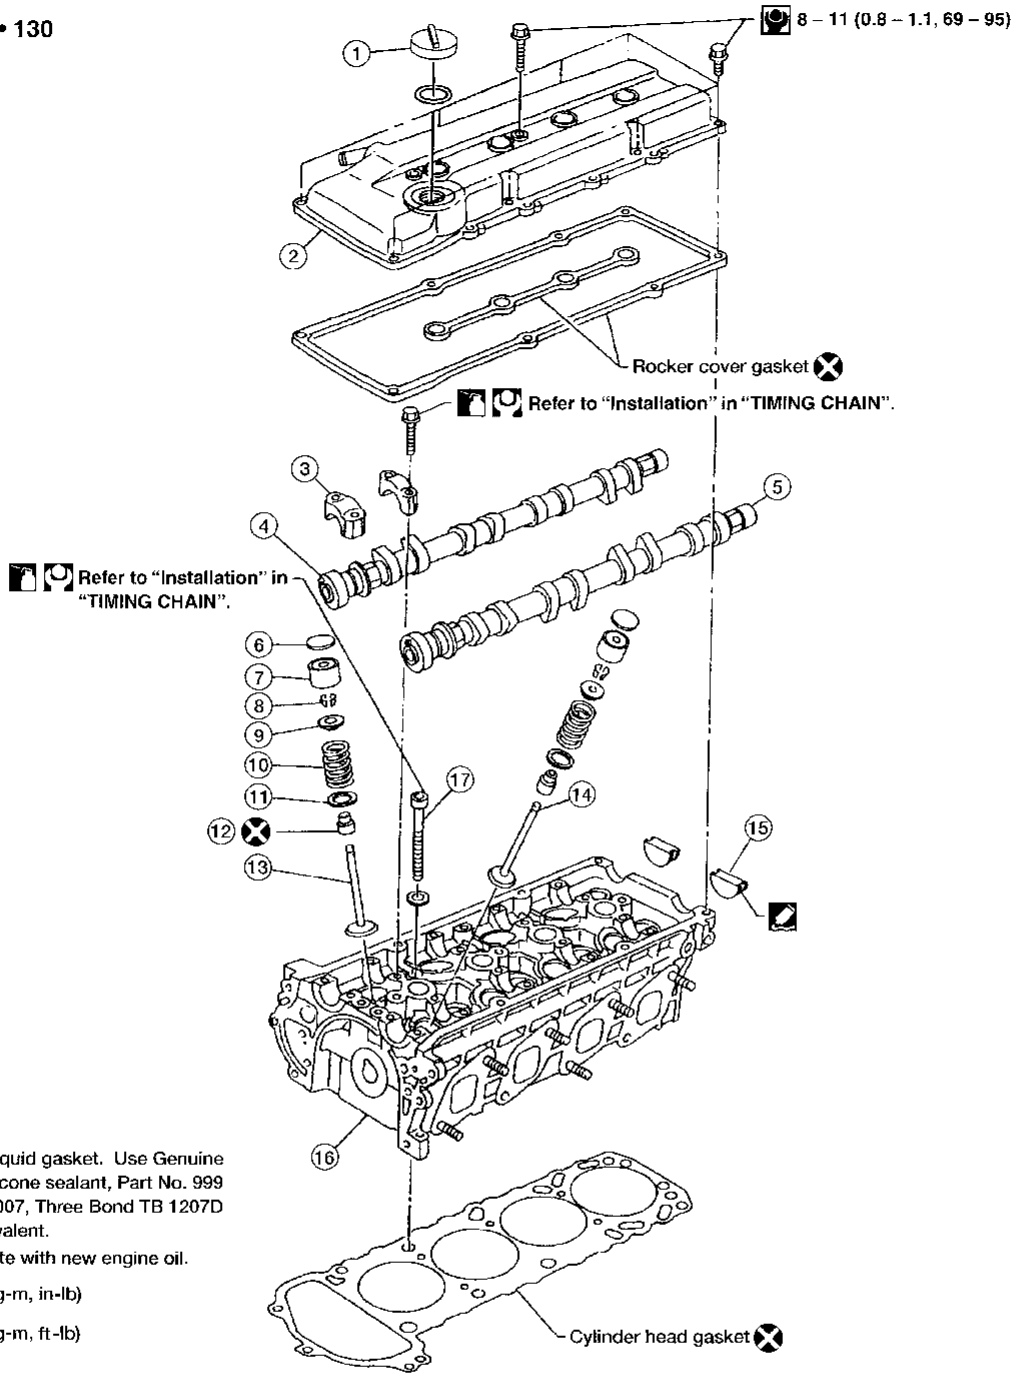

AEM353

- |                    |                   |                      |
|--------------------|-------------------|----------------------|
| ① Oil filler cap   | ⑦ Valve lifter    | ⑬ Intake valve       |
| ② Rocker cover     | ⑧ Valve cotter    | ⑭ Exhaust valve      |
| ③ Camshaft bracket | ⑨ Spring retainer | ⑮ Rubber plug        |
| ④ Intake camshaft  | ⑩ Valve spring    | ⑯ Cylinder head      |
| ⑤ Exhaust camshaft | ⑪ Spring seat     | ⑰ Cylinder head bolt |
| ⑥ Shim             | ⑫ Valve oil seal  |                      |

# CYLINDER HEAD

## CAUTION:

- When installing camshafts, chain tensioners, oil seals, or other sliding parts, lubricate contacting surfaces with new engine oil.
- Apply new engine oil to threads and seat surfaces when installing cylinder head, camshaft sprocket, crankshaft pulley, and camshaft bracket.
- Attach tags to valve lifters so as not to mix them up.

GI

MA

EM

LC

## Removal and Installation

- Removal and installation procedures are the same as those for timing chain. Refer to "Removal" and "Installation" in "TIMING CHAIN" (EM-18, EM-22).
- Before removing camshaft and idler sprockets, apply paint marks to them for retiming.

EC

FE

CL

MT

## Disassembly

1. Remove intake manifold and exhaust manifold. Refer to "OUTER COMPONENT PARTS" (EM-10).
2. Remove valve components.
3. Remove valve oil seal with a suitable tool.

AT

TF

PD

FA

RA

BR

ST


RS

BT


HA

EL

IDX

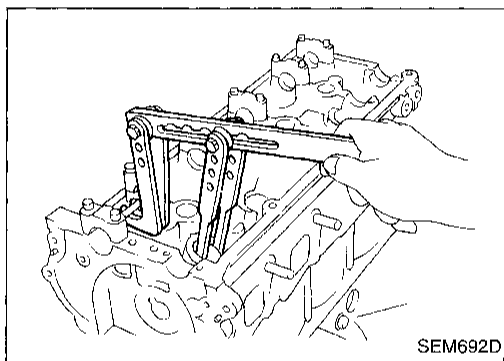

# CYLINDER HEAD

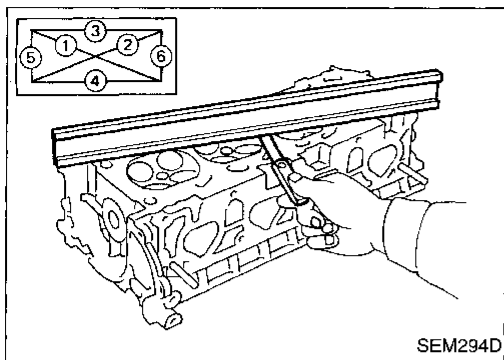

## Inspection

### CYLINDER HEAD DISTORTION

Clean surface of cylinder head.

Use a reliable straightedge and feeler gauge to check the flatness of cylinder head surface.

Check along six positions shown in the figure.

#### Head surface flatness:

**Standard** Less than 0.03 mm (0.0012 in)

**Limit** 0.1 mm (0.004 in)

If beyond the specified limit, replace it or resurface it.

#### Resurfacing limit:

The limit of cylinder head resurfacing is determined by the cylinder block resurfacing.

Amount of cylinder head resurfacing is "A".

Amount of cylinder block resurfacing is "B".

#### The maximum limit:

**A + B = 0.2 mm (0.008 in)**


After resurfacing cylinder head, check that camshaft rotates freely by hand. If resistance is felt, cylinder head must be replaced.

#### Nominal cylinder head height:

**126.3 - 126.5 mm (4.972 - 4.980 in)**

### CAMSHAFT VISUAL CHECK

Check camshaft for scratches, seizure and wear.

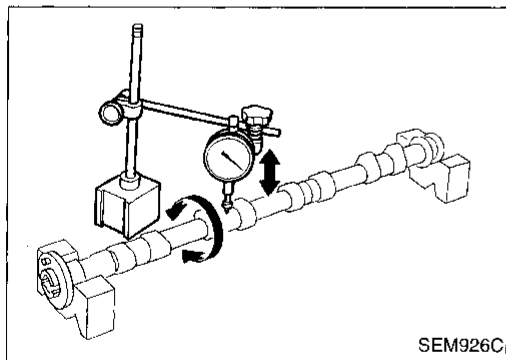

### CAMSHAFT RUNOUT

1. Measure camshaft runout at the center journal.

#### Runout (Total indicator reading):


**Standard:**

**Less than 0.02 mm (0.0008 in)**

**Limit:**

**0.04 mm (0.0016 in)**

2. If it exceeds the limit, replace camshaft.

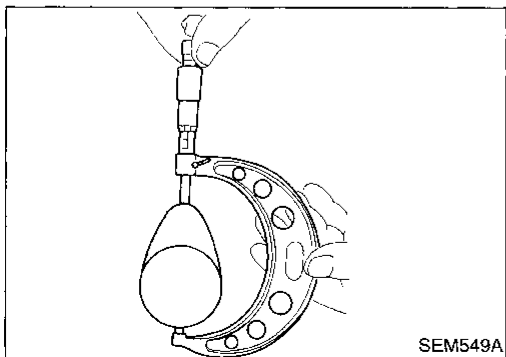

### CAMSHAFT CAM HEIGHT

1. Measure camshaft cam height.

#### Standard cam height:

**Intake 42.505 - 42.695 mm (1.673 - 1.681 in)**

**Exhaust 40.905 - 41.095 mm (1.610 - 1.618 in)**

#### Cam height wear limit:

**Intake & Exhaust**

**0.2 mm (0.008 in)**

2. If wear is beyond the limit, replace camshaft.

# CYLINDER HEAD

## Inspection (Cont'd)

### CAMSHAFT JOURNAL CLEARANCE

1. Install camshaft bracket and tighten bolts to the specified torque.
2. Measure inner diameter of camshaft bearing.

**Standard inner diameter:**

**#1 to #5 journals**

**28.000 - 28.025 mm (1.1024 - 1.1033 in)**

3. Measure outer diameter of camshaft journal.

**Standard outer diameter:**

**#1 to #5 journals**






**27.935 - 27.955 mm (1.0998 - 1.1006 in)**

4. If clearance exceeds the limit, replace camshaft and/or cylinder head.

**Camshaft journal clearance:**

**Standard 0.045 - 0.090 mm (0.0018 - 0.0035 in)**

**Limit 0.12 mm (0.0047 in)**

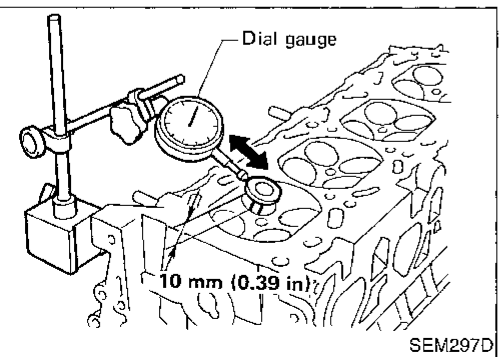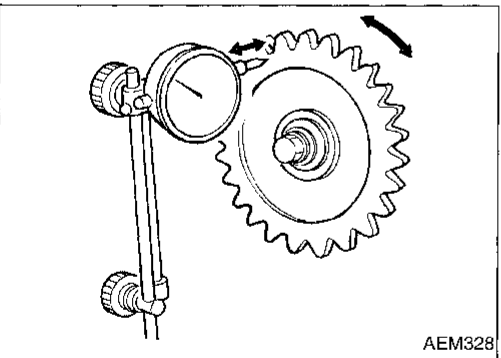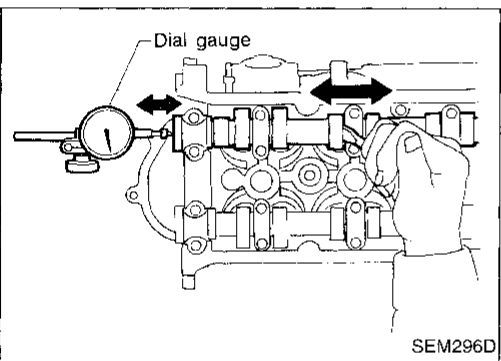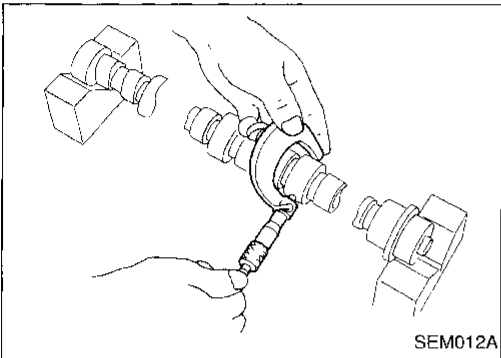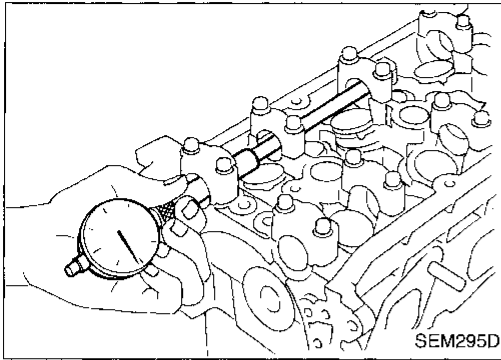

### CAMSHAFT END PLAY

1. Install camshaft in cylinder head.
2. Measure camshaft end play.

**Camshaft end play:**

**Standard**

**0.070 - 0.148 mm (0.0028 - 0.0058 in)**

**Limit**

**0.2 mm (0.008 in)**

3. If end play exceeds the limit, replace camshaft and remeasure camshaft end play.
4. If end play still exceeds the limit after replacing camshaft, replace cylinder head.

### CAMSHAFT SPROCKET RUNOUT

1. Install sprocket on camshaft.
2. Measure camshaft sprocket runout.

**Runout (Total indicator reading):**

**Limit 0.15 mm (0.0059 in)**

3. If it exceeds the limit, replace camshaft sprocket.

### VALVE GUIDE CLEARANCE

1. Measure valve deflection as shown in figure. (Valve and valve guide mostly wear in this direction.)

**Valve deflection limit (Dial gauge reading):**

**Intake & Exhaust**

**0.2 mm (0.008 in)**

GI

MA

EM

LC

EC

FE

CL

MT

AI

TF

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX

# CYLINDER HEAD

## Inspection (Cont'd)

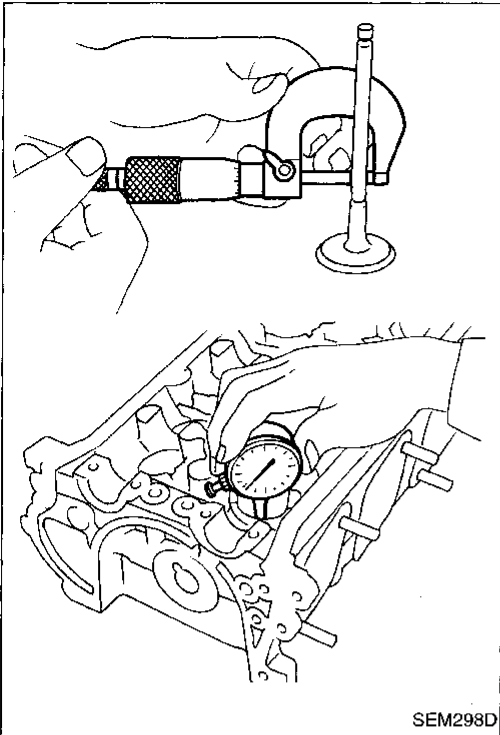

2. If it exceeds the limit, check valve to valve guide clearance.
  - a. Measure valve stem diameter and valve guide inner diameter.
  - b. Check that clearance is within specification.


**Valve to valve guide clearance = Valve guide inner diameter - Valve stem diameter:**

Unit: mm (in)


|         | Standard                           | Limit         |
|---------|------------------------------------|---------------|
| Intake  | 0.020 - 0.053<br>(0.0008 - 0.0021) | 0.08 (0.0031) |
| Exhaust | 0.040 - 0.073<br>(0.0016 - 0.0029) | 0.1 (0.004)   |

- c. If it exceeds the limit, replace valve and remeasure clearance.
  - If clearance still exceeds the limit after replacing valve, replace the valve guide.


## VALVE GUIDE REPLACEMENT

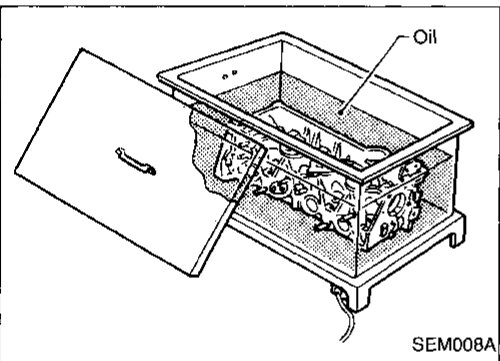

1. To remove valve guide, heat cylinder head to 120 to 140°C (248 to 284°F) by soaking in heated oil.

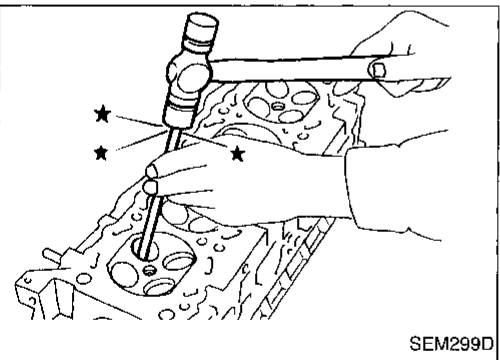

2. Drive out valve guide with a press [under a 20 kN (2 ton, 2.2 US ton, 2.0 Imp ton) pressure] or hammer and suitable tool.

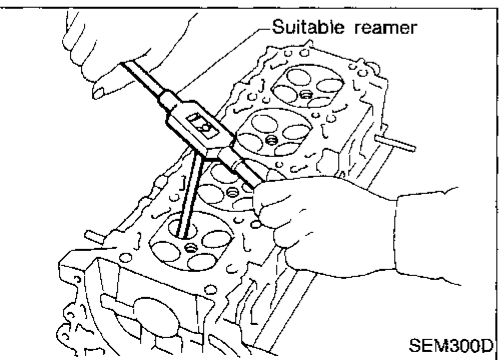

3. Ream cylinder head valve guide hole.

**Valve guide hole diameter  
(for service parts):**


**Intake & Exhaust**

**11.175 - 11.196 mm (0.4400 - 0.4408 in)**



# CYLINDER HEAD


## Inspection (Cont'd)

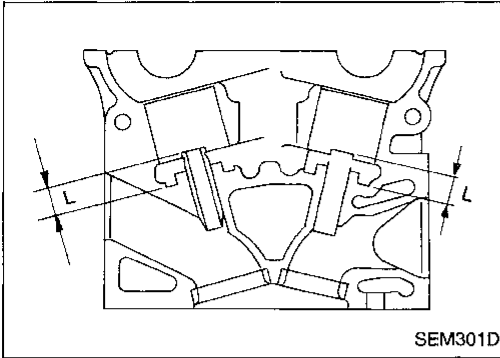

4. Heat cylinder head to 120 to 140°C (248 to 284°F) and press service valve guide onto cylinder head.

**Projection "L":**

**13.3 - 13.9 mm (0.524 - 0.547 in)**

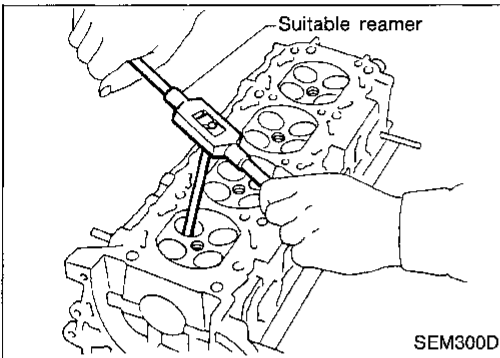


5. Ream valve guide.

**Finished size:**

**Intake & Exhaust**


**7.000 - 7.018 mm (0.2756 - 0.2763 in)**

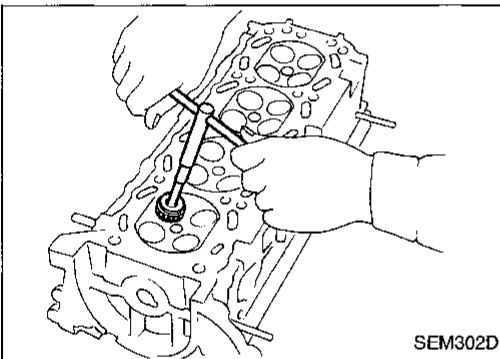

## VALVE SEATS

Check valve seats for pitting at contact surface. Resurface or replace if excessively worn.

- Before repairing valve seats, check valve and valve guide for wear. If they have worn, replace them. Then correct valve seat.
- Use both hands to cut uniformly.

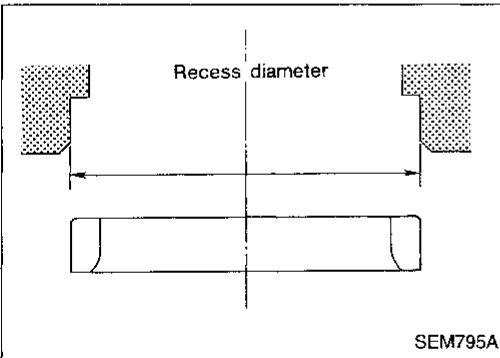

## REPLACING VALVE SEAT FOR SERVICE PARTS

1. Bore out old seat until it collapses. Boring should not continue beyond the bottom face of the seat recess in cylinder head. Set the machine depth stop to ensure this.

2. Ream cylinder head recess.


**Reaming bore for service valve seat**

**Oversize [0.5 mm (0.020 in)]:**

**Intake 38.000 - 38.016 mm (1.4961 - 1.4967 in)**

**Exhaust 32.700 - 32.716 mm (1.2874 - 1.2880 in)**

**Use the valve guide center for reaming to ensure valve seat will have the correct fit.**

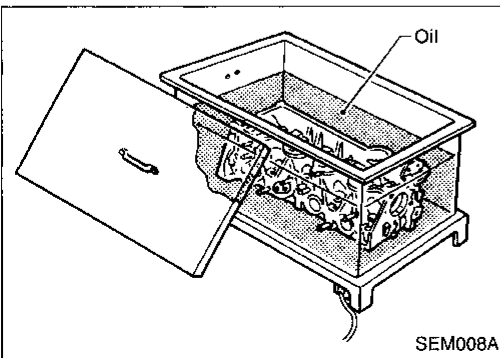


3. Heat cylinder head to 120 to 140°C (248 to 284°F).

4. Press fit valve seat until it seats on the bottom.

# CYLINDER HEAD

## Inspection (Cont'd)

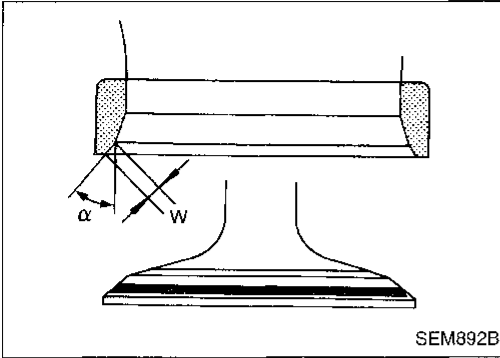

5. Cut or grind valve seat using suitable tool to the specified dimensions as shown in SDS.
6. After cutting, lap valve seat with abrasive compound.
7. Check valve seating condition.

**Seat face angle "α":**

**44°53' - 45°07' deg.**


**Contacting width "W":**

**Intake**

**1.48 - 1.63 mm (0.0583 - 0.0642 in)**

**Exhaust**

**1.8 - 2.0 mm (0.071 - 0.079 in)**

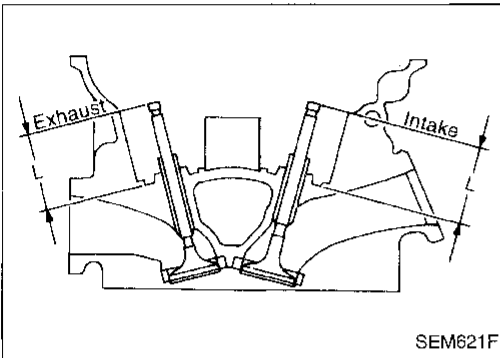


8. Use a depth gauge to measure the distance between the mounting surface of the cylinder head spring seat and the valve stem end. If the distance is shorter than specified, repeat step 5 above to adjust it. If it is longer, replace the valve seat with a new one.

**Valve seat resurface limit "L":**

**Intake 42.02 - 42.52 mm (1.6543 - 1.6740 in)**

**Exhaust 42.03 - 42.53 mm (1.6547 - 1.6744 in)**

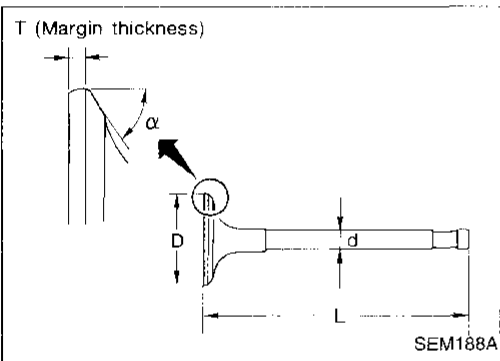


## VALVE DIMENSIONS

Check dimensions of each valve. For dimensions, refer to SDS (EM-52).

When valve head has been worn down to 0.5 mm (0.020 in) in margin thickness, replace valve.

**Grinding allowance for valve stem tip is 0.2 mm (0.008 in) or less.**

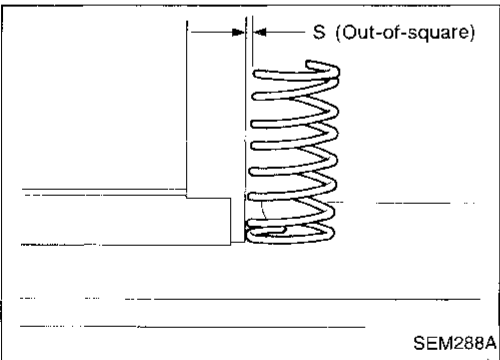

## VALVE SPRING


### Squareness

1. Measure dimension "S".

**Out-of-square "S":**

**Less than 2.2 mm (0.087 in)**

2. If it exceeds the limit, replace spring.

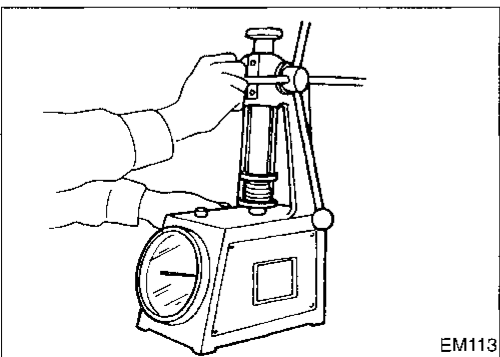

### Pressure

Check valve spring pressure at specified spring height.

**Pressure: N (kg, lb) at height mm (in)**

**Standard**

**418.0 (42.6, 93.9) at 29.17 (1.1484)**

**Limit**


**393.0 (40.1, 88.4) at 29.17 (1.1484)**

If it exceeds the limit, replace spring.


# CYLINDER HEAD

## Inspection (Cont'd)

### VALVE LIFTER AND VALVE SHIM

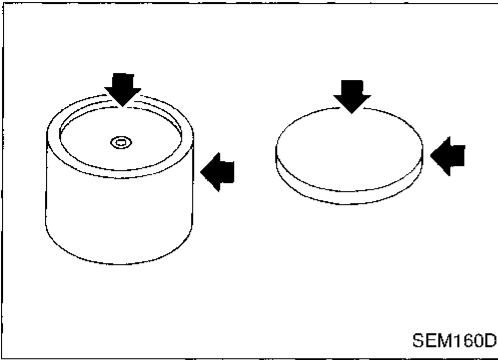

1. Visually check contact and sliding surfaces for wear and scratches.

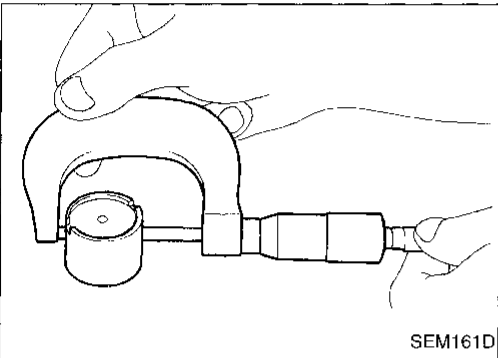

2. Check diameter of valve lifter and valve lifter guide bore.

#### Valve lifter diameter:

33.960 - 33.975 mm (1.3370 - 1.3376 in)



#### Lifter guide bore diameter:

34.000 - 34.021 mm (1.3386 - 1.3394 in)

#### Valve lifter to valve lifter guide clearance:

0.025 - 0.061 mm (0.0010 - 0.0024 in)

If it exceeds the standard diameter or clearance, replace valve lifter or cylinder head.

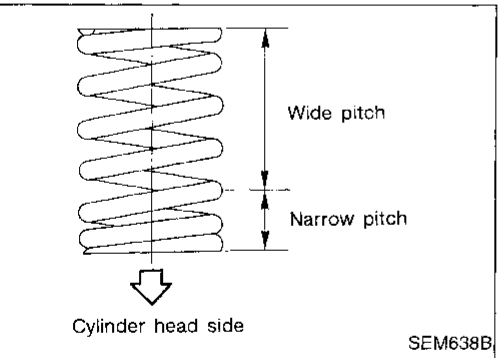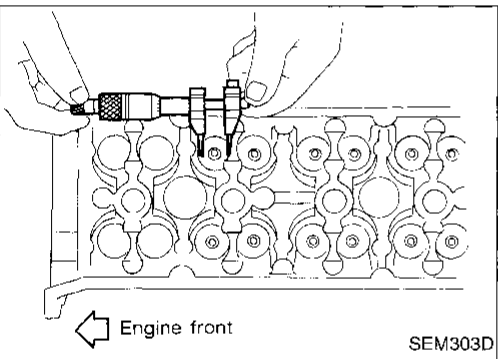

## Assembly


1. Install valve component parts.
  - **Always use new valve oil seal. Refer to "OIL SEAL REPLACEMENT" (EM-25).**
  - **Before installing valve oil seal, install valve spring seat.**
  - **Install outer valve spring (uneven pitch type) with its narrow pitch side toward cylinder head side.**
  - **After installing valve component parts, tap valve stem tip with plastic hammer to assure a proper fit.**

## Valve Clearance

### CHECKING

Check valve clearance while engine is warm but not running.

1. Remove rocker cover and all spark plugs.
  2. Set No. 1 cylinder at TDC on its compression stroke.
    - Align pointer with TDC mark on crankshaft pulley.
    - Check that valve lifters on No. 1 cylinder are loose and valve lifters on No. 4 are tight.
- If not, turn crankshaft one revolution (360°) and align as above.

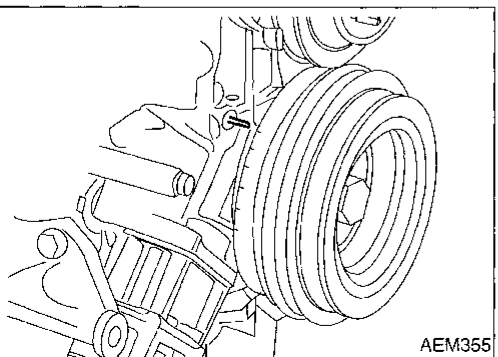

GI

MA

EM

LC

EC

FE

CL

WT

AT

TF

PD

FA

RA

BR

ST

RS

BT






HA

EL

IDX

# CYLINDER HEAD

## Valve Clearance (Cont'd)

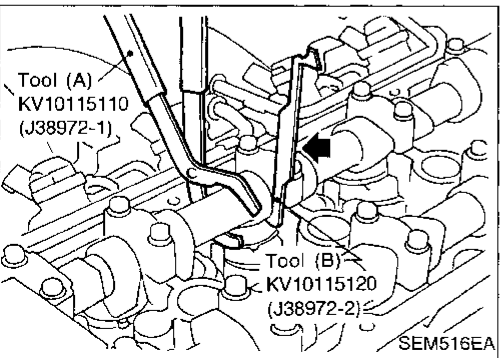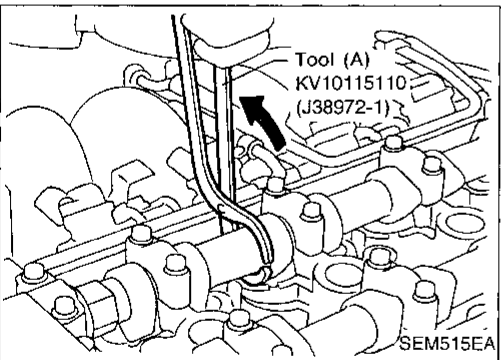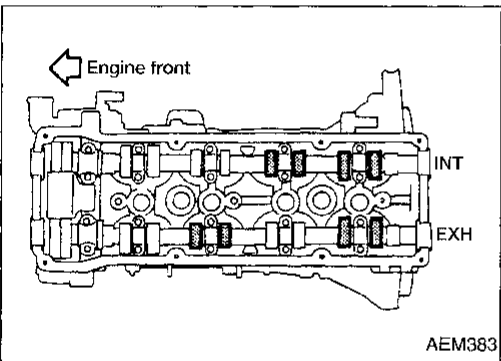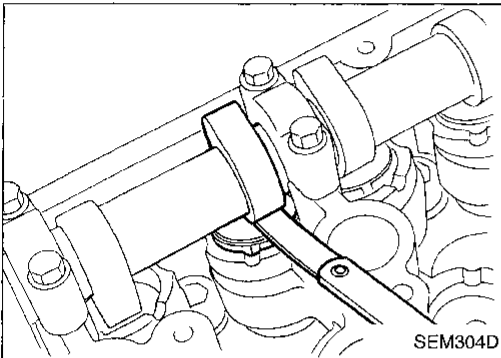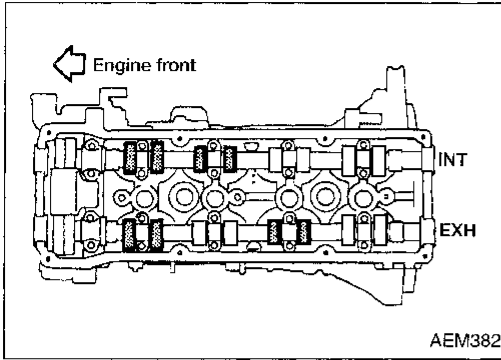

3. Check only those valves shown in the figure.

4. Using a feeler gauge, measure clearance between valve lifter and camshaft.
- Record any valve clearance measurements which are out of specification. They will be used later to determine the required replacement adjusting shim.

### Valve clearance (Hot):

#### Intake

0.31 - 0.39 mm (0.012 - 0.015 in)

#### Exhaust

0.33 - 0.41 mm (0.013 - 0.016 in)

5. Turn crankshaft one revolution (360°) and align mark on crankshaft pulley with pointer.
6. Check those valves shown in the figure.
- Use the same procedure as mentioned in step 4.
7. If all valve clearances are within specification, install the following parts.
- Rocker cover
  - All spark plugs

## ADJUSTING

### Adjust valve clearance while engine is cold.

- Turn crankshaft to position cam lobe on camshaft of valve that must be adjusted upward.
- Place Tool (A) around camshaft as shown in figure.
- Rotate Tool (A) so that lifter is pushed down.

**Before placing Tool (A), rotate notch toward center of cylinder head (See figure.), to simplify shim removal later.**

### CAUTION:

**Be careful not to damage cam surface with Tool (A).**


- Place Tool (B) between camshaft and the edge of the valve lifter to retain valve lifter.

### CAUTION:


- Tool (B) must be placed as close to camshaft bracket as possible.
  - Be careful not to damage cam surface with Tool (B).
- Remove Tool (A).

## CYLINDER HEAD

### Valve Clearance (Cont'd)

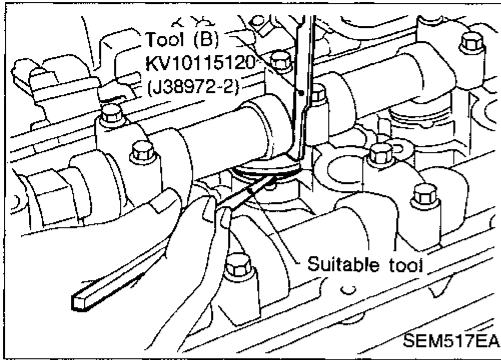


6. Remove adjusting shim using a small screwdriver and a magnetic finger.

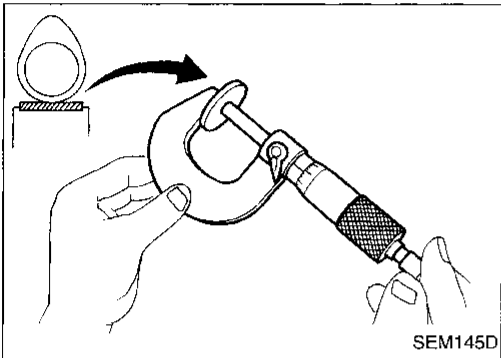

7. Determine replacement adjusting shim size as follows.
  - a. Using a micrometer determine thickness of removed shim.
  - b. Calculate thickness of new adjusting shim so valve clearance comes within specified values.  
R = Thickness of removed shim  
N = Thickness of new shim  
M = Measured valve clearance


#### Intake & Exhaust:

$$N = R + [M - 0.37 \text{ mm (0.0146 in)}]$$

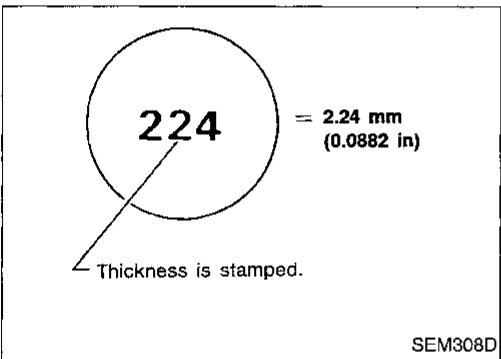

Shims are available in thicknesses from 1.96 mm (0.0772 in) to 2.68 mm (0.1055 in), in steps of 0.02 mm (0.0008 in).

- c. Select new shim with thickness as close as possible to calculated value.  
Refer to SDS, EM-53.

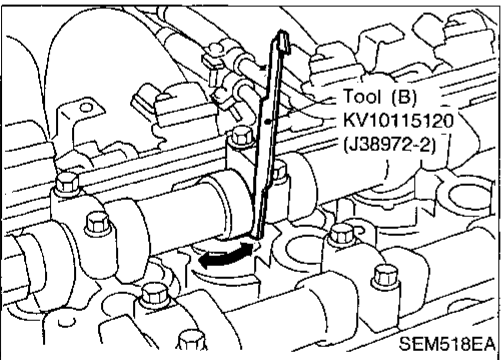

8. Install new shim using a suitable tool.
  - **Install with the surface on which the thickness is stamped facing down.**
9. Place Tool (A) as mentioned in steps 2 and 3.
10. Remove Tool (B).
11. Remove Tool (A).
12. Recheck valve clearance.  
Refer to "CHECKING" (EM-35).

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT


HA


EL

IDX

# ENGINE REMOVAL

## SEC. 112

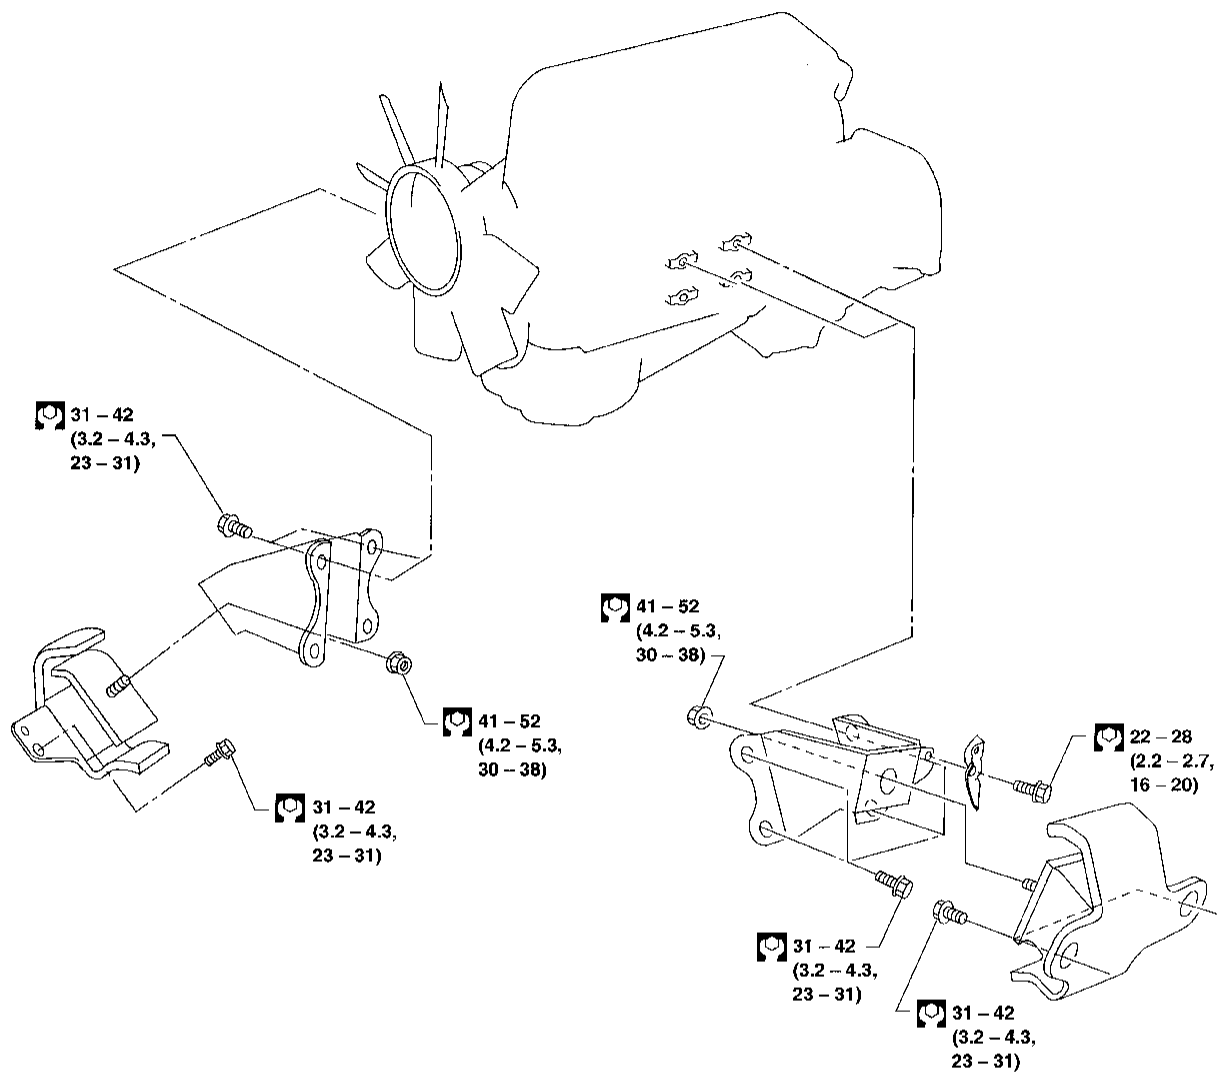

 : N·m (kg·m, ft·lb)

## WARNING:

- Position vehicle on a flat and solid surface.
- Place chocks at front and back of rear wheels.
- Do not remove engine until exhaust system has completely cooled off.  
Otherwise, you may burn yourself and/or fire may break out in fuel line.
- Before disconnecting fuel hose, release fuel pressure. Refer to EC section (“Fuel Pressure Release”, “BASIC SERVICE PROCEDURE”).
- Be sure to hoist engine and transmission in a safe manner.
- For engines not equipped with engine slingers, attach proper slingers and bolts described in PARTS CATALOG.

## CAUTION:

- When lifting engine, be sure to clear surrounding parts. Take special care near accelerator wire casing, brake lines and brake master cylinder.
- In hoisting the engine, always use engine slingers in a safe manner.
- Before separating engine and transmission, remove the crankshaft position sensor (OBD) from the assembly.
- Always take extra care not to damage edge of crankshaft position sensor (OBD) or ring gear teeth.

## Removal

1. Drain coolant from engine block and radiator. Refer to MA section (“Changing Engine Coolant”, “ENGINE MAINTENANCE”).
2. Release fuel pressure. Refer to EC section (“Fuel Pressure Release”, “BASIC SERVICE PROCEDURE”).
3. Remove negative battery cable.
4. Remove hood. Refer to BT section.
5. Remove air cleaner.
6. Remove power steering drive belt, generator drive belt and A/C compressor drive belt.
7. Remove radiator. Refer to LC section (“Radiator”, “ENGINE COOLING SYSTEM”).
8. Remove exhaust manifold heat shield.
9. Disconnect exhaust system from #1 catalytic converter.
10. Remove A/C compressor from bracket. Refer to HA section (“Compressor Mounting”, “SERVICE PROCEDURES”).
11. Disconnect accelerator wire, vacuum hoses, electrical connectors, heater hoses and vacuum booster hose.

GI

MA

EM

LC

EC

PE

CL

MT

AT

TF

PD

FA

RA

ER

ST

RS

BT

HA


EL

IDX

## ENGINE REMOVAL

### Removal (Cont'd)

12. Remove four power steering pump bolts.
13. Remove transmission Refer to MT or AT section ("Removal", "REMOVAL AND INSTALLATION").
14. Remove LH and RH engine mounts.
15. Remove engine.

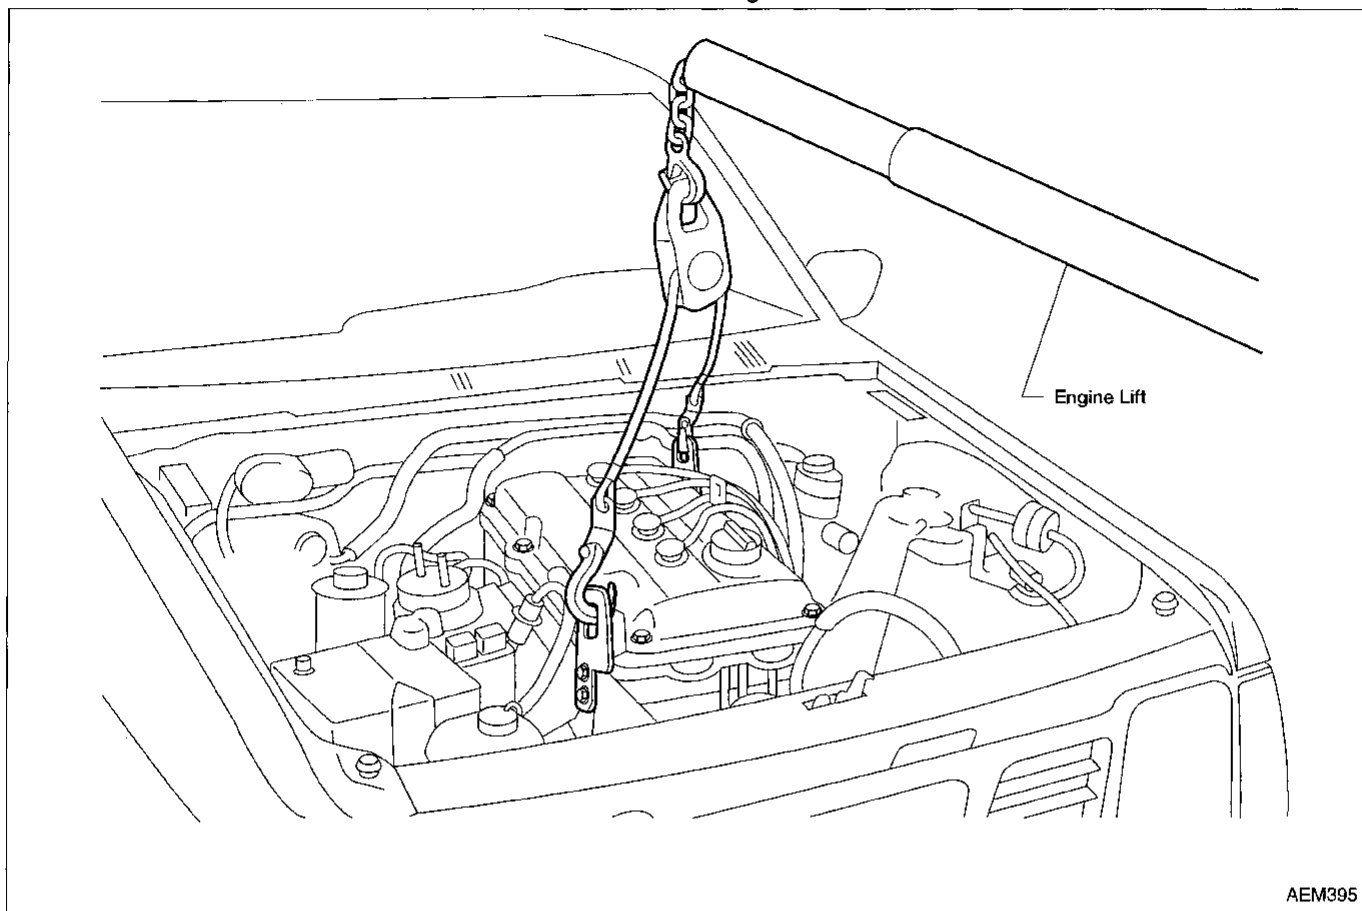


### Installation

- Install in reverse order of removal.



# CYLINDER BLOCK

SEC. 110 • 120 • 135 • 150 • 210

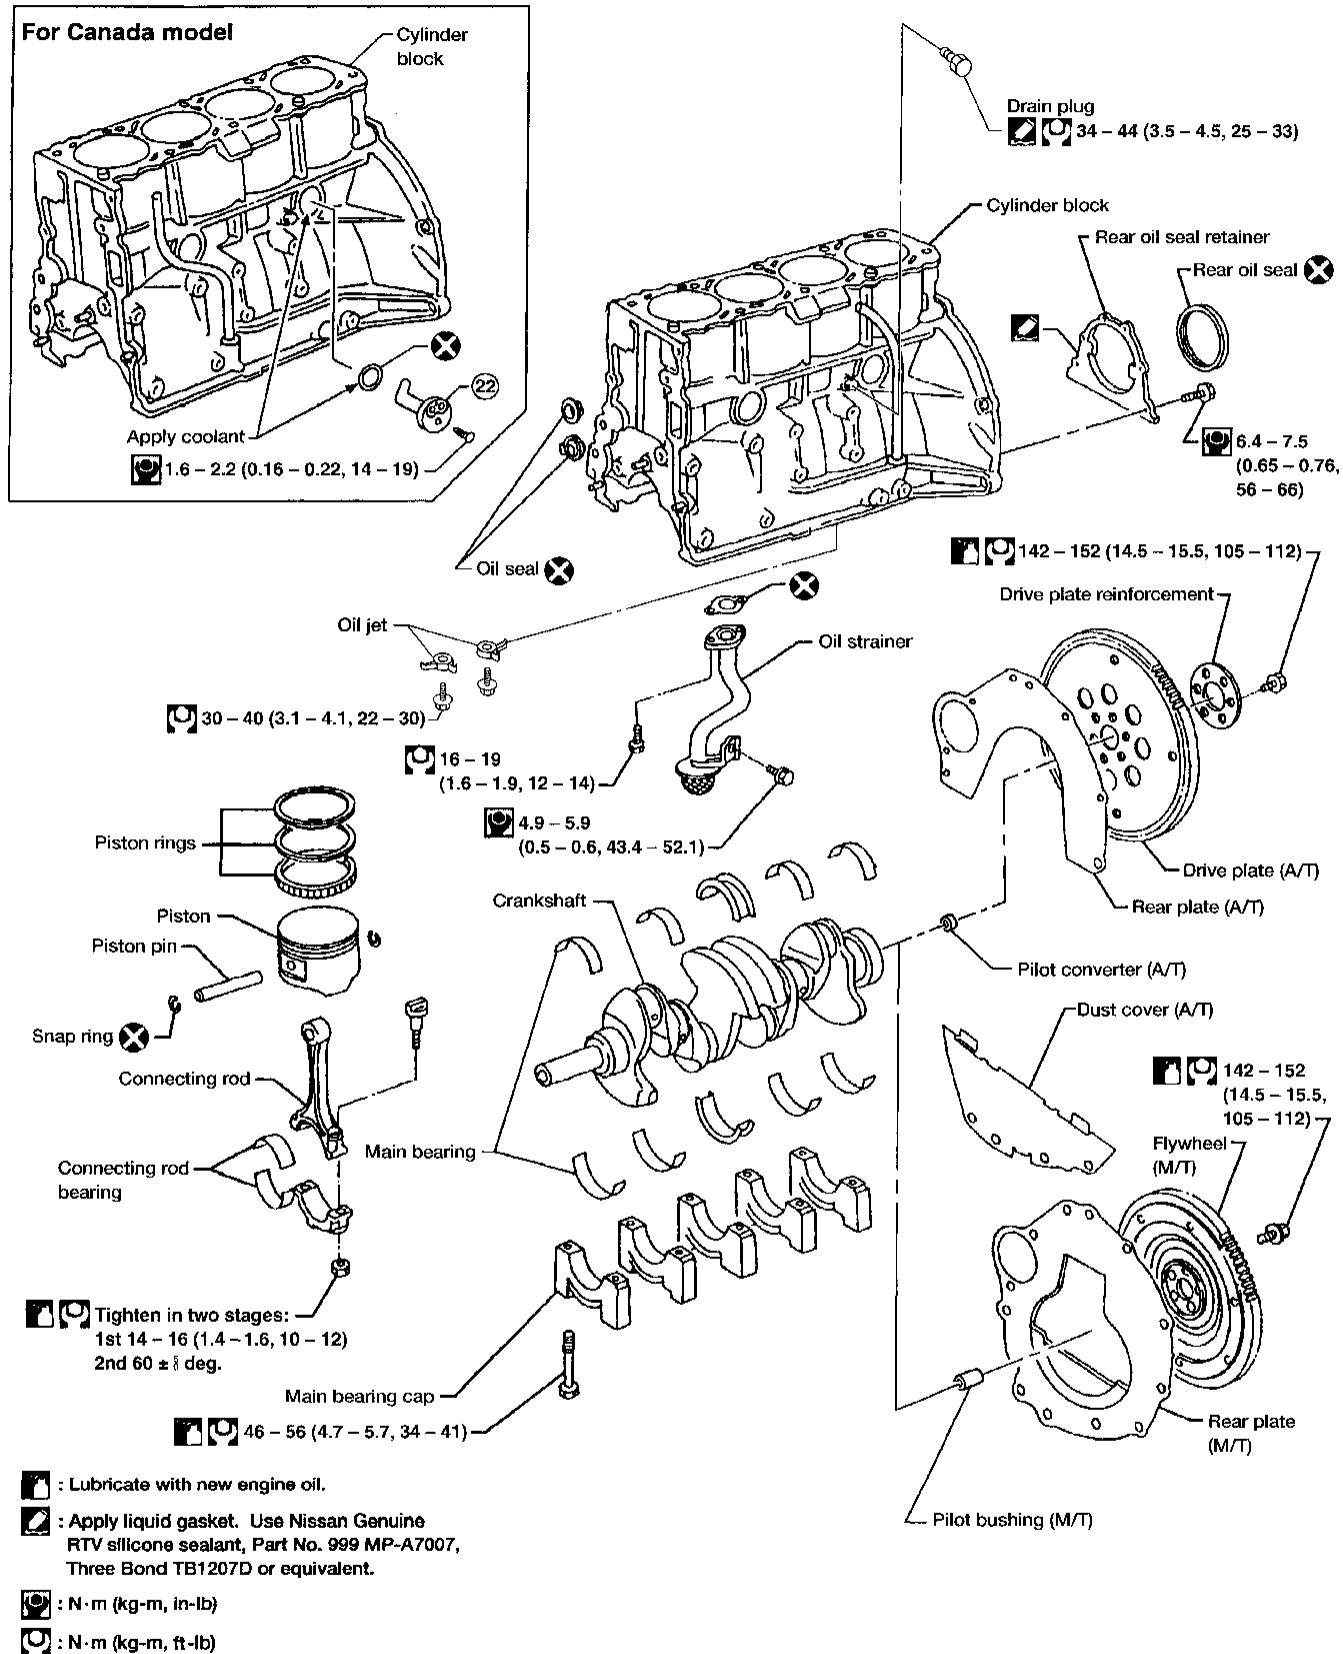

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
TF  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# CYLINDERBLOCK





## CAUTION:

- When installing sliding parts (bearings, pistons, etc.), lubricate contacting surfaces with new engine oil.
- Place removed parts such as bearings and bearing caps in their proper order and direction.
- When installing connecting rod nuts and main bearing cap bolts, apply new engine oil to threads and seating surfaces.
- Do not allow any magnetic materials to contact the ring gear teeth of flywheel or drive plate.

## Disassembly

### PISTON AND CRANKSHAFT

1. Place engine on a work stand.
  2. Drain coolant and oil.
  3. Remove oil pan.
  4. Remove timing chain. Refer to "Removal" in "TIMING CHAIN" (EM-18).
  5. Remove water pump.
  6. Remove cylinder head.
  7. Remove pistons with connecting rods.
  8. Remove bearing caps and crankshaft.
- Before removing bearing caps, measure crankshaft end play. Refer to EM-49.
  - Bolts should be loosened in two or three steps.

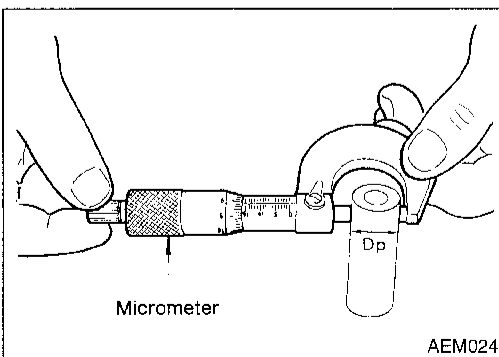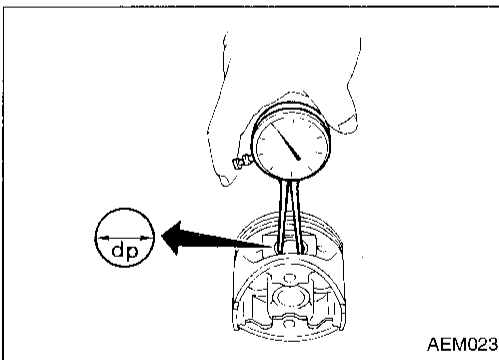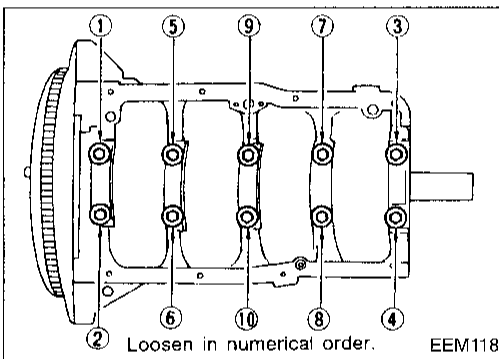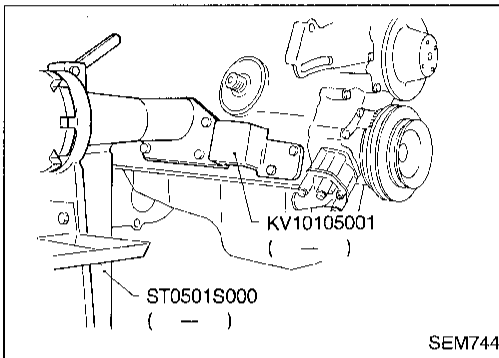

## Inspection

### PISTON AND PISTON PIN CLEARANCE

1. Measure inner diameter of piston pin hole "dp".  
Standard diameter "dp":  
20.993 - 21.005 mm (0.8265 - 0.8270 in)
2. Measure outer diameter of piston pin "Dp".  
Standard diameter "Dp":  
20.989 - 21.001 mm (0.8263 - 0.8268 in)
3. Calculate piston pin clearance.  
 $dp - Dp = -0.002 - 0.01 \text{ mm } (-0.0001 - 0.0004 \text{ in})$   
If it exceeds the above value, replace piston assembly with pin.

# CYLINDER BLOCK

## Inspection (Cont'd)

### PISTON RING SIDE CLEARANCE

Side clearance:

Top ring 0.04 - 0.08 mm (0.0016 - 0.0031 in)



2nd ring 0.03 - 0.07 mm (0.0012 - 0.0028 in)

Max. limit of side clearance:

0.1 mm (0.004 in)

If out of specification, replace piston ring.

If clearance exceeds maximum limit with new ring, replace piston.

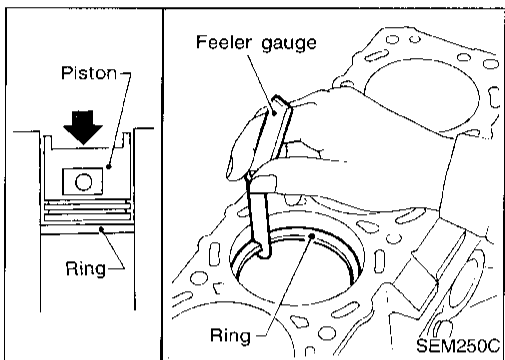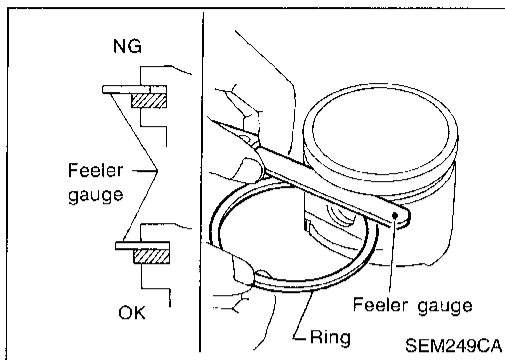

### PISTON RING END GAP

End gap:

Top ring

0.28 - 0.52 mm (0.0110 - 0.0205 in)

2nd ring

0.45 - 0.69 mm (0.0177 - 0.0272 in)

(R or T is punched on the ring.)

0.55 - 0.70 mm (0.0217 - 0.0276 in)

(N is punched on the ring.)

Oil ring


0.20 - 0.69 mm (0.0079 - 0.0272 in)

Max. limit of ring gap:

Refer to SDS, EM-57.

If out of specification, replace piston ring. If gap exceeds maximum limit with a new ring, rebore cylinder and use oversized piston and piston rings. Refer to SDS, EM-57.

- When replacing the piston, check cylinder block surface for scratches or seizure. If scratches or seizure are found, hone or replace the cylinder block.

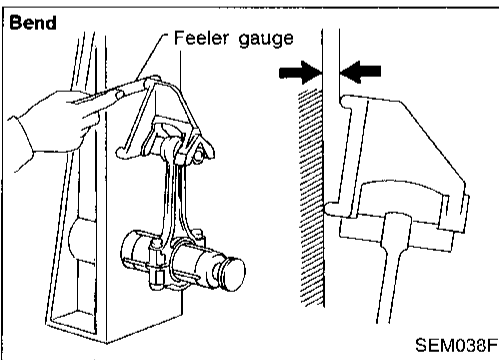

### CONNECTING ROD BEND AND TORSION

Bend:

Limit 0.15 mm (0.0059 in)


per 100 mm (3.94 in) length

Torsion:

Limit 0.30 mm (0.0118 in)

per 100 mm (3.94 in) length

If it exceeds the limit, replace connecting rod assembly.


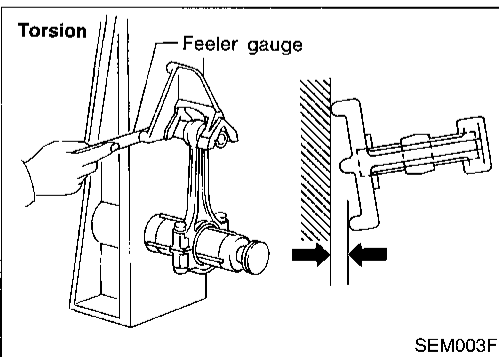


# CYLINDER BLOCK

## Inspection (Cont'd)

### CYLINDER BLOCK DISTORTION AND WEAR

Measuring points

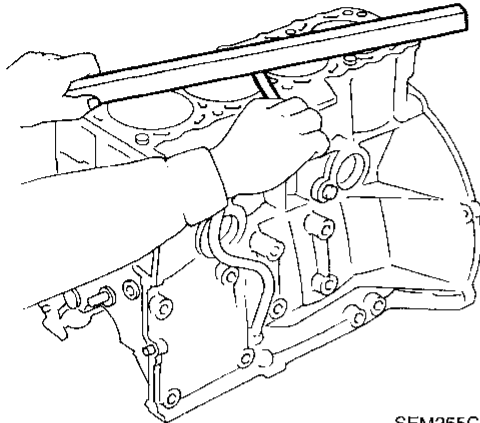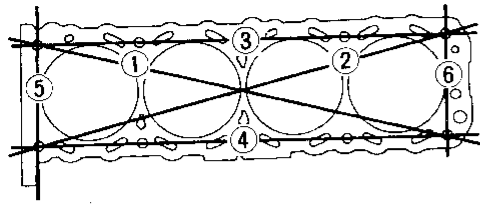

SEM255CB

1. Clean upper face of cylinder block.  
Use a reliable straightedge and feeler gauge to check the flatness of cylinder block surface. Check along six positions shown in figure.

**Limit:**

**0.1 mm (0.004 in)**

2. If out of specification, resurface it.  
The limit for cylinder block resurfacing is determined by cylinder head resurfacing.

**Amount of cylinder head resurfacing is "A"**

**Amount of cylinder block resurfacing is "B"**

**The maximum limit is as follows:**

**A + B = 0.2 mm (0.008 in)**

**Nominal cylinder block height**

**from crankshaft center:**

**246.95 - 247.05 mm (9.7224 - 9.7264 in)**

3. If necessary, replace cylinder block.

### PISTON-TO-BORE CLEARANCE

1. Using a bore gauge, measure cylinder bore for wear, out-of-round and taper.

**Standard inner diameter:**

**Refer to SDS, EM-55.**

**Wear limit: 0.2 mm (0.008 in)**


**Out-of-round (X - Y) standard: 0.015 mm (0.0006 in)**

**Taper (A - B) standard: 0.010 mm (0.0004 in)**

If it exceeds the limit, rebore all cylinders. Replace cylinder block if necessary.


2. Check for scratches and seizure. If seizure is found, hone it.

- **If cylinder block and piston are replaced, match piston grade with grade number on cylinder block upper surface.**

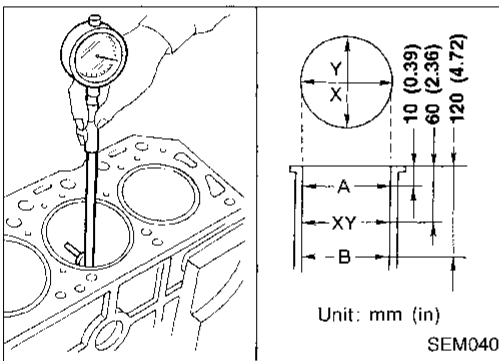


Unit: mm (in)

SEM040

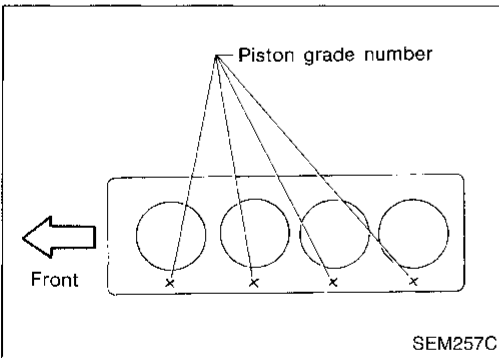

SEM257C

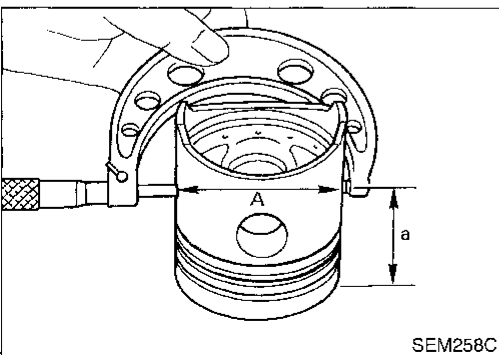

SEM258C

3. Measure piston skirt diameter.

**Piston diameter "A":**

**Refer to SDS, EM-57.**

**Measuring point "a" (Distance from the top):**

**Approximately 48 mm (1.89 in)**

4. Check that piston-to-bore clearance is within specification.

**Piston-to-bore clearance "B":**

**0.020 - 0.040 mm (0.0008 - 0.0016 in)**

5. Determine piston oversize according to amount of cylinder wear.

# CYLINDER BLOCK

## Inspection (Cont'd)

Oversize pistons are available for service. Refer to SDS, EM-57. GI

6. Cylinder bore size is determined by adding piston-to-bore clearance to piston diameter "A". MA

**Rebored size calculation:**

$$D = A + B - C$$

where,


**D: Bored diameter**

**A: Piston diameter as measured**

**B: Piston-to-bore clearance**

**C: Honing allowance 0.02 mm (0.0008 in)**

7. Install main bearing caps and tighten bolts to the specified torque. This will prevent distortion of cylinder bores. EC
8. Cut cylinder bores.
  - **When any cylinder needs boring, all other cylinders must also be bored.** FE
  - **Do not cut too much out of cylinder bore at a time. Cut only 0.05 mm (0.0020 in) or so at a time.**
9. Hone cylinders to obtain specified piston-to-bore clearance. CL
10. Measure finished cylinder bore for out-of-round and taper.
  - **Measurement should be done after cylinder bore cools down.** MT

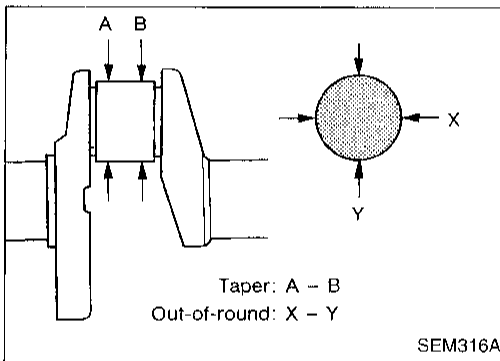

## CRANKSHAFT

1. Check crankshaft main and pin journals for score, wear or cracks. AT
2. With a micrometer, measure journals for taper and out-of-round. TF

**Out-of-round (X - Y):**

**Main journal Less than 0.01 mm (0.0004 in)**

**Crank pin Less than 0.005 mm (0.0002 in)**

**Taper (A - B):**


**Main journal Less than 0.01 mm (0.0004 in)**

**Crank pin Less than 0.005 mm (0.0002 in)**

3. Measure crankshaft runout. PD

**Runout (Total indicator reading):**

**Less than 0.10 mm (0.0039 in)** FA

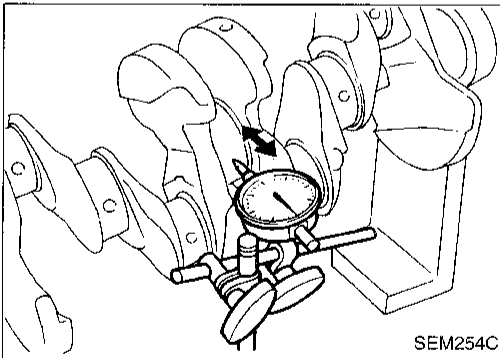


## BEARING CLEARANCE

- Use Method A or Method B. Method A is preferred because it is more accurate. RA

**Method A (Using bore gauge and micrometer)** BR


### Main bearing

1. Set main bearings in their proper positions on cylinder block and main bearing cap. ST

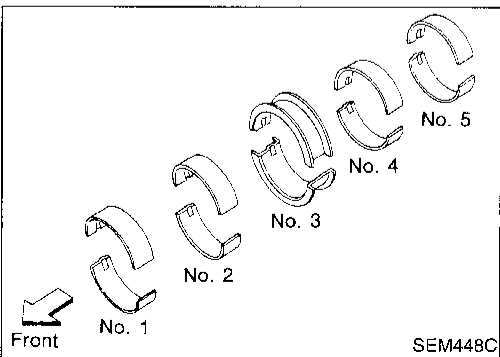


# CYLINDER BLOCK


## Inspection (Cont'd)

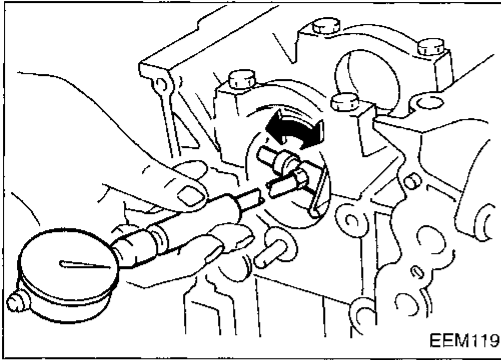


2. Install main bearing cap to cylinder block.
  - **Tighten all bolts in correct order in two or three stages. Refer to EM-41 and EM-49.**
3. Measure inner diameter "A" of each main bearing.

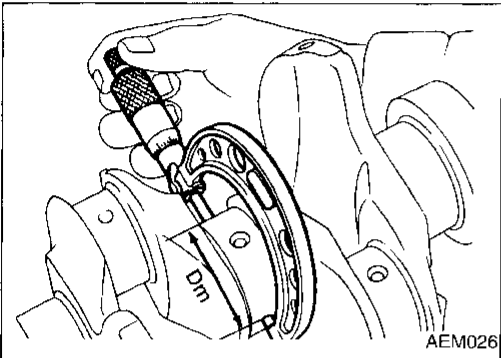


4. Measure outer diameter "Dm" of each crankshaft main journal.
5. Calculate main bearing clearance.  
Main bearing clearance = A - Dm  
**Standard:**  
0.020 - 0.047 mm (0.0008 - 0.0019 in)  
**Limit:**  
0.1 mm (0.004 in)
6. If it exceeds the limit, replace bearing.
7. If clearance cannot be adjusted within the standard of any bearing, grind crankshaft journal and use undersized bearing.

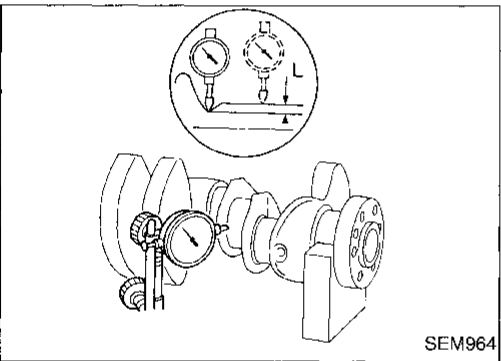

- a. **When grinding crankshaft journal, confirm that "L" dimension in fillet roll is more than the specified limit.**  
"L": 0.1 mm (0.004 in)
- b. **Refer to SDS EM-58 & EM-59 for grinding crankshaft and available service parts.**

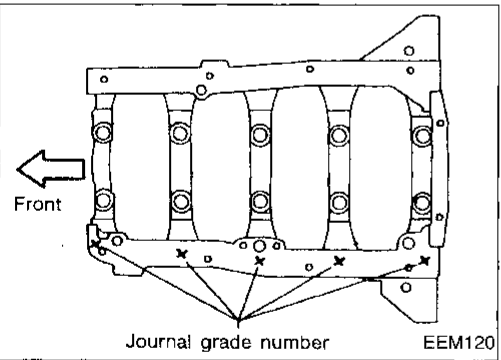

8. If crankshaft is reused, measure main bearing clearance and select thickness of main bearing.  
If crankshaft or cylinder block is replaced, select thickness of main bearings as follows:
  - a. Grade number of each cylinder block main journal is punched on the respective cylinder block. These numbers are punched in either Arabic or Roman numerals.

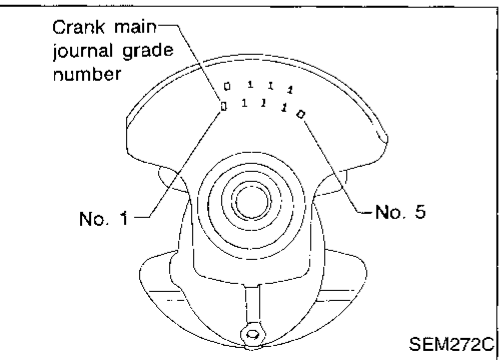





- b. Grade number of each crankshaft main journal is punched on crankshaft. These numbers are punched in either Arabic or Roman numerals.
- c. Select main bearing with suitable thickness according to the following example or table.  
For example:  
Main journal grade number: 1  
Crankshaft journal grade number: 2  
Main bearing grade number = 1 + 2  
= 3 (Yellow)

# CYLINDERBLOCK

## Inspection (Cont'd)

Main bearing grade number and identification color:

|                                 |         | Main journal grade number |            |            |
|---------------------------------|---------|---------------------------|------------|------------|
|                                 |         | 0                         | 1          | 2          |
| Crankshaft journal grade number | 0       | 0 (Black)                 | 1 (Brown)  | 2 (Green)  |
|                                 | 1 or I  | 1 (Brown)                 | 2 (Green)  | 3 (Yellow) |
|                                 | 2 or II | 2 (Green)                 | 3 (Yellow) | 4 (Blue)   |

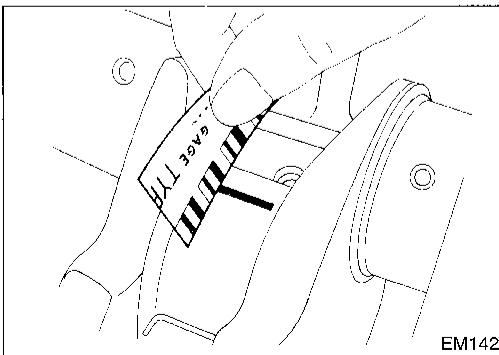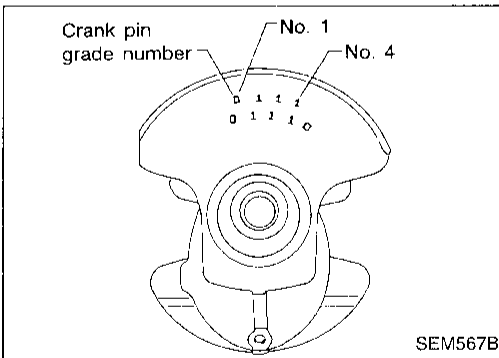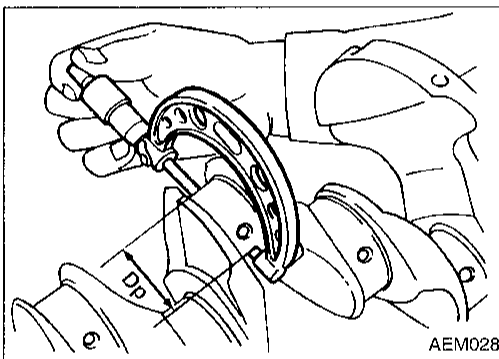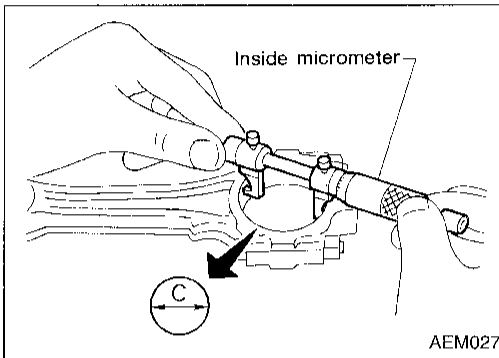

### Connecting rod bearing (Big end)

1. Install connecting rod bearing to connecting rod and cap.
2. Install connecting rod cap to connecting rod.
- **Tighten bolts to the specified torque.**
3. Measure inner diameter "C" of each bearing.

4. Measure outer diameter "Dp" of each crankshaft pin journal.
5. Calculate connecting rod bearing clearance.

$$\text{Connecting rod bearing clearance} = C - Dp:$$

**Standard**

0.010 - 0.035 mm (0.0004 - 0.0014 in)

**Limit**

0.09 mm (0.0035 in)

6. If it exceeds the limit, replace bearing.
7. If clearance cannot be adjusted within the standard of any bearing, grind crankshaft journal and use undersized bearing. Refer to step 5 of "BEARING CLEARANCE" EM-45.

8. If crankshaft is replaced, select connecting rod bearing according to the following table.

### Connecting rod bearing grade number:

These numbers are punched in either Arabic or Roman numerals.

| Crank pin grade number | Connecting rod bearing grade number |
|------------------------|-------------------------------------|
| 0                      | 0                                   |
| 1 or I                 | 1                                   |
| 2 or II                | 2                                   |

### Method B (Using plastigage)

#### CAUTION:

- Do not turn crankshaft or connecting rod while plastigage is being inserted.
- When bearing clearance exceeds the specified limit, ensure that the proper bearing has been installed. Then if excessive bearing clearance exists, use a thicker main bearing or undersized bearing so that the specified bearing clearance is obtained.

# CYLINDER BLOCK

## Inspection (Cont'd)

### CONNECTING ROD BUSHING CLEARANCE (Small end)


1. Measure inner diameter "C" of bushing.
2. Measure outer diameter "Dp" of piston pin.
3. Calculate connecting rod bushing clearance.

$$C - D_p =$$

0.001 to 0.013 mm (0 to 0.0005 in) (Standard)

0.023 mm (0.0009 in) (Limit)

If out of specification, replace connecting rod assembly and/or piston set with pin.

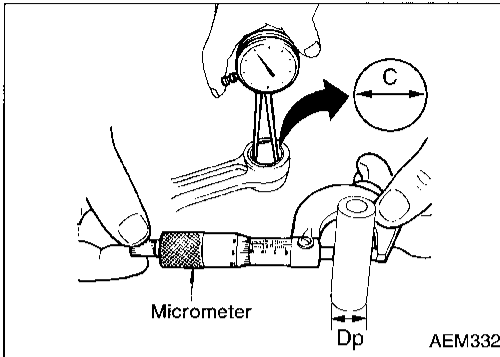

### REPLACEMENT OF CONNECTING ROD BUSHING (Small end)


1. Drive in small end bushing until it is flush with end surface of rod.

**Be sure to align the oil holes.**

2. Ream the bushing until clearance with piston pin is within specification.

**Clearance between connecting rod bushing and piston pin:**

0.001 - 0.013 mm (0 - 0.0005 in)

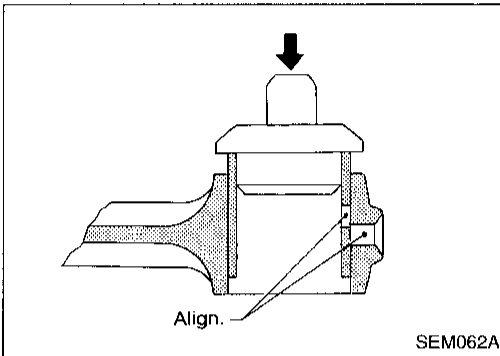

### FLYWHEEL/DRIVE PLATE RUNOUT

Runout (Total indicator reading):

Flywheel (M/T model)


Less than 0.15 mm (0.006 in)

Drive plate (A/T model)

Less than 0.15 mm (0.006 in)

#### CAUTION:

- Be careful not to damage the ring gear teeth.
- Check the drive plate for deformation and cracks.
- Do not allow any magnetic materials to contact the ring gear teeth.
- Do not resurface the flywheel. Replace as necessary.


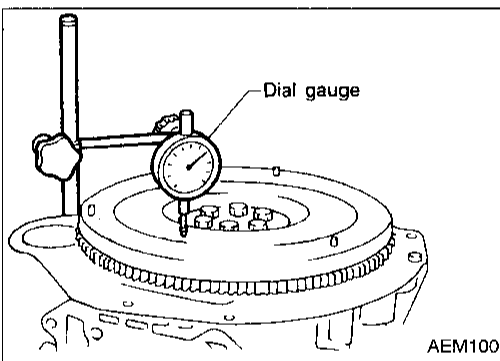


## Assembly

### PISTON

1. Heat piston to 60 to 70°C (140 to 158°F) and assemble piston, piston pin and connecting rod.


- Align the direction of piston and connecting rod.
- Numbers stamped on connecting rod and cap correspond to each cylinder.
- After assembly, make sure connecting rod swings smoothly.

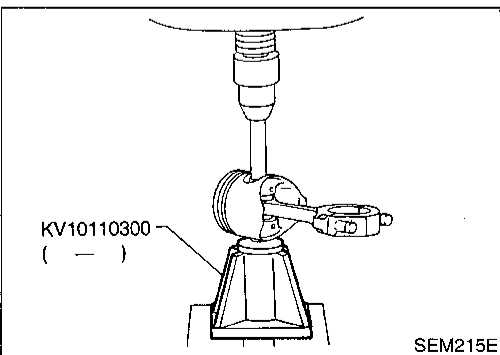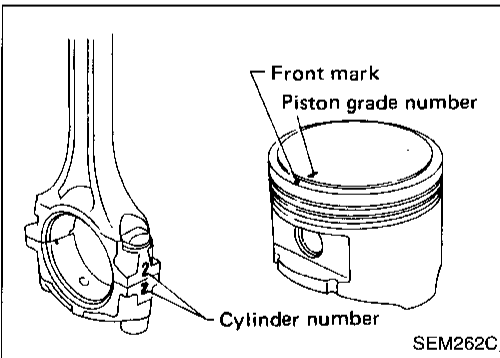



# CYLINDER BLOCK


## Assembly (Cont'd)

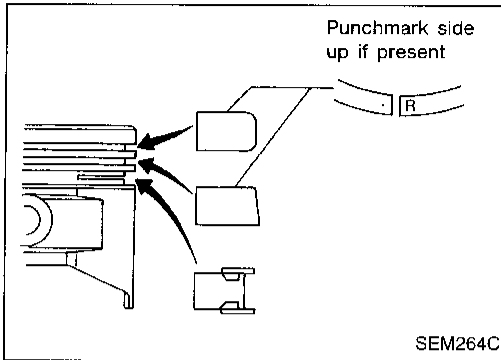


2. Set piston rings as shown.

### CAUTION:

- When piston rings are not replaced, make sure that piston rings are mounted in their original positions.
- When piston rings are being replaced and no punchmark is present, piston rings can be mounted with either side up.

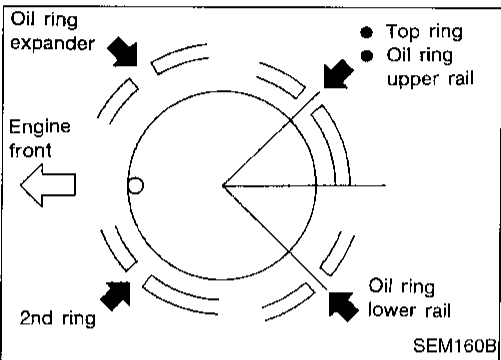


3. Align piston rings so that end gaps are positioned as shown.

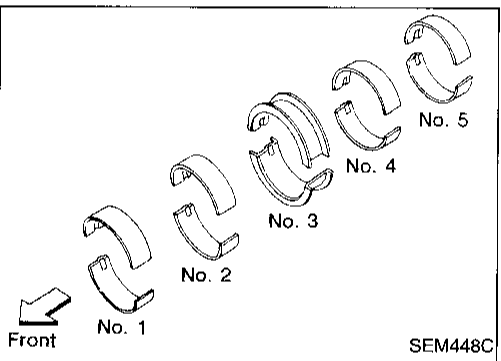

## CRANKSHAFT


1. Set main bearings in their proper positions on cylinder block and main bearing caps.

- Confirm that correct main bearings are used. Refer to EM-45.
- Apply new engine oil to bearing surfaces.

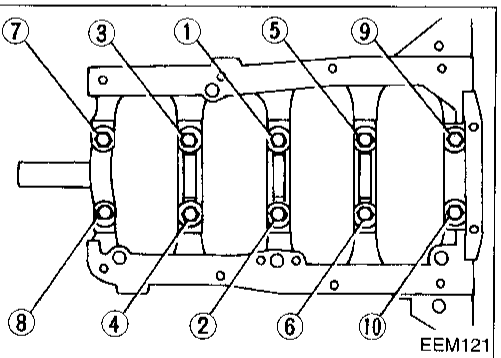

2. Install crankshaft and main bearing caps and tighten bolts to the specified torque. Refer to EM-41.

- Apply new engine oil to the bolt threads and seat surface.
- Prior to tightening bearing cap bolts, place bearing cap in its proper position by shifting crankshaft in the axial direction.
- Tighten bearing cap bolts gradually in two or three stages. Start with center bearing and move outward as shown in figure.
- After securing bearing cap bolts, make sure crankshaft turns smoothly by hand.

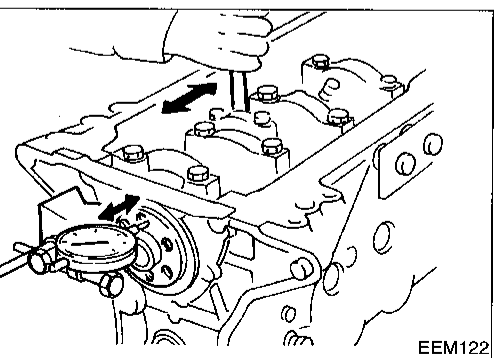

3. Measure crankshaft end play.

### Crankshaft end play:

#### Standard

0.05 - 0.18 mm (0.0020 - 0.0071 in)

#### Limit

0.3 mm (0.012 in)

If beyond the limit, replace No. 3 bearing with a new one.

GI

MA

EM

LC

EC

FE

GL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT


HA

EL


IDX

# CYLINDER BLOCK


## Assembly (Cont'd)

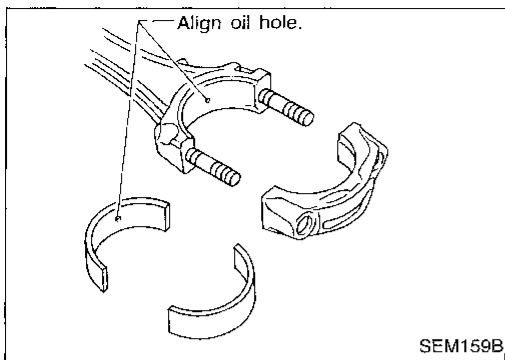

4. Install connecting rod bearings in connecting rods and connecting rod caps.
  - Confirm that correct bearings are used. Refer to EM-47.
  - Install bearings so that oil hole in connecting rod aligns with oil hole of bearing.
  - Apply new engine oil to bearing surfaces, bolt threads and seating surfaces.

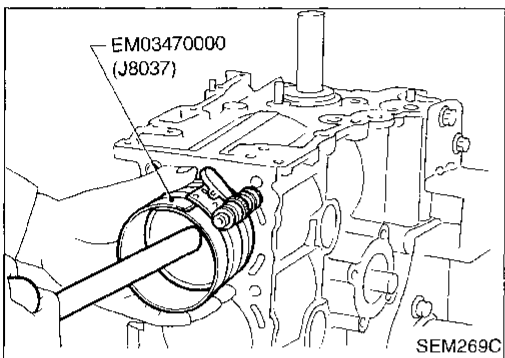


5. Install pistons with connecting rods.
  - a. Install them into corresponding cylinders with Tool.
    - Arrange so that front mark on piston head faces toward front of engine.
    - Make sure connecting rod does not scratch cylinder wall.
    - Make sure connecting rod bolts do not scratch crankshaft journals.
    - Apply new engine oil to piston rings and sliding surface of piston.

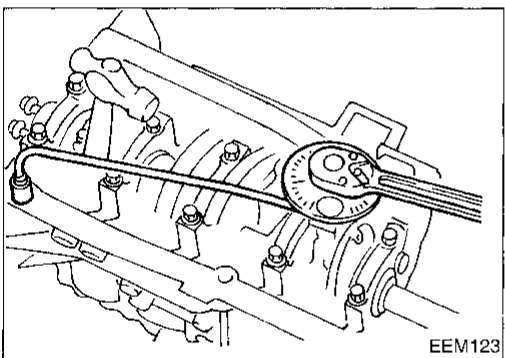

- b. Install connecting rod bearing caps. Tighten connecting rod bearing cap nuts using the following procedure.

### Connecting rod bearing nut:

- (1) Tighten to 14 to 16 N·m (1.4 to 1.6 kg-m, 10 to 12 ft-lb).
- (2) Tighten bolts  $60^{+5}_0$  degrees clockwise with an angle wrench.  
If an angle wrench is not available, tighten them to 38 to 44 N·m (3.9 to 4.5 kg-m, 28 to 33 ft-lb).

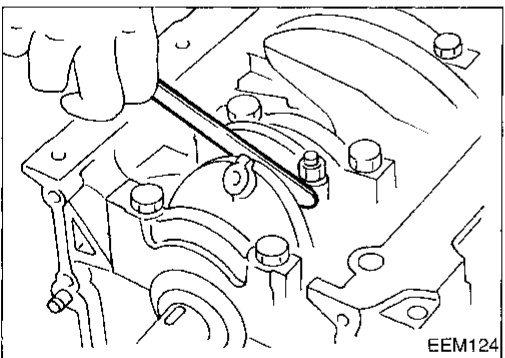


6. Measure connecting rod side clearance.

### Connecting rod side clearance:

- Standard**  
0.2 - 0.4 mm (0.008 - 0.016 in)
- Limit**  
0.6 mm (0.024 in)

If beyond the limit, replace connecting rod and/or crankshaft.

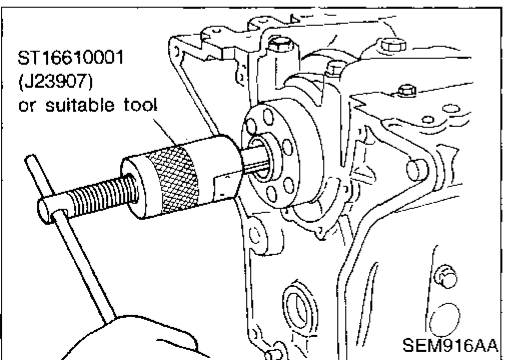


## REPLACING PILOT BUSHING

1. Remove pilot bushing (M/T) or pilot convertor (A/T).

# CYLINDER BLOCK

## Assembly (Cont'd)

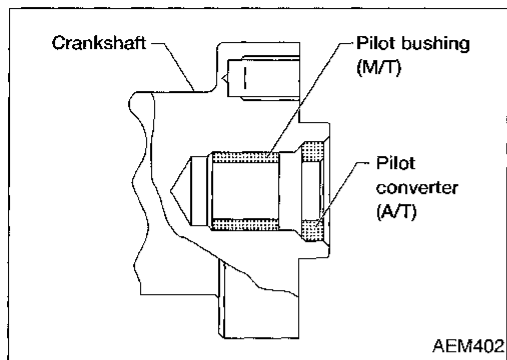

2. Install pilot bushing (M/T) or pilot converter (A/T).

GI

MA

**EM**

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

# SERVICE DATA AND SPECIFICATIONS (SDS)

## General Specifications

|                         |                         |                       |
|-------------------------|-------------------------|-----------------------|
| Cylinder arrangement    | In-line 4               |                       |
| Displacement            | cm <sup>3</sup> (cu in) | 2,389 (145.78)        |
| Bore and stroke         | mm (in)                 | 89 x 96 (3.50 x 3.78) |
| Valve arrangement       | DOHC                    |                       |
| Firing order            | 1-3-4-2                 |                       |
| Number of piston rings  |                         |                       |
| Compression             | 2                       |                       |
| Oil                     | 1                       |                       |
| Number of main bearings | 5                       |                       |
| Compression ratio       | 9.2                     |                       |

## COMPRESSION PRESSURE


|                                      |  |  |
|--------------------------------------|--|--|
|                                      | Unit: kPa (kg/cm <sup>2</sup> , psi)/300 rpm |  |
| Compression pressure                 |  |  |
| Standard                             | 1,226 (12.5, 178)                            |  |
| Minimum                              | 1,030 (10.5, 149)                            |  |
| Differential limit between cylinders | 98 (1.0, 14)                                 |  |

## Inspection and Adjustment

### CYLINDER HEAD

Unit: mm (in)

|                         | Standard                | Limit       |
|-------------------------|-------------------------|-------------|
| Head surface distortion | Less than 0.03 (0.0012) | 0.1 (0.004) |

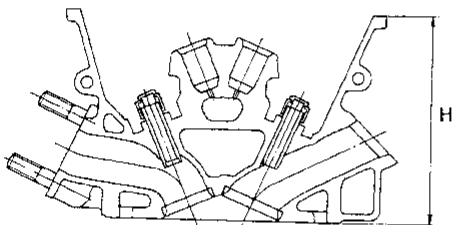


Nominal cylinder head height:  
H = 126.3 - 126.5 (4.972 - 4.980)

SEM519E

### VALVE

Unit: mm (in)

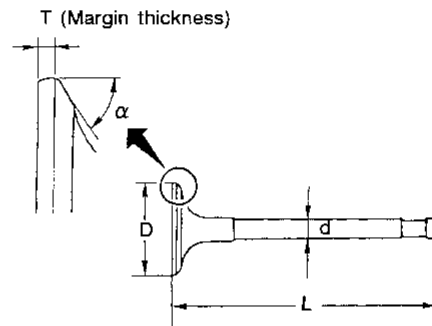

SEM188

#### Valve head diameter "D"

|         |                             |
|---------|-----------------------------|
| Intake  | 36.5 - 36.7 (1.437 - 1.445) |
| Exhaust | 31.2 - 31.4 (1.228 - 1.236) |

#### Valve length "L"

|         |                                      |
|---------|--------------------------------------|
| Intake  | 101.17 - 101.47<br>(3.9831 - 3.9949) |
| Exhaust | 98.67 - 98.97<br>(3.8846 - 3.8964)   |

#### Valve stem diameter "d"

|         |                                 |
|---------|---------------------------------|
| Intake  | 6.965 - 6.980 (0.2742 - 0.2748) |
| Exhaust | 6.945 - 6.960 (0.2734 - 0.2740) |

#### Valve seat angle "α"

|                  |                 |
|------------------|-----------------|
| Intake & Exhaust | 45°15' - 45°07' |
|------------------|-----------------|

#### Valve margin "T"

|         |                               |
|---------|-------------------------------|
| Intake  | 0.95 - 1.25 (0.0374 - 0.0492) |
| Exhaust | 1.15 - 1.45 (0.0453 - 0.0571) |

#### Valve margin "T" limit

More than 0.5 (0.020)

#### Valve stem end surface grinding limit

Less than 0.2 (0.008)

# SERVICE DATA AND SPECIFICATIONS (SDS)


## Inspection and Adjustment (Cont'd)

### Valve spring

|  |          |   |
|--|----------|---|
| Free height                              | mm (in)  | 50.3 (1.9831)                           |
| Pressure<br>N (kg, lb) at height mm (in) |          |   |
|  | Standard | 418.0 (42.6, 93.9)<br>at 29.17 (1.1484) |
|  | Limit    | 393.0 (40.1, 88.4)<br>at 29.17 (1.1484) |
| Out-of-square                            | mm (in)  | Less than 2.2 (0.087)                   |

### Valve guide

Unit: mm (in)

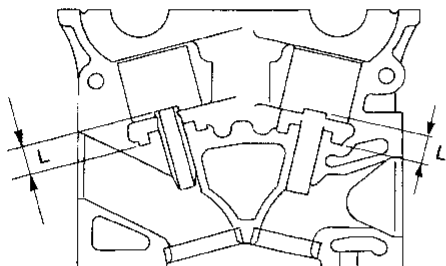

SEM301D

|   |                                | Standard                             | Service                              |
|---|--------------------------------|--------------------------------------|--------------------------------------|
| Valve guide                             | Outer diameter                 |                                      |                                      |
|   | Intake                         | 11.023 - 11.034<br>(0.4340 - 0.4344) | 11.223 - 11.234<br>(0.4418 - 0.4423) |
|   | Exhaust                        | 11.023 - 11.034<br>(0.4340 - 0.4344) | 11.223 - 11.234<br>(0.4418 - 0.4423) |
| Valve guide                             | Inner diameter (Finished size) |                                      |                                      |
|   | Intake                         | 7.000 - 7.018 (0.2756 - 0.2763)      |                                      |
|   | Exhaust                        | 7.000 - 7.018 (0.2756 - 0.2763)      |                                      |
| Cylinder head valve guide hole diameter | Intake                         | 10.975 - 10.996<br>(0.4321 - 0.4329) | 11.175 - 11.196<br>(0.4400 - 0.4408) |
|   | Exhaust                        | 10.975 - 10.996<br>(0.4321 - 0.4329) | 11.175 - 11.196<br>(0.4400 - 0.4408) |
| Interference fit of valve guide         |                                | 0.027 - 0.059 (0.0011 - 0.0023)      |                                      |
| Stem to guide clearance                 |                                | Standard                             | Limit                                |
|   | Intake                         | 0.020 - 0.053<br>(0.0008 - 0.0021)   | 0.08 (0.0031)                        |
|   | Exhaust                        | 0.040 - 0.073<br>(0.0016 - 0.0029)   | 0.1 (0.004)                          |
| Valve deflection limit                  |                                | 0.2 (0.008)                          |                                      |
| Projection length "L"                   |                                | 13.3 - 13.9 (0.524 - 0.547)          |                                      |

### Valve lifter

Unit: mm (in)

|   |                                      |
|---|--------------------------------------|
| Valve lifter outer diameter               | 33.960 - 33.975<br>(1.3370 - 1.3376) |
| Lifter guide inner diameter               | 34.000 - 34.021<br>(1.3386 - 1.3394) |
| Clearance between lifter and filter guide | 0.025 - 0.061<br>(0.0010 - 0.0024)   |


### Valve clearance adjustment

Unit: mm (in)

|                       |                             |
|-----------------------|-----------------------------|
| Valve clearance (Hot) |                             |
| Intake                | 0.31 - 0.39 (0.012 - 0.015) |
| Exhaust               | 0.33 - 0.41 (0.013 - 0.016) |

### Available shims

| Thickness mm (in) | Identification mark |
|-------------------|---------------------|
| 1.96 (0.0772)     | 196                 |
| 1.98 (0.0780)     | 198                 |
| 2.00 (0.0787)     | 200                 |
| 2.02 (0.0795)     | 202                 |
| 2.04 (0.0803)     | 204                 |
| 2.06 (0.0811)     | 206                 |
| 2.08 (0.0819)     | 208                 |
| 2.10 (0.0827)     | 210                 |
| 2.12 (0.0835)     | 212                 |
| 2.14 (0.0843)     | 214                 |
| 2.16 (0.0850)     | 216                 |
| 2.18 (0.0858)     | 218                 |
| 2.20 (0.0866)     | 220                 |
| 2.22 (0.0874)     | 222                 |
| 2.24 (0.0882)     | 224                 |
| 2.26 (0.0890)     | 226                 |
| 2.28 (0.0898)     | 228                 |
| 2.30 (0.0906)     | 230                 |
| 2.32 (0.0913)     | 232                 |
| 2.34 (0.0921)     | 234                 |
| 2.36 (0.0929)     | 236                 |
| 2.38 (0.0937)     | 238                 |
| 2.40 (0.0945)     | 240                 |
| 2.42 (0.0953)     | 242                 |
| 2.44 (0.0961)     | 244                 |
| 2.46 (0.0969)     | 246                 |
| 2.48 (0.0976)     | 248                 |
| 2.50 (0.0984)     | 250                 |
| 2.52 (0.0992)     | 252                 |
| 2.54 (0.1000)     | 254                 |
| 2.56 (0.1008)     | 256                 |
| 2.58 (0.1016)     | 258                 |
| 2.60 (0.1024)     | 260                 |
| 2.62 (0.1031)     | 262                 |
| 2.64 (0.1039)     | 264                 |
| 2.66 (0.1047)     | 266                 |
| 2.68 (0.1055)     | 268                 |

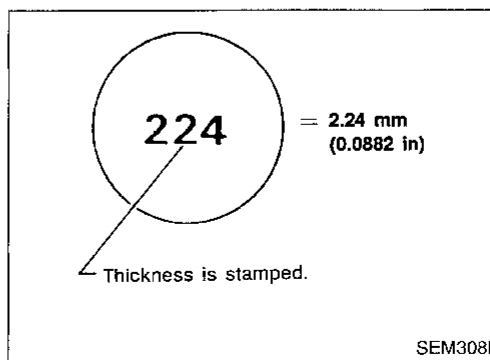


SEM308D

# SERVICE DATA AND SPECIFICATIONS (SDS)

## Inspection and Adjustment (Cont'd)


### Valve seat

Unit: mm (in)

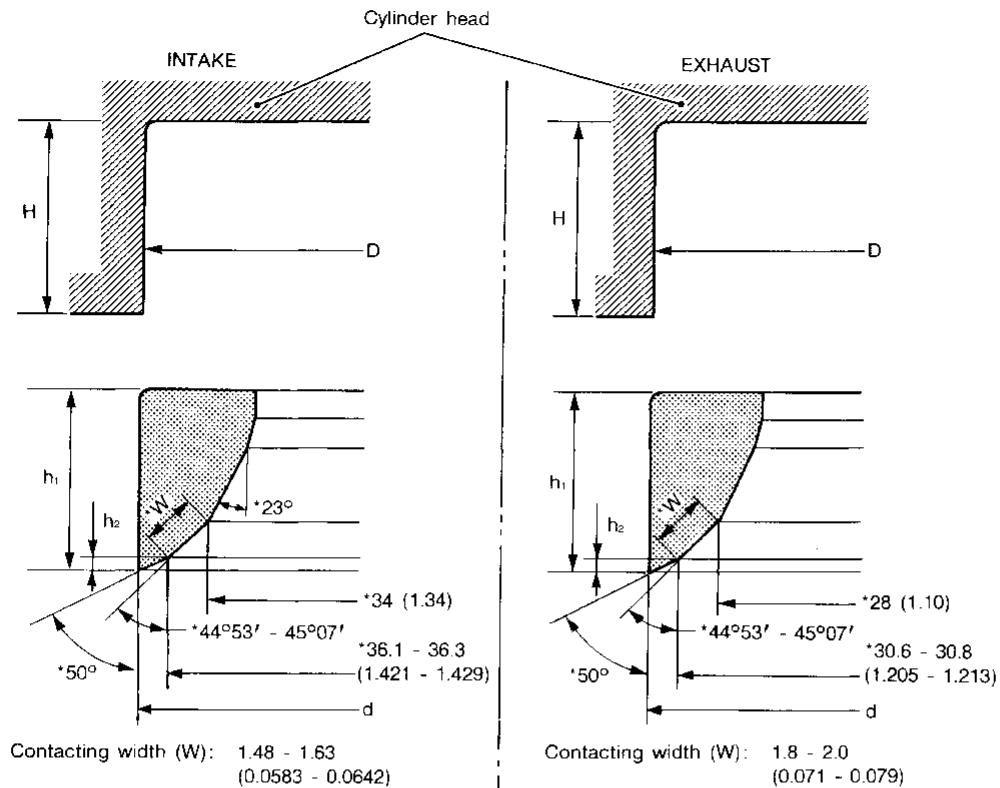

\*: Machining data

SEM952E

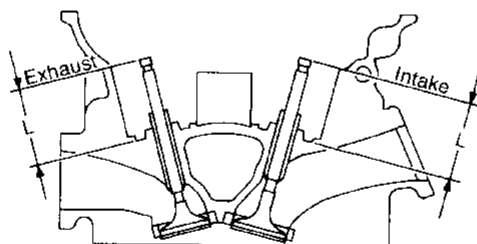


SEM621F

|  |     | Standard                          | Service                           |
|--|-----|-----------------------------------|-----------------------------------|
| Cylinder head seat recess diameter (D) | In. | 37.500 - 37.516 (1.4764 - 1.4770) | 38.000 - 38.016 (1.4961 - 1.4967) |
|  | Ex. | 32.200 - 32.216 (1.2677 - 1.2683) | 32.700 - 32.716 (1.2874 - 1.2880) |
| Valve seat interference fit            | In. | 0.064 - 0.096 (0.0025 - 0.0038)   |                                   |
|  | Ex. | 0.064 - 0.096 (0.0025 - 0.0038)   |                                   |
| Valve seat outer diameter (d)          | In. | 37.580 - 37.596 (1.4795 - 1.4802) | 38.080 - 38.096 (1.4992 - 1.4998) |
|  | Ex. | 32.280 - 32.296 (1.2709 - 1.2715) | 32.780 - 32.796 (1.2905 - 1.2912) |
| Depth (H)                              | In. | 6.1 - 6.3 (0.240 - 0.248)         |                                   |
|  | Ex. | 6.1 - 6.3 (0.240 - 0.248)         |                                   |
| Height ( $h_1$ )                       | In. | 5.8 - 6.0 (0.228 - 0.236)         | 5.3 - 5.5 (0.209 - 0.217)         |
|  | Ex. | 5.9 - 6.0 (0.232 - 0.236)         | 5.32 - 5.42 (0.209 - 0.213)       |
| Height ( $h_2$ )                       | In. | 0.24 - 0.64 (0.0094 - 0.0252)     |                                   |
|  | Ex. | 0.34 - 0.64 (0.0134 - 0.0252)     |                                   |
| Depth (L)                              | In. | 42.02 - 42.52                     |                                   |
|  | Ex. | 42.03 - 42.53                     |                                   |

# SERVICE DATA AND SPECIFICATIONS (SDS)

## Inspection and Adjustment (Cont'd)

### CYLINDER BLOCK

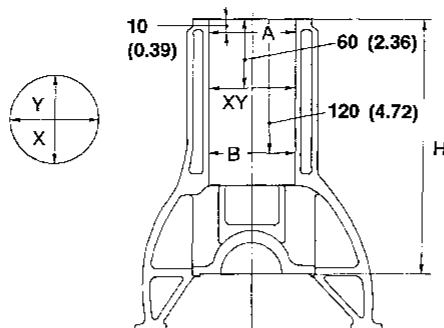

SEM400E

Unit: mm (in)

|   |                      |                          | Standard                          | Limit         |
|---|----------------------|--------------------------|-----------------------------------|---------------|
| Distortion  |                      |                          | —                                 | 0.1 (0.004)   |
| Cylinder bore                                     | Inner diameter       | Grade 1                  | 89.000 - 89.010 (3.5039 - 3.5043) | 0.2 (0.008)*  |
|   |                      | Grade 2                  | 89.010 - 89.020 (3.5043 - 3.5047) |               |
|   |                      | Grade 3                  | 89.020 - 89.030 (3.5047 - 3.5051) |               |
|   | Out-of-round (X - Y) |                          | Less than 0.015 (0.0006)          | —             |
| Taper (A - B)                                     |                      | Less than 0.010 (0.0004) | —                                 |               |
| Difference in inner diameter between cylinders    |                      |                          | Less than 0.03 (0.0012)           | 0.2 (0.008)   |
| Piston-to-cylinder clearance                      |                      |                          | 0.020 - 0.040 (0.0008 - 0.0016)   | —             |
| Cylinder block height<br>(From crankshaft center) |                      |                          | 246.95 - 247.05 (9.7224 - 9.7264) | 0.2 (0.008)** |

\* Wear limit

\*\* Total amount of cylinder head resurfacing and cylinder block resurfacing

GI

MA

EM

LC

EC

FE

GL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX


# SERVICE DATA AND SPECIFICATIONS (SDS)

## Inspection and Adjustment (Cont'd)

### CAMSHAFT AND CAMSHAFT BEARING

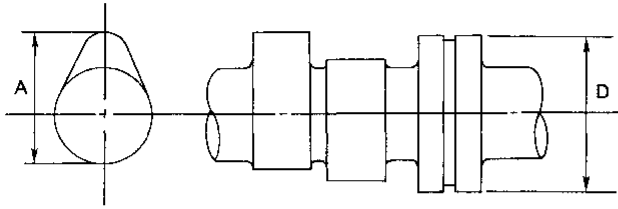

SEM568A

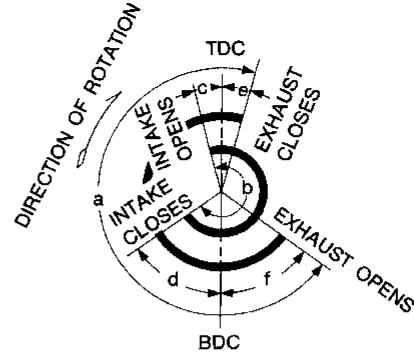

EM120

Unit: mm (in)

|  |                   | Standard                          | Limit         |
|--|-------------------|-----------------------------------|---------------|
| Cam height (A)                         | Intake            | 42.505 - 42.695 (1.673 - 1.681)   | —             |
|  | Exhaust           | 40.905 - 41.095 (1.610 - 1.618)   | —             |
| Wear limit of cam height               |                   | —                                 | 0.2 (0.008)   |
| Camshaft journal to bearing clearance  |                   | 0.045 - 0.090 (0.0018 - 0.0035)   | 0.12 (0.0047) |
| Inner diameter of camshaft bearing     | #1 to #5 journals | 28.000 - 28.025 (1.1024 - 1.1033) | —             |
| Outer diameter of camshaft journal (D) | #1 to #5 journals | 27.935 - 27.955 (1.0998 - 1.1006) | —             |
| Camshaft runout*                       |                   | Less than 0.02 (0.0008)           | 0.04 (0.0016) |
| Camshaft end play                      |                   | 0.070 - 0.148 (0.0028 - 0.0058)   | 0.2 (0.008)   |
| Valve timing (Degree on crankshaft)    | a                 | 216                               | —             |
|  | b                 | 232                               | —             |
|  | c                 | -1                                | —             |
|  | d                 | 53                                | —             |
|  | e                 | 4                                 | —             |
|  | f                 | 32                                | —             |

\* Total indicator reading




# SERVICE DATA AND SPECIFICATIONS (SDS)

## Inspection and Adjustment (Cont'd)

### PISTON, PISTON RING AND PISTON PIN

#### Piston

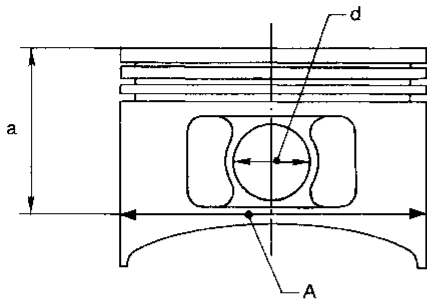

SEM804E

Unit: mm (in)

| Piston skirt diameter (A)         | Standard                          |                                      |
|-----------------------------------|-----------------------------------|--------------------------------------|
|                                   | Grade No. 1                       | 88.970 - 88.980<br>(3.5027 - 3.5031) |
| Service (Oversize)                | Grade No. 2                       | 88.980 - 88.990<br>(3.5031 - 3.5035) |
|                                   | Grade No. 3                       | 88.990 - 89.000<br>(3.5035 - 3.5039) |
| Dimension (a)                     | 0.5<br>(0.020)                    | 89.470 - 89.500<br>(3.5224 - 3.5236) |
|                                   | 1.0<br>(0.039)                    | 89.970 - 90.000<br>(3.5421 - 3.5433) |
| Piston pin hole diameter (d)      | Approximately 48 (1.89)           |                                      |
| Piston-to-cylinder bore clearance | 20.993 - 21.005 (0.8265 - 0.8270) |                                      |
|                                   | 0.020 - 0.040 (0.0008 - 0.0016)   |                                      |

#### Piston pin

Unit: mm (in)


|   | Standard                              | Limit             |
|---|---------------------------------------|-------------------|
| Piston pin outer diameter                         | 20.989 - 21.001<br>(0.8263 - 0.8268)  | —                 |
| Interference fit of piston pin to piston pin hole | -0.002 to 0.01<br>(-0.0001 to 0.0004) | —                 |
| Piston pin to connecting rod bearing clearance    | 0.001 - 0.013<br>(0 - 0.0005)         | 0.023<br>(0.0009) |

#### Piston ring

Unit: mm (in)

|                |                 | Standard                           | Limit       |
|----------------|-----------------|------------------------------------|-------------|
| Side clearance | Top             | 0.040 - 0.080<br>(0.0016 - 0.0031) | 0.1 (0.004) |
|                | 2nd             | 0.030 - 0.070<br>(0.0012 - 0.0028) | 0.1 (0.004) |
| Ring gap       | Top             | 0.28 - 0.52<br>(0.0110 - 0.0205)   | 1.0 (0.039) |
|                | 2nd             | 0.45 - 0.69<br>(0.0177 - 0.0272)   | 1.0 (0.039) |
|                | Oil (rail ring) | 0.20 - 0.69<br>(0.0079 - 0.0272)   | 1.0 (0.039) |

#### CONNECTING ROD

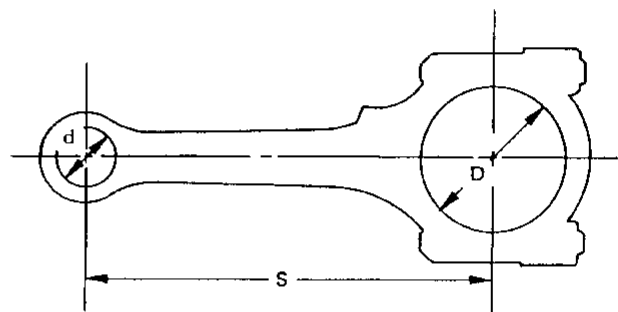

SEM570A

Unit: mm (in)


|  | Standard                             | Limit         |
|--|--------------------------------------|---------------|
| Center distance (S)                          | 164.95 - 165.05<br>(6.4941 - 6.4980) | —             |
| Bend [per 100 mm (3.94 in)]                  | —                                    | 0.15 (0.0059) |
| Torsion [per 100 mm (3.94 in)]               | —                                    | 0.30 (0.0118) |
| Connecting rod small end inner diameter (d)* | 23.970 - 24.000<br>(0.9437 - 0.9449) | —             |
| Piston pin bushing inner diameter            | 21.000 - 21.012<br>(0.8268 - 0.8272) | —             |
| Connecting rod big end inner diameter (D)*   | 53.000 - 53.013<br>(2.0866 - 2.0871) | —             |
| Side clearance                               | 0.2 - 0.4<br>(0.008 - 0.016)         | 0.6 (0.024)   |

\* Without bearing


# SERVICE DATA AND SPECIFICATIONS (SDS)

## Inspection and Adjustment (Cont'd)

### CRANKSHAFT

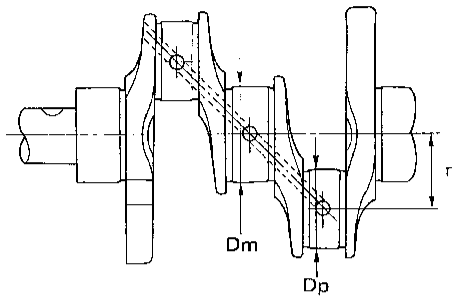

Out-of-round  $\textcircled{X} - \textcircled{Y}$   
Taper  $\textcircled{A} - \textcircled{B}$

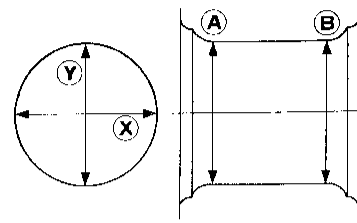

SEM394

EM715

Unit: mm (in)

|   |         |                                 |                                   |             |
|---|---------|---------------------------------|-----------------------------------|-------------|
| Main journal diameter (Dm)  | Grade   | No. 0                           | 59.967 - 59.975 (2.3609 - 2.3612) |             |
|   |         | No. 1                           | 59.959 - 59.967 (2.3606 - 2.3609) |             |
|   |         | No. 2                           | 59.951 - 59.959 (2.3603 - 2.3606) |             |
| Pin journal diameter (Dp)   | Grade   | No. 0                           | 49.968 - 49.974 (1.9672 - 1.9675) |             |
|   |         | No. 1                           | 49.962 - 49.968 (1.9670 - 1.9672) |             |
|   |         | No. 2                           | 49.956 - 49.962 (1.9668 - 1.9670) |             |
| Center distance (r)   |         | 47.95 - 48.05 (1.8878 - 1.8917) |                                   |             |
| Taper of journal and pin [ $\textcircled{A} - \textcircled{B}$ ]        | Journal | Standard                        | —                                 | Limit       |
|   | Pin     | Standard                        | —                                 | Limit       |
| Out-of-round of journal and pin [ $\textcircled{X} - \textcircled{Y}$ ] | Journal | Standard                        | —                                 | Limit       |
|   | Pin     | Standard                        | —                                 | Limit       |
| Runout [TIR]*   |         | Standard                        | —                                 | Limit       |
| Free end play   |         | 0.05 - 0.18 (0.0020 - 0.0071)   |                                   | 0.3 (0.012) |
| Fillet roil   |         | More than 0.1 (0.004)           |                                   |             |

\* Total indicator reading

### BEARING CLEARANCE

Unit: mm (in)

|                                  | Standard                           | Limit         |
|----------------------------------|------------------------------------|---------------|
| Main bearing clearance           | 0.020 - 0.047<br>(0.0008 - 0.0019) | 0.1 (0.004)   |
| Connecting rod bearing clearance | 0.010 - 0.035<br>(0.0004 - 0.0014) | 0.09 (0.0035) |

# SERVICE DATA AND SPECIFICATIONS (SDS)

## Inspection and Adjustment (Cont'd)

### AVAILABLE MAIN BEARING

#### Standard

| Grade number | Thickness mm (in)                  | Identification color |
|--------------|------------------------------------|----------------------|
| 0            | 1.821 - 1.825<br>(0.0717 - 0.0719) | Black                |
| 1            | 1.825 - 1.829<br>(0.0719 - 0.0720) | Brown                |
| 2            | 1.829 - 1.833<br>(0.0720 - 0.0722) | Green                |
| 3            | 1.833 - 1.837<br>(0.0722 - 0.0723) | Yellow               |
| 4            | 1.837 - 1.841<br>(0.0723 - 0.0725) | Blue                 |

#### Undersize (service)

Unit: mm (in)

|                  | Thickness                          | Main journal diameter "Dm"                              |
|------------------|------------------------------------|---|
| 0.25<br>(0.0098) | 1.952 - 1.960<br>(0.0769 - 0.0772) | Grind so that bearing clearance is the specified value. |

### AVAILABLE CONNECTING ROD BEARING

#### Standard

| Grade number | Thickness mm (in)                  | Identification color |
|--------------|------------------------------------|----------------------|
| 0            | 1.505 - 1.508<br>(0.0593 - 0.0594) | —                    |
| 1            | 1.508 - 1.511<br>(0.0594 - 0.0595) | Brown                |
| 2            | 1.511 - 1.514<br>(0.0595 - 0.0596) | Green                |

#### Undersize (service)

Unit: mm (in)

|               | Thickness                          | Crank pin journal diameter "Dp"                         |
|---------------|------------------------------------|---|
| 0.08 (0.0031) | 1.540 - 1.548<br>(0.0606 - 0.0609) | Grind so that bearing clearance is the specified value. |
| 0.12 (0.0047) | 1.560 - 1.568<br>(0.0614 - 0.0617) |   |
| 0.25 (0.0098) | 1.625 - 1.633<br>(0.0640 - 0.0643) |   |

### MISCELLANEOUS COMPONENTS

Unit: mm (in)

|                          |        |                         |
|--------------------------|--------|-------------------------|
| Camshaft sprocket runout | [TIR]* | Less than 0.15 (0.0059) |
| Flywheel runout          | [TIR]* | Less than 0.15 (0.006)  |
| Drive plate runout       | [TIR]* | Less than 0.15 (0.006)  |

\* Total indicator reading

GI

MA

**EM**

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX