

ENGINE CONTROL SYSTEM

SECTION EC

GI
MA
EM
LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

CONTENTS

	KA24DE	
TROUBLE DIAGNOSIS - INDEX	13	
Alphabetical & P No. Index for DTC	13	
PRECAUTIONS	17	
Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	17	
Precautions for On Board Diagnostic (OBD)		
System of Engine and A/T	17	
Engine Fuel & Emission Control System	18	
Precautions	19	
Wiring Diagrams and Trouble Diagnosis	20	
PREPARATION	21	
Special Service Tools	21	
Commercial Service Tools	21	
ENGINE AND EMISSION CONTROL OVERALL SYSTEM	23	
Engine Control Component Parts Location	23	
Circuit Diagram	25	
System Diagram	26	
Vacuum Hose Drawing	27	
System Chart	28	
ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION	29	
Multiport Fuel Injection (MFI) System	29	
Distributor Ignition (DI) System	31	
Air Conditioning Cut Control	33	
Fuel Cut Control (at no load & high engine speed)	33	
Evaporative Emission System	34	
Positive Crankcase Ventilation	39	
BASIC SERVICE PROCEDURE	40	
Fuel Pressure Release	40	
Fuel Pressure Check	40	
Fuel Pressure Regulator Check	41	
Injector	41	
Fast Idle Cam (FIC)	41	
Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment	42	

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION	56	
Introduction	56	
Two Trip Detection Logic	56	
Emission-related Diagnostic Information	57	
Malfunction Indicator Lamp (MIL)	70	
OBD System Operation Chart	74	
CONSULT-II	79	
Generic Scan Tool (GST)	90	
TROUBLE DIAGNOSIS - INTRODUCTION	92	
Introduction	92	
Work Flow	94	
TROUBLE DIAGNOSIS - BASIC INSPECTION	96	
Basic Inspection	96	
TROUBLE DIAGNOSIS - GENERAL DESCRIPTION	110	
DTC Inspection Priority Chart	110	
Fail-safe Chart	111	
Symptom Matrix Chart	112	
CONSULT-II Reference Value in Data Monitor Mode	116	
Major Sensor Reference Graph in Data Monitor Mode	118	
ECM Terminals and Reference Value	121	
TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT	129	
Description	129	
Diagnostic Procedure	129	
TROUBLE DIAGNOSIS FOR POWER SUPPLY	130	
Main Power Supply and Ground Circuit	130	
DTC P0100 MASS AIR FLOW SENSOR (MAFS)	137	
Component Description	137	
CONSULT-II Reference Value in Data Monitor Mode	137	
ECM Terminals and Reference Value	137	
On Board Diagnosis Logic	138	
DTC Confirmation Procedure	138	
Overall Function Check	140	
Wiring Diagram	141	

CONTENTS (Cont'd)

Diagnostic Procedure	142	DTC P0131 FRONT HEATED OXYGEN SENSOR	
DTC P0105 ABSOLUTE PRESSURE SENSOR	147	(FRONT HO2S) (LEAN SHIFT MONITORING)	199
Component Description	147	Component Description	199
On Board Diagnosis Logic.....	147	CONSULT-II Reference Value in Data Monitor	
DTC Confirmation Procedure	148	Mode	199
Overall Function Check	149	ECM Terminals and Reference Value	199
Wiring Diagram	150	On Board Diagnosis Logic.....	200
Diagnostic Procedure	151	DTC Confirmation Procedure	200
DTC P0110 INTAKE AIR TEMPERATURE		Overall Function Check	201
SENSOR	162	Diagnostic Procedure	201
Component Description	162	DTC P0132 FRONT HEATED OXYGEN SENSOR	
On Board Diagnosis Logic.....	162	(FRONT HO2S) (RICH SHIFT MONITORING)	206
DTC Confirmation Procedure	163	Component Description	206
Wiring Diagram	164	CONSULT-II Reference Value in Data Monitor	
Diagnostic Procedure	165	Mode	206
DTC P0115 ENGINE COOLANT TEMPERATURE		ECM Terminals and Reference Value	206
SENSOR (ECTS) (CIRCUIT)	168	On Board Diagnosis Logic.....	207
Component Description	168	DTC Confirmation Procedure	207
CONSULT-II Reference Value in Data Monitor		Overall Function Check	208
Mode	168	Diagnostic Procedure	208
On Board Diagnosis Logic.....	168	DTC P0133 FRONT HEATED OXYGEN SENSOR	
DTC Confirmation Procedure	169	(FRONT HO2S) (RESPONSE MONITORING)	213
Wiring Diagram	170	Component Description	213
Diagnostic Procedure	171	CONSULT-II Reference Value in Data Monitor	
DTC P0120 THROTTLE POSITION SENSOR	173	Mode	213
Component Description	173	ECM Terminals and Reference Value	213
CONSULT-II Reference Value in Data Monitor		On Board Diagnosis Logic.....	214
Mode	173	DTC Confirmation Procedure	214
ECM Terminals and Reference Value	174	Overall Function Check	215
On Board Diagnosis Logic.....	174	Wiring Diagram	216
DTC Confirmation Procedure	175	Diagnostic Procedure	217
Wiring Diagram	178	DTC P0134 FRONT HEATED OXYGEN SENSOR	
Diagnostic Procedure	179	(FRONT HO2S) (HIGH VOLTAGE)	224
DTC P0125 ENGINE COOLANT TEMPERATURE		Component Description	224
(ECT) SENSOR	187	CONSULT-II Reference Value in Data Monitor	
Component Description	187	Mode	224
On Board Diagnosis Logic.....	187	ECM Terminals and Reference Value	224
DTC Confirmation Procedure	187	On Board Diagnosis Logic.....	225
Wiring Diagram	188	DTC Confirmation Procedure	225
Diagnostic Procedure	189	Wiring Diagram	226
DTC P0130 FRONT HEATED OXYGEN SENSOR		Diagnostic Procedure	227
(FRONT HO2S) (CIRCUIT)	191	DTC P0135 FRONT HEATED OXYGEN SENSOR	
Component Description	191	HEATER	231
CONSULT-II Reference Value in Data Monitor		Description	231
Mode	191	CONSULT-II Reference Value in Data Monitor	
ECM Terminals and Reference Value	191	Mode	231
On Board Diagnosis Logic.....	192	ECM Terminals and Reference Value	231
DTC Confirmation Procedure	193	On Board Diagnosis Logic.....	231
Overall Function Check	194	DTC Confirmation Procedure	232
Wiring Diagram	195	Wiring Diagram	233
Diagnostic Procedure	196	Diagnostic Procedure	234

CONTENTS (Cont'd)

DTC P0137 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MIN. VOLTAGE MONITORING)	236	
Component Description	236	
CONSULT-II Reference Value in Data Monitor Mode	236	
ECM Terminals and Reference Value	236	
On Board Diagnosis Logic.....	236	
DTC Confirmation Procedure	237	
Overall Function Check	238	
Wiring Diagram	239	
Diagnostic Procedure	240	
DTC P0138 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MAX. VOLTAGE MONITORING)	246	
Component Description	246	
CONSULT-II Reference Value in Data Monitor Mode	246	
ECM Terminals and Reference Value	246	
On Board Diagnosis Logic.....	246	
DTC Confirmation Procedure	247	
Overall Function Check	248	
Wiring Diagram	249	
Diagnostic Procedure	250	
DTC P0139 REAR HEATED OXYGEN SENSOR (REAR HO2S) (RESPONSE MONITORING)	256	
Component Description	256	
CONSULT-II Reference Value in Data Monitor Mode	256	
ECM Terminals and Reference Value	256	
On Board Diagnosis Logic.....	256	
DTC Confirmation Procedure	257	
Overall Function Check	258	
Wiring Diagram	259	
Diagnostic Procedure	260	
DTC P0140 REAR HEATED OXYGEN SENSOR (REAR HO2S) (HIGH VOLTAGE)	266	
Component Description	266	
CONSULT-II Reference Value in Data Monitor Mode	266	
ECM Terminals and Reference Value	266	
On Board Diagnosis Logic.....	266	
DTC Confirmation Procedure	267	
Overall Function Check	267	
Wiring Diagram	268	
Diagnostic Procedure	269	
DTC P0141 REAR HEATED OXYGEN SENSOR HEATER	274	
Description	274	
CONSULT-II Reference Value in Data Monitor Mode	274	
ECM Terminals and Reference Value	274	
On Board Diagnosis Logic.....	274	
DTC Confirmation Procedure	275	
Wiring Diagram	276	GI
Diagnostic Procedure	277	
DTC P0171 FUEL INJECTION SYSTEM FUNCTION (LEAN SIDE)	279	MA
On Board Diagnosis Logic.....	279	
DTC Confirmation Procedure	279	EM
Wiring Diagram	281	
Diagnostic Procedure	282	
DTC P0172 FUEL INJECTION SYSTEM FUNCTION (RICH SIDE)	287	LC
On Board Diagnosis Logic.....	287	
DTC Confirmation Procedure	287	EC
Wiring Diagram	289	
Diagnostic Procedure	290	
DTC P0180 FUEL TANK TEMPERATURE SENSOR	294	FE
Component Description	294	CL
On Board Diagnosis Logic.....	294	
DTC Confirmation Procedure	295	
Wiring Diagram	296	MT
Diagnostic Procedure	297	
DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE SYLINDER MISFIRE	300	AT
On Board Diagnosis Logic.....	300	
DTC Confirmation Procedure	300	TF
Diagnostic Procedure	301	
DTC P0325 KNOCK SENSOR (KS)	309	PD
Component Description	309	
ECM Terminals and Reference Value	309	
On Board Diagnosis Logic.....	309	AX
DTC Confirmation Procedure	309	
Wiring Diagram	310	
Diagnostic Procedure	311	SU
DTC P0335 CRANKSHAFT POSITION SENSOR (CKPS) (OBD)	313	BR
Component Description	313	
ECM Terminals and Reference Value	313	
On Board Diagnosis Logic.....	313	ST
DTC Confirmation Procedure	314	
Wiring Diagram	315	
Diagnostic Procedure	316	RS
DTC P0340 CAMSHAFT POSITION SENSOR (CMPS)	319	BT
Component Description	319	
ECM Terminals and Reference Value	319	
On Board Diagnosis Logic.....	320	HA
DTC Confirmation Procedure	321	
Wiring Diagram	322	
Diagnostic Procedure	323	SC
DTC P0400 EGR FUNCTION (CLOSE)	327	EL
Description	327	
On Board Diagnosis Logic.....	328	

CONTENTS (Cont'd)

DTC Confirmation Procedure	329	On Board Diagnosis Logic.....	398
Overall Function Check	330	DTC Confirmation Procedure	399
Wiring Diagram	331	Diagnostic Procedure	400
Diagnostic Procedure	332	DTC P0500 VEHICLE SPEED SENSOR (VSS)	412
DTC P0402 EGRC-BPT VALVE FUNCTION	339	Component Description	412
Description	339	ECM Terminals and Reference Value	412
On Board Diagnosis Logic.....	339	On Board Diagnosis Logic.....	412
DTC Confirmation Procedure	340	DTC Confirmation Procedure	412
Overall Function Check	341	Overall Function Check	413
Diagnostic Procedure	342	Wiring Diagram	414
DTC P0420 THREE WAY CATALYST FUNCTION	347	Diagnostic Procedure	415
On Board Diagnosis Logic.....	347	DTC P0505 IDLE AIR CONTROL VALVE (IACV) -	
DTC Confirmation Procedure	347	AUXILIARY AIR CONTROL (AAC) VALVE	416
Overall Function Check	348	Description	416
Diagnostic Procedure	349	CONSULT-II Reference Value in Data Monitor	
DTC P0440 EVAP CONTROL SYSTEM (SMALL		Mode	417
LEAK) (NEGATIVE PRESSURE)	352	ECM Terminals and Reference Value	417
On Board Diagnosis Logic.....	352	On Board Diagnosis Logic.....	417
DTC Confirmation Procedure	353	DTC Confirmation Procedure	418
Diagnostic Procedure	355	Wiring Diagram	419
DTC P0443 EVAP CANISTER PURGE VOLUME		Diagnostic Procedure	420
CONTROL SOLENOID VALVE (CIRCUIT)	367	DTC P0510 CLOSED THROTTLE POSITION	
Description	367	SWITCH	422
CONSULT-II Reference Value in Data Monitor		Component Description	422
Mode	367	ECM Terminals and Reference Value	422
ECM Terminals and Reference Value	368	On Board Diagnosis Logic.....	422
On Board Diagnosis Logic.....	368	DTC Confirmation Procedure	423
DTC Confirmation Procedure	369	Overall Function Check	423
Wiring Diagram	370	Wiring Diagram	424
Diagnostic Procedure	371	Diagnostic Procedure	425
DTC P0446 EVAPORATIVE EMISSION (EVAP)		DTC P0605 ECM	429
CANISTER VENT CONTROL VALVE (CIRCUIT)	375	Component Description	429
Component Description	375	On Board Diagnosis Logic.....	429
CONSULT-II Reference Value in Data Monitor		DTC Confirmation Procedure	429
Mode	375	Diagnostic Procedure	430
ECM Terminals and Reference Value	375	DTC P1105 MAP/BARO SWITCH SOLENOID	
On Board Diagnosis Logic.....	375	VALVE	431
DTC Confirmation Procedure	376	Description	431
Wiring Diagram	377	CONSULT-II Reference Value in Data Monitor	
Diagnostic Procedure	378	Mode	431
DTC P0450 EVAPORATIVE EMISSION (EVAP)		ECM Terminals and Reference Value	432
CONTROL SYSTEM PRESSURE SENSOR	383	On Board Diagnosis Logic.....	432
Component Description	383	DTC Confirmation Procedure	432
CONSULT-II Reference Value in Data Monitor		Wiring Diagram	434
Mode	383	Diagnostic Procedure	435
ECM Terminals and Reference Value	383	DTC P1148 CLOSED LOOP CONTROL	447
On Board Diagnosis Logic.....	384	On Board Diagnosis Logic.....	447
DTC Confirmation Procedure	385	DTC Confirmation Procedure	447
Wiring Diagram	386	Overall Function Check	448
Diagnostic Procedure	387	Diagnostic Procedure	448
DTC P0455 EVAP CONTROL SYSTEM (GROSS		DTC P1320 IGNITION SIGNAL	449
LEAK)	398	Component Description	449

CONTENTS (Cont'd)

CONSULT-II Reference Value in Data Monitor Mode	449	
ECM Terminals and Reference Value	449	
On Board Diagnosis Logic.....	450	
DTC Confirmation Procedure	450	
Wiring Diagram	451	
Diagnostic Procedure	452	
DTC P1336 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) (COG)	457	
Component Description	457	
ECM Terminals and Reference Value	457	
On Board Diagnosis Logic.....	457	
DTC Confirmation Procedure	458	
Wiring Diagram	459	
Diagnostic Procedure	460	
DTC P1400 EGRC-SOLENOID VALVE	463	
Component Description	463	
CONSULT-II Reference Value in Data Monitor Mode	463	
ECM Terminals and Reference Value	463	
On Board Diagnosis Logic.....	463	
DTC Confirmation Procedure	464	
Overall Function Check	464	
Wiring Diagram	465	
Diagnostic Procedure	466	
DTC P1401 EGR TEMPERATURE SENSOR	470	
Component Description	470	
On Board Diagnosis Logic.....	470	
DTC Confirmation Procedure	471	
Overall Function Check	472	
Wiring Diagram	473	
Diagnostic Procedure	474	
DTC P1402 EGR FUNCTION (OPEN)	476	
Description	476	
On Board Diagnosis Logic.....	477	
DTC Confirmation Procedure	477	
Wiring Diagram	479	
Diagnostic Procedure	480	
DTC P1440 EVAP CONTROL SYSTEM (SMALL LEAK) (POSITIVE PRESSURE)	485	
On Board Diagnosis Logic.....	485	
DTC Confirmation Procedure	486	
Diagnostic Procedure	486	
DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	487	
Description	487	
CONSULT-II Reference Value in Data Monitor Mode	487	
ECM Terminals and Reference Value	488	
On Board Diagnosis Logic.....	488	
DTC Confirmation Procedure	489	
Wiring Diagram	490	
Diagnostic Procedure	491	GI
DTC P1446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CLOSE)	499	
Component Description	499	MA
CONSULT-II Reference Value in Data Monitor Mode	499	EM
ECM Terminals and Reference Value	499	
On Board Diagnosis Logic.....	499	
DTC Confirmation Procedure	500	LC
Diagnostic Procedure	501	
DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING	505	EC
System Description.....	505	
On Board Diagnosis Logic.....	505	FE
DTC Confirmation Procedure	506	
Overall Function Check	507	CL
Diagnostic Procedure	507	
DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)	515	MT
Component Description	515	
CONSULT-II Reference Value in Data Monitor Mode	515	AT
ECM Terminals and Reference Value	515	
On Board Diagnosis Logic.....	515	TF
DTC Confirmation Procedure	516	
Overall Function Check	517	
Diagnostic Procedure	518	PD
DTC P1490 VACUUM CUT VALVE BYPASS VALVE (CIRCUIT)	523	AX
Description	523	
CONSULT-II Reference Value in Data Monitor Mode	523	SU
ECM Terminals and Reference Value	523	
On Board Diagnosis Logic.....	524	
DTC Confirmation Procedure	524	BR
Wiring Diagram	525	
Diagnostic Procedure	526	
DTC P1491 VACUUM CUT VALVE BYPASS VALVE	530	ST
Description	530	
CONSULT-II Reference Value in Data Monitor Mode	530	RS
ECM Terminals and Reference Value	530	
On Board Diagnosis Logic.....	531	BT
DTC Confirmation Procedure	531	
Overall Function Check	532	HA
Wiring Diagram	533	
Diagnostic Procedure	534	
DTC P1706 PARK/NEUTRAL POSITION (PNP) SWITCH	541	SC
Component Description	541	EL

CONTENTS (Cont'd)

CONSULT-II Reference Value in Data Monitor Mode.....	541
ECM Terminals and Reference Value	541
On Board Diagnosis Logic.....	541
DTC Confirmation Procedure	542
Overall Function Check	543
Wiring Diagram	544
Diagnostic Procedure	545
DTC P1775 TORQUE CONVERTER CLUTCH SOLENOID VALVE (CIRCUIT)	547
System Description.....	547
CONSULT-II Reference Value in Data Monitor Mode.....	547
ECM Terminals and Reference Value	547
On Board Diagnosis Logic.....	548
DTC Confirmation Procedure	548
Wiring Diagram	549
Diagnostic Procedure	550
DTC P1776 TORQUE CONVERTER CLUTCH SOLENOID VALVE	553
System Description.....	553
CONSULT-II Reference Value in Data Monitor Mode.....	553
ECM Terminals and Reference Value	554
On Board Diagnosis Logic.....	554
DTC Confirmation Procedure	554
Diagnostic Procedure	555
TROUBLE DIAGNOSIS FOR OVERHEAT	557
On Board Diagnosis Logic.....	557
Overall Function Check	557
Diagnostic Procedure	558
Main 11 Causes of Overheating.....	561
INJECTOR	562
Component Description	562
ECM Terminals and Reference Value	562
Wiring Diagram	563
Diagnostic Procedure	564
START SIGNAL	567
CONSULT-II Reference Value in Data Monitor Mode.....	567
ECM Terminals and Reference Value	567
Wiring Diagram	568
Diagnostic Procedure	569
FUEL PUMP	571
System Description.....	571
Component Description	571
CONSULT-II Reference Value in Data Monitor Mode.....	571
ECM Terminals and Reference Value	571
Wiring Diagram	572
Diagnostic Procedure	573
POWER STEERING OIL PRESSURE SWITCH	578
Component Description	578
CONSULT-II Reference Value in Data Monitor Mode.....	578
ECM Terminals and Reference Value	578
Wiring Diagram	579
Diagnostic Procedure	580
IACV-FICD SOLENOID VALVE	582
Component Description	582
ECM Terminals and Reference Value	582
Wiring Diagram	583
Diagnostic Procedure	584
MIL & DATA LINK CONNECTORS	588
Wiring Diagram	588
SERVICE DATA AND SPECIFICATIONS (SDS)	589
Fuel Pressure Regulator.....	589
Idle Speed and Ignition Timing.....	589
Ignition Coil.....	589
Mass Air Flow Sensor.....	589
Engine Coolant Temperature Sensor	589
EGR Temperature Sensor	589
Fuel Pump	589
IACV-AAC Valve	590
Injector	590
Resistor.....	590
Throttle Position Sensor	590
Front Heated Oxygen Sensor Heater.....	590
Calculated Load Value.....	590
Intake Air Temperature Sensor.....	590
Rear Heated Oxygen Sensor Heater	590
Crankshaft Position Sensor (OBD).....	590
Fuel Tank Temperature Sensor	590
<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="border: 1px solid black; width: 150px; height: 15px;"></div> <div style="font-weight: bold;">VG33E</div> <div style="border: 1px solid black; width: 150px; height: 15px;"></div> </div>	
TROUBLE DIAGNOSIS - INDEX	591
Alphabetical & P No. Index for DTC	591
PRECAUTIONS	597
Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER".....	597
Precautions for On Board Diagnostic (OBD) System of Engine and A/T.....	597
Engine Fuel & Emission Control System	598
Precautions	599
Wiring Diagrams and Trouble Diagnosis.....	600
PREPARATION	601
Special Service Tools	601
Commercial Service Tools.....	601
ENGINE AND EMISSION CONTROL OVERALL SYSTEM	603
Engine Control Component Parts Location.....	603
Circuit Diagram.....	605
System Diagram	606
Vacuum Hose Drawing	607

CONTENTS (Cont'd)

System Chart.....	608	
ENGINE AND EMISSION BASIC CONTROL		
SYSTEM DESCRIPTION	609	
Multiport Fuel Injection (MFI) System	609	
Distributor Ignition (DI) System	611	
Air Conditioning Cut Control.....	612	
Fuel Cut Control (at no load & high engine speed).....	613	
Evaporative Emission System.....	613	
Positive Crankcase Ventilation	619	
BASIC SERVICE PROCEDURE	620	
Fuel Pressure Release.....	620	
Fuel Pressure Check.....	620	
Fuel Pressure Regulator Check	621	
Injector	621	
Fast Idle Cam (FIC).....	622	
Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment	624	
ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION	637	
Introduction	637	
Two Trip Detection Logic.....	637	
Emission-related Diagnostic Information.....	638	
Malfunction Indicator Lamp (MIL).....	653	
OBD System Operation Chart.....	657	
CONSULT-II	662	
Generic Scan Tool (GST)	674	
TROUBLE DIAGNOSIS - INTRODUCTION	676	
Introduction	676	
Work Flow.....	678	
TROUBLE DIAGNOSIS - BASIC INSPECTION	680	
Basic Inspection.....	680	
TROUBLE DIAGNOSIS - GENERAL DESCRIPTION	697	
DTC Inspection Priority Chart.....	697	
Fail-safe Chart	698	
Symptom Matrix Chart.....	699	
CONSULT-II Reference Value in Data Monitor Mode.....	703	
Major Sensor Reference Graph in Data Monitor Mode.....	705	
ECM Terminals and Reference Value	708	
TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT	717	
Description	717	
Diagnostic Procedure	717	
TROUBLE DIAGNOSIS FOR POWER SUPPLY	718	
Main Power Supply and Ground Circuit.....	718	
DTC P0100 MASS AIR FLOW SENSOR (MAFS)	724	
Component Description	724	
CONSULT-II Reference Value in Data Monitor Mode	724	
ECM Terminals and Reference Value	724	GI
On Board Diagnosis Logic.....	724	
DTC Confirmation Procedure	725	
Overall Function Check	727	MA
Wiring Diagram.....	728	
Diagnostic Procedure	729	EM
DTC P0105 ABSOLUTE PRESSURE SENSOR	733	
Component Description	733	
On Board Diagnosis Logic.....	733	LC
DTC Confirmation Procedure	734	
Overall Function Check	735	
Wiring Diagram.....	736	EC
Diagnostic Procedure	737	
DTC P0110 INTAKE AIR TEMPERATURE SENSOR	745	FE
Component Description	745	
On Board Diagnosis Logic.....	745	CL
DTC Confirmation Procedure	745	
Wiring Diagram.....	747	
Diagnostic Procedure	748	MT
DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS) (CIRCUIT)	750	AT
Component Description	750	
On Board Diagnosis Logic.....	750	
DTC Confirmation Procedure	751	TF
Wiring Diagram	752	
Diagnostic Procedure	753	
DTC P0120 THROTTLE POSITION SENSOR	755	PD
Description	755	
CONSULT-II Reference Value in Data Monitor Mode.....	755	AX
ECM Terminals and Reference Value	756	
On Board Diagnosis Logic.....	756	SU
DTC Confirmation Procedure	757	
Wiring Diagram	760	
Diagnostic Procedure	761	BR
DTC P0125 ENGINE COOLANT TEMPERATURE SENSOR (ECTS)	769	ST
Description	769	
On Board Diagnosis Logic.....	769	
DTC Confirmation Procedure	770	RS
Wiring Diagram.....	771	
Diagnostic Procedure	772	
DTC P0130 (RIGHT, -B1), P0150 (LEFT, -B2) FRONT HO2S (CIRCUIT)	774	BT
Component Description	774	
CONSULT-II Reference Value in Data Monitor Mode.....	774	HA
ECM Terminals and Reference Value	774	
On Board Diagnosis Logic.....	775	SC
DTC Confirmation Procedure	775	
Overall Function Check	776	EL

CONTENTS (Cont'd)

Wiring Diagram	777	Diagnostic Procedure	823
Diagnostic Procedure	779	DTC P0137 (RIGHT, -B1), P0157 (LEFT, -B2)	
DTC P0131 (RIGHT, -B1), P0151 (LEFT, -B2)		REAR HO2S (MIN. VOLTAGE MONITORING)	825
FRONT HO2S (LEAN SHIFT MONITORING)	782	Component Description	825
Component Description	782	CONSULT-II Reference Value in Data Monitor	
CONSULT-II Reference Value in Data Monitor		Mode	825
Mode	782	ECM Terminals and Reference Value	825
ECM Terminals and Reference Value	782	On Board Diagnosis Logic.....	825
On Board Diagnosis Logic.....	783	DTC Confirmation Procedure	826
DTC Confirmation Procedure	783	Overall Function Check	827
Overall Function Check	784	Wiring Diagram	828
Diagnostic Procedure	785	Diagnostic Procedure	830
DTC P0132 (RIGHT, -B1), P0152 (LEFT, -B2)		DTC P0138 (RIGHT, -B1), P0158 (LEFT, -B2)	
FRONT HO2S (RICH SHIFT MONITORING)	790	REAR HO2S (MAX. VOLTAGE MONITORING)	835
Component Description	790	Component Description	835
CONSULT-II Reference Value in Data Monitor		CONSULT-II Reference Value in Data Monitor	
Mode	790	Mode	835
ECM Terminals and Reference Value	790	ECM Terminals and Reference Value	835
On Board Diagnosis Logic.....	791	On Board Diagnosis Logic.....	835
DTC Confirmation Procedure	791	DTC Confirmation Procedure	836
Overall Function Check	792	Overall Function Check	837
Diagnostic Procedure	793	Wiring Diagram	838
DTC P0133 (RIGHT, -B1), P0153 (LEFT, -B2)		Diagnostic Procedure	840
FRONT HO2S (RESPONSE MONITORING)	798	DTC P0139 (RIGHT, -B1), P0159 (LEFT, -B2)	
Component Description	798	REAR HO2S (RESPONSE MONITORING)	845
CONSULT-II Reference Value in Data Monitor		Component Description	845
Mode	798	CONSULT-II Reference Value in Data Monitor	
ECM Terminals and Reference Value	798	Mode	845
On Board Diagnosis Logic.....	799	ECM Terminals and Reference Value	845
DTC Confirmation Procedure	799	On Board Diagnosis Logic.....	845
Overall Function Check	800	DTC Confirmation Procedure	846
Wiring Diagram	801	Overall Function Check	847
Diagnostic Procedure	803	Wiring Diagram	848
DTC P0134 (RIGHT, -B1), P0154 (LEFT, -B2)		Diagnostic Procedure	850
FRONT HO2S (HIGH VOLTAGE)	811	DTC P0140 (RIGHT, -B1), P0160 (LEFT, -B2)	
Component Description	811	REAR HO2S (HIGH VOLTAGE)	855
CONSULT-II Reference Value in Data Monitor		Component Description	855
Mode	811	CONSULT-II Reference Value in Data Monitor	
ECM Terminals and Reference Value	811	Mode	855
On Board Diagnosis Logic.....	812	ECM Terminals and Reference Value	855
DTC Confirmation Procedure	812	On Board Diagnosis Logic.....	855
Wiring Diagram	813	DTC Confirmation Procedure	856
Diagnostic Procedure	815	Overall Function Check	856
DTC P0135 (RIGHT, -B1), P0155 (LEFT, -B2)		Wiring Diagram	857
FRONT HO2S HEATER	819	Diagnostic Procedure	859
Description	819	DTC P0141 (RIGHT, -B1), P0161 (LEFT, -B2)	
CONSULT-II Reference Value in Data Monitor		REAR HO2S HEATER	863
Mode	819	Description	863
ECM Terminals and Reference Value	819	CONSULT-II Reference Value in Data Monitor	
On Board Diagnosis Logic.....	819	Mode	863
DTC Confirmation Procedure	820	ECM Terminals and Reference Value	863
Wiring Diagram	821	On Board Diagnosis Logic.....	863

CONTENTS (Cont'd)

DTC Confirmation Procedure	864	ECM Terminals and Reference Value	922	GI
Wiring Diagram	865	On Board Diagnosis Logic.....	923	
Diagnostic Procedure	867	DTC Confirmation Procedure	924	MA
DTC P0171 (RIGHT, -B1), P0174 (LEFT, -B2)		Wiring Diagram.....	925	
FUEL INJECTION SYSTEM FUNCTION (LEAN).....	870	Diagnostic Procedure	926	EM
On Board Diagnosis Logic.....	870	DTC P0400 EGR FUNCTION (CLOSE).....	929	
DTC Confirmation Procedure	871	Description (If Equipped with EGR Valve)	929	EM
Wiring Diagram	872	On Board Diagnosis Logic.....	930	
Diagnostic Procedure	874	DTC Confirmation Procedure	931	LC
DTC P0172 (RIGHT, -B1), P0175 (LEFT, -B2)		Overall Function Check	932	
FUEL INJECTION SYSTEM FUNCTION (RICH).....	878	Wiring Diagram.....	933	
On Board Diagnosis Logic.....	878	Diagnostic Procedure	934	EC
DTC Confirmation Procedure	879	DTC P0402 EGRC-BPT VALVE FUNCTION.....	943	
Wiring Diagram	880	Description (If Equipped with EGR Valve)	943	FE
Diagnostic Procedure	882	On Board Diagnosis Logic.....	943	
DTC P0180 FUEL TANK TEMPERATURE		DTC Confirmation Procedure	944	
SENSOR	885	Overall Function Check	945	CL
Component Description	885	Diagnostic Procedure	945	
On Board Diagnosis Logic.....	886	DTC P0420 (RIGHT BANK, -B1), P0430 (LEFT		
DTC Confirmation Procedure	886	BANK, -B2) THREE WAY CATALYST FUNCTION...951		MT
Wiring Diagram	887	On Board Diagnosis Logic.....	951	
Diagnostic Procedure	888	DTC Confirmation Procedure	951	AT
DTC P0217 COOLANT OVERTEMPERATURE		Overall Function Check	953	
ENRICHMENT PROTECTION.....	890	Diagnostic Procedure	953	
On Board Diagnosis Logic.....	890	DTC P0440 EVAP CONTROL SYSTEM (SMALL		TF
Overall Function Check	890	LEAK) (NEGATIVE PRESSURE).....957		
Wiring Diagram	894	On Board Diagnosis Logic.....	957	
Diagnostic Procedure	895	DTC Confirmation Procedure	958	PD
Main 12 Causes of Overheating.....	902	Diagnostic Procedure	959	
DTC P0300 - P0306 NO. 6 - 1 CYLINDER		DTC P0443 EVAP CANISTER PURGE VOLUME		
MISFIRE, MULTIPLE CYLINDER MISFIRE	903	CONTROL SOLENOID VALVE (CIRCUIT).....968		AX
On Board Diagnosis Logic.....	903	Description	968	
DTC Confirmation Procedure	903	CONSULT-II Reference Value in Data Monitor		SU
Diagnostic Procedure	904	Mode	968	
DTC P0325 KNOCK SENSOR (KS).....912		ECM Terminals and Reference Value	969	
Component Description	912	On Board Diagnosis Logic.....	969	BR
ECM Terminals and Reference Value	912	DTC Confirmation Procedure	970	
On Board Diagnosis Logic.....	912	Wiring Diagram	971	
DTC Confirmation Procedure	912	Diagnostic Procedure	972	ST
Wiring Diagram	913	DTC P0446 EVAPORATIVE EMISSION (EVAP)		
Diagnostic Procedure	914	CANISTER VENT CONTROL VALVE (CIRCUIT)	975	RS
DTC P0335 CRANKSHAFT POSITION SENSOR		Component Description	975	
(CKPS) (OBD).....916		CONSULT-II Reference Value in Data Monitor		BT
Component Description	916	Mode	975	
ECM Terminals and Reference Value	916	ECM Terminals and Reference Value	975	
On Board Diagnosis Logic.....	917	On Board Diagnosis Logic.....	975	HA
DTC Confirmation Procedure	917	DTC Confirmation Procedure	976	
Wiring Diagram	918	Wiring Diagram	977	
Diagnostic Procedure	919	Diagnostic Procedure	978	SC
DTC P0340 CAMSHAFT POSITION SENSOR		DTC P0450 EVAPORATIVE EMISSION (EVAP)		
(CMPS).....922		CONTROL SYSTEM PRESSURE SENSOR	981	
Component Description	922	Component Description	981	EL

CONTENTS (Cont'd)

CONSULT-II Reference Value in Data Monitor Mode	981	DTC Confirmation Procedure	1029
ECM Terminals and Reference Value	981	Diagnostic Procedure	1030
On Board Diagnosis Logic.....	982	DTC P1105 MAP/BARO SWITCH SOLENOID VALVE	1031
DTC Confirmation Procedure	982	Description	1031
Wiring Diagram	983	CONSULT-II Reference Value in Data Monitor Mode	1031
Diagnostic Procedure	984	ECM Terminals and Reference Value	1032
DTC P0455 EVAP CONTROL SYSTEM (GROSS LEAK)	992	On Board Diagnosis Logic.....	1032
On Board Diagnosis Logic.....	992	DTC Confirmation Procedure	1032
DTC Confirmation Procedure	993	Wiring Diagram	1034
Diagnostic Procedure	994	Diagnostic Procedure	1035
DTC P0500 VEHICLE SPEED SENSOR (VSS)	1006	DTC P1148 (RIGHT BANK, -B1), P1168 (LEFT BANK, -B2) CLOSED LOOP CONTROL	1043
Component Description	1006	On Board Diagnosis Logic.....	1043
ECM Terminals and Reference Value	1006	DTC Confirmation Procedure	1043
On Board Diagnosis Logic.....	1006	Overall Function Check	1044
DTC Confirmation Procedure	1006	Diagnostic Procedure	1044
Overall Function Check	1007	DTC P1320 IGNITION SIGNAL	1045
Wiring Diagram	1008	Component Description	1045
Diagnostic Procedure	1009	ECM Terminals and Reference Value	1045
DTC P0505 IDLE AIR CONTROL VALVE (IACV) - AUXILIARY AIR CONTROL (AAC) VALVE	1010	On Board Diagnosis Logic.....	1046
Description	1010	DTC Confirmation Procedure	1046
CONSULT-II Reference Value in Data Monitor Mode	1011	Wiring Diagram	1047
ECM Terminals and Reference Value	1011	Diagnostic Procedure	1048
On Board Diagnosis Logic.....	1011	DTC P1336 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) (COG)	1053
DTC Confirmation Procedure	1011	Component Description	1053
Wiring Diagram	1013	ECM Terminals and Reference Value	1053
Diagnostic Procedure	1014	On Board Diagnosis Logic.....	1054
DTC P0510 CLOSED THROTTLE POSITION SWITCH	1016	DTC Confirmation Procedure	1054
Component Description	1016	Wiring Diagram	1055
CONSULT-II Reference Value in Data Monitor Mode	1016	Diagnostic Procedure	1056
ECM Terminals and Reference Value	1016	DTC P1400 EGRC-SOLENOID VALVE	1060
On Board Diagnosis Logic.....	1016	Component Description (If Equipped with EGR Valve)	1060
DTC Confirmation Procedure	1017	CONSULT-II Reference Value in Data Monitor Mode	1060
Overall Function Check	1017	ECM Terminals and Reference Value	1060
Wiring Diagram	1018	On Board Diagnosis Logic.....	1060
Diagnostic Procedure	1019	DTC Confirmation Procedure	1061
DTC P0600 A/T CONTROL	1024	Wiring Diagram	1062
System Description.....	1024	Diagnostic Procedure	1063
ECM Terminals and Reference Value	1024	DTC P1401 EGR TEMPERATURE SENSOR	1065
On Board Diagnosis Logic.....	1024	Component Description (If Equipped with EGR Valve)	1065
DTC Confirmation Procedure	1024	On Board Diagnosis Logic.....	1065
Overall Function Check	1025	DTC Confirmation Procedure	1066
Wiring Diagram	1026	Overall Function Check	1067
Diagnostic Procedure	1027	Wiring Diagram	1068
DTC P0605 ECM	1029	Diagnostic Procedure	1069
Component Description	1029	DTC P1402 EGR FUNCTION (OPEN)	1072
On Board Diagnosis Logic.....	1029		

CONTENTS (Cont'd)

Description (If Equipped with EGR Valve)	1072	
On Board Diagnosis Logic.....	1073	
DTC Confirmation Procedure	1073	
Wiring Diagram	1075	
Diagnostic Procedure	1076	
DTC P1440 EVAP CONTROL SYSTEM (SMALL LEAK) (POSITIVE PRESSURE)	1082	
On Board Diagnosis Logic.....	1082	
DTC Confirmation Procedure	1083	
Diagnostic Procedure	1083	
DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	1084	
Description	1084	
CONSULT-II Reference Value in Data Monitor Mode	1084	
ECM Terminals and Reference Value	1085	
On Board Diagnosis Logic.....	1085	
DTC Confirmation Procedure	1086	
Wiring Diagram	1087	
Diagnostic Procedure	1088	
DTC P1446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CLOSE)	1096	
Component Description	1096	
CONSULT-II Reference Value in Data Monitor Mode	1096	
ECM Terminals and Reference Value	1096	
On Board Diagnosis Logic.....	1096	
DTC Confirmation Procedure	1097	
Wiring Diagram	1098	
Diagnostic Procedure	1099	
DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING	1103	
System Description.....	1103	
On Board Diagnosis Logic.....	1103	
DTC Confirmation Procedure	1104	
Overall Function Check	1105	
Diagnostic Procedure	1106	
DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)	1115	
Component Description	1115	
CONSULT-II Reference Value in Data Monitor Mode	1115	
ECM Terminals and Reference Value	1115	
On Board Diagnosis Logic.....	1115	
DTC Confirmation Procedure	1116	
Overall Function Check	1117	
Wiring Diagram	1118	
Diagnostic Procedure	1119	
DTC P1490 VACUUM CUT VALVE BYPASS VALVE (CIRCUIT)	1123	
Description	1123	
CONSULT-II Reference Value in Data Monitor Mode	1123	GI
ECM Terminals and Reference Value	1123	
On Board Diagnosis Logic.....	1124	MA
DTC Confirmation Procedure	1124	
Wiring Diagram	1125	EM
Diagnostic Procedure	1126	
DTC P1491 VACUUM CUT VALVE BYPASS VALVE	1129	LC
Description	1129	
CONSULT-II Reference Value in Data Monitor Mode	1129	EC
ECM Terminals and Reference Value	1129	
On Board Diagnosis Logic.....	1130	FE
DTC Confirmation Procedure	1130	
Overall Function Check	1131	
Wiring Diagram	1132	CL
Diagnostic Procedure	1133	
DTC P1605 A/T DIAGNOSIS COMMUNICATION LINE	1138	MT
Component Description	1138	
ECM Terminals and Reference Value	1138	AT
On Board Diagnosis Logic.....	1138	
DTC Confirmation Procedure	1138	
Wiring Diagram	1139	TF
Diagnostic Procedure	1140	
DTC P1706 PARK/NEUTRAL POSITION (PNP) SWITCH	1141	PD
Component Description	1141	
CONSULT-II Reference Value in Data Monitor Mode	1141	AX
ECM Terminals and Reference Value	1141	
On Board Diagnosis Logic.....	1141	SU
DTC Confirmation Procedure	1141	
Overall Function Check	1142	
Wiring Diagram	1143	BR
Diagnostic Procedure	1144	
TROUBLE DIAGNOSIS FOR OVERHEAT (COOLING SYSTEM)	1149	ST
System Description.....	1149	
CONSULT-II Reference Value in Data Monitor Mode	1149	RS
ECM Terminals and Reference Value	1149	
On Board Diagnosis Logic.....	1150	BT
Overall Function Check	1151	
Wiring Diagram	1152	HA
Diagnostic Procedure	1153	
Main 12 Causes of Overheating.....	1160	
INJECTOR	1161	SC
Component Description	1161	
CONSULT-II Reference Value in Data Monitor Mode	1161	EL

CONTENTS (Cont'd)

ECM Terminals and Reference Value	1161	Component Description	1181
Wiring Diagram	1162	ECM Terminals and Reference Value	1181
Diagnostic Procedure	1163	Wiring Diagram	1182
START SIGNAL	1166	Diagnostic Procedure	1183
CONSULT-II Reference Value in Data Monitor		MIL & DATA LINK CONNECTORS	1187
Mode	1166	Wiring Diagram	1187
ECM Terminals and Reference Value	1166	SERVICE DATA AND SPECIFICATIONS (SDS)	1188
Wiring Diagram	1167	Fuel Pressure Regulator	1188
Diagnostic Procedure	1168	Idle Speed and Ignition Timing	1188
FUEL PUMP	1170	Ignition Coil	1188
System Description	1170	Mass Air Flow Sensor	1188
Component Description	1170	Engine Coolant Temperature Sensor	1188
CONSULT-II Reference Value in Data Monitor		EGR Temperature Sensor (If So Equipped)	1188
Mode	1170	Front Heated Oxygen Sensor Heater	1188
ECM Terminals and Reference Value	1170	Fuel Pump	1189
Wiring Diagram	1171	IACV-AAC Valve	1189
Diagnostic Procedure	1172	Injector	1189
POWER STEERING OIL PRESSURE SWITCH	1176	Resistor	1189
Component Description	1176	Throttle Position Sensor	1189
CONSULT-II Reference Value in Data Monitor		Calculated Load Value	1189
Mode	1176	Intake Air Temperature Sensor	1189
ECM Terminals and Reference Value	1176	Rear Heated Oxygen Sensor Heater	1189
Wiring Diagram	1177	Crankshaft Position Sensor (OBD)	1189
Diagnostic Procedure	1178	Fuel Tank Temperature Sensor	1189
IACV-FICD SOLENOID VALVE	1181		

TROUBLE DIAGNOSIS — INDEX

KA24DE

Alphabetical & P No. Index for DTC

Alphabetical & P No. Index for DTC

ALPHABETICAL INDEX FOR DTC

NEEC0862

NEEC0862S01

Items (CONSULT-II screen terms)	DTC*6		Reference page
	CONSULT-II GST*2	ECM*1	
Unable to access ECM	—	—	EC-111
*COOLAN T SEN/CIRC	P0125	0908	EC-187
ABSL PRES SEN/CIRC	P0105	0803	EC-147
AIR TEMP SEN/CIRC	P0110	0401	EC-162
CAM POS SEN/CIRC	P0340	0101	EC-319
CLOSED LOOP	P1148	0307	EC-447
CLOSED TP SW/CIRC	P0510	0203	EC-422
COOLANT T SEN/CIRC	P0115	0103	EC-168
CPS/CIRC (OBD) COG	P1336	0905	EC-457
CPS/CIRCUIT (OBD)	P0335	0802	EC-313
CYL 1 MISFIRE	P0301	0608	EC-300
CYL 2 MISFIRE	P0302	0607	EC-300
CYL 3 MISFIRE	P0303	0606	EC-300
CYL 4 MISFIRE	P0304	0605	EC-300
ECM	P0605	0301	EC-429
EGR SYSTEM	P0400	0302	EC-327
EGR SYSTEM	P1402	0514	EC-476
EGR TEMP SEN/CIRC	P1401	0305	EC-470
EGRC SOLENOID/V	P1400	1005	EC-463
EGRC-BPT VALVE	P0402	0306	EC-339
EVAP GROSS LEAK	P0455	0715	EC-505
EVAP PURG FLOW/MON	P1447	0111	EC-505
EVAP SMALL LEAK	P0440	0705	EC-352
EVAP SMALL LEAK	P1440	0213	EC-485
EVAP SYS PRES SEN	P0450	0704	EC-383
FR O2 SEN HEATER	P0135	0901	EC-231
FRONT O2 SENSOR	P0130	0303	EC-191
FRONT O2 SENSOR	P0131	0411	EC-199
FRONT O2 SENSOR	P0132	0410	EC-206
FRONT O2 SENSOR	P0133	0409	EC-213
FRONT O2 SENSOR	P0134	0412	EC-224
FUEL SYS DIAG-LEAN	P0171	0115	EC-279
FUEL SYS DIAG-RICH	P0172	0114	EC-287
FUEL TEMP SEN/CIRC	P0180	0402	EC-294

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

TROUBLE DIAGNOSIS — INDEX

KA24DE

Alphabetical & P No. Index for DTC (Cont'd)

Items (CONSULT-II screen terms)	DTC*6		Reference page
	CONSULT-II GST*2	ECM*1	
IACV/AAC VLV/CIRC	P0505	0205	EC-416
IGN SIGNAL-PRIMARY	P1320	0201	EC-449
KNOCK SEN/CIRCUIT	P0325	0304	EC-309
MAF SEN/CIRCUIT*3	P0100	0102	EC-137
MAP/BARO SW SOL/CIR	P1105	1302	EC-431
MULTI CYL MISFIRE	P0300	0701	EC-300
NO SELF DIAGNOSTIC FAILURE INDICATED	P0000	0505	—
NO SELF DIAGNOSTIC FAILURE INDICATED	No DTC	Flashing*5	EC-71
OVERHEAT	—	0208	EC-557
P-N POS SW/CIRCUIT	P1706	1003	EC-541
PURG VOLUME CONT/V	P0443	1008	EC-367
PURG VOLUME CONT/V	P1444	0214	EC-487
REAR O2 SENSOR	P0137	0511	EC-236
REAR O2 SENSOR	P0138	0510	EC-246
REAR O2 SENSOR	P0139	0707	EC-256
REAR O2 SENSOR	P0140	0512	EC-266
RR O2 SEN HEATER	P0141	0902	EC-274
THRTL POS SEN/CIRC*3	P0120	0403	EC-173
TOR CONV CLTCH S/V	P1775	0904	AT-41
TW CATALYST SYSTEM	P0420	0702	EC-347
VC CUT/V BYPASS/V	P1491	0311	EC-530
VC/V BYPASS/V	P1490	0801	EC-523
VEH SPEED SEN/CIRC*4	P0500	0104	EC-412
VENT CONTROL VALVE	P0446	0903	EC-375
VENT CONTROL VALVE	P1446	0215	EC-499
VENT CONTROL VALVE	P1448	0309	EC-515

*1: In Diagnostic Test Mode II (Self-diagnostic results). These numbers are controlled by NISSAN.

*2: These numbers are prescribed by SAE J2012.

*3: When the fail-safe operation occurs, the MIL illuminates.

*4: The MIL illuminates when the "Revolution sensor signal" and the "Vehicle speed sensor signal" meet the fail-safe condition at the same time.

*5: While engine is running.

*6: 1st trip DTC No. is the same as DTC No.

P NO. INDEX FOR DTC

NEEC0862S02

DTC*6		Items (CONSULT-II screen terms)	Reference page
CONSULT-II GST*2	ECM*1		
—	—	Unable to access ECM	EC-111
No DTC	Flashing*5	NO SELF DIAGNOSTIC FAILURE INDICATED	EC-71

TROUBLE DIAGNOSIS — INDEX

KA24DE

Alphabetical & P No. Index for DTC (Cont'd)

DTC*6		Items (CONSULT-II screen terms)	Reference page
CONSULT-II GST*2	ECM*1		
P0000	0505	NO SELF DIAGNOSTIC FAILURE INDICATED	—
P0100	0102	MAF SEN/CIRCUIT*3	EC-137
P0105	0803	ABSL PRES SEN/CIRC	EC-147
P0110	0401	AIR TEMP SEN/CIRC	EC-162
P0115	0103	COOLANT T SEN/CIRC	EC-168
P0120	0403	THRTL POS SEN/CIRC*3	EC-173
P0125	0908	*COOLAN T SEN/CIRC	EC-187
P0130	0303	FRONT O2 SENSOR	EC-191
P0131	0411	FRONT O2 SENSOR	EC-199
P0132	0410	FRONT O2 SENSOR	EC-206
P0133	0409	FRONT O2 SENSOR	EC-213
P0134	0412	FRONT O2 SENSOR	EC-224
P0135	0901	FR O2 SEN HEATER	EC-231
P0137	0511	REAR O2 SENSOR	EC-236
P0138	0510	REAR O2 SENSOR	EC-246
P0139	0707	REAR O2 SENSOR	EC-256
P0140	0512	REAR O2 SENSOR	EC-266
P0141	0902	RR O2 SEN HEATER	EC-274
P0171	0115	FUEL SYS DIAG-LEAN	EC-279
P0172	0114	FUEL SYS DIAG-RICH	EC-287
P0180	0402	FUEL TEMP SEN/CIRC	EC-294
P0300	0701	MULTI CYL MISFIRE	EC-300
P0301	0608	CYL 1 MISFIRE	EC-300
P0302	0607	CYL 2 MISFIRE	EC-300
P0303	0606	CYL 3 MISFIRE	EC-300
P0304	0605	CYL 4 MISFIRE	EC-300
P0325	0304	KNOCK SEN/CIRCUIT	EC-309
P0335	0802	CPS/CIRCUIT (OBD)	EC-313
P0340	0101	CAM POS SEN/CIRC	EC-319
P0400	0302	EGR SYSTEM	EC-327
P0402	0306	EGRC-BPT VALVE	EC-339
P0420	0702	TW CATALYST SYSTEM	EC-347
P0440	0705	EVAP SMALL LEAK	EC-352
P0443	1008	PURG VOLUME CONT/V	EC-367
P0446	0903	VENT CONTROL VALVE	EC-375
P0450	0704	EVAP SYS PRES SEN	EC-383

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

TROUBLE DIAGNOSIS — INDEX

KA24DE

Alphabetical & P No. Index for DTC (Cont'd)

DTC*6		Items (CONSULT-II screen terms)	Reference page
CONSULT-II GST*2	ECM*1		
P0455	0715	EVAP GROSS LEAK	EC-383
P0500	0104	VEH SPEED SEN/CIRC*4	EC-412
P0505	0205	IACV/AAC VLV/CIRC	EC-416
P0510	0203	CLOSED TP SW/CIRC	EC-422
P0605	0301	ECM	EC-429
P1105	1302	MAP/BARO SW SOL/CIR	EC-431
P1148	0307	CLOSED LOOP	EC-447
P1320	0201	IGN SIGNAL-PRIMARY	EC-449
P1336	0905	CPS/CIRC (OBD) COG	EC-457
P1400	1005	EGRC SOLENOID/V	EC-463
P1401	0305	EGR TEMP SEN/CIRC	EC-470
P1402	0514	EGR SYSTEM	EC-476
P1440	0213	EVAP SMALL LEAK	EC-485
P1444	0214	PURG VOLUME CONT/V	EC-487
P1446	0215	VENT CONTROL VALVE	EC-499
P1447	0111	EVAP PURG FLOW/MON	EC-505
P1448	0309	VENT CONTROL VALVE	EC-515
P1490	0801	VC/V BYPASS/V	EC-523
P1491	0311	VC CUT/V BYPASS/V	EC-530
P1706	1003	P-N POS SW/CIRCUIT	EC-541
P1775	0904	TOR CONV CLTCH S/V	AT-41
—	0208	OVERHEAT	EC-557

*1: In Diagnostic Test Mode II (Self-diagnostic results). These numbers are controlled by NISSAN.

*2: These numbers are prescribed by SAE J2012.

*3: When the fail-safe operation occurs, the MIL illuminates.

*4: The MIL illuminates when the "Revolution sensor signal" and the "Vehicle speed sensor signal" meet the fail-safe condition at the same time.

*5: While engine is running.

*6: 1st trip DTC No. is the same as DTC No.

PRECAUTIONS

KA24DE

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

NEEC0863

The Supplemental Restraint System "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a seat belt, help to reduce the risk or severity of injury to the driver and front passenger in a frontal collision. The Supplemental Restraint System consists of air bag modules (located in the center of the steering wheel and in the instrument panel on the passenger side), seat belt pre-tensioners, a diagnosis sensor unit, a crash zone sensor (4WD models), warning lamp, wiring harness, and spiral cable.

The vehicle (except crew cab models) is equipped with a passenger air bag deactivation switch. Because no rear seat exists where a rear-facing child restraint can be placed, the switch is designed to turn off the passenger air bag so that a rear-facing child restraint can be used in the front passenger seat. The switch is located in the center of the instrument panel, near the ashtray. When the switch is turned to the ON position, the passenger air bag is enabled and could inflate in a frontal collision. When the switch is turned to the OFF position, the passenger air bag is disabled and will not inflate in a frontal collision. A passenger air bag OFF indicator on the instrument panel lights up when the passenger air bag is switched OFF. The driver air bag always remains enabled and is not affected by the passenger air bag deactivation switch.

Information necessary to service the system safely is included in the **RS section** of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses (except "SEAT BELT PRE-TENSIONER" connector) can be identified with yellow harness connector (and with yellow harness protector or yellow insulation tape before the harness connectors).

Precautions for On Board Diagnostic (OBD) System of Engine and A/T

NEEC0864

The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

CAUTION:

- Be sure to turn the ignition switch OFF and disconnect the negative battery terminal before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to the open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to "Description", "HARNESS CONNECTOR", *EL-4*.
- Be sure to route and secure the harnesses properly after work. The interference of the harness with a bracket, etc. may cause the MIL to light up due to the short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to the malfunction of the EGR system or fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the ECM and TCM (Transmission Control Module) before returning the vehicle to the customer.

Engine Fuel & Emission Control System


NEEC0865

ECM

- Do not disassemble ECM.
- Do not turn on board diagnostic test mode selector forcibly.
- If a battery terminal is disconnected, the memory will return to the ECM value.
The ECM will now start to self-control at its initial value. Engine operation can vary slightly when the terminal is disconnected. However, this is not an indication of a problem. Do not replace parts because of a slight variation.

WIRELESS EQUIPMENT

- When installing CB ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on its installation location.
 - 1) Keep the antenna as far away as possible from the electronic control units.
 - 2) Keep the antenna feeder line more than 20 cm (7.9 in) away from the harness of electronic controls.
Do not let them run parallel for a long distance.
 - 3) Adjust the antenna and feeder line so that the standing-wave ratio can be kept smaller.
 - 4) Be sure to ground the radio to vehicle body.

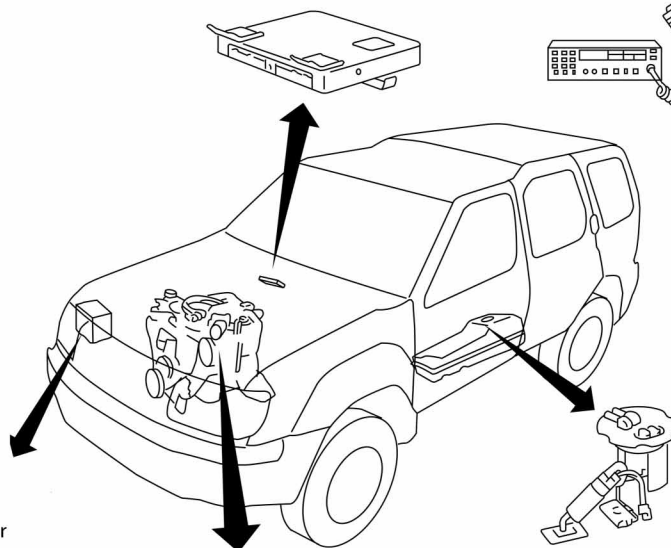

BATTERY

- Always use a 12 volt battery as power source.
- Do not attempt to disconnect battery cables while engine is running.

WHEN STARTING

- Do not depress accelerator pedal when starting.
- Immediately after starting, do not rev up engine unnecessarily.
- Do not rev up engine just prior to shutdown.

ECM PARTS HANDLING

- Handle mass air flow sensor carefully to avoid damage.
- Do not disassemble mass air flow sensor.
- Do not clean mass air flow sensor with any type of detergent.
- Do not disassemble IACV-AAC valve.
- Even a slight leak in the air intake system can cause serious problems.
- Do not shock or jar the camshaft position sensor or crankshaft position sensor (OBD).






FUEL PUMP

- Do not operate fuel pump when there is no fuel in lines.
- Tighten fuel hose clamps to the specified torque. (Refer to MA section.)

ECM HARNESS HANDLING

- Securely connect ECM harness connectors.
A poor connection can cause an extremely high (surge) voltage to develop in coil and condenser, thus resulting in damage to ICs.
- Keep ECM harness at least 10 cm (3.9 in.) away from adjacent harnesses to prevent an ECM system malfunction due to receiving external noise, degraded operation of ICs, etc.
- Keep ECM parts and harnesses dry.
- Before removing parts, turn off ignition switch and then disconnect battery ground cable.



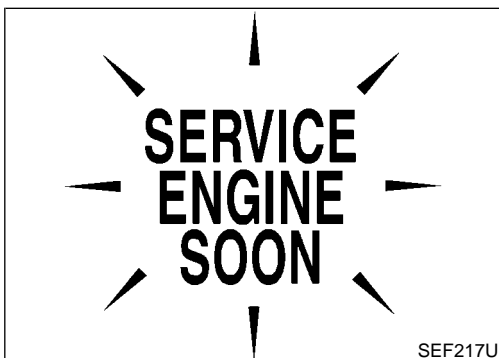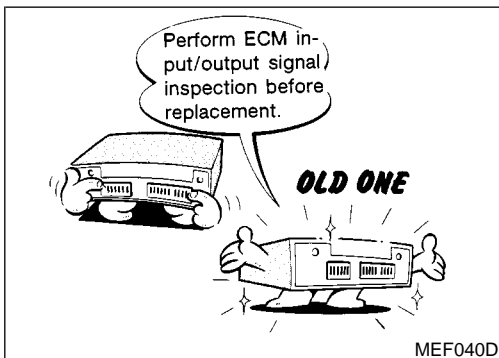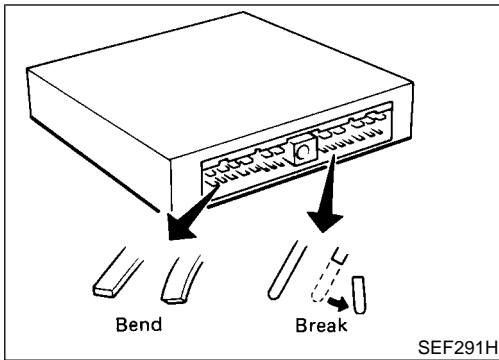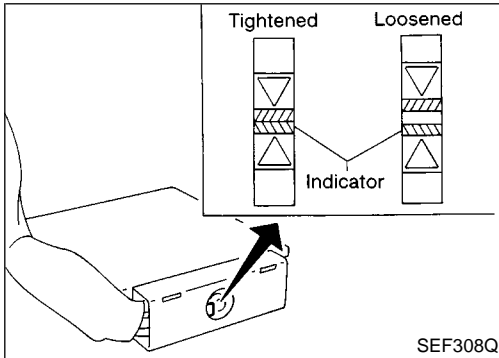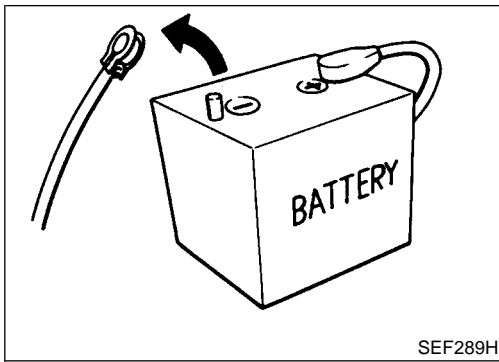


Precautions

NEEC0866

- Before connecting or disconnecting the ECM harness connector, turn ignition switch OFF and disconnect negative battery terminal. Failure to do so may damage the ECM because battery voltage is applied to ECM even if ignition switch is turned off.
- When connecting ECM harness connector, tighten securing bolt until the gap between orange indicators disappears.
 ⚙️ : 3 - 5 N·m (0.3 - 0.5 kg·m, 26 - 43 in·lb)
- When connecting or disconnecting pin connectors into or from ECM, take care not to damage pin terminals (bend or break).
 Make sure that there are not any bends or breaks on ECM pin terminals when connecting pin connectors.
- Before replacing ECM, perform Terminals and Reference Value inspection and make sure ECM functions properly. Refer to EC-121.
- After performing each TROUBLE DIAGNOSIS, perform "Overall Function Check" or "DTC Confirmation Procedure".
 The DTC should not be displayed in the "DTC Confirmation Procedure" if the repair is completed. The "Overall Function Check" should be a good result if the repair is completed.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Precautions (Cont'd)

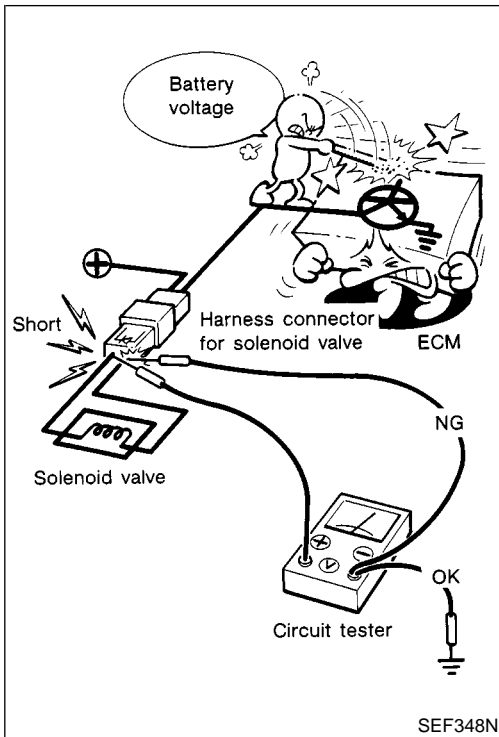

- When measuring ECM signals with a circuit tester, never allow the two tester probes to contact. Accidental contact of probes will cause a short circuit and damage the ECM power transistor.

Wiring Diagrams and Trouble Diagnosis

NEEC0867

When you read Wiring diagrams, refer to the followings:

- "HOW TO READ WIRING DIAGRAMS", **GI-11**.
- "POWER SUPPLY ROUTING", **EL-8**.

When you perform trouble diagnosis, refer to the followings:

- "HOW TO FOLLOW TEST GROUPS IN TROUBLE DIAGNOSIS" in **GI-35**.
- "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT", **GI-24**

PREPARATION



KA24DE

Special Service Tools

Special Service Tools

NEEC0868

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

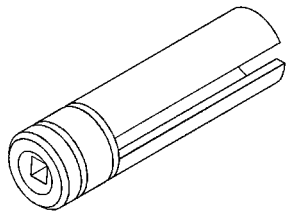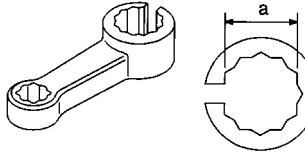Tool number (Kent-Moore No.) Tool name	Description	
KV10117100 (J36471-A) Heated oxygen sensor wrench		Loosening or tightening front heated oxygen sensor with 22 mm (0.87 in) hexagon nut
	NT379	
KV10114400 (J-38365) Heated oxygen sensor wrench		Loosening or tightening rear heated oxygen sensor a: 22 mm (0.87 in)
	NT636	

GI

MA

EM

LC

EC




FE

CL

MT

Commercial Service Tools

NEEC0869

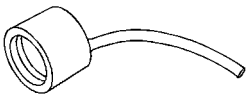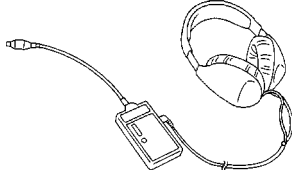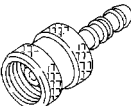Tool name	Description	
Fuel filler cap adapter		Checking fuel tank vacuum relief valve opening pressure
	NT653	
Leak detector (J41416)		Locating the EVAP leak
	NT703	
EVAP service port adapter (J41413-OBID)		Applying positive pressure through EVAP service port
	NT704	

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC





EL

IDX

PREPARATION




KA24DE

Commercial Service Tools (Cont'd)

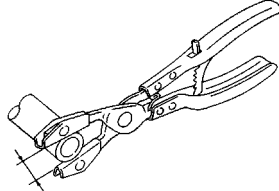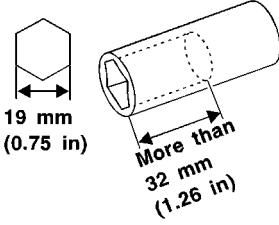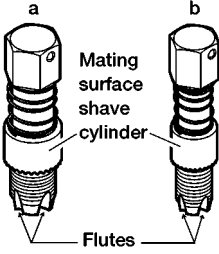
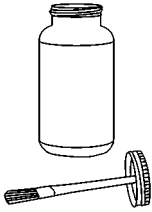
Tool name	Description
Hose clipper (—)	 <p>Approx. 20 mm (0.79 in)</p> <p>NT720</p> <p>Clamping the EVAP purge hose between the fuel tank and EVAP canister applied to DTC P1440 [EVAP control system (Small leak — Positive pressure)]</p>
Socket wrench	 <p>19 mm (0.75 in)</p> <p>More than 32 mm (1.26 in)</p> <p>NT705</p> <p>Removing and installing engine coolant temperature sensor</p>
Oxygen sensor thread cleaner (J-43897-18) (J-43897-12)	 <p>a</p> <p>b</p> <p>Mating surface shave cylinder</p> <p>Flutes</p> <p>AEM488</p> <p>Reconditioning the exhaust system threads before installing a new oxygen sensor. Use with anti-seize lubricant shown in "Commercial Service tools". a: J-43897-18 18 mm diameter, for Zirconia Oxygen Sensor b: J-43897-12 12 mm diameter, for Titania Oxygen Sensor</p>
Anti-seize lubricant (Permatex [®] 133AR or equivalent meeting MIL specification MIL-A-907)	 <p>AEM489</p> <p>Lubricating oxygen sensor thread cleaning tool when reconditioning exhaust system threads.</p>

Engine Control Component Parts Location

NEEC0870

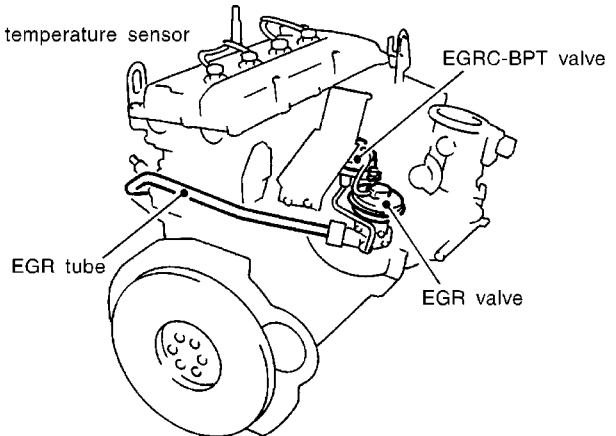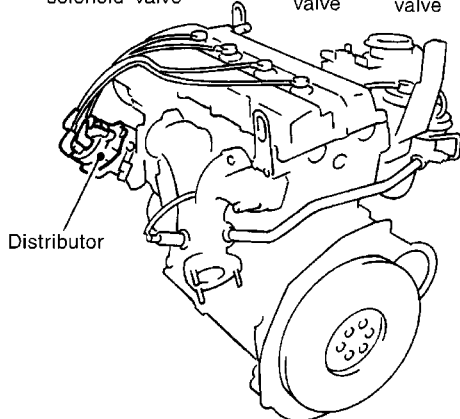
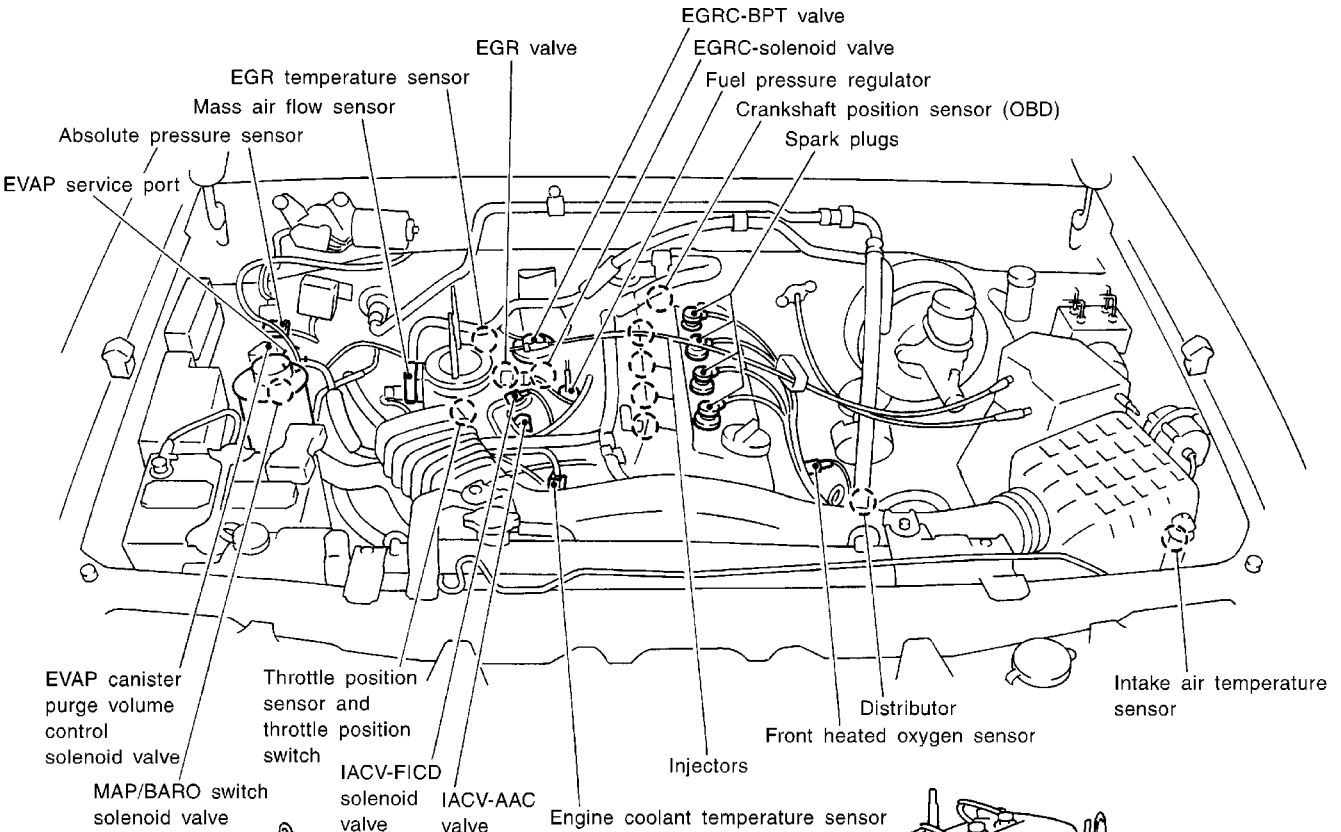


Driver side

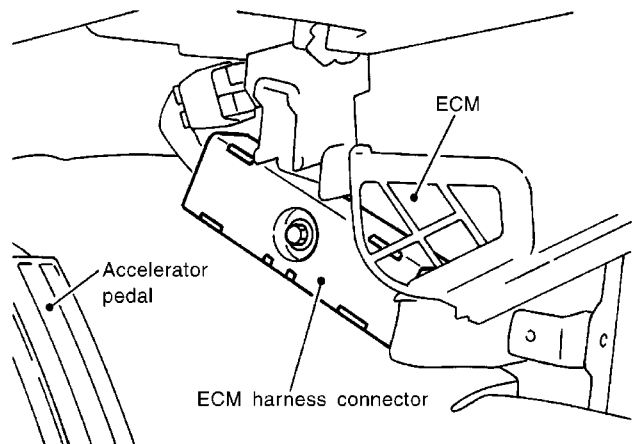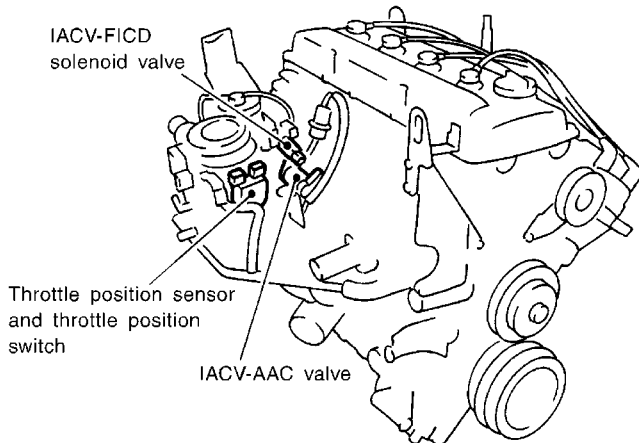

- GI
- MA
- EM
- LC
- EC**
- FE
- CL
- MT
- AT
- TF
- PD
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- EL
- IDX


SEF312V

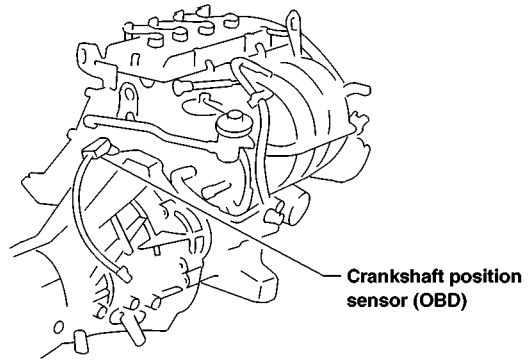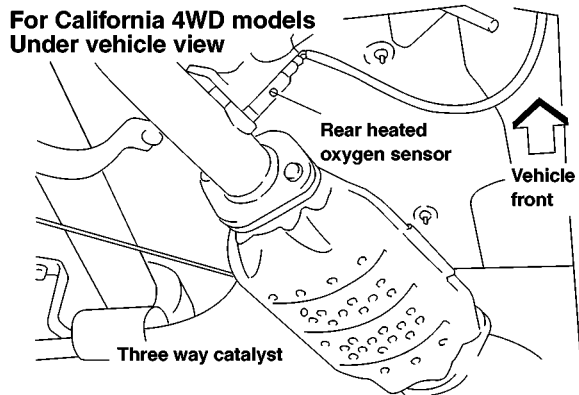

AEC041B

Circuit Diagram


NEEC0871

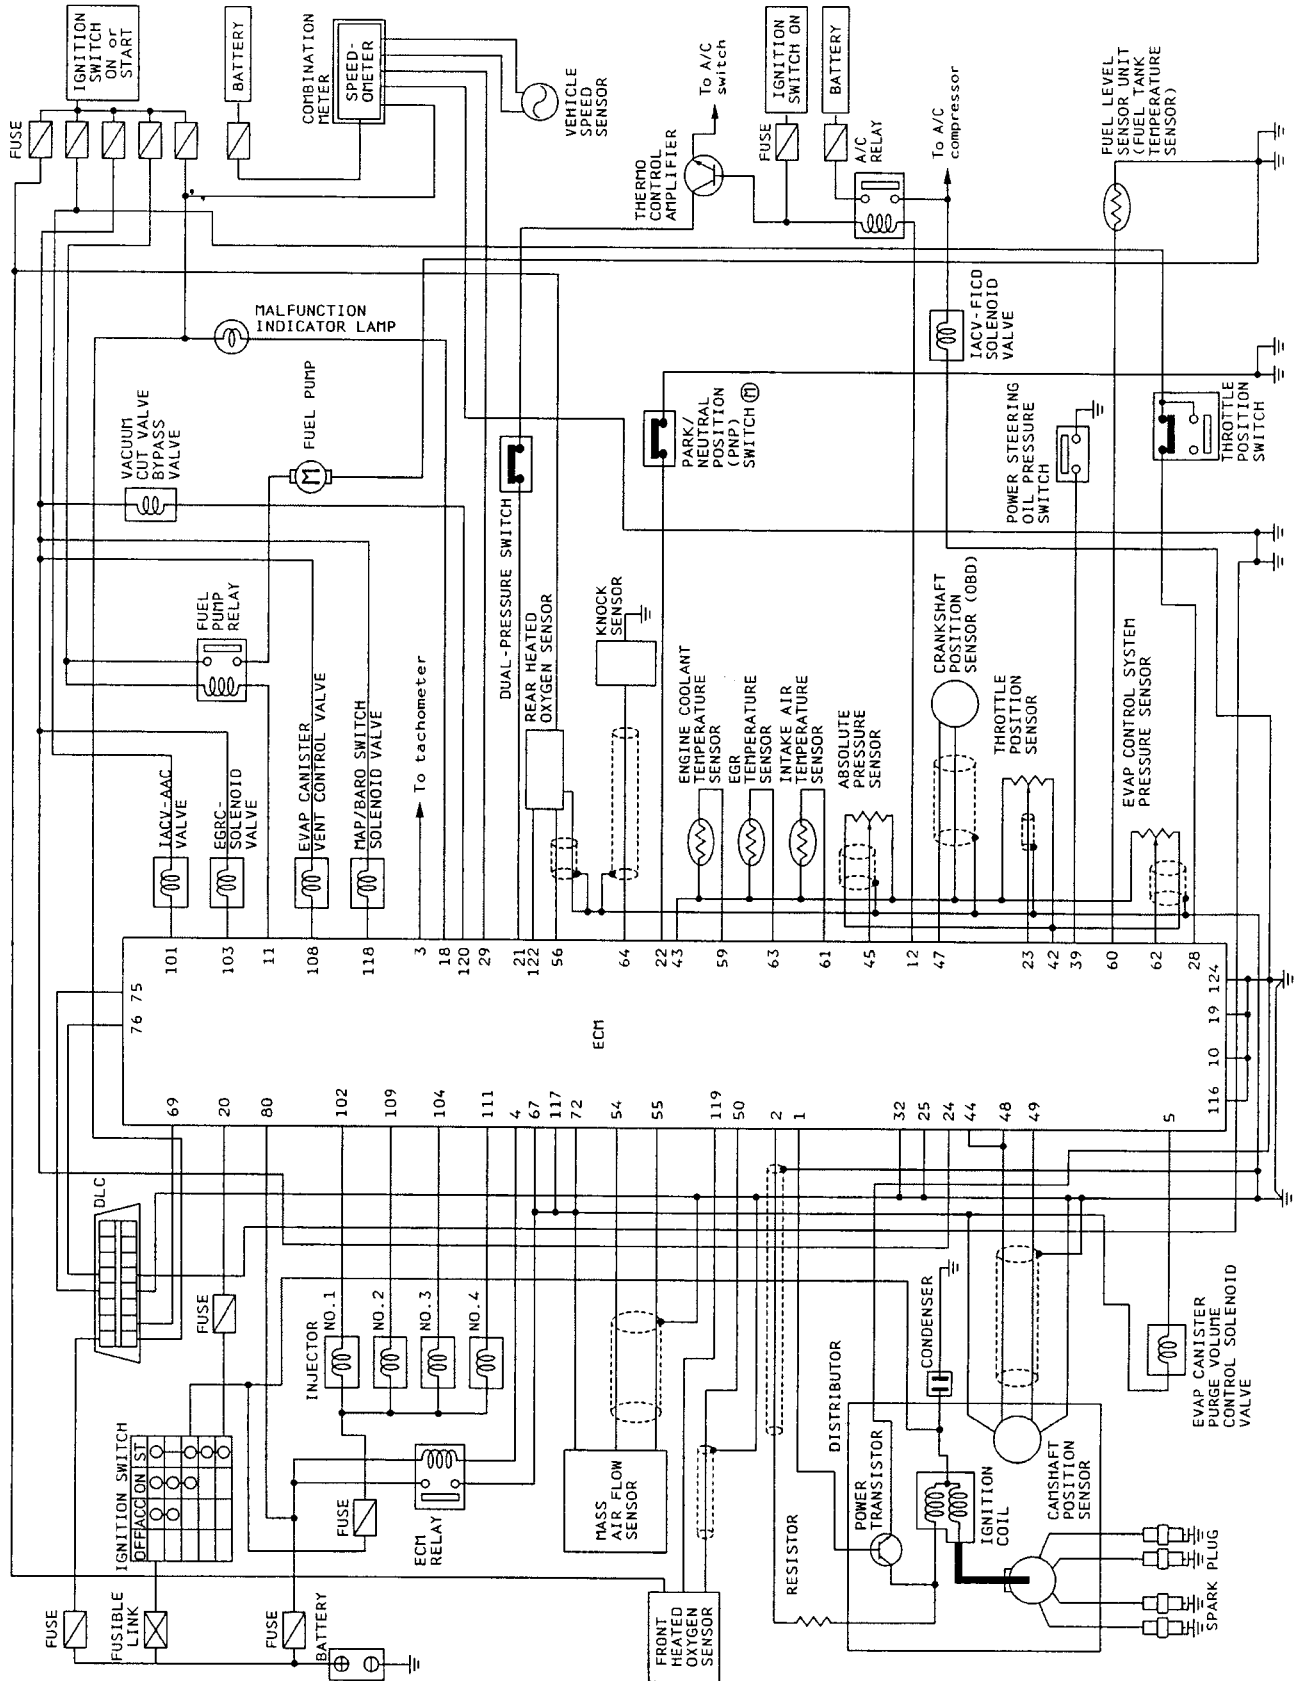

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

System Diagram

NEEC0872

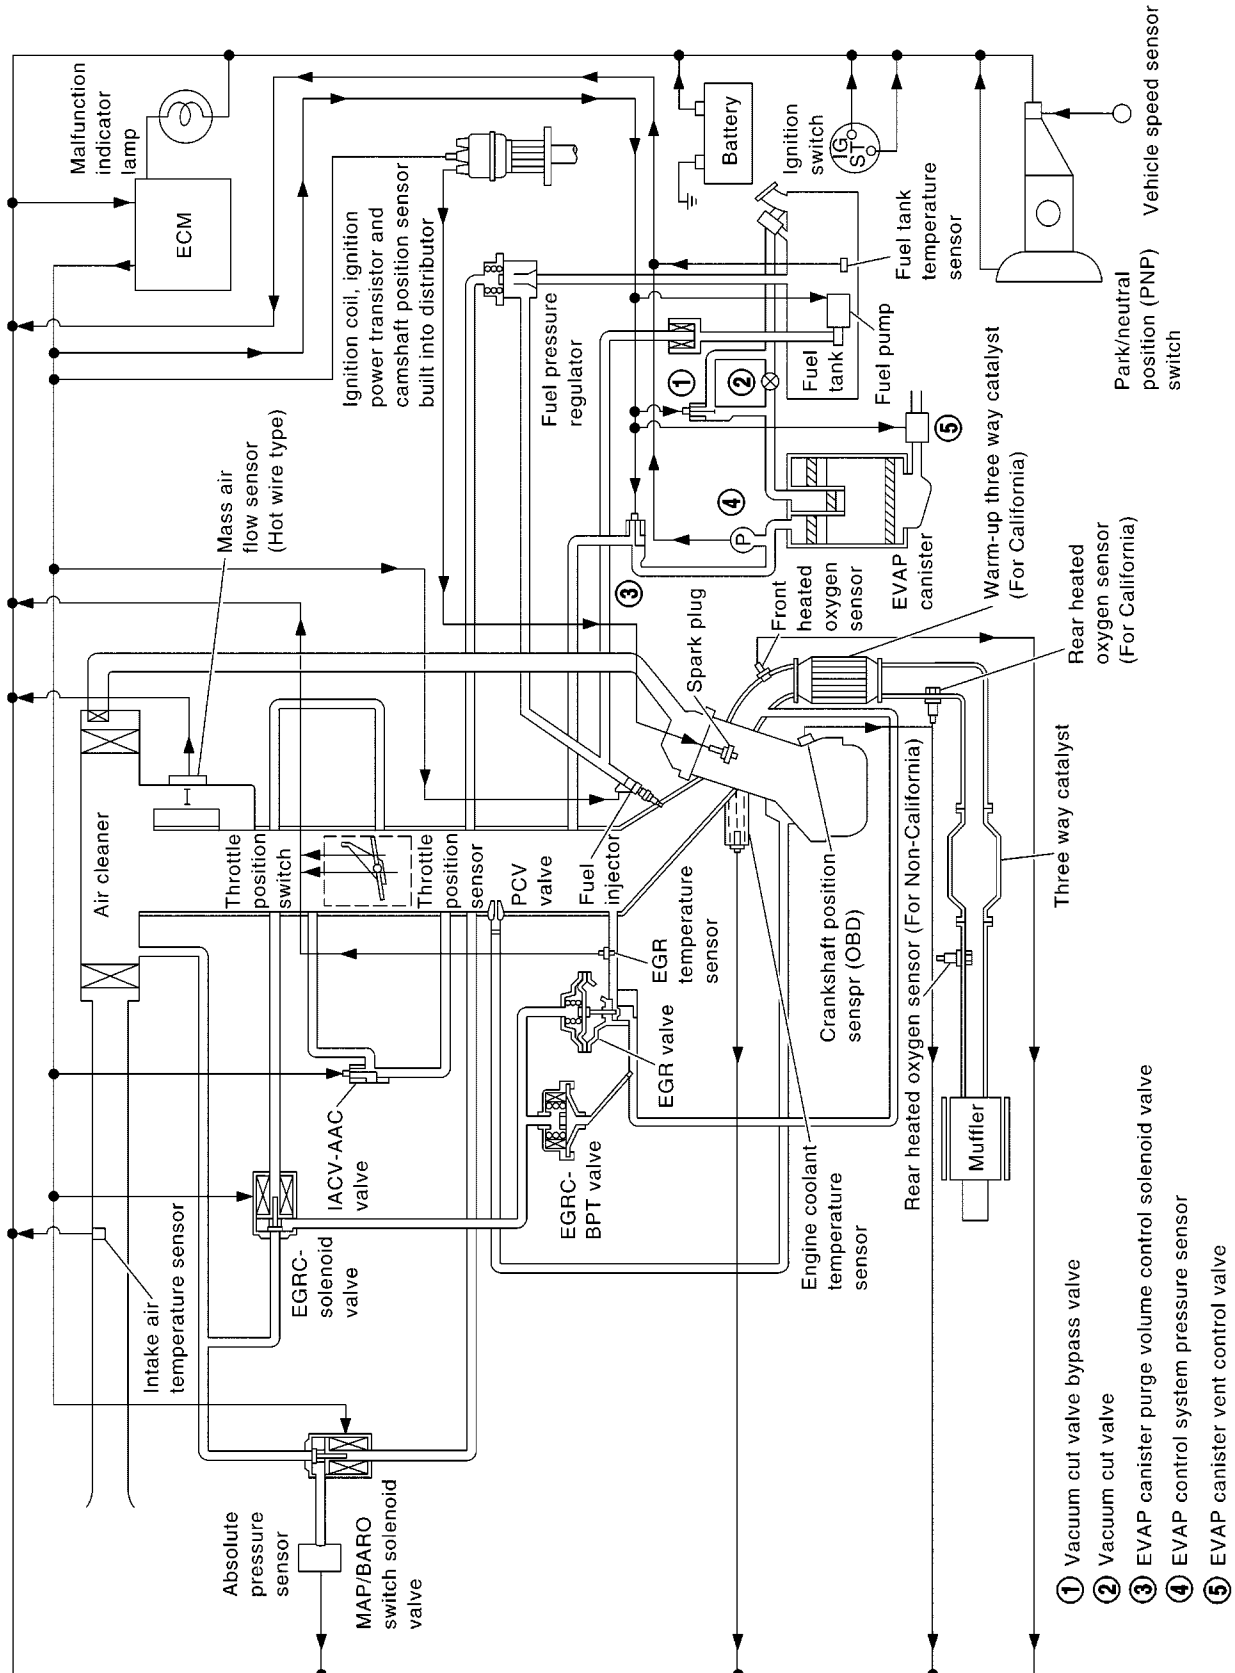


Vacuum Hose Drawing

NEEC0873

Refer to "System Diagram" on EC-26 for vacuum control system.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

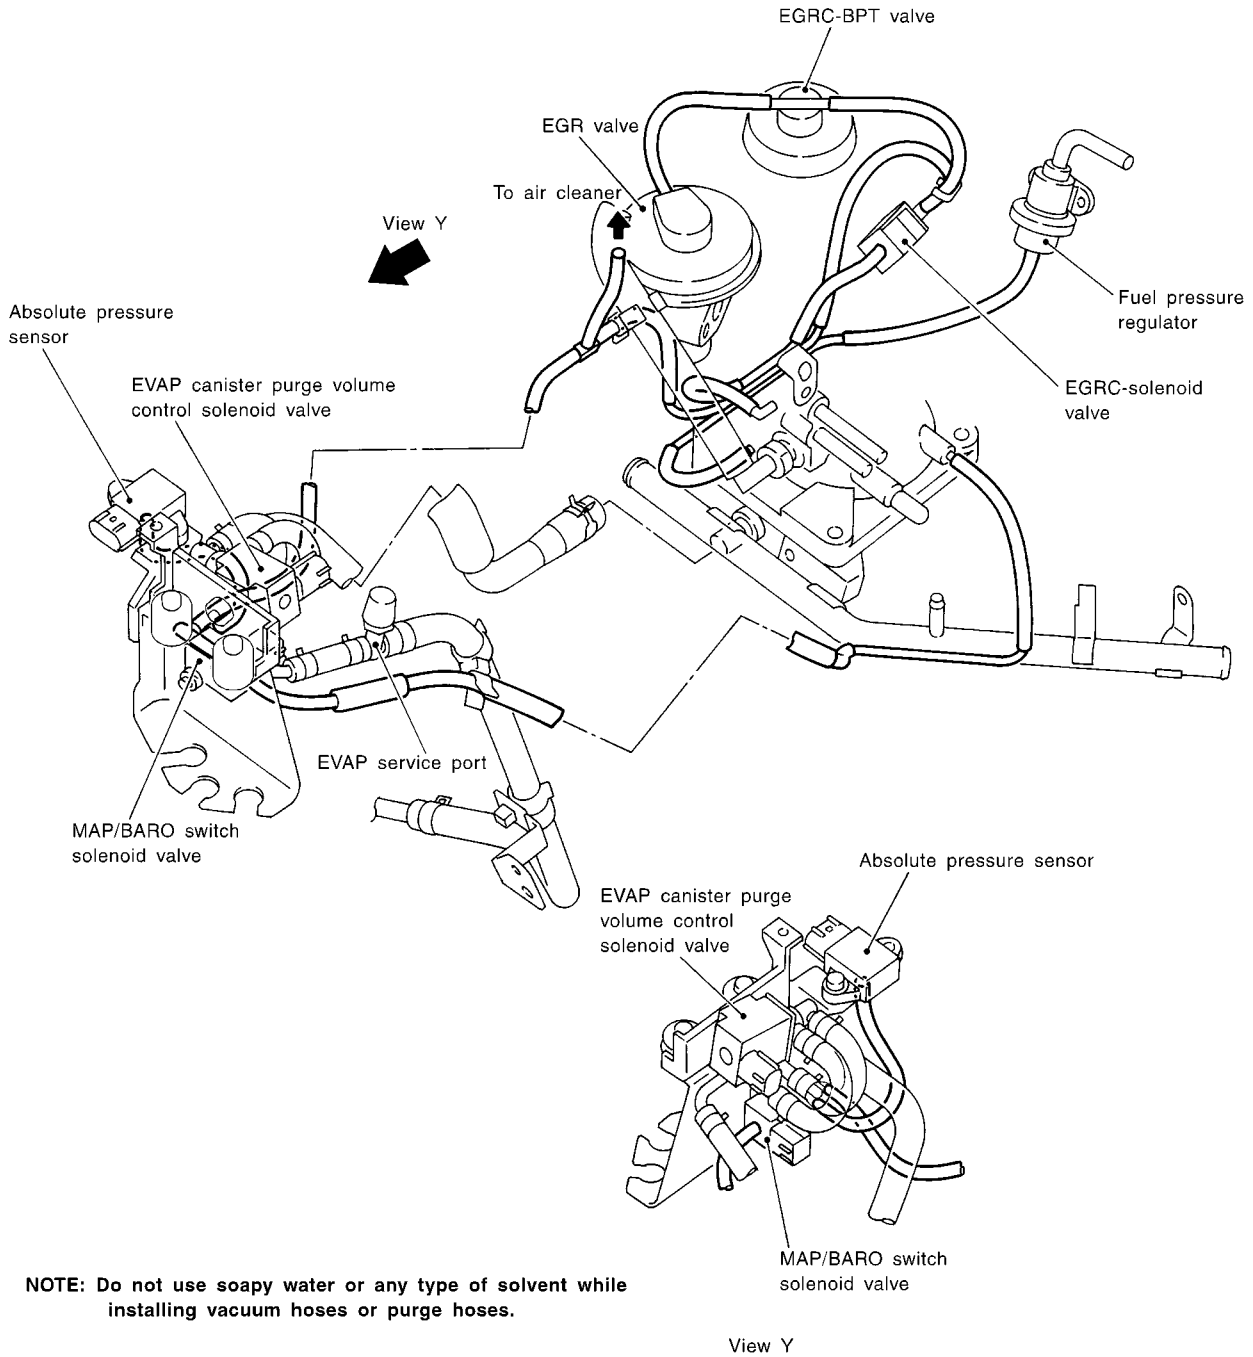

System Chart

NEEC0874

Input (Sensor)	ECM Function	Output (Actuator)
<ul style="list-style-type: none"> ● Camshaft position sensor ● Mass air flow sensor ● Engine coolant temperature sensor ● Front heated oxygen sensor ● Ignition switch ● Throttle position sensor ● PNP switch ● Air conditioner switch ● Knock sensor ● EGR temperature sensor*1 ● Crankshaft position sensor (OBD) ● EVAP control system pressure sensor*1 ● Fuel tank temperature sensor ● Battery voltage ● Power steering oil pressure switch ● Vehicle speed sensor ● Intake air temperature sensor ● Absolute pressure sensor ● Rear heated oxygen sensor*2 ● Closed throttle position switch*3 	Fuel injection & mixture ratio control	Injectors
	Distributor ignition system	Power transistor
	Idle air control system	IACV-AAC valve and IACV-FICD solenoid valve
	Fuel pump control	Fuel pump relay
	Front heated oxygen sensor monitor & on board diagnostic system	Malfunction indicator lamp (On the instrument panel)
	EGR control	EGRC-solenoid valve
	Front and rear heated oxygen sensor heater control	Heated oxygen sensor heater
	EVAP canister purge flow control	<ul style="list-style-type: none"> ● EVAP canister purge volume control valve ● EVAP canister purge control solenoid valve
	Air conditioning cut control	Air conditioner relay
	ON BOARD DIAGNOSIS for EVAP system	<ul style="list-style-type: none"> ● EVAP canister vent control valve ● Vacuum cut valve bypass valve ● MAP/BARO switch solenoid valve

*1: These sensors are not used to control the engine system. They are used only for the on board diagnosis.

*2: Under normal conditions, this sensor is not for engine control operation.

*3: This switch will operate in place of the throttle position sensor to control EVAP parts if the sensor malfunctions.

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

KA24DE

Multiport Fuel Injection (MFI) System

Multiport Fuel Injection (MFI) System

DESCRIPTION

Input/Output Signal Chart

NEEC0875

NEEC0875S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed and piston position	Fuel injection & mixture ratio control	Injector
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Front heated oxygen sensor	Density of oxygen in exhaust gas		
Throttle position sensor	Throttle position Throttle valve idle position		
PNP switch	Gear position		
Vehicle speed sensor	Vehicle speed		
Ignition switch	Start signal		
Air conditioner switch	Air conditioner operation		
Knock sensor	Engine knocking condition		
Absolute pressure sensor	Ambient barometric pressure		
Battery	Battery voltage		
Power steering oil pressure switch	Power steering operation		
Rear heated oxygen sensor*	Density of oxygen in exhaust gas		

* Under normal conditions, this sensor is not for engine control operation.

Basic Multiport Fuel Injection System

NEEC0875S02

The amount of fuel injected from the fuel injector is determined by the ECM. The ECM controls the length of time the valve remains open (injection pulse duration). The amount of fuel injected is a program value in the ECM memory. The program value is preset by engine operating conditions. These conditions are determined by input signals (for engine speed and intake air) from both the camshaft position sensor and the mass air flow sensor.

Various Fuel Injection Increase/Decrease Compensation

NEEC0875S03

In addition, the amount of fuel injected is compensated to improve engine performance under various operating conditions as listed below.

<Fuel increase>


- During warm-up
- When starting the engine
- During acceleration
- Hot-engine operation
- High-load, high-speed operation

<Fuel decrease>

- During deceleration
- During high engine speed operation

Mixture Ratio Feedback Control (Closed loop control)

NEEC0875S04

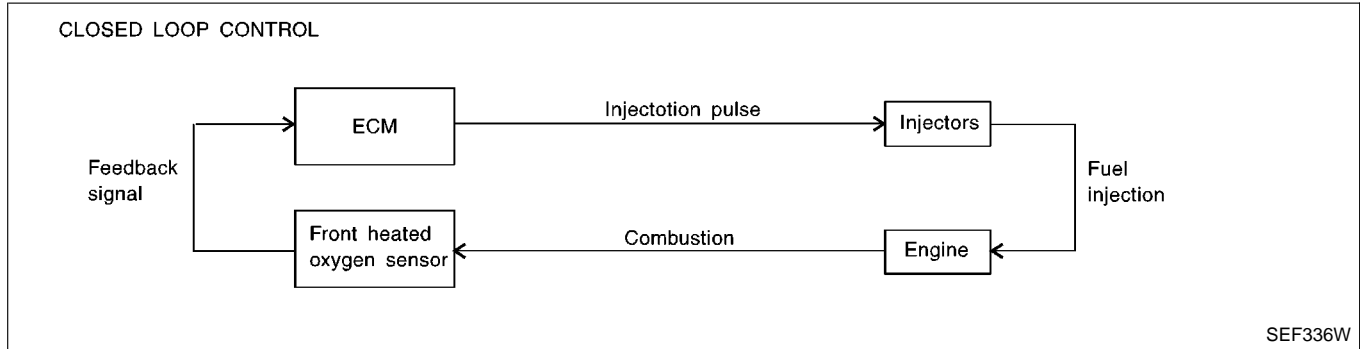

The mixture ratio feedback system provides the best air-fuel mixture ratio for driveability and emission control. The three way catalyst can then better reduce CO, HC and NOx emissions. This system uses a front heated oxygen sensor in the exhaust manifold to monitor if the engine operation is rich or lean. The ECM adjusts the injection pulse width according to the sensor voltage signal. For more information about the front heated oxygen sensor, refer to EC-191. This maintains the mixture ratio within the range of stoichiometric (ideal air-fuel mixture).

This stage is referred to as the closed loop control condition.

Rear heated oxygen sensor is located downstream of the three way catalyst. Even if the switching characteristics of the front heated oxygen sensor shift, the air-fuel ratio is controlled to stoichiometric by the signal from the rear heated oxygen sensor.

Open Loop Control

NEEC0875S05

The open loop system condition refers to when the ECM detects any of the following conditions. Feedback control stops in order to maintain stabilized fuel combustion.

- Deceleration and acceleration
- High-load, high-speed operation
- Malfunction of front heated oxygen sensor or its circuit
- Insufficient activation of front heated oxygen sensor at low engine coolant temperature
- High engine coolant temperature
- During warm-up
- When starting the engine

Mixture Ratio Self-learning Control

NEEC0875S06

The mixture ratio feedback control system monitors the mixture ratio signal transmitted from the front heated oxygen sensor. This feedback signal is then sent to the ECM. The ECM controls the basic mixture ratio as close to the theoretical mixture ratio as possible. However, the basic mixture ratio is not necessarily controlled as originally designed. Both manufacturing differences (i.e., mass air flow sensor hot film) and characteristic changes during operation (i.e., injector clogging) directly affect mixture ratio.

Accordingly, the difference between the basic and theoretical mixture ratios is monitored in this system. This is then computed in terms of "injection pulse duration" to automatically compensate for the difference between the two ratios.

"Fuel trim" refers to the feedback compensation value compared against the basic injection duration. Fuel trim includes short term fuel trim and long term fuel trim.

"Short term fuel trim" is the short-term fuel compensation used to maintain the mixture ratio at its theoretical value. The signal from the front heated oxygen sensor indicates whether the mixture ratio is RICH or LEAN compared to the theoretical value. The signal then triggers a reduction in fuel volume if the mixture ratio is rich, and an increase in fuel volume if it is lean.

"Long term fuel trim" is overall fuel compensation carried out long-term to compensate for continual deviation of the short term fuel trim from the central value. Such deviation will occur due to individual engine differences, wear over time and changes in the usage environment.


ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

KA24DE

Multiport Fuel Injection (MFI) System (Cont'd)

Fuel Injection Timing

NEEC0875S07

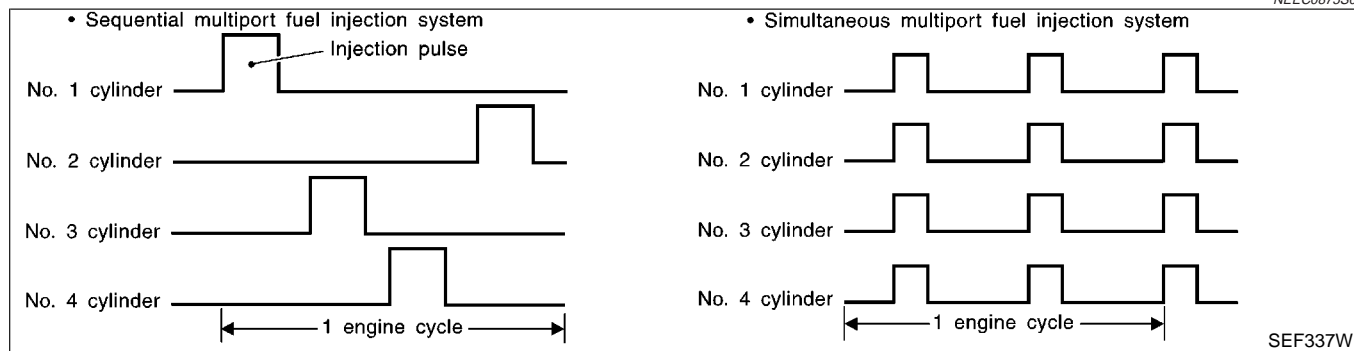

Two types of systems are used.

Sequential Multiport Fuel Injection System

NEEC0875S0701

Fuel is injected into each cylinder during each engine cycle according to the firing order. This system is used when the engine is running.

Simultaneous Multiport Fuel Injection System

NEEC0875S0702

Fuel is injected simultaneously into all four cylinders twice each engine cycle. In other words, pulse signals of the same width are simultaneously transmitted from the ECM.

The four injectors will then receive the signals two times for each engine cycle.

This system is used when the engine is being started and/or if the fail-safe system (CPU) is operating.

Fuel Shut-off

NEEC0875S08

Fuel to each cylinder is cut off during deceleration or operation of the engine at excessively high speeds.

Distributor Ignition (DI) System

DESCRIPTION

Input/Output Signal Chart


NEEC0876

NEEC0876S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed and piston position	Ignition timing control	Power transistor
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Throttle position sensor	Throttle position Throttle valve idle position		
Vehicle speed sensor	Vehicle speed		
Ignition switch	Start signal		
Knock sensor	Engine knocking		
PNP switch	Gear position		
Battery	Battery voltage		

System Description

NEEC0876S02

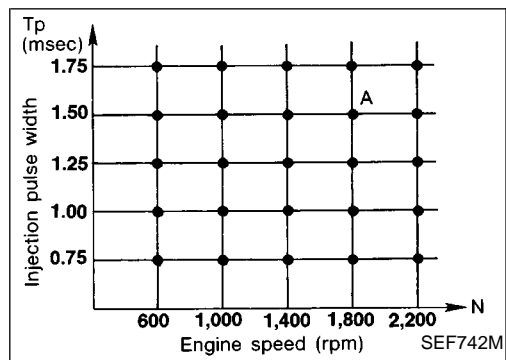

The ignition timing is controlled by the ECM to maintain the best air-fuel ratio for every running condition of the engine. The ignition timing data is stored in the ECM. This data forms the map shown above.

The ECM receives information such as the injection pulse width and camshaft position sensor signal. Computing this information, ignition signals are transmitted to the power transistor.

e.g., N: 1,800 rpm, Tp: 1.50 msec

A°BTDC

During the following conditions, the ignition timing is revised by the ECM according to the other data stored in the ECM.

- At starting
- During warm-up
- At idle
- At low battery voltage
- During acceleration

The knock sensor retard system is designed only for emergencies. The basic ignition timing is programmed within the anti-knocking zone, if recommended fuel is used under dry conditions. The retard system does not operate under normal driving conditions.

If engine knocking occurs, the knock sensor monitors the condition. The signal is transmitted to the ECM. The ECM retards the ignition timing to eliminate the knocking condition.

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

KA24DE

Air Conditioning Cut Control

Air Conditioning Cut Control

DESCRIPTION

Input/Output Signal Chart

=NEEC0877

NEEC0877S01

Sensor	Input Signal to ECM	ECM function	Actuator
Air conditioner switch	Air conditioner "ON" signal	Air conditioner cut control	Air conditioner relay
Throttle position sensor	Throttle valve opening angle		
Camshaft position sensor	Engine speed		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Vehicle speed sensor	Vehicle speed		
Power steering oil pressure switch	Power steering operation		

System Description

NEEC0877S02

This system improves engine operation when the air conditioner is used. Under the following conditions, the air conditioner is turned off.

- When the accelerator pedal is fully depressed.
- When cranking the engine.
- When the engine coolant temperature becomes excessively high.
- When operating power steering and air conditioner during low engine speed or when fully releasing accelerator pedal.
- When engine speed is excessively low.

Fuel Cut Control (at no load & high engine speed)

DESCRIPTION

Input/Output Signal Chart

NEEC0878

NEEC0878S01

Sensor	Input Signal to ECM	ECM function	Actuator
Vehicle speed sensor	Vehicle speed	Fuel cut control	Injectors
PNP switch	Neutral position		
Throttle position sensor	Throttle position		
Camshaft position sensor	Engine speed		

If the engine speed is above 3,000 rpm with no load, (for example, in Neutral and engine speed over 3,000 rpm) fuel will be cut off after some time. The exact time when the fuel is cut off varies based on engine speed. Fuel cut will operate until the engine speed reaches 1,500 rpm, then fuel cut is cancelled.


NOTE:

This function is different from deceleration control listed under "Multiport Fuel Injection (MFI) System", EC-29.


Evaporative Emission System

DESCRIPTION

=NEEC0879

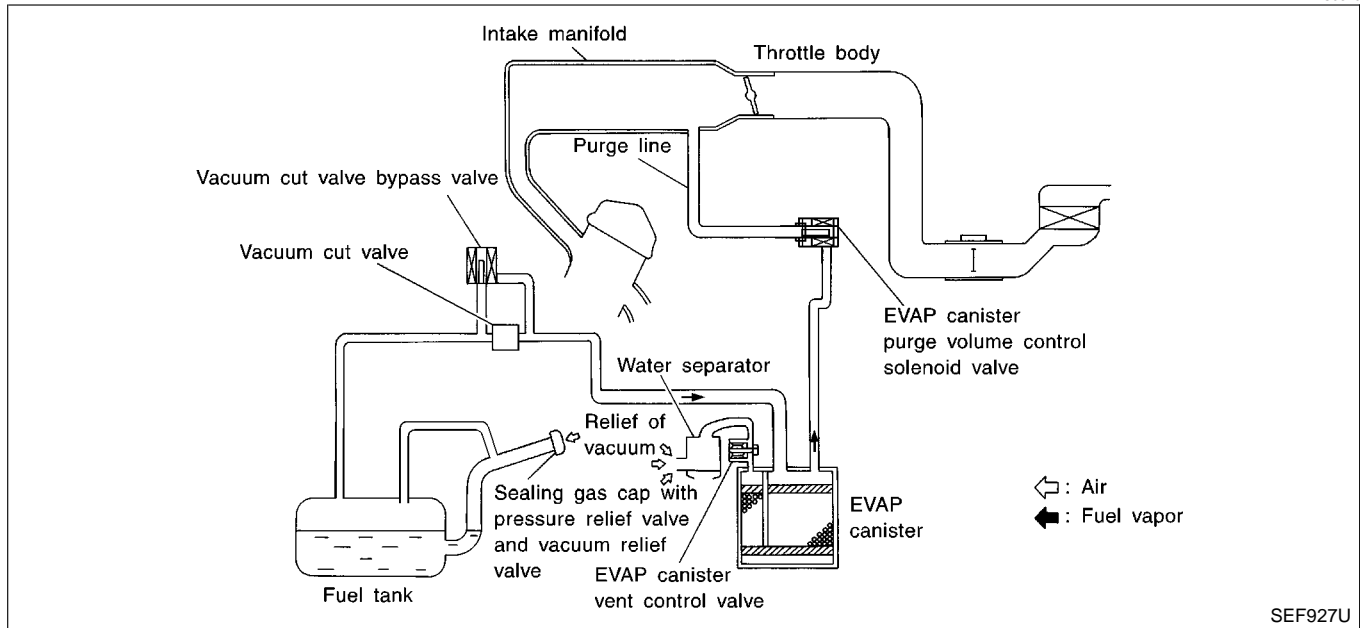

The evaporative emission system is used to reduce hydrocarbons emitted into the atmosphere from the fuel system. This reduction of hydrocarbons is accomplished by activated charcoals in the EVAP canister. The fuel vapor in the sealed fuel tank is led into the EVAP canister which contains activated carbon and the vapor is stored there when the engine is not operating or when refueling to the fuel tank. The vapor in the EVAP canister is purged by the air through the purge line to the intake manifold when the engine is operating. EVAP canister purge volume control solenoid valve is controlled by ECM. When the engine operates, the flow rate of vapor controlled by EVAP canister purge volume control solenoid valve is proportionally regulated as the air flow increases. EVAP canister purge volume control solenoid valve also shuts off the vapor purge line during decelerating and idling.

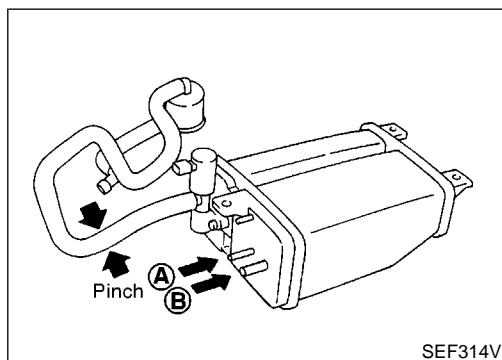


INSPECTION EVAP Canister

NEEC0880

NEEC0880S01

Check EVAP canister as follows:

1. Pinch the fresh air hose.
2. Blow air into port A and check that air flows freely through port B.

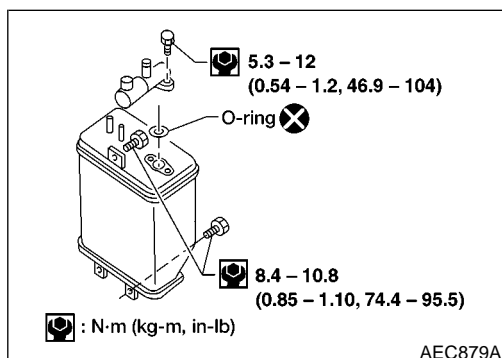

Tightening Torque

NEEC0880S02


Tighten EVAP canister as shown in the figure.

Make sure new O-ring is installed properly between EVAP canister and EVAP canister vent control valve.

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

KA24DE

Evaporative Emission System (Cont'd)

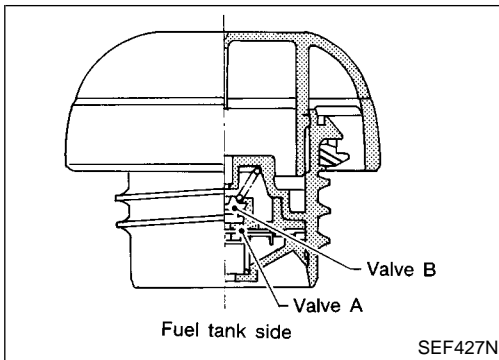

Fuel Tank Vacuum Relief Valve (Built into fuel filler cap)

NEEC0880S03

1. Wipe clean valve housing.
2. Check valve opening pressure and vacuum.

Pressure:

16.0 - 20.0 kPa (0.163 - 0.204 kg/cm², 2.32 - 2.90 psi)


Vacuum:

-6.0 to -3.5 kPa (-0.061 to -0.036 kg/cm², -0.87 to -0.51 psi)

3. If out of specification, replace fuel filler cap as an assembly.

CAUTION:

Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.

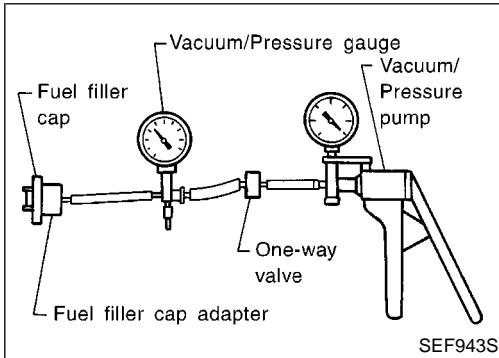

Vacuum Cut Valve and Vacuum Cut Valve Bypass Valve

NEEC0880S04

Refer to EC-530.

Evaporative Emission (EVAP) Canister Purge Volume Control Solenoid Valve


NEEC0880S05

Refer to EC-487.

Tank Fuel Temperature Sensor

NEEC0880S06

Refer to EC-294.

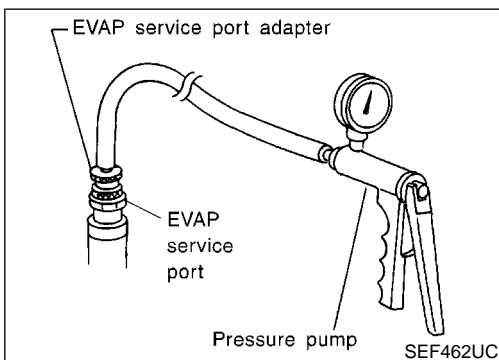

EVAP Service Port

NEEC0880S07

Positive pressure is delivered to the EVAP system through the EVAP service port. If fuel vapor leakage in the EVAP system occurs, use a leak detector to locate the leak.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX



ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

KA24DE

Evaporative Emission System (Cont'd)

EVAP SYSTEM CLOSE
APPLY PRESSURE TO EVAP SYSTEM FROM SERVICE PORT USING HAND PUMP WITH PRESSURE GAUGE AT NEXT SCREEN. NEVER USE COMPRESSED AIR OR HIGH PRESSURE PUMP! DO NOT START ENGINE. TOUCH START.

PEF658U

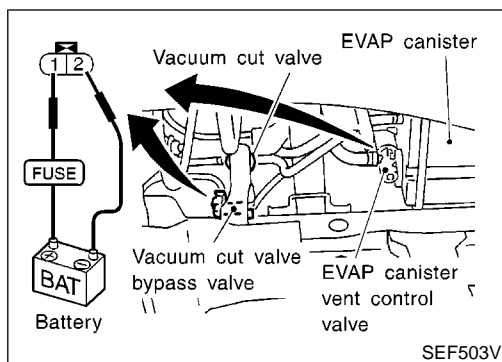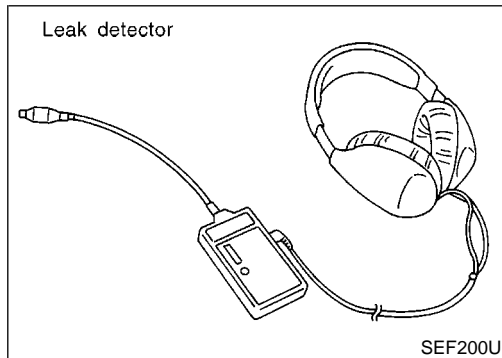

How to Detect Fuel Vapor Leakage

NEEC0880S08

CAUTION:

- Never use compressed air or a high pressure pump.
- Do not start engine.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in EVAP system.

NOTE:

Improper installation of adapter to the service port may cause a leak.

With CONSULT-II

- 1) Attach the EVAP service port adapter securely to the EVAP service port.
- 2) Also attach the pressure pump and hose.
- 3) Turn ignition switch "ON".
- 4) Select the "EVAP SYSTEM CLOSE" of "WORK SUPPORT MODE" with CONSULT-II.
- 5) Touch "START". A bar graph (Pressure indicating display) will appear on the screen.
- 6) Apply positive pressure to the EVAP system until the pressure indicator reaches the middle of the bar graph.
- 7) Remove the EVAP service port adapter and hose with pressure pump.
- 8) Locate the leak using a leak detector. Refer to "Evaporative Emission Line Drawing", EC-36.

Without CONSULT-II

- 1) Attach the EVAP service port adapter securely to the EVAP service port and pressure pump with pressure gauge to the EVAP service port.
- 2) Apply battery voltage to between the terminals of both EVAP canister vent control valve and vacuum cut valve bypass valve to make a closed EVAP system.
- 3) To locate the leak, deliver positive pressure to the EVAP system until pressure gauge points reach 1.38 to 2.76 kPa (0.014 to 0.028 kg/cm², 0.2 to 0.4 psi).
- 4) Remove the EVAP service port adapter and hose with pressure pump.
- 5) Locate the leak using a leak detector. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-36.

EVAPORATIVE EMISSION LINE DRAWING

NOTE:


Do not use soapy water or any type of solvent while installing vacuum hoses or purge hoses.

NEEC0881

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

KA24DE

Evaporative Emission System (Cont'd)

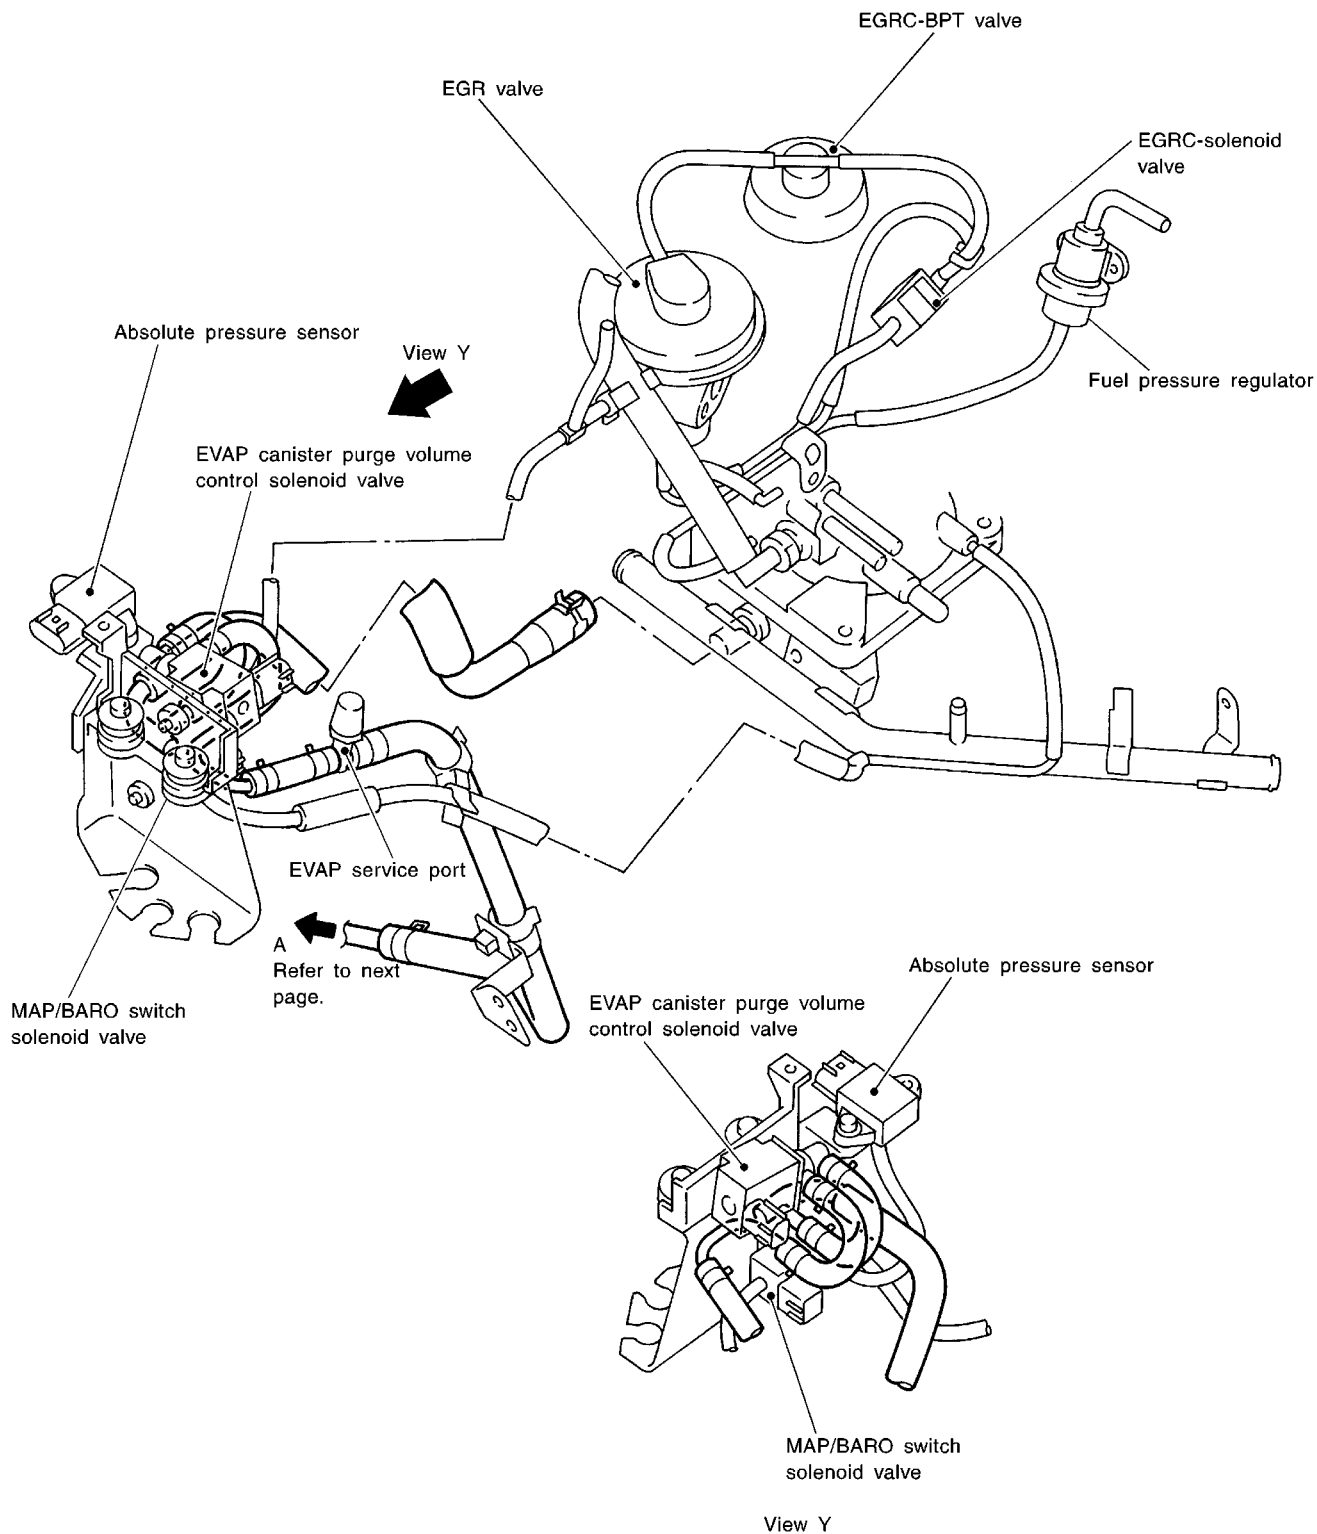


- GI
- MA
- EM
- LC
- EC**
- FE
- CL
- MT
- AT
- TF
- PD
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- EL
- IDX

SEF108V

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

KA24DE

Evaporative Emission System (Cont'd)

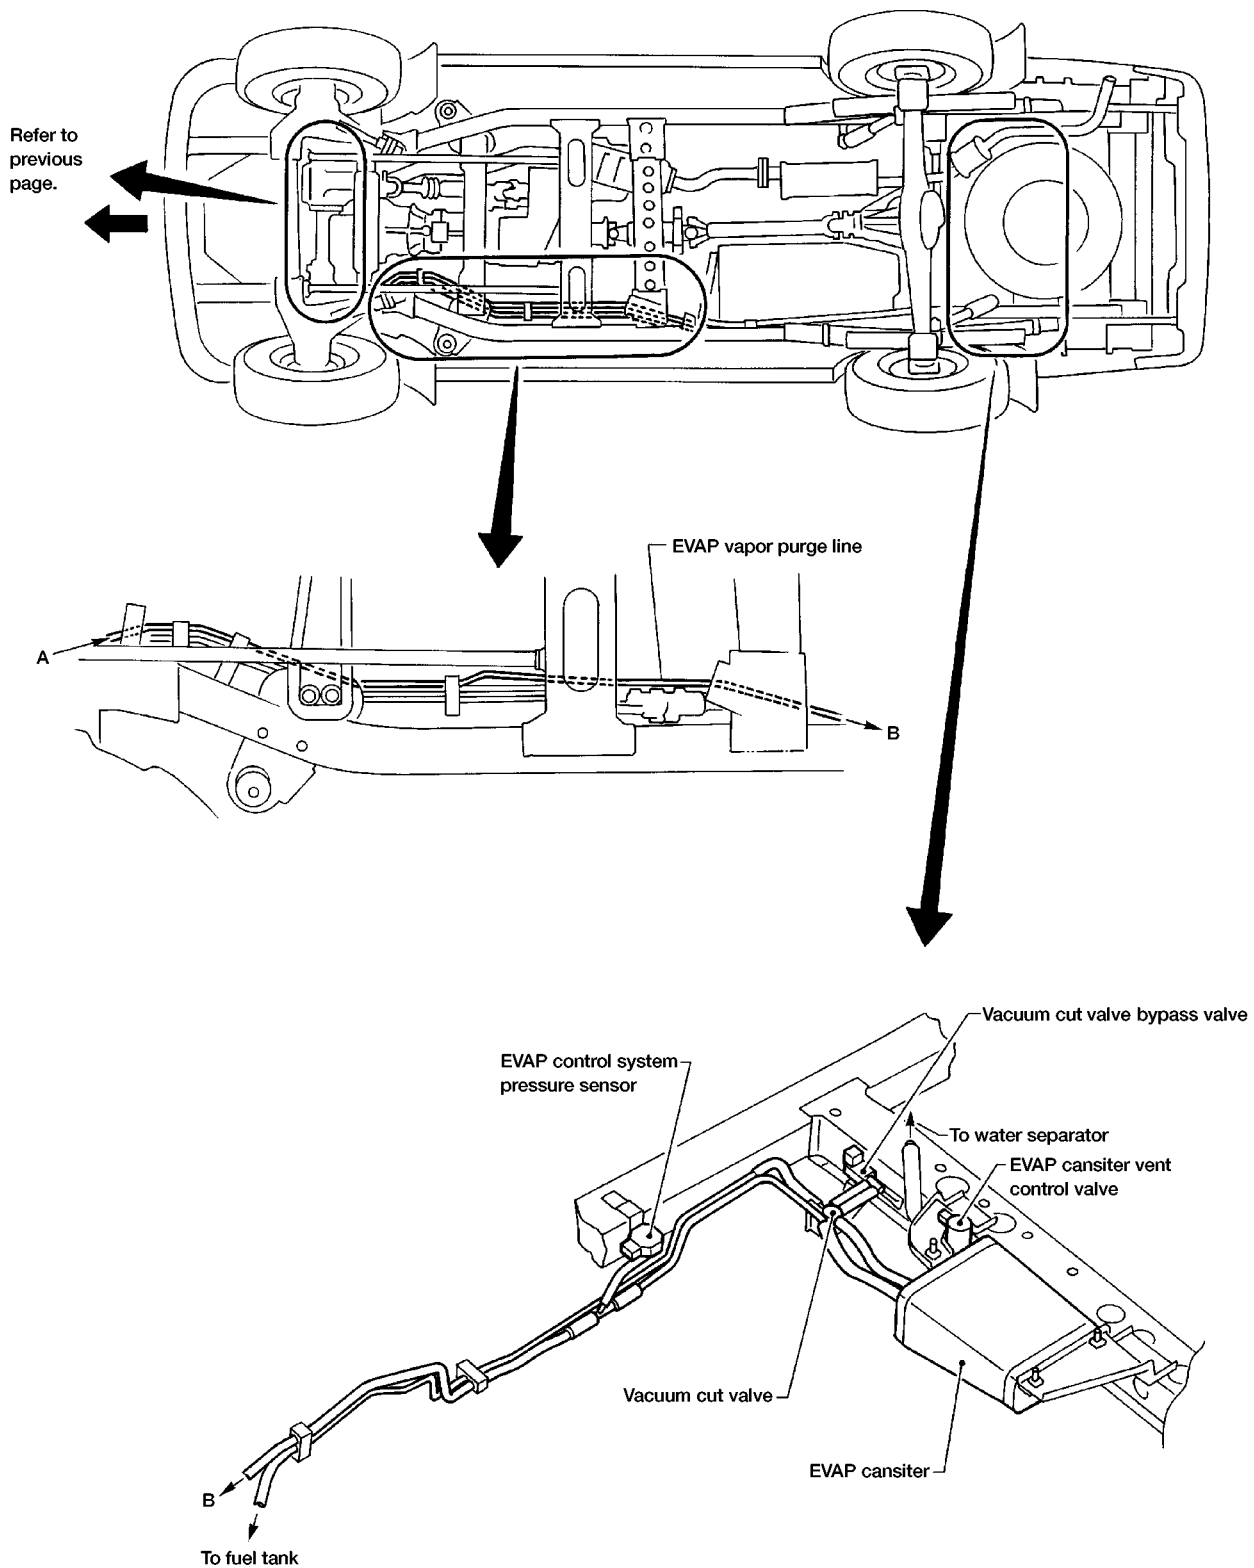


AEC869A

Positive Crankcase Ventilation

DESCRIPTION

NEEC0882

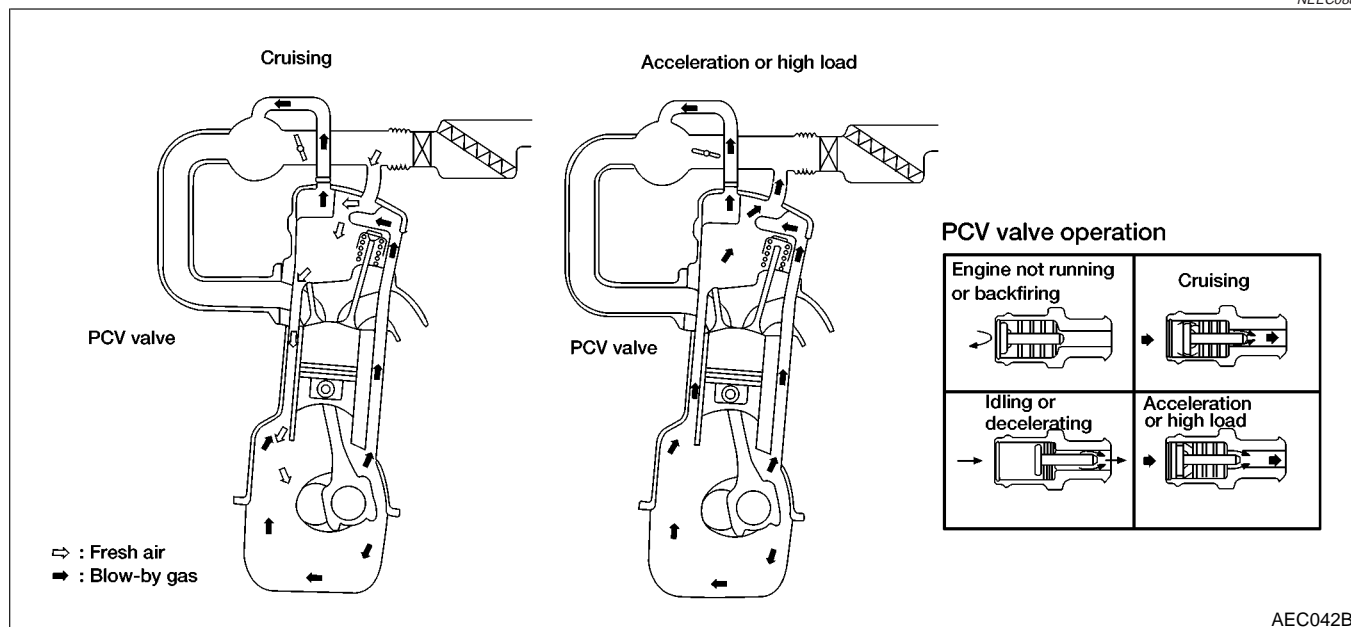

This system returns blow-by gas to the intake collector.


The positive crankcase ventilation (PCV) valve is provided to conduct crankcase blow-by gas to the intake manifold.

During partial throttle operation of the engine, the intake manifold sucks the blow-by gas through the PCV valve.

Normally, the capacity of the valve is sufficient to handle any blow-by and a small amount of ventilating air. The ventilating air is then drawn from the air duct into the crankcase. In this process the air passes through the hose connecting air inlet tubes to rocker cover.

Under full-throttle condition, the manifold vacuum is insufficient to draw the blow-by flow through the valve. The flow goes through the hose connection in the reverse direction.

On vehicles with an excessively high blow-by, the valve does not meet the requirement. This is because some of the flow will go through the hose connection to the intake collector under all conditions.

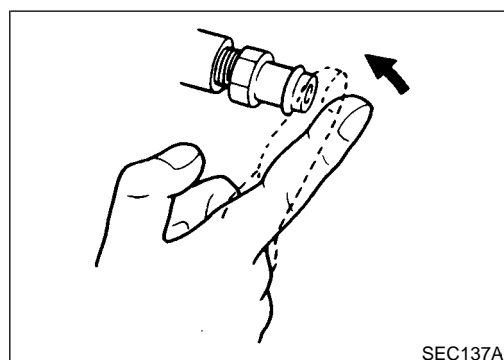


INSPECTION

NEEC0883

PCV (Positive Crankcase Ventilation) Valve

NEEC0883S01

With engine running at idle, remove PCV valve from breather separator. A properly working valve makes a hissing noise as air passes through it. A strong vacuum should be felt immediately when a finger is placed over the valve inlet.


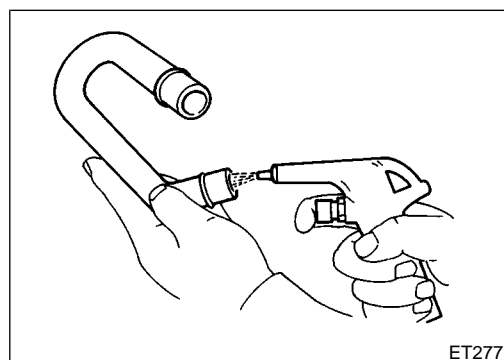


Ventilation Hose

NEEC0883S02

1. Check hoses and hose connections for leaks.
2. Disconnect all hoses and clean with compressed air. If any hose cannot be freed of obstructions, replace.

Fuel Pressure Release

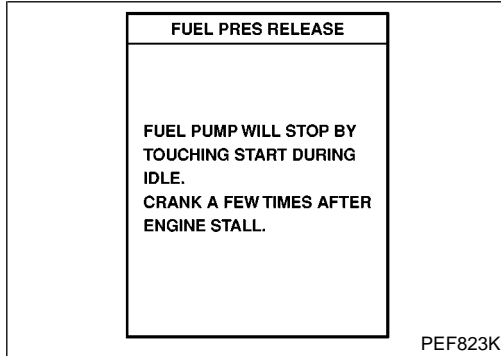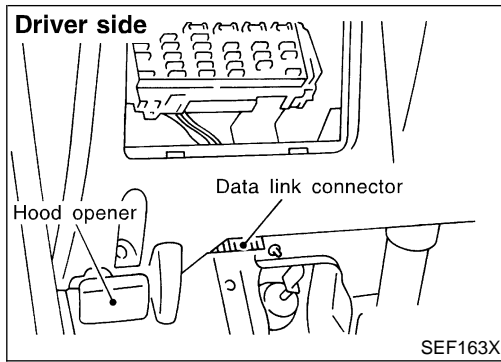

Fuel Pressure Release


Before disconnecting fuel line, release fuel pressure from fuel line to eliminate danger.

NEEC0884

Ⓜ WITH CONSULT-II

NEEC0884S01


1. Start engine.
2. Perform "FUEL PRESSURE RELEASE" in "WORK SUPPORT" mode with CONSULT-II.
3. After engine stalls, crank it two or three times to release all fuel pressure.
4. Turn ignition switch OFF.

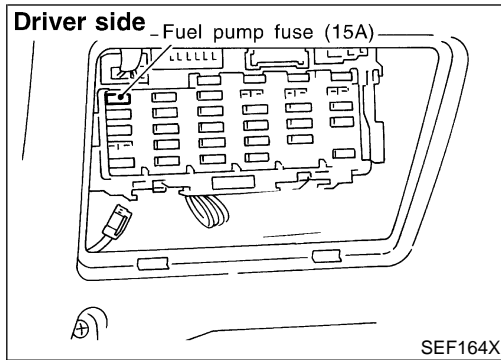

ⓧ WITHOUT CONSULT-II

NEEC0884S02

1. Remove fuse for fuel pump.
2. Start engine.
3. After engine stalls, crank it two or three times to release all fuel pressure.
4. Turn ignition switch OFF and reconnect fuel pump fuse.

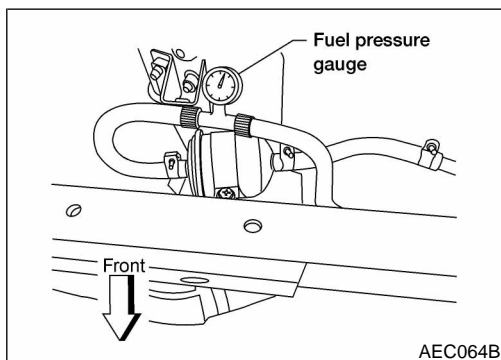

Fuel Pressure Check

NEEC0885

- When reconnecting fuel line, always use new clamps.
- Make sure that clamp screw does not contact adjacent parts.
- Use a torque driver to tighten clamps.
- Use Pressure Gauge to check fuel pressure.
- Do not perform fuel pressure check with system operating. Fuel pressure gauge may indicate false readings.

1. Release fuel pressure to zero.
2. Disconnect fuel hose between fuel filter and fuel tube (engine side).
3. Install pressure gauge between fuel filter and fuel tube.
4. Start engine and check for fuel leakage.
5. Read the indication of fuel pressure gauge.


At idle speed:

With vacuum hose connected


Approximately 235 kPa (2.4 kg/cm², 34 psi)

With vacuum hose disconnected

Approximately 294 kPa (3.0 kg/cm², 43 psi)

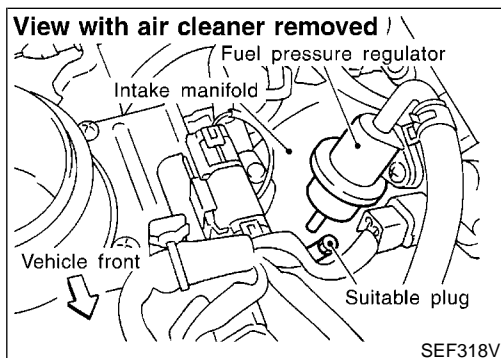

If results are unsatisfactory, perform Fuel Pressure Regulator Check, EC-41.

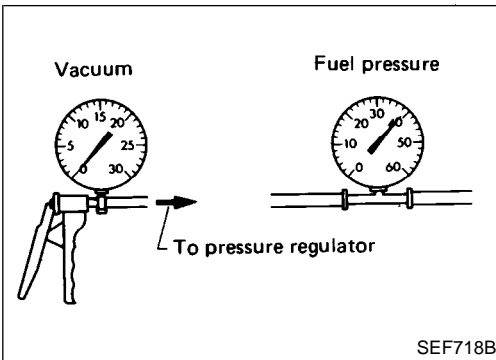


Fuel Pressure Regulator Check

NEEC0886

1. Stop engine and disconnect fuel pressure regulator vacuum hose from intake manifold.
2. Plug intake manifold with a rubber cap.
3. Connect variable vacuum source to fuel pressure regulator.
4. Start engine and read indication of fuel pressure gauge as vacuum is changed.

Fuel pressure should decrease as vacuum increases. If results are unsatisfactory, replace fuel pressure regulator.

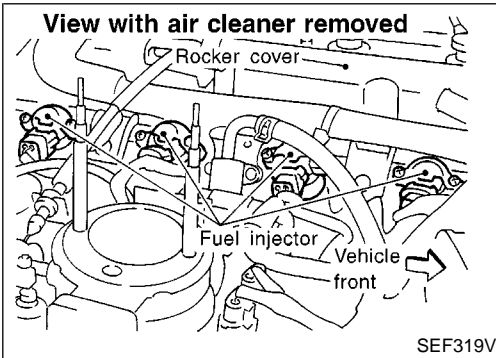


Injector

REMOVAL AND INSTALLATION

NEEC0887

1. Release fuel pressure to zero.
2. Remove injector tube assembly with injectors from intake manifold.
3. Remove injectors from injector tube assembly.
 - Push injector tail piece.
 - Do not pull on the connector.
4. Install injector to fuel tube assembly.
 - a. Clean exterior of injector tail piece.
 - b. Use new O-rings.



Always replace O-rings with new ones. Lubricate O-rings with a smear of engine oil.

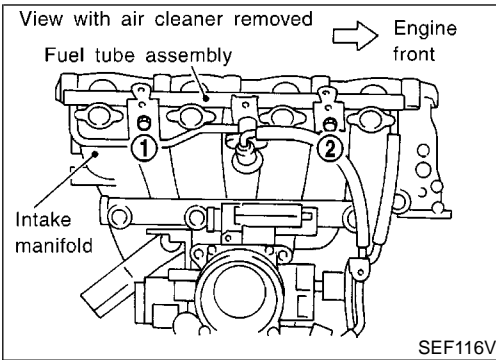

5. Install injectors with fuel tube assembly to intake manifold. **Tighten in numerical order shown in the figure.**
 - a. First, tighten all bolts to 9.3 to 10.8 N·m (0.95 to 1.1 kg-m, 6.9 to 8.0 ft-lb).
 - b. Then, tighten all bolts to 21 to 26 N·m (2.1 to 2.7 kg-m, 15 to 20 ft-lb).
6. Install fuel hoses to fuel tube assembly.
7. Reinstall any parts removed in reverse order of removal.

CAUTION:

After properly connecting injectors to fuel tube assembly, check connections for fuel leakage.

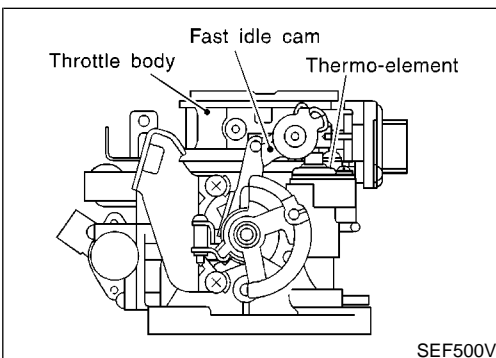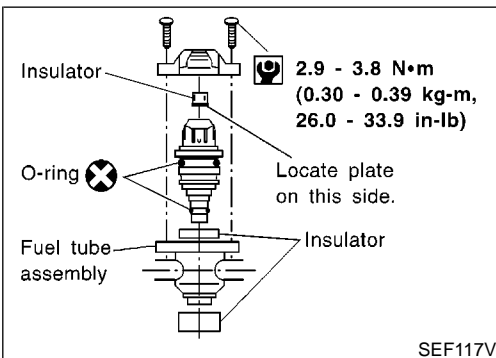

Fast Idle Cam (FIC)

COMPONENT DESCRIPTION

NEEC0888

The FIC is installed on the throttle body to maintain adequate engine speed while the engine is cold. It is operated by a volumetric change in wax located inside the thermo-element. The thermo-element is operated by engine coolant temperature.

For inspection refer to "TROUBLE DIAGNOSIS-BASIC INSPECTION", "Basic Inspection", EC-96.

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment

NEEC0889

NEEC0889S01

PREPARATION

- **Make sure that the following parts are in good order.**
 - a) **Battery**
 - b) **Ignition system**
 - c) **Engine oil and coolant levels**
 - d) **Fuses**
 - e) **ECM harness connector**
 - f) **Vacuum hoses**
 - g) **Air intake system**
(Oil filler cap, oil level gauge, etc.)
 - h) **Fuel pressure**
 - i) **Engine compression**
 - j) **EGR valve operation**
 - k) **Throttle valve**
 - l) **EVAP system**
- **On models equipped with air conditioner, checks should be carried out while the air conditioner is "OFF".**
- **On models equipped with automatic transaxle, when checking idle speed, ignition timing and mixture ratio, checks should be carried out while shift lever is in "P" or "N" position.**
- **When measuring "CO" percentage, insert probe more than 40 cm (15.7 in) into tail pipe.**
- **Turn off headlamps, heater blower, rear window defogger.**
- **Keep front wheels pointed straight ahead.**


BASIC SERVICE PROCEDURE

KA24DE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

Overall Inspection Sequence

NEEC0889S0101

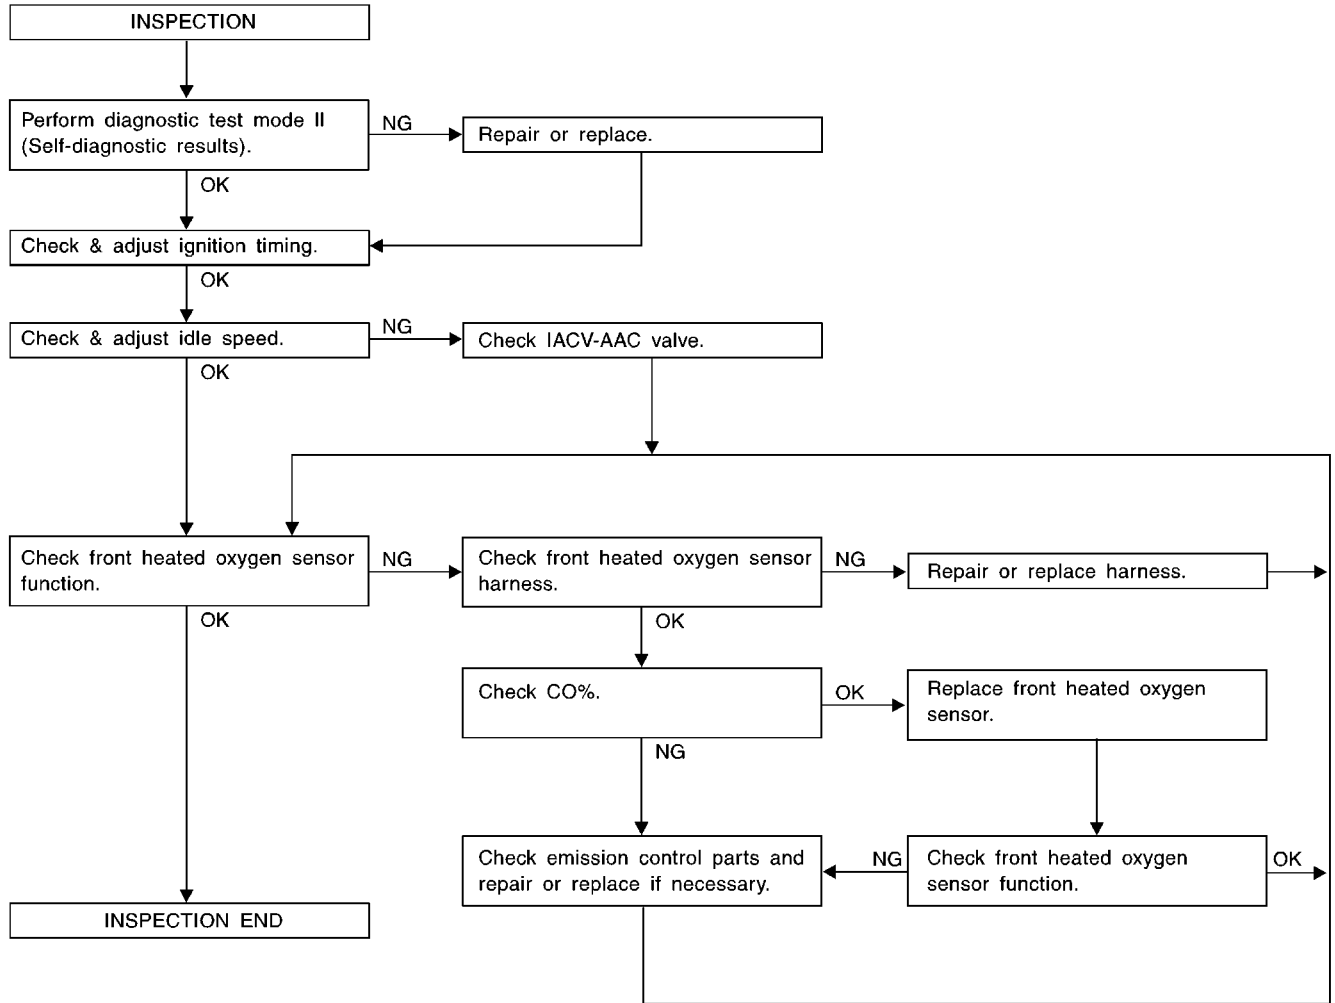

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

SEF941VB

RS

BT

HA



SC

EL

IDX

INSPECTION PROCEDURE

=NEEC0889S02

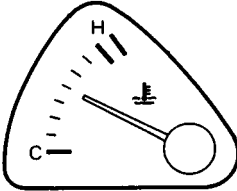
1	INSPECTION START	<p>1. Visually check the following:</p> <ul style="list-style-type: none"> ● Air cleaner clogging ● Hoses and duct for leaks ● EGR valve operation ● Electrical connectors ● Gasket (intake manifold, cylinder head, exhaust system) ● Throttle valve and throttle position sensor operation <p>2. Start engine and warm it up until engine coolant temperature indicator points to the middle of gauge. Ensure engine speed stays below 1,000 rpm.</p> <div style="text-align: center; margin: 20px 0;">  </div> <p style="text-align: right; margin-right: 20px;">SEF810K</p> <p>3. Open engine hood and run engine at about 2,000 rpm for about 2 minutes under no-load.</p> <p>4. Perform the Diagnostic Test Mode II (Self-diagnostic results). Refer to EC-72.</p> <div style="text-align: center; margin: 20px 0;">  </div> <p style="text-align: center; margin: 0 20px;">OK or NG</p> <p style="text-align: right; margin-right: 20px;">SEF217U</p>
OK	▶	<ul style="list-style-type: none"> ● GO TO 2. (With CONSULT-II) ● GO TO 3. (Without CONSULT-II)
NG	▶	<ol style="list-style-type: none"> 1. Repair or replace components as necessary. 2. GO TO 2. (With CONSULT-II) 3. GO TO 3. (Without CONSULT-II)

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

2 CHECK IGNITION TIMING

Ⓟ With CONSULT-II

1. Run engine at about 2,000 rpm for about 2 minutes under no-load.
2. Rev engine two or three times under no-load, then run engine at idle speed for about 1 minute.

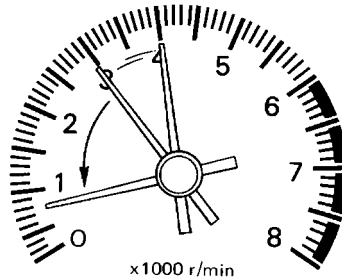

3. Select "IGNITION TIMING ADJ" in WORK SUPPORT mode.
4. Touch "START".


SEF978U

IGNITION TIMING ADJ

IGNITION TIMING FEEDBACK CONTROL WILL BE HELD BY TOUCHING START. AFTER DOING SO, ADJUST IGNITION TIMING WITH A TIMING LIGHT BY TURNING THE CAMSHAFT POSITION SENSOR.

PEF546N

5. Rev engine (2,000 to 3,000 rpm) two or three times under no-load, then run engine at idle speed.
6. Check ignition timing with a timing light.

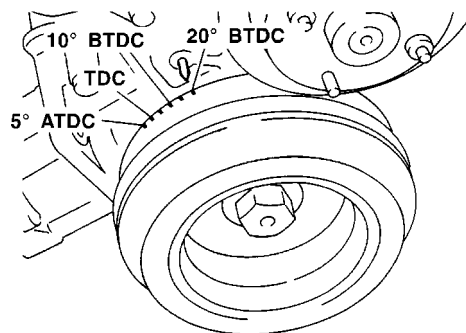

SEF320V

M/T: 20°±2° BTDC
A/T: 20°±2° BTDC (in "P" or "N" position)


OK or NG

OK	▶	GO TO 5.
NG	▶	GO TO 4.

3 CHECK IGNITION TIMING


⊗ Without CONSULT-II

1. Run engine at about 2,000 rpm for about 2 minutes under no-load.
2. Rev engine two or three times under no-load, then run engine at idle speed for about 1 minute.

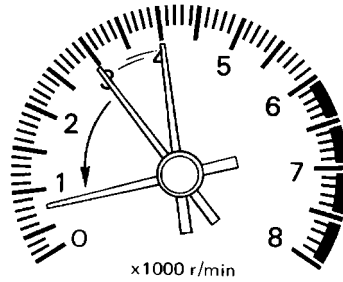


SEF978U

3. Turn off engine and disconnect throttle position sensor harness connector.

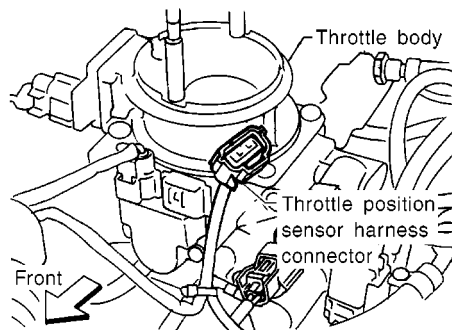

SEF265S

4. Start engine and rev it (2,000 to 3,000 rpm) two or three times under no-load, then run engine at idle speed.
5. Check ignition timing with a timing light.

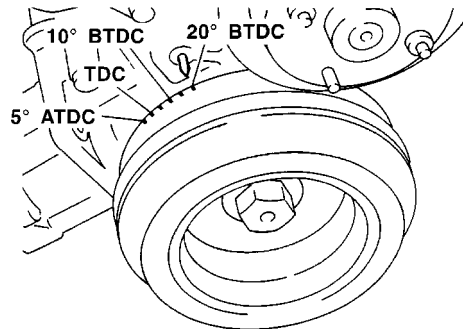


SEF320V

M/T: 20°±2° BTDC

A/T: 20°±2° BTDC (in "P" or "N" position)

OK or NG

OK	▶	GO TO 5.
NG	▶	GO TO 4.

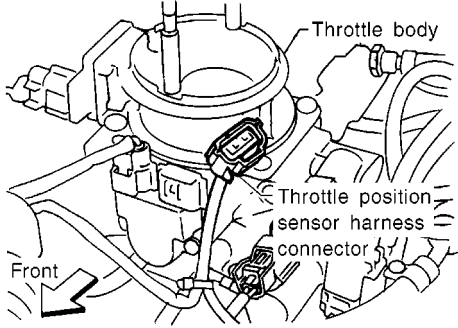
4	ADJUST IGNITION TIMING
<p>Ⓟ With CONSULT-II 1. Adjust ignition timing to the specified value by turning distributor after loosening bolts which secure distributor.</p>	
<p>ⓧ Without CONSULT-II 1. Adjust ignition timing to the specified value by turning distributor after loosening bolts which secure distributor. 2. Turn off engine and connect throttle position sensor harness connector to throttle position sensor.</p>	
	
SEF265S	
Models with CONSULT-II	▶ GO TO 2.
Models without CONSULT-II	▶ GO TO 3.

5	CHECK BASE IDLE SPEED																				
<p>Ⓟ With CONSULT-II 1. Read idle speed in "IGNITION TIMING ADJ" in "WORK SUPPORT" mode.</p>																					
<table border="1" style="margin: auto;"> <tr><td colspan="2" style="text-align: center;">IGNITION TIMING ADJ</td></tr> <tr><td colspan="2" style="text-align: center;">CONDITION SETTING</td></tr> <tr><td style="text-align: center;">IGN/T FEEDBACK</td><td style="text-align: center;">HOLD</td></tr> <tr><td colspan="2" style="text-align: center;">MONITOR</td></tr> <tr><td style="text-align: center;">CMPS-RPM(REF)</td><td style="text-align: center;">XXX rpm</td></tr> <tr><td style="text-align: center;">IGN TIMING</td><td style="text-align: center;">XXX BTDC</td></tr> <tr><td style="text-align: center;">CLSD THL POS</td><td style="text-align: center;">ON</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>		IGNITION TIMING ADJ		CONDITION SETTING		IGN/T FEEDBACK	HOLD	MONITOR		CMPS-RPM(REF)	XXX rpm	IGN TIMING	XXX BTDC	CLSD THL POS	ON						
IGNITION TIMING ADJ																					
CONDITION SETTING																					
IGN/T FEEDBACK	HOLD																				
MONITOR																					
CMPS-RPM(REF)	XXX rpm																				
IGN TIMING	XXX BTDC																				
CLSD THL POS	ON																				
PEF773W																					
<p>M/T: 750±50 rpm A/T: 750±50 rpm (in "P" or "N" position)</p>																					
<p>ⓧ Without CONSULT-II 1. Check idle speed. M/T: 750±50 rpm A/T: 750±50 rpm (in "P" or "N" position)</p>																					
OK or NG																					
OK (With CONSULT-II)	▶ GO TO 7.																				
OK (Without CONSULT-II)	▶ GO TO 8.																				
NG	▶ GO TO 6.																				

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

6 ADJUST BASE IDLE SPEED

1. Rev engine (2,000 to 3,000 rpm) two or three times under no-load, then run engine at idle speed.
2. Adjust idle speed by turning idle speed adjusting screw.

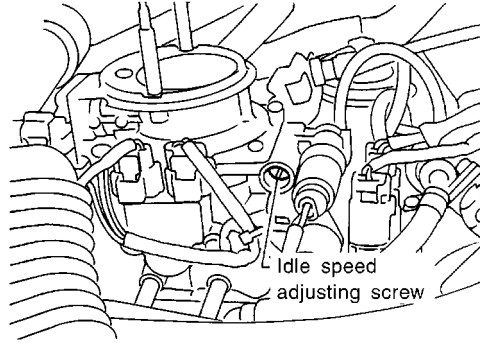

M/T: 750±50 rpm
A/T: 750±50 rpm (in "P" or "N" position)

SEF240SA


Models with CONSULT-II ► GO TO 7.

Models without CONSULT-II ► GO TO 8.

7 CHECK TARGET IDLE SPEED

With CONSULT-II

1. Touch "BACK" on CONSULT-II.
2. Rev engine (2,000 to 3,000 rpm) two or three times under no-load, then run engine at idle speed.

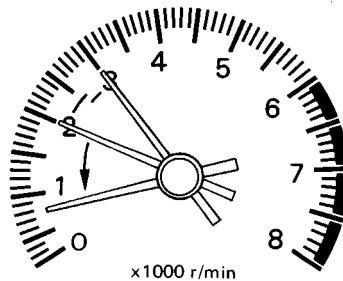

SEF602K

3. Read idle speed in "DATA MONITOR" mode with CONSULT-II.

DATA MONITOR	
MONITORING	NO FAIL
CMPS~RPM(REF)	XXX rpm


PEF190P

M/T: 800±50 rpm
A/T: 800±50 rpm (in "P" or "N" position)

OK or NG

OK ► GO TO 10.

NG ► GO TO 9.

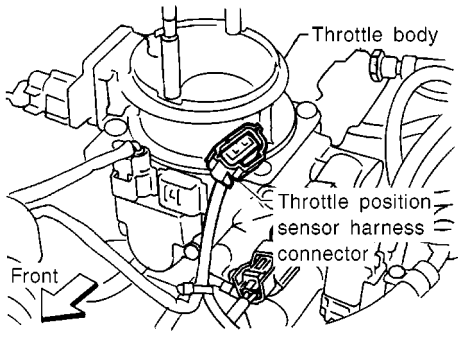8	CHECK TARGET IDLE SPEED	<p>⊗ Without CONSULT-II</p> <p>1. Turn off engine and connect throttle position sensor harness connector.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF265S</p> <p>2. Start engine. 3. Rev engine (2,000 to 3,000 rpm) two or three times under no-load, then run engine at idle speed. 4. Check target idle speed. M/T: 800±50 rpm A/T: 800±50 rpm (in "P" or "N" position)</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 10.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 9.</td> </tr> </table>	OK	▶	GO TO 10.	NG	▶	GO TO 9.	GI MA EM LC <div style="background-color: black; color: white; padding: 5px;">EC</div> FE CL MT AT TF PD AX SU BR ST RS BT HA SC EL IDX
OK	▶	GO TO 10.							
NG	▶	GO TO 9.							

9	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <p>1. Check IACV-AAC valve and replace if necessary. Refer to EC-416. 2. Check IACV-AAC valve harness and repair if necessary. Refer to EC-416. 3. Check ECM function by substituting another known good ECM. (ECM may be the cause of a problem, but this is rarely the case.)</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;"></td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 10.</td> </tr> </table>		▶	GO TO 10.	
	▶	GO TO 10.				

10	CHECK FRONT HEATED OXYGEN SENSOR SIGNAL
-----------	--

Ⓟ With CONSULT-II

1. See "FR O2 MNTR" in "DATA MONITOR" mode.
2. Run engine at about 2,000 rpm for about 2 minutes under no-load.
3. Maintain engine at 2,000 rpm under no-load (engine is warmed up to normal operating temperature) and check that the monitor fluctuates between "LEAN" and "RICH" more than five times during 10 seconds.

DATA MONITOR	
MONITORING	NO FAIL
CMPS~RPM(REF)	XXX rpm
FR O2 MNTR	RICH


PEF054P

1 cycle: RICH → LEAN → RICH

2 cycles: RICH → LEAN → RICH → LEAN → RICH

ⓧ Without CONSULT-II

1. Set "Front heated oxygen sensor monitor" in the Diagnostic Test Mode II. (See page EC-70.)

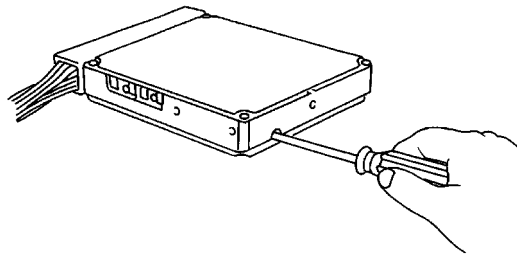

SEF979U

2. Run engine at about 2,000 rpm for about 2 minutes under no-load (engine is warmed up to normal operating temperature).
3. Maintain engine at 2,000 rpm under no-load and check that MIL goes on more than five times during 10 seconds.




SEF217U

OK or NG

OK	▶	INSPECTION END
NG	▶	GO TO 11.

11	CHECK FRONT HEATED OXYGEN SENSOR HARNESS
<p>1. Turn off engine and disconnect battery ground cable. 2. Disconnect ECM harness connector. 3. Disconnect front heated oxygen sensor harness connector. 4. Then connect harness connector terminal for front heated oxygen sensor to ground with a jumper wire.</p> <div style="text-align: center;"> <p>Front heated oxygen sensor harness connector</p> </div> <p style="text-align: right;">SEF508V</p> <p>5. Check for continuity between terminal 50 of ECM harness connector and body ground.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SEF250P</p> <p>Continuity exists...OK Continuity does not exist...NG</p> <p style="text-align: center;">OK or NG</p>	
OK	<p>▶ 1. Connect ECM harness connector to ECM. 2. Connect battery ground cable. 3. GO TO 13.</p>
NG	<p>▶ 1. Repair or replace harness. 2. GO TO 12.</p>

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

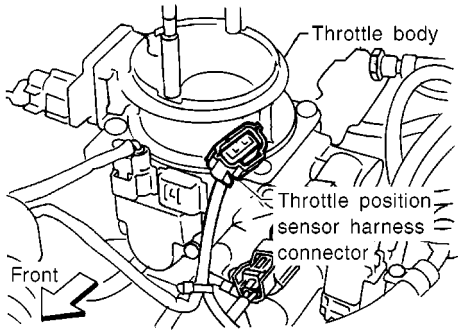12	PREPARATION FOR IDLE SPEED ADJUSTING
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Select "IGNITION TIMING ADJ" in "WORK SUPPORT" mode. 2. Touch "START". <div style="border: 1px solid black; padding: 10px; margin: 10px auto; width: 60%; text-align: center;"> <p>IGNITION TIMING ADJ</p> <p>IGNITION TIMING FEEDBACK CONTROL WILL BE HELD BY TOUCHING START. AFTER DOING SO, ADJUST IGNITION TIMING WITH A TIMING LIGHT BY TURNING THE CAMSHAFT POSITION SENSOR.</p> </div> <p style="text-align: right; margin-top: 10px;">PEF546N</p>	
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Stop engine and disconnect throttle position sensor harness connector. <div style="text-align: center; margin: 10px 0;">  </div> <p>2. Start engine.</p> <p style="text-align: right; margin-top: 10px;">SEF265S</p>	
▶	GO TO 6.

13 PREPARATION FOR "CO" % CHECK

Ⓜ With CONSULT-II

1. Select "ENGINE COOLANT TEMP" in "ACTIVE TEST" mode.
2. Set "COOLANT TEMP" to 5°C (41°F) by touching "Qu" and "Qd" and "UP", "DOWN".


ACTIVE TEST	
COOLANT TEMP	XXX
MONITOR	
CMPS~RPM(REF)	XXX rpm
INJ PULSE	XXX msec
IGN TIMING	XXX BTDC

PEF946W

1. Connect ECM harness connector to ECM.
2. Disconnect engine coolant temperature sensor harness connector.
3. Connect a resistor (4.4 kΩ) between terminals of engine coolant temperature sensor harness connector.



Engine coolant temperature sensor harness connector

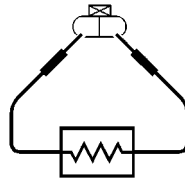



4.4 kΩ resistor

SEF053RA

4. Connect battery ground cable.

▶ GO TO 14.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

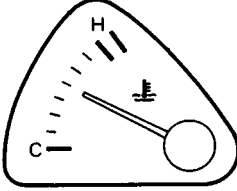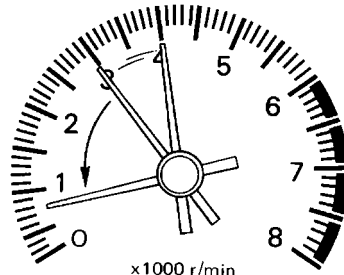14	CHECK "CO" %						
<p><input checked="" type="checkbox"/> Without CONSULT-II</p> <p>1. Start engine and warm it up until engine coolant temperature indicator points to middle of gauge. (Be sure to start engine after setting "COOLANT TEMP" or installing a 4.4 kΩ resistor.)</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF810K</p> <p>2. Rev engine two or three times under no-load, then run engine at idle speed.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF978U</p> <p>3. Check "CO"%. Idle CO: 2.9 - 10.8% and engine runs smoothly.</p> <p>4. <input type="checkbox"/> With CONSULT-II After checking CO%, touch "BACK".</p> <p>5. <input checked="" type="checkbox"/> Without CONSULT-II After checking CO%,</p> <ol style="list-style-type: none"> a. Disconnect the resistor from terminals of engine coolant temperature sensor harness connector. b. Connect engine coolant temperature sensor harness connector to engine coolant temperature sensor. <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 15.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 16.</td> </tr> </table>		OK	▶	GO TO 15.	NG	▶	GO TO 16.
OK	▶	GO TO 15.					
NG	▶	GO TO 16.					

15	CHECK FRONT HEATED OXYGEN SENSOR SIGNAL						
<p><input type="checkbox"/> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Replace front heated oxygen sensor. 2. See "FR O2 MNTR" in "DATA MONITOR" mode. 3. Maintain engine at 2,000 rpm under no-load (engine is warmed up to normal operating temperature.). Check that the monitor fluctuates between "LEAN" and "RICH" more than five times during 10 seconds. 1 cycle: RICH → LEAN → RICH 2 cycles: RICH → LEAN → RICH → LEAN → RICH <p><input checked="" type="checkbox"/> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Replace front heated oxygen sensor. 2. Set "Front heated oxygen sensor monitor" in the Diagnostic Test Mode II. (See page EC-70.) 3. Maintain engine at 2,000 rpm under no-load. Check that the malfunction indicator lamp goes on and off more than five times during 10 seconds. <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 12.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 16.</td> </tr> </table>		OK	▶	GO TO 12.	NG	▶	GO TO 16.
OK	▶	GO TO 12.					
NG	▶	GO TO 16.					

BASIC SERVICE PROCEDURE

KA24DE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

16	DETECT MALFUNCTIONING PART
	<ol style="list-style-type: none">1. Connect front heated oxygen sensor harness connector to front heated oxygen sensor.2. Check fuel pressure regulator. Refer to EC-41.3. Check mass air flow sensor and its circuit. Refer to EC-137.4. Check injector and its circuit. Refer to EC-562. Clean or replace if necessary.5. Check engine coolant temperature sensor and its circuit. Refer to EC-168, 187.6. Check ECM function by substituting another known good ECM. (ECM may be the cause of a problem, but this is rarely the case.)
	▶ GO TO 12.

- **If a vehicle contains a part which is operating outside of design specifications with no MIL illumination, the part shall not be replaced prior to emission testing unless it is determined that the part has been tampered with or abused in such a way that the diagnostic system cannot reasonably be expected to detect the resulting malfunction.**

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

Introduction

NEEC0890

The ECM has an on board diagnostic system which detects malfunctions related to engine sensors or actuators. The ECM also records various emission-related diagnostic information including:

Diagnostic Trouble Code (DTC)	Mode 3 of SAE J1979
Freeze Frame data	Mode 2 of SAE J1979
System Readiness Test (SRT) code	Mode 1 of SAE J1979
1st Trip Diagnostic Trouble Code (1st Trip DTC)	Mode 7 of SAE J1979
1st Trip Freeze Frame data	
Test values and Test limits	Mode 6 of SAE J1979

The above information can be checked using procedures listed in the table below.

X: Applicable —: Not applicable

	DTC	1st trip DTC	Freeze Frame data	1st trip Freeze Frame data	SRT code	Test value
ECM*3	X	X*1	—	—	—	—
CONSULT-II	X	X	X	X	X	—
GST	X	X*2	X	—	X	X

*1: When DTC and 1st trip DTC simultaneously appear on the display, they cannot be clearly distinguished from each other.

*2: 1st trip DTCs for self-diagnoses concerning SRT items cannot be shown on the GST display.

*3: In diagnostic test mode II (Self-diagnostic results)

The malfunction indicator lamp (MIL) on the instrument panel lights up when the same malfunction is detected in two consecutive trips (Two trip detection logic), or when the ECM enters fail-safe mode. (Refer to EC-111.)

Two Trip Detection Logic

NEEC0891

When a malfunction is detected for the first time, 1st trip DTC and 1st trip Freeze Frame data are stored in the ECM memory. The MIL will not light up at this stage. <1st trip>

If the same malfunction is detected again during the next drive, the DTC and Freeze Frame data are stored in the ECM memory, and the MIL lights up. The MIL lights up at the same time when the DTC is stored. <2nd trip> The “trip” in the “Two Trip Detection Logic” means a driving mode in which self-diagnosis is performed during vehicle operation. Specific on board diagnostic items will cause the ECM to light up or blink the MIL, and store DTC and Freeze Frame data, even in the 1st trip, as shown below.

X: Applicable —: Not applicable

Items	MIL				DTC		1st trip DTC	
	1st trip		2nd trip		1st trip displaying	2nd trip displaying	1st trip displaying	2nd trip displaying
	Blinking	Lighting up	Blinking	Lighting up				
Misfire (Possible three way catalyst damage) — DTC: P0300 - P0304 (0701, 0605 - 0608) is being detected	X	—	—	—	X	—	X	—
Misfire (Possible three way catalyst damage) — DTC: P0300 - P0304 (0701, 0605 - 0608) is being detected	—	—	X	—	—	X	—	—
Closed loop control — DTC: P1148 (0307)	—	X	—	—	X	—	X	—
Fail-safe items	—	X	—	—	X*1	—	X*1	—
Except above	—	—	—	X	—	X	X	—

*1: Except “ECM”.

Emission-related Diagnostic Information

NEEC0892

NEEC0892S01

DTC AND 1ST TRIP DTC

The 1st trip DTC (whose number is the same as the DTC number) is displayed for the latest self-diagnostic result obtained. If the ECM memory was cleared previously, and the 1st trip DTC did not reoccur, the 1st trip DTC will not be displayed. If a malfunction is detected during the 1st trip, the 1st trip DTC is stored in the ECM memory. The MIL will not light up (two trip detection logic). If the same malfunction is not detected in the 2nd trip (meeting the required driving pattern), the 1st trip DTC is cleared from the ECM memory. If the same malfunction is detected in the 2nd trip, both the 1st trip DTC and DTC are stored in the ECM memory and the MIL lights up. In other words, the DTC is stored in the ECM memory and the MIL lights up when the same malfunction occurs in two consecutive trips. If a 1st trip DTC is stored and a non-diagnostic operation is performed between the 1st and 2nd trips, only the 1st trip DTC will continue to be stored. For malfunctions that blink or light up the MIL during the 1st trip, the DTC and 1st trip DTC are stored in the ECM memory. Procedures for clearing the DTC and the 1st trip DTC from the ECM memory are described in "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION". Refer to EC-69.

For malfunctions in which 1st trip DTCs are displayed, refer to EC-67. These items are required by legal regulations to continuously monitor the system/component. In addition, the items monitored non-continuously are also displayed on CONSULT-II.




1st trip DTC is specified in Mode 7 of SAE J1979. 1st trip DTC detection occurs without lighting up the MIL and therefore does not warn the driver of a problem. However, 1st trip DTC detection will not prevent the vehicle from being tested, for example during Inspection/Maintenance (I/M) tests.

When a 1st trip DTC is detected, check, print out or write down and erase (1st trip) DTC and Freeze Frame data as specified in "Work Flow" procedure Step II, refer to page EC-94. Then perform "DTC Confirmation Procedure" or "Overall Function Check" to try to duplicate the problem. If the malfunction is duplicated, the item requires repair.

How to read DTC and 1st Trip DTC

NEEC0892S0101

DTC and 1st trip DTC can be read by the following methods.

- 1)  **No Tools**
The number of blinks of MIL in the Diagnostic Test Mode II (Self-Diagnostic Results) Examples: 0101, 0201, 1003, 1104, etc.
These DTCs are controlled by NISSAN.
 - 2)  **With CONSULT-II**
 **With GST**
CONSULT-II or GST (Generic Scan Tool) Examples: P0340, P1320, P0705, P0750, etc.
These DTCs are prescribed by SAE J2012.
(CONSULT-II also displays the malfunctioning component or system.)
- **1st trip DTC No. is the same as DTC No.**
 - **Output of a DTC indicates a malfunction. However, Mode II and GST do not indicate whether the malfunction is still occurring or has occurred in the past and has returned to normal. CONSULT-II can identify malfunction status as shown below. Therefore, using CONSULT-II (if available) is recommended.**

A sample of CONSULT-II display for DTC is shown below. DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode of CONSULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.

If the DTC is being detected currently, the time data will be "0".
If a 1st trip DTC is stored in the ECM, the time data will be "[1t]".

DTC display	SELF DIAG RESULTS		SELF DIAG RESULTS	
	FAILURE DETECTED	TIME	FAILURE DETECTED	TIME
	IACV-AAC VALVE [P0505]	0	IACV-AAC VALVE [P0505]	1t
1st trip DTC display	SELF DIAG RESULTS		SELF DIAG RESULTS	
	FAILURE DETECTED	TIME	FAILURE DETECTED	TIME
	IACV-AAC VALVE [P0505]	0	IACV-AAC VALVE [P0505]	1t

AEC037B

FREEZE FRAME DATA AND 1ST TRIP FREEZE FRAME DATA

NEEC0892S02

The ECM records the driving conditions such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed, vehicle speed and absolute pressure sensor at the moment a malfunction is detected.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data. The data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-II screen, not on the GST. For details, see EC-82.

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items	
1	Freeze frame data	Misfire — DTC: P0300 - P0304 (0701, 0605 - 0608) Fuel Injection System Function — DTC: P0171 (0115), P0172 (0114)
2		Except the above items (Includes A/T related items)
3	1st trip freeze frame data	

For example, the EGR malfunction (Priority: 2) was detected and the freeze frame data was stored in the 2nd trip. After that when the misfire (Priority: 1) is detected in another trip, the freeze frame data will be updated from the EGR malfunction to the misfire. The 1st trip freeze frame data is updated each time a different malfunction is detected. There is no priority for 1st trip freeze frame data. However, once freeze frame data is stored in the ECM memory, 1st trip freeze data is no longer stored (because only one freeze frame data or 1st trip freeze frame data can be stored in the ECM). If freeze frame data is stored in the ECM memory and freeze frame data with the same priority occurs later, the first (original) freeze frame data remains unchanged in the ECM memory.

Both 1st trip freeze frame data and freeze frame data (along with the DTCs) are cleared when the ECM memory is erased. Procedures for clearing the ECM memory are described in "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION". Refer to EC-69.

SYSTEM READINESS TEST (SRT) CODE

NEEC0892S03

System Readiness Test (SRT) code is specified in Mode 1 of SAE J1979.

As part of enhanced emissions test for Inspection and Maintenance (I/M), certain states require that the status of srt be used to indicate whether the ECM has completed self-diagnosis of major emission systems and components. Completion must be verified in order for the emissions inspection to proceed.

If a vehicle is rejected for a State emissions inspection due to one or more SRT items indicating "incomplete", use the information in this service manual to set the SRT to "complete".

In most cases, the ECM will automatically complete its self-diagnosis cycle during normal usage and the SRT status will indicate "complete" for each application system. Once set as "complete", the SRT status remains "complete" until the self-diagnosis memory is erased.

Occasionally, certain portions of the self-diagnostic test may not be completed as a result of the customer's normal driving pattern and the SRT will indicate "incomplete" for these items.

NOTE:

The SRT will also indicate "incomplete" if the self-diagnosis memory is erased for any reason or if the ECM memory power supply is interrupted for several hours.

If, during the state emissions inspection, the SRT indicates "complete" for all test items, the inspector will continue with the emissions test. However, if the SRT indicates "incomplete" for one or more of the SRT items, the vehicle is returned to the customer untested.

NOTE:

If MIL is "ON" during the state emissions inspection, the vehicle is also returned to the customer untested even though the SRT indicates "complete" for all test items. Therefore, it is important to check SRT ("complete") and DTC (No DTCs) before the inspection.

This service manual contains the service procedure and support information to perform a comprehensive road test that enables the ECM to complete the SRT.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

KA24DE

Emission-related Diagnostic Information (Cont'd)

The following table shows required self-diagnostic items to set the SRT to "CMPLT".

SRT item (CONSULT-II indication)	Performance Priority *1	Required self-diagnostic items to set the SRT to "complete"	Corresponding DTC No.
CATALYST	3	Three way catalyst function	P0420, P0430
EVAP SYSTEM	2	EVAP control system (small leak) (negative pressure)	P0440
	–	EVAP control system (small leak) (positive pressure)	P1440 *2
	3	EVAP control system purge flow monitoring	P1447
O2 SENSOR	3	Front heated oxygen sensor (circuit)	P0130, P0150
		Front heated oxygen sensor (lean shift monitoring)	P0131, P0151
		Front heated oxygen sensor (rich shift monitoring)	P0132, P0152
		Front heated oxygen sensor (response monitoring)	P0133, P0153
		Front heated oxygen sensor (high voltage)	P0134, P0154
		Rear heated oxygen sensor (min. voltage monitoring)	P0137, P0157
		Rear heated oxygen sensor (max. voltage monitoring)	P0138, P0158
		Rear heated oxygen sensor (response monitoring)	P0139, P0159
		Rear heated oxygen sensor (high voltage)	P0140, P0160
O2 SEN HEATER	3	Front heated oxygen sensor heater	P0135, P0155
		Rear heated oxygen sensor heater	P0141, P0161
EGR SYSTEM	3	EGR function (close)	P0400
		EGRC-BPT valve function	P0402
	1	EGR function (open)	P1402

*1: If completion of several SRTs is required, perform driving patterns (DTC confirmation procedure) one by one based on the priority for models with CONSULT-II.

*2: P1440 [EVAP control system (small leak) (positive pressure) diagnosis] is a kind of the SRT related diagnosis. This diagnosis, however, does not contribute to setting the SRT as "complete" when no malfunction exists in the EVAP system. Therefore, P0440 must be used instead of P1440.

SRT Set Timing

SRT is set as "complete" after self-diagnosis has been performed one or more times. Completion of SRT will occur if the result is OK or NG. The set timing is different between them and is shown in the following table.

NGEC0031S0310

Self-diagnosis result		Example				
		Diagnosis	Ignition OFF – ON – OFF	Ignition OFF – ON – OFF	Ignition OFF – ON – OFF	Ignition OFF – ON – OFF
All OK	Case 1	P0400	OK (1)	– (1)	OK (2)	– (2)
		P0402	OK (1)	– (1)	– (1)	OK (2)
		P1402	OK (1)	OK (2)	– (2)	– (2)
		SRT of EGR	“complete”	“complete”	“complete”	“complete”
	Case 2	P0400	OK (1)	– (1)	– (1)	– (1)
		P0402	– (0)	– (0)	OK (1)	– (1)
		P1402	OK (1)	OK (2)	– (2)	– (2)
		SRT of EGR	“incomplete”	“incomplete”	“complete”	“complete”
NG exists	Case 3	P0400	OK	OK	–	–
		P0402	–	–	–	–
		P1402	NG	–	NG	NG (Consecutive NG)
		(1st trip) DTC	1st trip DTC	–	1st trip DTC	DTC (=MIL “ON”)
		SRT of EGR	“incomplete”	“incomplete”	“incomplete”	“complete”

OK: Self-diagnosis is carried out and the result is OK.

NG: Self-diagnosis is carried out and the result is OK.

– : Self-diagnosis is not carried out.

When all SRT related self-diagnoses showed OK results in a same cycle (Ignition OFF – ON – OFF), the SRT will indicate “complete”.

→ Case 1 above

When all SRT related self-diagnoses show OK results through several different cycles, the SRT will indicate “complete” at the time the respective self-diagnoses have at least one OK result.

→ Case 2 above

If one or more SRT related self-diagnoses showed NG results in 2 consecutive cycles, the SRT will also indicate “complete”.

→ Case 3 above

The previous table shows that the minimum number of cycles for setting SRT as “incomplete” is one (1) for each self-diagnosis (Case 1 and 2) or two (2) for one self-diagnosis (Case 3). However, in preparation for the State emissions inspection, it is unnecessary of each self-diagnosis to be executed twice (Case 3) because of the following reasons;



- The SRT will indicate “complete” at the time the respective self-diagnoses have one (1) OK result.
- The emissions inspection requires “complete” of the SRT only with OK self-diagnosis result.
- When, during SRT driving pattern, 1st trip DTC (NG) is detected prior to “complete” of SRT, the self-diagnosis memory must be erased from ECM after repair.
- If the 1st trip DTC is erased, all the SRT will indicate “incomplete”.

NOTE:

SRT can be set as “complete” together with the DTC(s). Therefore, DTC check must always be carried out prior to the State emission inspection even though the SRT indicates “complete”.

How to Display SRT Code

-NEEC0892S0301

1.  **With CONSULT-II**
 Selecting "SRT STATUS" in "DTC CONFIRMATION" mode with CONSULT-II.
 For items whose SRT codes are set, a "CMPLT" is displayed on the CONSULT-II screen; for items whose SRT codes are not set, "INCMP" is displayed.
2.  **With GST**
 Selecting Mode 1 with GST (Generic Scan Tool)

A sample of CONSULT-II display for SRT code is shown below.
 "INCMP" means the self-diagnosis is incomplete and SRT is not set. "CMPLT" means the self-diagnosis is complete and SRT is set.

SRT STATUS	
CATALYST	CMPLT
EVAP SYSTEM	INCMP
O2 SENSOR	CMPLT
O2 SEN HEATER	CMPLT
EGR SYSTEM	INCMP

PEF948W

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX

SRT Service Procedure

=NGEC0031S0311

If a vehicle has been rejected for the State emissions inspection due to one or more SRT items indicating "incomplete", review the following flowchart diagnostic sequence.

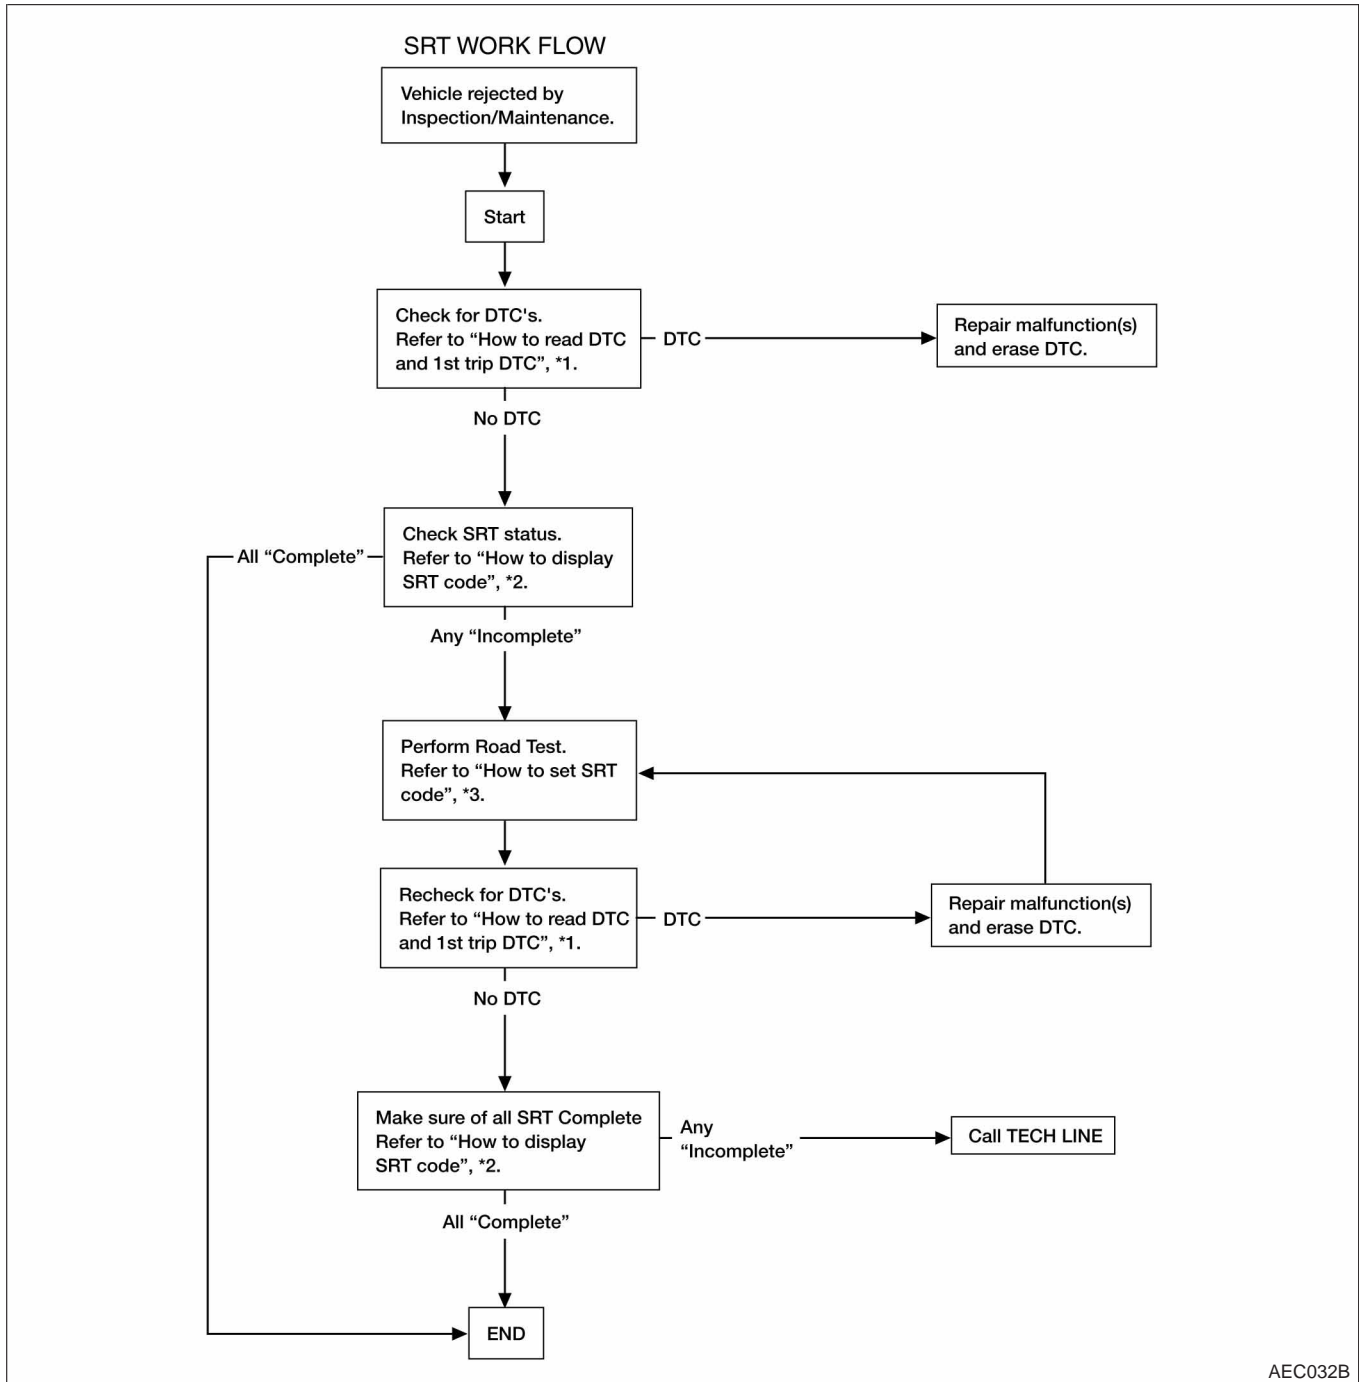

AEC032B

*1 EC-57

*2 EC-61

*3 EC-63

How to Set SRT Code

=NEEC0892S0302

To set all SRT codes, self-diagnosis for the items indicated above must be performed one or more times. Each diagnosis may require a long period of actual driving under various conditions.

With CONSULT-II

Perform corresponding DTC confirmation procedure one by one based on "Performance Priority" in the table on EC-58.

Without CONSULT-II

The most efficient driving pattern in which SRT codes can be properly set is explained on EC-64. The driving pattern should be performed one or more times to set all SRT codes.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL


IDX

Driving Pattern

NEEC0892S0303

Note: Always drive vehicle in safe manner according to traffic conditions and obey all traffic laws. Refer to next page for more information and explanation of chart.

Driving pattern

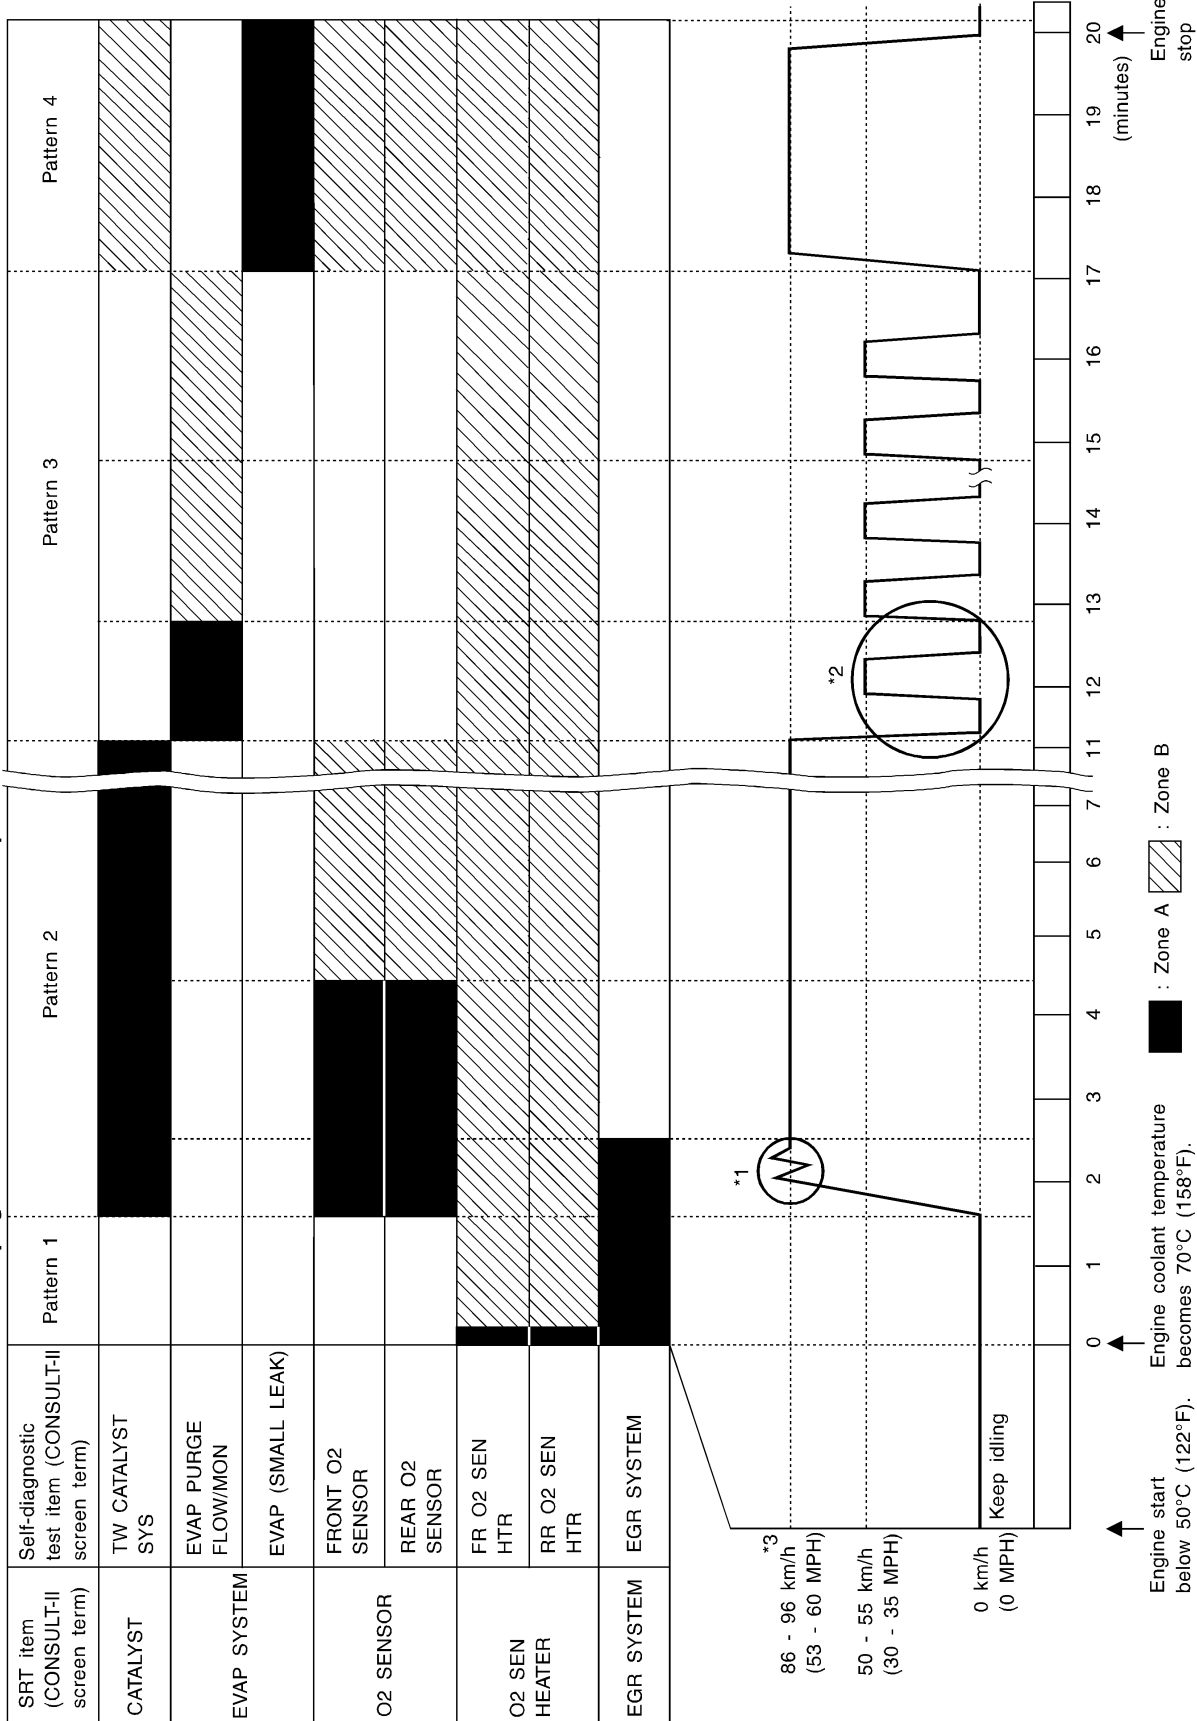

- The time required for each diagnosis varies with road surface conditions, weather, altitude, individual driving habits, etc.
Zone A refers to the range where the time required, for the diagnosis under normal conditions*, is the shortest.
Zone B refers to the range where the diagnosis can still be performed if the diagnosis is not completed within zone A.

*: Normal conditions refer to the following:

- Sea level
- Flat road
- Ambient air temperature: 20 - 30°C (68 - 86°F)
- Diagnosis is performed as quickly as possible under normal conditions.
Under different conditions [For example: ambient air temperature other than 20 - 30°C (68 - 86°F)], diagnosis may also be performed.

Pattern 1:

- **The engine is started at the engine coolant temperature of -10 to 35°C (14 to 95°F) (where the voltage between the ECM terminals 59 and 43 is 3.0 - 4.3V).**
- **The engine must be operated at idle speed until the engine coolant temperature is greater than 70°C (158°F) (where the voltage between the ECM terminals 59 and 43 is lower than 1.4V).**
- **The engine is started at the tank fuel temperature of warmer than 0°C (32°F) (where the voltage between the ECM terminal 60 and ground is less than 4.1V).**

Pattern 2:

- When steady-state driving is performed again even after it is interrupted, each diagnosis can be conducted. In this case, the time required for diagnosis may be extended.

Pattern 3:

- The driving pattern outlined in *2 must be repeated at least 3 times.


Pattern 4:

- Tests are performed after the engine has been operated for at least 17 minutes.
- The accelerator pedal must be held very steady during steady-state driving.
- If the accelerator pedal is moved, the test must be conducted all over again.

*1: Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH), then release the accelerator pedal and keep it released for more than 10 seconds. Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH) again.

*2: Operate the vehicle in the following driving pattern.

- 1) Decelerate vehicle to 0 km/h (0 MPH) and let engine idle.
- 2) Repeat driving pattern shown below at least 10 times.
- **During acceleration, hold the accelerator pedal as steady as possible.**
- 3) Repeat steps 1 and 2 until the EGR system SRT is set.

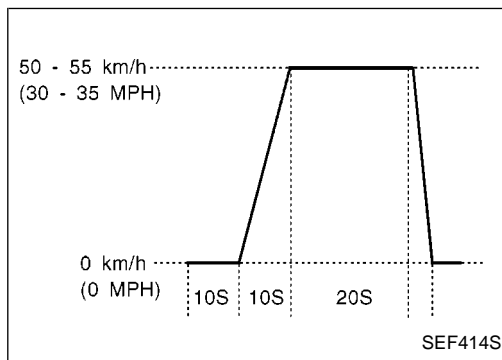

*3: Checking the vehicle speed with GST is advised.

Suggested Transmission Gear Position for A/T Models

Set the selector lever in the "D" position with the overdrive switch turned ON.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

KA24DE

Emission-related Diagnostic Information (Cont'd)

Suggested upshift speeds for M/T models

Shown below are suggested vehicle speeds for shifting into a higher gear. These suggestions relate to fuel economy and vehicle performance. Actual upshift speeds will vary according to road conditions, the weather and individual driving habits.

Gear change	For normal acceleration in low altitude areas [less than 1,219 m (4,000 ft)]:		For quick acceleration in low altitude areas and high altitude areas [over 1,219 m (4,000 ft)]:
	ACCEL shift point km/h (MPH)	CRUISE shift point km/h (MPH)	km/h (MPH)
1st to 2nd	24 (15)	24 (15)	24 (15)
2nd to 3rd	40 (25)	29 (18)	40 (25)
3rd to 4th	58 (36)	48 (30)	64 (40)
4th to 5th	64 (40)	63 (39)	72 (45)

Suggested Maximum Speed in Each Gear

Downshift to a lower gear if the engine is not running smoothly, or if you need to accelerate. Do not exceed the maximum suggested speed (shown below) in any gear. For level road driving, use the highest gear suggested for that speed. Always observe posted speed limits and drive according to the road conditions to ensure safe operation. Do not over-rev the engine when shifting to a lower gear as it may cause engine damage or loss of vehicle control.

Gear	km/h (MPH) 2WD (AUTO mode)
1st	50 (30)
2nd	95 (60)

TEST VALUE AND TEST LIMIT (GST ONLY — NOT APPLICABLE TO CONSULT-II)

NEEC0892S04

The following is the information specified in Mode 6 of SAE J1979. The test value is a parameter used to determine whether a system/circuit diagnostic test is "OK" or "NG" while being monitored by the ECM during self-diagnosis. The test limit is a reference value which is specified as the maximum or minimum value and is compared with the test value being monitored.

Items for which these data (test value and test limit) are displayed are the same as SRT code items (9 test items).

These data (test value and test limit) are specified by Test ID (TID) and Component ID (CID) and can be displayed on the GST screen.

X: Applicable —: Not applicable

SRT item	Self-diagnostic test item	Test value (GST display)		Test limit	Application
		TID	CID		
CATALYST	Three way catalyst function	01H	01H	Max.	X
		02H	81H	Min.	X
EVAP SYSTEM	EVAP control system (Small leak)	05H	03H	Max.	X
	EVAP control system purge flow monitoring	06H	83H	Min.	X

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

KA24DE

Emission-related Diagnostic Information (Cont'd)

SRT item	Self-diagnostic test item	Test value (GST display)		Test limit	Application
		TID	CID		
O2 SENSOR	Front heated oxygen sensor	09H	04H	Max.	X
		0AH	84H	Min.	X
		0BH	04H	Max.	X
		0CH	04H	Max.	X
	Rear heated oxygen sensor	0DH	04H	Max.	X
		19H	86H	Min.	X
		1AH	86H	Min.	X
		1BH	06H	Max.	X
O2 SENSOR HEATER	Front heated oxygen sensor heater	1CH	06H	Max.	X
		29H	08H	Max.	X
	Rear heated oxygen sensor heater	2AH	88H	Min.	X
		2DH	0AH	Max.	X
EGR SYSTEM	EGR function	2EH	8AH	Min.	X
		31H	8CH	Min.	X
		32H	8CH	Min.	X
		33H	8CH	Min.	X
		34H	8CH	Min.	X
	EGRC-BPT valve function	35H	0CH	Max.	X
		36H	0CH	Max.	X
		37H	8CH	Min.	X

EMISSION-RELATED DIAGNOSTIC INFORMATION ITEMS

X: Applicable —: Not applicable NEEC0892S05

Items (CONSULT-II screen terms)	DTC*4		SRT code	Test value/Test limit (GST only)	1st trip DTC*4	Reference page
	CONSULT-II GST*2	ECM*1				
NO SELF DIAGNOSTIC FAILURE INDICATED	P0000	0505	—	—	—	—
MAF SEN/CIRCUIT	P0100	0102	—	—	X	EC-137
ABSL PRES SEN/CIRC	P0105	0803	—	—	X	EC-147
AIR TEMP SEN/CIRC	P0110	0401	—	—	X	EC-162
COOLANT T SEN/CIRC	P0115	0103	—	—	X	EC-168
THRTL POS SEN/CIRC	P0120	0403	—	—	X	EC-173
*COOLAN T SEN/CIRC	P0125	0908	—	—	X	EC-187
FRONT O2 SENSOR	P0130	0303	X	X	X*3	EC-191
FRONT O2 SENSOR	P0131	0411	X	X	X*3	EC-199
FRONT O2 SENSOR	P0132	0410	X	X	X*3	EC-206
FRONT O2 SENSOR	P0133	0409	X	X	X*3	EC-213
FRONT O2 SENSOR	P0134	0412	X	X	X*3	EC-224

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

KA24DE

Emission-related Diagnostic Information (Cont'd)

Items (CONSULT-II screen terms)	DTC*4		SRT code	Test value/Test limit (GST only)	1st trip DTC*4	Reference page
	CONSULT-II GST*2	ECM*1				
FR O2 SEN HEATER	P0135	0901	X	X	X*3	EC-231
REAR O2 SENSOR	P0137	0511	X	X	X*3	EC-236
REAR O2 SENSOR	P0138	0510	X	X	X*3	EC-246
REAR O2 SENSOR	P0139	0707	X	X	X*3	EC-256
REAR O2 SENSOR	P0140	0512	X	X	X*3	EC-266
RR O2 SEN HEATER	P0141	0902	X	X	X*3	EC-274
FUEL SYS DIAG-LEAN	P0171	0115	—	—	X	EC-279
FUEL SYS DIAG-RICH	P0172	0114	—	—	X	EC-287
FUEL TEMP SEN/CIRC	P0180	0402	—	—	X	EC-294
MULTI CYL MISFIRE	P0300	0701	—	—	X	EC-300
CYL 1 MISFIRE	P0301	0608	—	—	X	EC-300
CYL 2 MISFIRE	P0302	0607	—	—	X	EC-300
CYL 3 MISFIRE	P0303	0606	—	—	X	EC-300
CYL 4 MISFIRE	P0304	0605	—	—	X	EC-300
KNOCK SEN/CIRCUIT	P0325	0304	—	—	—	EC-309
CPS/CIRCUIT (OBD)	P0335	0802	—	—	X	EC-313
CAM POS SEN/CIRC	P0340	0101	—	—	X	EC-319
EGR SYSTEM	P0400	0302	X	X	X*3	EC-327
EGRC-BPT VALVE	P0402	0306	X	X	X*3	EC-339
TW CATALYST SYSTEM	P0420	0702	X	X	X*3	EC-347
EVAP SMALL LEAK	P0440	0705	X	X	X*3	EC-352
PURG VOLUME CONT/V	P0443	1008	—	—	X	EC-367
VENT CONTROL VALVE	P0446	0903	—	—	X	EC-375
EVAP0 SYS PRES SEN	P0450	0704	—	—	X	EC-383
EVAP GROSS LEAK	P0455	0715	X	X	X*3	EC-412
VEH SPEED SEN/CIRC	P0500	0104	—	—	X	EC-412
IACV/AAC VLV/CIRC	P0505	0205	—	—	X	EC-416
CLOSED TP SW/CIRC	P0510	0203	—	—	X	EC-422
ECM	P0605	0301	—	—	X	EC-429
MAP/BARO SW SOL/CIR	P1105	1302	—	—	X	EC-431
CLOSED LOOP	P1148	0307	—	—	—	EC-447
IGN SIGNAL-PRIMARY	P1320	0201	—	—	X	EC-449
CPS/CIRC (OBD) COG	P1336	0905	—	—	X	EC-457
EGRC SOLENOID/V	P1400	1005	—	—	X	EC-463
EGR TEMP SEN/CIRC	P1401	0305	—	—	X	EC-470
EGR SYSTEM	P1402	0514	X	X	X*3	EC-476

Items (CONSULT-II screen terms)	DTC*4		SRT code	Test value/Test limit (GST only)	1st trip DTC*4	Reference page
	CONSULT-II GST*2	ECM*1				
EVAP SMALL LEAK	P1440	0213	X	X	X*3	EC-485
PURG VOLUME CONT/V	P1444	0214	—	—	X	EC-487
VENT CONTROL VALVE	P1446	0215	—	—	X	EC-499
EVAP PURG FLOW/MON	P1447	0111	X	X	X*3	EC-505
VENT CONTROL VALVE	P1448	0309	—	—	X	EC-515
VC/V BYPASS/V	P1490	0801	—	—	X	EC-523
VC CUT/V BYPASS/V	P1491	0311	—	—	X	EC-530
P-N POS SW/CIRCUIT	P1706	1003	—	—	X	EC-541

*1: In Diagnostic Test Mode II (Self-diagnostic results). These numbers are controlled by NISSAN.

*2: These numbers are prescribed by SAE J2012.

*3: These are not displayed with GST.

*4: 1st trip DTC No. is the same as DTC No.

HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION

🔑 How to Erase DTC (With CONSULT-II)

NEEC0892S06

1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 5 seconds and then turn it ON (engine stopped) again.
2. Turn CONSULT-II "ON" and touch "ENGINE".
3. Touch "SELF-DIAG RESULTS".
4. Touch "ERASE". (The DTC in the ECM will be erased.)

NEEC0892S0601

How to erase DTC (With CONSULT-II)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" again.

DIAGNOSIS SYSTEM SELECTION
ENGINE

2. Turn **CONSULT-II** "ON" and touch "ENGINE".

➔

DIAGNOSIS MODE SELECTION
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
ACTIVE TEST
DTC & SRT CONFIRMATION

3. Touch "SELF-DIAG RESULTS".

➔

SELF DIAG RESULTS	
FAILURE PART:	TIME
COOLANT TEMP SEN [P0115]	0

4. Touch "ERASE". (The DTC in the ECM will be erased.)

AEC054B

The emission-related diagnostic information can be erased by selecting "ERASE" in the "SELF-DIAG RESULTS" mode with CONSULT-II.

🔑 How to Erase DTC (With GST)

NEEC0892S0602

1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 5 seconds and then turn it ON (engine stopped) again.
2. Select Mode 4 with GST (Generic Scan Tool).

The emission-related diagnostic information in the ECM can be erased by selecting Mode 4 with GST (Generic Scan Tool).

How to Erase DTC (No Tools)

NEEC0892S0603

1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 5 seconds and then turn it ON again.
2. Change the diagnostic test mode from Mode II to Mode I by turning the mode selector on the ECM. (See EC-72.)

The emission-related diagnostic information in the ECM can be erased by changing the diagnostic test mode from Diagnostic Test Mode II to Mode I by turning the mode selector on the ECM. (Refer to EC-72.)


NOTE:

- If the battery is disconnected, the emission-related diagnostic information will be lost after approx. 24 hours.
- Erasing the emission-related diagnostic information using CONSULT-II or GST is easier and quicker than switching the mode selector on the ECM.
- The following data are cleared when the ECM memory is erased.
 - 1) Diagnostic trouble codes
 - 2) 1st trip diagnostic trouble codes
 - 3) Freeze frame data
 - 4) 1st trip freeze frame data
 - 5) System readiness test (SRT) codes
 - 6) Test values
 - 7) Others

Actual work procedures are explained using a DTC as an example. Be careful so that not only the DTC, but all of the data listed above, are cleared from the ECM memory during work procedures.

Malfunction Indicator Lamp (MIL)**DESCRIPTION**

NEEC0893

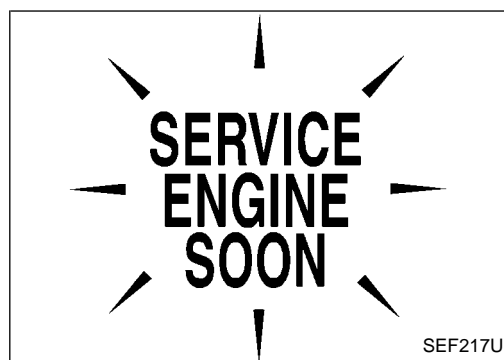

The MIL is located on the instrument panel.

1. The MIL will light up when the ignition switch is turned ON without the engine running. This is a bulb check.
 - If the MIL does not light up, refer to "WARNING LAMPS", **EL-80** or see EC-588.
2. When the engine is started, the MIL should go off.

If the MIL remains on, the on board diagnostic system has detected an engine system malfunction.

On Board Diagnostic System Function

NEEC0893S01

The on board diagnostic system has the following four functions.

Diagnostic Test Mode I

1. BULB CHECK:

This function checks the MIL bulb for damage (blown, open circuit, etc.).
If the MIL does not come on, check MIL circuit and ECM test mode selector. (See next page.)
2. MALFUNCTION WARNING:

This is a usual driving condition. When a malfunction is detected twice in two consecutive driving cycles (two trip detection logic), the MIL will light up to inform the driver that a malfunction has been detected. The following malfunctions will light up or blink the MIL in the 1st trip.

 - "Misfire (Possible three way catalyst damage)"
 - "Closed loop control"
 - Fail-safe mode

Diagnostic Test Mode II

3. SELF-DIAGNOSTIC RESULTS:

This function allows DTCs and 1st trip DTCs to be read.




4. FRONT HEATED OXYGEN SENSOR MONITOR:

This function allows the fuel mixture condition (lean or rich), monitored by front heated oxygen sensor, to be read.

MIL Flashing without DTC

If the ECM is in Diagnostic Test Mode II, MIL may flash when engine is running. In this case, check ECM test mode selector following "HOW TO SWITCH DIAGNOSTIC TEST MODES" on next page.

How to switch the diagnostic test (function) modes, and details of the above functions are described later. (Refer to EC-72.)

Condition		Diagnostic Test Mode I	Diagnostic Test Mode II
Ignition switch in "ON" position 	Engine stopped 	BULB CHECK	SELF-DIAGNOSTIC RESULTS
	Engine running 	MALFUNCTION WARNING	FRONT HEATED OXYGEN SENSOR MONITOR


The following emission-related diagnostic information is cleared when the ECM memory is erased.

- 1) Diagnostic trouble codes
- 2) 1st trip diagnostic trouble codes
- 3) Freeze frame data
- 4) 1st trip freeze frame data
- 5) System readiness test (SRT) codes
- 6) Test values
- 7) Others

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

How to Switch Diagnostic Test Modes

How to Switch Diagnostic Test Modes

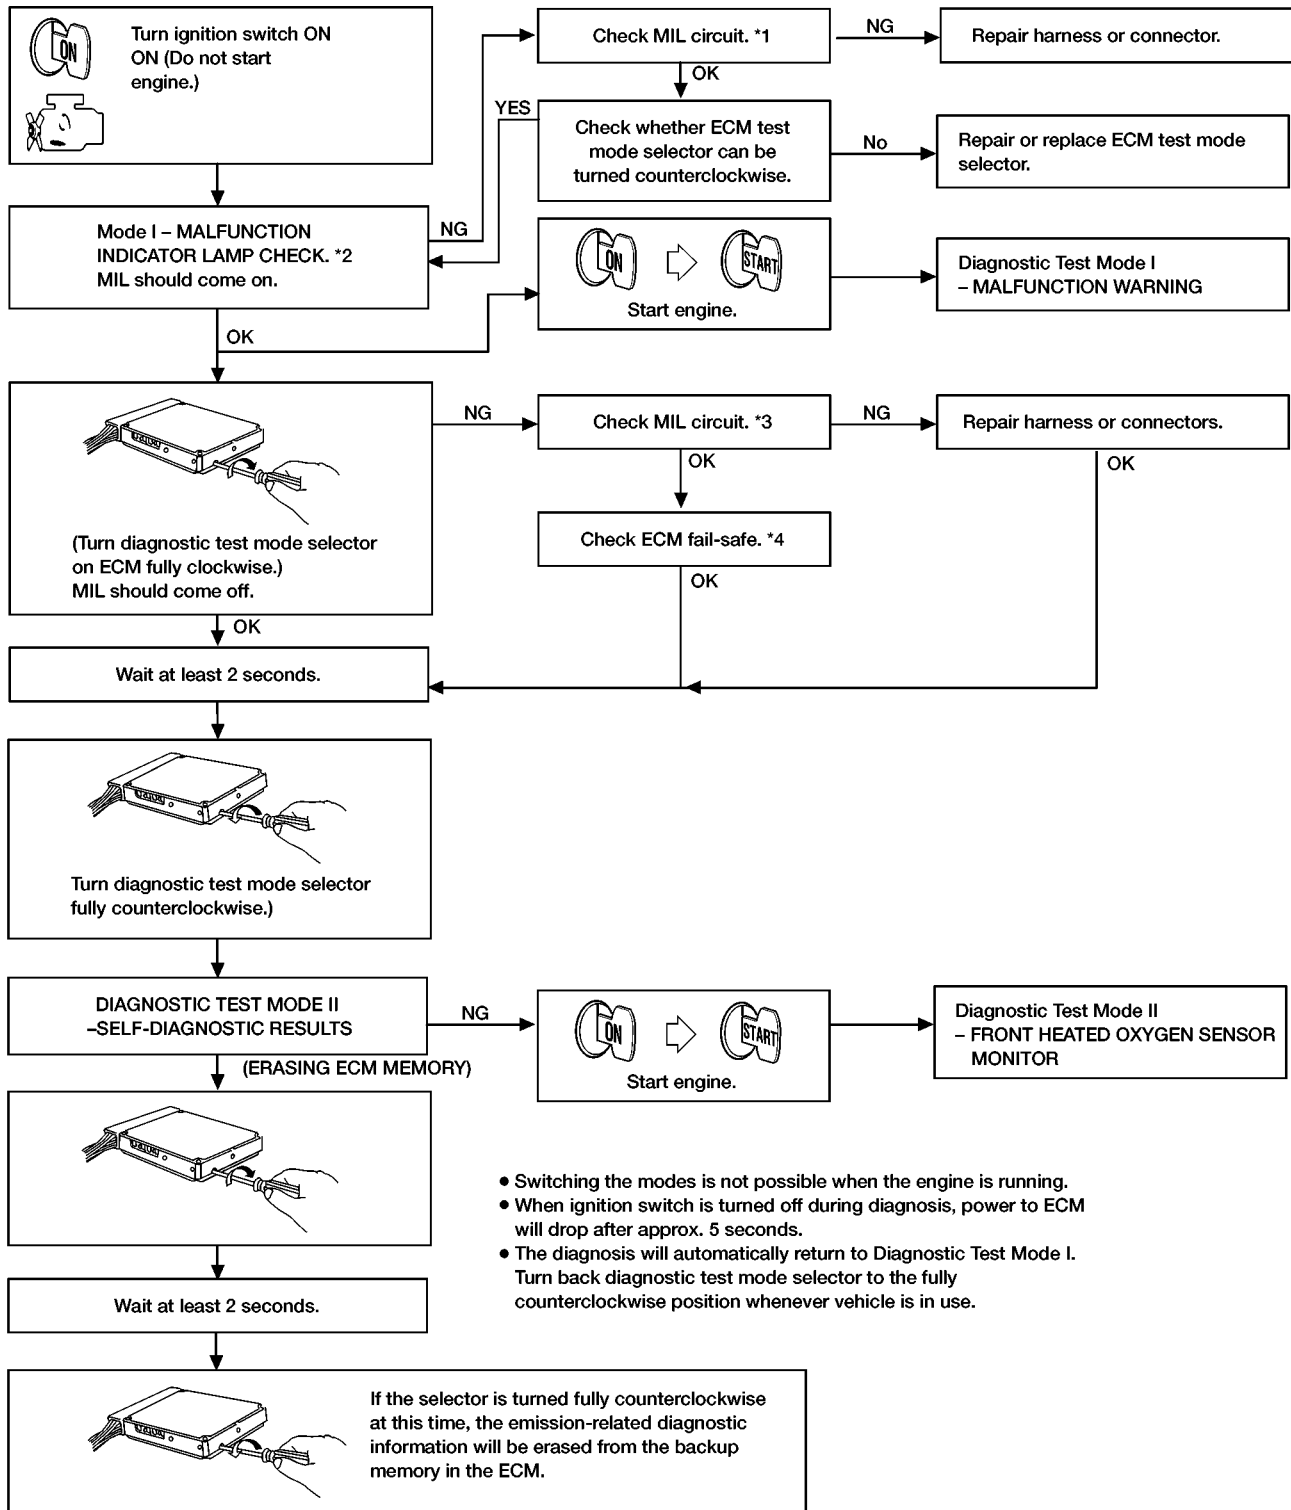

- Switching the modes is not possible when the engine is running.
- When ignition switch is turned off during diagnosis, power to ECM will drop after approx. 5 seconds.
- The diagnosis will automatically return to Diagnostic Test Mode I. Turn back diagnostic test mode selector to the fully counterclockwise position whenever vehicle is in use.

*1: EC-588

*3: EC-588

*4: EC-111

*2: EC-70

Diagnostic Test Mode I — Bulb Check

In this mode, the MIL on the instrument panel should stay ON. If it remains OFF, check the MIL bulb. NEEC0893S03
 Refer to "WARNING LAMPS", **EL-80** or see EC-588.

Diagnostic Test Mode I — Malfunction Warning

NEEC0893S04



MIL	Condition
ON	When the malfunction is detected or the ECM's CPU is malfunctioning.
OFF	No malfunction.

- These DTC numbers are clarified in Diagnostic Test Mode II (SELF-DIAGNOSTIC RESULTS).

Diagnostic Test Mode II — Self-diagnostic Results

NEEC0893S05

In this mode, the DTC and 1st trip DTC are indicated by the number of blinks of the MIL. The DTC and 1st trip DTC are displayed at the same time. If the MIL does not illuminate in diagnostic test mode I (Malfunction warning), all displayed items are 1st trip DTCs. If only one code is displayed when the MIL illuminates in diagnostic test mode II (SELF-DIAGNOSTIC RESULTS), it is a DTC; if two or more codes are displayed, they may be either DTCs or 1st trip DTCs. DTC No. is same as that of 1st trip DTC. These unidentified codes can be identified by using the CONSULT-II or GST. A DTC will be used as an example for how to read a code.

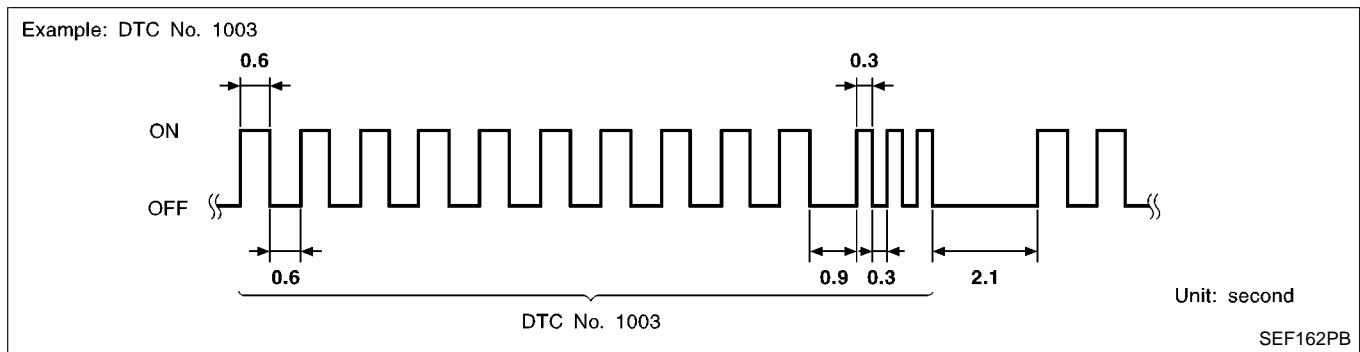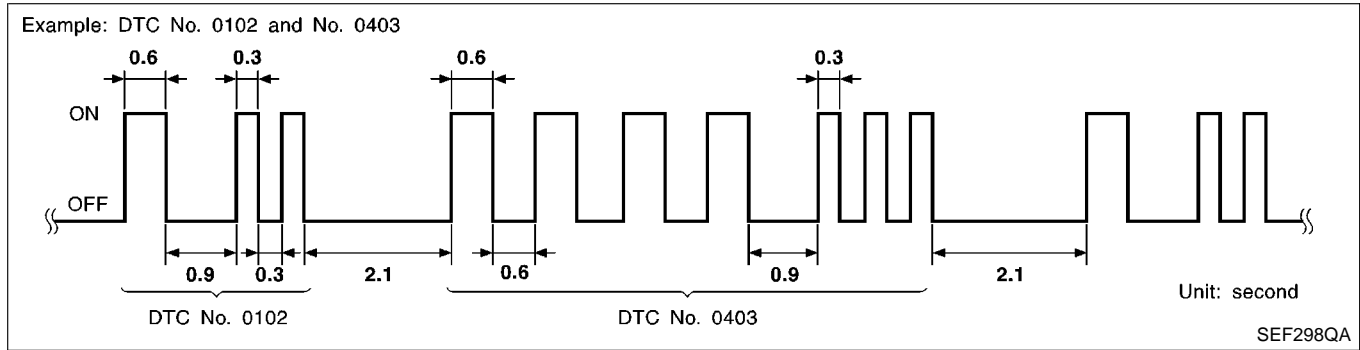

Long (0.6 second) blinking indicates the two LH digits of number and short (0.3 second) blinking indicates the two RH digits of number. For example, the malfunction indicator lamp blinks 10 times for 6 seconds (0.6 sec x 10 times) and then it blinks three times for about 1 second (0.3 sec x 3 times). This indicates the DTC "1003" and refers to the malfunction of the park/neutral position (PNP) switch.

In this way, all the detected malfunctions are classified by their DTC numbers. The DTC "0505" refers to no malfunction. (See TROUBLE DIAGNOSIS — INDEX, EC-13.)

How to Erase Diagnostic Test Mode II (Self-diagnostic results)

NEEC0893S0501

The DTC can be erased from the backup memory in the ECM when the diagnostic test mode is changed from Diagnostic Test Mode II to Diagnostic Test Mode I. (Refer to "HOW TO SWITCH DIAGNOSTIC TEST MODES".)

- If the battery is disconnected, the DTC will be lost from the backup memory after approx. 24 hours.
- Be careful not to erase the stored memory before starting trouble diagnoses.

Malfunction Indicator Lamp (MIL) (Cont'd)

Diagnostic Test Mode II — Front Heated Oxygen Sensor Monitor

NEEC0893S06

In this mode, the MIL displays the condition of the fuel mixture (lean or rich) which is monitored by the front heated oxygen sensor.

MIL	Fuel mixture condition in the exhaust gas	Air fuel ratio feedback control condition
ON	Lean	Closed loop system
OFF	Rich	
*Remains ON or OFF	Any condition	Open loop system

*: Maintains conditions just before switching to open loop.

To check the front heated oxygen sensor function, start engine in the Diagnostic Test Mode II and warm it up until engine coolant temperature indicator points to the middle of the gauge.

Next run engine at about 2,000 rpm for about 2 minutes under no-load conditions. Then make sure that the MIL comes ON more than 5 times within 10 seconds with engine running at 2,000 rpm under no-load.

OBD System Operation Chart

NEEC0894

RELATIONSHIP BETWEEN MIL, DTC, 1ST TRIP DTC AND DETECTABLE ITEMS

NEEC0894S01

- When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data are stored in the ECM memory.
- When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data are stored in the ECM memory, and the MIL will come on. For details, refer to “Two Trip Detection Logic” on EC-56.
- The MIL will go off after the vehicle is driven 3 times with no malfunction. The drive is counted only when the recorded driving pattern is met (as stored in the ECM). If another malfunction occurs while counting, the counter will reset.
- The DTC and the freeze frame data will be stored until the vehicle is driven 40 times (driving pattern A) without the same malfunction recurring (except for Misfire and Fuel Injection System). For Misfire and Fuel Injection System, the DTC and freeze frame data will be stored until the vehicle is driven 80 times (driving pattern C) without the same malfunction recurring. The “TIME” in “SELF-DIAGNOSTIC RESULTS” mode of CONSULT-II will count the number of times the vehicle is driven.
- The 1st trip DTC is not displayed when the self-diagnosis results in “OK” for the 2nd trip.

SUMMARY CHART

NEEC0894S02

Items	Fuel Injection System	Misfire	Other
MIL (goes off)	3 (pattern B)	3 (pattern B)	3 (pattern B)
DTC, Freeze Frame Data (no display)	80 (pattern C)	80 (pattern C)	40 (pattern A)
1st Trip DTC (clear)	1 (pattern C), *1	1 (pattern C), *1	1 (pattern B)
1st Trip Freeze Frame Data (clear)	*1, *2	*1, *2	1 (pattern B)

For details about patterns “B” and “C” under “Fuel Injection System” and “Misfire”, see EC-76.


For details about patterns “A” and “B” under “Other”, see EC-78.

*1: Clear timing is at the moment OK is detected.

*2: Clear timing is when the same malfunction is detected in the 2nd trip.

RELATIONSHIP BETWEEN MIL, DTC, 1ST TRIP DTC AND DRIVING PATTERNS FOR "MISFIRE" <EXHAUST QUALITY DETERIORATION>, "FUEL INJECTION SYSTEM"

NEEC0894S03

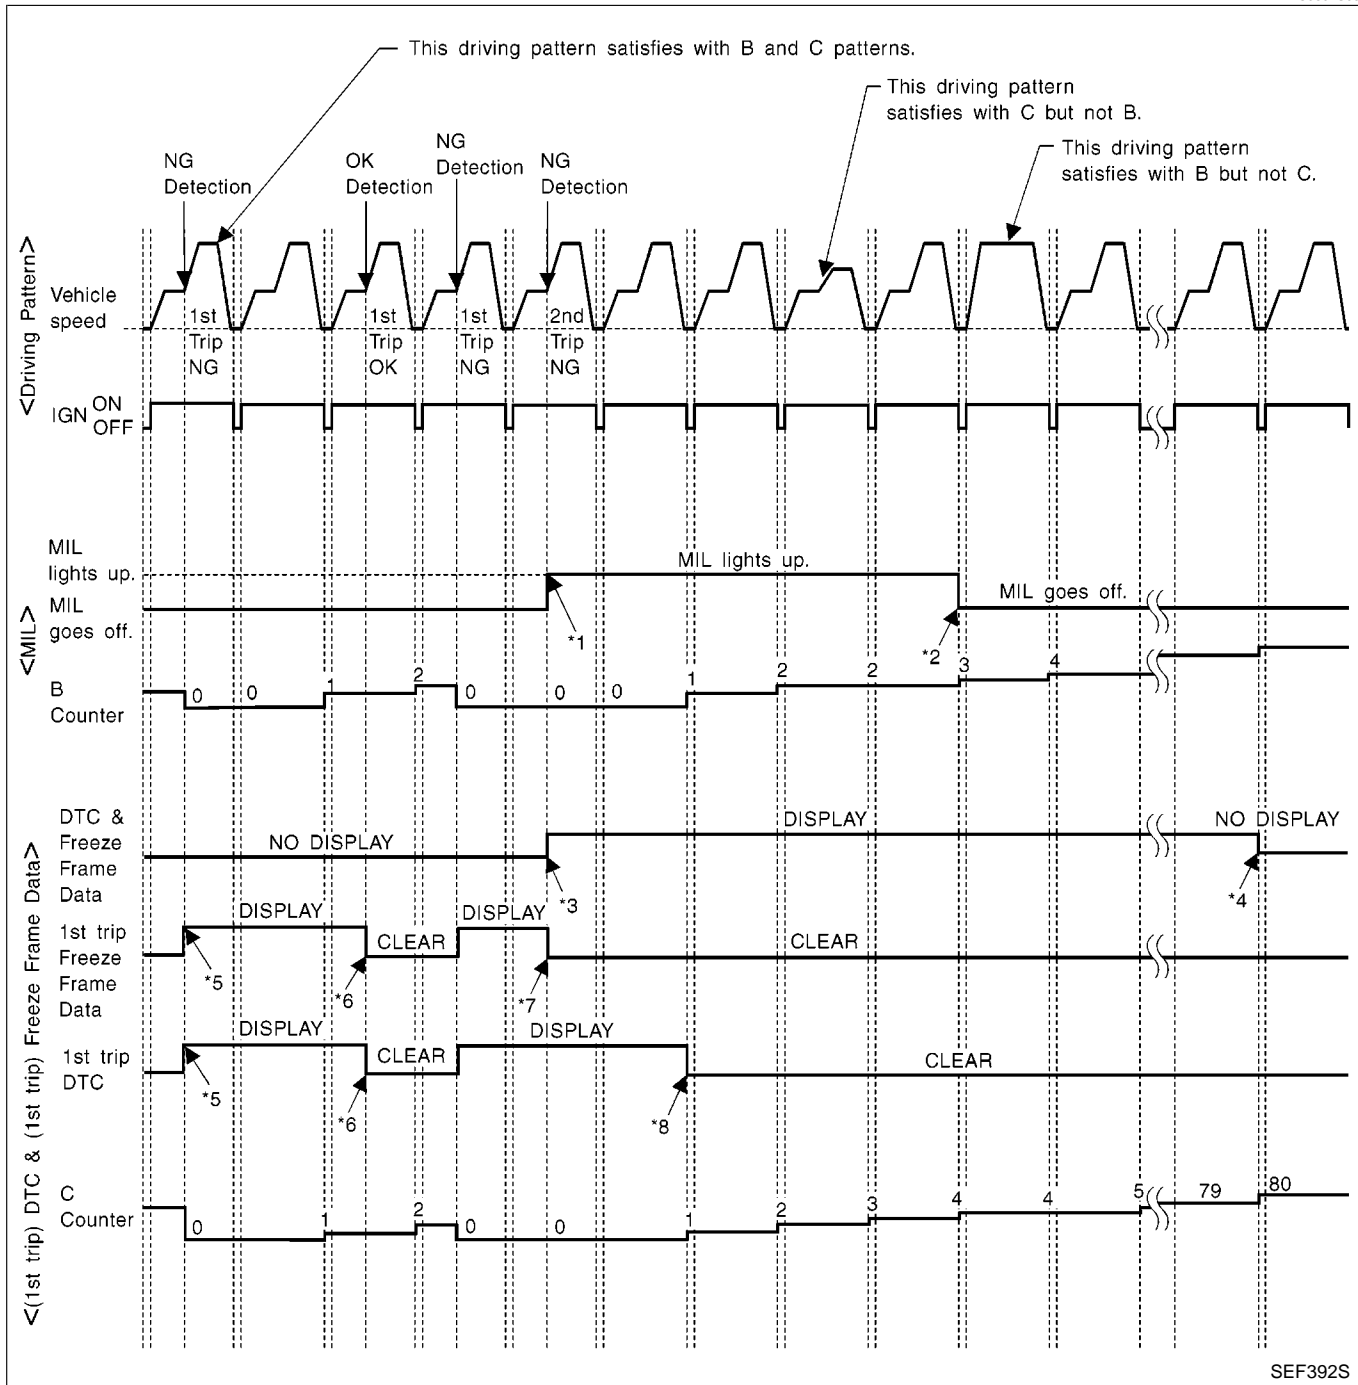

- *1: When the same malfunction is detected in two consecutive trips, MIL will light up.
- *2: MIL will go off after vehicle is driven 3 times (pattern B) without any malfunctions.
- *3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.
- *4: The DTC and the freeze frame

- data will not be displayed any longer after vehicle is driven 80 times (pattern C) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)
- *5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.
- *6: The 1st trip DTC and the 1st trip

- freeze frame data will be cleared at the moment OK is detected.
- *7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.
- *8: 1st trip DTC will be cleared when vehicle is driven once (pattern C) without the same malfunction after DTC is stored in ECM.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

EXPLANATION FOR DRIVING PATTERNS FOR “MISFIRE <EXHAUST QUALITY DETERIORATION>”, “FUEL INJECTION SYSTEM”

NEEC0894S04

NEEC0894S0401

Driving Pattern B

Driving pattern B means the vehicle operation as follows:

All components and systems should be monitored at least once by the OBD system.

- The B counter will be cleared when the malfunction is detected once regardless of the driving pattern.
- The B counter will be counted up when driving pattern B is satisfied without any malfunction.
- The MIL will go off when the B counter reaches 3. (*2 in “OBD SYSTEM OPERATION CHART”)

Driving Pattern C

NEEC0894S0402

Driving pattern C means the vehicle operation as follows:

1) The following conditions should be satisfied at the same time:

Engine speed: (Engine speed in the freeze frame data) ± 375 rpm

Calculated load value: (Calculated load value in the freeze frame data) $\times (1 \pm 0.1)$ [%]

Engine coolant temperature (T) condition:

- When the freeze frame data shows lower than 70°C (158°F), “T” should be lower than 70°C (158°F).
- When the freeze frame data shows higher than or equal to 70°C (158°F), “T” should be higher than or equal to 70°C (158°F).

Example:

If the stored freeze frame data is as follows:

Engine speed: 850 rpm, Calculated load value: 30%, Engine coolant temperature: 80°C (176°F)


To be satisfied with driving pattern C, the vehicle should run under the following conditions:

Engine speed: 475 - 1,225 rpm, Calculated load value: 27 - 33%, Engine coolant temperature: more than 70°C (158°F)

- The C counter will be cleared when the malfunction is detected regardless of (1).
- The C counter will be counted up when (1) is satisfied without the same malfunction.
- The DTC will not be displayed after C counter reaches 80.
- The 1st trip DTC will be cleared when C counter is counted once without the same malfunction after DTC is stored in ECM.

RELATIONSHIP BETWEEN MIL, DTC, 1ST TRIP DTC AND DRIVING PATTERNS EXCEPT FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

NEEC0894S05

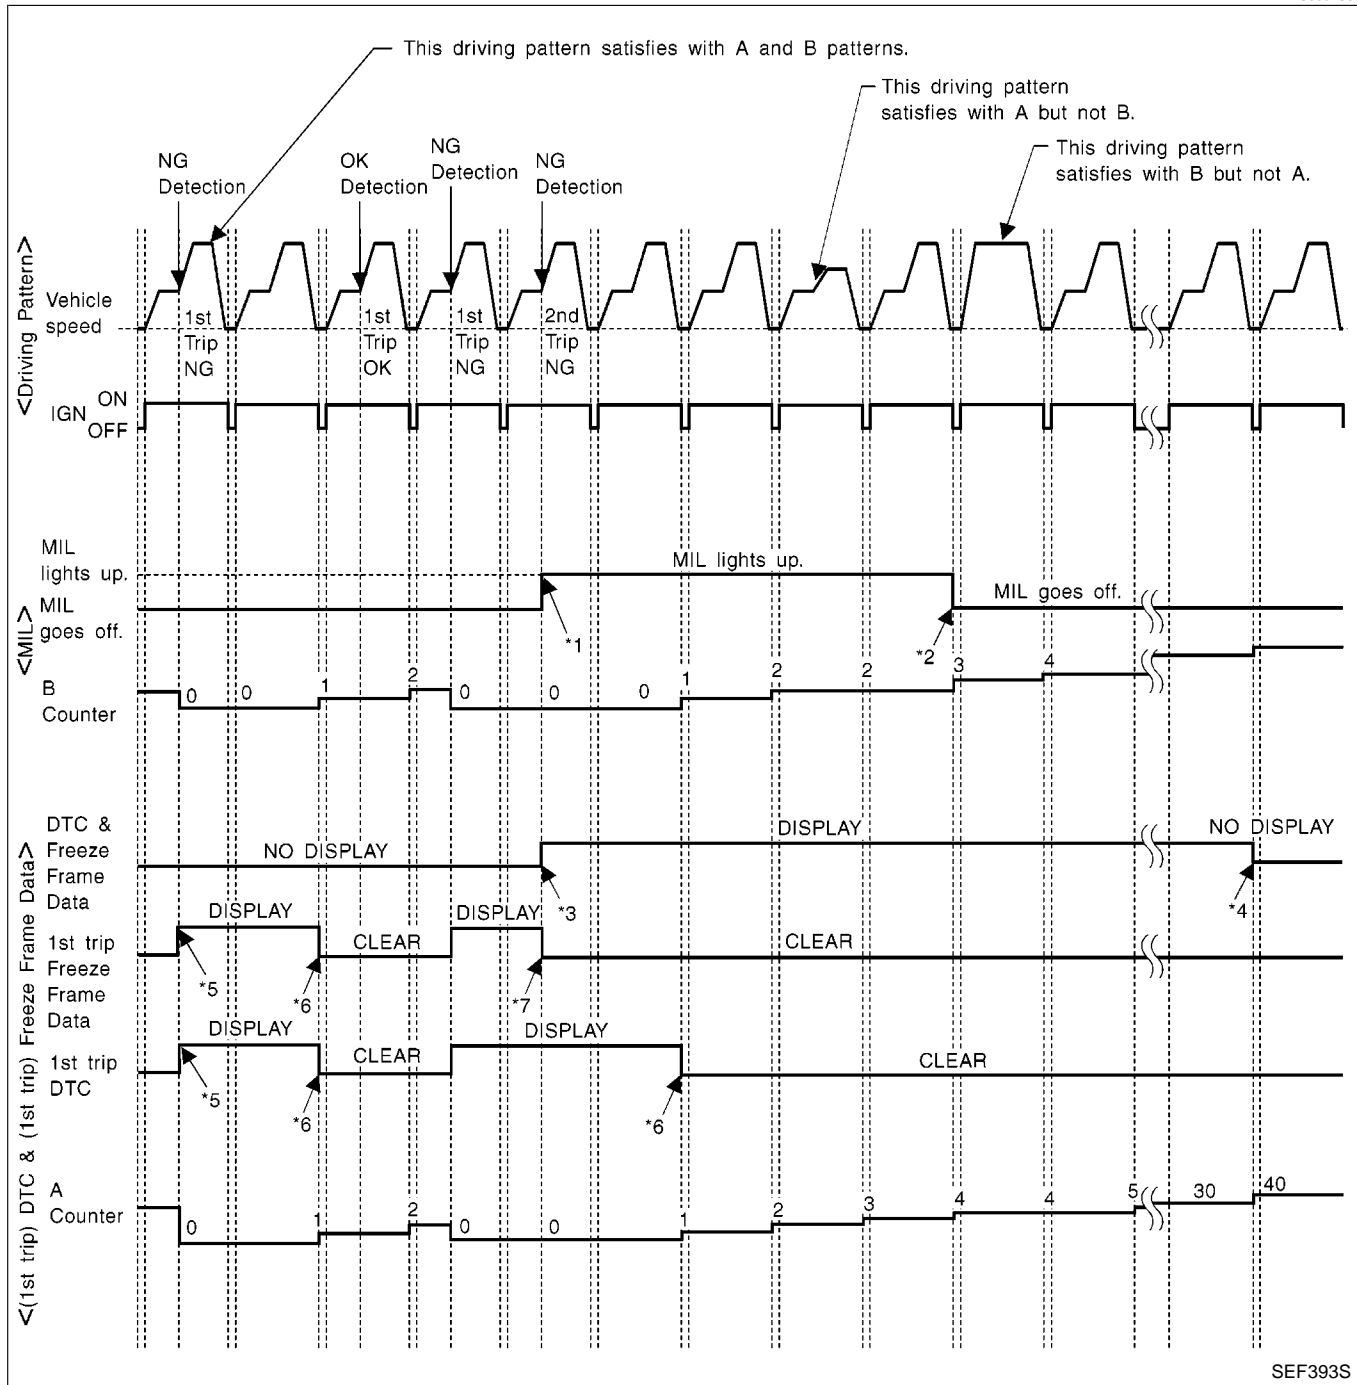

- *1: When the same malfunction is detected in two consecutive trips, MIL will light up.
- *2: MIL will go off after vehicle is driven 3 times (pattern B) without any malfunctions.
- *3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.

- *4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 40 times (pattern A) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)
- *5: When a malfunction is detected for the first time, the 1st trip DTC

- and the 1st trip freeze frame data will be stored in ECM.
- *6: 1st trip DTC will be cleared after vehicle is driven once (pattern B) without the same malfunction.
- *7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

EXPLANATION FOR DRIVING PATTERNS EXCEPT FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

NEEC0894S06

Driving Pattern A

NEEC0894S0601

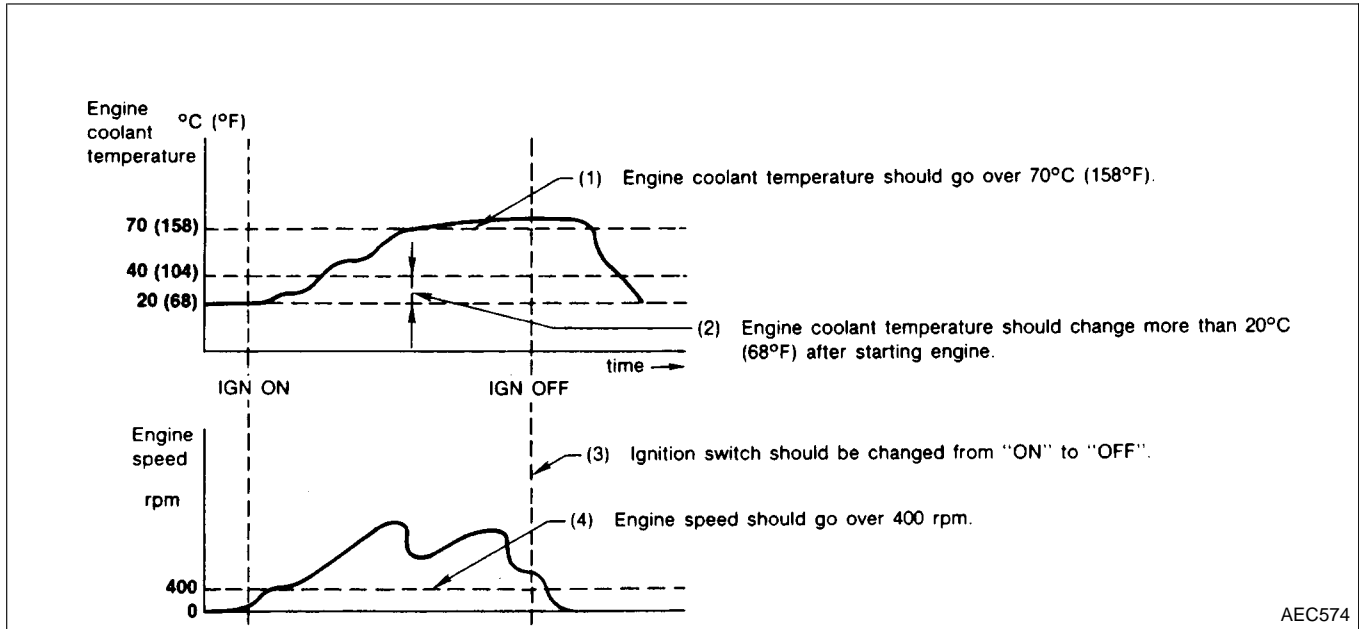

- The A counter will be cleared when the malfunction is detected regardless of (1) - (4).
- The A counter will be counted up when (1) - (4) are satisfied without the same malfunction.
- The DTC will not be displayed after the A counter reaches 40.


Driving Pattern B

NEEC0894S0602

Driving pattern B means the vehicle operation as follows:

All components and systems should be monitored at least once by the OBD system.

- The B counter will be cleared when the malfunction is detected once regardless of the driving pattern.
- The B counter will be counted up when driving pattern B is satisfied without any malfunctions.
- The MIL will go off when the B counter reaches 3 (*2 in "OBD SYSTEM OPERATION CHART").

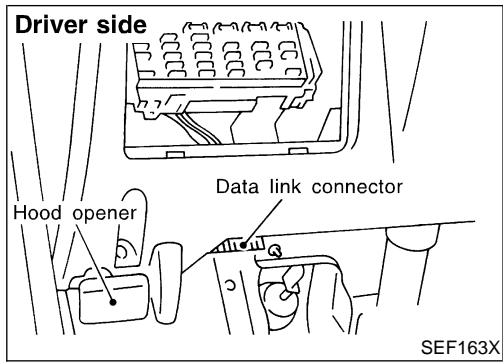


CONSULT-II

CONSULT-II INSPECTION PROCEDURE


=NEEC0895

NEEC0895S01


1. Turn ignition switch OFF.
2. Connect "CONSULT-II" to data link connector for CONSULT-II. (Data link connector for CONSULT-II is located behind the fuse box cover.)

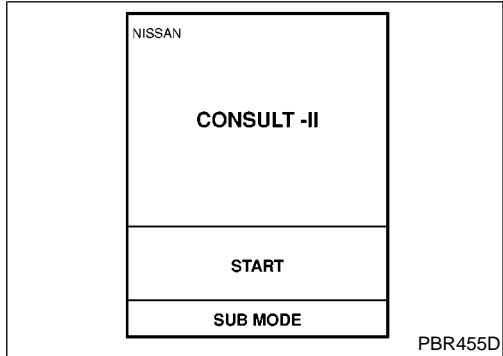

3. Turn ignition switch ON.
4. Touch "START".

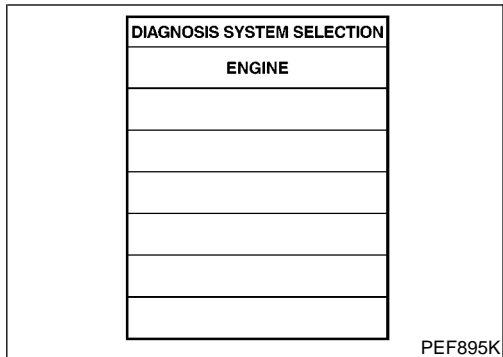

5. Touch "ENGINE".

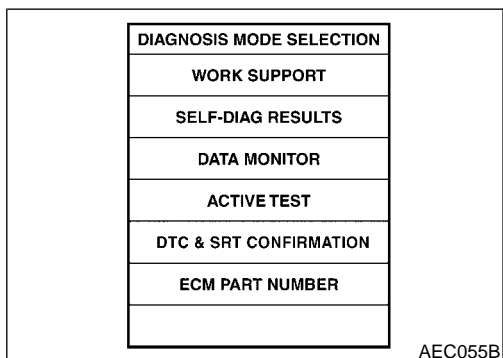

6. Perform each diagnostic test mode according to each service procedure.

For further information, see the CONSULT-II Operation Manual.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

KA24DE

CONSULT-II (Cont'd)

ENGINE CONTROL COMPONENT PARTS/CONTROL SYSTEMS APPLICATION

NEEC0895S02

Item		DIAGNOSTIC TEST MODE						
		WORK SUP-PORT	SELF-DIAGNOSTIC RESULTS		DATA MONI-TOR	ACTIVE TEST	DTC & SRT CONFIRMATION	
			DTC*1	FREEZE FRAME DATA*2			SRT STATUS	DTC WORK SUP-PORT
ENGINE CONTROL COMPONENT PARTS	INPUT	Camshaft position sensor	X	X	X			
	Mass air flow sensor	X		X				
	Engine coolant temperature sensor	X	X	X	X			
	Front heated oxygen sensor	X		X		X	X	
	Rear heated oxygen sensor	X		X		X	X	
	Vehicle speed sensor		X	X	X			
	Throttle position sensor	X	X		X			
	Fuel tank temperature sensor		X		X	X		
	EVAP control system pressure sensor		X		X			
	Absolute pressure sensor		X	X	X			
	EGR temperature sensor		X		X			
	Intake air temperature sensor		X		X			
	Crankshaft position sensor (OBD)		X					
	Knock sensor		X					
	Ignition switch (start signal)				X			
	Closed throttle position switch		X		X			
	Closed throttle position switch (throttle position sensor signal)				X			
	Air conditioner switch				X			
	Park/Neutral position (PNP) switch		X		X			
	Power steering oil pressure switch				X			
Air conditioner pressure switch				X				
Battery voltage				X				

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

KA24DE

CONSULT-II (Cont'd)

Item		DIAGNOSTIC TEST MODE								
		WORK SUP-PORT	SELF-DIAGNOSTIC RESULTS		DATA MONITOR	ACTIVE TEST	DTC & SRT CONFIRMATION			
			DTC*1	FREEZE FRAME DATA*2			SRT STATUS	DTC WORK SUP-PORT		
ENGINE CONTROL COMPONENT PARTS	OUTPUT	Injectors				X	X			GI
	Power transistor (Ignition timing)	X	X (Ignition signal)			X	X			MA
	IACV-AAC valve	X	X			X	X			EM
	EVAP canister purge volume control solenoid valve		X			X	X		X	EC
	Air conditioner relay					X				FE
	Fuel pump relay	X				X	X			CL
	EGRC-solenoid valve		X			X	X			MT
	Front heated oxygen sensor heater		X			X		X		AT
	Rear heated oxygen sensor heater		X			X		X		TF
	Torque converter clutch solenoid valve		X			X			X	PD
	EVAP canister vent control valve		X			X	X			AX
	Vacuum cut valve bypass valve		X			X	X		X	SU
	MAP/BARO switch solenoid valve		X			X	X			BR
	Calculated load value			X		X				ST

X: Applicable

*1: This item includes 1st trip DTCs.

*2: This mode includes 1st trip freeze frame data or freeze frame data. The items appear on CONSULT-II screen in freeze frame data mode only if a 1st trip DTC or DTC is detected. For details, refer to EC-58.

FUNCTION

NEEC0895S03

Diagnostic test mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on the CONSULT-II unit.
Self-diagnostic results	Self-diagnostic results such as 1st trip DTC, DTCs and 1st trip freeze frame data or freeze frame data can be read and erased quickly. *1
Data monitor	Input/Output data in the ECM can be read.
Active test	Diagnostic Test Mode in which CONSULT-II drives some actuators apart from the ECMs and also shifts some parameters in a specified range.
DTC confirmation	The status of system monitoring tests and the self-diagnosis status/result can be confirmed.
ECM part number	ECM part numbers can be read.

*1 The following emission-related diagnostic information is cleared when the ECM memory is erased.

- 1) Diagnostic trouble codes
- 2) 1st trip diagnostic trouble codes
- 3) Freeze frame data

GI
MA
EM
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

CONSULT-II (Cont'd)

- 4) 1st trip freeze frame data
- 5) System readiness test (SRT) codes
- 6) Test values
- 7) Others

WORK SUPPORT MODE

NEEC0895S04

WORK ITEM	CONDITION	USAGE
IGNITION TIMING ADJ	<ul style="list-style-type: none"> ● IGNITION TIMING FEEDBACK CONTROL WILL BE HELD BY TOUCHING "START". AFTER DOING SO, ADJUST IGNITION TIMING WITH A TIMING LIGHT BY TURNING THE CRANKSHAFT POSITION SENSOR. 	When adjusting initial ignition timing
IACV-AAC VALVE ADJ	SET ENGINE SPEED AT THE SPECIFIED VALUE UNDER THE FOLLOWING CONDITIONS. <ul style="list-style-type: none"> ● ENGINE WARMED UP ● NO-LOAD 	When adjusting idle speed
FUEL PRESSURE RELEASE	<ul style="list-style-type: none"> ● FUEL PUMP WILL STOP BY TOUCHING "START" DURING IDLING. CRANK A FEW TIMES AFTER ENGINE STALLS. 	When releasing fuel pressure from fuel line
EVAP SYSTEM CLOSE	OPEN THE VACUUM CUT VALVE BYPASS VALVE AND CLOSE THE EVAP CANISTER VENT CONTROL VALVE IN ORDER TO MAKE EVAP SYSTEM CLOSE UNDER THE FOLLOWING CONDITIONS. <ul style="list-style-type: none"> ● BATTERY VOLTAGE IS SUFFICIENT. ● IGN SW "ON" ● ENGINE NOT RUNNING ● AMBIENT TEMPERATURE IS ABOVE 0°C (32°F). ● NO VACUUM AND NO HIGH PRESSURE IN EVAP SYSTEM ● TANK FUEL TEMP. IS MORE THAN 0°C (32°F). ● WITHIN 10 MINUTES AFTER STARTING "EVAP SYSTEM CLOSE" WHEN TRYING TO EXECUTE "EVAP SYSTEM CLOSE" UNDER THE CONDITIONS ABOVE, CONSULT-II WILL DISCONTINUE AND DISPLAY INSTRUCTIONS. <p>NOTE: WHEN STARTING ENGINE, CONSULT-II MAY DISPLAY "BATTERY VOLTAGE IS LOW. CHARGE BATTERY", EVEN WHEN USING A CHARGED BATTERY.</p>	When detecting EVAP vapor leak point of EVAP system

SELF DIAGNOSTIC MODE

DTC and 1st Trip DTC

NEEC0895S05

Regarding items of "DTC and 1st trip DTC", refer to "TROUBLE DIAGNOSIS — INDEX", EC-13.

NEEC0895S0501

Freeze Frame Data and 1st Trip Freeze Frame Data

NEEC0895S0502

Freeze frame data item*	Description
DIAG TROUBLE CODE [PXXXX]	<ul style="list-style-type: none"> ● Engine Control component part/control system has a trouble code, it is displayed as "PXXXX". [Refer to "Alphabetical & P No. Index for DTC" (EC-13).]
FUEL SYS DATA	<ul style="list-style-type: none"> ● "Fuel injection system status" at the moment a malfunction is detected is displayed. ● One mode in the following is displayed. <ul style="list-style-type: none"> "MODE 2": Open loop due to detected system malfunction "MODE 3": Open loop due to driving conditions (power enrichment, deceleration enrichment) "MODE 4": Closed loop - using oxygen sensor(s) as feedback for fuel control "MODE 5": Open loop - has not yet satisfied condition to go to closed loop
CAL/LD VALUE [%]	<ul style="list-style-type: none"> ● The calculated load value at the moment a malfunction is detected is displayed.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

KA24DE

CONSULT-II (Cont'd)

Freeze frame data item*	Description
COOLANT TEMP [°C] or [°F]	<ul style="list-style-type: none"> The engine coolant temperature at the moment a malfunction is detected is displayed.
S-FUEL TRIM [%]	<ul style="list-style-type: none"> "Short-term fuel trim" at the moment a malfunction is detected is displayed. The short-term fuel trim indicates dynamic or instantaneous feedback compensation to the base fuel schedule.
L-FUEL TRIM [%]	<ul style="list-style-type: none"> "Long-term fuel trim" at the moment a malfunction is detected is displayed. The long-term fuel trim indicates much more gradual feedback compensation to the base fuel schedule than short-term fuel trim.
ENGINE SPEED [rpm]	<ul style="list-style-type: none"> The engine speed at the moment a malfunction is detected is displayed.
VHCL SPEED [km/h] or [mph]	<ul style="list-style-type: none"> The vehicle speed at the moment a malfunction is detected is displayed.
ABSOL PRESS [kPa] or [kg/cm ²] or [psi]	<ul style="list-style-type: none"> The absolute pressure at the moment a malfunction is detected is displayed.
B/FUEL SCHDL [m sec]	<ul style="list-style-type: none"> The base fuel schedule at the moment a malfunction is detected is displayed.
INT/A TEMP SE [°C] or [°F]	<ul style="list-style-type: none"> The intake air temperature at the moment a malfunction is detected is displayed.

*: The items are the same as those of 1st trip freeze frame data.

DATA MONITOR MODE

NEEC0895S06

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
CMPS-RPM (REF) [rpm]	○	○	<ul style="list-style-type: none"> Indicates the engine speed computed from the REF signal (180° signal) of the camshaft position sensor. 	<ul style="list-style-type: none"> Accuracy becomes poor if engine speed drops below the idle rpm. If the signal is interrupted while the engine is running, an abnormal value may be indicated.
MAS AIR/FL SE [V]	○	○	<ul style="list-style-type: none"> The signal voltage of the mass air flow sensor is displayed. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated.
COOLAN TEMP/S [°C] or [°F]	○	○	<ul style="list-style-type: none"> The engine coolant temperature (determined by the signal voltage of the engine coolant temperature sensor) is displayed. 	<ul style="list-style-type: none"> When the engine coolant temperature sensor is open or short-circuited, ECM enters fail-safe mode. The engine coolant temperature determined by the ECM is displayed.
FR O2 SENSOR [V]	○	○	<ul style="list-style-type: none"> The signal voltage of the front heated oxygen sensor is displayed. 	
RR O2 SENSOR [V]	○	○	<ul style="list-style-type: none"> The signal voltage of the rear heated oxygen sensor is displayed. 	
FR O2 MNTR [RICH/LEAN]	○	○	<ul style="list-style-type: none"> Display of front heated oxygen sensor signal during air-fuel ratio feedback control: RICH ... means the mixture became "rich", and control is being affected toward a leaner mixture. LEAN ... means the mixture became "lean", and control is being affected toward a rich mixture. 	<ul style="list-style-type: none"> After turning ON the ignition switch, "RICH" is displayed until air-fuel mixture ratio feedback control begins. When the air-fuel ratio feedback is clamped, the value just before the clamping is displayed continuously.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

KA24DE

CONSULT-II (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
RR O2 MNTR [RICH/LEAN]	○		<ul style="list-style-type: none"> ● Display of rear heated oxygen sensor signal: RICH ... means the amount of oxygen after three way catalyst is relatively small. LEAN ... means the amount of oxygen after three way catalyst is relatively large. 	<ul style="list-style-type: none"> ● When the engine is stopped, a certain value is indicated.
VHCL SPEED SE [km/h] or [mph]	○	○	<ul style="list-style-type: none"> ● The vehicle speed computed from the vehicle speed sensor signal is displayed. 	
BATTERY VOLT [V]	○	○	<ul style="list-style-type: none"> ● The power supply voltage of ECM is displayed. 	
THRTL POS SEN [V]	○	○	<ul style="list-style-type: none"> ● The throttle position sensor signal voltage is displayed. 	
TANK F/TMP SE [°C] or [°F]	○		<ul style="list-style-type: none"> ● The fuel temperature judged from the fuel tank temperature sensor signal voltage is displayed. 	
EGR TEMP SEN [V]	○		<ul style="list-style-type: none"> ● The signal voltage of the EGR temperature sensor is displayed. 	
INT/A TEMP SE [°C] or [°F]	○		<ul style="list-style-type: none"> ● The intake air temperature determined by the signal voltage of the intake air temperature sensor is indicated. 	
START SIGNAL [ON/OFF]	○	○	<ul style="list-style-type: none"> ● Indicates [ON/OFF] condition from the starter signal. 	<ul style="list-style-type: none"> ● After starting the engine, [OFF] is displayed regardless of the starter signal.
CLSD THL/P SW [ON/OFF]			<ul style="list-style-type: none"> ● Indicates mechanical contact [ON/OFF] condition of the closed throttle position switch. 	
CLSD THL POS [ON/OFF]	○	○	<ul style="list-style-type: none"> ● Indicates idle position [ON/OFF] computed by ECM according to the throttle position sensor signal. 	
AIR COND SIG [ON/OFF]	○	○	<ul style="list-style-type: none"> ● Indicates [ON/OFF] condition of the air conditioner switch as determined by the air conditioning signal. 	
P/N POSI SW [ON/OFF]	○	○	<ul style="list-style-type: none"> ● Indicates [ON/OFF] condition from the PNP switch signal. 	
PW/ST SIGNAL [ON/OFF]	○	○	<ul style="list-style-type: none"> ● Indicates [ON/OFF] condition of the power steering oil pressure switch determined by the power steering oil pressure switch signal. 	
IGNITION SW [ON/OFF]	○		<ul style="list-style-type: none"> ● Indicates [ON/OFF] condition from ignition switch. 	
INJ PULSE [msec]		○	<ul style="list-style-type: none"> ● Indicates the actual fuel injection pulse width compensated by ECM according to the input signals. 	<ul style="list-style-type: none"> ● When the engine is stopped, a certain computed value is indicated.
B/FUEL SCHDL [msec]		○	<ul style="list-style-type: none"> ● "Base fuel schedule" indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction. 	
IGN TIMING [BTDC]		○	<ul style="list-style-type: none"> ● Indicates the ignition timing computed by ECM according to the input signals. 	

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

KA24DE

CONSULT-II (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks	
IACV-AAC/V [%]		○	<ul style="list-style-type: none"> Indicates the IACV-AAC valve control value computed by ECM according to the input signals. 		GI MA
PURG VOL C/V [step]		○	<ul style="list-style-type: none"> Indicates the EVAP canister purge volume control value computed by the ECM according to the input signals. The opening becomes larger as the value increases. 		EM LC
A/F ALPHA [%]			<ul style="list-style-type: none"> Indicates the mean value of the air-fuel ratio feedback correction factor per cycle. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated. This data also includes the data for the air-fuel ratio learning control. 	EC
EVAP SYS PRES [V]		○	<ul style="list-style-type: none"> The signal voltage of EVAP control system pressure sensor is displayed. 		FE
AIR COND RLY [ON/OFF]			<ul style="list-style-type: none"> Indicates the air conditioner relay control condition determined by ECM according to the input signals. 		CL
FUEL PUMP RLY [ON/OFF]			<ul style="list-style-type: none"> Indicates the fuel pump relay control condition determined by ECM according to the input signals. 		MT
EGRC SOL/V [ON/OFF] (FLOW/CUT)			<ul style="list-style-type: none"> Indicates the control condition of the EGRC-solenoid valve determined by ECM according to the input signals. ON ... EGR valve is operational OFF ... EGR valve operation is cut-off 		AT TF
VENT CONT/V [ON/OFF]			<ul style="list-style-type: none"> The control condition of the EVAP canister vent control valve (determined by ECM according to the input signal) is indicated. ON ... Closed OFF ... Open 		PD AX
FR O2 HEATER [ON/OFF]			<ul style="list-style-type: none"> Indicates [ON/OFF] condition of front heated oxygen sensor heater determined by ECM according to the input signals. 		SU
RR O2 HEATER [ON/OFF]			<ul style="list-style-type: none"> Indicates [ON/OFF] condition of rear heated oxygen sensor heater determined by ECM according to the input signals. 		BR ST
VC/V BYPASS/V [ON/OFF]			<ul style="list-style-type: none"> The control condition of the vacuum cut valve bypass valve (determined by ECM according to the input signal) is indicated. ON ... Open OFF ... Closed 		RS BT
CAL/LD VALUE [%]			<ul style="list-style-type: none"> "Calculated load value" indicates the value of the current airflow divided by peak airflow. 		HA
ABSOL TH-P/S [%]			<ul style="list-style-type: none"> "Absolute throttle position sensor" indicates the throttle opening computed by ECM according to the signal voltage of the throttle position sensor. 		SC EL

CONSULT-II (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
MASS AIRFLOW [gm/s]			<ul style="list-style-type: none"> Indicates the mass airflow computed by ECM according to the signal voltage of the mass air flow sensor. 	
MAP/BARO SW/V [MAP/BARO]			<ul style="list-style-type: none"> The control condition of the MAP/BARO switch solenoid valve (determined by ECM according to the input signal) is indicated. MAP ... Intake manifold absolute pressure BARO ... Ambient barometric pressure 	
ABSOL PRES/SE [V]			<ul style="list-style-type: none"> The signal voltage of the absolute pressure sensor is displayed. 	
VOLTAGE [V]			<ul style="list-style-type: none"> Voltage measured by the voltage probe. 	
PULSE [msec] or [Hz] or [%]			<ul style="list-style-type: none"> Pulse width, frequency or duty cycle measured by the pulse probe. 	<ul style="list-style-type: none"> Only “#” is displayed if item is unable to be measured. Figures with “#”s are temporary ones. They are the same figures as an actual piece of data which was just previously measured.

NOTE:

Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.

ACTIVE TEST MODE

NEEC0895S07

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
FUEL INJECTION	<ul style="list-style-type: none"> Engine: Return to the original trouble condition Change the amount of fuel injection using CONSULT-II. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> Harness and connector Fuel injectors Front heated oxygen sensor
IACV-AAC/V OPENING	<ul style="list-style-type: none"> Engine: After warming up, idle the engine. Change the IACV-AAC valve opening percent using CONSULT-II. 	Engine speed changes according to the opening percent.	<ul style="list-style-type: none"> Harness and connector IACV-AAC valve
ENG COOLANT TEMP	<ul style="list-style-type: none"> Engine: Return to the original trouble condition Change the engine coolant temperature indication using CONSULT-II. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> Harness and connector Engine coolant temperature sensor Fuel injectors
IGNITION TIMING	<ul style="list-style-type: none"> Engine: Return to the original trouble condition Timing light: Set Retard the ignition timing using CONSULT-II. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> Adjust initial ignition timing
POWER BALANCE	<ul style="list-style-type: none"> Engine: After warming up, idle the engine. Air conditioner switch “OFF” Shift lever “N” Cut off each injector signal one at a time using CONSULT-II. 	Engine runs rough or dies.	<ul style="list-style-type: none"> Harness and connector Compression Injectors Power transistor Spark plugs Ignition coils

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

KA24DE

CONSULT-II (Cont'd)

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
FUEL PUMP RELAY	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Turn the fuel pump relay "ON" and "OFF" using CONSULT-II and listen to operating sound. 	Fuel pump relay makes the operating sound.	<ul style="list-style-type: none"> Harness and connector Fuel pump relay
EGRC SOLENOID VALVE	<ul style="list-style-type: none"> Ignition switch: ON Turn EGRC-solenoid valve "ON" and "OFF" using CONSULT-II and listen to operating sound. 	EGRC-solenoid valve makes an operating sound.	<ul style="list-style-type: none"> Harness and connector EGRC-solenoid valve
SELF-LEARNING CONT	<ul style="list-style-type: none"> In this test, the coefficient of self-learning control mixture ratio returns to the original coefficient by touching "CLEAR" on the screen. 		
PURG VOL CONT/V	<ul style="list-style-type: none"> Engine: After warming up, run engine at 1,500 rpm. Change the EVAP canister purge volume control valve opening step using CONSULT-II. 	Engine speed changes according to the opening step.	<ul style="list-style-type: none"> Harness and connector EVAP canister purge volume control valve
TANK F/TEMP SEN	<ul style="list-style-type: none"> Change the fuel tank temperature using CONSULT-II. 		
VENT CONTROL/V	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Turn solenoid valve "ON" and "OFF" using CONSULT-II and listen to operating sound. 	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> Harness and connector Solenoid valve
VC/V BYPASS/V	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Turn solenoid valve "ON" and "OFF" using CONSULT-II and listen to operating sound. 	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> Harness and connector Solenoid valve
MAP/BARO SW/V	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Turn the MAP/BARO switch solenoid valve between "MAP" and "BARO" using CONSULT-II and listen to operating sound. 	MAP/BARO switch solenoid valve makes an operating sound.	<ul style="list-style-type: none"> Harness and connector MAP/BARO switch solenoid valve

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC & SRT CONFIRMATION MODE

=NEEC0895S08

SRT STATUS Mode

NEEC0895S0801

For details, refer to "SYSTEM READINESS TEST (SRT) CODE", EC-58.

DTC Work Support Mode

NEEC0895S0802

TEST MODE	TEST ITEM	CONDITION	REFERENCE PAGE		
EVAPORATIVE SYSTEM	EVAP SML LEAK P0440	Refer to corresponding trouble diagnosis for DTC.	EC-352		
	EVAP SML LEAK P1440		EC-485		
	PURG VOL CN/V P1444		EC-487		
	PURGE FLOW P1447		EC-505		
	VC CUT/V BP/V P1491		EC-530		
	PURG CN/V & S/V P1493		EC-367		
FR O2 SENSOR	FR O2 SENSOR P0130		Refer to corresponding trouble diagnosis for DTC.	EC-191	
	FR O2 SENSOR P0131			EC-199	
	FR O2 SENSOR P0132			EC-206	
	FR O2 SENSOR P0133			EC-213	
RR O2 SENSOR	RR O2 SENSOR P0137			Refer to corresponding trouble diagnosis for DTC.	EC-236
	RR O2 SENSOR P0138				EC-246
	RR O2 SENSOR P0139				EC-256
EGR SYSTEM	EGR SYSTEM P0400				Refer to corresponding trouble diagnosis for DTC.
	EGRC-BPT/VLV P0402	EC-339			
	EGR SYSTEM P1402	EC-476			

REAL TIME DIAGNOSIS IN DATA MONITOR MODE (RECORDING VEHICLE DATA)

NEEC0895S09

CONSULT-II has two kinds of triggers and they can be selected by touching "SETTING" in "DATA MONITOR" mode.

1) "AUTO TRIG" (Automatic trigger):

- The malfunction will be identified on the CONSULT-II screen in real time.

In other words, DTC/1st trip DTC and malfunction item will be displayed if the malfunction is detected by ECM.

At the moment a malfunction is detected by ECM, "MONITOR" in "DATA MONITOR" screen is changed to "Recording Data ... xx%" as shown at left, and the data after the malfunction detection is recorded. Then the percentage reached 100%, "REAL-TIME DIAG" screen is displayed. If "STOP" is touched on the screen during "Recording Data ... xx%", "REAL-TIME DIAG" screen is also displayed.

The recording time after the malfunction detection and the recording speed can be changed by "TRIGGER POINT" and "RECORDING Speed". Refer to CONSULT-II OPERATION MANUAL.

2) "MANU TRIG" (Manual trigger):

- DTC/1st trip DTC and malfunction item will not be displayed automatically on CONSULT-II screen even though a malfunction is detected by ECM.

DATA MONITOR can be performed continuously even though a malfunction is detected.

Use these triggers as follows:


1) "AUTO TRIG"

- While trying to detect the DTC/1st trip DTC by performing the "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE", be sure to select to "DATA MONITOR (AUTO TRIG)" mode. You can confirm the malfunction at the moment it is detected.
- While narrowing down the possible causes, CONSULT-II should be set in "DATA MONITOR (AUTO TRIG)" mode, especially in case the incident is intermittent.


When you are inspecting the circuit by gently shaking (or twisting) the suspicious connectors, components and harness in the "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE", the moment a malfunction is found the DTC/1st trip DTC will be displayed. (Refer to "Incident Simulation Tests" in "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT", *GI-25*.)

2) "MANU TRIG"

- If the malfunction is displayed as soon as "DATA MONITOR" is selected, reset CONSULT-II to "MANU TRIG". By selecting "MANU TRIG" you can monitor and store the data. The data can be utilized for further diagnosis, such as a comparison with the value for the normal operating condition.

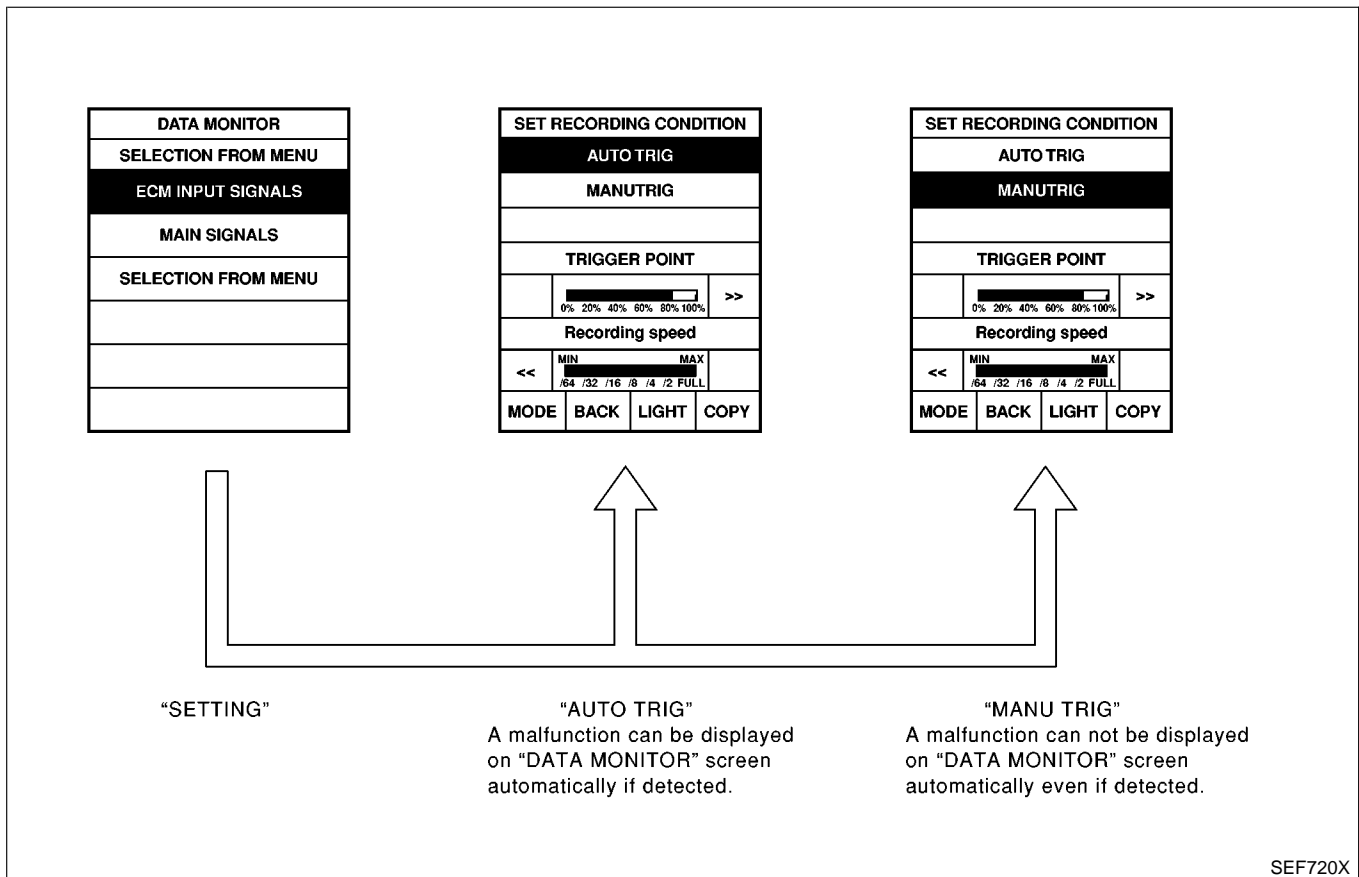

Generic Scan Tool (GST)

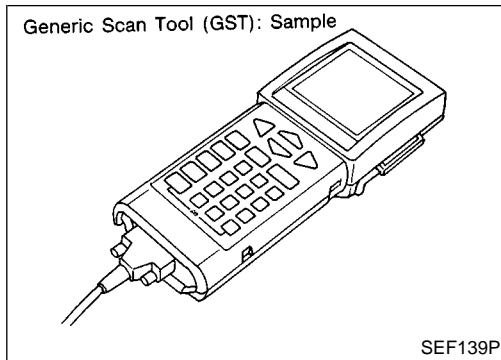


Generic Scan Tool (GST) DESCRIPTION

NEEC0896

NEEC0896S01


Generic Scan Tool (OBDII scan tool) complying with SAE J1978 has 8 different functions explained on the next page. ISO9141 is used as the protocol. The name "GST" or "Generic Scan Tool" is used in this service manual.

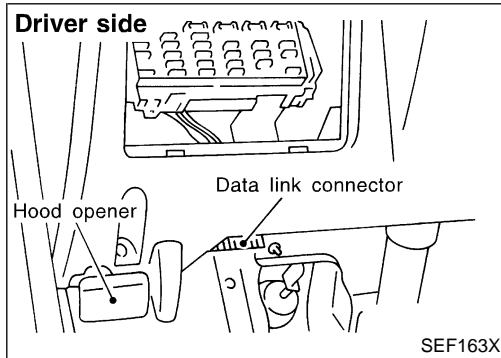

GST INSPECTION PROCEDURE


NEEC0896S02

1. Turn ignition switch OFF.
2. Connect "GST" to data link connector for GST. (Data link connector for GST is located under LH dash panel near the fuse box cover.)

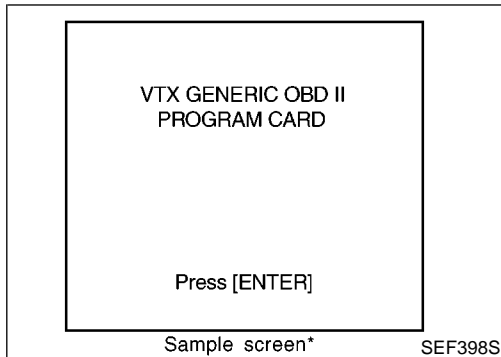

3. Turn ignition switch ON.
4. Enter the program according to instruction on the screen or in the operation manual.

(*: Regarding GST screens in this section, sample screens are shown.)

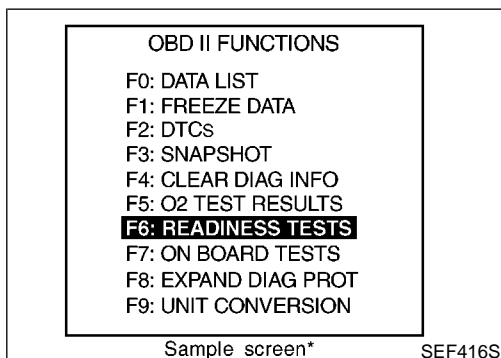

5. Perform each diagnostic mode according to each service procedure.

For further information, see the GST Operation Manual of the tool maker.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

KA24DE

Generic Scan Tool (GST) (Cont'd)

FUNCTION

NEEC0896S03

Diagnostic test mode		Function
MODE 1	READINESS TESTS	This mode gains access to current emission-related data values, including analog inputs and outputs, digital inputs and outputs, and system status information.
MODE 2	(FREEZE DATA)	This mode gains access to emission-related data value which were stored by ECM during the freeze frame. [For details, refer to "Freeze Frame Data" (EC-82).]
MODE 3	DTCs	This mode gains access to emission-related power train trouble codes which were stored by ECM.
MODE 4	CLEAR DIAG INFO	This mode can clear all emission-related diagnostic information. This includes: <ul style="list-style-type: none"> ● Clear number of diagnostic trouble codes (MODE 1) ● Clear diagnostic trouble codes (MODE 3) ● Clear trouble code for freeze frame data (MODE 1) ● Clear freeze frame data (MODE 2) ● Reset status of system monitoring test (MODE 1) ● Clear on board monitoring test results (MODE 6 and 7)
MODE 6	(ON BOARD TESTS)	This mode accesses the results of on board diagnostic monitoring tests of specific components/systems that are not continuously monitored.
MODE 7	(ON BOARD TESTS)	This mode enables the off board test drive to obtain test results for emission-related powertrain components/systems that are continuously monitored during normal driving conditions.
MODE 8	—	—
MODE 9	(CALIBRATION ID)	This mode is to enable the off-board to request vehicle specific information such as Vehicle Identification Number (VIN) and Calibration ID.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS




BT

HA

SC

EL

IDX

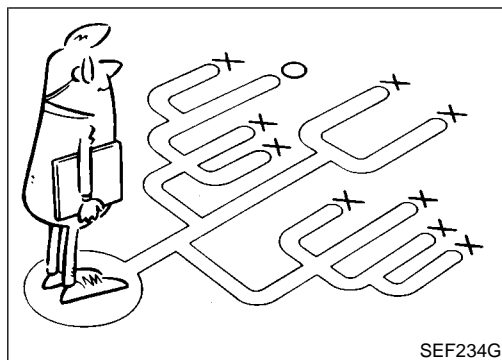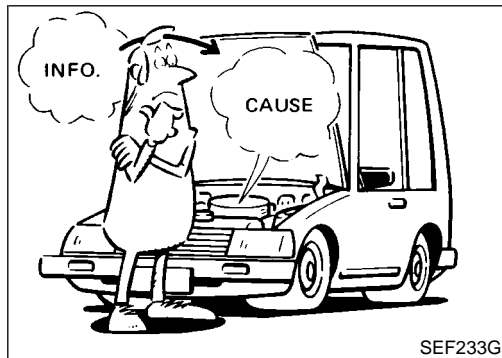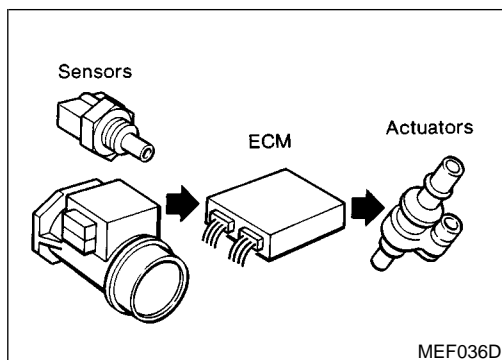

KEY POINTS

WHAT Vehicle & engine model
WHEN Date, Frequencies
WHERE..... Road conditions
HOW Operating conditions,
 Weather conditions,
 Symptoms

SEF907L

Introduction

NEEC0897

The engine has an ECM to control major systems such as fuel control, ignition control, idle air control system, etc. The ECM accepts input signals from sensors and instantly drives actuators. It is essential that both input and output signals are proper and stable. At the same time, it is important that there are no problems such as vacuum leaks, fouled spark plugs, or other problems with the engine.

It is much more difficult to diagnose a problem that occurs intermittently rather than continuously. Most intermittent problems are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.

A visual check only may not find the cause of the problems. A road test with CONSULT-II (or GST) or a circuit tester connected should be performed. Follow the "Work Flow" on EC-94.

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such problems, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "Diagnostic Worksheet" like the example on next page should be used.

Start your diagnosis by looking for "conventional" problems first. This will help troubleshoot driveability problems on an electronically controlled engine vehicle.

DIAGNOSTIC WORKSHEET

NEEC0897S01

There are many operating conditions that lead to the malfunction of engine components. A good grasp of such conditions can make trouble-shooting faster and more accurate.

In general, each customer feels differently about a problem. It is important to fully understand the symptoms or conditions for a customer complaint.


Utilize a diagnostic worksheet like the one on the next page in order to organize all the information for troubleshooting.

Some conditions may cause the malfunction indicator lamp to come on steady or blink and DTC to be detected. Examples:

- Vehicle ran out of fuel, which caused the engine to misfire.
- Fuel filler cap was left off or incorrectly screwed on, allowing fuel to evaporate into the atmosphere [for the models with EVAP (SMALL LEAK) diagnosis].

Work Flow

NEEC0898

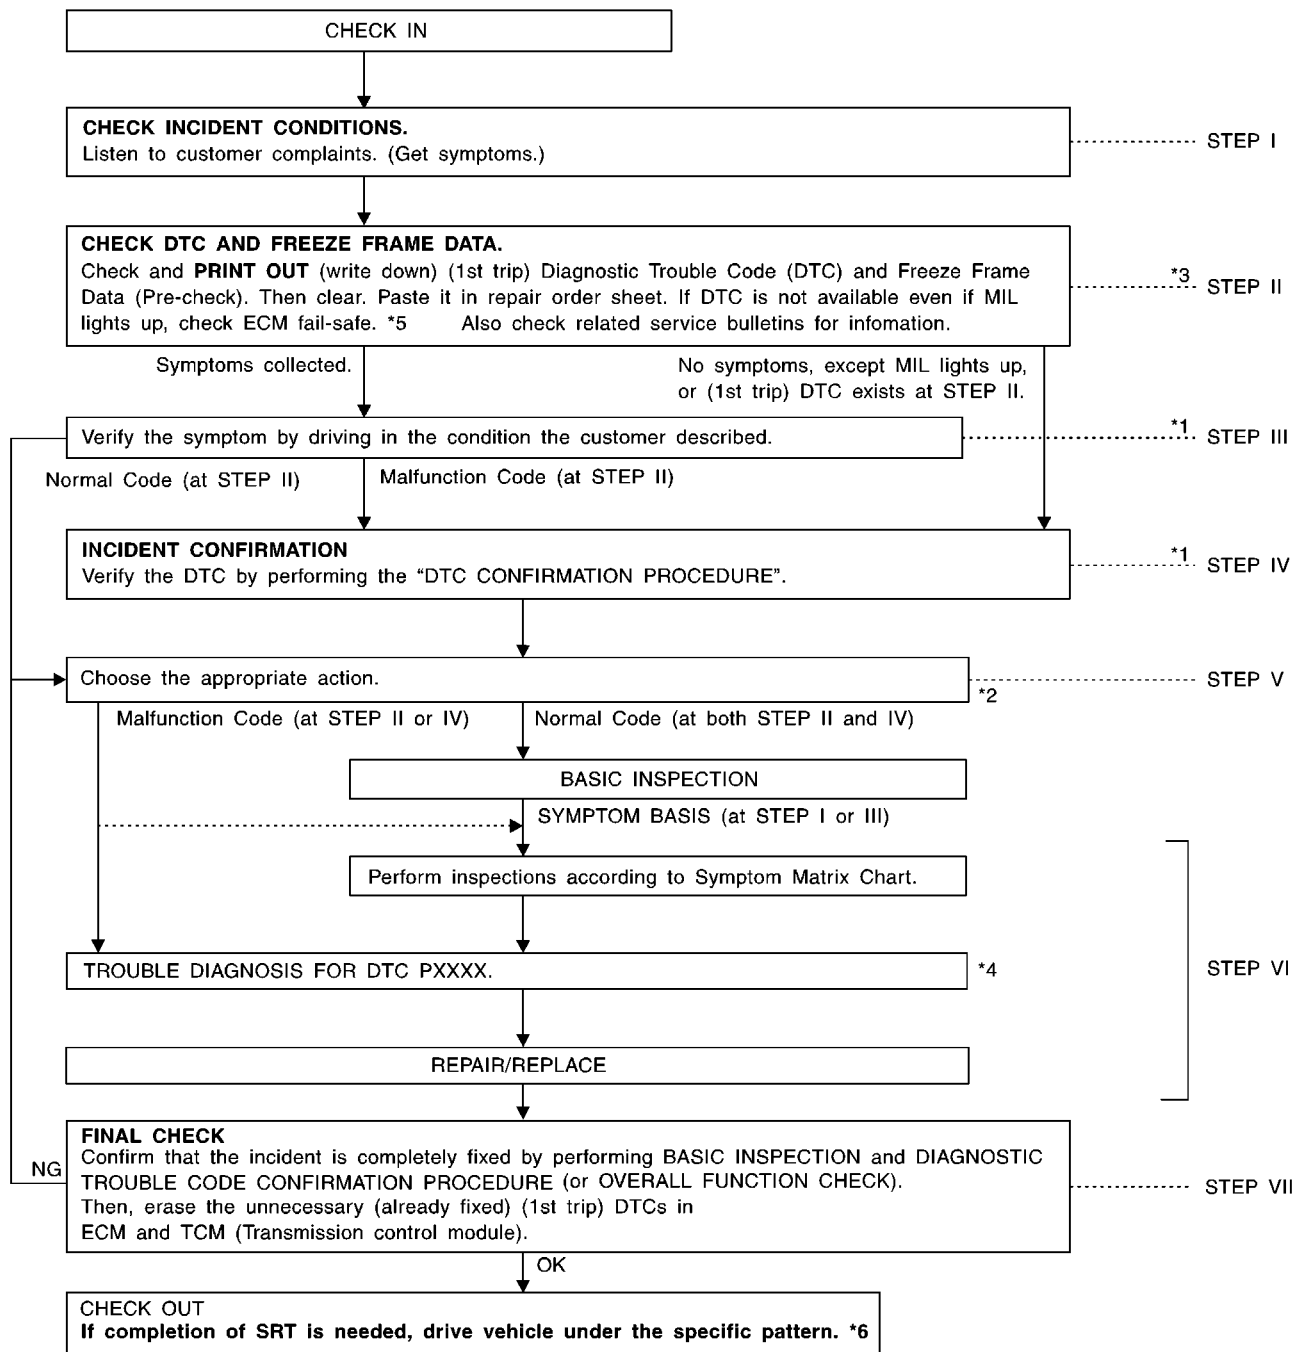

SEF944VB

*1: If the incident cannot be duplicated, refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.
 *2: If the on board diagnostic system cannot be performed, check main power supply and ground circuit.

Refer to "TROUBLE DIAGNOSIS FOR POWER SUPPLY", EC-130.
 *3: If time data of "SELF-DIAG RESULTS" is other than "0" or "1t" refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT", EC-129.
 *4: If the malfunctioning part cannot

be found, refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.
 *5: EC-111
 *6: EC-64

TROUBLE DIAGNOSIS — INTRODUCTION

KA24DE

Work Flow (Cont'd)

DESCRIPTION FOR WORK FLOW

NEEC0898S01

STEP	DESCRIPTION
STEP I	Get detailed information about the conditions and the environment when the incident/symptom occurred using the "DIAGNOSTIC WORK SHEET", EC-93.
STEP II	Before confirming the concern, check and write down (print out using CONSULT-II or Generic Scan Tool) the (1st trip) Diagnostic Trouble Code (DTC) and the (1st trip) freeze frame data, then erase the code and the data. (Refer to EC-69.) The (1st trip) DTC and the (1st trip) freeze frame data can be used when duplicating the incident at STEP III & IV. Study the relationship between the cause, specified by (1st trip) DTC, and the symptom described by the customer. (The "Symptom Matrix Chart" will be useful. See EC-112.) Also check related service bulletins for information.
STEP III	Try to confirm the symptom and under what conditions the incident occurs. The "DIAGNOSTIC WORK SHEET" and the freeze frame data are useful to verify the incident. Connect CONSULT-II to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results. If the incident cannot be verified, perform INCIDENT SIMULATION TESTS. (Refer to GI section.) If the malfunction code is detected, skip STEP IV and perform STEP V.
STEP IV	Try to detect the (1st trip) Diagnostic Trouble Code by driving in (or performing) the "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE". Check and read the (1st trip) DTC and (1st trip) freeze frame data by using CONSULT-II or Generic Scan Tool. During the (1st trip) DTC verification, be sure to connect CONSULT-II to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results. If the incident cannot be verified, perform INCIDENT SIMULATION TESTS. (Refer to GI section.) In case the "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" is not available, perform the "OVERALL FUNCTION CHECK" instead. The (1st trip) DTC cannot be displayed by this check, however, this simplified "check" is an effective alternative. The "NG" result of the "OVERALL FUNCTION CHECK" is the same as the (1st trip) DTC detection.
STEP V	Take the appropriate action based on the results of STEP I through IV. If the malfunction code is indicated, proceed to TROUBLE DIAGNOSIS FOR DTC PXXXX. If the normal code is indicated, proceed to the BASIC INSPECTION. (Refer to EC-96.) Then perform inspections according to the Symptom Matrix Chart. (Refer to EC-112.)
STEP VI	Identify where to begin diagnosis based on the relationship study between symptom and possible causes. Inspect the system for mechanical binding, loose connectors or wiring damage using (tracing) "Harness Layouts". Gently shake the related connectors, components or wiring harness with CONSULT-II set in "DATA MONITOR (AUTO TRIG)" mode. Check the voltage of the related ECM terminals or monitor the output data from the related sensors with CONSULT-II. Refer to EC-121. The "DIAGNOSTIC PROCEDURE" in EC section contains a description based on open circuit inspection. A short circuit inspection is also required for the circuit check in the DIAGNOSTIC PROCEDURE. For details, refer to "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT", "Circuit Inspection", GI-27 . Repair or replace the malfunction parts.
STEP VII	Once you have repaired the circuit or replaced a component, you need to run the engine in the same conditions and circumstances which resulted in the customer's initial complaint. Perform the "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" and confirm the normal code [Diagnostic trouble code No. P0000 or 0505] is detected. If the incident is still detected in the final check, perform STEP VI by using a different method from the previous one. Before returning the vehicle to the customer, be sure to erase the unnecessary (already fixed) (1st trip) DTC in ECM. (Refer to EC-69.)

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX


Basic Inspection


NEEC0899


Precaution:


Perform Basic Inspection without electrical or mechanical loads applied;

- Headlamp switch is OFF,
- Air conditioner switch is OFF,
- Rear window defogger switch is OFF,
- Steering wheel is in the straight-ahead position, etc.

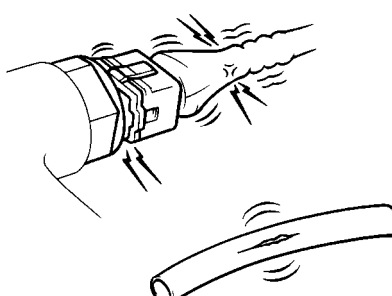1	INSPECTION START	<p>1. Check service records for any recent repairs that may indicate a related problem, or the current need for scheduled maintenance.</p> <p>2. Open engine hood and check the following:</p> <ul style="list-style-type: none"> ● Harness connectors for improper connections ● Vacuum hoses for splits, kinks, or improper connections ● Wiring for improper connections, pinches, or cuts
		
<small>SEF142I</small>		
With CONSULT-II	▶	GO TO 2.
With GST	▶	GO TO 4.
No tools	▶	GO TO 5.

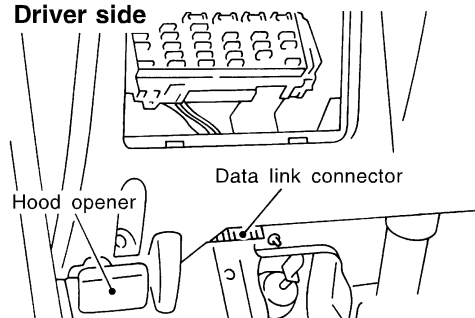2	CONNECT CONSULT-II TO THE VEHICLE	<p>Connect "CONSULT-II" to the data link connector and select "ENGINE" from the menu. Refer to EC-79.</p>
<p>Driver side</p> 		
<small>SEF163X</small>		
		▶ GO TO 3.

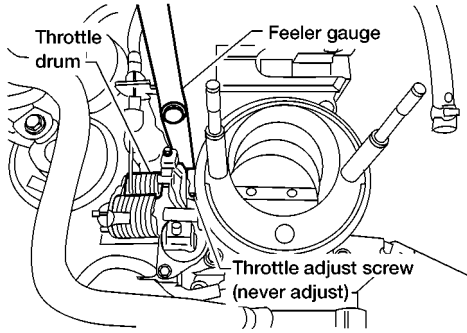
3	CHECK FI CAM FUNCTION	<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Adjust accelerator wire. Refer to "Adjust Accelerator Wire", FE-3. 2. Warm up engine to 75°C (167°F). 3. Stop engine and wait at least 5 seconds, then turn ignition switch ON. 4. Select "COOLAN TEMP/S" in "DATA MONITOR" mode with CONSULT-II. 5. When the engine coolant temp is 75 to 85°C (167 to 185°F), confirm the clearance is less than 0.05mm (0.002in), between stopper and throttle drum as shown in the figure. <div style="text-align: center;">  <p style="text-align: right;">AEC871A</p> </div> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 6.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace throttle body assembly. Refer to "OUTER COMPONENT PARTS", EM-13.</td> </tr> </table>	OK	▶	GO TO 6.	NG	▶	Replace throttle body assembly. Refer to "OUTER COMPONENT PARTS", EM-13 .	GI MA EM LC EC FE CL MT
OK	▶	GO TO 6.							
NG	▶	Replace throttle body assembly. Refer to "OUTER COMPONENT PARTS", EM-13 .							

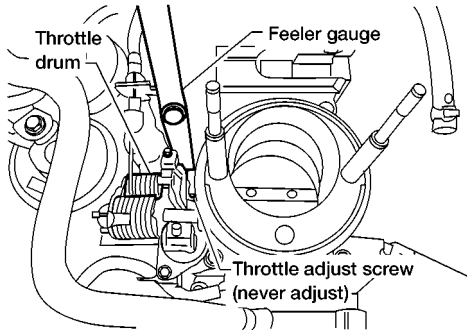4	CHECK FI CAM FUNCTION	<p>Ⓟ With GST</p> <ol style="list-style-type: none"> 1. Adjust accelerator wire. Refer to "Adjust Accelerator Wire", FE-3. 2. Warm up engine to 75°C (167°F). 3. Stop engine and wait at least 10 seconds, then turn ignition switch "ON". 4. Select "MODE 1" with GST. 5. When the engine coolant temp is 75 to 85°C (167 to 185°F), confirm the clearance is less than 0.05mm (0.002in), between stopper and throttle drum as shown in the figure. <div style="text-align: center;">  <p style="text-align: right;">AEC871A</p> </div> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK (With CONSULT-II)</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 6.</td> </tr> <tr> <td>OK (Without CONSULT-II)</td> <td style="text-align: center;">▶</td> <td>GO TO 14.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace throttle body assembly. Refer to "OUTER COMPONENT PARTS", EM-13.</td> </tr> </table>	OK (With CONSULT-II)	▶	GO TO 6.	OK (Without CONSULT-II)	▶	GO TO 14.	NG	▶	Replace throttle body assembly. Refer to "OUTER COMPONENT PARTS", EM-13 .	AT TF PD AX SU BR ST RS BT HA SC EL IDX
OK (With CONSULT-II)	▶	GO TO 6.										
OK (Without CONSULT-II)	▶	GO TO 14.										
NG	▶	Replace throttle body assembly. Refer to "OUTER COMPONENT PARTS", EM-13 .										

5 CHECK FI CAM FUNCTION


No Tools

1. Adjust accelerator wire. Refer to "Adjust Accelerator Wire", **FE-3**.
2. Disconnect engine coolant temperature sensor harness connector and check resistance as shown in the figure.

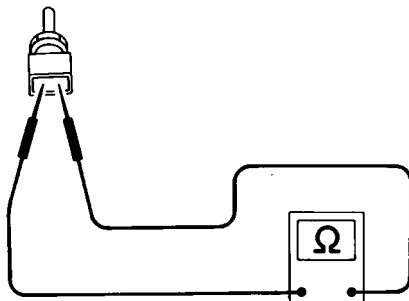

SEF536H

3. Warm up engine until the resistance of coolant temperature sensor is 0.26 to 0.39 kΩ.
4. Turn ignition switch "OFF".
5. When engine coolant temperature is 75 to 85°C (167 to 185°F), with the voltage between 1.10 to 1.36V, make sure that the clearance is less than 0.5mm (0.002in), between stopper and throttle adjusting screw as shown in figure.

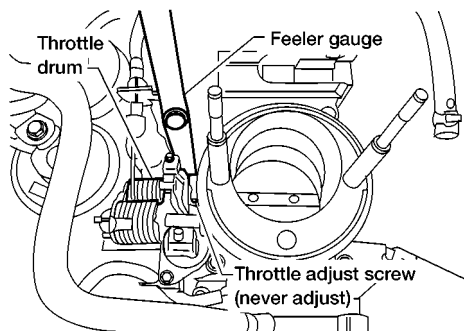

AEC871A

OK or NG

OK	▶	GO TO 14.
NG	▶	Replace throttle body assembly. Refer to "OUTER COMPONENT PARTS", EM-13 .

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

6 CHECK IGNITION TIMING

Ⓜ With CONSULT-II


1. Warm up engine to normal operating temperature.
2. Select "IGNITION TIMING ADJ" in "WORK SUPPORT" mode.
3. Touch "START".

IGNITION TIMING ADJ

IGNITION TIMING FEEDBACK CONTROL WILL BE HELD BY TOUCHING START. AFTER DOING SO, ADJUST IGNITION TIMING WITH A TIMING LIGHT BY TURNING THE CAMSHAFT POSITION SENSOR.

4. Check ignition timing at idle using timing light.

PEF546N

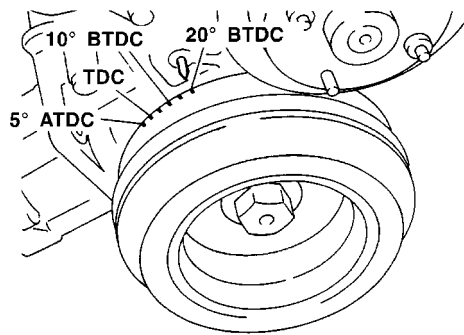

SEF320V

Ignition timing:
20°±2° BTDC (in "P" or "N" position)

OK or NG

OK	▶	GO TO 7.
NG	▶	<ol style="list-style-type: none"> 1. Adjust ignition timing by turning distributor. Refer to "Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment", EC-42. 2. GO TO 7.

7	CHECK BASE IDLE SPEED																								
<p>Ⓢ With CONSULT-II</p> <p>1. Select "IGNITION TIMING ADJ" in "WORK SUPPORT" mode and touch "START".</p>																									
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr><td colspan="2" style="text-align: center;">IACV-AAC/V ADJ</td></tr> <tr><td colspan="2" style="text-align: center;">ADJ MONITOR</td></tr> <tr><td style="text-align: center;">CMPS-RPM(POS)</td><td style="text-align: center;">700 rpm</td></tr> <tr><td colspan="2" style="text-align: center;">CONDITION SETTING</td></tr> <tr><td style="text-align: center;">IACV-ACC/V</td><td style="text-align: center;">FIXED</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td colspan="2" style="text-align: center;">MONITOR</td></tr> <tr><td style="text-align: center;">COOLANT TEMP/S</td><td style="text-align: center;">XXX°C</td></tr> <tr><td style="text-align: center;">CLSD THL POS</td><td style="text-align: center;">XXX N</td></tr> <tr><td> </td><td> </td></tr> </table>				IACV-AAC/V ADJ		ADJ MONITOR		CMPS-RPM(POS)	700 rpm	CONDITION SETTING		IACV-ACC/V	FIXED					MONITOR		COOLANT TEMP/S	XXX°C	CLSD THL POS	XXX N		
IACV-AAC/V ADJ																									
ADJ MONITOR																									
CMPS-RPM(POS)	700 rpm																								
CONDITION SETTING																									
IACV-ACC/V	FIXED																								
MONITOR																									
COOLANT TEMP/S	XXX°C																								
CLSD THL POS	XXX N																								
PEF120W																									
<p>2. Check idle speed. 750±50 rpm (in "P" or "N" position)</p> <p style="text-align: center;">OK or NG</p>																									
OK	▶	GO TO 8.																							
NG	▶	<p>1. Adjust base idle speed by turning idle speed adjusting screw. Refer to "Idle Speed/ Ignition Timing/Idle Mixture Ratio Adjustment", EC-42.</p> <p>2. GO TO 8.</p>																							


8 CHECK CLOSED THROTTLE POSITION SWITCH IDLE POSITION (CHECK THROTTLE POSITION SENSOR IDLE POSITION)

With CONSULT-II

NOTE:

Always check ignition timing and base idle speed before performing the following.

1. Warm up engine to normal operating temperature.
2. Check FI cam. Refer to procedure 3.
3. Stop engine.
4. Turn ignition switch "ON".
5. Select "DATA MONITOR" mode with CONSULT-II.
6. Select "CLSD THL/P SW" from the menu.
7. Read "CLSD THL/P SW" signal under the following conditions.
 - Insert a 0.1 mm (0.004 in) and 0.3 mm (0.012 in) feeler gauge alternately between the throttle adjust screw (TAS) and throttle drum as shown in the figure and check the signal.

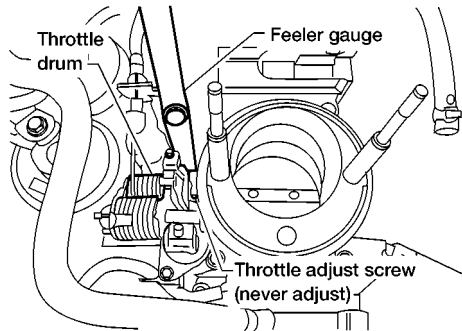

AEC871A

DATA MONITOR	
MONITORING	NO FAIL
CLSD THL/P SW	OFF

PEF122W

"CLSD THL/P SW" signal should remain "ON" while inserting 0.1 mm (0.004 in) feeler gauge.
 "CLSD THL/P SW" signal should remain "OFF" while inserting 0.3 mm (0.012 in) feeler gauge.

OK or NG

OK	▶	GO TO 12.
NG	▶	GO TO 9.


GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

9 ADJUSTMENT THROTTLE POSITION SENSOR IDLE POSITION-1

Ⓟ With CONSULT-II

NOTE:

- **Never adjust throttle adjust screw (TAS).**
 - **Do not touch throttle drum when checking "CLSD THL/P SW" signal.**
Doing so may cause an incorrect adjustment.
1. Warm engine up to normal operating temperature.
 2. Check FI cam. Refer to procedure 3.
 3. Stop engine.
 4. Loosen throttle position sensor fixing bolts.
 5. Turn ignition switch "ON".
 6. Select "CLSD THL/P SW" in "DATA MONITOR" mode.
 7. Insert a 0.1 mm (0.004 in) feeler gauge between throttle adjust screw and throttle drum as shown in the figure.

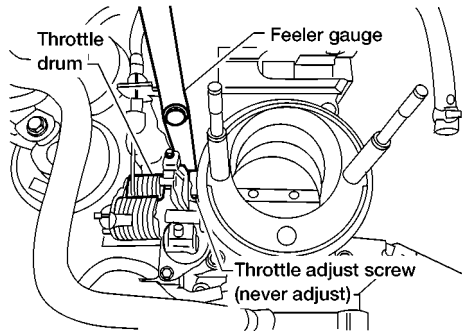

AEC871A

8. Open throttle valve and then close.
9. Check "CLSD THL/P SW" signal.

DATA MONITOR	
MONITORING	NO FAIL
CLSD THL/P SW	OFF

PEF122W

"CLSD THL/P SW" signal should remain "OFF" when the throttle valve is closed.
 If it is impossible to adjust closed throttle position switch, replace throttle position sensor.


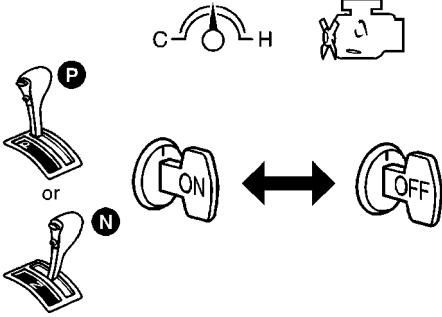
OK or NG


OK	▶	GO TO 11.
NG	▶	GO TO 10.



10	ADJUSTMENT THROTTLE POSITION SENSOR IDLE POSITION-2
<p> With CONSULT-II Turn throttle position sensor body counterclockwise until "CLSD THL/P SW" signal switches to "OFF".</p>	
AEC872A	
▶	GO TO 11.

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

11	ADJUSTMENT THROTTLE POSITION SENSOR IDLE POSITION-3
<p> With CONSULT-II 1. Temporarily tighten sensor body fixing bolts as follows. ● Gradually move the sensor body clockwise and stop it when "CLSD THL/P SW" signal switches from "OFF" to "ON" when tightening sensor body fixing bolts.</p>	
AEC872A	
<p>2. Make sure two or three times that the signal is "ON" when the throttle valve is closed and "OFF" when it is opened. 3. Remove 0.1 mm (0.004 in) feeler gauge then insert 0.3 mm (0.012 in) feeler gauge. 4. Make sure two or three times that the signal remains "OFF" when the throttle valve is closed. 5. Tighten throttle position sensor. 6. Check "CLSD THL/P SW" signal again. The signal remains "OFF" while closing throttle valve.</p>	
OK or NG	
OK	▶ 1. Remove 0.3 mm (0.012 in) feeler gauge. 2. GO TO 12.
NG	▶ GO TO 9.

12	RESET THROTTLE POSITION SENSOR IDLE POSITION MEMORY						
<p> With CONSULT-II</p> <p>NOTE: Always warm up engine to normal operating temperature. If engine is cool, the throttle position sensor idle position memory will not be reset correctly.</p> <ol style="list-style-type: none"> 1. Start engine. 2. Warm up engine to normal operating temperature. 3. Select "CLSD THL POS" in "DATA MONITOR" mode manual trigger. 4. Stop engine. (Turn ignition switch "OFF".) 5. Turn ignition switch "ON" and wait at least 5 seconds. <div style="text-align: center; margin: 10px 0;">  </div> <ol style="list-style-type: none"> 6. Turn ignition switch "OFF" and wait at least 5 seconds. 7. Repeat steps 5 and 6 until "CLSD THL POS" in "DATA MONITOR" mode with CONSULT-II changes to "ON". <div style="text-align: center; margin: 10px 0;"> <table border="1" style="border-collapse: collapse; width: 150px;"> <thead> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th style="width: 50%;">MONITORING</th> <th style="width: 50%;">NO FAIL</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">CLSD THL POS</td> <td style="text-align: center;">ON</td> </tr> </tbody> </table> </div>		DATA MONITOR		MONITORING	NO FAIL	CLSD THL POS	ON
DATA MONITOR							
MONITORING	NO FAIL						
CLSD THL POS	ON						
SEF864V							
PEF123W							
▶	GO TO 13.						

13	CHECK TARGET IDLE SPEED
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "CMPS-RPM (REF)" in "DATA MONITOR" mode. 3. Check idle speed. 800±50 rpm (in "P" or "N" position) <p style="text-align: center; margin-top: 10px;">OK or NG</p>	
OK	▶ INSPECTION END
NG	▶ Adjust idle speed. Refer to "Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment", EC-42.

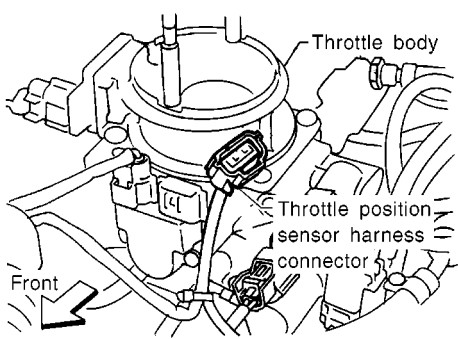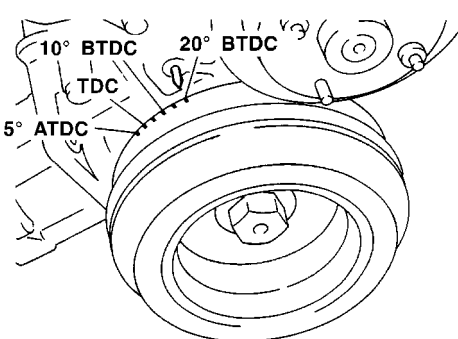14	CHECK IGNITION TIMING
<p>⊗ Without CONSULT-II</p> <p>1. Warm up engine to normal operating temperature. 2. Stop engine and disconnect throttle position sensor harness connector.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF265S</p> <p>3. Start engine. 4. Rev engine (2,000 to 3,000 rpm) two or three times under no-load and then run engine at idle speed. 5. Check ignition timing at idle using timing light.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF320V</p> <p>Ignition timing: $20^{\circ} \pm 2^{\circ}$ BTDC (in "P" or "N" position)</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 15.
NG	▶ 1. Adjust ignition timing by turning distributor. Refer to "Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment", EC-42. 2. GO TO 15.

15	CHECK BASE IDLE SPEED
<p>⊗ Without CONSULT-II</p> <p>Make sure that engine speed falls to the following speed.</p> <p>M/T: 750±50 rpm A/T: 750±50 rpm (in "P" or "N" position)</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 16.
NG	▶ 1. Adjust base idle speed by turning idle speed adjusting screw. Refer to "Idle Speed/ Ignition Timing/Idle Mixture Ratio Adjustment", EC-42. 2. GO TO 16.

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX



16	CHECK CLOSED THROTTLE POSITION SWITCH IDLE POSITION (CHECK THROTTLE POSITION SENSOR IDLE POSITION)
-----------	---

Without CONSULT-II

NOTE:


Always check ignition timing and base idle speed before performing the following.

1. Warm up engine to normal operating temperature.
2. Check FI cam. Refer to procedure 5.
3. Stop engine.
4. Disconnect closed throttle position switch harness connector .
5. Connect the tester probe to closed throttle position switch terminals 5 and 6.
6. Check harness continuity under the following conditions.

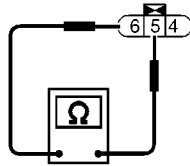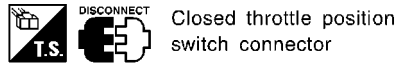

SEF862V

- Insert the 0.1 mm (0.004 in) and 0.3 mm (0.012 in) feeler gauge alternately between the throttle adjust screw (TAS) and throttle drum as shown in the figure.

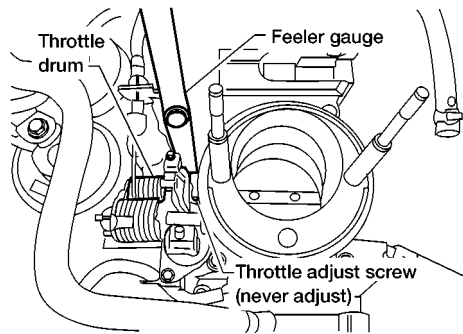

AEC871A

“Continuity should exist” while inserting 0.1 mm (0.004 in) feeler gauge.
“Continuity should not exist” while inserting 0.3 mm (0.012 in) feeler gauge.

OK or NG

OK	▶	GO TO 18.
NG	▶	GO TO 17.


17 ADJUSTMENT THROTTLE POSITION SENSOR IDLE POSITION-1

⊗ Without CONSULT-II

NOTE:

- Never adjust throttle adjust screw (TAS).
- Do not touch throttle drum when checking "continuity".
Doing so may cause an incorrect adjustment.

1. Warm engine up to normal operating temperature.
2. Check FI cam. Refer to procedure 5.
3. Stop engine.
4. Loosen throttle position sensor fixing bolts.
5. Disconnect closed throttle position sensor harness connector.
6. Insert 0.1 mm (0.004 in) feeler gauge between the throttle adjust screw and throttle drum as shown in the figure.

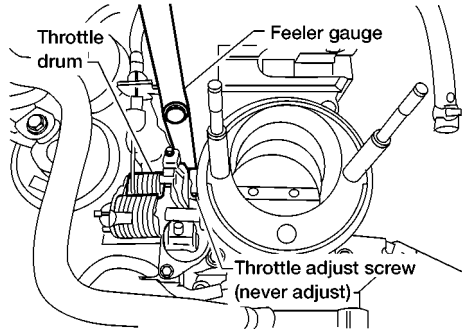


AEC871A

7. Open throttle valve then close.
8. Check continuity between closed throttle position switch terminal 5 and 6.



Closed throttle position switch connector

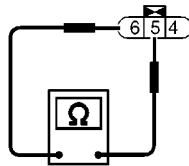

SEF862V

The continuity should not exist while closing the throttle position sensor body.
If it is impossible to adjust closed throttle position switch, replace throttle position sensor.

OK or NG

OK	▶	GO TO 19.
NG	▶	GO TO 18.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

18 ADJUSTMENT THROTTLE POSITION SENSOR IDLE POSITION-2**⊗ Without CONSULT-II**

Turn throttle position sensor body counterclockwise until continuity does not exist.

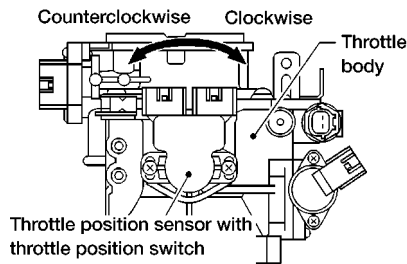

AEC872A




GO TO 19.

19 ADJUSTMENT THROTTLE POSITION SENSOR IDLE POSITION-3**⊗ Without CONSULT-II**

1. Temporarily tighten sensor body fixing bolts as follows.

- Gradually move the sensor body clockwise and stop it when the continuity comes to exist, then tighten sensor body fixing bolts.

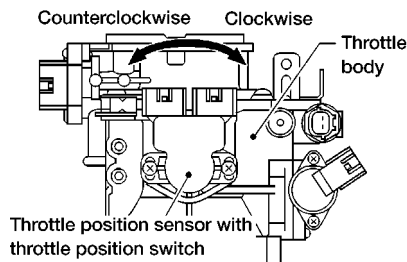

AEC872A

2. Make sure two or three times that the continuity exists when the throttle valve is closed and continuity does not exist when it is opened.
3. Remove 0.1 mm (0.004 in) feeler gauge then insert 0.3 mm (0.012 in) feeler gauge.
4. Make sure two or three times that continuity does not exist when the throttle valve is closed.
5. Tighten throttle position sensor.
6. Check the continuity again.

Continuity does not exist while closing the throttle valve.

OK or NG

OK


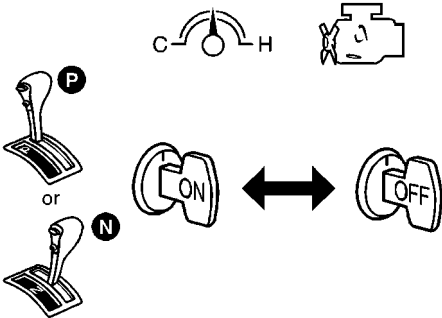


GO TO 20.


NG




GO TO 17.

21	RESET THROTTLE POSITION SENSOR IDLE POSITION MEMORY
<p> Without CONSULT-II</p> <p>NOTE: Always warm up engine to normal operating temperature. If engine is cool, the throttle position sensor idle position memory will not be reset correctly.</p> <ol style="list-style-type: none"> 1. Remove 0.3 mm (0.012 in) feeler gauge. 2. Start engine. 3. Warm up engine to normal operating temperature. 4. Stop engine. (Turn ignition switch "OFF".) 5. Turn ignition switch "ON" and wait at least 5 seconds. 	
	
<ol style="list-style-type: none"> 6. Turn ignition switch "OFF" and wait at least 5 seconds. 7. Repeat steps 5 and 6, 20 times. 	
▶	GO TO 22.

SEF864V

20	REINSTALLATION
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Reconnect throttle position sensor harness connector and closed throttle position switch harness connector. 2. Rev engine (2,000 to 3,000 rpm) two or three times under no-load and then run engine at idle speed. 	
▶	GO TO 21.

22	CHECK TARGET IDLE SPEED
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. 800±50 rpm (in "P" or "N" position) 	
OK or NG	
OK	▶ GO TO 23.
NG	▶ <ol style="list-style-type: none"> 1. Adjust target idle speed. Refer to "Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment", EC-42. 2. GO TO 23.

23	ERASE UNNECESSARY DTC
<p>After this inspection, unnecessary DTC No. might be displayed. Erase the stored memory in ECM and TCM. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION" (EC-69) and "HOW TO ERASE DTC" in AT section.</p>	
▶	INSPECTION END

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC Inspection Priority Chart

NEEC0900

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)
1	<ul style="list-style-type: none"> ● P0100 Mass air flow sensor (0102) ● P0110 Intake air temperature sensor (0401) ● P0115, P0125 Engine coolant temperature sensor (0103) (0908) ● P0120 Throttle position sensor (0403) ● P0180 Fuel tank temperature sensor (0402) ● P0325 Knock sensor (0304) ● P0340 Camshaft position sensor (0101) ● P0500 Vehicle speed sensor (0104) ● P0605 ECM (0301) ● P1320 Ignition signal (0201) ● P1400 EGRC-solenoid valve (1005) ● P1706 Park/neutral position switch (1003)
2	<ul style="list-style-type: none"> ● P0105 Absolute pressure sensor (0803) ● P0130 - P0134 Front heated oxygen sensor (0303 - 0412) ● P0135 Front heated oxygen sensor heater (0901) ● P0137 - P0140 Rear heated oxygen sensor (0510 - 0707) ● P0141 Rear heated oxygen sensor heater (0902) ● P0335, P1336 Crankshaft position sensor (OBD) (0802) (0905) ● P0443, P1444 EVAP canister purge volume control solenoid valve (1008), (0214) ● P0446, P1446, P1448 EVAP canister vent control valve (0903), (0215), (0309) ● P0450 EVAP control system pressure sensor (0704) ● P0510 Closed throttle position switch (0203) ● P1105 MAP/BARO switch solenoid valve (1302) ● P1401 EGR temperature sensor (0305) ● P1447 EVAP control system purge flow monitoring (0111) ● P1490, P1491 Vacuum cut valve bypass valve (0801) (0311)
3	<ul style="list-style-type: none"> ● P0172, P0171 Fuel injection system function (0114), (0115) ● P0300 - P0304 Misfire (0701 - 0605) ● P0400, P1402 EGR function (0302) (0514) ● P0402 EGRC-BPT valve function (0306) ● P0420 Three way catalyst function (0702) ● P0440, P1440, P0455 EVAP control system (SMALL LEAK) (0705) (0213), (GROSS LEAK) (0715) ● P0505 IACV-AAC valve (0205) ● P1148 Closed loop control (0307)

Fail-safe Chart

=NEEC0901

The ECM enters fail-safe mode if any of the following malfunctions is detected due to the open or short circuit. When the ECM enters the fail-safe mode, the MIL illuminates.

DTC No.		Detected items	Engine operating condition in fail-safe mode	
CONSULT-II GST	ECM*1			
P0100	0102	Mass air flow sensor circuit	Engine speed will not rise more than 2,400 rpm due to the fuel cut.	
P0110	0401	Intake air temperature sensor	The ECM functions on the assumption that the intake air temperature is 25°C (77°F).	
P0115	0103	Engine coolant temperature sensor circuit	Engine coolant temperature will be determined by ECM based on the time after turning ignition switch to ON or START. CONSULT-II displays the engine coolant temperature decided by ECM.	
			Condition	Engine coolant temperature decided (CONSULT-II display)
			Just as ignition switch is turned to ON or Start	40°C (104°F)
			More than approx. 4 minutes after ignition ON or Start	80°C (176°F)
			Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)
P0120	0403	Throttle position sensor circuit	Throttle position will be determined based on the injected fuel amount and the engine speed. Therefore, acceleration will be poor.	
			Condition	Driving condition
			When engine is idling	Normal
			When accelerating	Poor acceleration
Unable to access ECM	Unable to access Diagnostic Test Mode II	ECM	<p>ECM fail-safe activating condition The computing function of the ECM was judged to be malfunctioning. When the fail-safe system activates (i.e., if the ECM detects a malfunction condition in the CPU of ECM), the MIL on the instrument panel lights to warn the driver. However it is not possible to access ECM and DTC cannot be confirmed.</p> <p>Engine control with fail-safe When ECM fail-safe is operating, fuel injection, ignition timing, fuel pump operation and IACV-AAC valve operation are controlled under certain limitations.</p>	
			ECM fail-safe operation	
			Engine speed	Engine speed will not rise more than 3,000 rpm
			Fuel injection	Simultaneous multiport fuel injection system
			Ignition timing	Ignition timing is fixed at the preset valve
			Fuel pump	Fuel pump relay is "ON" when engine is running and "OFF" when engine stalls
			IACV-AAC valve	Full open
			Replace ECM, if ECM fail-safe condition is confirmed.	

*: In Diagnostic Test Mode II (Self-diagnostic results)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

KA24DE

Symptom Matrix Chart

Symptom Matrix Chart SYSTEM — ENGINE CONTROL SYSTEM

NEEC0902

NEEC0902S01

		SYMPTOM											Reference page		
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEAT/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION		EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Fuel	Fuel pump circuit	1	1	2	3	2		2	2			3		2	EC-571
	Fuel pressure regulator system	3	3	4	4	4	4	4	4	4		4			EC-41
	Injector circuit	1	1	2	3	2		2	2			2			EC-563
	Evaporative emission system	3	3	4	4	4	4	4	4	4		4			EC-34
Air	Positive crankcase ventilation system	3	3	4	4	4	4	4	4	4		4	1		EC-39
	Incorrect idle speed adjustment	3	3				1	1	1	1		1			EC-42
	IACV-AAC valve circuit	1	1	2	3	3	2	2	2	2		2		2	EC-416
	IACV-FICD solenoid valve circuit	2	2	3	3	3	3	3	3	3		3			EC-583
Ignition	Incorrect ignition timing adjustment	3	3	1	1	1		1	1			1			EC-42
	Ignition circuit	1	1	2	2	2		2	2			2			EC-449
EGR	EGRC-solenoid valve circuit		2	2	3	3						3			EC-463
	EGR system	2	1	2	3	3	3	2	2	3		3			EC-327, 339, 476
Main power supply and ground circuit		2	2	3	3	3		3	3		2	3		2	EC-130
Air conditioner circuit		2	2	3	3	3	3	3	3	3		3		2	HA-23, HA-27

1 - 6: The numbers refer to the order of inspection.

(continued on next page)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

KA24DE

Symptom Matrix Chart (Cont'd)

	SYMPTOM													Reference page
	HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code	AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Camshaft position sensor circuit	2	2	3	3	3		3	3			3			EC-319
Mass air flow sensor circuit	1	1	2	2	2		2	2			2			EC-137
Front heated oxygen sensor circuit		1	2	3	2		2	2			2			EC-191, 199
Engine coolant temperature sensor circuit	1	1	2	3	2	3	2	2	3		2			EC-168, 187
Throttle position sensor circuit		1	2		2	2	2	2	2		2			EC-173
Incorrect throttle position sensor adjustment		3	1		1	1	1	1	1		1			EC-96
Vehicle speed sensor circuit		2	3		3						3			EC-412
Knock sensor circuit			2								3			EC-309
ECM	2	2	3	3	3	3	3	3	3	3	3			EC-429, 111
Start signal circuit	2													EC-568
PNP switch circuit			3		3		3	3			3			EC-541
Power steering oil pressure switch circuit		2					3	3						EC-579

1 - 6: The numbers refer to the order of inspection.
(continued on next page)

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

KA24DE

Symptom Matrix Chart (Cont'd)

SYSTEM — ENGINE MECHANICAL & OTHER

NEEC0902S02

		SYMPTOM													Reference page
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Fuel	Fuel tank	5	5												FE-6
	Fuel piping			5	5	5		5	5		5				
	Vapor lock														
	Poor fuel (Heavy weight gasoline, Low octane)	5		5	5	5		5	5		5				
Air	Air duct														—
	Air cleaner														
	Air leakage from air duct (Mass air flow sensor — throttle body)		5	5		5		5	5			5			
	Throttle body, Throttle wire	5			5		5			5					FE-3
	Air leakage from intake manifold/Collector/Gasket														—
Cranking	Battery	1	1	1		1		1	1					1	SC-2
	Alternator circuit														
	Starter circuit	3										1			
	Flywheel/Drive plate	6													EM-54
	PNP switch	4													—

1 - 6: The numbers refer to the order of inspection.
(continued on next page)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

KA24DE

Symptom Matrix Chart (Cont'd)

		SYMPTOM												Reference page	
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION		BATTERY DEAD (UNDER CHARGE)
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Engine	Cylinder head														EM-31, EM-46
	Cylinder head gasket	5	5	5	5	5		5	5		4	5	3		
	Cylinder block												4		
	Piston														
	Piston ring														
	Connecting rod	6	6	6	6	6		6	6			6			
	Bearing														
	Crankshaft														
Valve mechanism	Timing chain														EM-20, EM-31
	Camshaft														
	Intake valve	5	5	5	5	5		5	5		5		3		
	Exhaust valve														
Exhaust	Exhaust manifold/Tube/Muffler/Gasket	5	5	5	5	5		5	5			5			FE-9
	Three way catalyst														
Lubrication	Oil pan/Oil strainer/Oil pump/Oil filter/Oil gallery	5	5	5	5	5		5	5			5			MA-21, LC-6
	Oil level (Low)/Filthy oil														
Cooling	Radiator/Hose/Radiator filler cap														LC-11
	Thermostat										5				
	Water pump	5	5	5	5	5		5	5			4	5		
	Water gallery														
	Coolant level (low)/Contaminated coolant														

1 - 6: The numbers refer to the order of inspection.

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

CONSULT-II Reference Value in Data Monitor Mode

NEEC0903

Remarks:

- Specification data are reference values.
 - Specification data are output/input values which are detected or supplied by the ECM at the connector.
 - * Specification data may not be directly related to their components signals/values/operations.
- (i.e., Adjust ignition timing with a timing light before monitoring IGN TIMING. Specification data might be displayed even when ignition timing is not adjusted to specification. This IGN TIMING monitors the data calculated by the ECM according to the input signals from the camshaft position sensor and other ignition timing related sensors.)
- If the real-time diagnosis results are NG, and the on board diagnostic system results are OK, when diagnosing the mass air flow sensor, first check to see if the fuel pump control circuit is normal.

MONITOR ITEM	CONDITION	SPECIFICATION
CMPS-RPM (REF)	<ul style="list-style-type: none"> ● Tachometer: Connect ● Run engine and compare tachometer indication with the CONSULT-II value. 	Almost the same speed as the CONSULT-II value.
MAS AIR/FL SE	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load Idle	0.9 - 1.8V
	2,500 rpm	1.9 - 2.3V
COOLAN TEMP/S	<ul style="list-style-type: none"> ● Engine: After warming up 	More than 70°C (158°F)
FR O2 SENSOR	<ul style="list-style-type: none"> ● Engine: After warming up Maintaining engine speed at 2,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
FR O2 MNTR		LEAN ↔ RICH Changes more than 5 times during 10 seconds.
RR O2 SENSOR	<ul style="list-style-type: none"> ● Engine: After warming up Revving engine from idle to 3,000 rpm quickly	0 - 0.3V ↔ Approx. 0.6 - 1.0V
RR O2 MNTR		LEAN ↔ RICH
VHCL SPEED SE	<ul style="list-style-type: none"> ● Turn drive wheels and compare speedometer indication with the CONSULT-II value 	Almost the same speed as the CONSULT-II value
BATTERY VOLT	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) 	11 - 14V
THRTL POS SEN	<ul style="list-style-type: none"> ● Engine: After warming up ● Ignition switch: ON (Engine stopped) Throttle valve fully closed	0.2 - 0.8V
	Throttle valve fully opened	3.5 - 4.5V
EGR TEMP SEN	<ul style="list-style-type: none"> ● Engine: After warming up 	Less than 4.5V
START SIGNAL	<ul style="list-style-type: none"> ● Ignition switch: ON → START → ON 	OFF → ON → OFF
CLSD THL/P SW	<ul style="list-style-type: none"> ● Engine: After warming up ● Ignition switch: ON (Engine stopped) Throttle valve: Idle position	ON
	Throttle valve: Slightly open	OFF
CLSD THL POS	<ul style="list-style-type: none"> ● Engine: After warming up ● Ignition switch: ON (Engine stopped) Throttle valve: Idle position	ON
	Throttle valve: Slightly open	OFF
AIR COND SIG	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine 	A/C switch: OFF
		A/C switch: ON (Compressor operates.)
P/N POSI SW	<ul style="list-style-type: none"> ● Ignition switch: ON 	Shift lever: "P" or "N"
		Except above
PW/ST SIGNAL	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine 	Steering wheel in neutral position (forward direction)
		The steering wheel is turned

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

KA24DE

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION		
IGNITION SW	● Ignition switch: ON → OFF → ON	ON → OFF → ON	GI	
INJ PULSE	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load	Idle	2.5 - 3.3 msec	MA
		2,000 rpm	2.4 - 3.2 msec	
B/FUEL SCHDL	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load	Idle	0.8 - 1.2 msec	EM
		2,000 rpm	0.8 - 1.2 msec	LC
IGN TIMING	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load	Idle	Approx. 20° BTDC	EC
		2,000 rpm	More than 25° BTDC	
IACV-AAC/V	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load	Idle	Approx. 30%	FE
		2,000 rpm	—	CL
PURG VOL C/V	● Engine: After warming up ● Air conditioner switch: OFF ● No-load	Idle	0%	MT
		2,000 rpm (More than 200 seconds after starting engine)	—	
A/F ALPHA	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	50 - 159%	AT
EVAP SYS PRES	● Ignition switch: ON		Approx. 3.4V	
AIR COND RLY	● Air conditioner switch: OFF → ON		OFF → ON	TF
FUEL PUMP RLY	● Ignition switch is turned to ON (Operates for 5 seconds) ● Engine running and cranking		ON	PD
	● Except as shown above		OFF	
EGRC SOL/V	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load	Idle	ON (Cut)	AX
		Engine speed: Revving engine from idle to 3,000 rpm quickly.	OFF (Flow)	SU
VENT CONT/V	● Ignition switch: ON		OFF	
FR O2 HEATER	● Engine speed: Below 3,000 rpm (All models) For 6 seconds after engine speed exceeds 3,000 rpm (4WD models only)		ON	BR
	● Engine speed: Above 3,000 rpm (2WD models) More than 6 seconds after engine speed exceeds 3,000 rpm (4WD models)		OFF	ST
RR O2 HEATER	● Engine speed: Idle after driving 2 minutes at 70 km/h (43 MPH) or more		ON	RS
	● Ignition switch: ON (Engine stopped)		OFF	
VC/V BYPASS/V	● Ignition switch: ON		OFF	BT
CAL/LD VALUE	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load	Idle	9.5 - 34.0%	HA
		2,500 rpm	13.9 - 24.9%	
ABSOL TH-P/S	● Engine: After warming up, engine stopped ● Ignition switch: ON	Throttle valve: fully closed	0.0%	SC
		Throttle valve: fully opened	Approx. 80%	EL

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION
MASS AIRFLOW	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load 	Idle 0.9 - 5.8 g·m/s
	2,500 rpm	7.5 - 13.2 g·m/s
MAP/BARO SW/V	<ul style="list-style-type: none"> ● Engine: For 5 seconds after starting engine 	BARO
	<ul style="list-style-type: none"> ● Ignition switch: More than 5 seconds after turning ignition switch "ON" ● Engine: More than 5 seconds after stating engine 	MAP
ABSOL PRES/SE	<ul style="list-style-type: none"> ● Ignition switch: ON ● Engine: For 5 seconds after stating engine 	Approx. 4.4V
	<ul style="list-style-type: none"> ● Engine: More than 5 seconds after starting engine (After warming up) 	Approx. 1.2V

Major Sensor Reference Graph in Data Monitor Mode

NEEC0904


The following are the major sensor reference graphs in "DATA MONITOR" mode.
(Select "MANU TRIG" in "DATA MONITOR" with CONSULT-II. "Trigger Point" is set to 100%, "Recording Speed" is set to MAX..)

THRTL POS SEN, ABSOL TH·P/S, CLSD THL POS

NEEC0904S01

Below is the data for "THRTL POS SEN", "ABSOL TH·P/S" and "CLSD THL POS" when depressing the accelerator pedal with the ignition switch ON.

The signal of "THRTL POS SEN" and "ABSOL TH·P/S" should rise gradually without any intermittent drop or rise after "CLSD THL POS" is changed from "ON" to "OFF".

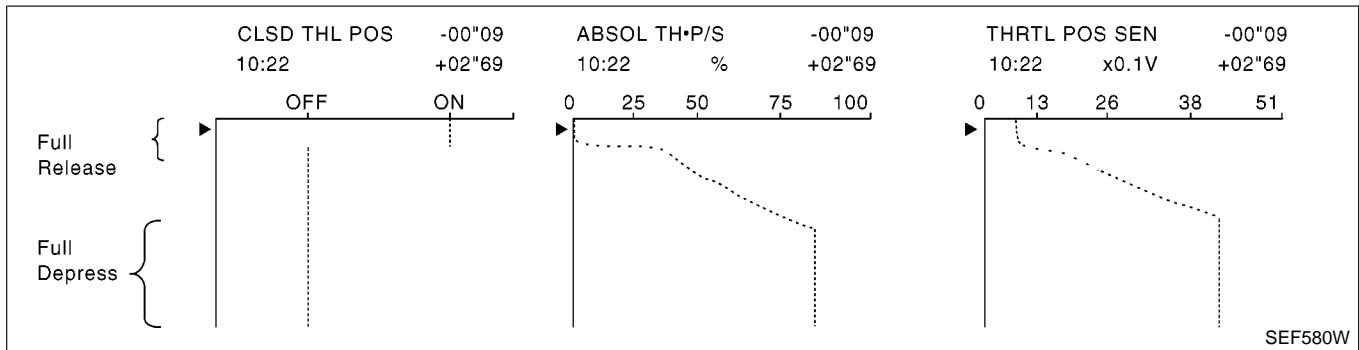


CMPS-RPM (REF), MAS AIR/FL SE, THRTL POS SEN, RR O2 SEN, FR O2 SEN, INJ PULSE


NEEC0904S02

Below is the data for "CMPS-RPM (REF)", "MAS AIR/FL SE", "THRTL POS SEN", "RR O2 SEN", "FR O2 SEN" and "INJ PULSE" when revving engine quickly up to 4,800 rpm under no load after warming up engine to normal operating temperature.

Each value is for reference, the exact value may vary.

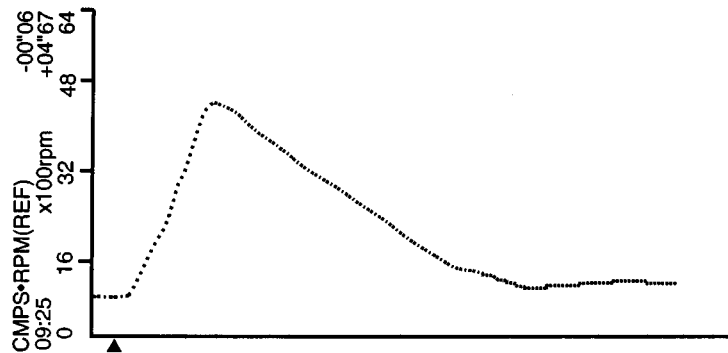

- "CMPS RPM(REF)" should increase gradually while depressing the accelerator pedal and should decrease gradually after releasing the pedal without any intermittent drop or rise.

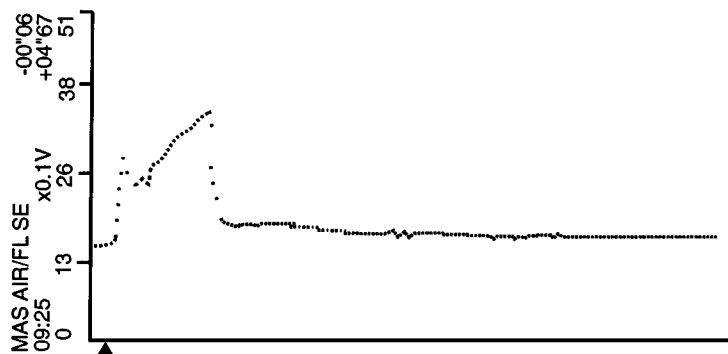

- "MAS AIR/FL SE" should increase when depressing the accelerator pedal and should decrease at the moment "THRTL POS SEN" is closed (accelerator pedal is released).

SEF059P

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX


TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

KA24DE


Major Sensor Reference Graph in Data Monitor Mode (Cont'd)

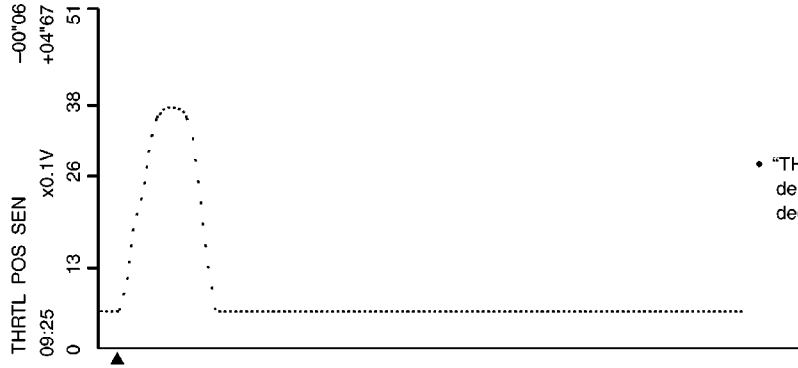


- "THRTL POS SEN" should increase while depressing the accelerator pedal and should decrease while releasing it.

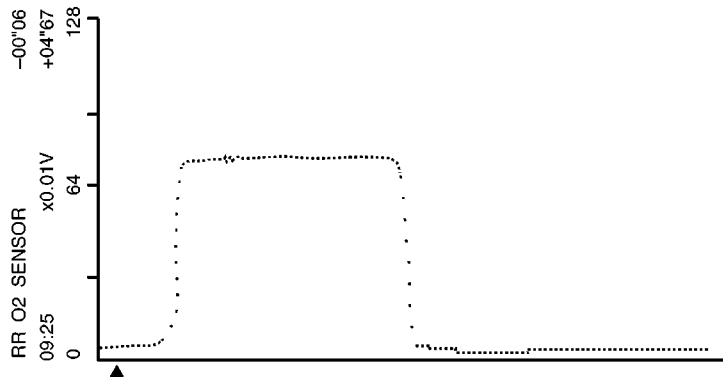

- "RR O2 SENSOR" may increase immediately after depressing the accelerator pedal and may decrease after releasing the pedal.



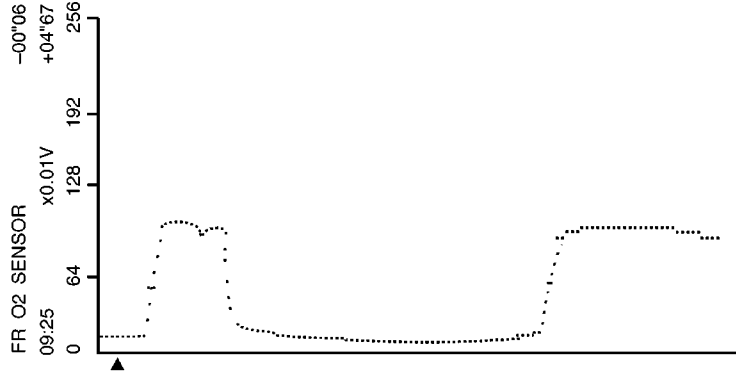


- "FR O2 SENSOR" may increase immediately after depressing the accelerator pedal and may decrease after releasing the pedal.

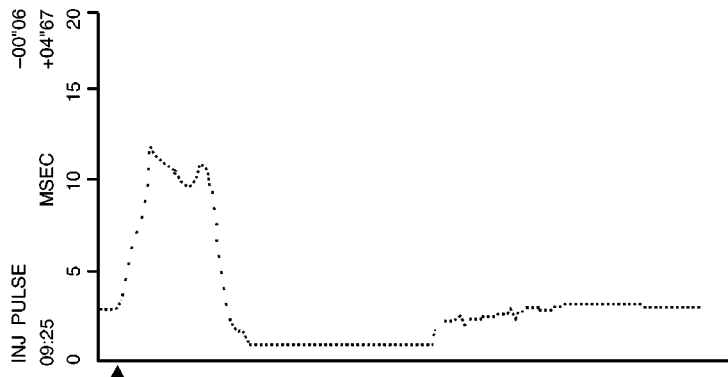

- "INJ PULSE" should increase when depressing the accelerator pedal and should decrease when the pedal is released.

SEF417R

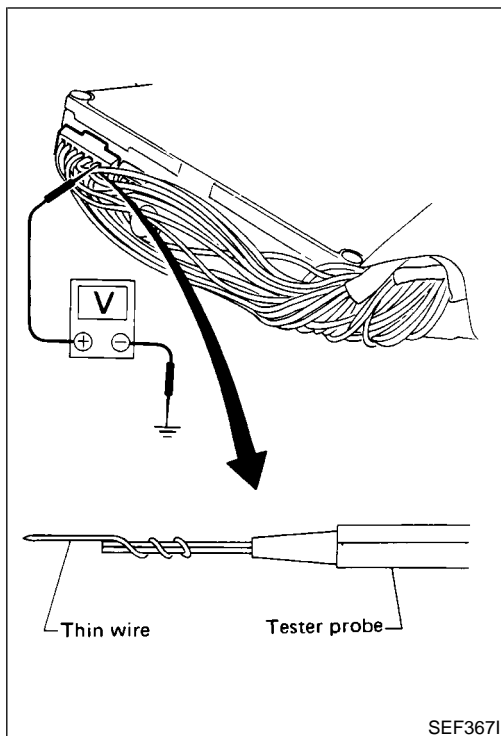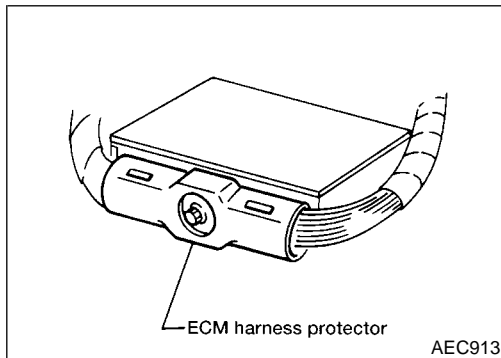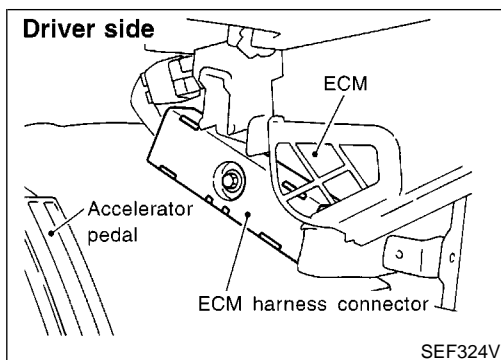

ECM Terminals and Reference Value

NEEC0905

PREPARATION

NEEC0905S01

1. ECM is located behind the instrument lower cover. For this inspection:

- Remove instrument lower cover.

2. Remove ECM harness protector.

3. Perform all voltage measurements with the connector connected. Extend tester probe as shown to perform tests easily.

- Open harness securing clip to make testing easier.
- Use extreme care not to touch 2 pins at one time.
- Data is for comparison and may not be exact.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX


TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

KA24DE

ECM Terminals and Reference Value (Cont'd)

ECM HARNESS CONNECTOR TERMINAL LAYOUT

NEEC0905S02

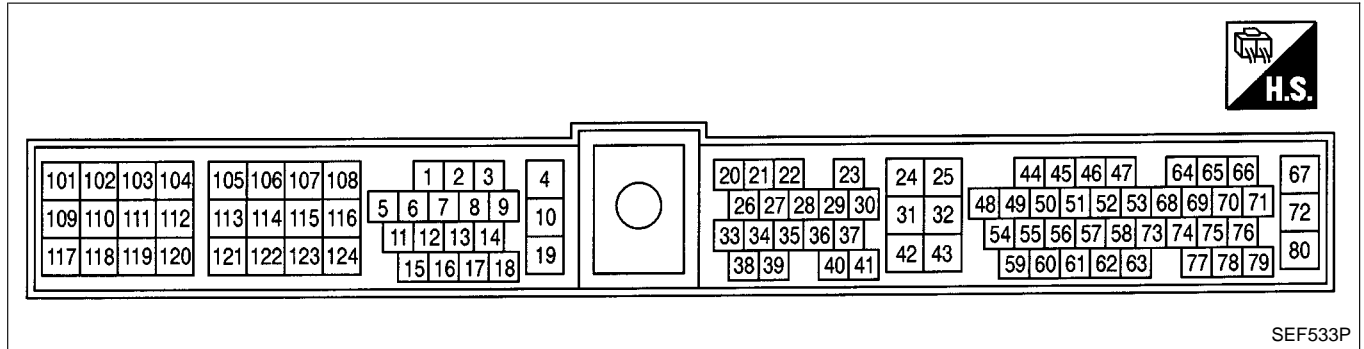

ECM INSPECTION TABLE

NEEC0905S03

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
1	PU/W	Ignition signal	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	<p>0 - 0.5V</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	<p>0.2 - 1.0V</p>
2	B	Ignition check	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	<p>12 - 14V</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	<p>12 - 13V</p>

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

KA24DE

ECM Terminals and Reference Value (Cont'd)


TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
3	P/L	Tachometer	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	0 - 1V
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	0.5 - 2V
4	LG/R	ECM relay (Self shut-off)	[Engine is running] [Ignition switch OFF] <ul style="list-style-type: none"> ● For a few seconds after turning ignition switch OFF 	0 - 1V
			[Ignition switch OFF] <ul style="list-style-type: none"> ● More than a few seconds after turning ignition switch OFF 	BATTERY VOLTAGE (11 - 14V)
5	R/Y	EVAP canister purge volume control solenoid valve	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm (More than 200 seconds after starting engine) 	12 - 13V
10	B/R	ECM ground	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Engine ground
11	W/R	Fuel pump relay	[Ignition switch ON] <ul style="list-style-type: none"> ● For 5 seconds after turning ignition switch ON. [Engine is running]	0 - 1V
			[Ignition switch ON] <ul style="list-style-type: none"> ● More than 5 seconds after turning ignition switch ON 	BATTERY VOLTAGE (11 - 14V)

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

KA24DE





ECM Terminals and Reference Value (Cont'd)

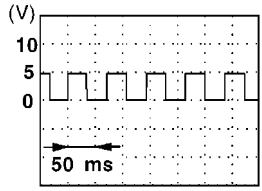TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
12	P	Air conditioner relay	[Engine is running] <ul style="list-style-type: none"> ● Both A/C switch and blower switch are ON* *: Any mode except "OFF", ambient air temperature above 10°C (50°F). 	Approximately 0V
			[Engine is running] <ul style="list-style-type: none"> ● A/C switch is OFF 	BATTERY VOLTAGE (11 - 14V)
18	R/W	Malfunction indicator lamp	[Ignition switch ON]	0 - 1V
			[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V)
19	B/R	ECM ground	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Engine ground
20	L/OR	Start signal	[Ignition switch ON]	Approximately 0V
			[Ignition switch START]	BATTERY VOLTAGE (11 - 14V)
21	G/R	Air conditioner dual-pressure switch	[Engine is running] <ul style="list-style-type: none"> ● Both air conditioner switch and blower switch are ON (Compressor operates) 	Approximately 0V
			[Engine is running] <ul style="list-style-type: none"> ● Air conditioner switch is OFF 	BATTERY VOLTAGE (11 - 14V)
22	L/B	Park/neutral position (PNP) switch	[Ignition switch ON] <ul style="list-style-type: none"> ● Gear position is "N" or "P" 	Approximately 0V
			[Ignition switch ON] <ul style="list-style-type: none"> ● Except the above gear position 	Approximately 5V
23	L	Throttle position sensor	[Ignition switch ON] <ul style="list-style-type: none"> ● Warm-up condition ● Accelerator pedal fully released 	0.2 - 0.8V
			[Ignition switch ON] <ul style="list-style-type: none"> ● Accelerator pedal fully depressed 	3.5 - 4.5V
24	W/G	Ignition switch	[Ignition switch OFF]	0V
			[Ignition switch ON]	BATTERY VOLTAGE (11 - 14V)
25	B/Y	ECM ground	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Engine ground
28	BR/W	Throttle position switch (Closed position)	[Ignition switch ON] <ul style="list-style-type: none"> ● Warm-up condition ● Accelerator pedal released 	BATTERY VOLTAGE (11 - 14V)
			[Ignition switch ON] <ul style="list-style-type: none"> ● Accelerator pedal depressed 	Approximately 0V
29	G/B	Vehicle speed sensor	[Engine is running] <ul style="list-style-type: none"> ● Lift up the vehicle ● In 2nd gear position ● 40 km/h (25 MPH) 	1 - 4V 

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

KA24DE




ECM Terminals and Reference Value (Cont'd)

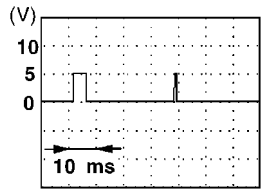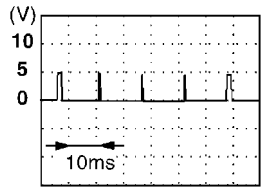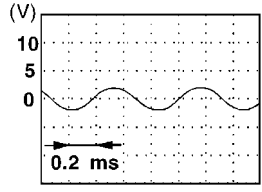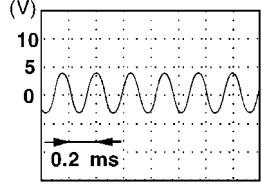TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)	
32	B/Y	ECM ground	[Engine is running] ● Idle speed	Engine ground (Probe this terminal with (-) tester probe when measuring)	GI MA
39	GY/R	Power steering oil pressure switch	[Engine is running] ● Steering wheel is fully turned	Approximately 0V	EM
			[Engine is running] ● Steering wheel is not turned	Approximately 5V	LC
42	BR	Sensors' power supply	[Ignition switch ON]	Approximately 5V	
43	B/W	Sensors' ground	[Engine is running] ● Idle speed	Approximately 0V	EC
44	PU	Camshaft position sensor (Reference signal)	[Engine is running] ● Warm-up condition ● Idle speed	0.2 - 0.5V 	FE CL MT
			[Engine is running] ● Engine speed is 2,000 rpm	0 - 0.5V 	AT TF PD
45	B/R	Absolute pressure sensor	[Ignition switch ON] ● Engine is not running	Approximately 4.4V	AX
			[Engine is running] ● For 5 seconds after starting engine	Approximately 1.2V	SU BR
47	L	Crankshaft position sensor (OBD)	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V 	ST RS BT
			[Engine is running] ● Engine speed is 2,000 rpm	Approximately 0V 	HA SC EL

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

KA24DE




ECM Terminals and Reference Value (Cont'd)

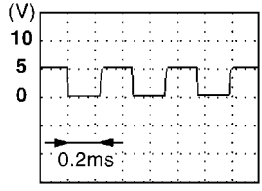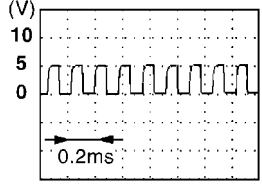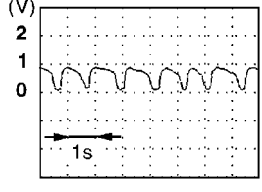TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
49	LG	Camshaft position sensor (Position signal)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 2.6V 
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	Approximately 2.5 - 2.6V 
50	B	Front heated oxygen sensor	[Engine is running] <ul style="list-style-type: none"> ● After warming up to normal operating temperature and engine speed is 2,000 rpm. 	0 - Approximately 1.0V 
54	R	Mass air flow sensor	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	0.9 - 1.8V
			[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,500 rpm 	1.8 - 2.3V
55	G	Mass air flow sensor ground	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 0V
56	OR	Rear heated oxygen sensor	[Engine is running] <ul style="list-style-type: none"> ● After warming up to normal operating temperature and revving engine from idle to 3,000 rpm quickly 	0 - Approximately 1.0V
59	LG/R	Engine coolant temperature sensor	[Engine is running]	Approximately 0 - 4.8V Output voltage varies with engine coolant temperature
60	Y/B	Fuel tank temperature sensor	[Engine is running]	Approximately 0 - 4.8V Output voltage varies with fuel temperature
61	PU/R	Intake air temperature sensor	[Engine is running]	Approximately 0 - 4.8V Output voltage varies with intake air temperature
62	Y	EVAP control system pressure sensor	[Ignition switch ON]	Approximately 3.4V

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

KA24DE

ECM Terminals and Reference Value (Cont'd)

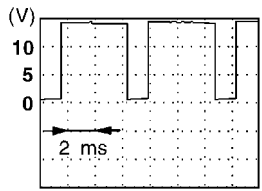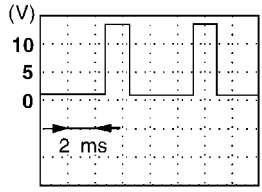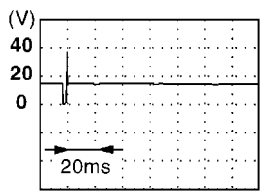TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
63	G/OR	EGR temperature sensor	[Engine is running] ● Warm-up condition ● Idle speed	Less than 4.5V
			[Engine is running] ● Warm-up condition ● EGR system is operating	0 - 1.5V
64	W	Knock sensor	[Engine is running] ● Idle speed	Approximately 2.4V
67	B/P	Power supply for ECM	[Ignition switch ON]	BATTERY VOLTAGE (11 - 14V)
72	B/P			
69	LG/R	Data link connector for GST	[Engine is running] ● Idle speed (GST is disconnected)	0.2 - 14V
75	Y/R	Data link connector for CONSULT-II	[Engine is running] ● Idle speed (CONSULT-II is connected and turned ON)	3 - 10V
76	GY/L			0 - 4V
80	SB	Power supply (Back-up)	[Ignition switch OFF]	BATTERY VOLTAGE (11 - 14V)
101	OR/L	IACV-AAC valve	[Engine is running] ● Warm-up condition ● Idle speed	10.5 - 11.5V 
			[Engine is running] ● Warm-up condition ● Engine speed is 2,000 rpm	1 - 13V 
102	W/B	Injector No. 1	[Engine is running] ● Warm-up condition ● Idle speed	BATTERY VOLTAGE (11 - 14V) 
104	W/R	Injector No. 3		

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

KA24DE

ECM Terminals and Reference Value (Cont'd)

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
109	W/L	Injector No. 2	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm 	BATTERY VOLTAGE (11 - 14V) <div style="text-align: right; margin-top: 10px;"> </div>
111	W/PU	Injector No. 4		
103	G/W	EGRC-solenoid valve	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	0 - 1V
			[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Revving engine from idle to 3,000 rpm quickly 	BATTERY VOLTAGE (11 - 14V)
108	R/G	EVAP canister vent control valve	[Ignition switch ON]	BATTERY VOLTAGE (11 - 14V)
116	B/R	ECM ground	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Engine ground
117	B/P	Current return	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V)
118	LG/B	MAP/BARO switch solenoid valve	[Ignition switch ON] <ul style="list-style-type: none"> ● For 5 seconds after turning ignition switch ON 	0 - 1V
			[Engine is running] <ul style="list-style-type: none"> ● Idle speed ● For 5 seconds after starting engine 	
			[Ignition switch ON] <ul style="list-style-type: none"> ● More than 5 seconds after turning ignition switch ON 	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] <ul style="list-style-type: none"> ● Idle speed ● More than 5 seconds after starting engine 	
119	BR/Y	Front heated oxygen sensor heater	[Engine is running] <ul style="list-style-type: none"> ● Engine speed is below 3,000 rpm. (All models) 	Approximately 0.4V
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is above 3,000 rpm. (2WD models) ● More than 6 seconds after engine speed exceeds 3,000 rpm (4WD models) 	BATTERY VOLTAGE (11 - 14V)
120	P/B	Vacuum cut valve bypass valve	[Ignition switch ON]	BATTERY VOLTAGE (11 - 14V)
122	R/B	Rear heated oxygen sensor heater	[Engine is running] <ul style="list-style-type: none"> ● Idle speed after driving 2 minutes at 70 km/h (43 MPH) or more 	Approximately 0.4V
			[Ignition switch ON] <ul style="list-style-type: none"> ● Engine is not running 	BATTERY VOLTAGE (11 - 14V)
124	B/R	ECM ground	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Engine ground

Description

NEEC0906

Intermittent incidents (I/I) may occur. In many cases, the problem resolves itself (the part or circuit function returns to normal without intervention). It is important to realize that the symptoms described in the customer's complaint often do not recur on DTC (1st trip) visits. Realize also that the most frequent cause of I/I occurrences is poor electrical connections. Because of this, the conditions under which the incident occurred may not be clear. Therefore, circuit checks made as part of the standard diagnostic procedure may not indicate the specific problem area.

COMMON I/I REPORT SITUATIONS

NEEC0906S01

STEP in Work Flow	Situation
II	The CONSULT-II is used. The SELF-DIAG RESULTS screen shows time data other than "0" or "1t".
III	The symptom described by the customer does not recur.
IV	(1st trip) DTC data does not appear during the DTC CONFIRMATION PROCEDURE.
VI	The TROUBLE DIAGNOSIS for PXXXX does not indicate the problem area.

Diagnostic Procedure

NEEC0907

1	INSPECTION START	
Erase (1st trip) DTCs. Refer to "HOW TO ERASE EMISSION-RELATED INFORMATION", EC-69.		
▶		GO TO 2.

2	CHECK GROUND TERMINALS	
Check ground terminals for corroding or loose connection. Refer to "Circuit Inspection", "GROUND INSPECTION", GI-30 .		
OK or NG		
OK ▶		GO TO 3.
NG ▶		Repair or replace.


3	SEARCH FOR ELECTRICAL INCIDENT	
Perform "Incident Simulation Tests", GI-25 .		
OK or NG		
OK ▶		GO TO 4.
NG ▶		Repair or replace.

4	CHECK CONNECTOR TERMINALS	
Refer to "How to Check Enlarged Contact Spring of Terminal", GI-22 .		
OK or NG		
OK ▶		INSPECTION END
NG ▶		Repair or replace connector.




Main Power Supply and Ground Circuit WIRING DIAGRAM

NEEC0908

EC-MAIN-01

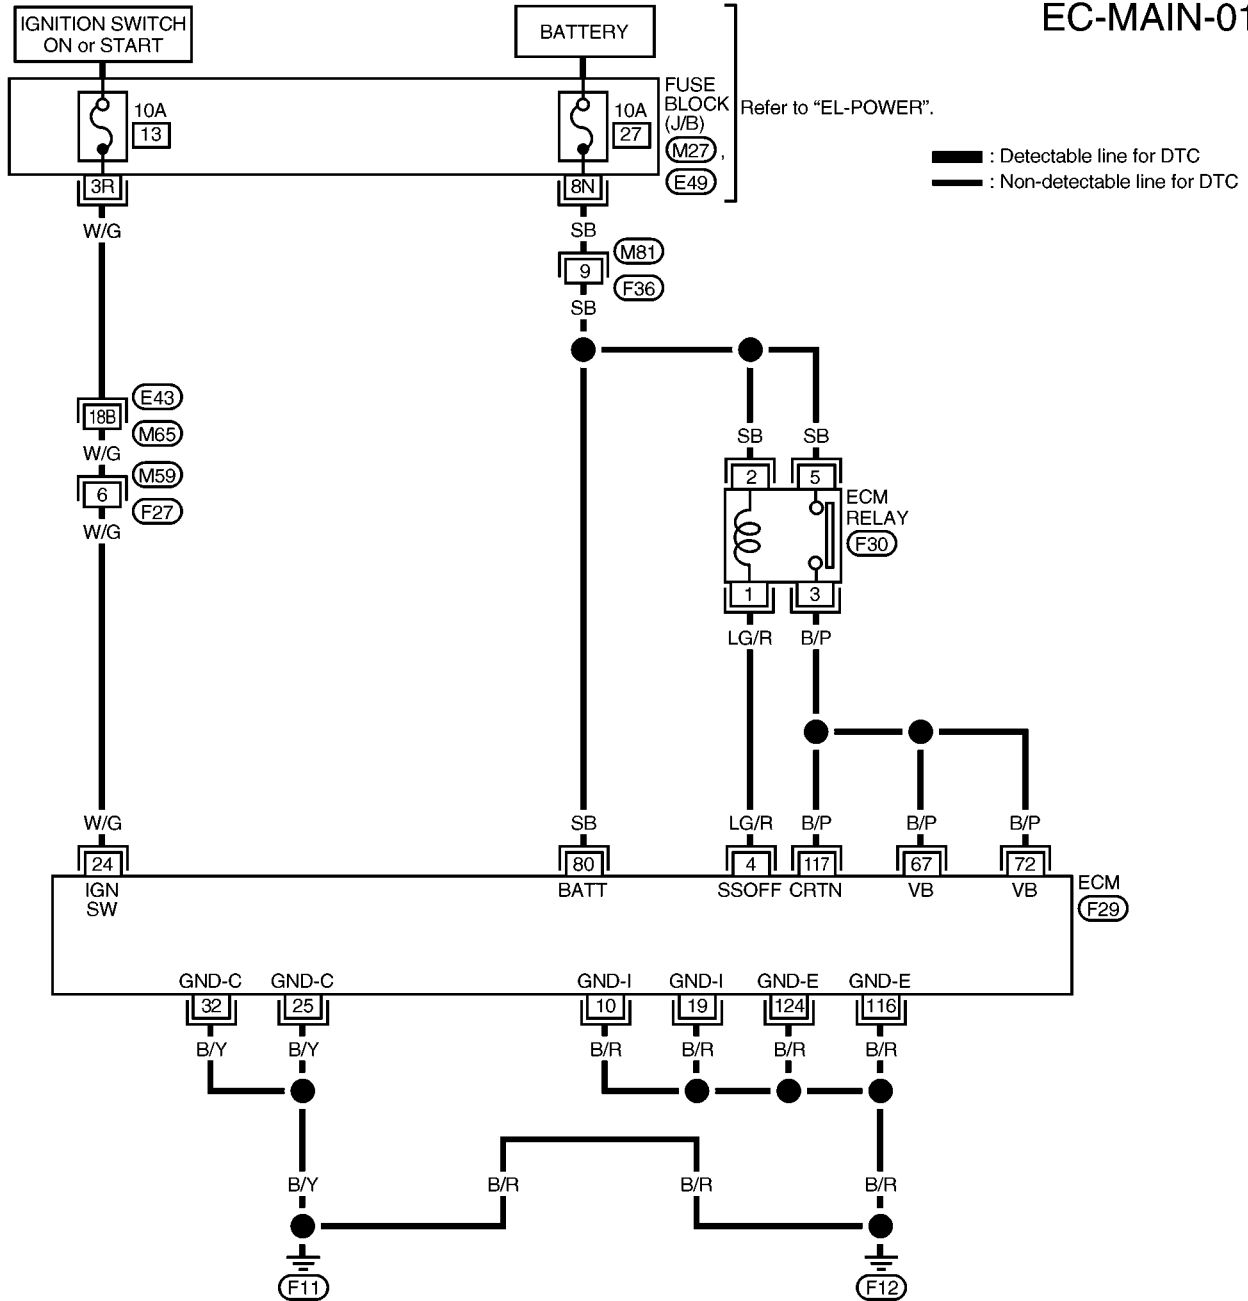

Refer to the following.
 (M65), (E43) - SUPER
 MULTIPLE JUNCTION (SMJ)

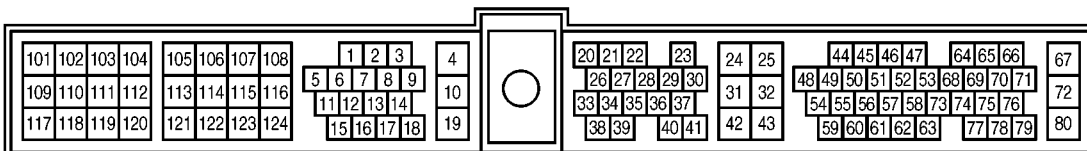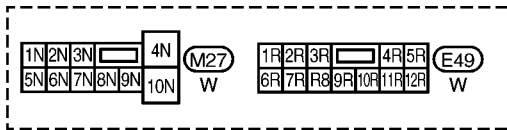

TROUBLE DIAGNOSIS FOR POWER SUPPLY

KA24DE

Main Power Supply and Ground Circuit (Cont'd)

ECM TERMINALS AND REFERENCE VALUE

NEEC0909

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
4	LG/R	ECM relay (Self shut-off)	[Engine is running] [Ignition switch OFF] ● For a few seconds after turning ignition switch OFF	0 - 1V
			[Ignition switch OFF] ● A few seconds passed after turning ignition switch OFF	BATTERY VOLTAGE (11 - 14V)
10	B/R	ECM ground	[Engine is running] ● Idle speed	Engine ground
19	B/R	ECM ground	[Engine is running] ● Idle speed	Engine ground
24	W/G	Ignition switch	[Ignition switch OFF]	0V
			[Ignition switch ON]	BATTERY VOLTAGE (11 - 14V)
25	B/Y	ECM ground	[Engine is running] ● Idle speed	Engine ground
32	B/Y	ECM ground	[Engine is running] ● Idle speed	Engine ground (Probe this terminal with (-) tester probe when measuring)
67	B/P	Power supply for ECM	[Ignition switch ON]	BATTERY VOLTAGE (11 - 14V)
72	B/P			
80	SB	Power supply (Back-up)	[Ignition switch OFF]	BATTERY VOLTAGE (11 - 14V)
116	B/R	ECM ground	[Engine is running] ● Idle speed	Engine ground
117	B/P	Current return	[Engine is running] ● Idle speed	BATTERY VOLTAGE (11 - 14V)
124	B/R	ECM ground	[Engine is running] ● Idle speed	Engine ground

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX

DIAGNOSTIC PROCEDURE


-NEEC0910

1	INSPECTION START	
Start engine. Is engine running?		
Yes or No		
Yes	▶	GO TO 4.
No	▶	GO TO 2.

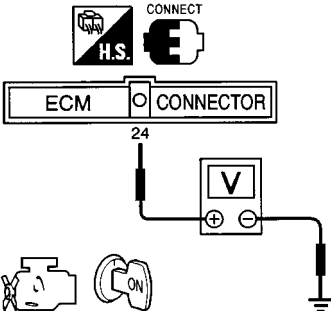
2	CHECK POWER SUPPLY-I	
1. Turn ignition switch OFF and then ON. 2. Check voltage between ECM terminal 24 and ground with CONSULT-II or tester.		
		
<p style="color: blue;">Voltage: Battery voltage</p>		
OK or NG		
OK	▶	GO TO 14.
NG	▶	GO TO 3.

SEF600P

3	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Harness connectors M65, E43 ● Harness connectors M59, F27 ● 10A fuse ● Harness for open or short between ECM and ignition switch 		
▶		Repair harness or connectors.

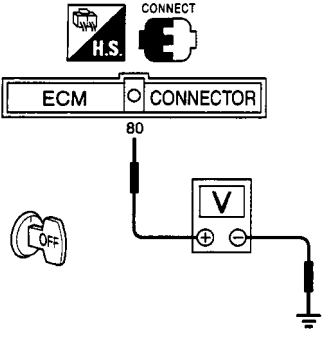4	CHECK POWER SUPPLY-II	
<p>1. Stop engine. 2. Check voltage between ECM harness connector F29 terminal 80 and ground with CONSULT-II or tester.</p>		
		
<p>Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	GO TO 5.


5	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F27, M59 ● 10A fuse ● Harness for open or short between ECM and fuse 		
▶		Repair harness or connectors.

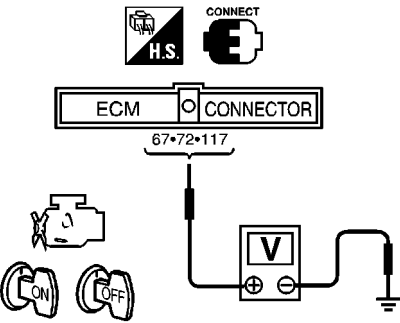6	CHECK POWER SUPPLY-III	
<p>1. Turn ignition switch ON and then OFF. 2. Check voltage between ECM harness connector F29 terminals 67, 72, 117 and ground with CONSULT-II or tester.</p>		
		
<p>Voltage: After turning ignition switch OFF, battery voltage will exist for a few seconds, then drop to approximately 0V.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 14.
NG (Battery voltage does not exist.)	▶	GO TO 7.
NG (Battery voltage exists for more than a few seconds.)	▶	GO TO 13.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


7 CHECK HARNESS CONTINUITY BETWEEN ECM RELAY AND ECM

1. Disconnect ECM harness connector.
2. Disconnect ECM relay.

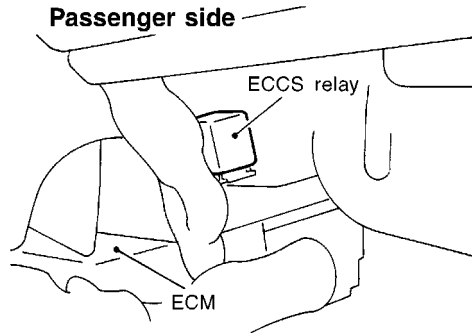

SEF323V

3. Check harness continuity between ECM harness connector F29 terminals 67, 72, 117 and relay harness connector F30 terminal 3.

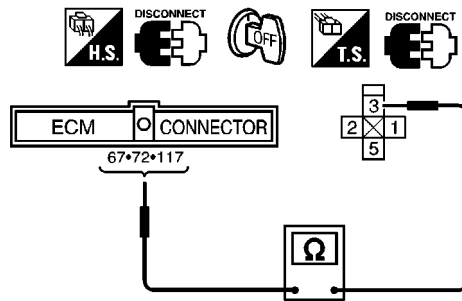

SEF122V

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK	▶	GO TO 9.
NG	▶	GO TO 8.

8 DETECT MALFUNCTIONING PART

Check the following.

- Harness for open or short between ECM relay and ECM


▶ Repair open circuit or short to ground or short to power in harness or connectors.

9	CHECK VOLTAGE BETWEEN ECM RELAY AND GROUND	
<p>Check voltage between ECM relay terminals 2, 5 and ground with CONSULT-II or tester.</p> <div style="text-align: center;"> </div> <p>Voltage: Battery voltage</p> <p style="text-align: right;">SEF120V</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 11.
NG	▶	GO TO 10.


10	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F27, M59 ● 10A fuse ● Harness for open or short between ECM relay and fuse 		
▶		Repair harness or connectors.

11	CHECK OUTPUT SIGNAL CIRCUIT	
<p>1. Check harness continuity between ECM harness connector F29 terminal 4 and relay harness connector F30 terminal 1.</p> <div style="text-align: center;"> </div> <p>Continuity should exist.</p> <p style="text-align: right;">SEF605P</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 12.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

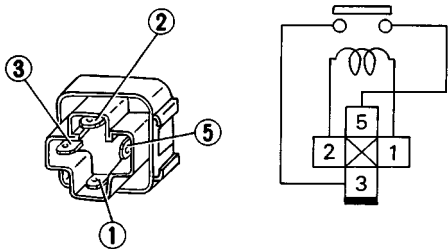
12	CHECK ECM RELAY
<ol style="list-style-type: none"> 1. Apply 12V direct current between ECM relay terminals 1 and 2. 2. Check continuity between ECM relay terminals 3 and 5. 	
	
<p style="color: blue;">12V (1 - 2) applied: Continuity exists. No voltage applied: No continuity</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 13.
NG	▶ Replace ECM relay.

SEF511P

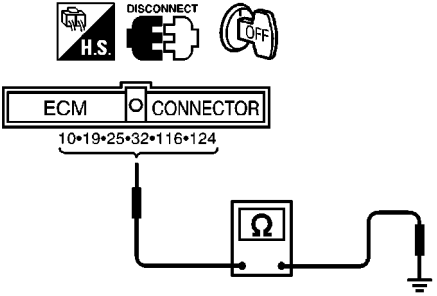13	CHECK GROUND CIRCUIT
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM harness connector F29 terminals 10, 19, 25, 32, 116, 124 and engine ground. 	
	
<p style="color: blue;">Continuity should exist.</p> <p style="text-align: center;">OK or NG</p>	
<ol style="list-style-type: none"> 4. Also check harness for short to ground and short to power. 	
OK	▶ GO TO 14.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

SEF119V

14	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
▶	INSPECTION END

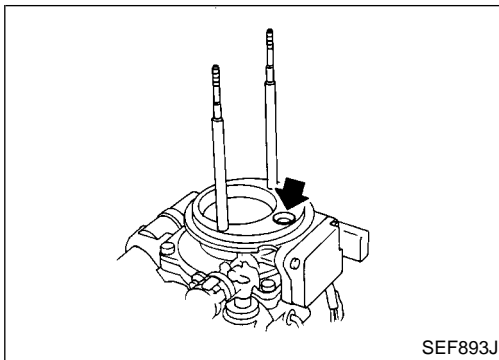

Component Description

The mass air flow sensor is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. It consists of a hot wire that is supplied with electric current from the ECM. The temperature of the hot wire is controlled by the ECM a certain amount. The heat generated by the hot wire is reduced as the intake air flows around it. The more air, the greater the heat loss. Therefore, the ECM must supply more electric current to maintain the temperature of the hot wire as air flow increases. The ECM detects the air flow by means of this current change.

CONSULT-II Reference Value in Data Monitor Mode

Specification data are reference values.

NEEC0912

MONITOR ITEM	CONDITION	SPECIFICATION
MAS AIR/FL SE	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load Idle	0.9 - 1.8V
	2,500 rpm	1.9 - 2.3V
CAL/LD VALUE	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load Idle	9.5 - 34.0%
	2,500 rpm	13.9 - 24.9%
MASS AIRFLOW	● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load Idle	0.9 - 5.8 g-m/s
	2,500 rpm	7.5 - 13.2 g-m/s

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 43 (ECM ground).

NEEC0913

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
54	R	Mass air flow sensor	[Engine is running] ● Warm-up condition ● Idle speed	0.9 - 1.8V
			[Engine is running] ● Warm-up condition ● Engine speed is 2,500 rpm	1.9 - 2.3V
55	G	Mass air flow sensor ground	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V

On Board Diagnosis Logic

NEEC0914

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0100 0102	A) An excessively high voltage from the sensor is sent to ECM when engine is not running.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Mass air flow sensor
	C) A high voltage from the sensor is sent to ECM under light load driving condition.	
	B) An excessively low voltage from the sensor is sent to ECM* when engine is running.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Intake air leaks ● Mass air flow sensor
	D) A low voltage from the sensor is sent to ECM under heavy load driving condition.	

*: When this malfunction is detected, the ECM enters fail-safe mode and the MIL lights up.

Detected items	Engine operating condition in fail-safe mode
Mass air flow sensor circuit	Engine speed will not rise more than 2,400 rpm due to the fuel cut.

DTC Confirmation Procedure

NEEC0915

Perform "PROCEDURE FOR MALFUNCTION A" first. If the 1st trip DTC cannot be confirmed, perform "PROCEDURE FOR MALFUNCTION B". If there is no problem on "PROCEDURE FOR MALFUNCTION B", perform "PROCEDURE FOR MALFUNCTION C". If there is no problem on "PROCEDURE FOR MALFUNCTION C", perform "PROCEDURE FOR MALFUNCTION D".

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

3

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm

PEF360V

PROCEDURE FOR MALFUNCTION A

NEEC0915S01

With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 6 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-142.

With GST

Follow the procedure "With CONSULT-II".

3

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm

PEF360V

PROCEDURE FOR MALFUNCTION B

NEEC0915S02

With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait 5 seconds at most.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-142.

With GST

Follow the procedure "With CONSULT-II".

NOTE:

If 1st trip DTC is confirmed after more than 5 seconds, there may be malfunction C.

4

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
COOLAN TEMP/S	XXX °C

PEF361V

PROCEDURE FOR MALFUNCTION C

NEEC0915S03

NOTE:

If engine will not start or stops soon wait at least 10 seconds with engine stopped (Ignition switch "ON") instead of running engine at idle speed.

With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and warm it up to normal operating temperature.
- 4) Run engine for at least 10 seconds at idle speed.
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-142.

With GST

Follow the procedure "With CONSULT-II".

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS


BT

HA

SC

EL

IDX

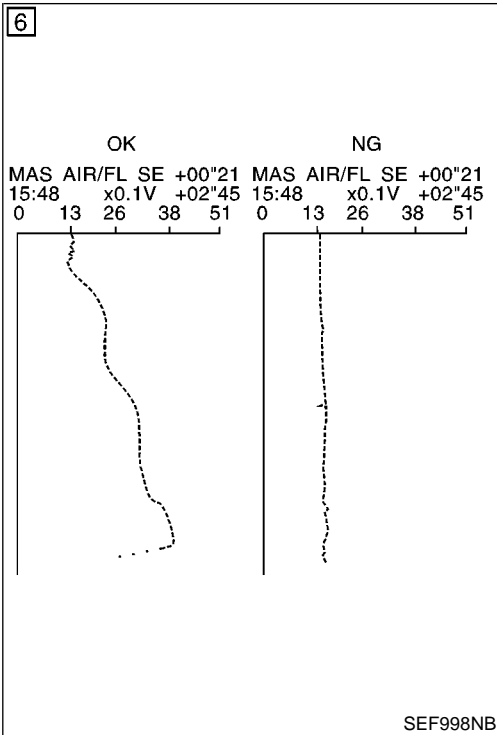


7

DATA MONITOR	
MONITORING	NO FAIL
CMPS~RPM(REF)	XXX rpm
VHCL SPEED SE	XXX km/h
THRTL POS SEN	XXX v

PEF723W

CALC LOAD	20%
COOLANT TEMP	95°C
SHORT FT #1	2%
LONG FT #1	0%
SHORT FT #2	4%
LONG FT #2	0%
ENGINE SPD	2637RPM
VEHICLE SPD	0MPH
IGN ADVANCE	41.0°
INTAKE AIR	41°C
MAF	14.1gm/sec
THROTTLE POS	3%

SEF534P

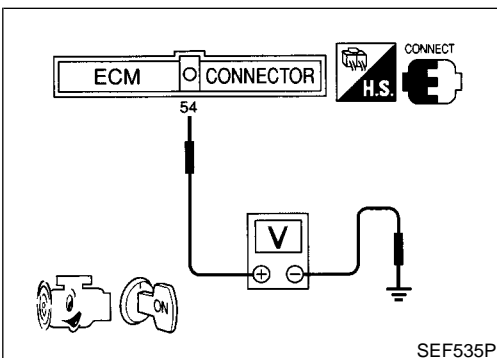

PROCEDURE FOR MALFUNCTION D

NEEC0915S04

With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Start engine and warm it up to normal operating temperature. If engine cannot be started, go to "Diagnostic Procedure", EC-142.
- 3) Select "DATA MONITOR" mode with CONSULT-II.
- 4) Check the voltage of MAS AIR/FL SE with "DATA MONITOR".
- 5) Increases engine speed to about 4,000 rpm.
- 6) Monitor the linear voltage rise in response to engine speed increases.
If NG, go to "Diagnostic Procedure", EC-142.
If OK, go to following step.
- 7) Maintain the following conditions for at least 10 consecutive seconds.

CMPS-RPM (REF)	More than 2,000 rpm
THRTL POS SEN	More than 3V
Selector lever	Suitable position
Driving location	Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

- 8) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-142.

Overall Function Check

NEEC0916

Use this procedure to check the overall function of the mass air flow sensor circuit. During this check, a 1st trip DTC might not be confirmed.

PROCEDURE FOR MALFUNCTION D

NEEC0916S01

With GST

- 1) Turn ignition switch ON.
- 2) Start engine and warm it up to normal operating temperature.
- 3) Select "MODE 1" with GST.
- 4) Check the mass air flow sensor signal with "MODE 1".
- 5) Check for linear mass air flow rise in response to increases to about 4,000 rpm in engine speed.
- 6) If NG, go to "Diagnostic Procedure", EC-142.




No Tools

- 1) Turn ignition switch ON.
- 2) Start engine and warm it up to normal operating temperature.
- 3) Check the voltage between ECM terminal 54 (Mass air flow sensor signal) and ground.
- 4) Check for linear voltage rise in response to increases to about 4,000 rpm in engine speed.
- 5) If NG, go to "Diagnostic Procedure", EC-142.

Wiring Diagram

NEEC0917

EC-MAFS-01

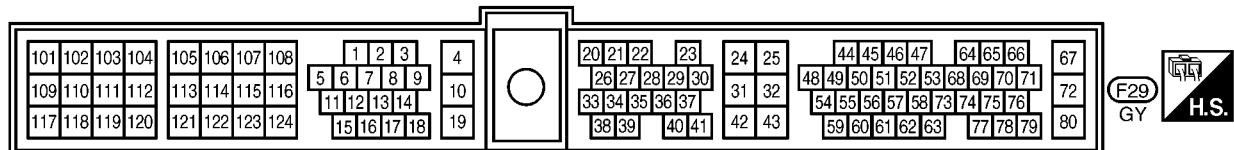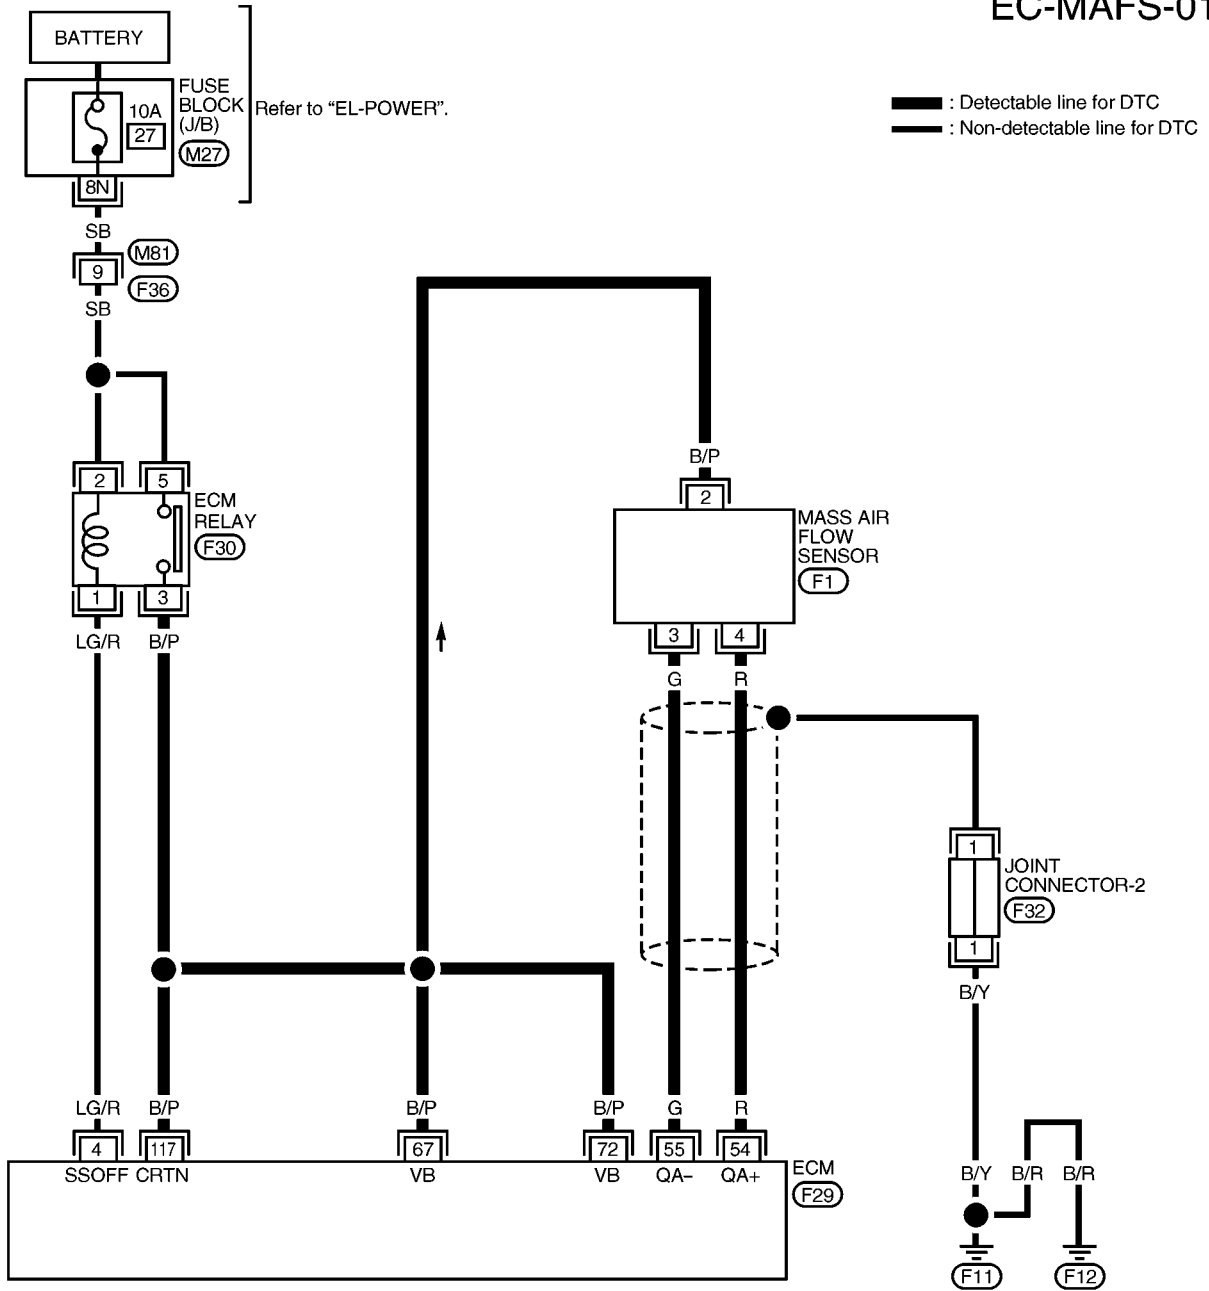

AEC981A


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX



Diagnostic Procedure

NEEC0918

1	INSPECTION START							
Which malfunction (A, B, C or D) is duplicated?								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">MALFUNCTION</th> <th style="width: 50%;">Type</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">A and/or C</td> <td style="text-align: center;">I</td> </tr> <tr> <td style="text-align: center;">B and/or D</td> <td style="text-align: center;">II</td> </tr> </tbody> </table>			MALFUNCTION	Type	A and/or C	I	B and/or D	II
MALFUNCTION	Type							
A and/or C	I							
B and/or D	II							
MTBL0063								
Type I or Type II								
Type I	▶	GO TO 3.						
Type II	▶	GO TO 2.						

2	CHECK INTAKE SYSTEM	
Check the followings for connection.		
<ul style="list-style-type: none"> ● Air duct ● Air cleaner ● Vacuum hoses ● Intake air passage between air duct to collector 		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Reconnect the parts.

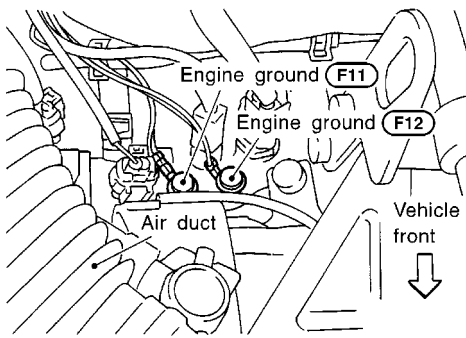3	RETIGHTEN GROUND SCREWS	
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Loosen and retighten engine ground screws. 		
		
SEF325V		
▶		GO TO 4.

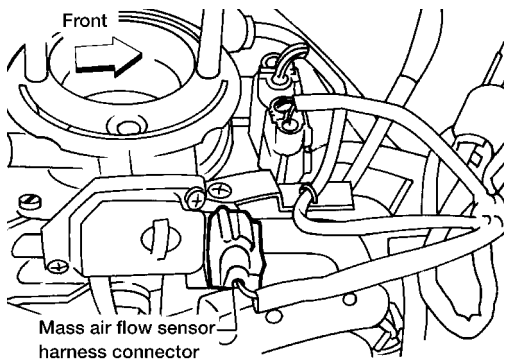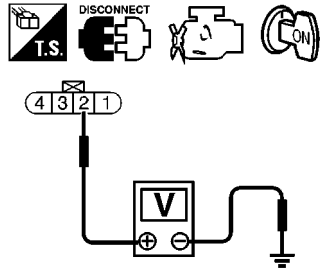4	CHECK POWER SUPPLY		
		<p>1. Disconnect Mass air flow sensor harness connector.</p>  <p style="text-align: center;">Mass air flow sensor harness connector</p> <p>2. Turn ignition switch ON.</p> <p>3. Check voltage between terminal 2 and ground with CONSULT-II or tester.</p>  <p style="text-align: center;">Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>TF</p> <p>SEF126V</p>
	OK	▶ GO TO 6.	PD
	NG	▶ GO TO 5.	

5	DETECT MALFUNCTIONING PART		
		<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness for open or short between ECM relay and mass air flow sensor ● Harness for open or short between Mass air flow sensor and ECM 	
	▶	Repair harness or connectors.	BR

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL


IDX

6	CHECK GROUND CIRCUIT	<p>1. Turn ignition switch OFF.</p> <p>2. Disconnect ECM harness connector.</p> <p>3. Check harness continuity between Mass air flow sensor terminal 3 and ECM terminal 55. Refer to EC-141.</p>	
SEF124V			
<p style="color: blue;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>			
OK	▶	GO TO 7.	
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.	

7	CHECK INPUT SIGNAL CIRCUIT	<p>1. Check harness continuity between terminal 4 and ECM terminal 54.</p>	
SEF125V			
<p style="color: blue;">Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>			
OK	▶	GO TO 8.	
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.	

8 CHECK MASS AIR FLOW SENSOR

1. Turn ignition switch ON.
2. Start engine and warm it up to normal operating temperature.
3. Check voltage between ECM terminal 54 (Mass air flow sensor signal) and ground.

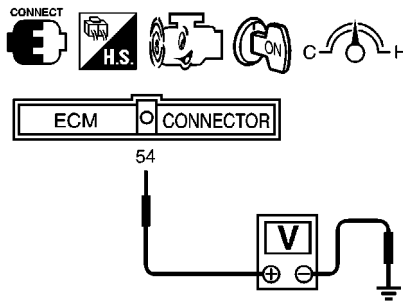


SEF326V

Conditions	Voltage V
Ignition switch "ON" (Engine stopped.)	Less than 1.0
Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.8
2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.9 - 2.3
Idle to about 4,000 rpm*	1.3 - 1.7 to Approx. 3.0

*: Check for linear voltage rise in response to increases to about 4,000 rpm in engine speed.

MTBL0326

4. If the voltage is out of specification, disconnect Mass air flow sensor harness connector and connect it again. Repeat above check.
5. If NG, remove Mass air flow sensor from air duct. Check hot wire for damage or dust.

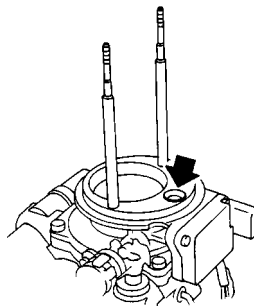

SEF893J

OK or NG

OK	▶	GO TO 9.
NG	▶	Replace mass air flow sensor.

9 CHECK SHIELD CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect joint connector-2.
3. Check the following.
 - Continuity between joint connector-2 terminal 1 and ground
 - Joint connector-2
(Refer to "HARNES LAYOUT", *EL-239*)
Continuity should exist.
4. Also check harness for short to ground and short to power.

OK or NG

OK	▶	GO TO 10.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0100 MASS AIR FLOW SENSOR (MAFS)

KA24DE


Diagnostic Procedure (Cont'd)

10	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
	▶ INSPECTION END

DTC P0105 ABSOLUTE PRESSURE SENSOR


KA24DE

Component Description

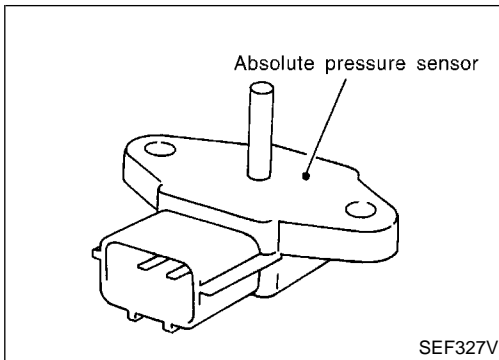

Component Description

The absolute pressure sensor is connected to the MAP/BARO switch solenoid valve by a hose. The sensor detects ambient barometric pressure and intake manifold pressure and sends the voltage signal to the ECM. As the pressure increases, the voltage rises.

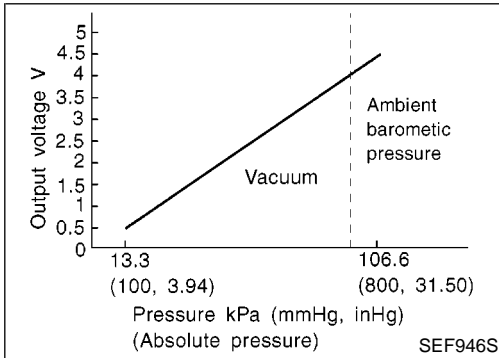

On Board Diagnosis Logic

NEEC0920

DTC No.	Malfunction is detected when ...		Check Items (Possible Cause)
P0105 0803	A)	An excessively low or high voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> ● Harness or connectors (Absolute pressure sensor circuit is open or shorted.) ● Absolute pressure sensor
	B)	A high voltage from the sensor is sent to ECM under light load driving conditions.	<ul style="list-style-type: none"> ● Hoses (Hoses between the intake manifold and absolute pressure sensor are disconnected or clogged.) ● Intake air leaks ● MAP/BARO switch solenoid valve ● Absolute pressure sensor
	C)	A low voltage from the sensor is sent to ECM under heavy load driving conditions.	<ul style="list-style-type: none"> ● Absolute pressure sensor

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC Confirmation Procedure

Perform "PROCEDURE FOR MALFUNCTION A" first. ^{=NEEC0921} If the 1st trip DTC cannot be confirmed, perform "PROCEDURE FOR MALFUNCTION B". If the 1st trip DTC is not confirmed on "PROCEDURE FOR MALFUNCTION B", perform "PROCEDURE FOR MALFUNCTION C".

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

3

DATA MONITOR	
MONITORING	NO FAIL
COOLAN TEMP/S	XXX °C

PEF002P

PROCEDURE FOR MALFUNCTION A

NEEC0921S01

With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 6 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-151.

With GST

- 1) Turn ignition switch ON and wait at least 6 seconds.
- 2) Select "MODE 7" with GST.
- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-151.

No Tools

- 1) Turn ignition switch ON and wait at least 6 seconds.
- 2) Turn ignition switch OFF, wait at least 5 seconds and then turn ON.
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-151.

4

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
COOLAN TEMP/S	XXX °C

PEF361V

PROCEDURE FOR MALFUNCTION B

NEEC0921S02

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
- 4) Start engine and let it idle.
- 5) Wait at least 10 seconds.
- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-151.

With GST

Follow the procedure "With CONSULT-II".

7

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
VHCL SPEED SE	XXX km/h
B/FUEL SCHDL	XXX msec
ABSOL PRES/SE	XXX V

PEF127V

PROCEDURE FOR MALFUNCTION C

NEEC0921S03

CAUTION:

Always drive vehicle at a safe speed.

Ⓜ With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II and check "ABSOL PRES/SE" signal.

The voltage of "ABSOL PRES/SE" should be more than 1.74 [V].

If the check result is NG, go to "Diagnostic Procedure", EC-151.

If the check result is OK, go to following step.

- 3) Start engine and warm it up to normal operating temperature.
- 4) Turn ignition switch OFF and wait at least 5 seconds.
- 5) Start engine and let it idle for at least 10 seconds.
- 6) Select "DATA MONITOR" mode with CONSULT-II.
- 7) Drive the vehicle at least 3 consecutive seconds under the following conditions,

B/FUEL SCHDL	More than 4 msec
CMPS-RPM (REF)	3,000 - 4,800 rpm
Selector lever	Suitable position
Driving location	Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

- 8) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-151.

ENGINE SPD	0RPM
COOLANT TEMP	69°C
VEHICLE SPD	0MPH
IGN ADVANCE	3.0°
CALC LOAD	0.0%
MAP	101KPaA
MAF	0.25gm/s
THROTTLE POS	0.0%
INTAKE AIR	27°C
FUEL SYS #1	OL
FUEL SYS #2	UNUSED
SHORT FT #1	0.0%
LONG FT #1	0.0%
O2S B1 S1	0.000V
O2FT B1 S1	0.0%
O2S B1 S2	0.000V

SEF518R

Overall Function Check

NEEC0922

PROCEDURE FOR MALFUNCTION C

NEEC0922S01


Use this procedure to check the overall function of the front heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Ⓜ With GST

- 1) Turn ignition switch ON.
- 2) Select absolute pressure sensor signal in "MODE 1" with GST.
- 3) Make sure that the pressure of absolute pressure sensor signal is more than 46 kPa (0.47 kg/cm², 6.7 psi).
- 4) If NG, go to "Diagnostic Procedure", EC-151.

Ⓜ No Tools

- 1) Turn ignition switch ON.
- 2) Make sure that the voltage between ECM terminal 45 (Absolute pressure sensor signal) and ground is more than 1.74 [V].
- 3) If NG, go to "Diagnostic Procedure", EC-151.



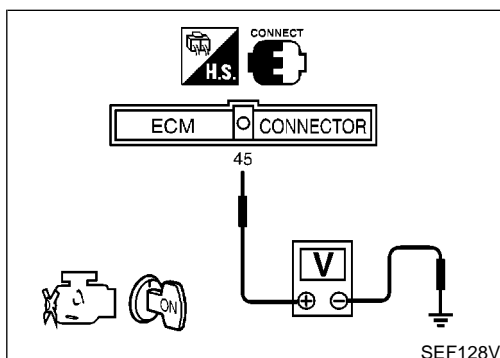


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Wiring Diagram

NEEC0923

EC-AP/SEN-01

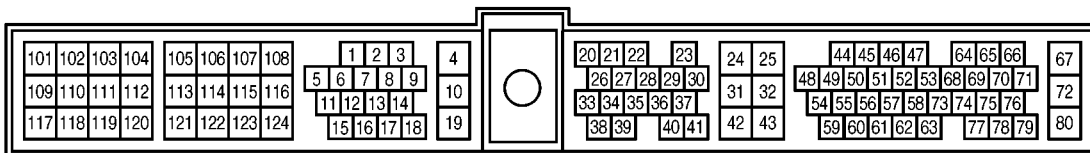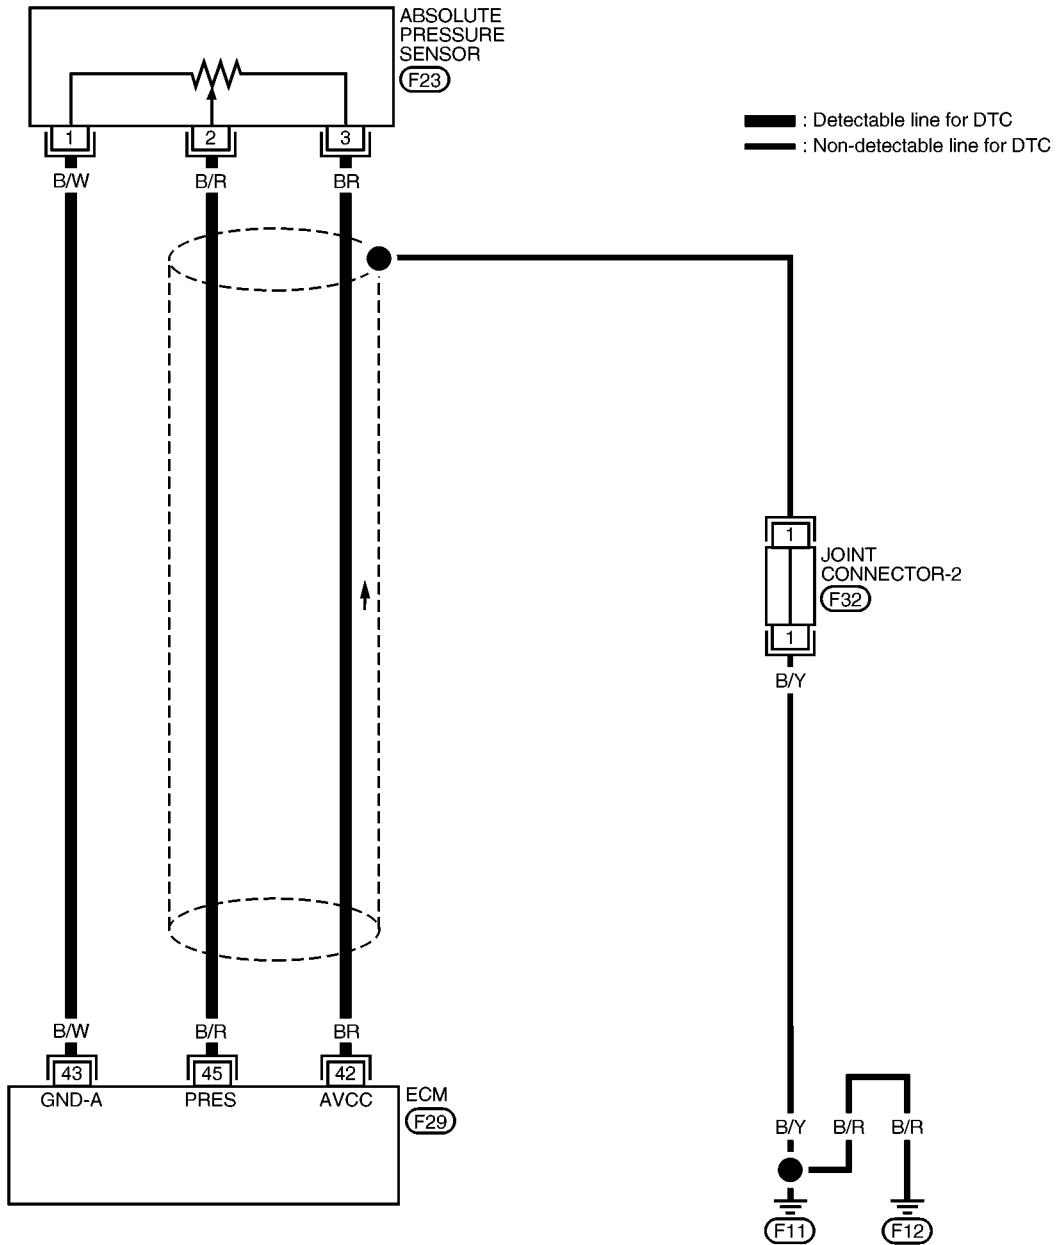


Diagnostic Procedure


NEEC0924

If the trouble is duplicated after “PROCEDURE FOR MALFUNCTION A or C”, perform “PROCEDURE A” below. If the trouble is duplicated after “PROCEDURE FOR MALFUNCTION B”, perform “PROCEDURE B” EC-155.

PROCEDURE A

NEEC0924S01

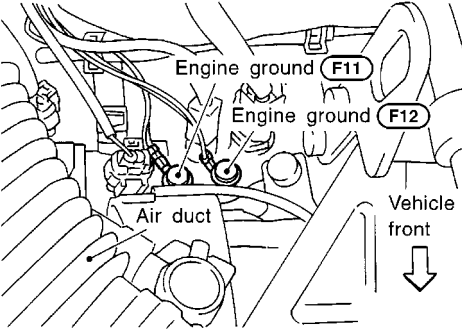1	RETIGHTEN GROUND SCREWS	
<p>1. Turn ignition switch OFF. 2. Loosen and retighten engine ground screws.</p>		
		
<small>SEF325V</small>		
▶		GO TO 2.

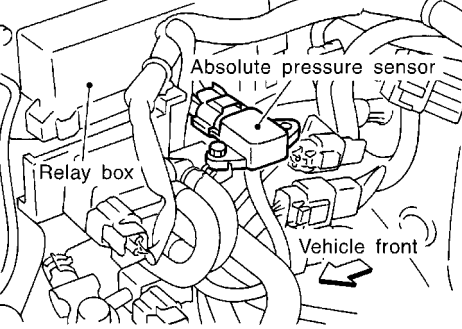2	CHECK CONNECTOR	
<p>1. Disconnect absolute pressure sensor harness connector.</p>		
		
<small>SEF328V</small>		
<p>2. Check sensor harness connector for water. Water should not exist.</p> <p style="text-align: center;">OK or NG</p>		
OK ▶		GO TO 3.
NG ▶		Repair or replace harness connector.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

3	CHECK POWER SUPPLY		
<ol style="list-style-type: none"> 1. Turn ignition switch ON. 2. Check voltage between absolute pressure sensor terminal 3 and engine ground with CONSULT-II or tester. 			
<p>Voltage: Approximately 5V</p> <p>OK or NG</p>			
OK	▶	GO TO 4.	
NG	▶	Repair harness or connectors.	


SEF095S

4	CHECK GROUND CIRCUIT		
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Check harness continuity between absolute pressure sensor terminal 1 and engine ground. Refer to EC-150. 			
<p>Continuity should exist.</p> <p>OK or NG</p>			
<ol style="list-style-type: none"> 3. Also check harness for short to ground and short to power. 			
OK	▶	GO TO 5.	
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.	

SEF096S

5 CHECK INPUT SIGNAL CIRCUIT

1. Disconnect ECM harness connector.
2. Check harness continuity between ECM harness connector F29 terminal 45 and absolute pressure sensor harness connector F23 terminal 2.

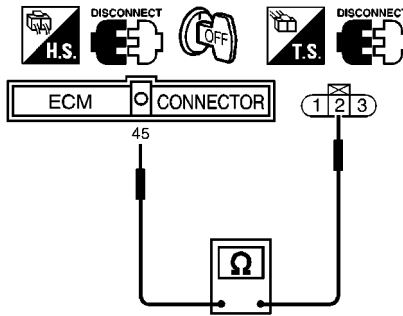

SEF129V

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

OK	▶	GO TO 7.
NG	▶	GO TO 6.

6 DETECT MALFUNCTIONING PART

Check the following.


- Harness for open or short between ECM and absolute pressure sensor
- Harness for open or short between absolute pressure sensor and TCM (Transmission control module)

▶	Repair open circuit or short to ground or short to power in harness or connectors.
---	--

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

7 CHECK ABSOLUTE PRESSURE SENSOR


1. Remove absolute pressure sensor with its harness connector connected.

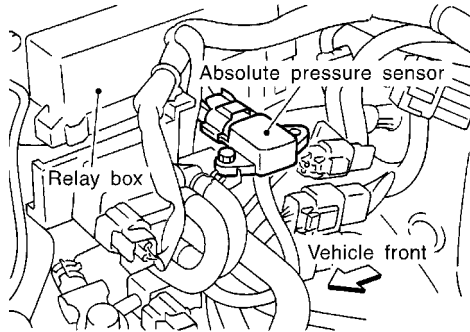

SEF328V

2. Remove hose from absolute pressure sensor.

3. Turn ignition switch ON and check output voltage between ECM harness connector terminal 45 (Absolute pressure sensor signal) and engine ground.

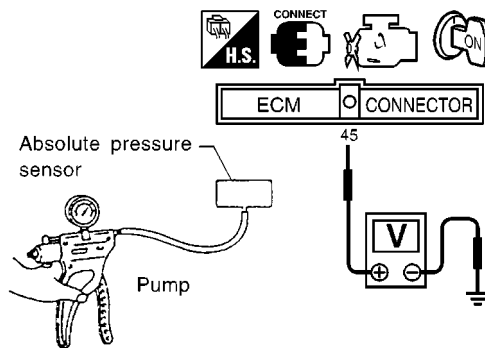

SEF132V

The voltage should be 3.2 to 4.8V.

4. Use pump to apply vacuum of -26.7 kPa (-200 mmHg, -7.87 inHg) to absolute pressure sensor as shown in figure and check the output voltage.

The voltage should be 1.0 to 1.4V lower than the value measured in step 3.

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -93.3 kPa (-700 mmHg, -27.56 inHg) or over 101.3 kPa (760 mmHg, 29.92 inHg) of pressure.

OK or NG

OK	▶	GO TO 8.
NG	▶	Replace absolute pressure sensor.

8 CHECK SHIELD CIRCUIT

1. Turn ignition switch OFF.
2. Remove joint connector-2.
3. Check the following.
 - Continuity between joint connector-2 terminal 1 and ground
 - Joint connector-2
(Refer to "HARNESS LAYOUT" *EL-239*.)

Continuity should exist.
4. Also check harness for short to ground and short to power.
5. Then reconnect joint connector-2.

OK or NG

OK	▶	GO TO 9.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0105 ABSOLUTE PRESSURE SENSOR

KA24DE

Diagnostic Procedure (Cont'd)

9	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
▶	INSPECTION END

GI



MA

EM

LC

PROCEDURE B

NEEC0924S02

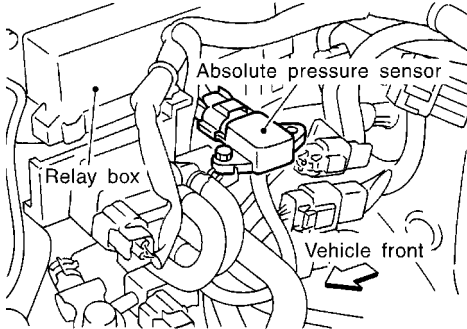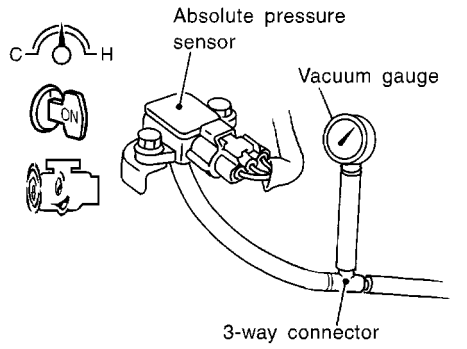1	INSPECTION START
<ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch OFF. 3. Connect MAP/BARO switch solenoid valve and absolute pressure sensor with a rubber tube that has a vacuum gauge. 	
	
	
SEF328V	
SEF385U	
Models with CONSULT-II ▶	GO TO 2.
Models without CONSULT-II ▶	GO TO 3.

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

2	CHECK VACUUM SOURCE TO ABSOLUTE PRESSURE SENSOR																																																		
<p>(With CONSULT-II)</p> <ol style="list-style-type: none"> Start engine and let it idle. Select "MAP/BARO SW/V" in "ACTIVE TEST" mode with CONSULT-II. Touch "MAP" and "BARO" alternately and check for vacuum. 																																																			
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%; border: 1px solid black; padding: 2px;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th colspan="2" style="text-align: center;">ACTIVE TEST</th></tr> <tr><td style="text-align: center;">MAP/BARO SW/V</td><td style="text-align: center;">MAP</td></tr> <tr><th colspan="2" style="text-align: center;">MONITOR</th></tr> <tr><td style="text-align: center;">CMPS-RPM (REF)</td><td style="text-align: center;">XXX rpm</td></tr> <tr><td style="text-align: center;">MAP/BARO SW/V</td><td style="text-align: center;">MAP</td></tr> <tr><td style="text-align: center;">ABSOL PRES/SE</td><td style="text-align: center;">XXX V</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table> </td> <td style="width: 30%; border: 1px solid black; padding: 2px;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th colspan="2" style="text-align: center;">ACTIVE TEST</th></tr> <tr><td style="text-align: center;">MAP/BARO SW/V</td><td style="text-align: center;">BARO</td></tr> <tr><th colspan="2" style="text-align: center;">MONITOR</th></tr> <tr><td style="text-align: center;">CMPS-RPM (REF)</td><td style="text-align: center;">XXX rpm</td></tr> <tr><td style="text-align: center;">MAP/BARO SW/V</td><td style="text-align: center;">BARO</td></tr> <tr><td style="text-align: center;">ABSOL PRES/SE</td><td style="text-align: center;">XXX V</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table> </td> <td style="width: 35%; border: 1px solid black; padding: 2px;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">MAP/BARO SW/V</td><td style="text-align: center;">Vacuum</td></tr> <tr><td style="text-align: center;">BARO</td><td style="text-align: center;">Should not exist</td></tr> <tr><td style="text-align: center;">MAP</td><td style="text-align: center;">Should exist</td></tr> </table> </td> </tr> </table>			<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th colspan="2" style="text-align: center;">ACTIVE TEST</th></tr> <tr><td style="text-align: center;">MAP/BARO SW/V</td><td style="text-align: center;">MAP</td></tr> <tr><th colspan="2" style="text-align: center;">MONITOR</th></tr> <tr><td style="text-align: center;">CMPS-RPM (REF)</td><td style="text-align: center;">XXX rpm</td></tr> <tr><td style="text-align: center;">MAP/BARO SW/V</td><td style="text-align: center;">MAP</td></tr> <tr><td style="text-align: center;">ABSOL PRES/SE</td><td style="text-align: center;">XXX V</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>	ACTIVE TEST		MAP/BARO SW/V	MAP	MONITOR		CMPS-RPM (REF)	XXX rpm	MAP/BARO SW/V	MAP	ABSOL PRES/SE	XXX V									<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th colspan="2" style="text-align: center;">ACTIVE TEST</th></tr> <tr><td style="text-align: center;">MAP/BARO SW/V</td><td style="text-align: center;">BARO</td></tr> <tr><th colspan="2" style="text-align: center;">MONITOR</th></tr> <tr><td style="text-align: center;">CMPS-RPM (REF)</td><td style="text-align: center;">XXX rpm</td></tr> <tr><td style="text-align: center;">MAP/BARO SW/V</td><td style="text-align: center;">BARO</td></tr> <tr><td style="text-align: center;">ABSOL PRES/SE</td><td style="text-align: center;">XXX V</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>	ACTIVE TEST		MAP/BARO SW/V	BARO	MONITOR		CMPS-RPM (REF)	XXX rpm	MAP/BARO SW/V	BARO	ABSOL PRES/SE	XXX V									<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">MAP/BARO SW/V</td><td style="text-align: center;">Vacuum</td></tr> <tr><td style="text-align: center;">BARO</td><td style="text-align: center;">Should not exist</td></tr> <tr><td style="text-align: center;">MAP</td><td style="text-align: center;">Should exist</td></tr> </table>	MAP/BARO SW/V	Vacuum	BARO	Should not exist	MAP	Should exist
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th colspan="2" style="text-align: center;">ACTIVE TEST</th></tr> <tr><td style="text-align: center;">MAP/BARO SW/V</td><td style="text-align: center;">MAP</td></tr> <tr><th colspan="2" style="text-align: center;">MONITOR</th></tr> <tr><td style="text-align: center;">CMPS-RPM (REF)</td><td style="text-align: center;">XXX rpm</td></tr> <tr><td style="text-align: center;">MAP/BARO SW/V</td><td style="text-align: center;">MAP</td></tr> <tr><td style="text-align: center;">ABSOL PRES/SE</td><td style="text-align: center;">XXX V</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>	ACTIVE TEST		MAP/BARO SW/V	MAP	MONITOR		CMPS-RPM (REF)	XXX rpm	MAP/BARO SW/V	MAP	ABSOL PRES/SE	XXX V									<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th colspan="2" style="text-align: center;">ACTIVE TEST</th></tr> <tr><td style="text-align: center;">MAP/BARO SW/V</td><td style="text-align: center;">BARO</td></tr> <tr><th colspan="2" style="text-align: center;">MONITOR</th></tr> <tr><td style="text-align: center;">CMPS-RPM (REF)</td><td style="text-align: center;">XXX rpm</td></tr> <tr><td style="text-align: center;">MAP/BARO SW/V</td><td style="text-align: center;">BARO</td></tr> <tr><td style="text-align: center;">ABSOL PRES/SE</td><td style="text-align: center;">XXX V</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>	ACTIVE TEST		MAP/BARO SW/V	BARO	MONITOR		CMPS-RPM (REF)	XXX rpm	MAP/BARO SW/V	BARO	ABSOL PRES/SE	XXX V									<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">MAP/BARO SW/V</td><td style="text-align: center;">Vacuum</td></tr> <tr><td style="text-align: center;">BARO</td><td style="text-align: center;">Should not exist</td></tr> <tr><td style="text-align: center;">MAP</td><td style="text-align: center;">Should exist</td></tr> </table>	MAP/BARO SW/V	Vacuum	BARO	Should not exist	MAP	Should exist			
ACTIVE TEST																																																			
MAP/BARO SW/V	MAP																																																		
MONITOR																																																			
CMPS-RPM (REF)	XXX rpm																																																		
MAP/BARO SW/V	MAP																																																		
ABSOL PRES/SE	XXX V																																																		
ACTIVE TEST																																																			
MAP/BARO SW/V	BARO																																																		
MONITOR																																																			
CMPS-RPM (REF)	XXX rpm																																																		
MAP/BARO SW/V	BARO																																																		
ABSOL PRES/SE	XXX V																																																		
MAP/BARO SW/V	Vacuum																																																		
BARO	Should not exist																																																		
MAP	Should exist																																																		
SEF174X																																																			
OK or NG																																																			
OK	▶	GO TO 9.																																																	
NG	▶	GO TO 4.																																																	


3	CHECK VACUUM SOURCE TO ABSOLUTE PRESSURE SENSOR							
<p>(Without CONSULT-II)</p> <ol style="list-style-type: none"> Start engine and let it idle. Check for vacuum under the following condition. 								
<table border="1" style="width: 60%; margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Condition</th> <th style="text-align: center;">Vacuum</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">For 5 seconds after starting engine</td> <td style="text-align: center;">Should not exist</td> </tr> <tr> <td style="text-align: center;">More than 5 seconds after starting engine</td> <td style="text-align: center;">Should exist</td> </tr> </tbody> </table>			Condition	Vacuum	For 5 seconds after starting engine	Should not exist	More than 5 seconds after starting engine	Should exist
Condition	Vacuum							
For 5 seconds after starting engine	Should not exist							
More than 5 seconds after starting engine	Should exist							
MTBL0080								
OK or NG								
OK	▶	GO TO 9.						
NG	▶	GO TO 4.						

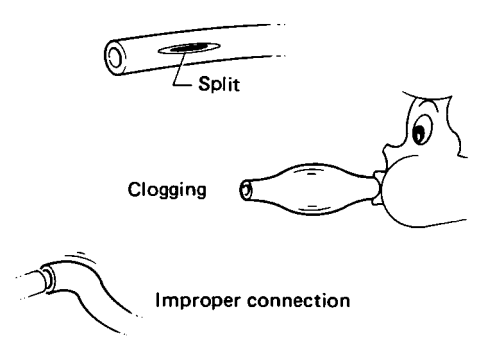4	CHECK VACUUM HOSE	
<ol style="list-style-type: none"> Turn ignition switch OFF. Check vacuum hose for clogging, cracks, disconnection or improper connection. 		
		
SEF109L		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Clean, repair or replace the hose.

DTC P0105 ABSOLUTE PRESSURE SENSOR

KA24DE

Diagnostic Procedure (Cont'd)

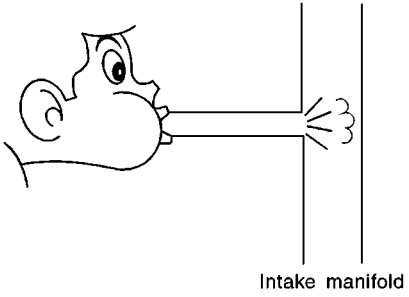5	CHECK VACUUM PORT	
Check vacuum port for clogging.		
 <p style="text-align: center;">Intake manifold</p>		
SEF368U		
OK or NG		
OK (With CONSULT-II) ▶		GO TO 6.
OK (Without CONSULT-II) ▶		GO TO 7.
NG ▶		Clean or repair the vacuum port.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

6 CHECK MAP/BARO SWITCH SOLENOID VALVE

Ⓟ With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Perform "MAP/BARO SW/V" in "ACTIVE TEST" mode with CONSULT-II.
3. Check the following.
 - Condition: At idle under no-load
 - CONSULT-II display
 - Time for voltage to change

ACTIVE TEST	
MAP/BARO SW/V	MAP
MONITOR	
CMPS-RPM (REF)	XXX rpm
MAP/BARO SW/V	MAP
ABSOL PRES/SE	XXX V

MAP/BARO	AVSOL PRES/SE (Voltage)
BARO	More than 2.6V
MAP	Less than the voltage at BARO

ACTIVE TEST	
MAP/BARO SW/V	BARO
MONITOR	
CMPS-RPM (REF)	XXX rpm
MAP/BARO SW/V	BARO
ABSOL PRES/SE	XXX V

MAP/BARO SW/V	Required time to switch
BARO to MAP	Less than 1 second
MAP to BARO	

SEF170X

OK or NG

OK ▶ GO TO 8.


NG ▶ GO TO 7.(Without CONSULT-II)

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

7 CHECK MAP/BARO SWITCH SOLENOID VALVE


⊗ **Without CONSULT-II**

1. Turn ignition switch OFF and remove MAP/BARO switch solenoid valve.

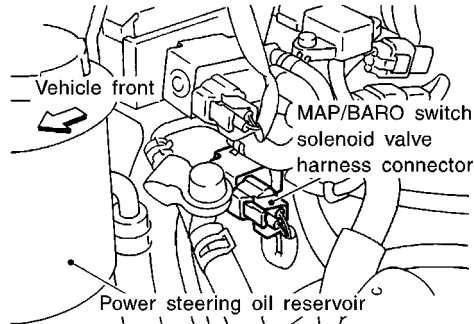

SEF338V

2. Check air passage continuity.

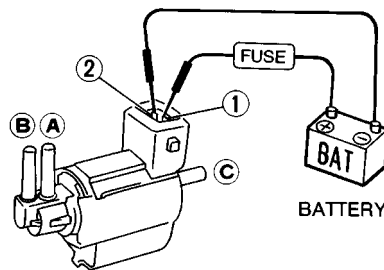

MEC488B

Condition	Air passage continuity between A and B	Air passage continuity between A and C
12V direct current supply between terminals 1 and 2	Yes	No
No supply	No	Yes

MTBL0283

3. Check the time required for the solenoid valve to switch. It should be less than 1 second.

OK or NG

OK ► GO TO 8.

NG ► Replace MAP/BARO switch solenoid valve.

8 CHECK INTAKE SYSTEM

Check intake system for air leaks.

OK or NG


OK ► GO TO 12.

NG ► Repair it.

DTC P0105 ABSOLUTE PRESSURE SENSOR

KA24DE

Diagnostic Procedure (Cont'd)

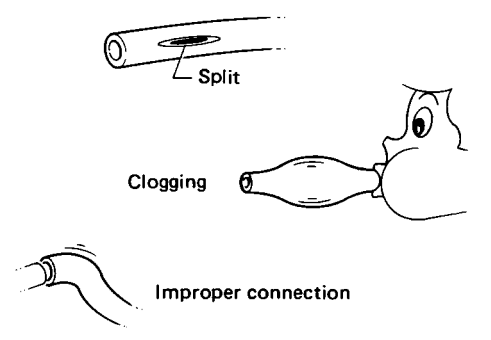
9	CHECK HOSE BETWEEN ABSOLUTE PRESSURE SENSOR AND MAP/BARO SWITCH SOLENOID VALVE
<p>1. Turn ignition switch OFF. 2. Check hose for clogging, cracks, disconnection or improper connection.</p> <div style="text-align: center;"><p>Split</p><p>Clogging</p><p>Improper connection</p></div> <p style="text-align: right;">SEF109L</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 10.
NG	▶ Repair or reconnect hose.

10	CHECK HARNESS CONNECTOR
<p>1. Disconnect absolute pressure sensor harness connector. 2. Check sensor harness connector for water. Water should not exist.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 11.
NG	▶ Repair or replace harness connector.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

11 CHECK ABSOLUTE PRESSURE SENSOR


1. Remove absolute pressure sensor with its harness connector connected.

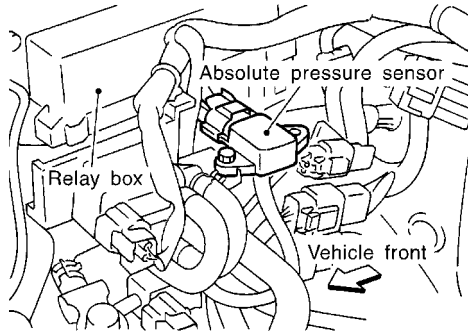

SEF328V

2. Remove hose from absolute pressure sensor.

3. Turn ignition switch ON and check output voltage between ECM terminal 45 (Absolute pressure sensor signal) and engine ground.

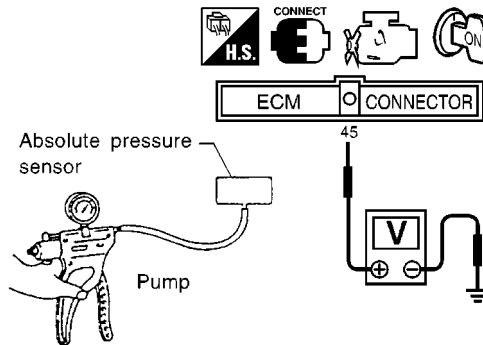

SEF132V

The voltage should be 3.2 to 4.8V.

4. Use pump to apply vacuum of -26.7 kPa (-200 mmHg , -7.87 inHg) to absolute pressure sensor as shown in figure and check the output voltage.

The voltage should be 1.0 to 1.4V lower than the value measured in step 3.

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -93.3 kPa (-700 mmHg , -27.56 inHg) or over 101.3 kPa (760 mmHg , 29.92 inHg) of pressure.

OK or NG

OK ► GO TO 12.


NG ► Replace absolute pressure sensor.

12 CHECK INTERMITTENT INCIDENT

Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.

► INSPECTION END

Component Description

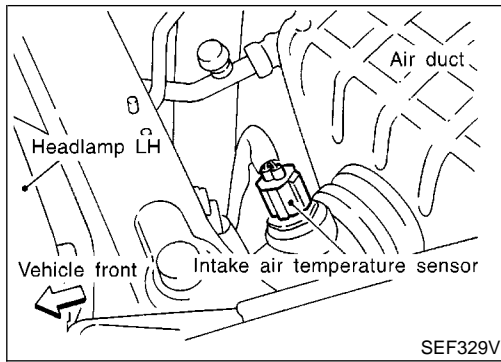


Component Description

NEEC0925

The intake air temperature sensor is mounted to the air duct housing. The sensor detects intake air temperature and transmits a signal to the ECM.

The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

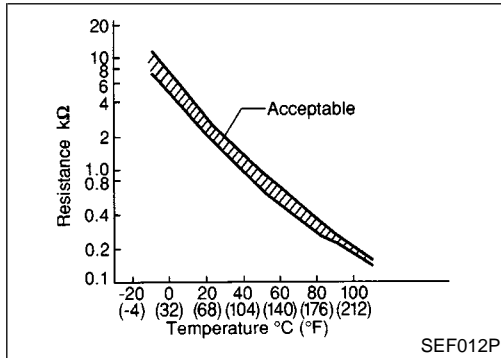

<Reference data>

Intake air temperature °C (°F)	Voltage* V	Resistance kΩ
20 (68)	3.5	2.1 - 2.9
80 (176)	1.23	0.27 - 0.38

*: These data are reference values and are measured between ECM terminal 61 (Intake air temperature sensor) and ECM terminal 32 (ECM ground).

On Board Diagnosis Logic

NEEC0926

DTC No.	Malfunction is detected when ...		Check Items (Possible Cause)
P0110 0401	A)	An excessively low or high voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Intake air temperature sensor
	B)	Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signal from engine coolant temperature sensor.	

Engine operating condition in fail-safe mode



The ECM functions on the assumption that the intake air temperature is 25°C (77°F).

DTC Confirmation Procedure

Perform "PROCEDURE FOR MALFUNCTION A" first. If the 1st trip DTC cannot be confirmed, perform "PROCEDURE FOR MALFUNCTION B".

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

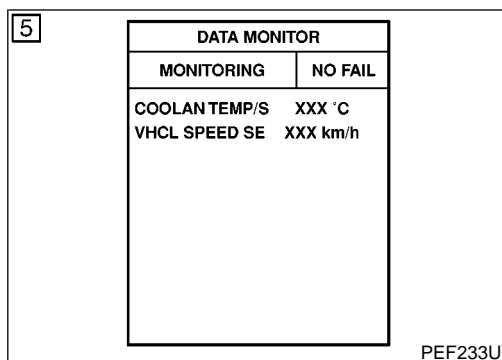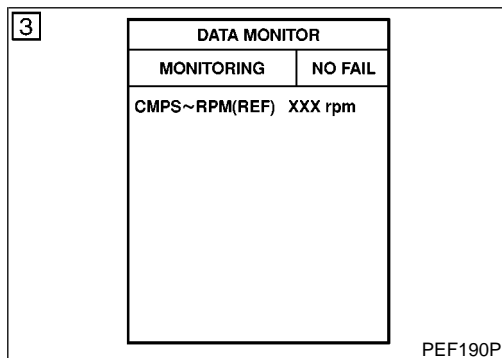

PROCEDURE FOR MALFUNCTION A

NEEC0927S01

With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-165.

With GST

Follow the procedure "With CONSULT-II".

PROCEDURE FOR MALFUNCTION B

NEEC0927S02

CAUTION:

Always drive vehicle at a safe speed.

TESTING CONDITION:

This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

With CONSULT-II

- 1) Wait until engine coolant temperature is less than 90°C (194°F).
 - a) Turn ignition switch ON.
 - b) Select "DATA MONITOR" mode with CONSULT-II.
 - c) Check the engine coolant temperature.
 - d) If the engine coolant temperature is not less than 90°C (194°F), turn ignition switch "OFF" and cool down engine.
 - Perform the following steps before engine coolant temperature is above 90°C (194°F).
- 2) Turn ignition switch ON.
- 3) Select "DATA MONITOR" mode with CONSULT-II.
- 4) Start engine.
- 5) Hold vehicle speed more than 70 km/h (44 MPH) for 105 consecutive seconds.
- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-165.

With GST


Follow the procedure "With CONSULT-II".

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX



Wiring Diagram

NEEC0928

EC-IATS-01

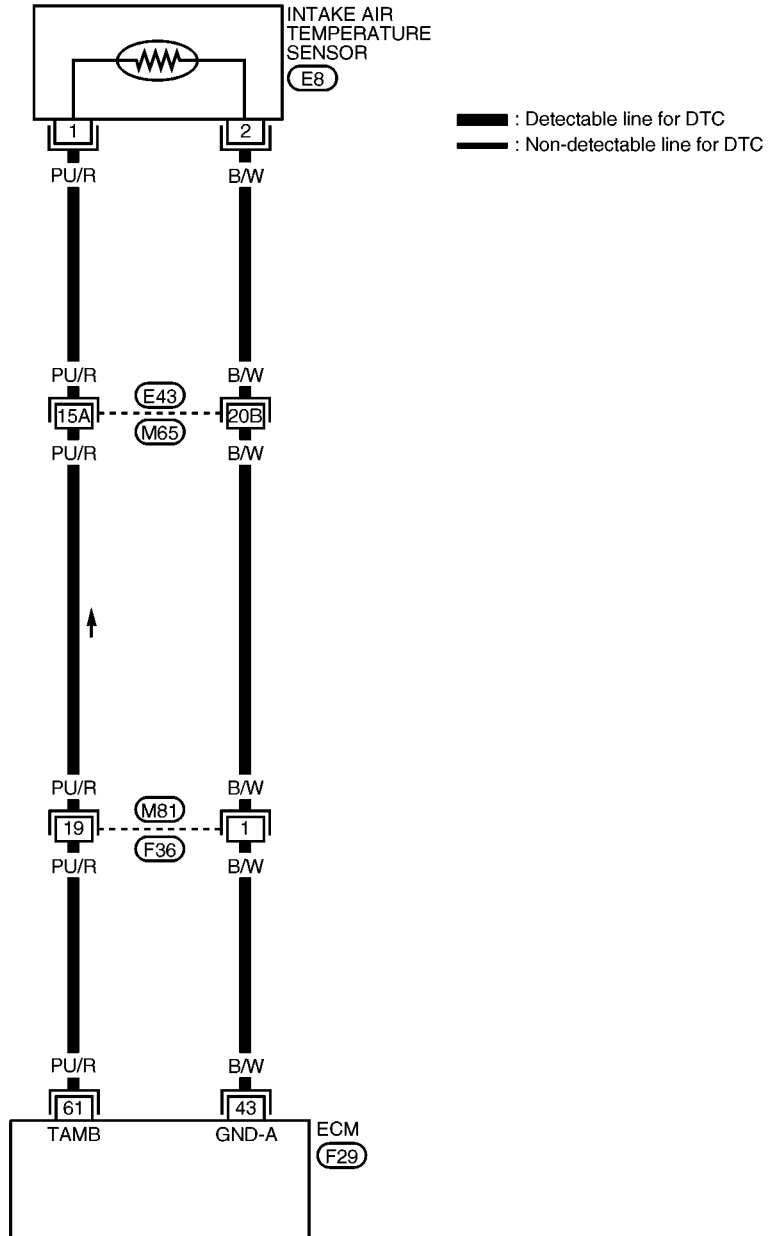

Refer to the following.
 (M65), (E43) - SUPER MULTIPLE JUNCTION (SMJ)

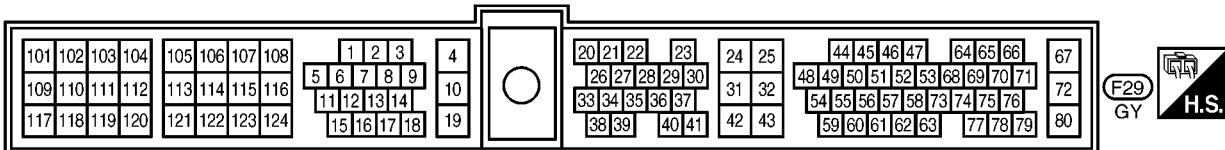


3	CHECK GROUND CIRCUIT	<p>1. Turn ignition switch OFF.</p> <p>2. Check harness continuity between intake air temperature sensor terminal 2 and engine ground. Refer to the wiring diagram.</p> <div style="text-align: center; margin: 10px 0;"> </div> <p style="text-align: right; margin-right: 20px;">SEF102S</p> <p style="text-align: center; margin-top: 10px;">Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	GO TO 5.	
NG	▶	GO TO 4.	

4	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M58, F28 ● Harness connectors M59, F27 ● Harness for open or short between ECM and intake air temperature sensor 	
	▶	Repair open circuit or short to ground or short to power in harness or connectors.	

5 CHECK INTAKE AIR TEMPERATURE SENSOR


Check resistance as shown in the figure.

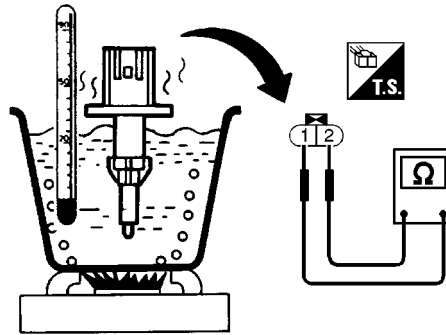

<Reference data>

EGR coolant temperature °C (°F)	Voltage* V	Resistance k Ω
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

*: These data are reference values and are measured between ECM terminal ⑤⑨ (Engine coolant temperature sensor) and ECM terminal ③② (ECM ground).

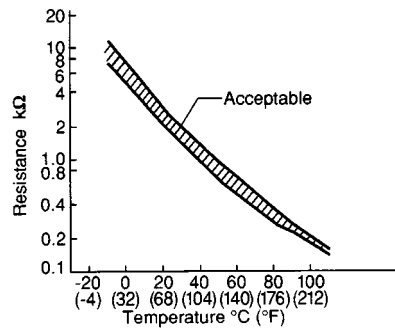
OK or NG

OK	▶	GO TO 6.
NG	▶	Replace intake air temperature sensor.

6 CHECK INTERMITTENT INCIDENT

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.

 ▶ **INSPECTION END**

SEF205W

MTBL0327


SEF012P

 GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS) (CIRCUIT)

KA24DE


Component Description

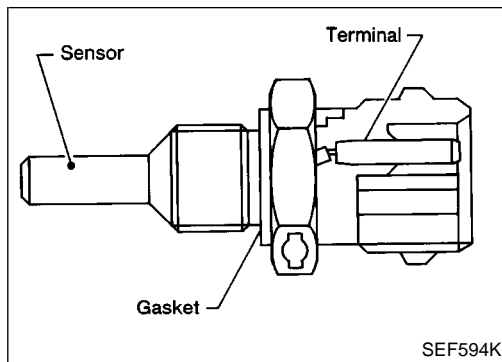

Component Description

NEEC0930

The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

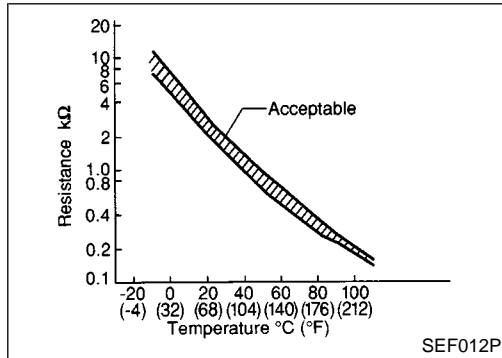

<Reference data>

Engine coolant temperature °C (°F)	Voltage* V	Resistance kΩ
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

*: These data are reference values and are measured between ECM terminal 59 (Engine coolant temperature sensor) and ECM terminal 32 (ECM ground).

CONSULT-II Reference Value in Data Monitor Mode

NEEC0931

MONITOR ITEM	CONDITION	SPECIFICATION
COOLAN TEMP/S	● Engine: After warming up	More than 70°C (158°F)

On Board Diagnosis Logic

NEEC0932

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0115 0103	● An excessively high or low voltage from the sensor is sent to ECM.*	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Engine coolant temperature sensor

*: When this malfunction is detected, the ECM enters fail-safe mode and the MIL lights up.

Detected items	Engine operating condition in fail-safe mode	
Engine coolant temperature sensor circuit	Engine coolant temperature will be determined by ECM based on the time after turning ignition switch to ON or START. CONSULT-II displays the engine coolant temperature decided by ECM.	
	Condition	Engine coolant temperature decided (CONSULT-II display)
	Just as ignition switch is turned to ON or Start	40°C (104°F)
	More than approx. 4 minutes after ignition ON or Start	80°C (176°F)
Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)	

DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS) (CIRCUIT)

KA24DE

DTC Confirmation Procedure

3	DATA MONITOR	
	MONITORING	NO FAIL
	COOLAN TEMP/S	XXX °C

PEF002P

DTC Confirmation Procedure

NEEC0933

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

Ⓜ With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-171.

Ⓜ With GST

Follow the procedure "With CONSULT-II".

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS) (CIRCUIT)



KA24DE

Wiring Diagram

Wiring Diagram

NEEC0934

EC-ECTS-01

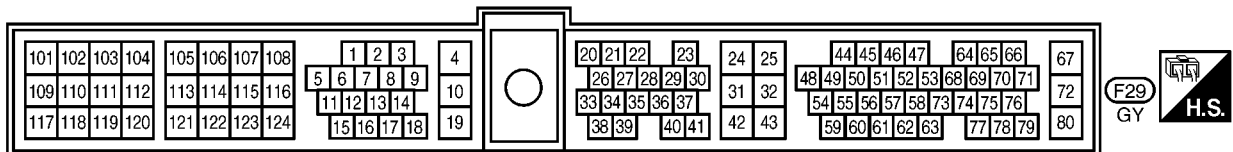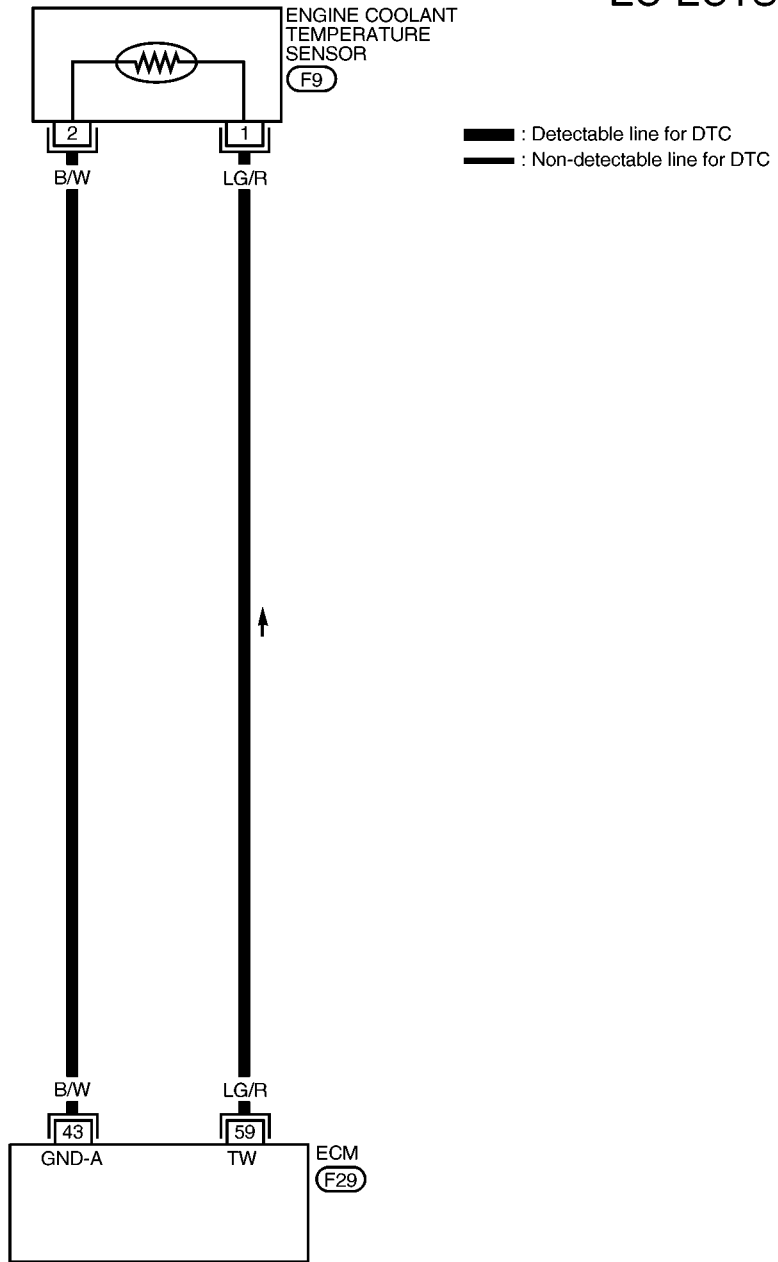

AEC984A



DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS) (CIRCUIT)

KA24DE

Diagnostic Procedure

Diagnostic Procedure

NEEC0935

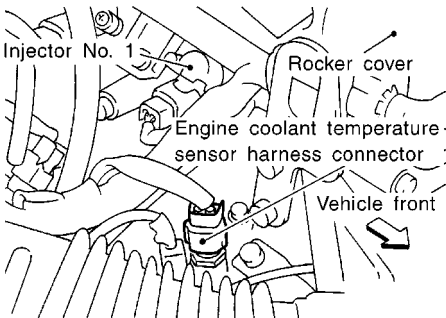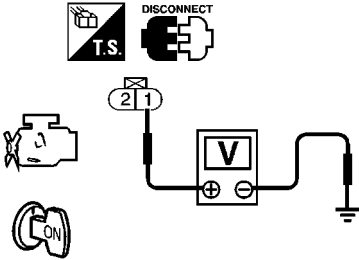1	CHECK POWER SUPPLY
<p>1. Turn ignition switch OFF. 2. Disconnect engine coolant temperature sensor harness connector.</p>	
	
<p>3. Turn ignition switch ON. 4. Check voltage between engine coolant temperature sensor terminal 1 and ground with CONSULT-II or tester.</p>	
	
<p>Voltage: Approximately 5V</p>	
<p>OK or NG</p>	
OK	▶ GO TO 3.
NG	▶ GO TO 2.

SEF330V

SEF206W

2	DETECT MALFUNCTIONING PART
Check the harness for open or short between ECM and engine coolant temperature sensor.	
▶	Repair harness or connectors.

3	CHECK GROUND CIRCUIT
<p>1. Turn ignition switch OFF. 2. Check harness continuity between engine coolant temperature sensor terminal 2 and engine ground. Refer to EL-234. Continuity should exist.</p>	
<p>3. Also check harness for short to ground and short to power.</p>	
<p>OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.

4	DETECT MALFUNCTIONING PART
Check the harness for open or short between ECM and engine coolant temperature sensor.	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS) (CIRCUIT)

KA24DE

Diagnostic Procedure (Cont'd)

5 CHECK ENGINE COOLANT TEMPERATURE SENSOR

Check resistance as shown in the figure.

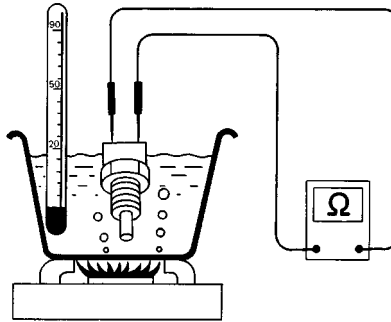


<Reference data>

SEF152P

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

MTBL0285

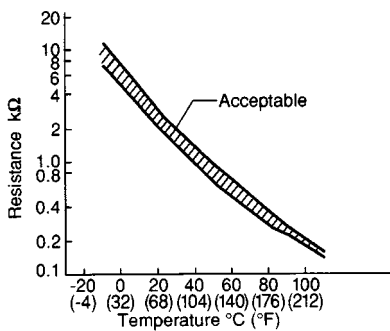

SEF012P

OK or NG

OK	▶	GO TO 6.
NG	▶	Replace engine coolant temperature sensor.

6 CHECK INTERMITTENT INCIDENT

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.

▶ **INSPECTION END**

Component Description


NEEC0936

NOTE:

If DTC P0120 (0403) is displayed with DTC P0510 (0203), first perform trouble diagnosis for DTC P0510, EC-422.

The throttle position sensor responds to the accelerator pedal movement. This sensor is a type of potentiometer which transforms the throttle position into output voltage, and emits the voltage signal to the ECM. In addition, the sensor detects the opening and closing speed of the throttle valve and feeds the voltage signal to the ECM.

Idle position of the throttle valve is determined by the ECM receiving the signal from the throttle position sensor. This sensor controls engine operation such as fuel cut. On the other hand, the "Wide open and closed throttle position switch", which is built into the throttle position sensor unit, is not used for engine control.

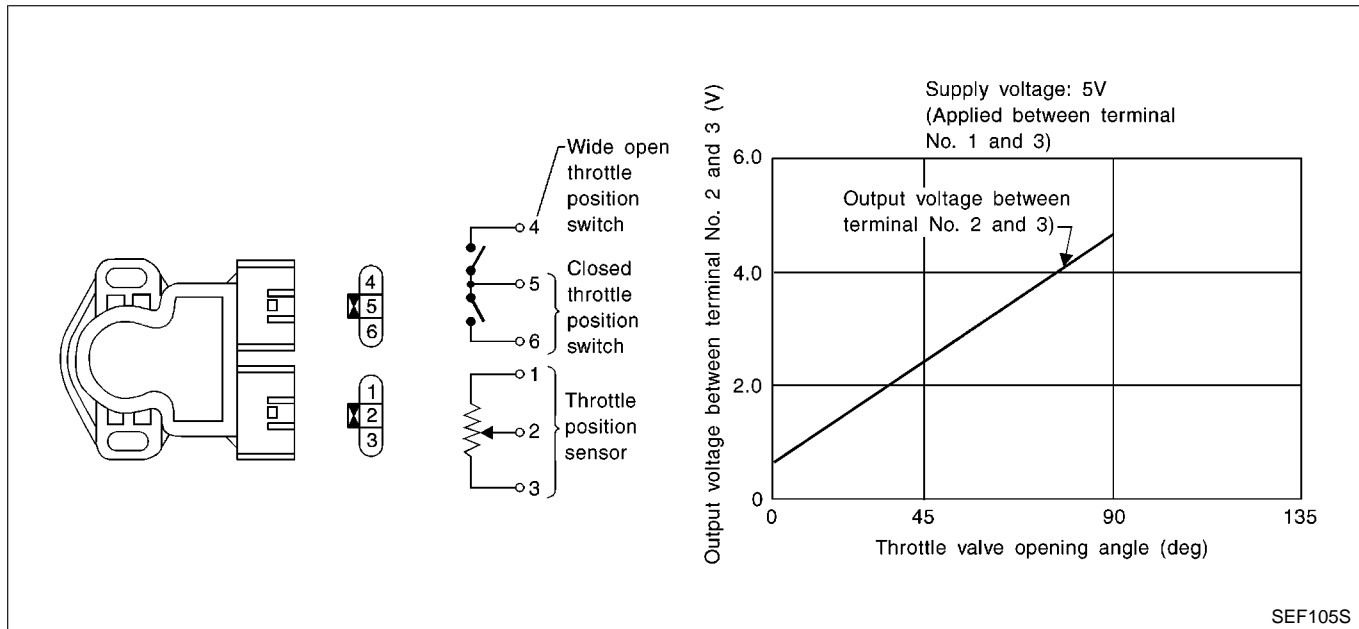

SEF105S

CONSULT-II Reference Value in Data Monitor Mode

NEEC0937

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
THRTL POS SEN	● Ignition switch: ON (Engine stopped) ● Engine: After warming up	Throttle valve: fully closed 0.2 - 0.8V
		Throttle valve: fully opened 3.5 - 4.5V
ABSOL TH-P/S	● Ignition switch: ON (Engine stopped) ● Engine: After warming up	Throttle valve: fully closed 0.0%
		Throttle valve: fully opened Approx. 80%

DTC P0120 THROTTLE POSITION SENSOR

KA24DE

ECM Terminals and Reference Value

ECM Terminals and Reference Value

=NEEC0938

Specification data are reference values and are measured between each terminal and 43 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
23	L	Throttle position sensor	[Ignition switch ON] <ul style="list-style-type: none"> ● Warm-up condition ● Accelerator pedal fully released 	0.2 - 0.8V
			[Ignition switch ON] <ul style="list-style-type: none"> ● Accelerator pedal fully depressed 	3.5 - 4.5V
42	BR	Sensors' power supply	[Ignition switch ON]	Approximately 5V
43	B/W	Sensors' ground	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Approximately 0V

On Board Diagnosis Logic

NEEC0939

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0120 0403	A)	An excessively low or high voltage from the sensor is sent to ECM.* <ul style="list-style-type: none"> ● Harness or connectors (The throttle position sensor circuit is open or shorted.) ● Throttle position sensor
	B)	A high voltage from the sensor is sent to ECM under light load driving condition. <ul style="list-style-type: none"> ● Harness or connectors (The throttle position sensor circuit is open or shorted.) ● Throttle position sensor ● Fuel injector ● Camshaft position sensor ● Mass air flow sensor
	C)	A low voltage from the sensor is sent to ECM under heavy load driving condition. <ul style="list-style-type: none"> ● Harness or connectors (The throttle position sensor circuit is open or shorted.) ● Intake air leaks ● Throttle position sensor

*: When this malfunction is detected, the ECM enters fail-safe mode and the MIL lights up.

Detected items	Engine operating condition in fail-safe mode	
Throttle position sensor circuit	Throttle position will be determined based on the injected fuel amount and the engine speed. Therefore, acceleration will be poor.	
	Condition	Driving condition
	When engine is idling	Normal
	When accelerating	Poor acceleration

DTC Confirmation Procedure

Perform "PROCEDURE FOR MALFUNCTION A" first. If the 1st trip DTC cannot be confirmed, perform "PROCEDURE FOR MALFUNCTION B". If there is no problem on "PROCEDURE FOR MALFUNCTION B", perform "PROCEDURE FOR MALFUNCTION C".

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.


PROCEDURE FOR MALFUNCTION A

CAUTION:

Always drive vehicle at a safe speed.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 10V at idle.
- This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

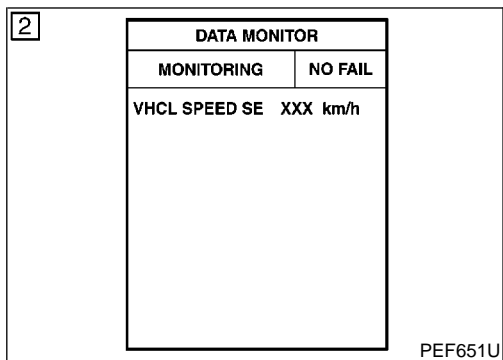

With CONSULT-II

- 1) Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and maintain the following conditions for at least 5 consecutive seconds.

VHCL SPEED SE	More than 4 km/h (2 MPH)
Selector lever	Suitable position except "P" or "N" position

- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-179.

With GST


Follow the procedure "With CONSULT-II".

No Tools

- 1) Start engine and maintain the following conditions for at least 5 consecutive seconds.

Vehicle speed	More than 4 km/h (2 MPH)
Selector lever	Suitable position except "P" or "N" position

- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Turn ignition switch ON and perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-179.

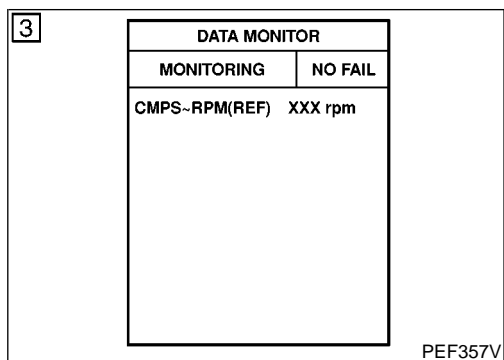

PROCEDURE FOR MALFUNCTION B

NEEC0940S02

With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and let it idle for at least 10 seconds.
If idle speed is over 1,100 rpm, maintain the following conditions for at least 10 seconds to keep engine speed below 1,100 rpm.

Selector lever	Suitable position except "N" (Higher gear position such as 3rd or 4th is better to keep low engine rpm.)
Accelerator pedal	Released
Vehicle speed	As slow as possible

- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-179.

With GST

Follow the procedure "With CONSULT-II".

No Tools

- 1) Start engine and let it idle for at least 10 seconds.
If idle speed is over 1,100 rpm, maintain the following conditions for at least 10 seconds to keep engine speed below 1,100 rpm.

Selector lever	Suitable position except "N" (Higher gear position such as 3rd or 4th is better to keep low engine rpm.)
Accelerator pedal	Released
Vehicle speed	As slow as possible


- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Turn ignition switch ON and perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-179.

NEEC0940S03

6

DATA MONITOR	
MONITORING	NO FAIL
THRTL POS SEN	XXX V
ABSOL TH~P/S	XXX %

PEF024P

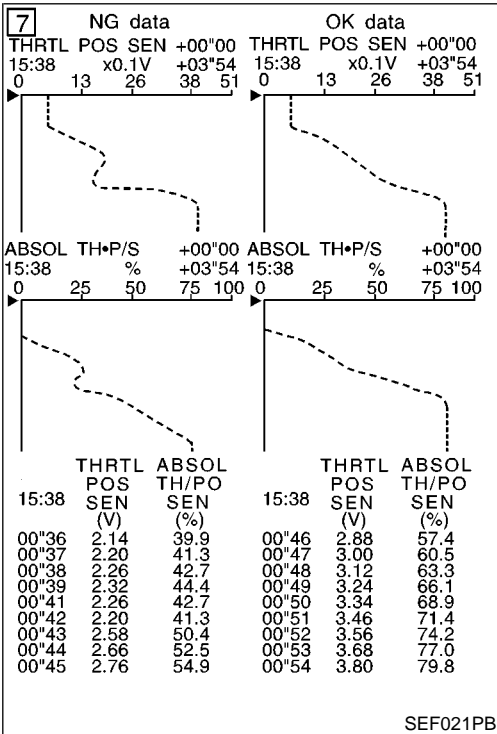

9

DATA MONITOR	
MONITORING	NO FAIL
CMPS~RPM(REF)	XXX rpm
MAS AIR/FL SE	XXX V
COOLAN TEMP/S	XXX °C

PEF235U

PROCEDURE FOR MALFUNCTION C

CAUTION:

Always drive vehicle at a safe speed.

Ⓜ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Turn ignition switch ON.
- 4) Select "MANU TRIG" in "DATA MONITOR" mode with CONSULT-II.
- 5) Select "THRTL POS SEN" and "ABSOL TH~P/S" in "DATA MONITOR" mode with CONSULT-II.
- 6) Press RECORD on CONSULT-II SCREEN at the same time accelerator pedal is depressed.
- 7) Print out the recorded graph and check the following:
 - The voltage rise is linear in response to accelerator pedal depression.
 - The voltage when accelerator pedal is fully depressed is approximately 4V.
 If NG, go to "Diagnostic Procedure", EC-179.
 If OK, go to following step.
- 8) Select "AUTO TRIG" in "DATA MONITOR" mode with CONSULT-II.
- 9) Maintain the following conditions for at least 10 consecutive seconds.

CMPS-RPM (REF)	More than 2,000 rpm
MAS AIR/FL SE	More than 3V
COOLAN TEMP/S	More than 70°C (158°F)
Selector lever	Suitable position
Driving location	Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

- 10) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-179.

Ⓜ With GST





Follow the procedure "With CONSULT-II".

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Wiring Diagram

NEEC0941

EC-TPS-01

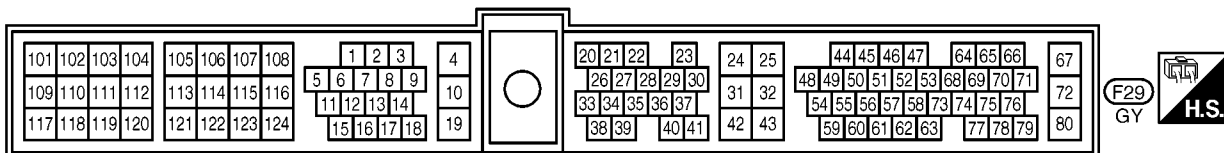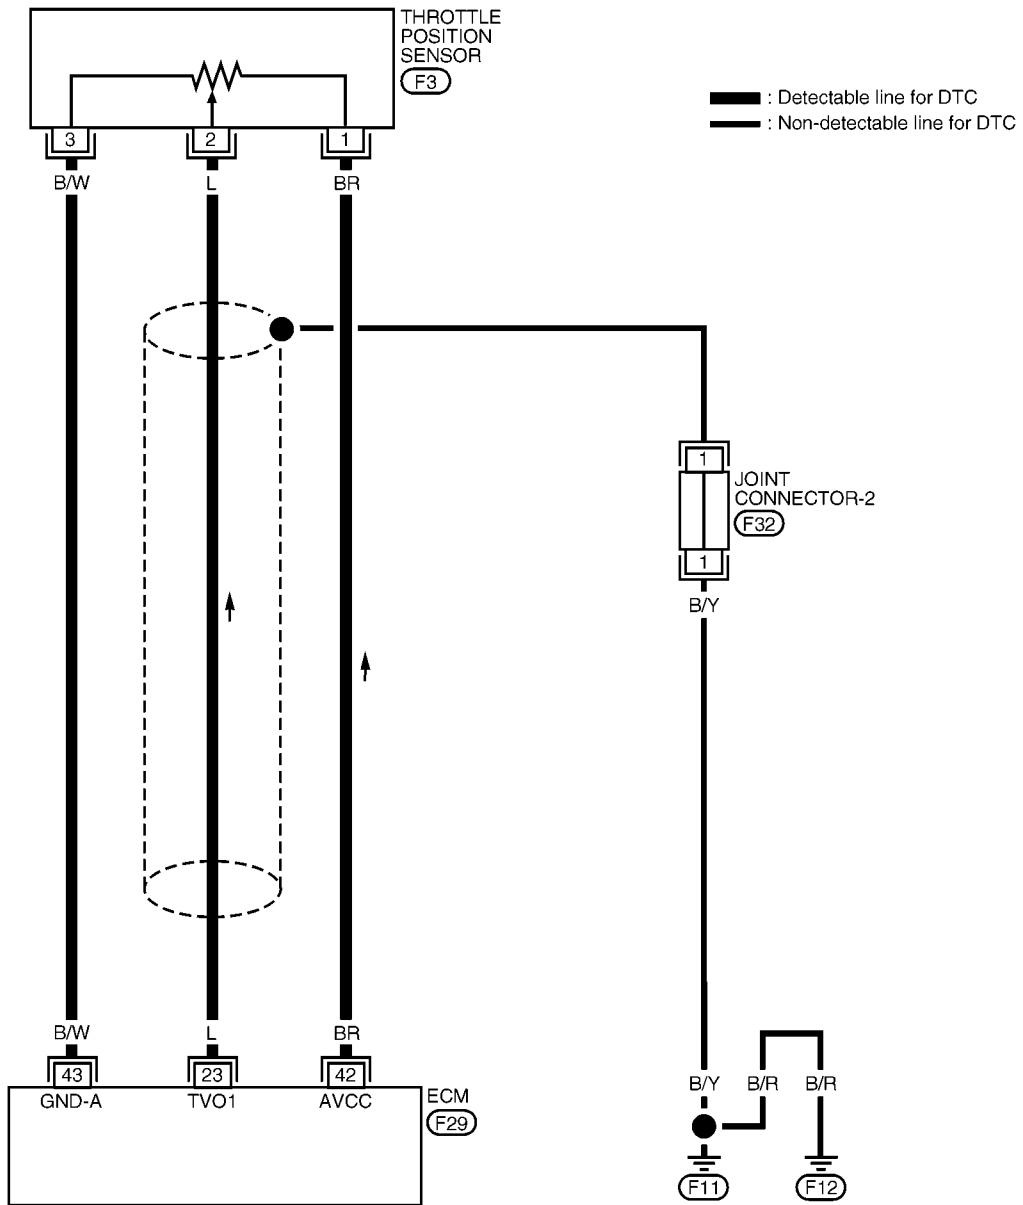

Diagnostic Procedure

NEEC0942

1	INSPECTION START									
Which malfunction A, B or C is duplicated?										
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">MALFUNCTION</th> <th style="width: 50%;">Type</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">A</td> <td style="text-align: center;">A</td> </tr> <tr> <td style="text-align: center;">B</td> <td style="text-align: center;">B</td> </tr> <tr> <td style="text-align: center;">C</td> <td style="text-align: center;">C</td> </tr> </tbody> </table>			MALFUNCTION	Type	A	A	B	B	C	C
MALFUNCTION	Type									
A	A									
B	B									
C	C									
MTBL0066										
Type A, B or C										
Type A or B	▶	GO TO 4.								
Type C	▶	GO TO 2.								

GI
MA
EM
LC
EC

2	ADJUST THROTTLE POSITION SENSOR											
1. Check the following items. Refer to "Basic Inspection", EC-96.												
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Items</th> <th style="width: 50%;">Specifications</th> </tr> </thead> <tbody> <tr> <td>Ignition timing</td> <td>20° ± 2° BTDC</td> </tr> <tr> <td>Base idle speed</td> <td>750 ± 50 rpm (in "P" or "N" position)</td> </tr> <tr> <td>Closed throttle position switch idle position adjustment</td> <td>Feeler gauge thickness and switch condition 0.1 mm (0.004 in): ON 0.3 mm (0.012 in): OFF</td> </tr> <tr> <td>Target idle speed</td> <td>800 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table>			Items	Specifications	Ignition timing	20° ± 2° BTDC	Base idle speed	750 ± 50 rpm (in "P" or "N" position)	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.1 mm (0.004 in): ON 0.3 mm (0.012 in): OFF	Target idle speed	800 ± 50 rpm (in "P" or "N" position)
Items	Specifications											
Ignition timing	20° ± 2° BTDC											
Base idle speed	750 ± 50 rpm (in "P" or "N" position)											
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.1 mm (0.004 in): ON 0.3 mm (0.012 in): OFF											
Target idle speed	800 ± 50 rpm (in "P" or "N" position)											
MTBL0328												
OK or NG												
OK	▶	GO TO 3.										

FE
CL
MT
AT
TF

3	CHECK INTAKE SYSTEM	
Check the following for connection.		
<ul style="list-style-type: none"> ● Air duct ● Air cleaner ● Vacuum hoses ● Intake air passage between air duct to intake manifold collector 		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Reconnect the parts.


PD
AX
SU
BR
ST

RS
BT
HA
SC
EL

IDX

4 RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten engine ground screws.

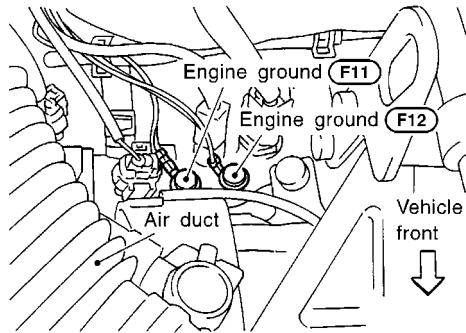


SEF325V

▶ GO TO 5.


5 CHECK POWER SUPPLY

1. Disconnect throttle position sensor harness connector.

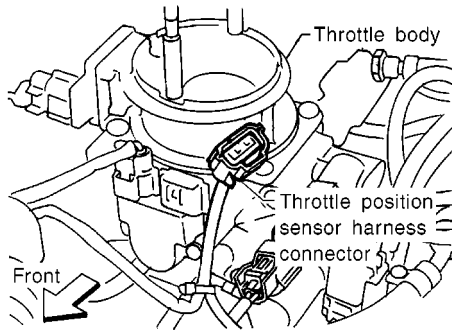

SEF265S

2. Turn ignition switch ON.
3. Check voltage between terminal 1 and ground with CONSULT-II or tester.

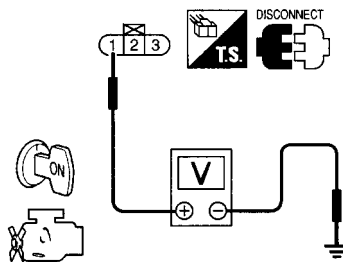

SEF564P

Voltage: Approximately 5V

OK or NG

OK ▶ GO TO 6.

NG ▶ Repair harness or connectors.

6	CHECK GROUND CIRCUIT	<p>1. Turn ignition switch OFF.</p> <p>2. Check harness continuity between throttle position sensor terminal 3 and engine ground. Refer to the wiring diagram.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SEF565P</p> <p>Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 8.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 7.</td> </tr> </table>	OK	▶	GO TO 8.	NG	▶	GO TO 7.	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p style="background-color: black; color: white; text-align: center;">EC</p> <p>FE</p> <p>CL</p> <p>MT</p>
OK	▶	GO TO 8.							
NG	▶	GO TO 7.							

7	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness for open or short between ECM and throttle position sensor <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;"></td> <td style="width: 5%; text-align: center;">▶</td> <td>Repair open circuit or short to ground or short to power in harness or connectors.</td> </tr> </table>		▶	Repair open circuit or short to ground or short to power in harness or connectors.	<p>AT</p> <p>TF</p>
	▶	Repair open circuit or short to ground or short to power in harness or connectors.				

8	CHECK INPUT SIGNAL CIRCUIT	<p>1. Disconnect ECM harness connector.</p> <p>2. Check harness continuity between ECM terminal 23 and terminal 2.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SEF211W</p> <p>Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK (With CONSULT-II)</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 9.</td> </tr> <tr> <td>OK (Without CONSULT-II)</td> <td style="text-align: center;">▶</td> <td>GO TO 10.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Repair open circuit or short to ground or short to power in harness or connectors.</td> </tr> </table>	OK (With CONSULT-II)	▶	GO TO 9.	OK (Without CONSULT-II)	▶	GO TO 10.	NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.	<p>PD</p> <p>AX</p> <p>SU</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>
OK (With CONSULT-II)	▶	GO TO 9.										
OK (Without CONSULT-II)	▶	GO TO 10.										
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.										

9	CHECK THROTTLE POSITION SENSOR											
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine and turn ignition switch ON. 3. Select "DATA MONITOR" mode with CONSULT-II. 4. Check voltage of "THRTL POS SEN" under the following conditions. 												
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th style="text-align: center;">MONITORING</th> <th style="text-align: center;">NO FAIL</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">CMPS-RPM(REF)</td> <td style="text-align: center;">XXX rpm</td> </tr> <tr> <td style="text-align: center;">COOLAN TEMP/S</td> <td style="text-align: center;">XXX °C</td> </tr> <tr> <td style="text-align: center;">THRTL POS SEN</td> <td style="text-align: center;">XXX V</td> </tr> </tbody> </table>			DATA MONITOR		MONITORING	NO FAIL	CMPS-RPM(REF)	XXX rpm	COOLAN TEMP/S	XXX °C	THRTL POS SEN	XXX V
DATA MONITOR												
MONITORING	NO FAIL											
CMPS-RPM(REF)	XXX rpm											
COOLAN TEMP/S	XXX °C											
THRTL POS SEN	XXX V											
<p>NOTE: Voltage measurement must be made with throttle position sensor installed in vehicle.</p>												
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Throttle valve conditions</th> <th style="text-align: center;">Voltage V</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Completely closed</td> <td style="text-align: center;">0.15 - 0.85 (a)</td> </tr> <tr> <td style="text-align: center;">Partially open</td> <td style="text-align: center;">Between (a) and (b)</td> </tr> <tr> <td style="text-align: center;">Completely open</td> <td style="text-align: center;">3.5 - 4.7 (b)</td> </tr> </tbody> </table>			Throttle valve conditions	Voltage V	Completely closed	0.15 - 0.85 (a)	Partially open	Between (a) and (b)	Completely open	3.5 - 4.7 (b)		
Throttle valve conditions	Voltage V											
Completely closed	0.15 - 0.85 (a)											
Partially open	Between (a) and (b)											
Completely open	3.5 - 4.7 (b)											
<p>If NG, adjust closed throttle position switch. Refer to "Basic Inspection", EC-96.</p>												
OK or NG												
OK (Type B in step 1)	▶	GO TO 11.										
OK (Type A or C in step 1)	▶	GO TO 14.										
NG	▶	Replace throttle position sensor. To adjust it, perform "Basic Inspection", EC-96.										

PEF765W


MTBL0329

10	CHECK THROTTLE POSITION SENSOR								
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine and turn ignition switch ON. 3. Check voltage between ECM terminal 23 (Throttle position sensor signal) and ground under the following conditions. 									
<p>NOTE: Voltage measurement must be made with throttle position sensor installed in vehicle.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Throttle valve conditions</th> <th style="text-align: center;">Voltage V</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Completely closed</td> <td style="text-align: center;">0.15 - 0.85 (a)</td> </tr> <tr> <td style="text-align: center;">Partially open</td> <td style="text-align: center;">Between (a) and (b)</td> </tr> <tr> <td style="text-align: center;">Completely open</td> <td style="text-align: center;">3.5 - 4.7 (b)</td> </tr> </tbody> </table>		Throttle valve conditions	Voltage V	Completely closed	0.15 - 0.85 (a)	Partially open	Between (a) and (b)	Completely open	3.5 - 4.7 (b)
Throttle valve conditions	Voltage V								
Completely closed	0.15 - 0.85 (a)								
Partially open	Between (a) and (b)								
Completely open	3.5 - 4.7 (b)								
SEF767W									
<p>If NG, adjust closed throttle position switch. Refer to "Basic Inspection", EC-96.</p> <p style="text-align: center;">OK or NG</p>									
OK (Type B in step 1)	▶	GO TO 11.							
OK (Type A or C in step 1)	▶	GO TO 14.							
NG	▶	Replace throttle position sensor. To adjust it, perform "Basic Inspection", EC-96.							

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

11 CHECK MASS AIR FLOW SENSOR

1. Turn ignition switch ON.
2. Start engine and warm it up to normal operating temperature.
3. Check voltage between ECM terminal 54 (Mass air flow sensor signal) and ground.

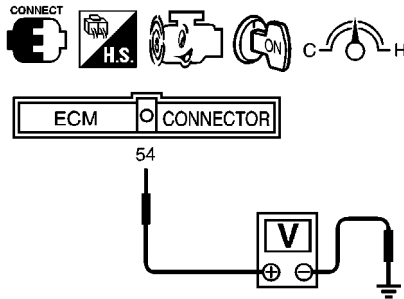


SEF326V

Conditions	Voltage V
Ignition switch "ON" (Engine stopped.)	Less than 1.0
Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.8
2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.9 - 2.3
Idle to about 4,000 rpm*	1.3 - 1.7 to Approx. 3.0

*: Check for linear voltage rise in response to increases to about 4,000 rpm in engine speed.

MTBL0326

4. If the voltage is out of specification, disconnect mass air flow sensor harness connector and connect it again. Repeat above check.
5. If NG, remove mass air flow sensor from air duct. Check hot wire for damage or dust.

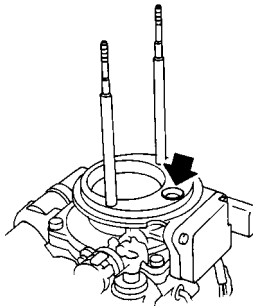

SEF893J


OK or NG

OK	▶	GO TO 12.
NG	▶	Replace mass air flow sensor.

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

12 CHECK CAMSHAFT POSITION SENSOR

1. Start engine and warm it up to normal operating temperature.
2. Check voltage between ECM terminals 49 and engine ground, ECM terminal 44 or 48 and ground.

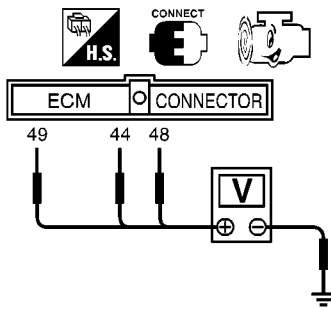

Terminal 44 or 48 and engine ground

Condition	Idle	2,000 rpm
Voltage	0.2 - 0.5V	0 - 0.5V
Pulse signal		

Terminal 49 and engine ground

Condition	Idle	2,000 rpm
Voltage	Approximately 2.6V	Approximately 2.5 - 2.6V
Pulse signal		

SEF893W


OK or NG

OK ► GO TO 13.

NG ► Replace distributor assembly with camshaft position sensor.

13 CHECK FUEL INJECTOR

1. Disconnect injector harness connector.
2. Check resistance between terminals as shown in the figure.

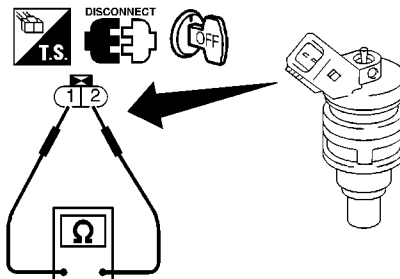
Resistance: 10 - 14Ω [at 25°C (77°F)]

SEF273W

OK or NG

OK ► GO TO 14.

NG ► Replace fuel injector.

DTC P0120 THROTTLE POSITION SENSOR

KA24DE

Diagnostic Procedure (Cont'd)



14	CHECK SHIELD CIRCUIT
1. Turn ignition switch OFF. 2. Remove joint connector-2. 3. Check the following. <ul style="list-style-type: none">● Continuity between joint connector-2 terminal 1 and ground● Joint connector-2 (Refer to "HARNES LAYOUT", <i>EL-239</i>) Continuity should exist.	
4. Also check harness for short to ground and short to power. 5. Then reconnect joint connector.	
OK or NG	
OK	▶ GO TO 15.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

15	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
	▶ INSPECTION END

DTC P0125 ENGINE COOLANT TEMPERATURE (ECT) SENSOR

KA24DE

Component Description

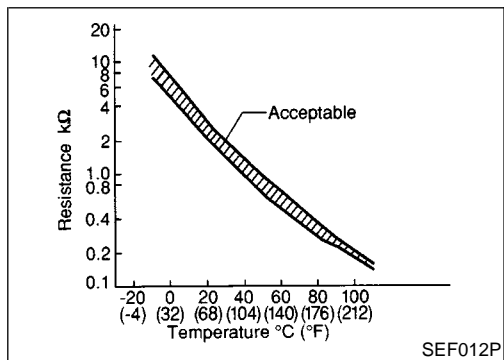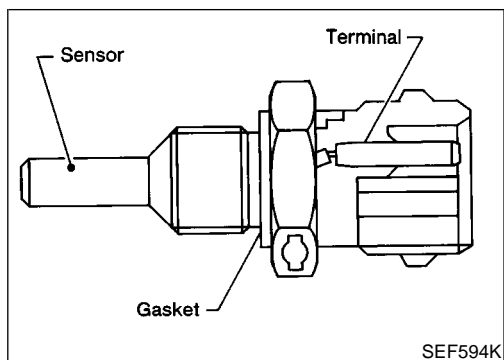

Component Description

NEEC0943

NOTE:

If DTC P0125 (0908) is displayed with P0115 (0103), first perform trouble diagnosis for DTC P0115, EC-168.

The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

<Reference data>


Engine coolant temperature °C (°F)	Voltage* V	Resistance kΩ
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

*: These data are reference values and are measured between ECM terminal 59 (Engine coolant temperature sensor) and ECM terminal 32 (ECM ground).

On Board Diagnosis Logic

NEEC0944

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0125 0908	<ul style="list-style-type: none"> Voltage sent to ECM from the sensor is not practical, even when some time has passed after starting the engine. Engine coolant temperature is insufficient for closed loop fuel control. 	<ul style="list-style-type: none"> Harness or connectors (High resistance in the circuit) Engine coolant temperature sensor Thermostat

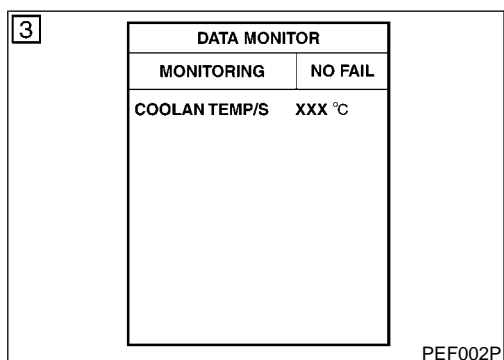

DTC Confirmation Procedure

NEEC0945

CAUTION:

Be careful not to overheat engine.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

With CONSULT-II

- Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT-II.
- Start engine and run it for 65 minutes at idle speed.
If "COOLAN TEMP/S" increases to more than 10°C (50°F) within 65 minutes, stop engine because the test result will be OK.
- If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-189.

With GST

Follow the procedure "With CONSULT-II".

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0125 ENGINE COOLANT TEMPERATURE (ECT) SENSOR



KA24DE

Wiring Diagram

Wiring Diagram

NEEC0946

EC-ECTS-01

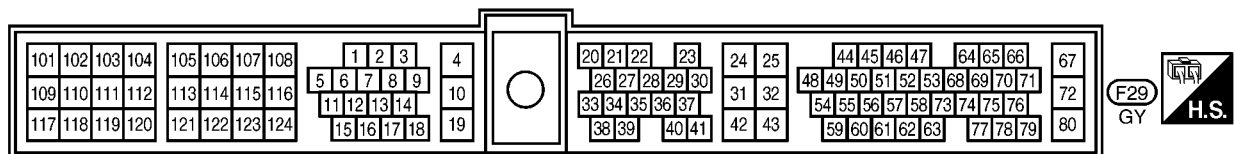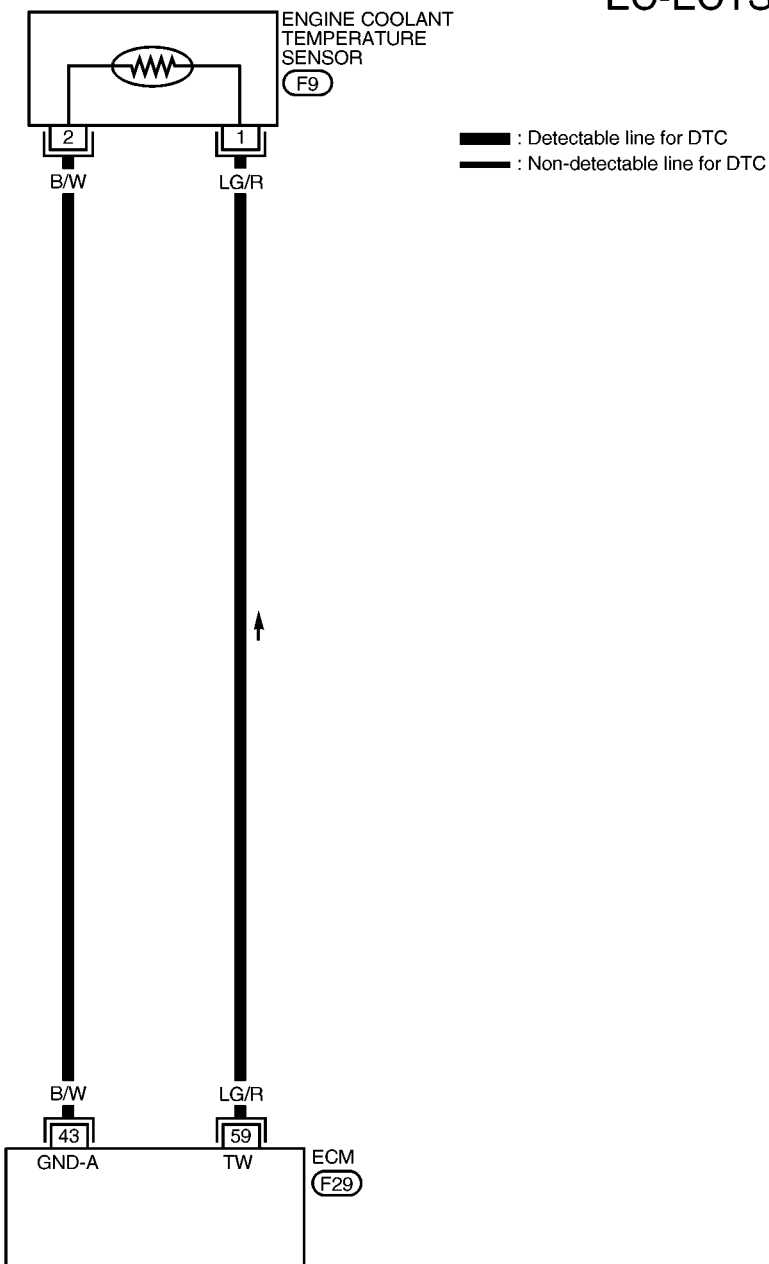

AEC984A



DTC P0125 ENGINE COOLANT TEMPERATURE (ECT) SENSOR

KA24DE

Diagnostic Procedure

Diagnostic Procedure

NEEC0947

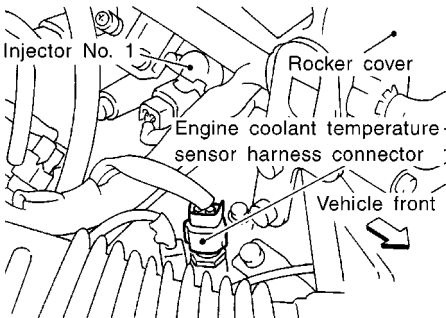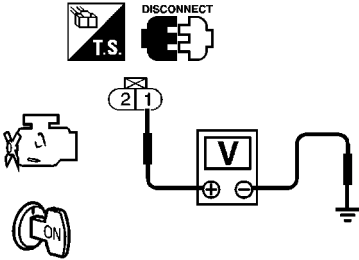1	CHECK POWER SUPPLY								
		<p>1. Turn ignition switch OFF.</p> <p>2. Disconnect engine coolant temperature sensor harness connector.</p>							
									
		<p>3. Turn ignition switch ON.</p> <p>4. Check voltage between coolant temperature sensor connector F9 terminal 1 and ground with CONSULT-II or tester.</p>	SEF330V						
			SEF206W						
		<p>Voltage: Approximately 5V</p> <p>OK or NG</p>							
		<table border="0" style="width: 100%;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td style="width: 75%;">GO TO 3.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 2.</td> </tr> </table>	OK	▶	GO TO 3.	NG	▶	GO TO 2.	
OK	▶	GO TO 3.							
NG	▶	GO TO 2.							

GI
MA
EM
LC
EC

FE
CL
MT
AT
TF

PD
AX
SU
BR

ST
RS
BT
HA

SC
EL

IDX

2	DETECT MALFUNCTIONING PART		
		Check the harness for open or short between ECM and engine coolant temperature sensor.	
		▶ Repair harness or connectors.	

3	CHECK GROUND CIRCUIT								
		<p>1. Turn ignition switch OFF.</p> <p>2. Check harness continuity between engine coolant temperature sensor connector F9 terminal 2 and engine ground. Refer to the wiring diagram.</p> <p style="color: blue;">Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p>							
		OK or NG							
		<table border="0" style="width: 100%;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td style="width: 75%;">GO TO 5.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 4.</td> </tr> </table>	OK	▶	GO TO 5.	NG	▶	GO TO 4.	
OK	▶	GO TO 5.							
NG	▶	GO TO 4.							

4	DETECT MALFUNCTIONING PART		
		Check the harness for open or short between ECM and engine coolant temperature sensor.	
		▶ Repair open circuit or short to ground or short to power in harness or connectors.	


DTC P0125 ENGINE COOLANT TEMPERATURE (ECT) SENSOR

KA24DE

Diagnostic Procedure (Cont'd)

5 CHECK ENGINE COOLANT TEMPERATURE SENSOR


Check resistance as shown in the figure.

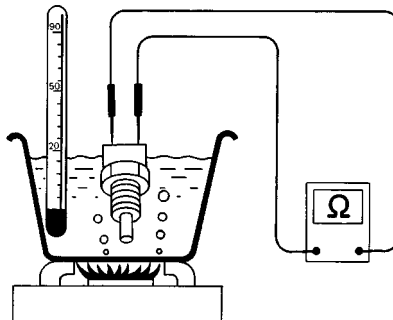

<Reference data>

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

SEF152P

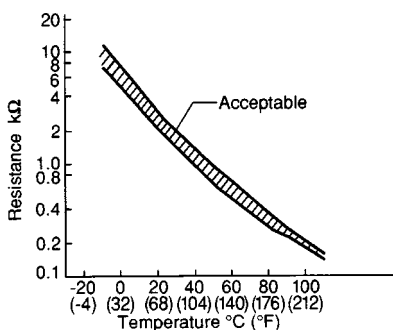

MTBL0285

SEF012P

OK or NG

OK	▶	GO TO 6.
NG	▶	Replace engine coolant temperature sensor.

6 CHECK THERMOSTAT OPERATION

When the engine is cooled [lower than 76.5°C (170°F)], condition grasp lower radiator hose and confirm the engine coolant does not flow.

OK or NG

OK	▶	GO TO 7.
NG	▶	Repair or replace thermostat. Refer to "Thermostat", "ENGINE COOLING SYSTEM", LC-13 .

7 CHECK INTERMITTENT INCIDENT


Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.

▶ **INSPECTION END**

DTC P0130 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (CIRCUIT)

KA24DE


Component Description

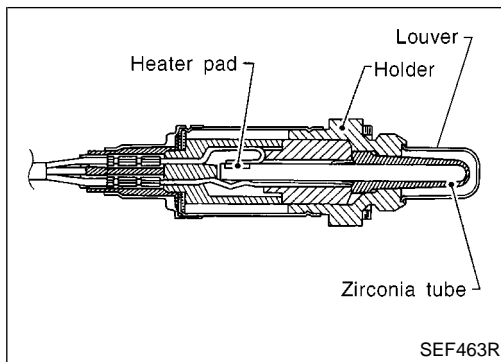

Component Description

The front heated oxygen sensor is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

NEEC0948

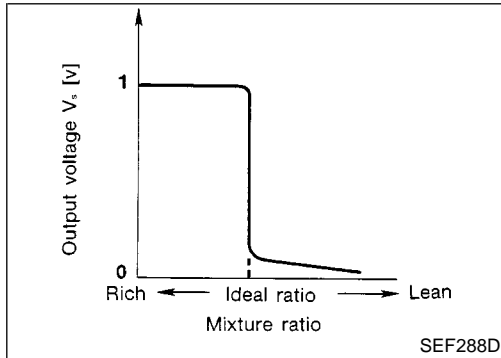

CONSULT-II Reference Value in Data Monitor Mode

NEEC0949

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
FR O2 SENSOR			0 - 0.3V ↔ Approx. 0.6 - 1.0V
FR O2 MNTR	<ul style="list-style-type: none"> Engine: After warming up 	Maintaining engine speed at 2,000 rpm	LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NEEC0950


Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
50	B	Front heated oxygen sensor	<p>[Engine is running]</p> <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 2,000 rpm 	<p>0 - Approximately 1.0V</p> <p>SEF008W</p>

DTC P0130 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (CIRCUIT)

KA24DE

On Board Diagnosis Logic

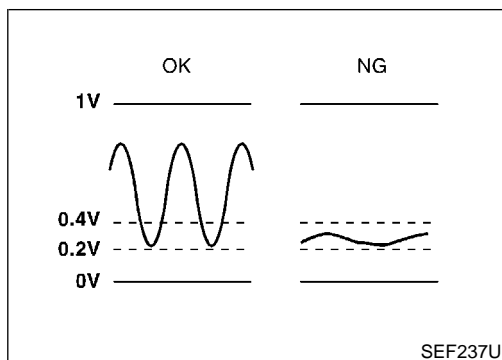

On Board Diagnosis Logic

NEEC0951

Under the condition in which the front heated oxygen sensor signal is not input, the ECM circuits will read a continuous approximately 0.3V. Therefore, for this diagnosis, the time that output voltage is within 200 to 400 mV range is monitored, and the diagnosis checks that this time is not inordinately long.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0130 0303	<ul style="list-style-type: none"> ● The voltage from the sensor is constantly approx. 0.3V. 	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Front heated oxygen sensor

DTC P0130 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (CIRCUIT)

KA24DE

DTC Confirmation Procedure

=NEEC0952

5	FR O2 SENSOR P0130	
	OUT OF CONDITION	
	MONITOR	
	CMPS~RPM(REF)	XXX rpm
	THRTL POS SEN	XXX V
	B/FUEL SCHDL	XXX msec

PEF138V

5	FR O2 SENSOR P0130	
	TESTING	
	MONITOR	
	CMPS~RPM(REF)	XXX rpm
	THRTL POS SEN	XXX V
	B/FUEL SCHDL	XXX msec

PEF139V

5	FR O2 SENSOR P0130	
	COMPLETED	

PEF210V

DTC Confirmation Procedure

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

Ⓜ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "FR O2 SENSOR P0130" of "FRONT O2 SENSOR" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 3) Touch "START".
- 4) Let it idle for at least 3 minutes.

NOTE:

Never raise engine speed above 3,000 rpm after this step. If the engine speed limit is exceeded, return to step 4.

- 5) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 10 to 60 seconds.)

CMPS-RPM (REF)	1,400 - 3,200 rpm
Vehicle speed	70 - 100 km/h (43 - 62 MPH)
B/FUEL SCHDL	1.0 - 5.2 msec
Selector lever	Suitable position

If "TESTING" is not displayed after 5 minutes, retry from step 2.

- 6) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-196.


During this test, P1148 may be displayed on CONSULT-II screen.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0130 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (CIRCUIT)

KA24DE

Overall Function Check

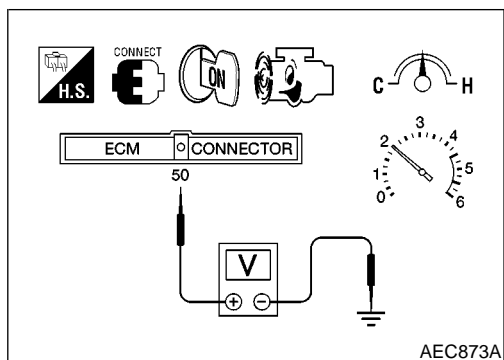

Overall Function Check

Use this procedure to check the overall function of the front heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed. =NEEC0953

⊗ Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 50 (Front heated oxygen sensor signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The voltage does not remain in the range of 0.2 - 0.4V.
- 4) If NG, go to "Diagnostic Procedure", EC-196.






DTC P0130 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (CIRCUIT)

KA24DE
Wiring Diagram

Wiring Diagram

NEEC0954

EC-FRO2-01

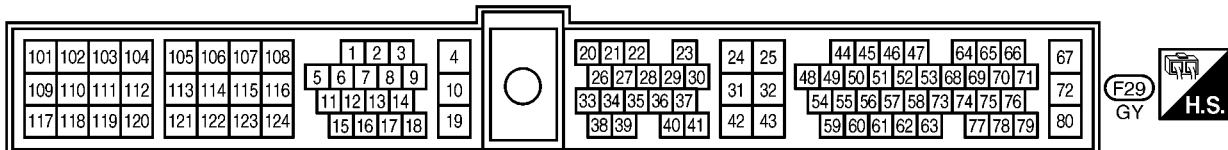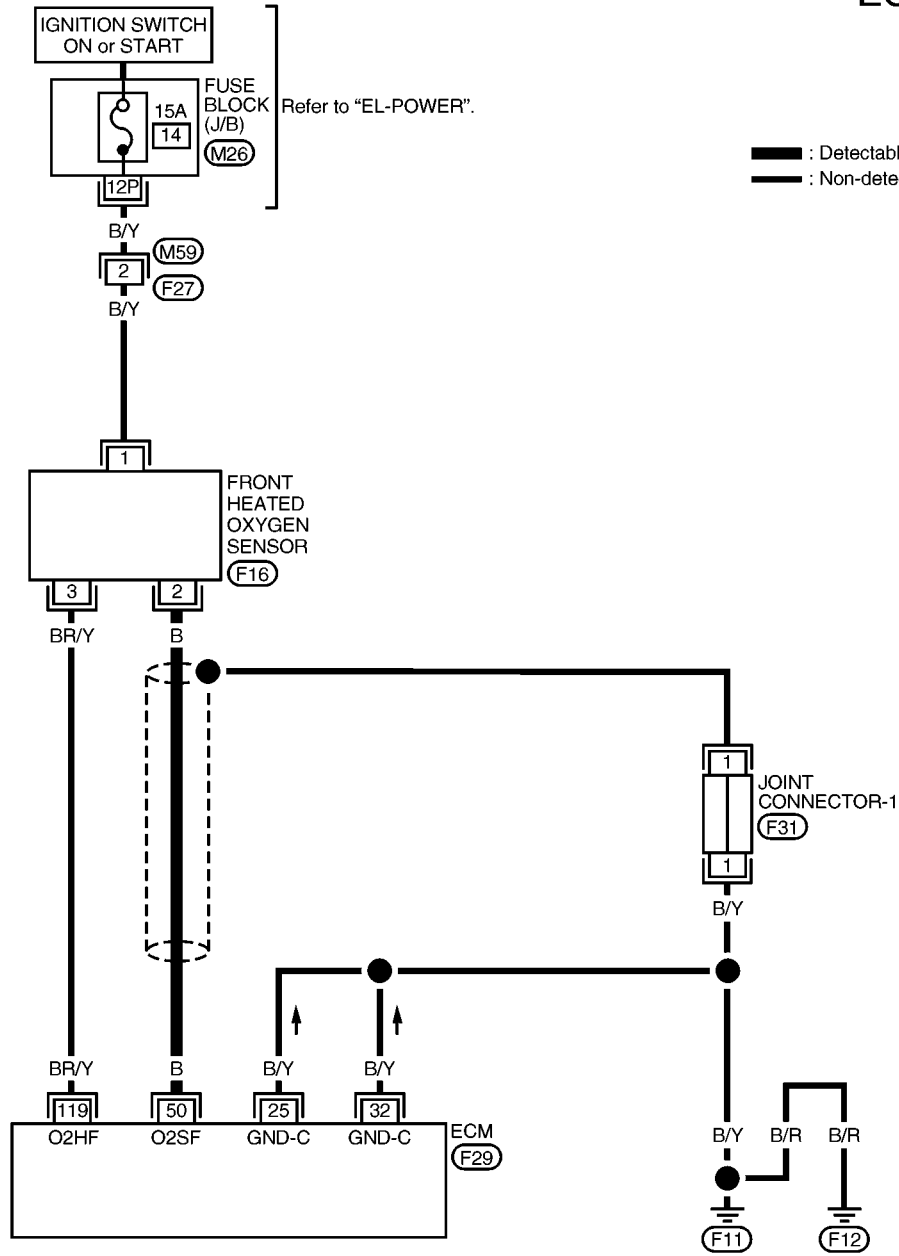

AEC986A

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX



DTC P0130 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (CIRCUIT)


KA24DE

Diagnostic Procedure

Diagnostic Procedure

NEEC0955

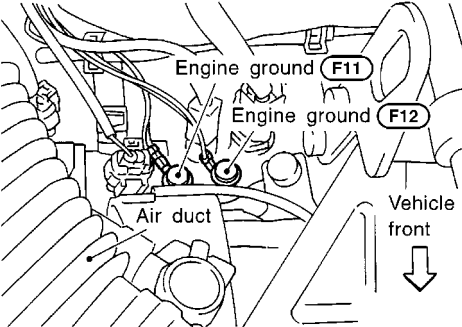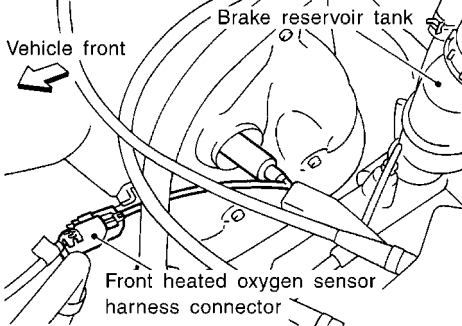1	INSPECTION START		
<ol style="list-style-type: none"> Turn ignition switch OFF. Loosen and retighten engine ground screws. 			
			
<ol style="list-style-type: none"> Disconnect front heated oxygen sensor harness connector. 			
			
		SEF325V	
		SEF331V	
▶		GO TO 2.	

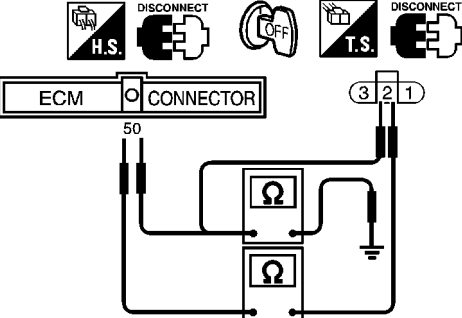2	CHECK INPUT SIGNAL CIRCUIT		
<ol style="list-style-type: none"> Disconnect ECM harness connector. Check harness continuity between ECM harness connector F29 terminal 50 and terminal 2. 			
			
SEF141V			
<p>Continuity should exist.</p> <ol style="list-style-type: none"> Check harness continuity between ECM harness connector F29 terminal 50 (or terminal 2) and ground. <p>Continuity should not exist.</p> <ol style="list-style-type: none"> Also check harness for short to power. 			
OK or NG			
OK (With CONSULT-II) ▶		GO TO 3.	
OK (Without CONSULT-II) ▶		GO TO 4.	
NG ▶		Repair open circuit or short to ground or short to power in harness or connectors.	

DTC P0130 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (CIRCUIT)

KA24DE

Diagnostic Procedure (Cont'd)

3 CHECK FRONT HEATED OXYGEN SENSOR

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "MANU TRIG" in "DATA MONITOR" mode, and the trigger point is adjusted to 100%.
3. Select "FR O2 SENSOR" AND "FR O2 MNTR" in Item Selection.
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch "START" on CONSULT-II screen.

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
MAS AIR/FL SE	XXX V
COOLANT TEMP/S	XXX °C
FR O2 SENSOR	XXX V
FR O2 MNTR	LAEN
INJ PULSE	XXX msec

PEF084P

6. Check the following.

- "FR O2 MNTR" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below:

cycle | 1 | 2 | 3 | 4 | 5 |
FR O2 MNTR R-L-R-L-R-L-R-L-R-L-R


SEF947V

R = "FR O2 MNTR", "RICH"

L = "FR O2 MNTR", "LEAN"

- "FR O2 SENSOR" voltage goes above 0.6V at least once.
- "FR O2 SENSOR" voltage goes below 0.3V at least once.
- "FR O2 SENSOR" voltage never exceeds 1.0V.

SPREADSHEET		
REPLAY MODE	REPLAY MODE	
NUMERICAL	SHOW TRIGGER	
	CMPS-RPM rpm	FR O2 SEN V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

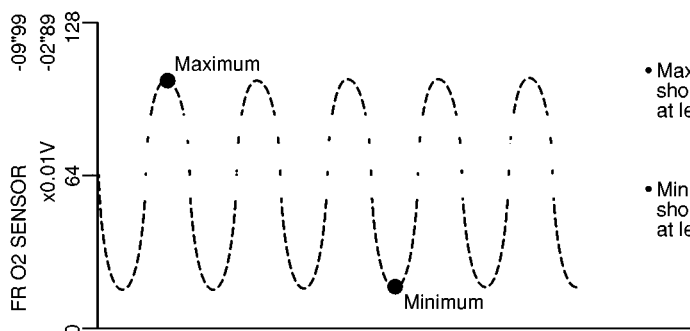

• Maximum voltage should be over 0.6V at least one time.

• Minimum voltage should be below 0.30V at least one time.

PEF736W

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK ▶ GO TO 5.

NG ▶ Replace front heated oxygen sensor.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0130 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (CIRCUIT)

KA24DE

Diagnostic Procedure (Cont'd)

4	CHECK FRONT HEATED OXYGEN SENSOR							
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Set voltmeter probes between ECM terminal 50 (Front heated oxygen sensor signal) and engine ground. <div style="text-align: center; margin: 10px 0;"> </div> <p style="text-align: right; margin-right: 20px;">AEC873A</p> <ol style="list-style-type: none"> 3. Check the following with engine speed held at 2,000 rpm constant under no load. <ul style="list-style-type: none"> ● Malfunction indicator lamp goes on more than five times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR). ● The maximum voltage is over 0.6V at least one time. ● The minimum voltage is below 0.3V at least one time. ● The voltage never exceeds 1.0V. <p style="margin-left: 20px;">CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center; margin: 10px 0;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%; padding: 5px;">OK</td> <td style="width: 10%; text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">GO TO 5.</td> </tr> <tr> <td style="padding: 5px;">NG</td> <td style="text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">Replace front heated oxygen sensor.</td> </tr> </table>			OK	▶	GO TO 5.	NG	▶	Replace front heated oxygen sensor.
OK	▶	GO TO 5.						
NG	▶	Replace front heated oxygen sensor.						


5	CHECK SHIELD CIRCUIT							
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Remove joint connector-1. 3. Check the following. <ul style="list-style-type: none"> ● Continuity between joint connector-1 terminal 1 and ground ● Joint connector-1 (Refer to "HARNES LAYOUT", EL-239.) <p style="margin-left: 20px; color: blue;">Continuity should exist.</p> 4. Also check harness for short to ground and short to power. 5. Then reconnect joint connector. <p style="text-align: center; margin: 10px 0;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%; padding: 5px;">OK</td> <td style="width: 10%; text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">GO TO 6.</td> </tr> <tr> <td style="padding: 5px;">NG</td> <td style="text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">Repair open circuit, short to ground or short to power in harness or connectors.</td> </tr> </table>			OK	▶	GO TO 6.	NG	▶	Repair open circuit, short to ground or short to power in harness or connectors.
OK	▶	GO TO 6.						
NG	▶	Repair open circuit, short to ground or short to power in harness or connectors.						

6	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.		
▶		INSPECTION END

DTC P0131 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (LEAN SHIFT MONITORING)

KA24DE


Component Description

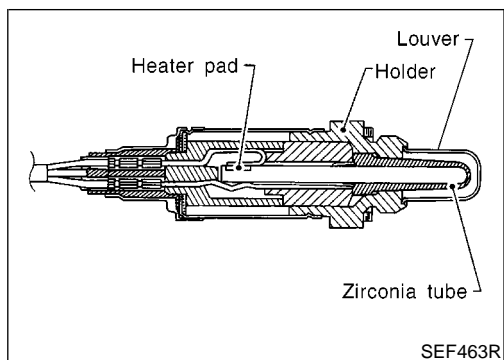

Component Description

The front heated oxygen sensor is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

NEEC0956

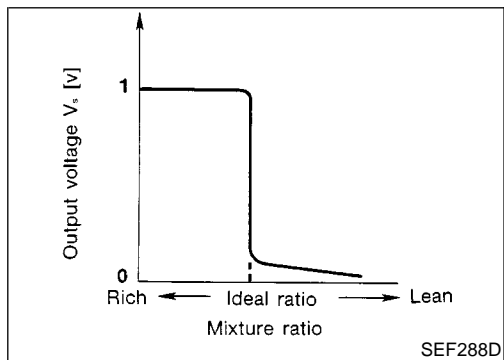

CONSULT-II Reference Value in Data Monitor Mode

NEEC0957

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
FR O2 SENSOR			0 - 0.3V ↔ Approx. 0.6 - 1.0V
FR O2 MNTR	<ul style="list-style-type: none"> Engine: After warming up 	Maintaining engine speed at 2,000 rpm	LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NEEC0958


Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
50	B	Front heated oxygen sensor	<p>[Engine is running]</p> <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 2,000 rpm 	<p>0 - Approximately 1.0V</p> <p>SEF008W</p>

DTC P0131 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (LEAN SHIFT MONITORING)

KA24DE

On Board Diagnosis Logic

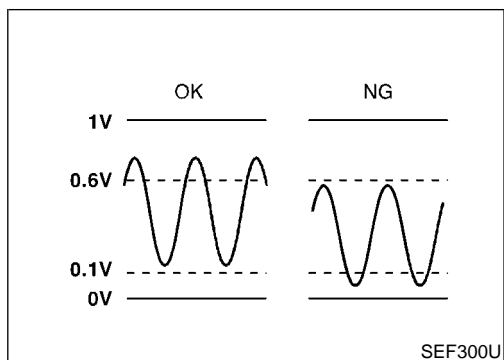

On Board Diagnosis Logic

NEEC0959

To judge the malfunction, the output from the front heated oxygen sensor is monitored to determine whether the “rich” output is sufficiently high and whether the “lean” output is sufficiently low. When both the outputs are shifting to the lean side, the malfunction will be detected.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0131 0411	<ul style="list-style-type: none"> The maximum and minimum voltages from the sensor are not reached to the specified voltages. 	<ul style="list-style-type: none"> Front heated oxygen sensor Front heated oxygen sensor heater Fuel pressure Injectors Intake air leaks

6	FR O2 SENSOR P0131	
	OUT OF CONDITION	
	MONITOR	
	CMPS~RPM(REF)	XXX rpm
	THRTL POS SEN	XXX V
	B/FUEL SCHDL	XXX msec

PEF143V

6	FR O2 SENSOR P0131	
	TESTING	
	MONITOR	
	CMPS~RPM(REF)	XXX rpm
	THRTL POS SEN	XXX V
	B/FUEL SCHDL	XXX msec

PEF144V

6	FR O2 SENSOR P0131	
	COMPLETED	

PEF211V

DTC Confirmation Procedure

NEEC0960

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Always perform at a temperature above -10°C (14°F).
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

With CONSULT-II

- Start engine and warm it up to normal operating temperature.
- Stop engine and wait at least 5 seconds.
- Turn ignition switch ON and select “FR O2 SENSOR P0131” of “FRONT O2 SENSOR” in “DTC WORK SUPPORT” mode with CONSULT-II.
- Touch “START”.
- Start engine and let it idle for at least 3.0 minutes.

NOTE:

Never raise engine speed above 3,000 rpm after this step. If the engine speed limit is exceeded, return to step 5.

- When the following conditions are met, “TESTING” will be displayed on the CONSULT-II screen. Maintain the conditions continuously until “TESTING” changes to “COMPLETED”. (It will take approximately 50 seconds or more.)

CMPS-RPM (REF)	1,700 - 3,000 rpm
Vehicle speed	80 - 100 km/h (50 - 62 MPH)
B/FUEL SCHDL	1.0 - 4.9 msec
Selector lever	Suitable position

DTC P0131 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (LEAN SHIFT MONITORING)

KA24DE

DTC Confirmation Procedure (Cont'd)

If "TESTING" is not displayed after 5 minutes, retry from step 2.


- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-201.

GI

MA

EM

LC

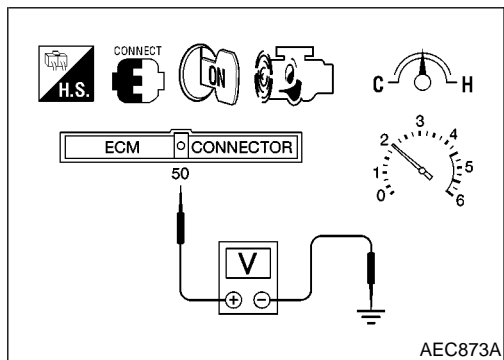

AEC873A

Overall Function Check

NEEC0961

Use this procedure to check the overall function of the front heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 50 (Front heated oxygen sensor signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The maximum voltage is over 0.6V at least one time.
 - The minimum voltage is over 0.1V at least one time.
- 4) If NG, go to "Diagnostic Procedure", EC-201.

EC

FE

CL

MT

AT

TF

PD

AX

Diagnostic Procedure

NEEC0962

1	RETIGHTEN FRONT HEATED OXYGEN SENSOR
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Loosen and retighten front heated oxygen sensor. 	
<p>Vehicle front</p> <p>Front heated oxygen sensor</p> <p>40 - 60 (4.1 - 6.1, 30 - 44)</p> <p>: N·m (kg-m, ft-lb)</p>	
<p>Tightening torque: 40 - 60 N·m (4.1 - 6.1 kg-m, 30 - 44 ft-lb)</p>	
▶	GO TO 2.

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0131 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (LEAN SHIFT MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

2 CLEAR THE SELF-LEARNING DATA.

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching "CLEAR".


ACTIVE TEST	
SELF-LEARN CONTROL	100 %
MONITOR	
CMPS-RPM	XXX rpm
COOLAN TEMP/S	XXX °C
FR O2 SENSOR	XXX V
A/F ALPHA	XXX %

SEF165X

4. Run engine for at least 10 minutes at idle speed.
Is the 1st trip DTC P0171 detected? Is it difficult to start engine?

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 3 seconds at idle speed.

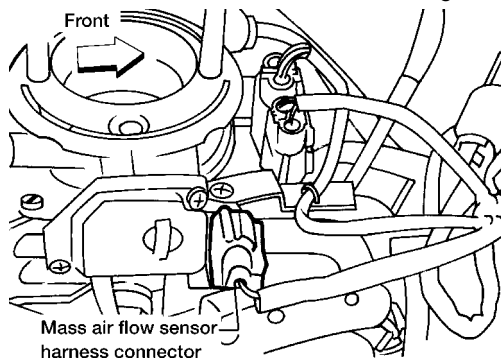

AEC131A

4. Stop engine and reconnect mass air flow sensor harness connector.
5. Make sure diagnostic trouble code No. 0102 is displayed in Diagnostic Test Mode II.
6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-69.
7. Make sure diagnostic trouble code No. 0505 is displayed in Diagnostic Test Mode II.
8. Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC 0115 detected? Is it difficult to start engine?


Yes or No

Yes	▶	Perform trouble diagnosis for DTC P0171. Refer to EC-279.
No	▶	GO TO 3.

DTC P0131 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (LEAN SHIFT MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

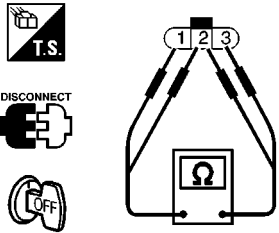3	CHECK FRONT HEATED OXYGEN SENSOR HEATER
<p>Check resistance between terminals 3 and 1.</p> <div style="text-align: center;">  </div>	
SEF220W	
<p>Resistance: 2.3 - 4.3 Ω at 25°C (77°F)</p> <p>Check continuity between terminals 2 and 1, 3 and 2.</p> <p>Continuity should not exist.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897 -18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center;">OK or NG</p>	
OK (With CONSULT-II) ▶	GO TO 4.
OK (Without CONSULT-II) ▶	GO TO 5.
NG ▶	Replace front heated oxygen sensor.

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0131 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (LEAN SHIFT MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

4 CHECK FRONT HEATED OXYGEN SENSOR

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "MANU TRIG" in "DATA MONITOR" mode, and the trigger point is adjusted to 100%.
3. Select "FR O2 SENSOR" AND "FR O2 MNTR" in Item Selection.
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch "START" on CONSULT-II screen.

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
MAS AIR/FL SE	XXX V
COOLANT TEMP/S	XXX °C
FR O2 SENSOR	XXX V
FR O2 MNTR	LAEN
INJ PULSE	XXX msec

PEF084P

6. Check the following.
 - "FR O2 MNTR" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below:

cycle | 1 | 2 | 3 | 4 | 5 |
FR O2 MNTR R-L-R-L-R-L-R-L-R-L-R


SEF947V

R = "FR O2 MNTR", "RICH"

L = "FR O2 MNTR", "LEAN"

- "FR O2 SENSOR" voltage goes above 0.6V at least once.
- "FR O2 SENSOR" voltage goes below 0.3V at least once.
- "FR O2 SENSOR" voltage never exceeds 1.0V.

SPREADSHEET		
REPLAY MODE	REPLAY MODE	
NUMERICAL	SHOW TRIGGER	
	CMPS-RPM rpm	FR O2 SEN V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

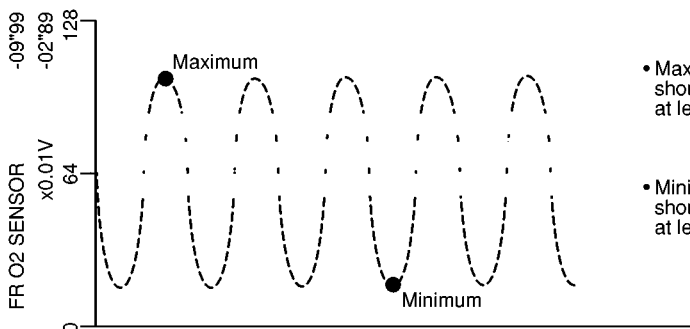

• Maximum voltage should be over 0.6V at least one time.

• Minimum voltage should be below 0.30V at least one time.

PEF736W

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK ▶ GO TO 6.

NG ▶ Replace front heated oxygen sensor.

DTC P0131 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (LEAN SHIFT MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)


5	CHECK FRONT HEATED OXYGEN SENSOR	<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Set voltmeter probes between ECM terminal 50 (Front heated oxygen sensor signal) and engine ground. <div style="text-align: center; margin: 10px 0;"> </div> <ol style="list-style-type: none"> 3. Check the following with engine speed held at 2,000 rpm constant under no load. <ul style="list-style-type: none"> ● Malfunction indicator lamp goes on more than five times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR). ● The maximum voltage is over 0.6V at least one time. ● The minimum voltage is below 0.3V at least one time. ● The voltage never exceeds 1.0V. <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center; margin-top: 10px;">OK or NG</p> 	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p style="background-color: black; color: white; padding: 5px;">EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>TF</p>	
	OK	▶	GO TO 6.	
	NG	▶	Replace front heated oxygen sensor.	

6	CHECK INTERMITTENT INCIDENT	<p>Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129. Refer to "Wiring Diagram", EC-195, for circuit.</p>	<p>AX</p> <p>SU</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p>	
		▶	INSPECTION END	

DTC P0132 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RICH SHIFT MONITORING)


KA24DE

Component Description

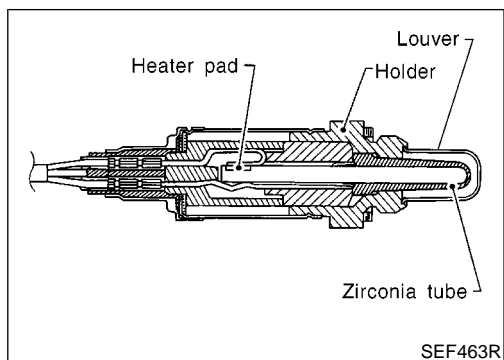

Component Description

NEEC0963
The front heated oxygen sensor is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

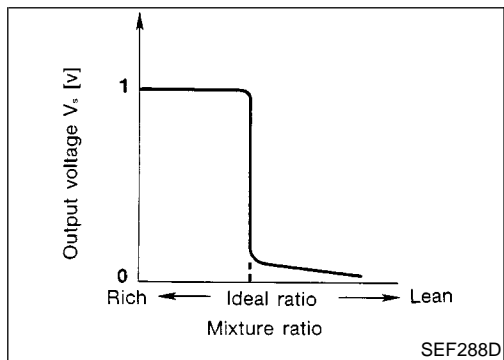

CONSULT-II Reference Value in Data Monitor Mode

NEEC0964

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
FR O2 SENSOR			0 - 0.3V ↔ Approx. 0.6 - 1.0V
FR O2 MNTR	<ul style="list-style-type: none"> Engine: After warming up 	Maintaining engine speed at 2,000 rpm	LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NEEC0965


Specification data are reference values and are measured between each terminal and 43 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
50	B	Front heated oxygen sensor	<p>[Engine is running]</p> <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 2,000 rpm 	<p>0 - Approximately 1.0V</p> <p>SEF008W</p>

DTC P0132 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RICH SHIFT MONITORING)

KA24DE

On Board Diagnosis Logic

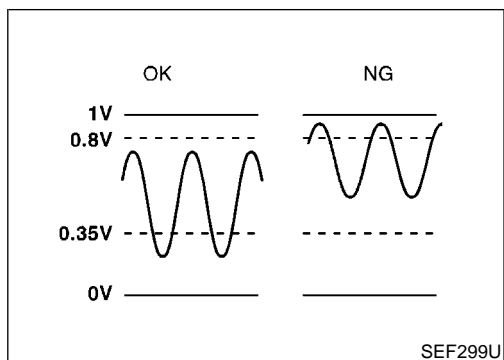

On Board Diagnosis Logic

To judge the malfunction, the output from the front heated oxygen sensor is monitored to determine whether the “rich” output is sufficiently high. The “lean” output is sufficiently low. When both the outputs are shifting to the rich side, the malfunction will be detected.

NEEC0966

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0132 0410	<ul style="list-style-type: none"> The maximum and minimum voltages from the sensor are beyond the specified voltages. 	<ul style="list-style-type: none"> Front heated oxygen sensor Front heated oxygen sensor heater Fuel pressure Injectors

6	FR O2 SENSOR P0132	
	OUT OF CONDITION	
	MONITOR	
	CMPS~RPM(REF)	XXX rpm
	THRTL POS SEN	XXX V
	B/FUEL SCHDL	XXX msec

PEF146V

6	FR O2 SENSOR P0132	
	TESTING	
	MONITOR	
	CMPS~RPM(REF)	XXX rpm
	THRTL POS SEN	XXX V
	B/FUEL SCHDL	XXX msec

PEF147V

6	FR O2 SENSOR P0132	
	COMPLETED	

PEF212V

DTC Confirmation Procedure

NEEC0967

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Always perform at a temperature above -10°C (14°F).
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

With CONSULT-II

- Start engine and warm it up to normal operating temperature.
- Stop engine and wait at least 5 seconds.
- Turn ignition switch ON and select “FR O2 SENSOR P0132” of “FRONT O2 SENSOR” in “DTC WORK SUPPORT” mode with CONSULT-II.
- Touch “START”.
- Start engine and let it idle for at least 3.0 minutes.

NOTE:

Never raise engine speed above 3,000 rpm after this step. If the engine speed limit is exceeded, return to step 5.

- When the following conditions are met, “TESTING” will be displayed on the CONSULT-II screen. Maintain the conditions continuously until “TESTING” changes to “COMPLETED”. (It will take approximately 50 seconds or more.)

CMPS-RPM (REF)	1,700 - 3,000 rpm
Vehicle speed	80 - 100 km/h (50 - 62 MPH)
B/FUEL SCHDL	1.0 - 4.9 msec
Selector lever	Suitable position


DTC P0132 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RICH SHIFT MONITORING)

KA24DE

DTC Confirmation Procedure (Cont'd)

If "TESTING" is not displayed after 5 minutes, retry from step 2.

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-208.

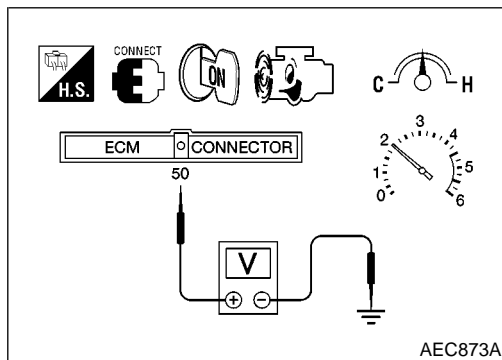

Overall Function Check

NEEC0968

Use this procedure to check the overall function of the front heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 50 (Front heated oxygen sensor signal) and ECM ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The maximum voltage is below 0.8V at least one time.
 - The minimum voltage is below 0.35V at least one time.
- 4) If NG, go to "Diagnostic Procedure", EC-208.

Diagnostic Procedure

NEEC0969

1	RETIGHTEN FRONT HEATED OXYGEN SENSOR
<ol style="list-style-type: none">1. Turn ignition switch OFF.2. Loosen and retighten front heated oxygen sensor.	
<p>The diagram shows the front heated oxygen sensor location on the vehicle. An arrow points to the "Vehicle front". The sensor is labeled "Front heated oxygen sensor" with a tightening torque of "40 - 60 (4.1 - 6.1, 30 - 44)". A legend indicates the units: "N·m (kg·m, ft·lb)".</p>	
<p>Tightening torque: 40 - 60 N·m (4.1 - 6.1 kg·m, 30 - 44 ft·lb)</p>	
▶	GO TO 2.

SEF332V

DTC P0132 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RICH SHIFT MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

2 CLEAR THE SELF-LEARNING DATA

Ⓜ With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching "CLEAR".


ACTIVE TEST	
SELF-LEARN CONTROL	100 %
MONITOR	
CMPS-RPM	XXX rpm
COOLAN TEMP/S	XXX °C
FR O2 SENSOR	XXX V
A/F ALPHA	XXX %

SEF165X

4. Run engine for at least 10 minutes at idle speed.
Is the 1st trip DTC P0172 detected? Is it difficult to start engine?

ⓧ Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 3 seconds at idle speed.

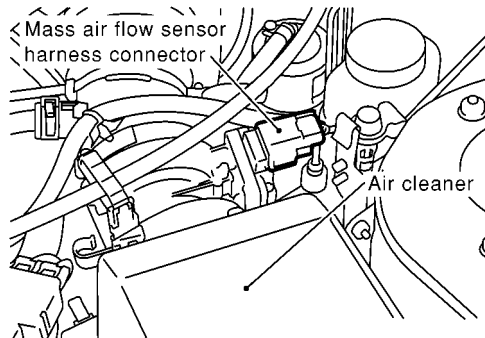

SEF293W

4. Stop engine and reconnect mass air flow sensor harness connector.
5. Make sure diagnostic trouble code No. 0102 is displayed in Diagnostic Test Mode II.
6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-69.
7. Make sure diagnostic trouble code No. 0505 is displayed in Diagnostic Test Mode II.
8. Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC 0114 detected? Is it difficult to start engine?

Yes or No

Yes	▶	Perform trouble diagnosis for DTC P0172. Refer to EC-287.
No	▶	GO TO 3.

3 CHECK HARNESS CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect front heated oxygen sensor harness connector.
3. Check harness connector for water.
Water should not exit.

OK or NG


OK	▶	GO TO 4.
NG	▶	Repair or replace harness connector.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0132 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RICH SHIFT MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

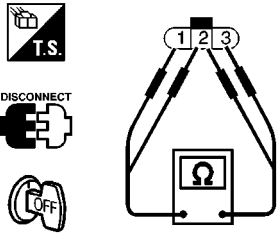4	CHECK FRONT HEATED OXYGEN SENSOR HEATER
<p>Check resistance between terminals 3 and 1.</p> <div style="text-align: center; margin: 20px 0;">  </div> <p style="text-align: right; margin-right: 20px;">SEF220W</p> <p>Resistance: 2.3 - 4.3 Ω at 25°C (77°F)</p> <p>Check continuity between terminals 2 and 1, 3 and 2.</p> <p>Continuity should not exist.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center; margin: 10px 0;">OK or NG</p>	
OK (With CONSULT-II) ▶	GO TO 5.
OK (Without CONSULT-II) ▶	GO TO 6.
NG ▶	Replace front heated oxygen sensor.

DTC P0132 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RICH SHIFT MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

5 CHECK FRONT HEATED OXYGEN SENSOR

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "MANU TRIG" in "DATA MONITOR" mode, and the trigger point is adjusted to 100%.
3. Select "FR O2 SENSOR" and "FR O2 MNTR" in item selection.
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch "RECORD" on CONSULT-II screen.

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
MAS AIR/FL SE	XXX V
COOLANT TEMP/S	XXX °C
FR O2 SENSOR	XXX V
FR O2 MNTR	LAEN
INJ PULSE	XXX msec

PEF084P

6. Check the following.
 - "FR O2 MNTR" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below:


cycle | 1 | 2 | 3 | 4 | 5 |
FR O2 MNTR R-L-R-L-R-L-R-L-R-L-R

SEF947V

R = "FR O2 MNTR", "RICH"
L = "FR O2 MNTR", "LEAN"

- "FR O2 SENSOR" voltage goes above 0.6V at least once.
- "FR O2 SENSOR" voltage goes below 0.3V at least once.
- "FR O2 SENSOR" voltage never exceeds 1.0V.

SPREADSHEET		
REPLAY MODE	REPLAY MODE	
NUMERICAL	SHOW TRIGGER	
	CMPS-RPM rpm	FR O2 SEN V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

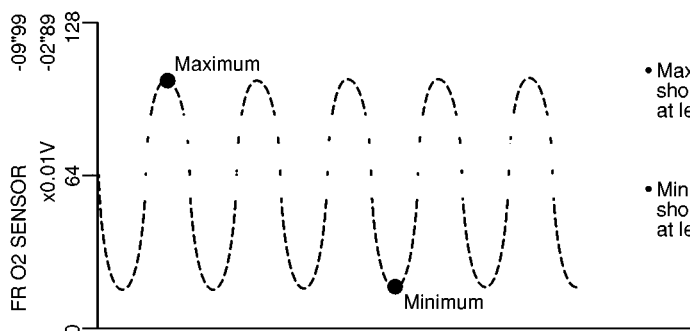

- Maximum voltage should be over 0.6V at least one time.
- Minimum voltage should be below 0.30V at least one time.

PEF736W

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK	▶	GO TO 7.
NG	▶	Replace front heated oxygen sensor.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0132 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RICH SHIFT MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)


6	CHECK FRONT HEATED OXYGEN SENSOR						
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Set voltmeter probes between ECM terminal 50 (Front heated oxygen sensor signal) and engine ground. <div style="text-align: center; margin: 10px 0;"> </div> <p style="text-align: right; margin-right: 20px;">AEC873A</p> <ol style="list-style-type: none"> 3. Check the following with engine speed held at 2,000 rpm constant under no load. <ul style="list-style-type: none"> ● Malfunction indicator lamp goes on more than five times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR). ● The maximum voltage is over 0.6V at least one time. ● The minimum voltage is below 0.3V at least one time. ● The voltage never exceeds 1.0V. <p style="margin-left: 20px;">CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center; margin-left: 20px;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%; padding: 5px;">OK</td> <td style="width: 10%; text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">GO TO 7.</td> </tr> <tr> <td style="padding: 5px;">NG</td> <td style="text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">Replace front heated oxygen sensor.</td> </tr> </table>		OK	▶	GO TO 7.	NG	▶	Replace front heated oxygen sensor.
OK	▶	GO TO 7.					
NG	▶	Replace front heated oxygen sensor.					

7	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129. Refer to "Wiring Diagram", EC-195, for circuit.		
	▶	INSPECTION END

DTC P0133 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RESPONSE MONITORING)

KA24DE


Component Description

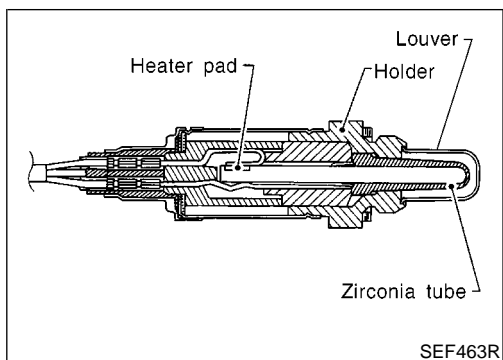

Component Description

The front heated oxygen sensor is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

NEEC0970

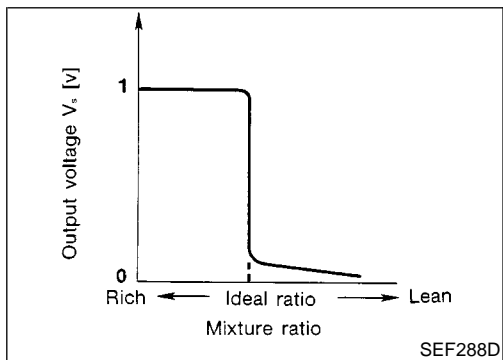

CONSULT-II Reference Value in Data Monitor Mode

NEEC0971

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
FR O2 SENSOR			0 - 0.3V ↔ Approx. 0.6 - 1.0V
FR O2 MNTR	<ul style="list-style-type: none"> Engine: After warming up 	Maintaining engine speed at 2,000 rpm	LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NEEC0972


Specification data are reference values and are measured between each terminal and 43 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
50	B	Front heated oxygen sensor	<p>[Engine is running]</p> <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 2,000 rpm 	<p>0 - Approximately 1.0V</p> <p>SEF008W</p>

DTC P0133 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RESPONSE MONITORING)

KA24DE

On Board Diagnosis Logic

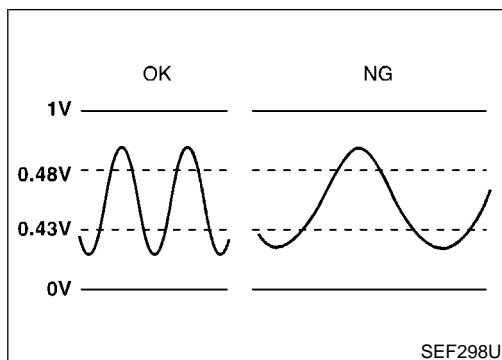

On Board Diagnosis Logic

To judge the malfunction of front heated oxygen sensor, this diagnosis measures response time of front heated oxygen sensor signal. The time is compensated by engine operating (speed and load), fuel feedback control constant, and front heated oxygen sensor temperature index. Judgment is based on whether the compensated time (front heated oxygen sensor cycling time index) is inordinately long or not.

NEEC0973

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0133 0409	<ul style="list-style-type: none"> The response of the voltage signal from the sensor takes more than the specified time. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Front heated oxygen sensor Front heated oxygen sensor heater Fuel pressure Injectors Intake air leaks Exhaust gas leaks PCV Mass air flow sensor

6	<table border="1"> <tr> <td colspan="2">FR O2 SENSOR P0133</td> </tr> <tr> <td colspan="2">OUT OF CONDITION</td> </tr> <tr> <td colspan="2">MONITOR</td> </tr> <tr> <td>CMPS~RPM(REF)</td> <td>XXX rpm</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> </table>	FR O2 SENSOR P0133		OUT OF CONDITION		MONITOR		CMPS~RPM(REF)	XXX rpm	THRTL POS SEN	XXX V	B/FUEL SCHDL	XXX msec	PEF148V
FR O2 SENSOR P0133														
OUT OF CONDITION														
MONITOR														
CMPS~RPM(REF)	XXX rpm													
THRTL POS SEN	XXX V													
B/FUEL SCHDL	XXX msec													

6	<table border="1"> <tr> <td colspan="2">FR O2 SENSOR P0133</td> </tr> <tr> <td colspan="2">TESTING</td> </tr> <tr> <td colspan="2">MONITOR</td> </tr> <tr> <td>CMPS~RPM(REF)</td> <td>XXX rpm</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> </table>	FR O2 SENSOR P0133		TESTING		MONITOR		CMPS~RPM(REF)	XXX rpm	THRTL POS SEN	XXX V	B/FUEL SCHDL	XXX msec	PEF149V
FR O2 SENSOR P0133														
TESTING														
MONITOR														
CMPS~RPM(REF)	XXX rpm													
THRTL POS SEN	XXX V													
B/FUEL SCHDL	XXX msec													

6	<table border="1"> <tr> <td colspan="2">FR O2 SENSOR P0133</td> </tr> <tr> <td colspan="2">COMPLETED</td> </tr> </table>	FR O2 SENSOR P0133		COMPLETED		PEF213V
FR O2 SENSOR P0133						
COMPLETED						

DTC Confirmation Procedure

NEEC0974

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Always perform at a temperature above -10°C (14°F).
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

With CONSULT-II

- Start engine and warm it up to normal operating temperature.
- Stop engine and wait at least 5 seconds.
- Turn ignition switch ON and select "FR O2 SENSOR P0133" of "FRONT O2 SENSOR" in "DTC WORK SUPPORT" mode with CONSULT-II.
- Touch "START".
- Start engine and let it idle for at least 3.0 minutes.

NOTE:

Never raise engine speed above 3,000 rpm after this step. If the engine speed limit is exceeded, return to step 5.

- When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 20 seconds.)

CMPS-RPM (REF)	1,700 - 3,600 rpm
Vehicle speed	80 - 120 km/h (50 - 75 MPH)
B/FUEL SCHDL	1.1 - 4.9 msec
Selector lever	Suitable position

DTC P0133 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RESPONSE MONITORING)

KA24DE

DTC Confirmation Procedure (Cont'd)

If "TESTING" is not displayed after 5 minutes, retry from step 2.


- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-217.

GI

MA

EM

LC

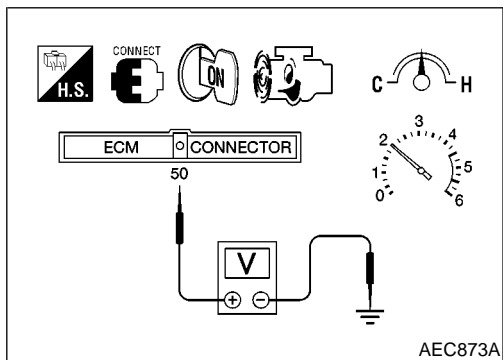

Overall Function Check

NEEC0975

Use this procedure to check the overall function of the front heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.

EC

Without CONSULT-II

FE

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 50 (Front heated oxygen sensor signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - Malfunction indicator lamp goes on more than five times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR).
- 4) If NG, go to "Diagnostic Procedure", EC-217.

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0133 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RESPONSE MONITORING)







KA24DE

Wiring Diagram

Wiring Diagram

NEEC0976

EC-FRO2-01

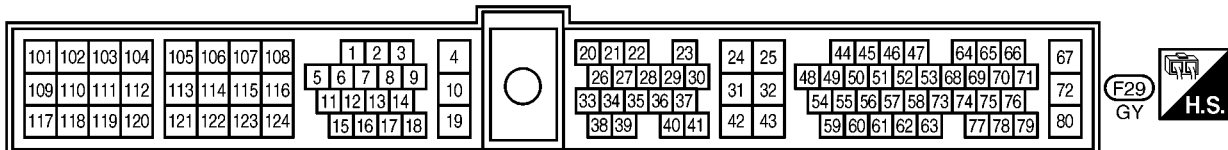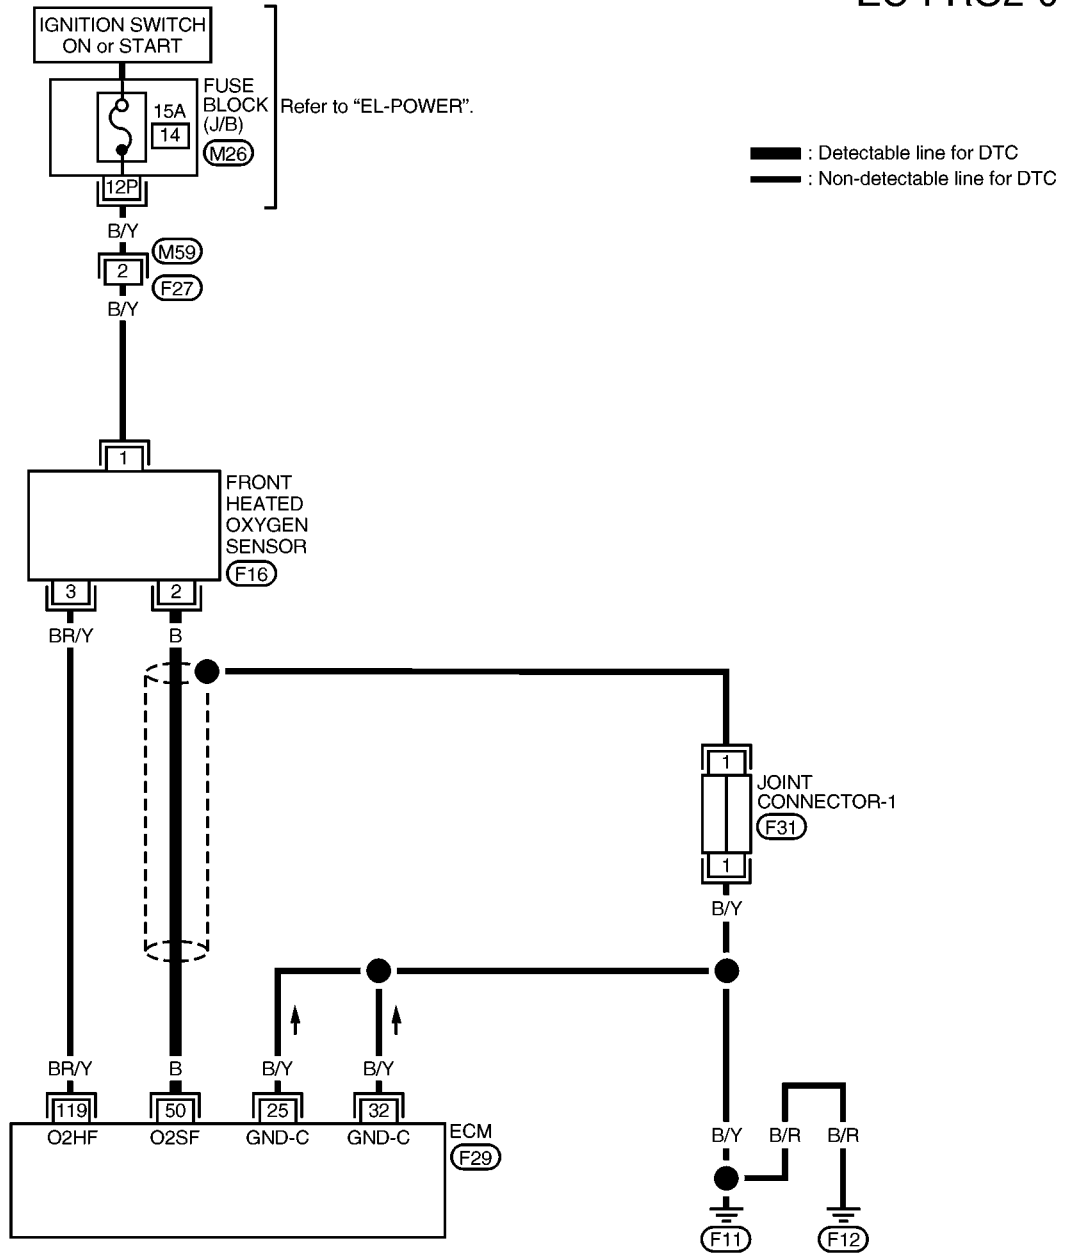

AEC986A


DTC P0133 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RESPONSE MONITORING)

KA24DE


Diagnostic Procedure

Diagnostic Procedure


NEEC0977

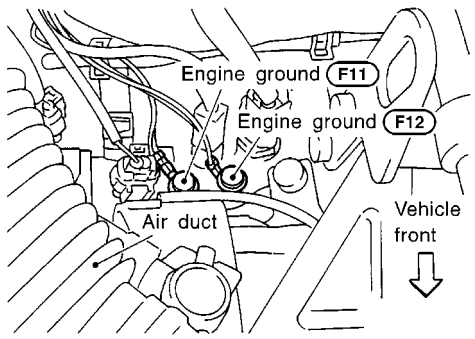1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch OFF. 2. Loosen and retighten engine ground screws.</p>	
	
SEF325V	
▶	GO TO 2.

GI
MA
EM
LC
EC

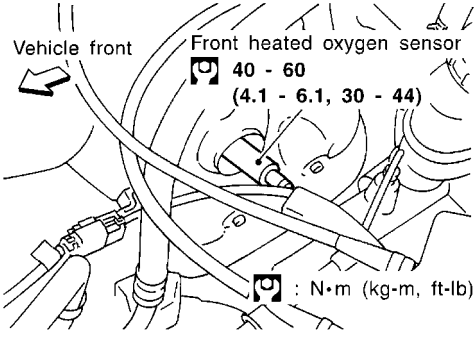2	RETIGHTEN FRONT HEATED OXYGEN SENSOR
Loosen and retighten front heated oxygen sensor.	
	
<p>Tightening torque: 40 - 60 N·m (4.1 - 6.1 kg-m, 30 - 44 ft-lb)</p>	
SEF332V	
▶	GO TO 3.

FE
CL
MT
AT
TF
PD
AX
SU

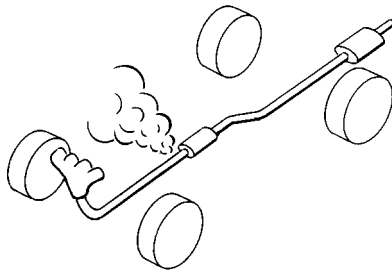3	CHECK EXHAUST AIR LEAK
<p>1. Start engine and run it at idle. 2. Listen for an exhaust air leak before three way catalyst.</p>	
	
OK or NG	
OK	▶ GO TO 4.
NG	▶ Repair or replace.

BR
ST
RS
BT
HA
SC
EL


DTC P0133 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RESPONSE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

4	CHECK FOR INTAKE AIR LEAK	
Listen for an intake air leak between the mass air flow sensor and the intake manifold.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Repair or replace.

5	CLEAR THE SELF-LEARNING DATA																					
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> Start engine and warm it up to normal operating temperature. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT-II. Clear the self-learning control coefficient by touching "CLEAR". 																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>SELF-LEARN CONTROL</td><td style="text-align: center;">100 %</td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>CMPS-RPM</td><td style="text-align: center;">XXX rpm</td></tr> <tr><td>COOLAN TEMP/S</td><td style="text-align: center;">XXX °C</td></tr> <tr><td>FR O2 SENSOR</td><td style="text-align: center;">XXX V</td></tr> <tr><td>A/F ALPHA</td><td style="text-align: center;">XXX %</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>			ACTIVE TEST		SELF-LEARN CONTROL	100 %	MONITOR		CMPS-RPM	XXX rpm	COOLAN TEMP/S	XXX °C	FR O2 SENSOR	XXX V	A/F ALPHA	XXX %						
ACTIVE TEST																						
SELF-LEARN CONTROL	100 %																					
MONITOR																						
CMPS-RPM	XXX rpm																					
COOLAN TEMP/S	XXX °C																					
FR O2 SENSOR	XXX V																					
A/F ALPHA	XXX %																					
SEF165X																						
<ol style="list-style-type: none"> Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0171 or P0172 detected? Is it difficult to start engine? 																						
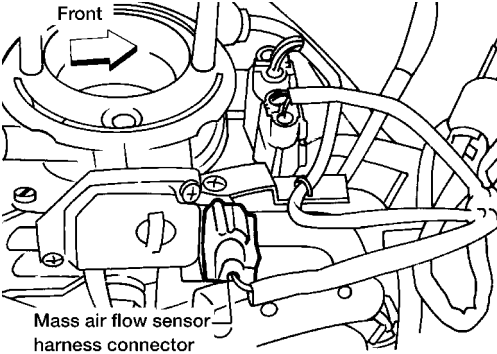
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> Start engine and warm it up to normal operating temperature. Turn ignition switch OFF. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 3 seconds at idle speed. 		
		
AEC131A		
<ol style="list-style-type: none"> Stop engine and reconnect mass air flow sensor harness connector. Make sure diagnostic trouble code No. 0102 is displayed in Diagnostic Test Mode II. Erase the diagnostic test mode II (Self-diagnostic results) memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-69. Make sure diagnostic trouble code No. 0505 is displayed in Diagnostic Test Mode II. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC 0114 or 0115 detected? Is it difficult to start engine? 		
Yes or No		
Yes	▶	Perform trouble diagnosis for DTC P0171, P0172. Refer to EC-279, 287.
No	▶	GO TO 6.

DTC P0133 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RESPONSE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

6	CHECK INPUT SIGNAL CIRCUIT	<p>1. Disconnect front heated oxygen sensor harness connector and ECM harness connector.</p> <p>2. Check harness continuity between ECM terminal 50 and terminal 2.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SEF141V</p> <p>Continuity should exist.</p> <p>3. Check harness continuity between ECM terminal 50 (or terminal 2) and ground.</p> <p>Continuity should not exist.</p> <p>4. Also check harness for short to power.</p> <p style="text-align: center;">OK or NG</p>	GI MA EM LC EC FE CL MT
OK	▶	GO TO 7.	
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.	

7	CHECK FRONT HEATED OXYGEN SENSOR HEATER	<p>Check resistance between terminals 3 and 1.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SEF220W</p> <p>Resistance: 2.3 - 4.3 Ω at 25°C (77°F)</p> <p>Check continuity between terminals 2 and 1, 3 and 2.</p> <p>Continuity should not exist.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center;">OK or NG</p>	AT TF PD AX SU BR ST RS BT HA SC EL IDX
OK (With CONSULT-II)	▶	GO TO 8.	
OK (Without CONSULT-II)	▶	GO TO 9.	
NG	▶	Replace front heated oxygen sensor.	

DTC P0133 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RESPONSE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

8 CHECK FRONT HEATED OXYGEN SENSOR

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "MANU TRIG" in "DATA MONITOR" mode, and the trigger point is adjusted to 100%.
3. Select "FR O2 SENSOR" and "FR O2 MNTR" in item selection.
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch "START" on CONSULT-II screen.

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
MAS AIR/FL SE	XXX V
COOLANT TEMP/S	XXX °C
FR O2 SENSOR	XXX V
FR O2 MNTR	LAEN
INJ PULSE	XXX msec

PEF084P

6. Check the following.
 - "FR O2 MNTR" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below:


cycle | 1 | 2 | 3 | 4 | 5 |
FR O2 MNTR R-L-R-L-R-L-R-L-R-L-R

SEF947V

R = "FR O2 MNTR", "RICH"
L = "FR O2 MNTR", "LEAN"

- "FR O2 SENSOR" voltage goes above 0.6V at least once.
- "FR O2 SENSOR" voltage goes below 0.3V at least once.
- "FR O2 SENSOR" voltage never exceeds 1.0V.

SPREADSHEET		
REPLAY MODE	REPLAY MODE	
NUMERICAL	SHOW TRIGGER	
	CMPS-RPM rpm	FR O2 SEN V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

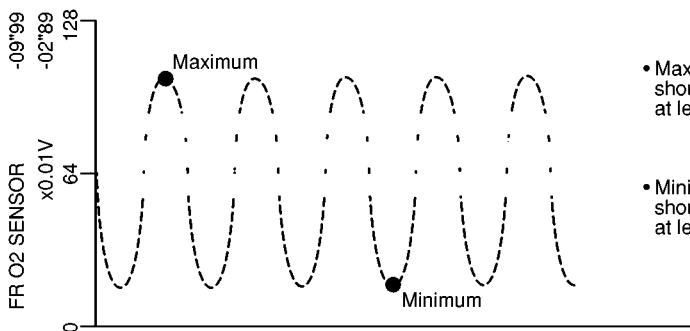

- Maximum voltage should be over 0.6V at least one time.
- Minimum voltage should be below 0.30V at least one time.

PEF736W

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK	▶	GO TO 10.
NG	▶	Replace front heated oxygen sensor.

DTC P0133 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RESPONSE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

9	CHECK FRONT HEATED OXYGEN SENSOR	<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Set voltmeter probes between ECM terminal 50 (Front heated oxygen sensor signal) and engine ground. <div style="text-align: center; margin: 10px 0;"> </div> <p style="text-align: right; margin-right: 20px;">AEC873A</p> <ol style="list-style-type: none"> 3. Check the following with engine speed held at 2,000 rpm constant under no load. <ul style="list-style-type: none"> ● Malfunction indicator lamp goes on more than five times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR). ● The maximum voltage is over 0.6V at least one time. ● The minimum voltage is below 0.3V at least one time. ● The voltage never exceeds 1.0V. <p style="margin-left: 20px;">CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center; margin: 10px 0;">OK or NG</p> 	GI MA EM LC EC FE CL MT AT TF PD AX SU BR ST RS BT HA SC EL IDX
OK	▶	GO TO 10.	
NG	▶	Replace front heated oxygen sensor.	


DTC P0133 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RESPONSE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

10 CHECK MASS AIR FLOW SENSOR

1. Turn ignition switch ON.
2. Start engine and warm it up to normal operating temperature.
3. Check voltage between ECM terminal 54 (Mass air flow sensor signal) and ground.

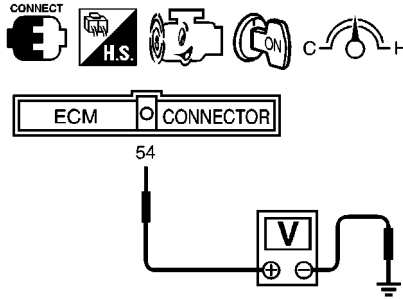


SEF326V

Conditions	Voltage V
Ignition switch "ON" (Engine stopped.)	Less than 1.0
Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.8
2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.9 - 2.3
Idle to about 4,000 rpm*	1.3 - 1.7 to Approx. 3.0

*: Check for linear voltage rise in response to increases to about 4,000 rpm in engine speed.

MTBL0326

4. If the voltage is out of specification, disconnect mass air flow sensor harness connector and connect it again. Repeat above check.
5. If NG, remove mass air flow sensor from air duct. Check hot wire for damage or dust.

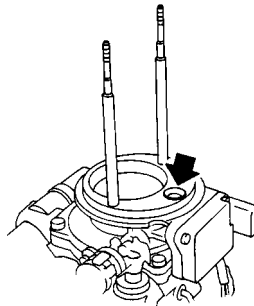

SEF893J


OK or NG

OK	▶	GO TO 11.
NG	▶	Replace mass air flow sensor.

DTC P0133 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (RESPONSE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

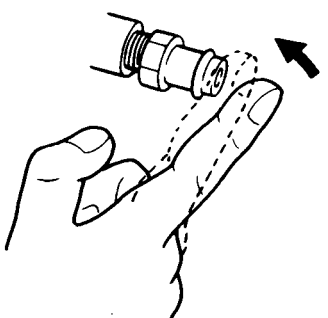11	CHECK PCV VALVE		
<p>1. With engine running at idle, remove PCV valve from breather separator.</p> <p>2. A properly working valve makes a hissing noise as air passes through it. A strong vacuum should be felt immediately when a finger is placed over the valve inlet.</p>			
			
SEC137A			
OK or NG			
OK		▶	GO TO 12.
NG		▶	Repair or replace PCV valve.

GI

MA

EM

LC

EC

FE

CL

12	CHECK SHIELD CIRCUIT		
<p>1. Turn ignition switch OFF.</p> <p>2. Remove joint connector-1.</p> <p>3. Check the following.</p> <ul style="list-style-type: none"> ● Continuity between joint connector-1 terminal 1 and ground ● Joint connector-1 (Refer to "HARNES LAYOUT", <i>EL-239</i>) <p style="margin-left: 20px;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p>5. Then reconnect joint connector.</p>			
OK or NG			
OK		▶	GO TO 13.
NG		▶	Repair open circuit, short to ground or short to power in harness or connectors.

MT

AT

TF

PD

AX

13	CHECK INTERMITTENT INCIDENT		
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.			
		▶	INSPECTION END

SU

BR

ST

RS

BT

HA

SC


EL

IDX

DTC P0134 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (HIGH VOLTAGE)

KA24DE


Component Description

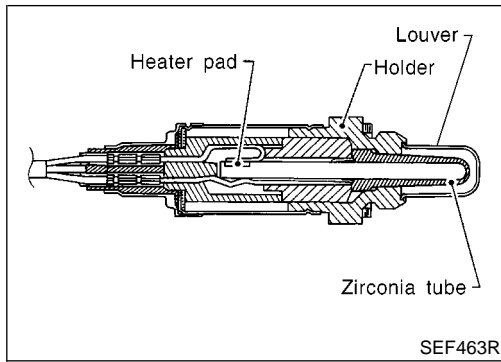

Component Description

NEEC0978

The front heated oxygen sensor is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

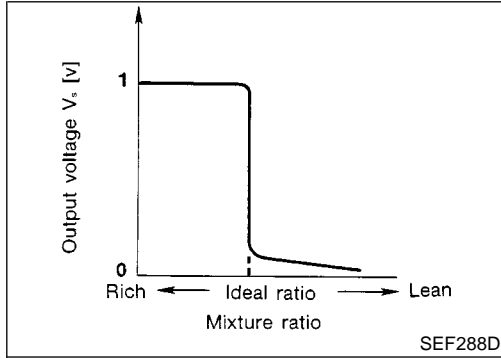

CONSULT-II Reference Value in Data Monitor Mode

NEEC0979

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
FR O2 SENSOR			0 - 0.3V ↔ Approx. 0.6 - 1.0V
FR O2 MNTR	<ul style="list-style-type: none"> Engine: After warming up 	Maintaining engine speed at 2,000 rpm	LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NEEC0980


Specification data are reference values and are measured between each terminal and 43 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
50	B	Front heated oxygen sensor	<p>[Engine is running]</p> <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 2,000 rpm 	<p>0 - Approximately 1.0V</p> <p>SEF008W</p>

DTC P0134 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (HIGH VOLTAGE)

KA24DE

On Board Diagnosis Logic

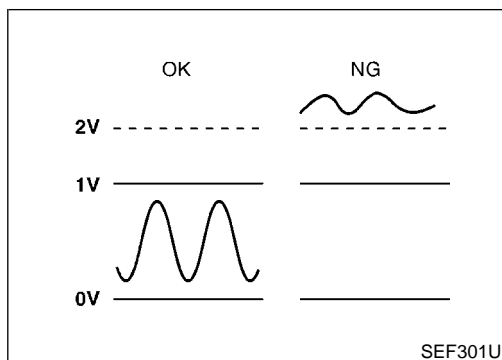

On Board Diagnosis Logic

To judge the malfunction, the diagnosis checks that the front heated oxygen sensor output is not inordinately high. NEEC0981

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0134 0412	<ul style="list-style-type: none"> An excessively high voltage from the sensor is sent to ECM. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Front heated oxygen sensor

2

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
COOLAN TEMP/S	XXX °C

PEF361V

DTC Confirmation Procedure

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test. NEEC0982

Ⓜ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Turn ignition switch ON.
- 4) Select "DATA MONITOR" mode with CONSULT-II.
- 5) Restart engine and let it idle for 35 seconds.
- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-227.

Ⓜ With GST

Follow the procedure "With CONSULT-II".

- When using GST, "DTC Confirmation Procedure" should be performed twice as much as when using CONSULT-II or ECM (Diagnostic Test Mode II) because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II or ECM (Diagnostic Test Mode II) is recommended.

DTC P0134 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (HIGH VOLTAGE)






KA24DE

Wiring Diagram

Wiring Diagram

NEEC0983

EC-FRO2-01

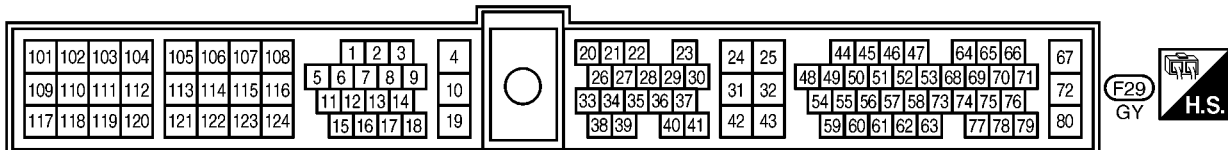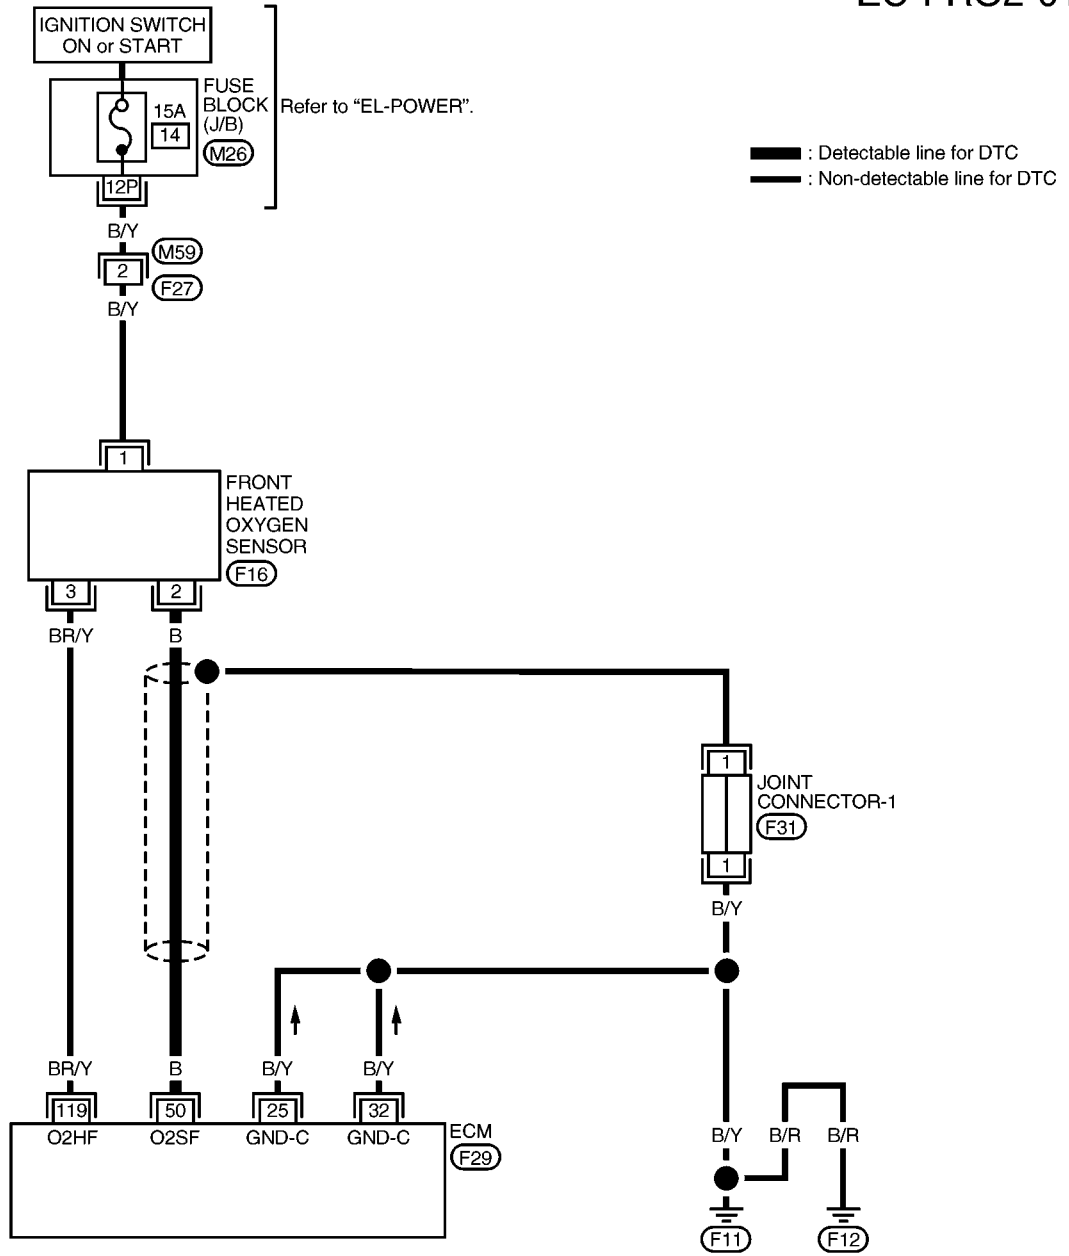

AEC986A


DTC P0134 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (HIGH VOLTAGE)



KA24DE

Diagnostic Procedure

Diagnostic Procedure

NEEC0984

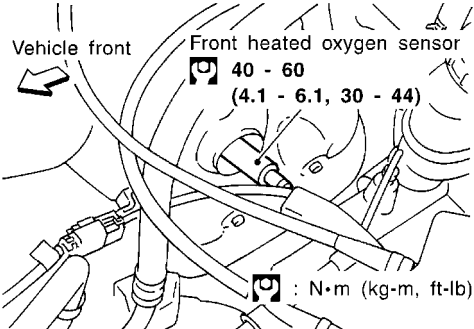1	RETIGHTEN FRONT HEATED OXYGEN SENSOR
<p>1. Turn ignition switch OFF. 2. Loosen and retighten front heated oxygen sensor.</p>  <p style="text-align: right;">SEF332V</p>	
<p>▶ GO TO 2.</p>	

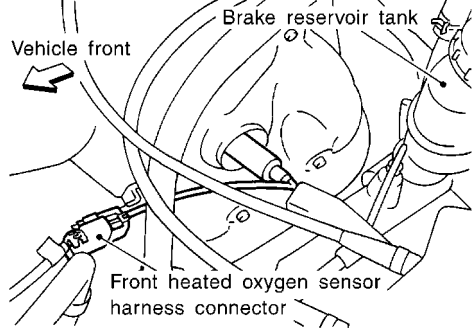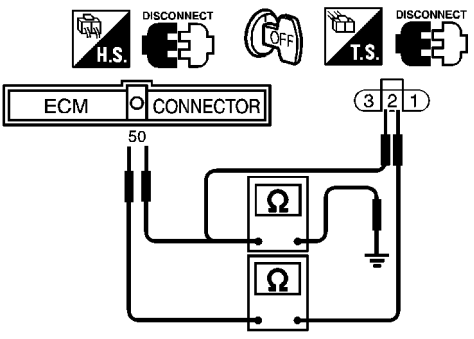2	CHECK INPUT SIGNAL CIRCUIT						
<p>1. Disconnect front heated oxygen sensor harness connector and ECM harness connector.</p>  <p style="text-align: right;">SEF331V</p>							
<p>2. Check harness continuity between ECM terminal 50 and terminal 2.</p>  <p style="text-align: right;">SEF141V</p>							
<p>Continuity should exist.</p> <p>3. Check harness continuity between ECM terminal 50 (or terminal 2) and ground. Continuity should not exist.</p> <p>4. Also check harness for short to power.</p> <p style="text-align: center;">OK or NG</p>							
<table border="1" style="width: 100%;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 3.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Repair open circuit or short to ground or short to power in harness or connectors.</td> </tr> </table>		OK	▶	GO TO 3.	NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.
OK	▶	GO TO 3.					
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.					

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0134 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (HIGH VOLTAGE)

KA24DE

Diagnostic Procedure (Cont'd)

3	CHECK HARNESS CONNECTOR
Check front heated oxygen sensor harness connector for water. Water should not exist.	
OK or NG	
OK (With CONSULT-II) ▶	GO TO 4.
OK (Without CONSULT-II) ▶	GO TO 5.
NG ▶	Repair or replace harness connector.

DTC P0134 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (HIGH VOLTAGE)

KA24DE

Diagnostic Procedure (Cont'd)

4 CHECK FRONT HEATED OXYGEN SENSOR

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "MANU TRIG" in "DATA MONITOR" mode, and the trigger point is adjusted to 100%.
3. Select "FR O2 SENSOR" and "FR O2 MNTR" in item selection.
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch "START" on CONSULT-II screen.

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
MAS AIR/FL SE	XXX V
COOLANT TEMP/S	XXX °C
FR O2 SENSOR	XXX V
FR O2 MNTR	LAEN
INJ PULSE	XXX msec

PEF084P

6. Check the following.
 - "FR O2 MNTR" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below:


cycle | 1 | 2 | 3 | 4 | 5 |
FR O2 MNTR R-L-R-L-R-L-R-L-R-L-R

SEF947V

R = "FR O2 MNTR", "RICH"
L = "FR O2 MNTR", "LEAN"

- "FR O2 SENSOR" voltage goes above 0.6V at least once.
- "FR O2 SENSOR" voltage goes below 0.3V at least once.
- "FR O2 SENSOR" voltage never exceeds 1.0V.

SPREADSHEET		
REPLAY MODE	REPLAY MODE	
NUMERICAL	SHOW TRIGGER	
	CMPS-RPM rpm	FR O2 SEN V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

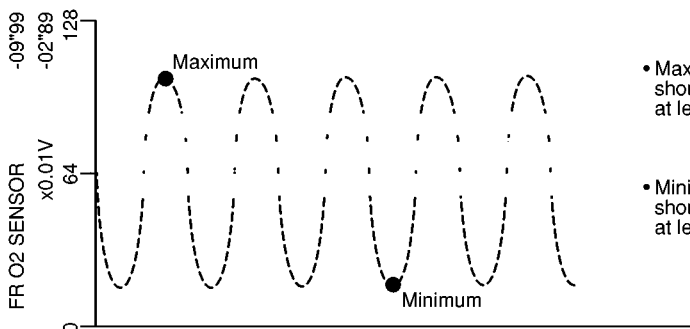

- Maximum voltage should be over 0.6V at least one time.
- Minimum voltage should be below 0.30V at least one time.

PEF736W

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK	▶	GO TO 6.
NG	▶	Replace front heated oxygen sensor.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0134 FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (HIGH VOLTAGE)

KA24DE

Diagnostic Procedure (Cont'd)

5	CHECK FRONT HEATED OXYGEN SENSOR						
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Set voltmeter probes between ECM terminal 50 (Front heated oxygen sensor signal) and engine ground. <div style="text-align: center; margin: 10px 0;"> </div> <p style="text-align: right; margin-right: 50px;">AEC873A</p> <ol style="list-style-type: none"> 3. Check the following with engine speed held at 2,000 rpm constant under no load. <ul style="list-style-type: none"> ● Malfunction indicator lamp goes on more than five times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR). ● The maximum voltage is over 0.6V at least one time. ● The minimum voltage is below 0.3V at least one time. ● The voltage never exceeds 1.0V. <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center; margin: 10px 0;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 5px;"> <tr> <td style="width: 15%; padding: 2px;">OK</td> <td style="width: 10%; text-align: center; padding: 2px;">▶</td> <td style="padding: 2px;">GO TO 6.</td> </tr> <tr> <td style="padding: 2px;">NG</td> <td style="text-align: center; padding: 2px;">▶</td> <td style="padding: 2px;">Replace front heated oxygen sensor.</td> </tr> </table>		OK	▶	GO TO 6.	NG	▶	Replace front heated oxygen sensor.
OK	▶	GO TO 6.					
NG	▶	Replace front heated oxygen sensor.					

6	CHECK SHIELD CIRCUIT						
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Remove joint connector-1. 3. Check the following. <ul style="list-style-type: none"> ● Continuity between joint connector-1 terminal 1 and ground ● Joint connector-1 (Refer to "HARNES LAYOUT", <i>EL-239</i>.) <p style="margin-left: 20px; color: blue;">Continuity should exist.</p> 4. Also check harness for short to ground and short to power. Then reconnect joint connector. <p style="text-align: center; margin: 10px 0;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 5px;"> <tr> <td style="width: 15%; padding: 2px;">OK</td> <td style="width: 10%; text-align: center; padding: 2px;">▶</td> <td style="padding: 2px;">GO TO 7.</td> </tr> <tr> <td style="padding: 2px;">NG</td> <td style="text-align: center; padding: 2px;">▶</td> <td style="padding: 2px;">Repair open circuit, short to ground or short to power in harness or connectors.</td> </tr> </table>		OK	▶	GO TO 7.	NG	▶	Repair open circuit, short to ground or short to power in harness or connectors.
OK	▶	GO TO 7.					
NG	▶	Repair open circuit, short to ground or short to power in harness or connectors.					

7	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
▶	INSPECTION END

Description

SYSTEM DESCRIPTION

NEEC0985

NEEC0985S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	Front heated oxygen sensor heater control	Front heated oxygen sensor heater

The ECM performs ON/OFF control of the front heated oxygen sensor heater corresponding to the engine operating condition.

OPERATION

NEEC0985S02

Engine speed	Front heated oxygen sensor heater
Above 3,000 rpm	OFF
Below 3,000 rpm	ON

CONSULT-II Reference Value in Data Monitor Mode

NEEC0986

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FR O2 HEATER	● Engine speed: Below 3,000 rpm	ON
	● Engine speed: Above 3,000 rpm	OFF

ECM Terminals and Reference Value

NEEC0987

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
119	BR/Y	Front heated oxygen sensor heater	[Engine is running] ● Engine speed is below 3,000 rpm.	Approximately 0.4V
			[Engine is running] ● Engine speed is above 3,000 rpm.	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NEEC0988

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0135 0901	● The current amperage in the front heated oxygen sensor heater circuit is out of the normal range. (An improper voltage drop signal is sent to ECM through the front heated oxygen sensor heater.)	● Harness or connectors (The front heated oxygen sensor heater circuit is open or shorted.) ● Front heated oxygen sensor heater

DTC Confirmation Procedure


NEEC0989

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11V at idle.

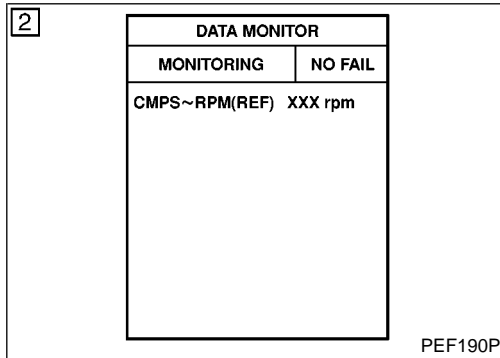

 **With CONSULT-II**

- 1) Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and run it for at least 6 seconds at idle speed.
- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-234.






 **With GST**

- 1) Start engine and run it for at least 6 seconds at idle speed.
 - 2) Turn ignition switch "OFF" and wait least 6 seconds at idle speed.
 - 3) Select "MODE 3" with GST.
 - 4) If DTC is detected, go to "Diagnostic Procedure", EC-234.
- **When using GST, "DTC Confirmation Procedure" should be performed twice as much as when using CONSULT-II or ECM (Diagnostic Test Mode II) because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II or ECM (Diagnostic Test Mode II) is recommended.**

Wiring Diagram

NEEC0990



EC-FRO2/H-01

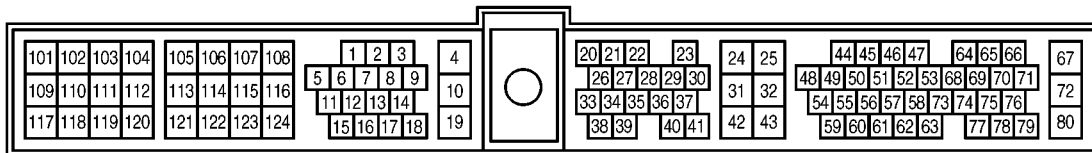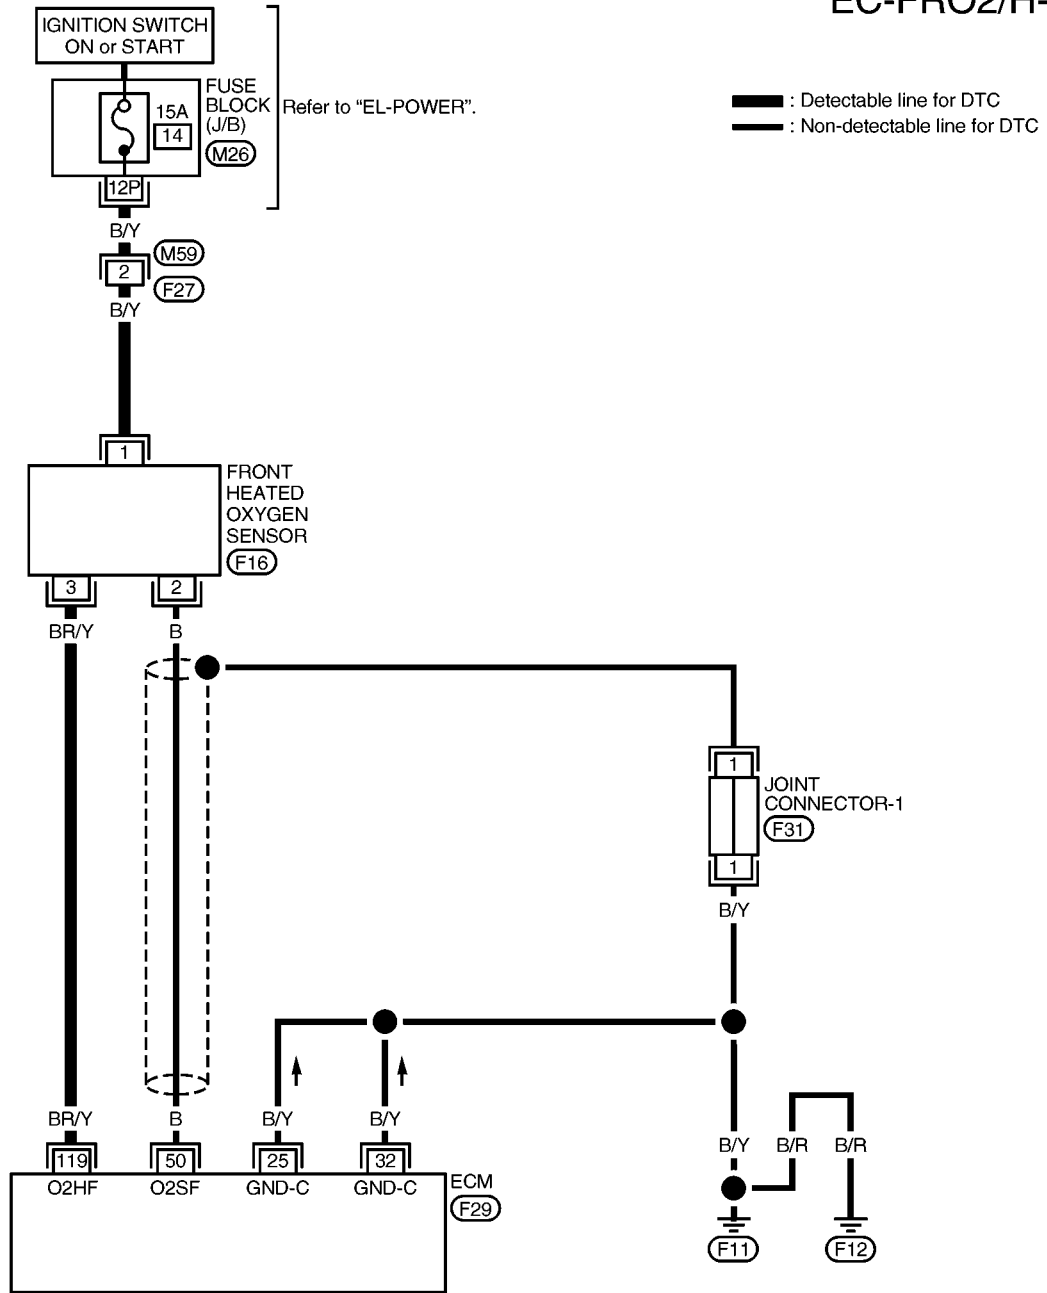

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


Diagnostic Procedure

NEEC0991

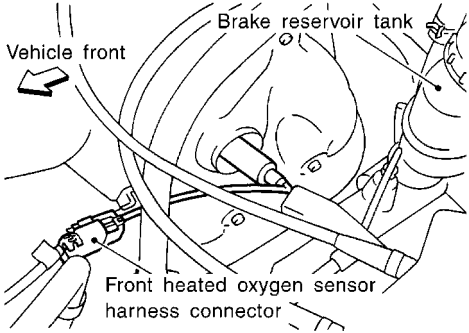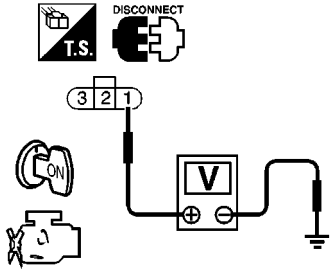1	CHECK POWER SUPPLY	
	<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect front heated oxygen sensor harness connector. 	
		SEF331V
	<ol style="list-style-type: none"> 3. Turn ignition switch ON. 4. Check voltage between terminal 1 and ground with CONSULT-II or tester. 	
		SEF213W
	Voltage: Battery voltage	
	OK or NG	
	OK	▶ GO TO 3.
	NG	▶ GO TO 2.

2	DETECT MALFUNCTIONING PART	
	Check the following.	
	<ul style="list-style-type: none"> ● Harness connectors M59, F27 ● 15A fuse ● Harness for open or short between front heated oxygen sensor and 15A fuse 	
	▶	Repair harness or connectors.

3	CHECK GROUND CIRCUIT	
	<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect ECM harness connector. 3. Check harness continuity between front heated oxygen sensor terminal 3 and ECM terminal 119. Refer to the wiring diagram. 	
	Continuity should exist.	
	<ol style="list-style-type: none"> 4. Also check harness for short to ground and short to power. 	
	OK or NG	
	OK	▶ GO TO 4.
	NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

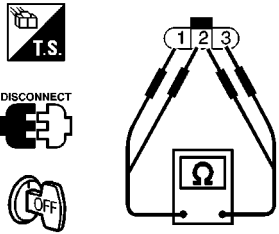4	CHECK FRONT HEATED OXYGEN SENSOR HEATER	
<p>Check resistance between terminals 3 and 1.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF220W</p> <p>Resistance: 2.3 - 4.3 Ω at 25°C (77°F)</p> <p>Check continuity between terminals 2 and 1, 3 and 2.</p> <p>Continuity should not exist.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	Replace front heated oxygen sensor.


5	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
▶	INSPECTION END

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0137 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MIN. VOLTAGE MONITORING)

KA24DE

Component Description

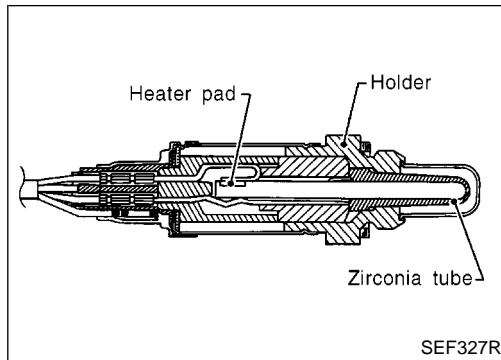

Component Description

NEEC0992

The rear heated oxygen sensor (Rear HO2S), after three way catalyst, monitors the oxygen level in the exhaust gas.

Even if switching characteristics of the front heated oxygen sensor are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the rear heated oxygen sensor.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the rear heated oxygen sensor is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

NEEC0993

Specification data are reference values.


MONITOR ITEM	CONDITION	SPECIFICATION
RR O2 SENSOR	● Engine: After warming up Revsing engine from idle to 3,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
RR O2 MNTR		LEAN ↔ RICH

ECM Terminals and Reference Value

NEEC0994

Specification data are reference values and are measured between each terminal and 43 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
56	OR	Rear heated oxygen sensor	[Engine is running] ● After warming up to normal operating temperature and revving engine from idle to 3,000 rpm quickly	0 - Approximately 1.0V

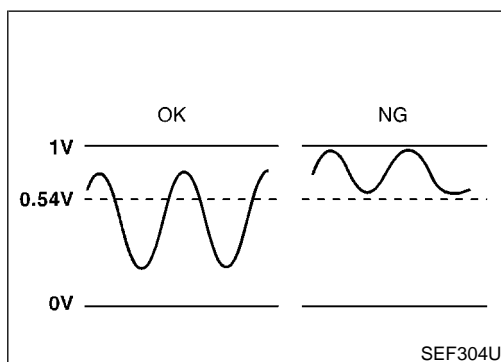

On Board Diagnosis Logic

NEEC0995

The rear heated oxygen sensor has a much longer switching time between rich and lean than the front heated oxygen sensor. The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of rear heated oxygen sensor, ECM monitors whether the minimum voltage of the sensor is sufficiently low during various driving conditions such as fuel-cut.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0137 0511	● The minimum voltage from the sensor does not reach the specified voltage.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Rear heated oxygen sensor ● Fuel pressure ● Injectors

DTC P0137 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MIN. VOLTAGE MONITORING)

KA24DE

DTC Confirmation Procedure

NEEC0996

RR O2 SENSOR P0137

WAIT
OPEN ENGINE HOOD.
KEEP ENGINE RUNNING AT
IDLE SPEED FOR MAXIMUM
OF 5 MINUTES.

SEF548X

RR O2 SENSOR P0137

MAINTAIN
1800 - 2800 RPM UNTIL FINAL
RESULT APPEARS.

1800 rpm
2300 rpm
2800 rpm

SEF549X

RR O2 SENSOR P0137

COMPLETED

SELF-DIAG RESULTS

SEF550X

DTC Confirmation Procedure

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Open engine hood before conducting following procedure With CONSULT-II


- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "DATA MONITOR" mode with CONSULT-II.
- 5) Make sure the "COOLANT TEMP/S" is more then 70°C (158°F).
- 6) Select "RR O2 SEN P0137", of "REAR O2 SENSOR" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 7) Start engine and follow the instructions of CONSULT-II.
- 8) Make sure the "OK" is displayed after touching "SELF-DIAG RESULTS".
If NG is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-237.
If "CAN NOT BE DIAGNOSED" is displayed, perform the following.
 - a) Stop engine and cool down "COOLANT TEMP/SE" to less then 70°C 158°F.
 - b) Turn ignition switch "ON"
 - c) Select "DATA MONITOR" mode with CONSULT-II.
 - d) Perform from step 6) again when the 'COOLANT TEMP/S' reach to 70°C 158°F.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0137 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MIN. VOLTAGE MONITORING)

KA24DE

Overall Function Check

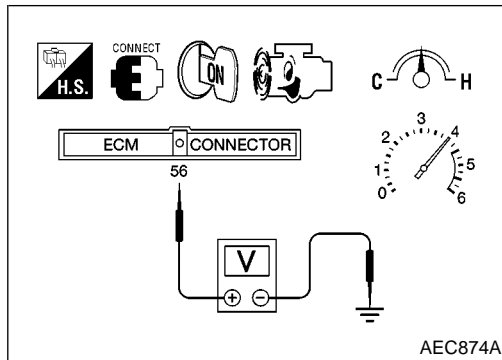

Overall Function Check

=NEEC0997

Use this procedure to check the overall function of the rear heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.

CAUTION:

Always drive vehicle at a safe speed.

⊗ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminals 56 (Rear heated oxygen sensor signal) and ECM ground.
- 4) Check the voltage when revving engine up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be below 0.54V at least once during this procedure.
If the voltage can be confirmed in step 4, step 5 is not necessary.
- 5) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position.
The voltage should be below 0.54V at least once during this procedure.
- 6) If NG, go to "Diagnostic Procedure", EC-240.

DTC P0137 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MIN. VOLTAGE MONITORING)

KA24DE
Wiring Diagram

Wiring Diagram

NEEC0998

EC-RR02-01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS




BT

HA

SC

EL

IDX

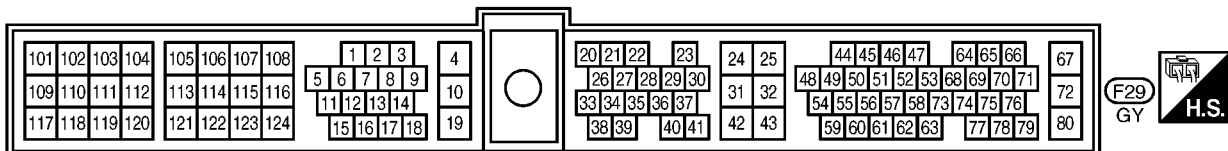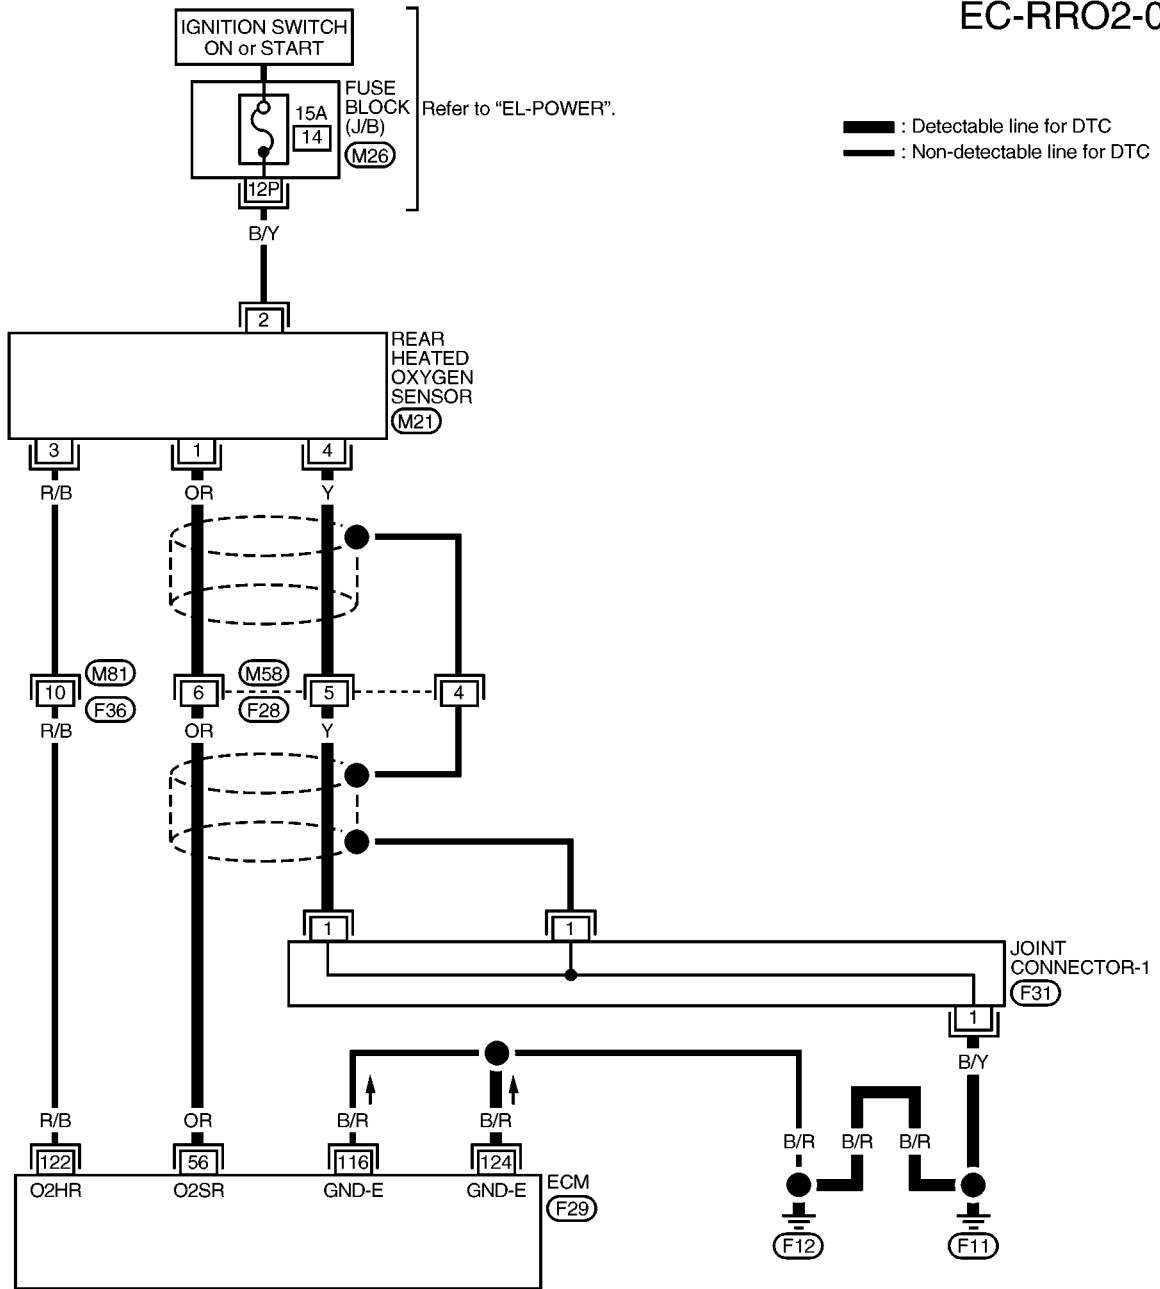

AEC988A

DTC P0137 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MIN. VOLTAGE MONITORING)

KA24DE


Diagnostic Procedure

Diagnostic Procedure

NEEC0999

1 RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten engine ground screws.

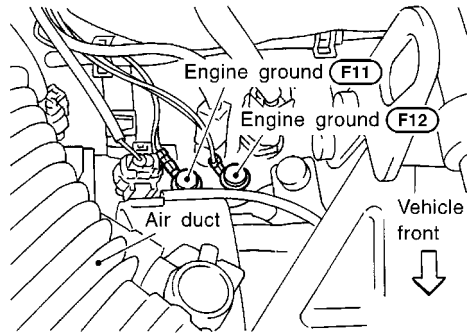

SEF325V

▶ GO TO 2.

DTC P0137 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MIN. VOLTAGE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

2 CLEAR THE SELF-LEARNING DATA

Ⓟ With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching "CLEAR".


ACTIVE TEST	
SELF-LEARN CONTROL	100 %
MONITOR	
CMPS-RPM	XXX rpm
COOLAN TEMP/S	XXX °C
FR O2 SENSOR	XXX V
A/F ALPHA	XXX %

SEF165X

4. Run engine for at least 10 minutes at idle speed.
Is the 1st trip DTC P0172 detected? Is it difficult to start engine?

ⓧ Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 3 seconds at idle speed.

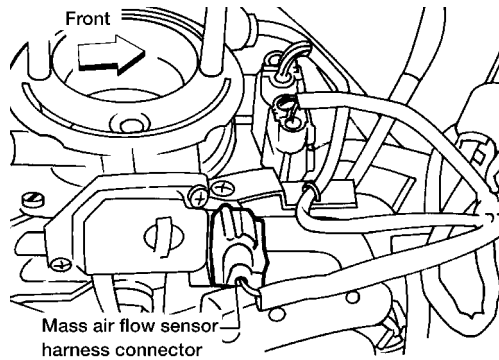

AEC131A

4. Stop engine and reconnect mass air flow sensor harness connector.
5. Make sure diagnostic trouble code No. 0102 is displayed in Diagnostic Test Mode II.
6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-69.
7. Make sure diagnostic trouble code No. 0505 is displayed in Diagnostic Test Mode II.
8. Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC 0114 detected? Is it difficult to start engine?

Yes or No

Yes	▶	Perform trouble diagnosis for DTC P0172. Refer to EC-287.
No	▶	GO TO 3.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0137 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MIN. VOLTAGE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

3	CHECK INPUT SIGNAL CIRCUIT
<p>1. Turn ignition switch OFF.</p> <p>2. Disconnect rear heated oxygen sensor harness connector and ECM harness connector.</p> <p>3. Check harness continuity between ECM terminal 56 and terminal 1.</p>	
SEF157V	
<p>Continuity should exist.</p> <p>4. Check harness continuity between ECM terminal 56 (or terminal 1) and ground.</p> <p>Continuity should not exist.</p> <p>5. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.

4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M59, F27 ● Harness for open or short between rear heated oxygen sensor and ECM 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

5	CHECK GROUND CIRCUIT
<p>1. Check harness continuity between rear heated oxygen sensor terminal 4 and engine ground. Refer to "Wiring Diagram", EC-239.</p> <p>Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK (With CONSULT-II)	▶ GO TO 6.
OK (Without CONSULT-II)	▶ GO TO 7.
NG	▶ GO TO 4.

DTC P0137 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MIN. VOLTAGE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

6 CHECK REAR HEATED OXYGEN SENSOR

With CONSULT-II

1. Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
2. Stop vehicle with engine running.
3. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "RR O2 SENSOR" as the monitor item with CONSULT-II.
4. Check "RR O2 SENSOR" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.


ACTIVE TEST	
FUEL INJECTION	25 %
MONITOR	
CMPS~RPM(REF)	XXX rpm
FR O2 SENSOR	XXX V
RR O2 SENSOR	XXX V
FR O2 MNTR	RICH
RR O2 MNTR	RICH

PEF102P

"RR O2 SENSOR" should be above 0.56V at least once when the "FUEL INJECTION" is +25%. "RR O2 SENSOR" should be below 0.54V at least once when the "FUEL INJECTION" is -25%.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

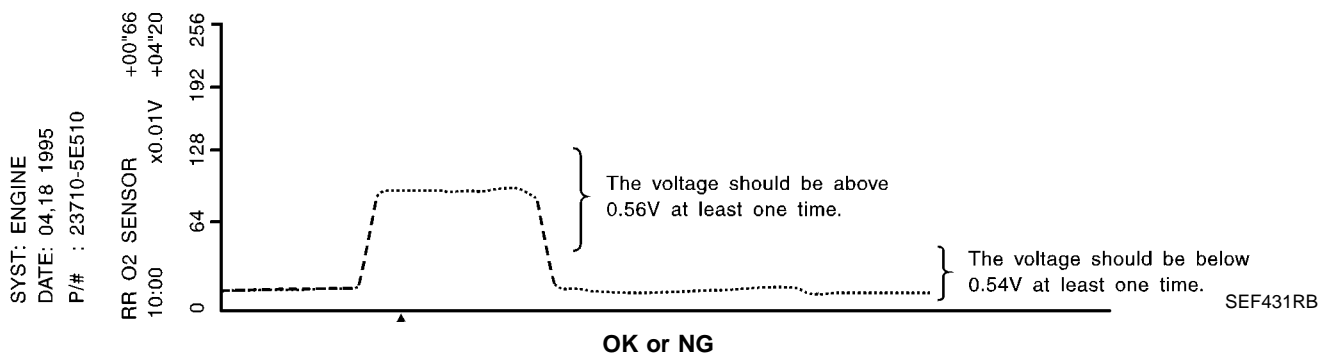

OK	▶	GO TO 8.
NG	▶	Replace rear heated oxygen sensor.

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0137 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MIN. VOLTAGE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

7	CHECK REAR HEATED OXYGEN SENSOR						
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes. 2. Stop vehicle with engine running. 3. Set voltmeter probes between ECM terminals 56 (Rear heated oxygen sensor signal) and ECM ground. <div style="text-align: center; margin: 10px 0;"> </div> <ol style="list-style-type: none"> 4. Check the voltage when revving up to 4,000 rpm under no load at least 10 times. (Depress and release accelerator pedal as soon as possible.) The voltage should be above 0.56V at least once. If the voltage is above 0.56V at step 4, step 5 is not necessary. 5. Check the voltage when revving up to 5,000 rpm under no load. Or keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position. The voltage should be below 0.54V at least once. <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 8.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace rear heated oxygen sensor.</td> </tr> </table>		OK	▶	GO TO 8.	NG	▶	Replace rear heated oxygen sensor.
OK	▶	GO TO 8.					
NG	▶	Replace rear heated oxygen sensor.					

AEC874A

8	CHECK SHIELD CIRCUIT						
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect harness connectors F27. 3. Check harness continuity between harness connector F27 terminal 14 and ground. <div style="text-align: center; margin: 10px 0;"> </div> <p style="text-align: center; color: blue;">Continuity should exist.</p> <ol style="list-style-type: none"> 4. Also check harness for short to ground and short to power. 5. Then reconnect harness connectors. <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 10.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 9.</td> </tr> </table>		OK	▶	GO TO 10.	NG	▶	GO TO 9.
OK	▶	GO TO 10.					
NG	▶	GO TO 9.					

SEF158V

DTC P0137 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MIN. VOLTAGE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

9	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Joint connector-1 (Refer to "HARNES LAYOUT", <i>EL-239</i>.)● Harness for open or short between harness connector F27 and engine ground	
▶	Repair open circuit, short to ground or short to power in harness or connectors.
10	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
▶	INSPECTION END

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX

DTC P0138 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MAX. VOLTAGE MONITORING)

KA24DE

Component Description

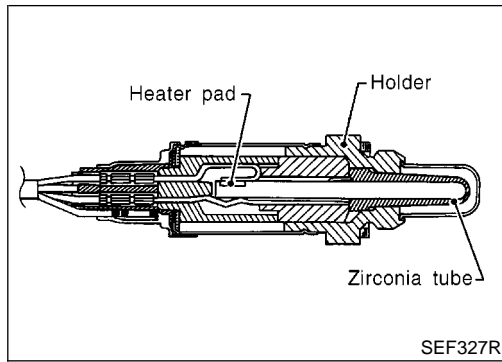

Component Description

^{NEEC1000}
The rear heated oxygen sensor (Rear HO2S), after three way catalyst, monitors the oxygen level in the exhaust gas. Even if switching characteristics of the front heated oxygen sensor are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the rear heated oxygen sensor. This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. Under normal conditions the rear heated oxygen sensor is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

Specification data are reference values.

^{NEEC1001}


MONITOR ITEM	CONDITION	SPECIFICATION
RR O2 SENSOR	● Engine: After warming up Revsing engine from idle to 3,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
RR O2 MNTR		LEAN ↔ RICH

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

^{NEEC1002}

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
56	OR	Rear heated oxygen sensor	[Engine is running] ● After warming up to normal operating temperature and revving engine from idle to 3,000 rpm quickly	0 - Approximately 1.0V

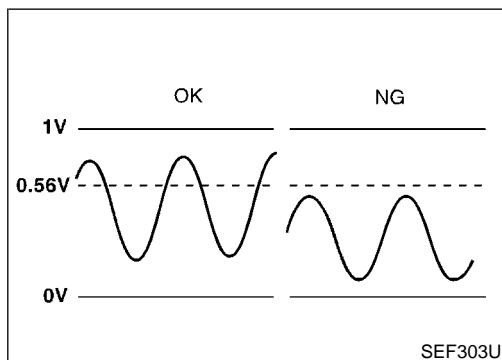

On Board Diagnosis Logic

^{NEEC1003}
The rear heated oxygen sensor has a much longer switching time between rich and lean than the front heated oxygen sensor. The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of rear heated oxygen sensor, ECM monitors whether the maximum voltage of the sensor is sufficiently high during various driving conditions such as fuel-cut.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0138 0510	● The maximum voltage from the sensor does not reach the specified voltage.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Rear heated oxygen sensor ● Fuel pressure ● Injectors ● Intake air leaks

DTC P0138 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MAX. VOLTAGE MONITORING)

KA24DE

DTC Confirmation Procedure

NEEC1004

RR O2 SENSOR P0138

WAIT
OPEN ENGINE HOOD.
KEEP ENGINE RUNNING AT
IDLE SPEED FOR MAXIMUM
OF 5 MINUTES.

SEF551X

RR O2 SENSOR P0138

MAINTAIN
1800 - 2800 RPM UNTIL FINAL
RESULT APPEARS.

1800 rpm
2300 rpm
2800 rpm

SEF552X

RR O2 SENSOR P0138

COMPLETED

SELF-DIAG RESULTS

SEF553X

DTC Confirmation Procedure

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Open engine hood before conducting following procedure With CONSULT-II


- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Turn ignition switch ON.
- 4) Select "DATA MONITOR" mode with CONSULT-II.
- 5) Make sure the "COOLANT TEMP/S" is more then 70°C (158°F).
- 6) Select "RR O2 SEN P0138", of "REAR O2 SENSOR" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 7) Start engine and follow the instructions of CONSULT-II.
- 8) Make sure the "OK" is displayed after touching "SELF-DIAG RESULTS".
If NG is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-237.
If "CAN NOT BE DIAGNOSED" is displayed, perform the following.
 - a) Stop engine and cool down "COOLANT TEMP/SE" to less then 70°C 158°F.
 - b) Turn ignition switch ON
 - c) Select "DATA MONITOR" mode with CONSULT-II.
 - d) Perform from step 6) again when the 'COOLANT TEMP/S" reach to 70°C 158°F.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0138 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MAX. VOLTAGE MONITORING)

KA24DE

Overall Function Check

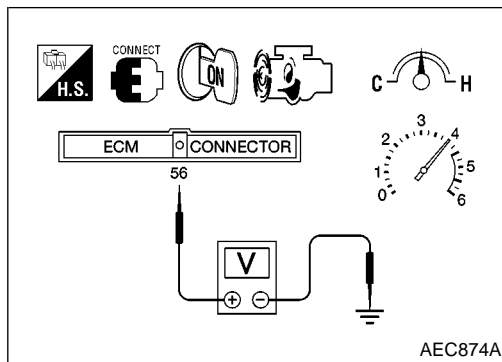

Overall Function Check

Use this procedure to check the overall function of the rear heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed. =NEEC1005

CAUTION:

Always drive vehicle at a safe speed.

⊗ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminals 56 (Rear heated oxygen sensor signal) and ECM ground.
- 4) Check the voltage when revving engine up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be above 0.56V at least once during this procedure.
If the voltage can be confirmed in step 4, step 5 is not necessary.
- 5) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position .
The voltage should be above 0.56V at least once during this procedure.
- 6) If NG, go to "Diagnostic Procedure", EC-250.

DTC P0138 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MAX. VOLTAGE MONITORING)

KA24DE

Wiring Diagram

Wiring Diagram

NEEC1006

EC-RR02-01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS






BT

HA

SC

EL

IDX

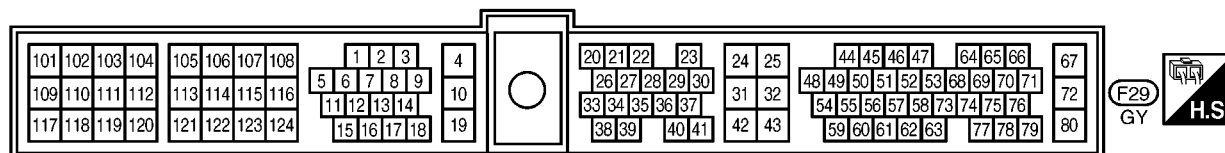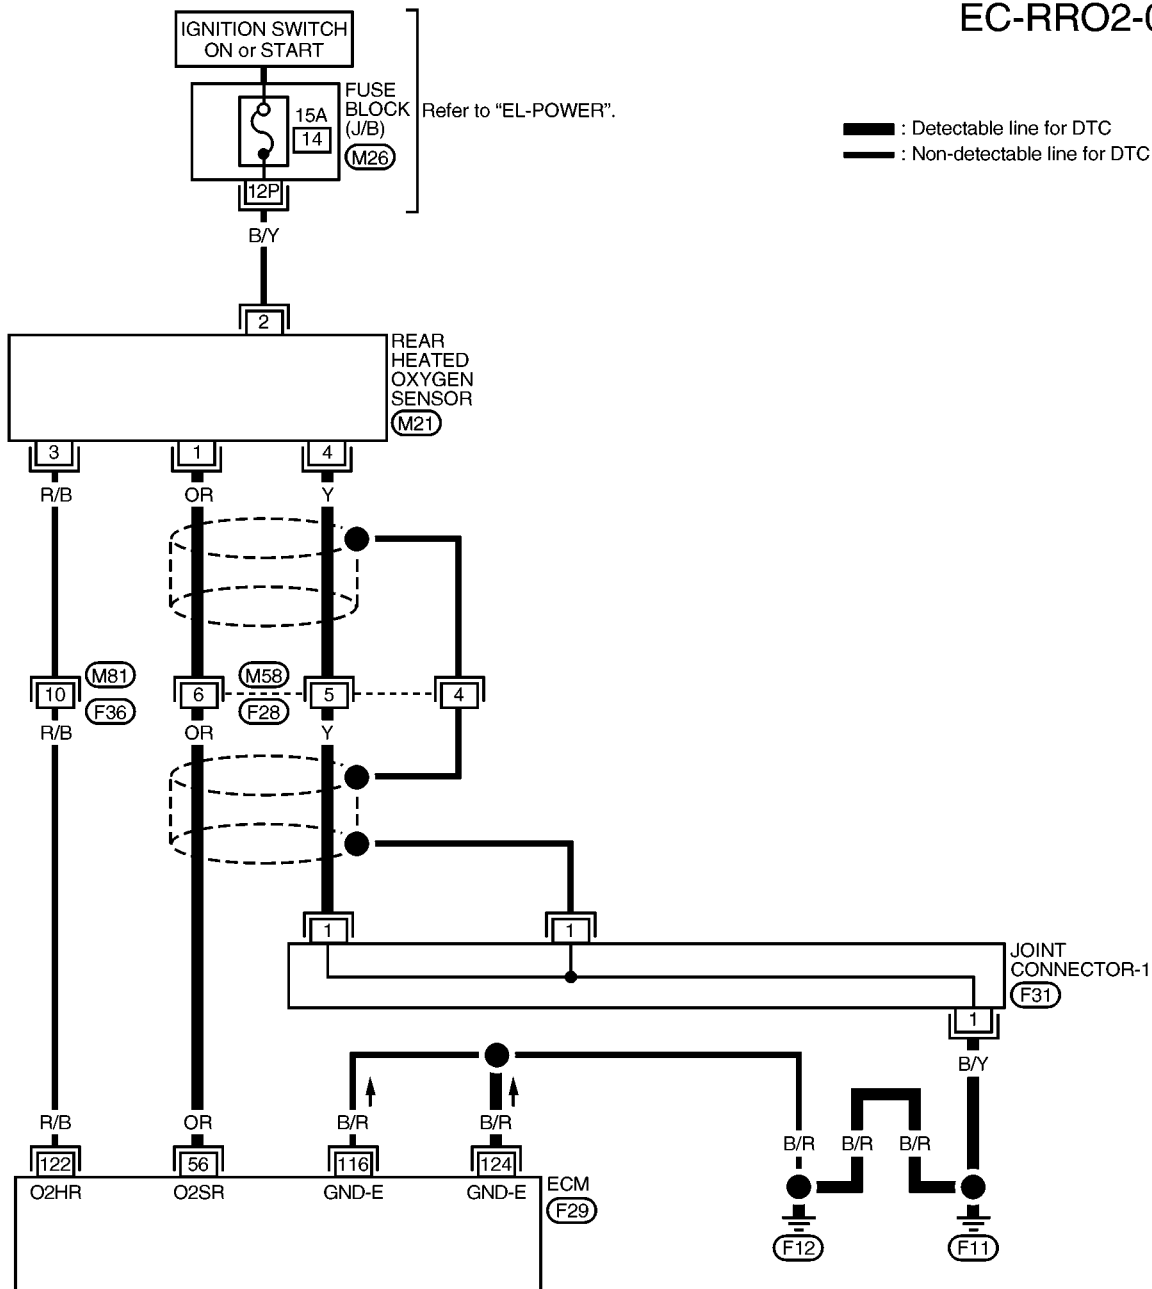

AEC988A

DTC P0138 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MAX. VOLTAGE MONITORING)

KA24DE


Diagnostic Procedure

Diagnostic Procedure

NEEC1007

1 RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten engine ground screws.

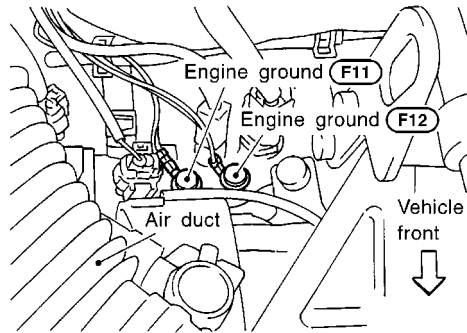

SEF325V

▶ GO TO 2.

DTC P0138 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MAX. VOLTAGE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

2 CLEAR THE SELF-LEARNING DATA

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching "CLEAR".


ACTIVE TEST	
SELF-LEARN CONTROL	100 %
MONITOR	
CMPS-RPM	XXX rpm
COOLAN TEMP/S	XXX °C
FR O2 SENSOR	XXX V
A/F ALPHA	XXX %

SEF165X

4. Run engine for at least 10 minutes at idle speed.
Is the 1st trip DTC P0171 detected? Is it difficult to start engine?

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 3 seconds at idle speed.

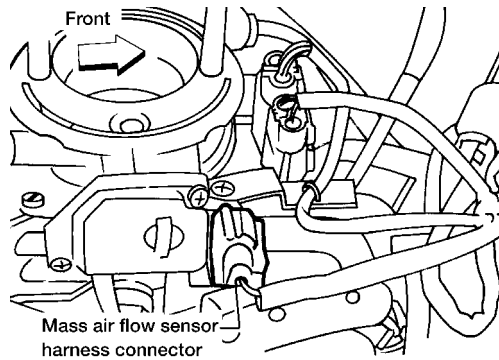

AEC131A

4. Stop engine and reconnect mass air flow sensor harness connector.
5. Make sure diagnostic trouble code No. 0102 is displayed in Diagnostic Test Mode II.
6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-69.
7. Make sure diagnostic trouble code No. 0505 is displayed in Diagnostic Test Mode II.
8. Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC 0115 detected? Is it difficult to start engine?

Yes or No


Yes	▶	Perform trouble diagnosis for DTC P0171. Refer to EC-279.
No	▶	GO TO 3.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0138 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MAX. VOLTAGE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

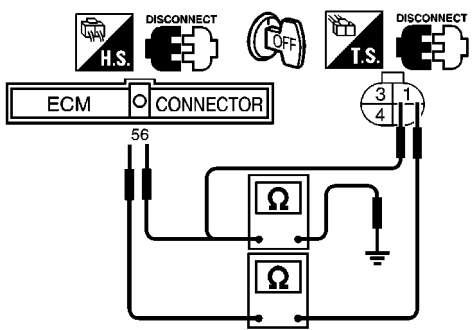3	CHECK INPUT SIGNAL CIRCUIT	
<p>1. Disconnect rear heated oxygen sensor harness connector and ECM harness connector.</p> <p>2. Check harness continuity between ECM harness connector F29 terminal 56 and terminal 1.</p>		
		
SEF157V		
<p>Continuity should exist.</p> <p>3. Check harness continuity between ECM terminal 56 (or terminal 1) and ground.</p> <p>Continuity should not exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M59, F27 ● Harness for open or short between ECM and rear heated oxygen sensor 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

5	CHECK GROUND CIRCUIT	
<p>1. Check harness continuity between rear heated oxygen sensor connector M21 terminal 4 and engine ground. Refer to :Wiring Diagram", EC-249.</p> <p>Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 6.
OK (Without CONSULT-II)	▶	GO TO 7.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0138 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MAX. VOLTAGE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

6 CHECK REAR HEATED OXYGEN SENSOR

With CONSULT-II

1. Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
2. Stop vehicle with engine running.
3. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "RR O2 SENSOR" as the monitor item with CONSULT-II.
4. Check "RR O2 SENSOR" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.


ACTIVE TEST	
FUEL INJECTION	25 %
MONITOR	
CMPS~RPM(REF)	XXX rpm
FR O2 SENSOR	XXX V
RR O2 SENSOR	XXX V
FR O2 MNTR	RICH
RR O2 MNTR	RICH

PEF102P

"RR O2 SENSOR" should be above 0.56V at least once when the "FUEL INJECTION" is +25%. "RR O2 SENSOR" should be below 0.54V at least once when the "FUEL INJECTION" is -25%.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

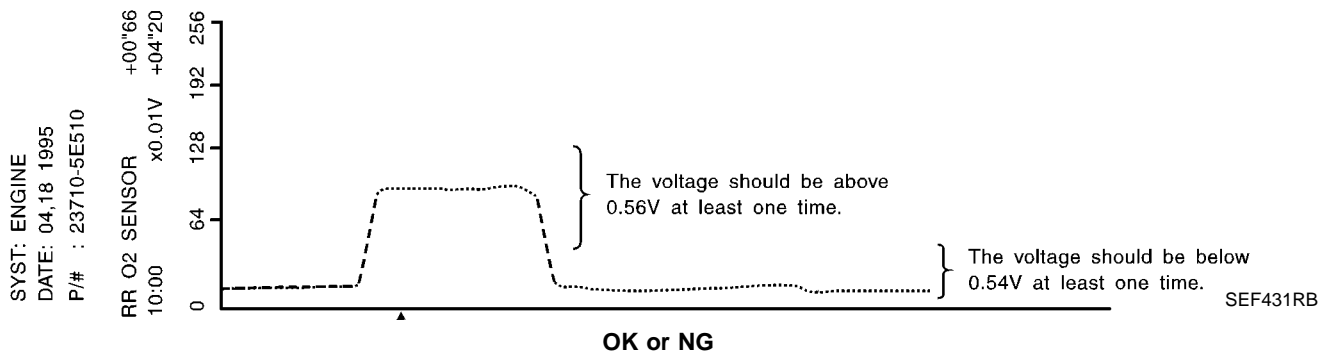

OK	▶	GO TO 8.
NG	▶	Replace rear heated oxygen sensor.

DTC P0138 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MAX. VOLTAGE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

7	CHECK REAR HEATED OXYGEN SENSOR						
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes. 2. Stop vehicle with engine running. 3. Set voltmeter probes between ECM terminals 56 (Rear heated oxygen sensor signal) and ECM ground. <div style="text-align: center; margin: 10px 0;"> </div> <ol style="list-style-type: none"> 4. Check the voltage when revving up to 4,000 rpm under no load at least 10 times. (Depress and release accelerator pedal as soon as possible.) The voltage should be above 0.56V at least once. If the voltage is above 0.56V at step 4, step 5 is not necessary. 5. Check the voltage when revving up to 5,000 rpm under no load. Or keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position (M/T), D position with "O/D" OFF (A/T). The voltage should be below 0.54V at least once. <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 8.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace rear heated oxygen sensor.</td> </tr> </table>		OK	▶	GO TO 8.	NG	▶	Replace rear heated oxygen sensor.
OK	▶	GO TO 8.					
NG	▶	Replace rear heated oxygen sensor.					

AEC874A

8	CHECK SHIELD CIRCUIT						
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect harness connectors F27. 3. Check harness continuity between harness connector F27 terminal 14 and ground. <div style="text-align: center; margin: 10px 0;"> </div> <p style="text-align: center; color: blue;">Continuity should exist.</p> <ol style="list-style-type: none"> 4. Also check harness for short to ground and short to power. 5. Then reconnect harness connectors. <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 10.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 9.</td> </tr> </table>		OK	▶	GO TO 10.	NG	▶	GO TO 9.
OK	▶	GO TO 10.					
NG	▶	GO TO 9.					

SEF158V

DTC P0138 REAR HEATED OXYGEN SENSOR (REAR HO2S) (MAX. VOLTAGE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

9	DETECT MALFUNCTIONING PART		
		Check the following. <ul style="list-style-type: none"> ● Joint connector-1 (Refer to "HARNESS LAYOUT" in EL section.) ● Harness for open or short between harness connector F27 and engine ground 	GI
	▶	Repair open circuit, short to ground or short to power in harness or connectors.	MA
10	CHECK INTERMITTENT INCIDENT		
		Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	EM
	▶	INSPECTION END	LC


EC

- FE
- CL
- MT
- AT
- TF
- PD
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- EL
- IDX

DTC P0139 REAR HEATED OXYGEN SENSOR (REAR HO2S) (RESPONSE MONITORING)

KA24DE

Component Description

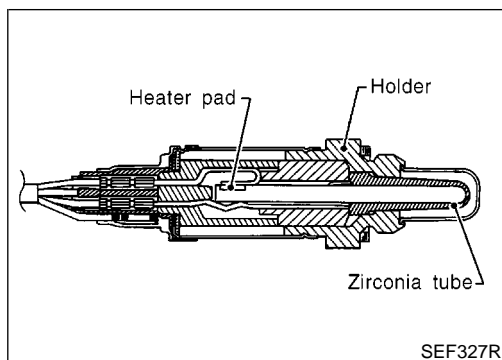

Component Description

NEEC1008

The rear heated oxygen sensor (Rear HO2S), after three way catalyst, monitors the oxygen level in the exhaust gas.

Even if switching characteristics of the front heated oxygen sensor are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the rear heated oxygen sensor.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the rear heated oxygen sensor is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

NEEC1009

Specification data are reference values.


MONITOR ITEM	CONDITION	SPECIFICATION
RR O2 SENSOR	● Engine: After warming up Revsing engine from idle to 3,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
RR O2 MNTR		LEAN ↔ RICH

ECM Terminals and Reference Value

NEEC1010

Specification data are reference values and are measured between each terminal and 43 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
56	OR	Rear heated oxygen sensor	[Engine is running] ● After warming up to normal operating temperature and revving engine from idle to 3,000 rpm	0 - Approximately 1.0V

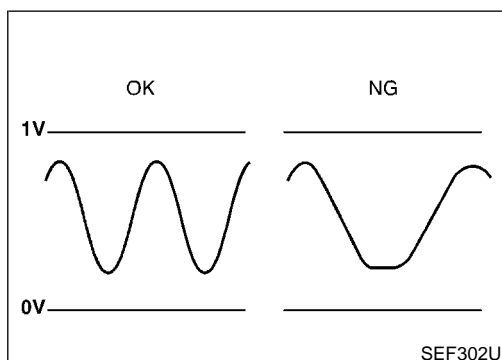

On Board Diagnosis Logic

NEEC1011

The rear heated oxygen sensor has a much longer switching time between rich and lean than the front heated oxygen sensor. The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of rear heated oxygen sensor, ECM monitors whether the switching response of the sensor's voltage is faster than specified during various driving conditions such as fuel-cut.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0139 0707	● It takes more than the specified time for the sensor to respond between rich and lean.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Rear heated oxygen sensor ● Fuel pressure ● Injectors ● Intake air leaks

DTC P0139 REAR HEATED OXYGEN SENSOR (REAR HO2S) (RESPONSE MONITORING)

KA24DE

DTC Confirmation Procedure

NEEC1012

RR O2 SENSOR P0139

WAIT
 OPEN ENGINE HOOD.
 KEEP ENGINE RUNNING AT
 IDLE SPEED FOR MAXIMUM
 OF 5 MINUTES.

SEF554X

RR O2 SENSOR P0139

MAINTAIN
 1800 - 2800 RPM UNTIL FINAL
 RESULT APPEARS.

1800 rpm
2300 rpm
2800 rpm

SEF555X

RR O2 SENSOR P0139

COMPLETED

SELF-DIAG RESULTS

SEF556X

DTC Confirmation Procedure

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Open engine hood before conducting following procedure With CONSULT-II


- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "DATA MONITOR" mode with CONSULT-II.
- 5) Make sure the "COOLANT TEMP/S" is more then 70°C (158°F).
- 6) Select "RR O2 SEN P0139", of "REAR O2 SENSOR" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 7) Start engine and follow the instructions of CONSULT-II.
- 8) Make sure the "OK" is displayed after touching "SELF-DIAG RESULTS".
 If NG is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-237.
 If "CAN NOT BE DIAGNOSED" is displayed, perform the following.
 - a) Stop engine and cool down "COOLANT TEMP/SE" to less then 70°C 158°F.
 - b) Turn ignition switch "ON"
 - c) Select "DATA MONITOR" mode with CONSULT-II.
 - d) Perform from step 6) again when the 'COOLANT TEMP/S" reach to 70°C 158°F.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0139 REAR HEATED OXYGEN SENSOR (REAR HO2S) (RESPONSE MONITORING)

KA24DE

Overall Function Check

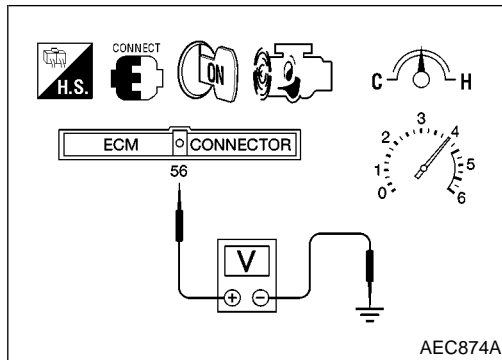

Overall Function Check

Use this procedure to check the overall function of the rear heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed. =NEEC1013

CAUTION:

Always drive vehicle at a safe speed.

⊗ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminals 56 (Rear heated oxygen sensor signal) and engine ground.
- 4) Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should change at more than 0.06V for 1 second during this procedure.
If the voltage can be confirmed in step 4, step 5 is not necessary.
- 5) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position.
The voltage should change at more than 0.06V for 1 second during this procedure.
- 6) If NG, go to "Diagnostic Procedure", EC-260.

DTC P0139 REAR HEATED OXYGEN SENSOR (REAR HO2S) (RESPONSE MONITORING)

KA24DE
Wiring Diagram

Wiring Diagram

NEEC1014

EC-RRO2-01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS





BT

HA

SC

EL

IDX

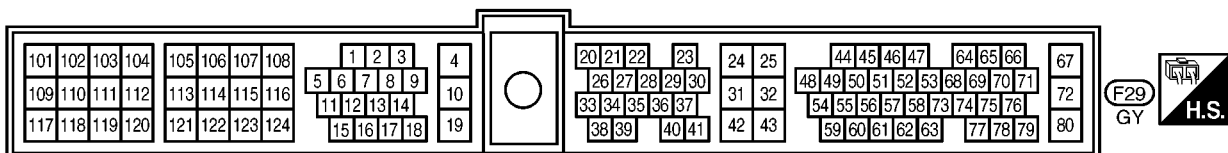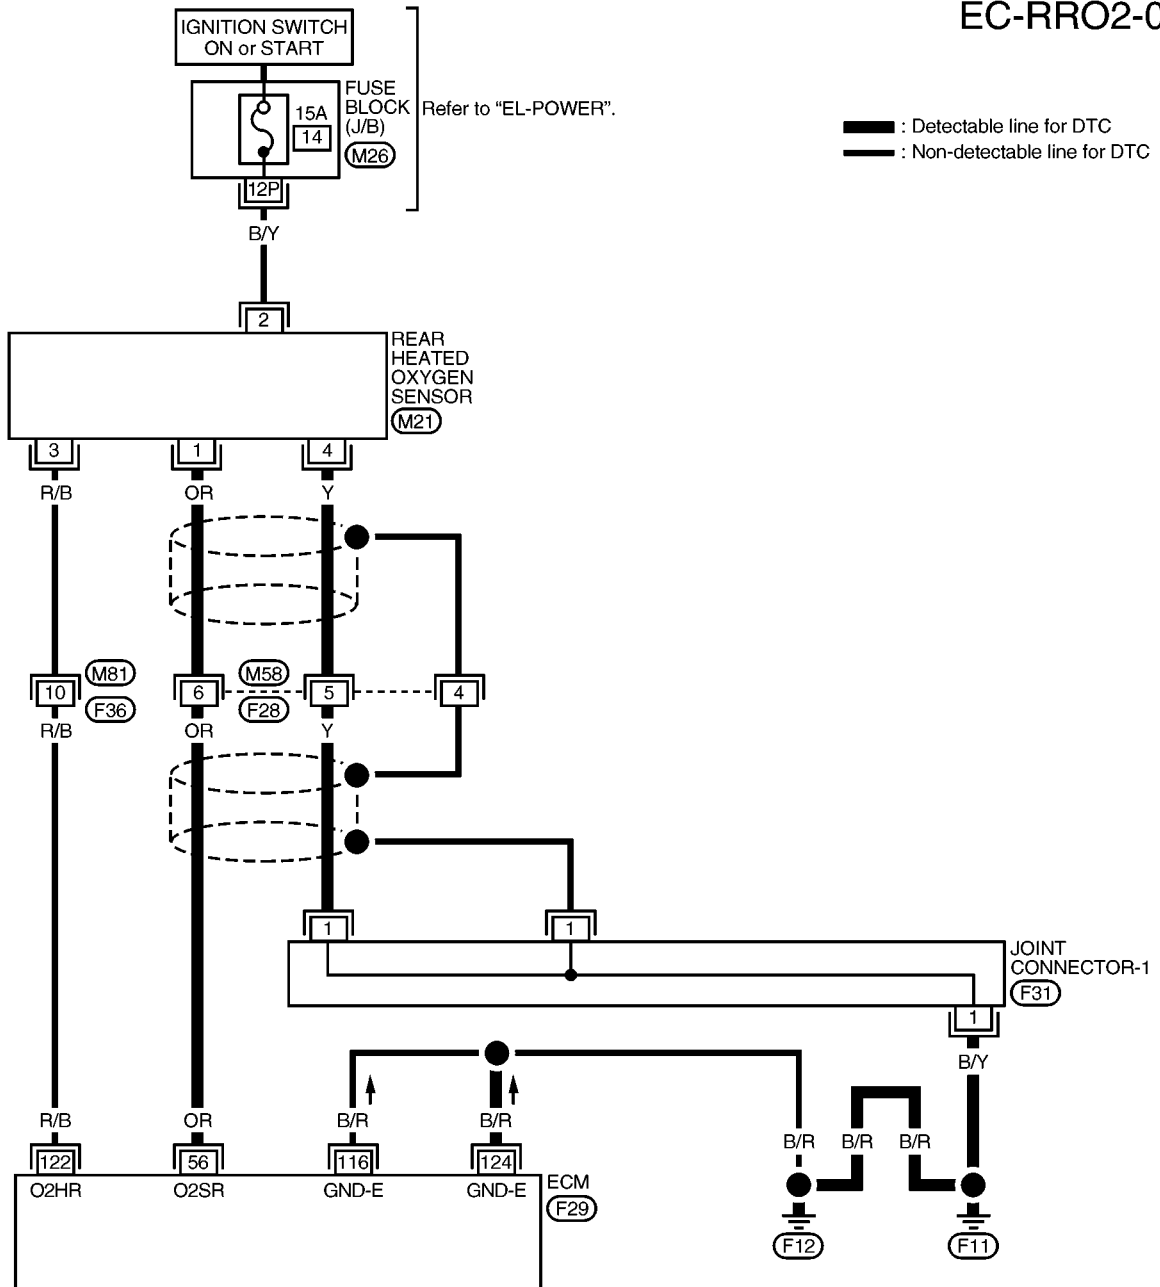

AEC988A

DTC P0139 REAR HEATED OXYGEN SENSOR (REAR HO2S) (RESPONSE MONITORING)

KA24DE


Diagnostic Procedure

Diagnostic Procedure

NEEC1015

1 RETIGHTEN GROUND SCREWS

1. Turn ignition switch OFF.
2. Loosen and retighten engine ground screws.

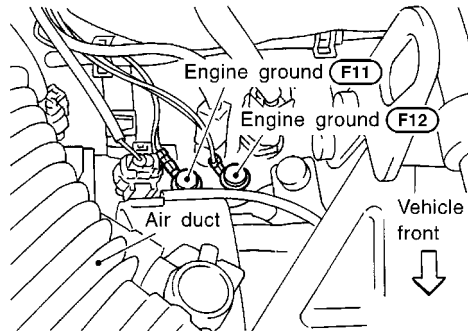

SEF325V

▶ GO TO 2.

DTC P0139 REAR HEATED OXYGEN SENSOR (REAR HO2S) (RESPONSE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

2 CLEAR THE SELF-LEARNING DATA

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching "CLEAR".


ACTIVE TEST	
SELF-LEARN CONTROL	100 %
MONITOR	
CMPS-RPM	XXX rpm
COOLAN TEMP/S	XXX °C
FR O2 SENSOR	XXX V
A/F ALPHA	XXX %

SEF165X

4. Run engine for at least 10 minutes at idle speed.
Is the 1st trip DTC P0172 detected? Is it difficult to start engine?

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch "OFF".
3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 3 seconds at idle speed.

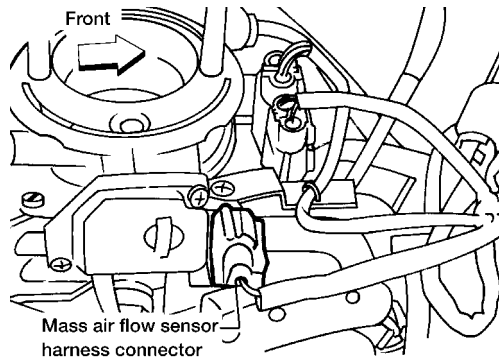

AEC131A

4. Stop engine and reconnect mass air flow sensor harness connector.
5. Make sure diagnostic trouble code No. 0102 is displayed in Diagnostic Test Mode II.
6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-69.
7. Make sure diagnostic trouble code No. 0505 is displayed in Diagnostic Test Mode II.
8. Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC 0114 or 0115 detected? Is it difficult to start engine?

Yes or No

Yes	▶	Perform trouble diagnosis for DTC P0171 or P0172. Refer to EC-279 or EC-287.
No	▶	GO TO 3.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0139 REAR HEATED OXYGEN SENSOR (REAR HO2S) (RESPONSE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

3	CHECK INPUT SIGNAL CIRCUIT	
<p>1. Disconnect rear heated oxygen sensor harness connector and ECM harness connector.</p> <p>2. Check harness continuity between ECM terminal 56 and terminal 1.</p>		
SEF157V		
<p>Continuity should exist.</p> <p>3. Check harness continuity between ECM terminal 56 (or terminal 1) and ground.</p> <p>Continuity should not exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

4	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M59, F27 ● Harness for open or short between rear heated oxygen sensor and ECM 		
	▶	Repair open circuit or short to ground or short to power in harness or connectors.

5	CHECK GROUND CIRCUIT	
<p>1. Check harness continuity between rear heated oxygen sensor terminal 4 and engine ground. Refer to the wiring diagram.</p> <p>Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 6.
OK (Without CONSULT-II)	▶	GO TO 7.
NG	▶	GO TO 4.

DTC P0139 REAR HEATED OXYGEN SENSOR (REAR HO2S) (RESPONSE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

6 CHECK REAR HEATED OXYGEN SENSOR

With CONSULT-II

1. Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
2. Stop vehicle with engine running.
3. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "RR O2 SENSOR" as the monitor item with CONSULT-II.
4. Check "RR O2 SENSOR" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.


ACTIVE TEST	
FUEL INJECTION	25 %
MONITOR	
CMPS~RPM(REF)	XXX rpm
FR O2 SENSOR	XXX V
RR O2 SENSOR	XXX V
FR O2 MNTR	RICH
RR O2 MNTR	RICH

PEF102P

"RR O2 SENSOR" should be above 0.56V at least once when the "FUEL INJECTION" is +25%. "RR O2 SENSOR" should be below 0.54V at least once when the "FUEL INJECTION" is -25%.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

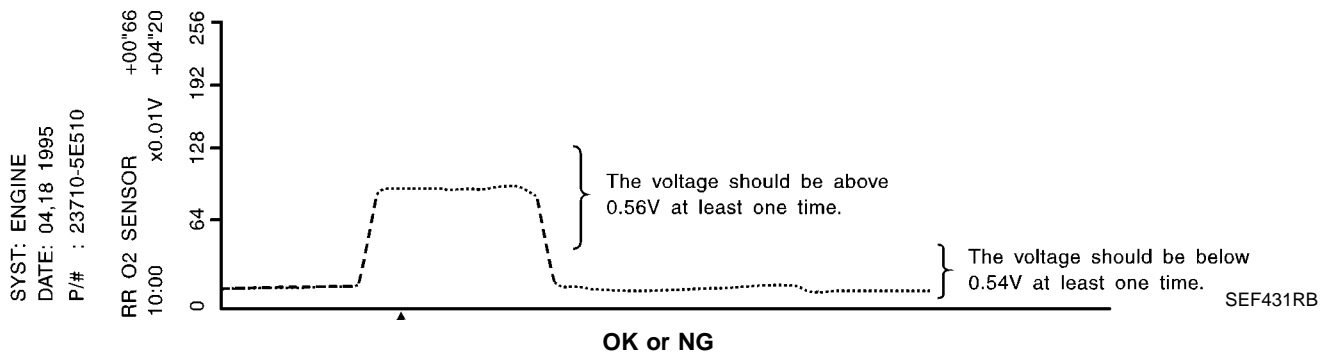

OK	▶	GO TO 8.
NG	▶	Replace rear heated oxygen sensor.

DTC P0139 REAR HEATED OXYGEN SENSOR (REAR HO2S) (RESPONSE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

7	CHECK REAR HEATED OXYGEN SENSOR						
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes. 2. Stop vehicle with engine running. 3. Set voltmeter probes between ECM terminals 56 (Rear heated oxygen sensor signal) and engine ground. <div style="text-align: center; margin: 10px 0;"> </div> <ol style="list-style-type: none"> 4. Check the voltage when revving up to 4,000 rpm under no load at least 10 times. (Depress and release accelerator pedal as soon as possible.) The voltage should be above 0.56V at least once. If the voltage is above 0.56V at step 4, step 5 is not necessary. 5. Check the voltage when revving up to 5,000 rpm under no load. Or keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position. The voltage should be below 0.54V at least once. <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 8.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace rear heated oxygen sensor.</td> </tr> </table>		OK	▶	GO TO 8.	NG	▶	Replace rear heated oxygen sensor.
OK	▶	GO TO 8.					
NG	▶	Replace rear heated oxygen sensor.					

AEC874A

8	CHECK SHIELD CIRCUIT						
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect harness connectors F27. 3. Check harness continuity between harness connector F27 terminal 14 and ground. <div style="text-align: center; margin: 10px 0;"> </div> <p style="text-align: center; color: blue;">Continuity should exist.</p> <ol style="list-style-type: none"> 4. Also check harness for short to ground and short to power. 5. Then reconnect harness connectors. <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 10.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 9.</td> </tr> </table>		OK	▶	GO TO 10.	NG	▶	GO TO 9.
OK	▶	GO TO 10.					
NG	▶	GO TO 9.					

SEF158V

DTC P0139 REAR HEATED OXYGEN SENSOR (REAR HO2S) (RESPONSE MONITORING)

KA24DE

Diagnostic Procedure (Cont'd)

9	DETECT MALFUNCTIONING PART		
		Check the following. <ul style="list-style-type: none"> ● Joint connector-1 (Refer to "HARNES LAYOUT", <i>EL-239</i>.) ● Harness for open or short between harness connector F27 and engine ground 	GI
	▶	Repair open circuit, short to ground or short to power in harness or connectors.	MA
10	CHECK INTERMITTENT INCIDENT		
		Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	EM
	▶	INSPECTION END	LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX

DTC P0140 REAR HEATED OXYGEN SENSOR (REAR HO2S) (HIGH VOLTAGE)

KA24DE

Component Description

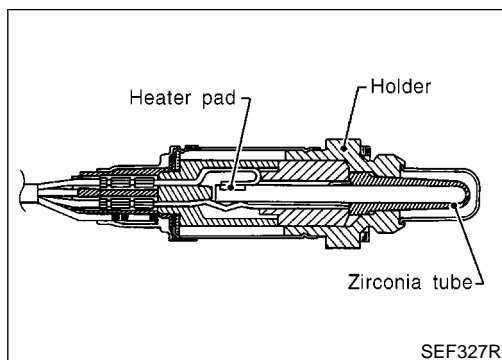

Component Description

NEEC1016

The rear heated oxygen sensor (Rear HO2S), after three way catalyst, monitors the oxygen level in the exhaust gas.

Even if switching characteristics of the front heated oxygen sensor are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the rear heated oxygen sensor.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the rear heated oxygen sensor is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

NEEC1017

Specification data are reference values.


MONITOR ITEM	CONDITION	SPECIFICATION
RR O2 SENSOR	● Engine: After warming up Revsing engine from idle to 3,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
RR O2 MNTR		LEAN ↔ RICH

ECM Terminals and Reference Value

NEEC1018

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
56	OR	Rear heated oxygen sensor	[Engine is running] ● After warming up to normal operating temperature and revving engine from idle to 3,000 rpm	0 - Approximately 1.0V

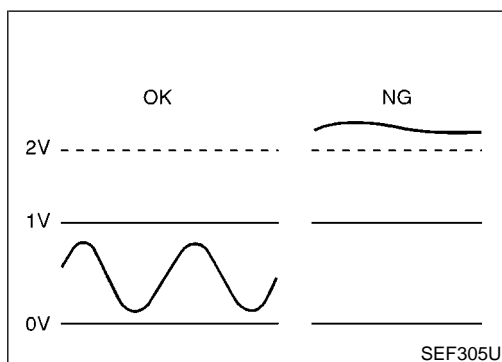

On Board Diagnosis Logic

NEEC1019

The rear heated oxygen sensor has a much longer switching time between rich and lean than the front heated oxygen sensor. The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of rear heated oxygen sensor, ECM monitors whether or not the voltage is too high during various driving conditions such as fuel-cut.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0140 0512	● An excessively high voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Rear heated oxygen sensor

DTC P0140 REAR HEATED OXYGEN SENSOR (REAR HO2S) (HIGH VOLTAGE)

KA24DE

DTC Confirmation Procedure

5

DATA MONITOR	
MONITORING	NO FAIL
CMPS~RPM(REF)	XXX rpm
COOLAN TEMP/S	XXX °C
VHCL SPEED SE	XXX km/h
B/FUEL SCHDL	XXX msec

PEF168V

DTC Confirmation Procedure

NEEC1020

NOTE:


If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

Ⓜ With CONSULT-II

- 1) Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 3) Maintain the following conditions for at least 5 consecutive seconds.

CMPS-RPM (REF)	1,400 - 3,200 rpm
VHCL SPEED SE	64 - 120 km/h (40 - 75 MPH)
B/FUEL SCHDL	0.5 - 4.8 msec (A/T) 0.5 - 5.2 msec (M/T)
COOLAN TEMP/S	70 - 100°C (158 - 212°F)
Selector lever	Suitable position

- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-269.

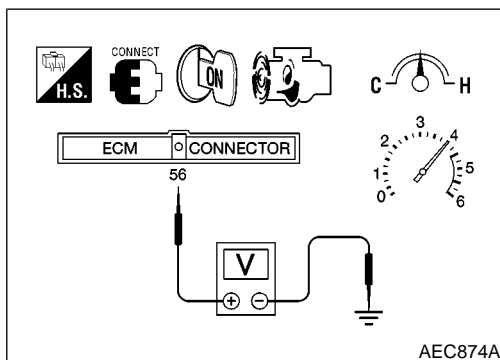

Overall Function Check

NEEC1021

Use this procedure to check the overall function of the rear heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Ⓧ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminals 56 (Rear heated oxygen sensor signal) and ECM ground.
- 4) Check the voltage after revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be below 2V during this procedure.
- 5) If NG, go to "Diagnostic Procedure", EC-269.

DTC P0140 REAR HEATED OXYGEN SENSOR (REAR HO2S) (HIGH VOLTAGE)





KA24DE

Wiring Diagram

Wiring Diagram

NEEC1022

EC-RRO2-01

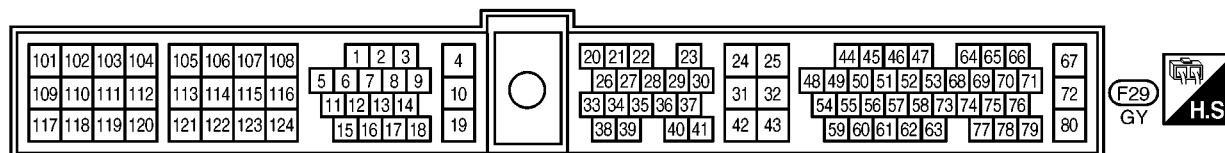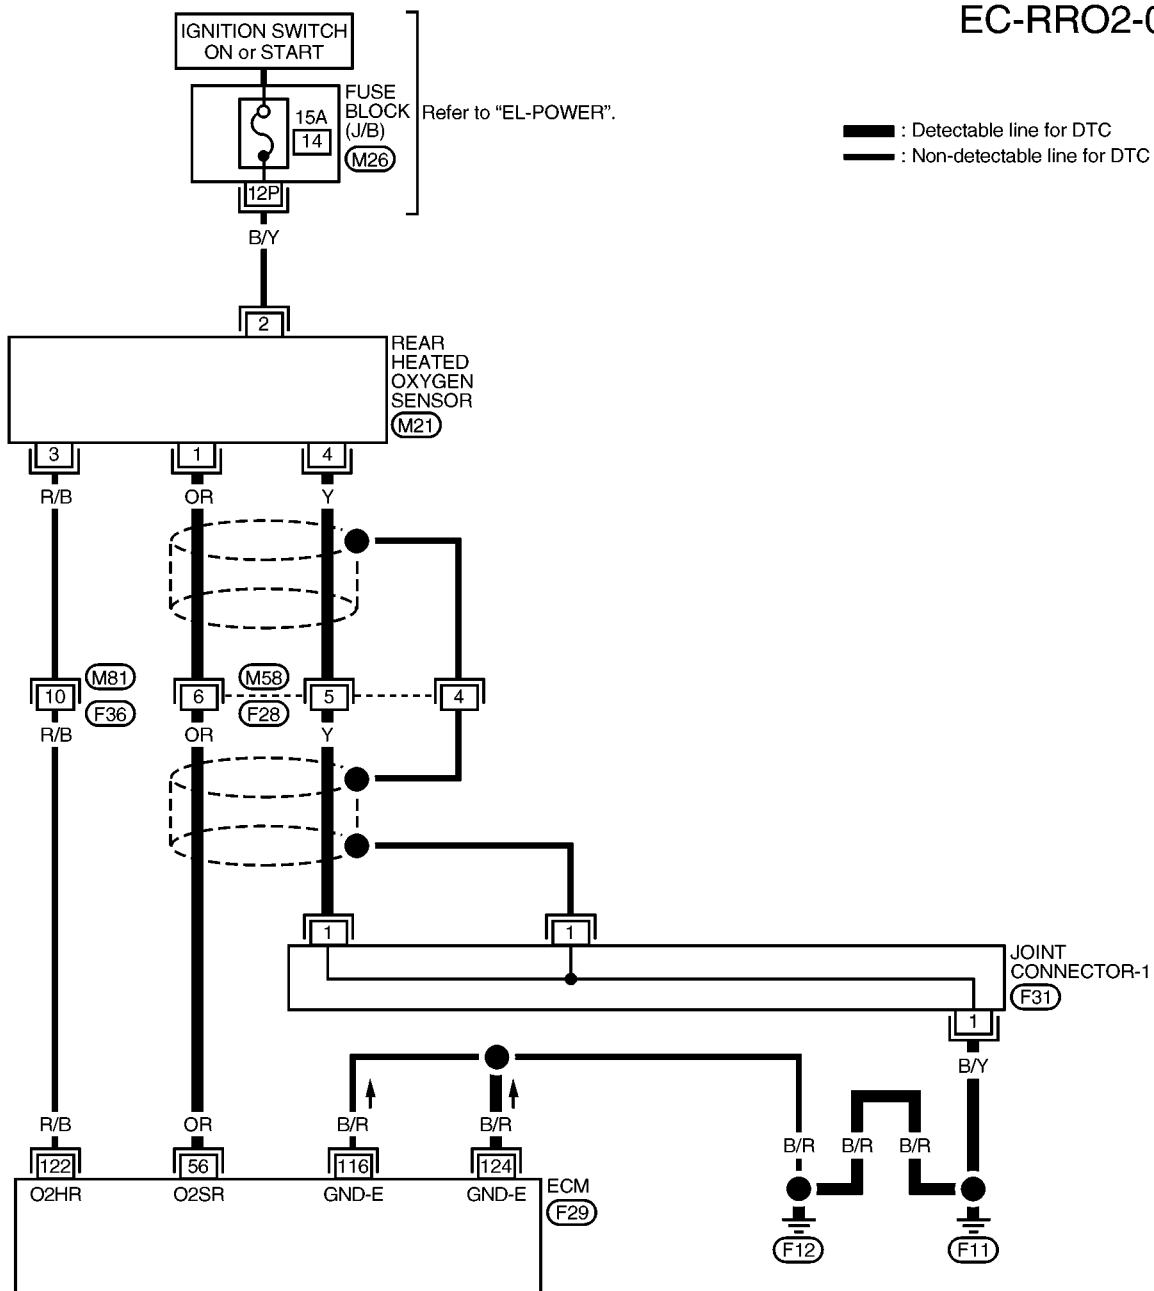

AEC988A


DTC P0140 REAR HEATED OXYGEN SENSOR (REAR HO2S) (HIGH VOLTAGE)


KA24DE

Diagnostic Procedure

Diagnostic Procedure

NEEC1023

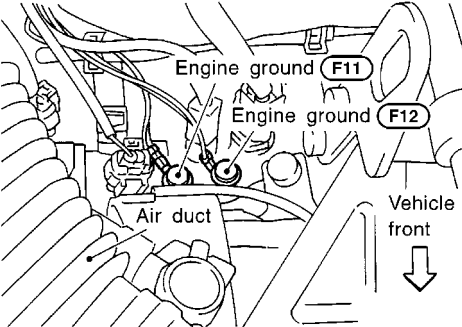1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch OFF. 2. Loosen and retighten engine ground screws.</p>	
	
SEF325V	
▶	GO TO 2.

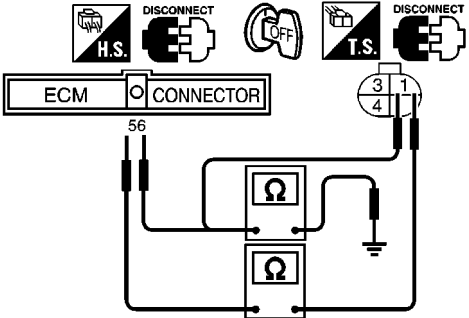2	CHECK INPUT SIGNAL CIRCUIT
<p>1. Disconnect rear heated oxygen sensor harness connector and ECM harness connector. 2. Check harness continuity between ECM terminal 56 and terminal 1.</p>	
	
SEF157V	
<p>Continuity should exist.</p> <p>3. Check harness continuity between ECM terminal 56 (or terminal 1) and ground. Continuity should not exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 4.
NG	▶ GO TO 3.

3	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M59, F27 ● Harness for open or short between rear heated oxygen sensor and ECM 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0140 REAR HEATED OXYGEN SENSOR (REAR HO2S) (HIGH VOLTAGE)

KA24DE

Diagnostic Procedure (Cont'd)

4		CHECK GROUND CIRCUIT
1. Check harness continuity between rear heated oxygen sensor terminal 4 and engine ground. Refer to "Wiring Diagram", EC-268. Continuity should exist.		
2. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

5		CHECK HARNESS CONNECTOR
Check rear heated oxygen sensor harness connector for water. Water should not exist.		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 6.
OK (Without CONSULT-II)	▶	GO TO 7.
NG	▶	Repair or replace harness connector.

DTC P0140 REAR HEATED OXYGEN SENSOR (REAR HO2S) (HIGH VOLTAGE)

KA24DE

Diagnostic Procedure (Cont'd)

6 CHECK REAR HEATED OXYGEN SENSOR

With CONSULT-II

1. Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
2. Stop vehicle with engine running.
3. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "RR O2 SENSOR" as the monitor item with CONSULT-II.
4. Check "RR O2 SENSOR" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.


ACTIVE TEST	
FUEL INJECTION	25 %
MONITOR	
CMPS~RPM(REF)	XXX rpm
FR O2 SENSOR	XXX V
RR O2 SENSOR	XXX V
FR O2 MNTR	RICH
RR O2 MNTR	RICH

PEF102P

"RR O2 SENSOR" should be above 0.56V at least once when the "FUEL INJECTION" is +25%. "RR O2 SENSOR" should be below 0.54V at least once when the "FUEL INJECTION" is -25%.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

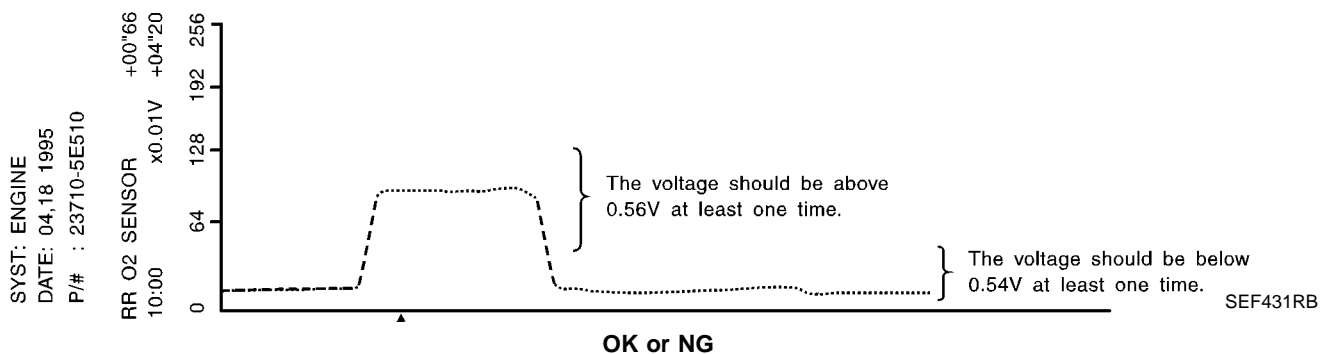

OK	▶	GO TO 8.
NG	▶	Replace rear heated oxygen sensor.

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0140 REAR HEATED OXYGEN SENSOR (REAR HO2S) (HIGH VOLTAGE)

KA24DE

Diagnostic Procedure (Cont'd)

7	CHECK REAR HEATED OXYGEN SENSOR						
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes. 2. Stop vehicle with engine running. 3. Set voltmeter probes between ECM terminals 56 (Rear heated oxygen sensor signal) and ECM ground. <div style="text-align: center; margin: 10px 0;"> </div> <ol style="list-style-type: none"> 4. Check the voltage when revving up to 4,000 rpm under no load at least 10 times. (Depress and release accelerator pedal as soon as possible.) The voltage should be above 0.56V at least once. If the voltage is above 0.56V at step 4, step 5 is not necessary. 5. Check the voltage when revving up to 5,000 rpm under no load. Or keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position. The voltage should be below 0.54V at least once. <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 8.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace rear heated oxygen sensor.</td> </tr> </table>		OK	▶	GO TO 8.	NG	▶	Replace rear heated oxygen sensor.
OK	▶	GO TO 8.					
NG	▶	Replace rear heated oxygen sensor.					

AEC874A

8	CHECK SHIELD CIRCUIT						
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect harness connectors F27. 3. Check harness continuity between harness connector F27 terminal 14 and ground. <div style="text-align: center; margin: 10px 0;"> </div> <p style="text-align: center; color: blue;">Continuity should exist.</p> <ol style="list-style-type: none"> 4. Also check harness for short to ground and short to power. 5. Then reconnect harness connectors. <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 10.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 9.</td> </tr> </table>		OK	▶	GO TO 10.	NG	▶	GO TO 9.
OK	▶	GO TO 10.					
NG	▶	GO TO 9.					

SEF158V

DTC P0140 REAR HEATED OXYGEN SENSOR (REAR HO2S) (HIGH VOLTAGE)

KA24DE

Diagnostic Procedure (Cont'd)

9	DETECT MALFUNCTIONING PART		
		Check the following. <ul style="list-style-type: none"> ● Joint connector-1 (Refer to "HARNES LAYOUT", <i>EL-239</i>.) ● Harness for open or short between harness connector F27 and engine ground 	GI
	▶	Repair open circuit, short to ground or short to power in harness or connectors.	MA
10	CHECK INTERMITTENT INCIDENT		
		Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	EM
	▶	INSPECTION END	LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

Description

Description

NEEC1024

SYSTEM DESCRIPTION

NEEC1024S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	Rear heated oxygen sensor heater control	Rear heated oxygen sensor heater

The ECM performs ON/OFF control of the rear heated oxygen sensor heater corresponding to the engine speed.

OPERATION

NEEC1024S02

Engine condition	Rear heated oxygen sensor heater
Ignition switch ON Engine stopped	OFF
Engine is running.	ON

CONSULT-II Reference Value in Data Monitor Mode

NEEC1025

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
RR O2 HEATER	<ul style="list-style-type: none"> Engine speed: Idle [After driving for 2 minutes at a speed of 70 km/h (43 MPH) or more] 	ON
	<ul style="list-style-type: none"> Ignition switch ON (Engine stopped) 	OFF

ECM Terminals and Reference Value

NEEC1026

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
122	R/B	Rear heated oxygen sensor heater	[Engine is running] <ul style="list-style-type: none"> After driving for 2 minutes at a speed of 70 km/h (43 MPH) or more 	Approximately 0.4V
			[Ignition switch "ON"] <ul style="list-style-type: none"> Engine stopped 	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NEEC1027

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0141 0902	<ul style="list-style-type: none"> The current amperage in the rear heated oxygen sensor heater circuit is out of the normal range. (An improper voltage drop signal is sent to ECM through the rear heated oxygen sensor heater.) 	<ul style="list-style-type: none"> Harness or connectors (The rear heated oxygen sensor heater circuit is open or shorted.) Rear heated oxygen sensor heater

DTC Confirmation Procedure

NEEC1028

NOTE:

If "DTC Confirmation Procedure " has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is in between 10.5V at idle.

2

DATA MONITOR	
MONITORING	NO FAIL
CMPS~RPM(REF)	XXX rpm
VHCL SPEED SE	XXX km/h
THRTL POS SEN	XXX v

PEF723W

With CONSULT-II

- 1) Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-277.

With GST

- 1) Start engine.
- 2) Drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 3) Stop vehicle and let engine idle for at least 6 seconds.
- 4) Turn ignition switch "OFF" and wait at least 10 seconds.
- 5) Start engine.
- 6) Drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes
- 7) Stop vehicle and let engine idle for at least 6 seconds.
- 8) Select "MODE 3" with GST.
- 9) If DTC is detected, go to "Diagnostic Procedure", EC-277.

When using GST, "DTC Confirmation Procedure " should be performed twice as much as when using CONSULT-II or ECM (Diagnostic Test Mode II) because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II or ECM (Diagnostic Test Mode II) is recommended.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0141 REAR HEATED OXYGEN SENSOR HEATER






KA24DE

Wiring Diagram

Wiring Diagram

NEEC1029


EC-RR02/H-01

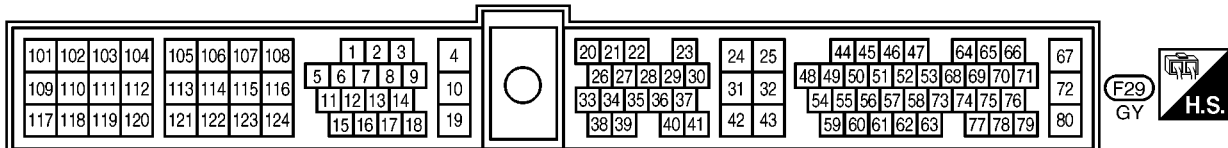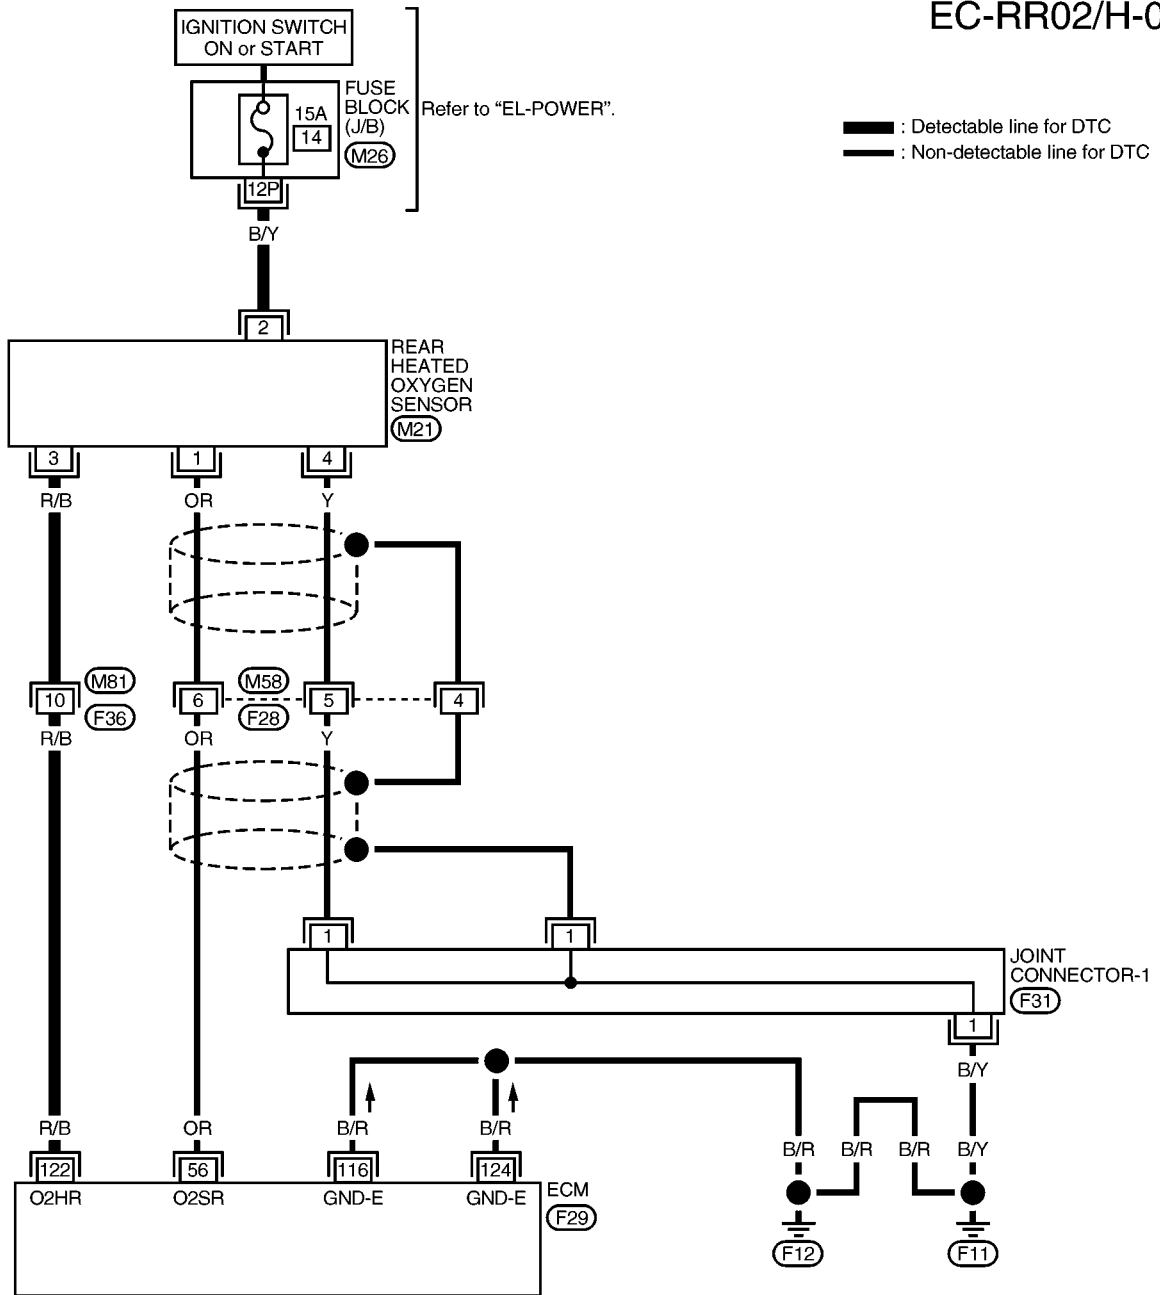

AEC989A

Diagnostic Procedure

NEEC1030

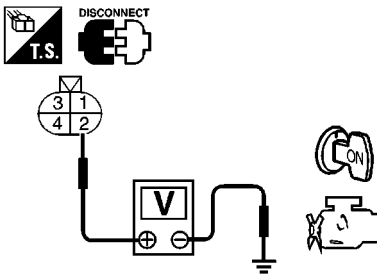1	CHECK POWER SUPPLY	<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect rear heated oxygen sensor harness connector. 3. Turn ignition switch ON. 4. Check voltage between terminal 2 and ground. <div style="text-align: center; margin: 10px 0;">  </div> <p style="color: blue; margin-left: 20px;">Voltage: Battery voltage</p> <p style="text-align: right; margin-right: 20px;"><small>SEF218W</small></p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	GI MA EM LC EC FE
----------	---------------------------	--	---

OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART	Check the following. <ul style="list-style-type: none"> ● 15A fuse ● Harness for open or short between rear heated oxygen sensor and 15A fuse <p style="text-align: right; margin-right: 20px;">▶ Repair harness or connectors.</p>	AT TF
----------	-----------------------------------	---	----------

3	CHECK GROUND CIRCUIT	<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect ECM harness connector. 3. Check harness continuity between rear heated oxygen sensor terminal 3 and ECM terminal 122. Refer to the wiring diagram. Continuity should exist. 4. Also check harness for short to ground and short to power. <p style="text-align: center; margin-top: 10px;">OK or NG</p>	PD AX SU
----------	-----------------------------	--	----------------

OK	▶	GO TO 5.
NG	▶	GO TO 4.

4	DETECT MALFUNCTIONING PART	Check the following. <ul style="list-style-type: none"> ● Harness connectors M58, F28 ● Harness for open or short between rear heated oxygen sensor heater and ECM <p style="text-align: right; margin-right: 20px;">▶ Repair open circuit or short to ground or short to power in harness or connectors.</p>	BR ST RS BT
----------	-----------------------------------	---	----------------------


OK	▶	GO TO 5.
NG	▶	GO TO 4.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

5 CHECK REAR HEATED OXYGEN SENSOR HEATER

Check the following.

1. Check resistance between terminals 2 and 3.

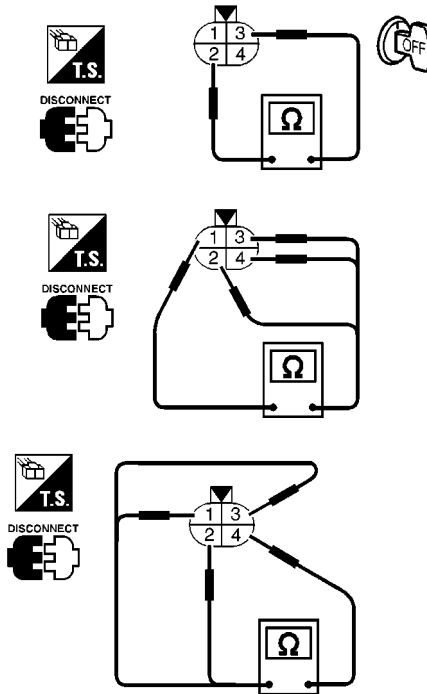

Resistance: 2.3 - 4.3Ω at 25°C (77°F)

SEF221W

2. Check continuity.

Terminal No.	Continuity
1 and 2, 3, 4	No
4 and 1, 2, 3	

MTBL0330

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK	▶	GO TO 6.
NG	▶	Replace rear heated oxygen sensor.

6 CHECK INTERMITTENT INCIDENT

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.

	▶	INSPECTION END
--	---	-----------------------

DTC P0171 FUEL INJECTION SYSTEM FUNCTION (LEAN SIDE)

KA24DE

On Board Diagnosis Logic

On Board Diagnosis Logic

NEEC1031

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the front heated oxygen sensor. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios. In case the amount of the compensation value is extremely large (The actual mixture ratio is too lean.), the ECM judges the condition as the fuel injection system malfunction and lights up the MIL (2 trip detection logic).

Sensor	Input Signal to ECM	ECM function	Actuator
Front heated oxygen sensor	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection & mixture ratio control	Injectors

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0171 0115	<ul style="list-style-type: none"> Fuel injection system does not operate properly. The amount of mixture ratio compensation is too large. (The mixture ratio is too lean.) 	<ul style="list-style-type: none"> Intake air leaks Front heated oxygen sensor Injectors Exhaust gas leaks Incorrect fuel pressure Lack of fuel Mass air flow sensor

4


ACTIVE TEST	
SELF~LEARN CONTROL	100 %
MONITOR	
COMP~LEARN	XXX rpm
COOLAN TEMP/S	XXX °C
FR O2 SENSOR	XXX V
A/F ALPHA	XXX %

PEF737W

6

DATA MONITOR	
MONITORING	NO FAIL
CMPS~RPM(REF)	XXX rpm

PEF712T

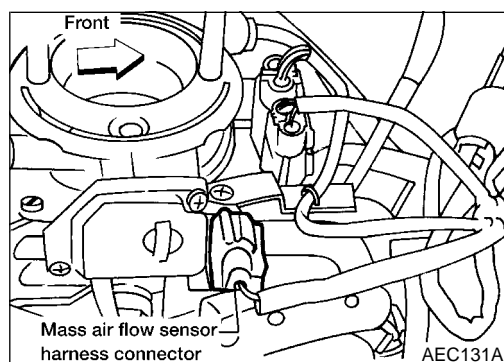

DTC Confirmation Procedure

NEEC1032

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

Ⓜ With CONSULT-II

- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 5 seconds.
- Turn ignition switch ON and select "SELF-LEARN CONTROL" in "ACTIVE TEST" mode with CONSULT-II.
- Clear the self-learning control coefficient by touching "CLEAR".
- Select "DATA MONITOR" mode with CONSULT-II.
- Start engine again and let it idle for at least 10 minutes. The 1st trip DTC P0171 should be detected at this stage, if a malfunction exists. If so, go to "Diagnostic Procedure", EC-282.
- If it is difficult to start engine at step 6, the fuel injection system has a malfunction.
- Crank engine while depressing accelerator pedal. If engine starts, go to "Diagnostic Procedure", EC-282. If engine does not start, visually check for exhaust and intake air leak.

Ⓜ With GST

- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 5 seconds.
- Disconnect mass air flow sensor harness connector. Then restart and run engine for at least 3 seconds at idle speed.
- Stop engine and reconnect mass air flow sensor harness connector.
- Select "MODE 7" with GST. Make sure 1st trip DTC P0100 is detected.
- Select "MODE 4" with GST and erase the 1st trip DTC P0100.

DTC P0171 FUEL INJECTION SYSTEM FUNCTION (LEAN SIDE)

KA24DE

DTC Confirmation Procedure (Cont'd)

- 7) Start engine again and run it for at least 10 minutes at idle speed.
- 8) Select "MODE 7" with GST. The 1st trip DTC P0171 should be detected at this stage, if a malfunction exists. If so, go to "Diagnostic Procedure", EC-282.
- 9) If it is difficult to start engine at step 8, the fuel injection system has a malfunction.
- 10) Crank engine while depressing accelerator pedal. If engine starts, go to "Diagnostic Procedure", EC-282. If engine does not start, visually check for exhaust and intake air leak.

No Tools

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Disconnect mass air flow sensor harness connector. Then restart and run engine for at least 3 seconds at idle speed.
- 4) Stop engine and reconnect mass air flow sensor harness connector.
- 5) Turn ignition switch OFF.
- 6) Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM. Make sure 1st trip DTC 0102 is detected.
- 7) Erase the 1st trip DTC 0102 by changing from Diagnostic Test Mode II to Diagnostic Test Mode I. Refer to "How to Erase DTC (No Tools)", EC-70.
- 8) Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM. Make sure DTC 0505 is detected.
- 9) Start engine again and run it for at least 10 minutes at idle speed. The 1st trip DTC 0115 should be detected at this stage, if a malfunction exists. If so, go to "Diagnostic Procedure", EC-282.
- 10) If it is difficult to start engine at step 9, the fuel injection system also has a malfunction.
- 11) Crank engine while depressing accelerator pedal. If engine starts, go to "Diagnostic Procedure", EC-282. If engine does not start, visually check for exhaust and intake air leak.

DTC P0171 FUEL INJECTION SYSTEM FUNCTION (LEAN SIDE)

KA24DE

Wiring Diagram

Wiring Diagram

NEEC1033

EC-FUEL-01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS








BT

HA

SC

EL

IDX

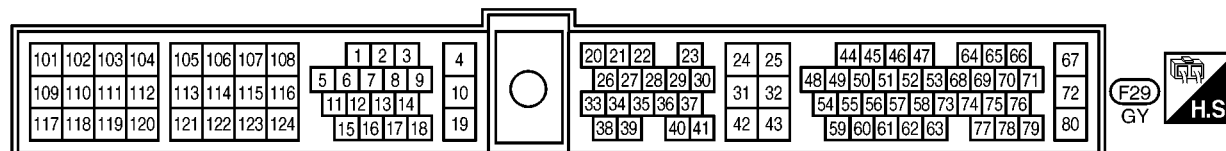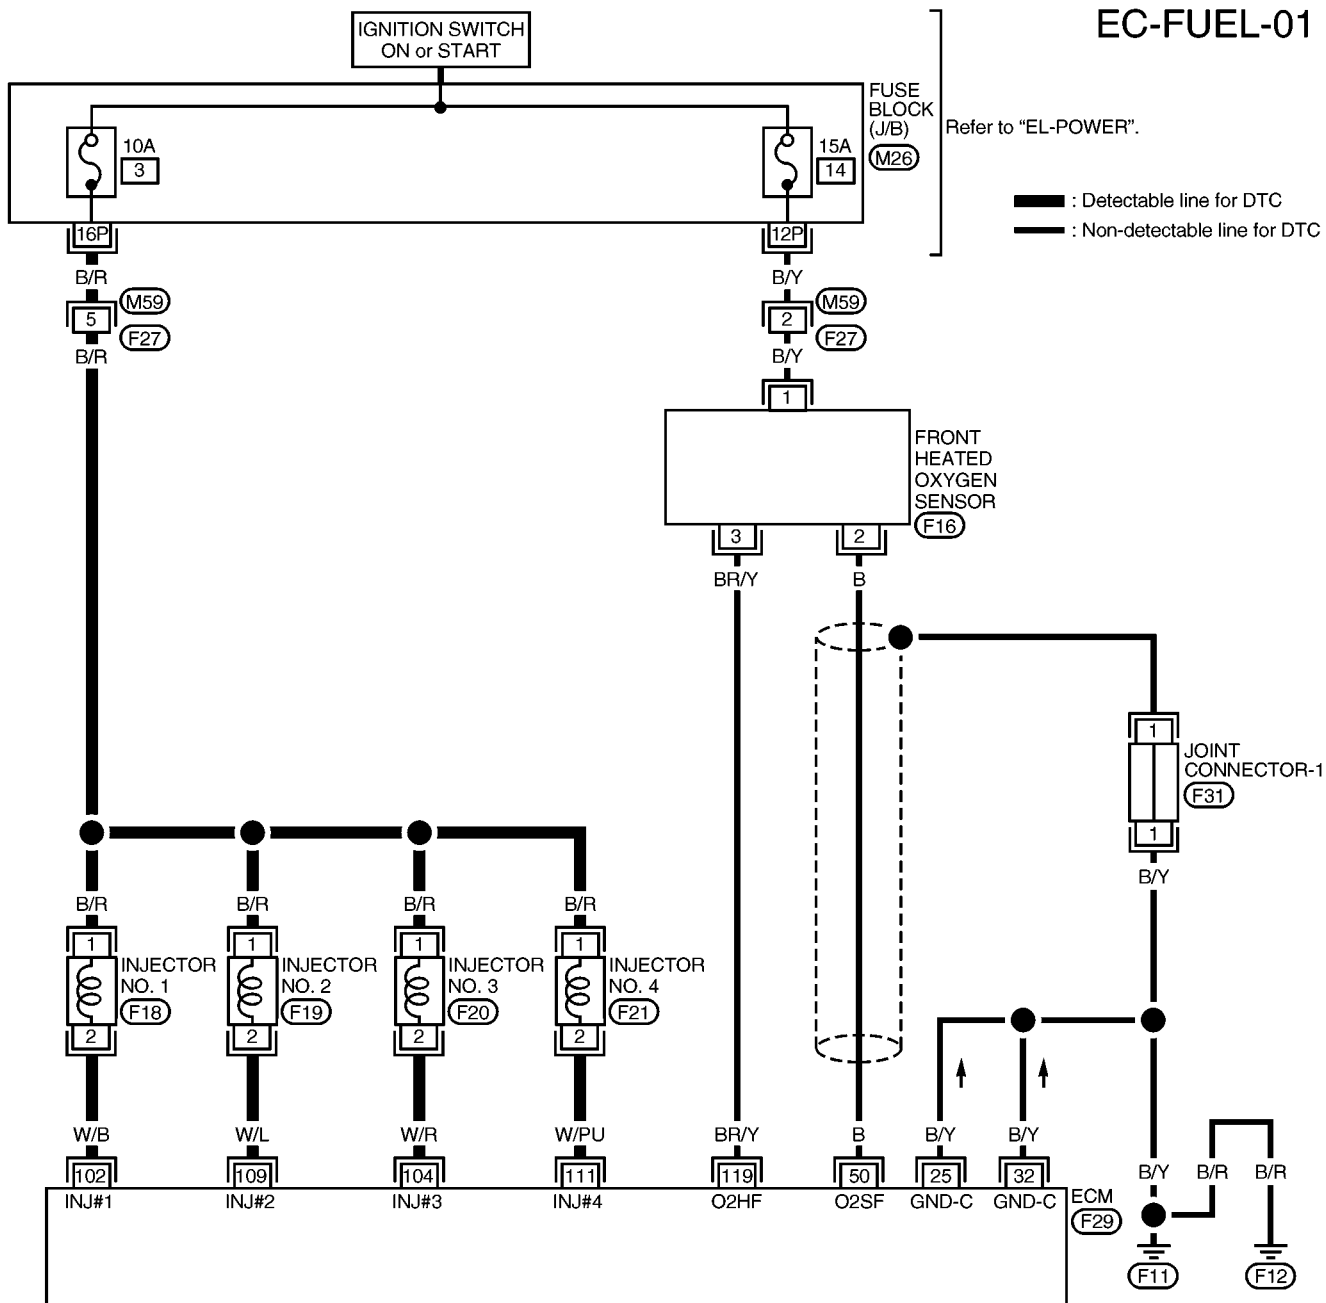

AEC990A


DTC P0171 FUEL INJECTION SYSTEM FUNCTION (LEAN SIDE)

KA24DE

Diagnostic Procedure

Diagnostic Procedure

NEEC1034


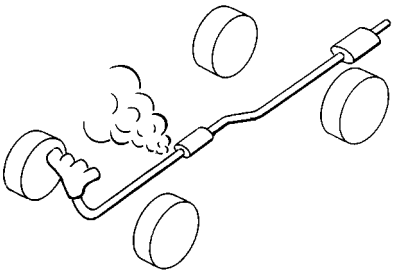
1	CHECK EXHAUST AIR LEAK
1. Start engine and run it at idle. 2. Listen for an exhaust air leak before three way catalyst.	
	
SEF099P	
OK or NG	
OK	▶ GO TO 2.
NG	▶ Repair or replace.

2	CHECK FOR INTAKE AIR LEAK
Listen for an intake air leak between the mass air flow sensor and the intake manifold.	
OK or NG	
OK	▶ GO TO 3.
NG	▶ Repair or replace.

DTC P0171 FUEL INJECTION SYSTEM FUNCTION (LEAN SIDE)

KA24DE

Diagnostic Procedure (Cont'd)

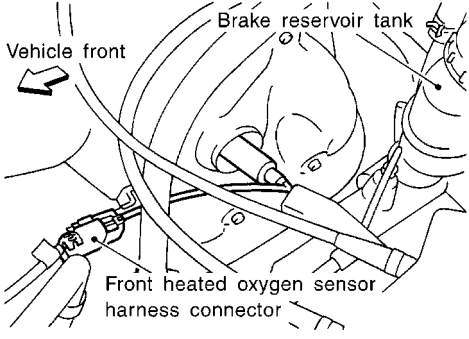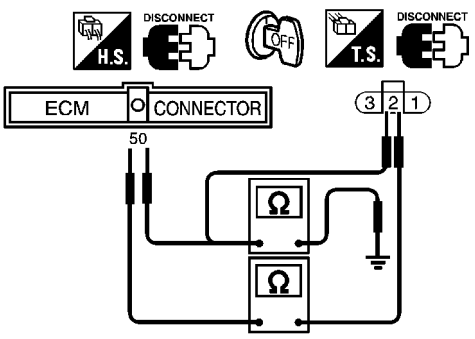3	CHECK FRONT HEATED OXYGEN SENSOR CIRCUIT
<p>1. Turn ignition switch OFF.</p> <p>2. Disconnect front heated oxygen sensor harness connector and ECM harness connector.</p>	
	
<p>3. Check harness continuity between ECM terminal 50 and terminal 2.</p>	
	
<p>Continuity should exist.</p> <p>4. Check harness continuity between ECM terminal 50 (or terminal 2) and ground.</p> <p>Continuity should not exist.</p> <p>5. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 4.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX




4	CHECK FUEL PRESSURE
<p>1. Release fuel pressure to zero. Refer to EC-40.</p> <p>2. Install fuel pressure gauge and check fuel pressure.</p> <p>At idling:</p> <p style="padding-left: 20px;">When fuel pressure regulator valve vacuum hose is connected. 235 kPa (2.4 kg/cm², 34 psi)</p> <p style="padding-left: 20px;">When fuel pressure regulator valve vacuum hose is disconnected. 294 kPa (3.0 kg/cm², 43 psi)</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 6.
NG	▶ GO TO 5.

5	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Fuel pump and circuit Refer to EC-571. ● Fuel pressure regulator Refer to EC-41. ● Fuel lines Refer to "ENGINE MAINTENANCE", MA-20. ● Fuel filter for clogging 	
▶	Repair or replace.

DTC P0171 FUEL INJECTION SYSTEM FUNCTION (LEAN SIDE)

KA24DE

Diagnostic Procedure (Cont'd)

6	CHECK MASS AIR FLOW SENSOR	
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT-II. at idling: 0.9 - 5.8 g-m/sec at 2,500 rpm: 7.5 - 13.2 g-m/sec 		
<p> With GST</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check mass air flow sensor signal in MODE 1 with GST. at idling: 0.9 - 5.8 g-m/sec at 2,500 rpm: 7.5 - 13.2 g-m/sec 		
<p> No Tools</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check voltage between ECM terminal 47 (Mass air flow sensor signal) and ground. at idling: 0.9 - 1.8V at 2,500 rpm: 1.9 - 2.3V 		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-137.

DTC P0171 FUEL INJECTION SYSTEM FUNCTION (LEAN SIDE)

KA24DE

Diagnostic Procedure (Cont'd)

7 CHECK FUNCTION OF INJECTORS

Ⓟ With CONSULT-II

1. Install all parts removed.
2. Start engine.
3. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II.


ACTIVE TEST	
POWER BALANCE	
MONITOR	
CMPS~RPM(REF)	XXX rpm
MAS AIR/FL SEN	XXX V
IACV-AAC/V	XXX %

SEF167X

4. Make sure that each circuit produces a momentary engine speed drop.

ⓧ Without CONSULT-II

1. Install all parts removed.
2. Start engine.
3. Listen to each injector operating sound.

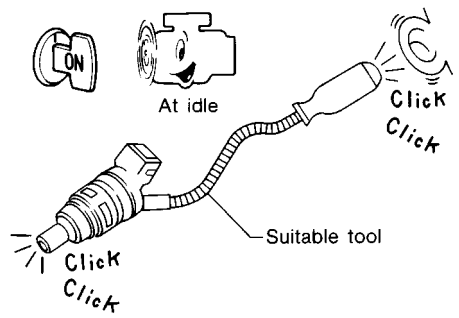

Clicking noise should be heard.

MEC703B

OK or NG

OK	▶	GO TO 8.
NG	▶	Perform trouble diagnosis for "INJECTORS", EC-563.

8 REMOVE INJECTOR

1. Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
2. Turn ignition switch OFF.
3. Remove injector with fuel tube assembly. Refer to EC-41.
Keep fuel hose and all injectors connected to injector gallery. The injector harness connectors should remain connected.


	▶	GO TO 9.
--	---	----------

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0171 FUEL INJECTION SYSTEM FUNCTION (LEAN SIDE)

KA24DE

Diagnostic Procedure (Cont'd)

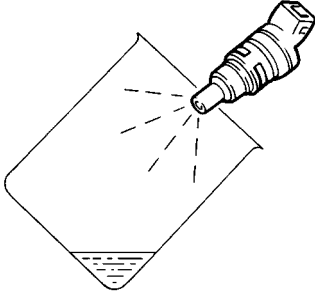9	CHECK INJECTOR
<p>1. Disconnect all ignition coil harness connectors. 2. Place pans or saucers under each injector. 3. Crank engine for about 3 seconds. Make sure that fuel sprays out from injectors.</p>	
	
SEF595Q	
<p>Fuel should be sprayed evenly for each cylinder.</p>	
OK or NG	
OK	▶ GO TO 10.
NG	▶ Replace injectors from which fuel does not spray out. Always replace O-ring with new one.

10	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
	▶ INSPECTION END

DTC P0172 FUEL INJECTION SYSTEM FUNCTION (RICH SIDE)

KA24DE

On Board Diagnosis Logic

On Board Diagnosis Logic

NEEC1035

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the front heated oxygen sensor. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios. In case the amount of the compensation value is extremely large (The actual mixture ratio is too rich.), the ECM judges the condition as the fuel injection system malfunction and lights up the MIL (2 trip detection logic).

Sensor	Input Signal to ECM	ECM function	Actuator
Front heated oxygen sensor	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection & mixture ratio control	Injectors

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0172 0114	<ul style="list-style-type: none"> Fuel injection system does not operate properly. The amount of mixture ratio compensation is too large. (The mixture ratio is too rich.) 	<ul style="list-style-type: none"> Front heated oxygen sensor Injectors Exhaust gas leaks Incorrect fuel pressure Mass air flow sensor

4


ACTIVE TEST	
SELF~LEARN CONTROL	100 %
MONITOR	
COMP~LEARN	XXX rpm
COOLAN TEMP/S	XXX °C
FR O2 SENSOR	XXX V
A/F ALPHA	XXX %

PEF737W

6

DATA MONITOR	
MONITORING	NO FAIL
CMPS~RPM(REF)	XXX rpm

PEF712T

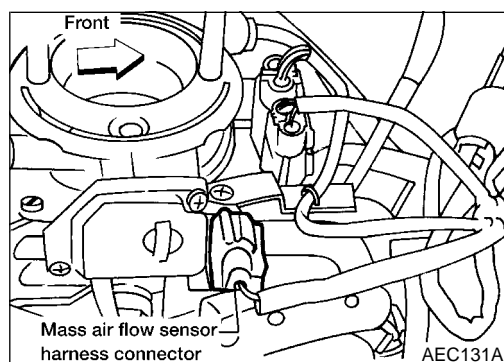

DTC Confirmation Procedure

NEEC1036

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

Ⓜ With CONSULT-II

- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 5 seconds.
- Turn ignition switch ON and select "SELF-LEARN CONTROL" in "ACTIVE TEST" mode with CONSULT-II.
- Clear the self-learning control coefficient by touching "CLEAR".
- Select "DATA MONITOR" mode with CONSULT-II.
- Start engine again and let it idle for at least 10 minutes. The 1st trip DTC P0172 should be detected at this stage, if a malfunction exists. If so, go to "Diagnostic Procedure", EC-290.
- If it is difficult to start engine at step 6, the fuel injection system has a malfunction.
- Crank engine while depressing accelerator pedal. If engine starts, go to "Diagnostic Procedure", EC-290. If engine does not start, remove ignition plugs and check for fouling, etc.

Ⓜ With GST

- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 5 seconds.
- Disconnect mass air flow sensor harness connector. Then restart and run engine for at least 3 seconds at idle speed.
- Stop engine and reconnect mass air flow sensor harness connector.
- Select "MODE 7" with GST. Make sure 1st trip DTC P0100 is detected.
- Select "MODE 4" with GST and erase the 1st trip DTC P0100.

DTC P0172 FUEL INJECTION SYSTEM FUNCTION (RICH SIDE)

KA24DE

DTC Confirmation Procedure (Cont'd)

- 7) Start engine again and run it for at least 10 minutes at idle speed.
- 8) Select "MODE 7" with GST. The 1st trip DTC P0172 should be detected at this stage, if a malfunction exists. If so, go to "Diagnostic Procedure", EC-290.
- 9) If it is difficult to start engine at step 8, the fuel injection system has a malfunction.
- 10) Crank engine while depressing accelerator pedal. If engine starts, go to "Diagnostic Procedure", EC-290. If engine does not start, remove ignition plugs and check for fouling, etc.

No Tools

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Disconnect mass air flow sensor harness connector. Then restart engine and run it for at least 3 seconds at idle speed.
- 4) Stop engine and reconnect mass air flow sensor harness connector.
- 5) Turn ignition switch ON.
- 6) Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM. Make sure 1st trip DTC 0102 is detected.
- 7) Erase the 1st trip DTC 0102 by changing from Diagnostic Test Mode II to Diagnostic Test Mode I. Refer to "How to Erase DTC (No Tools)", EC-70.
- 8) Perform Diagnostic Test Mode II (Self-diagnostic results) with ECM. Make sure DTC 0505 is detected.
- 9) Start engine again and run it for at least 10 minutes at idle speed. The 1st trip DTC 0114 should be detected at this stage, if a malfunction exists. If so, go to "Diagnostic Procedure", EC-290.
- 10) If it is difficult to start engine at step 9, the fuel injection system also has a malfunction.
- 11) Crank engine while depressing accelerator pedal. If engine starts, go to "Diagnostic Procedure", EC-290. If engine does not start, remove ignition plugs and check for fouling, etc.


DTC P0172 FUEL INJECTION SYSTEM FUNCTION (RICH SIDE)

KA24DE



Wiring Diagram

Wiring Diagram

NEEC1037

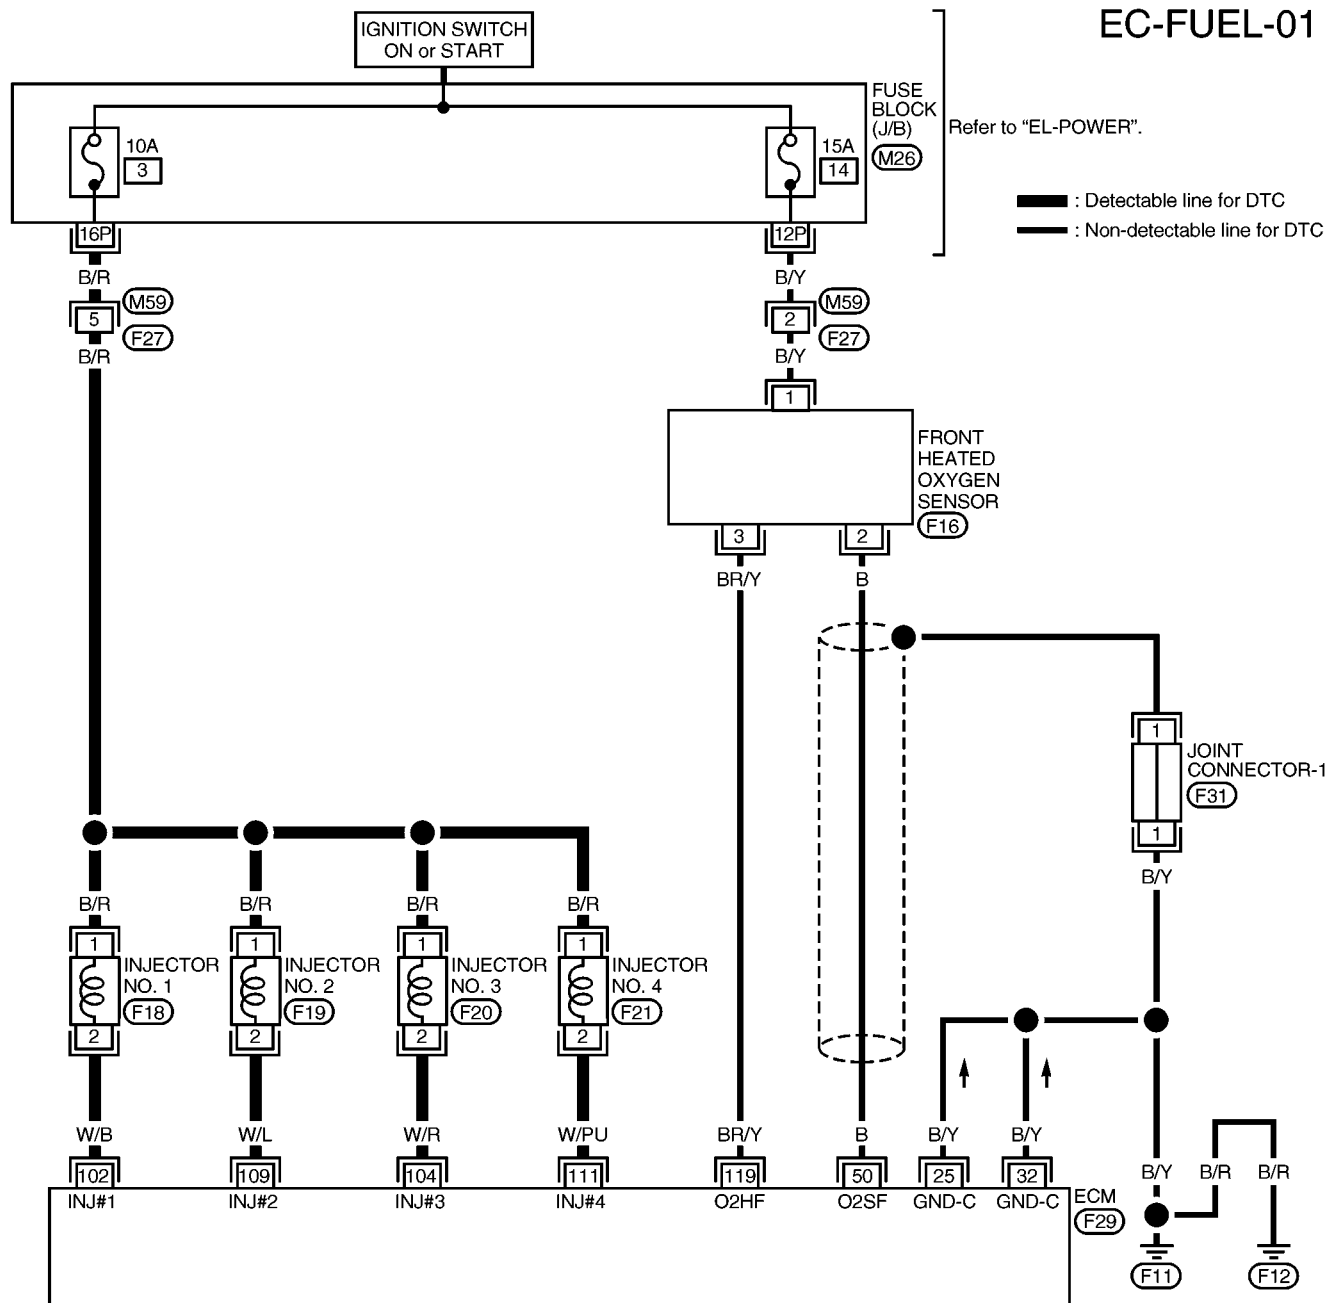

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

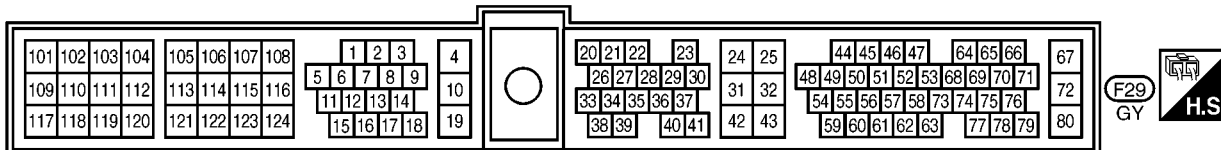

AEC990A


DTC P0172 FUEL INJECTION SYSTEM FUNCTION (RICH SIDE)



KA24DE

Diagnostic Procedure

Diagnostic Procedure

NEEC1038

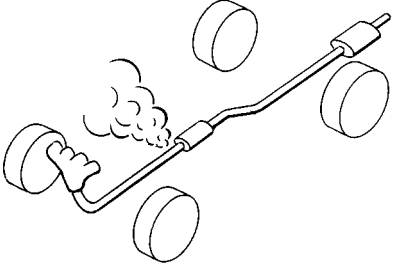1	CHECK FOR EXHAUST AIR LEAK	
<p>1. Start engine and run it at idle. 2. Listen for an exhaust air leak before the warm-up three way catalyst (California model), the three way catalyst (Non-California model).</p>		
		
SEF099P		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Repair or replace.

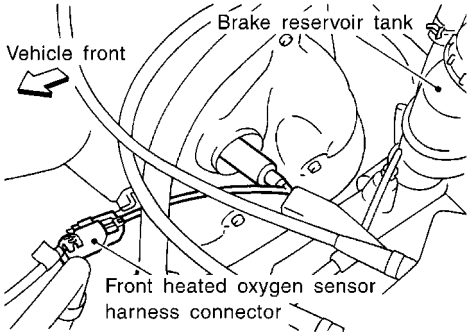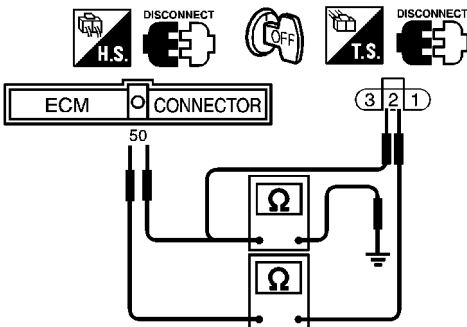2	CHECK FRONT HEATED OXYGEN SENSOR CIRCUIT	
<p>1. Turn ignition switch OFF. 2. Disconnect front heated oxygen sensor harness connector and ECM harness connector.</p>		
		
SEF331V		
<p>3. Check harness continuity between ECM terminal 50 and terminal 2.</p>		
		
SEF141V		
<p>Continuity should exist.</p> <p>4. Check harness continuity between ECM terminal 50 (or terminal 2) and ground. Continuity should not exist.</p> <p>5. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.




DTC P0172 FUEL INJECTION SYSTEM FUNCTION (RICH SIDE)

KA24DE

Diagnostic Procedure (Cont'd)

3	CHECK FUEL PRESSURE	
<p>1. Release fuel pressure to zero. Refer to EC-40.</p> <p>2. Install fuel pressure gauge and check fuel pressure.</p> <p style="margin-left: 20px;">At idling:</p> <p style="margin-left: 40px;">When fuel pressure regulator valve vacuum hose is connected. Approximately 235 kPa (2.4 kg/cm², 34 psi)</p> <p style="margin-left: 40px;">When fuel pressure regulator valve vacuum hose is disconnected. Approximately 294 kPa (3.0 kg/cm², 43 psi)</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

4	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Fuel pump and circuit (Refer to EC-571.) ● Fuel pressure regulator (Refer to EC-41.) 		
▶		Repair or replace.


5	CHECK MASS AIR FLOW SENSOR	
<p> With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature.</p> <p>2. Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT-II.</p> <p style="margin-left: 20px;">at idling: 0.9 - 5.8 g-m/sec</p> <p style="margin-left: 20px;">at 2,500 rpm: 7.5 - 13.2 g-m/sec</p>		
<p> With GST</p> <p>1. Start engine and warm it up to normal operating temperature.</p> <p>2. Check mass air flow sensor signal in MODE 1 with GST.</p> <p style="margin-left: 20px;">at idling: 0.9 - 5.8 g-m/sec</p> <p style="margin-left: 20px;">at 2,500 rpm: 7.5 - 13.2 g-m/sec</p>		
<p> No Tools</p> <p>1. Start engine and warm it up to normal operating temperature.</p> <p>2. Check voltage between ECM terminal 47 (Mass air flow sensor signal) and ground.</p> <p style="margin-left: 20px;">at idling: 0.9 - 1.8V</p> <p style="margin-left: 20px;">at 2,500 rpm: 1.9 - 2.3V</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-142.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0172 FUEL INJECTION SYSTEM FUNCTION (RICH SIDE)

KA24DE

Diagnostic Procedure (Cont'd)

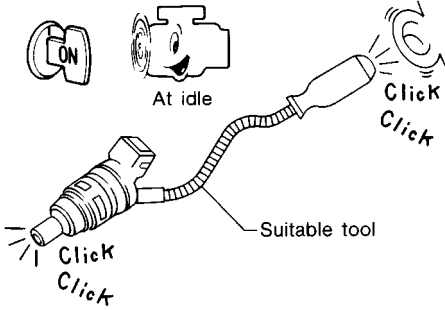6	CHECK FUNCTION OF INJECTORS																										
<p>Ⓜ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Install all parts removed. 2. Start engine. 3. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II. 																											
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <th>POWER BALANCE</th> <th></th> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <th>CMPS~RPM(REF)</th> <th>XXX rpm</th> </tr> <tr> <th>MAS AIR/FL SEN</th> <th>XXX V</th> </tr> <tr> <th>IACV-AAC/V</th> <th>XXX %</th> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>		ACTIVE TEST		POWER BALANCE		MONITOR		CMPS~RPM(REF)	XXX rpm	MAS AIR/FL SEN	XXX V	IACV-AAC/V	XXX %														
ACTIVE TEST																											
POWER BALANCE																											
MONITOR																											
CMPS~RPM(REF)	XXX rpm																										
MAS AIR/FL SEN	XXX V																										
IACV-AAC/V	XXX %																										
PEF564N																											
<p>4. Make sure that each circuit produces a momentary engine speed drop.</p>																											
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Install all parts removed. 2. Start engine. 3. Listen to each injector operating sound. 																											
																											
MEC703B																											
<p>Clicking noise should be heard.</p> <p style="text-align: center;">OK or NG</p>																											
OK	▶	GO TO 7.																									
NG	▶	Perform trouble diagnosis for "INJECTORS", EC-563.																									

7	REMOVE INJECTOR
<ol style="list-style-type: none"> 1. Confirm that the engine is cooled down and there are no fire hazards near the vehicle. 2. Turn ignition switch OFF. 3. Remove injector assembly. Refer to EC-41. Keep fuel hose and all injectors connected to injector gallery. 	
▶	
GO TO 8.	

8	CHECK INJECTOR	
<ol style="list-style-type: none"> 1. Disconnect all injector harness connectors. 2. Disconnect all ignition coil harness connectors. 3. Prepare pans or saucers under each injectors. 4. Crank engine for about 3 seconds. Make sure fuel does not drip from injector. 		
OK or NG		
OK (Does not drip)	▶	GO TO 9.
NG (Drips)	▶	Replace the injectors from which fuel is dripping. Always replace O-ring with new one.

DTC P0172 FUEL INJECTION SYSTEM FUNCTION (RICH SIDE)

KA24DE

Diagnostic Procedure (Cont'd)

9	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
▶	INSPECTION END

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT



HA

SC

EL

IDX

Component Description

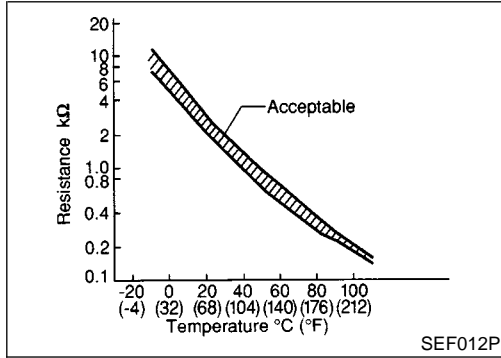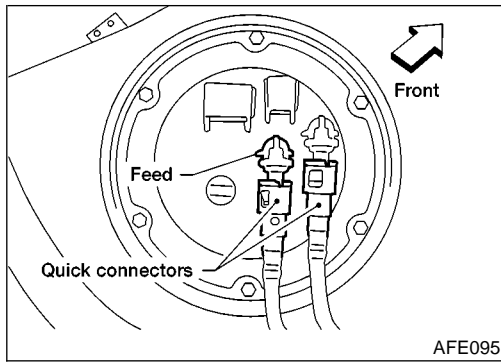

Component Description

NEEC1039

The fuel tank temperature sensor is used to detect the fuel temperature inside the fuel tank. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the fuel temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

<Reference data>

Fluid temperature °C (°F)	Voltage* V	Resistance kΩ
20 (68)	3.5	2.3 - 2.7
50 (122)	2.2	0.79 - 0.90

*: These data are reference values and are measured between ECM terminal 60 (Fuel tank temperature sensor) and ECM terminal 32 (ECM ground).

On Board Diagnosis Logic

NEEC1040

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0180 0402	<ul style="list-style-type: none"> An excessively high or low voltage is sent to ECM. Rationally incorrect voltage is sent to ECM, compared with the voltage signals from engine coolant temperature sensor and intake air temperature sensor. 	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) Fuel tank temperature sensor

3

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
COOLAN TEMP/S	XXX °C
INT/A TEMP/S	XXX °C

PEF609W

DTC Confirmation Procedure

=NEEC1041

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

Ⓜ With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 10 seconds.
If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-297.
If the result is OK, go to following step.

NOTE:

If "COOLAN TEMP/S" is already less than 60°C (140°F) before step 4), the result will be OK. If "COOLAN TEMP/S" is above 60°C (140°F), go to the following step.

- 4) Check "COOLAN TEMP/S" signal.
If the signal is less than 60°C (140°F), the result will be OK.
If the signal is above 60°C (140°F), go to the following step.
- 5) Cool engine down until "COOLAN TEMP/S" signal is less than 60°C (140°F).
- 6) Wait at least 10 seconds.
- 7) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-297.

Ⓜ With GST

Follow the procedure "With CONSULT-II".

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC






EL

IDX

Wiring Diagram



NEEC1042

EC-TFTS-01

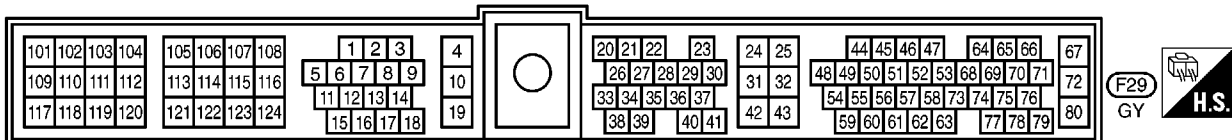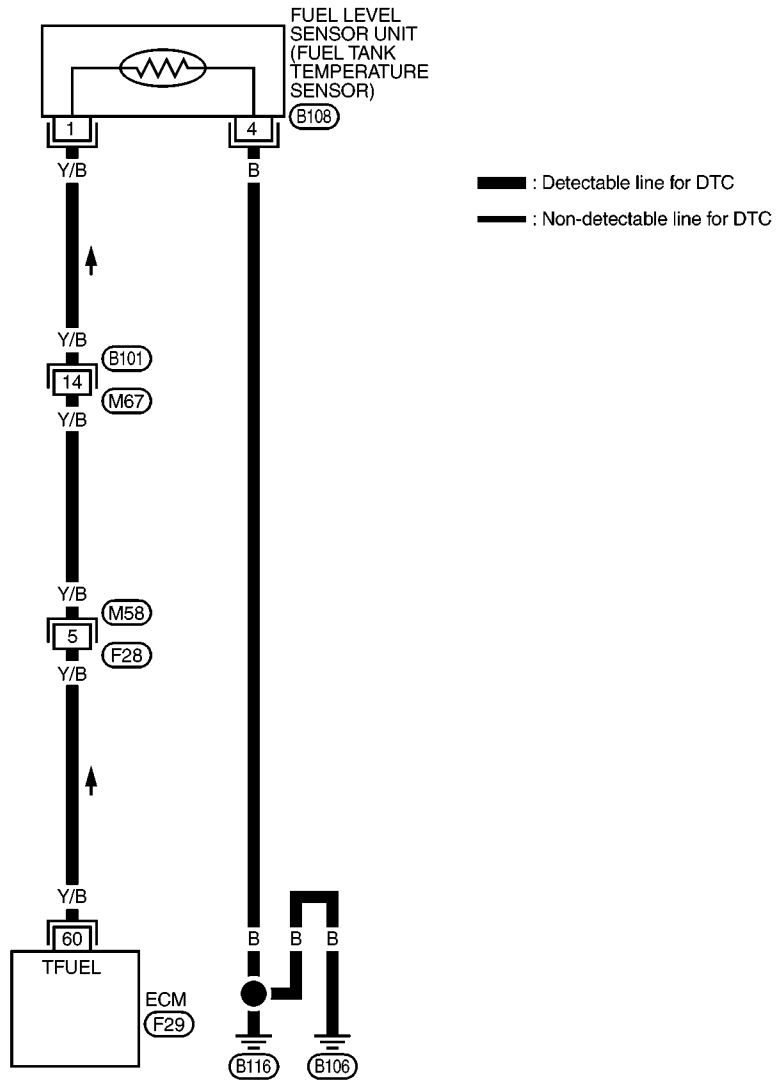

Diagnostic Procedure


NEEC1043

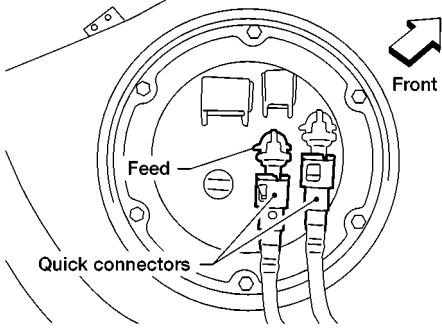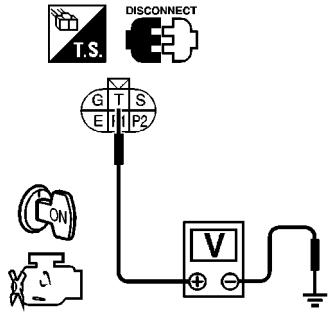1	CHECK POWER SUPPLY	<p>1. Turn ignition switch OFF. 2. Disconnect fuel level sensor unit harness connector.</p> <div style="text-align: center;">  <p>The diagram shows a circular sensor unit with a 'Feed' terminal and several 'Quick connectors'. An arrow labeled 'Front' points to the right.</p> </div> <p>3. Turn ignition switch ON. 4. Check voltage between terminal T and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p>The diagram shows a voltmeter (V) connected to terminal T of the sensor unit and ground. A 'DISCONNECT' symbol is shown above the sensor unit. A 'T.S.' symbol is also present.</p> </div> <p style="color: blue;">Voltage: Approximately 5V</p> <p style="text-align: center;">OK or NG</p>	GI MA EM LC EC FE CL MT AT TF PD AX
OK	▶	GO TO 3.	
NG	▶	GO TO 2.	

AFE095

SEF170V

2	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors B101, M67 ● Harness connectors M81, F36 ● Harness for open or short between ECM and fuel tank temperature sensor <p style="text-align: right;">▶ Repair harness or connector.</p>	SU BR ST RS BT HA SC EL IDX
----------	-----------------------------------	--	---

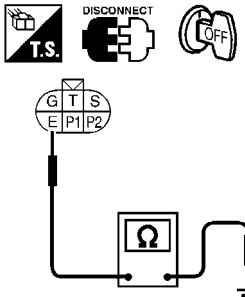3	CHECK GROUND CIRCUIT
<p>1. Turn ignition switch OFF.</p> <p>2. Check harness continuity between terminal E and body ground.</p>	
	
SEF171V	
<p>Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors B101, M67 ● Harness for open or short between ECM and body ground 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.


DTC P0180 FUEL TANK TEMPERATURE SENSOR

KA24DE


Diagnostic Procedure (Cont'd)

5 CHECK FUEL TANK TEMPERATURE SENSOR

1. Remove fuel level sensor unit.

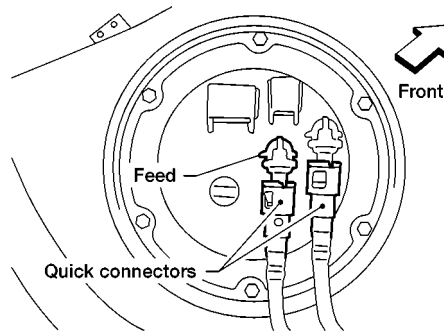

2. Check resistance by heating with hot water or heat gun as shown in the figure.

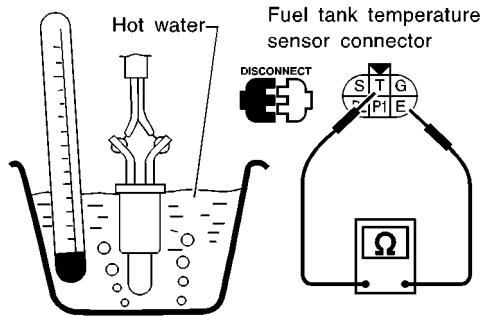

Temperature °C (°F)	Resistance kΩ
20 (68)	2.3 - 2.7
50 (122)	0.79 - 0.90

OK or NG

OK	▶	GO TO 6.
NG	▶	Replace fuel tank temperature sensor.

6 CHECK INTERMITTENT INCIDENT

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.

▶ **INSPECTION END**

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

KA24DE

On Board Diagnosis Logic

On Board Diagnosis Logic

NEEC1044


If a misfire occurs, engine speed will fluctuate. If the engine speed fluctuates enough to cause the CKP sensor signal to vary, ECM can determine that a misfire is occurring.

Sensor	Input Signal to ECM	ECM function
Crankshaft position sensor (OBD)	Engine speed	On board diagnosis of misfire

The misfire detection logic consists of the following two conditions.

- One Trip Detection Logic (Three Way Catalyst Damage)**
 On the first trip that a misfire condition occurs that can damage the three way catalyst (TWC) due to overheating, the MIL will blink. When a misfire condition occurs, the ECM monitors the CKP sensor signal every 200 engine revolutions for a change. When the misfire condition decreases to a level that will not damage the TWC, the MIL will turn off. If another misfire condition occurs that can damage the TWC on a second trip, the MIL will blink. When the misfire condition decreases to a level that will not damage the TWC, the MIL will remain on. If another misfire condition occurs that can damage the TWC, the MIL will begin to blink again.
- Two Trip Detection Logic (Exhaust quality deterioration)**
 For misfire conditions that will not damage the TWC (but will affect vehicle emission), the MIL will only light when the misfire is detected on a second trip. During this condition, ECM monitors the CKP sensor signal every 1000 revolutions. A misfire malfunction can be detected on any one cylinder or on multiple cylinders.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0300 (0701)	<ul style="list-style-type: none"> Multiple cylinders misfire. 	<ul style="list-style-type: none"> Improper spark plug Insufficient compression
P0301 (0608)	<ul style="list-style-type: none"> No. 1 cylinder misfires. 	<ul style="list-style-type: none"> Incorrect fuel pressure EGR valve The injector circuit is open or shorted
P0302 (0607)	<ul style="list-style-type: none"> No. 2 cylinder misfires. 	<ul style="list-style-type: none"> Injectors Intake air leak The ignition secondary circuit is open or shorted
P0303 (0606)	<ul style="list-style-type: none"> No. 3 cylinder misfires. 	<ul style="list-style-type: none"> Lack of fuel Drive plate/Flywheel
P0304 (0605)	<ul style="list-style-type: none"> No. 4 cylinder misfires. 	<ul style="list-style-type: none"> Front heated oxygen sensor Incorrect distributor rotor

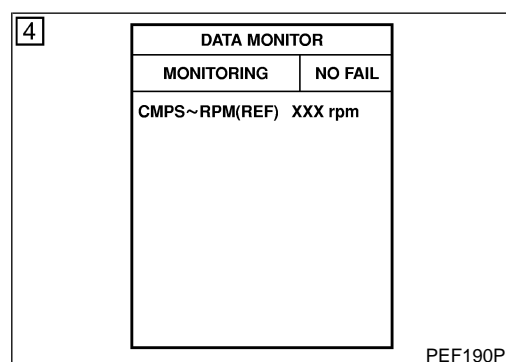

DTC Confirmation Procedure

NEEC1045

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

With CONSULT-II

- Turn ignition switch ON, and select "DATA MONITOR" mode with CONSULT-II.
- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 5 seconds.
- Start engine again and drive at 1,500 - 3,000 rpm for at least 3 minutes.
Hold the accelerator pedal as steady as possible.

NOTE:

Refer to the freeze frame data for the test driving conditions.

- If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-301.

With GST

Follow the procedure "With CONSULT-II".

DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

KA24DE

Diagnostic Procedure

Diagnostic Procedure

NEEC1046

1	CHECK FOR INTAKE AIR LEAK	
1. Start engine and run it at idle speed. 2. Listen for the sound of the intake air leak.		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Discover air leak location and repair.

GI

MA

EM

2	CHECK FOR EXHAUST SYSTEM CLOGGING	
Stop engine and visually check exhaust tube, three way catalyst and muffler for dents.		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Repair or replace it.

LC

EC

FE

3	CHECK EGR FUNCTION	
Perform DTC Confirmation Procedure for DTC P1402 EGR FUNCTION (OPEN). Refer to EC-476.		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair EGR system.

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL


IDX

DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

KA24DE

Diagnostic Procedure (Cont'd)

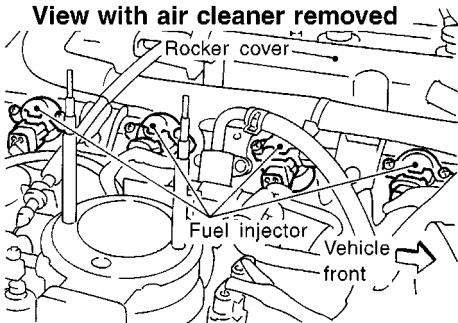
4	PERFORM POWER BALANCE TEST																				
<p>Ⓟ With CONSULT-II 1. Perform "POWER BALANCE" in "ACTIVE TEST" mode.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse; text-align: center;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>POWER BALANCE</td><td></td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>CMPS~RPM(REF)</td><td>XXX rpm</td></tr> <tr><td>MAS AIR/FL SEN</td><td>XXX V</td></tr> <tr><td>IACV-AAC/V</td><td>XXX %</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table> <p style="text-align: right;">PEF564N</p>		ACTIVE TEST		POWER BALANCE		MONITOR		CMPS~RPM(REF)	XXX rpm	MAS AIR/FL SEN	XXX V	IACV-AAC/V	XXX %								
ACTIVE TEST																					
POWER BALANCE																					
MONITOR																					
CMPS~RPM(REF)	XXX rpm																				
MAS AIR/FL SEN	XXX V																				
IACV-AAC/V	XXX %																				
2. Is there any cylinder which does not produce a momentary engine speed drop?																					
<p>⊗ Without CONSULT-II When disconnecting each injector harness connector one at a time, is there any cylinder which does not produce a momentary engine speed drop?</p> <p style="text-align: center;">View with air cleaner removed</p>  <p style="text-align: center;">Yes or No</p> <p style="text-align: right;">SEF319V</p>																					
Yes	▶	GO TO 5.																			
No	▶	GO TO 8.																			

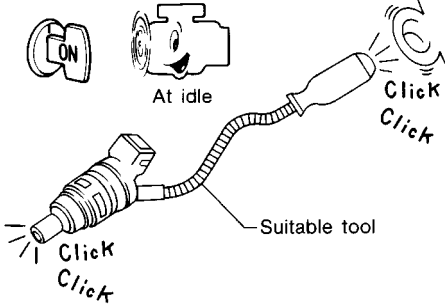5	CHECK INJECTOR	
Does each injector make an operating sound at idle?		
 <p style="text-align: right;">MEC703B</p>		
Yes or No		
Yes	▶	GO TO 6.
No	▶	Check injector(s) and circuit(s). Refer to EC-563.


DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

KA24DE

Diagnostic Procedure (Cont'd)

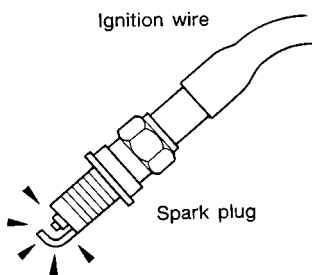6	CHECK IGNITION SPARK	
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect ignition wire from spark plug. 3. Connect a known good spark plug to the ignition wire. 4. Place end of spark plug against a suitable ground and crank engine. 5. Check for spark. 		
		
SEF282G		
OK or NG		
OK	▶	GO TO 8.
NG	▶	GO TO 7.


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

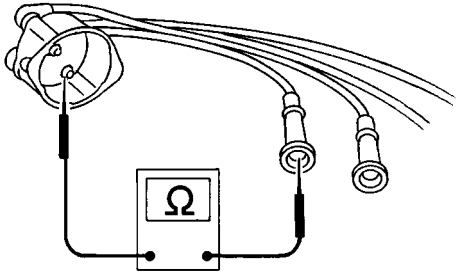7	CHECK IGNITION WIRES	
<ol style="list-style-type: none"> 1. Inspect wires for cracks, damage, burned terminals and for improper fit. 2. Measure the resistance of wires to their distributor cap terminal. Move each wire while testing to check for intermittent breaks. 		
		
SEF174P		
<p>Resistance: 13.6 - 18.4 kΩ/m (4.15 - 5.61 kΩ/ft) at 25°C (77°F)</p> <p>If the resistance exceeds the above specification, inspect ignition wire to distributor cap connection. Clean connection or replace the ignition wire with a new one.</p>		
OK or NG		
OK	▶	Check distributor rotor head for incorrect parts. Check ignition coil, power transistor and their circuits. Refer to EC-449.
NG	▶	Replace.


DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

KA24DE

Diagnostic Procedure (Cont'd)

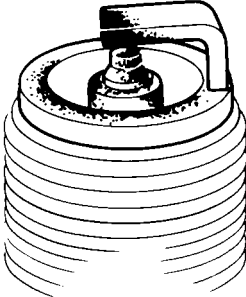8	CHECK SPARK PLUGS	Remove the spark plugs and check for fouling, etc.	
		SEF156I	
OK or NG			
OK	▶	GO TO 9.	
NG	▶	Repair or replace spark plug(s) with standard type one(s). For spark plug type, refer to "ENGINE MAINTENANCE", MA-23 .	

9	CHECK COMPRESSION PRESSURE	Refer to EM-16 .	
<ul style="list-style-type: none"> ● Check compression pressure. <li style="padding-left: 20px;">Standard: 1,226 kPa (12.5 kg/cm², 178 psi)/300 rpm <li style="padding-left: 20px;">Minimum: 1,030 kPa (10.5 kg/cm², 149 psi)/300 rpm <li style="padding-left: 20px;">Difference between each cylinder: 98 kPa (1.0 kg/cm², 14 psi)/300 rpm 			
OK or NG			
OK	▶	GO TO 10.	
NG	▶	Check pistons, piston rings, valves, valve seats and cylinder head gaskets.	

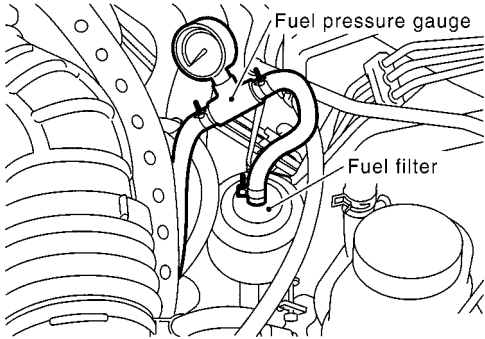10	CHECK FUEL PRESSURE	<ol style="list-style-type: none"> 1. Install any parts removed. 2. Release fuel pressure to zero. Refer to EC-40. 3. Install fuel pressure gauge and check fuel pressure. 	
		SEF300W	
At idle: Approx. 235 kPa (2.4 kg/cm², 34 psi)			
OK or NG			
OK	▶	GO TO 12.	
NG	▶	GO TO 11.	

DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

KA24DE

Diagnostic Procedure (Cont'd)

11	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Fuel pump and circuit Refer to EC-571. ● Fuel pressure regulator Refer to EC-41. ● Fuel lines Refer to "ENGINE MAINTENANCE", MA-20. ● Fuel filter for clogging 	
	Repair or replace.

GI
MA
EM

12	CHECK IGNITION TIMING										
<p>1. Check the following items. Refer to "Basic Inspection", EC-96.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Items</th> <th style="text-align: center;">Specifications</th> </tr> </thead> <tbody> <tr> <td>Ignition timing</td> <td>20° ± 2° BTDC</td> </tr> <tr> <td>Base idle speed</td> <td>750 ± 50 rpm (in "P" or "N" position)</td> </tr> <tr> <td>Closed throttle position switch idle position adjustment</td> <td>Feeler gauge thickness and switch condition 0.1 mm (0.004 in): ON 0.3 mm (0.012 in): OFF</td> </tr> <tr> <td>Target idle speed</td> <td>800 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table> <p style="text-align: right; margin-right: 20px;">MTBL0328</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>		Items	Specifications	Ignition timing	20° ± 2° BTDC	Base idle speed	750 ± 50 rpm (in "P" or "N" position)	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.1 mm (0.004 in): ON 0.3 mm (0.012 in): OFF	Target idle speed	800 ± 50 rpm (in "P" or "N" position)
Items	Specifications										
Ignition timing	20° ± 2° BTDC										
Base idle speed	750 ± 50 rpm (in "P" or "N" position)										
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.1 mm (0.004 in): ON 0.3 mm (0.012 in): OFF										
Target idle speed	800 ± 50 rpm (in "P" or "N" position)										
OK (With CONSULT-II)	GO TO 13.										
OK (Without CONSULT-II)	GO TO 14.										
NG	Adjust ignition timing.										

LC
EC
FE
CL
MT

AT
TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

KA24DE

Diagnostic Procedure (Cont'd)

13 CHECK FRONT HEATED OXYGEN SENSOR

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "MANU TRIG" in "DATA MONITOR" mode, and the trigger point is adjusted to 100%.
3. Select "FR O2 SENSOR" and "FR O2 MNTR" in item selection.
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch "START" on CONSULT-II screen.

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
MAS AIR/FL SE	XXX V
COOLANT TEMP/S	XXX °C
FR O2 SENSOR	XXX V
FR O2 MNTR	LAEN
INJ PULSE	XXX msec

PEF084P

6. Check the following.
 - "FR O2 MNTR" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below:


cycle | 1 | 2 | 3 | 4 | 5 |
FR O2 MNTR R-L-R-L-R-L-R-L-R-L-R

SEF947V

R = "FR O2 MNTR", "RICH"
L = "FR O2 MNTR", "LEAN"

- "FR O2 SENSOR" voltage goes above 0.6V at least once.
- "FR O2 SENSOR" voltage goes below 0.3V at least once.
- "FR O2 SENSOR" voltage never exceeds 1.0V.

SPREADSHEET		
REPLAY MODE	REPLAY MODE	
NUMERICAL	SHOW TRIGGER	
	CMPS-RPM	FR O2 SEN
	rpm	V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

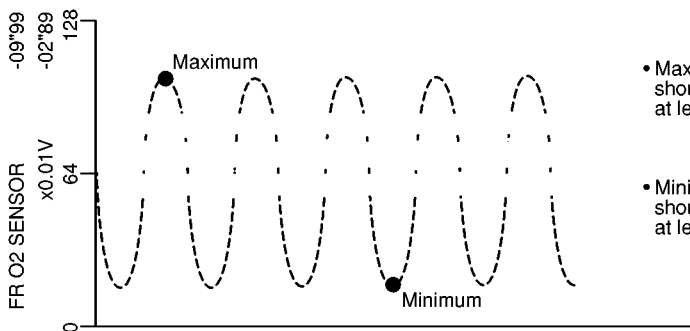

- Maximum voltage should be over 0.6V at least one time.
- Minimum voltage should be below 0.30V at least one time.

PEF736W

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK	▶	GO TO 15.
NG	▶	Replace front heated oxygen sensor.

DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

KA24DE

Diagnostic Procedure (Cont'd)

14	CHECK FRONT HEATED OXYGEN SENSOR	<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Set voltmeter probes between ECM terminal 50 (Front heated oxygen sensor signal) and ECM ground. <div style="text-align: center; margin: 10px 0;"> </div> <p style="text-align: right; margin-right: 20px;">AEC873A</p> <ol style="list-style-type: none"> 3. Check the following with engine speed held at 2,000 rpm constant under no load. <ul style="list-style-type: none"> ● Malfunction indicator lamp goes on more than five times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR). ● The maximum voltage is over 0.6V at least one time. ● The minimum voltage is below 0.3V at least one time. ● The voltage never exceeds 1.0V. <p style="margin-left: 20px;">CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center; margin-left: 40px;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 15.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace front heated oxygen sensor.</td> </tr> </table>	OK	▶	GO TO 15.	NG	▶	Replace front heated oxygen sensor.	GI MA EM LC EC FE CL MT AT TF PD
OK	▶	GO TO 15.							
NG	▶	Replace front heated oxygen sensor.							

15	CHECK MASS AIR FLOW SENSOR	<p>Ⓜ With CONSULT-II</p> <p>Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT-II.</p> <p style="margin-left: 20px; color: blue;">at idling: 0.9 - 5.8 g-m/sec</p> <p style="margin-left: 20px; color: blue;">at 2,500 rpm: 7.5 - 13.2 g-m/sec</p> <hr/> <p>Ⓜ With GST</p> <p>Check mass air flow sensor signal in MODE 1 with GST.</p> <p style="margin-left: 20px; color: blue;">at idling: 0.9 - 5.8 g-m/sec</p> <p style="margin-left: 20px; color: blue;">at 2,500 rpm: 7.5 - 13.2 g-m/sec</p> <hr/> <p>Ⓜ No Tools</p> <p>Check voltage between ECM terminal 47 (Mass air flow sensor signal) and ground.</p> <p style="margin-left: 20px; color: blue;">at idling: 0.9 - 1.8V</p> <p style="margin-left: 20px; color: blue;">at 2,500 rpm: 1.9 - 2.3V</p> <p style="text-align: center; margin-left: 40px;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 17.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 16.</td> </tr> </table>	OK	▶	GO TO 17.	NG	▶	GO TO 16.	AX SU BR ST RS BT HA SC EL IDX
OK	▶	GO TO 17.							
NG	▶	GO TO 16.							

DTC P0300 - P0304 NO. 4 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

KA24DE


Diagnostic Procedure (Cont'd)

16	CHECK CONNECTORS
Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-137.	
OK or NG	
NG	▶ Repair or replace it.

17	CHECK SYMPTOM MATRIX CHART
Check items on the rough idle symptom in "Symptom Matrix Chart", EC-112.	
OK or NG	
OK	▶ GO TO 18.
NG	▶ Repair or replace.

18	ERASE THE 1ST TRIP DTC
Some tests may cause a 1st trip DTC to be set. Erase the 1st trip DTC from the ECM memory after performing the tests. Refer to EC-69.	
	▶ GO TO 19.

19	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
	▶ INSPECTION END

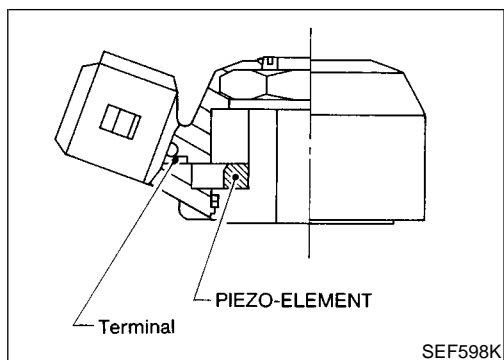

Component Description

The knock sensor is attached to the cylinder block. It senses engine knocking using a piezoelectric element. A knocking vibration from the cylinder block is sensed as vibrational pressure. This pressure is converted into a voltage signal and sent to the ECM. **Freeze frame data will not be stored in the ECM for the knock sensor. The MIL will not light for knock sensor malfunction. The knock sensor has one trip detection logic.**


ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 43 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
64	W	Knock sensor	[Engine is running] ● Idle speed	Approximately 2.4V

On Board Diagnosis Logic

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0325 0304	● An excessively low or high voltage from the knock sensor is sent to ECM.	● Harness or connectors (The knock sensor circuit is open or shorted.) ● Knock sensor

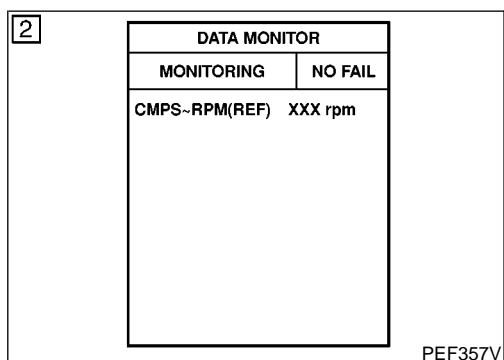

DTC Confirmation Procedure

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

Ⓔ With CONSULT-II

- 1) Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and run it for at least 5 seconds at idle speed.
- 3) If DTC is detected, go to "Diagnostic Procedure", EC-311.

Ⓔ With GST

Follow the procedure "With CONSULT-II".

DTC P0325 KNOCK SENSOR (KS)



KA24DE

Wiring Diagram

Wiring Diagram

NEEC1051


EC-KS-01

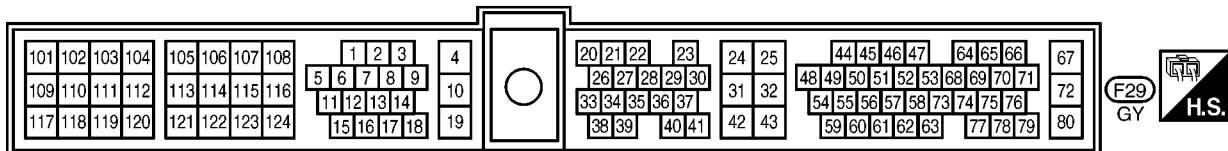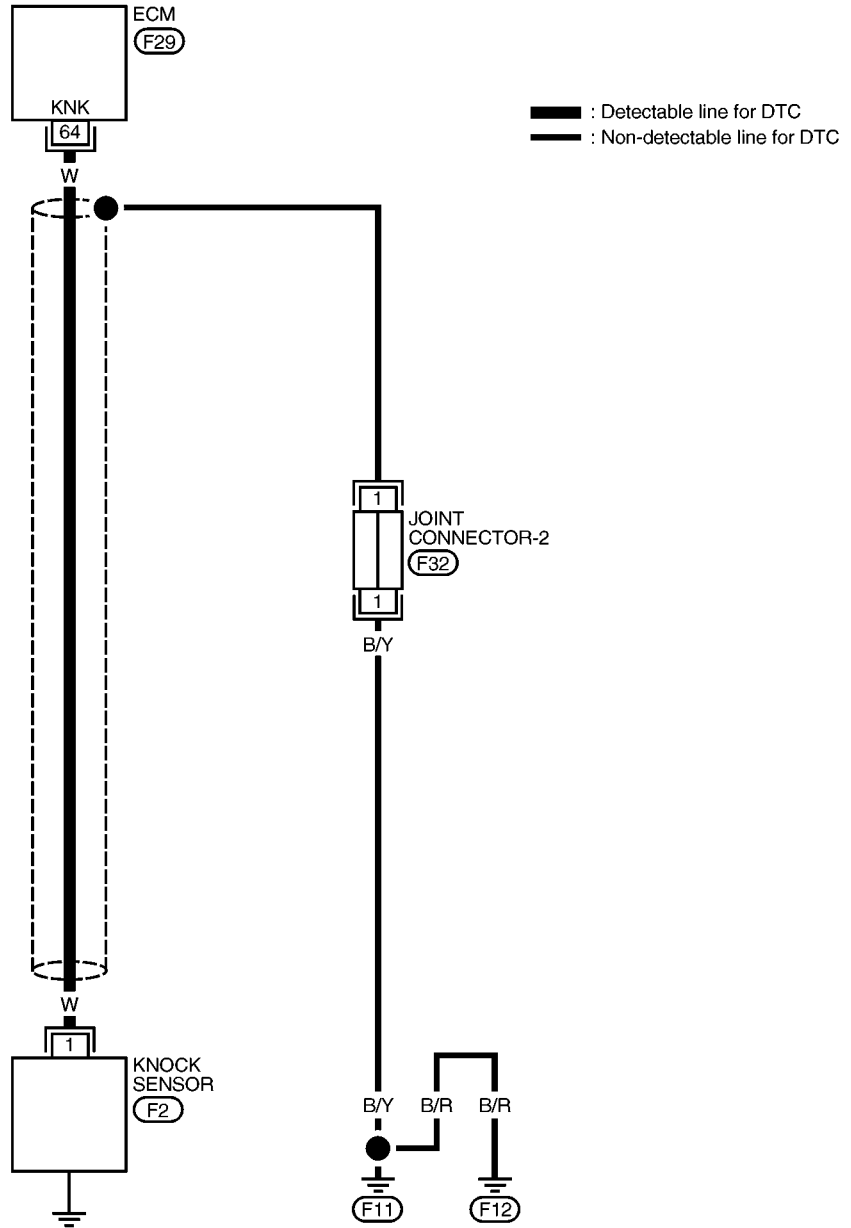


AEC992A

Diagnostic Procedure

NEEC1052

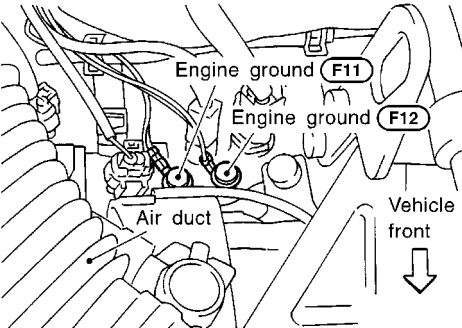1	RETIGHTEN GROUND SCREWS
Loosen and retighten engine ground screws.	
	
SEF325V	
▶	GO TO 2.


 GI
MA
EM
LC
EC

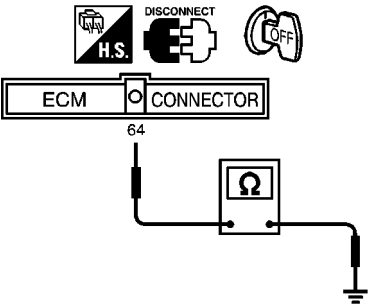2	CHECK INPUT SIGNAL CIRCUIT-1
1. Turn ignition switch OFF. 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 64 and ground.	
	
SEF173V	
<p>Resistance: Approximately 500 - 620 kΩ [at 25°C (77°F)] It is necessary to use an ohmmeter which can measure more than 10 MΩ.</p> 4. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 4.
NG	▶ GO TO 3.

 FE
CL
MT
AT
TF
PD
AX
SU
BR

3	DETECT MALFUNCTIONING PART
Check the harness for open or short between knock sensor and ECM.	
OK or NG	
OK	▶ GO TO 4.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

 ST
RS
BT
HA
SC
EL
IDX

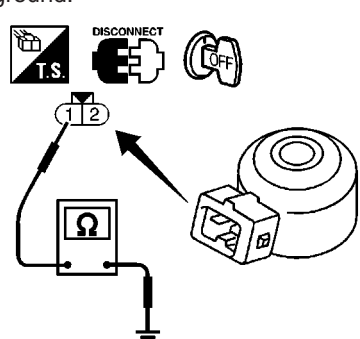4	CHECK KNOCK SENSOR		
<p>Use an ohmmeter which can measure more than 10 MΩ.</p> <ol style="list-style-type: none"> 1. Disconnect knock sensor harness connector. 2. Check resistance between terminal 1 and ground. 			
			
<p>Resistance: 500 - 620 kΩ [at 25°C (77°F)]</p> <p>CAUTION: Discard any knock sensors that have been dropped or physically damaged. Use only new ones.</p> <p style="text-align: center;">OK or NG</p>			
OK		▶	GO TO 5.
NG		▶	Replace knock sensor.

SEF174V



5	CHECK SHIELD CIRCUIT		
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Remove joint connector-2. 3. Check the following. Refer to the wiring diagram. <ul style="list-style-type: none"> ● Continuity between joint connector-2 terminal 1 and ground ● Joint connector-2 (Refer to "HARNESS LAYOUT", <i>EL-239</i>.) <p style="margin-left: 20px;">Continuity should exist.</p> 4. Also check harness for short to ground and short to power. 5. Then reconnect harness connectors. 			
OK or NG			
OK		▶	GO TO 7.
NG		▶	GO TO 6.

6	DETECT MALFUNCTIONING PART		
Check the joint connector-2. (Refer to "HARNESS LAYOUT", <i>EL-239</i> .)			
		▶	Repair open circuit or short to ground or short to power in harness or connectors.

7	CHECK INTERMITTENT INCIDENT		
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.			
		▶	INSPECTION END

DTC P0335 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) KA24DE

Component Description

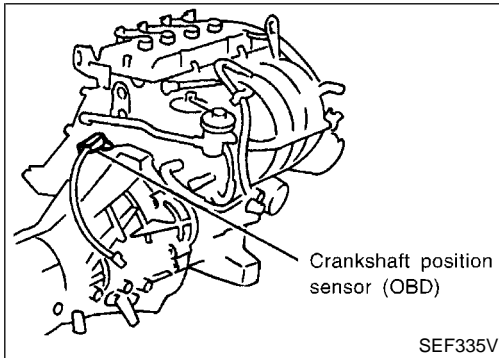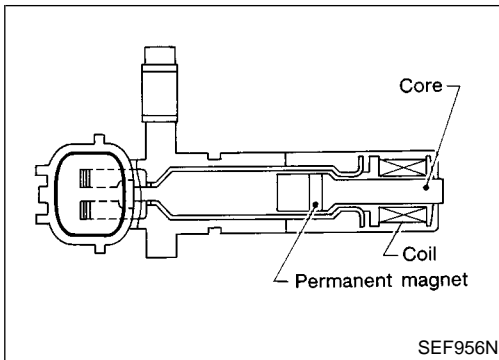

Component Description

NEEC1053

The crankshaft position sensor (OBD) is located on the transaxle housing facing the gear teeth (cogs) of the flywheel or drive plate. It detects the fluctuation of the engine revolution.

The sensor consists of a permanent magnet, core and coil.

When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change.

The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

This sensor is not directly used to control the engine system. It is used only for the on board diagnosis.

GI

MA

EM

LC

EC

FE

CL

MT

ECM Terminals and Reference Value

NEEC1054

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (AC Voltage)
47	L	Crankshaft position sensor (OBD)	[Engine is running] <ul style="list-style-type: none"> • Warm-up condition • Idle speed 	
			[Engine is running] <ul style="list-style-type: none"> • Engine speed is 2,000 rpm 	

AT

TF

PD

AX

SU

BR

ST

RS

On Board Diagnosis Logic

NEEC1055

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0335 0802	<ul style="list-style-type: none"> • The proper pulse signal from the crankshaft position sensor (OBD) is not sent to ECM while the engine is running at the specified engine speed. 	<ul style="list-style-type: none"> • Harness or connectors (The crankshaft position sensor (OBD) circuit is open.) • Crankshaft position sensor (OBD) • Dead battery

BT

HA

SC

EL

IDX

DTC P0335 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) KA24DE

DTC Confirmation Procedure

2

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm

PEF357V

DTC Confirmation Procedure

NEEC1056

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

With CONSULT-II

- 1) Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and run it for at least 15 seconds at idle speed.
- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-316.

With GST

Follow the procedure "With CONSULT-II".

Wiring Diagram

NEEC1057

EC-CKPS-01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS







BT

HA

SC

EL


IDX

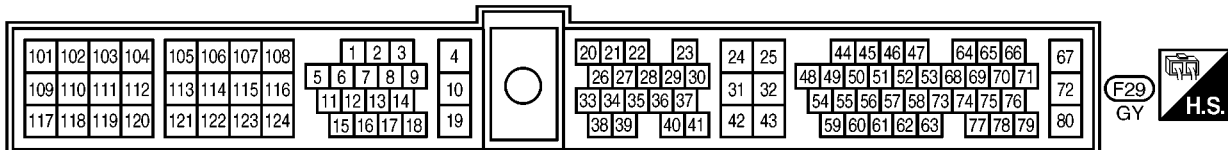
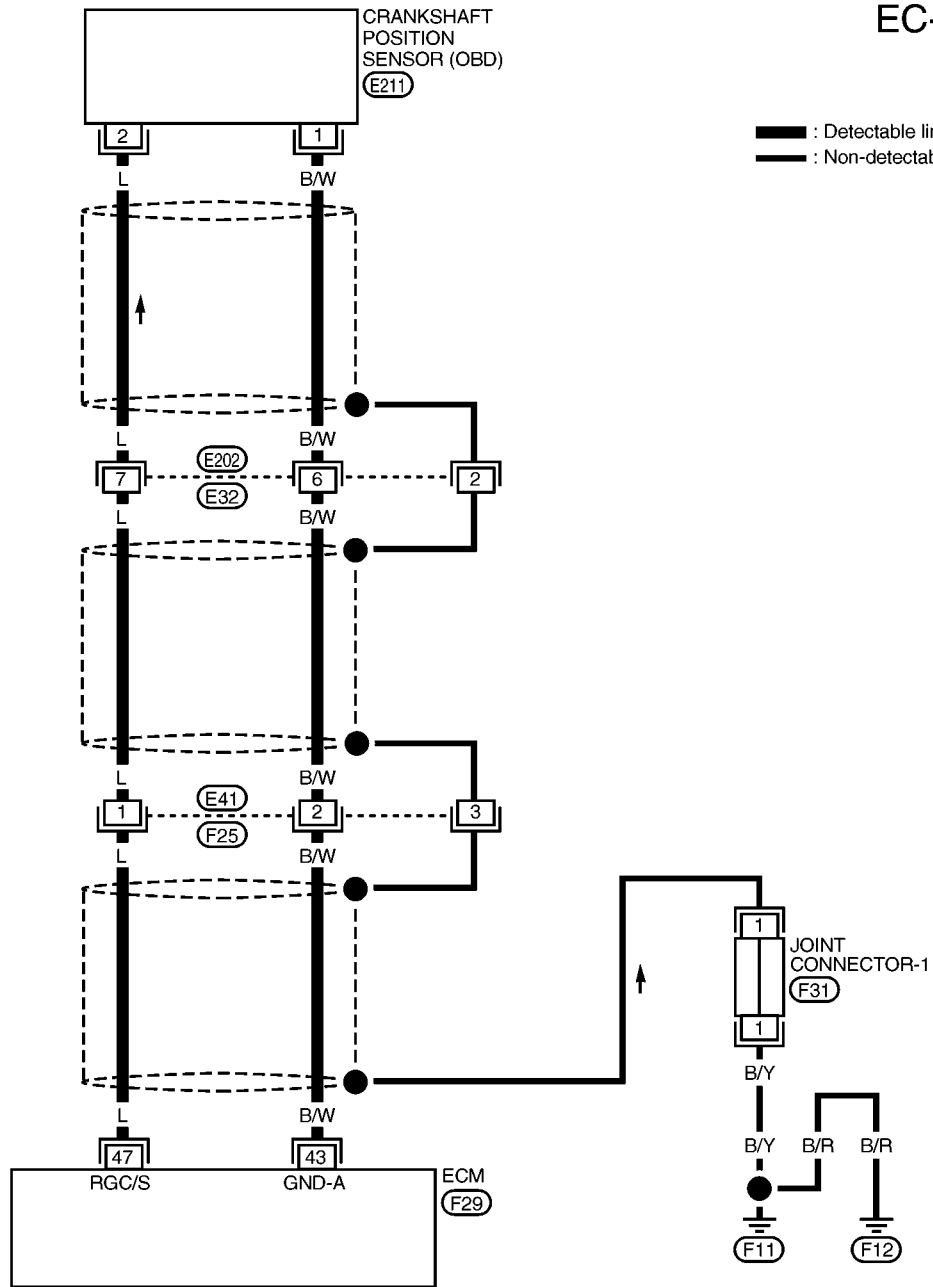


AEC993A

Diagnostic Procedure

NEEC1058

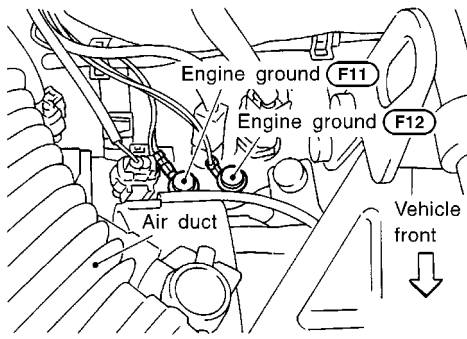1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch OFF. 2. Loosen and retighten engine ground screws.</p>	
	
SEF325V	
▶ GO TO 2.	

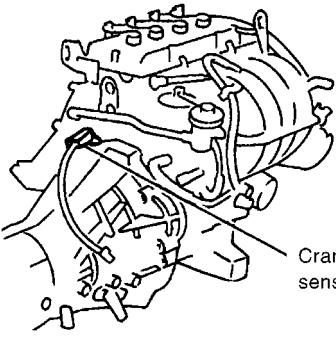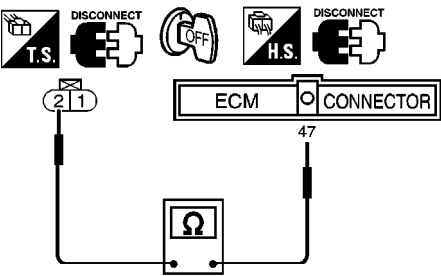2	CHECK INPUT SIGNAL CIRCUIT
<p>1. Disconnect crankshaft position sensor (OBD) and ECM harness connectors.</p>	
	
SEF335V	
<p>2. Check continuity between ECM terminal 47 and terminal 2.</p>	
	
SEF175V	
<p>Continuity should exist.</p>	
<p>3. Also check harness for short to ground and short to power.</p>	
OK or NG	
OK	▶ GO TO 4.
NG	▶ GO TO 3.


DTC P0335 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) KA24DE

Diagnostic Procedure (Cont'd)

3	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E202, E32 ● Harness connectors E41, F25 ● Harness for open or short between crankshaft position sensor (OBD) and ECM 	
▶ Repair open circuit or short to ground or short to power in harness or connectors.	

4	CHECK GROUND CIRCUIT
<p>1. Reconnect ECM harness connector.</p> <p>2. Check harness continuity between crankshaft position sensor (OBD) terminal 1 and engine ground. Refer to the wiring diagram.</p> <p style="color: blue; font-weight: bold;">Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 6.
NG	▶ GO TO 5.

5	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E202, E32 ● Harness connectors E41, F25 ● Harness for open or short between crankshaft position sensor (OBD) and ECM 	
▶ Repair open circuit or short to ground or short to power in harness or connectors.	


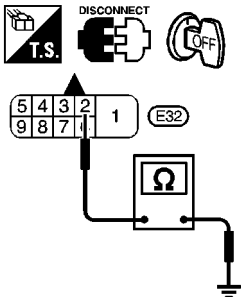
6	CHECK SHIELD CIRCUIT
<p>1. Turn ignition switch OFF.</p> <p>2. Disconnect harness connector E32.</p> <p>3. Check harness continuity between harness connector E32 terminal 2 and ground.</p>	
	
SEF177V	
<p style="color: blue; font-weight: bold;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p>5. Then reconnect harness connectors.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 8.
NG	▶ GO TO 7.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX



DTC P0335 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) KA24DE

Diagnostic Procedure (Cont'd)

7	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors E41, F25 ● Joint connector-1 (Refer to "HARNESS LAYOUT", <i>EL-239</i>.) ● Harness for open or short between harness connector E32 and Engine ground 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

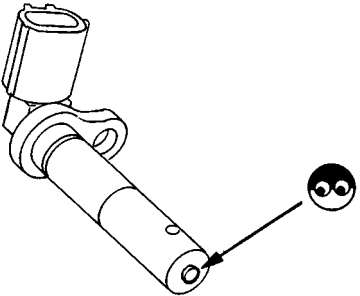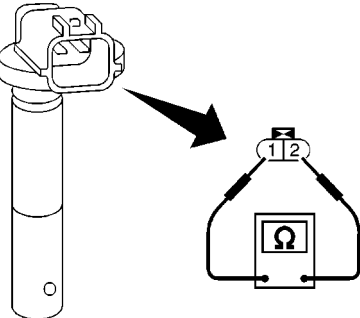8	CHECK CRANKSHAFT POSITION SENSOR (OBD)
1. Disconnect crankshaft position sensor (OBD) harness connector. 2. Loosen the fixing bolt of the sensor. 3. Remove the sensor. 4. Visually check the sensor for chipping.	
	
SEF960N	
5. Check resistance as shown in the figure.	
	
SEF504V	
<p>Resistance: Approximately 512 - 632Ω [at 20°C (68°F)]</p> <p>OK or NG</p>	
OK	▶ GO TO 9.
NG	▶ Replace crankshaft position sensor (OBD).

9	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
▶	INSPECTION END

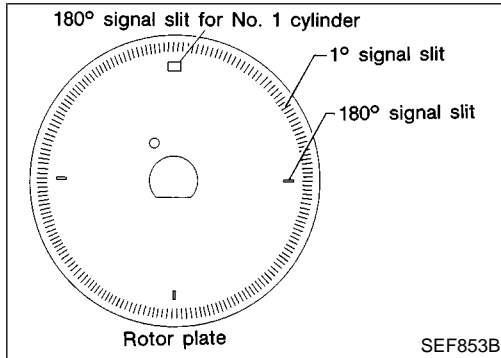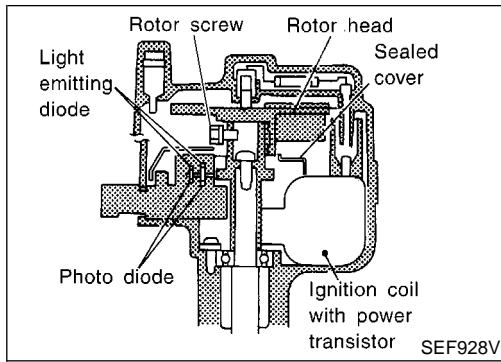

Component Description

NEEC1059

The camshaft position sensor is a basic component of the engine control system. It monitors engine speed and piston position. These input signals to the engine control system are used to control fuel injection, ignition timing and other functions.

The camshaft position sensor has a rotor plate and a wave-forming circuit. The rotor plate has 360 slits for a 1° (POS) signal and 4 slits for a 180° (REF) signal. The wave-forming circuit consists of Light Emitting Diodes (LED) and photo diodes.

The rotor plate is positioned between the LED and the photo diode. The LED transmits light to the photo diode. As the rotor plate turns, the slits cut the light to generate rough-shaped pulses. These pulses are converted into on-off signals by the wave-forming circuit and sent to the ECM.

The distributor is not repairable and must be replaced as an assembly except distributor cap and rotor head.

GI

MA

EM

LC

EC

FE



CL

MT

ECM Terminals and Reference Value

NEEC1060

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

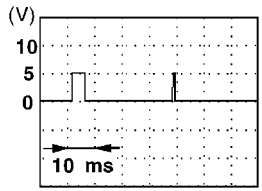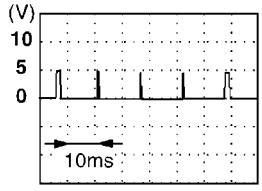TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
4	LG/R	ECCS relay (Self shut-off)	[Engine is running] [Ignition switch OFF] ● For a few seconds after turning ignition switch OFF	0 - 1V
			[Ignition switch OFF] ● More than a few seconds after turning ignition switch OFF	BATTERY VOLTAGE (11 - 14V)
44	PU	Camshaft position sensor (Reference signal)	[Engine is running] (Warm-up condition) ● Idle speed	0.2 - 0.5V 
48	PU		[Engine is running] ● Engine speed is 2,000 rpm	0 - 0.5V 

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC



EL

IDX

DTC P0340 CAMSHAFT POSITION SENSOR (CMPS)

KA24DE

ECM Terminals and Reference Value (Cont'd)

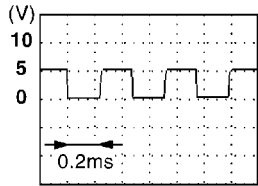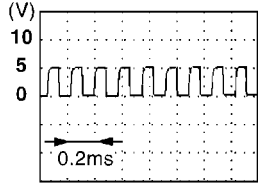TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
49	LG	Camshaft position sensor (Position signal)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 2.6V 
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	Approximately 2.5 - 2.6V 
67	B/P	Power supply for ECM	[Ignition switch ON]	BATTERY VOLTAGE (11 - 14V)
72	B/P			
117	B/P	Current return	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NEEC1061

DTC No.	Malfunction is detected when ...		Check Items (Possible Cause)
P0340 0101	A)	Either 1° or 180° signal is not sent to ECM for the first few seconds during engine cranking.	<ul style="list-style-type: none"> ● Harness or connectors (The camshaft position sensor circuit is open or shorted.) ● Camshaft position sensor ● Starter motor (Refer to EL section.) ● Starting system circuit (Refer to EL section.) ● Dead (Weak) battery
	B)	Either 1° or 180° signal is not sent to ECM often enough while the engine speed is higher than the specified engine speed.	
	C)	The relation between 1° and 180° signal is not in the normal range during the specified engine speed.	

DTC Confirmation Procedure

Perform "Procedure for malfunction A" first. If DTC cannot be confirmed, perform "Procedure for malfunction B and C".

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V.

=NEEC1062

2

DATA MONITOR	
MONITORING	NO FAIL
COOLAN TEMP/S	XXX °C

PEF002P

PROCEDURE FOR MALFUNCTION A

NEEC1062S01

With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Crank engine for at least 2 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-323.

With GST

Follow the procedure "With CONSULT-II".

3

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm

PEF357V

PROCEDURE FOR MALFUNCTION B AND C

NEEC1062S02

With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and run it for at least 2 seconds at idle speed.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-323.

With GST

Follow the procedure "With CONSULT-II".

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC




EL

IDX

Wiring Diagram

NEEC1063


EC-CMPS-01

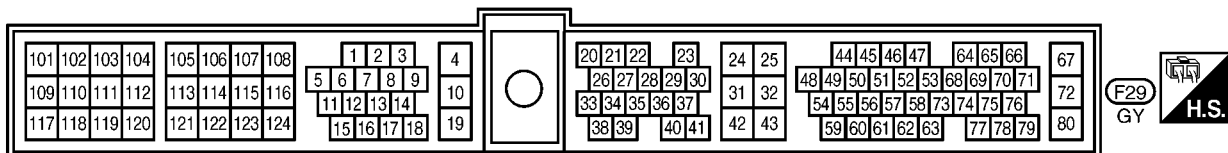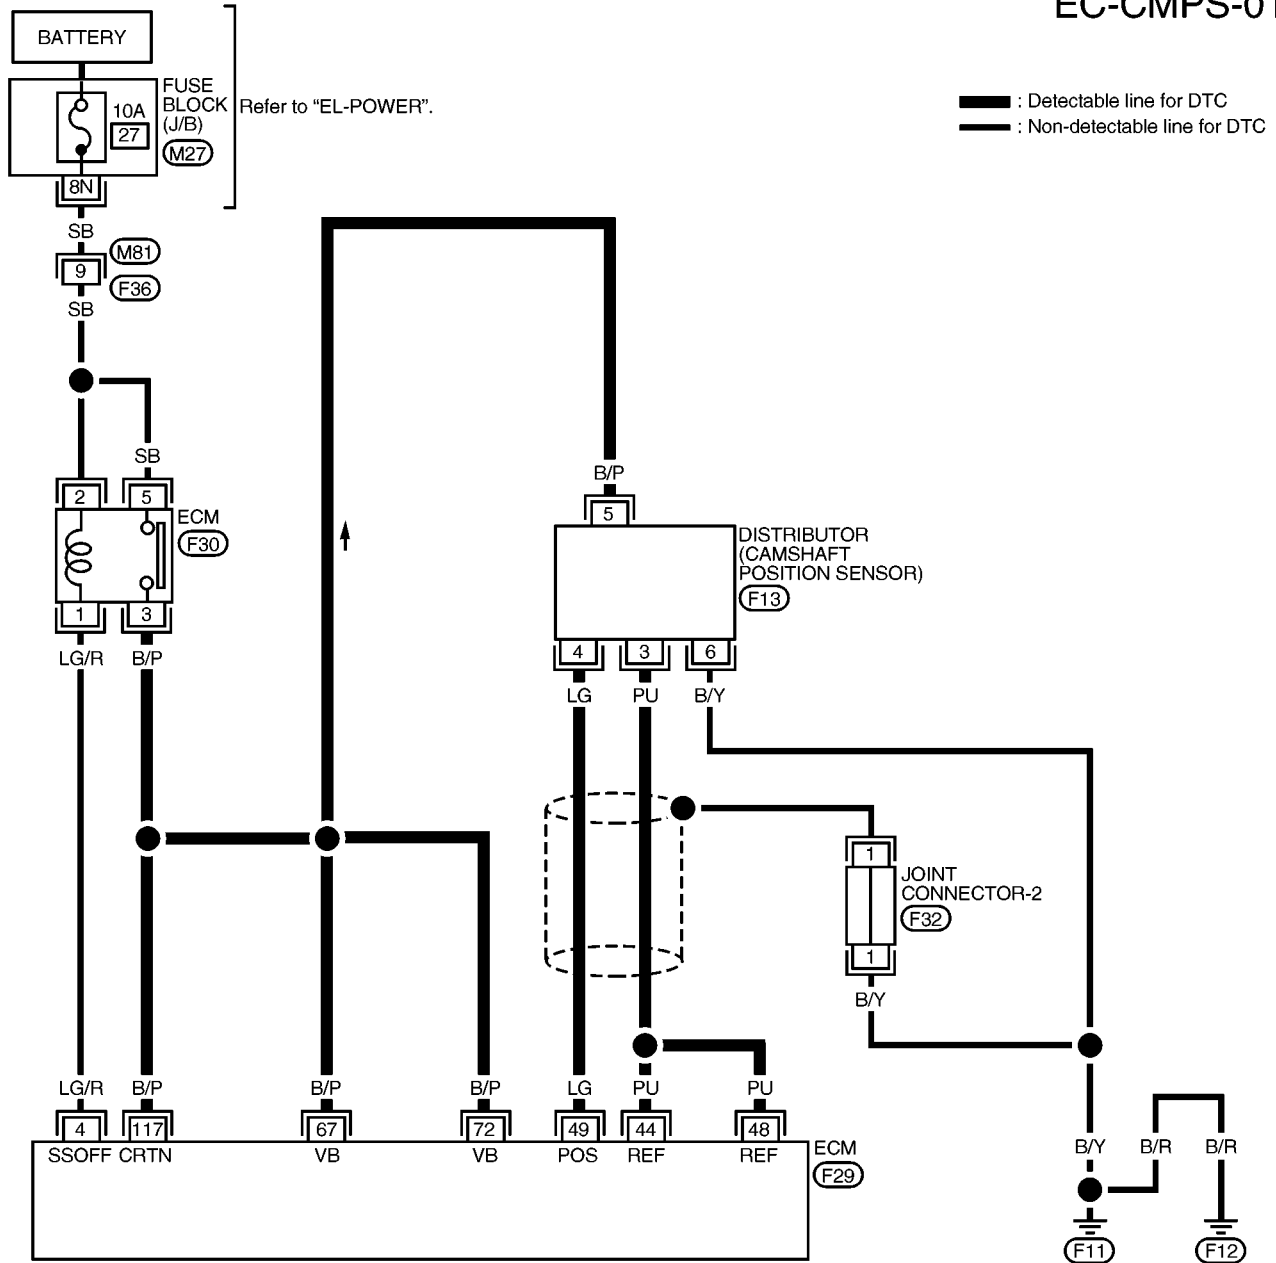

Diagnostic Procedure

NEEC1064

1	CHECK STARTING SYSTEM	
Does the engine turn over? (Does the starter motor operate?)		
Yes or No		
Yes	▶	GO TO 2.
No	▶	Check starting system. (Refer to EL section.)

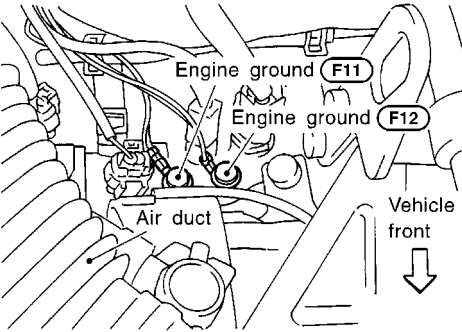2	RETIGHTEN GROUND SCREWS	
<ol style="list-style-type: none"> Turn ignition switch OFF. Loosen and retighten engine ground screws. 		
 <p>The diagram shows a top-down view of the engine compartment. Two engine ground screws are labeled F11 and F12. An air duct is also shown. An arrow points to the front of the vehicle.</p>		
<small>SEF325V</small>		
	▶	GO TO 3.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

3 CHECK POWER SUPPLY


1. Disconnect camshaft position sensor harness connector.

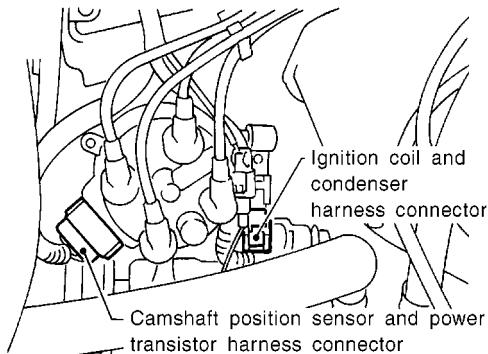

SEF128S

2. Turn ignition switch ON.

3. Check voltage between terminal 5 and ground with CONSULT-II or tester.

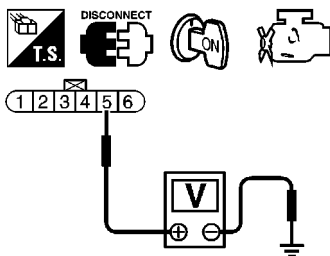

SEF040S

Voltage: Battery voltage

OK or NG

OK ► GO TO 5.

NG ► GO TO 4.

4 DETECT MALFUNCTIONING PART

Check the following.

- Harness for open or short between camshaft position sensor and ECM relay
- Harness for open or short between camshaft position sensor and ECM

► Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0340 CAMSHAFT POSITION SENSOR (CMPS)

KA24DE

Diagnostic Procedure (Cont'd)

5	CHECK INPUT SIGNAL CIRCUIT
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect ECM harness connector. 3. Check harness continuity between sensor terminal 4 and ECM terminal 49, sensor terminal 3 and ECM terminals 44, 48. 	
SEF178V	
<p style="text-align: center;">Continuity should exist.</p> <ol style="list-style-type: none"> 4. Also check harness for short to ground and short to power. <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 6.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.






6	CHECK GROUND CIRCUIT
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Check harness continuity between distributor (camshaft position sensor) terminal 6 and engine ground. Refer to the wiring diagram. <p style="text-align: center;">Continuity should exist.</p> <ol style="list-style-type: none"> 3. Also check harness for short to ground and short to power. <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 7.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0340 CAMSHAFT POSITION SENSOR (CMPS)

KA24DE

Diagnostic Procedure (Cont'd)

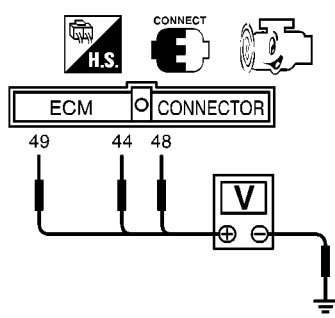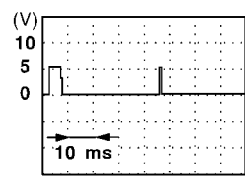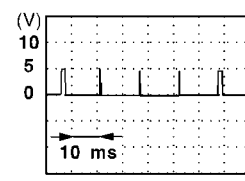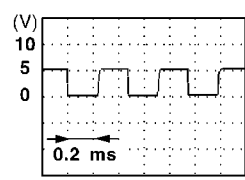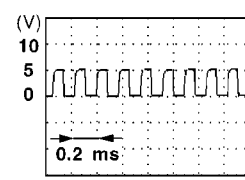7	CHECK CAMSHAFT POSITION SENSOR	
<p>1. Start engine and warm it up to normal operating temperature.</p> <p>2. Check voltage between ECM terminal 49 and engine ground, ECM terminal 44 or 48 and ground.</p>		
		
Terminal 44 or 48 and engine ground		
Condition	Idle	2,000 rpm
Voltage	0.2 - 0.5V	0 - 0.5V
Pulse signal		
Terminal 49 and engine ground		
Condition	Idle	2,000 rpm
Voltage	Approximately 2.6V	Approximately 2.5 - 2.6V
Pulse signal		
SEF893W		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Replace camshaft position sensor.

8	CHECK SHIELD CIRCUIT	
<p>1. Turn ignition switch OFF.</p> <p>2. Disconnect joint connector-2.</p> <p>3. Check the following.</p> <ul style="list-style-type: none"> ● Continuity between joint connector-2 terminal 1 and ground ● Joint connector-2 (Refer to "HARNESS LAYOUT", <i>EL-239</i>) Continuity should exist. <p>4. Also check harness for short to ground and short to power.</p> <p>5. Then reconnect joint connector-1.</p>		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Repair open circuit, short to ground or short to power in harness or connectors.

9	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.		
▶		INSPECTION END



Description SYSTEM DESCRIPTION

NEEC1065
NEEC1065S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	EGR control	EGRC-solenoid valve
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Intake air temperature sensor	Intake air temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
Vehicle speed sensor	Vehicle speed		

This system cuts and controls vacuum applied to the EGR valve to suit engine operating conditions. This cut-and-control operation is accomplished through the ECM and the EGRC-solenoid valve. When the ECM detects any of the following conditions, current flows through the solenoid valve is cut. This causes the vacuum to be discharged into the atmosphere. The EGR valve remains closed.

- Low engine coolant temperature
- Engine starting
- High-speed engine operation
- Engine idling
- Excessively high engine coolant temperature
- Mass air flow sensor malfunction
- Low intake air temperature

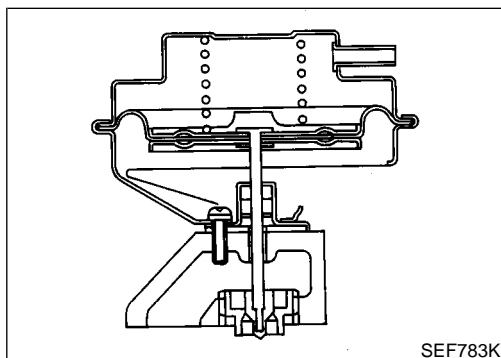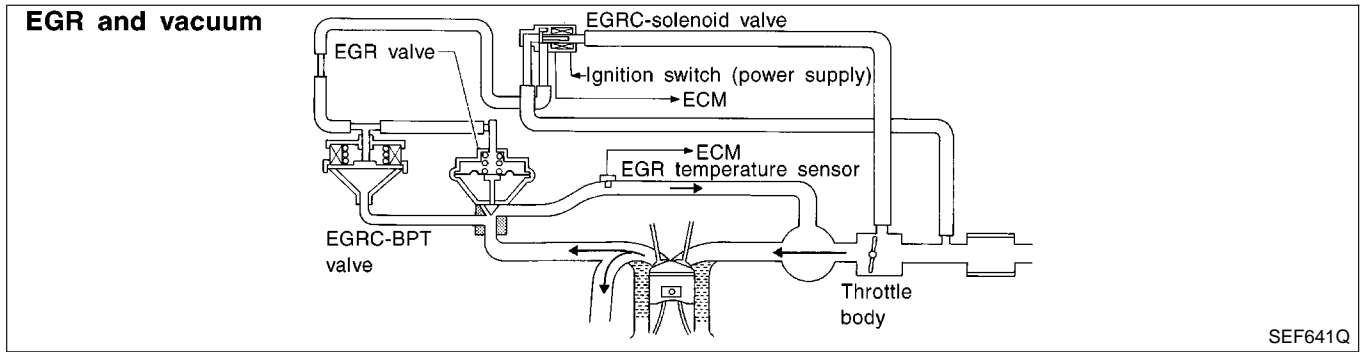


COMPONENT DESCRIPTION

Exhaust Gas Recirculation (EGR) Valve

The EGR valve controls the amount of exhaust gas routed to the intake manifold. Vacuum is applied to the EGR valve in response to throttle valve opening. The vacuum controls the movement of a taper valve connected to the vacuum diaphragm in the EGR valve.


Description (Cont'd)

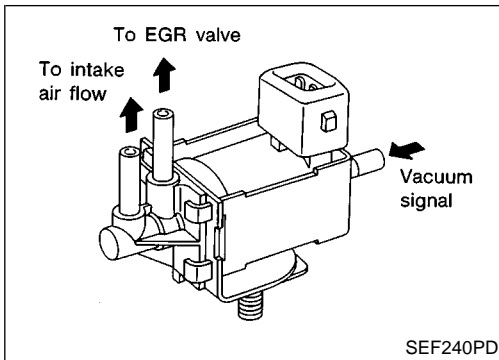

EGRC-Solenoid Valve

NEEC1065S0202

The EGRC-solenoid valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the coil in the solenoid valve is energized. The vacuum signal passes through the solenoid valve. The signal then reaches the EGR valve. When the ECM sends an OFF signal, a plunger will then move to cut the vacuum signal from the intake manifold collector to the EGR valve.

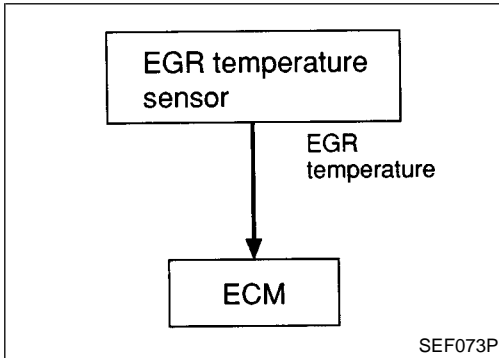

On Board Diagnosis Logic

NEEC1066

If the absence of EGR flow is detected by EGR temperature sensor under the condition that calls for EGR, a low-flow malfunction is diagnosed.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0400 0302	<ul style="list-style-type: none"> No EGR flow is detected under conditions that call for EGR. 	<ul style="list-style-type: none"> EGR valve stuck closed EGRC-BPT valve Vacuum hose EGRC-solenoid valve EGR passage EGR temperature sensor Exhaust gas leaks

NEEC1067

8	EGR SYSTEM P0400	
	OUT OF CONDITION	
	MONITOR	
	CMPS~RPM(POS)	XXX rpm
	THRTL POS SEN	XXX V
	B/FUEL SCHDL	XXX msec

PEF603W

8	EGR SYSTEM P0400	
	TESTING	
	MONITOR	
	CMPS~RPM(POS)	XXX rpm
	THRTL POS SEN	XXX V
	B/FUEL SCHDL	XXX msec

PEF604W

8	EGR SYSTEM P0400	
	COMPLETED	

PEF785U

DTC Confirmation Procedure

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.
- P0400 will not be displayed at “SELF-DIAG RESULTS” mode with CONSULT-II even though DTC work support test result is “NG”.

TESTING CONDITION:

For best results, perform the test at a temperature above 5°C (41°F).

Ⓜ With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Check “COOLAN TEMP/S” in “DATA MONITOR” mode with CONSULT-II and confirm it is within the range listed below.

COOLAN TEMP/S: Less than 40°C (104°F)

If the value is out of range, park the vehicle in a cool place and allow the engine temperature to stabilize. Do not attempt to lower the coolant temperature with a fan or means other than ambient air. Doing so may produce an inaccurate diagnostic result.

- 3) Start engine and let it idle monitoring “COOLAN TEMP/S” value. When the “COOLAN TEMP/S” value reaches 70°C (158°F), immediately go to the next step.
- 4) Select “EGR SYSTEM P0400” of “EGR SYSTEM” in “DTC WORK SUPPORT” mode with CONSULT-II.
- 5) Touch “START”.
- 6) Accelerate vehicle to a speed of 40 km/h (25 MPH) once and then stop vehicle with engine running.
If “COMPLETED” appears on CONSULT-II screen, go to step 9.
If “COMPLETED” does not appear on CONSULT-II screen, go to the following step.
- 7) Check the output voltage of “THRTL POS SEN” (at closed throttle position) and note it.
- 8) When the following conditions are met, “TESTING” will be displayed on the CONSULT-II screen. Maintain the conditions until “TESTING” changes to “COMPLETED”. (It will take approximately 30 seconds or more.)




CMPS-RPM (REF)	2,000 - 2,600 rpm
Vehicle speed	10 km/h (6 MPH) or more
B/FUEL SCHDL	2.5 - 3.5 msec
THRTL POS SEN	(X + 0.23) – (X + 0.74) V X = Voltage value measured at step 7
Selector lever	Suitable position

If “TESTING” is not displayed after 5 minutes, retry from step 2.

- 9) Make sure that “OK” is displayed after touching “SELF-DIAG RESULTS”. If “NG” is displayed, refer to “Diagnostic Procedure”, EC-332.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Overall Function Check

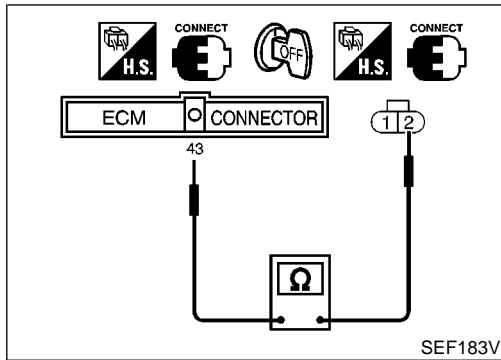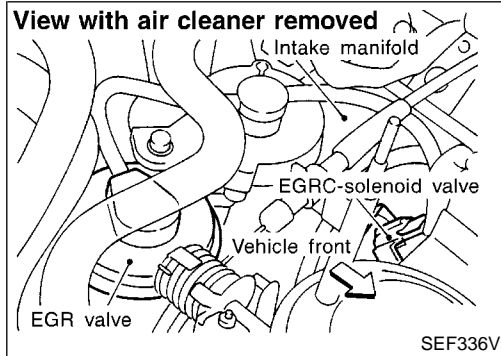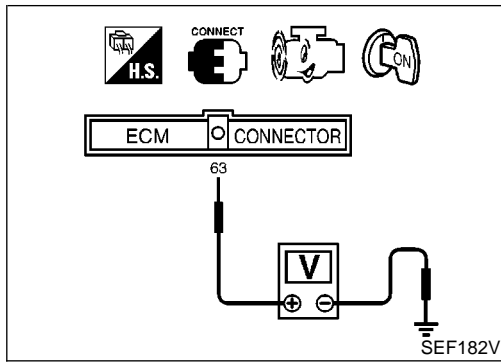

Overall Function Check



NEEC1068

Use this procedure to check the overall EGR function. During this check, a 1st trip DTC might not be confirmed.

⊗ Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Check the EGR valve lifting when revving engine from 2,000 rpm to 4,000 rpm quickly under no load using the following methods.
 - Disconnect EGRC-solenoid valve harness connector. (The DTC for EGRC-solenoid valve will be displayed, however, ignore it.)
- EGR valve should lift up and down without sticking.**
If NG, go to "Diagnostic Procedure", EC-332.
- 3) Check voltage between ECM terminal 63 (EGR temperature sensor signal) and ground at idle speed.
Less than 4.5V should exist.
If NG, go to next step.
- 4) Turn ignition switch OFF.
- 5) Check harness continuity between EGR temperature sensor harness connector terminal 2 and ECM terminal 43 (ECM ground).
Continuity should exist.
- 6) Check "EGR TEMPERATURE SENSOR". Refer to "CHECK EGR TEMPERATURE SENSOR" in "Diagnostic Procedure".

Overall function check

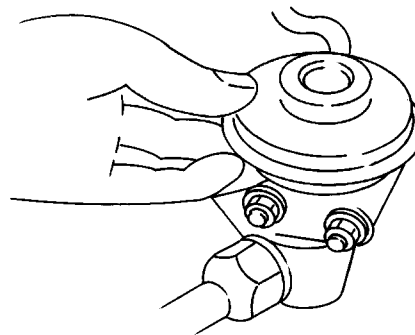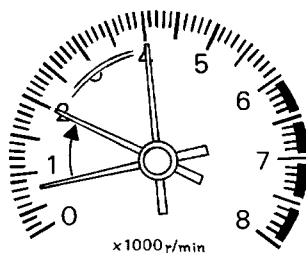

Check the EGR valve lifting when revving engine from 2,000 rpm up to 4,000 rpm.

SEF642Q

DTC P0400 EGR FUNCTION (CLOSE)


KA24DE

Wiring Diagram

Wiring Diagram

NEEC1069

EC-EGRC1-01

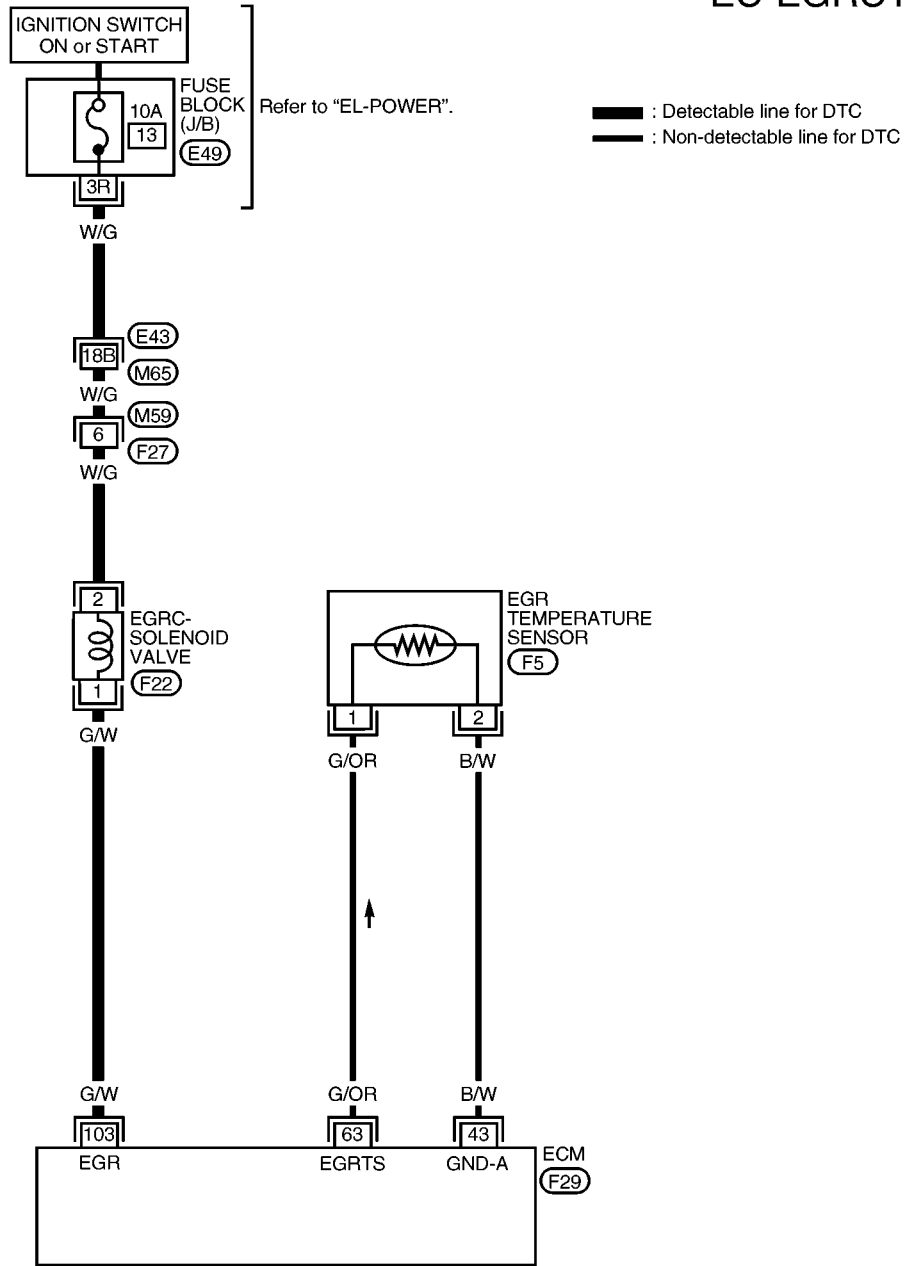

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD




AX

SU

BR

ST

Refer to the following.
 (M65), (E43) - SUPER
 MULTIPLE JUNCTION (SMJ)



RS


BT

HA

SC

EL


IDX

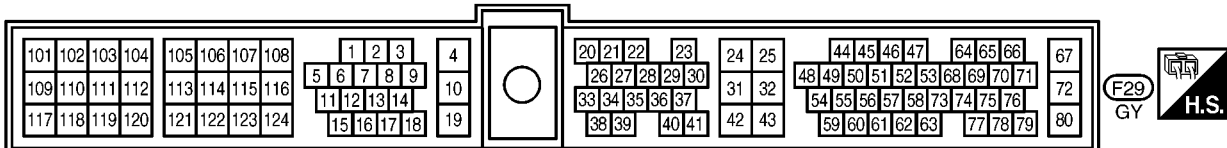

AEC995A

Diagnostic Procedure

NEEC1070

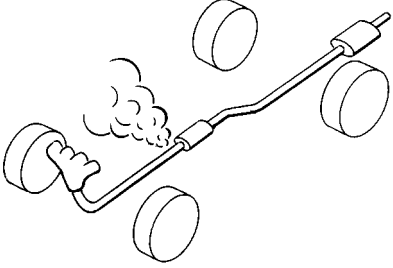1	CHECK EXHAUST SYSTEM	
<p>1. Start engine. 2. Check exhaust pipes and muffler for leaks.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF099P</p> <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 2.
OK (Without CONSULT-II)	▶	GO TO 3.
NG	▶	Repair or replace exhaust system.

DTC P0400 EGR FUNCTION (CLOSE)


KA24DE

Diagnostic Procedure (Cont'd)

2 CHECK VACUUM SOURCE TO EGR VALVE

With CONSULT-II

1. Warm engine up to normal operating temperature.
2. Disconnect vacuum hose to EGR valve.
3. Check for vacuum existence at idle.

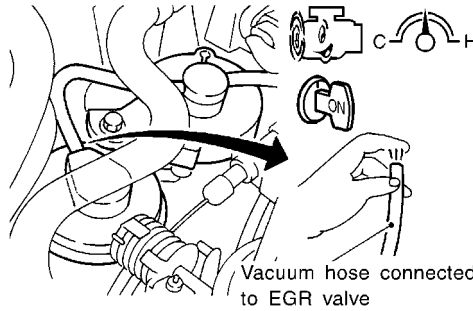

SEF337V

Vacuum should not exist at idle.

4. Select "EGRC SOLENOID VALVE" in "ACTIVE TEST" mode with CONSULT-II and turn the solenoid valve ON.
5. Check for vacuum existence when revving engine from 2,000 rpm up to 4,000 rpm.

ACTIVE TEST	
EGRC SOL/V (EGR)	ON FLOW
MONITOR	
CMPS-RPM(REF)	XXX rpm

PEF788U

Vacuum should exist when revving engine.

OK or NG


OK	▶	GO TO 4.
NG	▶	GO TO 5.


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0400 EGR FUNCTION (CLOSE)

KA24DE

Diagnostic Procedure (Cont'd)

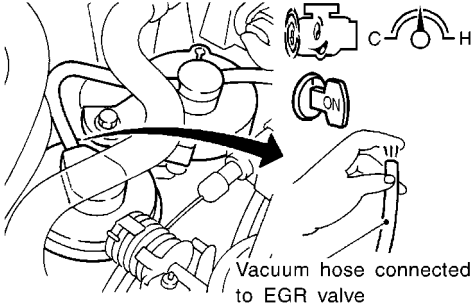3	CHECK VACUUM SOURCE TO EGR VALVE		
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Warm engine up to normal operating temperature. 2. Disconnect vacuum hose to EGR valve. 3. Check for vacuum existence at idle. 			
 <p style="text-align: center;">Vacuum hose connected to EGR valve</p>			
SEF337V			
<p>Vacuum should not exist at idle.</p> <ol style="list-style-type: none"> 4. Disconnect EGRC-solenoid valve harness connector. (The 1st trip DTC for EGRC-solenoid valve will be displayed, but ignore it.) 5. Check for vacuum existence when revving engine from 2,000 rpm up to 4,000 rpm. <p>Vacuum should exist when revving engine.</p>			
OK or NG			
OK	▶▶	GO TO 4.	
NG	▶▶	GO TO 5.	

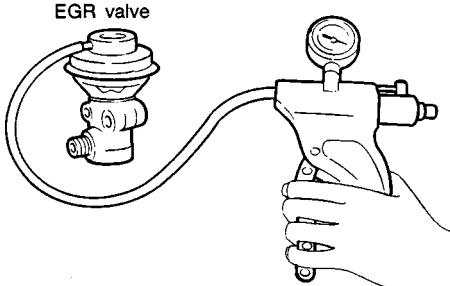4	CHECK EGR VALVE		
<ul style="list-style-type: none"> ● Apply vacuum to EGR vacuum port with a hand vacuum pump. 			
			
MEF137D			
<p>EGR valve spring should lift.</p> <ul style="list-style-type: none"> ● Check for sticking. 			
OK or NG			
OK	▶▶	GO TO 11.	
NG	▶▶	Repair or replace EGR valve.	

DTC P0400 EGR FUNCTION (CLOSE)

KA24DE

Diagnostic Procedure (Cont'd)

5	CHECK VACUUM HOSE	
<p>1. Turn ignition switch OFF. 2. Check vacuum hose for clogging, cracks or improper connection.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SEF109L</p>		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 6.
OK (Without CONSULT-II)	▶	GO TO 7.
NG	▶	Repair or replace vacuum hose.

6	CHECK EGRC-SOLENOID VALVE OPERATION																							
<p>Ⓟ With CONSULT-II 1. Turn ignition switch ON. 2. Turn EGRC-solenoid valve "ON" and "OFF" in "ACTIVE TEST" mode with CONSULT-II and check operating sound.</p> <div style="text-align: center;"> <table border="1" style="border-collapse: collapse; width: 150px;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <th>EGRC SOL/V (EGR)</th> <th>ON FLOW</th> </tr> </thead> <tbody> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <th>CMPS-RPM(REF)</th> <th>XXX rpm</th> </tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </tbody> </table> </div> <p style="text-align: right;">PEF788U</p>			ACTIVE TEST		EGRC SOL/V (EGR)	ON FLOW	MONITOR		CMPS-RPM(REF)	XXX rpm														
ACTIVE TEST																								
EGRC SOL/V (EGR)	ON FLOW																							
MONITOR																								
CMPS-RPM(REF)	XXX rpm																							
Clicking noise should be heard.																								
OK or NG																								
OK	▶	GO TO 8.																						
NG	▶	Repair or replace EGRC-solenoid valve or repair circuit.																						

7	CHECK EGRC-SOLENOID VALVE OPERATION	
<p>ⓧ Without CONSULT-II Check operating sound of the solenoid valve when disconnecting and reconnecting EGRC-solenoid valve harness connector. (The DTC or the 1st trip DTC for the EGRC-solenoid valve will be displayed, however, ignore it.) Clicking noise should be heard.</p>		
OK or NG		
OK	▶	GO TO 9.
NG	▶	GO TO 8.


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P0400 EGR FUNCTION (CLOSE)

KA24DE

Diagnostic Procedure (Cont'd)

8	DETECT MALFUNCTION PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M59, F27 ● 10A fuse ● Harness for open or short between fuse block and EGRC-solenoid valve ● Harness for open or short between ECM and EGRC-solenoid valve 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

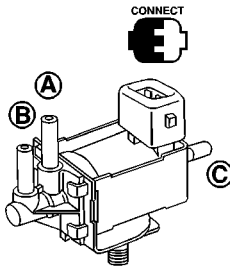9	CHECK EGRC-SOLENOID VALVE																													
<p> With CONSULT-II Check air passage continuity. Perform "EGRC SOLENOID VALVE" in "ACTIVE TEST" mode.</p>																														
	<table border="1" style="width: 100%; border-collapse: collapse; margin-bottom: 10px;"> <thead> <tr> <th colspan="2" style="text-align: center;">ACTIVE TEST</th> </tr> <tr> <th style="text-align: center;">EGRC SOL/V (EGR)</th> <th style="text-align: center;">ON CUT</th> </tr> <tr> <th colspan="2" style="text-align: center;">MONITOR</th> </tr> <tr> <th style="text-align: center;">CMPS-RPM (REF)</th> <th style="text-align: center;">XXX rpm</th> </tr> </thead> <tbody> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </tbody> </table> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Condition EGRC SOLENOID VALVE</th> <th style="text-align: center;">Air passage continuity between A and B</th> <th style="text-align: center;">Air passage continuity between A and C</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">ON</td> <td style="text-align: center;">Yes</td> <td style="text-align: center;">No</td> </tr> <tr> <td style="text-align: center;">OFF</td> <td style="text-align: center;">No</td> <td style="text-align: center;">Yes</td> </tr> </tbody> </table>	ACTIVE TEST		EGRC SOL/V (EGR)	ON CUT	MONITOR		CMPS-RPM (REF)	XXX rpm													Condition EGRC SOLENOID VALVE	Air passage continuity between A and B	Air passage continuity between A and C	ON	Yes	No	OFF	No	Yes
ACTIVE TEST																														
EGRC SOL/V (EGR)	ON CUT																													
MONITOR																														
CMPS-RPM (REF)	XXX rpm																													
Condition EGRC SOLENOID VALVE	Air passage continuity between A and B	Air passage continuity between A and C																												
ON	Yes	No																												
OFF	No	Yes																												
SEF169X																														

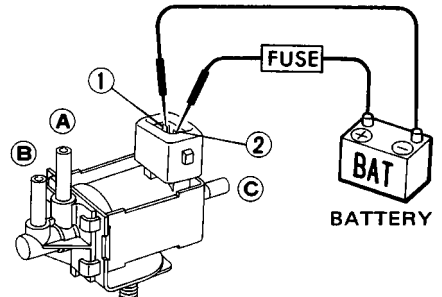
<p> Without CONSULT-II Check air passage continuity shown in the figure.</p>										
	AEC919									
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Condition</th> <th style="text-align: center;">Air passage continuity between A and B</th> <th style="text-align: center;">Air passage continuity between A and C</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">Yes</td> <td style="text-align: center;">No</td> </tr> <tr> <td style="text-align: center;">No supply</td> <td style="text-align: center;">No</td> <td style="text-align: center;">Yes</td> </tr> </tbody> </table>		Condition	Air passage continuity between A and B	Air passage continuity between A and C	12V direct current supply between terminals 1 and 2	Yes	No	No supply	No	Yes
Condition	Air passage continuity between A and B	Air passage continuity between A and C								
12V direct current supply between terminals 1 and 2	Yes	No								
No supply	No	Yes								
MTBL0283										
<p>If NG or operation takes more than 1 second, replace solenoid valve.</p> <p style="text-align: center;">OK or NG</p>										

OK	▶	GO TO 10.
NG	▶	If NG or operation takes more than 1 second, replace solenoid valve.

DTC P0400 EGR FUNCTION (CLOSE)

KA24DE

Diagnostic Procedure (Cont'd)

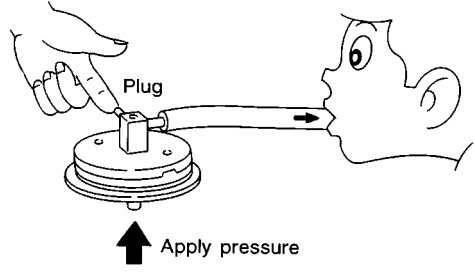10	CHECK EGRC-BPT VALVE	
<p>1. Plug one of two ports of EGRC-BPT valve.</p> <p>2. Vacuum from the other port and check for leakage while applying a pressure above 0.981 kPa (100 mmH₂O, 3.94 inH₂O) from under EGRC-BPT valve.</p>		
		
<p>3. If a leakage is noted, replace the valve.</p>		
OK or NG		
OK	▶	GO TO 11.
NG	▶	Replace EGRC-BPT valve.

SEF083P

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P0400 EGR FUNCTION (CLOSE)

KA24DE

Diagnostic Procedure (Cont'd)

11 CHECK EGR TEMPERATURE SENSOR


Check resistance change and resistance value.

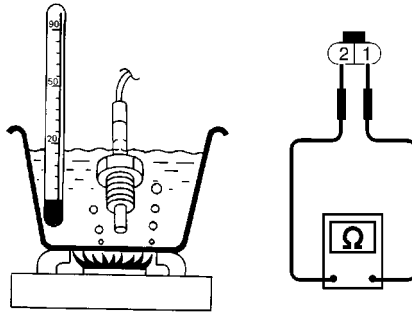

<Reference data>

EGR temperature °C (°F)	Voltage V	Resistance MΩ
0 (32)	4.81	7.9 - 9.7
50 (122)	2.82	0.57 - 0.70
100 (212)	0.8	0.08 - 0.10

SEF643Q

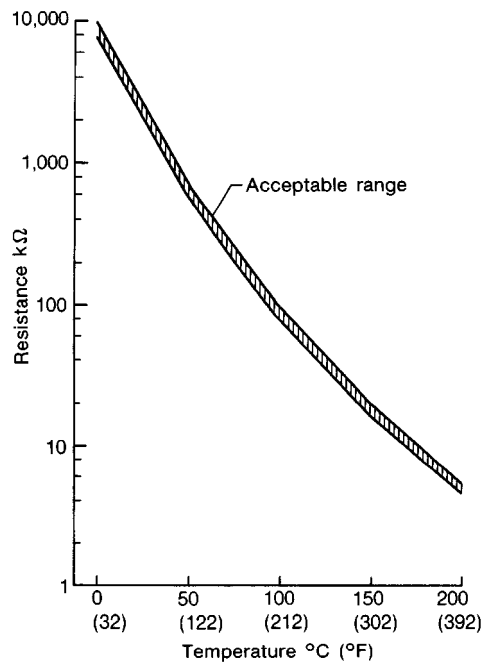

MTBL0294

SEF526Q

OK or NG

OK	▶	GO TO 12.
NG	▶	Replace EGR temperature sensor.


12 CHECK INTERMITTENT INCIDENT

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.

▶ INSPECTION END

Description

NEEC1071

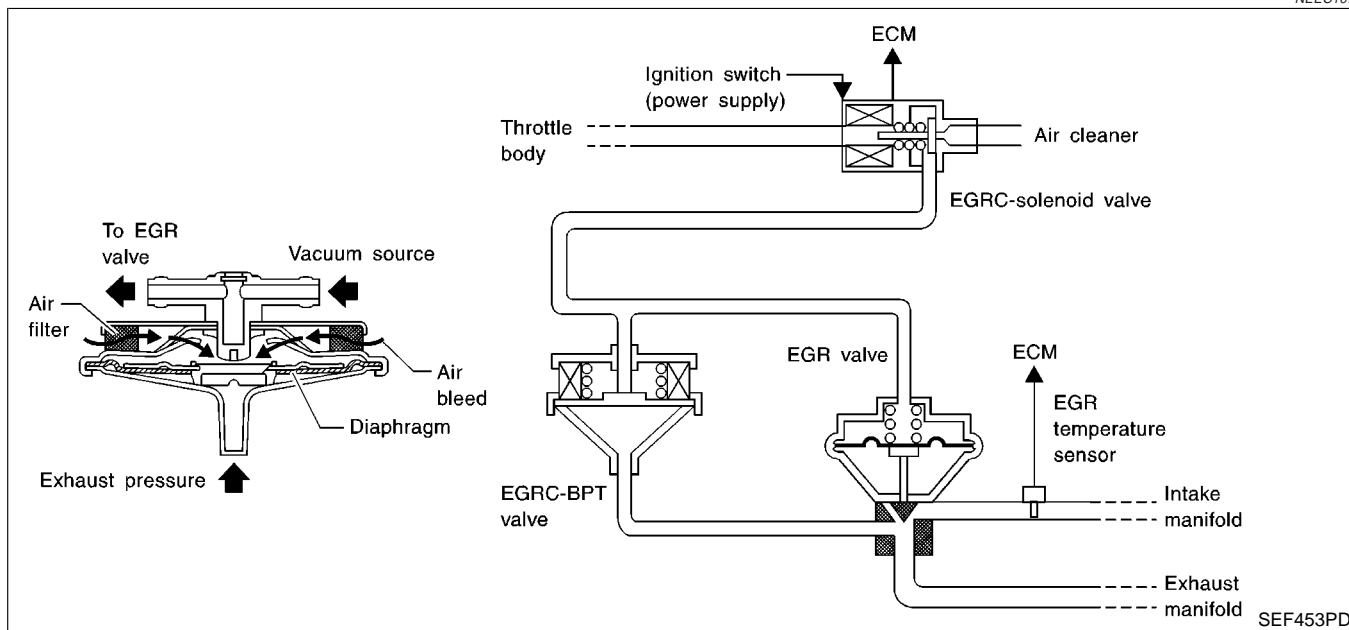

SYSTEM DESCRIPTION

NEEC1071S01

The EGRC-BPT valve monitors exhaust pressure to activate the diaphragm, controlling throttle body vacuum applied to the EGR valve. In other words, recirculated exhaust gas is controlled in response to positioning of the EGR valve or to engine operation.

On Board Diagnosis Logic

NEEC1072

If too much EGR flow exists due to an EGRC-BPT valve malfunction, off idle engine roughness will increase. If the roughness is large, then the vacuum to the EGR valve is interrupted through the EGRC-solenoid valve. If the engine roughness is reduced at that time, the EGRC-BPT valve malfunction is indicated.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0402 0306	<ul style="list-style-type: none"> The EGRC-BPT valve does not operate properly. 	<ul style="list-style-type: none"> EGRC-BPT valve EGR valve Loose or disconnected rubber tube Blocked rubber tube Camshaft position sensor Blocked exhaust system Orifice Mass air flow sensor EGRC-solenoid valve

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC Confirmation Procedure

NEEC1073

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Always perform at a temperature above 0°C (32°F).
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

Ⓜ With CONSULT-II

- 1) Turn ignition switch "ON"
- 2) Select "DTC & SRT CONFIRMATION" then "SRT WORK SUPPORT" mode with CONSULT-II.
- 3) Start engine
- 4) Rev engine up to 2,500 to 3,500 rpm and hold it for 3 consecutive minutes then release the accelerator pedal completely.
- 5) Wait 5 seconds at idle.
- 6) Rev engine up to 2,000 to 3,000 rpm and hold it until "INCMP" of "Catalyst" changes to "CMPLT" (It will take maximum of approximately 5 minutes.
- 7) Select "SELF-DIAG RESULTS" mode with CONSULT-II.

If the 1st trip DTC is detected, go to "DIAGNOSTIC PROCEDURE", EC-878. If not "CMPLT", stop engine and cool down "COOLANT TEMP/SE" to less than 70°C (158°F) and then retest from step 1).

SRT WORK SUPPORT	
CATALYST	INCMP
EVAP SYSTEM	CMPLT
O2 SEN HEATER	CMPLT
O2 SENSOR	CMPLT
MONITOR	
ENG SPEED	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec


AEC061B

SRT WORK SUPPORT	
CATALYST	INCMP
EVAP SYSTEM	INCMP
O2 SEN HEATER	INCMP
O2 SENSOR	INCMP
MONITOR	
ENG SPEED	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

SEF558X

SRT WORK SUPPORT	
CATALYST	CMPLT
EVAP SYSTEM	CMPLT
O2 SEN HEATER	CMPLT
O2 SENSOR	CMPLT
MONITOR	
ENG SPEED	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

AEC062B

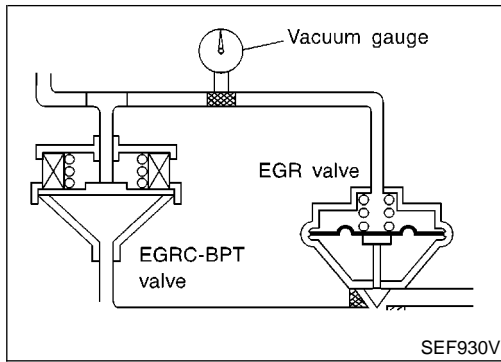

Overall Function Check

Use this procedure to check the overall function of the EGRC-BPT^{NEEC1074} valve. During this check, a 1st trip DTC might not be confirmed.

CAUTION:

Always drive vehicle at a safe speed.

⊗ Without CONSULT-II

- 1) Install vacuum gauge between EGRC-BPT valve and EGR valve as shown in the illustration.
- 2) Lift up vehicle.
- 3) Start engine and shift to 1st gear position.
- 4) Check vacuum gauge while keeping engine speed at 2,400 to 3,200 rpm.

Vacuum should be 0 to -20 kPa (0 to -150 mmHg, 0 to -5.91 inHg).

If NG, go to "Diagnostic Procedure", EC-342.

If OK, go to next step.

- 5) Check the EGR valve lifting when revving from 2,000 rpm to 4,000 rpm quickly under no load.
EGR valve should lift up, and go down without sticking when the engine is returned to idle.
- 6) Check rubber tube between intake manifold collector, EGRC-solenoid valve, EGR valve and EGRC-BPT valve for misconnection, cracks or blockages.
- 7) If NG, go to "Diagnostic Procedure", EC-342.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX


Diagnostic Procedure

=NEEC1075

1	CHECK HOSE	
Check vacuum hose for clogging and improper connection.		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Repair or replace vacuum hose.

2	CHECK EXHAUST SYSTEM	
Check exhaust system for collapse.		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Repair or replace exhaust system.

3	CHECK ORIFICE	
Check if orifice is installed in vacuum hose between EGRC-BPT valve and EGRC-solenoid valve.		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Replace vacuum hose.

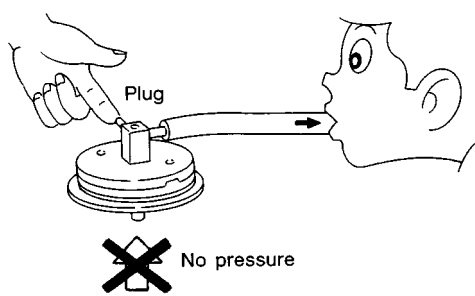
4	CHECK EGRC-BPT VALVE	
<p>1. Plug one of two ports of EGRC-BPT valve.</p> <p>2. Vacuum from the other port and check leakage without applying any pressure from under EGR-BPT valve.</p> <p>Leakage should exist.</p>		
		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace EGRC-BPT valve.

SEF172P

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

5 CHECK CAMSHAFT POSITION SENSOR

1. Start engine and warm it up to normal operating temperature.
2. Check voltage between ECM terminals 49 and engine ground ECM terminal 44 or 48 and ground.

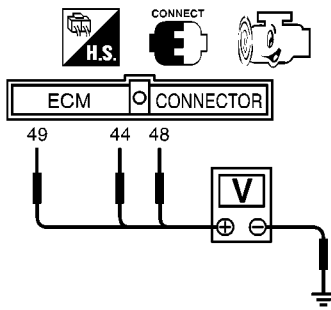

Terminal 44 or 48 and engine ground

Condition	Idle	2,000 rpm
Voltage	0.2 - 0.5V	0 - 0.5V
Pulse signal		

Terminal 49 and engine ground

Condition	Idle	2,000 rpm
Voltage	Approximately 2.6V	Approximately 2.5 - 2.6V
Pulse signal		


SEF893W

OK or NG

OK	▶	GO TO 6.
NG	▶	Replace camshaft position sensor.

6 CHECK MASS AIR FLOW SENSOR

1. Turn ignition switch ON.
2. Start engine and warm it up to normal operating temperature.
3. Check voltage between ECM terminal 54 (Mass air flow sensor signal) and ground.

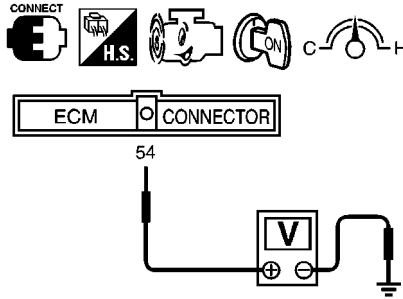


SEF326V

Conditions	Voltage V
Ignition switch "ON" (Engine stopped.)	Less than 1.0
Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.8
2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.9 - 2.3
Idle to about 4,000 rpm*	1.3 - 1.7 to Approx. 3.0

*: Check for linear voltage rise in response to increases to about 4,000 rpm in engine speed.

MTBL0326

4. If the voltage is out of specification, disconnect mass air flow sensor harness connector and connect it again. Repeat above check.
5. If NG, remove mass air flow sensor from air duct. Check hot wire for damage or dust.

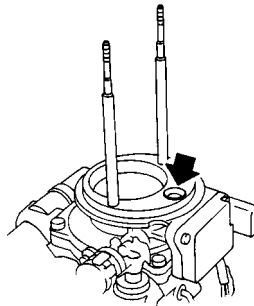

SEF893J

OK or NG


OK	▶	GO TO 7.
NG	▶	Replace mass air flow sensor.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

7 CHECK EGRC-SOLENOID VALVE

With CONSULT-II

Check air passage continuity.
Perform "EGRC SOLENOID VALVE" in "ACTIVE TEST" mode.

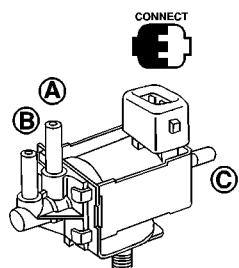


ACTIVE TEST	
EGRC SOL/V (EGR)	ON CUT
MONITOR	
CMPS-RPM (REF)	XXX rpm

Condition EGRC SOLENOID VALVE	Air passage continuity between A and B	Air passage continuity between A and C
ON	Yes	No
OFF	No	Yes

SEF169X

Without CONSULT-II

Check air passage continuity shown in the figure.

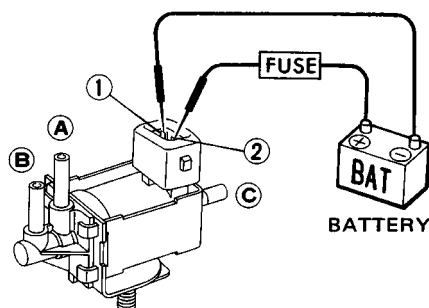

AEC919


Condition	Air passage continuity between A and B	Air passage continuity between A and C
12V direct current supply between terminals 1 and 2	Yes	No
No supply	No	Yes

MTBL0283


If NG or operation takes more than 1 second, replace solenoid valve.

OK or NG

OK	▶	GO TO 8.
NG	▶	Replace EGRC-solenoid valve.

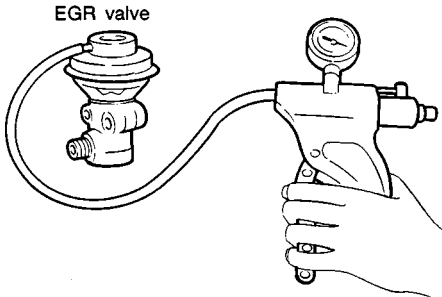8	CHECK EGR VALVE		
<ul style="list-style-type: none"> ● Apply vacuum to EGR vacuum port with a hand vacuum pump. 			
			
<p>EGR valve spring should lift.</p> <ul style="list-style-type: none"> ● Check for sticking. 			
MEF137D			
OK or NG			
OK		▶	GO TO 9.
NG		▶	Replace EGR valve.

9	CHECK INTERMITTENT INCIDENT		
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.			
		▶	INSPECTION END

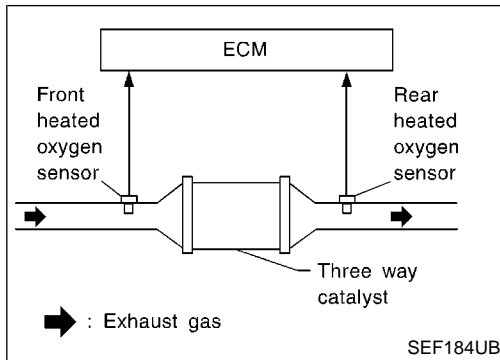

On Board Diagnosis Logic

NEEC1076

The ECM monitors the switching frequency ratio of front and rear heated oxygen sensors.

A three way catalyst* with high oxygen storage capacity will indicate a low switching frequency of rear heated oxygen sensor. As oxygen storage capacity decreases, the rear heated oxygen sensor switching frequency will increase.

When the frequency ratio of front and rear heated oxygen sensors approaches a specified limit value, the three way catalyst* malfunction is diagnosed.

*: Warm-up three way catalyst (For California)

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0420 0702	<ul style="list-style-type: none"> • Three way catalyst does not operate properly. • Three way catalyst does not have enough oxygen storage capacity. 	<ul style="list-style-type: none"> • Three way catalyst* • Exhaust tube • Intake air leaks • Injectors • Injector leaks • Spark plug • Improper ignition timing

*: Warm-up three way catalyst (For California)

3

DATA MONITOR	
MONITORING	NO FAIL
CMPS~RPM (REF)	XXX rpm
FR O2 SEN	XXX V
RR O2 SEN	XXX V
FR O2 MNTR	RICH
RR O2 MNTR	LEAN
VHCL SPEED SE	XXX km/h

PEF321U

7

SRT STATUS	
CATALYST	CMPLT
EVAP SYSTEM	INCMP
O2 SENSOR	CMPLT
O2 SEN HEATER	CMPLT
EGR SYSTEM	INCMP

PEF215U

DTC Confirmation Procedure

NEEC1077

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

Ⓜ With CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set "MANU TRIG" and "HI SPEED", then select "FR O2 SENSOR", "RR O2 SENSOR", "FR O2 MNTR", "RR O2 MNTR" in "DATA MONITOR" mode with CONSULT-II.
- 4) Touch "RECORD" on CONSULT-II screen with engine speed held at 2,000 rpm constantly under no load.
- 5) Make sure that the switching frequency between "RICH" and "LEAN" of "RR O2 MNTR" is much less than that of "FR O2 MNTR" as shown below.

Switching frequency ratio = A/B

A: Rear heated oxygen sensor switching frequency

B: Front heated oxygen sensor switching frequency

This ratio should be less than 0.75.

If the ratio is greater than above, the warm-up three way catalyst (models for California) is not operating properly.

If the "FR O2 MNTR" does not indicate "RICH" and "LEAN" periodically more than 5 times within 10 seconds at step 4, perform trouble diagnoses for DTC P0133 first. (See EC-213.)

If the result is NG, go to "Diagnostic Procedure", EC-349.

If the result is OK, go to following step.


- 6) Select "AUTO TRIG" in "DATA MONITOR" mode with CONSULT-II.
- 7) Drive vehicle (with transmission in 5th position) at a speed of

approximately 84 to 96 km/h (52 to 60 MPH) with the following for at least 10 consecutive minutes.

(Drive the vehicle in an area where vehicle speed and accelerator pressure can be held steady and constant.)

If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-349.

- 8) Select "SRT STATUS" in "DTC CONFIRMATION" mode with CONSULT-II.
- 9) Verify that "CATALYST" is "CMPLT".
If not "CMPLT", repeat the test from step 6.

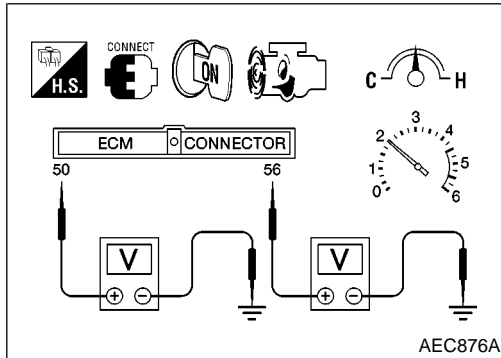

Overall Function Check

NEEC1078

Use this procedure to check the overall function of the three way catalyst. During this check, a 1st trip DTC might not be confirmed.

CAUTION:

Always drive vehicle at a safe speed.

⊗ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeters probes between ECM terminals 50 (Front heated oxygen sensor signal), 56 (Rear heated oxygen sensor signal) and engine ground.
- 4) Keep engine speed at 2,000 rpm constant under no load.
- 5) Make sure that the voltage switching frequency (high & low) between ECM terminal 56 and engine ground is much less than that of ECM terminal 50 and engine ground.

Switching frequency ratio = A/B

A: Rear heated oxygen sensor voltage switching frequency

B: Front heated oxygen sensor voltage switching frequency

This ratio should be less than 0.75.

If the ratio is greater than above, it means three way catalyst does not operate properly.


NOTE:

If the voltage at terminal 50 does not switch periodically more than 5 times within 10 seconds at step 4, perform trouble diagnosis for DTC P0133 first. (See EC-191.)

Diagnostic Procedure

=NEEC1079


1	CHECK EXHAUST SYSTEM	
Visually check exhaust tubes and muffler for dent.		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Repair or replace.

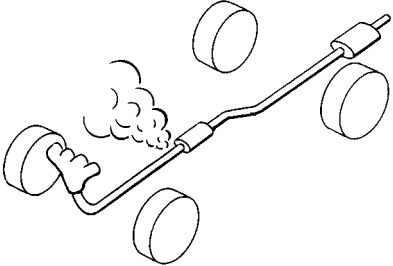
2	CHECK EXHAUST AIR LEAK	
1. Start engine and run it at idle. 2. Listen for an exhaust air leak before the warm-up three way catalyst (California model), the three way catalyst (Non-California model).		
		
OK or NG		
SEF099P		
OK	▶	GO TO 3.
NG	▶	Repair or replace.


3	CHECK INTAKE AIR LEAK	
Listen for an intake air leak after the mass air flow sensor.		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair or replace.

4	CHECK IGNITION TIMING											
1. Check the following items. Refer to "Basic Inspection", EC-96.												
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Items</th> <th style="text-align: center;">Specifications</th> </tr> </thead> <tbody> <tr> <td>Ignition timing</td> <td>20° ± 2° BTDC</td> </tr> <tr> <td>Base idle speed</td> <td>750 ± 50 rpm (in "P" or "N" position)</td> </tr> <tr> <td>Closed throttle position switch idle position adjustment</td> <td>Feeler gauge thickness and switch condition 0.1 mm (0.004 in): ON 0.3 mm (0.012 in): OFF</td> </tr> <tr> <td>Target idle speed</td> <td>800 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table>			Items	Specifications	Ignition timing	20° ± 2° BTDC	Base idle speed	750 ± 50 rpm (in "P" or "N" position)	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.1 mm (0.004 in): ON 0.3 mm (0.012 in): OFF	Target idle speed	800 ± 50 rpm (in "P" or "N" position)
Items	Specifications											
Ignition timing	20° ± 2° BTDC											
Base idle speed	750 ± 50 rpm (in "P" or "N" position)											
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.1 mm (0.004 in): ON 0.3 mm (0.012 in): OFF											
Target idle speed	800 ± 50 rpm (in "P" or "N" position)											
MTBL0328												
OK or NG												
OK	▶	GO TO 5.										
NG	▶	Adjust ignition timing.										

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

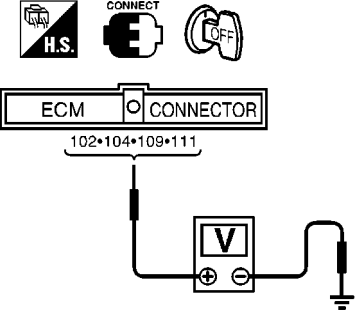5	CHECK INJECTORS	<ol style="list-style-type: none"> 1. Refer to Wiring Diagram for Injectors, EC-563. 2. Stop engine and then turn ignition switch ON. 3. Check voltage between ECM terminals 102, 104, 109 and 111 and ground with CONSULT-II or tester. 	
			
<p>Battery voltage should exist.</p> <p style="text-align: right;">SEF189V</p>			
OK or NG			
OK	▶	GO TO 6.	
NG	▶	Perform "Diagnostic Procedure" INJECTOR, EC-564.	

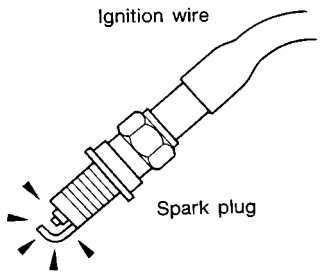6	CHECK IGNITION SPARK	<ol style="list-style-type: none"> 1. Disconnect ignition wire from spark plug. 2. Connect a known good spark plug to the ignition wire. 3. Place end of spark plug against a suitable ground and crank engine. 4. Check for spark. 	
			
SEF282G			
OK or NG			
OK	▶	GO TO 8.	
NG	▶	GO TO 7.	

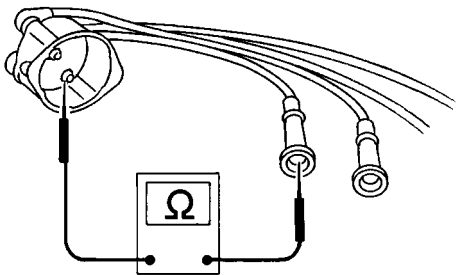7	CHECK IGNITION WIRES	<p>1. Inspect wires for cracks, damage, burned terminals and for improper fit.</p> <p>2. Measure the resistance of wires to their distributor cap terminal. Move each wire while testing to check for intermittent breaks.</p> <div style="text-align: center; margin: 10px 0;">  </div> <p style="text-align: right; margin-right: 20px;">SEF174P</p> <p>Resistance: 13.6 - 18.4 kΩ/m (4.15 - 5.61 kΩ/ft) at 25°C (77°F)</p> <p>If the resistance exceeds the above specification, inspect ignition wire to distributor cap connection. Clean connection or replace the ignition wire with a new one.</p> <p style="text-align: center;">OK or NG</p>	GI MA EM LC EC FE CL MT
OK	▶	Check ignition coil, power transistor and their circuits. Refer to EC-449.	AT
NG	▶	Replace.	TF PD AX SU

8	CHECK INJECTOR	<p>1. Turn ignition switch OFF.</p> <p>2. Remove injector assembly. Refer to EC-41. Keep fuel hose and all injectors connected to injector gallery.</p> <p>3. Disconnect camshaft position sensor harness connector.</p> <p>4. Turn ignition switch ON. Make sure fuel does not drip from injector.</p> <p style="text-align: center;">OK or NG</p>	BR
OK (Does not drip.)	▶	GO TO 9.	ST
NG (Drips.)	▶	Replace the injector(s) from which fuel is dripping.	RS BT HA SC EL IDX

9	CHECK INTERMITTENT INCIDENT	<p>Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.</p>	
Trouble is fixed.	▶	INSPECTION END	
Trouble is not fixed.	▶	Replace warm-up three way catalyst*. *: Three way catalyst (For Non-California)	

DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

KA24DE

On Board Diagnosis Logic

On Board Diagnosis Logic

NEEC1080


NOTE:

If DTC P0440, P1440 is displayed with DTC P1448, perform trouble diagnosis for DTC P1448 first. (See EC-515.)

This diagnosis detects leaks in the EVAP purge line using engine intake manifold vacuum.

If pressure does not increase, the ECM will check for leaks in the line between the fuel tank and EVAP canister purge volume control solenoid valve under the following "Vacuum test" conditions.

The vacuum cut valve bypass valve is opened to clear the line between the fuel tank and the EVAP canister purge volume control solenoid valve. The EVAP canister vent control valve will then be closed to shut the EVAP purge line off. The EVAP canister purge volume control solenoid valve is opened to depressurize the EVAP purge line using intake manifold vacuum. After this occurs, the EVAP canister purge volume control solenoid valve will be closed.

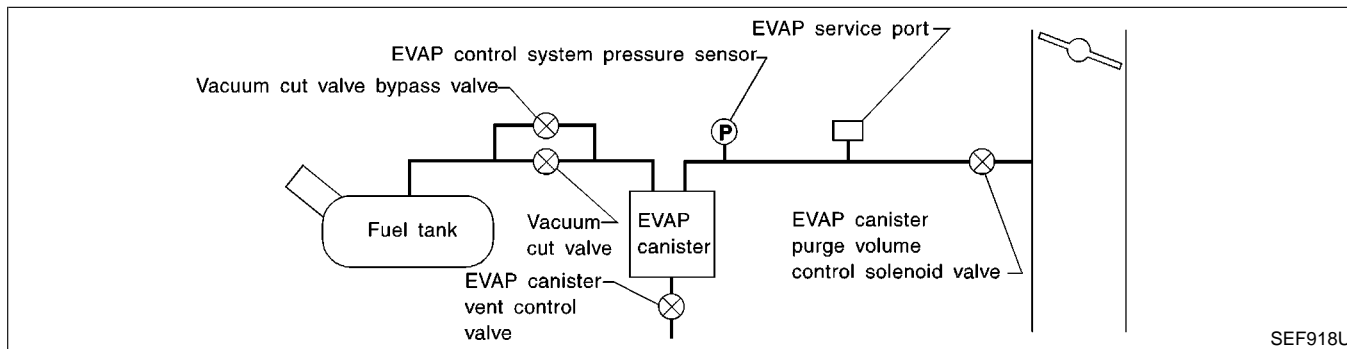

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0440 0705	<ul style="list-style-type: none"> ● EVAP control system has a leak. ● EVAP control system does not operate properly. 	<ul style="list-style-type: none"> ● Incorrect fuel tank vacuum relief valve ● Incorrect fuel filler cap used ● Fuel filler cap remains open or fails to close. ● Foreign matter caught in fuel filler cap. ● Leak is in line between intake manifold and EVAP canister purge volume control solenoid valve. ● Foreign matter caught in EVAP canister vent control valve. ● EVAP canister or fuel tank leaks ● EVAP purge line (pipe and rubber tube) leaks ● EVAP purge line rubber tube bent. ● Blocked or bent rubber tube to EVAP control system pressure sensor ● Loose or disconnected rubber tube ● EVAP canister vent control valve and the circuit ● EVAP canister purge volume control solenoid valve and the circuit ● Absolute pressure sensor ● Fuel tank temperature sensor ● MAP/BARO switch solenoid valve and the circuit ● Blocked or bent rubber tube to MAP/BARO switch solenoid valve ● O-ring of EVAP canister vent control valve is missing or damaged. ● Water separator ● EVAP canister is saturated with water. ● EVAP control system pressure sensor

CAUTION:

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine NISSAN rubber tube as a replacement.

DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

KA24DE

DTC Confirmation Procedure

NEEC1081

EVAP SML LEAK P0440/P1440

1) FOR BEST RSLT, PERFORM AT FOLLOWING CONDITIONS.
 - FUEL LEVEL: 1/4-3/4
 - AMBIENT TEMP: 0-30 C (32-86F)
 - OPEN ENGINE HOOD.
 2) START ENG WITH VHCL STOPPED. IF ENG IS ON, STOP FOR 5 SEC. THEN RESTART.
 3) TOUCH START.

SEF565X

EVAP SML LEAK P0440/P1440

WAIT
2 TO 10 MINUTES.
KEEP ENGINE RUNNING
AT IDLE SPEED.

SEF566X

EVAP SML LEAK P0440/P1440

MAINTAIN
1600 - 2100 RPM UNTIL FINAL
RESULT APPEARS.
(APPROX. 3 MINUTES)

1600 rpm 1850 rpm 2100 rpm

SEF874X

EVAP SML LEAK P0440/P1440

OK

SELF-DIAG RESULTS

NO DTC DETECTED.
FURTHER TESTING
MAY BE REQUIRED.

SEF567X

DTC Confirmation Procedure

NOTE:

- If DTC P0440 or P1440 is displayed with P1448, perform trouble diagnosis for DTC P1448 first. Refer to EC-515.
- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

With CONSULT-II

TESTING CONDITION:

- Perform “DTC WORK SUPPORT” when the fuel level is between 1/4 to 3/4 full and vehicle is placed on flat level surface.
 - Always perform test at a temperature of 0 to 30°C (32 to 86°F).
- 1) Turn ignition switch ON.
 - 2) Turn ignition switch OFF and wait at least 5 seconds.
 - 3) Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
 - 4) Check that the following conditions are met.

COOLAN TEMP/S	0 - 70°C (32 - 158°F)
INT/A TEMP SE	0 - 60°C (32 - 140°F)

- 5) Select “EVAP SML LEAK P0440” of “EVAPORATIVE SYSTEM” in “DTC WORK SUPPORT” mode with CONSULT-II. Follow the instruction displayed.
- 6) Make sure that “OK” is displayed.
If “NG” is displayed, refer to “Diagnostic Procedure”, EC-355.

NOTE:

Make sure that EVAP hoses are connected to EVAP canister purge volume control solenoid valve properly.

With GST

- 1) Start engine.
- 2) Drive vehicle according to “Driving pattern”, EC-64.

NOTE:

Be sure to read the explanation of “Driving pattern” on EC-64 before driving vehicle.

- 3) Stop vehicle.
- 4) Select “MODE 1” with GST.
 - If SRT of EVAP system is not set yet, go to the following step.
 - If SRT of EVAP system is set, the result will be OK.
- 5) Turn ignition switch OFF and wait at least 5 seconds.
- 6) Start engine.

It is not necessary to cool engine down before driving.

- 7) Drive vehicle again according to the “Driving pattern”, EC-64.
- 8) Stop vehicle.
- 9) Select “MODE 3” with GST.
 - If P1447 is displayed on the screen, go to “Diagnostic Procedure”, EC-507.
 - If P0440 is displayed on the screen, go to “Diagnostic Procedure”, EC-355.
 - If P1440 is displayed on the screen, go to “Diagnostic Procedure”, EC-486.
 - If P0440, P1440 and P1447 are not displayed on the screen, go to the following step.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

KA24DE

DTC Confirmation Procedure (Cont'd)

10) Select "MODE 1" with GST.

- If SRT of EVAP system is set, the result will be OK.
- If SRT of EVAP system is not set, go to step 5.


DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

KA24DE

Diagnostic Procedure

Diagnostic Procedure

=NEEC1082

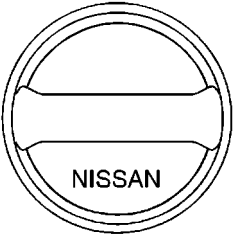1	CHECK FUEL FILLER CAP DESIGN	
<p>1. Turn ignition switch OFF. 2. Check for genuine NISSAN fuel filler cap design.</p> <div style="text-align: center;">  </div> <p style="text-align: right; font-size: small;">SEF915U</p>		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Replace with genuine NISSAN fuel filler cap.

2	CHECK FUEL FILLER CAP INSTALLATION	
<p>Check that the cap is tightened properly rotating the cap clockwise.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	<ul style="list-style-type: none"> ● Open fuel filler cap, then clean cap and fuel filler neck threads using air blower. ● Retighten until ratcheting sound is heard.



3	CHECK FUEL FILLER CAP FUNCTION	
<p>Check for air releasing sound while opening the fuel filler cap.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

KA24DE

Diagnostic Procedure (Cont'd)

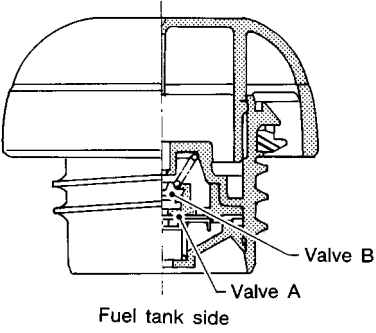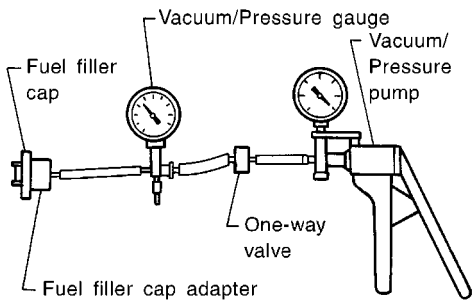4	CHECK FUEL TANK VACUUM RELIEF VALVE (BUILT INTO FUEL FILLER CAP)	<p>1. Wipe clean valve housing. 2. Check valve opening pressure and vacuum.</p> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF427N</p> <p style="text-align: right;">SEF943S</p> <p>Pressure: 16.0 - 20.0 kPa (0.163 - 0.204 kg/cm², 2.32 - 2.90 psi)</p> <p>Vacuum: -6.0 to -3.5 kPa (-0.061 to -0.036 kg/cm², -0.87 to -0.51 psi)</p> <p>CAUTION: Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.</p> <p style="text-align: center;">OK or NG</p>
OK	▶	GO TO 5.
NG	▶	Replace fuel filler cap with a genuine one.

5	CHECK EVAP PURGE LINE	<p>Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks, improper connection or disconnection. Refer to "EVAPORATIVE EMISSION SYSTEM", EC-600.</p> <p style="text-align: center;">OK or NG</p>
OK	▶	GO TO 6.
NG	▶	Repair or reconnect the hose.

6	CLEAN EVAP PURGE LINE	<p>Clean EVAP purge line (pipe and rubber tube) using air blower.</p>
	▶	GO TO 7.

DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

KA24DE

Diagnostic Procedure (Cont'd)

7	CHECK EVAP CANISTER VENT CONTROL VALVE, O-RING AND CIRCUIT	
Refer to "DTC Confirmation Procedure", EC-1017.		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Repair or replace EVAP canister vent control valve and O-ring or harness/connectors.

8	INSTALL PRESSURE PUMP	
1. Install the EVAP service port adapter and the pressure pump securely to EVAP service port.		
SEF339V		
SEF916U		
<p>NOTE:</p> <ul style="list-style-type: none"> ● Improper installation of service port may cause leaking. 		
Models with CONSULT-II	▶	GO TO 9.
Models without CON-SULT-II	▶	GO TO 10.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)


KA24DE

Diagnostic Procedure (Cont'd)

9 CHECK FOR EVAP LEAK

Ⓜ With CONSULT-II

1. Turn ignition switch ON.
2. Select "EVAP SYSTEM CLOSE" of "WORK SUPPORT" mode with CONSULT-II.

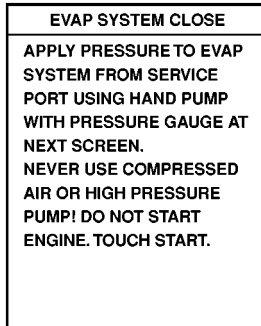


PEF658U

3. Touch "START" and apply pressure into the EVAP line until the pressure indicator reaches the middle of bar graph.

NOTE:


- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

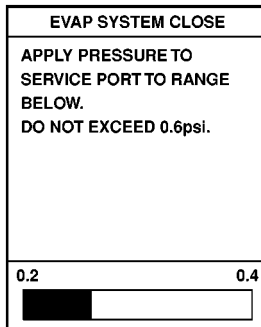

PEF917U

4. Using EVAP leak detector, locate the leak portion. For the leak detector, refer to instruction manual for more details. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-617.

Leak detector

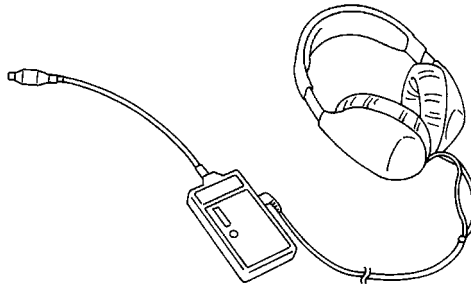

SEF200U

OK or NG

OK	▶	GO TO 11.
NG	▶	Repair or replace.

DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)


KA24DE

Diagnostic Procedure (Cont'd)

10 CHECK FOR EVAP LEAK

⊗ **Without CONSULT-II**

1. Turn ignition switch OFF.
2. Apply 12 volts DC to EVAP canister vent control valve. The valve will close. (Continue to apply 12 volts until the end of test.)

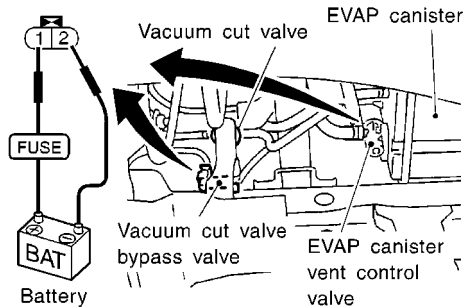


SEF503V

3. Apply 12 volts DC to vacuum cut valve bypass valve. The valve will open. (Continue to apply 12 volts until the end of test.) Shown in the above figure.
4. Pressurize the EVAP line using pressure pump with 1.3 to 2.7 kPa (10 to 20 mmHg, 0.39 to 0.79 inHg).

NOTE:

- Never use compressed air or a high pressure pump.
 - Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.
5. Using EVAP leak detector, locate the leak. For the leak detector, refer to instruction manual for more details. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-617.

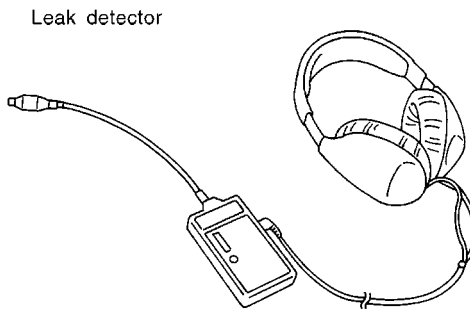

SEF200U

OK or NG

OK	▶	GO TO 12.
NG	▶	Repair or replace.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

KA24DE

Diagnostic Procedure (Cont'd)

11	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE																					
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port. 2. Start engine. 3. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode. 																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr><td colspan="2" style="text-align: center;">ACTIVE TEST</td></tr> <tr><td style="text-align: center;">PURG VOL CONT/V</td><td style="text-align: center;">XXX %</td></tr> <tr><td colspan="2" style="text-align: center;">MONITOR</td></tr> <tr><td style="text-align: center;">CMPS~RPM(REF)</td><td style="text-align: center;">XXX rpm</td></tr> <tr><td style="text-align: center;">FR O2 MNTR</td><td style="text-align: center;">RICH</td></tr> <tr><td style="text-align: center;">A/F ALPHA</td><td style="text-align: center;">XXX %</td></tr> <tr><td style="text-align: center;">THRTL POS SEN</td><td style="text-align: center;">XXX V</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>			ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		CMPS~RPM(REF)	XXX rpm	FR O2 MNTR	RICH	A/F ALPHA	XXX %	THRTL POS SEN	XXX V						
ACTIVE TEST																						
PURG VOL CONT/V	XXX %																					
MONITOR																						
CMPS~RPM(REF)	XXX rpm																					
FR O2 MNTR	RICH																					
A/F ALPHA	XXX %																					
THRTL POS SEN	XXX V																					
PEF190V																						
<ol style="list-style-type: none"> 4. Touch "Qu" on CONSULT-II screen to increase "PURG VOL CONT/V" opening to 100.0%. 5. Check vacuum hose for vacuum. Vacuum should exist. <p style="text-align: center;">OK or NG</p>																						
OK	▶	GO TO 14.																				
NG	▶	GO TO 13.																				

12	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine. 3. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port. 4. Start engine and let it idle for at least 60 seconds. 5. Check vacuum hose for vacuum. Vacuum should exist. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 15.
NG	▶	GO TO 13.

13	CHECK VACUUM HOSE	
<p>Check vacuum hoses for clogging or disconnection. Refer to "Vacuum Hose Drawing", EC-607.</p> <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 14.
OK (Without CONSULT-II)	▶	GO TO 15.
NG	▶	Repair or reconnect the hose.

DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

KA24DE

Diagnostic Procedure (Cont'd)

14	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE																										
<p>Ⓟ With CONSULT-II</p> <p>1. Start engine.</p> <p>2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening. If OK, inspection end. If NG, go to following step.</p> <div style="text-align: center; margin: 10px 0;"> <table border="1" style="border-collapse: collapse; width: 150px; margin: 0 auto;"> <thead> <tr> <th colspan="2" style="text-align: center;">ACTIVE TEST</th> </tr> <tr> <th style="text-align: center;">PURG VOL CONT/V</th> <th style="text-align: center;">XXX %</th> </tr> <tr> <th colspan="2" style="text-align: center;">MONITOR</th> </tr> <tr> <th style="text-align: center;">CMPS~RPM(REF)</th> <th style="text-align: center;">XXX rpm</th> </tr> <tr> <th style="text-align: center;">FR O2 MNTR</th> <th style="text-align: center;">RICH</th> </tr> <tr> <th style="text-align: center;">A/F ALPHA</th> <th style="text-align: center;">XXX %</th> </tr> <tr> <th style="text-align: center;">THRTL POS SEN</th> <th style="text-align: center;">XXX V</th> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </thead> </table> </div> <p>3. Check air passage continuity.</p> <div style="text-align: center; margin: 10px 0;"> <table border="1" style="border-collapse: collapse; width: 300px; margin: 0 auto;"> <thead> <tr> <th style="text-align: center;">Condition PURG VOL CONT/V value</th> <th style="text-align: center;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">100.0%</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td style="text-align: center;">0.0%</td> <td style="text-align: center;">No</td> </tr> </tbody> </table> </div> <p style="text-align: right; margin-right: 50px;">PEF190V</p> <p style="text-align: right; margin-right: 50px;">MTBL0302</p> <p style="text-align: center; margin-top: 20px;">OK or NG</p>		ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		CMPS~RPM(REF)	XXX rpm	FR O2 MNTR	RICH	A/F ALPHA	XXX %	THRTL POS SEN	XXX V							Condition PURG VOL CONT/V value	Air passage continuity between A and B	100.0%	Yes	0.0%	No
ACTIVE TEST																											
PURG VOL CONT/V	XXX %																										
MONITOR																											
CMPS~RPM(REF)	XXX rpm																										
FR O2 MNTR	RICH																										
A/F ALPHA	XXX %																										
THRTL POS SEN	XXX V																										
Condition PURG VOL CONT/V value	Air passage continuity between A and B																										
100.0%	Yes																										
0.0%	No																										
OK	▶ GO TO 15.																										
NG	▶ Replace EVAP canister purge volume control solenoid valve.																										

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

KA24DE

Diagnostic Procedure (Cont'd)

15 CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE


Without CONSULT-II
Check air passage continuity.

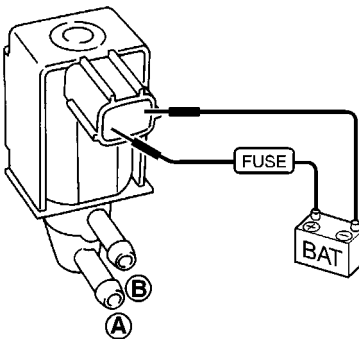

SEF661U

Condition	Air passage continuity between A and B
12V direct current supply between terminals	Yes
No supply	No

MTBL0303

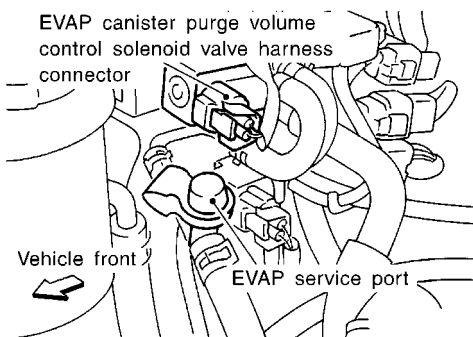

SEF339V

OK or NG

OK	▶	GO TO 16.
NG	▶	Replace EVAP canister purge volume control solenoid valve.


DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

KA24DE

Diagnostic Procedure (Cont'd)


16 CHECK ABSOLUTE PRESSURE SENSOR

1. Remove absolute pressure sensor with its harness connector connected.

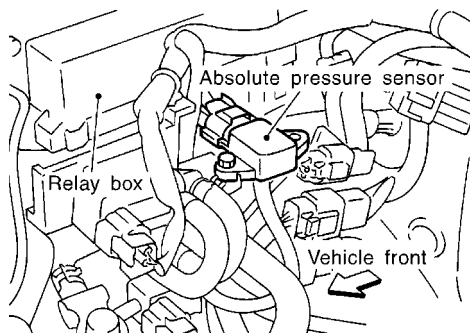

SEF328V

2. Remove hose from absolute pressure sensor.
3. Turn ignition switch "ON" and check output voltage between ECM terminal 45 (Absolute pressure sensor signal) and engine ground.

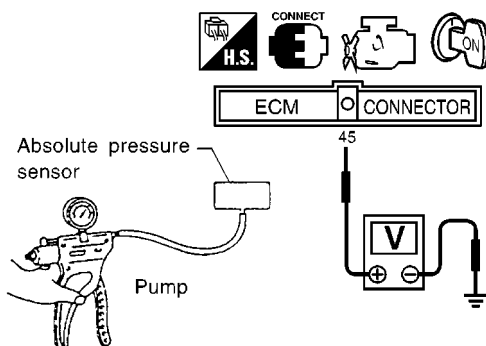

SEF132V

The voltage should be 3.2 to 4.8V.

4. Use pump to apply vacuum of -26.7 kPa (-200 mmHg, -7.87 inHg) to absolute pressure sensor as shown in figure and check the output voltage.

The voltage should be 1.0 to 1.4V lower than the value measured in step 3.

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -93.3 kPa (-700 mmHg, -27.56 inHg) or over 101.3 kPa (760 mmHg, 29.92 inHg) of pressure.

OK or NG

OK	▶	GO TO 17.
NG	▶	Replace absolute pressure sensor.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

KA24DE

Diagnostic Procedure (Cont'd)

17 CHECK TANK FUEL TEMPERATURE SENSOR

Check resistance by heating with hot water or heat gun as shown in the figure.

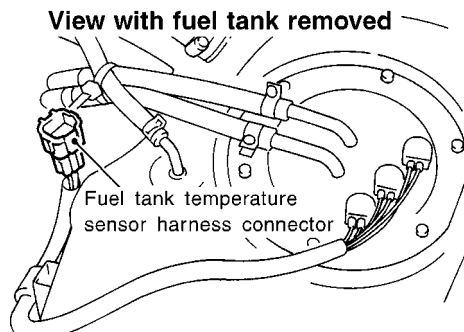

SEF334VA

OK or NG

OK	▶	GO TO 18..
NG	▶	Replace tank fuel temperature sensor.


DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

KA24DE

Diagnostic Procedure (Cont'd)


18 CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

1. Remove EVAP control system pressure sensor with its harness connector connected.

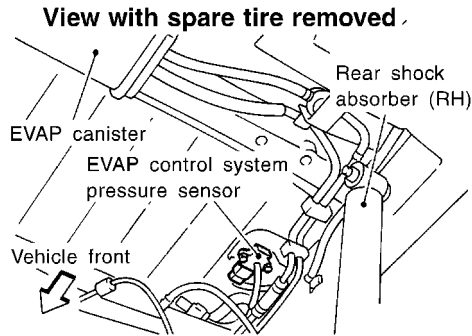

SEF341V

2. Remove hose from EVAP control system pressure sensor.
3. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.
4. Check output voltage between ECM terminal 62 and engine ground.

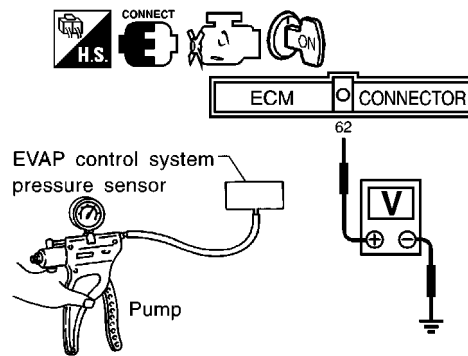


SEF198V

Pressure (Relative to atmospheric pressure)	Voltage (V)
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6

MTBL0295

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.

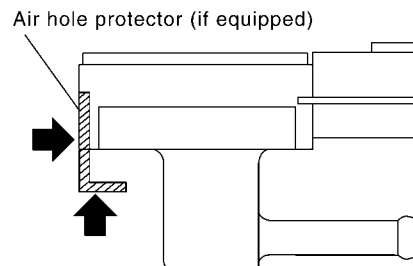

Never apply force.

SEF799W

- Never apply force to the air hole protector of the sensor, if equipped.
- Discard any EVAP control system pressure sensor which has been dropped from height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK	▶	GO TO 19.
NG	▶	Replace EVAP control system pressure sensor.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

KA24DE

Diagnostic Procedure (Cont'd)

19	CHECK FUEL LEVEL SENSOR
1. Remove fuel level sensor assembly. Refer to FE-7 .	
2. Refer to "FUEL LEVEL SENSOR UNIT CHECK", EL-79 .	
OK	▶ GO TO 19.
NG	▶ Replace fuel level sensor.

20	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
	▶ INSPECTION END

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)

KA24DE
Description


Description SYSTEM DESCRIPTION

NEEC1083

NEEC1083S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	EVAP canister purge flow control	EVAP canister purge volume control solenoid valve
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
Throttle position switch	Closed throttle position		
Front heated oxygen sensors	Density of oxygen in exhaust gas (Mixture ratio feedback signal)		
Fuel tank temperature sensor	Fuel temperature in fuel tank		
Vehicle speed sensor	Vehicle speed		

This system controls flow rate of fuel vapor from the EVAP canister. The opening of the vapor by-pass passage in the EVAP canister purge volume control solenoid valve changes to control the flow rate. The EVAP canister purge volume control solenoid valve repeats ON/OFF operation according to the signal sent from the ECM. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. When the engine is operating, the flow rate of fuel vapor from the EVAP canister is regulated as the air flow changes.

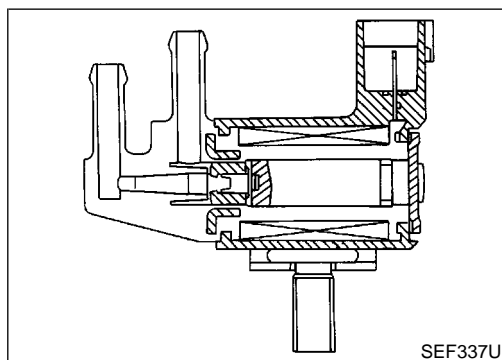

COMPONENT DESCRIPTION

NEEC1083S02

The EVAP canister purge volume control solenoid valve uses a ON/OFF duty to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

CONSULT-II Reference Value in Data Monitor Mode

NEEC1084

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
PURG VOL C/V	● Engine: After warming up ● Air conditioner switch "OFF" ● Shift lever: "N" ● No-load Idle (Vehicle stopped)	0%
	2,000 rpm	—

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)



KA24DE

ECM Terminals and Reference Value

ECM Terminals and Reference Value

NEEC1085

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

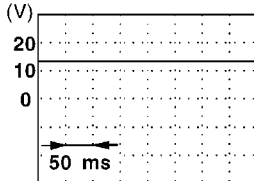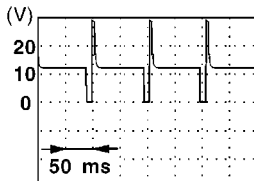TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
4	LG/R	ECCS relay (Self-shutoff)	[Engine is running] [Ignition switch OFF] <ul style="list-style-type: none"> ● For a few seconds after turning ignition switch OFF 	0 - 1V
			[Ignition switch OFF] <ul style="list-style-type: none"> ● A few seconds passed after turning ignition switch OFF 	BATTERY VOLTAGE (11 - 14V)
5	R/Y	EVAP canister purge volume control solenoid valve	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V) 
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm (More than 200 seconds after starting engine) 	BATTERY VOLTAGE (11 - 14V) 
67	B/P	Power supply for ECM	[Ignition switch ON]	BATTERY VOLTAGE (11 - 14V)
72	B/P			
117	B/P	Current return	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NEEC1086

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0443 1008	An improper voltage signal is sent to ECM through the valve.	<ul style="list-style-type: none"> ● Harness or connectors (The valve circuit is open or shorted.) ● EVAP canister purge volume control solenoid valve

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)

KA24DE

DTC Confirmation Procedure

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm

PEF357V

DTC Confirmation Procedure

=NEEC1087

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11V at idle.

Ⓜ With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and let it idle for at least 30 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-371

Ⓜ With GST

Follow the procedure "With CONSULT-II".

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)






KA24DE

Wiring Diagram

Wiring Diagram

NEEC1088

EC-PGC/V-01

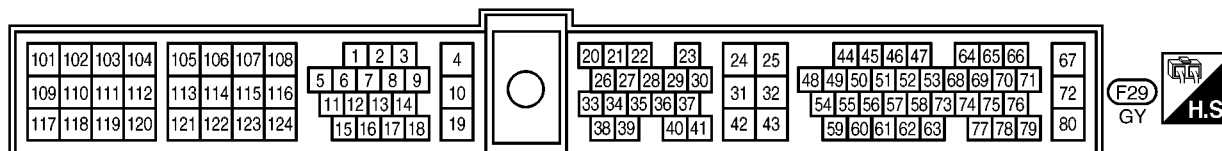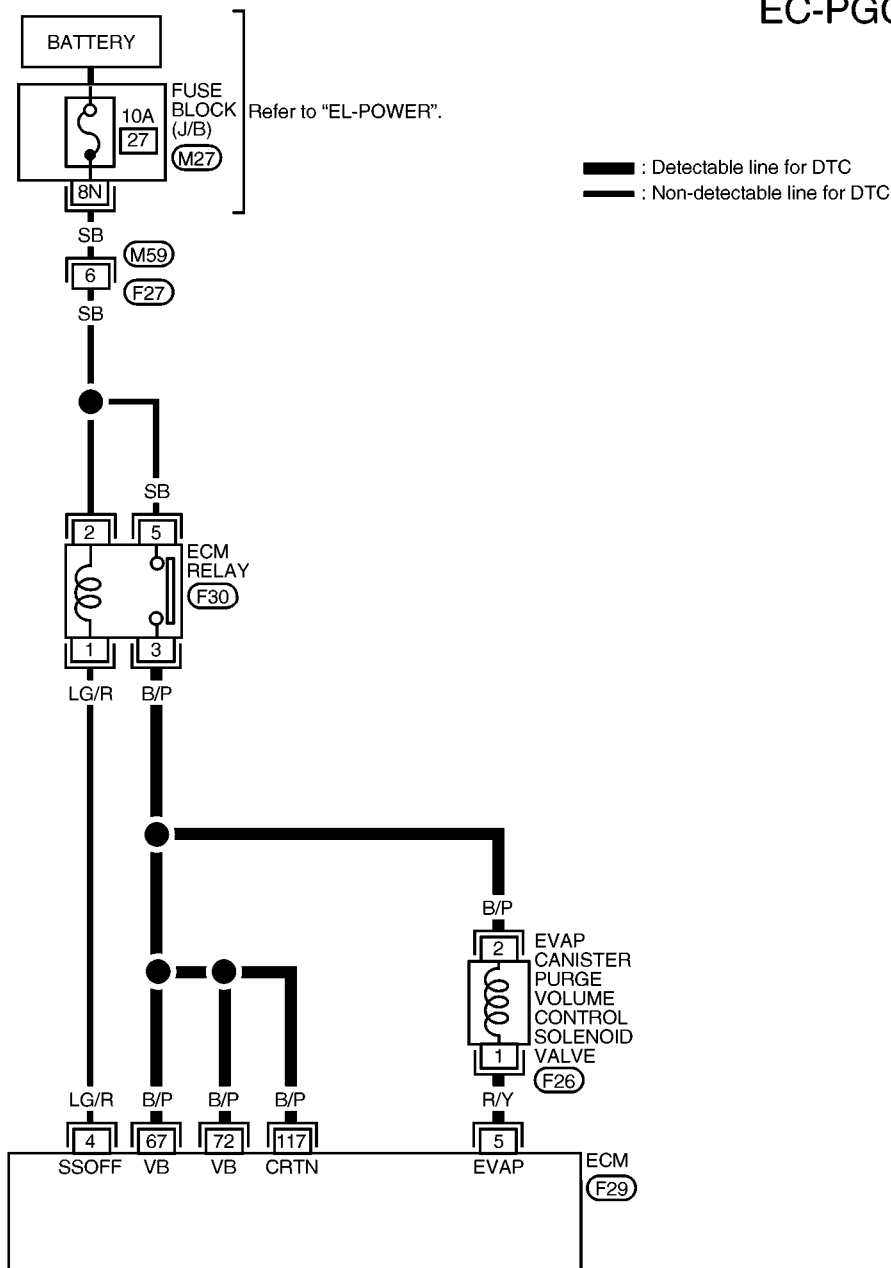

AEC996A



DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)

KA24DE

Diagnostic Procedure

Diagnostic Procedure

NEEC1089

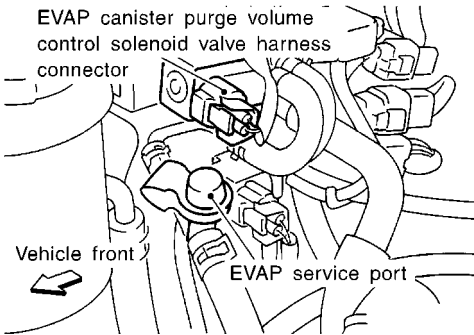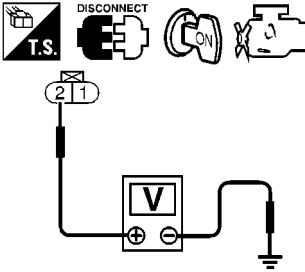1	CHECK POWER SUPPLY		
		<p>1. Turn ignition switch OFF.</p> <p>2. Disconnect EVAP canister purge volume control solenoid valve harness connector.</p> <div style="text-align: center;">  </div> <p>3. Turn ignition switch ON.</p> <p>4. Check voltage between terminal 2 and ground with CONSULT-II or tester.</p> <p style="color: blue;">Voltage: Battery voltage</p> <div style="text-align: center;">  </div> <p style="text-align: center;">OK or NG</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p style="background-color: black; color: white; text-align: center;">EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>TF</p> <p>PD</p>
	OK	▶	GO TO 3.
	NG	▶	GO TO 2.

SEF339V

SEF192V

2	DETECT MALFUNCTIONING PART		
		<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness for open or short between EVAP canister purge volume control solenoid valve and ECM relay ● Harness for open or short between EVAP canister purge volume control solenoid valve and ECM 	
		▶	Repair harness or connectors.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)

KA24DE

Diagnostic Procedure (Cont'd)

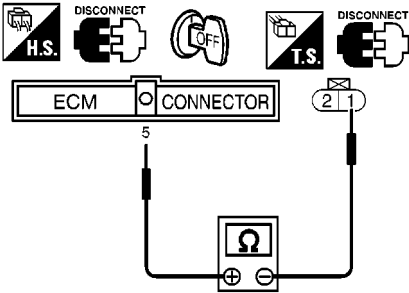3	CHECK OUTPUT SIGNAL CIRCUIT	
<p>1. Turn ignition switch OFF. 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 5 and terminal 1. Continuity should exist.</p>		
		
SEF193V		
<p>If OK, check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 5.
OK (Without CONSULT-II)	▶	GO TO 6.
NG	▶	GO TO 4.

4	DETECT MALFUNCTIONING PART	
Check the harness for open or short between EVAP canister purge volume control solenoid valve and ECM.		
	▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)

KA24DE

Diagnostic Procedure (Cont'd)



5	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE																					
<p>Ⓟ With CONSULT-II</p> <p>1. Start engine.</p> <p>2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening. If OK, inspection end. If NG, go to following step.</p>																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>PURG VOL CONT/V</td><td>XXX %</td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>CMPS~RPM(REF)</td><td>XXX rpm</td></tr> <tr><td>FR O2 MNTR</td><td>RICH</td></tr> <tr><td>A/F ALPHA</td><td>XXX %</td></tr> <tr><td>THRTL POS SEN</td><td>XXX V</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>			ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		CMPS~RPM(REF)	XXX rpm	FR O2 MNTR	RICH	A/F ALPHA	XXX %	THRTL POS SEN	XXX V						
ACTIVE TEST																						
PURG VOL CONT/V	XXX %																					
MONITOR																						
CMPS~RPM(REF)	XXX rpm																					
FR O2 MNTR	RICH																					
A/F ALPHA	XXX %																					
THRTL POS SEN	XXX V																					
<p>3. Check air passage continuity.</p>																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Condition PURG VOL CONT/V value</th> <th style="width: 50%;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">100.0%</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td style="text-align: center;">0.0%</td> <td style="text-align: center;">No</td> </tr> </tbody> </table>			Condition PURG VOL CONT/V value	Air passage continuity between A and B	100.0%	Yes	0.0%	No														
Condition PURG VOL CONT/V value	Air passage continuity between A and B																					
100.0%	Yes																					
0.0%	No																					
PEF190V																						
MTBL0302																						
OK or NG																						
OK	▶	GO TO 7.																				
NG	▶	Replace EVAP canister purge volume control solenoid valve.																				

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)

KA24DE

Diagnostic Procedure (Cont'd)

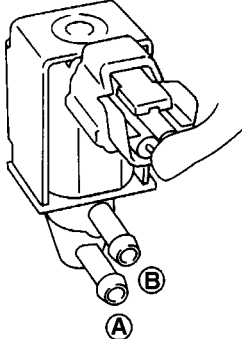
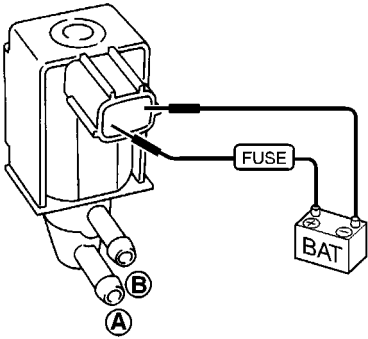
6	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE						
<p> Without CONSULT-II Check air passage continuity.</p>							
							
SEF660U							
							
SEF661U							
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="padding: 5px;">Condition</th> <th style="padding: 5px;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td style="padding: 5px;">12V direct current supply between terminals</td> <td style="text-align: center; padding: 5px;">Yes</td> </tr> <tr> <td style="padding: 5px;">No supply</td> <td style="text-align: center; padding: 5px;">No</td> </tr> </tbody> </table>		Condition	Air passage continuity between A and B	12V direct current supply between terminals	Yes	No supply	No
Condition	Air passage continuity between A and B						
12V direct current supply between terminals	Yes						
No supply	No						
MTBL0303							
OK or NG							
OK	▶ GO TO 7.						
NG	▶ Replace EVAP canister purge volume control solenoid valve.						

7	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
▶	INSPECTION END

DTC P0446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CIRCUIT)

KA24DE

Component Description

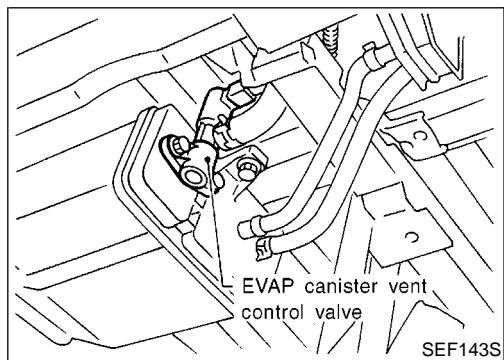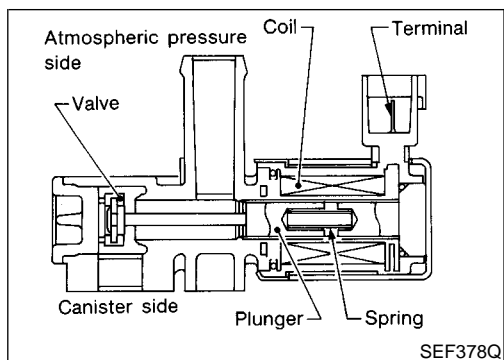

Component Description

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent. ^{NEEC1090}

This solenoid (the EVAP canister vent control valve) responds to signals from the ECM.

When the ECM sends an ON signal, the coil in the solenoid valve is energized.

A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System (Small Leak)" diagnosis.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

CONSULT-II Reference Value in Data Monitor Mode

NEEC1091

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
VENT CONT/V	● Ignition switch: ON	OFF

ECM Terminals and Reference Value

NEEC1092

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
108	R/G	EVAP canister vent control valve	[Ignition switch ON]	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NEEC1093

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0446 0903	● An improper voltage signal is sent to ECM through EVAP canister vent control valve.	<ul style="list-style-type: none"> ● Harness or connectors (EVAP canister vent control valve circuit is open or shorted.) ● EVAP canister vent control valve

DTC P0446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CIRCUIT)

KA24DE

DTC Confirmation Procedure

3	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF)	XXX rpm

PEF357V

DTC Confirmation Procedure

NEEC1094

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11V at idle.

With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-378.

With GST

Follow the procedure "With CONSULT-II".


DTC P0446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CIRCUIT)

KA24DE
Wiring Diagram

Wiring Diagram



NEEC1095

EC-VENT/V-01

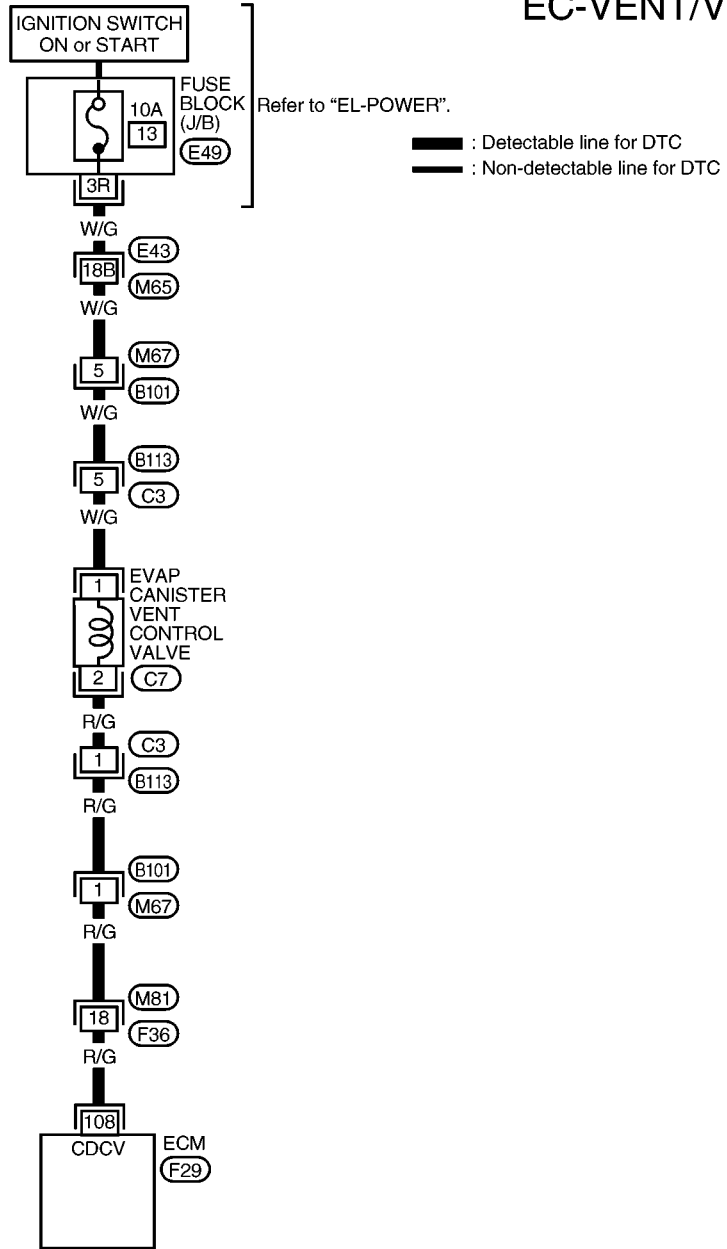


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST

RS
BT
HA
SC
EL
IDX



Refer to the following.
 M65, E43 - SUPER
 MULTIPLE JUNCTION (SMJ)

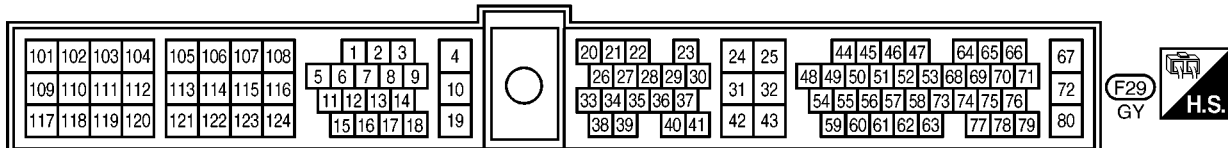

AEC997A

DTC P0446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CIRCUIT)

KA24DE

Diagnostic Procedure

Diagnostic Procedure

NEEC1096



1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

2	CHECK CIRCUIT																					
<p>1. Turn ignition switch ON. 2. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.</p>																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td style="font-size: small;">VENT CONTROL/V</td> <td style="font-size: small;">OFF</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td style="font-size: small;">CMPS~RPM(REF)</td> <td style="font-size: small;">XXX rpm</td> </tr> <tr> <td style="font-size: small;">FR O2 MNTR</td> <td style="font-size: small;">RICH</td> </tr> <tr> <td style="font-size: small;">A/F ALPHA</td> <td style="font-size: small;">XXX %</td> </tr> <tr> <td style="font-size: small;">THRTL POS SEN</td> <td style="font-size: small;">XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </table>			ACTIVE TEST		VENT CONTROL/V	OFF	MONITOR		CMPS~RPM(REF)	XXX rpm	FR O2 MNTR	RICH	A/F ALPHA	XXX %	THRTL POS SEN	XXX V						
ACTIVE TEST																						
VENT CONTROL/V	OFF																					
MONITOR																						
CMPS~RPM(REF)	XXX rpm																					
FR O2 MNTR	RICH																					
A/F ALPHA	XXX %																					
THRTL POS SEN	XXX V																					
PEF361U																						
3. Make sure that ratcheting sound is heard from the vent control valve.																						
OK or NG																						
OK	▶	GO TO 7.																				
NG	▶	GO TO 3.																				

DTC P0446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CIRCUIT)

KA24DE

Diagnostic Procedure (Cont'd)

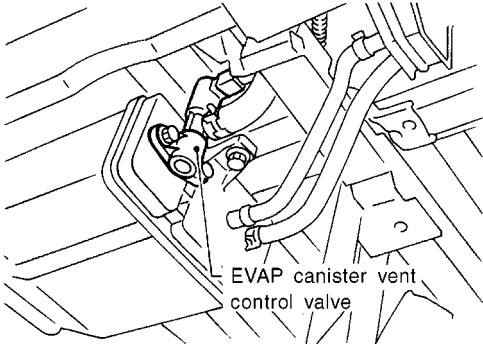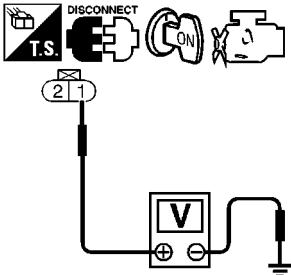3	CHECK POWER SUPPLY	<p>1. Turn ignition switch OFF. 2. Disconnect EVAP canister vent control valve harness connector.</p> <div style="text-align: center;">  <p>EVAP canister vent control valve</p> </div> <p>3. Turn ignition switch ON. 4. Check voltage between terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p style="color: blue;">Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p style="background-color: black; color: white; text-align: center;">EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>TF</p>						
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 5.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 4.</td> </tr> </table>		OK	▶	GO TO 5.	NG	▶	GO TO 4.	<p>SEF143S</p> <p>SEF240W</p>	
OK	▶	GO TO 5.							
NG	▶	GO TO 4.							

4	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M67, B101 ● Harness connectors B113, C3 ● 10A fuse ● Harness for open or short between EVAP canister vent control valve and 10A fuse <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%;"></td> <td style="width: 5%; text-align: center;">▶</td> <td>Repair harness or connectors.</td> </tr> </table>		▶	Repair harness or connectors.	<p>AX</p> <p>SU</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>
	▶	Repair harness or connectors.				


DTC P0446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CIRCUIT)

KA24DE

Diagnostic Procedure (Cont'd)

5 CHECK OUTPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 108 and terminal 2.

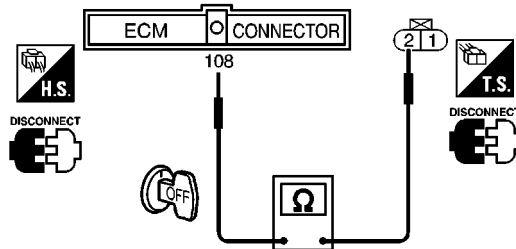

SEF241W

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK	▶	GO TO 8.
NG	▶	GO TO 6.

6 DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B101, M67
- Harness connectors M81, F36
- Harness connectors B113, C3
- Harness for open or short between EVAP canister vent control valve and ECM

▶ Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CIRCUIT)

KA24DE


Diagnostic Procedure (Cont'd)

7 CHECK EVAP CANISTER VENT CONTROL VALVE AND O-RING


With CONSULT-II

Check air passage continuity.

Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.

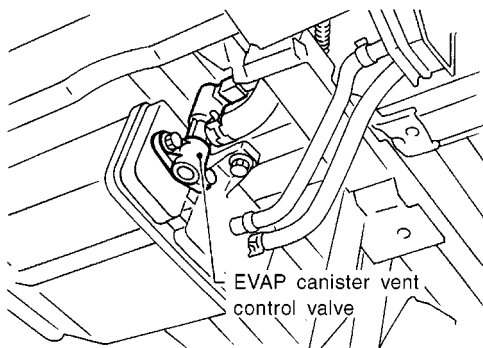

SEF143S

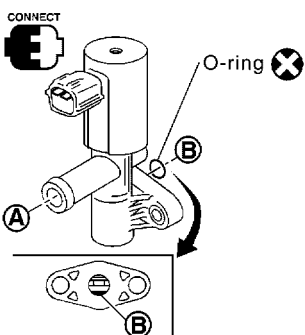

ACTIVE TEST	
VENT CONTROL/V	OFF
MONITOR	
CMPS-RPM (REF)	XXX rpm
FR O2 MNTR	RICH
A/F ALPHA	XXX %
THR TL POS SEN	XXX V

Condition VENT CONTROL/V	Air passage continuity between A and B
ON	No
OFF	Yes

SEF172X

If NG or operation takes more than 1 second, clean valve using air blower or replace as necessary.

If the portion B is rusted, replace EVAP canister vent control valve. Make sure new O-ring is installed properly.

OK or NG

OK ► GO TO 9.

NG ► Replace EVAP canister vent control valve and O-ring.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CIRCUIT)

KA24DE

Diagnostic Procedure (Cont'd)


8	CHECK EVAP CANISTER VENT CONTROL VALVE AND O-RING						
<p> Without CONSULT-II Check air passage continuity under the following conditions.</p>							
AEC783A							
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Condition</th> <th style="width: 50%;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">No</td> </tr> <tr> <td>No supply</td> <td style="text-align: center;">Yes</td> </tr> </tbody> </table>		Condition	Air passage continuity between A and B	12V direct current supply between terminals 1 and 2	No	No supply	Yes
Condition	Air passage continuity between A and B						
12V direct current supply between terminals 1 and 2	No						
No supply	Yes						
MTBL0297							
<p>If NG or operation takes more than 1 second, clean valve using air blower or replace as necessary. If the portion B is rusted, replace EVAP canister vent control valve. Make sure new O-ring is installed properly.</p>							
OK or NG							
OK	▶	GO TO 9.					
NG	▶	Replace EVAP canister vent control valve and O-ring.					

9	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
▶ INSPECTION END	

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

KA24DE


Component Description

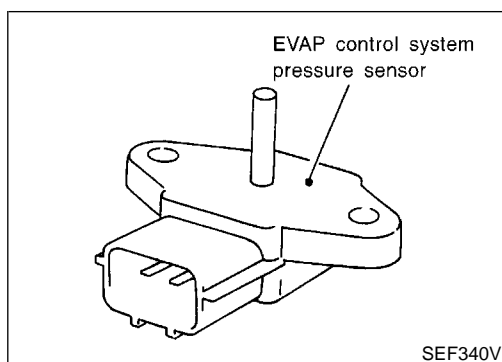

Component Description

The EVAP control system pressure sensor detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases. The EVAP control system pressure sensor is not used to control the engine system. It is used only for on board diagnosis.

NEEC1097

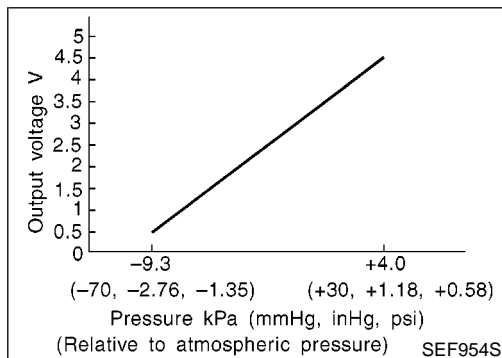

CONSULT-II Reference Value in Data Monitor Mode

NEEC1098

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
EVAP SYS PRES	● Ignition switch: ON	Approx. 3.4V

ECM Terminals and Reference Value

NEEC1099

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
42	BR	Sensors' power supply	[Ignition switch ON]	Approximately 5V
43	B/W	Sensors' ground	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V
62	Y	EVAP control system pressure sensor	[Ignition switch ON]	Approximately 3.4V

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

KA24DE

On Board Diagnosis Logic

On Board Diagnosis Logic

NEEC1100

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0450 0704	<ul style="list-style-type: none">● An improper voltage signal from EVAP control system pressure sensor is sent to ECM.	<ul style="list-style-type: none">● Harness or connectors (The EVAP control system pressure sensor circuit is open or shorted.)● Rubber hose to EVAP control system pressure is clogged, vent, kinked, disconnected or improper connection.● EVAP control system pressure sensor● EVAP canister vent control valve● EVAP canister purge volume control solenoid valve● EVAP canister● Rubber hose from EVAP canister vent control valve to water separator

6	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF)	XXX rpm
	COOLAN TEMP/S	XXX °C
	TANK F/TMP SE	XXX °C

PEF886U

DTC Confirmation Procedure

=NEEC1101

NOTE:


If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Always perform test at a temperature above 5°C (41°F).
- Before performing the following procedure, confirm battery voltage is more than 11V at idle.

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Turn ignition switch ON.
- 4) Select "DATA MONITOR" mode with CONSULT-II.
- 5) Make sure that "TANK F/TEMP SE" is more than 0°C (32°F).
- 6) Start engine and wait at least 20 seconds.
- 7) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-387.

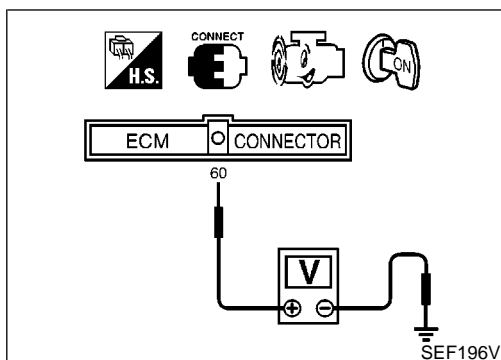

With GST

- 1) Start engine and warm it up to normal operating temperature.
- 2) Check that voltage between ECM terminal 60 (Fuel tank temperature sensor signal) and ground is less than 4.2V.
- 3) Turn ignition switch OFF and wait at least 5 seconds.
- 4) Start engine and wait at least 11 seconds.
- 5) Select "MODE 7" with GST.
- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-387.

No Tools

- 1) Start engine and warm it up to normal operating temperature.
- 2) Check that voltage between ECM terminal 60 (Fuel tank temperature sensor signal) and ground is less than 4.2V.
- 3) Turn ignition switch OFF and wait at least 5 seconds.
- 4) Start engine and wait at least 11 seconds.
- 5) Turn ignition switch OFF, wait at least 5 seconds and then turn ON.
- 6) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 7) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-387.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR








KA24DE

Wiring Diagram

Wiring Diagram

NEEC1102

EC-PRE/SE-01

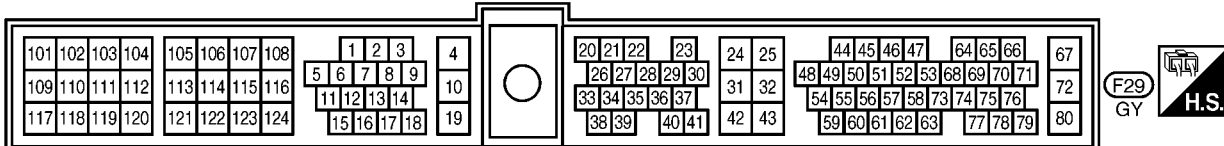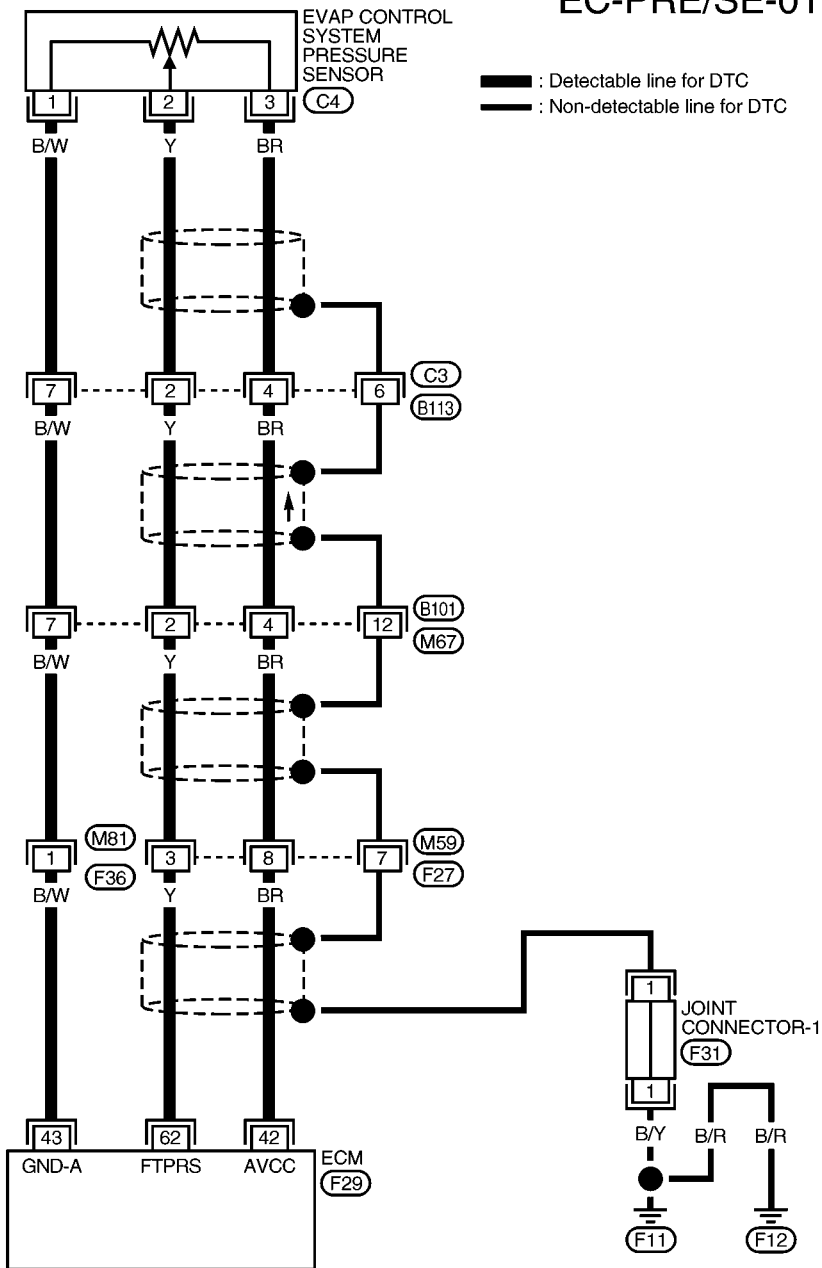

AEC998A

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

KA24DE


Diagnostic Procedure

Diagnostic Procedure


NEEC1103

1	CHECK RUBBER TUBE CONNECTED TO THE SENSOR	
Check rubber tube connected to the sensor for clogging, vent, kink, disconnection or improper connection.		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Reconnect, repair or replace.

GI
MA
EM

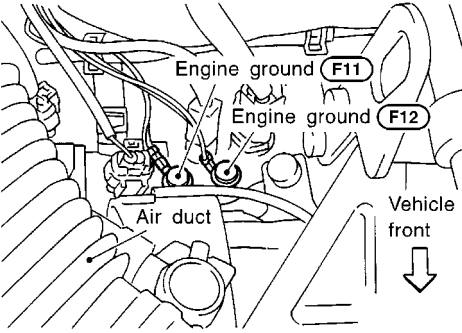2	RETIGHTEN GROUND SCREWS	
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Loosen and retighten engine ground screws. 		
		
SEF325V		
		▶ GO TO 3.

LC
EC
FE
CL
MT
AT

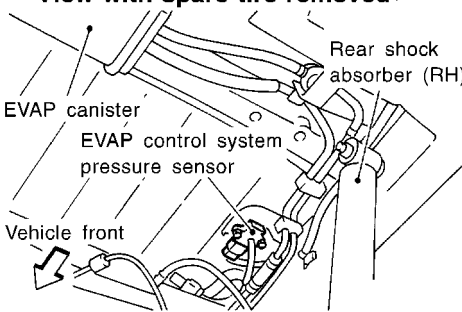3	CHECK HARNESS CONNECTOR	
1. Disconnect EVAP control system pressure sensor harness connector.		
<p>View with spare tire removed.</p> 		
SEF341V		
2. Check sensor harness connector for water. Water should not exist.		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair or replace harness connector.


TF
PD
AX
SU
BR
ST
RS

BT
HA
SC
EL
IDX

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR


KA24DE

Diagnostic Procedure (Cont'd)

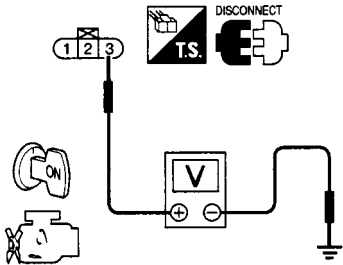4	CHECK POWER SUPPLY		
<p>1. Turn ignition switch ON. 2. Check voltage between terminal 3 and engine ground with CONSULT-II or tester.</p>			
			
<p>Voltage: Approximately 5V</p>			
<p>OK or NG</p>			
OK		▶	GO TO 6.
NG		▶	GO TO 5.

SEF410Q

5	DETECT MALFUNCTIONING PART		
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors C3, B113 ● Harness connectors B101, M67 ● Harness connectors M59, F27 ● Harness connectors M81, F36 ● Harness for open or short between EVAP control system pressure sensor and ECM 			
		▶	Repair harness or connectors.

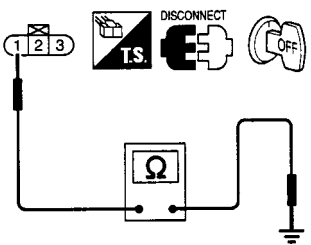6	CHECK GROUND CIRCUIT		
<p>1. Turn ignition switch OFF. 2. Check harness continuity between EVAP control system pressure sensor terminal 1 and engine ground.</p>			
			
<p>Continuity should exist.</p>			
<p>OK or NG</p>			
OK		▶	GO TO 8.
NG		▶	GO TO 7.

SEF411Q

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

KA24DE

Diagnostic Procedure (Cont'd)

7	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors C3, B113 ● Harness connectors B101, M67 ● Harness connectors M59, F27 ● Harness connectors M81, F36 ● Harness for open or short between EVAP control system pressure sensor and ECM 	
	Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM

8	CHECK INPUT SIGNAL CIRCUIT
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 62 and terminal 2.</p>	
<p>Continuity should exist.</p>	
<p>3. Also check harness for short to ground and short to power.</p>	
OK or NG	
OK (With CONSULT-II)	GO TO 10.
OK (Without CONSULT-II)	GO TO 11.
NG	GO TO 9.

LC
EC
FE
CL
MT
AT
TF
PD
AX

9	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors C3, B113 ● Harness connectors B101, M67 ● Harness connectors M59, F27 ● Harness connectors M81, F36 ● Harness for open or short between EVAP control system pressure sensor and ECM 	
	Repair open circuit or short to ground or short to power in harness or connectors.

SU
BR
ST

RS
BT
HA
SC
EL
IDX

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

KA24DE

Diagnostic Procedure (Cont'd)

10	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE																				
<p>Ⓟ With CONSULT-II</p> <p>1. Start engine.</p> <p>2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening. Check air passage continuity. If OK, inspection end. If NG, go to following step.</p>																					
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>PURG VOL CONT/V</td><td>XXX %</td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>CMPS~RPM(REF)</td><td>XXX rpm</td></tr> <tr><td>FR O2 MNTR</td><td>RICH</td></tr> <tr><td>A/F ALPHA</td><td>XXX %</td></tr> <tr><td>THRTL POS SEN</td><td>XXX V</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>		ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		CMPS~RPM(REF)	XXX rpm	FR O2 MNTR	RICH	A/F ALPHA	XXX %	THRTL POS SEN	XXX V						
ACTIVE TEST																					
PURG VOL CONT/V	XXX %																				
MONITOR																					
CMPS~RPM(REF)	XXX rpm																				
FR O2 MNTR	RICH																				
A/F ALPHA	XXX %																				
THRTL POS SEN	XXX V																				
<p>3. Check air passage continuity.</p>																					
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Condition PURG VOL CONT/V value</th> <th style="width: 50%;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">100.0%</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td style="text-align: center;">0.0%</td> <td style="text-align: center;">No</td> </tr> </tbody> </table>		Condition PURG VOL CONT/V value	Air passage continuity between A and B	100.0%	Yes	0.0%	No														
Condition PURG VOL CONT/V value	Air passage continuity between A and B																				
100.0%	Yes																				
0.0%	No																				
PEF190V																					
MTBL0302																					
OK or NG																					
OK	▶ GO TO 12.																				
NG	▶ Replace EVAP canister purge volume control solenoid valve.																				


DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

KA24DE


Diagnostic Procedure (Cont'd)

11 CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Without CONSULT-II
Check air passage continuity.

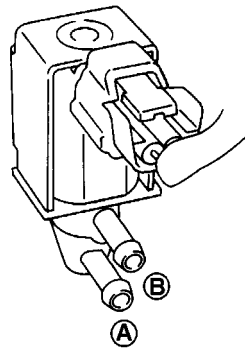

SEF660U

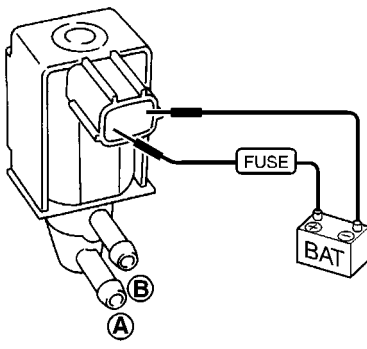

SEF661U

Condition	Air passage continuity between A and B
12V direct current supply between terminals	Yes
No supply	No

MTBL0303

OK or NG

OK	▶	GO TO 13.
NG	▶	Replace EVAP canister purge volume control solenoid valve.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

KA24DE


Diagnostic Procedure (Cont'd)

12 CHECK EVAP CANISTER VENT CONTROL VALVE


Ⓟ With CONSULT-II

Check air passage continuity.

Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.

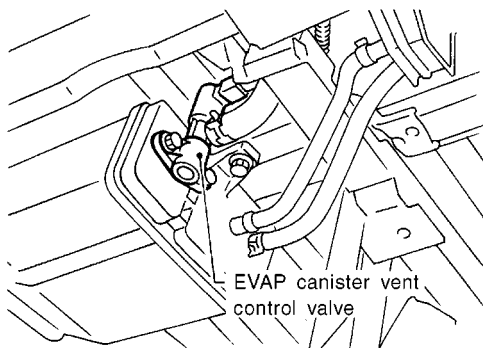

SEF143S

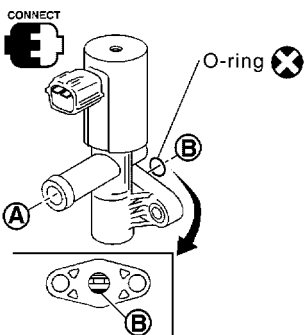

ACTIVE TEST	
VENT CONTROL/V	OFF
MONITOR	
CMPS-RPM (REF)	XXX rpm
FR O2 MNTR	RICH
A/F ALPHA	XXX %
THR TL POS SEN	XXX V

Condition VENT CONTROL/V	Air passage continuity between A and B
ON	No
OFF	Yes

SEF172X

If NG or operation takes more than 1 second, clean valve using air blower or replace as necessary.

If the portion B is rusted, replace EVAP canister vent control valve. Make sure new O-ring is installed properly.

OK or NG

OK ► GO TO 14.

NG ► Replace EVAP canister vent control valve.

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR


KA24DE

Diagnostic Procedure (Cont'd)

13 CHECK EVAP CANISTER VENT CONTROL VALVE

⊗ Without CONSULT-II

Check air passage continuity under the following conditions.

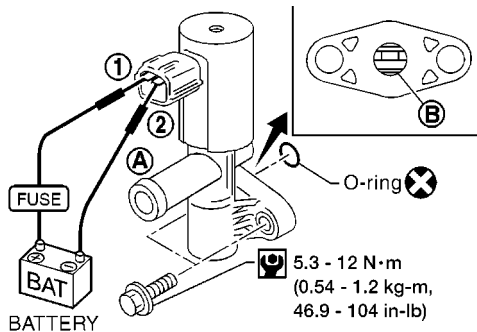

AEC783A

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	No
No supply	Yes

MTBL0297

If NG or operation takes more than 1 second, clean valve using air blower or replace as necessary.

If the portion B is rusted, replace EVAP canister vent control valve. Make sure new O-ring is installed properly.

OK or NG

OK ► GO TO 14.

NG ► Replace EVAP canister vent control valve.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX


DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

KA24DE

Diagnostic Procedure (Cont'd)


14 CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

1. Remove EVAP control system pressure sensor with its harness connector connected.

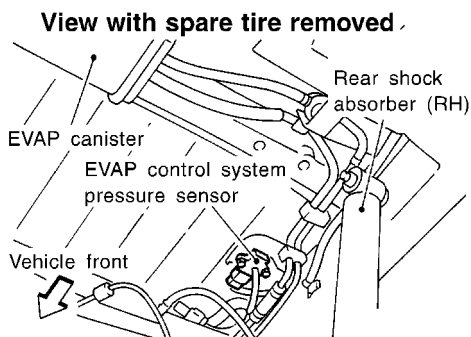

SEF341V

2. Remove hose from EVAP control system pressure sensor.
3. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.
4. Check output voltage between ECM terminal 62 and engine ground.

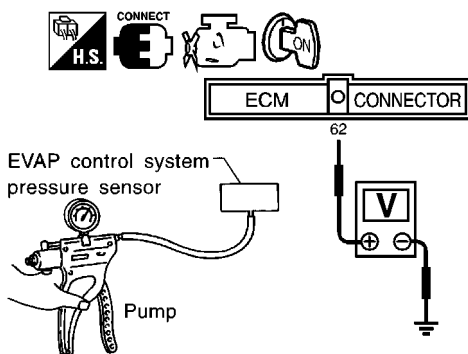


SEF198V

Pressure (Relative to atmospheric pressure)	Voltage (V)
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6

MTBL0295

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.

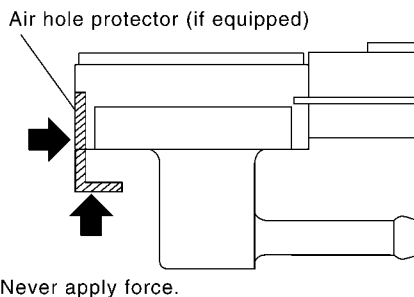

SEF799W

- Never apply force to the air hole protector of the sensor, if equipped.
- Discard any EVAP control system pressure sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.


OK or NG


OK	▶	GO TO 15.
NG	▶	Replace EVAP control system pressure sensor.

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

KA24DE

Diagnostic Procedure (Cont'd)

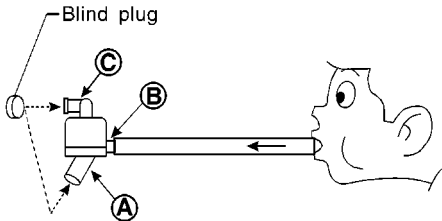15	CHECK RUBBER TUBE FOR CLOGGING
<p>Check obstructed water separator and rubber tube to EVAP canister vent control valve and clean the rubber tube using air blower.</p> <p>Check water separator.</p> <ol style="list-style-type: none"> 1. Check visually for insect nests in the water separator air inlet. 2. Check visually for cracks or flaws in the appearance. 3. Check visually for cracks or flaws in the hose. 4. Check that A and C are not clogged by blowing air into B with A, and then C plugged. 	
	
<p>* (A) : Bottom hole (To atmosphere) (B) : Emergency tube (From EVAP canister) (C) : Inlet port (To member)</p>	
SEF829T	
<p>5. In case of NG in items 2 - 4, replace the parts.</p> <ul style="list-style-type: none"> ● Do not disassemble water separator. 	
OK or NG	
OK	▶ GO TO 16.
NG	▶ Clean, repair or replace rubber tube and/or water separator.

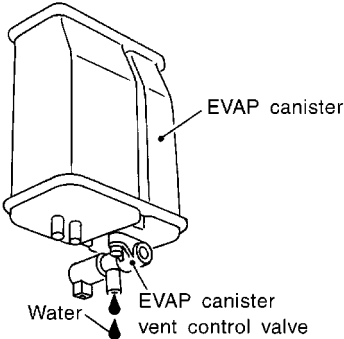16	CHECK IF EVAP CANISTER SATURATED WITH WATER
<ol style="list-style-type: none"> 1. Remove EVAP canister with EVAP canister vent control valve attached. 2. Check if water will drain from the EVAP canister. 	
	
SEF596U	
Yes or No	
Yes	▶ GO TO 17.
No	▶ GO TO 19.


17	CHECK EVAP CANISTER
<p>Weigh the EVAP canister with EVAP canister vent control valve attached.</p> <p>The weight should be less than 1.8 kg (4.0 lb).</p>	
OK or NG	
OK	▶ GO TO 19.
NG	▶ GO TO 18.


GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

KA24DE

Diagnostic Procedure (Cont'd)

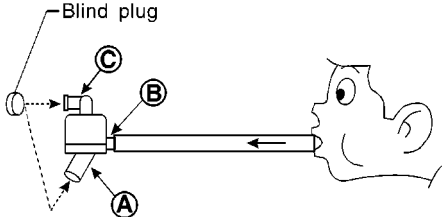18	DETECT MALFUNCTIONING PART		
<p>Check the following.</p> <ol style="list-style-type: none"> 1. Visually check the EVAP canister for damage. 2. Check hose connection between EVAP canister and water separator for clogging and poor connection. 3. Check water separator. <ol style="list-style-type: none"> a. Check visually for insect nests in the water separator air inlet. b. Check visually for cracks or flaws in the appearance. c. Check visually for cracks or flaws in the hose. d. Check that A and C are not clogged by blowing air into B with A, and then C plugged. <div style="text-align: center; margin: 10px 0;">  </div> <p style="margin-left: 40px;">* (A) : Bottom hole (To atmosphere) (B) : Emergency tube (From EVAP canister) (C) : Inlet port (To member)</p> <p>e. In case of NG in items 2 - 4, replace the parts.</p> <ul style="list-style-type: none"> ● Do not disassemble water separator. 			
SEF829T			
<table style="width: 100%; border: none;"> <tr> <td style="width: 20%; text-align: center;">▶</td> <td style="border: none;">Repair hose or replace EVAP canister or water separator.</td> </tr> </table>		▶	Repair hose or replace EVAP canister or water separator.
▶	Repair hose or replace EVAP canister or water separator.		

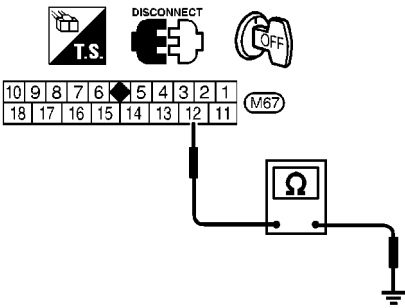19	CHECK SHIELD CIRCUIT						
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Reconnect disconnected harness connectors. 3. Disconnect harness connectors M67. 4. Check harness continuity between harness connector M67 terminal 12 and ground. <div style="text-align: center; margin: 10px 0;">  </div> <p style="margin-left: 40px; color: blue;">Continuity should exist.</p> <ol style="list-style-type: none"> 5. Also check harness for short to power. 6. Then reconnect harness connectors. <p style="text-align: center; margin: 10px 0;">OK or NG</p>							
SEF197V							
<table style="width: 100%; border: none;"> <tr> <td style="width: 20%; text-align: center;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td style="border: none;">GO TO 21.</td> </tr> <tr> <td style="text-align: center;">NG</td> <td style="text-align: center;">▶</td> <td style="border: none;">GO TO 20.</td> </tr> </table>		OK	▶	GO TO 21.	NG	▶	GO TO 20.
OK	▶	GO TO 21.					
NG	▶	GO TO 20.					

20	DETECT MALFUNCTIONING PART		
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M59, F27 ● Joint connector-1 (Refer to "HARNESS LAYOUT", EL-239.) ● Harness for open or short between harness connector M67 and engine ground 			
<table style="width: 100%; border: none;"> <tr> <td style="width: 20%; text-align: center;">▶</td> <td style="border: none;">Repair open circuit, short to ground or short to power in harness or connectors.</td> </tr> </table>		▶	Repair open circuit, short to ground or short to power in harness or connectors.
▶	Repair open circuit, short to ground or short to power in harness or connectors.		

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

KA24DE

Diagnostic Procedure (Cont'd)

21	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
▶	INSPECTION END

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX


On Board Diagnosis Logic

NEEC1268

NOTE:

If DTC P0455 is displayed with P1448, perform trouble diagnosis for DTC P1448 first. (See EC-515.)

This diagnosis detects a very large leak (fuel filler cap fell off etc.) in the EVAP system between the fuel tank and the EVAP canister purge volume control solenoid valve.

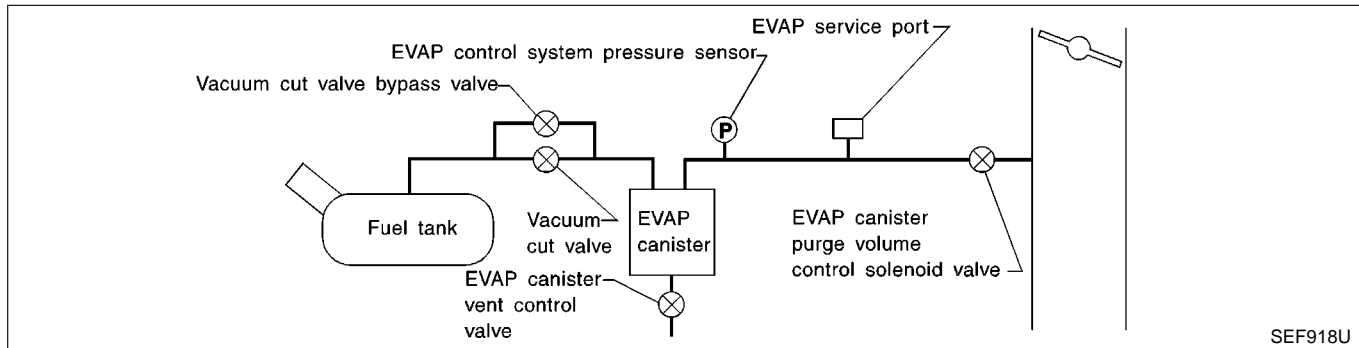

Malfunction is detected when EVAP control system has a very large leak, such as fuel filler cap fell off, EVAP control system does not operate properly.

CAUTION:

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine NISSAN rubber tube as a replacement.

POSSIBLE CAUSE

NEEC1268S01

- Fuel filler cap remains open or fails to close.
- Incorrect fuel tank vacuum relief valve
- Incorrect fuel filler cap used
- Foreign matter caught in fuel filler cap.
- Leak is in line between intake manifold and EVAP canister purge volume control solenoid valve.
- Foreign matter caught in EVAP canister vent control valve.
- EVAP canister or fuel tank leaks
- EVAP purge line (pipe and rubber tube) leaks
- EVAP purge line rubber tube bent.
- Blocked or bent rubber tube to EVAP control system pressure sensor
- Loose or disconnected rubber tube
- EVAP canister vent control valve and the circuit
- EVAP canister purge volume control solenoid valve and the circuit
- Absolute pressure sensor
- Tank fuel temperature sensor
- O-ring of EVAP canister vent control valve is missing or damaged.
- EVAP control system pressure sensor

DTC Confirmation Procedure

NEEC1269

CAUTION:

Never remove fuel filter cap during the DTC confirmation procedure.

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

EVAP SML LEAK P0440/P1440

1) FOR BEST RSLT, PERFORM AT FOLLOWING CONDITIONS.

- FUEL LEVEL: 1/4-3/4
- AMBIENT TEMP: 0-30 C (32-86F)
- OPEN ENGINE HOOD.

2) START ENG WITH VHCL STOPPED. IF ENG IS ON, STOP FOR 5 SEC. THEN RESTART.

3) TOUCH START.

SEF565X

5

EVAP SML LEAK P0440/P1440


WAIT
2 TO 10 MINUTES.
KEEP ENGINE RUNNING
AT IDLE SPEED.

SEF566X

5

EVAP SML LEAK P0440/P1440

MAINTAIN
1600 - 2100 RPM UNTIL FINAL
RESULT APPEARS.
(APPROX. 3 MINUTES)



SEF874X

6

EVAP SML LEAK P0440/P1440

OK

SELF-DIAG RESULTS

NO DTC DETECTED.
FURTHER TESTING
MAY BE REQUIRED.

SEF567X

NOTE:

- If DTC P0455 is displayed with P1448, perform trouble diagnosis for DTC P1448 first. (See EC-1115.)
- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.
- Make sure that EVAP hoses are connected to EVAP canister purge volume control solenoid valve properly.

TESTING CONDITION:

- Perform “DTC WORK SUPPORT” when the fuel level is between 1/4 to 3/4 full and vehicle is placed on flat level surface.
- Open engine hood before conducting the following procedure.
- It is better that the fuel level is low.

Ⓜ With CONSULT-II

- 1) Tighten fuel filter cap securely until ratcheting sound is heard.
- 2) Turn ignition switch “ON”.
- 3) Turn ignition switch “OFF” and wait at least 5 seconds.
- 4) Turn ignition switch “ON” and select “DATA MONITOR” mode with CONSULT-II.
- 5) Make sure that the following conditions are met.
COOLAN TEMP/S: 0 - 70°C (32 - 158°F)
INT/A TEMP SE: 0 - 60°C (32 - 140°F)
- 6) Select “EVAP SML LEAK P0440” of “EVAPORATIVE SYSTEM” in “DTC WORK SUPPORT” mode with CONSULT-II. Follow the instruction displayed.

NOTE:

If the engine speed cannot be maintained within the range displayed on the CONSULT-II screen, go to “Basic Inspection”, EC-96.

- 7) Make sure that “OK” is displayed.
 If “NG” is displayed, select “SELF-DIAG RESULTS” mode with CONSULT-II and make sure that “EVAP GROSS LEAK [P0455] is displayed. If it is displayed, refer to “Diagnostic Procedure”, EC-400.
 If P0440 is displayed, perform “Diagnostic Procedure” for DTC P0440.

Ⓜ With GST

NOTE:


- Be sure to read the explanation of “Driving Pattern” on EC-64 before driving vehicle.
 - It is better that the fuel level is low.
- 1) Start engine.
 - 2) Drive vehicle according to “Driving Pattern”, EC-64.
 - 3) Stop vehicle.

- 4) Select "MODE 1" with GST.
 - If SRT of EVAP system is not set yet, go to the following step.
 - If SRT of EVAP system is set, the result will be OK.
- 5) Turn ignition switch "OFF" and wait at least 5 seconds.
- 6) Start engine.

It is not necessary to cool engine down before driving.
- 7) Drive vehicle again according to the "Driving Pattern", EC-64.
- 8) Stop vehicle.
- 9) Select "MODE 3" with GST.
 - If P0455 is displayed on the screen, go to "Diagnostic Procedure", EC-400.
 - If P0440 is displayed on the screen, go to "Diagnostic Procedure", EC-355.
 - If P1440 is displayed on the screen, go to "Diagnostic Procedure" for "DTC P1440", EC-1083.
 - If P1447 is displayed on the screen, go to "Diagnostic Procedure" for "DTC P1447", EC-1106.
 - If P0440, P0455, P1440 and P1447 are not displayed on the screen, go to the following step.
- 10) Select "MODE 1" with GST.
 - If SRT of EVAP system is set, the result will be OK.
 - If SRT of EVAP system is not set, go to step 6.

Diagnostic Procedure

NEEC1270

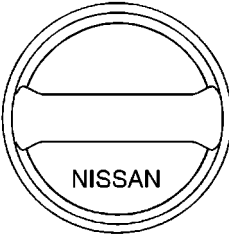1	CHECK FUEL FILLER CAP DESIGN	
<p>1. Turn ignition switch OFF. 2. Check for genuine NISSAN fuel filler cap design.</p> <div style="text-align: center; margin: 20px 0;">  </div> <p style="text-align: center; margin: 10px 0;">OK or NG</p>		
OK	▶	GO TO 2.
NG	▶	Replace with genuine NISSAN fuel filler cap.

SEF915U



DTC P0455 EVAP CONTROL SYSTEM (GROSS LEAK)

KA24DE

Diagnostic Procedure (Cont'd)

2	CHECK FUEL FILLER CAP INSTALLATION	
Check that the cap is tightened properly by rotating the cap clockwise.		
OK or NG		
OK	▶	GO TO 3.
NG	▶	<ul style="list-style-type: none"> • Open fuel filler cap, then clean cap and fuel filler neck threads using air blower. • Retighten until ratcheting sound is heard.

3	CHECK FUEL FILLER CAP FUNCTION	
Check for air releasing sound while opening the fuel filler cap.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	GO TO 4.

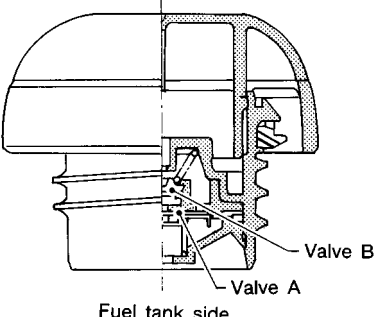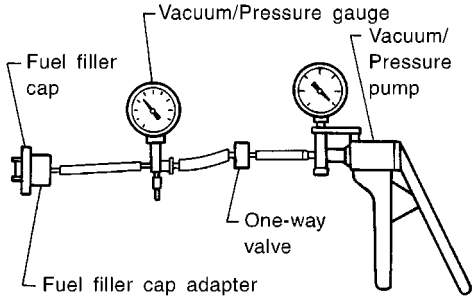4	CHECK FUEL TANK VACUUM RELIEF VALVE (BUILT INTO FUEL FILLER CAP)	
<ol style="list-style-type: none"> 1. Wipe clean valve housing. 2. Check valve opening pressure and vacuum. 		
		
SEF427N		
		
SEF943S		
<p>Pressure: 16.0 - 20.0 kPa (0.163 - 0.204 kg/cm², 2.32 - 2.90 psi)</p> <p>Vacuum: -6.0 to -3.5 kPa (-0.061 to -0.036 kg/cm², -0.87 to -0.51 psi)</p> <p>CAUTION: Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.</p>		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace fuel filler cap with a genuine one.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0455 EVAP CONTROL SYSTEM (GROSS LEAK)


KA24DE

Diagnostic Procedure (Cont'd)

5	CHECK EVAP PURGE LINE
Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks or improper connection or disconnection. Refer to "Evaporative Emission System", EC-613.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ Repair or reconnect the hose.

6	CLEAN EVAP PURGE LINE
Clean EVAP purge line (pipe and rubber tube) using air blower.	
	▶ GO TO 7.


7	CHECK EVAP CANISTER VENT CONTROL VALVE, O-RING AND CIRCUIT
Refer to "DTC Confirmation Procedure", EC-976.	
OK or NG	
OK	▶ GO TO 8.
NG	▶ Repair or replace EVAP canister vent control valve and O-ring or harness/connector.

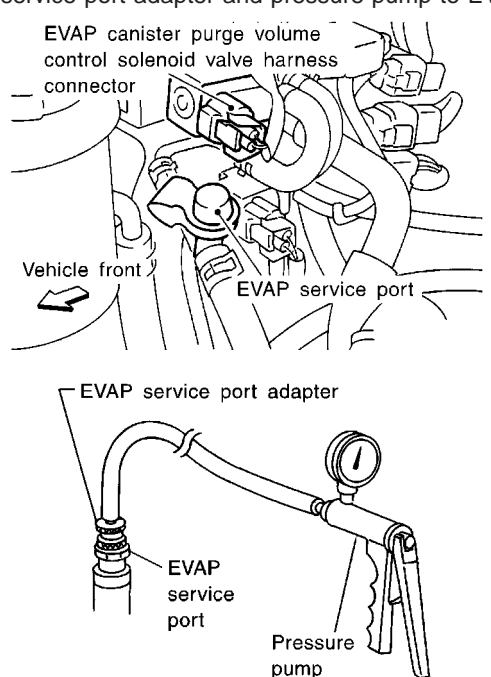8	INSTALL THE PRESSURE PUMP
To locate the EVAP leak, install EVAP service port adapter and pressure pump to EVAP service port securely.	
 <p>The diagram consists of two parts. The upper part is a line drawing of the engine compartment, showing the location of the EVAP service port. Labels include 'EVAP canister purge volume control solenoid valve harness connector', 'Vehicle front' (with an arrow pointing left), and 'EVAP service port'. The lower part is a detailed view of the 'EVAP service port adapter' connected to the 'EVAP service port' and a 'Pressure pump' with a gauge.</p>	
SEF339V	
NOTE: Improper installation of the EVAP service port adapter to the EVAP service port may cause leaking.	
Models with CONSULT-II	▶ GO TO 9.
Models without CON-SULT-II	▶ GO TO 10.

9 CHECK FOR EVAP LEAK

Ⓟ With CONSULT-II

1. Turn ignition switch ON.
2. Select "EVAP SYSTEM CLOSE" of "WORK SUPPORT" mode with CONSULT-II.

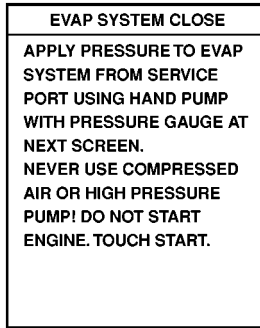


PEF658U

3. Touch "START" and apply pressure into the EVAP line until the pressure indicator reaches the middle of the bar graph.

NOTE:


- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

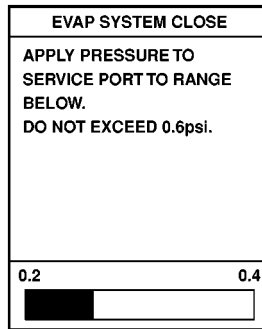

PEF917U

4. Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-617.

Leak detector

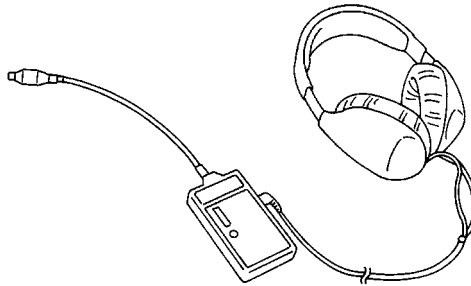

SEF200U

OK or NG


OK	▶	GO TO 11.
NG	▶	Repair or replace.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

10 CHECK FOR EVAP LEAK

⊗ Without CONSULT-II

1. Turn ignition switch OFF.
2. Apply 12 volts DC to EVAP canister vent control valve. The valve will close. (Continue to apply 12 volts until the end of test.)
3. Apply 12 volts DC to vacuum cut valve bypass valve. The valve will open. (Continue to apply 12V until the end of test.)

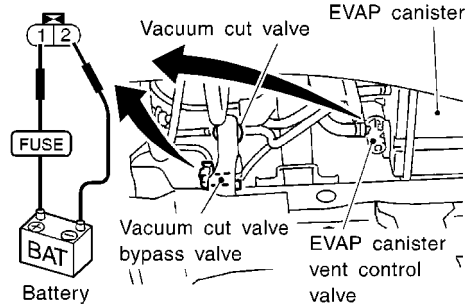


SEF503V

4. Pressurize the EVAP line using pressure pump with 1.3 to 2.7 kPa (10 to 20 mmHg, 0.39 to 0.79 inHg), then remove pump and EVAP service port adapter.

NOTE:

- Never use compressed air or a high pressure pump.
 - Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.
5. Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-617.

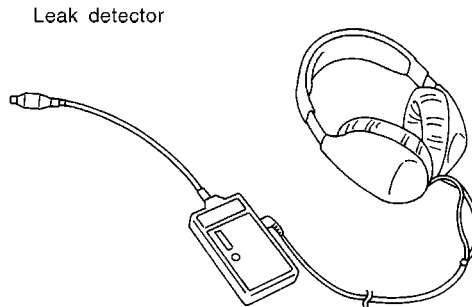

SEF200U

OK or NG

OK	▶	GO TO 12.
NG	▶	Repair or replace.

11	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION																					
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port. 2. Start engine. 3. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode. 4. Touch "Qu" on CONSULT-II screen to increase "PURG VOL CONT/V" opening to 100.0%. 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm. 																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>PURG VOL CONT/V</td><td style="text-align: center;">0.0%</td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><th>CMPS~RPM(REF)</th><th>XXX rpm</th></tr> <tr><td>FR O2 MNTR-B2</td><td style="text-align: center;">RICH</td></tr> <tr><td>FR O2 MNTR-B1</td><td style="text-align: center;">RICH</td></tr> <tr><td>A/F ALPHA-B2</td><td style="text-align: center;">XXX %</td></tr> <tr><td>A/F ALPHA-B1</td><td style="text-align: center;">XXX %</td></tr> <tr><td>THRTL POS SEN</td><td style="text-align: center;">XXX V</td></tr> <tr><td> </td><td> </td></tr> </table>			ACTIVE TEST		PURG VOL CONT/V	0.0%	MONITOR		CMPS~RPM(REF)	XXX rpm	FR O2 MNTR-B2	RICH	FR O2 MNTR-B1	RICH	A/F ALPHA-B2	XXX %	A/F ALPHA-B1	XXX %	THRTL POS SEN	XXX V		
ACTIVE TEST																						
PURG VOL CONT/V	0.0%																					
MONITOR																						
CMPS~RPM(REF)	XXX rpm																					
FR O2 MNTR-B2	RICH																					
FR O2 MNTR-B1	RICH																					
A/F ALPHA-B2	XXX %																					
A/F ALPHA-B1	XXX %																					
THRTL POS SEN	XXX V																					
<p>Vacuum should exist.</p> <p style="text-align: right;">PEF882U</p> <p style="text-align: center;">OK or NG</p>																						
OK	▶	GO TO 14.																				
NG	▶	GO TO 13.																				

12	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION	
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine. 3. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port. 4. Start engine and let it idle for at least 80 seconds. 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm. <p>Vacuum should exist.</p>		
<p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 14.
NG	▶	GO TO 13.

13	CHECK VACUUM HOSE	
<p>Check vacuum hoses for clogging or disconnection. Refer to "Vacuum Hose Drawing", EC-607.</p>		
<p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 14.
OK (Without CONSULT-II)	▶	GO TO 15.
NG	▶	Repair or reconnect the hose.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

14 CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Ⓟ With CONSULT-II


1. Start engine.
2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.

ACTIVE TEST	
PURG VOL CONT/V	0.0%
MONITOR	
CMPS~RPM(REF)	XXX rpm
FR O2 MNTR-B2	RICH
FR O2 MNTR-B1	RICH
A/F ALPHA-B2	XXX %
A/F ALPHA-B1	XXX %
THRTL POS SEN	XXX V

PEF882U

If OK, inspection end. If NG, go to following step.

3. Check air passage continuity.

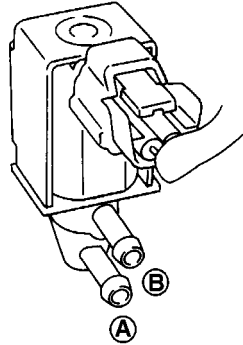

SEF660U

Condition PURG VOL CONT/V value	Air passage continuity between A and B
100.0%	Yes
0.0%	No


MTBL0241

OK or NG

OK	▶	GO TO 16.
NG	▶	Replace EVAP canister purge volume control solenoid valve.

15 CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE


⊗ Without CONSULT-II
Check air passage continuity.

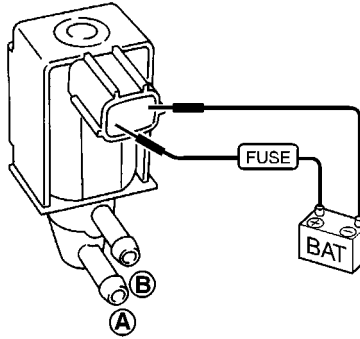

SEF661U

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	Yes
No supply	No

MTBL0242

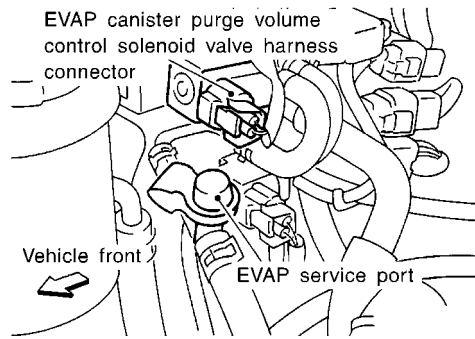

SEF339V

OK or NG

OK	▶	GO TO 16.
NG	▶	Replace EVAP canister purge volume control solenoid valve.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

16 CHECK ABSOLUTE PRESSURE SENSOR

1. Remove absolute pressure sensor with its harness connector connected.

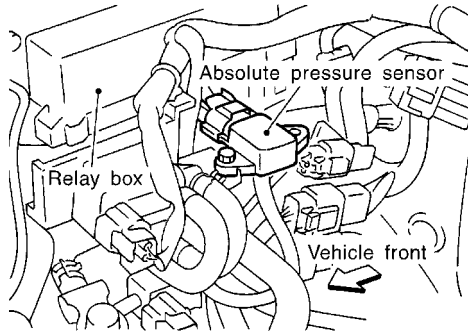


SEF328V

2. Remove hose from absolute pressure sensor.
3. Turn ignition switch ON and check output voltage between ECM terminal 45 and engine ground.
The voltage should be 3.2 to 4.8V.
4. Use pump to apply vacuum of -26.7 kPa (-200 mmHg, -7.87 inHg) to absolute pressure sensor as shown in figure and check the output voltage.
The voltage should be 1.0 to 1.4V lower than the value measured in step 3.

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -93.3 kPa (-700 mmHg, -27.56 inHg) or over 101.3 kPa (760 mmHg, 29.92 inHg) of pressure.

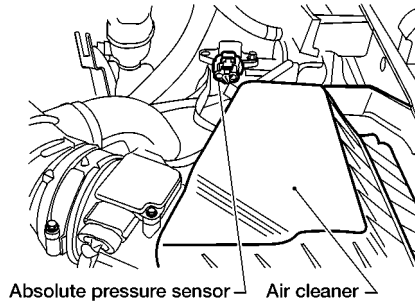


AEC642A

OK or NG

OK	▶	GO TO 17.
NG	▶	Replace absolute pressure sensor.

17 CHECK FUEL TANK TEMPERATURE SENSOR


Check resistance by heating with hot water or heat gun as shown in the figure.

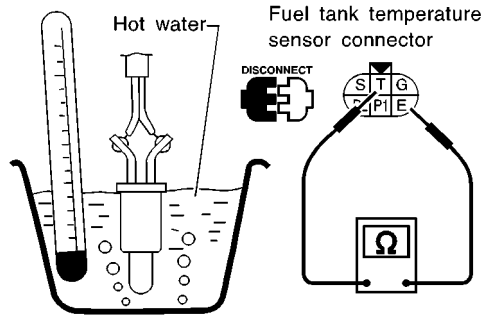

SEF172VA

Temperature °C (°F)	Resistance kΩ
20 (68)	2.3 - 2.7
50 (122)	0.79 - 0.90

MTBL0234

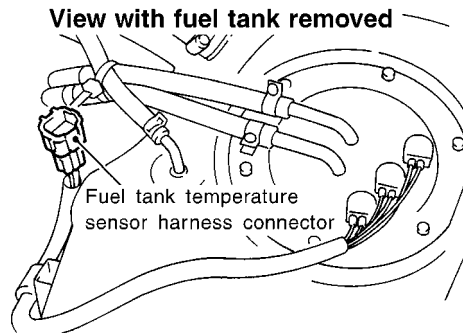

SEF334VA


OK or NG

- OK ► GO TO 18.
- NG ► Replace fuel tank temperature sensor.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


18 CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

1. Remove EVAP control system pressure sensor with its harness connector connected.

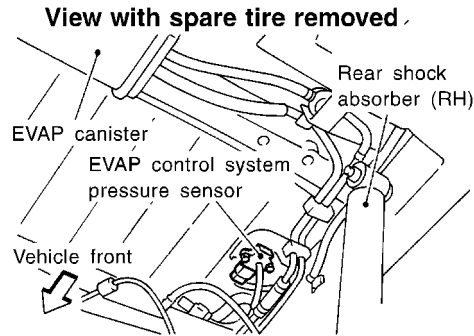

SEF341V

2. Remove hose from EVAP control system pressure sensor.
3. Turn ignition switch ON.
4. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.
5. Check input voltage between ECM terminal 62 and ground.

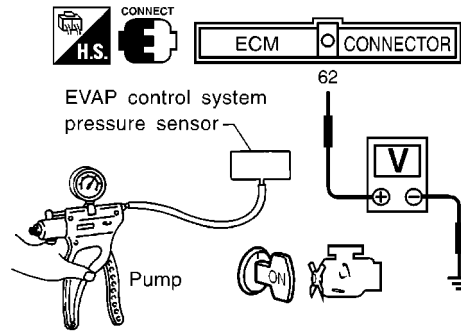

SEF894U

Pressure (Relative to atmospheric pressure)	Voltage (V)
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6


MTBL0246

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.

CAUTION:

- Never apply force to the air hole protector of the sensor if equipped.

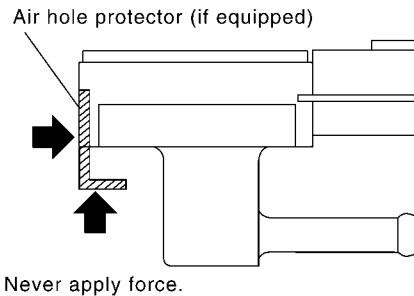

SEF799W

- Discard and EVAP control system pressure sensor which has been dropped from a height of more than 0.5m (19.7in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK	▶	GO TO 19.
NG	▶	Replace EVAP control system pressure sensor.

DTC P0455 EVAP CONTROL SYSTEM (GROSS LEAK)

KA24DE*Diagnostic Procedure (Cont'd)*

19	Check Fuel Level Sensor		
1. Remove fuel level sensor assembly. Refer to FE section.		GI MA EM	
2. Refer to "FUEL LEVEL SENSOR UNIT CHECK", EC-400.			
OK or NG			
OK	▶	EC-411	LC EC
NG	▶	Replace fuel level sensor.	
20	CHECK INTERMITTENT INCIDENT		
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.			
	▶	INSPECTION END	

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX

DTC P0500 VEHICLE SPEED SENSOR (VSS)

KA24DE

Component Description

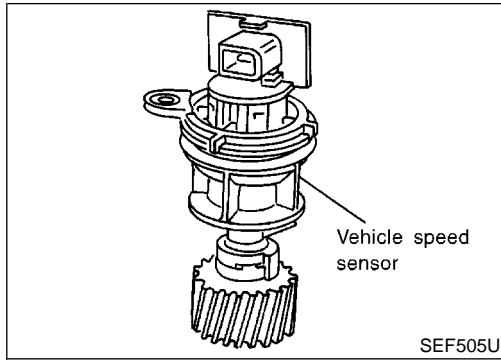

Component Description

The vehicle speed sensor is installed in the transaxle. It contains a pulse generator which provides a vehicle speed signal to the speedometer. The speedometer then sends a signal to the ECM.

NEEC1104

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

NEEC1105

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
29	G/B	Vehicle speed sensor	<p>[Engine is running]</p> <ul style="list-style-type: none"> Lift up the vehicle In 2nd gear position Vehicle speed is 40 km/h (25 MPH) 	<p>1 - 4V</p>

On Board Diagnosis Logic

NEEC1106

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0500 0104	<ul style="list-style-type: none"> The almost 0 km/h (0 MPH) signal from vehicle speed sensor is sent to ECM even when vehicle is being driven. 	<ul style="list-style-type: none"> Harness or connector (The vehicle speed sensor circuit is open or shorted.) Vehicle speed sensor

DTC Confirmation Procedure

NEEC1107

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

④ With CONSULT-II

- Start engine
- Read vehicle speed sensor signal in "DATA MONITOR" mode with CONSULT-II. The vehicle speed on CONSULT-II should exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.
- If NG, go to "Diagnostic Procedure", EC-415.
If OK, go to following step.
- Select "DATA MONITOR" mode with CONSULT-II.
- Warm engine up to normal operating temperature.

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
COOLAN TEMP/S	XXX °C
B/FUEL SCHDL	XXX msec
PW/ST SIGNAL	OFF
VHCL SPEED SE	XXX km/h

PEF199V

DTC P0500 VEHICLE SPEED SENSOR (VSS)

KA24DE

DTC Confirmation Procedure (Cont'd)

- 6) Maintain the following conditions for at least 10 consecutive seconds.

CMPS-RPM (REF)	1,450 - 2,550 rpm (A/T) 1,800 - 3,000 rpm (2WD M/T) 2,150 - 3,000 rpm (4WD M/T)
COOLANT TEMP/S	More than 70°C (158°F)
B/FUEL SCHDL	2.1 - 4.8 msec (A/T) 2.5 - 5.3 msec (M/T)
Selector lever	Suitable position
PW/ST SIGNAL	OFF

- 7) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-415.

FUEL SYS #1	CLOSED
FUEL SYS #2	CLOSED
CALC LOAD	19%
COOLANT TEMP	93°C
SHORT FT #1	1%
LONG FT #1	0%
SHORT FT #2	3%
LONG FT #2	0%
ENGINE SPD	2037RPM
VEHICLE SPD	12MPH
IGN ADVANCE	38.0°
INTAKE AIR	43°C


SEF568P

Overall Function Check

Use this procedure to check the overall function of the EVAP canister vent control valve circuit. During this check, a 1st trip DTC might not be confirmed.

With GST

- Lift up drive wheels.
- Start engine.
- Read vehicle speed sensor signal in “MODE 1” with GST. The vehicle speed sensor on GST should be able to exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.
- If NG, go to “Diagnostic Procedure”, EC-415.

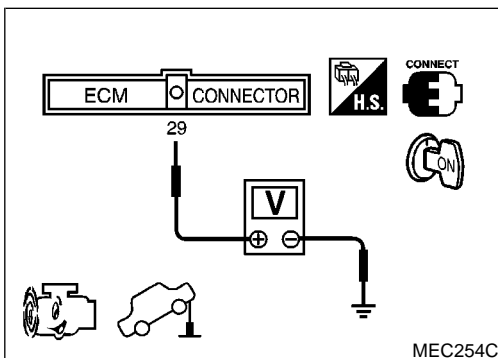




No Tools

- Lift up drive wheels.
- Start engine.
- Read the voltage signal between ECM terminal 29 (Vehicle speed sensor signal) and ground with oscilloscope.
- Verify that the oscilloscope screen shows the signal wave as shown at “ECM Terminals and Reference Value”, EC-412.
- If NG, go to “Diagnostic Procedure”, EC-415.

Wiring Diagram

NEEC1109

EC-VSS-01

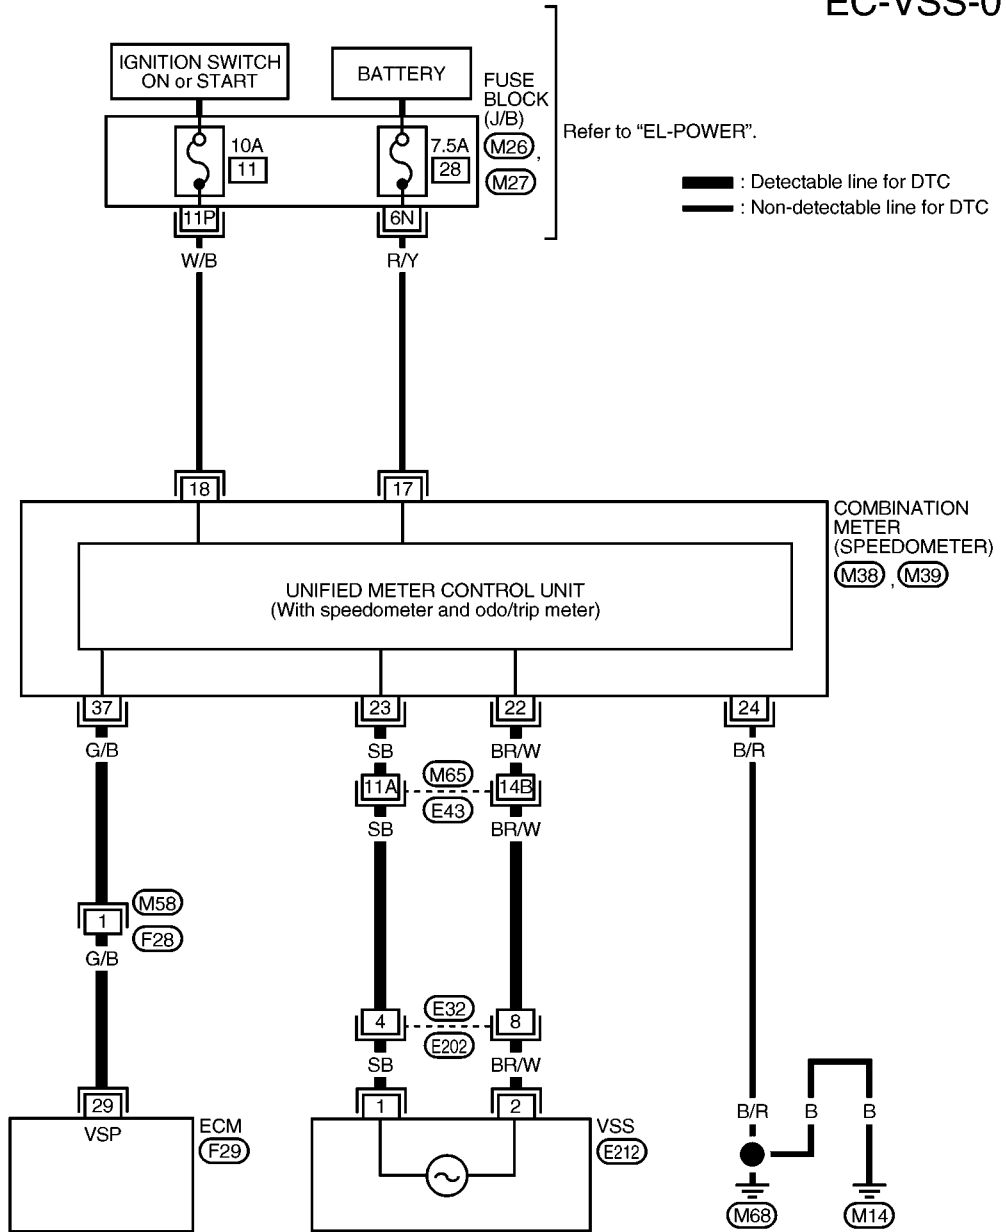

Refer to the following.

M65, E43 - SUPER MULTIPLE JUNCTION (SMJ)

F29 - ELECTRICAL UNITS

Diagnostic Procedure

NEEC1110

1	CHECK INPUT SIGNAL CIRCUIT								
		<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect ECM harness connector and combination meter harness connector M39. 3. Check harness continuity between ECM terminal 29 and meter terminal 37. 	GI MA EM LC EC FE CL MT						
			SEF200V						
		<p>Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>							
		<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td style="width: 75%;">GO TO 3.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 2.</td> </tr> </table>	OK	▶	GO TO 3.	NG	▶	GO TO 2.	
OK	▶	GO TO 3.							
NG	▶	GO TO 2.							

2	DETECT MALFUNCTIONING PART		
		Check the following. <ul style="list-style-type: none"> ● Harness connectors M58, F28 ● Harness for open or short between ECM and combination meter 	AT TF PD
		▶ Repair open circuit or short to ground or short to power in harness or connectors.	

3	CHECK SPEEDOMETER FUNCTION								
		Make sure that speedometer functions properly.	AX SU BR						
		OK or NG							
		<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td style="width: 75%;">GO TO 5.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 4.</td> </tr> </table>	OK	▶	GO TO 5.	NG	▶	GO TO 4.	
OK	▶	GO TO 5.							
NG	▶	GO TO 4.							

4	DETECT MALFUNCTIONING PART		
		Check the following. <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors E32, E202 ● Harness for open or short between combination meter and vehicle speed sensor 	ST RS
		▶ Repair harness or connectors. Check vehicle speed sensor and its circuit. Refer to EL-75 .	

5	CHECK INTERMITTENT INCIDENT		
		Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	BT HA
		▶ INSPECTION END	

 GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

KA24DE

Description


Description SYSTEM DESCRIPTION

NEEC1111

NEEC1111S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	ECM	IACV-AAC valve
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
PNP switch	Park/Neutral position		
Air conditioner switch	Air conditioner operation		
Power steering oil pressure switch	Power steering load signal		
Battery	Battery voltage		
Vehicle speed sensor	Vehicle speed		
Absolute pressure sensor	Ambient barometric pressure		
Intake air temperature sensor	Intake air temperature		

This system automatically controls engine idle speed to a specified level. Idle speed is controlled through fine adjustment of the amount of air which bypasses the throttle valve via IACV-AAC valve. The IACV-AAC valve repeats ON/OFF operation according to the signal sent from the ECM. The camshaft position sensor detects the actual engine speed and sends a signal to the ECM. The ECM then controls the ON/OFF time of the IACV-AAC valve so that engine speed coincides with the target value memorized in ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warm up, deceleration, and engine load (air conditioner, power steering and cooling fan operation).

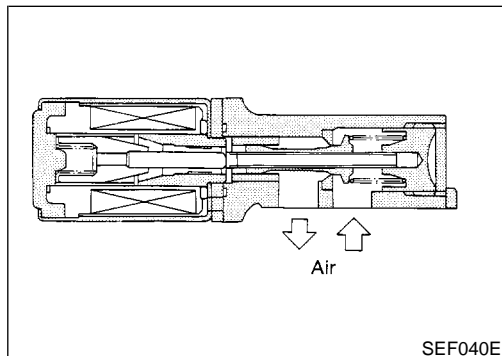

COMPONENT DESCRIPTION

NEEC1111S02

The IAC valve-AAC valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of air that will flow through the valve. The more air that flows through the valve, the higher the idle speed.

DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

KA24DE

CONSULT-II Reference Value in Data Monitor Mode

CONSULT-II Reference Value in Data Monitor Mode

NEEC1112

MONITOR ITEM	CONDITION		SPECIFICATION
IACV-AAC/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: OFF ● Shift lever: "N" ● No-load 	Idle	Approx. 30%
		2,000 rpm	—

ECM Terminals and Reference Value

NEEC1113

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
101	OR/L	IACV-AAC valve	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	<p>10.5 - 11.5V</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm 	<p>1 - 13V</p>

On Board Diagnosis Logic

NEEC1114

DTC No.	Malfunction is detected when ...		Check Items (Possible Cause)
P0505 0205	A)	The IACV-AAC valve does not operate properly.	<ul style="list-style-type: none"> ● Harness or connectors (The IACV-AAC valve circuit is open.) ● IACV-AAC valve
	B)	The IACV-AAC valve does not operate properly.	<ul style="list-style-type: none"> ● Harness or connectors (The IACV-AAC valve circuit is shorted.) ● IACV-AAC valve

DTC Confirmation Procedure

=NEEC1115

NOTE:

- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.
- Perform “Procedure for malfunction A” first. If DTC cannot be confirmed, perform “Procedure for malfunction B”.

3	DATA MONITOR	
	MONITORING	NO FAIL
	COOLAN TEMP/S	XXX °C

PEF002P

PROCEDURE FOR MALFUNCTION A

NEEC1115S01

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 10.5V with ignition switch ON.

Ⓜ With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select “DATA MONITOR” mode with CONSULT-II.
- 3) Start engine and run it at idle at least 2 seconds.
- 4) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-420.

Ⓜ With GST

Follow the procedure “With CONSULT-II”.

4	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF)	XXX rpm
	COOLAN TEMP/S	XXX °C

PEF361V

PROCEDURE FOR MALFUNCTION B

NEEC1115S02

TESTING CONDITION:

- Before performing the following procedure, make sure battery voltage is more than 11V at idle.
- Always perform at a temperature above -10°C (14°F).

Ⓜ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Turn ignition switch ON again and select “DATA MONITOR” mode with CONSULT-II.
- 4) Start engine and run it for at least 6 minute at idle speed.
- 5) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-420.

Ⓜ With GST

Follow the procedure “With CONSULT-II”.

DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE


KA24DE

Wiring Diagram

Wiring Diagram



NEEC1116

EC-AAC/V-01

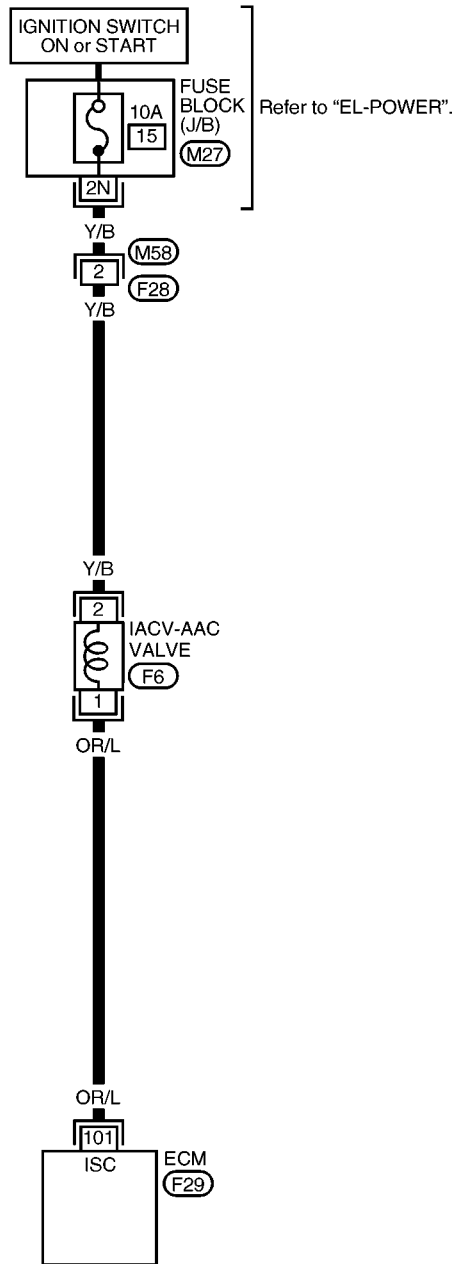

Refer to "EL-POWER".
 — : Detectable line for DTC
 — : Non-detectable line for DTC

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST

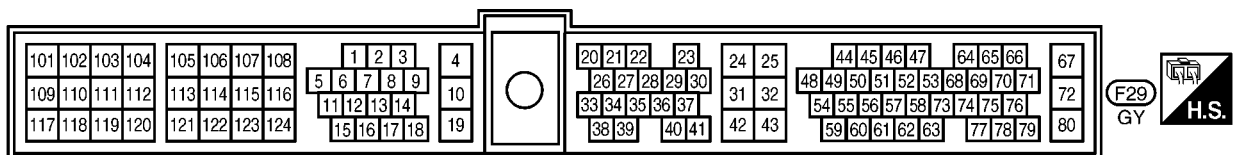

RS
 BT
 HA
 SC
 EL
 IDX

AEC001B



DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

KA24DE

Diagnostic Procedure

Diagnostic Procedure

NEEC1117

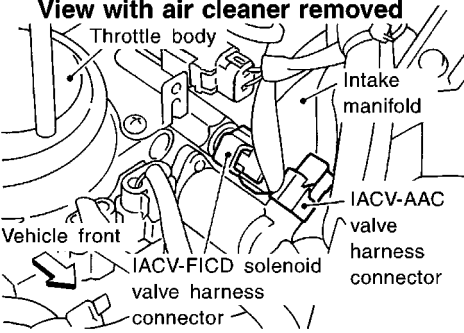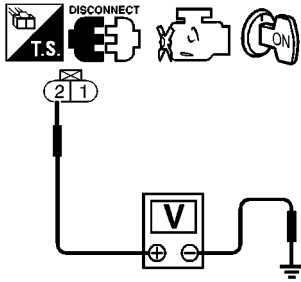1	CHECK POWER SUPPLY		
<p>1. Stop engine. 2. Disconnect IACV-AAC valve harness connector.</p> <div style="text-align: center;"> <p>View with air cleaner removed</p>  </div> <p>3. Turn ignition switch ON. 4. Check voltage between terminal 2 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p>Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>			
OK		▶	GO TO 3.
NG		▶	GO TO 2.

SEF342V

SEF247W

2	DETECT MALFUNCTIONING PART		
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M58, F28 ● 10A fuse ● Harness for open or short between IACV-AAC valve harness connector and 10A fuse 			
		▶	Repair harness or connectors.

DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

KA24DE


Diagnostic Procedure (Cont'd)

3	CHECK OUTPUT SIGNAL CIRCUIT	<p>1. Turn ignition switch OFF. 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 101 and terminal 1.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SEF248W</p> <p>Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 4.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Repair open circuit or short to ground or short to power in harness or connectors.</td> </tr> </table>	OK	▶	GO TO 4.	NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.	GI MA EM LC EC FE CL
OK	▶	GO TO 4.							
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.							

4	CHECK IACV-AAC VALVE	<p>Disconnect IACV-AAC valve harness connector.</p> <ul style="list-style-type: none"> Check IACV-AAC valve resistance. <div style="text-align: center;"> </div> <p style="text-align: right;">SEF249W</p> <p>Resistance: Approximately 10 Ω [at 25°C (77°F)]</p> <ul style="list-style-type: none"> Check plunger for seizing or sticking. Check for broken spring. <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 5.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace IACV-AAC valve.</td> </tr> </table>	OK	▶	GO TO 5.	NG	▶	Replace IACV-AAC valve.	MT AT TF PD AX SU BR ST
OK	▶	GO TO 5.							
NG	▶	Replace IACV-AAC valve.							

5	CHECK INTERMITTENT INCIDENT	<p>Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;"></td> <td style="width: 5%; text-align: center;">▶</td> <td>INSPECTION END</td> </tr> </table>		▶	INSPECTION END	RS BT HA SC EL IDX
	▶	INSPECTION END				

Component Description

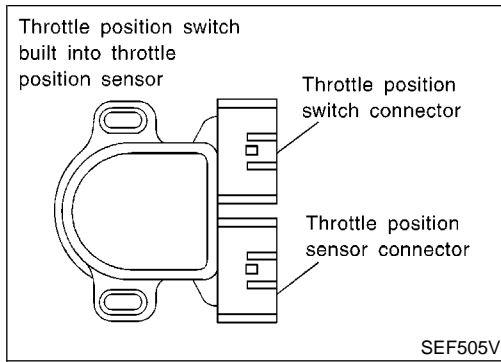

Component Description

A closed throttle position switch and wide open throttle position switch are built into the throttle position sensor unit. The wide open throttle position switch is used only for A/T control. When the throttle valve is in the closed position, the closed throttle position switch sends a voltage signal to the ECM. The ECM only uses this signal to open or close the EVAP canister purge control valve when the throttle position sensor is malfunctioning.

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
28	BR/W	Throttle position switch (Closed position)	[Ignition switch ON] <ul style="list-style-type: none"> Warm-up condition Accelerator pedal released 	BATTERY VOLTAGE (11 - 14V)
			[Ignition switch ON] <ul style="list-style-type: none"> Accelerator pedal depressed 	Approximately 0V

On Board Diagnosis Logic

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0510 0203	<ul style="list-style-type: none"> Battery voltage from the closed throttle position switch is sent to ECM with the throttle valve opened. 	<ul style="list-style-type: none"> Harness or connectors (The closed throttle position switch circuit is shorted.) Closed throttle position switch Throttle position sensor

4	DATA MONITOR	
	MONITORING	NO FAIL
	COOLAN TEMP/S	XXX °C
	VHCL SPEED SE	XXX km/h
	THRT POS SEN	XXX V

PEF329U

DTC Confirmation Procedure

=NEEC1121

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "CLSD THL/P SW" in "DATA MONITOR" mode with CONSULT-II and check the value under the following conditions.


Condition	Voltage
At idle	ON
At 2,000 rpm	OFF

If the result is NG, go to "Diagnostic Procedure", EC-425.
If OK, go to following step.

- 3) Select "DATA MONITOR" mode with CONSULT-II.
- 4) Drive the vehicle for at least 5 consecutive seconds under the following condition.

THRTL POS SEN	More than 2.5V
VHCL SPEED SE	More than 4 km/h (2 MPH)
Selector lever	Suitable position
Driving pattern	Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-425.

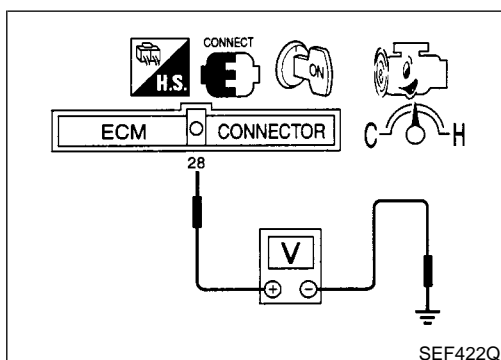

Overall Function Check

NEEC1122

Use this procedure to check the overall function of the closed throttle position switch circuit. During this check, a 1st trip DTC might not be confirmed.

Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Check the voltage between ECM terminal 28 (Closed throttle position switch signal) and ground under the following conditions.






Condition	Voltage
At idle	Battery voltage
At 2,000 rpm	Approximately 0 - 1V

- 3) If NG, go to "Diagnostic Procedure", EC-425.

Wiring Diagram



NEEC1123

EC-TP/SW-01

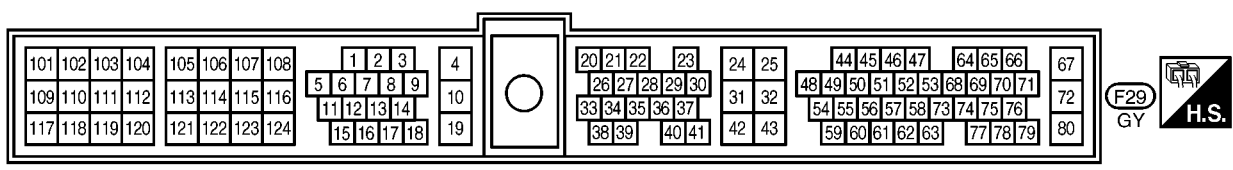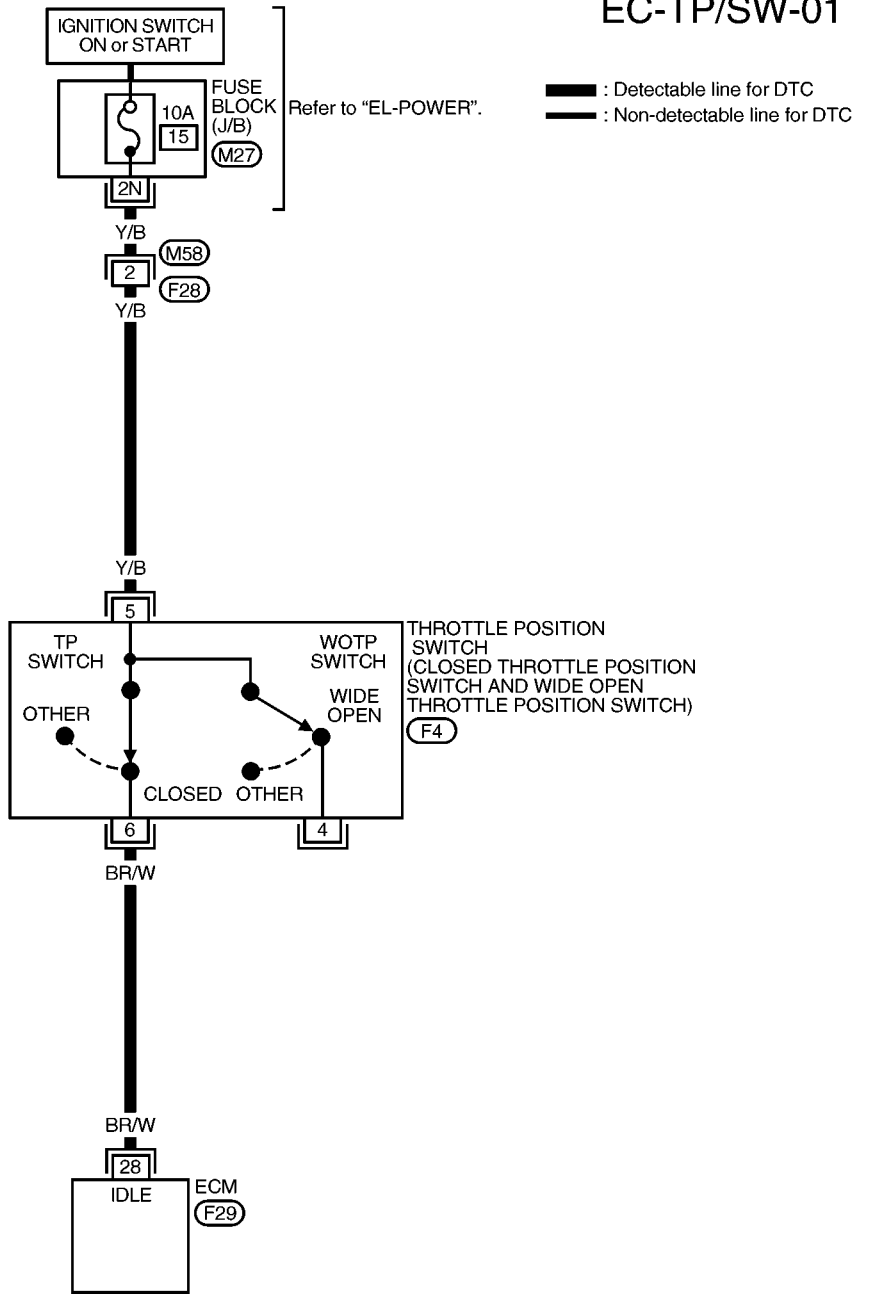

Diagnostic Procedure

NEEC1124

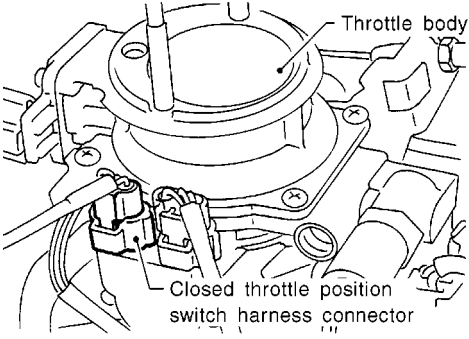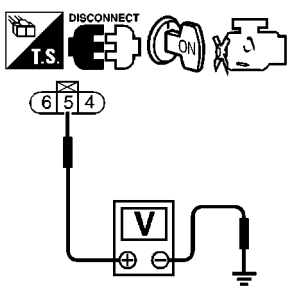1	CHECK POWER SUPPLY	<p>1. Turn ignition switch OFF. 2. Disconnect throttle position switch harness connector.</p> <div style="text-align: center;">  <p>Throttle body Closed throttle position switch harness connector</p> </div> <p>3. Turn ignition switch ON. 4. Check voltage between terminal 5 and engine ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p>DISCONNECT T.S. ON</p> <p>6 5 4</p> <p>V</p> </div> <p>Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>	<small>SEF158S</small> <small>SEF250W</small>	GI MA EM LC EC FE CL MT AT TF PD AX
	OK	▶	GO TO 3.	
	NG	▶	GO TO 2.	

2	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M58, F28 ● 10A fuse ● Harness for open or short between throttle position switch and 10A fuse 		SU BR ST RS BT HA SC EL IDX
		▶	Repair harness or connectors.	

3	CHECK INPUT SIGNAL CIRCUIT
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 28 and terminal 6. 	
AEC571A	
<p style="color: blue;">Continuity should exist.</p>	
<ol style="list-style-type: none"> 4. Also check harness for short to ground and short to power. 	
OK or NG	
OK	▶ GO TO 5.
NG	▶ GO TO 4.

4	DETECT MALFUNCTIONING PART
Check the harness for open or short between throttle position switch and ECM.	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

5	ADJUST THROTTLE POSITION SWITCH IDLE POSITION										
<ol style="list-style-type: none"> 1. Check the following items. Refer to "Basic Inspection", EC-96. 											
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Items</th> <th style="text-align: center;">Specifications</th> </tr> </thead> <tbody> <tr> <td>Ignition timing</td> <td>20° ± 2° BTDC</td> </tr> <tr> <td>Base idle speed</td> <td>750 ± 50 rpm (in "P" or "N" position)</td> </tr> <tr> <td>Closed throttle position switch idle position adjustment</td> <td>Feeler gauge thickness and switch condition 0.1 mm (0.004 in): ON 0.3 mm (0.012 in): OFF</td> </tr> <tr> <td>Target idle speed</td> <td>800 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table>		Items	Specifications	Ignition timing	20° ± 2° BTDC	Base idle speed	750 ± 50 rpm (in "P" or "N" position)	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.1 mm (0.004 in): ON 0.3 mm (0.012 in): OFF	Target idle speed	800 ± 50 rpm (in "P" or "N" position)
Items	Specifications										
Ignition timing	20° ± 2° BTDC										
Base idle speed	750 ± 50 rpm (in "P" or "N" position)										
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.1 mm (0.004 in): ON 0.3 mm (0.012 in): OFF										
Target idle speed	800 ± 50 rpm (in "P" or "N" position)										
MTBL0328											
▶	GO TO 6.										

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

6 CHECK CLOSED THROTTLE POSITION SWITCH

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Stop engine and turn ignition switch ON.
3. Select "DATA MONITOR" mode with CONSULT-II.
4. Check indication of "CLSD THL/P SW" under the following conditions.

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM (REF)	XXX rpm
COOLAN TEMP/S	XXX °C
CLSD THL/P SW	ON

Throttle valve conditions	CLSD THL/P SW
Completely closed	ON
Partially open or completely open	OFF

SEF173X

NOTE:


Measurement must be made with closed throttle position switch installed in vehicle.

If NG, adjust closed throttle position switch. Refer to "Basic Inspection", EC-96.

5. If it is impossible to adjust closed throttle position switch in "Basic Inspection", replace closed throttle position switch.

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect throttle position switch harness connector.
4. Check continuity between terminals 5 and 6 under the following conditions.

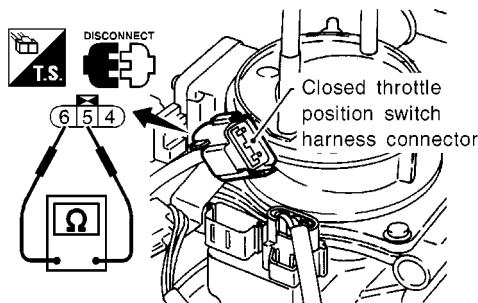

SEF159S

Throttle valve conditions	Continuity
Completely closed	Yes
Partially open or completely open	No

MTBL0299

NOTE:

Continuity measurement must be made with closed throttle position switch installed in vehicle.

If NG, adjust closed throttle position switch. Refer to "Basic Inspection", EC-96.


5. If it is impossible to adjust closed throttle position switch in "Basic Inspection", replace closed throttle position switch.

OK or NG

OK	▶	GO TO 7.
NG	▶	Replace throttle position switch.

7	CHECK THROTTLE POSITION SENSOR										
<p>Ⓜ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine and turn ignition switch ON. 3. Select "DATA MONITOR" mode with CONSULT-II. 4. Check voltage of "THRTL POS SEN" under the following conditions. 											
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITORING</th> <th>NO FAIL</th> </tr> </thead> <tbody> <tr> <td>CMPS-RPM(REF)</td> <td>XXX rpm</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> </tbody> </table>		DATA MONITOR		MONITORING	NO FAIL	CMPS-RPM(REF)	XXX rpm	COOLAN TEMP/S	XXX °C	THRTL POS SEN	XXX V
DATA MONITOR											
MONITORING	NO FAIL										
CMPS-RPM(REF)	XXX rpm										
COOLAN TEMP/S	XXX °C										
THRTL POS SEN	XXX V										
PEF765W											
<p>NOTE: Voltage measurement must be made with throttle position sensor installed in vehicle. If NG, adjust closed throttle position switch. Refer to "Basic Inspection", EC-96.</p> <ol style="list-style-type: none"> 5. If it is impossible to adjust closed throttle position switch in "Basic Inspection", replace throttle position sensor. 											
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine and turn ignition switch ON. 3. Check voltage between ECM terminal 23 (Throttle position sensor signal) and ground under the following conditions. 											
SEF767W											
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th>Throttle valve conditions</th> <th>Voltage V</th> </tr> </thead> <tbody> <tr> <td>Completely closed</td> <td>0.15 - 0.85 (a)</td> </tr> <tr> <td>Partially open</td> <td>Between (a) and (b)</td> </tr> <tr> <td>Completely open</td> <td>3.5 - 4.7 (b)</td> </tr> </tbody> </table>		Throttle valve conditions	Voltage V	Completely closed	0.15 - 0.85 (a)	Partially open	Between (a) and (b)	Completely open	3.5 - 4.7 (b)		
Throttle valve conditions	Voltage V										
Completely closed	0.15 - 0.85 (a)										
Partially open	Between (a) and (b)										
Completely open	3.5 - 4.7 (b)										
MTBL0329											
<p>NOTE: Voltage measurement must be made with throttle position sensor installed in vehicle. If NG, adjust closed throttle position switch. Refer to "Basic Inspection", EC-96.</p> <ol style="list-style-type: none"> 4. If it is impossible to adjust closed throttle position switch in "Basic Inspection", replace throttle position sensor. 											
OK or NG											
OK	▶	GO TO 8.									
NG	▶	Replace throttle position sensor.									

8	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
▶ INSPECTION END	

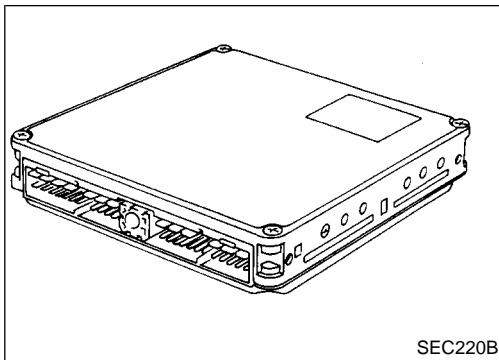


Component Description

The ECM consists of a microcomputer, diagnostic test mode selector, and connectors for signal input and output and for power supply. The ECM controls the engine. NEEC1125

On Board Diagnosis Logic

NEEC1126

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P0605 0301	<ul style="list-style-type: none"> ECM calculation function is malfunctioning. 	<ul style="list-style-type: none"> ECM

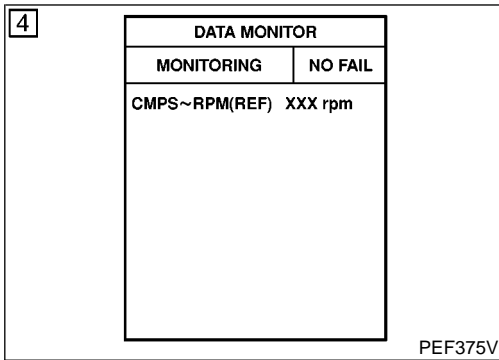

DTC Confirmation Procedure

NEEC1127

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine.
- 4) Run engine for at least 30 seconds at idle speed.
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-430.




With GST

Follow the procedure "With CONSULT-II".

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Diagnostic Procedure

NEEC1128

1	INSPECTION START	
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch ON. 2. Select "SELF DIAG RESULTS" mode with CONSULT-II. 3. Touch "ERASE". 4. Perform "DTC Confirmation Procedure". See previous page. 5. Is the 1st trip DTC P0605 displayed again? 		
<p> With GST</p> <ol style="list-style-type: none"> 1. Turn ignition switch ON. 2. Select MODE 4 with GST. 3. Touch "ERASE". 4. Perform "DTC Confirmation Procedure". See previous page. 5. Is the 1st trip DTC P0605 displayed again? 		
<p> No Tools</p> <ol style="list-style-type: none"> 1. Turn ignition switch ON. 2. Erase the Diagnostic Test Mode II (Self-diagnostic results) memory. Refer to EC-70. 3. Perform "DTC Confirmation Procedure". See previous page. 4. Is the 1st trip DTC 0301 displayed again? 		
Yes or No		
Yes	▶	Replace ECM.
No	▶	INSPECTION END


Description SYSTEM DESCRIPTION

NEEC1129
NEEC1129S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	On board diagnosis of EVAP system	MAP/BARO switch solenoid valve
Ignition switch	Start signal		

This system allows the absolute pressure sensor to monitor either ambient barometric pressure or intake manifold pressure. The MAP/BARO switch solenoid valve switches between two passages by ON-OFF pulse signals from the ECM. (One passage is from the intake air duct, the other is from the intake manifold.) Either ambient barometric pressure or intake manifold pressure is applied to the absolute pressure sensor.

Solenoid	Conditions
ON	<ul style="list-style-type: none"> For 5 seconds after turning ignition switch "ON" (Engine is not running) or For 5 seconds after starting engine or More than 5 minutes after the solenoid valve shuts OFF. and Engine running

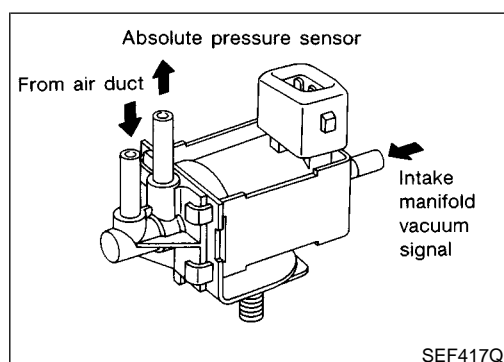

COMPONENT DESCRIPTION

NEEC1129S02

The MAP/BARO switch solenoid valve switches its air flow passage according to the voltage signal sent from the ECM. When voltage is supplied from the ECM, the MAP/BARO switch solenoid turns "ON". Then, the absolute pressure sensor can monitor the ambient barometric pressure. When voltage is not supplied from the ECM, the MAP/BARO switch solenoid valve turns "OFF". Then, the sensor monitors intake manifold pressure.

CONSULT-II Reference Value in Data Monitor Mode

NEEC1130

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
MAP/BARO SW/V	For 5 seconds after starting engine	BARO
	More than 5 seconds after turning ignition switch "ON"	MAP
	More than 5 seconds after starting engine	

ECM Terminals and Reference Value

NEEC1131


Specification data are reference values and are measured between each terminal and 43 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
118	LG/B	MAP/BARO switch sole-noid valve	[Ignition switch "ON"] ● For 5 seconds after turning ignition switch "ON" [Engine is running] ● For 5 seconds after starting engine	0 - 1V
			[Ignition switch "ON"] ● More than 5 seconds after turning ignition switch "ON" [Engine is running] ● More than 5 seconds after starting engine	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NEEC1132

DTC No.	Malfunction is detected when ...		Check Items (Possible Cause)
P1105 1302	A)	MAP/BARO switch solenoid valve receives the volt-age supplied though ECM does not supply the volt-age to the valve.	<ul style="list-style-type: none"> ● Harness or connectors (MAP/BARO switch solenoid valve circuit is open or shorted.) ● MAP/BARO switch solenoid valve
	B)	There is little difference between MAP/BARO switch solenoid valve input voltage at ambient barometric pressure and voltage at intake manifold pressure.	<ul style="list-style-type: none"> ● Harness or connectors (MAP/BARO switch solenoid valve circuit is open or shorted.) ● Hoses (Hoses are clogged, vent, kinked, disconnected or improper connection.) ● Absolute pressure sensor ● MAP/BARO switch solenoid valve

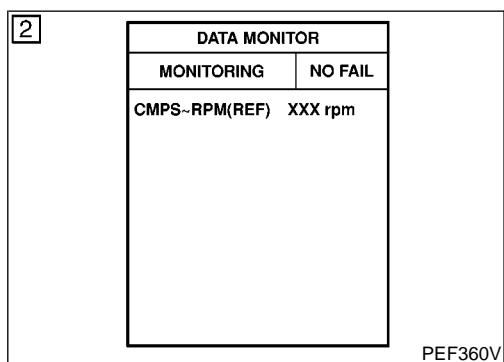

DTC Confirmation Procedure

NEEC1133

Perform "Procedure for malfunction A" first. If the 1st trip DTC cannot be confirmed, perform "Procedure for malfunction B".

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

PROCEDURE FOR MALFUNCTION A

NEEC1133S01

TESTING CONDITION:

Before performing the following procedure, confirm that bat-tery voltage is more than 11V at ignition switch "ON".

④ With CONSULT-II

- 1) Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
- 2) Wait at least 10 seconds.
- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-435.

 **With GST**

Follow the procedure "With CONSULT-II".

GI


MA

EM

LC

5	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF)	XXX rpm
	COOLAN TEMP/S	XXX °C
	TANK F/TMP SE	XXX °C

PEF398V

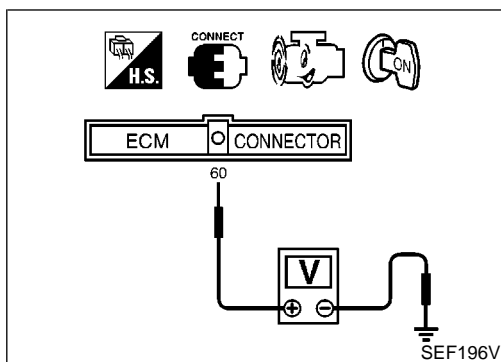

PROCEDURE FOR MALFUNCTION B

NEEC1133S02

TESTING CONDITION:

Always perform at a temperature above 5°C (41°F).

 **With CONSULT-II**

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Turn ignition switch ON again and select "DATA MONITOR" mode with CONSULT-II.
- 4) Make sure that "TANK/F/TEMP SE" is more than 0°C (32°F).
- 5) Start engine and let it idle for at least 10 seconds.
- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-435.

EC

FE

CL

MT

 **With GST**

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Turn ignition switch ON.
- 4) Check that voltage between ECM terminal 60 and ground is less than 4.2V.
- 5) Start engine and let it idle for at least 10 seconds.
- 6) Select "MODE 7" with GST.
- 7) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-435.

AT

TF

PD

AX

 **No Tools**

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Turn ignition switch ON.
- 4) Check that voltage between ECM terminal 60 and ground is less than 4.2V.
- 5) Start engine and let it idle for at least 10 seconds.
- 6) Turn ignition switch OFF, wait at least 5 seconds and then turn ignition ON.
- 7) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 8) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-435.

SU

BR

ST

RS

BT

HA

SC


EL

IDX

Wiring Diagram


NEEC1134

EC-SW/V-01

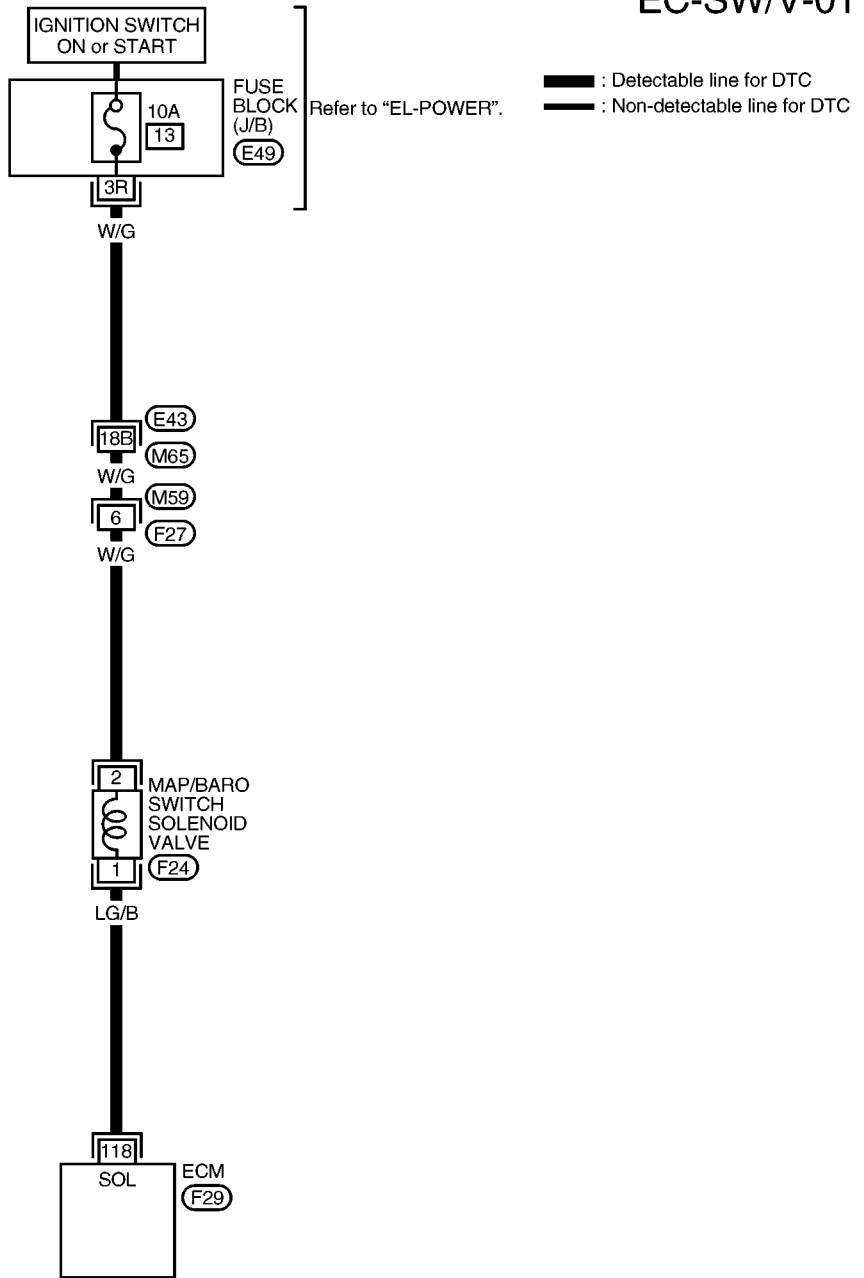


: Detectable line for DTC
 : Non-detectable line for DTC

Refer to "EL-POWER".



Refer to the following.
 (M65), (E43) - SUPER
 MULTIPLE JUNCTION (SMJ)


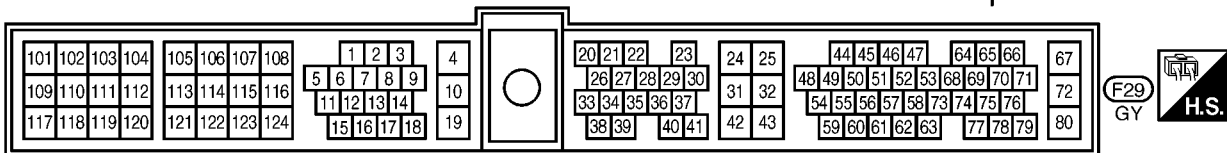


Diagnostic Procedure

If the trouble is duplicated after “PROCEDURE FOR MALFUNCTION A”, perform “PROCEDURE A” below. If the trouble is duplicated after “PROCEDURE FOR MALFUNCTION B”, perform “PROCEDURE B” on EC-439.

PROCEDURE A

NEEC1135S01

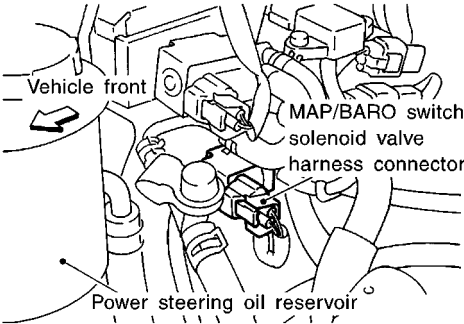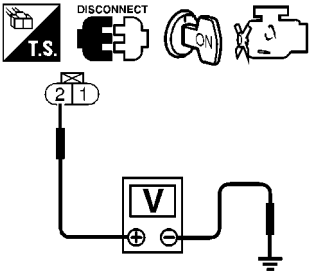1	CHECK POWER SUPPLY		
		<p>1. Turn ignition switch OFF. 2. Disconnect MAP/BARO switch solenoid valve harness connector.</p>  <p>3. Turn ignition switch ON. 4. Check voltage between terminal 2 and engine ground with CONSULT-II or tester.</p>  <p style="color: blue;">Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>	<p>SEF338V</p> <p>SEF192V</p>
	OK	▶	GO TO 3.
	NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART		
		<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M59, F27 ● 10A fuse ● Harness for open or short between MAP/BARO switch solenoid valve and 10A fuse 	
		▶	Repair harness or connectors.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

3	CHECK OUTPUT SIGNAL CIRCUIT	
<p>1. Turn ignition switch OFF.</p> <p>2. Disconnect ECM harness connector.</p> <p>3. Check harness continuity between ECM terminal 118 and terminal 1.</p>		
SEF205V		
<p>Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 5.
OK (Without CONSULT-II)	▶	GO TO 6.
NG	▶	GO TO 4.

4	DETECT MALFUNCTIONING PART	
Check the harness for open or short between MAP/BARO switch solenoid valve and ECM.		
	▶	Repair open circuit or short to ground or short to power in harness or connectors.

5 CHECK MAP/BARO SWITCH SOLENOID VALVE

Ⓟ With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Perform "MAP/BARO SW/V" in "ACTIVE TEST" mode with CONSULT-II.
3. Check the following.
 - Condition: At idle under no-load
 - CONSULT-II display
 - Time for voltage to change

ACTIVE TEST	
MAP/BARO SW/V	MAP
MONITOR	
CMPS-RPM (REF)	XXX rpm
MAP/BARO SW/V	MAP
ABSOL PRES/SE	XXX V

MAP/BARO	AVSOL PRES/SE (Voltage)
BARO	More than 2.6V
MAP	Less than the voltage at BARO

ACTIVE TEST	
MAP/BARO SW/V	BARO
MONITOR	
CMPS-RPM (REF)	XXX rpm
MAP/BARO SW/V	BARO
ABSOL PRES/SE	XXX V



MAP/BARO SW/V	Required time to switch
BARO to MAP	Less than 1 second
MAP to BARO	

SEF170X

OK or NG

OK	▶	GO TO 7.
NG	▶	GO TO 6.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

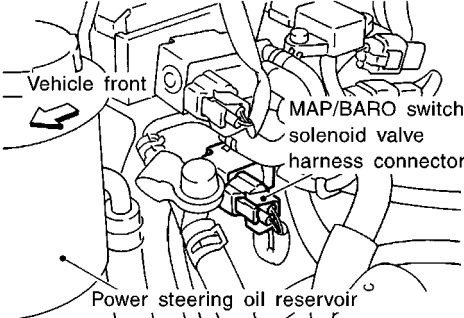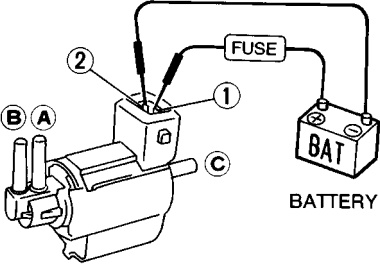6	CHECK MAP/BARO SWITCH SOLENOID VALVE									
<p>⊗ Without CONSULT-II</p> <p>1. Turn ignition switch OFF and remove MAP/BARO switch solenoid valve.</p> <div style="text-align: center;">  </div>										
<p>2. Check air passage continuity.</p> <div style="text-align: center;">  </div>										
SEF338V										
MEC488B										
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="padding: 5px;">Condition</th> <th style="padding: 5px;">Air passage continuity between A and B</th> <th style="padding: 5px;">Air passage continuity between A and C</th> </tr> </thead> <tbody> <tr> <td style="padding: 5px;">12V direct current supply between terminals 1 and 2</td> <td style="text-align: center; padding: 5px;">Yes</td> <td style="text-align: center; padding: 5px;">No</td> </tr> <tr> <td style="padding: 5px;">No supply</td> <td style="text-align: center; padding: 5px;">No</td> <td style="text-align: center; padding: 5px;">Yes</td> </tr> </tbody> </table>		Condition	Air passage continuity between A and B	Air passage continuity between A and C	12V direct current supply between terminals 1 and 2	Yes	No	No supply	No	Yes
Condition	Air passage continuity between A and B	Air passage continuity between A and C								
12V direct current supply between terminals 1 and 2	Yes	No								
No supply	No	Yes								
MTBL0283										
<p>3. Check the time required for the solenoid valve to switch. It should be less than 1 second.</p> <p style="text-align: center;">OK or NG</p>										
OK	▶ GO TO 7.									
NG	▶ Replace MAP/BARO switch solenoid valve.									


7	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
▶	INSPECTION END

PROCEDURE B


NEEC1135S02

1 INSPECTION START

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Connect MAP/BARO switch solenoid valve and absolute pressure sensor with a rubber tube that has vacuum gauge.

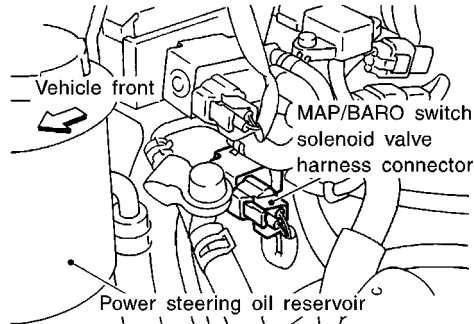

SEF338V

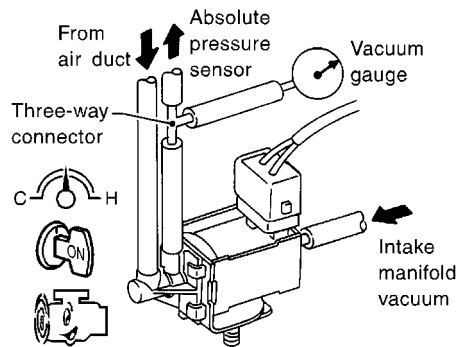

SEF676T

Models with CONSULT-II ► GO TO 2.

Models without CONSULT-II ► GO TO 3.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC


EL

IDX

2	CHECK VACUUM SOURCE TO MAP/BARO SWITCH SOLENOID VALVE AND CIRCUIT																				
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch ON. 2. Select "MAP/BARO SW/V" in "ACTIVE TEST" mode with CONSULT-II. 3. Start engine and let it idle. 4. Touch "MAP" and "BARO" alternately and check for vacuum. 																					
<table border="1" style="margin: 10px auto; border-collapse: collapse;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><th>MAP/BARO SW/V</th><th>MAP</th></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><th>CMPS~RPM(REF)</th><th>XXX rpm</th></tr> <tr><th>MAP/BARO SW/V</th><th>MAP</th></tr> <tr><th>ABSOL PRES/SE</th><th>XXX V</th></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>		ACTIVE TEST		MAP/BARO SW/V	MAP	MONITOR		CMPS~RPM(REF)	XXX rpm	MAP/BARO SW/V	MAP	ABSOL PRES/SE	XXX V								
ACTIVE TEST																					
MAP/BARO SW/V	MAP																				
MONITOR																					
CMPS~RPM(REF)	XXX rpm																				
MAP/BARO SW/V	MAP																				
ABSOL PRES/SE	XXX V																				
PEF396V																					
<table border="1" style="margin: 10px auto; border-collapse: collapse;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><th>MAP/BARO SW/V</th><th>BARO</th></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><th>CMPS~RPM(REF)</th><th>XXX rpm</th></tr> <tr><th>MAP/BARO SW/V</th><th>BARO</th></tr> <tr><th>ABSOL PRES/SE</th><th>XXX V</th></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>		ACTIVE TEST		MAP/BARO SW/V	BARO	MONITOR		CMPS~RPM(REF)	XXX rpm	MAP/BARO SW/V	BARO	ABSOL PRES/SE	XXX V								
ACTIVE TEST																					
MAP/BARO SW/V	BARO																				
MONITOR																					
CMPS~RPM(REF)	XXX rpm																				
MAP/BARO SW/V	BARO																				
ABSOL PRES/SE	XXX V																				
PEF397V																					
<table border="1" style="margin: 10px auto; border-collapse: collapse;"> <tr><th>MAP/BARO SW/V</th><th>Vacuum</th></tr> <tr><td>BARO</td><td>Should not exist</td></tr> <tr><td>MAP</td><td>Should exist</td></tr> </table>		MAP/BARO SW/V	Vacuum	BARO	Should not exist	MAP	Should exist														
MAP/BARO SW/V	Vacuum																				
BARO	Should not exist																				
MAP	Should exist																				
MTBL0079																					
OK or NG																					
OK	▶ GO TO 13.																				
NG	▶ GO TO 4.																				

3	CHECK VACUUM SOURCE TO ABSOLUTE PRESSURE SENSOR						
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and let it idle. 2. Check for vacuum under the following condition. 							
<table border="1" style="margin: 10px auto; border-collapse: collapse;"> <tr><th>Condition</th><th>Vacuum</th></tr> <tr><td>For 5 seconds after starting engine</td><td>Should not exist</td></tr> <tr><td>More than 5 seconds after starting engine</td><td>Should exist</td></tr> </table>		Condition	Vacuum	For 5 seconds after starting engine	Should not exist	More than 5 seconds after starting engine	Should exist
Condition	Vacuum						
For 5 seconds after starting engine	Should not exist						
More than 5 seconds after starting engine	Should exist						
MTBL0080							
OK or NG							
OK	▶ GO TO 13.						
NG	▶ GO TO 4.						

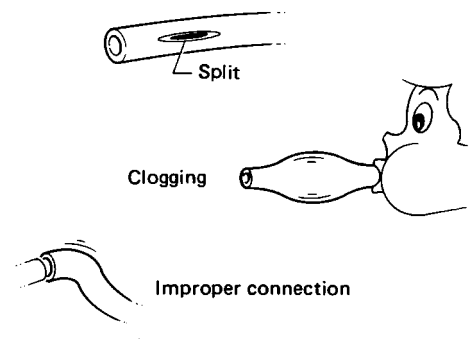4	CHECK VACUUM HOSE	<p>1. Turn ignition switch OFF. 2. Check hose for clogging, cracks, disconnection or improper connection.</p> <div style="text-align: center;">  <p>Split</p> <p>Clogging</p> <p>Improper connection</p> </div> <p style="text-align: right;">SEF109L</p>	
OK or NG			
OK	▶	GO TO 5.	
NG	▶	Clean, repair or reconnect the hose.	

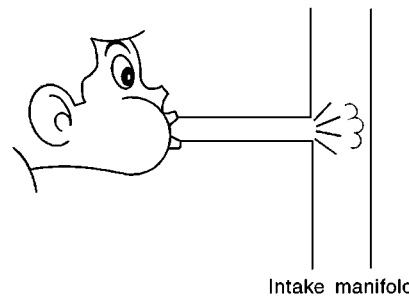5	CHECK VACUUM PORT	<p>Check vacuum port for clogging.</p> <div style="text-align: center;">  <p>Intake manifold</p> </div> <p style="text-align: right;">SEF368U</p>	
OK or NG			
OK	▶	GO TO 6.	
NG	▶	Clean or repair the vacuum port.	

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

6	CHECK POWER SUPPLY		
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect MAP/BARO switch solenoid valve harness connector. 3. Turn ignition switch ON. 4. Check voltage between terminal 2 and ground with CONSULT-II or tester. 			
<p>Voltage: Battery voltage</p> <p>OK or NG</p>			
OK		▶	GO TO 8.
NG		▶	GO TO 7.

SEF192V

7	DETECT MALFUNCTIONING PART		
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M59, F27 ● 10A fuse ● Harness for open or short between MAP/BARO switch solenoid valve and 10A fuse 			
		▶	Repair harness or connectors.

8	CHECK OUTPUT SIGNAL CIRCUIT		
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 118 and terminal 1 with CONSULT-II or tester. 			
<p>Continuity should exist.</p> <p>OK or NG</p>			
OK (With CONSULT-II)		▶	GO TO 10.
OK (Without CONSULT-II)		▶	GO TO 11.
NG		▶	GO TO 9.


SEF205V

DTC P1105 MAP/BARO SWITCH SOLENOID VALVE



KA24DE

Diagnostic Procedure (Cont'd)

9	DETECT MALFUNCTIONING PART
Check the harness for open or short between MAP/BARO switch solenoid valve and ECM.	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

10	CHECK MAP/BARO SWITCH SOLENOID VALVE																				
<p> With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature.</p> <p>2. Perform "MAP/BARO SW/V" in "ACTIVE TEST" mode with CONSULT-II.</p>																					
<table border="1"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>MAP/BARO SW/V</td><td>MAP</td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>CMPS~RPM(REF)</td><td>XXX rpm</td></tr> <tr><td>MAP/BARO SW/V</td><td>MAP</td></tr> <tr><td>ABSOL PRES/SE</td><td>XXX V</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>		ACTIVE TEST		MAP/BARO SW/V	MAP	MONITOR		CMPS~RPM(REF)	XXX rpm	MAP/BARO SW/V	MAP	ABSOL PRES/SE	XXX V								
ACTIVE TEST																					
MAP/BARO SW/V	MAP																				
MONITOR																					
CMPS~RPM(REF)	XXX rpm																				
MAP/BARO SW/V	MAP																				
ABSOL PRES/SE	XXX V																				
PEF396V																					
<table border="1"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>MAP/BARO SW/V</td><td>BARO</td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>CMPS~RPM(REF)</td><td>XXX rpm</td></tr> <tr><td>MAP/BARO SW/V</td><td>BARO</td></tr> <tr><td>ABSOL PRES/SE</td><td>XXX V</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>		ACTIVE TEST		MAP/BARO SW/V	BARO	MONITOR		CMPS~RPM(REF)	XXX rpm	MAP/BARO SW/V	BARO	ABSOL PRES/SE	XXX V								
ACTIVE TEST																					
MAP/BARO SW/V	BARO																				
MONITOR																					
CMPS~RPM(REF)	XXX rpm																				
MAP/BARO SW/V	BARO																				
ABSOL PRES/SE	XXX V																				
PEF397V																					
<p>3. Check the following.</p> <ul style="list-style-type: none"> ● Condition: At idle under no-load ● CONSULT-II display 																					
<table border="1"> <tr><td>MAP/BARO</td><td>ABSOL PRES/SE (Voltage)</td></tr> <tr><td>BARO</td><td>More than 2.6V</td></tr> <tr><td>MAP</td><td>Less than the voltage at BARO</td></tr> </table>		MAP/BARO	ABSOL PRES/SE (Voltage)	BARO	More than 2.6V	MAP	Less than the voltage at BARO														
MAP/BARO	ABSOL PRES/SE (Voltage)																				
BARO	More than 2.6V																				
MAP	Less than the voltage at BARO																				
MTBL0281																					
<ul style="list-style-type: none"> ● Time for voltage to change 																					
<table border="1"> <tr><td>MAP/BARO SW/V</td><td>Required time to switch</td></tr> <tr><td>BARO to MAP</td><td rowspan="2">Less than 1 second</td></tr> <tr><td>MAP to BARO</td></tr> </table>		MAP/BARO SW/V	Required time to switch	BARO to MAP	Less than 1 second	MAP to BARO															
MAP/BARO SW/V	Required time to switch																				
BARO to MAP	Less than 1 second																				
MAP to BARO																					
MTBL0282																					
<p>4. If NG, check solenoid valve as shown below.</p>																					
OK or NG																					
OK	▶ GO TO 12.																				
NG	▶ Replace MAP/BARO switch solenoid valve.																				

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

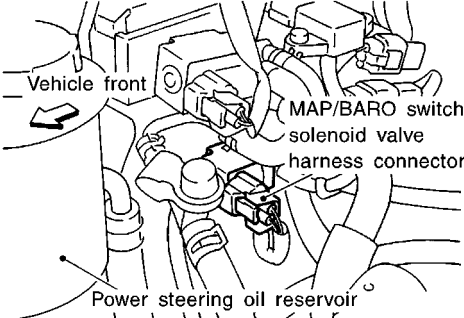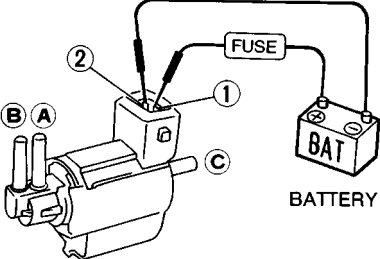
11	CHECK MAP/BARO SWITCH SOLENOID VALVE									
<p>⊗ Without CONSULT-II</p> <p>1. Turn ignition switch OFF and remove MAP/BARO switch solenoid valve.</p> <div style="text-align: center;">  </div> <p>2. Check air passage continuity.</p> <div style="text-align: center;">  </div> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse; text-align: center;"> <thead> <tr> <th style="border: none;">Condition</th> <th style="border: none;">Air passage continuity between A and B</th> <th style="border: none;">Air passage continuity between A and C</th> </tr> </thead> <tbody> <tr> <td style="border: none;">12V direct current supply between terminals 1 and 2</td> <td style="border: none;">Yes</td> <td style="border: none;">No</td> </tr> <tr> <td style="border: none;">No supply</td> <td style="border: none;">No</td> <td style="border: none;">Yes</td> </tr> </tbody> </table>		Condition	Air passage continuity between A and B	Air passage continuity between A and C	12V direct current supply between terminals 1 and 2	Yes	No	No supply	No	Yes
Condition	Air passage continuity between A and B	Air passage continuity between A and C								
12V direct current supply between terminals 1 and 2	Yes	No								
No supply	No	Yes								

12	CHECK INTAKE SYSTEM						
<p>Check intake system for air leaks.</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 16.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Repair it.</td> </tr> </table>		OK	▶	GO TO 16.	NG	▶	Repair it.
OK	▶	GO TO 16.					
NG	▶	Repair it.					

DTC P1105 MAP/BARO SWITCH SOLENOID VALVE

KA24DE

Diagnostic Procedure (Cont'd)

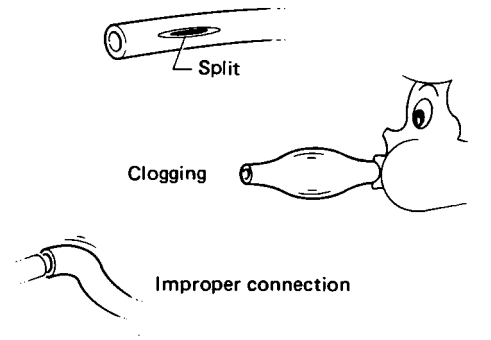13	CHECK HOSE BETWEEN ABSOLUTE PRESSURE SENSOR AND MAP/BARO SWITCH SOLENOID VALVE
<p>Check hose for clogging, cracks, disconnection or improper connection.</p> <div style="text-align: center;">  <p>The diagrams show three types of hose problems: 1. A hose with a longitudinal crack labeled 'Split'. 2. A hose with a bulbous swelling labeled 'Clogging'. 3. A hose that is not properly seated on a fitting labeled 'Improper connection'.</p> </div> <p style="text-align: right;">SEF109L</p>	
OK or NG	
OK	▶ GO TO 14.
NG	▶ Repair or reconnect hose.

14	CHECK HARNESS CONNECTOR
<p>1. Disconnect absolute pressure sensor harness connector. 2. Check sensor harness connector for water. Water should not exist.</p>	
OK or NG	
OK	▶ GO TO 15.
NG	▶ Repair or replace harness connector.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS



BT

HA

SC

EL

IDX

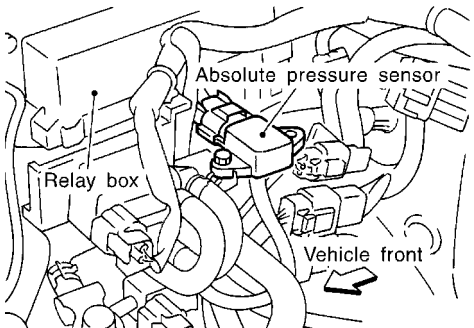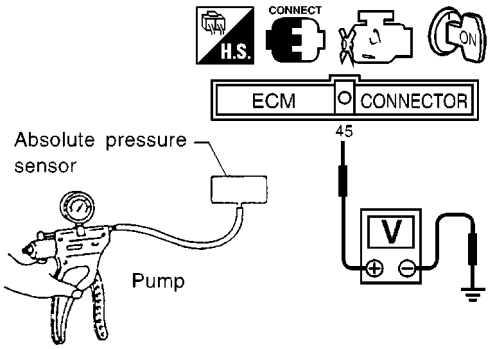15	CHECK ABSOLUTE PRESSURE SENSOR						
<p>1. Remove absolute pressure sensor with its harness connector connected.</p> <div style="text-align: center; margin: 10px 0;">  </div> <p style="text-align: right; margin-right: 50px;">SEF328V</p> <p>2. Remove hose from absolute pressure sensor.</p> <p>3. Turn ignition switch ON and check output voltage between ECM terminal 45 (Absolute pressure sensor signal) and engine ground.</p> <div style="text-align: center; margin: 10px 0;">  </div> <p style="text-align: right; margin-right: 50px;">SEF132V</p> <p>The voltage should be 3.2 to 4.8V.</p> <p>4. Use pump to apply vacuum of -26.7 kPa (-200 mmHg, -7.87 inHg) to absolute pressure sensor as shown in figure and check the output voltage.</p> <p>The voltage should be 1.0 to 1.4V lower than the value measured in step 3.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Always calibrate the vacuum pump gauge when using it. ● Do not apply below -93.3 kPa (-700 mmHg, -27.56 inHg) or over 101.3 kPa (760 mmHg, 29.92 inHg) of pressure. <p style="text-align: center; margin: 10px 0;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 5px;"> <tr> <td style="width: 15%; padding: 2px;">OK</td> <td style="width: 10%; text-align: center; padding: 2px;">▶</td> <td style="padding: 2px;">GO TO 16.</td> </tr> <tr> <td style="padding: 2px;">NG</td> <td style="text-align: center; padding: 2px;">▶</td> <td style="padding: 2px;">Replace absolute pressure sensor.</td> </tr> </table>		OK	▶	GO TO 16.	NG	▶	Replace absolute pressure sensor.
OK	▶	GO TO 16.					
NG	▶	Replace absolute pressure sensor.					

16	CHECK INTERMITTENT INCIDENT
<p>Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.</p>	
<p>▶ INSPECTION END</p>	

On Board Diagnosis Logic

NEEC1136

★ The closed loop control has the one trip detection logic.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1148 0307	<ul style="list-style-type: none"> The closed loop control function does not operate even when vehicle is driving in the specified condition. 	<ul style="list-style-type: none"> The front heated oxygen sensor circuit is open or shorted. Front heated oxygen sensor Front heated oxygen sensor heater

GI

MA

EM

LC

DATA MONITOR

MONITORING	NO FAIL
CMPS~RPM(REF) XXX rpm	
FR O2 SENSOR XXX °C	
VHCL SPEED SE XXX km/h	
B/FUEL SCHDL XXX msec	

PEF237V

DTC Confirmation Procedure

NEEC1137

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Never raise engine speed above 3,000 rpm during the “DTC Confirmation Procedure”. If the engine speed limit is exceeded, retry the procedure from step 4.
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

④ **With CONSULT-II**

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select “DATA MONITOR” mode with CONSULT-II.
- 3) Hold engine speed at 2,000 rpm and check the following.
 - “FR O2 SENSOR” voltage should go above 0.70V at least once.
 - “FR O2 SENSOR” voltage should go below 0.21V at least once.

If the result is NG, perform “Diagnosis Procedure”, EC-448.
If the result is OK, perform the following step.
- 4) Let engine idle at least 3 minutes.
- 5) Maintain the following condition at least 50 consecutive seconds.

B/FUEL SCHDL	1.3 msec or more
CMPS-RPM (REF)	1,650 - 3,000 rpm
Selector lever	Suitable position
VHCL SPEED SE	More than 70 km/h (44 MPH)

During this test, P0130 DTC may be displayed on CONSULT-II screen.

- 6) If DTC is detected, go to “Diagnostic Procedure”, EC-448.

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT


HA

SC

EL

IDX

Overall Function Check

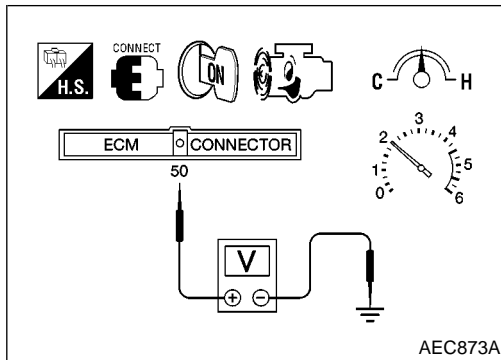

Overall Function Check

NEEC1138

Use this procedure to check the overall function of the closed loop control. During this check, a DTC might not be confirmed.


⊗ Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 50 (Front heated oxygen sensor signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The voltage should go above 0.70V at least once.
 - The voltage should go below 0.21V at least once.
- 4) If NG, go to "Diagnostic Procedure", EC-448.

Diagnostic Procedure

NEEC1139

Refer to "Diagnostic Procedure" for DTC P0133, EC-217.

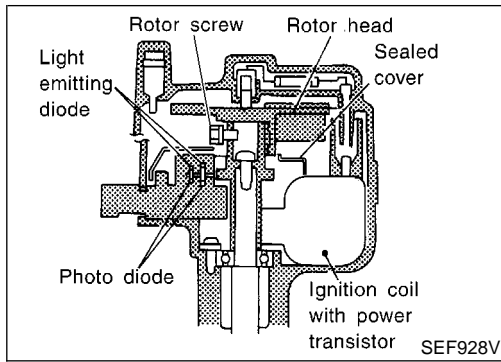

Component Description

IGNITION COIL & POWER TRANSISTOR

NEEC1140
NEEC1140S01

The ignition signal from the ECM is sent to the power transistor. The power transistor switches the ignition coil primary circuit on and off. As the primary circuit is turned on and off, the proper high voltage is induced in the coil secondary circuit.

The distributor is not repairable and must be replaced as an assembly except distributor cap and rotor head.

NOTE:

The rotor screw which secures the distributor rotor head to the distributor shaft must be tightened properly.

: 3.3 - 3.9 N·m (0.34 - 0.40 kg·m, 29.5 - 34.7 in·lb)

GI
MA
EM
LC

EC

FE

CL

MT

CONSULT-II Reference Value in Data Monitor Mode

NEEC1141

MONITOR ITEM	CONDITION	SPECIFICATION
IGN TIMING	<ul style="list-style-type: none"> Engine: After warming up Air conditioner switch: OFF Shift lever: "N" No-load Idle	Approx. 20° BTDC
	2,000 rpm	More than 25° BTDC

AT

TF

PD

ECM Terminals and Reference Value

NEEC1142

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
1	PU/W	Ignition signal	[Engine is running] <ul style="list-style-type: none"> Warm-up condition Idle speed 	0 - 0.5V <small>SEF996V</small>
			[Engine is running] <ul style="list-style-type: none"> Engine speed is 2,000 rpm 	0.2 - 1.0V <small>SEF997V</small>

SU

BR

ST

RS

BT

HA

SC



EL

IDX

DTC P1320 IGNITION SIGNAL

KA24DE

ECM Terminals and Reference Value (Cont'd)

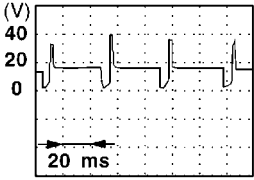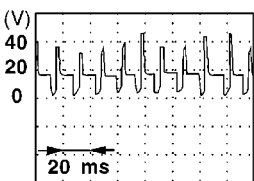TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
2	B	Ignition check	<p>[Engine is running]</p> <ul style="list-style-type: none"> • Warm-up condition • Idle speed 	<p>12 - 14V</p>  <p>SEF998V</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> • Engine speed is 2,000 rpm 	<p>12 - 13V</p>  <p>SEF999V</p>

On Board Diagnosis Logic

NEEC1143

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1320 0201	<ul style="list-style-type: none"> • The ignition signal in the primary circuit is not sent to ECM during engine cranking or running. 	<ul style="list-style-type: none"> • Harness or connectors (The ignition primary circuit is open or shorted.) • Power transistor unit. • Resistor • Camshaft position sensor • Camshaft position sensor circuit

DTC Confirmation Procedure

NEEC1144

NOTE:

- If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.
- If DTC P1320 (0201) is displayed with P0340 (0101), perform trouble diagnosis for DTC P0340 first. Refer to EC-319.

3	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF)	XXX rpm

PEF357V

With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait at least 4 seconds. (If engine does not run, turn ignition switch to "START" at least 5 seconds.)
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-452.

With GST

Follow the procedure "With CONSULT-II".

DTC P1320 IGNITION SIGNAL

KA24DE

Wiring Diagram

Wiring Diagram

NEEC1145

EC-IGN/SG-01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS






BT

HA


SC

EL

IDX

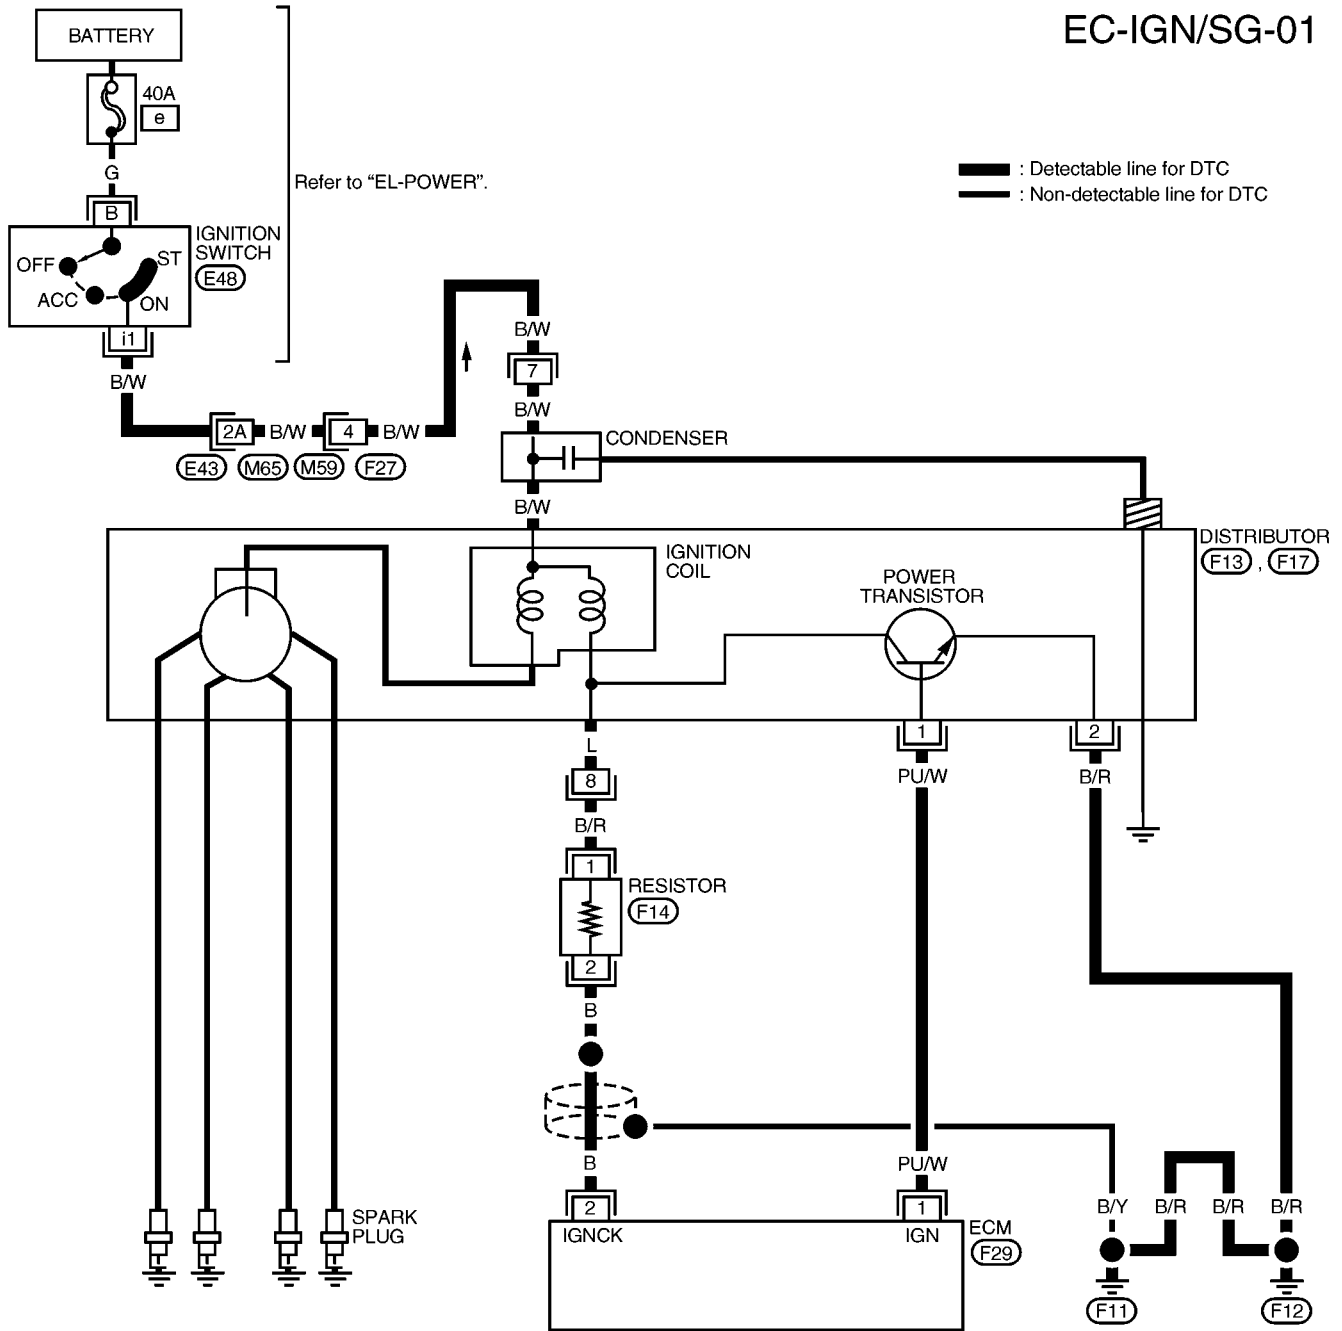

Refer to the following.
 (M65, E43) - SUPER
 MULTIPLE JUNCTION (SMJ)


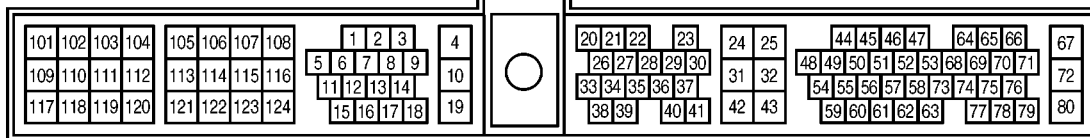


AEC004B

Diagnostic Procedure

NEEC1146

1	CHECK ENGINE START	
Turn ignition switch OFF, and restart engine. Is engine running?		
Yes or No		
Yes	▶	GO TO 7.
No	▶	GO TO 2.

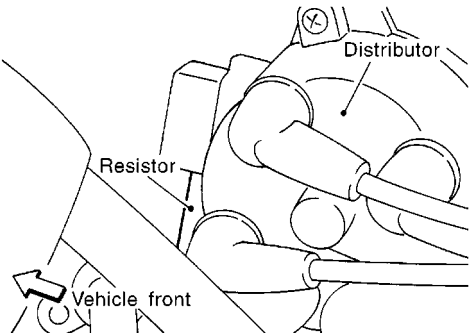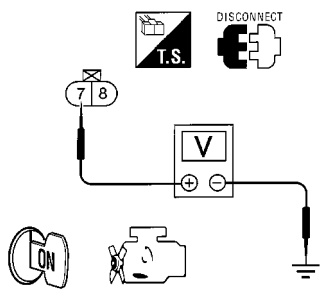2	CHECK POWER SUPPLY	
1. Turn ignition switch OFF. 2. Disconnect ignition coil harness connector.		
		
3. Turn ignition switch ON. 4. Check voltage between terminal 7 and ground with CONSULT-II or tester.		
		
Voltage: Battery voltage		
OK or NG		
OK	▶	GO TO 4.
NG	▶	GO TO 3.

SEF344V

AEC698

3	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M59, F27 ● Harness for open or short between ignition coil and ignition switch 		
▶		Repair harness or connectors.

DTC P1320 IGNITION SIGNAL

KA24DE

Diagnostic Procedure (Cont'd)

4	CHECK GROUND CIRCUIT	
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect power transistor harness connector. 3. Check harness continuity between power transistor terminal 2 and engine ground. Refer to the wiring diagram. Continuity should exist. 4. Also check harness for short to ground and short to power. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM
LC

5	CHECK INPUT SIGNAL CIRCUIT	
<ol style="list-style-type: none"> 1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 1 and power transistor terminal 1. <div style="text-align: center;"> </div> <p style="text-align: center;">Continuity should exist.</p> <ol style="list-style-type: none"> 3. Also check harness for short to ground and short to power. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


6	CHECK IGNITION COIL	<ol style="list-style-type: none"> 1. Disconnect ignition coil harness connector. 2. Remove distributor cap. 3. Check resistance as shown in the figure. <div style="text-align: center; margin: 10px 0;"> </div> <table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 40%;">Terminal</th> <th style="width: 60%;">Resistance [at 25°C (77°F)]</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">7 - 8</td> <td style="text-align: center;">Less than 1Ω</td> </tr> <tr> <td style="text-align: center;">7 - 9</td> <td style="text-align: center;">7 - 13Ω</td> </tr> </tbody> </table> <p style="text-align: right; margin-right: 20px;">AEC150A</p> <p style="text-align: right; margin-right: 20px;">MTBL0300</p> <p style="text-align: center; margin-top: 10px;">If NG, replace distributor assembly as a unit.</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	Terminal	Resistance [at 25°C (77°F)]	7 - 8	Less than 1Ω	7 - 9	7 - 13Ω
Terminal	Resistance [at 25°C (77°F)]							
7 - 8	Less than 1Ω							
7 - 9	7 - 13Ω							
OK	▶	GO TO 7.						
NG	▶	Replace distributor assembly as a unit.						

7	CHECK POWER TRANSISTOR	<ol style="list-style-type: none"> 1. Disconnect camshaft position sensor & power transistor harness connector and ignition coil harness connector. 2. Check power transistor resistance between terminals 2 and 8. <div style="text-align: center; margin: 10px 0;"> </div> <table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 30%;">Terminals</th> <th style="width: 30%;">Resistance</th> <th style="width: 40%;">Result</th> </tr> </thead> <tbody> <tr> <td rowspan="2" style="text-align: center;">2 and 8</td> <td style="text-align: center;">Except 0Ω</td> <td style="text-align: center;">OK</td> </tr> <tr> <td style="text-align: center;">0Ω</td> <td style="text-align: center;">NG</td> </tr> </tbody> </table> <p style="text-align: right; margin-right: 20px;">AEC151A</p> <p style="text-align: right; margin-right: 20px;">MTBL0301</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	Terminals	Resistance	Result	2 and 8	Except 0Ω	OK	0Ω	NG
Terminals	Resistance	Result								
2 and 8	Except 0Ω	OK								
	0Ω	NG								
OK	▶	GO TO 8.								
NG	▶	Replace distributor assembly.								

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


8 CHECK INPUT SIGNAL CIRCUIT

1. Stop engine.
2. Disconnect ignition coil harness connector.
3. Strip tape covering resistor.
4. Disconnect resistor harness connector.

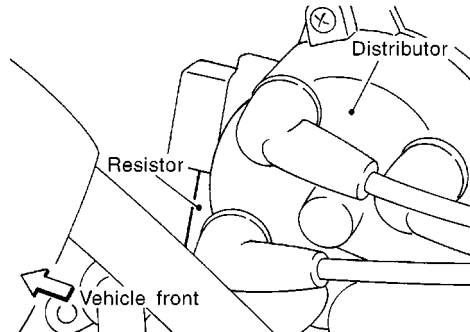

SEF344V

5. Disconnect ECM harness connector.
6. Check harness continuity between ignition coil terminal 8 and resistor terminal 1, resistor terminal 2 and ECM terminal 2.

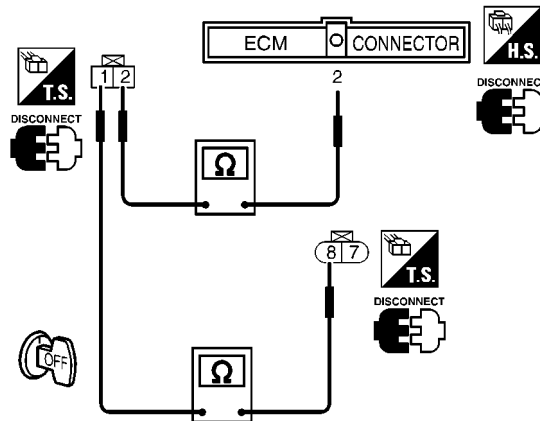


SEF179X

Continuity should exist.

7. Also check harness for short to ground and short to power.

OK or NG

OK	▶	GO TO 9.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.


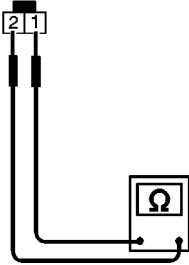
9	CHECK RESISTOR		
<p>1. Disconnect resistor harness connector. 2. Check resistance between terminals 1 and 2.</p>			
			
<p>Resistance: Approximately 2.2 kΩ [at 25°C (77°F)]</p>			
SEF240V			
OK or NG			
OK	▶	GO TO 10.	
NG	▶	Replace resistor.	

10	CHECK INTERMITTENT INCIDENT		
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.			
		▶	INSPECTION END

DTC P1336 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) (COG)

KA24DE

Component Description

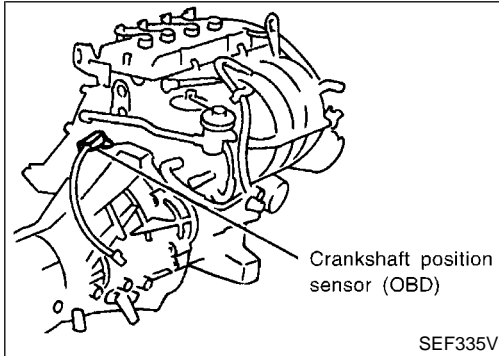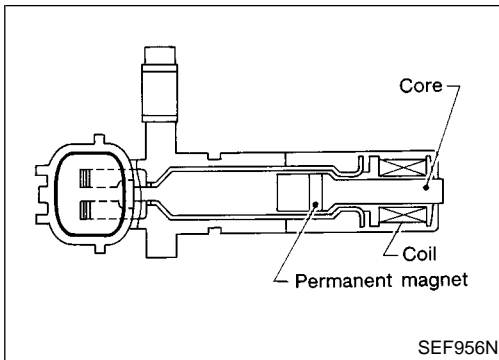

Component Description

NEEC1147

The crankshaft position sensor (OBD) is located on the transmission housing facing the gear teeth (cogs) of the flywheel or drive plate. It detects the fluctuation of the engine revolution.

The sensor consists of a permanent magnet, core and coil.

When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change.

The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

This sensor is not used to control the engine system.

It is used only for the on board diagnosis.

GI

MA

EM

LC

EC

FE



CL

MT

ECM Terminals and Reference Value

NEEC1148

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

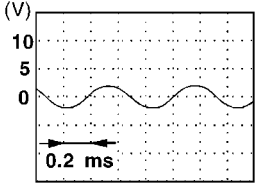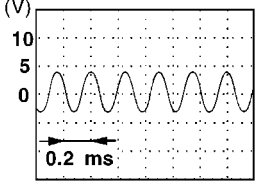TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (AC Voltage)
43	B/W	Sensors' ground	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V
53	L	Crankshaft position sensor (OBD)	[Engine is running] ● Warm-up condition ● Idle speed	Approx. 0V 
			[Engine is running] ● Engine speed is 2,000 rpm	Approx. 0V 

TF

PD

AX

SU

BR

ST

RS

BT

HA

On Board Diagnosis Logic

NEEC1149

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1336 0905	● A chipping of the flywheel or drive plate gear tooth (cog) is detected by the ECM.	● Harness or connectors ● Crankshaft position sensor (OBD) ● Drive plate/Flywheel

SC

EL

IDX

DTC P1336 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) (COG)

KA24DE

DTC Confirmation Procedure

2	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF)	XXX rpm

PEF357V

DTC Confirmation Procedure

NEEC1150

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

Ⓜ With CONSULT-II

- 1) Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and run it for at least 2 minutes at idle speed.
- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-460.

Ⓜ With GST

Follow the procedure "With CONSULT-II".


DTC P1336 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) (COG)

KA24DE
Wiring Diagram



Wiring Diagram

NEEC1151

EC-CKPS-01

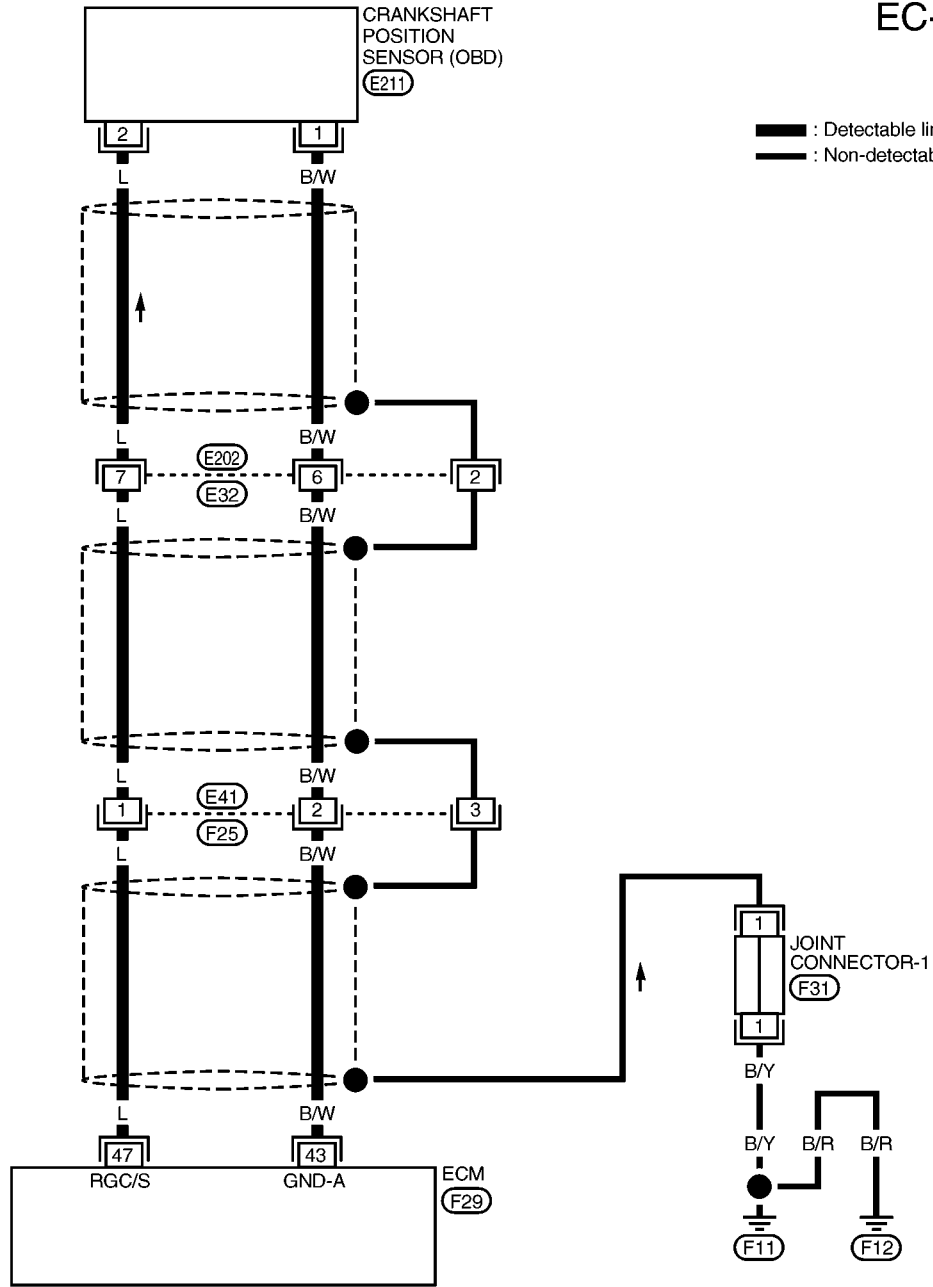

- GI
- MA
- EM
- LC
- EC**
- FE
- CL
- MT
- AT
- TF
- PD
- AX
- SU
- BR
- ST

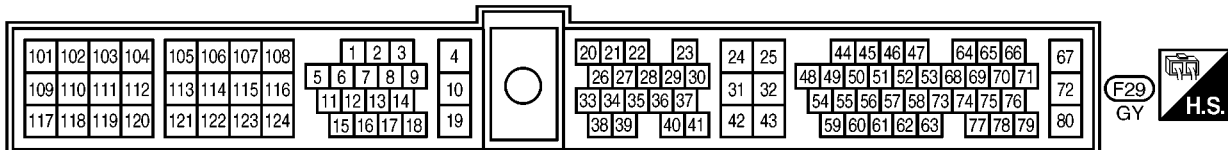

AEC993A

- RS
- BT
- HA
- SC
- EL
- IDX

DTC P1336 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) (COG)



KA24DE

Diagnostic Procedure

Diagnostic Procedure

NEEC1152

1	RETIGHTEN GROUND SCREWS
1. Turn ignition switch OFF. 2. Loosen and retighten engine ground screws.	
▶	GO TO 2.

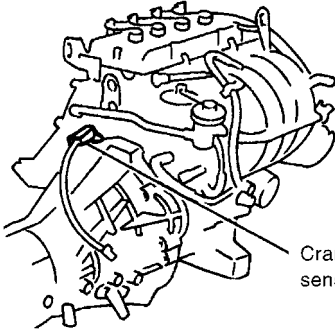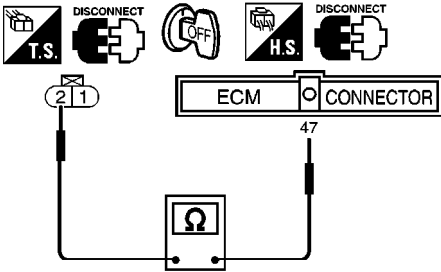2	CHECK INPUT SIGNAL CIRCUIT	
1. Disconnect crankshaft position sensor (OBD) and ECM harness connectors.		
 <p style="margin-left: 300px;">Crankshaft position sensor (OBD)</p>		
SEF335V		
2. Check continuity between ECM terminal 47 and terminal 2.		
		
SEF175V		
<p style="color: blue;">Continuity should exist.</p>		
3. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 4.
NG	▶	GO TO 3.

3	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors E202, E32 ● Harness connectors E41, F25 ● Harness for open or short between crankshaft position sensor (OBD) and ECM 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.


DTC P1336 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) (COG)

KA24DE

Diagnostic Procedure (Cont'd)

4	CHECK GROUND CIRCUIT	
<p>1. Reconnect ECM harness connectors.</p> <p>2. Check harness continuity between crankshaft position sensor (OBD) terminal 1 and engine ground. Refer to the wiring diagram.</p> <p style="color: blue; margin-left: 20px;">Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	GO TO 5.

5	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E202, E32 ● Harness connectors E41, F25 ● Harness for open or short between crankshaft position sensor (OBD) and ECM 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

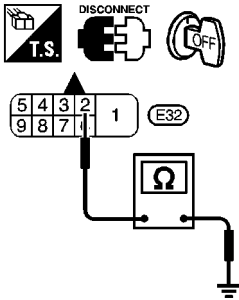6	CHECK SHIELD CIRCUIT	
<p>1. Turn ignition switch OFF.</p> <p>2. Disconnect harness connectors E32.</p> <p>3. Check harness continuity between harness connector E32 terminal 2 and ground.</p>		
		
SEF552V		
<p style="color: blue; margin-left: 20px;">Continuity should exist</p> <p>4. Also check harness for short to ground and short to power.</p> <p>5. Then reconnect harness connectors.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	GO TO 7.

7	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E41, F25 ● Joint connector-1 (Refer to "HARNESS LAYOUT", <i>EL-239</i>.) ● Harness for open or short between harness connector E32 and engine ground 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.



8	CHECK IMPROPER INSTALLATION	
Loosen and retighten the fixing bolt of the crankshaft position sensor (OBD). Then retest.		
Trouble is not fixed.		▶ GO TO 9.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1336 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) (COG)


KA24DE

Diagnostic Procedure (Cont'd)

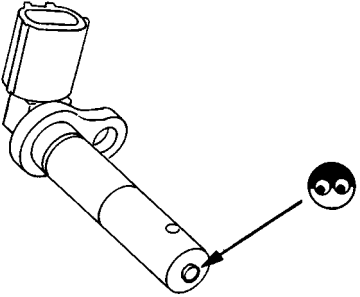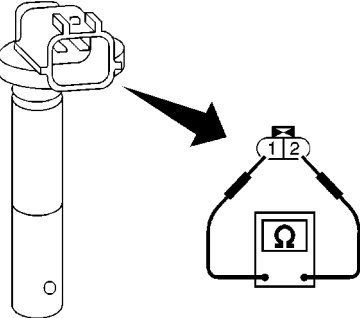9	CHECK CRANKSHAFT POSITION SENSOR (OBD)		
<ol style="list-style-type: none"> 1. Disconnect crankshaft position sensor (OBD) harness connector. 2. Loosen the fixing bolt of the sensor. 3. Remove the sensor. 4. Visually check the sensor for chipping. 			
			
SEF960N			
<ol style="list-style-type: none"> 5. Check resistance as shown in the figure. 			
			
SEF504V			
Resistance: Approximately 512 - 632Ω [at 20°C (68°F)]			
OK or NG			
OK	▶	GO TO 10.	
NG	▶	Replace crankshaft position sensor (OBD).	

10	CHECK GEAR TOOTH		
Visually check for chipping flywheel or drive plate gear tooth (cog).			
OK or NG			
OK	▶	GO TO 11.	
NG	▶	Replace the flywheel or drive plate.	

11	CHECK INTERMITTENT INCIDENT		
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.			
		▶	INSPECTION END

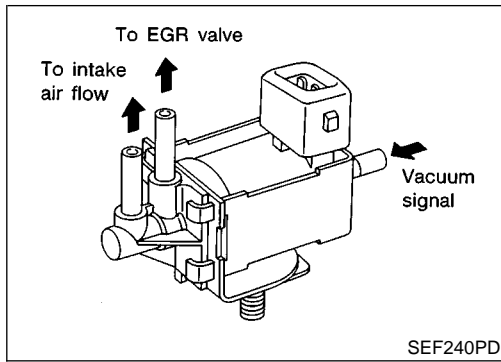

Component Description

The EGRC-solenoid valve responds to signals from the ECM.^{NEEC1153} When the ECM sends an ON (ground) signal, the coil in the solenoid valve is energized. The vacuum signal passes through the solenoid valve. The signal then reaches the EGR valve. When the ECM sends an ON signal, a plunger will then move to cut the vacuum signal from the throttle body to the EGR valve.

CONSULT-II Reference Value in Data Monitor Mode

^{NEEC1154}

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
EGRC SOL/V	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" (A/T models) ● No-load	Idle ON
		Rev engine up from idle to 3,000 rpm quickly. OFF

ECM Terminals and Reference Value

^{NEEC1155}




Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
103	G/W	EGRC-solenoid valve	[Engine is running] ● Warm-up condition ● Idle speed	0 - 1V
			[Engine is running] ● Warm-up condition ● M/T models: Lift up drive wheels and shift to 1st gear position. ● Rev engine up from 2,000 to 4,000 rpm.	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

^{NEEC1156}

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1400 1005	● The improper voltage signal is sent to ECM through EGRC-solenoid valve.	● Harness or connectors (The EGRC-solenoid valve circuit is open or shorted.) ● EGRC-solenoid valve

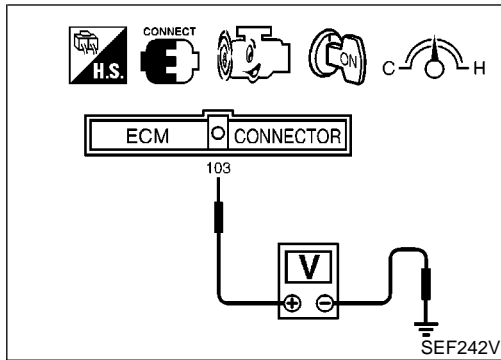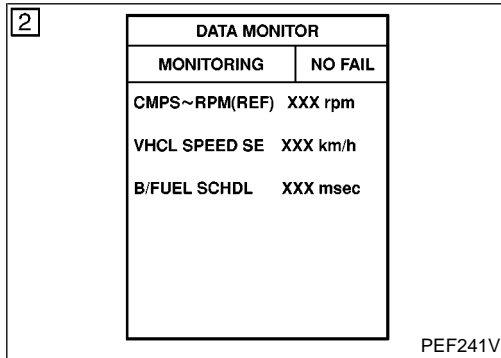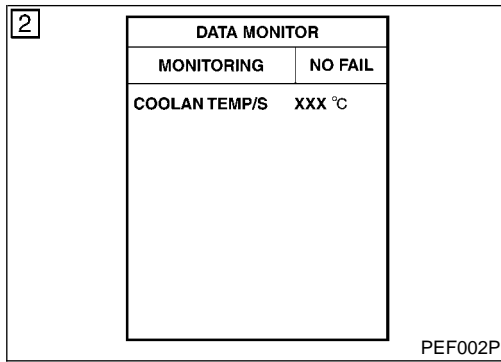

DTC Confirmation Procedure

NEEC1157

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Always perform at a temperature above -10°C (14°F).

Ⓜ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Maintain the following conditions for at least 5 consecutive seconds.

CMPS-RPM (REF): 1,000 - 3,400 rpm

B/FUEL SCHDL: 2 msec or more

VHCL SPEED SE: Suitable speed

- 4) If 1st trip DTC is detected, go to "DIAGNOSTIC PROCEDURE", EC-466.

Ⓜ With GST

- Follow the procedure with "CONSULT-II".

Overall Function Check

NEEC1158

Use this procedure to check the overall function of the EGR temperature sensor. During this check, a 1st trip DTC might not be confirmed.

ⓧ Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Check the voltage between ECM terminal 103 and ground at idle.

Voltage: 0 - 1V

- 3) Check that the voltage changes to battery voltage and returns to 0 - 1V when revving the engine from idle to 3,000 rpm quickly.
- 4) If NG, go to "DIAGNOSTIC PROCEDURE", EC-466.


DTC P1400 EGRC-SOLENOID VALVE

KA24DE
Wiring Diagram

Wiring Diagram

NEEC1159



EC-EGRC/V-01

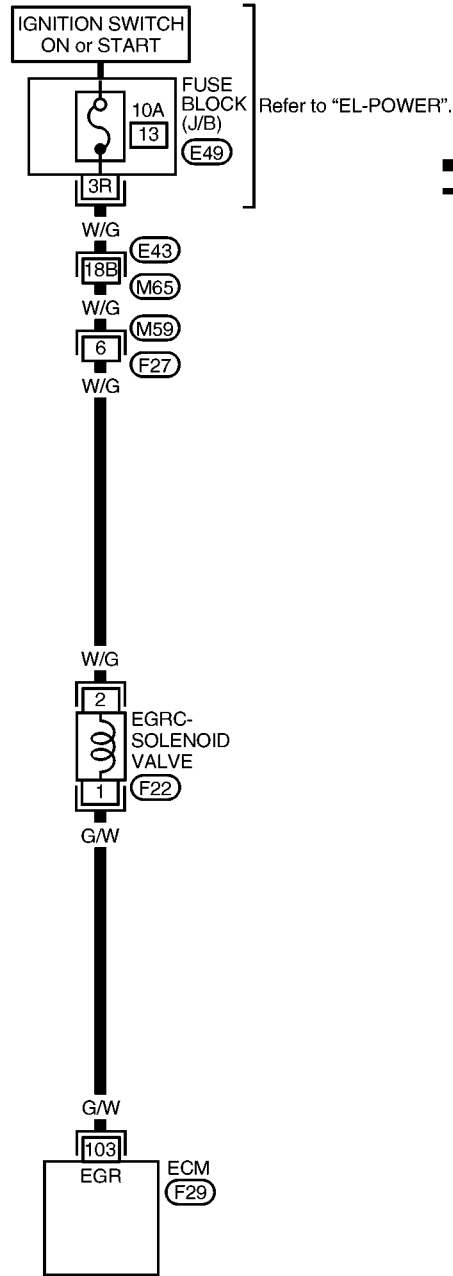

Refer to "EL-POWER".
— : Detectable line for DTC
— : Non-detectable line for DTC

- GI
- MA
- EM
- LC
- EC**
- FE
- CL
- MT
- AT
- TF
- PD
- AX
- SU
- BR
- ST

Refer to last page (Foldout page).

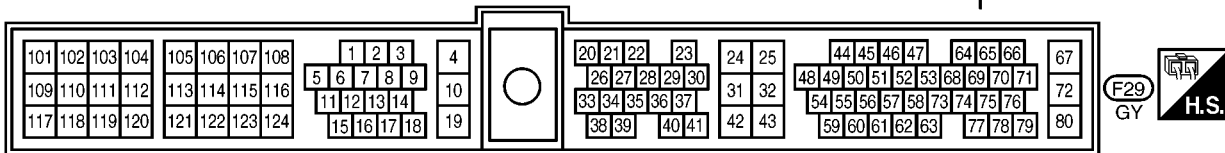



- RS
- BT
- HA
- SC
- EL
- IDX

AEC005B

Diagnostic Procedure

NEEC1160

1	CHECK EGRC-SOLENOID VALVE																								
<p> With CONSULT-II</p> <p>1. Turn ignition switch ON.</p> <p>2. Turn EGRC-solenoid valve "ON" and "OFF" in "ACTIVE TEST" mode with CONSULT-II and check operating sound.</p>																									
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <th style="text-align: left;">EGRC SOL/V</th> <th style="text-align: left;">ON</th> </tr> </thead> <tbody> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <th style="text-align: left;">CKPS~RPM(POS)</th> <th style="text-align: left;">XXX rpm</th> </tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </tbody> </table>		ACTIVE TEST		EGRC SOL/V	ON	MONITOR		CKPS~RPM(POS)	XXX rpm																
ACTIVE TEST																									
EGRC SOL/V	ON																								
MONITOR																									
CKPS~RPM(POS)	XXX rpm																								
PEF594P																									
<p> Without CONSULT-II</p> <p>1. Start engine and rev engine up to 3,000 rpm quickly.</p> <p>2. When disconnecting and reconnecting the EGRC-solenoid valve harness connector, make sure that the EGRC-solenoid valve makes operating sound. (The DTC or the 1st trip DTC for the EGRC-solenoid valve will be displayed, however, ignore it.)</p>																									
OK or NG																									
OK (With CONSULT-II) ▶	GO TO 5.																								
OK (Without CONSULT-II) ▶	GO TO 6.																								
NG ▶	GO TO 2.																								

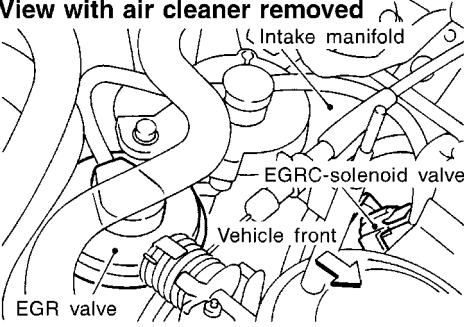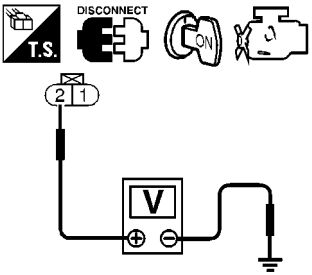2	CHECK POWER SUPPLY	<p>1. Turn ignition switch OFF. 2. Disconnect EGRC-solenoid valve harness connector.</p> <p style="text-align: center;">View with air cleaner removed</p>  <p style="text-align: right;">SEF336V</p> <p>3. Turn ignition switch ON. 4. Check voltage between terminal 2 and ground with CONSULT-II or tester.</p>  <p style="text-align: right;">SEF192V</p> <p>Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>TF</p>
OK	▶	GO TO 4.	<p>PD</p>
NG	▶	GO TO 3.	<p>AX</p>

3	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M59, F27 ● 10A fuse ● Harness for open or short between EGRC-solenoid valve and 10A fuse 	<p>SU</p> <p>BR</p>
	▶	Repair harness or connectors.	<p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>

4	CHECK OUTPUT SIGNAL CIRCUIT	
<p>1. Turn ignition switch OFF.</p> <p>2. Disconnect ECM harness connector.</p> <p>3. Check harness continuity between ECM terminal 103 and terminal 1.</p>		
SEF243V		
<p style="color: blue;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 6.
OK (Without CONSULT-II)	▶	GO TO 7.
NG	▶	GO TO 5.


5	DETECT MALFUNCTIONING PART	
Check the harness for open or short between EGRC-solenoid valve and ECM.		
	▶	Repair open circuit or short to ground or short to power in harness or connectors.

6	CHECK EGRC-SOLENOID VALVE																																
<p>Ⓟ With CONSULT-II Check air passage continuity. Perform "EGRC SOLENOID VALVE" in "ACTIVE TEST" mode.</p>																																	
	<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <th>EGRC SOL/V (EGR)</th> <th>ON CUT</th> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <th>CMPS-RPM (REF)</th> <th>XXX rpm</th> </tr> </thead> <tbody> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </tbody> </table>	ACTIVE TEST		EGRC SOL/V (EGR)	ON CUT	MONITOR		CMPS-RPM (REF)	XXX rpm															<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th>Condition EGRC SOLENOID VALVE</th> <th>Air passage continuity between A and B</th> <th>Air passage continuity between A and C</th> </tr> </thead> <tbody> <tr> <td>ON</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>OFF</td> <td>No</td> <td>Yes</td> </tr> </tbody> </table>	Condition EGRC SOLENOID VALVE	Air passage continuity between A and B	Air passage continuity between A and C	ON	Yes	No	OFF	No	Yes
ACTIVE TEST																																	
EGRC SOL/V (EGR)	ON CUT																																
MONITOR																																	
CMPS-RPM (REF)	XXX rpm																																
Condition EGRC SOLENOID VALVE	Air passage continuity between A and B	Air passage continuity between A and C																															
ON	Yes	No																															
OFF	No	Yes																															
SEF169X																																	
OK or NG																																	
OK	▶	GO TO 8.																															
NG	▶	Replace EGRC-solenoid valve.																															

DTC P1400 EGRC-SOLENOID VALVE

KA24DE


Diagnostic Procedure (Cont'd)

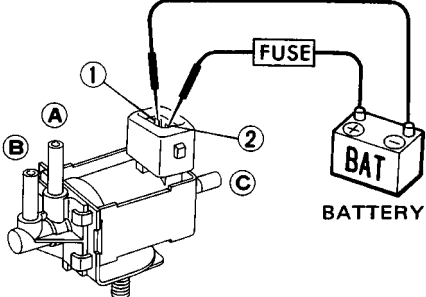7	CHECK EGRC-SOLENOID VALVE									
<p> Without CONSULT-II Check air passage continuity shown in the figure.</p>										
										
AEC919										
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="padding: 5px;">Condition</th> <th style="padding: 5px;">Air passage continuity between A and B</th> <th style="padding: 5px;">Air passage continuity between A and C</th> </tr> </thead> <tbody> <tr> <td style="padding: 5px;">12V direct current supply between terminals 1 and 2</td> <td style="text-align: center; padding: 5px;">Yes</td> <td style="text-align: center; padding: 5px;">No</td> </tr> <tr> <td style="padding: 5px;">No supply</td> <td style="text-align: center; padding: 5px;">No</td> <td style="text-align: center; padding: 5px;">Yes</td> </tr> </tbody> </table>		Condition	Air passage continuity between A and B	Air passage continuity between A and C	12V direct current supply between terminals 1 and 2	Yes	No	No supply	No	Yes
Condition	Air passage continuity between A and B	Air passage continuity between A and C								
12V direct current supply between terminals 1 and 2	Yes	No								
No supply	No	Yes								
MTBL0283										
<p>If NG or operation takes more than 1 second, replace solenoid valve.</p> <p style="text-align: center;">OK or NG</p>										
OK	▶ GO TO 8.									
NG	▶ Replace EGRC-solenoid valve.									

8	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
▶	INSPECTION END

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Component Description

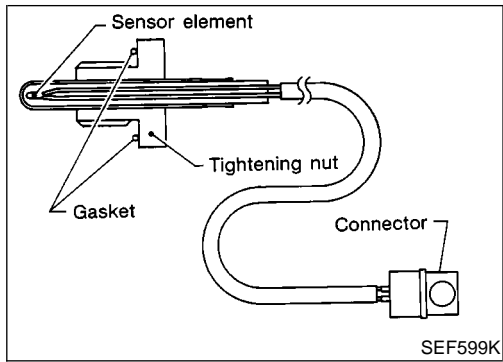

Component Description

NEEC1161

The EGR temperature sensor detects temperature changes in the EGR passageway. When the EGR valve opens, hot exhaust gases flow, and the temperature in the passageway changes. The EGR temperature sensor is a thermistor that modifies a voltage signal sent from the ECM. This modified signal then returns to the ECM as an input signal. As the temperature increases, EGR temperature sensor resistance decreases. This sensor is not used to control the engine system.

It is used only for the on board diagnosis.


<Reference data>

EGR temperature °C (°F)	Voltage* V	Resistance MΩ
0 (32)	4.81	7.9 - 9.7
50 (122)	2.82	0.57 - 0.70
100 (212)	0.8	0.08 - 0.10

*: These data are reference values and are measured between ECM terminal 63 (EGR temperature sensor) and ECM terminal 32 (ECM ground).

When EGR system is operating.

Voltage: 0 - 1.5V

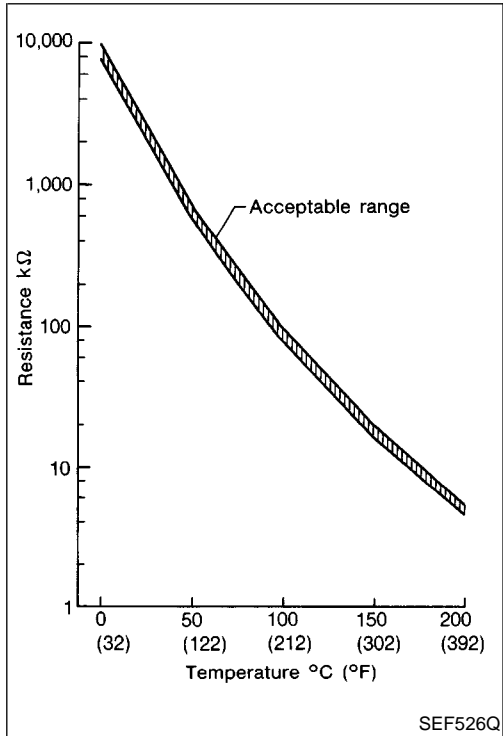

On Board Diagnosis Logic

NEEC1162

DTC No.	Malfunction is detected when ...		Check Items (Possible Cause)
P1401 0305	A)	An excessively low voltage from the EGR temperature sensor is sent to ECM even when engine coolant temperature is low.	<ul style="list-style-type: none"> ● Harness or connectors (The EGR temperature sensor circuit is shorted.) ● EGR temperature sensor ● Malfunction of EGR function, EGRC-BPT valve or EGRC-solenoid valve
	B)	An excessively high voltage from the EGR temperature sensor is sent to ECM even when engine coolant temperature is high.	<ul style="list-style-type: none"> ● Harness or connectors (The EGR temperature sensor circuit is open.) ● EGR temperature sensor ● Malfunction of EGR function, EGRC-BPT valve or EGRC-solenoid valve

4

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
COOLAN TEMP/S	XXX °C

PEF779U

DTC Confirmation Procedure

NEEC1163

Perform "PROCEDURE FOR MALFUNCTION A" first. If 1st trip DTC cannot be confirmed, perform "PROCEDURE FOR MALFUNCTION B".

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

PROCEDURE FOR MALFUNCTION A

NEEC1163S01

With CONSULT-II


- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Verify that engine coolant temperature is less than 50°C (122°F).

If the engine coolant temperature is above the range, cool the engine down.

- 4) Start engine and let it idle for at least 8 seconds.
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-474.

With GST

- Follow the procedure "With CONSULT-II".

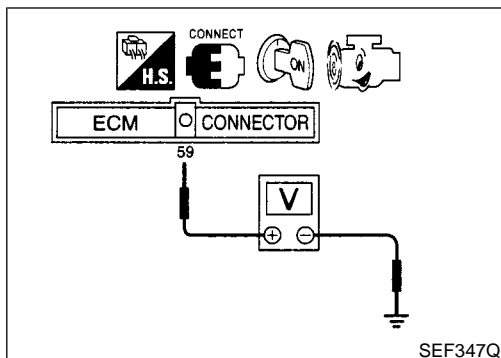

9

DATA MONITOR	
MONITORING	NO FAIL
CMPS~RPM(REF)	XXX rpm
COOLAN TEMP/S	XXX °C
VHCL SPEED SEN	XXX km/h
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF724W

PROCEDURE FOR MALFUNCTION B

NEEC1163S02

CAUTION:

Always drive vehicle at a safe speed.

TESTING CONDITION:

Always perform the test at a temperature above 5°C (41°F).



With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Run engine at idle for at least 2 minutes.
- 3) Confirm that EGR valve is not lifting.
If the result is NG, perform trouble diagnosis for DTC P1402. Refer to EC-476.
- 4) Select "DATA MONITOR" mode with CONSULT-II.
- 5) Read "EGR TEMP SEN" at about 1,500 rpm while holding the EGR valve in full open position by hand.
Voltage should decrease to less than 1.0V.
If the result is NG, go to "Diagnostic Procedure", EC-474.
If the result is OK, go to following step.
- 6) Turn ignition switch OFF and wait at least 5 seconds.
- 7) Turn ignition switch ON.
- 8) Check the output voltage of "THRTL POS SEN" (at closed throttle position) and note it.
- 9) Start engine.

10) Maintain the following conditions for at least 5 consecutive seconds.

CMPS-RPM (REF)	2,000 - 2,600 rpm
VHCL SPEED SE	10 km/h (6 MPH) or more
B/FUEL SCHDL	2.5 - 3.5 msec
THRTL POS SEN	(X + 0.23) – (X + 0.74) V X = Voltage value measured at step 7
Selector lever	Suitable position

11) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-474.

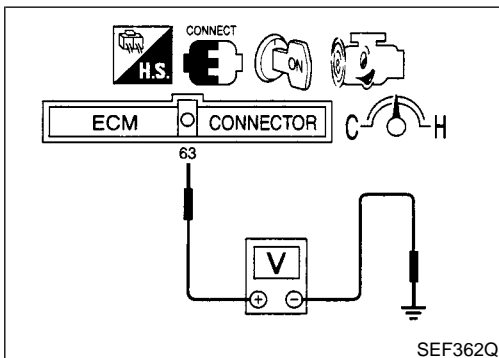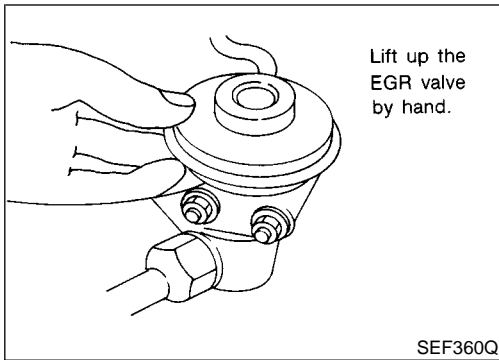

Overall Function Check

Use this procedure to check the overall function of the EGR temperature sensor. During this check, a 1st trip DTC might not be confirmed.

PROCEDURE FOR MALFUNCTION B

⊗ Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Run engine at idle for at least 2 minutes.
- 3) Confirm that EGR valve is not lifting. If NG, perform trouble diagnosis for DTC P1402. Refer to EC-477.
- 4) Check voltage between ECM terminal 63 (EGR temperature sensor signal) and ground at about 1,500 rpm with EGR valve lifted up to the full position by hand.
Voltage should decrease to less than 1.0V.
- 5) If NG, go to “Diagnostic Procedure”, EC-474.
If OK, perform trouble diagnoses for DTC P0400 and P1400. Refer to EC-327, 463.

DTC P1401 EGR TEMPERATURE SENSOR


KA24DE

Wiring Diagram

Wiring Diagram

NEEC1165

EC-EGR/TS-01

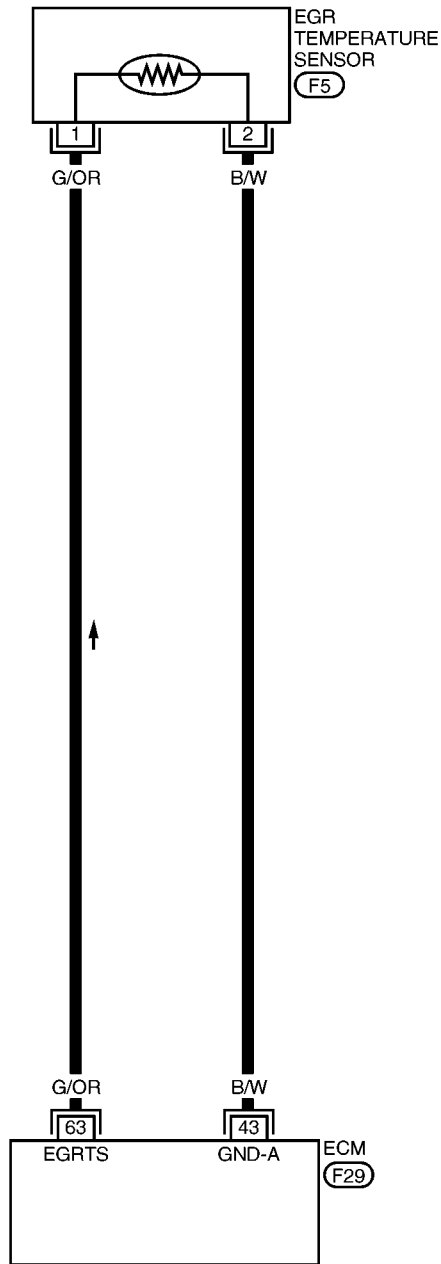

: Detectable line for DTC
 : Non-detectable line for DTC

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS



BT

HA

SC

EL



IDX

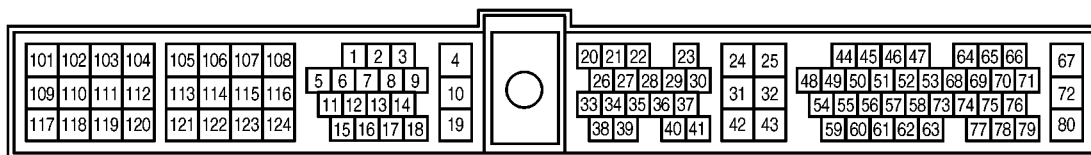

AEC006B


Diagnostic Procedure

NEEC1166

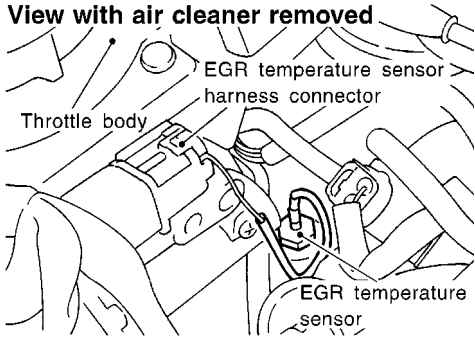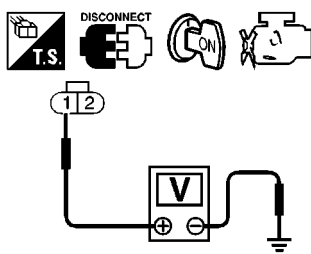1	CHECK POWER SUPPLY		
<p>1. Turn ignition switch OFF. 2. Disconnect EGR temperature sensor harness connector.</p> <div style="text-align: center;"> <p>View with air cleaner removed</p>  <p>Throttle body EGR temperature sensor harness connector EGR temperature sensor</p> </div> <p>3. Turn ignition switch ON. 4. Check voltage between terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p>DISCONNECT T.S. ON</p> </div> <p style="color: blue;">Voltage: Approximately 5V</p> <p style="text-align: center;">OK or NG</p>			
OK		▶	GO TO 2.
NG		▶	Repair harness or connectors.

SEF345V

SEF263W

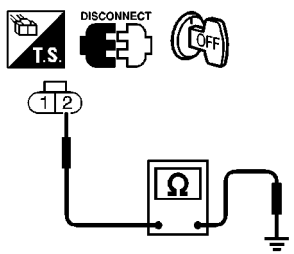2	CHECK GROUND CIRCUIT		
<p>1. Turn ignition switch OFF. 2. Check harness continuity between EGR temperature sensor terminal 2 and engine ground. Refer to the wiring diagram.</p> <div style="text-align: center;">  <p>DISCONNECT T.S. OFF</p> </div> <p style="color: blue;">Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>			
OK		▶	GO TO 4.
NG		▶	GO TO 3.

SEF264W

3	DETECT MALFUNCTIONING PART		
<p>Check the harness for open or short between EGR temperature sensor and ECM.</p>			
		▶	Repair open circuit or short to ground or short to power in harness or connector.

DTC P1401 EGR TEMPERATURE SENSOR


KA24DE

Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

4 CHECK EGR TEMPERATURE SENSOR

Check resistance change and resistance value.

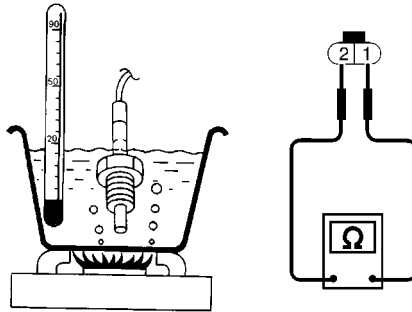


SEF643Q

<Reference data>

EGR temperature °C (°F)	Voltage V	Resistance MΩ
0 (32)	4.81	7.9 - 9.7
50 (122)	2.82	0.57 - 0.70
100 (212)	0.8	0.08 - 0.10

MTBL0294

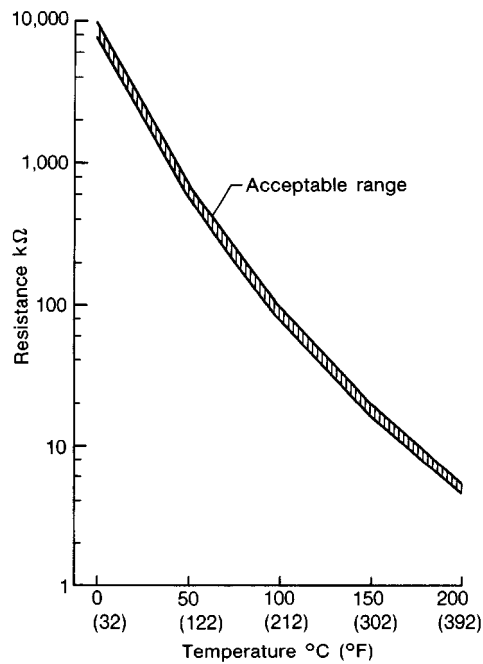

SEF526Q

OK or NG

OK	▶	GO TO 5.
NG	▶	Replace EGR temperature sensor.

5 CHECK INTERMITTENT INCIDENT

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.

▶ **INSPECTION END**

Description SYSTEM DESCRIPTION



NEEC1167

NEEC1167S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	EGR control	EGRC-solenoid valve
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		

This system cuts and controls vacuum applied to the EGR valve to suit engine operating conditions. This cut-and-control operation is accomplished through the ECM and the EGRC-solenoid valve. When the ECM detects any of the following conditions, current through the solenoid valve is cut. This causes the vacuum to be cut. The EGR valve remains closed.

- Low engine coolant temperature
- Engine starting
- High-speed engine operation
- Engine idling
- Excessively high engine coolant temperature
- Mass air flow sensor malfunction

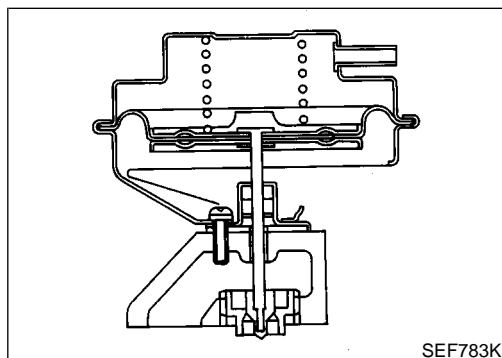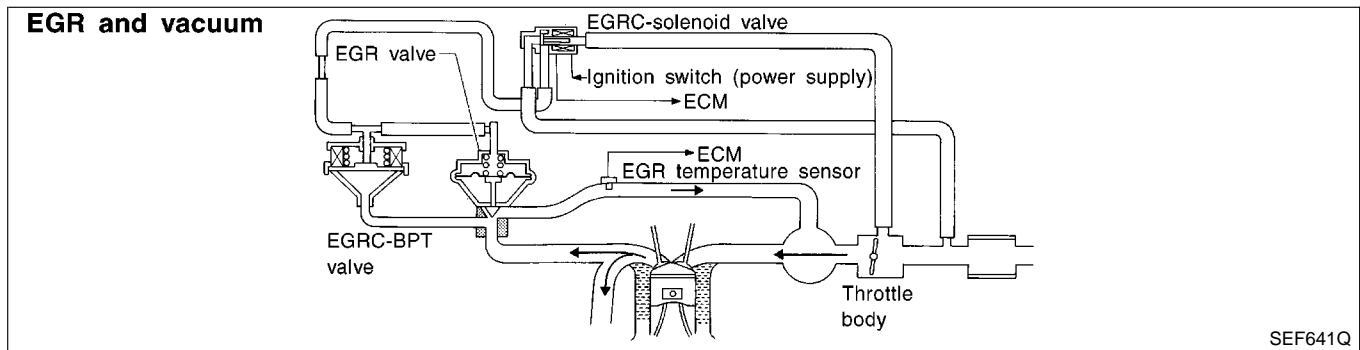

COMPONENT DESCRIPTION

NEEC1167S02

Exhaust Gas Recirculation (EGR) Valve


NEEC1167S0201

The EGR valve controls the amount of exhaust gas routed to the intake manifold. Vacuum is applied to the EGR valve in response to throttle valve opening. The vacuum controls the movement of a taper valve connected to the vacuum diaphragm in the EGR valve.

DTC P1402 EGR FUNCTION (OPEN)

KA24DE

Description (Cont'd)

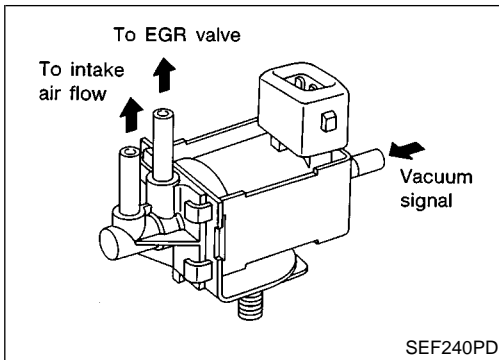


EGRC-solenoid Valve

NEEC1167S0202

The EGRC-solenoid valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the coil in the solenoid valve is energized. The vacuum signal passes through the solenoid valve. A plunger will then move to cut the vacuum signal (from the throttle body to the EGR valve).

When the ECM sends an OFF signal, a plunger will then move to cut the vacuum signal from the throttle body to the EGR valve.

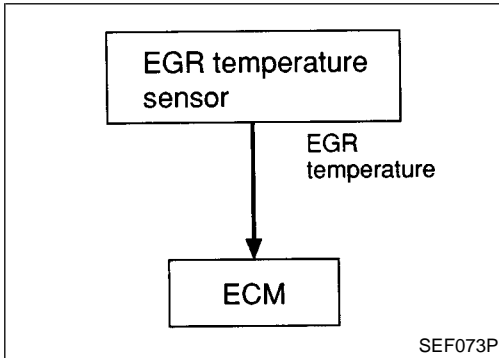

On Board Diagnosis Logic


NEEC1168

If EGR temperature sensor detects EGR flow under the condition that does not call for EGR, a high-flow malfunction is diagnosed.

NOTE:

Diagnosis for this DTC will occur when engine coolant temperature is approx. 50 to 60°C (122 to 140°F). Therefore, it will be better to turn ignition switch "ON" (Start engine) at the engine coolant temperature below 40°C (104°F) when starting DTC confirmation procedure.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1402 0514	<ul style="list-style-type: none"> EGR flow is detected under conditions that do not call for EGR. 	<ul style="list-style-type: none"> EGRC-solenoid valve EGR valve leaking or stuck open EGR temperature sensor EGRC-BPT valve

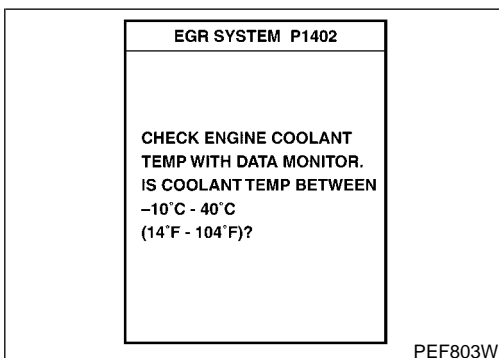

DTC Confirmation Procedure

NEEC1169

NOTE:


If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Engine coolant temperature and EGR temperature must be verified in "DATA MONITOR" mode with CONSULT-II before starting DTC WORK SUPPORT test. If it is out of range below, the test cannot be conducted.
COOLAN TEMP/S: -10 to 40°C (14 to 104°F)*
EGR TEMP SEN: Less than 4.8V

If the values are out of the ranges indicated above, park the vehicle in a cool place and allow the engine temperature to stabilize. Do not attempt to reduce the engine coolant or EGR temperature with a fan or means other than ambient air. Doing so may produce an inaccurate diagnostic result.

*: Although CONSULT-II screen displays "-10 to 40°C (14 to 104°F)" as a range of engine coolant temperature, ignore it.

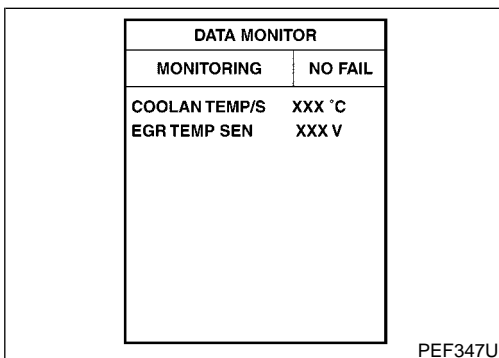

DTC P1402 EGR FUNCTION (OPEN)

KA24DE

DTC Confirmation Procedure (Cont'd)

4

EGR SYSTEM P1402	
OUT OF CONDITION	
MONITOR	
CMPS~RPM(REF)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF245V

4


EGR SYSTEM P1402	
TESTING	
MONITOR	
CMPS~RPM(REF)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF246V

4

EGR SYSTEM P1402	
COMPLETED	

PEF897U

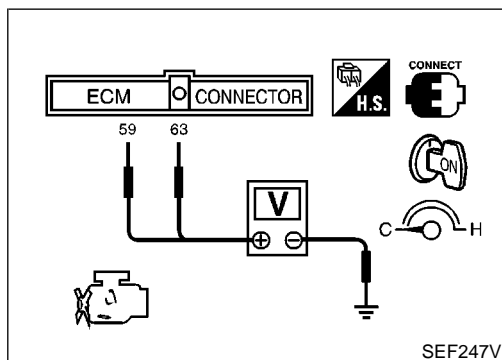

With CONSULT-II

- 1) Turn ignition switch OFF and wait at least 5 seconds, then turn ignition switch ON.
- 2) Select "EGR SYSTEM P1402" of "EGR SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 3) Touch "START". Follow instruction of CONSULT-II.
- 4) Start engine and let it idle until "TESTING" on CONSULT-II screen is turned to "COMPLETED". (It will take 60 seconds or more.)

If "TESTING" is not displayed after 5 minutes, turn ignition "OFF" and cool the engine coolant temperature to the range of -10 to 40°C (14 to 104°F). Retry from step 1.

- 5) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-480.

With GST

- 1) Turn ignition switch ON and select "MODE 1" with GST.
- 2) Check that engine coolant temperature is within the range of -10 to 35°C (14 to 95°F).
- 3) Check that voltage between ECM terminal 63 (EGR temperature sensor signal) and ground is less than 4.8V.
- 4) Start engine and let it idle for at least 60 seconds.
- 5) Stop engine.
- 6) Perform from step 1 to 4.
- 7) Select "MODE 3" with GST.
- 8) If DTC is detected, go to "Diagnostic Procedure", EC-480.

No Tools

- 1) Turn ignition switch ON.
- 2) Check the following voltages.

ECM terminal 59 (Engine coolant temperature sensor signal) and ground: 2.7 - 4.4V

ECM terminal 63 (EGR temperature sensor signal) and ground: Less than 4.8V

- 3) Start engine and let it idle for at least 60 seconds.
- 4) Turn ignition switch OFF, wait at least 5 seconds and then turn ON.
- 5) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 6) If DTC is detected, go to "Diagnostic Procedure", EC-480.

When using GST, "DTC Confirmation Procedure" should be performed twice as much as when using CONSULT-II or ECM (Diagnostic Test Mode II) because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II or ECM (Diagnostic Test Mode II) is recommended.

DTC P1402 EGR FUNCTION (OPEN)


KA24DE

Wiring Diagram




Wiring Diagram

NEEC1170

EC-EGRC1-01

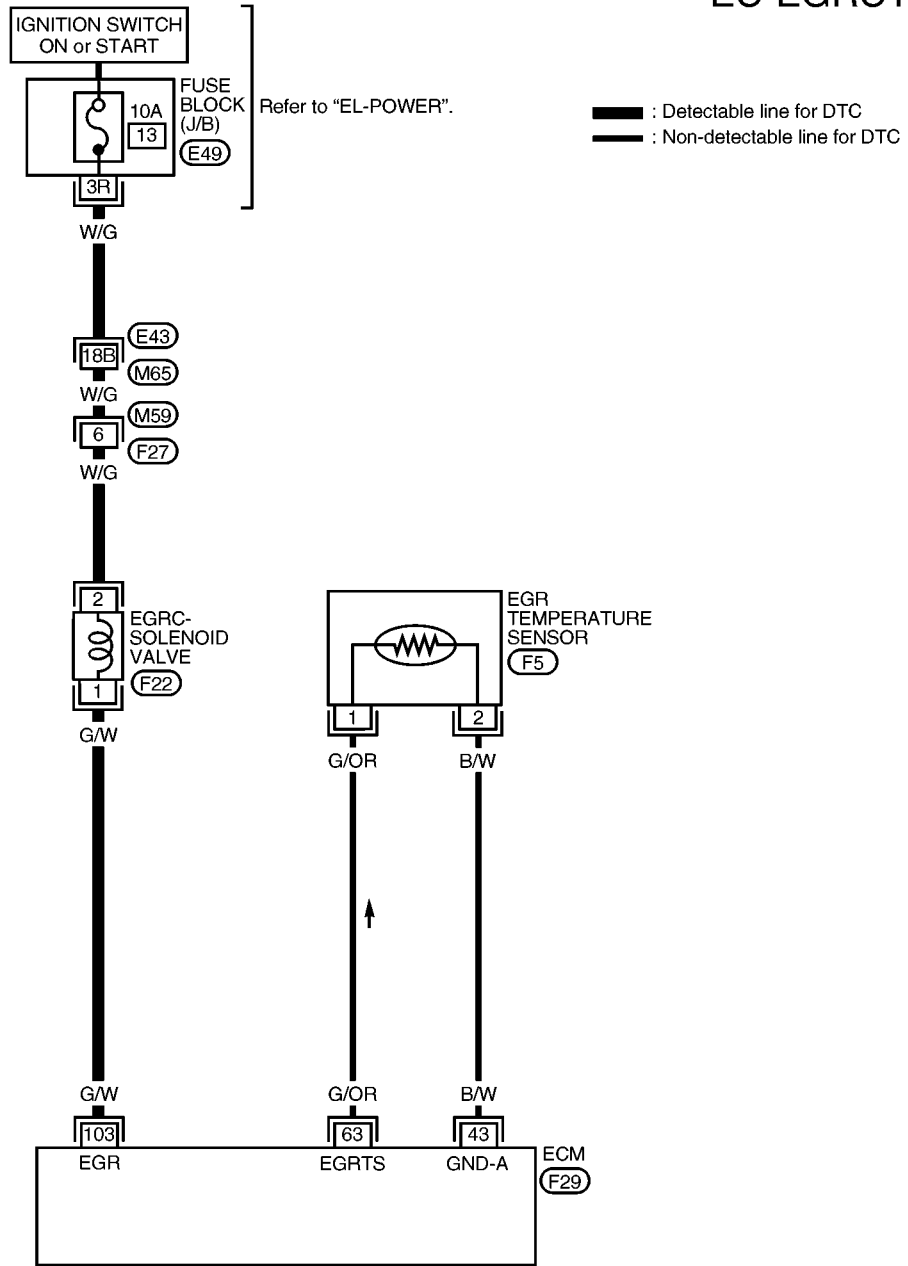


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST



Refer to the following.
 (M65), (E43) - SUPER
 MULTIPLE JUNCTION (SMJ)

RS
BT
HA

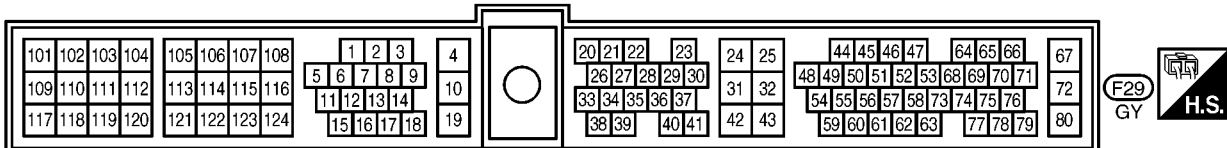


SC
EL

AEC995A

IDX

Diagnostic Procedure

NEEC1171

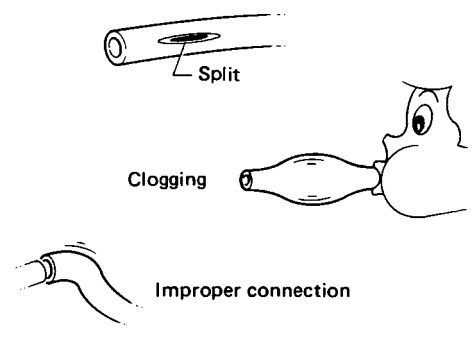1	CHECK VACUUM HOSE	
<p>Check vacuum hose for clogging, cracks or improper connection. Refer to "Vacuum Hose Drawing", EC-27.</p> <div style="text-align: center;">  <p style="margin-left: 100px;">Split</p> <p style="margin-left: 100px;">Clogging</p> <p style="margin-left: 100px;">Improper connection</p> </div> <p style="text-align: right;">SEF109L</p> <p style="text-align: center;">OK or NG</p>		
	OK (With CONSULT-II) ▶	GO TO 2.
	OK (Without CONSULT-II) ▶	GO TO 3.
	NG ▶	Repair or replace vacuum hose.

2	CHECK EGRC-SOLENOID VALVE CIRCUIT																							
<p>Ⓜ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch ON. 2. Turn EGRC-solenoid valve "ON" and "OFF" in "ACTIVE TEST" mode with CONSULT-II and check operating sound. <div style="text-align: center; margin: 10px 0;"> <table border="1" style="border-collapse: collapse;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <th>EGRC SOL/V</th> <th>ON</th> </tr> <tr> <th>(EGR)</th> <th>FLOW</th> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <th>CMPS-RPM(REF)</th> <th>XXX rpm</th> </tr> </thead> <tbody> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </tbody> </table> </div> <p style="text-align: right;">PEF788U</p> <p>Clicking noise should be heard.</p> <p style="text-align: center;">OK or NG</p>			ACTIVE TEST		EGRC SOL/V	ON	(EGR)	FLOW	MONITOR		CMPS-RPM(REF)	XXX rpm												
ACTIVE TEST																								
EGRC SOL/V	ON																							
(EGR)	FLOW																							
MONITOR																								
CMPS-RPM(REF)	XXX rpm																							
	OK ▶	GO TO 5.																						
	NG ▶	GO TO 4.																						

3	CHECK EGRC-SOLENOID VALVE CIRCUIT	
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect ECM harness connector. 3. Turn ignition switch ON. 4. Check operating sound of the solenoid valve when disconnecting and reconnecting EGRC-solenoid valve harness connector. (The DTC or the 1st trip DTC for the EGRC-solenoid valve will be displayed, however, ignore it.) <p style="text-align: center;">OK or NG</p>		
	OK ▶	GO TO 6.
	NG ▶	GO TO 4.


DTC P1402 EGR FUNCTION (OPEN)

KA24DE

Diagnostic Procedure (Cont'd)

4	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M59, F27 ● 10A fuse ● Harness for open or short between fuse block and EGRC-solenoid valve ● Harness for open or short between ECM and EGRC-solenoid valve <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	Repair open circuit or short to power in harness or connector.

GI
MA
EM
LC

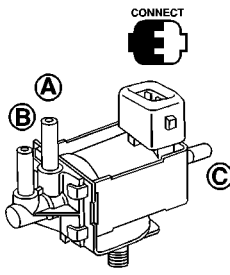5	CHECK EGRC-SOLENOID VALVE																																		
<p>Ⓟ With CONSULT-II Check air passage continuity. Perform "EGRC SOLENOID VALVE" in "ACTIVE TEST" mode.</p>																																			
<div style="display: flex; align-items: flex-start;"> <div style="flex: 1;">  </div> <div style="flex: 1;"> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <th>EGRC SOLV (EGR)</th> <th>ON CUT</th> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <th>CMPS-RPM (REF)</th> <th>XXX rpm</th> </tr> </thead> <tbody> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </tbody> </table> </div> <div style="flex: 2; margin-left: 20px;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 33%;">Condition EGRC SOLENOID VALVE</th> <th style="width: 33%;">Air passage continuity between A and B</th> <th style="width: 33%;">Air passage continuity between A and C</th> </tr> </thead> <tbody> <tr> <td>ON</td> <td style="text-align: center;">Yes</td> <td style="text-align: center;">No</td> </tr> <tr> <td>OFF</td> <td style="text-align: center;">No</td> <td style="text-align: center;">Yes</td> </tr> </tbody> </table> </div> </div>			ACTIVE TEST		EGRC SOLV (EGR)	ON CUT	MONITOR		CMPS-RPM (REF)	XXX rpm																	Condition EGRC SOLENOID VALVE	Air passage continuity between A and B	Air passage continuity between A and C	ON	Yes	No	OFF	No	Yes
ACTIVE TEST																																			
EGRC SOLV (EGR)	ON CUT																																		
MONITOR																																			
CMPS-RPM (REF)	XXX rpm																																		
Condition EGRC SOLENOID VALVE	Air passage continuity between A and B	Air passage continuity between A and C																																	
ON	Yes	No																																	
OFF	No	Yes																																	
SEF169X																																			
OK or NG																																			
OK	▶	GO TO 7.																																	
NG	▶	Replace EGRC-solenoid valve.																																	

EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


6	CHECK EGRC-SOLENOID VALVE									
<p> Without CONSULT-II Check air passage continuity shown in the figure.</p>										
AEC919										
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="padding: 5px;">Condition</th> <th style="padding: 5px;">Air passage continuity between A and B</th> <th style="padding: 5px;">Air passage continuity between A and C</th> </tr> </thead> <tbody> <tr> <td style="padding: 5px;">12V direct current supply between terminals 1 and 2</td> <td style="text-align: center; padding: 5px;">Yes</td> <td style="text-align: center; padding: 5px;">No</td> </tr> <tr> <td style="padding: 5px;">No supply</td> <td style="text-align: center; padding: 5px;">No</td> <td style="text-align: center; padding: 5px;">Yes</td> </tr> </tbody> </table>		Condition	Air passage continuity between A and B	Air passage continuity between A and C	12V direct current supply between terminals 1 and 2	Yes	No	No supply	No	Yes
Condition	Air passage continuity between A and B	Air passage continuity between A and C								
12V direct current supply between terminals 1 and 2	Yes	No								
No supply	No	Yes								
MTBL0283										
<p>If NG or operation takes more than 1 second, replace solenoid valve.</p> <p style="text-align: center;">OK or NG</p>										
OK	▶ GO TO 7.									
NG	▶ Replace EGRC-solenoid valve.									

7	CHECK EGR VALVE
<ul style="list-style-type: none"> ● Apply vacuum to EGR vacuum port with a hand vacuum pump. 	
MEF137D	
<p>EGR valve spring should lift.</p> <ul style="list-style-type: none"> ● Check for sticking. <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 8.
NG	▶ Replace EGR valve.

DTC P1402 EGR FUNCTION (OPEN)

KA24DE

Diagnostic Procedure (Cont'd)

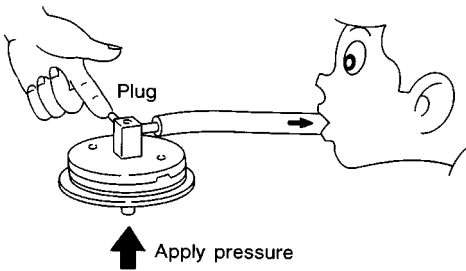8	CHECK EGRC-BPT VALVE	
<p>1. Plug one of two ports of EGRC-BPT valve.</p> <p>2. Vacuum from the other port and check for leakage while applying a pressure above 0.981 kPa (100 mmH₂O, 3.94 inH₂O) from under EGRC-BPT valve.</p>		
		
<p>3. If a leakage is noted, replace the valve.</p>		
SEF083P		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Replace EGRC-BPT valve.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX


DTC P1402 EGR FUNCTION (OPEN)

KA24DE

Diagnostic Procedure (Cont'd)

9 CHECK EGR TEMPERATURE SENSOR

Check resistance change and resistance value.

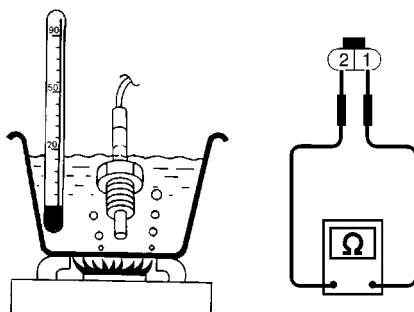


SEF643Q

<Reference data>

EGR temperature °C (°F)	Voltage V	Resistance MΩ
0 (32)	4.81	7.9 - 9.7
50 (122)	2.82	0.57 - 0.70
100 (212)	0.8	0.08 - 0.10

MTBL0294

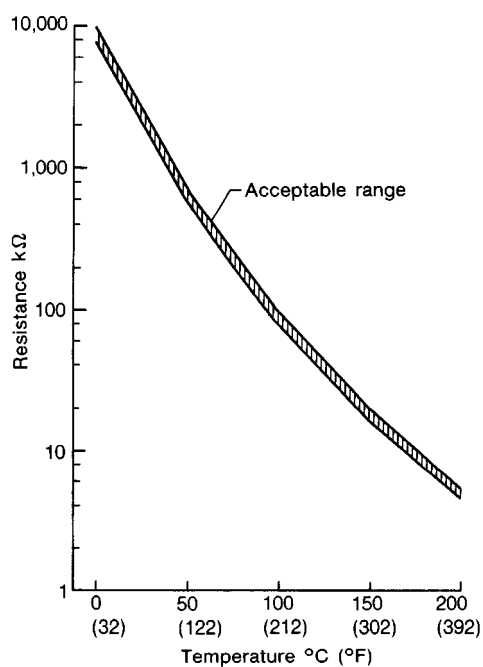

SEF526Q

OK or NG

OK	▶	GO TO 10.
NG	▶	Replace EGR temperature sensor.

10 CHECK INTERMITTENT INCIDENT

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.

▶ INSPECTION END

DTC P1440 EVAP CONTROL SYSTEM (SMALL LEAK) (POSITIVE PRESSURE)

KA24DE

On Board Diagnosis Logic

On Board Diagnosis Logic

NEEC1172


NOTE:

If DTC P1440 is displayed with P1448, perform trouble diagnosis for DTC P1448 first. Refer to EC-515.

This diagnosis detects leaks in the EVAP purge line using vapor pressure in the fuel tank.

The EVAP canister vent control valve is closed to shut the EVAP purge line. The vacuum cut valve bypass valve will then be opened to clear the line between the fuel tank and the EVAP canister purge control valve. The EVAP control system pressure sensor can now monitor the pressure inside the fuel tank.

If pressure increases, the ECM will check for leaks in the line between the vacuum cut valve and EVAP canister purge control valve.

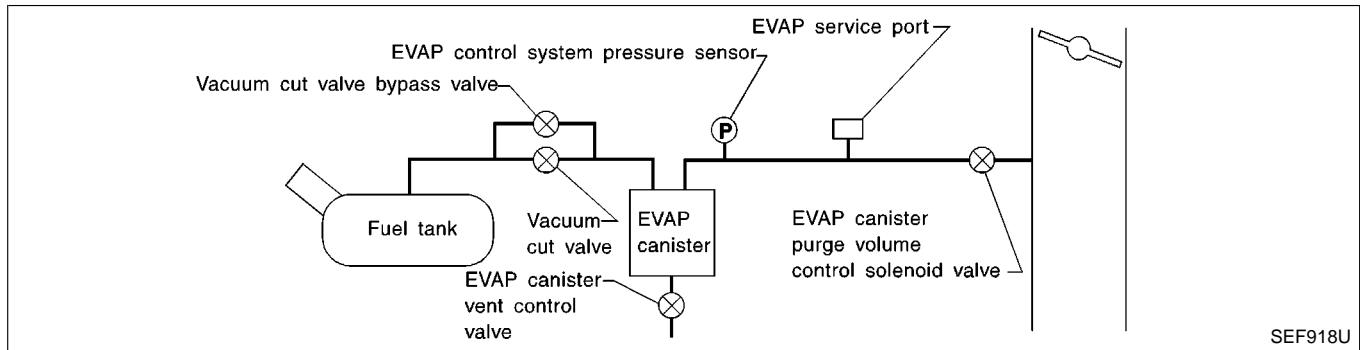

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1440 0213	<ul style="list-style-type: none"> ● EVAP control system has a leak. ● EVAP control system does not operate properly. 	<ul style="list-style-type: none"> ● Fuel filler cap remains open or fails to close. ● Incorrect fuel filler cap used. ● Incorrect fuel tank vacuum relief valve. ● Foreign matter caught in fuel filler cap. ● Leak is in line between intake manifold and EVAP canister purge volume control solenoid valve. ● Foreign matter caught in EVAP canister vent control valve. ● EVAP canister or fuel tank leaks ● EVAP purge line (pipe and rubber tube) leaks ● EVAP purge line rubber tube bent. ● Blocked or bent rubber tube to EVAP control system pressure sensor ● EVAP control system pressure sensor ● Loose or disconnected rubber tube ● EVAP canister vent control valve and the circuit ● EVAP canister purge volume control solenoid valve ● Absolute pressure sensor ● Fuel tank temperature sensor ● MAP/BARO switch solenoid valve ● Blocked or bent rubber tube to MAP/BARO switch solenoid valve ● O-ring of EVAP canister vent control valve is missing or damaged. ● Water separator ● EVAP canister is saturated with water.

CAUTION:

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine NISSAN rubber tube as a replacement.

DTC P1440 EVAP CONTROL SYSTEM (SMALL LEAK) (POSITIVE PRESSURE)

KA24DE

DTC Confirmation Procedure

DTC Confirmation Procedure

Refer to "P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)", EC-355. ^{NEEC1173}

Diagnostic Procedure

Refer to "P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)", EC-355. ^{NEEC1174}

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE


KA24DE
Description

Description SYSTEM DESCRIPTION

NEEC1175
NEEC1175S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	EVAP canister purge flow control	EVAP canister purge volume control solenoid valve
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
Throttle position switch	Closed throttle position		
Front heated oxygen sensors	Density of oxygen in exhaust gas (Mixture ratio feedback signal)		
Fuel tank temperature sensor	Fuel temperature in fuel tank		
Vehicle speed sensor	Vehicle speed		

This system controls flow rate of fuel vapor from the EVAP canister. The opening of the vapor by-pass passage in the EVAP canister purge volume control solenoid valve changes to control the flow rate. The EVAP canister purge volume control solenoid valve repeats ON/OFF operation according to the signal sent from the ECM. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. When the engine is operating, the flow rate of fuel vapor from the EVAP canister is regulated as the air flow changes.

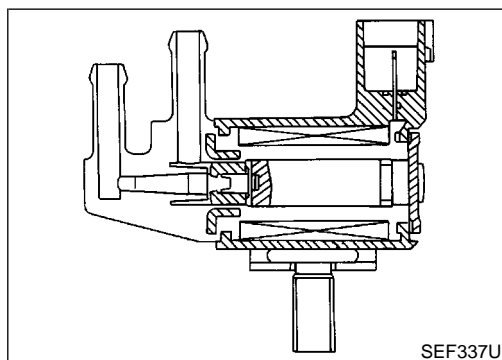

COMPONENT DESCRIPTION

The EVAP canister purge volume control solenoid valve uses a ON/OFF duty to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

CONSULT-II Reference Value in Data Monitor Mode

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
PURG VOL C/V	● Engine: After warming up ● Air conditioner switch "OFF" ● Shift lever: "N" ● No-load	Idle (Vehicle stopped)
		2,000 rpm (200 seconds after starting engine)
		0%
		—

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE



KA24DE

ECM Terminals and Reference Value

ECM Terminals and Reference Value

NEEC1177

Specification data are reference values and are measured between each terminal and 32 (ECCS ground).

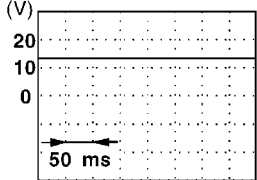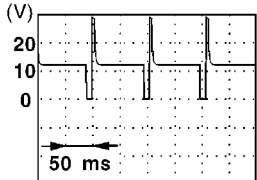TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
4	LG/R	ECCS relay (Self-shut-off)	[Engine is running] [Ignition switch "OFF"] <ul style="list-style-type: none"> ● For a few seconds after turning ignition switch "OFF" 	0 - 1V
			[Ignition switch "OFF"] <ul style="list-style-type: none"> ● A few seconds passed after turning ignition switch "OFF" 	BATTERY VOLTAGE (11 - 14V)
5	R/Y	EVAP canister purge volume control solenoid valve	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V) 
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	BATTERY VOLTAGE (11 - 14V) 
67	B/P	Power supply for ECM	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
72	B/P			
117	B/P	Current return	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NEEC1178

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1444 0214	The canister purge flow is detected during the specified driving conditions, even when EVAP canister purge volume control solenoid valve is completely closed.	<ul style="list-style-type: none"> ● EVAP control system pressure sensor ● EVAP canister purge volume control solenoid valve (The valve is stuck open.) ● EVAP canister vent control valve ● EVAP canister ● Hoses (Hoses are connected incorrectly or clogged.)

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

KA24DE

DTC Confirmation Procedure

DTC Confirmation Procedure

=NEEC1179

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

DATA MONITOR	
MONITORING	NO FAIL
CMPS~RPM(REF)	XXX rpm
COOLAN TEMP/S	XXX °C
TANK F/TMP SE	XXX °C

PEF195V

PURG VOL CN/V P1444	
OUT OF CONDITION	
MONITOR	
CMPS~RPM(REF)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF900U

PURG VOL CN/V P1444	
TESTING	
MONITOR	
CMPS~RPM(REF)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF901U

PURG VOL CN/V P1444	
COMPLETED	

PEF902U

Ⓜ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Turn ignition switch ON.
- 4) Select "DATA MONITOR" mode with CONSULT-II.
- 5) Check that TANK F/TEMP SE is 0°C (32°F) or more.
- 6) Select "PURG VOL C/V P1444" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 7) Touch "START".
- 8) Start engine and let it idle until "TESTING" on CONSULT-II changes to "COMPLETED". (It will take for at least 10 seconds.)
If "TESTING" is not displayed after 5 minutes, retry from step 2.
- 9) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-491.

Ⓜ With GST

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Start the engine and let it idle for at least 10 seconds.
- 4) Select "Mode 7" with GST.
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-491

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE






KA24DE

Wiring Diagram

Wiring Diagram

NEEC1180

EC-PGC/V-01

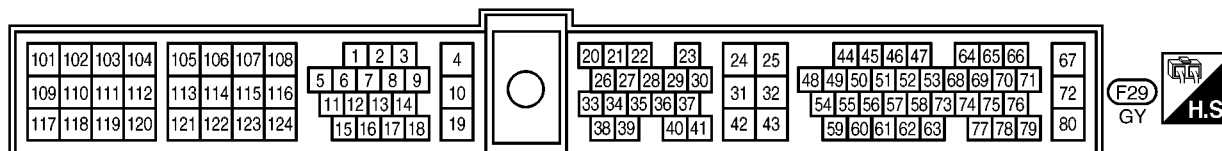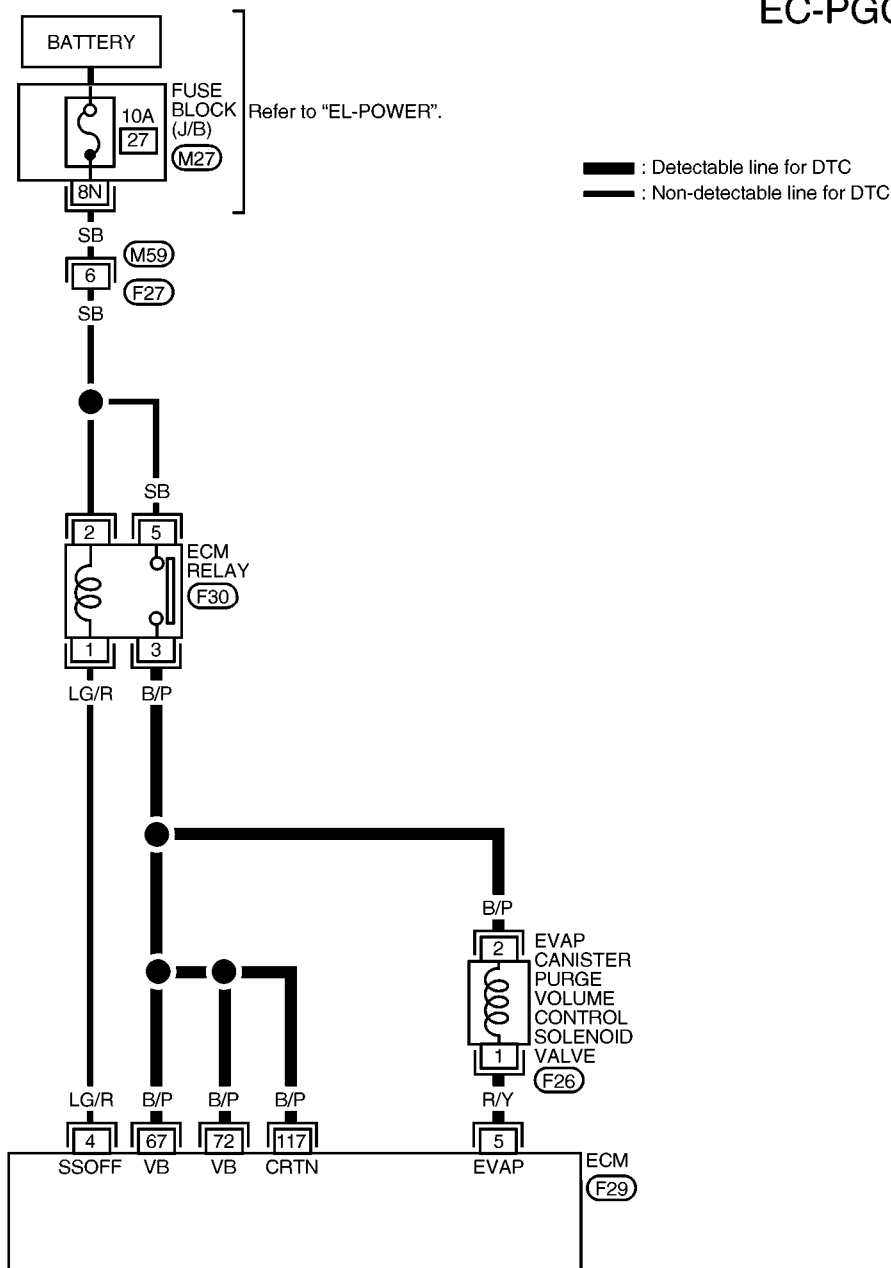

AEC996A



DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

KA24DE

Diagnostic Procedure

Diagnostic Procedure

=NEEC1181

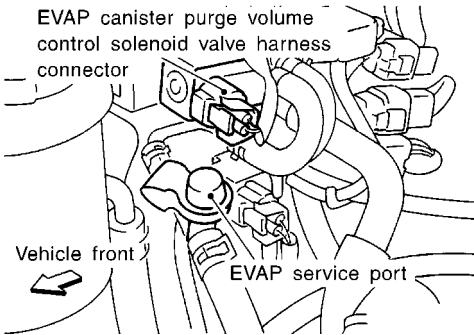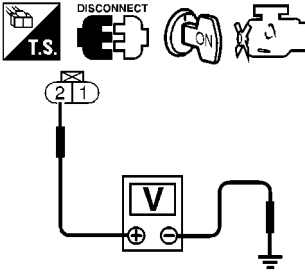1	CHECK POWER SUPPLY		
		<p>1. Turn ignition switch OFF.</p> <p>2. Disconnect EVAP canister purge volume control solenoid valve harness connector.</p> <div style="text-align: center;">  <p>EVAP canister purge volume control solenoid valve harness connector</p> <p>Vehicle front</p> <p>EVAP service port</p> </div> <p>3. Turn ignition switch ON.</p> <p>4. Check voltage between terminal 2 and engine ground with CONSULT-II or tester.</p> <p style="color: blue;">Voltage: Battery voltage</p> <div style="text-align: center;">  <p>DISCONNECT</p> <p>T.S.</p> <p>2 1</p> <p>V</p> </div> <p>OK or NG</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p style="background-color: black; color: white; text-align: center;">EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>TF</p> <p>PD</p>
	OK	▶	GO TO 3.
	NG	▶	GO TO 2.

SEF339V

SEF192V

2	DETECT MALFUNCTIONING PART		
		<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness for open or short between EVAP canister purge volume control solenoid valve and ECM relay ● Harness for open or short between EVAP canister purge volume control solenoid valve and ECM 	<p>SU</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p>
		▶	Repair harness or connectors.

IDX


DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

KA24DE

Diagnostic Procedure (Cont'd)

3 CHECK OUTPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 5 and terminal 1.
Continuity should exist.

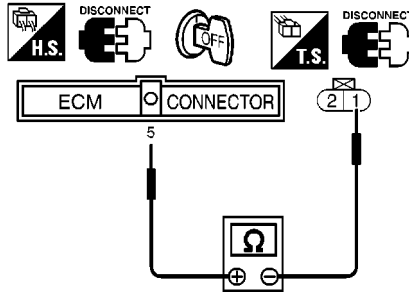

If OK, check harness for short to ground and short to power.

SEF193V

OK or NG

OK	▶	GO TO 5.
NG	▶	GO TO 4.

4 DETECT MALFUNCTIONING PART

Check the harness for open or short between EVAP canister purge volume control solenoid valve and ECM.

▶	Repair open circuit or short to ground or short to power in harness or connectors.
---	--


DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

KA24DE

Diagnostic Procedure (Cont'd)


5 CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

1. Remove EVAP control system pressure sensor with its harness connector connected.

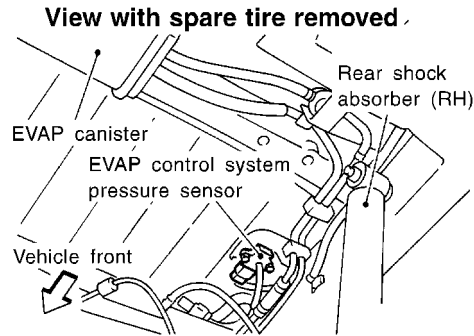

SEF341V

2. Remove hose from EVAP control system pressure sensor.
3. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.
4. Check output voltage between ECM terminal 62 and engine ground.

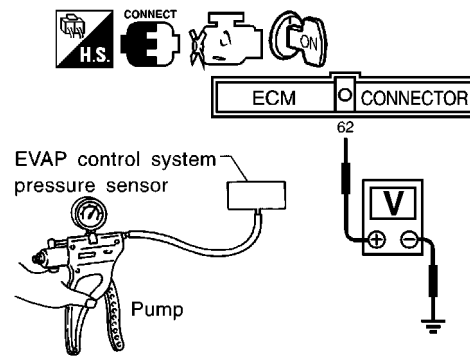


SEF198V

Pressure (Relative to atmospheric pressure)	Voltage (V)
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6

MTBL0295

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.

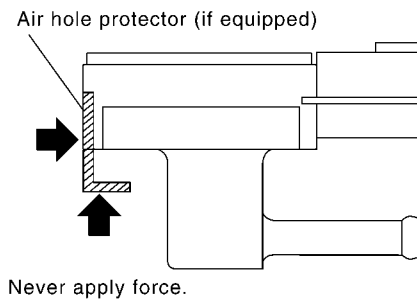

SEF799W

- Never apply force to the air hole protector of the sensor, if equipped.
- Discard any EVAP control system pressure sensor which has been dropped from height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK (With CONSULT-II)	▶	GO TO 6.
OK (Without CONSULT-II)	▶	GO TO 7.
NG	▶	Replace EVAP control system pressure sensor.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

KA24DE



Diagnostic Procedure (Cont'd)

6	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE																					
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine. 2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening. Check air passage continuity. If OK, inspection end. If NG, go to following step. 																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>PURG VOL CONT/V</td><td>XXX %</td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>CMPS~RPM(REF)</td><td>XXX rpm</td></tr> <tr><td>FR O2 MNTR</td><td>RICH</td></tr> <tr><td>A/F ALPHA</td><td>XXX %</td></tr> <tr><td>THRTL POS SEN</td><td>XXX V</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>			ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		CMPS~RPM(REF)	XXX rpm	FR O2 MNTR	RICH	A/F ALPHA	XXX %	THRTL POS SEN	XXX V						
ACTIVE TEST																						
PURG VOL CONT/V	XXX %																					
MONITOR																						
CMPS~RPM(REF)	XXX rpm																					
FR O2 MNTR	RICH																					
A/F ALPHA	XXX %																					
THRTL POS SEN	XXX V																					
<p>3. Check air passage continuity.</p>																						
PEF190V																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Condition PURG VOL CONT/V value</th> <th style="width: 50%;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">100.0%</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td style="text-align: center;">0.0%</td> <td style="text-align: center;">No</td> </tr> </tbody> </table>			Condition PURG VOL CONT/V value	Air passage continuity between A and B	100.0%	Yes	0.0%	No														
Condition PURG VOL CONT/V value	Air passage continuity between A and B																					
100.0%	Yes																					
0.0%	No																					
MTBL0302																						
OK or NG																						
OK	▶	GO TO 8.																				
NG	▶	Replace EVAP canister purge volume control solenoid valve.																				

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

KA24DE

Diagnostic Procedure (Cont'd)

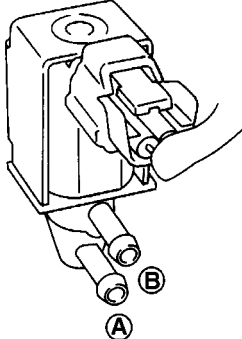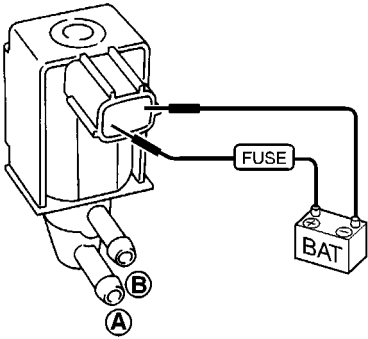7	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE							
<p> Without CONSULT-II Check air passage continuity.</p>								
								
SEF660U								
								
SEF661U								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="padding: 5px;">Condition</th> <th style="padding: 5px;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td style="padding: 5px;">12V direct current supply between terminals</td> <td style="text-align: center; padding: 5px;">Yes</td> </tr> <tr> <td style="padding: 5px;">No supply</td> <td style="text-align: center; padding: 5px;">No</td> </tr> </tbody> </table>			Condition	Air passage continuity between A and B	12V direct current supply between terminals	Yes	No supply	No
Condition	Air passage continuity between A and B							
12V direct current supply between terminals	Yes							
No supply	No							
MTBL0303								
OK or NG								
OK	▶	GO TO 9.						
NG	▶	Replace EVAP canister purge volume control solenoid valve.						

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC



EL

IDX

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

KA24DE

Diagnostic Procedure (Cont'd)

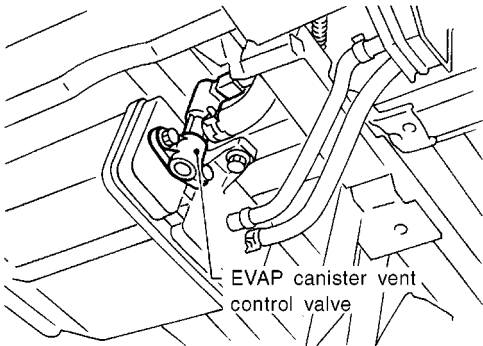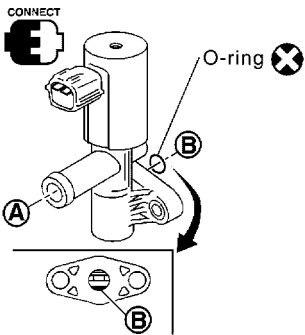8	CHECK EVAP CANISTER VENT CONTROL VALVE																												
<p>Ⓟ With CONSULT-II Check air passage continuity. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.</p>																													
		 <p>EVAP canister vent control valve</p>	SEF143S																										
	<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td>VENT CONTROL/V</td> <td>OFF</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>CMPS-RPM (REF)</td> <td>XXX rpm</td> </tr> <tr> <td>FR O2 MNTR</td> <td>RICH</td> </tr> <tr> <td>A/F ALPHA</td> <td>XXX %</td> </tr> <tr> <td>THR TL POS SEN</td> <td>XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>	ACTIVE TEST		VENT CONTROL/V	OFF	MONITOR		CMPS-RPM (REF)	XXX rpm	FR O2 MNTR	RICH	A/F ALPHA	XXX %	THR TL POS SEN	XXX V							<table border="1" style="margin: auto;"> <thead> <tr> <th>Condition VENT CONTROL/V</th> <th>Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td>ON</td> <td>No</td> </tr> <tr> <td>OFF</td> <td>Yes</td> </tr> </tbody> </table>	Condition VENT CONTROL/V	Air passage continuity between A and B	ON	No	OFF	Yes	SEF172X
ACTIVE TEST																													
VENT CONTROL/V	OFF																												
MONITOR																													
CMPS-RPM (REF)	XXX rpm																												
FR O2 MNTR	RICH																												
A/F ALPHA	XXX %																												
THR TL POS SEN	XXX V																												
Condition VENT CONTROL/V	Air passage continuity between A and B																												
ON	No																												
OFF	Yes																												
OK or NG																													
OK	▶	GO TO 10.																											
NG	▶	Replace EVAP canister vent control valve.																											

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE


KA24DE

Diagnostic Procedure (Cont'd)

9 CHECK EVAP CANISTER VENT CONTROL VALVE

⊗ Without CONSULT-II

Check air passage continuity shown in the figure.

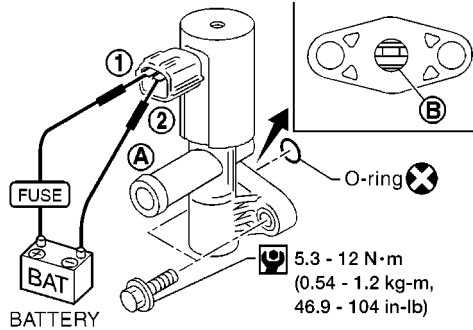

AEC783A

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	No
No supply	Yes

MTBL0297

If NG or operation takes more than 1 second, clean valve using air blower or replace as necessary.

If the portion B is rusted, replace EVAP canister vent control valve. Make sure new O-ring is installed properly.

OK or NG


OK ► GO TO 10.

NG ► Replace EVAP canister vent control valve.

10 CHECK RUBBER TUBE

Check for obstructed water separator and rubber tube connected to EVAP canister vent control valve and clean the rubber tube using air blower. Check water separator.

1. Check visually for insect nests in the water separator air inlet.
2. Check visually for cracks or flaws in the appearance.
3. Check visually for cracks or flaws in the hose.
4. Check that A and C are not clogged by blowing air into B with A, and then C plugged.

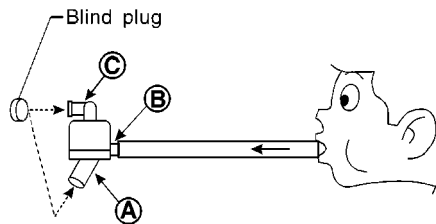

- * (A) : Bottom hole (To atmosphere)
- (B) : Emergency tube (From EVAP canister)
- (C) : Inlet port (To member)

SEF829T

5. In case of NG in items 2 - 4, replace the parts.

● **Do not disassemble water separator.**

OK or NG


OK ► GO TO 11.

NG ► Clean, repair or replace rubber tube and/or water separator.

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

KA24DE

Diagnostic Procedure (Cont'd)

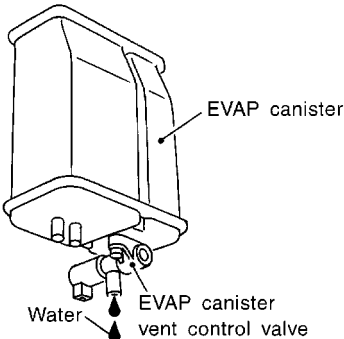11	CHECK IF EVAP CANISTER SATURATED WITH WATER	
<p>1. Remove EVAP canister with EVAP canister vent control valve attached.</p> <p>2. Check if water will drain from the EVAP canister.</p>		
		
SEF596U		
Yes or No		
Yes	▶	GO TO 12.
No	▶	GO TO 14.

12	CHECK EVAP CANISTER	
<p>Weigh the EVAP canister with the EVAP canister vent control valve attached.</p> <p>The weight should be less than 1.8 kg (4.0 lb).</p>		
OK or NG		
OK	▶	GO TO 14.
NG	▶	GO TO 13.


13	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● EVAP canister for damage ● EVAP hose between EVAP canister and water separator for clogging or poor connection 		
▶		Repair hose or replace EVAP canister.

14	CHECK INTERMITTENT INCIDENT	
<p>Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.</p>		
▶		INSPECTION END


DTC P1446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CLOSE)

KA24DE

Component Description

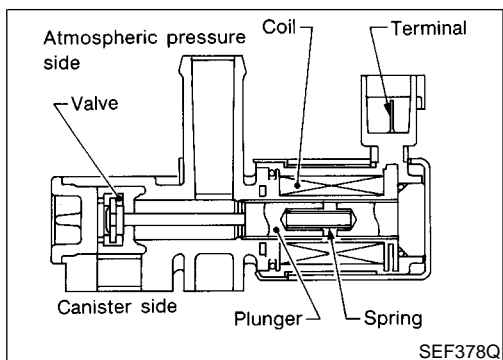

SEF378Q

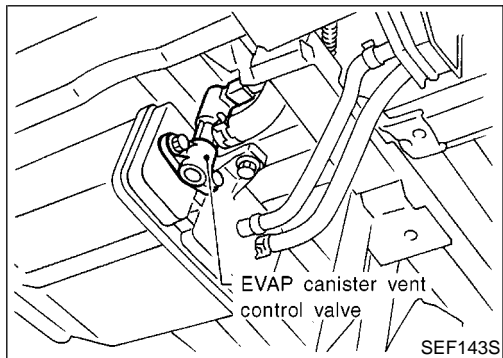

SEF143S

Component Description

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent. ^{NEEC1182}

This solenoid (the EVAP canister vent control valve) responds to signals from the ECM.

When the ECM sends an ON signal, the coil in the solenoid valve is energized.

A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System (Small Leak)" diagnosis.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

CONSULT-II Reference Value in Data Monitor Mode

NEEC1183

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
VENT CONT/V	● Ignition switch: ON	OFF

ECM Terminals and Reference Value

NEEC1184

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
108	R/G	EVAP canister vent control valve	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NEEC1185

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1446 0215	● EVAP canister vent control valve remains closed under specified driving conditions.	<ul style="list-style-type: none"> ● EVAP canister vent control valve ● EVAP control system pressure sensor and the circuit ● Blocked rubber tube to EVAP canister vent control valve ● Water separator ● EVAP canister is saturated with water.


DTC P1446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CLOSE)

KA24DE

DTC Confirmation Procedure

4	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS~RPM(REF)	XXX rpm
	COOLANT TEMP/S	XXX °C
	VHCL SPEED SEN	XXX km/h
	THRTL POS SEN	XXX V
	B/FUEL SCHDL	XXX msec

PEF724W

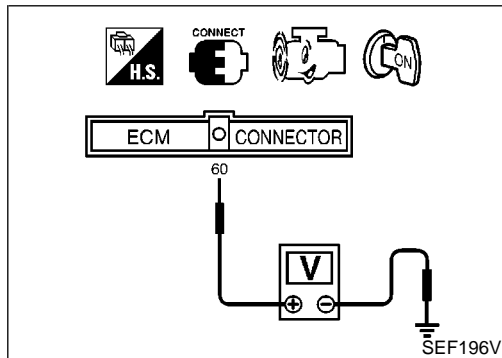

DTC Confirmation Procedure

NEEC1186

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Always perform at a temperature above 0°C (32°F).

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Turn ignition switch ON.
- 4) Select "DATA MONITOR" mode with CONSULT-II.
- 5) Check that TANK F/TMP SE is 0°C (32°F) or more.
- 6) Drive vehicle at a speed of approximately 80 km/h (50 MPH) for a maximum of 15 minutes.
- 7) If 1st trip DTC is detected, go to "DIAGNOSTIC PROCEDURE" on EC-501.

NOTE:

If a malfunction exists, NG result may be displayed quicker.

With GST

- 1) Start engine and warm it up to normal operating temperature.
- 2) Check that voltage between ECM terminal 60 (fuel tank temperature sensor signal) and ground is less than 4.2V.
- 3) Drive vehicle at a speed of approximately 80 km/h (50 MPH) for 15 minutes.
- 4) Select "MODE 7" with GST.
- 5) If 1st trip DTC is detected, go to "DIAGNOSTIC PROCEDURE" on EC-501.

No Tools

- 1) Start engine and warm it up to normal operating temperature.
- 2) Check that voltage between ECM terminal 60 (fuel tank temperature sensor signal) and ground is less than 4.2V.
- 3) Drive vehicle at a speed of approximately 80 km/h (50 MPH) for 15 minutes.
- 4) Turn ignition switch OFF and wait at least 5 seconds.
- 5) Turn ignition switch ON and perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 6) If 1st trip DTC is detected, go to "DIAGNOSTIC PROCEDURE" on next page.


DTC P1446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CLOSE)

KA24DE

Diagnostic Procedure

Diagnostic Procedure

=NEEC1187

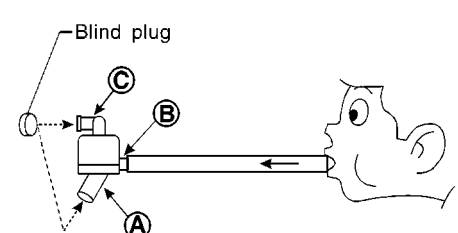1	CHECK RUBBER TUBE FOR CLOGGING	<p>Check obstructed water separator and rubber tube to EVAP canister vent control valve and clean the rubber tube using air blower.</p> <p>Check water separator.</p> <ol style="list-style-type: none"> 1. Check visually for insect nests in the water separator air inlet. 2. Check visually for cracks or flaws in the appearance. 3. Check visually for cracks or flaws in the hose. 4. Check that A and C are not clogged by blowing air into B with A, and then C plugged. <div style="text-align: center; margin: 10px 0;">  <p style="margin-left: 100px;">* (A) : Bottom hole (To atmosphere) (B) : Emergency tube (From EVAP canister) (C) : Inlet port (To member)</p> </div> <p>5. In case of NG in items 2 - 4, replace the parts.</p> <ul style="list-style-type: none"> ● Do not disassemble water separator. <p style="text-align: center; margin-top: 10px;">OK or NG</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p style="background-color: black; color: white; padding: 2px;">EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>TF</p> <p>PD</p> <p>AX</p> <p>SU</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>
	OK (With CONSULT-II) ▶	GO TO 2.	
	OK (Without CONSULT-II) ▶	GO TO 3.	
	NG ▶	Clean, repair or replace rubber tube and/or water separator.	

SEF829T

DTC P1446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CLOSE)

KA24DE


Diagnostic Procedure (Cont'd)

2 CHECK EVAP CANISTER VENT CONTROL VALVE AND O-RING


With CONSULT-II

Check air passage continuity.

Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.

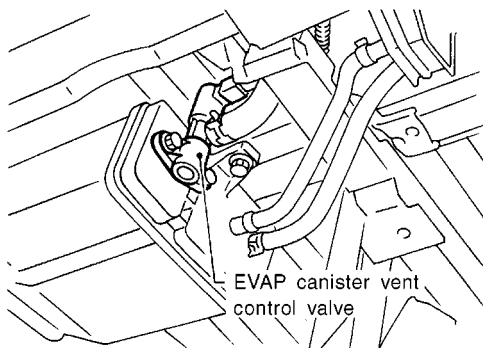

SEF143S

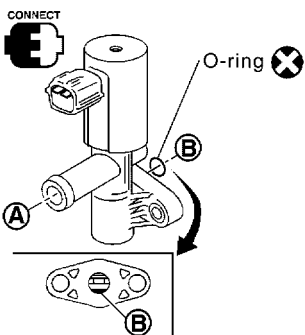

ACTIVE TEST	
VENT CONTROL/V	OFF
MONITOR	
CMPS-RPM (REF)	XXX rpm
FR O2 MNTR	RICH
A/F ALPHA	XXX %
THR TL POS SEN	XXX V

Condition VENT CONTROL/V	Air passage continuity between A and B
ON	No
OFF	Yes

SEF172X

OK or NG

OK



GO TO 4.

NG



Replace EVAP canister vent control valve and O-ring.

DTC P1446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CLOSE)

KA24DE

Diagnostic Procedure (Cont'd)

3	CHECK EVAP CANISTER VENT CONTROL VALVE AND O-RING												
<p>⊗ Without CONSULT-II Check air passage continuity shown in the figure.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">AEC783A</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Condition</th> <th style="text-align: center;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">No</td> </tr> <tr> <td style="text-align: center;">No supply</td> <td style="text-align: center;">Yes</td> </tr> </tbody> </table> <p style="text-align: right;">MTBL0297</p> <p>If NG or operation takes more than 1 second, clean valve using air blower or replace as necessary. If the portion B is rusted, replace EVAP canister vent control valve. Make sure new O-ring is installed properly.</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 4.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace EVAP canister vent control valve and O-ring.</td> </tr> </table>		Condition	Air passage continuity between A and B	12V direct current supply between terminals 1 and 2	No	No supply	Yes	OK	▶	GO TO 4.	NG	▶	Replace EVAP canister vent control valve and O-ring.
Condition	Air passage continuity between A and B												
12V direct current supply between terminals 1 and 2	No												
No supply	Yes												
OK	▶	GO TO 4.											
NG	▶	Replace EVAP canister vent control valve and O-ring.											

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX


4	CHECK IF EVAP CANISTER IS SATURATED WITH WATER						
<p>1. Remove EVAP canister with EVAP canister vent control valve attached. 2. Check if water will drain from the EVAP canister.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SEF596U</p> <p style="text-align: center;">Yes or No</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">Yes</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 5.</td> </tr> <tr> <td>No</td> <td style="text-align: center;">▶</td> <td>GO TO 7.</td> </tr> </table>		Yes	▶	GO TO 5.	No	▶	GO TO 7.
Yes	▶	GO TO 5.					
No	▶	GO TO 7.					

5	CHECK EVAP CANISTER						
<p>Weigh the EVAP canister with EVAP canister vent control valve attached. The weight should be less than 1.8 kg (4.0 lb).</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 7.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 6.</td> </tr> </table>		OK	▶	GO TO 7.	NG	▶	GO TO 6.
OK	▶	GO TO 7.					
NG	▶	GO TO 6.					

DTC P1446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CLOSE)

KA24DE

Diagnostic Procedure (Cont'd)

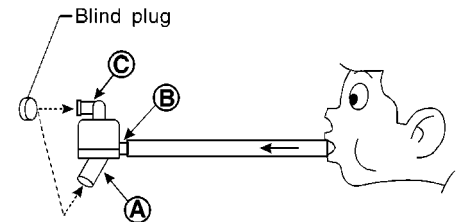6	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ol style="list-style-type: none"> 1. Visually check the EVAP canister for damage. 2. Check hose connection between EVAP canister and water separator for clogging and poor connection. 3. Check water separator. <ol style="list-style-type: none"> a. Check visually for insect nests in the water separator air inlet. b. Check visually for cracks or flaws in the appearance. c. Check visually for cracks or flaws in the hose. d. Check that A and C are not clogged by blowing air into B with A, and then C plugged. 	
 <p style="text-align: center;">* (A) : Bottom hole (To atmosphere) (B) : Emergency tube (From EVAP canister) (C) : Inlet port (To member)</p>	
<p>e. In case of NG in items 2 - 4, replace the parts.</p> <ul style="list-style-type: none"> ● Do not disassemble water separator. 	
▶	Repair hose or replace EVAP canister or water separator.

SEF829T

7	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR HOSE
<p>Check disconnection or improper connection of hose connected to EVAP control system pressure sensor.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 8.
NG	▶ Install hose properly or replace it.

8	CHECK HARNESS CONNECTOR
<ol style="list-style-type: none"> 1. Disconnect EVAP control system pressure sensor harness connector. 2. Check harness connector for water. Water should not exist. <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 9.
NG	▶ Replace EVAP control system pressure sensor.

9	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR AND CIRCUIT
<p>Refer to "DTC Confirmation Procedure", EC-385.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 10.
NG	▶ Replace EVAP control system pressure sensor and repair or replace harness and connector.

10	CHECK INTERMITTENT INCIDENT
<p>Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.</p>	
▶	INSPECTION END

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

KA24DE


System Description

System Description

NEEC1188

NOTE:

If both DTC P0510 and P1447 are displayed, perform trouble diagnosis for “DTC P0510” first. (See EC-422.)

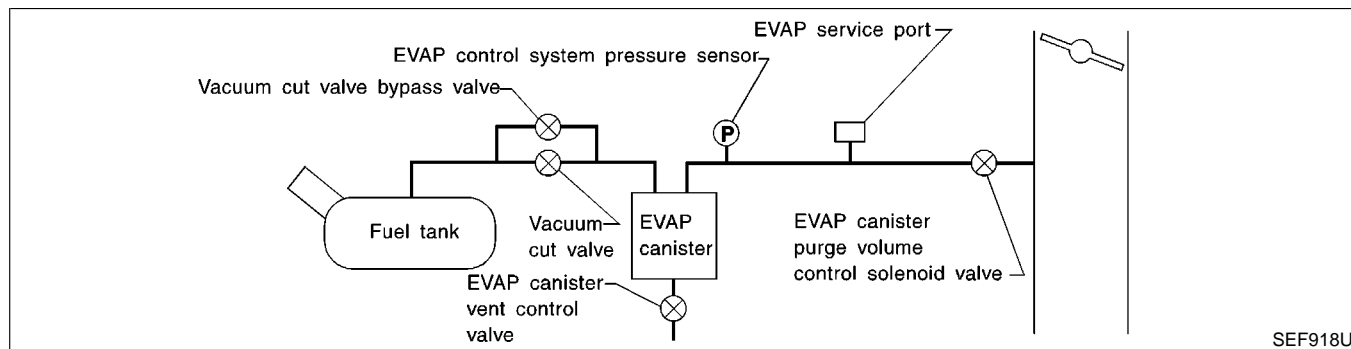

In this evaporative emission (EVAP) control system, purge flow occurs during non-closed throttle conditions. Purge volume is related to air intake volume. Under normal purge conditions (non-closed throttle), the EVAP canister purge volume control solenoid valve is open. Purge flow exposes the EVAP control system pressure sensor to intake manifold vacuum.

On Board Diagnosis Logic

NEEC1189

Under normal conditions (non-closed throttle), sensor output voltage indicates if pressure drop and purge flow are adequate. If not, a fault is determined.

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1447 0111	<ul style="list-style-type: none"> ● EVAP control system does not operate properly. ● EVAP control system has a leak between intake manifold and EVAP control system pressure sensor. 	<ul style="list-style-type: none"> ● EVAP canister purge volume control solenoid valve stuck closed ● EVAP control system pressure sensor and the circuit ● Loose, disconnected or improper connection of rubber tube ● Blocked rubber tube ● Blocked or bent rubber tube to MAP/BARO switch solenoid valve ● Cracked EVAP canister ● Closed throttle position switch ● Blocked purge port ● EVAP canister vent control valve

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

KA24DE

DTC Confirmation Procedure

5	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">PURG FLOW P1447</td></tr> <tr><td style="text-align: center;">OUT OF CONDITION</td></tr> <tr><td style="text-align: center;">MONITOR</td></tr> <tr> <td style="text-align: center;">CMPS~RPM(POS)</td> <td style="text-align: center;">XXX rpm</td> </tr> <tr> <td style="text-align: center;">THRTL POS SEN</td> <td style="text-align: center;">XXX V</td> </tr> <tr> <td style="text-align: center;">B/FUEL SCHDL</td> <td style="text-align: center;">XXX msec</td> </tr> </table>	PURG FLOW P1447	OUT OF CONDITION	MONITOR	CMPS~RPM(POS)	XXX rpm	THRTL POS SEN	XXX V	B/FUEL SCHDL	XXX msec
PURG FLOW P1447										
OUT OF CONDITION										
MONITOR										
CMPS~RPM(POS)	XXX rpm									
THRTL POS SEN	XXX V									
B/FUEL SCHDL	XXX msec									

PEF616W

6	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">PURG FLOW P1447</td></tr> <tr><td style="text-align: center;">TESTING</td></tr> <tr><td style="text-align: center;">MONITOR</td></tr> <tr> <td style="text-align: center;">CMPS-RPM(REF)</td> <td style="text-align: center;">XXX rpm</td> </tr> <tr> <td style="text-align: center;">THRTL POS SEN</td> <td style="text-align: center;">XXX V</td> </tr> <tr> <td style="text-align: center;">B/FUEL SCHDL</td> <td style="text-align: center;">XXX msec</td> </tr> </table>	PURG FLOW P1447	TESTING	MONITOR	CMPS-RPM(REF)	XXX rpm	THRTL POS SEN	XXX V	B/FUEL SCHDL	XXX msec
PURG FLOW P1447										
TESTING										
MONITOR										
CMPS-RPM(REF)	XXX rpm									
THRTL POS SEN	XXX V									
B/FUEL SCHDL	XXX msec									

PEF251V

6	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">PURG FLOW P1447</td></tr> <tr><td style="text-align: center;">COMPLETED</td></tr> </table>	PURG FLOW P1447	COMPLETED
PURG FLOW P1447			
COMPLETED			

PEF905U

DTC Confirmation Procedure

NEEC1190

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- For best results perform test at a temperature of 5°C (41°F) or more.
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

Ⓟ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Start engine and let it idle for at least 60 seconds.
- 4) Select "PURG FLOW P1447" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 5) Touch "START".
If "COMPLETED" is displayed, go to step 7.
- 6) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 30 seconds.)

Selector lever	Suitable position
Vehicle speed	32 - 120 km/h (20 - 75 MPH)
CMPS-RPM (POS)	500 - 3,600 rpm
Engine coolant temperature	70 - 100°C (158 - 212°F)


If "TESTING" is not changed for a long time, retry from step 2.

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure".

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

KA24DE

Overall Function Check

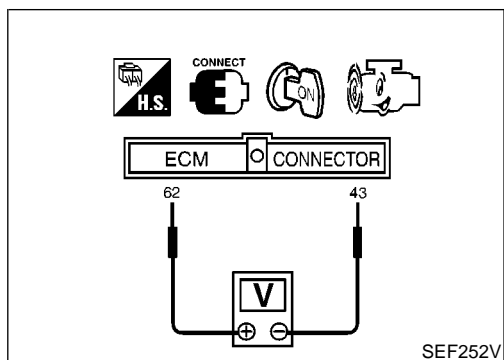

Overall Function Check

=NEEC1191

Use this procedure to check the overall monitoring function of the EVAP control system purge flow monitoring. During this check, a 1st trip DTC might not be confirmed.

⊗ Without CONSULT-II

- 1) Lift up drive wheels.
- 2) Start engine and warm it up to normal operating temperature.
- 3) Turn ignition switch OFF, wait at least 5 seconds.
- 4) Start engine and wait at least 60 seconds.
- 5) Set voltmeter probes to ECM terminals 62 (EVAP control system pressure sensor signal) and 43 (ground).
- 6) Check EVAP control system pressure sensor value at idle speed and note it.
- 7) Establish and maintain the following conditions for at least 1 minute.

Air conditioner switch: ON

Steering wheel: Fully turned

Headlamp switch: ON

Rear window defogger switch: ON

Engine speed: Approx. 3,000 rpm

Gear position:

Any position other than "Neutral" or "Reverse"

Verify that EVAP control system pressure sensor value stays 0.1V less than the value at idle speed (measured at step 6) for at least 1 second.

Diagnostic Procedure

NEEC1192

1	CHECK EVAP CANISTER	
	1. Turn ignition switch OFF. 2. Check EVAP canister for cracks.	
	OK or NG	
OK (With CONSULT-II)	▶	GO TO 2.
OK (Without CONSULT-II)	▶	GO TO 3.
NG	▶	Replace EVAP canister.

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING


KA24DE

Diagnostic Procedure (Cont'd)

2 CHECK PURGE FLOW

Ⓟ With CONSULT-II

1. Disconnect vacuum hose connected to EVAP canister purge volume control solenoid valve at EVAP service port and install vacuum gauge.

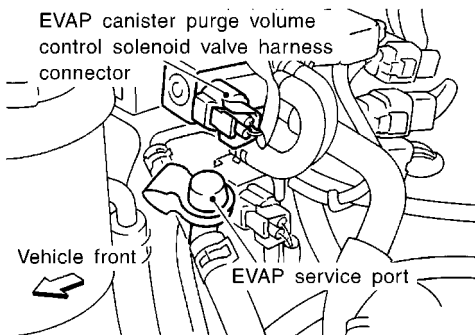

SEF339V

2. Start engine and let it idle.
3. Select "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II.

ACTIVE TEST	
PURG VOL CONT/V	0.0%
MONITOR	
CMPS~RPM(REF)	XXX rpm
FR O2 MNTR-B2	LEAN
FR O2 MNTR-B1	LEAN
A/F ALPHA-B2	XXX %
A/F ALPHA-B1	XXX %
THRTL POS SEN	XXX V

PEF908U

4. Rev engine up to 2,000 rpm.
5. Touch "Qd" and "Qu" on CONSULT-II screen to adjust "PURG VOL CONT/V" opening.
 - 100.0%: Vacuum should exist.**
 - 0.0%: Vacuum should not exist.**


OK or NG

OK	▶	GO TO 8.
NG	▶	GO TO 4.

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

KA24DE

Diagnostic Procedure (Cont'd)

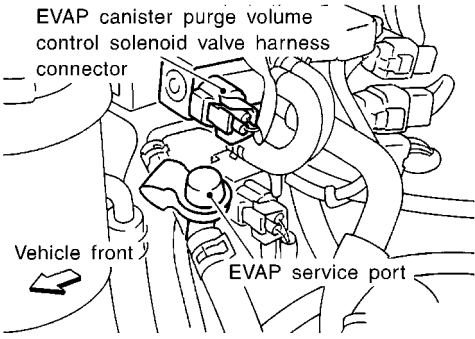3	CHECK PURGE FLOW	<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine. 3. Disconnect vacuum hose connected to EVAP canister purge volume control solenoid valve at EVAP service port and install vacuum gauge. <div style="text-align: center; margin: 10px 0;">  <p style="font-size: small;">EVAP canister purge volume control solenoid valve harness connector</p> <p style="font-size: small;">Vehicle front</p> <p style="font-size: small;">EVAP service port</p> </div> <ol style="list-style-type: none"> 4. Start engine and let it idle for at least 60 seconds. 5. Check vacuum gauge indication when revving engine up to 2,000 rpm. Vacuum should exist. 6. Release the accelerator pedal fully and let idle. Vacuum should not exist. <p style="text-align: center; margin-top: 10px;">OK or NG</p>	SEF339V
OK	▶	GO TO 8.	
NG	▶	GO TO 4.	



4	CHECK EVAP PURGE LINE	<p>Check EVAP purge line for improper connection or disconnection. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-36.</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	
OK	▶	GO TO 5.	
NG	▶	Repair it.	

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

KA24DE

Diagnostic Procedure (Cont'd)

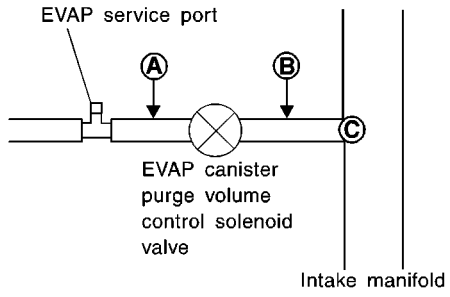
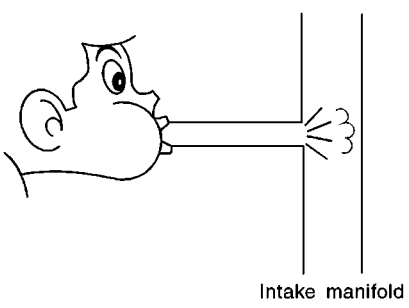
5	CHECK EVAP PURGE HOSE AND PURGE PORT	
<p>1. Disconnect purge hoses connected to EVAP service port A and EVAP canister purge volume control solenoid valve B.</p> <div style="text-align: center;">  </div>		
<p>2. Blow air into each hose and EVAP purge port C.</p> <p>3. Check that air flows freely.</p> <div style="text-align: center;">  </div>		
SEF367U		
SEF368U		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 6.
OK (Without CONSULT-II)	▶	GO TO 7.
NG	▶	Repair or clean hoses and/or purge port.

6	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE																										
<p>Ⓟ With CONSULT-II</p> <p>1. Start engine.</p> <p>2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening. If OK, inspection end. If NG, go to following step.</p> <p>3. Check air passage continuity.</p>																											
<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>PURG VOL CONT/V</td><td>0.0 %</td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>CMPS-RPM (REF)</td><td>XXX rpm</td></tr> <tr><td>FR O2 MNTR</td><td>RICH</td></tr> <tr><td>A/F ALPHA</td><td>XXX %</td></tr> <tr><td>THRTL POS SEN</td><td>XXX V</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>	ACTIVE TEST		PURG VOL CONT/V	0.0 %	MONITOR		CMPS-RPM (REF)	XXX rpm	FR O2 MNTR	RICH	A/F ALPHA	XXX %	THRTL POS SEN	XXX V							<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr> <th style="width: 50%;">Condition PURG VOL CONT/V value</th> <th style="width: 50%;">Air passage continuity between A and B</th> </tr> <tr> <td>100.0%</td> <td>Yes</td> </tr> <tr> <td>0.0%</td> <td>No</td> </tr> </table>	Condition PURG VOL CONT/V value	Air passage continuity between A and B	100.0%	Yes	0.0%	No
ACTIVE TEST																											
PURG VOL CONT/V	0.0 %																										
MONITOR																											
CMPS-RPM (REF)	XXX rpm																										
FR O2 MNTR	RICH																										
A/F ALPHA	XXX %																										
THRTL POS SEN	XXX V																										
Condition PURG VOL CONT/V value	Air passage continuity between A and B																										
100.0%	Yes																										
0.0%	No																										
SEF175X																											
OK or NG																											
OK	▶	GO TO 8.																									
NG	▶	Replace EVAP canister purge volume control solenoid valve.																									

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

KA24DE

Diagnostic Procedure (Cont'd)

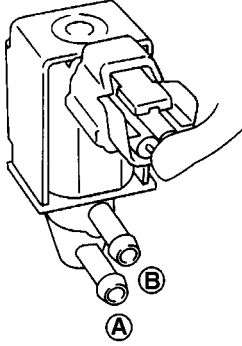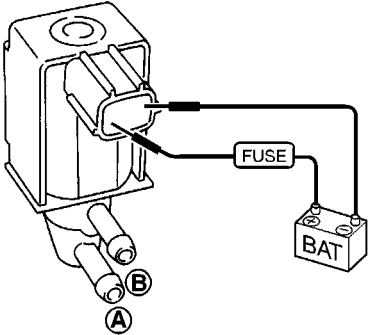7	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE								
<p> Without CONSULT-II Check air passage continuity.</p>									
									
SEF660U									
									
SEF661U									
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Condition</th> <th style="width: 50%;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td>No supply</td> <td style="text-align: center;">No</td> </tr> </tbody> </table>				Condition	Air passage continuity between A and B	12V direct current supply between terminals	Yes	No supply	No
Condition	Air passage continuity between A and B								
12V direct current supply between terminals	Yes								
No supply	No								
MTBL0303									
OK or NG									
OK	▶	GO TO 8.							
NG	▶	Replace EVAP canister purge volume control solenoid valve.							


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

8	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR HOSE		
<p>1. Turn ignition switch OFF. 2. Check disconnection or improper connection of hose connected to EVAP control system pressure sensor.</p>			
OK or NG			
OK	▶	GO TO 9.	
NG	▶	Repair it.	

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

KA24DE

Diagnostic Procedure (Cont'd)

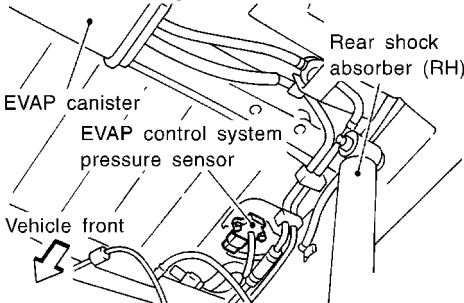9	CHECK CONNECTOR	
<p>1. Disconnect EVAP control system pressure sensor harness connector.</p> <div style="text-align: center;"> <p>View with spare tire removed.</p>  <p>The diagram is a line drawing of the rear engine compartment area. It shows the EVAP canister, the EVAP control system pressure sensor, and the rear shock absorber (RH). An arrow labeled 'Vehicle front' points towards the left side of the diagram. The text 'View with spare tire removed.' is positioned above the diagram.</p> </div>		
<p>2. Check connectors for water. Water should not exist.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 10.
NG	▶	Replace EVAP control system pressure sensor.



SEF341V

10	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR AND CIRCUIT	
<p>Refer to "DTC Confirmation Procedure" for DTC P0450, EC-385.</p> <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 11.
OK (Without CONSULT-II)	▶	GO TO 12.
NG	▶	Replace EVAP control system pressure sensor.

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

KA24DE

Diagnostic Procedure (Cont'd)

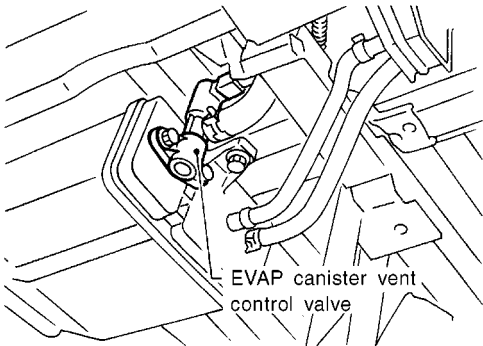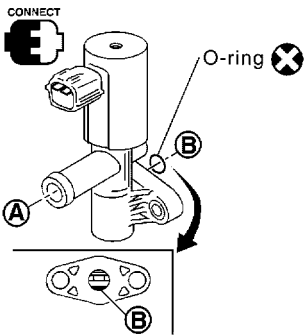11	CHECK EVAP CANISTER VENT CONTROL VALVE	<p>Ⓟ With CONSULT-II Check air passage continuity. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.</p> <div style="text-align: right; margin-top: 20px;">  <p>EVAP canister vent control valve</p> </div> <div style="display: flex; justify-content: space-between; align-items: flex-start; margin-top: 20px;"> <div style="width: 25%;">  <p style="font-size: small;">CONNECT O-ring </p> </div> <div style="width: 20%; text-align: center;"> <table border="1" style="border-collapse: collapse; font-size: x-small;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td>VENT CONTROL/V</td> <td>OFF</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>CMPS-RPM (REF)</td> <td>XXX rpm</td> </tr> <tr> <td>FR O2 MNTR</td> <td>RICH</td> </tr> <tr> <td>A/F ALPHA</td> <td>XXX %</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table> </div> <div style="width: 45%; text-align: center;"> <table border="1" style="border-collapse: collapse; font-size: x-small;"> <thead> <tr> <th>Condition VENT CONTROL/V</th> <th>Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td>ON</td> <td>No</td> </tr> <tr> <td>OFF</td> <td>Yes</td> </tr> </tbody> </table> </div> </div> <div style="text-align: right; margin-top: 10px;"> <p>SEF143S</p> <p>SEF172X</p> </div>		ACTIVE TEST		VENT CONTROL/V	OFF	MONITOR		CMPS-RPM (REF)	XXX rpm	FR O2 MNTR	RICH	A/F ALPHA	XXX %	THRTL POS SEN	XXX V							Condition VENT CONTROL/V	Air passage continuity between A and B	ON	No	OFF	Yes
ACTIVE TEST																													
VENT CONTROL/V	OFF																												
MONITOR																													
CMPS-RPM (REF)	XXX rpm																												
FR O2 MNTR	RICH																												
A/F ALPHA	XXX %																												
THRTL POS SEN	XXX V																												
Condition VENT CONTROL/V	Air passage continuity between A and B																												
ON	No																												
OFF	Yes																												
OK or NG																													
OK	▶	GO TO 13.																											
NG	▶	Replace EVAP canister vent control valve.																											

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

KA24DE

Diagnostic Procedure (Cont'd)

12	CHECK EVAP CANISTER VENT CONTROL VALVE						
<p> Without CONSULT-II Check air passage continuity shown in the figure.</p>							
AEC783A							
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Condition</th> <th style="width: 50%;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">No</td> </tr> <tr> <td>No supply</td> <td style="text-align: center;">Yes</td> </tr> </tbody> </table>		Condition	Air passage continuity between A and B	12V direct current supply between terminals 1 and 2	No	No supply	Yes
Condition	Air passage continuity between A and B						
12V direct current supply between terminals 1 and 2	No						
No supply	Yes						
MTBL0297							
<p>If NG or operation takes more than 1 second, clean valve using air blower or replace as necessary. If the portion B is rusted, replace EVAP canister vent control valve. Make sure new O-ring is installed properly.</p> <p style="text-align: center;">OK or NG</p>							
OK	▶	GO TO 13.					
NG	▶	Replace EVAP canister vent control valve.					

13	CHECK EVAP PURGE LINE	
<p>Inspect EVAP purge line (pipe and rubber tube). Check for evidence of leaks. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-36.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 14.
NG	▶	Replace it.



14	CLEAN EVAP PURGE LINE
<p>Clean EVAP purge line (pipe and rubber tube) using air blower.</p> <p style="text-align: center;">▶</p>	
GO TO 15.	

15	CHECK INTERMITTENT INCIDENT
<p>Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.</p> <p style="text-align: center;">▶</p>	
INSPECTION END	

DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)

KA24DE

Component Description

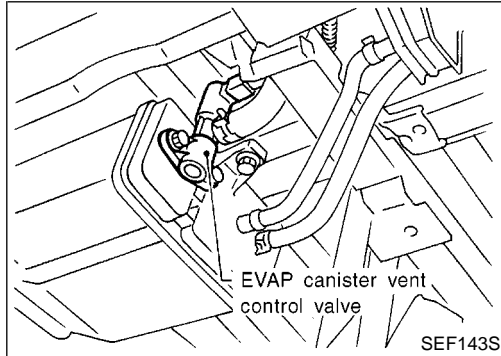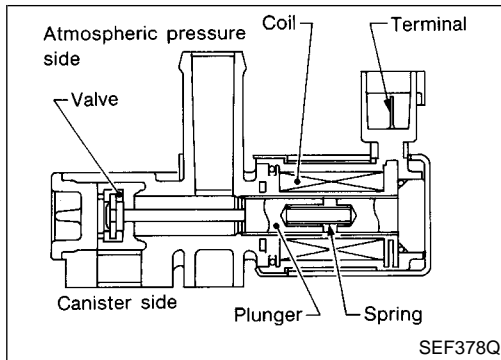

Component Description

NEEC1193

NOTE:

If DTC P1448 is displayed with P0440 or P1440, perform trouble diagnosis for DTC P1448 first.

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent.

This solenoid (the EVAP canister vent control valve) responds to signals from the ECM.

When the ECM sends an ON signal, the coil in the solenoid valve is energized.

A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System (Small Leak)" diagnosis.

CONSULT-II Reference Value in Data Monitor Mode

NEEC1194

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
VENT CONT/V	● Ignition switch: ON	OFF

ECM Terminals and Reference Value

NEEC1195

Specification data are reference values and are measured between each terminal and 43 (ECM ground).

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
108	R/G	EVAP canister vent control valve	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NEEC1196

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1448 0309	● EVAP canister vent control valve remains opened under specified driving conditions.	<ul style="list-style-type: none"> ● EVAP canister vent control valve ● EVAP control system pressure sensor ● Blocked rubber tube to EVAP canister vent control valve ● Water separator ● EVAP canister is saturated with water. ● Vacuum cut valve

DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)

KA24DE

DTC Confirmation Procedure

5

EVAP V/S LEAK P0440

1)PERFORM TEST AT A LOCATION OF 0-30C (32-86F)
 2)OPEN ENGINE HOOD.
 3)START ENGINE WITH VEHICLE STOPPED. IF ENG IS ON, STOP FOR 5 SEC. THEN RESTART.
 4)TOUCH START.

PEF405W

5

EVAP SML LEAK P0440

WAIT
 2 TO 10 MINUTES
 KEEP ENGINE RUNNING AT IDLE SPEED.

PEF929V

5

EVAP SML LEAK P0440

CAN NOT BE DIAGNOSED

FUEL TEMPERATURE IS TOO HIGH. RETEST AFTER FUEL HAS COOLED.

PEF669U

6

EVAP SML LEAK P0440

OK

PEF297U

DTC Confirmation Procedure

NEEC1197

NOTE:

- If DTC P1448 is displayed with P0440 or P1440, perform trouble diagnosis for DTC P1448 first.
- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.

Ⓜ With CONSULT-II

TESTING CONDITION:

- Perform “DTC WORK SUPPORT” when the fuel level is less than 3/4 full and vehicle is placed on flat level surface.
 - Always perform test at a temperature of 0 to 30°C (32 to 86°F).
 - It is better that the fuel level is low.
- 1) Turn ignition switch ON.
 - 2) Turn ignition switch OFF and wait at least 5 seconds.
 - 3) Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
 - 4) Check that the following conditions are met.

COOLAN TEMP/S	0 - 70°C (32 - 158°F)
INT/A TEMP SE	0 - 60°C (32 - 140°F)

- 5) Select “EVAP SML LEAK P0440” of “EVAPORATIVE SYSTEM” in “DTC WORK SUPPORT” mode with CONSULT-II. Follow the instruction displayed.

NOTE:

- If the CONSULT-II screen shown at left is displayed, stop the engine and stabilize the vehicle temperature at 25°C (77°F) or cooler. After “TANK F/TMP SE” becomes less than 30°C (86°F), retest. (Use a fan to reduce the stabilization time.)
 - If the engine speed cannot be maintained within the range displayed on CONSULT-II screen, go to “Basic Inspection”, EC-96.
 - The engine idle portion of this test (See illustration at left.) will take approximately 5 minutes.
- 6) Make sure that “OK” is displayed. If “NG” is displayed, go to following step.

NOTE:

Make sure that EVAP hoses are connected to EVAP canister purge volume control solenoid valve properly.

- 7) Stop engine and wait at least 5 seconds, then turn “ON”.
- 8) Disconnect hose from water separator.
- 9) Select “VENT CONTROL/V” of “ACTIVE TEST” mode with CONSULT-II.
- 10) Touch “ON” and “OFF” alternately.

DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)

KA24DE

DTC Confirmation Procedure (Cont'd)

10

ACTIVE TEST	
VENT CONTROL/V	OFF
MONITOR	
CMPS-RPM (REF)	XXXrpm
FR O2 MNTR-B1	RICH
A/F ALPHA-B1	XXX%
THRTL POS SEN	XXXV

SEF157X

11) Make sure of the following.

Condition	Air passage continuity between A and B
Touching "ON"	No
Touching "OFF"	Yes

If the result is NG, go to "Diagnostic Procedure", EC-518.
If the result is OK, go to "Diagnostic Procedure" for DTC P0440, EC-355.

AEC783A

Overall Function Check

Use this procedure to check the overall function of the EVAP canister vent control valve circuit. During this check, a DTC might not be confirmed.

Without CONSULT-II

- 1) Disconnect hose from water separator.
- 2) Disconnect EVAP canister vent control valve harness connector.
- 3) Verify the following.

Condition	Air passage continuity
12V direct current supply between terminals 1 and 2	No
No supply	Yes

If the result is NG, go to "Diagnostic Procedure", EC-518.
If the result is OK, perform trouble diagnosis for DTC P0440. Refer to EC-352.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)



KA24DE

Diagnostic Procedure

Diagnostic Procedure

NEEC1199

1	CHECK RUBBER TUBE	
1. Turn ignition switch OFF. 2. Check disconnection or obstruction of rubber tube connected to EVAP canister vent control valve.		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 2.
OK (Without CONSULT-II)	▶	GO TO 3.
NG	▶	Repair or clean rubber tube.

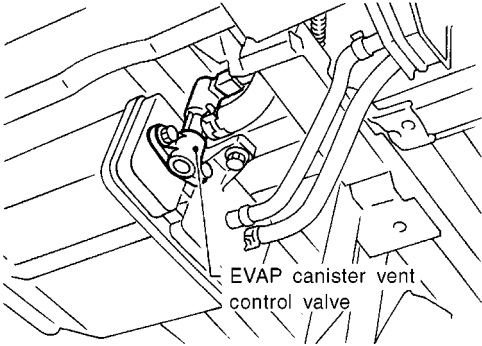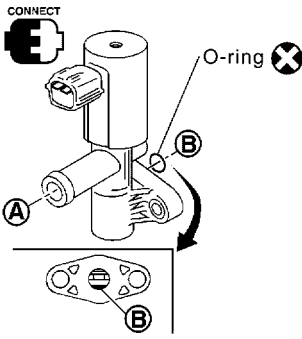2	CHECK EVAP CANISTER VENT CONTROL VALVE AND O-RING																											
Ⓟ With CONSULT-II Check air passage continuity. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.																												
																												
SEF143S																												
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="width: 30%;">  </div> <div style="width: 30%;"> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td>VENT CONTROL/V</td> <td>OFF</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>CMPS-RPM (REF)</td> <td>XXX rpm</td> </tr> <tr> <td>FR O2 MNTR</td> <td>RICH</td> </tr> <tr> <td>A/F ALPHA</td> <td>XXX %</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table> </div> <div style="width: 30%;"> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th>Condition VENT CONTROL/V</th> <th>Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td>ON</td> <td>No</td> </tr> <tr> <td>OFF</td> <td>Yes</td> </tr> </tbody> </table> </div> </div>			ACTIVE TEST		VENT CONTROL/V	OFF	MONITOR		CMPS-RPM (REF)	XXX rpm	FR O2 MNTR	RICH	A/F ALPHA	XXX %	THRTL POS SEN	XXX V							Condition VENT CONTROL/V	Air passage continuity between A and B	ON	No	OFF	Yes
ACTIVE TEST																												
VENT CONTROL/V	OFF																											
MONITOR																												
CMPS-RPM (REF)	XXX rpm																											
FR O2 MNTR	RICH																											
A/F ALPHA	XXX %																											
THRTL POS SEN	XXX V																											
Condition VENT CONTROL/V	Air passage continuity between A and B																											
ON	No																											
OFF	Yes																											
SEF172X																												
OK or NG																												
OK	▶	GO TO 4.																										
NG	▶	Replace EVAP canister vent control valve and O-ring.																										

DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)


KA24DE

Diagnostic Procedure (Cont'd)

3 CHECK EVAP CANISTER VENT CONTROL VALVE AND O-RING

⊗ Without CONSULT-II

Check air passage continuity shown in the figure.

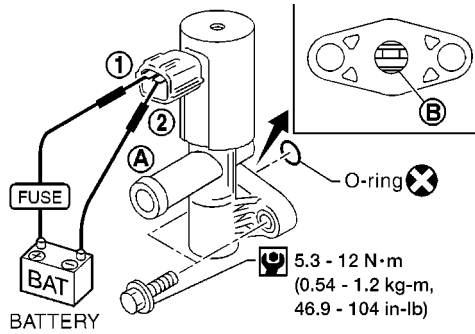

AEC783A

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	No
No supply	Yes

MTBL0297

If NG or operation takes more than 1 second, clean valve using air blower or replace as necessary.

If the portion B is rusted, replace EVAP canister vent control valve. Make sure new O-ring is installed properly.

OK or NG

OK	▶	GO TO 4.
NG	▶	Replace EVAP canister vent control valve and O-ring.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)

KA24DE


Diagnostic Procedure (Cont'd)

4 CHECK VACUUM CUT VALVE

Check vacuum cut valve as follows:

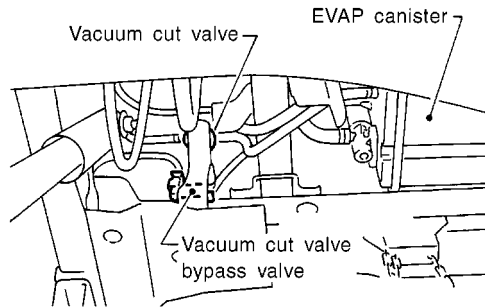

SEF186S

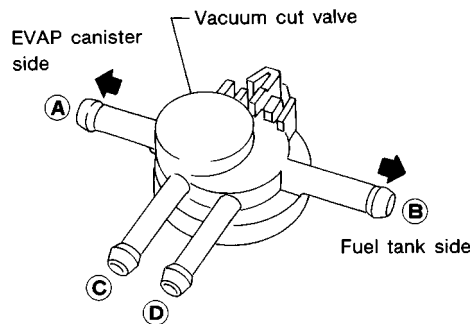

SEF379Q

1. Plug port **C** and **D** with fingers.
2. Apply vacuum to port **A** and check that there is no suction from port **B**.
3. Apply vacuum to port **B** and check that there is suction from port **A**.
4. Blow air in port **B** and check that there is a resistance to flow out of port **A**.
5. Open port **C** and **D**.
6. Blow air in port **A** check that air flows freely out of port **C**.
7. Blow air in port **B** check that air flows freely out of port **D**.


OK or NG

OK	▶	GO TO 5.
----	---	----------

NG	▶	Replace vacuum cut valve.
----	---	---------------------------

5 CHECK IF EVAP CANISTER IS SATURATED WITH WATER

1. Remove EVAP canister with the vent control valve attached.
2. Check if water will drain from the EVAP canister.

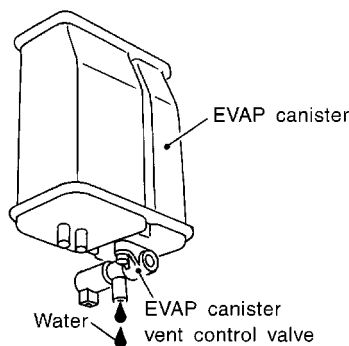

SEF596U

Yes or No

Yes	▶	GO TO 8.
-----	---	----------

No	▶	GO TO 6.
----	---	----------


DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)

KA24DE

Diagnostic Procedure (Cont'd)

6	CHECK EVAP CANISTER	
Weigh the EVAP canister with EVAP canister vent control valve attached. The weight should be less than 1.8 kg (4.0lb).		
OK or NG		
OK	▶	GO TO 8.
NG	▶	GO TO 7.

GI
MA
EM

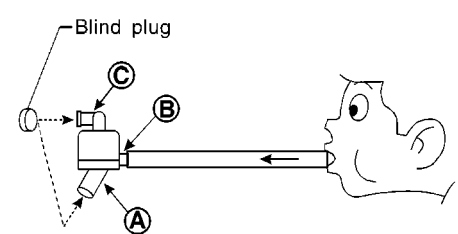7	DETECT MALFUNCTIONING PART	
Check the following.		
<ol style="list-style-type: none"> 1. Visually check the EVAP canister for damage. 2. Check hose connection between EVAP canister and water separator for clogging and poor connection. 3. Check water separator. <ol style="list-style-type: none"> a. Check visually for insect nests in the water separator air inlet. b. Check visually for cracks or flaws in the appearance. c. Check visually for cracks or flaws in the hose. d. Check that A and C are not clogged by blowing air into B with A, and then C plugged. 		
		
<p>* A : Bottom hole (To atmosphere) B : Emergency tube (From EVAP canister) C : Inlet port (To member)</p>		
SEF829T		
e. In case of NG in items 2 - 4, replace the parts.		
● Do not disassemble water separator.		
		▶ Repair hose or replace EVAP canister or water separator.

LC
EC

FE
CL
MT
AT
TF

PD
AX

8	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR HOSE	
Check disconnection or improper connection of hose connected to EVAP control system pressure sensor.		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Install hose property or replace it.

SU
BR
ST

9	CHECK HARNESS CONNECTOR	
<ol style="list-style-type: none"> 1. Disconnect EVAP control system pressure sensor harness connector. 2. Check harness connector for water. Water should not exist. 		
OK or NG		
OK	▶	GO TO 10.
NG	▶	Replace EVAP control system pressure sensor.

RS
BT
HA

SC
EL

IDX

DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)

KA24DE


Diagnostic Procedure (Cont'd)

10	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR
Perform "DTC Confirmation Procedure", EC-385.	
OK or NG	
OK	▶ GO TO 11.
NG	▶ Replace EVAP control system pressure sensor and repair or replace harness and connector.

11	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
	▶ INSPECTION END

DTC P1490 VACUUM CUT VALVE BYPASS VALVE (CIRCUIT) KA24DE

Description

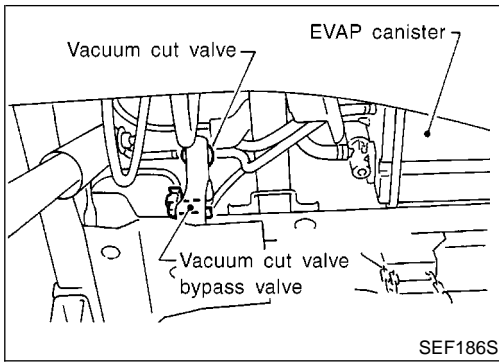

Description

COMPONENT DESCRIPTION


The vacuum cut valve and vacuum cut valve bypass valve are installed in parallel on the EVAP purge line between the fuel tank and the EVAP canister.

The vacuum cut valve prevents the intake manifold vacuum from being applied to the fuel tank.

The vacuum cut valve bypass valve is a solenoid type valve and generally remains closed. It opens only for on board diagnosis.

The vacuum cut valve bypass valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the valve is opened. The vacuum cut valve is then bypassed to apply intake manifold vacuum to the fuel tank.

EVAPORATIVE EMISSION SYSTEM DIAGRAM

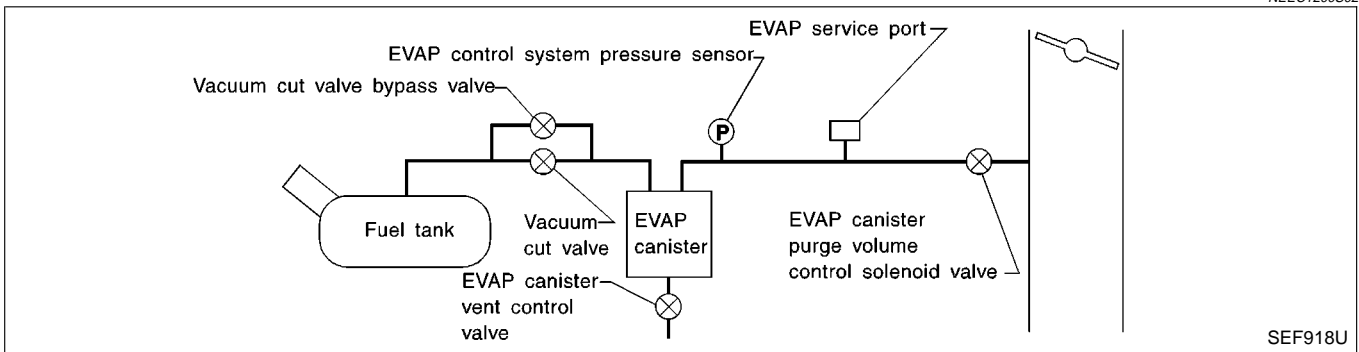

CONSULT-II Reference Value in Data Monitor Mode

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
VC/V BYPASS/V	● Ignition switch: ON	OFF

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 43 (ECM ground).

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
120	P/B	Vacuum cut valve bypass valve	[Ignition switch ON]	BATTERY VOLTAGE (11 - 14V)

DTC P1490 VACUUM CUT VALVE BYPASS VALVE (CIRCUIT) KA24DE

On Board Diagnosis Logic

On Board Diagnosis Logic

NEEC1203

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1490 0801	<ul style="list-style-type: none"> An improper voltage signal is sent to ECM through vacuum cut valve bypass valve. 	<ul style="list-style-type: none"> Harness or connectors (The vacuum cut valve bypass valve circuit is open or shorted.) Vacuum cut valve bypass valve

DTC Confirmation Procedure


NEEC1204

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11V at idle.

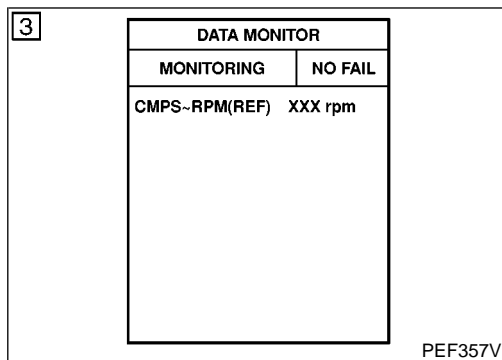

With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-526.

With GST

Follow the procedure "With CONSULT-II".

DTC P1490 VACUUM CUT VALVE BYPASS VALVE (CIRCUIT) KA24DE

Wiring Diagram

Wiring Diagram

NEEC1205

EC-BYPS/V-01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS


BT

HA

SC


EL

IDX



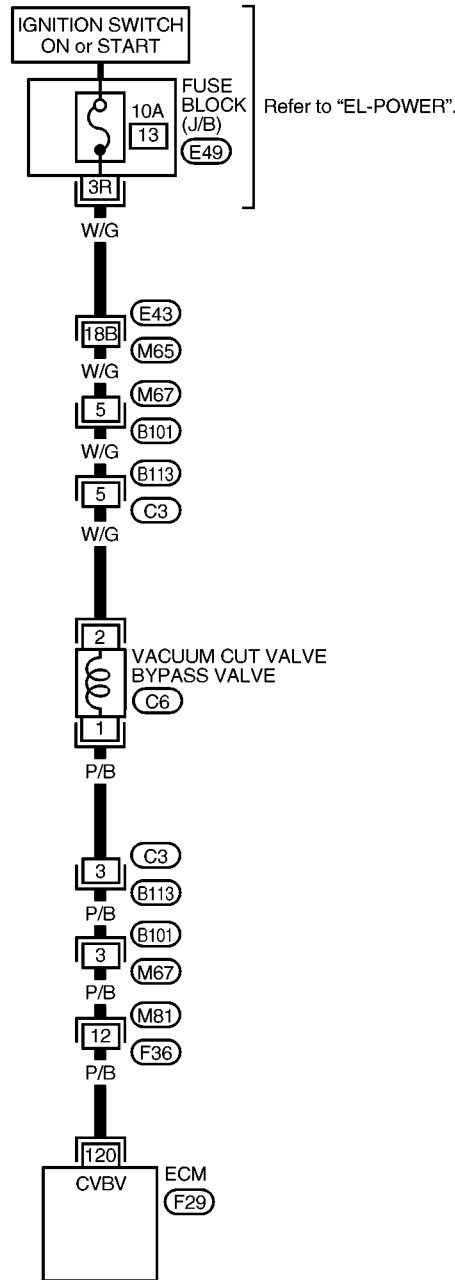


Refer to "EL-POWER".

— : Detectable line for DTC
 — : Non-detectable line for DTC



Refer to the following.
 M65, E43 - SUPER
 MULTIPLE JUNCTION (SMJ)

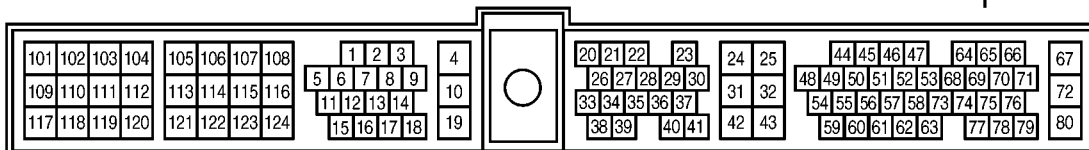

AEC007B

DTC P1490 VACUUM CUT VALVE BYPASS VALVE (CIRCUIT) KA24DE

Diagnostic Procedure

Diagnostic Procedure

NEEC1206



1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

2	CHECK VACUUM CUT VALVE BYPASS VALVE CIRCUIT																					
<p>1. Turn ignition switch ON. 2. Perform "VC/V BYPASS/V" in "ACTIVE TEST" mode.</p>																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>VC/V BYPASS/V</td><td></td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>CMPS~RPM(REF)</td><td>XXX rpm</td></tr> <tr><td>FR O2 MNTR</td><td>RICH</td></tr> <tr><td>A/F ALPHA</td><td>XXX %</td></tr> <tr><td>THRTL POS SEN</td><td>XXX V</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>			ACTIVE TEST		VC/V BYPASS/V		MONITOR		CMPS~RPM(REF)	XXX rpm	FR O2 MNTR	RICH	A/F ALPHA	XXX %	THRTL POS SEN	XXX V						
ACTIVE TEST																						
VC/V BYPASS/V																						
MONITOR																						
CMPS~RPM(REF)	XXX rpm																					
FR O2 MNTR	RICH																					
A/F ALPHA	XXX %																					
THRTL POS SEN	XXX V																					
<p>3. Make sure that clicking sound is heard from the vacuum cut valve bypass valve.</p> <p style="text-align: center;">OK or NG</p>																						
OK	▶	GO TO 7.																				
NG	▶	GO TO 3.																				

PEF364U

DTC P1490 VACUUM CUT VALVE BYPASS VALVE (CIRCUIT) KA24DE

Diagnostic Procedure (Cont'd)

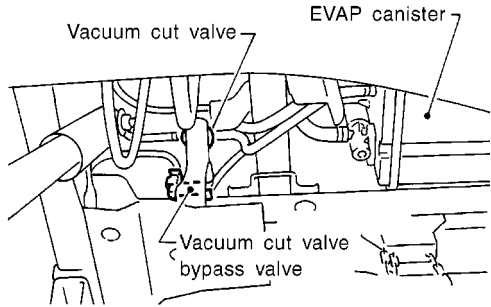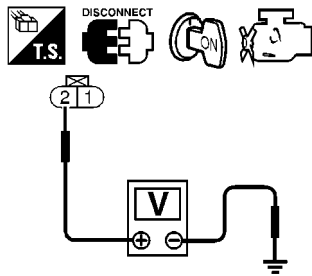3	CHECK POWER SUPPLY		
		<p>1. Turn ignition switch OFF.</p> <p>2. Disconnect vacuum cut valve bypass valve harness connector.</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p style="background-color: black; color: white; text-align: center;">EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>TF</p>
			<p>SEF186S</p>
		<p>3. Turn ignition switch ON.</p> <p>4. Check voltage between terminal 2 and ground with CONSULT-II or tester.</p>	<p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>TF</p>
			<p>SEF192V</p>
		<p>Voltage: Battery voltage</p> <p>OK or NG</p>	
OK	▶	GO TO 5.	<p>PD</p> <p>AX</p>
NG	▶	GO TO 4.	

4	DETECT MALFUNCTIONING PART		
		<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M67, B101 ● Harness connectors B113, C3 ● 10A fuse ● Harness for open or short between vacuum cut valve bypass valve and 10A fuse 	<p>SU</p> <p>BR</p> <p>ST</p>
		▶	<p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p>
		Repair harness or connectors.	<p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>

DTC P1490 VACUUM CUT VALVE BYPASS VALVE (CIRCUIT) KA24DE

Diagnostic Procedure (Cont'd)



5	CHECK OUTPUT SIGNAL CIRCUIT
<p>1. Turn ignition switch OFF. 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 120 and terminal 1.</p>	
SEF253V	
<p>Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 7.
NG	▶ GO TO 6.

6	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M67, B101 ● Harness connectors B113, C3 ● Harness for open or short between vacuum cut valve bypass valve and ECM 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1490 VACUUM CUT VALVE BYPASS VALVE (CIRCUIT) KA24DE


Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

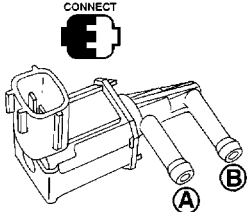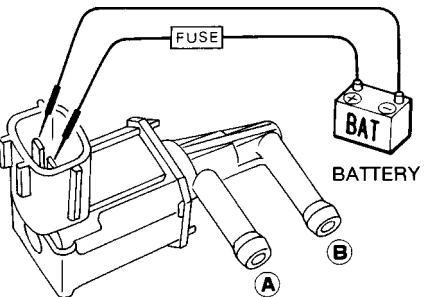7	CHECK VACUUM CUT VALVE BYPASS VALVE																				
<p>④ With CONSULT-II Check air passage continuity. Perform "VC/V BYPASS/V" in "ACTIVE TEST" mode.</p>																					
	<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td>VC/V BYPASS/V</td> <td>OFF</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>CMPS-RPM (REF)</td> <td>XXX rpm</td> </tr> <tr> <td>FR O2 MNTR</td> <td>RICH</td> </tr> <tr> <td>A/F ALPHA</td> <td>XXX %</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>	ACTIVE TEST		VC/V BYPASS/V	OFF	MONITOR		CMPS-RPM (REF)	XXX rpm	FR O2 MNTR	RICH	A/F ALPHA	XXX %	THRTL POS SEN	XXX V						
ACTIVE TEST																					
VC/V BYPASS/V	OFF																				
MONITOR																					
CMPS-RPM (REF)	XXX rpm																				
FR O2 MNTR	RICH																				
A/F ALPHA	XXX %																				
THRTL POS SEN	XXX V																				
<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Condition VC/V BYPASS/V</th> <th>Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td>ON</td> <td>Yes</td> </tr> <tr> <td>OFF</td> <td>No</td> </tr> </tbody> </table>		Condition VC/V BYPASS/V	Air passage continuity between A and B	ON	Yes	OFF	No														
Condition VC/V BYPASS/V	Air passage continuity between A and B																				
ON	Yes																				
OFF	No																				
SEF171X																					
<p>⊗ Without CONSULT-II Check air passage continuity shown in the figure.</p>																					
																					
SEF351Q																					
<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Condition</th> <th>Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals</td> <td>Yes</td> </tr> <tr> <td>No supply</td> <td>No</td> </tr> </tbody> </table>		Condition	Air passage continuity between A and B	12V direct current supply between terminals	Yes	No supply	No														
Condition	Air passage continuity between A and B																				
12V direct current supply between terminals	Yes																				
No supply	No																				
MTBL0303																					
<p>If NG or operation takes more than 1 second, replace vacuum cut valve bypass valve.</p> <p style="text-align: center;">OK or NG</p>																					
OK	▶	GO TO 8.																			
NG	▶	Replace vacuum cut valve bypass valve.																			

8	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.	
▶ INSPECTION END	

Description

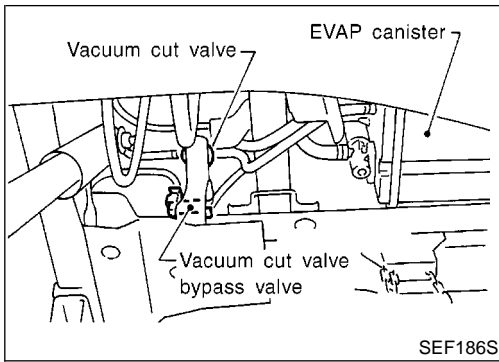

Description

COMPONENT DESCRIPTION


The vacuum cut valve and vacuum cut valve bypass valve are installed in parallel on the EVAP purge line between the fuel tank and the EVAP canister.

The vacuum cut valve prevents the intake manifold vacuum from being applied to the fuel tank.

The vacuum cut valve bypass valve is a solenoid type valve and generally remains closed. It opens only for on board diagnosis.

The vacuum cut valve bypass valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the valve is opened. The vacuum cut valve is then bypassed to apply intake manifold vacuum to the fuel tank.

EVAPORATIVE EMISSION SYSTEM DIAGRAM

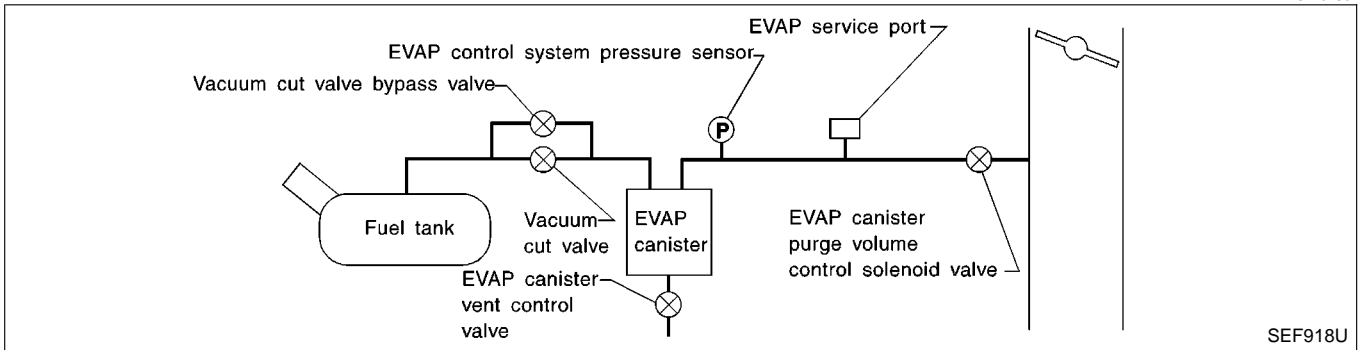

CONSULT-II Reference Value in Data Monitor Mode

Specification data are reference values.

NEEC1208

MONITOR ITEM	CONDITION	SPECIFICATION
VC/V BYPASS/V	● Ignition switch: ON	OFF

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

NEEC1209

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
120	P/B	Vacuum cut valve bypass valve	[Ignition switch ON]	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NEEC1210

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1491 0311	Vacuum cut valve bypass valve does not operate properly.	<ul style="list-style-type: none"> ● Vacuum cut valve bypass valve ● Vacuum cut valve ● Bypass hoses for clogging ● EVAP control system pressure sensor ● EVAP canister vent control valve ● Hose between fuel tank and vacuum cut valve clogged ● Hose between vacuum cut valve and EVAP canister clogged ● EVAP canister ● EVAP purge port of fuel tank for clogging

GI
MA
EM
LC
EC

7	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">VC CUT/V BP/V P1491</td></tr> <tr><td style="text-align: center;">OUT OF CONDITION</td></tr> <tr><td style="text-align: center;">MONITOR</td></tr> <tr> <td style="text-align: center;">CMPS~RPM(POS)</td> <td style="text-align: center;">XXX rpm</td> </tr> <tr> <td style="text-align: center;">THRTL POS SEN</td> <td style="text-align: center;">XXX V</td> </tr> <tr> <td style="text-align: center;">B/FUEL SCHDL</td> <td style="text-align: center;">XXX msec</td> </tr> </table>	VC CUT/V BP/V P1491	OUT OF CONDITION	MONITOR	CMPS~RPM(POS)	XXX rpm	THRTL POS SEN	XXX V	B/FUEL SCHDL	XXX msec
VC CUT/V BP/V P1491										
OUT OF CONDITION										
MONITOR										
CMPS~RPM(POS)	XXX rpm									
THRTL POS SEN	XXX V									
B/FUEL SCHDL	XXX msec									

PEF618W

7	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">VC CUT/V BP/V P1491</td></tr> <tr><td style="text-align: center;">TESTING</td></tr> <tr><td style="text-align: center;">MONITOR</td></tr> <tr> <td style="text-align: center;">CMPS~RPM(POS)</td> <td style="text-align: center;">XXX rpm</td> </tr> <tr> <td style="text-align: center;">THRTL POS SEN</td> <td style="text-align: center;">XXX V</td> </tr> <tr> <td style="text-align: center;">B/FUEL SCHDL</td> <td style="text-align: center;">XXX msec</td> </tr> </table>	VC CUT/V BP/V P1491	TESTING	MONITOR	CMPS~RPM(POS)	XXX rpm	THRTL POS SEN	XXX V	B/FUEL SCHDL	XXX msec
VC CUT/V BP/V P1491										
TESTING										
MONITOR										
CMPS~RPM(POS)	XXX rpm									
THRTL POS SEN	XXX V									
B/FUEL SCHDL	XXX msec									

PEF619W

7	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">VC CUT/V BP/V P1491</td></tr> <tr><td style="text-align: center;">COMPLETED</td></tr> </table>	VC CUT/V BP/V P1491	COMPLETED
VC CUT/V BP/V P1491			
COMPLETED			

PEF912U

DTC Confirmation Procedure

NEEC1211

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Always perform test at a temperature of 5 to 30°C (41 to 86°F).
- This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

Ⓟ With CONSULT-II


- 1) Turn ignition switch ON.
- 2) Start engine and warm it up to normal operating temperature.
- 3) Turn ignition switch OFF and wait at least 5 seconds.
- 4) Start engine and let it idle for at least 60 seconds.
- 5) Select "VC CUT/V BP/V P1491" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 6) Touch "START".
- 7) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 30 seconds.)

CMPS-RPM (POS)	1,000 - 3,200 rpm
Selector lever	Suitable position
Vehicle speed	36 - 120 km/h (22 - 75 MPH)
B/FUEL SCHDL	Less than 4.5 msec

FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

If "TESTING" is not displayed after 5 minutes, retry from step 3.

- 8) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure".

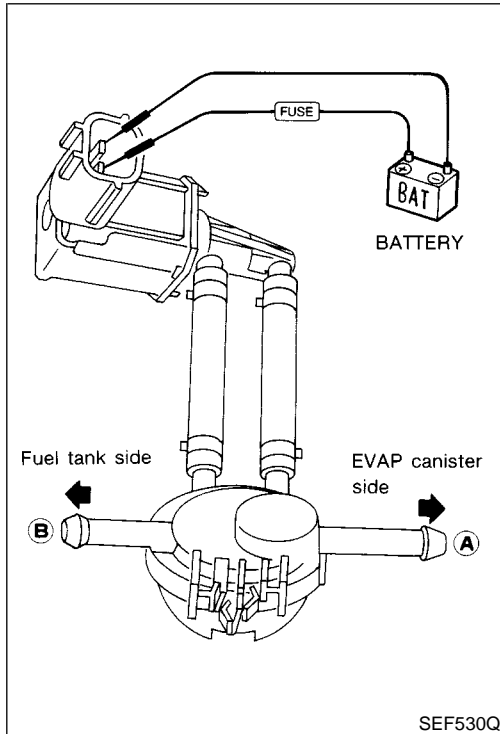

Overall Function Check

Use this procedure to check the overall function of vacuum cut valve bypass valve. During this check, the 1st trip DTC might not be confirmed.

NEEC1212

⊗ Without CONSULT-II

1. Remove vacuum cut valve and vacuum cut valve bypass valve as an assembly.
2. Apply vacuum to port **A** and check that there is no suction from port **B**.
3. Apply vacuum to port **B** and check that there is suction from port **A**.
4. Blow air in port **B** and check that there is a resistance to flow out of port **A**.
5. Supply battery voltage to the terminal.
6. Blow air in port **A** and check that air flows freely out of port **B**.
7. Blow air in port **B** and check that air flows freely out of port **A**.
8. If NG, go to "DIAGNOSTIC PROCEDURE" on EC-534.

Wiring Diagram

NEEC1213

EC-BYPS/V-01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS


BT

HA


SC

EL




IDX

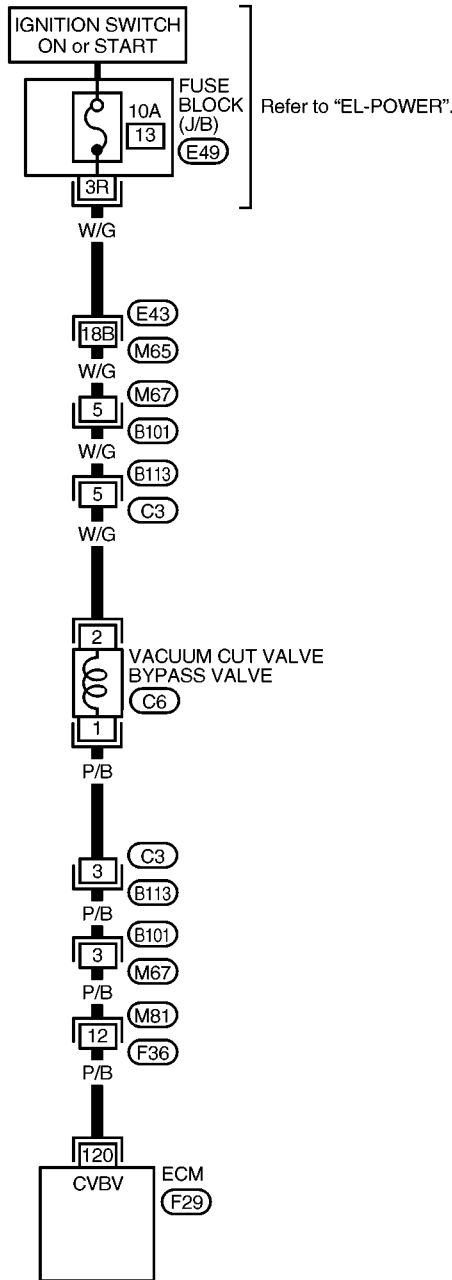

Refer to "EL-POWER".
 — : Detectable line for DTC
 — : Non-detectable line for DTC




Refer to the following.
 (M65), (E43) - SUPER
 MULTIPLE JUNCTION (SMJ)

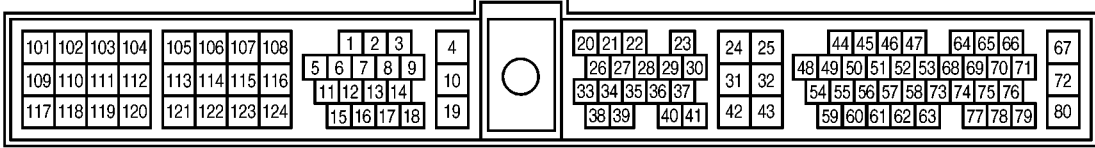


Diagnostic Procedure

NEEC1214

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

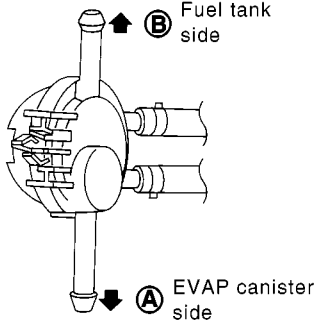2	CHECK COMPONENT																			
<p>🔧 With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Remove vacuum cut valve and vacuum cut valve bypass valve as an assembly. 3. Apply vacuum to port A and check that there is no suction from port B. 4. Apply vacuum to port B and check that there is suction from port A. 5. Blow air in port B and check that there is a resistance to flow out of port A. 6. Turn ignition switch ON. 7. Select "VC/V BYPASS/V" in "ACTIVE TEST" mode with CONSULT-II and touch "ON". 8. Blow air in port A and check that air flows freely out of port B. 9. Blow air in port B and check that air flows freely out of port A. 																				
																				
<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <th>VC/V BYPASS/V</th> <th>ON</th> </tr> <tr> <th colspan="2">MONITOR</th> </tr> </thead> <tbody> <tr> <td>CMPS~RPM(REF)</td> <td>XXX rpm</td> </tr> <tr> <td>FR O2 MNTR-B2</td> <td>LEAN</td> </tr> <tr> <td>FR O2 MNTR-B1</td> <td>LEAN</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XXX %</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XXX %</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> </tbody> </table>			ACTIVE TEST		VC/V BYPASS/V	ON	MONITOR		CMPS~RPM(REF)	XXX rpm	FR O2 MNTR-B2	LEAN	FR O2 MNTR-B1	LEAN	A/F ALPHA-B2	XXX %	A/F ALPHA-B1	XXX %	THRTL POS SEN	XXX V
ACTIVE TEST																				
VC/V BYPASS/V	ON																			
MONITOR																				
CMPS~RPM(REF)	XXX rpm																			
FR O2 MNTR-B2	LEAN																			
FR O2 MNTR-B1	LEAN																			
A/F ALPHA-B2	XXX %																			
A/F ALPHA-B1	XXX %																			
THRTL POS SEN	XXX V																			
OK or NG																				
OK	▶	GO TO 4.																		
NG	▶	GO TO 5.																		

PEF913U

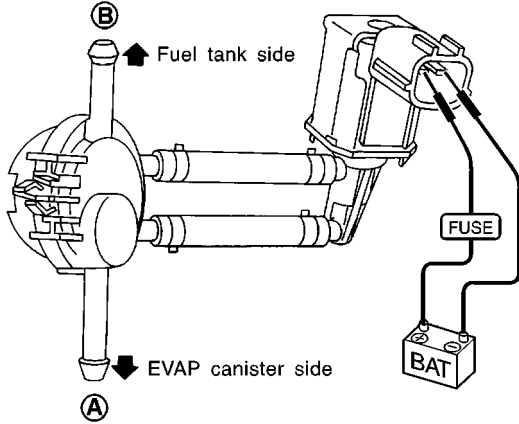3	CHECK COMPONENT
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Remove vacuum cut valve and vacuum cut valve bypass valve as an assembly. 3. Apply vacuum to port A and check that there is no suction from port B. 4. Apply vacuum to port B and check that there is suction from port A. 5. Blow air in port B and check that there is a resistance to flow out of port A. 6. Disconnect vacuum cut valve bypass valve harness connector. 7. Supply battery voltage to the terminal. 8. Blow air in port A and check that air flows freely out of port B. 9. Blow air in port B and check that air flows freely out of port A. 	
	
OK or NG	
OK	▶ GO TO 4.
NG	▶ GO TO 5.

4	CHECK EVAP PURGE LINE
<ol style="list-style-type: none"> 1. Check EVAP purge line between EVAP canister and fuel tank for clogging or disconnection. 2. Check EVAP purge port of fuel tank for clogging. 3. Check EVAP canister. Refer to EC-34. 	
OK or NG	
OK	▶ GO TO 8.
NG (Step 1)	▶ Repair it.
NG (Step 2)	▶ Clean EVAP purge port.
NG (Step 3)	▶ Replace EVAP canister.

5	CHECK BYPASS HOSE
Check bypass hoses for clogging.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ Repair or replace hoses.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

6 CHECK VACUUM CUT VALVE BYPASS VALVE

With CONSULT-II

Check air passage continuity.
Perform "VC/V BYPASS/V" in "ACTIVE TEST" mode.

ACTIVE TEST	
VC/V BYPASS/V	OFF
MONITOR	
CMPS~RPM(REF)	XXX rpm
FR O2 MNTR	RICH
A/F ALPHA	XXX %
THRTL POS SEN	XXX V


PEF395V

Condition VC/V BYPASS/V	Air passage continuity between A and B
ON	Yes
OFF	No

MTBL0304

Without CONSULT-II

Check air passage continuity shown in the figure.

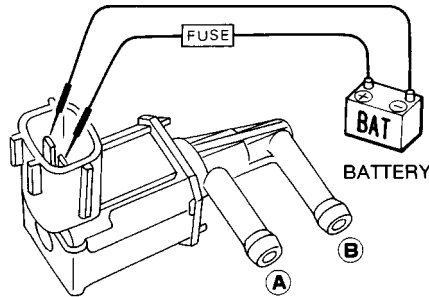

SEF351Q



Condition	Air passage continuity between A and B
12V direct current supply between terminals	Yes
No supply	No

MTBL0303


If NG or operation takes more than 1 second, replace vacuum cut valve bypass valve.

OK or NG

OK	▶	GO TO 7.
NG	▶	Replace vacuum cut valve bypass valve.

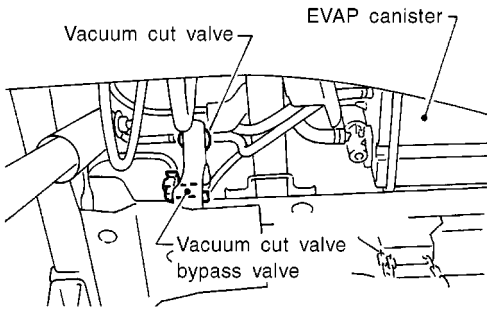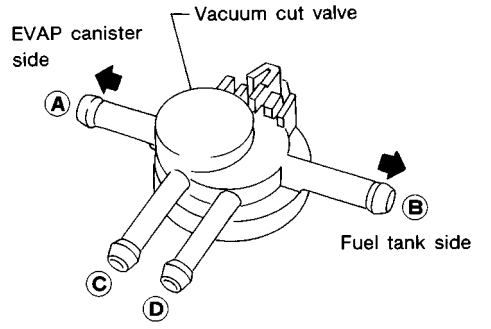7	CHECK VACUUM CUT VALVE	<p>Check vacuum cut valve as follows:</p> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF186S</p> <p style="text-align: right;">SEF379Q</p> <ol style="list-style-type: none"> 1. Plug port C and D with fingers. 2. Apply vacuum to port A and check that there is no suction from port B. 3. Apply vacuum to port B and check that there is suction from port A. 4. Blow air in port B and check that there is a resistance to flow out of port A. 5. Open port C and D. 6. Blow air in port A check that air flows freely out of port C. 7. Blow air in port B check that air flows freely out of port D. <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 8.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace vacuum cut valve.</td> </tr> </table>	OK	▶	GO TO 8.	NG	▶	Replace vacuum cut valve.	GI MA EM LC EC FE CL MT AT TF PD AX SU
OK	▶	GO TO 8.							
NG	▶	Replace vacuum cut valve.							

8	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR HOSE	<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Check disconnection or improper connection of hose connected to EVAP control system pressure sensor. <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 9.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Repair it</td> </tr> </table>	OK	▶	GO TO 9.	NG	▶	Repair it	BR ST RS BT HA SC EL IDX
OK	▶	GO TO 9.							
NG	▶	Repair it							

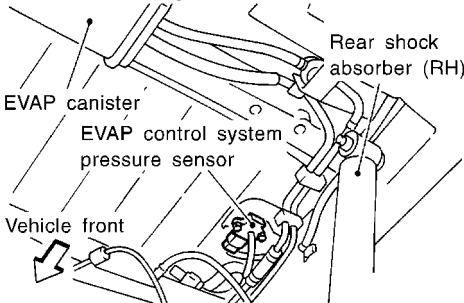9	CHECK CONNECTOR	<p>1. Disconnect EVAP control system pressure sensor harness connector.</p> <div style="text-align: center;"> <p>View with spare tire removed.</p>  </div> <p style="text-align: right;">SEF341V</p>	
		<p>2. Check connectors for water. Water should not exist.</p> <p style="text-align: center;">OK or NG</p>	
OK		▶	GO TO 10.
NG		▶	Replace EVAP control system pressure sensor.


10	CHECK COMPONENT AND CIRCUIT	<p>(EVAP control system pressure sensor) Refer to "DTC Confirmation Procedure" for DTC P0450, EC-385.</p> <p style="text-align: center;">OK or NG</p>	
OK (With CONSULT-II)		▶	GO TO 11.
OK (Without CONSULT-II)		▶	GO TO 12.
NG		▶	Replace EVAP control system pressure sensor.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


11 CHECK EVAP CANISTER VENT CONTROL VALVE

Ⓟ With CONSULT-II

Check air passage continuity.
Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.

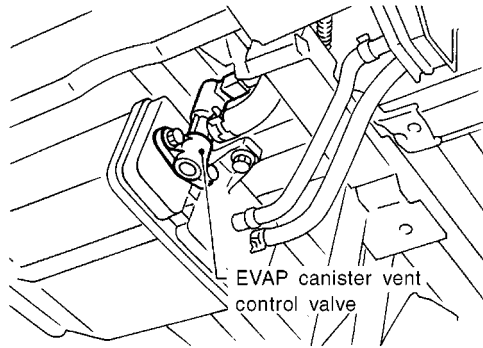

SEF143S

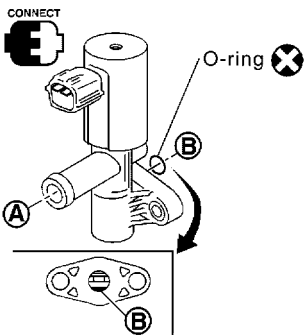

ACTIVE TEST	
VENT CONTROL/V	OFF
MONITOR	
CMPS-RPM (REF)	XXX rpm
FR O2 MNTR	RICH
A/F ALPHA	XXX %
THRTL POS SEN	XXX V

Condition VENT CONTROL/V	Air passage continuity between A and B
ON	No
OFF	Yes

SEF172X

OK or NG

OK	▶	GO TO 13.
NG	▶	Replace EVAP canister vent control valve.


12	CHECK EVAP CANISTER VENT CONTROL VALVE						
<p> Without CONSULT-II Check air passage continuity shown in the figure.</p>							
AEC783A							
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Condition</th> <th style="width: 50%;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">No</td> </tr> <tr> <td>No supply</td> <td style="text-align: center;">Yes</td> </tr> </tbody> </table>		Condition	Air passage continuity between A and B	12V direct current supply between terminals 1 and 2	No	No supply	Yes
Condition	Air passage continuity between A and B						
12V direct current supply between terminals 1 and 2	No						
No supply	Yes						
MTBL0297							
<p>If NG or operation takes more than 1 second, clean valve using air blower or replace as necessary. If the portion B is rusted, replace EVAP canister vent control valve. Make sure new O-ring is installed properly.</p>							
OK or NG							
OK	▶	GO TO 13.					
NG	▶	Replace EVAP canister vent control valve.					

13	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.		
	▶	INSPECTION END

DTC P1706 PARK/NEUTRAL POSITION (PNP) SWITCH

KA24DE

Component Description

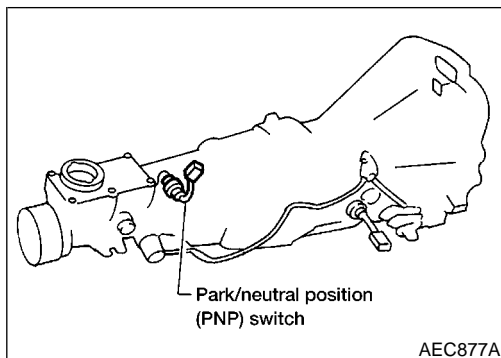

Component Description

When the gear position is in "P" (A/T models only or "N", park/neutral position (PNP) switch is "ON".

ECM detects the park/neutral position when continuity with ground exists.

For A/T models, the park/neutral position (PNP) switch assembly also includes a transmission range switch to detect selector lever position.

CONSULT-II Reference Value in Data Monitor Mode

Specification data are reference values.

NEEC1216

MONITOR ITEM	CONDITION	SPECIFICATION
P/N POSI SW	● Ignition switch: ON	ON
	Except above	OFF

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

NEEC1217

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
22	L/B	PNP switch	[Ignition switch ON]	Approximately 0V
			<ul style="list-style-type: none"> ● Gear position is "N" or "P" (A/T models) ● Gear position is "Neutral" (M/T models) 	
			[Ignition switch ON]	Approximately 5V
			<ul style="list-style-type: none"> ● Except the above gear position 	

On Board Diagnosis Logic

NEEC1218

DTC No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1706 1003	<ul style="list-style-type: none"> ● The signal of the PNP switch is not changed in the process of engine starting and driving. 	<ul style="list-style-type: none"> ● Harness or connectors (The PNP switch circuit is open or shorted.) ● PNP switch

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC Confirmation Procedure

=NEEC1219

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

④ With CONSULT-II

1) Turn ignition switch ON.

5

DATA MONITOR	
MONITORING	NO FAIL
CMPS~RPM(REF) XXX rpm	
COOLAN TEMP/S XXX °C	
VHCL SPEED SE XXX km/h	
P/N POSI SW OFF	
B/FUEL SCHDL XXX msec	

PEF726W

2) Select "P/N POSI SW" in "DATA MONITOR" mode with CONSULT-II. Then check the "P/N POSI SW" signal under the following conditions.

Position (Selector lever)	Known good signal
"P" or "N"	ON
Except the above position	OFF

If NG, go to "Diagnostic Procedure", EC-545.

If OK, go to following step.

3) Select "DATA MONITOR" mode with CONSULT-II.

4) Start engine and warm it up to normal operating temperature.

5) Maintain the following conditions for at least 60 consecutive seconds.


CMPS-RPM (REF)	1,800 - 3,200 rpm
COOLAN TEMP/S	More than 70°C (158°F)
B/FUEL SCHDL	1.0 - 5.3 msec
VHCL SPEED SE	70 - 100 km/h (43 - 62 MPH)
Selector lever	Suitable position

6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-545.

DTC P1706 PARK/NEUTRAL POSITION (PNP) SWITCH

KA24DE

Overall Function Check

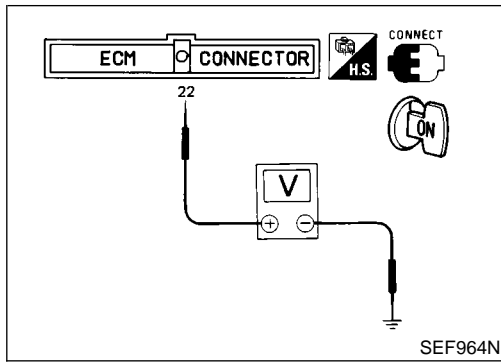

Overall Function Check

=NEEC1220

Use this procedure to check the overall function of the park/neutral position switch circuit. During this check, a 1st trip DTC might not be confirmed.

⊗ Without CONSULT-II

- 1) Turn ignition switch ON.
- 2) Check voltage between ECM terminal 22 (PNP switch signal) and body ground under the following conditions.

Condition (Gear position)	Voltage (V) (Known good data)
"P" or "N" position	Approx. 0
Except the above position	Approx. 5

- 3) If NG, go to "Diagnostic Procedure", EC-545.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX



Wiring Diagram

NEEC1221

EC-PNP/SW-01



- : With theft warning system
- : Without theft warning system
- : With A/T
- : With M/T

- : Detectable line for DTC
- : Non-detectable line for DTC

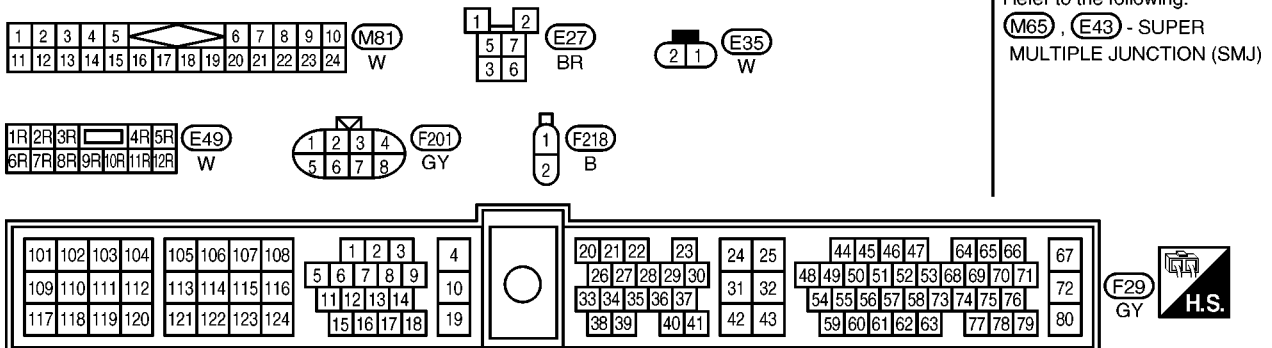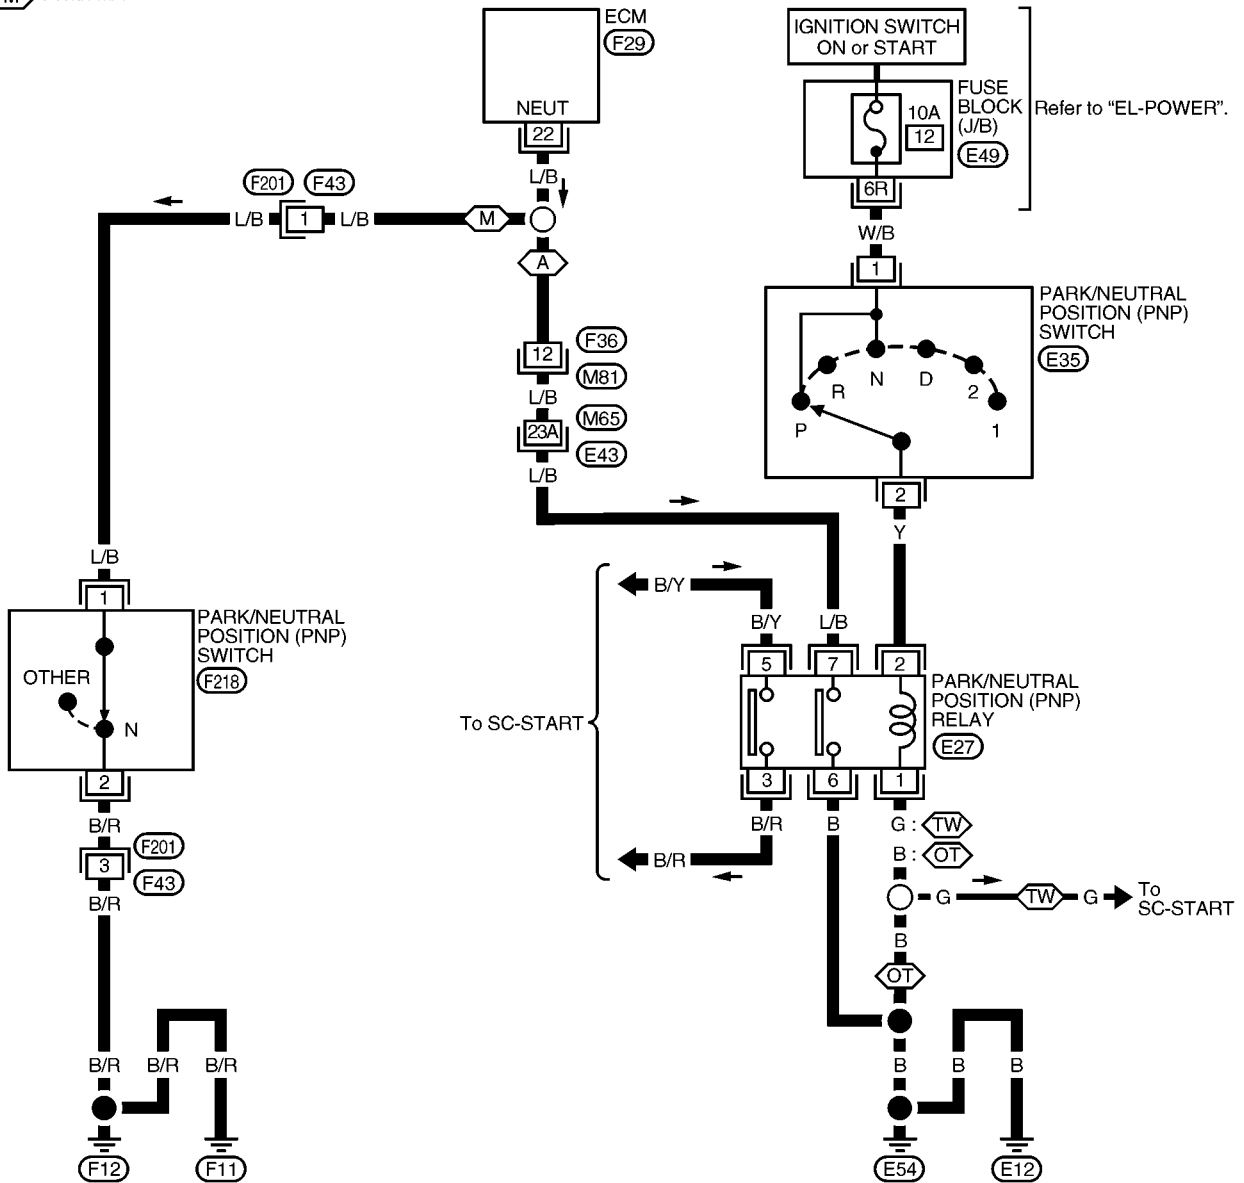

Diagnostic Procedure

NEEC1222

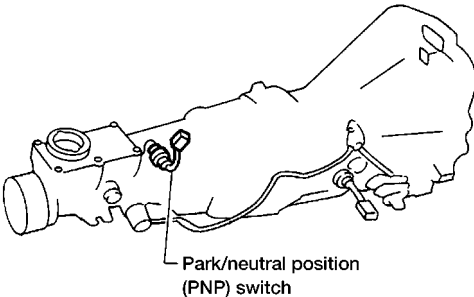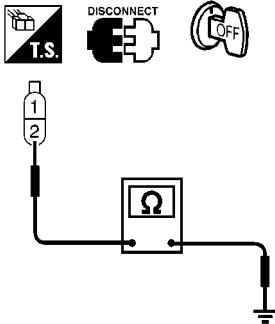1	CHECK GROUND CIRCUIT		
		<p>1. Turn ignition switch OFF. 2. Disconnect park neutral position (PNP) switch harness connector.</p> <div style="text-align: center;">  <p>Park/neutral position (PNP) switch</p> </div> <p style="text-align: right;">AEC877A</p> <p>3. Check harness continuity between terminal 2 and body ground.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF218V</p> <p>Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>TF</p> <p>PD</p>
OK	▶	GO TO 3.	AX
NG	▶	GO TO 2.	

2	DETECT MALFUNCTIONING PART		
		<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E33, E201 ● Harness for open or short between PNP switch and body ground 	<p>SU</p> <p>BR</p>
	▶	Repair open circuit or short to ground or short to power in harness or connectors.	ST

3	CHECK INPUT SIGNAL CIRCUIT		
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 22 and terminal 1.</p>			
SEF219V			
<p>Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>			
OK	▶	GO TO 5.	
NG	▶	GO TO 4.	

4	DETECT MALFUNCTIONING PART		
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F36, M81 ● Harness connectors M65, E43 ● Harness connectors E33, E201 ● Harness for open or short between ECM and PNP switch 			
▶		Repair open circuit or short to ground or short to power in harness or connectors.	

5	CHECK PNP SWITCH		
Refer to MT-9 .			
OK or NG			
OK	▶	GO TO 6.	
NG	▶	Replace PNP switch.	

6	CHECK INTERMITTENT INCIDENT		
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.			
▶		INSPECTION END	

DTC P1775 TORQUE CONVERTER CLUTCH SOLENOID VALVE (CIRCUIT)

KA24DE

System Description

System Description

NEEC1271

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	Torque converter lock-up control	Torque converter clutch solenoid valve
Engine coolant temperature sensor	Engine coolant temperature		
Throttle position sensor	Throttle position		

The ECM controls torque converter clutch solenoid valve to cancel the lock-up condition of A/T. When the solenoid valve is **turned on**, lock-up is **cancelled**. When the solenoid valve is turned off, A/T lock-up is operational.

Conditions for lock-up cancel:

Torque converter clutch solenoid valve is turned "ON" when;

- Throttle valve is fully closed (during idling or deceleration)
- Engine coolant temperature is below 40°C (104°F)
- Engine is stopped

Conditions for lock-up operation:

- Under 55 to 63 km/h (34 to 39 MPH) (2/8 throttle on flat road), lock-up does not operate even when the torque converter clutch solenoid valve is "OFF".
- Over 58 to 66 km/h (36 to 41 MPH) (2/8 throttle on flat road), lock-up should operate because the torque converter clutch solenoid valve is "OFF".

To confirm vehicle lock-up, the torque converter clutch solenoid valve must be in operation ("ON" during idle and deceleration, and "OFF" during acceleration) and engine speed should drop. When the accelerator pedal is depressed (less than 2/8) in lock-up, the engine speed should not change abruptly. If there is a big jump in engine speed, there will be no lock up.

CONSULT-II Reference Value in Data Monitor Mode

NEEC1273

MONITOR ITEM	CONDITON	SPECIFICATION
TCC SOL/V	● Engine: After warming up	Idle
		2,000 rpm

ECM Terminals and Reference Value

NEEC1275

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
115	L/Y	Torque converter clutch solenoid valve (A/T models only)	[Engine is running] ● Idle Speed	Approximately 1V
			● [Engine is running] ● Warm-up condition ● Engine speed is 2,000 rpm	BATTERY VOLTAGE (11 - 14v)

DTC P1775 TORQUE CONVERTER CLUTCH SOLENOID VALVE (CIRCUIT)


KA24DE

On Board Diagnosis Logic

On Board Diagnosis Logic

NEEC1276

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1775 0904	<ul style="list-style-type: none"> ● An excessively low voltage from the solenoid is sent to ECM. 	<ul style="list-style-type: none"> ● Harness or connectors (The circuit is open or shorted). ● Torque converter clutch solenoid valve

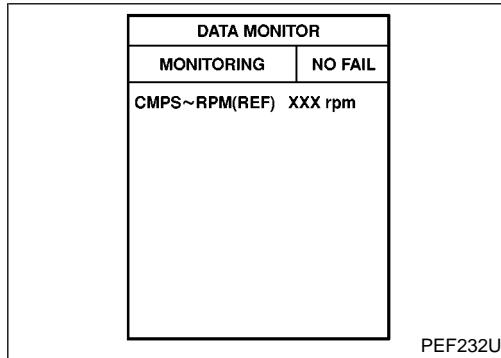

DTC Confirmation Procedure

NEEC1277

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 5 seconds.
- 4) if 1st trip DTC is detected, go to "Diagnostic Procedure", EC-548.

With GST

Follow the procedure "With CONSULT-II".

DTC P1775 TORQUE CONVERTER CLUTCH SOLENOID VALVE (CIRCUIT)


KA24DE

Wiring Diagram

Wiring Diagram




NEEC1278

EC-LKUP-01

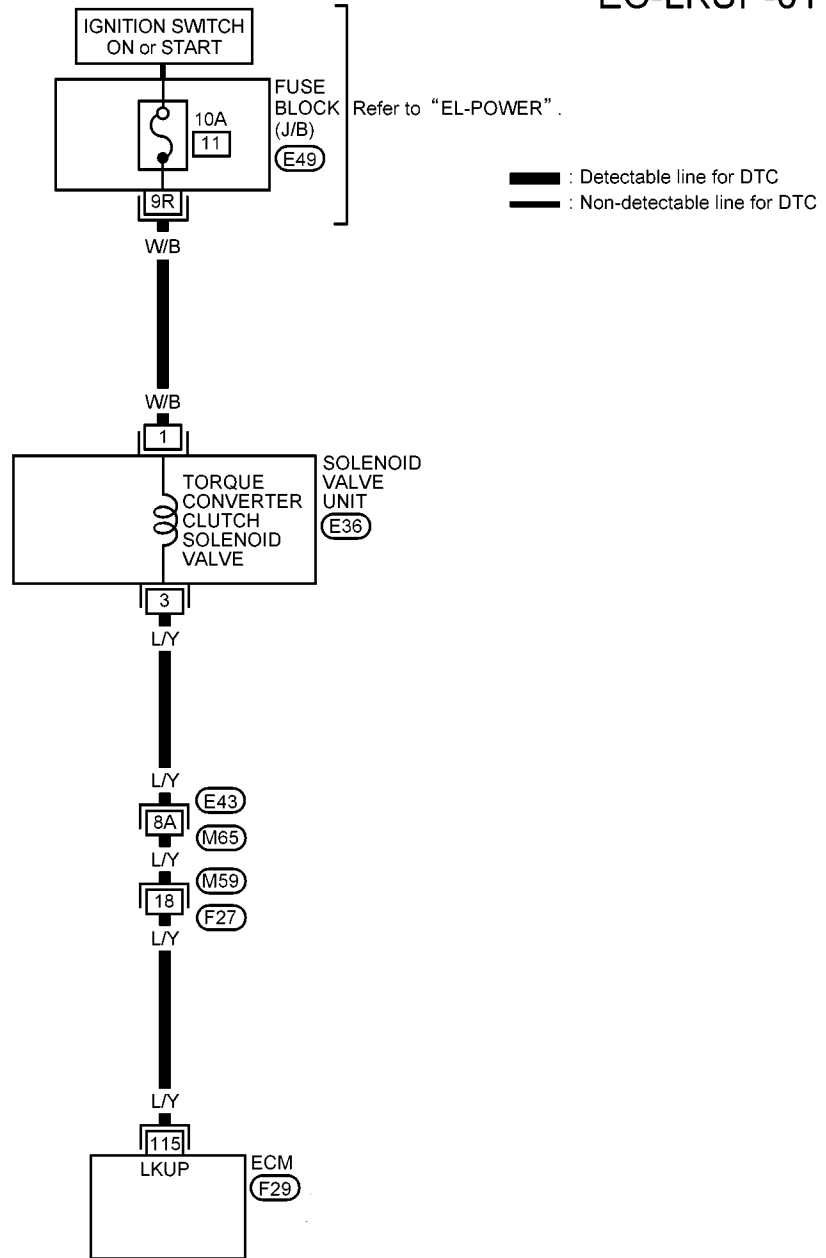

Refer to last page (Foldout page)

M65, E43

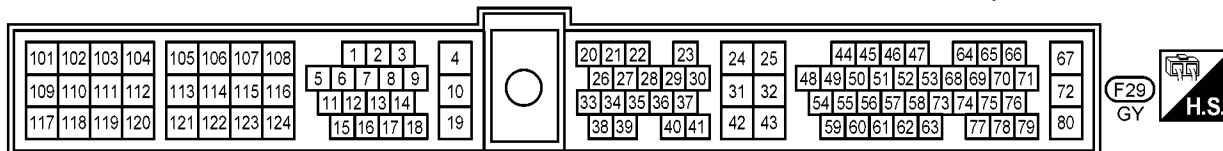

AEC546A

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX



DTC P1775 TORQUE CONVERTER CLUTCH SOLENOID VALVE (CIRCUIT)

KA24DE

Diagnostic Procedure

Diagnostic Procedure

NEEC1279

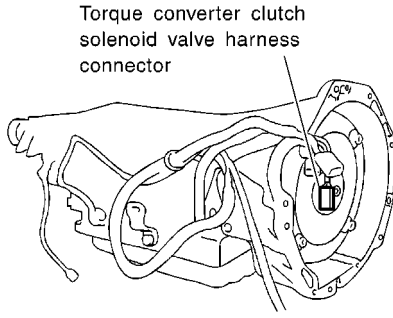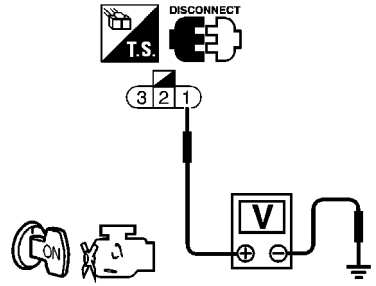1	CHECK POWER SUPPLY								
		<p>1. Disconnect torque converter clutch solenoid valve harness connector.</p> <div style="text-align: center;">  <p>Torque converter clutch solenoid valve harness connector</p> </div>							
		<p>2. Turn ignition switch "ON".</p> <p>3. Check voltage between terminal 1 and ground with CONSULT-II or tester.</p>	SEF507V						
									
		Voltage: Battery voltage	SEF422V						
		OK or NG							
		<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td style="width: 75%;">GO TO 3..</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 2..</td> </tr> </table>	OK	▶	GO TO 3..	NG	▶	GO TO 2..	
OK	▶	GO TO 3..							
NG	▶	GO TO 2..							

2	DETECT MALFUNCTIONING PART		
		<p>Check the following.</p> <ul style="list-style-type: none"> ● 10A fuse ● Harness continuity between torque converter clutch solenoid valve and 10A fuse 	
		▶ Repair harness or connectors.	

DTC P1775 TORQUE CONVERTER CLUTCH SOLENOID VALVE (CIRCUIT)

KA24DE

Diagnostic Procedure (Cont'd)

3	CHECK OUTPUT SIGNAL CIRCUIT	<p>1. Turn ignition switch "OFF" 2. Disconnect ECM harness connector. 3. Check voltage between terminal 115 and terminal 3.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SEF232V</p>	GI MA EM LC EC FE CL
		<p>Continuity should exist.</p> <p style="margin-left: 100px;">OK or NG</p>	
		OK ▶ GO TO 5..	
		NG ▶ GO TO 4..	

4	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M59, F27 ● Harness continuity between torque converter clutch solenoid valve and ECM 	MT AT TF
		▶ Repair open circuit, short to ground or short to power in harness or connectors.	

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P1775 TORQUE CONVERTER CLUTCH SOLENOID VALVE (CIRCUIT)

KA24DE

Diagnostic Procedure (Cont'd)

5	CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE
<p>1. Check resistance between torque converter clutch solenoid valve terminals 1 and 3.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SEF233V</p>	
<p>Resistance: Approximately 25Ω [at 25°C (77°F)]</p> <p>2. Remove torque converter clutch solenoid valve. Refer to "ON-VEHICLE SERVICE" in AT section</p> <p>3. Supply the solenoid valve terminals 1 and 3 with battery voltage and check the solenoid valve operation.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SEF273V</p>	
<p>Torque converter clutch solenoid valve should be operated.</p> <p>OK or NG</p>	
OK	▶ GO TO 6..
NG	▶ Replace torque converter clutch solenoid valve.

6	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTEMITTENT INCIDENT", EC-550.	
▶	INSPECTION END

DTC P1776 TORQUE CONVERTER CLUTCH SOLENOID VALVE

KA24DE

System Description

System Description

ECM controls torque converter clutch solenoid valve with the signals below. NEEC1272

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	Torque converter lock-up control	Torque converter clutch solenoid valve
Engine coolant temperature sensor	Engine coolant temperature		
Throttle position sensor	Throttle position		
Vehicle speed sensor *1	Vehicle speed		

*1: This signal is used only for diagnosis.

The ECM controls torque converter clutch solenoid valve to cancel the lock-up condition of A/T. When the solenoid valve is **turned on**, lock-up is **cancelled**. When the solenoid valve is turned off, A/T lock-up is operational.

Conditions for lock-up cancel:

Torque converter clutch solenoid valve is turned "ON" when;

- Throttle valve is fully closed (during idling or deceleration)
- Engine coolant temperature is below 40°C (104°F)
- Engine is stopped

Conditions for lock-up operation:

- Under 55 to 63 km/h (34 to 39 MPH) (2/8 throttle on flat road), lock-up does not operate even when the torque converter clutch solenoid valve is "OFF".
- Over 58 to 66 km/h (36 to 41 MPH) (2/8 throttle on flat road), lock-up should operate because the torque converter clutch solenoid valve is "OFF".

To confirm vehicle lock-up, the torque converter clutch solenoid valve must be in operation ("ON" during idle and deceleration, and "OFF" during acceleration) and engine speed should drop. When the accelerator pedal is depressed (less than 2/8) in lock-up, the engine speed should not change abruptly. If there is a big jump in engine speed, there will be no lock up.

CONSULT-II Reference Value in Data Monitor Mode

NEEC1274

MONITOR ITEM	CONDITON		SPECIFICATION
TCC SOL/V	● Engine: After warming up	Idle	ON
		2,000 rpm	OFF

DTC P1776 TORQUE CONVERTER CLUTCH SOLENOID VALVE

KA24DE

ECM Terminals and Reference Value

ECM Terminals and Reference Value

NEEC1280

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
115	L/Y	Torque converter clutch solenoid valve (A/T models only)	[Engine is running] ● Idle Speed	Approximately 1V
			● [Engine is running] ● Warm-up condition ● Engine speed is 2,000 rpm	BATTERY VOLTAGE (11 - 14v)

On Board Diagnosis Logic

NEEC1281

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
P1776 0513	● A/T torque converter slip has occurred in lock-up condition.	<ul style="list-style-type: none"> ● Torque converter clutch solenoid valve ● A/T hydraulic control system ● Torque converter

TCS S/V FNCTN P1776	
OUT OF CONDITION	
MONITOR	
CMPS~RPM(REF)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF859U

TCC S/V FNCTN P1776	
TESTING	
MONITOR	
CMPS~RPM(REF)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF235V

TCC S/V FNCTN P1776	
COMPLETED	

PEF861U

DTC Confirmation Procedure

NEEC1282

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Always perform at a temperature above -10°C (14°F).

④ With Consult-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Start engine.
- 4) Select "TCC S/V FNCTN P1776" of "A/T (TCC S/V) in DTC WORK SUPPORT" mode with CONSULT-II.
- 5) Touch "START".
- 6) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 20 seconds.)

Selector lever	D (OD "ON")	
Vehicle speed	76 - 100 km/h (47 - 62 MPH)	
CMPS-RPM (REF)	Single cab model	Less than 2,150 rpm
	King cab model	Less than 2,300 rpm
B/FUEL SCHDL	2.5 - 5 msec	
THRTL POS SEN	Less than 1.3V	

If "TESTING" is not displayed after 5 minutes, retry from step 2).

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG"

DTC P1776 TORQUE CONVERTER CLUTCH SOLENOID VALVE

KA24DE

DTC Confirmation Procedure (Cont'd)

RESULTS".

If "NG" is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-554.

 **With GST**

Follow the procedure "With CONSULT-II".

GI



MA

EM

LC

Diagnostic Procedure

NEEC1283

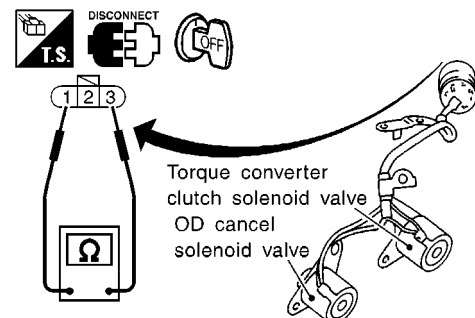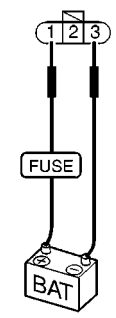1	CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE	EC
<p>1. Check resistance between torque converter clutch solenoid valve terminals 1 and 3.</p> <div style="text-align: center;">  <p>Torque converter clutch solenoid valve OD cancel solenoid valve</p> </div> <p>Resistance: Approximately 25Ω [at 25°C (77°F)]</p> <p>2. Remove torque converter clutch solenoid valve. Refer to "ON-VEHICLE SERVICE" in AT section.</p> <p>3. Supply the solenoid valve terminals 1 and 3 with battery voltage and check the solenoid valve operation.</p> <div style="text-align: center;">  </div> <p>Torque converter clutch solenoid valve should be operated.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶ EC-556	
NG	▶ Replace torque converter clutch solenoid valve.	

SEF233V

SEF234V

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX

DTC P1776 TORQUE CONVERTER CLUTCH SOLENOID VALVE

KA24DE

Diagnostic Procedure (Cont'd)

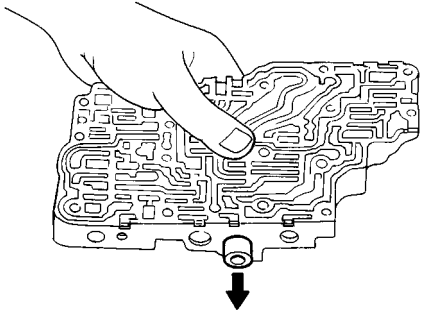2	CHECK TORQUE CONVERTER CLUTCH CONTROL VALVE	
<p>1. Disassemble torque converter clutch control valve assembly. Refer to "REPAIR FOR COMPONENTS PARTS" in AT section.</p> <p>2. Check torque converter clutch control valve.</p> <ul style="list-style-type: none"> ● Valve, and sleeve slide along valve bore under their own weight. ● Valve, and sleeve slide along valve bore under thei own weight. ● Valve, and sleeve are free from burrs, dents and scratches. ● Control valve springs are free from damage, deformation and fatigue. ● Hydraulic line is free from obstacles. 		
		
SAT740H		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Replace torque converter clutch control valve.

3	CHECK VEHICLE SPEED SENSOR SIGANL	
Check vehicle speed signal with CONSULT or speedometer if it shows an actual vehicle speed.		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Check The following: Vehicle speed sensor, Vehicle speed sensor driven gear. If NG, replace parts

4	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-555.		
▶		INSPECTION END

On Board Diagnosis Logic

NEEC1223


If the cooling fan or another component in the cooling system malfunctions, engine coolant temperature will rise.
When the engine coolant temperature reaches an abnormally high temperature condition, a malfunction is indicated.

Diagnostic Trouble Code No.	Malfunction is detected when ...	Check Items (Possible Cause)
OVERHEAT 0208	<ul style="list-style-type: none"> ● Engine coolant temperature reaches an abnormally high temperature. 	<ul style="list-style-type: none"> ● Harness or connectors (The cooling fan circuit is open or shorted.) ● Cooling fan ● Radiator hose ● Radiator ● Radiator cap ● Water pump ● Thermostat <p>For more information, refer to "MAIN 12 CAUSES OF OVERHEATING", EC-561.</p>

CAUTION:

When a malfunction is indicated, be sure to replace the coolant following the procedure in the MA section ("Changing Engine Coolant", "ENGINE MAINTENANCE"). Also, replace the engine oil.

- 1) Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute. Be sure to use coolant with the proper mixture ratio. Refer to MA section ("Anti-freeze Coolant Mixture Ratio", "RECOMMENDED FLUIDS AND LUBRICANTS").
- 2) After refilling coolant, run engine to ensure that no water-flow noise is emitted.

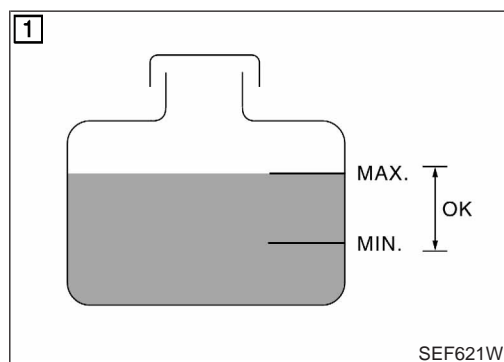

Overall Function Check

NEEC1224

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high pressure fluid escaping from the radiator.


Wrap a thick cloth around cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.


Ⓜ **With CONSULT-II**


- 1) Check the coolant level in the reservoir tank and radiator.
Allow engine to cool before checking coolant level.
If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to "Diagnostic Procedure", EC-558.
- 2) Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to "Diagnostic Procedure", EC-558.

Diagnostic Procedure

NEEC1225

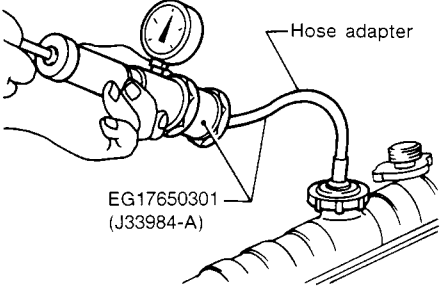
1	CHECK COOLING SYSTEM FOR LEAK	
Apply pressure to the cooling system with a tester, and check if the pressure drops. Testing pressure: 157 kPa (1.6 kg/cm², 23 psi) CAUTION: Higher than the specified pressure may cause radiator damage.		
		
SLC754A		
Pressure should not drop.		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Check the following for leak. <ul style="list-style-type: none"> ● Hose ● Radiator ● Water pump Refer to LC section ("Water Pump").

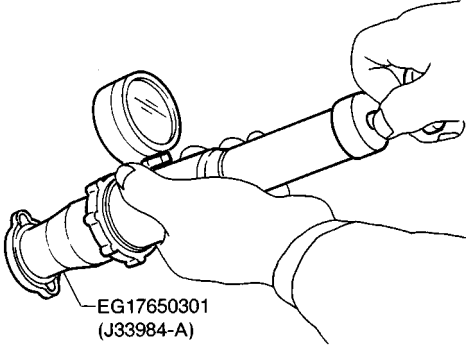2	CHECK RADIATOR CAP	
Apply pressure to cap with a tester.		
		
SLC755A		
Radiator cap relief pressure: 78 - 98 kPa (0.8 - 1.0 kg/cm², 11 - 14 psi)		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Replace radiator cap.

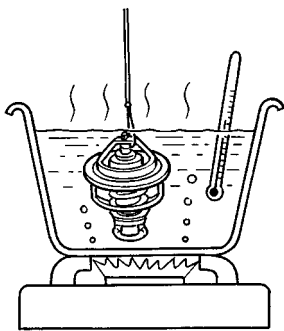3	CHECK THERMOSTAT	<p>1. Check valve seating condition at normal room temperatures. It should seat tightly.</p> <p>2. Check valve opening temperature and valve lift.</p> <div style="text-align: center; margin: 10px 0;">  </div> <p style="text-align: right; margin-right: 20px;">SLC343</p> <p>Valve opening temperature: 76.5°C (170°F) [standard]</p> <p>Valve lift: More than 8 mm/90°C (0.31 in/194°F)</p> <p>3. Check if valve is closed at 5°C (9°F) below valve opening temperature. For details, refer to LC section ("Thermostat").</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	GI MA EM LC <div style="background-color: black; color: white; padding: 5px; text-align: center;">EC</div> FE CL MT AT TF PD AX SU BR ST RS BT HA SC EL IDX
OK	▶	GO TO 4.	
NG	▶	Replace thermostat	

4 CHECK ENGINE COOLANT TEMPERATURE SENSOR


Check resistance as shown in the figure.

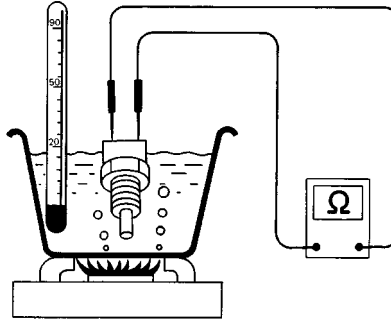

<Reference data>

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

SEF152P

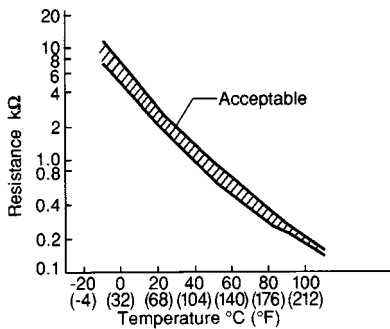

MTBL0285

SEF012P

OK or NG

OK	▶	GO TO 5.
NG	▶	Replace engine coolant temperature sensor.

5 CHECK MAIN 12 CAUSES

If the cause cannot be isolated, go to "MAIN 12 CAUSES OF OVERHEATING", EC-561.

▶ **INSPECTION END**

Perform FINAL CHECK by the following procedure after repair is completed.

1. Warm up engine. Run the vehicle for at least 20 minutes. Pay attention to engine coolant temperature gauge on the instrument panel. If the reading shows an abnormally high temperature, another part may be malfunctioning.
2. Stop vehicle and let engine idle. Check the intake and exhaust systems for leaks by listening for noise or visually inspecting the components.
3. Allow engine to cool and visually check for oil and coolant leaks. Then, perform "OVERALL FUNCTION CHECK".

TROUBLE DIAGNOSIS FOR OVERHEAT

KA24DE

Main 11 Causes of Overheating

Main 11 Causes of Overheating

NEEC1226

Engine	Step	Inspection item	Equipment	Standard	Reference page
OFF	1	<ul style="list-style-type: none"> Blocked radiator Blocked condenser Blocked radiator grille Blocked bumper 	<ul style="list-style-type: none"> Visual 	No blocking	—
	2	<ul style="list-style-type: none"> Coolant mixture 	<ul style="list-style-type: none"> Coolant tester 	50 - 50% coolant mixture	See "RECOMMENDED FLUIDS AND LUBRICANTS" in MA section.
	3	<ul style="list-style-type: none"> Coolant level 	<ul style="list-style-type: none"> Visual 	Coolant up to MAX level in reservoir tank and radiator filler neck	See "Changing Engine Coolant", "ENGINE MAINTENANCE" in MA section.
	4	<ul style="list-style-type: none"> Radiator cap 	<ul style="list-style-type: none"> Pressure tester 	78 - 98 kPa (0.8 - 1.0 kg/cm ² , 11 - 14 psi) 59 - 98 kPa (0.6 - 1.0 kg/cm ² , 9 - 14 psi) (Limit)	See "System Check", "ENGINE COOLING SYSTEM" in LC section.
ON*2	5	<ul style="list-style-type: none"> Coolant leaks 	<ul style="list-style-type: none"> Visual 	No leaks	See "System Check", "ENGINE COOLING SYSTEM" in LC section.
ON*2	6	<ul style="list-style-type: none"> Thermostat 	<ul style="list-style-type: none"> Touch the upper and lower radiator hoses 	Both hoses should be hot	See "Thermostat" and "Radiator", "ENGINE COOLING SYSTEM" in LC section.
OFF	7	<ul style="list-style-type: none"> Combustion gas leak 	<ul style="list-style-type: none"> Color checker chemical tester 4 Gas analyzer 	Negative	—
ON*3	8	<ul style="list-style-type: none"> Coolant temperature gauge 	<ul style="list-style-type: none"> Visual 	Gauge less than 3/4 when driving	—
		<ul style="list-style-type: none"> Coolant overflow to reservoir tank 	<ul style="list-style-type: none"> Visual 	No overflow during driving and idling	See "Changing Engine Coolant", "ENGINE MAINTENANCE" in MA section.
OFF*4	9	<ul style="list-style-type: none"> Coolant return from reservoir tank to radiator 	<ul style="list-style-type: none"> Visual 	Should be initial level in reservoir tank	See "ENGINE MAINTENANCE" in MA section.
OFF	10	<ul style="list-style-type: none"> Cylinder head 	<ul style="list-style-type: none"> Straight gauge feeler gauge 	0.1 mm (0.004 in) Maximum distortion (warping)	See "Inspection", "CYLINDER HEAD" in EM section.
	11	<ul style="list-style-type: none"> Cylinder block and pistons 	<ul style="list-style-type: none"> Visual 	No scuffing on cylinder walls or piston	See "Inspection", "CYLINDER BLOCK" in EM section.

*1: Turn the ignition switch ON.


*2: Engine running at 3,000 rpm for 10 minutes.

*3: Drive at 90 km/h (55 MPH) for 30 minutes and then let idle for 10 minutes.

*4: After 60 minutes of cool down time.

For more information, refer to "OVERHEATING CAUSE ANALYSIS" in LC section.

Component Description

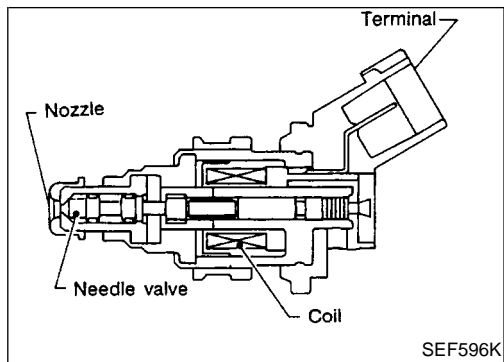

Component Description

The fuel injector is a small, precise solenoid valve. When the ^{NEEC1227}ECM supplies a ground to the injector circuit, the coil in the injector is energized. The energized coil pulls the needle valve back and allows fuel to flow through the injector into the intake manifold. The amount of fuel injected depends upon the injection pulse duration. Pulse duration is the length of time the injector remains open. The ECM controls the injection pulse duration based on engine fuel needs.

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 32 (ECM ground). ^{NEEC1228}

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
102 104 109 111	W/B W/R W/L W/PU	Injector No. 1 Injector No. 3 Injector No. 2 Injector No. 4	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	<p>BATTERY VOLTAGE (11 - 14V)</p> <p style="text-align: right;">SEF011W</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm 	<p>BATTERY VOLTAGE (11 - 14V)</p> <p style="text-align: right;">SEF012W</p>





INJECTOR

KA24DE
Wiring Diagram

Wiring Diagram

NEEC1229

EC-INJECT-01

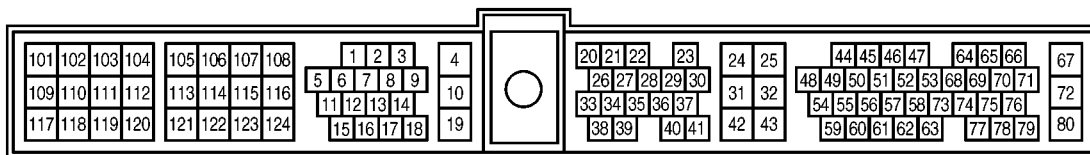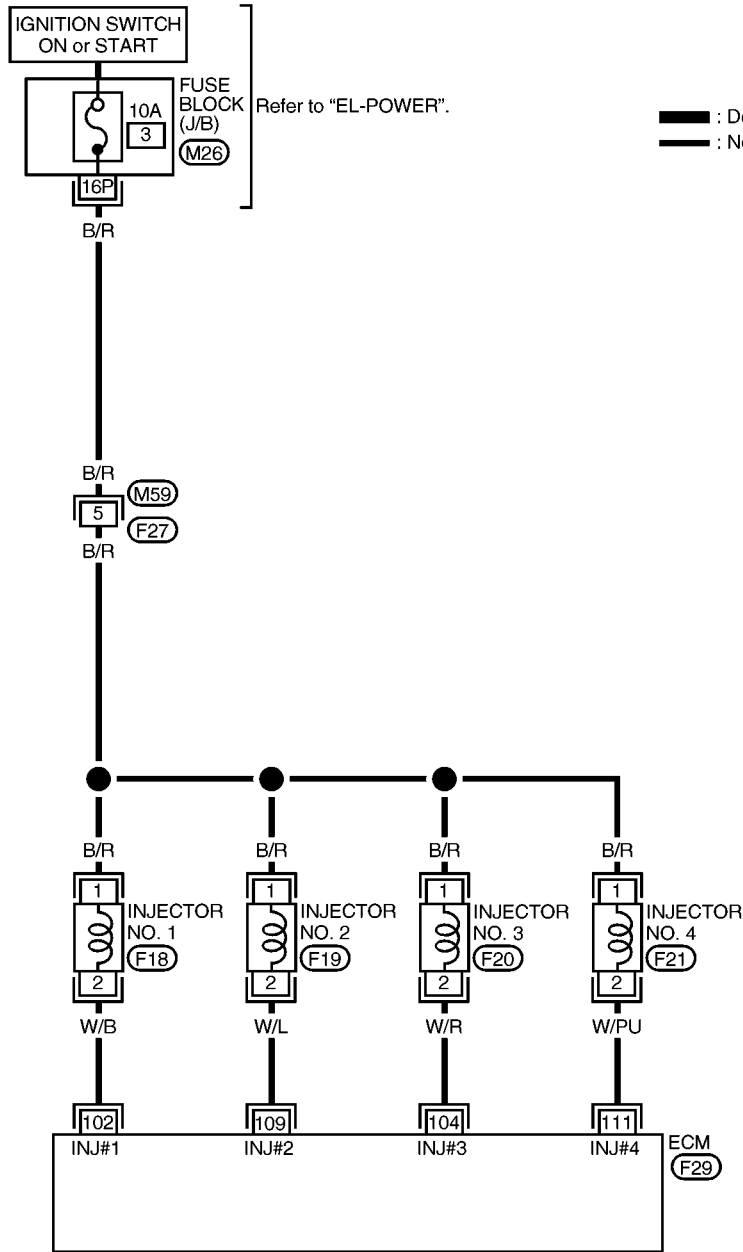




AEC009B

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Diagnostic Procedure

NEEC1230

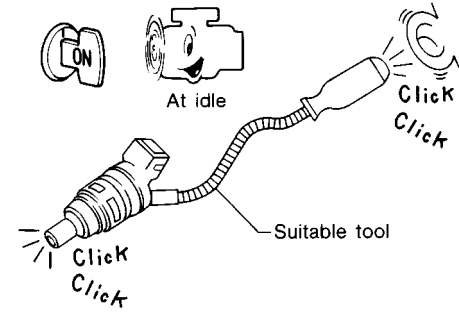1	CHECK OVERALL FUNCTION																				
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine. 2. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II. 																					
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td>SELF-LEARN CONTROL</td> <td>XXX %</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>CMPS~RPM (REF)</td> <td>XXX rpm</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>FR O2 SENSOR</td> <td>XXX V</td> </tr> <tr> <td>A/F ALPHA</td> <td>XXX %</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>		ACTIVE TEST		SELF-LEARN CONTROL	XXX %	MONITOR		CMPS~RPM (REF)	XXX rpm	COOLAN TEMP/S	XXX °C	FR O2 SENSOR	XXX V	A/F ALPHA	XXX %						
ACTIVE TEST																					
SELF-LEARN CONTROL	XXX %																				
MONITOR																					
CMPS~RPM (REF)	XXX rpm																				
COOLAN TEMP/S	XXX °C																				
FR O2 SENSOR	XXX V																				
A/F ALPHA	XXX %																				
<ol style="list-style-type: none"> 3. Make sure that each circuit produces a momentary engine speed drop. 																					
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine. 2. Listen to each injector operating sound. 																					
																					
<p style="text-align: center;">Clicking noise should be heard.</p> <p style="text-align: center;">OK or NG</p>																					
OK	▶ INSPECTION END																				
NG	▶ GO TO 2.																				

PEF839V

MEC703B


2	CHECK POWER SUPPLY	<p>1. Stop engine. 2. Disconnect injector harness connector. 3. Turn ignition switch ON. 4. Check voltage between terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;"> </div> <p style="color: blue; font-weight: bold;">Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>	SEF271W
OK	▶	GO TO 4.	
NG	▶	GO TO 3.	

3	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● 10A fuse ● Harness connectors F27, M59 ● 10A fuse ● Harness for open or short between injector and fuse 	
	▶	Repair harness or connectors.	

4	CHECK OUTPUT SIGNAL CIRCUIT	<p>1. Turn ignition switch OFF. 2. Disconnect ECM harness connector. 3. Check harness continuity between injector harness connector terminal 1 and ECM terminals 102, 104, 109, 111.</p> <div style="text-align: center;"> </div> <p style="color: blue; font-weight: bold;">Continuity should exist.</p> <p style="text-align: center;">OK or NG</p>	SEF223V
OK	▶	GO TO 6.	
NG	▶	GO TO 5.	

5	DETECT MALFUNCTIONING PART	<p>Check the harness for open or short between ECM and injector.</p>	
	▶	Repair open circuit or short to ground or short to power in harness or connectors.	

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

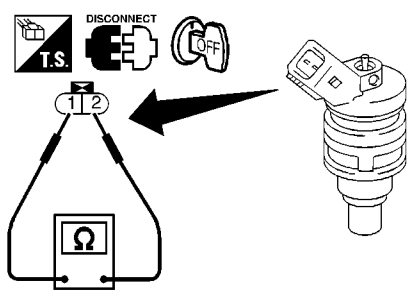6	CHECK INJECTOR	
1. Disconnect injector harness connector. 2. Check resistance between terminals as shown in the figure.		
 <p style="text-align: right;">SEF273W</p>		
OK	▶	GO TO 7.
NG	▶	Replace injector.

7	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.		
▶		INSPECTION END

START SIGNAL

KA24DE

CONSULT-II Reference Value in Data Monitor Mode

CONSULT-II Reference Value in Data Monitor Mode

NEEC1231

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
START SIGNAL	● Ignition switch: ON → START → ON	OFF → ON → OFF

ECM Terminals and Reference Value

NEEC1232

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
20	L/OR	Start signal	[Ignition switch ON]	Approximately 0V
			[Ignition switch START]	BATTERY VOLTAGE (11 - 14V)

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

START SIGNAL


KA24DE

Wiring Diagram




Wiring Diagram

NEEC1233

EC-S/SIG-01

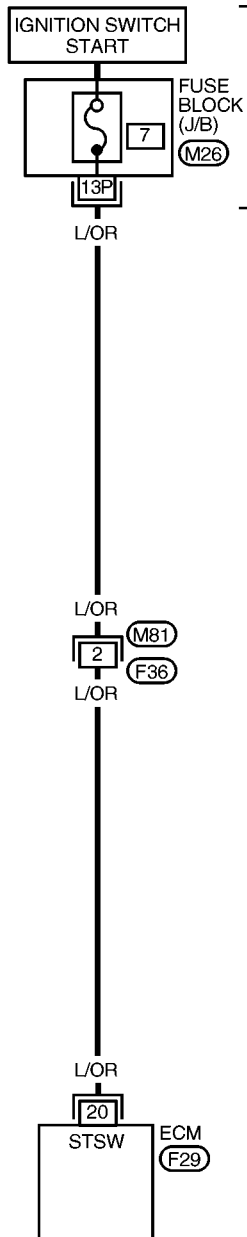

: Detectable line for DTC
 : Non-detectable line for DTC

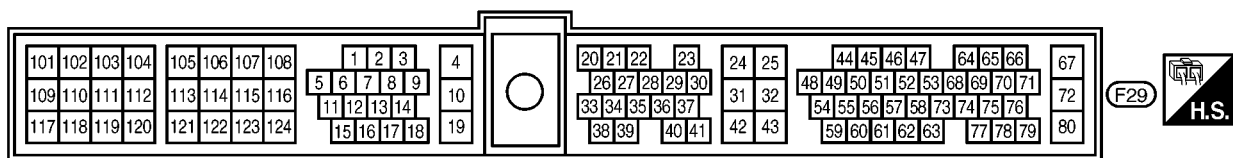

AEC010B

START SIGNAL

KA24DE


Diagnostic Procedure

Diagnostic Procedure


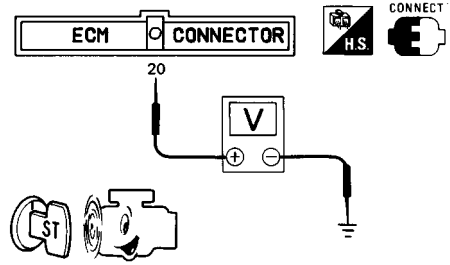
=NEEC1234

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

GI
MA
EM

2	CHECK OVERALL FUNCTION													
<p> With CONSULT-II</p> <p>1. Turn ignition switch ON.</p> <p>2. Check "START SIGNAL" in "DATA MONITOR" mode with CONSULT-II under the following conditions.</p>														
<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITORING</th> <th>NO FAIL</th> </tr> </thead> <tbody> <tr> <td>START SIGNAL</td> <td>OFF</td> </tr> <tr> <td>CLSD TH/P SW</td> <td>ON</td> </tr> <tr> <td>AIR COND SIG</td> <td>OFF</td> </tr> <tr> <td>P/N POSI SW</td> <td>ON</td> </tr> </tbody> </table>			DATA MONITOR		MONITORING	NO FAIL	START SIGNAL	OFF	CLSD TH/P SW	ON	AIR COND SIG	OFF	P/N POSI SW	ON
DATA MONITOR														
MONITORING	NO FAIL													
START SIGNAL	OFF													
CLSD TH/P SW	ON													
AIR COND SIG	OFF													
P/N POSI SW	ON													
<table border="1" style="margin: auto;"> <thead> <tr> <th>Condition</th> <th>"START SIGNAL"</th> </tr> </thead> <tbody> <tr> <td>IGN "ON"</td> <td>OFF</td> </tr> <tr> <td>IGN "START"</td> <td>ON</td> </tr> </tbody> </table>			Condition	"START SIGNAL"	IGN "ON"	OFF	IGN "START"	ON						
Condition	"START SIGNAL"													
IGN "ON"	OFF													
IGN "START"	ON													
SEF176X														
OK or NG														
OK	▶	INSPECTION END												
NG	▶	GO TO 4.												

LC
EC
FE
CL
MT
AT

3	CHECK OVERALL FUNCTION							
<p> Without CONSULT-II</p> <p>1. Turn ignition switch to START.</p> <p>2. Check voltage between ECM terminal 20 and ground under the following conditions.</p>								
								
SEF109P								
<table border="1" style="margin: auto;"> <thead> <tr> <th>Condition</th> <th>Voltage</th> </tr> </thead> <tbody> <tr> <td>Ignition switch "START"</td> <td>Battery voltage</td> </tr> <tr> <td>Except above</td> <td>Approximately 0V</td> </tr> </tbody> </table>			Condition	Voltage	Ignition switch "START"	Battery voltage	Except above	Approximately 0V
Condition	Voltage							
Ignition switch "START"	Battery voltage							
Except above	Approximately 0V							
MTBL0143								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 4.						

PD
AX
SU
BR
ST
RS
BT
HA
SC
EL

4	DETECT MALFUNCTIONING PART	
Check the 7.5A fuse.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace 7.5A fuse.

5	CHECK INPUT SIGNAL CIRCUIT	
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect ECM harness connector and 7.5A fuse. 3. Check harness continuity between ECM terminal 20 and fuse block. 		
SEF224V		
<p style="color: blue;">Continuity should exist.</p> <ol style="list-style-type: none"> 4. Also check harness for short to ground and short to power. 		
OK or NG		
OK	▶	GO TO 7.
NG	▶	GO TO 6.

6	DETECT MALFUNCTIONING PART	
Check the following.		
<ul style="list-style-type: none"> ● Harness connectors M81, F36 ● Harness for open or short between ECM and fuse block 		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

7	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.		
▶		INSPECTION END

FUEL PUMP

KA24DE

System Description


System Description

NEEC1235

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	ECM	Fuel pump relay
Ignition switch	Start signal		

The ECM activates the fuel pump for several seconds after the ignition switch is turned on to improve engine startability. If the ECM receives a 180° signal from the camshaft position sensor, it knows that the engine is rotating, and causes the pump to perform. If the 180° signal is not received when the ignition switch is on, the engine stalls. The ECM stops pump operation and prevents battery discharging, thereby improving safety. The ECM does not directly drive the fuel pump. It controls the ON/OFF fuel pump relay, which in turn controls the fuel pump.

Condition	Fuel pump operation
Ignition switch is turned to ON.	Operates for 5 seconds.
Engine running and cranking	Operates.
Except as shown above	Stops.

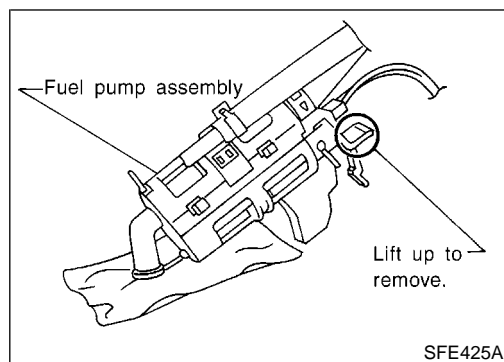

Component Description

NEEC1236

The fuel pump with a fuel damper is an in-tank type (the pump and damper are located in the fuel tank).

CONSULT-II Reference Value in Data Monitor Mode

NEEC1237

MONITOR ITEM	CONDITION	SPECIFICATION
FUEL PUMP RLY	<ul style="list-style-type: none"> Ignition switch is turned to ON (Operates for 5 seconds) Engine running and cranking 	ON
	<ul style="list-style-type: none"> Except as shown above 	OFF

ECM Terminals and Reference Value

NEEC1238




Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
11	W/R	Fuel pump relay	[Ignition switch "ON"] <ul style="list-style-type: none"> For 5 seconds after turning ignition switch "ON" [Engine is running]	0 - 1V
			[Ignition switch "ON"] <ul style="list-style-type: none"> More than 5 seconds after turning ignition switch "ON" 	BATTERY VOLTAGE (11 - 14V)

Wiring Diagram


NEEC1239



EC-F/PUMP-01

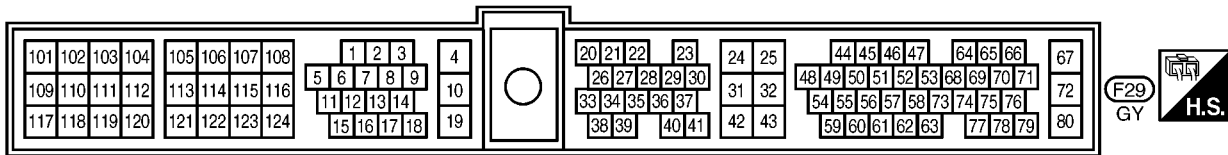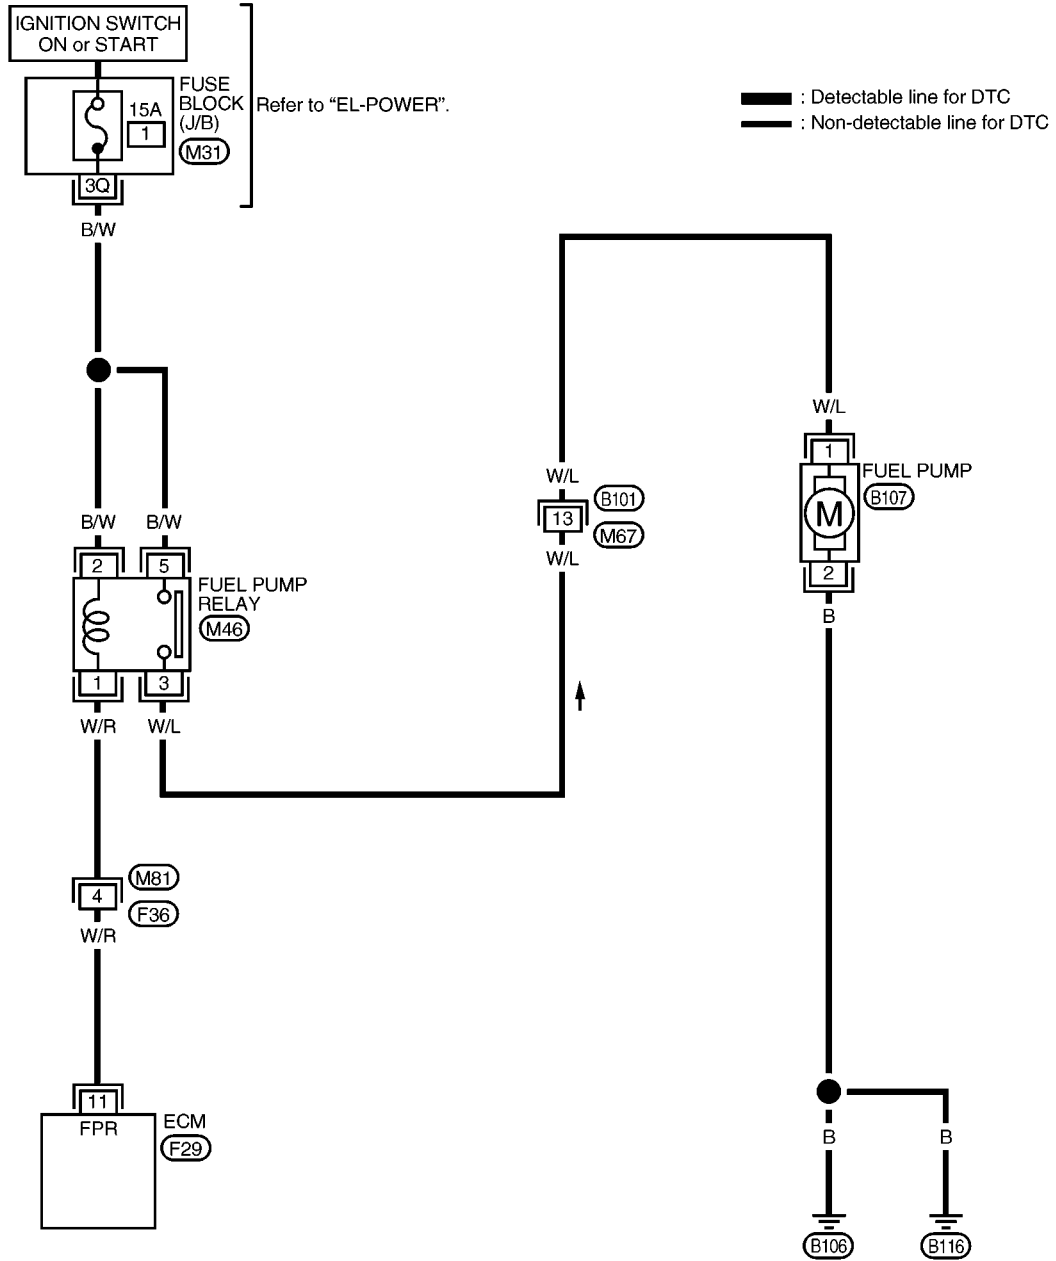



Diagnostic Procedure

NEEC1240

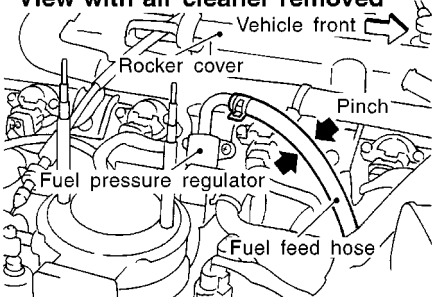1	CHECK OVERALL FUNCTION	<p>1. Turn ignition switch ON. 2. Pinch fuel feed hose with two fingers.</p> <div style="text-align: center;"> <p>View with air cleaner removed</p>  </div> <p style="text-align: right;"><small>SEF348V</small></p> <p style="text-align: center;">Fuel pressure pulsation should be felt on the fuel feed hose for 5 seconds after ignition switch is turned "ON".</p> <p style="text-align: center;">OK or NG</p>	GI MA EM LC EC FE CL MT
OK	▶	INSPECTION END	
NG	▶	GO TO 2.	

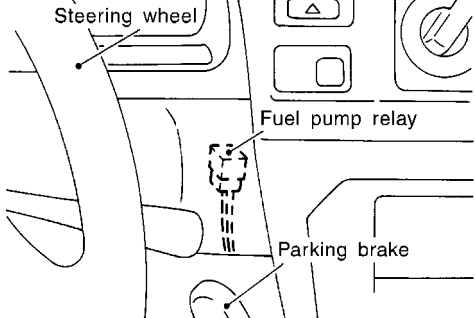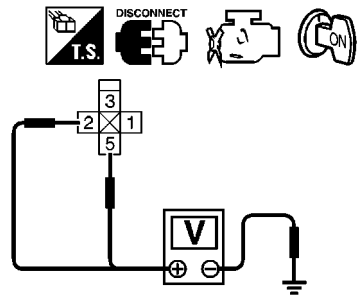2	CHECK POWER SUPPLY	<p>1. Turn ignition switch OFF. 2. Disconnect fuel pump relay.</p> <div style="text-align: center;">  </div> <p style="text-align: right;"><small>SEF349V</small></p> <p>3. Turn ignition switch ON. 4. Check voltage between terminals 2, 5 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p style="text-align: right;"><small>SEF225V</small></p> <p style="text-align: center;">Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>	AT TF PD AX SU BR ST RS BT HA SC EL IDX
OK	▶	GO TO 4.	
NG	▶	GO TO 3.	

3	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● 15A fuse ● Harness for open or short between fuse and fuel pump relay 	
▶	Repair harness or connectors.

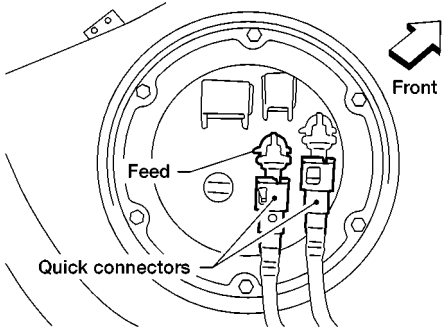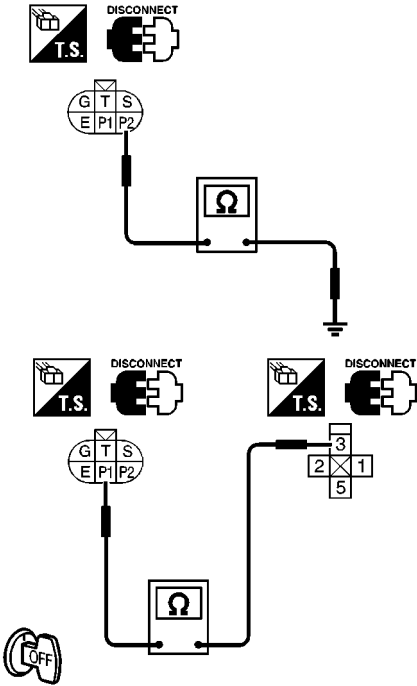4	CHECK POWER GROUND CIRCUIT
1. Turn ignition switch OFF. 2. Disconnect fuel pump harness connector.	
	
AFE095	
3. Check harness continuity between terminal P2 and body ground, terminal P1 and fuel pump relay connector terminal 3.	
	
SEF226V	
<p style="color: blue; margin-left: 20px;">Continuity should exist.</p> 4. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ GO TO 5.

FUEL PUMP

KA24DE

Diagnostic Procedure (Cont'd)

5	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors B101, M67 ● Harness for open or short between fuel pump and body ground ● Harness for open or short between fuel pump and fuel pump relay 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA

6	CHECK OUTPUT SIGNAL CIRCUIT
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 11 and fuel pump relay connector terminal 1.</p>	
<p>Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 8.
NG	▶ GO TO 7.

EM
LC

EC

FE
CL
MT

AT

TF

7	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F36, M81 ● Harness for open or short between ECM and fuel pump relay 	
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

8 CHECK FUEL PUMP RELAY

With CONSULT-II


1. Reconnect fuel pump relay, fuel pump harness connector and ECM harness connector.
2. Turn ignition switch ON.
3. Turn fuel pump relay "ON" and "OFF" in "ACTIVE TEST" mode with CONSULT-II and check operating sound.

ACTIVE TEST	
FUEL PUMP RELAY	ON
MONITOR	
CMPS~RPM(REF)	XXX rpm

SEF385X

Without CONSULT-II

Check continuity between terminals 3 and 5.

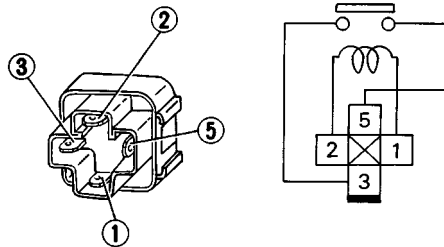

SEF511P

Conditions	Continuity
12V direct current supply between terminals 1 and 2	Yes
No current supply	No

MTBL0306

OK or NG

OK	▶	GO TO 9.
----	---	----------

NG	▶	Replace fuel pump relay.
----	---	--------------------------

9	CHECK FUEL PUMP	<p>1. Disconnect fuel pump harness connector.</p> <div style="text-align: center;"> </div>		GI
		<p>2. Check resistance between terminals P1 and P2. Resistance: 0.2 - 5.0Ω [at 25°C (77°F)]</p> <p style="text-align: center;">OK or NG</p>		MA
	OK	▶	GO TO 10.	EM
	NG	▶	Replace fuel pump.	LC

SEF228V

EC

10	CHECK INTERMITTENT INCIDENT	Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.		FE
		▶	INSPECTION END	CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX

POWER STEERING OIL PRESSURE SWITCH

KA24DE

Component Description

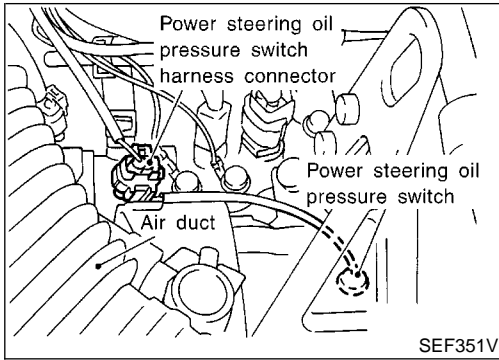

Component Description

NEEC1241

The power steering oil pressure switch is attached to the power steering high-pressure tube and detects a power steering load. When a power steering load is detected, it signals the ECM. The ECM adjusts the IACV-AAC valve to increase the idle speed and adjust for the increased load.

CONSULT-II Reference Value in Data Monitor Mode

NEEC1242

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
PW/ST SIGNAL	<ul style="list-style-type: none"> Engine: After warming up, idle the engine 	Steering wheel in neutral position (forward direction) OFF
		The steering wheel is fully turned ON

ECM Terminals and Reference Value

NEEC1243

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
39	GY/R	Power steering oil pressure switch	[Engine is running] <ul style="list-style-type: none"> Steering wheel is fully turned 	Approximately 0V
			[Engine is running] <ul style="list-style-type: none"> Steering wheel is not turned 	Approximately 5V


POWER STEERING OIL PRESSURE SWITCH

KA24DE
Wiring Diagram

Wiring Diagram

NEEC1244

EC-PST/SW-01

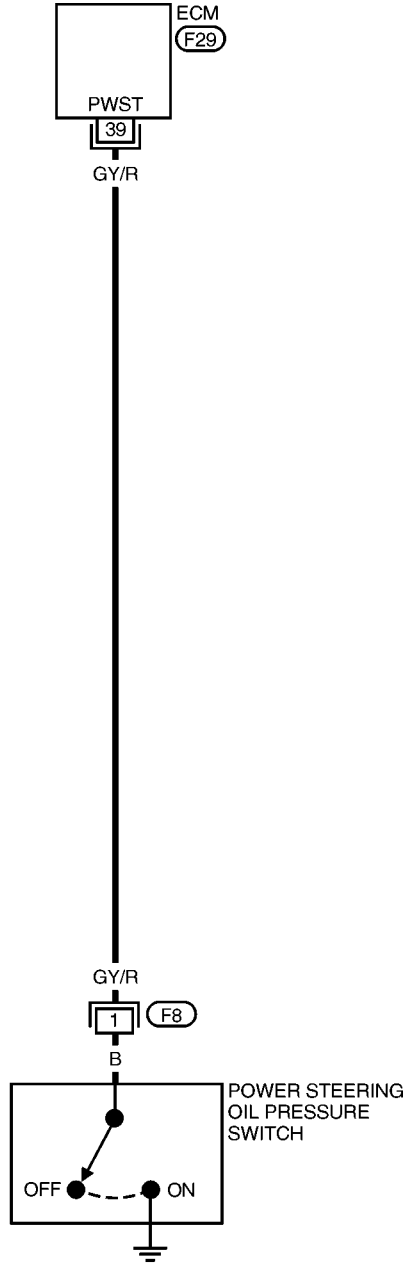

— : Detectable line for DTC
— : Non-detectable line for DTC

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS


BT

HA

SC

EL

IDX

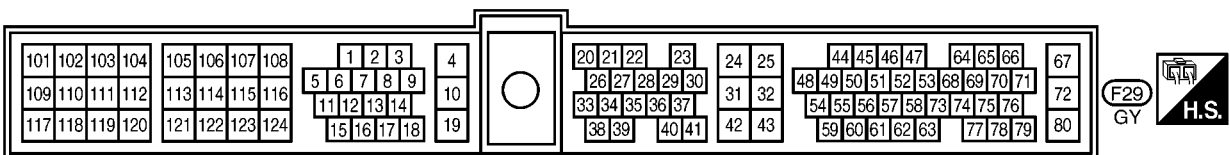

AEC012B

Diagnostic Procedure

=NEEC1245

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

2	CHECK OVERALL FUNCTION							
Ⓜ With CONSULT-II 1. Start engine. 2. Check "PW/ST SIGNAL" in "DATA MONITOR" mode with CONSULT-II under the following conditions.								
<table border="1" style="margin: auto;"> <tr><th colspan="2">DATA MONITOR</th></tr> <tr><th>MONITORING</th><th>NO FAIL</th></tr> <tr><td>PW/ST SIGNAL</td><td>OFF</td></tr> </table>			DATA MONITOR		MONITORING	NO FAIL	PW/ST SIGNAL	OFF
DATA MONITOR								
MONITORING	NO FAIL							
PW/ST SIGNAL	OFF							
<table border="1" style="margin: auto;"> <tr><td>Steering is in neutral position</td><td>OFF</td></tr> <tr><td>Steering is turned</td><td>ON</td></tr> </table>			Steering is in neutral position	OFF	Steering is turned	ON		
Steering is in neutral position	OFF							
Steering is turned	ON							
SEF177X								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 4.						

3	CHECK OVERALL FUNCTION							
ⓧ Without CONSULT-II 1. Start engine. 2. Check voltage between ECM terminal 39 and ground under the following conditions.								
SEF662P								
<table border="1" style="margin: auto;"> <thead> <tr><th>Condition</th><th>Voltage</th></tr> </thead> <tbody> <tr><td>When steering wheel is turned quickly</td><td>Approximately 0V</td></tr> <tr><td>Except above</td><td>Approximately 5V</td></tr> </tbody> </table>			Condition	Voltage	When steering wheel is turned quickly	Approximately 0V	Except above	Approximately 5V
Condition	Voltage							
When steering wheel is turned quickly	Approximately 0V							
Except above	Approximately 5V							
MTBL0142								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 4.						

POWER STEERING OIL PRESSURE SWITCH

KA24DE

Diagnostic Procedure (Cont'd)

4	CHECK INPUT SIGNAL CIRCUIT	
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 39 and terminal 1.</p>		
<p>Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	GO TO 5.

SEF662P

5	DETECT MALFUNCTIONING PART	
Check the harness for open or short between ECM and power steering oil pressure switch.		
▶	Repair open circuit or short to ground or short to power in harness or connectors.	

6	CHECK POWER STEERING OIL PRESSURE SWITCH							
<p>1. Disconnect power steering oil pressure switch harness connector then start engine. 2. Check continuity between terminals 1 and ground.</p>								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 60%;">Conditions</th> <th>Continuity</th> </tr> </thead> <tbody> <tr> <td>Steering wheel is being turned</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td>Steering wheel is not being turned</td> <td style="text-align: center;">No</td> </tr> </tbody> </table>			Conditions	Continuity	Steering wheel is being turned	Yes	Steering wheel is not being turned	No
Conditions	Continuity							
Steering wheel is being turned	Yes							
Steering wheel is not being turned	No							
<p>OK or NG</p>								
OK	▶	GO TO 7.						
NG	▶	Replace power steering oil pressure switch.						

SEF230V

MTBL0307


7	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.		
▶	INSPECTION END	

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

IACV-FICD SOLENOID VALVE

KA24DE

Component Description

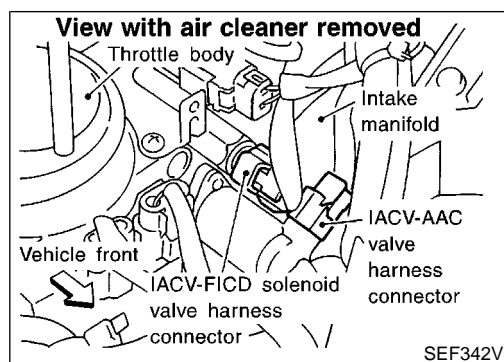

Component Description

When the air conditioner is on, the IAC valve-FICD ^{NEEC1246} supplies additional air to adjust to the increased load.

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 32 (ECM ground). ^{NEEC1247}

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
12	P	Air conditioner relay	[Engine is running] ● Both A/C switch and blower switch are ON★	Approximately 0V
			[Engine is running] ● A/C switch is OFF	BATTERY VOLTAGE (11 - 14V)
21	G/R	Air conditioner dual-pres-sure switch	[Engine is running] ● Both air conditioner switch and blower switch are ON (Compressor operates)	Approximately 0V
			[Engine is running] ● Air conditioner switch is OFF	BATTERY VOLTAGE (11 - 14V)

★ Ambient air temperature above 10°C (50°F) and in any mode except OFF.

IACV-FICD SOLENOID VALVE

KA24DE
Wiring Diagram

Wiring Diagram

NEEC1248

EC-FICD-01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS





BT

HA



SC

EL

IDX

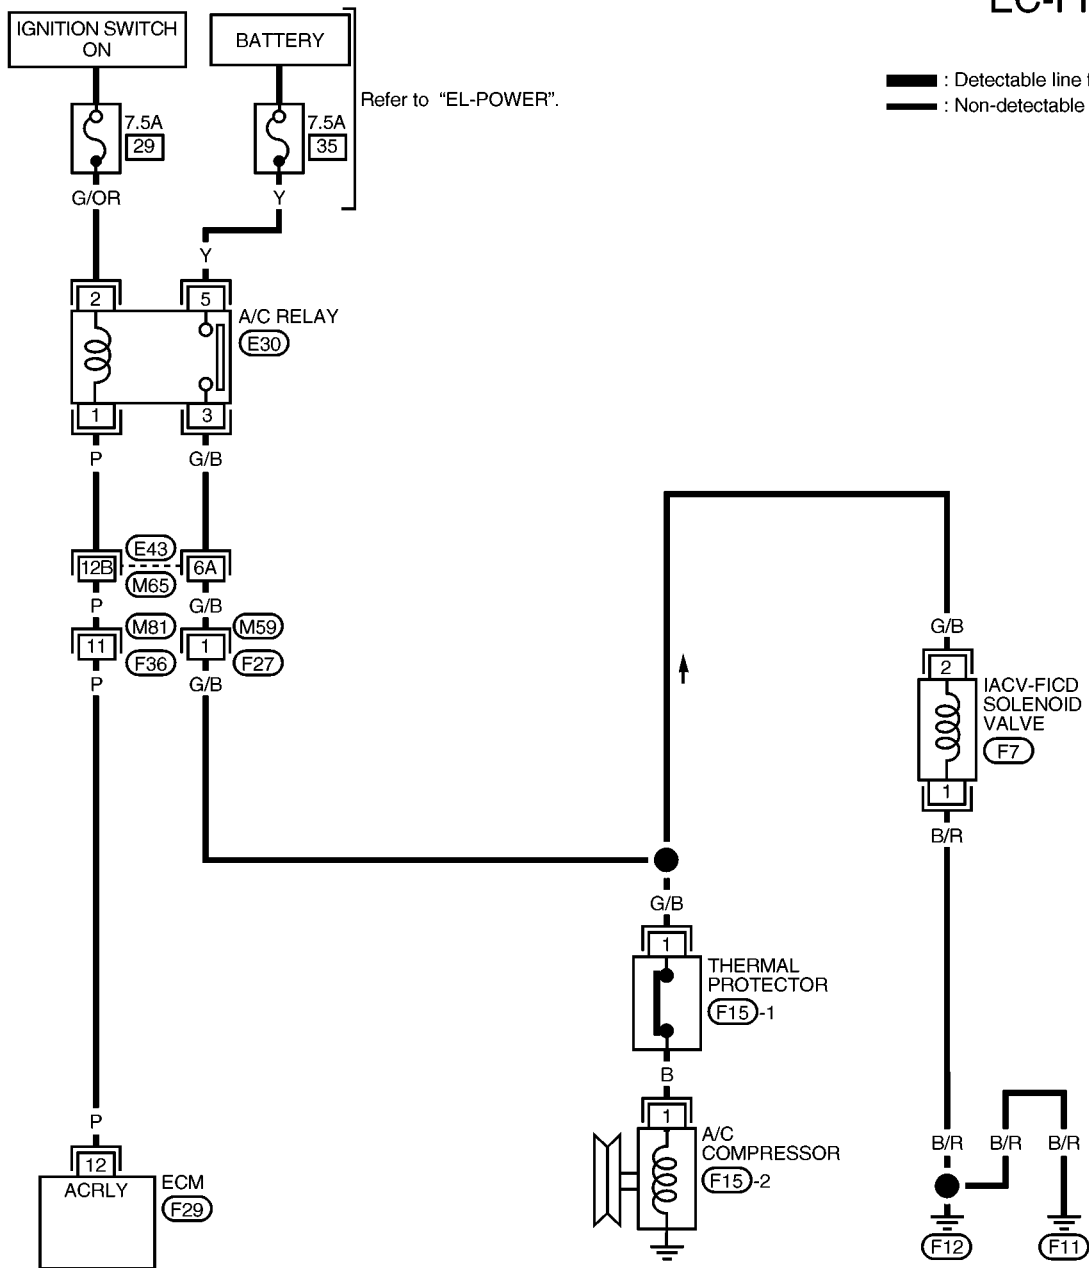

Refer to the following.
(M65), (E43) - SUPER
MULTIPLE JUNCTION (SMJ)

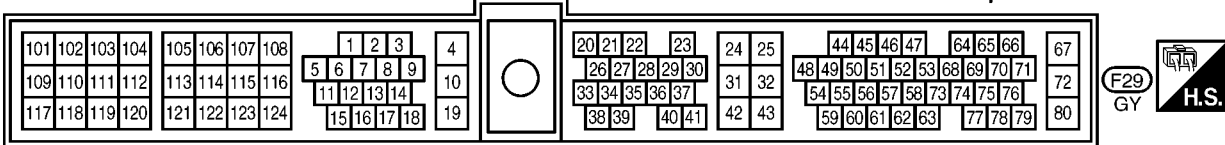


* : This connector is not shown in "HARNESS LAYOUT" of EL section.

AEC013B

Diagnostic Procedure

=NEEC1249

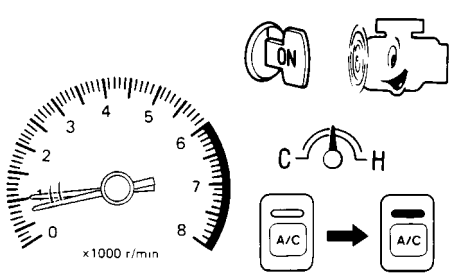1	CHECK OVERALL FUNCTION	<p>1. Start engine and warm it up to normal operating temperature.</p> <p>2. Check idle speed. 800±50 rpm If NG, adjust idle speed.</p> <p>3. Push air conditioner switch ON and turn fan switch to 4-speed.</p> <p>4. Recheck idle speed.</p> <div style="text-align: center; margin: 10px 0;">  </div> <p style="text-align: right; margin-right: 20px;"><small>MEF634E</small></p>
		OK or NG
OK	▶	INSPECTION END
NG	▶	GO TO 2.



2	CHECK AIR CONDITIONER FUNCTION	<p>Check if air conditioner compressor functions normally.</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>
OK	▶	GO TO 3.
NG	▶	Refer to "Symptom Table" in "TROUBLE DIAGNOSIS", HA-30 .

IACV-FICD SOLENOID VALVE


KA24DE

Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

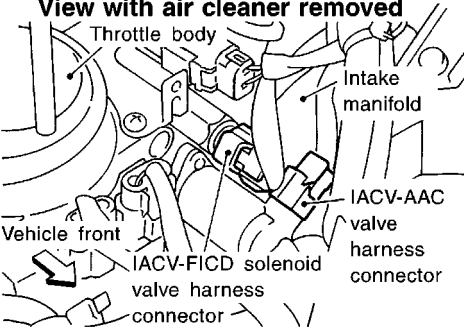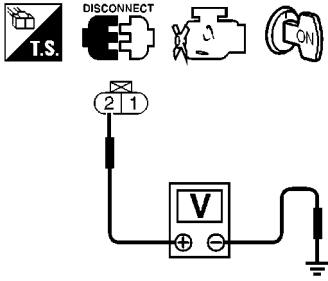3	CHECK POWER SUPPLY	<p>1. Stop engine. 2. Disconnect IACV-FICD solenoid valve harness connector.</p> <div style="text-align: center;"> <p>View with air cleaner removed</p>  </div> <p>3. Start engine, then push A/C switch ON and turn fan switch to 4-speed. 4. Check voltage between terminal 2 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p style="color: blue;">Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>	<p>SEF342V</p> <p>SEF133V</p>
OK	▶	GO TO 5.	
NG	▶	GO TO 4.	

4	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M81, F36 ● Harness connector M59, F27 ● Harness for open or short between IACV-FICD solenoid valve harness connector and air conditioner relay 	
	▶	Repair open circuit, short to ground or short to power in harness or connectors.	

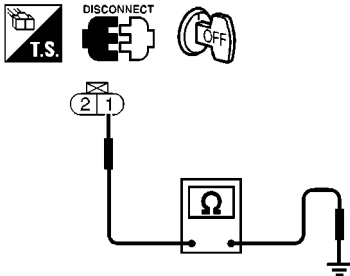5	CHECK GROUND CIRCUIT	
<ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch OFF. 3. Disconnect ambient air temperature switch harness connector. 4. Check harness continuity between solenoid valve terminal 1 and body ground. 		
		
SEF134V		
<p>Continuity should exist.</p> <p>5. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 7.
NG	▶	GO TO 6.

6	DETECT MALFUNCTIONING PART	
Check the harness for open or short between IACV-FICD solenoid valve and body ground.		
	▶	Repair open circuit or short to ground or short to power in harness or connectors.

IACV-FICD SOLENOID VALVE

KA24DE

Diagnostic Procedure (Cont'd)

7	CHECK IACV-FICD SOLENOID VALVE	<p>Disconnect IACV-FICD solenoid valve harness connector.</p> <div style="text-align: center;"> </div> <ul style="list-style-type: none"> • Check for clicking sound when applying 12V direct current to terminals. • Check plunger for seizing or sticking. • Check for broken spring. <div style="text-align: center;"> </div> <p style="text-align: right;">SEF231V</p> <p style="text-align: right;">SEF097K</p>	
		OK or NG	
OK		▶	GO TO 8.
NG		▶	Replace IACV-FICD solenoid valve.



8	CHECK INTERMITTENT INCIDENT	<p>Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-129.</p>	
		▶	INSPECTION END

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Wiring Diagram

NEEC1250

EC-MIL/DL-01

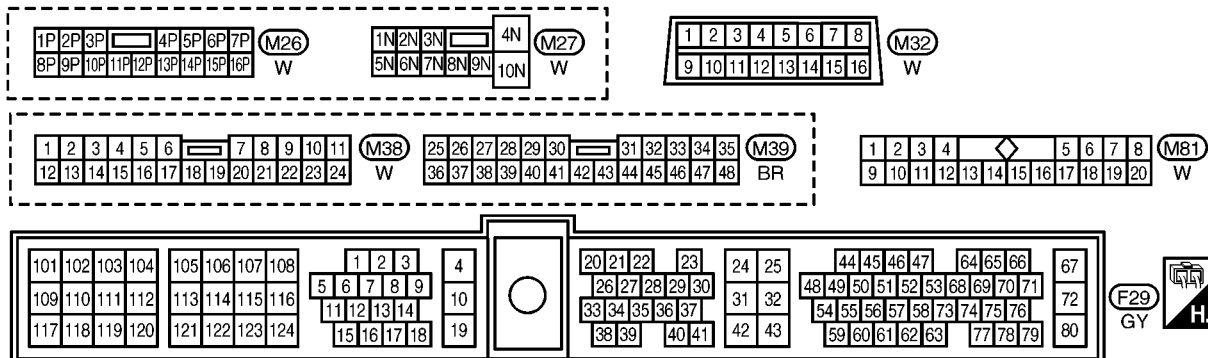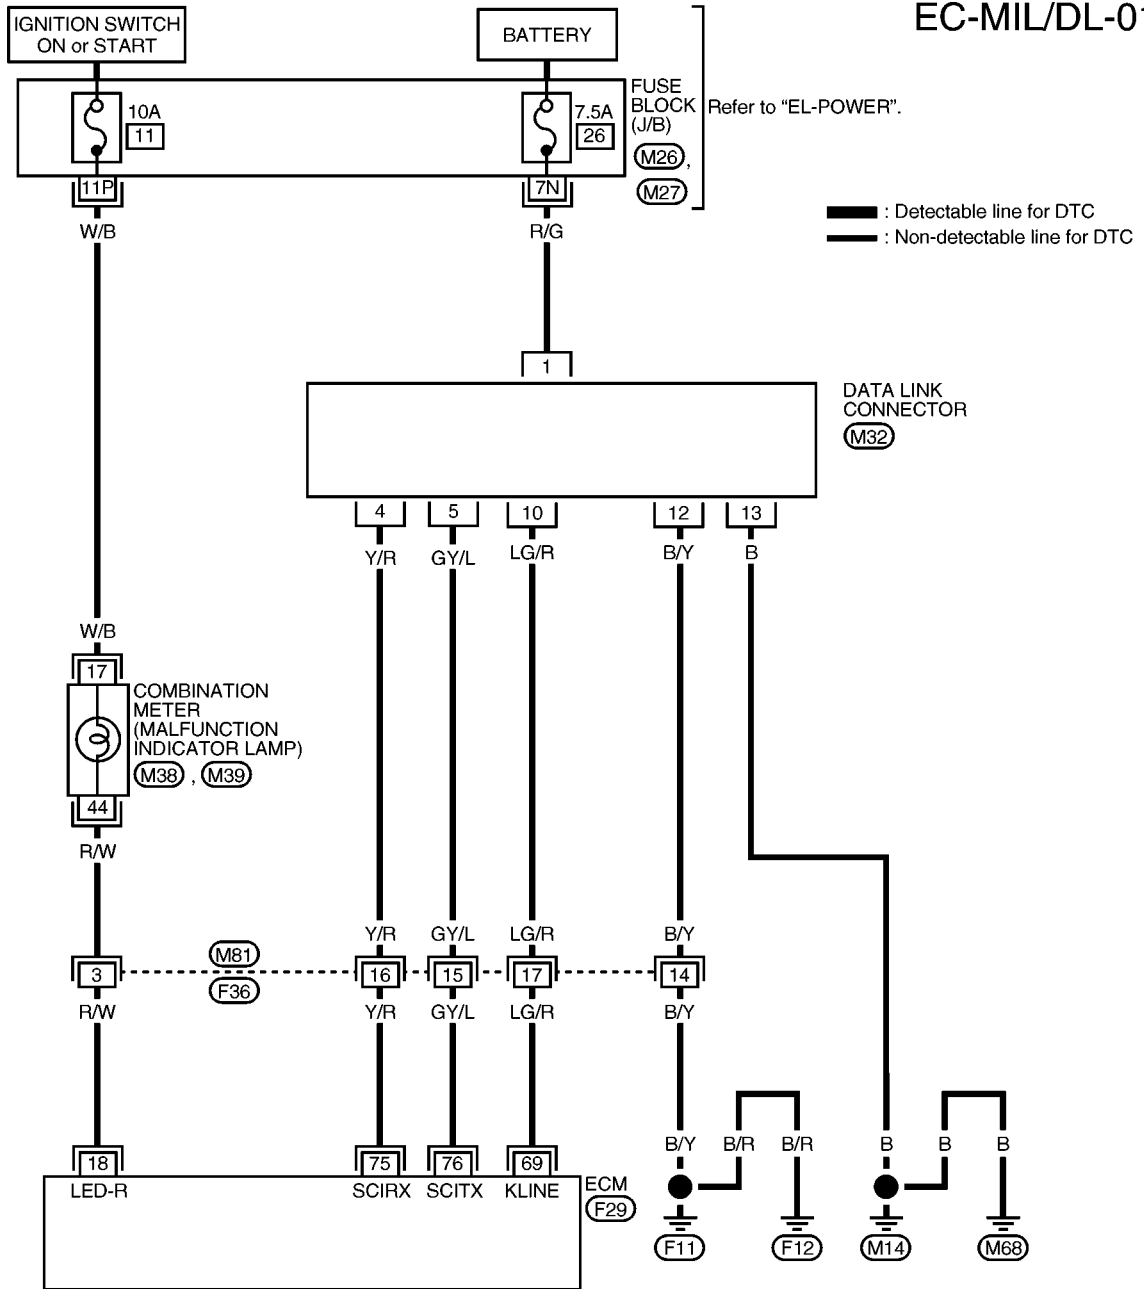

Fuel Pressure Regulator

NEEC1251

Fuel pressure at idling kPa (kg/cm ² , psi)	Vacuum hose is connected	Approximately 235 (2.4, 34)
	Vacuum hose is disconnected	Approximately 294 (3.0, 43)

Idle Speed and Ignition Timing

NEEC1252

Base idle speed*1 rpm	No-load*4 (in "P" or "N" position)	750±50
Target idle speed*2 rpm	No-load*4 (in "P" or "N" position)	800±50
Air conditioner: ON rpm	In "P" or "N" position	875 or more
Ignition timing*1	In "P" or "N" position	20°±2° BTDC

*1: Throttle position sensor harness connector disconnected or using CONSULT-II "WORK SUPPORT" mode

*2: Throttle position sensor harness connector connected

*3: Throttle position sensor harness connector disconnected

*4: Under the following conditions:

- Air conditioner switch: OFF
- Electrical load: OFF (Lights, heater fan & rear window defogger)
- Steering wheel: Kept in straight-ahead position

Ignition Coil

NEEC1253

Primary voltage V	Battery voltage 12
Primary resistance [at 20°C (68°F)] Ω	Approximately 1.0
Secondary resistance [at 20°C (68°F)] kΩ	Approximately 10

Mass Air Flow Sensor

NEEC1254

Supply voltage V	Battery voltage (11 - 14)
Output voltage V	0.9 - 1.8*
Mass air flow (Using CONSULT-II or GST) g-m/sec	0.9 - 5.8 at idle* 7.5 - 13.2 at 2,500 rpm*

*: Engine is warmed up to normal operating temperature and idling under no-load.

Engine Coolant Temperature Sensor

NEEC1255

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

EGR Temperature Sensor

NEEC1256

EGR temperature °C (°F)	Voltage (V)	Resistance (MΩ)
0 (32)	4.81	7.9 - 9.7
50 (122)	2.82	0.57 - 0.70
100 (212)	0.8	0.08 - 0.10

Fuel Pump

NEEC1257

Resistance [at 25°C (77°F)] Ω	0.2 - 5.0
-------------------------------	-----------

SERVICE DATA AND SPECIFICATIONS (SDS)

KA24DE

IACV-AAC Valve

IACV-AAC Valve

NEEC1258

Resistance [at 25°C (77°F)] Ω	Approximately 10.0
-------------------------------	--------------------

Injector

NEEC1259

Resistance [at 25°C (77°F)] Ω	10 - 14
-------------------------------	---------

Resistor

NEEC1260

Resistance [at 25°C (77°F)] Ω	Approximately 2.2
-------------------------------	-------------------

Throttle Position Sensor

NEEC1261

Throttle valve conditions	Voltage (at normal operating temp., engine off, ignition switch on)
Completely closed (a)	0.15 - 0.85V
Partially open	Between (a) and (b)
Completely open (b)	3.5 - 4.7V

Front Heated Oxygen Sensor Heater

NEEC1262

Resistance [at 25°C (77°F)] Ω	2.3 - 4.3
-------------------------------	-----------

Calculated Load Value

NEEC1263

	Calculated load value % (Using CONSULT or GST)
At idle	9.5 - 34.0%
At 2,500 rpm	13.9 - 24.9%

Intake Air Temperature Sensor

NEEC1264

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
80 (176)	0.27 - 0.38

Rear Heated Oxygen Sensor Heater

NEEC1265

Resistance [at 25°C (77°F)] Ω	2.3 - 4.3
-------------------------------	-----------

Crankshaft Position Sensor (OBD)

NEEC1266

Resistance [at 20°C (68°F)] Ω	512 - 632
-------------------------------	-----------

Fuel Tank Temperature Sensor

NEEC1267

Temperature °C (°F)	Resistance kΩ
20 (68)	2.3 - 2.7
50 (122)	0.79 - 0.90

Alphabetical & P No. Index for DTC

NEEC0001

NEEC0001S01

ALPHABETICAL INDEX FOR DTC

Items (CONSULT-II screen terms)	DTC*6		Reference page
	ECM*1	CONSULT-II GST*2	
Unable to access ECM	—	—	EC-698
ABSL PRES SEN/CIRC	0803	P0105	EC-733
AIR TEMP SEN/CIRC	0401	P0110	EC-745
A/T 1ST GR FNCTN	1103	P0731	AT-260
A/T 2ND GR FNCTN	1104	P0732	AT-266
A/T 3RD GR FNCTN	1105	P0733	AT-272
A/T 4TH GR FNCTN	1106	P0734	AT-278
A/T COMM LINE	—	P0600	EC-1024
A/T DIAG COMM LINE	0804	P1605	EC-1138
A/T TCC S/V FNCTN	1107	P0744	AT-292
ATF TEMP SEN/CIRC	1208	P0710	AT-244
CAM POS SEN/CIRC	0101	P0340	EC-922
CLOSED LOOP-B1	0307	P1148	EC-1043
CLOSED LOOP-B2	0308	P1168	EC-1043
CLOSED TP SW/CIRC	0203	P0510	EC-1016
COOLANT T SEN/CIRC*3	0103	P0115	EC-750
*COOLANT T SEN/CIRC	0908	P0125	EC-769
CPS/CIRC (OBD) COG	0905	P1336	EC-1053
CPS/CIRCUIT (OBD)	0802	P0335	EC-916
CYL 1 MISFIRE	0608	P0301	EC-903
CYL 2 MISFIRE	0607	P0302	EC-903
CYL 3 MISFIRE	0606	P0303	EC-903
CYL 4 MISFIRE	0605	P0304	EC-903
CYL 5 MISFIRE	0604	P0305	EC-903
CYL 6 MISFIRE	0603	P0306	EC-903
ECM	0301	P0605	EC-1029
EGR SYSTEM (if so equipped)	0302	P0400	EC-929
EGR SYSTEM (if so equipped)	0514	P1402	EC-1072
EGR TEMP SEN/CIRC (if so equipped)	0305	P1401	EC-1065
EGRC SOLENOID/V (if so equipped)	1005	P1400	EC-1060
EGRC-BPT VALVE (if so equipped)	0306	P0402	EC-943
ENGINE SPEED SIG	1207	P0725	AT-255
ENG OVER TEMP	0211	P0217	EC-890
EVAP GROSS LEAK	0715	P0455	EC-994

TROUBLE DIAGNOSIS — INDEX

VG33E

Alphabetical & P No. Index for DTC (Cont'd)

Items (CONSULT-II screen terms)	DTC*6		Reference page
	ECM*1	CONSULT-II GST*2	
EVAP PURG FLOW/MON	0111	P1447	EC-1103
EVAP SYS PRES SEN	0704	P0450	EC-981
EVAP SMALL LEAK	0705	P0440	EC-957
EVAP SMALL LEAK	0213	P1440	EC-1082
FR O2 SE HEATER-B1	0901	P0135	EC-819
FR O2 SE HEATER-B2	1001	P0155	EC-819
FRONT O2 SENSOR-B1	0503	P0130	EC-774
FRONT O2 SENSOR-B1	0415	P0131	EC-782
FRONT O2 SENSOR-B1	0414	P0132	EC-790
FRONT O2 SENSOR-B1	0413	P0133	EC-798
FRONT O2 SENSOR-B1	0509	P0134	EC-811
FRONT O2 SENSOR-B2	0303	P0150	EC-774
FRONT O2 SENSOR-B2	0411	P0151	EC-782
FRONT O2 SENSOR-B2	0410	P0152	EC-790
FRONT O2 SENSOR-B2	0409	P0153	EC-798
FRONT O2 SENSOR-B2	0412	P0154	EC-811
FUEL SYS LEAN/BK1	0115	P0171	EC-870
FUEL SYS LEAN/BK2	0210	P0174	EC-870
FUEL SYS RICH/BK1	0114	P0172	EC-878
FUEL SYS RICH/BK2	0209	P0175	EC-878
FUEL TEMP SEN/CIRC	0402	P0180	EC-885
IACV/AAC VLV/CIRC	0205	P0505	EC-1010
IGN SIGNAL-PRIMARY	0201	P1320	EC-1045
KNOCK SENSOR	0304	P0325	EC-912
L/PRES SOL/CIRC	1205	P0745	AT-301
MAP/BARO SW SOL/CIR	1302	P1105	EC-1031
MAF SEN/CIRCUIT*3	0102	P0100	EC-724
MULTI CYL MISFIRE	0701	P0300	EC-903
NO SELF DIAGNOSTIC FAILURE INDICATED	0505	P0000	—
NO SELF DIAGNOSTIC FAILURE INDICATED	Flashing*5	No DTC	EC-654
OVER HEAT	0208	—	EC-1149
O/R CLTCH S/CIRC	1203	P1760	AT-325
P-N POS SW/CIRCUIT	1003	P0705	EC-1141
PNP SW/CIRC	1101	P0705	AT-238
PURG VOLUME CONT/V	1008	P0443	EC-968
PURG VOLUME CONT/V	0214	P1444	EC-1084

TROUBLE DIAGNOSIS — INDEX

VG33E

Alphabetical & P No. Index for DTC (Cont'd)

Items (CONSULT-II screen terms)	DTC*6		Reference page	
	ECM*1	CONSULT-II GST*2		
REAR O2 SENSOR-B1	0511	P0137	EC-825	GI
REAR O2 SENSOR-B1	0510	P0138	EC-835	MA
REAR O2 SENSOR-B1	0707	P0139	EC-845	EM
REAR O2 SENSOR-B1	0512	P0140	EC-855	
REAR O2 SENSOR-B2	0314	P0157	EC-825	LC
REAR O2 SENSOR-B2	0313	P0158	EC-835	
REAR O2 SENSOR-B2	0708	P0159	EC-845	EC
REAR O2 SENSOR-B2	0315	P0160	EC-855	
RR O2 SE HEATER-B1	0902	P0141	EC-863	FE
RR O2 SE HEATER-B2	1002	P0161	EC-863	
SFT SOL A/CIRC*3	1108	P0750	AT-306	CL
SFT SOL B/CIRC*3	1201	P0755	AT-311	
TCC SOLENOID/CIRC	1204	P0740	AT-287	MT
TP SEN/CIRC A/T*3	1206	P1705	AT-316	AT
TRTL POS SEN/CIRC*3	0403	P0120	EC-755	
TW CATALYST SYS-B1	0702	P0420	EC-951	TF
TW CATALYST SYS-B2	0703	P0430	EC-951	
VC CUT/V BYPASS/V	0311	P1491	EC-1129	PD
VC/V BYPASS/V	0801	P1490	EC-1123	
VEH SPEED SEN/CIRC*4	0104	P0500	EC-1006	AX
VEH SPD SEN/CIRC*4	1102	P0720	AT-250	
VENT CONTROL VALVE	0903	P0446	EC-975	SU
VENT CONTROL VALVE	0215	P1446	EC-1096	
VENT CONTROL VALVE	0309	P1448	EC-1115	BR

*1: In Diagnostic Test Mode II (Self-diagnostic results). These numbers are controlled by NISSAN.

*2: These numbers are prescribed by SAE J2012.

*3: When the fail-safe operation occurs, the MIL illuminates.

*4: The MIL illuminates when both the "Revolution sensor signal" and the "Vehicle speed sensor signal" meet the fail-safe condition at the same time.

*5: While engine is running.

*6: 1st trip DTC No. is the same as DTC No.

NOTE:

Regarding D22 models, "-B1" and "BK1" indicate right bank and "-B2" and "BK2" indicate left bank.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSIS — INDEX

VG33E

Alphabetical & P No. Index for DTC (Cont'd)

P NO. INDEX FOR DTC

-NEEC0001S02

DTC*6		Items (CONSULT-II screen terms)	Reference page
CONSULT-II GST*2	ECM*1		
—	—	Unable to access ECM	EC-698
No DTC	Flashing*5	NO SELF DIAGNOSTIC FAILURE INDICATED	EC-654
P0000	0505	NO SELF DIAGNOSTIC FAILURE INDICATED	—
P0100	0102	MAF SEN/CIRCUIT*3	EC-724
P0105	0803	ABSL PRES SEN/CIRC	EC-733
P0110	0401	AIR TEMP SEN/CIRC	EC-745
P0115	0103	COOLANT T SEN/CIRC*3	EC-750
P0120	0403	THRTL POS SEN/CIRC*3	EC-755
P0125	0908	*COOLANT T SEN/CIRC	EC-769
P0130	0503	FRONT O2 SENSOR-B1	EC-774
P0131	0415	FRONT O2 SENSOR-B1	EC-782
P0132	0414	FRONT O2 SENSOR-B1	EC-790
P0133	0413	FRONT O2 SENSOR-B1	EC-798
P0134	0509	FRONT O2 SENSOR-B1	EC-811
P0135	0901	FR O2 SE HEATER-B1	EC-819
P0137	0511	REAR O2 SENSOR-B1	EC-825
P0138	0510	REAR O2 SENSOR-B1	EC-835
P0139	0707	REAR O2 SENSOR-B1	EC-845
P0140	0512	REAR O2 SENSOR-B1	EC-855
P0141	0902	RR O2 SE HEATER-B1	EC-863
P0150	0303	FRONT O2 SENSOR-B2	EC-774
P0151	0411	FRONT O2 SENSOR-B2	EC-782
P0152	0410	FRONT O2 SENSOR-B2	EC-790
P0153	0409	FRONT O2 SENSOR-B2	EC-798
P0154	0412	FRONT O2 SENSOR-B2	EC-811
P0155	1001	FR O2 SE HEATER-B2	EC-819
P0157	0314	REAR O2 SENSOR-B2	EC-825
P0158	0313	REAR O2 SENSOR-B2	EC-835
P0159	0708	REAR O2 SENSOR-B2	EC-845
P0160	0315	REAR O2 SENSOR-B2	EC-855
P0161	1002	RR O2 SE HEATER-B2	EC-863
P0171	0115	FUEL SYS LEAN/BK1	EC-870
P0172	0114	FUEL SYS RICH/BK1	EC-878
P0174	0210	FUEL SYS LEAN/BK2	EC-870
P0175	0209	FUEL SYS RICH/BK2	EC-878

TROUBLE DIAGNOSIS — INDEX

VG33E

Alphabetical & P No. Index for DTC (Cont'd)

DTC*6		Items (CONSULT-II screen terms)	Reference page	
CONSULT-II GST*2	ECM*1			
P0180	0402	FUEL TEMP SEN/CIRC	EC-885	GI
P0217	0211	ENG OVER TEMP	EC-890	MA
P0300	0701	MULTI CYL MISFIRE	EC-903	EM
P0301	0608	CYL 1 MISFIRE	EC-903	
P0302	0607	CYL 2 MISFIRE	EC-903	LC
P0303	0606	CYL 3 MISFIRE	EC-903	
P0304	0605	CYL 4 MISFIRE	EC-903	EC
P0305	0604	CYL 5 MISFIRE	EC-903	
P0306	0603	CYL 6 MISFIRE	EC-903	FE
P0325	0304	KNOCK SENSOR	EC-912	
P0335	0802	CPS/CIRCUIT (OBD)	EC-916	CL
P0340	0101	CAM POS SEN/CIRC	EC-922	
P0400	0302	EGR SYSTEM (if so equipped)	EC-929	MT
P0402	0306	EGRC-BPT VALVE (if so equipped)	EC-943	
P0420	0702	TW CATALYST SYS-B1	EC-951	AT
P0430	0703	TW CATALYST SYS-B2	EC-951	
P0440	0705	EVAP SMALL LEAK	EC-957	TF
P0443	1008	PURG VOLUME CONT/V	EC-968	PD
P0446	0903	VENT CONTROL VALVE	EC-975	
P0450	0704	EVAP SYS PRES SEN	EC-981	AX
P0455	0715	EVAP GROSS LEAK	EC-994	
P0500	0104	VEH SPEED SEN/CIRC*4	EC-1006	SU
P0505	0205	IACV/AAC VLV/CIRC	EC-1010	
P0510	0203	CLOSED TP SW/CIRC	EC-1016	BR
P0600	—	A/T COMM LINE	EC-1024	
P0605	0301	ECM	EC-1029	ST
P0705	1101	PNP SW/CIRC	AT-238	
P0710	1208	ATF TEMP SEN/CIRC	AT-244	RS
P0720	1102	VEH SPD SEN/CIRC A/T*4	AT-250	
P0725	1207	ENGINE SPEED SIG	AT-255	BT
P0731	1103	A/T 1ST GR FNCTN	AT-260	
P0732	1104	A/T 2ND GR FNCTN	AT-266	HA
P0733	1105	A/T 3RD GR FNCTN	AT-272	
P0734	1106	A/T 4TH GR FNCTN	AT-278	SC
P0740	1204	TCC SOLENOID/CIRC	AT-287	
P0744	1107	A/T TCC S/V FNCTN	AT-292	EL

TROUBLE DIAGNOSIS — INDEX

VG33E

Alphabetical & P No. Index for DTC (Cont'd)

DTC*6		Items (CONSULT-II screen terms)	Reference page
CONSULT-II GST*2	ECM*1		
P0745	1205	L/PRESS SOL/CIRC	AT-301
P0750	1108	SFT SOL A/CIRC*3	AT-306
P0755	1201	SFT SOL B/CIRC*3	AT-311
P1105	1302	MAP/BARO SW SOL/CIR	EC-1031
P1148	0307	CLOSED LOOP-B1	EC-1043
P1168	0308	CLOSED LOOP-B2	EC-1043
P1320	0201	IGN SIGNAL-PRIMARY	EC-1045
P1336	0905	CPS/CIRC (OBD) COG	EC-1053
P1400	1005	EGRC SOLENOID/V (if so equipped)	EC-1060
P1401	0305	EGR TEMP SEN/CIRC (if so equipped)	EC-1065
P1402	0514	EGR SYSTEM (if so equipped)	EC-1072
P1440	0213	EVAP SMALL LEAK	EC-1082
P1444	0214	PURG VOLUME CONT/V	EC-1084
P1446	0215	VENT CONTROL VALVE	EC-1096
P1447	0111	EVAP PURG FLOW/MON	EC-1103
P1448	0309	VENT CONTROL VALVE	EC-1115
P1490	0801	VC/V BYPASS/V	EC-1123
P1491	0311	VC CUT/V BYPASS/V	EC-1129
P1605	0804	A/T DIAG COMM LINE	EC-1138
P1705	1206	TP SEN/CIRC A/T*3	AT-316
P1706	1003	P-N POS SW/CIRCUIT	EC-1141
P1760	1203	O/R CLUTCH SOL/CIRC	AT-325
—	0208	OVER HEAT	EC-1149

*1: In Diagnostic Test Mode II (Self-diagnostic results). These numbers are controlled by NISSAN.

*2: These numbers are prescribed by SAE J2012.

*3: When the fail-safe operation occurs, the MIL illuminates.

*4: The MIL illuminates when both the "Revolution sensor signal" and the "Vehicle speed sensor signal" meet the fail-safe condition at the same time.

*5: While engine is running.

*6: 1st trip DTC No. is the same as DTC No.

NOTE:

Regarding D22 models, "-B1" and "BK1" indicate right bank and "-B2" and "BK2" indicate left bank.

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

NEEC0002

The Supplemental Restraint System "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a seat belt, help to reduce the risk or severity of injury to the driver and front passenger in a frontal collision. The Supplemental Restraint System consists of air bag modules (located in the center of the steering wheel and in the instrument panel on the passenger side), seat belt pre-tensioners, a diagnosis sensor unit, a crash zone sensor (4WD models), warning lamp, wiring harness, and spiral cable.

The vehicle (except crew cab models) is equipped with a passenger air bag deactivation switch. Because no rear seat exists where a rear-facing child restraint can be placed, the switch is designed to turn off the passenger air bag so that a rear-facing child restraint can be used in the front passenger seat. The switch is located in the center of the instrument panel, near the ashtray. When the switch is turned to the ON position, the passenger air bag is enabled and could inflate in a frontal collision. When the switch is turned to the OFF position, the passenger air bag is disabled and will not inflate in a frontal collision. A passenger air bag OFF indicator on the instrument panel lights up when the passenger air bag is switched OFF. The driver air bag always remains enabled and is not affected by the passenger air bag deactivation switch.

Information necessary to service the system safely is included in the **RS section** of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance should be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal, refer to "Driver Air Bag Module and Spiral Cable", *RS-21*.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. Spiral cable and wiring harnesses (except "SEAT BELT PRE-TENSIONER") are covered with yellow insulation either just before the harness connectors or on the complete harness, for easy identification.
- The vehicle (except crew cab models) is equipped with a passenger air bag deactivation switch which can be operated by the customer. When the passenger air bag is switched OFF, the passenger air bag is disabled and will not inflate in a frontal collision. When the passenger air bag is switched ON, the passenger air bag is enabled and could inflate in a frontal collision. After SRS maintenance or repair, make sure the passenger air bag deactivation switch is in the same position (ON or OFF) as when the vehicle arrived for service.

Precautions for On Board Diagnostic (OBD) System of Engine and A/T

NEEC0003

The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

CAUTION:

- Be sure to turn the ignition switch OFF and disconnect the negative battery terminal before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to the open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to "Description", "HARNESS CONNECTOR", *EL-4*.
- Be sure to route and secure the harnesses properly after work. The interference of the harness with a bracket, etc. may cause the MIL to light up due to the short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to the malfunction of the EGR system or fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the ECM and TCM (Transmission control module) before returning the vehicle to the customer.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Engine Fuel & Emission Control System

NEEC0004


ECM

- Do not disassemble ECM.
- Do not turn on board diagnostic test mode selector forcibly.
- If a battery terminal is disconnected, the memory will return to the ECM value.

The ECM will now start to self-control at its initial value. Engine operation can vary slightly when the terminal is disconnected. However, this is not an indication of a problem. Do not replace parts because of a slight variation.

WIRELESS EQUIPMENT

- When installing CB ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on its installation location.
 - 1) Keep the antenna as far away as possible from the electronic control units.
 - 2) Keep the antenna feeder line more than 20 cm (7.9 in) away from the harness of electronic controls. Do not let them run parallel for a long distance.
 - 3) Adjust the antenna and feeder line so that the standing-wave ratio can be kept smaller.
 - 4) Be sure to ground the radio to vehicle body.

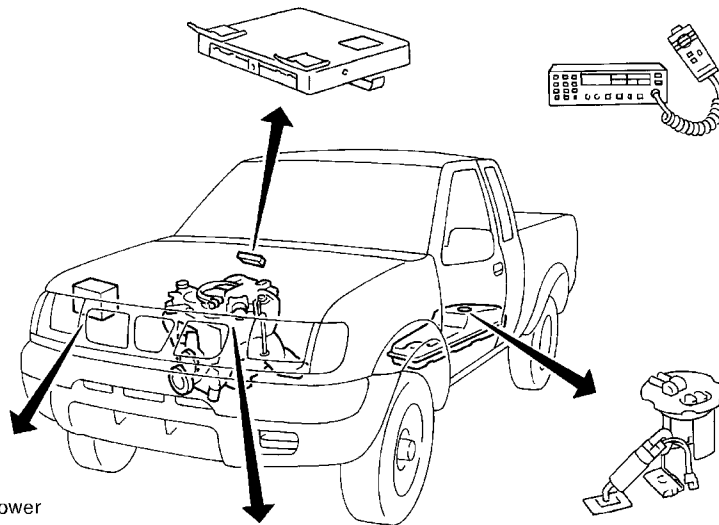

BATTERY

- Always use a 12 volt battery as power source.
- Do not attempt to disconnect battery cables while engine is running.

WHEN STARTING

- Do not depress accelerator pedal when starting.
- Immediately after starting, do not rev up engine unnecessarily.
- Do not rev up engine just prior to shutdown.

ECM PARTS HANDLING

- Handle mass air flow sensor carefully to avoid damage.
- Do not disassemble mass air flow sensor.
- Do not clean mass air flow sensor with any type of detergent.
- Do not disassemble IACV-AAC valve.
- Even a slight leak in the air intake system can cause serious problems.
- Do not shock or jar the camshaft position sensor or crankshaft position sensor (OBD).







FUEL PUMP

- Do not operate fuel pump when there is no fuel in lines.
- Tighten fuel hose clamps to the specified torque. (Refer to MA section.)

ECM HARNESS HANDLING

- Securely connect ECM harness connectors. A poor connection can cause an extremely high (surge) voltage to develop in coil and condenser, thus resulting in damage to ICs.
- Keep ECM harness at least 10 cm (3.9 in.) away from adjacent harnesses to prevent an ECM system malfunction due to receiving external noise, degraded operation of ICs, etc.
- Keep ECM parts and harnesses dry.
- Before removing parts, turn off ignition switch and then disconnect battery ground cable.

SEF236V

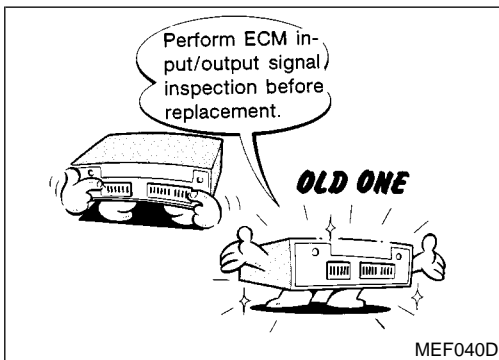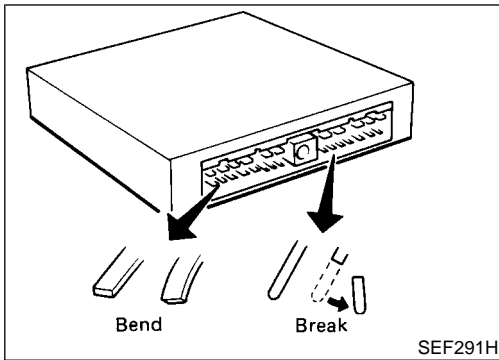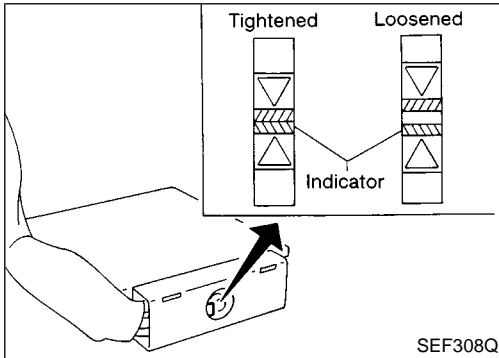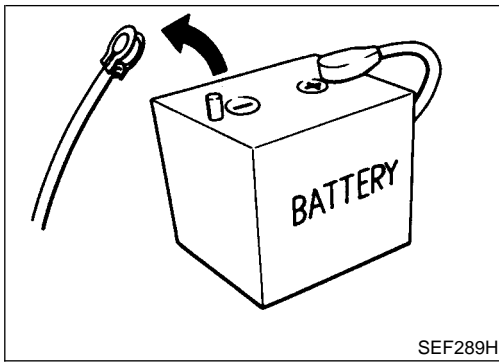

Precautions

NEEC0005

- Before connecting or disconnecting the ECM harness connector, turn ignition switch OFF and disconnect negative battery terminal. Failure to do so may damage the ECM because battery voltage is applied to ECM even if ignition switch is turned off.

- When connecting ECM harness connector, tighten securing bolt until the gap between orange indicators disappears.

 : 3 - 5 N·m (0.3 - 0.5 kg·m, 26 - 43 in·lb)


- When connecting or disconnecting pin connectors into or from ECM, take care not to damage pin terminals (bend or break). Make sure that there are not any bends or breaks on ECM pin terminal, when connecting pin connectors.

- Before replacing ECM, perform “ECM Terminals and Reference Value” inspection and make sure ECM functions properly. Refer to EC-708.


- After performing each TROUBLE DIAGNOSIS, perform “DTC Confirmation Procedure” or “Overall Function Check”. The DTC should not be displayed in the “DTC Confirmation Procedure” if the repair is completed. The “Overall Function Check” should be a good result if the repair is completed.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Precautions (Cont'd)

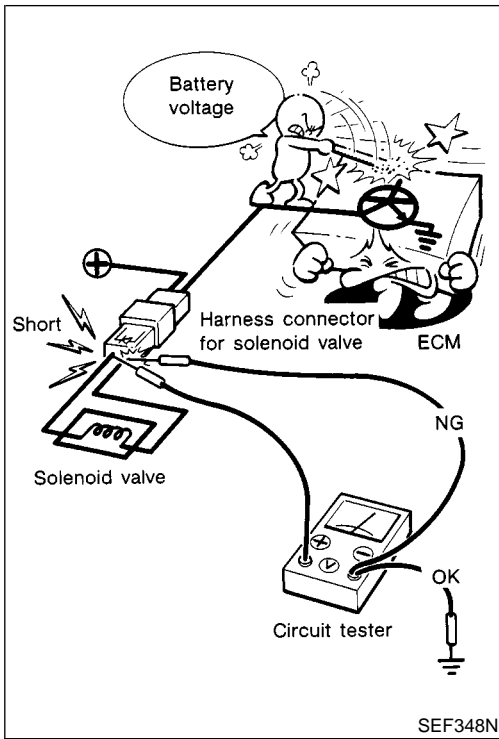

- When measuring ECM signals with a circuit tester, never allow the two tester probes to contact. Accidental contact of probes will cause a short circuit and damage the ECM power transistor.

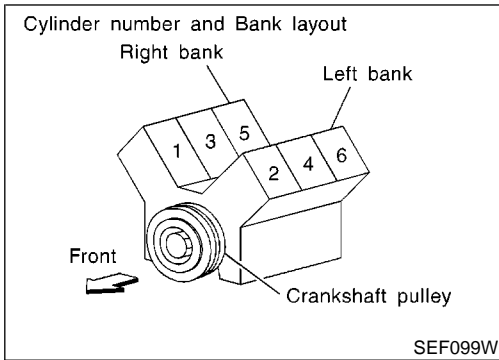

- Regarding model D22, “-B1” indicates the right bank and “-B2” indicates the left bank as shown in the figure.

Wiring Diagrams and Trouble Diagnosis

NEEC0006

When you read Wiring diagrams, refer to the followings:

- “HOW TO READ WIRING DIAGRAMS”, **GI-11**
- “POWER SUPPLY ROUTING” for power distribution circuit, **EL-8**



When you perform trouble diagnosis, refer to the followings:

- “HOW TO FOLLOW TEST GROUP IN TROUBLE DIAGNOSIS”, **GI-35**
- “HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT”, **GI-24**

Special Service Tools




NEEC0007

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

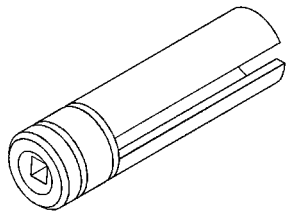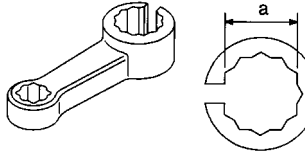Tool number (Kent-Moore No.) Tool name	Description	
KV10117100 (J36471-A) Heated oxygen sensor wrench		Loosening or tightening front heated oxygen sensor with 22 mm (0.87 in) hexagon nut
	<small>NT379</small>	
KV10114400 (J-38365) Heated oxygen sensor wrench		Loosening or tightening rear heated oxygen sensor a: 22 mm (0.87 in)
	<small>NT636</small>	

Commercial Service Tools





NEEC0008

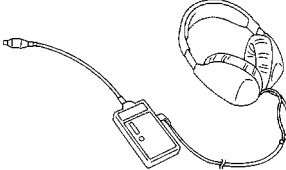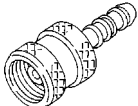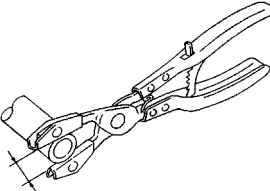Tool name (Kent-Moore No.)	Description	
Leak detector (J41416)		Locating the EVAP leak
	<small>NT703</small>	
EVAP service port adapter (J41413-OBID)		Applying positive pressure through EVAP service port
	<small>NT704</small>	
Hose clipper	 <p style="text-align: center;">Approx. 20 mm (0.79 in)</p>	Clamping the EVAP purge hose between the fuel tank and EVAP canister applied to DTC P1440 [EVAP control system (small leak-positive pressure)]
	<small>NT720</small>	

PREPARATION


VG33E

Commercial Service Tools (Cont'd)

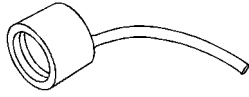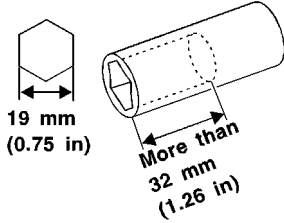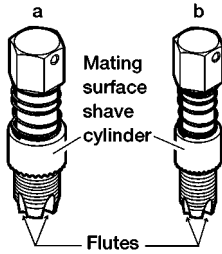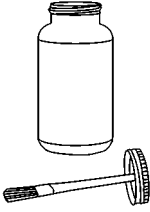Tool name (Kent-Moore No.)	Description	
Fuel filler cap adapter		Checking fuel tank vacuum relief valve opening pressure
Socket wrench		Removing and installing engine coolant temperature sensor
Oxygen sensor thread cleaner (J-43897-18) (J-43897-12)		Reconditioning the exhaust system threads before installing a new oxygen sensor. Use with anti-seize lubricant shown in "Commercial Service Tools". a: J-43897-18 18 mm diameter, for Zirconia Oxygen Sensor b: J-43897-12 12 mm diameter, for Titania Oxygen Sensor
Anti-seize lubricant (Permatex [®] 133AR or equivalent meeting MIL specification MIL-A-907)		Lubricating oxygen sensor thread cleaning tool when reconditioning exhaust system threads.

Engine Control Component Parts Location

NEEC0009

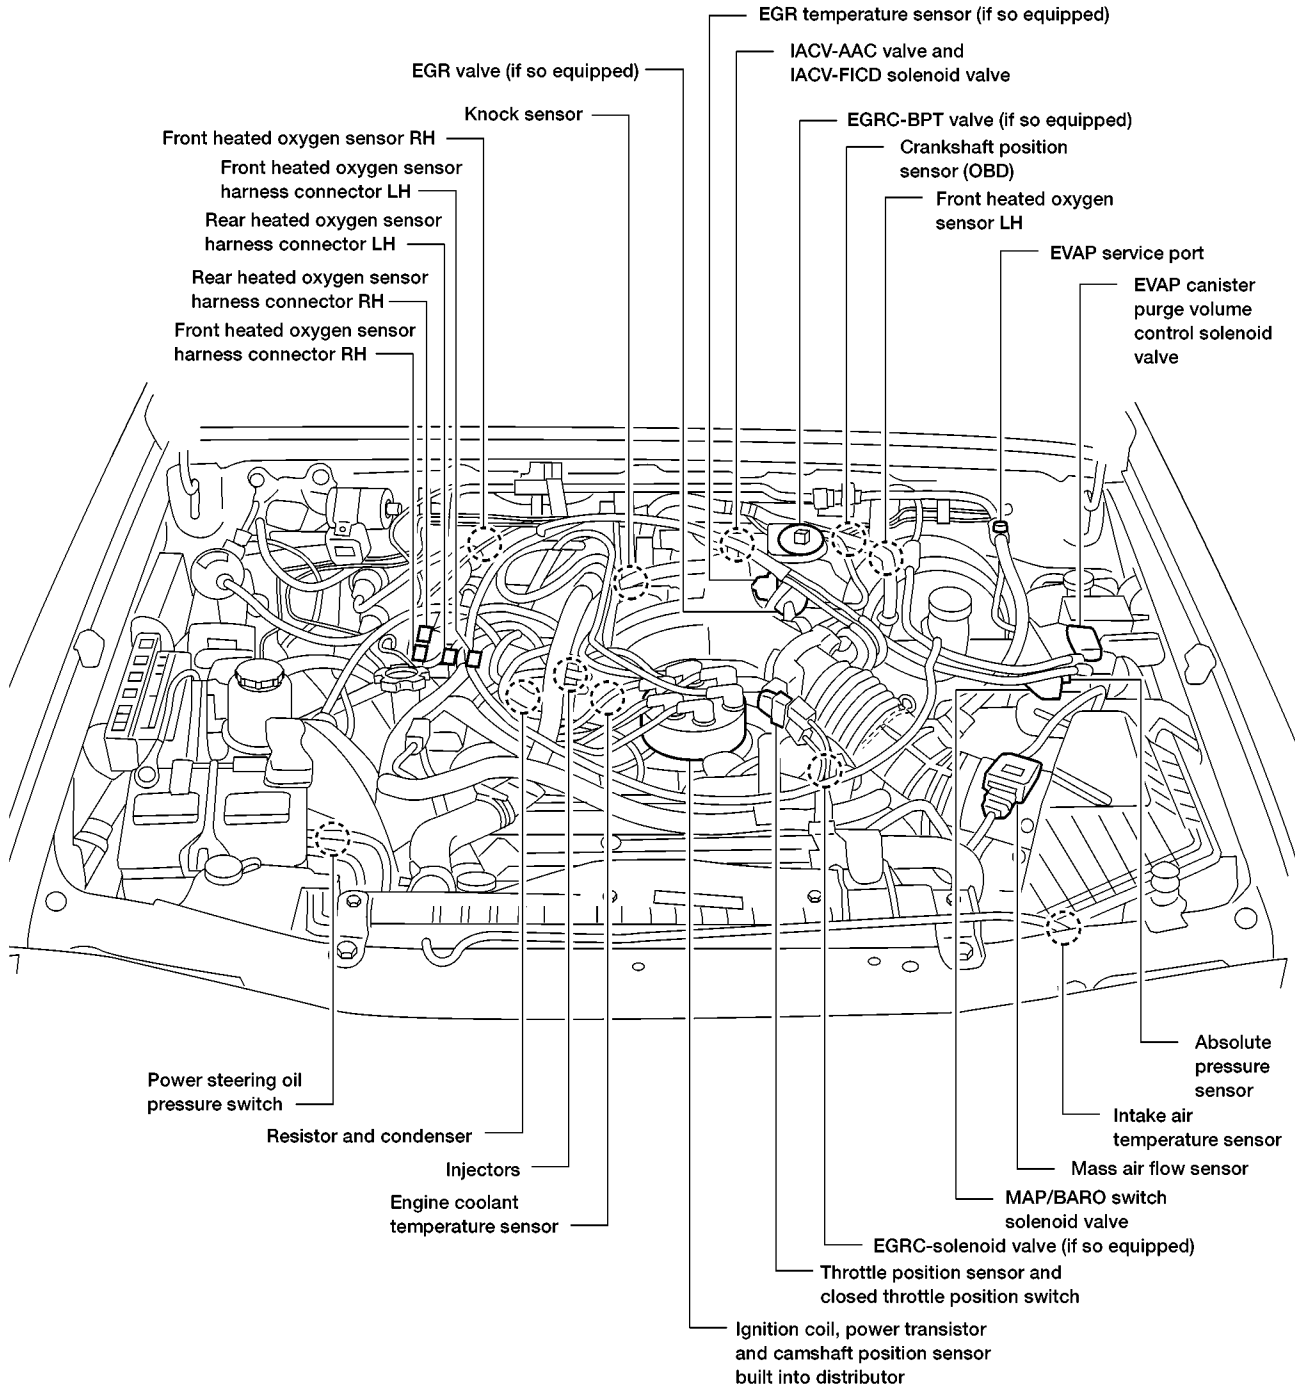

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL







IDX

AEC065B

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

VG33E


Engine Control Component Parts Location (Cont'd)

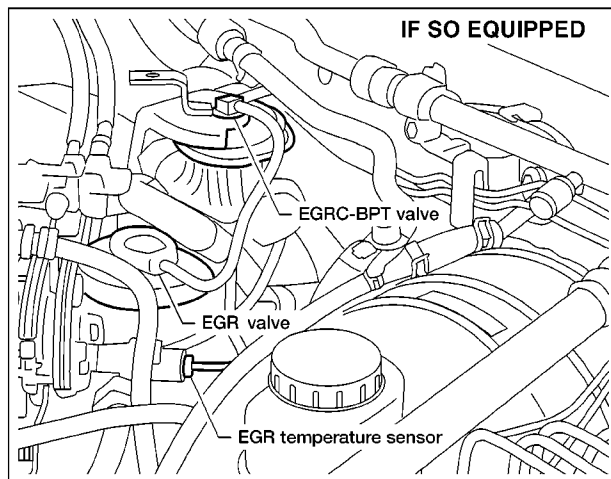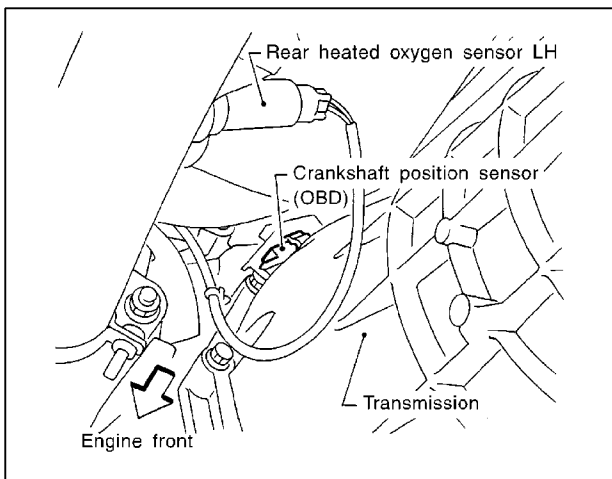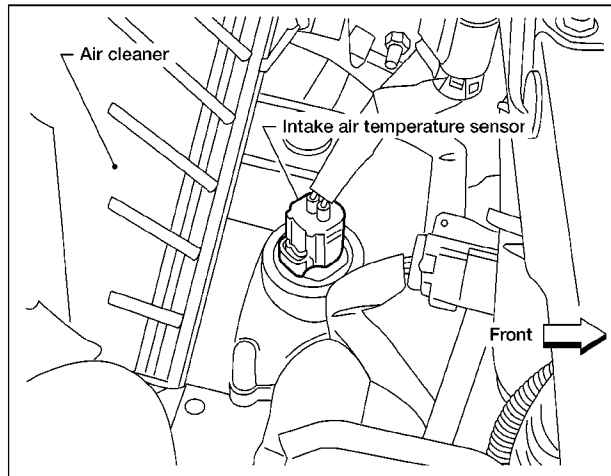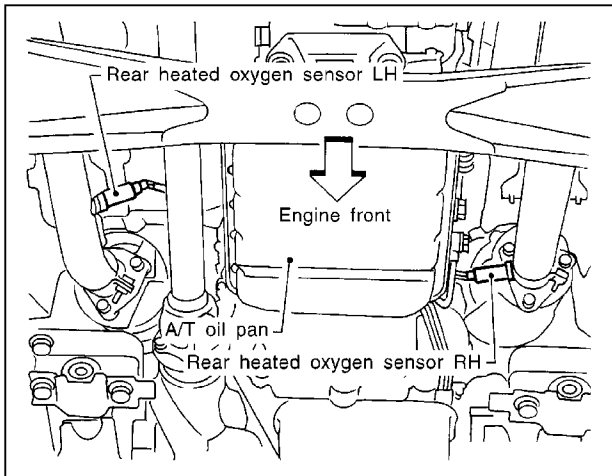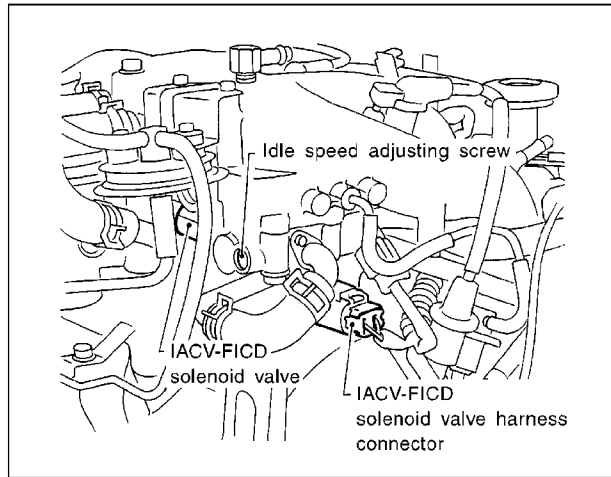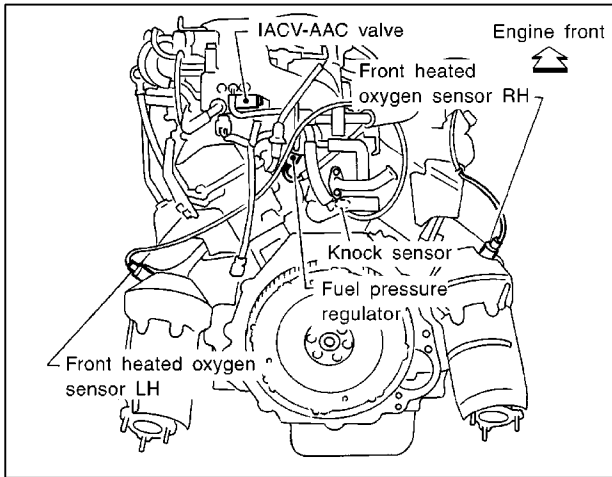

AEC066B

Circuit Diagram


NEEC0010

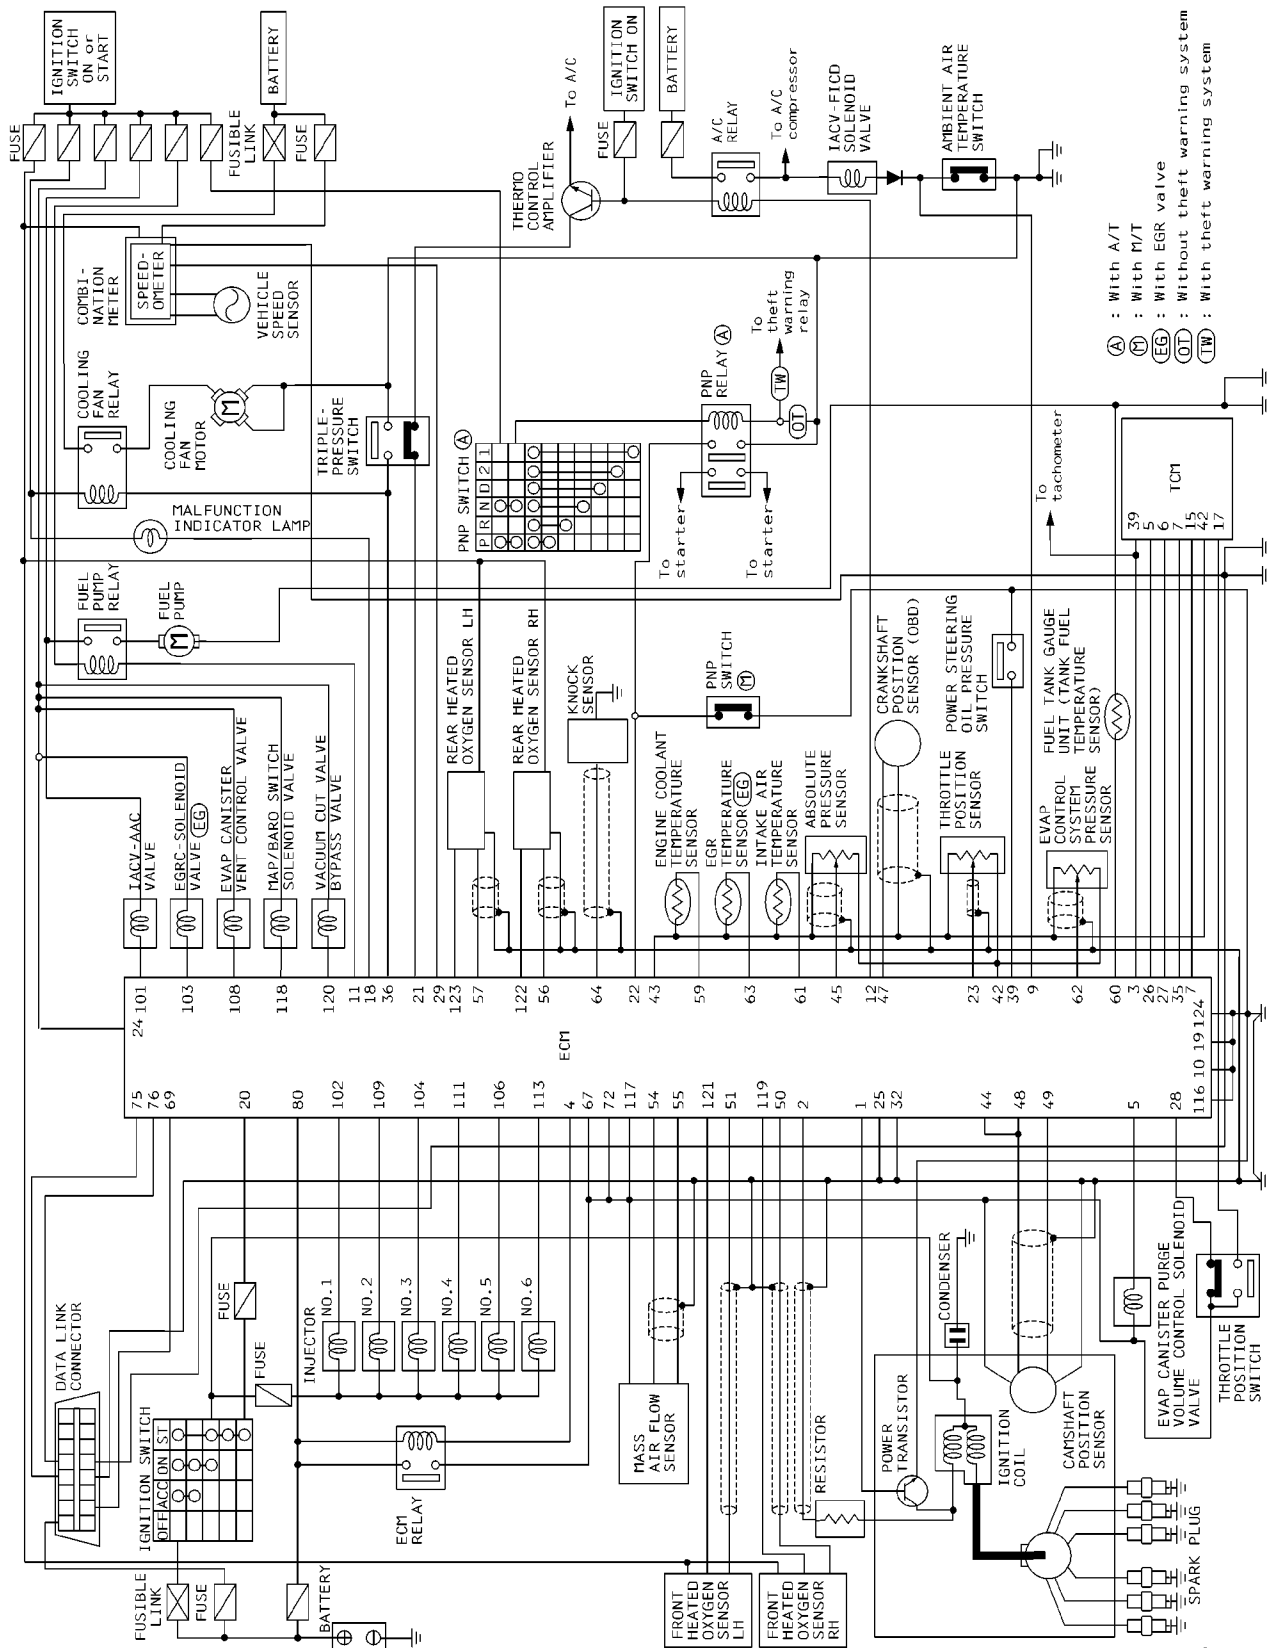
 GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

AEC067B

System Diagram

NEEC0011

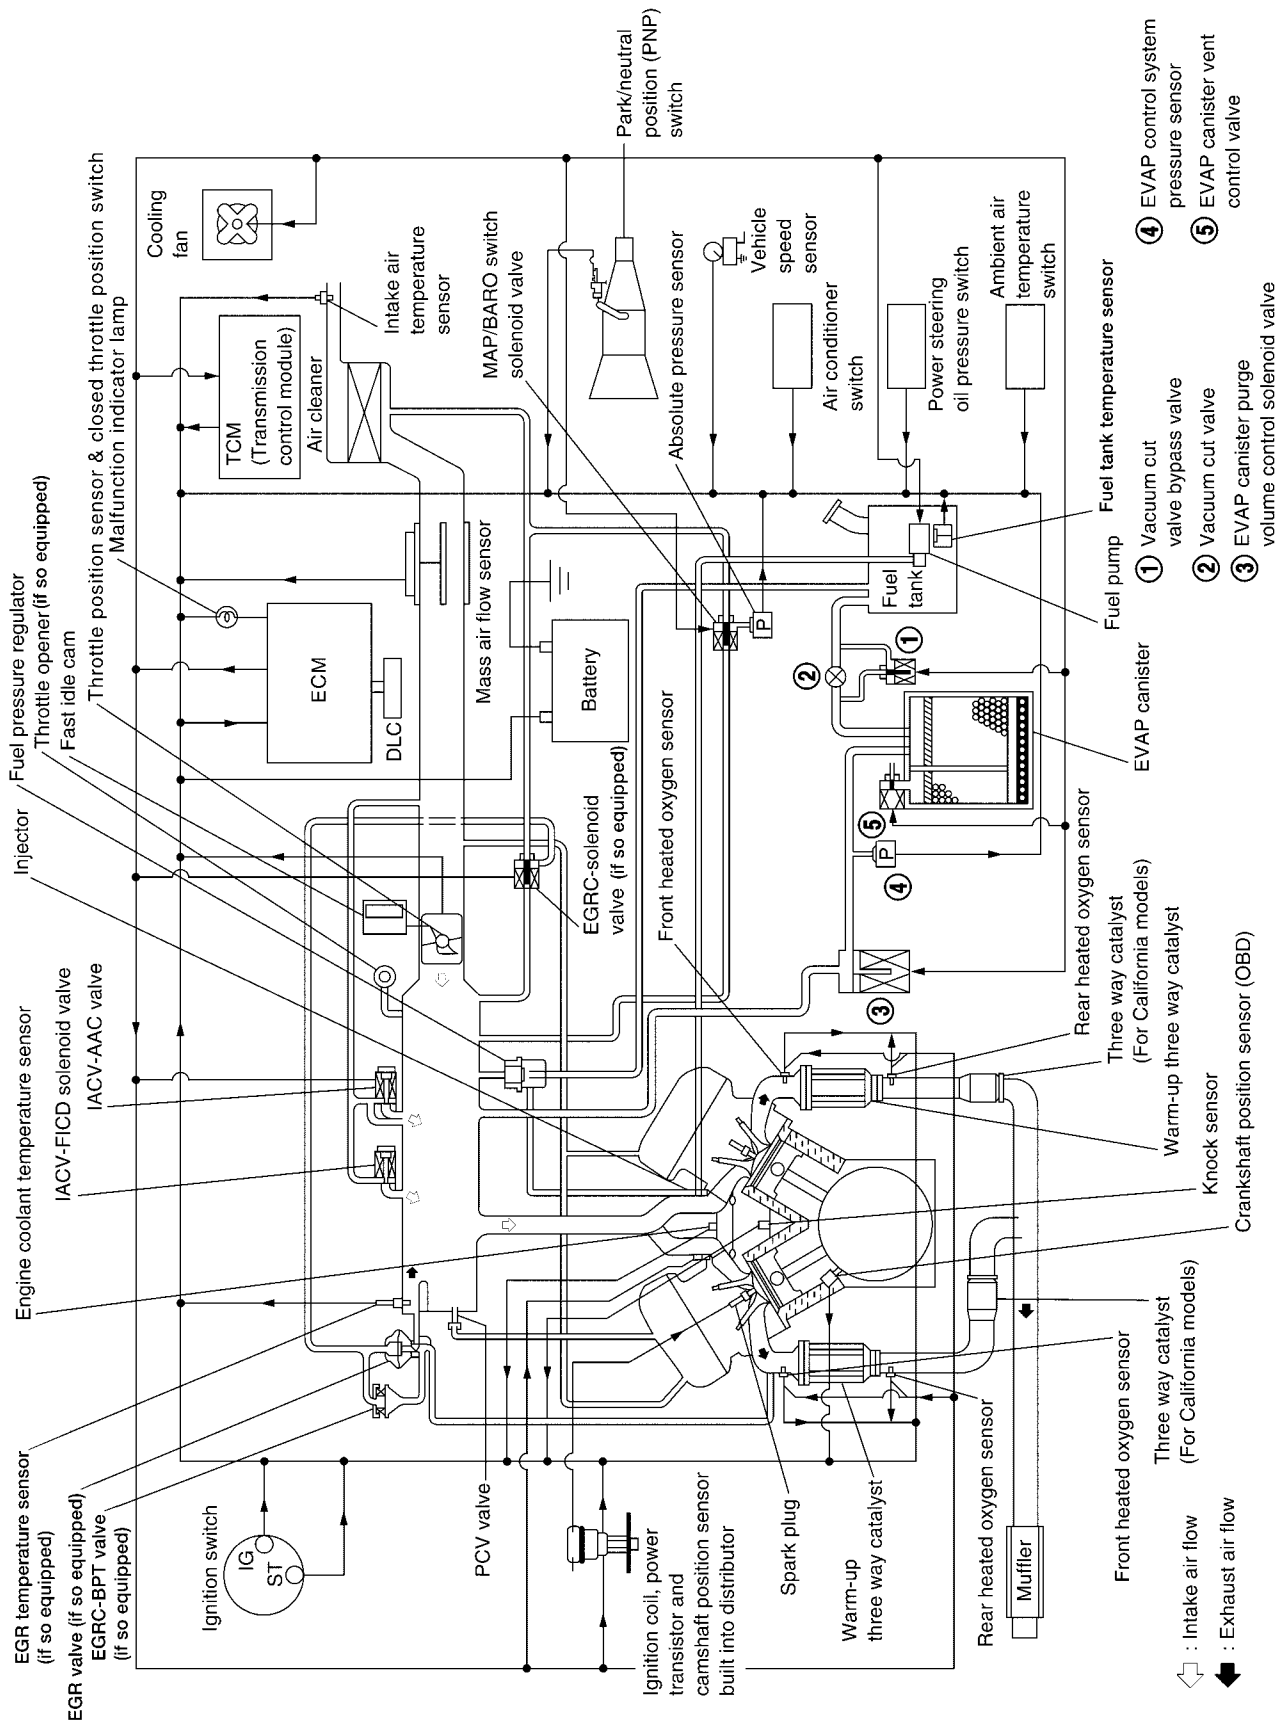


AEC068B

Vacuum Hose Drawing

NEEC0012

Refer to "System Diagram", EC-606 for Vacuum Control System.

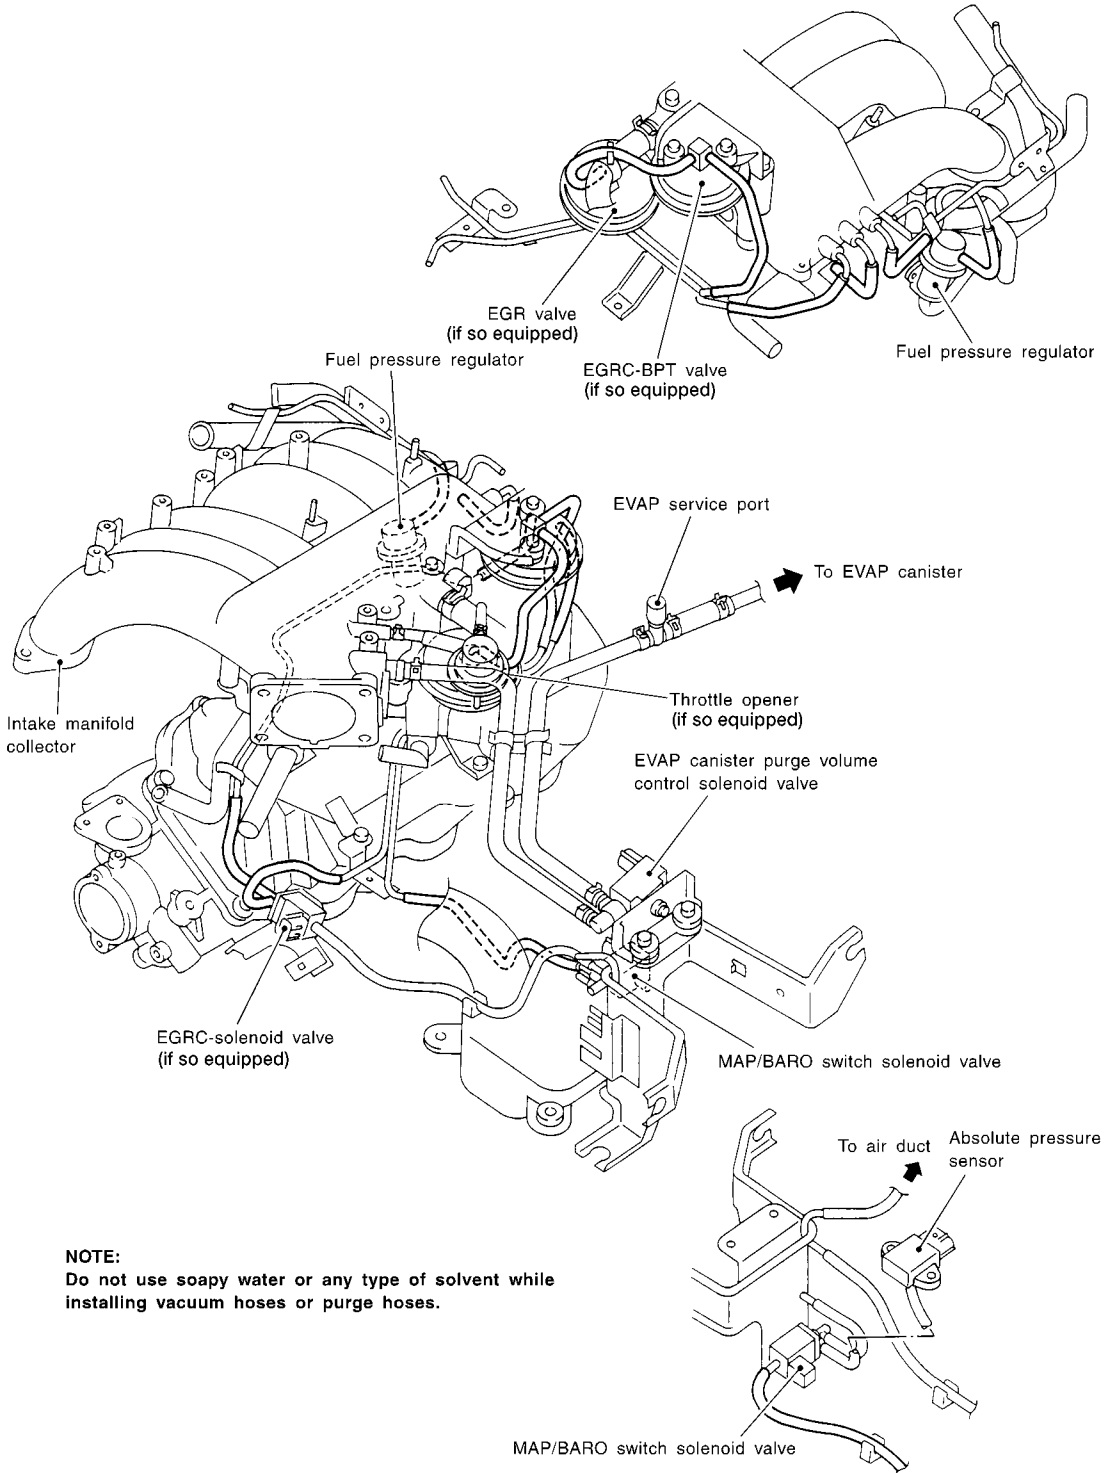

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

AEC069B

System Chart

NEEC0013

Input (Sensor)	ECM Function	Output (Actuator)
<ul style="list-style-type: none"> ● Camshaft position sensor ● Mass air flow sensor ● Engine coolant temperature sensor ● Front heated oxygen sensor ● Ignition switch ● Throttle position sensor ● Closed throttle position switch *4 ● Park/neutral position (PNP) switch ● Air conditioner switch ● Knock sensor ● EGR temperature sensor *1 (if so equipped) ● Intake air temperature sensor ● Absolute pressure sensor ● EVAP control system pressure sensor *1 ● Battery voltage ● Power steering oil pressure switch ● Vehicle speed sensor ● Fuel tank temperature sensor *1 ● Crankshaft position sensor (OBD) *1 ● Rear heated oxygen sensor *3 ● TCM (Transmission control module) *2 ● Ambient air temperature switch 	Fuel injection & mixture ratio control	Injectors
	Distributor ignition system	Power transistor
	Idle air control system	IACV-AAC valve and IACV-FICD solenoid valve
	Fuel pump control	Fuel pump relay
	Front heated oxygen sensor monitor & on board diagnostic system	MIL (On the instrument panel)
	EGR control (if so equipped)	EGRC-solenoid valve (if so equipped)
	Front heated oxygen sensor heater control	Front heated oxygen sensor heater
	Rear heated oxygen sensor heater control	Rear heated oxygen sensor heater
	EVAP canister purge flow control	EVAP canister purge volume control solenoid valve
	Air conditioning cut control	Air conditioner relay
	Cooling fan control	Cooling fan relays
	ON BOARD DIAGNOSIS for EVAP system	<ul style="list-style-type: none"> ● EVAP canister vent control valve ● Vacuum cut valve bypass valve ● MAP/BARO switch solenoid valve

*1: These sensors are not used to control the engine system. They are used only for the on board diagnosis.

*2: The DTC related to A/T will be sent to ECM.

*3: This sensor is not used to control the engine system under normal conditions.

*4: This switch will operate in place of the throttle position sensor to control EVAP parts if the sensor malfunctions.

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

VG33E

Multiport Fuel Injection (MFI) System

Multiport Fuel Injection (MFI) System

DESCRIPTION

Input/Output Signal Chart

NEEC0014

NEEC0014S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed and piston position	Fuel injection & mixture ratio control	Injectors
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Front heated oxygen sensor	Density of oxygen in exhaust gas		
Throttle position sensor	Throttle position Throttle valve idle position		
Park/neutral position (PNP) switch	Gear position		
Vehicle speed sensor	Vehicle speed		
Ignition switch	Start signal		
Air conditioner switch	Air conditioner operation		
Knock sensor	Engine knocking condition		
Battery	Battery voltage		
Absolute pressure sensor	Manifold absolute pressure Ambient air barometric pressure		
Power steering oil pressure switch	Power steering operation		
Rear heated oxygen sensor*	Density of oxygen in exhaust gas		

* Under normal conditions, this sensor is not for engine control operation.

Basic Multiport Fuel Injection System

NEEC0014S02

The amount of fuel injected from the fuel injector is determined by the ECM. The ECM controls the length of time the valve remains open (injection pulse duration). The amount of fuel injected is a program value in the ECM memory. The program value is preset by engine operating conditions. These conditions are determined by input signals (for engine speed and intake air) from both the camshaft position sensor and the mass air flow sensor.

Various Fuel Injection Increase/Decrease Compensation

NEEC0014S03

In addition, the amount of fuel injected is compensated to improve engine performance under various operating conditions as listed below.


<Fuel increase>

- During warm-up
- When starting the engine
- During acceleration
- Hot-engine operation
- When selector lever is changed from "N" to "D"
- High-load, high-speed operation

<Fuel decrease>

- During deceleration
- During high engine speed operation

Mixture Ratio Feedback Control (Closed loop control)

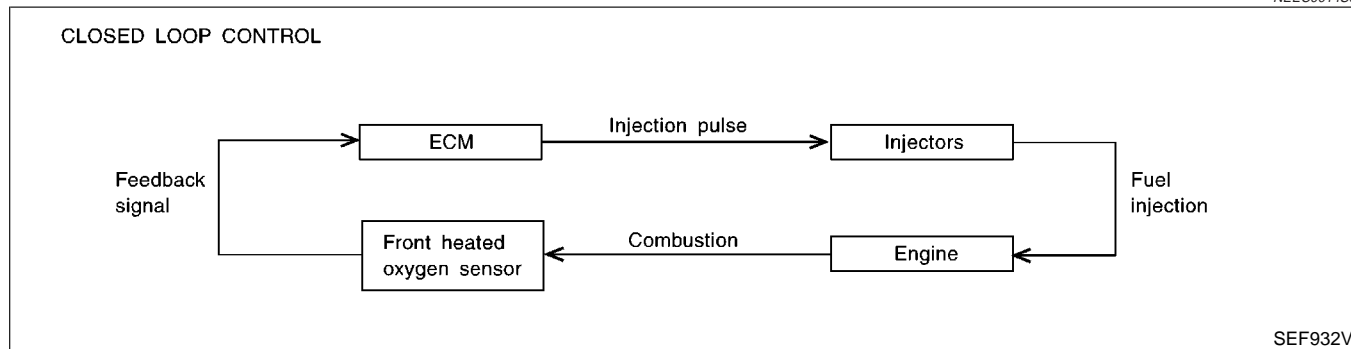NEEC0014S04


The mixture ratio feedback system provides the best air-fuel mixture ratio for driveability and emission control. The warm-up three way catalyst can then better reduce CO, HC and NOx emissions. This system uses a front heated oxygen sensor in the exhaust manifold to monitor if the engine operation is rich or lean. The ECM adjusts the injection pulse width according to the sensor voltage signal. For more information about the front heated oxygen sensor, refer to EC-774. This maintains the mixture ratio within the range of stoichiometric (ideal air-fuel mixture).

This stage is referred to as the closed loop control condition.

Rear heated oxygen sensor is located downstream of the warm-up three way catalyst. Even if the switching characteristics of the front heated oxygen sensor shift, the air-fuel ratio is controlled to stoichiometric by the signal from the rear heated oxygen sensor.

Open Loop Control

NEEC0014S05

The open loop system condition refers to when the ECM detects any of the following conditions. Feedback control stops in order to maintain stabilized fuel combustion.

- Deceleration and acceleration
- High-load, high-speed operation
- Malfunction of front heated oxygen sensor or its circuit
- Insufficient activation of front heated oxygen sensor at low engine coolant temperature
- High engine coolant temperature
- During warm-up
- When starting the engine

Mixture Ratio Self-learning Control

NEEC0014S06

The mixture ratio feedback control system monitors the mixture ratio signal transmitted from the front heated oxygen sensor. This feedback signal is then sent to the ECM. The ECM controls the basic mixture ratio as close to the theoretical mixture ratio as possible. However, the basic mixture ratio is not necessarily controlled as originally designed. Both manufacturing differences (i.e., mass air flow sensor hot wire) and characteristic changes during operation (i.e., injector clogging) directly affect mixture ratio.

Accordingly, the difference between the basic and theoretical mixture ratios is monitored in this system. This is then computed in terms of "injection pulse duration" to automatically compensate for the difference between the two ratios.

"Fuel trim" refers to the feedback compensation value compared against the basic injection duration. Fuel trim includes short term fuel trim and long term fuel trim.

"Short term fuel trim" is the short-term fuel compensation used to maintain the mixture ratio at its theoretical value. The signal from the front heated oxygen sensor indicates whether the mixture ratio is RICH or LEAN compared to the theoretical value. The signal then triggers a reduction in fuel volume if the mixture ratio is rich, and an increase in fuel volume if it is lean.

"Long term fuel trim" is overall fuel compensation carried out long-term to compensate for continual deviation of the short term fuel trim from the central value. Such deviation will occur due to individual engine differences, wear over time and changes in the usage environment.


ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

VG33E

Multiport Fuel Injection (MFI) System (Cont'd)

Fuel Injection Timing

NEEC0014S07

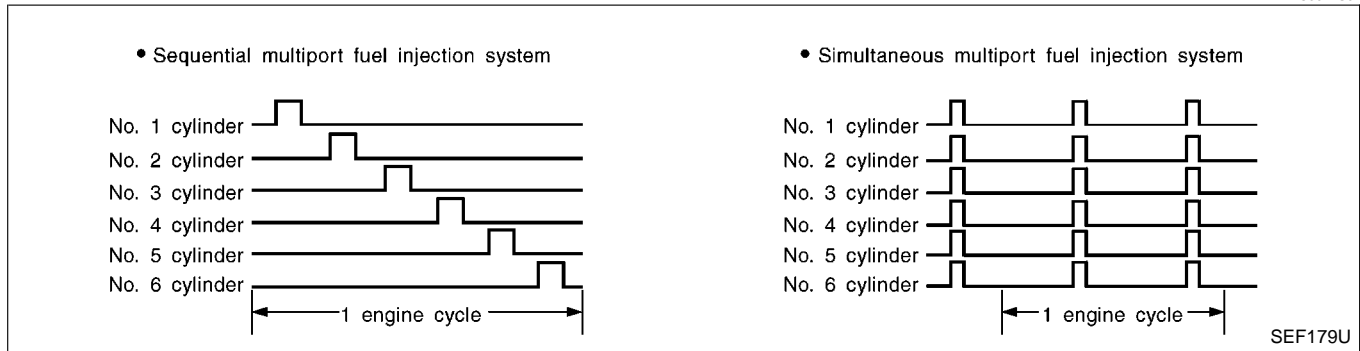

SEF179U

Two types of systems are used.

Sequential Multiport Fuel Injection System

NEEC0014S0701

Fuel is injected into each cylinder during each engine cycle according to the firing order. This system is used when the engine is running.

Simultaneous Multiport Fuel Injection System

NEEC0014S0702

Fuel is injected simultaneously into all six cylinders twice each engine cycle. In other words, pulse signals of the same width are simultaneously transmitted from the ECM.

The six injectors will then receive the signals two times for each engine cycle.

This system is used when the engine is being started and/or if the fail-safe system (CPU) is operating.

Fuel Shut-off

NEEC0014S08

Fuel to each cylinder is cut off during deceleration or operation of the engine at excessively high speeds.

Distributor Ignition (DI) System

DESCRIPTION


Input/Output Signal Chart

NEEC0015

NEEC0015S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed and piston position	Ignition timing control	Power transistor
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Throttle position sensor	Throttle position Throttle valve idle position		
Vehicle speed sensor	Vehicle speed		
Ignition switch	Start signal		
Knock sensor	Engine knocking		
Park/neutral position (PNP) switch	Gear position		
Battery	Battery voltage		

System Description

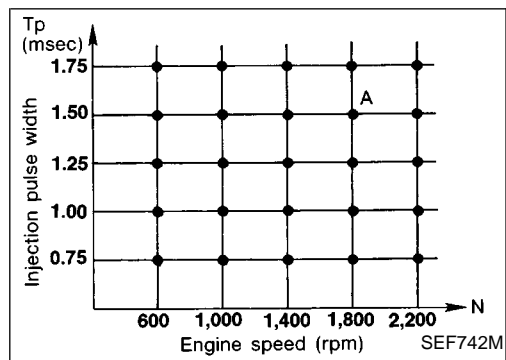

The ignition timing is controlled by the ECM to maintain the best air-fuel ratio for every running condition of the engine. The ignition timing data is stored in the ECM. This data forms the map shown.

The ECM receives information such as the injection pulse width and camshaft position sensor signal. Computing this information, ignition signals are transmitted to the power transistor.

e.g., N: 1,800 rpm, Tp: 1.50 msec
A °BTDC

During the following conditions, the ignition timing is revised by the ECM according to the other data stored in the ECM.

- At starting
- During warm-up
- At idle
- At low battery voltage
- During acceleration

The knock sensor retard system is designed only for emergencies. The basic ignition timing is programmed within the anti-knocking zone, if recommended fuel is used under dry conditions. The retard system does not operate under normal driving conditions. If engine knocking occurs, the knock sensor monitors the condition. The signal is transmitted to the ECM. The ECM retards the ignition timing to eliminate the knocking condition.

Air Conditioning Cut Control

DESCRIPTION

Input/Output Signal Chart

Sensor	Input Signal to ECM	ECM function	Actuator
Air conditioner switch	Air conditioner "ON" signal	Air conditioner cut control	Air conditioner relay
Throttle position sensor	Throttle valve opening angle		
Camshaft position sensor	Engine speed		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Vehicle speed sensor	Vehicle speed		
Power steering oil pressure switch	Power steering operation		

System Description

This system improves engine operation when the air conditioner is used.

Under the following conditions, the air conditioner is turned off.

- When the accelerator pedal is fully depressed.
- When cranking the engine.
- At high engine speeds.
- When the engine coolant temperature becomes excessively high.
- When operating power steering during low engine speed or low vehicle speed.
- When engine speed is excessively low.

Fuel Cut Control (at no load & high engine speed)

DESCRIPTION

Input/Output Signal Chart

NEEC0017

NEEC0017S01

Sensor	Input Signal to ECM	ECM function	Actuator
Vehicle speed sensor	Vehicle speed	Fuel cut control	Injectors
Park/neutral position (PNP) switch	Neutral position		
Throttle position sensor	Throttle position		
Engine coolant temperature sensor	Engine coolant temperature		
Camshaft position sensor	Engine speed		

If the engine speed is above 2,500 rpm with no load (for example, in neutral and engine speed over 2,500 rpm) fuel will be cut off after some time. The exact time when the fuel is cut off varies based on engine speed. Fuel cut will operate until the engine speed reaches 2,000 rpm, then fuel cut is cancelled.


NOTE:

This function is different from deceleration control listed under “Multiport Fuel Injection (MFI) System”, EC-609.

Evaporative Emission System

DESCRIPTION


NEEC0018

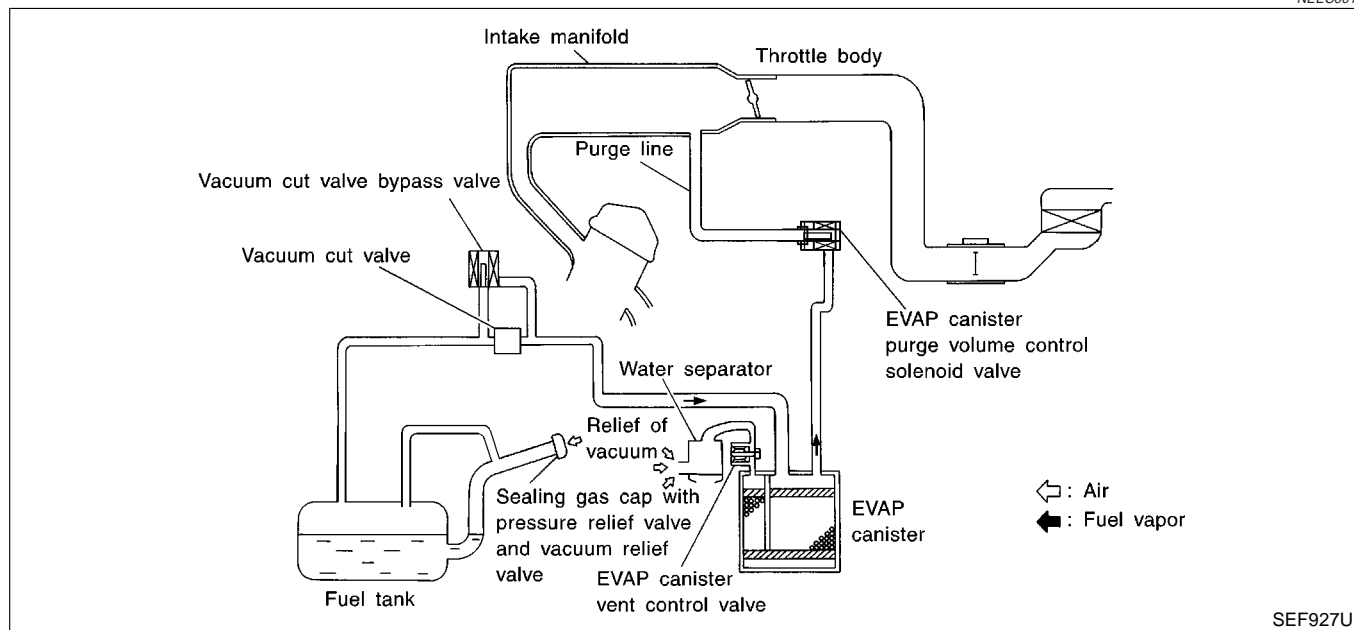

SEF927U

The evaporative emission system is used to reduce hydrocarbons emitted into the atmosphere from the fuel system. This reduction of hydrocarbons is accomplished by activated charcoals in the EVAP canister. The fuel vapor in the sealed fuel tank is led into the EVAP canister which contains activated carbon and the vapor is stored there when the engine is not operating or when refueling to the fuel tank. The vapor in the EVAP canister is purged by the air through the purge line to the intake manifold when the engine is operating. EVAP canister purge volume control solenoid valve is controlled by ECM. When the engine operates, the flow rate of vapor controlled by EVAP canister purge volume control solenoid valve is proportionally regulated as the air flow increases. EVAP canister purge volume control solenoid valve also shuts off the vapor purge line during decelerating and idling.

Evaporative Emission System (Cont'd)

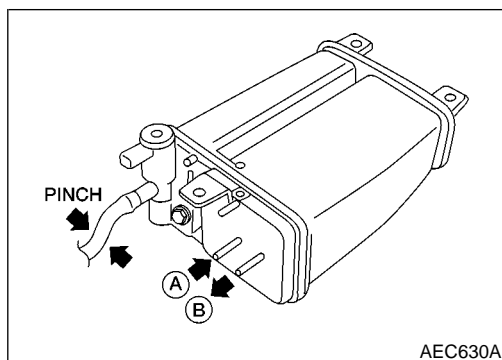

INSPECTION


EVAP Canister

Check EVAP canister as follows:

1. Pinch the fresh air hose.
2. Blow air into port **A** and check that it flows freely out of port **B**.

NEEC0019

NEEC0019S01

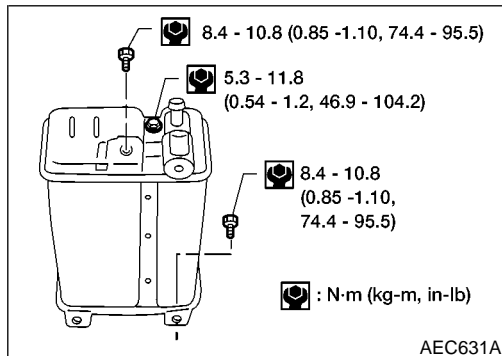


Tightening Torque

Tighten EVAP canister as shown in the figure.

Make sure new O-ring is installed properly between EVAP canister and EVAP canister vent control valve.

NEEC0019S02

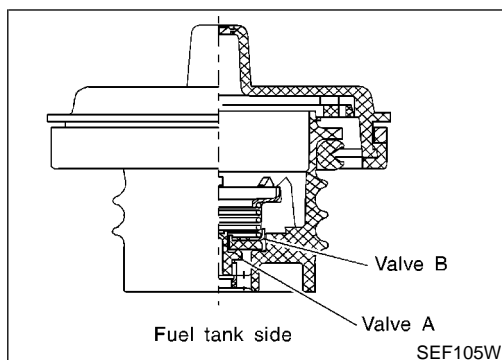

Fuel Tank Vacuum Relief Valve (Built into fuel filler cap)

1. Wipe clean valve housing.
2. Check valve opening pressure and vacuum.

Pressure:

15.3 - 20.0 kPa (0.156 - 0.204 kg/cm², 2.22 - 2.90 psi)

Vacuum:


-6.0 to -3.3 kPa (-0.061 to -0.034 kg/cm², -0.87 to -0.48 psi)

3. If out of specification, replace fuel filler cap as an assembly.

CAUTION:

Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.

NEEC0019S03

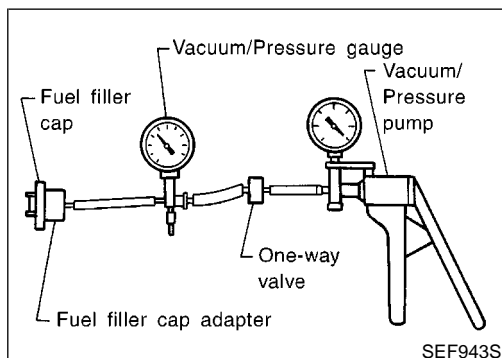

Vacuum Cut Valve and Vacuum Cut Valve Bypass Valve

Refer to EC-1129.

NEEC0019S04

Evaporative Emission (EVAP) Canister Purge Volume Control Solenoid Valve

Refer to EC-968.

NEEC0019S05

Tank Fuel Temperature Sensor


Refer to EC-885.

NEEC0019S06

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

VG33E


Evaporative Emission System (Cont'd)

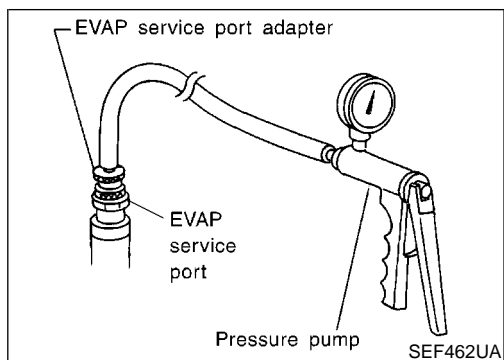

Evap Service Port

NEEC0019S07

Positive pressure is delivered to the EVAP system through the EVAP service port. If fuel vapor leakage in the EVAP system occurs, use a leak detector to locate the leak.

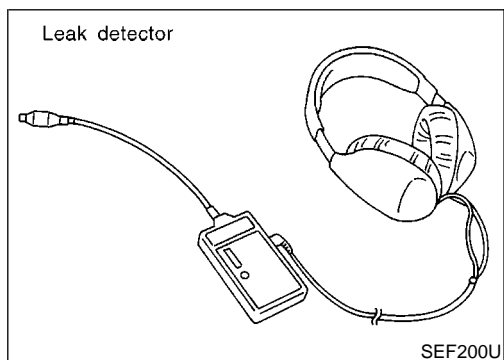

How to Detect Fuel Vapor Leakage

NEEC0019S08

CAUTION:



- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in EVAP system.

NOTE:

- Do not start engine.
- Improper installation of EVAP service port adapter to the EVAP service port may cause a leak.

Ⓜ With CONSULT-II

- 1) Attach the EVAP service port adapter securely to the EVAP service port.
- 2) Also attach the pressure pump and hose to the EVAP service port adapter.
- 3) Turn ignition switch "ON".
- 4) Select the "EVAP SYSTEM CLOSE" of "WORK SUPPORT MODE" with CONSULT-II.
- 5) Touch "START". A bar graph (Pressure indicating display) will appear on the screen.
- 6) Apply positive pressure to the EVAP system until the pressure indicator reaches the middle of the bar graph.
- 7) Remove EVAP service port adapter and hose with pressure pump.
- 8) Locate the leak using a leak detector. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-617.

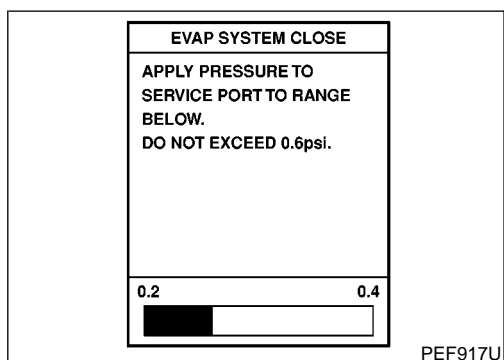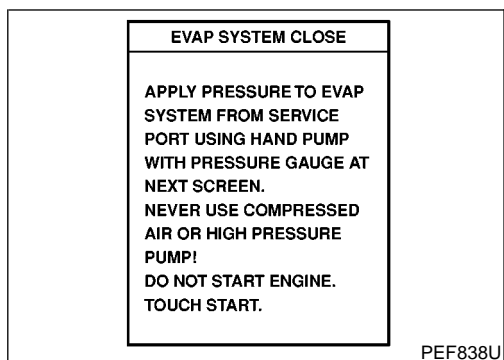

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT



HA

SC

EL

IDX

Evaporative Emission System (Cont'd)

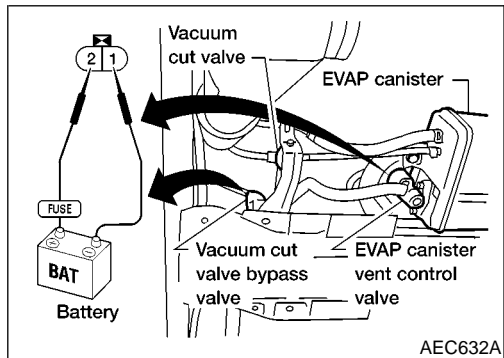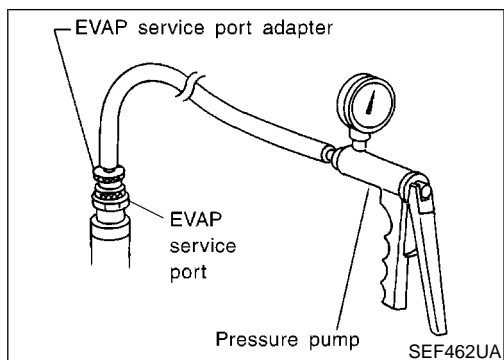

⊗ Without CONSULT-II

- 1) Attach the EVAP service port adapter securely to the EVAP service port.
- 2) Also attach the pressure pump with pressure gauge to the EVAP service port adapter.
- 3) Apply battery voltage to between the terminals of both EVAP canister vent control valve and vacuum cut valve bypass valve to make a closed EVAP system.
- 4) To locate the leak, deliver positive pressure to the EVAP system until pressure gauge points reach 1.38 - 2.76 kPa (0.014 - 0.028 kg/cm², 0.2 - 0.4 psi).
- 5) Remove EVAP service port adapter and hose with pressure pump.
- 6) Locate the leak using a leak detector. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-617.


ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

VG33E

Evaporative Emission System (Cont'd)

EVAPORATIVE EMISSION LINE DRAWING

NEEC0020

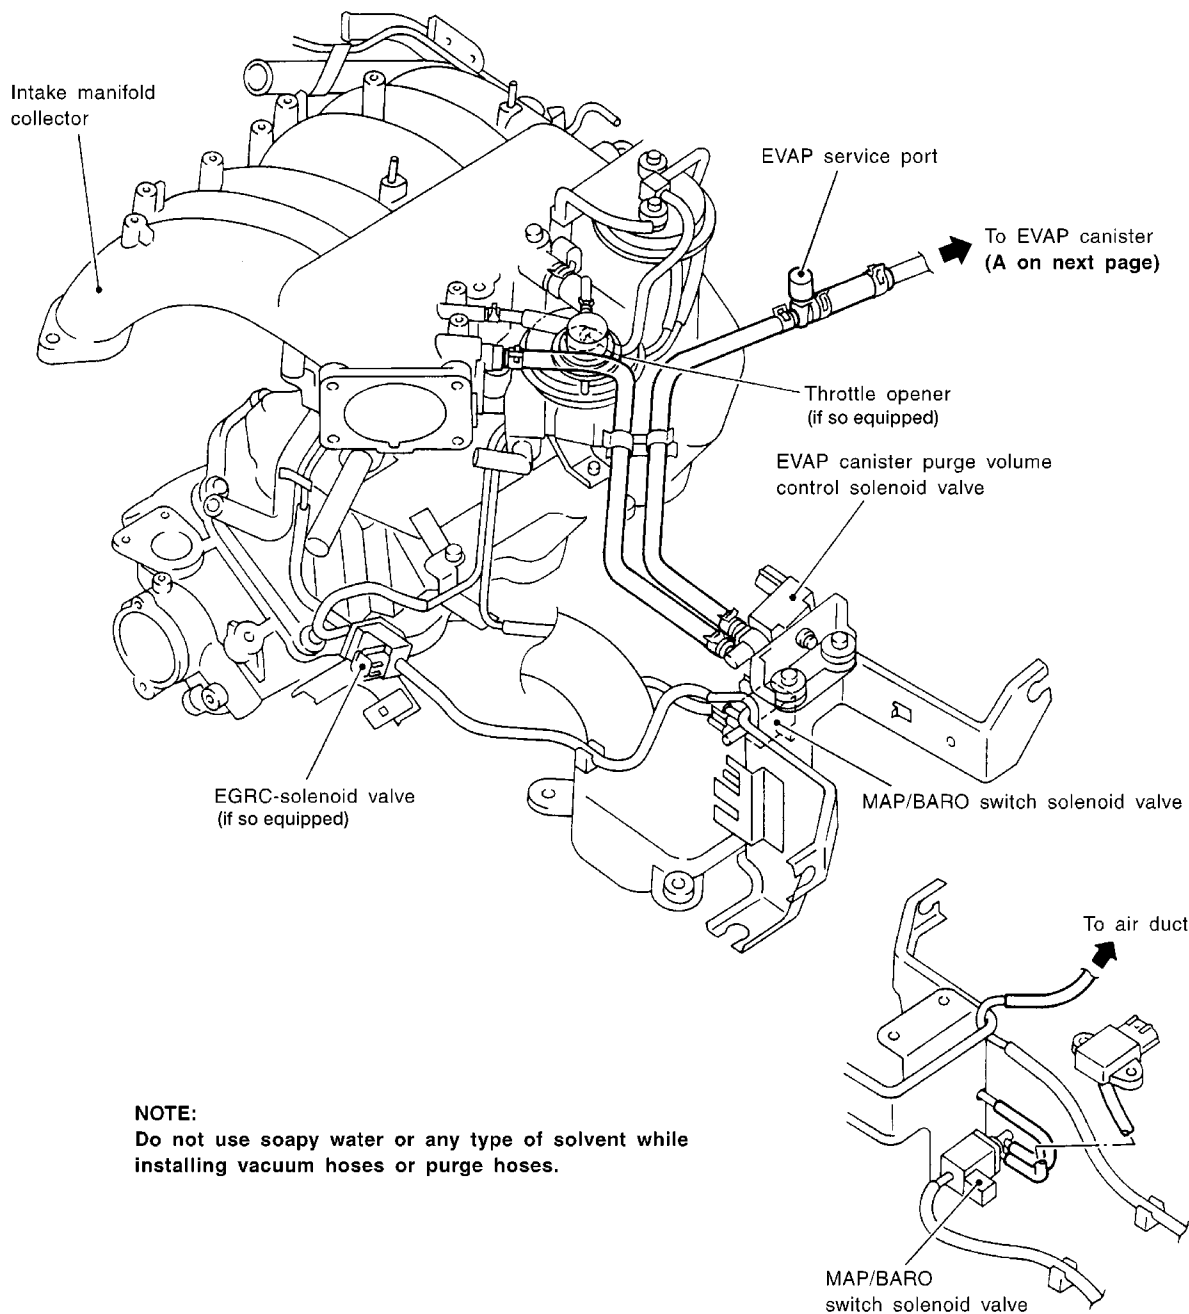

NOTE:
Do not use soapy water or any type of solvent while installing vacuum hoses or purge hoses.


AEC070B

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX





ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

VG33E

Evaporative Emission System (Cont'd)

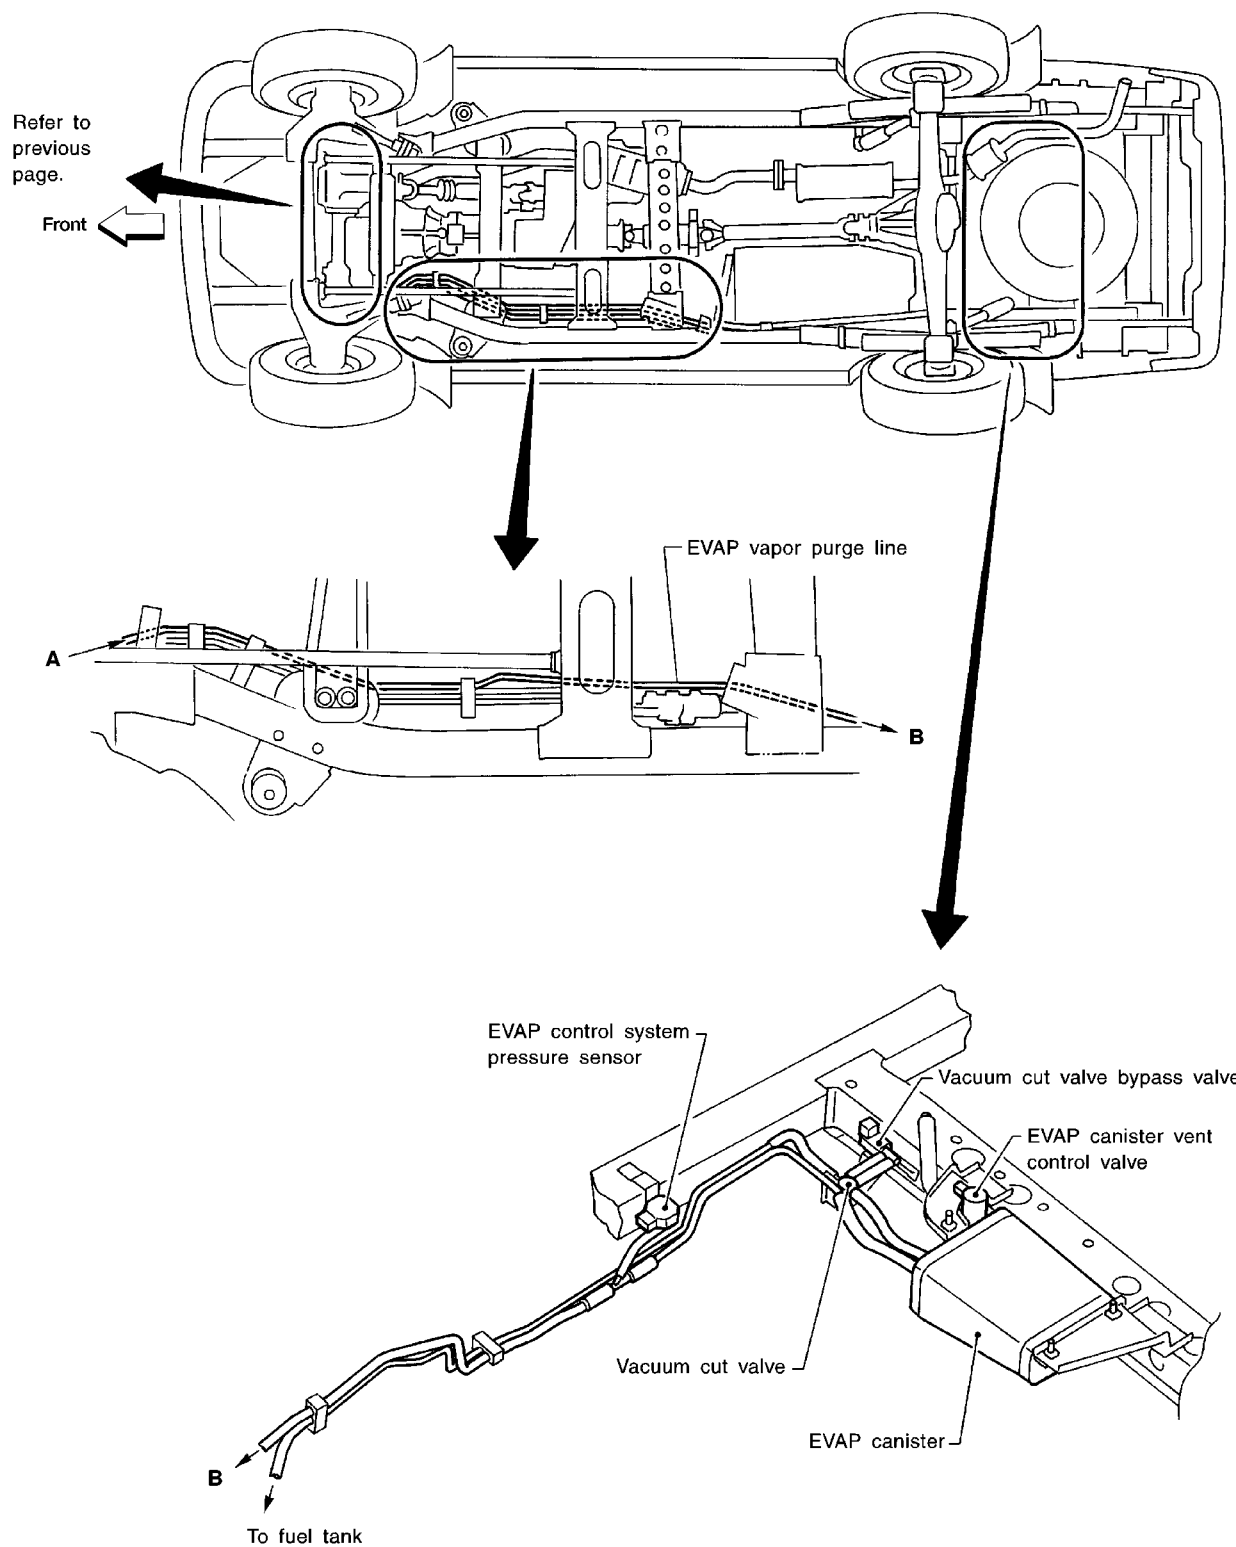

AEC886A

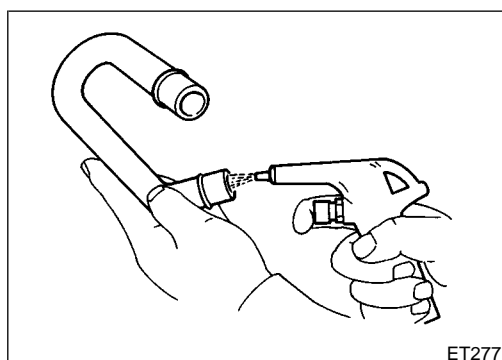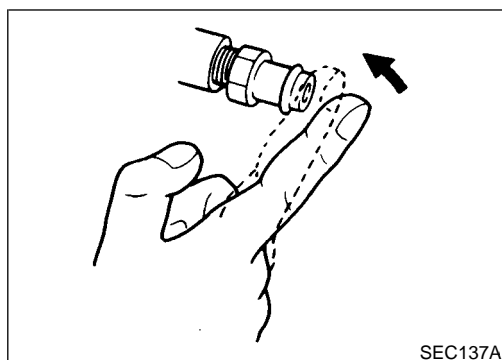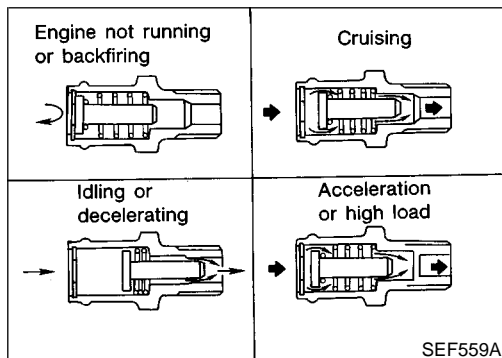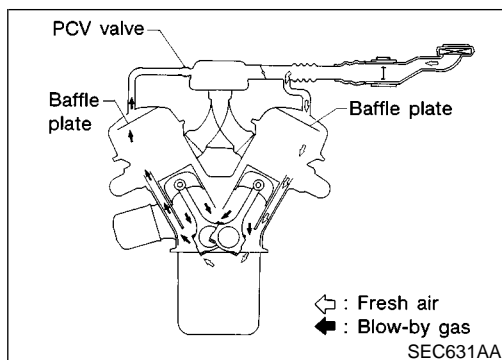

Positive Crankcase Ventilation DESCRIPTION

NEEC0021

This system returns blow-by gas to the intake manifold. The positive crankcase ventilation (PCV) valve is provided to conduct crankcase blow-by gas to the intake manifold.

During partial throttle operation of the engine, the intake manifold sucks the blow-by gas through the PCV valve.

Normally, the capacity of the valve is sufficient to handle any blow-by and a small amount of ventilating air.

The ventilating air is then drawn from the air inlet tubes into the crankcase. In this process the air passes through the hose connecting air inlet tubes to rocker cover.

Under full-throttle condition, the manifold vacuum is insufficient to draw the blow-by flow through the valve. The flow goes through the hose connection in the reverse direction.

On vehicles with an excessively high blow-by, the valve does not meet the requirement. This is because some of the flow will go through the hose connection to the air inlet tubes under all conditions.

INSPECTION

NEEC0022

PCV (Positive Crankcase Ventilation) Valve

NEEC0022S01

With engine running at idle, remove PCV valve ventilation hose from PCV valve; if the valve is working properly, a hissing noise will be heard as air passes through it and a strong vacuum should be felt immediately when a finger is placed over valve inlet.

PCV Valve Ventilation Hose

NEEC0022S02

1. Check hoses and hose connections for leaks.
2. Disconnect all hoses and clean with compressed air. If any hose cannot be freed of obstructions, replace.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT




HA

SC

EL

IDX

Fuel Pressure Release

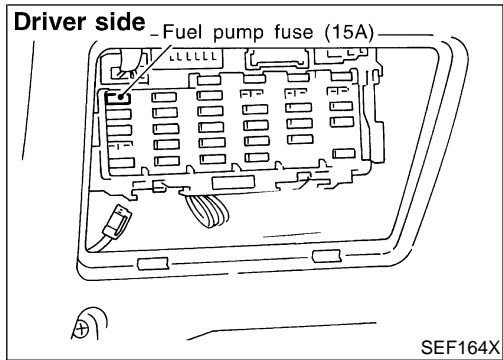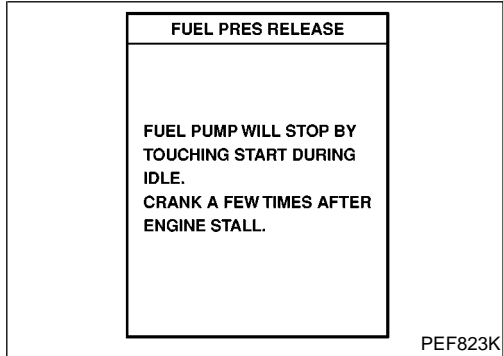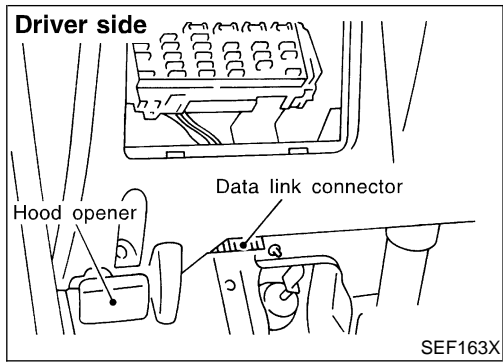

Fuel Pressure Release

NEEC0023

Before disconnecting fuel line, release fuel pressure from fuel line to eliminate danger.

Ⓜ WITH CONSULT-II

NEEC0023S01

1. Turn ignition switch "ON".
2. Perform "FUEL PRESSURE RELEASE" in "WORK SUPPORT" mode with CONSULT-II.
3. Start engine.
4. After engine stalls, crank it two or three times to release all fuel pressure.
5. Turn ignition switch "OFF".

ⓧ WITHOUT CONSULT-II


NEEC0023S02

1. Remove fuel pump fuse located in fuse box.
2. Start engine.
3. After engine stalls, crank it two or three times to release all fuel pressure.
4. Turn ignition switch "OFF".
5. Reinstall fuel pump fuse after servicing fuel system.

Fuel Pressure Check

NEEC0024

- When reconnecting fuel line, always use new clamps.
 - Make sure that clamp screw does not contact adjacent parts.
 - Use a torque driver to tighten clamps.
 - Use Pressure Gauge to check fuel pressure.
 - Do not perform fuel pressure check with system operating. Fuel pressure gauge may indicate false readings.
1. Release fuel pressure to zero.
 2. Disconnect fuel hose between fuel filter and fuel tube (engine side).

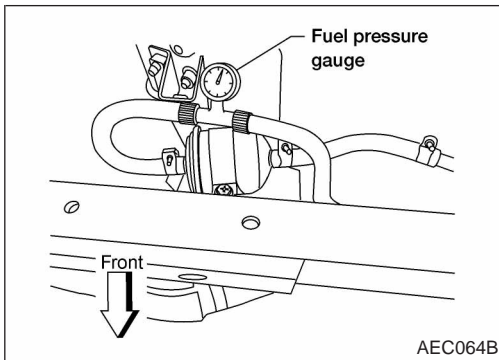

3. Install pressure gauge between fuel filter and fuel tube.
4. Start engine and check for fuel leakage.
5. Read the indication of fuel pressure gauge.


At idling:
With vacuum hose connected

Approximately 235 kPa (2.4 kg/cm², 34 psi)

With vacuum hose disconnected

Approximately 294 kPa (3.0 kg/cm², 43 psi)


If results are unsatisfactory, perform Fuel Pressure Regulator Check.

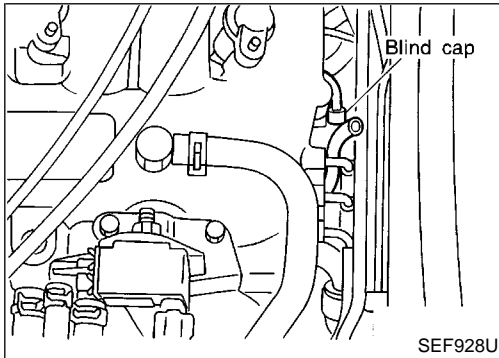

Fuel Pressure Regulator Check


NEEC0025

1. Stop engine and disconnect fuel pressure regulator vacuum hose from intake manifold.
2. Plug intake manifold with a blind cap.
3. Connect variable vacuum source to fuel pressure regulator.

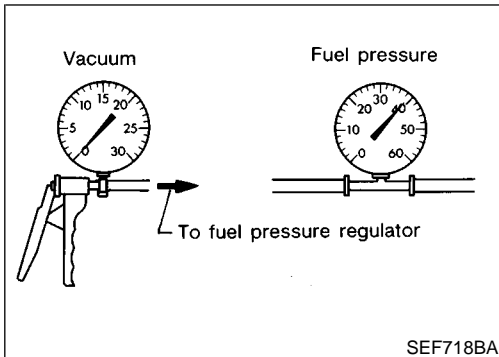

4. Start engine and read indication of fuel pressure gauge as vacuum is changed.

Fuel pressure should decrease as vacuum increases. If results are unsatisfactory, replace fuel pressure regulator.

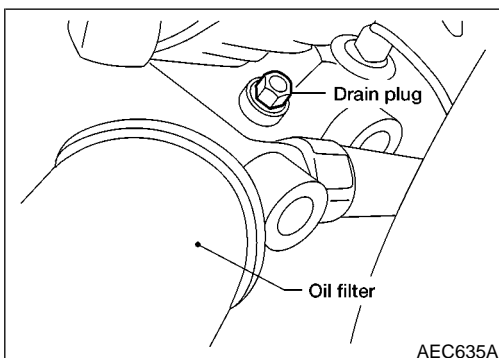


Injector


REMOVAL AND INSTALLATION

NEEC0026


1. Release fuel pressure to zero. Refer to EC-620.
2. Drain coolant by removing drain plugs from both sides of cylinder block.
3. Separate ASCD and accelerator control wire from intake manifold collector.
4. Remove intake manifold collector from engine. The following parts should be disconnected or removed.
 - a. Harness connectors for
 - IACV-AAC valve
 - IACV-FICD solenoid valve
 - Throttle position sensor and closed throttle position switch assembly
 - EGRC-solenoid valve (if so equipped)
 - EGR temperature sensor (if so equipped)
 - Ground harness
 - b. PCV valve ventilation hoses
 - c. Vacuum hoses for
 - Brake booster
 - EGRC-solenoid valve (if so equipped)

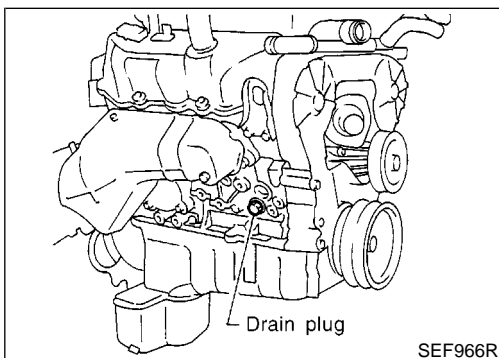

- Fuel pressure regulator
- EGRC-BPT valve (if so equipped)
- d. Air hoses from
 - Air duct
 - IACV-AAC valve
- e. Water hoses for
 - Throttle body
 - Air relief plug
- f. EVAP canister purge hose
- g. EGR flare tube (if so equipped)
- 5. Remove injector fuel tube assembly.
The following parts should be disconnected or removed.
 - Vacuum hose for fuel pressure regulator
 - Fuel feed and return hose
 - All injectors harness connectors
 - **Push injector tail piece.**
 - **Do not pull on connector.**
 - **Do not extract injector by pinching.**

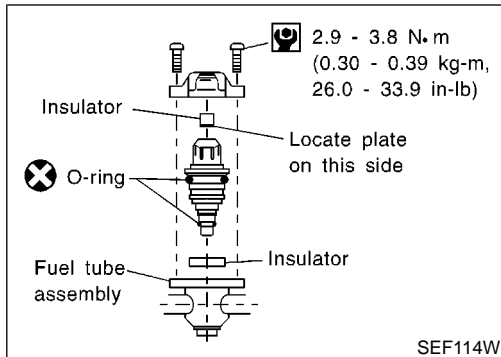


6. Push out any malfunctioning injector from injector fuel tube.
7. Replace or clean injector as necessary.
 - **Always replace O-rings with new ones.**
 - **Lubricate O-rings with engine oil.**
8. Install injector to injector fuel tube assembly.

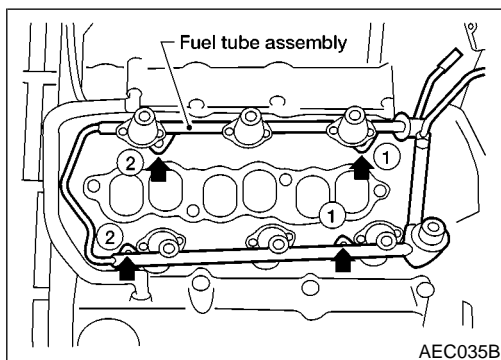

9. Install injectors with fuel tube assembly to intake manifold.
Tighten in numerical order shown in the figure.
 - a. First, tighten all bolts to 4.9 to 6.0 N-m (0.5 to 0.61 kg-m, 3.6 to 4.4 ft-lb).
 - b. Then, tighten all bolts to 10.8 to 14.7 N-m (1.1 to 1.5 kg-m, 8 to 11 ft-lb).
10. Reinstall any part removed in reverse order of removal.

CAUTION:
After properly connecting fuel hose to injector and fuel tube, check connection for fuel leakage.

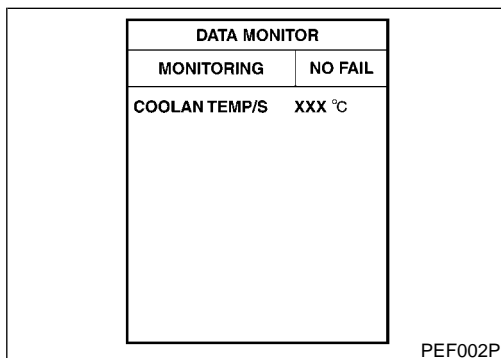






Fast Idle Cam (FIC) INSPECTION AND ADJUSTMENT

With CONSULT-II

1. Turn ignition switch "ON".
2. See "COOLAN TEMP/S" in "DATA MONITOR" mode with CONSULT-II.
3. When engine coolant temperature is 20 to 30°C (68 to 86°F), make sure that the center of mark **A** is aligned with mark **B** as shown in the figure.

NEEC0027

NEEC0027S01

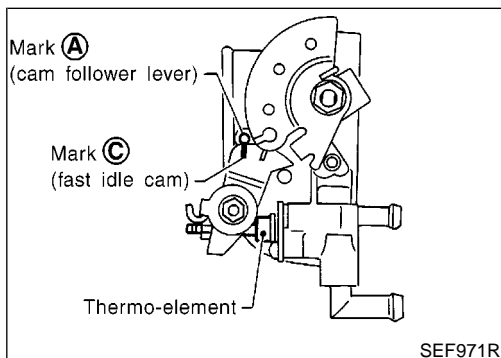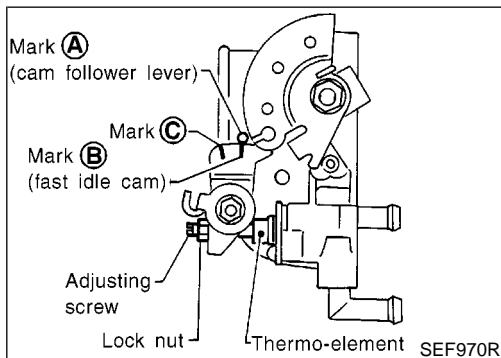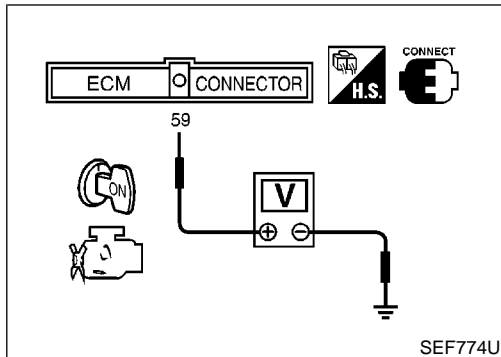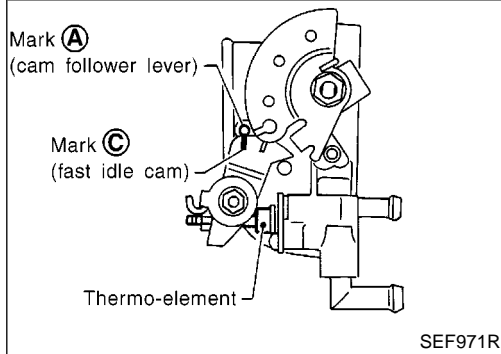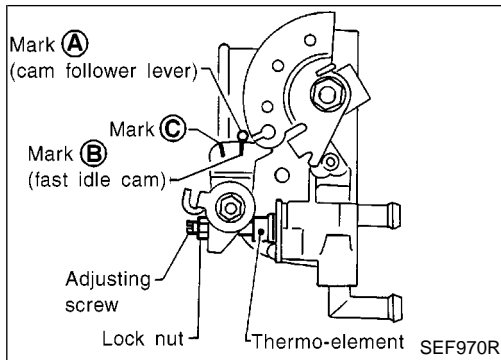

- If NG, adjust by turning adjusting screw.

Lock nut:

: 0.98 - 1.96 N·m (10 - 20 kg·cm, 8.7 - 17.4 in·lb)

4. Start engine and warm it up.
5. When engine coolant temperature is 75 to 85°C (167 to 185°F), check the following.
 - The center of mark **A** is aligned with mark **C**.
 - The cam follower lever's roller is not touching the fast idle cam.
 - If NG, replace thermo-element and perform the above inspection and adjustment again.

⊗ Without CONSULT-II
NEEC0027S02

1. Turn ignition switch "ON".
2. Check voltage between ECM terminal 59 (Engine coolant temperature sensor signal) and ground.
3. When the voltage is between 3.12 to 3.52V, make sure that the center of mark **A** is aligned with mark **B** as shown in the figure.

- If NG, adjust by turning adjusting screw.

Lock nut:

: 0.98 - 1.96 N·m (10 - 20 kg·cm, 8.7 - 17.4 in·lb)

4. Start engine and warm it up.
5. When the voltage is between 1.10 to 1.36V, check the following.
 - The center of mark **A** is aligned with mark **C**.
 - The cam follower lever's roller is not touching the fast idle cam.
 - If NG, replace thermo-element and perform the above inspection and adjustment again.

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment

NEEC0028


NEEC0028S01

PREPARATION

- 1) Make sure that the following parts are in good order.
 - Battery
 - Ignition system
 - Engine oil and coolant levels
 - Fuses
 - ECM harness connector
 - Vacuum hoses
 - Air intake system
(Oil filler cap, oil level gauge, etc.)
 - Fuel pressure
 - Engine compression
 - EGR valve operation (if so equipped)
 - Throttle valve
 - Evaporative emission system
- 2) On air conditioner equipped models, checks should be carried out while the air conditioner is "OFF".
- 3) On automatic transmission equipped models, when checking idle rpm, ignition timing and mixture ratio, checks should be carried out while shift lever is in "N" position.
- 4) When measuring "CO" percentage, insert probe more than 40 cm (15.7 in) into tail pipe.
- 5) Turn off headlamps, heater blower, rear defogger.
- 6) Keep front wheels pointed straight ahead.
- 7) Make the check after the cooling fan has stopped.

Overall Inspection Sequence

NEEC0028S0101

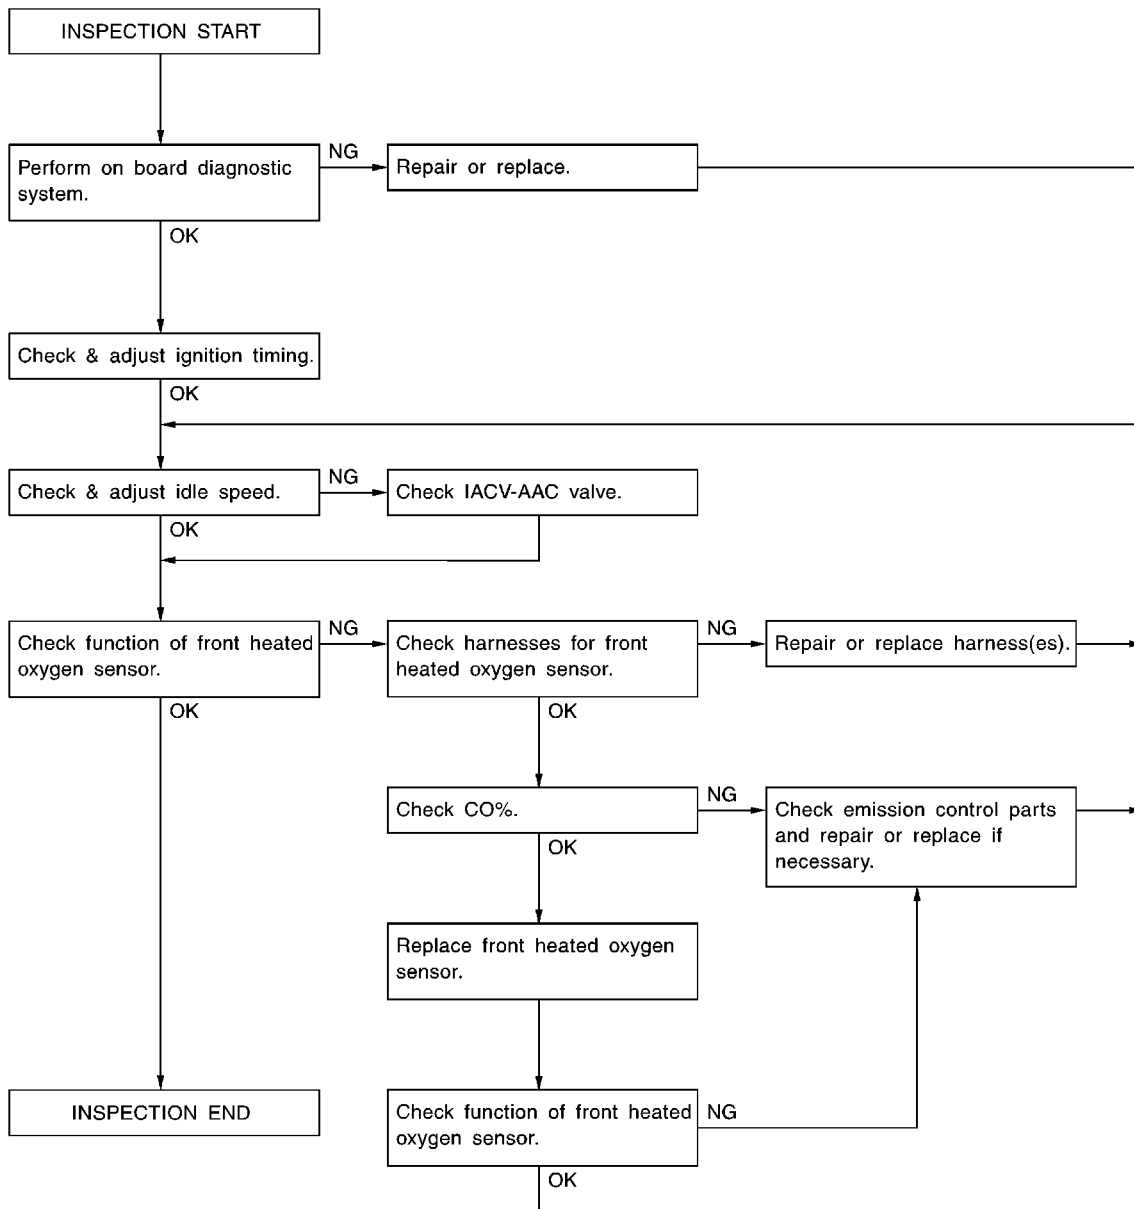

SEF117W

NOTE:

If a vehicle contains a part which is operating outside of design specifications with no MIL illumination, the part shall not be replaced prior to emission testing unless it is determined that the part has been tampered with or abused in such a way that the diagnostic system cannot reasonably be expected to detect the resulting malfunction.


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

INSPECTION PROCEDURE

=NEEC0028S02


1 INSPECTION START

1. Visually check the following:
 - Air cleaner clogging
 - Hoses and ducts for leaks
 - EGR valve operation (if so equipped)
 - Electrical connectors
 - Gasket
 - Throttle valve and throttle position sensor operation
2. Start engine and warm it up until engine coolant temperature indicator points to the middle of gauge. Ensure engine stays below 1,000 rpm.

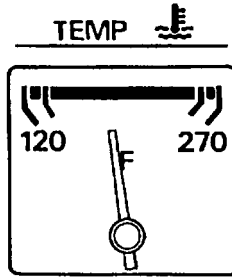


SEF976U

3. Open engine hood and run engine at about 2,000 rpm for about 2 minutes under no-load.

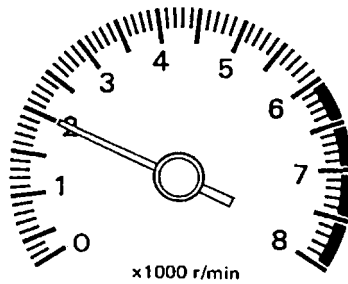

SEF977U

4. Perform diagnostic test mode II (Self-diagnostic results). Refer to EC-655.

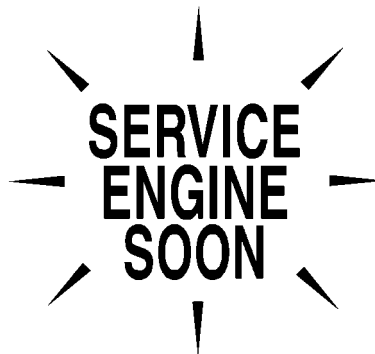

SEF217U

OK or NG

OK	▶	GO TO 2.
NG	▶	1. Repair or replace components as necessary. 2. GO TO 2.


BASIC SERVICE PROCEDURE

VG33E


Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

2 CHECK IGNITION TIMING


1. Run engine at about 2,000 rpm for about 2 minutes under no-load.
2. Rev engine (2,000 to 3,000 rpm) two or three times under no-load, then run engine at idle speed.

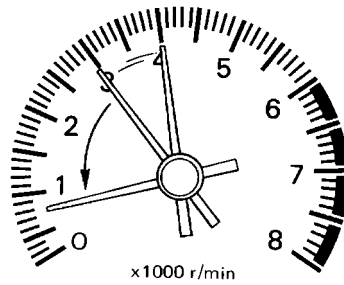

3. Turn off engine and disconnect throttle position sensor harness connector.

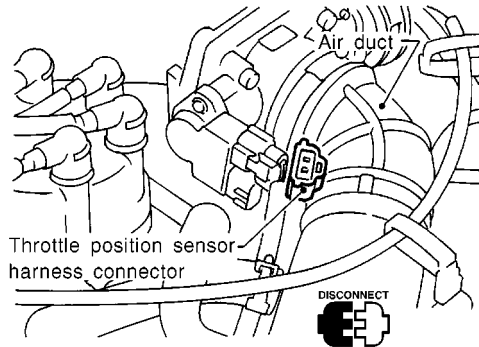

4. Start and rev engine (2,000 - 3,000 rpm) two or three times under no-load, then run at idle speed.
5. Check ignition timing with a timing light.

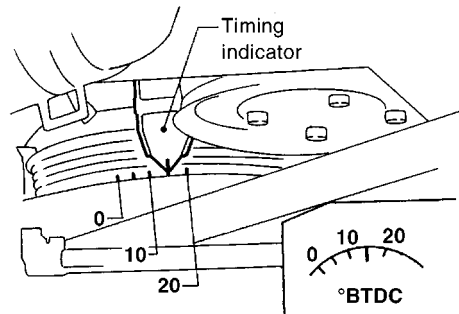

15°±2° BTDC (in "P" or "N" position)

OK or NG

OK	▶	GO TO 4.
NG	▶	GO TO 3.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

3 ADJUST IGNITION TIMING

1. Adjust ignition timing by turning distributor after loosening securing bolts.
2. Turn off engine and connect throttle position sensor harness connector to throttle position sensor.

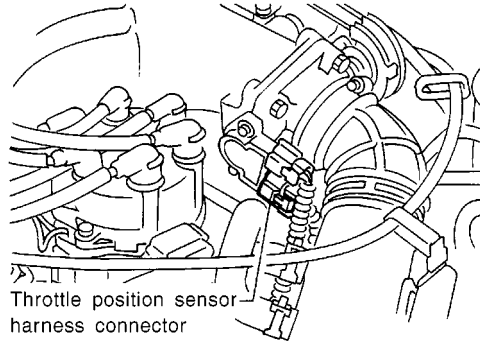

SEF972R

▶ GO TO 2.

4 CHECK BASE IDLE SPEED

Ⓟ With CONSULT-II

1. Read idle speed in "DATA MONITOR" mode with CONSULT-II.

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm

700±50 rpm (in "P" or "N" position)

PEF356V


ⓧ Without CONSULT-II

1. Check idle speed.

700±50 rpm (in "P" or "N" position)

OK or NG

OK	▶	GO TO 6.
NG	▶	GO TO 5.

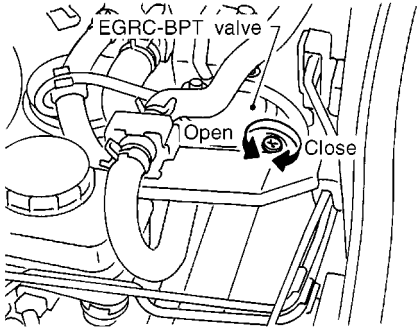5	ADJUST BASE IDLE SPEED
<ol style="list-style-type: none"> 1. Rev engine (2,000 to 3,000 rpm) 2 or 3 times under no-load then run engine at idle speed. 2. Adjust idle speed by turning idle speed adjusting screw. 	
	
700±50 rpm (in "P" or "N" position)	
SEF973R	
▶ GO TO 6.	

6	CHECK TARGET IDLE SPEED						
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn off engine and connect throttle position sensor harness connector. 2. Start and rev engine (2,000 to 3,000 rpm) 2 or 3 times under no-load then run at idle speed. 3. Read idle speed in "DATA MONITOR" mode with CONSULT-II. 							
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th style="text-align: center;">MONITORING</th> <th style="text-align: center;">NO FAIL</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">CMPS-RPM(REF)</td> <td style="text-align: center;">XXX rpm</td> </tr> </tbody> </table>		DATA MONITOR		MONITORING	NO FAIL	CMPS-RPM(REF)	XXX rpm
DATA MONITOR							
MONITORING	NO FAIL						
CMPS-RPM(REF)	XXX rpm						
750±50 rpm (in "P" or "N" position)							
PEF356V							
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn off engine and connect throttle position sensor harness connector. 2. Start and rev engine (2,000 to 3,000 rpm) 2 or 3 times under no-load then run at idle speed. 3. Check idle speed. 							
750±50 rpm (in "P" or "N" position)							
OK or NG							
OK (With CONSULT-II)	▶ GO TO 8.						
OK (Without CONSULT-II)	▶ GO TO 9.						
NG	▶ GO TO 7.						

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX



BASIC SERVICE PROCEDURE

VG33E

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

7	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ol style="list-style-type: none"> 1. Check IACV-AAC valve and replace if necessary. Refer to EC-1010. 2. Check IACV-AAC valve harness and repair if necessary. Refer to EC-1010. 3. Check ECM function by substituting another known good ECM. (ECM may be the cause of a problem, but this is rarely the case.) 		
	With CONSULT-II	▶ GO TO 8.
	Without CONSULT-II	▶ GO TO 9.

8	CHECK FRONT HEATED OXYGEN SENSOR LH SIGNAL											
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Run engine at about 2,000 rpm for about 2 minutes under no-load. 2. See "FR O2 MNTR-B2" in "DATA MONITOR" mode. 3. Running engine at 2,000 rpm under no-load (engine is warmed up to normal operating temperature), check that the monitor fluctuates between "LEAN" and "RICH" more than 5 times during 10 seconds. 												
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITORING</th> <th>NO FAIL</th> </tr> </thead> <tbody> <tr> <td>CMPS-RPM(REF)</td> <td>XXX rpm</td> </tr> <tr> <td>FR O2 MNTR-B1</td> <td>LEAN</td> </tr> <tr> <td>FR O2 MNTR-B2</td> <td>RICH</td> </tr> </tbody> </table>			DATA MONITOR		MONITORING	NO FAIL	CMPS-RPM(REF)	XXX rpm	FR O2 MNTR-B1	LEAN	FR O2 MNTR-B2	RICH
DATA MONITOR												
MONITORING	NO FAIL											
CMPS-RPM(REF)	XXX rpm											
FR O2 MNTR-B1	LEAN											
FR O2 MNTR-B2	RICH											
PEF358V												
<p>1 time: RICH → LEAN → RICH 2 times: RICH → LEAN → RICH → LEAN → RICH</p> <p>OK or NG</p>												
	OK	▶ GO TO 12.										
	NG (Monitor does not fluctuate.)	▶ GO TO 17.										
	NG (Monitor fluctuates less than 5 times.)	▶ <ol style="list-style-type: none"> 1. Replace front heated oxygen sensor LH. 2. GO TO 10. 										

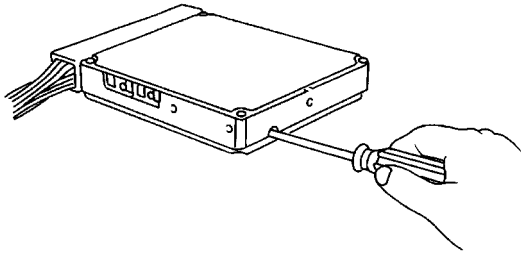9	CHECK FRONT HEATED OXYGEN SENSOR LH SIGNAL	
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Run engine at about 2,000 rpm for about 2 minutes under no-load. 2. Set "Left bank front heated oxygen sensor monitor" in the Diagnostic Test Mode II. Refer to EC-655. <div style="text-align: center; margin: 10px 0;">  </div> <p>3. Make sure that MIL goes on more than 5 times during 10 seconds at 2,000 rpm.</p> <div style="text-align: center; margin: 20px 0;">  </div> <p style="text-align: center;">OK or NG</p>		
SEF979U		
SEF217U		
OK	▶	GO TO 12.
NG (MIL does not blink.)	▶	GO TO 17.
NG (MIL blinks less than 5 times.)	▶	<ol style="list-style-type: none"> 1. Replace front heated oxygen sensor LH. 2. GO TO 10.

10	CHECK FRONT HEATED OXYGEN SENSOR LH SIGNAL	
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Warm engine to normal operating temperature. 2. Run engine at approx. 2000 rpm for approx. 2 minutes under no-load. 3. See "FR O2 MNTR-B2" in "DATA MONITOR" mode. 4. Running engine at 2,000 rpm under no-load (engine is warmed up to normal operating temperature.), check that the monitor fluctuates between "LEAN" and "RICH" more than 5 times during 10 seconds. 1 time: RICH → LEAN → RICH 2 times: RICH → LEAN → RICH → LEAN → RICH <p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Warm engine to normal operating temperature. 2. Run engine at approx. 2000 rpm for approx. 2 minutes under no-load. 3. Set "Left bank front heated oxygen sensor monitor" in the Diagnostic Test Mode II. Refer to EC-655. 4. Make sure that MIL goes on more than 5 times during 10 seconds at 2,000 rpm. <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 12.
OK (Without CONSULT-II)	▶	GO TO 13.
NG	▶	GO TO 11.

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX



BASIC SERVICE PROCEDURE

VG33E

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

11	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ol style="list-style-type: none"> 1. Check fuel pressure regulator. Refer to EC-621. 2. Check mass air flow sensor and its circuit. Refer to EC-724. 3. Check injector and its circuit. Refer to EC-1162. Clean or replace if necessary. 4. Check engine coolant temperature sensor and its circuit. Refer to EC-769. 5. Check ECM function by substituting another known good ECM. (ECM may be the cause of a problem, but this is rarely the case.) 	
▶	GO TO 2.

12	CHECK FRONT HEATED OXYGEN SENSOR RH SIGNAL										
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. See "FR O2 MNTR-B1" in "DATA MONITOR" mode. 2. Maintaining engine at 2,000 rpm under no-load (engine is warmed up to normal operating temperature.), check that the monitor fluctuates between "LEAN" and "RICH" more than 5 times during 10 seconds. 											
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th style="width: 50%;">MONITORING</th> <th style="width: 50%;">NO FAIL</th> </tr> </thead> <tbody> <tr> <td>CMPS-RPM(REF)</td> <td>XXX rpm</td> </tr> <tr> <td>FR O2 MNTR-B1</td> <td>LEAN</td> </tr> <tr> <td>FR O2 MNTR-B2</td> <td>RICH</td> </tr> </tbody> </table>		DATA MONITOR		MONITORING	NO FAIL	CMPS-RPM(REF)	XXX rpm	FR O2 MNTR-B1	LEAN	FR O2 MNTR-B2	RICH
DATA MONITOR											
MONITORING	NO FAIL										
CMPS-RPM(REF)	XXX rpm										
FR O2 MNTR-B1	LEAN										
FR O2 MNTR-B2	RICH										
PEF358V											
<p>1 time: RICH → LEAN → RICH 2 times: RICH → LEAN → RICH → LEAN → RICH</p> <p style="text-align: center;">OK or NG</p>											
OK	▶ INSPECTION END										
NG (Monitor does not fluctuate.)	▶ GO TO 16.										
NG (Monitor fluctuates less than 5 times.)	▶ <ol style="list-style-type: none"> 1. Replace front heated oxygen sensor RH. 2. GO TO 14. 										

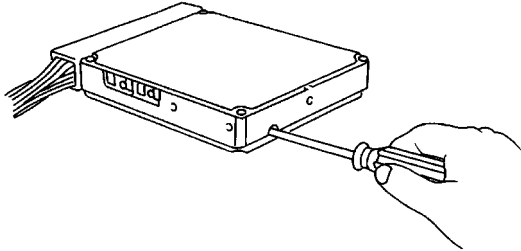13	CHECK FRONT HEATED OXYGEN SENSOR RH SIGNAL	
<p> Without CONSULT-II</p> <p>1. Set "Right bank front heated oxygen sensor monitor" in the Diagnostic Test Mode II. Refer to EC-655.</p> <div style="text-align: center;">  </div> <p>2. Make sure that MIL goes on more than 5 times during 10 seconds at 2,000 rpm.</p> <div style="text-align: center;">  <p>OK or NG</p> </div>		
SEF979U		
SEF217U		
OK	▶	INSPECTION END
NG (MIL does not blink.)	▶	GO TO 16.
NG (MIL blinks less than 5 times.)	▶	1. Replace front heated oxygen sensor RH. 2. GO TO 14.

14	CHECK FRONT HEATED OXYGEN SENSOR RH SIGNAL	
<p> With CONSULT-II</p> <p>1. Warm engine to normal operating temperature.</p> <p>2. Run engine at approx. 2000 rpm for approx. 2 minutes under no-load.</p> <p>3. See "FR O2 MNTR-B1" in "DATA MONITOR" mode.</p> <p>4. Maintaining engine at 2,000 rpm under no-load (engine is warmed up to normal operating temperature.), check that the monitor fluctuates between "LEAN" and "RICH" more than 5 times during 10 seconds.</p> <p style="margin-left: 20px;">1 time: RICH → LEAN → RICH</p> <p style="margin-left: 20px;">2 times: RICH → LEAN → RICH → LEAN → RICH</p>		
<p> Without CONSULT-II</p> <p>1. Warm engine to normal operating temperature.</p> <p>2. Run engine at approx. 2000 rpm for approx. 2 minutes under no-load.</p> <p>3. Set "Right bank front heated oxygen sensor monitor" in the Diagnostic Test Mode II. Refer to EC-655.</p> <p>4. Make sure that MIL goes on more than 5 times during 10 seconds at 2,000 rpm.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	INSPECTION END
NG	▶	GO TO 15.

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

15	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ol style="list-style-type: none"> 1. Check fuel pressure regulator. Refer to EC-621. 2. Check mass air flow sensor and its circuit. Refer to EC-724. 3. Check injector and its circuit. Refer to EC-1162. Clean or replace if necessary. 4. Check engine coolant temperature sensor and its circuit. Refer to EC-769. 5. Check ECM function by substituting another known good ECM. (ECM may be the cause of a problem, but this is rarely the case.) 	
	GO TO 2.

16	CHECK FRONT HEATED OXYGEN SENSOR RH HARNESS
<ol style="list-style-type: none"> 1. Turn off engine and disconnect battery ground cable. 2. Disconnect ECM harness connector. 3. Disconnect front heated oxygen sensor RH harness connector. 4. Check harness continuity between ECM terminal 50 and front heated oxygen sensor RH harness connector. 	
<p>Continuity should exist.</p> <p>OK or NG</p>	
OK	<ol style="list-style-type: none"> 1. Connect ECM harness connector. 2. GO TO 18.
NG	<ol style="list-style-type: none"> 1. Repair or replace harness. 2. GO TO 8. (With CONSULT-II) GO TO 9. (Without CONSULT-II)



SEF980U

17	CHECK FRONT HEATED OXYGEN SENSOR LH HARNESS
<ol style="list-style-type: none"> 1. Turn off engine and disconnect battery ground cable. 2. Disconnect ECM harness connector. 3. Disconnect front heated oxygen sensor LH harness connector. 4. Check harness continuity between ECM terminal 51 and front heated oxygen sensor LH harness connector. 	
<p>Continuity should exist.</p> <p>OK or NG</p>	
OK	<ol style="list-style-type: none"> 1. Connect ECM harness connector. 2. GO TO 18.
NG	<ol style="list-style-type: none"> 1. Repair or replace harness. 2. GO TO 8. (With CONSULT-II) GO TO 9. (Without CONSULT-II)

18	PREPARATION FOR "CO" % CHECK																				
<p>With CONSULT-II</p> <ol style="list-style-type: none"> 1. Select "COOLANT TEMP" in "ACTIVE TEST" mode. 2. Set "COOLANT TEMP" to 5°C (41°F) by touching "DWN" and "Qd". 																					
<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td>COOLANT TEMP</td> <td style="text-align: center;">5°C</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>CMPS-RPM(REF)</td> <td style="text-align: center;">XXX rpm</td> </tr> <tr> <td>INJ PULSE-B2</td> <td style="text-align: center;">XXX msec</td> </tr> <tr> <td>INJ PULSE-B1</td> <td style="text-align: center;">XXX msec</td> </tr> <tr> <td>IGN TIMING</td> <td style="text-align: center;">XXX BTDC</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>		ACTIVE TEST		COOLANT TEMP	5°C	MONITOR		CMPS-RPM(REF)	XXX rpm	INJ PULSE-B2	XXX msec	INJ PULSE-B1	XXX msec	IGN TIMING	XXX BTDC						
ACTIVE TEST																					
COOLANT TEMP	5°C																				
MONITOR																					
CMPS-RPM(REF)	XXX rpm																				
INJ PULSE-B2	XXX msec																				
INJ PULSE-B1	XXX msec																				
IGN TIMING	XXX BTDC																				
PEF359V																					

<p>Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Disconnect engine coolant temperature sensor harness connector. 2. Connect a resistor (4.4 kΩ) between terminals of engine coolant temperature sensor harness connector. 	
AEC036B	
▶	GO TO 19.

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

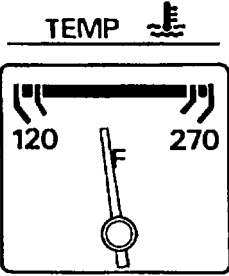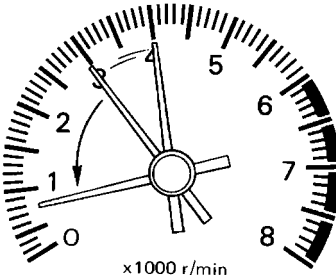19	CHECK "CO" %	
<p>1. Start engine and warm it up until engine coolant temperature indicator points to the middle of gauge.</p> <div style="text-align: center;">  <p style="text-align: center;">TEMP </p> </div>		
<p>2. Rev engine (2,000 to 3,000 rpm) two or three times under no-load, then run engine at idle speed.</p> <div style="text-align: center;">  <p style="text-align: center;">x1000 r/min</p> </div>		
<p>3. Check "CO" %. Idle CO: 1.5 - 9%</p> <p>4. Without CONSULT-II After checking CO%,</p> <p>a. Disconnect the resistor from terminals of engine coolant temperature sensor. b. Connect engine coolant temperature sensor harness connector to engine coolant temperature sensor.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	1. Replace front heated oxygen sensor LH. 2. GO TO 10.
NG	▶	GO TO 20.

SEF976U

SEF978U

20	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ol style="list-style-type: none"> 1. Connect front heated oxygen sensor harness connectors to front heated oxygen sensors. 2. Check fuel pressure regulator. Refer to EC-621. 3. Check mass air flow sensor and its circuit. Refer to EC-724. 4. Check injector and its circuit. Refer to EC-1162. Clean or replace if necessary. 5. Check engine coolant temperature sensor and its circuit. Refer to EC-769. 6. Check ECM function by substituting another known good ECM. (ECM may be the cause of a problem, but this is rarely the case.) 		
	▶	GO TO 2.

Introduction

NEEC0029

The ECM has an on board diagnostic system, which detects malfunctions related to engine sensors or actuators. The ECM also records various emission-related diagnostic information including:

Emission-related diagnostic information	SAE Mode
Diagnostic Trouble Code (DTC)	Mode 3 of SAE J1979
Freeze Frame data	Mode 2 of SAE J1979
System Readiness Test (SRT) code	Mode 1 of SAE J1979
1st Trip Diagnostic Trouble Code (1st Trip DTC)	Mode 7 of SAE J1979
1st Trip Freeze Frame data	
Test values and Test limits	Mode 6 of SAE J1979

The above information can be checked using procedures listed in the table below.

X: Applicable —: Not applicable

	DTC	1st trip DTC	Freeze Frame data	1st trip Freeze Frame data	SRT code	Test value
ECM*3	X	X*1	—	—	—	—
CONSULT-II	X	X	X	X	X	—
GST	X	X*2	X	—	X	X

*1: When DTC and 1st trip DTC simultaneously appear on the display, they cannot be clearly distinguished from each other.

*2: 1st trip DTCs for self-diagnoses concerning SRT items cannot be shown on the GST display.

*3: In diagnostic test mode II (Self-diagnostic results)

The malfunction indicator lamp (MIL) on the instrument panel lights up when the same malfunction is detected in two consecutive trips (Two trip detection logic), or when the ECM enters fail-safe mode. (Refer to EC-698.)

Two Trip Detection Logic

NEEC0030

When a malfunction is detected for the first time, 1st trip DTC and 1st trip Freeze Frame data are stored in the ECM memory. The MIL will not light up at this stage. <1st trip>

If the same malfunction is detected again during the next drive, the DTC and Freeze Frame data are stored in the ECM memory, and the MIL lights up. The MIL lights up at the same time when the DTC is stored. <2nd trip> The “trip” in the “Two Trip Detection Logic” means a driving mode in which self-diagnosis is performed during vehicle operation. Specific on board diagnostic items will cause the ECM to light up or blink the MIL, and store DTC and Freeze Frame data, even in the 1st trip, as shown below.

X: Applicable —: Not applicable

Items	MIL				DTC		1st trip DTC	
	1st trip		2nd trip		1st trip displaying	2nd trip displaying	1st trip displaying	2nd trip displaying
	Blinking	Lighting up	Blinking	Lighting up				
Misfire (Possible three way catalyst damage) — DTC: P0300 - P0306 (0701, 0603 - 0608) is being detected	X	—	—	—	X	—	X	—
Misfire (Possible three way catalyst damage) — DTC: P0300 - P0306 (0701, 0603 - 0608) is being detected	—	—	X	—	—	X	—	—
Closed loop control — DTC: P1148 (0307)	—	X	—	—	X	—	X	—
Fail-safe items	—	X	—	—	X*1	—	X*1	—
Except above	—	—	—	X	—	X	X	—

*1: Except “ECM”.

Emission-related Diagnostic Information

NEEC0031

DTC AND 1ST TRIP DTC

NEEC0031S01

The 1st trip DTC (whose number is the same as the DTC number) is displayed for the latest self-diagnostic result obtained. If the ECM memory was cleared previously, and the 1st trip DTC did not reoccur, the 1st trip DTC will not be displayed.

If a malfunction is detected during the 1st trip, the 1st trip DTC is stored in the ECM memory. The MIL will not light up (two trip detection logic). If the same malfunction is not detected in the 2nd trip (meeting the required driving pattern), the 1st trip DTC is cleared from the ECM memory. If the same malfunction is detected in the 2nd trip, both the 1st trip DTC and DTC are stored in the ECM memory and the MIL lights up. In other words, the DTC is stored in the ECM memory and the MIL lights up when the same malfunction occurs in two consecutive trips. If a 1st trip DTC is stored and a non-diagnostic operation is performed between the 1st and 2nd trips, only the 1st trip DTC will continue to be stored. For malfunctions that blink or light up the MIL during the 1st trip, the DTC and 1st trip DTC are stored in the ECM memory.

Procedures for clearing the DTC and the 1st trip DTC from the ECM memory are described in "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-651.

For malfunctions in which 1st trip DTCs are displayed, refer to EC-649. These items are required by legal regulations to continuously monitor the system/component. In addition, the items monitored non-continuously are also displayed on CONSULT-II.

1st trip DTC is specified in Mode 7 of SAE J1979. 1st trip DTC detection occurs without lighting up the MIL and therefore does not warn the driver of a problem. However, 1st trip DTC detection will not prevent the vehicle from being tested, for example during Inspection/Maintenance (I/M) tests.

When a 1st trip DTC is detected, check, print out or write down and erase (1st trip) DTC and Freeze Frame data as specified in "Work Flow" procedure Step II, refer to EC-678. Then perform "DTC Confirmation Procedure" or "Overall Function Check" to try to duplicate the problem. If the malfunction is duplicated, the item requires repair.

How to Read DTC and 1st Trip DTC


NEEC0031S0101

DTC and 1st trip DTC can be read by the following methods.

1)  **No Tools**

The number of blinks of the MIL in the Diagnostic Test Mode II (Self-Diagnostic Results) Examples: 0101, 0201, 1003, 1104, etc.

These DTCs are controlled by NISSAN.

2)  **With CONSULT-II**

 **With GST**

CONSULT-II or GST (Generic Scan Tool) Examples: P0340, P1320, P0705, P0750, etc.

These DTCs are prescribed by SAE J2012.

(CONSULT-II also displays the malfunctioning component or system.)

- **1st trip DTC No. is the same as DTC No.**
- **Output of a DTC indicates a malfunction. However, Mode II and GST do not indicate whether the malfunction is still occurring or has occurred in the past and has returned to normal. CONSULT-II can identify malfunction status as shown below. Therefore, using CONSULT-II (if available) is recommended.**

A sample of CONSULT-II display for DTC and 1st trip DTC is shown below. DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode of CONSULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.

If the DTC is being detected currently, the time data will be "0".

If a 1st trip DTC is stored in the ECM, the time data will be "[1t]".

DTC display	SELF DIAG RESULTS		1st trip DTC display	SELF DIAG RESULTS	
	FAILURE DETECTED	TIME		FAILURE DETECTED	TIME
	IACV-AAC VALVE [P0505]	0		IACV-AAC VALVE [P0505]	1t

AEC037B

FREEZE FRAME DATA AND 1ST TRIP FREEZE FRAME DATA

NEEC0031S02

The ECM records the driving conditions such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed, vehicle speed and absolute pressure at the moment a malfunction is detected.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data. The data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-II screen, not on the GST. For details, see EC-665.

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items	
1	Freeze frame data	Misfire — DTC: P0300 - P0306 (0701, 0603 - 0608) Fuel Injection System Function — DTC: P0171 (0115), P0172 (0114)
2		Except the above items (Includes A/T related items)
3	1st trip freeze frame data	

For example, the EGR malfunction (Priority: 2) was detected and the freeze frame data was stored in the 2nd trip. After that when the misfire (Priority: 1) is detected in another trip, the freeze frame data will be updated from the EGR malfunction to the misfire. The 1st trip freeze frame data is updated each time a different malfunction is detected. There is no priority for 1st trip freeze frame data. However, once freeze frame data is stored in the ECM memory, 1st trip freeze data is no longer stored (because only one freeze frame data or 1st trip freeze frame data can be stored in the ECM). If freeze frame data is stored in the ECM memory and freeze frame data with the same priority occurs later, the first (original) freeze frame data remains unchanged in the ECM memory.

Both 1st trip freeze frame data and freeze frame data (along with the DTCs) are cleared when the ECM memory is erased. Procedures for clearing the ECM memory are described in "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-651.

SYSTEM READINESS TEST (SRT) CODE

NEEC0031S03

System Readiness Test (SRT) code is specified in Mode 1 of SAE J1979.

As part of enhanced emissions test for Inspection and Maintenance (I/M), certain states require that the status of SRT be used to indicate whether the ECM has completed self-diagnosis of major emission systems and components. Completion must be verified in order for the emissions inspection to proceed.

If a vehicle is rejected for a State emissions inspection due to one or more SRT items indicating "incomplete", use the information in this service manual to set the SRT to "complete".

In most cases, the ECM will automatically complete its self-diagnosis cycle during normal usage and the SRT status will indicate "complete" for each application system. Once set as "complete", the the SRT status remains "complete" until the self-diagnosis memory is erased.

Occasionally, certain portions of the self-diagnostic test may not be completed as a result of the customer's normal driving pattern and the SRT will indicate "incomplete" for these items.

NOTE:

The SRT will also indicate "incomplete" if the self-diagnosis memory is erased for any reason or if the ECM memory power supply is interrupted for several hours.

If, during the state emissions inspection, the SRT indicates "complete" for all test items, the inspector will continue with the emissions test. However, if the SRT indicates "incomplete" for one or more of the SRT items, the vehicle is returned to the customer untested.

NOTE:

If MIL is "ON" during the state emissions inspection, the vehicle is also returned to the customer untested even though the SRT indicates "complete" for all test items. Therefore, it is important to check SRT ("complete") and DTC (No DTCs) before the inspection.

This service manual contains the service procedure and support information to perform a comprehensive road test that enables the ECM to complete the SRT.

The following table shows required self-diagnostic items to set the SRT to "complete".

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

VG33E

Emission-related Diagnostic Information (Cont'd)

SRT item (CONSULT-II indication)	Performance Priority *1	Required self-diagnostic items to set the SRT to "complete"	Corresponding DTC No.
CATALYST	3	Three way catalyst function	P0420, P0430
EVAP SYSTEM	2	EVAP control system (small leak) (negative pressure)	P0440
	–	EVAP control system (small leak) (positive pressure)	P1440 *2
	3	EVAP control system purge flow monitoring	P1447
O2 SENSOR	3	Front heated oxygen sensor (circuit)	P0130, P0150
		Front heated oxygen sensor (lean shift monitoring)	P0131, P0151
		Front heated oxygen sensor (rich shift monitoring)	P0132, P0152
		Front heated oxygen sensor (response monitoring)	P0133, P0153
		Front heated oxygen sensor (high voltage)	P0134, P0154
		Rear heated oxygen sensor (min. voltage monitoring)	P0137, P0157
		Rear heated oxygen sensor (max. voltage monitoring)	P0138, P0158
		Rear heated oxygen sensor (response monitoring)	P0139, P0159
		Rear heated oxygen sensor (high voltage)	P0140, P0160
O2 SEN HEATER	3	Front heated oxygen sensor heater	P0135, P0155
		Rear heated oxygen sensor heater	P0141, P0161
EGR SYSTEM (if so equipped)	3	EGR function (close)	P0400
		EGRC-BPT valve function	P0402
	1	EGR function (open)	P1402

*1: If completion of several SRTs is required, perform driving patterns (DTC confirmation procedure) one by one based on the priority for models with CONSULT-II.

*2: P1440 [EVAP control system (small leak) (positive pressure) diagnosis] is a kind of the SRT related diagnosis. This diagnosis, however, does not contribute to setting the SRT as "complete" when no malfunction exists in the EVAP system. Therefore, P0440 must be used instead of P1440.

SRT Set Timing

SRT is set as "complete" after self-diagnosis has been performed one or more times. Completion of SRT will occur if the result is OK or NG. The set timing is different between them and is shown in the following table. NEEC0031S0310

Self-diagnosis result		Example (if equipped with EGR system)				
		Diagnosis	Ignition OFF – ON – OFF	Ignition OFF – ON – OFF	Ignition OFF – ON – OFF	Ignition OFF – ON – OFF
All OK	Case 1	P0400	OK (1)	– (1)	OK (2)	– (2)
		P0402	OK (1)	– (1)	– (1)	OK (2)
		P1402	OK (1)	OK (2)	– (2)	– (2)
		SRT of EGR	“complete”	“complete”	“complete”	“complete”
	Case 2	P0400	OK (1)	– (1)	– (1)	– (1)
		P0402	– (0)	– (0)	OK (1)	– (1)
		P1402	OK (1)	OK (2)	– (2)	– (2)
		SRT of EGR	“incomplete”	“incomplete”	“complete”	“complete”
NG exists	Case 3	P0400	OK	OK	–	–
		P0402	–	–	–	–
		P1402	NG	–	NG	NG (Consecutive NG)
		(1st trip) DTC	1st trip DTC	–	1st trip DTC	DTC (=MIL “ON”)
		SRT of EGR	“incomplete”	“incomplete”	“incomplete”	“complete”

OK: Self-diagnosis is carried out and the result is OK.

NG: Self-diagnosis is carried out and the result is OK.

–: Self-diagnosis is not carried out.

When all SRT related self-diagnoses showed OK results in a same cycle (Ignition OFF – ON – OFF), the SRT will indicate “complete”.

→ Case 1 above

When all SRT related self-diagnoses show OK results through several different cycles, the SRT will indicate “complete” at the time the respective self-diagnoses have at least one OK result.

→ Case 2 above

If one or more SRT related self-diagnoses showed NG results in 2 consecutive cycles, the SRT will also indicate “complete”.

→ Case 3 above

The previous table shows that the minimum number of cycles for setting SRT as “incomplete” is one (1) for each self-diagnosis (Case 1 and 2) or two (2) for one self-diagnosis (Case 3). However, in preparation for the State emissions inspection, it is unnecessary of each self-diagnosis to be executed twice (Case 3) because of the following reasons;



- The SRT will indicate “complete” at the time the respective self-diagnoses have one (1) OK result.
- The emissions inspection requires “complete” of the SRT only with OK self-diagnosis result.
- When, during SRT driving pattern, 1st trip DTC (NG) is detected prior to “complete” of SRT, the self-diagnosis memory must be erased from ECM after repair.
- If the 1st trip DTC is erased, all the SRT will indicate “incomplete”.

NOTE:

SRT can be set as “complete” together with the DTC(s). Therefore, DTC check must always be carried out prior to the State emission inspection even though the SRT indicates “complete”.

How to Display SRT Code

=NEEC0031S0301

1.  **With CONSULT-II**
 Selecting "SRT STATUS" in "DTC CONFIRMATION" mode with CONSULT-II.
 For items whose SRT codes are set, a "CMPLT" is displayed on the CONSULT-II screen; for items whose SRT codes are not set, "INCMP" is displayed.
2.  **With GST**
 Selecting Mode 1 with GST (Generic Scan Tool)

A sample of CONSULT-II display for SRT code is shown below.
 "INCMP" means the self-diagnosis is incomplete and SRT is not set. "CMPLT" means the self-diagnosis is complete and SRT is set.


SRT STATUS	
CATALYST	CMPLT
EVAP SYSTEM	INCMP
O2 SENSOR	CMPLT
O2 SEN HEATER	CMPLT
EGR SYSTEM	INCMP

PEF215U

SRT Service Procedure

=NEEC0031S0311

If a vehicle has been rejected for the State emissions inspection due to one or more SRT items indicating "incomplete", review the following flowchart diagnostic sequence.

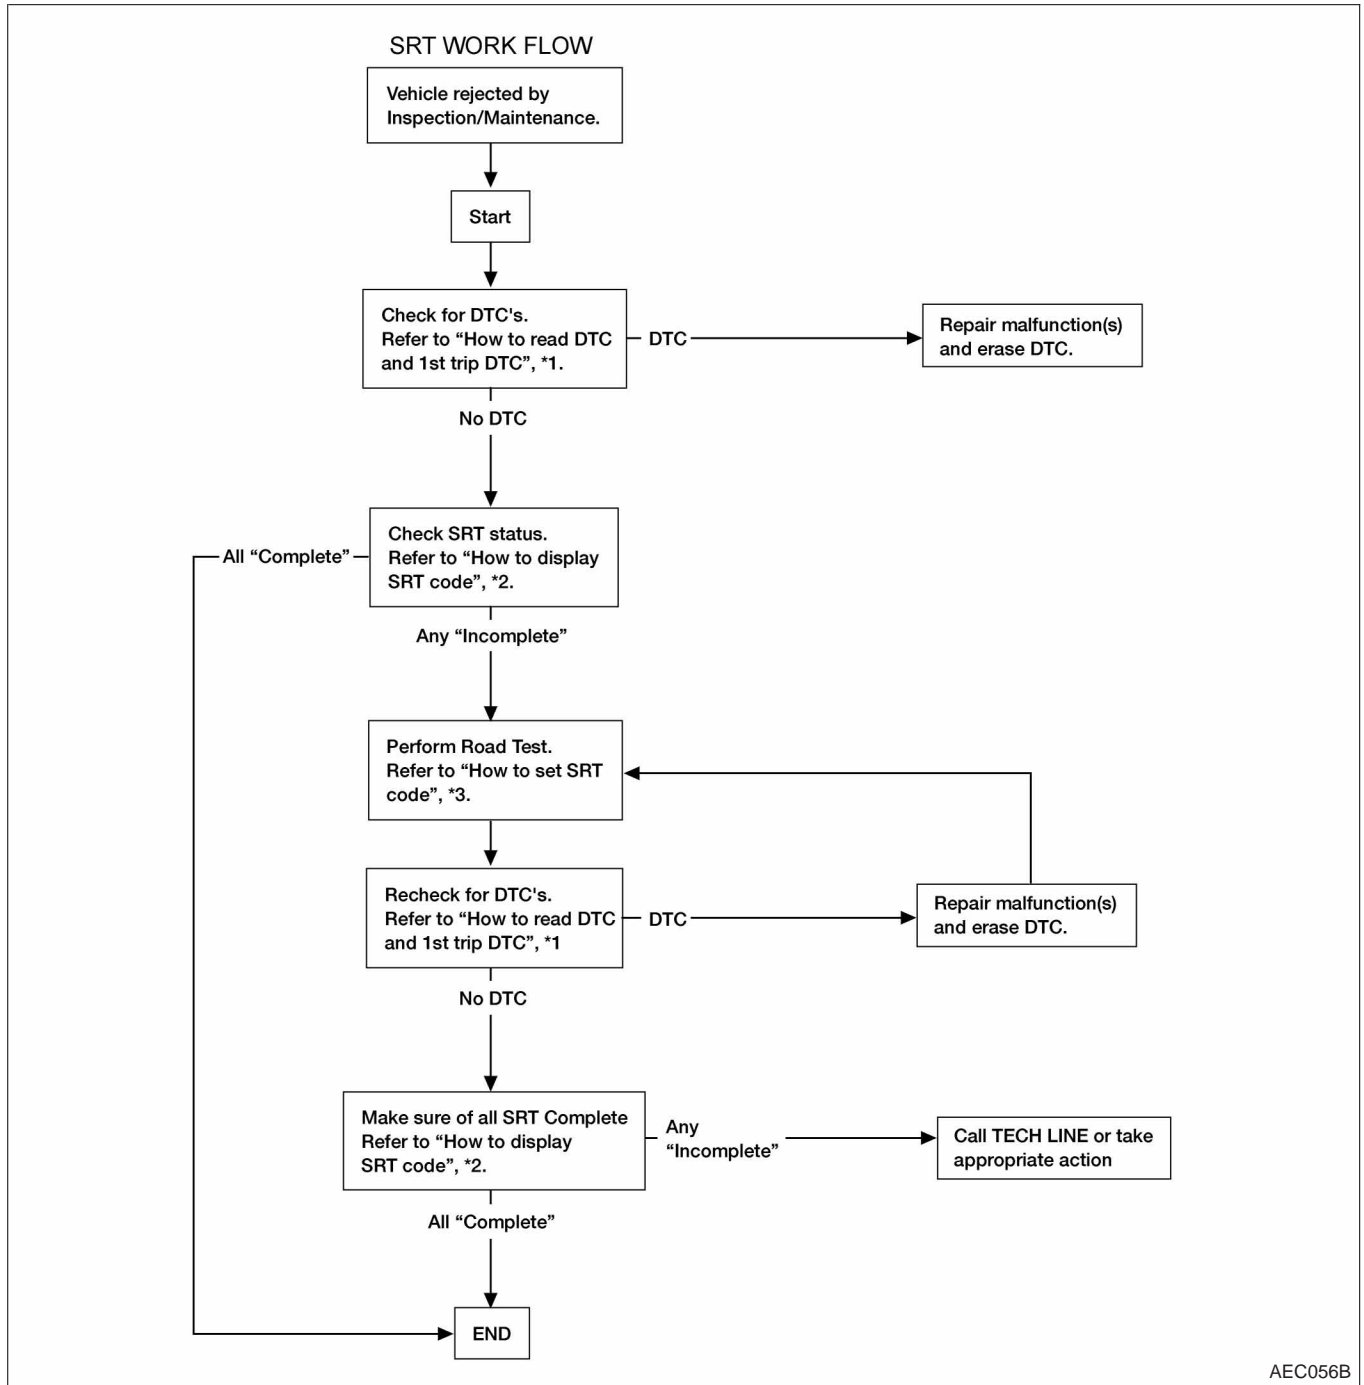

*1 EC-638

*2 EC-642

*3 EC-644

AEC056B

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

How to Set SRT Code

=NEEC0031S0302

To set all SRT codes, self-diagnosis for the items indicated above must be performed one or more times. Each diagnosis may require a long period of actual driving under various conditions.

① With CONSULT-II

Perform corresponding DTC confirmation procedure one by one based on "Performance Priority" in the table on EC-645.


② Without CONSULT-II

The most efficient driving pattern in which SRT codes can be properly set is explained on EC-645. The driving pattern should be performed one or more times to set all SRT codes.

Driving Pattern

NEEC0031S0303

Note: Always drive vehicle in safe manner according to traffic conditions and obey all traffic laws. Refer to next page for more information and explanation of chart.

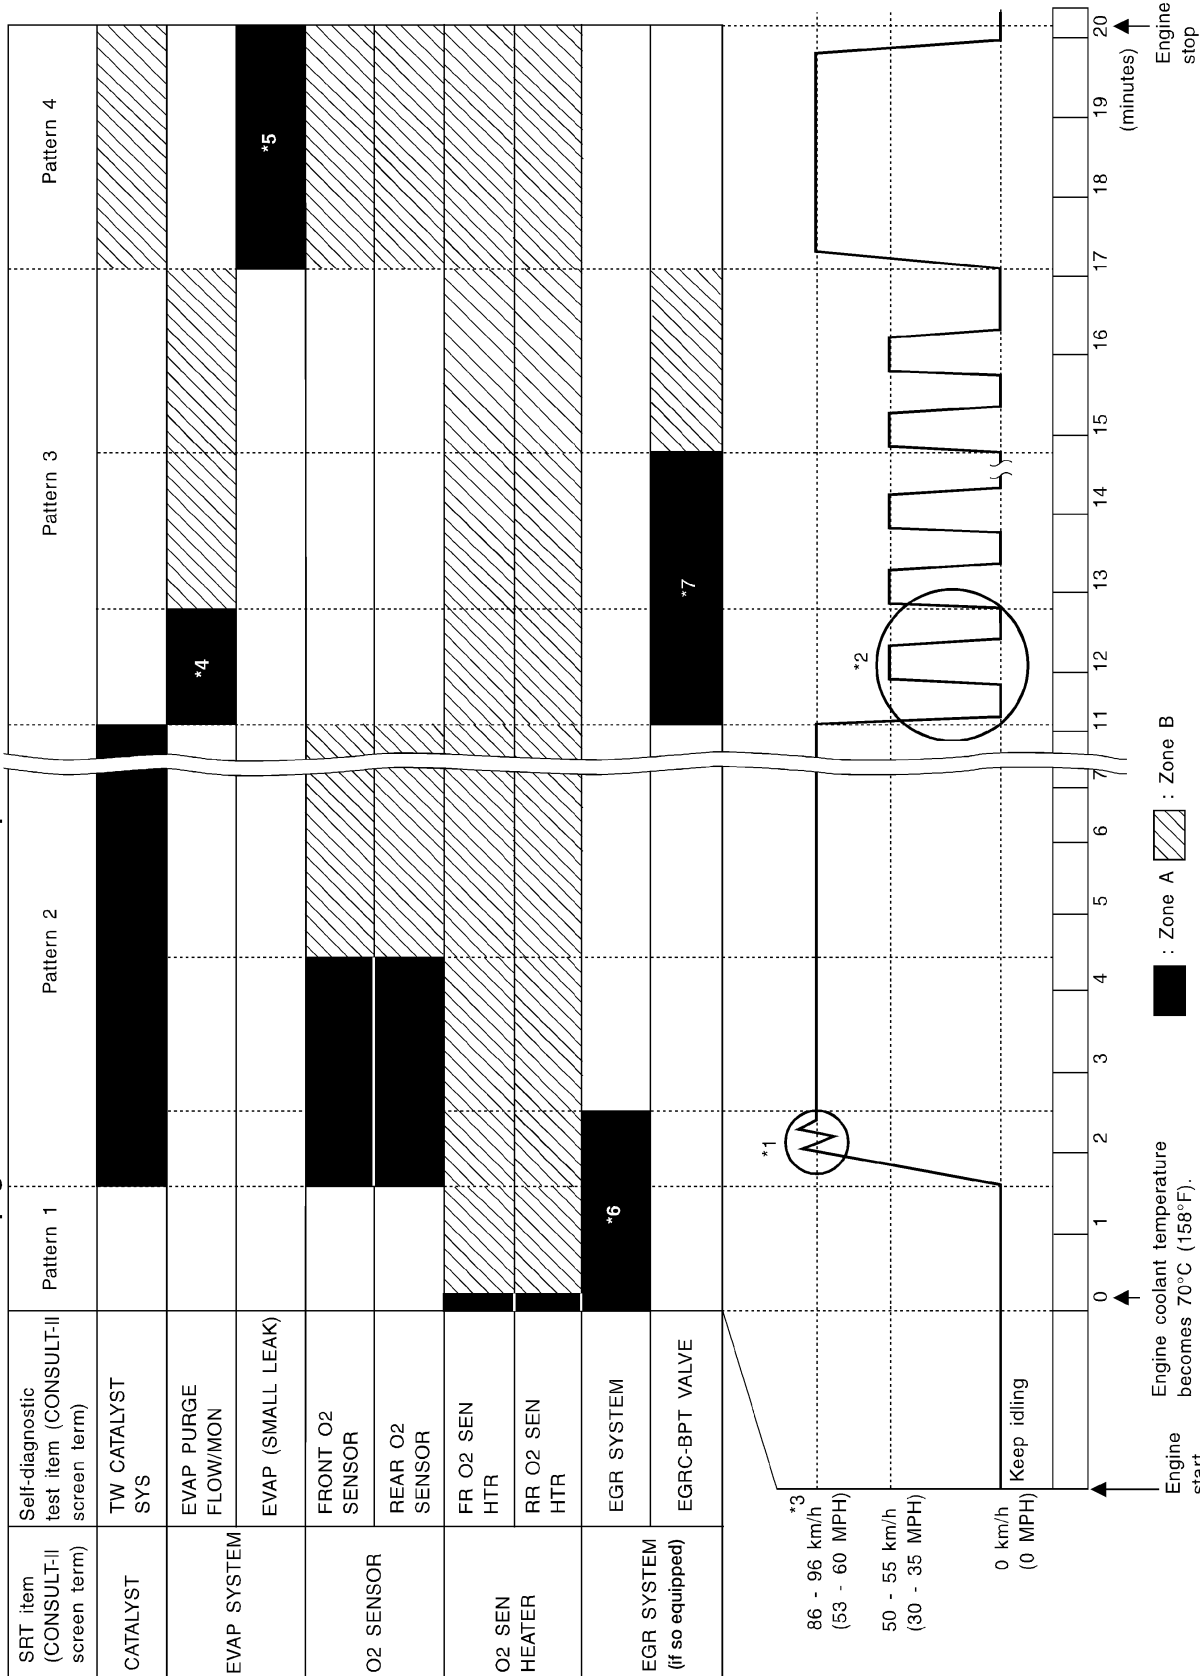

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

Emission-related Diagnostic Information (Cont'd)

- The time required for each diagnosis varies with road surface conditions, weather, altitude, individual driving habits, etc.
Zone A refers to the range where the time required, for the diagnosis under normal conditions*, is the shortest.
Zone B refers to the range where the diagnosis can still be performed if the diagnosis is not completed within zone A.

*: Normal conditions refer to the following:

- Sea level
- Flat road
- Ambient air temperature: 20 - 30°C (68 - 86°F)
- Diagnosis is performed as quickly as possible under normal conditions.
Under different conditions [For example: ambient air temperature other than 20 - 30°C (68 - 86°F)], diagnosis may also be performed.

Pattern 1:

- **The engine is started at the engine coolant temperature of -10 to 35°C (14 to 95°F) (where the voltage between the ECM terminals 59 and 43 is 3.0 - 4.3V).**
- **The engine must be operated at idle speed until the engine coolant temperature is greater than 70°C (158°F) (where the voltage between the ECM terminals 59 and 43 is lower than 1.4V).**
- **The engine is started at the tank fuel temperature of warmer than 0°C (32°F) (where the voltage between the ECM terminal 60 and ground is less than 4.1V).**

Pattern 2:

- When steady-state driving is performed again even after it is interrupted, each diagnosis can be conducted. In this case, the time required for diagnosis may be extended.

Pattern 3:

- The driving pattern outlined in *2 must be repeated at least 3 times.


Pattern 4:

- Tests are performed after the engine has been operated for at least 17 minutes.
- The accelerator pedal must be held very steady during steady-state driving.
- If the accelerator pedal is moved, the test must be conducted all over again.

*1: Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH), then release the accelerator pedal and keep it released for more than 10 seconds. Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH) again.

*2: Operate the vehicle in the following driving pattern.

- 1) Decelerate vehicle to 0 km/h (0 MPH) and let engine idle.
- 2) Repeat driving pattern shown below at least 10 times.
- **During acceleration, hold the accelerator pedal as steady as possible.**
- 3) Repeat steps 1 and 2 until the EGR system SRT is set.

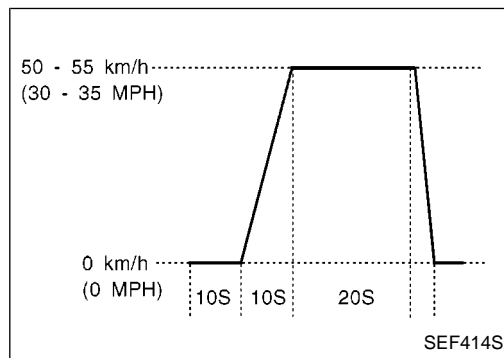

*3: Checking the vehicle speed with GST is advised.

Suggested Transmission Gear Position for A/T Models

Set the selector lever in the "D" position with the overdrive switch turned ON.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

VG33E

Emission-related Diagnostic Information (Cont'd)

Suggested upshift speeds for M/T models

Shown below are suggested vehicle speeds for shifting into a higher gear. These suggestions relate to fuel economy and vehicle performance. Actual upshift speeds will vary according to road conditions, the weather and individual driving habits.

Gear change	For normal acceleration in low altitude areas [less than 1,219 m (4,000 ft)]:		For quick acceleration in low altitude areas and high altitude areas [over 1,219 m (4,000 ft)]:
	ACCEL shift point km/h (MPH)	CRUISE shift point km/h (MPH)	km/h (MPH)
1st to 2nd	24 (15)	24 (15)	24 (15)
2nd to 3rd	40 (25)	29 (18)	40 (25)
3rd to 4th	58 (36)	48 (30)	64 (40)
4th to 5th	64 (40)	63 (39)	72 (45)

Suggested Maximum Speed in Each Gear

Downshift to a lower gear if the engine is not running smoothly, or if you need to accelerate. Do not exceed the maximum suggested speed (shown below) in any gear. For level road driving, use the highest gear suggested for that speed. Always observe posted speed limits and drive according to the road conditions to ensure safe operation. Do not over-rev the engine when shifting to a lower gear as it may cause engine damage or loss of vehicle control.

Gear	km/h (MPH) 2WD (AUTO mode)
1st	50 (30)
2nd	95 (60)

TEST VALUE AND TEST LIMIT (GST ONLY — NOT APPLICABLE TO CONSULT-II)

NEEC0031S04

The following is the information specified in Mode 6 of SAE J1979. The test value is a parameter used to determine whether a system/circuit diagnostic test is "OK" or "NG" while being monitored by the ECM during self-diagnosis. The test limit is a reference value which is specified as the maximum or minimum value and is compared with the test value being monitored.

Items for which these data (test value and test limit) are displayed are the same as SRT code items (30 test items).

These data (test value and test limit) are specified by Test ID (TID) and Component ID (CID) and can be displayed on the GST screen.

X: Applicable —: Not applicable

SRT item	Self-diagnostic test item	Test value (GST display)		Test limit	Application
		TID	CID		
CATALYST	Three way catalyst function (Right bank)	01H	01H	Max.	X
	Three way catalyst function (Left bank)	03H	02H	Max.	X
EVAP SYSTEM	EVAP control system (Small leak)	05H	03H	Max.	X
	EVAP control system purge flow monitoring	06H	83H	Min.	X

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

VG33E

Emission-related Diagnostic Information (Cont'd)

SRT item	Self-diagnostic test item	Test value (GST display)		Test limit	Application
		TID	CID		
O2 SENSOR	Front heated oxygen sensor (Right bank)	09H	04H	Max.	X
		0AH	84H	Min.	X
		0BH	04H	Max.	X
		0CH	04H	Max.	X
		0DH	04H	Max.	X
	Front heated oxygen sensor (Left bank)	11H	05H	Max.	X
		12H	85H	Min.	X
		13H	05H	Max.	X
		14H	05H	Max.	X
		15H	05H	Max.	X
	Rear heated oxygen sensor (Right bank)	19H	86H	Min.	X
		1AH	86H	Min.	X
		1BH	06H	Max.	X
		1CH	06H	Max.	X
	Rear heated oxygen sensor (Left bank)	21H	87H	Min.	X
		22H	87H	Min.	X
23H		07H	Max.	X	
24H		07H	Max.	X	
O2 SENSOR HEATER	Front heated oxygen sensor heater (Right bank)	29H	08H	Max.	X
		2AH	88H	Min.	X
	Front heated oxygen sensor heater (Left bank)	2BH	09H	Max.	X
		2CH	89H	Min.	X
	Rear heated oxygen sensor heater (Right bank)	2DH	0AH	Max.	X
		2EH	8AH	Min.	X
Rear heated oxygen sensor heater (Left bank)	2FH	0BH	Max.	X	
	30H	8BH	Min.	X	
EGR SYSTEM (if so equipped)	EGR function	31H	8CH	Min.	X
		32H	8CH	Min.	X
		33H	8CH	Min.	X
		34H	8CH	Min.	X
		35H	0CH	Max.	X
	EGRC-BPT valve function	36H	0CH	Max.	X
		37H	8CH	Min.	X

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

VG33E

Emission-related Diagnostic Information (Cont'd)

EMISSION-RELATED DIAGNOSTIC INFORMATION ITEMS

NEEC0031S05
X: Applicable —: Not applicable

Items (CONSULT-II screen terms)	DTC*4		SRT code	Test value/ Test limit (GST only)	1st trip DTC*4	Reference page
	CONSULT-II GST*2	ECM*1				
NO SELF DIAGNOSTIC FAILURE INDICATED	P0000	0505	—	—	—	—
MAF SEN/CIRCUIT	P0100	0102	—	—	X	EC-724
ABSL PRES SEN/CIRC	P0105	0803	—	—	X	EC-733
AIR TEMP SEN/CIRC	P0110	0401	—	—	X	EC-745
COOLANT T SEN/CIRC	P0115	0103	—	—	X	EC-750
THRTL POS SEN/CIRC	P0120	0403	—	—	X	EC-755
*COOLAN T SEN/CIRC	P0125	0908	—	—	X	EC-769
FRONT O2 SENSOR-B1	P0130	0503	X	X	X*3	EC-774
FRONT O2 SENSOR-B1	P0131	0415	X	X	X*3	EC-782
FRONT O2 SENSOR-B1	P0132	0414	X	X	X*3	EC-790
FRONT O2 SENSOR-B1	P0133	0413	X	X	X*3	EC-798
FRONT O2 SENSOR-B1	P0134	0509	X	X	X*3	EC-811
FR O2 SE HEATER-B1	P0135	0901	X	X	X*3	EC-819
REAR O2 SENSOR-B1	P0137	0511	X	X	X*3	EC-825
REAR O2 SENSOR-B1	P0138	0510	X	X	X*3	EC-835
REAR O2 SENSOR-B1	P0139	0707	X	X	X*3	EC-845
REAR O2 SENSOR-B1	P0140	0512	X	X	X*3	EC-855
RR O2 SE HEATER-B1	P0141	0902	X	X	X*3	EC-863
FRONT O2 SENSOR-B2	P0150	0303	X	X	X*3	EC-774
FRONT O2 SENSOR-B2	P0151	0411	X	X	X*3	EC-782
FRONT O2 SENSOR-B2	P0152	0410	X	X	X*3	EC-790
FRONT O2 SENSOR-B2	P0153	0409	X	X	X*3	EC-798
FRONT O2 SENSOR-B2	P0154	0412	X	X	X*3	EC-811
FR O2 SE HEATER-B2	P0155	1001	X	X	X*3	EC-819
REAR O2 SENSOR-B2	P0157	0314	X	X	X*3	EC-825
REAR O2 SENSOR-B2	P0158	0313	X	X	X*3	EC-835
REAR O2 SENSOR-B2	P0159	0708	X	X	X*3	EC-845
REAR O2 SENSOR-B2	P0160	0315	X	X	X*3	EC-855
RR O2 SE HEATER-B2	P0161	1002	X	X	X*3	EC-863
FUEL SYS LEAN/BK1	P0171	0115	—	—	X	EC-870
FUEL SYS RICH/BK1	P0172	0114	—	—	X	EC-878
FUEL SYS LEAN/BK2	P0174	0210	—	—	X	EC-870
FUEL SYS RICH/BK2	P0175	0209	—	—	X	EC-878
FUEL TEMP SEN/CIRC	P0180	0402	—	—	X	EC-885

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

VG33E

Emission-related Diagnostic Information (Cont'd)

Items (CONSULT-II screen terms)	DTC*4		SRT code	Test value/ Test limit (GST only)	1st trip DTC*4	Reference page
	CONSULT-II GST*2	ECM*1				
ENG OVER TEMP	P0217	0211	—	—	X	EC-890
MULTI CYL MISFIRE	P0300	0701	—	—	X	EC-903
CYL 1 MISFIRE	P0301	0608	—	—	X	EC-903
CYL 2 MISFIRE	P0302	0607	—	—	X	EC-903
CYL 3 MISFIRE	P0303	0606	—	—	X	EC-903
CYL 4 MISFIRE	P0304	0605	—	—	X	EC-903
CYL 5 MISFIRE	P0305	0604	—	—	X	EC-903
CYL 6 MISFIRE	P0306	0603	—	—	X	EC-903
KNOCK SEN/CIRC	P0325	0304	—	—	—	EC-912
CPS/CIRCUIT (OBD)	P0335	0802	—	—	X	EC-916
CAM POS SEN/CIRC	P0340	0101	—	—	X	EC-922
EGR SYSTEM (if so equipped)	P0400	0302	X	X	X*3	EC-929
EGRC-BPT VALVE (if so equipped)	P0402	0306	X	X	X*3	EC-943
TW CATALYST SYS-B1	P0420	0702	X	X	X*3	EC-951
TW CATALYST SYS-B2	P0430	0703	X	X	X*3	EC-951
EVAP SMALL LEAK	P0440	0705	X	X	X*3	EC-957
PURG VOLUME CONT/V	P0443	1008	—	—	X	EC-968
VENT CONTROL VALVE	P0446	0903	—	—	X	EC-975
EVAP SYS PRES SEN	P0450	0704	—	—	X	EC-981
EVAP GROSS LEAK	P0455	0715	—	X	X*3	EC-992
VEH SPEED SEN/CIRC	P0500	0104	—	—	X	EC-1006
IACV/AAC VLV/CIRC	P0505	0205	—	—	X	EC-1010
CLOSED TP SW/CIRC	P0510	0203	—	—	X	EC-1016
A/T COMM LINE	P0600	—	—	—	—	EC-1024
ECM	P0605	0301	—	—	X	EC-1029
PNP SW/CIRC	P0705	1101	—	—	X	AT-238
ATF TEMP SEN/CIRC	P0710	1208	—	—	X	AT-244
VEH SPD SEN/CIR AT	P0720	1102	—	—	X	AT-250
ENGINE SPEED SIG	P0725	1207	—	—	X	AT-255
A/T 1ST GR FNCTN	P0731	1103	—	—	X	AT-260
A/T 2ND GR FNCTN	P0732	1104	—	—	X	AT-266
A/T 3RD GR FNCTN	P0733	1105	—	—	X	AT-272
A/T 4TH GR FNCTN	P0734	1106	—	—	X	AT-278
TCC SOLENOID/CIRC	P0740	1204	—	—	X	AT-287
A/T TCC S/V FNCTN	P0744	1107	—	—	X	AT-292

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

VG33E

Emission-related Diagnostic Information (Cont'd)

Items (CONSULT-II screen terms)	DTC*4		SRT code	Test value/ Test limit (GST only)	1st trip DTC*4	Reference page
	CONSULT-II GST*2	ECM*1				
L/PRESS SOL/CIRC	P0745	1205	—	—	X	AT-301
SFT SOL A/CIRC	P0750	1108	—	—	X	AT-306
SFT SOL B/CIRC	P0755	1201	—	—	X	AT-311
MAP/BARO SW SOL/CIR	P1105	1302	—	—	X	EC-1031
CLOSED LOOP-B1	P1148	0307	—	—	X	EC-1043
CLOSED LOOP-B2	P1168	0308	—	—	X	EC-1043
IGN SIGNAL-PRIMARY	P1320	0201	—	—	X	EC-1045
CPS/CIRC (OBD) COG	P1336	0905	—	—	X	EC-1053
EGRC SOLENOID/V (if so equipped)	P1400	1005	—	—	X	EC-1060
EGR TEMP SEN/CIRC (if so equipped)	P1401	0305	—	—	X	EC-1065
EGR SYSTEM	P1402	0514	X	X	X*3	EC-1072
EVAP SMALL LEAK	P1440	0213	X	X	X*3	EC-1082
PURG VOLUME CONT/V	P1444	0214	—	—	X	EC-1084
VENT CONTROL VALVE	P1446	0215	—	—	X	EC-1096
EVAP PURG FLOW/MON	P1447	0111	X	X	X*3	EC-1103
VENT CONTROL VALVE	P1448	0309	—	—	X	EC-1115
VC/V BYPASS/V	P1490	0801	—	—	X	EC-1123
VC CUT/V BYPASS/V	P1491	0311	—	—	X	EC-1129
A/T DIAG COMM LINE	P1605	0804	—	—	X	EC-1138
TP SEN/CIRC A/T	P1705	1206	—	—	X	AT-316
P-N POS SW/CIRCUIT	P1706	1003	—	—	X	EC-1141
O/R CLTCH SOL/CIRC	P1760	1203	—	—	X	AT-325

*1: In Diagnostic Test Mode II (Self-diagnostic results). These numbers are controlled by NISSAN.

*2: These numbers are prescribed by SAE J2012.

*3: These are not displayed with GST.

*4: 1st trip DTC No. is the same as DTC No.

NOTE:

Regarding D22 models, “-B1” and “BK1” indicate right bank and “-B2” and “BK2” indicate left bank.

HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION

How to Erase DTC (Ⓟ With CONSULT-II)

NOTE:

If the DTC is not for A/T related items (see EC-591), skip steps 2 through 4.


1. If the ignition switch stays “ON” after repair work, be sure to turn ignition switch “OFF” once. Wait at least 5 seconds and then turn it “ON” (engine stopped) again.
2. Turn CONSULT-II “ON” and touch “A/T”.
3. Touch “SELF-DIAG RESULTS”.
4. Touch “ERASE”. [The DTC in the TCM (Transmission control module) will be erased.] Then touch “BACK” twice.
5. Touch “ENGINE”.
6. Touch “SELF-DIAG RESULTS”.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

NEEC0031S06

NEEC0031S0601

7. Touch "ERASE". (The DTC in the ECM will be erased.)
- If DTCs are displayed for both ECM and TCM (Transmission control module), they need to be erased individually from the ECM and TCM (Transmission control module).

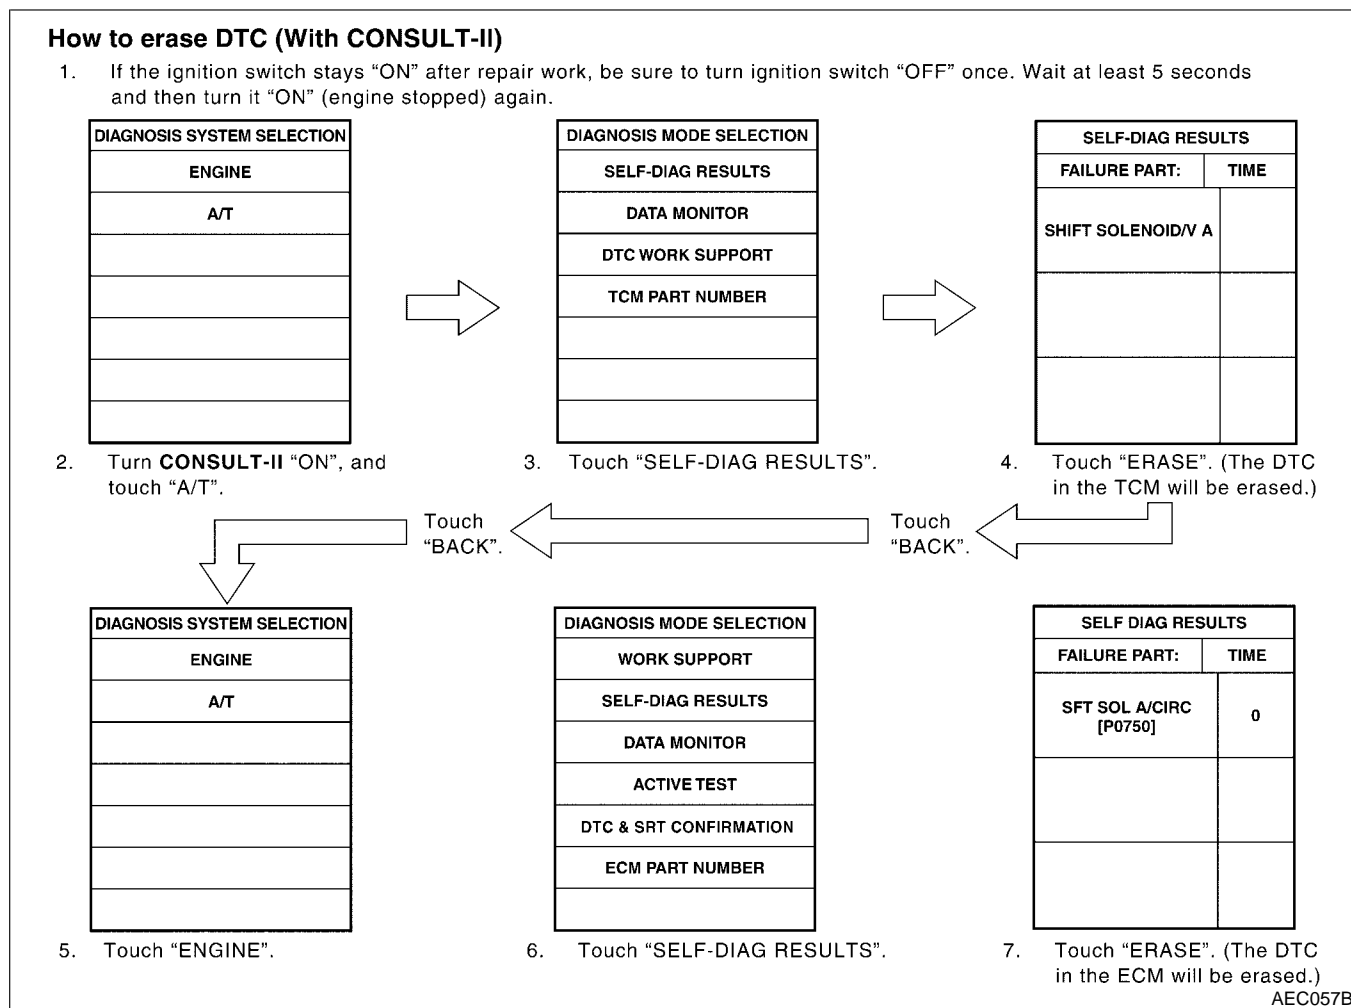

The emission related diagnostic information in the ECM can be erased by selecting "ERASE" in the "SELF-DIAG RESULTS" mode with CONSULT-II.

How to Erase DTC (🔧) With GST

NEEC0031S0602

NOTE:

If the DTC is not for A/T related items (see EC-591), skip step 2.

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" (engine stopped) again.
2. Perform "SELF-DIAGNOSTIC PROCEDURE (Without CONSULT-II)" in AT section titled "TROUBLE DIAGNOSIS", "Self-diagnosis". (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)
3. Select Mode 4 with GST (Generic Scan Tool).

The emission related diagnostic information in the ECM can be erased by selecting Mode 4 with GST.

How to Erase DTC (🚫) No Tools

NEEC0031S0603

NOTE:

If the DTC is not for A/T related items (see EC-591), skip step 2.

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 5 seconds and then turn it "ON" again.
2. Perform "SELF-DIAGNOSTIC PROCEDURE (Without CONSULT-II)" in AT section titled "TROUBLE DIAGNOSIS", "Self-diagnosis".
(The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)

3. Change the diagnostic test mode from Mode II to Mode I by turning the mode selector on the ECM. (See EC-655.)


The emission related diagnostic information in the ECM can be erased by changing the diagnostic test mode from Diagnostic Test Mode II to Mode I by turning the mode selector on the ECM.

- **If the battery is disconnected, the emission-related diagnostic information will be lost after approx. 24 hours.**
- **Erasing the emission-related diagnostic information using CONSULT-II or GST is easier and quicker than switching the mode selector on the ECM.**
- **The following data are cleared when the ECM memory is erased.**
 - 1) Diagnostic trouble codes
 - 2) 1st trip diagnostic trouble codes
 - 3) Freeze frame data
 - 4) 1st trip freeze frame data
 - 5) System readiness test (SRT) codes
 - 6) Test values
 - 7) Others

Actual work procedures are explained using a DTC as an example. Be careful so that not only the DTC, but all of the data listed above, are cleared from the ECM memory during work procedures.

Malfunction Indicator Lamp (MIL)

DESCRIPTION

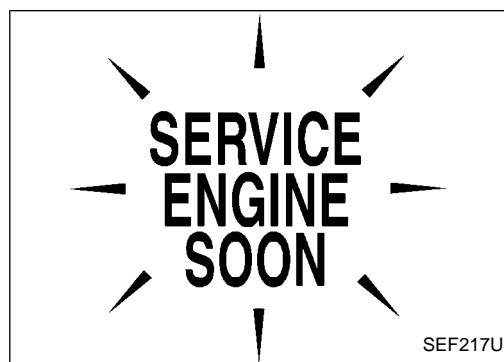

The MIL is located on the instrument panel.

1. The MIL will light up when the ignition switch is turned ON without the engine running. This is a bulb check.
 - If the MIL does not light up, refer to "WARNING LAMPS", **EL-76** or see EC-1187.
2. When the engine is started, the MIL should go off.
 - If the MIL remains on, the on board diagnostic system has detected an engine system malfunction.







GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

NEEC0032

On Board Diagnostic System Function

-NEEC0032S01

The on board diagnostic system has the following four functions.

Diagnostic Test Mode	KEY and ENG. Status	Function	Explanation of Function
Mode I	Ignition switch in "ON" position  Engine stopped 	BULB CHECK	This function checks the MIL bulb for damage (blown, open circuit, etc.). If the MIL does not come on, check MIL circuit and ECM test mode selector. (See EC-655.)
	Engine running 	MALFUNCTION WARNING	This is a usual driving condition. When a malfunction is detected twice in two consecutive driving cycles (two trip detection logic), the MIL will light up to inform the driver that a malfunction has been detected. The following malfunctions will light up or blink the MIL in the 1st trip. <ul style="list-style-type: none"> ● "Misfire (Possible three way catalyst damage)" ● "Closed loop control" ● Fail-safe mode
Mode II	Ignition switch in "ON" position  Engine stopped 	SELF-DIAGNOSTIC RESULTS	This function allows DTCs and 1st trip DTCs to be read.
	Engine running 	FRONT HEATED OXYGEN SENSOR MONITOR	This function allows the fuel mixture condition (lean or rich), monitored by front heated oxygen sensor, to be read.

MIL Flashing without DTC

NEEC0032S0101

If the ECM is in Diagnostic Test Mode II, MIL may flash when engine is running. In this case, check ECM test mode selector following "How to Switch Diagnostic Test Modes", EC-655.


How to switch the diagnostic test (function) modes, and details of the above functions are described later. (Refer to EC-655.)

The following emission-related diagnostic information is cleared when the ECM memory is erased.

- 1) Diagnostic trouble codes
- 2) 1st trip diagnostic trouble codes
- 3) Freeze frame data
- 4) 1st trip freeze frame data
- 5) System readiness test (SRT) codes
- 6) Test values
- 7) Others

NEEC0032S02

How to Switch Diagnostic Test Modes

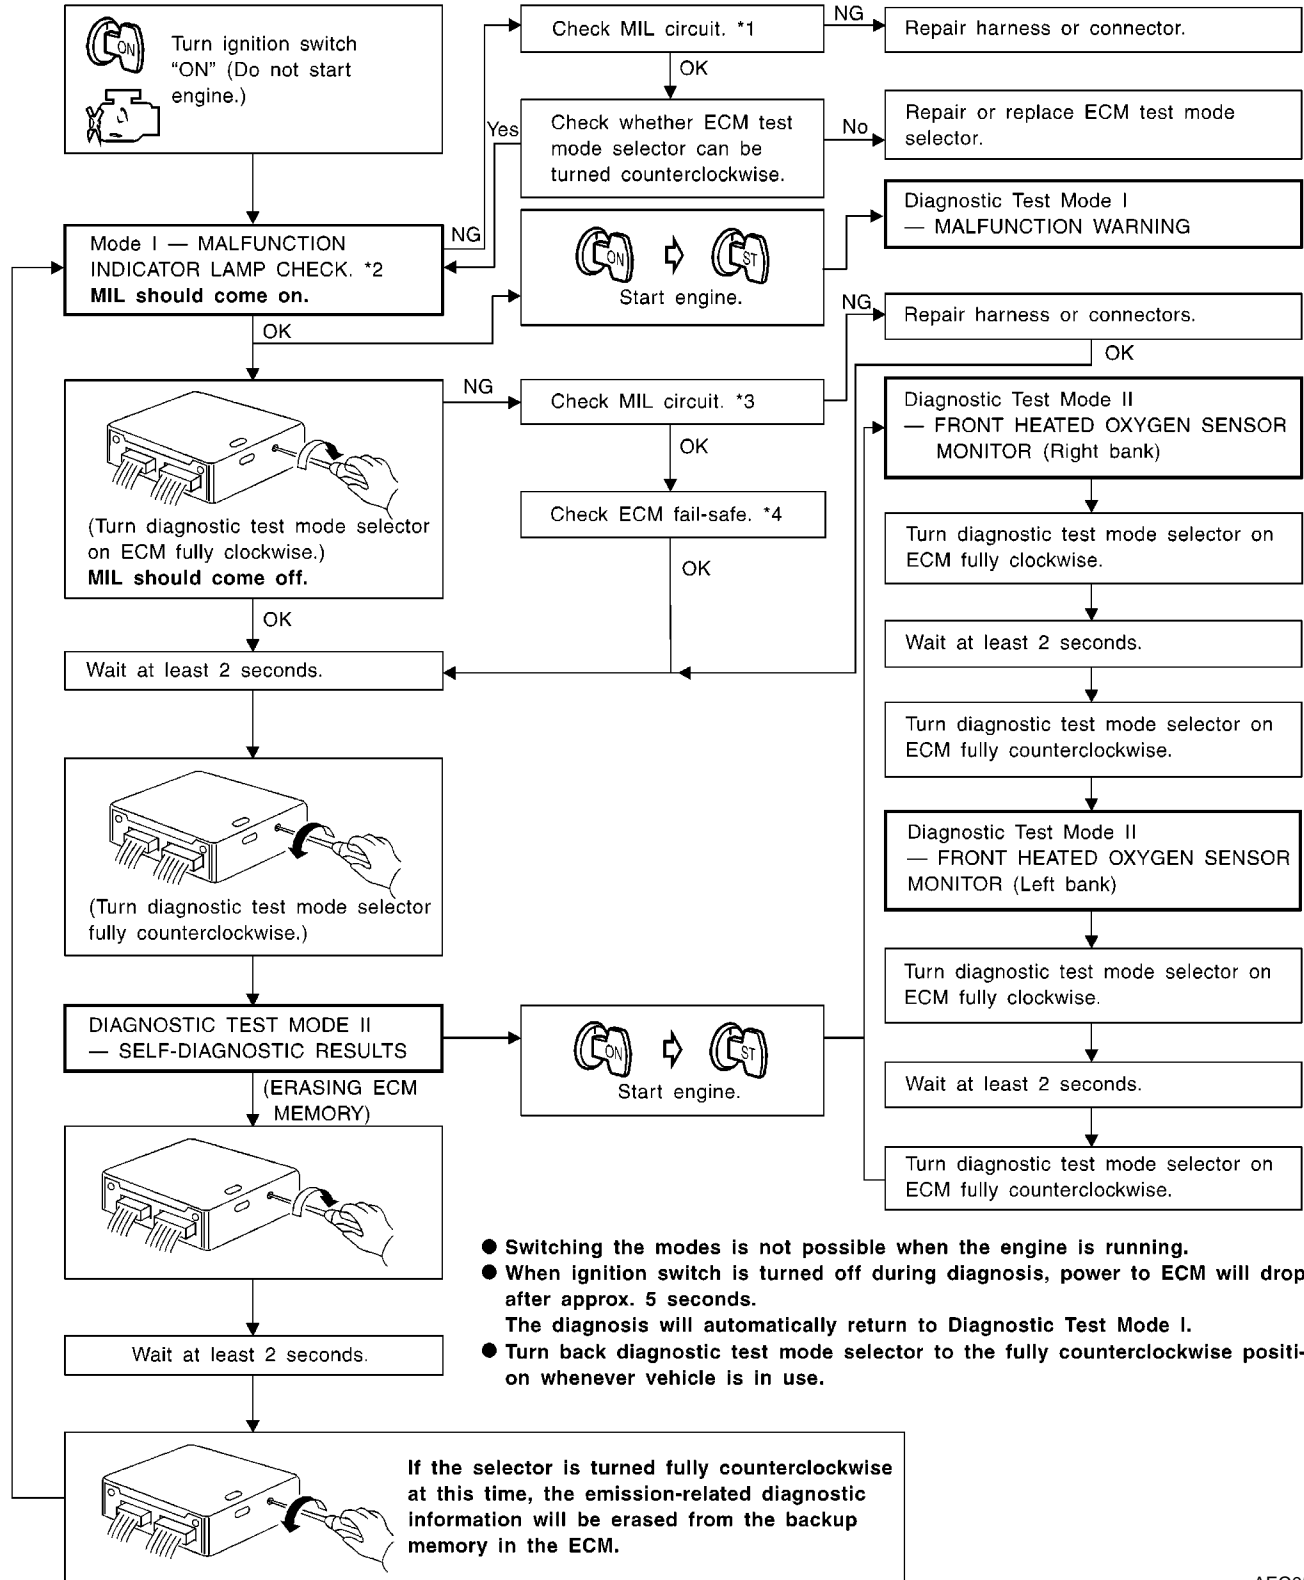

*1 EC-1187

*3 EC-1187

*4 EC-698

*2 EC-653

AEC058B

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Diagnostic Test Mode I — Bulb Check

NEEC0032S03

In this mode, the MIL on the instrument panel should stay ON. If it remains OFF, check the bulb. Refer to "WARNING LAMPS", **EL-76** or see EC-1187.

Diagnostic Test Mode I — Malfunction Warning

NEEC0032S04



MIL	Condition
ON	When the malfunction is detected or the ECM's CPU is malfunctioning.
OFF	No malfunction.

- These DTC Numbers are clarified in Diagnostic Test Mode II (SELF-DIAGNOSTIC RESULTS).

Diagnostic Test Mode II — Self-diagnostic Results

NEEC0032S05

In this mode, the DTC and 1st trip DTC are indicated by the number of blinks of the MIL. The DTC and 1st trip DTC are displayed at the same time. If the MIL does not illuminate in diagnostic test mode I (Malfunction warning), all displayed items are 1st trip DTC's. If only one code is displayed when the MIL illuminates in diagnostic test mode II (SELF-DIAGNOSTIC RESULTS), it is a DTC; if two or more codes are displayed, they may be either DTC's or 1st trip DTC's. DTC No. is same as that of 1st trip DTC. These unidentified codes can be identified by using the CONSULT-II or GST. A DTC will be used as an example for how to read a code.

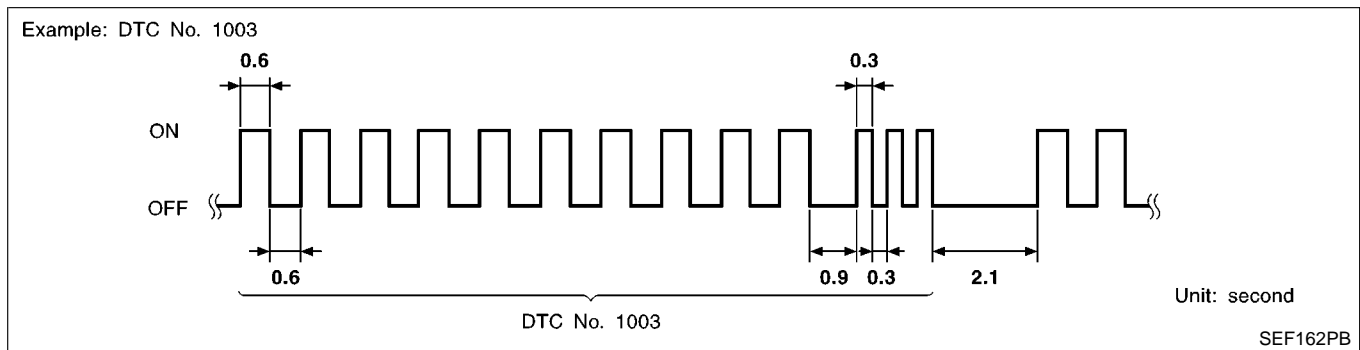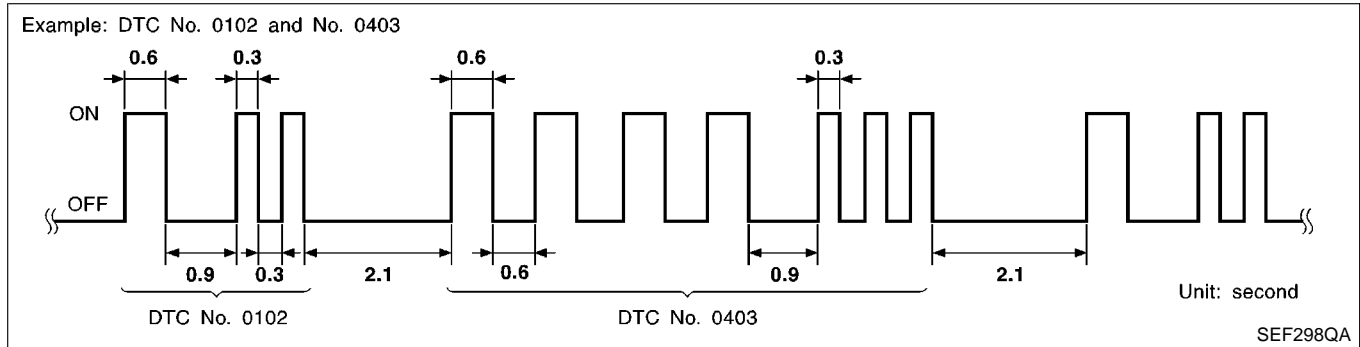

Long (0.6 second) blinking indicates the two LH digits of number and short (0.3 second) blinking indicates the two RH digits of number. For example, the MIL blinks 10 times for 6 seconds (0.6 sec x 10 times) and then it blinks three times for about 1 second (0.3 sec x 3 times). This indicates the DTC "1003" and refers to the malfunction of the park/neutral position (PNP) switch.

In this way, all the detected malfunctions are classified by their DTC numbers. The DTC "0505" refers to no malfunction. (See TROUBLE DIAGNOSIS — INDEX, EC-591.)

How to Erase Diagnostic Test Mode II (Self-diagnostic Results)

NEEC0032S0501

The DTC can be erased from the backup memory in the ECM when the diagnostic test mode is changed from Diagnostic Test Mode II to Diagnostic Test Mode I. (Refer to "How to Switch Diagnostic Test Modes", EC-655.)

- If the battery is disconnected, the DTC will be lost from the backup memory after approx. 24 hours.
- Be careful not to erase the stored memory before starting trouble diagnoses.

Diagnostic Test Mode II — Front Heated Oxygen Sensor Monitor

-NEEC0032S06

In this mode, the MIL displays the condition of the fuel mixture (lean or rich) which is monitored by the front heated oxygen sensor.

MIL	Fuel mixture condition in the exhaust gas	Air fuel ratio feedback control condition
ON	Lean	Closed loop system
OFF	Rich	
*Remains ON or OFF	Any condition	Open loop system

*: Maintains conditions just before switching to open loop.

To check the front heated oxygen sensor function, start engine in the Diagnostic Test Mode II and warm it up until engine coolant temperature indicator points to the middle of the gauge.

Next run engine at about 2,000 rpm for about 2 minutes under no-load conditions. Then make sure that the MIL comes ON more than 5 times within 10 seconds with engine running at 2,000 rpm under no-load.

OBD System Operation Chart

NEEC0033

RELATIONSHIP BETWEEN MIL, 1ST TRIP DTC, DTC, AND DETECTABLE ITEMS

NEEC0033S01

- When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data are stored in the ECM memory.
- When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data are stored in the ECM memory, and the MIL will come on. For details, refer to “Two Trip Detection Logic” on EC-637.
- The MIL will go off after the vehicle is driven 3 times with no malfunction. The drive is counted only when the recorded driving pattern is met (as stored in the ECM). If another malfunction occurs while counting, the counter will reset.
- The DTC and the freeze frame data will be stored until the vehicle is driven 40 times (driving pattern A) without the same malfunction recurring (except for Misfire and Fuel Injection System). For Misfire and Fuel Injection System, the DTC and freeze frame data will be stored until the vehicle is driven 80 times (driving pattern C) without the same malfunction recurring. The “TIME” in “SELF-DIAGNOSTIC RESULTS” mode of CONSULT-II will count the number of times the vehicle is driven.
- The 1st trip DTC is not displayed when the self-diagnosis results in “OK” for the 2nd trip.

SUMMARY CHART

NEEC0033S02

Items	Fuel Injection System	Misfire	Other
MIL (goes off)	3 (pattern B)	3 (pattern B)	3 (pattern B)
DTC, Freeze Frame Data (no display)	80 (pattern C)	80 (pattern C)	40 (pattern A)
1st Trip DTC (clear)	1 (pattern C), *1	1 (pattern C), *1	1 (pattern B)
1st Trip Freeze Frame Data (clear)	*1, *2	*1, *2	1 (pattern B)

For details about patterns “B” and “C” under “Fuel Injection System” and “Misfire”, see EC-659.


For details about patterns “A” and “B” under “Other”, see EC-661.

*1: Clear timing is at the moment OK is detected.

*2: Clear timing is when the same malfunction is detected in the 2nd trip.

RELATIONSHIP BETWEEN MIL, DTC, 1ST TRIP DTC AND DRIVING PATTERNS FOR “MISFIRE” <EXHAUST QUALITY DETERIORATION>, “FUEL INJECTION SYSTEM”

NEEC0033S03

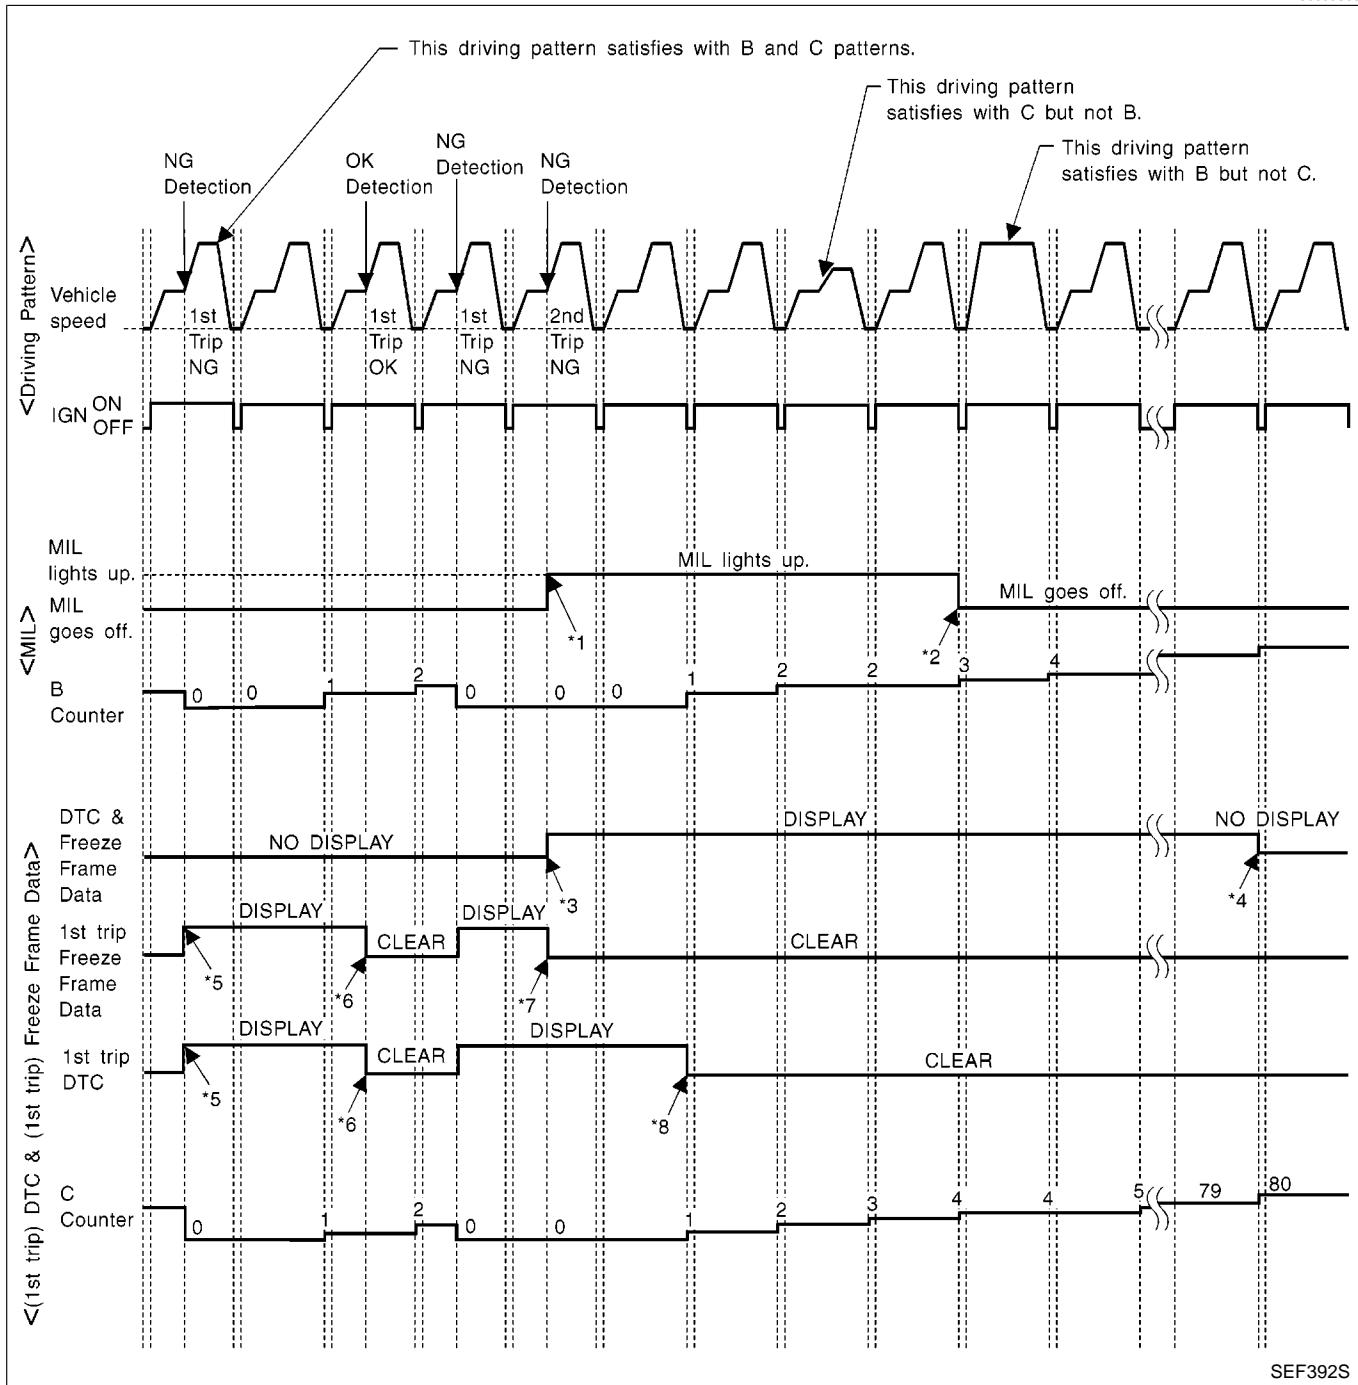

- *1: When the same malfunction is detected in two consecutive trips, MIL will light up.
- *2: MIL will go off after vehicle is driven 3 times (pattern B) without any malfunctions.
- *3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.
- *4: The DTC and the freeze frame

- data will not be displayed any longer after vehicle is driven 80 times (pattern C) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)
- *5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.
- *6: The 1st trip DTC and the 1st trip

- freeze frame data will be cleared at the moment OK is detected.
- *7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.
- *8: 1st trip DTC will be cleared when vehicle is driven once (pattern C) without the same malfunction after DTC is stored in ECM.

EXPLANATION FOR DRIVING PATTERNS FOR “MISFIRE <EXHAUST QUALITY DETERIORATION>”, “FUEL INJECTION SYSTEM”

<Driving Pattern B>

NEEC0033S04

NEEC0033S0401

Driving pattern B means the vehicle operation as follows:

All components and systems should be monitored at least once by the OBD system.

- The B counter will be cleared when the malfunction is detected once regardless of the driving pattern.
- The B counter will be counted up when driving pattern B is satisfied without any malfunction.
- The MIL will go off when the B counter reaches 3. (*2 in “OBD SYSTEM OPERATION CHART”)

<Driving Pattern C>

NEEC0033S0402

Driving pattern C means the vehicle operation as follows:

1) The following conditions should be satisfied at the same time:

Engine speed: (Engine speed in the freeze frame data) ± 375 rpm

Calculated load value: (Calculated load value in the freeze frame data) $\times (1 \pm 0.1)$ [%]

Engine coolant temperature (T) condition:

- When the freeze frame data shows lower than 70°C (158°F), “T” should be lower than 70°C (158°F).
- When the freeze frame data shows higher than or equal to 70°C (158°F), “T” should be higher than or equal to 70°C (158°F).

Example:

If the stored freeze frame data is as follows:

Engine speed: 850 rpm, Calculated load value: 30%, Engine coolant temperature: 80°C (176°F)

To be satisfied with driving pattern C, the vehicle should run under the following conditions:

Engine speed: 475 - 1,225 rpm, Calculated load value: 27 - 33%, Engine coolant temperature: more than 70°C (158°F)

- The C counter will be cleared when the malfunction is detected regardless of (1).
- The C counter will be counted up when (1) is satisfied without the same malfunction.
- The DTC will not be displayed after C counter reaches 80.
- The 1st trip DTC will be cleared when C counter is counted once without the same malfunction after DTC is stored in ECM.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

RELATIONSHIP BETWEEN MIL, DTC, 1ST TRIP DTC AND DRIVING PATTERNS EXCEPT FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

NEEC0033S05

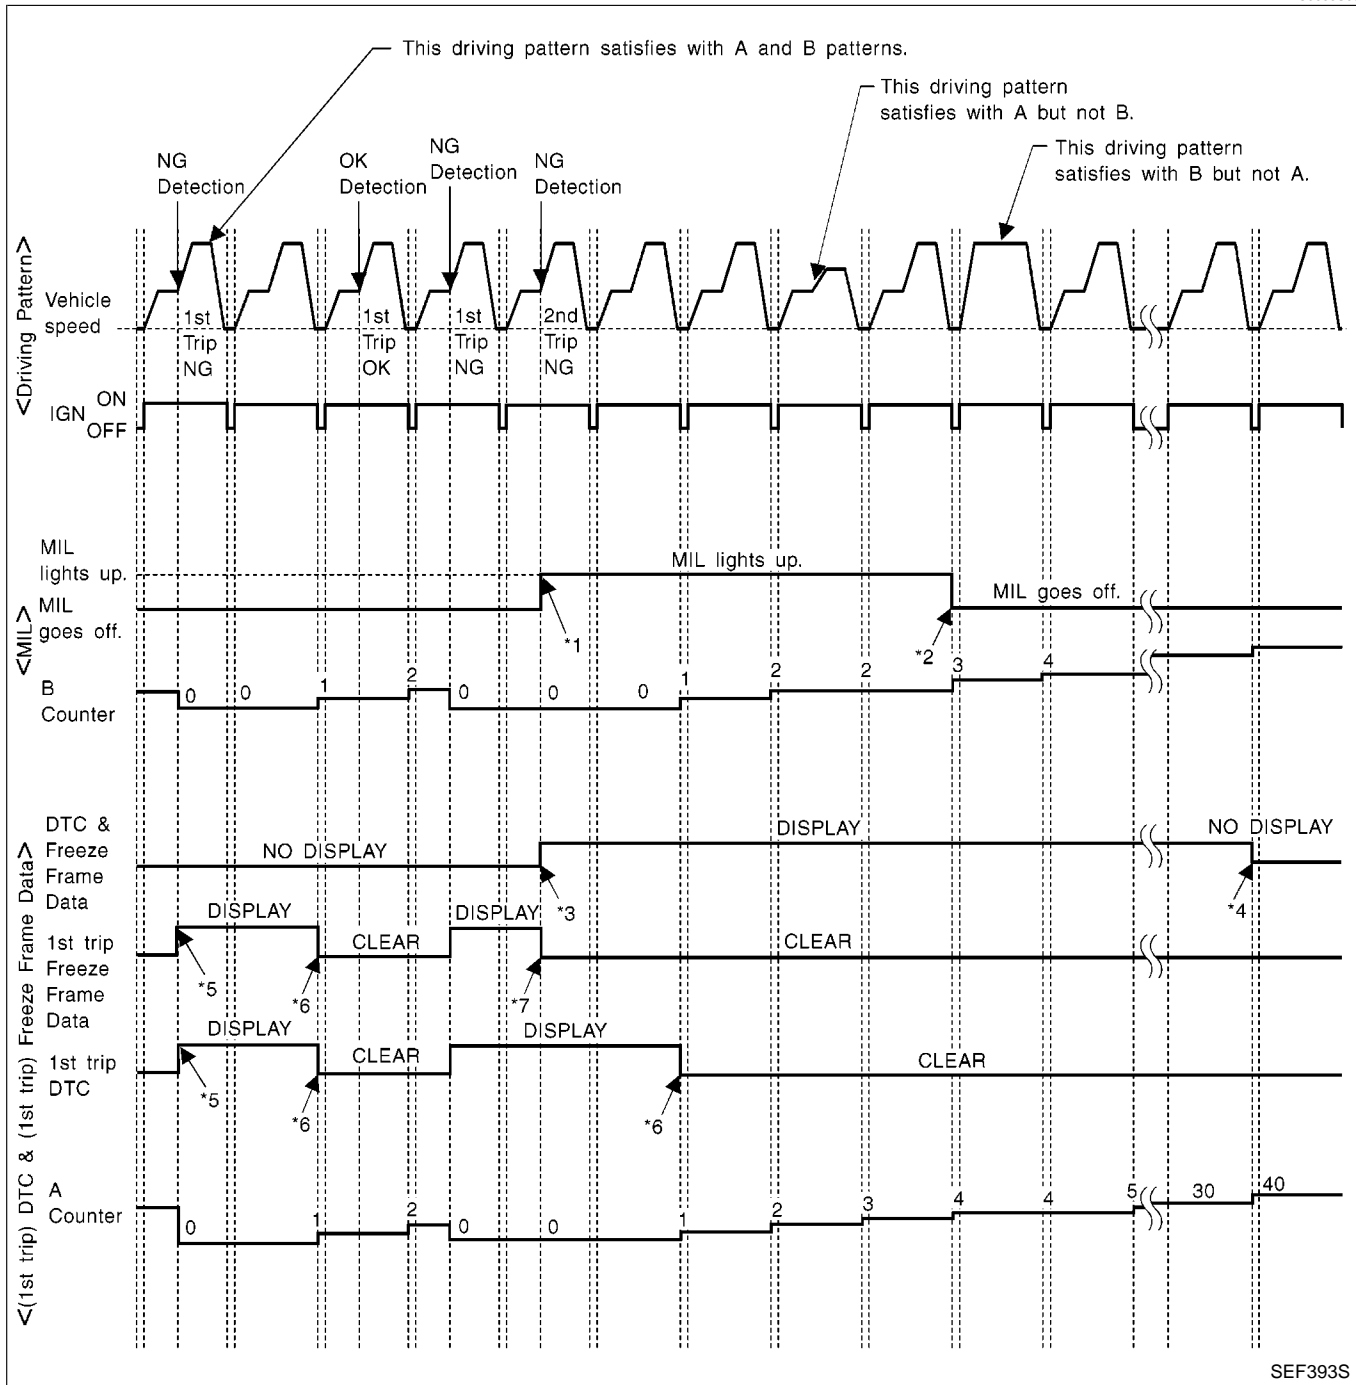

- *1: When the same malfunction is detected in two consecutive trips, MIL will light up.
- *2: MIL will go off after vehicle is driven 3 times (pattern B) without any malfunctions.
- *3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.

- *4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 40 times (pattern A) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)
- *5: When a malfunction is detected for the first time, the 1st trip DTC


- and the 1st trip freeze frame data will be stored in ECM.
- *6: 1st trip DTC will be cleared after vehicle is driven once (pattern B) without the same malfunction.
- *7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.

EXPLANATION FOR DRIVING PATTERNS EXCEPT FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

<Driving Pattern A>

NEEC0033S06

NEEC0033S0601

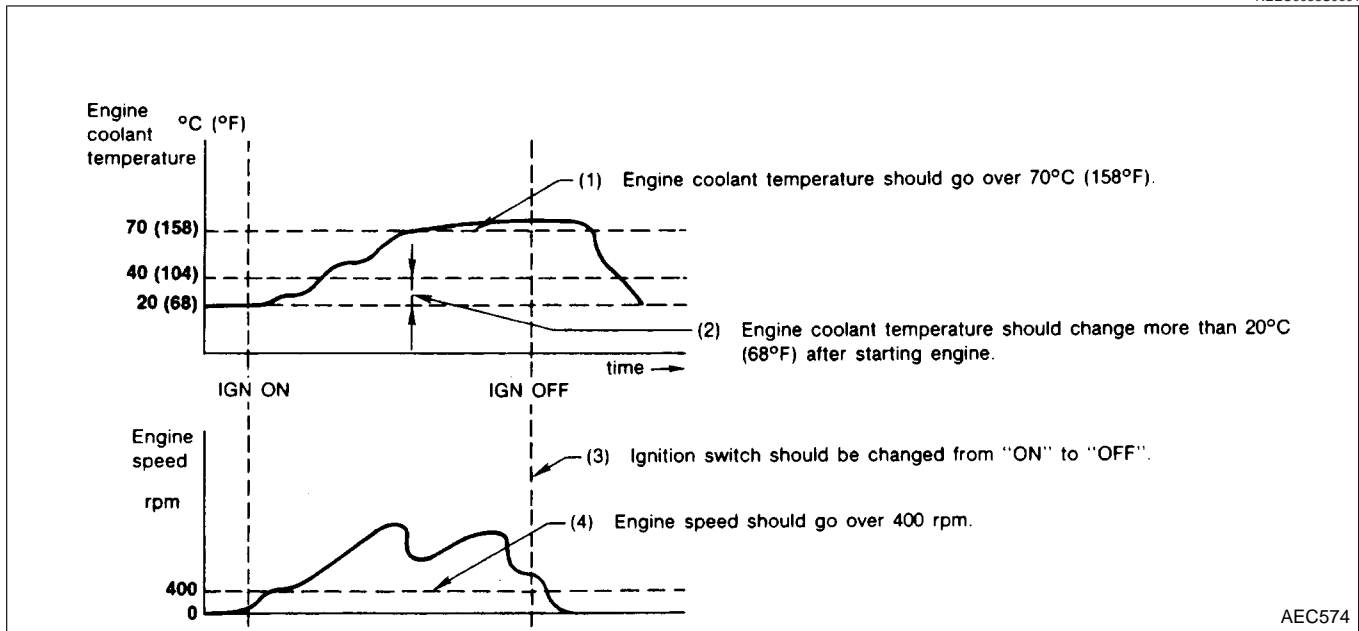

- The A counter will be cleared when the malfunction is detected regardless of (1) - (4).
- The A counter will be counted up when (1) - (4) are satisfied without the same malfunction.
- The DTC will not be displayed after the A counter reaches 40.

<Driving Pattern B>

NEEC0033S0602


Driving pattern B means the vehicle operation as follows:

All components and systems should be monitored at least once by the OBD system.

- The B counter will be cleared when the malfunction is detected once regardless of the driving pattern.
- The B counter will be counted up when driving pattern B is satisfied without any malfunctions.
- The MIL will go off when the B counter reaches 3 (*2 in "OBD SYSTEM OPERATION CHART").

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

CONSULT-II

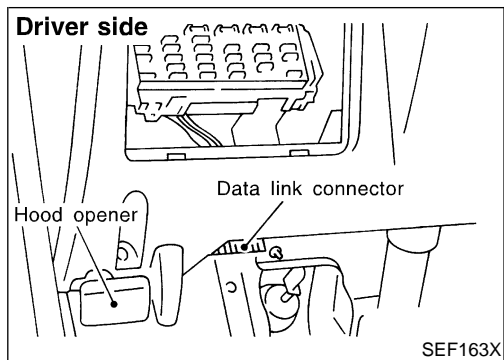


CONSULT-II

CONSULT-II INSPECTION PROCEDURE


=NEEC0034

NEEC0034S01


1. Turn ignition switch off.
2. Connect "CONSULT-II" to data link connector for CONSULT-II. (Data link connector for CONSULT-II is located under LH dash panel near the fuse box cover.)

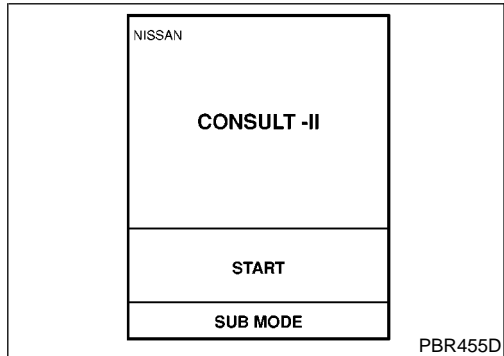

3. Turn ignition switch "ON".
4. Touch "START".

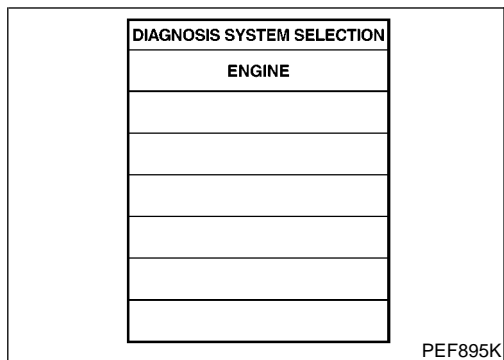

5. Touch "ENGINE".

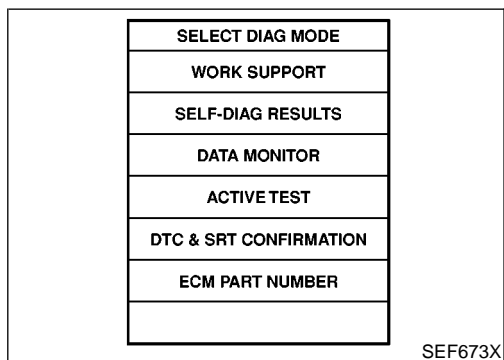

6. Perform each diagnostic test mode according to each service procedure.

For further information, see the CONSULT-II Operation Manual.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

VG33E

CONSULT-II (Cont'd)

ENGINE CONTROL COMPONENT PARTS/CONTROL SYSTEMS APPLICATION

NEEC0034S02

Item		DIAGNOSTIC TEST MODE							
		WORK SUP-PORT	SELF-DIAGNOSTIC RESULTS		DATA MONI-TOR	ACTIVE TEST	DTC CONFIRMATION		
			DTC*1	FREEZE FRAME DATA*2			SRT STATUS	DTC WORK SUP-PORT	
ENGINE CONTROL COMPONENT PARTS	INPUT	Camshaft position sensor	X	X	X				GI
	Mass air flow sensor	X		X					MA
	Engine coolant temperature sensor	X	X	X	X				EM
	Front heated oxygen sensor	X		X		X	X	X	LC
	Rear heated oxygen sensor	X		X		X	X	X	EC
	Vehicle speed sensor	X	X	X					FE
	Throttle position sensor	X		X					CL
	Fuel tank temperature sensor	X		X	X				MT
	EVAP control system pressure sensor	X		X					AT
	Absolute pressure sensor	X		X					AT
	EGR temperature sensor (if so equipped)	X		X					TF
	Intake air temperature sensor	X		X					TF
	Crankshaft position sensor (OBD)	X							PD
	Knock sensor	X							PD
	Ignition switch (start signal)				X				AX
	Closed throttle position switch	X			X				AX
	Closed throttle position switch (throttle position sensor signal)				X				SU
	Air conditioner switch				X				SU
	Park/neutral position (PNP) switch	X			X				BR
	Power steering oil pressure switch				X				BR
Battery voltage				X				ST	
Ambient air temperature switch				X				ST	

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

VG33E

CONSULT-II (Cont'd)

Item		DIAGNOSTIC TEST MODE						
		WORK SUP-PORT	SELF-DIAGNOSTIC RESULTS		DATA MONITOR	ACTIVE TEST	DTC CONFIRMATION	
			DTC*1	FREEZE FRAME DATA*2			SRT STATUS	DTC WORK SUP-PORT
ENGINE CONTROL COMPONENT PARTS OUTPUT	Injectors				X	X		
	Power transistor (Ignition timing)		X (Ignition signal)		X	X		
	IACV-AAC valve	X	X		X	X		
	EVAP canister purge volume control solenoid valve		X		X	X		X
	Air conditioner relay				X			
	Fuel pump relay	X			X	X		
	Cooling fan		X		X	X		
	EGRC-solenoid valve (if so equipped)		X		X	X		
	Front heated oxygen sensor heater		X		X		X	
	Rear heated oxygen sensor heater		X		X		X	
	EVAP canister vent control valve		X		X	X		
	Vacuum cut valve bypass valve		X		X	X		X
	MAP/BARO switch solenoid valve		X		X	X		
Calculated load value			X	X				

X: Applicable

*1: This item includes 1st trip DTCs.

*2: This mode includes 1st trip freeze frame data or freeze frame data. The items appear on CONSULT-II screen in freeze frame data mode only if a 1st trip DTC or DTC is detected. For details, refer to EC-639.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

VG33E

CONSULT-II (Cont'd)

FUNCTION

-NEEC0034S03

Diagnostic test mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on the CONSULT-II unit.
Self-diagnostic results	Self-diagnostic results such as 1st trip DTC, DTCs and 1st trip freeze frame data or freeze frame data can be read and erased quickly.*1
Data monitor	Input/Output data in the ECM can be read.
Active test	Diagnostic Test Mode in which CONSULT-II drives some actuators apart from the ECMs and also shifts some parameters in a specified range.
DTC &SRT confirmation	The status of system monitoring tests and the self-diagnosis status/result can be confirmed.
ECM part number	ECM part number can be read.

*1 The following emission-related diagnostic information is cleared when the ECM memory is erased.

- 1) Diagnostic trouble codes
- 2) 1st trip diagnostic trouble codes
- 3) Freeze frame data
- 4) 1st trip freeze frame data
- 5) System readiness test (SRT) codes
- 6) Test values
- 7) Others

WORK SUPPORT MODE

NEEC0034S04

WORK ITEM	CONDITION	USAGE
IACV-AAC VALVE ADJ	SET ENGINE SPEED AT THE SPECIFIED VALUE UNDER THE FOLLOWING CONDITIONS. <ul style="list-style-type: none"> ● ENGINE WARMED UP ● NO-LOAD 	When adjusting initial ignition timing and idle speed
FUEL PRESSURE RELEASE	<ul style="list-style-type: none"> ● FUEL PUMP WILL STOP BY TOUCHING "START" DURING IDLING. ● CRANK A FEW TIMES AFTER ENGINE STALLS. 	When releasing fuel pressure from fuel line
EVAP SYSTEM CLOSE	<p>OPEN THE VACUUM CUT VALVE BYPASS VALVE AND CLOSE THE EVAP CANISTER VENT CONTROL VALVE IN ORDER TO MAKE EVAP SYSTEM CLOSE UNDER THE FOLLOWING CONDITIONS.</p> <ul style="list-style-type: none"> ● IGN SW "ON" ● ENGINE NOT RUNNING ● AMBIENT TEMPERATURE IS ABOVE 0°C (32°F). ● NO VACUUM AND NO HIGH PRESSURE IN EVAP SYSTEM ● FUEL TANK TEMP. IS MORE THAN 0°C (32°F). ● WITHIN 10 MINUTES AFTER STARTING "EVAP SYSTEM CLOSE" ● WHEN TRYING TO EXECUTE "EVAP SYSTEM CLOSE" UNDER THE CONDITION EXCEPT ABOVE, CONSULT-II WILL DISCONTINUE IT AND DISPLAY APPROPRIATE INSTRUCTION. <p>NOTE: WHEN STARTING ENGINE, CONSULT-II MAY DISPLAY "BATTERY VOLTAGE IS LOW. CHARGE BATTERY", EVEN IN USING CHARGED BATTERY.</p>	When detecting EVAP vapor leak point of EVAP system

SELF-DIAGNOSTIC MODE

NEEC0034S05

DTC and 1st Trip DTC

NEEC0034S0501

Regarding items of "DTC and 1st trip DTC", refer to "TROUBLE DIAGNOSIS — INDEX" (See EC-591.)

Freeze Frame Data and 1st Trip Freeze Frame Data

NEEC0034S0502

Freeze frame data item*1	Description
DIAG TROUBLE CODE [PXXXX]	<ul style="list-style-type: none"> The engine control component part/control system has a trouble code, it is displayed as "PXXXX". (Refer to "TROUBLE DIAGNOSIS — INDEX", EC-591.)
FUEL SYS-B1*2	<ul style="list-style-type: none"> "Fuel injection system status" at the moment a malfunction is detected is displayed. One mode in the following is displayed. <ul style="list-style-type: none"> "MODE 2": Open loop due to detected system malfunction "MODE 3": Open loop due to driving conditions (power enrichment, deceleration enrichment) "MODE 4": Closed loop - using oxygen sensor(s) as feedback for fuel control "MODE 5": Open loop - has not yet satisfied condition to go to closed loop
FUEL SYS-B2*2	
CAL/LD VALUE [%]	<ul style="list-style-type: none"> The calculated load value at the moment a malfunction is detected is displayed.
COOLANT TEMP [°C] or [°F]	<ul style="list-style-type: none"> The engine coolant temperature at the moment a malfunction is detected is displayed.
S-FUEL TRIM-B1 [%]	<ul style="list-style-type: none"> "Short-term fuel trim" at the moment a malfunction is detected is displayed. The short-term fuel trim indicates dynamic or instantaneous feedback compensation to the base fuel schedule.
S-FUEL TRIM-B2 [%]	
L-FUEL TRIM-B1 [%]	<ul style="list-style-type: none"> "Long-term fuel trim" at the moment a malfunction is detected is displayed. The long-term fuel trim indicates much more gradual feedback compensation to the base fuel schedule than short-term fuel trim.
L-FUEL TRIM-B2 [%]	
ENGINE SPEED [rpm]	<ul style="list-style-type: none"> The engine speed at the moment a malfunction is detected is displayed.
VHCL SPEED [km/h] or [mph]	<ul style="list-style-type: none"> The vehicle speed at the moment a malfunction is detected is displayed.
ABSOL PRESS [kPa] or [kg/cm ²] or [psi]	<ul style="list-style-type: none"> The absolute pressure at the moment a malfunction is detected is displayed.
B/FUEL SCHDL [msec]	<ul style="list-style-type: none"> The Base fuel schedule at the moment a malfunction is detected is displayed.
INT/A TEMP SE [°C] or [°F]	<ul style="list-style-type: none"> The intake air temperature at the moment a malfunction is detected is displayed.

*1: The items are the same as those of 1st trip freeze frame data.

*2: Regarding D22 model, "-B1" indicates right bank and "-B2" indicates left bank.

DATA MONITOR MODE

=NEEC0034S06

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
CMPS-RPM (POS) [rpm]	○	○	<ul style="list-style-type: none"> Indicates the engine speed computed from the POS signal (1° signal) of the camshaft position sensor. 	
CMPS-RPM (REF) [rpm]	○		<ul style="list-style-type: none"> Indicates the engine speed computed from the REF signal (120° signal) of the camshaft position sensor. 	
MAS AIR/FL SE [V]	○	○	<ul style="list-style-type: none"> The signal voltage of the mass air flow sensor is displayed. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated.
COOLAN TEMP/S [°C] or [°F]	○	○	<ul style="list-style-type: none"> The engine coolant temperature (determined by the signal voltage of the engine coolant temperature sensor) is displayed. 	<ul style="list-style-type: none"> When the engine coolant temperature sensor is open or short-circuited, ECM enters fail-safe mode. The engine coolant temperature determined by the ECM is displayed.
FR O2 SEN-B2 [V]	○	○	<ul style="list-style-type: none"> The signal voltage of the front heated oxygen sensor is displayed. 	
FR O2 SEN-B1 [V]	○			
RR O2 SEN-B1 [V]	○	○	<ul style="list-style-type: none"> The signal voltage of the rear heated oxygen sensor is displayed. 	
RR O2 SEN-B2 [V]	○			
FR O2 MNTR-B2 [RICH/LEAN]	○	○	<ul style="list-style-type: none"> Display of front heated oxygen sensor signal during air-fuel ratio feedback control: RICH ... means the mixture became "rich", and control is being affected toward a leaner mixture. LEAN ... means the mixture became "lean", and control is being affected toward a rich mixture. 	<ul style="list-style-type: none"> After turning ON the ignition switch, "RICH" is displayed until air-fuel mixture ratio feedback control begins. When the air-fuel ratio feedback is clamped, the value just before the clamping is displayed continuously.
FR O2 MNTR-B1 [RICH/LEAN]	○	○		
RR O2 MNTR-B1 [RICH/LEAN]	○		<ul style="list-style-type: none"> Display of rear heated oxygen sensor signal: RICH ... means the amount of oxygen after three way catalyst is relatively small. LEAN ... means the amount of oxygen after three way catalyst is relatively large. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated.
RR O2 MNTR-B2 [RICH/LEAN]	○	○		
VHCL SPEED SE [km/h] or [mph]	○	○	<ul style="list-style-type: none"> The vehicle speed computed from the vehicle speed sensor signal is displayed. 	
BATTERY VOLT [V]	○	○	<ul style="list-style-type: none"> The power supply voltage of ECM is displayed. 	
THRTL POS SEN [V]	○	○	<ul style="list-style-type: none"> The throttle position sensor signal voltage is displayed. 	
TANK F/TMP SE [°C] or [°F]	○		<ul style="list-style-type: none"> The fuel temperature judged from the tank fuel temperature sensor signal voltage is displayed. 	
EGR TEMP SEN [V] (if so equipped)	○		<ul style="list-style-type: none"> The signal voltage of the EGR temperature sensor is displayed. 	
INT/A TEMP SE [°C] or [°F]	○		<ul style="list-style-type: none"> The intake air temperature determined by the signal voltage of the intake air temperature sensor is indicated. 	

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

VG33E

CONSULT-II (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
START SIGNAL [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the starter signal. 	<ul style="list-style-type: none"> After starting the engine, [OFF] is displayed regardless of the starter signal.
CLSD THL/P SW [ON/OFF]			<ul style="list-style-type: none"> Indicates mechanical contact [ON/OFF] condition of the closed throttle position switch. 	
CLSD THL POS [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates idle position [ON/OFF] computed by ECM according to the throttle position sensor signal. 	
AIR COND SIG [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition of the air conditioner switch as determined by the air conditioner signal. 	
P/N POSI SW [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the park/neutral position (PNP) switch signal. 	
PW/ST SIGNAL [ON/OFF]	○	○	<ul style="list-style-type: none"> [ON/OFF] condition of the power steering oil pressure switch determined by the power steering oil pressure signal is indicated. 	
AMB TEMP SW [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the ambient air temperature switch signal. 	
IGNITION SW [ON/OFF]	○		<ul style="list-style-type: none"> Indicates [ON/OFF] condition from ignition switch. 	
INJ PULSE-B2 [msec]		○	<ul style="list-style-type: none"> Indicates the actual fuel injection pulse width compensated by ECM according to the input signals. 	<ul style="list-style-type: none"> When the engine is stopped, a certain computed value is indicated.
INJ PULSE-B1 [msec]				
B/FUEL SCHDL [msec]		○	<ul style="list-style-type: none"> "Base fuel schedule" indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction. 	
IGN TIMING [BTDC]		○	<ul style="list-style-type: none"> Indicates the ignition timing computed by ECM according to the input signals. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated.
IACV-AAC/V [%]		○	<ul style="list-style-type: none"> Indicates the IACV-AAC valve control value computed by ECM according to the input signals. 	
PURG VOL C/V [%]		○	<ul style="list-style-type: none"> Indicates the EVAP canister purge volume control solenoid valve control value computed by the ECM according to the input signals. The opening becomes larger as the value increases. 	
A/F ALPHA-B2 [%]			<ul style="list-style-type: none"> The mean value of the air-fuel ratio feedback correction factor per cycle is indicated. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated. This data also includes the data for the air-fuel ratio learning control.
A/F ALPHA-B1 [%]				
EVAP SYS PRES [V]			<ul style="list-style-type: none"> The signal voltage of EVAP control system pressure sensor is displayed. 	
AIR COND RLY [ON/OFF]			<ul style="list-style-type: none"> The air conditioner relay control condition (determined by ECM according to the input signal) is indicated. 	

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

VG33E

CONSULT-II (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
FUEL PUMP RLY [ON/OFF]			<ul style="list-style-type: none"> Indicates the fuel pump relay control condition determined by ECM according to the input signals. 	GI MA
COOLING FAN [ON/OFF]			<ul style="list-style-type: none"> Indicates the control condition of the cooling fan (determined by ECM according to the input signal). ON ... Operation OFF ... Stop 	EM LC
EGRC SOL/V [ON/OFF] (FLOW/CUT) (if so equipped)			<ul style="list-style-type: none"> The control condition of the EGRC-solenoid valve (determined by ECM according to the input signal) is indicated. ON ... EGR is operational OFF ... EGR operation is cut-off 	EC FE
VENT CONT/V [ON/OFF]			<ul style="list-style-type: none"> The control condition of the EVAP canister vent control valve (determined by ECM according to the input signal) is indicated. ON ... Closed OFF ... Open 	CL MT
FR O2 HTR-B1 [ON/OFF]			<ul style="list-style-type: none"> Indicates [ON/OFF] condition of front heated oxygen sensor heater determined by ECM according to the input signals. 	AT
FR O2 HTR-B2 [ON/OFF]				TF
RR O2 HTR-B1 [ON/OFF]			<ul style="list-style-type: none"> Indicates [ON/OFF] condition of rear heated oxygen sensor heater determined by ECM according to the input signals. 	PD
RR O2 HTR-B2 [ON/OFF]				AX
VC/V BYPASS/V [ON/OFF]			<ul style="list-style-type: none"> The control condition of the vacuum cut valve bypass valve (determined by ECM according to the input signal) is indicated. ON ... Open OFF ... Closed 	SU
CAL/LD VALUE [%]			<ul style="list-style-type: none"> "Calculated load value" indicates the value of the current airflow divided by peak airflow. 	BR
ABSOL TH-P/S [%]			<ul style="list-style-type: none"> "Absolute throttle position sensor" indicates the throttle opening computed by ECM according to the signal voltage of the throttle position sensor. 	ST RS
MASS AIRFLOW [g·m/s]			<ul style="list-style-type: none"> Indicates the mass airflow computed by ECM according to the signal voltage of the mass airflow sensor. 	BT
MAP/BARO SW/V [MAP/BARO]			<ul style="list-style-type: none"> The control condition of the MAP/BARO switch solenoid valve (determined by ECM according to the input signal) is indicated. MAP ... Intake manifold absolute pressure BARO ... Ambient air barometric pressure 	HA SC EL

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

VG33E

CONSULT-II (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
ABSOL PRES/SE [V]			<ul style="list-style-type: none"> The signal voltage of the absolute pressure sensor is displayed. 	
VOLTAGE [V]			<ul style="list-style-type: none"> Voltage measured by the voltage probe. 	
PULSE [msec] or [Hz] or [%]			<ul style="list-style-type: none"> Pulse width, frequency or duty cycle measured by the pulse probe. 	<ul style="list-style-type: none"> Only “#” is displayed if item is unable to be measured. Figures with “#”s are temporary ones. They are the same figures as an actual piece of data which was just previously measured.

NOTE:

- Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.
- Regarding D22 model, “-B1” indicates right bank and “-B2” indicates left bank.

ACTIVE TEST MODE

NEEC0034S07

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
FUEL INJECTION	<ul style="list-style-type: none"> Engine: Return to the original trouble condition Change the amount of fuel injection using CONSULT-II. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> Harness and connector Fuel injectors Front heated oxygen sensor
IACV-AAC/ OPENING	<ul style="list-style-type: none"> Engine: After warming up, idle the engine. Change the IACV-AAC valve opening percent using CONSULT-II. 	Engine speed changes according to the opening percent.	<ul style="list-style-type: none"> Harness and connector IACV-AAC valve
ENG COOLANT TEMP	<ul style="list-style-type: none"> Engine: Return to the original trouble condition Change the engine coolant temperature using CONSULT-II. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> Harness and connector Engine coolant temperature sensor Fuel injectors
IGNITION TIMING	<ul style="list-style-type: none"> Engine: Return to the original trouble condition Timing light: Set Retard the ignition timing using CONSULT-II. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> Adjust initial ignition timing
POWER BALANCE	<ul style="list-style-type: none"> Engine: After warming up, idle the engine. A/C switch “OFF” Shift lever “N” Cut off each injector signal one at a time using CONSULT-II. 	Engine runs rough or dies.	<ul style="list-style-type: none"> Harness and connector Compression Injectors Power transistor Spark plugs Ignition coils
COOLING FAN	<ul style="list-style-type: none"> Ignition switch: ON Turn the cooling fan “ON” and “OFF” using CONSULT-II. 	Cooling fan moves and stops.	<ul style="list-style-type: none"> Harness and connector Cooling fan motor Cooling fan relay
FUEL PUMP RELAY	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Turn the fuel pump relay “ON” and “OFF” using CONSULT-II and listen to operating sound. 	Fuel pump relay makes the operating sound.	<ul style="list-style-type: none"> Harness and connector Fuel pump relay
EGRC SOLENOID VALVE (if so equipped)	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Turn solenoid valve “ON” and “OFF” with the CONSULT-II and listen to operating sound. 	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> Harness and connector Solenoid valve

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

VG33E

CONSULT-II (Cont'd)

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
SELF-LEARNING CONT	<ul style="list-style-type: none"> In this test, the coefficient of self-learning control mixture ratio returns to the original coefficient by touching "CLEAR" on the screen. 		
PURG VOL CONT/V	<ul style="list-style-type: none"> Engine: After warming up, run engine at 1,500 rpm. Change the EVAP canister purge volume control solenoid valve opening percent using CONSULT-II. 	Engine speed changes according to the opening percent.	<ul style="list-style-type: none"> Harness and connector Solenoid valve
TANK F/TEMP SEN	<ul style="list-style-type: none"> Change the fuel tank temperature using CONSULT-II. 		
VENT CONTROL/V	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Turn solenoid valve "ON" and "OFF" with the CONSULT-II and listen to operating sound. 	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> Harness and connector Solenoid valve
VC/V BYPASS/V	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Turn solenoid valve "ON" and "OFF" with the CONSULT-II and listen to operating sound. 	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> Harness and connector Solenoid valve
MAP/BARO SW/V	<ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Turn the MAP/BARO switch solenoid valve between "MAP" and "BARO" using CONSULT-II and listen to operating sound. 	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> Harness and connector Solenoid valve

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC CONFIRMATION MODE

SRT STATUS Mode

NEEC0034S08

For details, refer to "SYSTEM READINESS TEST (SRT) CODE", EC-639.

SRT Work Support Mode

NEEC0034S0801

SRT status and some of the data monitor item can be read.

NEEC0034S0803

DTC Work Support Mode

NEEC0034S0802

Test mode	Test item	Condition	Reference page
EVAPORATIVE SYSTEM	EVAP SML LEAK P0440	Refer to corresponding trouble diagnosis for DTC.	EC-957
	EVAP SML LEAK P1440		EC-1082
	PURG VOL CN/V P1444		EC-1084
	PURGE FLOW P1447		EC-1103
	VC CUT/V BP/V P1491		EC-1129
FR O2 SENSOR	FR O2 SEN-B1 P0130		EC-774
	FR O2 SEN-B1 P0131		EC-782
	FR O2 SEN-B1 P0132		EC-790
	FR O2 SEN-B1 P0133		EC-798
	FR O2 SEN-B2 P0150		EC-774
	FR O2 SEN-B2 P0151		EC-782
	FR O2 SEN-B2 P0152		EC-790
	FR O2 SEN-B2 P0153		EC-798
RR O2 SENSOR	RR O2 SEN-B1 P0137		EC-825
	RR O2 SEN-B1 P0138		EC-835
	RR O2 SEN-B1 P0139		EC-845
	RR O2 SEN-B2 P0157		EC-825
	RR O2 SEN-B2 P0158		EC-835
	RR O2 SEN-B2 P0159		EC-845
EGR SYSTEM (if so equipped)	EGR SYSTEM P0400		EC-929
	EGRC-BPT/VLV P0402	EC-943	
	EGR SYSTEM P1402	EC-1072	

REAL TIME DIAGNOSIS IN DATA MONITOR MODE (RECORDING VEHICLE DATA)

NEEC0034S10

CONSULT-II has two kinds of triggers and they can be selected by touching "SETTING" in "DATA MONITOR" mode.

- 1) "AUTO TRIG" (Automatic trigger):
 - The malfunction will be identified on the CONSULT-II screen in real time.
In other words, DTC/1st trip DTC and malfunction item will be displayed at the moment the malfunction is detected by ECM. DATA MONITOR can be performed continuously until a malfunction is detected. However, DATA MONITOR cannot continue any longer after the malfunction detection.
- 2) "MANU TRIG" (Manual trigger):
 - DTC/1st trip DTC and malfunction item will not be displayed automatically on CONSULT-II screen even though a malfunction is detected by ECM.
DATA MONITOR can be performed continuously even though a malfunction is detected.

Use these triggers as follows:

- 1) "AUTO TRIG"
 - While trying to detect the DTC/1st trip DTC by performing the


“DTC Confirmation Procedure”, be sure to select to “DATA MONITOR (AUTO TRIG)” mode. You can confirm the malfunction at the moment it is detected.

- While narrowing down the possible causes, CONSULT-II should be set in “DATA MONITOR (AUTO TRIG)” mode, especially in case the incident is intermittent.

When you are inspecting the circuit by gently shaking (or twisting) the suspicious connectors, components and harness in the “DTC Confirmation Procedure”, the moment a malfunction is found the DTC/1st trip DTC will be displayed. (Refer to “Incident Simulation Tests” in “HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT”, **GI-25**.)


2) “MANU TRIG”

- If the malfunction is displayed as soon as “DATA MONITOR” is selected, reset CONSULT-II to “MANU TRIG”. By selecting “MANU TRIG” you can monitor and store the data. The data can be utilized for further diagnosis, such as a comparison with the value for the normal operating condition.

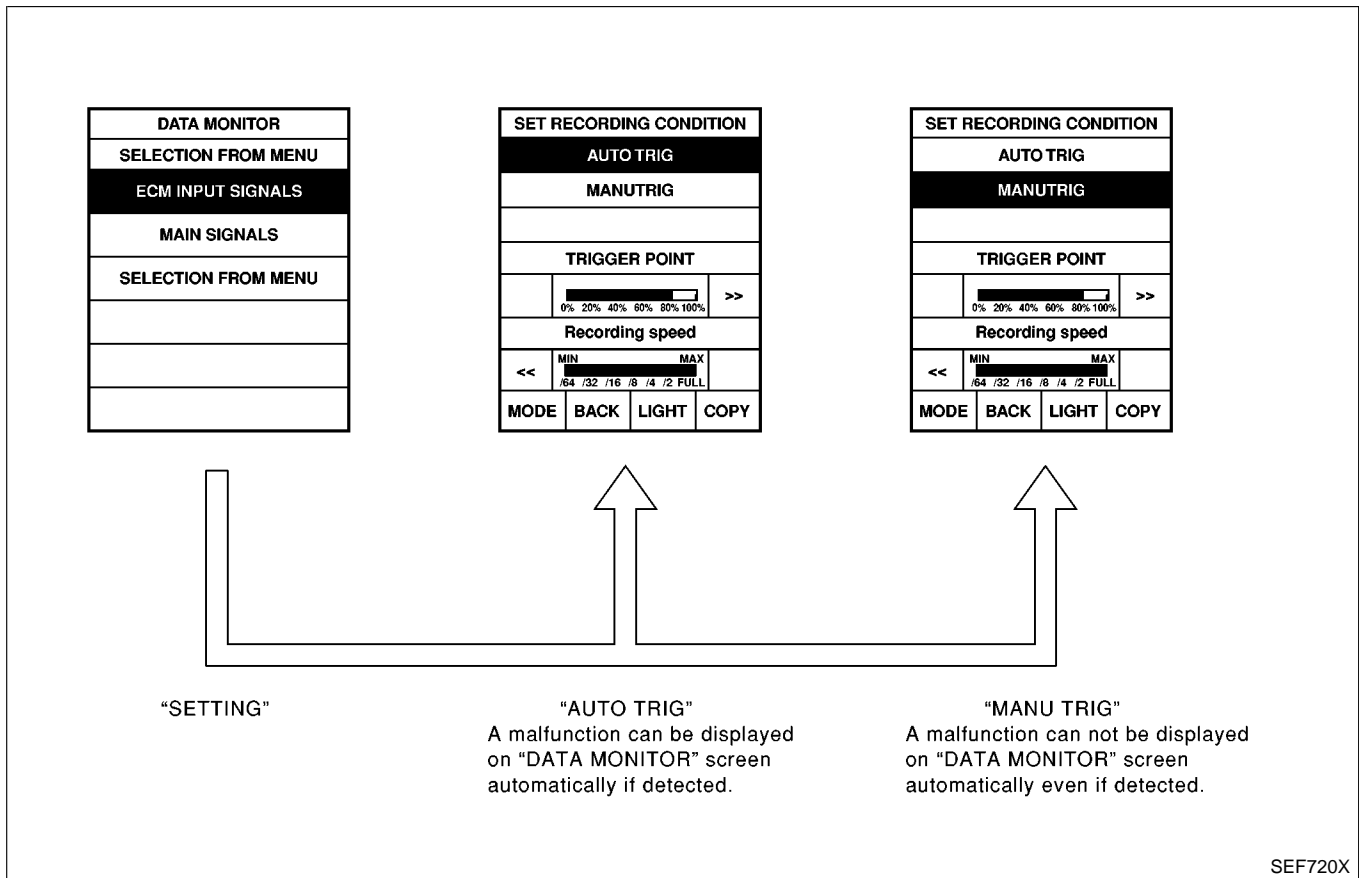

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Generic Scan Tool (GST)

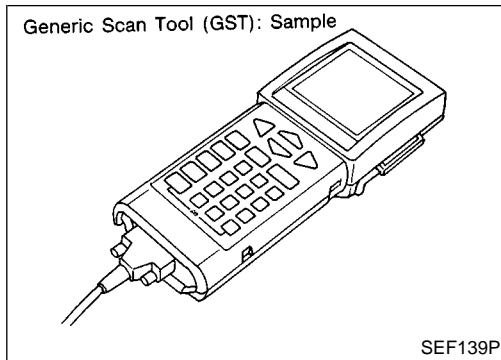


Generic Scan Tool (GST) DESCRIPTION

=NEEC0035

NEEC0035S01


Generic Scan Tool (OBDII scan tool) complying with SAE J1978 has 7 different functions explained on the next page. ISO9141 is used as the protocol. The name "GST" or "Generic Scan Tool" is used in this service manual.

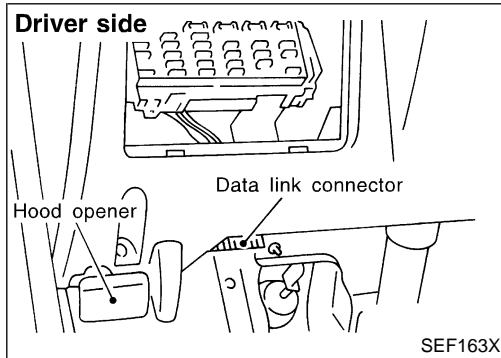

GST INSPECTION PROCEDURE


NEEC0035S02

1. Turn ignition switch OFF.
2. Connect "GST" to data link connector for GST. (Data link connector for GST is located under LH dash panel near the fuse box cover.)

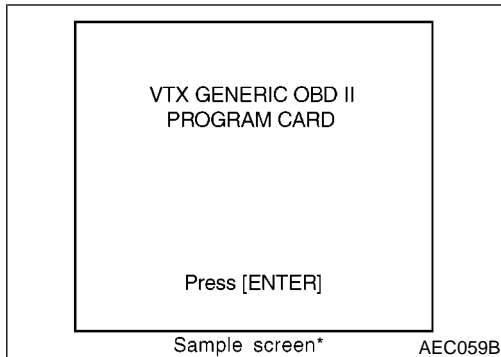

3. Turn ignition switch ON.
4. Enter the program according to instruction on the screen or in the operation manual.

(*: Regarding GST screens in this section, sample screens are shown.)

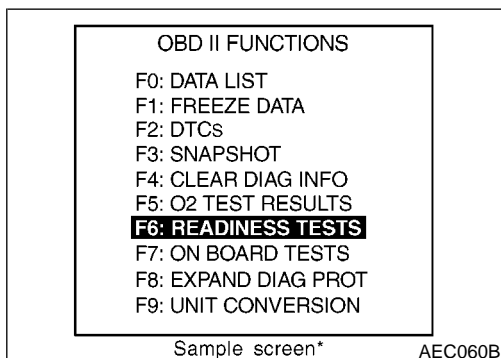

5. Perform each diagnostic mode according to each service procedure.

For further information, see the GST Operation Manual of the tool maker.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

VG33E

Generic Scan Tool (GST) (Cont'd)

FUNCTION

NEEC0035S03

Diagnostic test mode		Function
MODE 1	READINESS TESTS	This mode gains access to current emission-related data values, including analog inputs and outputs, digital inputs and outputs, and system status information.
MODE 2	(FREEZE DATA)	This mode gains access to emission-related data value which were stored by ECM during the freeze frame. [For details, refer to "Freeze Frame Data" (EC-665).]
MODE 3	DTCs	This mode gains access to emission-related power train trouble codes which were stored by ECM.
MODE 4	CLEAR DIAG INFO	This mode can clear all emission-related diagnostic information. This includes: <ul style="list-style-type: none"> ● Clear number of diagnostic trouble codes (MODE 1) ● Clear diagnostic trouble codes (MODE 3) ● Clear trouble code for freeze frame data (MODE 1) ● Clear freeze frame data (MODE 2) ● Reset status of system monitoring test (MODE 1) ● Clear on board monitoring test results (MODE 6 and 7)
MODE 6	(ON BOARD TESTS)	This mode accesses the results of on board diagnostic monitoring tests of specific components/systems that are not continuously monitored.
MODE 7	(ON BOARD TESTS)	This mode enables the off board test drive to obtain test results for emission-related powertrain components/systems that are continuously monitored during normal driving conditions.
MODE 8	—	This mode can close EVAP system in ignition switch "ON" position (Engine stopped). When this mode is performed, the following parts can be opened or closed. <ul style="list-style-type: none"> ● EVAP canister vent control valve open ● Vacuum cut valve bypass valve closed In the following conditions, this mode cannot function. <ul style="list-style-type: none"> ● Low ambient temperature ● Low battery voltage ● Engine running ● Ignition switch "OFF" ● Low fuel temperature ● Too much pressure is applied to EVAP system
MODE 9	CALIBRATION ID	This mode is to enable the off-board to request vehicle specific vehicle information such as Vehicle Identification Number (VIN) and calibration IDs.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS




BT

HA

SC

EL

IDX

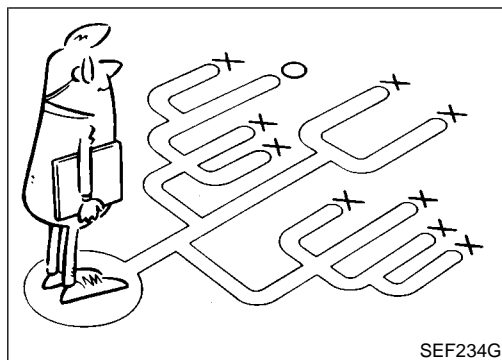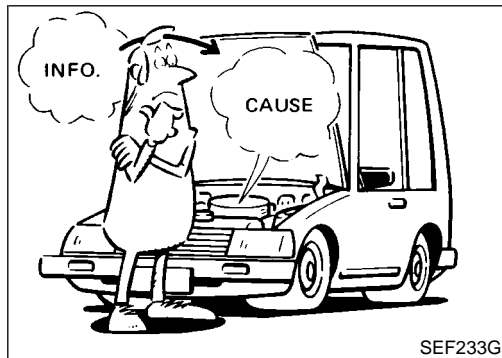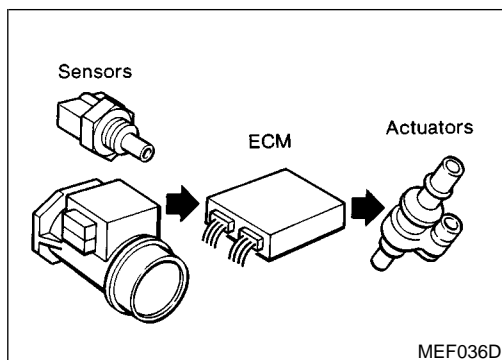

KEY POINTS

WHAT Vehicle & engine model
WHEN Date, Frequencies
WHERE..... Road conditions
HOW Operating conditions,
 Weather conditions,
 Symptoms

SEF907L

Introduction

NEEC0036

The engine has an ECM to control major systems such as fuel control, ignition control, idle air control system, etc. The ECM accepts input signals from sensors and instantly drives actuators. It is essential that both input and output signals are proper and stable. At the same time, it is important that there are no problems such as vacuum leaks, fouled spark plugs, or other problems with the engine.

It is much more difficult to diagnose a problem that occurs intermittently rather than continuously. Most intermittent problems are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.

A visual check only may not find the cause of the problems. A road test with CONSULT-II (or GST) or a circuit tester connected should be performed. Follow the "Work Flow" on EC-678.

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such problems, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "Diagnostic Worksheet" like the example on next page should be used.

Start your diagnosis by looking for "conventional" problems first. This will help troubleshoot driveability problems on an electronically controlled engine vehicle.

DIAGNOSTIC WORKSHEET

NEEC0036S01

There are many operating conditions that lead to the malfunction of engine components. A good grasp of such conditions can make trouble-shooting faster and more accurate.

In general, each customer feels differently about a problem. It is important to fully understand the symptoms or conditions for a customer complaint.

Utilize a diagnostic worksheet like the one on the next page in order to organize all the information for troubleshooting.

Some conditions may cause the MIL to come on steady or blink and DTC to be detected. Examples:

- Vehicle ran out of fuel, which caused the engine to misfire.
- Fuel filler cap was left off or incorrectly screwed on, allowing fuel to evaporate into the atmosphere [for the models with EVAP (SMALL LEAK) diagnosis].

TROUBLE DIAGNOSIS — INTRODUCTION

VG33E

Introduction (Cont'd)

Worksheet Sample

NEEC0036S0101


Customer name MR/MS		Model & Year	VIN																
Engine #		Trans.	Mileage																
Incident Date		Manuf. Date	In Service Date																
Fuel and fuel filler cap		<input type="checkbox"/> Vehicle ran out of fuel causing misfire <input type="checkbox"/> Fuel filler cap was left off or incorrectly screwed on.																	
Symptoms	<input type="checkbox"/> Startability	<input type="checkbox"/> Impossible to start <input type="checkbox"/> No combustion <input type="checkbox"/> Partial combustion <input type="checkbox"/> Partial combustion affected by throttle position <input type="checkbox"/> Partial combustion NOT affected by throttle position <input type="checkbox"/> Possible but hard to start <input type="checkbox"/> Others []																	
	<input type="checkbox"/> Idling	<input type="checkbox"/> No fast idle <input type="checkbox"/> Unstable <input type="checkbox"/> High idle <input type="checkbox"/> Low idle <input type="checkbox"/> Others []																	
	<input type="checkbox"/> Driveability	<input type="checkbox"/> Stumble <input type="checkbox"/> Surge <input type="checkbox"/> Knock <input type="checkbox"/> Lack of power <input type="checkbox"/> Intake backfire <input type="checkbox"/> Exhaust backfire <input type="checkbox"/> Others []																	
	<input type="checkbox"/> Engine stall	<input type="checkbox"/> At the time of start <input type="checkbox"/> While idling <input type="checkbox"/> While accelerating <input type="checkbox"/> While decelerating <input type="checkbox"/> Just after stopping <input type="checkbox"/> While loading																	
Incident occurrence		<input type="checkbox"/> Just after delivery <input type="checkbox"/> Recently <input type="checkbox"/> In the morning <input type="checkbox"/> At night <input type="checkbox"/> In the daytime																	
Frequency		<input type="checkbox"/> All the time <input type="checkbox"/> Under certain conditions <input type="checkbox"/> Sometimes																	
Weather conditions		<input type="checkbox"/> Not affected																	
		Weather	<input type="checkbox"/> Fine <input type="checkbox"/> Raining <input type="checkbox"/> Snowing <input type="checkbox"/> Others []																
		Temperature	<input type="checkbox"/> Hot <input type="checkbox"/> Warm <input type="checkbox"/> Cool <input type="checkbox"/> Cold <input type="checkbox"/> Humid °F																
Engine conditions		<input type="checkbox"/> Cold <input type="checkbox"/> During warm-up <input type="checkbox"/> After warm-up Engine speed <table style="display: inline-table; border: none; margin-left: 20px;"> <tr> <td style="border-bottom: 1px solid black; width: 15px; text-align: center;"> </td> <td style="border-bottom: 1px solid black; width: 15px; text-align: center;"> </td> <td style="border-bottom: 1px solid black; width: 15px; text-align: center;"> </td> <td style="border-bottom: 1px solid black; width: 15px; text-align: center;"> </td> <td style="border-bottom: 1px solid black; width: 15px; text-align: center;"> </td> <td style="border-bottom: 1px solid black; width: 15px; text-align: center;"> </td> <td style="border-bottom: 1px solid black; width: 15px; text-align: center;"> </td> <td style="border-bottom: 1px solid black; width: 15px; text-align: center;"> </td> </tr> <tr> <td style="text-align: center;">0</td> <td style="text-align: center;">2,000</td> <td style="text-align: center;">4,000</td> <td style="text-align: center;">6,000</td> <td style="text-align: center;">8,000</td> <td colspan="3" style="text-align: right;">rpm</td> </tr> </table>										0	2,000	4,000	6,000	8,000	rpm		
0	2,000	4,000	6,000	8,000	rpm														
Road conditions		<input type="checkbox"/> In town <input type="checkbox"/> In suburbs <input type="checkbox"/> Highway <input type="checkbox"/> Off road (up/down)																	
Driving conditions		<input type="checkbox"/> Not affected <input type="checkbox"/> At starting <input type="checkbox"/> While idling <input type="checkbox"/> At racing <input type="checkbox"/> While accelerating <input type="checkbox"/> While cruising <input type="checkbox"/> While decelerating <input type="checkbox"/> While turning (RH/LH) Vehicle speed <table style="display: inline-table; border: none; margin-left: 20px;"> <tr> <td style="border-bottom: 1px solid black; width: 15px; text-align: center;"> </td> <td style="border-bottom: 1px solid black; width: 15px; text-align: center;"> </td> <td style="border-bottom: 1px solid black; width: 15px; text-align: center;"> </td> <td style="border-bottom: 1px solid black; width: 15px; text-align: center;"> </td> <td style="border-bottom: 1px solid black; width: 15px; text-align: center;"> </td> <td style="border-bottom: 1px solid black; width: 15px; text-align: center;"> </td> <td style="border-bottom: 1px solid black; width: 15px; text-align: center;"> </td> <td style="border-bottom: 1px solid black; width: 15px; text-align: center;"> </td> </tr> <tr> <td style="text-align: center;">0</td> <td style="text-align: center;">10</td> <td style="text-align: center;">20</td> <td style="text-align: center;">30</td> <td style="text-align: center;">40</td> <td style="text-align: center;">50</td> <td style="text-align: center;">60</td> <td style="text-align: right;">MPH</td> </tr> </table>										0	10	20	30	40	50	60	MPH
0	10	20	30	40	50	60	MPH												
Malfunction indicator lamp		<input type="checkbox"/> Turned on <input type="checkbox"/> Not turned on																	

- GI
- MA
- EM
- LC
- EC**
- FE
- CL
- MT
- AT
- TF
- PD
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- EL
- IDX

MTBL0017

Work Flow

NEEC0037

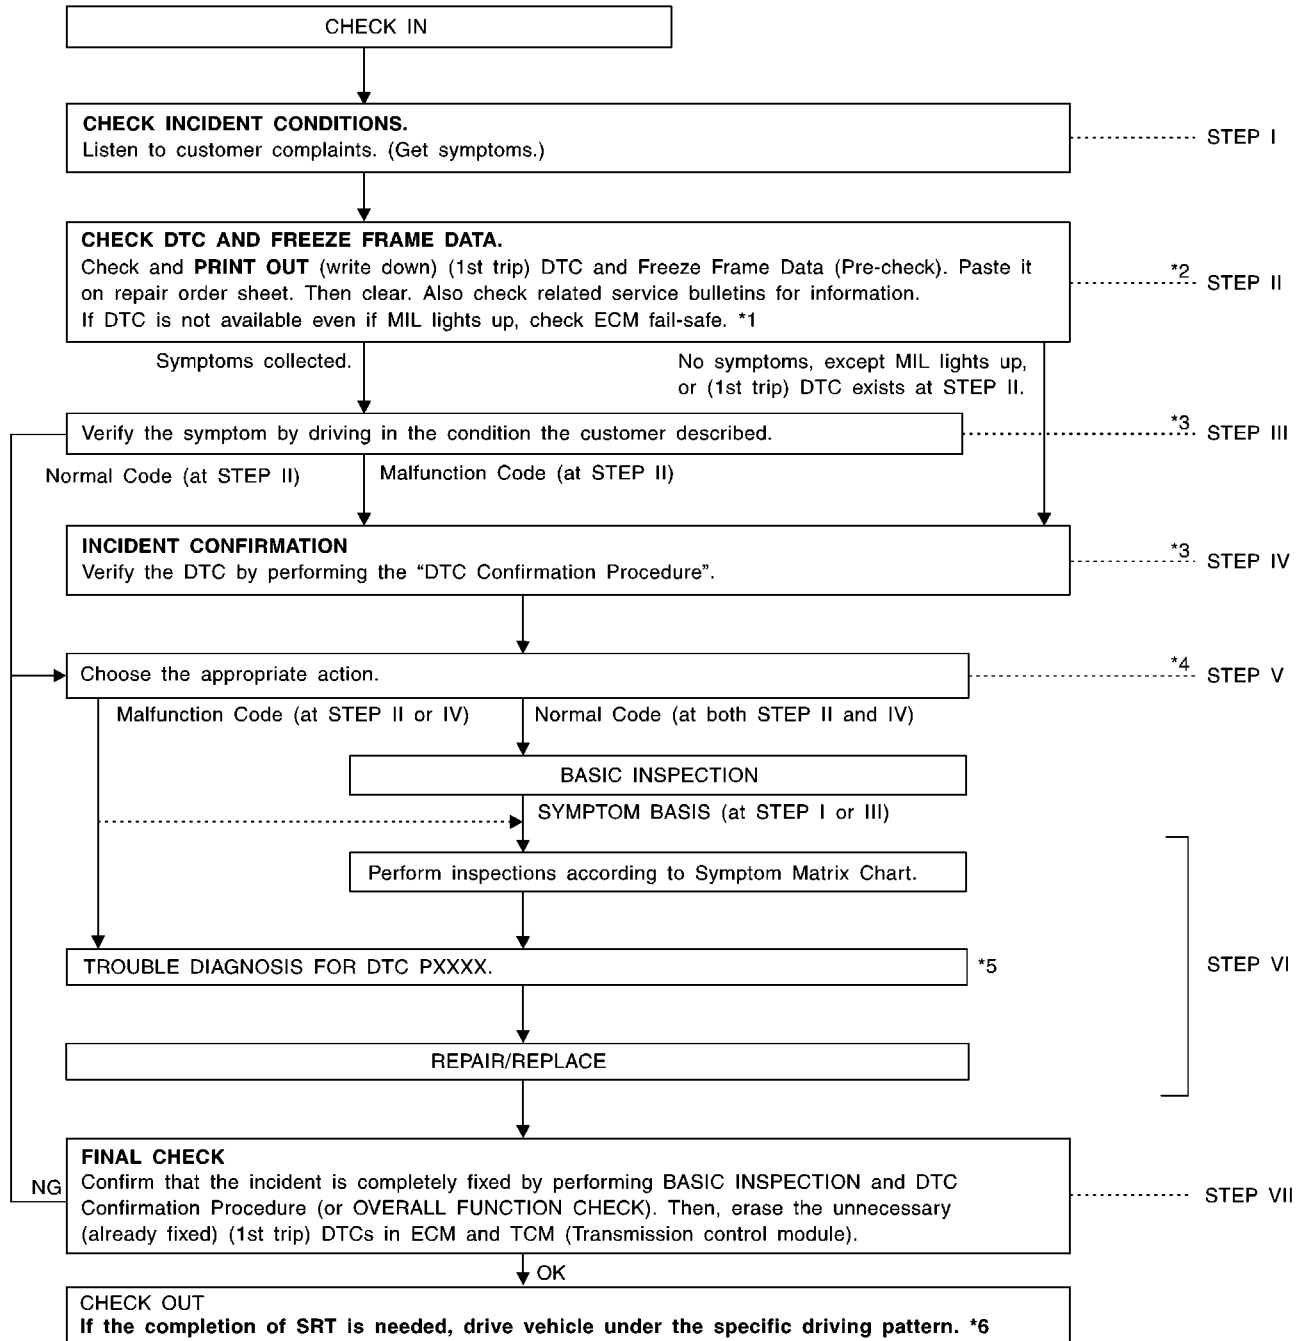

SEF935V

*1 EC-698

*2 If time data of "SELF-DIAG RESULTS" is other than "0" or "[1t]", perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.

*3 If the incident cannot be verified,

perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.

*4 If the on board diagnostic system cannot be performed, check main power supply and ground circuit. Refer to "TROUBLE DIAGNOSIS FOR POWER SUPPLY", EC-718.

*5 If malfunctioning part cannot be detected, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.

*6 EC-645

TROUBLE DIAGNOSIS — INTRODUCTION

VG33E

Work Flow (Cont'd)

DESCRIPTION FOR WORK FLOW

NEEC0037S01

STEP	DESCRIPTION	
STEP I	Get detailed information about the conditions and the environment when the incident/symptom occurred using the "DIAGNOSTIC WORK SHEET", EC-677.	GI
STEP II	Before confirming the concern, check and write down (print out using CONSULT-II or GST) the (1st trip) DTC and the (1st trip) freeze frame data, then erase the DTC and the data. (Refer to EC-651.) The (1st trip) DTC and the (1st trip) freeze frame data can be used when duplicating the incident at STEP III & IV. If the incident cannot be verified, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717. Study the relationship between the cause, specified by (1st trip) DTC, and the symptom described by the customer. (The "Symptom Matrix Chart" will be useful. See EC-699.) Also check related service bulletins for information.	MA EM LC
STEP III	Try to confirm the symptom and under what conditions the incident occurs. The "DIAGNOSTIC WORK SHEET" and the freeze frame data are useful to verify the incident. Connect CONSULT-II to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results. If the incident cannot be verified, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717. If the malfunction code is detected, skip STEP IV and perform STEP V.	EC FE
STEP IV	Try to detect the (1st trip) DTC by driving in (or performing) the "DTC Confirmation Procedure". Check and read the (1st trip) DTC and (1st trip) freeze frame data by using CONSULT-II or GST. During the (1st trip) DTC verification, be sure to connect CONSULT-II to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results. If the incident cannot be verified, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717. In case the "DTC Confirmation Procedure" is not available, perform the "Overall Function Check" instead. The (1st trip) DTC cannot be displayed by this check, however, this simplified "check" is an effective alternative. The "NG" result of the "Overall Function Check" is the same as the (1st trip) DTC detection.	CL MT
STEP V	Take the appropriate action based on the results of STEP I through IV. If the malfunction code is indicated, proceed to TROUBLE DIAGNOSIS FOR DTC PXXXX. If the normal code is indicated, proceed to the BASIC INSPECTION. (Refer to EC-680.) Then perform inspections according to the Symptom Matrix Chart. (Refer to EC-699.)	AT TF
STEP VI	Identify where to begin diagnosis based on the relationship study between symptom and possible causes. Inspect the system for mechanical binding, loose connectors or wiring damage using (tracing) "Harness Layouts". Gently shake the related connectors, components or wiring harness with CONSULT-II set in "DATA MONITOR (AUTO TRIG)" mode. Check the voltage of the related ECM terminals or monitor the output data from the related sensors with CONSULT-II. Refer to EC-703, EC-708. The "Diagnostic Procedure" in EC section contains a description based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure. For details, refer to "Circuit Inspection", "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT", GI-27 . Repair or replace the malfunction parts. If malfunctioning part cannot be detected, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	PD AX SU BR
STEP VII	Once you have repaired the circuit or replaced a component, you need to run the engine in the same conditions and circumstances which resulted in the customer's initial complaint. Perform the "DTC Confirmation Procedure" and confirm the normal code [DTC No. P0000 or 0505] is detected. If the incident is still detected in the final check, perform STEP VI by using a different method from the previous one. Before returning the vehicle to the customer, be sure to erase the unnecessary (already fixed) (1st trip) DTC in ECM and TCM (Transmission control module). (Refer to EC-651.)	ST RS

BT
HA
SC
EL
IDX


Basic Inspection



NEEC0038


Precaution:


Perform Basic Inspection without electrical or mechanical loads applied;

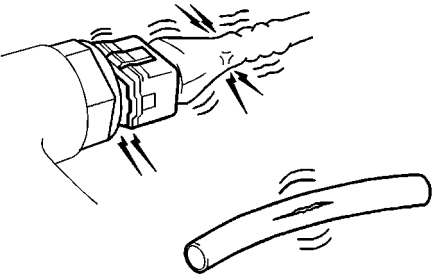- Headlamp switch is OFF,
- Air conditioner switch is OFF,
- Rear window defogger switch is OFF,
- Steering wheel is in the straight-ahead position, etc.

1	INSPECTION START	
<p>1. Check service records for any recent repairs that may indicate a related problem, or the current need for scheduled maintenance.</p> <p>2. Open engine hood and check the following:</p> <ul style="list-style-type: none"> ● Harness connectors for improper connections ● Vacuum hoses for splits, kinks, or improper connections ● Wiring for improper connections, pinches, or cuts 		
		
<small>SEF983U</small>		
Models with CONSULT-II	▶	GO TO 2.
Models with GST	▶	GO TO 2.
Models with No Tools	▶	GO TO 16.

2	CONNECT CONSULT-II OR GST TO THE VEHICLE	
<p> With CONSULT-II Connect "CONSULT-II" to the data link connector for CONSULT-II and select "ENGINE" from the menu. Refer to EC-662.</p>		
<p> With GST Connect "GST" to the data link connector for GST. Refer to EC-674.</p>		
Models with CONSULT-II	▶	GO TO 3.
Models with GST	▶	GO TO 15.

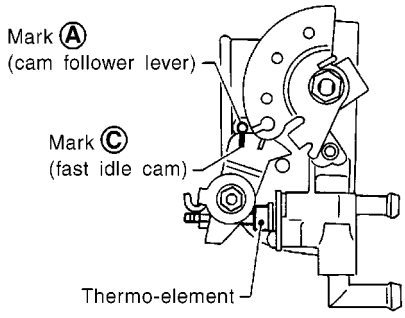3	CHECK FI CAM FUNCTION	<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Select "COOLAN TEMP/S" in "DATA MONITOR" mode with CONSULT-II. 3. Start engine and warm it up. <div style="text-align: center; margin: 10px 0;"> <table border="1" style="border-collapse: collapse; width: 150px; margin: auto;"> <tr> <th colspan="2" style="padding: 2px;">DATA MONITOR</th> </tr> <tr> <td style="padding: 2px; width: 50%;">MONITORING</td> <td style="padding: 2px; width: 50%;">NO FAIL</td> </tr> <tr> <td style="padding: 2px;">COOLAN TEMP/S</td> <td style="padding: 2px;">XXX °C</td> </tr> </table> </div> <ol style="list-style-type: none"> 4. When engine coolant temperature is 75 to 85°C (167 to 185°F), check the following. <ul style="list-style-type: none"> ● The center of mark A is aligned with mark C. ● The cam follower lever's roller is not touching the fast idle cam. <div style="text-align: center; margin: 10px 0;">  <p style="font-size: small; margin: 0;"> Mark A (cam follower lever) Mark C (fast idle cam) Thermo-element </p> </div> <p style="text-align: right; margin-right: 20px; font-size: small;">PEF002P</p> <p style="text-align: right; margin-right: 20px; font-size: small;">SEF971R</p> <p style="text-align: center; margin: 10px 0;">OK or NG</p>	DATA MONITOR		MONITORING	NO FAIL	COOLAN TEMP/S	XXX °C	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p style="background-color: black; color: white; padding: 5px;">EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>TF</p> <p>PD</p> <p>AX</p> <p>SU</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>
DATA MONITOR									
MONITORING	NO FAIL								
COOLAN TEMP/S	XXX °C								
OK	▶	GO TO 4.	AX						
NG	▶	Check FI cam. Refer to "Fast Idle Cam (FIC)", EC-622.							

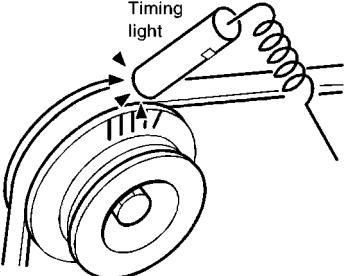4	CHECK IGNITION TIMING																						
<p> With CONSULT-II</p> <p>1. Warm up engine to normal operating temperature.</p> <p>2. Select "IACV-AAC/V ADJ" in "WORK SUPPORT" mode and touch "START".</p>																							
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr><td colspan="2" style="text-align: center;">IACV-AAC/V ADJ</td></tr> <tr><td colspan="2" style="text-align: center;">ADJ MONITOR</td></tr> <tr><td style="text-align: center;">CMPS-RPM(POS)</td><td style="text-align: center;">700 rpm</td></tr> <tr><td colspan="2" style="text-align: center;">CONDITION SETTING</td></tr> <tr><td style="text-align: center;">IACV-ACC/V</td><td style="text-align: center;">FIXED</td></tr> <tr><td> </td><td> </td></tr> <tr><td colspan="2" style="text-align: center;">MONITOR</td></tr> <tr><td style="text-align: center;">COOLAN TEMP/S</td><td style="text-align: center;">XXX C</td></tr> <tr><td style="text-align: center;">CLSD THL POS</td><td style="text-align: center;">XXX N</td></tr> <tr><td> </td><td> </td></tr> </table>				IACV-AAC/V ADJ		ADJ MONITOR		CMPS-RPM(POS)	700 rpm	CONDITION SETTING		IACV-ACC/V	FIXED			MONITOR		COOLAN TEMP/S	XXX C	CLSD THL POS	XXX N		
IACV-AAC/V ADJ																							
ADJ MONITOR																							
CMPS-RPM(POS)	700 rpm																						
CONDITION SETTING																							
IACV-ACC/V	FIXED																						
MONITOR																							
COOLAN TEMP/S	XXX C																						
CLSD THL POS	XXX N																						
<p>3. Check ignition timing at idle using a timing light.</p>																							
																							
<p>Ignition timing: 15°±2° BTDC</p>																							
<p>OK or NG</p>																							
OK	▶	GO TO 5.																					
NG	▶	<p>1. Adjust ignition timing by turning distributor. Refer to "Idle Speed/Idle Mixture Ratio Adjustment", EC-624.</p> <p>2. GO TO 5.</p>																					

PEF120W

SEF984U

5	CHECK BASE IDLE SPEED																						
<p> With CONSULT-II</p> <p>1. Select "IACV-AAC/V ADJ" in "WORK SUPPORT" mode and touch "START".</p>																							
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr><td colspan="2" style="text-align: center;">IACV-AAC/V ADJ</td></tr> <tr><td colspan="2" style="text-align: center;">ADJ MONITOR</td></tr> <tr><td style="text-align: center;">CMPS-RPM(POS)</td><td style="text-align: center;">700 rpm</td></tr> <tr><td colspan="2" style="text-align: center;">CONDITION SETTING</td></tr> <tr><td style="text-align: center;">IACV-ACC/V</td><td style="text-align: center;">FIXED</td></tr> <tr><td> </td><td> </td></tr> <tr><td colspan="2" style="text-align: center;">MONITOR</td></tr> <tr><td style="text-align: center;">COOLAN TEMP/S</td><td style="text-align: center;">XXX C</td></tr> <tr><td style="text-align: center;">CLSD THL POS</td><td style="text-align: center;">XXX N</td></tr> <tr><td> </td><td> </td></tr> </table>				IACV-AAC/V ADJ		ADJ MONITOR		CMPS-RPM(POS)	700 rpm	CONDITION SETTING		IACV-ACC/V	FIXED			MONITOR		COOLAN TEMP/S	XXX C	CLSD THL POS	XXX N		
IACV-AAC/V ADJ																							
ADJ MONITOR																							
CMPS-RPM(POS)	700 rpm																						
CONDITION SETTING																							
IACV-ACC/V	FIXED																						
MONITOR																							
COOLAN TEMP/S	XXX C																						
CLSD THL POS	XXX N																						
<p>2. Check idle speed.</p>																							
<p>700±50 rpm (in "P" or "N" position)</p>																							
<p>OK or NG</p>																							
OK	▶	GO TO 6.																					
NG	▶	<p>1. Adjust engine speed by turning idle speed adjusting screw. Refer to "Idle Speed/Idle Mixture Ratio Adjustment", EC-624.</p> <p>2. GO TO 6.</p>																					

PEF120W

6	CHECK CLOSED THROTTLE POSITION SWITCH IDLE POSITION-I (IF SO EQUIPPED)
<p>Ⓜ With CONSULT-II</p> <p>NOTE:</p> <p>Always check ignition timing and base idle speed before performing the following.</p> <ol style="list-style-type: none"> 1. Warm up engine to normal operating temperature. 2. Check FI cam, refer to procedure 3. 3. Stop engine. 4. Remove the vacuum hose connected to the throttle opener. 5. Connect suitable vacuum hose to vacuum pump as shown below. <div style="text-align: center; margin: 20px 0;"> </div> <p style="text-align: right; margin-right: 50px;">SEF793W</p>	
<p>6. Apply vacuum [more than -40.0 kPa (-300 mmHg, -11.81 inHg)]</p>	
▶	GO TO 7.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

7 CHECK CLOSED THROTTLE POSITION SWITCH IDLE POSITION-II

1. Turn ignition switch "ON".
2. Select "CLSD THL/P SW" in "DATA MONITOR" mode.
3. Read "CLSD THL/P SW" signal under the following conditions.
 - Insert a 0.3 mm (0.012 in) and 0.4 mm (0.016 in) feeler gauge alternately between the throttle adjust screw (TAS) and throttle drum as shown in the figure and check the signal.

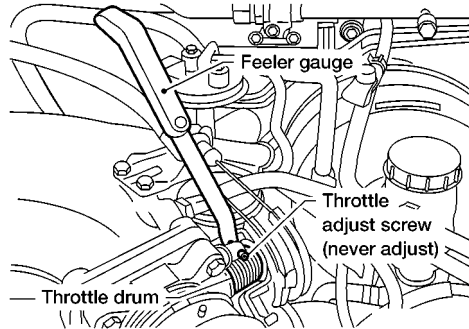

AEC887A

DATA MONITOR	
MONITORING	NO FAIL
CLSD THL/P SW	ON

PEF577W

"CLSD THL/P SW" signal should remain "ON" while inserting 0.3 mm (0.012 in) feeler gauge.
 "CLSD THL/P SW" signal should remain "OFF" while inserting 0.4 mm (0.016 in) feeler gauge.

OK or NG


OK	▶	GO TO 12.
NG	▶	GO TO 8.

8 ADJUSTMENT THROTTLE POSITION SWITCH IDLE POSITION (IF SO EQUIPPED)

Ⓜ With CONSULT-II

NOTE:

- Never adjust throttle adjust screw (TAS).
 - Do not touch throttle drum when checking "CLSD THL/P SW" signal, doing so may cause an incorrect adjustment.
1. Warm up engine to normal operating temperature.
 2. Check FI cam. Refer to procedure 3.
 3. Stop engine.
 4. Loosen throttle position sensor fixing bolts.
 5. Remove the vacuum hose connected to the throttle opener.
 6. Connect suitable vacuum hose to vacuum pump as shown below.

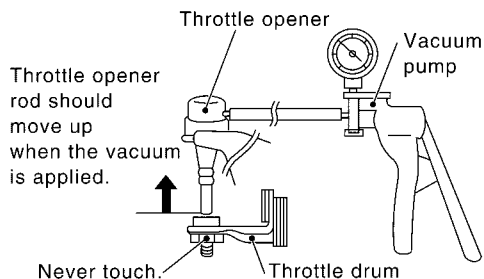

SEF793W

7. Apply vacuum [more than -40.0 kPa (-300 mmHg, -11.82 inHg)] until the throttle drum becomes free from the rod of the throttle opener. During adjustment procedure, vacuum should be applied.



GO TO 9.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

9 ADJUSTMENT CLOSED THROTTLE POSITION SWITCH IDLE POSITION-II

1. Turn ignition switch "ON".
2. Select "CLSD THL/P SW" in "DATA MONITOR" mode.
3. Insert 0.35 mm (0.0138 in) feeler gauge between throttle adjust screw and throttle drum as shown in the figure.

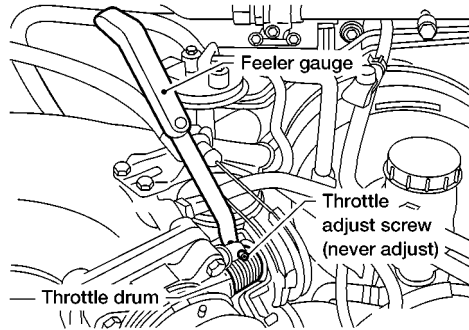

AEC887A

4. Open throttle valve and then close.
5. Check "CLSD THL/P SW" signal.

DATA MONITOR	
MONITORING	NO FAIL
CLSD THL/P SW	OFF

PEF122W

"CLSD THL/P SW" signal should remain "OFF" when the throttle valve is closed.


OK or NG

- | | | |
|----|---|-----------|
| OK | ▶ | GO TO 10. |
| NG | ▶ | GO TO 8. |

10 ADJUSTMENT THROTTLE POSITION SWITCH IDLE POSITION-III

Ⓟ With CONSULT-II

Turn throttle position sensor body clockwise until "CLSD THL/P SW" signal switches to "OFF".

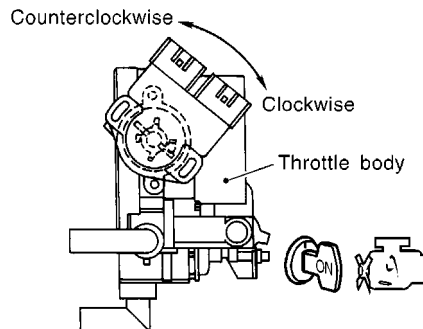


SEF689W

- | | |
|---|-----------|
| ▶ | GO TO 11. |
|---|-----------|

11 ADJUSTMENT THROTTLE POSITION SWITCH IDLE POSITION-IV

Ⓟ With CONSULT-II

1. Remove 0.35 mm (0.0138 in) feeler gauge then insert 0.3 mm (0.012 in) feeler gauge.
2. Temporarily tighten sensor body fixing bolts as follows.
 - Gradually move the sensor body counterclockwise and stop it when "CLSD THL/P SW" signal switches from "OFF" to "ON", then temporarily tighten sensor body fixing bolts.

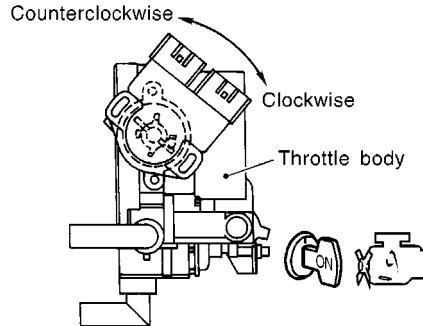

SEF689W


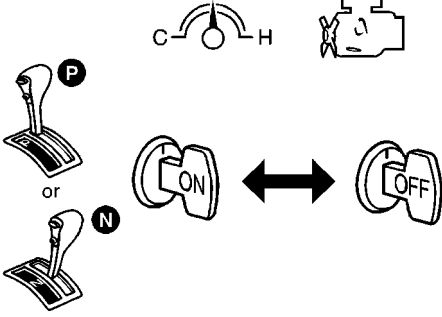
3. Make sure two or three times that the signal is "ON" when the throttle valve is closed and "OFF" when it is opened.
4. Remove 0.3 mm (0.012 in) feeler gauge then insert 0.4 mm (0.016 in) feeler gauge.
5. Make sure two or three times that the signal remains "OFF" when the throttle valve is closed.
6. Tighten throttle position sensor.
7. Check the "CLSD THL/P SW" signal again.

The signal remains "OFF" while closing throttle valve.


OK or NG


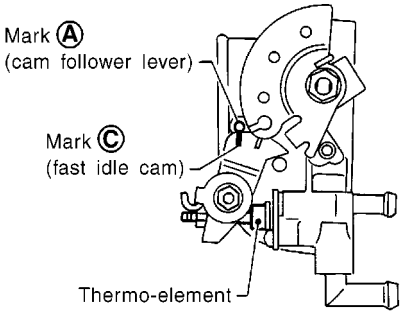
OK	▶	GO TO 12.
NG	▶	GO TO 8.


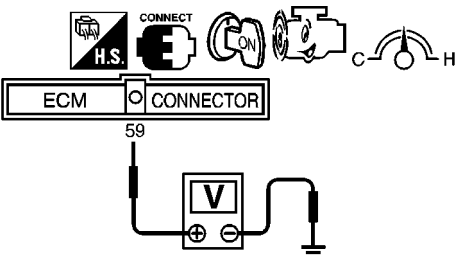
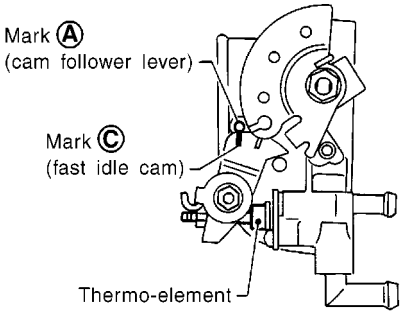
GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

12	RESET THROTTLE POSITION SENSOR IDLE POSITION MEMORY						
<p> With CONSULT-II</p> <p>NOTE: Always warm up engine to normal operating temperature. If engine is cool, the throttle position sensor idle position memory will not be reset correctly.</p> <ol style="list-style-type: none"> 1. Remove feeler gauge. 2. Start engine. 3. Warm up engine to normal operating temperature. 4. Select "CLSD THL POS" in "DATA MONITOR" mode. 5. Stop engine. (Turn ignition switch "OFF".) 6. Turn ignition switch "ON" and wait at least 5 seconds. <div style="text-align: center; margin: 10px 0;">  </div> <ol style="list-style-type: none"> 7. Turn ignition switch "OFF" and wait at least 5 seconds. 8. Repeat steps 5 and 6 until "CLSD THL POS" signal changes to "ON". <div style="text-align: center; margin: 10px 0;"> <table border="1" style="border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th style="text-align: center;">MONITORING</th> <th style="text-align: center;">NO FAIL</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">CLSD THL POS</td> <td style="text-align: center;">ON</td> </tr> </tbody> </table> </div>		DATA MONITOR		MONITORING	NO FAIL	CLSD THL POS	ON
DATA MONITOR							
MONITORING	NO FAIL						
CLSD THL POS	ON						
<p>SEF864V</p> <p>PEF123W</p>							
<p>▶ GO TO 13.</p>							



13	REMOVE VACUUM PUMP
<ol style="list-style-type: none"> 1. Release vacuum from the throttle opener. (if so equipped) 2. Remove vacuum pump and vacuum hose from the throttle opener. 3. Reinstall the original vacuum hose to the throttle opener securely. 	
<p>▶ GO TO 14.</p>	

14	CHECK TARGET IDLE SPEED
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "CMPS-RPM (REF)" in "DATA MONITOR" mode. 3. Check idle speed. <p style="text-align: center; color: blue;">750±50 rpm (in "P" or "N" position)</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ INSPECTION END
NG	▶ Adjust idle speed. Refer to "Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment", EC-624.

15	CHECK FI CAM FUNCTION
<p> With GST</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Select "MODE 1" with GST. 3. Start engine and warm it up. 4. When engine coolant temperature is 75 to 85°C (167 to 185°F), check the following. <ul style="list-style-type: none"> ● The center of mark A is aligned with mark C. ● The cam follower lever's roller is not touching the fast idle cam. <div style="text-align: center; margin: 20px 0;">  </div> <p style="text-align: right;">SEF971R</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 17.
NG	▶ Check FI cam. Refer to "Fast Idle Cam (FIC)", EC-622.

16	CHECK FI CAM FUNCTION
<p> No Tools</p> <ol style="list-style-type: none"> 1. Set the voltmeter between ECM terminal 59 (Engine coolant temperature sensor signal) and ground. 2. Start engine and warm it up. <div style="text-align: center; margin: 20px 0;">  </div> <p style="text-align: right;">SEF119W</p> <ol style="list-style-type: none"> 3. When the voltage is between 1.10 to 1.36V, check the following. <ul style="list-style-type: none"> ● The center of mark A is aligned with mark C. ● The cam follower lever's roller is not touching the fast idle cam. <div style="text-align: center; margin: 20px 0;">  </div> <p style="text-align: right;">SEF971R</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 17.
NG	▶ Check FI cam. Refer to "Fast Idle Cam (FIC)", EC-622.

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

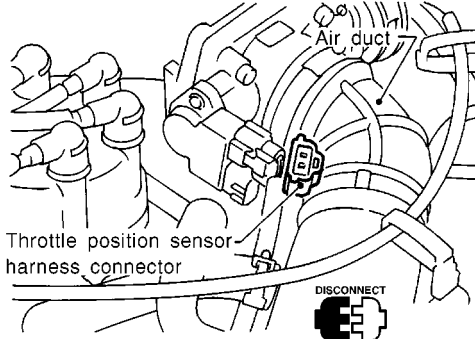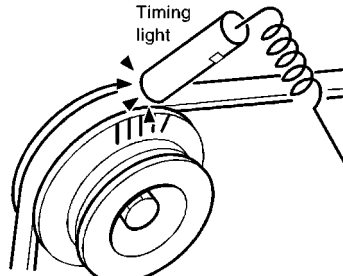17	CHECK IGNITION TIMING
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Warm up engine to normal operating temperature. 2. Stop engine and disconnect throttle position sensor harness connector. <div style="text-align: center; margin: 10px 0;">  </div> <ol style="list-style-type: none"> 3. Start engine. 4. Check ignition timing at idle using a timing light. <div style="text-align: center; margin: 10px 0;">  </div> <p style="color: blue; font-weight: bold; margin-top: 10px;">Ignition timing: 15°±2° BTDC</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	
OK	▶ GO TO 18.
NG	▶ <ol style="list-style-type: none"> 1. Adjust ignition timing by turning distributor. Refer to "Idle Speed/ Ignition Timing/ Idle Mixture Ratio Adjustment", EC-624. 2. GO TO 18.

SEF975R

SEF984U


18	CHECK BASE IDLE SPEED
<p>⊗ Without CONSULT-II</p> <p>Does engine speed fall to the following speed?</p> <p style="color: blue; font-weight: bold;">700±50 rpm (in "P" or "N" position)</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	
OK	▶ GO TO 19.
NG	▶ <ol style="list-style-type: none"> 1. Adjust engine speed by turning idle speed adjusting screw. Refer to "Idle Speed/ Ignition Timing/ Idle Mixture Ratio Adjustment", EC-624. 2. GO TO 19.

19 CHECK CLOSED THROTTLE POSITION SWITCH IDLE POSITION (IF SO EQUIPPED)

⊗ Without CONSULT-II

NOTE:**Always check ignition timing and base idle speed before performing the following.**

1. Warm up engine to normal operating temperature.
2. Check FI cam, refer to procedure 12 or 13.
3. Stop engine.
4. Remove the vacuum hose connected to the throttle opener.
5. Connect suitable vacuum hose to vacuum pump as shown below.

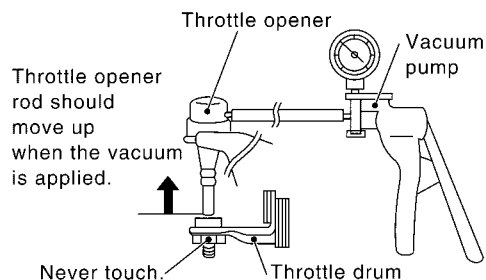

SEF793W

6. Apply vacuum [more than -40.0 kPa (-300 mmHg, -11.81 inHg)] until the throttle drum becomes free from the rod of the throttle opener. During checking procedure, vacuum should be applied.



GO TO 20.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA



SC

EL

IDX


20 CHECK CLOSED THROTTLE POSITION SWITCH IDLE POSITION-I

1. Disconnect closed throttle position switch harness connector.
2. Check continuity between closed throttle position switch terminals 5 and 6 under the following conditions.

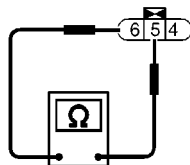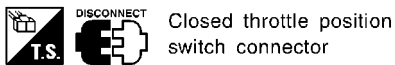

SEF862V

- Insert the 0.3 mm (0.012 in) and 0.4 mm (0.016 in) feeler gauge alternately between the throttle adjust screw (TAS) and throttle drum as shown in the figure.

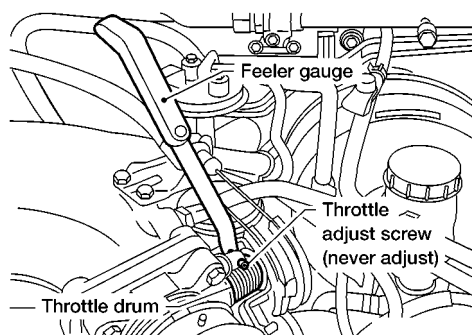

AEC887A

- “Continuity should exist” while inserting 0.3 mm (0.012 in) feeler gauge.
- “Continuity should not exist” while inserting 0.4 mm (0.016 in) feeler gauge.

OK or NG

OK	▶	GO TO 25.
NG	▶	GO TO 21.


21 | ADJUSTMENT THROTTLE POSITION SWITCH IDLE POSITION (IF SO EQUIPPED)

⊗ Without CONSULT-II

NOTE:

- Never adjust throttle adjust screw (TAS).
- Do not touch throttle drum when checking "continuity", doing so may cause an incorrect adjustment.

1. Warm up engine to normal operating temperature.
2. Check FI cam. Refer to procedure 12 or 13.
3. Stop engine.
4. Loosen throttle position sensor fixing bolts.
5. Remove the vacuum hose connected to the throttle opener.
6. Connect suitable vacuum hose to vacuum pump as shown below.

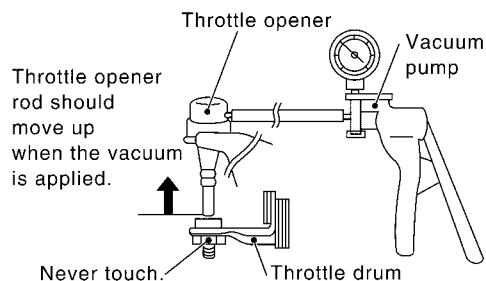

SEF793W

7. Apply vacuum [more than -40.0 kPa (-300 mmHg, -11.81 inHg)] until the throttle drum becomes free from the rod of the throttle opener. During adjustment procedure, vacuum should be applied.

▶ GO TO 22.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX


22 | ADJUSTMENT CLOSED THROTTLE POSITION SWITCH IDLE POSITION-II

1. Disconnect closed throttle position switch harness connector.
2. Insert 0.35 mm (0.0138 in) feeler gauge between the throttle adjust screw and throttle drum as shown in the figure.

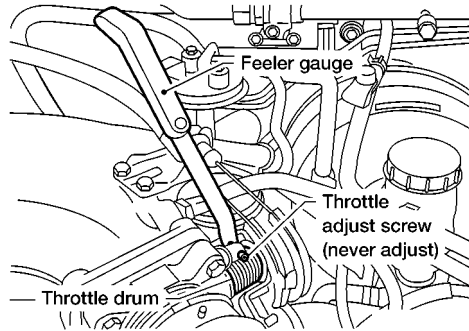


AEC887A

3. Open throttle valve then close.
4. Check continuity between closed throttle position switch terminals 5 and 6.

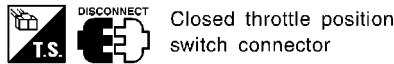

Closed throttle position switch connector

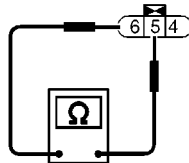

SEF862V

Continuity should not exist while closing the throttle position sensor.


OK or NG

OK	▶	GO TO 24.
NG	▶	GO TO 23.

23 | ADJUSTMENT THROTTLE POSITION SWITCH IDLE POSITION-III

⊗ Without CONSULT-II

Turn throttle position sensor body clockwise until continuity does not exist.

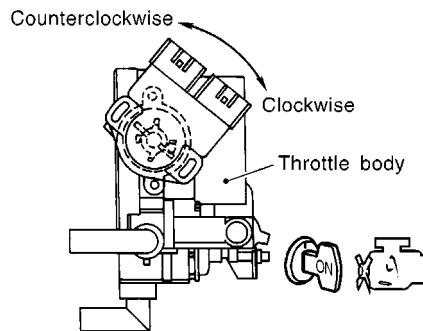

SEF689W


	▶	GO TO 24.
--	---	-----------

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

24 ADJUSTMENT THROTTLE POSITION SWITCH IDLE POSITION-IV

⊗ Without CONSULT-II

1. Remove 0.35 mm (0.0138 in) feeler gauge then insert 0.3 mm (0.012 in) feeler gauge.
2. Temporarily tighten sensor body fixing bolts as follows.
 - Gradually move the sensor body counterclockwise and stop it when the continuity comes to exist, then temporarily tighten sensor body fixing bolts.

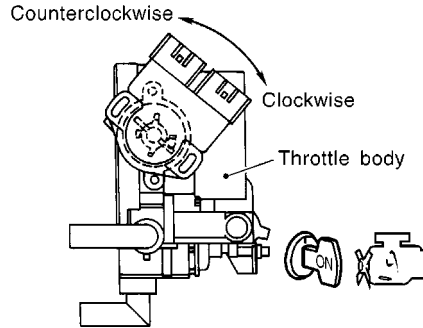

SEF689W

3. Make sure two or three times that the continuity exists when the throttle valve is closed and continuity does not exist when it is opened.
4. Remove 0.3 mm (0.012 in) feeler gauge then insert 0.4 mm (0.016 in) feeler gauge.
5. Make sure two or three times that the continuity does not exist when the throttle valve is closed.
6. Tighten throttle position sensor.
7. Check the continuity again.

Continuity does not exist while closing the throttle valve.

OK or NG

OK	▶	GO TO 25.
NG	▶	GO TO 21.


25 RESET THROTTLE POSITION SENSOR IDLE POSITION MEMORY

⊗ Without CONSULT-II

NOTE:

Always warm up engine to normal operating temperature. If engine is cool, the throttle position sensor idle position memory will not be reset correctly.

1. Remove feeler guage.
2. Start engine.
3. Warm up engine to normal operating temperature.
4. Stop engine. (Turn ignition switch OFF.)
5. Turn ignition switch ON and wait at least 5 seconds.

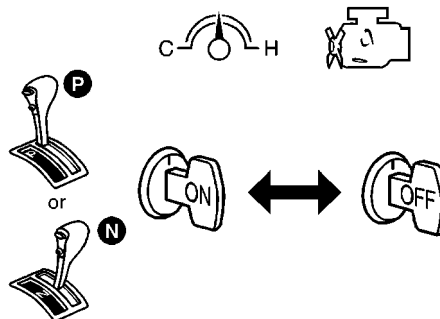



SEF864V

6. Turn ignition switch OFF and wait at least 5 seconds.
7. Repeat steps 5 and 6, 20 times.

▶	GO TO 26.
---	-----------

Basic Inspection (Cont'd)

26	REINSTALLATION		
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Release vacuum from the throttle opener. (if so equipped) 2. Remove vacuum pump and vacuum hose from the throttle opener. 3. Reinstall the original vacuum hose to the throttle opener securely. 4. Reconnect throttle position sensor harness connector and closed throttle position switch harness connector. 5. Start engine and rev it (2,000 to 3,000 rpm) two or three times under no-load and then run engine at idle speed. 			
<table style="width: 100%; border: none;"> <tr> <td style="width: 20%; text-align: center;">▶</td> <td>GO TO 27.</td> </tr> </table>		▶	GO TO 27.
▶	GO TO 27.		

27	CHECK TARGET IDLE SPEED						
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. <div style="margin-left: 20px; color: blue;">750±50 rpm (in "P" or "N" position)</div> <p style="text-align: center; margin-top: 10px;">OK or NG</p>							
<table style="width: 100%; border: none;"> <tr> <td style="width: 20%; text-align: center;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 28.</td> </tr> <tr> <td style="text-align: center;">NG</td> <td style="text-align: center;">▶</td> <td>Adjust idle speed. Refer to "Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment", EC-624.</td> </tr> </table>		OK	▶	GO TO 28.	NG	▶	Adjust idle speed. Refer to "Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment", EC-624.
OK	▶	GO TO 28.					
NG	▶	Adjust idle speed. Refer to "Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment", EC-624.					

28	ERASE UNNECESSARY DTC		
<p>After this inspection, unnecessary DTC No. might be displayed. Erase the stored memory in ECM and TCM (Transmission control module). Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-651 and "HOW TO ERASE DTC", AT-173.</p>			
<table style="width: 100%; border: none;"> <tr> <td style="width: 20%; text-align: center;">▶</td> <td>INSPECTION END</td> </tr> </table>		▶	INSPECTION END
▶	INSPECTION END		

DTC Inspection Priority Chart

NEEC0039

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)	
1	<ul style="list-style-type: none"> ● P0100 Mass air flow sensor (0102) ● P0110 Intake air temperature sensor (0401) ● P0115 P0125 Engine coolant temperature sensor (0103) (0908) ● P0120 Throttle position sensor (0403) ● P0180 Fuel tank temperature sensor (0402) ● P0325 Knock sensor (0304) ● P0335 P1336 Crankshaft position sensor (OBD) (0802) (0905) ● P0340 Camshaft position sensor (0101) ● P0500 Vehicle speed sensor (0104) ● P0600 A/T communication line ● P0605 ECM (0301) ● P1320 Ignition signal (0201) ● P1400 EGRC-solenoid valve (1005) (if so equipped) ● P1605 A/T diagnosis communication line (0804) ● P1706 Park/Neutral position (PNP) switch (1003) 	GI MA EM LC EC FE
2	<ul style="list-style-type: none"> ● P0105 Absolute pressure sensor (0803) ● P0130-P0134, P0150-P0154 Front heated oxygen sensor (0413-0415) (0503)(0509), (0303) (0409-0412) ● P0135 P0155 Front heated oxygen sensor heater (0901) (1001) ● P0137-P0140, P0157-P0160 Rear heated oxygen sensor (0510-0512) (0707), (0313-0315) (0708) ● P0141 P0161 Rear heated oxygen sensor heater (0902) (1002) ● P0443 P1444 EVAP canister purge volume control solenoid valve (1008) (0214) ● P0446 P1446 P1448 EVAP canister vent control valve (0903) (0215) (0309) ● P0450 EVAP control system pressure sensor (0704) ● P0510 Closed throttle position switch (0203) ● P0705-P0755 P1705 P1760 A/T related sensors, solenoid valves and switches (1101-1208) ● P1105 MAP/BARO switch solenoid valve (1302) ● P1401 EGR temperature sensor (0305) (if so equipped) ● P1447 EVAP control system purge flow monitoring (0111) ● P1490 P1491 Vacuum cut valve bypass valve (0801) (0311) 	CL MT AT TF PD
3	<ul style="list-style-type: none"> ● P0171 P0172 P0174 P0175 Fuel injection system function (0115) (0114) (0210) (0209) ● P0217 Engine coolant overtemperature enrichment protection (0211) ● P0306 - P0300 Misfire (0603 - 0701) ● P0400 P1402 EGR function (0302) (0514) (if so equipped) ● P0402 EGRC-BPT valve function (0306) (if so equipped) ● P0420 P0430 Three way catalyst function (0702) (0703) ● P0440 P1440, P0455 EVAP control system (SMALL LEAK) (0705) (0213), (GROSS LEAK) (0715) ● P0505 IACV-AAC valve (0205) ● P0731-P0734 P0744 A/T function (1103 - 1106) (1107) ● P1148 P1168 Closed loop control (0307) (0308) 	AX SU BR ST RS BT HA SC EL

Fail-safe Chart

=NEEC0040

The ECM enters fail-safe mode, if any of the following malfunctions is detected due to the open or short circuit. When the ECM enters the fail-safe mode, the MIL illuminates.

DTC No.		Detected items	Engine operating condition in fail-safe mode	
CONSULT-II GST	ECM*1			
P0100	0102	Mass air flow sensor circuit	Engine speed will not rise more than 2,400 rpm due to the fuel cut.	
P0115	0103	Engine coolant temperature sensor circuit	Engine coolant temperature will be determined by ECM based on the time after turning ignition switch "ON" or "START". CONSULT-II displays the engine coolant temperature decided by ECM.	
			Condition	Engine coolant temperature decided (CONSULT-II display)
			Just as ignition switch is turned ON or Start	40°C (104°F)
			More than approx. 4 minutes after ignition ON or Start	80°C (176°F)
			Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)
P0120	0403	Throttle position sensor circuit	Throttle position will be determined based on the injected fuel amount and the engine speed. Therefore, acceleration will be poor.	
			Condition	Driving condition
			When engine is idling	Normal
			When accelerating	Poor acceleration
Unable to access ECM	Unable to access Diagnostic Test Mode II	ECM	ECM fail-safe activating condition The computing function of the ECM was judged to be malfunctioning. When the fail-safe system activates (i.e., if the ECM detects a malfunction condition in the CPU of ECM), the MIL on the instrument panel lights to warn the driver. However it is not possible to access ECM and DTC cannot be confirmed.	
			Engine control with fail-safe When ECM fail-safe is operating, fuel injection, ignition timing, fuel pump operation, and IACV-AAC valve operation are controlled under certain limitations.	
			ECM fail-safe operation	
			Engine speed	Engine speed will not rise more than 3,000 rpm
			Fuel injection	Simultaneous multiport fuel injection system
			Ignition timing	Ignition timing is fixed at the preset value
			Fuel pump	Fuel pump relay is "ON" when engine is running and "OFF" when engine stalls
			IACV-AAC valve	Full open
			Replace ECM, if ECM fail-safe condition is confirmed.	

*1: In Diagnostic Test Mode II (Self-diagnostic results)

Symptom Matrix Chart
SYSTEM — BASIC ENGINE CONTROL SYSTEM

NEEC0041

NEEC0041S01

		SYMPTOM												Reference page		
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION			BATTERY DEAD (UNDER CHARGE)
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA		
Fuel	Fuel pump circuit	1	1	2	3	2		3	2				3		1	EC-1170
	Injector circuit							2								EC-1162
	Fuel pressure regulator system	4	4	4	4	4	4	4	3	3						EC-621
	Evaporative emission system															4
Air	Positive crankcase ventilation system	3	3				1	1	1	1			1			EC-619
	Incorrect idle speed adjustment															1
	IACV-AAC valve circuit	2	1	3	3	3	2	2	2	2			3		1	EC-1010
	IACV-FICD solenoid valve circuit		2				3	3								3
Ignition	Incorrect ignition timing adjustment	3	3	1	1	1		1	1				1			EC-624
	Ignition circuit							1	1							2
EGR (if so equipped)	EGRC-solenoid valve circuit	4	2	2	3	3							3			EC-1060
	EGR system		4		4	4										4
Main power supply and ground circuit		1	2	3	3	3		3	2		1	3			1	EC-718
Air conditioner circuit		2														3

1 - 6: The numbers refer to the order of inspection.
(continued on next page)

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

VG33E

Symptom Matrix Chart (Cont'd)

	SYMPTOM													Reference page
	HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code	AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Camshaft position sensor circuit	1			2				2						EC-922
Mass air flow sensor circuit		1	2		2							2		
Front heated oxygen sensor circuit				3			2							EC-774
Engine coolant temperature sensor circuit	1	2	3		3	3			2		3			EC-750, 769
Throttle position sensor circuit		1	2		2	2					2			EC-755
Incorrect throttle position sensor adjustment		3	1		1	1	1	1	1		1			EC-680
Vehicle speed sensor circuit		2												EC-1006
Knock sensor circuit			3		3						3			EC-912
ECM	2	2		3		3	3	2	2	1				EC-1029, 698
Start signal circuit	1													EC-1167
Park/neutral position (PNP) switch circuit			3		3						3			EC-1141
Power steering oil pressure switch circuit		2					3	2						EC-1177

1 - 6: The numbers refer to the order of inspection.
(continued on next page)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

VG33E

Symptom Matrix Chart (Cont'd)

SYSTEM — ENGINE MECHANICAL & OTHER

NEEC0041S02

		SYMPTOM												Reference section	
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION		BATTERY DEAD (UNDER CHARGE)
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Fuel	Fuel tank	5	5												FE-6
	Fuel piping			5	5	5		5	4		5				
	Vapor lock														
	Valve deposit														
	Poor fuel (Heavy weight gasoline, Low octane)	5		5	5	5		5	4		5				
Air	Air duct														—
	Air cleaner														
	Air leakage from air duct (Mass air flow sensor — throttle body)		5	5	5	5	5	4		5					
	Throttle body, Throttle wire	5				5			4						
	Air leakage from intake manifold/Collector/Gasket				5										
Cranking	Battery	1	1	1		1		1	1			1		1	SC-3, SC-7, and SC-19
	Generator circuit														
	Starter circuit														
	Park/neutral position (PNP) switch														
	Drive plate/Flywheel		6												

1 - 6: The numbers refer to the order of inspection.
(continued on next page)

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

VG33E

Symptom Matrix Chart (Cont'd)

		SYMPTOM												Reference section	
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION		BATTERY DEAD (UNDER CHARGE)
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Engine	Cylinder head	5	5	5	5	5		5	5			5			EM-86, EM-104, EM-77
	Cylinder head gasket										2	2			
	Cylinder block												3		
	Piston														
	Piston ring	6	6	6	6	6		6	6			6			
	Connecting rod														
	Bearing														
	Crankshaft														
Valve mechanism	Timing belt														FE-9
	Camshaft														
	Intake valve	6	6	6	6	6		6	6		6	2			
	Exhaust valve														
	Hydraulic lash adjuster														
Exhaust	Exhaust manifold/Tube/Muffler/Gasket	6	6	6	6	6		6	6		6				
	Three way catalyst														
Lubrication	Oil pan/Oil strainer/Oil pump/Oil filter/Oil gallery	6	6	6	6	6		6	6		6	2		EM-74, MA-31, LC-21, LC-21	
	Oil level Low/Filthy oil													MA-30	
Cooling	Radiator/Hose/Radiator filler cap													LC-27	
	Thermostat						5			5					
	Water pump														
	Water gallery	6	6	6	6	6		6	6		2	6			
	Cooling fan						5			5					
	Coolant level (Low/Contaminated) coolant														MA-27

1 - 6: The numbers refer to the order of inspection.

CONSULT-II Reference Value in Data Monitor Mode

NEEC0042

Remarks:

- Specification data are reference values.
- Specification data are output/input values which are detected or supplied by the ECM at the connector.

* Specification data may not be directly related to their components signals/values/operations.

i.e. Adjust ignition timing with a timing light before monitoring IGN TIMING, because the monitor may show the specification data in spite of the ignition timing not being adjusted to the specification data. This IGN TIMING monitors the data calculated by the ECM according to the signals input from the camshaft position sensor and other ignition timing related sensors.

- If the real-time diagnosis results are NG and the on board diagnostic system results are OK when diagnosing the mass air flow sensor, first check to see if the fuel pump control circuit is normal.

MONITOR ITEM	CONDITION	SPECIFICATION
CMPS-RPM (POS) CMPS-RPM (REF)	<ul style="list-style-type: none"> ● Tachometer: Connect ● Run engine and compare tachometer indication with the CONSULT-II value. 	Almost the same speed as the CONSULT-II value.
MAS AIR/FL SE	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle 2,500 rpm
		1.0 - 1.7V 1.7 - 2.3V
COOLAN TEMP/S	<ul style="list-style-type: none"> ● Engine: After warming up 	More than 70°C (158°F)
FR O2 SEN-B2 FR O2 SEN-B1	<ul style="list-style-type: none"> ● Engine: After warming up 	0 - 0.3V ↔ Approx. 0.6 - 1.0V
FR O2 MNTR-B2 FR O2 MNTR-B1		LEAN ↔ RICH Changes more than 5 times during 10 seconds.
RR O2 SEN-B1 RR O2 SEN-B2	<ul style="list-style-type: none"> ● Engine: After warming up 	0 - 0.3V ↔ Approx. 0.6 - 1.0V
RR O2 MNTR-B1 RR O2 MNTR-B2		LEAN ↔ RICH
VHCL SPEED SE	<ul style="list-style-type: none"> ● Turn drive wheels and compare speedometer indication with the CONSULT-II value 	Almost the same speed as the CONSULT-II value
BATTERY VOLT	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) 	11 - 14V
THRTL POS SEN	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine 	Throttle valve: fully closed (a) 0.15 - 0.85V
	<ul style="list-style-type: none"> ● Engine: After warming up ● Ignition switch: ON (Engine stopped) 	Throttle valve: Partially open Between (a) and (b)
		Throttle valve: fully opened (b) 3.5 - 4.7V
EGR TEMP SEN (if so equipped)	<ul style="list-style-type: none"> ● Engine: After warming up 	Less than 4.5V
START SIGNAL	<ul style="list-style-type: none"> ● Ignition switch: ON → START → ON 	OFF → ON → OFF
CLSD THL POS CLSD THL/P SW	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine 	Throttle valve: Idle position ON
		Throttle valve: Slightly open OFF
AIR COND SIG	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine 	Air conditioner switch: "OFF" OFF
		Air conditioner switch: "ON" (Compressor operates.) ON
P/N POSI SW	<ul style="list-style-type: none"> ● Ignition switch: ON 	Shift lever: "P" or "N" ON
		Except above OFF
PW/ST SIGNAL	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine 	Steering wheel in neutral position (forward direction) OFF
		The steering wheel is turned ON

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

VG33E

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION
AMB TEMP SW	<ul style="list-style-type: none"> ● Ignition switch: ON ● Compare ambient air temperature with the following: 	Below 19°C (66°F)
		Above 25°C (77°F)
IGNITION SW	<ul style="list-style-type: none"> ● Ignition switch: ON → OFF → ON 	ON → OFF → ON
INJ PULSE-B2 INJ PULSE-B1	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle
		2,000 rpm
B/FUEL SCHDL	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle
		2,000 rpm
IGN TIMING	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle
		2,000 rpm
IACV-AAC/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle
		2,000 rpm
PURG VOL C/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle
		2,000 rpm
A/F ALPHA-B2 A/F ALPHA-B1	<ul style="list-style-type: none"> ● Engine: After warming up 	Maintaining engine speed at 2,000 rpm
EVAP SYS PRES	<ul style="list-style-type: none"> ● Ignition switch: ON 	Approx. 3.4V
AIR COND RLY	<ul style="list-style-type: none"> ● Air conditioner switch: OFF → ON 	OFF → ON
FUEL PUMP RLY	<ul style="list-style-type: none"> ● Ignition switch is turned to ON (Operates for 5 seconds) ● Engine running and cranking 	ON
	Except as shown above	OFF
COOLING FAN	<ul style="list-style-type: none"> ● After warming up engine, idle the engine. ● Air conditioner switch: "OFF" 	Engine coolant temperature is 94°C (201°F) or less
		Engine coolant temperature is 95°C (203°F) or more
EGRC SOL/V (if so equipped)	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle
		Engine speed: Revving from idle up to 3,000 rpm quickly
VENT CONT/V	<ul style="list-style-type: none"> ● Ignition switch: ON 	OFF
FR O2 HTR-B1 FR O2 HTR-B2	<ul style="list-style-type: none"> ● Engine speed: Below 3,200 rpm 	ON
	<ul style="list-style-type: none"> ● Engine speed: Above 3,200 rpm 	OFF
RR O2 HTR-B1 RR O2 HTR-B2	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● Engine speed: Above 3,200 rpm 	OFF
	<ul style="list-style-type: none"> ● Engine speed: Below 3,200 rpm [After driving for 2 minutes at a speed of 70 km/h (43 MPH) or more] 	ON
VC/V BYPASS/V	<ul style="list-style-type: none"> ● Ignition switch: ON 	OFF

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

VG33E

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION	
CAL/LD VALUE	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle 18.5 - 26.0%	
		2,500 rpm 18.0 - 21.0%	
ABSOL TH·P/S	<ul style="list-style-type: none"> ● Engine: After warming up ● Ignition switch: ON ● More than -40.0 kpa (-300 mmHg, -11.81 inHg) of vacuum is applied to the throttle opener with a hand vacuum pump. 	Throttle valve: fully closed 0.0%	
	<ul style="list-style-type: none"> ● Engine: After warming up ● Ignition switch: ON (Engine stopped) 	Throttle valve: fully opened Approx. 80%	
MASS AIRFLOW	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle 3.3 - 4.8 g·m/s	
		2,500 rpm 12.0 - 14.9 g·m/s	
MAP/BARO SW/V	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) 	MAP	
	<ul style="list-style-type: none"> ● Engine speed: Idle 	For 5 seconds after starting engine	BARO
		More than 5 seconds after starting engine	MAP
ABSOL PRES/SE	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) 	Approx. 4.4V	
	<ul style="list-style-type: none"> ● Engine speed: Idle 	For 5 seconds after starting engine	Approx. 4.4V
		More than 5 seconds after starting engine	Approx. 1.3V

Major Sensor Reference Graph in Data Monitor Mode

The following are the major sensor reference graphs in "DATA MONITOR" mode.
(Select "HI SPEED" in "DATA MONITOR" with CONSULT-II.)


NEEC0043

THRTL POS SEN, ABSOL TH·P/S, CLSD THL POS

Below is the data for "THRTL POS SEN", "ABSOL TH·P/S" and "CLSD THL POS" when depressing the accelerator pedal with the ignition switch "ON".

NEEC0043S01

The signal of "THRTL POS SEN" and "ABSOL TH·P/S" should rise gradually without any intermittent drop or rise after "CLSD THL POS" is changed from "ON" to "OFF".

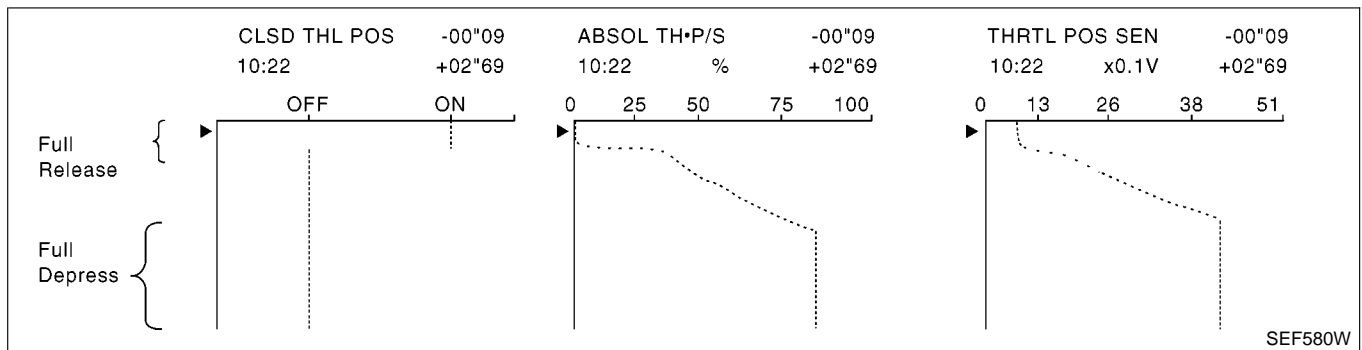

CMPS-RPM (REF), MAS AIR/FL SE, THRTL POS SEN, RR O2 SEN-B1, FR O2 SEN-B1, INJ PULSE-B1

Below is the data for "CMPS-RPM (REF)", "MAS AIR/FL SE", "THRTL POS SEN", "RR O2 SEN-B1", "FR O2 SEN-B1" and "INJ PULSE-B1" when revving engine quickly up to 4,800 rpm under no load after warming up engine sufficiently.


NEEC0043S02

Each value is for reference, the exact value may vary.

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

VG33E

Major Sensor Reference Graph in Data Monitor Mode (Cont'd)

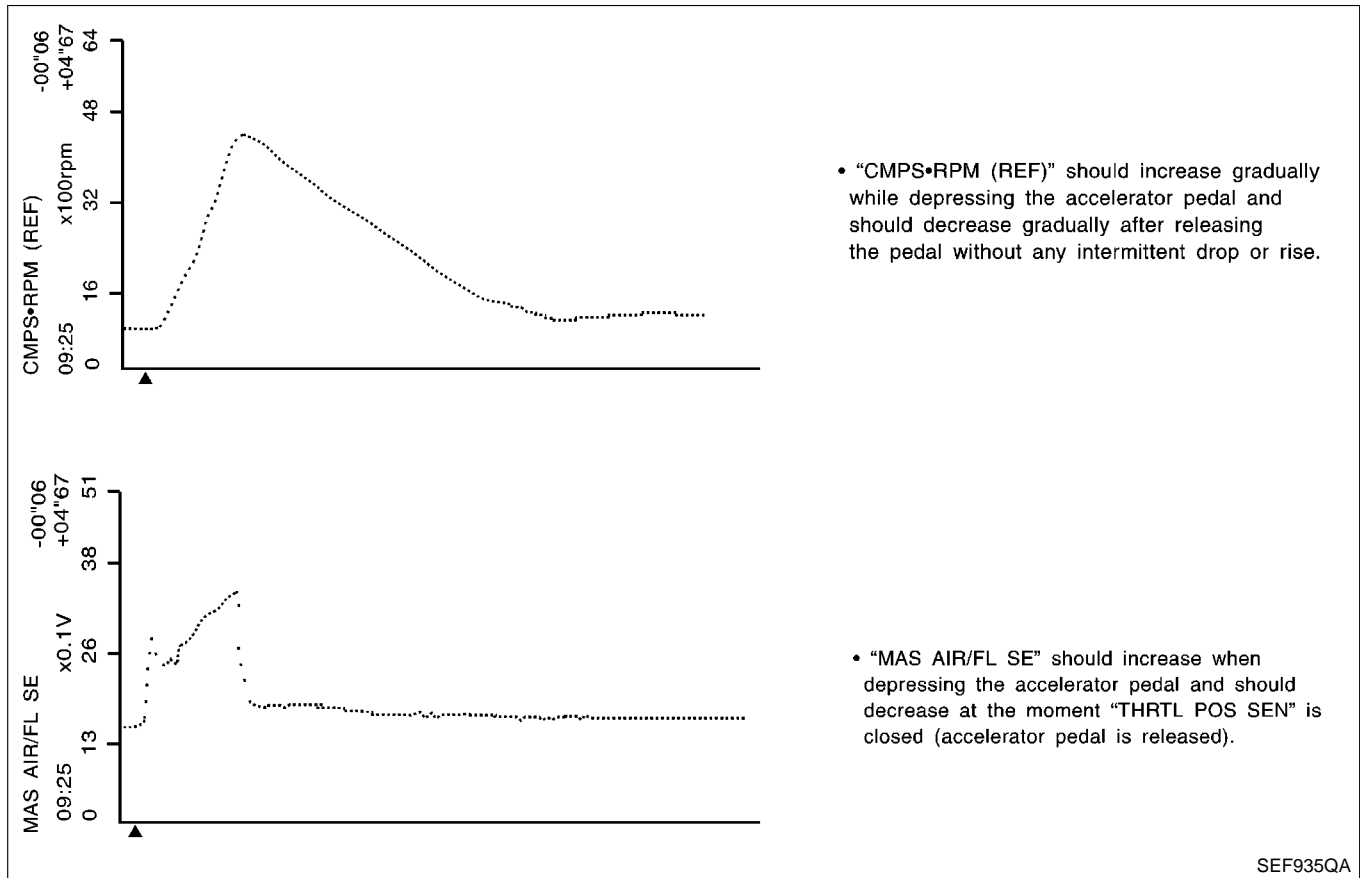


SEF935QA

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

VG33E


Major Sensor Reference Graph in Data Monitor Mode (Cont'd)

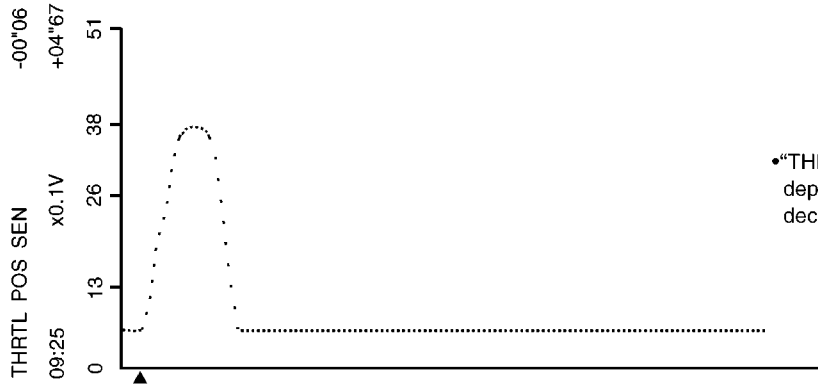

•“THRTL POS SEN” should increase while depressing the accelerator pedel and should decrease while releasing it.


GI
MA
EM
LC

EC

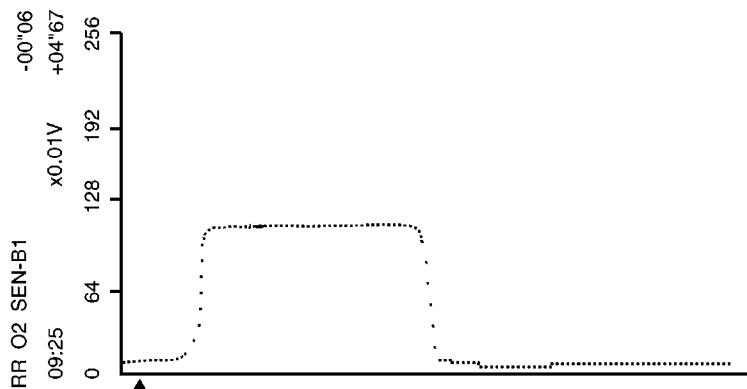


•“RR O2 SEN-B1” may increase immediately after depressing the accelerator pedel and may decrease after releasing the pedal.

FE
CL
MT
AT

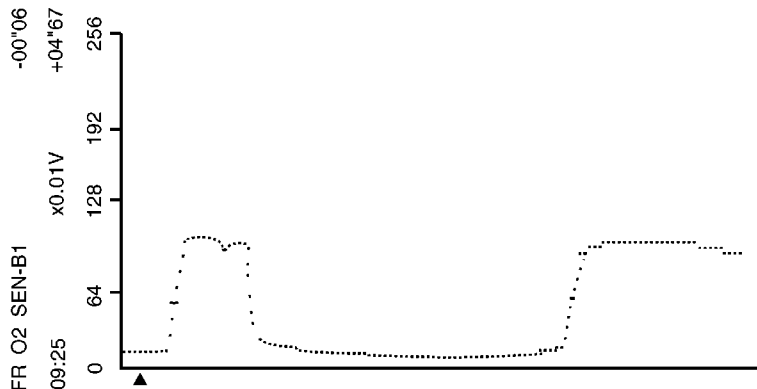

•“FR O2 SEN-B1” may increase immediately after depressing the accelerator pedel and may decrease after releasing the pedal.

TF
PD
AX
SU

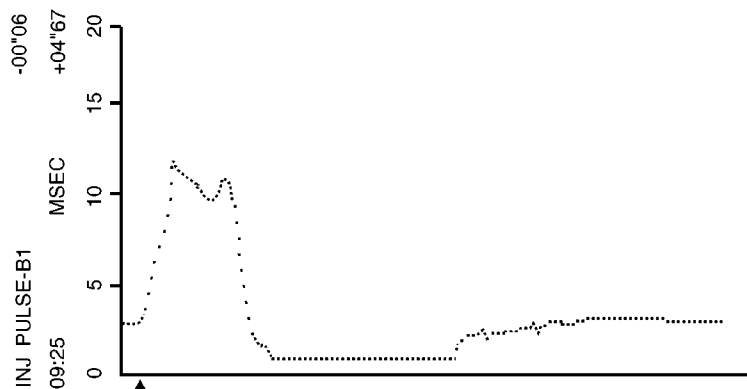

•“INJ PULSE-B1” should increase when depressing the accelerator pedal and should decrease when the pedal is released.


BR
ST
RS

BT
HA
SC

SEF936Q

EL

IDX

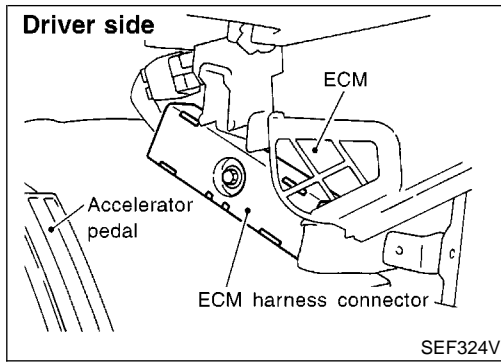

ECM Terminals and Reference Value


NEEC0044

PREPARATION


NEEC0044S01

1. ECM is located behind the instrument lower cover. For this inspection:

- Remove instrument lower cover.

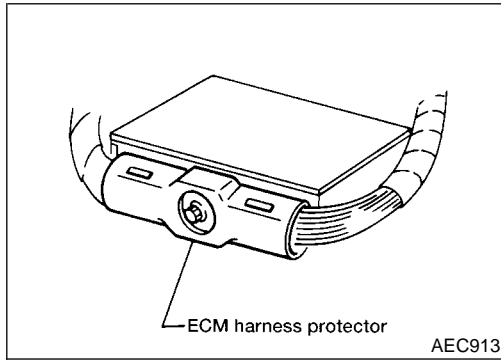

2. Remove ECM harness protector.

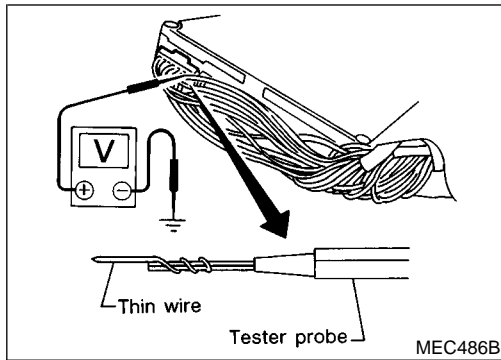


3. Perform all voltage measurements with the connector connected. Extend tester probe as shown to perform tests easily.

- Open harness securing clip to make testing easier.
- Use extreme care not to touch 2 pins at one time.
- Data is for comparison and may not be exact.

ECM HARNESS CONNECTOR TERMINAL LAYOUT

NEEC0044S02

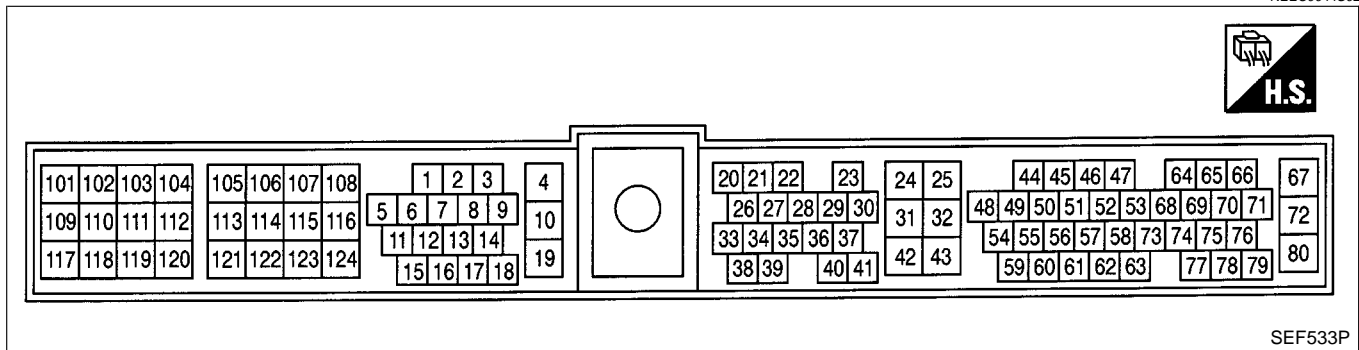

ECM INSPECTION TABLE







NEEC0044S03

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

VG33E

ECM Terminals and Reference Value (Cont'd)

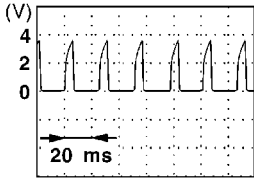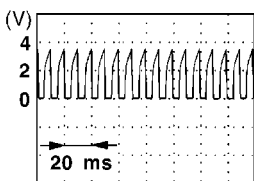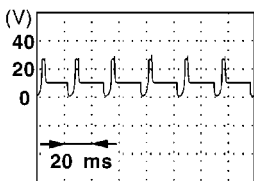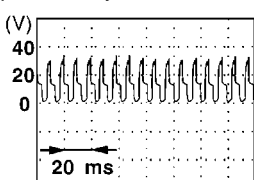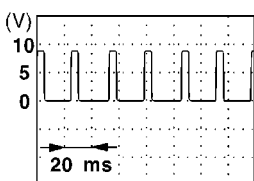
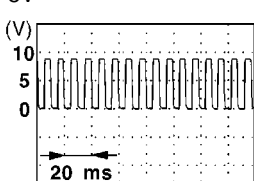
TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
1	PU/W	Ignition signal	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Idle speed 	<p>Approximately 0.7V</p> 
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	<p>1.1 - 1.5V</p> 
2	B	Ignition check	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	<p>Approximately 12V</p> 
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	<p>Approximately 11V</p> 
3	R/L	Tachometer	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	<p>1 - 2V</p> 
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	<p>3 - 5V</p> 

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

VG33E

ECM Terminals and Reference Value (Cont'd)

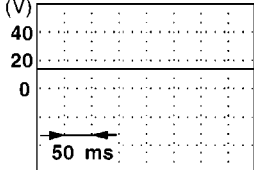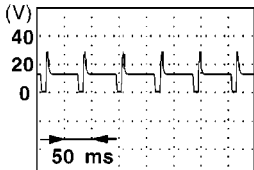TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
4	OR/B	ECM relay (Self shut-off)	[Engine is running] [Ignition switch "OFF"] <ul style="list-style-type: none"> ● For a few seconds after turning ignition switch "OFF" 	0 - 1.5V
			[Ignition switch "OFF"] <ul style="list-style-type: none"> ● A few seconds passed after turning ignition switch "OFF" 	BATTERY VOLTAGE (11 - 14V)
5	R/Y	EVAP canister purge volume control solenoid valve	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V) 
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm (More than 100 seconds after starting engine) 	BATTERY VOLTAGE (11 - 14V) 
7	Y/G	A/T check signal	[Ignition switch "ON"] [Engine is running]	0 - 3.0V
9	B/Y	Ambient air temperature switch	[Engine is running] <ul style="list-style-type: none"> ● Idle speed ● Ambient air temperature is above 25°C (77°F) ● Air conditioner is operating 	0V
			[Engine is running] <ul style="list-style-type: none"> ● Idle speed ● Ambient air temperature is below 19°C (66°F) ● Air conditioner is operating 	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] <ul style="list-style-type: none"> ● Idle speed ● Ambient air temperature is below 19°C (66°F) ● Air conditioner is not operating 	Approximately 5V
10	B/R	ECM ground	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Engine ground
11	W/R	Fuel pump relay	[Ignition switch "ON"] <ul style="list-style-type: none"> ● For 5 seconds after turning ignition switch "ON" [Engine is running]	0 - 1V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● More than 5 seconds after turning ignition switch "ON" 	BATTERY VOLTAGE (11 - 14V)
12	P	Air conditioner relay	[Engine is running] <ul style="list-style-type: none"> ● Both A/C switch and blower switch are "ON"* 	0 - 1V
			[Engine is running] <ul style="list-style-type: none"> ● A/C switch is "OFF" 	BATTERY VOLTAGE (11 - 14V)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

VG33E




ECM Terminals and Reference Value (Cont'd)

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)	
18	R/W	Malfunction indicator lamp	[Ignition switch "ON"]	0 - 1V	GI
			[Engine is running] ● Idle speed	BATTERY VOLTAGE (11 - 14V)	MA
19	B/R	ECM ground	[Engine is running] ● Idle speed	Engine ground	EM
20	L/OR	Start signal	[Ignition switch "ON"]	Approximately 0V	LC
			[Ignition switch "START"]	9 - 12V	LC
21	G/R	Air conditioner switch	[Engine is running] ● Both A/C switch and blower switch are "ON" (Compressor operates)*	Approximately 0V	EC
			[Engine is running] ● A/C switch is "OFF"	BATTERY VOLTAGE (11 - 14V)	FE
22	L/B	Park/neutral position (PNP) switch	[Ignition switch "ON"] ● Gear position is "N" or "P"	Approximately 0V	CL
			[Ignition switch "ON"] ● Except the above gear position	Approximately 5V	MT
23	L	Throttle position sensor	[Engine is running] ● Warm-up condition ● More than -40.0 kpa (-300 mmHg, -11.81 inHg) of vacuum is applied to the throttle opener with a hand vacuum pump. ● Accelerator pedal fully released	0.15 - 0.85V	AT
			[Ignition switch "ON"] ● Accelerator pedal fully depressed	3.5 - 4.7V	TF PD
24	W/L	Ignition switch	[Ignition switch "OFF"]	0V	AX
			[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)	AX
25	B/Y	ECM ground	[Engine is running] ● Idle speed	Engine ground	SU
26	PU/W	A/T signal No. 1	[Ignition switch "ON"] [Engine is running] ● Idle speed	6 - 8V	BR
27	P/B	A/T signal No. 2	[Ignition switch "ON"] [Engine is running] ● Idle speed	6 - 8V	ST
28	BR/W	Throttle position switch (Closed position)	[Engine is running] ● Warm-up condition ● More than -40.0 kpa (-300 mmHg, -11.81 inHg) of vacuum is applied to the throttle opener with a hand vacuum pump. ● Accelerator pedal fully released	BATTERY VOLTAGE (11 - 14V)	RS BT
			[Ignition switch "ON"] ● Accelerator pedal depressed	Approximately 0V	HA

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

VG33E







ECM Terminals and Reference Value (Cont'd)

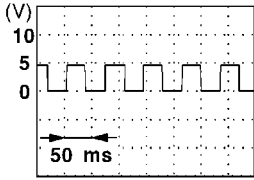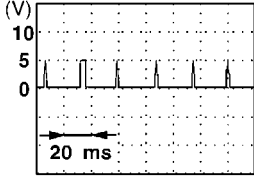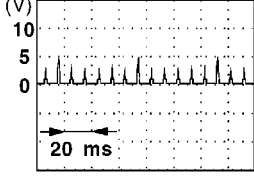TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
29	G/B	Vehicle speed sensor	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Lift up the vehicle. ● In 2nd gear position ● Vehicle speed is 40 km/h (25 MPH) 	2 - 3V 
32	B/Y	ECM ground	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Idle speed 	Engine ground (Probe this terminal with (-) tester probe when measuring)
35	G/R	A/T signal No. 3	[Ignition switch "ON"]	0V
36	LG/R	Cooling fan relay	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Cooling fan is not operating 	BATTERY VOLTAGE (11 - 14V)
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Cooling fan is operating 	0 - 1V
39	GY/R	Power steering oil pressure switch	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Steering wheel is being turned 	Approximately 0V
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Steering wheel is not being turned 	Approximately 5V
42	B/W	Sensors' power supply	[Ignition switch "ON"]	Approximately 5V
43	BR	Sensors' ground	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 0V
44 48	PU PU	Camshaft position sensor (Reference signal)	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Idle speed 	0.3 - 0.5V 
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	0.3 - 0.5V 
45	B/R	Absolute pressure sensor	<p>[Ignition switch "ON"]</p> <ul style="list-style-type: none"> ● Engine is not running 	Approximately 4.4V
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Idle (for 5 seconds after engine start) 	Approximately 1.3V
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Idle (More than 5 seconds after engine start) 	Approximately 1.3V

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

VG33E

ECM Terminals and Reference Value (Cont'd)

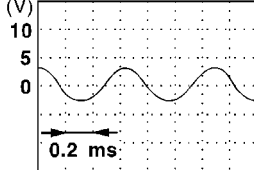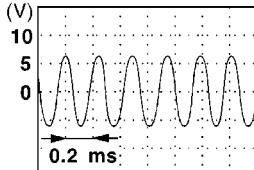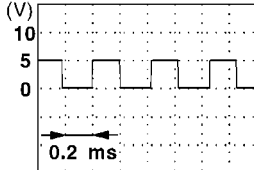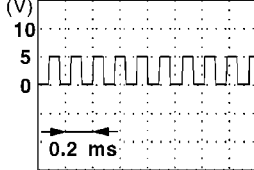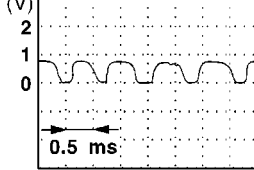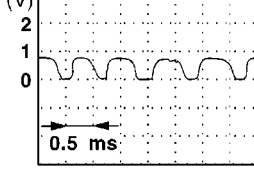TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)	
47	L	Crankshaft position sensor (OBD)	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	<p>1 - 2V (AC range)</p> 	GI MA EM LC
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	<p>3 - 4V (AC range)</p> 	EC FE CL MT
49	LG	Camshaft position sen- sor (Position signal)	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	<p>Approximately 2.5V</p> 	AT TF PD
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	<p>Approximately 2.5V</p> 	AX SU BR
50	B	Front heated oxygen sensor RH	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm 	<p>0 - Approximately 1.0V</p> 	ST RS BT
51	G	Front heated oxygen sensor LH	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm 	<p>0 - Approximately 1.0V</p> 	HA SC EL

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

VG33E

ECM Terminals and Reference Value (Cont'd)

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
54	R	Mass air flow sensor	[Engine is running] ● Warm-up condition ● Idle speed	1.0 - 1.7V
			[Engine is running] ● Warm-up condition ● Engine speed is 2,500 rpm	1.7 - 2.3V
55	G	Mass air flow sensor ground	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V
56	OR	Rear heated oxygen sensor RH	[Engine is running] ● Warm-up condition ● Engine speed is 2,000 rpm	0 - Approximately 1.0V
57	Y	Rear heated oxygen sensor LH	[Engine is running] ● Warm-up condition ● Engine speed is 2,000 rpm	0 - Approximately 1.0V
59	LG/R	Engine coolant temperature sensor	[Engine is running]	Approximately 0 - 4.8V Output voltage varies with engine coolant temperature
60	Y/B	Fuel tank temperature sensor	[Engine is running]	Approximately 0 - 4.8V Output voltage varies with fuel temperature
61	PU/R	Intake air temperature sensor	[Engine is running]	Approximately 0 - 4.8V Output voltage varies with intake air temperature.
62	Y	EVAP control system pressure sensor	[Ignition switch "ON"]	Approximately 3.4V
**63	G/OR	EGR temperature sensor	[Ignition switch "ON"]	Less than 4.5V
			[Engine is running] ● Warm-up condition ● EGR system is operating	0 - 1.5V
64	W	Knock sensor	[Engine is running] ● Idle speed	Approximately 2.5V
67	B/P	Power supply for ECM	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
69	LG/R	Data link connector for GST	[Engine is running] ● Idle speed (GST is disconnected)	6 - 10V
72	B/P	Power supply for ECM	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
75	Y/R	Data link connector for CONSULT-II	[Engine is running]	0 - 4V
76	GY/L		● Idle speed (Connect CONSULT-II and turned on.)	3 - 9V
80	SB	Power supply (Back-up)	[Ignition switch "OFF"]	BATTERY VOLTAGE (11 - 14V)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

VG33E

ECM Terminals and Reference Value (Cont'd)

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
101	OR/L	IACV-AAC valve	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	<p>8 - 11V</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 3,000 rpm 	<p>7 - 10V</p>
102 104 106 109 111 113	W/B W/R W/G W/L W/PU W	Injector No. 1 Injector No. 3 Injector No. 5 Injector No. 2 Injector No. 4 Injector No. 6	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	<p>BATTERY VOLTAGE (11 - 14V)</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm 	<p>BATTERY VOLTAGE (11 - 14V)</p>
**103	G/W	EGRC-solenoid valve	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	BATTERY VOLTAGE (11 - 14V)
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is revving from idle up to 3,000 rpm quickly 	0 - 1.5V
108	R/G	EVAP canister vent control valve	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
116	B/R	ECM ground	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Idle speed 	Engine ground
117	B/P	Current return	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V)

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

VG33E

ECM Terminals and Reference Value (Cont'd)

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
118	Y/B	MAP/BARO switch solenoid valve	[Ignition switch "ON"] <ul style="list-style-type: none"> ● Engine is not running ● For 5 seconds after ignition switch is turned "ON" [Engine is running] <ul style="list-style-type: none"> ● Idle (for 5 seconds after engine start) 	0 - 1V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Engine is not running ● More than 5 seconds after ignition switch is turned "ON" [Engine is running] <ul style="list-style-type: none"> ● Idle (More than 5 seconds after engine start) 	BATTERY VOLTAGE (11 - 14V)
119	BR/Y	Front heated oxygen sensor heater RH	[Engine is running] <ul style="list-style-type: none"> ● Engine speed is below 3,200 rpm 	Approximately 0.4V
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is above 3,200 rpm 	BATTERY VOLTAGE (11 - 14V)
120	P/B	Vacuum cut valve bypass valve	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
121	BR	Front heated oxygen sensor heater LH	[Engine is running] <ul style="list-style-type: none"> ● Engine speed is below 3,200 rpm 	Approximately 0.4V
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is above 3,200 rpm 	BATTERY VOLTAGE (11 - 14V)
122	R/B	Rear heated oxygen sensor heater RH	[Engine is running] <ul style="list-style-type: none"> ● Engine speed is below 3,200 rpm ● After driving for 2 minutes at a speed of 70 km/h (43 MPH) or more. 	Approximately 0.4V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Engine stopped [Engine is running] <ul style="list-style-type: none"> ● Engine speed is above 3,200 rpm 	BATTERY VOLTAGE (11 - 14V)
123	R/Y	Rear heated oxygen sensor heater LH	[Engine is running] <ul style="list-style-type: none"> ● Engine speed is below 3,200 rpm ● After driving for 2 minutes at a speed of 70 km/h (43 MPH) or more. 	Approximately 0.4V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Engine stopped [Engine is running] <ul style="list-style-type: none"> ● Engine speed is above 3,200 rpm 	BATTERY VOLTAGE (11 - 14V)
124	B/R	ECM ground	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Engine ground

*: Any mode except "OFF", ambient air temperature is above 25°C (77°F).

**: If equipped with EGR system.

Description

NEEC0045

Intermittent incidents (I/I) may occur. In many cases, the problem resolves itself (the part or circuit function returns to normal without intervention). It is important to realize that the symptoms described in the customer's complaint often do not recur on (1st trip) DTC visits. Realize also that the most frequent cause of I/I occurrences is poor electrical connections. Because of this, the conditions under which the incident occurred may not be clear. Therefore, circuit checks made as part of the standard diagnostic procedure may not indicate the specific problem area.

COMMON I/I REPORT SITUATIONS

NEEC0045S01

STEP in Work Flow	Situation
II	The CONSULT-II is used. The SELF-DIAG RESULTS screen shows time data other than "0" or "[1t]".
III	The symptom described by the customer does not recur.
IV	(1st trip) DTC does not appear during the DTC Confirmation Procedure.
VI	The Diagnostic Procedure for PXXXX does not indicate the problem area.

Diagnostic Procedure

NEEC0046

1	INSPECTION START	
Erase (1st trip) DTCs. Refer to "HOW TO ERASE EMISSION — RELATED INFORMATION", EC-651.		
▶		GO TO 2.

2	CHECK GROUND TERMINALS	
Check ground terminals for corroding or loose connection. Refer to "Circuit Inspection", "GROUND INSPECTION", GI-30 .		
OK or NG		
OK ▶		GO TO 3.
NG ▶		Repair or replace.




3	SEARCH FOR ELECTRICAL INCIDENT	
Perform "Incident Simulation Tests", GI-25 .		
OK or NG		
OK ▶		GO TO 4.
NG ▶		Repair or replace.

4	CHECK CONNECTOR TERMINALS	
Refer to "How to Check Enlarged Contact Spring of Terminal", GI-22 .		
OK or NG		
OK ▶		INSPECTION END
NG ▶		Repair or replace connector.

Main Power Supply and Ground Circuit WIRING DIAGRAM

NEEC0047

EC-MAIN-01

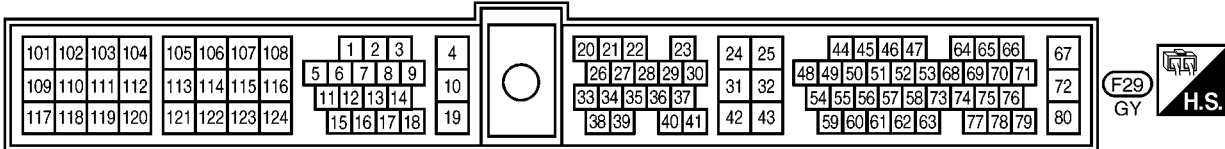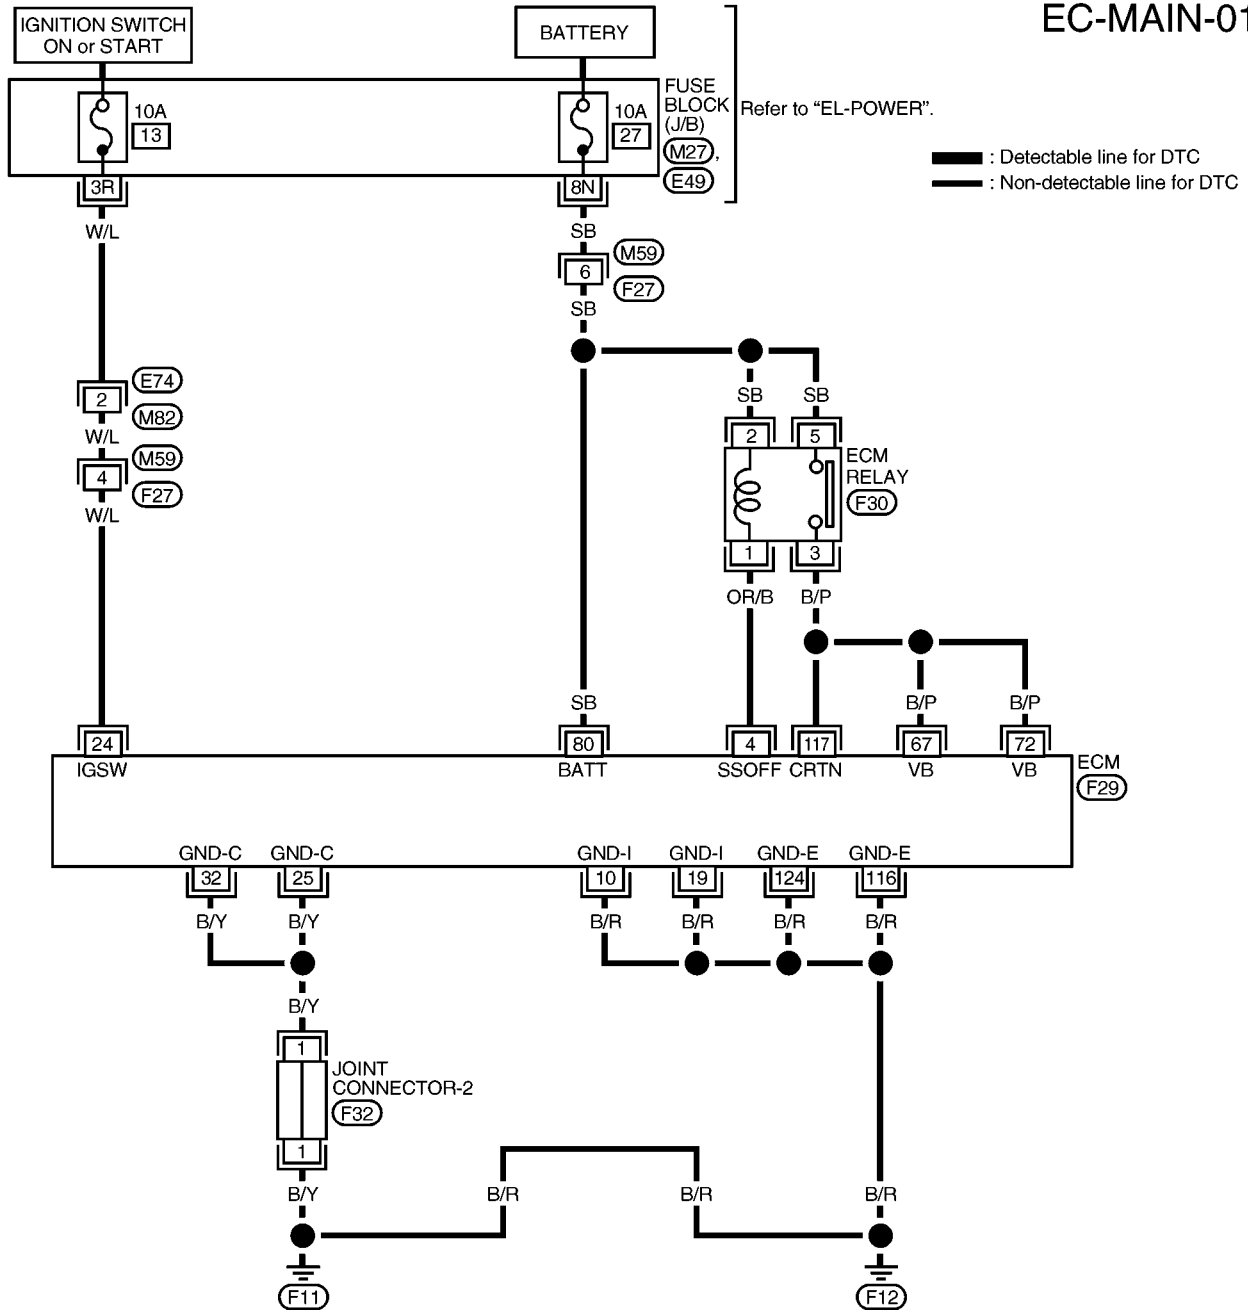

TROUBLE DIAGNOSIS FOR POWER SUPPLY

VG33E

Main Power Supply and Ground Circuit (Cont'd)

ECM TERMINALS AND REFERENCE VALUE

NEEC0048


Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
4	OR/B	ECM relay (Self-shutoff)	[Engine is running] [Ignition switch "OFF"] ● For a few seconds after turning ignition switch "OFF"	0 - 1.5V
			[Ignition switch "OFF"] ● A few seconds passed after turning ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
10	B/R	ECM ground	[Engine is running] ● Idle speed	Engine ground
19	B/R	ECM ground	[Engine is running] ● Idle speed	Engine ground
24	W/L	Ignition switch	[Ignition switch "OFF"]	0V
			[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
25	B/Y	ECM ground	[Engine is running] ● Idle speed	Engine ground
32	B/Y	ECM ground	[Engine is running] ● Idle speed	Engine ground (Probe this terminal with (-) tester probe when measuring)
67	B/P	Power supply for ECM	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
72	B/P			
80	SB	Power supply (Back-up)	[Ignition switch "OFF"]	BATTERY VOLTAGE (11 - 14V)
116	B/R	ECM ground	[Engine is running] ● Idle speed	Engine ground
117	B/P	Current return	[Engine is running] ● Idle speed	BATTERY VOLTAGE (11 - 14V)
124	B/R	ECM ground	[Engine is running] ● Idle speed	Engine ground

DIAGNOSTIC PROCEDURE

NEEC0049

1	INSPECTION START	
Start engine. Is engine running?		
Yes or No		
Yes	▶	GO TO 6.
No	▶	GO TO 2.

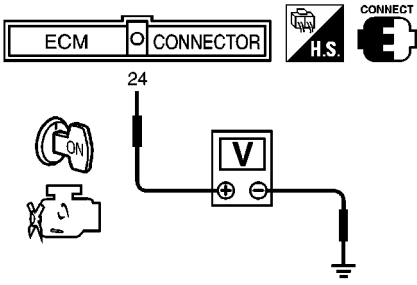
2	CHECK ECM POWER SUPPLY CIRCUIT-I
<p>1. Turn ignition switch "OFF" and then "ON".</p> <p>2. Check voltage between ECM terminal 24 and ground with CONSULT-II or tester.</p>	
	
<p>Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 4.
NG	▶ GO TO 3.

SEF674U


3	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E74, M82 ● Harness connectors M59, F27 ● Fuse block (J/B) connector E49 ● 10A fuse ● Harness for open or short between ECM and fuse 	
▶	Repair harness or connectors.

4	CHECK ECM GROUND CIRCUIT-I FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect ECM harness connector.</p> <p>3. Check harness continuity between ECM terminals 10, 19, 25, 32, 116, 124 and engine ground. Refer to WIRING DIAGRAM.</p> <p style="color: blue;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p>	
OK or NG	
OK	▶ GO TO 15.
NG	▶ GO TO 5.



5	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Joint connector-2 ● Harness for open or short between ECM and engine ground 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

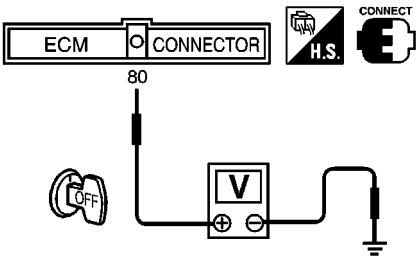6	CHECK ECM POWER SUPPLY CIRCUIT-II	
<p>1. Stop engine. 2. Check voltage between ECM terminal 80 and ground with CONSULT-II or tester.</p>		
		
<p>Voltage: Battery voltage</p> <p style="text-align: right;">SEF678U</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	GO TO 7.

7	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M59, F27 ● Fuse block (J/B) connector M27 ● 10A fuse ● Harness for open or short between ECM and fuse 		
▶ Repair harness or connectors.		

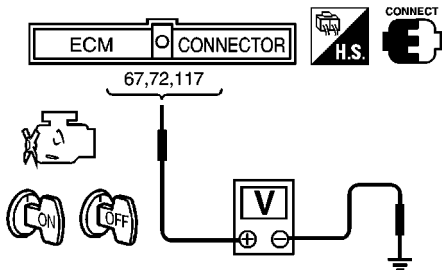8	CHECK ECM POWER SUPPLY CIRCUIT-III	
<p>1. Turn ignition switch "ON" and then "OFF". 2. Check voltage between ECM terminals 67, 72, 117 and ground with CONSULT-II or tester.</p>		
		
<p>Voltage: After turning ignition switch "OFF", battery voltage will exist for a few seconds, then drop to approximately 0V.</p> <p style="text-align: right;">SEF679U</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 14.
NG (Battery voltage does not exist.)	▶	GO TO 9.
NG (Battery voltage exists for more than a few seconds.)	▶	GO TO 13.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

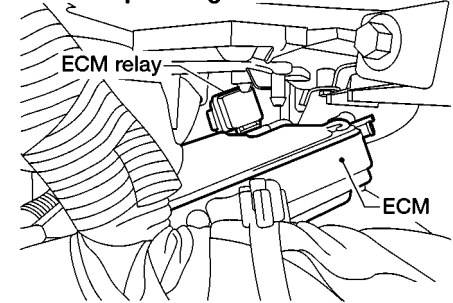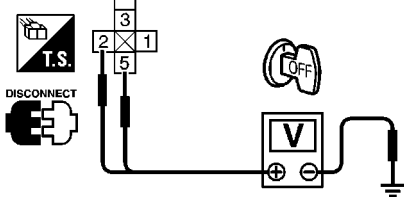9	CHECK ECM POWER SUPPLY CIRCUIT-IV						
<p>1. Disconnect ECM relay.</p> <div style="text-align: center;"> <p>View from passenger side</p>  </div>							
<p>2. Check voltage between terminals 2, 5 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p style="color: blue;">Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>							
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 11.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 10.</td> </tr> </table>		OK	▶	GO TO 11.	NG	▶	GO TO 10.
OK	▶	GO TO 11.					
NG	▶	GO TO 10.					

AEC927A

SEF625W

10	DETECT MALFUNCTIONING PART			
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness for open or short between ECM relay and harness connector F27 				
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;"></td> <td style="width: 5%; text-align: center;">▶</td> <td>Repair open circuit or short to ground or short to power in harness or connectors.</td> </tr> </table>			▶	Repair open circuit or short to ground or short to power in harness or connectors.
	▶	Repair open circuit or short to ground or short to power in harness or connectors.		


11	CHECK ECM OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT						
<p>1. Disconnect ECM harness connector.</p> <p>2. Check harness continuity between ECM terminal 4 and ECM relay terminal 1. Refer to WIRING DIAGRAM. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>							
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 12.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Repair open circuit or short to ground or short to power in harness or connectors.</td> </tr> </table>		OK	▶	GO TO 12.	NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.
OK	▶	GO TO 12.					
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.					

12	CHECK HARNESS CONTINUITY BETWEEN ECM RELAY AND ECM FOR OPEN AND SHORT						
<p>1. Check harness continuity between ECM terminals 67, 72, 117 and ECM relay terminal 3. Refer to WIRING DIAGRAM. Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>							
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 13.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Repair open circuit or short to ground or short to power in harness or connectors.</td> </tr> </table>		OK	▶	GO TO 13.	NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.
OK	▶	GO TO 13.					
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.					

TROUBLE DIAGNOSIS FOR POWER SUPPLY

VG33E

Main Power Supply and Ground Circuit (Cont'd)

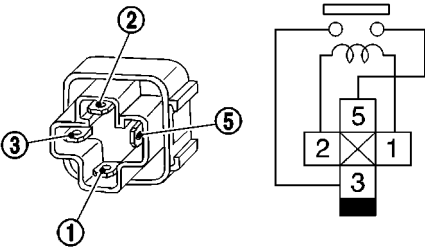
13	CHECK ECM RELAY	
<ol style="list-style-type: none"> 1. Apply 12V direct current between relay terminals 1 and 2. 2. Check continuity between relay terminals 3 and 5. 		
		
<p>12V (1 - 2) applied: Continuity exists. No voltage applied: No continuity</p> <p style="text-align: right;">SEF039W</p>		
OK or NG		
OK	▶	GO TO 14.
NG	▶	Replace ECM relay.

14	CHECK ECM GROUND CIRCUIT-II FOR OPEN AND SHORT	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminals 10, 19, 25, 32, 116, 124 and engine ground. Refer to WIRING DIAGRAM. Continuity should exist. 4. Also check harness for short to ground and short to power. 		
OK or NG		
OK	▶	GO TO 15.
NG	▶	GO TO 5.

15	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.		
	▶	INSPECTION END

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Component Description

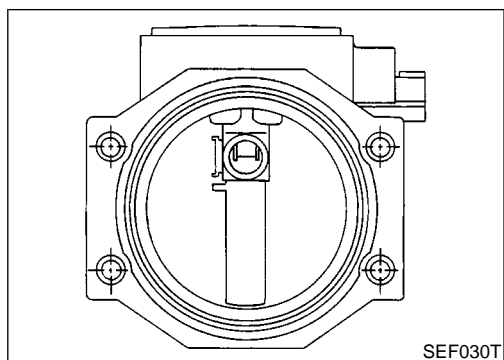

Component Description

NEEC0050
The mass air flow sensor is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. It consists of a hot wire that is supplied with electric current from the ECM. The temperature of the hot wire is controlled by the ECM a certain amount. The heat generated by the hot wire is reduced as the intake air flows around it. The more air, the greater the heat loss.

Therefore, the ECM must supply more electric current to maintain the temperature of the hot wire as air flow increases. The ECM detects the air flow by means of this current change.

CONSULT-II Reference Value in Data Monitor Mode

NEEC0051

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
MAS AIR/FL SE	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle	1.0 - 1.7V
		2,500 rpm	1.7 - 2.3V
CAL/LD VALUE	ditto	Idle	18.5 - 26.0%
		2,500 rpm	18.0 - 21.0%
MASS AIRFLOW	ditto	Idle	3.3 - 4.8 g·m/s
		2,500 rpm	12.0 - 14.9 g·m/s

ECM Terminals and Reference Value

NEEC0052

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
54	R	Mass air flow sensor	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	1.0 - 1.7V
			[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,500 rpm 	1.7 - 2.3V
55	G	Mass air flow sensor ground	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 0V

On Board Diagnosis Logic

NEEC0053

Malfunction is detected when
 (Malfunction A) an excessively high voltage from the sensor is sent to ECM when engine is not running,
 (Malfunction B) an excessively low voltage from the sensor is sent to ECM when engine is running,
 (Malfunction C) a high voltage from the sensor is sent to ECM under light load driving condition,
 (Malfunction D) a low voltage from the sensor is sent to ECM under heavy load driving condition.

POSSIBLE CAUSE

Malfunction A or C

NEEC0053S01

NEEC0053S0101

- Harness or connectors
(The sensor circuit is open or shorted.)
- Mass air flow sensor

GI

MA

Malfunction B or D

NEEC0053S0102

- Harness or connectors
(The sensor circuit is open or shorted.)
- Intake air leaks
- Mass air flow sensor

EM

LC

FAIL-SAFE MODE

NEEC0053S02

When the malfunction B is detected, the ECM enters fail-safe mode and the MIL lights up.

EC

Detected items	Engine operating condition in fail-safe mode
Mass air flow sensor circuit	Engine speed will not rise more than 2,400 rpm due to the fuel cut.

FE

CL

MT

DTC Confirmation Procedure

NEEC0054

Perform "PROCEDURE FOR MALFUNCTION A" first.
If the 1st trip DTC cannot be confirmed, perform "PROCEDURE FOR MALFUNCTION B".
If there is no problem on "PROCEDURE FOR MALFUNCTION B", perform "PROCEDURE FOR MALFUNCTION C".
If there is no problem on "PROCEDURE FOR MALFUNCTION C", perform "PROCEDURE FOR MALFUNCTION D".

AT

TF

PD

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.


AX

SU

BR

ST

RS

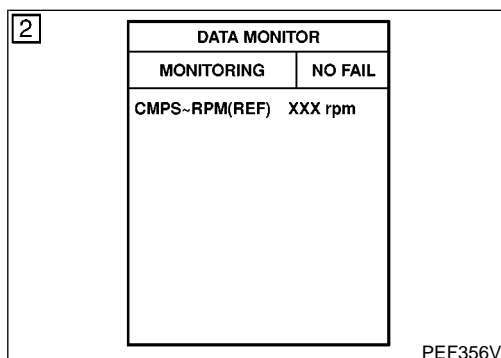

PROCEDURE FOR MALFUNCTION A

NEEC0054S01

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 6 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-729.

BT

HA

SC

With GST

Follow the procedure "With CONSULT-II".

EL

IDX

3	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF) XXX rpm	

PEF357V

PROCEDURE FOR MALFUNCTION B

NEEC0054S02

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait 5 seconds at most.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-729.

With GST

Follow the procedure "With CONSULT-II".

3	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF) XXX rpm COOLAN TEMP/S XXX °C	

PEF361V

PROCEDURE FOR MALFUNCTION C

NEEC0054S03

NOTE:

If engine will not start or stops soon, wait at least 10 seconds with engine stopped (Ignition switch "ON") instead of running engine at idle speed.


With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and warm it up to normal operating temperature.
- 4) Run engine for at least 10 seconds at idle speed.
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-729.

With GST

Follow the procedure "With CONSULT-II".

NEEC0054S04

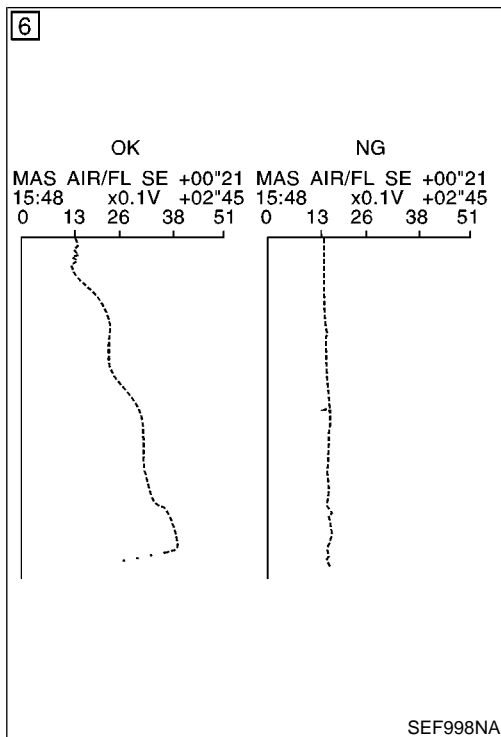


7

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
VHCL SPEED SE	XXX km/h
THRTL POS SEN	XXX V

PEF362V

CALC LOAD	20%
COOLANT TEMP	95°C
SHORT FT #1	2%
LONG FT #1	0%
SHORT FT #2	4%
LONG FT #2	0%
ENGINE SPD	2637RPM
VEHICLE SPD	0MPH
IGN ADVANCE	41.0°
INTAKE AIR	41°C
MAF	14.1gm/sec
THROTTLE POS	3%

SEF534P

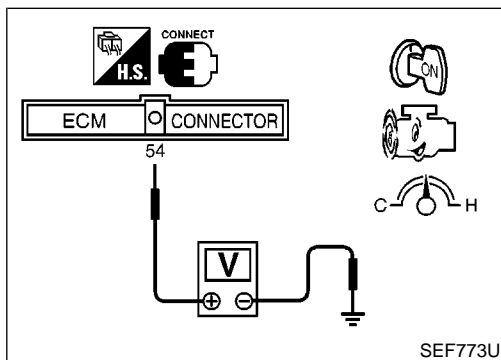

PROCEDURE FOR MALFUNCTION D

CAUTION:

Always drive vehicle at a safe speed.

Ⓜ With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Start engine and warm it up to normal operating temperature. **If engine cannot be started, go to "Diagnostic Procedure", EC-729.**
- 3) Select "DATA MONITOR" mode with CONSULT-II.
- 4) Check the voltage of MAS AIR/FL SE with "DATA MONITOR".
- 5) Increases engine speed to about 4,000 rpm.
- 6) Monitor the linear voltage rise in response to engine speed increases.
If NG, go to "Diagnostic Procedure", EC-729.
If OK, go to following step.
- 7) Maintain the following conditions for at least 10 consecutive seconds.

CMPS-RPM (REF)	More than 2,000 rpm
THRTL POS SEN	More than 3V
Selector lever	Suitable position
Driving location	Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

- 8) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-729.

Overall Function Check

PROCEDURE FOR MALFUNCTION D

Use this procedure to check the overall function of the mass air flow sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Ⓜ With GST

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "MODE 1" with GST.
- 3) Check the mass air flow sensor signal with "MODE 1".
- 4) Check for linear mass air flow sensor signal value rise in response to increases to about 4,000 rpm in engine speed.
- 5) If NG, go to "Diagnostic Procedure", EC-729.




Ⓜ No Tools

- 1) Start engine and warm it up to normal operating temperature.
- 2) Check the voltage between ECM terminal 54 (Mass air flow sensor signal) and ground.
- 3) Check for linear voltage rise in response to increases to about 4,000 rpm in engine speed.
- 4) If NG, go to "Diagnostic Procedure", EC-729.

Wiring Diagram

NEEC0056

EC-MAFS-01

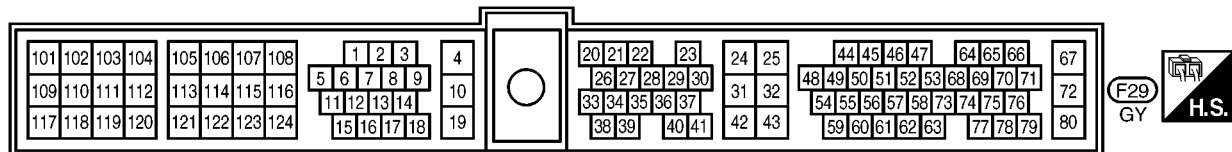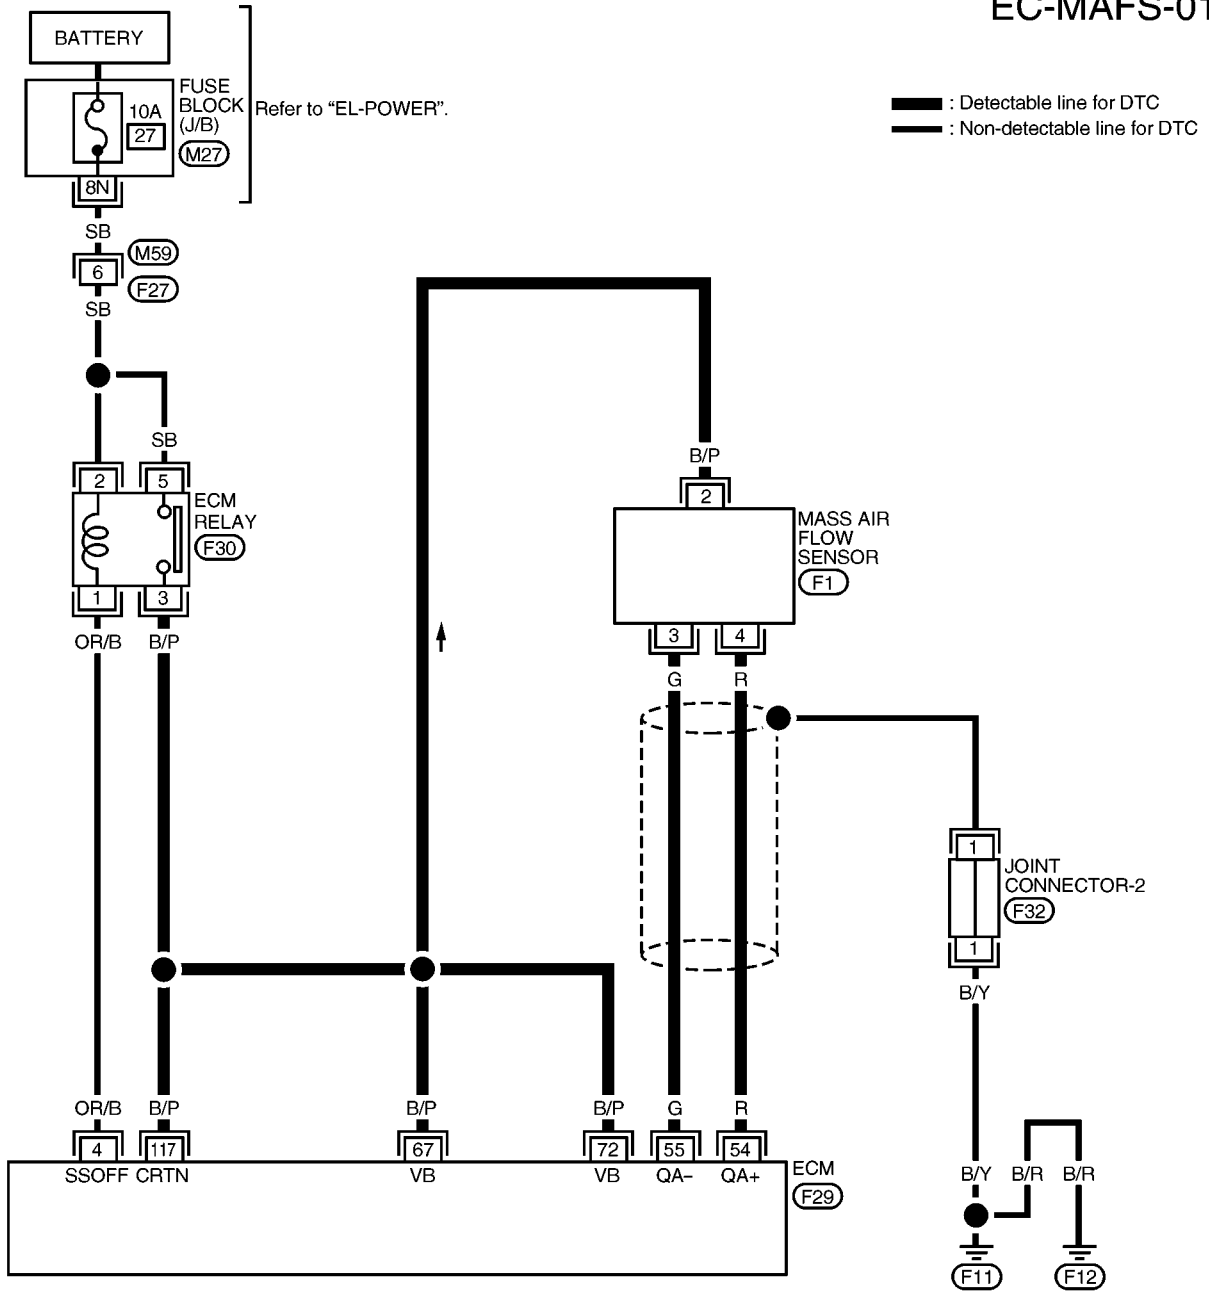


Diagnostic Procedure



NEEC0057

1	INSPECTION START							
Which malfunction (A, B, C or D) is duplicated?								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">MALFUNCTION</th> <th style="width: 50%;">Type</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">A and/or C</td> <td style="text-align: center;">I</td> </tr> <tr> <td style="text-align: center;">B and/or D</td> <td style="text-align: center;">II</td> </tr> </tbody> </table>			MALFUNCTION	Type	A and/or C	I	B and/or D	II
MALFUNCTION	Type							
A and/or C	I							
B and/or D	II							
MTBL0063								
Type I or Type II								
Type I	▶	GO TO 3.						
Type II	▶	GO TO 2.						

2	CHECK INTAKE SYSTEM	
Check the following for connection.		
<ul style="list-style-type: none"> ● Air duct ● Vacuum hoses ● Intake air passage between air duct to intake manifold collector 		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Reconnect the parts.

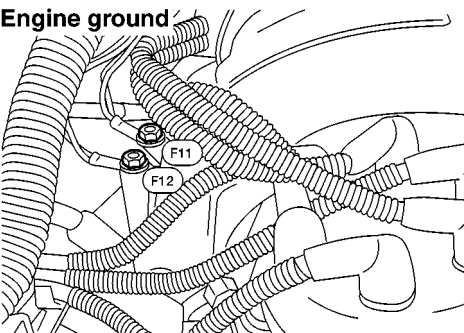3	RETIGHTEN GROUND SCREWS	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground. 		
 <p style="text-align: center;">Engine ground</p>		
AEC640A		
		▶ GO TO 4.

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

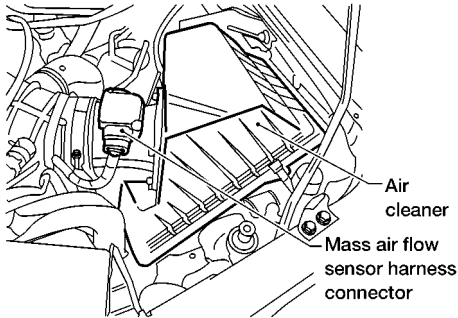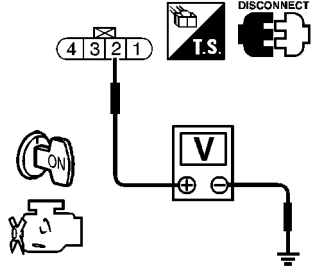4	CHECK MAFS POWER SUPPLY CIRCUIT
<p>1. Disconnect mass air flow sensor harness connector.</p> <div style="text-align: center;">  <p style="margin-left: 400px;">Air cleaner</p> <p style="margin-left: 400px;">Mass air flow sensor harness connector</p> </div>	
<p>2. Turn ignition switch "ON".</p> <p>3. Check voltage between terminal 2 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p style="color: blue; font-weight: bold;">Voltage: Battery voltage</p> <p style="text-align: center; font-weight: bold;">OK or NG</p>	
OK	▶ GO TO 6.
NG	▶ GO TO 5.

AEC641A

SEF627W

5	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness for open or short between ECM relay and mass air flow sensor ● Harness for open or short between mass air flow sensor and ECM 	
▶	Repair harness or connectors.

6	CHECK MAFS GROUND CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect ECM harness connector.</p> <p>3. Check harness continuity between MAFS terminal 3 and ECM terminal 55. Refer to Wiring Diagram.</p> <p style="color: blue; font-weight: bold;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center; font-weight: bold;">OK or NG</p>	
OK	▶ GO TO 7.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0100 MASS AIR FLOW SENSOR (MAFS)

VG33E

Diagnostic Procedure (Cont'd)

7	CHECK MAFS INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
	1. Check harness continuity between MAFS terminal 4 and ECM terminal 54. Refer to Wiring Diagram. Continuity should exist.	
	2. Also check harness for short to ground and short to power.	
	OK or NG	
OK	▶	GO TO 8.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

8	CHECK MASS AIR FLOW SENSOR											
	1. Reconnect harness connectors disconnected. 2. Start engine and warm it up to normal operating temperature. 3. Check voltage between ECM terminal 54 (Mass air flow sensor signal) and ground.											
	SEF747U											
	<table border="1"> <thead> <tr> <th>Condition</th> <th>Voltage V</th> </tr> </thead> <tbody> <tr> <td>Ignition switch "ON" (Engine stopped.)</td> <td>Less than 1.0</td> </tr> <tr> <td>Idle (Engine is warmed-up to normal operating temperature.)</td> <td>1.0 - 1.7</td> </tr> <tr> <td>2,500 rpm (Engine is warmed-up to normal operating temperature.)</td> <td>1.7 - 2.3</td> </tr> <tr> <td>Idle to about 4,000 rpm*</td> <td>1.0 - 1.7 to Approx. 4.0</td> </tr> </tbody> </table>		Condition	Voltage V	Ignition switch "ON" (Engine stopped.)	Less than 1.0	Idle (Engine is warmed-up to normal operating temperature.)	1.0 - 1.7	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.7 - 2.3	Idle to about 4,000 rpm*	1.0 - 1.7 to Approx. 4.0
Condition	Voltage V											
Ignition switch "ON" (Engine stopped.)	Less than 1.0											
Idle (Engine is warmed-up to normal operating temperature.)	1.0 - 1.7											
2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.7 - 2.3											
Idle to about 4,000 rpm*	1.0 - 1.7 to Approx. 4.0											
	MTBL0227											
	4. If the voltage is out of specification, disconnect mass air flow sensor harness connector and connect it again. Then repeat above check.											
	5. If NG, remove mass air flow sensor from air duct. Check hot wire for damage or dust.											
	SEF030T											
	OK or NG											
OK	▶	GO TO 9.										
NG	▶	Replace mass air flow sensor.										

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX



DTC P0100 MASS AIR FLOW SENSOR (MAFS)

VG33E

Diagnostic Procedure (Cont'd)

9	CHECK MAFS SHIELD CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect joint connector-2.</p> <p>3. Check the following.</p> <ul style="list-style-type: none">● Continuity between joint connector terminal 1 and ground Refer to Wiring Diagram.● Joint connector (Refer to "HARNESS LAYOUT", <i>EL-239</i>.) Continuity should exist. <p>4. Also check harness for short to ground and short to power.</p> <p>5. Then reconnect joint connector-2.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 10.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

10	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
	▶ INSPECTION END

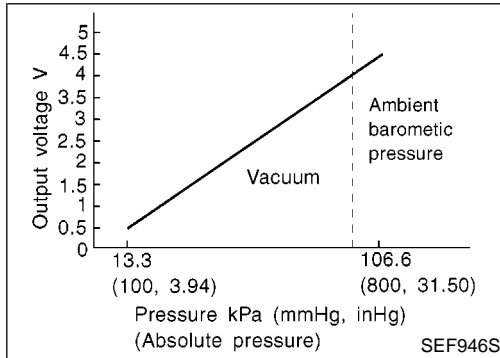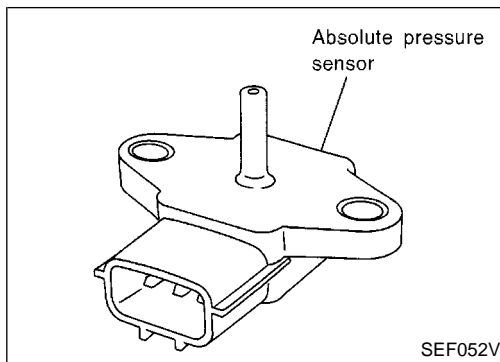

Component Description

The absolute pressure sensor is connected to the MAP/BARO switch solenoid valve by a hose. The sensor detects ambient barometric pressure and intake manifold absolute pressure and sends the voltage signal to the ECM. As the pressure increases, the voltage rises.

On Board Diagnosis Logic

Malfunction is detected when
 (Malfunction A) an excessively low or high voltage from the sensor is sent to ECM,
 (Malfunction B) a high voltage from the sensor is sent to ECM under light load driving conditions,
 (Malfunction C) a low voltage from the sensor is sent to ECM under heavy load driving conditions.

POSSIBLE CAUSE

Malfunction A

- Harness or connectors (Absolute pressure sensor circuit is open or shorted.)
- Absolute pressure sensor

Malfunction B

- Hoses (Hoses between the intake manifold and absolute pressure sensor are disconnected or clogged.)
- Intake air leaks
- MAP/BARO switch solenoid valve
- Absolute pressure sensor

Malfunction C

- Absolute pressure sensor

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC Confirmation Procedure

Perform "PROCEDURE FOR MALFUNCTION A" first. If the 1st trip DTC cannot be confirmed, perform "PROCEDURE FOR MALFUNCTION B".

If the 1st trip DTC is not confirmed on "PROCEDURE FOR MALFUNCTION B", perform "PROCEDURE FOR MALFUNCTION C".

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

3	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th style="width: 50%;">MONITORING</th> <th style="width: 50%;">NO FAIL</th> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> </table>	DATA MONITOR		MONITORING	NO FAIL	COOLAN TEMP/S	XXX °C
DATA MONITOR							
MONITORING	NO FAIL						
COOLAN TEMP/S	XXX °C						

PEF002P

PROCEDURE FOR MALFUNCTION A

NEEC0060S01

Ⓟ With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 6 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-737.

Ⓞ With GST

Follow the procedure "With CONSULT-II".

4	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th style="width: 50%;">MONITORING</th> <th style="width: 50%;">NO FAIL</th> </tr> <tr> <td>CMPS-RPM(REF)</td> <td>XXX rpm</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> </table>	DATA MONITOR		MONITORING	NO FAIL	CMPS-RPM(REF)	XXX rpm	COOLAN TEMP/S	XXX °C
DATA MONITOR									
MONITORING	NO FAIL								
CMPS-RPM(REF)	XXX rpm								
COOLAN TEMP/S	XXX °C								

PEF361V

PROCEDURE FOR MALFUNCTION B

NEEC0060S02

Ⓟ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 4) Start engine and let it idle.
- 5) Wait at least 15 seconds.
- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-737.

Ⓞ With GST

Follow the procedure "With CONSULT-II".

7	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th style="width: 50%;">MONITORING</th> <th style="width: 50%;">NO FAIL</th> </tr> <tr> <td>CMPS-RPM(REF)</td> <td>XXX rpm</td> </tr> <tr> <td>VHCL SPEED SE</td> <td>XXX km/h</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> <tr> <td>ABSOL PRES/SE</td> <td>XXX V</td> </tr> </table>	DATA MONITOR		MONITORING	NO FAIL	CMPS-RPM(REF)	XXX rpm	VHCL SPEED SE	XXX km/h	B/FUEL SCHDL	XXX msec	ABSOL PRES/SE	XXX V
DATA MONITOR													
MONITORING	NO FAIL												
CMPS-RPM(REF)	XXX rpm												
VHCL SPEED SE	XXX km/h												
B/FUEL SCHDL	XXX msec												
ABSOL PRES/SE	XXX V												

PEF127V

PROCEDURE FOR MALFUNCTION C

NEEC0060S03

CAUTION:

Always drive vehicle at a safe speed.

Ⓟ With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
The voltage of "ABSOL PRES/SE" should be more than 1.74 [V].
If the check result is NG, go to "Diagnostic Procedure", EC-737.
If the check result is OK, go to following step.

- 3) Start engine and warm it up to normal operating temperature.
- 4) Turn ignition switch "OFF" and wait at least 5 seconds.
- 5) Start engine and let it idle for at least 13 seconds.
- 6) Select "DATA MONITOR" mode with CONSULT-II.
- 7) Drive the vehicle at least 3 consecutive seconds under the following conditions,

CMPS-RPM (REF)	3,000 - 4,800 rpm
B/FUEL SCHDL	More than 4.6 msec
Selector lever	Suitable position
Driving location	Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

- 8) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-737.

ENGINE SPD	0RPM
COOLANT TEMP	69°C
VEHICLE SPD	0MPH
IGN ADVANCE	3.0°
CALC LOAD	0.0%
MAP	101kPa
MAF	0.25gm/s
THROTTLE POS	0.0%
INTAKE AIR	27°C
FUEL SYS #1	OL
FUEL SYS #2	UNUSED
SHORT FT #1	0.0%
LONG FT #1	0.0%
O2S B1 S1	0.000V
O2FT B1 S1	0.0%
O2S B1 S2	0.000V

SEF518R

Overall Function Check

PROCEDURE FOR MALFUNCTION C

NEEC0061

AT

NEEC0061S01

TF

Use this procedure to check the overall function of the absolute pressure sensor circuit. During this check, a 1st trip DTC might not be confirmed.

With GST

- 1) Turn ignition switch "ON".
- 2) Select absolute pressure sensor signal in "MODE 1" with GST.
- 3) Make sure that the signal is more than 46 kPa (0.47 kg/cm², 6.7 psi).
- 4) If NG, go to "Diagnostic Procedure", EC-737.

PD

AX

No Tools

- 1) Turn ignition switch "ON".
- 2) Make sure that the voltage between ECM terminal 45 (Absolute pressure sensor signal) and ground is more than 1.74 [V].
- 3) If NG, go to "Diagnostic Procedure", EC-737.

SU

BR

ST

RS


BT

HA

SC

EL



IDX

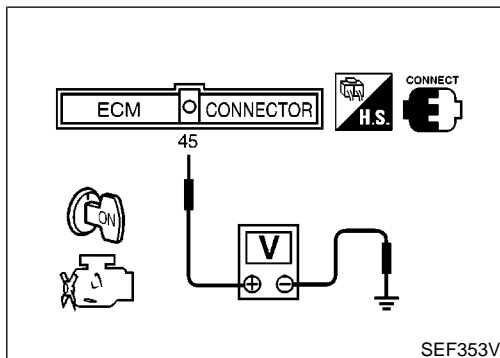

Wiring Diagram

NEEC0062

EC-AP/SEN-01

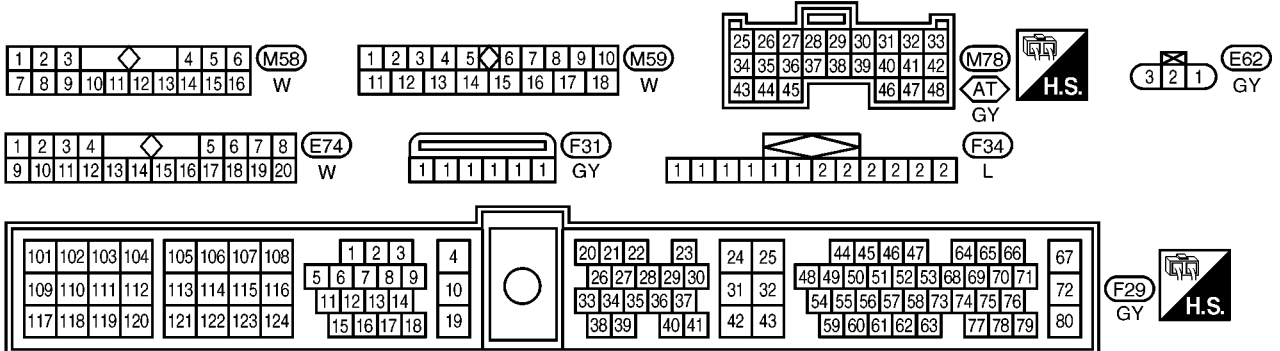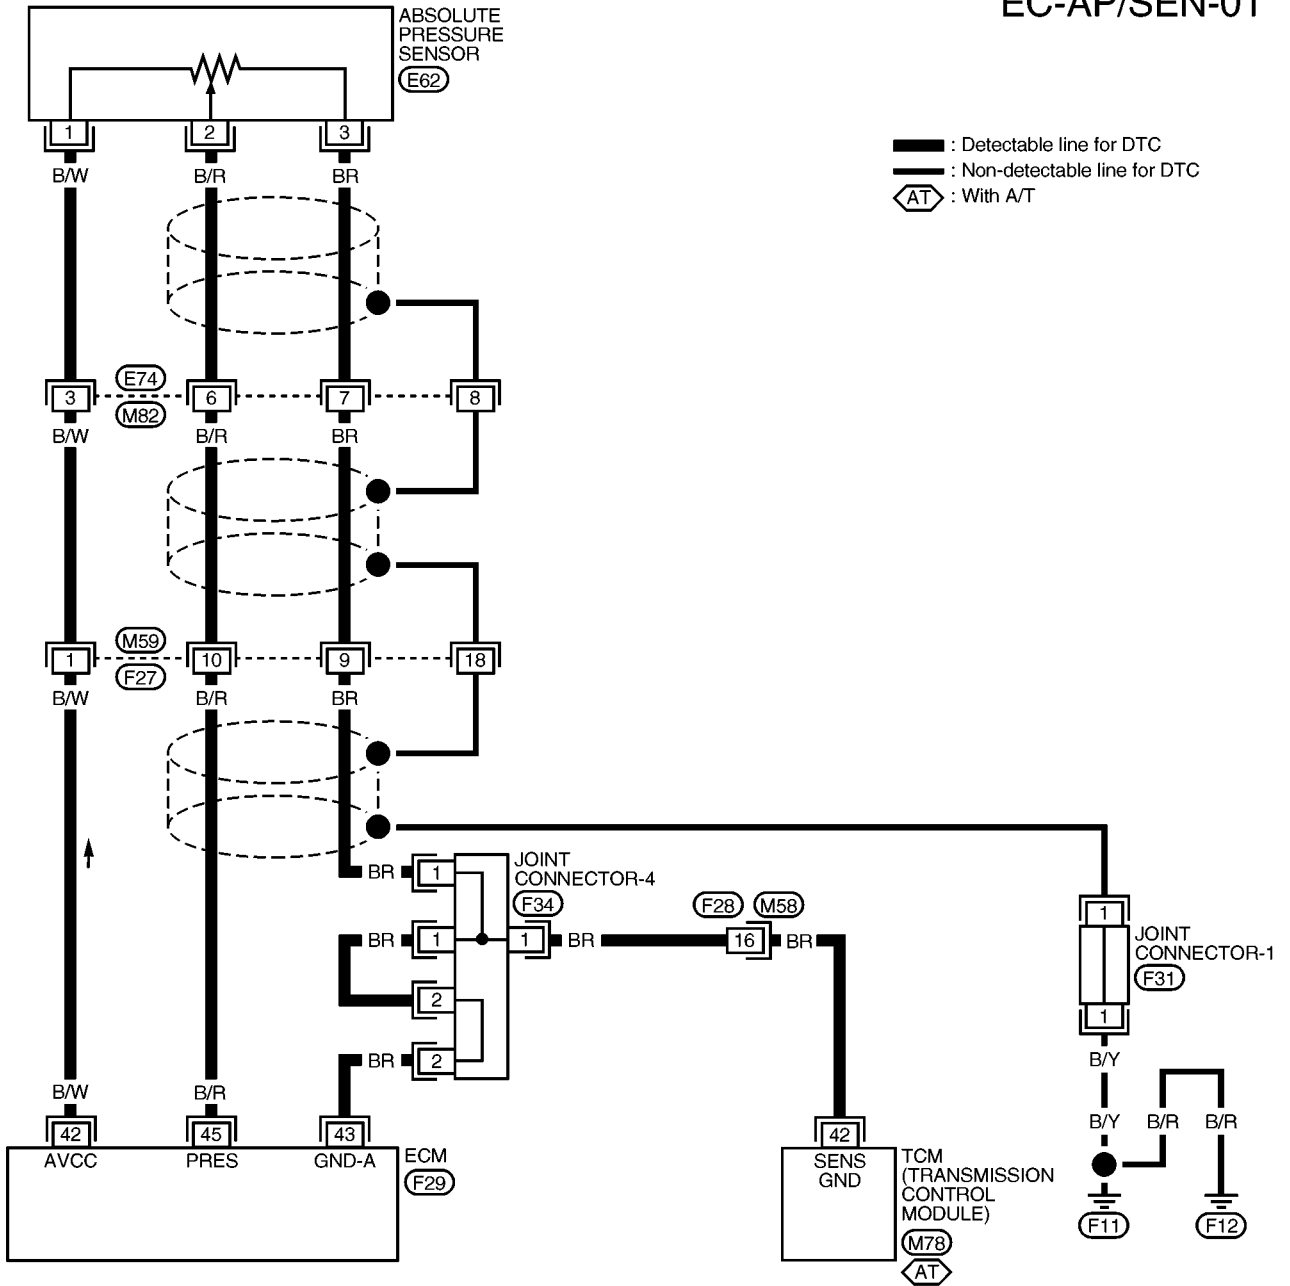


Diagnostic Procedure


If the trouble is duplicated after “PROCEDURE FOR MALFUNCTION A or C”, perform “PROCEDURE A” below. If the trouble is duplicated after “PROCEDURE FOR MALFUNCTION B”, perform “PROCEDURE B”, EC-741.

NEEC0063

PROCEDURE A

NEEC0063S01

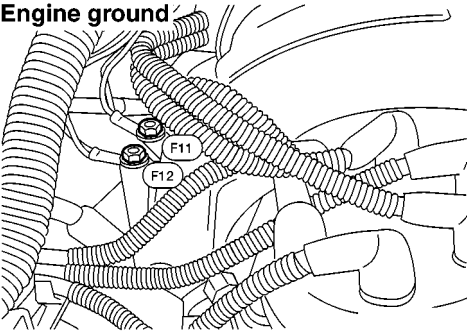1	RETIGHTEN GROUND SCREWS	<p>1. Turn ignition switch “OFF”. 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;">  <p>Engine ground</p> </div> <p style="text-align: right;"><small>AEC640A</small></p>	
▶ GO TO 2.			

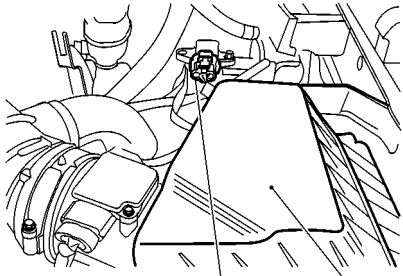
2	CHECK ABSOLUTE PRESSURE SENSOR CONNECTOR FOR WATER	<p>1. Disconnect absolute pressure sensor harness connector.</p> <div style="text-align: center;">  <p>Absolute pressure sensor Air cleaner</p> </div> <p style="text-align: right;"><small>AEC642A</small></p> <p>2. Check sensor harness connector for water. Water should not exist.</p> <p style="text-align: center;">OK or NG</p>	
▶ GO TO 3.			
▶ Repair or replace harness connector.			

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0105 ABSOLUTE PRESSURE SENSOR

VG33E

Diagnostic Procedure (Cont'd)

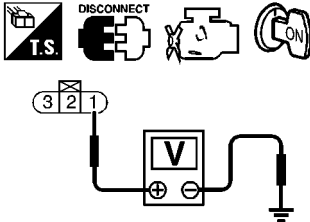3	CHECK ABSOLUTE PRESSURE SENSOR POWER SUPPLY CIRCUIT
<p>1. Turn ignition switch "ON". 2. Check voltage between sensor terminal 1 and ground with CONSULT-II or tester.</p>	
	
<p>Voltage: Approximately 5V</p>	
<p>SEF200W</p>	
<p>OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.

4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none">● Harness connectors E74, M82● Harness connectors M59, F27● Harness for open or short between ECM and absolute pressure sensor	
	▶ Repair harness or connectors.

5	CHECK ABSOLUTE PRESSURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF". 2. Check harness continuity between sensor terminal 3 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p>	
<p>OK or NG</p>	
OK	▶ GO TO 7.
NG	▶ GO TO 6.

6	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none">● Harness connectors E74, M82● Harness connectors M59, F27● Harness connectors F28, M58● Joint connector-4● Harness for open or short between ECM and absolute pressure sensor● Harness for open or short between TCM (Transmission Control Module) and absolute pressure sensor	
	▶ Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0105 ABSOLUTE PRESSURE SENSOR

VG33E

Diagnostic Procedure (Cont'd)

7	CHECK ABSOLUTE PRESSURE SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Disconnect ECM harness connector.</p> <p>2. Check harness continuity between ECM terminal 45 and sensor terminal 2. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 9.
NG	▶	GO TO 8.

8	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E74, M82 ● Harness connectors M59, F27 ● Harness for open or short between ECM and absolute pressure sensor 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

9	CHECK ABSOLUTE PRESSURE SENSOR	
<p>1. Remove absolute pressure sensor with its harness connector connected.</p> <p>2. Remove hose from absolute pressure sensor.</p> <p>3. Turn ignition switch "ON" and check output voltage between ECM terminal 45 and engine ground.</p>		
<p>The diagram illustrates the test setup. A vacuum pump is connected to the absolute pressure sensor. The sensor's harness is connected to the ECM terminal 45. A voltmeter is connected between terminal 45 and engine ground. The ignition switch is turned ON.</p>		
<p>The voltage should be 3.2 to 4.8V.</p> <p>4. Use pump to apply vacuum of -26.7 kPa (-200 mmHg, -7.87 inHg) to absolute pressure sensor as shown in figure and check the output voltage.</p> <p>The voltage should be 1.0 to 1.4V lower than the value measured in step 3.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Always calibrate the vacuum pump gauge when using it. ● Do not apply below -93.3 kPa (-700 mmHg, -27.56 inHg) or over 101.3 kPa (760 mmHg, 29.92 inHg) of pressure. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 10.
NG	▶	Replace absolute pressure sensor.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SEF749U

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0105 ABSOLUTE PRESSURE SENSOR

VG33E

Diagnostic Procedure (Cont'd)



10	CHECK ABSOLUTE PRESSURE SENSOR SHIELD CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF". 2. Disconnect joint connector-1. 3. Check the following.</p> <ul style="list-style-type: none">● Continuity between joint connector terminal 1 and ground Refer to Wiring Diagram.● Joint connector (Refer to "HARNESS LAYOUT", <i>EL-239</i>.) Continuity should exist. <p>4. Also check harness for short to ground and short to power. 5. Then reconnect joint connector-1.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 11.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.
11	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
	▶ INSPECTION END

PROCEDURE B

=NEEC0063S02

1 INSPECTION START

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch "OFF".
3. Attach the vacuum gauge between the absolute pressure sensor and the rubber tube connected to the MAP/BARO switch solenoid valve.

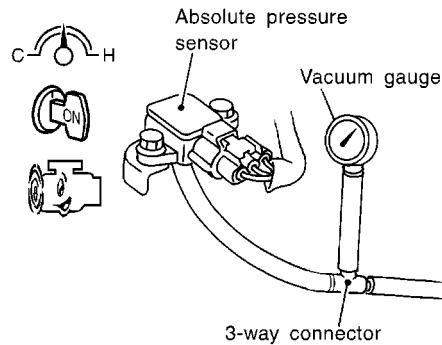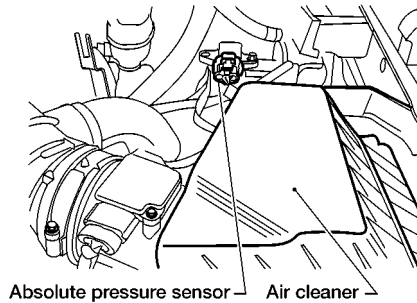
AEC642A
SEF385U

Models with CONSULT-II ► GO TO 2.

Models without CONSULT-II ► GO TO 3.

2 CHECK VACUUM SOURCE TO ABSOLUTE PRESSURE SENSOR

(With CONSULT-II)

1. Start engine and let it idle.
2. Select "MAP/BARO SW/V" in "ACTIVE TEST" mode with CONSULT-II.
3. Touch "MAP" and "BARO" alternately and check for vacuum.

ACTIVE TEST	
MAP/BARO SW/V	MAP
MONITOR	
CMPS-RPM (REF)	XXXrpm
MAP/BARO SW/V	MAP
ABSOL PRES/SE	XXXV

ACTIVE TEST	
MAP/BARO SW/V	BARO
MONITOR	
CMPS-RPM (REF)	XXXrpm
MAP/BARO SW/V	BARO
ABSOL PRES/SE	XXXV

MAP/BARO SW/V	Vacuum
BARO	Should not exist
MAP	Should exist

SEF183X

OK or NG

OK ► GO TO 8.


NG ► GO TO 4.


DTC P0105 ABSOLUTE PRESSURE SENSOR

VG33E

Diagnostic Procedure (Cont'd)

3	CHECK VACUUM SOURCE TO ABSOLUTE PRESSURE SENSOR							
<p>⊗ (Without CONSULT-II)</p> <p>1. Start engine and let it idle.</p> <p>2. Check for vacuum under the following condition.</p>								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Condition</th> <th style="width: 50%;">Vacuum</th> </tr> </thead> <tbody> <tr> <td>For 5 seconds after starting engine</td> <td>Should not exist</td> </tr> <tr> <td>More than 5 seconds after starting engine</td> <td>Should exist</td> </tr> </tbody> </table>			Condition	Vacuum	For 5 seconds after starting engine	Should not exist	More than 5 seconds after starting engine	Should exist
Condition	Vacuum							
For 5 seconds after starting engine	Should not exist							
More than 5 seconds after starting engine	Should exist							
MTBL0080								
OK or NG								
OK	▶	GO TO 8.						
NG	▶	GO TO 4.						

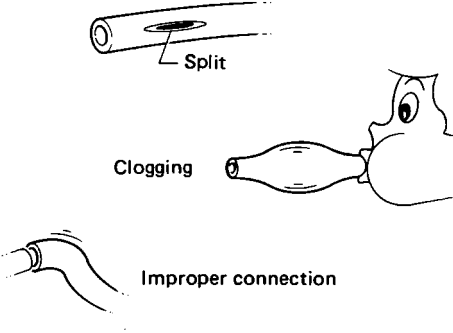4	CHECK VACUUM HOSE	
<p>1. Turn ignition switch "OFF".</p> <p>2. Check vacuum hose for clogging, cracks, disconnection or improper connection.</p>		
		
SEF109L		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Clean, repair or replace the hose.

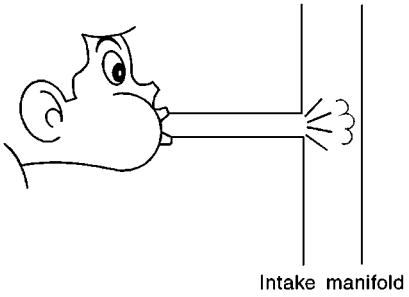5	CHECK VACUUM PORT	
Check vacuum port for clogging.		
		
SEF368U		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Clean or repair the vacuum port.

DTC P0105 ABSOLUTE PRESSURE SENSOR

VG33E

Diagnostic Procedure (Cont'd)

6	CHECK MAP/BARO SWITCH SOLENOID VALVE	
Refer to "Component Inspection", EC-680.		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Replace MAP/BARO switch solenoid valve.

GI


MA

EM

7	CHECK INTAKE SYSTEM	
Check intake system for air leaks.		
OK or NG		
OK	▶	GO TO 11.
NG	▶	Repair it.

LC

EC

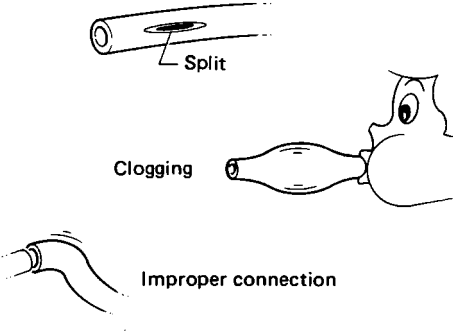8	CHECK HOSE BETWEEN ABSOLUTE PRESSURE SENSOR AND MAP/BARO SWITCH SOLENOID VALVE	
<ol style="list-style-type: none"> Turn ignition switch "OFF". Check hose for clogging, cracks, disconnection or improper connection. 		
		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Repair or reconnect hose.

FE

CL

MT

AT

TF

PD

SEF109L

AX

SU

9	CHECK ABSOLUTE PRESSURE SENSOR HARNESS CONNECTOR FOR WATER	
<ol style="list-style-type: none"> Disconnect absolute pressure sensor harness connector. Check sensor harness connector for water. Water should not exist. 		
OK or NG		
OK	▶	GO TO 10.
NG	▶	Repair or replace harness connector.

BR

ST

RS

BT

HA



SC

EL

IDX

10	CHECK ABSOLUTE PRESSURE SENSOR
<ol style="list-style-type: none"> 1. Remove absolute pressure sensor with its harness connector connected. 2. Remove hose from absolute pressure sensor. 3. Turn ignition switch "ON" and check output voltage between ECM terminal 45 and engine ground. 	
SEF749U	
<p>The voltage should be 3.2 to 4.8V.</p> <ol style="list-style-type: none"> 4. Use pump to apply vacuum of -26.7 kPa (-200 mmHg, -7.87 inHg) to absolute pressure sensor as shown in figure and check the output voltage. <p>The voltage should be 1.0 to 1.4V lower than the value measured in step 3.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Always calibrate the vacuum pump gauge when using it. ● Do not apply below -93.3 kPa (-700 mmHg, -27.56 inHg) or over 101.3 kPa (760 mmHg, 29.92 inHg) of pressure. 	
OK or NG	
OK	▶ GO TO 11.
NG	▶ Replace absolute pressure sensor.

11	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
▶	INSPECTION END

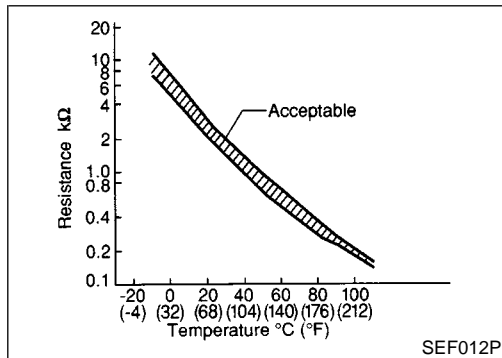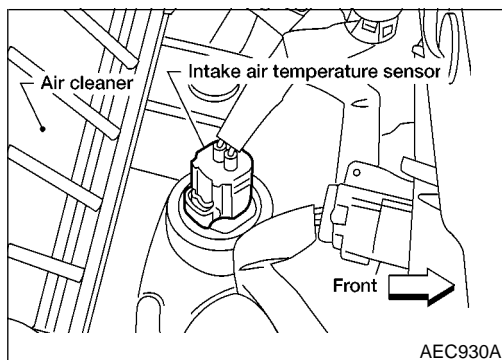

Component Description

NEEC0064

The intake air temperature sensor is mounted to the air duct housing. The sensor detects intake air temperature and transmits a signal to the ECM.

The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

<Reference data>

Intake air temperature °C (°F)	Voltage* (V)	Resistance kΩ
20 (68)	3.5	2.1 - 2.9
80 (176)	1.23	0.27 - 0.38

*: These data are reference values and are measured between ECM terminal 61 (Intake air temperature sensor) and ECM terminal 32 (ECM ground).

On Board Diagnosis Logic

NEEC0065

Malfunction is detected when
 (Malfunction A) an excessively low or high voltage from the sensor is sent to ECM,
 (Malfunction B) rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signal from engine coolant temperature sensor.

POSSIBLE CAUSE

NEEC0065S01

- Harness or connectors
(The sensor circuit is open or shorted.)
- Intake air temperature sensor

DTC Confirmation Procedure

NEEC0066

Perform "PROCEDURE FOR MALFUNCTION A" first. If 1st trip DTC cannot be confirmed, perform "PROCEDURE FOR MALFUNCTION B".

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

3	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF) XXX rpm	

PEF356V

PROCEDURE FOR MALFUNCTION A

NEEC0066S01

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-748.

With GST

Follow the procedure "With CONSULT-II".

No Tools

- 1) Turn ignition switch "ON" and wait at least 5 seconds.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-748.

5	DATA MONITOR	
	MONITORING	NO FAIL
	COOLAN TEMP/S XXX °C VHCL SPEED SE XXX km/h	

PEF233U

PROCEDURE FOR MALFUNCTION B

NEEC0066S02

CAUTION:

Always drive vehicle at a safe speed.

TESTING CONDITION:

This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

With CONSULT-II

- 1) Wait until engine coolant temperature is less than 90°C (194°F).
 - a) Turn ignition switch "ON".
 - b) Select "DATA MONITOR" mode with CONSULT-II.
 - c) Check the engine coolant temperature.
 - d) If the engine coolant temperature is not less than 90°C (194°F), turn ignition switch "OFF" and cool down engine.
 - Perform the following steps before engine coolant temperature is above 90°C (194°F).
- 2) Turn ignition switch "ON".
- 3) Select "DATA MONITOR" mode with CONSULT-II.
- 4) Start engine.
- 5) Hold vehicle speed at more than 70 km/h (43 MPH) for 100 consecutive seconds.
- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-748.

With GST

Follow the procedure "With CONSULT-II".

DTC P0110 INTAKE AIR TEMPERATURE SENSOR


VG33E

Wiring Diagram

Wiring Diagram


NEEC0067

EC-IATS-01

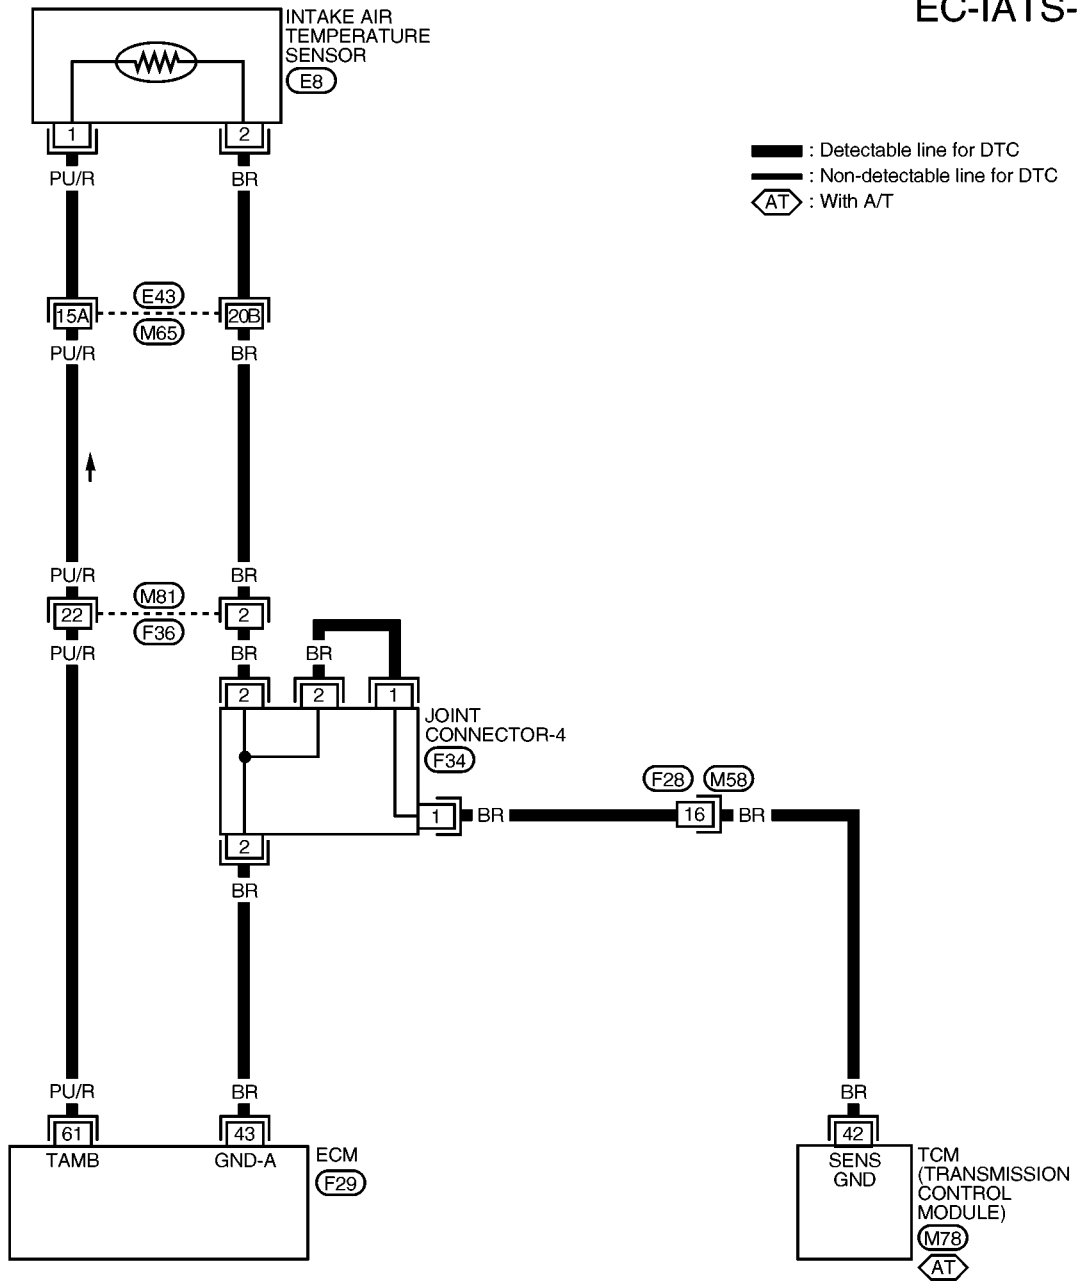

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST



RS
 BT
 HA
 SC
 EL
 IDX

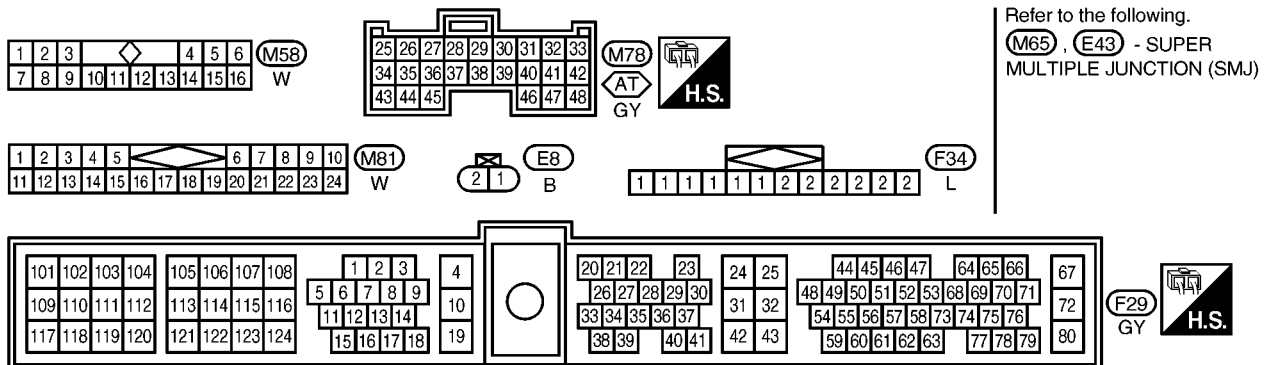

AEC941A

Diagnostic Procedure

NEEC0068

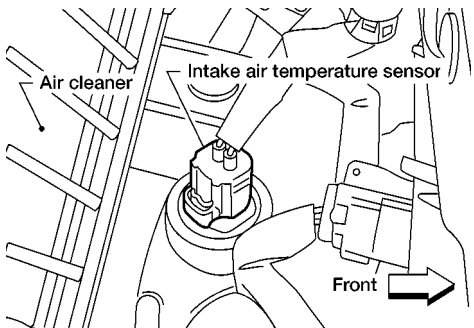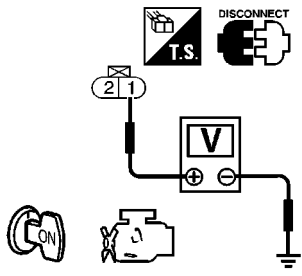1	CHECK INTAKE AIR TEMPERATURE SENSOR POWER SUPPLY CIRCUIT
<p>1. Turn ignition switch "OFF". 2. Disconnect intake air temperature sensor harness connector.</p> <div style="text-align: center;">  </div> <p>3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and ground.</p> <div style="text-align: center;">  </div> <p style="color: blue; font-weight: bold;">Voltage: Approximately 5V</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 3.
NG	▶ GO TO 2.



AEC930A

SEF203W

2	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M81, F36 ● Harness for open or short between ECM and intake air temperature sensor 	
▶	Repair harness or connectors.

3	CHECK INTAKE AIR TEMPERATURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF". 2. Check harness continuity between sensor terminal 2 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.

4	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M81, F36 ● Harness connectors F28, M58 ● Joint connector-4 ● Harness for open or short between ECM and intake air temperature sensor ● Harness for open or short between TCM (Transmission Control Module) and intake air temperature sensor 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

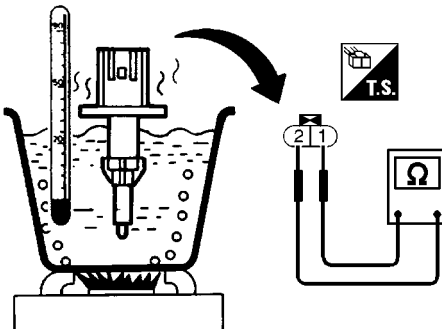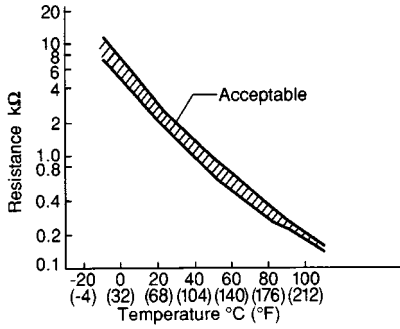5	CHECK INTAKE AIR TEMPERATURE SENSOR						
Check resistance as shown in the figure.							
							
<Reference data>							
<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="text-align: center;">Intake air temperature °C (°F)</th> <th style="text-align: center;">Resistance kΩ</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">20 (68)</td> <td style="text-align: center;">2.1 - 2.9</td> </tr> <tr> <td style="text-align: center;">80 (176)</td> <td style="text-align: center;">0.27 - 0.38</td> </tr> </tbody> </table>		Intake air temperature °C (°F)	Resistance kΩ	20 (68)	2.1 - 2.9	80 (176)	0.27 - 0.38
Intake air temperature °C (°F)	Resistance kΩ						
20 (68)	2.1 - 2.9						
80 (176)	0.27 - 0.38						
							
OK or NG							
OK	▶ GO TO 6.						
NG	▶ Replace intake air temperature sensor.						



6	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
▶	INSPECTION END

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS) (CIRCUIT)

VG33E

Component Description

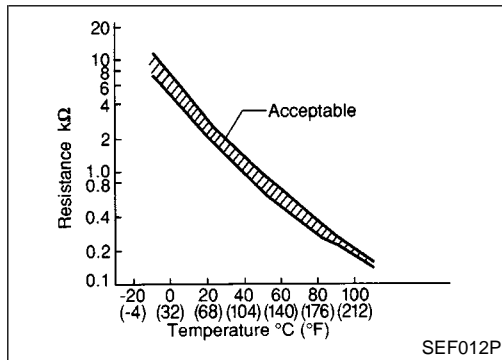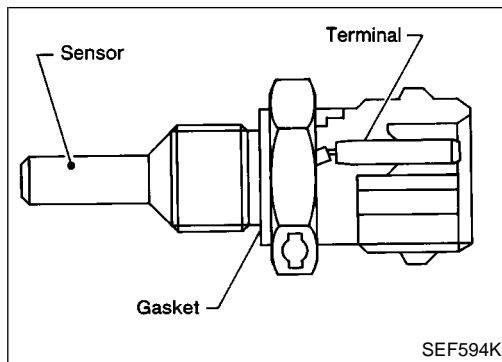

Component Description

The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

<Reference data>

Engine coolant temperature °C (°F)	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

*: These data are reference values and are measured between ECM terminal 59 (Engine coolant temperature sensor) and ECM terminal 32 (ECM ground).

On Board Diagnosis Logic

Malfunction is detected when an excessively high or low voltage from the sensor is sent to ECM.

POSSIBLE CAUSE

- Harness or connectors (The sensor circuit is open or shorted.)
- Engine coolant temperature sensor

FAIL-SAFE MODE

When this malfunction is detected, the ECM enters fail-safe mode and the MIL lights up.

Detected items	Engine operating condition in fail-safe mode	
Engine coolant temperature sensor circuit	Engine coolant temperature will be determined by ECM based on the time after turning ignition switch "ON" or "START". CONSULT-II displays the engine coolant temperature decided by ECM.	
	Condition	Engine coolant temperature decided (CONSULT-II display)
	Just as ignition switch is turned ON or Start	40°C (104°F)
	More than approx. 4 minutes after ignition ON or Start	80°C (176°F)
	Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)

DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS) (CIRCUIT)

VG33E

DTC Confirmation Procedure

3

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm

PEF360V

DTC Confirmation Procedure

=NEEC0071

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

Ⓜ With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-753.

Ⓜ With GST

Follow the procedure "With CONSULT-II".

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS) (CIRCUIT)



VG33E

Wiring Diagram

Wiring Diagram

NEEC0072

EC-ECTS-01

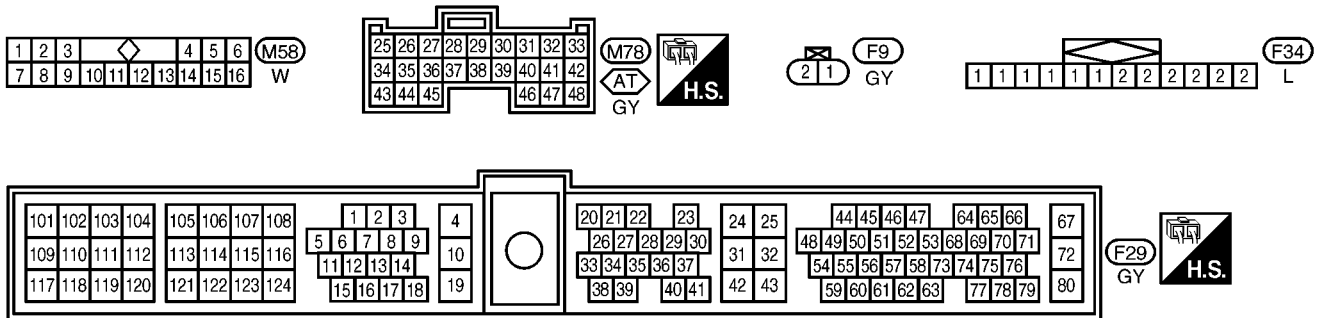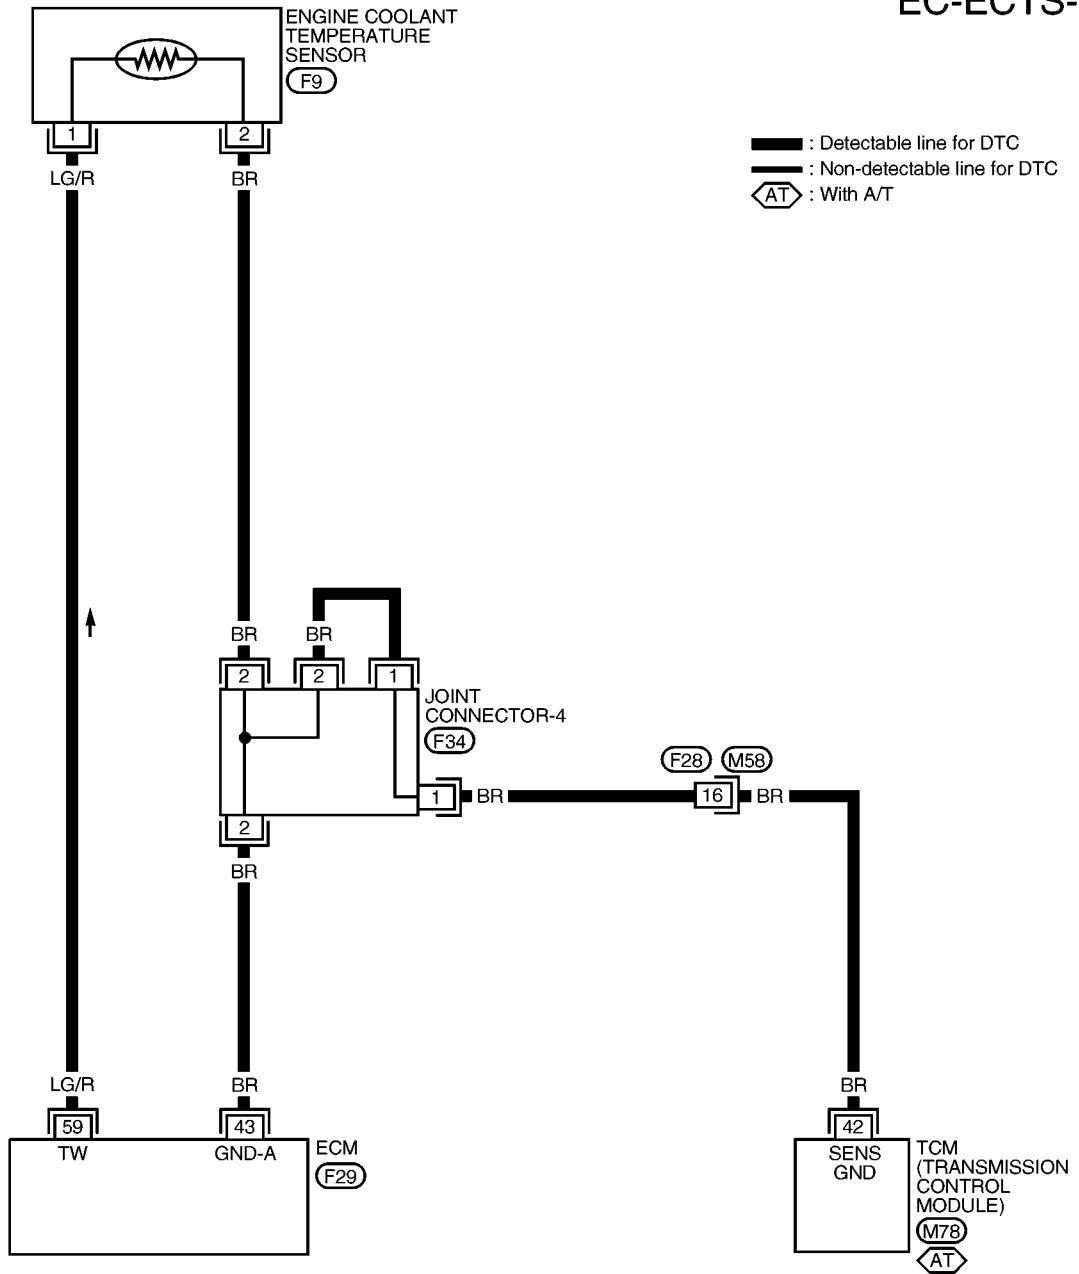

AEC942A



DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS) (CIRCUIT)

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0073

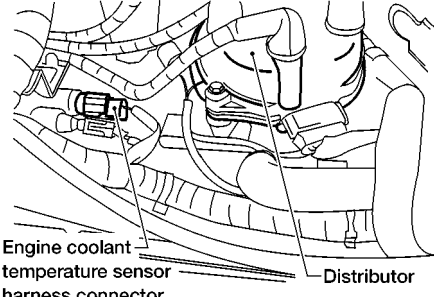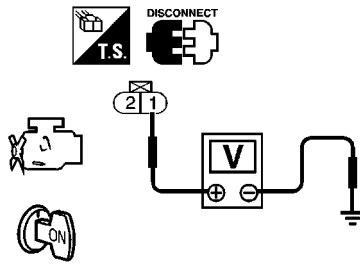1	CHECK ECTS POWER SUPPLY CIRCUIT
<p>1. Turn ignition switch "OFF". 2. Disconnect engine coolant temperature sensor harness connector.</p> <div style="text-align: center;">  <p>Engine coolant temperature sensor harness connector Distributor</p> </div> <p>3. Turn ignition switch "ON". 4. Check voltage between ECTS terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p>Voltage: Approximately 5V</p> </div> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 2.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

AEC643A

SEF206W

2	CHECK ECTS GROUND CIRCUIT FOR OPEN AND CIRCUIT
<p>1. Turn ignition switch "OFF". 2. Check harness continuity between ECTS terminal 2 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 4.
NG	▶ GO TO 3.

3	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F28, M58 ● Joint connector-4 ● Harness for open or short between ECM and engine coolant temperature sensor ● Harness for open or short between TCM (Transmission Control Module) and engine coolant temperature sensor 	
	▶ Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P0115 ENGINE COOLANT TEMPERATURE SENSOR (ECTS) (CIRCUIT)

VG33E

Diagnostic Procedure (Cont'd)

4 CHECK ENGINE COOLANT TEMPERATURE SENSOR


Check resistance as shown in the figure.

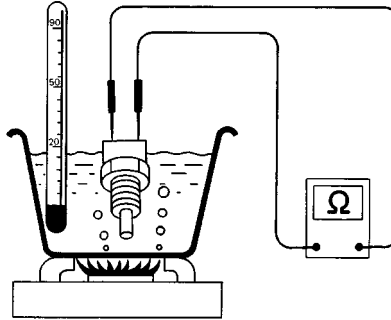

<Reference data>

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

SEF152P

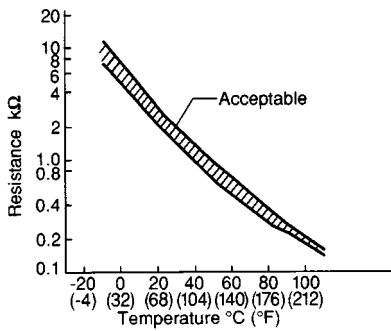

MTBL0229

SEF012P

OK or NG

- | | | |
|----|---|--|
| OK | ▶ | GO TO 5. |
| NG | ▶ | Replace engine coolant temperature sensor. |

5 CHECK INTERMITTENT INCIDENT

Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.

▶ **INSPECTION END**

Description

NEEC0074

NOTE:


If DTC P0120 (0403) is displayed with DTC P0510 (0203), first perform the trouble diagnosis for DTC P0510. Refer to EC-1016.

COMPONENT DESCRIPTION

NEEC0074S01

The throttle position sensor responds to the accelerator pedal movement. This sensor is a kind of potentiometer which transforms the throttle position into output voltage, and emits the voltage signal to the ECM. In addition, the sensor detects the opening and closing speed of the throttle valve and feeds the voltage signal to the ECM.

Idle position of the throttle valve is determined by the ECM receiving the signal from the throttle position sensor. This sensor controls engine operation such as fuel cut. On the other hand, the "Wide open and closed throttle position switch", which is built into the throttle position sensor unit, is not used for engine control.

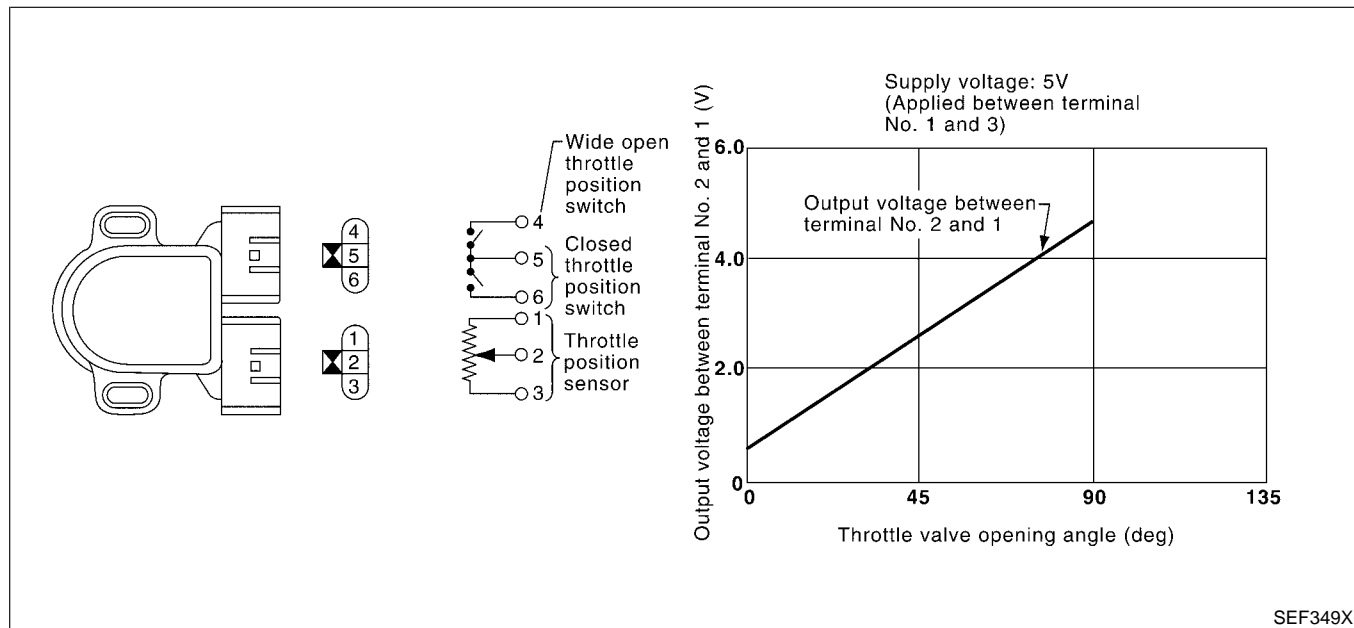

CONSULT-II Reference Value in Data Monitor Mode

NEEC0075

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
THRTL POS SEN	<ul style="list-style-type: none"> Engine: After warming up, idle the engine Throttle valve: fully closed (a)	0.15 - 0.85V
	<ul style="list-style-type: none"> Engine: After warming up Ignition switch: ON (Engine stopped) Throttle valve: Partially open	Between (a) and (b)
		Throttle valve: fully opened (b)
ABSOL TH-P/S	<ul style="list-style-type: none"> Engine: After warming up Ignition switch: ON More than -40.0 kpa (-300 mmHg, -11.81 inHg) of vacuum is applied to the throttle opener with a hand vacuum pump. Throttle valve: fully closed	0.0%
	<ul style="list-style-type: none"> Engine: After warming up Ignition switch: ON (Engine stopped) Throttle valve: fully opened	Approx. 80%

ECM Terminals and Reference Value

=NEEC0076

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
23	L	Throttle position sensor	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Accelerator pedal fully released 	0.15 - 0.85V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Accelerator pedal fully depressed 	3.5 - 4.7V
42	B/W	Sensors' power supply	[Ignition switch "ON"]	Approximately 5V
43	BR	Sensors' ground	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 0V

On Board Diagnosis Logic

NEEC0077

Malfunction is detected when
 (Malfunction A) an excessively low or high voltage from the sensor is sent to ECM,
 (Malfunction B) a high voltage from the sensor is sent to ECM under light load driving conditions,
 (Malfunction C) a low voltage from the sensor is sent to ECM under heavy load driving conditions.

POSSIBLE CAUSE

NEEC0077S01

Malfunction A

NEEC0077S0101

- Harness or connectors
(The throttle position sensor circuit is open or shorted.)
- Throttle position sensor

Malfunction B

NEEC0077S0102

- Harness or connectors
(The throttle position sensor circuit is open or shorted.)
- Throttle position sensor
- Fuel injector
- Camshaft position sensor
- Mass air flow sensor

Malfunction C

NEEC0077S0103

- Harness or connectors
(The throttle position sensor circuit is open or shorted.)
- Intake air leaks
- Throttle position sensor

FAIL-SAFE MODE

NEEC0077S02

When the malfunction A is detected, the ECM enters fail-safe mode and the MIL lights up.

Detected items	Engine operating condition in fail-safe mode	
Throttle position sensor circuit	Throttle position will be determined based on the injected fuel amount and the engine speed. Therefore, acceleration will be poor.	
	Condition	Driving condition
	When engine is idling	Normal
	When accelerating	Poor acceleration

DTC Confirmation Procedure

NEEC0078

NOTE:

- Perform “PROCEDURE FOR MALFUNCTION A” first. If the 1st trip DTC cannot be confirmed, perform “PROCEDURE FOR MALFUNCTION B”.
- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.

PROCEDURE FOR MALFUNCTION A

NEEC0078S01

CAUTION:

Always drive vehicle at a safe speed.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 10V at idle.
- This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

2

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
VHCL SPEED SE	XXX km/h
P/N POSI SW	OFF

PEF775U

With CONSULT-II

- 1) Turn ignition switch “ON” and select “DATA MONITOR” mode with CONSULT-II.
- 2) Start engine and maintain the following conditions for at least 5 consecutive seconds.

Vehicle speed	More than 5 km/h (3 MPH)
Selector lever	Suitable position except “P” or “N” position

- 3) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-761.

With GST

Follow the procedure “With CONSULT-II”.

3

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm

PEF357V

PROCEDURE FOR MALFUNCTION B

NEEC0078S02

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and let it idle for at least 10 seconds.
If idle speed is over 1,000 rpm, maintain the following conditions for at least 10 seconds to keep engine speed below 1,000 rpm.

Selector lever	Suitable position except "P" or "N"
Brake pedal	Depressed
Vehicle speed	0 km/h (0 MPH)


- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-761.

With GST

Follow the procedure "With CONSULT-II".

6	DATA MONITOR	
	MONITORING	NO FAIL
	THRTL POS SEN	XXX V
	ABSOL TH~P/S	XXX %

PEF024P

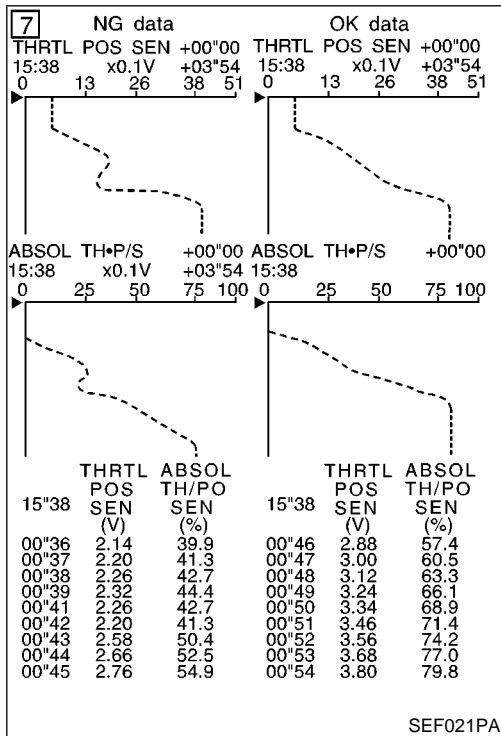

9	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF)	XXX rpm
	MAS AIR/FL SE	XXX V
	COOLAN TEMP/S	XXX °C
	IACV-AAC/V	XXX %

PEF776U

PROCEDURE FOR MALFUNCTION C

CAUTION:

Always drive vehicle at a safe speed.

Ⓜ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT-II.
- 5) Select "THRTL POS SEN" and "ABSOL TH~P/S" in "DATA MONITOR" mode with CONSULT-II.
- 6) Press RECORD on CONSULT-II SCREEN at the same time accelerator pedal is depressed.
- 7) Print out the recorded graph and check the following:
 - The voltage rise is linear in response to accelerator pedal depression.
 - The voltage when accelerator pedal is fully depressed is approximately 4V.
 If NG, go to "Diagnostic Procedure", EC-761.
 If OK, go to following step.
- 8) Select "AUTO TRIG" in "DATA MONITOR" mode with CONSULT-II.
- 9) Maintain the following conditions for at least 10 consecutive seconds.

CMPS-RPM (REF)	More than 2,000 rpm
MAS AIR/FL SE	More than 3V
COOLAN TEMP/S	More than 70°C (158°F)
IACV-AAC/V	Less than 80%
Selector lever	Suitable position
Driving location	Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

- 10) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-761.

Ⓜ With GST

Follow the procedure "With CONSULT-II".

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0120 THROTTLE POSITION SENSOR



VG33E

Wiring Diagram

Wiring Diagram

NEEC0079

EC-TPS-01

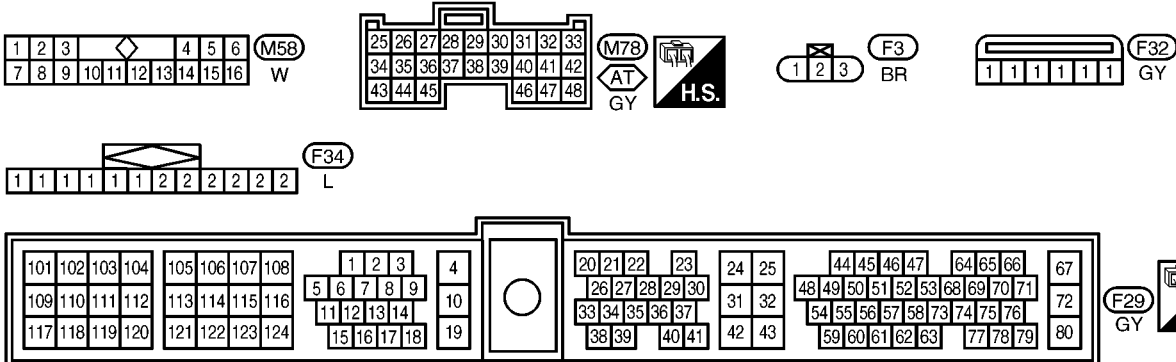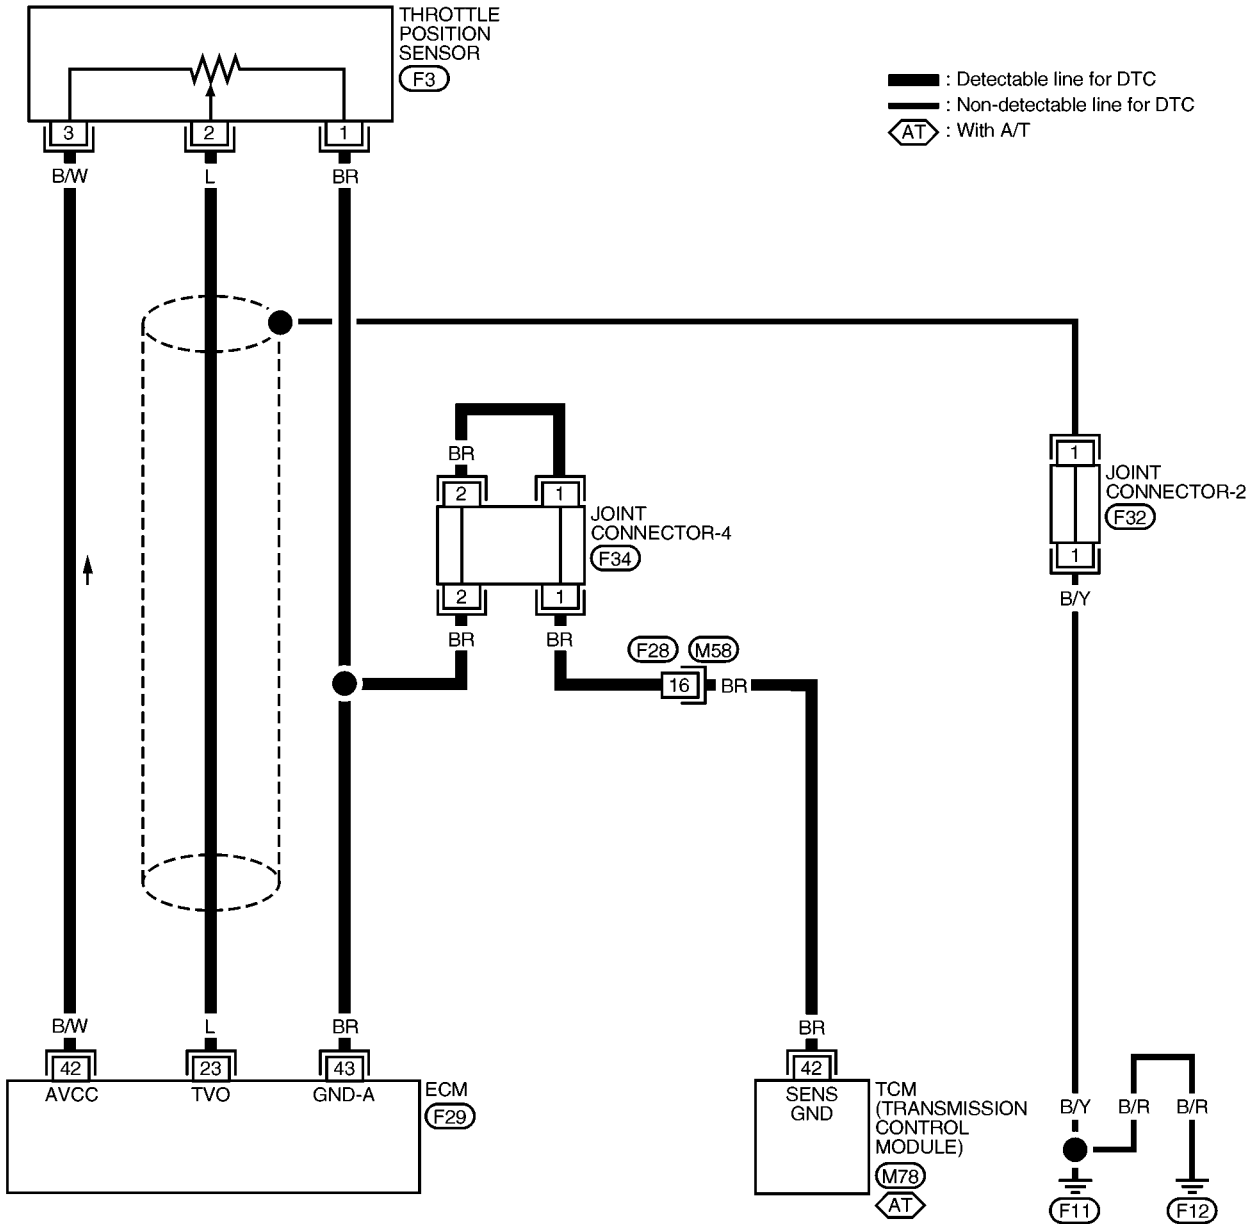

AEC943A

Diagnostic Procedure

NEEC0080

1	INSPECTION START									
Which malfunction A, B or C is duplicated?										
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">MALFUNCTION</th> <th style="width: 50%;">Type</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">A</td> <td style="text-align: center;">A</td> </tr> <tr> <td style="text-align: center;">B</td> <td style="text-align: center;">B</td> </tr> <tr> <td style="text-align: center;">C</td> <td style="text-align: center;">C</td> </tr> </tbody> </table>			MALFUNCTION	Type	A	A	B	B	C	C
MALFUNCTION	Type									
A	A									
B	B									
C	C									
MTBL0066										
Type A, B or C										
Type A or B	▶	GO TO 4.								
Type C	▶	GO TO 2.								


GI
MA
EM
LC
EC

2	ADJUST THROTTLE POSITION SENSOR											
Check the following items. Refer to "Basic Inspection", EC-680.												
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Items</th> <th style="width: 50%;">Specifications</th> </tr> </thead> <tbody> <tr> <td>Ignition timing</td> <td>15° ± 2° BTDC</td> </tr> <tr> <td>Base idle speed</td> <td>700 ± 50 rpm (in "P" or "N" position)</td> </tr> <tr> <td>Closed throttle position switch idle position adjustment</td> <td>Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF</td> </tr> <tr> <td>Target idle speed</td> <td>750 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table>			Items	Specifications	Ignition timing	15° ± 2° BTDC	Base idle speed	700 ± 50 rpm (in "P" or "N" position)	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF	Target idle speed	750 ± 50 rpm (in "P" or "N" position)
Items	Specifications											
Ignition timing	15° ± 2° BTDC											
Base idle speed	700 ± 50 rpm (in "P" or "N" position)											
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF											
Target idle speed	750 ± 50 rpm (in "P" or "N" position)											
MTBL0226												
▶ GO TO 3.												



FE
CL
MT
AT
TF

3	CHECK INTAKE SYSTEM.	
1. Turn ignition switch "OFF". 2. Check the following for connection. <ul style="list-style-type: none"> ● Air duct ● Vacuum hoses ● Intake air passage between air duct to intake manifold collector 		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Reconnect the parts.

PD
AX
SU
BR

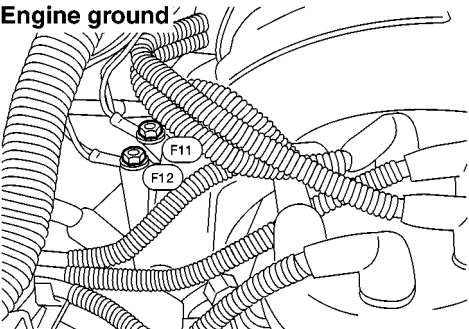4	RETIGHTEN GROUND SCREWS	
1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.		
 <p style="text-align: center;">Engine ground</p> <p style="text-align: center;">F11 F12</p>		
AEC640A		
▶ GO TO 5.		

ST
RS
BT
HA
SC
EL
IDX

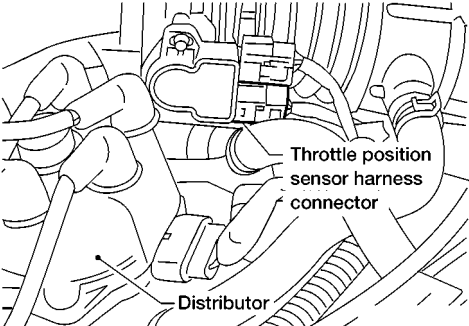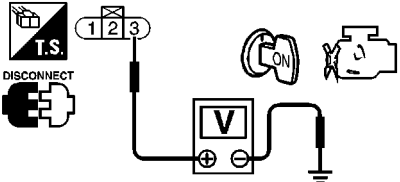5	CHECK THROTTLE POSITION SENSOR POWER SUPPLY CIRCUIT
<p>1. Disconnect throttle position sensor harness connector.</p> <div style="text-align: center;">  <p style="margin-left: 150px;">Throttle position sensor harness connector</p> <p style="margin-left: 100px;">Distributor</p> </div> <p style="text-align: right;">AEC638A</p> <p>2. Turn ignition switch "ON".</p> <p>3. Check voltage between sensor terminal 3 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p style="text-align: center; color: blue;">Voltage: Approximately 5V</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 6.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

6	CHECK THROTTLE POSITION SENSOR GROUND CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF".</p> <p>2. Check harness continuity between sensor terminal 1 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 8.
NG	▶ GO TO 7.

7	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F28, M58 ● Joint connector-4 ● Harness for open or short between ECM and throttle position sensor ● Harness for open or short between TCM (Transmission Control Module) and throttle position sensor 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0120 THROTTLE POSITION SENSOR

VG33E

Diagnostic Procedure (Cont'd)

8	CHECK THROTTLE POSITION SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Disconnect ECM harness connector.</p> <p>2. Check harness continuity between ECM terminal 23 and sensor terminal 2. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 9.
OK (Without CONSULT-II)	▶	GO TO 10.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX

9 CHECK THROTTLE POSITION SENSOR

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Stop engine (ignition switch OFF).
3. Remove the vacuum hose connected to the throttle opener (if so equipped).
4. Connect suitable vacuum hose to the vacuum pump and the opener.
5. Apply vacuum [more than -40.0kPa (-300mmHg, 11.81inHG)] until the throttle drum becomes free from the rod of the throttle opener.

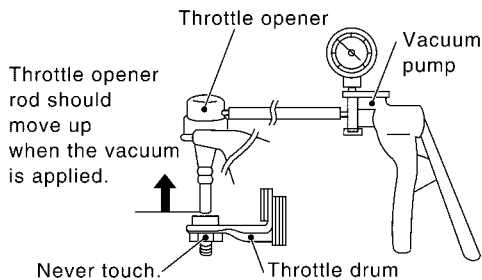

SEF793W

6. Turn ignition switch ON.
7. Select "DATA MONITOR" mode with CONSULT-II.
8. Check voltage of "THRTL POS SEN".

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
COOLAN TEMP/S	XXX °C
THRTL POS SEN	XXX V

PEF765W

Voltage measurement must be made with throttle position sensor installed in vehicle.

Throttle valve conditions	THRTL POS SEN
Completely closed (a)	0.15 - 0.85V
Partially open	Between (a) and (b)
Completely open (b)	3.5 - 4.7V

MTBL0230

OK or NG

OK	▶	GO TO 12.
NG	▶	GO TO 11.

10	CHECK THROTTLE POSITION SENSOR								
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine (ignition switch OFF). 3. Remove the vacuum hose connected to the throttle opener (if so equipped). 4. Connect suitable vacuum hose to the vacuum pump and the opener. 5. Apply vacuum [more than -40.0kPa (-300mmHg, 11.81inHG)] until the throttle drum becomes free from the rod of the throttle opener. 									
SEF793W									
<ol style="list-style-type: none"> 6. Turn ignition switch ON. 7. Check voltage between ECM terminal 23 (Throttle position sensor signal) and ground. Voltage measurement must be made with throttle position sensor installed in vehicle. 									
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="padding: 5px;">Throttle valve conditions</th> <th style="padding: 5px;">Voltage</th> </tr> </thead> <tbody> <tr> <td style="padding: 5px;">Completely closed (a)</td> <td style="padding: 5px;">0.15 - 0.85V</td> </tr> <tr> <td style="padding: 5px;">Partially open</td> <td style="padding: 5px;">Between (a) and (b)</td> </tr> <tr> <td style="padding: 5px;">Completely open (b)</td> <td style="padding: 5px;">3.5 - 4.7V</td> </tr> </tbody> </table>		Throttle valve conditions	Voltage	Completely closed (a)	0.15 - 0.85V	Partially open	Between (a) and (b)	Completely open (b)	3.5 - 4.7V
Throttle valve conditions	Voltage								
Completely closed (a)	0.15 - 0.85V								
Partially open	Between (a) and (b)								
Completely open (b)	3.5 - 4.7V								
MTBL0231									
OK or NG									
OK	▶ GO TO 12.								
NG	▶ GO TO 11.								

11	ADJUST CLOSED THROTTLE POSITION SWITCH										
Adjust closed throttle position switch. Refer to "Basic Inspection", EC-680.											
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="padding: 5px;">Items</th> <th style="padding: 5px;">Specifications</th> </tr> </thead> <tbody> <tr> <td style="padding: 5px;">Ignition timing</td> <td style="padding: 5px;">15° ± 2° BTDC</td> </tr> <tr> <td style="padding: 5px;">Base idle speed</td> <td style="padding: 5px;">700 ± 50 rpm (in "P" or "N" position)</td> </tr> <tr> <td style="padding: 5px;">Closed throttle position switch idle position adjustment</td> <td style="padding: 5px;">Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF</td> </tr> <tr> <td style="padding: 5px;">Target idle speed</td> <td style="padding: 5px;">750 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table>		Items	Specifications	Ignition timing	15° ± 2° BTDC	Base idle speed	700 ± 50 rpm (in "P" or "N" position)	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF	Target idle speed	750 ± 50 rpm (in "P" or "N" position)
Items	Specifications										
Ignition timing	15° ± 2° BTDC										
Base idle speed	700 ± 50 rpm (in "P" or "N" position)										
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF										
Target idle speed	750 ± 50 rpm (in "P" or "N" position)										
MTBL0226											
OK or NG											
OK	▶ GO TO 12.										
NG	▶ Replace throttle position sensor. To adjust it, perform "Basic Inspection", EC-680.										

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P0120 THROTTLE POSITION SENSOR

VG33E

Diagnostic Procedure (Cont'd)

12 CHECK MASS AIR FLOW SENSOR

1. Reconnect harness connectors disconnected.
2. Start engine and warm it up to normal operating temperature.
3. Check voltage between ECM terminal 54 (Mass air flow sensor signal) and ground.

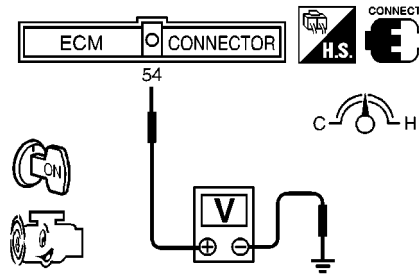


SEF747U

Condition	Voltage V
Ignition switch "ON" (Engine stopped.)	Less than 1.0
Idle (Engine is warmed-up to normal operating temperature.)	1.0 - 1.7
2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.7 - 2.3
Idle to about 4,000 rpm*	1.0 - 1.7 to Approx. 4.0

MTBL0227

4. If the voltage is out of specification, disconnect mass air flow sensor harness connector and connect it again. Then repeat above check.
5. If NG, remove mass air flow sensor from air duct. Check hot wire for damage or dust.

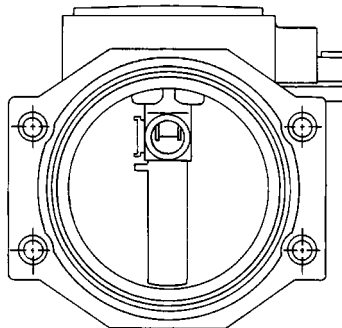

SEF030T


OK or NG

OK	▶	GO TO 13.
NG	▶	Replace mass air flow sensor.

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

13 CHECK CAMSHAFT POSITION SENSOR

1. Install any parts removed.
2. Start engine.
3. Check voltage between ECM terminals 44, 48 and ground, ECM terminal 49 and ground with DC range.

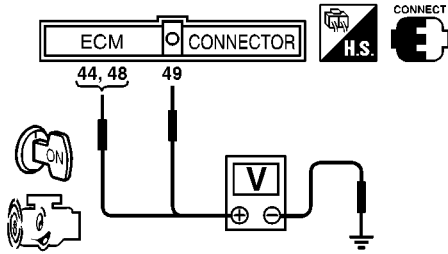
Terminal 44 or 48 and engine ground

Condition	Idle	2,000 rpm
Voltage	0.3 - 0.5V	0.3 - 0.5V
Pulse signal		

Terminal 49 and engine ground

Condition	Idle	2,000 rpm
Voltage	Approximately 2.5V	Approximately 2.5V
Pulse signal		


AEC038B

OK or NG

- | | | |
|----|---|---|
| OK | ▶ | GO TO 14. |
| NG | ▶ | Replace distributor assembly with camshaft position sensor. |

14 CHECK FUEL INJECTOR

1. Disconnect injector harness connector.
2. Check resistance between terminals as shown in the figure.

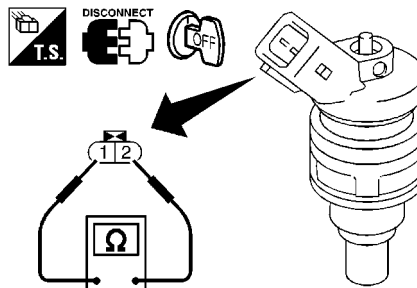
Resistance: 10 - 14Ω [at 25°C (77°F)]

SEF625V

OK or NG

- | | | |
|----|---|------------------------|
| OK | ▶ | GO TO 15. |
| NG | ▶ | Replace fuel injector. |

DTC P0120 THROTTLE POSITION SENSOR

VG33E

Diagnostic Procedure (Cont'd)

15	CHECK THROTTLE POSITION SENSOR SHIELD CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF". 2. Disconnect joint connector-2. 3. Check the following.</p> <ul style="list-style-type: none">● Continuity between joint connector terminal 1 and ground● Joint connector (Refer to "HARNESS LAYOUT", <i>EL-239</i>) <p>Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power. 5. Then reconnect joint connector-2.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 16.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

16	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
	▶ INSPECTION END

DTC P0125 ENGINE COOLANT TEMPERATURE SENSOR (ECTS)



VG33E
Description

Description

NEEC0081

NOTE:

If DTC P0125 (0908) is displayed with P0115 (0103), first perform the trouble diagnosis for DTC P0115. Refer to EC-750.

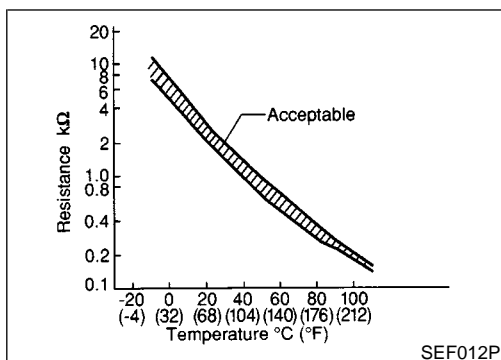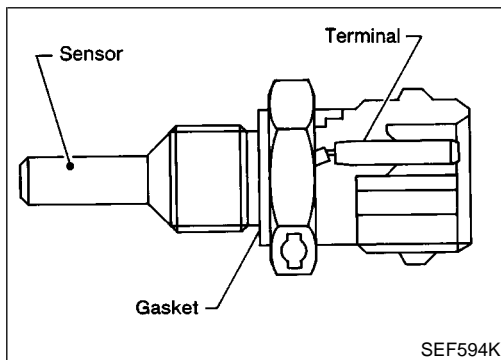

COMPONENT DESCRIPTION

NEEC0081S01

The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

<Reference data>

Engine coolant temperature °C (°F)	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	9.2
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

*: These data are reference values and are measured between ECM terminal 59 (Engine coolant temperature sensor) and ECM terminal 32 (ECM ground).

On Board Diagnosis Logic

NEEC0082

Malfunction is detected when voltage sent to ECM from the sensor is not practical, even when some time has passed after starting the engine, or engine coolant temperature is insufficient for closed loop fuel control.

POSSIBLE CAUSE

NEEC0082S01

- Harness or connectors (High resistance in the circuit)
- Engine coolant temperature sensor
- Thermostat

DTC P0125 ENGINE COOLANT TEMPERATURE SENSOR (ECTS)

VG33E

DTC Confirmation Procedure

4	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF)	XXX rpm
	COOLAN TEMP/S	XXX °C

PEF779U

DTC Confirmation Procedure

=NEEC0083

CAUTION:

Be careful not to overheat engine.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Check that "COOLAN TEMP/S" is above 10°C (50°F).
If it is above 10°C (50°F), the test result will be OK.
If it is below 10°C (50°F), go to following step.
- 4) Start engine and run it for 65 minutes at idle speed.
If "COOLAN TEMP/S" increases to more than 10°C (50°F) within 65 minutes, stop engine because the test result will be OK.
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-772.

With GST

Follow the procedure "With CONSULT-II".

DTC P0125 ENGINE COOLANT TEMPERATURE SENSOR (ECTS)


VG33E

Wiring Diagram

Wiring Diagram

NEEC0084


EC-ECTS-01

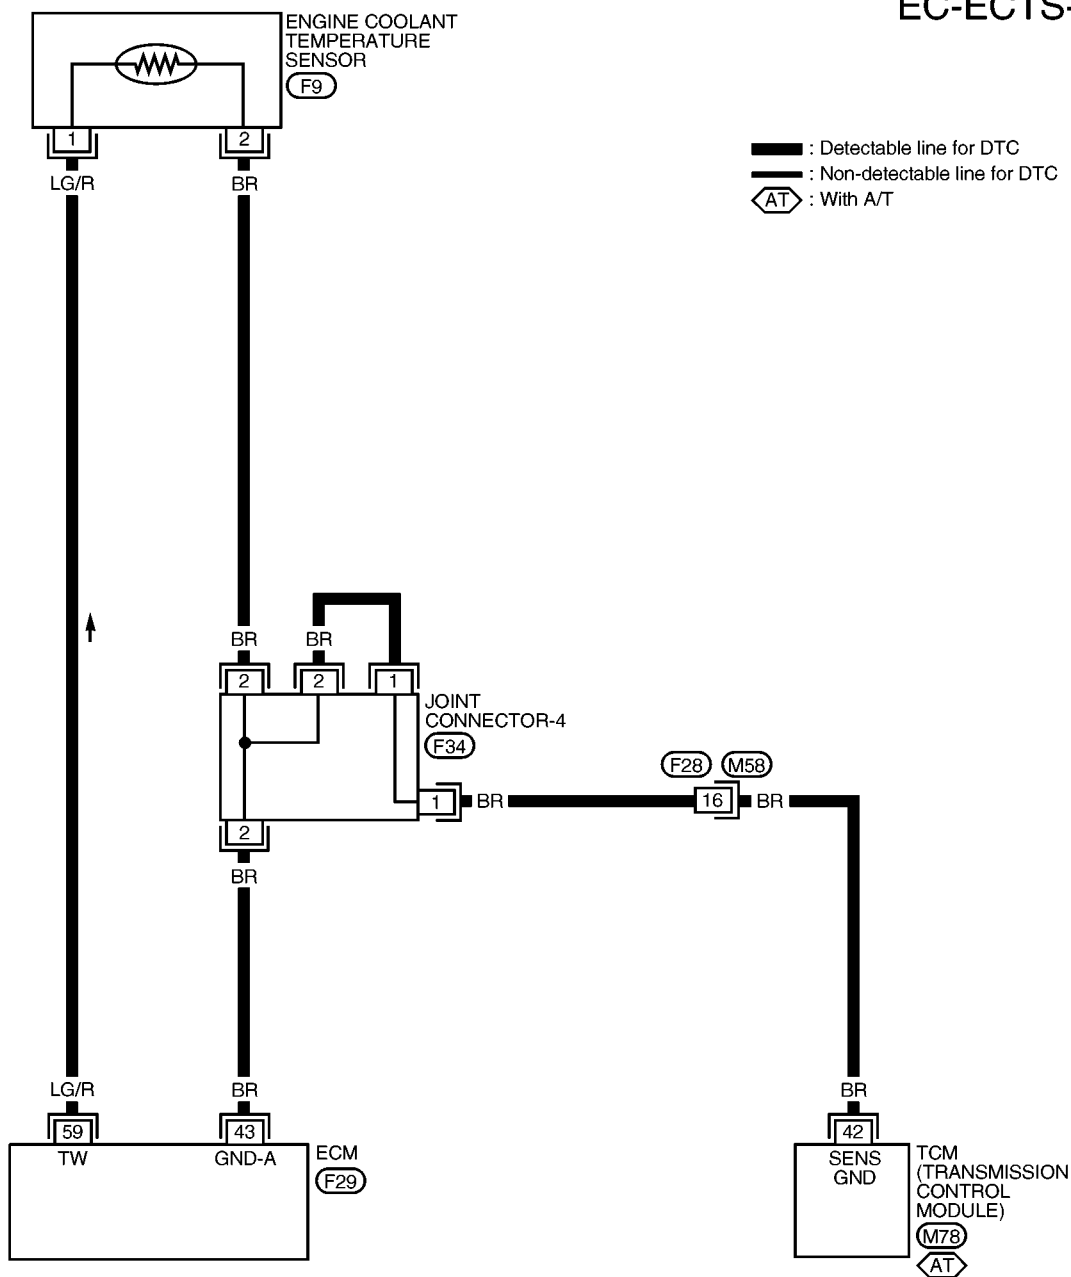

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST



RS
BT

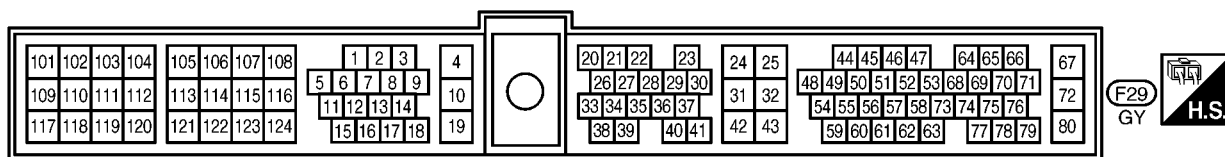

HA
SC

AEC942A

EL
IDX



DTC P0125 ENGINE COOLANT TEMPERATURE SENSOR (ECTS)

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0085

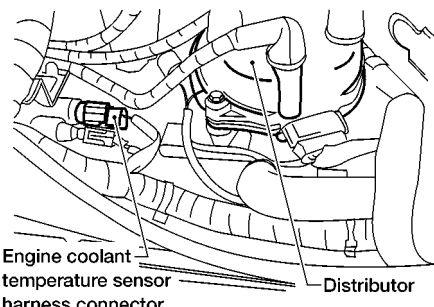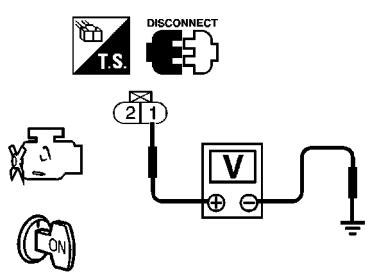1	CHECK ECTS POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect engine coolant temperature sensor harness connector.</p> <div style="text-align: center;">  <p>Engine coolant temperature sensor harness connector Distributor</p> </div> <p style="text-align: right;">AEC643A</p> <p>3. Turn ignition switch "ON". 4. Check voltage between ECTS terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF206W</p> <p>Voltage: Approximately 5V</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 2.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.



2	CHECK ECTS GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Check harness continuity between ECTS terminal 2 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	GO TO 3.

3	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F28, M58 ● Joint connector-4 ● Harness for open or short between ECM and engine coolant temperature sensor ● Harness for open or short between TCM (Transmission Control Module) and engine coolant temperature sensor 		
	▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0125 ENGINE COOLANT TEMPERATURE SENSOR (ECTS)

VG33E

Diagnostic Procedure (Cont'd)

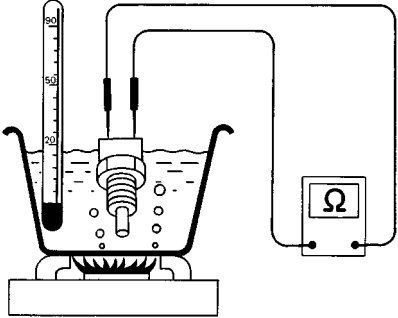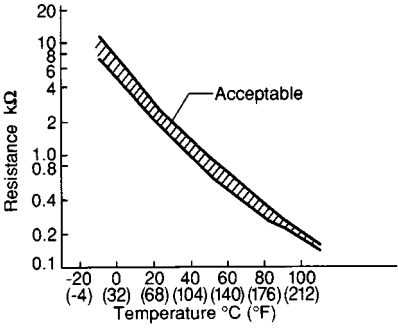4	CHECK ENGINE COOLANT TEMPERATURE SENSOR	<p>Check resistance as shown in the figure.</p> <div style="text-align: center;">  </div> <p><Reference data></p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Temperature °C (°F)</th> <th style="text-align: center;">Resistance kΩ</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">20 (68)</td> <td style="text-align: center;">2.1 - 2.9</td> </tr> <tr> <td style="text-align: center;">50 (122)</td> <td style="text-align: center;">0.68 - 1.00</td> </tr> <tr> <td style="text-align: center;">90 (194)</td> <td style="text-align: center;">0.236 - 0.260</td> </tr> </tbody> </table> <div style="text-align: center; margin-top: 10px;">  </div> <p style="text-align: center;">OK or NG</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 25%; padding: 5px;">OK</td> <td style="width: 5%; text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">GO TO 5.</td> </tr> <tr> <td style="padding: 5px;">NG</td> <td style="text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">Replace engine coolant temperature sensor.</td> </tr> </table>	Temperature °C (°F)	Resistance kΩ	20 (68)	2.1 - 2.9	50 (122)	0.68 - 1.00	90 (194)	0.236 - 0.260	OK	▶	GO TO 5.	NG	▶	Replace engine coolant temperature sensor.	<p style="text-align: center;">SEF152P</p> <p style="text-align: center;">MTBL0229</p> <p style="text-align: center;">SEF012P</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p style="background-color: black; color: white; padding: 2px;">EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>TF</p> <p>PD</p> <p>AX</p> <p>SU</p>
Temperature °C (°F)	Resistance kΩ																	
20 (68)	2.1 - 2.9																	
50 (122)	0.68 - 1.00																	
90 (194)	0.236 - 0.260																	
OK	▶	GO TO 5.																
NG	▶	Replace engine coolant temperature sensor.																


5	CHECK THERMOSTAT OPERATION	<p>When the engine is cold [lower than 70°C (158°F)] condition, grasp lower radiator hose and confirm the engine coolant does not flow.</p> <p style="text-align: center;">OK or NG</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 25%; padding: 5px;">OK</td> <td style="width: 5%; text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">GO TO 6.</td> </tr> <tr> <td style="padding: 5px;">NG</td> <td style="text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">Repair or replace thermostat. Refer to "Thermostat", "ENGINE COOLING SYSTEM", LC-30.</td> </tr> </table>	OK	▶	GO TO 6.	NG	▶	Repair or replace thermostat. Refer to "Thermostat", "ENGINE COOLING SYSTEM", LC-30 .		<p>BR</p> <p>ST</p> <p>RS</p>
OK	▶	GO TO 6.								
NG	▶	Repair or replace thermostat. Refer to "Thermostat", "ENGINE COOLING SYSTEM", LC-30 .								

6	CHECK INTERMITTENT INCIDENT	<p>Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 25%;"></td> <td style="width: 5%; text-align: center;">▶</td> <td style="padding: 5px;">INSPECTION END</td> </tr> </table>		▶	INSPECTION END		<p>HA</p> <p>SC</p> <p>EL</p>
	▶	INSPECTION END					

DTC P0130 (RIGHT, -B1), P0150 (LEFT, -B2) FRONT HO2S (CIRCUIT)


VG33E

Component Description

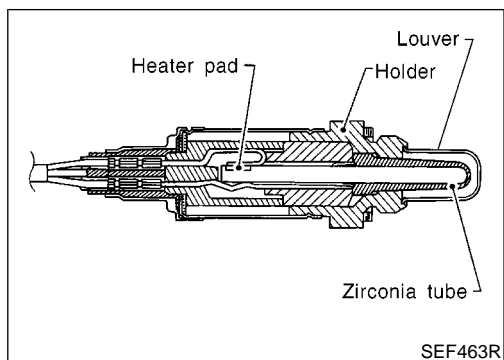

Component Description

The front heated oxygen sensor is placed into the front tube. ^{NEEC0086} It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

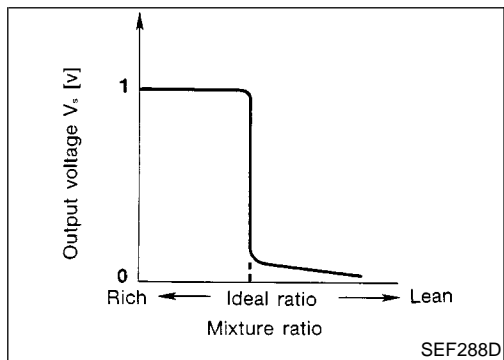

CONSULT-II Reference Value in Data Monitor Mode

NEEC0087

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FR O2 SEN-B1 FR O2 SEN-B2	<ul style="list-style-type: none"> Engine: After warming up Maintaining engine speed at 2,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
FR O2 MNTR-B1 FR O2 MNTR-B2		LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NEEC0088


Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
50	B	Front heated oxygen sensor RH	[Engine is running] <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 2,000 rpm 	0 - Approximately 1.0V
51	G	Front heated oxygen sensor LH		<p>SEF002V</p>

DTC P0130 (RIGHT, -B1), P0150 (LEFT, -B2) FRONT HO2S (CIRCUIT)

VG33E

On Board Diagnosis Logic

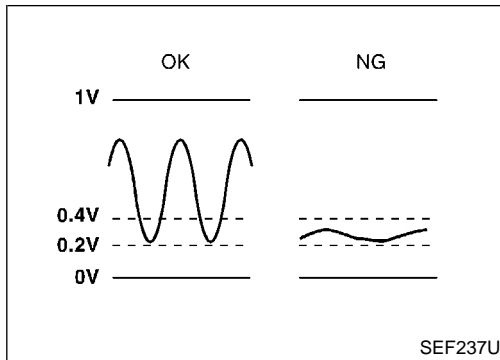

On Board Diagnosis Logic

NEEC0089

Under the condition in which the front heated oxygen sensor signal is not input, the ECM circuits will read a continuous approximately 0.3V. Therefore, for this diagnosis, the time that output voltage is within 200 to 400 mV range is monitored, and the diagnosis checks that this time is not inordinately long.

Malfunction is detected when the voltage from the sensor is constantly approx. 0.3V.

POSSIBLE CAUSE

NEEC0089S01

- Harness or connectors
(The sensor circuit is open or shorted.)
- Front heated oxygen sensor

5	FR O2 SENSOR P0130	
	OUT OF CONDITION	
	MONITOR	
	CMPS~RPM(REF)	XXX rpm
	THRTL POS SEN	XXX V
	B/FUEL SCHDL	XXX msec

PEF138V

5	FR O2 SENSOR P0130	
	TESTING	
	MONITOR	
	CMPS~RPM(REF)	XXX rpm
	THRTL POS SEN	XXX V
	B/FUEL SCHDL	XXX msec

PEF139V

5	FR O2 SENSOR P0130	
	COMPLETED	

PEF210V

DTC Confirmation Procedure

NEEC0090

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

Ⓜ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "FR O2 SEN-B1 (-B2) P0130 (P0150)" of "FRONT O2 SENSOR" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 3) Touch "START".
- 4) Let it idle for at least 3.5 minutes.

NOTE:

Never raise engine speed above 3,200 rpm after this step. If the engine speed limit is exceeded, return to step 4.

- 5) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 10 to 60 seconds.)

CMPS-RPM (POS)	1,800 - 2,600 rpm (A/T models) 1,900 - 2,700 rpm (M/T models)
Vehicle speed	70 - 100 km/h (43 - 62 MPH)
B/FUEL SCHDL	1.6 - 6.5 msec (A/T models) 1.4 - 5.5 msec (M/T models)
Selector lever	Suitable position

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0130 (RIGHT, -B1), P0150 (LEFT, -B2) FRONT HO2S (CIRCUIT)


VG33E

DTC Confirmation Procedure (Cont'd)

If "TESTING" is not displayed after 5 minutes, retry from step 2.

- 6) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-779.

During this test, P1148 and P1168 may be stored in ECM.

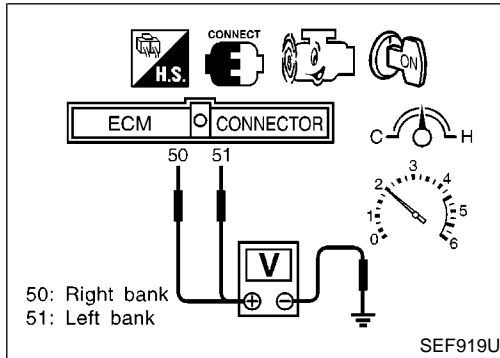

Overall Function Check

Use this procedure to check the overall function of the front heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 50 (right bank sensor signal) or 51 (left bank sensor signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The voltage does not remain in the range of 0.2 - 0.4V.
- 4) If NG, go to "Diagnostic Procedure", EC-779.

DTC P0130 (RIGHT, -B1), P0150 (LEFT, -B2) FRONT HO2S (CIRCUIT)

VG33E
Wiring Diagram


Wiring Diagram

RIGHT BANK





NEEC0092

NEEC0092S01

EC-FRO2RH-01

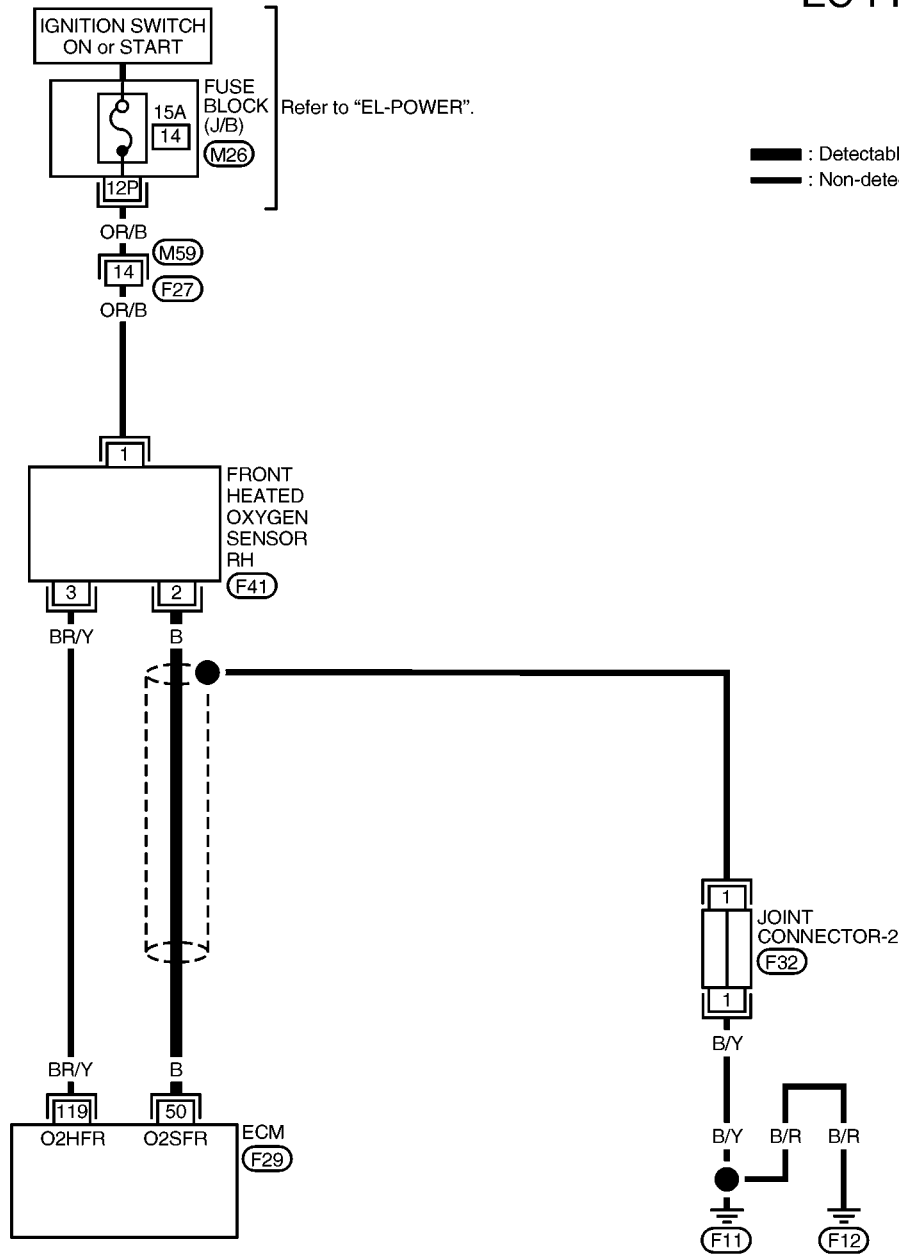

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

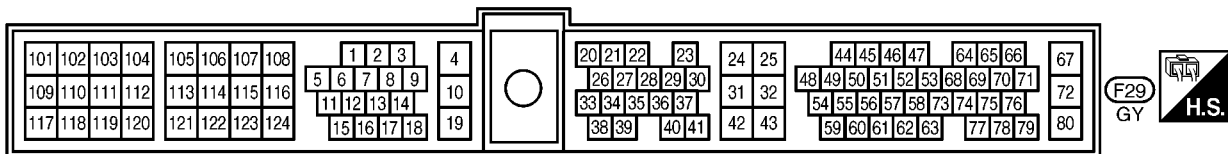

AEC944A

DTC P0130 (RIGHT, -B1), P0150 (LEFT, -B2) FRONT HO2S (CIRCUIT)





VG33E

Wiring Diagram (Cont'd)

LEFT BANK

NEEC0092S02

EC-FRO2LH-01

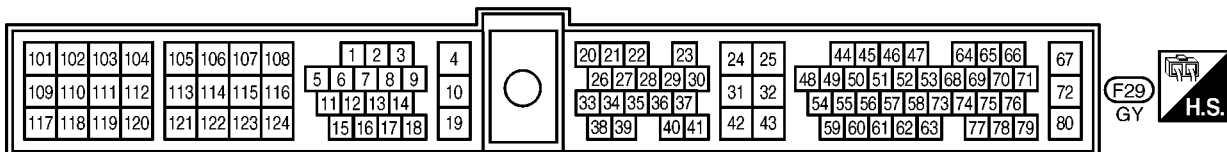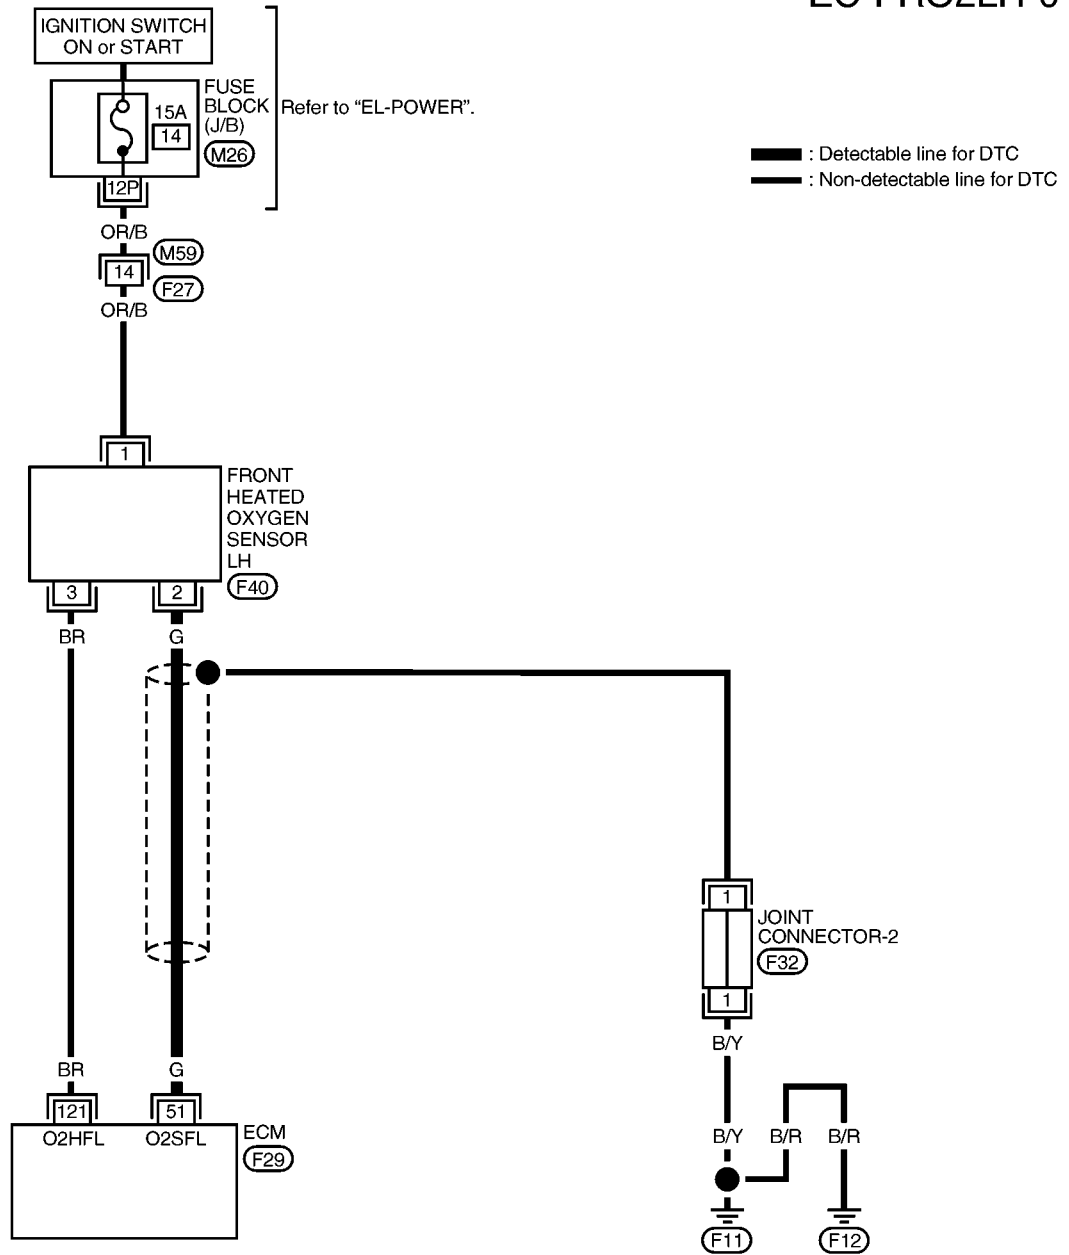

AEC945A



DTC P0130 (RIGHT, -B1), P0150 (LEFT, -B2) FRONT HO2S (CIRCUIT)

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0093

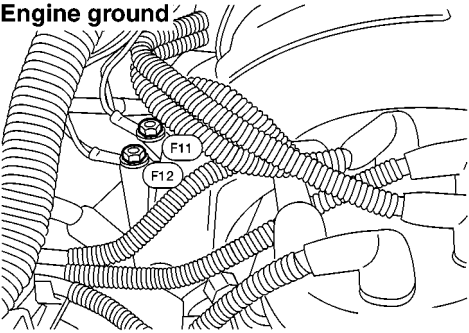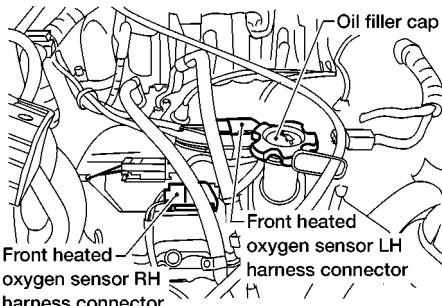1	INSPECTION START
<p>1. Turn ignition switch OFF. 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;">  <p>Engine ground</p> </div> <p>3. Make sure front HO2S harness protector color, and disconnect corresponding front heated oxygen sensor harness connector.</p> <div style="text-align: center;">  <p>Oil filler cap Front heated oxygen sensor LH harness connector Front heated oxygen sensor RH harness connector</p> </div> <p style="text-align: right;">AEC640A AEC644A</p>	
▶ GO TO 2.	

2	CHECK FRONT HO2S INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT																												
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal and FRONT HO2S terminal as follows. Refer to Wiring Diagram.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0130</td> <td style="text-align: center;">50</td> <td style="text-align: center;">2</td> <td style="text-align: center;">Right</td> </tr> <tr> <td>P0150</td> <td style="text-align: center;">51</td> <td style="text-align: center;">2</td> <td style="text-align: center;">Left</td> </tr> </tbody> </table> <p style="text-align: right;">AEC888A</p> <p style="color: blue;">Continuity should exist.</p> <p>3. Check harness continuity between ECM terminal or FRONT HO2S terminal and ground as follows. Refer to Wiring Diagram.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM or sensor</th> <th>Ground</th> </tr> </thead> <tbody> <tr> <td>P0130</td> <td style="text-align: center;">50 or 2</td> <td style="text-align: center;">Ground</td> <td style="text-align: center;">Right</td> </tr> <tr> <td>P0150</td> <td style="text-align: center;">51 or 2</td> <td style="text-align: center;">Ground</td> <td style="text-align: center;">Left</td> </tr> </tbody> </table> <p style="text-align: right;">AEC889A</p> <p style="color: blue;">Continuity should not exist.</p> <p>4. Also check harness for short to power.</p> <p style="text-align: center;">OK or NG</p>		DTC	Terminals		Bank	ECM	Sensor	P0130	50	2	Right	P0150	51	2	Left	DTC	Terminals		Bank	ECM or sensor	Ground	P0130	50 or 2	Ground	Right	P0150	51 or 2	Ground	Left
DTC	Terminals		Bank																										
	ECM	Sensor																											
P0130	50	2	Right																										
P0150	51	2	Left																										
DTC	Terminals		Bank																										
	ECM or sensor	Ground																											
P0130	50 or 2	Ground	Right																										
P0150	51 or 2	Ground	Left																										
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK (With CONSULT-II)</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 3.</td> </tr> <tr> <td>OK (Without CONSULT-II)</td> <td style="text-align: center;">▶</td> <td>GO TO 4.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Repair open circuit or short to ground or short to power in harness or connectors.</td> </tr> </table>		OK (With CONSULT-II)	▶	GO TO 3.	OK (Without CONSULT-II)	▶	GO TO 4.	NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.																			
OK (With CONSULT-II)	▶	GO TO 3.																											
OK (Without CONSULT-II)	▶	GO TO 4.																											
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.																											

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0130 (RIGHT, -B1), P0150 (LEFT, -B2) FRONT HO2S (CIRCUIT)

VG33E

Diagnostic Procedure (Cont'd)

3 CHECK FRONT HEATED OXYGEN SENSOR

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT-II, and select "FR O2 SEN-B1 (-B2)" and "FR O2 MNTR-B1 (-B2)".
3. Hold engine speed at 2,000 rpm under no load during the following steps.
4. Touch "RECORD" on CONSULT-II screen.

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
MAS AIR/FL SE	XXX V
COOLAN TEMP/S	XXX °C
FR O2 SEN-B1	XXX V
FR O2 MNTR-B1	LEAN
INJ PULSE-B1	XXX msec
A/F ALPHA-B1	XXX %
FR O2 HTR-B1	ON

PEF365V

5. Check the following.

- "FR O2 MNTR-B1 (-B2)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below.

Right bank

cycle | 1 | 2 | 3 | 4 | 5 |
FR O2 MNTR-B1 R-L-R-L-R-L-R-L-R-L-R

Left bank


cycle | 1 | 2 | 3 | 4 | 5 |
FR O2 MNTR-B2 R-L-R-L-R-L-R-L-R-L-R

R means FR O2 MNTR-B1(-B2) indicates RICH

L means FR O2 MNTR-B1(-B2) indicates LEAN

SEF702W

- "FR O2 SEN-B1 (-B2)" voltage goes above 0.6V at least once.
- "FR O2 SEN-B1 (-B2)" voltage goes below 0.3V at least once.
- "FR O2 SEN-B1 (-B2)" voltage never exceeds 1.0V.

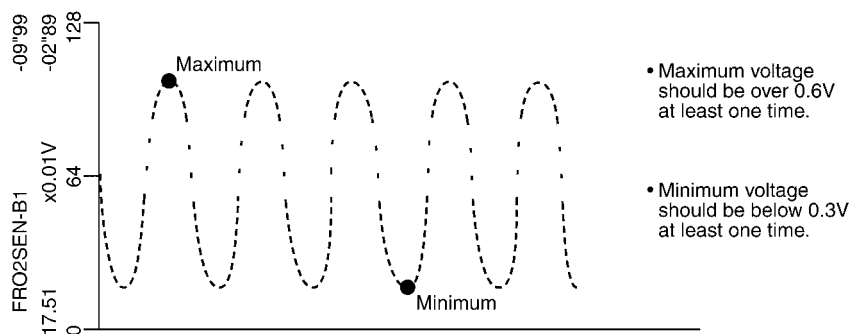

SEF154X

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK	▶	GO TO 5.
NG	▶	Replace malfunctioning front heated oxygen sensor.

DTC P0130 (RIGHT, -B1), P0150 (LEFT, -B2) FRONT HO2S (CIRCUIT)

VG33E

Diagnostic Procedure (Cont'd)

4	CHECK FRONT HEATED OXYGEN SENSOR						
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Set voltmeter probes between ECM terminal 50 (right bank sensor signal) or 51 (left bank sensor signal) and engine ground. 3. Check the following with engine speed held at 2,000 rpm constant under no load. <div style="text-align: center; margin: 10px 0;"> <p style="margin: 0;">50: Right bank 51: Left bank</p> </div> <ul style="list-style-type: none"> ● MIL goes on more than 5 times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR). ● The maximum voltage is over 0.6V at least one time. ● The minimum voltage is below 0.3V at least one time. ● The voltage never exceeds 1.0V. <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: right; margin-right: 20px;">SEF919U</p> <p style="text-align: center; margin: 10px 0;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%; padding: 5px;">OK</td> <td style="width: 10%; text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">GO TO 5.</td> </tr> <tr> <td style="padding: 5px;">NG</td> <td style="text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">Replace malfunctioning front heated oxygen sensor.</td> </tr> </table>		OK	▶	GO TO 5.	NG	▶	Replace malfunctioning front heated oxygen sensor.
OK	▶	GO TO 5.					
NG	▶	Replace malfunctioning front heated oxygen sensor.					

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


5	CHECK FRONT HO2S SHIELD CIRCUIT FOR OPEN AND SHORT						
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect joint connector-2. 3. Check the following. <ul style="list-style-type: none"> ● Continuity between joint connector terminal 1 and ground ● Joint connector (Refer to "HARNES LAYOUT", EL-239.) Continuity should exist. 4. Also check harness for short to ground and short to power. 5. Then reconnect joint connector-2. <p style="text-align: center; margin: 10px 0;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%; padding: 5px;">OK</td> <td style="width: 10%; text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">GO TO 6.</td> </tr> <tr> <td style="padding: 5px;">NG</td> <td style="text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">Repair open circuit or short to ground or short to power in harness or connectors.</td> </tr> </table>		OK	▶	GO TO 6.	NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.
OK	▶	GO TO 6.					
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.					

6	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
▶ INSPECTION END	

DTC P0131 (RIGHT, -B1), P0151 (LEFT, -B2) FRONT HO2S (LEAN SHIFT MONITORING)


VG33E

Component Description

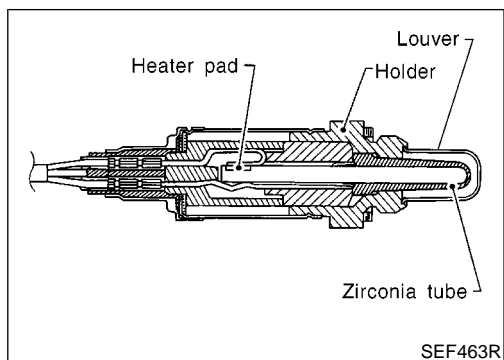

Component Description

The front heated oxygen sensor is placed into the front tube. ^{NEEC0094} It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

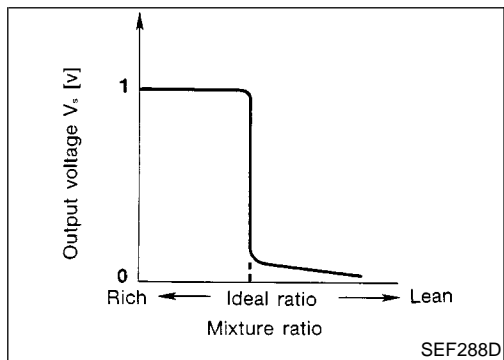

CONSULT-II Reference Value in Data Monitor Mode

NEEC0095

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FR O2 SEN-B1 FR O2 SEN-B2	<ul style="list-style-type: none"> Engine: After warming up Maintaining engine speed at 2,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
FR O2 MNTR-B1 FR O2 MNTR-B2		LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NEEC0096

Specification data are reference values and are measured between each terminal and 32 (ECM ground).


TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
50	B	Front heated oxygen sensor RH	[Engine is running] <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 2,000 rpm 	0 - Approximately 1.0V
51	G	Front heated oxygen sensor LH		

SEF002V

DTC P0131 (RIGHT, -B1), P0151 (LEFT, -B2) FRONT HO2S (LEAN SHIFT MONITORING)

VG33E

On Board Diagnosis Logic

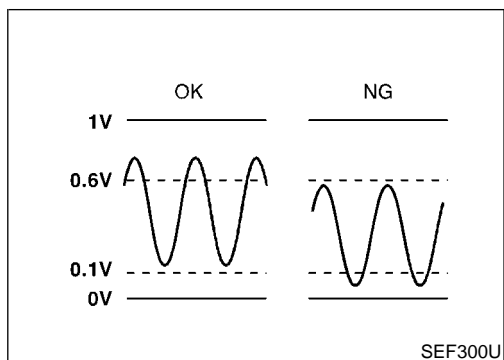

On Board Diagnosis Logic

NEEC0097

To judge the malfunction, the output from the front heated oxygen sensor is monitored to determine whether the “rich” output is sufficiently high and whether the “lean” output is sufficiently low. When both the outputs are shifting to the lean side, the malfunction will be detected.

Malfunction is detected when the maximum and minimum voltage from the sensor are not reached to the specified voltages.

POSSIBLE CAUSE

NEEC0097S01

- Front heated oxygen sensor
- Front heated oxygen sensor heater
- Fuel pressure
- Injectors
- Intake air leaks

GI

MA

EM

LC

EC

FE

CL

MT

DTC Confirmation Procedure

NEEC0098

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Always perform at a temperature above -10°C (14°F).
- Before performing following procedure, confirm that battery voltage is more than 11V at idle.

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0131 (RIGHT, -B1), P0151 (LEFT, -B2) FRONT HO2S (LEAN SHIFT MONITORING)

VG33E

DTC Confirmation Procedure (Cont'd)

6

FR O2 SENSOR P0131	
OUT OF CONDITION	
MONITOR	
CMPS~RPM(REF)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF143V

6


FR O2 SENSOR P0131	
TESTING	
MONITOR	
CMPS~RPM(REF)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF144V

6

FR O2 SENSOR P0131	
COMPLETED	

PEF211V

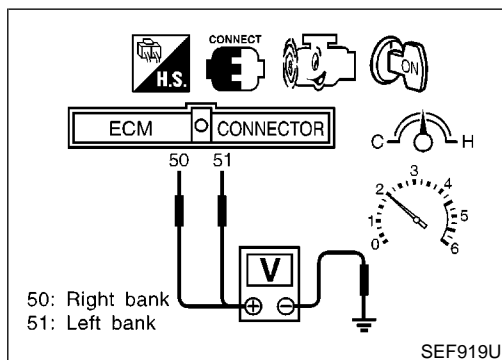

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Stop engine and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "FR O2 SEN-B1 (-B2) P0131 (P0151)" of "FRONT O2 SENSOR" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 4) Touch "START".
- 5) Start engine and let it idle for at least 3.5 minutes.

NOTE:

Never raise engine speed above 3,200 rpm after this step. If the engine speed limit is exceeded, return to step 5.

- 6) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 50 seconds or more.)

CMPS-RPM (POS)	1,800 - 2,800 rpm (A/T models) 1,900 - 3,100 rpm (M/T models)
Vehicle speed	80 - 100 km/h (50 - 62 MPH)
B/FUEL SCHDL	1.6 - 6.5 msec (A/T models) 1.4 - 5.5 msec (M/T models)
Selector lever	Suitable position

If "TESTING" is not displayed after 5 minutes, retry from step 2.

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-785.

Overall Function Check

Use this procedure to check the overall function of the front heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.

NEEC0099

Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 50 (right bank sensor signal) or 51 (left bank sensor signal) and engine ground.
- 3) Check one of the following with engine speed held at 2,000 rpm constant under no load.
 - The maximum voltage is over 0.6V at least one time.
 - The minimum voltage is over 0.1V at least one time.
- 4) If NG, go to "Diagnostic Procedure", EC-785.


DTC P0131 (RIGHT, -B1), P0151 (LEFT, -B2) FRONT HO2S (LEAN SHIFT MONITORING)

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0100

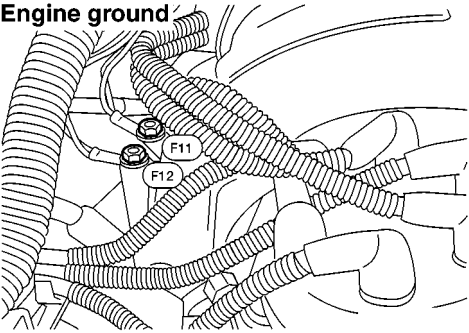1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;"><p>The diagram shows a close-up of the engine ground area. Two screws are labeled F11 and F12. The text 'Engine ground' is written above the screws. Various hoses and wires are visible in the background.</p></div> <p style="text-align: right;">AEC640A</p>	
<p>▶ GO TO 2.</p>	

2	RETIGHTEN FRONT HEATED OXYGEN SENSOR
<p>Loosen and retighten corresponding front heated oxygen sensor.</p> <p>Tightening torque: 40 - 50 N·m (4.1 - 5.1 kg-m, 30 - 37 ft-lb)</p>	
<p>▶ GO TO 3.</p>	

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0131 (RIGHT, -B1), P0151 (LEFT, -B2) FRONT HO2S (LEAN SHIFT MONITORING)

VG33E




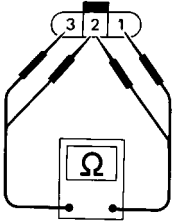
Diagnostic Procedure (Cont'd)

3	CLEAR THE SELF-LEARNING DATA																				
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "CLEAR". <div style="text-align: center; margin: 10px 0;"> <table border="1" style="border-collapse: collapse;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>SELF-LEARN</td><td>B1: XXX %</td></tr> <tr><td>CONTROL</td><td>B2: XXX %</td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>CMPS-RPM(REF)</td><td>XXX rpm</td></tr> <tr><td>COOLAN TEMP/S</td><td>XXX °C</td></tr> <tr><td>FR O2 SEN-B1</td><td>XXX V</td></tr> <tr><td>FR O2 SEN-B2</td><td>XXX V</td></tr> <tr><td>A/F ALPHA-B1</td><td>XXX %</td></tr> <tr><td>A/F ALPHA-B2</td><td>XXX %</td></tr> </table> </div> <p style="text-align: right; margin-right: 20px;">PEF921U</p> <ol style="list-style-type: none"> 4. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0171 or P0174 detected? Is it difficult to start engine? 		ACTIVE TEST		SELF-LEARN	B1: XXX %	CONTROL	B2: XXX %	MONITOR		CMPS-RPM(REF)	XXX rpm	COOLAN TEMP/S	XXX °C	FR O2 SEN-B1	XXX V	FR O2 SEN-B2	XXX V	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %
ACTIVE TEST																					
SELF-LEARN	B1: XXX %																				
CONTROL	B2: XXX %																				
MONITOR																					
CMPS-RPM(REF)	XXX rpm																				
COOLAN TEMP/S	XXX °C																				
FR O2 SEN-B1	XXX V																				
FR O2 SEN-B2	XXX V																				
A/F ALPHA-B1	XXX %																				
A/F ALPHA-B2	XXX %																				
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC No. 0102 is displayed in Diagnostic Test Mode II. 6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-651. 7. Make sure DTC No. 0505 is displayed in Diagnostic Test Mode II. 8. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC 0115 or 0210 detected? Is it difficult to start engine? <p style="text-align: center;">Yes or No</p>																					
Yes	▶	Perform trouble diagnosis for DTC P0171, P0174. Refer to EC-870.																			
No	▶	GO TO 4.																			

DTC P0131 (RIGHT, -B1), P0151 (LEFT, -B2) FRONT HO2S (LEAN SHIFT MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

4	CHECK FRONT HEATED OXYGEN SENSOR HEATER	<p>Check resistance between FRONT HO2S terminals 3 and 1.</p> <div style="display: flex; justify-content: space-around; align-items: center;">     </div> <p style="text-align: right;">AEC158A</p> <p>Resistance: 2.3 - 4.3Ω at 25°C (77°F)</p> <p>Check continuity between FRONT HO2S terminals 2 and 1, 3 and 2.</p> <p>Continuity should not exist.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center;">OK or NG</p>	GI MA EM LC EC FE CL MT AT TF
	OK (With CONSULT-II) ▶	GO TO 5.	
	OK (Without CONSULT-II) ▶	GO TO 6.	
	NG ▶	Replace malfunctioning front heated oxygen sensor.	

DTC P0131 (RIGHT, -B1), P0151 (LEFT, -B2) FRONT HO2S (LEAN SHIFT MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

5 CHECK FRONT HEATED OXYGEN SENSOR

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT-II, and select "FR O2 SEN-B1 (-B2)" and "FR O2 MNTR-B1 (-B2)".
3. Hold engine speed at 2,000 rpm under no load during the following steps.
4. Touch "RECORD" on CONSULT-II screen.

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
MAS AIR/FL SE	XXX V
COOLAN TEMP/S	XXX °C
FR O2 SEN-B1	XXX V
FR O2 MNTR-B1	LEAN
INJ PULSE-B1	XXX msec
A/F ALPHA-B1	XXX %
FR O2 HTR-B1	ON

PEF365V

5. Check the following.

- "FR O2 MNTR-B1 (-B2)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below.

Right bank

cycle | 1 | 2 | 3 | 4 | 5 |
FR O2 MNTR-B1 R-L-R-L-R-L-R-L-R-L-R

Left bank


cycle | 1 | 2 | 3 | 4 | 5 |
FR O2 MNTR-B2 R-L-R-L-R-L-R-L-R-L-R

R means FR O2 MNTR-B1(-B2) indicates RICH

L means FR O2 MNTR-B1(-B2) indicates LEAN

SEF702W

- "FR O2 SEN-B1 (-B2)" voltage goes above 0.6V at least once.
- "FR O2 SEN-B1 (-B2)" voltage goes below 0.3V at least once.
- "FR O2 SEN-B1 (-B2)" voltage never exceeds 1.0V.

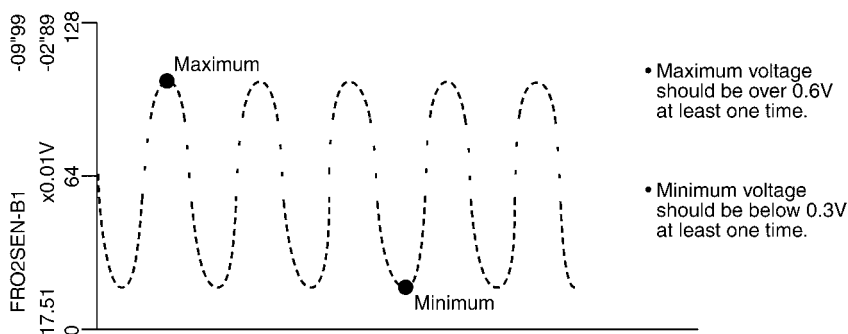

SEF154X

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK



GO TO 7.

NG




Replace malfunctioning front heated oxygen sensor.

DTC P0131 (RIGHT, -B1), P0151 (LEFT, -B2) FRONT HO2S (LEAN SHIFT MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

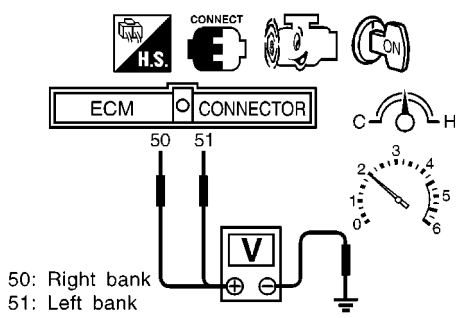6	CHECK FRONT HEATED OXYGEN SENSOR
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Set voltmeter probes between ECM terminal 50 (right bank sensor signal) or 51 (left bank sensor signal) and engine ground. 3. Check the following with engine speed held at 2,000 rpm constant under no load. 	
	
<ul style="list-style-type: none"> ● MIL goes on more than 5 times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR). ● The maximum voltage is over 0.6V at least one time. ● The minimum voltage is below 0.3V at least one time. ● The voltage never exceeds 1.0V. <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: right;">SEF919U</p>	
OK or NG	
OK	▶ GO TO 7.
NG	▶ Replace malfunctioning front heated oxygen sensor.

7	CHECK FRONT HO2S SHIELD CIRCUIT FOR OPEN AND SHORT
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect joint connector. 3. For circuit, refer to "DTC P0130 (RIGHT BANK, -B1), P0150 (LEFT BANK, -B2) FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (CIRCUIT)", EC-774. 4. Check the following. <ul style="list-style-type: none"> ● Continuity between joint connector terminal 1 and ground ● Joint connector (Refer to "HARNES LAYOUT", EL-239.) <p style="margin-left: 20px;">Continuity should exist.</p> 5. Also check harness for short to ground and short to power. 6. Then reconnect joint connector. 	
OK or NG	
OK	▶ GO TO 8.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.


8	CHECK INTERMITTENT INCIDENT
<p>Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.</p> <p>For circuit, refer to "DTC P0130 (RIGHT BANK, -B1), P0150 (LEFT BANK, -B2) FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (CIRCUIT)", EC-774.</p>	
▶	INSPECTION END

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0132 (RIGHT, -B1), P0152 (LEFT, -B2) FRONT HO2S (RICH SHIFT MONITORING)


VG33E

Component Description

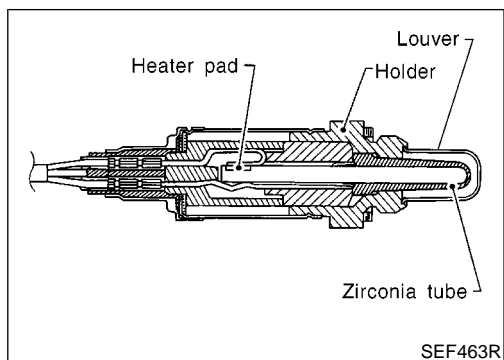

Component Description

The front heated oxygen sensor is placed into the front tube. ^{NEEC0101} It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

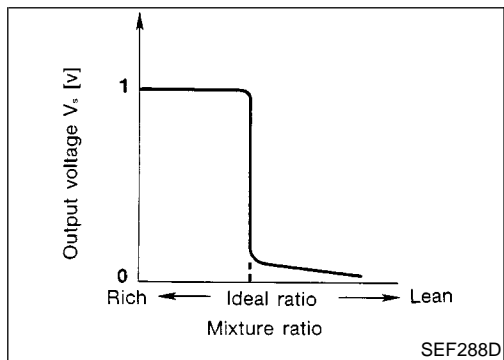

CONSULT-II Reference Value in Data Monitor Mode

NEEC0102

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FR O2 SEN-B1 FR O2 SEN-B2	<ul style="list-style-type: none"> Engine: After warming up Maintaining engine speed at 2,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
FR O2 MNTR-B1 FR O2 MNTR-B2		LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NEEC0103


Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
50	B	Front heated oxygen sensor RH	[Engine is running] <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 2,000 rpm 	0 - Approximately 1.0V
51	G	Front heated oxygen sensor LH		<p>SEF002V</p>

DTC P0132 (RIGHT, -B1), P0152 (LEFT, -B2) FRONT HO2S (RICH SHIFT MONITORING)

VG33E

On Board Diagnosis Logic

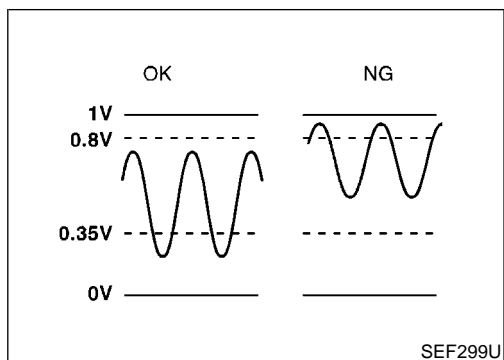

On Board Diagnosis Logic

NEEC0104

To judge the malfunction, the output from the front heated oxygen sensor is monitored to determine whether the “rich” output is sufficiently high. The “lean” output is sufficiently low. When both the outputs are shifting to the rich side, the malfunction will be detected.

Malfunction is detected when the maximum and minimum voltages from the sensor are beyond the specified voltages.

POSSIBLE CAUSE

NEEC0104S01

- Front heated oxygen sensor
- Fuel pressure
- Injectors
- Front heated oxygen sensor heater

GI

MA

EM

LC

EC

FE

CL

MT

DTC Confirmation Procedure

NEEC0105

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Always perform at a temperature above -10°C (14°F).
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0132 (RIGHT, -B1), P0152 (LEFT, -B2) FRONT HO2S (RICH SHIFT MONITORING)

VG33E

DTC Confirmation Procedure (Cont'd)

6

FR O2 SENSOR P0132	
OUT OF CONDITION	
MONITOR	
CMPS~RPM(REF)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF146V

6


FR O2 SENSOR P0132	
TESTING	
MONITOR	
CMPS~RPM(REF)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF147V

6

FR O2 SENSOR P0132	
COMPLETED	

PEF212V

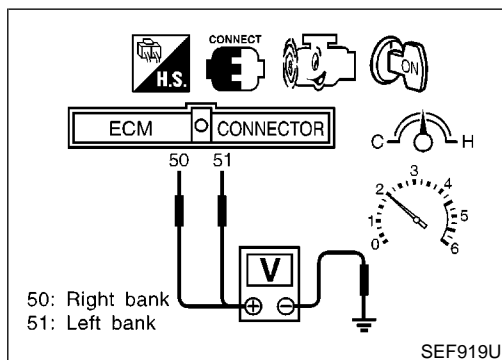

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Stop engine and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "FR O2 SEN-B1 (-B2) P0132 (P0152)" of "FRONT O2 SENSOR" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 4) Touch "START".
- 5) Start engine and let it idle for at least 3.5 minutes.

NOTE:

Never raise engine speed above 3,200 rpm after this step. If the engine speed limit is exceeded, return to step 5.

- 6) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 50 seconds or more.)

CMPS-RPM (POS)	1,800 - 2,800 rpm (A/T models) 1,900 - 3,100 rpm (M/T models)
Vehicle speed	80 - 100 km/h (50 - 62 MPH)
B/FUEL SCHDL	1.6 - 6.5 msec (A/T models) 1.4 - 5.5 msec (M/T models)
Selector lever	Suitable position

If "TESTING" is not displayed after 5 minutes, retry from step 2.

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-793.

Overall Function Check

Use this procedure to check the overall function of the front heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.

NEECO106

Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 50 (right bank sensor signal) or 51 (left bank sensor signal) and engine ground.
- 3) Check one of the following with engine speed held at 2,000 rpm constant under no load.
 - The maximum voltage is below 0.8V at least one time.
 - The minimum voltage is below 0.35V at least one time.
- 4) If NG, go to "Diagnostic Procedure", EC-793.


DTC P0132 (RIGHT, -B1), P0152 (LEFT, -B2) FRONT HO2S (RICH SHIFT MONITORING)

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0107

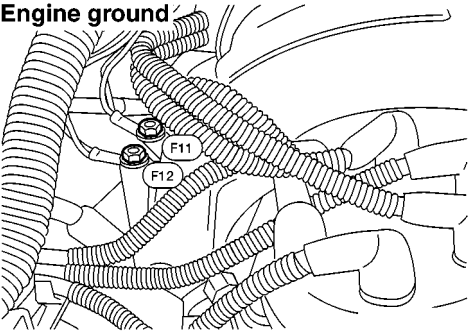1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;"><p>The diagram shows a close-up of the engine ground area. Two screws are labeled F11 and F12. The text 'Engine ground' is written above the screws. Various hoses and wires are visible in the background.</p></div> <p style="text-align: right;">AEC640A</p>	
<p>▶ GO TO 2.</p>	

2	RETIGHTEN FRONT HEATED OXYGEN SENSOR
<p>Loosen and retighten corresponding front heated oxygen sensor.</p> <p>Tightening torque: 40 - 50 N·m (4.1 - 5.1 kg·m, 30 - 37 ft·lb)</p>	
<p>▶ GO TO 3.</p>	

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0132 (RIGHT, -B1), P0152 (LEFT, -B2) FRONT HO2S (RICH SHIFT MONITORING)

VG33E

Diagnostic Procedure (Cont'd)




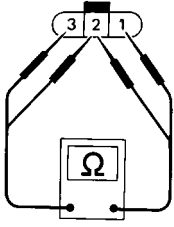
3	CLEAR THE SELF-LEARNING DATA																				
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "CLEAR". 																					
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr><td colspan="2" style="text-align: center;">ACTIVE TEST</td></tr> <tr><td style="text-align: center;">SELF-LEARN</td><td style="text-align: center;">B1: XXX %</td></tr> <tr><td style="text-align: center;">CONTROL</td><td style="text-align: center;">B2: XXX %</td></tr> <tr><td colspan="2" style="text-align: center;">MONITOR</td></tr> <tr><td style="text-align: center;">CMPS-RPM(REF)</td><td style="text-align: center;">XXX rpm</td></tr> <tr><td style="text-align: center;">COOLAN TEMP/S</td><td style="text-align: center;">XXX °C</td></tr> <tr><td style="text-align: center;">FR O2 SEN-B1</td><td style="text-align: center;">XXX V</td></tr> <tr><td style="text-align: center;">FR O2 SEN-B2</td><td style="text-align: center;">XXX V</td></tr> <tr><td style="text-align: center;">A/F ALPHA-B1</td><td style="text-align: center;">XXX %</td></tr> <tr><td style="text-align: center;">A/F ALPHA-B2</td><td style="text-align: center;">XXX %</td></tr> </table>		ACTIVE TEST		SELF-LEARN	B1: XXX %	CONTROL	B2: XXX %	MONITOR		CMPS-RPM(REF)	XXX rpm	COOLAN TEMP/S	XXX °C	FR O2 SEN-B1	XXX V	FR O2 SEN-B2	XXX V	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %
ACTIVE TEST																					
SELF-LEARN	B1: XXX %																				
CONTROL	B2: XXX %																				
MONITOR																					
CMPS-RPM(REF)	XXX rpm																				
COOLAN TEMP/S	XXX °C																				
FR O2 SEN-B1	XXX V																				
FR O2 SEN-B2	XXX V																				
A/F ALPHA-B1	XXX %																				
A/F ALPHA-B2	XXX %																				
PEF921U																					
<ol style="list-style-type: none"> 4. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0172 or P0175 detected? Is it difficult to start engine? 																					
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC No. 0102 is displayed in Diagnostic Test Mode II. 6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-651. 7. Make sure DTC No. 0505 is displayed in Diagnostic Test Mode II. 8. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC 0114 or 0209 detected? Is it difficult to start engine? <p style="text-align: center;">Yes or No</p>																					
Yes	▶	Perform trouble diagnosis for DTC P0172, P0175. Refer to EC-878.																			
No	▶	GO TO 4.																			

4	CHECK FRONT HO2S CONNECTOR FOR WATER	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect front heated oxygen sensor harness connector. 3. Check connectors for water. Water should not exist. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	Repair or replace harness or connectors.

DTC P0132 (RIGHT, -B1), P0152 (LEFT, -B2) FRONT HO2S (RICH SHIFT MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

5	CHECK FRONT HEATED OXYGEN SENSOR HEATER	<p>Check resistance between FRONT HO2S terminals 3 and 1.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">    </div> <div style="text-align: center;">  </div> </div> <p style="text-align: right; margin-top: 20px;">AEC158A</p> <p>Resistance: 2.3 - 4.3Ω at 25°C (77°F)</p> <p>Check continuity between FRONT HO2S terminals 2 and 1, 3 and 2.</p> <p>Continuity should not exist.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center; margin-top: 10px;">OK or NG</p>	GI MA EM LC EC FE CL MT AT TF
	OK (With CONSULT-II) ►	GO TO 6.	
	OK (Without CONSULT-II) ►	GO TO 7.	
	NG ►	Replace malfunctioning front heated oxygen sensor.	

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0132 (RIGHT, -B1), P0152 (LEFT, -B2) FRONT HO2S (RICH SHIFT MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

6 CHECK FRONT HEATED OXYGEN SENSOR

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT-II, and select "FR O2 SEN-B1 (-B2)" and "FR O2 MNTR-B1 (-B2)".
3. Hold engine speed at 2,000 rpm under no load during the following steps.
4. Touch "RECORD" on CONSULT-II screen.

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
MAS AIR/FL SE	XXX V
COOLAN TEMP/S	XXX °C
FR O2 SEN-B1	XXX V
FR O2 MNTR-B1	LEAN
INJ PULSE-B1	XXX msec
A/F ALPHA-B1	XXX %
FR O2 HTR-B1	ON

PEF365V

5. Check the following.

- "FR O2 MNTR-B1 (-B2)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below.

Right bank

cycle | 1 | 2 | 3 | 4 | 5 |

FR O2 MNTR-B1 R-L-R-L-R-L-R-L-R-L-R

Left bank

cycle | 1 | 2 | 3 | 4 | 5 |


FR O2 MNTR-B2 R-L-R-L-R-L-R-L-R-L-R

R means FR O2 MNTR-B1(-B2) indicates RICH

L means FR O2 MNTR-B1(-B2) indicates LEAN

SEF702W

- "FR O2 SEN-B1 (-B2)" voltage goes above 0.6V at least once.
- "FR O2 SEN-B1 (-B2)" voltage goes below 0.3V at least once.
- "FR O2 SEN-B1 (-B2)" voltage never exceeds 1.0V.

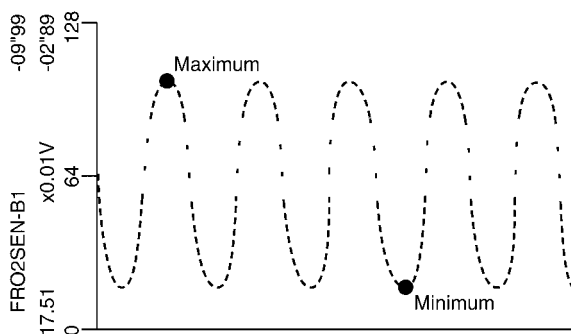

- Maximum voltage should be over 0.6V at least one time.

- Minimum voltage should be below 0.3V at least one time.

SEF154X

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK



GO TO 8.

NG



Replace malfunctioning front heated oxygen sensor.

DTC P0132 (RIGHT, -B1), P0152 (LEFT, -B2) FRONT HO2S (RICH SHIFT MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

7	CHECK FRONT HEATED OXYGEN SENSOR
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Set voltmeter probes between ECM terminal 50 (right bank sensor signal) or 51 (left bank sensor signal) and engine ground. 3. Check the following with engine speed held at 2,000 rpm constant under no load. <div style="text-align: center; margin: 10px 0;"> </div> <ul style="list-style-type: none"> ● MIL goes on more than 5 times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR). ● The maximum voltage is over 0.6V at least one time. ● The minimum voltage is below 0.3V at least one time. ● The voltage never exceeds 1.0V. <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: right; margin-right: 20px;">SEF919U</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 8.
NG	▶ Replace malfunctioning front heated oxygen sensor.

8	CHECK FRONT HO2S SHIELD CIRCUIT FOR OPEN AND SHORT
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect joint connector. For circuit, refer to "DTC P0130 (RIGHT BANK, -B1), P0150 (LEFT BANK, -B2) FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (CIRCUIT)", EC-774. 3. Check the following. <ul style="list-style-type: none"> ● Continuity between joint connector terminal 1 and ground ● Joint connector (Refer to "HARNES LAYOUT", EL-239.) <p style="margin-left: 20px; color: blue;">Continuity should exist.</p> 4. Also check harness for short to ground and short to power. 5. Then reconnect joint connector. <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 9.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.


9	CHECK INTERMITTENT INCIDENT
<p>Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717. For circuit, refer to "DTC P0130 (RIGHT BANK, -B1), P0150 (LEFT BANK, -B2) FRONT HEATED OXYGEN SENSOR (FRONT HO2S) (CIRCUIT)", EC-774.</p>	
▶	INSPECTION END

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
HA
SC
EL
IDX

DTC P0133 (RIGHT, -B1), P0153 (LEFT, -B2) FRONT HO2S (RESPONSE MONITORING)


VG33E

Component Description

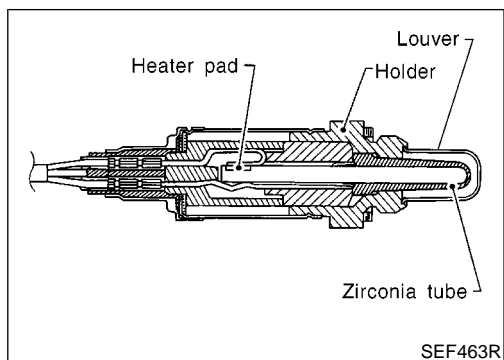

Component Description

The front heated oxygen sensor is placed into the front tube. ^{NEEC0108} It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

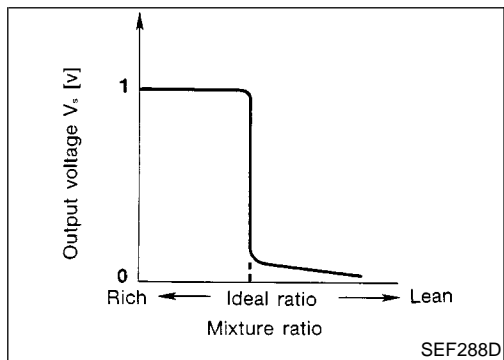

CONSULT-II Reference Value in Data Monitor Mode

NEEC0109

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FR O2 SEN-B1 FR O2 SEN-B2	<ul style="list-style-type: none"> Engine: After warming up Maintaining engine speed at 2,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
FR O2 MNTR-B1 FR O2 MNTR-B2		LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NEEC0110


Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
50	B	Front heated oxygen sensor RH	[Engine is running] <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 2,000 rpm 	0 - Approximately 1.0V
51	G	Front heated oxygen sensor LH		<p>SEF002V</p>

DTC P0133 (RIGHT, -B1), P0153 (LEFT, -B2) FRONT HO2S (RESPONSE MONITORING)

VG33E

On Board Diagnosis Logic

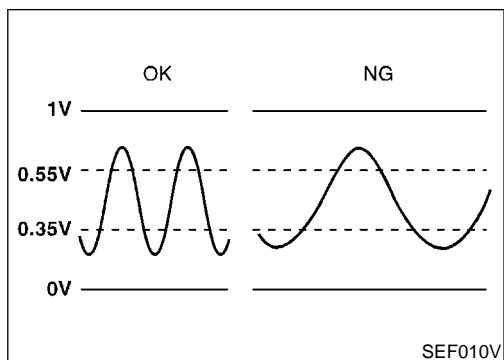

On Board Diagnosis Logic

To judge the malfunction of front heated oxygen sensor, this diagnosis measures response time of front heated oxygen sensor signal. The time is compensated by engine operating (speed and load), fuel feedback control constant, and front heated oxygen sensor temperature index. Judgment is based on whether the compensated time (front heated oxygen sensor cycling time index) is inordinately long or not.

Malfunction is detected when the response of the voltage signal from the sensor takes more than the specified time.

POSSIBLE CAUSE

- Harness or connectors
(The sensor circuit is open or shorted.)
- Front heated oxygen sensor
- Front heated oxygen sensor heater
- Fuel pressure
- Injectors
- Intake air leaks
- Exhaust gas leaks
- PCV valve
- Mass air flow sensor

DTC Confirmation Procedure

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Always perform at a temperature above -10°C (14°F).
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0133 (RIGHT, -B1), P0153 (LEFT, -B2) FRONT HO2S (RESPONSE MONITORING)

VG33E

DTC Confirmation Procedure (Cont'd)

6

FR O2 SENSOR P0133	
OUT OF CONDITION	
MONITOR	
CMPS~RPM(REF)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF148V

6


FR O2 SENSOR P0133	
TESTING	
MONITOR	
CMPS~RPM(REF)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF149V

6

FR O2 SENSOR P0133	
COMPLETED	

PEF213V

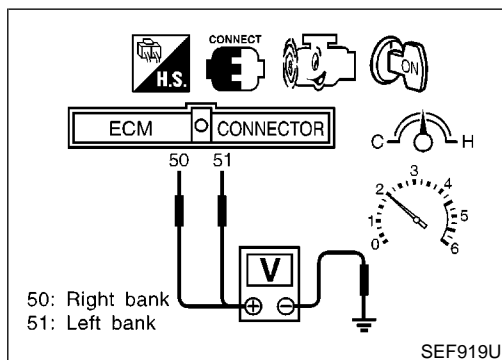

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Stop engine and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "FR O2 SEN-B1 (-B2) P0133 (P0153)" of "FRONT O2 SENSOR" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 4) Touch "START".
- 5) Start engine and let it idle for at least 3.5 minutes.

NOTE:

Never raise engine speed above 3,200 rpm after this step. If the engine speed limit is exceeded, return to step 5.

- 6) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 40 to 50 seconds.)

CMPS-RPM (POS)	1,800 - 2,800 rpm (A/T models) 1,900 - 3,300 rpm (M/T models)
Vehicle speed	80 - 120 km/h (50 - 75 MPH)
B/FUEL SCHDL	1.6 - 6.5 msec (A/T models) 1.4 - 5.5 msec (M/T models)
Selector lever	Suitable position

If "TESTING" is not displayed after 5 minutes, retry from step 2.

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-803.

Overall Function Check

Use this procedure to check the overall function of the front heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed. NEEC0113

Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 50 (right bank sensor signal) or 51 (left bank sensor signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - MIL goes on more than 5 times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR).
- 4) If NG, go to "Diagnostic Procedure", EC-803.

DTC P0133 (RIGHT, -B1), P0153 (LEFT, -B2) FRONT HO2S (RESPONSE MONITORING)

VG33E

Wiring Diagram






Wiring Diagram

NEEC0114

NEEC0114S01

RIGHT BANK

EC-FRO2RH-01

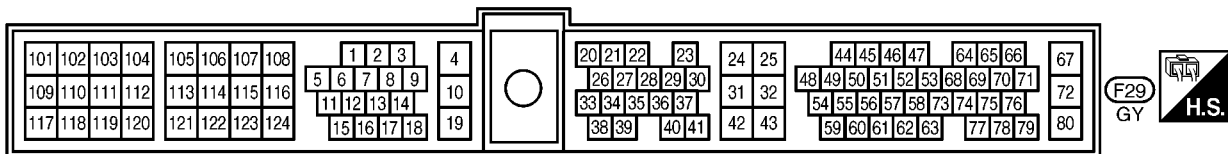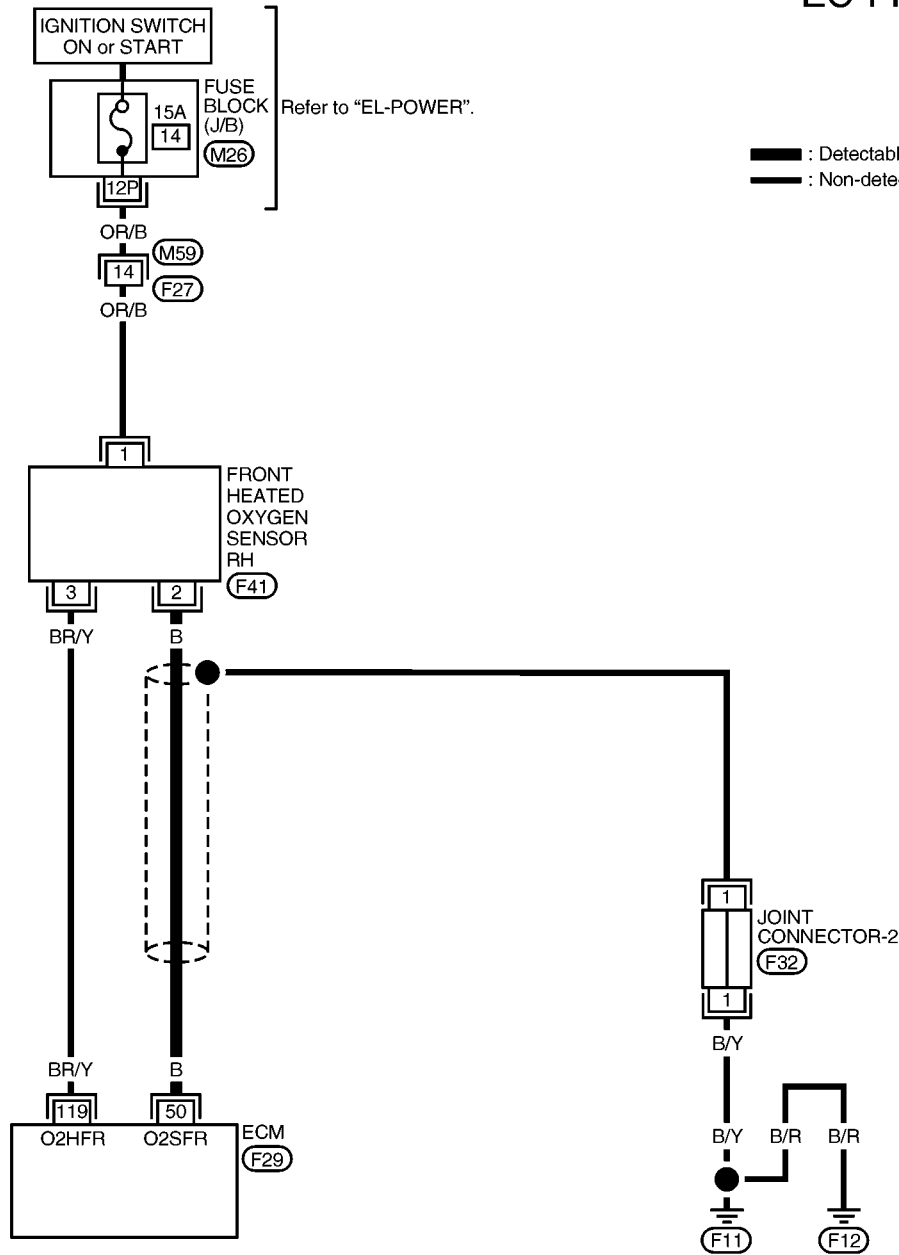

AEC944A

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0133 (RIGHT, -B1), P0153 (LEFT, -B2) FRONT HO2S (RESPONSE MONITORING)






VG33E

Wiring Diagram (Cont'd)

LEFT BANK

NEEC0114S02

EC-FRO2LH-01

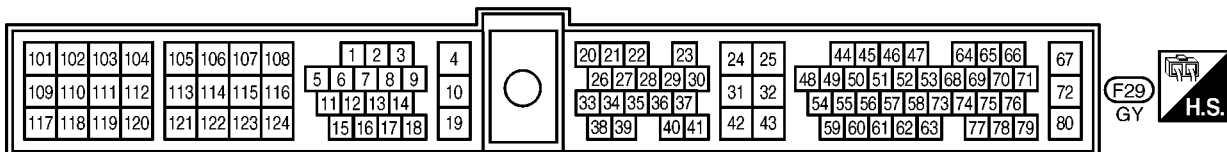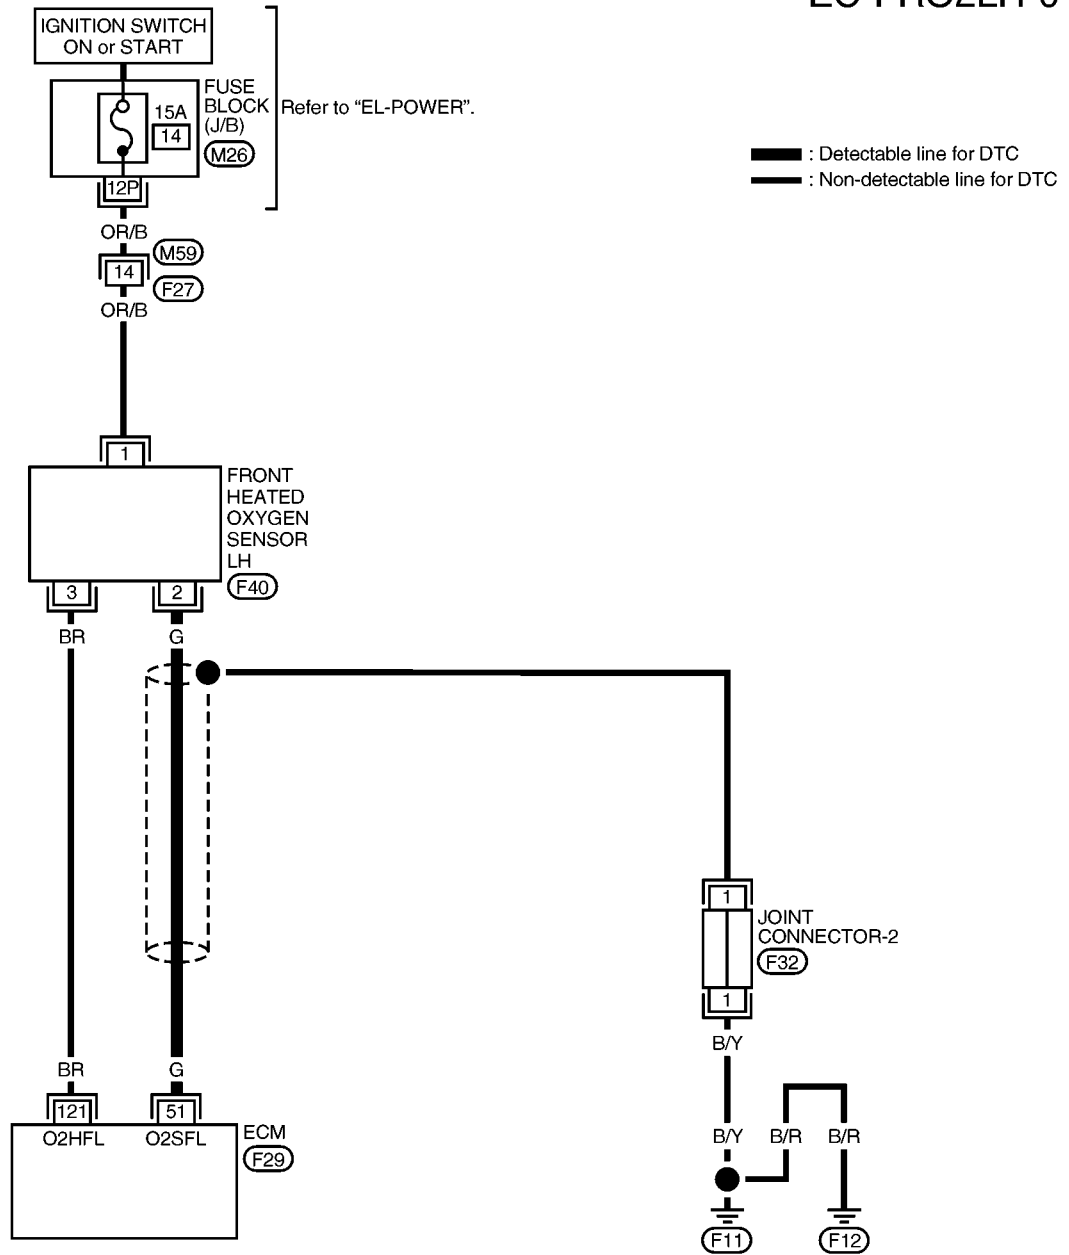

AEC945A


DTC P0133 (RIGHT, -B1), P0153 (LEFT, -B2) FRONT HO2S (RESPONSE MONITORING)

VG33E


Diagnostic Procedure

Diagnostic Procedure

NEEC0115

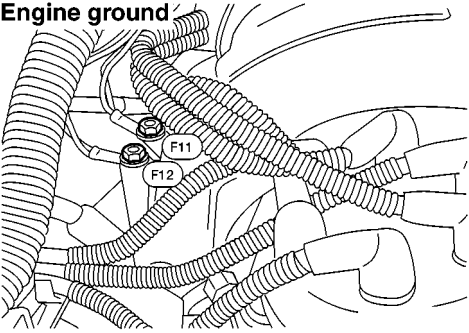1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;">  <p>Engine ground</p> </div> <p style="text-align: right;">AEC640A</p>	
▶ GO TO 2.	

2	RETIGHTEN FRONT HEATED OXYGEN SENSOR
<p>Loosen and retighten corresponding front heated oxygen sensor.</p> <p>Tightening torque: 40 - 50 N·m (4.1 - 5.1 kg·m, 30 - 37 ft·lb)</p>	
▶ GO TO 3.	

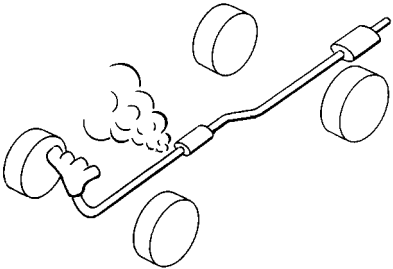3	CHECK FOR EXHAUST AIR LEAK
<p>1. Start engine and run it at idle. 2. Listen for an exhaust air leak before three way catalyst.</p> <div style="text-align: center;">  </div> <p style="text-align: center;">OK or NG</p>	
SEF099P	
OK	▶ GO TO 4.
NG	▶ Repair or replace.

4	CHECK FOR INTAKE AIR LEAK
<p>Listen for an intake air leak after the mass air flow sensor.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ Repair or replace.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0133 (RIGHT, -B1), P0153 (LEFT, -B2) FRONT HO2S (RESPONSE MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

5	CLEAR THE SELF-LEARNING DATA																				
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "CLEAR". <div style="text-align: center; margin: 10px 0;"> <table border="1" style="border-collapse: collapse; width: 150px; margin: 0 auto;"> <tr><td colspan="2" style="text-align: center;">ACTIVE TEST</td></tr> <tr><td style="text-align: center;">SELF-LEARN</td><td style="text-align: center;">B1: XXX %</td></tr> <tr><td style="text-align: center;">CONTROL</td><td style="text-align: center;">B2: XXX %</td></tr> <tr><td colspan="2" style="text-align: center;">MONITOR</td></tr> <tr><td style="text-align: center;">CMPS-RPM(REF)</td><td style="text-align: center;">XXX rpm</td></tr> <tr><td style="text-align: center;">COOLAN TEMP/S</td><td style="text-align: center;">XXX °C</td></tr> <tr><td style="text-align: center;">FR O2 SEN-B1</td><td style="text-align: center;">XXX V</td></tr> <tr><td style="text-align: center;">FR O2 SEN-B2</td><td style="text-align: center;">XXX V</td></tr> <tr><td style="text-align: center;">A/F ALPHA-B1</td><td style="text-align: center;">XXX %</td></tr> <tr><td style="text-align: center;">A/F ALPHA-B2</td><td style="text-align: center;">XXX %</td></tr> </table> </div> <p style="text-align: right; margin-right: 20px;">PEF921U</p> <ol style="list-style-type: none"> 4. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0171, P0172, P0174 or P0175 detected? Is it difficult to start engine? 		ACTIVE TEST		SELF-LEARN	B1: XXX %	CONTROL	B2: XXX %	MONITOR		CMPS-RPM(REF)	XXX rpm	COOLAN TEMP/S	XXX °C	FR O2 SEN-B1	XXX V	FR O2 SEN-B2	XXX V	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %
ACTIVE TEST																					
SELF-LEARN	B1: XXX %																				
CONTROL	B2: XXX %																				
MONITOR																					
CMPS-RPM(REF)	XXX rpm																				
COOLAN TEMP/S	XXX °C																				
FR O2 SEN-B1	XXX V																				
FR O2 SEN-B2	XXX V																				
A/F ALPHA-B1	XXX %																				
A/F ALPHA-B2	XXX %																				
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC No. 0102 is displayed in Diagnostic Test Mode II. 6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-651. 7. Make sure DTC No. 0505 is displayed in Diagnostic Test Mode II. 8. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC 0114, 0115, 0209 or 0210 detected? Is it difficult to start engine? <p style="text-align: center; margin: 10px 0;">Yes or No</p>																					
Yes	▶ Perform trouble diagnosis for DTC P0171, P0174 or P0172, P0175. Refer to EC-870, 878.																				
No	▶ GO TO 6.																				


DTC P0133 (RIGHT, -B1), P0153 (LEFT, -B2) FRONT HO2S (RESPONSE MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

6 CHECK FRONT HO2S INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch "OFF".
2. Disconnect corresponding front heated oxygen sensor harness connector.

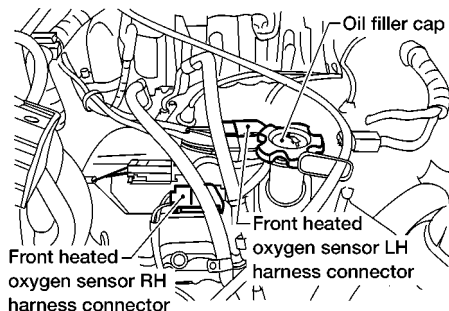

3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminal and FRONT HO2S terminal as follows. Refer to Wiring Diagram.

DTC	Terminals		Bank
	ECM	Sensor	
P0133	50	2	Right
P0153	51	2	Left

Continuity should exist.

5. Check harness continuity between ECM terminal or FRONT HO2S terminal and ground as follows. Refer to Wiring Diagram.

DTC	Terminals		Bank
	ECM or sensor	Ground	
P0133	50 or 2	Ground	Right
P0153	51 or 2	Ground	Left

Continuity should not exist.

6. Also check harness for short to power.

OK or NG




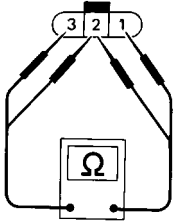
OK	▶	GO TO 7.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0133 (RIGHT, -B1), P0153 (LEFT, -B2) FRONT HO2S (RESPONSE MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

7	CHECK FRONT HEATED OXYGEN SENSOR HEATER
<p>Check resistance between FRONT HO2S terminals 3 and 1.</p> <div style="display: flex; justify-content: space-around; align-items: center; margin: 10px 0;"> <div style="text-align: center;">    </div> <div style="text-align: center;">  </div> </div> <p style="text-align: right; margin-top: 10px;">AEC158A</p> <p>Resistance: 2.3 - 4.3Ω at 25°C (77°F)</p> <p>Check continuity between FRONT HO2S terminals 2 and 1, 3 and 2.</p> <p>Continuity should not exist.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center; margin-top: 10px;">OK or NG</p>	
OK	▶ GO TO 8.
NG	▶ Replace malfunctioning front heated oxygen sensor.


DTC P0133 (RIGHT, -B1), P0153 (LEFT, -B2) FRONT HO2S (RESPONSE MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

8 CHECK MASS AIR FLOW SENSOR

1. Reconnect harness connectors disconnected.
2. Start engine and warm it up to normal operating temperature.
3. Check voltage between ECM terminal 54 (Mass air flow sensor signal) and ground.

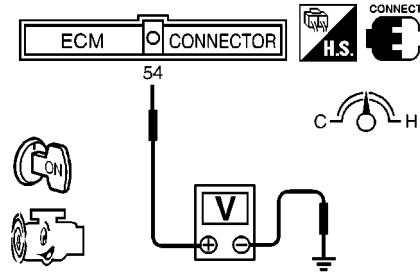


SEF747U

Condition	Voltage V
Ignition switch "ON" (Engine stopped.)	Less than 1.0
Idle (Engine is warmed-up to normal operating temperature.)	1.0 - 1.7
2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.7 - 2.3
Idle to about 4,000 rpm*	1.0 - 1.7 to Approx. 4.0

MTBL0227

4. If the voltage is out of specification, disconnect mass air flow sensor harness connector and connect it again. Then repeat above check.
5. If NG, remove mass air flow sensor from air duct. Check hot wire for damage or dust.

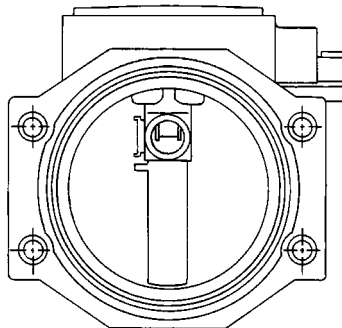

SEF030T

OK or NG


OK	▶	GO TO 9.
NG	▶	Replace mass air flow sensor.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0133 (RIGHT, -B1), P0153 (LEFT, -B2) FRONT HO2S (RESPONSE MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

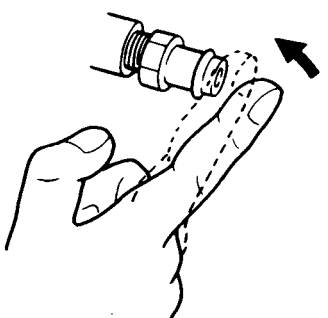9	CHECK PCV VALVE
<p>With engine running at idle, remove PCV valve ventilation hose from PCV valve; if the valve is working properly, a hissing noise will be heard as air passes through it and a strong vacuum should be felt immediately when a finger is placed over valve inlet.</p>	
 <p style="text-align: right;">SEC137A</p> <p style="text-align: center;">OK or NG</p>	
OK (With CONSULT-II) ▶	GO TO 10.
OK (Without CONSULT-II) ▶	GO TO 11.
NG ▶	Replace PCV valve.

DTC P0133 (RIGHT, -B1), P0153 (LEFT, -B2) FRONT HO2S (RESPONSE MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

10 CHECK FRONT HEATED OXYGEN SENSOR

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT-II, and select "FR O2 SEN-B1 (-B2)" and "FR O2 MNTR-B1 (-B2)".
3. Hold engine speed at 2,000 rpm under no load during the following steps.
4. Touch "RECORD" on CONSULT-II screen.

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
MAS AIR/FL SE	XXX V
COOLAN TEMP/S	XXX °C
FR O2 SEN-B1	XXX V
FR O2 MNTR-B1	LEAN
INJ PULSE-B1	XXX msec
A/F ALPHA-B1	XXX %
FR O2 HTR-B1	ON

PEF365V

5. Check the following.

- "FR O2 MNTR-B1 (-B2)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below.

Right bank

cycle | 1 | 2 | 3 | 4 | 5 |

FR O2 MNTR-B1 R-L-R-L-R-L-R-L-R-L-R

Left bank

cycle | 1 | 2 | 3 | 4 | 5 |


FR O2 MNTR-B2 R-L-R-L-R-L-R-L-R-L-R

R means FR O2 MNTR-B1(-B2) indicates RICH

L means FR O2 MNTR-B1(-B2) indicates LEAN

SEF702W

- "FR O2 SEN-B1 (-B2)" voltage goes above 0.6V at least once.
- "FR O2 SEN-B1 (-B2)" voltage goes below 0.3V at least once.
- "FR O2 SEN-B1 (-B2)" voltage never exceeds 1.0V.

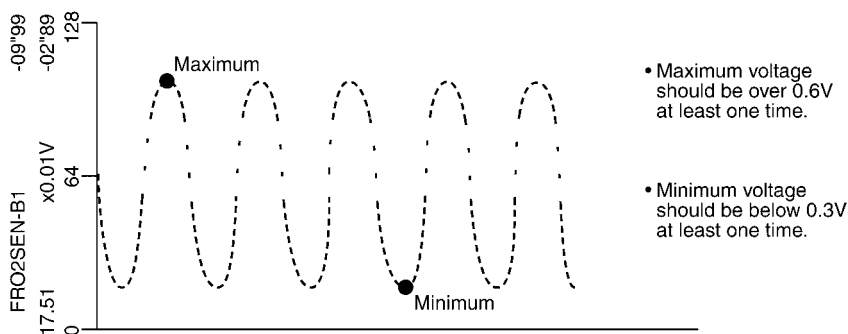

SEF154X

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK	▶	GO TO 12.
NG	▶	Replace malfunctioning front heated oxygen sensor.

DTC P0133 (RIGHT, -B1), P0153 (LEFT, -B2) FRONT HO2S (RESPONSE MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

11	CHECK FRONT HEATED OXYGEN SENSOR						
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Set voltmeter probes between ECM terminal 50 (right bank sensor signal) or 51 (left bank sensor signal) and engine ground. 3. Check the following with engine speed held at 2,000 rpm constant under no load. <div style="text-align: center; margin: 10px 0;"> <p style="margin: 0;">50: Right bank 51: Left bank</p> </div> <p style="text-align: right; margin-right: 20px;">SEF919U</p> <ul style="list-style-type: none"> ● MIL goes on more than 5 times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR). ● The maximum voltage is over 0.6V at least one time. ● The minimum voltage is below 0.3V at least one time. ● The voltage never exceeds 1.0V. <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center; margin: 10px 0;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%; padding: 2px;">OK</td> <td style="width: 10%; text-align: center; padding: 2px;">▶</td> <td style="padding: 2px;">GO TO 12.</td> </tr> <tr> <td style="padding: 2px;">NG</td> <td style="text-align: center; padding: 2px;">▶</td> <td style="padding: 2px;">Replace malfunctioning front heated oxygen sensor.</td> </tr> </table>		OK	▶	GO TO 12.	NG	▶	Replace malfunctioning front heated oxygen sensor.
OK	▶	GO TO 12.					
NG	▶	Replace malfunctioning front heated oxygen sensor.					


12	CHECK FRONT HO2S SHIELD CIRCUIT FOR OPEN AND SHORT						
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF" 2. Disconnect joint connector. 3. Check the following. <ul style="list-style-type: none"> ● Continuity between joint connector terminal 1 and ground ● Joint connector (Refer to "HARNES LAYOUT", <i>EL-239</i>.) <p style="margin: 0; color: blue;">Continuity should exist.</p> 4. Also check harness for short to ground and short to power. 5. Then reconnect joint connector. <p style="text-align: center; margin: 10px 0;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%; padding: 2px;">OK</td> <td style="width: 10%; text-align: center; padding: 2px;">▶</td> <td style="padding: 2px;">GO TO 13.</td> </tr> <tr> <td style="padding: 2px;">NG</td> <td style="text-align: center; padding: 2px;">▶</td> <td style="padding: 2px;">Repair open circuit or short to ground or short to power in harness or connectors.</td> </tr> </table>		OK	▶	GO TO 13.	NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.
OK	▶	GO TO 13.					
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.					

13	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.		
	▶	INSPECTION END

DTC P0134 (RIGHT, -B1), P0154 (LEFT, -B2) FRONT HO2S (HIGH VOLTAGE)

VG33E

Component Description

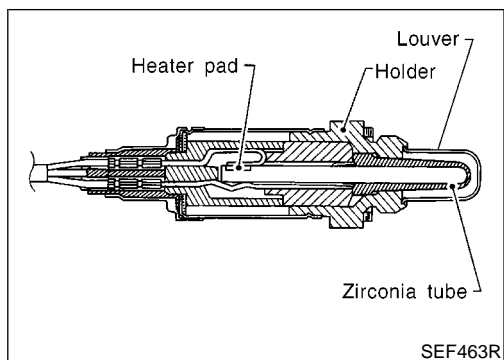


SEF463R

Component Description

The front heated oxygen sensor is placed into the front tube. It detects the amount of oxygen in the exhaust gas compared to the outside air. The front heated oxygen sensor has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The front heated oxygen sensor signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

NEEC0116

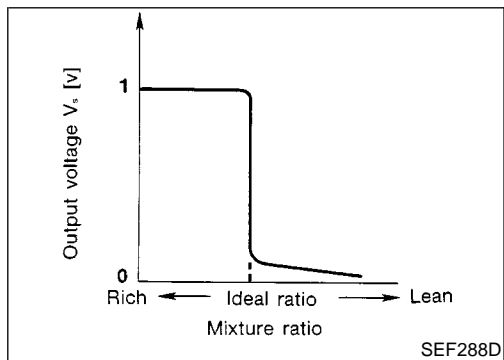

SEF288D

CONSULT-II Reference Value in Data Monitor Mode

NEEC0117

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FR O2 SEN-B1 FR O2 SEN-B2	<ul style="list-style-type: none"> Engine: After warming up Maintaining engine speed at 2,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
FR O2 MNTR-B1 FR O2 MNTR-B2		LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NEEC0118

Specification data are reference values and are measured between each terminal and 32 (ECM ground).


TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
50	B	Front heated oxygen sensor RH	[Engine is running] <ul style="list-style-type: none"> After warming up to normal operating temperature and engine speed is 2,000 rpm 	0 - Approximately 1.0V
51	G	Front heated oxygen sensor LH		

SEF002V

DTC P0134 (RIGHT, -B1), P0154 (LEFT, -B2) FRONT HO2S (HIGH VOLTAGE)

VG33E

On Board Diagnosis Logic

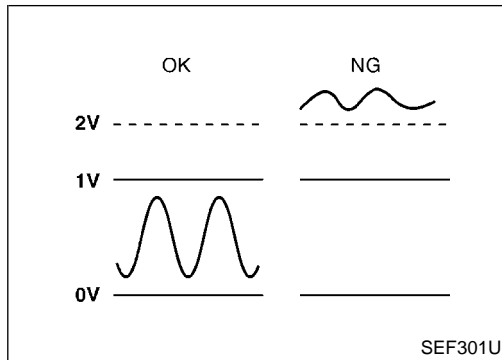

SEF301U

On Board Diagnosis Logic

NEEC0119

To judge the malfunction, the diagnosis checks that the front heated oxygen sensor output is not inordinately high. Malfunction is detected when an excessively high voltage from the sensor is sent to ECM.

POSSIBLE CAUSE

NEEC0119S01

- Harness or connectors
(The sensor circuit is open or shorted.)
- Front heated oxygen sensor

5

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
COOLAN TEMP/S	XXX °C

PEF361V

DTC Confirmation Procedure

NEEC0120

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "DATA MONITOR" mode with CONSULT-II.
- 5) Restart engine and let it idle for 20 seconds.
- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-815.

With GST

Follow the procedure "With CONSULT-II".

No Tools

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Restart engine and let it idle for 20 seconds.
- 4) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 5) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-815.

- When using GST, "DTC Confirmation Procedure" should be performed twice as much as when using CONSULT-II or ECM (Diagnostic Test Mode II) because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II or ECM (Diagnostic Test Mode II) is recommended.

DTC P0134 (RIGHT, -B1), P0154 (LEFT, -B2) FRONT HO2S (HIGH VOLTAGE)

VG33E

Wiring Diagram


Wiring Diagram

NEEC0121





NEEC0121S01

RIGHT BANK

EC-FRO2RH-01

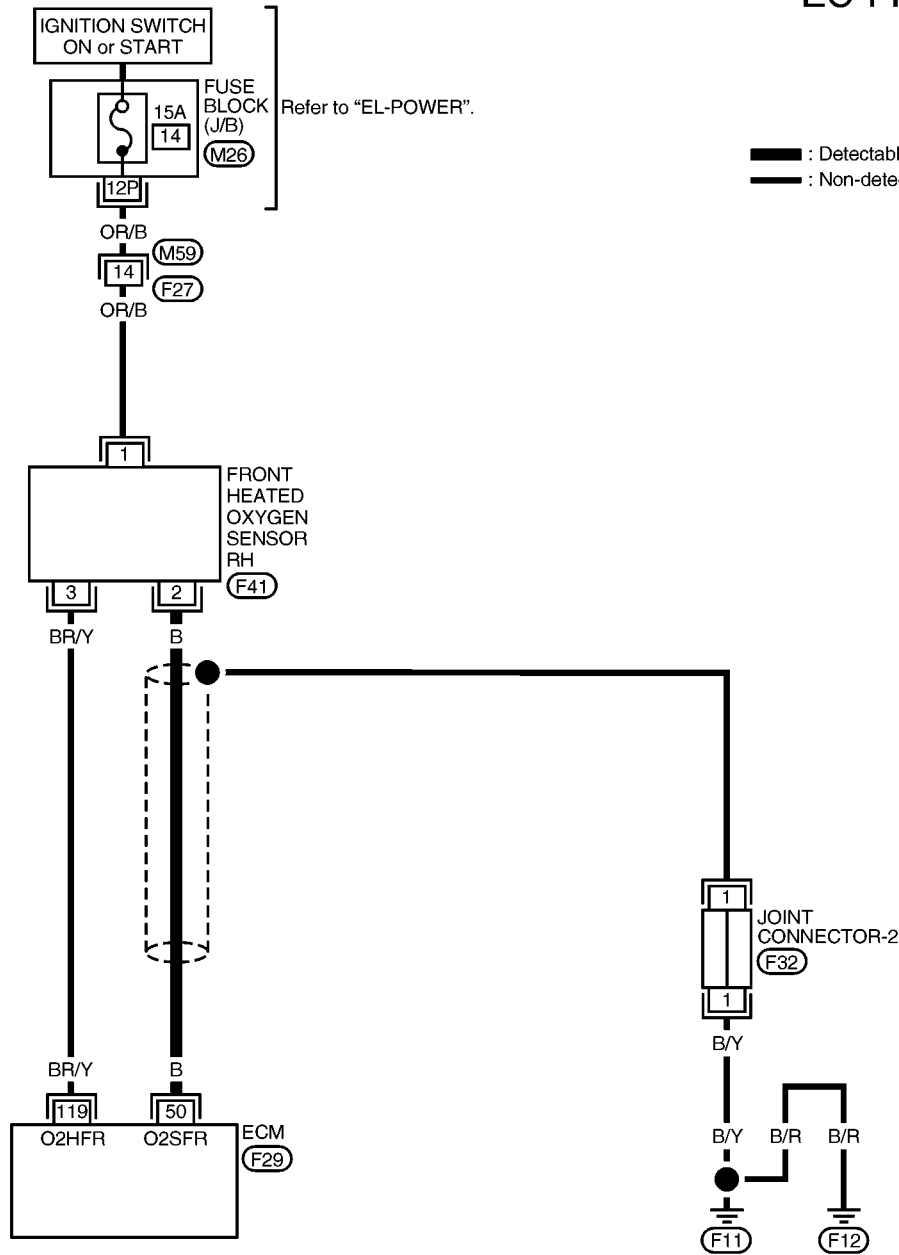

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

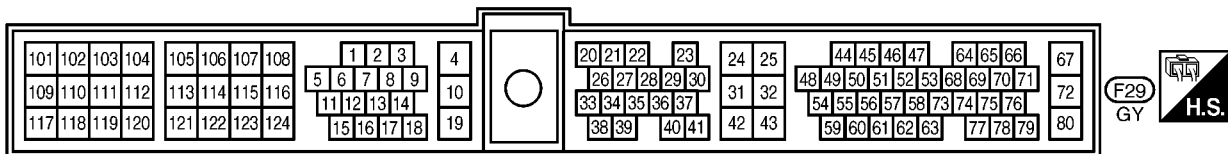

AEC944A

DTC P0134 (RIGHT, -B1), P0154 (LEFT, -B2) FRONT HO2S (HIGH VOLTAGE)






VG33E

Wiring Diagram (Cont'd)

LEFT BANK

NEEC0121S02

EC-FRO2LH-01

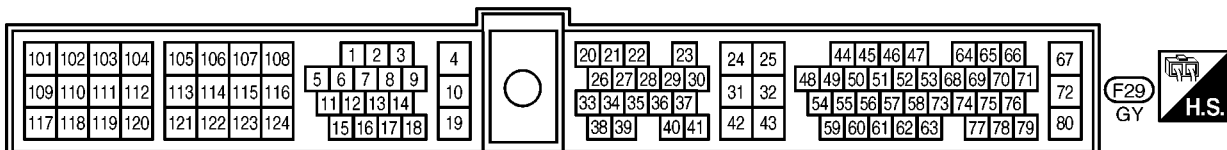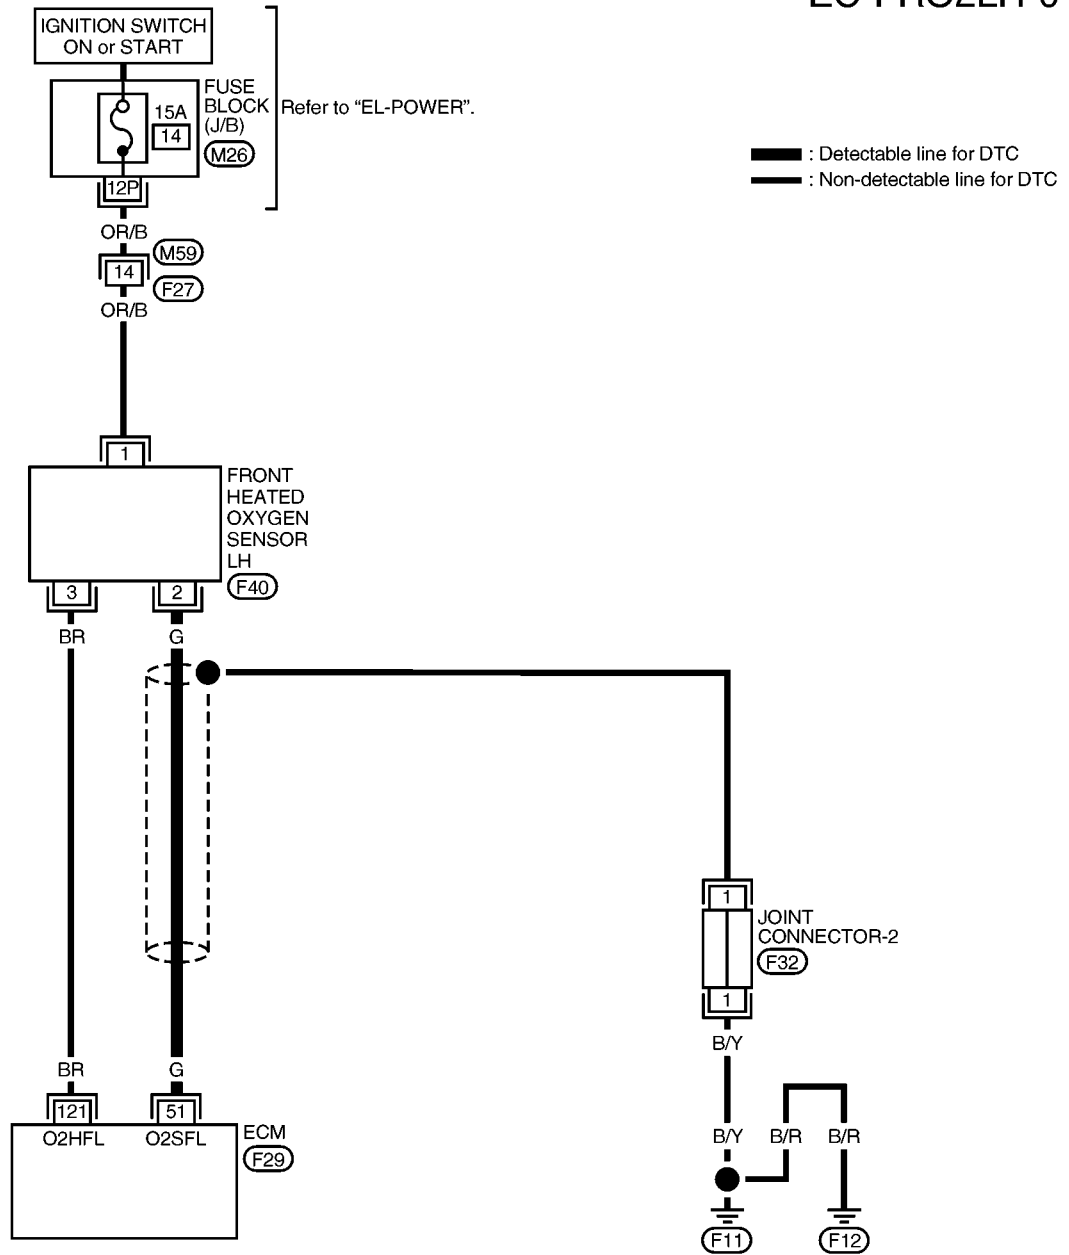

AEC945A


DTC P0134 (RIGHT, -B1), P0154 (LEFT, -B2) FRONT HO2S (HIGH VOLTAGE)

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0122

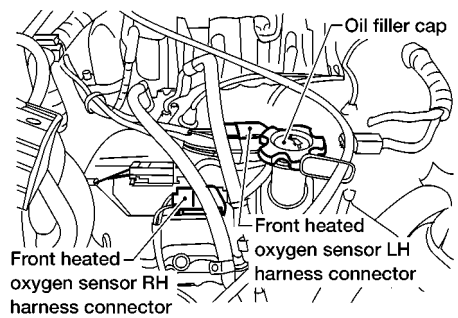1	INSPECTION START	<p>1. Turn ignition switch "OFF". 2. Disconnect corresponding front heated oxygen sensor harness connector.</p> <div style="text-align: center;">  </div> <p style="text-align: right; font-size: small;">AEC644A</p>
▶		GO TO 2.

2	RETIGHTEN FRONT HEATED OXYGEN SENSOR	<p>1. Loosen and retighten corresponding front heated oxygen sensor. Tightening torque: 40 - 50 N·m (4.1 - 5.1 kg-m, 30 - 37 ft-lb)</p>
▶		GO TO 3.

3	CHECK FRONT HO2S INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal and FRONT HO2S terminal as follows. Refer to Wiring Diagram.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse; text-align: center;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0134</td> <td>50</td> <td>2</td> <td>Right</td> </tr> <tr> <td>P0154</td> <td>51</td> <td>2</td> <td>Left</td> </tr> </tbody> </table> <p style="text-align: right; font-size: small;">AEC892A</p> <p>Continuity should exist.</p> <p>3. Check harness continuity between ECM terminal or FRONT HO2S terminal and ground as follows. Refer to Wiring Diagram.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse; text-align: center;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM or sensor</th> <th>Ground</th> </tr> </thead> <tbody> <tr> <td>P0134</td> <td>50 or 2</td> <td>Ground</td> <td>Right</td> </tr> <tr> <td>P0154</td> <td>51 or 2</td> <td>Ground</td> <td>Left</td> </tr> </tbody> </table> <p style="text-align: right; font-size: small;">AEC893A</p> <p>Continuity should not exist.</p> <p>4. Also check harness for short to power.</p> <p style="text-align: center; font-weight: bold;">OK or NG</p>	DTC	Terminals		Bank	ECM	Sensor	P0134	50	2	Right	P0154	51	2	Left	DTC	Terminals		Bank	ECM or sensor	Ground	P0134	50 or 2	Ground	Right	P0154	51 or 2	Ground	Left
DTC	Terminals			Bank																										
	ECM	Sensor																												
P0134	50	2	Right																											
P0154	51	2	Left																											
DTC	Terminals		Bank																											
	ECM or sensor	Ground																												
P0134	50 or 2	Ground	Right																											
P0154	51 or 2	Ground	Left																											
OK ▶		GO TO 4.																												
NG ▶		Repair open circuit or short to ground or short to power in harness or connectors.																												

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

**DTC P0134 (RIGHT, -B1), P0154 (LEFT, -B2)
FRONT HO2S (HIGH VOLTAGE)**

VG33E

Diagnostic Procedure (Cont'd)

4	CHECK FRONT HO2S CONNECTOR FOR WATER	
1. Disconnect front heated oxygen sensor harness connector. 2. Check connectors for water. Water should not exist.		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 5.
OK (Without CONSULT-II)	▶	GO TO 6.
NG	▶	Repair or replace harness or connectors.

DTC P0134 (RIGHT, -B1), P0154 (LEFT, -B2) FRONT HO2S (HIGH VOLTAGE)

VG33E

Diagnostic Procedure (Cont'd)

5 CHECK FRONT HEATED OXYGEN SENSOR

Ⓟ With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT-II, and select "FR O2 SEN-B1 (-B2)" and "FR O2 MNTR-B1 (-B2)".
3. Hold engine speed at 2,000 rpm under no load during the following steps.
4. Touch "RECORD" on CONSULT-II screen.

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
MAS AIR/FL SE	XXX V
COOLAN TEMP/S	XXX °C
FR O2 SEN-B1	XXX V
FR O2 MNTR-B1	LEAN
INJ PULSE-B1	XXX msec
A/F ALPHA-B1	XXX %
FR O2 HTR-B1	ON

PEF365V

5. Check the following.

- "FR O2 MNTR-B1 (-B2)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown left:

Right bank

cycle | 1 | 2 | 3 | 4 | 5 |

FR O2 MNTR-B1 R-L-R-L-R-L-R-L-R-L-R

Left bank

cycle | 1 | 2 | 3 | 4 | 5 |


FR O2 MNTR-B2 R-L-R-L-R-L-R-L-R-L-R

R means FR O2 MNTR-B1(-B2) indicates RICH

L means FR O2 MNTR-B1(-B2) indicates LEAN

SEF702W

- "FR O2 SEN-B1 (-B2)" voltage goes above 0.6V at least once.
- "FR O2 SEN-B1 (-B2)" voltage goes below 0.3V at least once.
- "FR O2 SEN-B1 (-B2)" voltage never exceeds 1.0V.

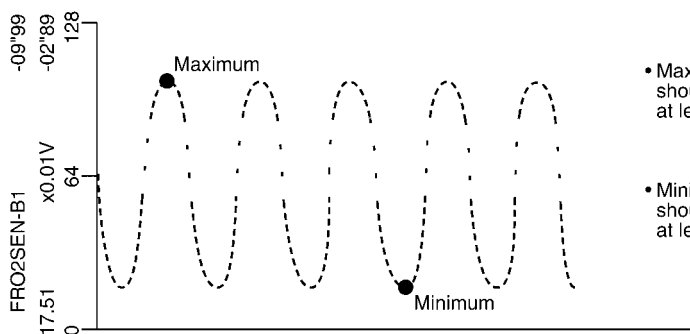

- Maximum voltage should be over 0.6V at least one time.

- Minimum voltage should be below 0.3V at least one time.

SEF154X

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK



GO TO 7.

NG




Replace malfunctioning front heated oxygen sensor.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0134 (RIGHT, -B1), P0154 (LEFT, -B2) FRONT HO2S (HIGH VOLTAGE)

VG33E

Diagnostic Procedure (Cont'd)

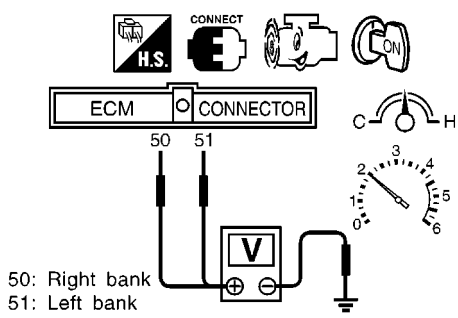6	CHECK FRONT HEATED OXYGEN SENSOR	
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Set voltmeter probes between ECM terminal 50 (right bank sensor signal) or 51 (left bank sensor signal) and engine ground. 3. Check the following with engine speed held at 2,000 rpm constant under no load. 		
 <p style="margin-left: 100px;">50: Right bank 51: Left bank</p>		
SEF919U		
<ul style="list-style-type: none"> ● MIL goes on more than 5 times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR). ● The maximum voltage is over 0.6V at least one time. ● The minimum voltage is below 0.3V at least one time. ● The voltage never exceeds 1.0V. <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 7.
NG	▶	Replace malfunctioning front heated oxygen sensor.

7	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.		
▶		INSPECTION END

DTC P0135 (RIGHT, -B1), P0155 (LEFT, -B2) FRONT HO2S HEATER

VG33E
Description

Description

SYSTEM DESCRIPTION

NEEC0123

NEEC0123S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	Front heated oxygen sensor heater control	Front heated oxygen sensor heaters

The ECM performs ON/OFF control of the front heated oxygen sensor heaters corresponding to the engine speed.

OPERATION

NEEC0123S02

Engine speed rpm	Front heated oxygen sensor heaters
Above 3,200	OFF
Below 3,200	ON

CONSULT-II Reference Value in Data Monitor Mode

NEEC0124

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FR O2 HTR-B1 FR O2 HTR-B2	● Engine speed: Below 3,200 rpm	ON
	● Engine speed: Above 3,200 rpm	OFF

ECM Terminals and Reference Value

NEEC0125

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
119 (Right bank)	BR/Y	Front heated oxygen sensor heater	[Engine is running] ● Engine speed is below 3,200 rpm	Approximately 0.4V
121 (Left bank)	BR		[Engine is running] ● Engine speed is above 3,200 rpm	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NEEC0126

Malfunction is detected when the current amperage in the front heated oxygen sensor heater circuit is out of the normal range. (An improper voltage drop signal is sent to ECM through the front heated oxygen sensor heater.)

POSSIBLE CAUSE

NEEC0126S01

- Harness or connectors
(The front heated oxygen sensor heater circuit is open or shorted.)
- Front heated oxygen sensor heater

DTC P0135 (RIGHT, -B1), P0155 (LEFT, -B2) FRONT HO2S HEATER

VG33E

DTC Confirmation Procedure

2	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF)	XXX rpm

PEF357V

DTC Confirmation Procedure

NEEC0127

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 10.5V and 16V at idle.

With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and run it for at least 6 seconds at idle speed.
- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-823.

With GST

Follow the procedure "With CONSULT-II".

No Tools

- 1) Start engine and run it for at least 6 seconds at idle speed.
- 2) Turn ignition switch "OFF", wait at least 5 seconds and then turn "ON".
- 3) Perform "Diagnostic Test Mode II (Self-diagnostic results)" with ECM.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-823.

- **When using GST, "DTC Confirmation Procedure" should be performed twice as much as when using CONSULT-II or ECM (Diagnostic Test Mode II) because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II or ECM (Diagnostic Test Mode II) is recommended.**

DTC P0135 (RIGHT, -B1), P0155 (LEFT, -B2) FRONT HO2S HEATER

VG33E
Wiring Diagram


Wiring Diagram

RIGHT BANK

NEEC0128

NEEC0128S01

EC-FO2H-R-01

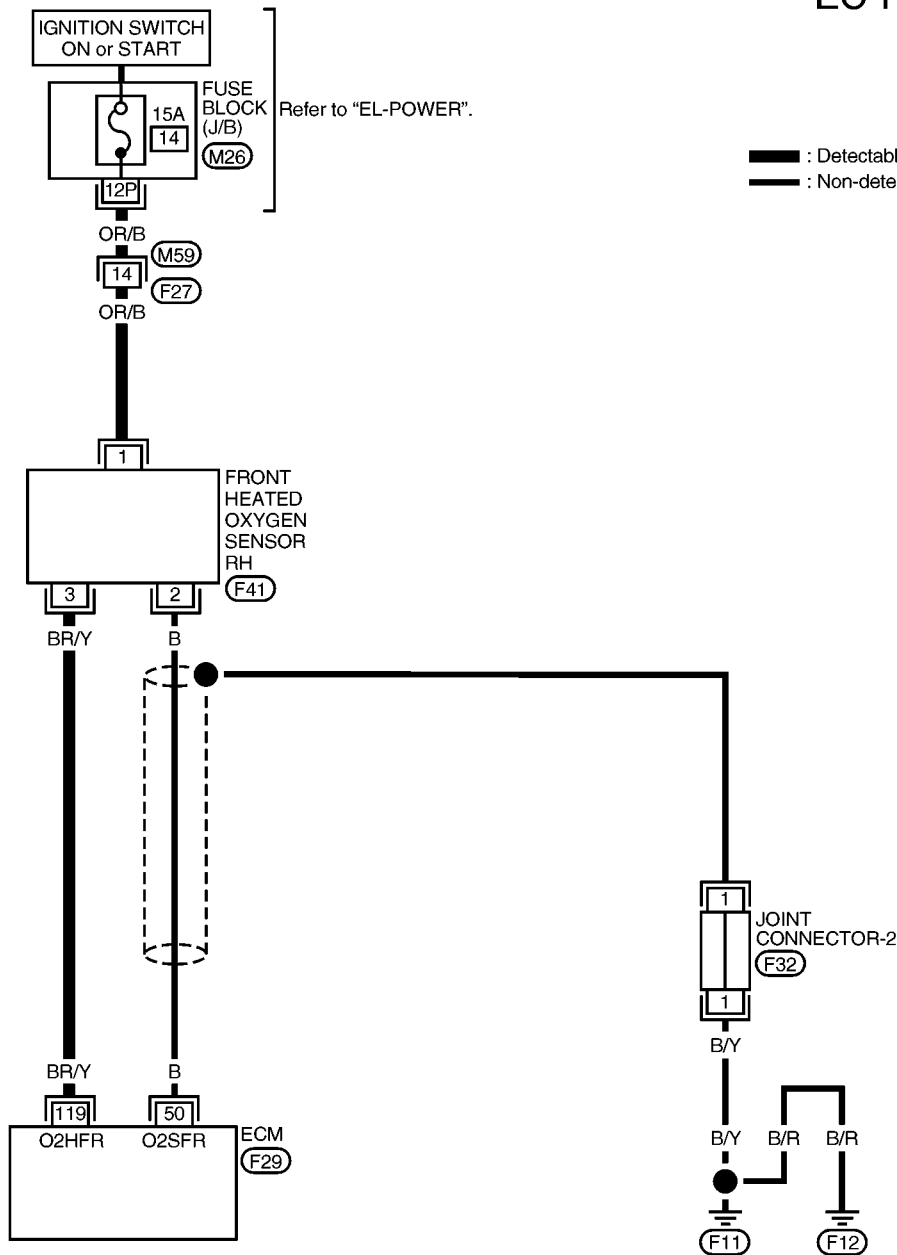

— : Detectable line for DTC
— : Non-detectable line for DTC

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS





BT

HA

SC

EL

IDX

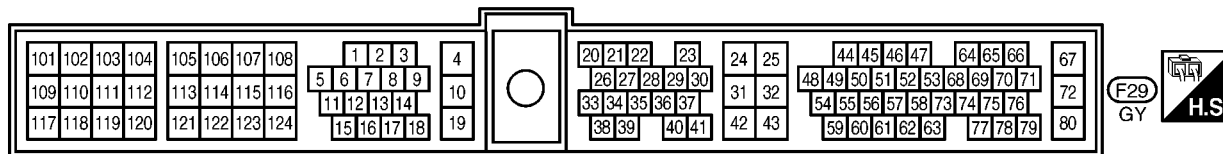

AEC946A

DTC P0135 (RIGHT, -B1), P0155 (LEFT, -B2) FRONT HO2S HEATER






VG33E

Wiring Diagram (Cont'd)

LEFT BANK

NEEC0128S02

EC-FO2H-L-01

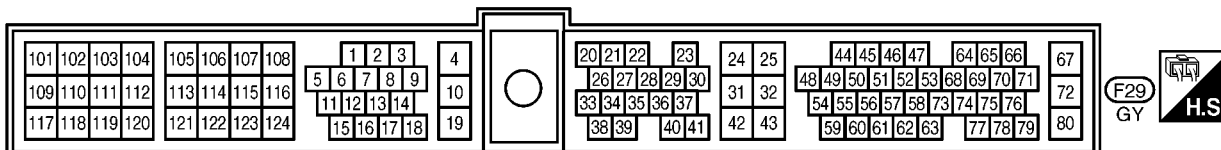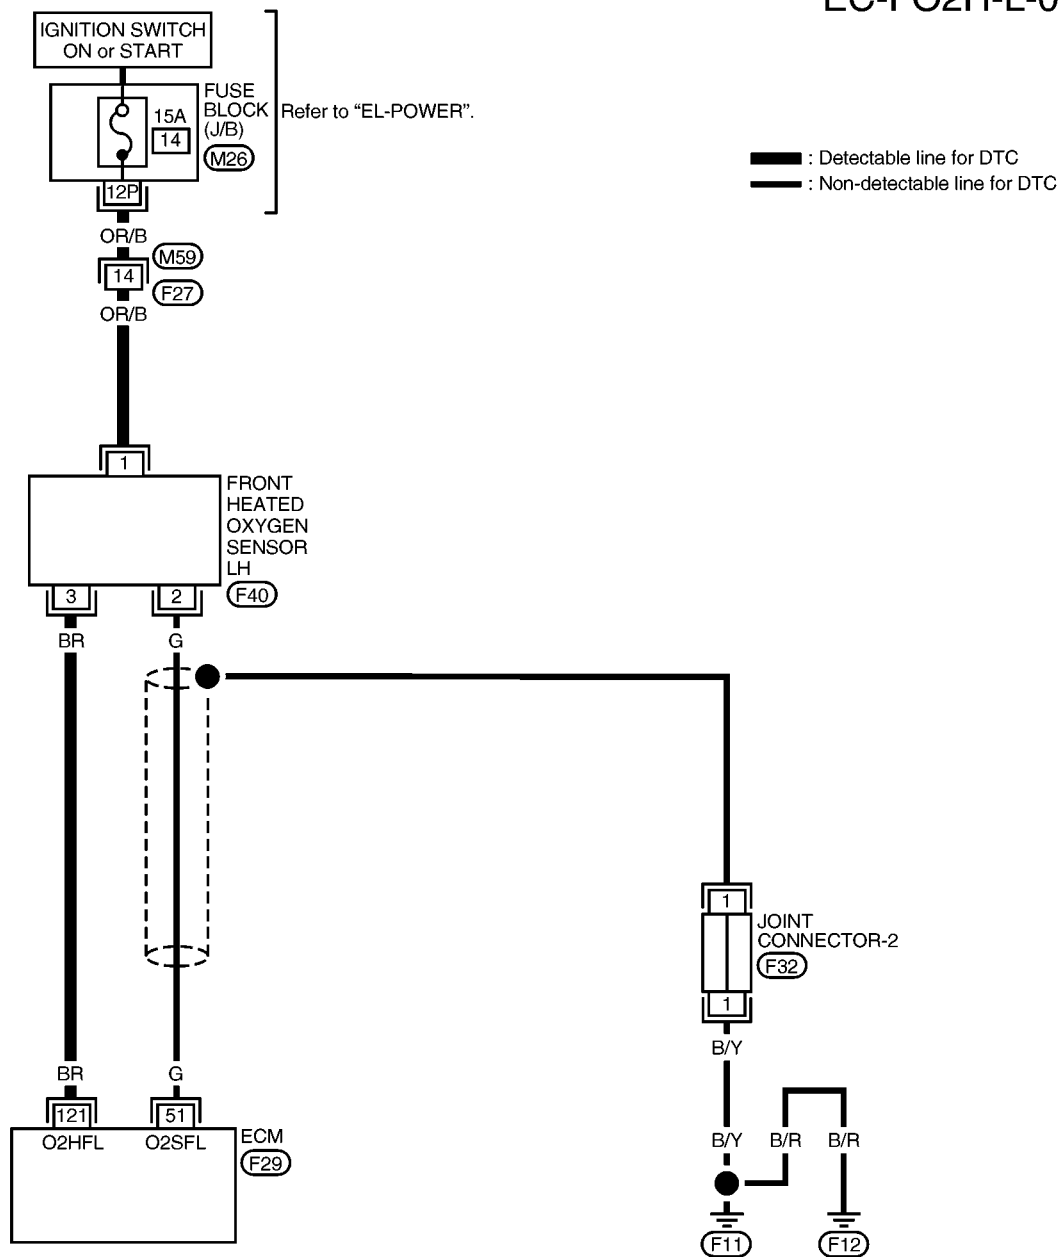

AEC947A



DTC P0135 (RIGHT, -B1), P0155 (LEFT, -B2) FRONT HO2S HEATER

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0129

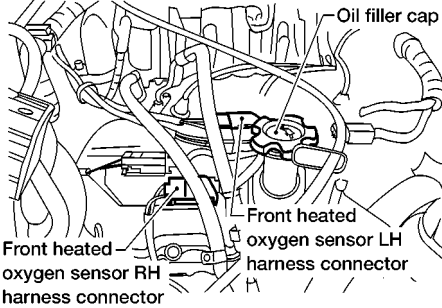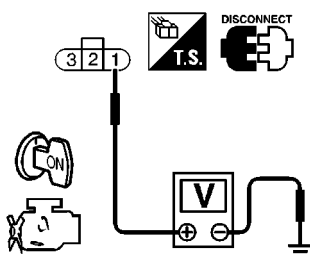1	CHECK FRONT HO2S POWER SUPPLY CIRCUIT
<p>1. Turn ignition switch "OFF". 2. Disconnect corresponding front heated oxygen sensor harness connector.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">AEC644A</p> <p>3. Turn ignition switch "ON". 4. Check voltage between FRONT HO2S terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF633W</p> <p>Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 3.
NG	▶ GO TO 2.

2	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M59, F27 ● Fuse block (J/B) connector M26 ● 10A fuse ● Harness for open or short between front heated oxygen sensor and fuse 	
	▶ Repair harness or connectors.


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0135 (RIGHT, -B1), P0155 (LEFT, -B2) FRONT HO2S HEATER

VG33E

Diagnostic Procedure (Cont'd)

3	CHECK FRONT HO2S GROUND CIRCUIT FOR OPEN AND SHORT															
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal and FRONT HO2S terminal as follows. Refer to Wiring Diagram.</p>																
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0135</td> <td style="text-align: center;">119</td> <td style="text-align: center;">3</td> <td style="text-align: center;">Right</td> </tr> <tr> <td>P0155</td> <td style="text-align: center;">121</td> <td style="text-align: center;">3</td> <td style="text-align: center;">Left</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM	Sensor	P0135	119	3	Right	P0155	121	3	Left
DTC	Terminals			Bank												
	ECM	Sensor														
P0135	119	3	Right													
P0155	121	3	Left													
AEC894A																
<p style="color: blue;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>																
OK	▶	GO TO 4.														
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.														

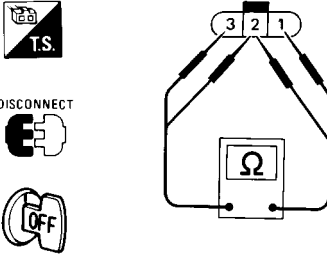
4	CHECK FRONT HEATED OXYGEN SENSOR HEATER	
<p>Check resistance between FRONT HO2S terminals 3 and 1.</p>		
		
AEC158A		
<p style="color: blue;">Resistance: 2.3 - 4.3Ω at 25°C (77°F)</p> <p>Check continuity between FRONT HO2S terminals 2 and 1, 3 and 2.</p> <p style="color: blue;">Continuity should not exist.</p> <p style="color: red;">CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	Replace malfunctioning front heated oxygen sensor.

5	CHECK INTERMITTENT INCIDENT	
<p>Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.</p>		
▶		INSPECTION END

DTC P0137 (RIGHT, -B1), P0157 (LEFT, -B2) REAR HO2S (MIN. VOLTAGE MONITORING)

VG33E

Component Description

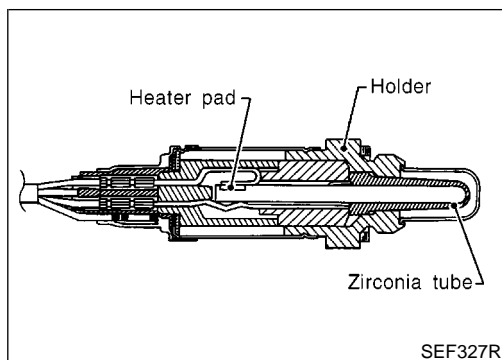

Component Description

NEEC0130

The rear heated oxygen sensor, after three way catalyst, monitors the oxygen level in the exhaust gas on each bank.

Even if switching characteristics of the front heated oxygen sensor are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the rear heated oxygen sensor.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the rear heated oxygen sensor is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

NEEC0131

Specification data are reference values.


MONITOR ITEM	CONDITION	SPECIFICATION
RR O2 SEN-B1 RR O2 SEN-B2	● Engine: After warming up Revsing engine from idle up to 2,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
RR O2 MNTR-B1 RR O2 MNTR-B2		LEAN ↔ RICH

ECM Terminals and Reference Value

NEEC0132

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
56 (Right bank)	OR	Rear heated oxygen sensor	[Engine is running] ● Warm-up condition ● Revving engine from idle up to 2,000 rpm	0 - Approximately 1.0V
57 (Left bank)	Y			

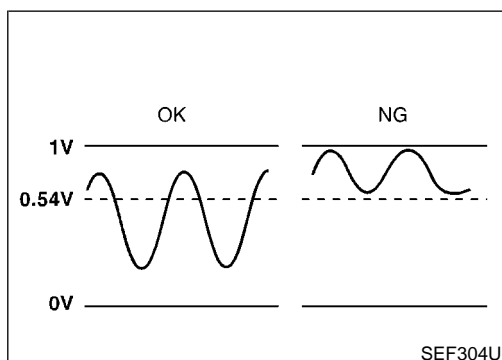

On Board Diagnosis Logic

NEEC0133

The rear heated oxygen sensor has a much longer switching time between rich and lean than the front heated oxygen sensor. The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of rear heated oxygen sensor, ECM monitors whether the minimum voltage of sensor is sufficiently low during various driving conditions such as fuel-cut.

Malfunction is detected when the minimum voltage from the sensor is not reached to the specified voltage.

POSSIBLE CAUSE

NEEC0133S01

- Harness or connectors (The sensor circuit is open or shorted.)
- Rear heated oxygen sensor
- Fuel pressure
- Injectors

DTC P0137 (RIGHT, -B1), P0157 (LEFT, -B2) REAR HO2S (MIN. VOLTAGE MONITORING)

VG33E

DTC Confirmation Procedure

6

RR O2 SENSOR P0137

WAIT
OPEN ENGINE HOOD.
KEEP ENGINE RUNNING AT
IDLE SPEED FOR MAXIMUM
OF 5 MINUTES.

SEF548X

8

RR O2 SENSOR P0137

MAINTAIN
1800 - 2800 RPM UNTIL FINAL
RESULT APPEARS.

1800 rpm 2300 rpm 2800 rpm

SEF549X

8

RR O2 SENSOR P0137

COMPLETED

SELF-DIAG RESULTS

SEF550X

DTC Confirmation Procedure

NEEC0134

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:


Open engine hood before conducting following procedure With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch OFF and wait at least 5 seconds.
- 3) Turn ignition switch ON.
- 4) Select "DATA MONITOR" mode with CONSULT-II.
- 5) Make sure that "COOLANT TEMP/S" is more than 70°C (158°F).
- 6) Select "RR O2 SEN -B1 (-B2), P0137 (P0157) of "RR O2 SENSOR" in DTC WORK SUPPORT" mode with CONSULT.
- 7) Start engine and follow the instructions of CONSULT-II.
- 8) Make sure that "OK" is displayed after touching "SELF_DIAG RESULTS".
If NG is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-830.
If "CAN NOT BE DIAGNOSED" is displayed, perform the following.
 - a) Stop engine and cool down "COOLANT TEMP/SE" to less than 70°C 158°F).
 - b) Turn ignition switch ON.
 - c) Select "DATA MONITOR" mode with CONSULT-II.
 - d) Perform from step 6) again when the "COOLANT TEMP/S" reaches to 70°C 158°F)

DTC P0137 (RIGHT, -B1), P0157 (LEFT, -B2) REAR HO2S (MIN. VOLTAGE MONITORING)

VG33E

Overall Function Check

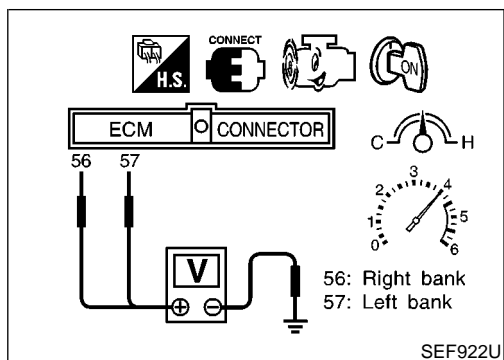

Overall Function Check

=NEEC0135

Use this procedure to check the overall function of the rear heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.

CAUTION:

Always drive vehicle at a safe speed.

⊗ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminal 56 (right bank sensor signal) or 57 (left bank sensor signal) and engine ground.
- 4) Check the voltage when racing up to 4,000 rpm under no load at least 10 times.
(depress and release accelerator pedal as soon as possible)
The voltage should be below 0.54V at least once during this procedure.
If the voltage can be confirmed in step 4, step 5 is not necessary.
- 5) Keep vehicle idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position (M/T), "D" position with "O/D" OFF (A/T).
The voltage should be below 0.54V at least once during this procedure.
- 6) If NG, go to "Diagnostic Procedure", EC-830.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0137 (RIGHT, -B1), P0157 (LEFT, -B2) REAR HO2S (MIN. VOLTAGE MONITORING)

VG33E

Wiring Diagram






Wiring Diagram

NEEC0136

NEEC0136S01

RIGHT BANK

EC-RRO2RH-01

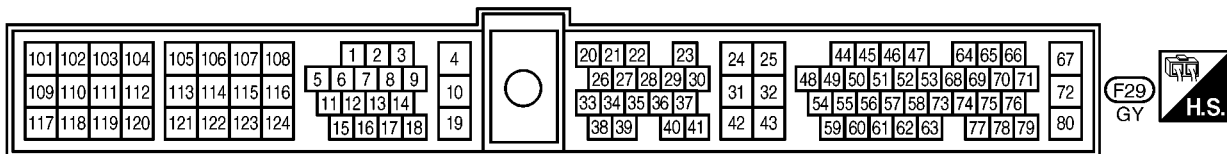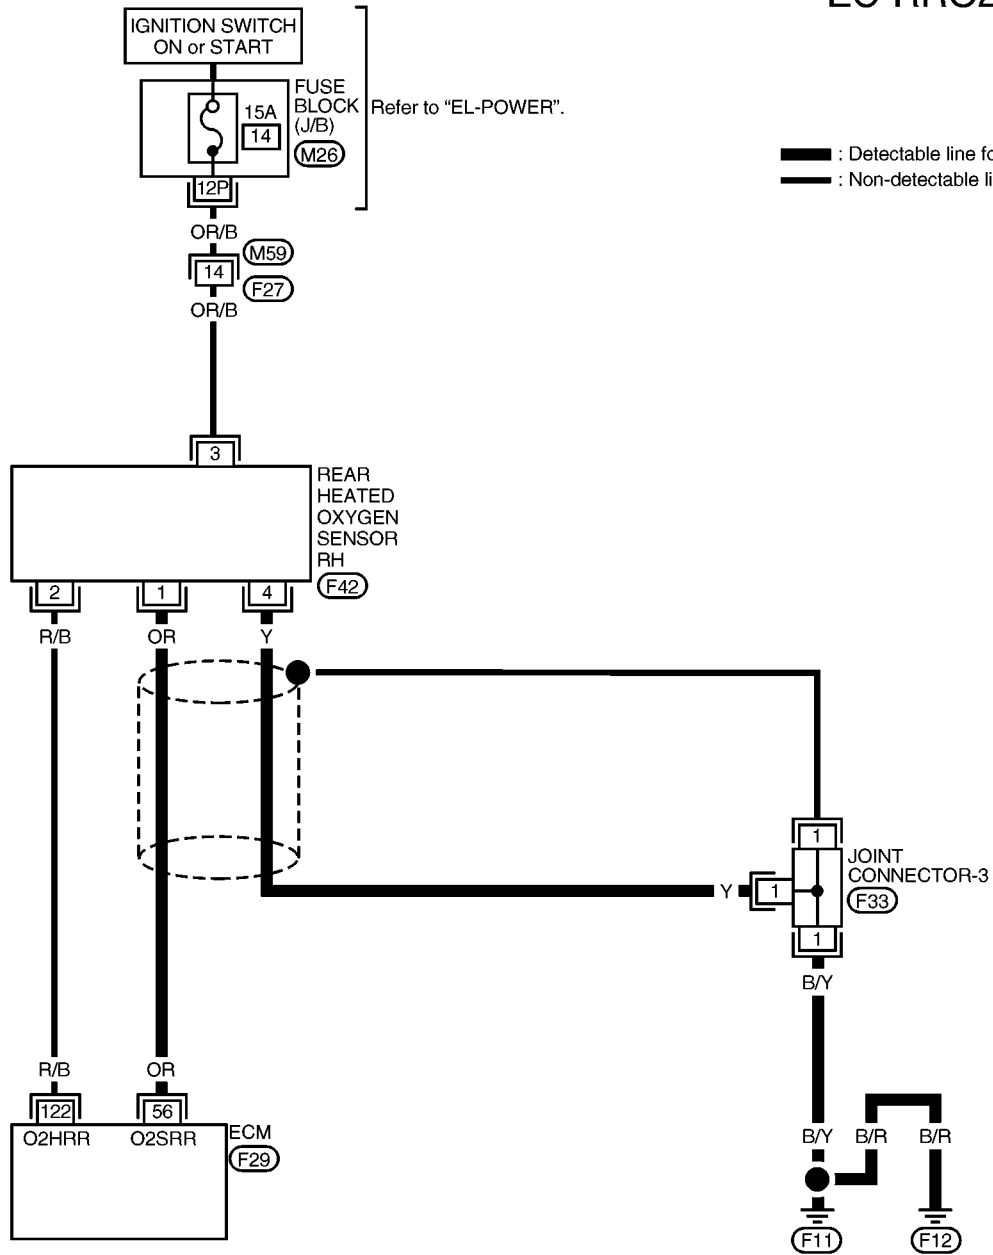

AEC948A

DTC P0137 (RIGHT, -B1), P0157 (LEFT, -B2) REAR HO2S (MIN. VOLTAGE MONITORING)

VG33E

Wiring Diagram (Cont'd)

LEFT BANK

NEEC0136S02

EC-RRO2LH-01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS







BT

HA

SC

EL


IDX

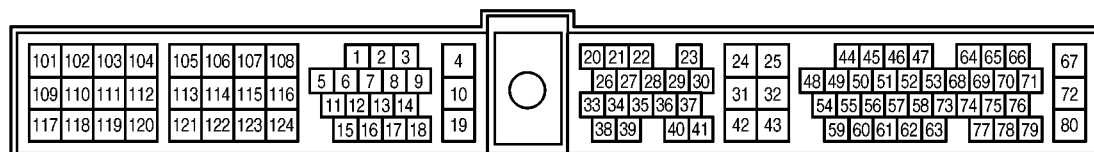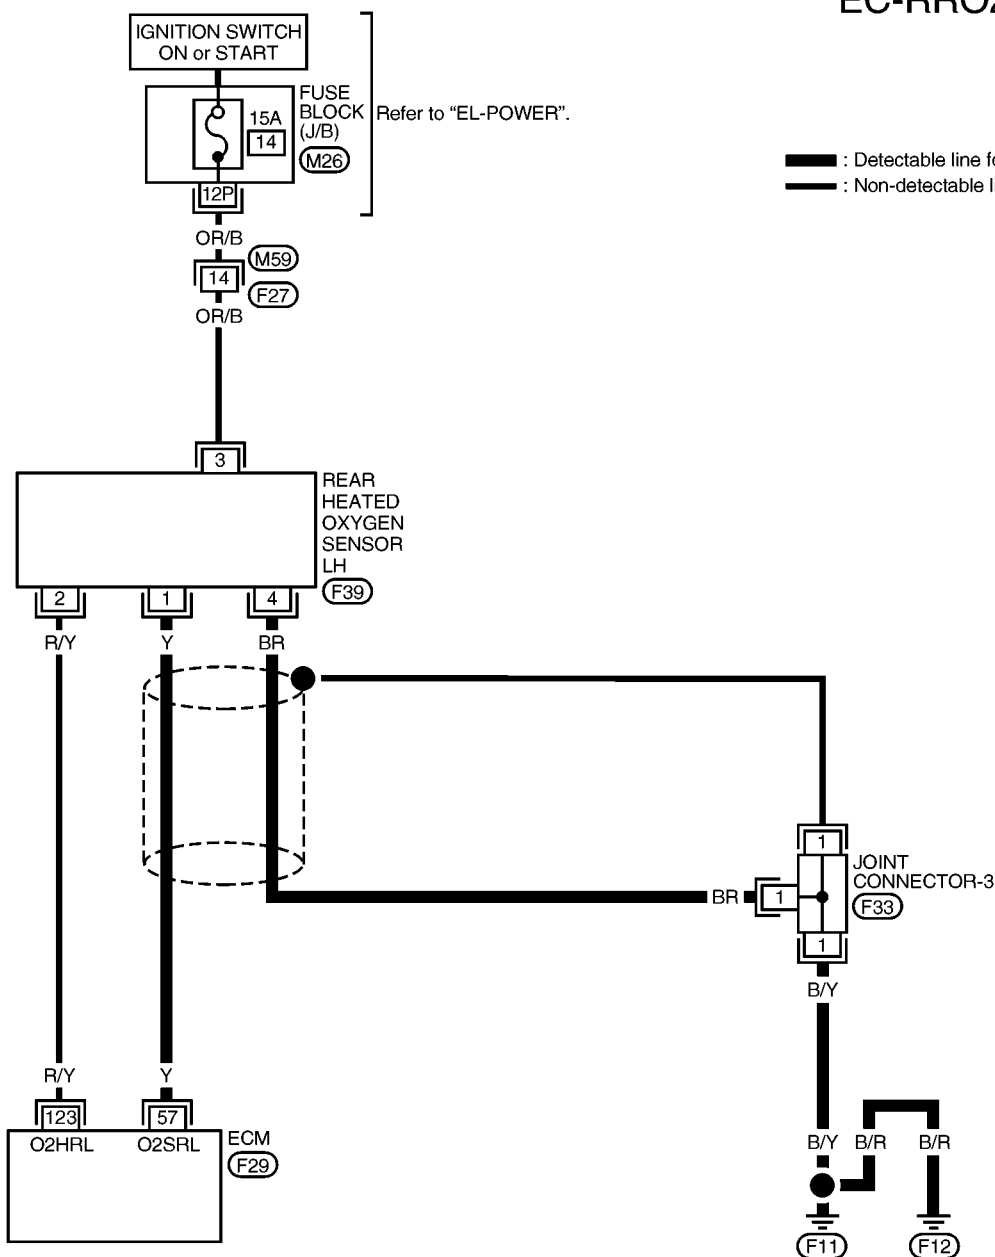



AEC949A

Diagnostic Procedure

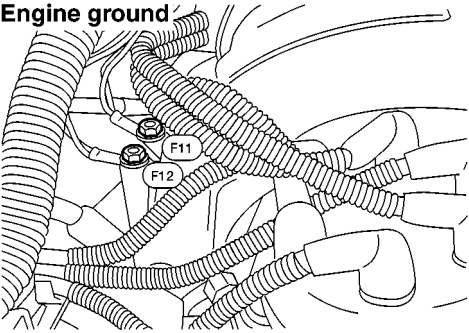NEEC0137


1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch OFF. 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;">  <p>Engine ground</p> </div> <p style="text-align: right;">AEC640A</p>	
<p>▶ GO TO 2.</p>	

2	CLEAR THE SELF-LEARNING DATA																				
<p> With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "CLEAR".</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td>SELF-LEARN</td> <td>B1: XXX %</td> </tr> <tr> <td>CONTROL</td> <td>B2: XXX %</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>CMPS-RPM(REF)</td> <td>XXX rpm</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>FR O2 SEN-B1</td> <td>XXX V</td> </tr> <tr> <td>FR O2 SEN-B2</td> <td>XXX V</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XXX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XXX %</td> </tr> </tbody> </table> <p style="text-align: right;">PEF921U</p> <p>4. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0172 or P0175 detected? Is it difficult to start engine?</p>		ACTIVE TEST		SELF-LEARN	B1: XXX %	CONTROL	B2: XXX %	MONITOR		CMPS-RPM(REF)	XXX rpm	COOLAN TEMP/S	XXX °C	FR O2 SEN-B1	XXX V	FR O2 SEN-B2	XXX V	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %
ACTIVE TEST																					
SELF-LEARN	B1: XXX %																				
CONTROL	B2: XXX %																				
MONITOR																					
CMPS-RPM(REF)	XXX rpm																				
COOLAN TEMP/S	XXX °C																				
FR O2 SEN-B1	XXX V																				
FR O2 SEN-B2	XXX V																				
A/F ALPHA-B1	XXX %																				
A/F ALPHA-B2	XXX %																				
<p> Without CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch OFF. 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC No. 0102 is displayed in Diagnostic Test Mode II. 6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-651. 7. Make sure DTC No. 0505 is displayed in Diagnostic Test Mode II. 8. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC 0114 or 0209 detected? Is it difficult to start engine?</p> <p style="text-align: center;">Yes or No</p>																					
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%; border-right: 1px solid black;">Yes</td> <td style="border-right: 1px solid black; text-align: center;">▶</td> <td>Perform trouble diagnosis for DTC P0172, P0175. Refer to EC-879.</td> </tr> <tr> <td style="border-right: 1px solid black;">No</td> <td style="border-right: 1px solid black; text-align: center;">▶</td> <td>GO TO 3.</td> </tr> </table>		Yes	▶	Perform trouble diagnosis for DTC P0172, P0175. Refer to EC-879.	No	▶	GO TO 3.														
Yes	▶	Perform trouble diagnosis for DTC P0172, P0175. Refer to EC-879.																			
No	▶	GO TO 3.																			

DTC P0137 (RIGHT, -B1), P0157 (LEFT, -B2) REAR HO2S (MIN. VOLTAGE MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

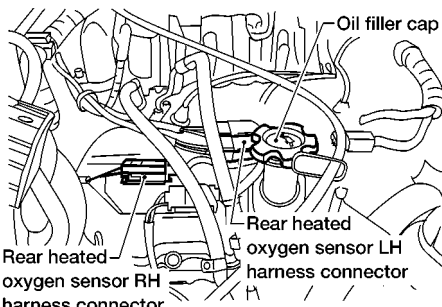3	CHECK REAR HO2S INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT															
<p>1. Turn ignition switch OFF. 2. Disconnect corresponding rear heated oxygen sensor harness connector.</p>																
																
<p>3. Disconnect ECM harness connector. 4. Check harness continuity between ECM terminal and REAR HO2S terminal as follows. Refer to Wiring Diagram.</p>																
<table border="1" style="margin: auto;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0137</td> <td style="text-align: center;">56</td> <td style="text-align: center;">1</td> <td style="text-align: center;">Right</td> </tr> <tr> <td>P0157</td> <td style="text-align: center;">57</td> <td style="text-align: center;">1</td> <td style="text-align: center;">Left</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM	Sensor	P0137	56	1	Right	P0157	57	1	Left
DTC	Terminals			Bank												
	ECM	Sensor														
P0137	56	1	Right													
P0157	57	1	Left													
AEC645A																
<p>Continuity should exist. 5. Check harness continuity between ECM terminal or REAR HO2S terminal and ground as follows. Refer to Wiring Diagram.</p>																
<table border="1" style="margin: auto;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM or sensor</th> <th>Ground</th> </tr> </thead> <tbody> <tr> <td>P0137</td> <td style="text-align: center;">56 or 1</td> <td style="text-align: center;">Ground</td> <td style="text-align: center;">Right</td> </tr> <tr> <td>P0157</td> <td style="text-align: center;">57 or 1</td> <td style="text-align: center;">Ground</td> <td style="text-align: center;">Left</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM or sensor	Ground	P0137	56 or 1	Ground	Right	P0157	57 or 1	Ground	Left
DTC	Terminals			Bank												
	ECM or sensor	Ground														
P0137	56 or 1	Ground	Right													
P0157	57 or 1	Ground	Left													
AEC895A																
<p>Continuity should not exist. 6. Also check harness for short to power.</p>																
OK or NG																
OK	▶	GO TO 4.														
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.														

4	CHECK REAR HO2S GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Check harness continuity between REAR HO2S terminal 4 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p>		
<p>2. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 6.
OK (Without CONSULT-II)	▶	GO TO 7.
NG	▶	GO TO 5.

5	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Joint connector-3 ● Harness for open or short between rear heated oxygen sensor and engine ground. 		
	▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0137 (RIGHT, -B1), P0157 (LEFT, -B2) REAR HO2S (MIN. VOLTAGE MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

6		CHECK REAR HEATED OXYGEN SENSOR
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes. 2. Stop vehicle with engine running. 3. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "RR O2 SEN-B1 (-B2)" as the monitor item with CONSULT-II. 4. Check "RR O2 SEN-B1 (-B2)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$. 		
(Reference data)		
<p>"RR O2 SEN-B1 (-B2)" should be above 0.56V at least once when the "FUEL INJECTION" is +25%. "RR O2 SEN-B1 (-B2)" should be below 0.54V at least once when the "FUEL INJECTION" is -25%.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. 		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Replace malfunctioning rear heated oxygen sensor.

DTC P0137 (RIGHT, -B1), P0157 (LEFT, -B2) REAR HO2S (MIN. VOLTAGE MONITORING)


VG33E

Diagnostic Procedure (Cont'd)


7 CHECK REAR HEATED OXYGEN SENSOR

⊗ Without CONSULT-II

1. Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
2. Stop vehicle with engine running.
3. Set voltmeter probes between ECM terminal 56 (right bank sensor signal) or 57 (left bank sensor signal) and engine ground.
4. Check the voltage when racing up to 4,000 rpm under no load at least 10 times.
(depress and release accelerator pedal as soon as possible)

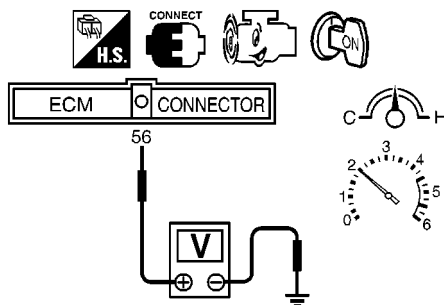

SEF923U

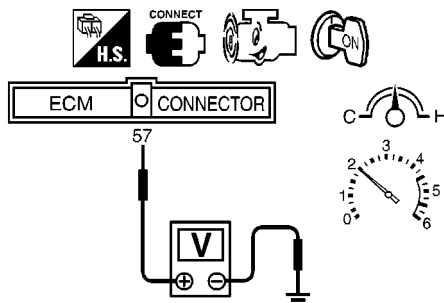

SEF924U

The voltage should be above 0.56V at least once during this procedure.

If the voltage is above 0.56V at step 4, step 5 is not necessary.

5. Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position (M/T), "D" position with "O/D" OFF (A/T).

The voltage should be below 0.54V at least once during this procedure.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK	▶	GO TO 8.
NG	▶	Replace malfunctioning rear heated oxygen sensor.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

**DTC P0137 (RIGHT, -B1), P0157 (LEFT, -B2)
REAR HO2S (MIN. VOLTAGE MONITORING)**

VG33E

Diagnostic Procedure (Cont'd)


8	CHECK REAR HO2S SHIELD CIRCUIT FOR OPEN AND SHORT
1. Turn ignition switch OFF. 2. Disconnect joint connector-3. 3. Check the following. <ul style="list-style-type: none">● Continuity between joint connector terminal 1 and ground● Joint connector (Refer to "HARNESS LAYOUT", <i>EL-239</i>) Continuity should exist. 4. Also check harness for short to ground and short to power. 5. Then reconnect joint connector-3.	
OK or NG	
OK	▶ GO TO 9.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

9	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
	▶ INSPECTION END

DTC P0138 (RIGHT, -B1), P0158 (LEFT, -B2) REAR HO2S (MAX. VOLTAGE MONITORING)

VG33E

Component Description

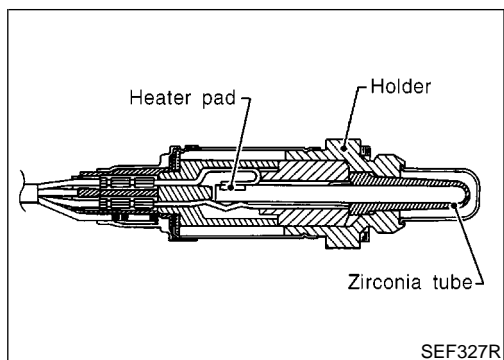

Component Description

NEEC0138

The rear heated oxygen sensor, after three way catalyst, monitors the oxygen level in the exhaust gas on each bank.

Even if switching characteristics of the front heated oxygen sensor are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the rear heated oxygen sensor.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the rear heated oxygen sensor is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

NEEC0139

Specification data are reference values.


MONITOR ITEM	CONDITION	SPECIFICATION
RR O2 SEN-B1 RR O2 SEN-B2	● Engine: After warming up Revving engine from idle up to 2,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
RR O2 MNTR-B1 RR O2 MNTR-B2		LEAN ↔ RICH

ECM Terminals and Reference Value

NEEC0140

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
56 (Right bank)	OR	Rear heated oxygen sensor	[Engine is running] ● Warm-up condition ● Revving engine from idle up to 2,000 rpm	0 - Approximately 1.0V
57 (Left bank)	Y			

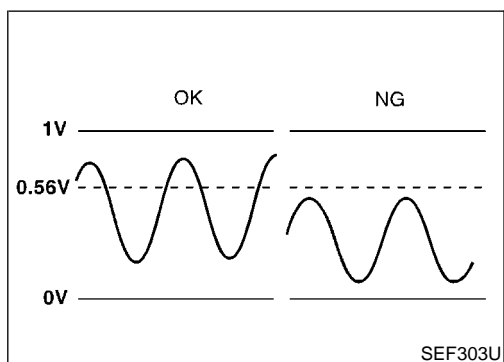

On Board Diagnosis Logic

NEEC0141

The rear heated oxygen sensor has a much longer switching time between rich and lean than the front heated oxygen sensor. The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of rear heated oxygen sensor, ECM monitors whether the maximum voltage of the sensor is sufficiently high during the various driving condition such as fuel-cut.

Malfunction is detected when the maximum voltage from the sensor is not reached to the specified voltage.

POSSIBLE CAUSE




NEEC0141S01

- Harness or connectors (The sensor circuit is open or shorted.)
- Rear heated oxygen sensor
- Fuel pressure
- Injectors
- Intake air leaks

DTC P0138 (RIGHT, -B1), P0158 (LEFT, -B2) REAR HO2S (MAX. VOLTAGE MONITORING)

VG33E

DTC Confirmation Procedure

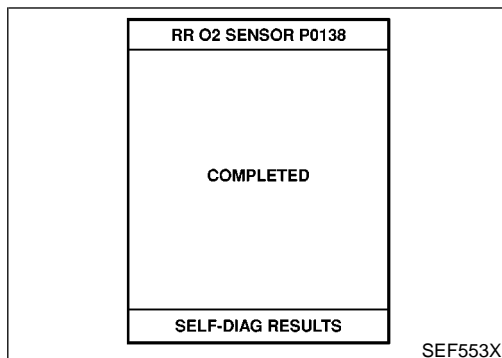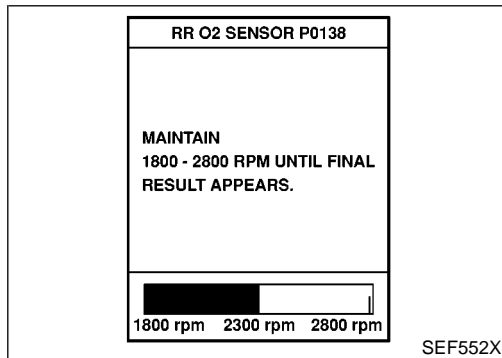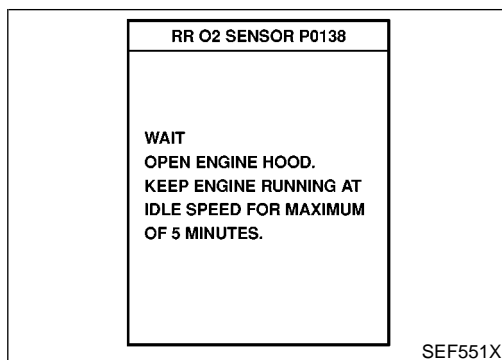

DTC Confirmation Procedure

NEEC0142

NOTE:

If “DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:


Open engine hood before conducting following procedure With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch “OFF” and wait at least 5 seconds.
- 3) Turn ignition switch “ON”.
- 4) Select “DATA MONITOR” mode with CONSULT-II.
- 5) Make sure that “COOLANT TEMP/S” is more than 70°C (158°F).
- 6) Select “RR O2 SEN -B1 (-B2), P0138 (P0158) of “RR O2 SENSOR” in DTC WORK SUPPORT” mode with CONSULT.
- 7) Start engine and follow the instructions of CONSULT-II.
- 8) Make sure that “OK” is displayed after touching “SELF_DIAG RESULTS”.
If NG is displayed, refer to “DIAGNOSTIC PROCEDURE”, EC-840.
If “CAN NOT BE DIAGNOSED” is displayed, perform the following.
 - a) Stop engine and cool down “COOLANT TEMP/SE” to less than 70°C 158°F).
 - b) Turn ignition switch “ON”.
 - c) Select “DATA MONITOR” mode with CONSULT-II.
 - d) Perform from step 6) again when the “COOLANT TEMP/S” reaches to 70°C 158°F)

DTC P0138 (RIGHT, -B1), P0158 (LEFT, -B2) REAR HO2S (MAX. VOLTAGE MONITORING)

VG33E

Overall Function Check

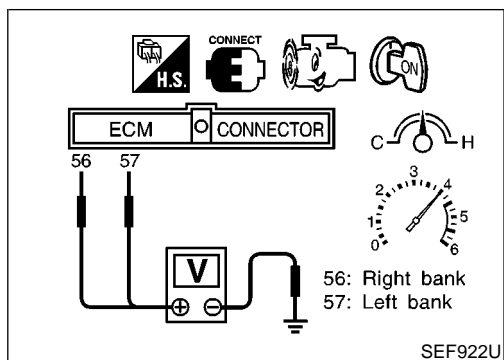

Overall Function Check

Use this procedure to check the overall function of the rear heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed. =NEEC0143

CAUTION:

Always drive vehicle at a safe speed.

⊗ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminal 56 (right bank sensor signal) or 57 (left bank sensor signal) and engine ground.
- 4) Check the voltage when racing up to 4,000 rpm under no load at least 10 times.
(depress and release accelerator pedal as soon as possible)
The voltage should be above 0.56V at least once during this procedure.
If the voltage can be confirmed in step 4, step 5 is not necessary.
- 5) Keep vehicle idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position (M/T), "D" position with "O/D" OFF (A/T).
The voltage should be above 0.56V at least once during this procedure.
- 6) If NG, go to "Diagnostic Procedure", EC-840.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0138 (RIGHT, -B1), P0158 (LEFT, -B2) REAR HO2S (MAX. VOLTAGE MONITORING)

VG33E

Wiring Diagram







Wiring Diagram

NEEC0144

NEEC0144S01

RIGHT BANK

EC-RRO2RH-01

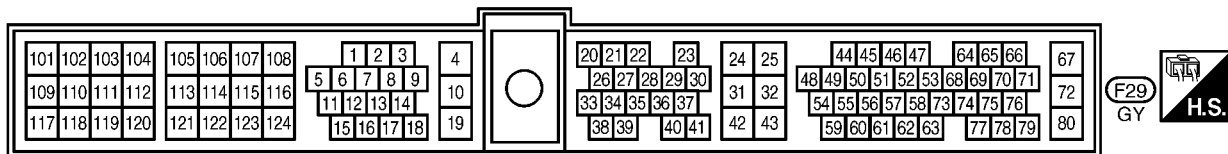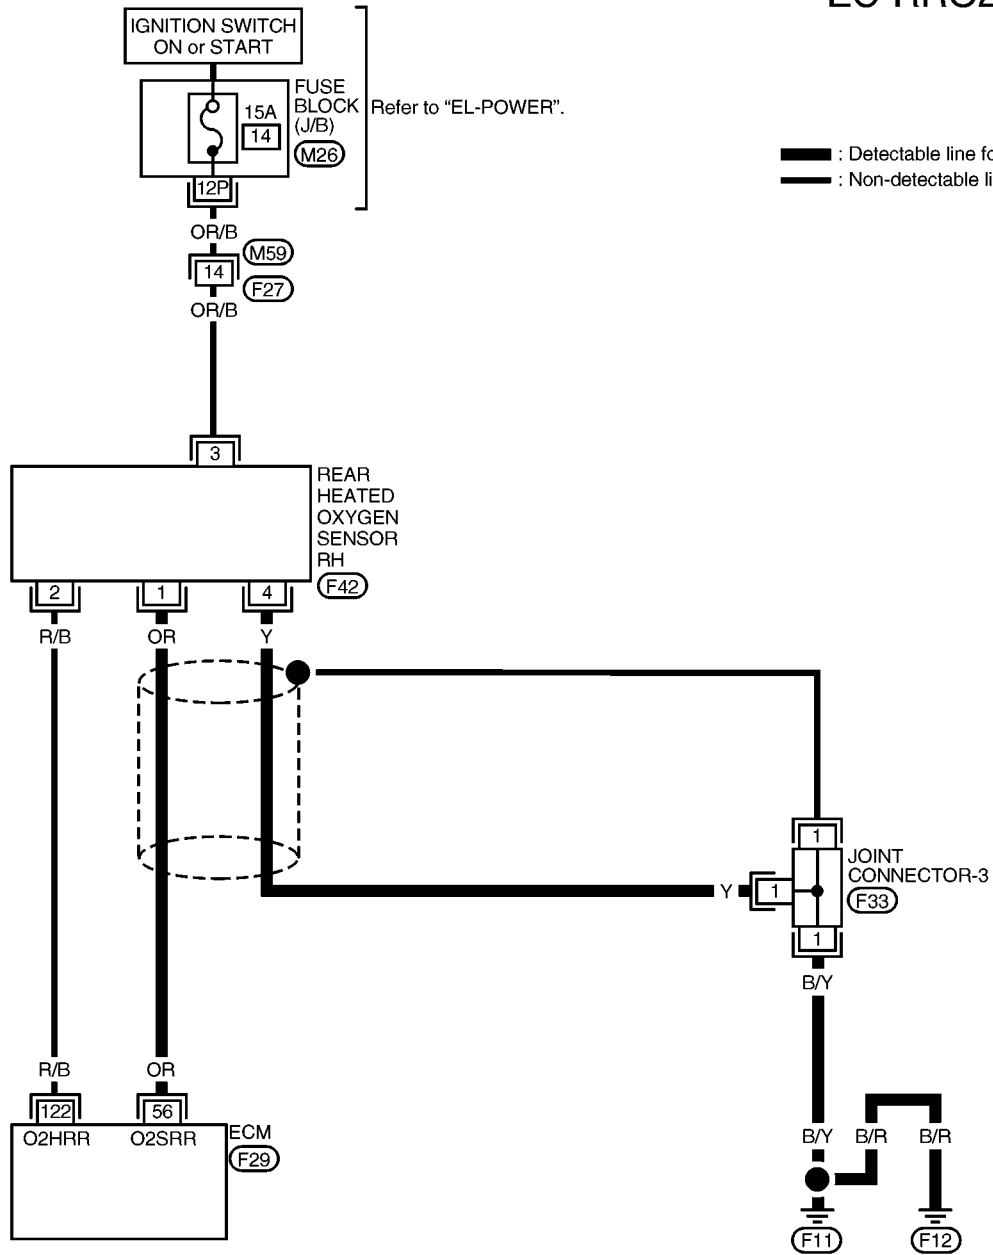

AEC948A

DTC P0138 (RIGHT, -B1), P0158 (LEFT, -B2) REAR HO2S (MAX. VOLTAGE MONITORING)

VG33E

Wiring Diagram (Cont'd)

LEFT BANK

NEEC0144S02

EC-RRO2LH-01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS





BT

HA

SC

EL


IDX

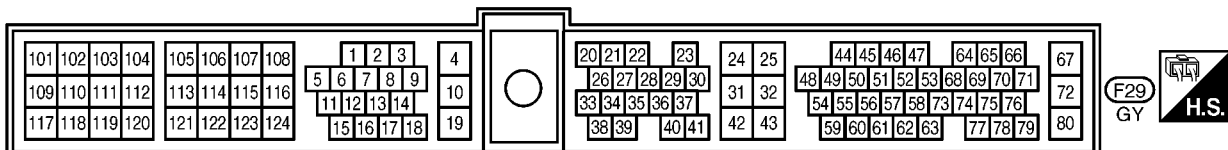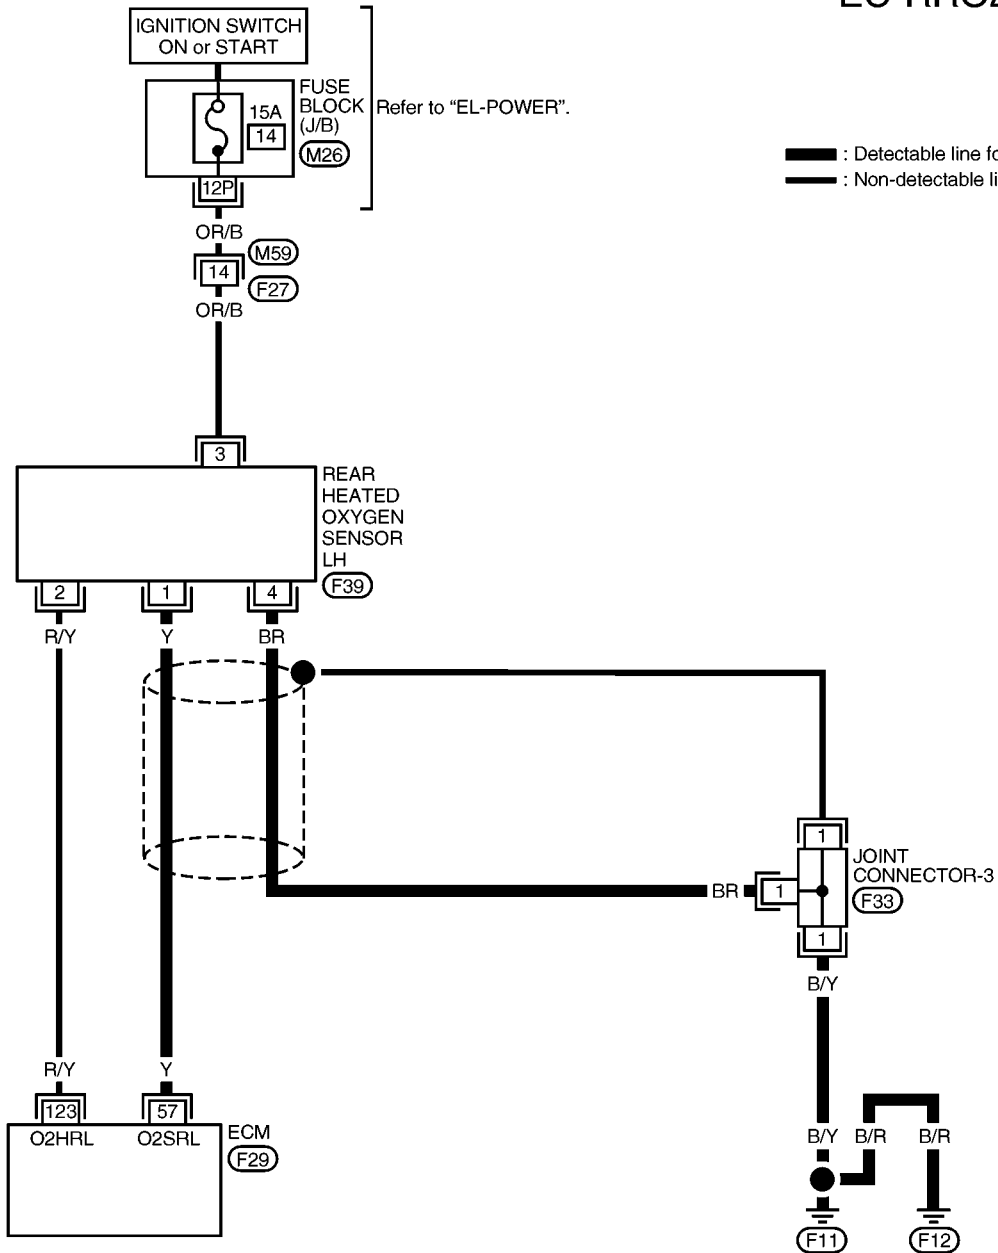



AEC949A

Diagnostic Procedure

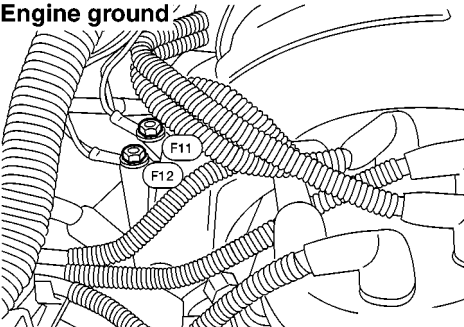NEEC0145

1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch OFF. 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;">  <p>Engine ground</p> </div> <p style="text-align: right;">AEC640A</p>	
<p>▶ GO TO 2.</p>	

2	CLEAR THE SELF-LEARNING DATA																				
<p> With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "CLEAR".</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">SELF-LEARN</td> <td style="text-align: center;">B1: XXX %</td> </tr> <tr> <td style="text-align: center;">CONTROL</td> <td style="text-align: center;">B2: XXX %</td> </tr> <tr> <th colspan="2" style="text-align: center;">MONITOR</th> </tr> <tr> <td style="text-align: center;">CMPS-RPM(REF)</td> <td style="text-align: center;">XXX rpm</td> </tr> <tr> <td style="text-align: center;">COOLAN TEMP/S</td> <td style="text-align: center;">XXX °C</td> </tr> <tr> <td style="text-align: center;">FR O2 SEN-B1</td> <td style="text-align: center;">XXX V</td> </tr> <tr> <td style="text-align: center;">FR O2 SEN-B2</td> <td style="text-align: center;">XXX V</td> </tr> <tr> <td style="text-align: center;">A/F ALPHA-B1</td> <td style="text-align: center;">XXX %</td> </tr> <tr> <td style="text-align: center;">A/F ALPHA-B2</td> <td style="text-align: center;">XXX %</td> </tr> </tbody> </table> <p style="text-align: right;">PEF921U</p> <p>4. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0171 or P0174 detected? Is it difficult to start engine?</p>		ACTIVE TEST		SELF-LEARN	B1: XXX %	CONTROL	B2: XXX %	MONITOR		CMPS-RPM(REF)	XXX rpm	COOLAN TEMP/S	XXX °C	FR O2 SEN-B1	XXX V	FR O2 SEN-B2	XXX V	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %
ACTIVE TEST																					
SELF-LEARN	B1: XXX %																				
CONTROL	B2: XXX %																				
MONITOR																					
CMPS-RPM(REF)	XXX rpm																				
COOLAN TEMP/S	XXX °C																				
FR O2 SEN-B1	XXX V																				
FR O2 SEN-B2	XXX V																				
A/F ALPHA-B1	XXX %																				
A/F ALPHA-B2	XXX %																				
<p> Without CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch OFF. 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC No. 0102 is displayed in Diagnostic Test Mode II. 6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-651. 7. Make sure DTC No. 0505 is displayed in Diagnostic Test Mode II. 8. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC 0115 or 0210 detected? Is it difficult to start engine?</p> <p style="text-align: center;">Yes or No</p>																					
Yes	▶ Perform trouble diagnosis for DTC P0171, P0174. Refer to EC-871.																				
No	▶ GO TO 3.																				

DTC P0138 (RIGHT, -B1), P0158 (LEFT, -B2) REAR HO2S (MAX. VOLTAGE MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

3	CHECK REAR HO2S INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT															
<p>1. Turn ignition switch OFF.</p> <p>2. Disconnect corresponding rear heated oxygen sensor harness connector.</p> <p>3. Disconnect ECM harness connector.</p> <p>4. Check harness continuity between ECM terminal and REAR HO2S terminal as follows. Refer to Wiring Diagram.</p>																
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0138</td> <td style="text-align: center;">56</td> <td style="text-align: center;">1</td> <td style="text-align: center;">Right</td> </tr> <tr> <td>P0158</td> <td style="text-align: center;">57</td> <td style="text-align: center;">1</td> <td style="text-align: center;">Left</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM	Sensor	P0138	56	1	Right	P0158	57	1	Left
DTC	Terminals			Bank												
	ECM	Sensor														
P0138	56	1	Right													
P0158	57	1	Left													
AEC897A																
<p style="color: blue;">Continuity should exist.</p> <p>5. Check harness continuity between ECM terminal or REAR HO2S terminal and ground as follows. Refer to Wiring Diagram.</p>																
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM or sensor</th> <th>Ground</th> </tr> </thead> <tbody> <tr> <td>P0138</td> <td style="text-align: center;">56 or 1</td> <td style="text-align: center;">Ground</td> <td style="text-align: center;">Right</td> </tr> <tr> <td>P0158</td> <td style="text-align: center;">57 or 1</td> <td style="text-align: center;">Ground</td> <td style="text-align: center;">Left</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM or sensor	Ground	P0138	56 or 1	Ground	Right	P0158	57 or 1	Ground	Left
DTC	Terminals			Bank												
	ECM or sensor	Ground														
P0138	56 or 1	Ground	Right													
P0158	57 or 1	Ground	Left													
AEC898A																
<p style="color: blue;">Continuity should not exist.</p> <p>6. Also check harness for short to power.</p>																
OK or NG																
OK	▶	GO TO 4.														
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.														

4	CHECK REAR HO2S GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Check harness continuity between REAR HO2S terminal 4 and engine ground. Refer to Wiring Diagram.</p> <p style="color: blue;">Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 6.
OK (Without CONSULT-II)	▶	GO TO 7.
NG	▶	GO TO 5.

5	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Joint connector-3 ● Harness for open or short between rear heated oxygen sensor and engine ground. 		
▶		
Repair open circuit or short to ground or short to power in harness or connectors.		

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0138 (RIGHT, -B1), P0158 (LEFT, -B2) REAR HO2S (MAX. VOLTAGE MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

6	CHECK REAR HEATED OXYGEN SENSOR
<p>Ⓜ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes. 2. Stop vehicle with engine running. 3. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "RR O2 SEN-B1 (-B2)" as the monitor item with CONSULT-II. 4. Check "RR O2 SEN-B1 (-B2)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$. 	
(Reference data)	
<p style="text-align: right; margin-right: 50px;">The voltage should be above 0.56V at least one time.</p> <p style="text-align: right;">The voltage should be below 0.54V at least one time.</p> <p style="text-align: right; font-size: small;">SEF989RB</p>	
<p>“RR O2 SEN-B1 (-B2)” should be above 0.56V at least once when the “FUEL INJECTION” is +25%. “RR O2 SEN-B1 (-B2)” should be below 0.54V at least once when the “FUEL INJECTION” is -25%.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. 	
OK or NG	
OK	▶ GO TO 8.
NG	▶ Replace malfunctioning rear heated oxygen sensor.

DTC P0138 (RIGHT, -B1), P0158 (LEFT, -B2) REAR HO2S (MAX. VOLTAGE MONITORING)


VG33E

Diagnostic Procedure (Cont'd)


7 CHECK REAR HEATED OXYGEN SENSOR

⊗ Without CONSULT-II

1. Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
2. Stop vehicle with engine running.
3. Set voltmeter probes between ECM terminal 56 (right bank sensor signal) or 57 (left bank sensor signal) and engine ground.
4. Check the voltage when racing up to 4,000 rpm under no load at least 10 times.
(depress and release accelerator pedal as soon as possible)

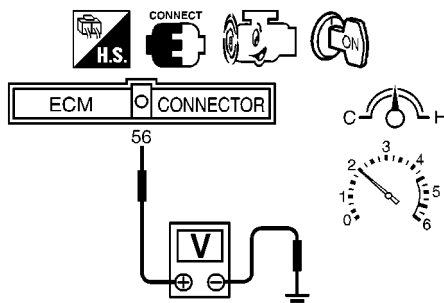

SEF923U

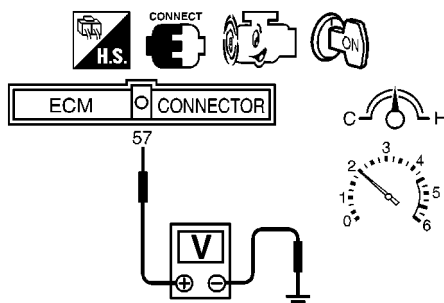

SEF924U

The voltage should be above 0.56V at least once during this procedure.

If the voltage is above 0.56V at step 4, step 5 is not necessary.

5. Keep vehicle idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position (M/T), "D" position with "O/D" OFF (A/T).

The voltage should be below 0.54V at least once during this procedure.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK	▶	GO TO 8.
NG	▶	Replace malfunctioning rear heated oxygen sensor.

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

**DTC P0138 (RIGHT, -B1), P0158 (LEFT, -B2)
REAR HO2S (MAX. VOLTAGE MONITORING)**

VG33E

Diagnostic Procedure (Cont'd)


8	CHECK REAR HO2S SHIELD CIRCUIT FOR OPEN AND SHORT
1. Turn ignition switch OFF. 2. Disconnect joint connector. 3. Check the following. <ul style="list-style-type: none">● Continuity between joint connector terminal 1 and ground● Joint connector (Refer to "HARNES LAYOUT", <i>EL-239</i>) Continuity should exist.	
4. Also check harness for short to ground and short to power. 5. Then reconnect joint connector.	
OK or NG	
OK	▶ GO TO 9.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

9	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
	▶ INSPECTION END

DTC P0139 (RIGHT, -B1), P0159 (LEFT, -B2) REAR HO2S (RESPONSE MONITORING)

VG33E

Component Description

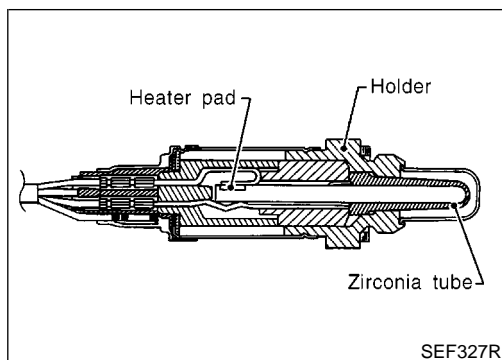

Component Description

NEEC0146

The rear heated oxygen sensor, after three way catalyst, monitors the oxygen level in the exhaust gas on each bank.

Even if switching characteristics of the front heated oxygen sensor are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the rear heated oxygen sensor.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the rear heated oxygen sensor is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

NEEC0147

Specification data are reference values.


MONITOR ITEM	CONDITION	SPECIFICATION
RR O2 SEN-B1 RR O2 SEN-B2	● Engine: After warming up Revving engine from idle up to 2,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
RR O2 MNTR-B1 RR O2 MNTR-B2		LEAN ↔ RICH

ECM Terminals and Reference Value

NEEC0148

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
56 (Right bank)	OR	Rear heated oxygen sen- sor	[Engine is running] ● Revving engine from idle up to 2,000 rpm	0 - Approximately 1.0V
57 (Left bank)	Y			

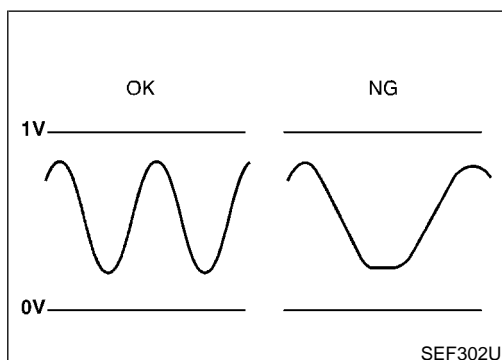

On Board Diagnosis Logic

NEEC0149

The rear heated oxygen sensor has a much longer switching time between rich and lean than the front heated oxygen sensor. The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of rear heated oxygen sensor, ECM monitors whether the switching response of the sensor's voltage is faster than specified during the various driving condition such as fuel-cut.

Malfunction is detected when it takes more time for the sensor to respond between rich and lean than the specified time.

POSSIBLE CAUSE




NEEC0149S01

- Harness or connectors
(The sensor circuit is open or shorted.)
- Rear heated oxygen sensor
- Fuel pressure
- Injectors
- Intake air leaks

DTC P0139 (RIGHT, -B1), P0159 (LEFT, -B2) REAR HO2S (RESPONSE MONITORING)

VG33E

DTC Confirmation Procedure

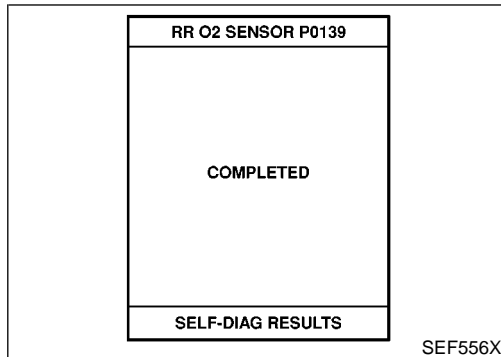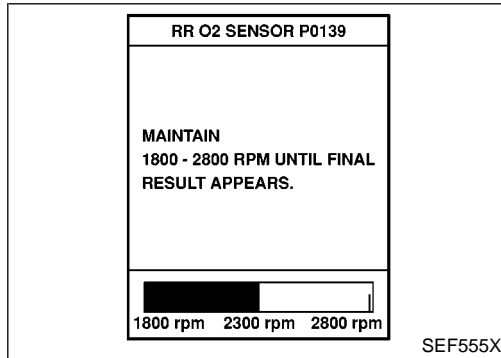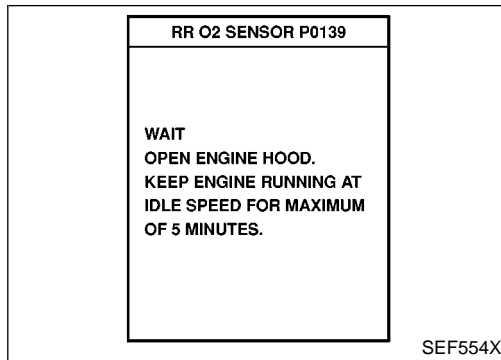

DTC Confirmation Procedure

NEEC0150

NOTE:

If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:


Open engine hood before conducting following procedure With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "DATA MONITOR" mode with CONSULT-II.
- 5) Make sure that "COOLANT TEMP/S" is more than 70°C (158°F).
- 6) Select "RR O2 SEN -B1 (-B2), P0139 (P0159) of "RR O2 SENSOR" in DTC WORK SUPPORT" mode with CONSULT.
- 7) Start engine and follow the instructions of CONSULT-II.
- 8) Make sure that "OK" is displayed after touching "SELF_DIAG RESULTS".
If NG is displayed, refer to "DIAGNOSTIC PROCEDURE", EC-850.
If "CAN NOT BE DIAGNOSED" is displayed, perform the following.
 - a) Stop engine and cool down "COOLANT TEMP/SE" to less than 70°C 158°F).
 - b) Turn ignition switch "ON".
 - c) Select "DATA MONITOR" mode with CONSULT-II.
 - d) Perform from step 6) again when the "COOLANT TEMP/S" reaches to 70°C 158°F)

DTC P0139 (RIGHT, -B1), P0159 (LEFT, -B2) REAR HO2S (RESPONSE MONITORING)

VG33E

Overall Function Check

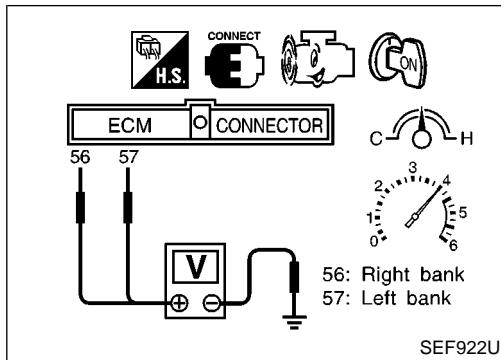

Overall Function Check

Use this procedure to check the overall function of the rear heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed. =NEEC0151

CAUTION:

Always drive vehicle at a safe speed.

⊗ Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminal 56 (right bank sensor signal) or 57 (left bank sensor signal) and engine ground.
- 4) Check the voltage when racing up to 4,000 rpm under no load at least 10 times.
(depress and release accelerator pedal as soon as possible)
The voltage should change at more than 0.06V for 1 second during this procedure.
If the voltage can be confirmed in step 4, step 5 is not necessary.
- 5) Keep vehicle idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position (M/T), "D" position with "O/D" OFF (A/T)..
The voltage should change at more than 0.06V for 1 second during this procedure.
- 6) IF NG, go to "Diagnostic Procedure", EC-850.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0139 (RIGHT, -B1), P0159 (LEFT, -B2) REAR HO2S (RESPONSE MONITORING)

VG33E

Wiring Diagram





Wiring Diagram

NEEC0152

NEEC0152S01

RIGHT BANK

EC-RRO2RH-01

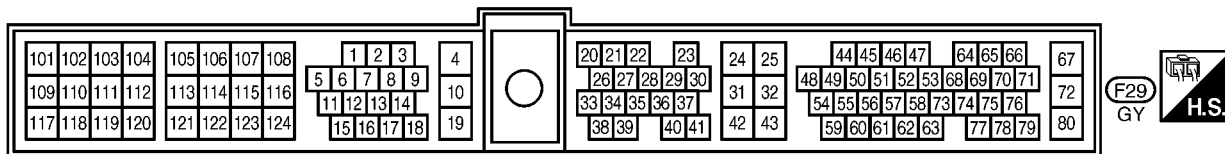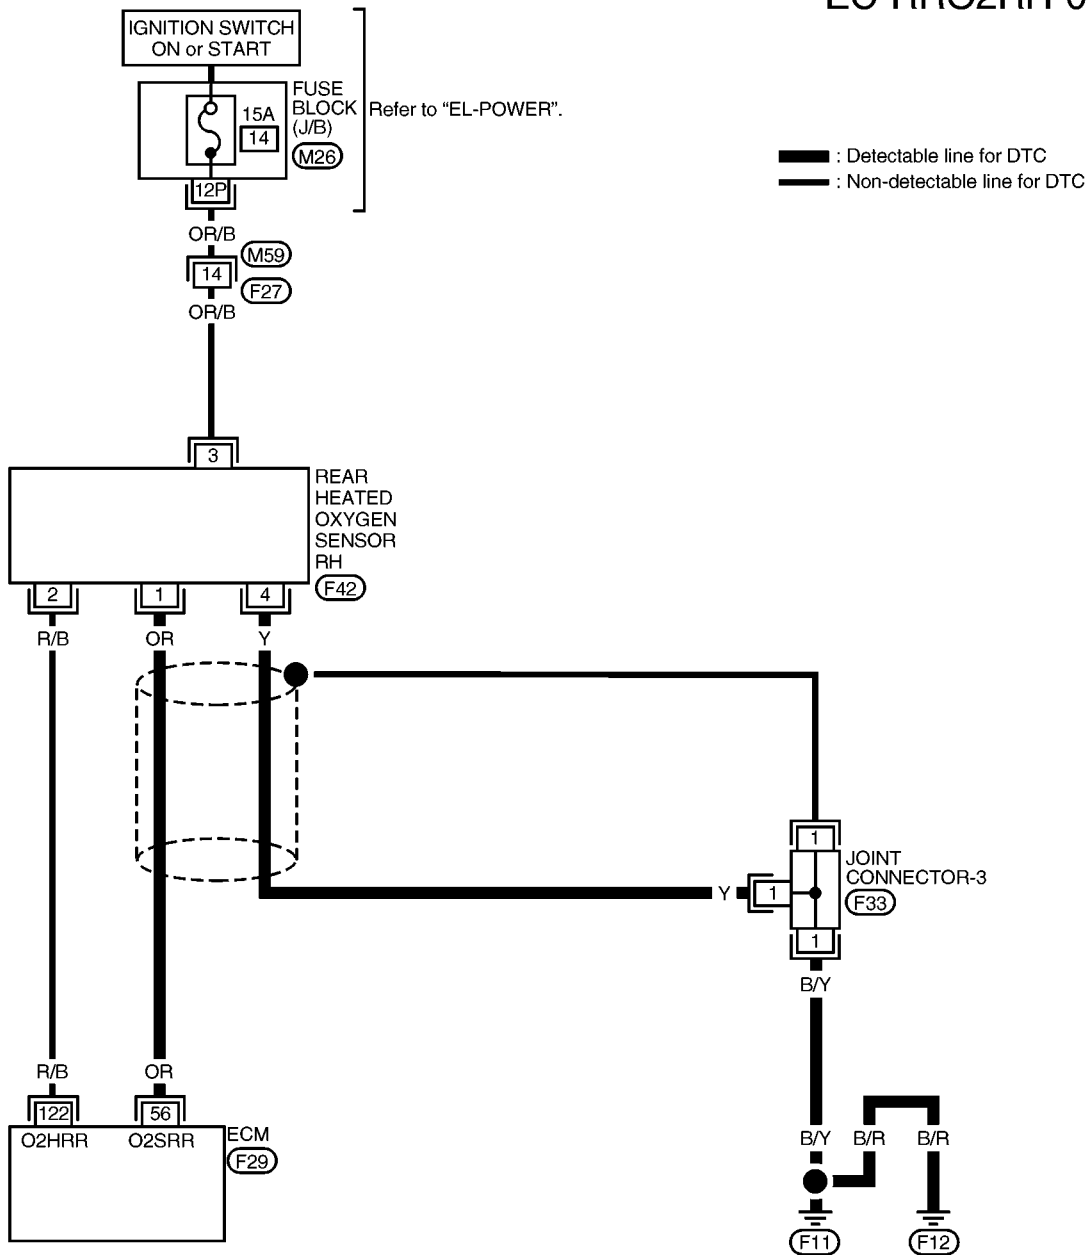

AEC948A

DTC P0139 (RIGHT, -B1), P0159 (LEFT, -B2) REAR HO2S (RESPONSE MONITORING)


VG33E

Wiring Diagram (Cont'd)

LEFT BANK

NEEC0152S02

EC-RRO2LH-01

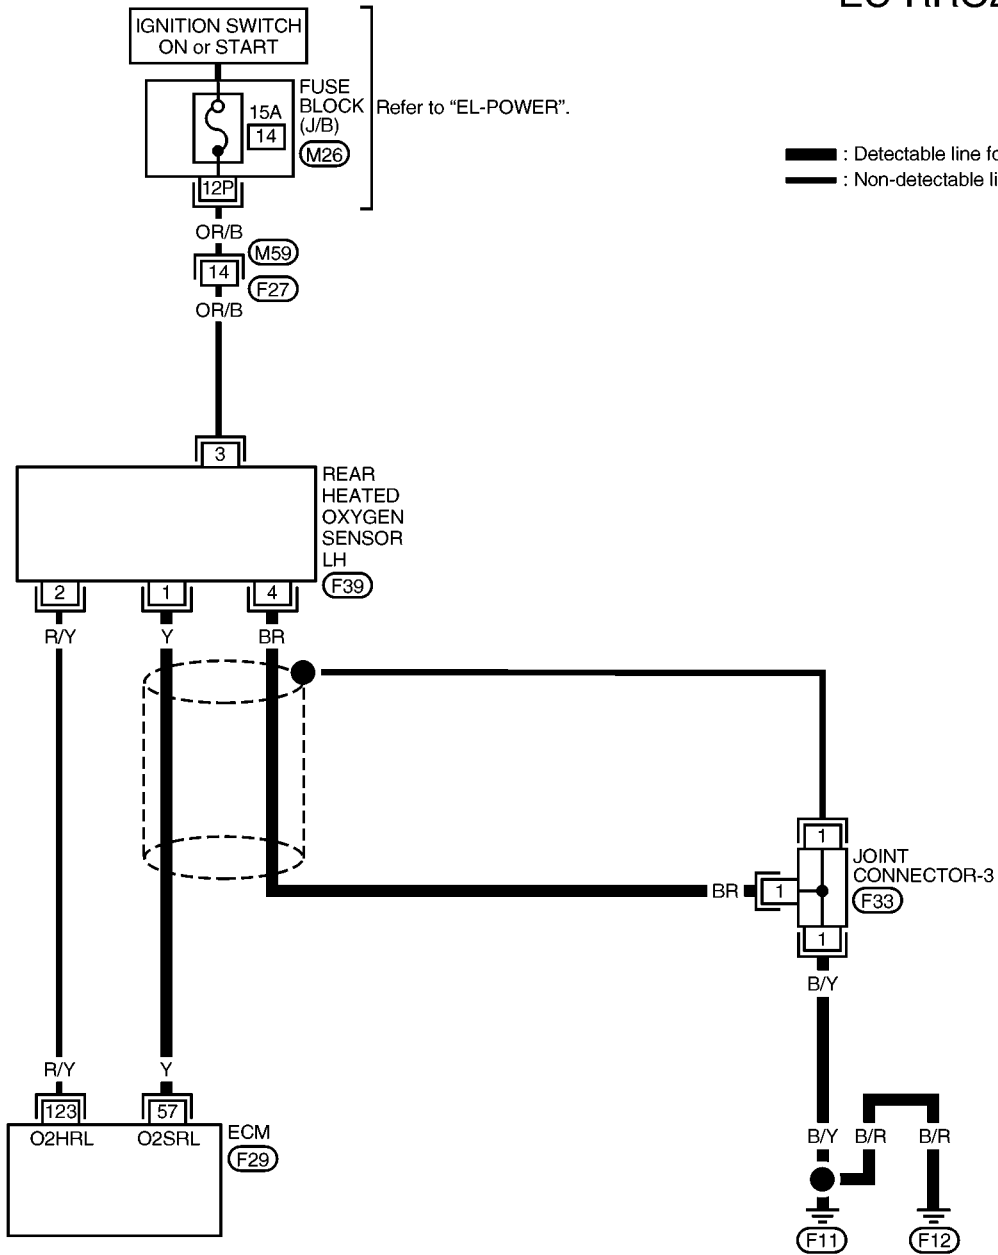

— : Detectable line for DTC
— : Non-detectable line for DTC

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS





BT

HA

SC

EL


IDX

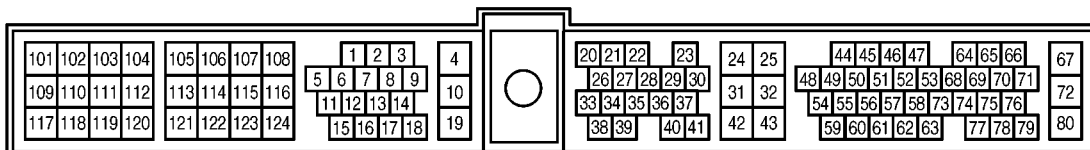



AEC949A

Diagnostic Procedure

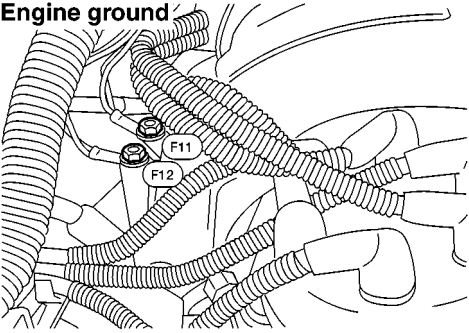NEEC0153


1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch OFF. 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;">  <p>Engine ground</p> </div> <p align="right">AEC640A</p>	
▶ GO TO 2.	

2	CLEAR THE SELF-LEARNING DATA																				
<p> With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "CLEAR".</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td>SELF-LEARN</td> <td>B1: XXX %</td> </tr> <tr> <td>CONTROL</td> <td>B2: XXX %</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>CMPS-RPM(REF)</td> <td>XXX rpm</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>FR O2 SEN-B1</td> <td>XXX V</td> </tr> <tr> <td>FR O2 SEN-B2</td> <td>XXX V</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XXX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XXX %</td> </tr> </tbody> </table> <p align="right">PEF921U</p> <p>4. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0171, P0172, P0174 or P0175 detected? Is it difficult to start engine?</p>		ACTIVE TEST		SELF-LEARN	B1: XXX %	CONTROL	B2: XXX %	MONITOR		CMPS-RPM(REF)	XXX rpm	COOLAN TEMP/S	XXX °C	FR O2 SEN-B1	XXX V	FR O2 SEN-B2	XXX V	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %
ACTIVE TEST																					
SELF-LEARN	B1: XXX %																				
CONTROL	B2: XXX %																				
MONITOR																					
CMPS-RPM(REF)	XXX rpm																				
COOLAN TEMP/S	XXX °C																				
FR O2 SEN-B1	XXX V																				
FR O2 SEN-B2	XXX V																				
A/F ALPHA-B1	XXX %																				
A/F ALPHA-B2	XXX %																				
<p> Without CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch OFF. 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC No. 0102 is displayed in Diagnostic Test Mode II. 6. Erase the diagnostic test mode II (Self-diagnostic results) memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-651. 7. Make sure DTC No. 0505 is displayed in Diagnostic Test Mode II. 8. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC 0114, 0115, 0209 or 0210 detected? Is it difficult to start engine?</p> <p align="center">Yes or No</p>																					
Yes	▶ Perform trouble diagnosis for DTC P0171, P0174 or P0172, P0175. Refer to EC-870, 878.																				
No	▶ GO TO 3.																				

DTC P0139 (RIGHT, -B1), P0159 (LEFT, -B2) REAR HO2S (RESPONSE MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

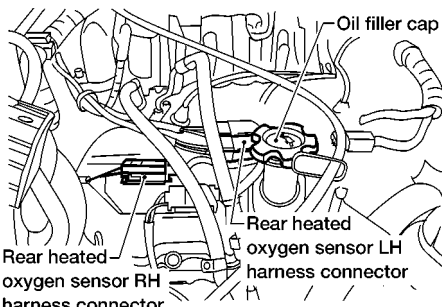3	CHECK REAR HO2S INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT															
<p>1. Turn ignition switch OFF. 2. Disconnect corresponding rear heated oxygen sensor harness connector.</p>																
																
		<p>AEC645A</p> <p style="background-color: black; color: white; padding: 2px; font-weight: bold;">EC</p>														
<p>3. Disconnect ECM harness connector. 4. Check harness continuity between ECM terminal and REAR HO2S terminal as follows. Refer to Wiring Diagram.</p>																
<table border="1" style="margin: auto;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0139</td> <td style="text-align: center;">56</td> <td style="text-align: center;">1</td> <td style="text-align: center;">Right</td> </tr> <tr> <td>P0159</td> <td style="text-align: center;">57</td> <td style="text-align: center;">1</td> <td style="text-align: center;">Left</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM	Sensor	P0139	56	1	Right	P0159	57	1	Left
DTC	Terminals			Bank												
	ECM	Sensor														
P0139	56	1	Right													
P0159	57	1	Left													
		<p>AEC899A</p>														
<p>Continuity should exist. 5. Check harness continuity between ECM terminal or REAR HO2S terminal and ground as follows. Refer to Wiring Diagram.</p>																
<table border="1" style="margin: auto;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM or sensor</th> <th>Ground</th> </tr> </thead> <tbody> <tr> <td>P0139</td> <td style="text-align: center;">56 or 1</td> <td style="text-align: center;">Ground</td> <td style="text-align: center;">Right</td> </tr> <tr> <td>P0159</td> <td style="text-align: center;">57 or 1</td> <td style="text-align: center;">Ground</td> <td style="text-align: center;">Left</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM or sensor	Ground	P0139	56 or 1	Ground	Right	P0159	57 or 1	Ground	Left
DTC	Terminals			Bank												
	ECM or sensor	Ground														
P0139	56 or 1	Ground	Right													
P0159	57 or 1	Ground	Left													
		<p>AEC900A</p>														
<p>6. Also check harness for short to power.</p>																
OK or NG																
OK	▶	GO TO 4.														
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.														

4	CHECK REAR HO2S GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Check harness continuity between REAR HO2S terminal 4 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p>		
<p>2. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 6.
OK (Without CONSULT-II)	▶	GO TO 7.
NG	▶	GO TO 5.

5	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Joint connector-3 ● Harness for open or short between rear heated oxygen sensor and engine ground. 		
	▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0139 (RIGHT, -B1), P0159 (LEFT, -B2) REAR HO2S (RESPONSE MONITORING)

VG33E

Diagnostic Procedure (Cont'd)

6	CHECK REAR HEATED OXYGEN SENSOR
<p>Ⓜ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes. 2. Stop vehicle with engine running. 3. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "RR O2 SEN-B1 (-B2)" as the monitor item with CONSULT-II. 4. Check "RR O2 SEN-B1 (-B2)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$. 	
(Reference data)	
<p>"RR O2 SEN-B1 (-B2)" should be above 0.56V at least once when the "FUEL INJECTION" is +25%. "RR O2 SEN-B1 (-B2)" should be below 0.54V at least once when the "FUEL INJECTION" is -25%.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. 	
OK or NG	
OK	▶ GO TO 8.
NG	▶ Replace malfunctioning rear heated oxygen sensor.

DTC P0139 (RIGHT, -B1), P0159 (LEFT, -B2) REAR HO2S (RESPONSE MONITORING)


VG33E

Diagnostic Procedure (Cont'd)


7 CHECK REAR HEATED OXYGEN SENSOR

⊗ Without CONSULT-II

1. Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
2. Stop vehicle with engine running.
3. Set voltmeter probes between ECM terminal 56 (right bank sensor signal) or 57 (left bank sensor signal) and engine ground.
4. Check the voltage when racing up to 4,000 rpm under no load at least 10 times.
(depress and release accelerator pedal as soon as possible)

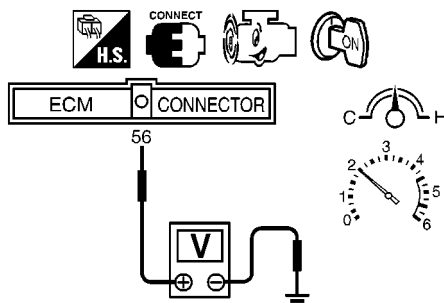

SEF923U

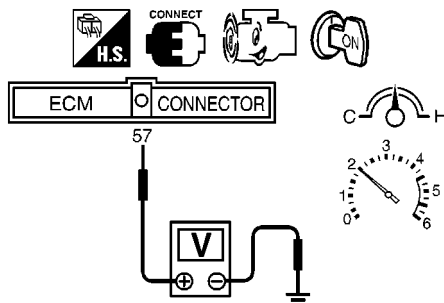

SEF924U

The voltage should be above 0.56V at least once during this procedure.

If the voltage is above 0.56V at step 4, step 5 is not necessary.

5. Keep vehicle idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position (M/T), "D" position with "O/D" OFF (A/T).

The voltage should be below 0.54V at least once during this procedure.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK	▶	GO TO 8.
NG	▶	Replace malfunctioning rear heated oxygen sensor.

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

**DTC P0139 (RIGHT, -B1), P0159 (LEFT, -B2)
REAR HO2S (RESPONSE MONITORING)**

VG33E

Diagnostic Procedure (Cont'd)


8	CHECK REAR HO2S SHIELD CIRCUIT FOR OPEN AND SHORT
1. Turn ignition switch OFF. 2. Disconnect joint connector. 3. Check the following. <ul style="list-style-type: none">● Continuity between joint connector terminal 1 and ground● Joint connector (Refer to "HARNES LAYOUT", <i>EL-239</i>) Continuity should exist.	
4. Also check harness for short to ground and short to power. 5. Then reconnect joint connector.	
OK or NG	
OK	▶ GO TO 9.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

9	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
	▶ INSPECTION END

DTC P0140 (RIGHT, -B1), P0160 (LEFT, -B2) REAR HO2S (HIGH VOLTAGE)

VG33E

Component Description

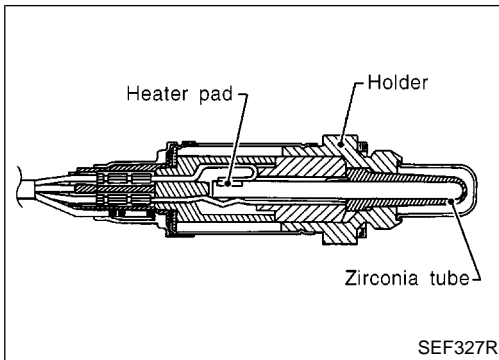

Component Description

NEEC0154

The rear heated oxygen sensor, after three way catalyst, monitors the oxygen level in the exhaust gas on each bank.

Even if switching characteristics of the front heated oxygen sensor are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the rear heated oxygen sensor.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the rear heated oxygen sensor is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

NEEC0155

Specification data are reference values.


MONITOR ITEM	CONDITION	SPECIFICATION
RR O2 SEN-B1 RR O2 SEN-B2	● Engine: After warming up Revving engine from idle up to 2,000 rpm	0 - 0.3V ↔ Approx. 0.6 - 1.0V
RR O2 MNTR-B1 RR O2 MNTR-B2		LEAN ↔ RICH

ECM Terminals and Reference Value

NEEC0156

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
56 (Right bank)	OR	Rear heated oxygen sensor	[Engine is running] ● Warm-up condition ● Revving engine from idle up to 2,000 rpm	0 - Approximately 1.0V
57 (Left bank)	Y			

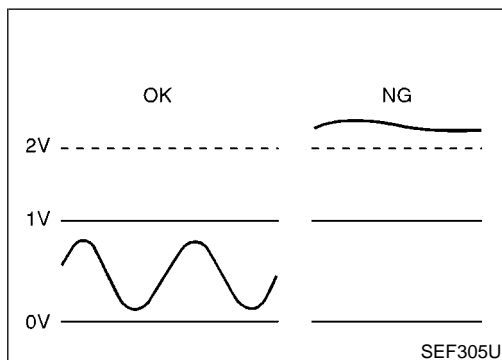

On Board Diagnosis Logic

NEEC0157

The rear heated oxygen sensor has a much longer switching time between rich and lean than the front heated oxygen sensor. The oxygen storage capacity before the three way catalyst causes the longer switching time. To judge the malfunctions of rear heated oxygen sensor, ECM monitors whether the voltage is unusually high during the various driving condition such as fuel-cut.

Malfunction is detected when an excessively high voltage from the sensor is sent to ECM.

POSSIBLE CAUSE

NEEC0157S01

- Harness or connectors (The sensor circuit is open or shorted.)
- Rear heated oxygen sensor

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0140 (RIGHT, -B1), P0160 (LEFT, -B2) REAR HO2S (HIGH VOLTAGE)

VG33E

DTC Confirmation Procedure

5	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS~RPM (REF)	XXX rpm
	COOLAN TEMP/S	XXX °C
	VHCL SPEED SE	XXX km/h
	P/N POSI SW	ON
	B/FUEL SCHDL	XXX msec

SEF375X

DTC Confirmation Procedure

NEEC0158

CAUTION:

Always drive vehicle at a safe speed.

NOTE:


If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

With CONSULT-II

- 1) Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 3) Stop vehicle with engine running.
- 4) Let engine idle for 1 minute.
- 5) Maintain the following conditions for at least 5 consecutive seconds.

CMPS-RPM (REF)	1,300 - 3,100 rpm (A/T models) 1,500 - 3,600 rpm (M/T models)
VHCL SPEED SE	64 - 130 km/h (40 - 80 MPH)
B/FUEL SCHDL	0.5 - 6.4 msec (A/T models) 0.5 - 5.9 msec (M/T models)
COOLAN TEMP/S	70 - 100°C (158 - 212°F)
Selector lever	Suitable position

- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-859.

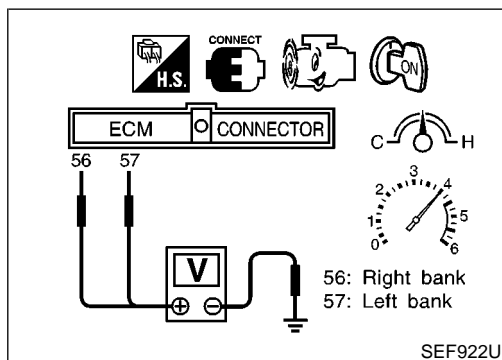

Overall Function Check

NEEC0159

Use this procedure to check the overall function of the rear heated oxygen sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeter probes between ECM terminal 56 (right bank sensor signal) or 57 (left bank sensor signal) and engine ground.
- 4) Check the voltage when racing up to 4,000 rpm under no load at least 10 times.
(depress and release accelerator pedal as soon as possible)
The voltage should be below 2V during this procedure.
- 5) If NG, go to "Diagnostic Procedure", EC-859.

DTC P0140 (RIGHT, -B1), P0160 (LEFT, -B2) REAR HO2S (HIGH VOLTAGE)

VG33E

Wiring Diagram


Wiring Diagram

NEEC0160






NEEC0160S01

RIGHT BANK

EC-RRO2RH-01

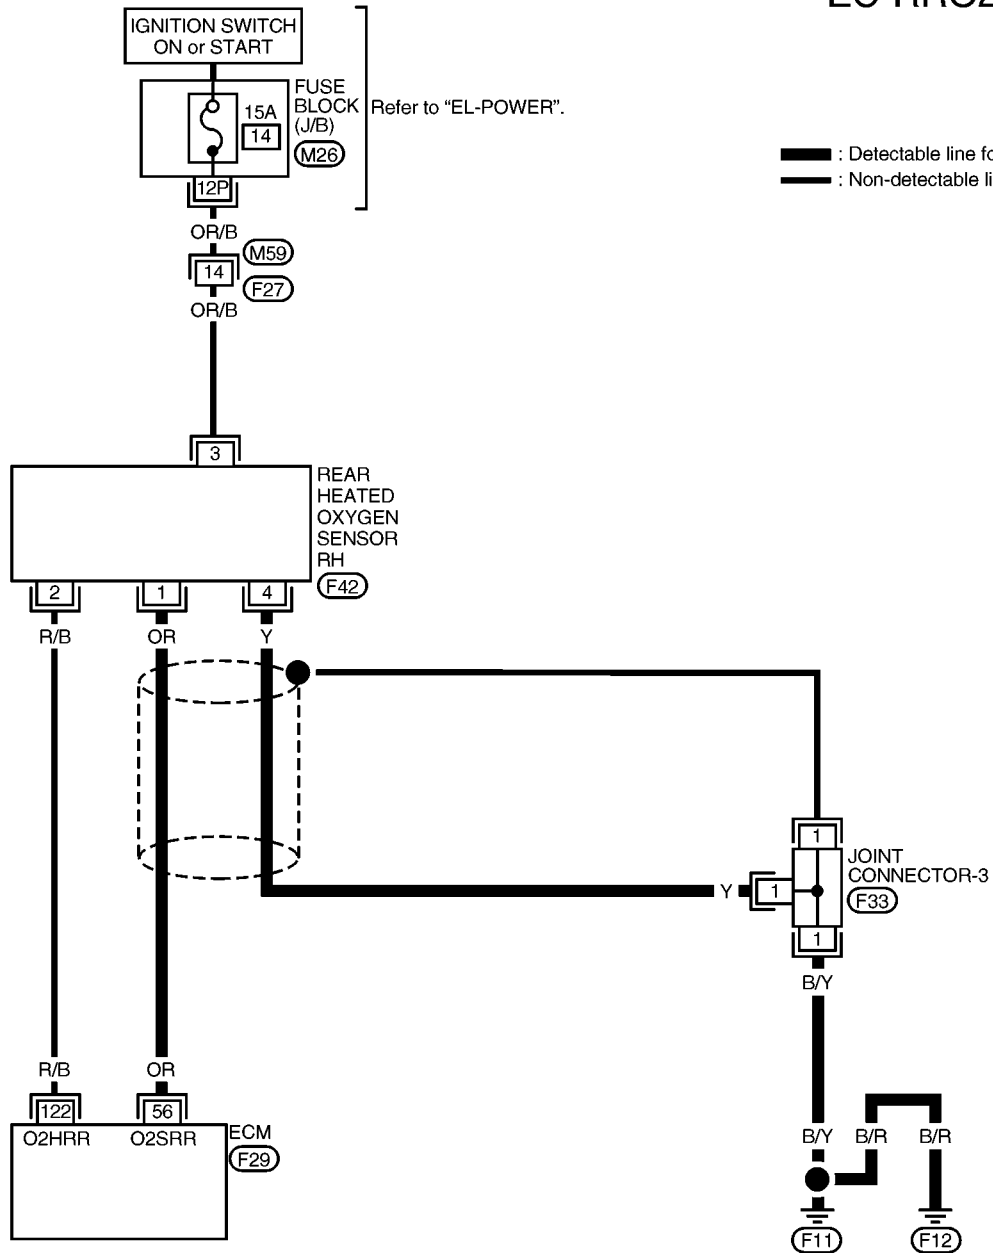

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

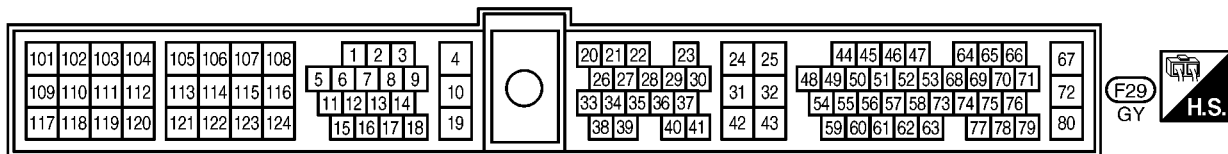

AEC948A

DTC P0140 (RIGHT, -B1), P0160 (LEFT, -B2) REAR HO2S (HIGH VOLTAGE)






VG33E

Wiring Diagram (Cont'd)

LEFT BANK

NEEC0160S02

EC-RRO2LH-01

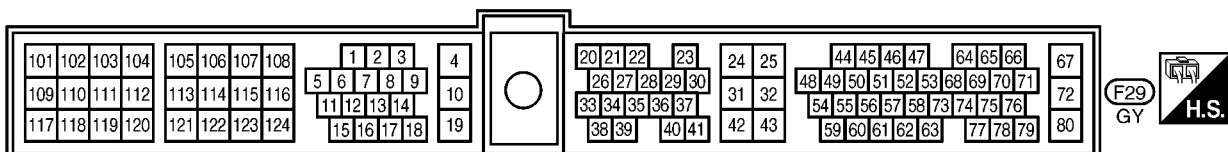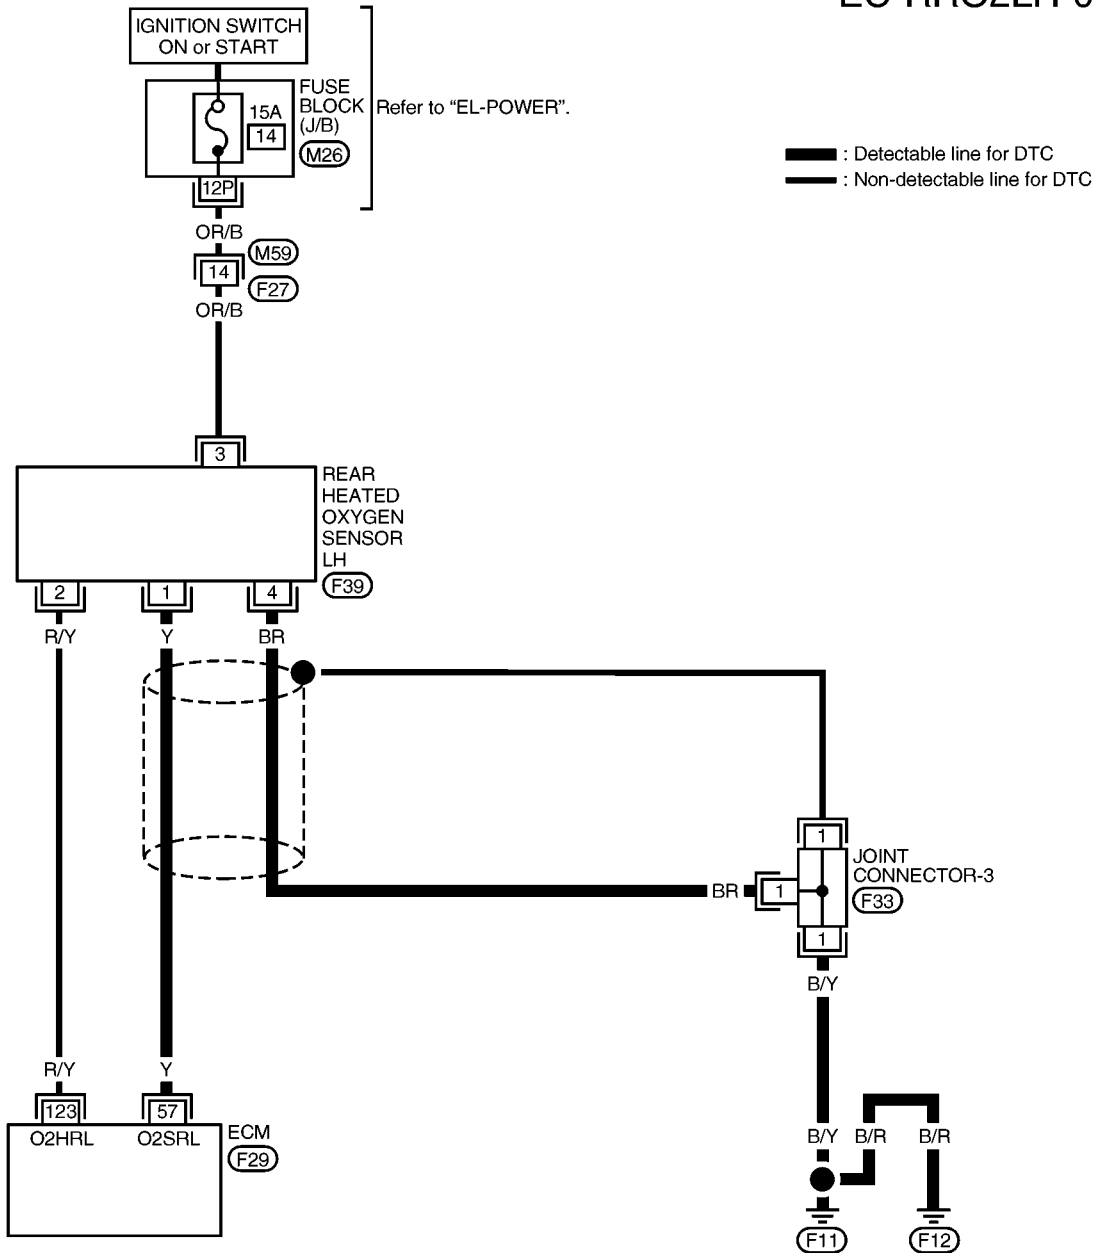

AEC949A


DTC P0140 (RIGHT, -B1), P0160 (LEFT, -B2) REAR HO2S (HIGH VOLTAGE)

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0161

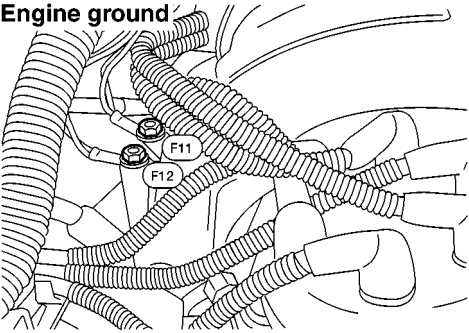1	INSPECTION START	<p>1. Turn ignition switch OFF. 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;">  <p>Engine ground</p> </div> <p>3. Disconnect corresponding rear heated oxygen sensor harness connector. 4. Disconnect ECM harness connector.</p> <p style="text-align: right; font-size: small;">AEC640A</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p style="background-color: black; color: white; padding: 2px;">EC</p> <p>FE</p> <p>CL</p>
▶		GO TO 2.	

2	CHECK REAR HO2S INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	<p>1. Check harness continuity between ECM terminal and REAR HO2S terminal as follows. Refer to Wiring Diagram.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse; text-align: center;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0140</td> <td>56</td> <td>1</td> <td>Right</td> </tr> <tr> <td>P0160</td> <td>57</td> <td>1</td> <td>Left</td> </tr> </tbody> </table> <p style="text-align: right; font-size: small;">AEC901A</p> <p style="color: blue; font-weight: bold;">Continuity should exist.</p> <p>2. Check harness continuity between ECM terminal or REAR HO2S terminal and ground as follows. Refer to Wiring Diagram.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse; text-align: center;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM or sensor</th> <th>Ground</th> </tr> </thead> <tbody> <tr> <td>P0140</td> <td>56 or 1</td> <td>Ground</td> <td>Right</td> </tr> <tr> <td>P0160</td> <td>57 or 1</td> <td>Ground</td> <td>Left</td> </tr> </tbody> </table> <p style="text-align: right; font-size: small;">AEC902A</p> <p style="color: blue; font-weight: bold;">Continuity should not exist.</p> <p>3. Also check harness for short to power.</p> <p style="text-align: center; font-weight: bold;">OK or NG</p>	DTC	Terminals		Bank	ECM	Sensor	P0140	56	1	Right	P0160	57	1	Left	DTC	Terminals		Bank	ECM or sensor	Ground	P0140	56 or 1	Ground	Right	P0160	57 or 1	Ground	Left	<p>MT</p> <p>AT</p> <p>TF</p> <p>PD</p> <p>AX</p> <p>SU</p> <p>BR</p> <p>ST</p>
DTC	Terminals			Bank																											
	ECM	Sensor																													
P0140	56	1	Right																												
P0160	57	1	Left																												
DTC	Terminals		Bank																												
	ECM or sensor	Ground																													
P0140	56 or 1	Ground	Right																												
P0160	57 or 1	Ground	Left																												
OK ▶		GO TO 3.																													
NG ▶		Repair open circuit or short to ground or short to power in harness or connectors.																													

3	CHECK REAR HO2S GROUND CIRCUIT FOR OPEN AND SHORT	<p>1. Check harness continuity between REAR HO2S terminal 4 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p> <p style="text-align: center; font-weight: bold;">OK or NG</p>	<p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p>
OK ▶		GO TO 5.	
NG ▶		GO TO 4.	

DTC P0140 (RIGHT, -B1), P0160 (LEFT, -B2) REAR HO2S (HIGH VOLTAGE)

VG33E

Diagnostic Procedure (Cont'd)

4	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Joint connector-3 ● Harness for open or short between rear heated oxygen sensor and engine ground. 		
▶	Repair open circuit or short to ground or short to power in harness or connectors.	

5	CHECK REAR HO2S CONNECTORS FOR WATER	
Check rear heated oxygen sensor connector and harness connector for water. Water should not exist.		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 6.
OK (Without CONSULT-II)	▶	GO TO 7.
NG	▶	Repair or replace harness or connectors.

6	CHECK REAR HEATED OXYGEN SENSOR	
(i) With CONSULT-II <ol style="list-style-type: none"> 1. Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes. 2. Stop vehicle with engine running. 3. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "RR O2 SEN-B1 (-B2)" as the monitor item with CONSULT-II. 4. Check "RR O2 SEN-B1 (-B2)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$. 		
(Reference data)		
<p style="text-align: center;">The voltage should be above 0.56V at least one time.</p> <p style="text-align: right;">The voltage should be below 0.54V at least one time.</p> <p style="text-align: right;">SEF989RB</p>		
"RR O2 SEN-B1 (-B2)" should be above 0.56V at least once when the "FUEL INJECTION" is +25%. "RR O2 SEN-B1 (-B2)" should be below 0.54V at least once when the "FUEL INJECTION" is -25%.		
CAUTION:		
<ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. 		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Replace malfunctioning rear heated oxygen sensor.

DTC P0140 (RIGHT, -B1), P0160 (LEFT, -B2) REAR HO2S (HIGH VOLTAGE)


VG33E

Diagnostic Procedure (Cont'd)


7 CHECK REAR HEATED OXYGEN SENSOR

⊗ Without CONSULT-II

1. Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
2. Stop vehicle with engine running.
3. Set voltmeter probes between ECM terminal 56 (right bank sensor signal) or 57 (left bank sensor signal) and engine ground.
4. Check the voltage when racing up to 4,000 rpm under no load at least 10 times.
(depress and release accelerator pedal as soon as possible)

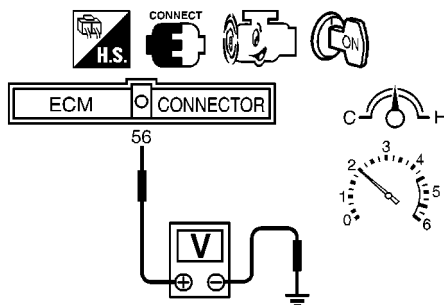

SEF923U

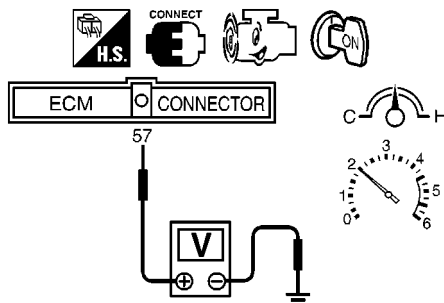

SEF924U

The voltage should be above 0.56V at least once during this procedure.

If the voltage is above 0.56V at step 4, step 5 is not necessary.

5. Keep vehicle idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in 3rd gear position (M/T), "D" position with "O/D" OFF (A/T).

The voltage should be below 0.54V at least once during this procedure.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK	▶	GO TO 8.
NG	▶	Replace malfunctioning front heated oxygen sensor.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

**DTC P0140 (RIGHT, -B1), P0160 (LEFT, -B2)
REAR HO2S (HIGH VOLTAGE)**

VG33E

Diagnostic Procedure (Cont'd)

8	CHECK REAR HO2S SHIELD CIRCUIT FOR OPEN AND SHORT
1. Turn ignition switch OFF. 2. Disconnect joint connector. 3. Check the following. <ul style="list-style-type: none">● Continuity between joint connector terminal 1 and ground● Joint connector (Refer to "HARNES LAYOUT", <i>EL-239</i>) Continuity should exist.	
4. Also check harness for short to ground and short to power. 5. Then reconnect joint connector.	
OK or NG	
OK	▶ GO TO 9.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

9	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
	▶ INSPECTION END

DTC P0141 (RIGHT, -B1), P0161 (LEFT, -B2) REAR HO2S HEATER

VG33E
Description

Description

SYSTEM DESCRIPTION

NEEC0162

NEEC0162S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	Rear heated oxygen sensor heater control	Rear heated oxygen sensor heaters

The ECM performs ON/OFF control of the rear heated oxygen sensor heaters corresponding to the engine speed.

OPERATION

NEEC0162S02

Engine speed rpm	Rear heated oxygen sensor heaters
Above 3,200	OFF
Below 3,200	ON

CONSULT-II Reference Value in Data Monitor Mode

NEEC0163

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
RR O2 HTR-B1 RR O2 HTR-B2	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● Engine is running above 3,200 rpm. 	OFF
	<ul style="list-style-type: none"> ● Engine is running below 3,200 rpm after driving for 2 minutes at a speed of 70 km/h (43 MPH) or more. 	ON

ECM Terminals and Reference Value

NEEC0164

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
122 (Right bank)	R/B	Rear heated oxygen sensor heater	[Ignition switch "ON"] <ul style="list-style-type: none"> ● Engine stopped [Engine is running] <ul style="list-style-type: none"> ● Engine speed is above 3,200 rpm 	BATTERY VOLTAGE (11 - 14V)
123 (Left bank)	R/Y		[Engine is running] <ul style="list-style-type: none"> ● Engine speed is below 3,200 rpm ● After driving for 2 minutes at a speed of 70 km/h (43 MPH) or more 	Approximately 0.4V

On Board Diagnosis Logic

NEEC0165

Malfunction is detected when the current amperage in the rear heated oxygen sensor heater circuit is out of the normal range. (An improper voltage drop signal is sent to ECM through the rear heated oxygen sensor heater.)

POSSIBLE CAUSE

NEEC0165S01

- Harness or connectors
(The rear heated oxygen sensor heater circuit is open or shorted.)
- Rear heated oxygen sensor heater

DTC P0141 (RIGHT, -B1), P0161 (LEFT, -B2) REAR HO2S HEATER

VG33E

DTC Confirmation Procedure

4	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF)	XXX rpm

PEF357V

DTC Confirmation Procedure

NEEC0166

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 10.5V and 16V at idle.

Ⓜ With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine.
- 3) Drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 4) Stop vehicle and let engine idle for at least 6 seconds.
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-867.

Ⓜ With GST

Follow the procedure "With CONSULT-II".

DTC P0141 (RIGHT, -B1), P0161 (LEFT, -B2) REAR HO2S HEATER

VG33E
Wiring Diagram


Wiring Diagram

RIGHT BANK





NEEC0167

NEEC0167S01

EC-RO2H-R-01

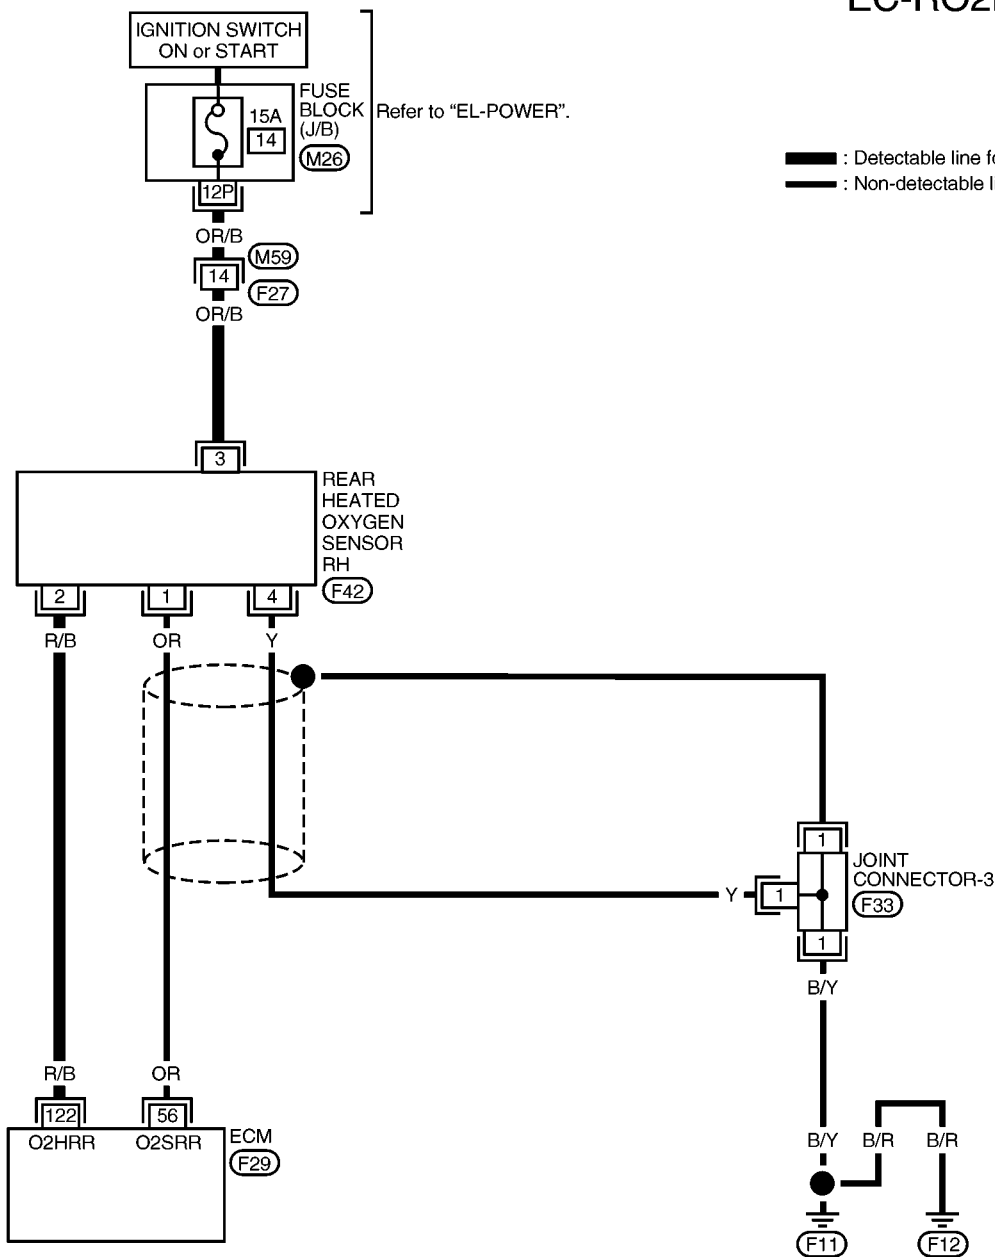

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

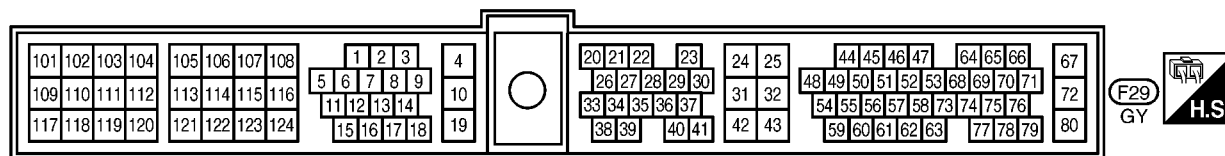

AEC950A

DTC P0141 (RIGHT, -B1), P0161 (LEFT, -B2) REAR HO2S HEATER






VG33E

Wiring Diagram (Cont'd)

LEFT BANK

NEEC0167S02

EC-RO2H-L-01

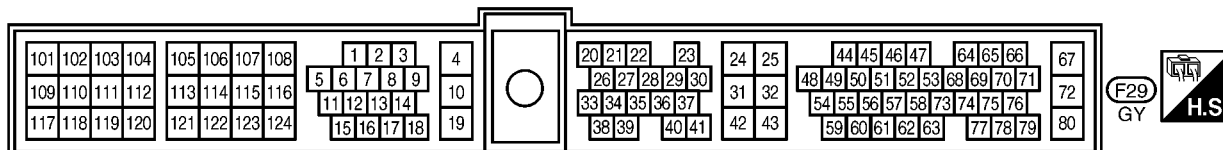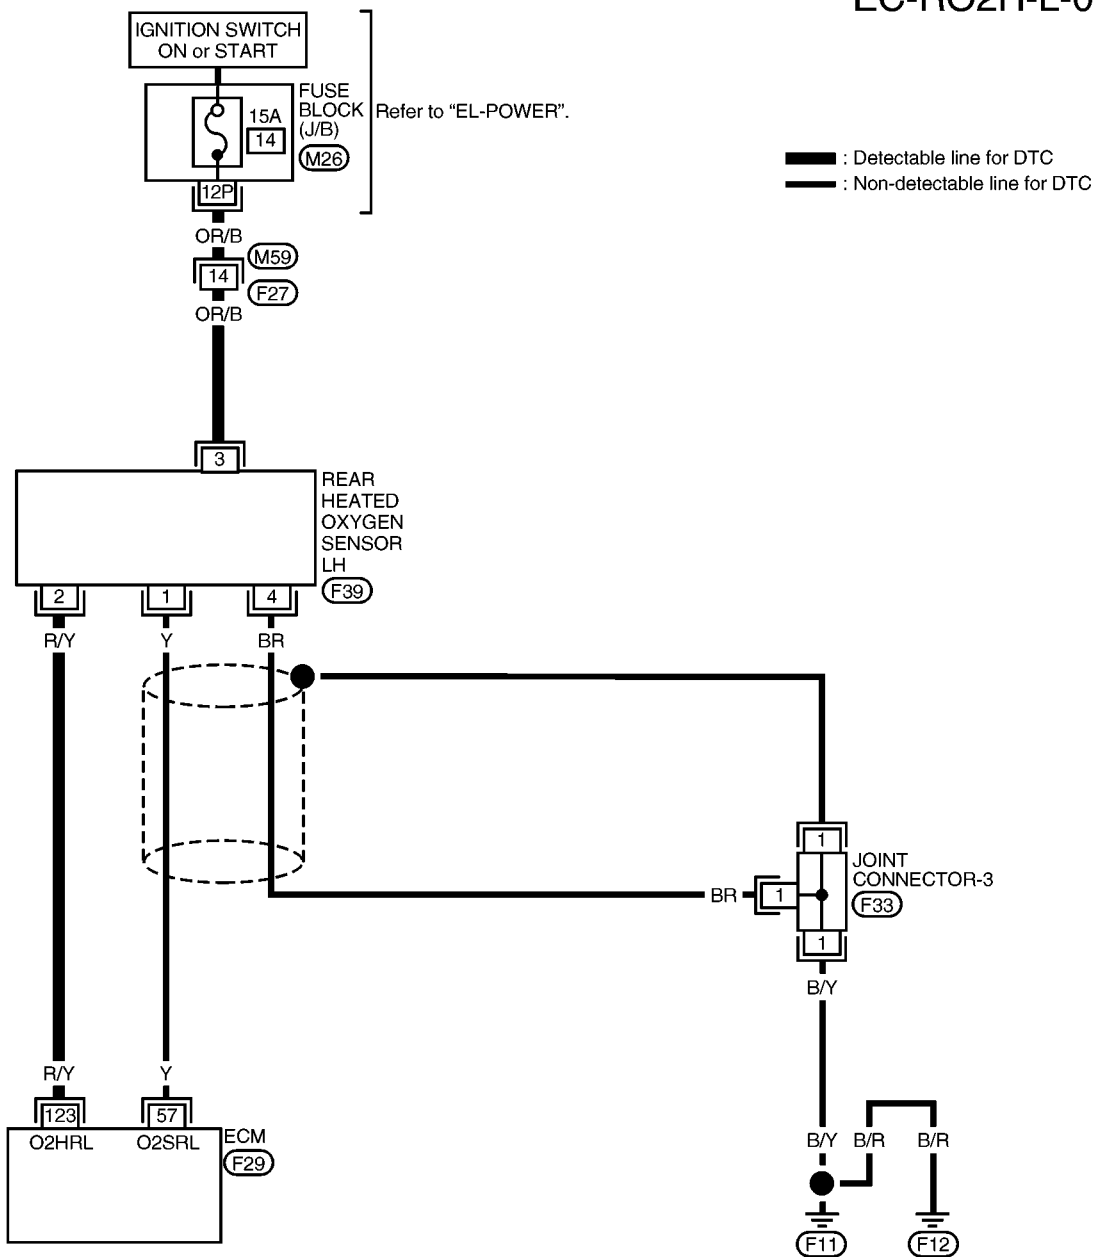

AEC951A



DTC P0141 (RIGHT, -B1), P0161 (LEFT, -B2) REAR HO2S HEATER

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0168

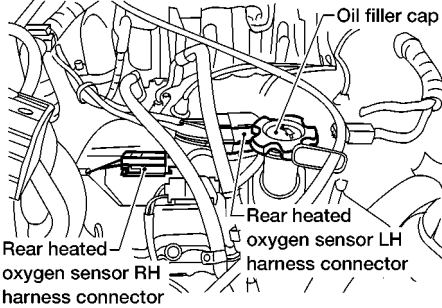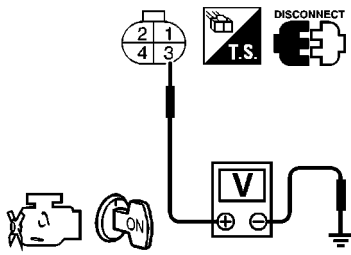1	CHECK REAR HO2S POWER SUPPLY CIRCUIT	<p>1. Turn ignition switch "OFF". 2. Disconnect corresponding rear heated oxygen sensor harness connector.</p> <div style="text-align: center;">  </div> <p>3. Turn ignition switch "ON". 4. Check voltage between REAR HO2S terminal 3 and ground.</p> <div style="text-align: center;">  </div> <p style="color: blue; font-weight: bold;">Voltage: Battery voltage</p> <p style="text-align: center; font-weight: bold;">OK or NG</p>	<p style="font-size: small;">AEC645A</p> <p style="font-size: small;">SEF637W</p>
OK	▶	GO TO 3.	
NG	▶	GO TO 2.	

2	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M59, F27 ● Fuse block (J/B) connector M26 ● 10A fuse ● Harness for open or short between rear heated oxygen sensor and fuse 	
	▶	Repair harness or connectors.	

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0141 (RIGHT, -B1), P0161 (LEFT, -B2) REAR HO2S HEATER

VG33E

Diagnostic Procedure (Cont'd)

3	CHECK REAR HO2S GROUND CIRCUIT FOR OPEN AND SHORT																
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect ECM harness connector.</p> <p>3. Check harness continuity between ECM terminal and REAR HO2S terminal as follows. Refer to Wiring Diagram.</p>																	
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0141</td> <td style="text-align: center;">122</td> <td style="text-align: center;">4</td> <td style="text-align: center;">Right</td> </tr> <tr> <td>P0161</td> <td style="text-align: center;">123</td> <td style="text-align: center;">4</td> <td style="text-align: center;">Left</td> </tr> </tbody> </table>				DTC	Terminals		Bank	ECM	Sensor	P0141	122	4	Right	P0161	123	4	Left
DTC	Terminals		Bank														
	ECM	Sensor															
P0141	122	4	Right														
P0161	123	4	Left														
AEC903A																	
<p>Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>																	
OK	▶	GO TO 5.															
NG	▶	GO TO 4.															

4	DETECT MALFUNCTIONING PART		
<p>Check the following.</p> <ul style="list-style-type: none"> ● Joint connector-3 ● Harness for open or short between rear heated oxygen sensor and engine ground. 			
		▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0141 (RIGHT, -B1), P0161 (LEFT, -B2) REAR HO2S HEATER

VG33E


Diagnostic Procedure (Cont'd)

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

5 CHECK REAR HEATED OXYGEN SENSOR HEATER

Check the following.

1. Check resistance between REAR HO2S terminals 2 and 3.

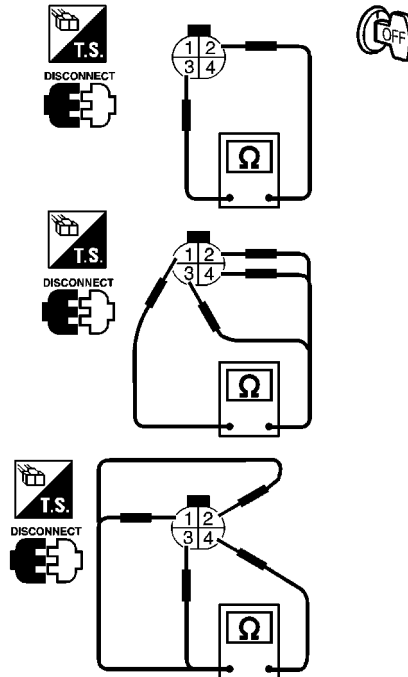

Resistance: 2.3 - 4.3Ω at 25°C (77°F)

SEF716W

2. Check continuity.

Terminal No.	Continuity
1 and 2, 3, 4	No
4 and 1, 2, 3	

MTBL0233

CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK	▶	GO TO 6.
NG	▶	Replace malfunctioning front heated oxygen sensor.

6 CHECK INTERMITTENT INCIDENT

Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.

▶ **INSPECTION END**

DTC P0171 (RIGHT, -B1), P0174 (LEFT, -B2) FUEL INJECTION SYSTEM FUNCTION (LEAN)

VG33E

On Board Diagnosis Logic

On Board Diagnosis Logic

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the front heated oxygen sensors. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios. In case the amount of the compensation value is extremely large (The actual mixture ratio is too lean.), the ECM judges the condition as the fuel injection system malfunction and light up the MIL (2 trip detection logic).

NEEC0169

Sensor	Input Signal to ECM	ECM function	Actuator
Front heated oxygen sensors	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection control	Injectors

Malfunction is detected when fuel injection system does not operate properly, the amount of mixture ratio compensation is too large. (The mixture ratio is too lean.)

POSSIBLE CAUSE

- Intake air leaks
- Front heated oxygen sensor
- Injectors
- Exhaust gas leaks
- Incorrect fuel pressure
- Lack of fuel
- Mass air flow sensor

NEEC0169S01

DTC P0171 (RIGHT, -B1), P0174 (LEFT, -B2) FUEL INJECTION SYSTEM FUNCTION (LEAN)

VG33E

DTC Confirmation Procedure

4

ACTIVE TEST	
SELF-LEARN	B1: 100 %
CONTROL	B2: 100%
MONITOR	
CMPS-RPM(REF)	XXX rpm
COOLAN TEMP/S	XXX °C
FR O2 SEN-B1	XXX V
FR O2 SEN-B2	XXX V
A/F ALPHA-B1	XXX %
A/F ALPHA-B2	XXX %

PEF717W

DTC Confirmation Procedure

=NEEC0170

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "SELF-LEARN CONTROL" in "ACTIVE TEST" mode with CONSULT-II.
- 4) Clear the self-learning control coefficient by touching "CLEAR".
- 5) Select "DATA MONITOR" mode with CONSULT-II.
- 6) Start engine again and let it idle for at least 10 minutes. The 1st trip DTC P0171 or P0174 should be detected at this stage, if a malfunction exists. If so, go to "Diagnostic Procedure", EC-874.
- 7) If it is difficult to start engine at step 6, the fuel injection system has a malfunction, too.
- 8) Crank engine while depressing accelerator pedal. If engine starts, go to "Diagnostic Procedure", EC-874. If engine does not start, check exhaust and intake air leak visually.

With GST

Follow the procedure "With CONSULT-II".

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0171 (RIGHT, -B1), P0174 (LEFT, -B2) FUEL INJECTION SYSTEM FUNCTION (LEAN)

VG33E

Wiring Diagram


Wiring Diagram

NEEC0171

NEEC0171S01



RIGHT BANK

EC-FUEL RH-01

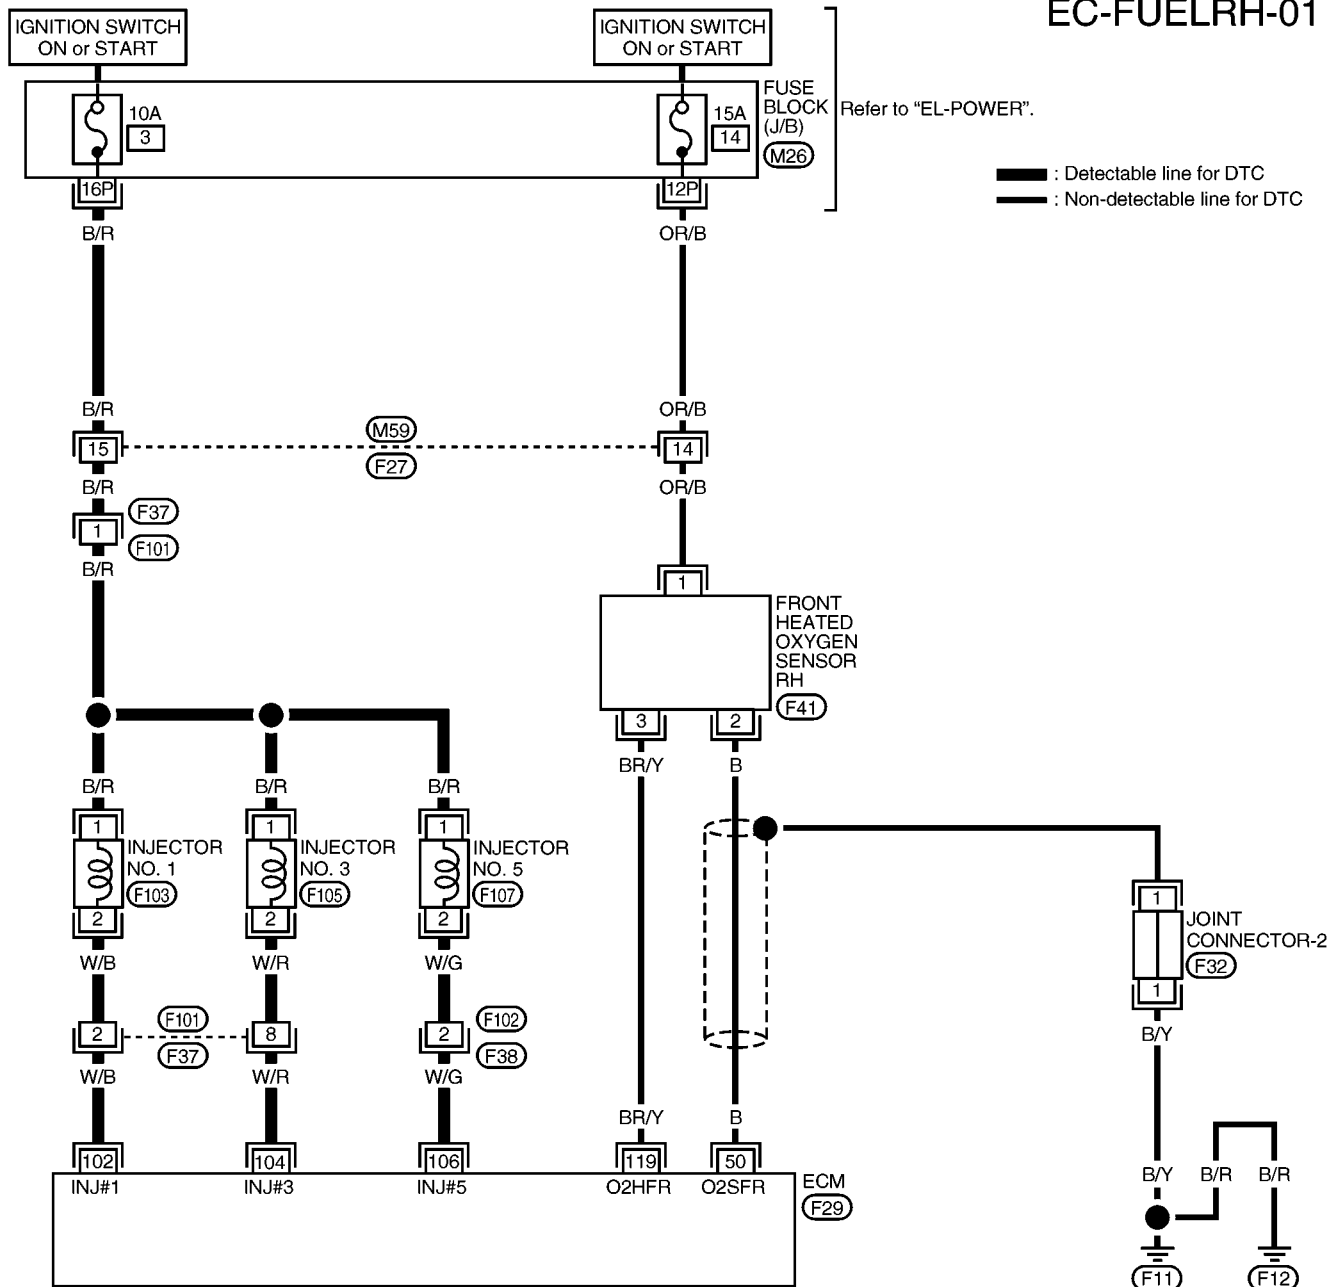

Refer to "EL-POWER".

— : Detectable line for DTC
 — : Non-detectable line for DTC

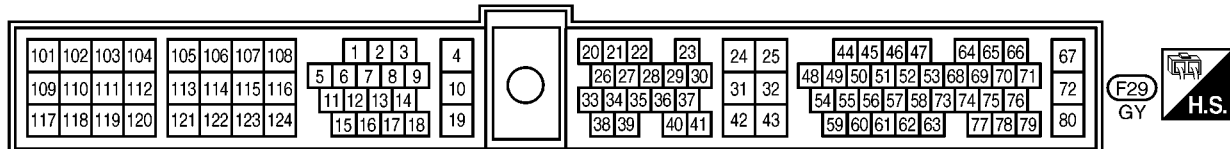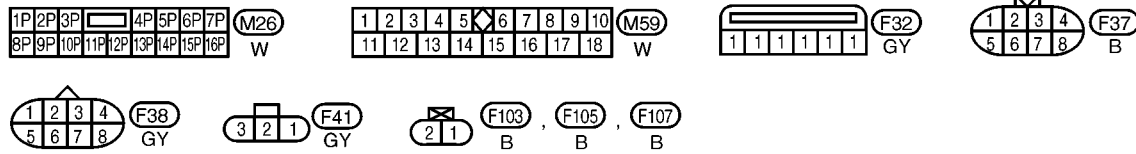

AEC952A


DTC P0171 (RIGHT, -B1), P0174 (LEFT, -B2) FUEL INJECTION SYSTEM FUNCTION (LEAN)

VG33E



Wiring Diagram (Cont'd)

LEFT BANK

NEEC0171S02

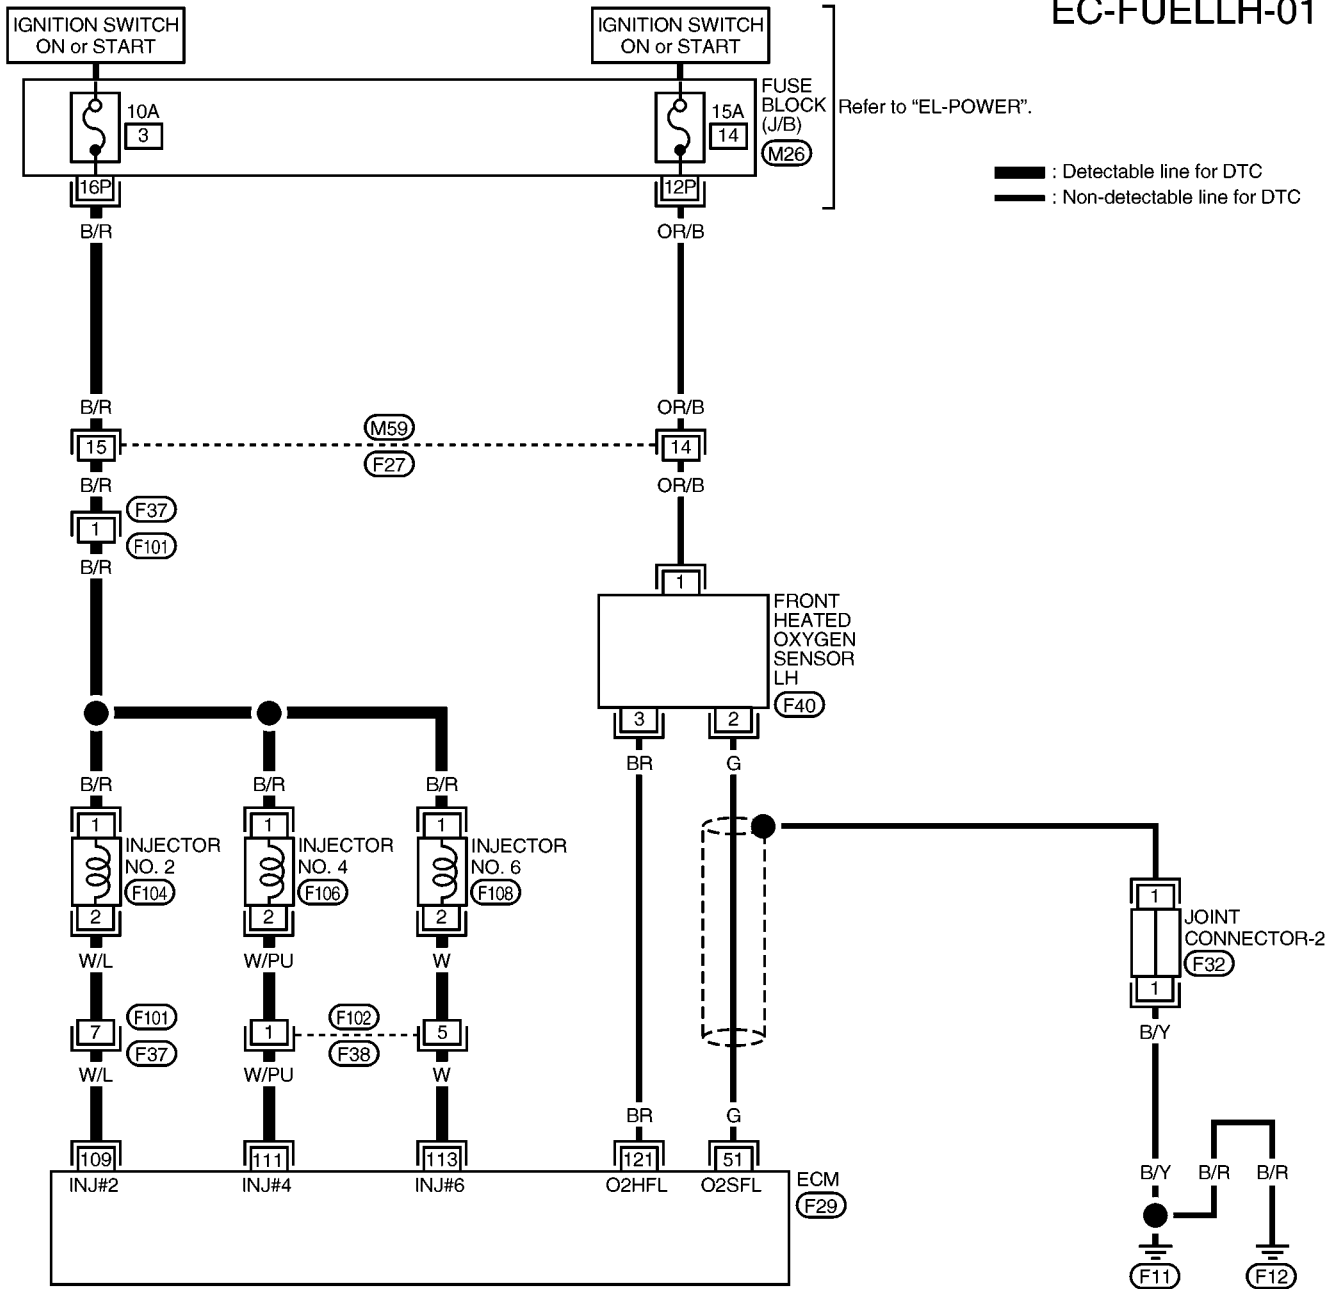

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

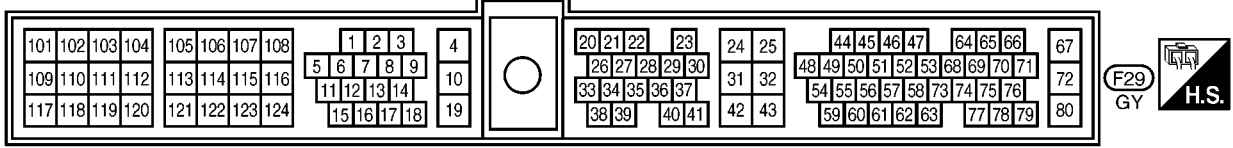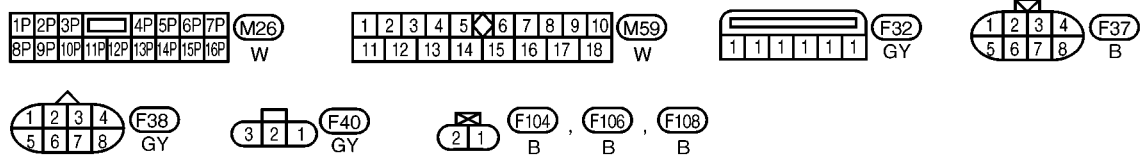

AEC953A


DTC P0171 (RIGHT, -B1), P0174 (LEFT, -B2) FUEL INJECTION SYSTEM FUNCTION (LEAN)

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0172

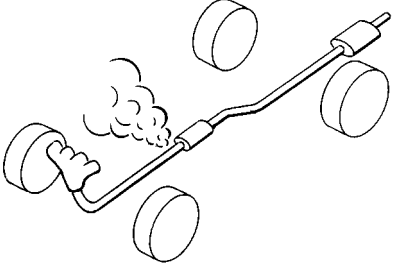1	CHECK EXHAUST AIR LEAK	
<p>1. Start engine and run it at idle. 2. Listen for an exhaust air leak before three way catalyst.</p>		
		
SEF099P		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Repair or replace.

2	CHECK FOR INTAKE AIR LEAK	
Listen for an intake air leak after the mass air flow sensor.		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Repair or replace.

3	CHECK FRONT HEATED OXYGEN SENSOR CIRCUIT FOR OPEN AND SHORT															
<p>1. Turn ignition switch "OFF". 2. Disconnect corresponding front heated oxygen sensor harness connector. 3. Disconnect ECM harness connector. 4. Check harness continuity between ECM terminal and FRONT HO2S terminal as follows. Refer to Wiring Diagram.</p>																
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0171</td> <td style="text-align: center;">50</td> <td style="text-align: center;">2</td> <td style="text-align: center;">Right</td> </tr> <tr> <td>P0174</td> <td style="text-align: center;">51</td> <td style="text-align: center;">2</td> <td style="text-align: center;">Left</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM	Sensor	P0171	50	2	Right	P0174	51	2	Left
DTC	Terminals			Bank												
	ECM	Sensor														
P0171	50	2	Right													
P0174	51	2	Left													
AEC904A																
<p style="color: blue;">Continuity should exist.</p> <p>5. Check harness continuity between ECM terminal or FRONT HO2S terminal and ground as follows. Refer to Wiring Diagram.</p>																
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM or sensor</th> <th>Ground</th> </tr> </thead> <tbody> <tr> <td>P0171</td> <td style="text-align: center;">50 or 2</td> <td style="text-align: center;">Ground</td> <td style="text-align: center;">Right</td> </tr> <tr> <td>P0174</td> <td style="text-align: center;">51 or 2</td> <td style="text-align: center;">Ground</td> <td style="text-align: center;">Left</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM or sensor	Ground	P0171	50 or 2	Ground	Right	P0174	51 or 2	Ground	Left
DTC	Terminals			Bank												
	ECM or sensor	Ground														
P0171	50 or 2	Ground	Right													
P0174	51 or 2	Ground	Left													
AEC905A																
<p style="color: blue;">Continuity should not exist.</p> <p>6. Also check harness for short to power.</p>																
OK or NG																
OK	▶	GO TO 4.														
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.														

DTC P0171 (RIGHT, -B1), P0174 (LEFT, -B2) FUEL INJECTION SYSTEM FUNCTION (LEAN)

VG33E




Diagnostic Procedure (Cont'd)

4	CHECK FUEL PRESSURE	
<p>1. Release fuel pressure to zero. Refer to EC-620.</p> <p>2. Install fuel pressure gauge and check fuel pressure.</p> <p style="margin-left: 20px;">At idling:</p> <p style="margin-left: 40px;">When fuel pressure regulator valve vacuum hose is connected. 235 kPa (2.4 kg/cm², 34 psi)</p> <p style="margin-left: 40px;">When fuel pressure regulator valve vacuum hose is disconnected. 294 kPa (3.0 kg/cm², 43 psi)</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	GO TO 5.

GI
MA
EM
LC
EC

5	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Fuel pump and circuit (Refer to EC-1170.) ● Fuel pressure regulator (Refer to EC-621.) ● Fuel lines (Refer to "ENGINE MAINTENANCE", MA-26.) ● Fuel filter for clogging 		
▶		Repair or replace.

FE
CL
MT

6	CHECK MASS AIR FLOW SENSOR	
<p> With CONSULT-II</p> <p>1. Install all parts removed.</p> <p>2. Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT-II.</p> <p style="margin-left: 20px;">3.3 - 4.8 g-m/sec: at idling</p> <p style="margin-left: 20px;">12.0 - 14.9 g-m/sec: at 2,500 rpm</p>		
<p> With GST</p> <p>1. Install all parts removed.</p> <p>2. Check mass air flow sensor signal in MODE 1 with GST.</p> <p style="margin-left: 20px;">3.3 - 4.8 g-m/sec: at idling</p> <p style="margin-left: 20px;">12.0 - 14.9 g-m/sec: at 2,500 rpm</p>		
<p> No Tools</p> <p>1. Install all parts removed.</p> <p>2. Check voltage between ECM terminal 54 and ground.</p> <p style="margin-left: 20px;">1.0 - 1.7V: at idling</p> <p style="margin-left: 20px;">1.7 - 2.3V: at 2,500 rpm</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 7.
NG	▶	Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-724.

AT
TF
PD
AX
SU
BR
ST

RS
BT
HA
SC
EL
IDX

DTC P0171 (RIGHT, -B1), P0174 (LEFT, -B2) FUEL INJECTION SYSTEM FUNCTION (LEAN)

VG33E

Diagnostic Procedure (Cont'd)

7 CHECK FUNCTION OF INJECTORS

Ⓜ With CONSULT-II

1. Start engine.
2. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II.


ACTIVE TEST	
POWER BALANCE	
MONITOR	
CMPS~RPM(REF)	XXX rpm
MAS AIR/FL SE	XXX V
IACV-AAC/V	XXX %

PEF389V

3. Make sure that each circuit produces a momentary engine speed drop.

ⓧ Without CONSULT-II

1. Start engine.
2. Listen to each injector operating sound.

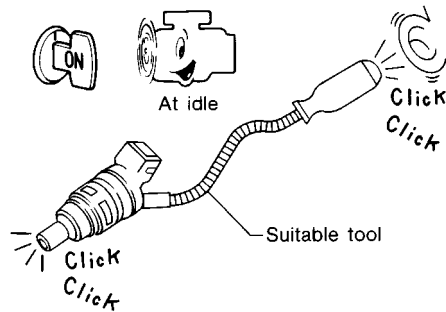

MEC703B

Clicking noise should be heard.


OK or NG

OK	▶	GO TO 8.
NG	▶	Perform trouble diagnosis for "INJECTORS", EC-1162.

DTC P0171 (RIGHT, -B1), P0174 (LEFT, -B2) FUEL INJECTION SYSTEM FUNCTION (LEAN)

VG33E

Diagnostic Procedure (Cont'd)

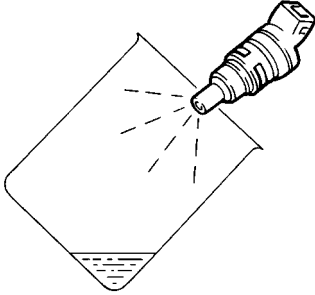8	CHECK INJECTOR	
<ol style="list-style-type: none"> 1. Confirm that the engine is cooled down and there are no fire hazards near the vehicle. 2. Turn ignition switch "OFF". 3. Disconnect injector harness connectors on left bank (for DTC P0171), right bank (for DTC P0174). 4. Remove injector gallery assembly. Refer to EC-621. Keep fuel hose and all injectors connected to injector gallery. The injector harness connectors on right bank (for DTC P0171), left bank (for DTC P0174) should remain connected. 5. Disconnect all ignition coil harness connectors. 6. Prepare pans or saucers under each injector. 7. Crank engine for about 3 seconds. Make sure that fuel sprays out from injectors. 		
		
<p style="color: blue;">Fuel should be sprayed evenly for each injector.</p>		
SEF595Q		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Replace injectors from which fuel does not spray out. Always replace O-ring with new ones.

9	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.		
▶		INSPECTION END

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0172 (RIGHT, -B1), P0175 (LEFT, -B2) FUEL INJECTION SYSTEM FUNCTION (RICH)

VG33E

On Board Diagnosis Logic

On Board Diagnosis Logic

NEEC0173
With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the front heated oxygen sensors. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios. In case the amount of the compensation value is extremely large (The actual mixture ratio is too rich.), the ECM judges the condition as the fuel injection system malfunction and light up the MIL (2 trip detection logic).

Sensor	Input Signal to ECM	ECM function	Actuator
Front heated oxygen sensors	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection control	Injectors

Malfunction is detected when fuel injection system does not operate properly, the amount of mixture ratio compensation is too large. (The mixture ratio is too rich.)

POSSIBLE CAUSE

- Front heated oxygen sensor
- Injectors
- Exhaust gas leaks
- Incorrect fuel pressure
- Mass air flow sensor

NEEC0173S01

DTC P0172 (RIGHT, -B1), P0175 (LEFT, -B2) FUEL INJECTION SYSTEM FUNCTION (RICH)

VG33E

DTC Confirmation Procedure

4	ACTIVE TEST	
	SELF-LEARN	B1: 100 %
	CONTROL	B2: 100%
	MONITOR	
	CMPS-RPM(REF)	XXX rpm
	COOLAN TEMP/S	XXX °C
	FR O2 SEN-B1	XXX V
	FR O2 SEN-B2	XXX V
	A/F ALPHA-B1	XXX %
	A/F ALPHA-B2	XXX %

PEF717W

DTC Confirmation Procedure

=NEEC0174

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

Ⓟ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "SELF-LEARN CONTROL" in "ACTIVE TEST" mode with CONSULT-II.
- 4) Clear the self-learning control coefficient by touching "CLEAR".
- 5) Select "DATA MONITOR" mode with CONSULT-II.
- 6) Start engine again and let it idle for at least 10 minutes. The 1st trip DTC P0172, P0175 should be detected at this stage, if a malfunction exists. If so, go to "Diagnostic Procedure", EC-882.
- 7) If it is difficult to start engine at step 6, the fuel injection system has a malfunction, too.
- 8) Crank engine while depressing accelerator pedal. If engine starts, go to "Diagnostic Procedure", EC-882. If engine does not start, remove ignition plugs and check for fouling, etc.

Ⓟ With GST

Follow the procedure "With CONSULT-II".

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0172 (RIGHT, -B1), P0175 (LEFT, -B2) FUEL INJECTION SYSTEM FUNCTION (RICH)

VG33E

Wiring Diagram








Wiring Diagram

NEEC0175

NEEC0175S01

RIGHT BANK

EC-FUEL RH-01

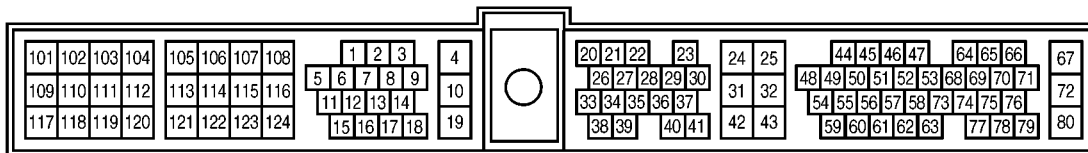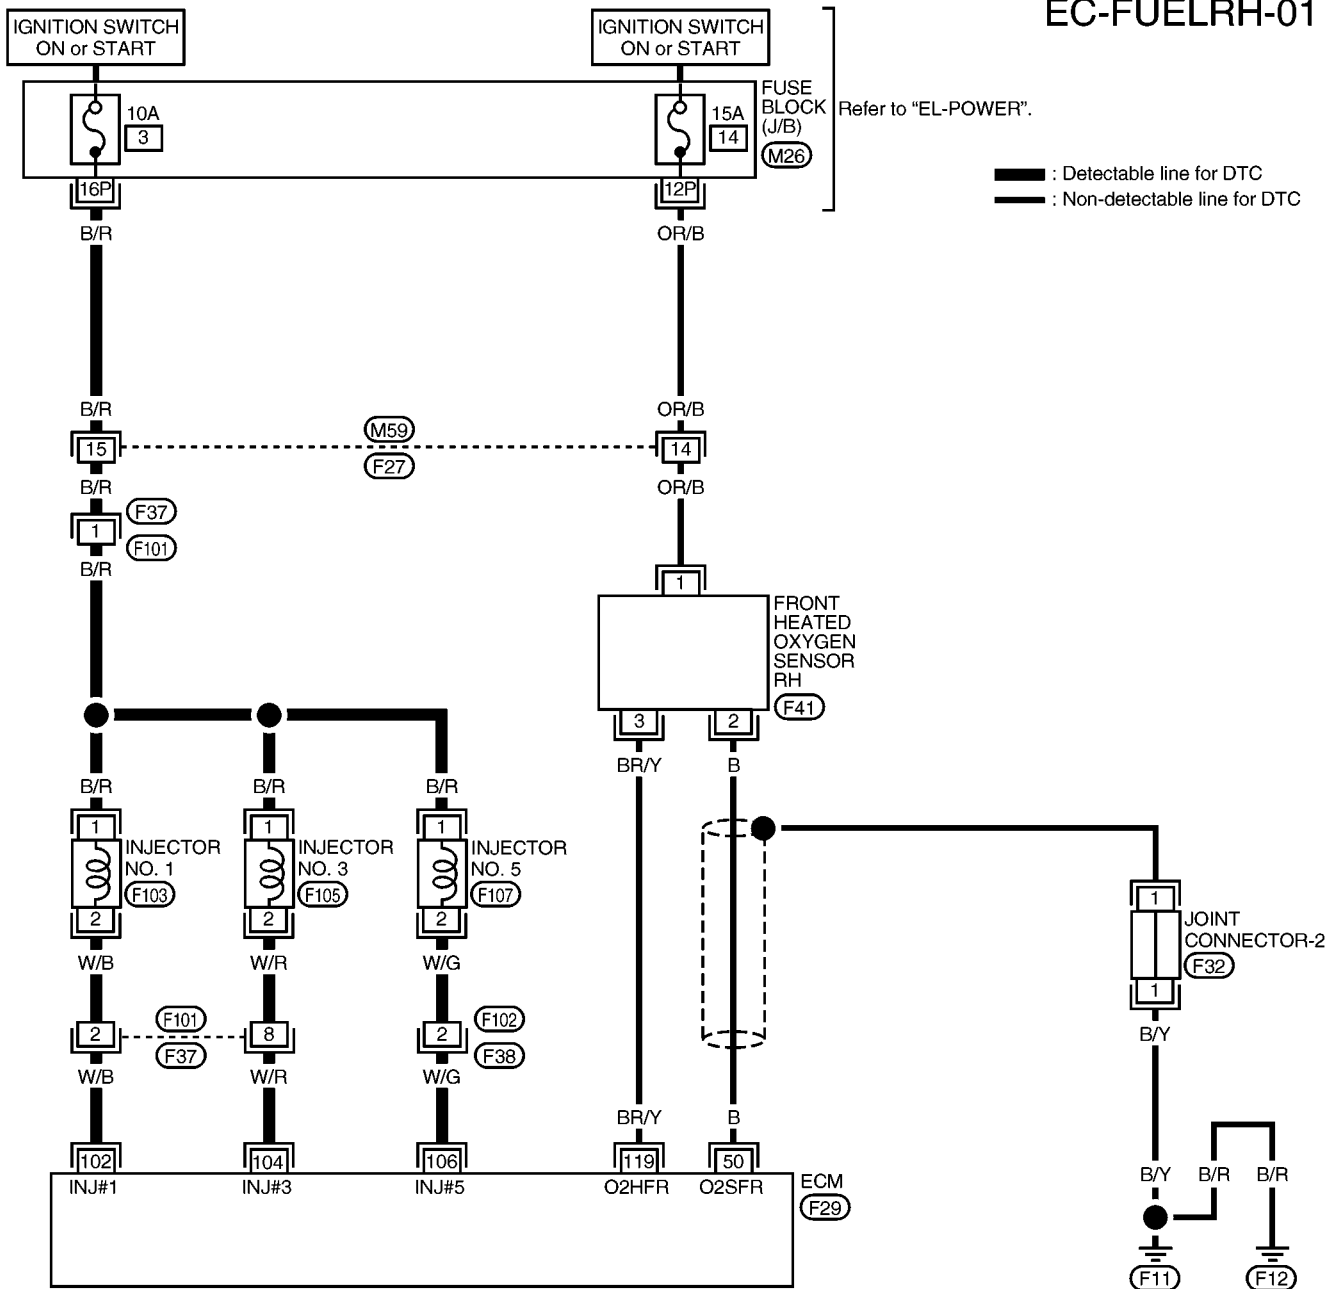

AEC952A

DTC P0172 (RIGHT, -B1), P0175 (LEFT, -B2) FUEL INJECTION SYSTEM FUNCTION (RICH)

VG33E

Wiring Diagram (Cont'd)

NEEC0175S02

LEFT BANK

EC-FUELLH-01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS









BT

HA

SC

EL

IDX

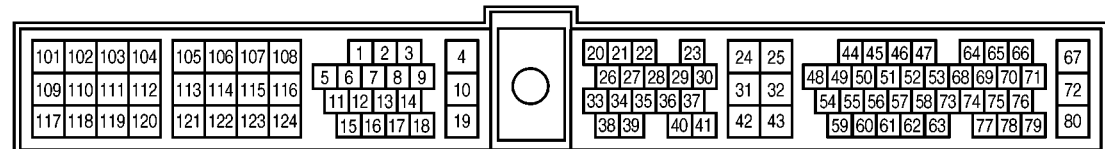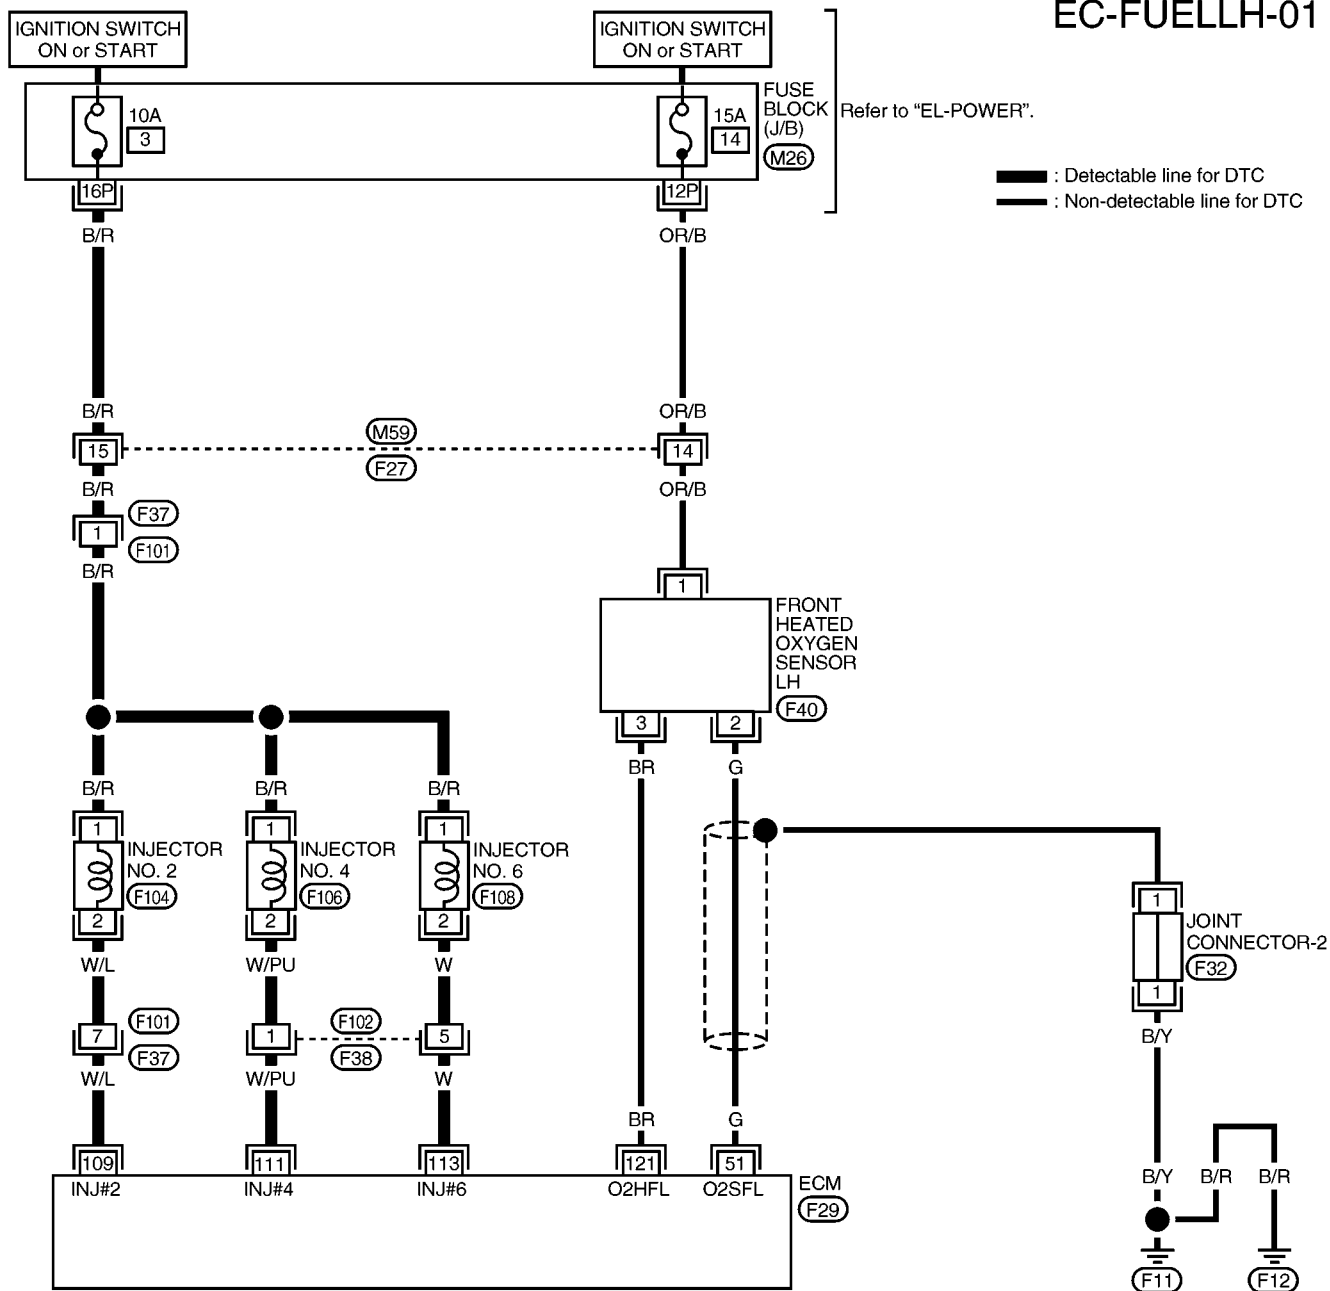

AEC953A


DTC P0172 (RIGHT, -B1), P0175 (LEFT, -B2) FUEL INJECTION SYSTEM FUNCTION (RICH)

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0176

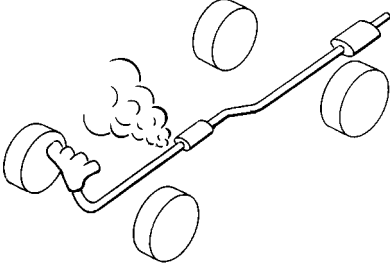1	CHECK EXHAUST AIR LEAK		
<p>1. Start engine and run it at idle. 2. Listen for an exhaust air leak before three way catalyst.</p>			
			
SEF099P			
OK or NG			
OK	▶	GO TO 2.	
NG	▶	Repair or replace.	

2	CHECK FOR INTAKE AIR LEAK		
Listen for an intake air leak after the mass air flow sensor.			
OK or NG			
OK	▶	GO TO 3.	
NG	▶	Repair or replace.	

3	CHECK FRONT HEATED OXYGEN SENSOR CIRCUIT FOR OPEN AND SHORT																
<p>1. Turn ignition switch "OFF". 2. Disconnect corresponding front heated oxygen sensor harness connector. 3. Disconnect ECM harness connector. 4. Check harness continuity between ECM terminal and FRONT HO2S terminal as follows. Refer to Wiring Diagram.</p>																	
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0172</td> <td style="text-align: center;">50</td> <td style="text-align: center;">2</td> <td style="text-align: center;">Right</td> </tr> <tr> <td>P0175</td> <td style="text-align: center;">51</td> <td style="text-align: center;">2</td> <td style="text-align: center;">Left</td> </tr> </tbody> </table>				DTC	Terminals		Bank	ECM	Sensor	P0172	50	2	Right	P0175	51	2	Left
DTC	Terminals		Bank														
	ECM	Sensor															
P0172	50	2	Right														
P0175	51	2	Left														
AEC906A																	
<p style="color: blue;">Continuity should exist.</p> <p>5. Check harness continuity between ECM terminal or FRONT HO2S terminal and ground as follows. Refer to Wiring Diagram.</p>																	
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM or sensor</th> <th>Ground</th> </tr> </thead> <tbody> <tr> <td>P0172</td> <td style="text-align: center;">50 or 2</td> <td style="text-align: center;">Ground</td> <td style="text-align: center;">Right</td> </tr> <tr> <td>P0175</td> <td style="text-align: center;">51 or 2</td> <td style="text-align: center;">Ground</td> <td style="text-align: center;">Left</td> </tr> </tbody> </table>				DTC	Terminals		Bank	ECM or sensor	Ground	P0172	50 or 2	Ground	Right	P0175	51 or 2	Ground	Left
DTC	Terminals		Bank														
	ECM or sensor	Ground															
P0172	50 or 2	Ground	Right														
P0175	51 or 2	Ground	Left														
AEC907A																	
<p style="color: blue;">Continuity should not exist.</p> <p>6. Also check harness for short to power.</p>																	
OK or NG																	
OK	▶	GO TO 4.															
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.															




DTC P0172 (RIGHT, -B1), P0175 (LEFT, -B2) FUEL INJECTION SYSTEM FUNCTION (RICH)

VG33E

Diagnostic Procedure (Cont'd)

4	CHECK FUEL PRESSURE	
<p>1. Release fuel pressure to zero. Refer to EC-620.</p> <p>2. Install fuel pressure gauge and check fuel pressure.</p> <p style="margin-left: 20px;">At idling:</p> <p style="margin-left: 40px;">When fuel pressure regulator valve vacuum hose is connected. 235 kPa (2.4 kg/cm², 34 psi)</p> <p style="margin-left: 40px;">When fuel pressure regulator valve vacuum hose is disconnected. 294 kPa (3.0 kg/cm², 43 psi)</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	GO TO 5.

5	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Fuel pump and circuit (Refer to EC-1170.) ● Fuel pressure regulator (Refer to EC-621.) 		
	▶	Repair or replace.

6	CHECK MASS AIR FLOW SENSOR	
<p> With CONSULT-II</p> <p>1. Install all parts removed.</p> <p>2. Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT-II.</p> <p style="margin-left: 20px;">3.3 - 4.8 g-m/sec: at idling</p> <p style="margin-left: 20px;">12.0 - 14.9 g-m/sec: at 2,500 rpm</p>		
<p> With GST</p> <p>1. Install all parts removed.</p> <p>2. Check mass air flow sensor signal in MODE 1 with GST.</p> <p style="margin-left: 20px;">3.3 - 4.8 g-m/sec: at idling</p> <p style="margin-left: 20px;">12.0 - 14.9 g-m/sec: at 2,500 rpm</p>		
<p> No Tools</p> <p>1. Install all parts removed.</p> <p>2. Check voltage between ECM terminal 54 and ground.</p> <p style="margin-left: 20px;">1.0 - 1.7V: at idling</p> <p style="margin-left: 20px;">1.7 - 2.3V: at 2,500 rpm</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>		
OK	▶	GO TO 7.
NG	▶	Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-724.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0172 (RIGHT, -B1), P0175 (LEFT, -B2) FUEL INJECTION SYSTEM FUNCTION (RICH)

VG33E

Diagnostic Procedure (Cont'd)

7 CHECK FUNCTION OF INJECTORS

Ⓟ With CONSULT-II

1. Start engine.
2. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II.


ACTIVE TEST	
POWER BALANCE	
MONITOR	
CMPS~RPM(REF)	XXX rpm
MAS AIR/FL SE	XXX V
IACV-AAC/V	XXX %

PEF389V

3. Make sure that each circuit produces a momentary engine speed drop.

ⓧ Without CONSULT-II

1. Start engine.
2. Listen to each injector operating sound.

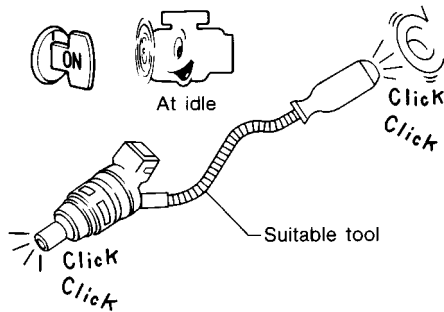

MEC703B

Clicking noise should be heard.

OK or NG

OK	▶	GO TO 8.
NG	▶	Perform trouble diagnosis for "INJECTORS", EC-1162.

8 CHECK INJECTOR

1. Remove injector assembly. Refer to EC-621.
Keep fuel hose and all injectors connected to injector gallery.
2. Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
3. Disconnect injector harness connectors left bank (for DTC P0172), right bank (for P0175).
The injector harness connectors on right bank (for P0172), left bank (for P0175) should remain connected.
4. Disconnect all ignition coil harness connectors.
5. Prepare pans or saucers under each injectors.
6. Crank engine for about 3 seconds.
Make sure fuel does not drip from injector.



OK or NG

OK (Does not drip)	▶	GO TO 9.
NG (Drips)	▶	Replace the injectors from which fuel is dripping. Always replace O-ring with new one.

9 CHECK INTERMITTENT INCIDENT

Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.

	▶	INSPECTION END
--	---	-----------------------

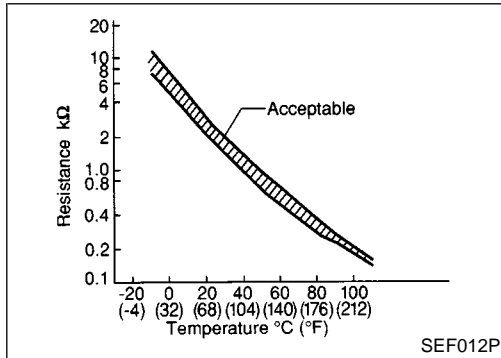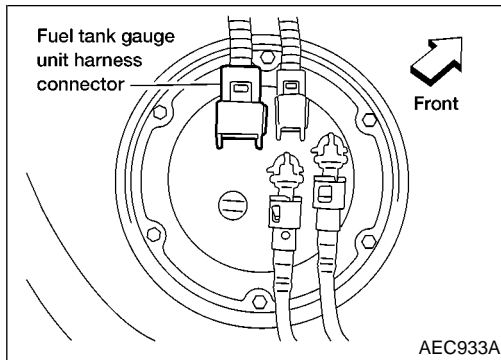

Component Description

NEEC0177

The fuel tank temperature sensor is used to detect the fuel temperature inside the fuel tank. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the fuel temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

<Reference data>

Fluid temperature °C (°F)	Voltage* (V)	Resistance (kΩ)
20 (68)	3.5	2.3 - 2.7
50 (122)	2.2	0.79 - 0.90

*: These data are reference values and are measured between ECM terminal 60 (Fuel tank temperature sensor) and ECM terminal 32 (ECM ground).

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

On Board Diagnosis Logic

Malfunction is detected when an excessively high or low voltage is sent to ECM, rationally incorrect voltage is sent to ECM, compared with the voltage signals from engine coolant temperature sensor and intake air temperature sensor. =NEEC0178

POSSIBLE CAUSE

- Harness or connectors
(The sensor circuit is open or shorted.)
- Fuel tank temperature sensor

NEEC0178S01

DTC Confirmation Procedure

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test. NEEC0179

3	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF)	XXX rpm
	COOLAN TEMP/S	XXX °C
	INT/A TEMP/S	XXX °C

PEF609W

Ⓜ With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 10 seconds.
If the result is NG, go to "Diagnostic Procedure", EC-888.
If the result is OK, go to following step.
- 4) Check "COOLAN TEMP/S" value.
If "COOLAN TEMP/S" is less than 60°C (140°F), the result will be OK.
If "COOLAN TEMP/S" is above 60°C (140°F), go to the following step.
- 5) Cool engine down until "COOLAN TEMP/S" is less than 60°C (140°F).
- 6) Wait at least 10 seconds.
- 7) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-888.

Ⓜ With GST

Follow the procedure "With CONSULT-II".

DTC P0180 FUEL TANK TEMPERATURE SENSOR


VG33E

Wiring Diagram

Wiring Diagram

NEEC0180

EC-FTTS-01

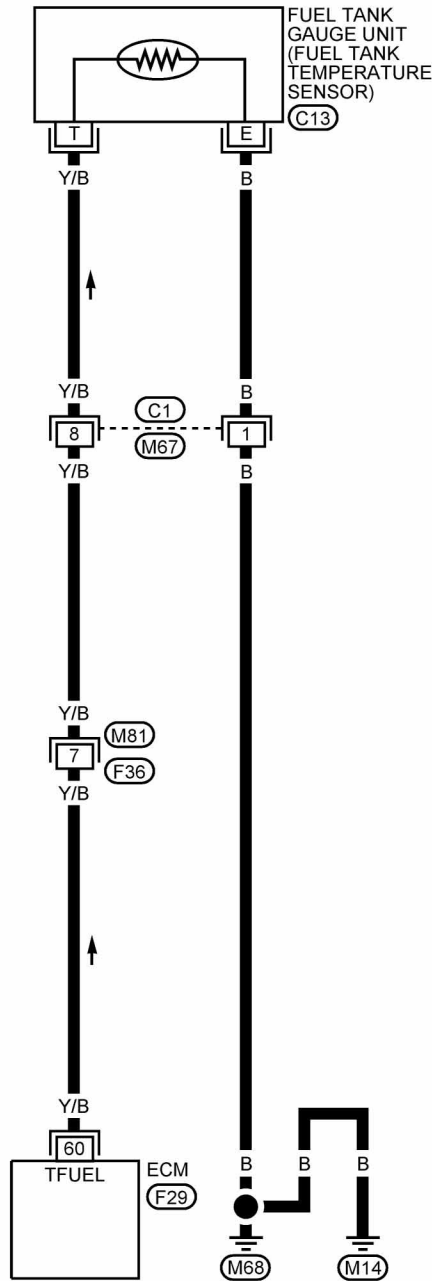

: Detectable line for DTC
 : Non-detectable line for DTC

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS




BT

HA

SC

EL



IDX

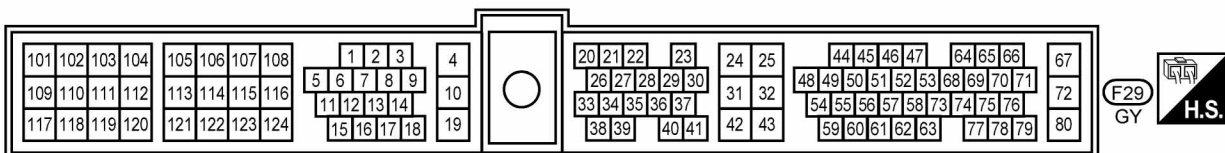

AEC051B

Diagnostic Procedure

NEEC0181

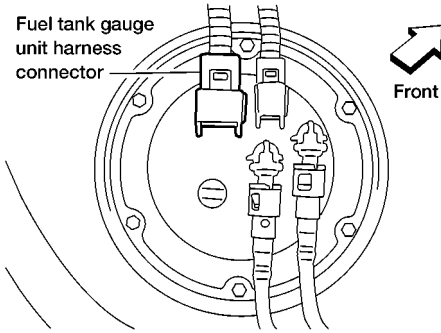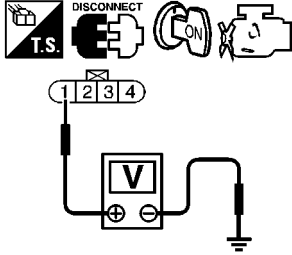1	CHECK FUEL TANK TEMPERATURE SENSOR POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch OFF. 2. Disconnect fuel tank gauge unit harness connector.</p> <div style="text-align: center;">  <p style="margin-left: 100px;">Fuel tank gauge unit harness connector</p> <p style="margin-left: 200px;">Front</p> </div> <p style="text-align: right; margin-right: 50px;"><small>AEC933A</small></p> <p>3. Turn ignition switch ON. 4. Check voltage between terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p style="text-align: center; color: blue; font-weight: bold;">Voltage: Approximately 5V</p> <p style="text-align: center; font-weight: bold;">OK or NG</p> <p style="text-align: right; margin-right: 50px;"><small>SEF639W</small></p>		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors C1, M67 ● Harness connectors M81, F36 ● Harness for open or short between ECM and fuel tank temperature sensor 		
▶		Repair harness or connector.


3	CHECK FUEL TANK TEMPERATURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch OFF. 2. Check harness continuity between sensor terminal 4 and body ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center; font-weight: bold;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

DTC P0180 FUEL TANK TEMPERATURE SENSOR

VG33E

Diagnostic Procedure (Cont'd)

4	DETECT MALFUNCTIONING PART		
		Check the following. <ul style="list-style-type: none"> ● Harness connectors C1, M67 ● Harness for open or short between fuel tank temperature sensor and body ground 	GI
		▶ Repair open circuit or short to ground or short to power in harness or connectors.	MA

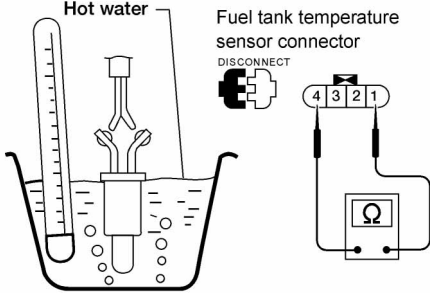5	CHECK FUEL TANK TEMPERATURE SENSOR								
		Check resistance by heating with hot water or heat gun as shown in the figure.	EM						
			LC						
		<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="text-align: center;">Temperature °C (°F)</th> <th style="text-align: center;">Resistance kΩ</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">20 (68)</td> <td style="text-align: center;">2.3 - 2.7</td> </tr> <tr> <td style="text-align: center;">50 (122)</td> <td style="text-align: center;">0.79 - 0.90</td> </tr> </tbody> </table>	Temperature °C (°F)	Resistance kΩ	20 (68)	2.3 - 2.7	50 (122)	0.79 - 0.90	EC
Temperature °C (°F)	Resistance kΩ								
20 (68)	2.3 - 2.7								
50 (122)	0.79 - 0.90								
		OK or NG	FE						
		OK ▶ GO TO 6.	CL						
		NG ▶ Replace fuel tank temperature sensor.	AT						

6	CHECK INTERMITTENT INCIDENT		
		Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	MT
		▶ INSPECTION END	TF

GI
MA
EM
LC
EC
FE
CL
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

VG33E

On Board Diagnosis Logic


On Board Diagnosis Logic

NEEC0428

This diagnosis checks whether the engine coolant temperature is extraordinarily high, even though the driving condition is not high load.

When malfunction is detected, the malfunction indicator lamp (MIL) will light up even in the first trip.

Diagnostic Trouble	Malfunction is detected when...	Check Items
P0217	Engine coolant temperature is excessively high under normal engine speed.	<ul style="list-style-type: none"> ● Harness or connectors (The cooling fan circuit is open or shorted) ● Cooling fan ● Thermostat ● Improper ignition timing ● Engine coolant temperature sensor ● Blocked radiator ● Blocked front end (Improper fitting of front end cover) ● Crushed vehicle frontal area (Vehicle frontal area has been damaged from a collision but not repaired) ● Blocked air passage by improper installation of front fog lamp or fog lamps. ● Improper mixture ratio of coolant ● Damaged bumper <p>For more information, refer to "Main 12 Causes of Overheating", EC-902.</p>

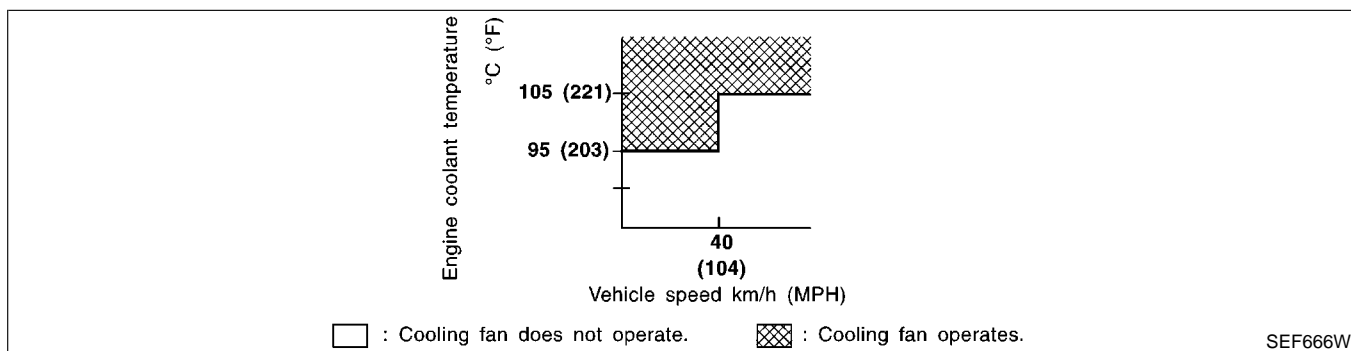

Overall Function Check

NEEC0429

Use this procedure to check the overall function of the engine coolant over temperature enrichment protection check, a DTC might not be confirmed.

WARNING:


Never remove the radiator cap when the engine is hot. Serious burns could be caused by high-pressure fluid escaping from the radiator.

Wrap a thick cloth around the cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.

DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

VG33E

Overall Function Check (Cont'd)

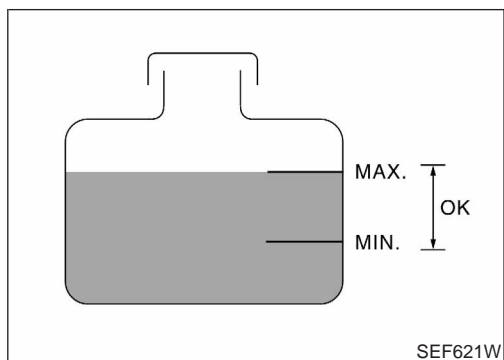

SEF621W

WITH CONSULT-II

NEEC0429S01

1. Check the coolant level and mixture ratio (Using coolant tester) in the reservoir tank and radiator.

Allow engine to cool before checking coolant level and mixture ratio.

- If the coolant level in the reservoir and/or the radiator is below the proper range, skip following steps and go to "Diagnostic Procedure", EC-895.
- If the coolant mixture ratio is out of range between 45 to 55%, replace the coolant. Refer to "Changing Engine Coolant", **MA-27**.

- a) Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute like pouring coolant by kettle. Be sure to use coolant with the proper mixture ratio. Refer to "Anti-freeze Coolant Mixture Ratio", **MA-16**.

- b) After refilling coolant, run engine to ensure that no water-flow noise is emitted. After checking or replacing coolant, go to step 3 below.

2. Confirm whether customer filled the engine coolant or not. If customer filled the engine coolant, skip following steps and go to "Diagnostic Procedure", EC-895.

3. Turn ignition switch "ON".

4. Perform "COOLANT TEMP" in "ACTIVE TEST" mode with CONSULT-II.

- 1) Set "COOLANT TEMP" to 95°C (194°F) and make sure that cooling fan operates at low speed. If NG, go to "Diagnostic Procedure", EC-895.

- 2) Set "COOLANT TEMP" to 105°C (221°F) and make sure that cooling fan operates at high speed. If NG, go to "Diagnostic Procedure", EC-895. After repair, go to next step.

5. Check for blocked coolant passage.
Warm up engine to normal operating temperature, then grasp upper and lower radiator hoses and make sure that coolant flows.

If NG, go to step 6 of "Diagnostic Procedure", EC-895. After repair, go to next step.

Be extremely careful not to touch any moving or adjacent parts.

6. Check radiator for blocked air passage
Check for blocked condenser or radiator (condenser or radiator fins damaged, condenser or radiator clogged), after market fog lamps,...etc. Check for condenser or radiator fin damage, shroud damage, vehicle front end for clogging of debris or insects...etc.

Check for improper fitting of front end cover, damaged radiator grille or bumper, vehicle frontal area damaged by collision but not repaired.

If NG, take appropriate action and then go to next step.

7. Check ECT sensor for proper operation. Refer to step 7 of "Diagnostic Procedure", EC-895. If NG, replace ECT sensor and go to next step.

4	ACTIVE TEST	
	COOLANT TEMP	95° C
	MONITOR	
	CMPS~RPM(POS)	XXX rpm
	INJ PULSE-B1	XXX msec
	IGN TIMING	XXX BTDC

SEF383X

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC



EL

IDX

DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

VG33E

Overall Function Check (Cont'd)

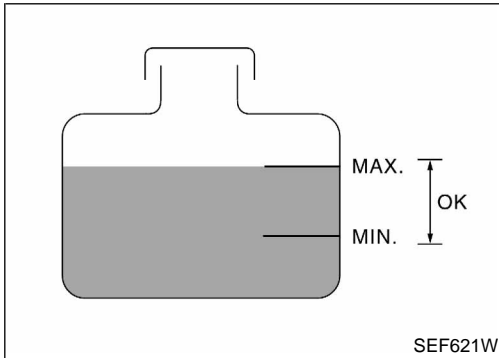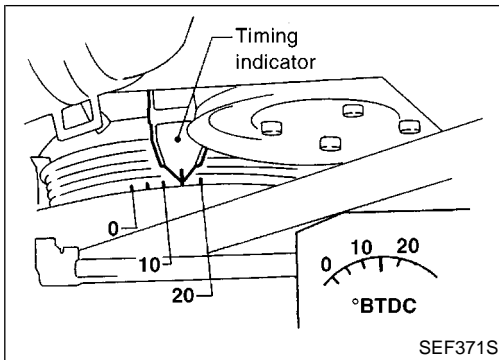

8. Check ignition timing. Refer to "Basic Inspection", EC-680. Make sure that ignition timing is $15^\circ \pm 2^\circ$ at 700 ± 50 rpm. If NG, adjust ignition timing and then recheck.

⊗ WITHOUT CONSULT-II


NEEC0429S02

1. Check the coolant level and mixture ratio (Using coolant tester) in the reservoir tank and radiator.
Allow engine to cool before checking coolant level and mixture ratio.
 - If the coolant level in the reservoir and/or radiator is below the proper range, skip the following steps and go to step 3 of "Diagnostic Procedure", EC-895.
 - If the coolant mixture ratio is out of range between 45 to 55%, replace the coolant. Refer to "Changing Engine Coolant", **MA-27**.
- a) Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute like pouring coolant by kettle. Be sure to use coolant with the proper mixture ratio. Refer to "Anti-freeze Coolant Mixture Ratio", **MA-16**.
- b) After refilling coolant, run engine to ensure that no water-flow noise is emitted. After checking or replacing coolant, go to step 3 below.
2. Confirm whether customer filled the engine coolant or not. If customer filled engine coolant, skip following steps and go to "Diagnostic Procedure", EC-895.
3. Turn ignition switch "OFF".
4. Disconnect engine coolant temperature sensor harness connector.


DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

VG33E

Overall Function Check (Cont'd)

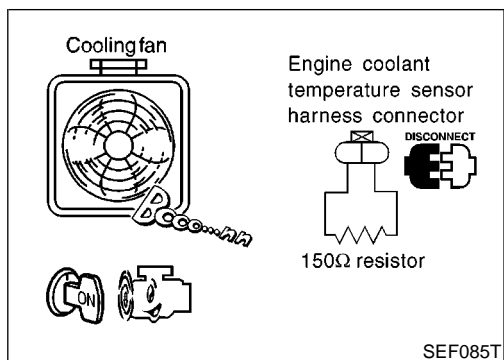

5. Connect 150Ω resistor to engine coolant temperature sensor harness connector.
6. Start engine and make sure that cooling fan operates.
Be careful not to overheat engine.
If NG, go to step 9 of "Diagnostic Procedure", EC-895. After repair, go to next step.
7. Check for blocked coolant passage.
Warm up engine to normal operating temperature, then grasp upper and lower radiator hoses and make sure that coolant flows.
If NG, go to step 6 of "Diagnostic Procedure", EC-895. After repair, go to next step.
Be extremely careful not to touch any moving or adjacent parts.
8. Check radiator for blocked air passage
Check for blocked condenser or radiator (condenser or radiator fins damaged, condenser or radiator clogged), after market fog lamps,...etc. Check for condenser or radiator fin damage, shroud damage, vehicle front end for clogging of debris or insects...etc.
Check for improper fitting of front end cover, damaged radiator grille or bumper, vehicle frontal area damaged by collision but not repaired.
If NG, take appropriate action and then go to next step.
9. Check ECT sensor for proper operation. Refer to step 6 of "Diagnostic Procedure", EC-895. If NG, replace ECT sensor and go to next step.

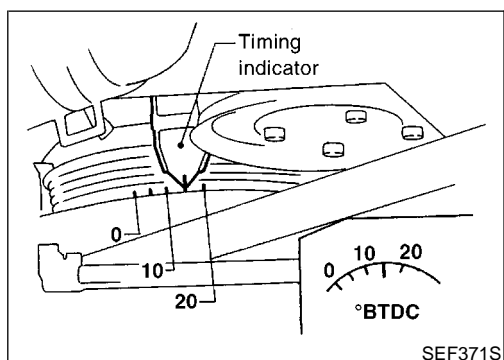

10. Check ignition timing. Refer to "Basic Inspection", EC-680. Make sure that ignition timing is $15^\circ \pm 2^\circ$ at 700 ± 50 rpm. If NG, adjust ignition timing and then recheck.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION


VG33E

Wiring Diagram


Wiring Diagram

NEEC0430

EC-COOL/F-01

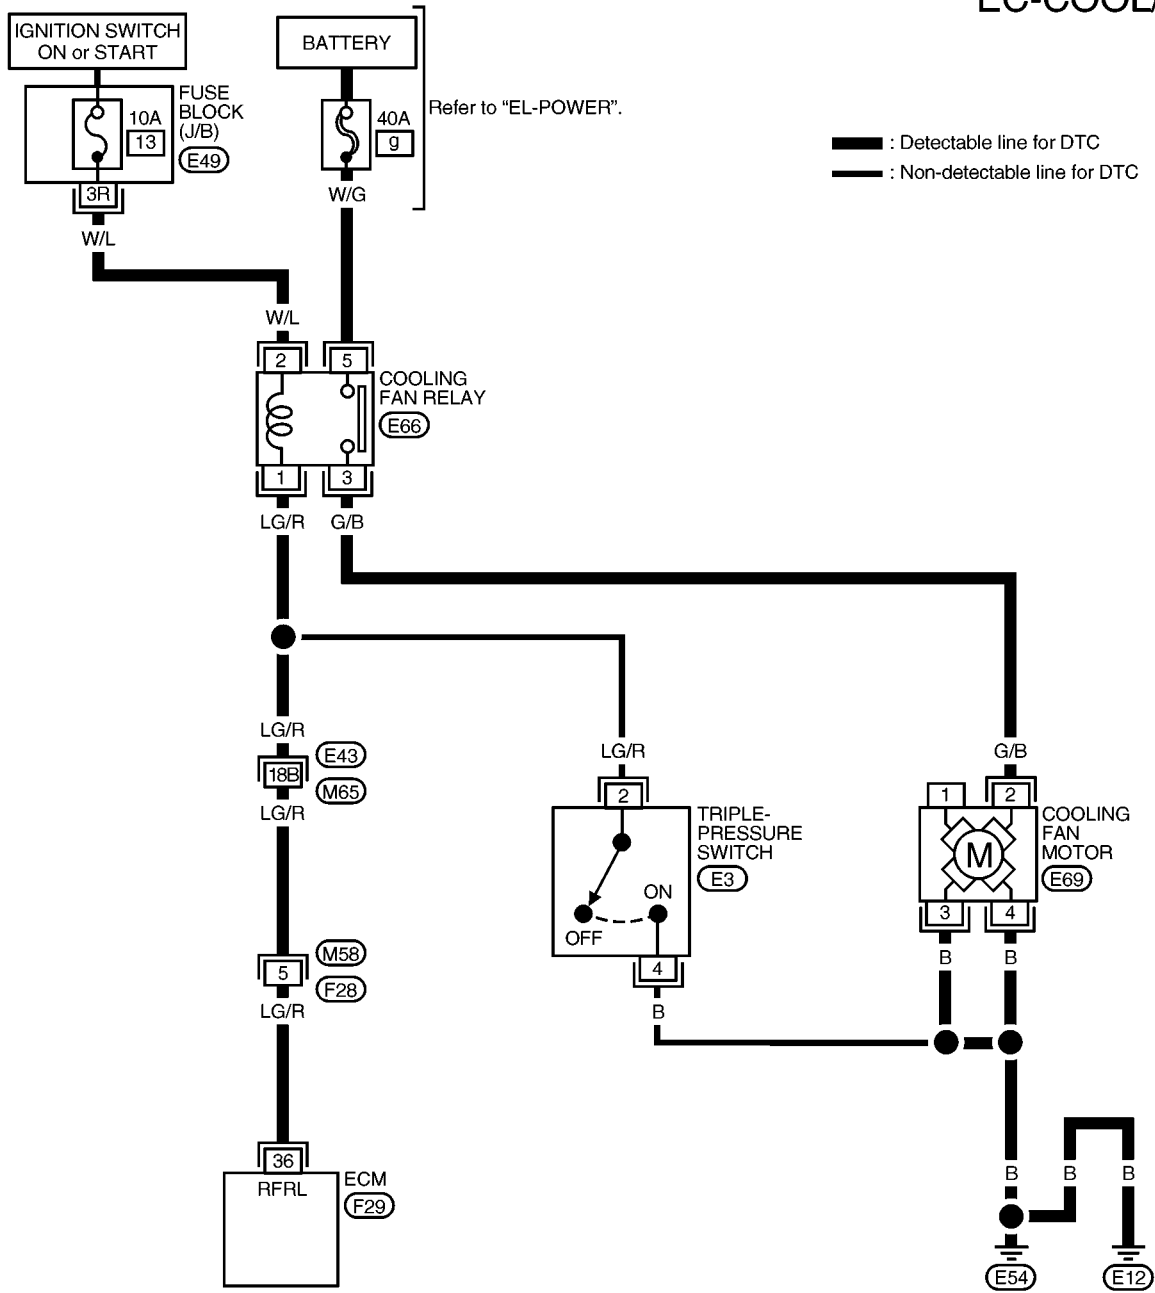

Refer to the following.
 (M65), (E43) - SUPER
 MULTIPLE JUNCTION (SMJ)

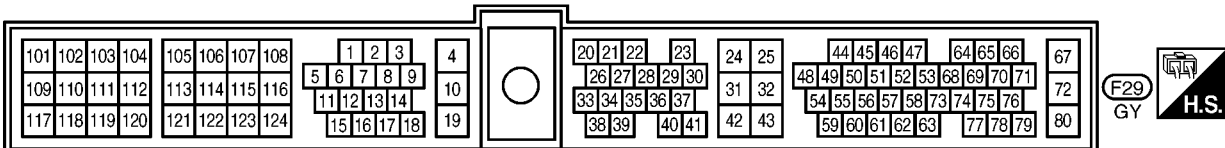

AEC973A

DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0431

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

2	CHECK COOLING FAN OPERATION																							
<p> With CONSULT-II</p> <p>1. Turn ignition switch "ON".</p> <p>2. Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT-II (Low speed).</p>																								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <th>COOLING FAN</th> <th>OFF</th> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <th>COOLANT TEMP/S</th> <th>XXX °C</th> </tr> </thead> <tbody> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </tbody> </table>			ACTIVE TEST		COOLING FAN	OFF	MONITOR		COOLANT TEMP/S	XXX °C														
ACTIVE TEST																								
COOLING FAN	OFF																							
MONITOR																								
COOLANT TEMP/S	XXX °C																							
<p>Does cooling fan rotate?</p> <p style="text-align: center;">Yes or No</p>																								
Yes	▶	GO TO 4.																						
No	▶	GO TO 9.																						


3	CHECK COOLING FAN OPERATION	
<p> Without CONSULT-II</p> <p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect engine coolant temperature sensor harness connector.</p> <p>3. Connect 150Ω resistor to engine coolant temperature sensor harness connector.</p> <p>4. Start engine and make sure that cooling fan operates.</p>		
<p>OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	GO TO 9.


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

VG33E

Diagnostic Procedure (Cont'd)

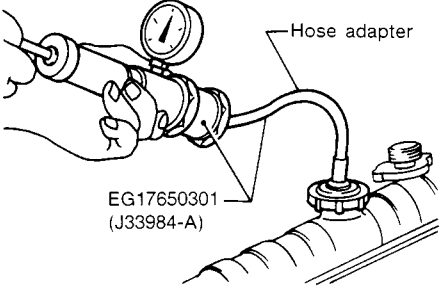
4	CHECK COOLING SYSTEM FOR LEAK	
<p>Apply pressure to the cooling system with a tester, and check if the pressure drops.</p> <p>CAUTION: Higher than the specified pressure may cause radiator damage.</p> <p style="color: blue;">Testing pressure: 157 kPa (1.6 kg/cm², 23 psi)</p>		
		
SLC754A		
<p>Pressure should not drop.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	<p>Check the following for leak:</p> <ul style="list-style-type: none"> ● Hose ● Radiator ● Water pump <p>Refer to "Water Pump", LC-29.</p>

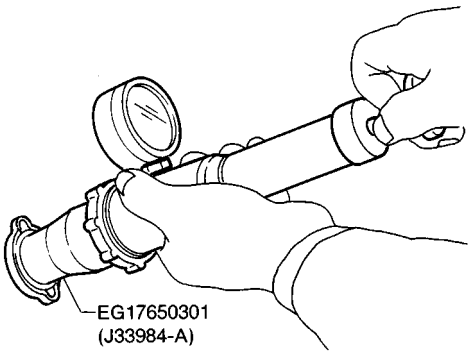5	CHECK RADIATOR CAP	
<p>Apply pressure to cap with a tester and check radiator cap relief pressure.</p>		
		
SLC755A		
<p style="color: blue;">Radiator cap relief pressure: 59 - 98 kPa (0.6 - 1.0 kg/cm², 9 - 14 psi)</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	Replace radiator cap.

DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

VG33E

Diagnostic Procedure (Cont'd)

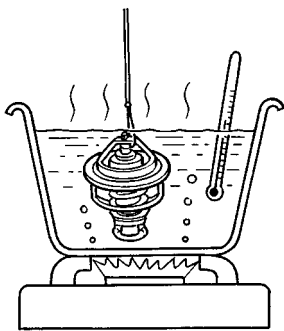6	CHECK THERMOSTAT	<p>1. Check valve seating condition at normal room temperatures. It should seat tightly.</p> <p>2. Check valve opening temperature and valve lift.</p> <div style="text-align: center; margin: 20px 0;">  </div> <p style="text-align: right; margin-right: 20px;">SLC343</p> <p>Valve opening temperature: 82°C (170°F) [standard]</p> <p>Valve lift: More than 10 mm/95°C (0.31 in/194°F)</p> <p>3. Check if valve is closed at 5°C (9°F) below valve opening temperature. For details, refer to "Thermostat", LC-30.</p> <p style="text-align: center; margin-top: 20px;">OK or NG</p>	GI MA EM LC <div style="background-color: black; color: white; padding: 5px; text-align: center;">EC</div> FE CL MT AT TF PD AX SU BR ST RS BT HA SC EL IDX
	OK	▶ GO TO 7.	
	NG	▶ Replace thermostat.	


DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

VG33E

Diagnostic Procedure (Cont'd)

7 CHECK ENGINE COOLANT TEMPERATURE SENSOR


Check resistance as shown in the figure.

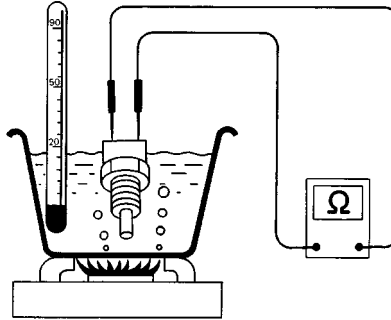

<Reference data>

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

SEF152P

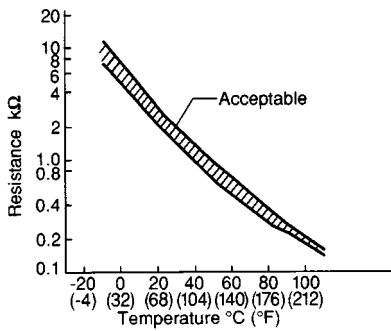

MTBL0229

SEF012P

OK or NG

OK ► GO TO 8.

NG ► Replace engine coolant temperature sensor.

8 CHECK MAIN 12 CAUSES



If the cause cannot be isolated, go to "MAIN 12 CAUSES OF OVERHEATING", EC-902.

► **INSPECTION END**

DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

VG33E

Diagnostic Procedure (Cont'd)

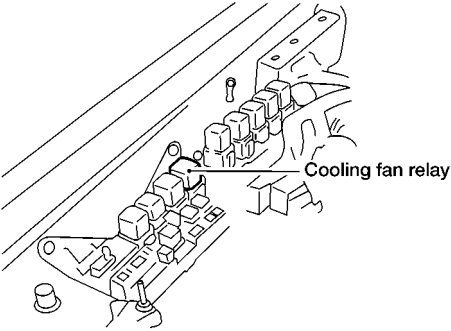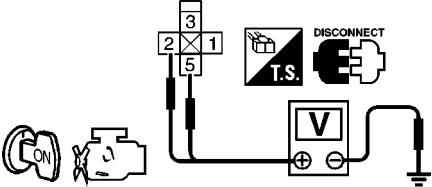9	CHECK COOLING FAN RELAY POWER SUPPLY CIRCUIT	<p>1. Turn ignition switch "OFF". 2. Disconnect cooling fan relay.</p> <div style="text-align: center; margin: 10px 0;">  </div> <p>3. Turn ignition switch "ON". 4. Check voltage between terminals 2, 5 and ground with CONSULT-II or tester.</p> <div style="text-align: center; margin: 10px 0;">  </div> <p style="color: blue; margin-top: 10px;">Voltage: Battery voltage</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	<p>AEC932A</p> <p>SEF667W</p>
OK	▶	GO TO 11.	
NG	▶	GO TO 10.	


10	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Fuse block (J/B) connector E49 ● 10A fuse ● 40A fusible link ● Harness for open or short between cooling fan relay and fuse ● Harness for open or short between cooling fan relay and battery 	
	▶	Repair open circuit or short to ground or short to power in harness or connectors.	

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

VG33E

Diagnostic Procedure (Cont'd)

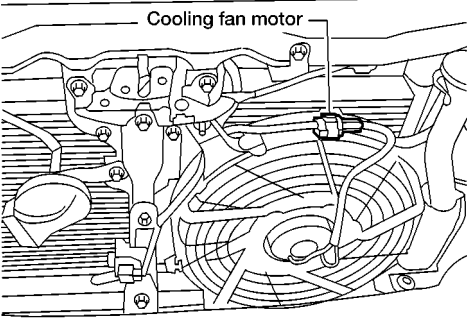11	CHECK COOLING FAN MOTOR POWER SUPPLY AND GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Disconnect cooling fan motor harness connector.</p> <div style="text-align: center;">  <p style="text-align: center; margin-top: -10px;">Cooling fan motor</p> </div> <p style="text-align: right; margin-right: 20px;">AEC931A</p> <p>3. Check harness continuity between relay terminal 3 and motor terminal 2, motor terminals 3, 4 and body ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 12.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.



12	CHECK COOLING FAN RELAY OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 36 and relay terminal 1. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 14.
NG	▶	GO TO 13.

13	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M58, F28 ● Harness for open or short between cooling fan relay and ECM 		
	▶	Repair open circuit or short to ground or short to power in harness or connectors.


DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

VG33E

Diagnostic Procedure (Cont'd)

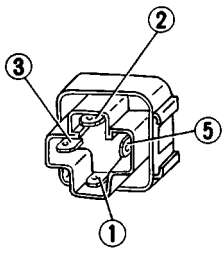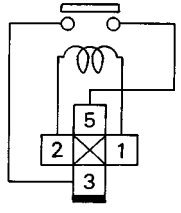14	CHECK COOLING FAN RELAY						
<p>Check continuity between terminals 3 and 5.</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <div style="text-align: right; margin-top: 10px;">SEF511P</div> <table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Conditions</th> <th style="width: 50%;">Continuity</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td>No current supply</td> <td style="text-align: center;">No</td> </tr> </tbody> </table> <div style="text-align: right; margin-top: 10px;">MTBL0252</div> <p style="text-align: center; margin-top: 10px;">OK or NG</p>		Conditions	Continuity	12V direct current supply between terminals 1 and 2	Yes	No current supply	No
Conditions	Continuity						
12V direct current supply between terminals 1 and 2	Yes						
No current supply	No						
OK	▶ GO TO 15.						
NG	▶ Replace cooling fan relay.						

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

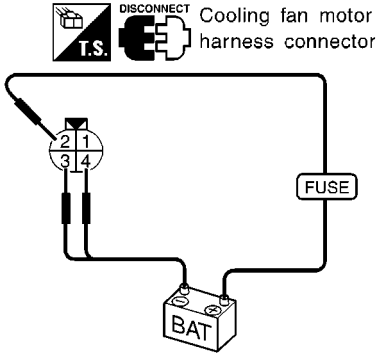15	CHECK COOLING FAN MOTOR								
<p>1. Disconnect cooling fan motor harness connector. 2. Supply cooling fan motor terminals with battery voltage and check operation.</p> <table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2"></th> <th colspan="2" style="text-align: center;">Terminals</th> </tr> <tr> <th style="text-align: center;">(+)</th> <th style="text-align: center;">(-)</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Cooling fan motor</td> <td style="text-align: center;">2</td> <td style="text-align: center;">3, 4</td> </tr> </tbody> </table> <div style="text-align: right; margin-top: 10px;">MTBL0253</div> <div style="text-align: center; margin-top: 10px;">  <p style="margin-top: 5px;">Cooling fan motor should operate.</p> </div> <div style="text-align: right; margin-top: 10px;">SEF670W</div> <p style="text-align: center; margin-top: 10px;">OK or NG</p>			Terminals		(+)	(-)	Cooling fan motor	2	3, 4
	Terminals								
	(+)	(-)							
Cooling fan motor	2	3, 4							
OK	▶ GO TO 16.								
NG	▶ Replace cooling fan motor.								

16	CHECK INTERMITTENT INCIDENT
<p>Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.</p>	
▶	INSPECTION END

DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

VG33E

Main 12 Causes of Overheating

Main 12 Causes of Overheating

NEEC0432

Engine	Step	Inspection item	Equipment	Standard	Reference page
OFF	1	<ul style="list-style-type: none"> ● Blocked radiator ● Blocked condenser ● Blocked radiator grille ● Blocked bumper 	<ul style="list-style-type: none"> ● Visual 	No blocking	—
	2	<ul style="list-style-type: none"> ● Coolant mixture 	<ul style="list-style-type: none"> ● Coolant tester 	50 - 50% coolant mixture	See "RECOMMENDED FLUIDS AND LUBRICANTS", MA-13 .
	3	<ul style="list-style-type: none"> ● Coolant level 	<ul style="list-style-type: none"> ● Visual 	Coolant up to MAX level in reservoir tank and radiator filler neck	See "Changing Engine Coolant", "ENGINE MAINTENANCE", MA-27 .
	4	<ul style="list-style-type: none"> ● Radiator cap 	<ul style="list-style-type: none"> ● Pressure tester 	59 - 98 kPa (0.6 - 1.0 kg/cm ² , 9 - 14 psi) (Limit)	See "System Check", "ENGINE COOLING SYSTEM", LC-27 .
ON*2	5	<ul style="list-style-type: none"> ● Coolant leaks 	<ul style="list-style-type: none"> ● Visual 	No leaks	See "System Check", "ENGINE COOLING SYSTEM", LC-27 .
ON*2	6	<ul style="list-style-type: none"> ● Thermostat 	<ul style="list-style-type: none"> ● Touch the upper and lower radiator hoses 	Both hoses should be hot	See "Thermostat" and "Radiator", "ENGINE COOLING SYSTEM", LC-30 and LC-32 .
ON*1	7	<ul style="list-style-type: none"> ● Cooling fan 	<ul style="list-style-type: none"> ● CONSULT-II 	Operating	See "TROUBLE DIAGNOSIS FOR OVERHEAT" (EC-1149).
OFF	8	<ul style="list-style-type: none"> ● Combustion gas leak 	<ul style="list-style-type: none"> ● Color checker chemical tester 4 Gas analyzer 	Negative	—
ON*3	9	<ul style="list-style-type: none"> ● Coolant temperature gauge 	<ul style="list-style-type: none"> ● Visual 	Gauge less than 3/4 when driving	—
		<ul style="list-style-type: none"> ● Coolant overflow to reservoir tank 	<ul style="list-style-type: none"> ● Visual 	No overflow during driving and idling	See "Changing Engine Coolant", "ENGINE MAINTENANCE", MA-27 .
OFF*4	10	<ul style="list-style-type: none"> ● Coolant return from reservoir tank to radiator 	<ul style="list-style-type: none"> ● Visual 	Should be initial level in reservoir tank	See "ENGINE MAINTENANCE", MA-26 .
OFF	11	<ul style="list-style-type: none"> ● Cylinder head 	<ul style="list-style-type: none"> ● Straight gauge feeler gauge 	0.1 mm (0.004 in) Maximum distortion (warping)	See "Inspection", "CYLINDER HEAD", EM-90 .
	12	<ul style="list-style-type: none"> ● Cylinder block and pistons 	<ul style="list-style-type: none"> ● Visual 	No scuffing on cylinder walls or piston	See "Inspection", "CYLINDER BLOCK", EM-106 .

*1: Turn the ignition switch ON.

*2: Engine running at 3,000 rpm for 10 minutes.

*3: Drive at 90 km/h (55 MPH) for 30 minutes and then let idle for 10 minutes.

*4: After 60 minutes of cool down time.

For more information, refer to "OVERHEATING CAUSE ANALYSIS", **LC-35**.

DTC P0300 - P0306 NO. 6 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

VG33E

On Board Diagnosis Logic

On Board Diagnosis Logic

If a misfire occurs, the engine speed will fluctuate. If the fluctuation is detected by the crankshaft position sensor (OBD), the misfire is diagnosed.

NEEC0182

Sensor	Input Signal to ECM	ECM function
Crankshaft position sensor (OBD)	Engine speed	On board diagnosis of misfire

The misfire detection logic consists of the following two conditions.

- One Trip Detection Logic (Three Way Catalyst Damage)**
 On the first trip that a misfire condition occurs that can damage the three way catalyst (TWC) due to overheating, the MIL will blink. When a misfire condition occurs, the ECM monitors the CKP sensor signal every 200 engine revolutions for a change. When the misfire condition decreases to a level that will not damage the TWC, the MIL will turn off. If another misfire condition occurs that can damage the TWC on a second trip, the MIL will blink. When the misfire condition decreases to a level that will not damage the TWC, the MIL will remain on. If another misfire condition occurs that can damage the TWC, the MIL will begin to blink again.
- Two Trip Detection Logic (Exhaust quality deterioration)**
 For misfire conditions that will not damage the TWC (but will affect vehicle emission), the MIL will only light when the misfire is detected on a second trip. During this condition, ECM monitors the CKP sensor signal every 1000 revolutions. A misfire malfunction can be detected on any one cylinder or on multiple cylinders.

Malfunction is detected when multiple cylinders misfire, No. 1 cylinder misfires, No. 2 cylinder misfires, No. 3 cylinder misfires, No. 4 cylinder misfires, No. 5 cylinder misfires and No. 6 cylinder misfires.

POSSIBLE CAUSE

NEEC0182S01

- Improper spark plug
- Insufficient compression
- Incorrect fuel pressure
- EGR valve
- The injector circuit is open or shorted
- Injectors
- Intake air leak
- The ignition secondary circuit is open or shorted
- Lack of fuel
- Drive plate
- Front heated oxygen sensor
- Incorrect distributor rotor

DTC Confirmation Procedure

NEEC0183

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

ⓐ With CONSULT-II

- 1) Turn ignition switch "ON", and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and warm it up to normal operating temperature.

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM (REF)	XXX rpm
COOLAN TEMP/S	XXX °C
VHCL SPEED SE	XXX km/h
THRTL POS SEN	XXX V
CLSD THL/P SW	OFF
P/N POSI SW	OFF

PEF869U

DTC P0300 - P0306 NO. 6 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

VG33E

DTC Confirmation Procedure (Cont'd)

- 3) Turn ignition switch "OFF" and wait at least 5 seconds.
- 4) Start engine again and drive at 1,500 to 3,000 rpm for at least 3 minutes.

Hold the accelerator pedal as steady as possible.

NOTE:

Refer to the freeze frame data for the test driving conditions.

- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-904.

 **With GST**

Follow the procedure "With CONSULT-II".

Diagnostic Procedure

NEEC0184

1	CHECK FOR INTAKE AIR LEAK	
1. Start engine and run it at idle speed. 2. Listen for the sound of the intake air leak.		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Discover air leak location and repair.


2	CHECK FOR EXHAUST SYSTEM CLOGGING	
Stop engine and visually check exhaust tube, three way catalyst and muffler for dents.		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Repair or replace it.


3	CHECK EGR FUNCTION	
Perform "DTC Confirmation Procedure" of "DTC P1402 EGR FUNCTION (OPEN)". Refer to EC-1073.		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair EGR system.

DTC P0300 - P0306 NO. 6 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

VG33E

Diagnostic Procedure (Cont'd)

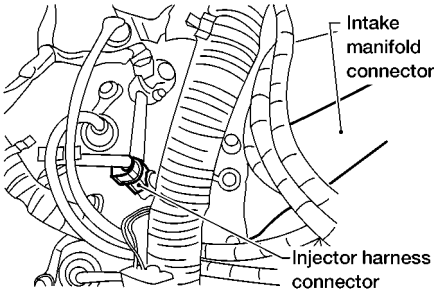4	PERFORM POWER BALANCE TEST																				
<p>Ⓟ With CONSULT-II 1. Perform "POWER BALANCE" in "ACTIVE TEST" mode.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse; text-align: center;"> <tr><td colspan="2">ACTIVE TEST</td></tr> <tr><td colspan="2">POWER BALANCE</td></tr> <tr><td colspan="2">MONITOR</td></tr> <tr><td>CMPS~RPM(REF)</td><td>XXX rpm</td></tr> <tr><td>MAS AIR/FL SE</td><td>XXX V</td></tr> <tr><td>IACV-AAC/V</td><td>XXX %</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table> <p style="text-align: right;">PEF389V</p>		ACTIVE TEST		POWER BALANCE		MONITOR		CMPS~RPM(REF)	XXX rpm	MAS AIR/FL SE	XXX V	IACV-AAC/V	XXX %								
ACTIVE TEST																					
POWER BALANCE																					
MONITOR																					
CMPS~RPM(REF)	XXX rpm																				
MAS AIR/FL SE	XXX V																				
IACV-AAC/V	XXX %																				
<p>2. Is there any cylinder which does not produce a momentary engine speed drop?</p>																					
<p>ⓧ Without CONSULT-II When disconnecting each injector harness connector one at a time, is there any cylinder which does not produce a momentary engine speed drop?</p> <div style="text-align: center;">  </div> <p style="text-align: right;">AEC646A</p>																					
Yes or No																					
Yes	▶	GO TO 5.																			
No	▶	GO TO 8.																			

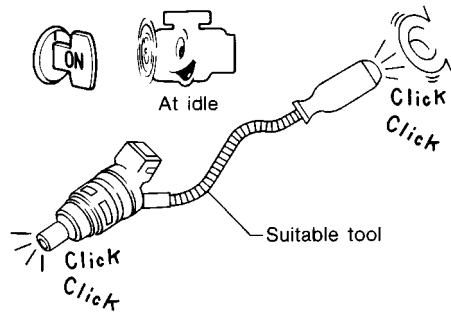
5	CHECK INJECTOR	
<p>Does each injector make an operating sound at idle?</p> <div style="text-align: center;">  </div> <p style="text-align: right;">MEC703B</p>		
Yes or No		
Yes	▶	GO TO 6.
No	▶	Check injector(s) and circuit(s). Refer to EC-1162.


GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0300 - P0306 NO. 6 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

VG33E

Diagnostic Procedure (Cont'd)

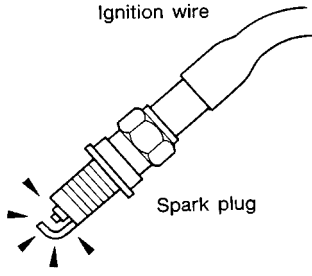
6	CHECK IGNITION SPARK	
<ol style="list-style-type: none"> 1. Disconnect ignition wire from spark plug. 2. Connect a known good spark plug to the ignition wire. 3. Place end of spark plug against a suitable ground and crank engine. 4. Check for spark. 		
		
SEF282G		
OK or NG		
OK	▶	GO TO 8.
NG	▶	GO TO 7.

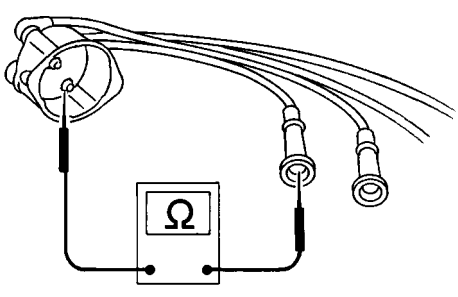7	CHECK IGNITION WIRES															
<ol style="list-style-type: none"> 1. Inspect wires for cracks, damage, burned terminals and for improper fit. 2. Measure the resistance of wires to their distributor cap terminal. Move each wire while testing to check for intermittent breaks. 																
																
SEF174P																
Resistance:																
<table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Cylinder No.</th> <th style="text-align: center;">Resistance kΩ [at 25°C (77°F)]</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">1</td> <td style="text-align: center;">Approximately 6.5</td> </tr> <tr> <td style="text-align: center;">2</td> <td style="text-align: center;">Approximately 10.0</td> </tr> <tr> <td style="text-align: center;">3</td> <td style="text-align: center;">Approximately 8.5</td> </tr> <tr> <td style="text-align: center;">4</td> <td style="text-align: center;">Approximately 12.5</td> </tr> <tr> <td style="text-align: center;">5</td> <td style="text-align: center;">Approximately 8.5</td> </tr> <tr> <td style="text-align: center;">6</td> <td style="text-align: center;">Approximately 11.0</td> </tr> </tbody> </table>			Cylinder No.	Resistance kΩ [at 25°C (77°F)]	1	Approximately 6.5	2	Approximately 10.0	3	Approximately 8.5	4	Approximately 12.5	5	Approximately 8.5	6	Approximately 11.0
Cylinder No.	Resistance kΩ [at 25°C (77°F)]															
1	Approximately 6.5															
2	Approximately 10.0															
3	Approximately 8.5															
4	Approximately 12.5															
5	Approximately 8.5															
6	Approximately 11.0															
MTBL0235																
<p>If the resistance exceeds the above specification, inspect ignition wire to distributor cap connection. Clean connection or replace the ignition wire with a new one.</p>																
OK or NG																
OK	▶	Check the following: <ul style="list-style-type: none"> ● Distributor rotor head for incorrect parts ● Ignition coil, power transistor and their circuits Refer to EC-1045.														
NG	▶	Replace.														

DTC P0300 - P0306 NO. 6 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

VG33E


Diagnostic Procedure (Cont'd)

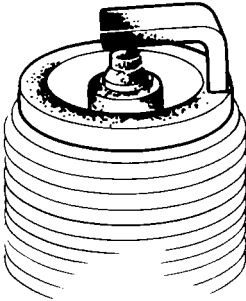8	CHECK SPARK PLUGS	
Remove the spark plugs and check for fouling, etc.		
		
SEF156I		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Repair or replace spark plug(s) with standard type one(s). For spark plug type, refer to "ENGINE MAINTENANCE", MA-32 .

GI
MA
EM
LC
EC

9	CHECK COMPRESSION PRESSURE	
Refer to EM-72 .		
<ul style="list-style-type: none"> ● Check compression pressure. <li style="padding-left: 20px;">Standard: 1,196 kPa(12.2 kg/cm², 173 psi)/300 rpm <li style="padding-left: 20px;">Minimum: 883 kPa (9.0 kg/cm², 128 psi)/300 rpm <li style="padding-left: 20px;">Difference between each cylinder: 98 kPa (1.0 kg/cm², 14 psi)/300 rpm 		
OK or NG		
OK	▶	GO TO 10.
NG	▶	Check pistons, piston rings, valves, valve seats and cylinder head gaskets.

MT
AT
TF
PD
AX

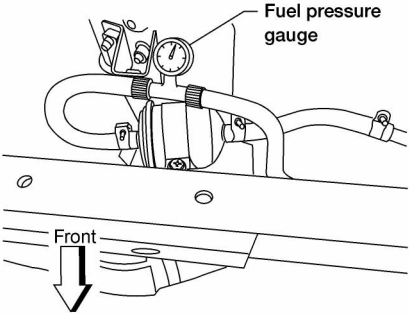10	CHECK FUEL PRESSURE	
<ol style="list-style-type: none"> 1. Install any parts removed. 2. Release fuel pressure to zero. Refer to EC-620. 3. Install fuel pressure gauge and check fuel pressure. 		
		
AEC064B		
OK or NG		
OK	▶	GO TO 12.
NG	▶	GO TO 11.

SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0300 - P0306 NO. 6 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

VG33E

Diagnostic Procedure (Cont'd)

11	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Fuel pump and circuit (Refer to EC-1170.) ● Fuel pressure regulator (Refer to EC-621.) ● Fuel lines (Refer to "ENGINE MAINTENANCE", MA-29.) ● Fuel filter for clogging 	
	Repair or replace.

12	CHECK IGNITION TIMING										
<p>Check the following items. Refer to "Basic Inspection", EC-680.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Items</th> <th style="text-align: center;">Specifications</th> </tr> </thead> <tbody> <tr> <td>Ignition timing</td> <td>15° ± 2° BTDC</td> </tr> <tr> <td>Base idle speed</td> <td>700 ± 50 rpm (in "P" or "N" position)</td> </tr> <tr> <td>Closed throttle position switch idle position adjustment</td> <td>Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF</td> </tr> <tr> <td>Target idle speed</td> <td>750 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table> <p style="text-align: right; margin-right: 20px;">MTBL0226</p> <p style="text-align: center;">OK or NG</p>		Items	Specifications	Ignition timing	15° ± 2° BTDC	Base idle speed	700 ± 50 rpm (in "P" or "N" position)	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF	Target idle speed	750 ± 50 rpm (in "P" or "N" position)
Items	Specifications										
Ignition timing	15° ± 2° BTDC										
Base idle speed	700 ± 50 rpm (in "P" or "N" position)										
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF										
Target idle speed	750 ± 50 rpm (in "P" or "N" position)										
OK (With CONSULT-II)	GO TO 13.										
OK (Without CONSULT-II)	GO TO 14.										
NG	Adjust ignition timing.										

DTC P0300 - P0306 NO. 6 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

VG33E

Diagnostic Procedure (Cont'd)

13 CHECK FRONT HEATED OXYGEN SENSOR LH/RH

Ⓟ With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "MANU TRIG" and "HI SPEED" in "DATA MONITOR" mode with CONSULT-II, and select "FR O2 SEN-B1 (-B2)" and "FR O2 MNTR-B1 (-B2)".
3. Hold engine speed at 2,000 rpm under no load during the following steps.
4. Touch "RECORD" on CONSULT-II screen.

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
MAS AIR/FL SE	XXX V
COOLAN TEMP/S	XXX °C
FR O2 SEN-B1	XXX V
FR O2 MNTR-B1	LEAN
INJ PULSE-B1	XXX msec
A/F ALPHA-B1	XXX %
FR O2 HTR-B1	ON

PEF365V

5. Check the following.

- "FR O2 MNTR-B1 (-B2)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown left:


Right bank
 cycle | 1 | 2 | 3 | 4 | 5 |
 FR O2 MNTR-B1 R-L-R-L-R-L-R-L-R-L-R

Left bank
 cycle | 1 | 2 | 3 | 4 | 5 |
 FR O2 MNTR-B2 R-L-R-L-R-L-R-L-R-L-R

R means FR O2 MNTR-B1(-B2) indicates RICH
 L means FR O2 MNTR-B1(-B2) indicates LEAN

SEF702W

- "FR O2 SEN-B1 (-B2)" voltage goes above 0.6V at least once.
- "FR O2 SEN-B1 (-B2)" voltage goes below 0.3V at least once.
- "FR O2 SEN-B1 (-B2)" voltage never exceeds 1.0V.

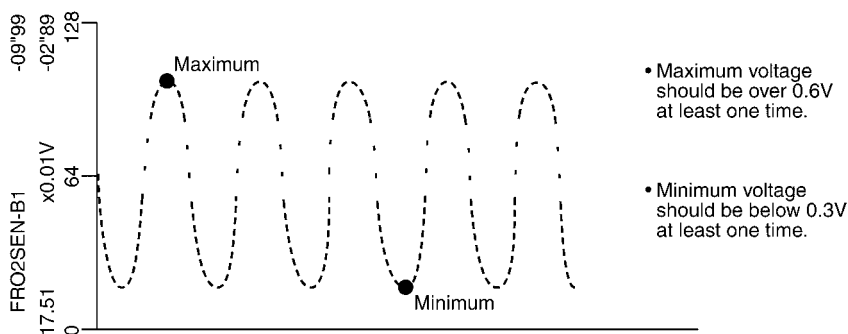

SEF154X

CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

OK or NG


OK	▶	GO TO 15.
NG	▶	Replace front heated oxygen sensor.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0300 - P0306 NO. 6 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

VG33E

Diagnostic Procedure (Cont'd)

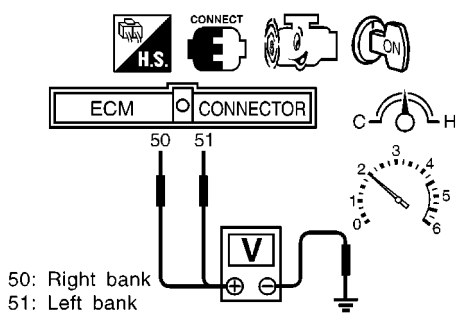14	CHECK FRONT HEATED OXYGEN SENSOR LH/RH
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Set voltmeter probes between ECM terminal 50 (right bank sensor signal) or 51 (left bank sensor signal) and engine ground. 3. Check the following with engine speed held at 2,000 rpm constant under no load. 	
	
SEF919U	
<ul style="list-style-type: none"> ● MIL goes on more than 5 times within 10 seconds in Diagnostic Test Mode II (FRONT HEATED OXYGEN SENSOR MONITOR). ● The maximum voltage is over 0.6V at least one time. ● The minimum voltage is below 0.3V at least one time. ● The voltage never exceeds 1.0V. <p>CAUTION: Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 15.
NG	▶ Replace front heated oxygen sensor.

15	CHECK MASS AIR FLOW SENSOR
<p>Ⓟ With CONSULT-II Check mass air flow sensor signal in "DATA MONITOR" mode with CONSULT-II. 3.3 - 4.8 g-m/sec: at idling 12.0 - 14.9 g-m/sec: at 2,500 rpm</p>	
<p>Ⓢ With GST Check mass air flow sensor signal in MODE 1 with GST. 3.3 - 4.8 g-m/sec: at idling 12.0 - 14.9 g-m/sec: at 2,500 rpm</p>	
<p>Ⓝ No Tools Check voltage between ECM terminal 54 and ground. 1.0 - 1.7V: at idling 1.7 - 2.3V: at 2,500 rpm</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 16.
NG	▶ Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-724.

DTC P0300 - P0306 NO. 6 - 1 CYLINDER MISFIRE, MULTIPLE CYLINDER MISFIRE

VG33E

Diagnostic Procedure (Cont'd)

16	CHECK SYMPTOM MATRIX CHART	
Check items on the rough idle symptom in "Symptom Matrix Chart", EC-699.		
OK or NG		
OK	▶	GO TO 17.
NG	▶	Repair or replace.

GI

MA

EM

17	ERASE THE 1ST TRIP DTC	
Some tests may cause a 1st trip DTC to be set. Erase the 1st trip DTC from the ECM memory after performing the tests. Refer to EC-651.		
▶ GO TO 18.		

LC

EC

18	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.		
▶ INSPECTION END		

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT


HA

SC

EL

IDX

Component Description

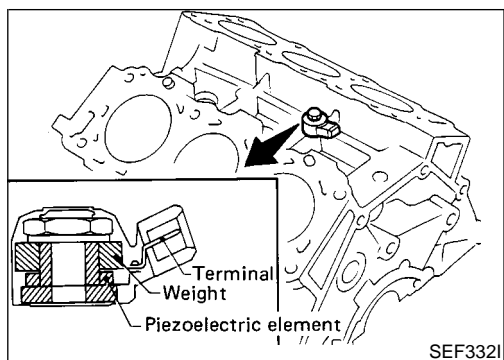

Component Description

The knock sensor is attached to the cylinder block. It senses engine knocking using a piezoelectric element. A knocking vibration from the cylinder block is sensed as vibrational pressure. This pressure is converted into a voltage signal and sent to the ECM. **Freeze frame data will not be stored in the ECM for the knock sensor. The MIL will not light for knock sensor malfunction. The knock sensor has one trip detection logic.**

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 32 (ECM ground).


TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
64	W	Knock sensor	[Engine is running] ● Idle speed	Approximately 2.5V

On Board Diagnosis Logic

Malfunction is detected when an excessively low or high voltage from the knock sensor is sent to ECM.

POSSIBLE CAUSE

- Harness or connectors
(The knock sensor circuit is open or shorted.)
- Knock sensor

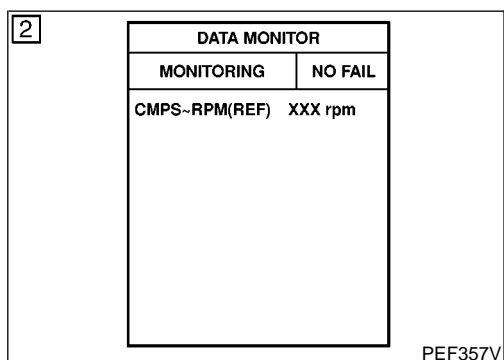

DTC Confirmation Procedure

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

☑ With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and run it for at least 5 seconds at idle speed.
- 3) If DTC is detected, go to "Diagnostic Procedure", EC-914.

☑ With GST

Follow the procedure "With CONSULT-II".

DTC P0325 KNOCK SENSOR (KS)

VG33E

Wiring Diagram

Wiring Diagram

NEEC0189

EC-KS-01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS



BT

HA

SC

EL

IDX

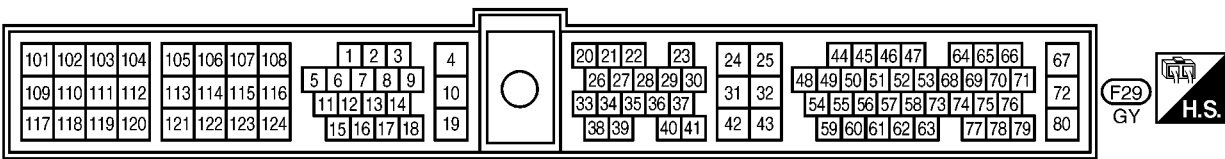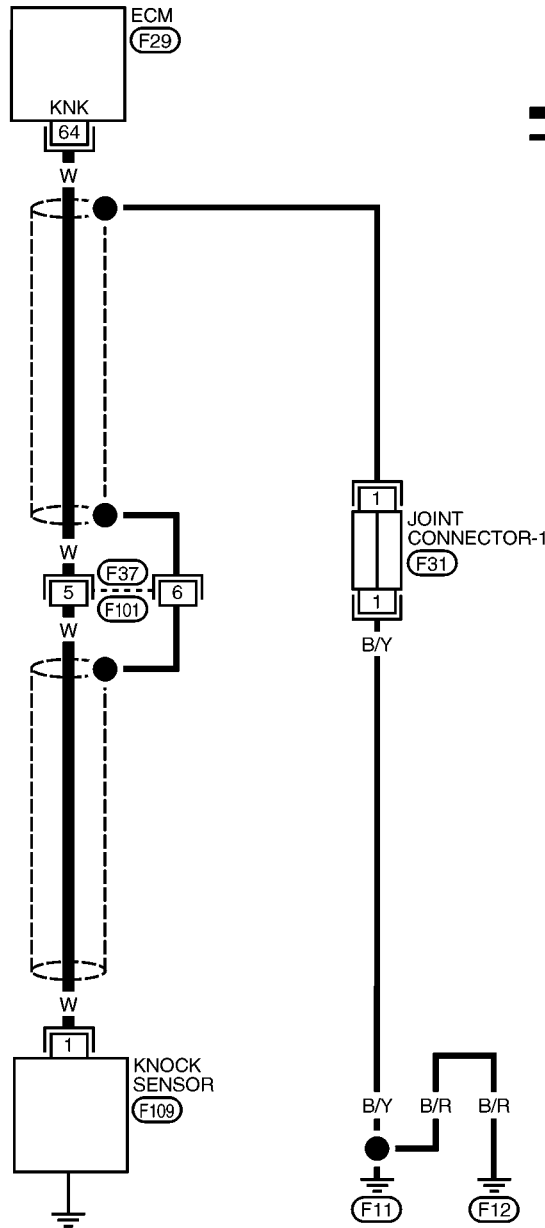

AEC955A

Diagnostic Procedure


NEEC0190

1	CHECK KNOCK SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT-I	
<p>1. Turn ignition switch OFF.</p> <p>2. Disconnect ECM harness connector.</p> <p>3. Check resistance between ECM terminal 64 and engine ground.</p> <p>NOTE: It is necessary to use an ohmmeter which can measure more than 10 MΩ.</p> <p>Resistance: Approximately 500 - 620 kΩ [at 25°C (77°F)]</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	GO TO 2.

2	CHECK INPUT SIGNAL CIRCUIT-II	
<p>1. Disconnect knock sensor harness connector.</p> <p>2. Check harness continuity between ECM terminal 64 and knock sensor terminal 1. Refer to Wiring Diagram.</p> <p>Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	GO TO 3.

3	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connector F37, F101 ● Harness for open or short between ECM and knock sensor 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

4	CHECK KNOCK SENSOR	
<ul style="list-style-type: none"> ● Use an ohmmeter which can measure more than 10 MΩ. <p>1. Disconnect knock sensor harness connector.</p> <p>2. Check resistance between terminal 2 and ground.</p> <div style="text-align: center; margin: 10px 0;"> </div> <p style="text-align: right;"><small>SEF643W</small></p> <p>Resistance: 500 - 620 kΩ [at 25°C (77°F)]</p> <p>CAUTION: Do not use any knock sensors that have been dropped or physically damaged. Use only new ones.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	Replace knock sensor.

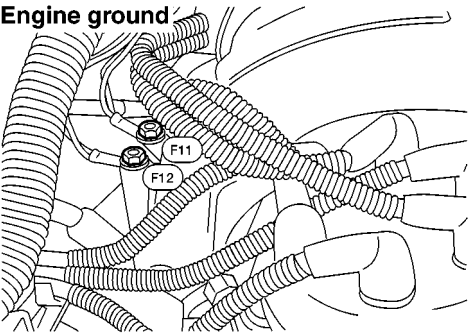5	RETIGHTEN GROUND SCREWS
Loose and retighten engine ground screws.	
 <p style="text-align: center;">Engine ground</p>	
AEC640A	
▶	GO TO 6.

GI
MA
EM
LC
EC

6	CHECK KNOCK SENSOR SHIELD CIRCUIT FOR OPEN AND SHORT
1. Disconnect harness connectors F37, F101. 2. Check harness continuity between harness connector F37 terminal 6 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 8.
NG	▶ GO TO 7.

FE
CL
MT
AT

7	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors F37, F101 ● Joint connectors - 1 ● Harness for open or short between harness connector F37 and engine ground 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

TF
PD
AX

8	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
▶	INSPECTION END



SU
BR

ST
RS
BT
HA
SC
EL
IDX

DTC P0335 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) VG33E

VG33E

Component Description

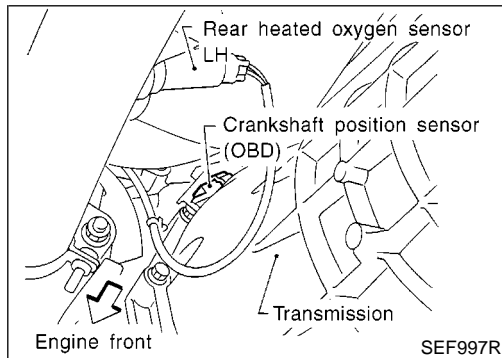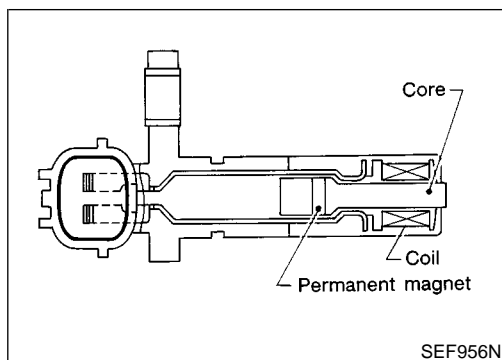

Component Description

NEEC0191

The crankshaft position sensor (OBD) is located on the transaxle housing facing the gear teeth (cogs) of the flywheel or drive plate. It detects the fluctuation of the engine revolution.

The sensor consists of a permanent magnet, core and coil.

When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change.

The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

This sensor is not used to control the engine system. It is used only for the on board diagnosis.

ECM Terminals and Reference Value

NEEC0192

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (AC Voltage)
47	L	Crankshaft position sensor (OBD)	<p>[Engine is running]</p> <ul style="list-style-type: none"> • Warm-up condition • Idle speed 	<p>1 - 2V (AC range)</p> <p>SEF690W</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> • Engine speed is 2,000 rpm 	<p>3 - 4V (AC range)</p> <p>SEF691W</p>

On Board Diagnosis Logic

Malfunction is detected when the proper pulse signal from the crankshaft position sensor (OBD) is not sent to ECM while the engine is running at the specified engine speed.

NEEC0193

POSSIBLE CAUSE

NEEC0193S01

- Harness or connectors
(The crankshaft position sensor (OBD) circuit is open.)
- Crankshaft position sensor (OBD)

2	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF) XXX rpm	

PEF357V

DTC Confirmation Procedure

NEEC0194

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and run it for at least 15 seconds at idle speed.
- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-919.

With GST

Follow the procedure "With CONSULT-II".

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX



DTC P0335 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) VG33E

Wiring Diagram

Wiring Diagram

NEEC0195


EC-CKPS-01

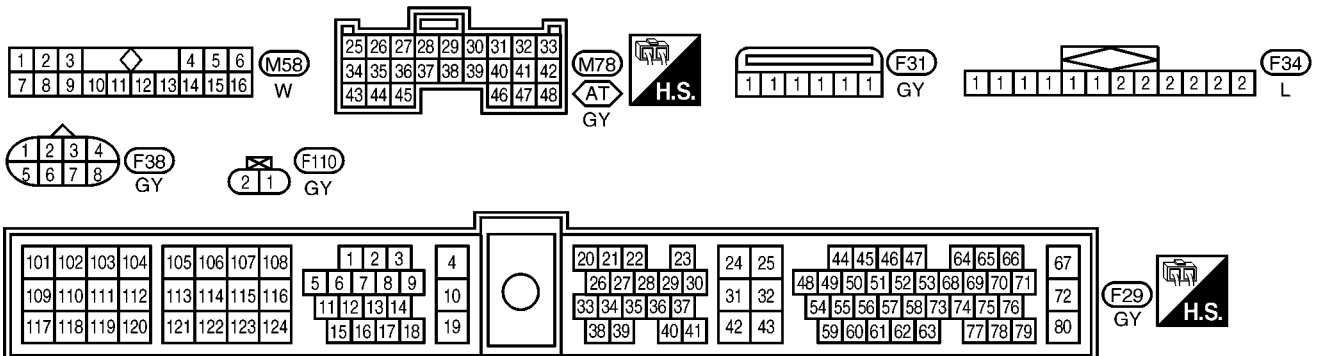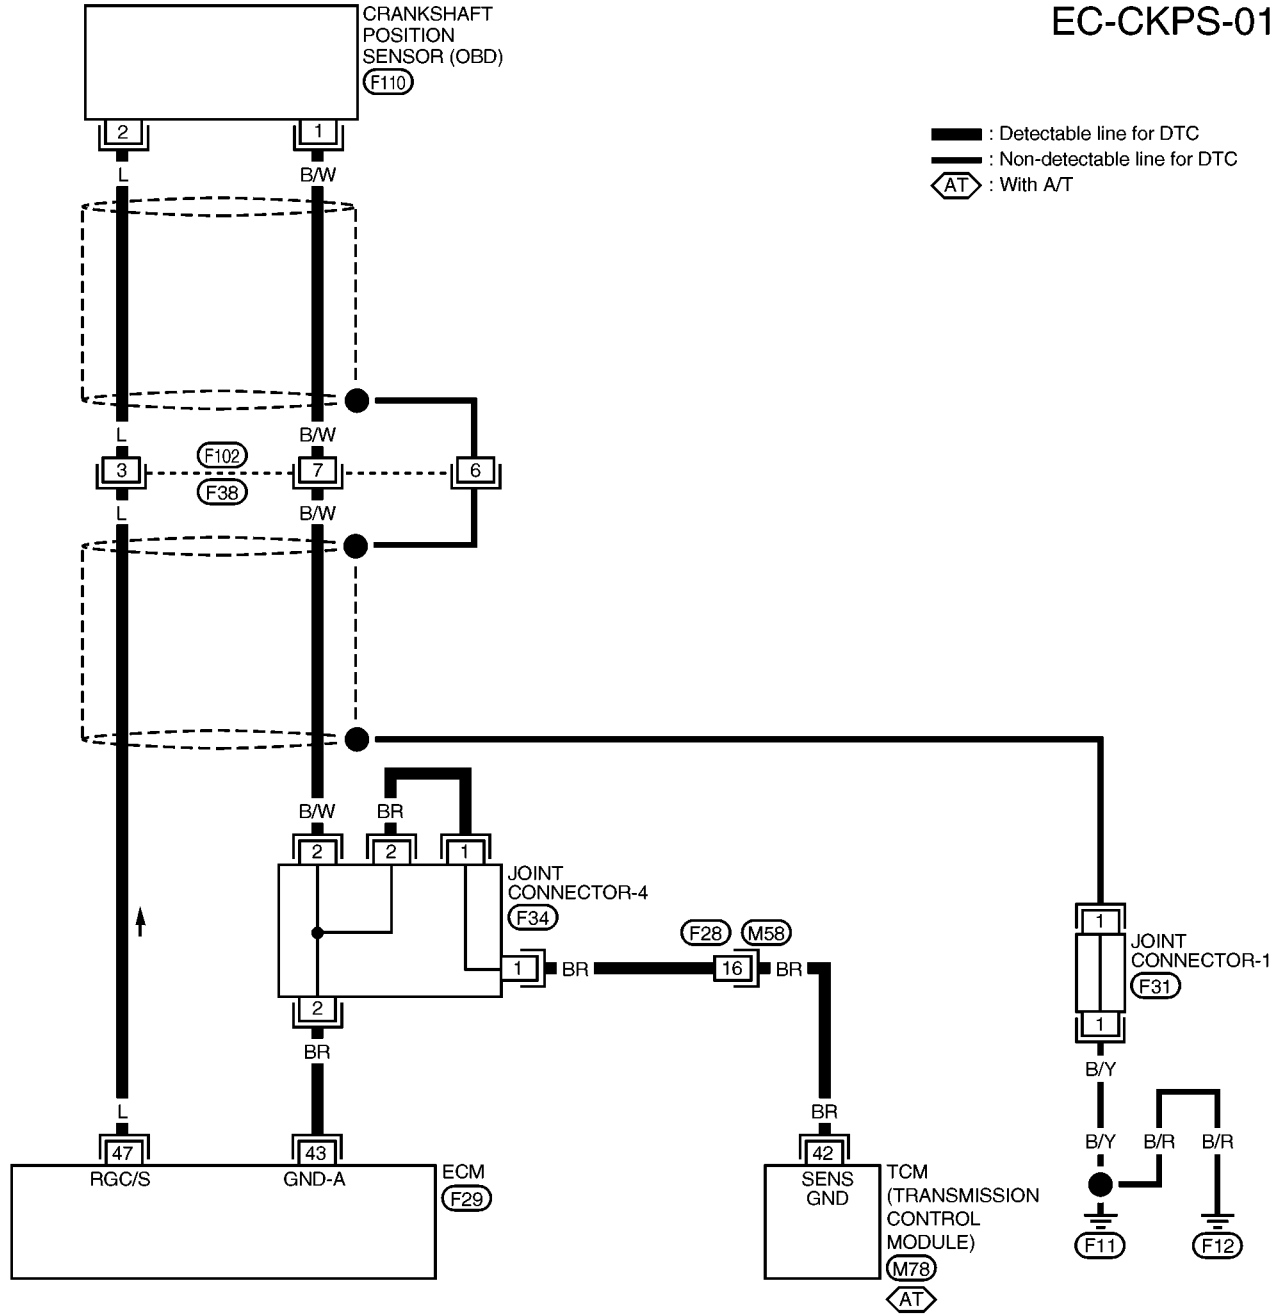


AEC956A

Diagnostic Procedure

NEEC0196

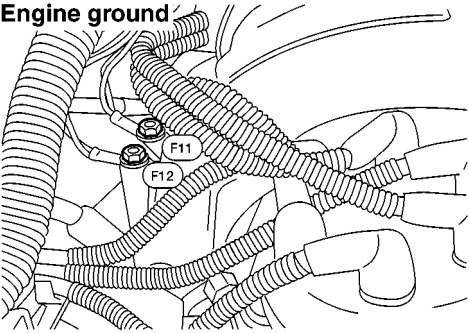1	RETIGHTEN GROUND SCREWS	<p>1. Turn ignition switch OFF. 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;">  <p>Engine ground</p> </div> <p style="text-align: right;">AEC640A</p>	GI MA EM LC EC FE
▶		GO TO 2.	

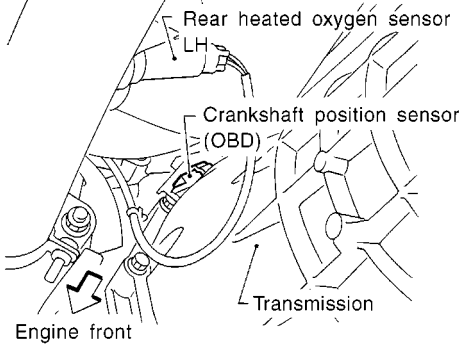2	CHECK CKPS (OBD) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	<p>1. Disconnect crankshaft position sensor (OBD) and ECM harness connectors.</p> <div style="text-align: center;">  <p>Rear heated oxygen sensor LH Crankshaft position sensor (OBD) Transmission Engine front</p> </div> <p style="text-align: right;">SEF997R</p> <p>2. Check continuity between ECM terminal 47 and sensor terminal 2. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	MT AT TF PD AX SU	
OK		▶	GO TO 4.	BR
NG		▶	GO TO 3.	ST

3	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F38, F102 ● Harness for open or short between ECM and crankshaft position sensor (OBD) 	
▶		Repair open circuit or short to ground or short to power in harness or connectors.	BT

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX



DTC P0335 CRANKSHAFT POSITION SENSOR (CKPS) (OBD)

VG33E

Diagnostic Procedure (Cont'd)

4	CHECK CKPS (OBD) GROUND CIRCUIT FOR OPEN AND SHORT
1. Reconnect ECM harness connector. 2. Check harness continuity between sensor terminal 1 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ GO TO 5.

5	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors F38, F102● Harness connectors F28, M58● Joint connector-4● Harness for open or short between crankshaft position sensor (OBD) and ECM● Harness for open or short between crankshaft position sensor (OBD) and TCM (Transmission Control Module)	
	▶ Repair open circuit or short to ground or short to power in harness or connectors.

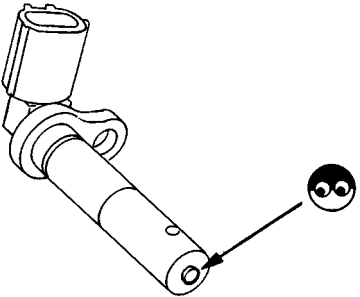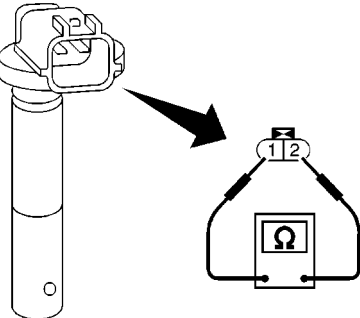6	CHECK CRANKSHAFT POSITION SENSOR (OBD)
1. Disconnect crankshaft position sensor (OBD) harness connector. 2. Loosen the fixing bolt of the sensor. 3. Remove the sensor. 4. Visually check the sensor for chipping.	
	
SEF960N	
5. Check resistance as shown in the figure.	
	
SEF504V	
Resistance: Approximately 512 - 632Ω [at 20°C (68°F)]	
OK or NG	
OK	▶ GO TO 7.
NG	▶ Replace crankshaft position sensor (OBD).

DTC P0335 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) VG33E

Diagnostic Procedure (Cont'd)



7	CHECK CKPS (OBD) SHIELD CIRCUIT FOR OPEN AND SHORT	
<p>1. Disconnect harness connectors F38, F102.</p> <p>2. Check harness continuity between harness connector F38 terminal 6 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 9.
NG	▶	GO TO 8.

8	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F38, F102 ● Joint connector-1 ● Harness for open or short between harness connector F38 and engine ground 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

9	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.		
▶		INSPECTION END

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Component Description

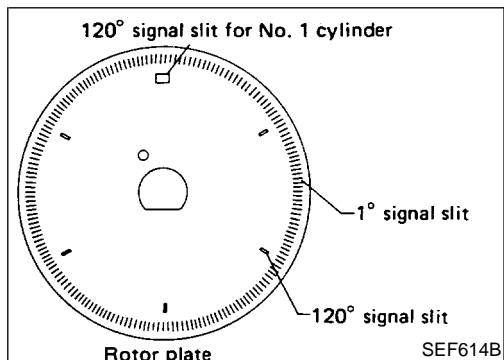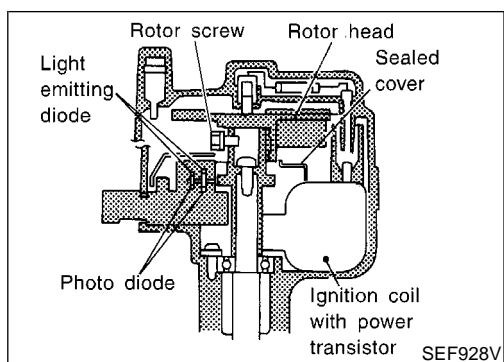

Component Description

NEEC0197

The camshaft position sensor is a basic component of the engine control system. It monitors engine speed and piston position. These input signals to the ECM are used to control fuel injection, ignition timing and other functions.

The camshaft position sensor has a rotor plate and a wave-forming circuit. The rotor plate has 360 slits for a 1° (POS) signal and 6 slits for a 120° (REF) signal. The wave-forming circuit consists of Light Emitting Diodes (LED) and photo diodes.

The rotor plate is positioned between the LED and the photo diode. The LED transmits light to the photo diode. As the rotor plate turns, the slits cut the light to generate rough-shaped pulses. These pulses are converted into on-off signals by the wave-forming circuit and sent to the ECM.

The distributor is not repairable and must be replaced as an assembly except distributor cap and rotor head.

NOTE:



The rotor screw which secures the distributor rotor head to the distributor shaft must be torqued properly.

: **3.6±0.3 N·m (37±3 kg-cm, 32±3 in-lb)**

ECM Terminals and Reference Value

NEEC0198

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

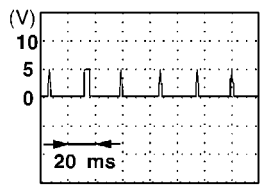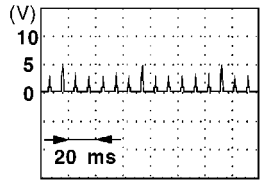TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
4	OR/B	ECM relay (Self shut-off)	[Engine is running] [Ignition switch "OFF"] ● For a few seconds after turning ignition switch "OFF"	0 - 1.5V
			[Ignition switch "OFF"] ● A few seconds passed after turning ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
44	PU	Camshaft position sensor (Reference signal)	[Engine is running] ● Idle speed	0.3 - 0.5V 
48	PU		[Engine is running] ● Engine speed is 2,000 rpm	0.3 - 0.5V 

DTC P0340 CAMSHAFT POSITION SENSOR (CMPS)

VG33E

ECM Terminals and Reference Value (Cont'd)

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
49	LG	Camshaft position sensor (Position signal)	[Engine is running] <ul style="list-style-type: none"> • Warm-up condition • Idle speed 	Approximately 2.5V
			[Engine is running] <ul style="list-style-type: none"> • Engine speed is 2,000 rpm 	Approximately 2.5V
67	B/P	Power supply for ECM	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
72	B/P			
117	B/P	Current return	[Engine is running] <ul style="list-style-type: none"> • Idle speed 	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NEEC0199

Malfunction is detected when
 (Malfunction A) either 1° or 120° signal is not sent to ECM for the first few seconds during engine cranking,
 (Malfunction B) either 1° or 120° signal is not sent to ECM often enough while the engine speed is higher than the specified engine speed,
 (Malfunction C) the relation between 1° and 120° signal is not in the normal range during the specified engine speed.

POSSIBLE CAUSE

NEEC0199S01

- Harness or connectors (The camshaft position sensor circuit is open or shorted.)
- Camshaft position sensor
- Starter motor (Refer to **SC-15**.)
- Starting system circuit (Refer to **SC-11**.)
- Dead (Weak) battery

DTC Confirmation Procedure

NEEC0200

NOTE:

- Perform “PROCEDURE FOR MALFUNCTION A” first. If DTC cannot be confirmed, perform “PROCEDURE FOR MALFUNCTION B AND C”.
- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V at idle.

PROCEDURE FOR MALFUNCTION A

NEEC0200S01

With CONSULT-II

- 1) Turn ignition switch “ON”.
- 2) Select “DATA MONITOR” mode with CONSULT-II.
- 3) Crank engine for at least 2 seconds.
- 4) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-926.

With GST

Follow the procedure “With CONSULT-II”.

2	DATA MONITOR	
	MONITORING	NO FAIL
	COOLAN TEMP/S	XXX °C

PEF002P

3	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF)	XXX rpm

PEF357V

PROCEDURE FOR MALFUNCTION B AND C

NEEC0200S02

With CONSULT-II

- 1) Turn ignition switch “ON”.
- 2) Select “DATA MONITOR” mode with CONSULT-II.
- 3) Start engine and run it for at least 2 seconds at idle speed.
- 4) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-926.

With GST

Follow the procedure “With CONSULT-II”.

DTC P0340 CAMSHAFT POSITION SENSOR (CMPS)




VG33E

Wiring Diagram

Wiring Diagram

NEEC0201

EC-CMPS-01

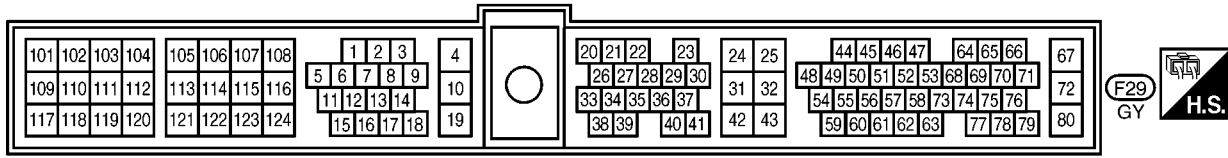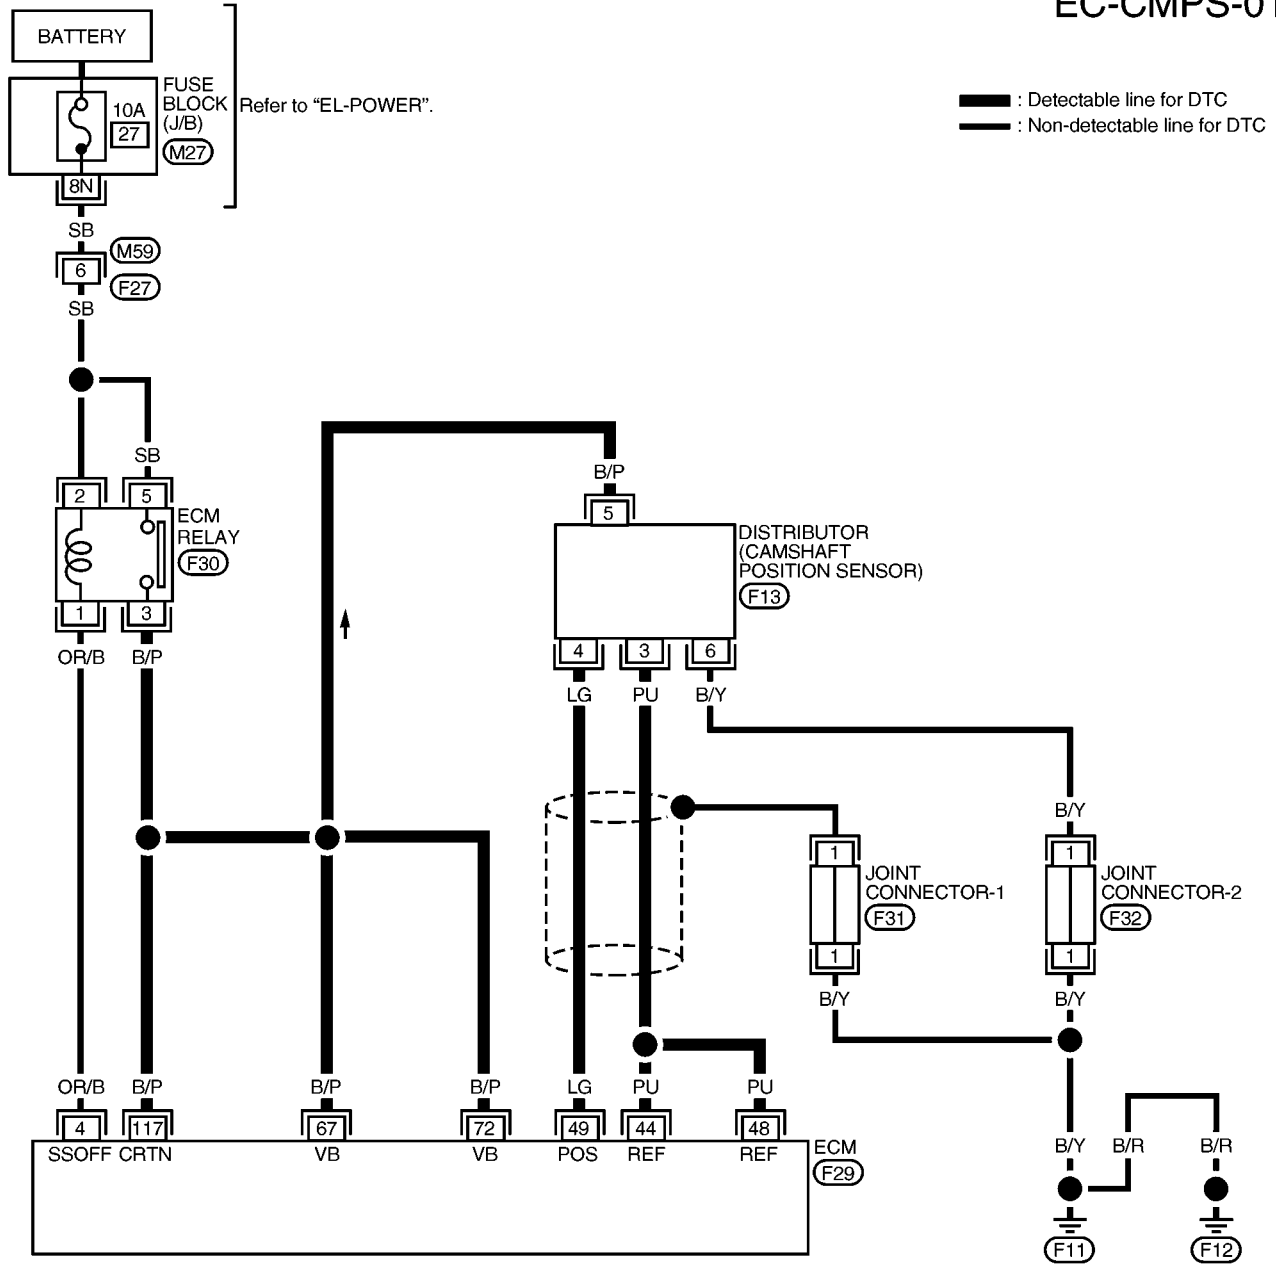




AEC957A

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Diagnostic Procedure

NEEC0202

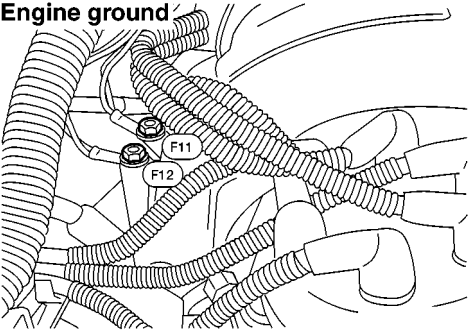1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch OFF. 2. Loosen and retighten engine ground screws.</p>	
	
<small>AEC640A</small>	
▶ GO TO 2.	

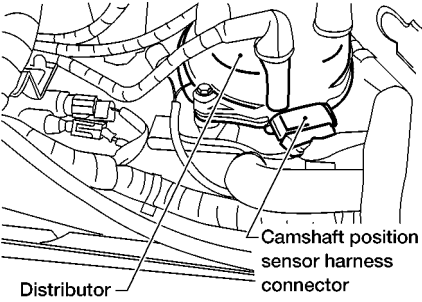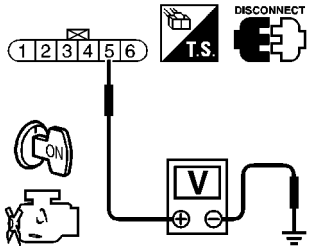2	CHECK CMPS POWER SUPPLY CIRCUIT
<p>1. Disconnect camshaft position sensor harness connector.</p>	
	
<small>AEC647A</small>	
<p>2. Turn ignition switch ON. 3. Check voltage between terminal 5 and ground with CONSULT-II or tester.</p>	
	
<small>SEF708U</small>	
Voltage: Battery voltage	
OK or NG	
OK	▶ GO TO 4.
NG	▶ GO TO 3.

3	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness for open or short between camshaft position sensor and ECM relay ● Harness for open or short between camshaft position sensor and ECM 	
▶ Repair harness or connectors.	

DTC P0340 CAMSHAFT POSITION SENSOR (CMPS)

VG33E

Diagnostic Procedure (Cont'd)

4	CHECK CMPS INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch OFF.</p> <p>2. Disconnect ECM harness connector.</p> <p>3. Check harness continuity between sensor terminal 4 and ECM terminal 49, sensor terminal 3 and ECM terminals 44, 48. Refer to Wiring Diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM
LC














5	CHECK CMPS GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch OFF.</p> <p>2. Check harness continuity between sensor terminal 6 and engine ground. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 7.
NG	▶	GO TO 6.

EC
FE
CL
MT

6	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Joint connector-2 ● Harness for open or short between camshaft position sensor and engine ground 		
	▶	Repair open circuit or short to ground or short to power in harness or connector.

AT
TF

PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

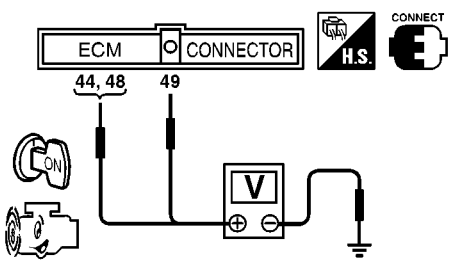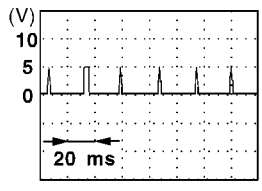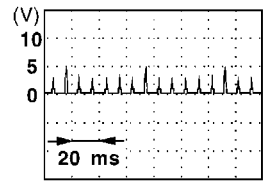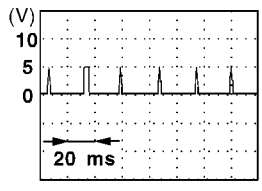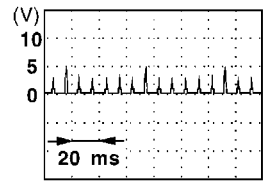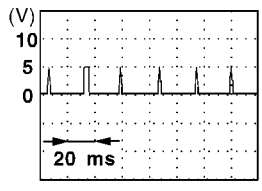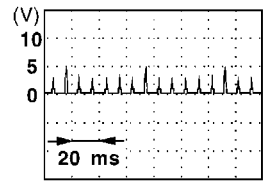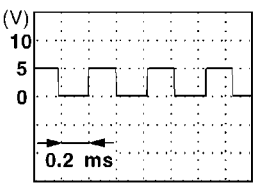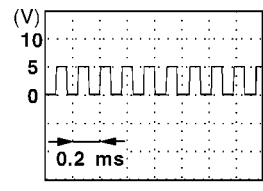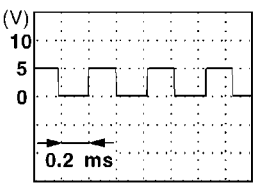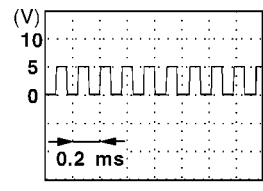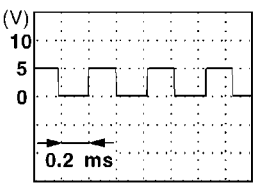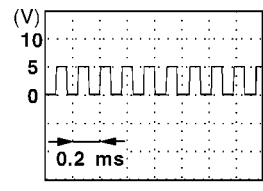7	CHECK CAMSHAFT POSITION SENSOR										
<ol style="list-style-type: none"> 1. Install any parts removed. 2. Start engine. 3. Check voltage between ECM terminals 44, 48 and ground, ECM terminal 49 and ground with DC range. 											
											
Terminal 44 or 48 and engine ground											
	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 20%;">Condition</th> <th style="width: 50%;">Idle</th> <th style="width: 30%;">2,000 rpm</th> </tr> </thead> <tbody> <tr> <td>Voltage</td> <td style="text-align: center;">0.3 - 0.5V</td> <td style="text-align: center;">0.3 - 0.5V</td> </tr> <tr> <td>Pulse signal</td> <td style="text-align: center;">  </td> <td style="text-align: center;">  </td> </tr> </tbody> </table>	Condition	Idle	2,000 rpm	Voltage	0.3 - 0.5V	0.3 - 0.5V	Pulse signal			
Condition	Idle	2,000 rpm									
Voltage	0.3 - 0.5V	0.3 - 0.5V									
Pulse signal											
Terminal 49 and engine ground											
	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 20%;">Condition</th> <th style="width: 50%;">Idle</th> <th style="width: 30%;">2,000 rpm</th> </tr> </thead> <tbody> <tr> <td>Voltage</td> <td style="text-align: center;">Approximately 2.5V</td> <td style="text-align: center;">Approximately 2.5V</td> </tr> <tr> <td>Pulse signal</td> <td style="text-align: center;">  </td> <td style="text-align: center;">  </td> </tr> </tbody> </table>	Condition	Idle	2,000 rpm	Voltage	Approximately 2.5V	Approximately 2.5V	Pulse signal			
Condition	Idle	2,000 rpm									
Voltage	Approximately 2.5V	Approximately 2.5V									
Pulse signal											
AEC038B											
OK or NG											
OK	▶	GO TO 8.									
NG	▶	Replace distributor assembly with camshaft position sensor.									

8	CHECK CMPS SHIELD CIRCUIT FOR OPEN AND SHORT	
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Disconnect joint connector-1. 3. Check the following. <ul style="list-style-type: none"> ● Continuity between joint connector terminal 1 and ground ● Joint connector-1 (Refer to "HARNESS LAYOUT", <i>EL-239</i>) Continuity should exist. 4. Also check harness for short to ground and short to power. 5. Then reconnect joint connector-1. 		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

9	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.		
▶		INSPECTION END

DTC P0400 EGR FUNCTION (CLOSE)

VG33E

Description (If Equipped with EGR Valve)

Description (If Equipped with EGR Valve) SYSTEM DESCRIPTION



NEEC0203

NEEC0203S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	EGR control	EGRC-solenoid valve
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		

This system cuts and controls vacuum applied to the EGR valve to suit engine operating conditions. This cut-and-control operation is accomplished through the ECM and the EGRC-solenoid valve. When the ECM detects any of the following conditions, current does not flow through the solenoid valve. This causes the intake manifold vacuum to be discharged into the atmosphere. The EGR valve remains closed.

- Low engine coolant temperature
- Engine starting
- High-speed engine operation
- Engine idling
- Excessively high engine coolant temperature
- Mass air flow sensor malfunction

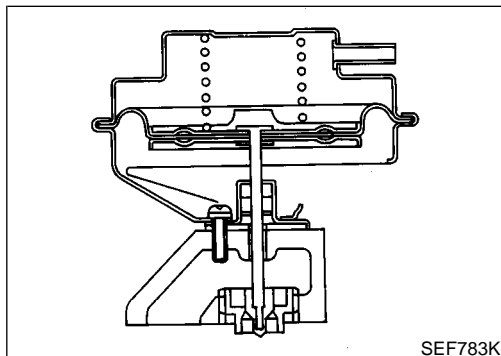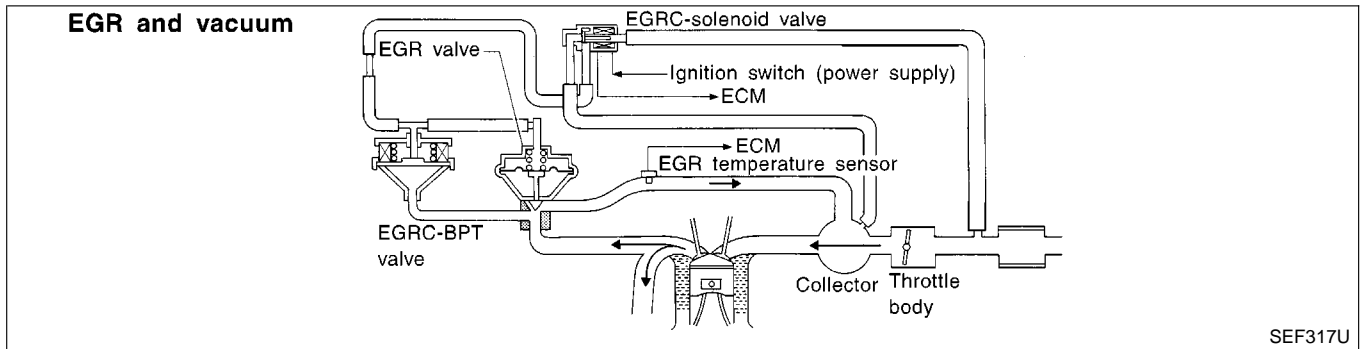

COMPONENT DESCRIPTION


Exhaust Gas Recirculation (EGR) Valve

NEEC0203S02

NEEC0203S0201

The EGR valve controls the amount of exhaust gas routed to the intake manifold. Vacuum is applied to the EGR valve in response to throttle valve opening and EGRC-BPT valve operation. The vacuum controls the movement of a taper valve connected to the vacuum diaphragm in the EGR valve.

Description (If Equipped with EGR Valve) (Cont'd)

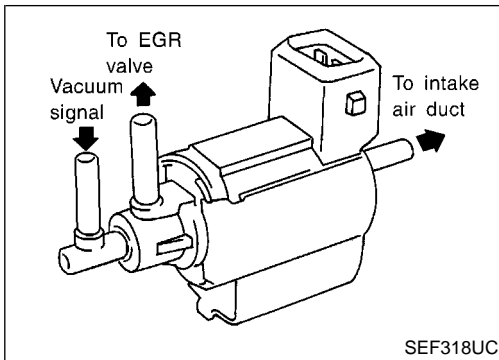


EGRC-solenoid Valve

NEEC0203S0202

The EGRC-solenoid valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the coil in the solenoid valve is energized. The vacuum signal (from the intake manifold collector to the EGR valve) passes through the solenoid valve. The signal then reaches the EGR valve.

When the ECM sends an OFF signal, a plunger will then move to cut the vacuum signal.

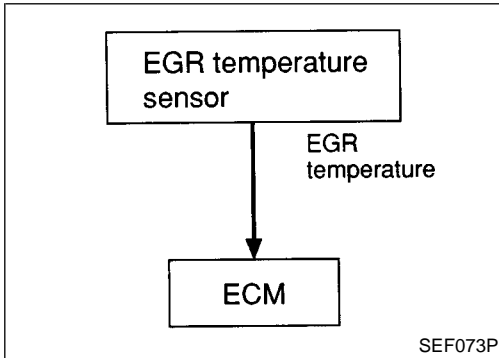

On Board Diagnosis Logic

NEEC0204

If the absence of EGR flow is detected by EGR temperature sensor under the condition that calls for EGR, a low-flow malfunction is diagnosed.

Malfunction is detected when no EGR flow is detected under condition that calls for EGR.

POSSIBLE CAUSE

NEEC0204S01

- EGR valve stuck closed
- EGRC-BPT valve
- Vacuum hoses
- EGRC-solenoid valve
- EGR passage
- EGR temperature sensor
- Exhaust gas leaks

NEEC0205

5	EGR SYSTEM P0400	
	OUT OF CONDITION	
	MONITOR	
	CMPS~RPM(POS)	XXX rpm
	THRTL POS SEN	XXX V
	B/FUEL SCHDL	XXX msec

PEF603W

8	EGR SYSTEM P0400	
	TESTING	
	MONITOR	
	CMPS~RPM(POS)	XXX rpm
	THRTL POS SEN	XXX V
	B/FUEL SCHDL	XXX msec

PEF604W

8	EGR SYSTEM P0400	
	COMPLETED	

PEF785U

DTC Confirmation Procedure

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.
- P0400 will not be displayed at “SELF-DIAG RESULTS” mode with CONSULT-II even though DTC work support test result is NG.

TESTING CONDITION:

For best results, perform the test at a temperature of 5°C (41°F) or higher.

④ With CONSULT-II

- 1) Turn ignition switch “ON”
- 2) Check “COOLAN TEMP/S” in “DATA MONITOR” mode with CONSULT-II.
Confirm COOLAN TEMP/S value is within the range listed below.

COOLAN TEMP/S: Less than 40°C (104°F)

If the value is out of range, park the vehicle in a cool place and allow the engine temperature to stabilize. Do not attempt to lower the engine coolant temperature with a fan or means other than ambient air. Doing so may produce an inaccurate diagnostic result.

- 3) Start engine and let it idle monitoring “COOLAN TEMP/S” value. When the “COOLAN TEMP/S” value reaches 70°C (158°F), immediately go to the next step.
- 4) Select “EGR SYSTEM P0400” of “EGR SYSTEM” in “DTC WORK SUPPORT” mode with CONSULT-II.
- 5) Touch “START”.
- 6) Accelerate vehicle to a speed of 40 km/h (25 MPH) once and then stop vehicle with engine running.
If “COMPLETED” appears on CONSULT-II screen, go to step 9.
If “COMPLETED” does not appear on CONSULT-II screen, go to the following step.
- 7) Check the output voltage of “THRTL POS SEN” (at closed throttle position) and note it.
- 8) When the following conditions are met, “TESTING” will be displayed on the CONSULT-II screen. Maintain the conditions until “TESTING” changes to “COMPLETED”. (It will take approximately 60 seconds or more.)

CMPS-RPM (POS)	1,600 - 2,400 rpm (A/T models) 1,800 - 2,600 rpm (M/T models)
B/FUEL SCHDL	3.0 - 4.5 msec
THRTL POS SEN	X - (X + 0.7) V X = Voltage value measured at step 7
Selector lever	Suitable position

If “TESTING” is not displayed after 5 minutes, retry from step 2.

- 9) Make sure that “OK” is displayed after touching “SELF-DIAG RESULTS”. If “NG” is displayed, refer to “Diagnostic Procedure”, EC-934.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT



HA

SC

EL

IDX

Overall Function Check

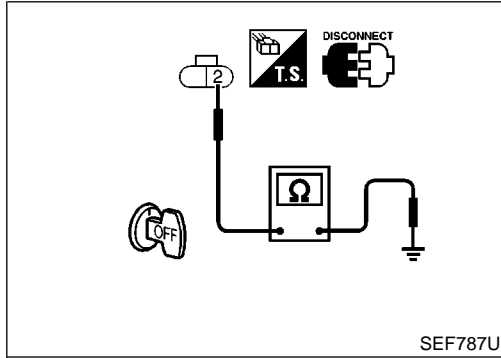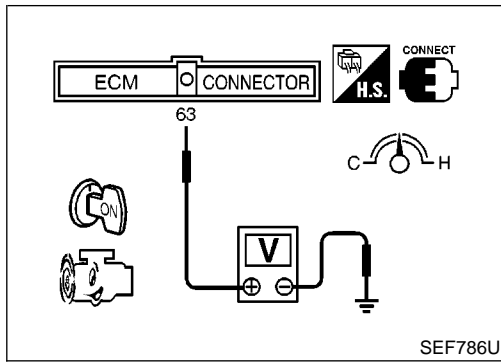

Overall Function Check

NEEC0206

Use this procedure to check the overall EGR function. During this check, a 1st trip DTC might not be confirmed.

⊗ Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Check the EGR valve lifting when revving engine from idle up to 3,000 rpm quickly under no load.

EGR valve should lift up and down without sticking.

If NG, go to "Diagnostic Procedure", EC-934.

- 3) Check voltage between ECM terminal 63 (EGR temperature sensor signal) and ground at idle speed.

Less than 4.5V should exist.



If NG, go to next step.

- 4) Turn ignition switch "OFF".
- 5) Disconnect EGR temperature sensor harness connector.
- 6) Check harness continuity between EGR temperature sensor harness connector terminal 2 and ground.

Continuity should exist.

- 7) Perform "CHECK EGR TEMPERATURE SENSOR" in "Diagnostic Procedure".

Overall function check

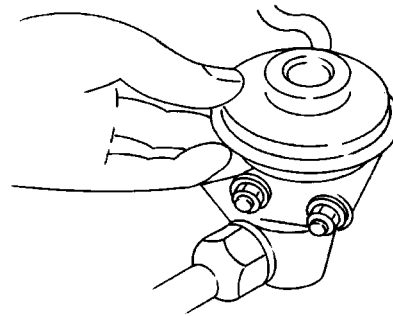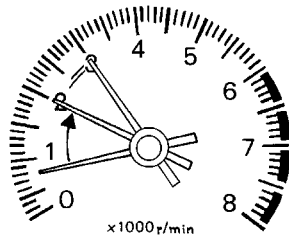

Check the EGR valve lifting when revving engine from idle up to 3,000 rpm quickly.

SEF863U

DTC P0400 EGR FUNCTION (CLOSE)



VG33E

Wiring Diagram

Wiring Diagram

NEEC0207

EC-EGRC1-01

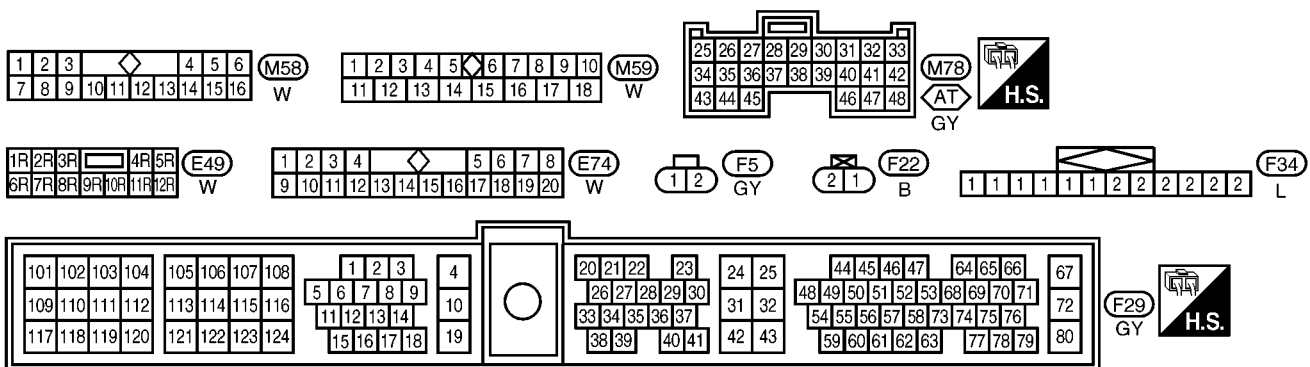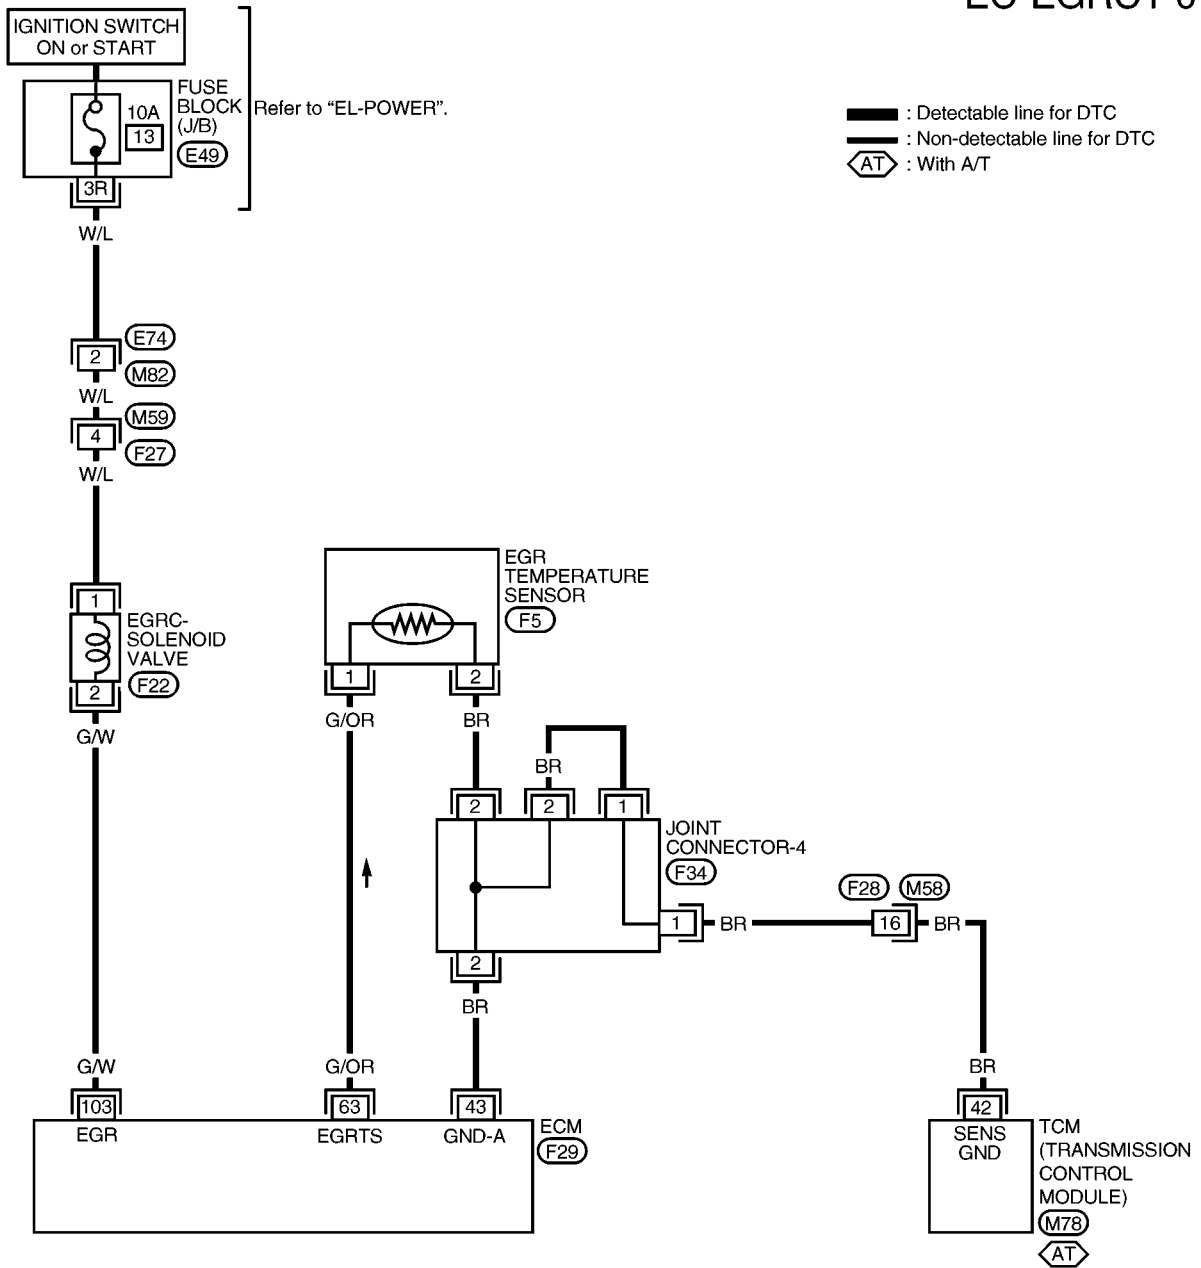


AEC958A

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Diagnostic Procedure

NEEC0208

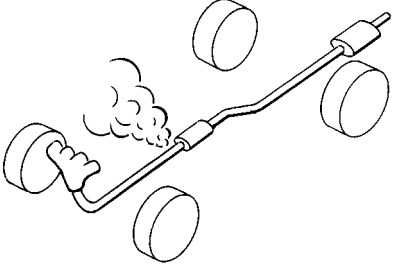1	CHECK EXHAUST SYSTEM	
<p>1. Start engine. 2. Check exhaust pipes and muffler for leaks.</p> <div style="text-align: center;">  </div> <p style="text-align: right;"><small>SEF099P</small></p> <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 2.
OK (Without CONSULT-II)	▶	GO TO 3.
NG	▶	Repair or replace exhaust system.

DTC P0400 EGR FUNCTION (CLOSE)


VG33E

Diagnostic Procedure (Cont'd)

2 CHECK VACUUM SOURCE TO EGR VALVE

Ⓟ With CONSULT-II

1. Warm engine up to normal operating temperature.
2. Disconnect vacuum hose to EGR valve.
3. Check for vacuum existence at idle.

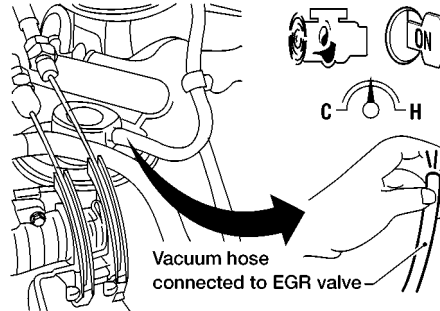

AEC648A

Vacuum should not exist at idle.

4. Select "EGRC SOLENOID VALVE" in "ACTIVE TEST" mode with CONSULT-II and turn the solenoid valve "ON".
5. Check for vacuum existence when revving engine from idle up to 3,000 rpm.

ACTIVE TEST	
EGRC SOL/V	ON
(EGR)	FLOW
MONITOR	
CMPS-RPM(REF)	XXX rpm

PEF788U

Vacuum should exist when revving engine.

OK or NG


OK	▶	GO TO 4.
NG	▶	GO TO 5.


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0400 EGR FUNCTION (CLOSE)

VG33E

Diagnostic Procedure (Cont'd)

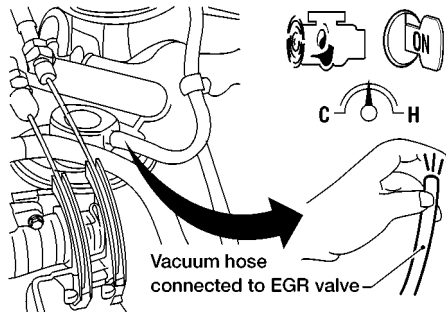3	CHECK VACUUM SOURCE TO EGR VALVE	<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Warm engine up to normal operating temperature. 2. Disconnect vacuum hose to EGR valve. 3. Check for vacuum existence at idle. <div style="text-align: center; margin: 10px 0;">  <p style="margin-left: 100px;">Vacuum hose connected to EGR valve</p> </div> <p style="text-align: right; margin-right: 20px;">AEC648A</p> <p>Vacuum should not exist at idle.</p> <ol style="list-style-type: none"> 4. Check for vacuum existence when revving engine from idle up to 3,000 rpm quickly. Vacuum should exist when revving engine. <p style="text-align: center; margin: 10px 0;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 4.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 5.</td> </tr> </table>		OK	▶	GO TO 4.	NG	▶	GO TO 5.
OK	▶	GO TO 4.							
NG	▶	GO TO 5.							

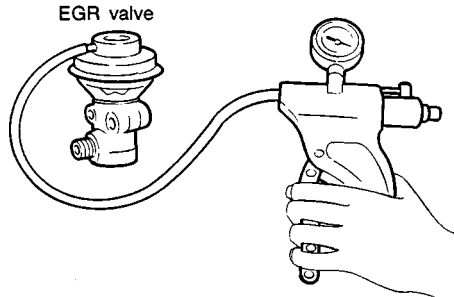4	CHECK EGR VALVE	<p>Apply vacuum to EGR vacuum port with a hand vacuum pump.</p> <div style="text-align: center; margin: 10px 0;">  </div> <p style="text-align: right; margin-right: 20px;">MEF137D</p> <p>EGR valve spring should lift.</p> <ul style="list-style-type: none"> ● Check for sticking. <p style="text-align: center; margin: 10px 0;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 11.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace EGR valve.</td> </tr> </table>		OK	▶	GO TO 11.	NG	▶	Replace EGR valve.
OK	▶	GO TO 11.							
NG	▶	Replace EGR valve.							

DTC P0400 EGR FUNCTION (CLOSE)

VG33E

Diagnostic Procedure (Cont'd)

5 CHECK VACUUM HOSE

- Turn ignition switch "OFF".
- Check vacuum hose for clogging, cracks or improper connection.

The diagrams illustrate three common vacuum hose problems: a hose with a longitudinal crack labeled 'Split', a hose partially blocked by debris labeled 'Clogging', and a hose that is not fully inserted into its fitting labeled 'Improper connection'.

SEF109L

OK or NG

OK (With CONSULT-II)	▶	GO TO 6.
OK (Without CONSULT-II)	▶	GO TO 7.
NG	▶	Repair or replace vacuum hose.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

6 CHECK EGRC-SOLENOID VALVE OPERATION

Ⓟ With CONSULT-II

- Turn ignition switch "ON".
- Turn EGRC-solenoid valve "ON" and "OFF" in "ACTIVE TEST" mode with CONSULT-II and check operating sound.

ACTIVE TEST	
EGRC SOL/V	ON
(EGR)	FLOW
MONITOR	
CMPS-RPM(REF)	XXX rpm

PEF789U

Clicking noise should be heard.


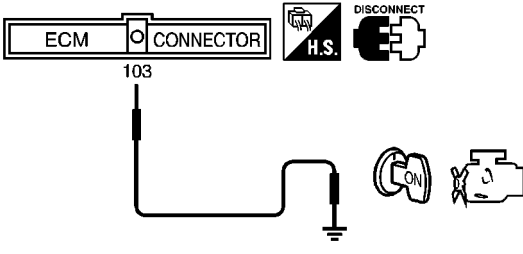
OK or NG

OK	▶	GO TO 8.
NG	▶	Repair or replace EGRC-solenoid valve or repair circuit.

DTC P0400 EGR FUNCTION (CLOSE)

VG33E

Diagnostic Procedure (Cont'd)

7	CHECK EGRC-SOLENOID VALVE OPERATION
<p> Without CONSULT-II</p> <ol style="list-style-type: none">1. Disconnect ECM harness connector.2. Turn ignition switch "ON".3. Connect a suitable jumper wire between ECM terminal 103 and engine ground. <div data-bbox="552 378 1071 630" style="text-align: center;"></div> <p>4. Check operating sound of EGRC-solenoid valve when disconnecting and connecting the jumper wire. Clicking noise should be heard.</p> <p style="text-align: right;">SEF354V</p>	
OK or NG	
OK	▶ GO TO 8.
NG	▶ Repair or replace EGRC-solenoid valve or repair circuit.

DTC P0400 EGR FUNCTION (CLOSE)


VG33E

Diagnostic Procedure (Cont'd)

8 CHECK EGRC-SOLENOID VALVE

With CONSULT-II

1. Perform "EGRC SOLENOID VALVE" in "ACTIVE TEST" mode.
2. Check air passage continuity and operation delay time.

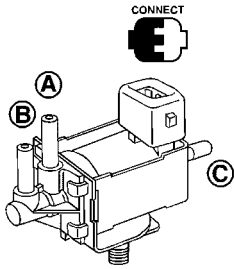


ACTIVE TEST	
EGRC SOL/V (EGR)	ON FLOW
MONITOR	
CMPS-RPM (REF)	XXXrpm

Conditions	Air passage continuity between A and B	Air passage continuity between A and C
ON	Yes	No
OFF	No	Yes

SEF155X

Without CONSULT-II

1. Check air passage continuity and operation delay time under the following conditions.

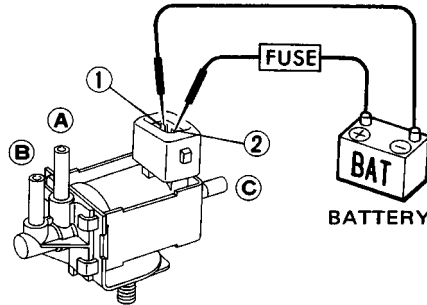

AEC919

Condition	Air passage continuity between A and B	Air passage continuity between A and C
12V direct current supply between terminals 1 and 2	Yes	No
No supply	No	Yes

MTBL0237

OK or NG

OK ► GO TO 9.

NG ► Replace EGRC-solenoid valve.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P0400 EGR FUNCTION (CLOSE)

VG33E

Diagnostic Procedure (Cont'd)

9 CHECK EGRC-BPT VALVE

1. Plug one of two ports of EGRC-BPT valve.
2. Vacuum from the other port and check for leakage while applying a pressure above 0.981 kPa (100 mmH₂O, 3.94 inH₂O) from under EGRC-BPT valve.

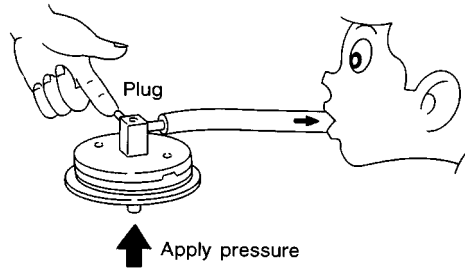

Leakage should not exist.

SEF083P

OK or NG

OK ► GO TO 10.

NG ► Replace EGRC-BPT valve.


DTC P0400 EGR FUNCTION (CLOSE)

VG33E

Diagnostic Procedure (Cont'd)

10 CHECK EGR TEMPERATURE SENSOR

Check resistance change and resistance value.

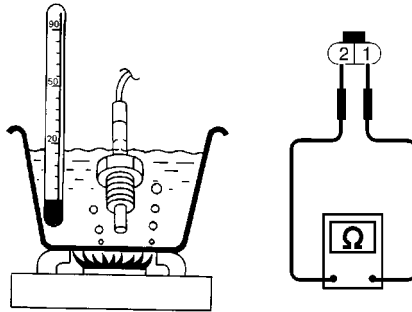


<Reference data>

SEF643Q

EGR temperature °C (°F)	Voltage (V)	Resistance (MΩ)
0 (32)	4.56	0.62 - 1.05
50 (122)	2.25	0.065 - 0.094
100 (212)	0.59	0.011 - 0.015

AEC039B

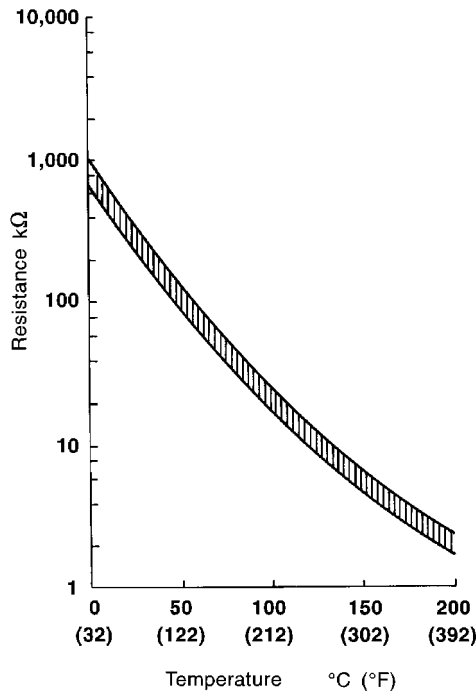

SEF320U

OK or NG

OK	▶	GO TO 11.
NG	▶	Replace EGR temperature sensor.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0400 EGR FUNCTION (CLOSE)


VG33E

Diagnostic Procedure (Cont'd)

11	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
	▶ INSPECTION END

Description (If Equipped with EGR Valve)

NEEC0209

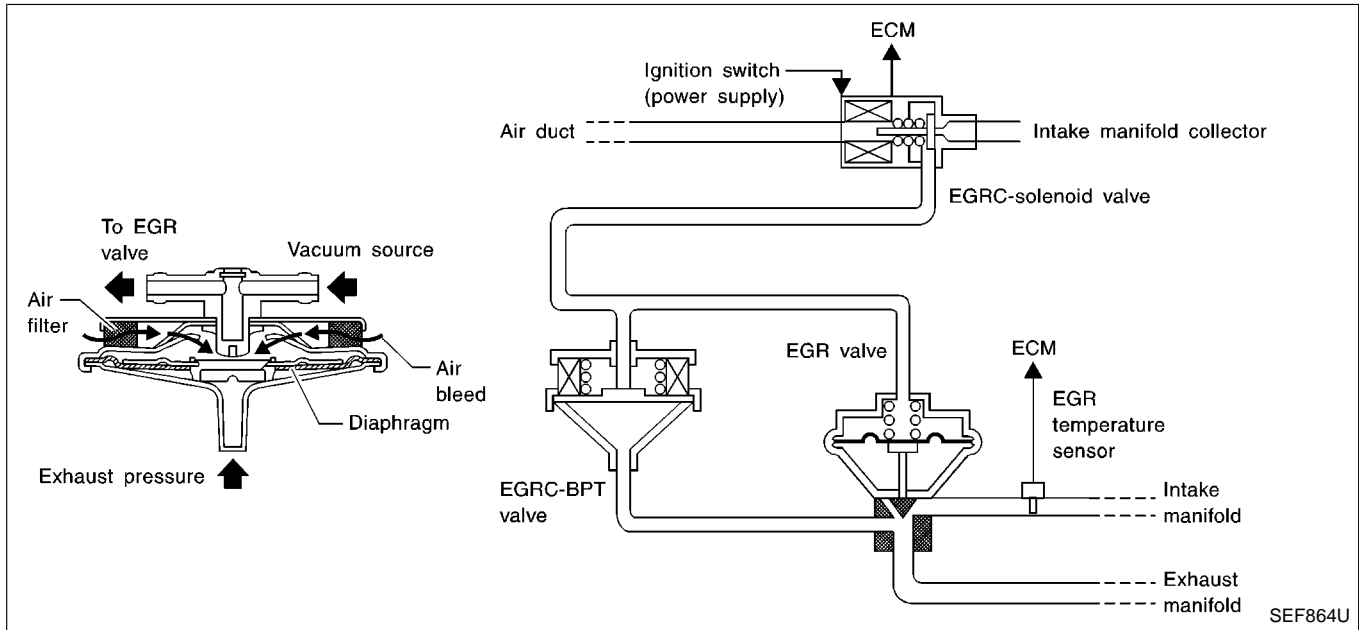

SYSTEM DESCRIPTION

The EGRC-BPT valve monitors exhaust pressure to activate the diaphragm, controlling intake manifold vacuum applied to the EGR valve. In other words, recirculated exhaust gas is controlled in response to positioning of the EGR valve or to engine operation.

NEEC0209S01

On Board Diagnosis Logic

If too much EGR flow exists due to an EGRC-BPT valve malfunction, off idle engine roughness will increase. If the roughness is large, then the vacuum to the EGR valve is interrupted through the EGRC-solenoid valve. If the engine roughness is reduced at that time, the EGRC-BPT valve malfunction is indicated. Malfunction is detected when the EGRC-BPT valve does not operate properly.


NEEC0210

POSSIBLE CAUSE

- EGRC-BPT valve
- EGR valve
- Loose or disconnected rubber tube
- Blocked rubber tube
- Camshaft position sensor
- Blocked exhaust system
- Orifice
- Mass air flow sensor
- EGRC-solenoid valve

NEEC0210S01

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

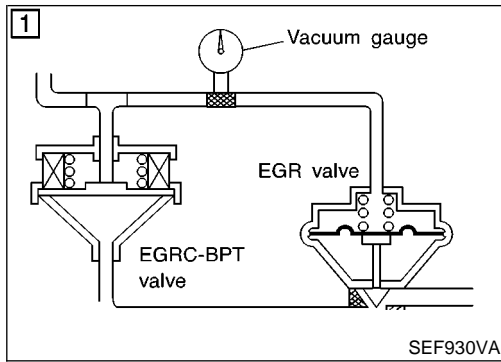

DTC Confirmation Procedure

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.

TESTING CONDITION

For best results, perform the test at a temperature of 5°C (41°F) or higher.





With CONSULT-II

- 1) Install vacuum gauge between EGRC-BPT valve and EGR valve as shown in the illustration.
- 2) Start engine and warm it up to normal operating temperature.
- 3) Stop engine and wait at least 5 seconds.
- 4) Turn ignition switch “ON” and select “EGRC-BPT/V P0402” of “EGR SYSTEM” in “DTC WORK SUPPORT” mode with CONSULT-II.
- 5) Start engine and let it idle.
- 6) Touch “START”.
- 7) Check the output voltage of “THRTL POS SEN” (at closed throttle position) and note it.
- 8) When the following conditions are met, “TESTING” will be displayed on the CONSULT-II screen and the bar chart may increase. Maintain the conditions many times until “COMPLETED” appears.

CMPS-RPM (POS)	1,400 - 2,000 rpm (A/T models) 1,400 - 1,800 rpm (M/T models)
Vehicle speed	30 - 60 km/h (19 - 37 MPH) (A/T models) 30 - 100 km/h (19 - 62 MPH) (M/T models)
B/FUEL SCHDL	2.3 - 2.8 msec
THRTL POS SEN	$X - (X + 0.44) V$ X = Voltage value measured at step 7
Selector lever	Suitable position

- The bar chart on CONSULT-II screen indicates the status of this test. However, the test may be finished before the bar chart becomes full scale.
- If the bar chart indication does not continue to progress, completely release accelerator pedal once and try to meet the conditions again.
- If “TESTING” does not appear on CONSULT-II screen, retry from step 3.

- 9) If CONSULT-II instructs to carry out “OVERALL FUNCTION CHECK”, go to next step. If “NG” is displayed, refer to “Diagnostic Procedure”, EC-945.
- 10) Open engine hood.
- 11) Raise engine speed to 2,000 to 2,800 rpm under no-load and hold it. Then touch “NEXT” on CONSULT-II screen.

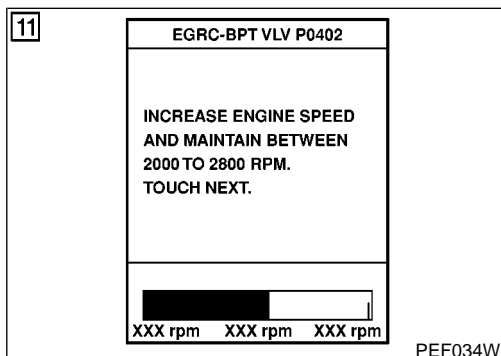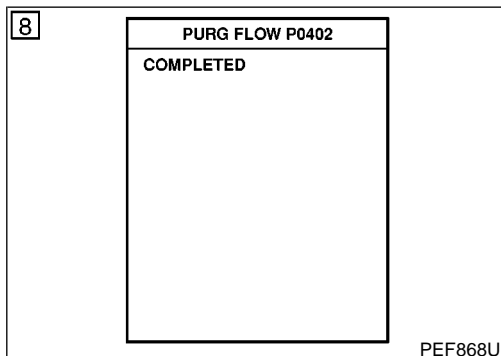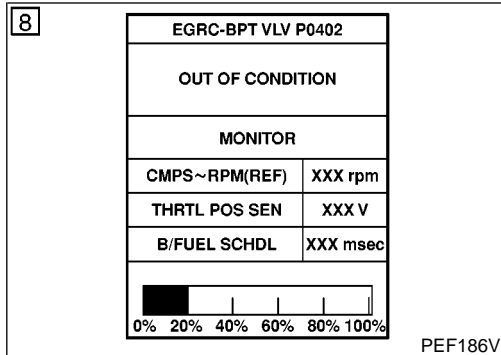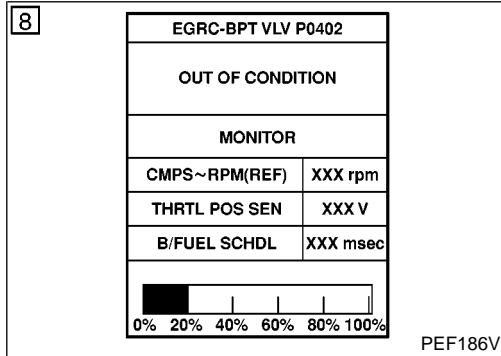

DTC P0402 EGRC-BPT VALVE FUNCTION

VG33E

DTC Confirmation Procedure (Cont'd)


12 EGRC-BPT VLV P0402

MAINTAIN ENGINE SPEED
2000 TO 2800 RPM.
VACUUM SHOULD BE
BETWEEN -5.91 in. Hg AND
0 in. Hg WITH VACUUM
GAUGE. IS VACUUM OK?

NG
OK

XXX psi XXX psi XXX psi

PEF035W

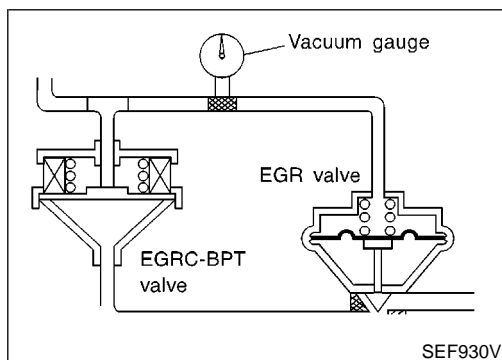

- 12) Check vacuum gauge while keeping engine speed 2,000 to 2,800 rpm.
Vacuum should be 0 to -20 kPa (0 to -150 mmHg, 0 to -5.91 inHg).
 If NG, go to "Diagnostic Procedure", EC-945.
 If OK, touch "YES" on the CONSULT-II screen.
- 13) Check the rubber tube between intake manifold collector, EGRC-solenoid valve, EGR valve and EGRC-BPT valve for cracks, blockages or twist.
 If NG, repair or replace.
 If OK, touch "YES" on the CONSULT-II screen.

Overall Function Check

Use this procedure to check the overall function of the EGRC-BPT valve. During this check, a 1st trip DTC might not be confirmed.

⊗ Without CONSULT-II

- 1) Install vacuum gauge between EGRC-BPT valve and EGR valve as shown in the illustration.
- 2) Lift up vehicle.
- 3) Start engine and shift to "1st" gear or "1" position.
- 4) Check vacuum gauge while keeping engine speed 2,000 to 2,800 rpm.
Vacuum should be 0 to -20 kPa (0 to -150 mmHg, 0 to -5.91 inHg).
 If NG, go to "Diagnostic Procedure", EC-945.
 If OK, go to next step.
- 5) Check rubber tube between intake manifold collector, EGRC-solenoid valve, EGR valve and EGRC-BPT valve for misconnections, cracks or blockages.
 If NG, repair or replace.

Diagnostic Procedure

NEEC0213

1	CHECK HOSE	
1. Turn ignition switch "OFF". 2. Check vacuum hose for clogging and improper connection.		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Repair or replace vacuum hose.


2	CHECK EXHAUST SYSTEM	
Check exhaust system for collapse.		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Repair or replace exhaust system.

DTC P0402 EGRC-BPT VALVE FUNCTION

VG33E


Diagnostic Procedure (Cont'd)

3	CHECK ORIFICE
Check if orifice is installed in vacuum hose between EGRC-BPT valve and EGRC-solenoid valve.	
OK or NG	
OK	▶ GO TO 4.
NG	▶ Replace vacuum hose.

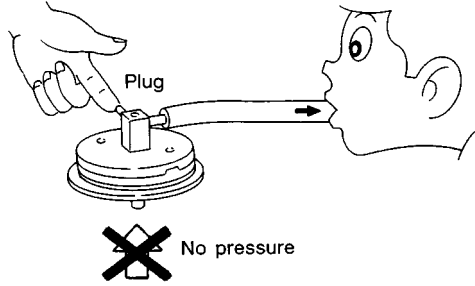4	CHECK EGRC-BPT VALVE
1. Plug one of two ports of EGRC-BPT valve. 2. Vacuum from the other port and check leakage without applying any pressure from under EGR-BPT valve.	
	
SEF172P	
OK or NG	
OK	▶ GO TO 5.
NG	▶ Replace EGRC-BPT valve.

5 CHECK CAMSHAFT POSITION SENSOR

1. Install any parts removed.
2. Start engine.
3. Check voltage between ECM terminals 44, 48 and ground, ECM terminal 49 and ground with DC range.

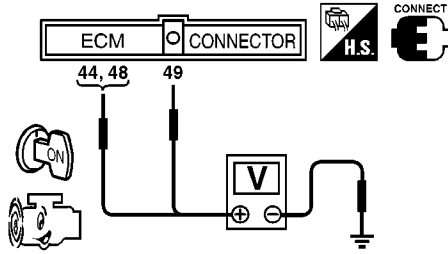

Terminal 44 or 48 and engine ground

Condition	Idle	2,000 rpm
Voltage	0.3 - 0.5V	0.3 - 0.5V
Pulse signal		

Terminal 49 and engine ground

Condition	Idle	2,000 rpm
Voltage	Approximately 2.5V	Approximately 2.5V
Pulse signal		

AEC072B


OK or NG

OK	▶	GO TO 6.
NG	▶	Replace distributor assembly with camshaft position sensor.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

6 CHECK MASS AIR FLOW SENSOR

1. Reconnect harness connectors disconnected.
2. Start engine and warm it up to normal operating temperature.
3. Check voltage between ECM terminal 54 (Mass air flow sensor signal) and ground.

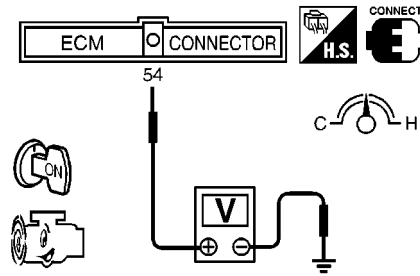


SEF747U

Condition	Voltage (V)
Ignition switch "ON" (Engine stopped.)	Less than 1.0
Idle (Engine is warmed-up to normal operating temperature.)	1.0 - 1.7
2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.7 - 2.3
Idle to about 4,000 rpm	1.0 - 1.7 to Approx. 4.0

AEC040B

4. If the voltage is out of specification, disconnect mass air flow sensor harness connector and connect it again. Then repeat above check.
5. If NG, remove mass air flow sensor from air duct. Check hot wire for damage or dust.

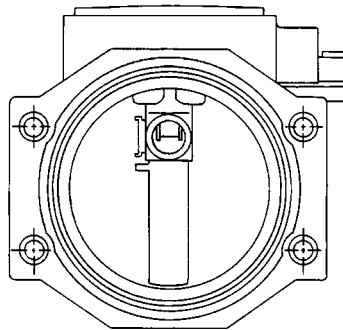

SEF030T

OK or NG

OK	▶	GO TO 7.
NG	▶	Replace mass air flow sensor.

DTC P0402 EGRC-BPT VALVE FUNCTION

VG33E


Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

7 CHECK EGRC-SOLENOID VALVE

With CONSULT-II

1. Perform "EGRC SOLENOID VALVE" in "ACTIVE TEST" mode.
2. Check air passage continuity and operation delay time.

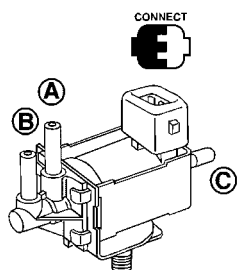


ACTIVE TEST	
EGRC SOL/V (EGR)	ON FLOW
MONITOR	
CMPS-RPM (REF)	XXrpm

Conditions	Air passage continuity between A and B	Air passage continuity between A and C
ON	Yes	No
OFF	No	Yes

SEF155X

Without CONSULT-II

Check air passage continuity and operation delay time under the following conditions.

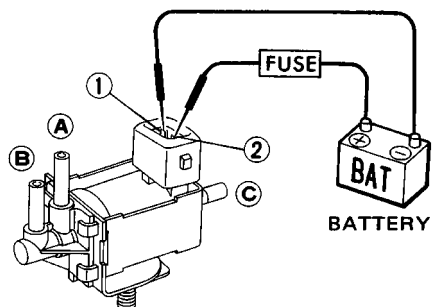


AEC919

Condition	Air passage continuity between A and B	Air passage continuity between A and C
12V direct current supply between terminals 1 and 2	Yes	No
No supply	No	Yes

MTBL0237

OK or NG

OK	▶	GO TO 8.
NG	▶	Replace EGRC-solenoid valve.

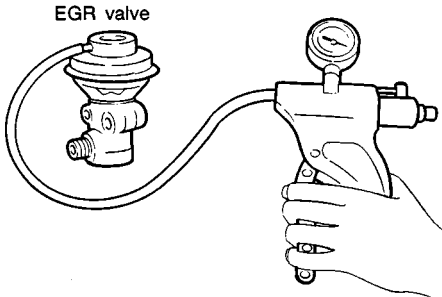
8	CHECK EGR VALVE		
Apply vacuum to EGR vacuum port with a hand vacuum pump.			
			
<p>EGR valve spring should lift.</p> <ul style="list-style-type: none"> ● Check for sticking. 			
MEF137D			
OK or NG			
OK	▶	GO TO 9.	
NG	▶	Replace EGR valve.	

9	CHECK INTERMITTENT INCIDENT		
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.			
	▶	INSPECTION END	

DTC P0420 (RIGHT BANK, -B1), P0430 (LEFT BANK, -B2) THREE WAY CATALYST FUNCTION

VG33E

On Board Diagnosis Logic

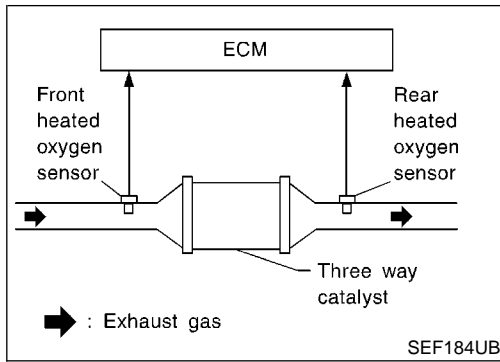

On Board Diagnosis Logic

NEEC0214

The ECM monitors the switching frequency ratio of front and rear heated oxygen sensors.

A warm-up three way catalyst with high oxygen storage capacity will indicate a low switching frequency of rear heated oxygen sensor. As oxygen storage capacity decreases, the rear heated oxygen sensor switching frequency will increase.

When the frequency ratio of front and rear heated oxygen sensors approaches a specified limit value, the warm-up three way catalyst malfunction is diagnosed.

Malfunction is detected when warm-up three way catalyst does not operate properly, warm-up three way catalyst does not have enough oxygen storage capacity.

POSSIBLE CAUSE

NEEC0214S01

- Warm-up three way catalyst
- Exhaust tube
- Intake air leaks
- Injectors
- Injector leaks
- Spark plug
- Improper ignition timing

DTC Confirmation Procedure

NEEC0215

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

4

SRT WORK SUPPORT	
CATALYST	INCMP
EVAP SYSTEM	CMPLT
O2 SEN HEATER	CMPLT
O2 SENSOR	CMPLT
MONITOR	
ENG SPEED	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

AEC061B

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0420 (RIGHT BANK, -B1), P0430 (LEFT BANK, -B2) THREE WAY CATALYST FUNCTION

VG33E

DTC Confirmation Procedure (Cont'd)

8	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="2" style="text-align: center;">SRT WORK SUPPORT</th> </tr> <tr> <td>CATALYST</td> <td>INCMP</td> </tr> <tr> <td>EVAP SYSTEM</td> <td>INCMP</td> </tr> <tr> <td>O2 SEN HEATER</td> <td>INCMP</td> </tr> <tr> <td>O2 SENSOR</td> <td>INCMP</td> </tr> <tr> <th colspan="2" style="text-align: center;">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> </table>	SRT WORK SUPPORT		CATALYST	INCMP	EVAP SYSTEM	INCMP	O2 SEN HEATER	INCMP	O2 SENSOR	INCMP	MONITOR		ENG SPEED	XXX rpm	THRTL POS SEN	XXX V	B/FUEL SCHDL	XXX msec
SRT WORK SUPPORT																			
CATALYST	INCMP																		
EVAP SYSTEM	INCMP																		
O2 SEN HEATER	INCMP																		
O2 SENSOR	INCMP																		
MONITOR																			
ENG SPEED	XXX rpm																		
THRTL POS SEN	XXX V																		
B/FUEL SCHDL	XXX msec																		

SEF558X

<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="2" style="text-align: center;">SRT WORK SUPPORT</th> </tr> <tr> <td>CATALYST</td> <td>CMPLT</td> </tr> <tr> <td>EVAP SYSTEM</td> <td>CMPLT</td> </tr> <tr> <td>O2 SEN HEATER</td> <td>CMPLT</td> </tr> <tr> <td>O2 SENSOR</td> <td>CMPLT</td> </tr> <tr> <th colspan="2" style="text-align: center;">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> </table>	SRT WORK SUPPORT		CATALYST	CMPLT	EVAP SYSTEM	CMPLT	O2 SEN HEATER	CMPLT	O2 SENSOR	CMPLT	MONITOR		ENG SPEED	XXX rpm	THRTL POS SEN	XXX V	B/FUEL SCHDL	XXX msec
SRT WORK SUPPORT																		
CATALYST	CMPLT																	
EVAP SYSTEM	CMPLT																	
O2 SEN HEATER	CMPLT																	
O2 SENSOR	CMPLT																	
MONITOR																		
ENG SPEED	XXX rpm																	
THRTL POS SEN	XXX V																	
B/FUEL SCHDL	XXX msec																	

AEC062B

SELF DIAG RESULTS	
DTC RESULTS	TIME
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	

SEF560X



With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DTC & SRT CONFIRMATION" the SRT WORK SUPPORT" mode with CONSULT-II.
- 3) Start engine.
- 4) Rev engine up to 2,500 to 3,000 rpm and hold it for 3 consecutive minutes then release the accelerator pedal completely.
- 5) Wait 5 seconds at idle.
- 6) Rev engine up to 2,500 to 3,000 rpm and hold it until "INCMP" of "CATALYST" changes to "CMPLT" (It will take maximum of approximately 5 minute.).
- 7) Select "SELF-DIAG RESULTS" mode with CONSULT-II. If the 1st trip DTC is detected, go to "DIAGNOSTIC PROCEDURE", EC-953. If not "CMPLT", stop engine and cool down "COOLANT TEMP/SE" to less than 70°C (158°F) and retest from step 1).

DTC P0420 (RIGHT BANK, -B1), P0430 (LEFT BANK, -B2) THREE WAY CATALYST FUNCTION

VG33E

Overall Function Check

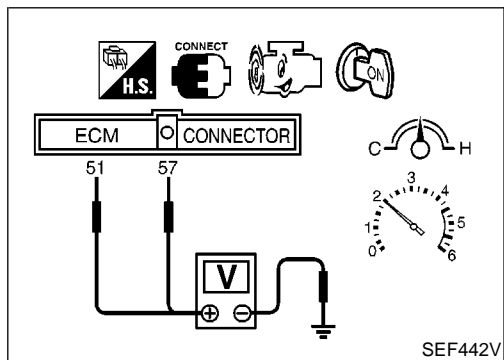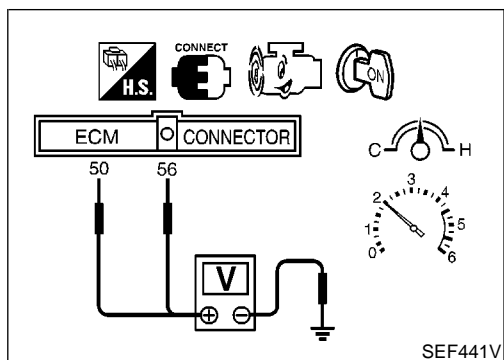

Overall Function Check

NEEC0216

Use this procedure to check the overall function of the warm-up three way catalyst. During this check, a 1st trip DTC might not be confirmed.

CAUTION:

Always drive vehicle at a safe speed.

Without CONSULT-II

- 1) Start engine and drive vehicle at a speed of more than 70 km/h (43 MPH) for 2 consecutive minutes.
- 2) Stop vehicle with engine running.
- 3) Set voltmeters probes between ECM terminals 50 (front heated oxygen sensor right bank signal), 51 (front heated oxygen sensor left bank signal) and engine ground, and ECM terminals 56 (rear heated oxygen sensor right bank signal), 57 (rear heated oxygen sensor left bank signal) and engine ground.
- 4) Keep engine speed at 2,000 rpm constant under no load.
- 5) Make sure that the voltage switching frequency (high & low) between ECM terminals 56 and engine ground, or 57 and engine ground is very less than that of ECM terminals 50 and engine ground, or 51 and engine ground.

Switching frequency ratio = A/B

A: Rear heated oxygen sensor voltage switching frequency

B: Front heated oxygen sensor voltage switching frequency

This ratio should be less than 0.75.

If the ratio is greater than above, it means warm-up three way catalyst does not operate properly. Go to "Diagnostic Procedure", EC-953.

NOTE:

If the voltage at terminal 50 or 51 does not switch periodically more than 5 times within 10 seconds at step 5, perform trouble diagnosis for "DTC P0133, P0153" first. (See EC-798.)

Diagnostic Procedure

NEEC0217


1	CHECK EXHAUST SYSTEM	
	Visually check exhaust tubes and muffler for dent.	
	OK or NG	
OK	▶	GO TO 2.
NG	▶	Repair or replace it.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0420 (RIGHT BANK, -B1), P0430 (LEFT BANK, -B2) THREE WAY CATALYST FUNCTION

VG33E

Diagnostic Procedure (Cont'd)

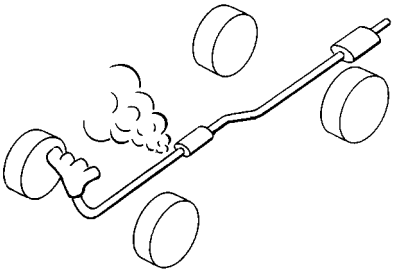2	CHECK EXHAUST AIR LEAK	
<p>1. Start engine and run it at idle. 2. Listen for an exhaust air leak before the warm-up three way catalyst.</p>		
		
SEF099P		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Repair or replace.


3	CHECK INTAKE AIR LEAK	
Listen for an intake air leak after the mass air flow sensor.		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair or replace.

4	CHECK IGNITION TIMING											
Check the following items. Refer to "Basic Inspection", EC-680.												
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Items</th> <th style="width: 50%;">Specifications</th> </tr> </thead> <tbody> <tr> <td>Ignition timing</td> <td>15° ± 2° BTDC</td> </tr> <tr> <td>Base idle speed</td> <td>700 ± 50 rpm (in "P" or "N" position)</td> </tr> <tr> <td>Closed throttle position switch idle position adjustment</td> <td>Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF</td> </tr> <tr> <td>Target idle speed</td> <td>750 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table>			Items	Specifications	Ignition timing	15° ± 2° BTDC	Base idle speed	700 ± 50 rpm (in "P" or "N" position)	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF	Target idle speed	750 ± 50 rpm (in "P" or "N" position)
Items	Specifications											
Ignition timing	15° ± 2° BTDC											
Base idle speed	700 ± 50 rpm (in "P" or "N" position)											
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF											
Target idle speed	750 ± 50 rpm (in "P" or "N" position)											
MTBL0226												
OK or NG												
OK	▶	GO TO 5.										
NG	▶	Adjust ignition timing.										

DTC P0420 (RIGHT BANK, -B1), P0430 (LEFT BANK, -B2) THREE WAY CATALYST FUNCTION


VG33E

Diagnostic Procedure (Cont'd)

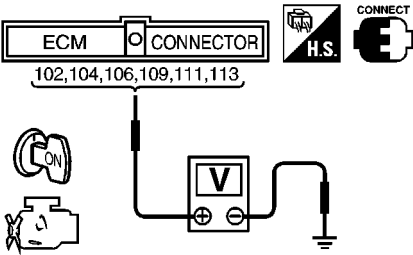5	CHECK INJECTORS	<ol style="list-style-type: none"> 1. Refer to WIRING DIAGRAM for Injectors, EC-1162. 2. Stop engine and then turn ignition switch "ON". 3. Check voltage between ECM terminals 102, 104, 106, 109, 111 and 113 and ground with CONSULT-II or tester.
		
		<p>Battery voltage should exist.</p> <p>OK or NG</p>
		SEF711U
OK	▶	GO TO 6.
NG	▶	Perform "Diagnostic Procedure", "INJECTOR", EC-1163.

GI
MA
EM
LC
EC

FE
CL

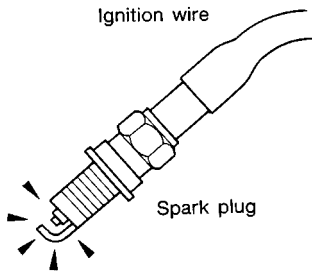6	CHECK IGNITION SPARK	<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect ignition wire from spark plug. 3. Connect a known good spark plug to the ignition wire. 4. Place end of spark plug against a suitable ground and crank engine. 5. Check for spark.
		
		<p>OK or NG</p>
		SEF282G
OK	▶	GO TO 8.
NG	▶	GO TO 7.


MT
AT
TF
PD
AX
SU
BR
ST

RS
BT
HA
SC
EL
IDX

DTC P0420 (RIGHT BANK, -B1), P0430 (LEFT BANK, -B2) THREE WAY CATALYST FUNCTION

VG33E

Diagnostic Procedure (Cont'd)

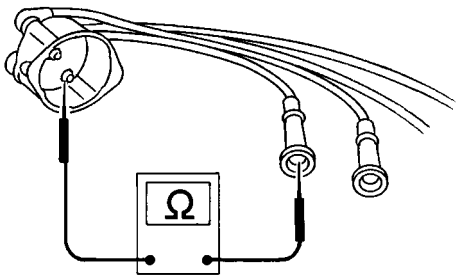7	CHECK IGNITION WIRES														
<p>1. Inspect wires for cracks, damage, burned terminals and for improper fit. 2. Measure the resistance of wires to their distributor cap terminal. Move each wire while testing to check for intermittent breaks.</p>															
															
<p>Resistance:</p>															
SEF174P															
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Cylinder No.</th> <th style="text-align: center;">Resistance kΩ [at 25°C (77°F)]</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">1</td> <td style="text-align: center;">Approximately 6.5</td> </tr> <tr> <td style="text-align: center;">2</td> <td style="text-align: center;">Approximately 10.0</td> </tr> <tr> <td style="text-align: center;">3</td> <td style="text-align: center;">Approximately 8.5</td> </tr> <tr> <td style="text-align: center;">4</td> <td style="text-align: center;">Approximately 12.5</td> </tr> <tr> <td style="text-align: center;">5</td> <td style="text-align: center;">Approximately 8.5</td> </tr> <tr> <td style="text-align: center;">6</td> <td style="text-align: center;">Approximately 11.0</td> </tr> </tbody> </table>		Cylinder No.	Resistance kΩ [at 25°C (77°F)]	1	Approximately 6.5	2	Approximately 10.0	3	Approximately 8.5	4	Approximately 12.5	5	Approximately 8.5	6	Approximately 11.0
Cylinder No.	Resistance kΩ [at 25°C (77°F)]														
1	Approximately 6.5														
2	Approximately 10.0														
3	Approximately 8.5														
4	Approximately 12.5														
5	Approximately 8.5														
6	Approximately 11.0														
MTBL0235															
<p>If the resistance exceeds the above specification, inspect ignition wire to distributor cap connection. Clean connection or replace the ignition wire with a new one.</p>															
OK or NG															
OK	▶ Check ignition coil, power transistor and their circuits. Refer to EC-1045.														
NG	▶ Replace.														

8	CHECK INJECTOR
<p>1. Turn ignition switch "OFF". 2. Remove injector assembly. Refer to EC-621. Keep fuel hose and all injectors connected to injector gallery. 3. Disconnect all ignition coil harness connectors. 4. Turn ignition switch "ON". Make sure fuel does not drip from injector.</p>	
OK or NG	
OK (Does not drip)	▶ GO TO 9.
NG (Drips)	▶ Replace the injector(s) from which fuel is dripping.

9	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
Trouble is fixed	▶ INSPECTION END
Trouble is not fixed	▶ Replace warm-up three way catalyst.

On Board Diagnosis Logic


NEEC0218
NOTE:

If DTC P0440 or P1440 is displayed with P1448, perform trouble diagnosis for DTC P1448 first. (See EC-1115.)

This diagnosis detects leaks in the EVAP purge line using engine intake manifold vacuum.

If pressure does not increase, the ECM will check for leaks in the line between the fuel tank and EVAP canister purge volume control solenoid valve, under the following "Vacuum test" conditions.

The vacuum cut valve bypass valve is opened to clear the line between the fuel tank and the EVAP canister purge volume control solenoid valve. The EVAP canister vent control valve will then be closed to shut the EVAP purge line off. The EVAP canister purge volume control solenoid valve is opened to depressurize the EVAP purge line using intake manifold vacuum. After this occurs, the EVAP canister purge volume control solenoid valve will be closed.

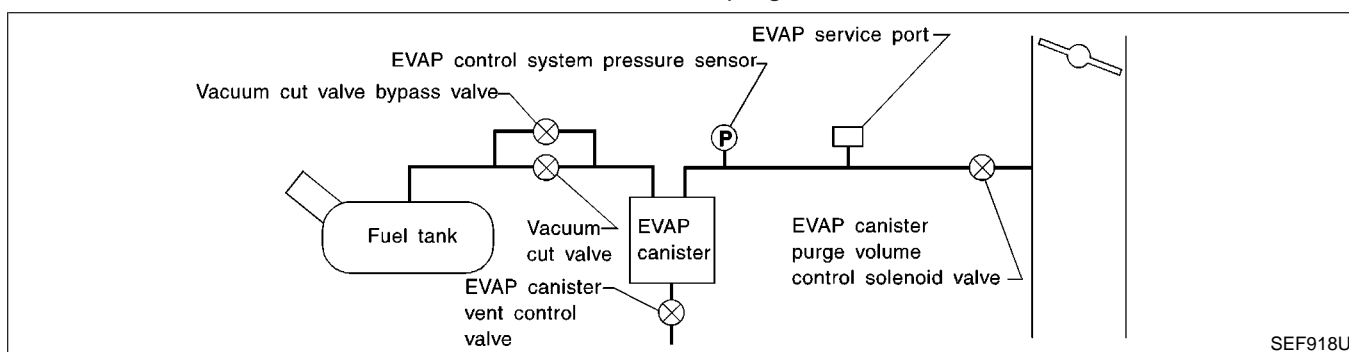

Malfunction is detected when EVAP control system has a leak, EVAP control system does not operate properly.

CAUTION:

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine NISSAN rubber tube as a replacement.

POSSIBLE CAUSE
NEEC0218S01

- Incorrect fuel tank vacuum relief valve
- Incorrect fuel filler cap used
- Fuel filler cap remains open or fails to close.
- Foreign matter caught in fuel filler cap.
- Leak is in line between intake manifold and EVAP canister purge volume control solenoid valve.
- Foreign matter caught in EVAP canister vent control valve.
- EVAP canister or fuel tank leaks
- EVAP purge line (pipe and rubber tube) leaks
- EVAP purge line rubber tube bent.
- Blocked or bent rubber tube to EVAP control system pressure sensor
- Loose or disconnected rubber tube
- EVAP canister vent control valve and the circuit
- EVAP canister purge volume control solenoid valve and the circuit
- Absolute pressure sensor
- Fuel tank temperature sensor

DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

VG33E

On Board Diagnosis Logic (Cont'd)

- MAP/BARO switch solenoid valve and the circuit
- Blocked or bent rubber tube to MAP/BARO switch solenoid valve and the circuit
- O-ring of EVAP canister vent control valve is missing or damaged.
- Water separator
- EVAP canister is saturated with water.
- EVAP control system pressure sensor

EVAP SML LEAK P0440/P1440
1)FOR BEST RSLT,PERFORM AT FOLLOWING CONDITIONS. -FUEL LEVEL: 1/4-3/4 -AMBIENT TEMP: 0-30 C(32-86F) -OPEN ENGINE HOOD. 2)START ENG WITH VHCL STOPPED. IF ENG IS ON,STOP FOR 5 SEC. THEN RESTART. 3)TOUCH START.

SEF565X

5	EVAP SML LEAK P0440/P1440
	WAIT 2 TO 10 MINUTES. KEEP ENGINE RUNNING AT IDLE SPEED.

SEF566X

5	EVAP SML LEAK P0440/P1440
	OK
	SELF-DIAG RESULTS
	NO DTC DETECTED. FURTHER TESTING MAY BE REQUIRED.

SEF567X

DTC Confirmation Procedure

NEEC0219

NOTE:

- If DTC P0440 or P1440 is displayed with P1448, perform trouble diagnosis for DTC P1448 first. (See EC-1115.)
- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Perform “DTC WORK SUPPORT” when the fuel level is between 1/4 to 3/4 full and vehicle is placed on flat level surface.
- Always perform test at a temperature of 0 to 30°C (32 to 86°F).

Ⓜ With CONSULT-II

- 1) Turn ignition switch “ON”.
- 2) Turn ignition switch “OFF” and wait at least 5 seconds.
- 3) Turn ignition switch “ON” and select “DATA MONITOR” mode with CONSULT-II.
- 4) Make sure that the following conditions are met.
COOLAN TEMP/S: 0 - 70°C (32 - 158°F)
INT/A TEMP SE: 0 - 60°C (32 - 140°F)
- 5) Select “EVAP SML LEAK P0440” of “EVAPORATIVE SYSTEM” in “DTC WORK SUPPORT” mode with CONSULT-II. Follow the instruction displayed.

NOTE:

If the engine speed cannot be maintained within the range displayed on the CONSULT-II screen, go to “Basic Inspection”, EC-680.

- 6) Make sure that “OK” is displayed.
If “NG” is displayed, refer to “Diagnostic Procedure”, EC-959.

NOTE:

Make sure that EVAP hoses are connected to EVAP canister purge volume control solenoid valve properly.

Ⓜ With GST

NOTE:

Be sure to read the explanation of “Driving Pattern” on EC-645 before driving vehicle.

- 1) Start engine.
 - 2) Drive vehicle according to “Driving Pattern”, EC-645.
 - 3) Stop vehicle.
 - 4) Select “MODE 1” with GST.
- If SRT of EVAP system is not set yet, go to the following step.
 - If SRT of EVAP system is set, the result will be OK.
- 5) Turn ignition switch “OFF” and wait at least 5 seconds.

DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

VG33E


DTC Confirmation Procedure (Cont'd)

- 6) Start engine.
It is not necessary to cool engine down before driving.
- 7) Drive vehicle again according to the "Driving Pattern", EC-645.
- 8) Stop vehicle.
- 9) Select "MODE 3" with GST.
 - If P0440 is displayed on the screen, go to "Diagnostic Procedure", EC-959.
 - If P1440 is displayed on the screen, go to "Diagnostic Procedure" for "DTC P1440", EC-1083.
 - If P1447 is displayed on the screen, go to "Diagnostic Procedure" for "DTC P1447", EC-1106.
 - If P0440, P1440 and P1447 are not displayed on the screen, go to the following step.
- 10) Select "MODE 1" with GST.
 - If SRT of EVAP system is set, the result will be OK.
 - If SRT of EVAP system is not set, go to step 6.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Diagnostic Procedure

NEEC0220

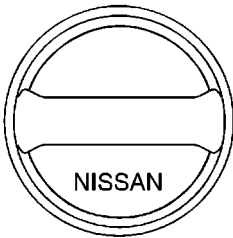1	CHECK FUEL FILLER CAP DESIGN	
1. Turn ignition switch "OFF". 2. Check for genuine NISSAN fuel filler cap design.		
		
SEF915U		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Replace with genuine NISSAN fuel filler cap.

2	CHECK FUEL FILLER CAP INSTALLATION	
Check that the cap is tightened properly by rotating the cap clockwise.		
OK or NG		
OK	▶	GO TO 3.
NG	▶	<ul style="list-style-type: none"> ● Open fuel filler cap, then clean cap and fuel filler neck threads using air blower. ● Retighten until ratcheting sound is heard.



DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

VG33E

Diagnostic Procedure (Cont'd)

3	CHECK FUEL FILLER CAP FUNCTION	
Check for air releasing sound while opening the fuel filler cap.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	GO TO 4.

4	CHECK FUEL TANK VACUUM RELIEF VALVE	
Refer to "Evaporative Emission System", EC-613.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace fuel filler cap with a genuine one.

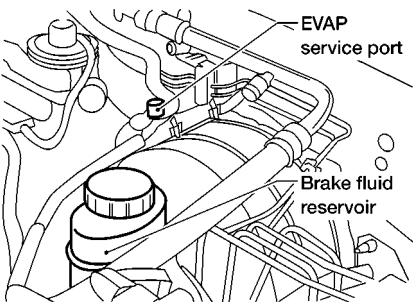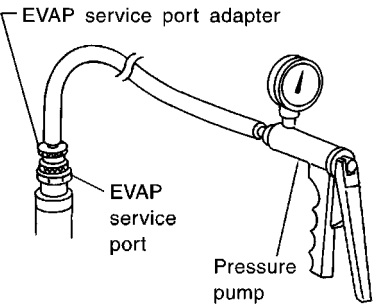5	INSTALL THE PRESSURE PUMP	
To locate the EVAP leak, install EVAP service port adapter and pressure pump to EVAP service port securely.		
		
AEC649A		
		
SEF916U		
NOTE:		
Improper installation of the EVAP service port adapter to the EVAP service port may cause leaking.		
Models with CONSULT	▶	GO TO 6.
Models without CONSULT	▶	GO TO 7.

DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

VG33E

Diagnostic Procedure (Cont'd)


6 CHECK FOR EVAP LEAK

With CONSULT

1. Turn ignition switch "ON".
2. Select "EVAP SYSTEM CLOSE" of "WORK SUPPORT" mode with CONSULT.
3. Touch "START" and apply pressure into the EVAP line until the pressure indicator reaches the middle of the bar graph.

NOTE:


- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

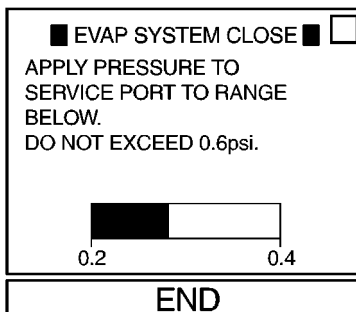

SEF917U

4. Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-617.

Leak detector

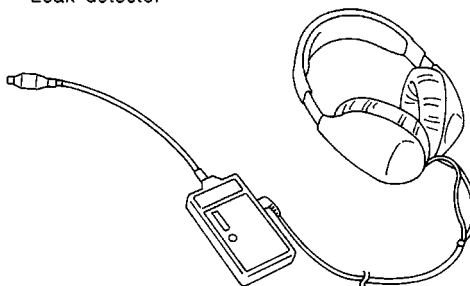

SEF200U

OK or NG

OK	▶	GO TO 8.
NG	▶	Repair or replace.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)


VG33E

Diagnostic Procedure (Cont'd)

7 CHECK FOR EVAP LEAK

⊗ Without CONSULT

1. Turn ignition switch "OFF".
2. Apply 12 volts DC to EVAP canister vent control valve. The valve will close. (Continue to apply 12 volts until the end of test.)
3. Apply 12 volts DC to vacuum cut valve bypass valve. The valve will open. (Continue to apply 12V until the end of test.)

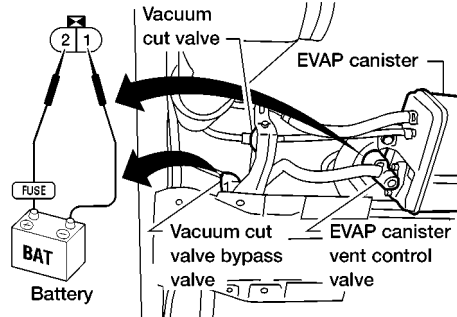

AEC632A


4. Pressurize the EVAP line using pressure pump with 1.3 to 2.7 kPa (10 to 20 mmHg, 0.39 to 0.79 inHg), then remove pump and EVAP service port adapter.

NOTE:

- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

5. Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-617.

Leak detector

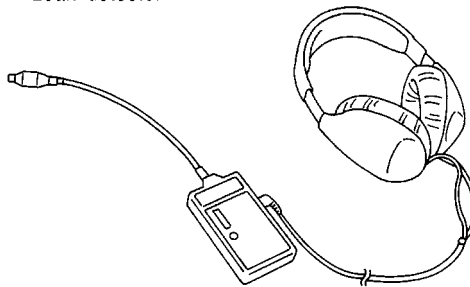

SEF200U


OK or NG

OK	▶	GO TO 8.
NG	▶	Repair or replace.


DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

VG33E

Diagnostic Procedure (Cont'd)

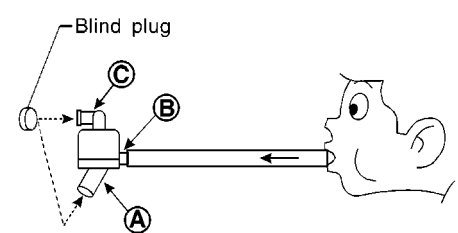8	CHECK WATER SEPARATOR	<p>1. Check visually for insect nests in the water separator air inlet. 2. Check visually for cracks or flaws in the appearance. 3. Check visually for cracks or flaws in the hose. 4. Check that A and C are not clogged by blowing air into B with A, and then C plugged.</p> <div style="text-align: center;">  <p>* (A) : Bottom hole (To atmosphere) (B) : Emergency tube (From EVAP canister) (C) : Inlet port (To member)</p> </div> <p style="text-align: right;">SEF829T</p> <p>5. In case of NG in items 2 - 4, replace the parts. NOTE: • Do not disassemble water separator.</p> <p style="text-align: center;">OK or NG</p>	GI MA EM LC EC FE CL MT
OK	▶	GO TO 9.	
NG	▶	Replace water separator.	

9	CHECK EVAP CANISTER VENT CONTROL VALVE, O-RING AND CIRCUIT	<p>Refer to "DTC Confirmation Procedure", EC-971.</p> <p style="text-align: center;">OK or NG</p>	AT TF PD
OK	▶	GO TO 10.	
NG	▶	Repair or replace EVAP canister vent control valve and O-ring or harness/connector.	

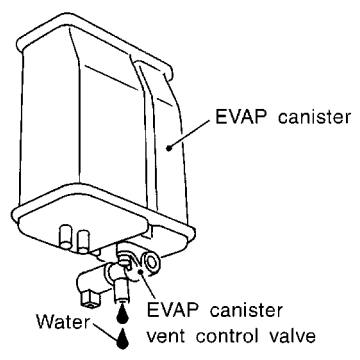10	CHECK IF EVAP CANISTER SATURATED WITH WATER	<p>1. Remove EVAP canister with EVAP canister vent control valve attached. 2. Check if water will drain from the EVAP canister.</p> <div style="text-align: center;">  <p style="text-align: right;">SEF596U</p> </div> <p style="text-align: center;">Yes or No</p>	AX SU BR ST RS BT HA SC
Yes	▶	GO TO 11.	
No (With CONSULT)	▶	GO TO 13.	
No (Without CONSULT)	▶	GO TO 14.	

DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

VG33E

Diagnostic Procedure (Cont'd)

11	CHECK EVAP CANISTER	
Weigh the EVAP canister with the EVAP canister vent control valve attached. The weight should be less than 1.8 kg (4.0 lb).		
OK or NG		
OK (With CONSULT)	▶	GO TO 13.
OK (Without CONSULT)	▶	GO TO 14.
NG	▶	GO TO 12.

12	DETECT MALFUNCTIONING PART	
Check the following.		
<ul style="list-style-type: none"> ● EVAP canister for damage ● EVAP hose between EVAP canister and water separator for clogging or poor connection 		
	▶	Repair hose or replace EVAP canister.

13	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION																																		
<p> With CONSULT</p> <ol style="list-style-type: none"> 1. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port. 2. Start engine. 3. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode. 4. Touch "Qu" on CONSULT screen to increase "PURG VOL CONT/V" opening to 100.0%. 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm. 																																			
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <td colspan="2" style="text-align: center;">■ ACTIVE TEST ■</td> <td style="text-align: right;"><input type="checkbox"/></td> </tr> <tr> <td>PURG VOL CONT/V</td> <td style="text-align: right;">100.0%</td> <td></td> </tr> <tr> <td colspan="3" style="text-align: center;">:-----: MONITOR :-----:</td> </tr> <tr> <td>CMPS•RPM(REF)</td> <td style="text-align: right;">2187rpm</td> <td></td> </tr> <tr> <td>FR O2 MNTR-B2</td> <td style="text-align: right;">RICH</td> <td></td> </tr> <tr> <td>FR O2 MNTR-B1</td> <td style="text-align: right;">RICH</td> <td></td> </tr> <tr> <td>A/F ALPHA-B2</td> <td style="text-align: right;">100%</td> <td></td> </tr> <tr> <td>A/F ALPHA-B1</td> <td style="text-align: right;">100%</td> <td></td> </tr> <tr> <td>THRTL POS SEN</td> <td style="text-align: right;">0.64V</td> <td></td> </tr> <tr> <td style="text-align: center;">Qu</td> <td style="text-align: center;">UP</td> <td style="text-align: center;">DWN</td> </tr> <tr> <td style="text-align: center;">Qd</td> <td colspan="2"></td> </tr> </table>			■ ACTIVE TEST ■		<input type="checkbox"/>	PURG VOL CONT/V	100.0%		:-----: MONITOR :-----:			CMPS•RPM(REF)	2187rpm		FR O2 MNTR-B2	RICH		FR O2 MNTR-B1	RICH		A/F ALPHA-B2	100%		A/F ALPHA-B1	100%		THRTL POS SEN	0.64V		Qu	UP	DWN	Qd		
■ ACTIVE TEST ■		<input type="checkbox"/>																																	
PURG VOL CONT/V	100.0%																																		
:-----: MONITOR :-----:																																			
CMPS•RPM(REF)	2187rpm																																		
FR O2 MNTR-B2	RICH																																		
FR O2 MNTR-B1	RICH																																		
A/F ALPHA-B2	100%																																		
A/F ALPHA-B1	100%																																		
THRTL POS SEN	0.64V																																		
Qu	UP	DWN																																	
Qd																																			
<p>Vacuum should exist.</p> <p style="text-align: right;">AEC912A</p> <p style="text-align: center;">OK or NG</p>																																			
OK	▶	GO TO 17.																																	
NG	▶	GO TO 15.																																	


14	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION	
<p> Without CONSULT</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine. 3. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port. 4. Start engine and let it idle for at least 80 seconds. 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm. <p>Vacuum should exist.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 17.
NG	▶	GO TO 15.


DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

VG33E

Diagnostic Procedure (Cont'd)

15	CHECK VACUUM HOSE	
Check vacuum hoses for clogging or disconnection. Refer to "Vacuum Hose Drawing", EC-607.		
OK or NG		
OK	▶	GO TO 16.
NG	▶	Repair or reconnect the hose.

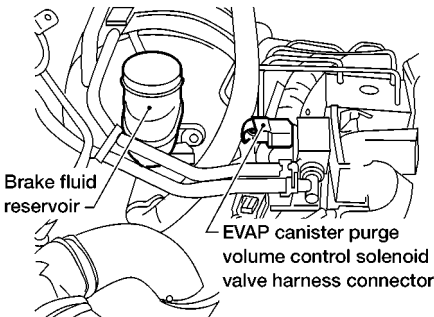16	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	
Refer to "Component Inspection", EC-968.		
 <p style="text-align: right; margin-right: 50px;">AEC652A</p>		
OK or NG		
OK	▶	GO TO 17.
NG	▶	Replace EVAP canister purge volume control solenoid valve.

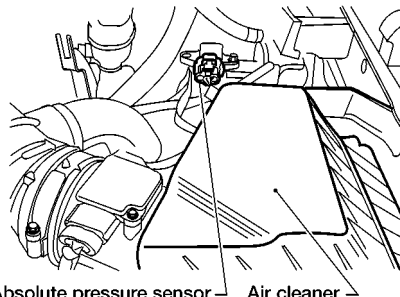
17	CHECK ABSOLUTE PRESSURE SENSOR	
Refer to "Component Inspection", EC-734.		
 <p style="text-align: right; margin-right: 50px;">AEC642A</p>		
OK or NG		
OK	▶	GO TO 18.
NG	▶	Replace absolute pressure sensor.


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

VG33E

Diagnostic Procedure (Cont'd)

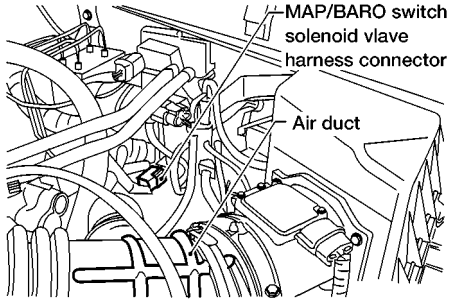18	CHECK MAP/BARO SWITCH SOLENOID VALVE AND CIRCUIT	
Refer to "Component Inspection", EC-1045.		
		
AEC650A		
OK or NG		
OK	▶	GO TO 19.
NG	▶	Replace MAP/BARO switch solenoid valve.

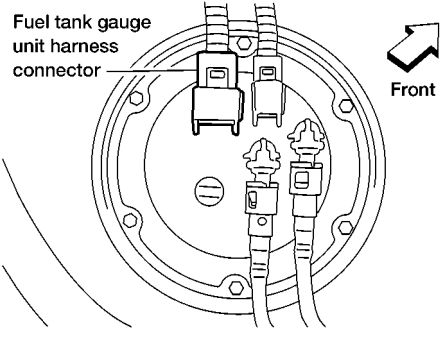19	CHECK TANK FUEL TEMPERATURE SENSOR	
Refer to "Component Inspection", EC-872.		
		
AEC933A		
OK or NG		
OK	▶	GO TO 20.
NG	▶	Replace tank fuel temperature sensor.

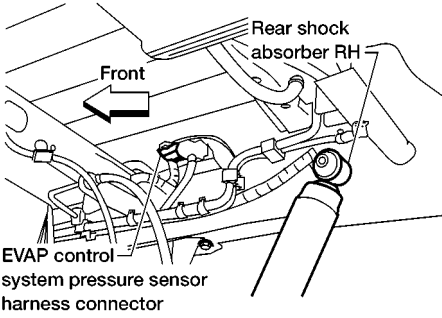20	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR	
Refer to "Component Inspection", EC-982.		
		
AEC651A		
OK or NG		
OK	▶	GO TO 21.
NG	▶	Replace EVAP control system pressure sensor.

DTC P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)

VG33E

Diagnostic Procedure (Cont'd)

21	CHECK EVAP PURGE LINE	
Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks or improper connection. Refer to "Evaporative Emission System", EC-613.		
OK or NG		
OK	▶	GO TO 22.
NG	▶	Repair or reconnect the hose.

22	CLEAN EVAP PURGE LINE	
Clean EVAP purge line (pipe and rubber tube) using air blower.		
	▶	GO TO 23.

23	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-1166.		
	▶	INSPECTION END

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)

VG33E

Description


Description SYSTEM DESCRIPTION

NEEC0221

NEEC0221S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	EVAP canister purge flow control	EVAP canister purge volume control solenoid valve
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
Throttle position switch	Closed throttle position		
Front heated oxygen sensors	Density of oxygen in exhaust gas (Mixture ratio feedback signal)		
Fuel tank temperature sensor	Fuel temperature in fuel tank		
Vehicle speed sensor	Vehicle speed		

This system controls flow rate of fuel vapor from the EVAP canister. The opening of the vapor by-pass passage in the EVAP canister purge volume control solenoid valve changes to control the flow rate. The EVAP canister purge volume control solenoid valve repeats ON/OFF operation according to the signal sent from the ECM. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. When the engine is operating, the flow rate of fuel vapor from the EVAP canister is regulated as the air flow changes.

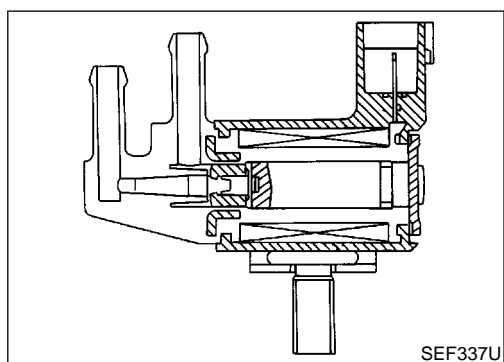

COMPONENT DESCRIPTION

NEEC0221S02

The EVAP canister purge volume control solenoid valve uses a ON/OFF duty to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

CONSULT-II Reference Value in Data Monitor Mode

NEEC0222

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
PURG VOL C/V	● Engine: After warming up ● Air conditioner switch "OFF" ● Shift lever: "N" ● No-load	Idle (Vehicle stopped)
	2,000 rpm	0% —

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)



VG33E

ECM Terminals and Reference Value

ECM Terminals and Reference Value

NEEC0223

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

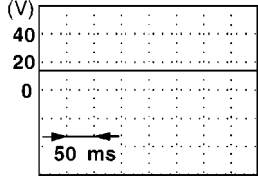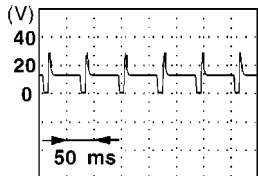TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
4	OR/B	ECM relay (Self shut-off)	[Engine is running] [Ignition switch "OFF"] <ul style="list-style-type: none"> ● For a few seconds after turning ignition switch "OFF" 	0 - 1.5V
			[Ignition switch "OFF"] <ul style="list-style-type: none"> ● A few seconds passed after turning ignition switch "OFF" 	BATTERY VOLTAGE (11 - 14V)
5	R/Y	EVAP canister purge volume control solenoid valve	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V) 
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm (More than 100 seconds after starting engine) 	BATTERY VOLTAGE (11 - 14V) 
67	B/P	Power supply for ECM	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
72	B/P			
117	B/P	Current return	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NEEC0224

Malfunction is detected when an improper voltage signal is sent to ECM through the valve.

POSSIBLE CAUSE

NEEC0224S01

- Harness or connectors
(The valve circuit is open or shorted.)
- EVAP canister purge volume control solenoid valve

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)

VG33E

DTC Confirmation Procedure

3	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF)	XXX rpm

PEF357V

DTC Confirmation Procedure

NEEC0225

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11V at idle.

Ⓜ With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and let it idle for at least 13 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-972.

Ⓜ With GST

Follow the procedure "With CONSULT-II".

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)


VG33E

Wiring Diagram




Wiring Diagram

NEEC0226

EC-PGC/V-01

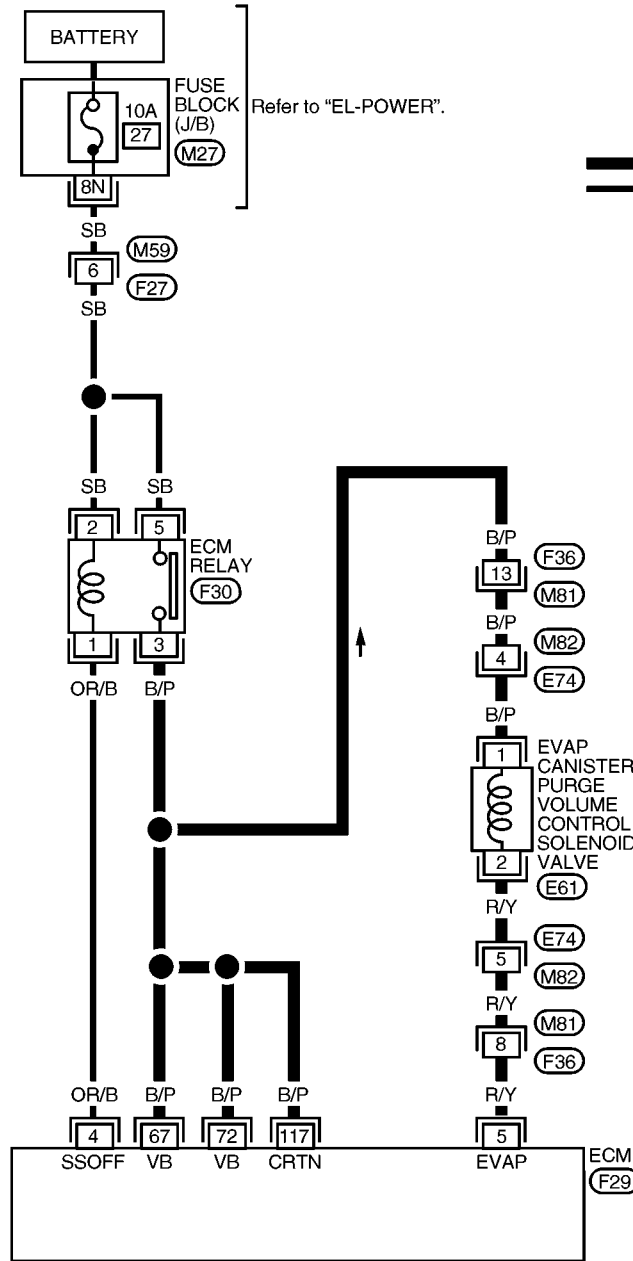

— : Detectable line for DTC
 — : Non-detectable line for DTC

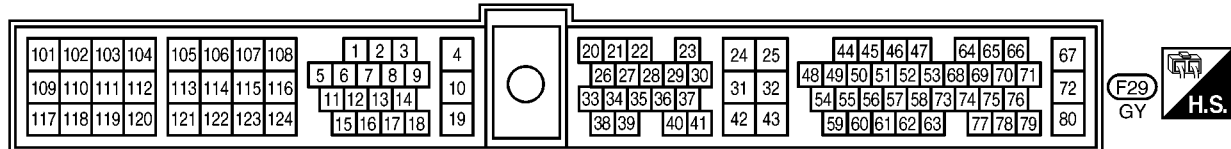

AEC959A

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX



DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0227

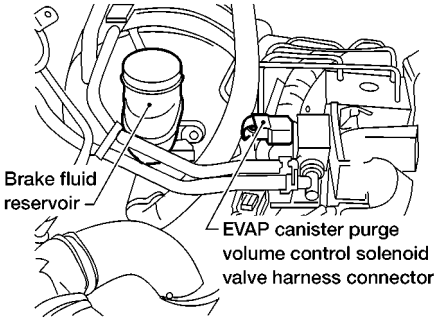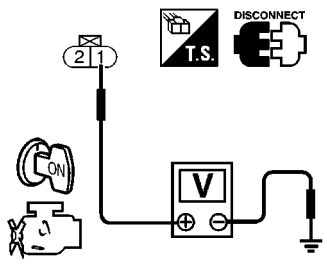1	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT
<p>1. Turn ignition switch "OFF". 2. Disconnect EVAP canister purge volume control solenoid valve harness connector.</p> <div style="text-align: center;">  <p>Labels in diagram: Brake fluid reservoir, EVAP canister purge volume control solenoid valve harness connector</p> </div> <p style="text-align: right;">AEC652A</p> <p>3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="text-align: right;">SEF646W</p> </div> <p style="text-align: center; color: blue;">Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 3.
NG	▶ GO TO 2.

2	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F36, M81 ● Harness connectors M82, E74 ● Harness for open or short between EVAP canister purge volume control solenoid valve and ECM relay 	
▶	Repair harness or connectors.

3	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 5 and solenoid terminal 2. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK (With CONSULT-II)	▶ GO TO 5.
OK (Without CONSULT-II)	▶ GO TO 6.
NG	▶ GO TO 4.

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)

VG33E

Diagnostic Procedure (Cont'd)

4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E74, M82 ● Harness connectors M81, F36 ● Harness for open or short between EVAP canister purge volume control solenoid valve and ECM 	
	Repair open circuit or short to ground or short to power in harness or connectors.

5	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE																				
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine. 2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening. 																					
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>PURG VOL CONT/V</td> <td style="text-align: center;">0.0%</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>CMPS~RPM(REF)</td> <td style="text-align: center;">XXX rpm</td> </tr> <tr> <td>FR O2 MNTR-B2</td> <td style="text-align: center;">RICH</td> </tr> <tr> <td>FR O2 MNTR-B1</td> <td style="text-align: center;">RICH</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td style="text-align: center;">XXX %</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td style="text-align: center;">XXX %</td> </tr> <tr> <td>THRTL POS SEN</td> <td style="text-align: center;">XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </table>		ACTIVE TEST		PURG VOL CONT/V	0.0%	MONITOR		CMPS~RPM(REF)	XXX rpm	FR O2 MNTR-B2	RICH	FR O2 MNTR-B1	RICH	A/F ALPHA-B2	XXX %	A/F ALPHA-B1	XXX %	THRTL POS SEN	XXX V		
ACTIVE TEST																					
PURG VOL CONT/V	0.0%																				
MONITOR																					
CMPS~RPM(REF)	XXX rpm																				
FR O2 MNTR-B2	RICH																				
FR O2 MNTR-B1	RICH																				
A/F ALPHA-B2	XXX %																				
A/F ALPHA-B1	XXX %																				
THRTL POS SEN	XXX V																				
PEF882U																					
OK or NG																					
OK	GO TO 7.																				
NG	GO TO 6.																				

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE (CIRCUIT)


VG33E

Diagnostic Procedure (Cont'd)

6 CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

With CONSULT-II

1. Check air passage continuity under the following conditions.

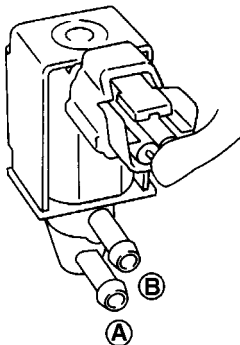


SEF660U

Condition PURG VOL CONT/V value	Air passage continuity between A and B
100.0%	Yes
0.0%	No

MTBL0241

Without CONSULT-II

1. Check air passage continuity under the following conditions.

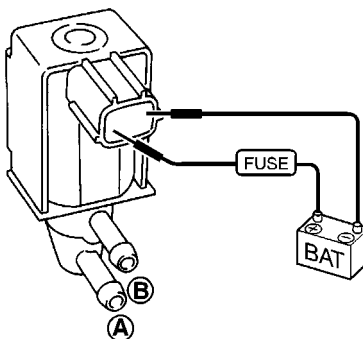

SEF661U

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	Yes
No supply	No

MTBL0242

OK or NG

OK	▶	GO TO 7.
NG	▶	Replace EVAP canister purge volume control solenoid valve.

7 CHECK INTERMITTENT INCIDENT



Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.

▶ **INSPECTION END**

DTC P0446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CIRCUIT)

VG33E

Component Description

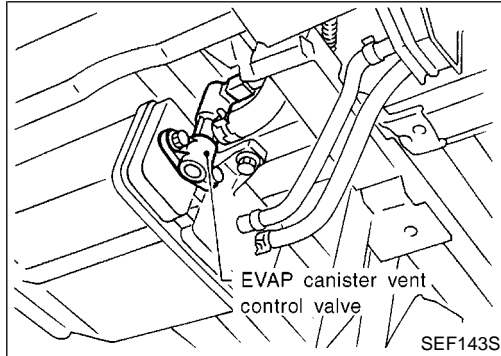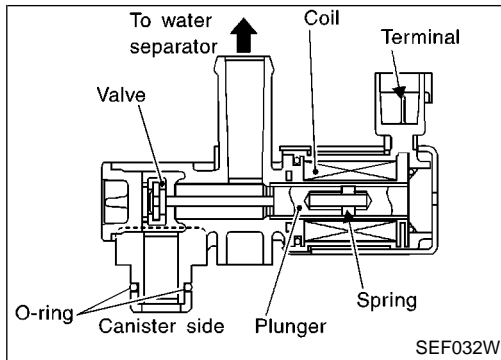

Component Description

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent. NEEC0228

This solenoid valve responds to signals from the ECM. When the ECM sends an ON signal, the coil in the solenoid valve is energized. A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System (Small Leak)" diagnosis.

GI
MA
EM
LC
EC

CONSULT-II Reference Value in Data Monitor Mode

Specification data are reference values.

NEEC0229

MONITOR ITEM	CONDITION	SPECIFICATION
VENT CONT/V	● Ignition switch: ON	OFF

FE
CL
MT
AT

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

NEEC0230

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
108	R/G	EVAP canister vent control valve	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

TF
PD
AX
SU
BR

On Board Diagnosis Logic

Malfunction is detected when an improper voltage signal is sent to ECM through EVAP canister vent control valve. NEEC0231

POSSIBLE CAUSE

NEEC0231S01

- Harness or connectors (The valve circuit is open or shorted.)
- EVAP canister vent control valve

ST
RS
BT
HA
SC
EL

DTC P0446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CIRCUIT)

VG33E

DTC Confirmation Procedure

DTC Confirmation Procedure


NEEC0232

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11V at idle.

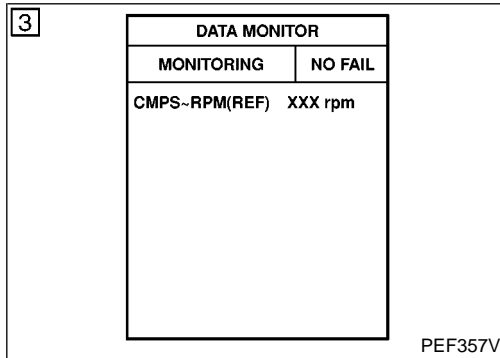

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait at least 8 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-978.

With GST

Follow the procedure "With CONSULT-II".

DTC P0446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CIRCUIT)


VG33E

Wiring Diagram

Wiring Diagram

NEEC0233



EC-VENT/V-01

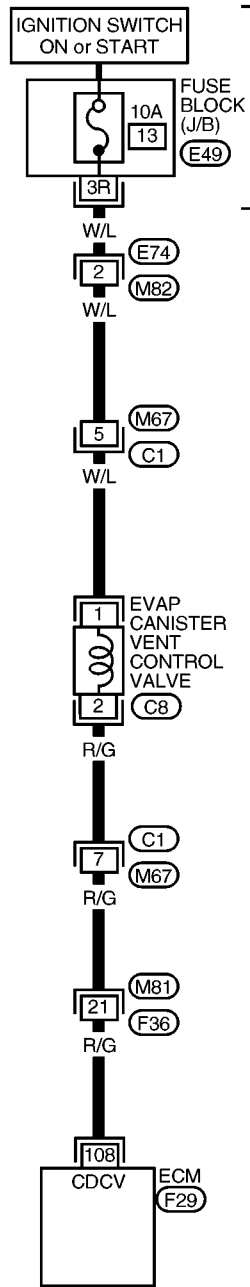

Refer to "EL-POWER".
— : Detectable line for DTC
— : Non-detectable line for DTC

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST

RS
BT
HA
SC
EL
IDX

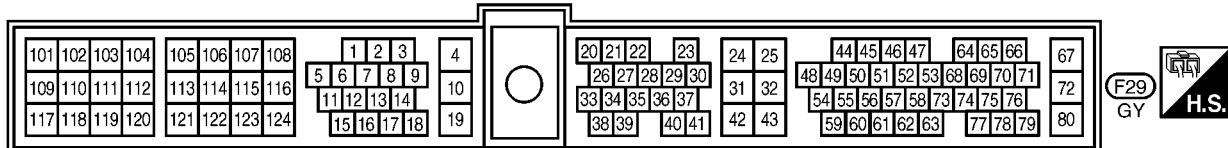

AEC017B

DTC P0446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CIRCUIT)

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0234

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.



2	CHECK EVAP CANISTER VENT CONTROL VALVE CIRCUIT																					
<p>1. Turn ignition switch "OFF" and then turn "ON".</p> <p>2. Select "VENT CONTROL/V" in "ACTIVE TEST" mode with CONSULT-II.</p> <p>3. Touch "ON/OFF" on CONSULT-II screen.</p>																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>VENT CONTROL/V</td> <td>ON</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>CMPS-RPM (REF)</td> <td>XXX rpm</td> </tr> <tr> <td>FR O2 MNTR-B2</td> <td>LEAN</td> </tr> <tr> <td>FR O2 MNTR-B1</td> <td>LEAN</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XXX %</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XXX %</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </table>			ACTIVE TEST		VENT CONTROL/V	ON	MONITOR		CMPS-RPM (REF)	XXX rpm	FR O2 MNTR-B2	LEAN	FR O2 MNTR-B1	LEAN	A/F ALPHA-B2	XXX %	A/F ALPHA-B1	XXX %	THRTL POS SEN	XXX V		
ACTIVE TEST																						
VENT CONTROL/V	ON																					
MONITOR																						
CMPS-RPM (REF)	XXX rpm																					
FR O2 MNTR-B2	LEAN																					
FR O2 MNTR-B1	LEAN																					
A/F ALPHA-B2	XXX %																					
A/F ALPHA-B1	XXX %																					
THRTL POS SEN	XXX V																					
<p>4. Check for operating sound of the valve. Clicking noise should be heard.</p>																						
OK or NG																						
OK	▶	GO TO 7.																				
NG	▶	GO TO 3.																				

PEF883U

DTC P0446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CIRCUIT)

VG33E

Diagnostic Procedure (Cont'd)

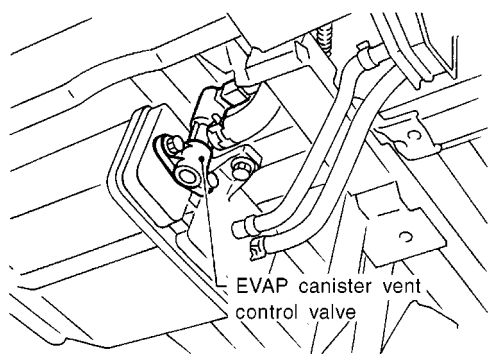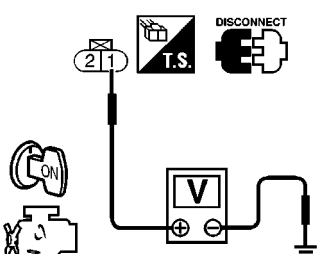3	CHECK EVAP CANISTER VENT CONTROL VALVE POWER SUPPLY CIRCUIT	<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect EVAP canister vent control valve harness connector.</p> <div style="text-align: center; margin: 10px 0;">  <p>EVAP canister vent control valve</p> </div> <p>3. Turn ignition switch "ON".</p> <p>4. Check voltage between terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center; margin: 10px 0;">  </div> <p style="color: blue; margin-top: 10px;">Voltage: Battery voltage</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	<p style="text-align: center;">SEF143S</p> <p style="text-align: center;">SEF648W</p>
OK	▶	GO TO 5.	
NG	▶	GO TO 4.	

4	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E74, M82 ● Harness connectors M67, C1 ● Fuse block (J/B) connector E49 ● 10A fuse ● Harness for open or short between EVAP canister vent control valve and fuse <p style="text-align: right; margin-top: 10px;">▶ Repair harness or connectors.</p>	
----------	-----------------------------------	--	--

5	CHECK EVAP CANISTER VENT CONTROL VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect ECM harness connector.</p> <p>3. Check harness continuity between ECM terminal 108 and valve terminal 2. Refer to Wiring Diagram.</p> <p style="color: blue; margin-left: 20px;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	
OK	▶	GO TO 7.	
NG	▶	GO TO 6.	

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CIRCUIT)

VG33E

Diagnostic Procedure (Cont'd)

6	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors C1, M67 ● Harness connectors M81, F36 ● Harness for open or short between EVAP canister vent control valve and ECM 	
	Repair open circuit or short to ground or short to power in harness or connectors.

7	CHECK EVAP CANISTER VENT CONTROL VALVE																										
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode. 2. Check air passage continuity and operation delay time. 																											
	<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>VENT CONTROL/V</td><td>OFF</td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>CMPS-RPM (REF)</td><td>XXXrpm</td></tr> <tr><td>FR O2 MNTR-B1</td><td>RICH</td></tr> <tr><td>A/F ALPHA-B1</td><td>XXX%</td></tr> <tr><td>THRTL POS SEN</td><td>XXXV</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr> <th style="width: 50%;">Condition VENT CONTROL/V</th> <th style="width: 50%;">Air passage continuity between A and B</th> </tr> <tr> <td>ON</td> <td>No</td> </tr> <tr> <td>OFF</td> <td>Yes</td> </tr> </table>	ACTIVE TEST		VENT CONTROL/V	OFF	MONITOR		CMPS-RPM (REF)	XXXrpm	FR O2 MNTR-B1	RICH	A/F ALPHA-B1	XXX%	THRTL POS SEN	XXXV							Condition VENT CONTROL/V	Air passage continuity between A and B	ON	No	OFF	Yes
ACTIVE TEST																											
VENT CONTROL/V	OFF																										
MONITOR																											
CMPS-RPM (REF)	XXXrpm																										
FR O2 MNTR-B1	RICH																										
A/F ALPHA-B1	XXX%																										
THRTL POS SEN	XXXV																										
Condition VENT CONTROL/V	Air passage continuity between A and B																										
ON	No																										
OFF	Yes																										
SEF156X																											


<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Check air passage continuity and operation delay time under the following conditions. 							
<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr> <th style="width: 50%;">Condition</th> <th style="width: 50%;">Air passage continuity between A and B</th> </tr> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td>No</td> </tr> <tr> <td>OFF</td> <td>Yes</td> </tr> </table>	Condition	Air passage continuity between A and B	12V direct current supply between terminals 1 and 2	No	OFF	Yes	
Condition	Air passage continuity between A and B						
12V direct current supply between terminals 1 and 2	No						
OFF	Yes						
<p>If NG or operation takes more than 1 second, clean valve using air blower or replace as necessary. If portion B is rusted, replace control valve.</p>							
<p style="text-align: right; margin-right: 50px;">5.3 - 12 N·m (0.54 - 1.2 kg-m, 46.9 - 104 in-lb)</p>							
<p>Make sure new O-ring is installed properly.</p> <p>OK or NG</p>							
OK	GO TO 8.						
NG	Replace EVAP canister vent control valve.						

8	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
	INSPECTION END

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

VG33E


Component Description

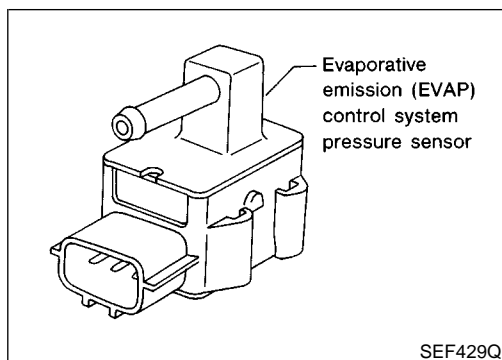

Component Description

The EVAP control system pressure sensor detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases. The EVAP control system pressure sensor is not used to control the engine system. It is used only for on board diagnosis.

NEEC0235

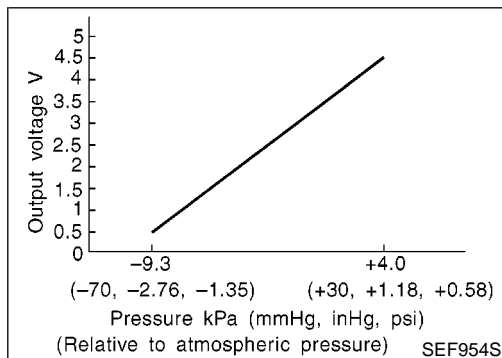

CONSULT-II Reference Value in Data Monitor Mode

NEEC0236

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
EVAP SYS PRES	● Ignition switch: ON	Approx. 3.4V

ECM Terminals and Reference Value

NEEC0237

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
42	B/W	Sensors' power supply	[Ignition switch "ON"]	Approximately 5V
43	BR	Sensors' ground	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V
62	Y	EVAP control system pressure sensor	[Ignition switch "ON"]	Approximately 3.4V

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

VG33E

On Board Diagnosis Logic

On Board Diagnosis Logic

Malfunction is detected when an improper voltage signal from EVAP control system pressure sensor is sent to ECM. =NEEC0238

POSSIBLE CAUSE

NEEC0238S01

- Harness or connectors
(The EVAP control system pressure sensor circuit is open or shorted.)
- Rubber hose to EVAP control system pressure sensor is clogged, vent, kinked, disconnected or improperly connected.
- EVAP control system pressure sensor
- EVAP canister vent control valve
- EVAP canister purge volume control solenoid valve
- EVAP canister
- Rubber hose from EVAP canister vent control valve to water separator

DTC Confirmation Procedure

NEEC0239

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

6	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF)	XXX rpm
	COOLAN TEMP/S	XXX °C
	TANK F/TMP SE	XXX °C

PEF886U

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "DATA MONITOR" mode with CONSULT-II.
- 5) Make sure that "TANK F/TEMP SE" is more than 0°C (32°F).
- 6) Start engine and wait at least 20 seconds.
- 7) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-984.

With GST

Follow the procedure "With CONSULT-II".

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR


VG33E

Wiring Diagram


Wiring Diagram

NEEC0240

EC-PRE/SE-01

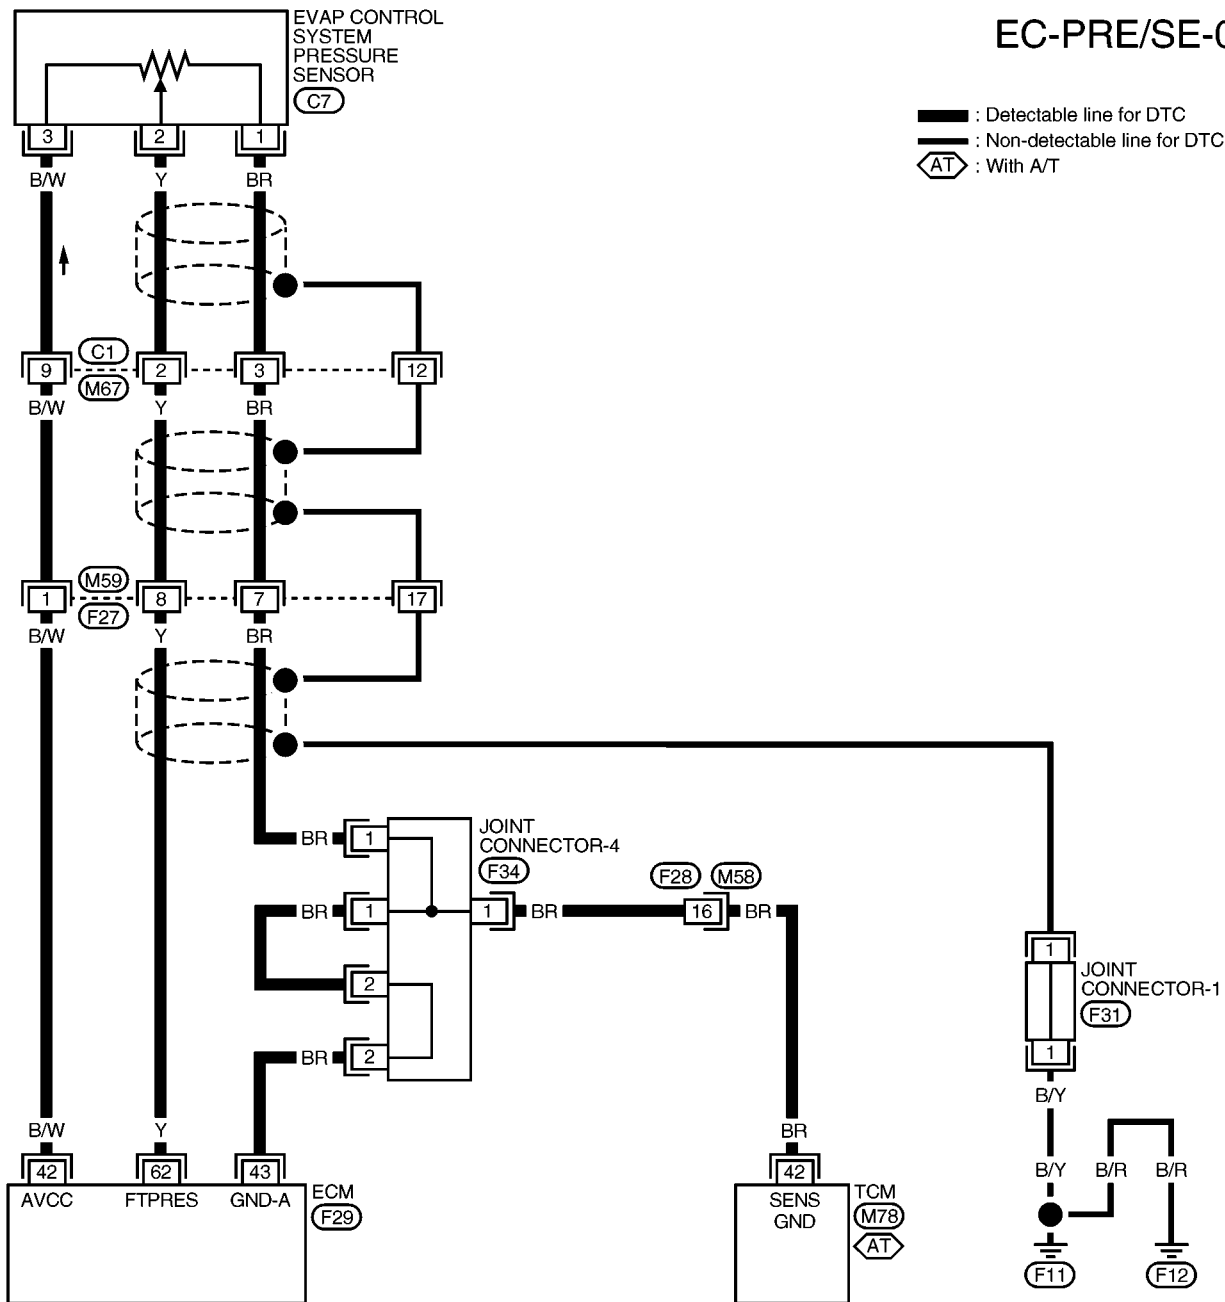

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

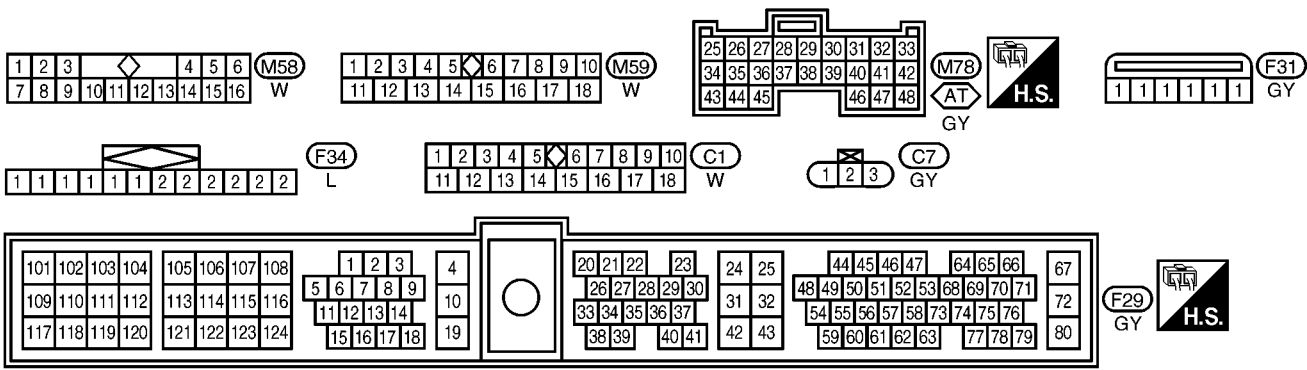

AEC018B


DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR


VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0241

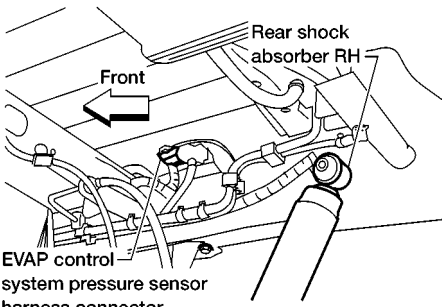1	CHECK RUBBER TUBE	<p>1. Turn ignition switch "OFF".</p> <p>2. Check rubber tube connected to the sensor for clogging, vent, kink, disconnection or improper connection.</p> <div style="text-align: center;">  <p>EVAP control system pressure sensor harness connector</p> <p>Rear shock absorber RH</p> <p>Front</p> </div> <p style="text-align: right;">AEC651A</p> <p style="text-align: center;">OK or NG</p>
OK	▶	GO TO 2.
NG	▶	Reconnect, repair or replace.

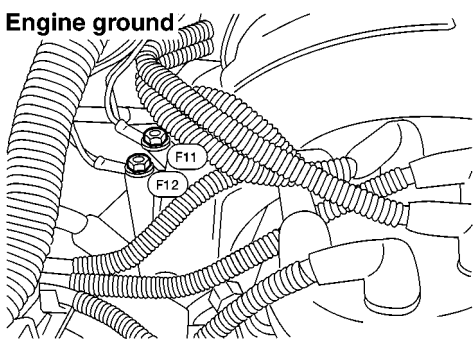
2	RETIGHTEN GROUND SCREWS	<p>1. Loosen and retighten engine ground screws.</p> <div style="text-align: center;">  <p>Engine ground</p> <p>F11</p> <p>F12</p> </div> <p style="text-align: right;">AEC640A</p>
	▶	GO TO 3.

3	CHECK CONNECTOR	<p>1. Disconnect EVAP control system pressure sensor harness connector.</p> <p>2. Check sensor harness connector for water.</p> <p>Water should not exist.</p> <p style="text-align: center;">OK or NG</p>
OK	▶	GO TO 4.
NG	▶	Repair or replace harness connector.

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

VG33E

Diagnostic Procedure (Cont'd)

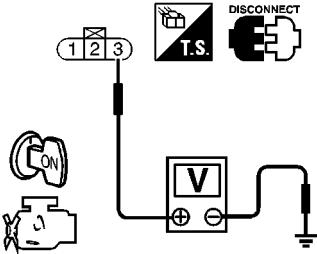4	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "ON". 2. Check voltage between terminal 3 and ground with CONSULT-II or tester.</p>		
		
SEF889U		
OK or NG		
OK	▶	GO TO 6.
NG	▶	GO TO 5.

GI
MA
EM
LC
EC

5	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors C1, M67 ● Harness connectors M59, F27 ● Harness for open or short between EVAP control system pressure sensor and ECM 		
▶		Repair harness or connectors.

FE
CL
MT
AT

6	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Check harness continuity between sensor terminal 1 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 8.
NG	▶	GO TO 7.

TF
PD
AX
SU

7	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors C1, M67 ● Harness connectors M59, F27 ● Harness connectors F28, M58 ● Joint connector-4 ● Harness for open or short between EVAP control system pressure sensor and ECM ● Harness for open or short between EVAP control system pressure sensor and TCM (Transmission Control Module) 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

BR
ST
RS
BT

HA
SC
EL

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

VG33E

Diagnostic Procedure (Cont'd)

8	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Disconnect ECM harness connector.</p> <p>2. Check harness continuity between ECM terminal 62 and sensor terminal 2. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II) ▶		GO TO 10.
OK (Without CONSULT-II) ▶		GO TO 11.
NG ▶		GO TO 9.

9	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors C1, M67 ● Harness connectors M59, F27 ● Harness for open or short between ECM and EVAP control system pressure sensor 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

10	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE																					
<p> With CONSULT-II</p> <p>1. Start engine.</p> <p>2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.</p>																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>PURG VOL CONT/V</td> <td style="text-align: center;">0.0%</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>CMPS~RPM(REF)</td> <td style="text-align: center;">XXX rpm</td> </tr> <tr> <td>FR O2 MNTR-B2</td> <td style="text-align: center;">RICH</td> </tr> <tr> <td>FR O2 MNTR-B1</td> <td style="text-align: center;">RICH</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td style="text-align: center;">XXX %</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td style="text-align: center;">XXX %</td> </tr> <tr> <td>THRTL POS SEN</td> <td style="text-align: center;">XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </table>			ACTIVE TEST		PURG VOL CONT/V	0.0%	MONITOR		CMPS~RPM(REF)	XXX rpm	FR O2 MNTR-B2	RICH	FR O2 MNTR-B1	RICH	A/F ALPHA-B2	XXX %	A/F ALPHA-B1	XXX %	THRTL POS SEN	XXX V		
ACTIVE TEST																						
PURG VOL CONT/V	0.0%																					
MONITOR																						
CMPS~RPM(REF)	XXX rpm																					
FR O2 MNTR-B2	RICH																					
FR O2 MNTR-B1	RICH																					
A/F ALPHA-B2	XXX %																					
A/F ALPHA-B1	XXX %																					
THRTL POS SEN	XXX V																					
OK or NG																						
OK ▶		GO TO 12.																				
NG ▶		GO TO 11.																				

PEF882U

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR


VG33E

Diagnostic Procedure (Cont'd)

11 CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Ⓟ With CONSULT-II

1. Check air passage continuity under the following conditions.

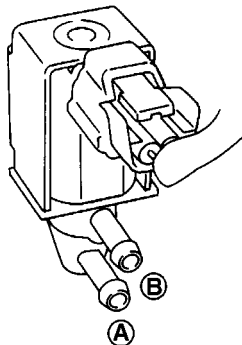


SEF660U

Condition PURG VOL CONT/V value	Air passage continuity between A and B
100.0%	Yes
0.0%	No

MTBL0241

ⓧ Without CONSULT-II


1. Check air passage continuity under the following conditions.

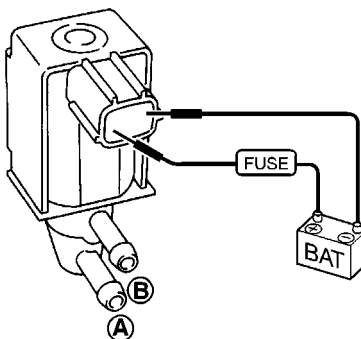

SEF661U

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	Yes
No supply	No

MTBL0242

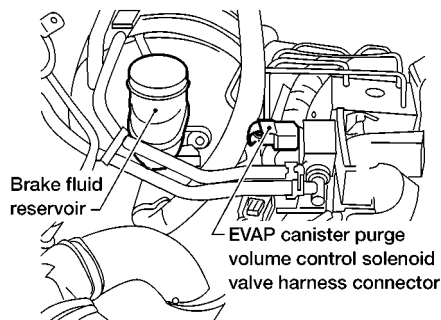

AEC652A

OK or NG

OK	▶	GO TO 12.
NG	▶	Replace EVAP canister purge volume control solenoid valve.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR


VG33E

Diagnostic Procedure (Cont'd)

12 CHECK EVAP CANISTER VENT CONTROL VALVE

With CONSULT-II

1. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.
2. Check air passage continuity and operation delay time under the following conditions.

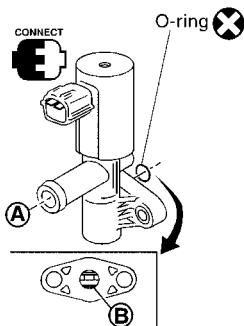

ACTIVE TEST	
VENT CONTROL/V	OFF
MONITOR	
CMPS-RPM (REF)	XXXrpm
FR O2 MNTR-B1	RICH
A/F ALPHA-B1	XXX%
THRTL POS SEN	XXXV

Condition VENT CONTROL/V	Air passage continuity between A and B
ON	No
OFF	Yes

SEF156X


Without CONSULT-II

1. Check air passage continuity and operation delay time under the following conditions.

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	No
OFF	Yes

MTBL0240

If NG or operation takes more than 1 second, clean valve using air blower or replace as necessary.
If portion **B** is rusted, replace control valve.

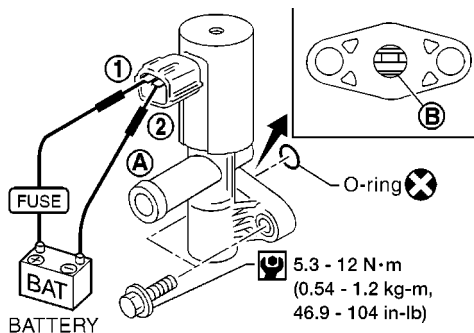

AEC783A

Make sure new O-ring is installed properly.

OK or NG

OK	▶	GO TO 13.
NG	▶	Replace EVAP canister vent control valve.


DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

VG33E

Diagnostic Procedure (Cont'd)

13 CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

1. Remove EVAP control system pressure sensor with its harness connector connected.
2. Remove hose from EVAP control system pressure sensor.
3. Turn ignition switch "ON".
4. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.
5. Check input voltage between ECM terminal 62 and ground.

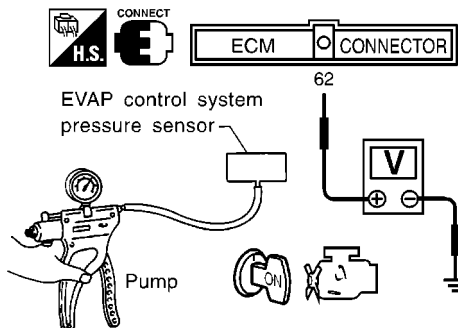

SEF894U

Pressure (Relative to atmospheric pressure)	Voltage (V)
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6


MTBL0246

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.

CAUTION:

- Never apply force to the air hole protector of the sensor if equipped.

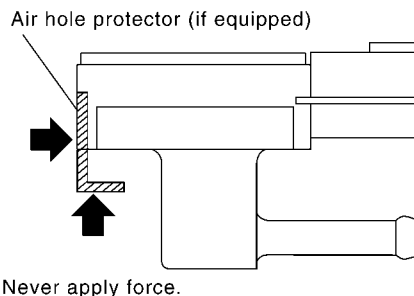

SEF799W

- Discard and EVAP control system pressure sensor which has been dropped from a height of more than 0.5m (19.7in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK	▶	GO TO 14.
NG	▶	Replace EVAP control system pressure sensor.

14 CHECK RUBBER TUBE

Check obstructed rubber tube connected to EVAP canister vent control valve.

OK or NG

OK	▶	GO TO 15.
NG	▶	Clean, repair or replace rubber tube.

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

VG33E

Diagnostic Procedure (Cont'd)

15	CHECK WATER SEPARATOR						
<p>1. Check visually for insect nests in the water separator air inlet. 2. Check visually for cracks or flaws in the appearance. 3. Check visually for cracks or flaws in the hose. 4. Check that A and C are not clogged by blowing air into B with A, and then C plugged.</p> <div style="text-align: center;"> <p>* (A) : Bottom hole (To atmosphere) * (B) : Emergency tube (From EVAP canister) * (C) : Inlet port (To member)</p> </div> <p style="text-align: right;">SEF829T</p> <p>5. In case of NG in items 2 - 4, replace the parts. NOTE: • Do not disassemble water separator.</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 16.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace water separator.</td> </tr> </table>		OK	▶	GO TO 16.	NG	▶	Replace water separator.
OK	▶	GO TO 16.					
NG	▶	Replace water separator.					

16	CHECK IF EVAP CANISTER SATURATED WITH WATER						
<p>1. Remove EVAP canister with EVAP canister vent control valve attached. 2. Check if water will drain from the EVAP canister.</p> <div style="text-align: center;"> <p>EVAP canister Water EVAP canister vent control valve</p> </div> <p style="text-align: right;">SEF596U</p> <p style="text-align: center;">Yes or No</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">Yes</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 17.</td> </tr> <tr> <td>No</td> <td style="text-align: center;">▶</td> <td>GO TO 19.</td> </tr> </table>		Yes	▶	GO TO 17.	No	▶	GO TO 19.
Yes	▶	GO TO 17.					
No	▶	GO TO 19.					

17	CHECK EVAP CANISTER						
<p>Weigh the EVAP canister with the EVAP canister vent control valve attached. The weight should be less than 1.8 kg (4.0 lb).</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 19.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 18.</td> </tr> </table>		OK	▶	GO TO 19.	NG	▶	GO TO 18.
OK	▶	GO TO 19.					
NG	▶	GO TO 18.					

DTC P0450 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PRESSURE SENSOR

VG33E

Diagnostic Procedure (Cont'd)

18	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● EVAP canister for damage ● EVAP hose between EVAP canister and water separator for clogging or poor connection 	
▶	Repair hose or replace EVAP canister.

GI
MA

19	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR SHIELD CIRCUIT FOR OPEN AND SHORT
1. Reconnect harness connectors disconnected. 2. Disconnect harness connectors C1, M67. 3. Check harness continuity between harness connector M67 terminal 12 and engine ground. Continuity should exist. 4. Also check harness for short to ground and short to power. <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 21.
NG	▶ GO TO 20.

EM
LC
EC

20	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors C1, M67 ● Harness connectors M59, F27 ● Joint connector-1 ● Harness for open or short between harness connector M67 and engine ground 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

CL
MT
AT

21	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
▶	INSPECTION END

TF
PD

AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


On Board Diagnosis Logic

NEEC1284

NOTE:

If DTC P0455 is displayed with P1448, perform trouble diagnosis for DTC P1448 first. (See EC-1119.)

This diagnosis detects a very small leak (fuel filler cap fell off etc.) in the EVAP system between the fuel tank and the EVAP canister purge volume control solenoid valve.

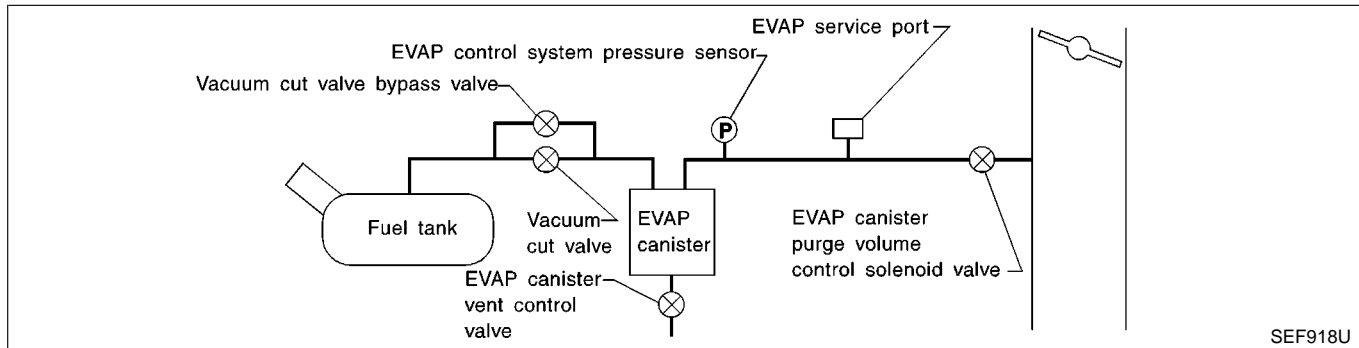

Malfunction is detected when EVAP control system has a very large leak, such as fuel filler cap fell off, EVAP control system does not operate properly.

CAUTION:

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine NISSAN rubber tube as a replacement.

POSSIBLE CAUSE

NEEC1284S01

- Fuel filler cap remains open or fails to close.
- Incorrect fuel tank vacuum relief valve
- Incorrect fuel filler cap used
- Foreign matter caught in fuel filler cap.
- Leak is in line between intake manifold and EVAP canister purge volume control solenoid valve.
- Foreign matter caught in EVAP canister vent control valve.
- EVAP canister or fuel tank leaks
- EVAP purge line (pipe and rubber tube) leaks
- EVAP purge line rubber tube bent.
- Blocked or bent rubber tube to EVAP control system pressure sensor
- Loose or disconnected rubber tube
- EVAP canister vent control valve and the circuit
- EVAP canister purge volume control solenoid valve and the circuit
- Absolute pressure sensor
- Fuel tank temperature sensor
- O-ring of EVAP canister vent control valve is missing or damaged.
- EVAP control system pressure sensor

DTC Confirmation Procedure

NEEC1285

CAUTION:

Never remove fuel filter cap during the DTC confirmation procedure.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

6
SEF565X

EVAP SML LEAK P0440/P1440

1)FOR BEST RSLT,PERFORM AT FOLLOWING CONDITIONS.
 -FUEL LEVEL: 1/4-3/4
 -AMBIENT TEMP: 0-30 C(32-86F)
 -OPEN ENGINE HOOD.
 2)START ENG WITH VHCL STOPPED. IF ENG IS ON,STOP FOR 5 SEC. THEN RESTART.
 3)TOUCH START.

6
SEF566X

EVAP SML LEAK P0440/P1440

WAIT
 2 TO 10 MINUTES.
 KEEP ENGINE RUNNING AT IDLE SPEED.

6
SEF567X

EVAP SML LEAK P0440/P1440

OK

SELF-DIAG RESULTS

NO DTC DETECTED.
 FURTHER TESTING MAY BE REQUIRED.

6
SEF874X

EVAP SML LEAK P0440/P1440

MAINTAIN
 1600 - 2100 RPM UNTIL FINAL RESULT APPEARS.
 (APPROX. 3 MINUTES)

NOTE:

- If DTC P0455 is displayed with P1448, perform trouble diagnosis for DTC P1448 first. (See EC-1119.)
- Make sure that EVAP hoses are connected to EVAP canister purge volume control solenoid valve properly.
- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Perform “DTC WORK SUPPORT” when the fuel level is between 1/4 to 3/4 full and vehicle is placed on flat level surface.
- Always perform test at a temperature of 0 to 30°C (32 to 86°F). Open engine hood before conducting the following procedure.

Ⓜ With CONSULT-II

- 1) Tighten fuel filter cap securely until ratcheting sound is heard.
- 2) Turn ignition switch ON.
- 3) Turn ignition switch OFF and wait at least 5 seconds.
- 4) Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
- 5) Make sure that the following conditions are met.
COOLAN TEMP/S: 0 - 70°C (32 - 158°F)
INT/A TEMP SE: 0 - 60°C (32 - 140°F)
- 6) Select “EVAP SML LEAK P0440” of “EVAPORATIVE SYSTEM” in “DTC WORK SUPPORT” mode with CONSULT-II. Follow the instruction displayed.

NOTE:

If the engine speed cannot be maintained within the range displayed on the CONSULT-II screen, go to “Basic Inspection”, EC-680.

- 7) Make sure that “OK” is displayed.
 If “NG” is displayed, select “SELF-DIAG RESULTS” mode with CONSULT-II and make sure that “EVAP GROSS LEAK [P0455] is displayed, refer to “Diagnostic Procedure”, EC-994. If P0440 is displayed, perform “Diagnostic Procedure” for DTC P0440.

Ⓜ With GST

NOTE:

Be sure to read the explanation of “Driving Pattern” on EC-645 before driving vehicle.

- 1) Start engine.
- 2) Drive vehicle according to “Driving Pattern”, EC-645.
- 3) Stop vehicle.
- 4) Select “MODE 1” with GST.

DTC P0455 EVAP CONTROL SYSTEM (GROSS LEAK)


VG33E

DTC Confirmation Procedure (Cont'd)

- If SRT of EVAP system is not set yet, go to the following step.
- If SRT of EVAP system is set, the result will be OK.
- 5) Turn ignition switch "OFF" and wait at least 5 seconds.
- 6) Start engine.
- It is not necessary to cool engine down before driving.**
- 7) Drive vehicle again according to the "Driving Pattern", EC-645.
- 8) Stop vehicle.
- 9) Select "MODE 3" with GST.
- If P0440 is displayed on the screen, go to "Diagnostic Procedure", EC-959.
- If P1447 is displayed on the screen, go to "Diagnostic Procedure" for "DTC P1447", EC-1106.
- If P0440, P1440 and P1447 are not displayed on the screen, go to the following step.
- 10) Select "MODE 1" with GST.
- If SRT of EVAP system is set, the result will be OK.
- If SRT of EVAP system is not set, go to step 6.



Diagnostic Procedure

NEEC1286

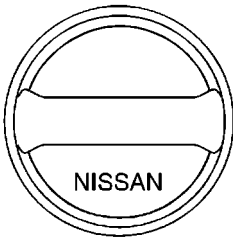1	CHECK FUEL FILLER CAP DESIGN	
<p>1. Turn ignition switch OFF. 2. Check for genuine NISSAN fuel filler cap design.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF915U</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 2.
NG	▶	Replace with genuine NISSAN fuel filler cap.

2	CHECK FUEL FILLER CAP INSTALLATION	
<p>Check that the cap is tightened properly by rotating the cap clockwise.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	<ul style="list-style-type: none"> ● Open fuel filler cap, then clean cap and fuel filler neck threads using air blower. ● Retighten until ratcheting sound is heard.

3	CHECK FUEL FILLER CAP FUNCTION	
Check for air releasing sound while opening the fuel filler cap.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

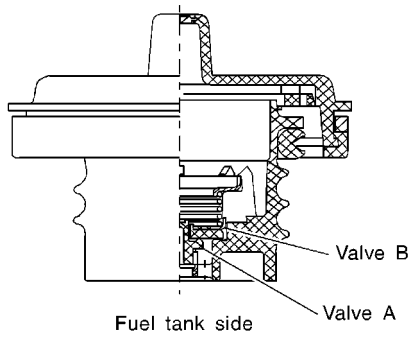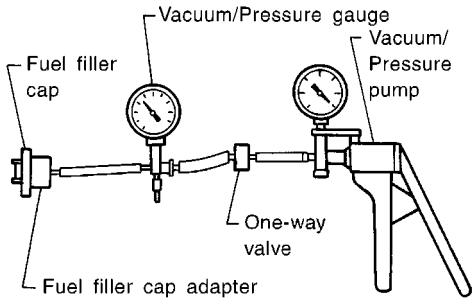4	CHECK FUEL TANK VACUUM RELIEF VALVE (BUILT INTO FUEL FILLER CAP)	
1. Wipe clean valve housing. 2. Check valve opening pressure and vacuum.		
		
SEF105W		
		
SEF943S		
<p>Pressure: 15.3 - 20.0 kPa (0.156 - 0.204 kg/cm², 2.22 - 2.90 psi)</p> <p>Vacuum: -6.0 to -3.3 kPa (-0.061 to -0.034 kg/cm², -0.87 to -0.48 psi)</p> <p>CAUTION: Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.</p>		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace fuel filler cap with a genuine one.

5	CHECK EVAP PURGE LINE	
Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks, improper connection or disconnection. Refer to "Evaporative Emission System", EC-613.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Repair or reconnect the hose.

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX



DTC P0455 EVAP CONTROL SYSTEM (GROSS LEAK)

VG33E

Diagnostic Procedure (Cont'd)

6	CLEAN EVAP PURGE LINE
Clean EVAP purge line (pipe and rubber tube) using air blower.	
▶	GO TO 7.

7	CHECK EVAP CANISTER VENT CONTROL VALVE, O-RING AND CIRCUIT
Refer to "DTC Confirmation Procedure", EC-976.	
OK or NG	
OK	▶ GO TO 8.
NG	▶ Repair or replace EVAP canister vent control valve and O-ring or harness/connector.

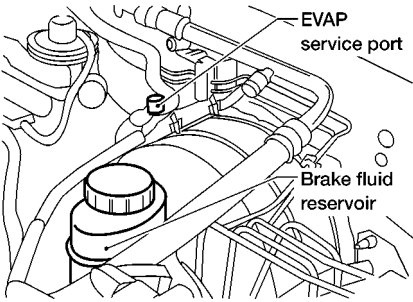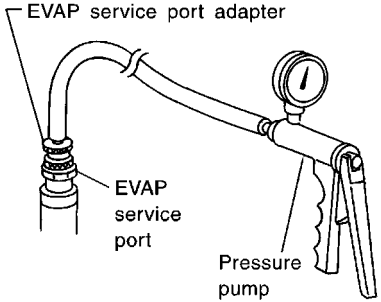8	INSTALL THE PRESSURE PUMP
To locate the EVAP leak, install EVAP service port adapter and pressure pump to EVAP service port securely.	
	
AEC649A	
	
SEF916U	
NOTE: Improper installation of the EVAP service port adapter to the EVAP service port may cause leaking.	
Models with CONSULT-II	▶ GO TO 9.
Models without CONSULT-II	▶ GO TO 10.


9 CHECK FOR EVAP LEAK

Ⓟ With CONSULT-II

1. Turn ignition switch ON.
2. Select "EVAP SYSTEM CLOSE" of "WORK SUPPORT" mode with CONSULT-II.
3. Touch "START" and apply pressure into the EVAP line until the pressure indicator reaches the middle of the bar graph.

NOTE:


- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

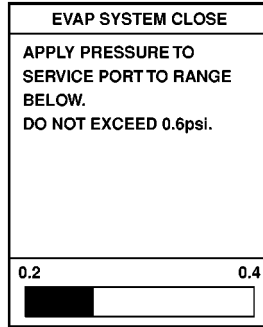

PEF917U

4. Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-617.

Leak detector

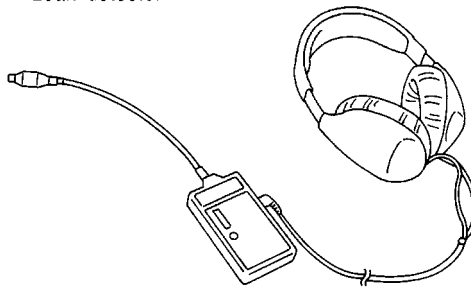

SEF200U

OK or NG


OK	▶	GO TO 11.
NG	▶	Repair or replace.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

10 CHECK FOR EVAP LEAK

⊗ Without CONSULT-II

1. Turn ignition switch OFF.
2. Apply 12 volts DC to EVAP canister vent control valve. The valve will close. (Continue to apply 12 volts until the end of test.)
3. Apply 12 volts DC to vacuum cut valve bypass valve. The valve will open. (Continue to apply 12V until the end of test.)

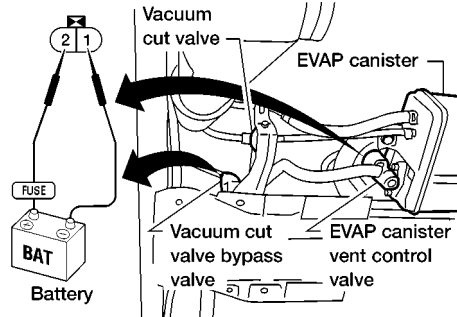

AEC632A


4. Pressurize the EVAP line using pressure pump with 1.3 to 2.7 kPa (10 to 20 mmHg, 0.39 to 0.79 inHg), then remove pump and EVAP service port adapter.

NOTE:

- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

5. Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-617.

Leak detector

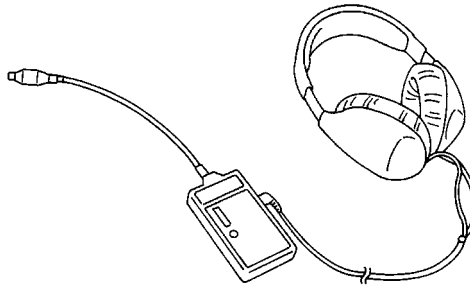

SEF200U

OK or NG

OK	▶	GO TO 12.
NG	▶	Repair or replace.

11	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION																					
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port. 2. Start engine. 3. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode. 4. Touch "Qu" on CONSULT-II screen to increase "PURG VOL CONT/V" opening to 100.0%. 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm. 																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>PURG VOL CONT/V</td> <td style="text-align: center;">0.0%</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <th>CMPS~RPM(REF)</th> <th>XXX rpm</th> </tr> </thead> <tbody> <tr> <td>FR O2 MNTR-B2</td> <td style="text-align: center;">RICH</td> </tr> <tr> <td>FR O2 MNTR-B1</td> <td style="text-align: center;">RICH</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td style="text-align: center;">XXX %</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td style="text-align: center;">XXX %</td> </tr> <tr> <td>THRTL POS SEN</td> <td style="text-align: center;">XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>			ACTIVE TEST		PURG VOL CONT/V	0.0%	MONITOR		CMPS~RPM(REF)	XXX rpm	FR O2 MNTR-B2	RICH	FR O2 MNTR-B1	RICH	A/F ALPHA-B2	XXX %	A/F ALPHA-B1	XXX %	THRTL POS SEN	XXX V		
ACTIVE TEST																						
PURG VOL CONT/V	0.0%																					
MONITOR																						
CMPS~RPM(REF)	XXX rpm																					
FR O2 MNTR-B2	RICH																					
FR O2 MNTR-B1	RICH																					
A/F ALPHA-B2	XXX %																					
A/F ALPHA-B1	XXX %																					
THRTL POS SEN	XXX V																					
<p>Vacuum should exist.</p> <p style="text-align: right;">PEF882U</p> <p style="text-align: center;">OK or NG</p>																						
OK	▶	GO TO 14.																				
NG	▶	GO TO 13.																				

12	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION	
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine. 3. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port. 4. Start engine and let it idle for at least 80 seconds. 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm. <p>Vacuum should exist.</p>		
<p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 15.
NG	▶	GO TO 13.

13	CHECK VACUUM HOSE	
<p>Check vacuum hoses for clogging or disconnection. Refer to "Vacuum Hose Drawing", EC-607.</p>		
<p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 14.
OK (Without CONSULT-II)	▶	GO TO 15.
NG	▶	Repair or reconnect the hose.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

14 CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Ⓟ With CONSULT-II


1. Start engine.
2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.

ACTIVE TEST	
PURG VOL CONT/V	0.0%
MONITOR	
CMPS~RPM(REF)	XXX rpm
FR O2 MNTR-B2	RICH
FR O2 MNTR-B1	RICH
A/F ALPHA-B2	XXX %
A/F ALPHA-B1	XXX %
THRTL POS SEN	XXX V

PEF882U

If OK, inspection end. If NG, go to following step.

3. Check air passage continuity.

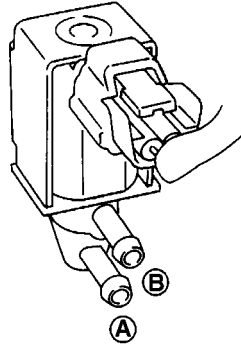

SEF660U

Condition PURG VOL CONT/V value	Air passage continuity between A and B
100.0%	Yes
0.0%	No


MTBL0241

OK or NG

OK	▶	GO TO 16.
NG	▶	Replace EVAP canister purge volume control solenoid valve.

15 CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE


⊗ Without CONSULT-II
Check air passage continuity.

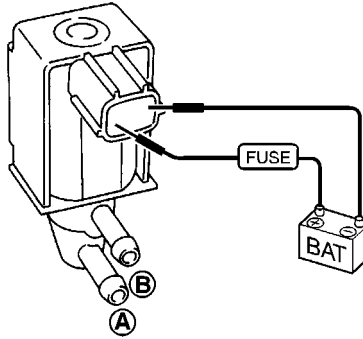

SEF661U

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	Yes
No supply	No

MTBL0242

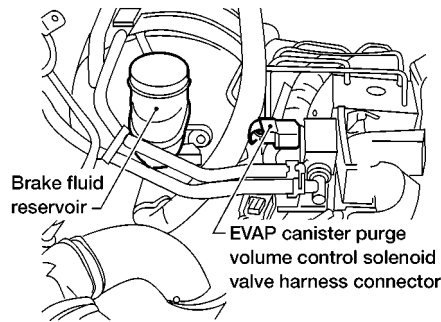

AEC652A


OK or NG

OK	▶	GO TO 16.
NG	▶	Replace EVAP canister purge volume control solenoid valve.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

16 CHECK ABSOLUTE PRESSURE SENSOR

1. Remove absolute pressure sensor with its harness connector connected.
2. Remove hose from absolute pressure sensor.
3. Turn ignition switch ON and check output voltage between ECM terminal 45 and engine ground.

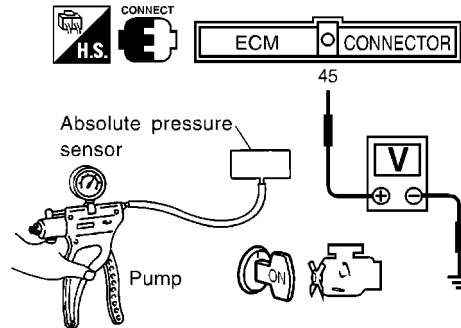

SEF749U


The voltage should be 3.2 to 4.8V.

4. Use pump to apply vacuum of -26.7 kPa (-200 mmHg, -7.87 inHg) to absolute pressure sensor as shown in figure and check the output voltage.

The voltage should be 1.0 to 1.4V lower than the value measured in step 3.

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -93.3 kPa (-700 mmHg, -27.56 inHg) or over 101.3 kPa (760 mmHg, 29.92 inHg) of pressure.

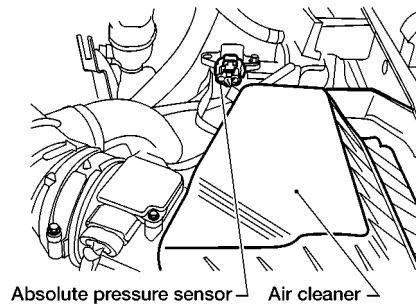


AEC642A

OK or NG

OK	▶	GO TO 17.
NG	▶	Replace absolute pressure sensor.

17 CHECK FUEL TANK TEMPERATURE SENSOR


Check resistance by heating with hot water or heat gun as shown in the figure.

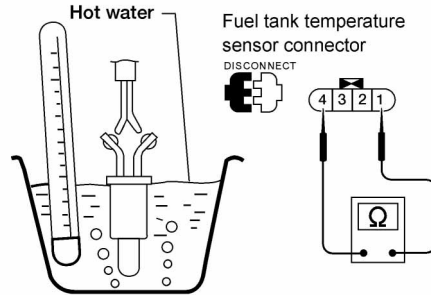

AEC052B

Temperature °C (°F)	Resistance kΩ
20 (68)	2.3 - 2.7
50 (122)	0.79 - 0.90

MTBL0234

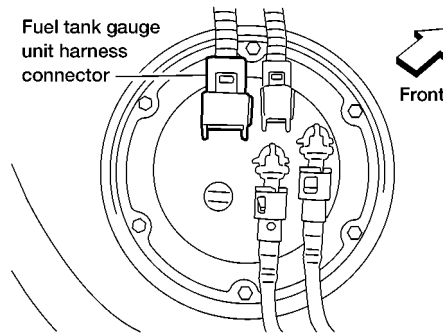

AEC933A

OK or NG

OK	▶	GO TO 18.
NG	▶	Replace fuel tank temperature sensor.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

18 CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

1. Remove EVAP control system pressure sensor with its harness connector connected.
2. Remove hose from EVAP control system pressure sensor.
3. Turn ignition switch ON.
4. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.
5. Check input voltage between ECM terminal 62 and ground.

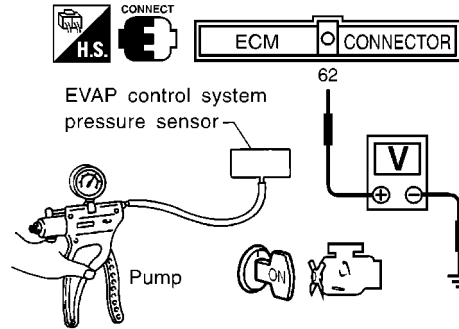

SEF894U

Pressure (Relative to atmospheric pressure)	Voltage (V)
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6


MTBL0246

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.


CAUTION:

- Never apply force to the air hole protector of the sensor if equipped.

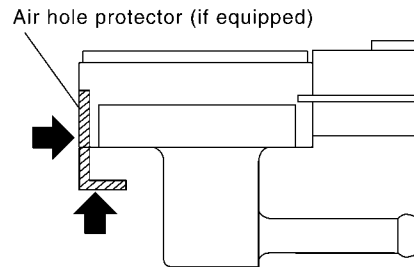

SEF799W

- Discard and EVAP control system pressure sensor which has been dropped from a height of more than 0.5m (19.7in) onto a hard surface such as a concrete floor; use a new one.

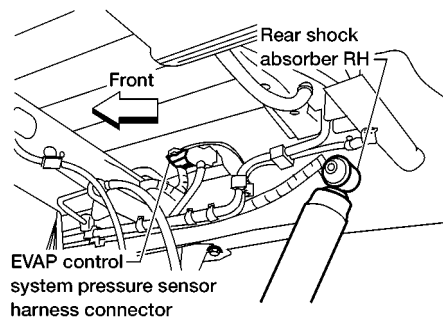

AEC651A

OK or NG

OK ► GO TO 19.

NG ► Replace EVAP control system pressure sensor.

DTC P0455 EVAP CONTROL SYSTEM (GROSS LEAK)

VG33E

Diagnostic Procedure (Cont'd)

19	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
▶	INSPECTION END

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT


HA

SC

EL

IDX

Component Description

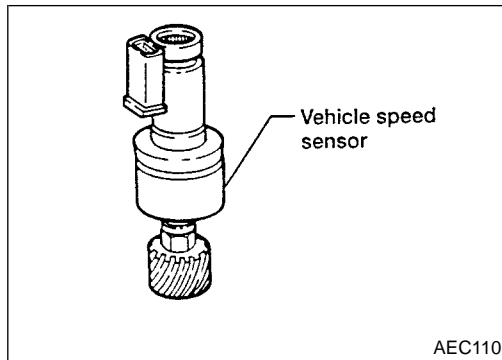

Component Description

The vehicle speed sensor is installed in the transaxle. It contains a pulse generator which provides a vehicle speed signal to the speedometer. The speedometer then sends a signal to the ECM.

NEEC0242

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

NEEC0243

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
29	G/B	Vehicle speed sensor	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Lift up the vehicle ● In 1st gear position ● Vehicle speed is 40 km/h (25 MPH) 	2 - 3V

On Board Diagnosis Logic

Malfunction is detected when the almost 0 km/h (0 MPH) signal from vehicle speed sensor is sent to ECM even when vehicle is being driven.

NEEC0244

POSSIBLE CAUSE

- Harness or connector
(The vehicle speed sensor circuit is open or shorted.)
- Vehicle speed sensor

NEEC0244S01

DTC Confirmation Procedure

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

NEEC0245

TESTING CONDITION:

Steps 1 and 2 may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

DTC P0500 VEHICLE SPEED SENSOR (VSS)

VG33E

DTC Confirmation Procedure (Cont'd)

5

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
COOLAN TEMP/S	XXX °C
B/FUEL SCHDL	XXX msec
PW/ST SIGNAL	OFF
VHCL SPEED SE	XXX km/h

PEF199V

With CONSULT-II

- 1) Start engine
- 2) Read "VHCL SPEED SE" in "DATA MONITOR" mode with CONSULT-II. The vehicle speed on CONSULT-II should exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.
If NG, go to "Diagnostic Procedure", EC-1009.
If OK, go to following step.
- 3) Select "DATA MONITOR" mode with CONSULT-II.
- 4) Warm engine up to normal operating temperature.
- 5) Maintain the following conditions for at least 10 consecutive seconds.

CMPS-RPM (REF)	1,400 - 2,800 rpm (A/T models) 2,000 - 3,000 rpm (M/T models)
COOLAN TEMP/S	More than 70°C (158°F)
B/FUEL SCHDL	2.3 - 4.5 msec (A/T models) 3.1 - 5.5 msec (M/T models)
Selector lever	Suitable position
PW/ST SIGNAL	OFF

- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-1009.

Overall Function Check

Use this procedure to check the overall function of the vehicle speed sensor circuit. During this check, a 1st trip DTC might not be confirmed.

With GST






- 1) Lift up drive wheels.
- 2) Start engine.
- 3) Read vehicle speed sensor signal in "MODE 1" with GST. The vehicle speed sensor on GST should be able to exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.
- 4) If NG, go to "Diagnostic Procedure", EC-1009.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Wiring Diagram

NEEC0247

EC-VSS-01

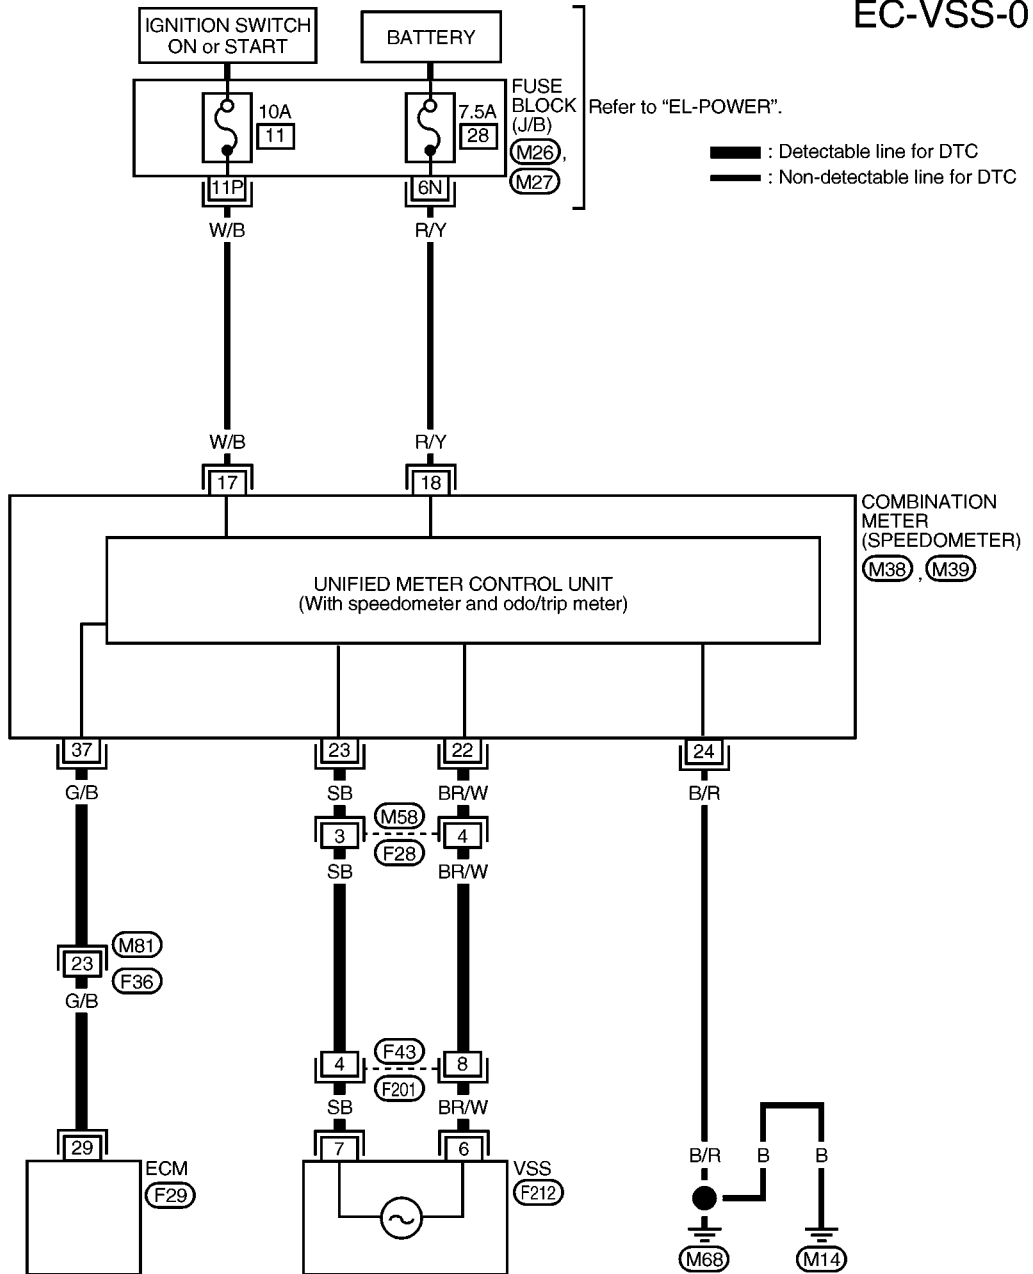

Refer to the following.
 F29 - ELECTRICAL UNITS

Diagnostic Procedure

NEEC0248

1	CHECK VEHICLE SPEED SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
	1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector and combination meter harness connector. 3. Check harness continuity between ECM terminal 29 and meter terminal 34. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power. <div style="text-align: center;">OK or NG</div>	
	OK	▶ GO TO 3.
	NG	▶ GO TO 2.

GI
MA
EM
LC

2	DETECT MALFUNCTIONING PART	
	Check the following. <ul style="list-style-type: none"> ● Harness connectors M81, F36 ● Harness for open or short between ECM and combination meter 	
	▶	Repair open circuit or short to ground or short to power in harness or connectors.

EC
FE
CL

3	CHECK SPEEDOMETER FUNCTION	
	Make sure that speedometer functions properly. <div style="text-align: center;">OK or NG</div>	
	OK	▶ GO TO 5.
	NG	▶ GO TO 4.

MT
AT
TF

4	CHECK SPEEDOMETER CIRCUIT FOR OPEN AND SHORT	
	Check the following. <ul style="list-style-type: none"> ● Harness connectors M58, F28 ● Harness connectors F43, F201 ● Harness for open or short between combination meter and vehicle speed sensor <div style="text-align: center;">OK or NG</div>	
	OK	▶ Check combination meter and vehicle speed sensor. Refer to EL section.
	NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

PD
AX
SU
BR

5	CHECK INTERMITTENT INCIDENT	
	Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717. <div style="text-align: center;">INSPECTION END</div>	

ST
RS

BT
HA
SC
EL

IDX

DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

VG33E

Description


Description SYSTEM DESCRIPTION

NEEC0249

NEEC0249S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	Idle air control	IACV-AAC valve
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
Park/neutral position (PNP) switch	Park/neutral position		
Air conditioner switch	Air conditioner operation		
Power steering oil pressure switch	Power steering load signal		
Battery	Battery voltage		
Vehicle speed sensor	Vehicle speed		
Ambient air temperature switch	Ambient air temperature		
Intake air temperature sensor	Intake air temperature		
Absolute pressure sensor	Ambient barometric pressure		

This system automatically controls engine idle speed to a specified level. Idle speed is controlled through fine adjustment of the amount of air which bypasses the throttle valve via IACV-AAC valve. The IACV-AAC valve repeats ON/OFF operation according to the signal sent from the ECM. The camshaft position sensor detects the actual engine speed and sends a signal to the ECM. The ECM then controls the ON/OFF time of the IACV-AAC valve so that engine speed coincides with the target value memorized in ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warm up, deceleration, and engine load (air conditioner and power steering).

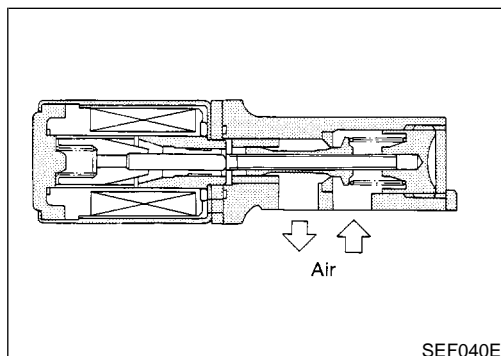

COMPONENT DESCRIPTION IACV-AAC Valve

NEEC0249S02

NEEC0249S0201

The IACV-AAC valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of air that will flow through the valve. The more air that flows through the valve, the higher the idle speed.

DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

VG33E

CONSULT-II Reference Value in Data Monitor Mode

CONSULT-II Reference Value in Data Monitor Mode

NEEC0250

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
IACV-AAC/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle	10 - 20%
		2,000 rpm	—

ECM Terminals and Reference Value

NEEC0251

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
101	OR/L	IACV-AAC valve	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	<p>8 - 11V</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 3,000 rpm 	<p>7 - 10V</p>

On Board Diagnosis Logic

NEEC0252

Malfunction is detected when
(Malfunction A) the IACV-AAC valve does not operate properly,
(Malfunction B) the IACV-AAC valve does not operate properly.

POSSIBLE CAUSE

NEEC0252S01

- Harness or connectors
(The IACV-AAC valve circuit is open.)
- Harness or connectors
(The IACV-AAC valve circuit is shorted.)
- IACV-AAC valve

DTC Confirmation Procedure

NEEC0253

NOTE:

- If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.
- Perform "PROCEDURE FOR MALFUNCTION A" first. If 1st trip DTC cannot be confirmed, perform "PROCEDURE FOR MALFUNCTION B".

DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

VG33E

DTC Confirmation Procedure (Cont'd)

2

DATA MONITOR	
MONITORING	NO FAIL
COOLAN TEMP/S	XXX °C

PEF002P

PROCEDURE FOR MALFUNCTION A

NEEC0253S01

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V with ignition switch "ON".

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 2 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-1014.

With GST

Follow the procedure "With CONSULT-II".

4

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
COOLAN TEMP/S	XXX °C

PEF361V

PROCEDURE FOR MALFUNCTION B

NEEC0253S02

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" again and select "DATA MONITOR" mode with CONSULT-II.
- 4) Start engine and run it for at least 1 minute at idle speed.
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-1014.

With GST

Follow the procedure "With CONSULT-II".

DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE


VG33E

Wiring Diagram

Wiring Diagram

NEEC0254

EC-AAC/V-01

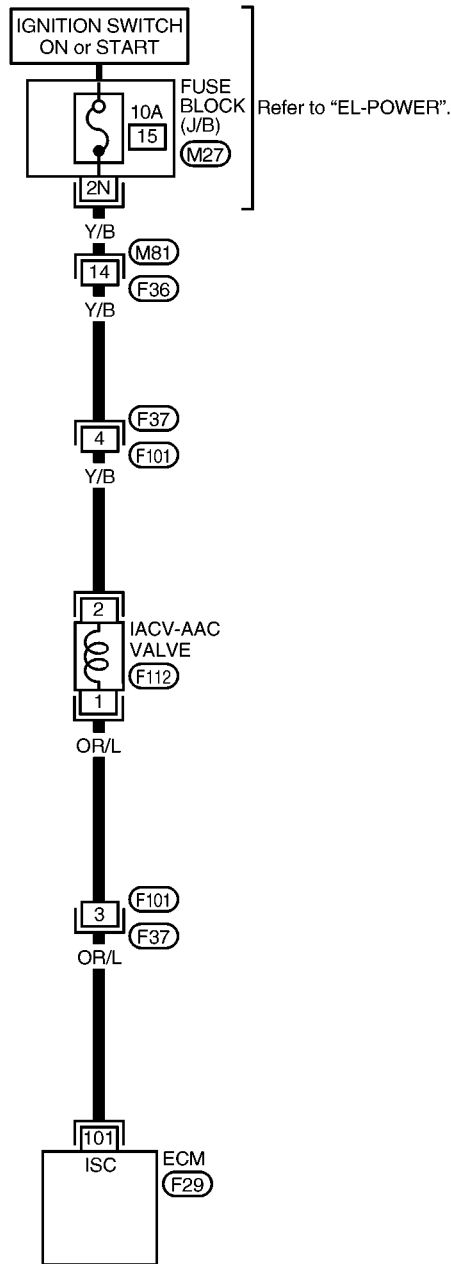

— : Detectable line for DTC
— : Non-detectable line for DTC

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS



BT

HA

SC

EL

IDX

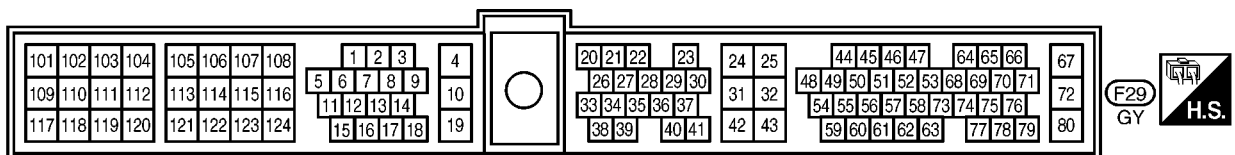

AEC963A



DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0255

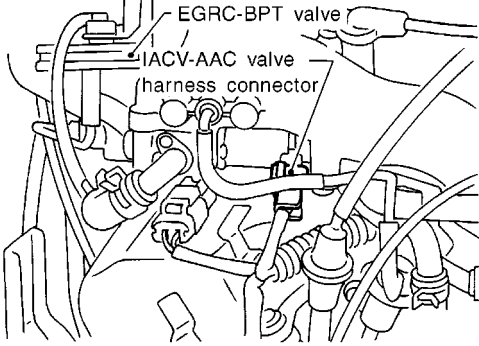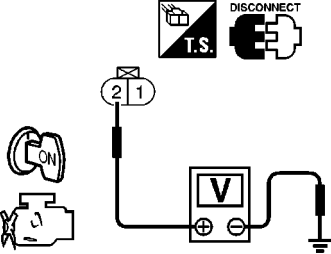1	CHECK IACV-AAC VALVE POWER SUPPLY CIRCUIT
<p>1. Stop engine. 2. Disconnect IACV-AAC valve harness connector.</p> <div style="text-align: center;">  </div> <p>3. Turn ignition switch "ON". 4. Check voltage between terminal 2 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p style="color: blue;">Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 3.
NG	▶ GO TO 2.

SEF007S

SEF651W

2	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M81, F36 ● Harness connectors F37, F101 ● Fuse block (J/B) connector M27 ● 10A fuse ● Harness for open or short between IACV-AAC valve and fuse 	
▶	Repair harness or connectors.

3	CHECK IACV-AAC VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 101 and IACV-AAC valve terminal 1. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.


DTC P0505 IDLE AIR CONTROL VALVE (IACV) — AUXILIARY AIR CONTROL (AAC) VALVE

VG33E

Diagnostic Procedure (Cont'd)

4	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Harness connectors F101, F37 ● Harness for open or short between IACV-AAC valve and ECM 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA

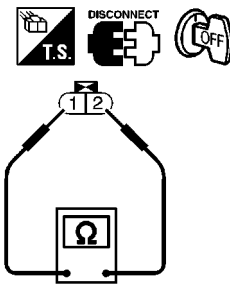5	CHECK IACV-AAC VALVE	
1. Disconnect IACV-AAC valve harness connector. 2. Remove IACV-AAC valve. ● Check IACV-AAC valve resistance.		
		
SEF202V		
<p>Resistance: Approximately 10Ω [at 20°C (68°F)]</p> <ul style="list-style-type: none"> ● Check plunger for seizing or sticking. ● Check for broken spring. 3. Supply battery voltage between IACV-AAC valve connector terminals. Plunger should move.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Replace IACV-AAC valve.

EM
LC
EC


FE
CL
MT
AT
TF

PD
AX

6	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.		
▶		INSPECTION END

SU
BR
ST
RS
BT
HA
SC
EL
IDX

Component Description

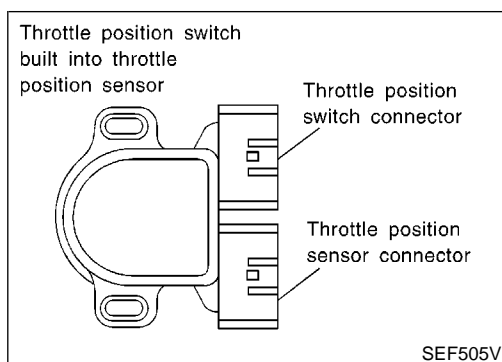

Component Description

A closed throttle position switch and wide open throttle position switch are built into the throttle position sensor unit. The wide open throttle position switch is used only for A/T control. NEEC0256

When the throttle valve is in the closed position, the closed throttle position switch sends a voltage signal to the ECM. The ECM only uses this signal to open or close the EVAP canister purge volume control solenoid valve when the throttle position sensor is malfunctioning.

CONSULT-II Reference Value in Data Monitor Mode

NEEC0257

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
CLSD THL/P SW	● Engine: After warming up, idle the engine	Throttle valve: Idle position ON
		Throttle valve: Slightly open OFF

ECM Terminals and Reference Value

NEEC0258

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
28	BR/W	Throttle position switch (Closed position)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Accelerator pedal fully released 	BATTERY VOLTAGE (11 - 14V)
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Accelerator pedal depressed 	Approximately 0V

On Board Diagnosis Logic

Malfunction is detected when battery voltage from the closed throttle position switch is sent to ECM with the throttle valve opened. NEEC0259

POSSIBLE CAUSE

NEEC0259S01

- Harness or connectors (The closed throttle position switch circuit is shorted.)
- Closed throttle position switch
- Throttle position sensor

NEEC0260

4	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS~RPM (REF) XXX rpm	
	COOLAN TEMP/S XXX °C	
	CLSD THL/PS	ON

SEF377X

6	DATA MONITOR	
	MONITORING	NO FAIL
	COOLAN TEMP/S XXX °C	
	VHCL SPEED SE XXX km/h	
	THRT POS SEN	XXX V

PEF329U

DTC Confirmation Procedure

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch “OFF”, wait at least 5 seconds and then start engine.
- 3) Select “CLSD THL/P SW” in “DATA MONITOR” mode.
- 4) Check the signal under the following conditions.

Condition	Signal indication
Throttle valve: Idle position	ON
Throttle valve: Slightly open	OFF

If the result is NG, go to “Diagnostic Procedure”, EC-1019.
If OK, go to following step.

- 5) Select “DATA MONITOR” mode with CONSULT-II.
- 6) Drive the vehicle for at least 5 consecutive seconds under the following condition.

THRTL POS SEN	More than 2.5V
VHCL SPEED SE	More than 5 km/h (3 MPH)
Selector lever	Suitable position
Driving location	Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

- 7) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-1019.

Overall Function Check

Use this procedure to check the overall function of the closed throttle position switch circuit. During this check, a 1st trip DTC might not be confirmed.


Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Check the voltage between ECM terminal 28 (Closed throttle position switch signal) and ground under the following conditions.

At idle: Battery voltage

At 2,000 rpm: Approximately 0V

- 3) If NG, go to “Diagnostic Procedure”, EC-1019.

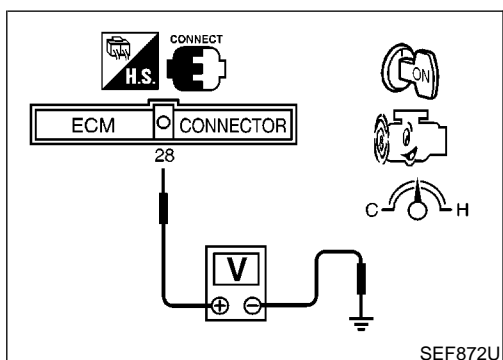

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0510 CLOSED THROTTLE POSITION SWITCH







VG33E

Wiring Diagram

Wiring Diagram

NEEC0262



EC-TP/SW-01

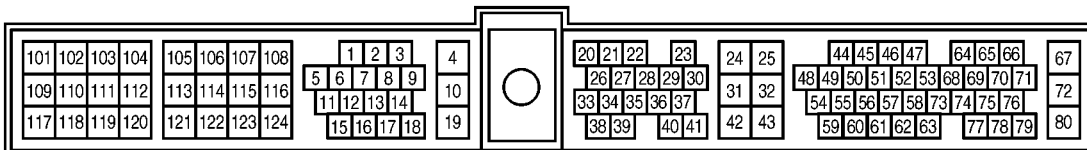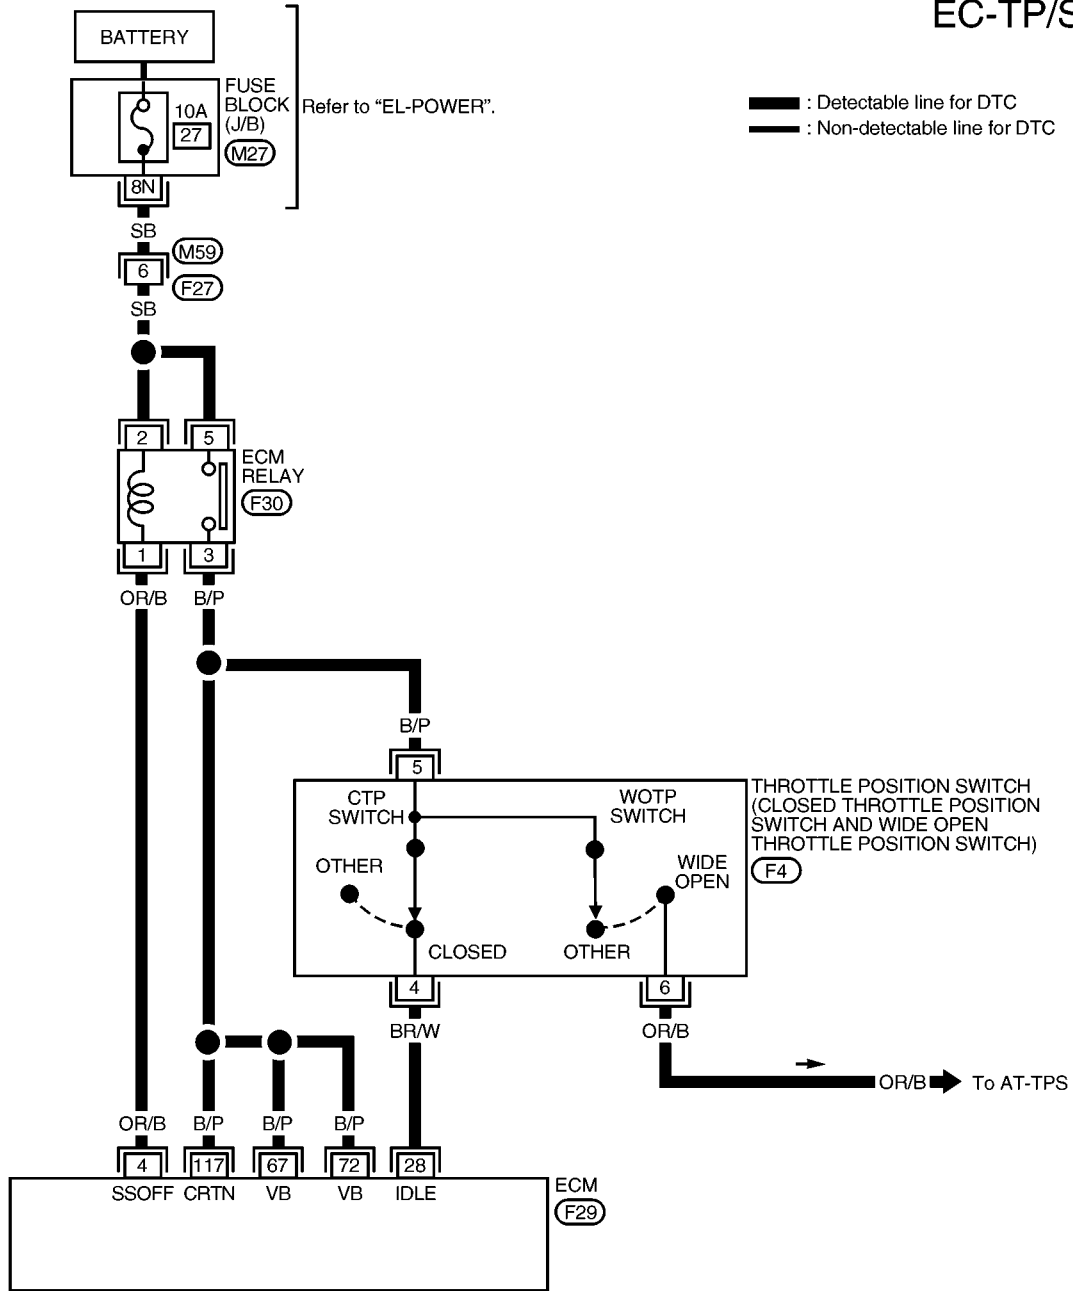

AEC964A

Diagnostic Procedure

NEEC0263

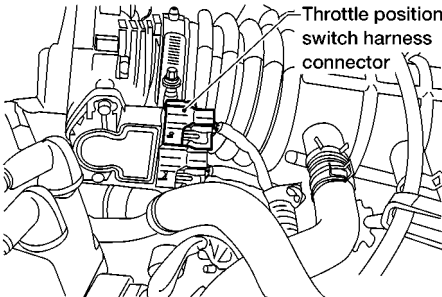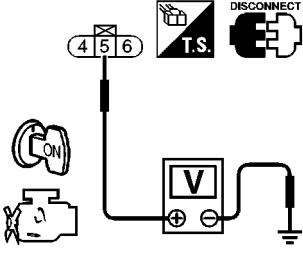1	CHECK CLOSED THROTTLE POSITION SWITCH POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect throttle position switch harness connector.</p> <div style="text-align: center;">  </div> <p>3. Turn ignition switch "ON". 4. Check voltage between terminal 5 and engine ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p>Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

AEC653A
SEF715U

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness for open or short between throttle position switch and ECM relay ● Harness for open or short between throttle position switch and ECM 		
▶		Repair harness or connectors.

3	CHECK CLOSED THROTTLE POSITION SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 28 and switch terminal 4. Refer to Wiring Diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P0510 CLOSED THROTTLE POSITION SWITCH

VG33E

Diagnostic Procedure (Cont'd)

4		ADJUST THROTTLE POSITION SWITCH												
Check the following items. Refer to "Basic Inspection", EC-680.														
		<table border="1"><thead><tr><th>Items</th><th>Specifications</th></tr></thead><tbody><tr><td>Ignition timing</td><td>15° ± 2° BTDC</td></tr><tr><td>Base idle speed</td><td>700 ± 50 rpm (in "P" or "N" position)</td></tr><tr><td>Closed throttle position switch idle position adjustment</td><td>Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF</td></tr><tr><td>Target idle speed</td><td>750 ± 50 rpm (in "P" or "N" position)</td></tr></tbody></table>	Items	Specifications	Ignition timing	15° ± 2° BTDC	Base idle speed	700 ± 50 rpm (in "P" or "N" position)	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF	Target idle speed	750 ± 50 rpm (in "P" or "N" position)		
Items	Specifications													
Ignition timing	15° ± 2° BTDC													
Base idle speed	700 ± 50 rpm (in "P" or "N" position)													
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF													
Target idle speed	750 ± 50 rpm (in "P" or "N" position)													
MTBL0226														
with CONSULT-II	▶	GO TO 5.												
without CONSULT-II	▶	GO TO 6.												

5		CHECK CLOSED THROTTLE POSITION SWITCH								
 With CONSULT-II										
<ol style="list-style-type: none">1. Start engine and warm it up to normal operating temperature.2. Turn ignition switch OFF.3. Remove vacuum hose connected to throttle opener (if so equipped).4. Connect suitable vacuum hose to vacuum pump and the throttle opener.5. Apply vacuum [more than -40.0kPa (-300mmHg, -11.81inHg)] until the throttle drum becomes free from the rod of the throttle opener.6. Turn ignition switch ON.7. Select "DATA MONITOR" mode with CONSULT-II.8. Check indication of "CLSD THL/P SW".										
Measurement must be made with closed throttle position switch installed in vehicle.										
		<table border="1"><thead><tr><th>Throttle valve conditions</th><th>Continuity</th></tr></thead><tbody><tr><td>Completely closed</td><td>Yes</td></tr><tr><td>Partially open or completely open</td><td>No</td></tr></tbody></table>	Throttle valve conditions	Continuity	Completely closed	Yes	Partially open or completely open	No		
Throttle valve conditions	Continuity									
Completely closed	Yes									
Partially open or completely open	No									
MTBL0247										
OK or NG										
OK	▶	GO TO 8.								
NG	▶	GO TO 7.								

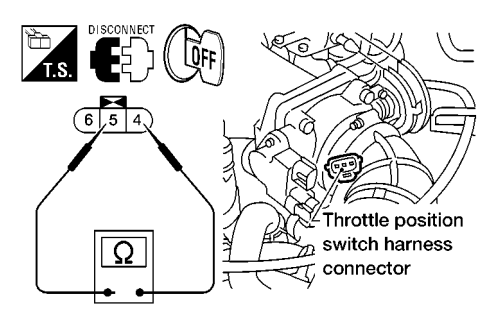6	CHECK CLOSED THROTTLE POSITION SWITCH	<p>Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch OFF. 3. Remove vacuum hose connected to throttle opener (if so equipped). 4. Connect suitable vacuum hose to vacuum pump and the throttle opener. 5. Apply vacuum [more than -40.0kPa (-300mmHg, -11.81inHg)] until the throttle drum becomes free from the rod of the throttle opener. 6. Disconnect closed throttle position switch harness connector. 7. Check continuity between closed throttle position switch terminals 4 and 5. <p>Resistance measurement must be made with closed throttle position switch installed in vehicle.</p> <div style="text-align: center;">  <p style="text-align: center;">Throttle position switch harness connector</p> </div> <table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Throttle valve conditions</th> <th style="width: 50%;">Continuity</th> </tr> </thead> <tbody> <tr> <td>Completely closed</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td>Partially open or completely open</td> <td style="text-align: center;">No</td> </tr> </tbody> </table>	Throttle valve conditions	Continuity	Completely closed	Yes	Partially open or completely open	No
Throttle valve conditions	Continuity							
Completely closed	Yes							
Partially open or completely open	No							

7	ADJUST THROTTLE POSITION SWITCH	<p>Check the following items. Refer to "Basic Inspection", EC-680.</p> <table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Items</th> <th style="width: 50%;">Specifications</th> </tr> </thead> <tbody> <tr> <td>Ignition timing</td> <td>15° ± 2° BTDC</td> </tr> <tr> <td>Base idle speed</td> <td>700 ± 50 rpm (in "P" or "N" position)</td> </tr> <tr> <td>Closed throttle position switch idle position adjustment</td> <td>Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF</td> </tr> <tr> <td>Target idle speed</td> <td>750 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table> <p style="text-align: right; margin-right: 20px;">MTBL0226</p> <p>If it is impossible to adjust closed throttle position switch in "Basic Inspection", replace closed throttle position switch.</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 5px;"> <tr> <td style="width: 20%;">OK (with CONSULT-II)</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 8.</td> </tr> <tr> <td>OK (without CONSULT-II)</td> <td style="text-align: center;">▶</td> <td>GO TO 9.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace throttle position switch.</td> </tr> </table>	Items	Specifications	Ignition timing	15° ± 2° BTDC	Base idle speed	700 ± 50 rpm (in "P" or "N" position)	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF	Target idle speed	750 ± 50 rpm (in "P" or "N" position)	OK (with CONSULT-II)	▶	GO TO 8.	OK (without CONSULT-II)	▶	GO TO 9.	NG	▶	Replace throttle position switch.	AX SU BR ST RS BT HA SC EL IDX
Items	Specifications																					
Ignition timing	15° ± 2° BTDC																					
Base idle speed	700 ± 50 rpm (in "P" or "N" position)																					
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF																					
Target idle speed	750 ± 50 rpm (in "P" or "N" position)																					
OK (with CONSULT-II)	▶	GO TO 8.																				
OK (without CONSULT-II)	▶	GO TO 9.																				
NG	▶	Replace throttle position switch.																				

DTC P0510 CLOSED THROTTLE POSITION SWITCH


VG33E

Diagnostic Procedure (Cont'd)

8 CHECK THROTTLE POSITION SENSOR

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Stop engine (ignition switch OFF).
3. Remove the vacuum hose connected to the throttle opener (if so equipped).
4. Connect suitable vacuum hose to the vacuum pump and the opener.
5. Apply vacuum [more than -40.0kPa (-300mmHg, -11.81inHg)] until the throttle drum becomes free from the rod of the throttle opener.

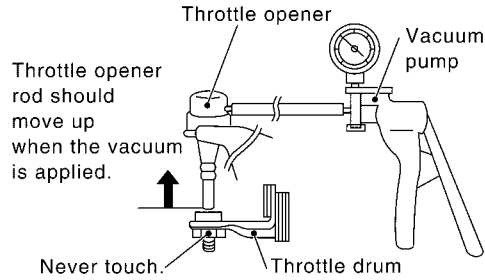

SEF793W

6. Turn ignition switch ON.
7. Select "DATA MONITOR" mode with CONSULT-II.
8. Check voltage of "THRTL POS SEN".

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM (REF)	XXXrpm
COOLAN TEMP/S	XXX°C
THRTL POS SEN	XXXV

Throttle valve conditions	THRTL POS SEN
Completely closed (a)	0.15 - 0.85V
Partially open	Between (a) and (b)
Completely open (b)	3.5 - 4.7V

SEF182X

Voltage measurement must be made with throttle position sensor installed in vehicle.

If NG, adjust closed throttle position switch. Refer to "Basic Inspection", EC-680.


OK or NG

OK	▶	GO TO 10.
NG	▶	Replace throttle position sensor.

9 CHECK THROTTLE POSITION SENSOR

⊗ Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Stop engine (ignition switch OFF).
3. Remove the vacuum hose connected to the throttle opener (if so equipped).
4. Connect suitable vacuum hose to the vacuum pump and the opener.
5. Apply vacuum [more than -40.0kPa (-300mmHg, -11.81inHg)] until the throttle drum becomes free from the rod of the throttle opener.

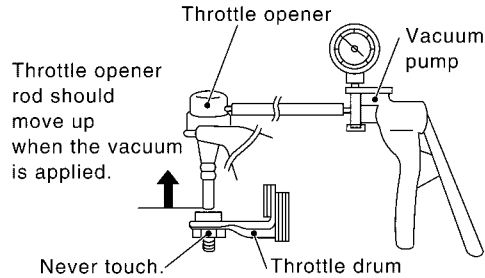

SEF793W

6. Turn ignition switch ON.
7. Check voltage between ECM terminal 23 (Throttle position sensor signal) and ground.
Voltage measurement must be made with throttle position sensor installed in vehicle.

Throttle valve conditions	Voltage
Completely closed (a)	0.15 - 0.85V
Partially open	Between (a) and (b)
Completely open (b)	3.5 - 4.7V

MTBL0231

If NG, adjust closed throttle position switch. Refer to "Basic Inspection", EC-680.

OK or NG

OK	▶	GO TO 10.
NG	▶	Replace throttle position sensor.

10 CHECK INTERMITTENT INCIDENT

Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.

	▶	INSPECTION END
--	---	-----------------------

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

System Description

NEEC0264

These circuit lines are used to control the smooth shifting up and down of A/T during the hard acceleration/ deceleration.

Voltage signals are exchanged between ECM and TCM (Transmission Control Module).

ECM Terminals and Reference Value

NEEC0265

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
26	PU/W	A/T signal No. 1	[Ignition switch "ON"] [Engine is running] ● Idle speed	6 - 8V
27	P/B	A/T signal No. 2	[Ignition switch "ON"] [Engine is running] ● Idle speed	6 - 8V
35	G/R	A/T signal No. 3	[Ignition switch "ON"]	0V

On Board Diagnosis Logic


NEEC0266

Malfunction is detected when ECM receives incorrect voltage from TCM (Transmission Control Module) continuously.

POSSIBLE CAUSE

NEEC0266S01

- Harness or connectors
 [The circuit between ECM and TCM (Transmission Control Module) is open or shorted.]

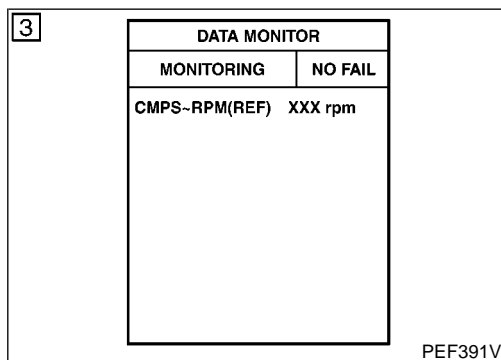

DTC Confirmation Procedure


NEEC0267

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

④ With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine, and rev engine more than 1,000 rpm once, then let it idle for more than 40 seconds.
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-1027.

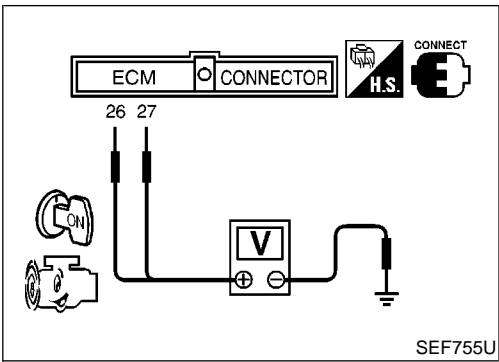

Overall Function Check

NEEC0268

Use this procedure to check the overall function of the A/T control circuit. During this check, a DTC might not be confirmed.

⊗ Without CONSULT-II

- 1) Start engine.
- 2) Check voltage between
ECM terminal 26 and ground.
ECM terminal 27 and ground.
Voltage: 6 - 8V
- 3) If NG, go to "Diagnostic Procedure", EC-1027.



- GI
- MA
- EM
- LC
- EC**
- FE
- CL
- MT
- AT
- TF
- PD
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- EL
- IDX

Wiring Diagram

NEEC0269

EC-AT/C-01



: Detectable line for DTC
 : Non-detectable line for DTC

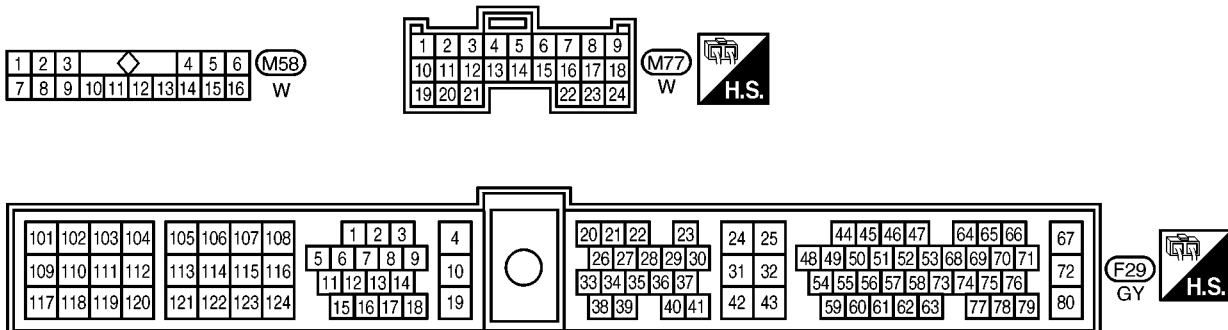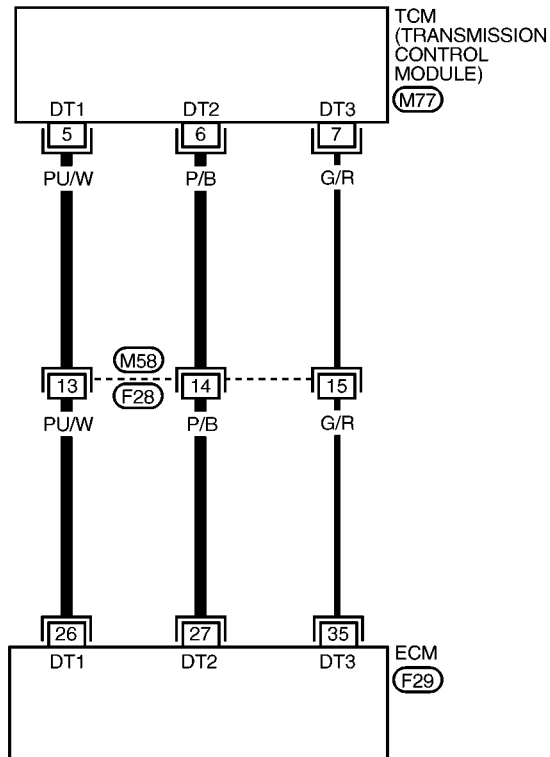

AEC965A

Diagnostic Procedure

NEEC0270

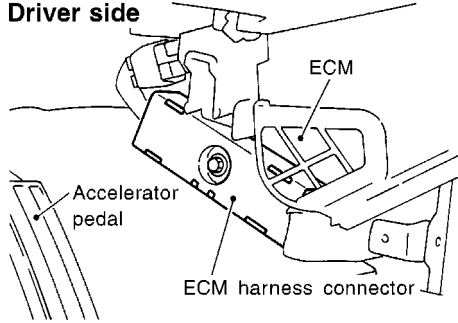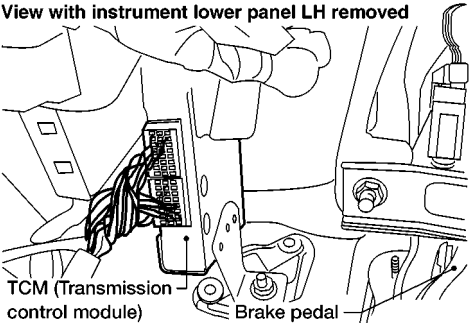1	CHECK A/T CONTROL INPUT SIGNAL CIRCUIT FOR OPEN	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector and TCM (Transmission Control Module) harness connector.</p> <div style="text-align: center;"> <p>Driver side</p>  <p>ECM Accelerator pedal ECM harness connector</p> </div> <div style="text-align: center;"> <p>View with instrument lower panel LH removed</p>  <p>TCM (Transmission control module) Brake pedal</p> </div> <p style="text-align: right;">SEF324V</p> <p style="text-align: right;">AEC655A</p> <p>3. Check harness continuity between ECM terminal 26 and terminal 5, ECM terminal 27 and terminal 6, ECM terminal 35 and terminal 7. Refer to Wiring Diagram. Continuity should exist.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M58, F28 ● Harness for open or short between ECM and TCM (Transmission Control Module) 		
▶		Repair harness or connectors.

3	CHECK A/T CONTROL INPUT SIGNAL CIRCUIT FOR SHORT	
<p>1. Check harness continuity between ECM terminal 26 and ground, ECM terminal 27 and ground, ECM terminal 35 and ground. Refer to Wiring Diagram. Continuity should not exist.</p> <p>2. Also check harness for short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	GO TO 4.


GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0600 A/T CONTROL

VG33E

Diagnostic Procedure (Cont'd)

4	DETECT MALFUNCTIONING PART
Check the harness for open or short between ECM and TCM (Transmission Control Module).	
▶	Repair open circuit or short to ground or short to power in harness.
5	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
▶	INSPECTION END

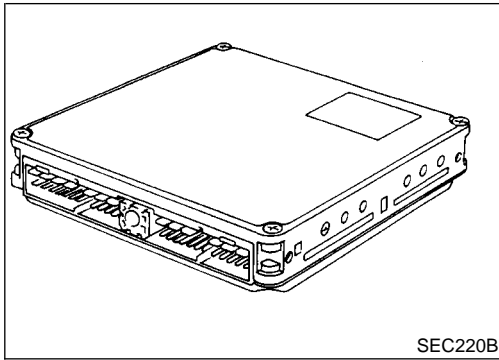

Component Description

The ECM consists of a microcomputer, diagnostic test mode selector, and connectors for signal input and output and for power supply. The unit controls the engine.

NEEC0271

GI

MA

EM

LC

On Board Diagnosis Logic

Malfunction is detected when ECM calculation function is malfunctioning.

NEEC0272

EC

POSSIBLE CAUSE

- ECM

NEEC0272S01

FE

CL

MT

DTC Confirmation Procedure

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.


NEEC0273

AT

TF

PD

AX

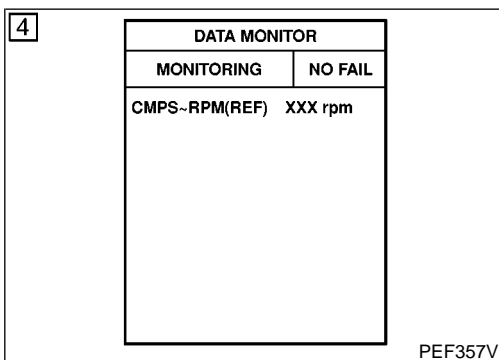

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine.
- 4) Run engine for at least 2 seconds at idle speed.
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-1030.

With GST

Follow the procedure "With CONSULT-II".

SU

BR

ST

RS

BT

HA




SC

EL

IDX

Diagnostic Procedure

NEEC0274

1	INSPECTION START	
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Select "SELF DIAG RESULTS" mode with CONSULT-II. 3. Touch "ERASE". 4. Perform "DTC Confirmation Procedure". See EC-1029. 5. Is the 1st trip DTC P0605 displayed again? 		
<p> With GST</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Select MODE 4 with GST. 3. Touch "ERASE". 4. Perform "DTC Confirmation Procedure". See EC-1029. 5. Is the 1st trip DTC P0605 displayed again? 		
<p> No Tools</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Erase the Diagnostic Test Mode II (Self-diagnostic results) memory. Refer to EC-651. 3. Perform "DTC Confirmation Procedure". See EC-1029. 4. Is the 1st trip DTC 0301 displayed again? 		
Yes or No		
Yes	▶	Replace ECM.
No	▶	INSPECTION END


Description SYSTEM DESCRIPTION

NEEC0275
NEEC0275S01

Sensor	Input Signal to ECM	ECM func-tion	Actuator
Camshaft position sensor	Engine speed	On board diagnosis	MAP/BARO switch solenoid valve
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
Vehicle speed sensor	Vehicle speed		

This system allows the absolute pressure sensor to monitor either ambient barometric pressure or intake manifold pressure. The MAP/BARO switch solenoid valve switches between two passages by ON-OFF pulse signals from the ECM. (One passage is from the intake air duct, the other is from the intake manifold.) Either ambient barometric pressure or intake manifold pressure is applied to the absolute pressure sensor.

Solenoid	Conditions
ON	<ul style="list-style-type: none"> ● For 5 seconds after turning ignition switch ON (Engine is not running.) <li style="text-align: center;">or ● For 5 seconds after starting engine <li style="text-align: center;">or ● More than 5 minutes after the solenoid valve shuts OFF.

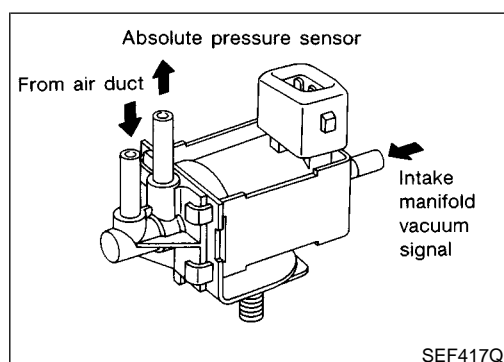

COMPONENT DESCRIPTION

The MAP/BARO switch solenoid valve switches its air flow passage according to the voltage signal sent from the ECM. When voltage is supplied from the ECM, the MAP/BARO switch solenoid turns "ON". Then, the absolute pressure sensor can monitor the ambient barometric pressure. When voltage is not supplied from the ECM, the MAP/BARO switch solenoid valve turns "OFF". Then, the sensor monitors intake manifold pressure.

CONSULT-II Reference Value in Data Monitor Mode

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION	
MAP/BARO SW/V	● Ignition switch: ON (Engine stopped)	MAP	
	● Engine speed: Idle	For 5 seconds after starting engine	BARO
		More than 5 seconds after starting engine	MAP

ECM Terminals and Reference Value

NEEC0277

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
118	Y/B	MAP/BARO switch sole- noid valve	[Ignition switch "ON"] <ul style="list-style-type: none"> ● Engine is not running ● For 5 seconds after ignition switch is turned "ON" 	0 - 1V
			[Engine is running] <ul style="list-style-type: none"> ● Idle (for 5 seconds after engine start) 	
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Engine is not running ● More than 5 seconds after ignition switch is turned "ON" 	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] <ul style="list-style-type: none"> ● Idle (More than 5 seconds after engine start) 	

On Board Diagnosis Logic

NEEC0278

Malfunction is detected when
 (Malfunction A) MAP/BARO switch solenoid valve receives the voltage supplied though ECM does not supply the voltage to the valve,
 (Malfunction B) There is little difference between MAP/BARO switch solenoid valve input voltage at ambient barometric pressure and voltage at intake manifold pressure.

POSSIBLE CAUSE

NEEC0278S01

Malfunction A

NEEC0278S0101

- Harness or connectors
(MAP/BARO switch solenoid valve circuit is open or shorted.)
- MAP/BARO switch solenoid valve

Malfunction B

NEEC0278S0102

- Harness or connectors
(MAP/BARO switch solenoid valve circuit is open or shorted.)
- Hoses
(Hoses are clogged, vent, kinked, disconnected or improperly connected.)
- Absolute pressure sensor
- MAP/BARO switch solenoid valve

DTC Confirmation Procedure

NEEC0279

Perform "PROCEDURE FOR MALFUNCTION A" first. If the 1st trip DTC cannot be confirmed, perform "PROCEDURE FOR MALFUNCTION B".

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

1	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF) XXX rpm	

PEF360V

PROCEDURE FOR MALFUNCTION A

NEEC0279S01

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V at ignition switch "ON".

With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Wait at least 10 seconds.
- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-1035.

With GST

Follow the procedure "With CONSULT-II".

GI

MA

EM

LC

EC

FE

CL

MT

5	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF) XXX rpm	
	COOLAN TEMP/S XXX °C	
	TANK F/TMP SE XXX °C	

PEF398V

PROCEDURE FOR MALFUNCTION B

NEEC0279S02

With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON" again and select "DATA MONITOR" mode with CONSULT-II.
- 4) Make sure that "TANK F/TMP SE" is more than 0°C (32°F).
- 5) Start engine and let it idle for at least 10 seconds.
- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-1035.

With GST

Follow the procedure "With CONSULT-II".

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC




EL

IDX

Wiring Diagram

NEEC0280

EC-SW/V-01

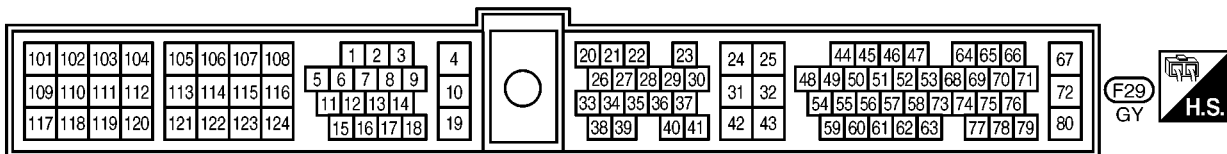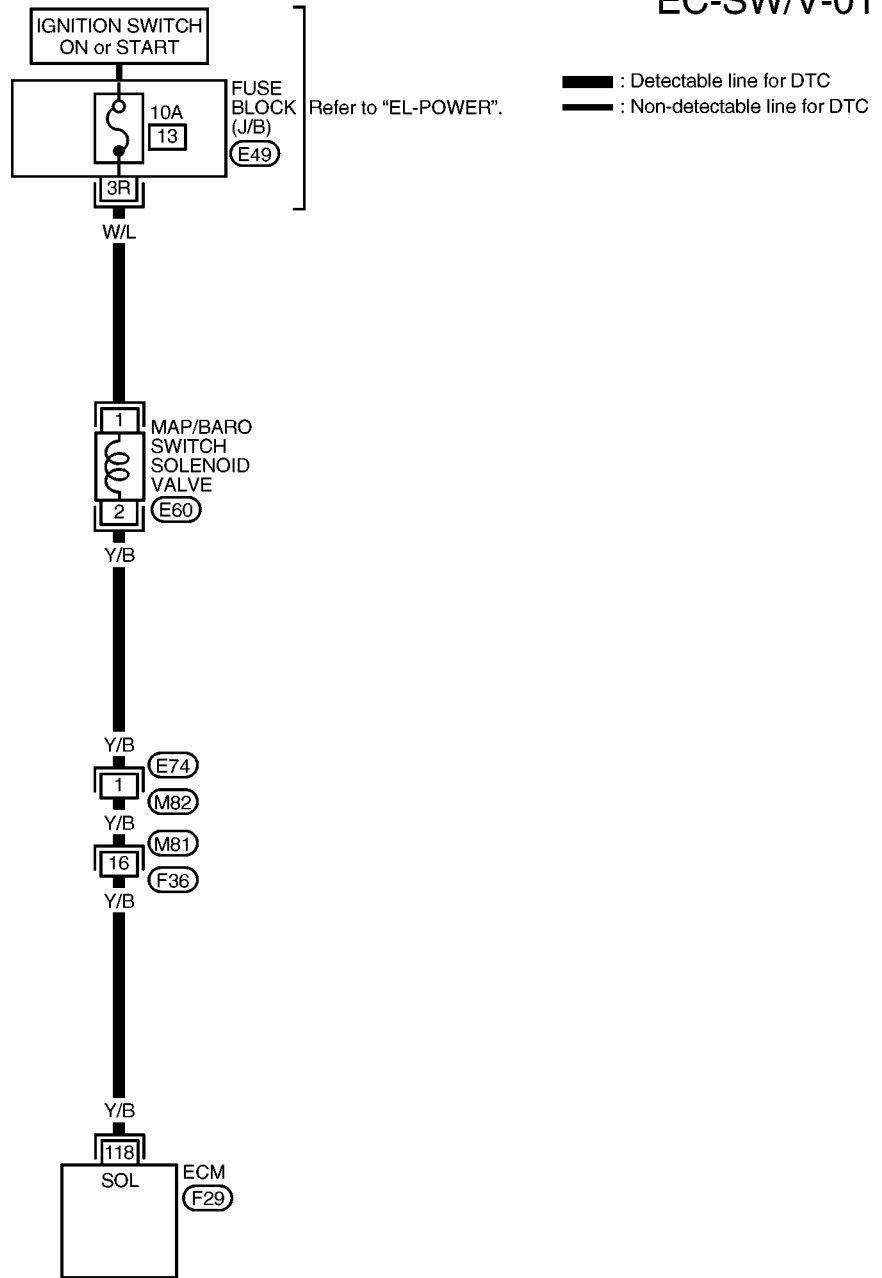

Diagnostic Procedure

If the trouble is duplicated after “PROCEDURE FOR MALFUNCTION A”, perform “PROCEDURE A” below. If the trouble is duplicated after “PROCEDURE FOR MALFUNCTION B”, perform “PROCEDURE B” on next page.

PROCEDURE A

1	CHECK MAP/BARO SWITCH SOLENOID VALVE POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch “OFF”. 2. Disconnect MAP/BARO switch solenoid valve harness connector. <small>aec063b</small></p> <p style="text-align: right;">AEC063B</p> <p>3. Turn ignition switch “ON”. 4. Check voltage between terminal 1 and ground with CONSULT-II or tester.</p>		
<p>Voltage: Battery voltage</p> <p>OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Fuse block (J/B) connector E49 ● 10A fuse ● Harness for open or short between MAP/BARO switch solenoid valve and fuse 		
▶		Repair harness or connectors.

3	CHECK MAP/BARO SWITCH SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch “OFF”. 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 118 and solenoid valve terminal 2. Refer to Wiring Diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p>		
<p>OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

4	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E74, M82 ● Harness connectors M81, F36 ● Harness for open or short between MAP/BARO switch solenoid valve and ECM 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

5 CHECK MAP/BARO SWITCH SOLENOID VALVE

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Perform "MAP/BARO SW/V" in "ACTIVE TEST" mode with CONSULT-II.
3. Check the following.
 - Condition: At idle under no-load
 - CONSULT-II display

ACTIVE TEST	
MAP/BARO SW/V	MAP
MONITOR	
CMPS-RPM (REF)	XXXrpm
MAP/BARO SW/V	MAP
ABSOL PRES/SE	XXXV

ACTIVE TEST	
MAP/BARO SW/V	BARO
MONITOR	
CMPS-RPM (REF)	XXXrpm
MAP/BARO SW/V	BARO
ABSOL PRES/SE	XXXV

MAP/BARO	ABSOL PRES/SE (Voltage)
BARO	More than 2.6V
MAP	Less than the voltage at BARO

SEF181X

- Time for voltage to change


MAP/BARO SW/V	Required time to switch
BARO to MAP	Less than 1 second
MAP to BARO	

MTBL0244

4. If NG, check solenoid valve as shown below.

Without CONSULT-II

1. Remove MAP/BARO switch solenoid valve.
2. Check air passage continuity.

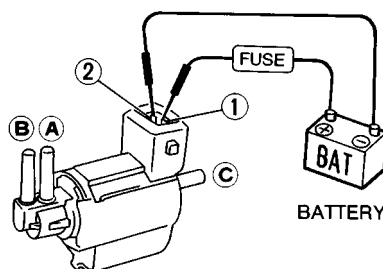

MEC488B

Condition	Air passage continuity between A and B	Air passage continuity between A and C
12V direct current supply between terminals 1 and 2	Yes	No
No supply	No	Yes

MTBL0237

3. If NG or operation takes more than 1 second, replace solenoid valve.

OK or NG

OK	▶	GO TO 6.
NG	▶	Replace MAP/BARO switch solenoid valve.

6 CHECK INTERMITTENT INCIDENT

Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.



▶
INSPECTION END

PROCEDURE B

=NEEC0281S02

1 INSPECTION START

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch "OFF".
3. Attach the vacuum gauge between MAP/BARO switch solenoid valve and rubber tube connected to absolute pressure sensor.

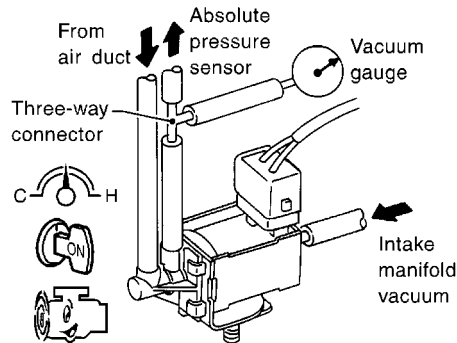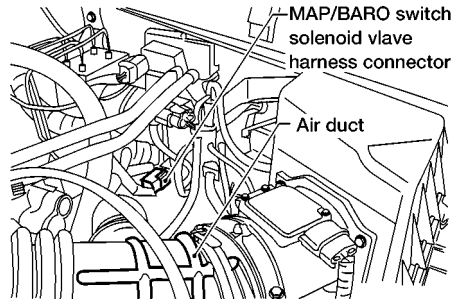

AEC650A

SEF676T

Models with CONSULT-II ► GO TO 2.

Models without CONSULT-II ► GO TO 3.

2 CHECK VACUUM SOURCE TO ABSOLUTE PRESSURE SENSOR

With CONSULT-II

1. Start engine and let it idle.
2. Select "MAP/BARO SW/V" in "ACTIVE TEST" mode with CONSULT-II.
3. Touch "MAP" and "BARO" alternately and check for vacuum.

ACTIVE TEST	
MAP/BARO SW/V	MAP
MONITOR	
CMPS-RPM (REF)	XXXrpm
MAP/BARO SW/V	MAP
ABSOL PRES/SE	XXXV

ACTIVE TEST	
MAP/BARO SW/V	BARO
MONITOR	
CMPS-RPM (REF)	XXXrpm
MAP/BARO SW/V	BARO
ABSOL PRES/SE	XXXV

MAP/BARO SW/V	Vacuum
BARO	Should not exist
MAP	Should exist


SEF183X


OK or NG


OK ► GO TO 12.

NG ► GO TO 4.

3	CHECK VACUUM SOURCE TO ABSOLUTE PRESSURE SENSOR							
<p>⊗ Without CONSULT-II</p> <p>1. Start engine and let it idle.</p> <p>2. Check for vacuum under the following condition.</p>								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Condition</th> <th style="width: 50%;">Vacuum</th> </tr> </thead> <tbody> <tr> <td>For 5 seconds after starting engine</td> <td>Should not exist</td> </tr> <tr> <td>More than 5 seconds after starting engine</td> <td>Should exist</td> </tr> </tbody> </table>			Condition	Vacuum	For 5 seconds after starting engine	Should not exist	More than 5 seconds after starting engine	Should exist
Condition	Vacuum							
For 5 seconds after starting engine	Should not exist							
More than 5 seconds after starting engine	Should exist							
MTBL0080								
OK or NG								
OK	▶	GO TO 12.						
NG	▶	GO TO 4.						

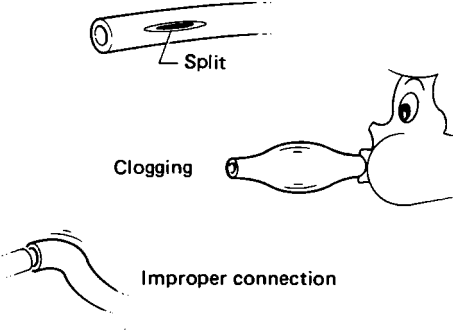4	CHECK VACUUM HOSE	
<p>1. Turn ignition switch "OFF".</p> <p>2. Check hose for clogging, cracks, disconnection or improper connection.</p>		
		
SEF109L		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Clean, repair or reconnect the hose.

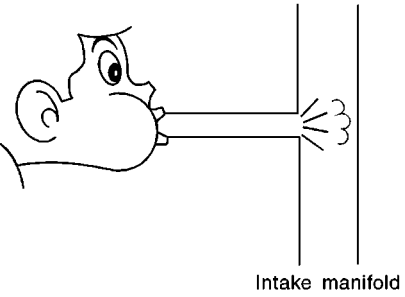5	CHECK VACUUM PORT	
Check vacuum port for clogging.		
		
SEF368U		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Clean or repair the vacuum port.

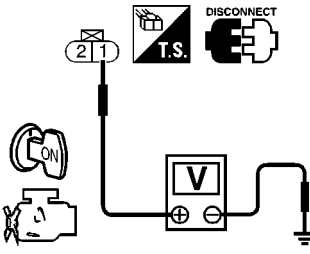6	CHECK MAP/BARO SWITCH SOLENOID VALVE POWER SUPPLY CIRCUIT	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect MAP/BARO switch solenoid valve harness connector. 3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and ground with CONSULT-II or tester. 		
		
<p>Voltage: Battery voltage</p> <p>OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	GO TO 7.

SEF653W

7	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Fuse block (J/B) connector E49 ● 10A fuse ● Harness for open or short between MAP/BARO switch solenoid valve and fuse 		
▶ Repair harness or connectors.		

8	CHECK MAP/BARO SWITCH SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 118 and solenoid valve terminal 2. Refer to Wiring Diagram. <p style="margin-left: 20px;">Continuity should exist.</p> <ol style="list-style-type: none"> 4. Also check harness for short to ground and short to power. 		
OK or NG		
OK	▶	GO TO 10.
NG	▶	GO TO 9.

9	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Harness connectors E74, M82 ● Harness connectors M81, F36 ● Harness for open or short between MAP/BARO switch solenoid valve and ECM 		
▶ Repair open circuit or short to ground or short to power in harness or connectors.		

10 CHECK MAP/BARO SWITCH SOLENOID VALVE

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Perform "MAP/BARO SW/V" in "ACTIVE TEST" mode with CONSULT-II.
3. Check the following.
 - Condition: At idle under no-load
 - CONSULT-II display

ACTIVE TEST	
MAP/BARO SW/V	MAP
MONITOR	
CMPS-RPM (REF)	XXXrpm
MAP/BARO SW/V	MAP
ABSOL PRES/SE	XXXV

ACTIVE TEST	
MAP/BARO SW/V	BARO
MONITOR	
CMPS-RPM (REF)	XXXrpm
MAP/BARO SW/V	BARO
ABSOL PRES/SE	XXXV

MAP/BARO	ABSOL PRES/SE (Voltage)
BARO	More than 2.6V
MAP	Less than the voltage at BARO

SEF181X

- Time for voltage to change


MAP/BARO SW/V	Required time to switch
BARO to MAP	Less than 1 second
MAP to BARO	

MTBL0244

4. If NG, check solenoid valve as shown below.

Without CONSULT-II

1. Remove MAP/BARO switch solenoid valve.
2. Check air passage continuity.

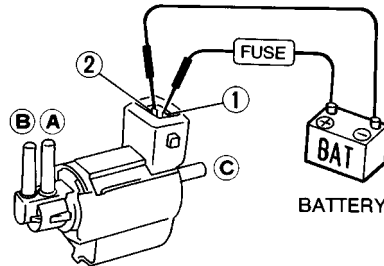

MEC488B

Condition	Air passage continuity between A and B	Air passage continuity between A and C
12V direct current supply between terminals 1 and 2	Yes	No
No supply	No	Yes

MTBL0237

3. If NG or operation takes more than 1 second, replace solenoid valve.

OK or NG


OK	▶	GO TO 11.
NG	▶	Replace MAP/BARO switch solenoid valve.

DTC P1105 MAP/BARO SWITCH SOLENOID VALVE

VG33E

Diagnostic Procedure (Cont'd)

11	CHECK INTAKE SYSTEM	
Check intake system for air leaks.		
OK or NG		
OK	▶	GO TO 15.
NG	▶	Repair it.

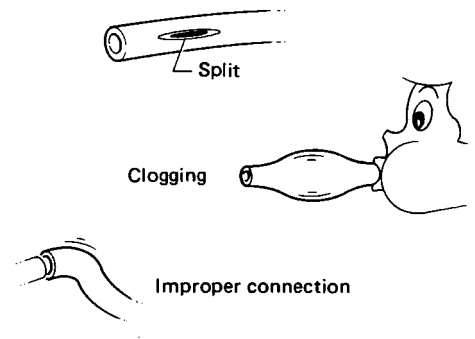
12	CHECK HOSE BETWEEN ABSOLUTE PRESSURE SENSOR AND MAP/BARO SWITCH SOLENOID VALVE	
Check hose for clogging, cracks, disconnection or improper connection.		
		
SEF109L		
OK or NG		
OK	▶	GO TO 13.
NG	▶	Repair or reconnect hose.

13	CHECK HARNESS CONNECTOR	
1. Disconnect absolute pressure sensor harness connector. 2. Check sensor harness connector for water. Water should not exist.		
OK or NG		
OK	▶	GO TO 14.
NG	▶	Repair or replace harness connector.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

14 CHECK ABSOLUTE PRESSURE SENSOR

1. Remove absolute pressure sensor with its harness connector connected.
2. Remove hose from absolute pressure sensor.
3. Turn ignition switch "ON" and check output voltage between ECM terminal 45 and engine ground.

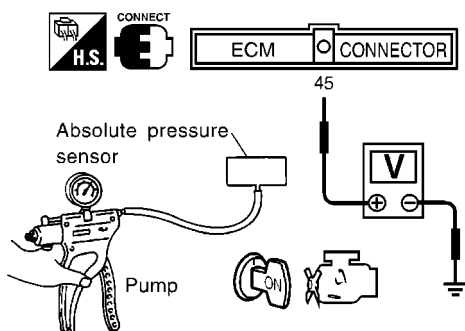

SEF749U

The voltage should be 3.2 to 4.8V.

4. Use pump to apply vacuum of -26.7 kPa (-200 mmHg, -7.87 inHg) to absolute pressure sensor as shown in figure and check the output voltage.

The voltage should be 1.0 to 1.4V lower than the value measured in step 3.

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -93.3 kPa (-700 mmHg, -27.56 inHg) or over 101.3 kPa (760 mmHg, 29.92 inHg) of pressure.

OK or NG

OK	▶	GO TO 15.
NG	▶	Replace absolute pressure sensor.

15 CHECK INTERMITTENT INCIDENT

Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.

	▶	INSPECTION END
--	---	-----------------------

On Board Diagnosis Logic

★ **The closed loop control has the one trip detection logic.** NEEC0282
Malfunction is detected when the closed loop control function for right bank does not operate even when vehicle is driving in the specified condition, or when the closed loop control function for left bank does not operate even when vehicle is driving in the specified condition.

POSSIBLE CAUSE

- The front heated oxygen sensor circuit is open or shorted. NEEC0282S01
- Front heated oxygen sensor
- Front heated oxygen sensor heater

GI
MA

EM

LC

EC

FE

CL

MT

DTC Confirmation Procedure

CAUTION: NEEC0283
Always drive vehicle at a safe speed.

NOTE:
If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

- Never raise engine speed above 3,200 rpm during the “DTC Confirmation Procedure”. If the engine speed limit is exceeded, retry the procedure from step 2.
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

3	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF)	XXX rpm
	MAS AIR/FL SE	XXX V
	FR O2 SEN-B1	XXX V
	FR O2 SEN-B2	XXX V
	FR O2 MNTR-B1	RICH
FR O2 MNTR-B2	RICH	

PEF392V

Ⓜ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select “DATA MONITOR” mode with CONSULT-II.
- 3) Hold engine speed at 2,000 rpm and check one of the following.
 - “FR O2 SEN-B1 (-B2)” voltage should go above 0.70V at least once.
 - “FR O2 SEN-B1 (-B2)” voltage should go below 0.21V at least once.
 If the check result is NG, perform “Diagnosis Procedure”, EC-1044.

DTC P1148 (RIGHT BANK, -B1), P1168 (LEFT BANK, -B2) CLOSED LOOP CONTROL

VG33E

DTC Confirmation Procedure (Cont'd)


If the check result is OK, perform the following step.

- 4) Let engine idle at least 5 minutes.
- 5) Maintain the following condition at least 50 consecutive seconds.

B/FUEL SCHDL	1.6 msec or more (A/T models) 2.0 msec or more (M/T models)
CMPS-RPM (POS)	1,600 rpm or more (A/T models) 1,900 rpm or more (M/T models)
Selector lever	Suitable position
VHCL SPEED SE	More than 71 km/h (44 MPH)

During this test, P0130 and/or P0150 may be displayed on CONSULT-II screen.

- 6) If DTC is detected, go to "Diagnostic Procedure", EC-1044.

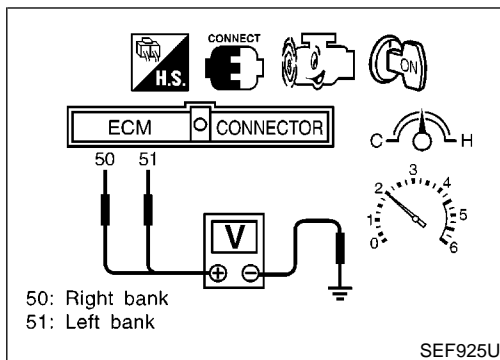

Overall Function Check


Use this procedure to check the overall function of the closed loop control. During this check, a DTC might not be confirmed. NEEC0284

⊗ Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 50 (front heated oxygen sensor right bank signal) or 51 (front heated oxygen sensor left bank signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no-load.
 - The voltage should go above 0.70V at least once.
 - The voltage should go below 0.21V at least once.
- 4) If NG, go to "Diagnostic Procedure", EC-1044.

Diagnostic Procedure

Perform trouble diagnosis for "DTC P0133, P0153", EC-798. NEEC0285

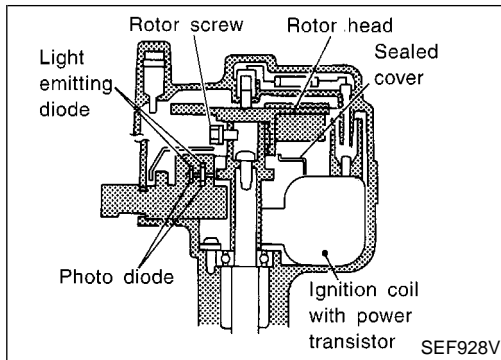

Component Description

IGNITION COIL & POWER TRANSISTOR

NEEC0286
NEEC0286S01

The power transistor switches on and off the ignition coil primary circuit according to the ECM signal. As the primary circuit is turned on and off, the proper high voltage is induced in the secondary circuit. The distributor is not repairable except for the distributor cap and rotor head.

NOTE:

The rotor screw which secures the distributor rotor head to the distributor shaft must be torqued properly.

: **3.6±0.3 N·m (37±3 kg-cm, 32±3 in-lb)**

ECM Terminals and Reference Value

NEEC0287

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
1	PU/W	Ignition signal	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Approximately 0.7V
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	1.1 - 1.5V
2	B	Ignition check	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 12V
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm. 	Approximately 11V

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

On Board Diagnosis Logic

Malfunction is detected when the ignition signal in the primary circuit is not sent to ECM during engine cranking or running. NEEC0288

POSSIBLE CAUSE

- Harness or connectors (The ignition primary circuit is open or shorted.) NEEC0288S01
- Power transistor unit.
- Resistor
- Camshaft position sensor
- Camshaft position sensor circuit

DTC Confirmation Procedure

NOTE:

- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test. NEEC0289
- **If DTC P1320 (0201) is displayed with DTC P0340 (0101), perform trouble diagnosis for DTC P0340 first. Refer to EC-922.**

With CONSULT-II

- 1) Turn ignition switch “ON”.
- 2) Select “DATA MONITOR” mode with CONSULT-II.
- 3) Start engine. (If engine does not run, turn ignition switch to “START” for at least 5 seconds.)
- 4) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-1048.

With GST

Follow the procedure “With CONSULT-II”.

3	DATA MONITOR	
	MONITORING	NO FAIL
	CMPS-RPM(REF) XXX rpm	

PEF357V

DTC P1320 IGNITION SIGNAL

VG33E

Wiring Diagram

Wiring Diagram

NEEC0290

EC-IGN/SG-01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS



BT

HA

SC

EL

IDX

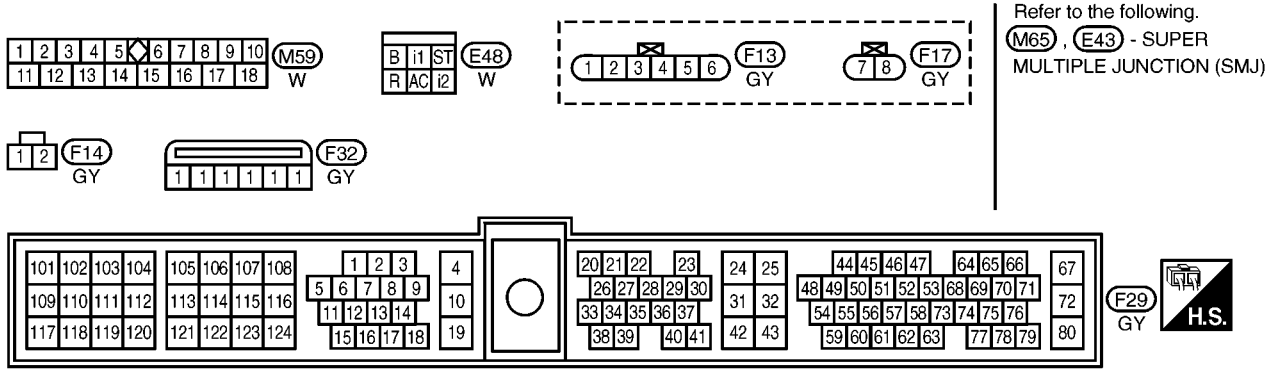
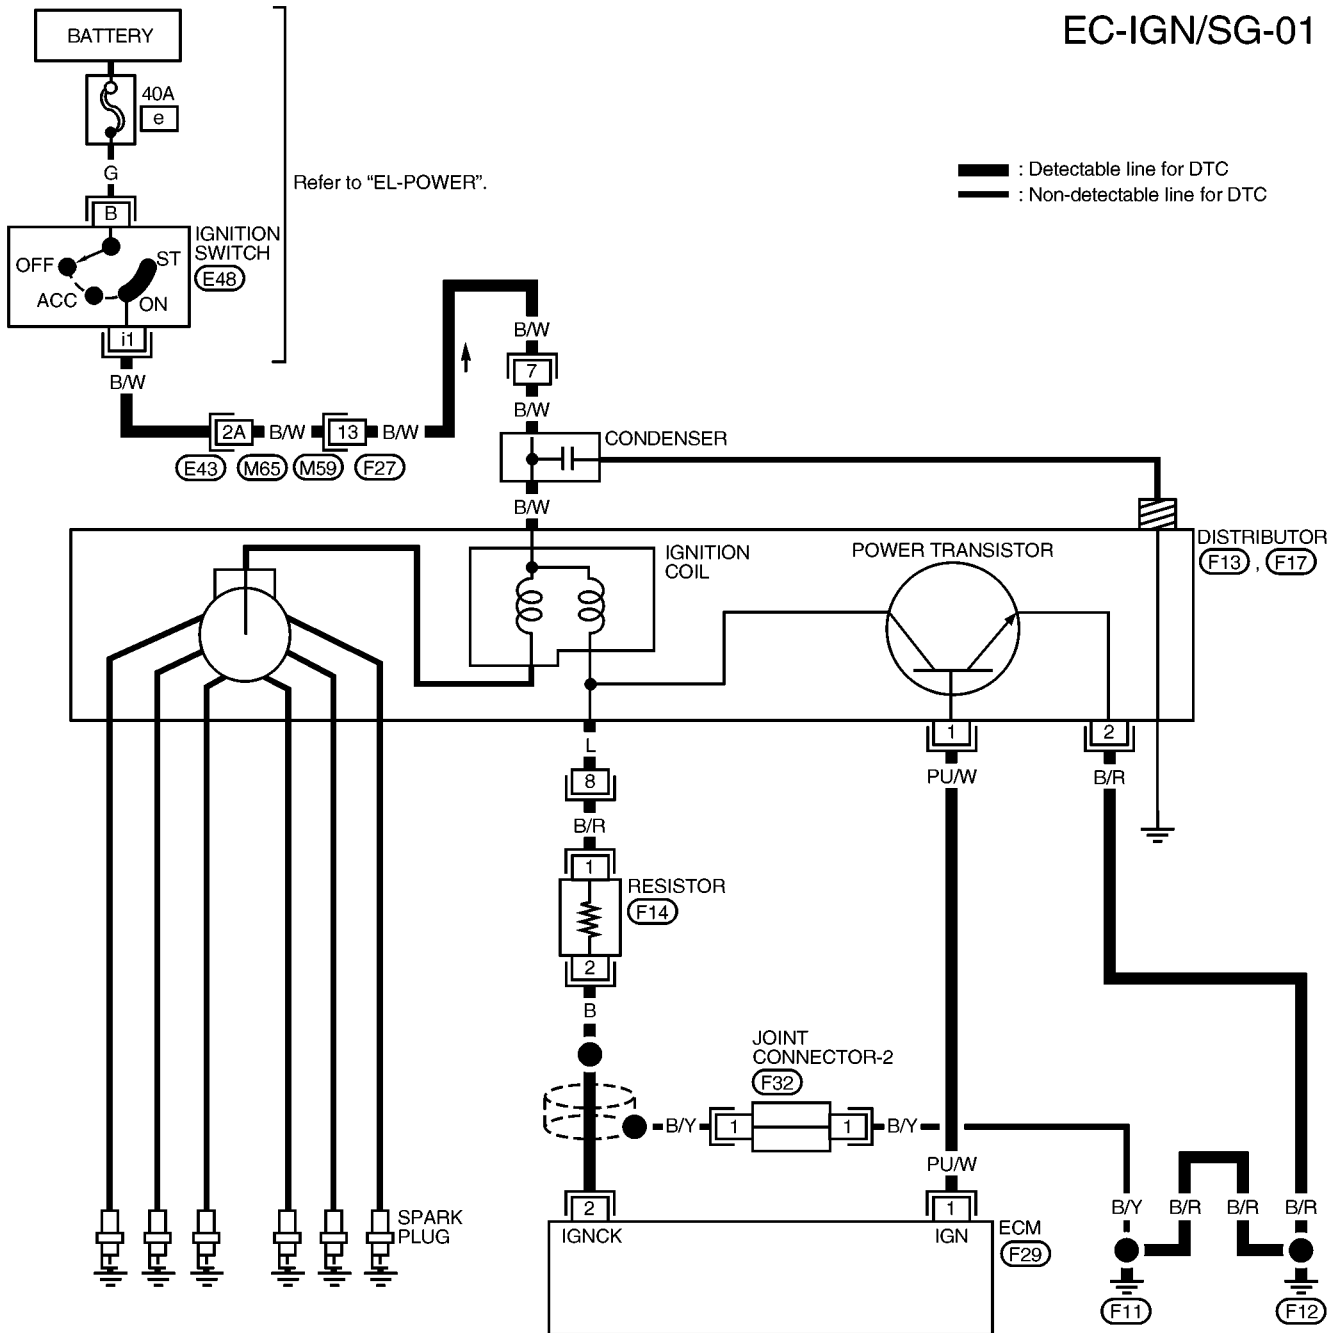


AEC967A

Diagnostic Procedure

NEEC0291

1	CHECK ENGINE START	
Turn ignition switch "OFF", and restart engine. Is engine running?		
Yes or No		
Yes	▶	GO TO 7.
No	▶	GO TO 2.

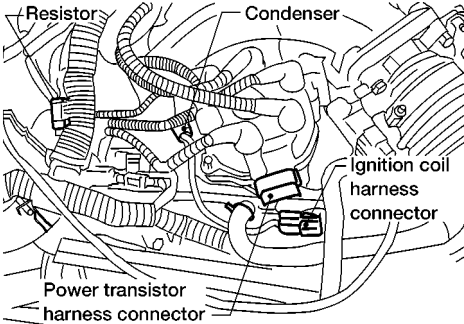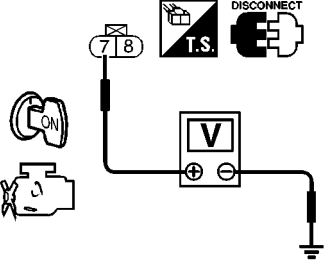2	CHECK IGNITION COIL POWER SUPPLY CIRCUIT	
1. Turn ignition switch "OFF". 2. Disconnect ignition coil harness connector.		
		
<small>AEC656A</small>		
3. Turn ignition switch "ON". 4. Check voltage between terminal 7 and ground with CONSULT-II or tester.		
		
<small>SEF721U</small>		
Voltage: Battery voltage		
OK or NG		
OK	▶	GO TO 4.
NG	▶	GO TO 3.

3	DETECT MALFUNCTIONING PART	
Check the following.		
<ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M59, F27 ● Harness for open or short between ignition coil and ignition switch 		
▶		Repair harness or connectors.

DTC P1320 IGNITION SIGNAL

VG33E

Diagnostic Procedure (Cont'd)

4 CHECK POWER TRANSISTOR GROUND CIRCUIT FOR OPEN AND SHORT		
1. Turn ignition switch "OFF". 2. Disconnect power transistor harness connector. 3. Check harness continuity between power transistor terminal 2 and engine ground. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

5 CHECK POWER TRANSISTOR OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT		
1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 1 and power transistor terminal 1. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL


IDX

6 CHECK IGNITION COIL

1. Disconnect ignition coil harness connector.
2. Check resistance as shown in the figure.

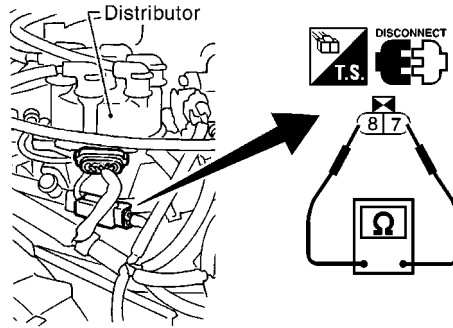

SEF013S

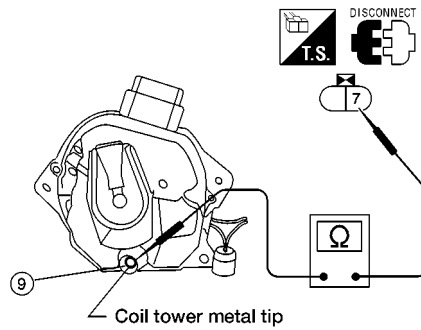

AEC657A

Terminal	Resistance [at 25°C (77°F)]
7 - 8 (Primary coil)	0.5 - 1.0Ω
7 - 9 (Secondary coil)	Approximately 12 kΩ

MTBL0248

For checking secondary coil, remove distributor cap and measure resistance between coil tower metal tip 9 and terminal 7.

OK or NG

OK	▶	GO TO 7.
NG	▶	Replace distributor assembly.

DTC P1320 IGNITION SIGNAL

VG33E

Diagnostic Procedure (Cont'd)

7 CHECK POWER TRANSISTOR

1. Disconnect camshaft position sensor & power transistor harness connector and ignition coil harness connector.
2. Check power transistor resistance between terminals 2 and 8.

SEF015S

Terminals	Resistance	Result
2 and 8	Except 0Ω	OK
	0Ω	NG

MTBL0249

OK or NG

OK	▶	GO TO 11.
NG	▶	Replace distributor assembly.


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

8 CHECK IGNITION COIL INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Stop engine.
2. Disconnect ignition coil harness connector.
3. Strip tape covering resistor.
4. Disconnect resistor harness connector.
5. Disconnect ECM harness connector.
6. Check harness continuity between ignition coil terminal 8 and resistor terminal 1, resistor terminal 2 and ECM terminal 2. Refer to Wiring Diagram.
Continuity should exist.
7. Also check harness for short to ground and short to power.

OK or NG

OK	▶	GO TO 9.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

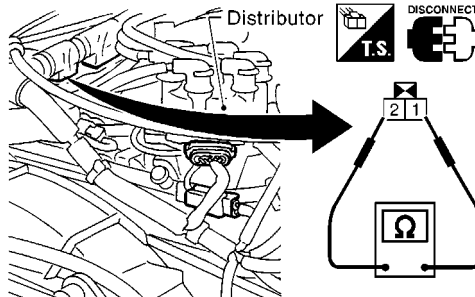9	CHECK RESISTOR	<p>1. Disconnect resistor harness connector. 2. Check resistance between terminals 1 and 2.</p> <div style="text-align: center;">  </div> <p style="color: blue; text-align: center;">Resistance: Approximately 2.2 kΩ [at 25°C (77°F)]</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	GO TO 10.	
NG	▶	Replace resistor.	

SEF757U



10	CHECK SHIELD CIRCUIT FOR OPEN AND SHORT	<p>1. Turn ignition switch "OFF". 2. Disconnect joint connector-2. 3. Check the following.</p> <ul style="list-style-type: none"> ● Continuity between joint connector terminal 1 and ground ● Joint connector (Refer to "HARNESS LAYOUT", <i>EL-239</i>.) Continuity should exist. <p>4. Also check harness for short to ground and short to power. 5. Then reconnect joint connector-2.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	GO TO 11.	
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.	

11	CHECK INTERMITTENT INCIDENT	Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
	▶	INSPECTION END	

DTC P1336 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) (COG)

VG33E

Component Description

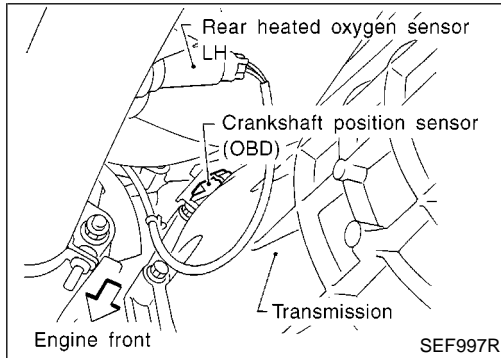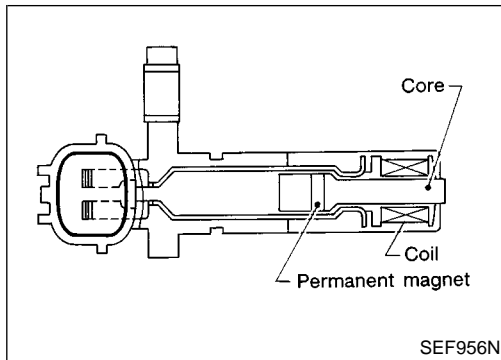

Component Description

NEEC0292

The crankshaft position sensor (OBD) is located on the transmission housing facing the gear teeth (cogs) of the flywheel or drive plate. It detects the fluctuation of the engine revolution.

The sensor consists of a permanent magnet, core and coil.

When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change.

The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

This sensor is not used to control the engine system.

It is used only for the on board diagnosis.

GI

MA

EM

LC

EC

FE

CL

MT

ECM Terminals and Reference Value

NEEC0293

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (AC Voltage)
47	L	Crankshaft position sensor (OBD)	<p>[Engine is running]</p> <ul style="list-style-type: none"> Warm-up condition Idle speed 	<p>1 - 2V (AC range)</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> Engine speed is 2,000 rpm 	<p>3 - 4V (AC range)</p>

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1336 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) (COG)

VG33E

On Board Diagnosis Logic

On Board Diagnosis Logic

Malfunction is detected when a chipping of the flywheel or drive plate gear tooth (cog) is detected by the ECM. NEEC0294

POSSIBLE CAUSE


- Harness or connectors
- Crankshaft position sensor (OBD)
- Drive plate/Flywheel

NEEC0294S01

DTC Confirmation Procedure

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test. NEEC0295

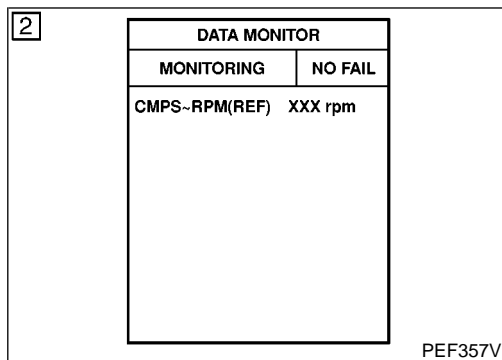

Ⓜ With CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and run it for at least 2 minutes at idle speed.
- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-1056.

Ⓜ With GST

Follow the procedure "With CONSULT-II".

DTC P1336 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) (COG)



VG33E

Wiring Diagram

Wiring Diagram

NEEC0296

EC-CKPS-01

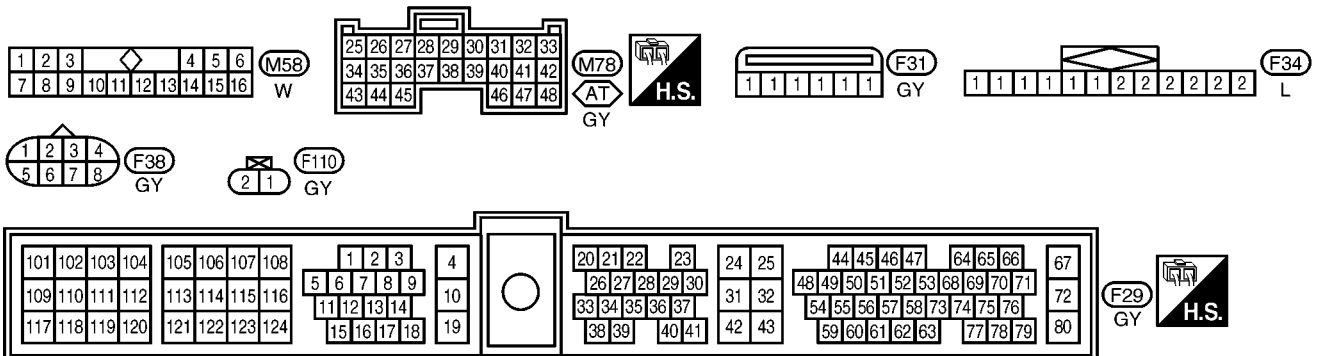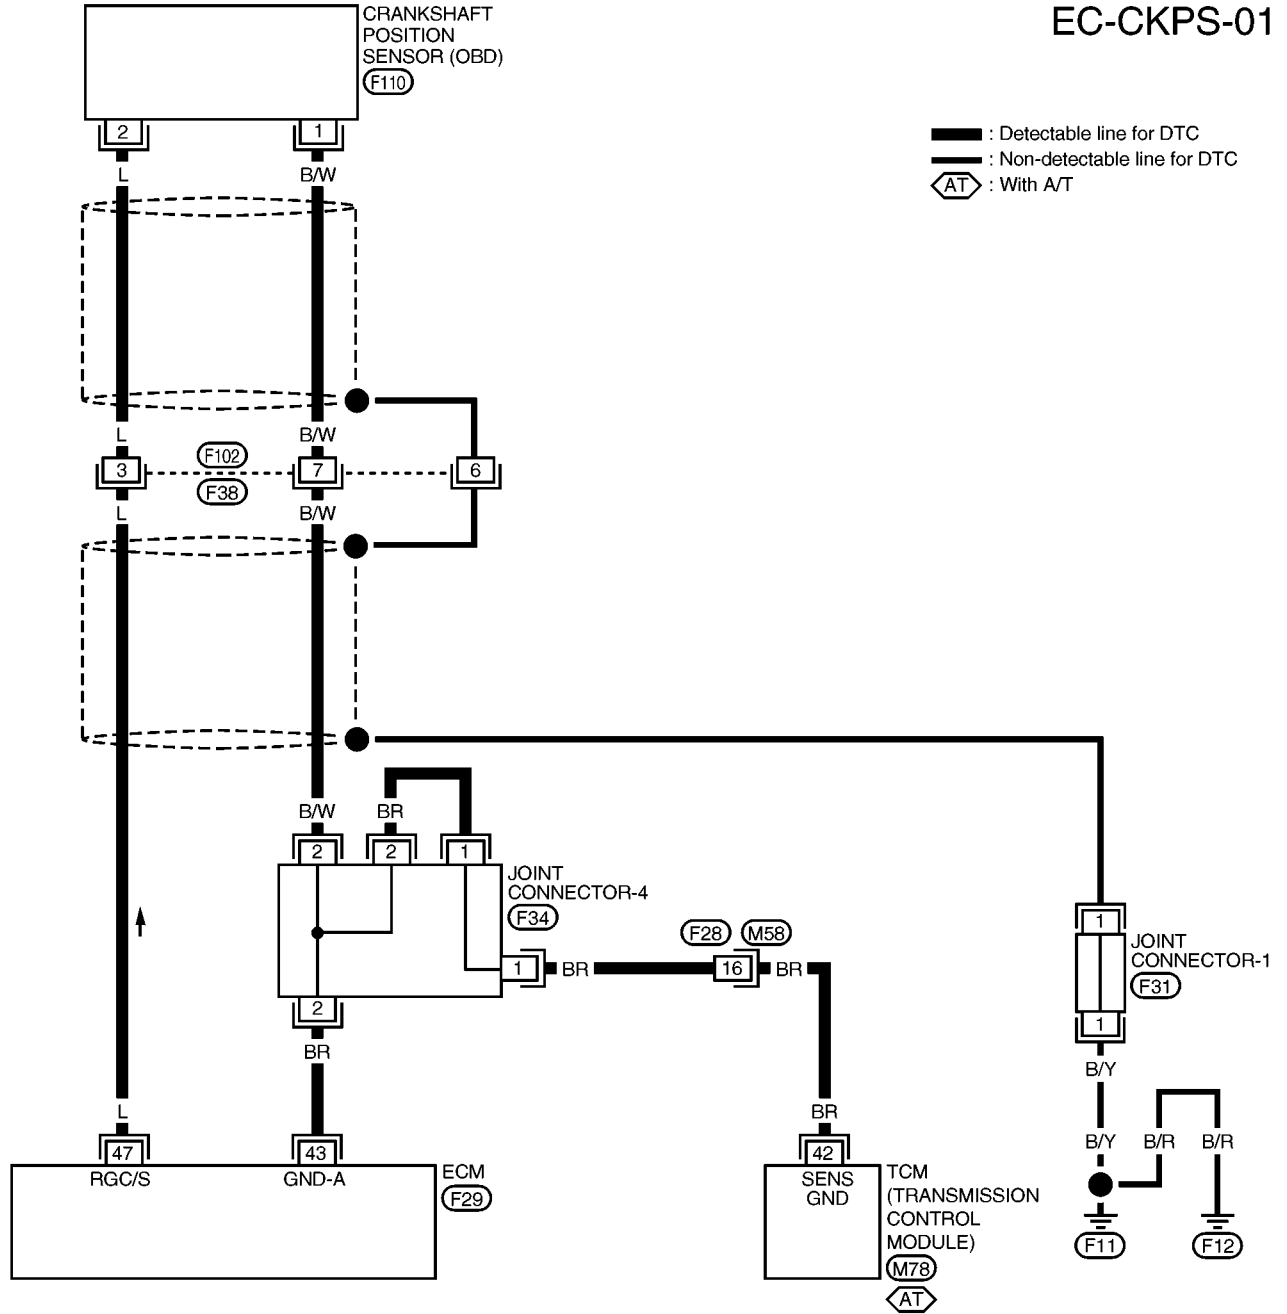

AEC956A

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P1336 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) (COG)


VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0297

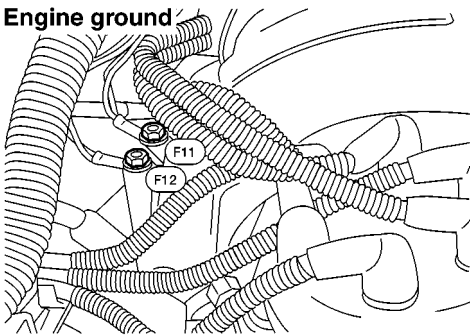1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch OFF. 2. Loosen and retighten engine ground screws.</p>	
 <p>The diagram shows a close-up of the engine ground area. Two screws are labeled F11 and F12. The text 'Engine ground' is written above the screws. Various wires and hoses are visible in the background.</p>	
AEC640A	
▶	GO TO 2.

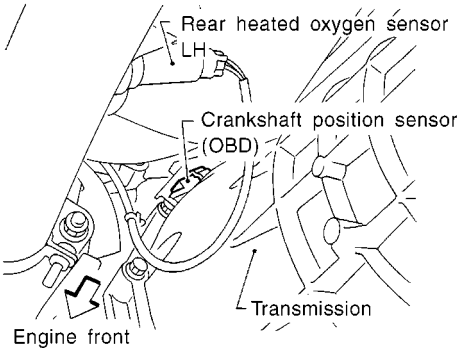2	CHECK CKPS (OBD) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
<p>1. Disconnect crankshaft position sensor (OBD) and ECM harness connectors.</p>	
 <p>The diagram shows the engine front view. Labels include 'Rear heated oxygen sensor LH', 'Crankshaft position sensor (OBD)', 'Transmission', and 'Engine front'. An arrow points to the CKPS (OBD) sensor location.</p>	
SEF997R	
<p>2. Check continuity between ECM terminal 47 and sensor terminal 2. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p>	
OK or NG	
OK	▶ GO TO 4.
NG	▶ GO TO 3.

3	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F38, F102 ● Harness for open or short between ECM and crankshaft position sensor (OBD) 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1336 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) (COG)

VG33E

Diagnostic Procedure (Cont'd)

4	CHECK CKPS (OBD) GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Reconnect ECM harness connectors.</p> <p>2. Check harness continuity between CKPS (OBD) terminal 1 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	GO TO 5.

GI
MA
EM
LC

5	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F38, F102 ● Harness connectors F28, M58 ● Joint connector-4 ● Harness for open or short between crankshaft position sensor (OBD) and ECM ● Harness for open or short between crankshaft position sensor (OBD) and TCM (Transmission Control Module) 		
		▶ Repair open circuit or short to ground or short to power in harness or connectors.

EC
FE
CL

6	CHECK IMPROPER INSTALLATION	
<p>1. Loosen and retighten the fixing bolt of the crankshaft position sensor (OBD).</p> <p>2. Perform "DTC Confirmation Procedure", EC-1054 again.</p> <p style="text-align: center;">Is a 1st trip DTC P1336 (0905) detected?</p>		
Yes	▶	GO TO 7.
No	▶	INSPECTION END



MT
AT
TF

PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1336 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) (COG)

VG33E

Diagnostic Procedure (Cont'd)

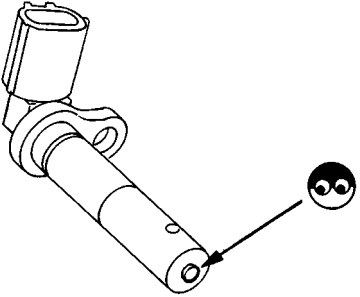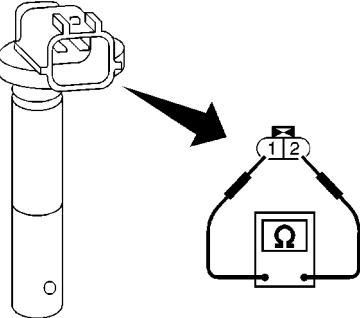7	CHECK CRANKSHAFT POSITION SENSOR (OBD)	<ol style="list-style-type: none"> 1. Disconnect crankshaft position sensor (OBD) harness connector. 2. Loosen the fixing bolt of the sensor. 3. Remove the sensor. 4. Visually check the sensor for chipping. <div style="text-align: center; margin: 10px 0;">  </div> <ol style="list-style-type: none"> 5. Check resistance as shown in the figure. <div style="text-align: center; margin: 10px 0;">  </div> <p style="text-align: center; color: blue; font-weight: bold;">Resistance: Approximately 512 - 632Ω [at 20°C (68°F)]</p> <p style="text-align: center; font-weight: bold;">OK or NG</p>	<p>SEF960N</p> <p>SEF504V</p>
OK	▶	GO TO 8.	
NG	▶	Replace crankshaft position sensor (OBD).	

8	CHECK CKPS (OBD) SHIELD CIRCUIT FOR OPEN AND SHORT	<ol style="list-style-type: none"> 1. Disconnect harness connectors F38, F102. 2. Check harness continuity between harness connector F38 terminal 6 and engine ground. Continuity should exist. 3. Also check harness for short to ground and short to power. <p style="text-align: center; font-weight: bold;">OK or NG</p>	
OK	▶	GO TO 10.	
NG	▶	GO TO 9.	

9	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F38, F102 ● Joint connector-1 ● Harness for open or short between harness connector F38 and engine ground 	
	▶	Repair open circuit or short to ground or short to power in harness or connectors.	

DTC P1336 CRANKSHAFT POSITION SENSOR (CKPS) (OBD) (COG)

VG33E

Diagnostic Procedure (Cont'd)

10	CHECK GEAR TOOTH	
Visually check for chipping flywheel or drive plate gear tooth (cog).		
OK or NG		
OK	▶	GO TO 11.
NG	▶	Replace the flywheel or drive plate.

GI

MA

EM

11	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.		
	▶	INSPECTION END

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX

DTC P1400 EGRC-SOLENOID VALVE

VG33E

Component Description (If Equipped with EGR Valve)

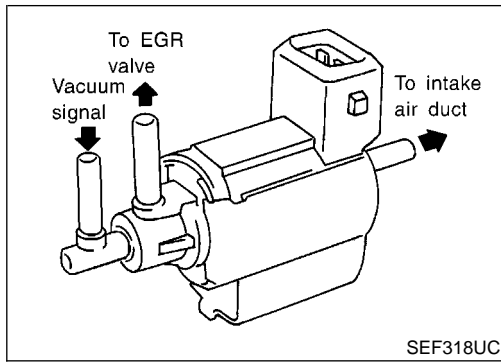

Component Description (If Equipped with EGR Valve)

NEEC0298
The EGRC-solenoid valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the coil in the solenoid valve is energized. The vacuum signal (from the intake manifold collector) passes through the solenoid valve. The signal then reaches the EGR valve.

When the ECM sends an OFF signal, a plunger will then move to cut the vacuum signal.

CONSULT-II Reference Value in Data Monitor Mode

NEEC0299

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
EGRC SOL/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle
		Engine speed: Revving from idle up to 3,000 rpm quickly
		OFF
		ON

ECM Terminals and Reference Value

NEEC0300

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
103	G/W	EGRC-solenoid valve	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Revving engine from idle up to 3,000 rpm quickly 	0 - 1.5V

On Board Diagnosis Logic

NEEC0301

Malfunction is detected when the improper voltage signal is sent to ECM through EGRC-solenoid valve.

POSSIBLE CAUSE

NEEC0301S01

- Harness or connectors (The EGRC-solenoid valve circuit is open or shorted.)
- EGRC-solenoid valve

2

DATA MONITOR	
MONITORING	NO FAIL
COOLAN TEMP/S	XXX °C

PEF002P

DTC Confirmation Procedure

=NEEC0302

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 5 seconds before conducting the next test.

Ⓜ With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II and wait at least 5 seconds.
- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-1063.

Ⓜ With GST

Follow the procedure "With CONSULT-II".

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX

Wiring Diagram

NEEC0303

EC-EGRC/V-01

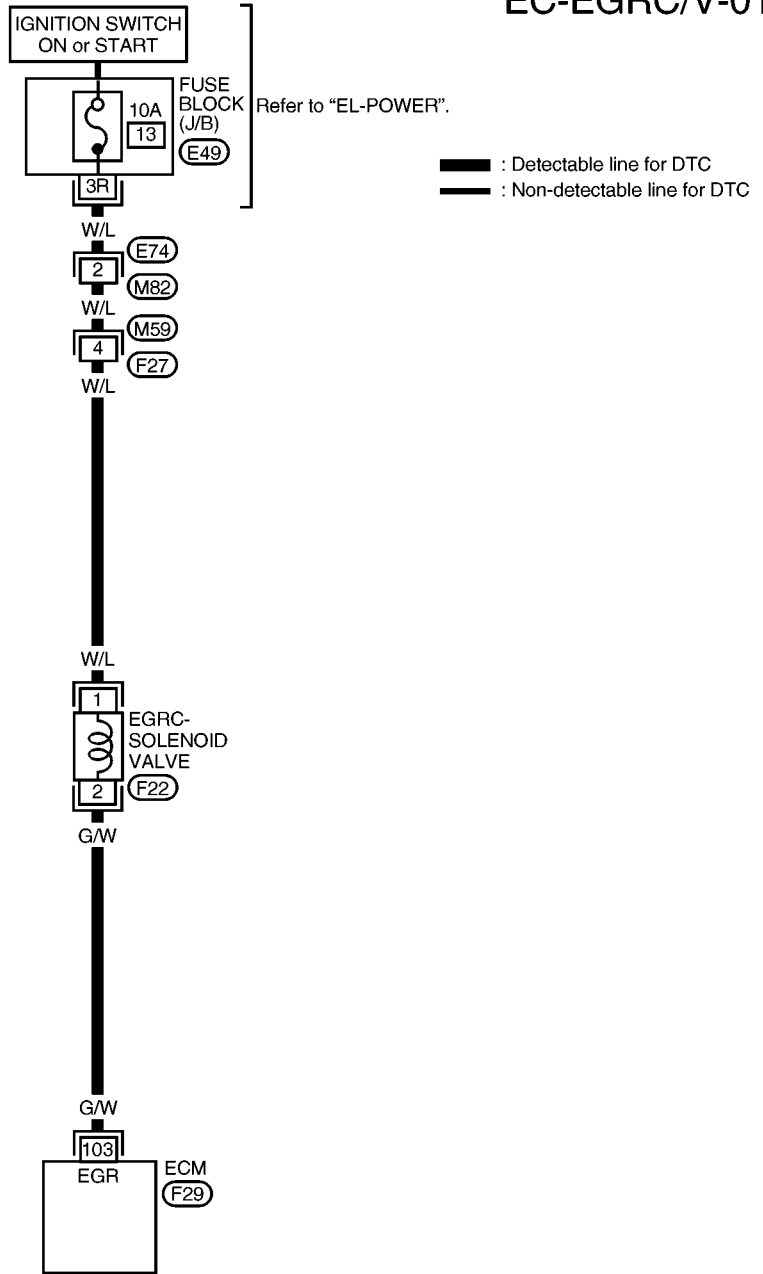


1	2	3	4	5	6	7	8	9	10	M59 W
11	12	13	14	15	16	17	18			

1R	2R	3R	4R	5R	E49 W
6R	7R	8R	9R	10R	



1	2	3	4	5	6	7	8	E74 W
9	10	11	12	13	14	15	16	

2	1	F22 B

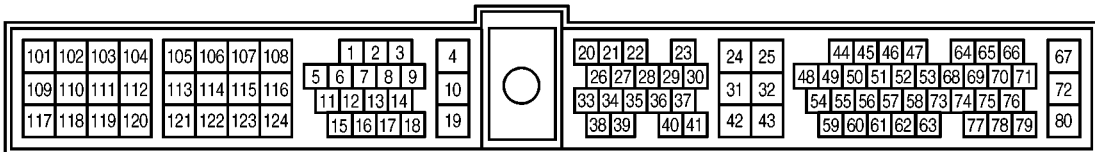

Diagnostic Procedure

NEEC0304

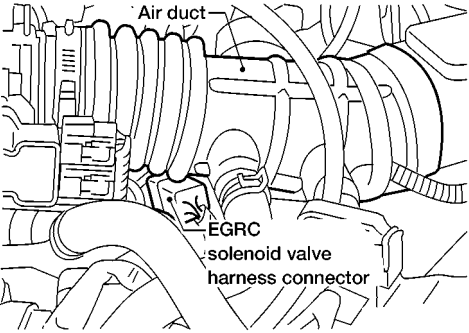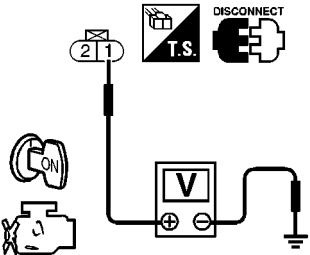1	CHECK EGRC-SOLENOID VALVE POWER SUPPLY CIRCUIT
1. Turn ignition switch "OFF". 2. Disconnect EGRC-solenoid valve harness connector.	
	
3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and ground with CONSULT-II or tester.	
	
Voltage: Battery voltage OK or NG	
OK	▶ GO TO 3.
NG	▶ GO TO 2.

AEC659A

SEF657W

2	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors E74, M82 ● Harness connectors M59, F27 ● Fuse block (J/B) connector E49 ● 10A fuse ● Harness for open or short between EGRC-solenoid valve and fuse 	
▶ Repair harness or connectors.	

3	CHECK EGRC-SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 103 solenoid valve and terminal 2. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 4.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1400 EGRC-SOLENOID VALVE


VG33E

Diagnostic Procedure (Cont'd)

4 CHECK EGRC-SOLENOID VALVE

With CONSULT-II

- Perform "EGRC SOLENOID VALVE" in "ACTIVE TEST" mode.
- Check air passage continuity and operation delay time under the following conditions.

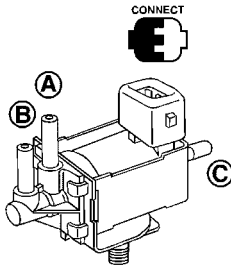


ACTIVE TEST	
EGRC SOL/V (EGR)	ON FLOW
MONITOR	
CMPS-RPM (REF)	XXrpm

Conditions	Air passage continuity between A and B	Air passage continuity between A and C
ON	Yes	No
OFF	No	Yes

SEF155X

Without CONSULT-II

Check air passage continuity and operation delay time under the following conditions.

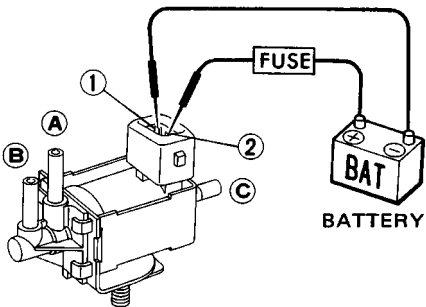

Condition	Air passage continuity between A and B	Air passage continuity between A and C
12V direct current supply between terminals 1 and 2	Yes	No
No supply	No	Yes

OK or NG

AEC919


MTBL0237

OK	▶	GO TO 5.
NG	▶	Replace EGRC-solenoid valve.

5 CHECK INTERMITTENT INCIDENT

Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.

▶ **INSPECTION END**

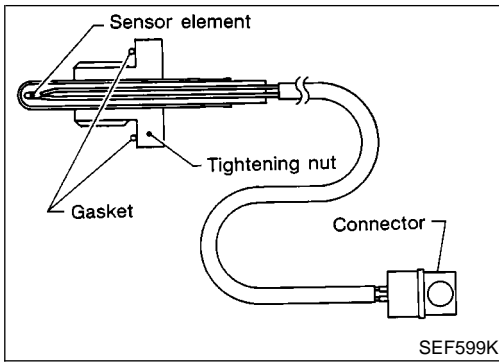

Component Description (If Equipped with EGR Valve)

NEEC0305

The EGR temperature sensor detects temperature changes in the EGR passage way. When the EGR valve opens, hot exhaust gases flow, and the temperature in the passage way changes. The EGR temperature sensor is a thermistor that modifies a voltage signal sent from the ECM. This modified signal then returns to the ECM as an input signal. As the temperature increases, EGR temperature sensor resistance decreases.

This sensor is not used to control the engine system. It is used only for the on board diagnosis.


<Reference data>

EGR temperature °C (°F)	Voltage* (V)	Resistance (MΩ)
0 (32)	4.56	0.62 - 1.05
50 (122)	2.25	0.065 - 0.094
100 (212)	0.59	0.011 - 0.015

*: These data are reference values and are measured between ECM terminal 63 (EGR temperature sensor) and ECM terminal 32 (ECM ground).

When EGR system is operating.

Voltage: 0 - 1.5V

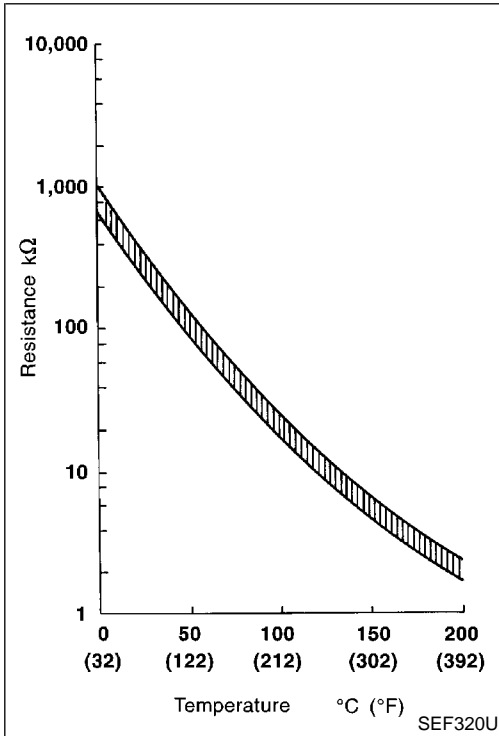

On Board Diagnosis Logic

NEEC0306

Malfunction is detected when
(Malfunction A) an excessively low voltage from the EGR temperature sensor is sent to ECM even when engine coolant temperature is low,

(Malfunction B) an excessively high voltage from the EGR temperature sensor is sent to ECM even when engine coolant temperature is high.

POSSIBLE CAUSE

NEEC0306S01

Malfunction A

NEEC0306S0101

- Harness or connectors (The EGR temperature sensor circuit is shorted.)
- EGR temperature sensor
- Malfunction of EGR function, EGRC-BPT valve or EGRC-solenoid valve

Malfunction B

NEEC0306S0102

- Harness or connectors (The EGR temperature sensor circuit is open.)
- EGR temperature sensor
- Malfunction of EGR function, EGRC-BPT valve or EGRC-solenoid valve

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC Confirmation Procedure

Perform "PROCEDURE FOR MALFUNCTION A" first. If 1st trip DTC cannot be confirmed, perform "PROCEDURE FOR MALFUNCTION B".

NEEC0307

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

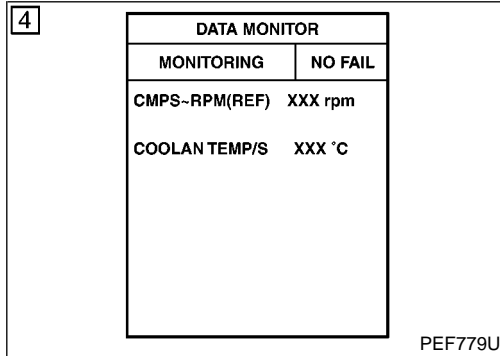

PROCEDURE FOR MALFUNCTION A


NEEC0307S01

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Verify that "COOLAN TEMP/S" is less than 40°C (104°F).
If the engine coolant temperature is above the range, cool the engine down.
- 4) Start engine and let it idle for at least 8 seconds.
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-1069.

With GST

Follow the procedure "With CONSULT-II".

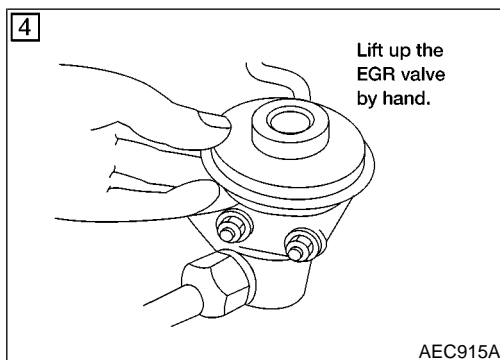

PROCEDURE FOR MALFUNCTION B

NEEC0307S02

CAUTION:


Always drive vehicle at a safe speed.

TESTING CONDITION:

Always perform the test at a temperature of 5°C (41°F) or higher.

With CONSULT-II



- 1) Start engine and warm it up to normal operating temperature.
- 2) Confirm that EGR valve is not lifting at idle.
If the check result is NG, go to trouble diagnoses for "DTC P1402". (See page EC-1072.)
- 3) Select "DATA MONITOR" mode with CONSULT-II.
- 4) Read "EGR TEMP SEN" at about 1,500 rpm while holding the EGR valve in full open position by hand.
Voltage should decrease to less than 1.5V.
If the check result is NG, go to "Diagnostic Procedure", EC-1069.
If the check result is OK, go to following step.
- 5) Turn ignition switch "OFF" and wait at least 5 seconds.
- 6) Turn ignition switch "ON".
- 7) Check the output voltage of "THRTL POS SEN" at closed throttle position and note it.

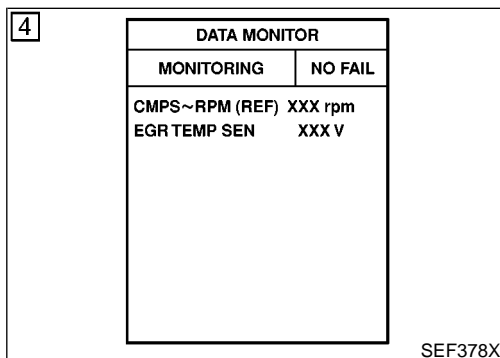

- 8) Start engine.
- 9) Maintain the following conditions for at least 5 consecutive seconds.

CMPS-RPM (REF)	1,600 - 2,400 rpm (A/T models) 1,800 - 2,600 rpm (M/T models)
COOLAN TEMP/S	Above 70°C (158°F)
B/FUEL SCHDL	3.0 - 4.5 msec
THRTL POS SEN	X - (X + 0.70) V X = Voltage value measured at step 7
Selector lever	Suitable position

- 10) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-1069.

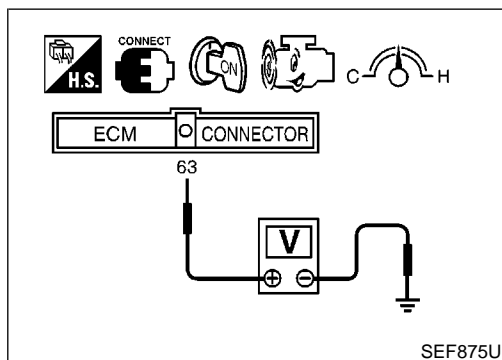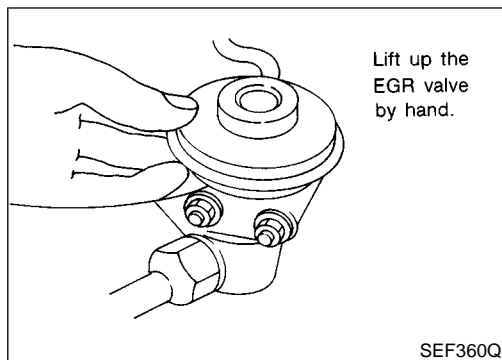

Overall Function Check

Use this procedure to check the overall function of the EGR temperature sensor. During this check, a 1st trip DTC might not be confirmed.

PROCEDURE FOR MALFUNCTION B



⊗ Without CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Confirm that EGR valve is not lifting at idle. If NG, go to trouble diagnoses for DTC P0400 and P0402 (See pages EC-929 and 943).
- 3) Check voltage between ECM terminal 63 (EGR temperature sensor signal) and ground at about 1,500 rpm with EGR valve lifted up to the full position by hand.
Voltage should decrease to less than 1.5V.
If NG, go to "Diagnostic Procedure", EC-1069.
- 4) If step 4 is OK, perform trouble diagnoses for "DTC P0400, P1400" (See pages EC-929 and 1060).

Wiring Diagram



NEEC0309

EC-EGR/TS-01

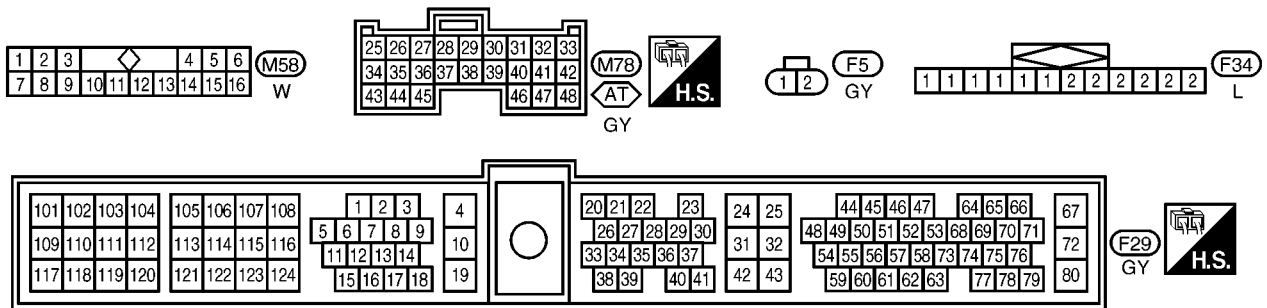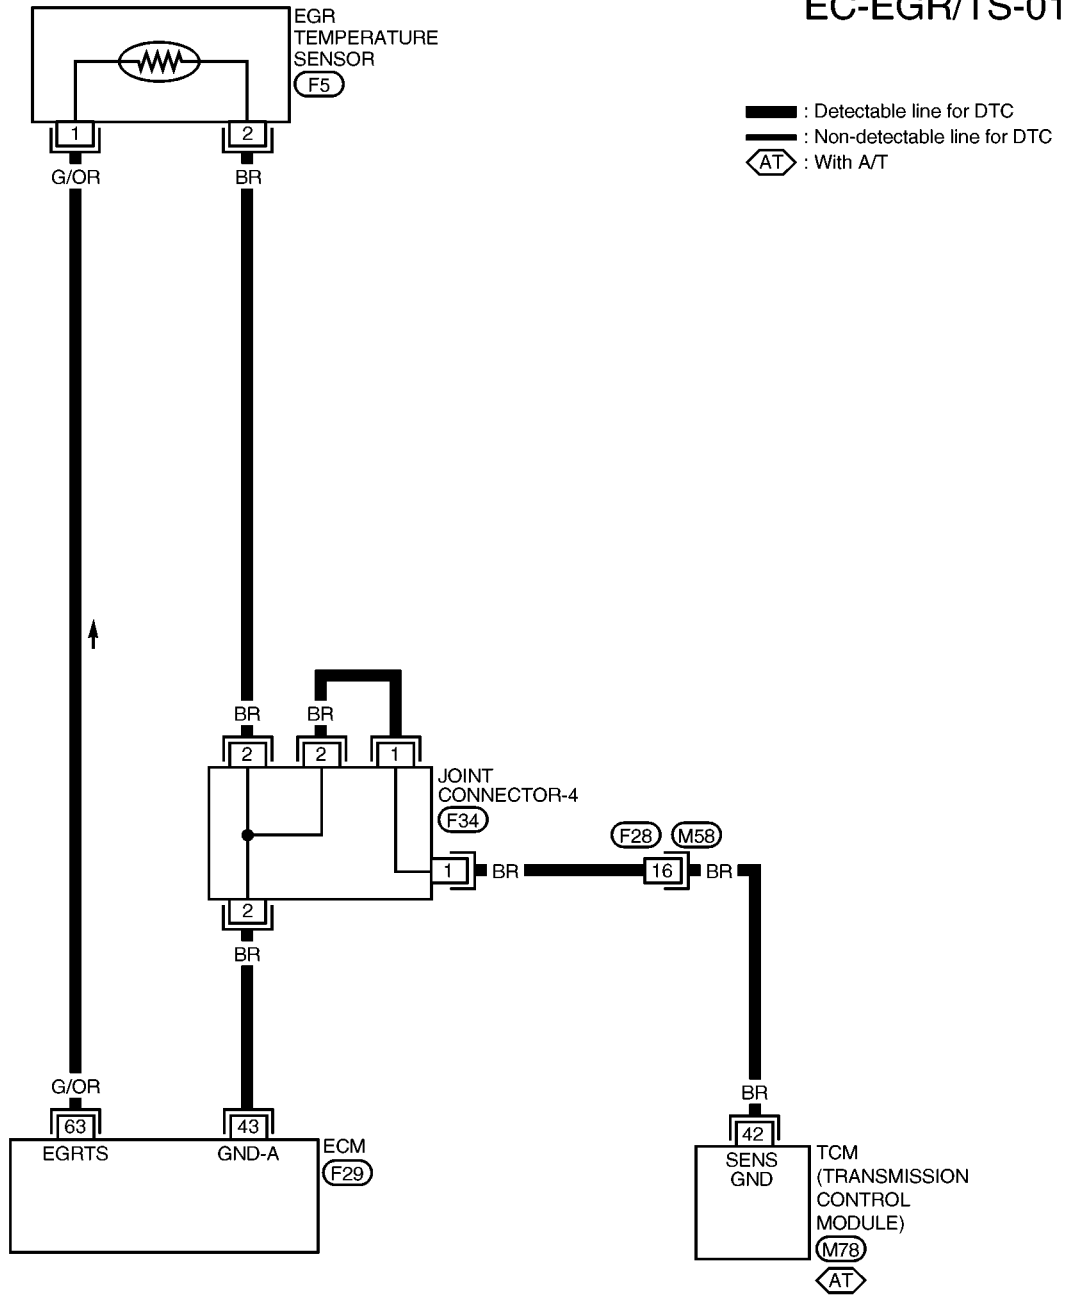

Diagnostic Procedure

NEEC0310

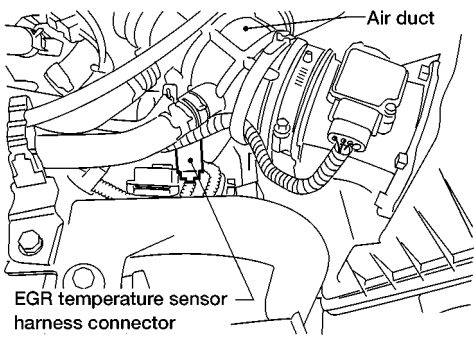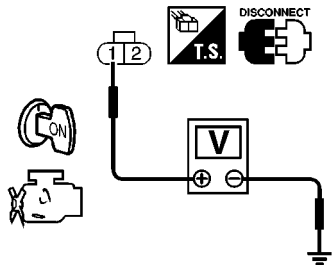1	CHECK EGR TEMPERATURE SENSOR POWER SUPPLY CIRCUIT
<p>1. Turn ignition switch "OFF". 2. Disconnect EGR temperature sensor harness connector.</p> <div style="text-align: center;">  <p style="text-align: center;">Air duct EGR temperature sensor harness connector</p> </div> <p>3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="text-align: center;">Voltage: Approximately 5V</p> <p style="text-align: center;">OK or NG</p> </div> <p style="text-align: right;">AEC660A SEF728U</p>	
OK	▶ GO TO 2.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

2	CHECK EGR TEMPERATURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF". 2. Check harness continuity between sensor terminal 2 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground or short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 4.
NG	▶ GO TO 3.

3	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F28, M58 ● Joint connector-4 ● Harness for open or short between ECM and EGR temperature sensor ● Harness for open or short between TCM (Transmission Control Module) and EGR temperature sensor 	
	▶ Repair open circuit or short to ground or short to power in harness or connector.

 GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX


DTC P1401 EGR TEMPERATURE SENSOR

VG33E

Diagnostic Procedure (Cont'd)

4 CHECK EGR TEMPERATURE SENSOR

Check resistance change and resistance value.

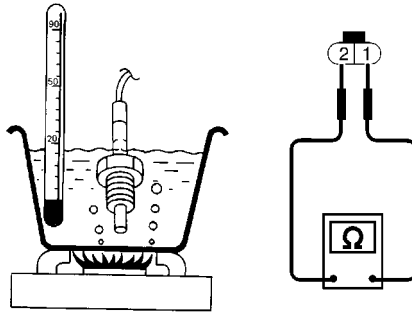


SEF643Q

<Reference data>

EGR temperature °C (°F)	Voltage (V)	Resistance (MΩ)
0 (32)	4.56	0.62 - 1.05
50 (122)	2.25	0.065 - 0.094
100 (212)	0.59	0.011 - 0.015

AEC039B

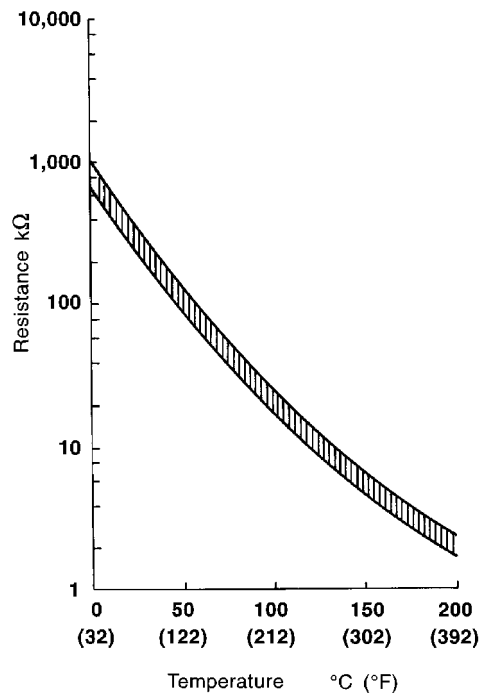

SEF320U

OK or NG

OK	▶	GO TO 5.
NG	▶	Replace EGR temperature sensor.

DTC P1401 EGR TEMPERATURE SENSOR

VG33E

Diagnostic Procedure (Cont'd)

5	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
▶	INSPECTION END

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1402 EGR FUNCTION (OPEN)

VG33E

Description (If Equipped with EGR Valve)

Description (If Equipped with EGR Valve) SYSTEM DESCRIPTION


NEEC0311

NEEC0311S01


Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	EGR control	EGRC-solenoid valve
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		

This system cuts and controls vacuum applied to the EGR valve to suit engine operating conditions. This cut-and-control operation is accomplished through the ECM and the EGRC-solenoid valve. When the ECM detects any of the following conditions, current does not flow through the solenoid valve. This causes the intake manifold vacuum to be discharged into the atmosphere. The EGR valve remains closed.

- Low engine coolant temperature
- Engine starting
- High-speed engine operation
- Engine idling
- Excessively high engine coolant temperature
- Mass air flow sensor malfunction

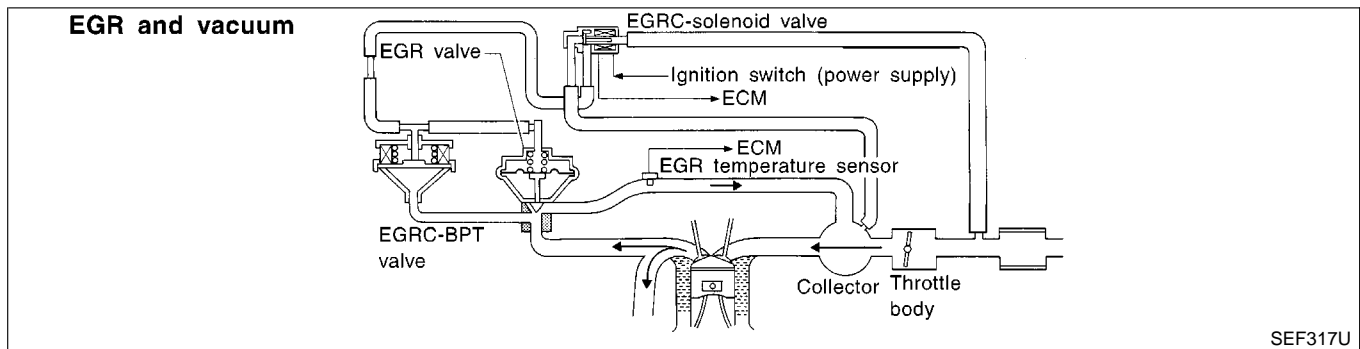

SEF317U

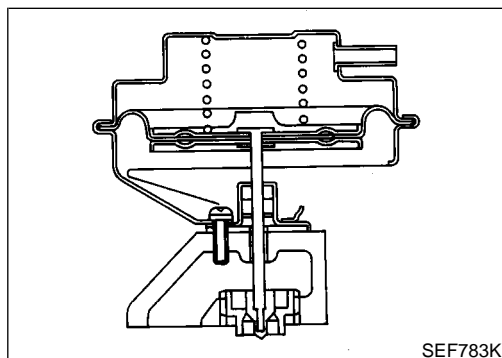

SEF783K

COMPONENT DESCRIPTION

NEEC0311S02

Exhaust Gas Recirculation (EGR) Valve


NEEC0311S0201

The EGR valve controls the amount of exhaust gas routed to the intake manifold. Vacuum is applied to the EGR valve in response to throttle valve opening and EGRC-BPT valve operation. The vacuum controls the movement of a taper valve connected to the vacuum diaphragm in the EGR valve.

DTC P1402 EGR FUNCTION (OPEN)

VG33E

Description (If Equipped with EGR Valve) (Cont'd)

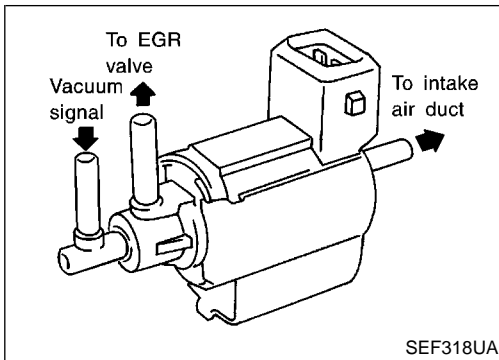


EGRC-solenoid Valve

NEEC0311S0202

The EGRC-solenoid valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the coil in the solenoid valve is energized. The vacuum signal (from the intake manifold collector) passes through the solenoid valve. The signal then reaches the EGR valve.

When the ECM sends an OFF signal, a plunger will then move to cut the vacuum signal.

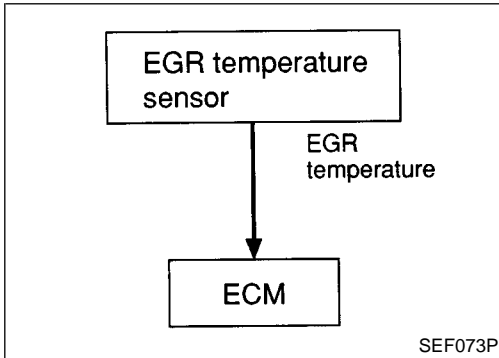

On Board Diagnosis Logic

NEEC0312

If the EGR temperature sensor detects EGR flow under the condition that does not call for EGR, a high-flow malfunction is diagnosed.

Malfunction is detected when EGR flow is detected under condition that does not call for EGR.


NOTE:

Diagnosis for this DTC will occur when engine coolant temperature is below 50-60°C (122-140°F). Therefore, it will be better to turn ignition switch "ON" (start engine) at the engine coolant temperature below 30°C (86°F) when starting DTC confirmation procedure.

POSSIBLE CAUSE

NEEC0312S01

- EGRC-solenoid valve
- EGR valve leaking or stuck open
- EGR temperature sensor
- EGRC-BPT valve

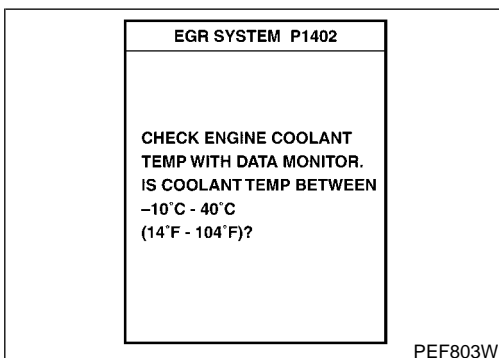

DTC Confirmation Procedure

NEEC0313

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:


- Always perform the test at a temperature of -10°C (14°F) or higher.
- Engine coolant temperature and EGR temperature must be verified in "DATA MONITOR" mode with CONSULT-II before starting DTC WORK SUPPORT test. If it is out of range below, the test cannot be conducted.

COOLAN TEMP/S: -10 to 30°C (14 to 86°F)*

EGR TEMP SEN: Less than 4.8V

If the values are out of the ranges indicated above, park the vehicle in a cool place and allow the engine temperature to stabilize. Do not attempt to reduce the engine coolant temperature or EGR temperature with a fan or means other than ambient air. Doing so may produce an inaccurate diagnostic result.

*: Although CONSULT-II screen displays "-10 to 40°C (14 to 104°F)" as a range of engine coolant temperature, ignore it.

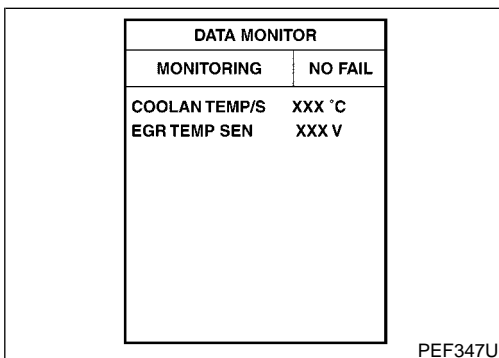

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1402 EGR FUNCTION (OPEN)

VG33E

DTC Confirmation Procedure (Cont'd)

4

EGR SYSTEM P1402	
OUT OF CONDITION	
MONITOR	
CMPS~RPM(REF)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF245V

4


EGR SYSTEM P1402	
TESTING	
MONITOR	
CMPS~RPM(REF)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF246V

4

EGR SYSTEM P1402	
COMPLETED	

PEF897U

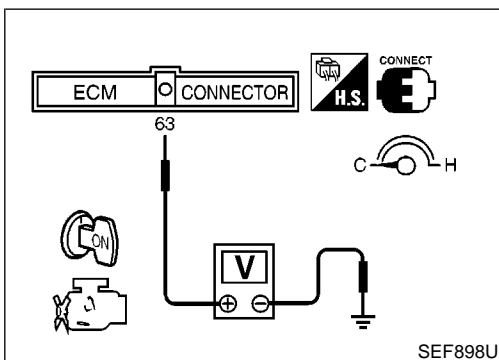

With CONSULT-II

- 1) Turn ignition switch "OFF", and wait at least 5 seconds, and then turn "ON".
- 2) Select "EGR SYSTEM P1402" of "EGR SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 3) Follow the CONSULT-II instructions.
- 4) Start engine and let it idle until "TESTING" on CONSULT-II screen is turned to "COMPLETED". (It will take 60 seconds or more.)

If "TESTING" is not displayed after 5 minutes, turn ignition "OFF" and cool the engine coolant temperature to the range of -10 to 30°C (14 to 86°F). Retry from step 1.

- 5) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-1076.

With GST

- 1) Turn ignition switch "ON" and select "MODE 1" with GST.
- 2) Check that engine coolant temperature is within the range of -10 to 30°C (14 to 86°F).
- 3) Check that voltage between ECM terminal 63 (EGR temperature sensor signal) and ground is less than 4.8V.
- 4) Start engine and let it idle for at least 60 seconds.
- 5) Stop engine.
- 6) Perform from step 1 to 4.
- 7) Select "MODE 3" with GST.
- 8) If DTC is detected, go to "Diagnostic Procedure", EC-1076.

DTC P1402 EGR FUNCTION (OPEN)


VG33E

Wiring Diagram

Wiring Diagram


NEEC0314

EC-EGRC1-01

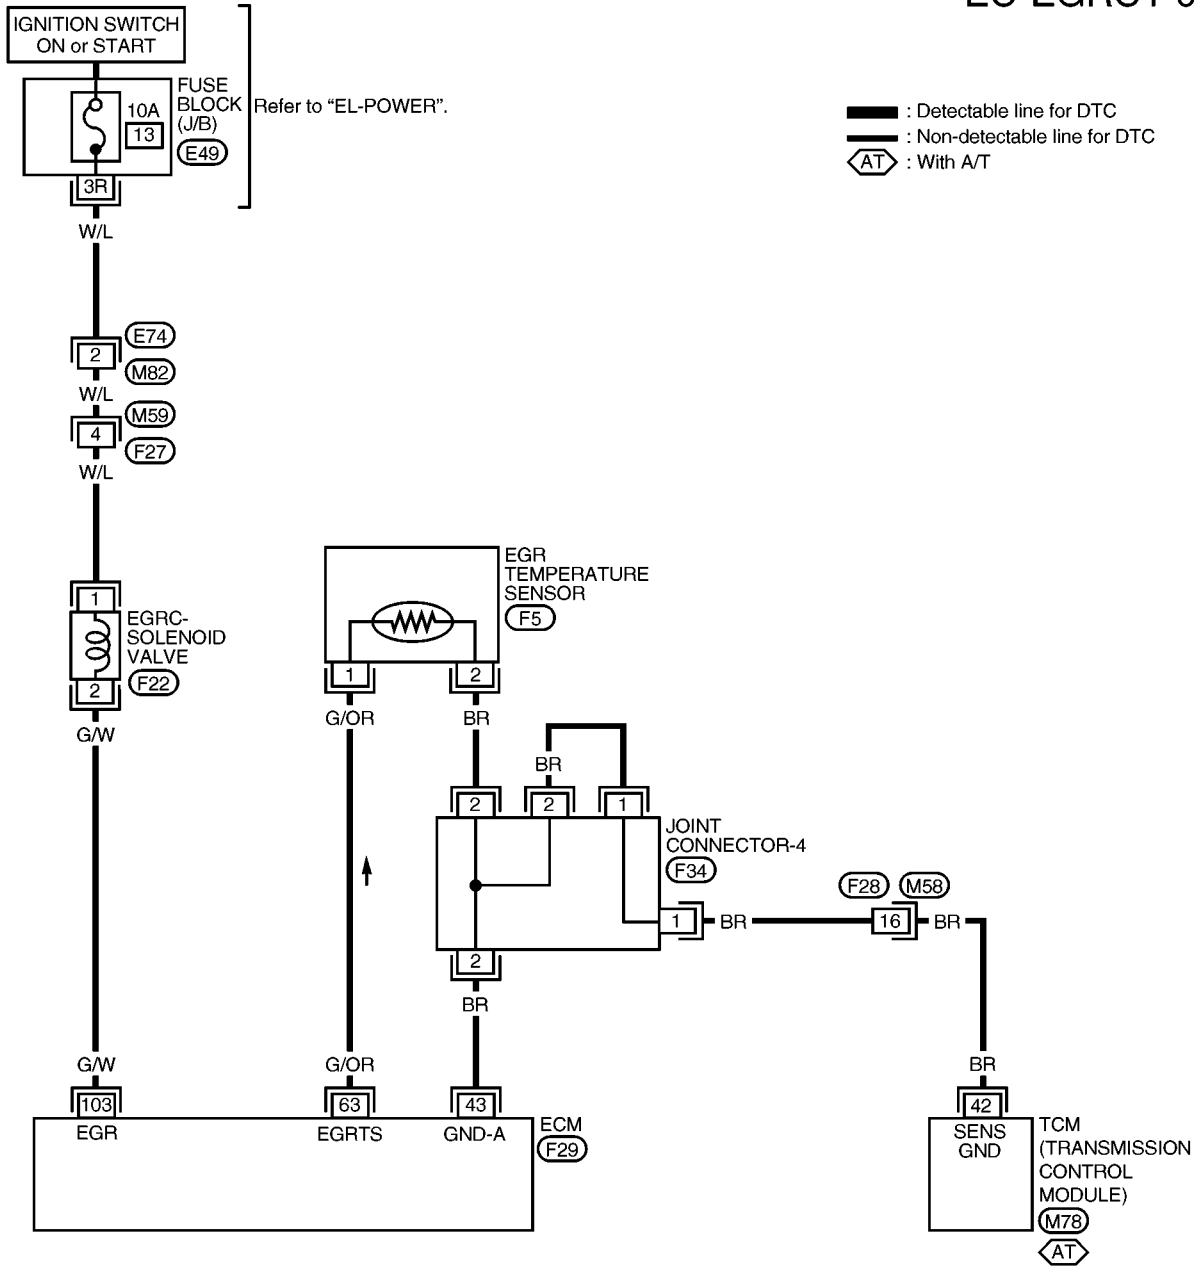

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST


RS
BT
HA
SC
EL
IDX

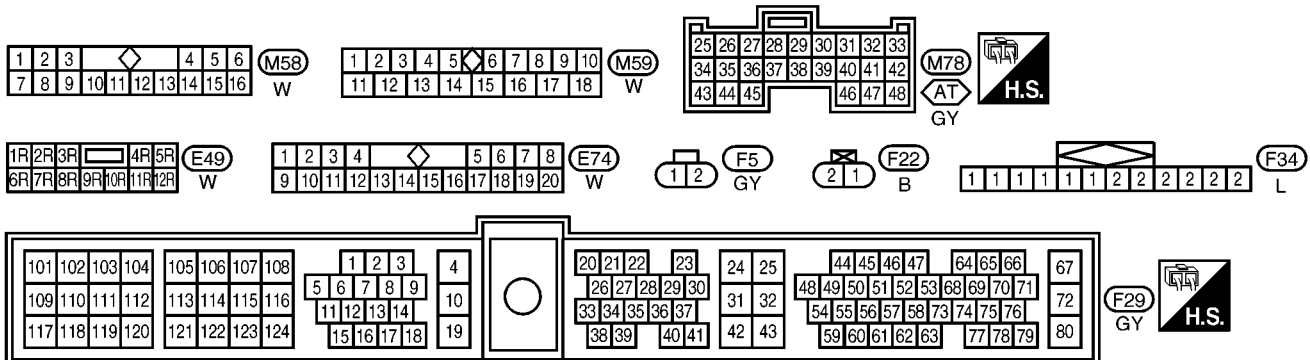

AEC958A

Diagnostic Procedure

NEEC0315

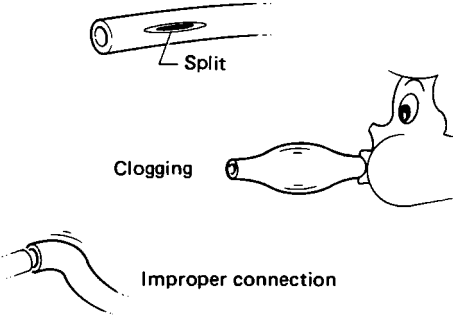1	CHECK VACUUM HOSE	
<p>1. Turn ignition switch "OFF". 2. Check vacuum hose for clogging, cracks or improper connection. Refer to "Vacuum Hose Drawing", EC-607.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF109L</p> <p style="text-align: center;">OK or NG</p>		
	OK (with CONSULT-II) ▶	GO TO 2.
	OK (without CONSULT-II) ▶	GO TO 3.
	NG ▶	Repair or replace vacuum hose.

2	CHECK EGRC-SOLENOID VALVE CIRCUIT																															
<p>Ⓟ With CONSULT-II</p> <p>1. Turn ignition switch "ON". 2. Turn EGRC-solenoid valve "ON" and "OFF" in "ACTIVE TEST" mode with CONSULT-II and check operating sound.</p> <div style="text-align: center;"> <table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>EGRC SOL/V</td> <td>ON</td> </tr> <tr> <td>(EGR)</td> <td>FLOW</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>CMPS-RPM(REF)</td> <td>XXX rpm</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table> </div> <p style="text-align: right;">PEF789U</p> <p>Clicking noise should be heard.</p> <p style="text-align: center;">OK or NG</p>			ACTIVE TEST		EGRC SOL/V	ON	(EGR)	FLOW	MONITOR		CMPS-RPM(REF)	XXX rpm																				
ACTIVE TEST																																
EGRC SOL/V	ON																															
(EGR)	FLOW																															
MONITOR																																
CMPS-RPM(REF)	XXX rpm																															
	OK ▶	GO TO 5.																														
	NG ▶	GO TO 4.																														

DTC P1402 EGR FUNCTION (OPEN)

VG33E

Diagnostic Procedure (Cont'd)

3	CHECK EGRC-SOLENOID VALVE CIRCUIT	
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Disconnect ECM harness connector. 2. Turn ignition switch "ON". 3. Connect a suitable jumper wire between ECM terminal 103 and engine ground. <div style="text-align: center;"> </div> <p>4. Check operating sound of EGRC-solenoid valve when disconnecting and connecting the jumper wire. Clicking noise should be heard.</p> <p style="text-align: right;">SEF937V</p>		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair or replace EGRC-solenoid valve or repair circuit.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1402 EGR FUNCTION (OPEN)


VG33E

Diagnostic Procedure (Cont'd)

4 CHECK EGRC-SOLENOID VALVE

With CONSULT-II

1. Perform "EGRC SOLENOID VALVE" in "ACTIVE TEST" mode.
2. Check air passage continuity and operation delay time under the following conditions.

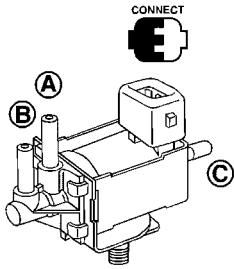


ACTIVE TEST	
EGRC SOL/V (EGR)	ON FLOW
MONITOR	
CMPS-RPM (REF)	XXrpm

Conditions	Air passage continuity between A and B	Air passage continuity between A and C
ON	Yes	No
OFF	No	Yes

SEF155X

Without CONSULT-II

Check air passage continuity and operation delay time under the following conditions.

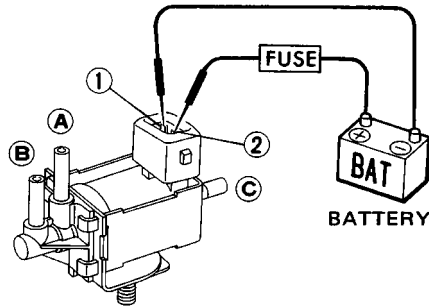

AEC919

Condition	Air passage continuity between A and B	Air passage continuity between A and C
12V direct current supply between terminals 1 and 2	Yes	No
No supply	No	Yes

MTBL0237


OK or NG

- | | | |
|----|---|------------------------------|
| OK | ▶ | GO TO 5. |
| NG | ▶ | Replace EGRC-solenoid valve. |

DTC P1402 EGR FUNCTION (OPEN)


VG33E

Diagnostic Procedure (Cont'd)

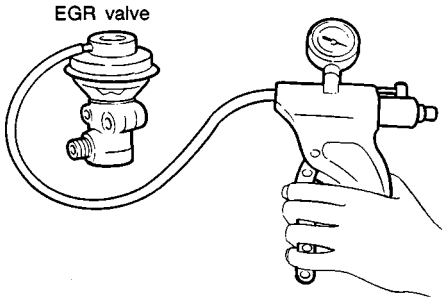5	CHECK EGR VALVE		
Apply vacuum to EGR vacuum port with a hand vacuum pump.			
			
<p>EGR valve spring should lift.</p> <ul style="list-style-type: none"> ● Check for sticking. 			
MEF137D			
OK or NG			
OK	▶	GO TO 6.	
NG	▶	Replace EGR valve.	

GI
MA
EM
LC
EC

FE
CL

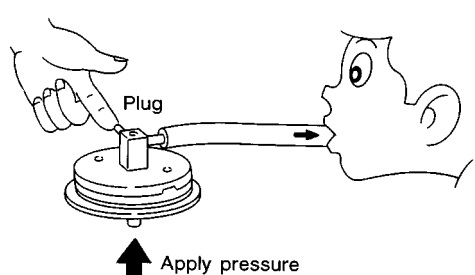6	CHECK EGRC-BPT VALVE		
<ol style="list-style-type: none"> 1. Plug one of two ports of EGRC-BPT valve. 2. Vacuum from the other port and check for leakage while applying a pressure above 0.981 kPa (100 mmH₂O, 3.94 inH₂O) from under EGRC-BPT valve. 			
			
<p>Leakage should not exist.</p>			
SEF083P			
OK or NG			
OK	▶	GO TO 7.	
NG	▶	Replace EGRC-BPT valve.	

MT
AT
TF
PD
AX
SU
BR
ST

RS
BT
HA
SC
EL
IDX


DTC P1402 EGR FUNCTION (OPEN)

VG33E

Diagnostic Procedure (Cont'd)

7 CHECK EGR TEMPERATURE SENSOR

Check resistance change and resistance value.

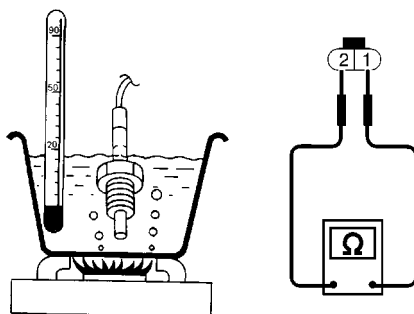


SEF643Q

<Reference data>

EGR temperature °C (°F)	Voltage (V)	Resistance (MΩ)
0 (32)	4.56	0.62 - 1.05
50 (122)	2.25	0.065 - 0.094
100 (212)	0.59	0.011 - 0.015

AEC039B

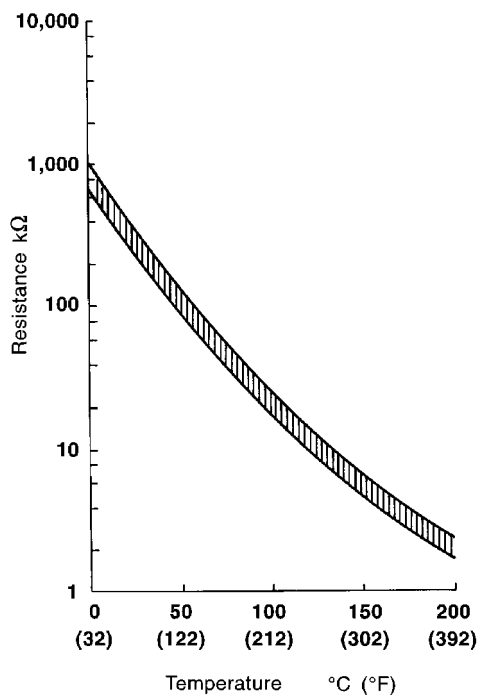

SEF320U

OK or NG

OK	▶	GO TO 8.
NG	▶	Replace EGR temperature sensor.

DTC P1402 EGR FUNCTION (OPEN)

VG33E

Diagnostic Procedure (Cont'd)

8	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
▶	INSPECTION END

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1440 EVAP CONTROL SYSTEM (SMALL LEAK) (POSITIVE PRESSURE)

VG33E

On Board Diagnosis Logic

On Board Diagnosis Logic

NEEC0316


NOTE:

If DTC P1440 is displayed with P1448, perform trouble diagnosis for DTC P1448 first. (See EC-1115.)

This diagnosis detects leaks in the EVAP purge line using of vapor pressure in the fuel tank.

The EVAP canister vent control valve is closed to shut the EVAP purge line. The vacuum cut valve bypass valve will then be opened to clear the line between the fuel tank and the EVAP canister purge volume control solenoid valve. The EVAP control system pressure sensor can now monitor the pressure inside the fuel tank.

If pressure increases, the ECM will check for leaks in the line between the vacuum cut valve and EVAP canister purge volume control solenoid valve.

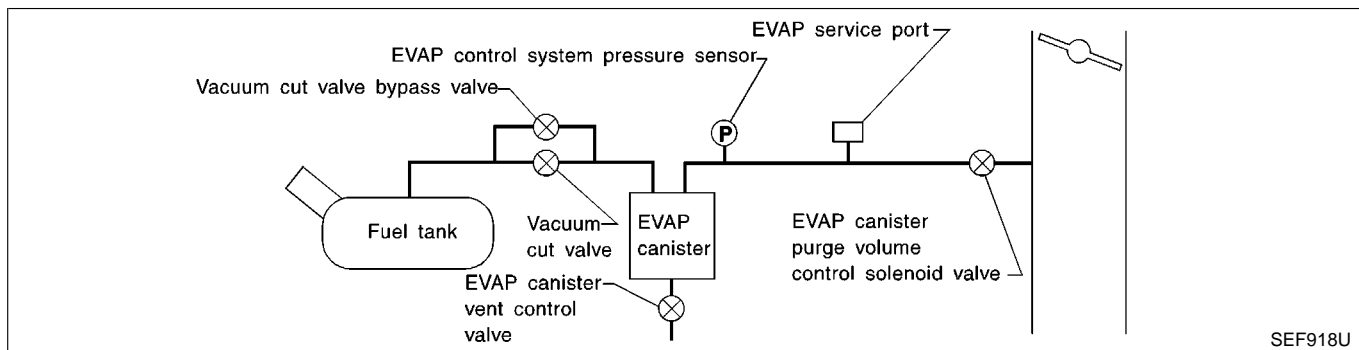

Malfunction is detected when EVAP control system has a leak, EVAP control system does not operate properly.

CAUTION:

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine NISSAN rubber tube as a replacement.

POSSIBLE CAUSE

NEEC0316S01

- Fuel filler cap remains open or fails to close.
- Incorrect fuel tank vacuum relief valve
- Incorrect fuel filler cap used
- Foreign matter caught in fuel filler cap.
- Leak is in line between intake manifold and EVAP canister purge volume control solenoid valve.
- Foreign matter caught in EVAP canister vent control valve.
- EVAP canister or fuel tank leaks
- EVAP purge line (pipe and rubber tube) leaks
- EVAP purge line rubber tube bent.
- Blocked or bent rubber tube to EVAP control system pressure sensor
- Loose or disconnected rubber tube
- EVAP canister vent control valve and the circuit
- EVAP canister purge volume control solenoid valve
- Absolute pressure sensor
- Fuel tank temperature sensor
- MAP/BARO switch solenoid valve

DTC P1440 EVAP CONTROL SYSTEM (SMALL LEAK) (POSITIVE PRESSURE)

VG33E

On Board Diagnosis Logic (Cont'd)

- Blocked or bent rubber tube to MAP/BARO switch solenoid valve
- O-ring of EVAP canister vent control valve is missing or damaged.
- Water separator
- EVAP canister is saturated with water.
- EVAP control system pressure sensor
- Fuel level sensor

GI

MA

EM

LC

DTC Confirmation Procedure

Refer to "P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)", EC-958.

NEEC0317

EC

FE

CL

MT

Diagnostic Procedure

NOTE:

Refer to "P0440 EVAP CONTROL SYSTEM (SMALL LEAK) (NEGATIVE PRESSURE)", EC-959.

NEEC0318

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

VG33E

Description


Description SYSTEM DESCRIPTION

NEEC0319

NEEC0319S01

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	EVAP canister purge flow control	EVAP canister purge volume control solenoid valve
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
Throttle position switch	Closed throttle position		
Front heated oxygen sensors	Density of oxygen in exhaust gas (Mixture ratio feedback signal)		
Fuel tank temperature sensor	Fuel temperature in fuel tank		
Vehicle speed sensor	Vehicle speed		

This system controls flow rate of fuel vapor from the EVAP canister. The opening of the vapor by-pass passage in the EVAP canister purge volume control solenoid valve changes to control the flow rate. The EVAP canister purge volume control solenoid valve repeats ON/OFF operation according to the signal sent from the ECM. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. When the engine is operating, the flow rate of fuel vapor from the EVAP canister is regulated as the air flow changes.

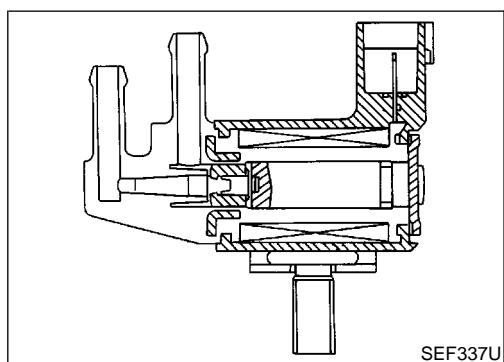

COMPONENT DESCRIPTION

NEEC0319S02

The EVAP canister purge volume control solenoid valve uses a ON/OFF duty to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

CONSULT-II Reference Value in Data Monitor Mode

NEEC0320

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
PURG VOL C/V	● Engine: After warming up ● Air conditioner switch "OFF" ● Shift lever: "N" ● No-load Idle (Vehicle stopped)	0%
	2,000 rpm	—

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE



VG33E

ECM Terminals and Reference Value

ECM Terminals and Reference Value

NEEC0321

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

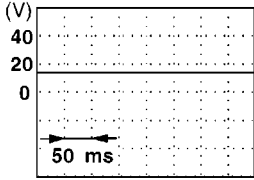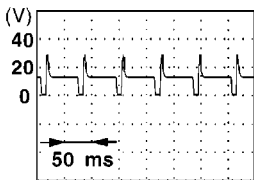TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
4	OR/B	ECM relay (Self shut-off)	[Engine is running] [Ignition switch "OFF"] <ul style="list-style-type: none"> ● For a few seconds after turning ignition switch "OFF" 	0 - 1.5V
			[Ignition switch "OFF"] <ul style="list-style-type: none"> ● A few seconds passed after turning ignition switch "OFF" 	BATTERY VOLTAGE (11 - 14V)
5	R/Y	EVAP canister purge volume control solenoid valve	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V) 
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm 	BATTERY VOLTAGE (11 - 14V) 
67	B/P	Power supply for ECM	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
72	B/P			
117	B/P	Current return	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V)

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

On Board Diagnosis Logic

NEEC0322

Malfunction is detected when the canister purge flow is detected during the specified driving conditions, even when EVAP canister purge volume control solenoid valve is completely closed.

POSSIBLE CAUSE

NEEC0322S01

- EVAP control system pressure sensor
- EVAP canister purge volume control solenoid valve (The valve is stuck open.)
- EVAP canister vent control valve
- EVAP canister

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

VG33E

DTC Confirmation Procedure

- Hoses
(Hoses are connected incorrectly or clogged.)

DATA MONITOR	
MONITORING	NO FAIL
CMPS~RPM(REF)	XXX rpm
COOLAN TEMP/S	XXX °C
TANK F/TMP SE	XXX °C

PEF195V

DTC Confirmation Procedure

NEEC0323

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

6

PURG VOL CN/V P1444	
OUT OF CONDITION	
MONITOR	
CMPS~RPM(REF)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF900U

Ⓜ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "PURG VOL CN/V P1444" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 5) Touch "START".
- 6) Start engine and let it idle until "TESTING" on CONSULT-II changes to "COMPLETED". (It will take for approximately 10 seconds.)

If "TESTING" is not displayed after 5 minutes, retry from step 2.

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-1088.

6

PURG VOL CN/V P1444	
TESTING	
MONITOR	
CMPS~RPM(REF)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF901U

Ⓜ With GST

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Start engine and let it idle for at least 20 seconds.
- 4) Select "MODE 7" with GST.
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-1088.

6

PURG VOL CN/V P1444	
COMPLETED	

PEF902U

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE


VG33E

Wiring Diagram




Wiring Diagram

NEEC0324

EC-PGC/V-01

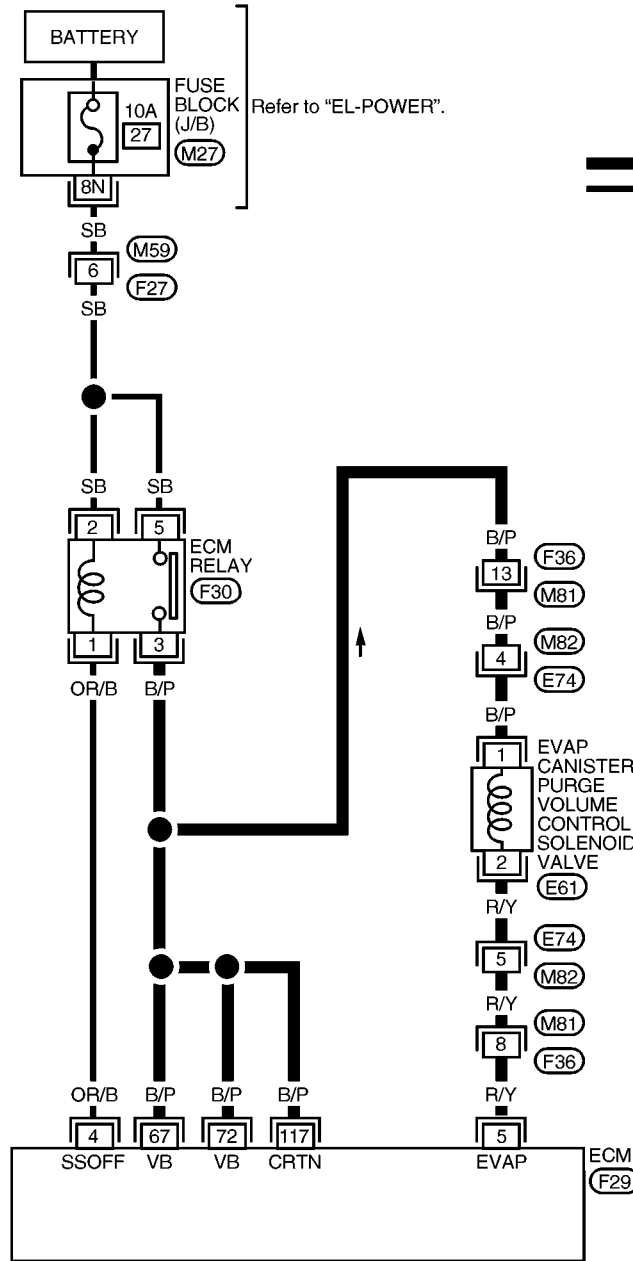

— : Detectable line for DTC
 — : Non-detectable line for DTC

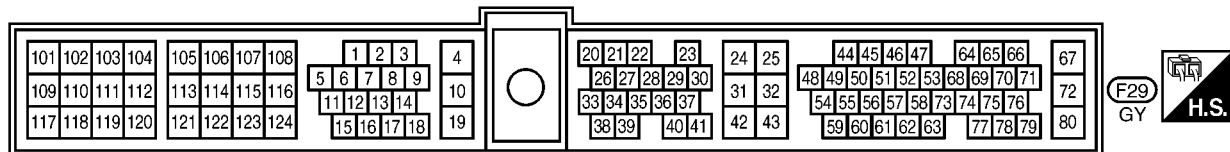

AEC959A

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX



DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0325

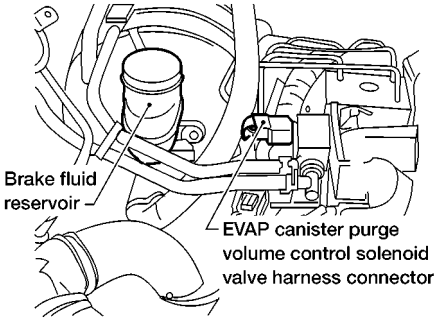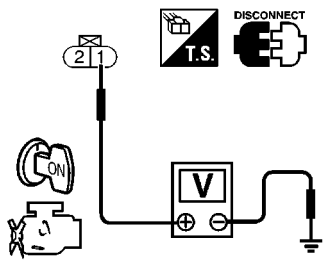1	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT
<p>1. Turn ignition switch "OFF". 2. Disconnect EVAP canister purge volume control solenoid valve harness connector.</p> <div style="text-align: center;">  <p>Brake fluid reservoir</p> <p>EVAP canister purge volume control solenoid valve harness connector</p> </div> <p style="text-align: right;">AEC652A</p> <p>3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and engine ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="color: blue;">Voltage: Battery voltage</p> <p>OK or NG</p> </div> <p style="text-align: right;">SEF646W</p>	
OK	▶ GO TO 3.
NG	▶ GO TO 2.

2	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F36, M81 ● Harness connectors M82, E74 ● Harness for open or short between EVAP canister purge volume control solenoid valve and ECM relay ● Harness for open or short between EVAP canister purge volume control solenoid valve and ECM 	
▶	Repair harness or connectors.

3	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 5 and solenoid valve terminal 2. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

VG33E

Diagnostic Procedure (Cont'd)

4	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Harness connectors E74, M82 ● Harness connectors M81, F36 ● Harness for open or short between EVAP canister purge volume control solenoid valve and ECM 		
▶	Repair open circuit or short to ground or short to power in harness or connectors.	

GI


MA

EM

5	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR HOSE	
Check disconnection or improper connection of hose connected to EVAP control system pressure sensor.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Repair it.

LC

EC

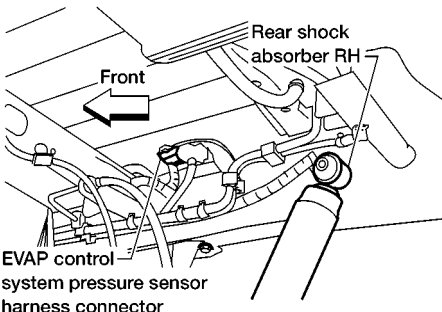6	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR	
1. Disconnect EVAP control system pressure sensor harness connector.		
 <p style="text-align: center;">Rear shock absorber RH</p> <p style="text-align: center;">Front</p> <p style="text-align: center;">EVAP control system pressure sensor harness connector</p>		
AEC651A		
2. Check connectors for water. Water should not exist.		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Replace EVAP control system pressure sensor.

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX


DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

VG33E

Diagnostic Procedure (Cont'd)

7 CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

1. Remove EVAP control system pressure sensor with its harness connector connected.
2. Remove hose from EVAP control system pressure sensor.
3. Turn ignition switch "ON".
4. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.
5. Check input voltage between ECM terminal 62 and ground.

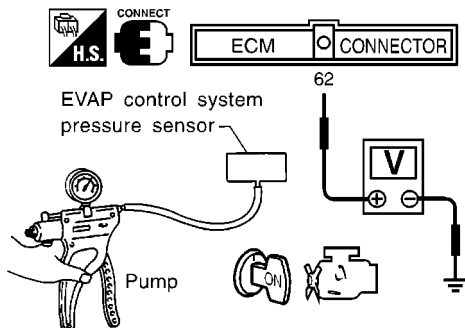

SEF894U

Pressure (Relative to atmospheric pressure)	Voltage (V)
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6


MTBL0246

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.

CAUTION:

- Never apply force to the air hole protector of the sensor if equipped.

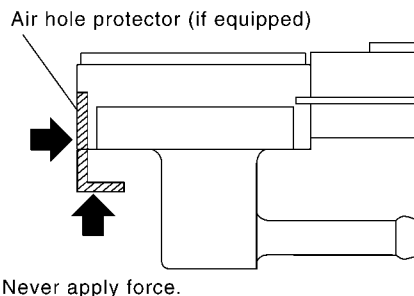

SEF799W

- Discard and EVAP control system pressure sensor which has been dropped from a height of more than 0.5m (19.7in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK (with CONSULT-II)	▶	GO TO 8.
OK (without CONSULT-II)	▶	GO TO 9.
NG	▶	Replace EVAP control system pressure sensor.

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

VG33E

Diagnostic Procedure (Cont'd)

8 CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Ⓟ With CONSULT-II


1. Start engine.
2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.

ACTIVE TEST	
PURG VOL CONT/V	0.0%
MONITOR	
CMPS~RPM(REF)	XXX rpm
FR O2 MNTR-B2	RICH
FR O2 MNTR-B1	RICH
A/F ALPHA-B2	XXX %
A/F ALPHA-B1	XXX %
THRTL POS SEN	XXX V

PEF882U

If OK, inspection end. If NG, go to following step.

3. Check air passage continuity.

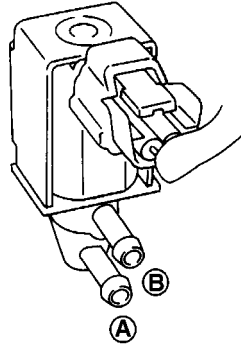

SEF660U

Condition PURG VOL CONT/V value	Air passage continuity between A and B
100.0%	Yes
0.0%	No

MTBL0241

If NG, replace the EVAP canister purge volume control solenoid valve.

OK or NG

OK	▶	GO TO 10.
NG	▶	Replace EVAP canister purge volume control solenoid valve.


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

VG33E

Diagnostic Procedure (Cont'd)

9 CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

 **Without CONSULT-II**
Check air passage continuity.

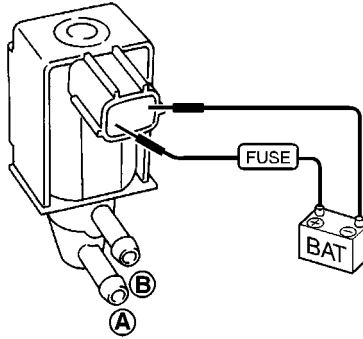

SEF661U

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	Yes
No supply	No

MTBL0242

If NG, replace the EVAP canister purge volume control solenoid valve.

OK or NG

OK	▶	GO TO 10.
NG	▶	Replace EVAP canister purge volume control solenoid valve.

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

VG33E


Diagnostic Procedure (Cont'd)

10 CHECK EVAP CANISTER VENT CONTROL VALVE

Check air passage continuity.

With CONSULT-II

Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.

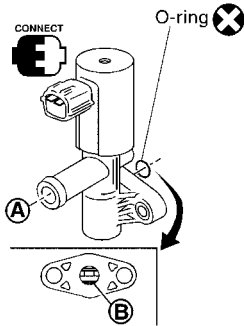

ACTIVE TEST	
VENT CONTROL/V	OFF
MONITOR	
CMPS-RPM (REF)	XXXrpm
FR O2 MNTR-B1	RICH
A/F ALPHA-B1	XXX%
THRTL POS SEN	XXXV

Condition VENT CONTROL/V	Air passage continuity between A and B
ON	No
OFF	Yes


SEF156X

Without CONSULT-II

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	No
OFF	Yes

MTBL0240

If NG or operation takes more than 1 second, clean valve using air blower or replace as necessary.
If portion **B** is rusted, replace control valve.

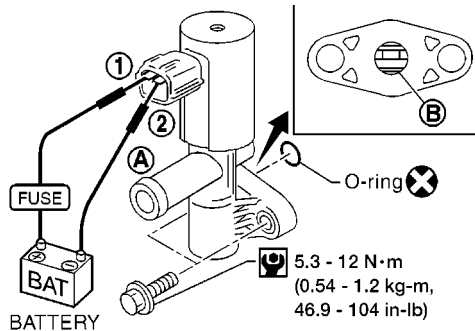

AEC783A

Make sure new O-ring is installed properly.

OK or NG

OK	▶	GO TO 11.
NG	▶	Replace EVAP canister vent control valve.

11 CHECK RUBBER TUBE

Check for obstructed rubber tube connected to EVAP canister vent control valve.

OK or NG


OK	▶	GO TO 12.
NG	▶	Clean, repair or replace rubber tube.


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

VG33E

Diagnostic Procedure (Cont'd)

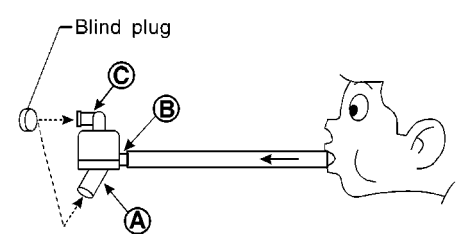12	CHECK WATER SEPARATOR						
<p>1. Check visually for insect nests in the water separator air inlet. 2. Check visually for cracks or flaws in the appearance. 3. Check visually for cracks or flaws in the hose. 4. Check that A and C are not clogged by blowing air into B with A, and then C plugged.</p> <div style="text-align: center;">  <p>* (A) : Bottom hole (To atmosphere) (B) : Emergency tube (From EVAP canister) (C) : Inlet port (To member)</p> </div> <p style="text-align: right;">SEF829T</p> <p>5. In case of NG in items 2 - 4, replace the parts. NOTE: • Do not disassemble water separator.</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 13.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace water separator.</td> </tr> </table>		OK	▶	GO TO 13.	NG	▶	Replace water separator.
OK	▶	GO TO 13.					
NG	▶	Replace water separator.					

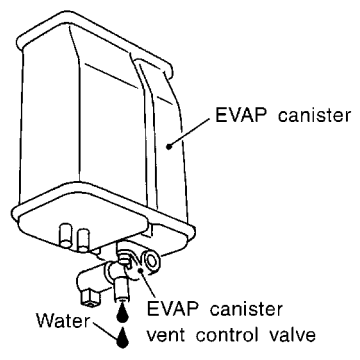13	CHECK IF EVAP CANISTER SATURATED WITH WATER						
<p>1. Remove EVAP canister with EVAP canister vent control valve attached. 2. Check if water will drain from the EVAP canister.</p> <div style="text-align: center;">  <p style="text-align: right;">SEF596U</p> </div> <p style="text-align: center;">Yes or No</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">Yes</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 14.</td> </tr> <tr> <td>No</td> <td style="text-align: center;">▶</td> <td>GO TO 16.</td> </tr> </table>		Yes	▶	GO TO 14.	No	▶	GO TO 16.
Yes	▶	GO TO 14.					
No	▶	GO TO 16.					

14	CHECK EVAP CANISTER						
<p>Weigh the EVAP canister with the EVAP canister vent control valve attached. The weight should be less than 1.8 kg (4.0 lb).</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 16.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 15.</td> </tr> </table>		OK	▶	GO TO 16.	NG	▶	GO TO 15.
OK	▶	GO TO 16.					
NG	▶	GO TO 15.					

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

VG33E

Diagnostic Procedure (Cont'd)

15	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● EVAP canister for damage● EVAP hose between EVAP canister and water separator for clogging or poor connection	
	▶ Repair hose or replace EVAP canister.

GI

MA

16	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
	▶ INSPECTION END

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC



EL

IDX

DTC P1446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CLOSE)

VG33E

Component Description

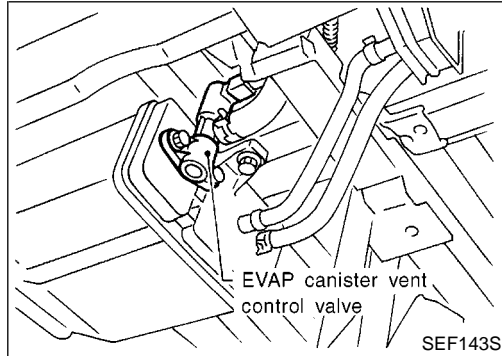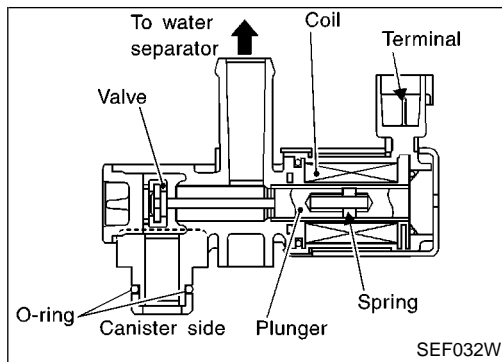

Component Description

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent. NEEC0326

This solenoid valve responds to signals from the ECM. When the ECM sends an ON signal, the coil in the solenoid valve is energized. A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System (Small Leak)" diagnosis.

CONSULT-II Reference Value in Data Monitor Mode

Specification data are reference values.

NEEC0327

MONITOR ITEM	CONDITION	SPECIFICATION
VENT CONT/V	● Ignition switch: ON	OFF

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 32 (ECM ground). NEEC0328

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
108	R/G	EVAP canister vent control valve	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

Malfunction is detected when EVAP canister vent control valve remains closed under specified driving conditions. NEEC0329

POSSIBLE CAUSE

NEEC0329S01

- EVAP canister vent control valve
- EVAP control system pressure sensor and the circuit
- Blocked rubber tube to EVAP canister vent control valve
- Water separator
- EVAP canister is saturated with water.

DTC P1446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CLOSE)

VG33E

DTC Confirmation Procedure

4

DATA MONITOR	
MONITORING	NO FAIL
CMPS-RPM(REF)	XXX rpm
COOLANT TEMP/S	XXX °C
VHCL SPEED SE	XXX km/h
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF403V

DTC Confirmation Procedure

NEEC0330

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

Ⓜ With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine.
- 4) Drive vehicle at a speed of approximately 80 km/h (50 MPH) for a maximum of 15 minutes.

NOTE:

If a malfunction exists, NG result may be displayed quicker.

- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-1099.

Ⓜ With GST

Follow the procedure "With CONSULT-II".

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CLOSE)




VG33E

Wiring Diagram

Wiring Diagram

NEEC0331

EC-VENT/V-01

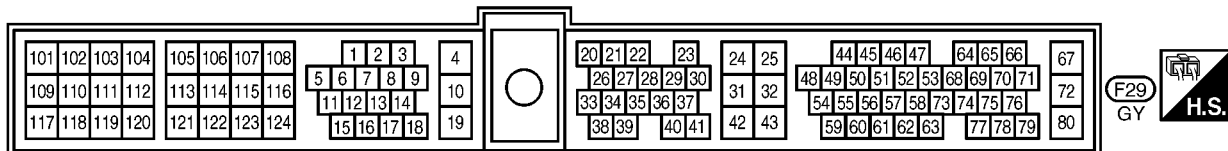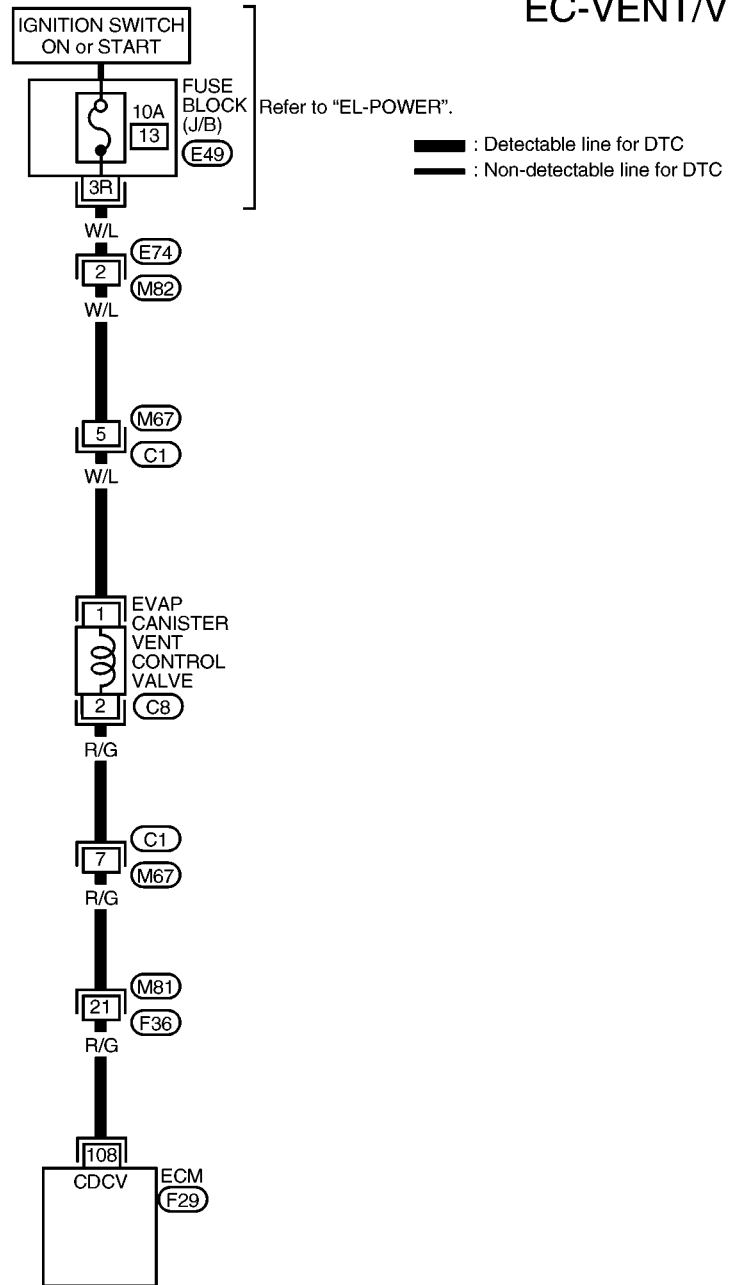

AEC017B


DTC P1446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CLOSE)

VG33E

Diagnostic Procedure


Diagnostic Procedure

NEEC0332

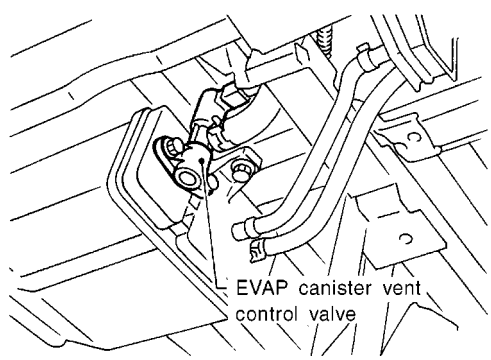1	CHECK RUBBER TUBE		
<ol style="list-style-type: none"> Turn ignition switch "OFF". Check obstructed rubber tube connected to EVAP canister vent control valve. 			
			
SEF143S			
OK or NG			
OK	▶	GO TO 2.	
NG	▶	Clean, repair or replace rubber tube.	

GI
MA
EM
LC
EC

FE
CL

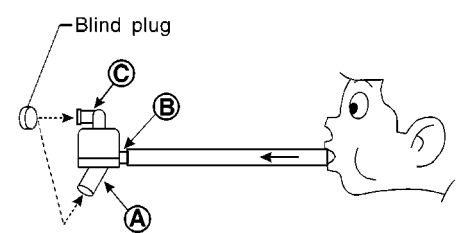2	CHECK WATER SEPARATOR		
<ol style="list-style-type: none"> Check visually for insect nests in the water separator air inlet. Check visually for cracks or flaws in the appearance. Check visually for cracks or flaws in the hose. Check that A and C are not clogged by blowing air into B with A, and then C plugged. 			
			
<p>* (A) : Bottom hole (To atmosphere) (B) : Emergency tube (From EVAP canister) (C) : Inlet port (To member)</p>			
SEF829T			
5. In case of NG in items 2 - 4, replace the parts.			
NOTE:			
<ul style="list-style-type: none"> Do not disassemble water separator. 			
OK or NG			
OK	▶	GO TO 3.	
NG	▶	Replace water separator.	

MT
AT
TF
PD
AX
SU
BR
ST

RS

BT

HA

SC

EL

IDX

DTC P1446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CLOSE)

VG33E


Diagnostic Procedure (Cont'd)

3 CHECK EVAP CANISTER VENT CONTROL VALVE AND O-RING

Check air passage continuity.

With CONSULT-II

Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.

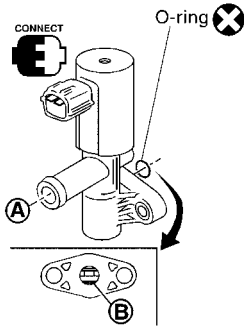

ACTIVE TEST	
VENT CONTROL/V	OFF
MONITOR	
CMPS-RPM (REF)	XXXrpm
FR O2 MNTR-B1	RICH
A/F ALPHA-B1	XXX%
THRTL POS SEN	XXXV

Condition VENT CONTROL/V	Air passage continuity between A and B
ON	No
OFF	Yes


SEF156X

Without CONSULT-II

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	No
OFF	Yes

MTBL0240

If NG or operation takes more than 1 second, clean valve using air blower or replace as necessary.
If portion **B** is rusted, replace control valve.

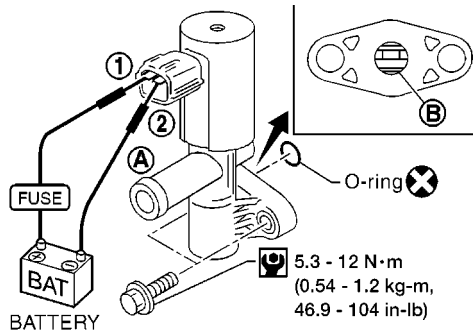

AEC783A

Make sure new O-ring is installed properly.


OK or NG

OK	▶	GO TO 4.
NG	▶	Replace EVAP canister vent control valve and O-ring.

DTC P1446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CLOSE)

VG33E

Diagnostic Procedure (Cont'd)

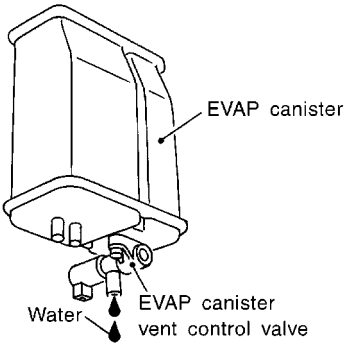4	CHECK IF EVAP CANISTER SATURATED WITH WATER	
<p>1. Remove EVAP canister with EVAP canister vent control valve attached.</p> <p>2. Check if water will drain from the EVAP canister.</p>		
		
SEF596U		
Yes or No		
Yes	▶	GO TO 5.
No	▶	GO TO 7.

GI
MA
EM
LC
EC

FE
CL

5	CHECK EVAP CANISTER	
<p>Weigh the EVAP canister with the EVAP canister vent control valve attached.</p> <p>The weight should be less than 1.8 kg (4.0 lb).</p>		
OK or NG		
OK	▶	GO TO 7.
NG	▶	GO TO 6.

MT
AT
TF

6	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● EVAP canister for damage ● EVAP hose between EVAP canister and water separator for clogging or poor connection 		
▶		Repair hose or replace EVAP canister.

PD
AX
SU

7	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR HOSE	
<p>Check disconnection or improper connection of hose connected to EVAP control system pressure sensor.</p>		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Repair it.

BR
ST
RS


BT
HA
SC
EL

IDX

DTC P1446 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (CLOSE)

VG33E

Diagnostic Procedure (Cont'd)

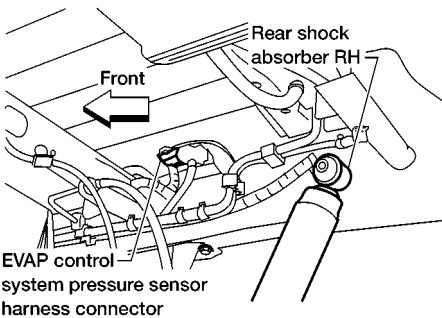8	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR	
<p>1. Disconnect EVAP control system pressure sensor harness connector.</p> <div style="text-align: center;">  </div>		
<p>2. Check connectors for water. Water should not exist.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 9.
NG	▶	Replace EVAP control system pressure sensor.

AEC651A

9	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR FUNCTION	
<p>Refer to "DTC Confirmation Procedure" for DTC P0450, EC-982.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 10.
NG	▶	Replace EVAP control system pressure sensor.


10	CHECK INTERMITTENT INCIDENT	
<p>Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.</p>		
	▶	INSPECTION END

System Description

NEEC0333

NOTE:

If DTC P1447 is displayed with P0510, perform trouble diagnosis for DTC P0510 first. (See EC-1016.)

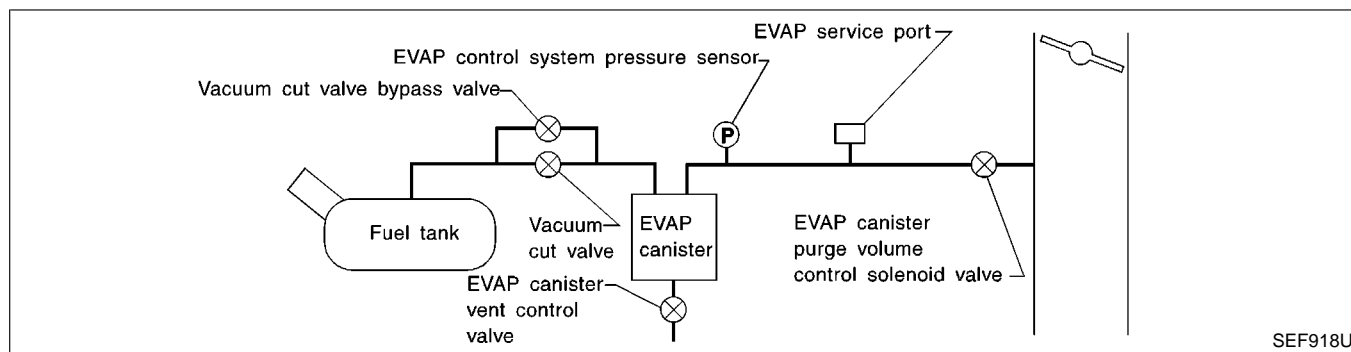

SEF918U

In this evaporative emission (EVAP) control system, purge flow occurs during non-closed throttle conditions. Purge volume is related to air intake volume. Under normal purge conditions (non-closed throttle), the EVAP canister purge volume control solenoid valve is open. Purge flow exposes the EVAP control system pressure sensor to intake manifold vacuum.

On Board Diagnosis Logic

NEEC0334

Under normal conditions (non-closed throttle), sensor output voltage indicates if pressure drop and purge flow are adequate. If not, a fault is determined.

Malfunction is detected when EVAP control system does not operate properly, EVAP control system has a leak between intake manifold and EVAP control system pressure sensor.

POSSIBLE CAUSE

NEEC0334S01

- EVAP canister purge volume control solenoid valve stuck closed
- EVAP control system pressure sensor and the circuit
- Loose, disconnected or improper connection of rubber tube
- Blocked rubber tube
- Blocked or bent rubber tube to MAP/BARO switch solenoid valve
- Cracked EVAP canister
- EVAP canister purge volume control solenoid valve circuit
- Closed throttle position switch
- Blocked purge port
- EVAP canister vent control valve

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

VG33E

DTC Confirmation Procedure

NEEC0335

5	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">PURG FLOW P1447</td></tr> <tr><td style="text-align: center;">OUT OF CONDITION</td></tr> <tr><td style="text-align: center;">MONITOR</td></tr> <tr> <td style="text-align: center;">CMPS~RPM(POS)</td> <td style="text-align: center;">XXX rpm</td> </tr> <tr> <td style="text-align: center;">THRTL POS SEN</td> <td style="text-align: center;">XXX V</td> </tr> <tr> <td style="text-align: center;">B/FUEL SCHDL</td> <td style="text-align: center;">XXX msec</td> </tr> </table>	PURG FLOW P1447	OUT OF CONDITION	MONITOR	CMPS~RPM(POS)	XXX rpm	THRTL POS SEN	XXX V	B/FUEL SCHDL	XXX msec
PURG FLOW P1447										
OUT OF CONDITION										
MONITOR										
CMPS~RPM(POS)	XXX rpm									
THRTL POS SEN	XXX V									
B/FUEL SCHDL	XXX msec									

PEF616W

6	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">PURG FLOW P1447</td></tr> <tr><td style="text-align: center;">TESTING</td></tr> <tr><td style="text-align: center;">MONITOR</td></tr> <tr> <td style="text-align: center;">CMPS~RPM(POS)</td> <td style="text-align: center;">XXX rpm</td> </tr> <tr> <td style="text-align: center;">THRTL POS SEN</td> <td style="text-align: center;">XXX V</td> </tr> <tr> <td style="text-align: center;">B/FUEL SCHDL</td> <td style="text-align: center;">XXX msec</td> </tr> </table>	PURG FLOW P1447	TESTING	MONITOR	CMPS~RPM(POS)	XXX rpm	THRTL POS SEN	XXX V	B/FUEL SCHDL	XXX msec
PURG FLOW P1447										
TESTING										
MONITOR										
CMPS~RPM(POS)	XXX rpm									
THRTL POS SEN	XXX V									
B/FUEL SCHDL	XXX msec									

PEF617W

6	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">PURG FLOW P1447</td></tr> <tr><td style="text-align: center;">COMPLETED</td></tr> </table>	PURG FLOW P1447	COMPLETED
PURG FLOW P1447			
COMPLETED			

PEF905U

DTC Confirmation Procedure

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

Ⓜ With CONSULT-II

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 5 seconds.
- 3) Start engine and let it idle for at least 70 seconds.
- 4) Select "PURG FLOW P1447" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 5) Touch "START".
If "COMPLETED" is displayed, go to step 7.
- 6) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 35 seconds.)

Selector lever	Suitable position
Vehicle speed	32 - 120 km/h (20 - 75 MPH)
CMPS-RPM (POS)	500 - 3,400 rpm
B/FUEL SCHDL	Less than 4 msec
Engine coolant temperature	70 - 100°C (158 - 212°F)


If "TESTING" is not changed for a long time, retry from step 2.

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-1106.

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

VG33E

Overall Function Check

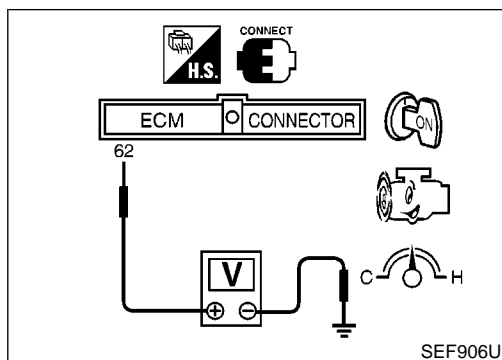

Overall Function Check

=NEEC0336

Use this procedure to check the overall monitoring function of the EVAP control system purge flow monitoring. During this check, a 1st trip DTC might not be confirmed.

⊗ Without CONSULT-II

- 1) Lift up drive wheels.
- 2) Start engine and warm it up to normal operating temperature.
- 3) Turn ignition switch "OFF", wait at least 5 seconds.
- 4) Start engine and wait at least 70 seconds.
- 5) Set voltmeter probes to ECM terminals 62 (EVAP control system pressure sensor signal) and ground.
- 6) Check EVAP control system pressure sensor value at idle speed and note it.
- 7) Establish and maintain the following conditions for at least 1 minute.

Air conditioner switch	ON
Steering wheel	Fully turned
Headlamp switch	ON
Rear window defogger switch	ON
Engine speed	Approx. 3,000 rpm
Gear position	Any position other than "P", "N" or "R"

- 8) Verify that EVAP control system pressure sensor value stays 0.1V less than the value at idle speed (measured at step 6) for at least 1 second.
- 9) If NG, go to "Diagnostic Procedure", EC-1106.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING


VG33E

Diagnostic Procedure

Diagnostic Procedure

=NEEC0337


1	CHECK EVAP CANISTER	
1. Turn ignition switch "OFF". 2. Check EVAP canister for cracks.		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 2.
OK (Without CONSULT-II)	▶	GO TO 3.
NG	▶	Replace EVAP canister.

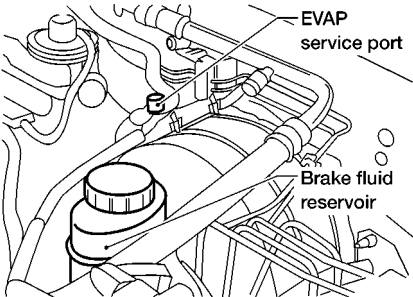2	CHECK PURGE FLOW																					
(P) With CONSULT-II 1. Disconnect vacuum hose connected to EVAP canister purge volume control solenoid valve at EVAP service port and install vacuum gauge.																						
																						
AEC649A																						
2. Start engine and let it idle. 3. Select "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. 4. Rev engine up to 2,000 rpm. 5. Touch "Qd" and "Qu" on CONSULT-II screen to adjust "PURG VOL CONT/V" opening.																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">PURG VOL CONT/V</td> <td style="text-align: center;">0.0%</td> </tr> <tr> <th colspan="2" style="text-align: center;">MONITOR</th> </tr> <tr> <td style="text-align: center;">CMPS~RPM(REF)</td> <td style="text-align: center;">XXX rpm</td> </tr> <tr> <td style="text-align: center;">FR O2 MNTR-B2</td> <td style="text-align: center;">LEAN</td> </tr> <tr> <td style="text-align: center;">FR O2 MNTR-B1</td> <td style="text-align: center;">LEAN</td> </tr> <tr> <td style="text-align: center;">A/F ALPHA-B2</td> <td style="text-align: center;">XXX %</td> </tr> <tr> <td style="text-align: center;">A/F ALPHA-B1</td> <td style="text-align: center;">XXX %</td> </tr> <tr> <td style="text-align: center;">THRTL POS SEN</td> <td style="text-align: center;">XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>			ACTIVE TEST		PURG VOL CONT/V	0.0%	MONITOR		CMPS~RPM(REF)	XXX rpm	FR O2 MNTR-B2	LEAN	FR O2 MNTR-B1	LEAN	A/F ALPHA-B2	XXX %	A/F ALPHA-B1	XXX %	THRTL POS SEN	XXX V		
ACTIVE TEST																						
PURG VOL CONT/V	0.0%																					
MONITOR																						
CMPS~RPM(REF)	XXX rpm																					
FR O2 MNTR-B2	LEAN																					
FR O2 MNTR-B1	LEAN																					
A/F ALPHA-B2	XXX %																					
A/F ALPHA-B1	XXX %																					
THRTL POS SEN	XXX V																					
PEF908U																						
100.0%: Vacuum should exist. 0.0%: Vacuum should not exist.																						
OK or NG																						
OK	▶	GO TO 7.																				
NG	▶	GO TO 4.																				

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

VG33E

Diagnostic Procedure (Cont'd)

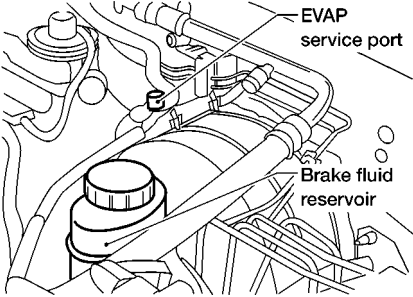3	CHECK PURGE FLOW	
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine. 3. Disconnect vacuum hose connected to EVAP canister purge volume control solenoid valve at EVAP service port and install vacuum gauge. 		
 <p style="text-align: right; margin-right: 20px;">AEC649A</p>		
<ol style="list-style-type: none"> 4. Start engine and let it idle for at least 80 seconds. 5. Check vacuum gauge indication when revving engine up to 2,000 rpm. Vacuum should exist. 6. Release the accelerator pedal fully and let idle. Vacuum should not exist. <p style="text-align: center;">OK or NG</p>		
OK		▶ GO TO 7.
NG		▶ GO TO 4.

4	CHECK EVAP PURGE LINE	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Check EVAP purge line for improper connection or disconnection. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-617. <p style="text-align: center;">OK or NG</p>		
OK		▶ GO TO 5.
NG		▶ Repair it.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

VG33E

Diagnostic Procedure (Cont'd)


5 CHECK EVAP PURGE HOSE AND PURGE PORT

1. Disconnect purge hoses connected to EVAP service port **A** and EVAP canister purge volume control solenoid valve **B**.

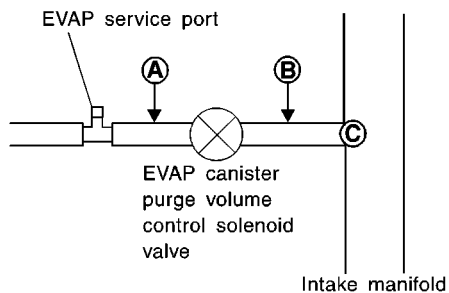

SEF367U

2. Blow air into each hose and EVAP purge port **C**.
3. Check that air flows freely.

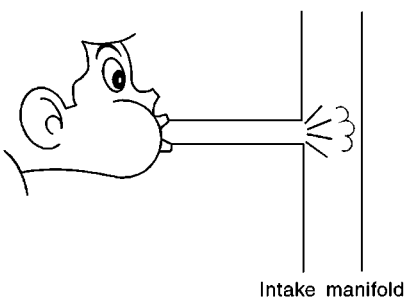

SEF368U

OK or NG

OK (with CONSULT-II)	▶	GO TO 6.
OK (without CONSULT-II)	▶	GO TO 7.
NG	▶	Repair or clean hoses and/or purge port.

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

VG33E

Diagnostic Procedure (Cont'd)

6 CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE


Ⓟ With CONSULT-II

1. Start engine.
2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.

ACTIVE TEST	
PURG VOL CONT/V	0.0%
MONITOR	
CMPS~RPM(REF)	XXX rpm
FR O2 MNTR-B2	RICH
FR O2 MNTR-B1	RICH
A/F ALPHA-B2	XXX %
A/F ALPHA-B1	XXX %
THRTL POS SEN	XXX V

If OK, inspection end. If NG, go to following step.

3. Check air passage continuity.

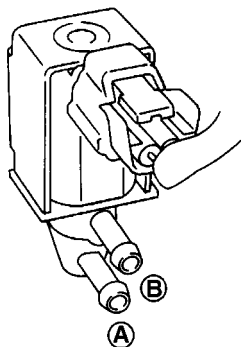

Condition PURG VOL CONT/V value	Air passage continuity between A and B
100.0%	Yes
0.0%	No

If NG, replace the EVAP canister purge volume control solenoid valve.

OK or NG


OK	▶	GO TO 8.
NG	▶	Replace EVAP canister purge volume control solenoid valve.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

VG33E

Diagnostic Procedure (Cont'd)

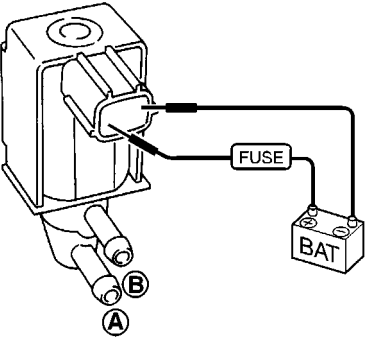7	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE						
<p> Without CONSULT-II Check air passage continuity.</p>							
							
SEF661U							
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="padding: 5px;">Condition</th> <th style="padding: 5px;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td style="padding: 5px;">12V direct current supply between terminals 1 and 2</td> <td style="padding: 5px;">Yes</td> </tr> <tr> <td style="padding: 5px;">No supply</td> <td style="padding: 5px;">No</td> </tr> </tbody> </table>		Condition	Air passage continuity between A and B	12V direct current supply between terminals 1 and 2	Yes	No supply	No
Condition	Air passage continuity between A and B						
12V direct current supply between terminals 1 and 2	Yes						
No supply	No						
MTBL0242							
<p>If NG, replace the EVAP canister purge volume control solenoid valve.</p> <p style="text-align: center;">OK or NG</p>							
OK	▶	GO TO 8.					
NG	▶	Replace EVAP canister purge volume control solenoid valve.					

8	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR HOSE	
<p>1. Turn ignition switch "OFF". 2. Check disconnection or improper connection of hose connected to EVAP control system pressure sensor.</p>		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Repair it.

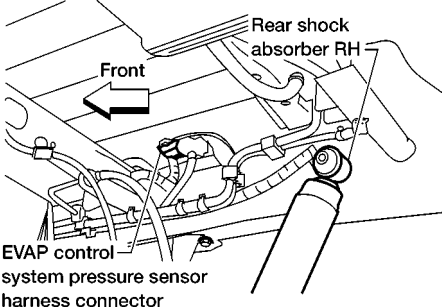9	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR	
<p>1. Disconnect EVAP control system pressure sensor harness connector.</p>		
		
AEC651A		
<p>2. Check connectors for water. Water should not exist.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 10.
NG	▶	Replace EVAP control system pressure sensor.

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

VG33E

Diagnostic Procedure (Cont'd)


10	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR FUNCTION	
Refer to "DTC Confirmation Procedure" for DTC P0450, EC-982.		
OK or NG		
OK	▶	GO TO 11.
NG	▶	Replace EVAP control system pressure sensor.

11	CHECK EVAP CANISTER VENT CONTROL VALVE	
-----------	---	--

Check air passage continuity.

With CONSULT-II

Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.

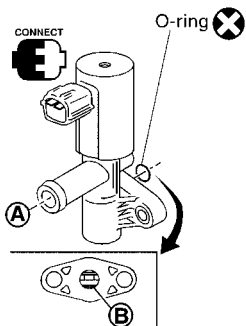

ACTIVE TEST	
VENT CONTROL/V	OFF
MONITOR	
CMPS-RPM (REF)	XXXrpm
FR O2 MNTR-B1	RICH
A/F ALPHA-B1	XXX%
THRTL POS SEN	XXXV

Condition VENT CONTROL/V	Air passage continuity between A and B
ON	No
OFF	Yes


SEF156X

Without CONSULT-II

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	No
OFF	Yes

MTBL0240

If NG or operation takes more than 1 second, clean valve using air blower or replace as necessary.
If portion **B** is rusted, replace control valve.

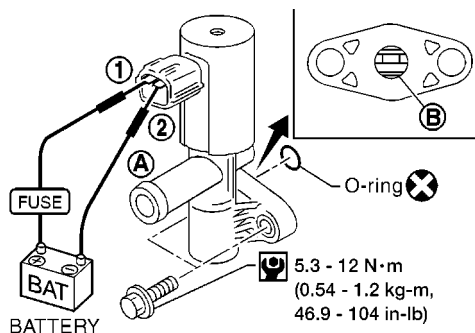

AEC783A

Make sure new O-ring is installed properly.

OK or NG

OK	▶	GO TO 12.
NG	▶	Replace EVAP canister vent control valve.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

VG33E

Diagnostic Procedure (Cont'd)

12	CHECK CLOSED THROTTLE POSITION SWITCH																
<p>Ⓟ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch OFF. 3. Remove vacuum hose connected to throttle opener (if so equipped). 4. Connect suitable vacuum hose to vacuum pump and the throttle opener. 5. Apply vacuum [more than -40.0kPa (-300mmHg, 11.81inHg)] until the throttle drum becomes free from the rod of the throttle opener. 6. Turn ignition switch ON. 7. Select "DATA MONITOR" mode with CONSULT-II. 8. Check indication of "CLSD THL/P SW". <p>Measurement must be made with closed throttle position switch installed in vehicle.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse; width: 60%;"> <thead> <tr> <th style="text-align: center;">Throttle valve conditions</th> <th style="text-align: center;">Continuity</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Completely closed</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td style="text-align: center;">Partially open or completely open</td> <td style="text-align: center;">No</td> </tr> </tbody> </table> <p style="text-align: right; margin-right: 20px;">MTBL0247</p> <p>If NG, adjust closed throttle position switch. Check the following items. Refer to "Basic Inspection", EC-680.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse; width: 60%;"> <thead> <tr> <th style="text-align: center;">Items</th> <th style="text-align: center;">Specifications</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Ignition timing</td> <td style="text-align: center;">15° ± 2° BTDC</td> </tr> <tr> <td style="text-align: center;">Base idle speed</td> <td style="text-align: center;">700 ± 50 rpm (in "P" or "N" position)</td> </tr> <tr> <td style="text-align: center;">Closed throttle position switch idle position adjustment</td> <td style="text-align: center;">Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF</td> </tr> <tr> <td style="text-align: center;">Target idle speed</td> <td style="text-align: center;">750 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table> <p style="text-align: right; margin-right: 20px;">MTBL0226</p> <p>9. If it is impossible to adjust closed throttle position switch in "Basic Inspection", replace closed throttle position switch.</p> <p style="text-align: center;">OK or NG</p>		Throttle valve conditions	Continuity	Completely closed	Yes	Partially open or completely open	No	Items	Specifications	Ignition timing	15° ± 2° BTDC	Base idle speed	700 ± 50 rpm (in "P" or "N" position)	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF	Target idle speed	750 ± 50 rpm (in "P" or "N" position)
Throttle valve conditions	Continuity																
Completely closed	Yes																
Partially open or completely open	No																
Items	Specifications																
Ignition timing	15° ± 2° BTDC																
Base idle speed	700 ± 50 rpm (in "P" or "N" position)																
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF																
Target idle speed	750 ± 50 rpm (in "P" or "N" position)																
OK	▶▶ GO TO 14.																
NG	▶▶ Replace throttle position switch with throttle position sensor.																

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING


VG33E

Diagnostic Procedure (Cont'd)

13 CHECK CLOSED THROTTLE POSITION SWITCH

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Remove vacuum hose connected to throttle opener.
4. Connect suitable vacuum hose to vacuum pump and the throttle opener (if so equipped).
5. Apply vacuum [more than -40.0kPa (-300mmHg, 11.81inHg)] until the throttle drum becomes free from the rod of the throttle opener.
6. Disconnect closed throttle position switch harness connector.
7. Check continuity between closed throttle position switch terminals 4 and 5.
Resistance measurement must be made with closed throttle position switch installed in vehicle.

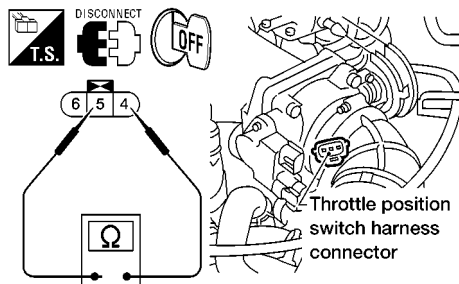

AEC654A

Throttle valve conditions	Continuity
Completely closed	Yes
Partially open or completely open	No

MTBL0247

If NG, adjust closed throttle position switch.
Check the following items. Refer to "Basic Inspection", EC-680.

Items	Specifications
Ignition timing	15° ± 2° BTDC
Base idle speed	700 ± 50 rpm (in "P" or "N" position)
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.3 mm (0.012 in): ON 0.4 mm (0.016 in): OFF
Target idle speed	750 ± 50 rpm (in "P" or "N" position)

MTBL0226

8. If it is impossible to adjust closed throttle position switch in "Basic Inspection", replace closed throttle position switch.

OK or NG

OK	▶	GO TO 14.
NG	▶	Replace throttle position switch with throttle position sensor.

14 CHECK EVAP PURGE LINE

Inspect EVAP purge line (pipe and rubber tube). Check for evidence of leaks.
Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-617.

OK or NG

OK	▶	GO TO 15.
NG	▶	Replace it.

15 CLEAN EVAP PURGE LINE

Clean EVAP purge line (pipe and rubber tube) using air blower.

	▶	GO TO 16.
--	---	-----------

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1447 EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM PURGE FLOW MONITORING

VG33E


Diagnostic Procedure (Cont'd)

16	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
▶	INSPECTION END


DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)

VG33E

Component Description

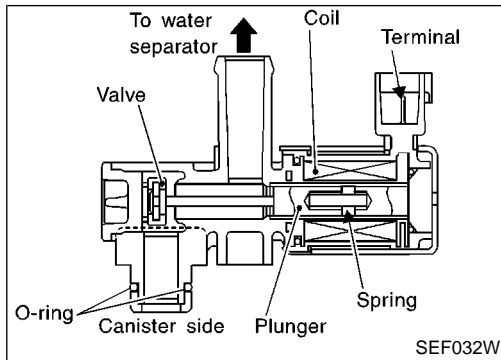

SEF032W

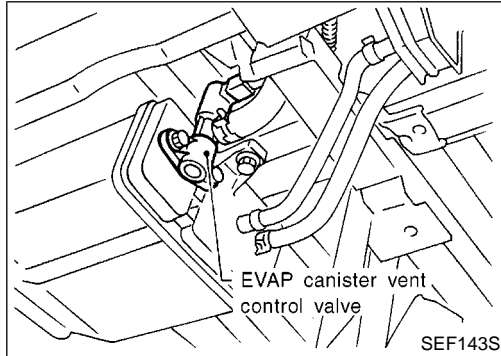

SEF143S

Component Description

NEEC0338

NOTE:

If DTC P1448 is displayed with P0440 or P0455, perform trouble diagnosis for DTC P1448 first.

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent.

This solenoid valve responds to signals from the ECM. When the ECM sends an ON signal, the coil in the solenoid valve is energized. A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System (Small Leak)" diagnosis.

GI
MA
EM
LC
EC
FE
CL
MT

CONSULT-II Reference Value in Data Monitor Mode

NEEC0339

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
VENT CONT/V	● Ignition switch: ON	OFF

TF
PD

ECM Terminals and Reference Value

NEEC0340

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
108	R/G	EVAP canister vent control valve	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

AX
SU
BR

On Board Diagnosis Logic

NEEC0341

Malfunction is detected when EVAP canister vent control valve remains opened under specified driving conditions.

POSSIBLE CAUSE

NEEC0341S01

- EVAP canister vent control valve
- EVAP control system pressure sensor and circuit
- Blocked rubber tube to EVAP canister vent control valve
- Water separator
- EVAP canister is saturated with water.
- Vacuum cut valve

ST
RS
BT
HA
SC
EL
IDX

DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)

VG33E

DTC Confirmation Procedure

DTC Confirmation Procedure

NEEC0342

NOTE:

- If DTC P1448 is displayed with P0440, perform trouble diagnosis for DTC P1448 first.
- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.

EVAP V/S LEAK P0440

1)PERFORM TEST AT A LOCATION OF 0-30C (32-86F)
 2)OPEN ENGINE HOOD.
 3)START ENGINE WITH VEHICLE STOPPED.
 IF ENG IS ON, STOP FOR 5 SEC. THEN RESTART.
 4)TOUCH START.

PEF405W

EVAP SML LEAK P0440

WAIT
 2 TO 10 MINUTES
 KEEP ENGINE RUNNING AT IDLE SPEED.

PEF929V

EVAP SML LEAK P0440

CAN NOT BE DIAGNOSED

FUEL TEMPERATURE IS TOO HIGH. RETEST AFTER FUEL HAS COOLED.

PEF669U

EVAP SML LEAK P0440

OK

PEF297U

Ⓜ With CONSULT-II

TESTING CONDITION:

- Perform “DTC WORK SUPPORT” when the fuel level is less than 3/4 full and vehicle is placed on flat level surface.
 - Always perform test at a temperature of 0 to 30°C (32 to 86°F).
 - It is better that the fuel level is low.
- 1) Turn ignition switch “ON”.
 - 2) Turn ignition switch “OFF” and wait at least 5 seconds.
 - 3) Turn ignition switch “ON” and select “DATA MONITOR” mode with CONSULT-II.
 - 4) Make sure that the following conditions are met.

COOLAN TEMP/S	0 - 70°C (32 - 158°F)
INT/A TEMP SE	0 - 60°C (32 - 140°F)

- 5) Select “EVAP SML LEAK P0440” of “EVAPORATIVE SYSTEM” in “DTC WORK SUPPORT” mode with CONSULT-II. Follow the instruction displayed.

NOTE:

- If the CONSULT-II screen shown at left is displayed, stop the engine and stabilize the vehicle temperature at 25°C (77°F) or cooler. After “TANK F/TMP SE” becomes less than 30°C (86°F), retest. (Use a fan to reduce the stabilization time.)
 - If the engine speed cannot be maintained within the range displayed on the CONSULT-II screen, go to “Basic Inspection”, EC-680.
 - The engine idle portion of this test (See illustration at left.) will take approximately 5 minutes.
- 6) Make sure that “OK” is displayed. If “NG” is displayed, go to the following step.

NOTE:

Make sure that EVAP hoses are connected to EVAP canister purge volume control solenoid valve properly.

- 7) Stop engine and wait at least 5 seconds, then turn “ON”.
- 8) Disconnect hose from water separator.
- 9) Select “VENT CONTROL/V” of “ACTIVE TEST” mode with CONSULT-II.
- 10) Touch “ON” and “OFF” alternately.

DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)

VG33E

DTC Confirmation Procedure (Cont'd)

11

ACTIVE TEST	
VENT CONTROL/V	OFF
MONITOR	
CMPS-RPM (REF)	XXXrpm
FR O2 MNTR-B1	RICH
A/F ALPHA-B1	XXX%
THRTL POS SEN	XXXV

SEF157X

11) Make sure of the following.

Condition VENT CONTROL/V	Air passage continuity between A and B
ON	No
OFF	Yes

If the result is NG, go to "Diagnostic Procedure", EC-1119.
If the result is OK, go to "Diagnostic Procedure" for DTC P0440, EC-959.

5.3 - 12 N·m
(0.54 - 1.2 kg-m,
46.9 - 104 in-lb)

AEC783A

Overall Function Check

Use this procedure to check the overall function of the EVAP canister vent control valve circuit. During this check, a DTC might not be confirmed.

Without CONSULT-II

- 1) Disconnect hose from water separator.
- 2) Disconnect EVAP canister vent control valve harness connector.
- 3) Verify the following.

Condition	Air passage continuity
12V direct current supply between terminals 1 and 2	No
No supply	Yes

If the result is NG, go to "Diagnostic Procedure", EC-1119.
If the result is OK, go to "Diagnostic Procedure" for DTC P0440, EC-959.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)




VG33E

Wiring Diagram

Wiring Diagram

NEEC0344

EC-VENT/V-01

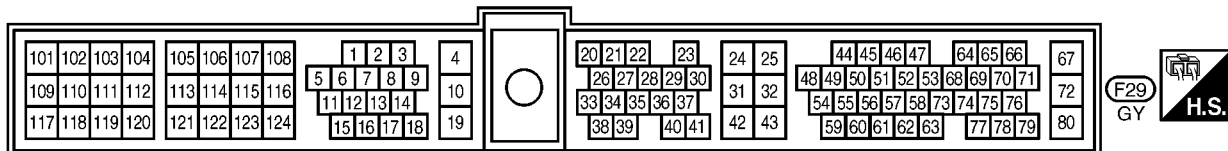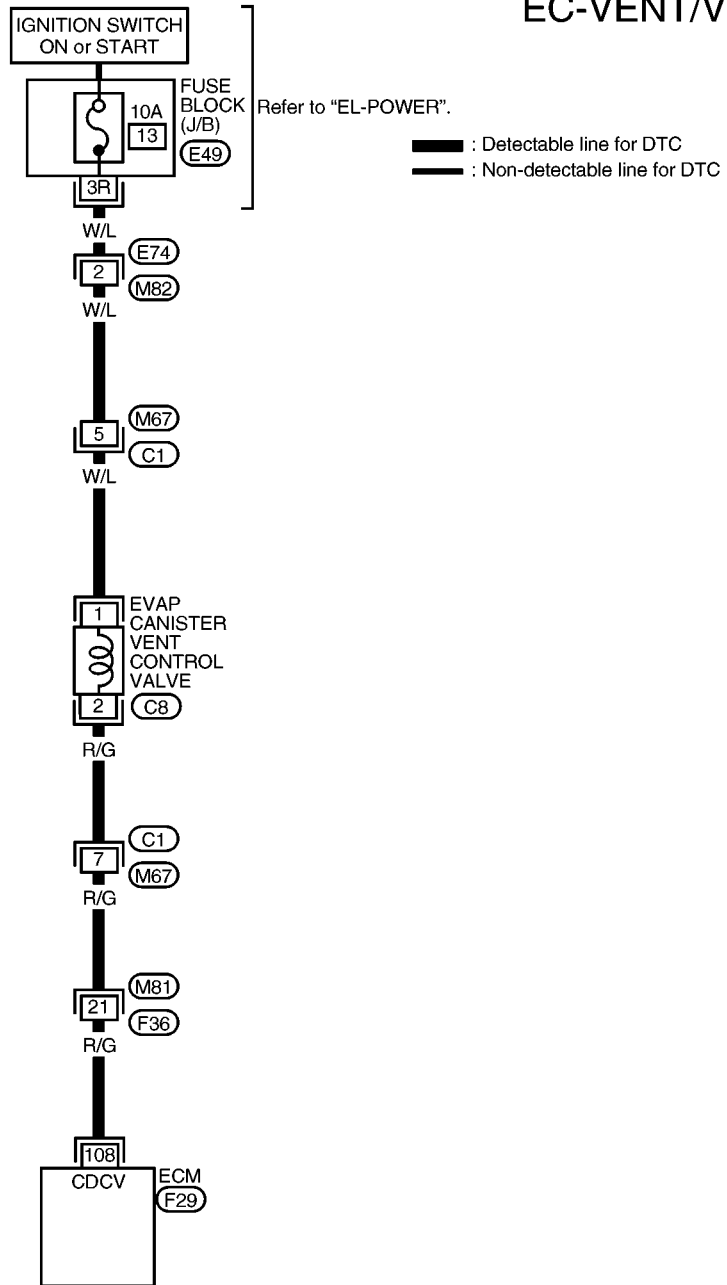

AEC017B


DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)


VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0345

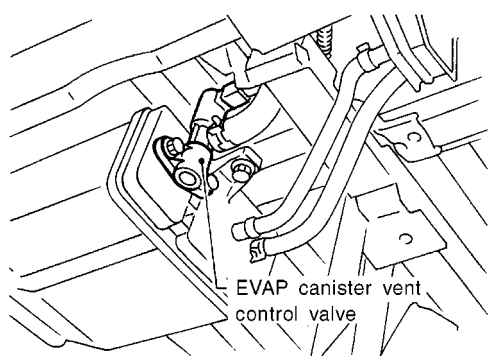1	CHECK RUBBER TUBE	<p>1. Turn ignition switch "OFF".</p> <p>2. Check obstructed rubber tube connected to EVAP canister vent control valve.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF143S</p> <p style="text-align: center;">OK or NG</p>	GI MA EM LC EC FE CL MT
OK	▶	GO TO 2.	
NG	▶	Clean, repair or replace rubber tube.	

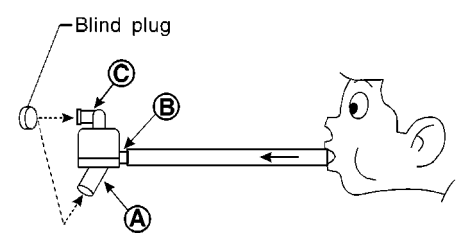2	CHECK WATER SEPARATOR	<p>1. Check visually for insect nests in the water separator air inlet.</p> <p>2. Check visually for cracks or flaws in the appearance.</p> <p>3. Check visually for cracks or flaws in the hose.</p> <p>4. Check that A and C are not clogged by blowing air into B with A, and then C plugged.</p> <div style="text-align: center;">  </div> <p style="text-align: center;">* (A) : Bottom hole (To atmosphere) (B) : Emergency tube (From EVAP canister) (C) : Inlet port (To member)</p> <p style="text-align: right;">SEF829T</p> <p>5. In case of NG in items 2 - 4, replace the parts.</p> <p>NOTE:</p> <ul style="list-style-type: none"> Do not disassemble water separator. <p style="text-align: center;">OK or NG</p>	AT TF PD AX SU BR ST RS BT HA SC EL IDX
OK	▶	GO TO 3.	
NG	▶	Replace water separator.	

DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)

VG33E


Diagnostic Procedure (Cont'd)

3 CHECK EVAP CANISTER VENT CONTROL VALVE AND O-RING

Check air passage continuity.

With CONSULT-II

Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.

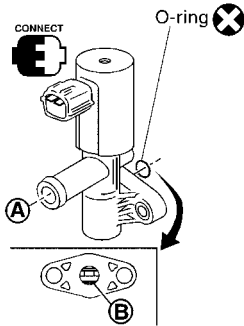

ACTIVE TEST	
VENT CONTROL/V	OFF
MONITOR	
CMPS-RPM (REF)	XXXrpm
FR O2 MNTR-B1	RICH
A/F ALPHA-B1	XXX%
THRTL POS SEN	XXXV

Condition VENT CONTROL/V	Air passage continuity between A and B
ON	No
OFF	Yes


SEF156X

Without CONSULT-II

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	No
OFF	Yes

MTBL0240

If NG or operation takes more than 1 second, clean valve using air blower or replace as necessary.
If portion **B** is rusted, replace control valve.

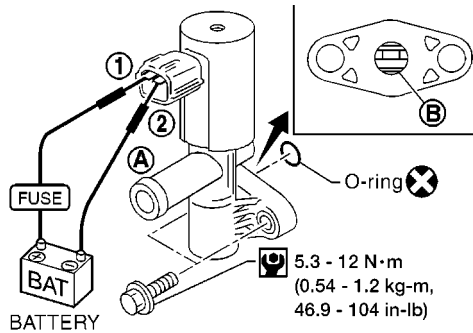

AEC783A

Make sure new O-ring is installed properly.


OK or NG

OK	▶	GO TO 4.
NG	▶	Replace EVAP canister vent control valve and O-ring.


DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)

VG33E

Diagnostic Procedure (Cont'd)

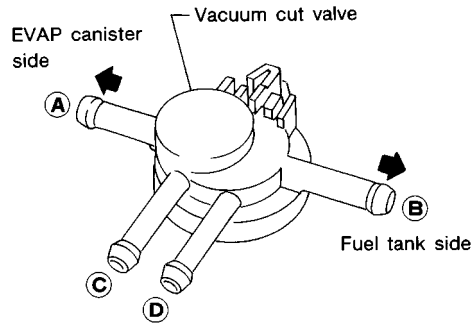4	CHECK VACUUM CUT VALVE	<p>Check vacuum cut valve as follows:</p> <div style="text-align: center;">  </div> <ol style="list-style-type: none"> 1. Plug port C and D with fingers. 2. Apply vacuum to port A and check that there is no suction from port B. 3. Apply vacuum to port B and check that there is suction from port A. 4. Blow air in port B and check that there is a resistance to flow out of port A. 5. Open port C and D. 6. Blow air in port A check that air flows freely out of port C. 7. Blow air in port B check that air flows freely out of port D. <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 5.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace vacuum cut valve.</td> </tr> </table>	OK	▶	GO TO 5.	NG	▶	Replace vacuum cut valve.	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p style="background-color: black; color: white; text-align: center; padding: 5px;">EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p>
OK	▶	GO TO 5.							
NG	▶	Replace vacuum cut valve.							

SEF379Q

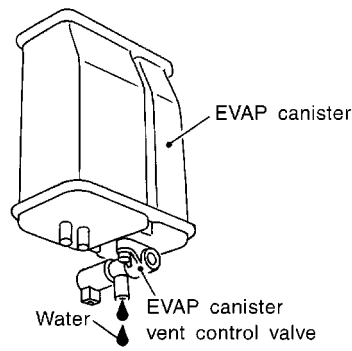5	CHECK IF EVAP CANISTER SATURATED WITH WATER	<ol style="list-style-type: none"> 1. Remove EVAP canister with EVAP canister vent control valve attached. 2. Check if water will drain from the EVAP canister. <div style="text-align: center;">  </div> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 6.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 8.</td> </tr> </table>	OK	▶	GO TO 6.	NG	▶	GO TO 8.	<p>TF</p> <p>PD</p> <p>AX</p> <p>SU</p> <p>BR</p> <p>ST</p> <p>RS</p>
OK	▶	GO TO 6.							
NG	▶	GO TO 8.							

SEF596U

6	CHECK EVAP CANISTER	<p>Weigh the EVAP canister with the EVAP canister vent control valve attached. The weight should be less than 1.8 kg (4.0 lb).</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 8.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Replace the EVAP canister.</td> </tr> </table>	OK	▶	GO TO 8.	NG	▶	Replace the EVAP canister.	<p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>
OK	▶	GO TO 8.							
NG	▶	Replace the EVAP canister.							


DTC P1448 EVAPORATIVE EMISSION (EVAP) CANISTER VENT CONTROL VALVE (OPEN)

VG33E

Diagnostic Procedure (Cont'd)

7	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● EVAP canister for damage ● EVAP hose between EVAP canister and water separator for clogging or poor connection 	
▶	Repair hose or replace EVAP canister.

8	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR HOSE
Check disconnection or improper connection of hose connected to EVAP control system pressure sensor.	
OK or NG	
OK	▶ GO TO 9.
NG	▶ Repair it.

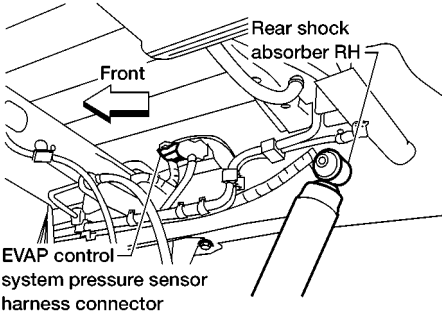
9	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR
1. Disconnect EVAP control system pressure sensor harness connector.	
 <p style="text-align: center;">EVAP control system pressure sensor harness connector</p>	
AEC651A	
2. Check connectors for water. Water should not exist.	
OK or NG	
OK	▶ GO TO 10.
NG	▶ Replace EVAP control system pressure sensor.

10	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR FUNCTION
Refer to "DTC Confirmation Procedure" for DTC P0450, EC-982.	
OK or NG	
OK	▶ GO TO 11.
NG	▶ Replace EVAP control system pressure sensor.

11	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
▶	INSPECTION END

DTC P1490 VACUUM CUT VALVE BYPASS VALVE (CIRCUIT)

VG33E
Description

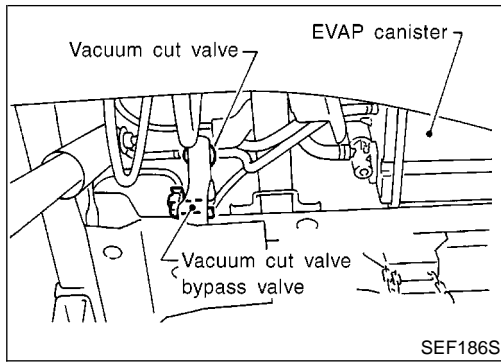

Description

COMPONENT DESCRIPTION


The vacuum cut valve and vacuum cut valve bypass valve are installed in parallel on the EVAP purge line between the fuel tank and the EVAP canister.

The vacuum cut valve prevents the intake manifold vacuum from being applied to the fuel tank.

The vacuum cut valve bypass valve is a solenoid type valve and generally remains closed. It opens only for on board diagnosis.

The vacuum cut valve bypass valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the valve is opened. The vacuum cut valve is then bypassed to apply intake manifold vacuum to the fuel tank.

EVAPORATIVE EMISSION SYSTEM DIAGRAM

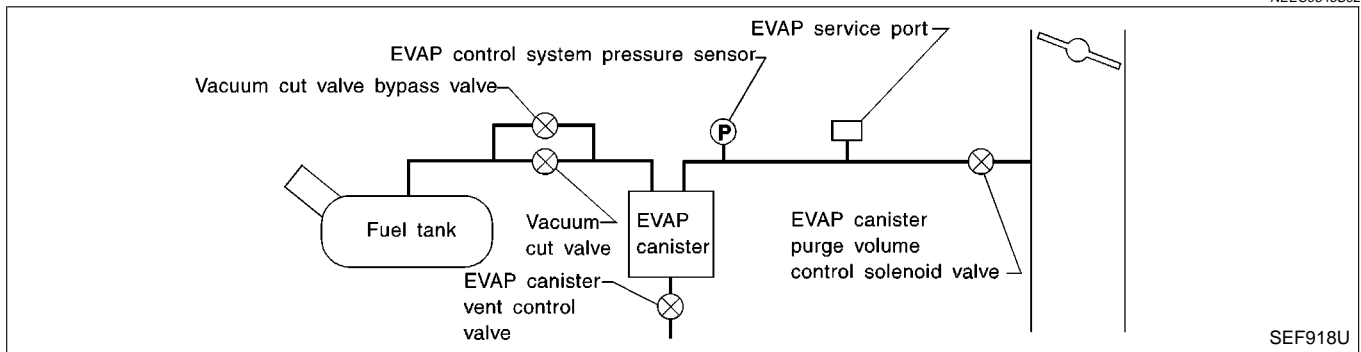

CONSULT-II Reference Value in Data Monitor Mode

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
VC/V BYPASS/V	● Ignition switch: ON	OFF

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
120	P/B	Vacuum cut valve bypass valve	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

DTC P1490 VACUUM CUT VALVE BYPASS VALVE (CIRCUIT)

VG33E

On Board Diagnosis Logic

On Board Diagnosis Logic

Malfunction is detected when an improper voltage signal is sent to ECM through vacuum cut valve bypass valve. NEEC0349

POSSIBLE CAUSE

- Harness or connectors
(The vacuum cut valve bypass valve circuit is open or shorted.) NEEC0349S01
- Vacuum cut valve bypass valve


DTC Confirmation Procedure

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test. NEEC0350

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V at idle speed.

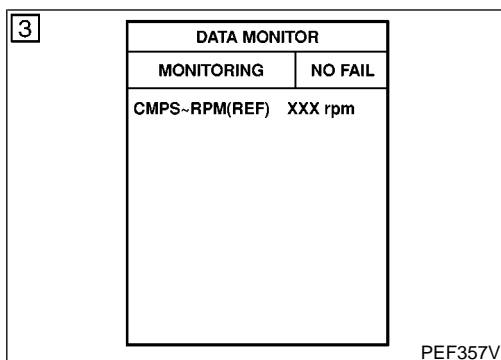

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-1126.

With GST

Follow the procedure "With CONSULT-II".

DTC P1490 VACUUM CUT VALVE BYPASS VALVE (CIRCUIT)


VG33E

Wiring Diagram

Wiring Diagram


NEEC0351

EC-BYPS/V-01

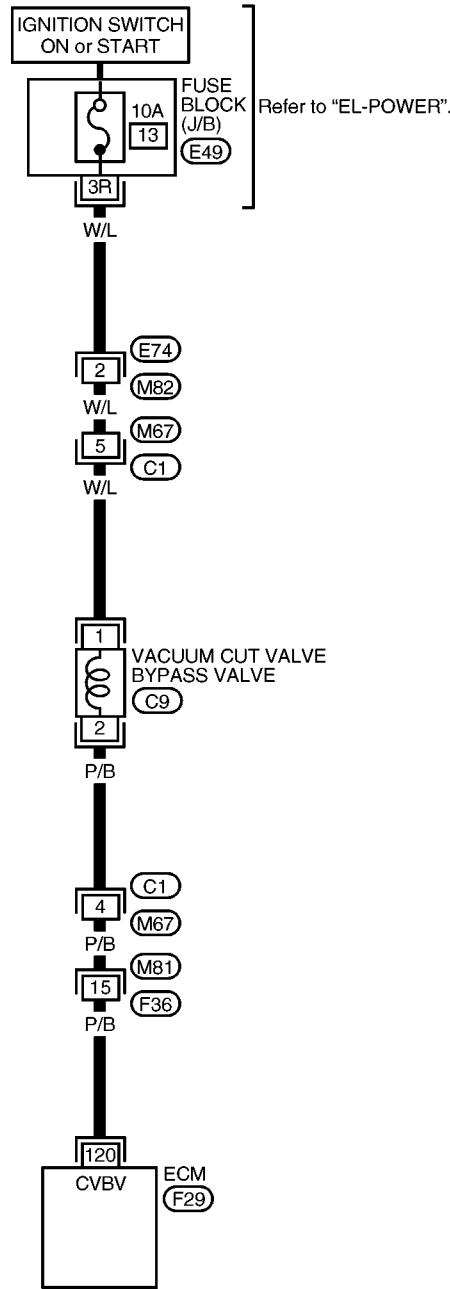

— : Detectable line for DTC
— : Non-detectable line for DTC

- GI
- MA
- EM
- LC
- EC**
- FE
- CL
- MT
- AT
- TF
- PD
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- EL
- IDX

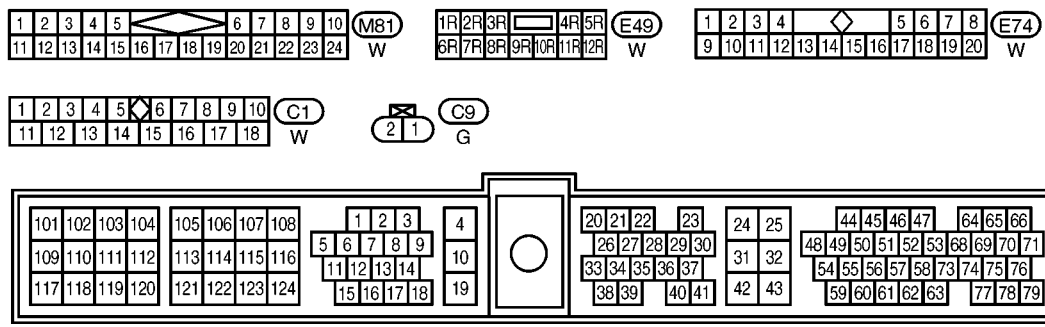

AEC019B

DTC P1490 VACUUM CUT VALVE BYPASS VALVE (CIRCUIT)

VG33E

Diagnostic Procedure

Diagnostic Procedure

NEEC0352

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.



2	CHECK VACUUM CUT VALVE BYPASS VALVE CIRCUIT																					
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "OFF" and then "ON". 2. Select "VC/V BYPASS/V" in "ACTIVE TEST" mode with CONSULT-II. 3. Touch "ON/OFF" on CONSULT-II screen. 																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <th>VC/V BYPASS/V</th> <th>ON</th> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <th>CMPS-RPM(REF)</th> <th>XXX rpm</th> </tr> <tr> <th>FR O2 MNTR-B2</th> <th>LEAN</th> </tr> <tr> <th>FR O2 MNTR-B1</th> <th>LEAN</th> </tr> <tr> <th>A/F ALPHA-B2</th> <th>XXX %</th> </tr> <tr> <th>A/F ALPHA-B1</th> <th>XXX %</th> </tr> <tr> <th>THRTL POS SEN</th> <th>XXX V</th> </tr> <tr> <td> </td> <td> </td> </tr> </thead> <tbody> </tbody> </table>			ACTIVE TEST		VC/V BYPASS/V	ON	MONITOR		CMPS-RPM(REF)	XXX rpm	FR O2 MNTR-B2	LEAN	FR O2 MNTR-B1	LEAN	A/F ALPHA-B2	XXX %	A/F ALPHA-B1	XXX %	THRTL POS SEN	XXX V		
ACTIVE TEST																						
VC/V BYPASS/V	ON																					
MONITOR																						
CMPS-RPM(REF)	XXX rpm																					
FR O2 MNTR-B2	LEAN																					
FR O2 MNTR-B1	LEAN																					
A/F ALPHA-B2	XXX %																					
A/F ALPHA-B1	XXX %																					
THRTL POS SEN	XXX V																					
<p>4. Make sure that clicking sound is heard from the vacuum cut valve bypass valve.</p> <p style="text-align: center;">OK or NG</p>																						
OK	▶	GO TO 7.																				
NG	▶	GO TO 3.																				

PEF909U

DTC P1490 VACUUM CUT VALVE BYPASS VALVE (CIRCUIT)

VG33E

Diagnostic Procedure (Cont'd)

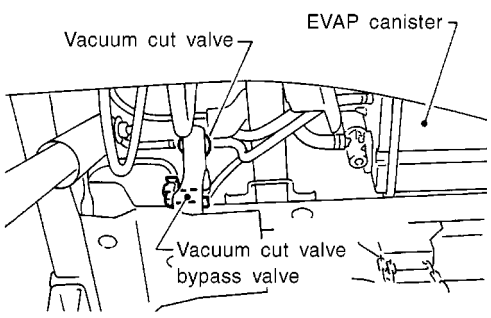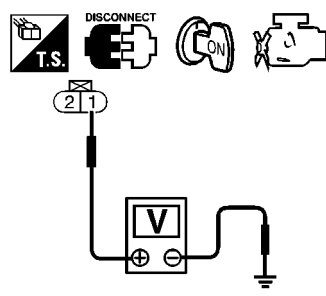3	CHECK VACUUM CUT VALVE BYPASS VALVE POWER SUPPLY CIRCUIT
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect vacuum cut valve bypass valve harness connector. <div style="text-align: center; margin: 10px 0;">  </div> <ol style="list-style-type: none"> 3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and ground with CONSULT-II or tester. <div style="text-align: center; margin: 10px 0;">  </div> <p style="color: blue; margin: 5px 0;">Voltage: Battery voltage</p> <p style="text-align: center; margin: 5px 0;">OK or NG</p>	
<p>SEF186S</p> <p>SEF659W</p>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.

4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E74, M82 ● Harness connectors M67, C1 ● Fuse block (J/B) connector E49 ● 10A fuse ● Harness for open or short between vacuum cut valve bypass valve and fuse 	
▶ Repair harness or connectors.	

5	CHECK VACUUM CUT VALVE BYPASS VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 120 and valve terminal 2. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power. <p style="text-align: center; margin: 5px 0;">OK or NG</p>	
OK	▶ GO TO 7.
NG	▶ GO TO 6.


GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX


DTC P1490 VACUUM CUT VALVE BYPASS VALVE (CIRCUIT)

VG33E


Diagnostic Procedure (Cont'd)

6	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors C1, M67 ● Harness connectors M81, F36 ● Harness for open or short between vacuum cut valve bypass valve and ECM 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

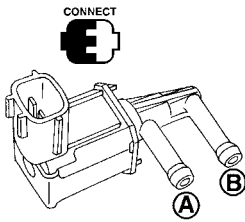7	CHECK VACUUM CUT VALVE BYPASS VALVE																				
(P) With CONSULT-II 1. Perform "VC/V BYPASS/V" in "ACTIVE TEST" mode. 2. Check air passage continuity and operation delay time under the following conditions.																					
	<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <th>VC/V BYPASS/V</th> <th>OFF</th> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <th>CMPS-RPM (REF)</th> <th>XXXrpm</th> </tr> <tr> <th>FR O2 MNTR-B1</th> <th>RICH</th> </tr> <tr> <th>A/F ALPHA-B1</th> <th>XXX%</th> </tr> <tr> <th>THRTL POS SEN</th> <th>XXXV</th> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </thead> </table>	ACTIVE TEST		VC/V BYPASS/V	OFF	MONITOR		CMPS-RPM (REF)	XXXrpm	FR O2 MNTR-B1	RICH	A/F ALPHA-B1	XXX%	THRTL POS SEN	XXXV						
ACTIVE TEST																					
VC/V BYPASS/V	OFF																				
MONITOR																					
CMPS-RPM (REF)	XXXrpm																				
FR O2 MNTR-B1	RICH																				
A/F ALPHA-B1	XXX%																				
THRTL POS SEN	XXXV																				
<table border="1" style="margin: auto;"> <thead> <tr> <th>Condition VC/V BYPASS/V</th> <th>Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td>ON</td> <td>Yes</td> </tr> <tr> <td>OFF</td> <td>No</td> </tr> </tbody> </table>		Condition VC/V BYPASS/V	Air passage continuity between A and B	ON	Yes	OFF	No														
Condition VC/V BYPASS/V	Air passage continuity between A and B																				
ON	Yes																				
OFF	No																				
SEF158X																					

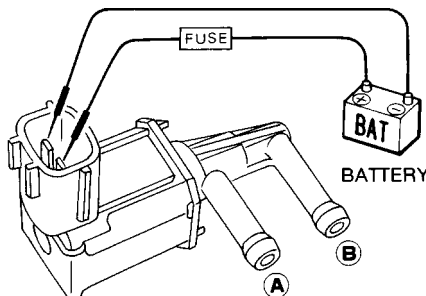(X) Without CONSULT-II 1. Check air passage continuity and operation delay time under the following conditions.							
							
SEF351Q							
<table border="1" style="margin: auto;"> <thead> <tr> <th>Condition</th> <th>Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td>Yes</td> </tr> <tr> <td>No supply</td> <td>No</td> </tr> </tbody> </table>		Condition	Air passage continuity between A and B	12V direct current supply between terminals 1 and 2	Yes	No supply	No
Condition	Air passage continuity between A and B						
12V direct current supply between terminals 1 and 2	Yes						
No supply	No						
MTBL0242							
OK or NG							
OK	▶ GO TO 8.						
NG	▶ Replace vacuum cut valve bypass valve.						

8	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
▶	INSPECTION END

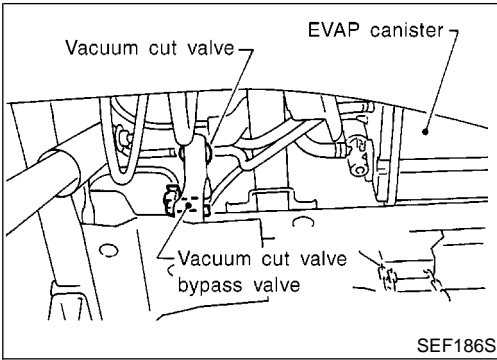

Description

COMPONENT DESCRIPTION


The vacuum cut valve and vacuum cut valve bypass valve are installed in parallel on the EVAP purge line between the fuel tank and the EVAP canister.

The vacuum cut valve prevents the intake manifold vacuum from being applied to the fuel tank.

The vacuum cut valve bypass valve is a solenoid type valve and generally remains closed. It opens only for on board diagnosis.

The vacuum cut valve bypass valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the valve is opened. The vacuum cut valve is then bypassed to apply intake manifold vacuum to the fuel tank.

EVAPORATIVE EMISSION SYSTEM DIAGRAM

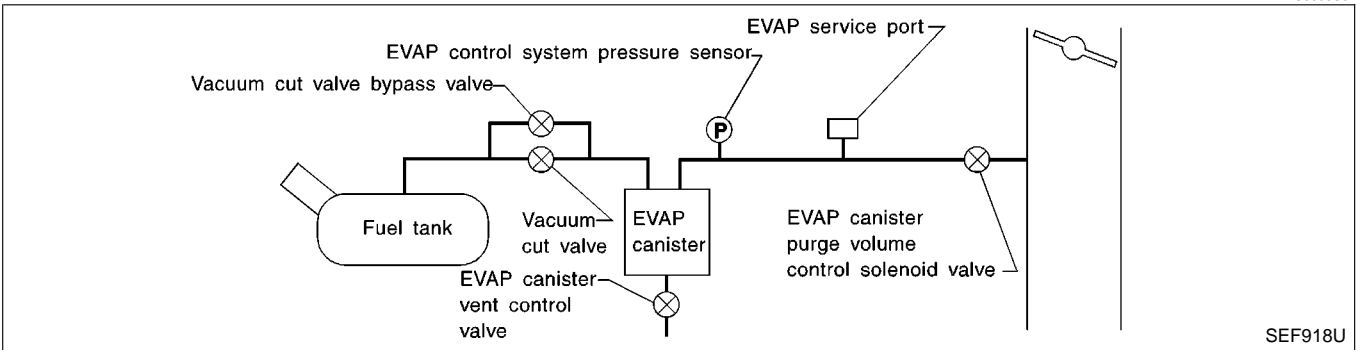

CONSULT-II Reference Value in Data Monitor Mode

Specification data are reference values.

NEEC0354

MONITOR ITEM	CONDITION	SPECIFICATION
VC/V BYPASS/V	● Ignition switch: ON	OFF

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

NEEC0355

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
120	P/B	Vacuum cut valve bypass valve	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

Malfunction is detected when vacuum cut valve bypass valve does not operate properly. NEEC0356

POSSIBLE CAUSE

- Vacuum cut valve bypass valve NEEC0356S01
- Vacuum cut valve
- Bypass hoses for clogging
- EVAP control system pressure sensor and circuit
- EVAP canister vent control valve
- Hose between fuel tank and vacuum cut valve clogged
- Hose between vacuum cut valve and EVAP canister clogged
- EVAP canister
- EVAP purge port of fuel tank for clogging

7	VC CUT/V BP/V P1491
OUT OF CONDITION	
MONITOR	
CMPS~RPM(POS)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF618W

7	VC CUT/V BP/V P1491
TESTING	
MONITOR	
CMPS~RPM(POS)	XXX rpm
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

PEF619W

7	VC CUT/V BP/V P1491
COMPLETED	

PEF912U

DTC Confirmation Procedure

CAUTION:
Always drive vehicle at a safe speed. NEEC0357

NOTE:
If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test.

TESTING CONDITION:
Always perform test at a temperature of 5 to 30°C (41 to 86°F).

With CONSULT-II


- 1) Turn ignition switch "ON".
- 2) Start engine and warm it up to normal operating temperature.
- 3) Turn ignition switch "OFF" and wait at least 5 seconds.
- 4) Start engine and let it idle for at least 70 seconds.
- 5) Select "VC CUT/V BP/V P1491" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 6) Touch "START".
- 7) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 30 seconds.)

CMPS-RPM (POS)	500 - 3,000 rpm (A/T models) 500 - 3,300 rpm (M/T models)
Selector lever	Suitable position
Vehicle speed	36 - 120 km/h (22 - 75 MPH)
B/FUEL SCHDL	Less than 5 msec

If "TESTING" is not displayed after 5 minutes, retry from step 3.

- 8) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-1133.

NEEC0358

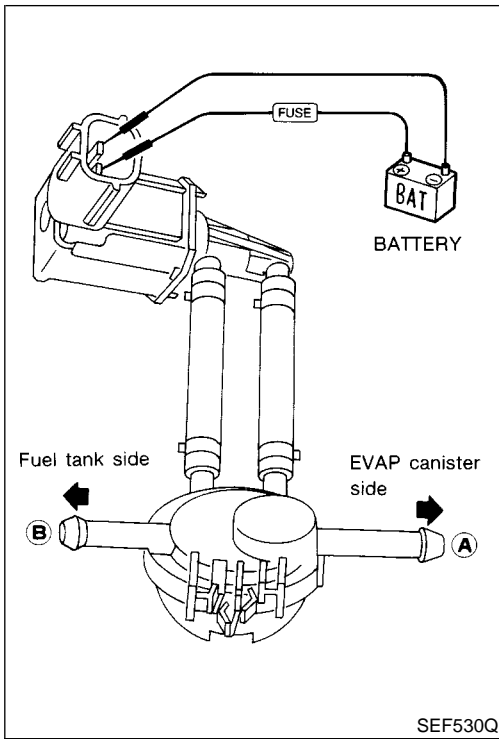

Overall Function Check

Use this procedure to check the overall function of vacuum cut valve bypass valve. During this check, the 1st trip DTC might not be confirmed.

⊗ Without CONSULT-II




- 1) Remove vacuum cut valve and vacuum cut valve bypass valve as an assembly.
- 2) Apply vacuum to port **A** and check that there is no suction from port **B**.
- 3) Apply vacuum to port **B** and check that there is suction from port **A**.
- 4) Blow air in port **B** and check that there is a resistance to flow out of port **A**.
- 5) Supply battery voltage to the terminal.
- 6) Blow air in port **A** and check that air flows freely out of port **B**.
- 7) Blow air in port **B** and check that air flows freely out of port **A**.
- 8) If NG, go to "Diagnostic Procedure", EC-1133.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Wiring Diagram

NEEC0359


EC-BYPS/V-01

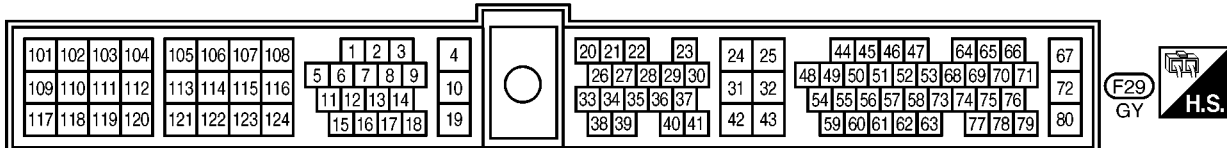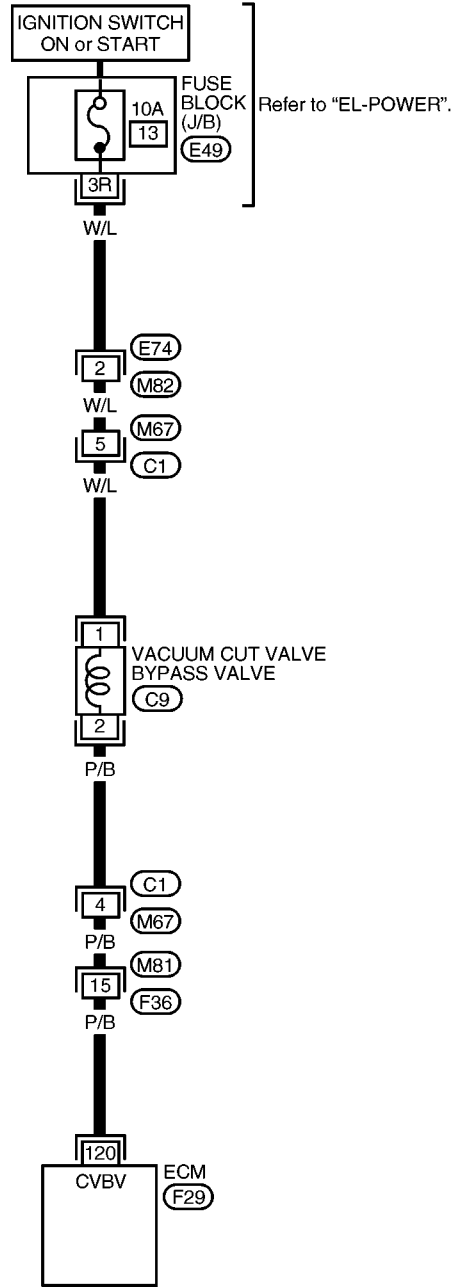

Diagnostic Procedure


NEEC0360

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

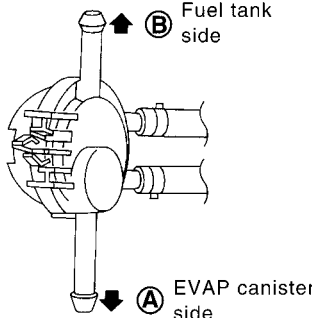2	CHECK VACUUM CUT VALVE BYPASS VALVE OPERATION																					
<p>With CONSULT-II</p> <ol style="list-style-type: none"> Turn ignition switch "OFF". Remove vacuum cut valve and vacuum cut valve bypass valve as an assembly. Apply vacuum to port A and check that there is no suction from port B. Apply vacuum to port B and check that there is suction from port A. Blow air in port B and check that there is a resistance to flow out of port A. Turn ignition switch "ON". Select "VC/V BYPASS/V" in "ACTIVE TEST" mode with CONSULT-II and touch "ON". Blow air in port A and check that air flows freely out of port B. Blow air in port B and check that air flows freely out of port A. 																						
																						
<table border="1"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <th>VC/V BYPASS/V</th> <th>ON</th> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <th>CMPS-RPM (REF)</th> <th>XXXrpm</th> </tr> </thead> <tbody> <tr> <td>FR O2 MNTR-B2</td> <td>LEAN</td> </tr> <tr> <td>FR O2 MNTR-B1</td> <td>LEAN</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XXX%</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XXX%</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXXV</td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>			ACTIVE TEST		VC/V BYPASS/V	ON	MONITOR		CMPS-RPM (REF)	XXXrpm	FR O2 MNTR-B2	LEAN	FR O2 MNTR-B1	LEAN	A/F ALPHA-B2	XXX%	A/F ALPHA-B1	XXX%	THRTL POS SEN	XXXV		
ACTIVE TEST																						
VC/V BYPASS/V	ON																					
MONITOR																						
CMPS-RPM (REF)	XXXrpm																					
FR O2 MNTR-B2	LEAN																					
FR O2 MNTR-B1	LEAN																					
A/F ALPHA-B2	XXX%																					
A/F ALPHA-B1	XXX%																					
THRTL POS SEN	XXXV																					
OK or NG																						
OK	▶	GO TO 4.																				
NG	▶	GO TO 5.																				

SEF159X

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

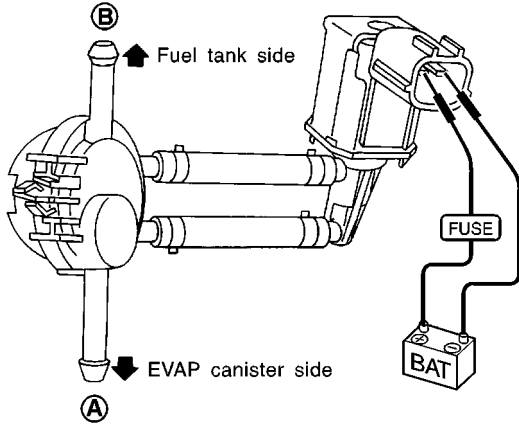3	CHECK VACUUM CUT VALVE BYPASS VALVE OPERATION	
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Remove vacuum cut valve and vacuum cut valve bypass valve as an assembly. 3. Apply vacuum to port A and check that there is no suction from port B. 4. Apply vacuum to port B and check that there is suction from port A. 5. Blow air in port B and check that there is a resistance to flow out of port A. 6. Disconnect vacuum cut valve bypass valve harness connector. 7. Supply battery voltage to the terminal. 8. Blow air in port A and check that air flows freely out of port B. 9. Blow air in port B and check that air flows freely out of port A. 		
		
OK or NG		
OK	▶	GO TO 4.
NG	▶	GO TO 5.

SEF914U

4	CHECK EVAP PURGE LINE	
<ol style="list-style-type: none"> 1. Check EVAP purge line between EVAP canister and fuel tank for clogging or disconnection. 2. Check EVAP purge port of fuel tank for clogging. 3. Check EVAP canister. Refer to EC-614. 		
OK or NG		
OK	▶	GO TO 8.
NG (Step 1)	▶	Repair it.
NG (Step 2)	▶	Clean EVAP purge port.
NG (Step 3)	▶	Replace EVAP canister.


5	CHECK BYPASS HOSE	
Check bypass hoses for clogging.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Repair or replace hoses.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

6 CHECK VACUUM CUT VALVE BYPASS VALVE

With CONSULT-II

1. Perform "VC/V BYPASS/V" in "ACTIVE TEST" mode.
2. Check air passage continuity and operation delay time under the following conditions.

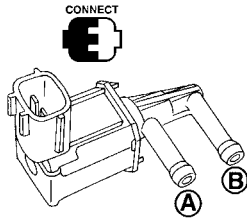


ACTIVE TEST	
VC/V BYPASS/V	OFF
MONITOR	
CMPS-RPM (REF)	XXXrpm
FR O2 MNTR-B1	RICH
A/F ALPHA-B1	XXX%
THRRTL POS SEN	XXXV

Condition VC/V BYPASS/V	Air passage continuity between A and B
ON	Yes
OFF	No

SEF158X

1. Check air passage continuity and operation delay time under the following conditions.

Without CONSULT-II

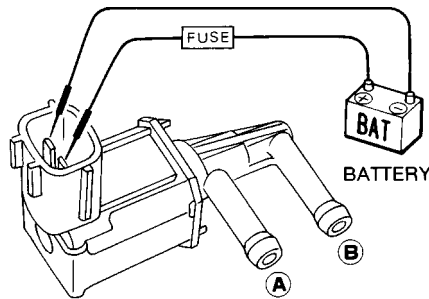

SEF351Q

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	Yes
No supply	No

MTBL0242

OK or NG

OK	▶	GO TO 7.
NG	▶	Replace vacuum cut valve bypass valve.

7	CHECK VACUUM CUT VALVE
<p>Check vacuum cut valve as follows:</p> <div style="text-align: center;"> </div>	
SEF379Q	
<ol style="list-style-type: none"> 1. Plug port C and D with fingers. 2. Apply vacuum to port A and check that there is no suction from port B. 3. Apply vacuum to port B and check that there is suction from port A. 4. Blow air in port B and check that there is a resistance to flow out of port A. 5. Open port C and D. 6. Blow air in port A check that air flows freely out of port C. 7. Blow air in port B check that air flows freely out of port D. 	
OK or NG	
OK	▶ GO TO 8.
NG	▶ Replace vacuum cut valve.

8	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR HOSE
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Check disconnection or improper connection of hose connected to EVAP control system pressure sensor. 	
OK or NG	
OK	▶ GO TO 9.
NG	▶ Repair it


9	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR
<ol style="list-style-type: none"> 1. Disconnect EVAP control system pressure sensor harness connector. <div style="text-align: center;"> </div>	
AEC651A	
<ol style="list-style-type: none"> 2. Check connectors for water. Water should not exist. 	
OK or NG	
OK	▶ GO TO 10.
NG	▶ Replace EVAP control system pressure sensor.

10	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR FUNCTION	
Refer to "DTC Confirmation Procedure" for DTC P0450, EC-982.		
OK or NG		
OK	▶	GO TO 11.
NG	▶	Replace EVAP control system pressure sensor.

11	CHECK EVAP CANISTER VENT CONTROL VALVE																											
Check air passage continuity.																												
E With CONSULT-II Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.																												
	<table border="1" style="margin: auto;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>VENT CONTROL/V</td><td>OFF</td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>CMPS-RPM (REF)</td><td>XXXrpm</td></tr> <tr><td>FR O2 MNTR-B1</td><td>RICH</td></tr> <tr><td>A/F ALPHA-B1</td><td>XXX%</td></tr> <tr><td>THRTL POS SEN</td><td>XXXV</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>	ACTIVE TEST		VENT CONTROL/V	OFF	MONITOR		CMPS-RPM (REF)	XXXrpm	FR O2 MNTR-B1	RICH	A/F ALPHA-B1	XXX%	THRTL POS SEN	XXXV							<table border="1" style="margin: auto;"> <tr> <th>Condition</th> <th>Air passage continuity between A and B</th> </tr> <tr> <td>VENT CONTROL/V ON</td> <td>No</td> </tr> <tr> <td>VENT CONTROL/V OFF</td> <td>Yes</td> </tr> </table>	Condition	Air passage continuity between A and B	VENT CONTROL/V ON	No	VENT CONTROL/V OFF	Yes
	ACTIVE TEST																											
VENT CONTROL/V	OFF																											
MONITOR																												
CMPS-RPM (REF)	XXXrpm																											
FR O2 MNTR-B1	RICH																											
A/F ALPHA-B1	XXX%																											
THRTL POS SEN	XXXV																											
Condition	Air passage continuity between A and B																											
VENT CONTROL/V ON	No																											
VENT CONTROL/V OFF	Yes																											
SEF156X																												

X Without CONSULT-II								
<table border="1" style="margin: auto;"> <tr> <th>Condition</th> <th>Air passage continuity between A and B</th> </tr> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td>No</td> </tr> <tr> <td>OFF</td> <td>Yes</td> </tr> </table>		Condition	Air passage continuity between A and B	12V direct current supply between terminals 1 and 2	No	OFF	Yes	MTBL0240
Condition	Air passage continuity between A and B							
12V direct current supply between terminals 1 and 2	No							
OFF	Yes							

If NG or operation takes more than 1 second, clean valve using air blower or replace as necessary.
 If portion **B** is rusted, replace control valve.

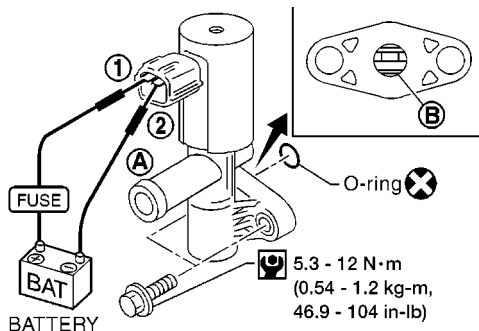

AEC783A

Make sure new O-ring is installed properly.

OK or NG

OK	▶	GO TO 12.
NG	▶	Replace EVAP canister vent control valve.

12	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.		
▶		INSPECTION END

Component Description

Component Description

The malfunction information related to A/T (Automatic Transmission) is transferred through the line (circuit) ^{NEEC0361} from TCM (Transmission control module) to ECM. Therefore, be sure to erase the malfunction information such as DTC not only in TCM (Transmission control module) but also ECM after the A/T related repair.

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 32 (ECM ground). ^{NEEC0362}


TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
7	G/B	A/T check signal	[Ignition switch "ON"] [Engine is running]	0 - 3.0V

On Board Diagnosis Logic

Malfunction is detected when an incorrect signal from TCM (Transmission control module) is sent to ECM. ^{NEEC0363}

POSSIBLE CAUSE

- Harness or connectors ^{NEEC0363S01}
[The communication line circuit between ECM and TCM (Transmission control module) is open or shorted.]
- Dead (Weak) battery
- TCM (Transmission control module)

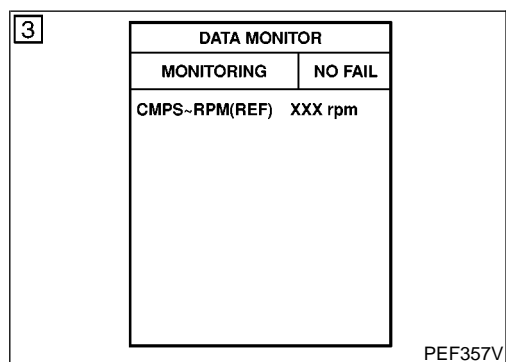

DTC Confirmation Procedure

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 5 seconds before conducting the next test. ^{NEEC0364}

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V at idle.

Ⓔ With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait at least 40 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-1140.


Ⓔ With GST

Follow the procedure "With CONSULT-II".

Wiring Diagram

NEEC0365


EC-ATDIAG-01 GI

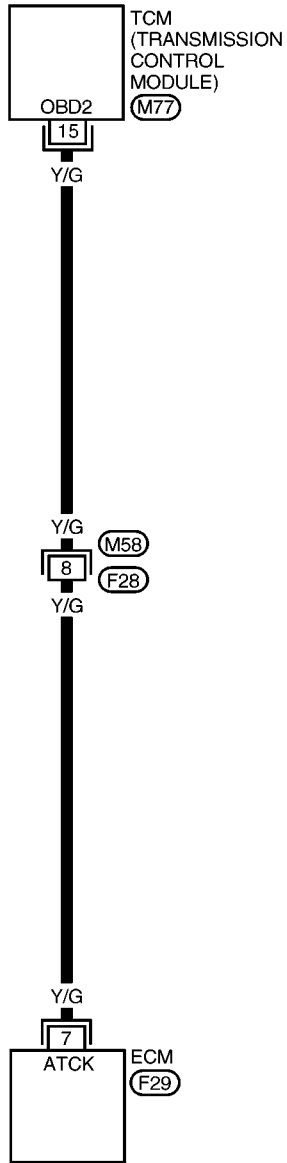

— : Detectable line for DTC
— : Non-detectable line for DTC

MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST



RS
BT
HA
SC
EL
IDX

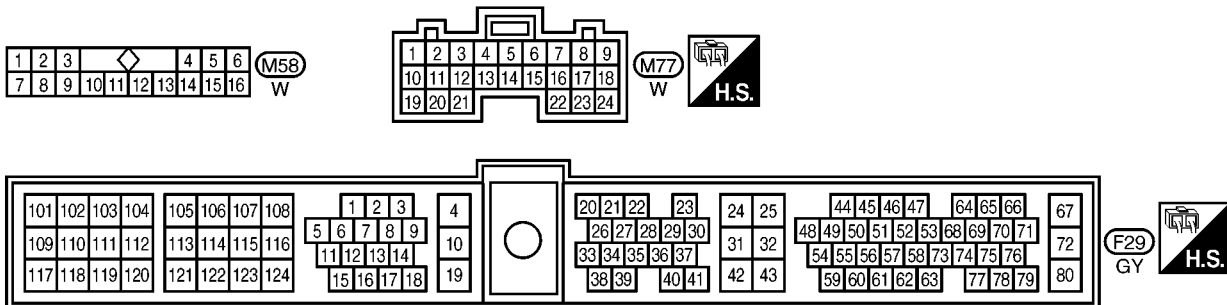

AEC971A


Diagnostic Procedure

NEEC0366

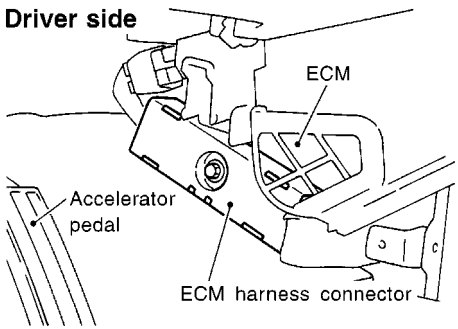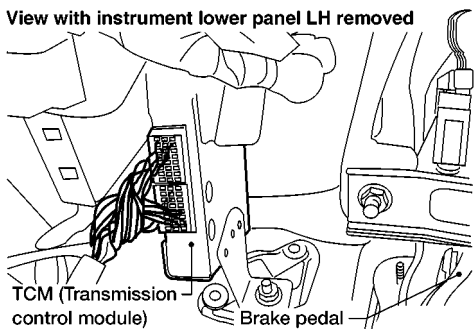1	CHECK A/T DIAGNOSIS COMMUNICATION LINE INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT							
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect ECM harness connector and TCM (Transmission Control Module) harness connector.</p> <div style="text-align: center;"> <p>Driver side</p>  <p>Labels: Accelerator pedal, ECM, ECM harness connector</p> </div> <div style="text-align: right; margin-top: 10px;"><small>SEF324V</small></div> <div style="text-align: center; margin-top: 20px;"> <p>View with instrument lower panel LH removed</p>  <p>Labels: TCM (Transmission control module), Brake pedal</p> </div> <div style="text-align: right; margin-top: 10px;"><small>AEC655A</small></div> <p>3. Check harness continuity between ECM terminal 7 and TCM (Transmission Control Module) terminal 15. Refer to Wiring Diagram.</p> <p style="margin-left: 20px;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>								
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%; border-right: 1px solid black; padding: 5px;">OK</td> <td style="width: 5%; text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">GO TO 3.</td> </tr> <tr> <td style="border-right: 1px solid black; padding: 5px;">NG</td> <td style="text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">GO TO 2.</td> </tr> </table>			OK	▶	GO TO 3.	NG	▶	GO TO 2.
OK	▶	GO TO 3.						
NG	▶	GO TO 2.						

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M58, F28 ● Harness for open or short between ECM and TCM (Transmission Control Module) 		
▶ Repair open circuit or short to ground or short to power in harness or connectors.		

3	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.		
▶ INSPECTION END		

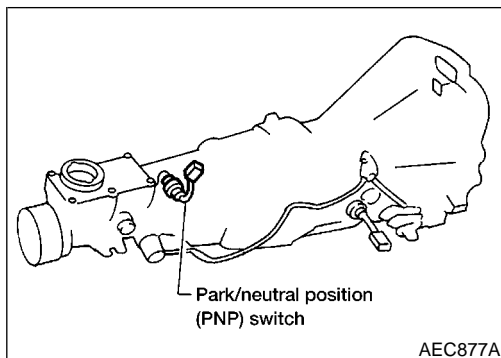

Component Description

When the gear position is “P” (A/T models only) or “N”, park/neutral position (PNP) switch is “ON”. NEEC0367

ECM detects the position because the continuity of the line (the “ON” signal) exists.

For A/T models, the park/neutral position (PNP) switch assembly also includes a transmission range switch to detect selector lever position.

CONSULT-II Reference Value in Data Monitor Mode

NEEC0368

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
P/N POSI SW	● Ignition switch: ON	ON
	Except above	OFF

ECM Terminals and Reference Value

NEEC0369

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
22	L/B	Park/neutral position (PNP) switch	[Ignition switch “ON”] ● Gear position is “N” or “P” (A/T models) ● Gear position is neutral (M/T models)	Approximately 0V
			[Ignition switch “ON”] ● Except the above gear position	Approximately 5V

On Board Diagnosis Logic

Malfunction is detected when the signal of the park/neutral position (PNP) switch is not changed in the process of engine starting and driving. NEEC0370

POSSIBLE CAUSE

NEEC0370S01

- Harness or connectors
[The park/neutral position (PNP) switch circuit is open or shorted.]
- Park/neutral position (PNP) switch

DTC Confirmation Procedure

NEEC0371

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 5 seconds before conducting the next test.

DTC P1706 PARK/NEUTRAL POSITION (PNP) SWITCH

VG33E

DTC Confirmation Procedure (Cont'd)

2

DATA MONITOR	
MONITORING	NO FAIL
P/N POSI SW	ON

PEF963N

5

DATA MONITOR	
MONITORING	NO FAIL
CMPS~RPM (POS)	XXX rpm
COOLAN TEMP/S	XXX°C
VHCL SPEED SE	XXX km/h
P/N POSI SW	OFF
B/FUEL SCHDL	XXX ms

SEF381X

With CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "P/N POSI SW" in "DATA MONITOR" mode with CONSULT-II. Then check the "P/N POSI SW" signal under the following conditions.

Position (Selector lever)	Known good signal
"N" and "P" position	ON
Except the above position	OFF


If NG, go to "Diagnostic Procedure", EC-1144.

If OK, go to following step.

- 3) Select "DATA MONITOR" mode with CONSULT-II.
- 4) Start engine and warm it up to normal operating temperature.
- 5) Maintain the following conditions for at least 60 consecutive seconds.

CMPS-RPM (POS)	1,600 - 2,650 rpm (A/T models) 1,700 - 2,700 rpm (M/T models)
COOLAN TEMP/S	More than 70°C (158°F)
B/FUEL SCHDL	1.6 - 6.5 msec (A/T models) 1.9 - 5.5 msec (M/T models)
VHCL SPEED SE	71 - 100 km/h (44 - 62 MPH)
Selector lever	Suitable position

- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-1144.

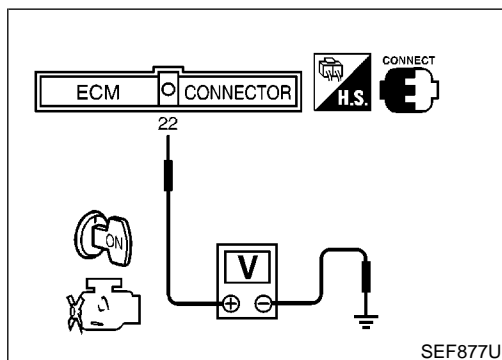

Overall Function Check

Use this procedure to check the overall function of the park/neutral position (PNP) switch circuit. During this check, a 1st trip DTC might not be confirmed. NEEC0372

Without CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Check voltage between ECM terminal 22 and body ground under the following conditions.

Condition (Gear position)	Voltage (V) (Known good data)
"P" and "N" position	Approx. 0
Except the above position	Approx. 5

- 3) If NG, go to "Diagnostic Procedure", EC-1144.

DTC P1706 PARK/NEUTRAL POSITION (PNP) SWITCH

VG33E

Wiring Diagram



Wiring Diagram

NEEC0373


EC-PNP/SW-01

- : With theft warning system
- : Without theft warning system
- : With A/T
- : With M/T

- : Detectable line for DTC
- : Non-detectable line for DTC

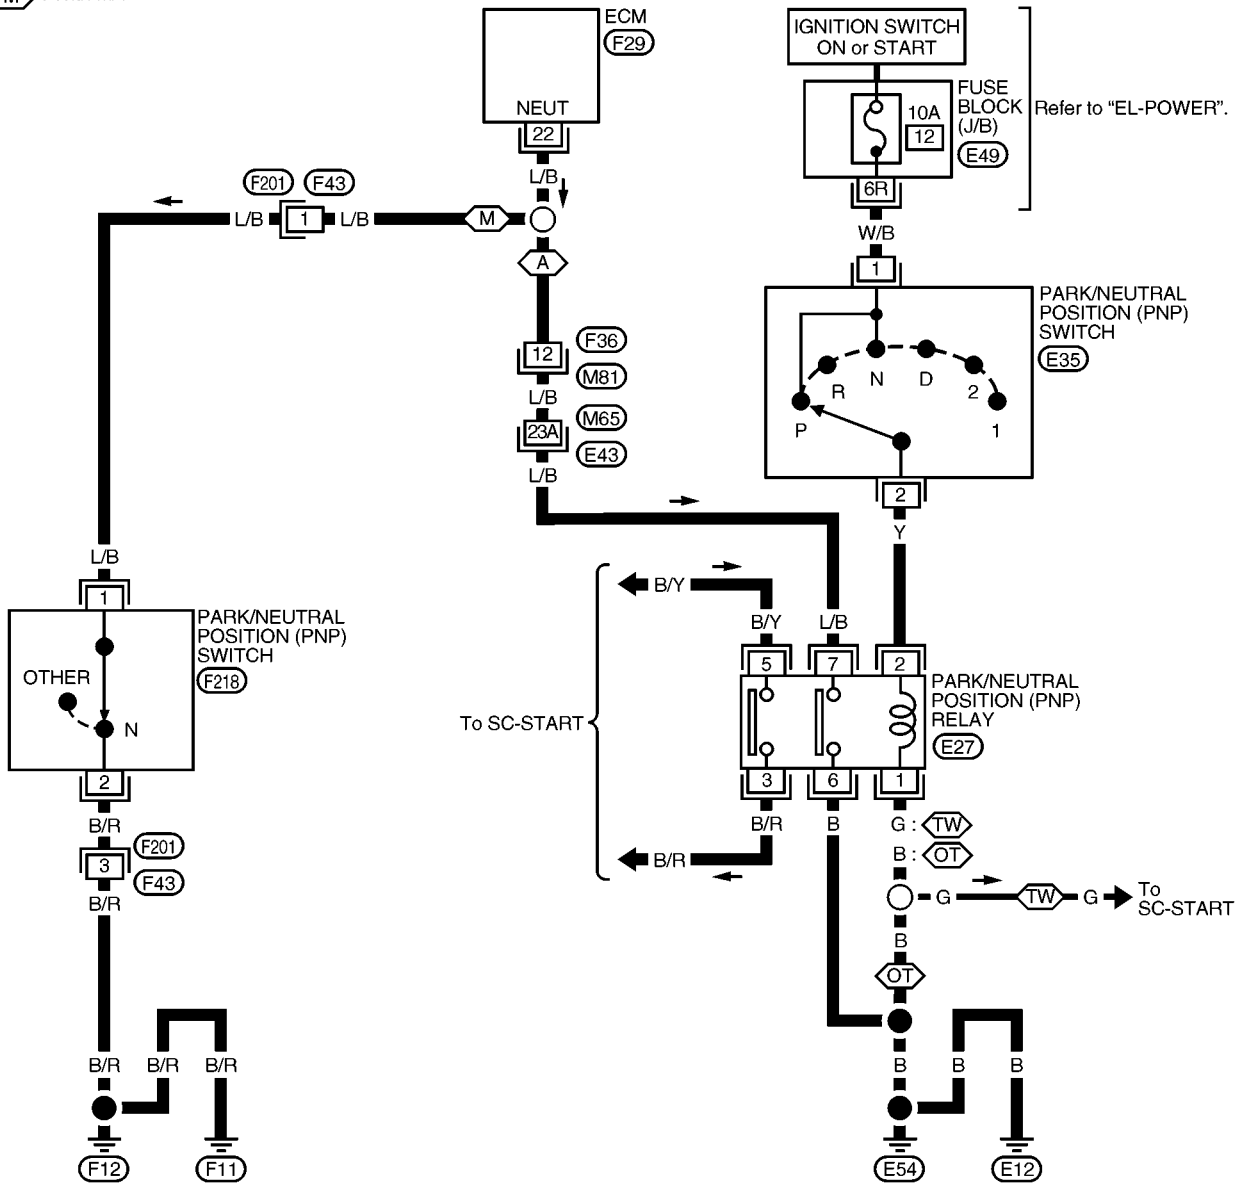

Refer to the following.
 (M65), (E43) - SUPER
 MULTIPLE JUNCTION (SMJ)


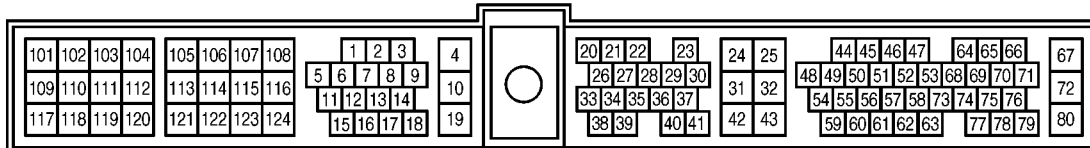


AEC972A

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

Diagnostic Procedure FOR M/T MODELS

NEEC0374
NEEC0374S01

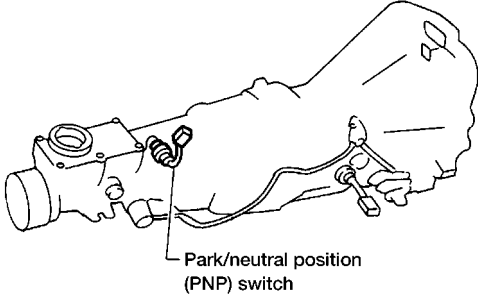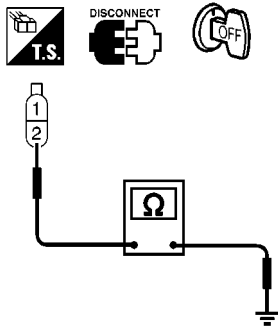1	CHECK PNP SWITCH GROUND CIRCUIT FOR OPEN AND SHORT						
<p>1. Turn ignition switch "OFF". 2. Disconnect park/neutral position (PNP) switch harness connector.</p> <div style="text-align: center;">  <p>Park/neutral position (PNP) switch</p> </div> <p>3. Check harness continuity between PNP switch terminal 2 and engine ground. Refer to Wiring Diagram.</p> <div style="text-align: center;">  </div> <p style="color: blue;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 3.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 2.</td> </tr> </table>		OK	▶	GO TO 3.	NG	▶	GO TO 2.
OK	▶	GO TO 3.					
NG	▶	GO TO 2.					

AEC877A
SEF218V

2	DETECT MALFUNCTIONING PART			
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F201, F43 ● Harness for open or short between park/neutral position (PNP) switch and engine ground <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;"></td> <td style="width: 5%; text-align: center;">▶</td> <td>Repair open circuit or short to ground or short to power in harness or connectors.</td> </tr> </table>			▶	Repair open circuit or short to ground or short to power in harness or connectors.
	▶	Repair open circuit or short to ground or short to power in harness or connectors.		

3	CHECK PNP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT						
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 22 and PNP switch terminal 1. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 5.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 4.</td> </tr> </table>		OK	▶	GO TO 5.	NG	▶	GO TO 4.
OK	▶	GO TO 5.					
NG	▶	GO TO 4.					

DTC P1706 PARK/NEUTRAL POSITION (PNP) SWITCH

VG33E

Diagnostic Procedure (Cont'd)

4	DETECT MALFUNCTIONING PART	
Check the following.		
<ul style="list-style-type: none">● Harness connectors F43, F201● Harness for open or short between ECM and park/neutral position (PNP) switch		
	▶	Repair open circuit or short to ground or short to power in harness or connectors.
5	CHECK PARK/NEUTRAL POSITION (PNP) SWITCH	
Refer to "Position Switch Check", "ON-VEHICLE SERVICE", <i>MT-44</i> .		
		OK or NG
OK	▶	GO TO 6.
NG	▶	Replace park/neutral position (PNP) switch.
6	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.		
	▶	INSPECTION END

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA



SC


EL

IDX

FOR A/T MODELS

=NEEC0374S02

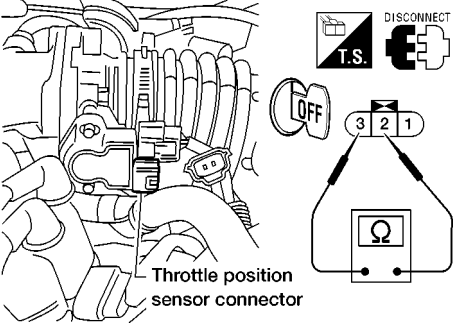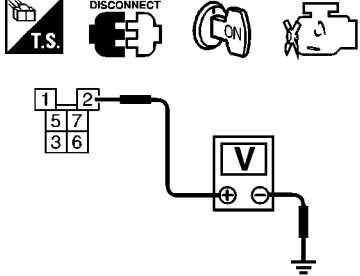1	CHECK PNP SWITCH POWER SUPPLY CIRCUIT-I	<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect park/neutral position (PNP) relay.</p> <div style="text-align: center; margin: 10px 0;">  <p style="text-align: center;">Throttle position sensor connector</p> </div> <p>3. Turn ignition switch "ON".</p> <p>4. Shift selector lever to "P" or "N" position.</p> <p>5. Check voltage between terminal 2 and ground with CONSULT-II or tester.</p> <div style="text-align: center; margin: 10px 0;">  </div> <p style="color: blue; margin-top: 10px;">Voltage: Battery voltage</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	<p style="text-align: right;">AEC665A</p> <p style="text-align: right;">SEF661W</p>
OK	▶	GO TO 6.	
NG	▶	GO TO 2.	

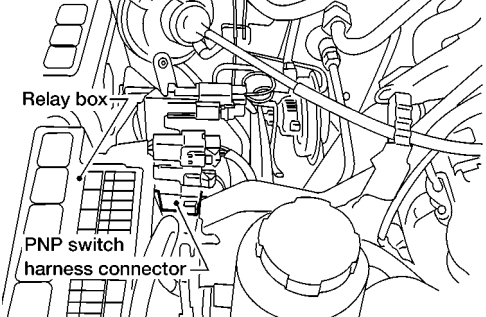2	CHECK PNP SWITCH POWER SUPPLY CIRCUIT-II	<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect park/neutral position (PNP) switch harness connector.</p> <div style="text-align: center; margin: 10px 0;">  <p style="text-align: center;">Relay box</p> <p style="text-align: center;">PNP switch harness connector</p> </div> <p>3. Check harness continuity between park/neutral position (PNP) switch terminal 2 and park/neutral position (PNP) relay terminal 2. Refer to Wiring Diagram.</p> <p style="color: blue; margin-left: 20px;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	<p style="text-align: right;">AEC662A</p>
OK	▶	GO TO 3.	
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.	

DTC P1706 PARK/NEUTRAL POSITION (PNP) SWITCH

VG33E

Diagnostic Procedure (Cont'd)

3	CHECK PNP SWITCH POWER SUPPLY CIRCUIT-III	
<p>1. Turn ignition switch "OFF".</p> <p>2. Check voltage between park/neutral position (PNP) switch terminal 1 and ground with CONSULT-II or tester. Refer to Wiring Diagram.</p> <p style="color: blue;">Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

4	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Fuse block (J/B) connector E49 ● 10A fuse ● Harness for open or short between park/neutral position (PNP) switch and fuse 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

5	CHECK PARK/NEUTRAL POSITION (PNP) SWITCH	
<p>Refer to "Component Inspection", "TROUBLE DIAGNOSES", AT-242.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 11.
NG	▶	Replace park/neutral position (PNP) switch.

6	CHECK PNP RELAY GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Check harness continuity between relay terminals 1, 6 and body ground. Refer to Wiring Diagram.</p> <p style="color: blue;">Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 8.
NG (With theft warning system)	▶	GO TO 7.
NG (Without theft warning system)	▶	Repair open circuit or short to ground or short to power in harness or connectors.

7	DETECT MALFUNCTIONING PART	
<p>Check the circuit between park/neutral position (PNP) relay and body ground.</p> <p>Refer to "STARTING SYSTEM", SC-7.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 11.
NG	▶	Repair or replace.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P1706 PARK/NEUTRAL POSITION (PNP) SWITCH

VG33E

Diagnostic Procedure (Cont'd)

8	CHECK PNP RELAY INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 22 and relay terminal 7. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 10.
NG	▶	GO TO 9.

9	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Harness connectors F36, M81 ● Harness connectors M65, E43 ● Harness for open or short between ECM and park/neutral position (PNP) relay 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

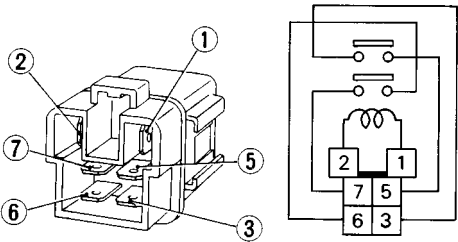10	CHECK PARK/NEUTRAL POSITION (PNP) RELAY	
1. Apply 12V direct current between park/neutral position (PNP) relay terminals 1 and 2. 2. Check continuity between park/neutral position (PNP) relay terminals 3 and 5, 6 and 7.		
		
<p>12V (1 and 2) applied: Continuity should exist. No voltage applied: Continuity should not exist.</p> <p style="text-align: right;">SEC202B</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 11.
NG	▶	Replace park/neutral position (PNP) relay.

11	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIGNOSIS FOR INTERMITTENT INCIDENT", EC-717.		
▶		INSPECTION END

System Description

NEEC0375

COOLING FAN CONTROL


NEEC0375S01

Sensor	Input Signal to ECM	ECM function	Actuator
Vehicle speed sensor	Vehicle speed	Cooling fan control	Cooling fan relay(s)
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Camshaft position sensor	Engine speed		

The ECM controls the cooling fan corresponding to the signals sent from the vehicle speed and engine coolant temperature. The control system has 2-step control [ON/OFF].

OPERATION

NEEC0375S02

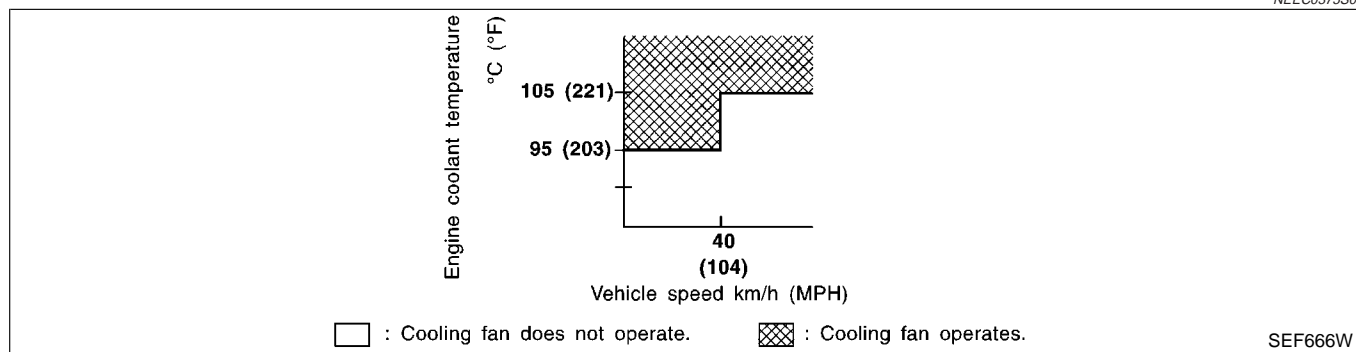

CONSULT-II Reference Value in Data Monitor Mode

NEEC0376

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
COOLING FAN	<ul style="list-style-type: none"> ● Engine: Idling, after warming up ● Air conditioner switch: OFF 	Engine coolant temperature is 94°C (201°F) or less. OFF
		Engine coolant temperature is 95°C (203°F) or more. ON

ECM Terminals and Reference Value

NEEC0377

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
36	LG/R	Cooling fan relay	[Engine is running] ● Cooling fan is not operating	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] ● Cooling fan is operating	0 - 0.6V

On Board Diagnosis Logic

If the cooling fan or another component in the cooling system malfunctions, engine coolant temperature will rise. When the engine coolant temperature reaches an abnormally high temperature condition, a malfunction is indicated.

Malfunction is detected when engine coolant temperature reaches an abnormally high temperature.

CAUTION:


When a malfunction is indicated, be sure to replace the coolant following the procedure "Changing Engine Coolant", "ENGINE MAINTENANCE", MA-27. Also, replace the engine oil.

- 1) Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute like pouring coolant by kettle. Be sure to use coolant with the proper mixture ratio. Refer to "Anti-freeze Coolant Mixture Ratio", "RECOMMENDED FLUIDS AND LUBRICANTS", MA-16.
- 2) After refilling coolant, run engine to ensure that no water-flow noise is emitted.

POSSIBLE CAUSE

- Harness or connectors
(The cooling fan circuit is open or shorted.)
- Cooling fan
- Radiator hose
- Radiator
- Radiator cap
- Water pump
- Thermostat

For more information, refer to "MAIN 12 CAUSES OF OVERHEATING", EC-1160.

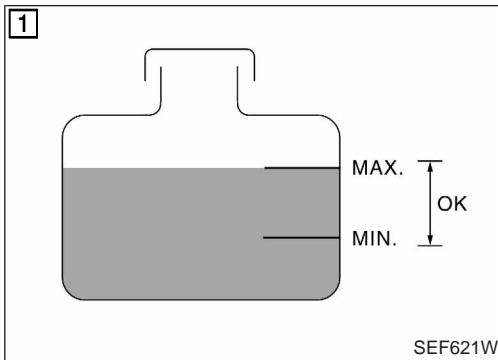
NEEC0379


SEF621W

4

ACTIVE TEST	
COOLING FAN	OFF
MONITOR	
COOLANT TEMP/S	XXX °C

SEF376X

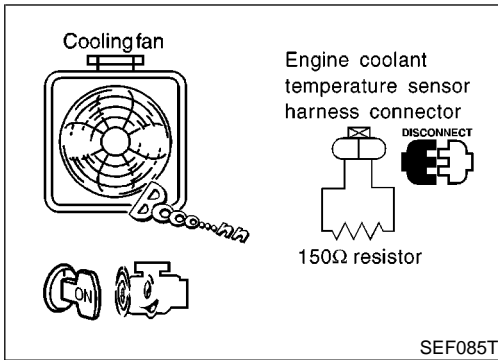

SEF085T

Overall Function Check

Use this procedure to check the overall function of the cooling fan. During this check, a DTC might not be confirmed.

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high pressure fluid escaping from the radiator.

Wrap a thick cloth around cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.

Ⓟ With CONSULT-II

- 1) Check the coolant level in the reservoir tank and radiator.
Allow engine to cool before checking coolant level.
If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to "Diagnostic Procedure", EC-1153.
- 2) Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to "Diagnostic Procedure", EC-1153.
- 3) Turn ignition switch "ON".
- 4) Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT-II.
- 5) Make sure that cooling fan operates.
- 6) If NG, go to "Diagnostic Procedure", EC-1153.

ⓧ Without CONSULT-II

- 1) Check the coolant level in the reservoir tank and radiator.
Allow engine to cool before checking coolant level.
If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to "Diagnostic Procedure", EC-1153.
- 2) Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to "Diagnostic Procedure", EC-1153.
- 3) Turn ignition switch "OFF".
- 4) Disconnect engine coolant temperature sensor harness connector.
- 5) Connect 150Ω resistor to engine coolant temperature sensor harness connector.
- 6) Start engine and make sure that cooling fan operates.
Be careful not to overheat engine.
- 7) If NG, go to "Diagnostic Procedure", EC-1153.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

TROUBLE DIAGNOSIS FOR OVERHEAT (COOLING SYSTEM)


VG33E

Wiring Diagram




Wiring Diagram

NEEC0380

EC-COOL/F-01

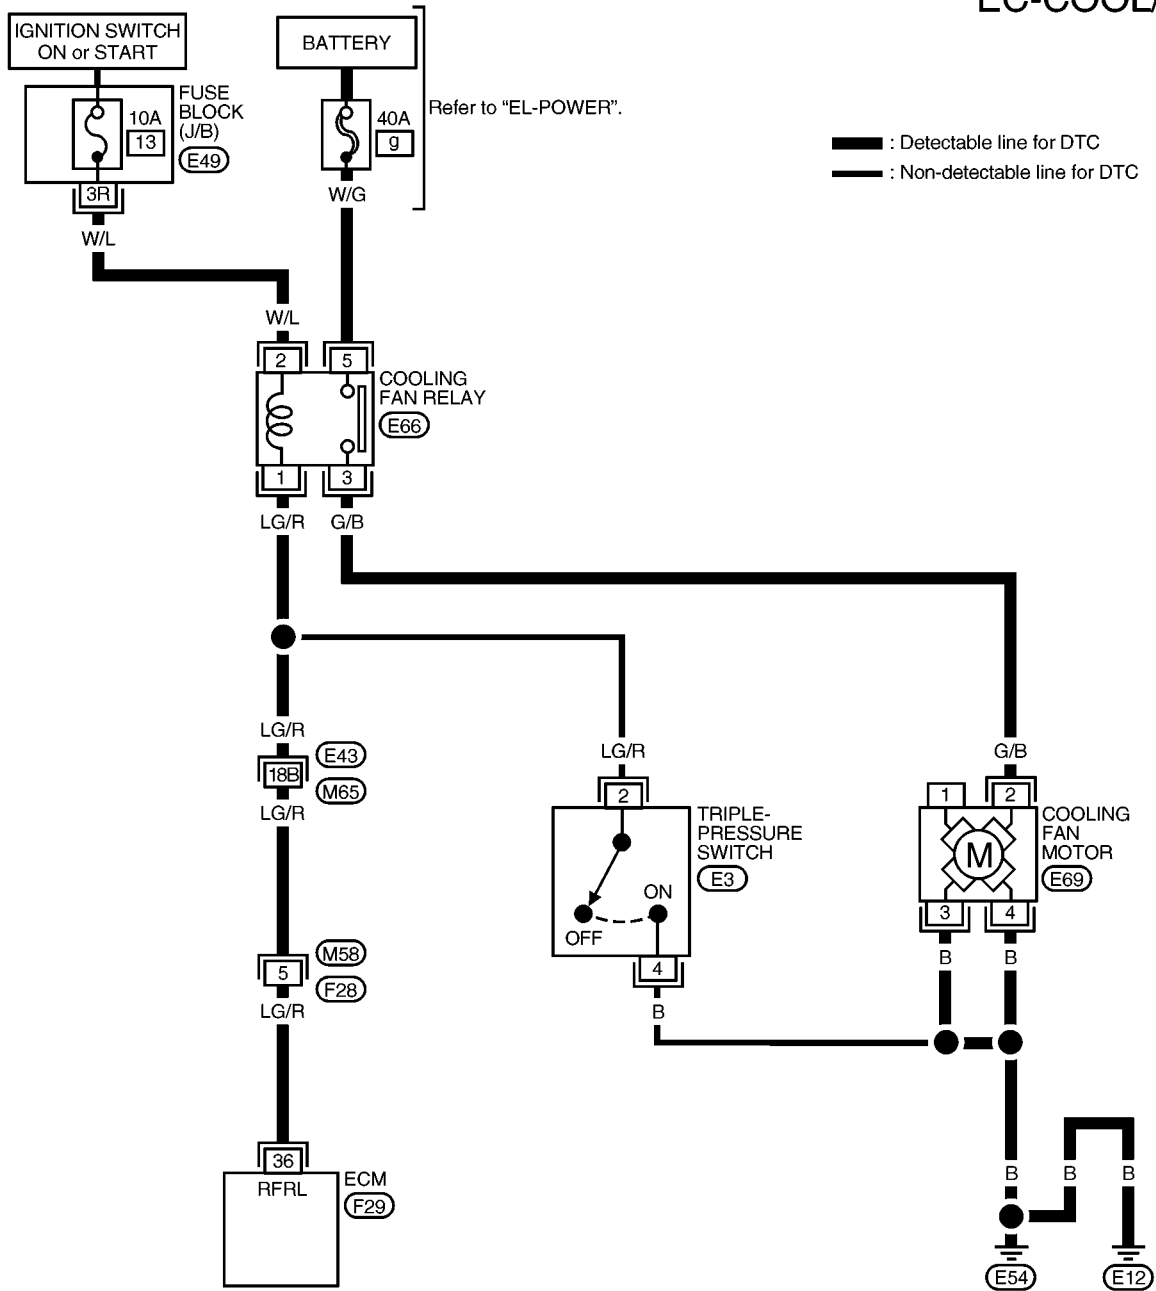

Refer to the following.
 (M65), (E43) - SUPER
 MULTIPLE JUNCTION (SMJ)

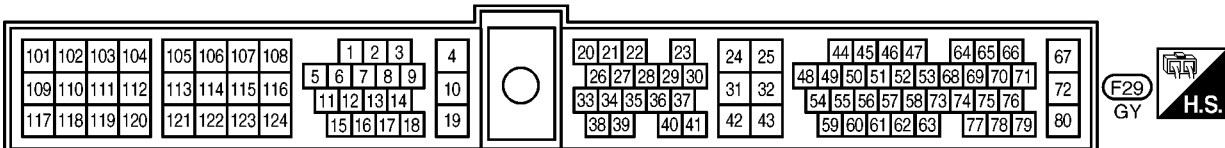

AEC973A

Diagnostic Procedure

NEEC0381

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

2	CHECK COOLING FAN OPERATION																									
<p> With CONSULT-II</p> <p>1. Turn ignition switch "ON".</p> <p>2. Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT-II (Low speed).</p>																										
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <th>COOLING FAN</th> <th>OFF</th> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <th>COOLANT TEMP/S</th> <th>XXX °C</th> </tr> </thead> <tbody> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </tbody> </table>			ACTIVE TEST		COOLING FAN	OFF	MONITOR		COOLANT TEMP/S	XXX °C																
ACTIVE TEST																										
COOLING FAN	OFF																									
MONITOR																										
COOLANT TEMP/S	XXX °C																									
<p>Does cooling fan rotate?</p> <p style="text-align: center;">Yes or No</p>																										
Yes	▶	GO TO 4.																								
No	▶	GO TO 9.																								


3	CHECK COOLING FAN OPERATION	
<p> Without CONSULT-II</p> <p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect engine coolant temperature sensor harness connector.</p> <p>3. Connect 150Ω resistor to engine coolant temperature sensor harness connector.</p> <p>4. Start engine and make sure that cooling fan operates.</p>		
<p>OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	GO TO 9.


GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX


TROUBLE DIAGNOSIS FOR OVERHEAT (COOLING SYSTEM)

VG33E

Diagnostic Procedure (Cont'd)

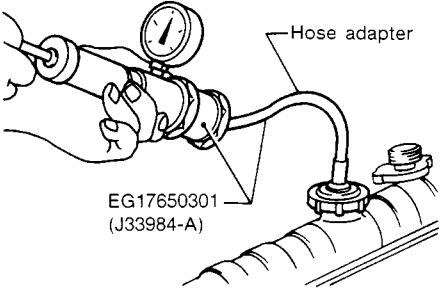4	CHECK COOLING SYSTEM FOR LEAK	
<p>Apply pressure to the cooling system with a tester, and check if the pressure drops.</p> <p>CAUTION: Higher than the specified pressure may cause radiator damage.</p> <p>Testing pressure: 157 kPa (1.6 kg/cm², 23 psi)</p>		
		
SLC754A		
<p>Pressure should not drop.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	<p>Check the following for leak</p> <ul style="list-style-type: none"> ● Hose ● Radiator ● Water pump <p>Refer to "Water Pump", LC-29.</p>

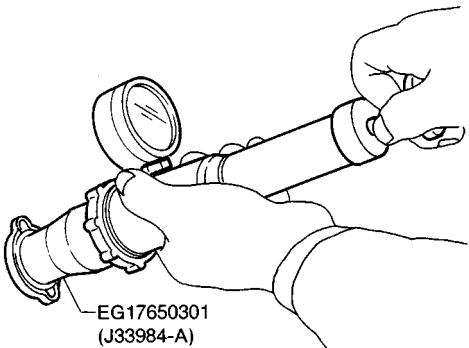5	CHECK RADIATOR CAP	
<p>Apply pressure to cap with a tester and check radiator cap relief pressure.</p>		
		
SLC755A		
<p>Radiator cap relief pressure: 59 - 98 kPa (0.6 - 1.0 kg/cm², 9 - 14 psi)</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	Replace radiator cap.

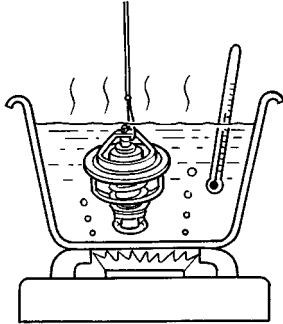6	CHECK THERMOSTAT	<p>1. Check valve seating condition at normal room temperatures. It should seat tightly.</p> <p>2. Check valve opening temperature and valve lift.</p> <div style="text-align: center; margin: 10px 0;">  </div> <p style="text-align: right; margin-right: 20px;">SLC343</p> <p>Valve opening temperature: 82°C (180°F) [standard]</p> <p>Valve lift: More than 10 mm/95°C (0.39 in/203°F)</p> <p>3. Check if valve is closed at 5°C (9°F) below valve opening temperature. For details, refer to "Thermostat", LC-30.</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	GI MA EM LC EC FE CL MT AT TF PD AX SU BR ST RS BT HA SC EL IDX	
	OK	▶	GO TO 7.	
	NG	▶	Replace thermostat	


TROUBLE DIAGNOSIS FOR OVERHEAT (COOLING SYSTEM)

VG33E

Diagnostic Procedure (Cont'd)

7 CHECK ENGINE COOLANT TEMPERATURE SENSOR


Check resistance as shown in the figure.

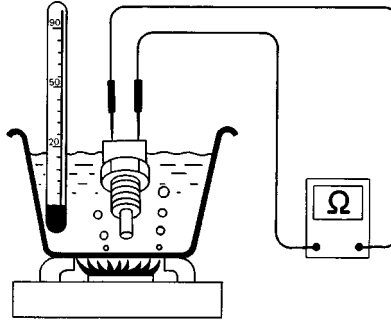

<Reference data>

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

SEF152P

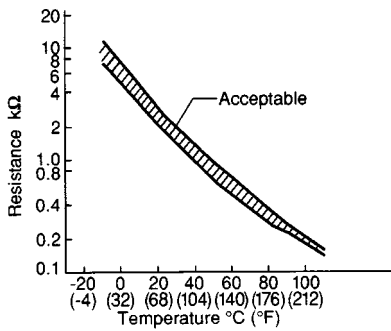

MTBL0229

SEF012P

OK or NG



OK ► GO TO 8.

NG ► Replace engine coolant temperature sensor.

8 CHECK MAIN 12 CAUSES

If the cause cannot be isolated, go to "MAIN 12 CAUSES OF OVERHEATING", EC-1160.

► **INSPECTION END**

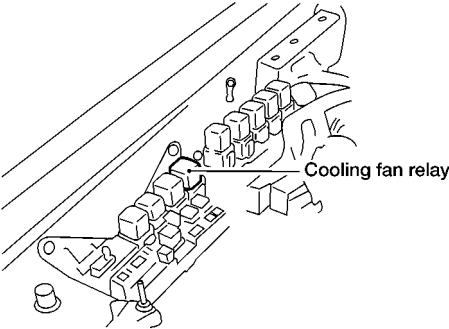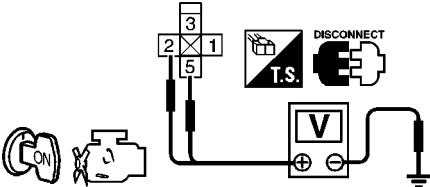
9	CHECK COOLING FAN RELAY POWER SUPPLY CIRCUIT	<p>1. Turn ignition switch "OFF". 2. Disconnect cooling fan relay.</p> <div style="text-align: center;">  <p style="text-align: right; margin-right: 50px;">Cooling fan relay</p> </div> <p style="text-align: right; margin-right: 50px;">AEC932A</p> <p>3. Turn ignition switch "ON". 4. Check voltage between terminals 2, 5 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p style="text-align: right; margin-right: 50px;">SEF667W</p> <p>Voltage: Battery voltage</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p style="background-color: black; color: white; padding: 5px;">EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>TF</p>
OK	▶	GO TO 11.	
NG	▶	GO TO 10.	

10	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Fuse block (J/B) connector E49 ● 10A fuse ● 40A fusible link ● Harness for open or short between cooling fan relay and fuse ● Harness for open or short between cooling fan relay and battery 	<p>AX</p> <p>SU</p> <p>BR</p>
	▶	Repair open circuit or short to ground or short to power in harness or connectors.	

TROUBLE DIAGNOSIS FOR OVERHEAT (COOLING SYSTEM)

VG33E

Diagnostic Procedure (Cont'd)

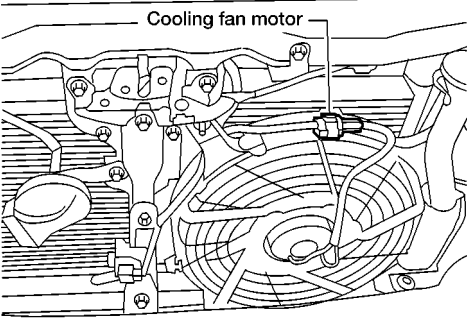11	CHECK COOLING FAN MOTOR POWER SUPPLY AND GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Disconnect cooling fan motor harness connector.</p> <div style="text-align: center;">  <p style="text-align: center;">Cooling fan motor</p> </div> <p style="text-align: right;">AEC931A</p> <p>3. Check harness continuity between relay terminal 3 and motor terminal 2, motor terminals 3, 4 and body ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 12.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.



12	CHECK COOLING FAN RELAY OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 36 and relay terminal 1. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 14.
NG	▶	GO TO 13.

13	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E43, M65 ● Harness connectors M58, F28 ● Harness for open or short between cooling fan relay and ECM 		
	▶	Repair open circuit or short to ground or short to power in harness or connectors.


TROUBLE DIAGNOSIS FOR OVERHEAT (COOLING SYSTEM)

VG33E

Diagnostic Procedure (Cont'd)

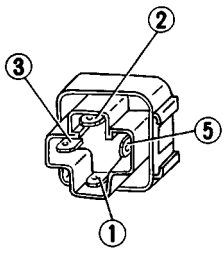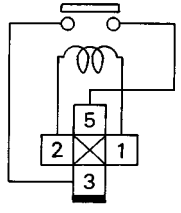14	CHECK COOLING FAN RELAY						
<p>Check continuity between terminals 3 and 5.</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <div style="text-align: right; margin-top: 20px;">SEF511P</div> <table border="1" style="margin: 20px auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Conditions</th> <th style="width: 50%;">Continuity</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td>No current supply</td> <td style="text-align: center;">No</td> </tr> </tbody> </table> <div style="text-align: right; margin-top: 20px;">MTBL0252</div> <p style="text-align: center; margin-top: 20px;">OK or NG</p>		Conditions	Continuity	12V direct current supply between terminals 1 and 2	Yes	No current supply	No
Conditions	Continuity						
12V direct current supply between terminals 1 and 2	Yes						
No current supply	No						
OK	▶ GO TO 15.						
NG	▶ Replace cooling fan relay.						

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

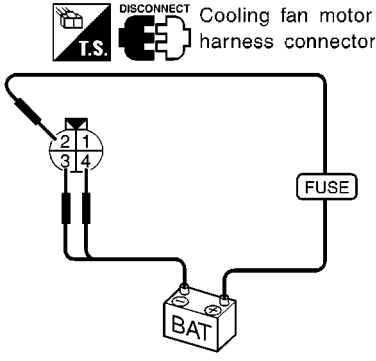15	CHECK COOLING FAN MOTOR								
<p>1. Disconnect cooling fan motor harness connector. 2. Supply cooling fan motor terminals with battery voltage and check operation.</p> <table border="1" style="margin: 20px auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2"></th> <th colspan="2" style="text-align: center;">Terminals</th> </tr> <tr> <th style="text-align: center;">(+)</th> <th style="text-align: center;">(-)</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Cooling fan motor</td> <td style="text-align: center;">2</td> <td style="text-align: center;">3, 4</td> </tr> </tbody> </table> <div style="text-align: right; margin-top: 20px;">MTBL0253</div> <div style="text-align: center; margin-top: 20px;">  <p style="margin-top: 10px;">Cooling fan motor should operate.</p> </div> <div style="text-align: right; margin-top: 20px;">SEF670W</div> <p style="text-align: center; margin-top: 20px;">OK or NG</p>			Terminals		(+)	(-)	Cooling fan motor	2	3, 4
	Terminals								
	(+)	(-)							
Cooling fan motor	2	3, 4							
OK	▶ GO TO 16.								
NG	▶ Replace cooling fan motor.								

16	CHECK INTERMITTENT INCIDENT
<p>Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.</p>	
▶	INSPECTION END

TROUBLE DIAGNOSIS FOR OVERHEAT (COOLING SYSTEM)

VG33E

Main 12 Causes of Overheating

Main 12 Causes of Overheating

NEEC0382

Engine	Step	Inspection item	Equipment	Standard	Reference page
OFF	1	<ul style="list-style-type: none"> Blocked radiator Blocked condenser Blocked radiator grille Blocked bumper 	<ul style="list-style-type: none"> Visual 	No blocking	—
	2	<ul style="list-style-type: none"> Coolant mixture 	<ul style="list-style-type: none"> Coolant tester 	50 - 50% coolant mixture	See "RECOMMENDED FLUIDS AND LUBRICANTS", MA-13 .
	3	<ul style="list-style-type: none"> Coolant level 	<ul style="list-style-type: none"> Visual 	Coolant up to MAX level in reservoir tank and radiator filler neck	See "Changing Engine Coolant", "ENGINE MAINTENANCE", MA-27 .
	4	<ul style="list-style-type: none"> Radiator cap 	<ul style="list-style-type: none"> Pressure tester 	59 - 98 kPa (0.6 - 1.0 kg/cm ² , 9 - 14 psi) (Limit)	See "System Check", "ENGINE COOLING SYSTEM", LC-27 .
ON*2	5	<ul style="list-style-type: none"> Coolant leaks 	<ul style="list-style-type: none"> Visual 	No leaks	See "System Check", "ENGINE COOLING SYSTEM", LC-27 .
ON*2	6	<ul style="list-style-type: none"> Thermostat 	<ul style="list-style-type: none"> Touch the upper and lower radiator hoses 	Both hoses should be hot	See "Thermostat" and "Radiator", "ENGINE COOLING SYSTEM", LC-30 and , LC-32 .
ON*1	7	<ul style="list-style-type: none"> Cooling fan 	<ul style="list-style-type: none"> CONSULT-II 	Operating	See "TROUBLE DIAGNOSIS FOR OVERHEAT" (EC-1149).
OFF	8	<ul style="list-style-type: none"> Combustion gas leak 	<ul style="list-style-type: none"> Color checker chemical tester 4 Gas analyzer 	Negative	—
ON*3	9	<ul style="list-style-type: none"> Coolant temperature gauge 	<ul style="list-style-type: none"> Visual 	Gauge less than 3/4 when driving	—
		<ul style="list-style-type: none"> Coolant overflow to reservoir tank 	<ul style="list-style-type: none"> Visual 	No overflow during driving and idling	See "Changing Engine Coolant", "ENGINE MAINTENANCE", MA-27 .
OFF*4	10	<ul style="list-style-type: none"> Coolant return from reservoir tank to radiator 	<ul style="list-style-type: none"> Visual 	Should be initial level in reservoir tank	See "ENGINE MAINTENANCE", MA-27 .
OFF	11	<ul style="list-style-type: none"> Cylinder head 	<ul style="list-style-type: none"> Straight gauge feeler gauge 	0.1 mm (0.004 in) Maximum distortion (warping)	See "Inspection", "CYLINDER HEAD", EM-90 .
	12	<ul style="list-style-type: none"> Cylinder block and pistons 	<ul style="list-style-type: none"> Visual 	No scuffing on cylinder walls or piston	See "Inspection", "CYLINDER BLOCK", EM-106 .


*1: Turn the ignition switch ON.

*2: Engine running at 3,000 rpm for 10 minutes.

*3: Drive at 90 km/h (55 MPH) for 30 minutes and then let idle for 10 minutes.

*4: After 60 minutes of cool down time.

For more information, refer to "OVERHEATING CAUSE ANALYSIS", **LC-35**.

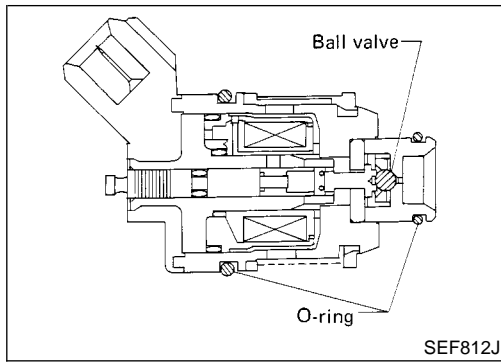

Component Description

The fuel injector is a small, precise solenoid valve. When the ECM supplies a ground to the injector circuit, the coil in the injector is energized. The energized coil pulls the needle valve back and allows fuel to flow through the injector into the intake manifold. The amount of fuel injected depends upon the injection pulse duration. Pulse duration is the length of time the injector remains open. The ECM controls the injection pulse duration based on engine fuel needs.

CONSULT-II Reference Value in Data Monitor Mode

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
INJ PULSE-B2 INJ PULSE-B1	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load Idle	2.4 - 3.7 msec
	2,000 rpm	1.9 - 3.3 msec
B/FUEL SCHDL	ditto Idle	1.0 - 1.6 msec
	2,000 rpm	0.7 - 1.4 msec

ECM Terminals and Reference Value





Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
102	W/B	Injector No. 1	[Engine is running] ● Warm-up condition ● Idle speed	BATTERY VOLTAGE (11 - 14V)
104	W/R	Injector No. 3		
106	W/G	Injector No. 5	[Engine is running] ● Warm-up condition ● Engine speed is 2,000 rpm	BATTERY VOLTAGE (11 - 14V)
109	W/L	Injector No. 2		
111	W/PU	Injector No. 4		
113	W	Injector No. 6		

Wiring Diagram

NEEC0386

EC-INJECT-01

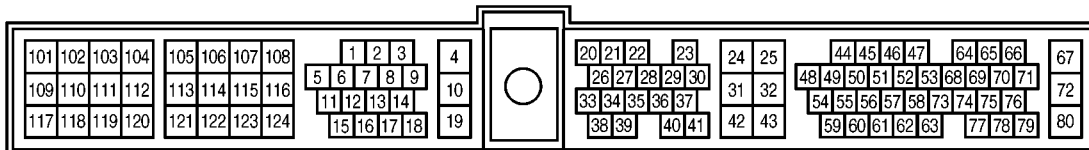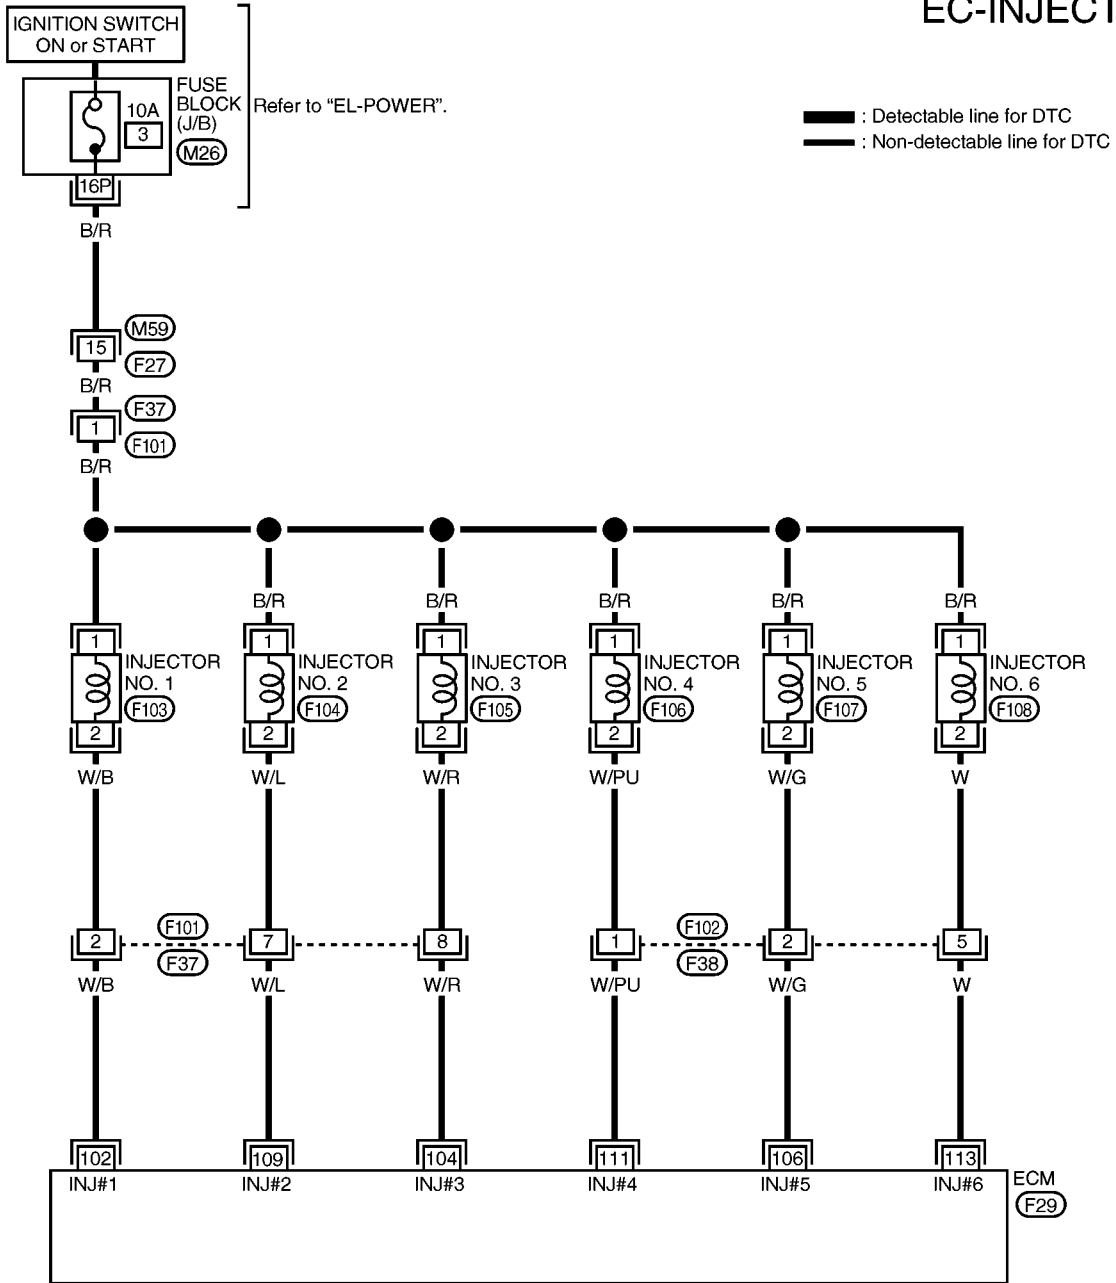


Diagnostic Procedure

NEEC0387

1	INSPECTION START	
Turn ignition switch to "START". Is any cylinder ignited?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

2	CHECK OVERALL FUNCTION																													
<p> With CONSULT-II</p> <ol style="list-style-type: none"> Start engine. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II. 																														
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><th colspan="2">POWER BALANCE</th></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><th>CMPS~RPM(REF)</th><th>XXX rpm</th></tr> <tr><th>MAS AIR/FL SE</th><th>XXX V</th></tr> <tr><th>IACV-AAC/V</th><th>XXX %</th></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </thead> <tbody> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </tbody> </table>			ACTIVE TEST		POWER BALANCE		MONITOR		CMPS~RPM(REF)	XXX rpm	MAS AIR/FL SE	XXX V	IACV-AAC/V	XXX %																
ACTIVE TEST																														
POWER BALANCE																														
MONITOR																														
CMPS~RPM(REF)	XXX rpm																													
MAS AIR/FL SE	XXX V																													
IACV-AAC/V	XXX %																													
<p>3. Make sure that each circuit produces a momentary engine speed drop.</p>																														
<p> Without CONSULT-II</p> <ol style="list-style-type: none"> Start engine. Listen to each injector operating sound. 																														
<p>Clicking noise should be heard.</p>																														
OK or NG																														
OK	▶	INSPECTION END																												
NG	▶	GO TO 3.																												

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

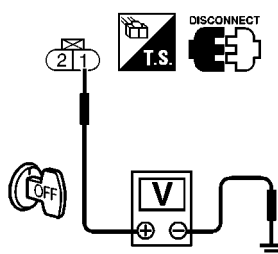3	CHECK INJECTOR POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect injector harness connector.</p> <p>3. Check voltage between terminal 1 and ground with CONSULT-II or tester.</p>		
		
<p>Voltage: Battery voltage</p> <p>OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

SEF671W

4	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M59, F27 ● Harness connectors F37, F101 ● Fuse block (J/B) connector M26 ● 10A fuse ● Harness for open or short between injector and fuse 		
▶		Repair harness or connectors.


5	CHECK INJECTOR OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Disconnect ECM harness connector.</p> <p>2. Check harness continuity between injector harness connector terminal 2 and ECM terminals 102, 104, 106, 109, 111, 113. Refer to Wiring Diagram.</p> <p style="color: blue;">Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p>		
OK or NG		
OK	▶	GO TO 7.
NG	▶	GO TO 6.

6	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F37, F101 ● Harness connectors F38, F102 ● Harness for open or short between ECM and injector 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

INJECTOR

VG33E

Diagnostic Procedure (Cont'd)

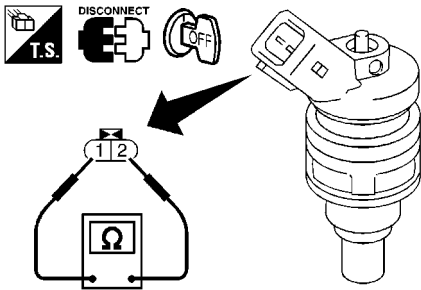7	CHECK INJECTOR	
<p>1. Disconnect injector harness connector. 2. Check resistance between terminals as shown in the figure.</p>  <p>Resistance: 10 - 14Ω [at 25°C (77°F)]</p> <p>OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	Replace injector.

SEF625V

8	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.		
	▶	INSPECTION END

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

START SIGNAL

VG33E

CONSULT-II Reference Value in Data Monitor Mode

CONSULT-II Reference Value in Data Monitor Mode

NEEC0388

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
START SIGNAL	● Ignition switch: ON → START → ON	OFF → ON → OFF

ECM Terminals and Reference Value

NEEC0389

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
20	L/OR	Start signal	[Ignition switch "ON"]	Approximately 0V
			[Ignition switch "START"]	BATTERY VOLTAGE (11 - 14V)

START SIGNAL

VG33E

Wiring Diagram

Wiring Diagram

NEEC0390

EC-S/SIG-01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS


BT

HA

SC



EL

IDX

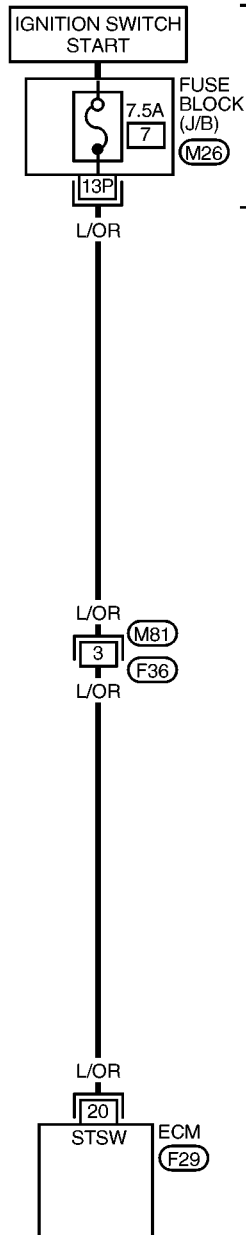

Refer to "EL-POWER".

: Detectable line for DTC
 : Non-detectable line for DTC

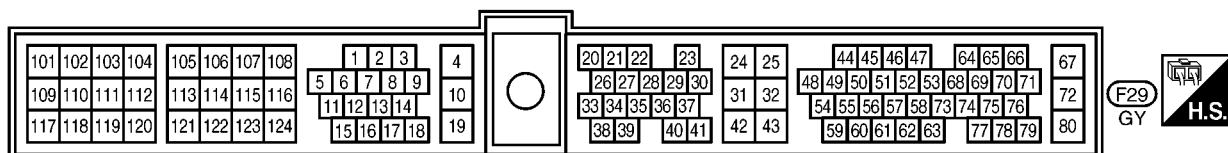


AEC975A

Diagnostic Procedure

NEEC0391

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

2	CHECK OVERALL FUNCTION													
Ⓜ With CONSULT-II 1. Turn ignition switch "ON". 2. Check "START SIGNAL" in "DATA MONITOR" mode with CONSULT-II under the following conditions.														
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th style="width: 50%;">Monitoring</th> <th style="width: 50%;">NO FAIL</th> </tr> </thead> <tbody> <tr> <td>START SIGNAL</td> <td>OFF</td> </tr> <tr> <td>CLSD TH/P SW</td> <td>ON</td> </tr> <tr> <td>AIR COND SIG</td> <td>OFF</td> </tr> <tr> <td>P/N POSI SW</td> <td>ON</td> </tr> </tbody> </table>			DATA MONITOR		Monitoring	NO FAIL	START SIGNAL	OFF	CLSD TH/P SW	ON	AIR COND SIG	OFF	P/N POSI SW	ON
DATA MONITOR														
Monitoring	NO FAIL													
START SIGNAL	OFF													
CLSD TH/P SW	ON													
AIR COND SIG	OFF													
P/N POSI SW	ON													
PEF111P														
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Condition</th> <th style="width: 50%;">"START SIGNAL"</th> </tr> </thead> <tbody> <tr> <td>Ignition switch "ON"</td> <td>OFF</td> </tr> <tr> <td>Ignition switch "START"</td> <td>ON</td> </tr> </tbody> </table>			Condition	"START SIGNAL"	Ignition switch "ON"	OFF	Ignition switch "START"	ON						
Condition	"START SIGNAL"													
Ignition switch "ON"	OFF													
Ignition switch "START"	ON													
MTBL0147														
OK or NG														
OK	▶	INSPECTION END												
NG	▶	GO TO 4.												

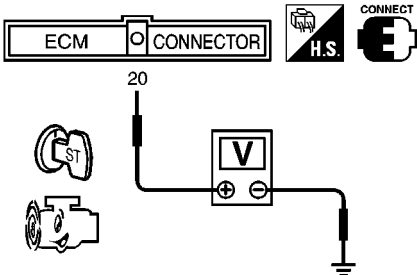3	CHECK OVERALL FUNCTION							
ⓧ Without CONSULT-II Check voltage between ECM terminal 20 and ground under the following conditions.								
								
SEF733U								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Condition</th> <th style="width: 50%;">Voltage</th> </tr> </thead> <tbody> <tr> <td>Ignition switch "START"</td> <td>Battery voltage</td> </tr> <tr> <td>Other positions</td> <td>Approximately 0V</td> </tr> </tbody> </table>			Condition	Voltage	Ignition switch "START"	Battery voltage	Other positions	Approximately 0V
Condition	Voltage							
Ignition switch "START"	Battery voltage							
Other positions	Approximately 0V							
MTBL0148								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 4.						

START SIGNAL

VG33E

Diagnostic Procedure (Cont'd)

4	CHECK STARTING SYSTEM
Turn ignition switch "OFF", then turn it to "START". Does starter motor operate?	
Yes or No	
Yes	▶ GO TO 5.
No	▶ Refer to "STARTING SYSTEM", SC-7 .

GI
MA
EM

5	CHECK FUSE
1. Turn ignition switch "OFF". 2. Disconnect 7.5A fuse. 3. Check if 7.5A fuse is OK.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ Replace 7.5A fuse.

LC
EC

FE

6	CHECK START SIGNAL INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 20 and fuse block. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 8.
NG	▶ GO TO 7.

CL
MT

AT

TF

7	DETECT MALFUNCTIONING PART
Check the following.	
<ul style="list-style-type: none"> ● Harness connectors M81, F36 ● Harness for open or short between ECM and fuse 	
	▶ Repair open circuit or short to ground or short to power in harness or connectors.

PD

AX

SU

8	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
	▶ INSPECTION END

BR

ST

RS

BT

HA

SC

EL

IDX


System Description

NEEC0392

Sensor	Input Signal to ECM	ECM function	Actuator
Camshaft position sensor	Engine speed	Fuel pump control	Fuel pump relay
Ignition switch	Start signal		

The ECM activates the fuel pump for several seconds after the ignition switch is turned on to improve engine startability. If the ECM receives a 120° signal from the camshaft position sensor, it knows that the engine is rotating, and causes the pump to operate. If the 120° signal is not received when the ignition switch is on, the engine stalls. The ECM stops pump operation and prevents battery discharging, thereby improving safety. The ECM does not directly drive the fuel pump. It controls the ON/OFF fuel pump relay, which in turn controls the fuel pump.

Condition	Fuel pump operation
Ignition switch is turned to ON.	Operates for 5 seconds
Engine running and cranking	Operates
When engine is stopped	Stops in 1.5 seconds
Except as shown above	Stops

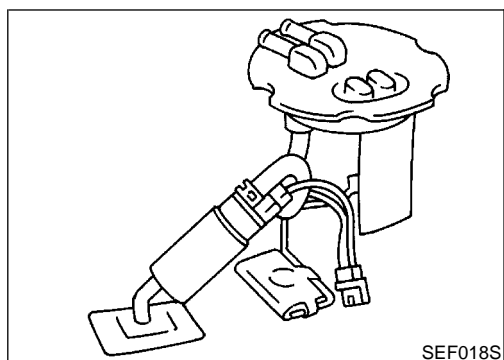

Component Description

NEEC0393

The fuel pump with a fuel damper is an in-tank type (the pump and damper are located in the fuel tank).

CONSULT-II Reference Value in Data Monitor Mode

NEEC0394

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FUEL PUMP RLY	<ul style="list-style-type: none"> ● Ignition switch is turned to ON. (Operates for 5 seconds.) ● Engine running and cranking 	ON
	Except as shown above	OFF

ECM Terminals and Reference Value

NEEC0395

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
11	W/R	Fuel pump relay	[Ignition switch "ON"] <ul style="list-style-type: none"> ● For 5 seconds after turning ignition switch "ON" [Engine is running]	0 - 1V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● More than 5 seconds after turning ignition switch "ON" 	BATTERY VOLTAGE (11 - 14V)

FUEL PUMP


VG33E

Wiring Diagram

Wiring Diagram



NEEC0396

EC-F/PUMP-01

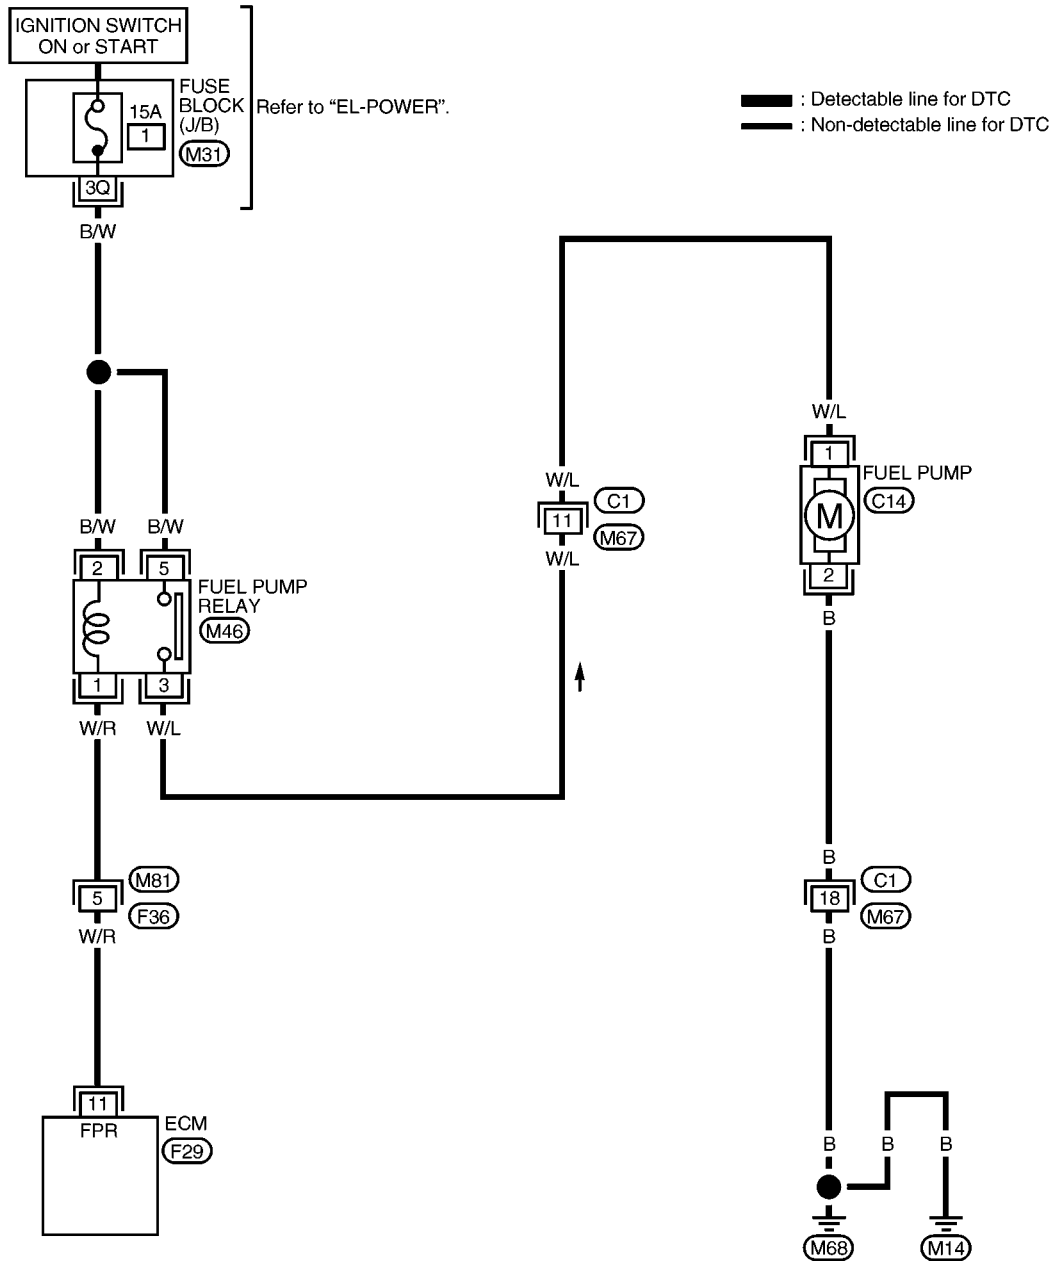

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST


RS
BT
HA
SC
EL
IDX

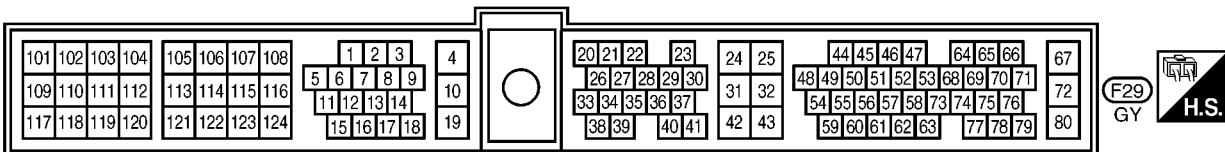



AEC020B


Diagnostic Procedure

NEEC0397

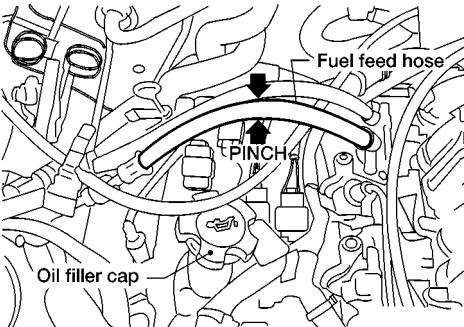1	CHECK OVERALL FUNCTION
<ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Pinch fuel feed hose with fingers. 	
	
AEC663A	
<p>Fuel pressure pulsation should be felt on the fuel feed hose for 5 seconds after ignition switch is turned "ON".</p> <p>OK or NG</p>	
OK	▶ INSPECTION END
NG	▶ GO TO 2.

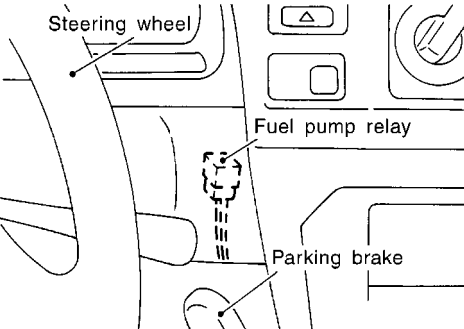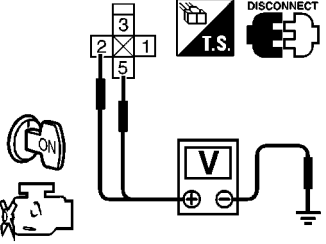2	CHECK FUEL PUMP RELAY POWER SUPPLY CIRCUIT
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect fuel pump relay. 	
	
SEF349V	
<ol style="list-style-type: none"> 3. Turn ignition switch "ON". 4. Check voltage between terminals 2, 5 and ground with CONSULT-II or tester. 	
	
SEF674W	
<p>Voltage: Battery voltage</p> <p>OK or NG</p>	
OK	▶ GO TO 4.
NG	▶ GO TO 3.

3	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Fuse block (J/B) connector M31 ● 15A fuse ● Harness for open or short between fuse and fuel pump relay 	
▶	Repair harness or connectors.

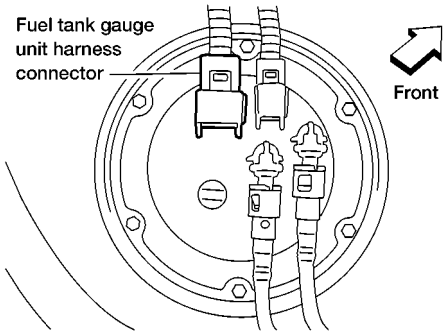4	CHECK FUEL PUMP POWER SUPPLY AND GROUND CIRCUIT FOR OPEN AND SHORT
1. Turn ignition switch "OFF". 2. Disconnect fuel pump harness connector.	
	
AEC933A	
3. Check harness continuity between fuel pump terminal 2 and body ground, fuel pump terminal 1 and fuel pump relay terminal 3. Refer to Wiring Diagram. Continuity should exist.	
4. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ GO TO 5.

5	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors M67, C1 ● Harness for open or short between fuel pump and body ground ● Harness for open or short between fuel pump and fuel pump relay 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

6	CHECK FUEL PUMP RELAY OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 11 and fuel pump relay terminal 1. Refer to Wiring Diagram. Continuity should exist.	
3. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 8.
NG	▶ GO TO 7.

7	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors M81, F36 ● Harness for open or short between ECM and fuel pump relay 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

 GI
 MA
 EM
 LC
EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

8 CHECK FUEL PUMP RELAY

With CONSULT-II


1. Reconnect fuel pump relay, fuel pump harness connector and ECM harness connector.
2. Turn ignition switch "ON".
3. Turn fuel pump relay "ON" and "OFF" in "ACTIVE TEST" mode with CONSULT-II and check operating sound.

ACTIVE TEST	
FUEL PUMP RELAY	ON
MONITOR	
CMPS~RPM	XXX rpm

SEF380X

Without CONSULT-II

Check continuity between terminals 3 and 5.

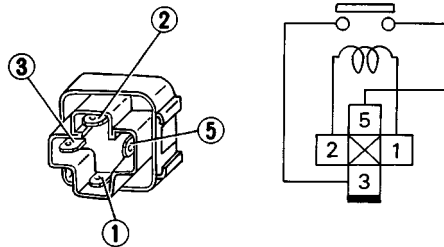

SEF511P

12V direct current supply between terminals 1 and 2

Continuity exists

No current supply

Continuity does not exist

OK or NG


OK	▶	GO TO 9.
----	---	----------

NG	▶	Replace fuel pump relay.
----	---	--------------------------

FUEL PUMP

VG33E

Diagnostic Procedure (Cont'd)

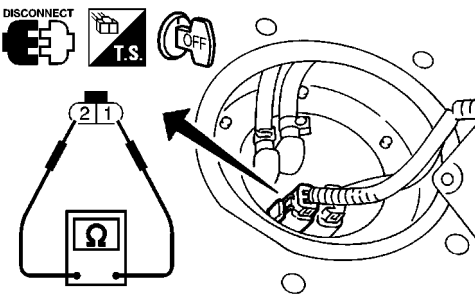
9	CHECK FUEL PUMP	<p>1. Disconnect fuel pump harness connector. 2. Check resistance between terminals 1 and 2.</p> <div style="text-align: center;">  </div> <p style="color: blue; text-align: center;">Resistance: 0.2 - 5.0Ω [at 25°C (77°F)]</p> <p style="text-align: center;">OK or NG</p>		SEF022S	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p> <p>CL</p>
	OK	▶	GO TO 10.		
	NG	▶	Replace fuel pump.		

10	CHECK INTERMITTENT INCIDENT	Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.			<p>MT</p> <p>AT</p> <p>TF</p> <p>PD</p> <p>AX</p> <p>SU</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>
		▶	INSPECTION END		

POWER STEERING OIL PRESSURE SWITCH

VG33E

Component Description

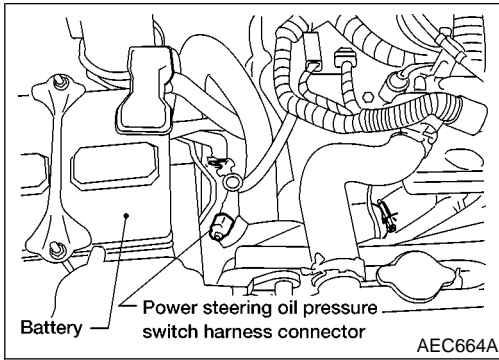

Component Description

The power steering oil pressure switch is attached to the power steering high-pressure tube and detects a power steering load. When a power steering load is detected, it signals the ECM. The ECM adjusts the IACV-AAC valve to increase the idle speed and adjust for the increased load.

NEEC0398

CONSULT-II Reference Value in Data Monitor Mode

NEEC0399

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
PW/ST SIGNAL	<ul style="list-style-type: none"> Engine: After warming up, idle the engine 	Steering wheel in neutral position (forward direction) OFF
		The steering wheel is fully turned. ON

ECM Terminals and Reference Value

NEEC0400

Specification data are reference values and are measured between each terminal and 32 (ECM ground).

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
39	GY/R	Power steering oil pressure switch	[Engine is running] <ul style="list-style-type: none"> Steering wheel is being fully turned 	0V
			[Engine is running] <ul style="list-style-type: none"> Steering wheel is not being turned 	Approximately 5V

POWER STEERING OIL PRESSURE SWITCH

VG33E

Wiring Diagram

Wiring Diagram

NEEC0401

EC-PST/SW-01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS


BT

HA



SC

EL

IDX

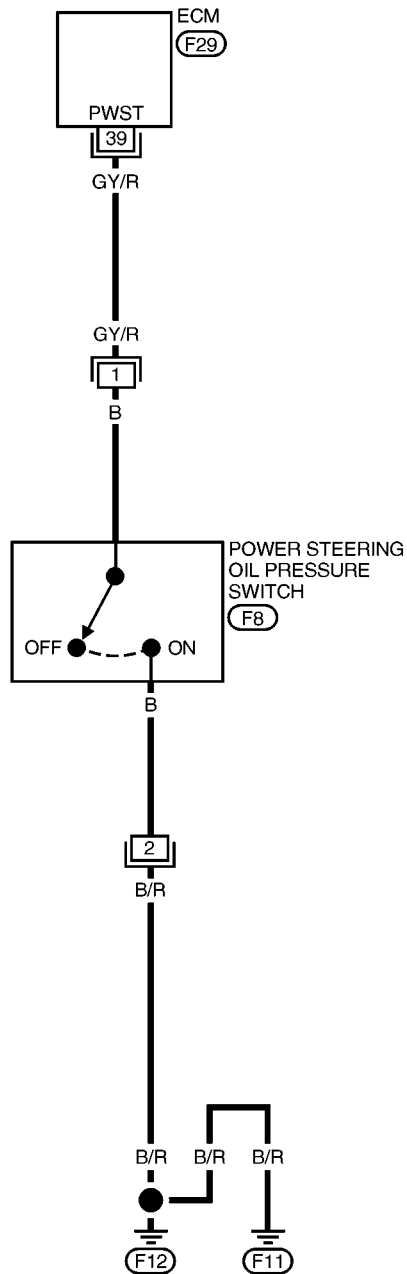

— : Detectable line for DTC
 — : Non-detectable line for DTC

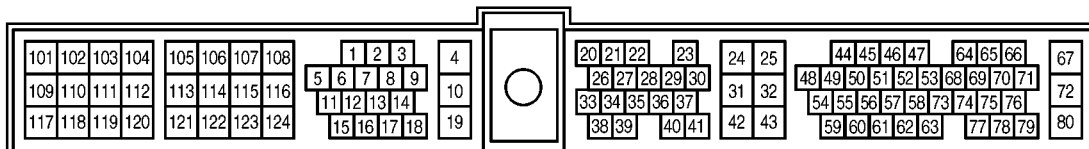

AEC977A

Diagnostic Procedure

NEEC0402

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.


2	CHECK OVERALL FUNCTION							
<p> With CONSULT-II</p> <p>1. Start engine.</p> <p>2. Check "PW/ST SIGNAL" in "DATA MONITOR" mode with CONSULT-II.</p>								
<table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th style="text-align: center;">MONITORING</th> <th style="text-align: center;">NO FAIL</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">PW/ST SIGNAL</td> <td style="text-align: center;">OFF</td> </tr> </tbody> </table>			DATA MONITOR		MONITORING	NO FAIL	PW/ST SIGNAL	OFF
DATA MONITOR								
MONITORING	NO FAIL							
PW/ST SIGNAL	OFF							
<table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Condition</th> <th style="text-align: center;">"PW/ST SIGNAL"</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Steering is neutral position</td> <td style="text-align: center;">OFF</td> </tr> <tr> <td style="text-align: center;">Steering is turned to full position</td> <td style="text-align: center;">ON</td> </tr> </tbody> </table>			Condition	"PW/ST SIGNAL"	Steering is neutral position	OFF	Steering is turned to full position	ON
Condition	"PW/ST SIGNAL"							
Steering is neutral position	OFF							
Steering is turned to full position	ON							
SEF184X								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 4.						

3	CHECK OVERALL FUNCTION							
<p> Without CONSULT-II</p> <p>1. Start engine.</p> <p>2. Check voltage between ECM terminal 39 and ground.</p>								
<table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Condition</th> <th style="text-align: center;">Voltage</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Steering is neutral position</td> <td style="text-align: center;">Approximately 5V</td> </tr> <tr> <td style="text-align: center;">Steering is turned to full position</td> <td style="text-align: center;">Approximately 0V</td> </tr> </tbody> </table>			Condition	Voltage	Steering is neutral position	Approximately 5V	Steering is turned to full position	Approximately 0V
Condition	Voltage							
Steering is neutral position	Approximately 5V							
Steering is turned to full position	Approximately 0V							
SEF739U								
OK or NG								
MTBL0145								
OK	▶	INSPECTION END						
NG	▶	GO TO 4.						

POWER STEERING OIL PRESSURE SWITCH

VG33E


Diagnostic Procedure (Cont'd)

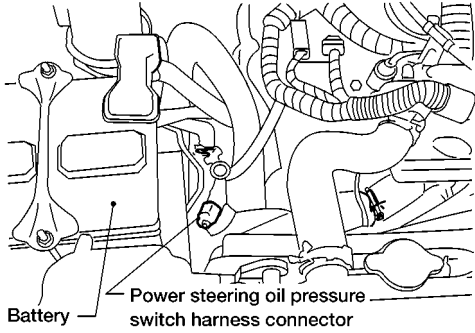4	CHECK POWER STEERING OIL PRESSURE SWITCH GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Disconnect power steering oil pressure switch harness connector.</p> <div style="text-align: center;">  </div> <p>3. Check harness continuity between switch terminal 2 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
AEC664A		
OK	▶	GO TO 5.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI
 MA
 EM
 LC
EC
 FE
 CL
 MT

5	CHECK POWER STEERING OIL PRESSURE SWITCH INPUT SIGNAL CIRCUIT	
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 39 and switch terminal 1. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

AT
 TF
 PD
 AX

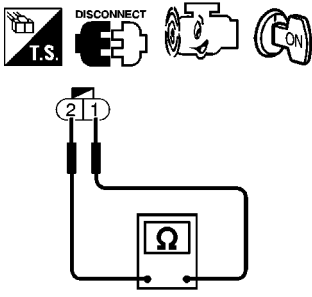6	CHECK POWER STEERING OIL PRESSURE SWITCH							
<p>1. Disconnect power steering oil pressure switch harness connector then start engine. 2. Check continuity between terminals 1 and 2.</p> <div style="text-align: center;">  </div> <div style="text-align: right;">SEF679W</div> <table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Conditions</th> <th style="width: 50%;">Continuity</th> </tr> </thead> <tbody> <tr> <td>Steering wheel is being fully turned</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td>Steering wheel is not being turned</td> <td style="text-align: center;">No</td> </tr> </tbody> </table> <p style="text-align: center;">OK or NG</p>			Conditions	Continuity	Steering wheel is being fully turned	Yes	Steering wheel is not being turned	No
Conditions	Continuity							
Steering wheel is being fully turned	Yes							
Steering wheel is not being turned	No							
MTBL0254								
OK	▶	GO TO 7.						
NG	▶	Replace power steering oil pressure switch.						

SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

POWER STEERING OIL PRESSURE SWITCH

VG33E


Diagnostic Procedure (Cont'd)

7	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.	
	▶ INSPECTION END

IACV-FICD SOLENOID VALVE

VG33E

Component Description

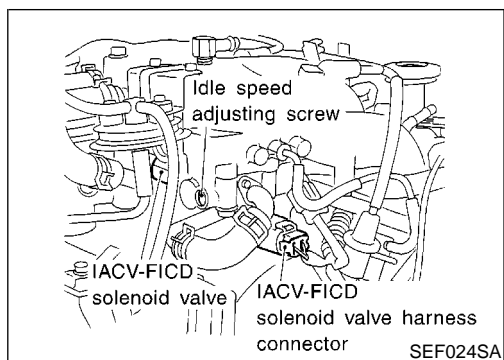

Component Description

When the air conditioner is on, the IACV-FICD solenoid valve ^{NEEC0403} supplies additional air to adjust to the increased load. For more information, refer to "Fast Idle Control Device (FICD)", **HA-89**.

ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and 32 (ECM ground). ^{NEEC0404}



TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
9	B/Y	Ambient air temperature switch	[Engine is running] ● Idle speed ● Ambient air temperature is above 25°C (77°F) ● Air conditioner is operating	0V
			[Engine is running] ● Idle speed ● Ambient air temperature is below 19°C (66°F) ● Air conditioner is operating	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] ● Idle speed ● Ambient air temperature is below 19°C (66°F) ● Air conditioner is not operating	Approximately 5V
12	P	Air conditioner relay	[Engine is running] ● Both A/C switch and blower fan switch are "ON"*	0 - 1V
			[Engine is running] ● A/C switch is "OFF"	BATTERY VOLTAGE (11 - 14V)
21	G/R	Air conditioner switch	[Engine is running] ● Both A/C switch and blower fan switch are "ON" (Compressor operates)*	Approximately 0V
			[Engine is running] ● Air conditioner switch is "OFF"	Approximately 5V

*: Any mode except "OFF", ambient air temperature is above 25°C (77°F).

Wiring Diagram

NEEC0405

EC-FICD-01

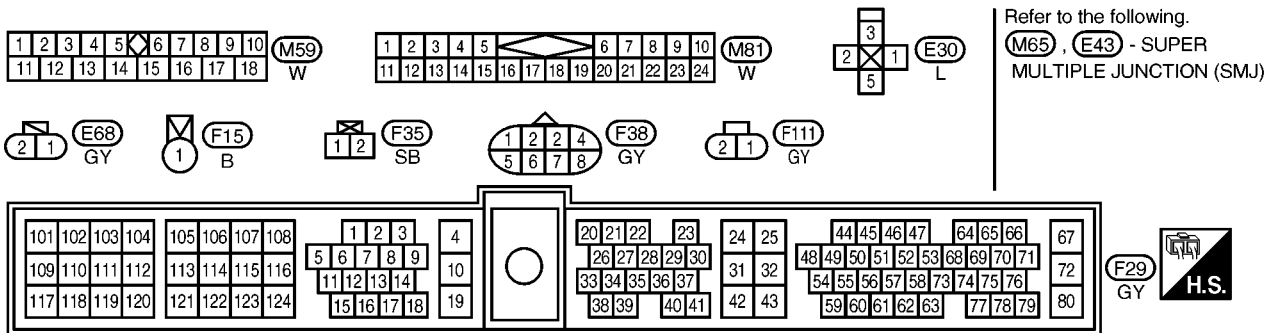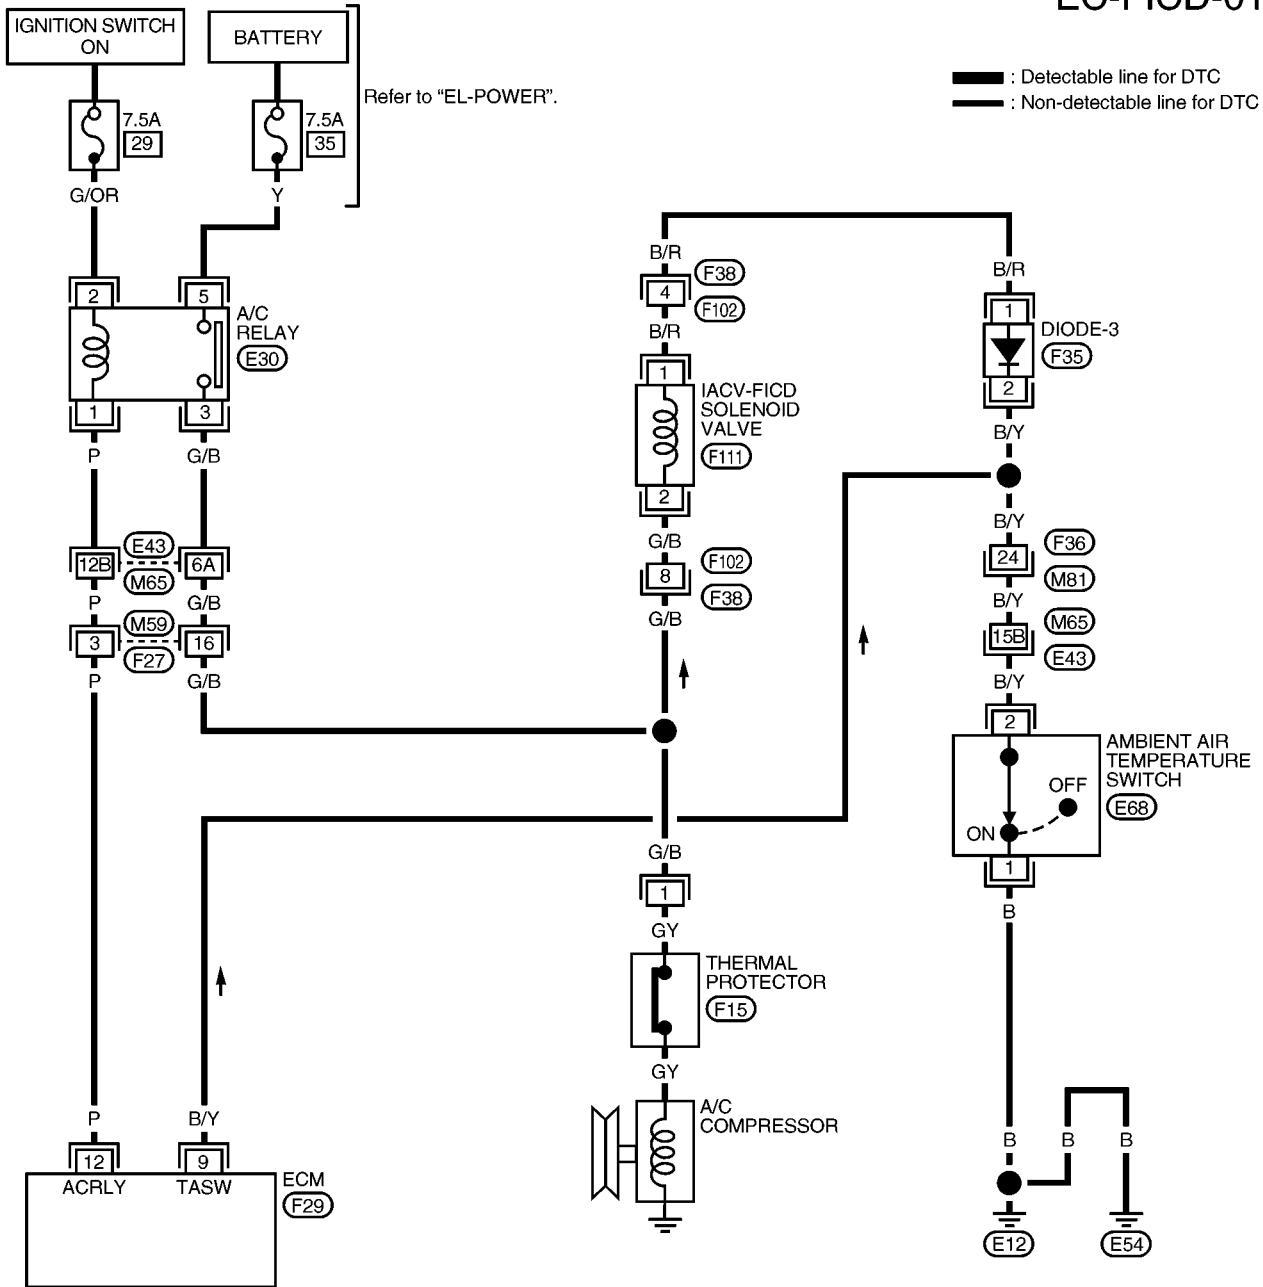

Diagnostic Procedure



NEEC0406

1	CHECK OVERALL FUNCTION	
	<p>1. Start engine and warm it up to normal operating temperature.</p> <p>2. Check idle speed. 750±50 rpm (in "N" position) If NG, adjust idle speed.</p> <p>3. Turn air conditioner switch and blower fan switch ON.</p> <p>4. Recheck idle speed.</p>	
	<p>850 rpm or more (in "P" or "N" position)</p> <p>OK or NG</p>	
OK	▶	INSPECTION END
NG	▶	GO TO 2.

SEF742U

2	CHECK AIR CONDITIONER FUNCTION	
	<p>Check if air conditioner compressor functions normally.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	GO TO 3.
NG	▶	Refer to ("Magnet Clutch"),("TROUBLE DIAGNOSES PROCEDURE for MAGNET CLUTCH"), HA-48 .

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

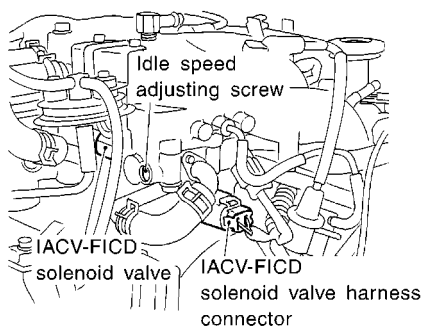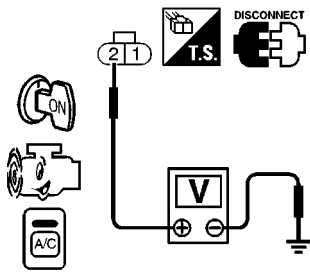3	CHECK IACV-FICD SOLENOID VALVE POWER SUPPLY CIRCUIT
<ol style="list-style-type: none"> 1. Turn air conditioner switch and blower fan switch "OFF". 2. Stop engine. 3. Disconnect IACV-FICD solenoid valve harness connector. 	
 <p style="text-align: center;">Idle speed adjusting screw IACV-FICD solenoid valve IACV-FICD solenoid valve harness connector</p>	
SEF024SA	
<ol style="list-style-type: none"> 4. Start engine, then turn air conditioner switch and blower fan switch "ON". 5. Check voltage between terminal 2 and ground with CONSULT-II or tester. 	
 <p style="text-align: center;">Voltage: Battery voltage</p>	
SEF680W	
OK or NG	
OK	▶ GO TO 5.
NG	▶ GO TO 4.

4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F38, F102 ● Harness for open or short between IACV-FICD solenoid valve and harness connector F27 	
▶ Repair harness or connectors.	

5	CHECK IACV-FICD SOLENOID VALVE GROUND CIRCUIT
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect ambient air temperature switch harness connector. 3. Check harness continuity between switch terminal 1 and body ground. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power. 	
OK or NG	
OK	▶ GO TO 6.
NG	▶ GO TO 7.

IACV-FICD SOLENOID VALVE



VG33E

Diagnostic Procedure (Cont'd)

6	CHECK IACV-FICD SOLENOID VALVE GROUND CIRCUIT WITH DIODE	
<p>1. Check harness continuity between switch terminal 2 and solenoid valve terminal 1.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">SEF160X</p> <p>Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	GO TO 7.

7	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F38, F102 ● Harness connectors F36, M81 ● Harness connectors M65, E43 ● Diode F35 ● Harness for open or short between ambient air temperature switch and body ground ● Harness for open or short between IACV-FICD solenoid valve and ambient air temperature switch 		
	▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

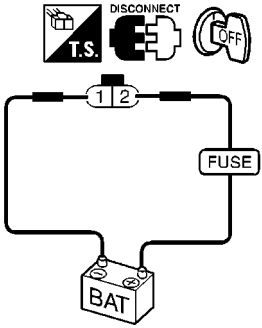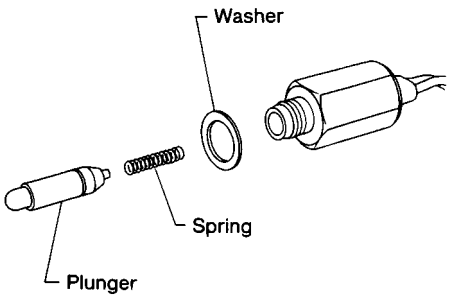8	CHECK IACV-FICD SOLENOID VALVE	
<p>Disconnect IACV-FICD solenoid valve harness connector.</p> <ul style="list-style-type: none"> ● Check for clicking sound when applying 12V direct current to terminals. 		
		
<ul style="list-style-type: none"> ● Check plunger for seizing or sticking. ● Check for broken spring. 		
		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Replace IACV-FICD solenoid valve.

SEF682W


SEF097K

9	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-717.		
▶		INSPECTION END



Wiring Diagram

NEEC0407

EC-MIL/DL-01

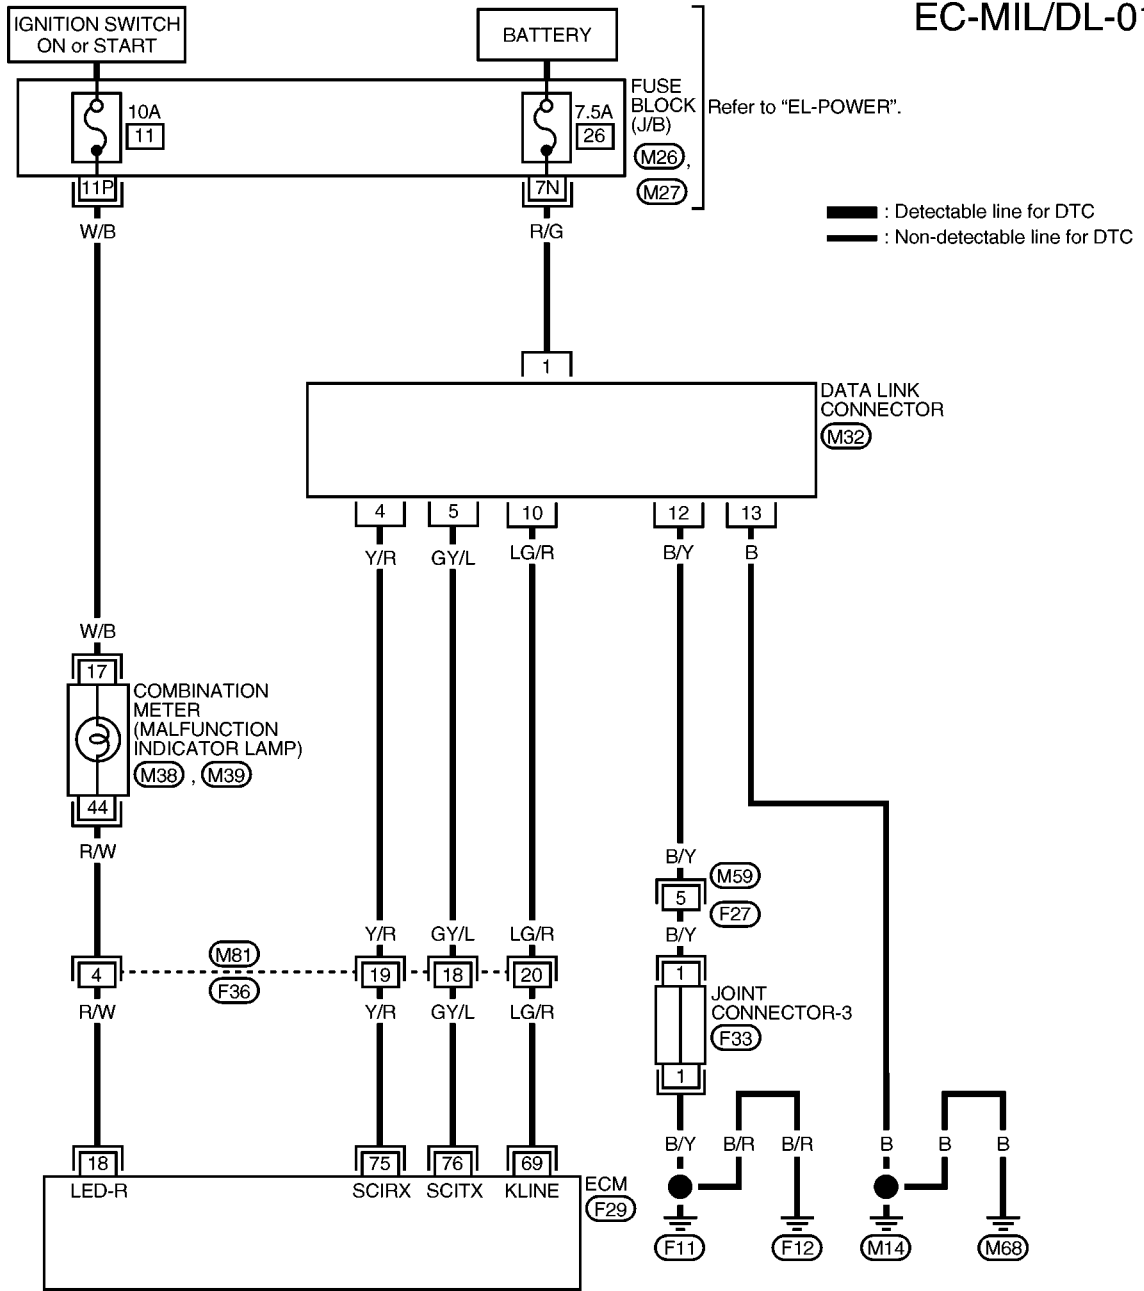

Refer to the following.
 F29 - ELECTRICAL UNITS



AEC979A

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Fuel Pressure Regulator

NEEC0408

Fuel pressure at idling kPa (kg/cm ² , psi)	
Vacuum hose is connected	Approximately 235 (2.4, 34)
Vacuum hose is disconnected	Approximately 294 (3.0, 43)

Idle Speed and Ignition Timing

NEEC0409

Base idle speed*1	No-load*4 (in "P" or N" position)	700±50 rpm
Target idle speed*2	No-load*4 (in "P" or N" position)	750±50 rpm
Air conditioner: ON	In "P" or N" position	850 rpm or more
Ignition timing*3	In "P" or N" position	15°±2° BTDC
Throttle position sensor idle position		0.15 - 0.85V

*1: Throttle position sensor harness connector disconnected or using CONSULT-II "WORK SUPPORT" mode

*2: Throttle position sensor harness connector connected

*3: Throttle position sensor harness connector disconnected

*4: Under the following conditions:

- Air conditioner switch: OFF
- Electric load: OFF (Lights, heater fan & rear window defogger)
- Steering wheel: Kept in straight-ahead position

Ignition Coil

NEEC0410

Primary voltage	12V
Primary resistance [at 20°C (68°F)]	Approximately 1.0Ω
Secondary resistance [at 20°C (68°F)]	Approximately 10 kΩ

Mass Air Flow Sensor

NEEC0411

Supply voltage	Battery voltage (11 - 14)V
Output voltage at idle	1.0 - 1.7*V
Mass air flow (Using CONSULT-II or GST)	3.3 - 4.8 g-m/sec at idle* 12.0 - 14.9 g-m/sec at 2,500 rpm*

*: Engine is warmed up to normal operating temperature and running under no-load.

Engine Coolant Temperature Sensor

NEEC0412

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

EGR Temperature Sensor (If So Equipped)

NEEC0413

EGR temperature °C (°F)	Voltage (V)	Resistance (MΩ)
0 (32)	4.56	0.62 - 1.05
50 (122)	2.25	0.065 - 0.094
100 (212)	0.59	0.011 - 0.015

Front Heated Oxygen Sensor Heater

NEEC0414

Resistance [at 25°C (77°F)]	2.3 - 4.3Ω
-----------------------------	------------

Fuel Pump

NEEC0415

Resistance [at 25°C (77°F)]	0.2 - 5.0Ω
-----------------------------	------------

GI

IACV-AAC Valve

NEEC0416

Resistance [at 20°C (68°F)]	Approximately 10.0Ω
-----------------------------	---------------------

MA

Injector

NEEC0417

Resistance [at 25°C (77°F)]	10 - 14Ω
-----------------------------	----------

EM

Resistor

NEEC0418

Resistance [at 25°C (77°F)]	Approximately 2.2 kΩ
-----------------------------	----------------------

LC

EC

Throttle Position Sensor

NEEC0419

Throttle valve conditions	Voltage (at normal operating temperature, engine off, ignition switch ON, throttle opener disengaged) (If so equipped)
Completely closed (a)	0.15 - 0.85V
Partially open	Between (a) and (b)
Completely open (b)	3.5 - 4.7V

FE

CL

MT

AT

Calculated Load Value

NEEC0420

	Calculated load value % (Using CONSULT or GST)
At idle	18.0 - 26.0
At 2,500 rpm	18.0 - 21.0

TF

PD

Intake Air Temperature Sensor

NEEC0421

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
80 (176)	0.27 - 0.38

AX

SU

Rear Heated Oxygen Sensor Heater

NEEC0422

Resistance [at 25°C (77°F)]	2.3 - 4.3Ω
-----------------------------	------------

BR

ST

Crankshaft Position Sensor (OBD)

NEEC0423

Resistance [at 20°C (68°F)]	512 - 632Ω
-----------------------------	------------

RS

Fuel Tank Temperature Sensor

NEEC0424

Temperature °C (°F)	Resistance kΩ
20 (68)	2.3 - 2.7
50 (122)	0.79 - 0.90

BT

HA

SC

EL

IDX

NOTES