

STR

SECTION STR
STARTING SYSTEM

PRECAUTION	3	M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : System Diagram	11
PRECAUTIONS	3	M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : System Description	11
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : Component Parts Location	11
Precaution for Power Generation Variable Voltage Control System	3	M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : Component Description	12
PREPARATION	4	QR25DE (M/T) MODELS	12
PREPARATION	4	COMPONENT DIAGNOSIS	13
Special Service Tool	4	B TERMINAL CIRCUIT	13
Commercial Service Tool	4	Description	13
BASIC INSPECTION	5	Diagnosis Procedure	13
DIAGNOSIS AND REPAIR WORKFLOW	5	S CONNECTOR CIRCUIT	14
Work Flow	5	QR25DE	14
FUNCTION DIAGNOSIS	8	QR25DE : Description	14
STARTING SYSTEM	8	QR25DE : Diagnosis Procedure	14
A/T	8	VQ40DE	15
A/T : System Diagram	8	VQ40DE : Description	15
A/T : System Description	8	VQ40DE : Diagnosis Procedure	15
A/T : Component Parts Location	8	STARTING SYSTEM	17
A/T : Component Description	9	Wiring Diagram - VQ40DE - With Clutch Interlock Cancel Switch	17
M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM	9	Wiring Diagram - VQ40DE - Without Clutch Interlock Cancel Switch	25
M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : System Diagram	9	Wiring Diagram - QR25DE	30
M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : System Description	9	SYMPTOM DIAGNOSIS	35
M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : Component Parts Location	10	STARTING SYSTEM	35
M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : Component Description	10	Symptom Table	35
M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM	10	ON-VEHICLE REPAIR	36
		Starter Motor	36
		Removal and Installation (QR25DE)	36

Removal and Installation (VQ40DE)	37	STARTER MOTOR	38
SERVICE DATA AND SPECIFICATIONS (SDS)	38	Starter	38

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000003220443

STR

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precaution for Power Generation Variable Voltage Control System

INFOID:0000000003220444

CAUTION:

For this model, the battery current sensor that is installed to the negative battery cable measures the charging/discharging current of the battery and performs various engine controls. If an electrical component is connected directly to the negative battery terminal, the current flowing through that component will not be measured by the battery current sensor. This condition may cause a malfunction of the engine control system and battery discharge may occur. Do not connect an electrical component or ground wire directly to the battery terminal.

PREPARATION


< PREPARATION >

PREPARATION

PREPARATION


Special Service Tool

INFOID:0000000003220445

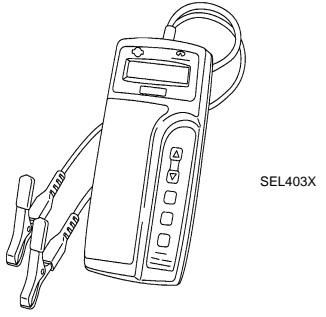Tool number (Kent Moore No.) Tool name	Description
— (J-48087) Battery Service Center	 <p>Tests Battery. For operating instructions, refer to Technical Service Bulletin and Battery Service Center User Guide.</p>
— (J-44373) Model 620 Starting/Charging system tester	 <p>Tests starting and charging systems. For operating instructions, refer to Technical Service Bulletin.</p>

Commercial Service Tool

INFOID:0000000003220446

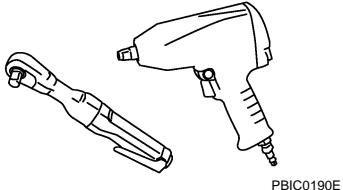Tool name	Description
Power tool	 <p>Loosening bolts and nuts</p>

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

BASIC INSPECTION


DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000003229957

STR

OVERALL SEQUENCE

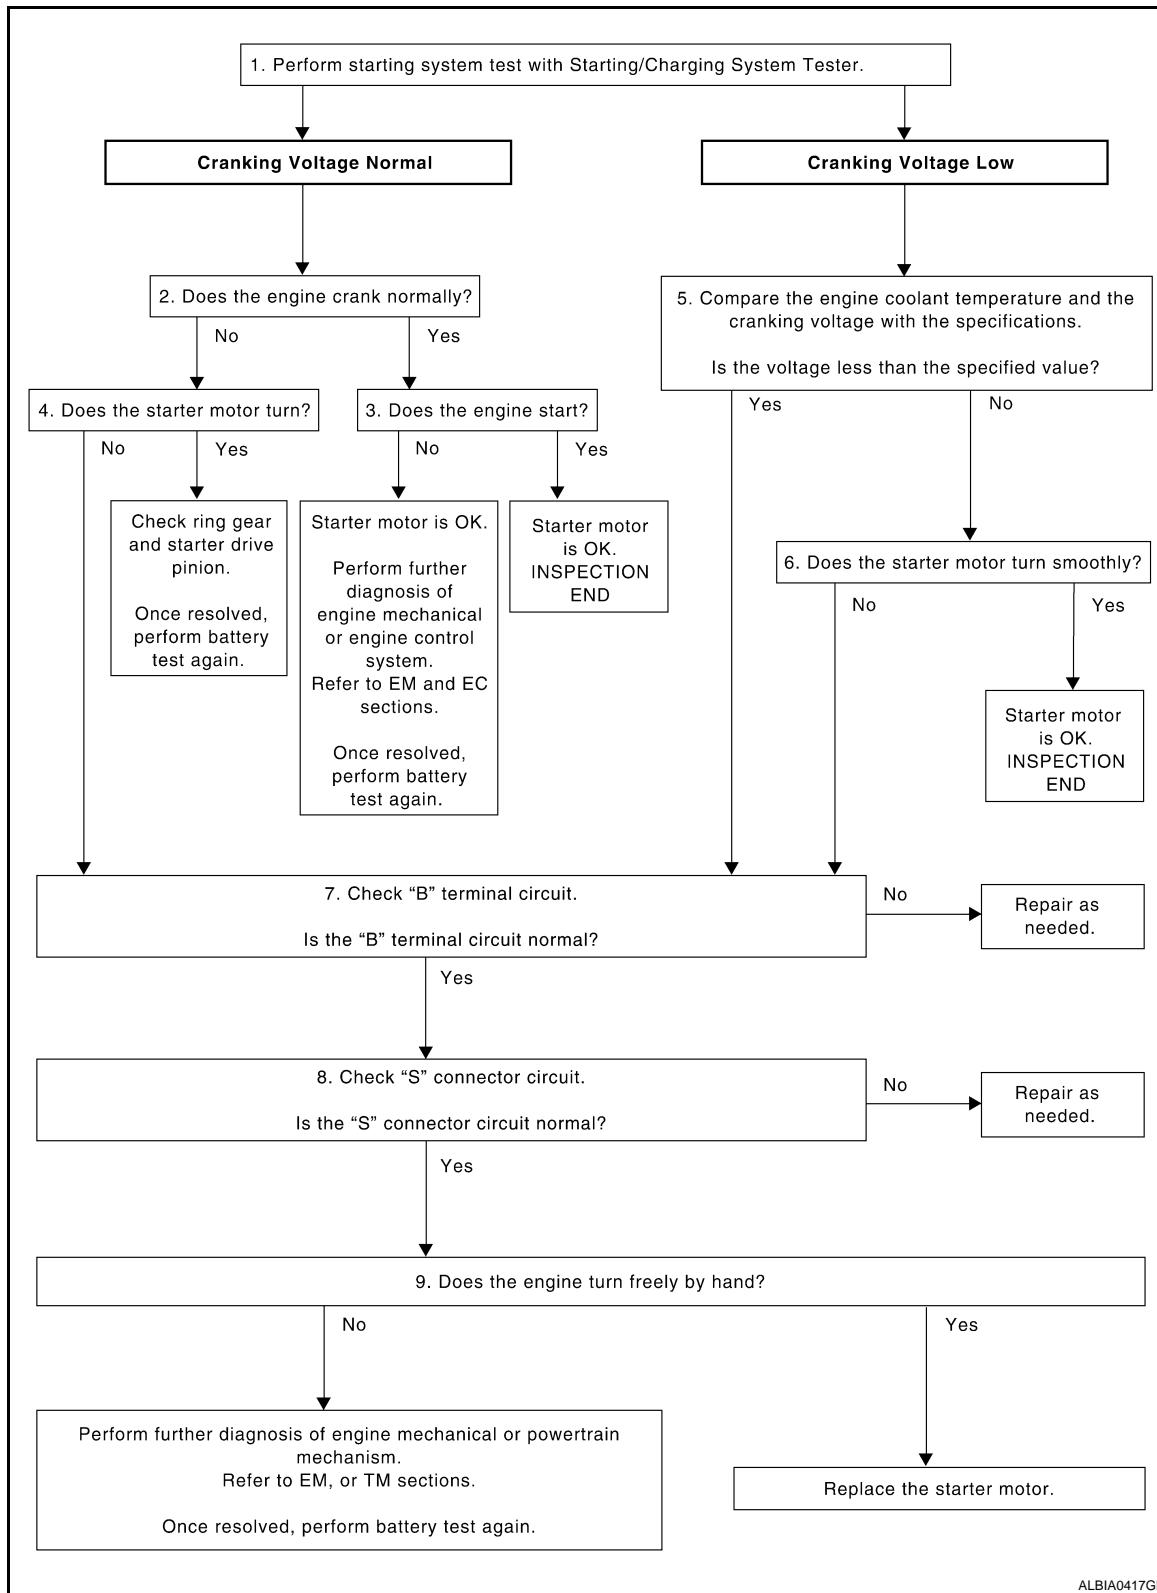

DETAILED FLOW

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

NOTE:

To ensure a complete and thorough diagnosis, the battery, starter motor and alternator test segments must be done as a set from start to finish.

1. DIAGNOSIS WITH STARTING/CHARGING SYSTEM TESTER

Perform the starting system test with Starting/Charging System Tester (J-44373). For details and operating instructions, refer to Technical Service Bulletin.

Test result

CRANKING VOLTAGE NORMAL>>GO TO 2

CRANKING VOLTAGE LOW>>GO TO 5

CHARGE BATTERY>>Perform the slow battery charging procedure. (Initial rate of charge is 10A for 12 hours.) Perform battery test again. Refer to Technical Service Bulletin.

REPLACE BATTERY>>Before replacing battery, clean the battery cable clamps and battery posts. Perform battery test again. Refer to Technical Service Bulletin. If second test result is "REPLACE BATTERY", then do so. Perform battery test again to confirm repair.

2. CRANKING CHECK

Check that the starter motor operates properly.

Does the engine crank normally?

YES >> GO TO 3

NO >> GO TO 4

3. ENGINE START CHECK

Check that the engine starts.

Does the engine start?

YES >> Starter motor is OK. Inspection End.

NO >> Perform further diagnosis of engine mechanical or engine control system. Refer to EM and EC sections. Once resolved, perform battery test again.

4. STARTER MOTOR ACTIVATION

Check that the starter motor operates.

Does the starter motor turn?

YES >> Check ring gear and starter motor drive pinion. Once resolved, perform battery test again.

NO >> GO TO 7

5. COMPARISON BETWEEN ENGINE COOLANT AND CRANKING VOLTAGE

Compare the engine coolant temperature and verify the cranking voltage is within specification.

Minimum Specification of Cranking Voltage Referencing Coolant Temperature

Engine coolant temperature [°C (°F)]	Voltage [V]
-30 to -20 (-22 to -4)	8.6
-19 to -10 (-2 to 14)	9.1
-9 to 0 (16 to 32)	9.5
More than 1 (More than 34)	9.9

Is the voltage less than the specified value?

YES >> GO TO 7

NO >> GO TO 6

6. STARTER OPERATION

Check the starter operation.

Does the starter motor turn smoothly?

YES >> Starter motor is OK. Inspection End.

NO >> GO TO 7

7. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [STR-13, "Diagnosis Procedure"](#).

Is "B" terminal circuit normal?

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

YES >> GO TO 8

NO >> Repair as needed.

A

8."S" CONNECTOR CIRCUIT INSPECTION

Check "S" connector circuit. Refer to [STR-15, "VQ40DE : Diagnosis Procedure"](#).

STR

Is "S" connector circuit normal?

C

YES >> GO TO 9

NO >> Repair as needed.

D

9.ENGINE ROTATION STATUS

Check that the engine can be rotated by hand.

F

Does the engine turn freely by hand?

G

YES >> Replace starter motor.

H

NO >> Perform further diagnosis of engine mechanical or powertrain mechanism. Refer to EM or TM sections. Once resolved, perform battery test again. Refer to Technical Service Bulletin.

I

J

K

L

M

N

O

P

STARTING SYSTEM

< FUNCTION DIAGNOSIS >


FUNCTION DIAGNOSIS

STARTING SYSTEM

A/T

A/T : System Diagram

INFOID:0000000003229958

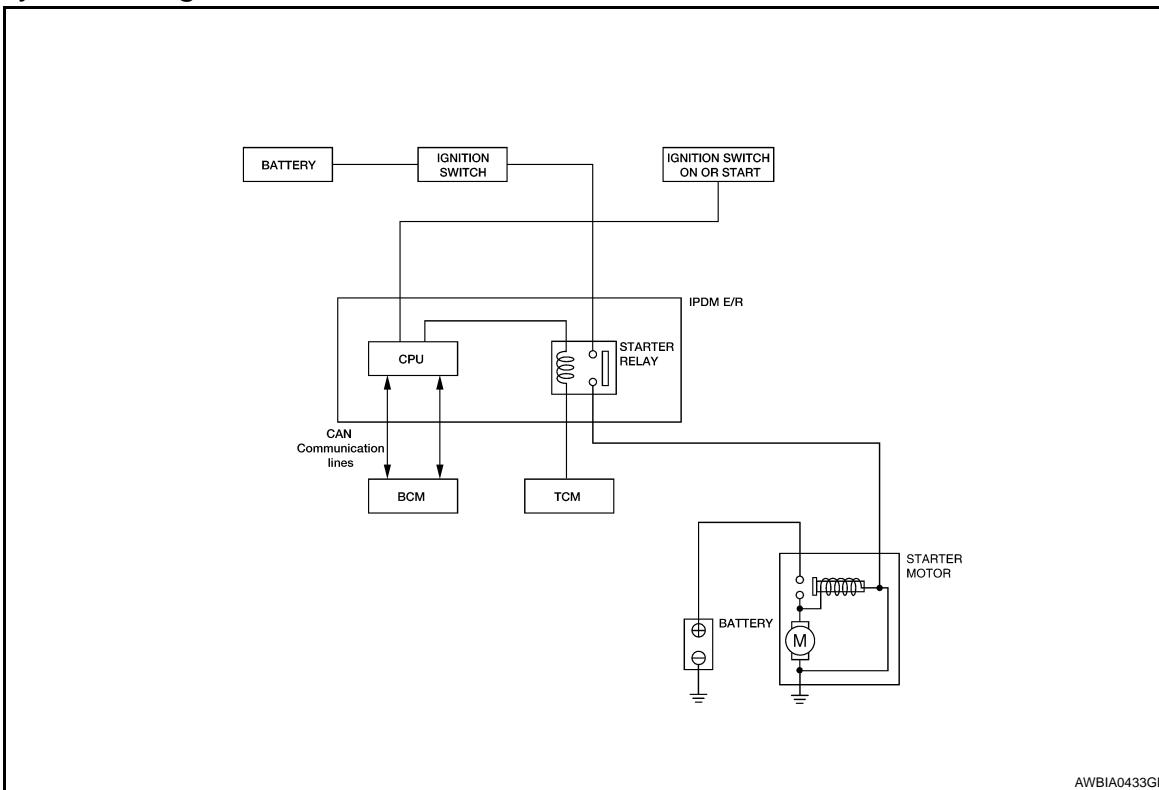


A/T : System Description

INFOID:0000000003229959

The starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

A/T : Component Parts Location

INFOID:0000000003229960

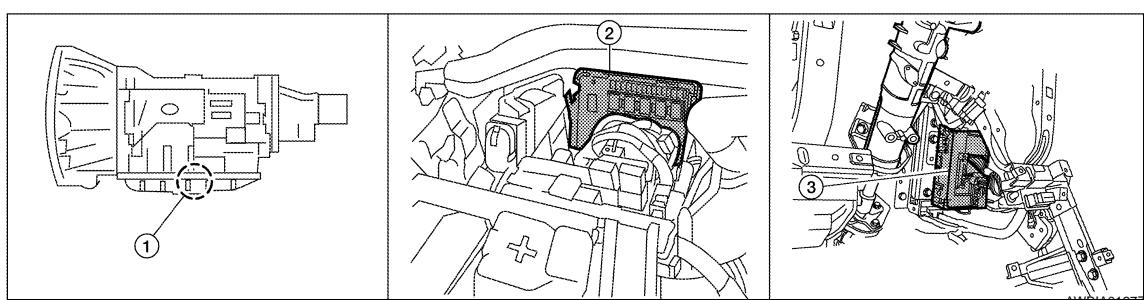

1. A/T assembly F9 (with built in TCM F502)
2. IPDM E/R E119, E120, E122, E124
3. BCM M18 (view with lower instrument panel LH removed)

STARTING SYSTEM

< FUNCTION DIAGNOSIS >

A/T : Component Description

INFOID:0000000003229961

A

Component part	Description
TCM	TCM supplies power to the starter relay inside the IPDM E/R when the selector lever is shifted to the P or N position.
BCM	BCM sends a starter request signal to the CPU of the IPDM E/R over the CAN communication lines.
IPDM E/R	CPU inside IPDM E/R operates the starter relay at the request of the BCM over the CAN communication lines.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.

STR

C

D

E

F

G

H

I

J

K

L

M

N


O

P

M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM

M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : System Diagram

INFOID:0000000003229962

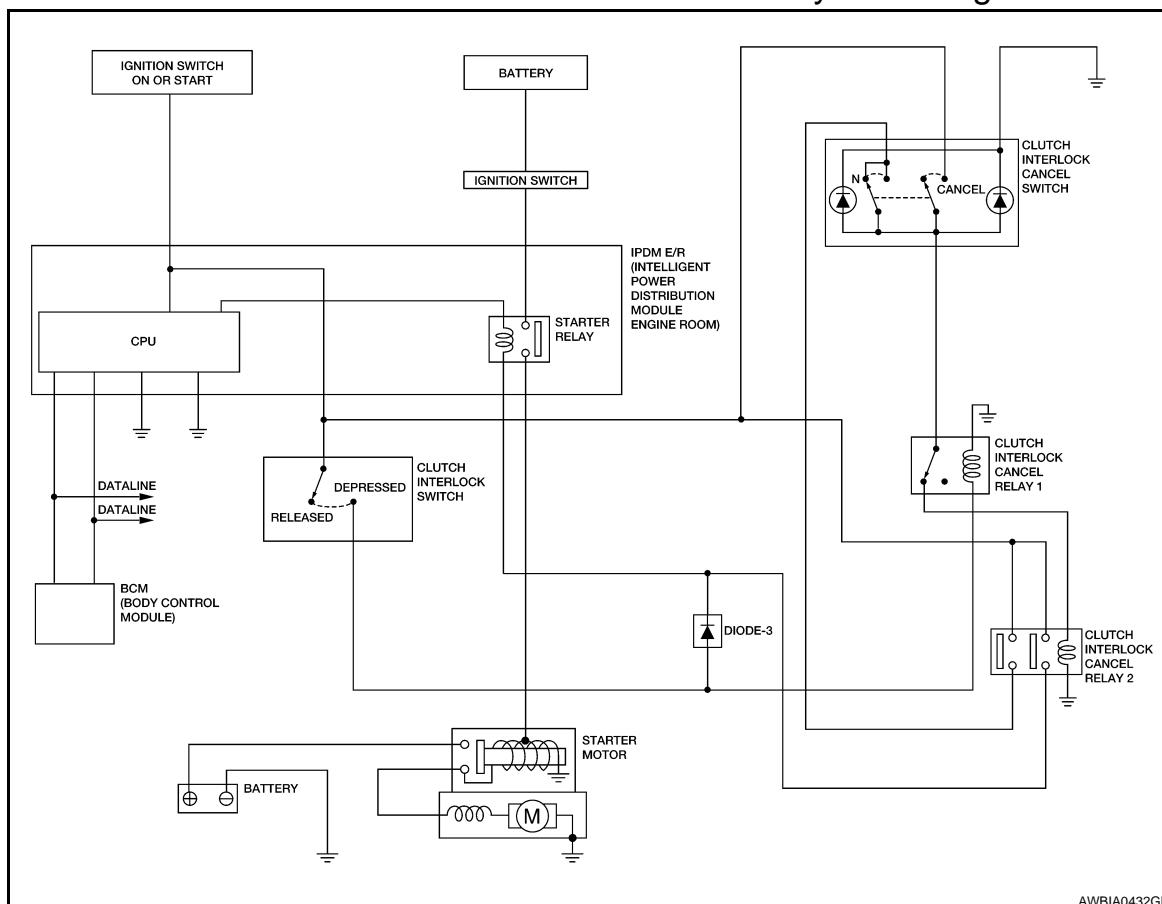

M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : System Description

INFOID:0000000003229963


The clutch interlock (clutch start) switch allows for starting the engine without depressing the clutch pedal by bypassing the clutch interlock switch. The clutch interlock system is canceled once the ignition switch is turned OFF. Once the clutch interlock system is activated, the starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

STARTING SYSTEM

< FUNCTION DIAGNOSIS >

M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : Component Parts Location

INFOID:0000000003229964

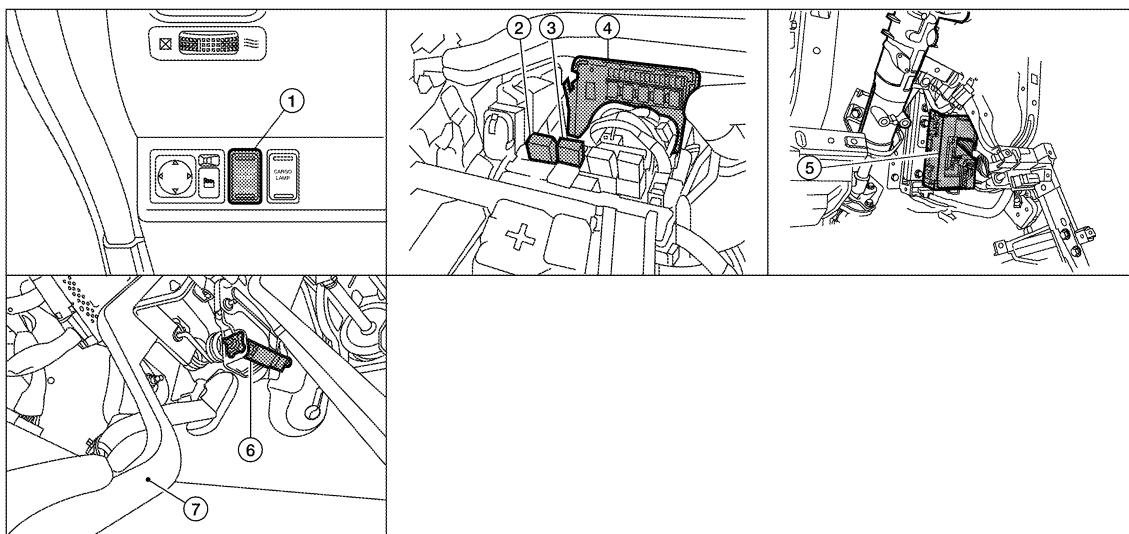

AWBIA0435ZZ

1. Clutch interlock cancel switch M163
2. Clutch interlock cancel relay 2 E166
3. Clutch interlock cancel relay 1 E171
4. IPDM E/R E119, E120, E122, E124
5. BCM M18 (view with lower instrument panel LH removed).
6. Clutch interlock switch E163
7. Clutch pedal

M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : Component Description

INFOID:0000000003229965

Component part	Description
Clutch interlock switch	Clutch interlock switch supplies power to the coil side of the starter relay when the clutch pedal is depressed to crank the engine.
Clutch interlock cancel switch	Clutch interlock cancel switch bypasses the clutch interlock switch and supplies power to the coil side of the starter relay to crank the engine without the clutch pedal being depressed.
BCM	BCM sends a starter request signal to the CPU of the IPDM E/R over the CAN communication lines.
IPDM E/R	CPU inside IPDM E/R operates the starter relay at the request of the BCM over the CAN communication lines.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.


M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM

STARTING SYSTEM

< FUNCTION DIAGNOSIS >

M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : System Diagram

INFOID:000000003229966

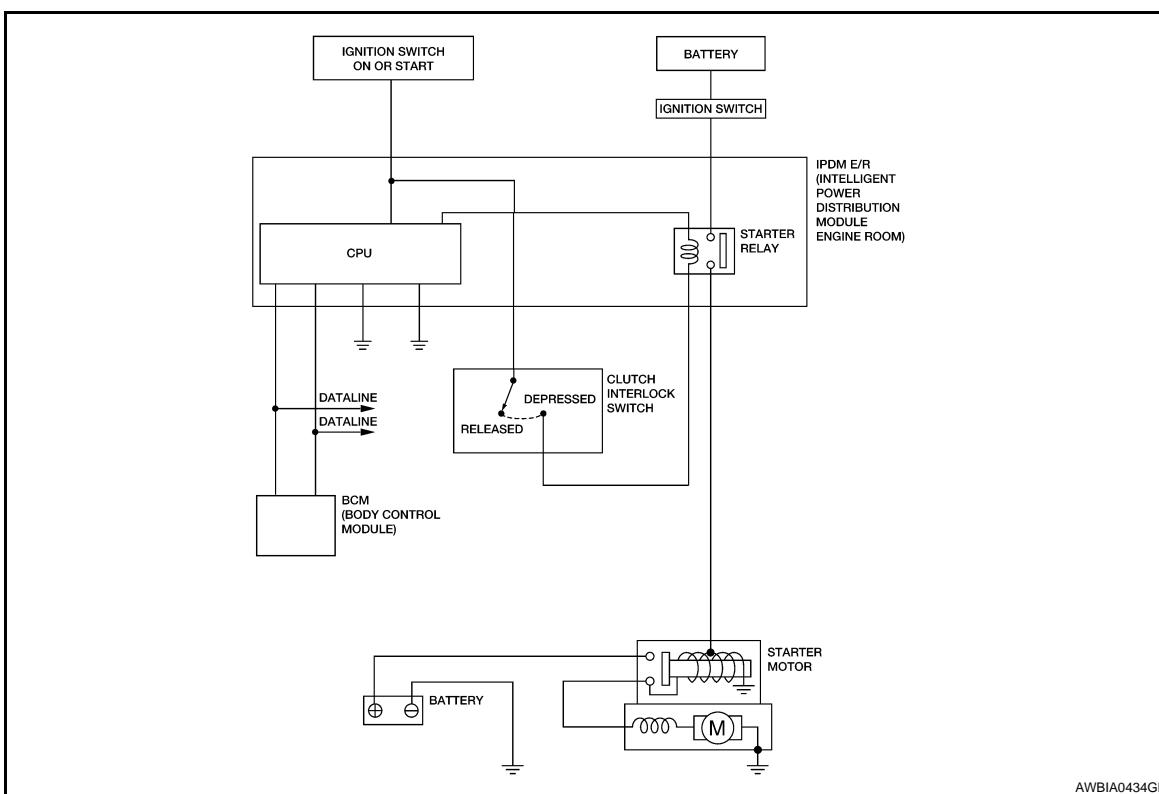


M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : System Description

INFOID:000000003229967

The starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : Component Parts Location

INFOID:000000003229968

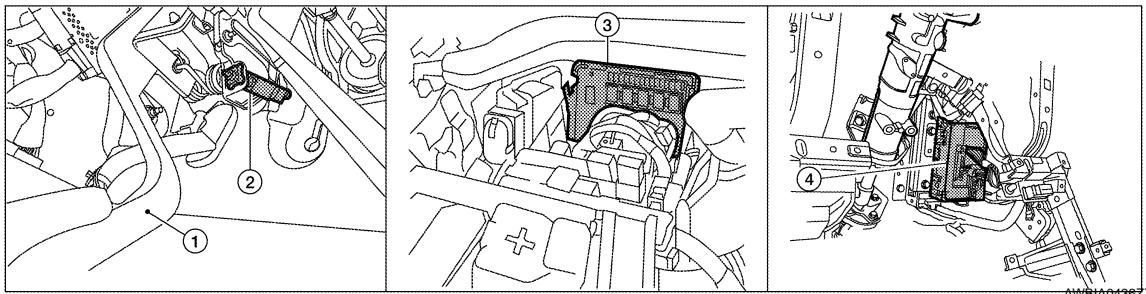

1. Clutch pedal
2. Clutch interlock switch E163
3. IPDM E/R E119, E120, E122, E124
4. BCM M18 (view with lower instrument panel LH removed)

STARTING SYSTEM

< FUNCTION DIAGNOSIS >

M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : Component Description

INFOID:000000003229969

Component part	Description
Clutch interlock switch	Clutch interlock switch supplies power to the coil side of the starter relay when the clutch pedal is depressed to crank the engine.
BCM	BCM sends a starter request signal to the CPU of the IPDM E/R over the CAN communication lines.
IPDM E/R	CPU inside IPDM E/R operates the starter relay at the request of the BCM over the CAN communication lines.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.

QR25DE (M/T) MODELS

B TERMINAL CIRCUIT

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

B TERMINAL CIRCUIT

Description

INFOID:000000003229970

STR

Terminal "2" (B) is constantly supplied with battery power.

Diagnosis Procedure

INFOID:000000003229971

C

CAUTION:

Perform diagnosis under the condition that the engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is depleted.


1.CHECK TERMINAL 2 POWER SUPPLY VOLTAGE

1. Turn ignition switch OFF.
2. Make sure that starter motor connector E210 terminal 2 connection is clean and tight.
3. Check voltage between starter motor connector E210 terminal 2 and ground.

(+)		(-)	Voltage
Connector	Terminal		
E210	2	Ground	Battery voltage

Is there battery voltage present?

- YES >> GO TO 2
 NO >> Check harness between battery and starter motor for open circuit.

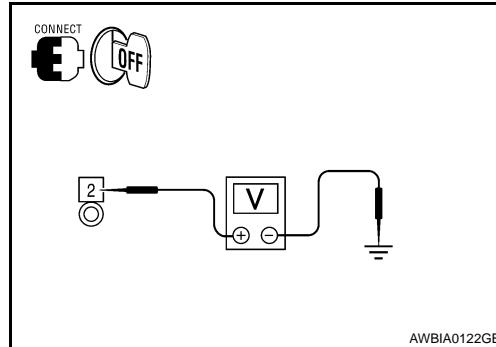


2.CHECK BATTERY CABLE (VOLTAGE DROP TEST)

1. Shift the transmission into park or neutral.
2. Check voltage between battery positive terminal and starter motor connector E210 terminal 2 while cranking the engine.

(+)		(-)	Condition	Voltage
Connector	Terminal			
E210	2	Battery (+) terminal	While cranking the engine	Less than 0.2V

Is the voltage drop less than 0.2V?

- YES >> GO TO 3
 NO >> Check harness between the battery and the starter motor for high resistance.

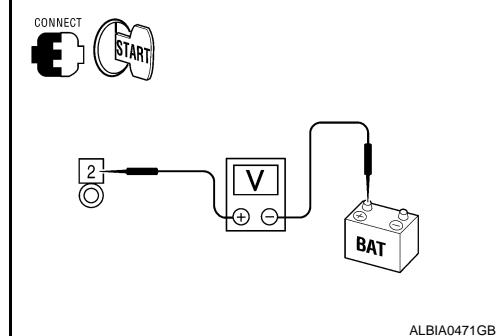


3.CHECK GROUND CIRCUIT STATUS (VOLTAGE DROP TEST)

Check voltage between starter motor case and battery negative terminal while cranking the engine.

(+)	(-)	Condition	Voltage
Starter motor case	Battery (-) terminal	While cranking the engine	Less than 0.2V

Is the voltage drop less than 0.2V?

- YES >> Terminal 2 circuit is OK. Further inspection necessary. Refer to [STR-5, "Work Flow"](#).
 NO >> Check the starter motor case to engine mounting for high resistance.

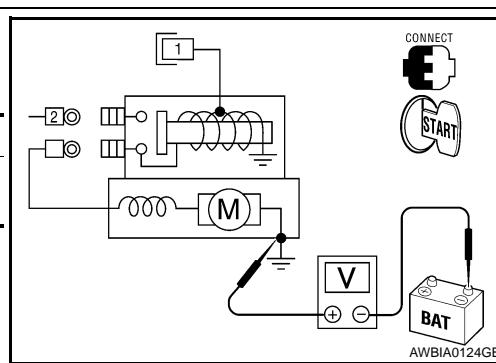

S CONNECTOR CIRCUIT

< COMPONENT DIAGNOSIS >

S CONNECTOR CIRCUIT

QR25DE

QR25DE : Description

INFOID:00000000328899

Terminal "1" (S) is the power supply for the starter motor magnetic switch. Terminal 1 is supplied with power when the ignition switch is turned to the START position while the selector lever is in the P or N position.

QR25DE : Diagnosis Procedure

INFOID:00000000328890

CAUTION:


Perform diagnosis under the condition that engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

1.CHECK STARTER MOTOR MAGNETIC SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect starter motor connector E207.
3. Shift transmission into park or neutral.
4. Check voltage between starter motor harness connector E207 terminal 1 and ground with the ignition in START.

Connector	(+)	(-)	Condition	Voltage
Connector	Terminal	Terminal		
E207	1	Ground	While cranking the engine	Battery voltage

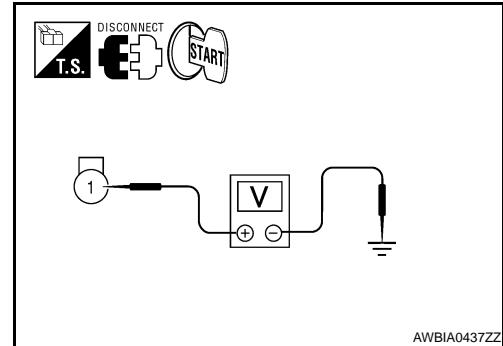

Is battery voltage present?

- YES >> Magnetic switch circuit is OK. Further inspection necessary. Refer to [STR-5, "Work Flow"](#).
NO >> GO TO 2

2.CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Check the IPDM E/R harness connector E120 and starter motor harness connector E207 for damage, bent pins and loose connections.


Is the inspection result normal?

- YES >> GO TO 3
NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect IPDM E/R connector E120 and starter motor connector E207.
2. Check continuity between starter motor harness connector E207 (A) terminal 1 and IPDM E/R harness connector E120 (B) terminal 19.

Connector	A	Connector	B	Continuity
Connector	Terminal	Connector	Terminal	
E207	1	E120	19	Yes

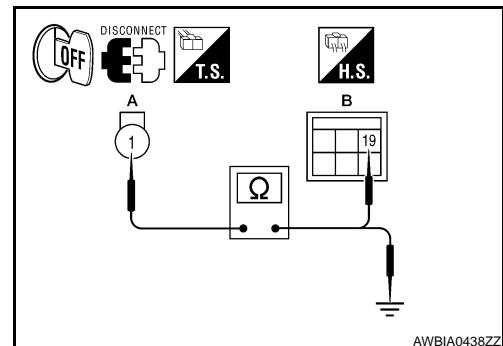

3. Check continuity between starter motor harness connector E207 (A) terminal 1 and ground.

Connector	A	—	Continuity
Connector	Terminal	—	
E207	1	Ground	No

Are the continuity test results as specified?

S CONNECTOR CIRCUIT

< COMPONENT DIAGNOSIS >

YES >> Further inspection necessary. Refer to [STR-5, "Work Flow".](#)

NO >> Repair the harness.

VQ40DE

VQ40DE : Description

INFOID:000000003229972

STR

Terminal "1" (S) is the power supply for the starter motor magnetic switch. Terminal 1 is supplied with power when the ignition switch is turned to the START position while the selector lever is in the P or N position.

VQ40DE : Diagnosis Procedure

INFOID:000000003229973

C

D

E

F

G

H

I

J

K

L

M

N

O

P

CAUTION:


Perform diagnosis under the condition that engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

1.CHECK STARTER MOTOR MAGNETIC SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect starter motor connector E207.
3. Shift transmission into park or neutral.
4. Check voltage between starter motor harness connector E207 terminal 1 and ground with the ignition in START.

(+)	(-)	Condition	Voltage
Connector	Terminal		
E207	1	Ground	While cranking the engine
			Battery voltage

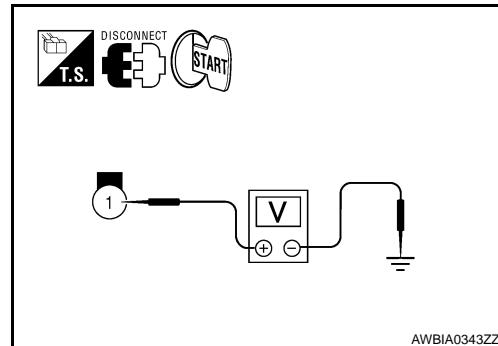

Is battery voltage present?

YES >> Magnetic switch circuit is OK. Further inspection necessary. Refer to [STR-5, "Work Flow".](#)
NO >> GO TO 2

2.CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Check the IPDM E/R harness connector E120 and starter motor harness connector E207 for damage, bent pins and loose connections.


Is the inspection result normal?

YES >> GO TO 3
NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect IPDM E/R connector E120 and starter motor connector E207.
2. Check continuity between starter motor harness connector E207 (A) terminal 1 and IPDM E/R harness connector E120 (B) terminal 19.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E207	1	E120	19	Yes

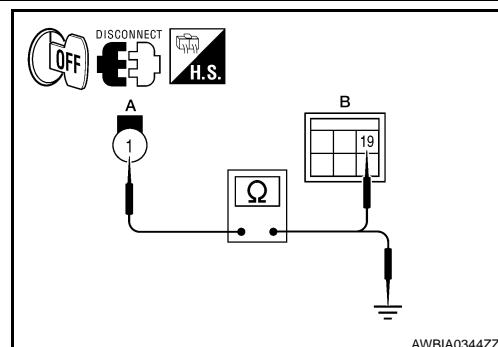

3. Check continuity between starter motor harness connector E207 (A) terminal 1 and ground.

A		—	Continuity
Connector	Terminal		
E207	1	—	No

Are the continuity test results as specified?

S CONNECTOR CIRCUIT

< COMPONENT DIAGNOSIS >

YES >> Further inspection necessary. Refer to [STR-5, "Work Flow".](#)

NO >> Repair the harness.


STARTING SYSTEM

< COMPONENT DIAGNOSIS >

STARTING SYSTEM


Wiring Diagram - VQ40DE - With Clutch Interlock Cancel Switch

INFOID:0000000003229974

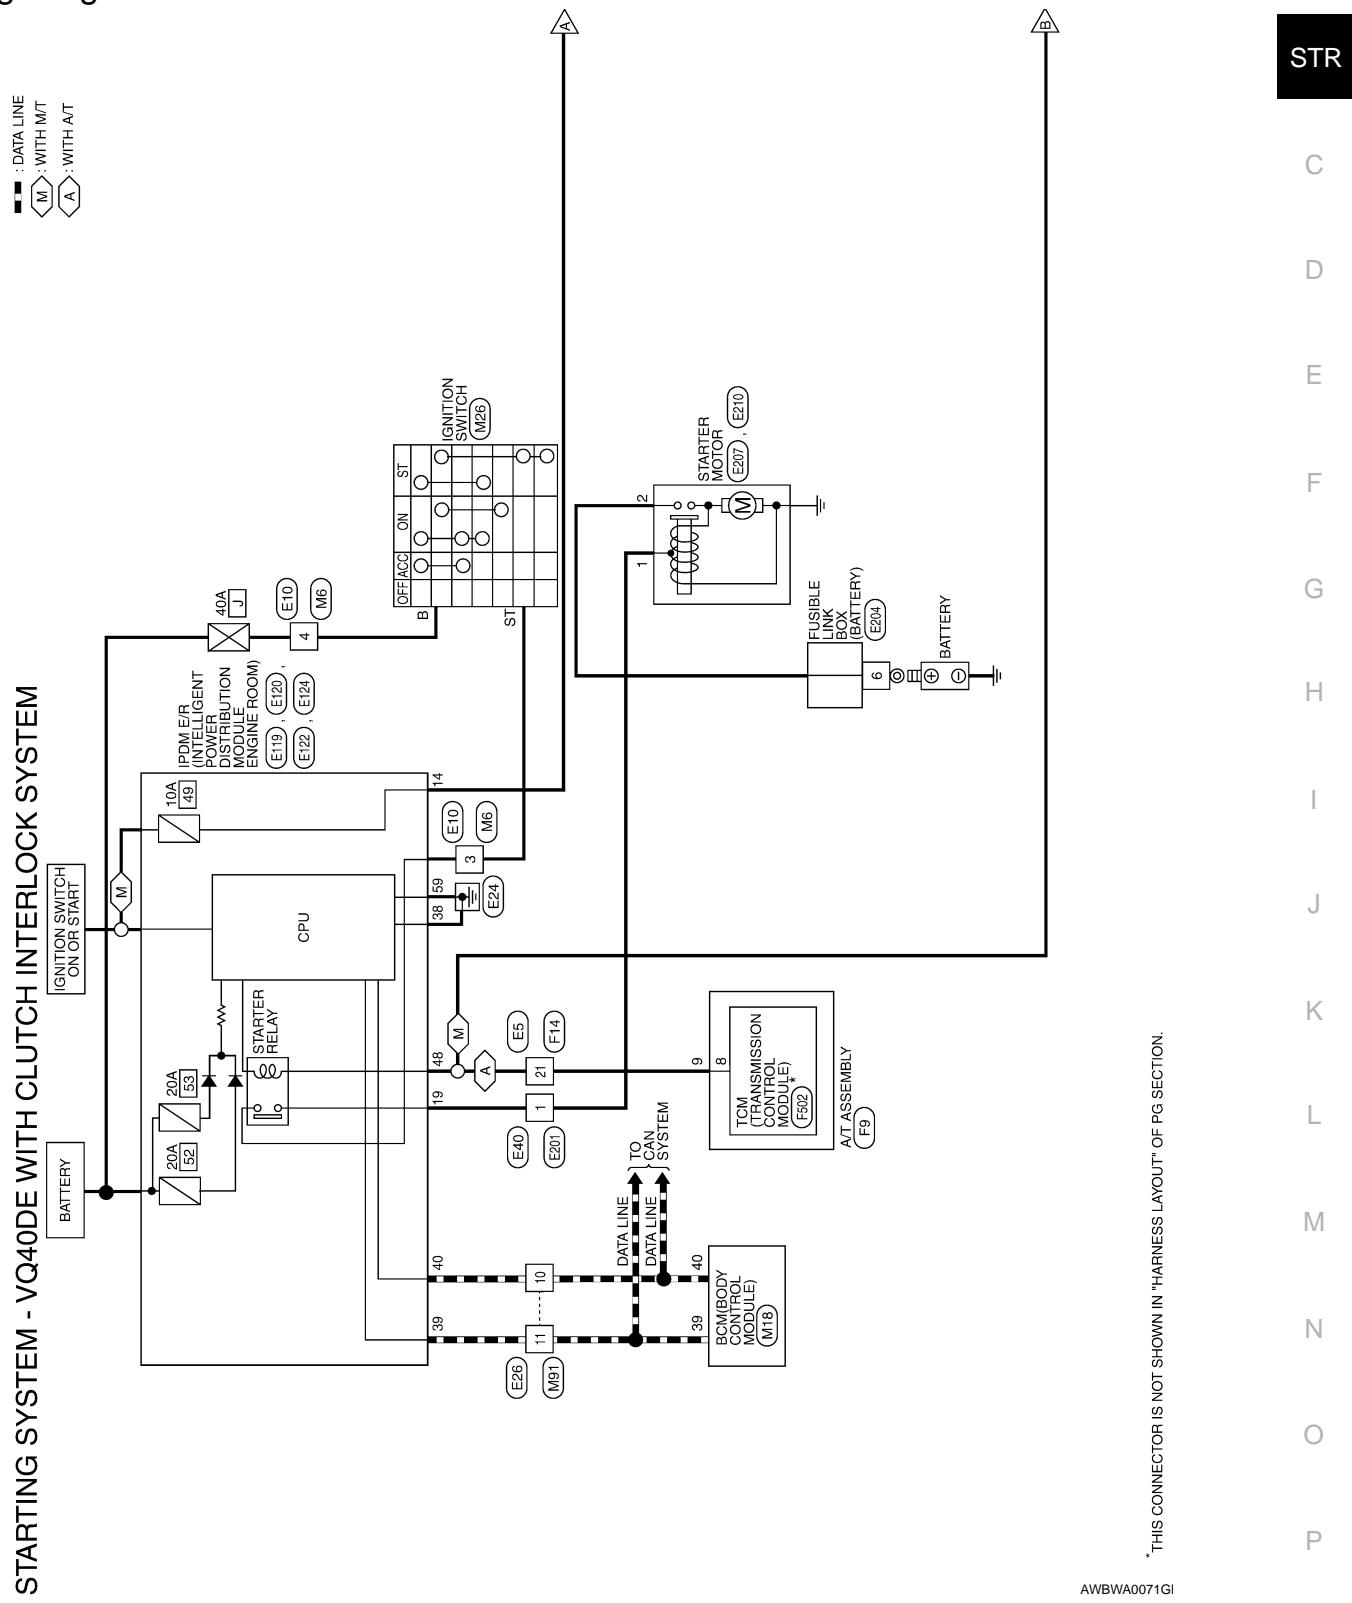

STARTING SYSTEM

< COMPONENT DIAGNOSIS >

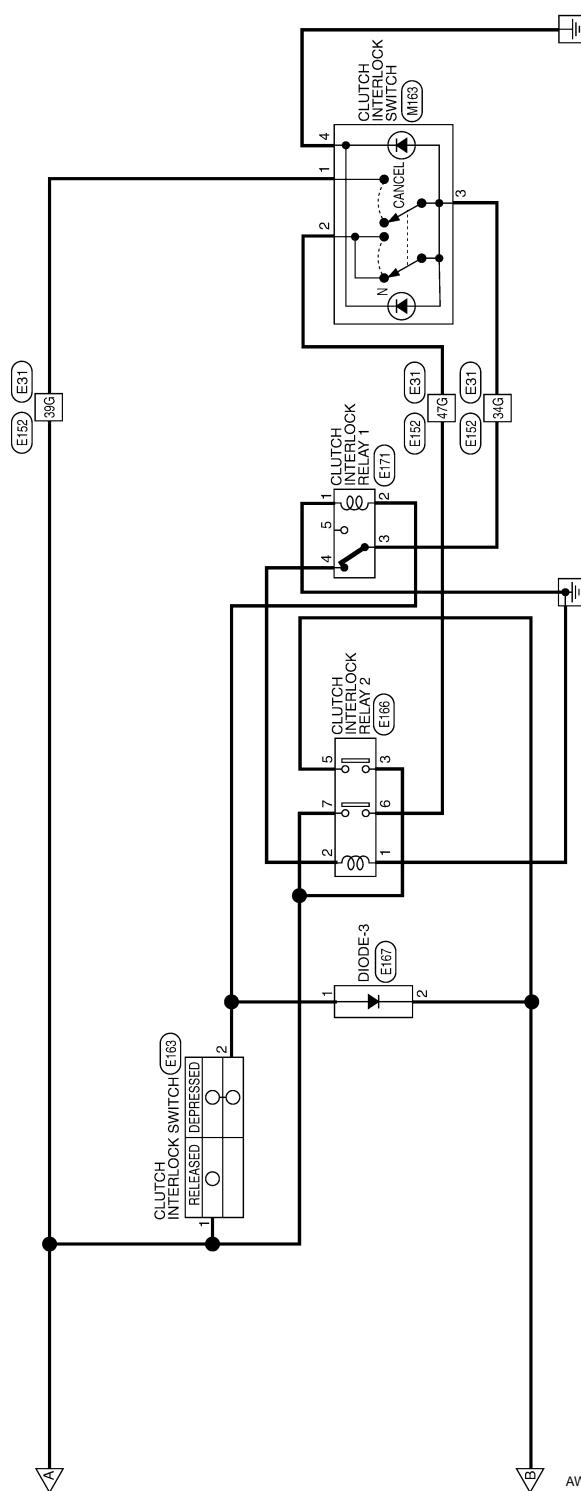

STARTING SYSTEM

< COMPONENT DIAGNOSIS >

STARTING SYSTEM CONNECTORS - VQ40DE WITH CLUTCH INTERLOCK CANCEL SYSTEM

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	GR	-
4	G	-

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40


Terminal No.	Color of Wire	Signal Name
39	L	CAN-H
40	P	CAN-L

Terminal No.	Color of Wire	Signal Name
B	G	-
ST	GR	-


Terminal No.	Color of Wire	Signal Name
B	G	-
ST	GR	-

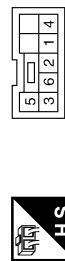

Terminal No.	Color of Wire	Signal Name
1	W/G	-
2	Y	-
3	O	-
4	B	-

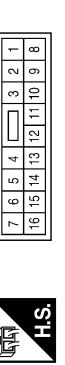


Terminal No.	Color of Wire	Signal Name
10	P	-
11	L	-

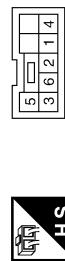

Terminal No.	Color of Wire	Signal Name
56	GR	29 1G
57	GR	30 1G
58	GR	31 1G
59	GR	32 1G
60	GR	33 1G
61	GR	34 1G
62	GR	35 1G
63	GR	36 1G
64	GR	37 1G
65	GR	38 1G
66	GR	39 1G
67	GR	40 1G
68	GR	41 1G
69	GR	42 1G
70	GR	43 1G
71	GR	44 1G
72	GR	45 1G
73	GR	46 1G
74	GR	47 1G
75	GR	48 1G
76	GR	49 1G
77	GR	50 1G
78	GR	51 1G
79	GR	52 1G
80	GR	53 1G
81	GR	54 1G
82	GR	55 1G
83	GR	56 1G
84	GR	57 1G
85	GR	58 1G
86	GR	59 1G
87	GR	60 1G
88	GR	61 1G
89	GR	62 1G
90	GR	63 1G
91	GR	64 1G
92	GR	65 1G
93	GR	66 1G
94	GR	67 1G
95	GR	68 1G
96	GR	69 1G
97	GR	70 1G
98	GR	71 1G
99	GR	72 1G
100	GR	73 1G
101	GR	74 1G
102	GR	75 1G
103	GR	76 1G
104	GR	77 1G
105	GR	78 1G
106	GR	79 1G

Terminal No.	Color of Wire	Signal Name
10	P	-
11	L	-

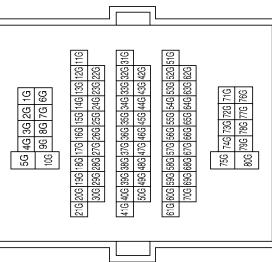

Terminal No.	Color of Wire	Signal Name
34G	O	-
39G	W/G	-
47G	Y	-


AWBIA0311GB

A
STR
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z

STARTING SYSTEM

< COMPONENT DIAGNOSIS >

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE

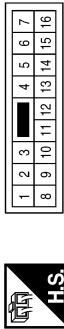

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	GR	—
5	G	—

Terminal No.	Color of Wire	Signal Name
10	P	—
11	L	—


Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
19	W	IGN SW (IG1)
21	GR	A/TECU IGN SUPPLY

Terminal No.	Color of Wire	Signal Name
10	P	—
11	L	—

Connector No.	E40
Connector Name	WIRE TO WIRE
Connector Color	GRAY

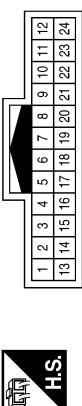

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

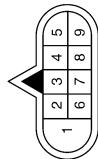

Terminal No.	Color of Wire	Signal Name
12	W/G	IGN SW (IG1)
14	W/G	A/TECU IGN SUPPLY


Terminal No.	Color of Wire	Signal Name
19	W	STARTER MTR
21	GR	IGN SW (ST)

AWBIA0312GB

STARTING SYSTEM

< COMPONENT DIAGNOSIS >

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

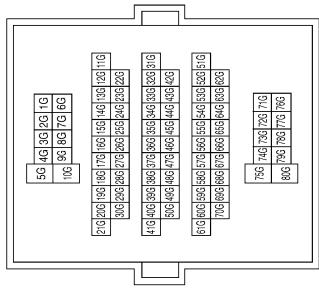



Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	POWER GND
38	B	SIGNAL GND
39	L	CAN-H
40	P	CAN-L
48	R	INHIBIT

Terminal No.	Color of Wire	Signal Name
38	B	SIGNAL GND
39	L	CAN-H
40	P	CAN-L
48	R	INHIBIT



Terminal No.	Color of Wire	Signal Name
34G	O	-
39G	W/G	-
47G	Y	-

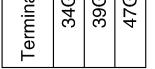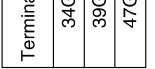

Terminal No.	Color of Wire	Signal Name
34G	O	-
39G	W/G	-
47G	Y	-



Terminal No.	Color of Wire	Signal Name
1	L	-
2	R	-

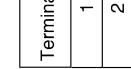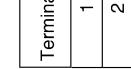

Terminal No.	Color of Wire	Signal Name
34G	O	-
39G	W/G	-
47G	Y	-



Terminal No.	Color of Wire	Signal Name
34G	O	-
39G	W/G	-
47G	Y	-



Terminal No.	Color of Wire	Signal Name
1	B	-
2	W/G	-
3	W/G	-
4	B	-
5	Y	-
6	W/G	-



Terminal No.	Color of Wire	Signal Name
1	W/G	-
2	L	-
3	W/G	-
4	B	-
5	Y	-
6	W/G	-



A

STR

C

D

M

T

G

I

K

Z

M

L

O


Z

P

STARTING SYSTEM

< COMPONENT DIAGNOSIS >

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

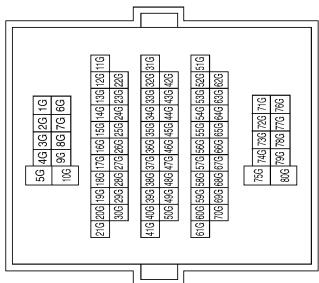


Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	POWER GND
38	B	SIGNAL GND
39	L	CAN-H
40	P	CAN-L
48	R	INHIBIT

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

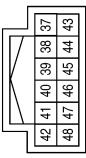

Terminal No.	Color of Wire	Signal Name
34G	O	-
39G	W/G	-
47G	Y	-

Terminal No.	Color of Wire	Signal Name
34G	O	-
39G	W/G	-
47G	Y	-



Terminal No.	Color of Wire	Signal Name
34G	O	-
39G	W/G	-
47G	Y	-

Terminal No.	Color of Wire	Signal Name
34G	O	-
39G	W/G	-
47G	Y	-

Terminal No.	Color of Wire	Signal Name
1	L	-
2	R	-

Terminal No.	Color of Wire	Signal Name
1	L	-
2	R	-

Terminal No.	Color of Wire	Signal Name
1	L	-
2	R	-

STARTING SYSTEM


< COMPONENT DIAGNOSIS >

Connector No.	E171
Connector Name	CLUTCH INTERLOCK CANCEL RELAY 1
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	B	-
2	W	-
3	O	-
4	R	-

Connector No.	E201
Connector Name	WIRE TO WIRE
Connector Color	GRAY

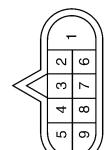


Terminal No.	Color of Wire	Signal Name
1	W	-

Connector No.	E204
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	-



Terminal No.	Color of Wire	Signal Name
6	B/R	-


Terminal No.	Color of Wire	Signal Name
6	B/R	-

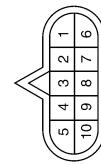


Connector No.	E210
Connector Name	STARTER MOTOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
2	B/R	-

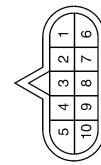

Terminal No.	Color of Wire	Signal Name
9	R	-

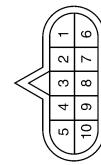


A
STR
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z


STARTING SYSTEM

< COMPONENT DIAGNOSIS >

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE

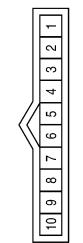

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE

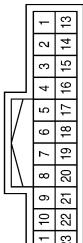

Terminal No.	Color of Wire	Signal Name
21	R	-

Terminal No.	Color of Wire	Signal Name
21	R	-

Terminal No.	Color of Wire	Signal Name
8	G	START-RLY

Terminal No.	Color of Wire	Signal Name
8	G	START-RLY

AWBIA0323GB

STARTING SYSTEM

< COMPONENT DIAGNOSIS >

Wiring Diagram - VQ40DE - Without Clutch Interlock Cancel Switch

INFOID:000000003229975

A

STR

C

D

M

F

G

H

I

K

M


Z

O

P

STARTING SYSTEM - VQ40DE WITHOUT CLUTCH INTERLOCK SYSTEM

: DATA LINE
 M : WITH M/T
 A : WITH A/T

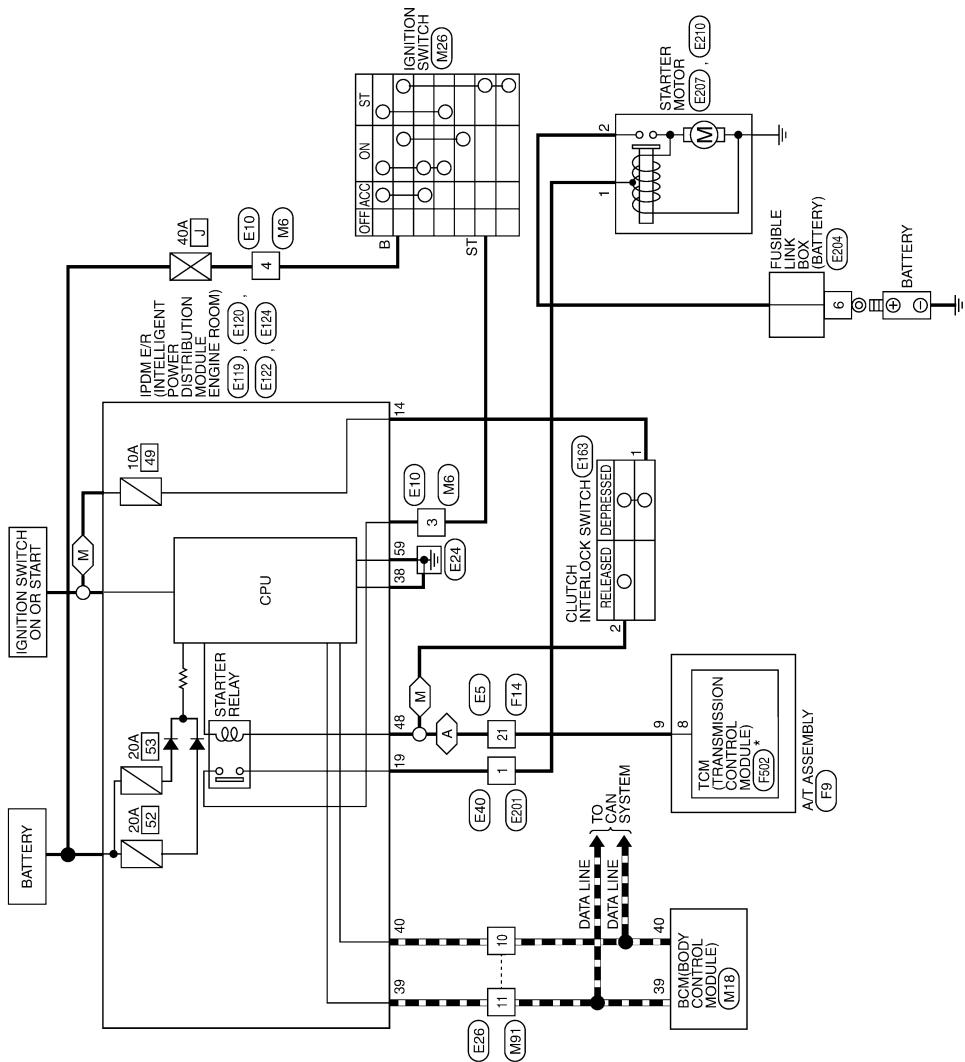

*THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

AWBWA0070GI

STARTING SYSTEM

< COMPONENT DIAGNOSIS >

STARTING SYSTEM CONNECTORS - VQ40DE WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	GR	—
5	G	—

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
39	L	CAN-H
40	P	CAN-L

Connector No.	M18
Connector Name	BCM(BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
B	G	—
ST	GR	—

Terminal No.	Color of Wire	Signal Name
1	2	3
2	3	4
3	4	5
4	5	6
5	6	7
6	7	8
7	8	9
8	9	10
9	10	11
10	11	12
11	12	13
12	13	14
13	14	15
14	15	16
15	16	17
16	17	18
17	18	19
18	19	20
19	20	21
20	21	22
21	22	23
22	23	24

Terminal No.	Color of Wire	Signal Name
E10	G	—
ST	GR	—

Terminal No.	Color of Wire	Signal Name
1	2	3
2	3	4
3	4	5
4	5	6

Terminal No.	Color of Wire	Signal Name
E5	—	—
WIRE TO WIRE	—	—

Terminal No.	Color of Wire	Signal Name
1	2	3
2	3	4
3	4	5
4	5	6
5	6	7
6	7	8
7	8	9
8	9	10
9	10	11
10	11	12

Terminal No.	Color of Wire	Signal Name
1	2	3
2	3	4
3	4	5
4	5	6

Terminal No.	Color of Wire	Signal Name
1	2	3
2	3	4
3	4	5
4	5	6

Terminal No.	Color of Wire	Signal Name
3	GR	—
5	G	—


Terminal No.	Color of Wire	Signal Name
1	2	3
2	3	4
3	4	5
4	5	6

AWBIA0307GB


STARTING SYSTEM

< COMPONENT DIAGNOSIS >


Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE

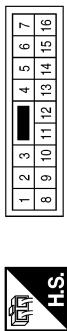

Connector No.	E40
Connector Name	WIRE TO WIRE
Connector Color	GRAY

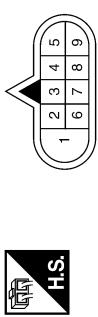

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

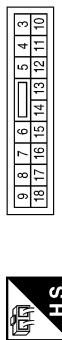


Terminal No.	Color of Wire	Signal Name
10	P	-
11	L	-

Terminal No.	Color of Wire	Signal Name
1	W	-

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

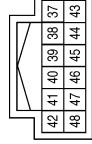

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
38	B	SIGNAL GND
39	L	CAN-H
40	P	CAN-L
48	R	INHIBIT

Terminal No.	Color of Wire	Signal Name
12	W/G	IGN SW (IG1)
14	W/G	A/T ECU IGN SUPPLY

P

Z

K

D

M

A

C

G

T

—

—

O

STR

STARTING SYSTEM

< COMPONENT DIAGNOSIS >

Connector No.	E204
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Connector No.	E201
Connector Name	CLUTCH INTERLOCK
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	W/G	-
2	R	-

Terminal No.	Color of Wire	Signal Name
1	W	-
2	B/R	-

Connector No.	E163
Connector Name	CLUTCH INTERLOCK
Connector Color	GRAY



Connector No.	F9
Connector Name	ATT ASSEMBLY
Connector Color	GREEN

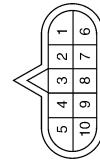

Terminal No.	Color of Wire	Signal Name
6	B/R	-
9	R	-

Connector No.	E210
Connector Name	STARTER MOTOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
2	B/R	-
9	R	-


Connector No.	E207
Connector Name	STARTER MOTOR
Connector Color	GRAY




STARTING SYSTEM

< COMPONENT DIAGNOSIS >

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE

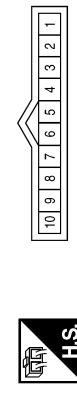

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE

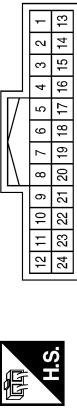

Terminal No.	Color of Wire	Signal Name
8	G	START-RLY

Terminal No.	Color of Wire	Signal Name
21	R	-

STARTING SYSTEM


< COMPONENT DIAGNOSIS >

Wiring Diagram - QR25DE

INFOID:0000000003288921

STARTING SYSTEM - QR25DE

: DATA LINE
 M : WITH M/T
 A : WITH A/T

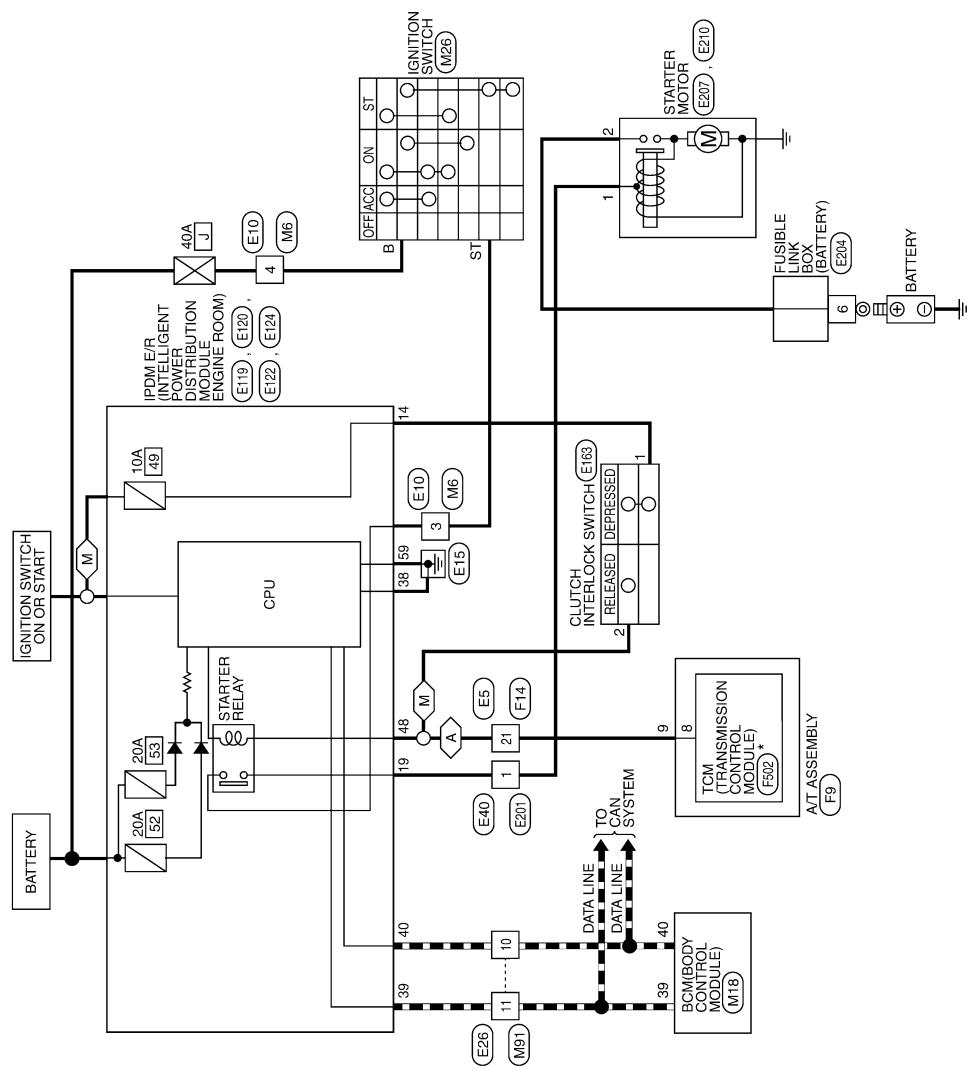

AWBWA0069G

* THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

STARTING SYSTEM

< COMPONENT DIAGNOSIS >


STARTING SYSTEM CONNECTORS - QR25DE

Terminal No.	Color of Wire	Signal Name
3	GR	—
4	G	—

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40


Terminal No.	Color of Wire	Signal Name
39	L	CAN-H
40	P	CAN-L

Connector No.	M26
Connector Name	IGNITION SWITCH
Connector Color	WHITE

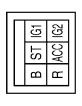


Terminal No.	Color of Wire	Signal Name
B	G	—
ST	GR	—

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE

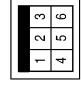


Terminal No.	Color of Wire	Signal Name
3	GR	—
4	G	—

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE

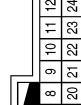

Terminal No.	Color of Wire	Signal Name
21	R	—
22	—	—

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE

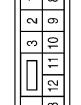


Terminal No.	Color of Wire	Signal Name
10	P	—
11	L	—

STARTING SYSTEM


< COMPONENT DIAGNOSIS >

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE

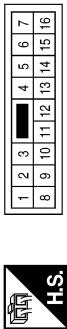


Terminal No.	Color of Wire	Signal Name
10	P	-
11	L	-

Connector No.	E40
Connector Name	WIRE TO WIRE
Connector Color	GRAY

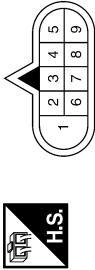

Terminal No.	Color of Wire	Signal Name
1	W	-
14	W/G	A/T ECU IGN SUPPLY

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

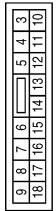


Terminal No.	Color of Wire	Signal Name
12	W/G	IGN SW (IG1)
14	W/G	A/T ECU IGN SUPPLY

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
59	B	POWER GND
14	W/G	A/T ECU IGN SUPPLY

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

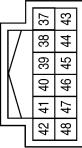

Terminal No.	Color of Wire	Signal Name
38	B	SIGNAL GND
39	L	CAN-H
40	P	CAN-L
48	R	INHIBIT

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

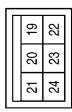

Terminal No.	Color of Wire	Signal Name
19	W	STARTER MOTOR
21	GR	IGN SW (ST)

AWBIA0304GB

STARTING SYSTEM


< COMPONENT DIAGNOSIS >

Connector No.	E204
Connector Name	FUSIBLE LINK BOX
Connector Color	(BATTERY)



Terminal No.	Color of Wire	Signal Name
6	B/R	-

Connector No.	E201
Connector Name	WIRE TO WIRE
Connector Color	GRAY

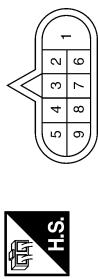

Terminal No.	Color of Wire	Signal Name
1	W	-
2	R	-

Connector No.	E163
Connector Name	CLUTCH INTERLOCK SWITCH
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
6	B/R	-



Terminal No.	Color of Wire	Signal Name
9	R	-

Connector No.	E210
Connector Name	STARTER MOTOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
2	B/R	-

Connector No.	E207
Connector Name	STARTER MOTOR
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	W	-


A
STR
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
P

AWBIA0305GB


STARTING SYSTEM

< COMPONENT DIAGNOSIS >

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE

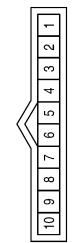

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE

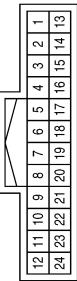

Terminal No.	Color of Wire	Signal Name
8	G	START-RLY

Terminal No.	Color of Wire	Signal Name
21	R	-

STARTING SYSTEM

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

STARTING SYSTEM

Symptom Table

INFOID:000000003229976

STR

Symptom	Reference
No normal cranking	
Starter motor does not rotate	Refer to STR-5, "Work Flow".

C

D

E

F

G

H

I

J

K

L

M

N

O

P

STARTER MOTOR


< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR

STARTER MOTOR

Removal and Installation (QR25DE)

INFOID:0000000003292785

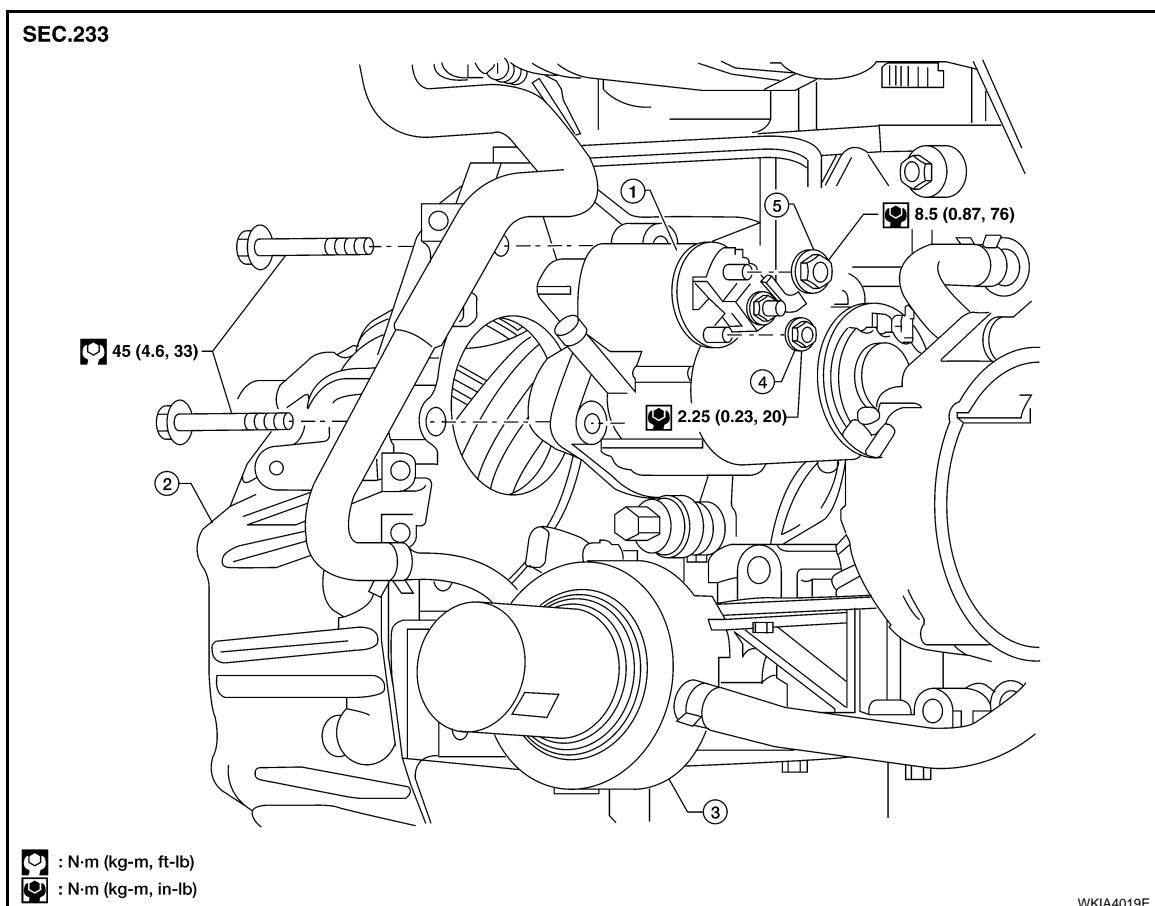

1. Starter motor assembly
2. Transmission housing
3. Engine oil cooler
4. Terminal "1" nut
5. Terminal "2" nut

REMOVAL

1. Disconnect the negative battery terminal.
2. Remove the air cleaner cover and the air cleaner to intake manifold collector duct. Refer to [EM-24, "Exploded View"](#).
3. Remove the harness protector from the starter motor engine room harness.
4. Remove terminal "1" and "2" nuts.
5. Remove the two starter motor bolts, using power tools.
6. Remove the starter motor.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Be sure to tighten terminal nuts carefully.

STARTER MOTOR

< ON-VEHICLE REPAIR >

Removal and Installation (VQ40DE)

INFOID:0000000003292786

A

STR

C

D

E

F

G

H

I

J

K


L

M

N

O


P

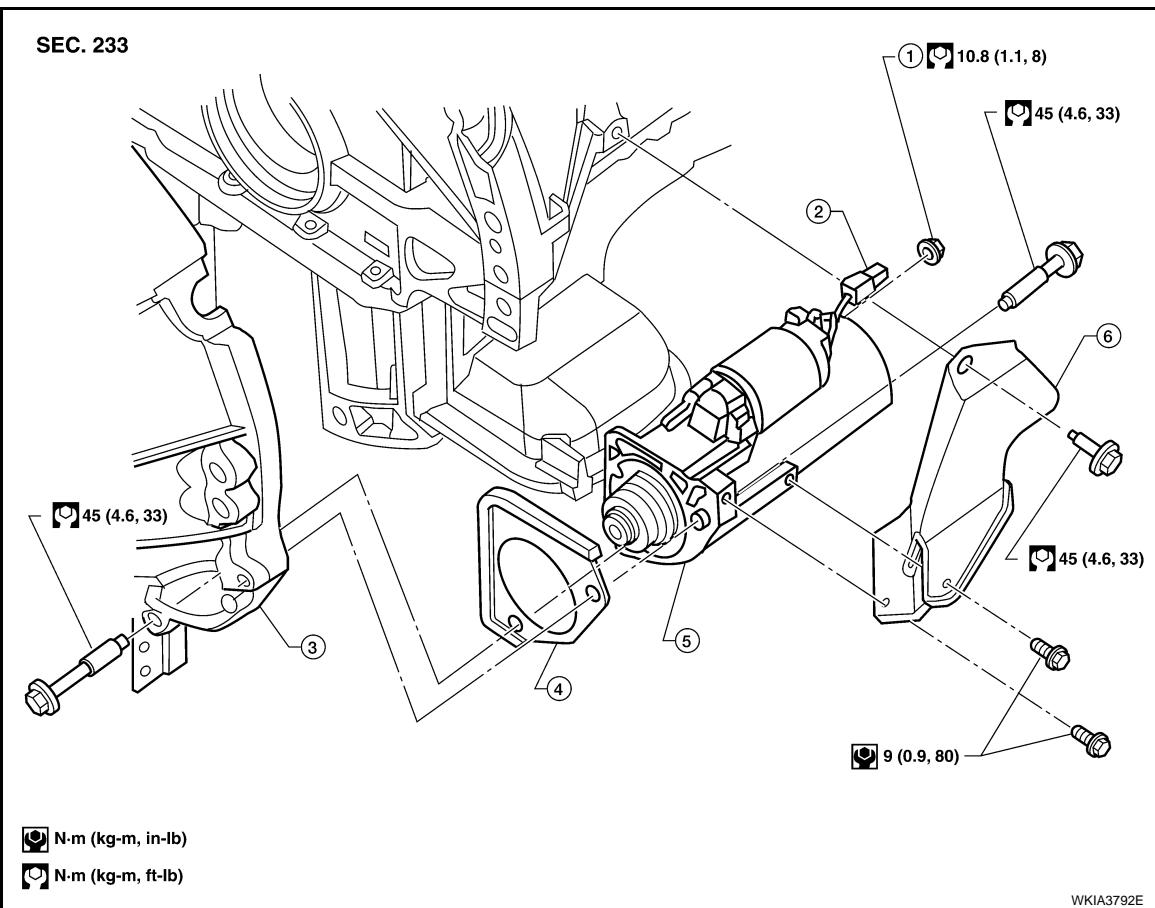

1. Terminal "2" nut
2. Terminal "1" connector
3. Transmission housing
4. Starter cover plate (rear)
5. Starter motor assembly
6. Starter cover

REMOVAL

1. Disconnect the negative battery terminal.
2. Remove engine undercover, using power tools.
3. Remove exhaust manifold cover from exhaust manifold (bank 1) to gain access to starter cover bolts. Refer to [EM-141, "Exploded View"](#).
4. Remove starter cover bolts and starter cover.
5. Disconnect terminal "1" connector and remove terminal "2" nut.
6. Remove the two starter motor bolts, using power tools.
7. Remove the starter motor.

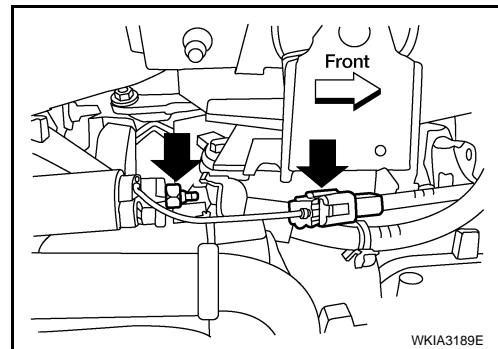

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Be sure to tighten terminal "2" nut carefully.

STARTER MOTOR

<SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

STARTER MOTOR

Starter

INFOID:000000003292787

Application	All models	
Manufacturer	Mitsubishi M002T85571ZCKD	
Type	Reduction gear type	
System voltage	12V	
No-load	Terminal voltage	11V
	Current	Less than 145A
	Revolution	More than 3,300 rpm
Minimum diameter of commutator	31.4 mm (1.236 in)	
Minimum length of brush	11.0 mm (0.433 in)	
Brush spring tension	26.7-36.1 N (2.72 - 3.68 kg, 5.93 - 8.02 lb)	
Clearance between pinion front edge and pinion stopper	0.5 - 2.0 mm (0.020 - 0.079 in)	