

MWI

SECTION

METER, WARNING LAMP & INDICATOR

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONTENTS

BASIC INSPECTION	4	ODO/TRIP METER	19
DIAGNOSIS AND REPAIR WORKFLOW	4	ODO/TRIP METER : System Diagram	19
Work flow	4	ODO/TRIP METER : System Description	19
FUNCTION DIAGNOSIS	6	ODO/TRIP METER : Component Parts Location....	20
METER SYSTEM	6	ODO/TRIP METER : Component Description	20
METER SYSTEM	6	SHIFT POSITION INDICATOR	21
METER SYSTEM : System Diagram	6	SHIFT POSITION INDICATOR : System Diagram...	21
METER SYSTEM : System Description	6	SHIFT POSITION INDICATOR : System Descrip-	
METER SYSTEM : Component Parts Location	10	tion	21
METER SYSTEM : Component Description	10	SHIFT POSITION INDICATOR : Component	
SPEEDOMETER	11	Parts Location	22
SPEEDOMETER : System Diagram	11	SHIFT POSITION INDICATOR : Component De-	
SPEEDOMETER : System Description	11	scription	22
SPEEDOMETER : Component Parts Location	12	WARNING LAMPS/INDICATOR LAMPS	23
SPEEDOMETER : Component Description	12	WARNING LAMPS/INDICATOR LAMPS : System	
TACHOMETER	13	Diagram	23
TACHOMETER : System Diagram	13	WARNING LAMPS/INDICATOR LAMPS : System	
TACHOMETER : System Description	13	Description	23
TACHOMETER : Component Parts Location	14	WARNING LAMPS/INDICATOR LAMPS : Com-	
TACHOMETER : Component Description	14	ponent Parts Location	24
ENGINE COOLANT TEMPERATURE GAUGE	15	WARNING LAMPS/INDICATOR LAMPS : Com-	
ENGINE COOLANT TEMPERATURE GAUGE :		ponent Description	24
System Diagram	15	METER ILLUMINATION CONTROL	25
ENGINE COOLANT TEMPERATURE GAUGE :		METER ILLUMINATION CONTROL : System Di-	
System Description	15	agram	25
ENGINE COOLANT TEMPERATURE GAUGE :		METER ILLUMINATION CONTROL : System De-	
Component Parts Location	16	scription	25
ENGINE COOLANT TEMPERATURE GAUGE :		METER ILLUMINATION CONTROL : Component	
Component Description	16	Parts Location	26
FUEL GAUGE	17	METER ILLUMINATION CONTROL : Component	
FUEL GAUGE : System Diagram	17	Description	26
FUEL GAUGE : System Description	17	INFORMATION DISPLAY	27
FUEL GAUGE : Component Parts Location	18	INFORMATION DISPLAY : System Diagram	27
FUEL GAUGE : Component Description	18	INFORMATION DISPLAY : System Description ...	27
		INFORMATION DISPLAY : Component Parts Lo-	
		cation	30
		INFORMATION DISPLAY : Component Descrip-	
		tion	30

MWI

COMPASS	32	BCM (BODY CONTROL MODULE) : Diagnosis	51
Description	32	Procedure	51
Component Parts Location	33	BCM (BODY CONTROL MODULE) : Special Re-	
Special Repair Requirement	33	pair Requirement	52
CLOCK	34	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	52
Component Parts Location	34	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Pro-	
DIAGNOSIS SYSTEM (METER)	35	cedure	52
Diagnosis Description	35		
DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)	37	FUEL LEVEL SENSOR SIGNAL CIRCUIT	54
CONSULT-III Function (METER/M&A)	37	Description	54
COMPONENT DIAGNOSIS	41	Component Function Check	54
U1000 CAN COMM CIRCUIT	41	Diagnosis Procedure	54
Description	41	Component Inspection	55
DTC Logic	41	METER CONTROL SWITCH SIGNAL CIRCUIT	57
Diagnosis Procedure	41	Description	57
U1010 CONTROL UNIT (CAN)	42	Diagnosis Procedure	57
Description	42	Component Inspection	58
DTC Logic	42	OIL PRESSURE SWITCH SIGNAL CIRCUIT	59
Diagnosis Procedure	42	Description	59
B2201 COMMUNICATION ERROR 1	43	Component Function Check	59
Description	43	Diagnosis Procedure	59
DTC Logic	43	Component Inspection	59
Diagnosis Procedure	43	PARKING BRAKE SWITCH SIGNAL CIRCUIT	61
B2202 COMMUNICATION ERROR 2	45	Description	61
Description	45	Component Function Check	61
DTC Logic	45	Diagnosis Procedure (A/T models)	61
Diagnosis Procedure	45	Diagnosis Procedure (M/T models)	62
B2205 VEHICLE SPEED	47	Component Inspection	62
Description	47	WASHER LEVEL SWITCH SIGNAL CIRCUIT	64
DTC Logic	47	Description	64
Diagnosis Procedure	47	Diagnosis Procedure	64
B2267 ENGINE SPEED	48	Component Inspection	64
Description	48	COMPASS	65
DTC Logic	48	Wiring Diagram - COMPASS -	65
Diagnosis Procedure	48	CLOCK	67
B2268 WATER TEMP	49	Wiring Diagram - CLOCK -	67
Description	49	ECU DIAGNOSIS	69
DTC Logic	49	COMBINATION METER	69
Diagnosis Procedure	49	Reference Value	69
POWER SUPPLY AND GROUND CIRCUIT	50	Wiring Diagram - METER -	72
COMBINATION METER	50	Fail Safe	81
COMBINATION METER : Diagnosis Procedure	50	DTC Index	82
UNIFIED METER AND A/C AMP.	50	UNIFIED METER AND A/C AMP.	83
UNIFIED METER AND A/C AMP. : Diagnosis Pro-		Reference Value	83
cedure	50	Wiring Diagram - METER -	90
BCM (BODY CONTROL MODULE)	51	Fail Safe	99
		DTC Index	100

BCM (BODY CONTROL MODULE)	102	Description	155
Reference Value	102	Diagnosis Procedure	155
Wiring Diagram - BCM -	125		
Fail Safe	130		
DTC Inspection Priority Chart	132		
DTC Index	134		
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	136		
Reference Value	136		
Wiring Diagram - IPDM E/R -	143		
Fail Safe	146		
DTC Index	148		
SYMPTOM DIAGNOSIS	149		
THE FUEL GAUGE POINTER DOES NOT MOVE	149		
Description	149		
Diagnosis Procedure	149		
THE METER CONTROL SWITCH IS INOPERATIVE	150		
Description	150		
Diagnosis Procedure	150		
THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON	151		
Description	151		
Diagnosis Procedure	151		
THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF	152		
Description	152		
Diagnosis Procedure	152		
THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY	153		
Description	153		
Diagnosis Procedure	153		
THE LOW WASHER FLUID WARNING CONTINUES DISPLAYING, or DOES NOT DISPLAY	154		
Description	154		
Diagnosis Procedure	154		
THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY	155		
THE TRUNK OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY	156		
Description	156		
Diagnosis Procedure	156		
THE AMBIENT TEMPERATURE DISPLAY IS INCORRECT	157		
Description	157		
Diagnosis Procedure	157		
NORMAL OPERATING CONDITION	158		
COMPASS	158		
COMPASS : Description	158		
INFORMATION DISPLAY	158		
INFORMATION DISPLAY : Description	158		
PRECAUTION	159		
PRECAUTIONS	159		
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	159		
ON-VEHICLE REPAIR	160		
COMBINATION METER	160		
Exploded View	160		
Removal and Installation	160		
Disassembly and Assembly	161		
UNIFIED METER AND A/C AMP.	162		
Exploded View	162		
Removal and Installation	162		
METER CONTROL SWITCH	163		
Exploded View	163		
Removal and Installation	163		
COMPASS	164		
Exploded View	164		
Removal and Installation	164		
CLOCK	165		
Exploded View	165		
Removal and Installation	165		

MWI

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

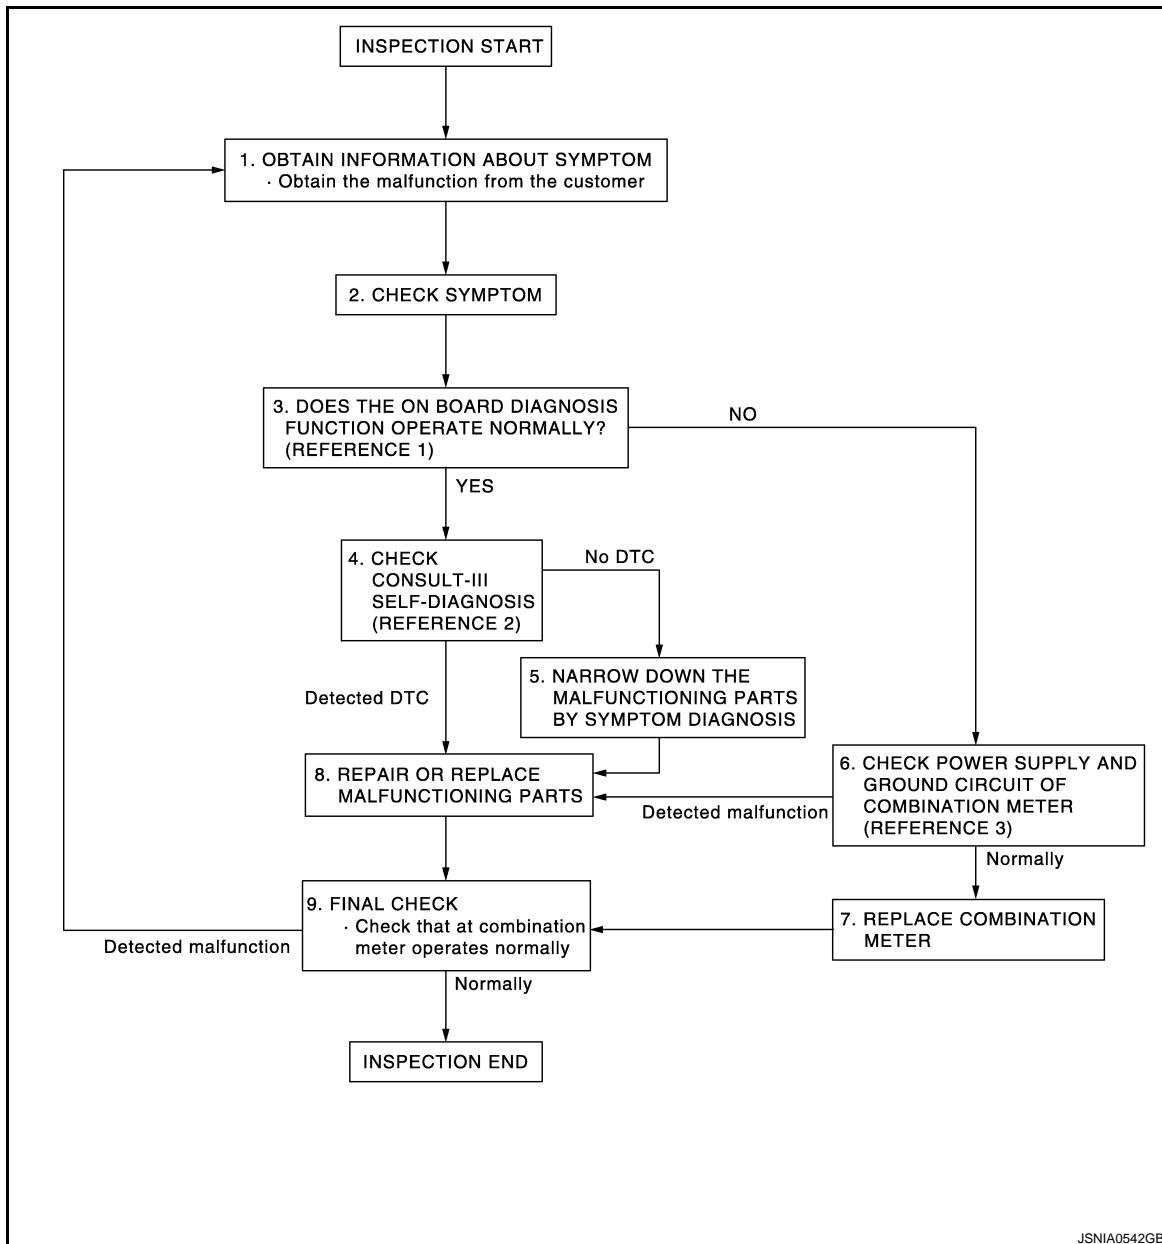
BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work flow

INFOID:000000001606601

OVERALL SEQUENCE



- Reference 1...[MWI-35, "Diagnosis Description"](#).
- Reference 2...[MWI-100, "DTC Index"](#).
- Reference 3...[MWI-50, "COMBINATION METER : Diagnosis Procedure"](#).

DETAILED FLOW

1.OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

>> GO TO 2.

2.CHECK SYMPTOM

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

- Check the symptom based on the information obtained from the customer.
- Check that any other malfunctions are present.

>> GO TO 3.

3.CHECK ON BOARD DIAGNOSIS OPERATION

Check that the on board diagnosis function operates. Refer to [MWI-35, "Diagnosis Description"](#).

Does the on board diagnosis function operate normally?

- YES >> GO TO 4.
NO >> GO TO 6.

4.CHECK CONSULT-III SELF-DIAGNOSIS RESULTS

Connect CONSULT-III and perform "Self Diagnostic Result" of "METER/M&A". Refer to [MWI-37, "CONSULT-III Function \(METER/M&A\)"](#).

Are self-diagnosis results normal?

- YES >> GO TO 5.
NO >> GO TO 8.

5.NARROW DOWN THE MALFUNCTIONING PARTS BY SYMPTOM DIAGNOSIS

Perform symptom diagnosis and narrow down the malfunctioning parts.

>> GO TO 8.

6.CHECK COMBINATION METER POWER SUPPLY AND GROUND CIRCUITS

Check combination meter power supply and ground circuits. Refer to [MWI-50, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 7.
NO >> GO TO 8.

7.REPLACE COMBINATION METER

Replace combination meter.

>> GO TO 9.

8.REPAIR OR REPLACE MALFUNCTIONING PARTS

Repair or replace the malfunctioning parts.

NOTICE:

If DTC is displayed, erase DTC after repair or replace malfunctioning parts.

>> GO TO 9.

9.FINAL CHECK

Check that the combination meter operates normally.

MWI

Do they operate normally?

- YES >> INSPECTION END
NO >> GO TO 1.

O

P

METER SYSTEM

< FUNCTION DIAGNOSIS >

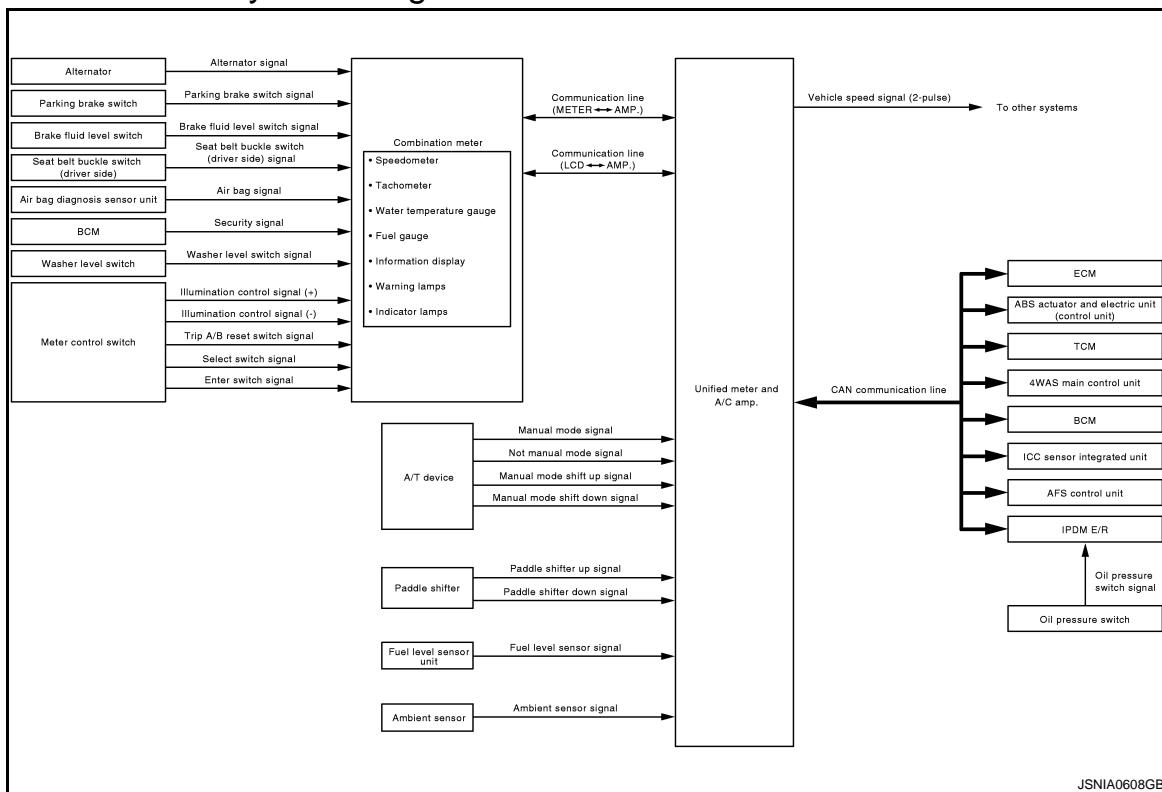
FUNCTION DIAGNOSIS

METER SYSTEM

METER SYSTEM

METER SYSTEM : System Diagram

INFOID:0000000001606602



METER SYSTEM : System Description

INFOID:0000000001606603

COMBINATION METER

- The combination meter retrieves the information required for controlling the operations of the meters, indicator lamps/warning lamps and information display from the communication signals from the unified meter and A/C amp. and the signals from various switches and sensors.
- The combination meter incorporates a trip computer that displays warnings and messages on the information display according to the information received from various units.
- The combination meter incorporates a buzzer function that sounds an audible alarm with the integrated buzzer device. Refer to [WCS-5, "WARNING CHIME SYSTEM : System Description"](#) for further details.
- The combination meter integrates the meter circuit check function and the segment check function that checks the information display operation.

UNIFIED METER AND A/C AMP.

- Receives information required by the combination meter from various units via CAN communication line and transmits it to the combination meter with communication line.
- The unified meter and A/C amp. incorporates a power saving control function that reduces the power consumption according to the vehicle status. Refer to [BCS-10, "System Description"](#) for details.
- The unified meter and A/C amp. incorporates a diagnosis function that allows the technician to perform diagnoses with CONSULT-III.

METER SYSTEM

< FUNCTION DIAGNOSIS >

Between unified meter and A/C amp. and combination meter.

Unit	Communication line	Input from combination meter	Output to combination meter
Unified meter and A/C amp.	Communication line (METER <-> AMP.)	<ul style="list-style-type: none"> Parking brake switch signal Washer level switch signal Meter day/night condition signal Illumination control switch signal Refuel status signal Low fuel warning lamp signal Odo data signal 	<ul style="list-style-type: none"> Vehicle speed signal Turn indicator signal High beam request signal Front fog light request signal Engine speed signal Fuel level sensor signal Engine coolant temperature signal A/T CHECK indicator signal Oil pressure switch signal Door switch signal Buzzer output signal AFS OFF indicator lamp signal Tire pressure signal VDC OFF indicator signal ABS warning lamp signal Brake warning lamp signal Malfunction indicator lamp signal 4WAS warning lamp signal Master warning signal
	Communication line (LCD <-> AMP.)	<ul style="list-style-type: none"> Average fuel consumption reset signal Travel time reset signal Possible driving distance reset signal Average vehicle speed reset signal Select switch signal Enter switch signal Trip A/B reset switch signal Ambient air temperature display signal 	<ul style="list-style-type: none"> Shift position signal Meter display signal Door switch signal Trunk switch signal Fuel level sensor signal Parking brake switch signal Washer level switch signal Charge warning signal Instantaneous fuel consumption display signal Ambient air temperature display signal Average fuel consumption display signal Average vehicle speed display signal Possible driving distance display signal Engine speed signal Vehicle speed signal

IPDM E/R

- IPDM E/R reads the ON/OFF signals of the oil pressure switch and transmits the oil pressure switch signal to the unified meter and A/C amp. via BCM with the CAN communication line.
- IPDM E/R is equipped with the diagnosis function. It can perform the operation check of oil pressure warning lamp with the auto active test and the diagnosis with CONSULT-III.

METER CONTROL FUNCTION LIST

X: Applicable

System		Description	Signal source	Via unified meter and A/C amp.
Meter/gauge	Speedometer	Receives vehicle speed signal and indicates vehicle speed.	ABS actuator and electric unit (control unit)	X
	Tachometer	Receives engine speed signal and indicates engine speed.	ECM	X
	Fuel gauge	Receives fuel level sensor signal and indicates fuel level.	Fuel level sensor unit	X
	Water temperature gauge	Receives engine coolant temperature signal and indicates coolant temperature.	ECM	X
Warning lamp/ indicator lamp	Oil pressure warning lamp	Receives oil pressure warning lamp signal and illuminates warning lamp.	IPDM E/R	X
	Master warning	Illuminates according to warning output on information display.	—	X

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

METER SYSTEM


< FUNCTION DIAGNOSIS >

System	Description	Signal source	Via unified meter and A/C amp.
Information display	Door open warning	Receives door switch signals and displays warning.	BCM X
	Trunk open warning	Receives trunk lid opener switch signal and displays warning.	BCM X
	Parking brake release warning	Receives parking brake switch signal and vehicle speed signal and displays warnings.	Parking brake switch
			ABS actuator and electric unit (control unit) X
	Low fuel warning	Receives fuel gauge signal and displays warning if fuel level decreases to 12 ℥ (3-1/8 US gal, 2-5/8 Imp gal) or less.	Fuel level sensor unit X
	Low washer fluid warning	Receives washer level switch signal and displays warning.	Washer level switch
	Low outside temperature warning	Monitors ambient sensor signal and displays warning if ambient temperature decreases to 3°C (37°F) or less. (If enabled)	Ambient sensor X
	Instantaneous fuel consumption	Calculates instantaneous fuel consumption based on received vehicle speed signals and fuel consumption monitor signal and displays it.	ECM X
			ABS actuator and electric unit (control unit) X
	Average fuel consumption	Calculates average fuel consumption in a reset-to-reset interval based on received vehicle speed signals and fuel consumption monitor signal and displays it.	ECM X
			ABS actuator and electric unit (control unit) X
	Average vehicle speed	Calculates average vehicle speed in a reset-to-reset interval based on received vehicle speed signals and displays it.	ABS actuator and electric unit (control unit) X
	Travel time	Displays accumulated key switch ON time from reset to reset.	— X
	Travel distance	Calculates accumulated travel distance in a reset-to-reset interval based on received vehicle speed signals and displays it.	ABS actuator and electric unit (control unit) X
	Possible driving distance	The unified meter and A/C amp. calculates the possible driving distance according to the vehicle speed signal and the fuel level sensor unit received with CAN communication line, and transmits it to the combination meter by means of communication line.	ABS actuator and electric unit (control unit) X
			Fuel level sensor unit X
	Ambient air temperature	Corrects ambient air temperature value based on received ambient sensor signals and displays it.	Ambient sensor X

METER SYSTEM

< FUNCTION DIAGNOSIS >

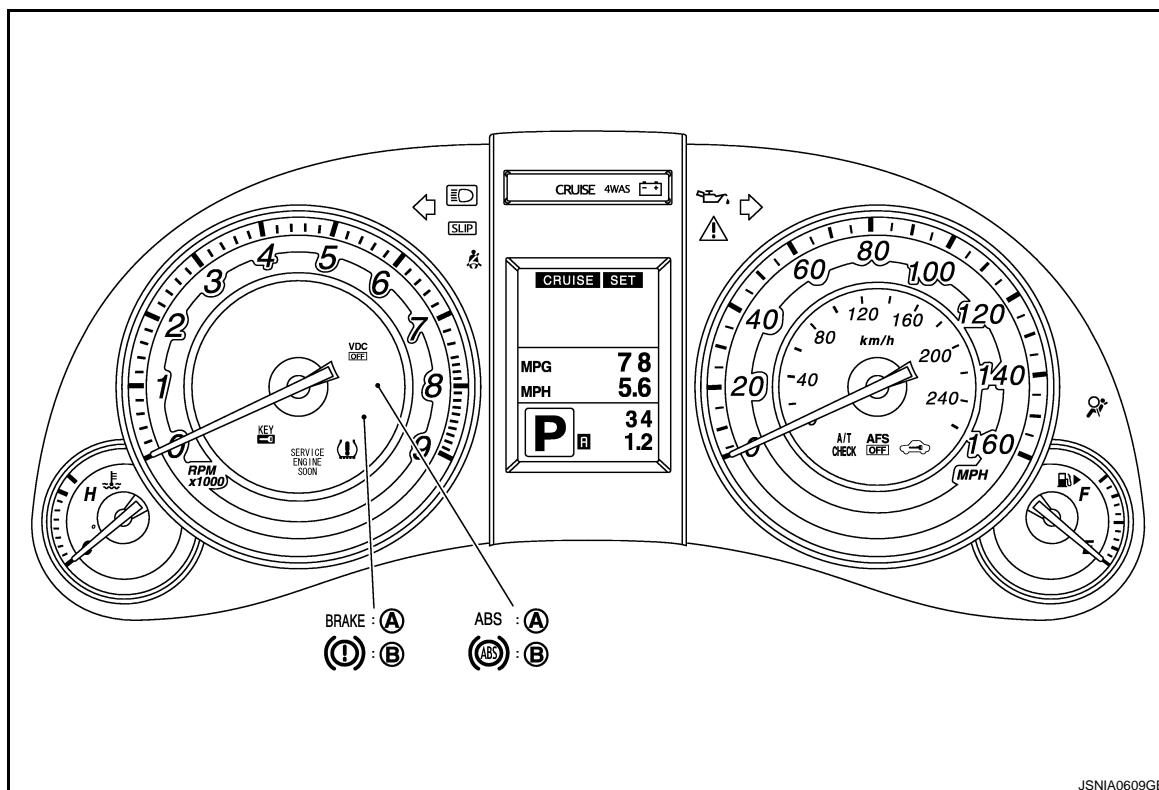ARRANGEMENT OF COMBINATION METER



A. U.S.A.

B. Canada

JSNIA0609GB

A
B
C
D
E
F
G
H
I
J
K
L
M

MWI

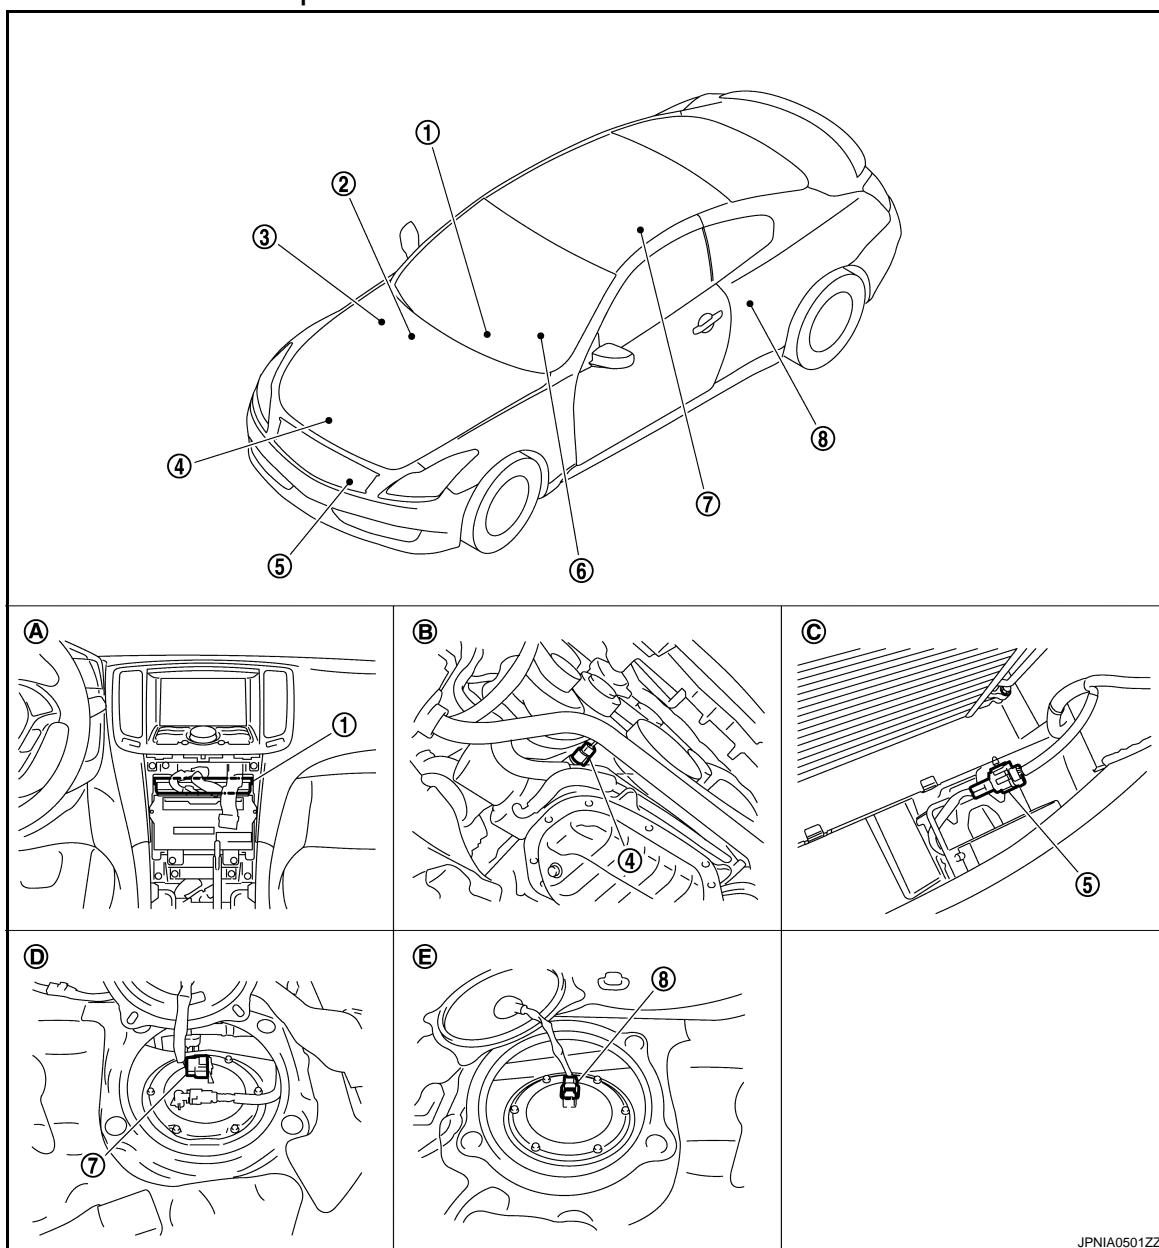
O
P

METER SYSTEM

< FUNCTION DIAGNOSIS >

METER SYSTEM : Component Parts Location

INFOID:000000001606604



JPNIA0501ZZ

- | | | |
|---|---------------------------------|----------------------|
| 1. Unified meter and A/C amp. | 2. BCM | 3. IPDM E/R |
| 4. Oil pressure switch | 5. Ambient sensor | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump
(main) | 8. Fuel level sensor unit (sub) | |
| A. Behind cluster lid C | B. Oil pan (upper) RH side | C. Condenser (front) |
| D. Rear seat (lower right) | E. Rear seat (lower left) | |

METER SYSTEM : Component Description

INFOID:000000001606605

Unit	Description
Combination meter	<p>Controls the following with the signals from the unified meter and A/C amp, switches and sensors.</p> <ul style="list-style-type: none"> Speedometer Water temperature gauge Warning lamps Information display Tachometer Fuel gauge Indicator lamps Warning chime

METER SYSTEM


< FUNCTION DIAGNOSIS >

Unit	Description
Unified meter and A/C amp.	<ul style="list-style-type: none"> The combination meter receives the necessary information from various units via CAN communication line and transmits them to the unified meter and A/C amp. with the communication line that connects both of them. Transmits the fuel gauge signal from the fuel gauge unit with the communication line that connects the unified meter and A/C amp. and the combination meter. Reads the signals from the A/T device and paddle shifter and transmits them to TCM with CAN communication line.
IPDM E/R	IPDM E/R reads the ON/OFF signals of the oil pressure switch and transmits the oil pressure switch signal to the unified meter and A/C amp. via BCM with CAN communication line.
Fuel level sensor unit	Refer to MWI-54, "Description" .
Oil pressure switch	Refer to MWI-59, "Description" .
ECM	<p>Transmits the following signals to the unified meter and A/C amp. with CAN communication line.</p> <ul style="list-style-type: none"> Engine speed signal • Engine coolant temperature signal Fuel consumption monitor signal
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the unified meter and A/C amp. with CAN communication line.
BCM	<ul style="list-style-type: none"> Transmits signals provided by various units to the unified meter and A/C amp. with CAN communication line. Transmits the security signal to the combination meter.
A/T device	<p>Transmits the following signals to the unified meter and A/C amp.</p> <ul style="list-style-type: none"> Manual mode signal • Not manual mode signal Manual mode shift up signal • Manual mode shift down signal
Paddle shifter	Transmits the paddle shifter up signal and paddle shifter down signal to the unified meter and A/C amp.
TCM	Transmits shift position signal to the unified meter and A/C amp.
Meter control switch	Refer to MWI-57, "Description" .
Washer level switch	Transmits the washer level switch signal to the combination meter.
Brake fluid level switch	Transmits the brake fluid level switch signal to the combination meter.
Parking brake switch	Refer to MWI-61, "Description" .

SPEEDOMETER

SPEEDOMETER : System Diagram

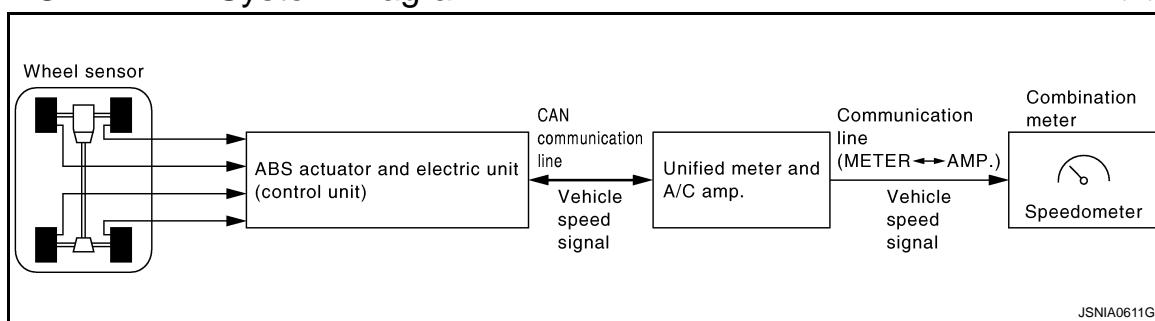INFOID:0000000001606606



SPEEDOMETER : System Description

INFOID:0000000001606607

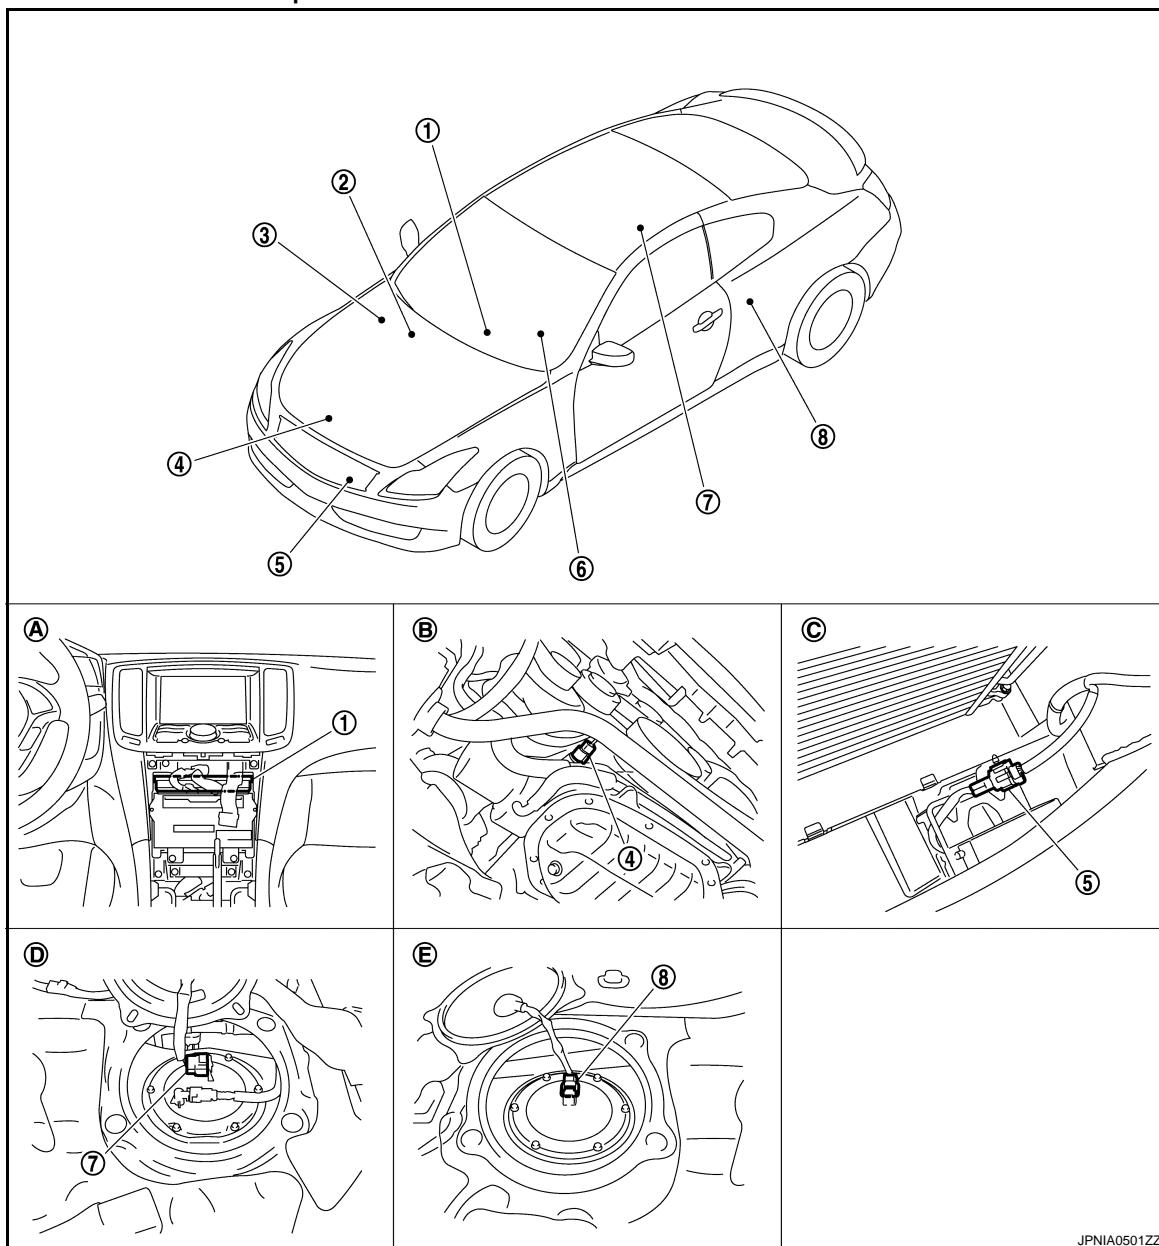
- The ABS actuator and electric unit (control unit) converts the pulse signal provided by the wheel sensor to a vehicle speed signal and transmits it to the unified meter and A/C amp. with CAN communication line.
- The unified meter and A/C amp. receives the vehicle speed signal from the ABS actuator and electric unit (control unit) with CAN communication line and transmits it to the combination meter by means of communication line.
- The combination meter indicates the vehicle speed according to the vehicle speed signal received from the unified meter and A/C amp. by means of communication line.

METER SYSTEM

< FUNCTION DIAGNOSIS >

SPEEDOMETER : Component Parts Location

INFOID:000000001672037



JPNIA0501ZZ

- | | | |
|--|---------------------------------|----------------------|
| 1. Unified meter and A/C amp. | 2. BCM | 3. IPDM E/R |
| 4. Oil pressure switch | 5. Ambient sensor | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump (main) | 8. Fuel level sensor unit (sub) | |
| A. Behind cluster lid C | B. Oil pan (upper) RH side | C. Condenser (front) |
| D. Rear seat (lower right) | E. Rear seat (lower left) | |

SPEEDOMETER : Component Description

INFOID:000000001606609

Unit	Description
Combination meter	Indicates the vehicle speed according to the vehicle speed signal received from the unified meter and A/C amp. by means of communication line.
Unified meter and A/C amp.	Transmits the vehicle speed signal received from ABS actuator and electric unit (control unit) with CAN communication line to the combination meter by means of communication line.
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the unified meter and A/C amp. with CAN communication line.

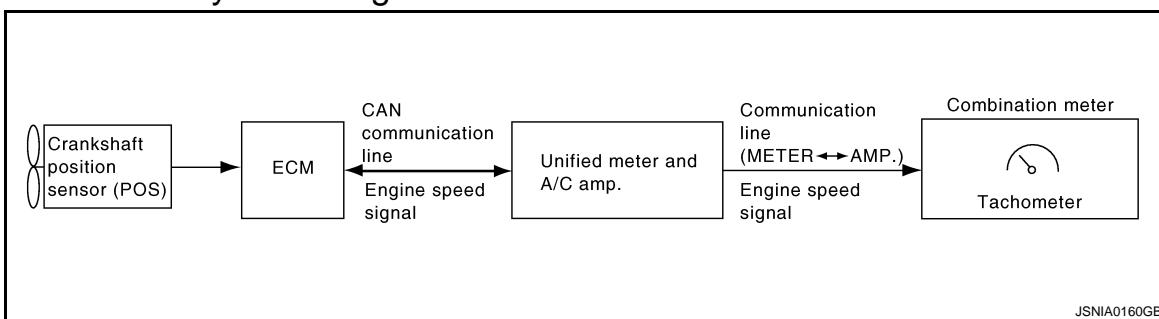
METER SYSTEM

< FUNCTION DIAGNOSIS >

TACHOMETER

TACHOMETER : System Diagram

INFOID:0000000001606610



TACHOMETER : System Description

INFOID:0000000001606611

- ECM converts the pulse signal provided by the crankshaft position sensor to an engine speed signal and transmits it to the unified meter and A/C amp. with CAN communication line.
- Unified meter and A/C amp. transmits engine speed signal to combination meter with communication line.
- The unified meter and A/C amp. receives the engine speed signal from ECM with CAN communication line and transmits it to the combination meter by means of communication line.
- Combination meter converses engine speed signal to the angle signal, and commands to tachometer.

A
B
C
D

E
F
G
H

I
J

K
L

M

MWI

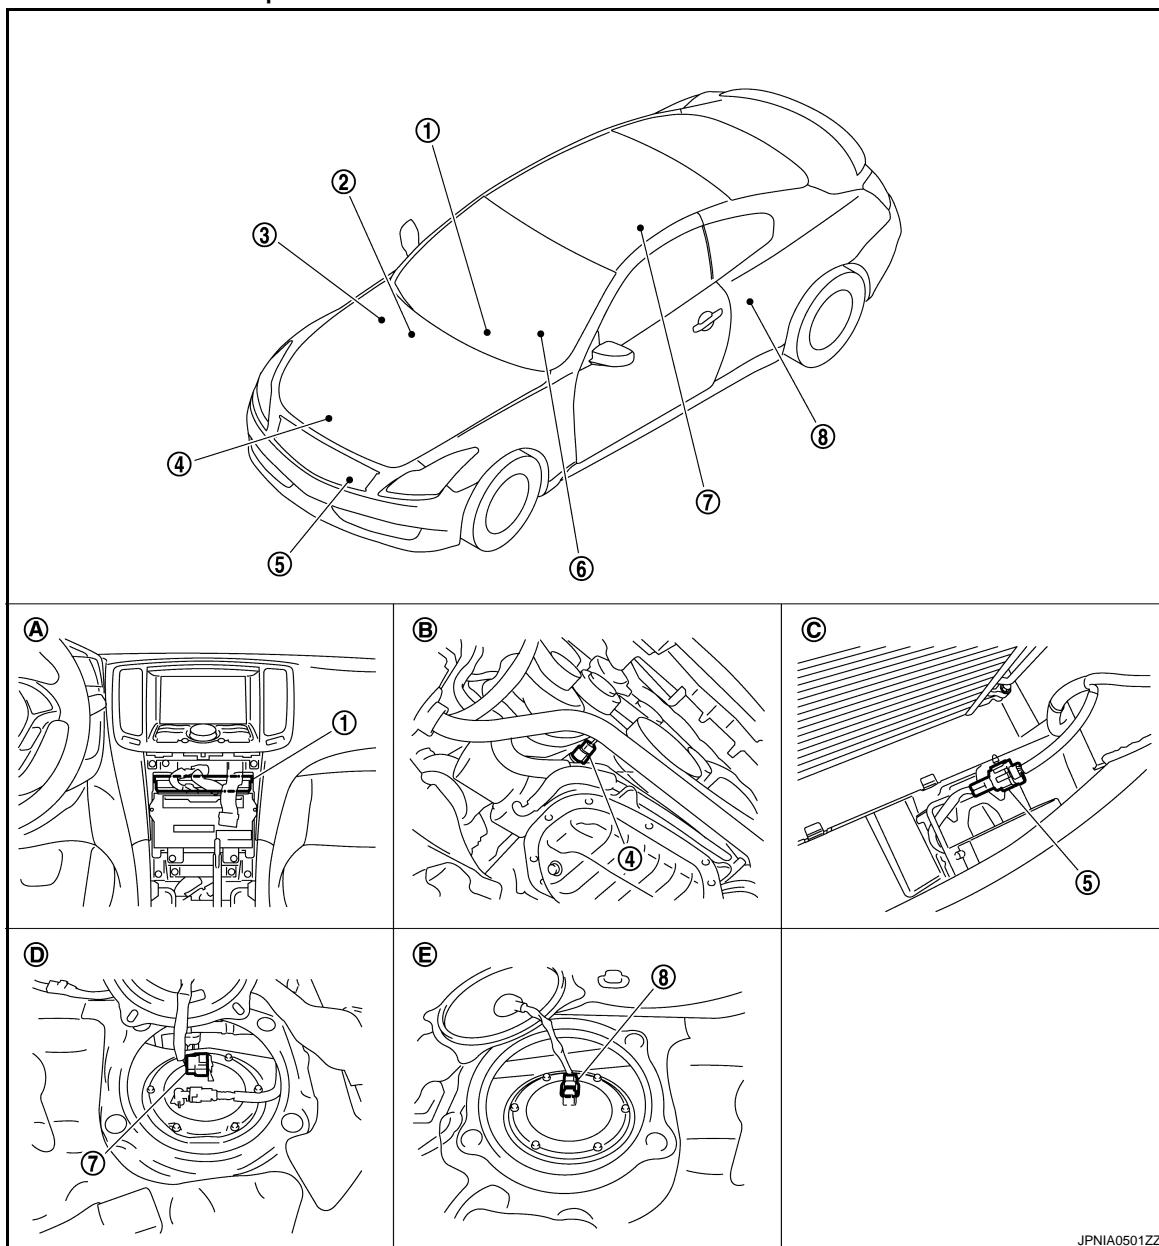
O
P

METER SYSTEM

< FUNCTION DIAGNOSIS >

TACHOMETER : Component Parts Location

INFOID:000000001672042



JPNIA0501ZZ

- | | | |
|---|---------------------------------|----------------------|
| 1. Unified meter and A/C amp. | 2. BCM | 3. IPDM E/R |
| 4. Oil pressure switch | 5. Ambient sensor | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump
(main) | 8. Fuel level sensor unit (sub) | |
| A. Behind cluster lid C | B. Oil pan (upper) RH side | C. Condenser (front) |
| D. Rear seat (lower right) | E. Rear seat (lower left) | |

TACHOMETER : Component Description

INFOID:000000001606613

Unit	Description
Combination meter	Indicates the engine speed according to the engine speed signal received from the unified meter and A/C amp. by means of communication line.
Unified meter and A/C amp.	Transmits the engine speed signal received from ECM with CAN communication line to the combination meter by means of communication line.
ECM	Transmits the engine speed signal to the unified meter and A/C amp. with CAN communication line.

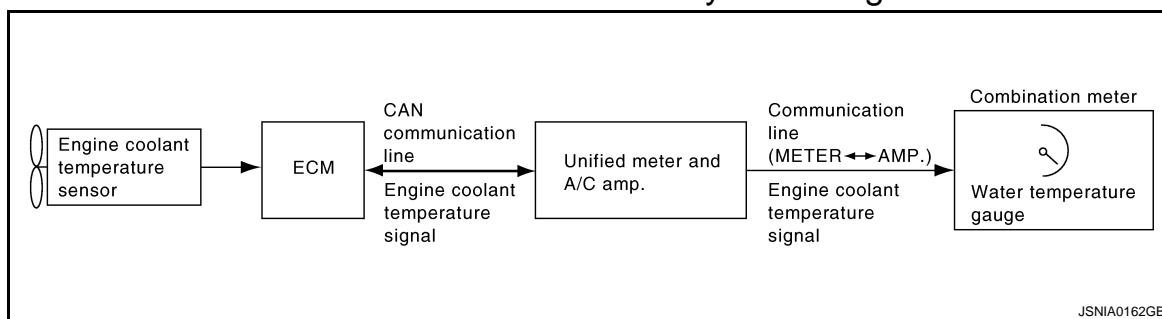
METER SYSTEM

< FUNCTION DIAGNOSIS >

ENGINE COOLANT TEMPERATURE GAUGE

ENGINE COOLANT TEMPERATURE GAUGE : System Diagram

INFOID:0000000001606614



ENGINE COOLANT TEMPERATURE GAUGE : System Description

INFOID:0000000001606615

- ECM converses a signal from engine coolant temperature sensor to engine coolant temperature signal, and transmits to unified meter and A/C amp. with CAN communication line.
- Unified meter and A/C amp. transmits engine coolant temperature signal to combination meter with communication line.
- Combination meter converses engine coolant temperature signal to the angle signal, and commands to engine coolant temperature gauge.

A
B
C
D

E
F
G

H
I
J

K
L

M

MWI

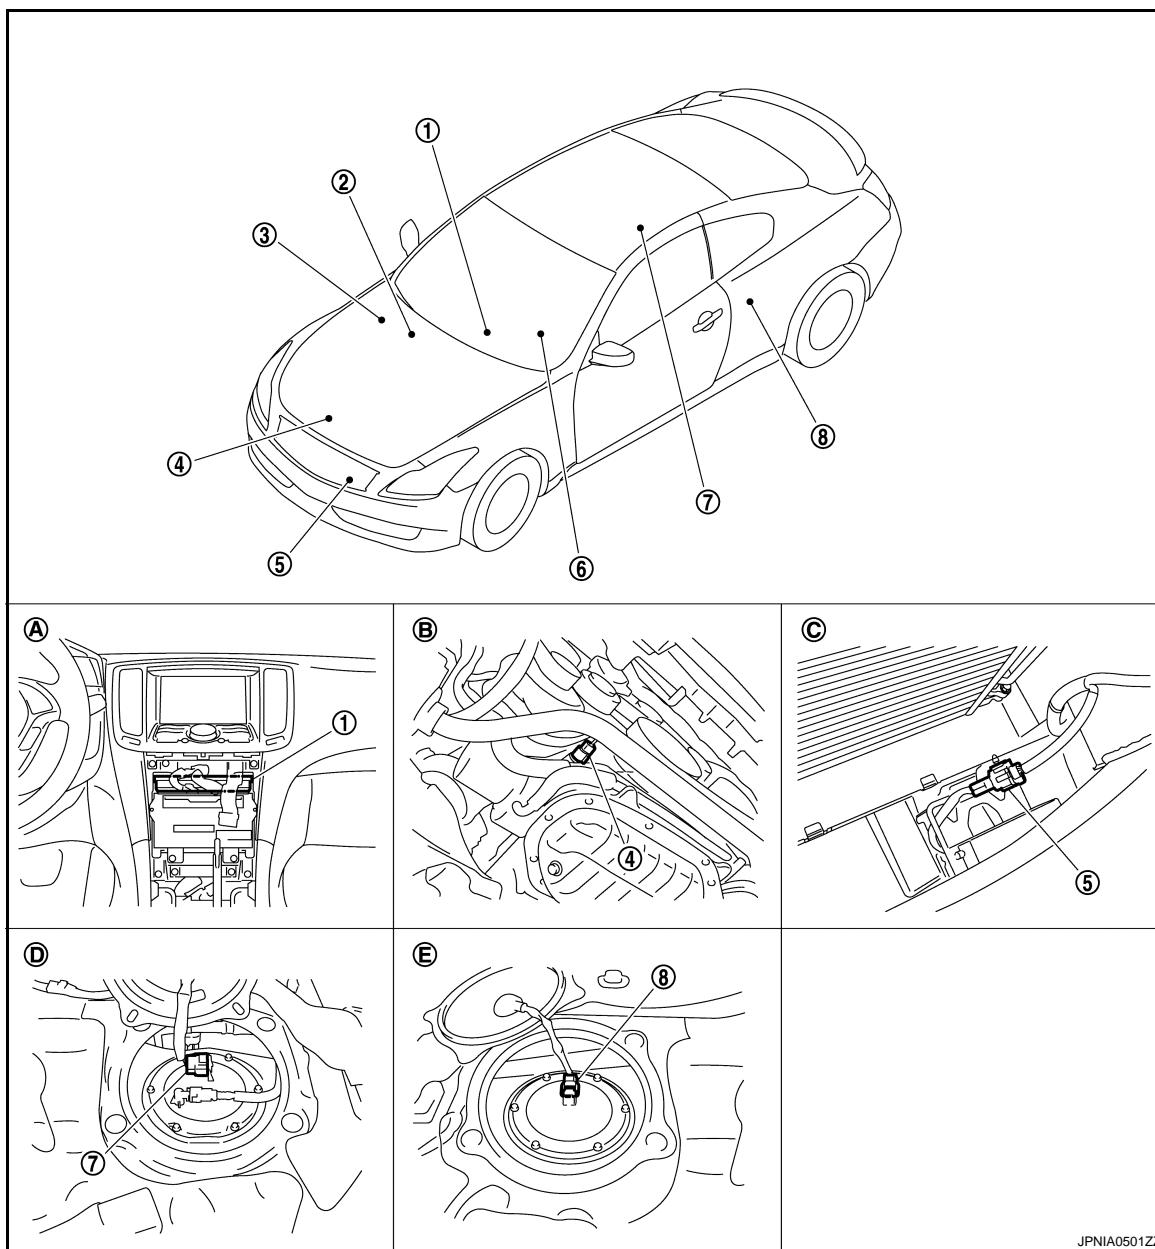
O
P

METER SYSTEM

< FUNCTION DIAGNOSIS >

ENGINE COOLANT TEMPERATURE GAUGE : Component Parts Location

INFOID:000000001672043



JPNIA0501ZZ

- | | | |
|---|---------------------------------|----------------------|
| 1. Unified meter and A/C amp. | 2. BCM | 3. IPDM E/R |
| 4. Oil pressure switch | 5. Ambient sensor | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump
(main) | 8. Fuel level sensor unit (sub) | |
| A. Behind cluster lid C | B. Oil pan (upper) RH side | C. Condenser (front) |
| D. Rear seat (lower right) | E. Rear seat (lower left) | |

ENGINE COOLANT TEMPERATURE GAUGE : Component Description

INFOID:000000001606617

Unit	Description
Combination meter	Indicates the water temperature gauge according to the engine coolant temperature signal received from the unified meter and A/C amp. by means of communication line.

METER SYSTEM


< FUNCTION DIAGNOSIS >

Unit	Description
Unified meter and A/C amp.	Transmits the engine coolant temperature signal received from ECM with CAN communication line to the combination meter by means of communication line.
ECM	Transmits the engine coolant temperature signal to the unified meter and A/C amp. with CAN communication line.

FUEL GAUGE

FUEL GAUGE : System Diagram

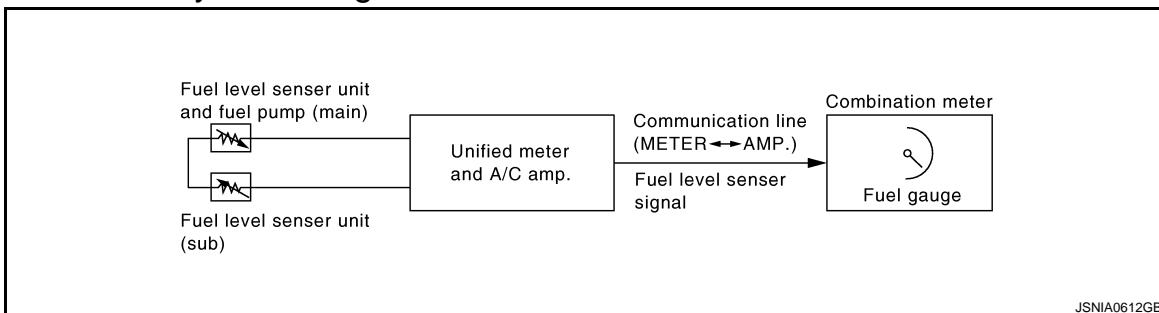INFOID:000000001606618



JSNIA0612GB

FUEL GAUGE : System Description

INFOID:000000001606619

CONTROL OUTLINE

- The unified meter and A/C amp. reads the fuel level sensor signal from the fuel gauge unit and transmits it to the combination meter with the communication line.
- The combination meter indicates the fuel level on the fuel gauge according to the received fuel level sensor signal.

REFUEL CONTROL

The unit judges that the driver is refueling the vehicle and accelerates the fuel gauge needle movement if the fuel level changes by 15 ℥ (4 US gal, 3-3/10 Imp gal) or more.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

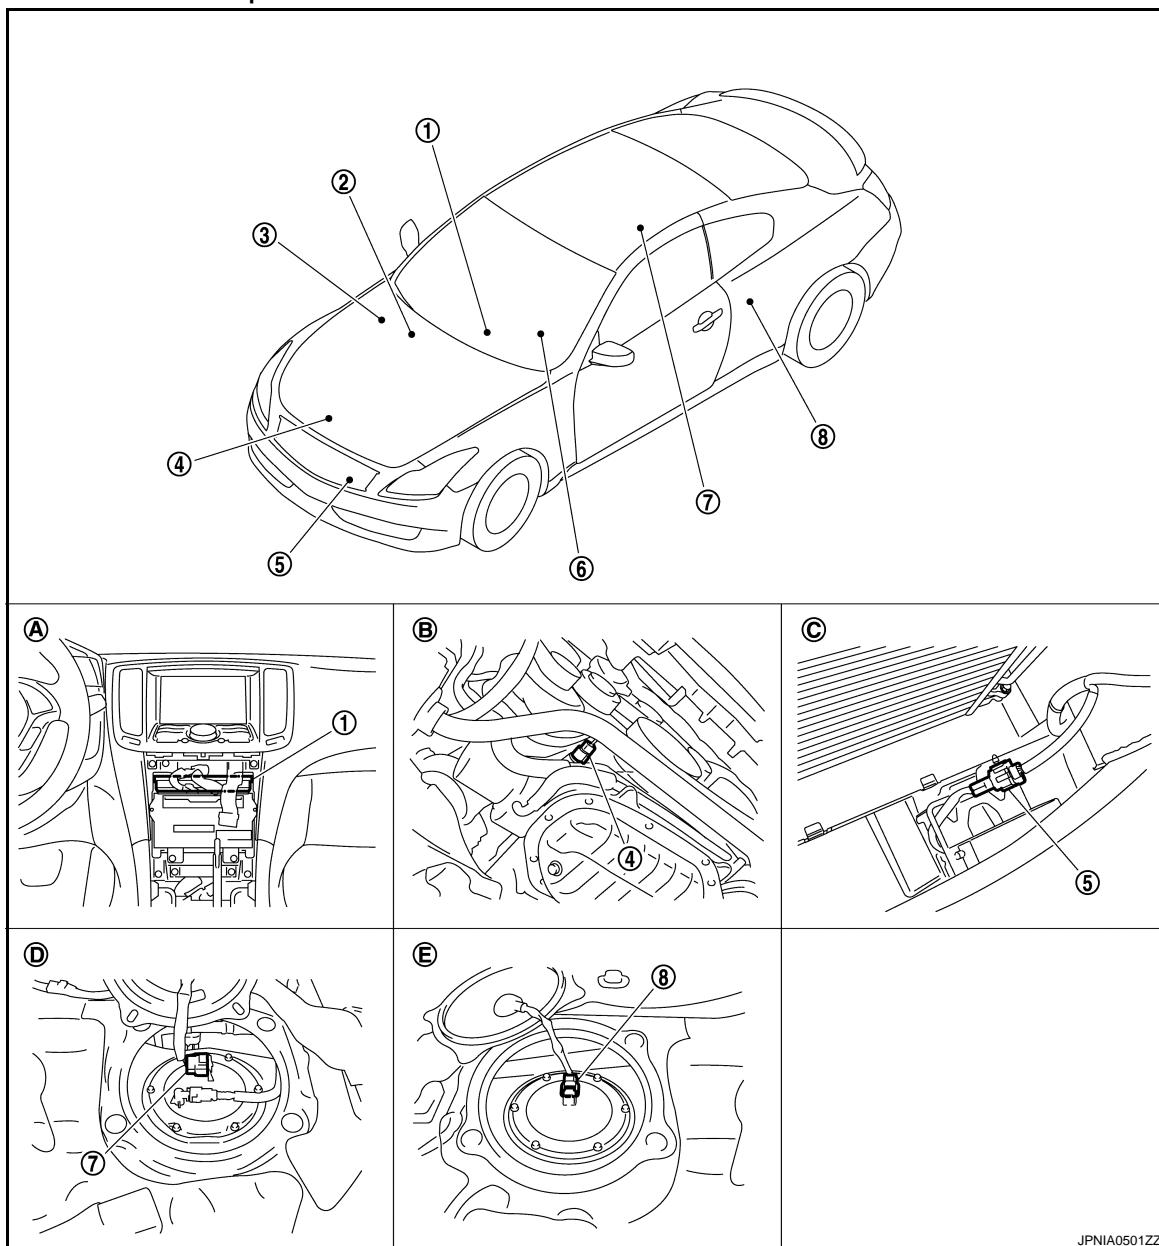
P

METER SYSTEM

< FUNCTION DIAGNOSIS >

FUEL GAUGE : Component Parts Location

INFOID:000000001672048



- | | | |
|--|---------------------------------|----------------------|
| 1. Unified meter and A/C amp. | 2. BCM | 3. IPDM E/R |
| 4. Oil pressure switch | 5. Ambient sensor | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump (main) | 8. Fuel level sensor unit (sub) | |
| A. Behind cluster lid C | B. Oil pan (upper) RH side | C. Condenser (front) |
| D. Rear seat (lower right) | E. Rear seat (lower left) | |

FUEL GAUGE : Component Description

INFOID:000000001606621

Unit	Description
Combination meter	Indicates the fuel gauge according to the fuel level sensor signal received from the unified meter and A/C amp. by means of communication line.
Unified meter and A/C amp.	Transmits the fuel level sensor signal from the fuel level sensor unit to the combination meter by means of communication line.
Fuel level sensor unit	Refer to MWI-54, "Description" .

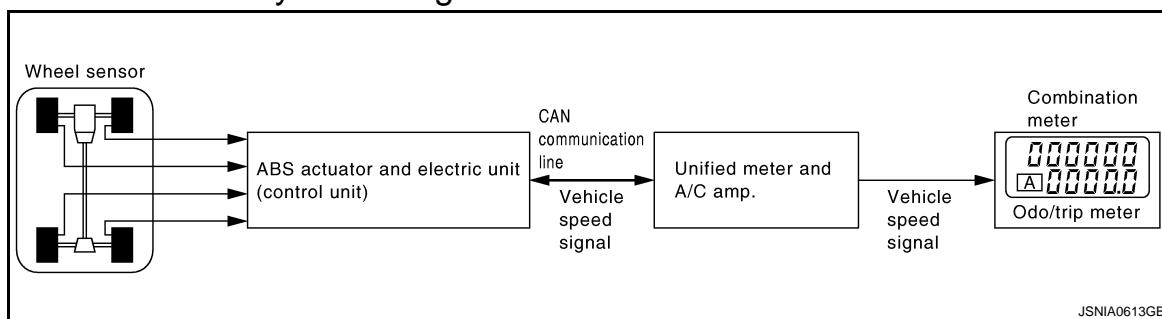
METER SYSTEM

< FUNCTION DIAGNOSIS >

ODO/TRIP METER

ODO/TRIP METER : System Diagram

INFOID:000000001606622



ODO/TRIP METER : System Description

INFOID:000000001606623

- The unified meter and A/C amp. transmits the vehicle speed signal from ABS actuator and electric unit (control unit) to the combination meter.
- The combination meter calculates the vehicle distance according to the vehicle speed signal. The vehicle distance is displayed.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

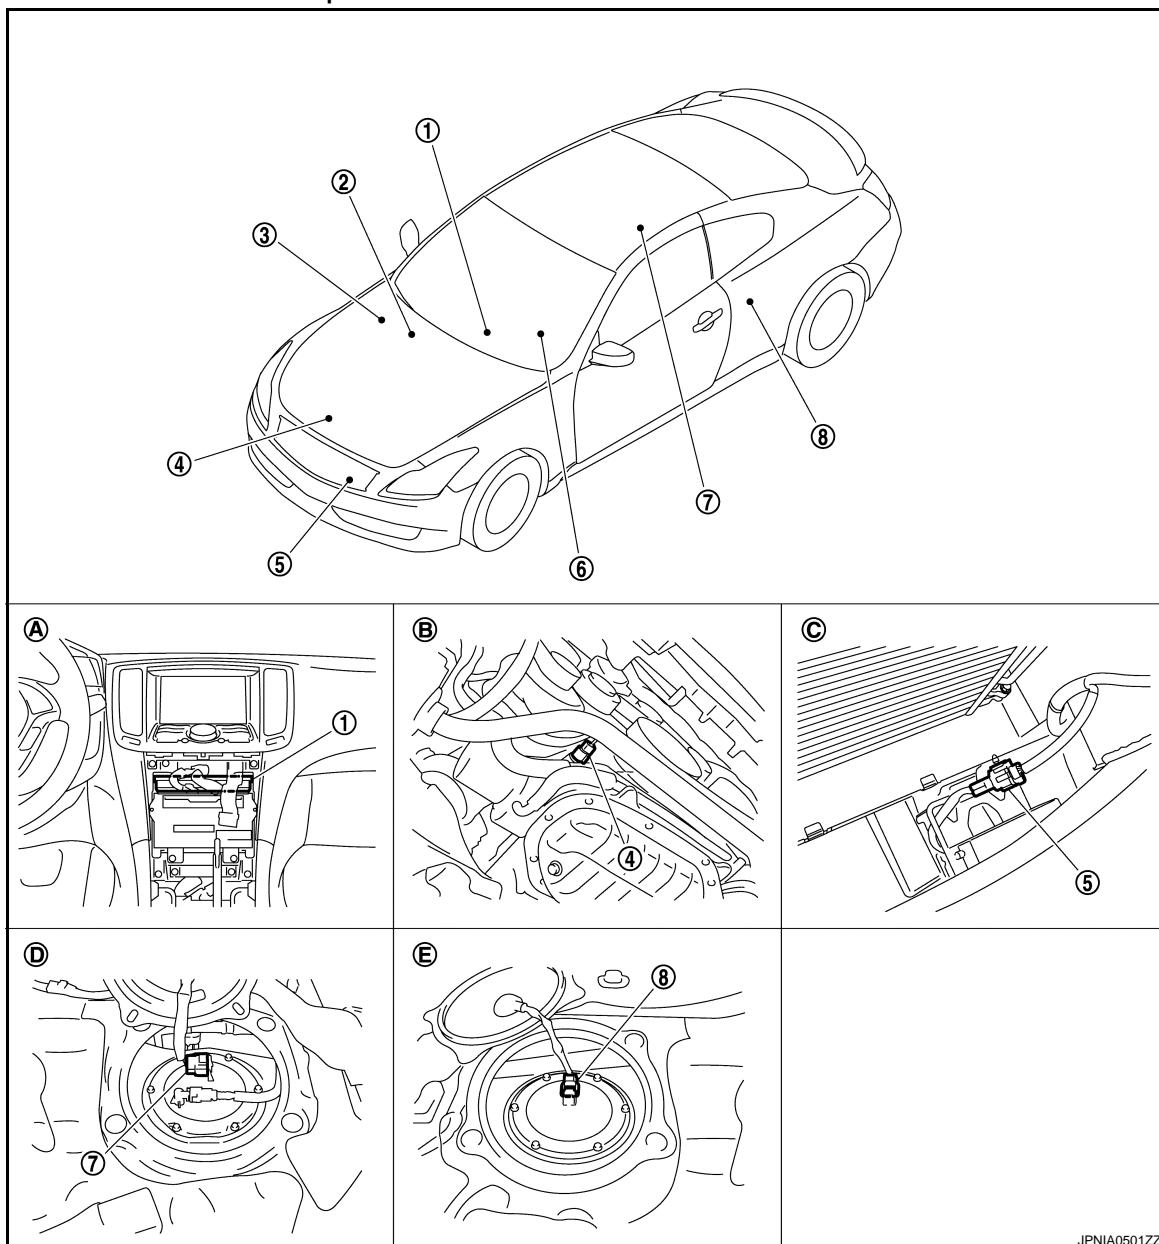
P

METER SYSTEM

< FUNCTION DIAGNOSIS >

ODO/TRIP METER : Component Parts Location

INFOID:000000001672049



JPNIA0501ZZ

- | | | |
|---|---------------------------------|----------------------|
| 1. Unified meter and A/C amp. | 2. BCM | 3. IPDM E/R |
| 4. Oil pressure switch | 5. Ambient sensor | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump
(main) | 8. Fuel level sensor unit (sub) | |
| A. Behind cluster lid C | B. Oil pan (upper) RH side | C. Condenser (front) |
| D. Rear seat (lower right) | E. Rear seat (lower left) | |

ODO/TRIP METER : Component Description

INFOID:000000001606625

Unit	Description
Combination meter	The combination meter calculates the vehicle distance according to the vehicle speed signal. The vehicle distance is displayed.
Unified meter and A/C amp.	The unified meter and A/C amp. transmits the vehicle speed signal from ABS actuator and electric unit (control unit) to the combination meter.
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the unified meter and A/C amp. with CAN communication line.

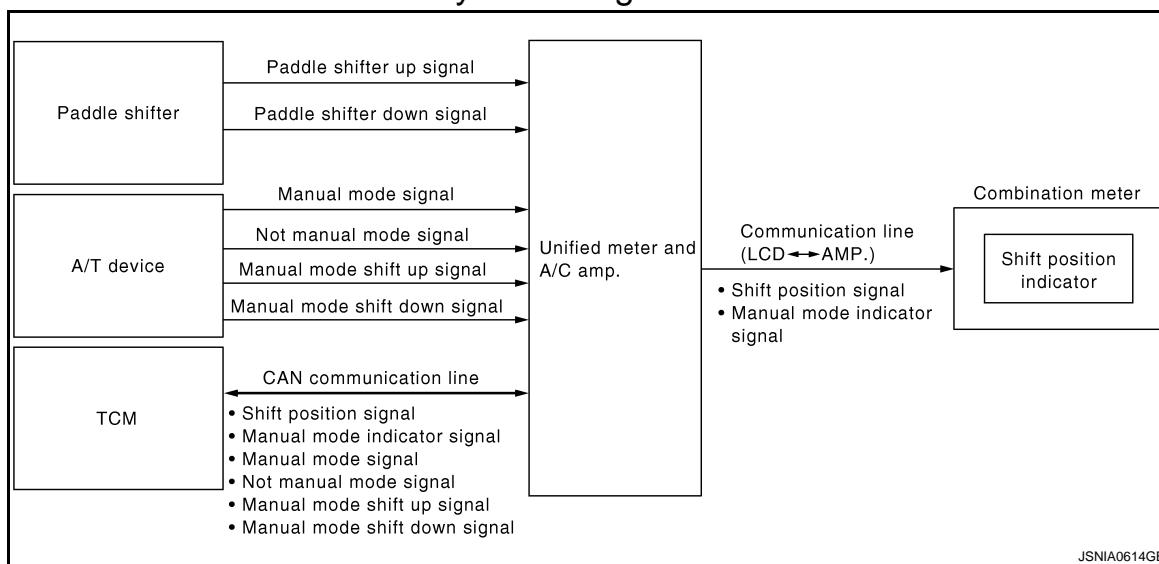
METER SYSTEM

< FUNCTION DIAGNOSIS >

SHIFT POSITION INDICATOR

SHIFT POSITION INDICATOR : System Diagram

INFOID:0000000001606626



SHIFT POSITION INDICATOR : System Description

INFOID:0000000001606627

Shift position is displayed in the information display LCD in the combination meter.

MANUAL MODE

When operated with A/T device

- Unified meter and A/C amp. inputs manual mode signal and manual mode shift-up/down signal from A/T device (manual mode switch), and transmits the signals to TCM with CAN communication line.
- TCM processes manual mode signal and manual mode shift-up/down signal, and transmits manual mode indicator signal and shift position signal to unified meter and A/C amp. with CAN communication line.
- Unified meter and A/C amp. transmits manual mode indicator signal and shift position signal to combination meter with the communication line.
- Combination meter indicates A/T gear position and manual mode indicator, when receiving manual mode indicator signal and shift position signal.

When operated with paddle shifter

- Unified meter and A/C amp. inputs manual mode signal from A/T device (manual mode switch) or the paddle shifter-up/down signal from the paddle shifter, and transmits the signals to TCM with CAN communication line.
- TCM processes manual mode signal and paddle shifter-up/down signal, and transmits manual mode indicator signal and shift position signal to unified meter and A/C amp. with CAN communication line.
- Unified meter and A/C amp. transmits manual mode indicator signal and shift position signal to combination meter with the communication line.
- Combination meter indicates A/T gear position and manual mode indicator, when receiving manual mode indicator signal and shift position signal.

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P

NOT MANUAL MODE

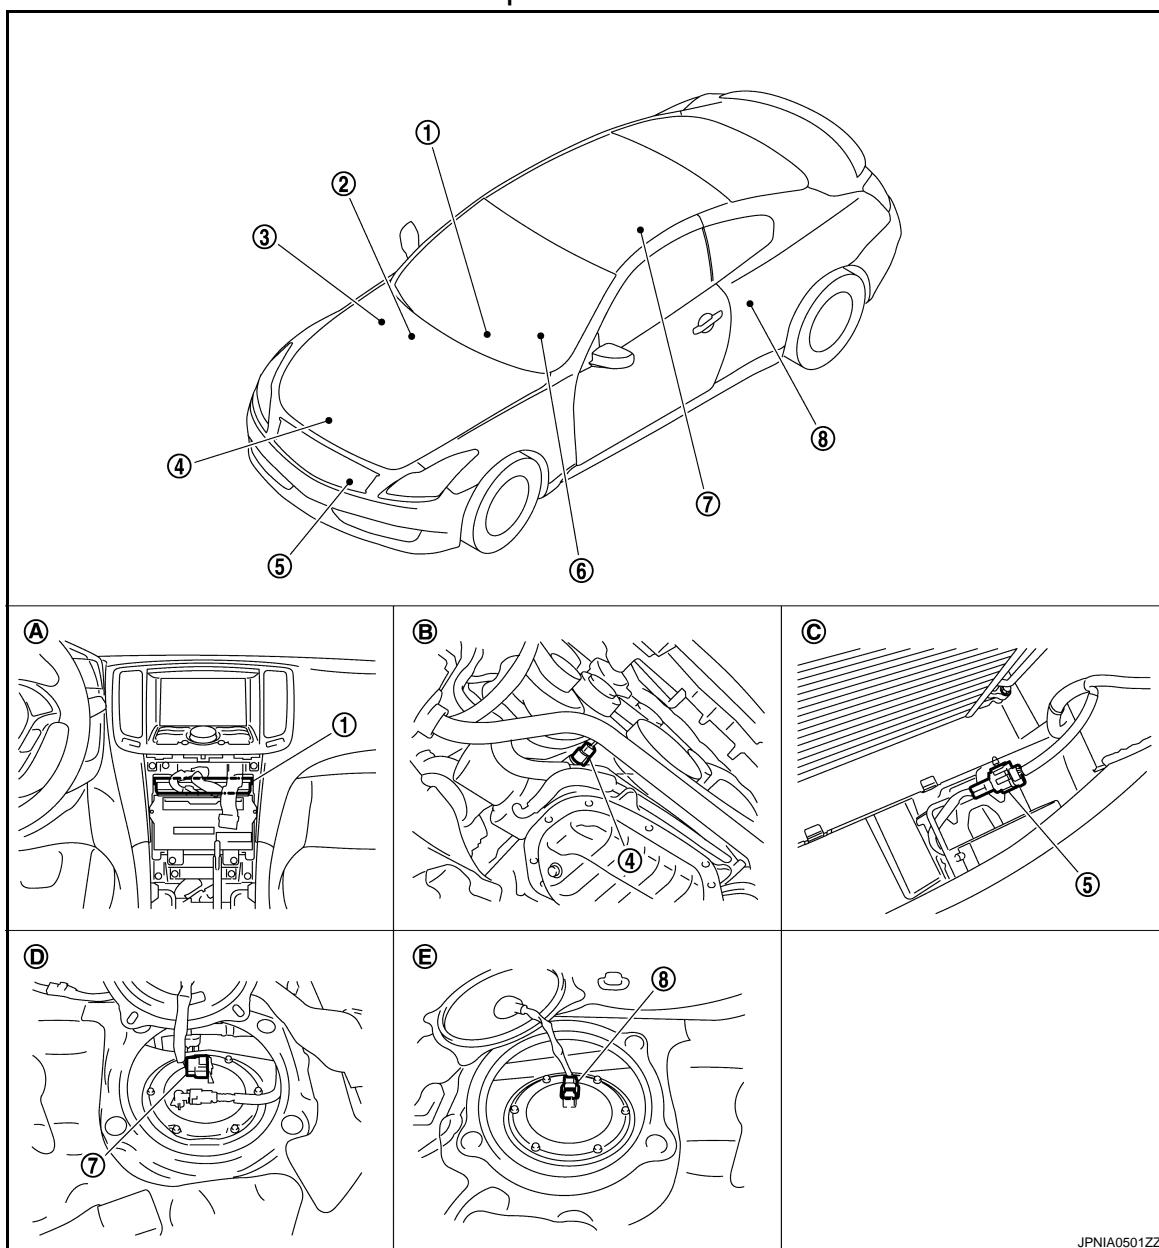
- Unified meter and A/C amp. inputs not manual mode signal from A/T device (manual mode switch), and transmits the signals to TCM with CAN communication line.
- TCM transmits shift position signal to unified meter and A/C amp. with CAN communication line.
- Unified meter and A/C amp. transmits shift position signal to combination meter with the communication line.
- Combination meter indicates shift position when receiving shift position signal.

METER SYSTEM

< FUNCTION DIAGNOSIS >

SHIFT POSITION INDICATOR : Component Parts Location

INFOID:000000001672054



JPNIA0501ZZ

- | | | |
|---|---------------------------------|----------------------|
| 1. Unified meter and A/C amp. | 2. BCM | 3. IPDM E/R |
| 4. Oil pressure switch | 5. Ambient sensor | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump
(main) | 8. Fuel level sensor unit (sub) | |
| A. Behind cluster lid C | B. Oil pan (upper) RH side | C. Condenser (front) |
| D. Rear seat (lower right) | E. Rear seat (lower left) | |

SHIFT POSITION INDICATOR : Component Description

INFOID:000000001606629

Unit	Description
Combination meter	Displays the shift position on the information display with shift position signal and manual mode indicator signal received from unified meter and A/C amp.
Unified meter and A/C amp.	<ul style="list-style-type: none"> Transmits the signals from the A/T device and paddle shifter to TCM with CAN communication line. Transmits shift position signal and manual mode indicator signal received from TMC with CAN communication line to the combination meter by means of communication line.

METER SYSTEM


< FUNCTION DIAGNOSIS >

Unit	Description
A/T device	<p>Transmits the following signals to the unified meter and A/C amp.</p> <ul style="list-style-type: none"> • Manual mode signal • Manual mode shift up signal • Not manual mode signal • Manual mode shift down signal
Paddle shifter	Transmits the paddle shifter up signal and paddle shifter down signal to the unified meter and A/C amp.
TCM	Transmits shift position signal and manual mode indicator signal to the unified meter and A/C amp.

WARNING LAMPS/INDICATOR LAMPS

WARNING LAMPS/INDICATOR LAMPS : System Diagram

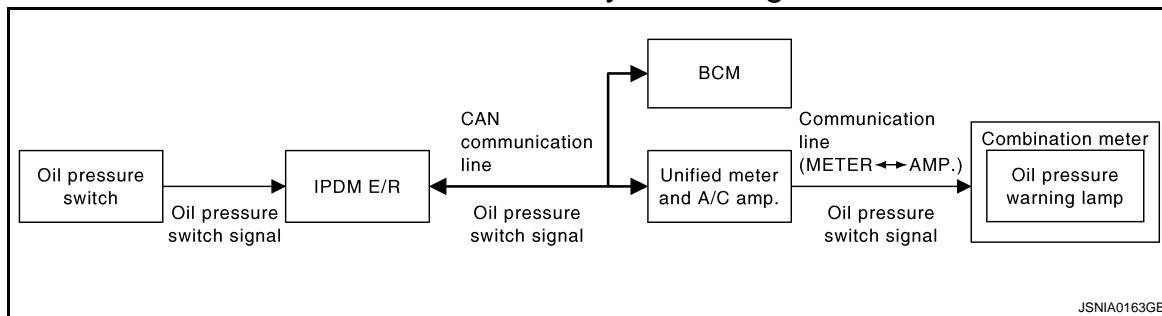INFOID:0000000001606630



WARNING LAMPS/INDICATOR LAMPS : System Description

INFOID:0000000001606631

OIL PRESSURE WARNING LAMP

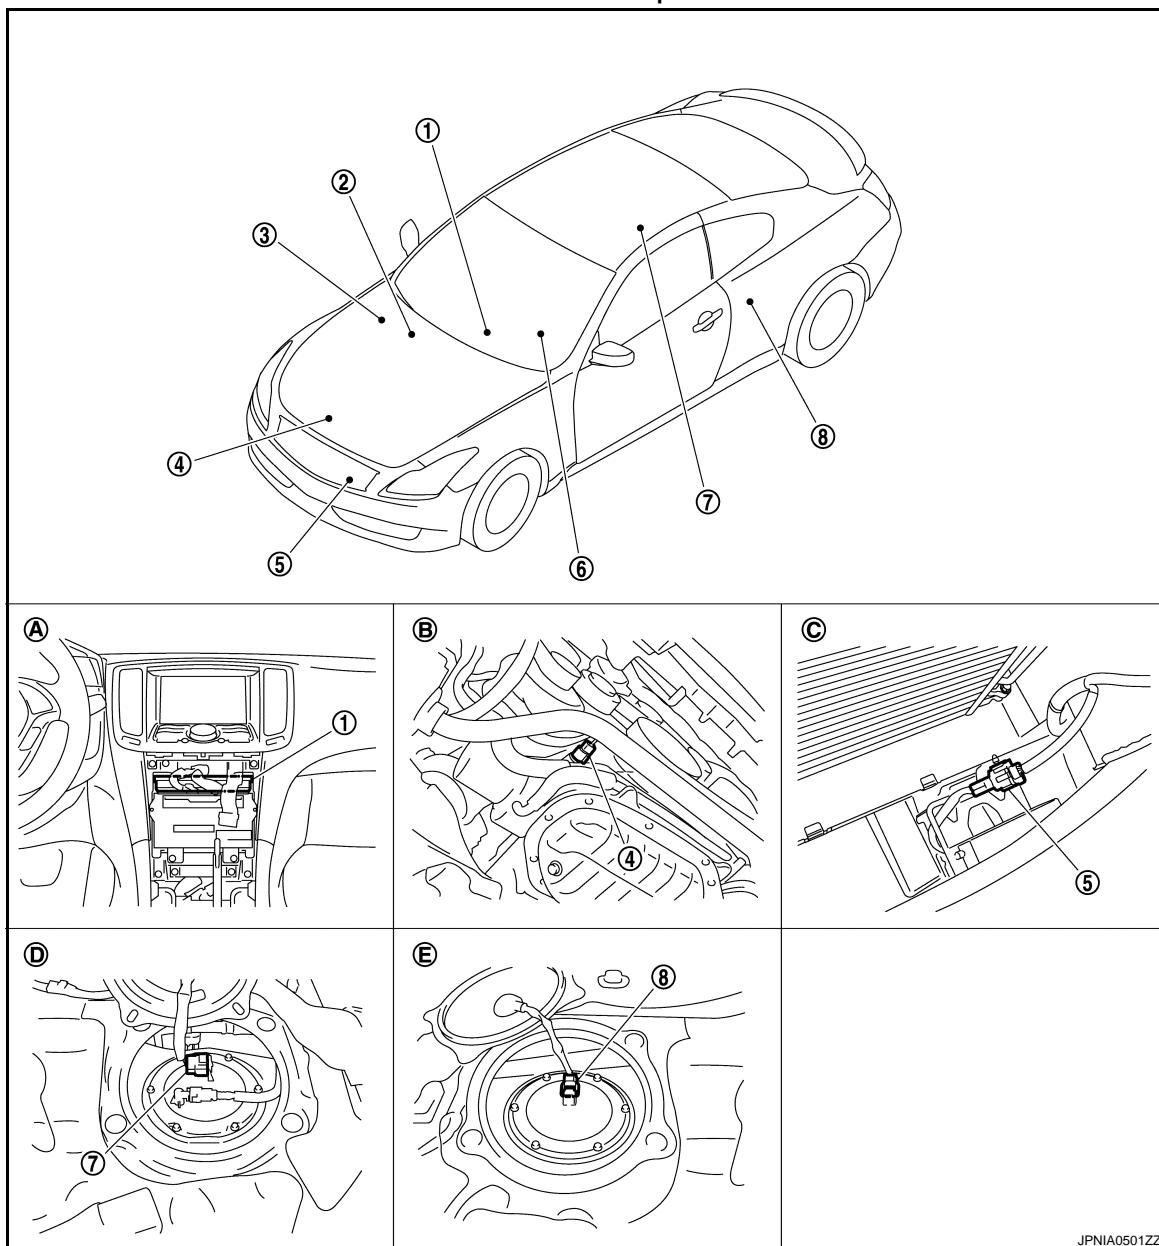
- IPDM E/R inputs oil pressure switch signal from oil pressure switch, and transmits the signal to unified meter and A/C amp. through BCM with CAN communication line.
- Unified meter and A/C amp. transmits oil pressure switch signal to combination meter with communication line.
- Let the combination meter turn oil pressure warning lamp ON with received oil pressure switch signal.

METER SYSTEM

< FUNCTION DIAGNOSIS >

WARNING LAMPS/INDICATOR LAMPS : Component Parts Location

INFOID:000000001672055



JPNIA0501ZZ

- | | | |
|--|---------------------------------|----------------------|
| 1. Unified meter and A/C amp. | 2. BCM | 3. IPDM E/R |
| 4. Oil pressure switch | 5. Ambient sensor | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump (main) | 8. Fuel level sensor unit (sub) | |
| A. Behind cluster lid C | B. Oil pan (upper) RH side | C. Condenser (front) |
| D. Rear seat (lower right) | E. Rear seat (lower left) | |

WARNING LAMPS/INDICATOR LAMPS : Component Description

INFOID:000000001606633

Unit	Description
Combination meter	Turns the oil pressure warning lamp ON/OFF according to the oil pressure switch signal received from the unified meter and A/C amp. by means of communication line.
Unified meter and A/C amp.	Transmits the oil pressure switch signal received from the IPDM E/R with BCM to the combination meter by means of communication line.
IPDM E/R	IPDM E/R reads the ON/OFF signals from the oil pressure switch and transmits the oil pressure switch signal to the unified meter and A/C amp. via BCM with the CAN communication line.

METER SYSTEM

< FUNCTION DIAGNOSIS >

Unit	Description
Oil pressure switch	Refer to MWI-59, "Description".
BCM	Transmits the oil pressure switch signal received from IPDM E/R via CAN communication to the unified meter and A/C amp. via CAN communication line.

A

B

C

D

E

F

G

H

I

J

K

L

M

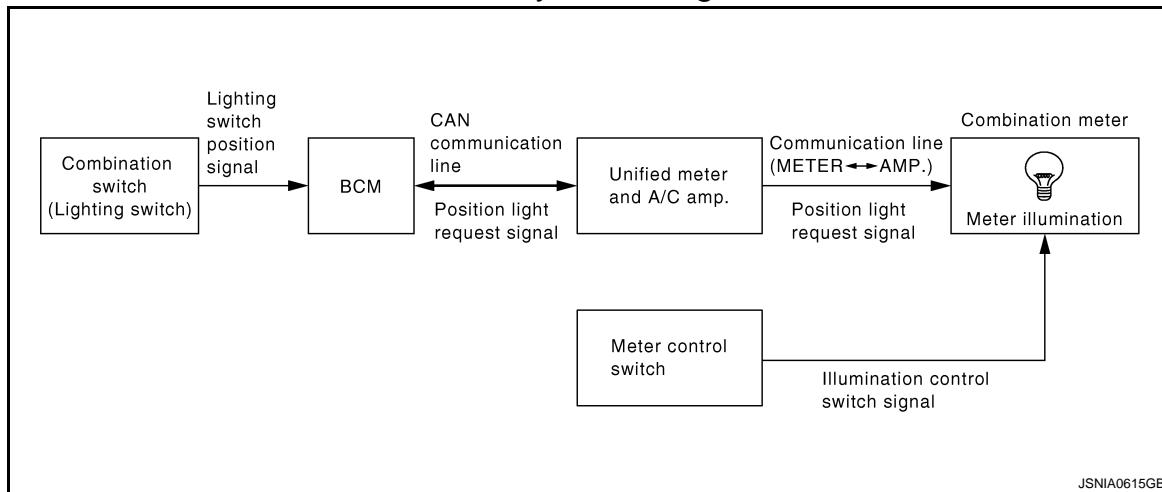
O

P

METER ILLUMINATION CONTROL

METER ILLUMINATION CONTROL : System Diagram

INFOID:0000000001606634



JSNIA0615GB

METER ILLUMINATION CONTROL : System Description

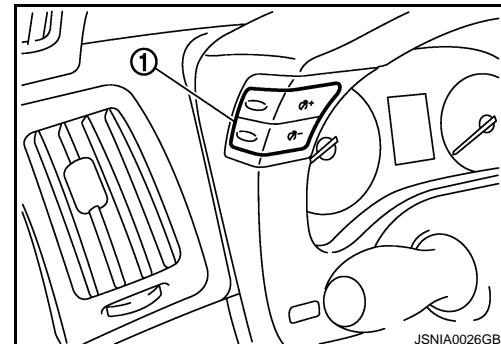
INFOID:0000000001606635

SYSTEM DESCRIPTION

The combination meter controls the meter illumination by the illumination control switch signal from the meter control switch and the position light request signal transmitted by BCM with unified meter and A/C amp.

Daytime Mode

Meter illumination is adjusted to 5 steps by illumination control switch (1) in daytime mode.



JSNIA0026GB

Nighttime Mode

- Combination meter is transferred to nighttime mode with position light request signal from BCM with CAN communication line.
- Meter illumination is adjusted to 22 steps by illumination control switch in nighttime.

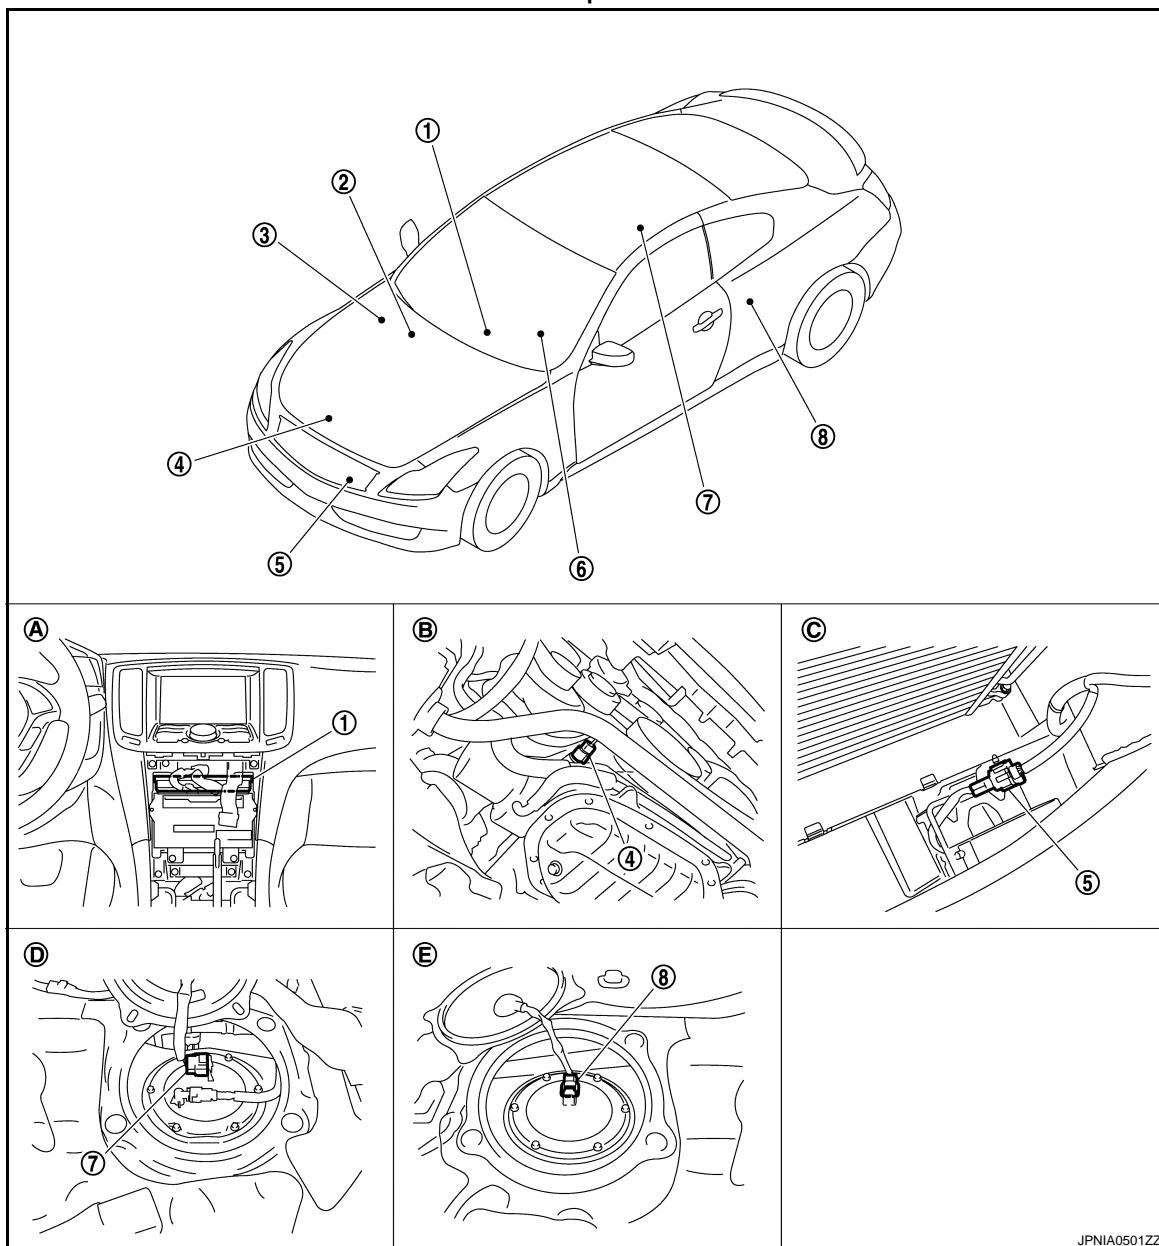
MWI

METER SYSTEM

< FUNCTION DIAGNOSIS >

METER ILLUMINATION CONTROL : Component Parts Location

INFOID:000000001672056



- | | | |
|---|---------------------------------|----------------------|
| 1. Unified meter and A/C amp. | 2. BCM | 3. IPDM E/R |
| 4. Oil pressure switch | 5. Ambient sensor | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump
(main) | 8. Fuel level sensor unit (sub) | |
| A. Behind cluster lid C | B. Oil pan (upper) RH side | C. Condenser (front) |
| D. Rear seat (lower right) | E. Rear seat (lower left) | |

METER ILLUMINATION CONTROL : Component Description

INFOID:000000001606637

Unit	Description
Combination meter	Controls the meter illumination with the illumination control switch signal from the meter control switch and the position light request signal from unified meter and A/C amp.
Unified meter and A/C amp.	Transmits the position light request signal received from BCM via CAN communication to the combination meter by means of communication.

METER SYSTEM


< FUNCTION DIAGNOSIS >

Unit	Description
Meter control switch	Transmits the following signals to the combination meter. • Illumination control switch signal (+) • Illumination control switch signal (-)

INFORMATION DISPLAY

INFORMATION DISPLAY : System Diagram

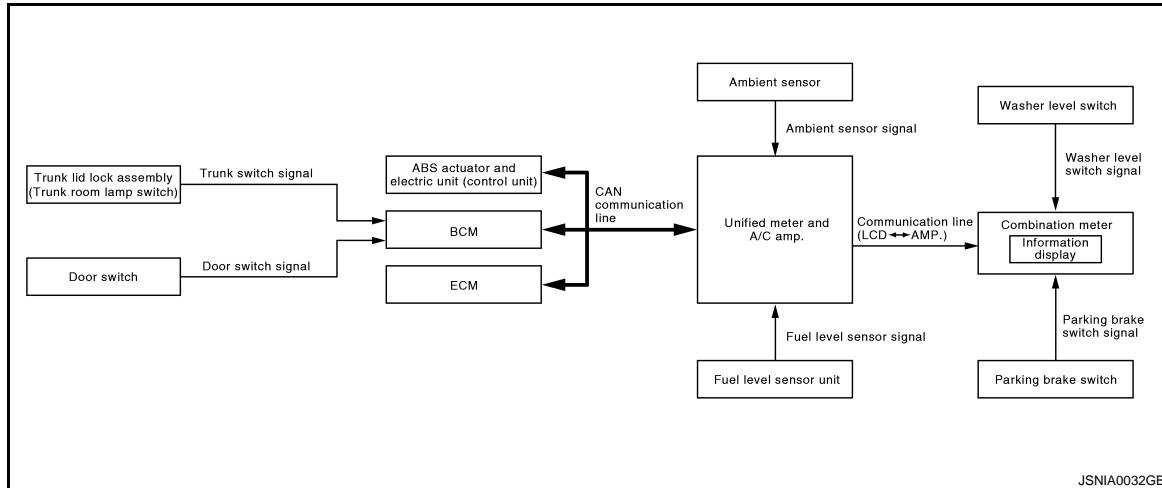INFOID:000000001606638



INFORMATION DISPLAY : System Description

INFOID:000000001606639

DESCRIPTION

- The combination meter retrieves the information required for controlling the operations of the information display from the communication signals from the unified meter and A/C amp., etc.
- The combination meter incorporates a trip computer that displays the warning / information according to the information received from various units.

PARKING BRAKE RELEASE WARNING

The combination meter indicates parking brake release warning judged with the vehicle speed signal received from the unified meter and A/C amp. by means of communication line and the parking brake switch signal from the parking brake switch.

Warning operation condition

Parking brake release warning is judged if all of the following conditions are fulfilled

- Vehicle speed is 7 km/h (4.3 MPH) or higher
- Parking brake switch ON

LOW FUEL WARNING

The combination meter indicates low fuel warning judged with the fuel level sensor signal received from the unified meter and A/C amp.

Warning operation condition

- Fuel level: Approx. 12 ℥ (3-1/8 US gal, 2-5/8 Imp gal) or less

LOW WASHER FLUID WARNING

The combination meter indicates low washer fluid warning judged with the signal from the washer level switch.

Warning operation condition

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

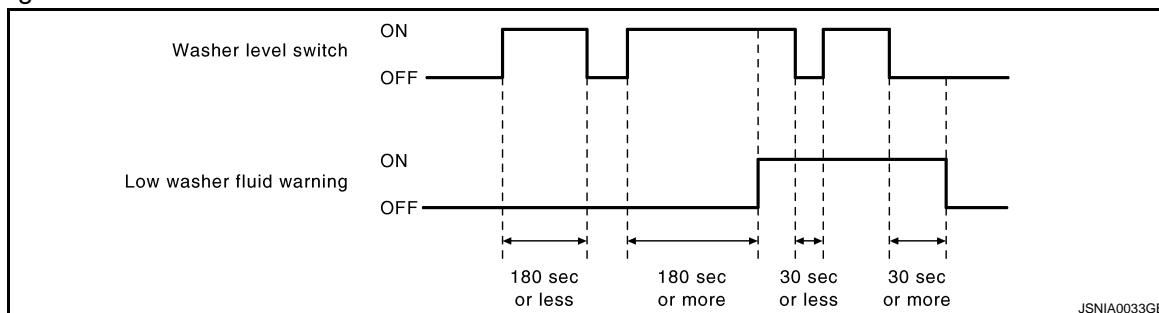
O

P

METER SYSTEM

< FUNCTION DIAGNOSIS >

- Indicates the warning when it is in washer level switch ON condition for 180 seconds or more. Release the warning when it is in washer level switch OFF condition for 30 seconds or more.



DOOR/TRUNK OPEN WARNING

- The combination meter indicates door open warning judged with each door switch signal received from the unified meter and A/C amp. by means of communication line.
- The combination meter indicates trunk open warning judged with the trunk switch signal received from the unified meter and A/C amp. by means of communication line.

INSTANTANEOUS FUEL CONSUMPTION

- The unified meter and A/C amp. receives the fuel consumption monitor signal from ECM and the vehicle speed signal from the ABS actuator and electric unit (control unit) with CAN communication line.
- The unified meter and A/C amp. calculates the instantaneous fuel consumption according to the fuel consumption monitor signal and the vehicle speed signal received with CAN communication line, and transmits it to the combination meter.

AVERAGE FUEL CONSUMPTION

- The unified meter and A/C amp. receives the fuel consumption monitor signal from ECM and the vehicle speed signal from the ABS actuator and electric unit (control unit) with CAN communication line.
- The unified meter and A/C amp. calculates the average fuel consumption according to the fuel consumption monitor signal and the vehicle speed signal received with CAN communication line, and transmits it to the combination meter.
- The average fuel consumption displayed on the information display is uploaded at approximately 30-second intervals.

NOTE:

“___” is displayed for approximately 30 seconds just after the reset operation and after the ignition switch is OFF → ON. It is displayed simultaneously until the vehicle drives approximately 500 m (0.31 mile).

AVERAGE VEHICLE SPEED

- The unified meter and A/C amp. receives the vehicle speed signal from the ABS actuator and electric unit (control unit) via CAN communication line.
- Measures the time during the ignition switch ON with the unified meter and A/C amp.
- The unified meter and A/C amp. calculates the average vehicle speed according to the above signals. These signals are transmitted to the combination meter with the communication line.
- The average vehicle speed displayed on the information display is uploaded at approximately 30-second intervals.

NOTE:

“___” is displayed for 30 seconds just after the reset operation and after the ignition switch is OFF → ON. It is displayed simultaneously until the vehicle drives approximately 500 m (0.31 mile).

TRAVEL TIME

Measures the time during the ignition switch ON with the unified meter and A/C amp., and transmits it to the combination meter by means of communication line.

TRAVEL DISTANCE

- The unified meter and A/C amp. transmits the vehicle speed signal from ABS actuator and electric unit (control unit) to the combination meter.
- The combination meter calculates the vehicle distance according to the vehicle speed signal. The vehicle distance is displayed.

POSSIBLE DRIVING DISTANCE

METER SYSTEM

< FUNCTION DIAGNOSIS >

The unified meter and A/C amp. calculates possible driving distance according to the vehicle speed signal transmitted through CAN communication and the fuel level sensor signal transmitted from the fuel level sensor. These signals are transmitted to the combination meter with the communication line.

NOTE:

- “____” is displayed for 30 seconds after the ignition switch is OFF → ON. It is displayed simultaneously until the vehicle drives approximately 500 m (0.31 mile).
- The indicated values may not match each other when filling the fuel with the ignition switch ON. Refer to MWI-158, "INFORMATION DISPLAY : Description".

AMBIENT AIR TEMPERATURE

- The unified meter and A/C amp. receives the ambient sensor signal from the ambient sensor.
- The unified meter and A/C amp. calculates the ambient temperature according to the ambient sensor signal, and transmits it to the combination meter.
- The indicated temperature is corrected by the ignition switch signal, the ambient sensor detection temperature, and the vehicle speed signal. It does not increase if the vehicle speed is less than 20 km/h (12 MPH).

Correction process (Ignition switch OFF → ON)

The ambient temperature sensor detection temperature is not displayed in real time if all of the following conditions are fulfilled. The indicated temperature before the ignition switch OFF is displayed.

- The ignition switch OFF time is less than 3.5 hours.
- The ambient temperature sensor detection temperature is higher than the indicated temperature before the ignition switch OFF.

Correction process (Ignition switch ON)

Perform the following correction if the ambient sensor detection temperature is higher than the indicated temperature when the vehicle speed is 20 km/h (12 MPH) or more.

- Shorten the update time of the indicated temperature according to the increase of the vehicle speed.
- Increase the indicated temperature by 1°C (34°F) per 1 minute until it reaches to the ambient air temperature detection value when the ambient sensor detection temperature is higher than the indicated temperature at 8°C (46°F) or more.

NOTE:

The ambient sensor input value that is displayed on "Data Monitor" of CONSULT-III is the value before the correction. It may not match the indicated temperature on the information display.

SETTING

Setting item list

Items		Setting range	Setting unit	Description
ALERT	TIME TO REST	No setting - 6 hours	30 minutes, [60 minutes]*	Time to rest is displayed on the information display if the vehicle reached the set travel distance.
	ICY	ON/OFF	—	Low outside temperature is displayed on the information display if the ambient temperature is 3°C (37°F) or less.
MAINTENANCE	ENGINE OIL	No setting - 18,500 miles, (No setting - 30,000 km)	250 miles (500 km), [500 miles (1000 km)]*	The engine oil replacement interval is displayed on the information display if the vehicle reached the set distance.
	OIL FILTER	No setting - 18,500 miles, (No setting - 30,000 km)	250 miles (500 km), [500 miles (1000 km)]*	The oil filter replacement interval is displayed on the information display if the vehicle reached the set distance.
	TIRE	No setting - 18,500 miles, (No setting - 30,000 km)	250 miles (500 km), [500 miles (1000 km)]*	The tire replacement interval is displayed on the information display if the vehicle reached the set distance.
	OTHER	No setting - 18,500 miles, (No setting - 30,000 km)	250 miles (500 km), [500 miles (1000 km)]*	The other replacement interval is displayed on the information display if the vehicle reached the set distance.
DISPLAY	LANGUAGE	ENGLISH/FRANCAIS	—	Changing the language setting can be performed.
	UNIT	US/METRIC	—	Changing the unit setting can be performed.

* : Press and hold the switch (1 second or more).

A

B

C

D

E

F

G

H

I

J

K

L

MWI

O

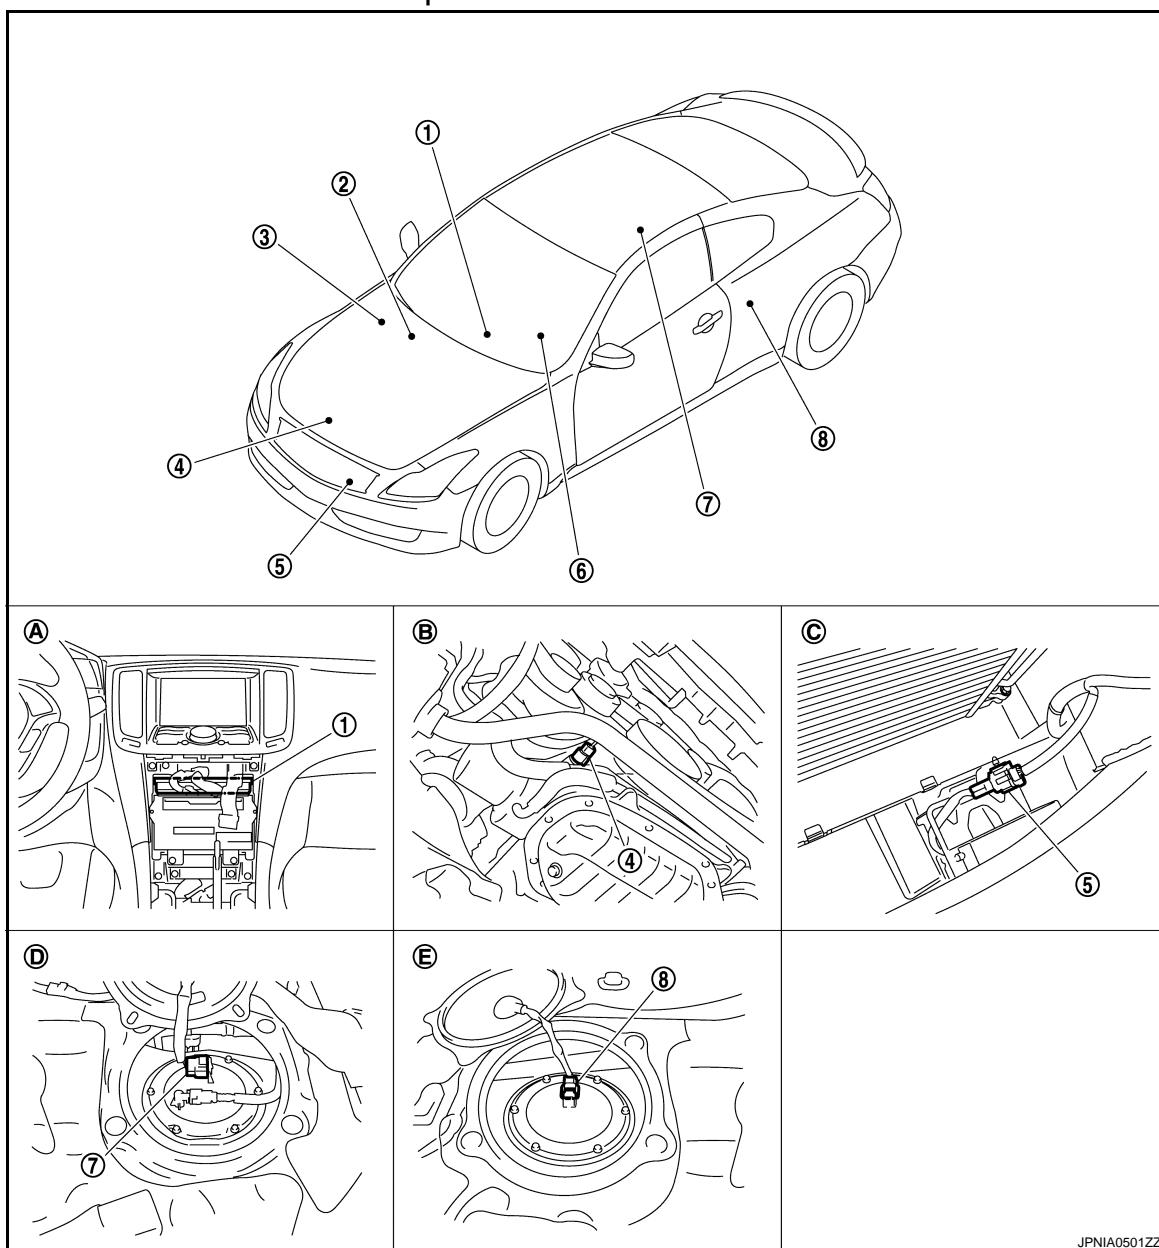
P

METER SYSTEM

< FUNCTION DIAGNOSIS >

INFORMATION DISPLAY : Component Parts Location

INFOID:000000001672057



JPNIA0501ZZ

- | | | |
|---|---------------------------------|----------------------|
| 1. Unified meter and A/C amp. | 2. BCM | 3. IPDM E/R |
| 4. Oil pressure switch | 5. Ambient sensor | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump
(main) | 8. Fuel level sensor unit (sub) | |
| A. Behind cluster lid C | B. Oil pan (upper) RH side | C. Condenser (front) |
| D. Rear seat (lower right) | E. Rear seat (lower left) | |

INFORMATION DISPLAY : Component Description

INFOID:000000001606641

Unit	Description
Combination meter	Controls the information display with the signals received from the unified meter and A/C amp. by means of communication and the signals from various switches and sensors.
Unified meter and A/C amp.	Transmits signals received from various units to the combination meter by means of communication.
Fuel level sensor unit	Refer to MWI-54, "Description" .

METER SYSTEM

< FUNCTION DIAGNOSIS >

Unit	Description
ECM	Transmits the following signals to the unified meter and A/C amp. via CAN communication. <ul style="list-style-type: none">• Engine speed signal• Fuel consumption monitor signal
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the unified meter and A/C amp. via CAN communication.
BCM	Transmits signals provided by various units to the unified meter and A/C amp. via CAN communication.
Meter control switch	Transmits the following signals to the combination meter. <ul style="list-style-type: none">• Enter switch signal• Select switch signal
Washer level switch	Transmits the washer level switch signal to the combination meter.
Parking brake switch	Refer to MWI-61, "Description" .
Door switch	Transmits the door switch signals to BCM.
Trunk room lamp switch	Transmits the room lamp switch signal to BCM.
Ambient sensor	Detects the ambient air temperature and transmits the ambient sensor signal to the unified meter and A/C amp.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

COMPASS

< FUNCTION DIAGNOSIS >

COMPASS

Description


INFOID:0000000001606642

DESCRIPTION

- This electronic compass is able to display 8 primary directions: N, NE, E, SE, S, SW, W, NW.
- The compass switch (1) is used to operate the compass.

Switch Operation

Press	Compass is turned ON/OFF
Press and hold (for 3 - 9 sec.)	Compass display (2) turns to zone variation change mode Compass
Press and hold (for more than 9 sec.)	Compass display turns to calibration mode

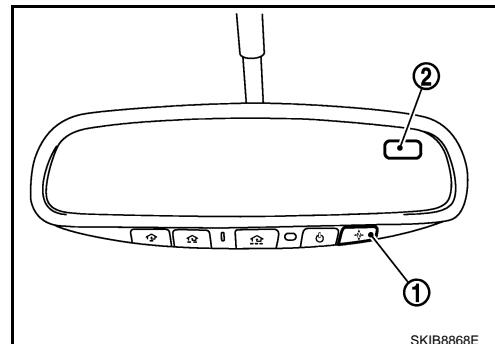


SKIB8868E

- All standard compasses determine direction relative to Magnetic North; however, this electronic compass is designed to display direction relative to True North.
- The difference between Magnetic North and True North varies from place to place across the surface of the earth.
- This electronic compass must be "told" approximately where it is on the earth's surface so that the Magnetic North reading can be properly converted into a True North display.
- To tell the electronic compass where it's at, the earth is separated into numbered "Zone Variances". The Zone Variance number in which the compass is to function must be entered into this electronic compass.
- Each zone is magnetically about 4.2° wide. Typically, anything under 22.5° total zone change is not noticed on the electronic compass display. However, over 22.5° , a reading may be off by one or more primary directions.
- On long trips, a vehicle may leave its original zone and enter one or more new zones. Generally, you do not need to reset the compass zone if you travel between 3 or 4 zones, such as business travel or vacation. The typical driver will not notice any difference on the display within 3 or 4 zones. However, if the vehicle is "permanently" moved to a new location, it is recommended that the compass zone be reset.

ZONE VARIATION SETTING PROCEDURE

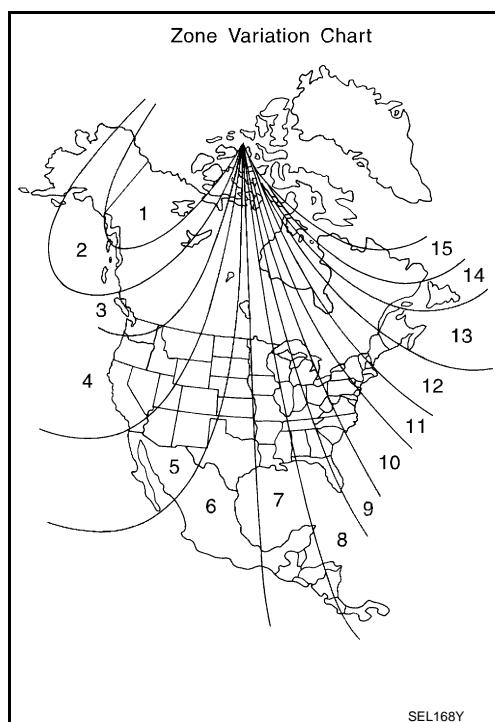1. Press and hold the compass switch for 3 – 9 seconds.
2. The current zone setting appears on the compass display.
3. Find the current geographical location number in the Zone Variation Chart.
4. Select the new zone number. (Press the compass switch until the new zone number appears on the compass display.)
5. After select the new zone number, the compass display will automatically shows a direction within a few seconds.
6. Perform the following Calibration Procedure for more accurate indications.



SEL168Y

COMPASS

< FUNCTION DIAGNOSIS >

CALIBRATION PROCEDURE

NOTE:

The compass calibrates itself under normal driving conditions. However, occasional circumstances may cause the compass to operate inaccurately. Example: Driving from rural (wide open) areas to crowded city areas, or if an aftermarket (i.e., non original equipment) antenna with a magnetic base is attached to the vehicle. Calibrate the mirror compass if the display shows only one direction or a limited number of directions.

NOTE:

- If "magnetic hats" are used in the dealership for vehicle identification, remove the hat from the vehicle before performing the following steps. Do NOT put the hat back on the vehicle after the procedure is completed.
- Drive the vehicle to an open level area; away from large metallic objects, structures, and overhead power lines.
- Turn off "non-essential" electrical accessories (rear window defrost, heater/air conditioning, wipers) and close the doors.

1. Verify the correct compass zone setting for the geographical location.
2. Press and hold the compass switch for more than 9 seconds.
3. "C" is displayed on the compass display, when calibration starts.
4. Drive slowly [less than 8 km/h (5 MPH)] in a circle until the "C / CAL" is replaced with primary headings (N, NE, E, SE, S, SW, W, or NW).

NOTE:

This will require driving at least 2 complete 360 degree circles; 3 complete circles may be required.

5. The compass calibration procedure is now complete. The compass should operate normally.

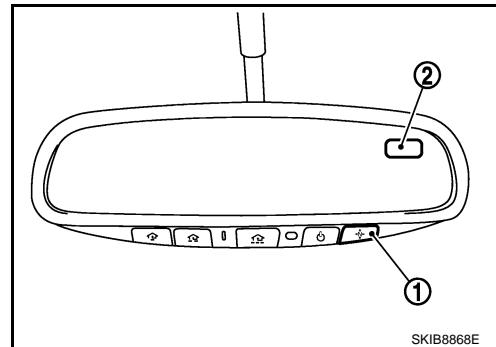
NOTE:

If at any time the compass continually displays the incorrect direction or the reading is erratic or locked, repeat the calibration procedure.

Component Parts Location

INFOID:0000000001606643

- 1 : Compass switch
- 2 : Compass display



Special Repair Requirement

INFOID:0000000001606644

1. PERFORM ZONE VARIATION SETTING

Perform the zone variation setting. Refer to [MWI-32, "Description"](#).

>> GO TO 2.

2. PERFORM CALIBRATION

Perform the calibration. Refer to [MWI-32, "Description"](#).

>> Setting completion

MWI

CLOCK

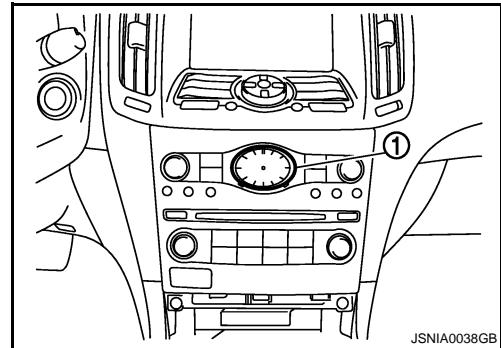
< FUNCTION DIAGNOSIS >

CLOCK

Component Parts Location

INFOID:0000000001606645

1 : Clock



JSNIA0038GB

DIAGNOSIS SYSTEM (METER)

< FUNCTION DIAGNOSIS >

DIAGNOSIS SYSTEM (METER)

Diagnosis Description

INFOID:0000000001606646

SELF-DIAGNOSIS MODE

- Information display LCD segment operation can be checked in self-diagnosis mode.
- Meters/gauges can be checked in self-diagnosis mode.

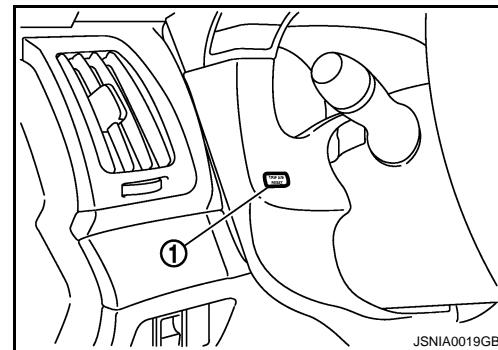
OPERATION PROCEDURE

1. Turn ignition switch ON, and switch the trip meter to "trip A" or "trip B".

NOTE:

If the diagnosis function is activated with "trip A" displayed, the mileage on "trip A" is reset to "0000.0". (The same way for "trip B".)


2. Turn ignition switch OFF.
3. While pressing the trip A/B reset switch (1), turn ignition switch ON again.
4. Make sure that the trip meter displays "0000.0".
5. Press the trip A/B reset switch at least 3 times. (Within 7 seconds after the ignition switch is turned ON.)



JSNIA0019GB

6. The unified meter control unit is turned to self-diagnosis mode.

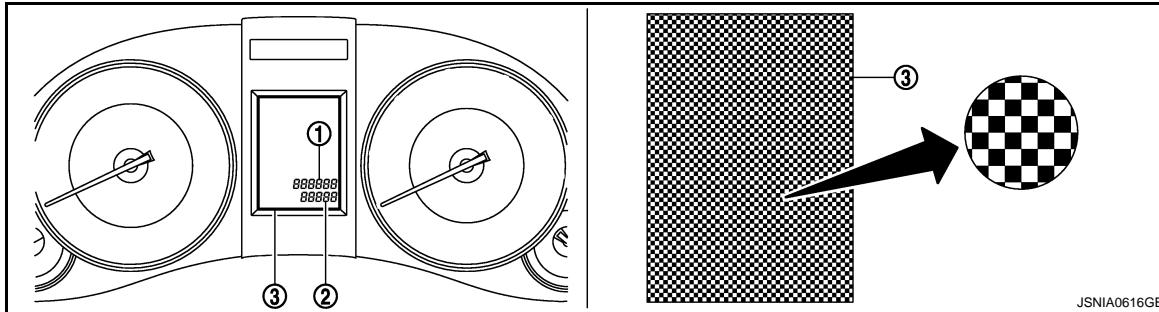- Displays "888888" (1) and "8888.8" (2) in the information display LCD (3) for approximately 5 seconds and then blinks the segment dots of the information display LCD alternately.



JSNIA0616GB

- Water temperature gauge and fuel gauge return to zero, and at the same time.

NOTE:

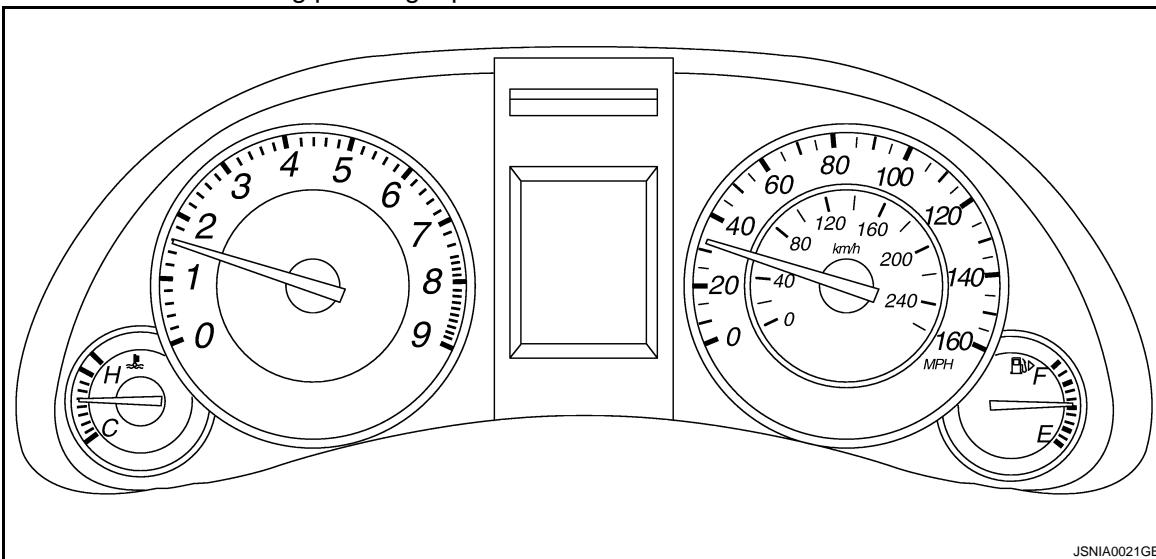
- Check trip A/B reset switch and combination meter power supply and ground circuit when self-diagnosis mode of combination meter does not start. Replace combination meter if they are normal.
- If any of the segments is not displayed, replace combination meter.

MWI

DIAGNOSIS SYSTEM (METER)

< FUNCTION DIAGNOSIS >

7. Each meter activates during pressing trip A/B reset switch.



NOTE:

If any of the meter and gages is not activated, replace combination meter.

DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)

< FUNCTION DIAGNOSIS >

DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)

CONSULT-III Function (METER/M&A)

INFOID:0000000001606647

CONSULT-III APPLICATION ITEMS

CONSULT-III can perform the following diagnosis modes with CAN communication with the unified meter and A/C amp.

System	Diagnosis mode	Description
METER/M&A	Self Diagnostic Result	Unified meter and A/C amp. checks the conditions and displays memorized error.
	Data Monitor	Displays unified meter and A/C amp. input/output data in real time.

SELF DIAG RESULT

Refer to [MWI-100, "DTC Index".](#)

DATA MONITOR

Display Item List

X: Applicable

Display item [Unit]	MAIN SIGNALS	Description
SPEED METER [km/h]	X	<p>Value of vehicle speed signal received from ABS actuator and electric unit (control unit) with CAN communication line.</p> <p>NOTE: 655.35 is displayed when the malfunction signal is received.</p>
SPEED OUTPUT [km/h]	X	<p>Vehicle speed signal value transmitted to other units with CAN communication line.</p> <p>NOTE: 655.35 is displayed when the malfunction signal is received.</p>
ODO OUTPUT [km]		Odometer signal value transmitted to other units with CAN communication line.
TACHO METER [rpm]	X	<p>Value of the engine speed signal received from ECM with CAN communication line.</p> <p>NOTE: 8191.875 is displayed when the malfunction signal is received.</p>
FUEL METER [L]	X	Fuel level indicated on combination meter.
W TEMP METER [°C]	X	<p>Value of engine coolant temperature signal received from ECM with CAN communication line.</p> <p>NOTE: 215 is displayed when the malfunction signal is input.</p>
ABS W/L [On/Off]		Status of ABS warning lamp judged from ABS warning lamp signal received from ABS actuator and electric unit (control unit) with CAN communication line.
VDC/TCS IND [On/Off]		Status of VDC OFF indicator lamp judged from VDC OFF indicator lamp signal received from ABS actuator and electric unit (control unit) with CAN communication line.
SLIP IND [On/Off]		Status of SLIP indicator lamp judged from slip indicator lamp signal received from ABS actuator and electric unit (control unit) with CAN communication line.
BRAKE W/L [On/Off]		<p>Status of brake warning lamp judged from brake warning lamp signal received from ABS actuator and electric unit (control unit) with CAN communication line.</p> <p>NOTE: Displays "Off" if the brake warning lamp is illuminated when the valve check starts, the parking brake switch is turned ON or the brake fluid level switch is turned ON.</p>
DOOR W/L [On/Off]		Status of door warning judged from door switch signal received from BCM with CAN communication line.
TRUNK/GLAS-H [On/Off]		Status of trunk warning judged from trunk switch signal received from BCM with CAN communication line.

DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)

< FUNCTION DIAGNOSIS >

Display item [Unit]	MAIN SIGNALS	Description
HI-BEAM IND [On/Off]		Status of high beam indicator lamp judged from high beam request signal received from BCM with CAN communication line.
TURN IND [On/Off]		Status of turn indicator lamp judged from turn indicator signal received from BCM with CAN communication line.
FR FOG IND [On/Off]		Status of front fog light indicator lamp judged from front fog light request signal received from BCM with CAN communication line.
RR FOG IND [Off]		This item is displayed, but cannot be monitored.
LIGHT IND [On/Off]		Status of light indicator lamp judged from position light request signal received from BCM with CAN communication line.
OIL W/L [On/Off]		Status of oil pressure warning lamp judged from oil pressure switch signal received from IPDM E/R with CAN communication line.
MIL [On/Off]		Status of malfunction indicator lamp judged from malfunctioning indicator lamp signal received from ECM with CAN communication line.
GLOW IND [On/Off]		This item is displayed, but cannot be monitored.
C-ENG2 W/L [On/Off]		This item is displayed, but cannot be monitored.
CRUISE IND [On/Off]		Status of CRUISE indicator judged from ASCD status signal received from ECM with CAN communication line.
SET IND [On/Off]		Status of SET indicator judged from ASCD SET indicator signal received from ECM with CAN communication line.
CRUISE W/L [On/Off]		Status of CRUISE warning lamp judged from ASCD status signal received from ECM with CAN communication line.
BA W/L [Off]		This item is displayed, but cannot be monitored.
ATC/T-AMT W/L [On/Off]		Status of A/T check warning lamp judged from A/T check indicator signal received from TCM with CAN communication line.
4WD W/L [On/Off]		This item is displayed, but cannot be monitored.
4WD LOCK IND [Off]		This item is displayed, but cannot be monitored.
FUEL W/L [On/Off]		Low-fuel warning lamp status judged by the identified fuel level.
WASHER W/L [On/Off]		Status of washer warning lamp judged from washer level switch input to combination meter.
AIR PRES W/L [On/Off]		Status of low tire pressure warning lamp judged from tire pressure signal received from BCM with CAN communication line.
KEY G/Y W/L [On/Off]		Status of key warning lamp (G/Y) judged from key warning signal received from BCM with CAN communication line.
AFS OFF IND [On/Off]		Status of AFS OFF indicator lamp judged from AFS OFF indicator lamp signal received from AFS control unit with CAN communication line.
4WAS/RAS W/L [On/Off]		Status of 4WAS warning lamp judged from 4WAS warning lamp signal received from 4WAS main control unit with CAN communication line.
HDC W/L [On/Off]		This item is displayed, but cannot be monitored.
LDP R IND [On/Off]		This item is displayed, but cannot be monitored.
LDP G Y IND [On/Off]		This item is displayed, but cannot be monitored.

DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)

< FUNCTION DIAGNOSIS >

Display item [Unit]	MAIN SIGNALS	Description
LCD [B&P N, B&P I, ID NG, ROTAT, SFT P, INSRT, BATT, NO KY, OUTKY, LK WN, C&P N, C&P I]		Displays status of Intelligent Key system warning judged from meter display signal received from BCM with CAN communication line.
ACC TARGET [On/Off]		Status of vehicle ahead detection indicator judged from meter display signal received from ICC sensor integrated unit with CAN communication line.
ACC DISTANCE [Off, SHOR, MID, LONG]		Status of set distance indicator judged from meter display signal received from ICC sensor integrated unit with CAN communication line.
ACC OWN VHL [On/Off]		Status of own vehicle indicator judged from meter display signal received from ICC sensor integrated unit with CAN communication line.
ACC SET SPEED		Display ICC set vehicle speed from meter display signal received from ICC sensor integrated unit with CAN communication line.
ACC UNIT [On/Off]		Status of display unit judged from meter display signal received from ICC sensor integrated unit with CAN communication line.
O/D OFF SW [On/Off]		This item is displayed, but cannot be monitored.
SHIFT IND [P, R, N, D, M1, M2, M3, M4, M5]		Status of shift position indicator judged from shift position signal and manual mode indicator signal received from TCM with CAN communication line.
AT S MODE SW [On/Off]		Status of snow mode switch.
AT P MODE SW [On/Off]		This item is displayed, but cannot be monitored.
M RANGE SW [On/Off]		Status of manual mode switch.
NM RANGE SW [On/Off]		Status of not manual mode switch.
AT SFT UP SW [On/Off]		Status of A/T shift up switch.
AT SFT DWN SW [On/Off]		Status of A/T shift down switch.
ST SFT UP SW [On/Off]		Status of paddle shifter up switch.
ST SFT DWN SW [On/Off]		Status of paddle shifter down switch.
COMP F/B SIG [On/Off]		A/C compressor activation condition that ECM judges according to the water temperature and the acceleration degree.
4WD LOCK SW [Off]		This item is displayed, but cannot be monitored.
PKB SW [On/Off]		Status of parking brake switch.
BUCKLE SW [On/Off]		Status of seat belt buckle switch.
BRAKE OIL SW [On/Off]		Status of brake fluid level switch.
DISTANCE [km]		Value of possible driving distance calculated by unified meter and A/C amp.
OUTSIDE TEMP [°C or °F]		<p>Ambient air temperature value converted from ambient sensor signal received from ambient sensor.</p> <p>NOTE: This may not match with the temperature value indicated on the information display. (Because the information display value is a corrected value from the ambient sensor input value.)</p>

DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)

< FUNCTION DIAGNOSIS >

Display item [Unit]	MAIN SIGNALS	Description
FUEL LOW SIG [On/Off]		Status of fuel level low warning signal to output to AV control unit with CAN communication line.
BUZZER [On/Off]	X	Buzzer status (in the combination meter) is judged with the buzzer output signal received from each unit with CAN communication line and the warning output condition of the combination meter.

NOTE:

Some items are not available according to vehicle specification.

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:000000001606648

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with two communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-25, "CAN Communication Signal Chart"](#).

DTC Logic

INFOID:000000001606649

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
U1000	CAN COMM CIRCUIT	When unified meter and A/C amp. is not transmitting or receiving CAN communication signal for 2 seconds or more.	CAN communication system

Diagnosis Procedure

INFOID:000000001606650

1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result" of "METER/M&A".

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-16, "Trouble Diagnosis Flow Chart"](#).
NO >> Refer to [GI-38, "Intermittent Incident"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

U1010 CONTROL UNIT (CAN)

< COMPONENT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

Description

INFOID:0000000001606651

Initial diagnosis of unified meter and A/C amp.

DTC Logic

INFOID:0000000001606652

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
U1010	CONTROL UNIT (CAN)	If any malfunction is detected during initial diagnosis of unified meter and A/C amp. CAN controller	Unified meter and A/C amp.

Diagnosis Procedure

INFOID:0000000001606653

1.REPLACE UNIFIED METER AND A/C AMP.

When DTC "U1010" is detected, replace unified meter and A/C amp.

>> INSPECTION END

B2201 COMMUNICATION ERROR 1

< COMPONENT DIAGNOSIS >

B2201 COMMUNICATION ERROR 1

Description

INFOID:0000000001606654

The communication line (LCD <-> AMP.) is used to communicate signals between the combination meter and the unified meter and A/C amp. in order to control the information display.

DTC Logic

INFOID:0000000001606655

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
B2201	COMM ERROR 1	If a communication error is present in the communication line (LCD <-> AMP.) for 2 seconds or more	Communication line (LCD <-> AMP.) circuit

Diagnosis Procedure

INFOID:0000000001606656

1. CHECK CONNECTOR

Check combination meter, unified meter and A/C amp. and terminals (combination meter side, unified meter and A/C amp. side, and harness side) for looseness or bent.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair terminal or connector.

2. CHECK CONTINUITY COMMUNICATION CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and unified meter and A/C amp. connector.
3. Check continuity between combination meter harness connector terminal and unified meter and A/C amp. harness connector terminal.

Combination meter		Unified meter and A/C amp.		Continuity
Connector	Terminals	Connector	Terminals	
M53	24	M66	14	Existed
	25		34	

4. Check continuity between combination meter harness connector terminal and ground.

Combination meter		Ground	Continuity
Connector	Terminals		
M53	24		Existed
	25		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK UNIFIED METER AND A/C AMP. OUTPUT VOLTAGE

1. Connect unified meter and A/C amp. connector.
2. Turn ignition switch ON.
3. Check voltage between unified meter and A/C amp. harness connector terminal and ground.

B2201 COMMUNICATION ERROR 1

< COMPONENT DIAGNOSIS >

Terminal		(-)	Voltage (Approx.)		
(+) Unified meter and A/C amp.					
Connector	Terminal				
M66	14	Ground	12 V		

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace unified meter and A/C amp.

4. CHECK COMBINATION METER OUTPUT VOLTAGE

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Connect combination meter connector.
4. Turn ignition switch ON.
5. Check voltage between combination meter harness connector terminal and ground.

Terminal		(-)	Voltage (Approx.)		
(+) Combination meter					
Connector	Terminal				
M53	25	Ground	5 V		

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace combination meter.

B2202 COMMUNICATION ERROR 2

< COMPONENT DIAGNOSIS >

B2202 COMMUNICATION ERROR 2

Description

INFOID:0000000001606657

The communication line (METER <-> AMP.) is used to communicate signals between the combination meter and the unified meter and A/C amp. in order to control the information display.

DTC Logic

INFOID:0000000001606658

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
B2202	COMM ERROR 2	If a communication error is present in the communication line (METER <-> AMP.) for 2 seconds or more	Communication line (METER <-> AMP.) circuit

Diagnosis Procedure

INFOID:0000000001606659

1. CHECK CONNECTOR

Check combination meter, unified meter and A/C amp. and terminals (combination meter side, unified meter and A/C amp. side, and harness side) for looseness or bent.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair terminal or connector.

2. CHECK CONTINUITY COMMUNICATION CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and unified meter and A/C amp. connector.
3. Check continuity between combination meter harness connector terminal and unified meter and A/C amp. harness connector terminal.

Combination meter		Unified meter and A/C amp.		Continuity
Connector	Terminals	Connector	Terminals	
M53	2	M66	27	Existed
	3		7	

4. Check continuity between combination meter harness connector terminal and ground.

Combination meter		Ground	Continuity
Connector	Terminals		
M53	2		Existed
	3		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK UNIFIED METER AND A/C AMP. OUTPUT VOLTAGE

1. Connect unified meter and A/C amp. connector.
2. Turn ignition switch ON.
3. Check voltage between unified meter and A/C amp. harness connector terminal and ground.

B2202 COMMUNICATION ERROR 2

< COMPONENT DIAGNOSIS >

Terminal		(-)	Voltage (Approx.)		
(+) Unified meter and A/C amp.					
Connector	Terminal				
M66	27	Ground	5 V		

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace unified meter and A/C amp.

4. CHECK COMBINATION METER OUTPUT VOLTAGE

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Connect combination meter connector.
4. Turn ignition switch ON.
5. Check voltage between combination meter harness connector terminal and ground.

Terminal		(-)	Voltage (Approx.)		
(+) Combination meter					
Connector	Terminal				
M53	3	Ground	5 V		

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace combination meter.

B2205 VEHICLE SPEED

< COMPONENT DIAGNOSIS >

B2205 VEHICLE SPEED

Description

INFOID:0000000001606660

Vehicle speed signal is transmitted from ABS actuator and electric unit (control unit) via CAN communication to unified meter and A/C amp.

DTC Logic

INFOID:0000000001606661

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
B2205	VEHICLE SPEED	If the abnormal vehicle speed signal is input from ABS actuator and electric unit (control unit) for 2 seconds or more	<ul style="list-style-type: none">• Wheel sensor• ABS actuator and electric unit (control unit)

Diagnosis Procedure

INFOID:0000000001606662

1. PERFORM SELF-DIAGNOSIS OF ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform "Self Diagnostic Result" of ABS actuator and electric unit (control unit), and repair or replace malfunctioning parts.

>> Refer to [BRC-26, "CONSULT-III Function".](#)

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

B2267 ENGINE SPEED

< COMPONENT DIAGNOSIS >

B2267 ENGINE SPEED

Description

INFOID:0000000001606663

The engine speed signal is transmitted from ECM to the unified meter and A/C amp. with CAN communication.

DTC Logic

INFOID:0000000001606664

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
B2267	ENGINE SPEED	If ECM continuously transmits abnormal engine speed signals for 2 seconds or more	<ul style="list-style-type: none">• Crankshaft position sensor (POS)• ECM

Diagnosis Procedure

INFOID:0000000001606665

1. PERFORM SELF-DIAGNOSIS OF ECM

Perform "Self Diagnostic Result" of ECM, and repair or replace malfunctioning parts.

>> Refer to [EC-120, "CONSULT-III Function"](#).

B2268 WATER TEMP

< COMPONENT DIAGNOSIS >

B2268 WATER TEMP

Description

INFOID:0000000001606666

The engine coolant temperature signal is transmitted from ECM to the unified meter and A/C amp. via CAN communication.

DTC Logic

INFOID:0000000001606667

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
B2268	WATER TEMP	If ECM continuously transmits abnormal engine coolant temperature signals for 60 seconds or more	<ul style="list-style-type: none">• Engine coolant temperature sensor• ECM

Diagnosis Procedure

INFOID:0000000001606668

1. PERFORM SELF-DIAGNOSIS OF ECM

Perform "Self Diagnostic Result" of ECM, and repair or replace malfunctioning parts.

>> Refer to [EC-120, "CONSULT-III Function"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

POWER SUPPLY AND GROUND CIRCUIT COMBINATION METER

COMBINATION METER : Diagnosis Procedure

INFOID:000000001606669

1.CHECK FUSE

Check for blown fuses.

Power source	Fuse No.
Battery	11
Ignition switch ON or START	4

Is the inspection result normal?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2.CHECK POWER SUPPLY CIRCUIT

Check voltage between combination meter harness connector terminal and ground.

Terminals		Ignition switch	Voltage (Approx.)
(+)	(-)		
Combination meter			
Connector	Terminals		
M53	1	OFF	Battery voltage
	21	ON	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness between combination meter and fuse.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between combination meter harness connector terminal and ground.

Combination meter		Continuity
Connector	Terminals	
	5	
M53	15	
	22	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

UNIFIED METER AND A/C AMP.

UNIFIED METER AND A/C AMP. : Diagnosis Procedure

INFOID:000000001606670

1.CHECK FUSE

Check for blown fuses.

Power source	Fuse No.
Battery	6

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

Power source	Fuse No.
Ignition switch ACC or ON	19
Ignition switch ON or START	3

Is the inspection result normal?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2.CHECK POWER SUPPLY CIRCUIT

Check voltage between unified meter and A/C amp. harness connector terminal and ground.

Terminals		Ignition switch	Voltage (Approx.)
(+)	(-)		
Unified meter and A/C amp.	Connector	Ground	OFF
M67			ACC
54			ON
41			Battery voltage
53			

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness between unified meter and A/C amp. and fuse.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Check continuity between unified meter and A/C amp. harness connector terminal and ground.

Unified meter and A/C amp.		Continuity
Connector	Terminals	
M67	55	Ground
	71	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

BCM (BODY CONTROL MODULE)

BCM (BODY CONTROL MODULE) : Diagnosis Procedure

INFOID:0000000001696926

M

1.CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

MWI

Signal name	Fuse and fusible link No.
Battery power supply	K
	10

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.

O

P

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

- Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)	
(+)	(-)		
BCM			
Connector	Terminal		
M118	1	Ground	
M119	11	Battery voltage	

Is the measurement value normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Continuity
Connector	Terminal	
M119	13	Existed

Does continuity exist?

- YES >> INSPECTION END
NO >> Repair harness or connector.

BCM (BODY CONTROL MODULE) : Special Repair Requirement

INFOID:000000001696927

1.REQUIRED WORK WHEN REPLACING BCM

Initialize control unit. Refer to CONSULT-III operation manual NATS-IVIS/NVIS.

>> Work end.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure

INFOID:000000001696928

1.CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

Signal name	Fuses and fusible link No.
Battery power supply	C
	50
	51

Is the fuse fusing?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.
NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect IPDM E/R connector.
- Check voltage between IPDM E/R harness connector and ground.

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

Terminals		Voltage (Approx.)	
		(-)	
IPDM E/R			
Connector	Terminal	Ground	
E4	1		Battery voltage
	2		

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between IPDM E/R harness connectors and ground.

IPDM E/R		Continuity
Connector	Terminal	Ground
E5	12	
E6	41	Existed

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

FUEL LEVEL SENSOR SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

FUEL LEVEL SENSOR SIGNAL CIRCUIT

Description

INFOID:0000000001606674

The fuel level sensor unit and fuel pump (main) and the fuel level sensor unit (sub) detect the fuel level in the fuel tank and transmit the fuel gauge signal to the unified meter and A/C amp.

Component Function Check

INFOID:0000000001606675

1. CHECK UNIFIED METER AND A/C AMP. OUTPUT SIGNAL

1. Connect the CONSULT-III.
2. Select the "Data Monitor" for the "METER/M&A" and compare the "FUEL METER" monitor value with the fuel gauge reading on the combination meter.

Fuel gauge pointer	Reference value of data monitor [lit.]
Full	Approx. 68.8
Three quarters	Approx. 60
Half	Approx. 39.2
A quarter	Approx. 20.8
Empty	Approx. 5.6

Does monitor value match fuel gauge reading?

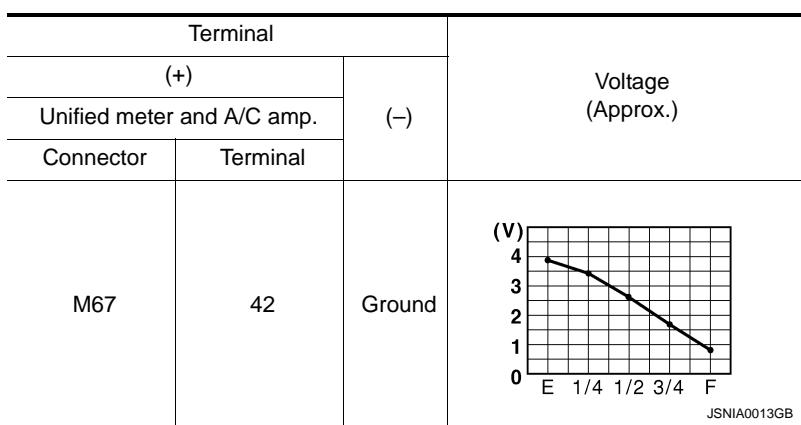
- YES >> INSPECTION END
NO >> Replace combination meter.

Diagnosis Procedure

INFOID:0000000001606676

1. CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between unified meter and A/C amp. harness connector terminal and ground.



Does it match fuel gauge reading?

- YES >> GO TO 2.
NO >> Replace the unified meter and A/C amp.

2. CHECK FUEL LEVEL SENSOR (SUB) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector and fuel level sensor unit (sub) connector.
3. Check continuity between unified meter and A/C amp. harness connector terminal and fuel level sensor unit (sub) harness connector terminal.

FUEL LEVEL SENSOR SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

Unified meter and A/C amp.		Fuel level sensor unit (sub)		Continuity
Connector	Terminal	Connector	Terminal	
M67	42	B21	1	Existed

4. Check continuity between unified meter and A/C amp. harness connector terminal and ground.

Unified meter and A/C amp.		Ground	Continuity
Connector	Terminal		
M67	42		Not existed

Is the inspection result normal?

OK >> GO TO 3.

NG >> Repair harness or connector.

3.CHECK FUEL LEVEL SENSOR (MAIN-SUB) CIRCUIT

1. Disconnect fuel level sensor unit and fuel pump (main) connector.
2. Check continuity between fuel level sensor unit (sub) harness connector terminal and fuel level sensor unit and fuel pump (main) harness connector terminal.

Fuel level sensor unit (sub)		Fuel level sensor unit (main)		Continuity
Connector	Terminal	Connector	Terminal	
B21	2	B22	2	Existed

3. Check continuity between fuel level sensor unit (sub) harness connector terminal and ground.

Fuel level sensor unit (sub)		Ground	Continuity
Connector	Terminal		
B21	2		Not existed

Is the inspection result normal?

OK >> GO TO 4.

NG >> Repair harness or connector.

4.CHECK FUEL LEVEL SENSOR (MAIN) CIRCUIT

Check continuity between fuel level sensor unit and fuel pump (main) harness connector terminal and unified meter and A/C amp. harness connector terminal.

Fuel level sensor unit (main)		Unified meter and A/C amp.		Continuity
Connector	Terminal	Connector	Terminal	
B22	5	M67	58	Existed

Is the inspection result normal?

OK >> GO TO 5.

NG >> Repair harness or connector.

5.CHECK INSTALLATION CONDITION

Check fuel level sensor unit installation, and check whether the float arm interferes or binds with any of the internal components in the fuel tank.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Install the fuel level sensor unit properly.

Component Inspection

INFOID:0000000001606677

1.REMOVE FUEL LEVEL SENSOR UNIT

Remove the fuel level sensor unit. Refer to [FL-5, "Removal and Installation"](#).

FUEL LEVEL SENSOR SIGNAL CIRCUIT


< COMPONENT DIAGNOSIS >

>> GO TO 2.

2.CHECK FUEL LEVEL SENSOR UNIT AND FUEL PUMP (MAIN)

Check the resistance between fuel level sensor unit and fuel pump (main).

Terminal	Float position	Resistance value (Ω)
2	Full (A)	Approx. 3
	Empty (B)	Approx. 80

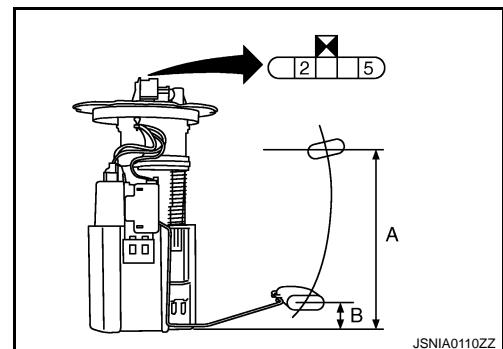

Standard float position

Float position [mm (in)]	
Full	Approx. 210 (8.27)
Empty	Approx. 30 (1.18)

Is the inspection result OK?


YES >> GO TO 3.

NO >> Replace fuel level sensor unit and fuel pump (main).

3.CHECK FUEL LEVEL SENSOR UNIT (SUB)

Inspect the resistance of fuel level sensor unit (sub).

Terminal	Float position	Resistance value (Ω)
1	Full (A)	Approx. 3
	Empty (B)	Approx. 43

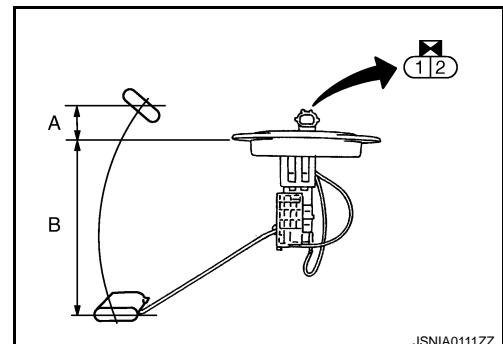

Standard float position

Float position [mm (in)]	
Full	Approx. 9 (0.35)
Empty	Approx. 179 (7.05)

Is the inspection result OK?

YES >> INSPECTION END

NO >> Replace fuel level sensor unit (sub).

METER CONTROL SWITCH SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

METER CONTROL SWITCH SIGNAL CIRCUIT

Description

INFOID:0000000001606678

Transmits the following signals to the combination meter.

-  (Illumination control) switch signal (+)
-  (Illumination control) switch signal (-)
- Trip A/B reset switch signal
-  (select) switch signal
-  (enter) switch is pressed

Diagnosis Procedure

INFOID:0000000001606679

1.CHECK METER CONTROL SWITCH INPUT SIGNAL

1. Turn the ignition switch ON.
2. Measure voltage between the following terminals of the combination meter.

Terminal No.	Condition	Voltage
36 - 16	When  (select) switch is pressed	0 V
	Other than the above	5 V
37 - 16	When  (enter) switch is pressed	0 V
	Other than the above	5 V
38 - 16	When trip A/B reset switch is pressed	0 V
	Other than the above	5 V
39 - 16	When  (illumination control) switch is pressed	0 V
	Other than the above	5 V
40 - 16	When  (illumination control) switch is pressed	0 V
	Other than the above	5 V

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.CHECK METER CONTROL SWITCH SIGNAL CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the combination meter and meter control switch connectors.
3. Check continuity between combination meter harness connector terminal and meter control switch harness connector terminal.

MWI

Combination meter		Meter control switch		Continuity
Connector	Terminals	Connector	Terminals	
M53	16	M54	7	Existed
	36		2	
	37		1	
	39		10	
	40		9	
	38		5	

4. Check continuity between combination meter harness connector terminal and ground.

METER CONTROL SWITCH SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

Combination meter		Ground	Continuity
Connector	Terminals		
M53	16		
	36		
	37		
	39		
	40		
	38		

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

Component Inspection

INFOID:000000001606680

1. CHECK METER CONTROL SWITCH UNIT

1. Turn the ignition switch OFF.
2. Disconnect the meter control switch connector.
3. Check continuity of the meter control switch.

Connector	Terminal No.		Operation and status	Continuity
M54	2	7	When (select) switch is pressed	Existed
			Other than the above	Not existed
	1	7	When (enter) switch is pressed	Existed
			Other than the above	Not existed
	5	7	When trip A/B reset switch is pressed	Existed
			Other than the above	Not existed
	10	7	When (illumination control) switch is pressed	Existed
			Other than the above	Not existed
	9	7	When + (illumination control) switch is pressed	Existed
			Other than the above	Not existed

Is the inspection result OK?

YES >> INSPECTION END

NO >> Replace the meter control switch.

OIL PRESSURE SWITCH SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

OIL PRESSURE SWITCH SIGNAL CIRCUIT

Description

INFOID:0000000001606681

Detects the engine oil pressure and transmits the oil pressure switch signal to IPDM E/R.

Component Function Check

INFOID:0000000001606682

1. CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

1. Connect the CONSULT-III.
2. Select the "Data Monitor" for the "METER/M&A" and check the "OIL W/L" monitor value.

"OIL W/L"

Ignition switch ON	: On
Engine running	: Off

>> INSPECTION END

Diagnosis Procedure

INFOID:0000000001606683

1. CHECK OIL PRESSURE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and oil pressure switch connector.
3. Check continuity between IPDM E/R harness connector terminal and oil pressure switch harness connector terminal.

IPDM E/R		Oil pressure switch		Continuity
Connector	Terminal	Connector	Terminal	
E6	75	F37	1	Existed

4. Check continuity between IPDM E/R harness connector terminal and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E6	75		Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.


Component Inspection

INFOID:0000000001606684

1. CHECK OIL PRESSURE SWITCH

Check continuity between oil pressure switch and ground.

Condition	Continuity
Engine stopped	Existed
Engine running	Not existed

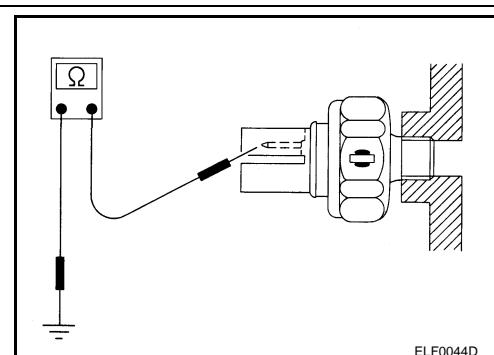

ELF0044D

Is the inspection result normal?

OIL PRESSURE SWITCH SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

YES >> INSPECTION END

NO >> Replace the oil pressure switch.

PARKING BRAKE SWITCH SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

PARKING BRAKE SWITCH SIGNAL CIRCUIT

Description

INFOID:0000000001606685

Transmits the parking brake switch signal to the combination meter.

Component Function Check

INFOID:0000000001697518

1. CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

1. Connect the CONSULT-III.
2. Select the "Data Monitor" for the "METER/M&A" and check the "PKB SW" monitor value.

"PKB SW"

Parking brake is applied	: On
Parking brake is released	: Off

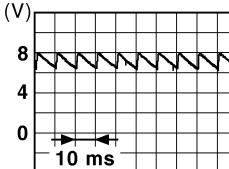
>> INSPECTION END

Diagnosis Procedure (A/T models)

INFOID:0000000001606686

1. CHECK COMBINATION METER INPUT SIGNAL

1. Turn ignition switch ON.
2. Check the voltage and waveform between combination meter harness connector terminal and ground.

Terminal		Condition	Voltage (Approx.)		
(+) (-)					
Combination meter	Connector Terminal				
M53	27	Ground	Parking brake applied		
			0 V		
					
			JSNIA0007GB		

Is the inspection result normal?

YES >> INSPECTION END
NO >> GO TO 2.

2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

MWI

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and parking brake switch connector.
3. Check continuity between combination meter harness connector terminal and parking brake switch harness connector terminal.

Combination meter		Parking brake switch		Continuity
Connector	Terminal	Connector	Terminal	
M53	27	E107	1	Existed

4. Check continuity between combination meter harness connector terminal and ground.

O

P

PARKING BRAKE SWITCH SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

Combination meter		Ground	Continuity
Connector	Terminal		Not existed
M53	27		

Is the inspection result normal?

YES >> INSPECTION END

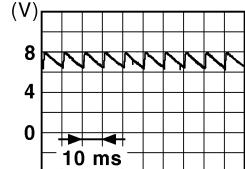
NO >> Repair harness or connector.

Diagnosis Procedure (M/T models)

INFOID:0000000001606687

1. CHECK COMBINATION METER INPUT SIGNAL

1. Turn ignition switch ON.
2. Check the voltage and waveform between combination meter harness connector terminal and ground.

Terminals		Condition	Voltage (Approx.)		
(+)					
Combination meter					
Connector	Terminal				
M53	27	Parking brake applied	0 V		
		Parking brake released			

JSNIA0007GB

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and parking brake switch connector.
3. Check continuity between combination meter harness connector terminal and parking brake switch harness connector terminal.

Combination meter		Parking brake switch		Continuity
Connector	Terminal	Connector	Terminal	
M53	27	B14	1	Existed

4. Check continuity between combination meter harness connector terminal and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M53	27		
			Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

Component Inspection

INFOID:0000000001606688

1. CHECK PARKING BRAKE SWITCH

PARKING BRAKE SWITCH SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

Check parking brake switch. Refer to [BRC-72, "Component Inspection"](#).

Is the inspection result normal?

YES >> INSPECTION END.

NO >> Replace parking brake switch.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

WASHER LEVEL SWITCH SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

WASHER LEVEL SWITCH SIGNAL CIRCUIT

Description

INFOID:0000000001606689

Transmits the washer level switch signal to the combination meter.

Diagnosis Procedure

INFOID:0000000001606690

1.CHECK WASHER LEVEL SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and washer level switch connector.
3. Check continuity between combination meter harness connector terminal and washer level switch harness connector terminal.

Combination meter		Washer level switch		Continuity
Connector	Terminal	Connector	Terminal	
M53	31	E32	1	Existed

4. Check continuity between combination meter harness connector terminal and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M53	31		Not existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Repair harness or connector.

Component Inspection

INFOID:0000000001606691

1.CHECK WASHER LEVEL SWITCH

1. Turn ignition switch OFF.
2. Disconnect washer level switch connector.
3. Check washer level switch.

Terminal		Washer level switch	Continuity
1	2	ON	Existed
		OFF	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Replace washer level switch. Refer to [WW-85, "Removal and Installation"](#).

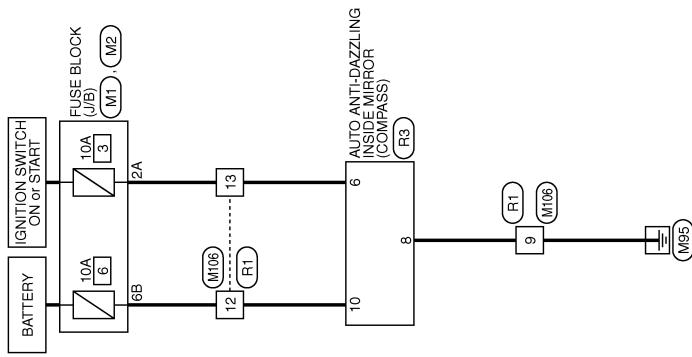
COMPASS

< COMPONENT DIAGNOSIS >

COMPASS

Wiring Diagram - COMPASS -

INFOID:0000000001606692



COMPASS

COMPASS

< COMPONENT DIAGNOSIS >

COMPASS


Connector No.	M1	Connector No.	M2
Connector Name	FUSE BLOCK (J/B)	Connector Name	FUSE BLOCK (J/B)
Connector Type	NS30FW-M2	Connector Type	NS10FW-OS



Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
6B	Y	-	9	B	-
2A	G	-	12	G	-

Terminal No.	Color of Wire	Signal Name [Specification]
10	GR	-
11	BR	-

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	TK10FW-NS8



Terminal No.	Color of Wire	Signal Name [Specification]
9	B	-
12	GR	-
13	BR	-

JCNWA0446GE

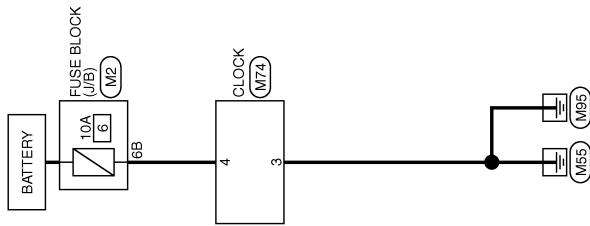
CLOCK

< COMPONENT DIAGNOSIS >

CLOCK

Wiring Diagram - CLOCK -

INFOID:0000000001606693



CLOCK


2006/09/15

JCNWA0014GE

MWI

CLOCK

< COMPONENT DIAGNOSIS >

CLOCK		
Connector No.	M2	M74
Connector Name	FUSE BLOCK (J/B)	CLOCK
Connector Type	NS10FW-CS	TH04FW-NH
		
		
		
Terminal No.		
Color of Wire	Signal Name [Specification]	Signal Name [Specification]
GB	-	-
Y		
Terminal No.		
	Color or Wire	Signal Name
	3	B
	4	Y
Signal Name [Specification]		
GND		
BAT		

JCNWA0447GE

COMBINATION METER

< ECU DIAGNOSIS >

ECU DIAGNOSIS COMBINATION METER

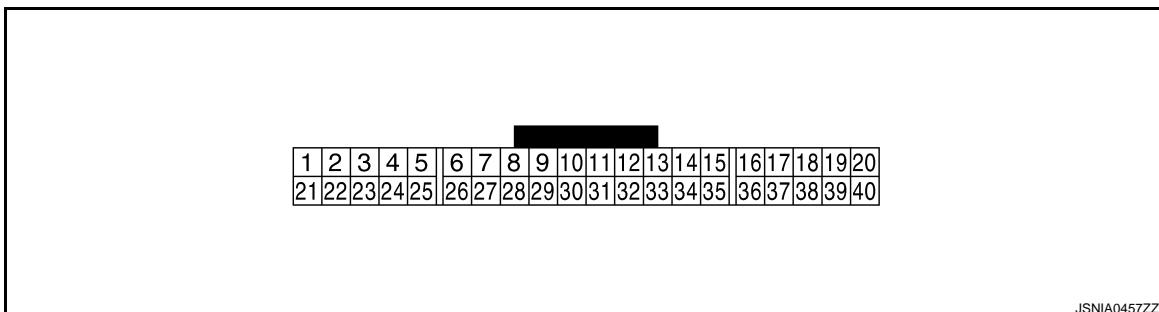
Reference Value

INFOID:000000001606694



VALUES ON THE DAIGNOSIS TOOL

Refer to [MWI-83, "Reference Value".](#)

TERMINAL LAYOUT



PHYSICAL VALUES

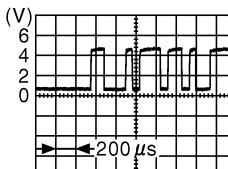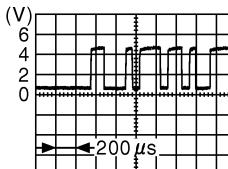Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (V)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
2 (LG)	Ground	Communication signal (METER→AMP.)	Output	Ignition switch ON	—	 JSNIA0027GB
3 (GR)	Ground	Communication signal (AMP.→ METER)	Input	Ignition switch ON	—	 JSNIA0027GB
5 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
6 (W)	Ground	Alternator signal	Input	Ignition switch ON	Charge warning lamp ON	0 V
					Charge warning lamp OFF	12 V
7 (LG)	Ground	Air bag signal	Input	Ignition switch ON	Air bag warning lamp ON	4 V
					Air bag warning lamp OFF	0 V
10 (R)	Ground	Security signal	Input	Ignition switch OFF	Security warning lamp ON	0 V
					Security warning lamp OFF	12 V

A

B

C

D

E

F

G

H

I

J

K

L

M

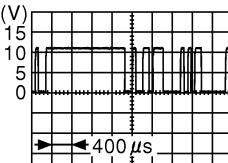
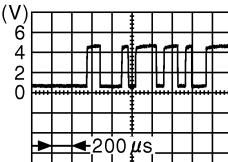
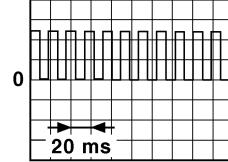
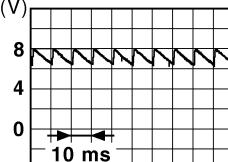
MWI

O

P



COMBINATION METER

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
15 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
16 (B)	Ground	Meter control switch ground	—	Ignition switch ON	—	0 V
21 (R)	Ground	Ignition signal	Input	Ignition switch ON	—	12 V
22 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
24 (BR)	Ground	Communication signal (LCD→AMP.)	Output	Ignition switch ON	—	 <small>JSNIA0028GB</small>
25 (Y)	Ground	Communication signal (AMP.→LCD)	Input	Ignition switch ON	—	 <small>JSNIA0027GB</small>
26 (R)	Ground	Vehicle speed signal (8-pulse)	Input	Ignition switch ON	Speedometer operated [When vehicle speed is approx. 40 km/h (25 MPH)]	NOTE: The maximum voltage varies depending on the specification (destination unit).  <small>JSNIA0012GB</small>
27 (O)	Ground	Parking brake switch signal	Input	Ignition switch ON	Parking brake applied	0 V
					Parking brake released	 <small>JSNIA0007GB</small>

COMBINATION METER
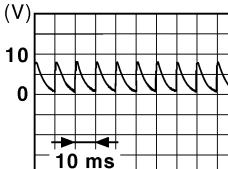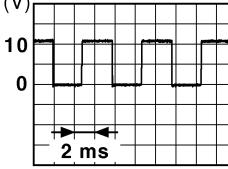
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
28 (LG)	Ground	Brake fluid level switch signal	Input	Ignition switch ON	Brake fluid level is normal.	 JSNIA0008GB
					The brake fluid level is lower than the low level	
29 (L ^{*1} or LG ^{*2})	Ground	Seat belt buckle switch signal (driver side)	Input	Ignition switch ON	When driver seat belt is fastened	12 V
					When driver seat belt is unfastened	0 V
30 (G)	Ground	Seat belt buckle switch signal (passenger side)	Input	Ignition switch ON	<ul style="list-style-type: none"> When getting in the passenger seat When passenger seat belt is fastened 	12 V
					<ul style="list-style-type: none"> When getting in the passenger seat When passenger seat belt is unfastened 	0 V
31 (L)	Ground	Washer level switch signal	Input	Ignition switch ON	Washer level switch ON	0 V
					Washer level switch OFF	5 V
34 (R)	Ground	Illumination control signal	Output	Ignition switch ON	Lighting switch ON, then operate the illumination control switch.	NOTE: When brightness level is midway  JSNIA0010GB
36 (LG)	16 (B)	Select switch signal	Input	Ignition switch ON	When ● is pressed	0 V
					Other than the above	5 V
37 (SB)	16 (B)	Enter switch signal	Input	Ignition switch ON	When □ is pressed	0 V
					Other than the above	5 V
38 (L)	16 (B)	Trip A/B reset switch signal	Input	Ignition switch ON	When trip A/B reset switch is pressed	0 V
					Other than the above	5 V
39 (P)	16 (B)	Illumination control switch signal (-)	Input	Ignition switch ON	When ⚡- switch is pressed	0 V
					Other than the above	5 V
40 (O)	16 (B)	Illumination control switch signal (+)	Input	Ignition switch ON	When ⚡+ switch is pressed	0 V
					Other than the above	5 V

*1: With A/T models

*2: With M/T models

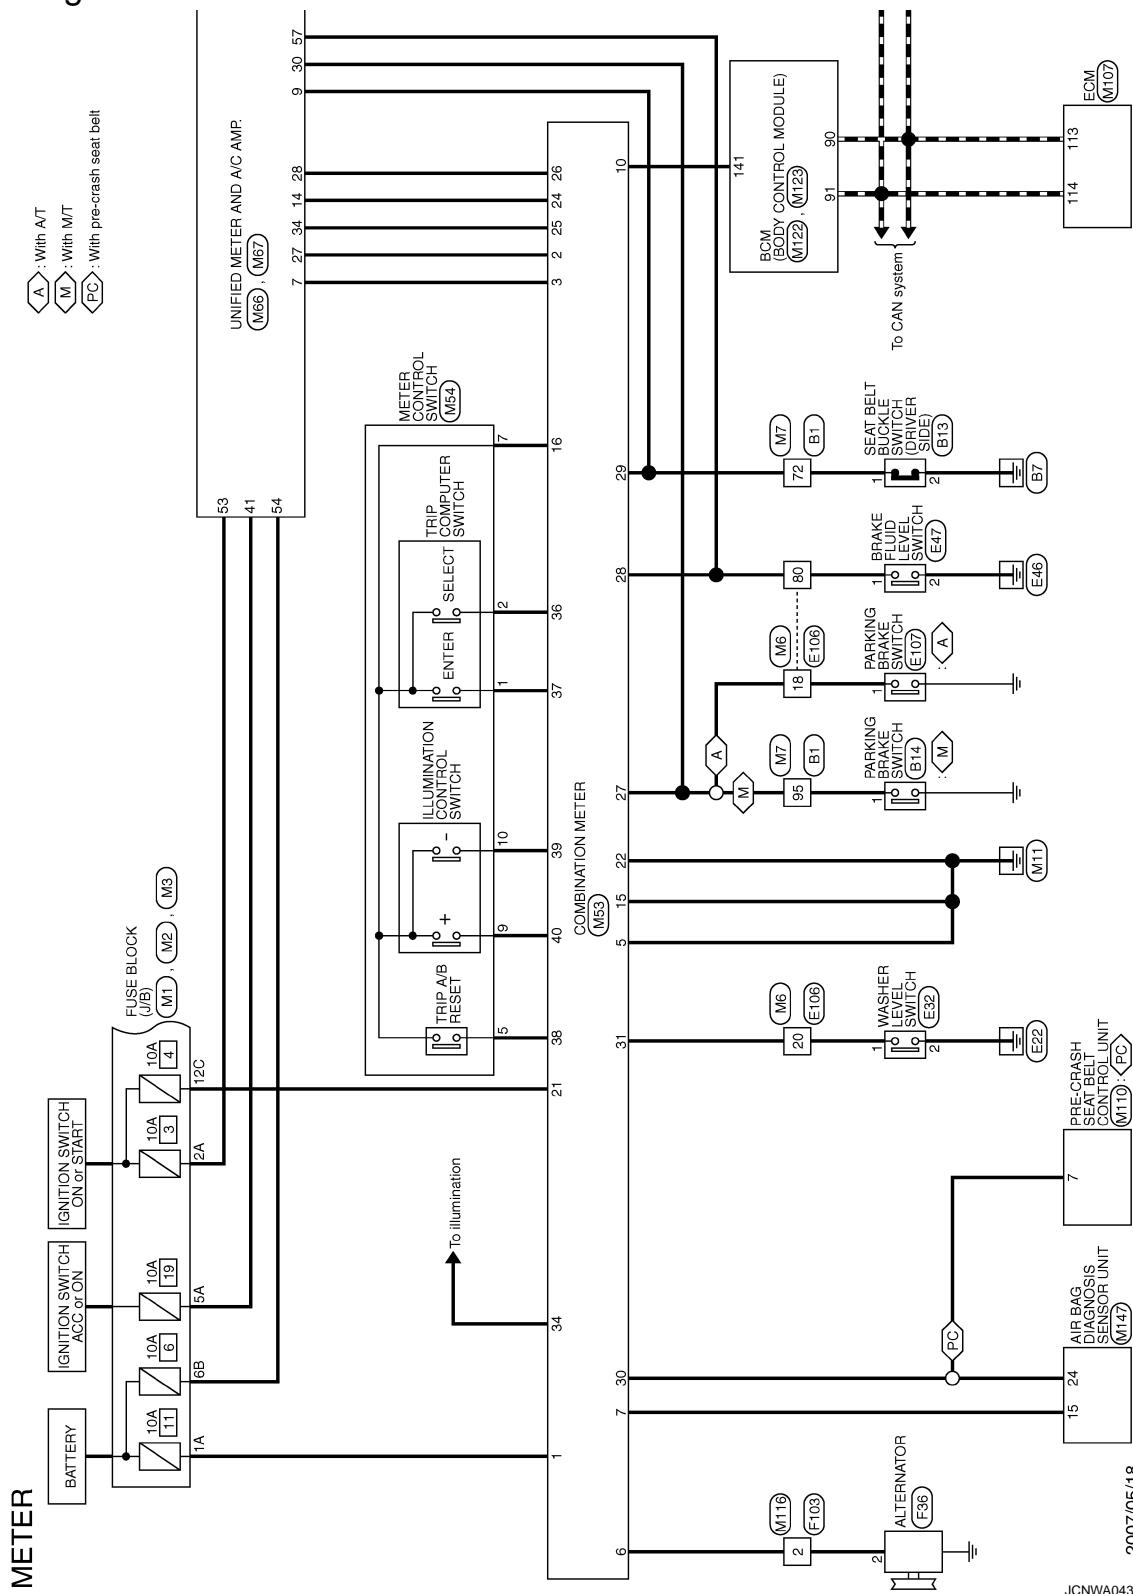
A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P

COMBINATION METER

< ECU DIAGNOSIS >

Wiring Diagram - METER -

INFOID:0000000001606695




COMBINATION METER

< ECU DIAGNOSIS >

- : With AT
- : With 4WAS
- : With AFS
- : With NAVI
- : Without NAVI
- : With CC

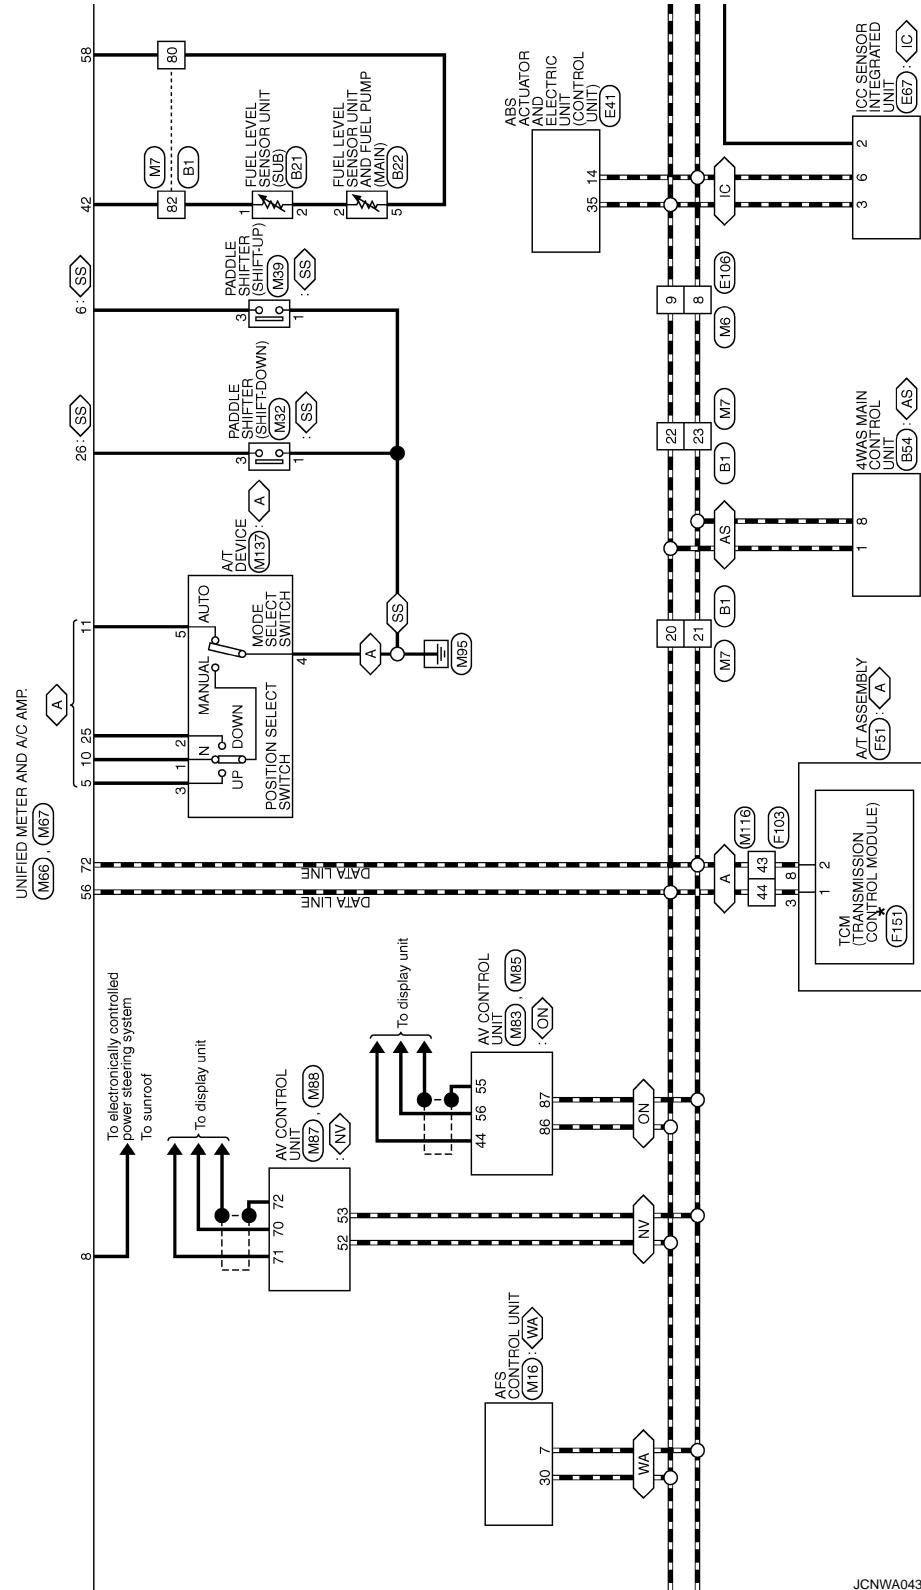* : This connector is not shown in "Harness Layout".




JCNWA0437GE

MWI

COMBINATION METER

< ECU DIAGNOSIS >

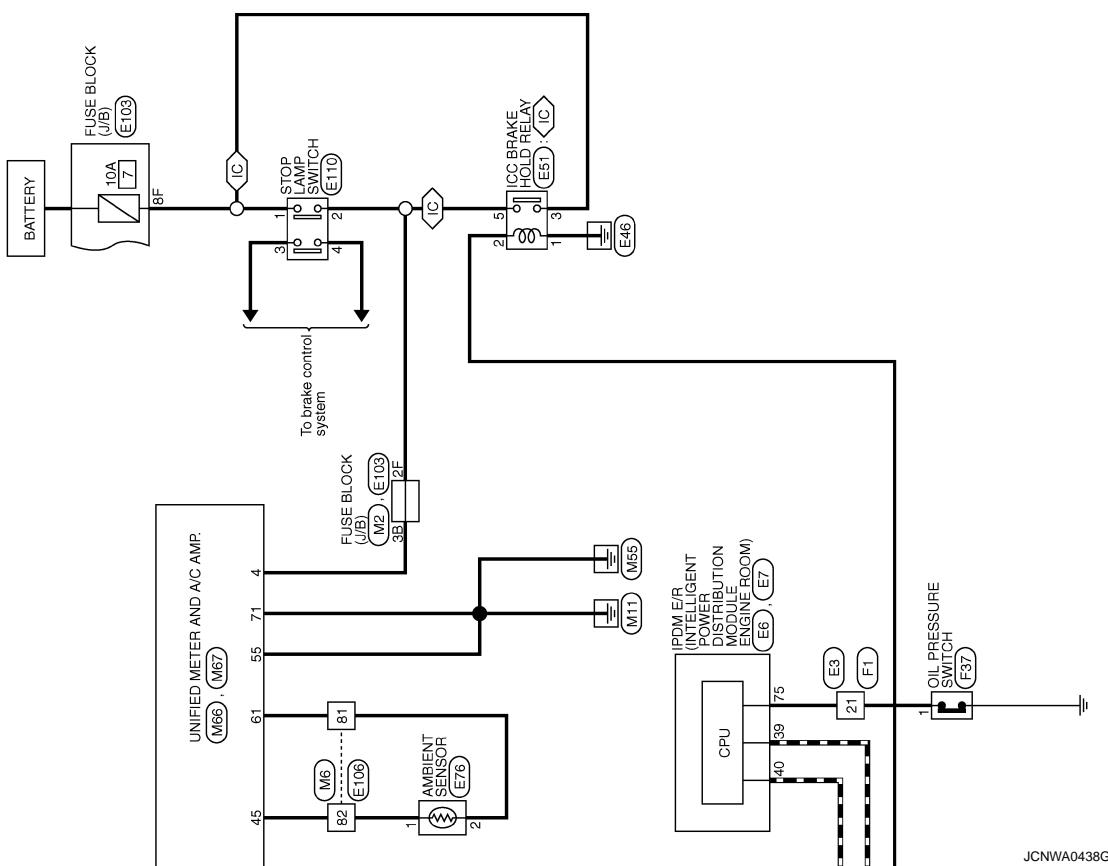$\langle IC \rangle$: With ICC



JCNWA0438GE

COMBINATION METER

< ECU DIAGNOSIS >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z

METER

Connector No.	B1	Connector No.	B13	Connector No.	B14	Connector No.	B21
Connector Name	WIRE TO WIRE	Connector Name	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)	Connector Name	PARKING BRAKE SWITCH (M/T)	Connector Name	FUEL LEVEL SENSOR UNIT (SUB)
Connector Type	A03FW	Connector Type	A03FW	Connector Type	P01FB-A	Connector Type	E02FGY-RS

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-	1	V	-	1	B	-
2	B	-	2	W	-	2	W	-
20	L	-	21	P	-	22	L	-
22	L	-	23	P	-	24	G	-
80	Y	-	82	B	-	85	V	-

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-	1	V	-	1	B	-
2	B	-	2	W	-	2	W	-
21	L	-	22	P	-	23	G	-
80	Y	-	82	B	-	85	V	-

Connector No.	B21	Connector Name	PARKING BRAKE SWITCH (M/T)	Connector No.	B22	Connector Name	FUEL LEVEL SENSOR UNIT (SUB)
Connector Type	E02FGY-RS	Connector Type	P01FB-A	Connector Type	E02FGY-RS	Connector Type	E02FGY-RS

Connector No.	B22	Connector Name	WIRE TO WIRE	Connector No.	B23	Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	E02FGY-RS	Connector Type	SAA36MB-RSS-SH28	Connector Type	E02FGY-RS	Connector Type	TH08BW-NH

Connector No.	B23	Connector Name	WIRE TO WIRE	Connector No.	B24	Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	E02FGY-RS	Connector Type	SAA36MB-RSS-SH28	Connector Type	E02FGY-RS	Connector Type	TH08BW-NH



Connector No.	B24	Connector Name	WIRE TO WIRE	Connector No.	B25	Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	E02FGY-RS	Connector Type	SAA36MB-RSS-SH28	Connector Type	E02FGY-RS	Connector Type	TH08BW-NH

JCNWA0439GE

MWI

COMBINATION METER

< ECU DIAGNOSIS >

METER <table border="1"> <tr> <td>Connector No.</td> <td>E7</td> </tr> <tr> <td>Connector Name</td> <td>P-DIE-IR (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</td> </tr> <tr> <td>Connector Type</td> <td>TH20FW-CS12-M4</td> </tr> </table> 	Connector No.	E7	Connector Name	P-DIE-IR (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	Connector Type	TH20FW-CS12-M4	<table border="1"> <tr> <td>Connector No.</td> <td>E32</td> </tr> <tr> <td>Connector Name</td> <td>WASHER LEVEL SWITCH</td> </tr> <tr> <td>Connector Type</td> <td>Z02FB-R</td> </tr> </table> 	Connector No.	E32	Connector Name	WASHER LEVEL SWITCH	Connector Type	Z02FB-R	<table border="1"> <tr> <td>Connector No.</td> <td>E41</td> </tr> <tr> <td>Connector Name</td> <td>ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)</td> </tr> <tr> <td>Connector Type</td> <td>BAAA2FB-AH24-LH</td> </tr> </table> 	Connector No.	E41	Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)	Connector Type	BAAA2FB-AH24-LH																		
Connector No.	E7																																					
Connector Name	P-DIE-IR (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)																																					
Connector Type	TH20FW-CS12-M4																																					
Connector No.	E32																																					
Connector Name	WASHER LEVEL SWITCH																																					
Connector Type	Z02FB-R																																					
Connector No.	E41																																					
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)																																					
Connector Type	BAAA2FB-AH24-LH																																					
<table border="1"> <tr> <td>Terminal No.</td> <td>Color of Wire</td> <td>Signal Name [Specification]</td> </tr> <tr> <td>1</td> <td>LG</td> <td>-</td> </tr> <tr> <td>2</td> <td>B</td> <td>-</td> </tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	1	LG	-	2	B	-	<table border="1"> <tr> <td>Terminal No.</td> <td>Color of Wire</td> <td>Signal Name [Specification]</td> </tr> <tr> <td>1</td> <td>P</td> <td>CAN-L</td> </tr> <tr> <td>35</td> <td>L</td> <td>CAN-H</td> </tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	1	P	CAN-L	35	L	CAN-H	<table border="1"> <tr> <td>Terminal No.</td> <td>Color of Wire</td> <td>Signal Name [Specification]</td> </tr> <tr> <td>1</td> <td>W</td> <td>-</td> </tr> <tr> <td>2</td> <td>B</td> <td>-</td> </tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	1	W	-	2	B	-									
Terminal No.	Color of Wire	Signal Name [Specification]																																				
1	LG	-																																				
2	B	-																																				
Terminal No.	Color of Wire	Signal Name [Specification]																																				
1	P	CAN-L																																				
35	L	CAN-H																																				
Terminal No.	Color of Wire	Signal Name [Specification]																																				
1	W	-																																				
2	B	-																																				
<table border="1"> <tr> <td>Connector No.</td> <td>E51</td> </tr> <tr> <td>Connector Name</td> <td>ICC BRAKE HOLD RELAY</td> </tr> <tr> <td>Connector Type</td> <td>MS02FL-M2</td> </tr> </table> 	Connector No.	E51	Connector Name	ICC BRAKE HOLD RELAY	Connector Type	MS02FL-M2	<table border="1"> <tr> <td>Connector No.</td> <td>E67</td> </tr> <tr> <td>Connector Name</td> <td>ICC SENSOR INTEGRATED UNIT</td> </tr> <tr> <td>Connector Type</td> <td>RS06FB-FR</td> </tr> </table> 	Connector No.	E67	Connector Name	ICC SENSOR INTEGRATED UNIT	Connector Type	RS06FB-FR	<table border="1"> <tr> <td>Connector No.</td> <td>E16</td> </tr> <tr> <td>Connector Name</td> <td>AMBIENT SENSOR</td> </tr> <tr> <td>Connector Type</td> <td>RS02FB</td> </tr> </table> 	Connector No.	E16	Connector Name	AMBIENT SENSOR	Connector Type	RS02FB																		
Connector No.	E51																																					
Connector Name	ICC BRAKE HOLD RELAY																																					
Connector Type	MS02FL-M2																																					
Connector No.	E67																																					
Connector Name	ICC SENSOR INTEGRATED UNIT																																					
Connector Type	RS06FB-FR																																					
Connector No.	E16																																					
Connector Name	AMBIENT SENSOR																																					
Connector Type	RS02FB																																					
<table border="1"> <tr> <td>Terminal No.</td> <td>Color of Wire</td> <td>Signal Name [Specification]</td> </tr> <tr> <td>1</td> <td>B</td> <td>-</td> </tr> <tr> <td>2</td> <td>V</td> <td>-</td> </tr> <tr> <td>3</td> <td>R</td> <td>-</td> </tr> <tr> <td>5</td> <td>P</td> <td>-</td> </tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	1	B	-	2	V	-	3	R	-	5	P	-	<table border="1"> <tr> <td>Terminal No.</td> <td>Color of Wire</td> <td>Signal Name [Specification]</td> </tr> <tr> <td>2</td> <td>V</td> <td>BRK IMP BLY</td> </tr> <tr> <td>3</td> <td>L</td> <td>CAN-H</td> </tr> <tr> <td>6</td> <td>P</td> <td>CAN-L</td> </tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	2	V	BRK IMP BLY	3	L	CAN-H	6	P	CAN-L	<table border="1"> <tr> <td>Terminal No.</td> <td>Color of Wire</td> <td>Signal Name [Specification]</td> </tr> <tr> <td>1</td> <td>G</td> <td>-</td> </tr> <tr> <td>2</td> <td>P</td> <td>-</td> </tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	1	G	-	2	P	-
Terminal No.	Color of Wire	Signal Name [Specification]																																				
1	B	-																																				
2	V	-																																				
3	R	-																																				
5	P	-																																				
Terminal No.	Color of Wire	Signal Name [Specification]																																				
2	V	BRK IMP BLY																																				
3	L	CAN-H																																				
6	P	CAN-L																																				
Terminal No.	Color of Wire	Signal Name [Specification]																																				
1	G	-																																				
2	P	-																																				

JCNWA0440GE

COMBINATION METER

< ECU DIAGNOSIS >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
MWI


METER

Connector No.	E106	Wire To Wire
Connector Name	PARKING BRAKE SWITCH (A/T)	
Connector Type	TH80FW-CS16-TM4	TB01FW
Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
8	P	-
9	L	-
18	O	-
20	LG	-
80	W	-
81	P	-
82	G	-

F1

STOP LAMP SWITCH

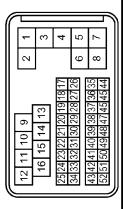MD4FW-LC



F1

WIRE TO WIRE

SAA36FB-FSB-SH28

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	MD4FW-LC




Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	BR	-
3	BR	-
4	BR	-

F1

WIRE TO WIRE

TK36FW-NS10



F1

WIRE TO WIRE

TK36FW-NS10



Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	BR	-
3	BR	-
4	BR	-

Connector No.	F37
Connector Name	A/T ASSEMBLY
Connector Type	RK10FG-DGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	W	-
3	L	-
4	SB	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	W	-
3	L	-
4	SB	-



Connector No.	F36
Connector Name	ALTERNATOR
Connector Type	H50DFB



Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	G	-
3	L	-
4	P	-



JCNWA0441GE

COMBINATION METER

< ECU DIAGNOSIS >

METER

Connector No.	M1	Connector No.	M2
Connector Name	TOM (TRANSMISSION CONTROL MODULE)	Connector Name	FUSE BLOCK (J/B)
Connector Type	SP10FEGY	Connector Type	NS10FW-CS

Terminal No.	Color of Wire	Signal Name [Specification]
1A	V	CAN-H
2A	G	CAN-L
5A	L	-

Terminal No.	Color of Wire	Signal Name [Specification]
4B	3B	2B
1B	9B	8B
7B	6B	5B

F151

FUSE BLOCK (J/B)

NS10FW-CS

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
12C	R	-

Connector No.	M32
Connector Name	PADDLE SHIFTER SHIFT-DOWN
Connector Type	A03FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	1	-
2	2	-
3	3	-

Connector No.	M16
Connector Name	AFS CONTROL UNIT
Connector Type	TH40FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	2	3
2	3	4
3	4	5
4	5	6
5	6	7
6	7	8
7	8	9
8	9	10
9	10	11
10	11	12
11	12	13
12	13	14
13	14	15
14	15	16
15	16	17
16	17	18
17	18	19
18	19	20
19	20	21
20	21	22
21	22	23
22	23	24
23	24	25
24	25	26
25	26	27
26	27	28
27	28	29
28	29	30
29	30	31
30	31	32
31	32	33
32	33	34
33	34	35
34	35	36
35	36	37
36	37	38
37	38	39
38	39	40

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	U	U
2	V	V
3	W	W
4	Y	Y
5	Z	Z
6	AA	AA
7	AB	AB
8	AC	AC
9	AD	AD
10	AE	AE
11	AF	AF
12	AG	AG
13	AH	AH
14	AI	AI
15	AJ	AJ
16	AK	AK
17	AL	AL
18	AM	AM
19	AN	AN
20	AO	AO
21	AP	AP
22	AQ	AQ
23	AR	AR
24	AS	AS
25	AT	AT
26	AV	AV
27	AW	AW
28	AX	AX
29	AY	AY
30	AZ	AZ

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
8	P	-
9	L	-
18	O	-
20	L	-
80	LG	-
81	R	-
82	V	-

Connector No.	7	7	7
Connector Name	CAN-L	CAN-L	CAN-L
Connector Type	CAN-H	CAN-H	CAN-H
Terminal No.	21	P	-
Terminal No.	22	L	-
Terminal No.	23	P	-
Terminal No.	72	L	- (With A/T)
Terminal No.	72	LG	- (With M/T)
Terminal No.	80	Y	-
Terminal No.	82	BR	-
Terminal No.	95	O	-

JCNWA0442GE

COMBINATION METER

< ECU DIAGNOSIS >

A

B

C

D

E

F

G

H

I

J

K

M

O

P

MWI

METER		Connector No.		Signal Name [Specification]		Terminal No.		Color of Wire		Signal Name [Specification]		Terminal No.		Color of Wire		Signal Name [Specification]	
Connector No.	M59	24	BR	COMM (LCD->AMP)		24	BR	COMM (AMP->LCD)		24	BR	COMM (AMP->AMP)		24	BR	COMM (AMP->AMP)	
Connector Name	PADDLE SHIFTER (SHIFT-UP)	25	Y	VEHICLE SPEED (8-PULSE)		25	Y	VEHICLE SPEED (8-PULSE)		25	Y	VEHICLE SPEED (8-PULSE)		25	Y	VEHICLE SPEED (8-PULSE)	
Connector Type	AG4FW	26	R	PARKING BRAKE SW		26	R	PARKING BRAKE SW		26	R	PARKING BRAKE SW		26	R	PARKING BRAKE SW	
	SAB4DFW	27	O			27	O			27	O			27	O		
		28	LG	BRAKE FLUID LEVEL SW		28	LG	BRAKE FLUID LEVEL SW		28	LG	BRAKE FLUID LEVEL SW		28	LG	BRAKE FLUID LEVEL SW	
		29	L	SEAT BELT BUCKLE SW (DRIVER SIDE) (Mech AT)		29	L	SEAT BELT BUCKLE SW (DRIVER SIDE) (Mech AT)		29	L	SEAT BELT BUCKLE SW (DRIVER SIDE) (Mech AT)		29	L	SEAT BELT BUCKLE SW (DRIVER SIDE) (Mech AT)	
		30	G	SEAT BELT BUCKLE SW (DRIVER SIDE) (Mech AT)		30	G	SEAT BELT BUCKLE SW (DRIVER SIDE) (Mech AT)		30	G	SEAT BELT BUCKLE SW (DRIVER SIDE) (Mech AT)		30	G	SEAT BELT BUCKLE SW (DRIVER SIDE) (Mech AT)	
		31	L	SEAT BELT BUCKLE SW (PASSENGER SIDE) (Mech AT)		31	L	SEAT BELT BUCKLE SW (PASSENGER SIDE) (Mech AT)		31	L	SEAT BELT BUCKLE SW (PASSENGER SIDE) (Mech AT)		31	L	SEAT BELT BUCKLE SW (PASSENGER SIDE) (Mech AT)	
		32	R	ILLUMINATION CONTROL		32	R	ILLUMINATION CONTROL		32	R	ILLUMINATION CONTROL		32	R	ILLUMINATION CONTROL	
		33	LG	SELECT SW		33	LG	SELECT SW		33	LG	SELECT SW		33	LG	SELECT SW	
		34	P	ENTER SW		34	P	ENTER SW		34	P	ENTER SW		34	P	ENTER SW	
		35	SB	TRIP A/B RESET SW		35	SB	TRIP A/B RESET SW		35	SB	TRIP A/B RESET SW		35	SB	TRIP A/B RESET SW	
		36	P	ILLUMINATION CONTROL SW (-)		36	P	ILLUMINATION CONTROL SW (-)		36	P	ILLUMINATION CONTROL SW (-)		36	P	ILLUMINATION CONTROL SW (-)	
		37	O	ILLUMINATION CONTROL SW (+)		37	O	ILLUMINATION CONTROL SW (+)		37	O	ILLUMINATION CONTROL SW (+)		37	O	ILLUMINATION CONTROL SW (+)	
		38	L			38	L			38	L			38	L		
		39	LG			39	LG			39	LG			39	LG		
		40	P			40	P			40	P			40	P		
		41	GR			41	GR			41	GR			41	GR		
		42	LG			42	LG			42	LG			42	LG		
		43	BR			43	BR			43	BR			43	BR		
		44	LG			44	LG			44	LG			44	LG		
		45	LG			45	LG			45	LG			45	LG		
		46	LG			46	LG			46	LG			46	LG		
		47	LG			47	LG			47	LG			47	LG		
		48	LG			48	LG			48	LG			48	LG		
		49	LG			49	LG			49	LG			49	LG		
		50	LG			50	LG			50	LG			50	LG		
		51	LG			51	LG			51	LG			51	LG		
		52	LG			52	LG			52	LG			52	LG		
		53	LG			53	LG			53	LG			53	LG		
		54	LG			54	LG			54	LG			54	LG		
		55	LG			55	LG			55	LG			55	LG		
		56	LG			56	LG			56	LG			56	LG		
		57	LG			57	LG			57	LG			57	LG		
		58	LG			58	LG			58	LG			58	LG		
		59	LG			59	LG			59	LG			59	LG		
		60	LG			60	LG			60	LG			60	LG		
		61	LG			61	LG			61	LG			61	LG		
		62	LG			62	LG			62	LG			62	LG		
		63	LG			63	LG			63	LG			63	LG		
		64	LG			64	LG			64	LG			64	LG		
		65	LG			65	LG			65	LG			65	LG		
		66	LG			66	LG			66	LG			66	LG		
		67	LG			67	LG			67	LG			67	LG		
		68	LG			68	LG			68	LG			68	LG		
		69	LG			69	LG			69	LG			69	LG		
		70	LG			70	LG			70	LG			70	LG		
		71	LG			71	LG			71	LG			71	LG		

JCNWA0443GE

COMBINATION METER

< ECU DIAGNOSIS >

METER

Connector No.	M83	Connector No.	M85
Connector Name	AV CONTROL UNIT (WITHOUT NAVI)	Connector Name	AV CONTROL UNIT (WITH NAVI)
Connector Type	TH24FW-NH	Connector Type	TH24FW-NH
Terminal No.	44 G	Signal Name [Specification]	CAN-H
	55 SHIELD		CAN-L
	56 L		COMM(CONT->DISP)
Terminal No.	44 G	Color of Wire	L
	55 SHIELD		P
	56 L		

Terminal No.	44 G	Signal Name [Specification]	CAN-H
	55 SHIELD		CAN-L
	56 L		COMM(CONT->DISP)
Terminal No.	44 G	Color of Wire	L
	55 SHIELD		P
	56 L		

Connector No.	M87	Connector No.	M88
Connector Name	AV CONTROL UNIT (WITHOUT NAVI)	Connector Name	AV CONTROL UNIT (WITH NAVI)
Connector Type	TH40FW-NH	Connector Type	TH12FW-NH
Terminal No.	22 24 26 28 30 32 34 36 38 40 42 44 46 48 50 52 54 56 58 60	Terminal No.	62 64 66 68 70 72
	23 25 27 29 31 33 35 37 39 41 43 45 47 49 51 53 55 57 59		61 63 65 67 69 71
Terminal No.	90 89 88 87 86 85 84 83 82 81 80 79 78 77 76	Terminal No.	
	91 92 93 94 95 96 97 98 99 98 97 96 95 94 93 92		
Terminal No.	101 102 103 104 105 106 107 108 109 100 101 102 103 104 105 106	Terminal No.	

Terminal No.	86 L	Color of Wire	Signal Name [Specification]
	87 P		CAN-H
			CAN-L
Terminal No.	86 L	Color of Wire	Signal Name [Specification]
	87 P		CAN-H
			CAN-L

Connector No.	M116	Connector No.	M122
Connector Name	WIRE TO WIRE	Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TIC3MMW-NS10	Connector Type	TH40FB-NH
Terminal No.	52 L	Terminal No.	BR
	53 P		Y
			SIGNAL
Terminal No.	52 L	Color of Wire	Signal Name [Specification]
	53 P		CAN-H
			CAN-L

Terminal No.	1 2 3 4 5 6	Color of Wire	Signal Name [Specification]
	13 14 15 16 17 18 19		CAN-H
	20 21 22 23 24 25 26		CAN-L
Terminal No.	1 2 3 4 5 6	Color of Wire	Signal Name [Specification]
	13 14 15 16 17 18 19		CAN-H
	20 21 22 23 24 25 26		CAN-L

Terminal No.	1 2 3 4 5 6	Color of Wire	Signal Name [Specification]
	13 14 15 16 17 18 19		CAN-H
	20 21 22 23 24 25 26		CAN-L
Terminal No.	1 2 3 4 5 6	Color of Wire	Signal Name [Specification]
	13 14 15 16 17 18 19		CAN-H
	20 21 22 23 24 25 26		CAN-L

Terminal No.	1 2 3 4 5 6	Color of Wire	Signal Name [Specification]
	13 14 15 16 17 18 19		CAN-H
	20 21 22 23 24 25 26		CAN-L
Terminal No.	1 2 3 4 5 6	Color of Wire	Signal Name [Specification]
	13 14 15 16 17 18 19		CAN-H
	20 21 22 23 24 25 26		CAN-L

COMBINATION METER

< ECU DIAGNOSIS >

Function	Specifications
Speedometer	
Tachometer	
Fuel gauge	Reset to zero by suspending communication.
Water temperature gauge	
Illumination control	When suspending communication, change to nighttime mode.
Information display	The display turns off by suspending communication.
Buzzer	The buzzer turns off by suspending communication.
Warning lamp/indicator lamp	ABS warning lamp
	VDC OFF indicator lamp
	SLIP indicator lamp
	Brake warning lamp
	CRUISE warning lamp
	High beam indicator
	Turn signal indicator lamp
	Front fog indicator lamp
	Oil pressure warning lamp
	Malfunction indicator lamp
	A/T CHECK warning lamp
	Low tire pressure warning lamp
	Key warning lamp
	AFS OFF indicator lamp
	4WAS warning lamp
	Master warning lamp

DTC Index

INFOID:0000000001606697

Refer to [MWI-100, "DTC Index".](#)

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >

UNIFIED METER AND A/C AMP.

Reference Value

INFOID:0000000001606698

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition		Value/Status
SPEED METER [km/h]	Ignition switch ON	While driving	Equivalent to speedometer reading NOTE: 655.35 is displayed when the malfunction signal is received
SPEED OUTPUT [km/h]	Ignition switch ON	While driving	Equivalent to speedometer reading NOTE: 655.35 is displayed when the malfunction signal is received
ODO OUTPUT [km]	Ignition switch ON	—	Equivalent to odometer reading in combination meter
TACHO METER [rpm]	Ignition switch ON	While driving	Equivalent to tachometer reading NOTE: 8191.875 is displayed when the malfunction signal is received
FUEL METER [L]	Ignition switch ON	—	Values according to fuel level
W TEMP METER [°C]	Ignition switch ON	—	Values according to engine coolant temperature NOTE: 215 is displayed when the malfunction signal is input
ABS W/L	Ignition switch ON	ABS warning lamp ON	On
		ABS warning lamp OFF	Off
VDC/TCS IND	Ignition switch ON	VDC OFF indicator lamp ON	On
		VDC OFF indicator lamp OFF	Off
SLIP IND	Ignition switch ON	SLIP indicator lamp ON	On
		SLIP indicator lamp OFF	Off
BRAKE W/L	Ignition switch ON	Brake warning lamp ON	On
		Brake warning lamp OFF	Off
DOOR W/L	Ignition switch ON	Door warning displayed	On
		Door warning not displayed	Off
TRUNK/GLAS-H	Ignition switch ON	Trunk warning displayed	On
		Trunk warning not displayed	Off
HI-BEAM IND	Ignition switch ON	Hi-beam indicator lamp ON	On
		Hi-beam indicator lamp OFF	Off
TURN IND	Ignition switch ON	Turn indicator lamp ON	On
		Turn indicator lamp OFF	Off
FR FOG IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
RR FOG IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
LIGHT IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >

Monitor Item	Condition		Value/Status
OIL W/L	Ignition switch ON	Oil pressure warning lamp ON	On
		Oil pressure warning lamp OFF	Off
MIL	Ignition switch ON	Malfunction warning lamp ON	On
		Malfunction warning lamp OFF	Off
GLOW IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
C-ENG2 W/L	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
CRUISE IND	Ignition switch ON	Cruise indicator displayed	On
		Cruise indicator not displayed	Off
SET IND	Ignition switch ON	Set indicator lamp ON	On
		Set indicator lamp OFF	Off
CRUISE W/L	Ignition switch ON	Cruise warning lamp ON	On
		Cruise warning lamp OFF	Off
BA W/L	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
ATC/T-AMT W/L	Ignition switch ON	A/T check warning lamp ON	On
		A/T check warning lamp OFF	Off
4WD W/L	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
4WD LOCK IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
FUEL W/L	Ignition switch ON	Low-fuel warning lamp displayed	On
		Low-fuel warning lamp not displayed	Off
WASHER W/L	Ignition switch ON	Washer warning displayed	On
		Washer warning not displayed	Off
AIR PRES W/L	Ignition switch ON	Low tire pressure lamp ON	On
		Low tire pressure lamp OFF	Off
KEY G/Y W/L	Ignition switch ON	Key warning lamp ON	On
		Key warning lamp OFF	Off
AFS OFF IND	Ignition switch ON	AFS OFF indicator lamp ON	On
		AFS OFF indicator lamp OFF	Off
4WAS/RAS W/L	Ignition switch ON	4WAS warning lamp ON	On
		4WAS warning lamp OFF	Off
HDC W/L	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
LDP R IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
LDP G Y IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >

Monitor Item	Condition		Value/Status
LCD	Ignition switch ON	Engine start information display (A/T model)	B&P I
		Engine start information display (M/T model)	C&P I
	Ignition switch ACC	Engine start information display (A/T model)	B&P N
		Engine start information display (M/T model)	C&P N
	Ignition switch LOCK	Key ID warning display	ID NG
	Ignition switch LOCK	Steering lock information display	ROTAT
	Ignition switch LOCK	P position warning display	SFT P
	Ignition switch LOCK	Intelligent Key insert information display	INSRT
	Ignition switch LOCK	Intelligent Key low battery warning display	BATT
	Ignition switch ON	Take away warning display	NO KY
ACC TARGET	Ignition switch ON	Key warning display	OUTKY
		ICC sensor integrated unit warning display	LK WN
ACC DISTANCE	Ignition switch ON	Vehicle ahead detection indicator displayed	On
		Vehicle ahead detection indicator not displayed	Off
		When following distance set to "LONG"	LONG
		When following distance set to "MIDDLE"	MID
ACC OWN VHL	Ignition switch ON	When following distance set to "SHORT"	SHORT
		Set distance indicator not displayed	Off
ACC SET SPEED	Ignition switch ON	Own vehicle indicator displayed	On
ACC SET SPEED	Ignition switch ON	Own vehicle indicator not displayed	Off
ACC UNIT	Ignition switch ON	ICC set vehicle speed display	Vehicle speed
O/D OFF SW	Ignition switch ON	Set vehicle speed indicator unit display ON	On
		Set vehicle speed indicator unit display OFF	Off
SHIFT IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
		Shift position indicator P display	P
		Shift position indicator R display	R
		Shift position indicator N display	N
		Shift position indicator D display	D
		Shift position indicator M1 display	M1
		Shift position indicator M2 display	M2
		Shift position indicator M3 display	M3
		Shift position indicator M4 display	M4
		Shift position indicator M5 display	M5
AT S MODE SW	Ignition switch ON	Snow mode switch ON	On
		Snow mode switch OFF	Off

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

UNIFIED METER AND A/C AMP.


< ECU DIAGNOSIS >

Monitor Item	Condition		Value/Status
AT P MODE SW	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
M RANGE SW	Ignition switch ON	Selector lever DS position	On
		Other than the above	Off
NM RANGE SW	Ignition switch ON	Selector lever DS position	Off
		Other than the above	On
AT SFT UP SW	Ignition switch ON	Selector lever up position	On
		Other than the above	Off
AT SFT DWN SW	Ignition switch ON	Selector lever – position	On
		Other than the above	Off
ST SFT UP SW	Ignition switch ON	Paddle shifter up operation	On
		Other than the above	Off
ST SFT DWN SW	Ignition switch ON	Paddle shifter down operation	On
		Other than the above	Off
COMP F/B SIG	Ignition switch ON	A/C compressor activation condition	On
		A/C compressor deactivation condition	Off
4WD LOCK SW	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
PKB SW	Ignition switch ON	Parking brake applied	On
		Parking brake released	Off
BUCKLE SW	Ignition switch ON	Seat belt (driver side) unfastened	On
		Seat belt (driver side) fastened	Off
BRAKE OIL SW	Ignition switch ON	Brake fluid level is lower than the low level	On
		Brake fluid level is normal	Off
DISTANCE [km]	Ignition switch ON	—	Possible driving distance calculated by unified meter and A/C amp.
OUTSIDE TEMP [°C] or [°F]	Ignition switch ON	—	Equivalent to ambient temperature NOTE: This may not match the indicated value on the information display.
FUEL LOW SIG	Ignition switch ON	Low-fuel warning signal output	On
		Low-fuel warning signal not output	Off
BUZZER	Ignition switch ON	Buzzer ON	On
		Buzzer OFF	Off

NOTE:

Some items are not available according to vehicle specification.


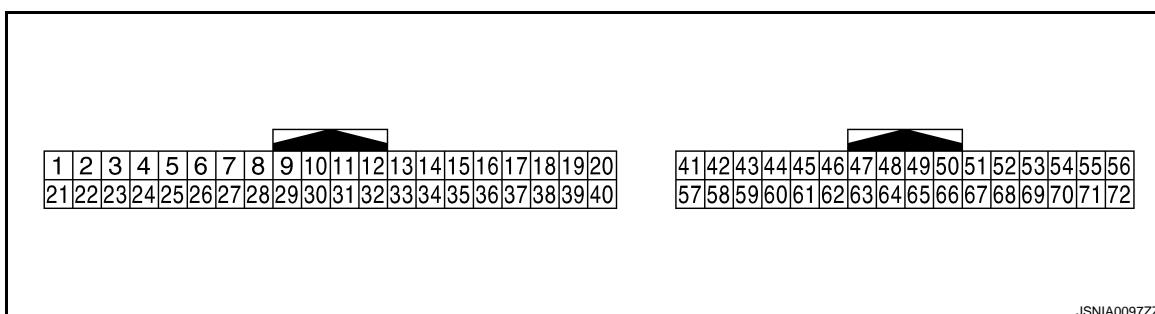
TERMINAL LAYOUT



UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >

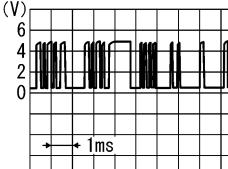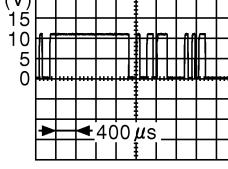PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
4 (P)	Ground	Stop lamp switch signal	Input	Ignition switch OFF	Brake pedal is depressed	12 V
					Other than the above	0 V
5 (L)	Ground	Manual mode shift up signal	Input	Ignition switch ON	Selector lever up position	0 V
					Other than the above	12 V
6 (O)	Ground	Paddle shifter up signal	Input	Ignition switch ON	Paddle shifter up operation	0 V
					Other than the above	12 V
7 (GR)	Ground	Communication signal (AMP. → METER)	Output	Ignition switch ON	—	 <small>SKIA3362E</small>
8 (L)	Ground	Vehicle speed signal output (2-pulse)	Output	Ignition switch ON	Speedometer operated [When vehicle speed is approx. 40 km/h (25 MPH)]	NOTE: The maximum voltage varies depending on the specification (destination unit).
9 (SB)	Ground	Seat belt buckle switch signal (driver side)	Input	Ignition switch ON	When seat belt (driver side) is fastened	12 V
					When seat belt (driver side) is unfastened	0 V
10 (W)	Ground	Manual mode signal	Input	Ignition switch ON	Selector lever DS position	0 V
					Other than the above	12 V
11 (G)	Ground	Not manual mode signal	Input	Ignition switch ON	Selector lever DS position	12 V
					Other than the above	0 V
14 (BR)	Ground	Communication signal (LCD → AMP.)	Input	Ignition switch ON	—	 <small>JSNIA0028GB</small>
25 (V)	Ground	Manual mode shift down signal	Input	Ignition switch ON	Selector lever down position	0 V
					Other than the above	12 V
26 (G)	Ground	Paddle shift down signal	Input	Ignition switch ON	Paddle shifter down operation	0 V
					Other than the above	12 V

A

B

C

D

E

F

G

H

I

J

K

L

M

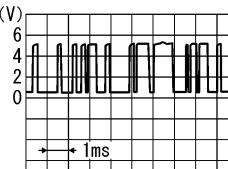
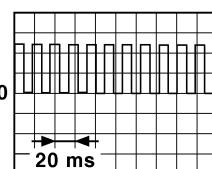
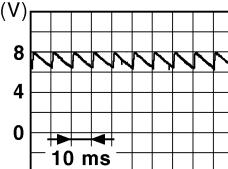
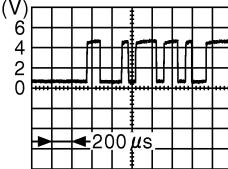
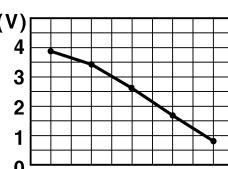
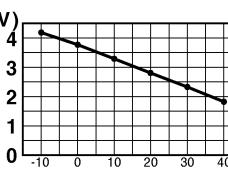
MWI

O

P


UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
27 (LG)	Ground	Communication signal (METER → AMP.)	Input	Ignition switch ON	 SKIA3361E
28 (R)	Ground	Vehicle speed signal output (8-pulse)	Output	Ignition switch ON	NOTE: The maximum voltage varies depending on the specification (destination unit).  JSNIA0012GB
30 (V)	Ground	Parking brake switch signal	Input	Parking brake applied	0 V
				Ignition switch ON	 JSNIA0007GB
34 (Y)	Ground	Communication signal (AMP. → LCD)	Output	Ignition switch ON	 JSNIA0027GB
41 (L)	Ground	ACC power supply	Input	Ignition switch ACC	Battery voltage
42 (BR)	Ground	Fuel level sensor signal	Input	Ignition switch ON	 JSNIA0013GB
45 (V)	Ground	Ambient sensor signal	Input	—	 JSNIA0014GB

UNIFIED METER AND A/C AMP.
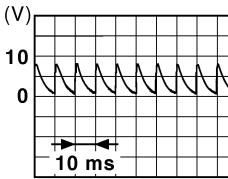
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
53 (W)	Ground	Ignition signal	Input	Ignition switch ON	—	Battery voltage
54 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
55 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
56 (L)	Ground	CAN-H	—	—	—	—
57 (BR)	Ground	Brake fluid level switch signal	Input	Ignition switch ON	Brake fluid level is normal.	 <small>JSNIA0008GB</small>
					The brake fluid level is lower than the low level	
58 (Y)	Ground	Fuel level sensor signal ground	—	Ignition switch ON	—	0 V
61 (R)	Ground	Ambient sensor signal ground	—	Ignition switch ON	—	0 V
71 (GR)	Ground	Ground	—	Ignition switch ON	—	0 V
72 (P)	Ground	CAN-L	—	—	—	—

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

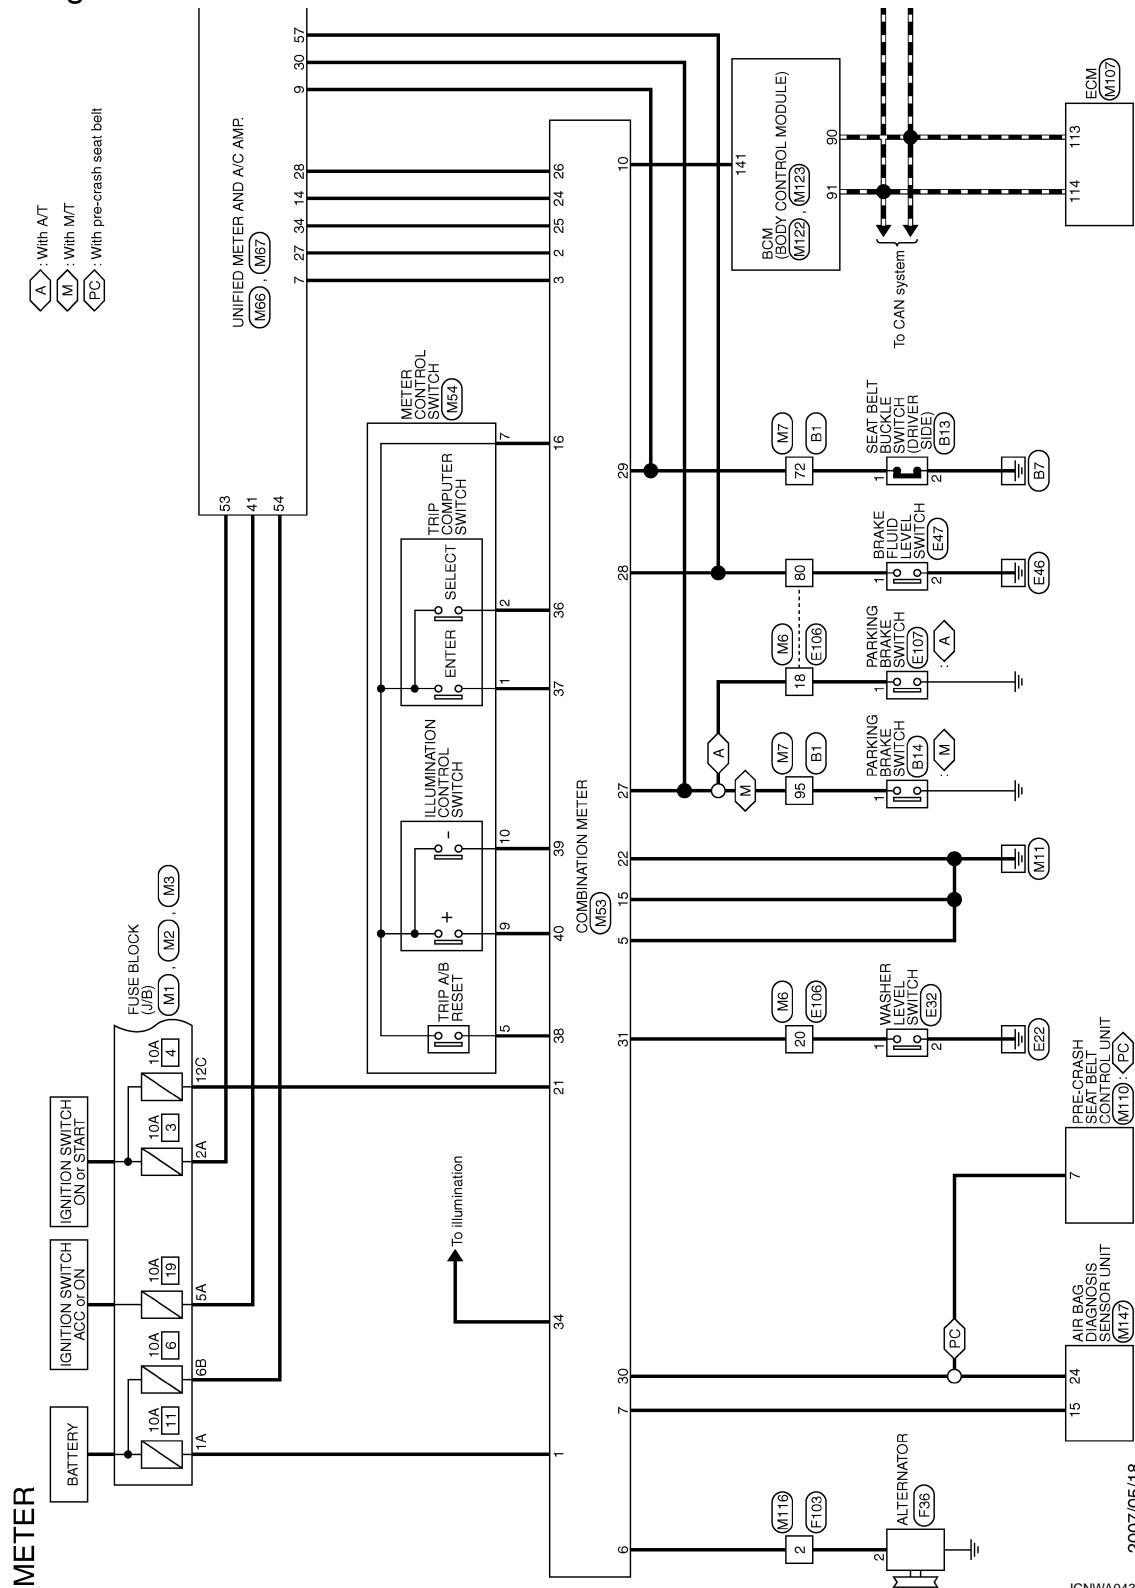
P

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >

Wiring Diagram - METER -

INFOID:0000000001696929




UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >

- : With AT
- : With 4WAS
- : With AFS
- : With NAVI
- : Without NAVI
- : With CC

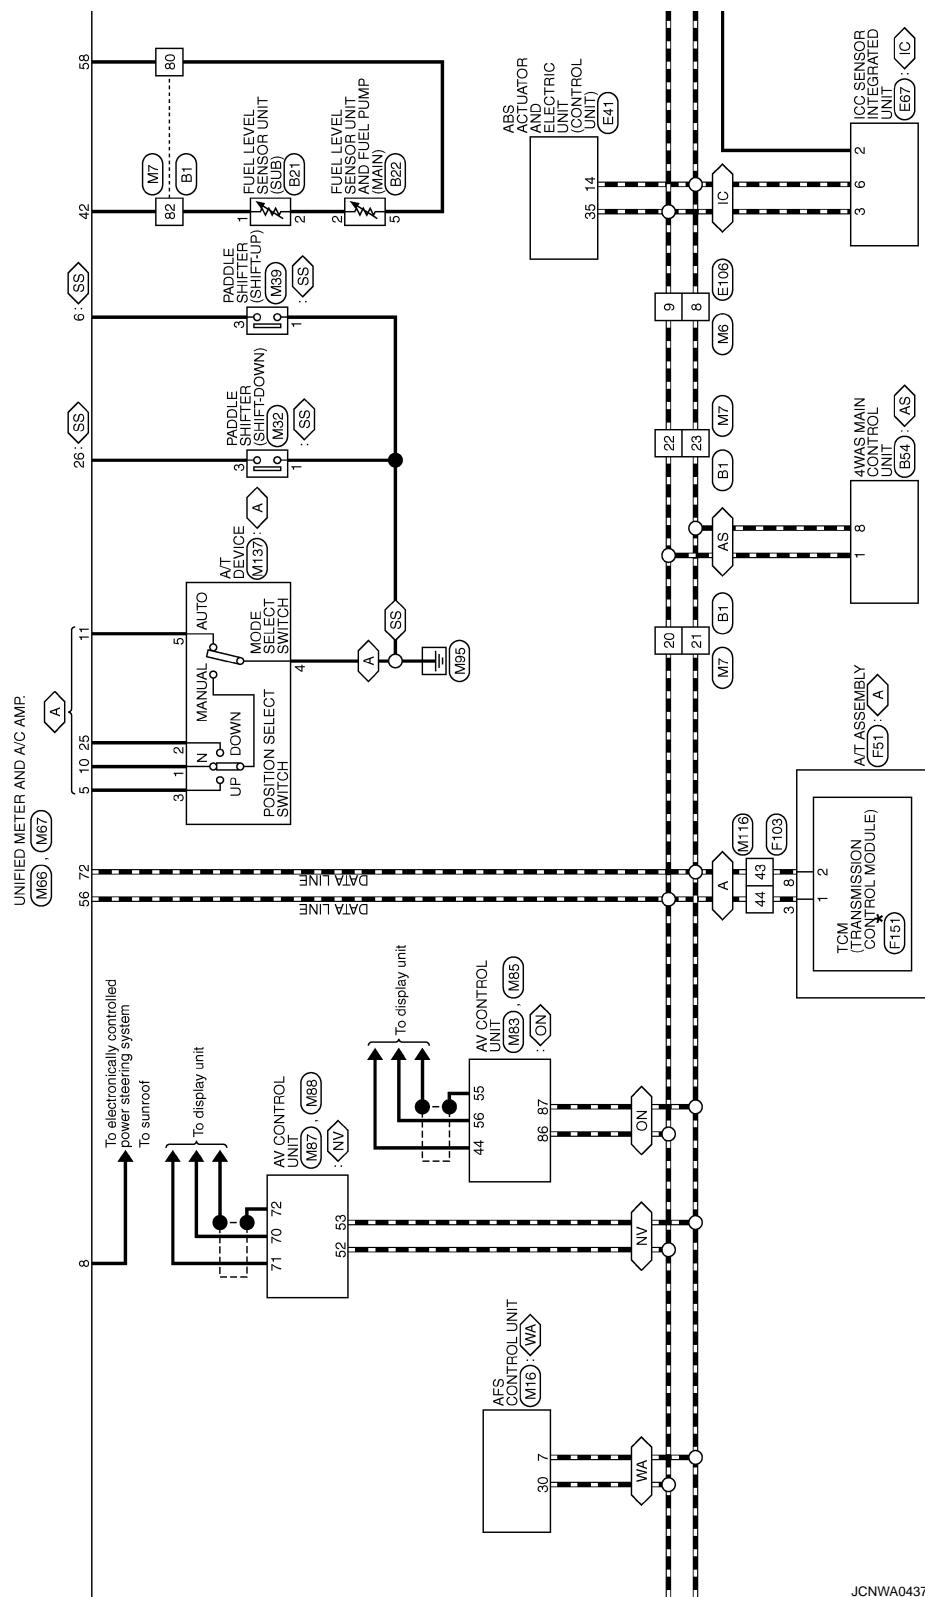* : This connector is not shown in "Harness Layout".



JCNWA0437GE

MWI

O

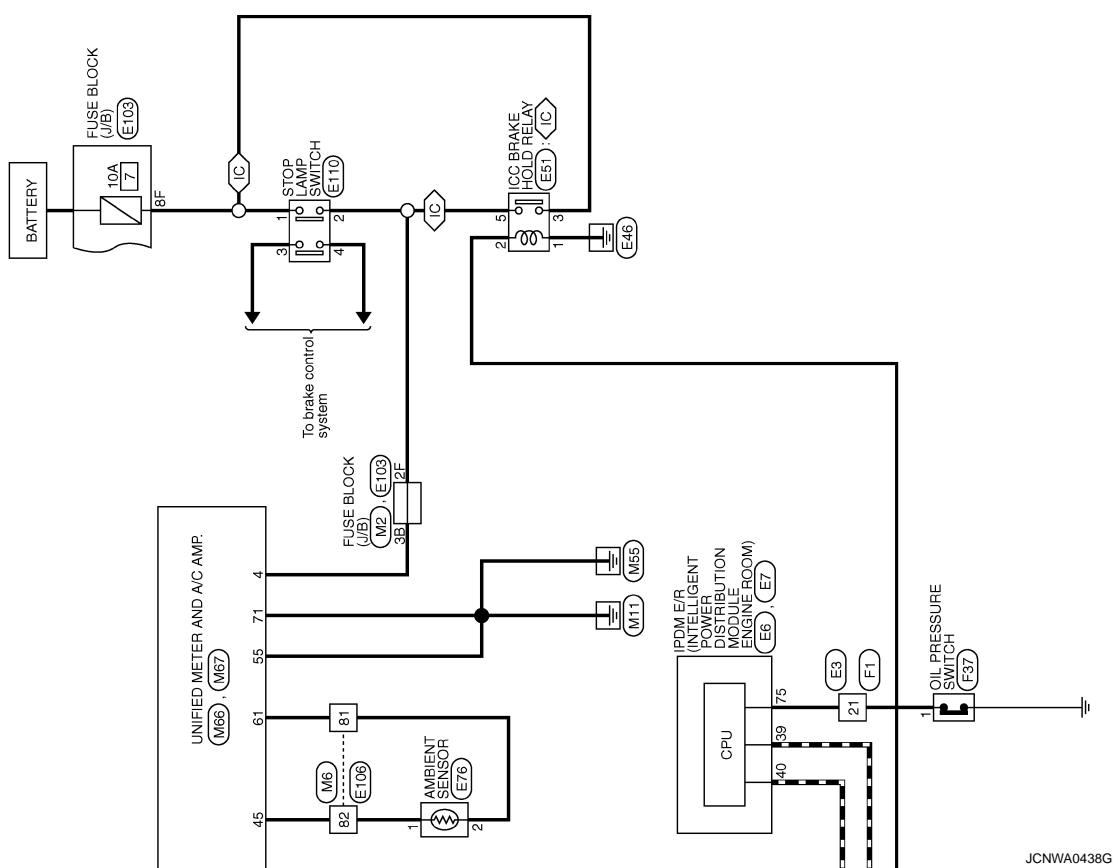
P

A B C D E F G H I J K L M

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >

 : With ICC



UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >


METER

Connector No.	Bi	Wire To Wire	Signal Name [Specification]
Connector Name			
Connector Type	TH80FW-CS16-TM4		
Connector No.	Bi13	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)	
Connector Name			
Connector Type	A05FW		
Connector No.	Bi14	PARKING BRAKE SWITCH (M/T)	
Connector Name			
Connector Type	PD1FB-A		
Connector No.	B21	FUEL LEVEL SENSOR UNIT (SUB)	
Connector Name			
Connector Type	ED2FGY-RS		

Diagram: A 12-pin connector labeled 'HS' with pins 1 and 2 highlighted. Pin 1 is at the top left, and pin 2 is at the bottom left.

MWI-93

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-	1	B	-
2	W	-	2	W	-



Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-	1	V	-
2	B	-	2	V	-
3	-	-	3	-	-



Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-	1	12	-
2	P	-	2	15	-
3	L	-	3	14	-
4	P	-	4	13	-
5	G	-	5	6	-
6	Y	-	6	3	-
7	B	-	7	8	-
8	V	-	8	4	-












Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-	1	SB	-
2	W	-	2	P	-
5	Y	-	8	L	-



A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
MWI

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >

METER		
Connector No.	E7	
Connector Name	I/P METER (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	
Connector Type	TH20FW-CS12-M4	
		
Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-
2	B	-
75	SB	-
Connector No.	E32	
Connector Name	WASHER LEVEL SWITCH	
Connector Type	Z02FB-R	
		
Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	B	-
Connector No.	E41	
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)	
Connector Type	BAAA2FB-AHZ4-LH	
		
Terminal No.	Color of Wire	Signal Name [Specification]
1	W	CAN-L
2	B	CAN-H
Connector No.	E16	
Connector Name	AMBIENT SENSOR	
Connector Type	RS02FB	
		
Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	L	-
35	L	-
Connector No.	E51	
Connector Name	ICC BRAKE HOLD RELAY	
Connector Type	MS02FL-M2	
		
Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	V	-
3	R	-
5	P	-
Connector No.	E47	
Connector Name	BRAKE FLUID LEVEL SWITCH	
Connector Type	YV02FGY	
		
Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	L	-
Connector No.	E103	
Connector Name	FUSE BLOCK (J/B)	
Connector Type	NS16FW-CS	
		
Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	L	-
8F	L	-

JCNWA0440GE

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
MWI

METER

Connector No.	E106	Connector No.	E107
Connector Name	WIRE TO WIRE	Connector Name	PARKING BRAKE SWITCH (A/T)
Connector Type	TH80FW-CS16-TM4	Connector Type	TB01FW
			
Terminal No.	Color of Wire	Signal Name [Specification]	
1	O	-	
8	P	-	
9	L	-	
18	O	-	
20	LG	-	
80	W	-	
81	P	-	
82	G	-	

Connector No.	F1	Connector Name	WIRE TO WIRE
Connector Type	SAA36FB-FSB-SH28	Connector Type	
			
Terminal No.	Color of Wire	Signal Name [Specification]	
1	BR	-	
2	BR	-	
3	BR	-	
4	BR	-	

Connector No.	F103	Connector Name	WIRE TO WIRE
Connector Type	TK36FW-NS10	Connector Type	
			
Terminal No.	Color of Wire	Signal Name [Specification]	
1	L	-	
2	W	-	
3	L	-	
4	SB	-	



Connector No.	F51	Connector Name	A/T ASSEMBLY
Connector Type	RK10FG-DGY	Connector Type	
			
Terminal No.	Color of Wire	Signal Name [Specification]	
5	4	-	
6	3	-	
7	2	-	
8	1	-	
9	0	-	
10	9	-	
11	8	-	
12	7	-	
13	6	-	

Connector No.	F37	Connector Name	OIL PRESSURE SWITCH
Connector Type	E01FGY-FS2-AR	Connector Type	
			
Terminal No.	Color of Wire	Signal Name [Specification]	
1	BR	-	
2	G	-	

JCNWA0441GE

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >

METER		Connector No. M1		Connector No. M2		Connector No. M3	
Connector Name	TOM (TRANSMISSION CONTROL MODULE)	Connector Name	FUSE BLOCK (J/B)	Connector Name	FUSE BLOCK (J/B)	Connector Name	M3
Connector Type	SP10FEGY	Connector Type	NS06IW-M2	Connector Type	NS10FW-CS	Connector Type	NS12FW-CS
							
Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire
1	BR	CAN-H	IA	V	-	3B	P
2	L/Y	CAN-L	2A	G	-	6B	Y
5A	L	-	5A	L	-	12C	R
							
Connector No. M6		Connector No. M7		Connector No. M16		Connector No. M32	
Connector Name	WIRE TO WIRE	Connector Name	WIRE TO WIRE	Connector Name	AFS CONTROL UNIT	Connector Name	PADDLE SHIFTER SHIFT-DOWN
Connector Type	TH80MW-CS16-TM4	Connector Type	TH80MW-CS16-TM4	Connector Type	TH40FW-NH	Connector Type	A03FW
							
Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire
8	P	-	20	L	-	7	W
9	L	-	21	P	-	30	G
18	O	-	22	L	-		
20	L	-	23	P	-		
80	LG	-	72	L	- (With A/T)		
81	R	-	72	LG	- (With M/T)	80	Y
82	V	-	82	BR	-	82	BR
95	O	-	95	O	-		
							

JCNWA0442GE

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >

METER

Connector No.	M66
Connector Name	PADDLE SHIFTER (SHIFT-UP)
Connector Type	AQ4FW




Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH4DFW-NH




Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	SAB4DFW



Connector No.	M54
Connector Name	METER CONTROL SWITCH
Connector Type	TH12FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	BAT
3	O	-
27	LG	COMM (METER->AMP)
28	R	VEHICLE SPEED (3-PULSE)
30	V	PARKING BRAKE SW
34	Y	COMM (AMP->LCD)

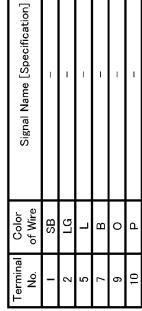


Connector No.	M68
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH4DFW-NH




Connector No.	M69
Connector Name	PADDLE SHIFTER (SHIFT-UP)
Connector Type	AQ4FW



Connector No.	M72
Connector Name	CAN-L



Terminal No.	Color of Wire	Signal Name [Specification]
1	2	STOP LAMP SW
4	P	SHIFT UP SW
5	L	PADDLE UP
6	O	COMM (AMP-METER)
7	GR	VEHICLE SPEED (2-PULSE)
8	L	SEAT BELT BUCKLE SW (DRIVER SIDE)
9	SB	MANUAL MODE SW
10	W	AUTO MODE SW
11	G	COMM (LCD->AMP)
14	BR	SHIFT DOWN SW
25	V	PADDLE DOWN

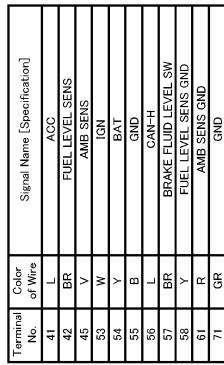

JCNWAW0443GE

MWI

O

P

P

M

M

C

D

T

M

G

I

—

K

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—










—

—

—

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >

METER		AV CONTROL UNIT (WITHOUT NAVI)		AV CONTROL UNIT (WITH NAVI)		AV CONTROL UNIT (WITH NAVI)		PRE-GRASH SEAT BELT CONTROL UNIT		INDICATOR	
Connector No.	Connector Name	Connector No.	Connector Name	Connector No.	Connector Name	Connector No.	Connector Name	Connector No.	Connector Name	Connector No.	Connector Name
M83	AV CONTROL UNIT (WITHOUT NAVI)	M85	AV CONTROL UNIT (WITH NAVI)	M87	AV CONTROL UNIT (WITH NAVI)	M88	AV CONTROL UNIT (WITH NAVI)	M110	PRE-GRASH SEAT BELT CONTROL UNIT	M116	INDICATOR
TH24FW-NH	TH32EW-NH	TH40FW-NH	TH40FW-NH	TH42FW-NH	TH42FW-NH	TH40FB-NH	TH40FB-NH	TH20FW-TB6	TH20FW-TB6	TH40FB-NH	TH40FB-NH
											
44 G	COMM (DISP->CONT)	86 L	CAN-H	1 2 3 4 5 6	7 8 9 10 11 12	1 2 3 4 5 6	7 8 9 10 11 12	128 129 130 131 132 133	124 125 126 127 128 129	2 7 9 10 11 12	1 2 3 4 5 6
55 SHIELD	SHIELD	87 P	CAN-L	13 14 15 16 17 18 19	20 21 22 23 24 25 26	6 7 8 9 10 11 12	13 14 15 16 17 18 19	125 126 127 128 129 130 131	120 121 122 123 124 125 126	4 5 6	1 2 3 4 5 6
56 L	COMM (CONT->DISP)										
Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
44 G	COMM (DISP->CONT)	86 L	CAN-H	1 2 3 4 5 6	7 8 9 10 11 12	1 2 3 4 5 6	7 8 9 10 11 12	128 129 130 131 132 133	124 125 126 127 128 129	2 7 9 10 11 12	1 2 3 4 5 6
55 SHIELD	SHIELD	87 P	CAN-L	13 14 15 16 17 18 19	20 21 22 23 24 25 26	6 7 8 9 10 11 12	13 14 15 16 17 18 19	125 126 127 128 129 130 131	120 121 122 123 124 125 126	4 5 6	1 2 3 4 5 6
56 L	COMM (CONT->DISP)										

JCNWA0444GE

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >

A

B

C

D

E

F

G

H

I

K

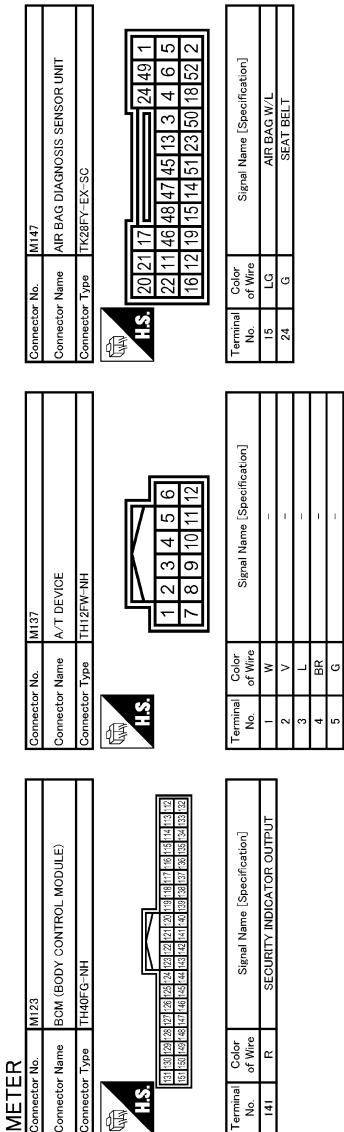
L

M

MWI

O

P



JCNWA0445GE

INFOID:0000000001606700

Fail Safe

FAIL SAFE

The unified meter and A/C amp. activates the fail-safe control if CAN communication with each unit is malfunctioning.

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >

Function		Specifications
Speedometer		Reset to zero by suspending communication.
Tachometer		
Fuel gauge		Indicates fuel level
Water temperature gauge		Reset to zero by suspending communication.
Illumination control		When suspending communication, change to nighttime mode.
Information display		The display turns off by suspending communication.
Buzzer		The buzzer turns off by suspending communication.
Warning lamp/indicator lamp	ABS warning lamp	The lamp turns on by suspending communication.
	VDC OFF indicator lamp	
	SLIP indicator lamp	
	Brake warning lamp	
	CRUISE warning lamp	
	Master warning lamp	
	Low tire pressure warning lamp	The lamp turns ON after flashing for 1 minute.
	AFS OFF indicator lamp	The lamp blinking caused by communication malfunction
	High beam indicator	The lamp turns off by suspending communication.
	4WAS warning lamp	
	Turn signal indicator lamp	
	Front fog indicator lamp	
	Oil pressure warning lamp	
	Malfunction indicator lamp	
	A/T CHECK warning lamp	
	Key warning lamp	

DTC Index

INFOID:000000001606701

Display contents of CONSULT-III	Time		Diagnostic item is detected when...	Refer to
U1000: CAN COMM CIRCUIT	CRNT	PAST	When unified meter and A/C amp. is not transmitting or receiving CAN communication signal for 2 seconds or more.	MWI-41
U1010: CONTROL UNIT (CAN)	CRNT	PAST	When detecting error during the initial diagnosis of CAN controller of unified meter and A/C amp.	MWI-42
B2201: COMM ERROR 1	CRNT	PAST	If a communication error is present in the communication line between unified meter and A/C amp. and combination meter for 2 seconds or more.	MWI-43
B2202: COMM ERROR 2	CRNT	PAST	If a communication error is present in the communication line between unified meter and A/C amp. and combination meter for 2 seconds or more.	MWI-45
B2205: VEHICLE SPEED	CRNT	PAST	The abnormal vehicle speed signal is input from ABS actuator and electric unit (control unit) for 2 seconds or more.	MWI-47
B2267: ENGINE SPEED	CRNT	PAST	If ECM continuously transmits abnormal engine speed signals for 2 seconds or more.	MWI-48
B2268: WATER TEMP	CRNT	PAST	If ECM continuously transmits abnormal engine coolant temperature signals for 60 seconds or more.	MWI-49

NOTE:

The details of TIME display are as follows.

- CRNT: The malfunctions that are detected now.
- PAST: The malfunctions was detected in the past. IGN counter is displayed on FFD (Freeze Frame data).

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS >

- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like $0 \rightarrow 1 \rightarrow 2 \dots 38 \rightarrow 39$ after returning to the normal condition whenever IGN OFF \rightarrow ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:0000000001889443

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT	Off
	Front wiper switch INT	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
RR FOG SW	NOTE: The item is indicated, but not monitored.	Off
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	NOTE: The item is indicated, but not monitored.	Off
DOOR SW-RL	NOTE: The item is indicated, but not monitored.	Off

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status	
DOOR SW-BK	NOTE: The item is indicated, but not monitored.	Off	A
CDL LOCK SW	Other than power door lock switch LOCK	Off	B
	Power door lock switch LOCK	On	
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off	C
	Power door lock switch UNLOCK	On	
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off	D
	Driver door key cylinder LOCK position	On	
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off	E
	Driver door key cylinder UNLOCK position	On	
KEY CYL SW-TR	NOTE: The item is indicated, but not monitored.	Off	F
HAZARD SW	Hazard switch is not pressed	Off	G
	Hazard switch is pressed	On	
REAR DEF SW	NOTE: The item is indicated, but not monitored.	Off	H
H/L WASH SW	NOTE: The item is indicated, but not monitored.	Off	I
TR CANCEL SW	Trunk lid opener cancel switch OFF	Off	J
	Trunk lid opener cancel switch ON	On	
TR/BD OPEN SW	Trunk lid opener switch OFF	Off	K
	While the trunk lid opener switch is turned ON	On	
TRNK/HAT MNTR	Trunk lid closed	Off	L
	Trunk lid opened	On	
RKE-LOCK	LOCK button of Intelligent Key is not pressed	Off	M
	LOCK button of Intelligent Key is pressed	On	
RKE-UNLOCK	UNLOCK button of Intelligent Key is not pressed	Off	N
	UNLOCK button of Intelligent Key is pressed	On	
RKE-TR/BD	TRUNK OPEN button of Intelligent Key is not pressed	Off	O
	TRUNK OPEN button of Intelligent Key is pressed	On	
RKE-PANIC	PANIC button of Intelligent Key is not pressed	Off	P
	PANIC button of Intelligent Key is pressed	On	
RKE-P/W OPEN	UNLOCK button of Intelligent Key is not pressed	Off	Q
	UNLOCK button of Intelligent Key is pressed and held	On	
RKE-MODE CHG	LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously	Off	MWI
	LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously	On	
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V	
	Dark outside of the vehicle	Close to 0 V	
REQ SW-DR	Driver door request switch is not pressed	Off	
	Driver door request switch is pressed	On	
REQ SW-AS	Passenger door request switch is not pressed	Off	
	Passenger door request switch is pressed	On	
REQ SW-BD/TR	Trunk request switch is not pressed	Off	
	Trunk request switch is pressed	On	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
ACC RLY -F/B	Ignition switch in OFF position	Off
	Ignition switch in ACC or ON position	On
CLUCH SW	The clutch pedal is not depressed	Off
	The clutch pedal is depressed	On
BRAKE SW 1	The brake pedal is not depressed	On
	The brake pedal is depressed	Off
DETE/CANCL SW	Selector lever in P position	Off
	Selector lever in any position other than P	On
SFT PN/N SW	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
S/L -LOCK	Steering is locked	Off
	Steering is unlocked	On
S/L -UNLOCK	Steering is unlocked	Off
	Steering is locked	On
S/L RELAY-F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
UNLK SEN-DR	Driver door is unlocked	Off
	Driver door is locked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in P position	Off
	Selector lever in any position other than P	On
SFT PN -IPDM	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
SFT P -MET	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT N -MET	Selector lever in any position other than N	Off
	Selector lever in N position	On
ENGINE STATE	Engine stopped	Stop
	While the engine stalls	Stall
	At engine cranking	Crank
	Engine running	Run
S/L LOCK-IPDM	Steering is locked	Off
	Steering is unlocked	On
S/L UNLK-IPDM	Steering is unlocked	Off
	Steering is locked	On
S/L RELAY-REQ	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status	
VEH SPEED 1	While driving	Equivalent to speedometer reading	A
VEH SPEED 2	While driving	Equivalent to speedometer reading	
DR DOOR STATE	Driver door is locked	LOCK	B
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Driver door is unlocked	UNLK	C
AR DOOR STATE	Passenger door is locked	LOCK	D
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Passenger door is unlocked	UNLK	E
ID OK FLAG	Ignition switch in ACC or ON position	Reset	F
	Ignition switch in OFF position	Set	
PRMT ENG STRT	The engine start is prohibited	Reset	G
	The engine start is permitted	Set	
PRMT RKE STRT	NOTE: The item is indicated, but not monitored.	Reset	H
KEY SW -SLOT	Intelligent Key is not inserted into key slot	Off	I
	Intelligent Key is inserted into key slot	On	
RKE OPE COUN1	During the operation of Intelligent Key	Operation frequency of Intelligent Key	J
RKE OPE COUN2	NOTE: The item is indicated, but not monitored.	—	K
CONFIRM ID ALL	The key ID that the key slot receives does not accord with any key ID registered to BCM.	Yet	L
	The key ID that the key slot receives accords with any key ID registered to BCM.	DONE	
CONFIRM ID4	The key ID that the key slot receives does not accord with the fourth key ID registered to BCM.	Yet	M
	The key ID that the key slot receives accords with the fourth key ID registered to BCM.	DONE	
CONFIRM ID3	The key ID that the key slot receives does not accord with the third key ID registered to BCM.	Yet	N
	The key ID that the key slot receives accords with the third key ID registered to BCM.	DONE	
CONFIRM ID2	The key ID that the key slot receives does not accord with the second key ID registered to BCM.	Yet	O
	The key ID that the key slot receives accords with the second key ID registered to BCM.	DONE	
CONFIRM ID1	The key ID that the key slot receives does not accord with the first key ID registered to BCM.	Yet	P
	The key ID that the key slot receives accords with the first key ID registered to BCM.	DONE	MWI
TP 4	The ID of fourth Intelligent Key is not registered to BCM	Yet	
	The ID of fourth Intelligent Key is registered to BCM	DONE	
TP 3	The ID of third Intelligent Key is not registered to BCM	Yet	
	The ID of third Intelligent Key is registered to BCM	DONE	
TP 2	The ID of second Intelligent Key is not registered to BCM	Yet	
	The ID of second Intelligent Key is registered to BCM	DONE	
TP 1	The ID of first Intelligent Key is not registered to BCM	Yet	
	The ID of first Intelligent Key is registered to BCM	DONE	

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
AIR PRESS FL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	ID of front LH tire transmitter is registered	Green
	ID of front LH tire transmitter is not registered	Red
ID REGST FR1	ID of front RH tire transmitter is registered	Green
	ID of front RH tire transmitter is not registered	Red
ID REGST RR1	ID of rear RH tire transmitter is registered	Green
	ID of rear RH tire transmitter is not registered	Red
ID REGST RL1	ID of rear LH tire transmitter is registered	Green
	ID of rear LH tire transmitter is not registered	Red
WARNING LAMP	Tire pressure indicator OFF	Off
	Tire pressure indicator ON	On
BUZZER	Tire pressure warning alarm is not sounding	Off
	Tire pressure warning alarm is sounding	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

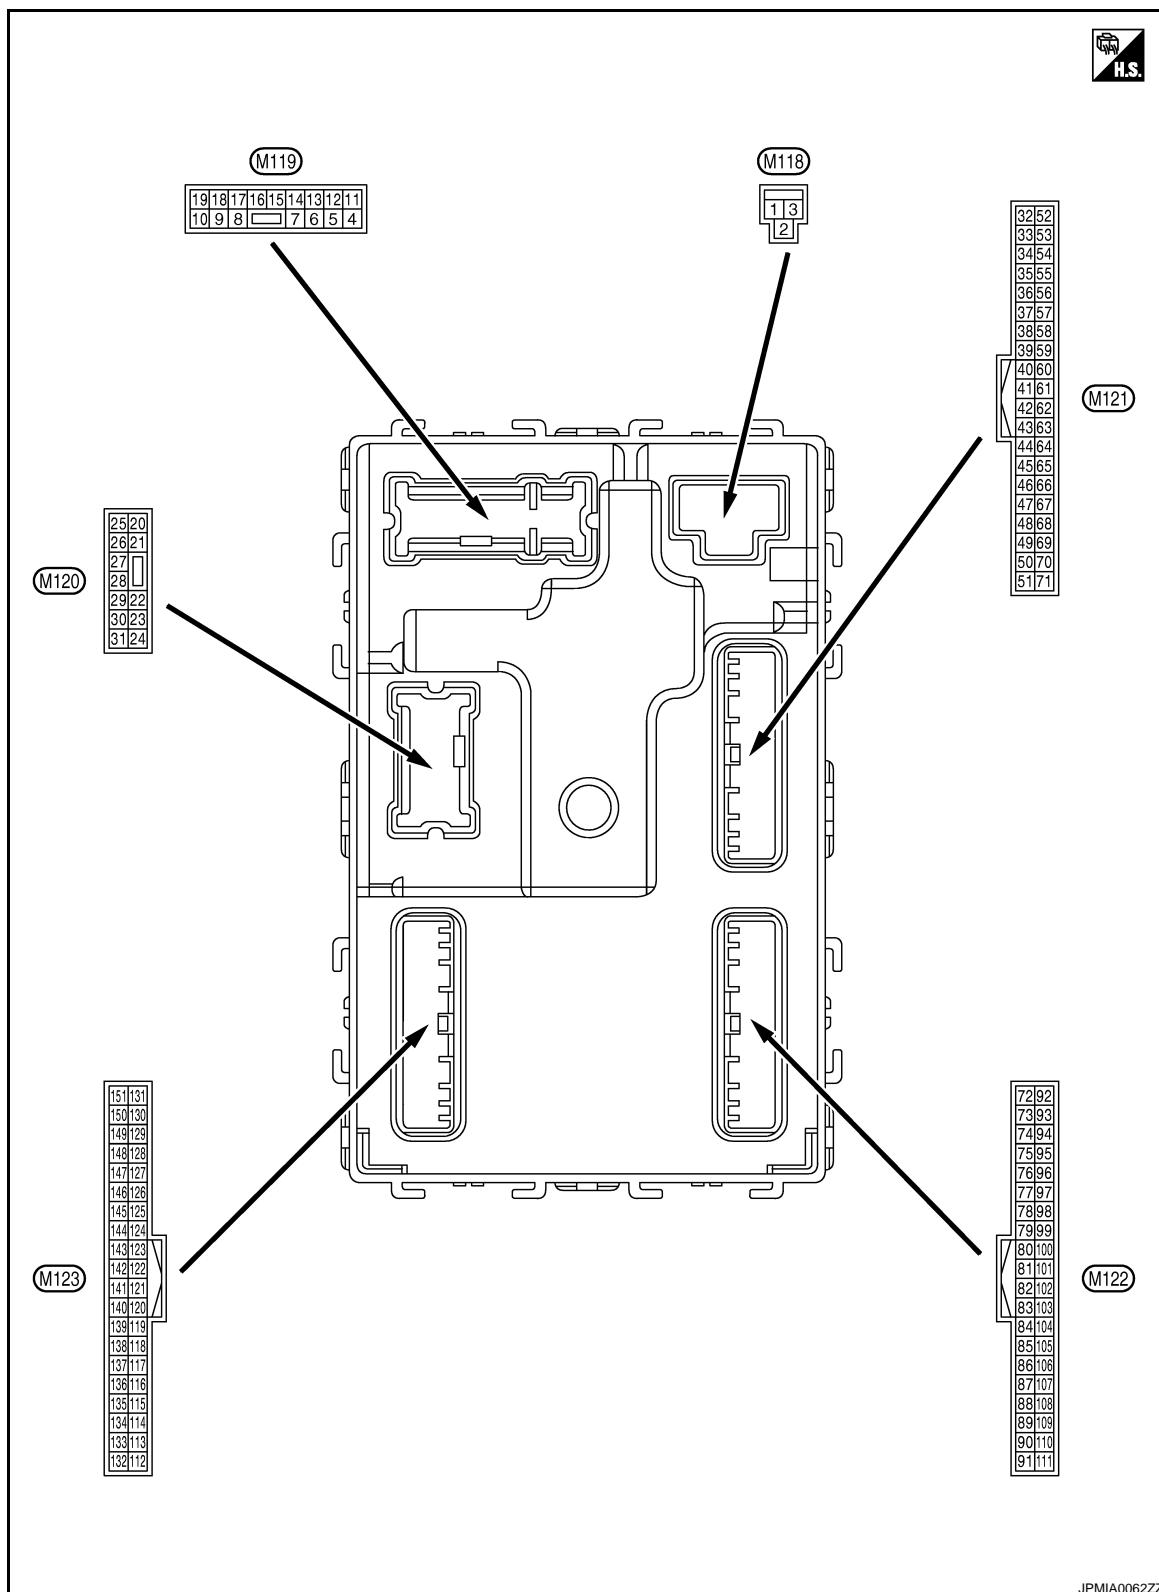TERMINAL LAYOUT



PHYSICAL VALUES

A
B
C
D
E
F
G
H
I
J
K
L
M

MWI

O
P

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (Y)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		Battery voltage
3 (Y)	Ground	P/W power supply (RAP)	Output	Ignition switch ON		Battery voltage
4 (LG)	Ground	Interior room lamp power supply	Output	After passing the interior room lamp battery saver operation time		0 V
				Any other time after passing the interior room lamp battery saver operation time		Battery voltage
5 (P)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
7 (Y)	Ground	Step lamp	Output	Step lamp	ON	0 V
					OFF	Battery voltage
8 (V)	Ground	All doors, fuel lid LOCK	Output	All doors, fuel lid	LOCK (Actuator is activated)	Battery voltage
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door, fuel lid UNLOCK	Output	Driver door, fuel lid	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
11 (R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
14 (W)	Ground	Push-button ignition switch illumination ground	Output	Tail lamp	OFF	0 V
					ON	<p>NOTE: When the illumination brightening/dimming level is in the neutral position</p>
15 (O)	Ground	ACC indicator lamp	Output	Ignition switch	OFF	Battery voltage
					ACC or ON	0 V


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >


Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
17 (V)	Ground	Turn signal (front RH)	Output	Ignition switch ON Turn signal switch OFF Turn signal switch RH
18 (G)	Ground	Turn signal (front LH)	Output	Ignition switch ON Turn signal switch OFF Turn signal switch LH
19 (V)	Ground	Room lamp timer control	Output	Interior room lamp OFF ON
20 (V)	Ground	Turn signal (rear RH)	Output	Ignition switch ON Turn signal switch OFF Turn signal switch RH
23 (G)	Ground	Trunk lid opening.	Output	Trunk lid Open (Trunk lid opener actuator is activated) Close (Trunk lid opener actuator is not activated)
25 (G)	Ground	Turn signal (rear LH)	Output	Ignition switch ON Turn signal switch OFF Turn signal switch LH
30 (R)	Ground	Trunk room lamp	Output	Trunk room lamp ON OFF

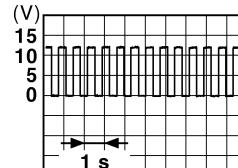

PKID0926E

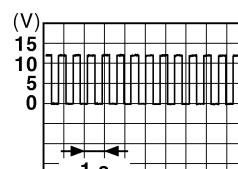


PKID0926E

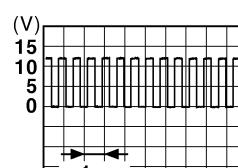


PKID0926E

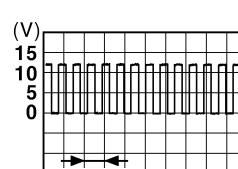6.5 V



PKID0926E

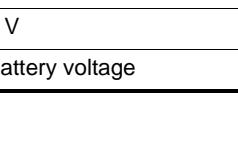6.5 V







PKID0926E

6.5 V





BCM (BODY CONTROL MODULE)
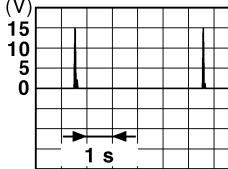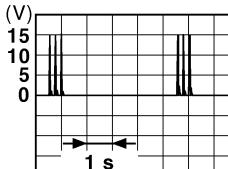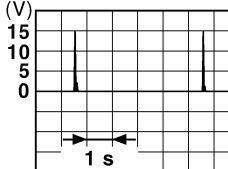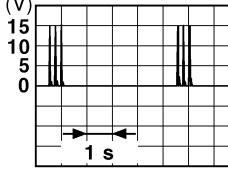
< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
34 (SB)	Ground	Trunk room antenna 1 (-)	Output Ignition switch OFF	When Intelligent Key is in the passenger compartment
				 (V) 15 10 5 0 JMKA0062GB
35 (V)	Ground	Trunk room antenna 1 (+)	Output Ignition switch OFF	When Intelligent Key is not in the passenger compartment
				 (V) 15 10 5 0 JMKA0063GB
38 (B)	Ground	Rear bumper antenna (-)	Output When the trunk lid request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area
				 (V) 15 10 5 0 JMKA0062GB
				When Intelligent Key is not in the antenna detection area
				 (V) 15 10 5 0 JMKA0063GB






BCM (BODY CONTROL MODULE)
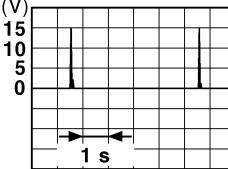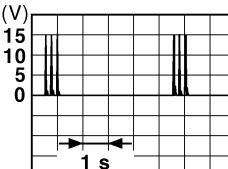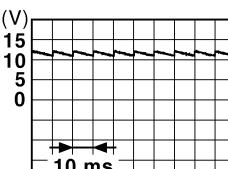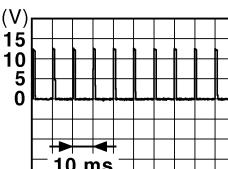
< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)		
	+	-	Signal name	Input/ Output		
39 (W)	Ground	Rear bumper antenna (+)	Output	When the trunk lid request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKA0062GB
					When Intelligent Key is not in the antenna detection area	 JMKA0063GB
47 (Y)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0 V
50 (R)	Ground	Trunk room lamp switch	Input	Trunk room lamp switch	OFF (Trunk is closed)	 11.8 V
					ON (Trunk is open)	0 V
52 (SB)	Ground	Starter relay control	Output	Ignition switch OFF (M/T models)	When the clutch pedal is depressed	Battery voltage
					When the clutch pedal is not depressed	0 V
				Ignition switch ON (A/T models)	When selector lever is in P or N position and the brake is depressed	Battery voltage
					When selector lever is in P or N position and the brake is not depressed	0 V
61 (SB)	Ground	Trunk request switch	Input	Trunk request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 JPMIA0016GB
64 (L)	Ground	Request switch buzzer	Output	Request switch buzzer	Sounding	0 V
					Not sounding	Battery voltage

BCM (BODY CONTROL MODULE)

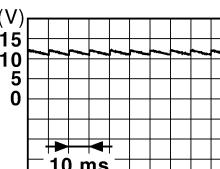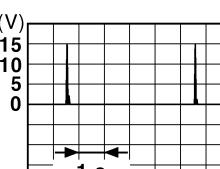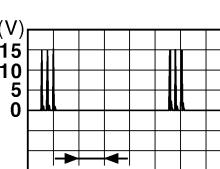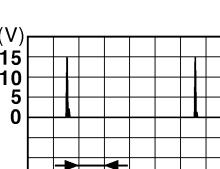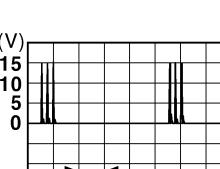
< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
67 (GR)	Ground	Trunk lid opener switch	Input	Pressed Not pressed
				 11.8 V
72 (R)	Ground	Room antenna 2 (-) (center console)	Output	When Intelligent Key is in the passenger compartment
				 JMKIA0062GB
				When Intelligent Key is not in the passenger compartment
				 JMKIA0063GB
73 (G)	Ground	Room antenna 2 (+) (center console)	Output	When Intelligent Key is in the passenger compartment
				 JMKIA0062GB
				When Intelligent Key is not in the passenger compartment
				 JMKIA0063GB


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >


Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
74 (SB)	Ground	Passenger door antenna (-)	Output	When Intelligent Key is in the antenna detection area
				When the passenger door request switch is operated with ignition switch OFF
75 (BR)	Ground	Passenger door antenna (+)	Output	When Intelligent Key is in the antenna detection area
				When the passenger door request switch is operated with ignition switch OFF
76 (V)	Ground	Driver door antenna (-)	Output	When Intelligent Key is in the antenna detection area
				When the driver door request switch is operated with ignition switch OFF

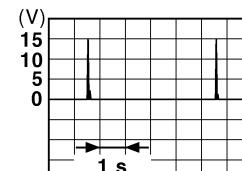


JMKIA0062GB

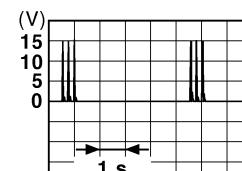


JMKIA0063GB

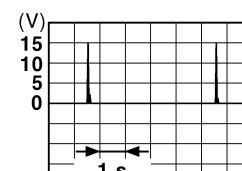


JMKIA0062GB

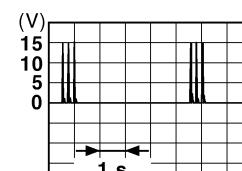

JMKIA0063GB

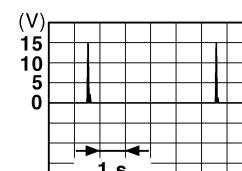

JMKIA0062GB

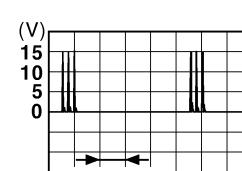

JMKIA0063GB

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI


O

P


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >


Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
77 (LG)	Ground	Driver door antenna (+)	Output	When the driver door request switch is operated with ignition switch OFF
				When Intelligent Key is not in the antenna detection area
78 (Y)	Ground	Room antenna (-) (instrument panel)	Output	When Intelligent Key is in the passenger compartment
				When Intelligent Key is not in the passenger compartment
79 (BR)	Ground	Room antenna (+) (instrument panel)	Output	When Intelligent Key is in the passenger compartment
				When Intelligent Key is not in the passenger compartment

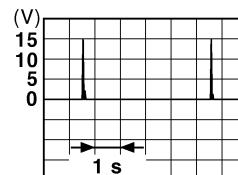


JMKIA0062GB

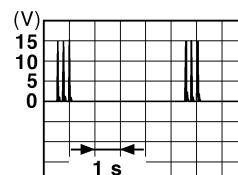


JMKIA0063GB

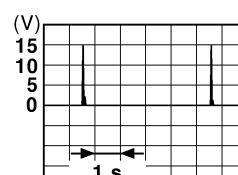


JMKIA0062GB

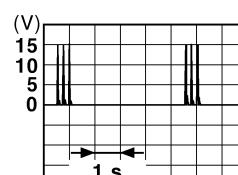

JMKIA0063GB

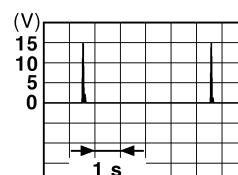






JMKIA0062GB

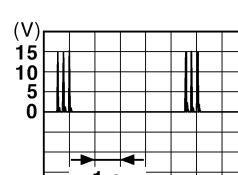

JMKIA0063GB






BCM (BODY CONTROL MODULE)
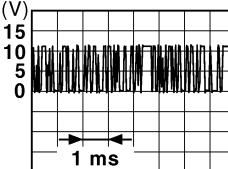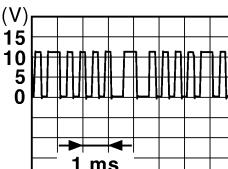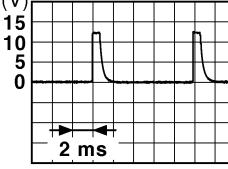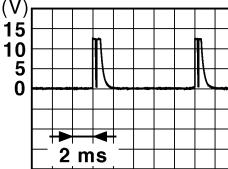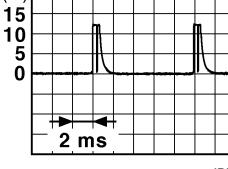
< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	A B C D E F G H I J K L M MWI O P		
	+	-	Signal name	Input/ Output			
80 (GR)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.	A B C D E F G H I J K L M MWI O P
81 (W)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.	A B C D E F G H I J K L M MWI O P
82 (R)	Ground	Ignition relay [fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V	D E F G H I J K L M MWI O P
					ON	Battery voltage	
83 (Y)	Ground	Remote keyless entry receiver signal	Input/ Output	During waiting		 JMKA0064GB	E F G H I J K L M MWI O P
				When operating either button on Intelligent Key		 JMKA0065GB	
87 (BR)	Ground	Combination switch INPUT 5	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	 JPMIA0041GB 1.4 V	J K L M MWI O P
					Front fog lamp switch ON (Wiper intermittent dial 4)	 JPMIA0037GB 1.3 V	
					Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7 	 JPMIA0040GB 1.3 V	



BCM (BODY CONTROL MODULE)
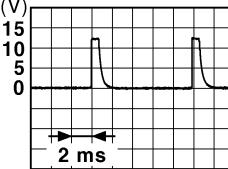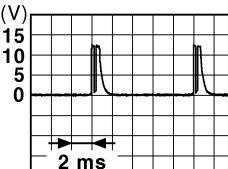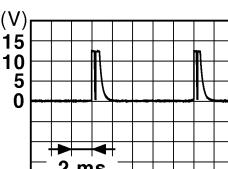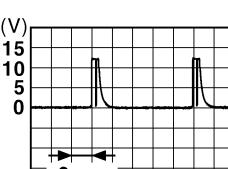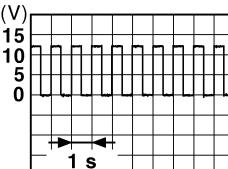
< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
88 (O)	Ground	Combination switch INPUT 3	Input	 All switch OFF (Wiper intermittent dial 4)  Lighting switch HI (Wiper intermittent dial 4)  Lighting switch 2ND (Wiper intermittent dial 4)  Any of the conditions below with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3
				JPMIA0041GB 1.4 V
				JPMIA0036GB 1.3 V
				JPMIA0037GB 1.3 V
89 (BR)	Ground	Push-button ignition switch (push switch)	Input	Push-button igni- tion switch (push switch)
				Pressed
				Not pressed
90 (P)	Ground	CAN - L	Input/ Output	—
91 (L)	Ground	CAN - H	Input/ Output	—
92 (LG)	Ground	Key slot illumination	Output	OFF
				 Blinking
				ON
				Battery voltage
				JPMIA0015GB 6.5 V

BCM (BODY CONTROL MODULE)
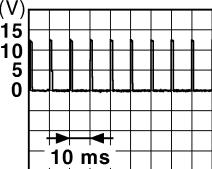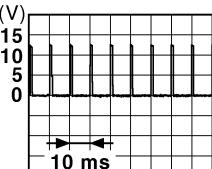
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)	
+	-	Signal name	Input/ Output				
93 (V)	Ground	ON indicator lamp	Output	Ignition switch	OFF or ACC	0 V	
					ON	Battery voltage	
95 (O)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V	
					ACC or ON	Battery voltage	
96 (Y)	Ground	A/T device (detention switch) power supply	Output	—		Battery voltage	
97 (L)	Ground	Steering lock condition No. 1	Input	Steering lock	LOCK status	0 V	
					UNLOCK status	Battery voltage	
98 (P)	Ground	Steering lock condition No. 2	Input	Steering lock	LOCK status	Battery voltage	
					UNLOCK status	0 V	
99 (R)	Ground	Selector lever P position switch (Except M/T models)	Input	Selector lever	P position	0 V	
					Any position other than P	Battery voltage	
		ASCD clutch switch (M/T models with ICC)		ASCD clutch switch	OFF (Clutch pedal is depressed)	0 V	
					ON (Clutch pedal is not depressed)	Battery voltage	
		ICC clutch switch (M/T models without ICC)		ICC clutch switch	OFF (Clutch pedal is depressed)	0 V	
					ON (Clutch pedal is not depressed)	Battery voltage	
100 (Y)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V	
					OFF (Not pressed)	 <small>JPMIA0016GB</small> <small>1.0 V</small>	
101 (P)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V	
					OFF (Not pressed)	 <small>JPMIA0016GB</small> <small>1.0 V</small>	
102 (O)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V	
					ON	Battery voltage	
103 (LG)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF		Battery voltage	
106 (W)	Ground	Steering wheel lock unit power supply	Output	Ignition switch	OFF or ACC	Battery voltage	
					ON	0 V	

A

B

C

D

E

F

G

H

I

J

K

L

M

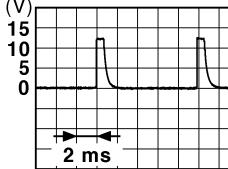
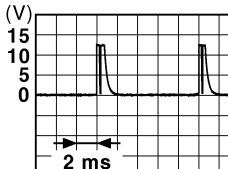
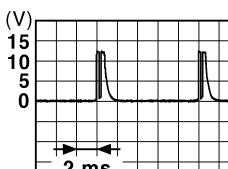
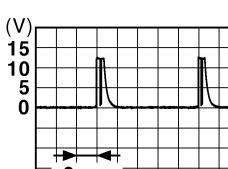
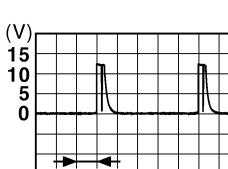
MWI

O

P





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
107 (LG)	Ground	Combination switch INPUT 1	Combination switch (Wiper intermittent dial 4)	All switch OFF
				 JPMIA0041GB 1.4 V
				 JPMIA0037GB 1.3 V
				 JPMIA0036GB 1.3 V
				 JPMIA0038GB 1.3 V
				 JPMIA0039GB 1.3 V

BCM (BODY CONTROL MODULE)
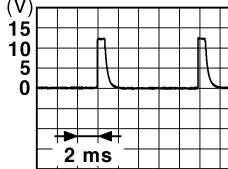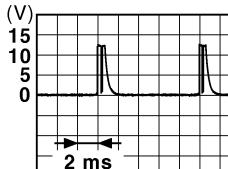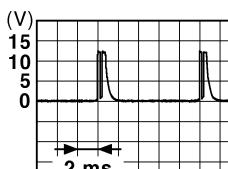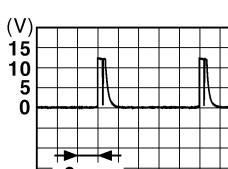
< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	
	Signal name	Input/ Output			
+	-				
108 (R)	Ground	Combination switch INPUT 4	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)
					 JPMIA0041GB 1.4 V
					 JPMIA0038GB 1.3 V
					 JPMIA0036GB 1.3 V
					 JPMIA0039GB 1.3 V
					Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6

A

B

C

D

E

F

G

H

I

J

K

L

M

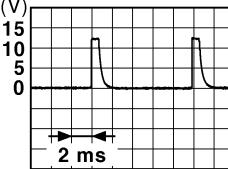
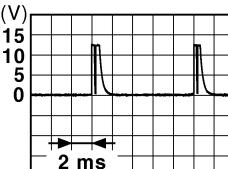
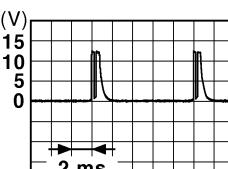
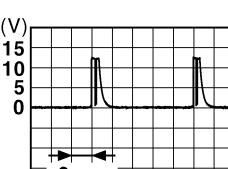
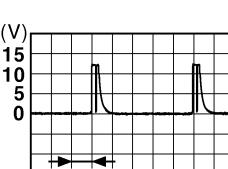
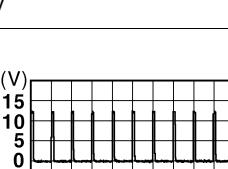
MWI

O

P

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
109 (W)	Ground	Combination switch INPUT 2	Combination switch (Wiper intermittent dial 4)	All switch OFF
				 JPMIA0041GB 1.4 V
				 JPMIA0037GB 1.3 V
				 JPMIA0036GB 1.3 V
				 JPMIA0038GB 1.3 V
110 (G)	Ground	Hazard switch	Hazard switch	Pressed
				 JPMIA0040GB 1.3 V
110 (G)	Ground	Hazard switch	Hazard switch	Not pressed
				 JPMIA0012GB 1.1 V


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
111 (Y)	Ground	Steering lock unit communication	Input/ Output	LOCK status LOCK or UNLOCK For 15 seconds after UN-LOCK 15 seconds or later after UNLOCK
113 (P)	Ground	Optical sensor signal	Input	When bright outside of the vehicle When dark outside of the vehicle
114 (R)	Ground	Clutch interlock switch	Input	OFF (Clutch pedal is not depressed) ON (Clutch pedal is depressed)
116 (SB)	Ground	Stop lamp switch 1	Input	—
118 (BR)	Ground	Stop lamp switch 2	Input	OFF (Brake pedal is not depressed) ON (Brake pedal is depressed) ICC brake hold relay (With ICC)
119 (SB)	Ground	Front door lock assembly driver side (unlock sensor)	Input	Driver door LOCK status UNLOCK status
121 (SB)	Ground	Key slot switch	Input	When Intelligent Key is inserted into key slot When Intelligent Key is not inserted into key slot
122 (P)	Ground	ACC feedback signal	Input	Ignition switch OFF ACC or ON
123 (W)	Ground	IGN feedback signal	Input	Ignition switch OFF or ACC ON

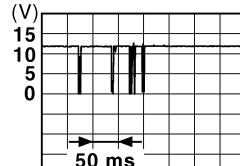

JMKIA0066GB

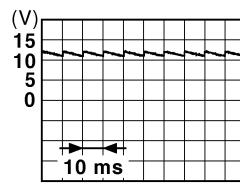

JPMIA0011GB

11.8 V

A

B

C

D

E

F

G

H

J

K

L

M

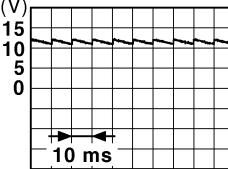
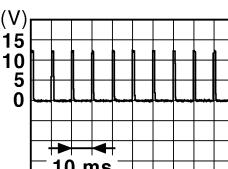
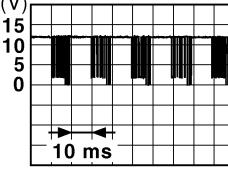
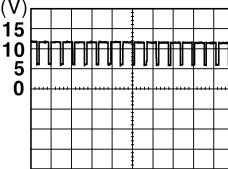
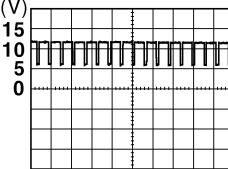
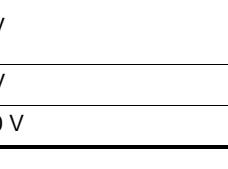
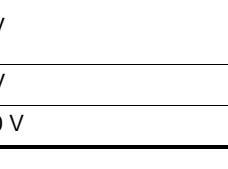
MWI

O

P





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
124 (LG)	Ground	Passenger door switch	Input	 OFF (When passenger door closes) ON (When passenger door opens)
129 (O)	Ground	Trunk lid opener cancel switch	Input	 CANCEL
				ON
132 (V)	Ground	Power window switch communication	Input/ Output	 Ignition switch ON
				Ignition switch OFF or ACC
133 (L)	Ground	Push-button ignition switch illumination	Output	 ON (When tail lamps OFF)
				NOTE: The pulse width of this wave is varied by the illumination brightening/dimming level.
134 (LG)	Ground	LOCK indicator lamp	Output	 ON
				OFF
137 (O)	Ground	Receiver and sensor ground	Input	 Ignition switch ON
138 (V)	Ground	Receiver and sensor power supply output	Output	 OFF ACC or ON




BCM (BODY CONTROL MODULE)
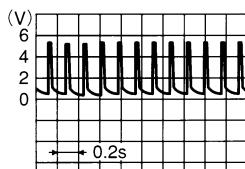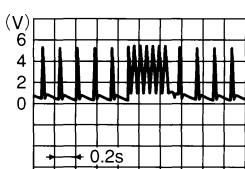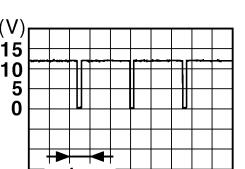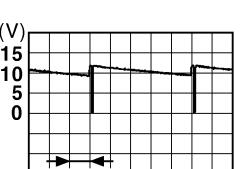
< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)		
	+	-				
139 (L)	Ground	Tire pressure receiver signal	Input/ Output	Ignition switch ON	Standby state	 OCC3881D
					When receiving the signal from the transmitter	 OCC3880D
140 (GR)	Ground	Selector lever P/N position signal	Input	Selector lever	P or N position	12.0 V
					Except P and N positions	0 V
141 (R)	Ground	Security indicator signal	Output	Security indicator	ON	0 V
					Blinking	 JPMIA0014GB 11.3 V
					OFF	Battery voltage
142 (BR)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper intermittent dial 4)	All switch OFF	0 V
					Lighting switch 1ST	
					Lighting switch HI	
					Lighting switch 2ND	
					Turn signal switch RH	 JPMIA0031GB 10.7 V
143 (V)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	0 V
					Front wiper switch HI (Wiper intermittent dial 4)	
					Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 • Wiper intermittent dial 6 • Wiper intermittent dial 7 	
						 JPMIA0032GB 10.7 V

BCM (BODY CONTROL MODULE)
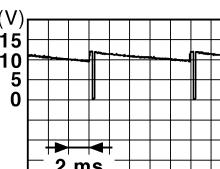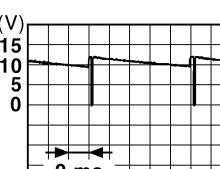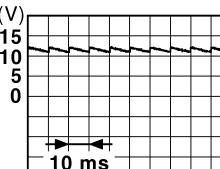
< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
144 (G)	Ground	Combination switch OUTPUT 2	Combination switch	All switch OFF (Wiper intermittent dial 4)
				Front washer switch ON (Wiper intermittent dial 4)
				Any of the conditions below with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6
			Combination switch (Wiper intermittent dial 4)	0 V
				 JPMIA0033GB 10.7 V
145 (L)	Ground	Combination switch OUTPUT 3		All switch OFF
				Front wiper switch INT
			Combination switch (Wiper intermittent dial 4)	Front wiper switch LO
				Lighting switch AUTO
			Combination switch (Wiper intermittent dial 4)	 JPMIA0034GB 10.7 V
146 (SB)	Ground	Combination switch OUTPUT 4		All switch OFF
				Front fog lamp switch ON
				Lighting switch 2ND
				Lighting switch PASS
			Combination switch (Wiper intermittent dial 4)	Turn signal switch LH
				 JPMIA0035GB 10.7 V
149 (W)	Ground	Tire pressure warning check switch	Input	—
				5 V
150 (R)	Ground	Driver door switch	Driver door switch	OFF (When driver door closes)
				 JPMIA0011GB 11.8 V
			Driver door switch	ON (When driver door opens)
				0 V
151 (G)	Ground	Rear window defogger relay	Rear window de-fogger	Active
				0 V
			Rear window de-fogger	Not activated
				Battery voltage

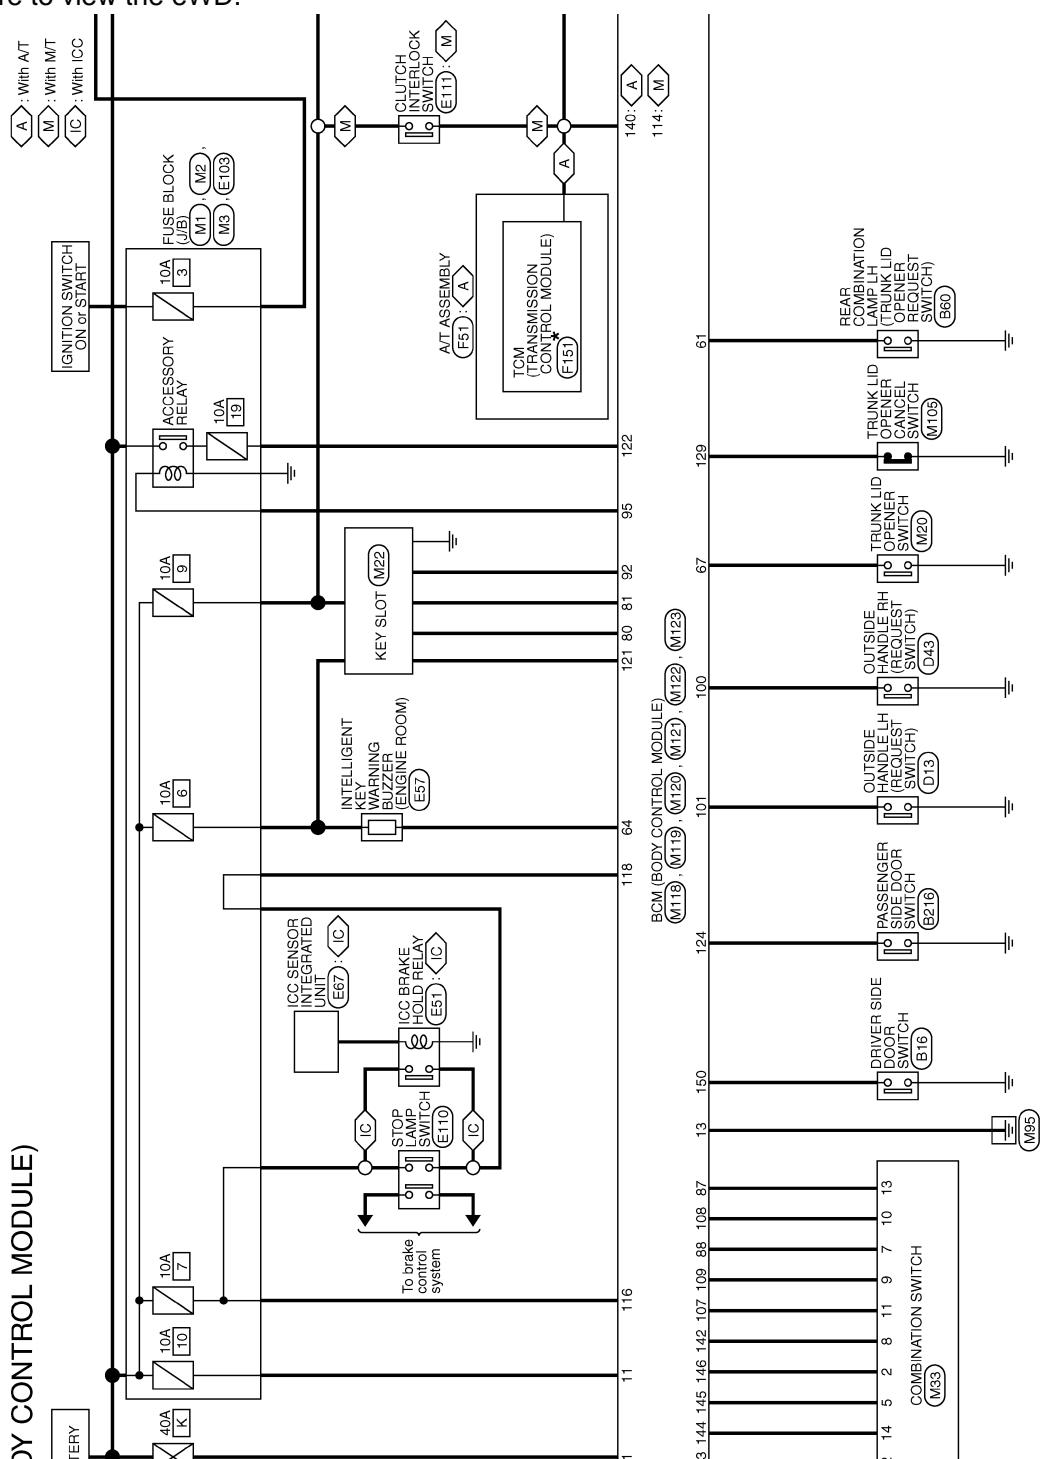
BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Wiring Diagram - BCM -

INFOID:000000001889444

Click here to view the eWD.



*: This connector is not shown in "Harness Layout".

2007/05/18

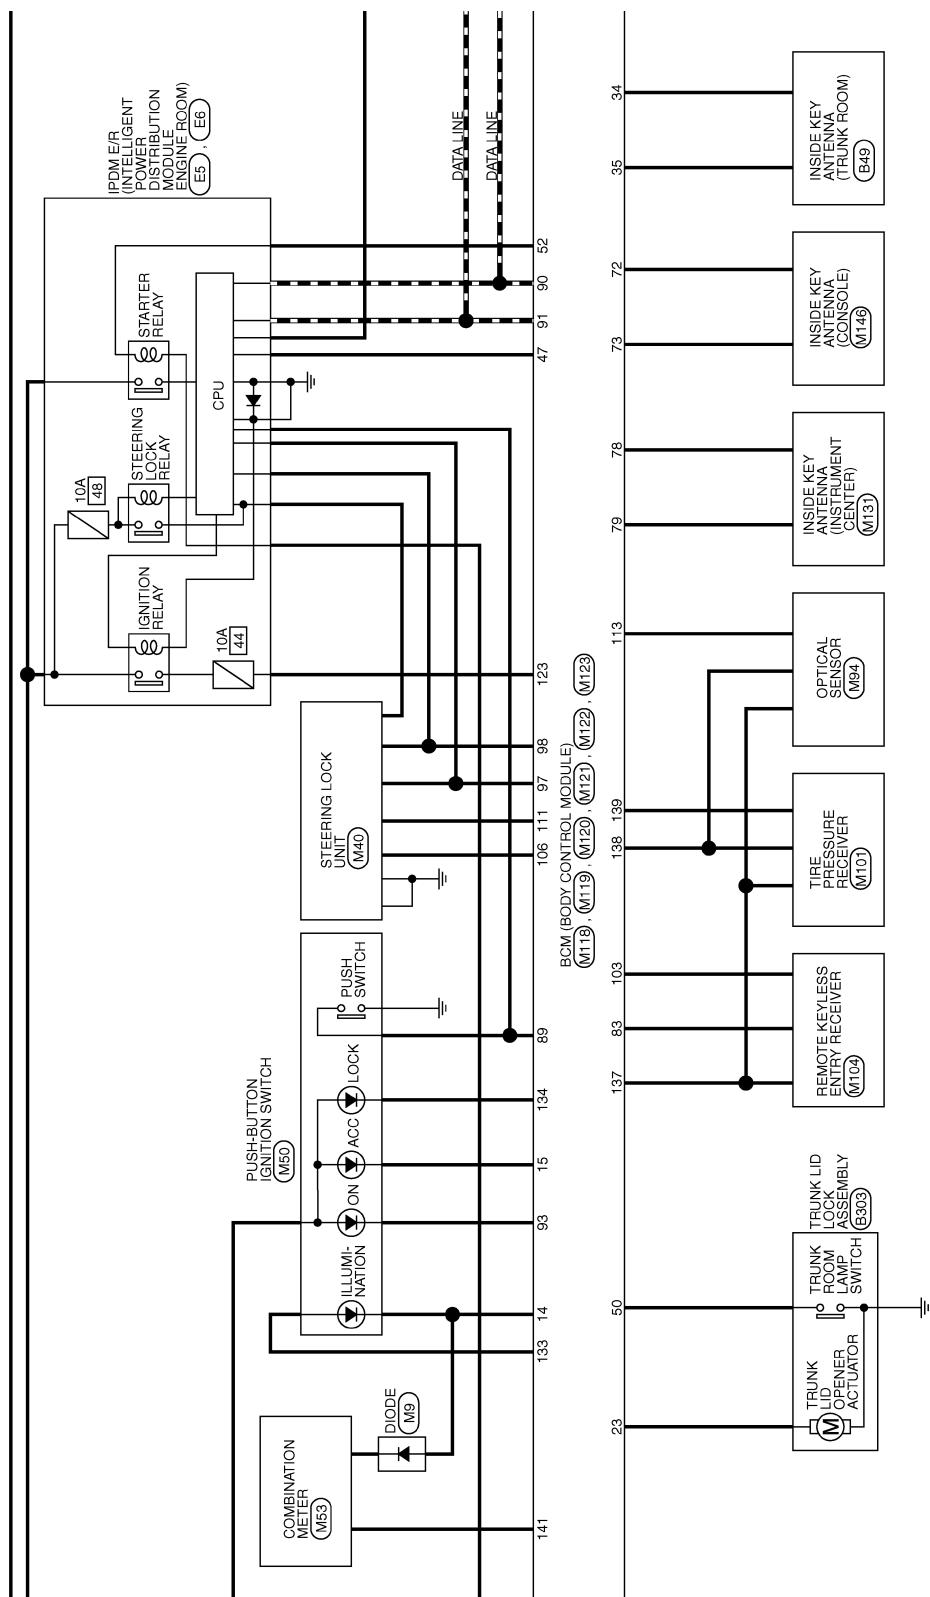
JCMWA0834GE

A B C D E F G H I J K L M N O P

MWI

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS >



JCMWA0835GF

BCM (BODY CONTROL MODULE)
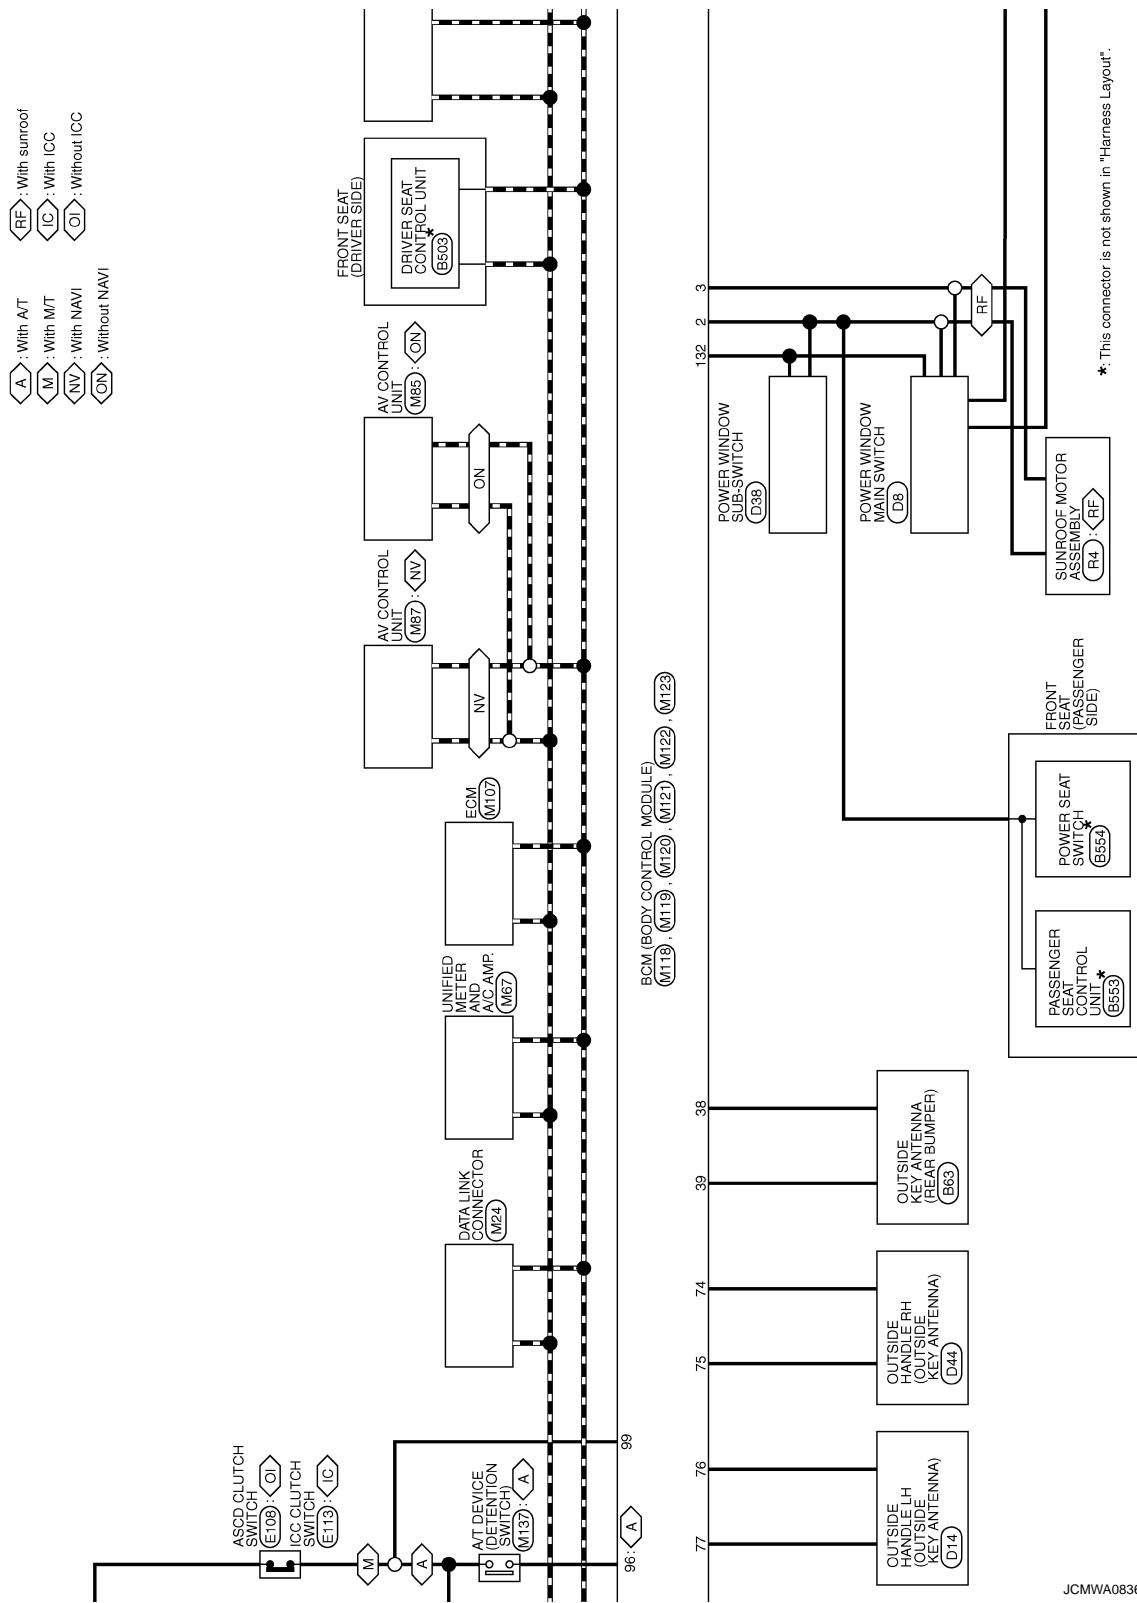
< ECU DIAGNOSIS >




JCMWA0836GE

MWI

BCM (BODY CONTROL MODULE)
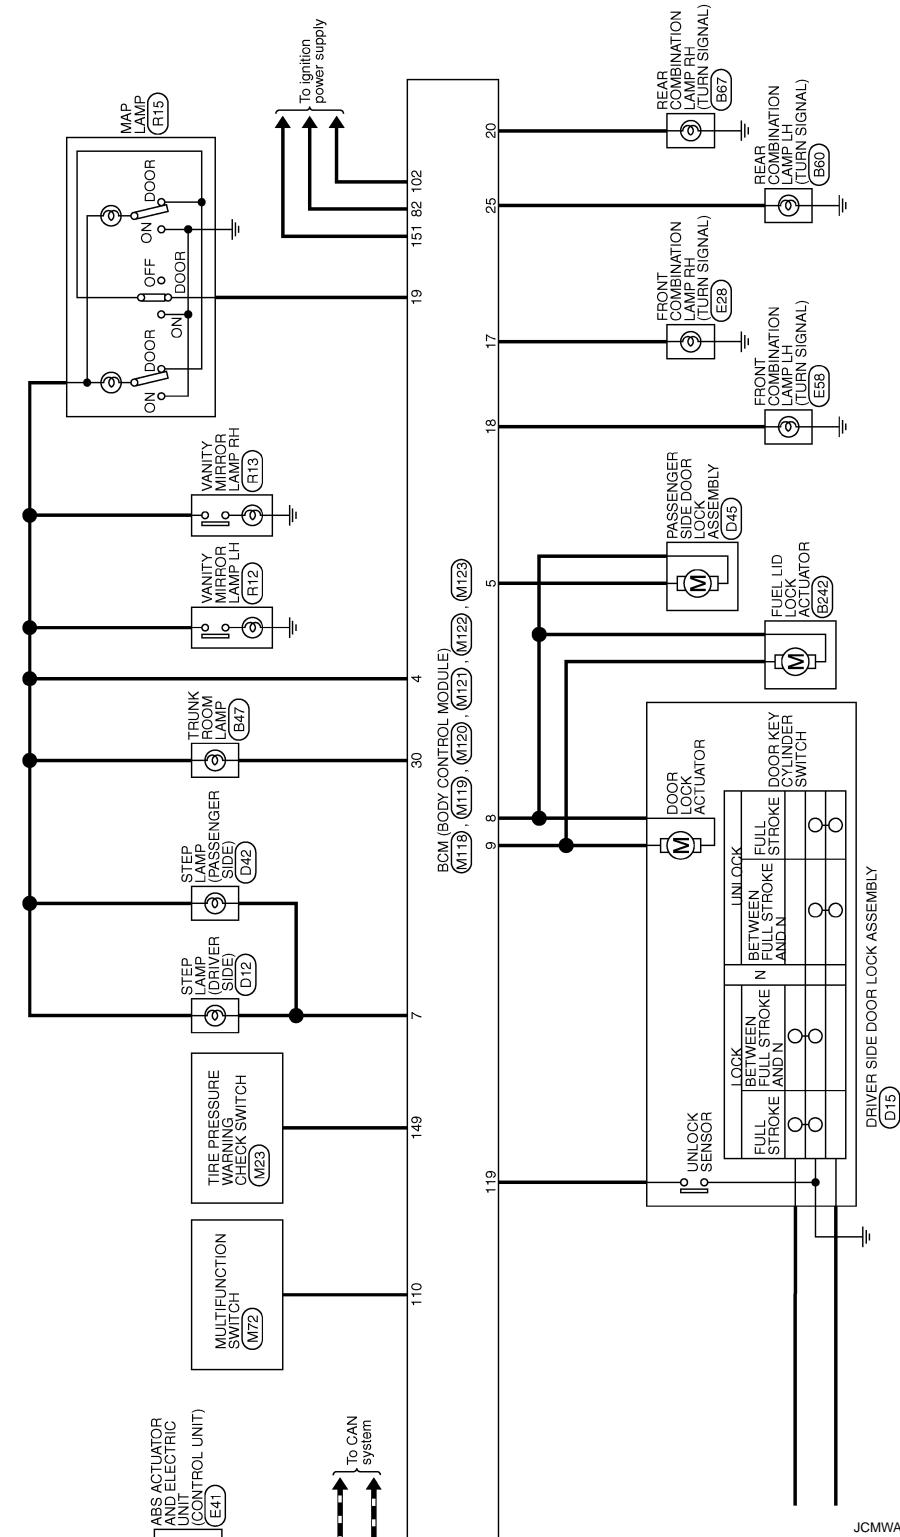
< ECU DIAGNOSIS >




JCMWA0837GF

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS >

BCM (BODY CONTROL MODULE)

Connector No.	M33
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	W	OUTPUT 4	4	LG	BAT (F/L)
2	SB	OUTPUT 3	5	P	POWER WINDOW POWER SUPPLY(BAT)
5	L	INPUT 3	7	SB	POWER WINDOW POWER SUPPLY(RAP)
7	O	OUTPUT 5	8	V	STEP LAMP OUTPUT
8	BR	INPUT 2	9	G	DOOR LOCK OUTPUT (ALL)
9	W	OUTPUT 2	11	R	DOOR UNLOCK OUTPUT (DR)
10	R	INPUT 4	13	B	BAT (FUSE)
11	LG	INPUT 1	14	W	GRD
12	Y	OUTPUT 1	15	O	RNG/SW LED GND
13	Y	INPUT 5	17	W	ACC LED
14	G	OUTPUT 2	18	O	FRONT FLASHER OUTPUT(LEFT)

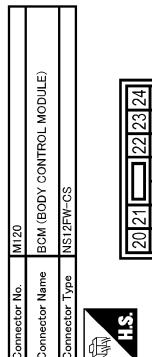


Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
20	V	REAR FLASHER OUTPUT(RIGHT)	34	SB	TRUNK ANTI-
23	L	TRUNK OPENER OUTPUT	35	Y	TRUNK ANTI-
25	Y	REAR FLASHER OUTPUT(LEFT)	38	B	BACK ANT-
30	P	TRUNK LAMP OUTPUT	39	W	BACK ANT+
			47	Y	ING USM CONTI
			50	R	TRUNK SW
			52	SB	ST. CONT USM
			61	SB	TRUNK REQUEST SW
			64	L	BUZZER
			67	GR	INTERIOR TRUNK SW

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M05FB-LC



Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	W	OUTPUT 4	4	LG	BAT (F/L)
2	Y	POWER WINDOW POWER SUPPLY(BAT)	5	P	POWER WINDOW POWER SUPPLY(RAP)
3	O	POWER WINDOW POWER SUPPLY(RAP)	7	SB	STEP LAMP OUTPUT
8	BR	OUTPUT 5	8	V	DOOR LOCK OUTPUT (ALL)
9	W	INPUT 2	9	G	DOOR UNLOCK OUTPUT (DR)
10	R	INPUT 4	11	R	BAT (FUSE)
11	LG	INPUT 1	13	B	GRD
12	Y	OUTPUT 1	14	W	RNG/SW LED GND
13	Y	INPUT 5	15	O	ACC LED
14	G	OUTPUT 2	17	W	FRONT FLASHER OUTPUT(RIGHT)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	W	OUTPUT 4	4	LG	BAT (F/L)
2	Y	POWER WINDOW POWER SUPPLY(BAT)	5	P	POWER WINDOW POWER SUPPLY(RAP)
3	O	POWER WINDOW POWER SUPPLY(RAP)	7	SB	STEP LAMP OUTPUT
8	BR	OUTPUT 5	8	V	DOOR LOCK OUTPUT (ALL)
9	W	INPUT 2	9	G	DOOR UNLOCK OUTPUT (DR)
10	R	INPUT 4	11	R	BAT (FUSE)
11	LG	INPUT 1	13	B	GRD
12	Y	OUTPUT 1	14	W	RNG/SW LED GND
13	Y	INPUT 5	15	O	ACC LED
14	G	OUTPUT 2	17	W	FRONT FLASHER OUTPUT(RIGHT)

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40DFB-NH




Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	KEYLESS TUNER SIGNAL	43	Y	KEYLESS TUNER SIGNAL
2	Y	COMB SW INPUT 5	47	Y	COMB SW INPUT 5
3	O	COMB SW INPUT 3	88	O	ENG SW
4	BR	ENG SW	89	BR	CAN-H
5	P	CAN-L	90	P	CAN-L
6	LG	KEY SLOT ILL	91	L	KEY SLOT ILL
7	LG	ON LED	92	LG	ON LED
8	O	ACC CONN	95	O	ACC CONN
9	GR	A/T DEVICE	96	GR	A/T DEVICE
10	L	S/L CONDITION 1	97	L	S/L CONDITION 1
11	P	S/L CONDITION 2	98	P	S/L CONDITION 2
12	R	SHIFT P	99	R	SHIFT P
13	Y	AS REQUEST SW	100	Y	AS REQUEST SW
14	P	DR REQUEST SW	101	P	DR REQUEST SW
15	O	IGR2 CONN	102	O	IGR2 CONN
16	LG	KEYLESS TUNER POWER SUPPLY	103	LG	KEYLESS TUNER POWER SUPPLY
17	W	S/L 12V (CPU)	106	W	S/L 12V (CPU)
18	LG	COMB SW INPUT 1	107	LG	COMB SW INPUT 1
19	Y	ROOM ANTI-	108	R	ROOM ANTI-
20	BR	AS DOOR ANTI-	109	W	ROOM ANTI-
21	V	DR DOOR ANTI-	110	G	HAZARD SW
22	G	ROOM ANTI-	111	Y	S/L R LINE

JCMWA0838GF

MWI

BCM (BODY CONTROL MODULE)
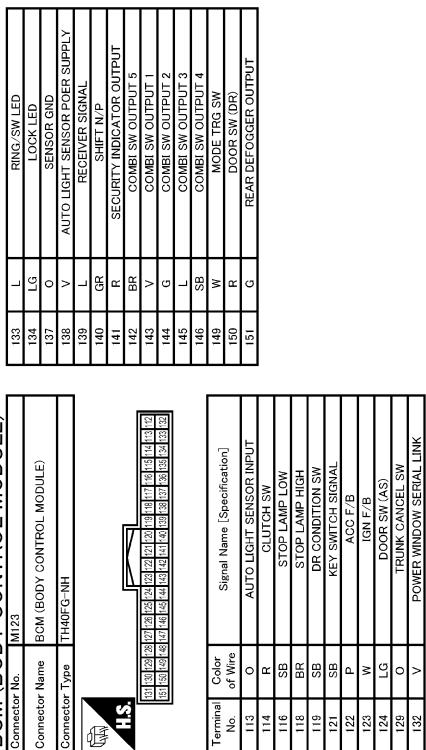
< ECU DIAGNOSIS >



JCMWA0839GF

INFOID:000000001889445

Fail Safe

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2557: VEHICLE SPEED	Inhibit steering lock	When normal vehicle speed signals have been received from ABS actuator and electric unit (control unit) for 500 ms
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> • Starter control relay signal • Starter relay status signal
B2563: HI VOLTAGE	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock 	500 ms after the power supply voltage decreases to less than 18 V
B2601: SHIFT POSITION	Inhibit steering lock	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> • Selector lever P position switch signal • P range signal (CAN)
B2602: SHIFT POSITION	Inhibit steering lock	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Vehicle speed: 4 /h or more
B2603: SHIFT POSI STATUS	Inhibit steering lock	500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Selector lever P/N position signal: Except P and N positions (0 V)
B2604: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P and N position (battery voltage) - P range signal or N range signal (CAN): ON • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: Except P and N positions (0 V) - P range signal and N range signal (CAN): OFF
B2605: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Power position: IGN • Selector lever P/N position signal: Except P and N positions (0 V) • Interlock/PNP switch signal (CAN): OFF • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P or N position (battery voltage) - PNP switch signal (CAN): ON
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal)
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal)

A
 B
 C
 D
 E
 F
 G
 H
 I
 J
 K
 L
 M
 MWI
 O
 P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> • Starter motor relay control signal • Starter relay status signal (CAN)
B2609: S/L STATUS	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock 	When the following steering lock conditions agree <ul style="list-style-type: none"> • BCM steering lock control status • Steering lock condition No. 1 signal status • Steering lock condition No. 2 signal status
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> • IGN relay (IPDM E/R) control signal: OFF (Battery voltage) • Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) • Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions is fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN)
B2612: S/L STATUS	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock 	When any of the following conditions is fulfilled <ul style="list-style-type: none"> • Steering lock unit status signal (CAN) is received normally • The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R)
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the steering lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E1: ENG STATE NO RECIV	Inhibit engine cranking	When any of the following conditions is fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN)

DTC Inspection Priority Chart

INFOID:0000000001889446

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"> • B2562: LOW VOLTAGE • B2563: HI VOLTAGE
2	<ul style="list-style-type: none"> • U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN)
3	<ul style="list-style-type: none"> • B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Priority	DTC	
4	<ul style="list-style-type: none"> • B2013: ID DISCORD BCM-S/L • B2014: CHAIN OF S/L-BCM • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP SW • B2605: PNP SW • B2606: S/L RELAY • B2607: S/L RELAY • B2608: STARTER RELAY • B2609: S/L STATUS • B260A: IGNITION RELAY • B260B: STEERING LOCK UNIT • B260C: STEERING LOCK UNIT • B260D: STEERING LOCK UNIT • B260F: ENG STATE SIG LOST • B2611: ACC RELAY • B2612: S/L STATUS • B2614: ACC RELAY CIRC • B2615: BLOWER RELAY CIRC • B2616: IGN RELAY CIRC • B2617: STARTER RELAY CIRC • B2618: BCM • B2619: BCM • B261A: PUSH-BTN IGN SW • B261E: VEHICLE TYPE • B26E1: ENG STATE NO RECIV • C1729: VHCL SPEED SIG ERR • U0415: VEHICLE SPEED SIG 	A B C D E F G H I J
5	<ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1712: [CHECKSUM ERR] FL • C1713: [CHECKSUM ERR] FR • C1714: [CHECKSUM ERR] RR • C1715: [CHECKSUM ERR] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1720: [CODE ERR] FL • C1721: [CODE ERR] FR • C1722: [CODE ERR] RR • C1723: [CODE ERR] RL • C1724: [BATT VOLT LOW] FL • C1725: [BATT VOLT LOW] FR • C1726: [BATT VOLT LOW] RR • C1727: [BATT VOLT LOW] RL • C1734: CONTROL UNIT 	K L M MWI O P
6	<ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA 	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

DTC Index

INFOID:000000001889447

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. The details of Freeze Frame Data and IGN Counter. Refer to [BCS-13, "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)".](#)

CONSULT display	Fail-safe	Freeze Frame Data	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	—	BCS-33
U1010: CONTROL UNIT (CAN)	—	—	—	—	BCS-34
U0415: VEHICLE SPEED SIG	—	—	—	—	BCS-35
B2013: ID DISCORD BCM-S/L	×	×	—	—	SEC-54
B2014: CHAIN OF S/L-BCM	×	×	—	—	SEC-55
B2190: NATS ANTENNA AMP	×	—	—	—	SEC-46
B2191: DIFFERENCE OF KEY	×	—	—	—	SEC-49
B2192: ID DISCORD BCM-ECM	×	—	—	—	SEC-50
B2193: CHAIN OF BCM-ECM	×	—	—	—	SEC-52
B2553: IGNITION RELAY	—	×	—	—	PCS-50
B2555: STOP LAMP	—	×	—	—	SEC-58
B2556: PUSH-BTN IGN SW	—	×	×	—	SEC-60
B2557: VEHICLE SPEED	×	×	×	—	SEC-62
B2560: STARTER CONT RELAY	×	×	×	—	SEC-63
B2562: LOW VOLTAGE	—	×	—	—	BCS-36
B2563: HI VOLTAGE	×	×	×	—	BCS-37
B2601: SHIFT POSITION	×	×	×	—	SEC-64
B2602: SHIFT POSITION	×	×	×	—	SEC-67
B2603: SHIFT POSI STATUS	×	×	×	—	SEC-69
B2604: PNP SW	×	×	×	—	SEC-72
B2605: PNP SW	×	×	×	—	SEC-74
B2606: S/L RELAY	×	×	×	—	SEC-76
B2607: S/L RELAY	×	×	×	—	SEC-77
B2608: STARTER RELAY	×	×	×	—	SEC-79
B2609: S/L STATUS	×	×	×	—	SEC-81
B260A: IGNITION RELAY	×	×	×	—	PCS-52
B260B: STEERING LOCK UNIT	—	×	×	—	SEC-85
B260C: STEERING LOCK UNIT	—	×	×	—	SEC-86
B260D: STEERING LOCK UNIT	—	×	×	—	SEC-87
B260F: ENG STATE SIG LOST	×	×	×	—	SEC-88
B2611: ACC RELAY	—	×	—	—	PCS-54
B2612: S/L STATUS	×	×	×	—	SEC-90
B2614: ACC RELAY CIRC	—	×	×	—	PCS-57
B2615: BLOWER RELAY CIRC	—	×	×	—	PCS-60

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

CONSULT display	Fail-safe	Freeze Frame Data	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
B2616: IGN RELAY CIRC	—	×	×	—	PCS-63
B2617: STARTER RELAY CIRC	×	×	×	—	SEC-94
B2618: BCM	×	×	×	—	PCS-66
B2619: BCM	×	×	×	—	SEC-96
B261A: PUSH-BTN IGN SW	—	×	×	—	SEC-97
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	—	SEC-100
B2621: INSIDE ANTENNA	—	×	—	—	DLK-59
B2622: INSIDE ANTENNA	—	×	—	—	DLK-61
B2623: INSIDE ANTENNA	—	×	—	—	DLK-63
B26E1: ENG STATE NO RES	×	×	×	—	SEC-89
C1704: LOW PRESSURE FL	—	—	—	×	WT-15
C1705: LOW PRESSURE FR	—	—	—	×	WT-15
C1706: LOW PRESSURE RR	—	—	—	×	WT-15
C1707: LOW PRESSURE RL	—	—	—	×	WT-15
C1708: [NO DATA] FL	—	—	—	×	WT-17
C1709: [NO DATA] FR	—	—	—	×	WT-17
C1710: [NO DATA] RR	—	—	—	×	WT-17
C1711: [NO DATA] RL	—	—	—	×	WT-17
C1712: [CHECKSUM ERR] FL	—	—	—	×	WT-20
C1713: [CHECKSUM ERR] FR	—	—	—	×	WT-20
C1714: [CHECKSUM ERR] RR	—	—	—	×	WT-20
C1715: [CHECKSUM ERR] RL	—	—	—	×	WT-20
C1716: [PRESSDATA ERR] FL	—	—	—	×	WT-23
C1717: [PRESSDATA ERR] FR	—	—	—	×	WT-23
C1718: [PRESSDATA ERR] RR	—	—	—	×	WT-23
C1719: [PRESSDATA ERR] RL	—	—	—	×	WT-23
C1720: [CODE ERR] FL	—	—	—	×	WT-25
C1721: [CODE ERR] FR	—	—	—	×	WT-25
C1722: [CODE ERR] RR	—	—	—	×	WT-25
C1723: [CODE ERR] RL	—	—	—	×	WT-25
C1724: [BATT VOLT LOW] FL	—	—	—	×	WT-28
C1725: [BATT VOLT LOW] FR	—	—	—	×	WT-28
C1726: [BATT VOLT LOW] RR	—	—	—	×	WT-28
C1727: [BATT VOLT LOW] RL	—	—	—	×	WT-28
C1729: VHCL SPEED SIG ERR	—	—	—	×	WT-31
C1734: CONTROL UNIT	—	—	—	×	WT-32

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000001889448

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status	
RAD FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 - 100 %	
AC COMP REQ	Engine running	A/C switch OFF	Off	
		A/C switch ON (Compressor is operating)	On	
TAIL&CLR REQ		Lighting switch OFF	Off	
Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On		
HL LO REQ	Lighting switch OFF		Off	
	Lighting switch 2ND HI or AUTO (Light is illuminated)		On	
HL HI REQ	Lighting switch OFF		Off	
	Lighting switch HI		On	
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off	
		• Front fog lamp switch ON • Daytime running light activated (Only for Canada)	On	
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop	
		Front wiper switch INT	1LOW	
		Front wiper switch LO	Low	
		Front wiper switch HI	Hi	
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P	
		Any position other than front wiper stop position	ACT P	
WIP PROT	Ignition switch ON	Front wiper operates normally	Off	
		Front wiper stops at fail-safe operation	BLOCK	
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off	
	Ignition switch ON		On	
IGN RLY	Ignition switch OFF or ACC		Off	
	Ignition switch ON		On	
PUSH SW	Release the push-button ignition switch		Off	
	Press the push-button ignition switch		On	
INTER/NP SW	Ignition switch ON	A/T selector lever in any position other than P or N (A/T models)	Off	
		Release clutch pedal (M/T models)		
	Ignition switch ON	A/T selector lever in P or N position (A/T models)	On	
		Depress clutch pedal (M/T models)		
ST RLY CONT	Ignition switch ON		Off	
	At engine cranking		On	

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
IHBT RLY -REQ	Ignition switch ON	Off
	At engine cranking	On
ST/INHI RLY	Ignition switch ON	Off
	At engine cranking	INHI → ST
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF	UNKWN
DETENT SW	Ignition switch ON	<ul style="list-style-type: none"> Press the selector button with A/T selector lever in P position A/T selector lever in any position other than P
	Release the A/T selector button with A/T selector lever in P position NOTE: Fixed On for M/T models	On
S/L RLY -REQ	None of the conditions below are present	Off
	<ul style="list-style-type: none"> Open the driver door after the ignition switch is turned OFF (for a few seconds) Press the push-button ignition switch when the steering lock is activated Depress the clutch pedal when the steering lock is activated 	On
S/L STATE	Steering lock is activated	LOCK
	Steering lock is deactivated	UNLK
	[DTC: B210A] is detected	UNKWN
DTRL REQ	NOTE: The item is indicated, but not monitored.	Off
OIL P SW	Ignition switch OFF, ACC or engine running	Open
	Ignition switch ON	Close
HOOD SW	Close the hood	Off
	Open the hood	On
HL WASHER REQ	NOTE: The item is indicated, but not monitored.	Off
THFT HRN REQ	Not operation	Off
	<ul style="list-style-type: none"> Panic alarm is activated Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 	On
HORN CHIRP	Not operating	Off
	Door locking with Intelligent Key (horn chirp mode)	On
CRNRNG LMP REQ	NOTE: The item is indicated, but not monitored.	Off

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

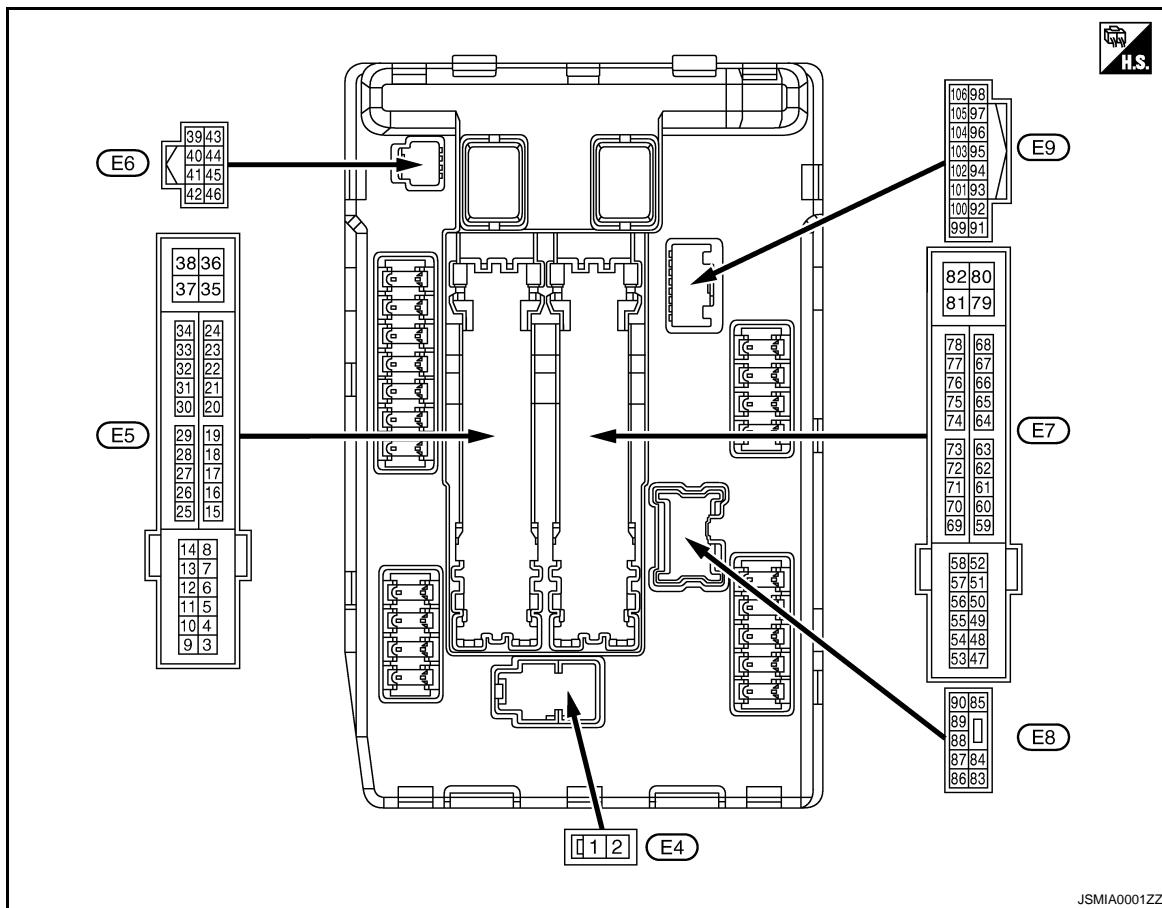TERMINAL LAYOUT



PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (L)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
4 (V)	Ground	Front wiper LO	Output	Ignition switch ON	Front wiper switch OFF	0 V
				Front wiper switch LO		Battery voltage
5 (L)	Ground	Front wiper HI	Output	Ignition switch ON	Front wiper switch OFF	0 V
				Front wiper switch HI		Battery voltage
7 (R)	Ground	Tail, license plate lamps & illuminations	Output	Ignition switch ON	Lighting switch OFF	0 V
				Lighting switch 1ST		Battery voltage
11 (BR)	Ground	Steering lock unit power supply	Output	Ignition switch OFF	A few seconds after open- ing the driver door	Battery voltage
				Ignition switch LOCK	Press the push-button ig- nition switch	Battery voltage
				Ignition switch ACC or ON		0 V
12 (B/W)	Ground	Ground	—	Ignition switch ON		0 V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
13 (Y)	Ground	Fuel pump power supply	Output	Approximately 1 second or more after turning the ignition switch ON
				• Approximately 1 second after turning the ignition switch ON • Engine running
16 (LG)	Ground	Front wiper auto stop	Input	Front wiper stop position
				Ignition switch ON Any position other than front wiper stop position
19 (W)	Ground	Ignition relay power supply	Output	Ignition switch OFF
				Ignition switch ON
25 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF
				Ignition switch ON
26* ¹ (R)	Ground	Ignition relay power supply	Output	Ignition switch OFF
				Ignition switch ON
27 (O)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC
				Ignition switch ON
28 (L)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch
				Release the push-button ignition switch
30 (GR)	Ground	Starter relay control	Input	A/T selector lever in any position other than P or N (Ignition switch ON)
				A/T selector lever P or N (Ignition switch ON)
				M/T models Release the clutch pedal
				Depress the clutch pedal
32 (V)	Ground	Steering lock unit condition-1	Input	Steering lock is activated
				Steering lock is deactivated
33 (P)	Ground	Steering lock unit condition-2	Input	Steering lock is activated
				Steering lock is deactivated
36 (G)	Ground	Battery power supply	Input	Ignition switch OFF
39 (P)	—	CAN - L	Input/ Output	—
40 (L)	—	CAN - H	Input/ Output	—
41 (B/W)	Ground	Ground	—	Ignition switch ON
42 (Y)	Ground	Cooling fan relay control	Input	Ignition switch OFF or ACC
				Ignition switch ON
43* ² (SB)	Ground	A/T device (Detention switch)	Input	Press the A/T selector button (A/T selector lever P)
				• A/T selector lever in any position other than P • Release the A/T selector button (A/T selector lever P)
44 (W)	Ground	Horn relay control	Input	Battery voltage
				0 V




IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	+	-		
45 (G)	Ground	Anti theft horn relay control	Input	The horn is deactivated
				The horn is activated
46 (P)	Ground	Starter relay control	Input	A/T selector lever in any position other than P or N (Ignition switch ON)
				A/T selector lever P or N (Ignition switch ON)
				M/T models
				Release the clutch pedal
48 (BR)	Ground	A/C relay power supply	Output	Depress the clutch pedal
				A/C switch OFF
				A/C switch ON (A/C compressor is operating)
49 (O)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)
				<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)
51 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF
				Battery voltage
53 (W)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)
				<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)
54 (P)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)
				<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)
55 (SB)	Ground	ECM power supply	Output	Ignition switch OFF
56 (LG)	Ground	Ignition relay power supply	Output	Ignition switch OFF
				Ignition switch ON
57 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF
				Ignition switch ON
58* ² (L)	Ground	Ignition relay power supply	Output	Ignition switch OFF
				Ignition switch ON
69 (BR)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)
				<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)
				0 - 1.5 V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
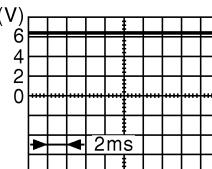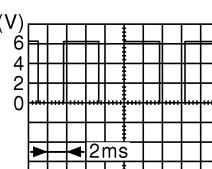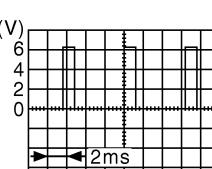
< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
70 (O)	Ground	Throttle control motor re-lay control	Output	Ignition switch ON → OFF ↓ Battery voltage ↓ 0 V
				Ignition switch ON 0 - 1.0 V
73*3 (P)	Ground	Ignition relay power supply	Output	Ignition switch OFF 0 V
				Ignition switch ON Battery voltage
74 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF 0 V
				Ignition switch ON Battery voltage
75 (SB)	Ground	Oil pressure switch	Input	Ignition switch ON Engine stopped 0 V
				Engine running Battery voltage
76 (Y)	Ground	Power generation com-mand signal	Output	Ignition switch ON  JPMIA0001GB 6.3 V
				40% is set on "ACTIVE TEST", "AL-TERNATOR DUTY" of "ENGINE"  JPMIA0002GB 3.8 V
				80% is set on "ACTIVE TEST", "AL-TERNATOR DUTY" of "ENGINE"  JPMIA0003GB 1.4 V
77 (R)	Ground	Fuel pump relay control	Output	• Approximately 1 second after turning the ignition switch ON • Engine running 0 - 1.0 V
				Approximately 1 second or more after turning the ignition switch ON Battery voltage
80 (W)	Ground	Starter motor	Output	At engine cranking Battery voltage
83 (R)	Ground	Headlamp LO (RH)	Output	Ignition switch OFF 0 V
				Lighting switch 2ND Battery voltage
84 (P)	Ground	Headlamp LO (LH)	Output	Ignition switch OFF 0 V
				Lighting switch 2ND Battery voltage

A
B
C
D
E
F
G
H

I
J
K
L
M

MWI

O
P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	+	-		
86 (W)	Ground	Front fog lamp (RH)	Output	<ul style="list-style-type: none"> Front fog lamp switch ON Daytime running light activated (Only for Canada)
				Front fog lamp switch OFF
87 (L)	Ground	Front fog lamp (LH)	Output	<ul style="list-style-type: none"> Front fog lamp switch ON Daytime running light activated (Only for Canada)
				Front fog lamp switch OFF
88 (G)	Ground	Washer pump power supply	Output	Ignition switch ON
89 (BR)	Ground	Headlamp HI (RH)	Output	Ignition switch ON
				Lighting switch HI
90 (LG)	Ground	Headlamp HI (LH)	Output	Ignition switch ON
				Lighting switch PASS
91 (P)	Ground	Parking lamp (RH)	Output	Ignition switch ON
				Lighting switch 1ST
92 (O)	Ground	Parking lamp (LH)	Output	Ignition switch ON
				Lighting switch OFF
97 (V)	Ground	Cooling fan control	Output	Engine idling
104 (LG)	Ground	Hood switch	Input	Close the hood
				Open the hood

*1: Only for the models with ICC system

*2: A/T models only

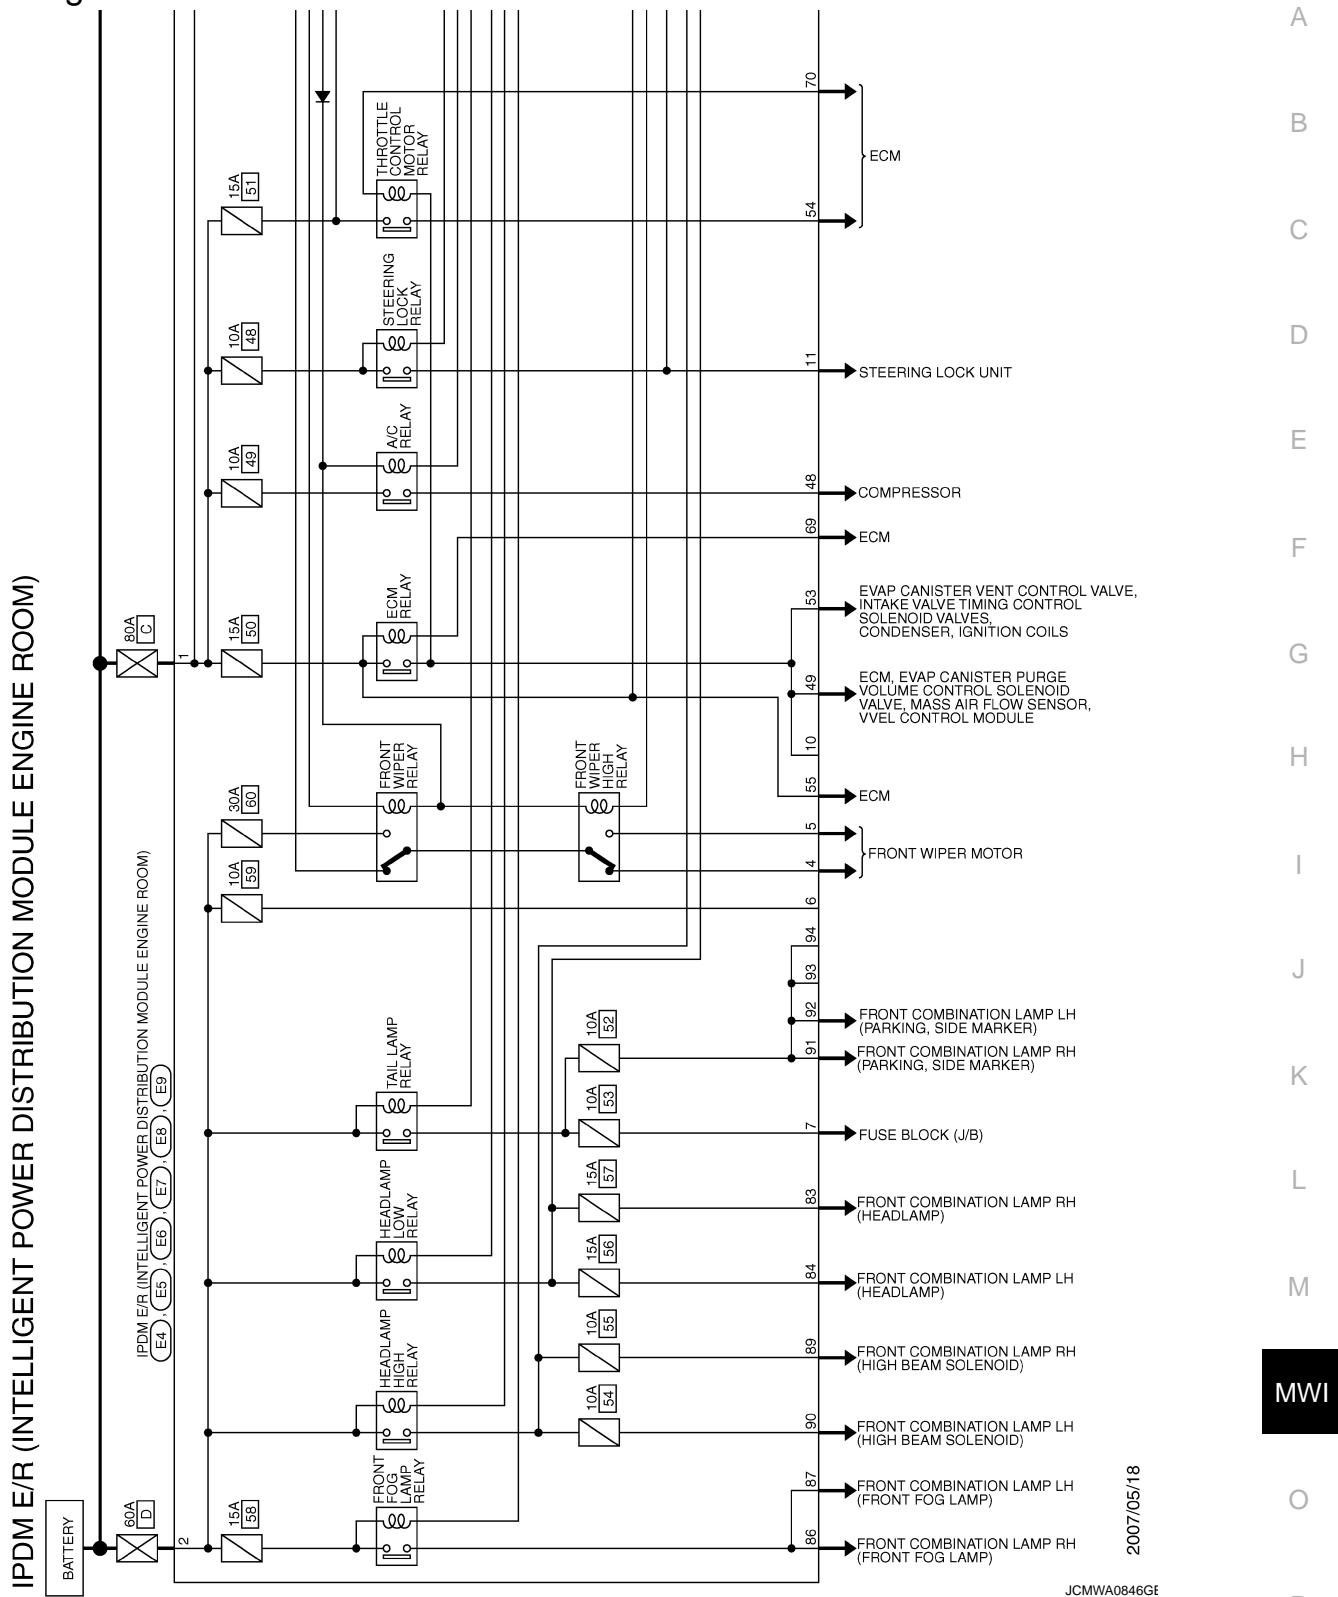
*3: M/T models only

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Wiring Diagram - IPDM E/R -

INFOID:0000000001889449




2007/05/18

JCMWA0846GE

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
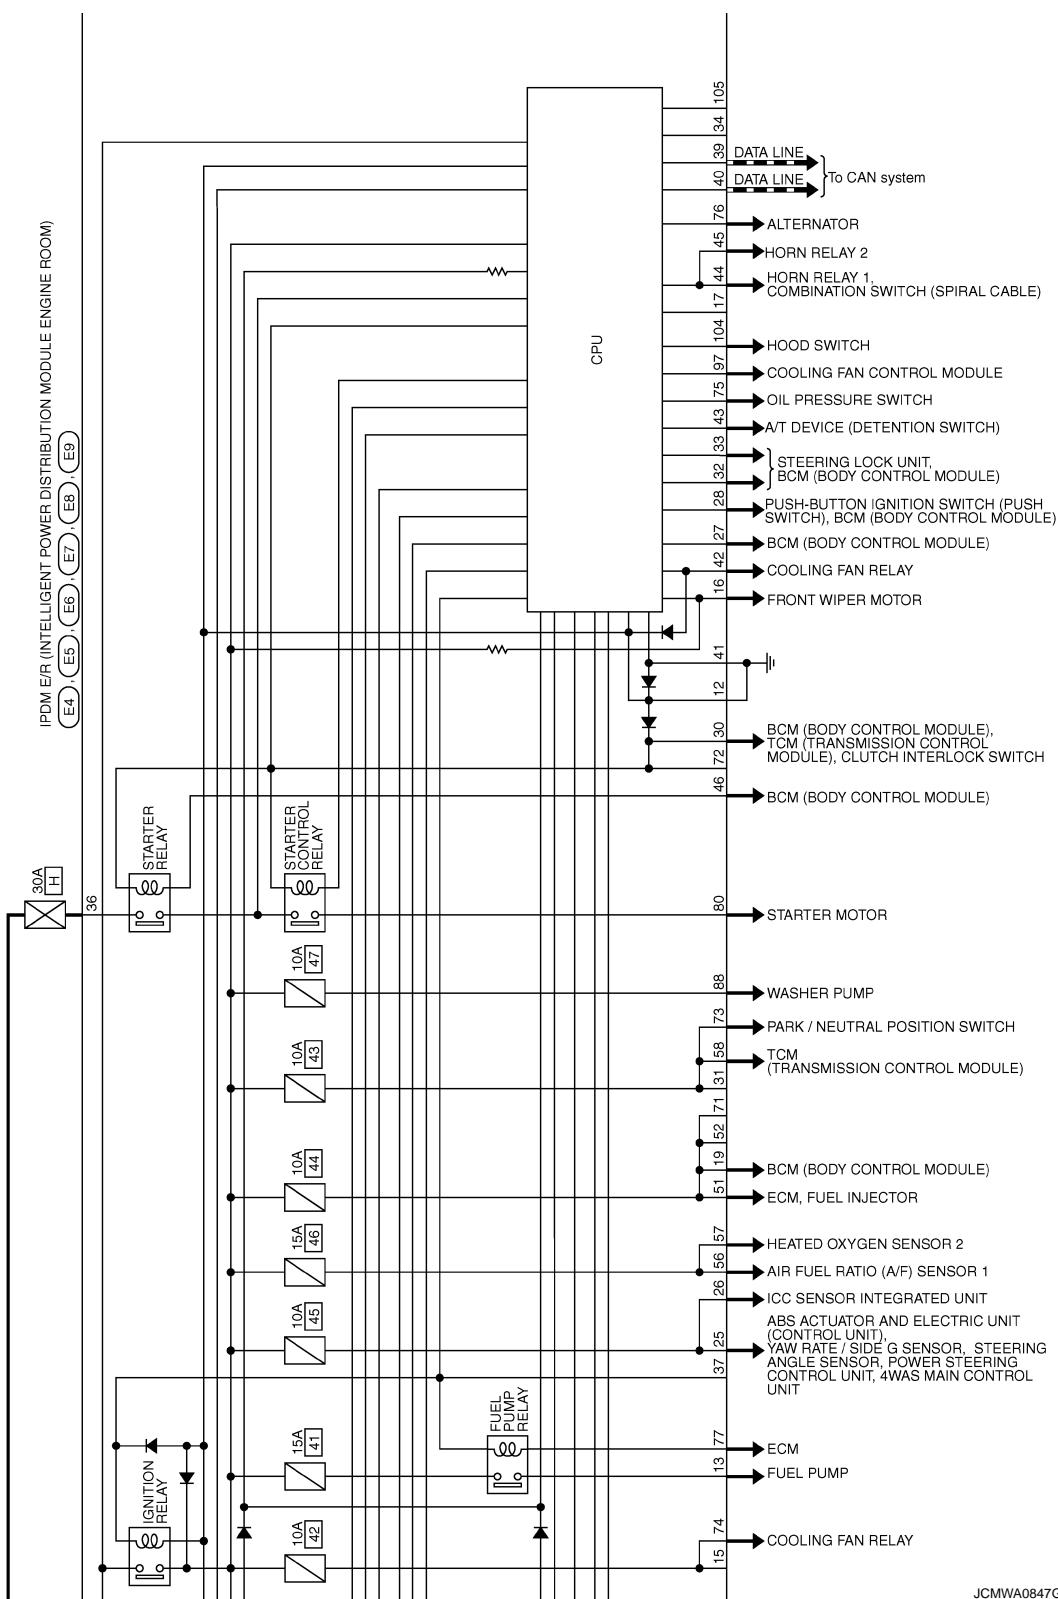
< ECU DIAGNOSIS >



JCMWA0847Ge

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

A

B

C

D

E

F

G

H

I

J

K

L

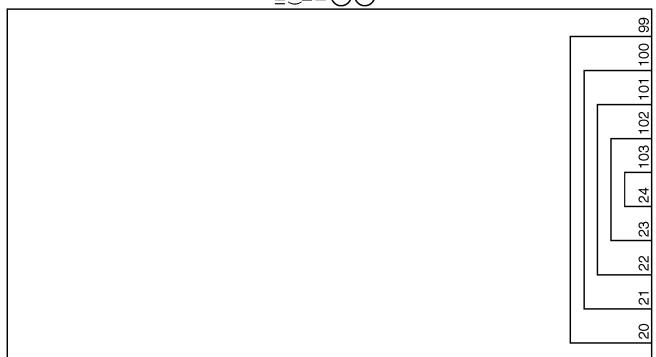
M

MWI

O

P

IPDM E/R
(INTELLIGENT POWER
DISTRIBUTION MODULE
ENGINE ROOM)
E4, E5, E6,
E7, E8, E9.



JCMWA0848Ge

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Connector No.	Color of Wire	Signal Name [Specification]
E4	W	-
1	L	-
2	-	-
3	-	-
4	V	-
5	L	-
6	R	-
7	-	-
8	BR	-
9	B/W	-
10	Y	-
11	LG	-
12	W	-
13	G	-
14	R	-
15	O	-



Connector No.	Color of Wire	Signal Name [Specification]
E5	GR	-
1	V	-
2	P	-
3	G	-
4	39	-
5	30	-
6	32	-
7	33	-
8	36	-
9	37	-
10	38	-
11	39	-
12	36	-
13	35	-
14	34	-
15	33	-
16	32	-
17	31	-
18	30	-
19	29	-
20	28	-
21	27	-
22	26	-
23	25	-
24	24	-
25	23	-
26	22	-
27	21	-
28	20	-
29	19	-
30	18	-
31	17	-
32	16	-
33	15	-
34	14	-
35	13	-
36	12	-
37	11	-
38	10	-
39	9	-
40	8	-
41	7	-
42	6	-
43	5	-
44	4	-
45	3	-
46	2	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	G	-
3	SB	-
4	Y	-
5	R	-
6	W	-
7	LG	-
8	BR	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	83	-
2	84	-
3	85	-
4	86	-
5	87	-
6	88	-
7	89	-
8	90	-
9	91	-
10	92	-
11	93	-
12	94	-
13	95	-
14	96	-
15	97	-
16	98	-
17	99	-
18	100	-
19	101	-
20	102	-
21	103	-
22	104	-
23	105	-
24	106	-
25	107	-
26	108	-
27	109	-
28	110	-
29	111	-
30	112	-
31	113	-
32	114	-
33	115	-
34	116	-
35	117	-
36	118	-
37	119	-
38	120	-
39	121	-
40	122	-
41	123	-
42	124	-
43	125	-
44	126	-
45	127	-
46	128	-
47	129	-
48	130	-
49	131	-
50	132	-
51	133	-
52	134	-
53	135	-
54	136	-
55	137	-
56	138	-
57	139	-
58	140	-
59	141	-
60	142	-
61	143	-
62	144	-
63	145	-
64	146	-
65	147	-
66	148	-
67	149	-
68	150	-
69	151	-
70	152	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	G	-
3	SB	-
4	Y	-
5	R	-
6	W	-
7	LG	-
8	BR	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	83	-
2	84	-
3	85	-
4	86	-
5	87	-
6	88	-
7	89	-
8	90	-
9	91	-
10	92	-
11	93	-
12	94	-
13	95	-
14	96	-
15	97	-
16	98	-
17	99	-
18	100	-
19	101	-
20	102	-
21	103	-
22	104	-
23	105	-
24	106	-
25	107	-
26	108	-
27	109	-
28	110	-
29	111	-
30	112	-
31	113	-
32	114	-
33	115	-
34	116	-
35	117	-
36	118	-
37	119	-
38	120	-
39	121	-
40	122	-
41	123	-
42	124	-
43	125	-
44	126	-
45	127	-
46	128	-
47	129	-
48	130	-
49	131	-
50	132	-
51	133	-
52	134	-
53	135	-
54	136	-
55	137	-
56	138	-
57	139	-
58	140	-
59	141	-
60	142	-
61	143	-
62	144	-
63	145	-
64	146	-
65	147	-
66	148	-
67	149	-
68	150	-
69	151	-
70	152	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	G	-
3	SB	-
4	Y	-
5	R	-
6	W	-
7	LG	-
8	BR	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	83	-
2	84	-
3	85	-
4	86	-
5	87	-
6	88	-
7	89	-
8	90	-
9	91	-
10	92	-
11	93	-
12	94	-
13	95	-
14	96	-
15	97	-
16	98	-
17	99	-
18	100	-
19	101	-
20	102	-
21	103	-
22	104	-
23	105	-
24	106	-
25	107	-
26	108	-
27	109	-
28	110	-
29	111	-
30	112	-
31	113	-
32	114	-
33	115	-
34	116	-
35	117	-
36	118	-
37	119	-
38	120	-
39	121	-
40	122	-
41	123	-
42	124	-
43	125	-
44	126	-
45	127	-
46	128	-
47	129	-
48	130	-
49	131	-
50	132	-
51	133	-
52	134	-
53	135	-
54	136	-
55	137	-
56	138	-
57	139	-
58	140	-
59	141	-
60	142	-
61	143	-
62	144	-
63	145	-
64	146	-
65	147	-
66	148	-
67	149	-
68	150	-
69	151	-
70	152	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	G	-
3	SB	-
4	Y	-
5	R	-
6	W	-
7	LG	-
8	BR	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	83	-
2	84	-
3	85	-
4	86	-
5	87	-
6	88	-
7	89	-
8	90	-
9	91	-
10	92	-
11	93	-
12	94	-
13	95	-
14	96	-
15	97	-
16	98	-
17	99	-
18	100	-
19	101	-
20	102	-
21	103	-
22	104	-
23	105	-
24	106	-
25	107	-
26	108	-
27	109	-
28	110	-
29	111	-
30	112	-
31	113	-
32	114	-
33	115	-
34	116	-
35	117	-
36	118	-
37	119	-
38	120	-
39	121	-
40	122	-
41	123	-
42	124	-
43	125	-
44	126	-

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Control part	Fail-safe operation
Cooling fan	<ul style="list-style-type: none"> Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> Turns ON the headlamp low relay when the ignition switch is turned ON Turns OFF the headlamp low relay when the ignition switch is turned OFF Headlamp high relay OFF
<ul style="list-style-type: none"> Parking lamps License plate lamps Side marker lamps Illuminations Tail lamps 	<ul style="list-style-type: none"> Turns ON the tail lamp relay when the ignition switch is turned ON Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Front fog lamps	Front fog lamp relay OFF
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF
Steering lock unit	Steering lock relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

DTC	Ignition switch	Ignition relay	Tail lamp relay
—	ON	ON	—
—	OFF	OFF	—
B2098: IGN RELAY ON	OFF	ON	ON (10 minutes)
B2099: IGN RELAY OFF	ON	OFF	—

NOTE:

The tail lamp turns OFF when the ignition switch is turned ON.

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

Ignition switch	Front wiper switch	Front wiper auto stop signal
ON	OFF	The front wiper auto stop signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper auto stop signal does not change for 10 seconds.

NOTE:

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:000000001889451

NOTE:

- The details of time display are as follows.
- CRNT: A malfunction is detected now
- PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
- The number is 0 when is detected now
- The number increases like 1 → 2 … 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

CONSULT display	Fail-safe	Refer to
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	PCS-16
B2098: IGN RELAY ON	×	PCS-17
B2099: IGN RELAY OFF	—	PCS-18
B2108: STRG LCK RELAY ON	—	SEC-101
B2109: STRG LCK RELAY OFF	—	SEC-102
B210A: STRG LCK STATE SW	—	SEC-103
B210B: START CONT RLY ON	—	SEC-107
B210C: START CONT RLY OFF	—	SEC-108
B210D: STARTER RELAY ON	—	SEC-109
B210E: STARTER RELAY OFF	—	SEC-110
B210F: INTRLCK/PNP SW ON	—	SEC-112
B2110: INTRLCK/PNP SW OFF	—	SEC-116

THE FUEL GAUGE POINTER DOES NOT MOVE

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

THE FUEL GAUGE POINTER DOES NOT MOVE

Description

INFOID:000000001606711

Fuel gauge needle will not move from a certain position.

Diagnosis Procedure

INFOID:000000001606712

1.CHECK UNIFIED METER AND A/C AMP. OUTPUT SIGNAL

1. Connect the CONSULT-III.
2. Select the "Data Monitor" of the "METER/M&A" and compare the "FUEL METER" monitor value with the fuel gauge reading on the combination meter. Refer to [MWI-54, "Component Function Check"](#).

Does monitor value match fuel gauge reading?

YES >> GO TO 2.

NO >> Replace combination meter.

2.CHECK FUEL LEVEL SENSOR SIGNAL CIRCUIT

Check the fuel level sensor signal circuit. Refer to [MWI-54, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK FUEL LEVEL SENSOR UNIT

Check the fuel level sensor unit. Refer to [MWI-55, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace fuel level sensor unit. Refer to [FL-5, "Removal and Installation"](#).

4.CHECK FLOAT INTERFERENCE

Check that the float arm interferes with or binds to other components in the fuel tank.

Is the inspection result normal?

YES >> Replace unified meter and A/C amp.

NO >> Repair or replace malfunctioning parts.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

THE METER CONTROL SWITCH IS INOPERATIVE

< SYMPTOM DIAGNOSIS >

THE METER CONTROL SWITCH IS INOPERATIVE

Description

INFOID:0000000001606713

If any of the following malfunctions is found for the meter control switch operation.

- All switches are inoperative
- The specified switch cannot be operated

Diagnosis Procedure

INFOID:0000000001606714

1.CHECK METER CONTROL SWITCH SIGNAL CIRCUIT

Check the meter control switch signal circuit. Refer to [MWI-57, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair harness or connector.

2.CHECK METER CONTROL SWITCH

Check the meter control switch. Refer to [MWI-58, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
NG >> Replace meter control switch.

THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON

Description

INFOID:0000000001606715

The oil pressure warning lamp stays off when the ignition switch is turned ON

Diagnosis Procedure

INFOID:0000000001606716

1.CHECK OIL PRESSURE WARNING LAMP

Perform auto active test of IPDM E/R. Refer to [PCS-11, "Diagnosis Description"](#).

Is oil pressure warning lamp illuminated?

YES >> GO TO 2.

NO >> GO TO 4.

2.CHECK OIL PRESSURE SWITCH SIGNAL CIRCUIT

Check the oil pressure switch signal circuit. Refer to [MWI-59, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK OIL PRESSURE SWITCH

Check the oil pressure switch. Refer to [MWI-59, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> Replace oil pressure switch.

4.CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

1. Connect the CONSULT-III.

2. Select the "Data Monitor" of the "METER/M&A" and check the "OIL W/L" monitor value. Refer to [MWI-59, "Component Function Check"](#).

Is the inspection result normal?

YES >> Replace combination meter.

NO >> Replace BCM. Refer to [BCS-79, "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF

< SYMPTOM DIAGNOSIS >

THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF

Description

INFOID:0000000001606717

The oil pressure warning lamp remains illuminated while the engine is running (normal oil pressure)

Diagnosis Procedure

INFOID:0000000001606718

1. CHECK OIL PRESSURE WARNING LAMP

Perform auto active test of IPDM E/R. Refer to [PCS-11, "Diagnosis Description"](#).

Is oil pressure warning lamp illuminated?

YES >> GO TO 2.

NO >> GO TO 5.

2. CHECK IPDM E/R OUTPUT VOLTAGE

1. Disconnect the oil pressure switch connector.
2. Turn ignition switch ON.
3. Check voltage between the oil pressure switch harness connector terminal and ground.

Terminals		Voltage (Approx.)	
(+) (-)			
Oil pressure switch	Connector Terminal		
F37	1	Ground 12 V	

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK OIL PRESSURE SWITCH

Check the oil pressure switch. Refer to [MWI-59, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

NO >> Replace oil pressure switch.

4. CHECK OIL PRESSURE SWITCH SIGNAL CIRCUIT

Check the oil pressure switch signal circuit. Refer to [MWI-59, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair harness or connector.

5. CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

1. Connect the CONSULT-III.
2. Select the "Data Monitor" of the "METER/M&A" and check the "OIL W/L" monitor value. Refer to [MWI-59, "Component Function Check"](#).

Is the inspection result normal?

YES >> Replace combination meter.

NO >> Replace BCM. Refer to [BCS-79, "Removal and Installation"](#).

THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

Description

INFOID:000000001606719

- The parking brake warning is displayed during vehicle travel even though the parking brake is released
- The parking brake warning is not displayed even though driving the vehicle with the parking brake applied

Diagnosis Procedure

INFOID:000000001606720

1. CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

1. Connect the CONSULT-III.
2. Select the "Data Monitor" of the "METER/M&A" and check the "PKB SW" monitor value. Refer to [MWI-59, "Component Function Check"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
NO >> GO TO 2.

2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

Check the parking brake switch signal circuit. Refer to [MWI-61, "Diagnosis Procedure \(A/T models\)"](#) or [MWI-62, "Diagnosis Procedure \(M/T models\)"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NG >> Repair harness or connector.

3. CHECK PARKING BRAKE SWITCH

Check the parking brake switch. Refer to [BRC-72, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
NO >> Replace parking brake switch.

A

B

C

D

E

F

G

H

K

L

M

MWI

O

P

THE LOW WASHER FLUID WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

THE LOW WASHER FLUID WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

Description

INFOID:000000001606721

- The warning is still displayed even after washer fluid is added
- The warning is not displayed even though the washer tank is empty

Diagnosis Procedure

INFOID:000000001606722

1. CHECK WASHER LEVEL SWITCH SIGNAL CIRCUIT

Check the washer level switch signal circuit. Refer to [MWI-64, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair harness or connector.

2. CHECK WASHER LEVEL SWITCH

Check the washer level switch. Refer to [MWI-64, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
NO >> Replace washer level switch. Refer to [WW-85, "Removal and Installation"](#).

THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

Description

INFOID:000000001606723

- The door ajar warning is displayed even though all of the doors are closed.
- The door ajar warning is not displayed even though a door is ajar.

Diagnosis Procedure

INFOID:000000001606724

1.CHECK BCM INPUT SIGNAL

1. Connect the CONSULT-III.
2. Check the BCM input signals. Refer to [DLK-66, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 3.

2.CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and check the "DOOR W/L" monitor value.

"DOOR W/L"	
Door open	: On
Door closed	: Off

Is the inspection result normal?

- YES >> Replace combination meter.
NO >> Replace BCM. Refer to [BCS-79, "Removal and Installation"](#).

3.CHECK DOOR SWITCH SIGNAL CIRCUIT

Check the door switch signal circuit. Refer to [DLK-66, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair harness or connector.

4.CHECK DOOR SWITCH

Check the door switch. Refer to [DLK-67, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
NO >> Replace applicable door switch. Refer to [DLK-238, "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

THE TRUNK OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

THE TRUNK OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

Description

INFOID:000000001606725

- The trunk ajar warning is displayed continuously even though the trunk lid is closed.
- The trunk ajar warning is not displayed even though the trunk lid is open.

Diagnosis Procedure

INFOID:000000001606726

1.CHECK BCM INPUT SIGNAL

1. Connect the CONSULT-III.
2. Check the BCM input signals. Refer to [DLK-77, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 3.

2.CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

Select the “Data Monitor” for the “METER/M&A” and check the “TRUNK/GLAS-H” monitor value.

“TRUNK/GLAS-H”

- | | |
|------------------|-------|
| Trunk lid open | : ON |
| Trunk lid closed | : OFF |

Is the inspection result normal?

- YES >> Replace combination meter.
NO >> Replace BCM.

3.CHECK TRUNK LID OPENER SWITCH SIGNAL CIRCUIT

Check the trunk lid opener switch signal circuit. Refer to [DLK-77, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair harness or connector.

4.CHECK TRUNK LID OPENER SWITCH

Check the trunk lid opener switch. Refer to [DLK-78, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
NO >> Replace the trunk lid switch. Refer to [DLK-245, "Removal and Installation"](#).

THE AMBIENT TEMPERATURE DISPLAY IS INCORRECT

< SYMPTOM DIAGNOSIS >

THE AMBIENT TEMPERATURE DISPLAY IS INCORRECT

Description

INFOID:0000000001606727

- The displayed ambient air temperature is higher than the actual temperature.
- The displayed ambient air temperature is lower than the actual temperature.

Diagnosis Procedure

INFOID:0000000001606728

NOTE:

Check that the symptom is not applicable to the normal operating condition before starting diagnosis. Refer to [MWI-158, "INFORMATION DISPLAY : Description"](#).

1. CHECK AMBIENT SENSOR SIGNAL CIRCUIT

Check the ambient sensor signal circuit. Refer to [HAC-88, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

2. CHECK AMBIENT SENSOR UNIT

Check the ambient sensor. Refer to [HAC-89, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace unified meter and A/C amp.

NO >> Replace ambient sensor. Refer to [VTL-25, "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

NORMAL OPERATING CONDITION

COMPASS

COMPASS : Description

INFOID:000000001606729

COMPASS

- The electronic compass is highly protected from changes in most magnetic fields. However, some large changes in magnetic fields can affect it. Some examples are (but not limited to): high tension power lines, large steel buildings, subways, steel bridges, automatic car washes, large piles of scrap metal, etc. While this does not happen very often, it is possible.
- During normal operation, the Compass Mirror will continuously update the compass calibration to adjust for gradual changes in the vehicle's magnetic "remnant" field. If the vehicle is subjected to high magnetic influences, the compass may appear to indicate false headings, become locked, or appear that it is unable to be calibrated. If this occurs, perform the calibration procedure.
- If at any time the compass continually displays the incorrect direction or the reading is erratic or locked, verify the correct zone variance.

Symptom Chart

Symptom	Cause	Solution / Reference
The compass display reads "C".		
Compass shows the wrong direction.		
Compass does not change direction appears "Locked".	<ul style="list-style-type: none">Compass is not calibrated.Incorrect zone variance setting.Large change in magnetic field (Steel bridges, subways, concentrations of metal, carwashes, etc.)Compass was calibrated incorrectly or in the presence of a strong magnetic field.	Perform Calibration. Refer to MWI-32, "Description" .
Compass does not show all the directions, one or more is missing.		
The compass was calibrated but it "loses" calibration.		
On long trips the compass shows the wrong direction.		Perform Zone Variation Setting if correct reading is desired in that location. Refer to MWI-32, "Description" .

INFORMATION DISPLAY

INFORMATION DISPLAY : Description

INFOID:000000001606730

AMBIENT AIR TEMPERATURE

The displayed ambient air temperature on the information display may differ from the actual temperature because it is a corrected value calculated from the ambient sensor signal by the unified meter and A/C amp. Refer to [MWI-27, "INFORMATION DISPLAY : System Description"](#) for details on the correction process.

POSSIBLE DRIVING DISTANCE

The calculated possible driving distance may differ from the actual distance to empty if the refueling amount is approximately 15 l (4 US gal, 3-3/10 Imp gal) or less. This is because the refuel control (moves the fuel gauge needle quicker than normal judging that the driver is refueling the vehicle) is not performed in such a case.

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000001696925

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

COMBINATION METER

< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR

COMBINATION METER

Exploded View

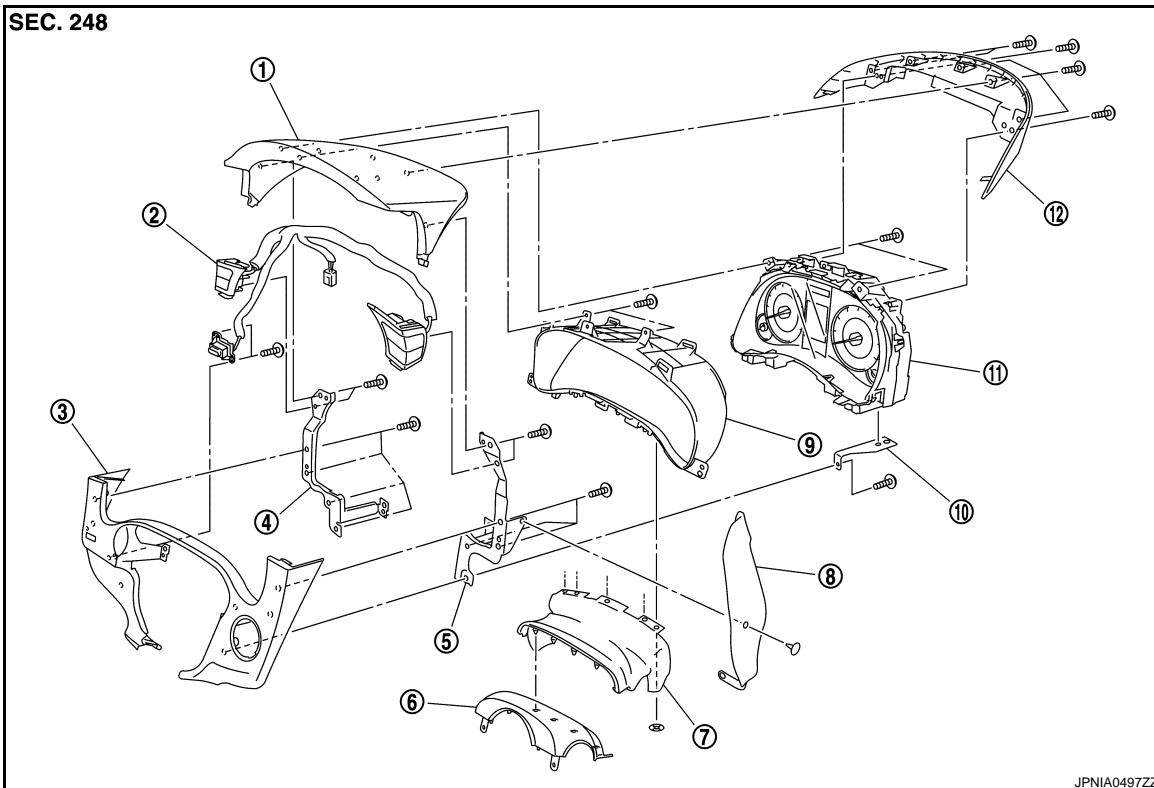
INFOID:000000001606732

REMOVAL

Cluster lid A assembly


Refer to [IP-11, "Exploded View".](#)

Combination meter



- | | | |
|----------------------------|-------------------------|--------------------------------|
| 1. Cluster lid A | 2. Meter control switch | 3. Cluster lid A under cover |
| 4. Bracket (LH) | 5. Bracket (RH) | 6. Steering column cover upper |
| 7. Steering column blind | 8. Blind | 9. Meter housing |
| 10. Combination meter stay | 11. Combination meter | 12. Cluster lid A cover |

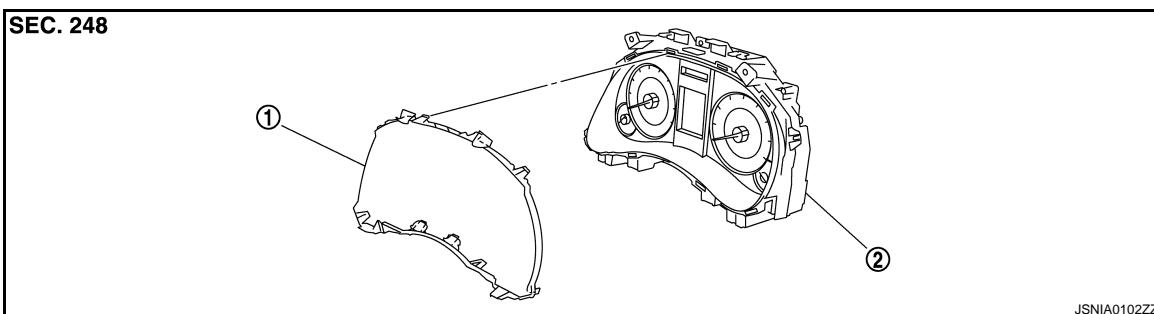DISASSEMBLY



- | | |
|----------------|-------------------------------|
| 1. Front cover | 2. Unified meter control unit |
|----------------|-------------------------------|

Removal and Installation

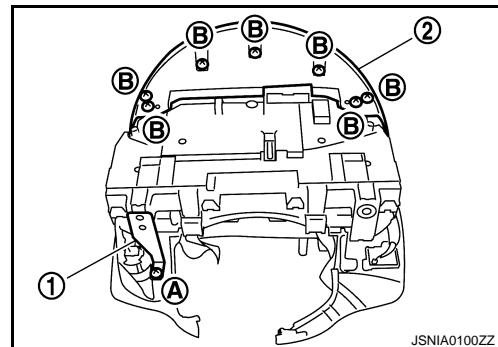
INFOID:000000001606733

REMOVAL


COMBINATION METER

< ON-VEHICLE REPAIR >

1. Remove cluster lid A assembly. Refer to [IP-12, "Removal and Installation"](#).
2. Remove screw (A) and remove combination meter stay (1).
3. Remove screws (B) and remove cluster lid A cover (2).



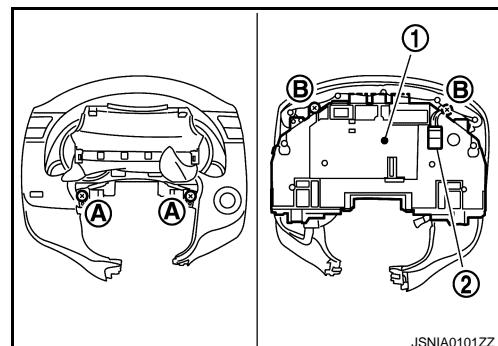4. Remove screws (A), (B) and remove combination meter (1).
5. Remove meter control switch connector (2) from combination meter (1).



INSTALLATION

Install in the reverse order of removal.

Disassembly and Assembly

INFOID:0000000001606734

DISASSEMBLY

Disengage the tabs to separate front cover.

ASSEMBLY

Assemble in the reverse order of disassembly.

MWI

UNIFIED METER AND A/C AMP.

< ON-VEHICLE REPAIR >

UNIFIED METER AND A/C AMP.

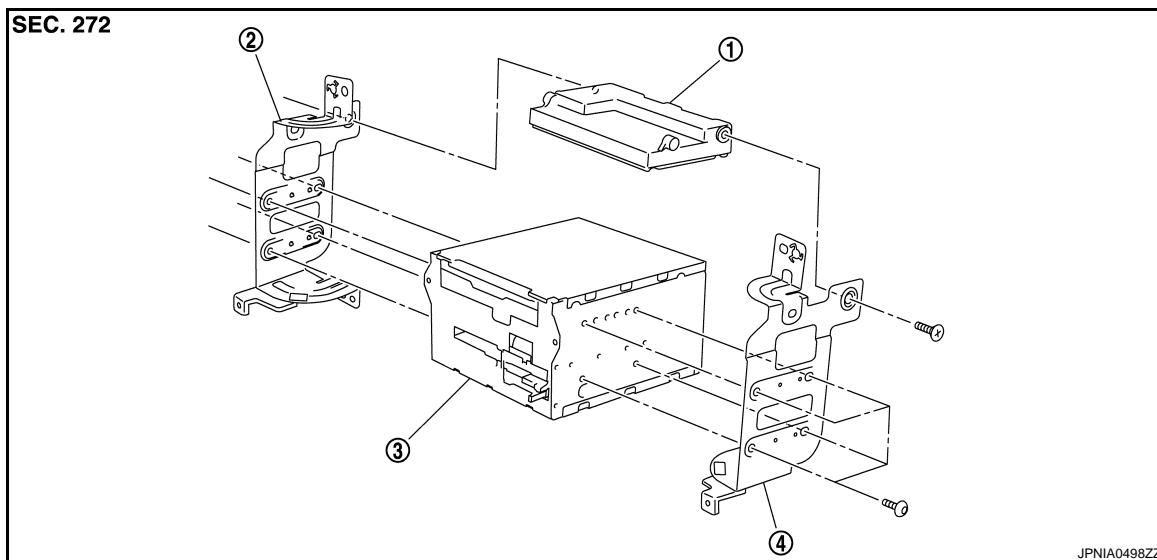
Exploded View

INFOID:0000000001606735

REMOVAL

Refer to [IP-11, "Exploded View"](#).

DISASSEMBLY



1. Unified meter and A/C amp.
2. Bracket (LH)
3. AV control unit
4. Bracket (RH)

Removal and Installation

INFOID:0000000001606736

REMOVAL

1. Remove the display unit. Refer to [AV-110, "Removal and Installation"](#).
2. Remove the unified meter and A/C amp and AV control unit as an assembly.
3. Remove the bracket screws and remove the unified meter and A/C amp.

INSTALLATION

Install in the reverse order of removal.

NOTE:

- Unified meter and A/C amp. screws are different from other screws. Never confuse them when installing.
- Since AV control unit connector and unified meter and A/C amp. connector have the same form, be careful not insert them wrongly.

METER CONTROL SWITCH

< ON-VEHICLE REPAIR >

METER CONTROL SWITCH

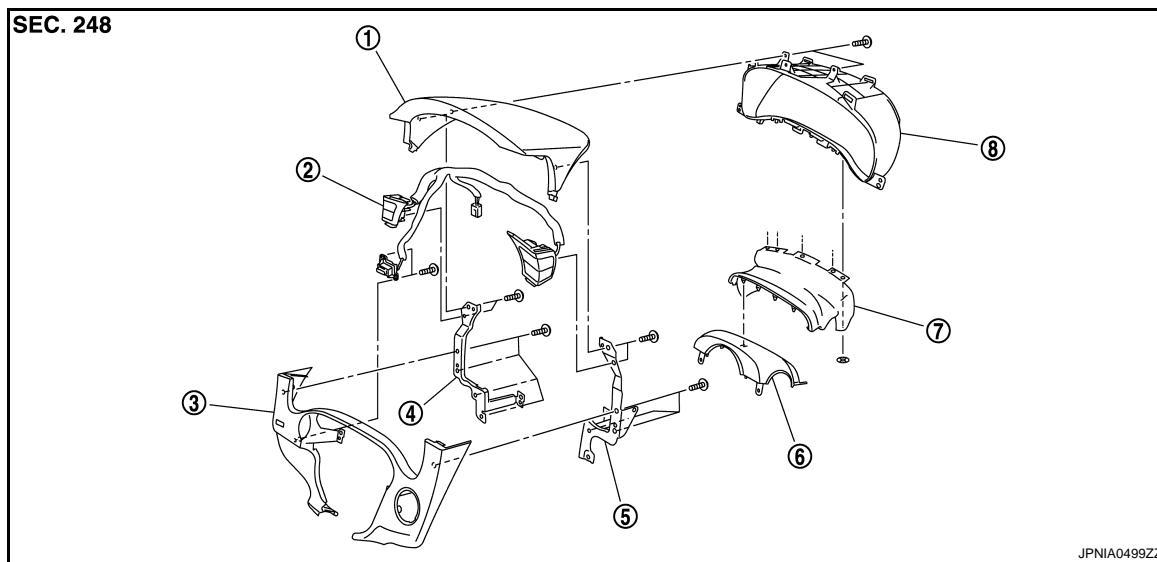
Exploded View

INFOID:0000000001606737

REMOVAL

Refer to [IP-11, "Exploded View"](#).

DISASSEMBLY




- 1. Cluster lid A
- 2. Meter control switch
- 3. Cluster lid A under cover
- 4. Bracket (LH)
- 5. Bracket (RH)
- 6. Steering column cover upper
- 7. Steering column blind
- 8. Meter housing

Removal and Installation

INFOID:0000000001606738

REMOVAL

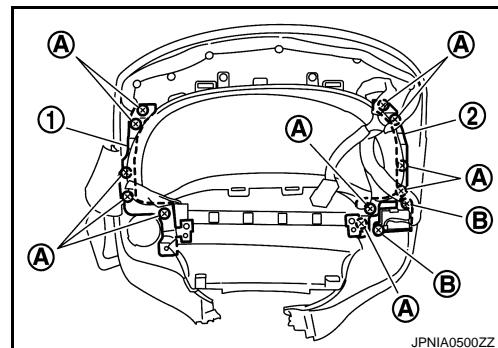1. Remove combination meter.
2. Remove screws (A) and remove bracket RH (1), LH (2).
3. Remove screws (B) and remove meter control switch.



INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

COMPASS

< ON-VEHICLE REPAIR >

COMPASS

Exploded View

INFOID:0000000001606739

Refer to [MIR-48, "Exploded View".](#)

Removal and Installation

INFOID:0000000001606740

Refer to [MIR-48, "Removal and Installation".](#)

CLOCK

< ON-VEHICLE REPAIR >

CLOCK

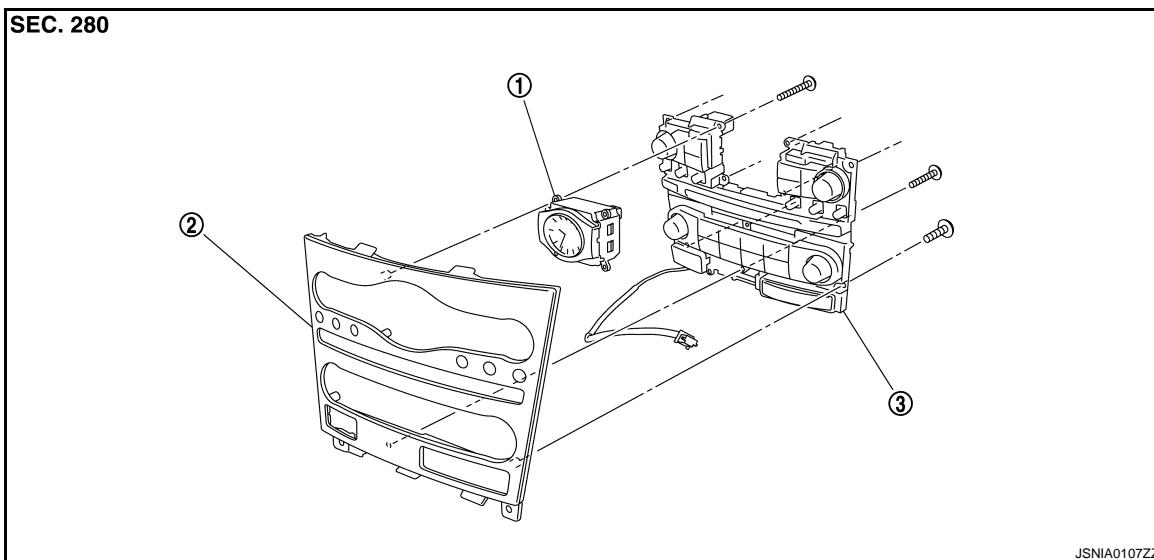
Exploded View

INFOID:0000000001606741

REMOVAL

Refer to [IP-11, "Exploded View"](#).

DISASSEMBLY



1. Clock

2. Cluster lid C

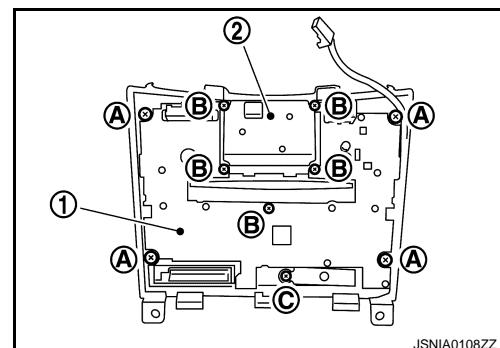
3. Multifunction switch

Removal and Installation

INFOID:0000000001606742

REMOVAL

1. Remove cluster lid C assembly. Refer to [IP-12, "Removal and Installation"](#).
2. Remove screws (A), (B), (C) and remove clock (2) in conjunction with multifunction switch (1) from cluster lid C.
3. Disengage the tabs to separate clock (2).



INSTALLATION

Install in the reverse order of removal.

NOTE:

Never confuse screws when installing.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P