

SECTION **LT**

LIGHTING SYSTEM

CONTENTS

SERVICE INFORMATION	4	Disassembly and Assembly	32
PRECAUTIONS	4	HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -	34
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	4	Component Parts and Harness Connector Location	34
General precautions for service operations	4	System Description	34
HEADLAMP (FOR USA)	5	CAN Communication System Description	35
Component Parts and Harness Connector Location	5	Schematic	36
System Description	5	Wiring Diagram - DTRL -	37
CAN Communication System Description	7	Terminal and Reference Value for BCM	39
Schematic	8	How to Proceed with Trouble Diagnosis	39
Wiring Diagram - H/LAMP -	10	Preliminary Check	40
Terminal and Reference Value for BCM	17	CONSULT-III Function (BCM)	41
Terminal and Reference Value for IPDM E/R	17	Daytime Light Control Does Not Operate Properly...42	
How to Proceed with Trouble Diagnosis	18	Aiming Adjustment	43
Preliminary Check	18	Bulb Replacement	43
CONSULT-III Function (BCM)	18	Removal and Installation	43
CONSULT-III Function (IPDM E/R)	19	Disassembly and Assembly	43
Headlamp Does Not Change To High Beam (Both Sides)	20	AUTO LIGHT SYSTEM	44
Headlamp Does Not Change To High Beam (One Side)	22	Component Parts and Harness Connector Location	44
High Beam Indicator Lamp Does Not Illuminate ...23		System Description	44
Headlamp Low Beam Does Not Illuminate (Both Sides)	23	CAN Communication System Description	45
Headlamp Low Beam Does Not Illuminate (One Side)	25	Major Component and Functions	45
Headlamp RH Low Beam and High Beam Does Not Illuminate	26	Schematic	46
Headlamp LH Low Beam and High Beam Does Not Illuminate	26	Wiring Diagram - AUTO/L -	47
Headlamps Do Not Turn OFF	27	Terminal and Reference Value for BCM	49
Caution	28	Terminal and Reference Value for IPDM E/R	49
Xenon Headlamp Trouble Diagnosis	28	How to Proceed with Trouble Diagnosis	50
Aiming Adjustment	29	Preliminary Check	50
Headlamp Aiming	30	CONSULT-III Function (BCM)	50
Bulb Replacement	30	CONSULT-III Function (IPDM E/R)	52
Removal and Installation	32	Trouble Diagnosis Chart by Symptom	52
		Lighting Switch Inspection	53
		Optical Sensor System Inspection	53
		Removal and Installation	55
		FRONT FOG LAMP	56

Component Parts and Harness Connector Location	56	Wiring Diagram - COMBSW -	88
System Description	56	Combination Switch Reading Function	88
CAN Communication System Description	57	CONSULT-III Function (BCM)	89
Wiring Diagram - F/FOG -	58	Combination Switch Inspection	89
Terminal and Reference Value for BCM	59	Removal and Installation	92
Terminal and Reference Value for IPDM E/R	59	Switch Circuit Inspection	92
How to Proceed with Trouble Diagnosis	60	STOP LAMP	93
Preliminary Check	60	System Description	93
CONSULT-III Functions	60	Wiring Diagram - STOP/L -	94
Front Fog Lamps Do Not Illuminate (Both Sides) ...	60	Bulb Replacement	94
Front Fog Lamp Does Not Illuminate (One Side) ...	62	Removal and Installation	95
Aiming Adjustment	63	BACK-UP LAMP	96
Bulb Replacement	64	Wiring Diagram - BACK/L -	96
Removal and Installation	64	Bulb Replacement	96
TURN SIGNAL AND HAZARD WARNING LAMPS	66	Removal and Installation	97
Component Parts and Harness Connector Location	66	PARKING, LICENSE PLATE AND TAIL LAMPS	98
System Description	66	Component Parts and Harness Connector Location	98
CAN Communication System Description	68	System Description	98
Schematic	69	CAN Communication System Description	99
Wiring Diagram - TURN -	70	Schematic	100
Terminal and Reference Value for BCM	72	Wiring Diagram - TAIL/L -	101
How to Proceed with Trouble Diagnosis	72	Terminal and Reference Value for BCM	103
Preliminary Check	73	Terminal and Reference Value for IPDM E/R	103
CONSULT-III Function (BCM)	73	How to Proceed with Trouble Diagnosis	104
Turn Signal Lamp Does Not Operate	73	Preliminary Check	104
Rear Turn Signal Lamp Does Not Operate	75	CONSULT-III Functions	104
Hazard Warning Lamp Does Not Operate But Turn Signal Lamp Operates	76	Parking, License Plate and/or Tail Lamps Do Not Illuminate	104
Turn Signal Indicator Lamp Does Not Operate	77	Parking, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)	107
Bulb Replacement	77	Bulb Replacement	107
Bulb Replacement	77	Bulb Replacement	108
Removal and Installation	77	REAR COMBINATION LAMP	109
Removal and Installation	77	Bulb Replacement	109
CORNERING LAMP	78	Removal and Installation	109
Component Parts and Harness Connector Location	78	INTERIOR ROOM LAMP	110
System Description	78	Component Parts and Harness Connector Location	110
CAN Communication System Description	79	System Description	110
Schematic	79	Schematic	114
Wiring Diagram - CORNER -	80	Wiring Diagram - ROOM/L -	115
Terminal and Reference Value for BCM	82	Terminal and Reference Value for BCM	121
Terminal and Reference Value for IPDM E/R	82	How to Proceed with Trouble Diagnosis	121
How to Proceed with Trouble Diagnosis	83	Preliminary Check	122
Preliminary Check	83	CONSULT-III Function (BCM)	122
CONSULT-III Function (IPDM E/R)	83	Interior Room Lamp Control Does Not Operate ...	123
Cornering Lamp Does Not Operate	83	Map Lamp Control Does Not Operate	124
Removal and Installation	85	Personal Lamp Control Does Not Operate	125
LIGHTING AND TURN SIGNAL SWITCH	86	Ignition Keyhole Illumination Control Does Not Operate	126
Removal and Installation	86	All Step Lamps Do Not Operate	127
HAZARD SWITCH	87	All Foot Lamps Do Not Operate	128
Removal and Installation	87	All Interior Room Lamps Do Not Operate	129
COMBINATION SWITCH	88		

ILLUMINATION	130	Removal and Installation	139
Component Parts and Harness Connector Location	130	BULB SPECIFICATIONS	141
System Description	130	Headlamp	141
CAN Communication System Description	132	Exterior Lamp	141
Schematic	133	Interior Lamp/Illumination	141
Wiring Diagram - ILL -	135		

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P

LT

PRECAUTIONS

< SERVICE INFORMATION >

SERVICE INFORMATION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000001721499

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.



WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

General precautions for service operations

INFOID:000000001721500

- Never work with wet hands.
- Xenon headlamp includes high voltage generating part. Be sure to disconnect battery negative cable (negative terminal) or power fuse before removing, installing, or touching the xenon headlamp (including lamp bulb).
- Turn the lighting switch OFF before disconnecting and connecting the connector.
- When turning the xenon headlamp on and while it is illuminated, never touch the harness, bulb, and socket of the headlamp.
- When checking the headlamp on/off operation, check it on vehicle and with the power connected to the vehicle-side connector.
- Do not touch the headlamp bulb glass surface with bare hands or allow oil or grease to get on it. Do not touch the headlamp bulb just after the headlamp is turned off, because it is very hot.
- Install the xenon headlamp bulb socket correctly. If it is installed improperly, high-voltage leak or corona discharge may occur that can melt the bulb, connector, and housing. Do not illuminate the xenon headlamp bulb out of the headlamp housing. Doing so can cause fire and harm your eyes.
- When the bulb has burned out, wrap it in a thick vinyl bag and discard. Do not break the bulb.
- Leaving the bulb removed from the headlamp housing for a long period of time can deteriorate the performance of the lens and reflector (dirt, clouding). Always prepare a new bulb and have it on hand when replacing the bulb.
- Do not use organic solvent (paint thinner or gasoline) to clean lamps and to remove old sealant.

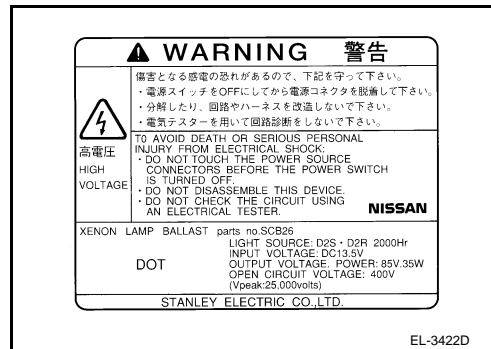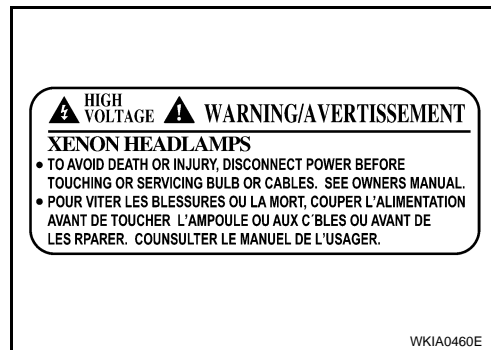


HEADLAMP (FOR USA)

< SERVICE INFORMATION >

HEADLAMP (FOR USA)

Component Parts and Harness Connector Location

INFOID:000000001721501

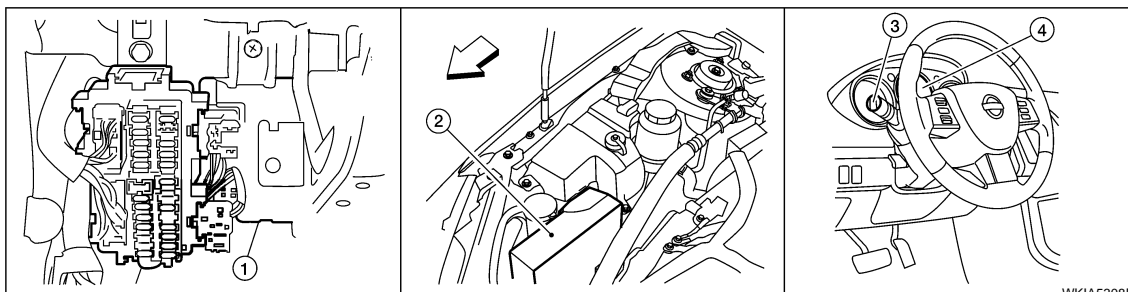

1. BCM M18 and M20 (View with instrument panel removed)
2. IPDM E/R E121, E122, and E124
3. Combination switch (lighting switch) M28
4. Combination meter M24

System Description

INFOID:000000001721502

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting switch). When the lighting switch is placed in the 2ND position, the BCM (body control module) receives input signal requesting the headlamps (and tail lamps) illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp high and headlamp low relay coils. These relays, when energized, direct power to the respective headlamps, which then illuminate.

If voltage is applied to a high beam solenoid, the bulb shade will move and a high beam and a low beam are changed.

OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- to headlamp high relay, located in the IPDM E/R, and
- to headlamp low relay, located in the IPDM E/R, and
- through 15A fuses (No. 34, and 41, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter f, located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 21, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 24.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 23.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 6, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 67
- to combination meter terminals 10, 11 and 12
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E15 and E24.

Low Beam Operation

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

LT

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

With the lighting switch in 2ND position, the BCM receives input signal requesting the headlamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the headlamp low relay coil, which when energized, directs power

- through 15A fuse (No. 36, located in the IPDM E/R)
- to IPDM E/R terminal 20
- to front combination lamp RH (headlamp) terminal 3, and
- through 15A fuse (No. 45, located in the IPDM E/R)
- to IPDM E/R terminal 30
- to front combination lamp LH (headlamp) terminal 3.

Ground is supplied

- to front combination lamp LH and RH (headlamp) terminal 4
- through grounds E15 and E24.

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input signal requesting the headlamp high beams to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the headlamp high relay coil and low relay coil, which when energized, directs power

- through 15A fuse (No. 36, located in the IPDM E/R)
- to IPDM E/R terminal 20
- to front combination lamp RH (headlamp) terminal 3, and
- through 15A fuse (No. 45, located in the IPDM E/R)
- to IPDM E/R terminal 30
- to front combination lamp LH (headlamp) terminal 3, and
- through 10A fuse (No. 40, located in the IPDM E/R)
- to IPDM E/R terminal 27
- to front combination lamp RH (headlamp) terminal 7, and
- through 10A fuse (No. 38, located in the IPDM E/R)
- to IPDM E/R terminal 28
- to front combination lamp LH (headlamp) terminal 7.

Ground is supplied

- to front combination lamp LH and RH (headlamp) terminals 4 and 8
- through grounds E15 and E24.

With power and ground supplied, the high beam headlamps illuminate.

If voltage is applied to a high beam solenoid, the bulb shade will move and a high beam and a low beam are changed.

The unified meter and A/C amp that received the high beam request signal by BCM across the CAN communication makes the high beam indicator lamp turn on in combination meter.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "System Description"](#).

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON) and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, then the headlamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-III.

AUTO LIGHT OPERATION

Refer to [LT-44, "System Description"](#) in AUTO LIGHT SYSTEM.

VEHICLE SECURITY SYSTEM

The vehicle security system will flash the high beams if the system is triggered. Refer to [BL-112](#).

XENON HEADLAMP (IF EQUIPPED)

Xenon type headlamp is adopted to the low and high beam headlamps. Xenon bulbs do not use a filament. Instead, they produce light when a high voltage current is passed between two tungsten electrodes through a mixture of xenon (an inert gas) and certain other metal halides. In addition to added lighting power, electronic control of the power supply gives the headlamps stable quality and tone color.

Following are some of the many advantages of the xenon type headlamp.

- The light produced by the headlamps is a white color comparable to sunlight that is easy on the eyes.
- Light output is nearly double that of halogen headlamps, affording increased area of illumination.

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

- The light features a high relative spectral distribution at wavelengths to which the human eye is most sensitive. This means that even in the rain, more light is reflected back from the road surface toward the vehicle for added visibility.
- Power consumption is approximately 25 percent less than halogen headlamps, reducing battery load.

CAN Communication System Description

INFOID:000000001721503

Refer to [LAN-3](#).

A

B

C

D

E

F

G

H

I

J

LT

L

M

N

O

P


HEADLAMP (FOR USA)

< SERVICE INFORMATION >

Schematic

INFOID:000000001721504

HALOGEN TYPE

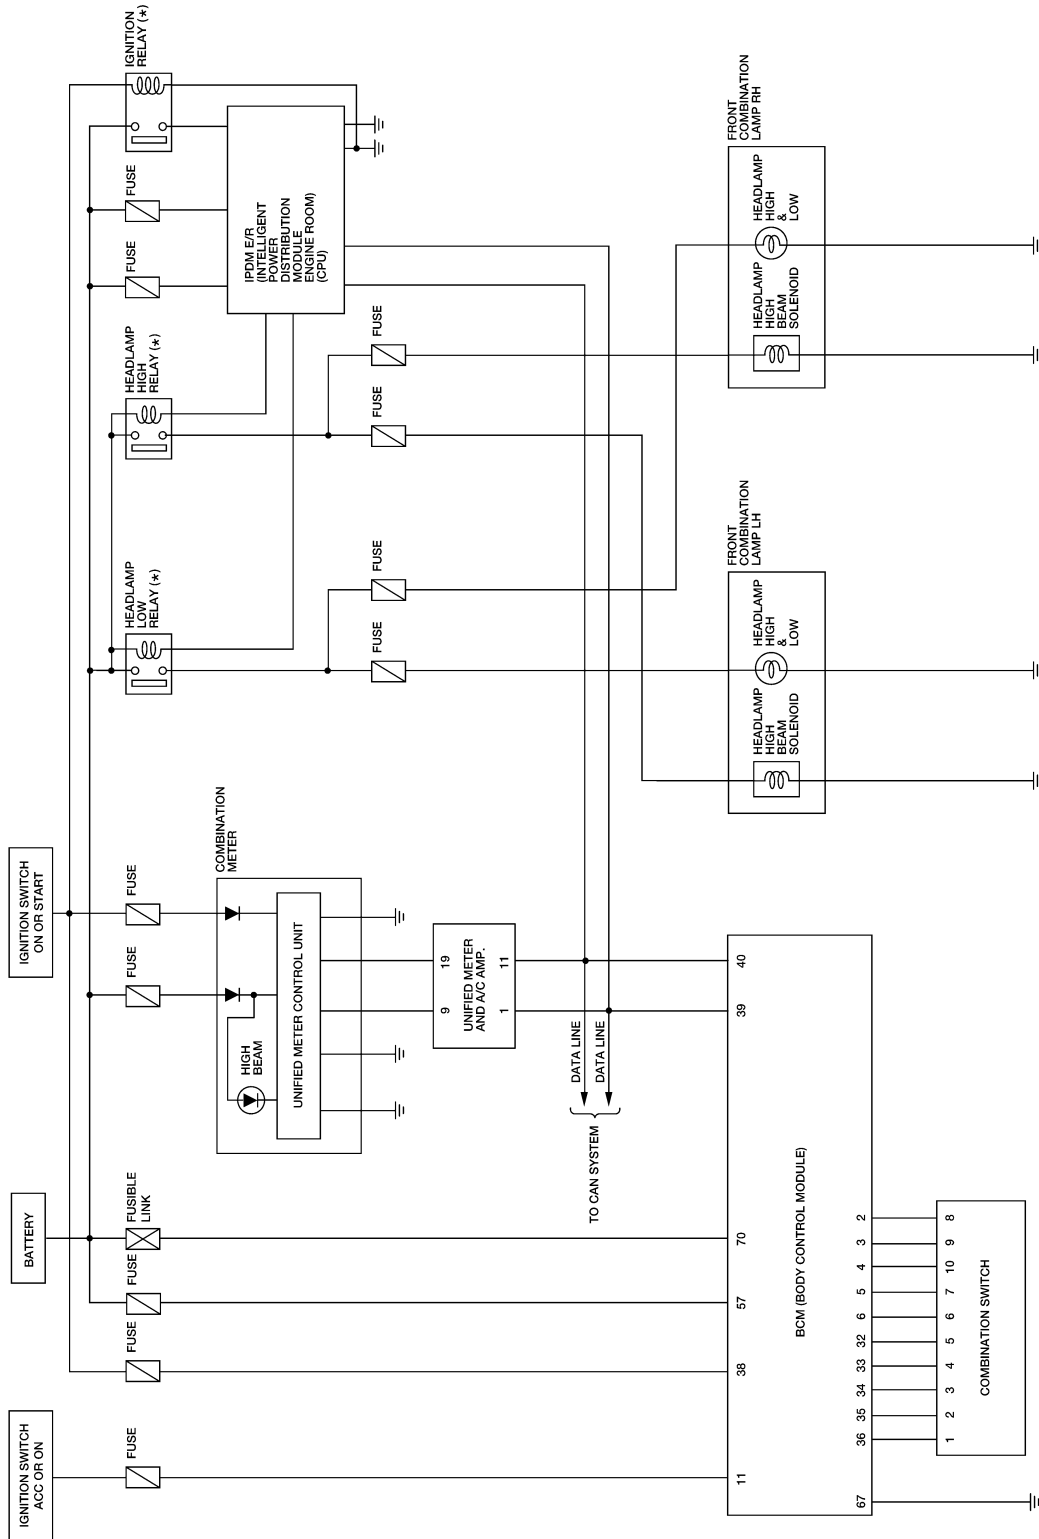


* : THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

WKWA4844E

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

XENON TYPE

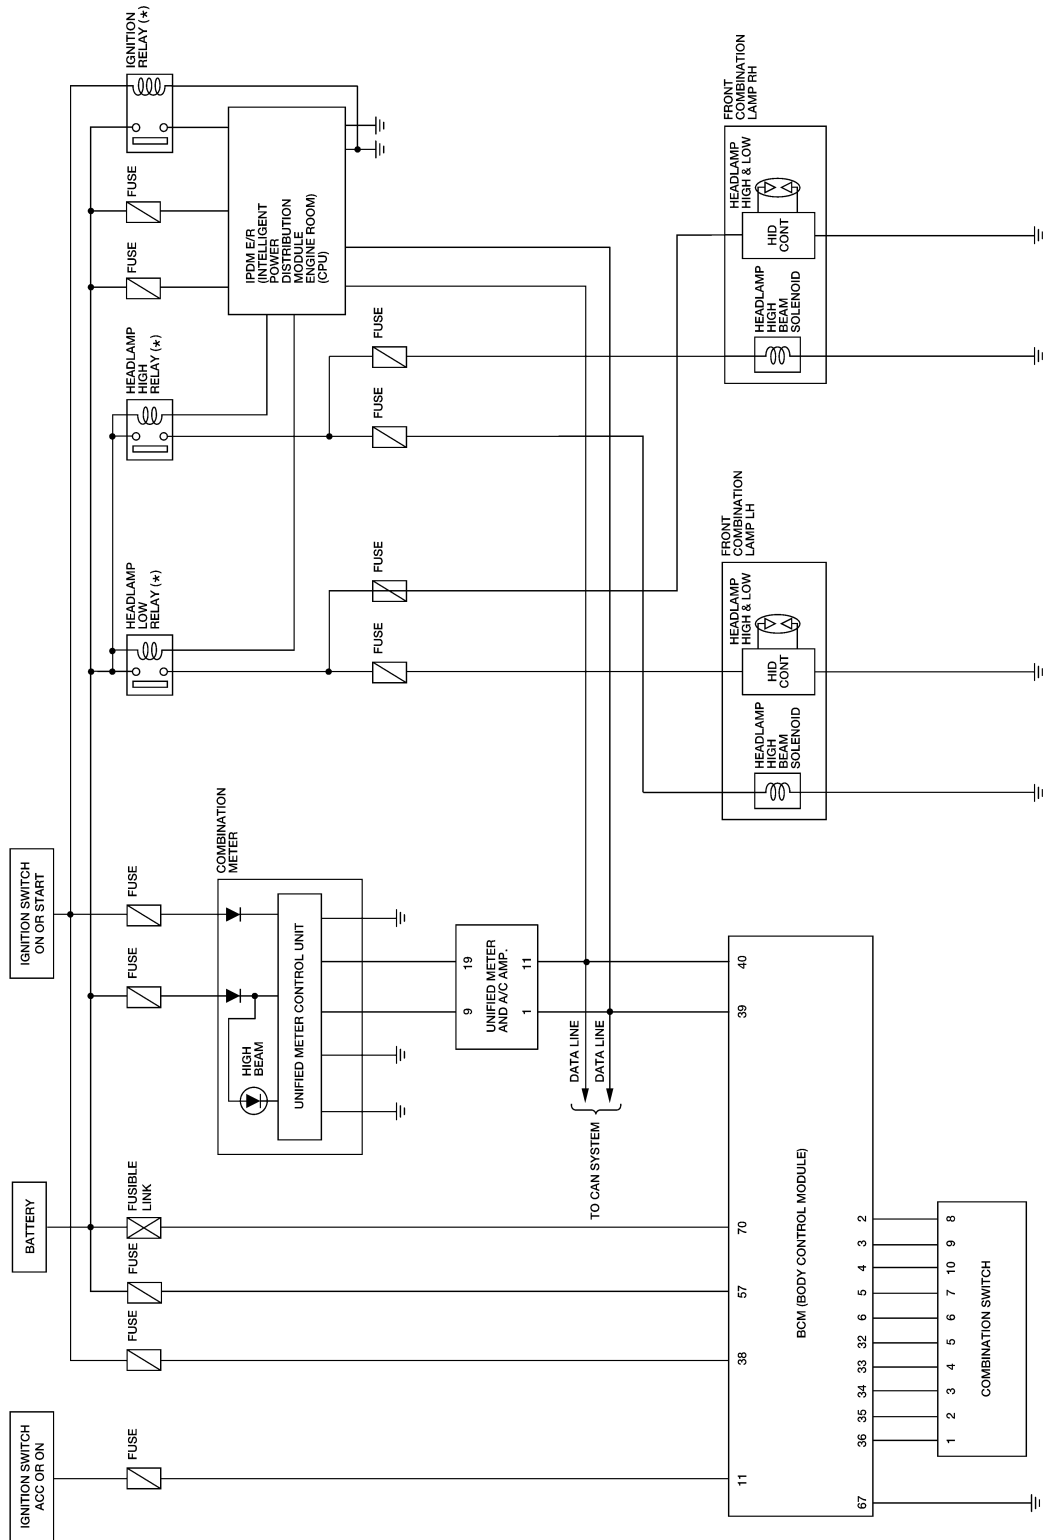

WKWA4845E

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

LT

HEADLAMP (FOR USA)

< SERVICE INFORMATION >





Wiring Diagram - H/LAMP -

INFOID:000000001721505

HALOGEN TYPE

LT-H/LAMP-01

— : DATA LINE

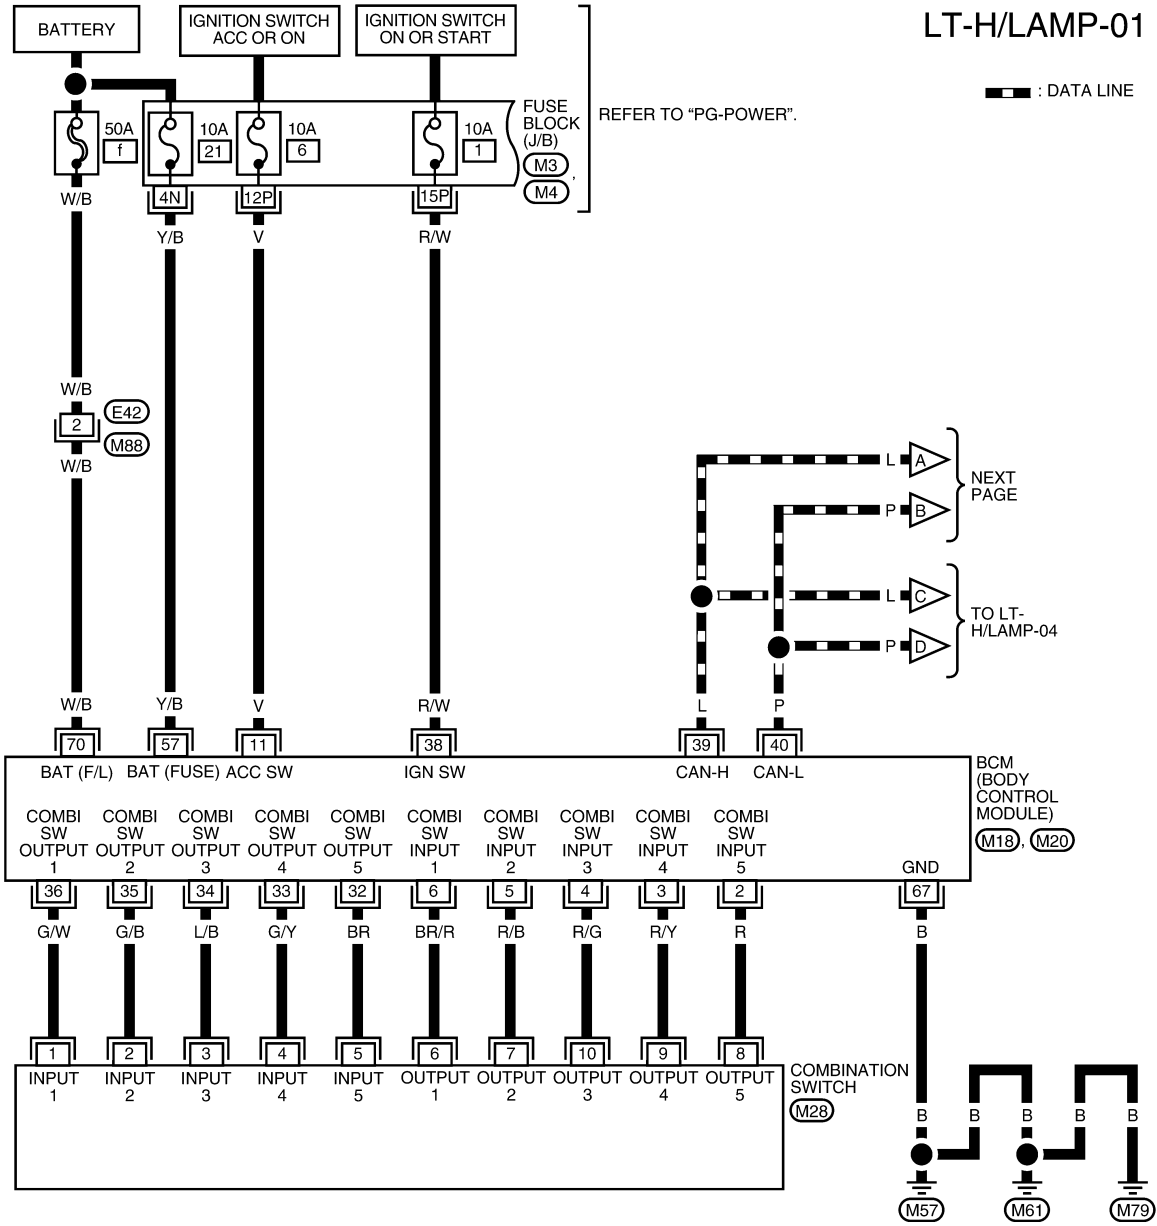



WKWA4846E

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

LT-H/LAMP-02

— : DATA LINE

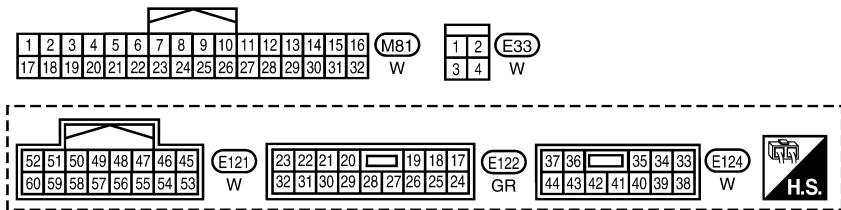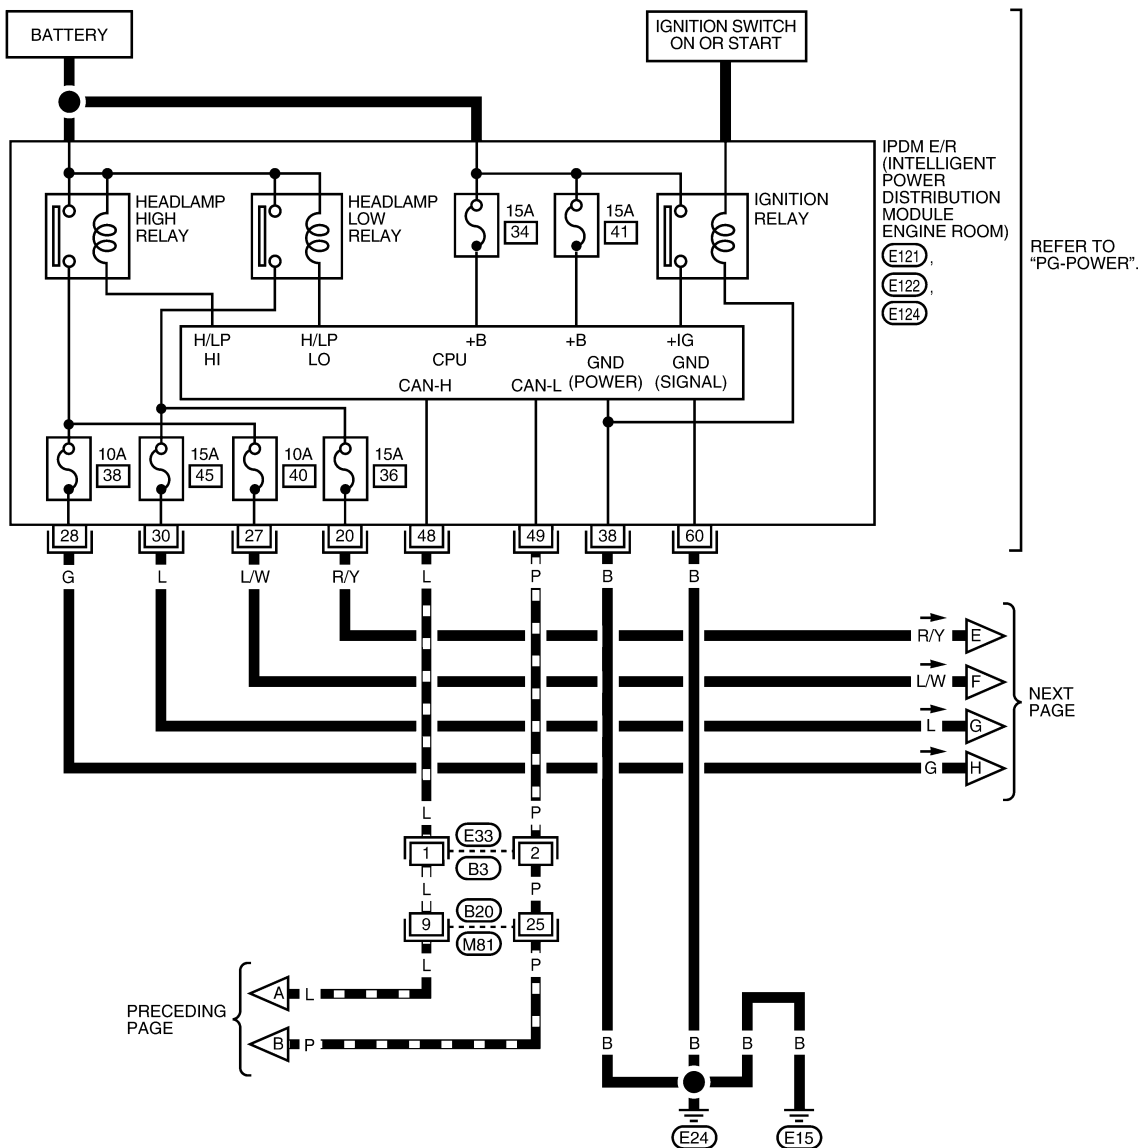

WKWA4847E



A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

LT

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

LT-H/LAMP-03

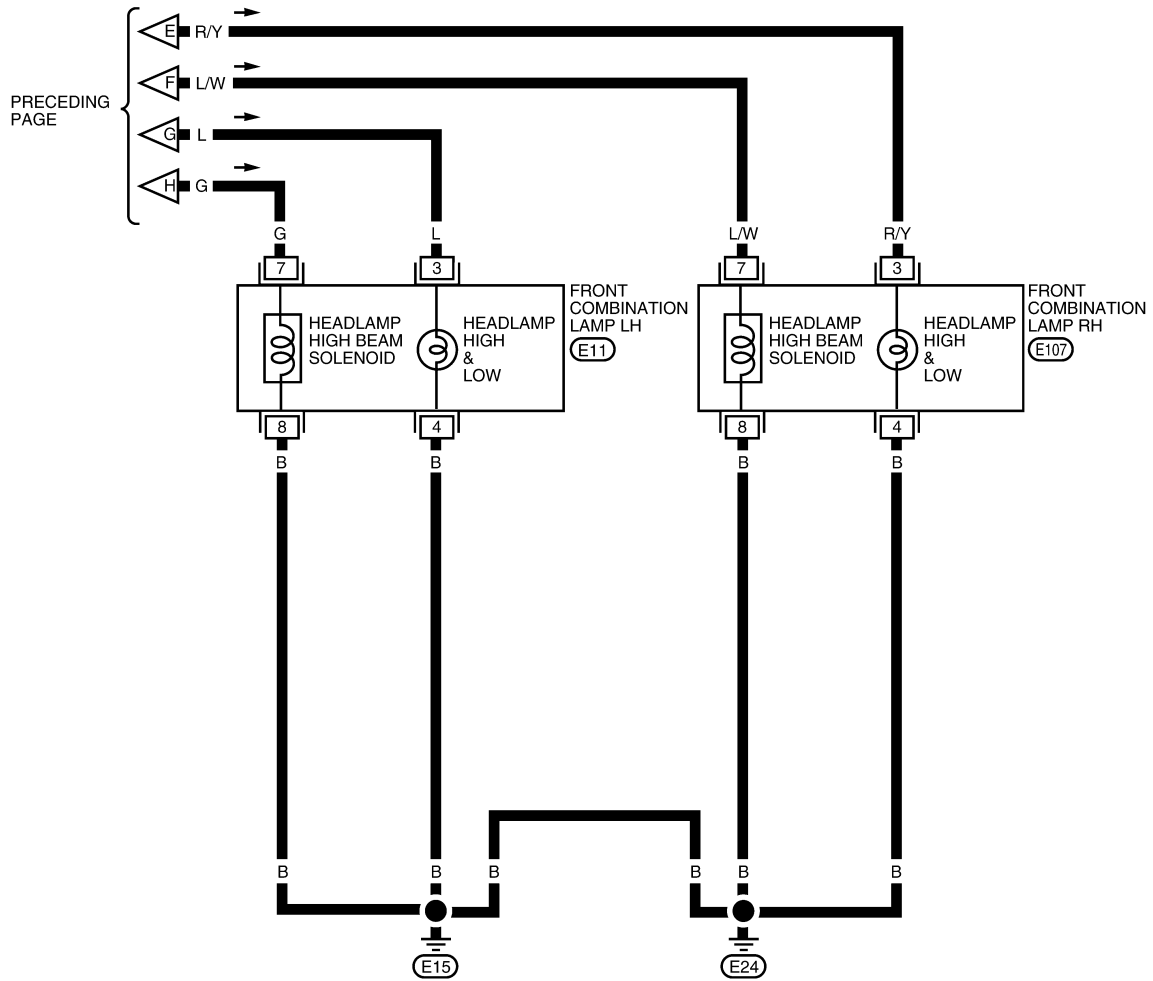



WKWA4848E

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

LT-H/LAMP-04

▬ : DATA LINE

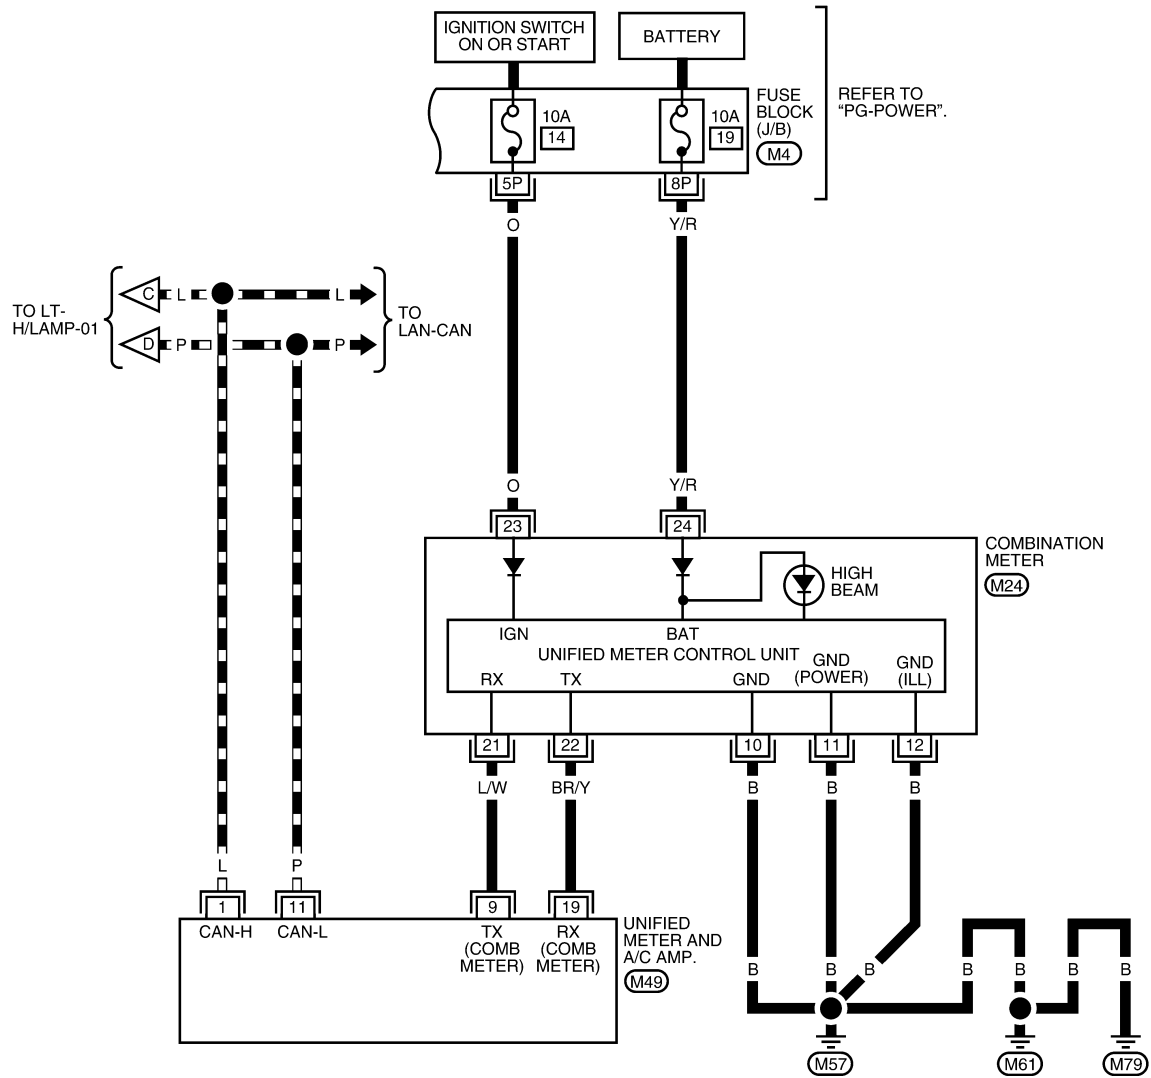





WKWA4849E

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

XENON TYPE

LT-H/LAMP-05

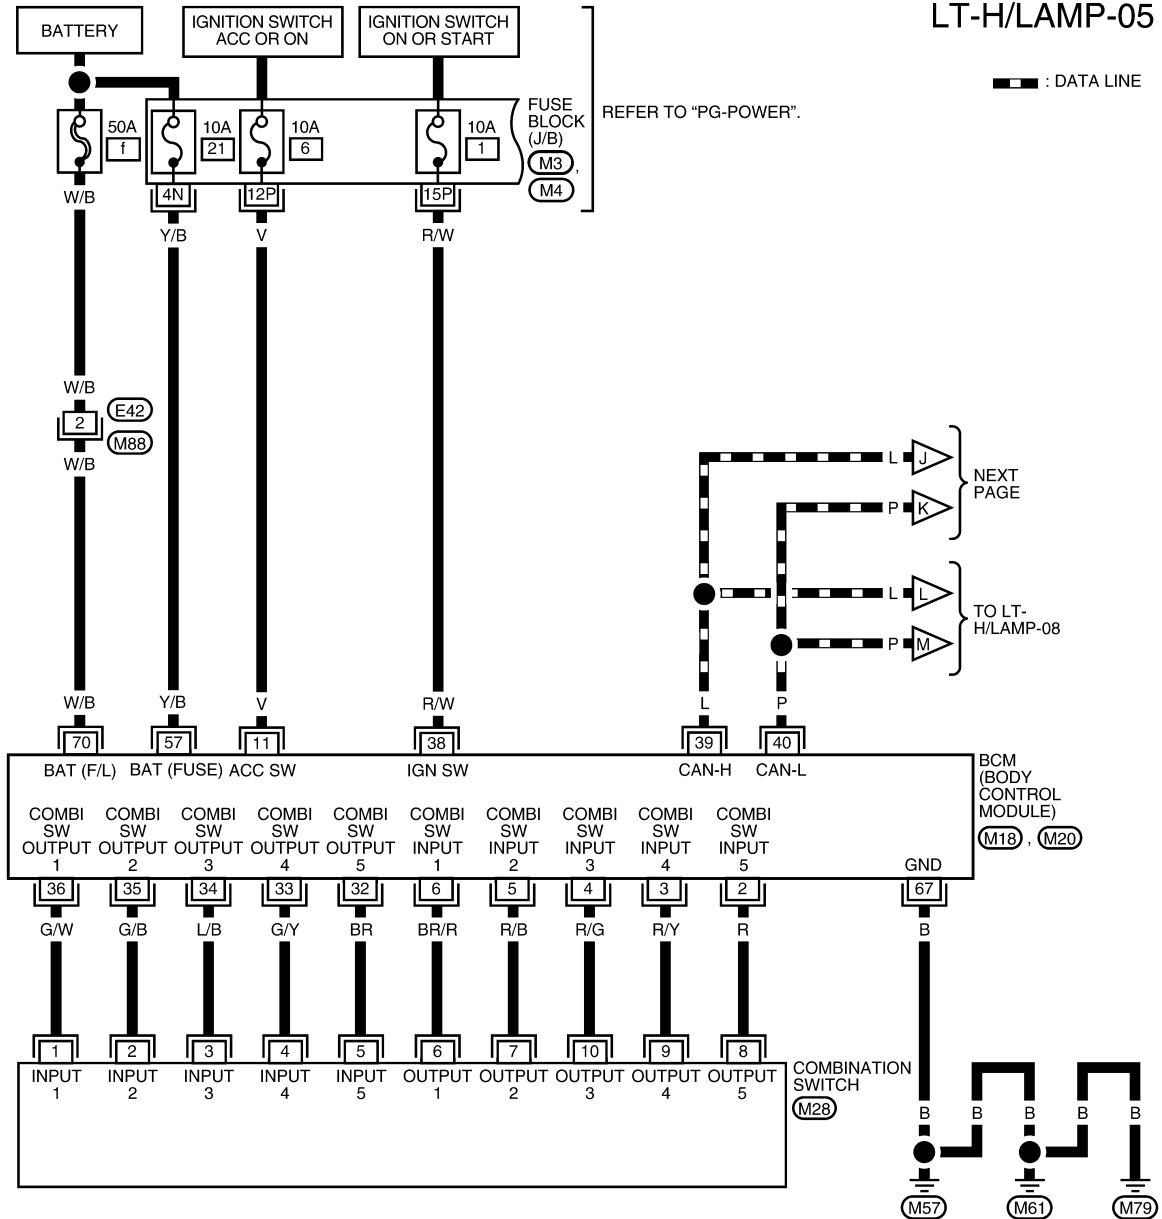


WKWA4850E

HEADLAMP (FOR USA)

< SERVICE INFORMATION >


LT-H/LAMP-06

— : DATA LINE

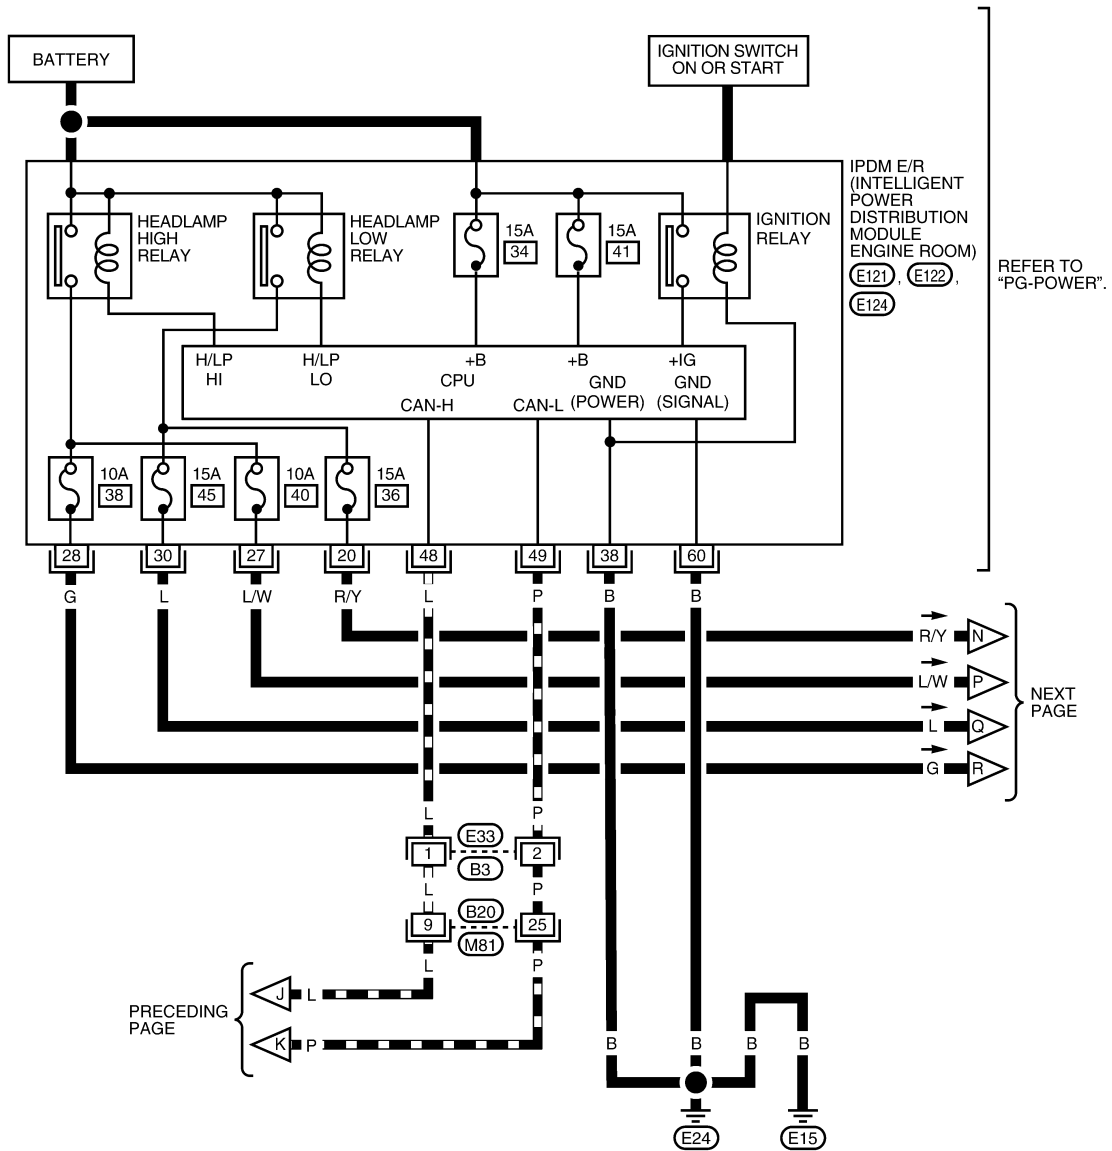

PRECEDING PAGE

NEXT PAGE

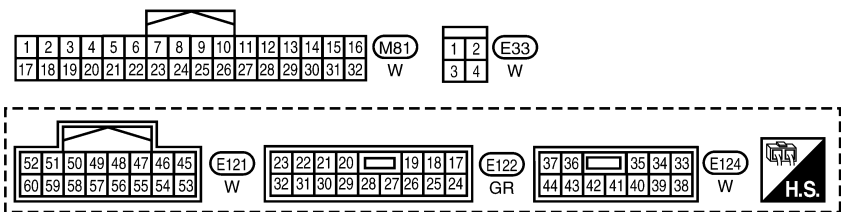

WKWA4851E



A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

LT

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

LT-H/LAMP-07


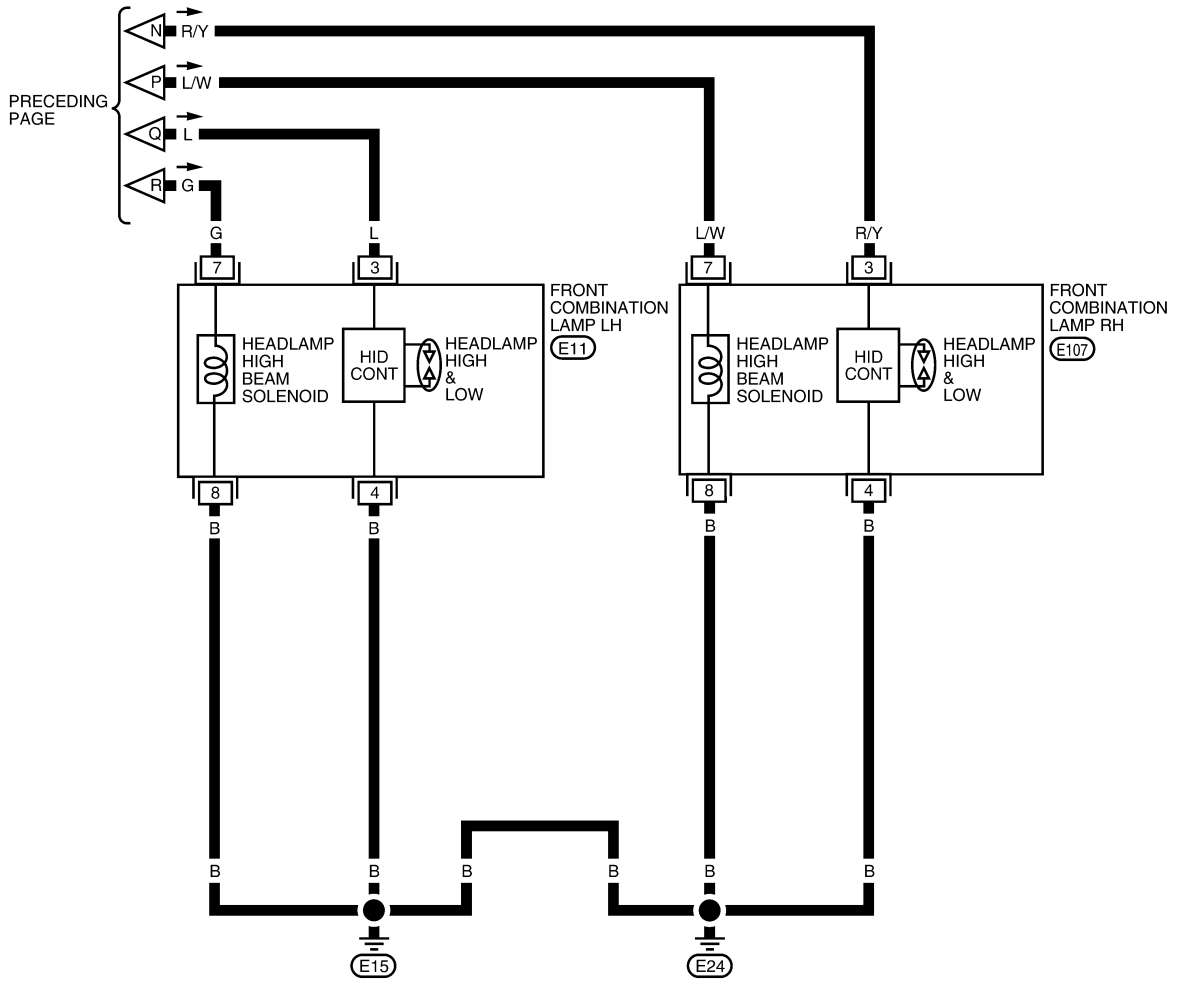


WKWA4852E

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

LT-H/LAMP-08

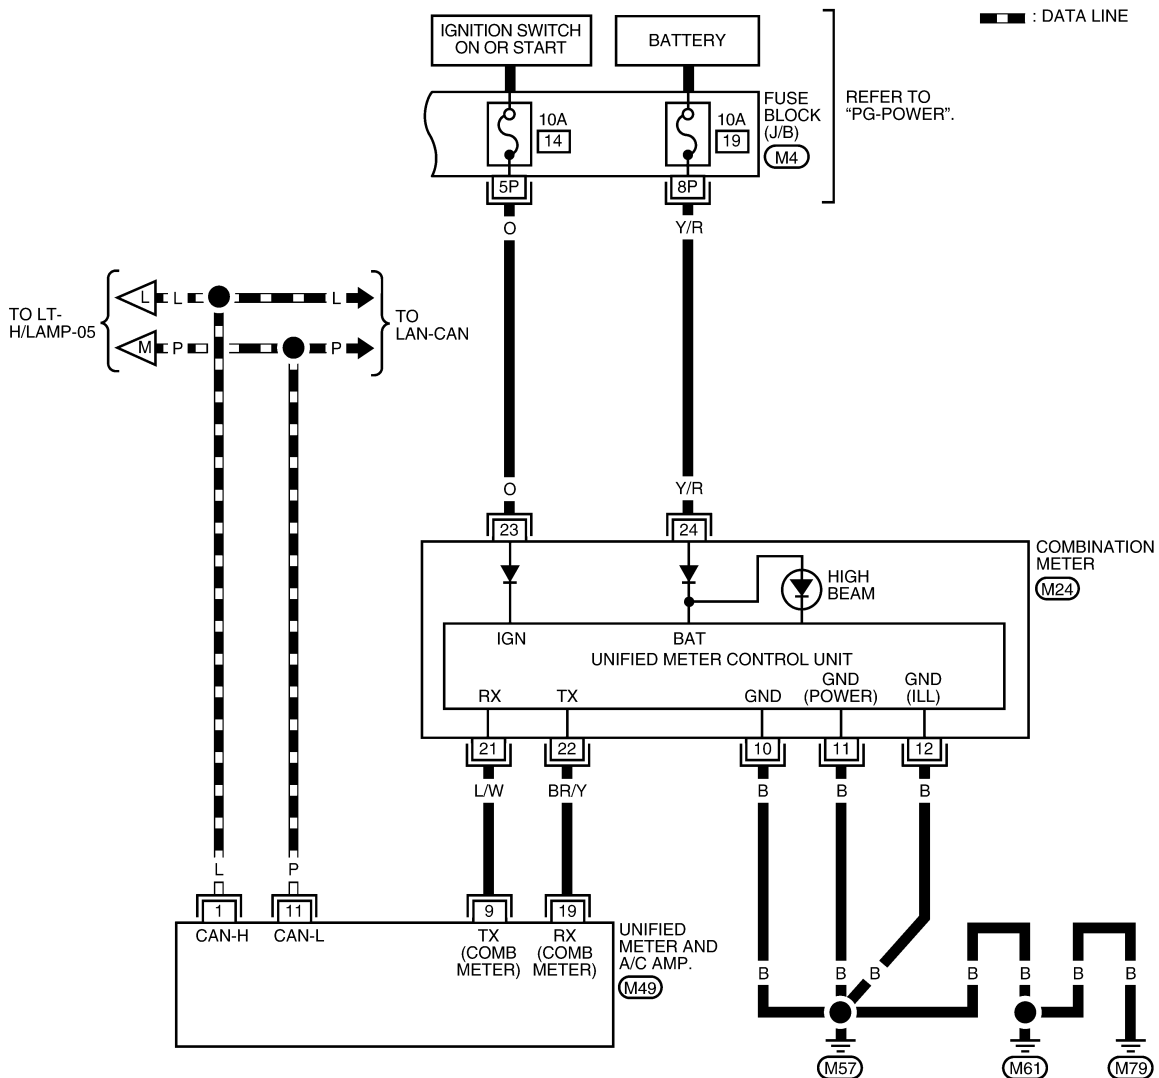

Terminal and Reference Value for BCM

Refer to [BCS-11, "Terminal and Reference Value for BCM"](#).

Terminal and Reference Value for IPDM E/R

Refer to [PG-25, "Terminal and Reference Value for IPDM E/R"](#).

WKWA4853E

INFOID:000000001721506

INFOID:000000001721507

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

How to Proceed with Trouble Diagnosis

INFOID:000000001721508

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-5, "System Description"](#).
3. Perform the Preliminary Check. Refer to [LT-18, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

INFOID:000000001721509

CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-15, "BCM Power Supply and Ground Circuit Inspection"](#).

CONSULT-III Function (BCM)

INFOID:000000001721510

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

WORK SUPPORT

Display Item List

Item	Description	CONSULT-III	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between ON/OFF.	ON	×
		OFF	—

DATA MONITOR

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/ Other than AUTO position: OFF)

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

Monitor item	Contents
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW - DR "ON/OFF"	Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - AS "ON/OFF"	Displays status of the front door RH as judged from the front door switch RH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RR "ON/OFF"	Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RL "ON/OFF"	Displays status of the rear door as judged from the rear door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW "ON/OFF"	Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
ENGINE RUN ^{Note 1} "ON/OFF"	Displays status (Engine running: ON/Others: OFF) as judged from engine status signal.
PKB SW ^{Note 1} "ON/OFF"	Displays status (Parking brake switch: ON/Others: OFF) as judged from parking brake switch signal.
OPTICAL SENSOR [0 - 5V]	Displays "ambient light (close to 5V when light/close to 0V when dark)" judged from optical sensor signal.

Note 1: Vehicles without daytime light system may display this item, but cannot monitor it.

ACTIVE TEST

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay (HI, LO) to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CORNERING LAMP	Allows cornering lamp relay (RH, LH) to operate by switching ON-OFF.

SELF-DIAGNOSTIC RESULTS

Display Item List

Monitored item	CONSULT-III display	Description
CAN communication	CAN communication [U1000]	Malfunction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfunction is detected in CAN system.

CONSULT-III Function (IPDM E/R)

INFOID:000000001721511

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

IPDM E/R diagnostic Mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

DATA MONITOR

Display Item List

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

Item name	CONSULT-III screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Parking, license plate and tail lamps request	TAIL&CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Cornering lamp	CRNRNG LMP REQ	ON/OFF	×	–	×	Signal status input from BCM
Front fog lamps request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Test item	CONSULT-III screen display	Description
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI, LO) at your option (Head lamp high beam repeats ON-OFF every 1 second).
Front fog lamp relay (FOG) output		Allows fog lamp relay (FOG) to operate by switching operation ON-OFF at your option.
Cornering lamp relay (RH, LH) output	CORNERING LAMP	Allows cornering lamp relay (RH, LH) to operate by switching operation ON-OFF at your option.

Headlamp Does Not Change To High Beam (Both Sides)

INFOID:000000001721512

1. CHECK COMBINATION SWITCH INPUT SIGNAL

④ With CONSULT-III

Select "BCM" on CONSULT-III. With "HEAD LAMP" data monitor, make sure "HI BEAM SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in HIGH position : HI BEAM SW ON

⊗ Without CONSULT-III

Refer to [LT-89. "Combination Switch Inspection"](#).

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-89. "Combination Switch Inspection"](#).

2. HEADLAMP ACTIVE TEST

④ With CONSULT-III

1. Select "IPDM E/R" on CONSULT-III, and select "ACTIVE TEST".
2. Select "LAMPS".
3. Touch "HI" on "ACTIVE TEST" screen.
4. Make sure headlamp high beam operates.

Headlamp high beam should operate.

⊗ Without CONSULT-III

1. Start auto active test. Refer to [PG-21. "Auto Active Test"](#).
2. Make sure headlamp high beam operates.

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

Headlamp high beam should operate.

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-III, and select "DATA MONITOR".
2. Make sure "HL LO REQ" and "HL HI REQ" turns ON when lighting switch is in HIGH position.

**When lighting switch is in HIGH position : HL LO REQ ON
: HL HI REQ ON**

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).
- NG >> Replace BCM. Refer to [BCS-18, "BCM"](#).

4. CHECK HEADLAMP INPUT SIGNAL


 With CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connectors.
3. Turn ignition switch ON.
4. Select "BCM" on CONSULT-III, and select "HEAD LAMP".
5. Select "ACTIVE TEST".
6. Select "HEAD LAMP".
7. Touch "HI" on "ACTIVE TEST" screen.
8. When headlamp high beam is operating, check voltage between front combination lamp RH and LH harness connectors and ground (headlamp high beam stays ON steady).

 Without CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connectors.
3. Start auto active test. Refer to [PG-21, "Auto Active Test"](#).
4. When headlamp high beam is operating, check voltage between front combination lamp RH and LH harness connectors and ground.

Front combination lamp		Terminal	(-)	Voltage
(+) Connector				
RH	E107	7	Ground	Battery voltage
LH	E11			

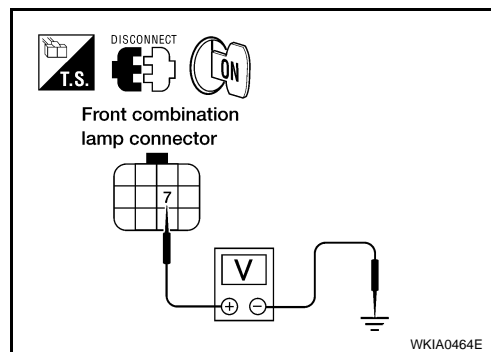

OK or NG


- OK >> GO TO 6.
- NG >> GO TO 5.

5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E122 terminal 27 and front combination lamp RH harness connector E107 terminal 7.

27 - 7 : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E122 terminal 28 and front combination lamp LH harness connector E11 terminal 7.

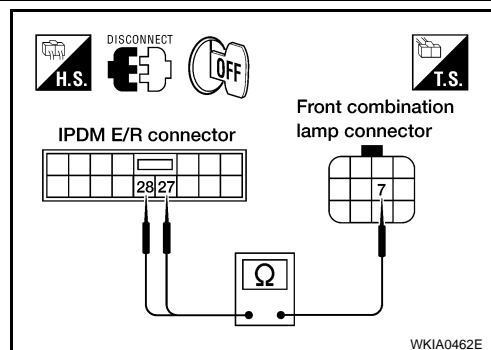

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

28 - 7 : Continuity should exist.

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp RH harness connector E107 terminal 8 and ground.


8 - Ground : Continuity should exist.

3. Check continuity between front combination lamp LH harness connector E11 terminal 8 and ground.

8 - Ground : Continuity should exist.

OK or NG

- OK >> Replace headlamp assembly. Refer to [LT-32, "Removal and Installation"](#).
- NG >> Repair harness or connector.

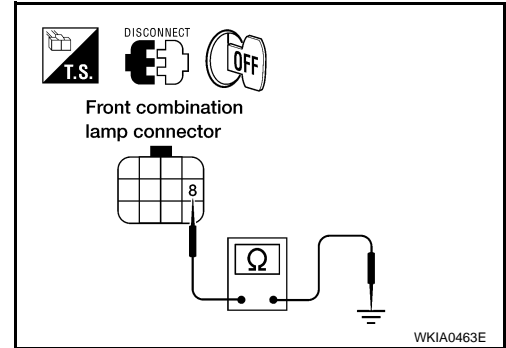


Headlamp Does Not Change To High Beam (One Side)

INFOID:000000001721513

1. CHECK HEADLAMP INPUT SIGNAL

1. Disconnect front combination lamp RH or LH connector.
2. Turn ignition switch ON.
3. Lighting switch is turned to HIGH position.
4. Check voltage between front combination lamp RH or LH harness connector and ground.

Front combination lamp (+)		Terminal	(-)	Voltage
Connector				
RH	E107	7	Ground	Battery voltage
LH	E11			

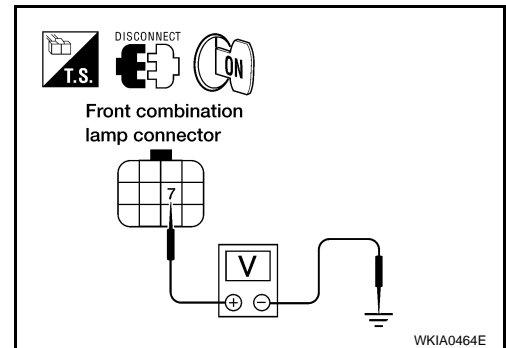

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E122 terminal 27 and front combination lamp RH harness connector E107 terminal 7.


27 - 7 : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E122 terminal 28 and front combination lamp LH harness connector E11 terminal 7.

28 - 7 : Continuity should exist.

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).

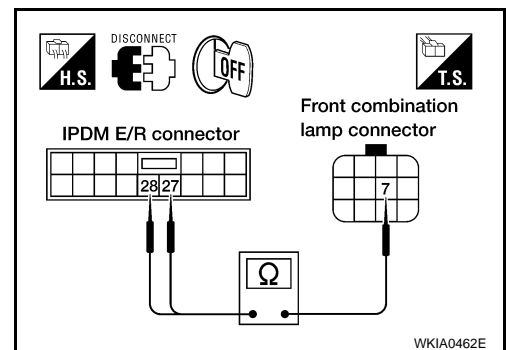

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

NG >> Repair harness or connector.

3.CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp RH harness connector E107 terminal 8 and ground.

8 - Ground : Continuity should exist.


3. Check continuity between front combination lamp LH harness connector E11 terminal 8 and ground.

8 - Ground : Continuity should exist.

OK or NG

OK >> Replace headlamp assembly. Refer to [LT-32, "Removal and Installation"](#).

NG >> Repair harness or connector.

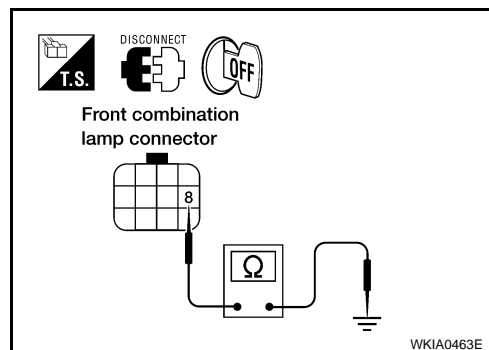

High Beam Indicator Lamp Does Not Illuminate

INFOID:000000001721514

1.CHECK BULB

Check bulb of high beam indicator lamp.

OK or NG

OK >> Replace combination meter. Refer to [DI-24, "Combination Meter"](#).

NG >> Replace indicator bulb.

Headlamp Low Beam Does Not Illuminate (Both Sides)

INFOID:000000001721515

1.CHECK COMBINATION SWITCH INPUT SIGNAL

☑ With CONSULT-III

Select "BCM" on CONSULT-III. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in 2ND position : HEAD LAMP SW 1 ON
: HEAD LAMP SW 2 ON**

☒ Without CONSULT-III

Refer to [LT-89, "Combination Switch Inspection"](#).

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-89, "Combination Switch Inspection"](#).

2.HEADLAMP ACTIVE TEST

☑ With CONSULT-III

1. Select "IPDM E/R" on CONSULT-III, and select "ACTIVE TEST".
2. Select "LAMPS".
3. Touch "LO" on "ACTIVE TEST" screen.
4. Make sure headlamp low beam operates.

Headlamp low beam should operate.

☒ Without CONSULT-III

1. Start auto active test. Refer to [PG-21, "Auto Active Test"](#).
2. Make sure headlamp low beam operates.

Headlamp low beam should operate.

OK or NG

OK >> GO TO 3.

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

NG >> GO TO 4.

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-III, and select "DATA MONITOR".
2. Make sure "HL LO REQ" turns ON when lighting switch is in 2ND position.

When lighting switch is in 2ND position : HL LO REQ ON

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29. "Removal and Installation of IPDM E/R"](#).
 NG >> Replace BCM. Refer to [BCS-18. "BCM"](#).

4. CHECK HEADLAMP INPUT SIGNAL


④ With CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-III, and select "ACTIVE TEST".
5. Select "LAMPS".
6. Touch "LO" on "ACTIVE TEST" screen.
7. When headlamp low beam is operating, check voltage between front combination lamp RH and LH harness connectors and ground.

⊗ Without CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connectors.
3. Start auto active test. Refer to [PG-21. "Auto Active Test"](#).
4. When headlamp low beam is operating, check voltage between front combination lamp RH and LH harness connectors and ground.

Terminals			Voltage	
(+)		(-)		
Front combination lamp connector	Terminal			
RH	E107	3	Ground	Battery voltage
LH	E11			

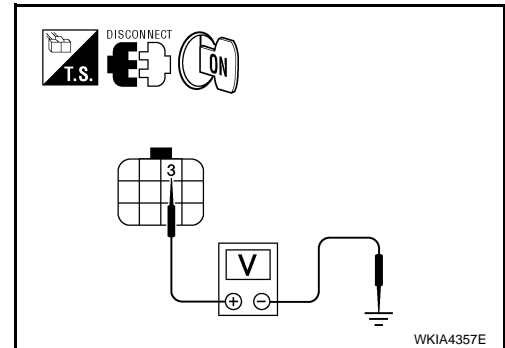

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 5.


5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E122 terminal 20 and front combination lamp RH harness connector E107 terminal 3.

20 - 3 : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E122 terminal 30 and front combination lamp LH harness connector E11 terminal 3.

30 - 3 : Continuity should exist.

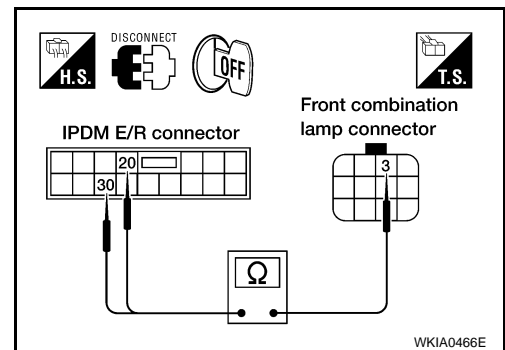

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29. "Removal and Installation of IPDM E/R"](#).
 NG >> Repair harness or connector.

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp RH harness connector E107 terminal 4 and ground.


4 - Ground : Continuity should exist.

3. Check continuity between front combination lamp LH harness connector E11 terminal 4 and ground.

4 - Ground : Continuity should exist.

OK or NG

- OK >> Check headlamp harness and connectors, ballasts (HID control unit), and xenon bulbs. Refer to [LT-28. "Xenon Headlamp Trouble Diagnosis"](#).
- NG >> Repair harness or connector.

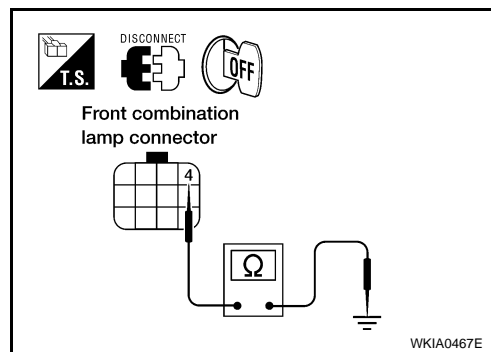

Headlamp Low Beam Does Not Illuminate (One Side)

INFOID:000000001721516

1. CHECK BULB

Check ballasts (HID control unit) and xenon bulb of lamp which does not illuminate. Refer to [LT-28. "Xenon Headlamp Trouble Diagnosis"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Repair malfunctioning part.

2. CHECK HEADLAMP CIRCUIT

1. Disconnect IPDM E/R connector and front combination lamp RH or LH connector.
2. Check continuity between IPDM E/R harness connector E122 terminal 20 and front combination lamp RH harness connector E107 terminal 3.

20 - 3 : Continuity should exist.

3. Check continuity between IPDM E/R harness connector E122 terminal 30 and front combination lamp LH harness connector E11 terminal 3.

30 - 3 : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

3. CHECK HEADLAMP GROUND

1. Check continuity between front combination lamp RH harness connector E107 terminal 4 and ground.



4 - Ground : Continuity should exist.

2. Check continuity between front combination lamp LH harness connector E11 terminal 4 and ground.

4 - Ground : Continuity should exist.

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29. "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

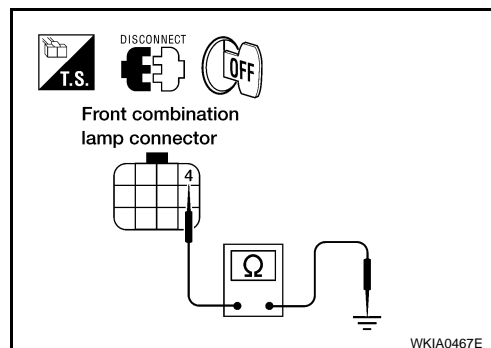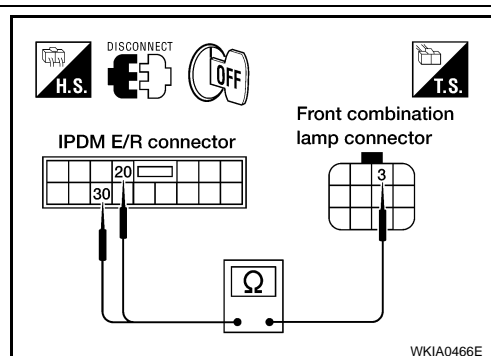

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

Headlamp RH Low Beam and High Beam Does Not Illuminate

INFOID:000000001721517

1.CHECK BULB

Inspect ballasts (HID control unit) and xenon bulb of lamp which does not illuminate. Refer to [LT-28, "Xenon Headlamp Trouble Diagnosis"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Repair malfunctioning part.


2. CHECK HEADLAMP GROUNDS

1. Disconnect front combination lamp RH connector.
2. Check continuity between front combination lamp RH harness connector E107 terminal 4, 8 and ground.

4, 8 - Ground : Continuity should exist.

OK or NG


- OK >> GO TO 3.
- NG >> Repair harness or connector.

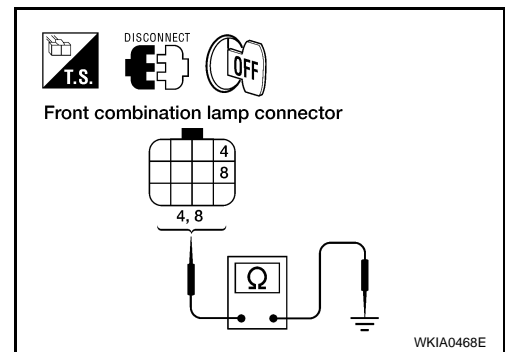

3.CHECK HEADLAMP CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector E122 terminal 27 and front combination lamp RH harness connector E107 terminal 7.

27 - 7 : Continuity should exist.

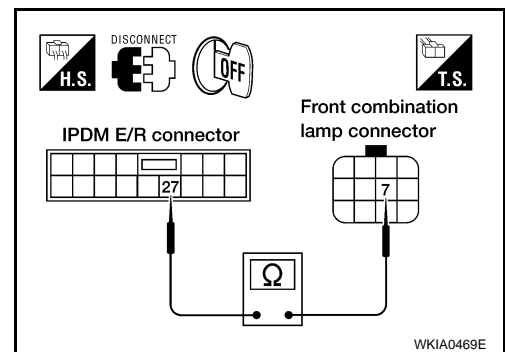


3. Check continuity between IPDM E/R harness connector E122 terminal 20 and front combination lamp RH harness connector E107 terminal 3.

20 - 3 : Continuity should exist.

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

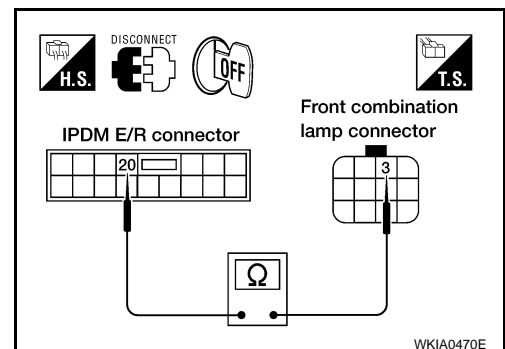

Headlamp LH Low Beam and High Beam Does Not Illuminate

INFOID:000000001721518

1.CHECK BULB

Inspect ballasts (HID control unit) and xenon bulb of lamp which does not illuminate. Refer to [LT-28, "Xenon Headlamp Trouble Diagnosis"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Repair malfunctioning part.

2.CHECK HEADLAMP GROUND

HEADLAMP (FOR USA)


< SERVICE INFORMATION >

1. Disconnect front combination lamp LH connector.
2. Check continuity between front combination lamp LH harness connector E11 terminal 4, 8 and ground.

4, 8 - Ground : Continuity should exist.

OK or NG


- OK >> GO TO 3.
NG >> Repair harness or connector.

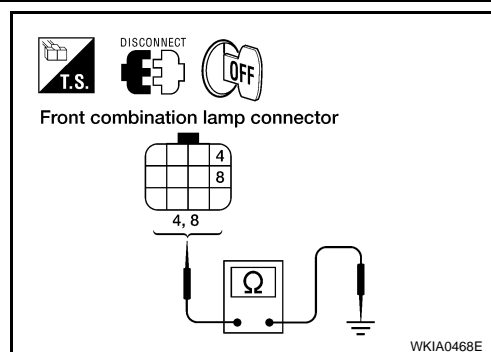

3.CHECK HEADLAMP CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector E122 terminal 28 and front combination lamp LH harness connector E11 terminal 7.

28 - 7 : Continuity should exist.

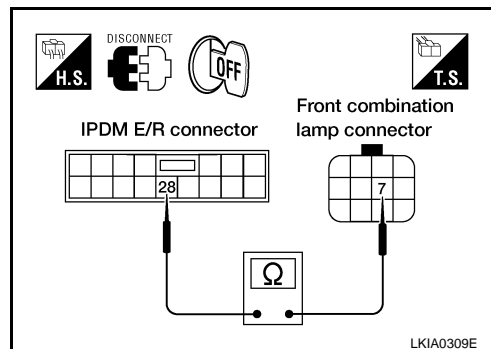


3. Check continuity between IPDM E/R harness connector E122 terminal 30 and front combination lamp LH harness connector E11 terminal 3.

30 - 3 : Continuity should exist.

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).
NG >> Repair harness or connector.

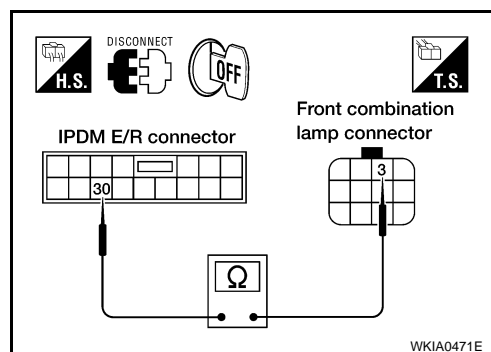

Headlamps Do Not Turn OFF

INFOID:000000001721519

1.CHECK HEADLAMP TURN OFF

Make sure that lighting switch is OFF. And make sure that headlamp turns off when ignition switch is turned OFF.

OK or NG

- OK >> GO TO 3.
NG >> GO TO 2.

2.CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-III. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in OFF position : HEAD LAMP SW 1 OFF
: HEAD LAMP SW 2 OFF**

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).
NG >> Check lighting switch. Refer to [LT-89, "Combination Switch Inspection"](#).

3.CHECKING CAN COMMUNICATIONS BETWEEN BCM AND IPDM E/R

Select "BCM" on CONSULT-III and perform self-diagnosis for BCM.

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

Display of self-diagnosis results

NO DTC>> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).

CAN COMM CIRCUIT>> Refer to [BCS-17, "CAN Communication Inspection Using CONSULT-III \(Self-Diagnosis\)"](#).

Caution

INFOID:000000001721520

- Installation or removal of the connector must be done with the lighting switch OFF.
- When the lamp is illuminated (when the lighting switch is ON), do not touch the harness, HID control unit, inside of the lamp, or the lamp metal parts.
- To check illumination, temporarily install lamp in the vehicle. Be sure to connect power at the vehicle-side connector.
- If the error can be traced directly to the electrical system, first check for items such as blown fuses and fusible links, broken wires or loose connectors, pulled-out terminals, and improper connections.
- Do not work with wet hands.
- Using a tester for HID control unit circuit trouble diagnosis is prohibited.
- Disassembling the HID control unit or harnesses (bulb socket harness, ballast harness) is prohibited.
- Immediately after illumination, the light intensity and color will fluctuate, but there is nothing wrong.
- When the bulb has reached the end of its lifetime, the brightness may drop significantly, it may flash repeatedly, or the light may turn a reddish color.

Xenon Headlamp Trouble Diagnosis

INFOID:000000001721521

1.CHECK 1: XENON HEADLAMP LIGHTING

Install normal xenon bulb to corresponding xenon bulb headlamp and check if lamp lights up.

OK or NG

OK >> Replace xenon bulb. Refer to [LT-30, "Bulb Replacement"](#).

NG >> GO TO 2.

2.CHECK 2: XENON HEADLAMP LIGHTING

Install normal HID control unit to corresponding xenon headlamp and check if lamp lights up.

OK or NG

OK >> Replace HID control unit.

NG >> GO TO 3.

3.CHECK 3: XENON HEADLAMP LIGHTING

Install normal xenon lamp housing assembly to corresponding xenon headlamp and check if lamp lights up.

OK or NG

OK >> Malfunction in starter (boosting circuit) in xenon headlamp housing. (Replace xenon headlamp housing assembly.)


NG >> Inspection End.

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

Aiming Adjustment

INFOID:000000001721522

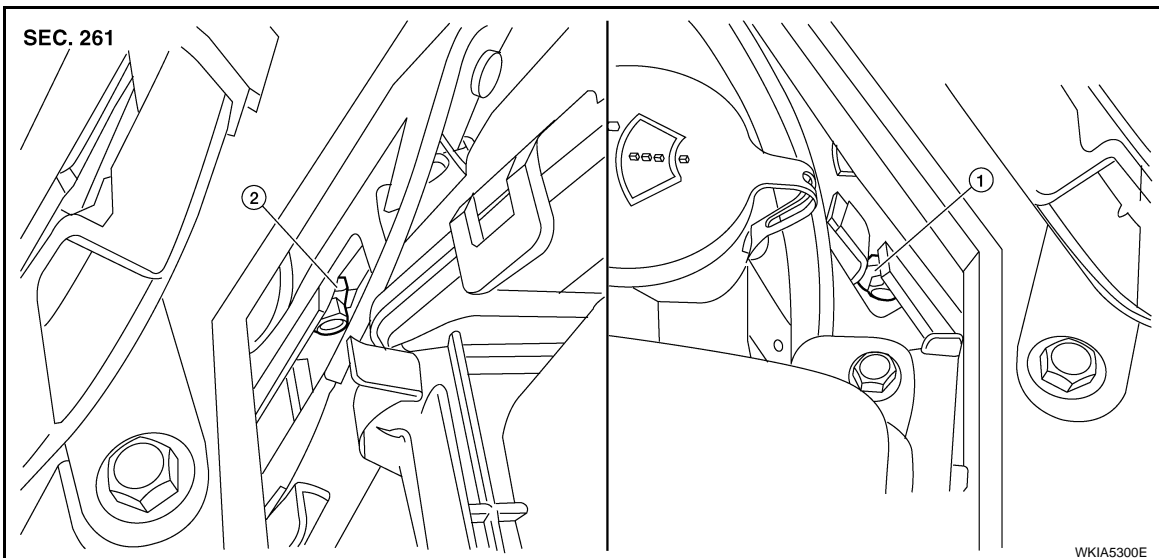

1. Passenger side adjustment screw 2. Driver side adjustment screw

NOTE:

- For details, refer to the regulations in your area.
- If the vehicle front body has been repaired and/or the headlamp assembly has been replaced, check headlamp aiming.

Before performing headlamp aiming adjustment, check the following:

- Confirm which type of headlamp is in vehicle.
- Ensure all tires are inflated to correct pressure.
- Place vehicle and screen on level surface.
- Ensure there is no load in vehicle other than the driver (or equivalent weight placed in driver's position).
Coolant and engine oil filled to correct level and fuel tank full.
- Confirm spare tire, jack and tools are properly stowed.

A
B
C
D
E
F
G
H
I
J

LT


L
M
N
O
P

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

Headlamp Aiming

INFOID:000000001721523

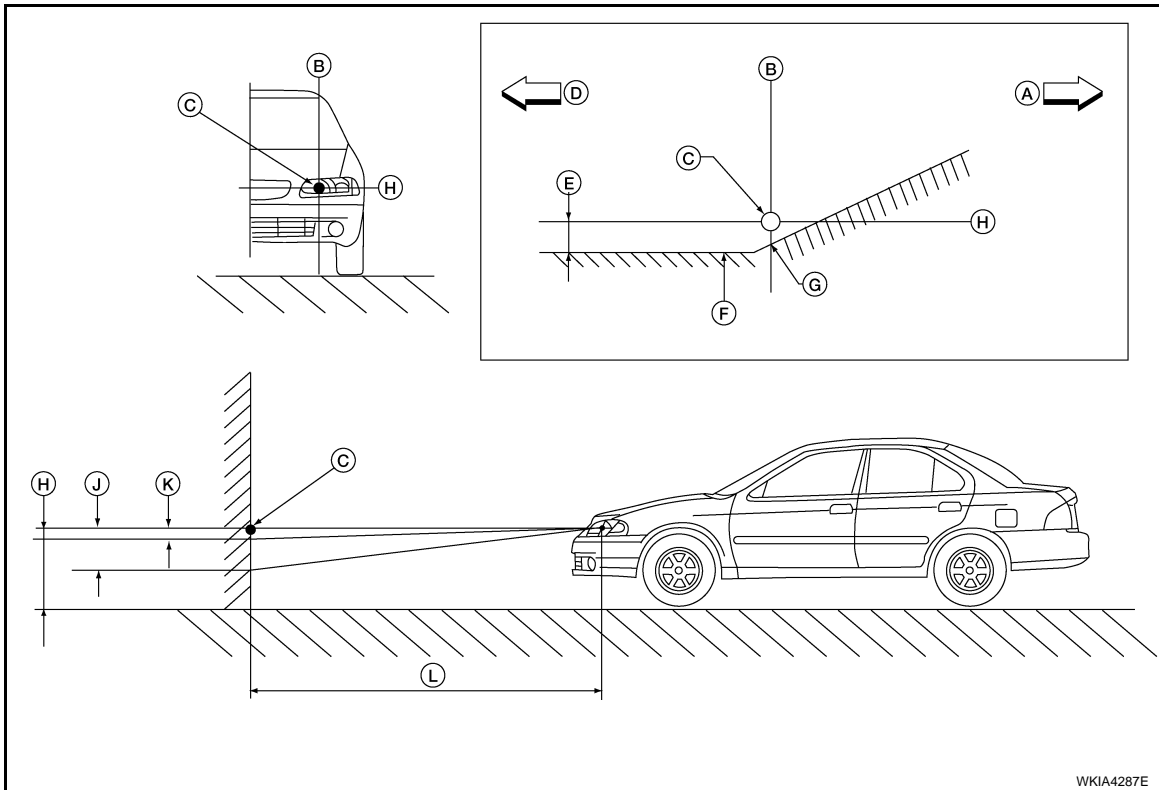

WKIA4287E

- A. Right
- B. Vertical center line of headlamp
- C. Horizontal aiming center line of headlamp
- D. Left
- E. Vertical aiming cutoff point
- F. Cutoff line for vertical aiming evaluation
- G. Acceptable vertical cutoff setting at horizontal aiming point
- H. Horizontal center line of headlamp
- J. Maximum acceptable vertical aiming point
- K. Minimum acceptable vertical aiming point
- L. Aiming distance from center of headlamp to aiming screen 7.62M (25 FT)

- Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.
- For vertical headlamp aiming, adjust headlamp until beam pattern is positioned per specified dimensions.

Description	Halogen Headlamp	Xenon Headlamp
Vertical aiming cutoff point (E)	53.2 mm (2.094 in.)	60 mm (2.362 in.)
Minimum acceptable vertical aiming point (K)	39.9 mm (1.571 in.)	53.2 mm (2.094 in.)
Maximum acceptable vertical aiming point (J)	66.5 mm (1.571 in.)	66.5 mm (1.571 in.)


Bulb Replacement

INFOID:000000001721524

COMPONENTS

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

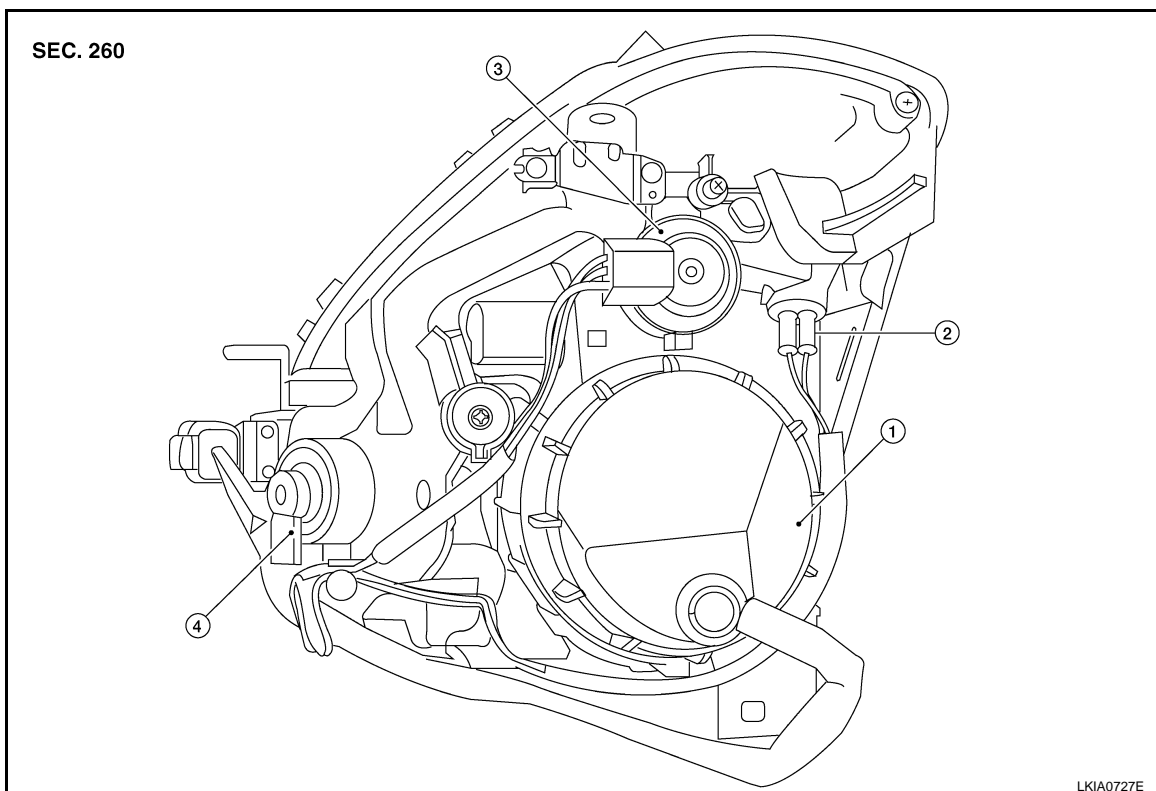

- 1 Headlamp bulb plastic cap
- 2 Front park lamp bulb
- 3 Turn signal lamp bulb
- 4 Cornering lamp bulb

HEADLAMP

Removal

1. Disconnect negative battery cable.
2. Remove air cleaner assembly. Refer to [EM-16](#)
3. Turn headlamp bulb plastic cap counterclockwise and remove plastic cap.
4. Turn igniter counterclockwise and remove from bulb socket (xenon).
5. Disconnect electrical connectors from the bulb terminals (halogen).
6. Unlock retaining springs (xenon).
7. Turn cornering lamp socket counterclockwise and remove bulb.
8. Turn front park turn signal lamp bulb socket counterclockwise and remove bulb.

Installation

Installation is in the reverse order of removal.

CAUTION:

After installing the bulb, be sure to install the plastic cap securely to ensure watertightness.

FRONT TURN SIGNAL LAMP

Removal

1. Remove the combination lamp. Refer to [LT-32, "Removal and Installation"](#).
2. Turn the bulb socket counterclockwise to unlock socket.
3. Pull bulb out of socket.

Installation

Installation is in the reverse order of removal.

CAUTION:

After installing the bulb, be sure to install the bulb socket securely to ensure watertightness.

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P

HEADLAMP (FOR USA)

< SERVICE INFORMATION >


Removal and Installation

INFOID:000000001721525

COMBINATION LAMP

Removal

1. Ensure lighting switch is OFF.
2. Disconnect negative battery cable.
3. Remove the front fascia. Refer to [EI-13](#).
4. Remove the combination lamp bolts.
5. Pull combination lamp toward the front of the vehicle, disconnect connector and remove from vehicle.

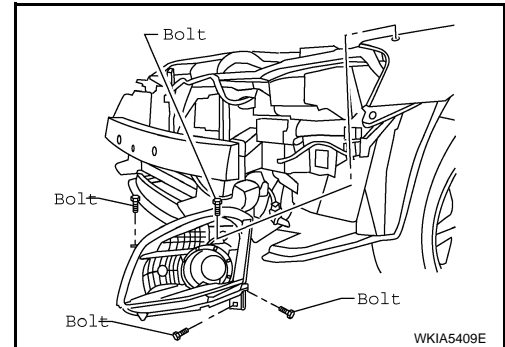

Installation


Installation is in the reverse order of removal.

- Check headlamp aiming adjustment. Refer to [LT-29. "Aiming Adjustment"](#)

Disassembly and Assembly

INFOID:000000001721526

COMBINATION LAMP - XENON TYPE

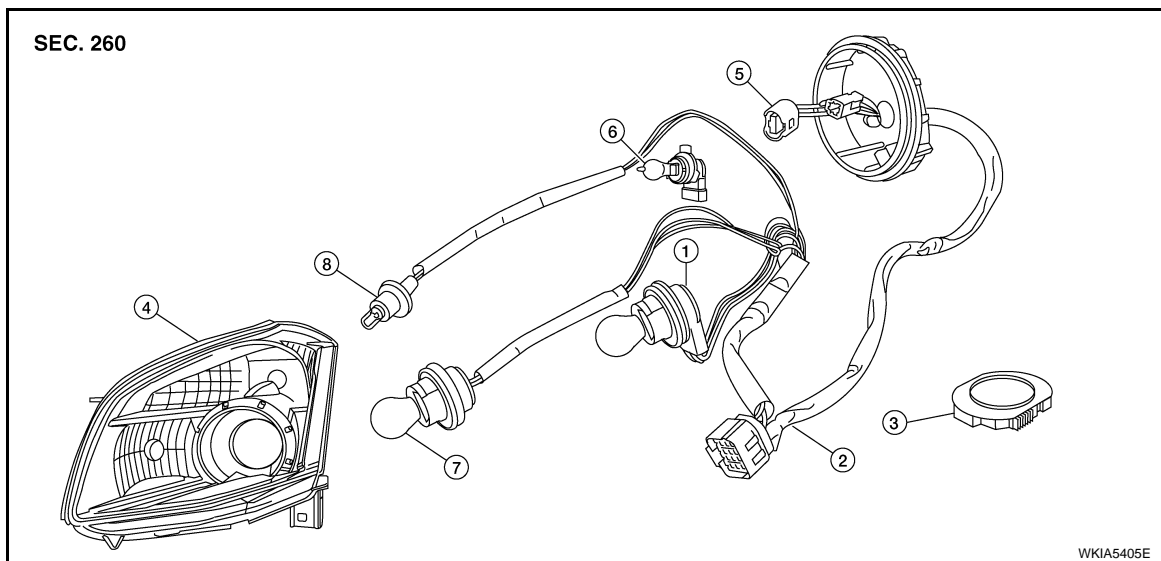

- | | | |
|------------------------|-------------------------|---------------------|
| 1. Cornering lamp bulb | 2. Wiring harness | 3. HID Control Unit |
| 4. Combination lamp | 5. Ignitor | 6. Xenon bulb |
| 7. Turn signal bulb | 8. Front park lamp bulb | |

Disassembly

1. Turn the headlamp bulb plastic cap counterclockwise and remove plastic cap.
2. Turn the xenon bulb socket counterclockwise and remove socket.
3. Turn the cornering lamp socket counterclockwise and remove bulb.
4. Turn the front park/turn signal lamp bulb socket counterclockwise and remove bulb.

Assembly

Assembly is in the reverse order of disassembly.


HEADLAMP (FOR USA)

< SERVICE INFORMATION >

CAUTION:

- After installing the xenon bulb, be sure to install the bulb socket and plastic cap securely to ensure watertightness.

COMBINATION LAMP - HALOGEN TYPE

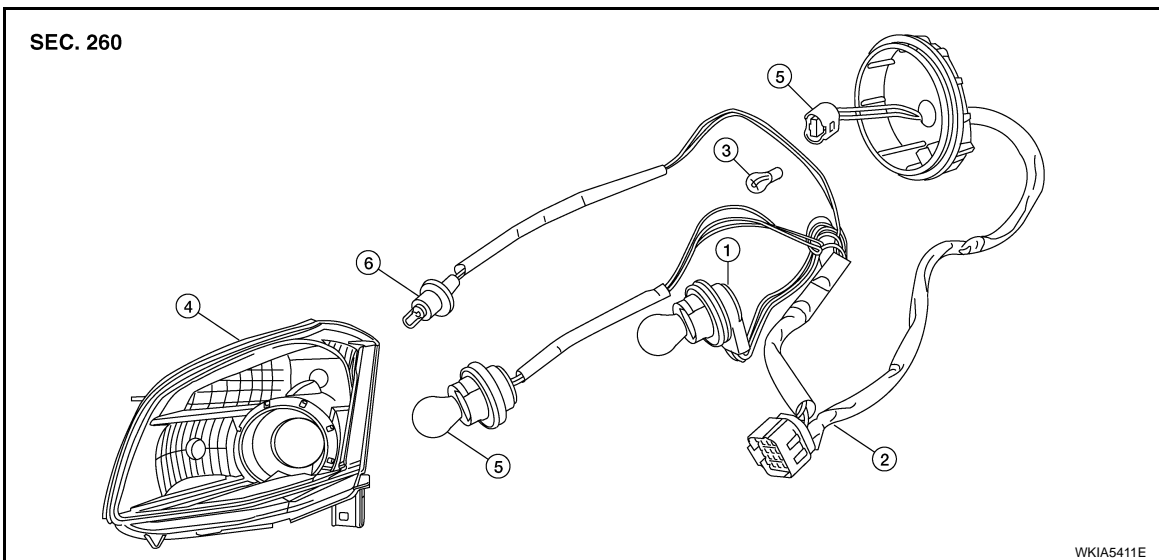

- | | | |
|-------------------------------------|---------------------|-----------------|
| 1. Daytime light bulb (Canada only) | 2. Wiring harness | 3. Halogen bulb |
| 4. Combination lamp | 5. Turn signal bulb | 6. |
| 7. Front park lamp bulb | | |

Disassembly

1. Turn the headlamp bulb plastic cap counterclockwise and remove plastic cap.
2. Disconnect the electrical connectors from the bulb terminals.
3. Turn the halogen lamp bulb socket counterclockwise and remove bulb.
4. Turn the high beam lamp socket counterclockwise and remove bulb.
5. Turn the front turn signal lamp bulb socket counterclockwise and remove bulb.

Assembly

Assembly is in the reverse order of disassembly.

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P


HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Component Parts and Harness Connector Location

INFOID:000000001721527

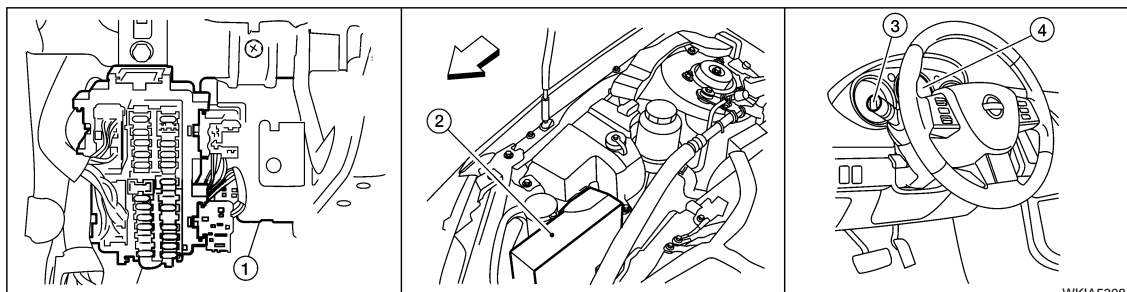

1. BCM M18, and M20 (View with instrument panel removed)
2. Combination switch (lighting switch) M28
3. IPDM E/R E121 and E124
4. Combination meter M24

System Description

INFOID:000000001721528

Daytime light system turns on daytime light lamps while driving. Daytime light lamps are not turned on if engine is activated with parking brake on. Take off parking brake to turn on daytime light lamps. The lamps turn off when lighting switch is in the 2ND position or AUTO position (Headlamp is "ON") and when lighting switch is in the PASSING position. (Daytime light lamps are not turned off only by parking brake itself.) A parking brake signal and engine run or stop signal are sent to BCM (body control module) by CAN communication line.

OUTLINE

Power is supplied at all times

- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 24, and
- through 10A fuse [No. 21, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 50A fusible link (letter f, located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 15A fuses (No. 34, and 41, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 15A fuse (No. 43, located in the IPDM E/R)
- to front fog lamp relay, located in the IPDM E/R.

When the ignition switch is in ON or START position, power is supplied

- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 23, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38, and
- to ignition relay, located in the IPDM E/R.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 6, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to combination meter terminals 10, 11 and 12, and
- to BCM terminal 67
- through grounds M57, M61 and M79.
- to IPDM E/R terminals 38, and 60
- through grounds E15 and E24.

DAYTIME LIGHT OPERATION

With the engine running, the lighting switch in the OFF or 1ST position and parking brake released, power is supplied

- through front fog lamp relay

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

- to front fog lamp LH and RH terminal 1.
Ground is supplied
- to front fog lamp LH and RH terminal 2
through grounds E15 and E24.

With power and ground supplied, the daytime lights illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "System Description"](#).

AUTO LIGHT OPERATION

For auto light operation, refer to [LT-44, "System Description"](#) in AUTO LIGHT SYSTEM.

CAN Communication System Description

Refer to [LAN-3](#).

INFOID:000000001721529


A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

Schematic

INFOID:000000001721530

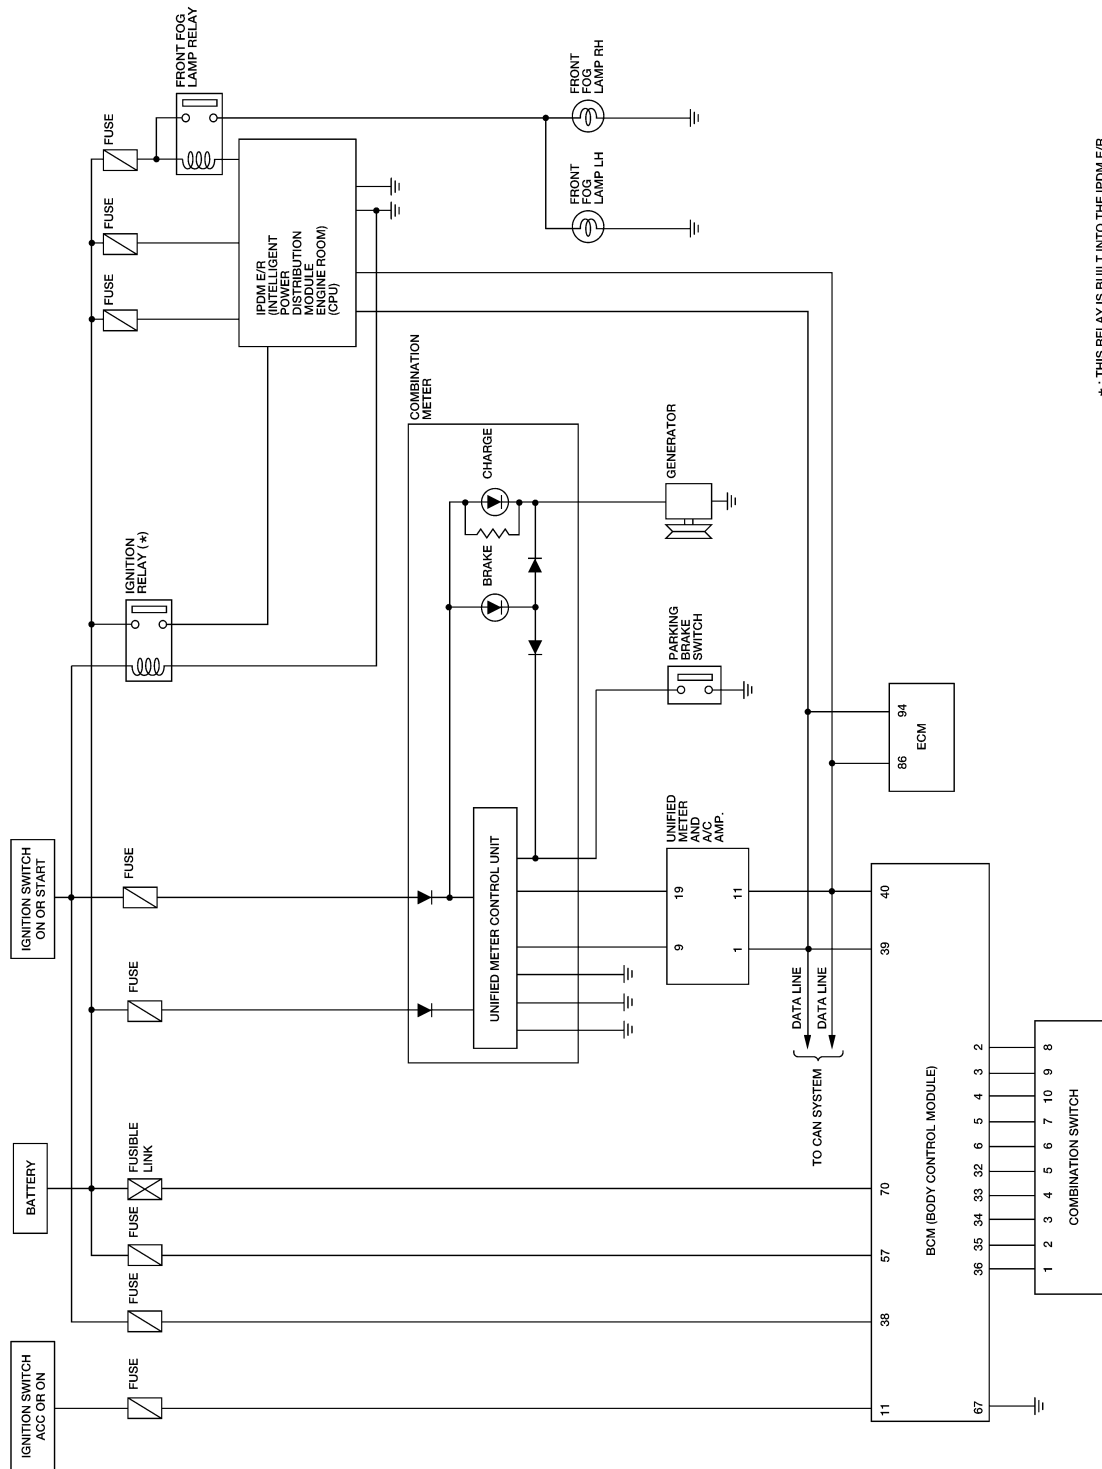

* : THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

WKWA4854E





HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

Wiring Diagram - DTRL -

INFOID:000000001721531

LT-DTRL-01

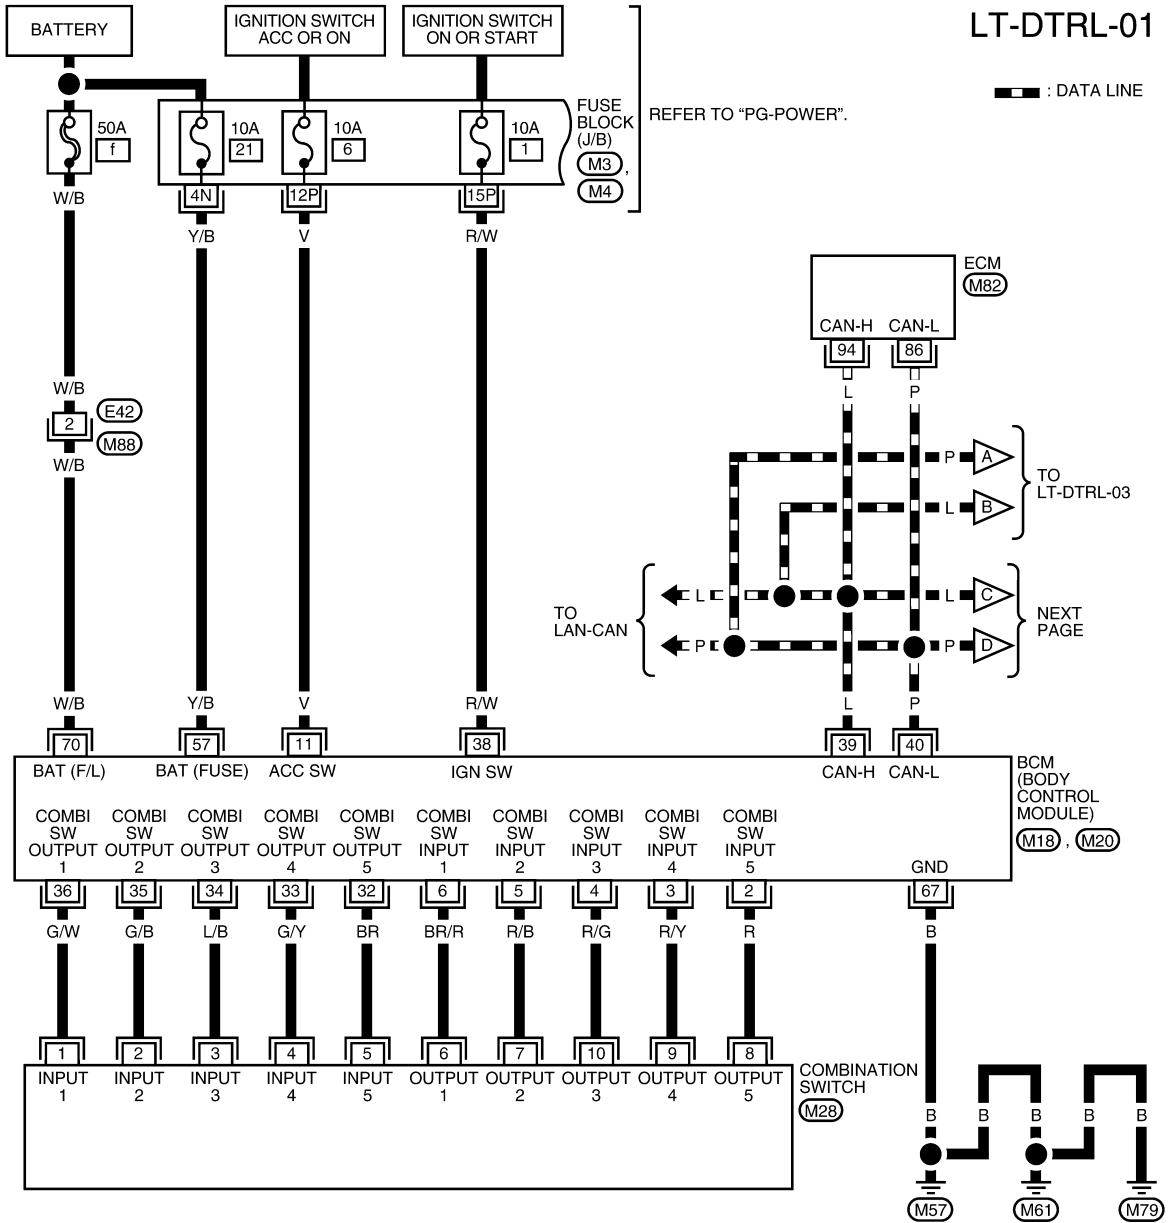

REFER TO THE FOLLOWING.

(M82) - ELECTRICAL UNITS



WKWA4855E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

LT-DTRL-02

— : DATA LINE

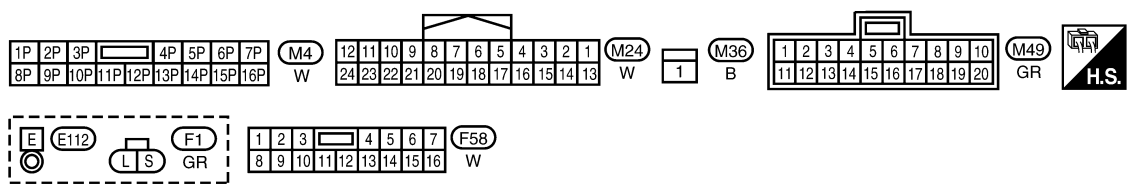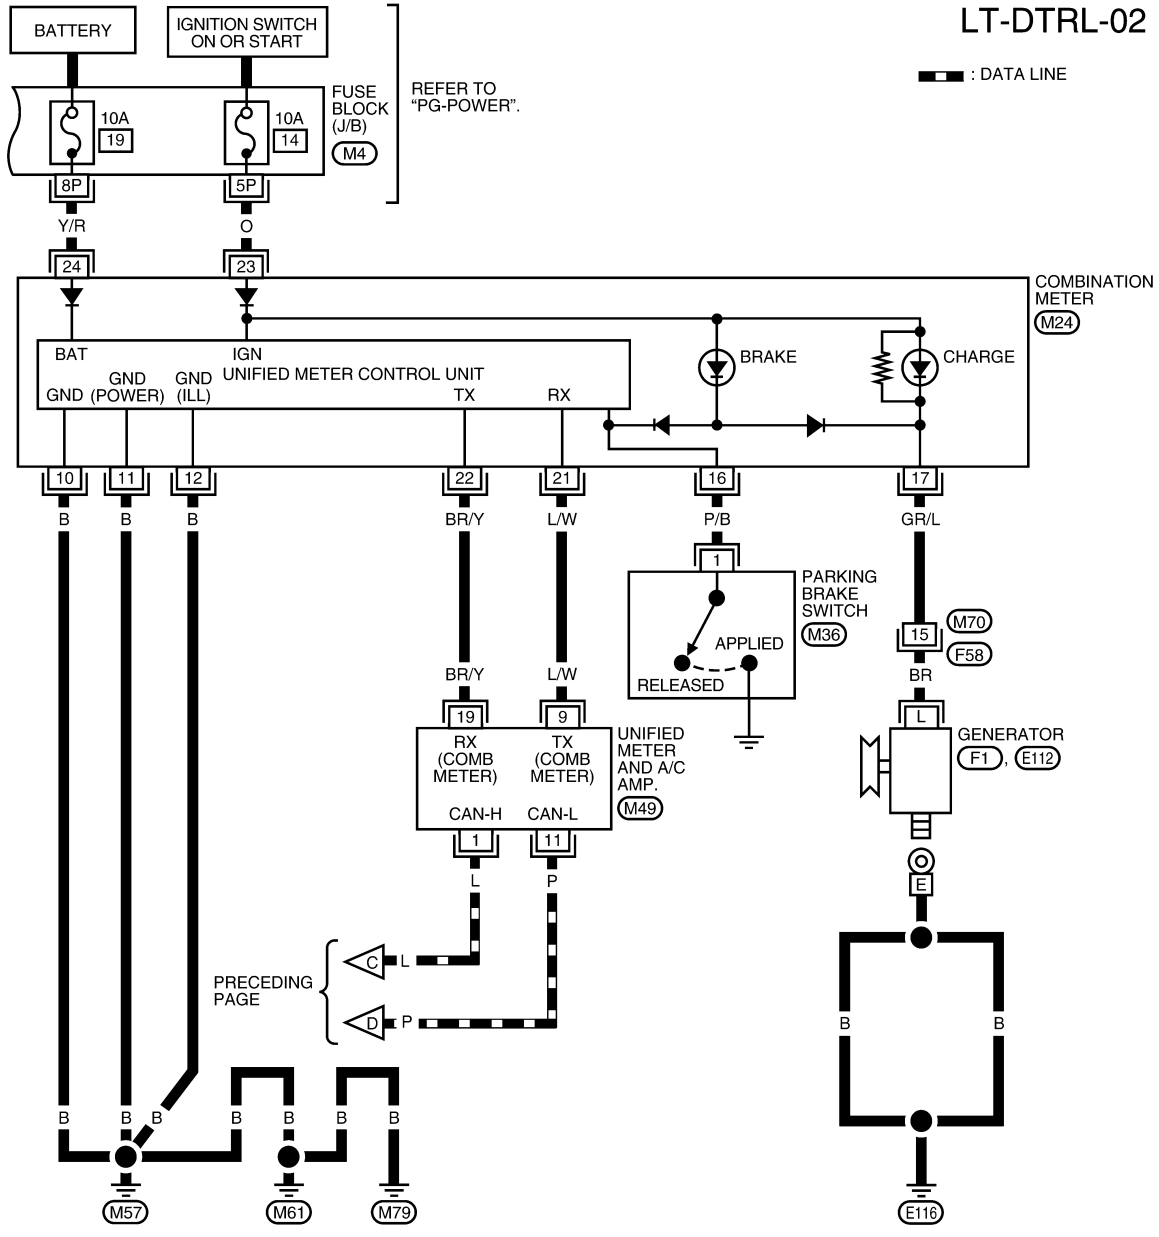



WKWA4856E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

LT-DTRL-03

— : DATA LINE

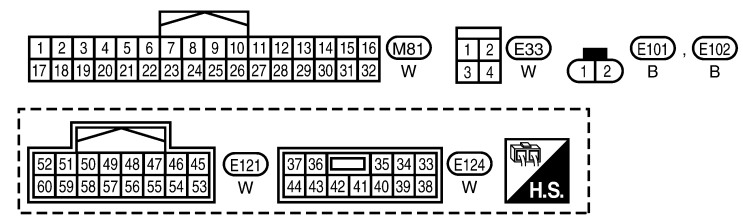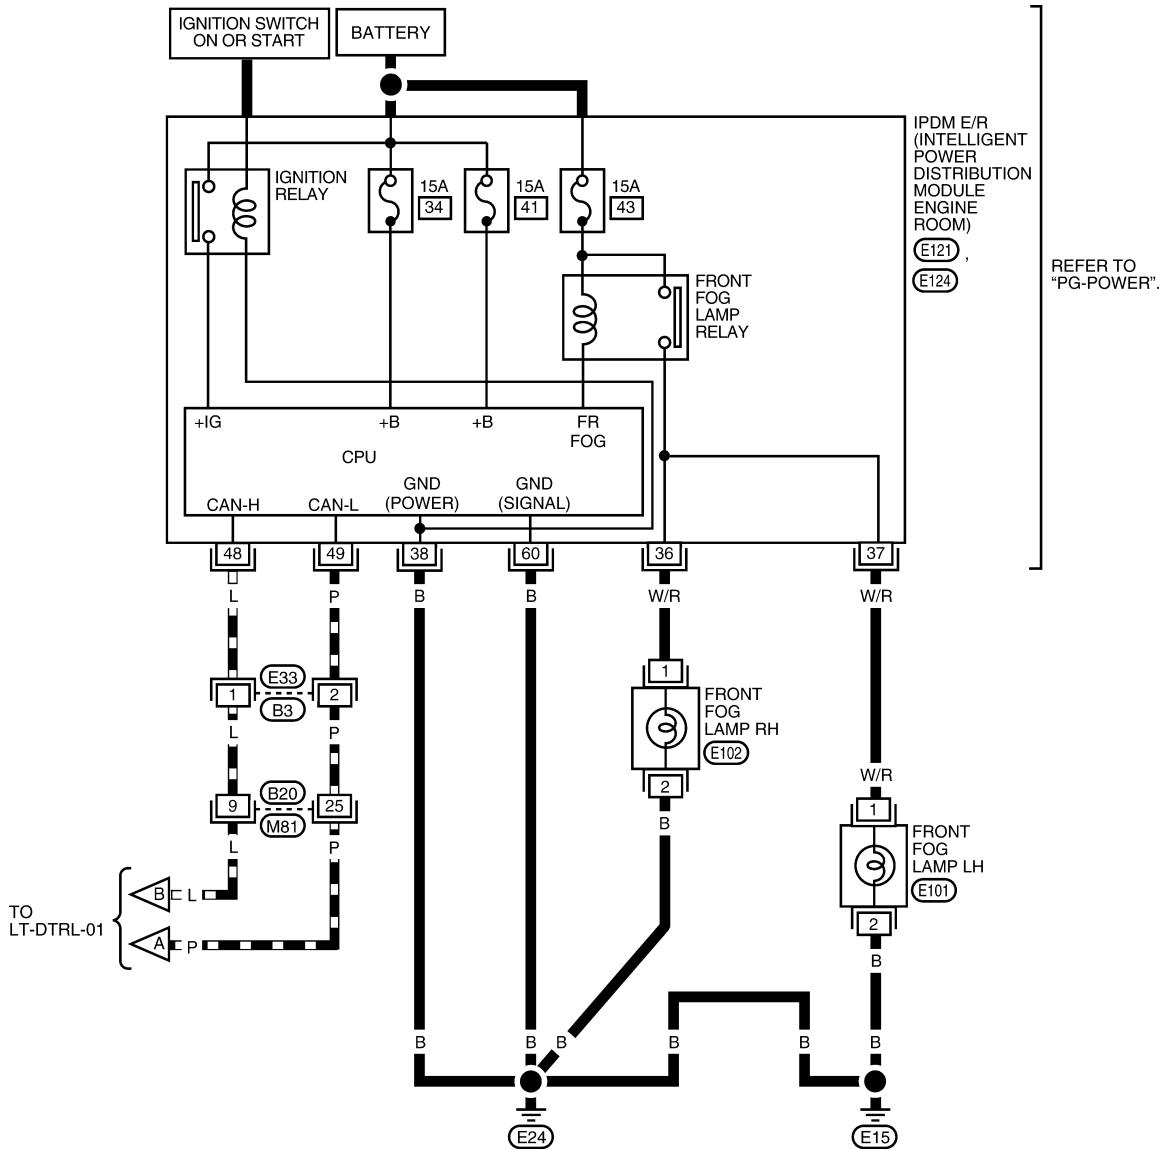

Terminal and Reference Value for BCM

Refer to [BCS-11, "Terminal and Reference Value for BCM"](#).

How to Proceed with Trouble Diagnosis

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-34, "System Description"](#).

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

3. Perform the Preliminary Check. Refer to [LT-40, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

INFOID:000000001721534

CHECK BCM CONFIGURATION

1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "DTRL" is set to "WITH". Refer to [BCS-17, "Configuration"](#).

OK or NG

- OK >> Continue preliminary check. Refer to "INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT".
- NG >> Change BCM configuration for "DTRL" to "WITH". Refer to [BCS-17, "Configuration"](#).

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-15, "BCM Power Supply and Ground Circuit Inspection"](#).

INSPECTION PARKING BRAKE SWITCH CIRCUIT

1. CHECK BRAKE INDICATOR

1. Turn ignition switch ON.
2. Apply parking brake.
3. Release parking brake.

Brake indicator in combination meter should illuminate when parking brake is applied and turn OFF when released.

OK or NG

- OK >> Inspection End.
- NG >> GO TO 2.


2. CHECK PARKING BRAKE SWITCH SIGNAL

1. Turn ignition switch OFF.
2. Disconnect parking brake switch connector.
3. Turn ignition switch ON.
4. Check voltage between parking brake switch harness connector M36 terminal 1 and ground.

1 - Ground : Battery voltage should exist.

OK or NG

- OK >> Replace parking brake switch.
- NG >> GO TO 3.

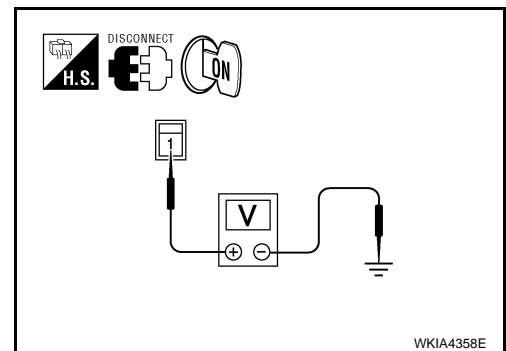

WKIA4358E


3. CHECK PARKING BRAKE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between combination meter harness connector M24 (A) terminal 16 and parking brake switch harness connector M36 (B) terminal 1.

1 - 16 : Continuity should exist.

OK or NG

- OK >> Replace combination meter. Refer to [DI-24, "Combination Meter"](#).

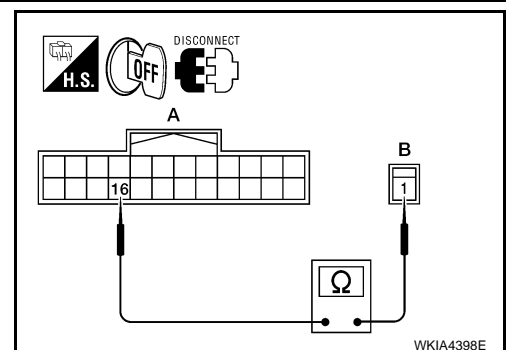

WKIA4398E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

NG >> Repair harness or connector.

CONSULT-III Function (BCM)

INFOID:000000001721535

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

DATA MONITOR

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays status of the front door RH as judged from the front door switch RH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RR "ON/OFF"	Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RL "ON/OFF"	Displays status of the rear door as judged from the rear door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW "ON/OFF"	Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
ENGINE RUN "ON/OFF"	Displays status (Engine running: ON/Others: OFF) as judged from engine status signal.

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

Monitor item	Contents
PKB SW "ON/OFF"	Displays status (Parking brake switch: ON/Others: OFF) as judged from parking brake switch signal.
OPTICAL SENSOR [0 - 5V]	Displays "ambient light (close to 5V when light/close to 0V when dark)" judged from optical sensor signal.

ACTIVE TEST

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay (HI, LO) to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
DTRL	Allow day time light lamp operate by switching ON-OFF.
CORNERING LAMP	Allows cornering lamp relay (RH, LH) to operate by switching ON-OFF.

SELF-DIAGNOSTIC RESULTS

Display Item List

Monitored item	CONSULT-III display	Description
CAN communication	CAN communication [U1000]	Malfuction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfuction is detected in CAN system.
Combination switch	Diagnosis 1 - 5 systems open circuit	Malfuction is detected in combination switch system.

Daytime Light Control Does Not Operate Properly

INFOID:000000001721536

1. CHECK FRONT FOG LAMP OPERATION

Activate front fog lamps from front fog lamp switch.

Do the front fog lamps operate normally?

OK >> GO TO 2.

NG >> Refer to [LT-56](#).

2. CHECK INPUT SIGNALS

1. Start engine.
2. Select "BCM" on CONSULT-III. With "HEAD LAMP" data monitor, make sure that "ENGINE RUN" turns ON-OFF linked with the operation of the engine running or stopped.

Engine running : ENGINE RUN ON

Engine stop : ENGINE RUN OFF

3. Select "BCM" on CONSULT-III. With "HEAD LAMP" data monitor, make sure that "PKB SW" turns ON-OFF linked with the operation of the parking brake switch.

Parking brake ON : PKB SW ON

Parking brake OFF : PKB SW OFF

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).

NG >> GO TO 3.

3. CHECKING CAN COMMUNICATIONS

Select "BCM" on CONSULT-III and perform self-diagnosis for BCM.

Displayed self-diagnosis results

NO DTC>> Replace BCM. Refer to [BCS-18, "BCM"](#).

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

CAN COMM CIRCUIT>> Check BCM CAN communication system. Refer to [BCS-17, "CAN Communication Inspection Using CONSULT-III \(Self-Diagnosis\)"](#).

Aiming Adjustment

INFOID:000000001721537

HEADLAMP

Refer to [LT-29, "Aiming Adjustment"](#).

Bulb Replacement

INFOID:000000001721538

HEADLAMP

Refer to [LT-30, "Bulb Replacement"](#).

Removal and Installation

INFOID:000000001721539

COMBINATION LAMP

Refer to [LT-32, "Removal and Installation"](#).

Disassembly and Assembly

INFOID:000000001721540

COMBINATION LAMP

Refer to [LT-32, "Disassembly and Assembly"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

LT


AUTO LIGHT SYSTEM

< SERVICE INFORMATION >

AUTO LIGHT SYSTEM

Component Parts and Harness Connector Location

INFOID:000000001721541

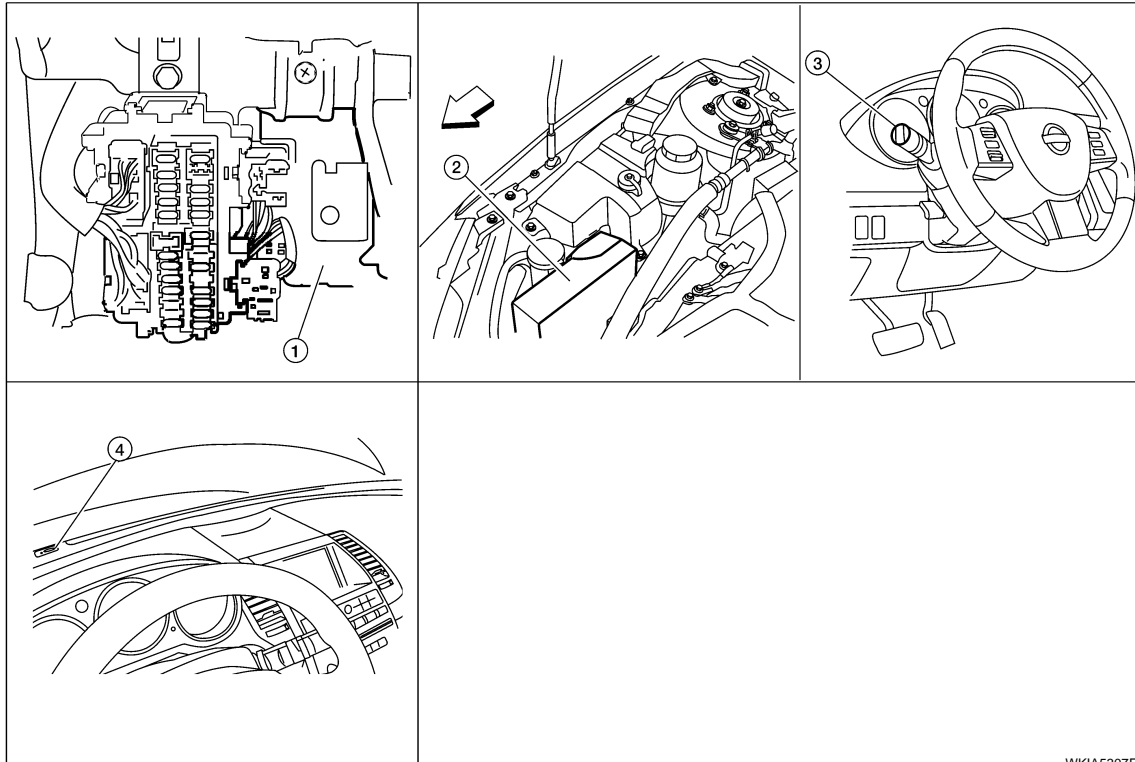

WKIA5307E

1. BCM M18, and M20 (View with instrument panel removed)
2. IPDM E/R E121, E122, and E124
3. Combination switch (lighting switch) M28
4. Optical sensor M15

System Description

INFOID:000000001721542

Automatically turns on/off the parking lamps and the headlamps in accordance with ambient light. Timing for when the lamps turn on/off can be selected using four modes.

OUTLINE

The auto light control system uses an optical sensor that detects outside brightness.

When the lighting switch is in "AUTO" position, it automatically turns on/off the parking lamps and the headlamps in accordance with the ambient light. Sensitivity can be adjusted in four steps. For the details of the setting, refer to [LT-50. "Preliminary Check"](#).

Optical sensor, power is supplied

- through BCM (body control module) terminal 17
- to optical sensor terminal 1.

Optical sensor, ground is supplied

- through BCM terminal 18
- to optical sensor terminal 3.

When ignition switch is turned to "ON" position and when outside brightness is darker than prescribed level, input is supplied

- to BCM terminal 14
- through optical sensor terminal 2.

The headlamps will then illuminate. For a description of headlamp operation, refer to [LT-5. "System Description"](#).

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3. "System Description"](#).

AUTO LIGHT SYSTEM

< SERVICE INFORMATION >

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the AUTO position, the ignition switch is turned from ON or ACC to OFF, and one of the front doors is opened, the battery saver control feature is activated. Under this condition, the headlamps remain illuminated for 5 minutes, then the headlamps are turned off. Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

DELAY TIMER FUNCTION

When the ignition switch is ON and auto light switch is ON, the BCM turns on/off the headlamps. In delay timer function, ignition is OFF, auto light sensor power source is OFF and the headlamps are not turned on/off by the BCM. On condition that:

- when the state of ignition switch ON or ACC is ON and output judgment by auto light function is headlamp ON changes to ignition switch and ACC are OFF and any door switch is ON, output judgment by BCM should be headlamp ON for 5 minutes by timer. After time out, output judgment by BCM should be headlamp OFF.
- when the state of any door switch is turned to ON from OFF while 45 second or 5 minute timer is counting, timer stops, and restarts counting for 5 minutes, then BCM judges output as headlamp ON. After time out, BCM judges output as headlamp OFF.
- when the state of front door switch LH, front door switch RH, rear door switch LH, rear door switch RH or back door latch (door ajar switch) is ON turns to all door switches are OFF while 45 second or 5 minute timer is counting, timer stops, and restarts counting for 45 seconds, then BCM judges output as headlamp ON. After timer out, BCM judges output as headlamp OFF.
- when the state is ignition switch ON or ACC is ON or auto light switch OFF while timer is counting, timer stops counting and BCM turns on/off lamps according to headlamp function, front fog lamp function, auto light function and headlamp battery save function.

Delay timer control mode can be changed by the function setting of CONSULT-III.

CAN Communication System Description

INFOID:000000001721543

Refer to [LAN-3](#).

Major Component and Functions

INFOID:000000001721544


Components	Functions
BCM	• Turns on/off circuits of tail light and headlamp according to signals from light sensor, lighting switch (AUTO), front door switch LH, front door switch RH, rear door switch, and ignition switch (ON, OFF).
Optical sensor	• Converts ambient light (lux) to voltage and sends it to BCM. (Detects lightness of 50 to 1,300 lux)

AUTO LIGHT SYSTEM

< SERVICE INFORMATION >

Schematic

INFOID:000000001721545

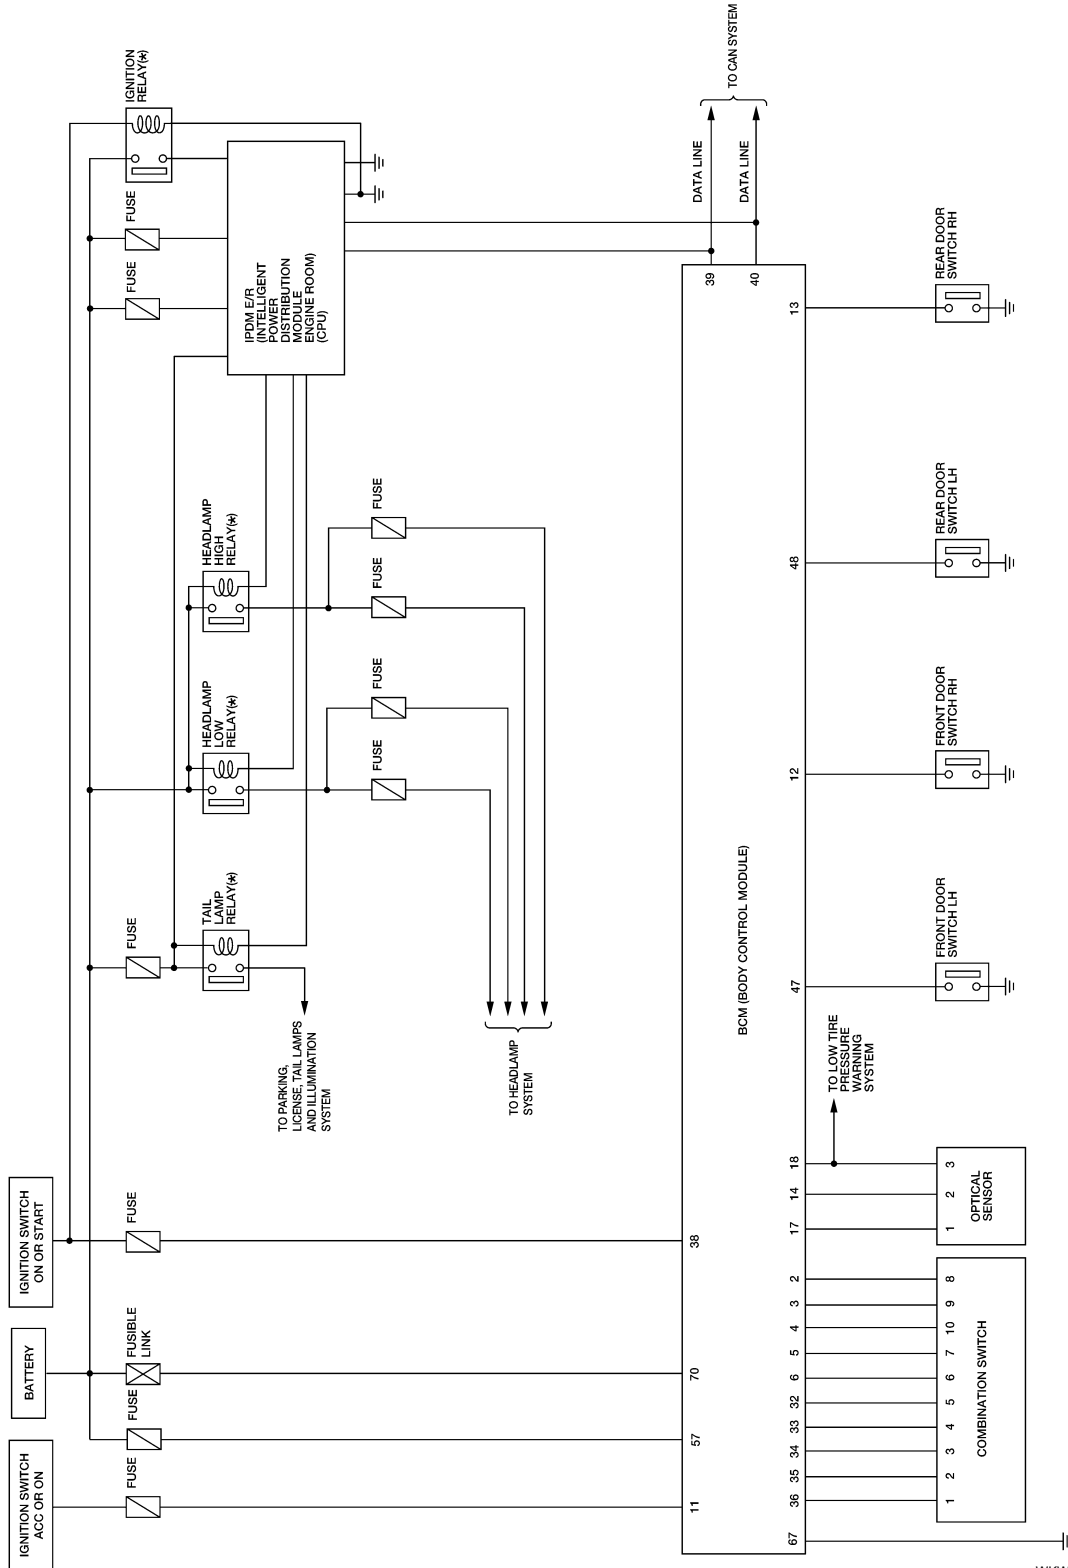

* : THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM).

WKWA4858E



AUTO LIGHT SYSTEM

< SERVICE INFORMATION >

Wiring Diagram - AUTO/L -

INFOID:000000001721546

LT-AUTO/L-01

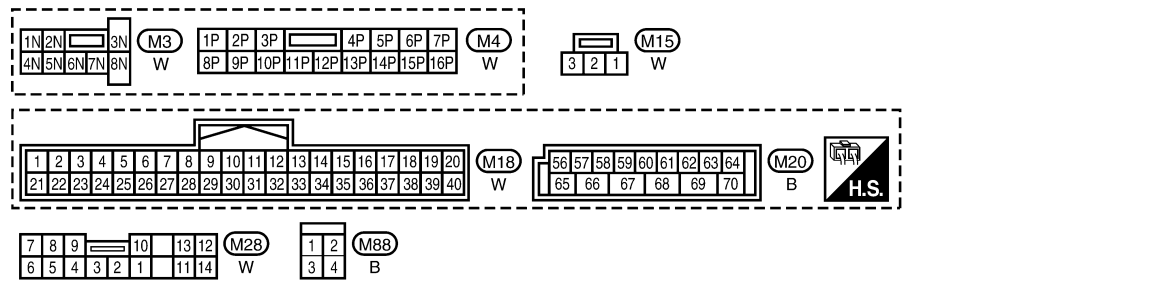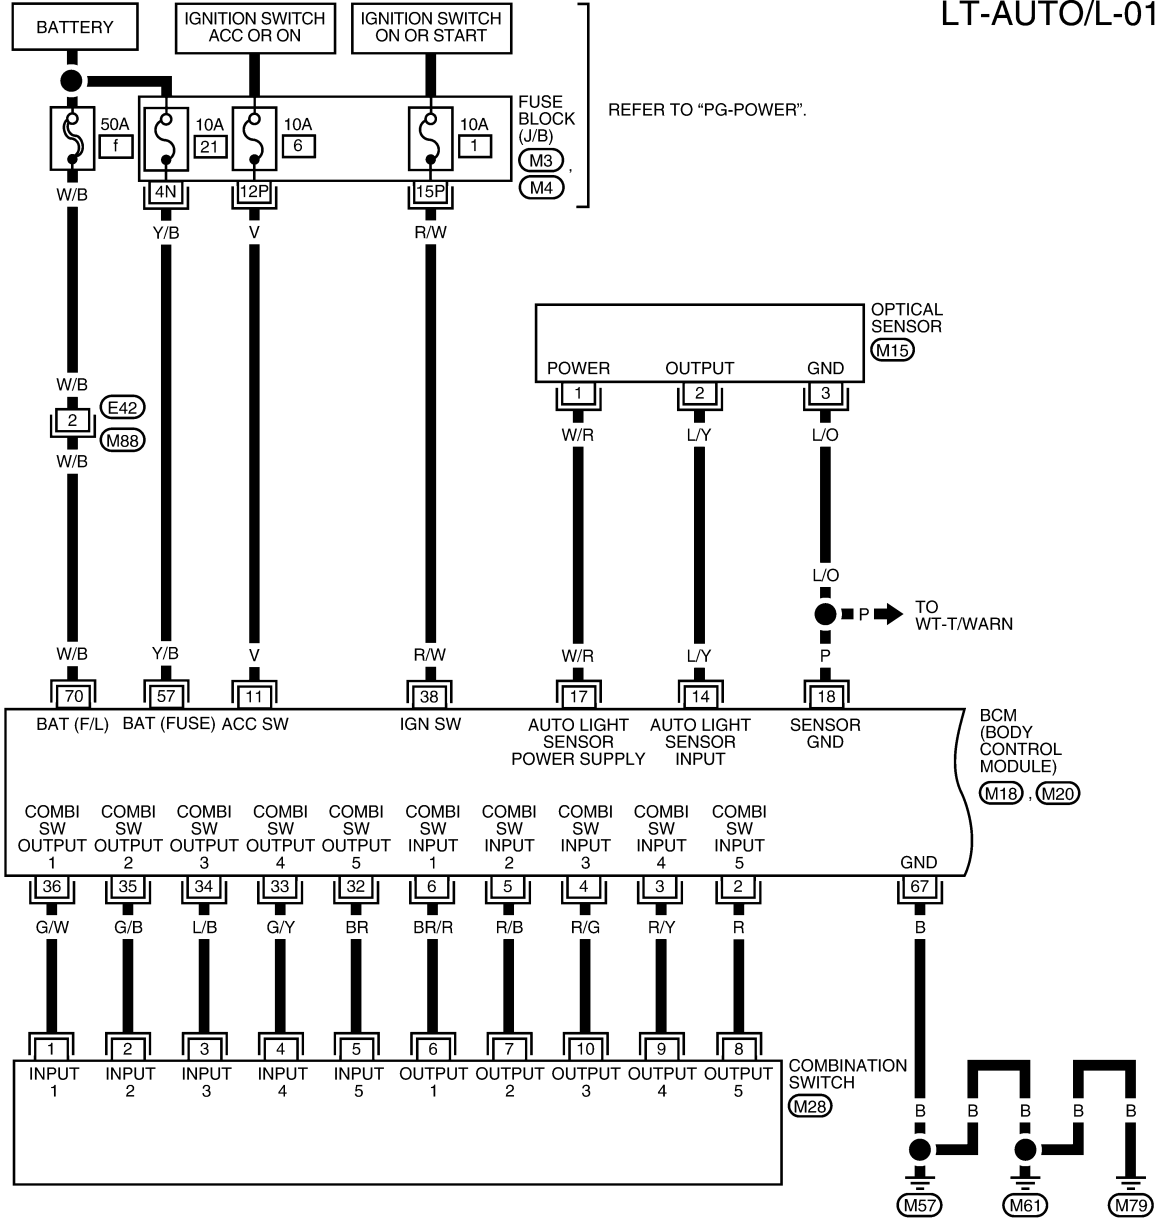





WKWA4859E

AUTO LIGHT SYSTEM

< SERVICE INFORMATION >

LT-AUTO/L-02

— : DATA LINE

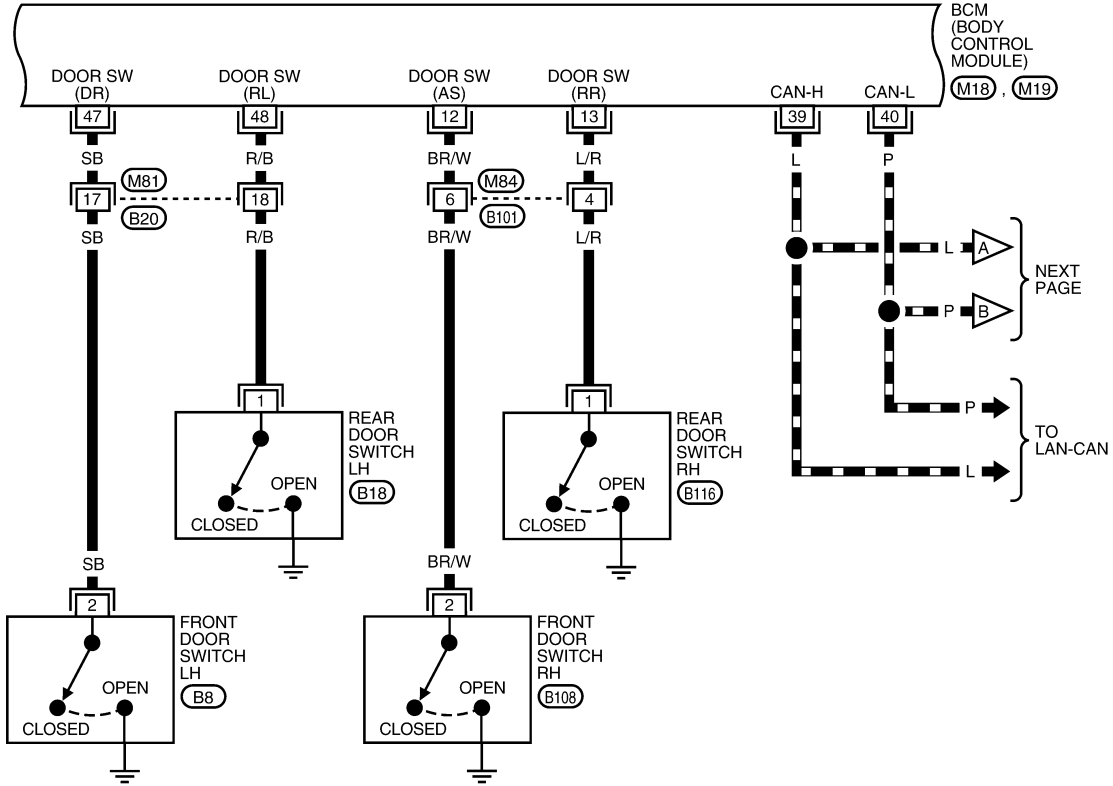



WKWA4860E

AUTO LIGHT SYSTEM

< SERVICE INFORMATION >

LT-AUTO/L-03

— : DATA LINE

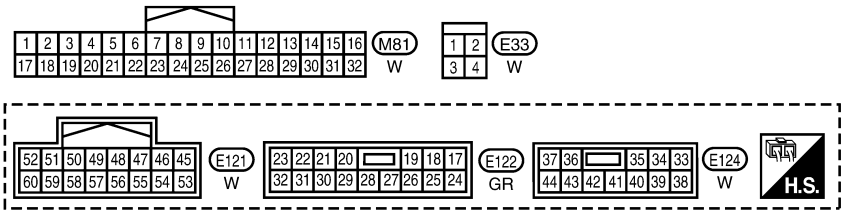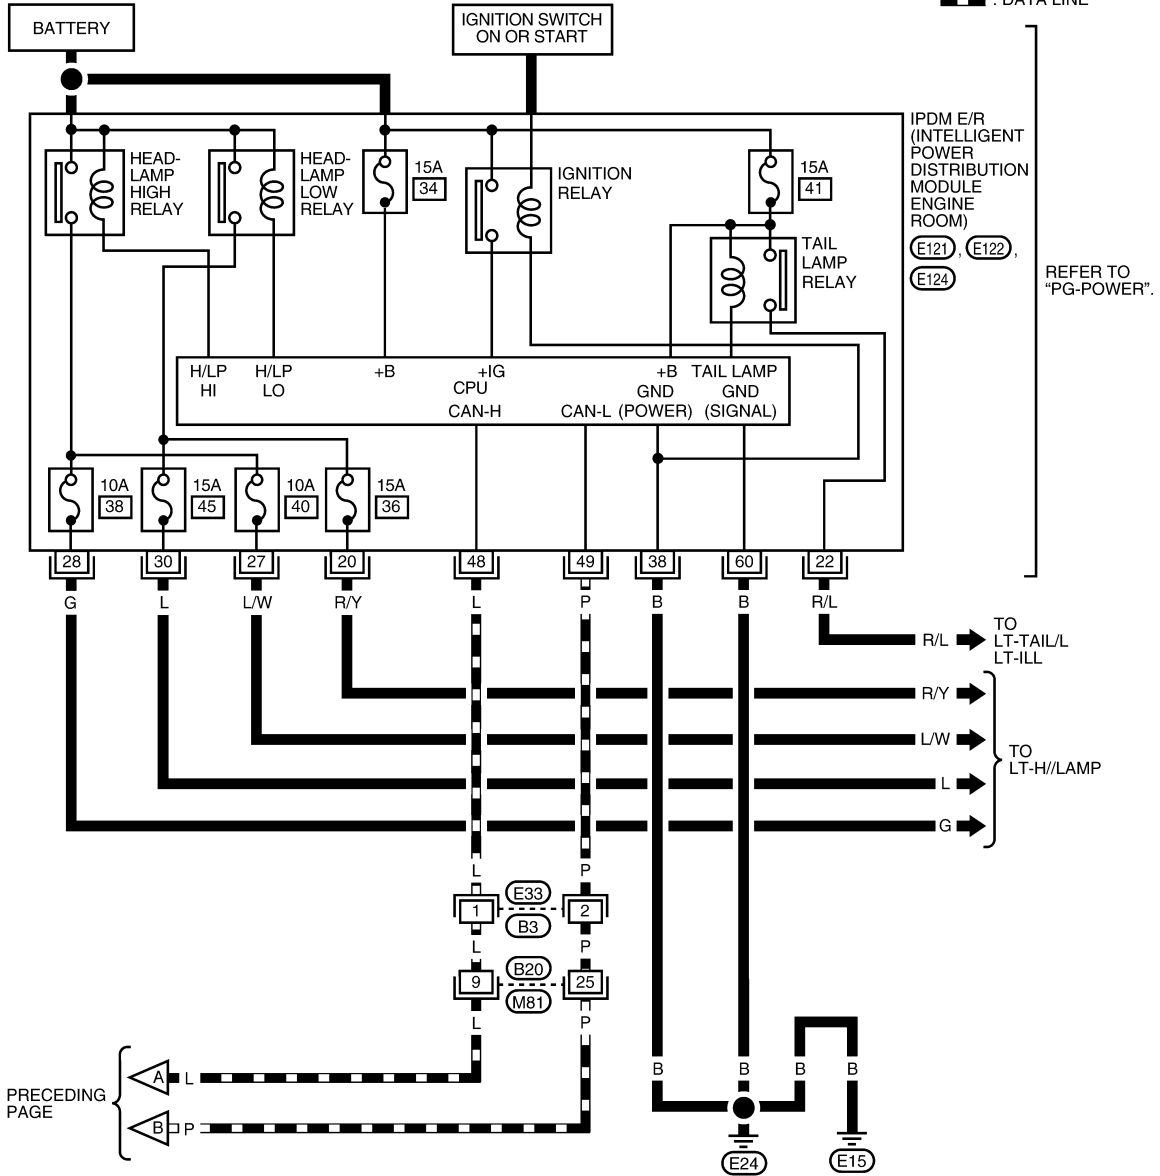

Terminal and Reference Value for BCM

Refer to [BCS-11, "Terminal and Reference Value for BCM"](#).

Terminal and Reference Value for IPDM E/R

Refer to [PG-25, "Terminal and Reference Value for IPDM E/R"](#).

WKWA4861E

INFOID:000000001721547

INFOID:000000001721548

AUTO LIGHT SYSTEM

< SERVICE INFORMATION >

How to Proceed with Trouble Diagnosis

INFOID:000000001721549

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-44, "System Description"](#).
3. Carry out the Preliminary Check. Refer to [LT-50, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction. Refer to [LT-52, "Trouble Diagnosis Chart by Symptom"](#).
5. Does the auto light system operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

INFOID:000000001721550

SETTING CHANGE FUNCTIONS

- Sensitivity of auto light system can be adjusted using CONSULT-III. Refer to [LT-50, "CONSULT-III Function \(BCM\)"](#).

CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-15, "BCM Power Supply and Ground Circuit Inspection"](#).

CONSULT-III Function (BCM)

INFOID:000000001721551

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

WORK SUPPORT

Work Support Setting Item

Sensitivity of auto light can be selected and set from four modes.

Work item	Description
CUSTOM A/LIGHT SETTING	Auto light sensitivity can be changed in this mode. Sensitivity can be adjusted in four modes. <ul style="list-style-type: none">• MODE 1 (Normal)/ MODE 2 (Sensitive)/MODE 3 (Desensitized)/MODE4 (Insensitive)
ILL DELAY SET	Auto light delay off timer period can be changed in this mode. Selects auto light delay off timer period among eight modes. <ul style="list-style-type: none">• MODE 1 (45 sec.)/MODE 2 (OFF)/MODE 3 (30 sec.)/MODE 4 (60 sec.)/MODE 5 (90 sec.)/MODE 6 (120 sec.)/MODE 7 (150 sec.)/MODE 8 (180 sec.)

DATA MONITOR

Display Item List

Monitor item	Contents
IGN ON SW	"ON/OFF" Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW	"ON/OFF" Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.

AUTO LIGHT SYSTEM

< SERVICE INFORMATION >

Monitor item	Contents
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays status of the front door RH as judged from the front door switch RH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RR "ON/OFF"	Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RL "ON/OFF"	Displays status of the rear door as judged from the rear door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW "ON/OFF"	Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
ENGINE RUN ^{Note 1} "ON/OFF"	Displays status (Engine running: ON/Others: OFF) as judged from engine status signal.
PKB SW ^{Note 1} "ON/OFF"	Displays status (Parking brake switch: ON/Others: OFF) as judged from parking brake switch signal.
OPTICAL SENSOR [0 - 5V]	Displays "ambient light (close to 5V when light/close to 0V when dark)" judged from optical sensor signal.

NOTE 1: Vehicles without daytime light system may display this item, but cannot monitor it.

ACTIVE TEST

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay (HI, LO) to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
DTRL ^{Note 1}	Allow daytime light lamp operate by switching ON-OFF.
CORNERING LAMP	Allows cornering lamp relay (RH, LH) to operate by switching ON-OFF.

NOTE 1: Vehicles without daytime light system may display this item, but cannot monitor it.

SELF-DIAGNOSTIC RESULTS

Display Item List

Monitored item	CONSULT-III display	Description
CAN communication	CAN communication [U1000]	Malfunction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfunction is detected in CAN system.

AUTO LIGHT SYSTEM

< SERVICE INFORMATION >

CONSULT-III Function (IPDM E/R)

INFOID:000000001721552

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

IPDM E/R diagnostic Mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

DATA MONITOR

Display Item List

Item name	CONSULT-III screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Parking, license plate and tail lamps request	TAIL&CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Cornering lamp	CRNRNG LMP REQ	ON/OFF	×	-	×	Signal status input from BCM
Front fog lamps request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Test item	CONSULT-III screen display	Description
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI, LO) at your option (Headlamp high beam repeats ON-OFF every 1 second).
Front fog lamp relay output		Allows fog lamp relay to operate by switching operation ON-OFF at your option.
Cornering lamp relay (RH, LH) output	CORNERING LAMP	Allows cornering lamp relay (RH, LH) to operate by switching operation ON-OFF at your option.

Trouble Diagnosis Chart by Symptom

INFOID:000000001721553

Trouble phenomenon	Malfunction system and reference
<ul style="list-style-type: none"> Parking lamps and headlamps will not illuminate when outside of the vehicle becomes dark. (Lighting switch 1st position and 2nd position operate normally.) Parking lamps and headlamp will not go out when outside of the vehicle becomes light. (Lighting switch 1st position and 2nd position operate normally.) Headlamps go out when outside of the vehicle becomes light, but parking lamps stay on. 	<ul style="list-style-type: none"> Refer to LT-50. "CONSULT-III Function (BCM)". Refer to LT-53. "Lighting Switch Inspection". Refer to LT-53. "Optical Sensor System Inspection". <p>If above systems are normal, replace BCM. Refer to BCS-18. "BCM".</p>
Parking lamps illuminate when outside of the vehicle becomes dark, but headlamps stay off. (Lighting switch 1st position and 2nd position operate normally.)	<ul style="list-style-type: none"> Refer to LT-50. "CONSULT-III Function (BCM)". Refer to LT-53. "Optical Sensor System Inspection". <p>If above systems are normal, replace BCM. Refer to BCS-18. "BCM".</p>

AUTO LIGHT SYSTEM

< SERVICE INFORMATION >

Trouble phenomenon	Malfunction system and reference
Auto light adjustment system will not operate. (Lighting switch AUTO, 1st position and 2nd position operate normally.)	<ul style="list-style-type: none">Refer to LT-53, "Optical Sensor System Inspection". If above system is normal, replace BCM. Refer to BCS-18, "BCM".
Auto light adjustment system of combination meter will not operate.	<ul style="list-style-type: none">CAN communication line inspection between BCM and combination meter. Refer to BCS-17, "CAN Communication Inspection Using CONSULT-III (Self-Diagnosis)".
Shut off delay feature will not operate.	<ul style="list-style-type: none">CAN communication line inspection between BCM and combination meter. Refer to BCS-17, "CAN Communication Inspection Using CONSULT-III (Self-Diagnosis)".Refer to BL-26, "Door Switch Check". If above system is normal, replace BCM. Refer to BCS-18, "BCM".

Lighting Switch Inspection

INFOID:000000001721554

1. CHECK LIGHTING SWITCH INPUT SIGNAL

☑ With CONSULT-III

Select "BCM" on CONSULT-III. With "HEAD LAMP" data monitor, make sure "AUTO LIGHT SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in AUTO position : AUTO LIGHT SW ON

☒ Without CONSULT-III

Refer to [LT-89, "Combination Switch Inspection"](#).

OK or NG

OK >> Inspection End.

NG >> Check lighting switch. Refer to [LT-89, "Combination Switch Inspection"](#).

Optical Sensor System Inspection

INFOID:000000001721555

1. CHECK OPTICAL SENSOR INPUT SIGNAL

☑ With CONSULT-III

Select "BCM" on CONSULT-III. With "OPTICAL SENSOR" data monitor, make sure "OPTICAL SENSOR", check difference in the voltage when the optical sensor is illuminated and not illuminated.

Illuminated

OPTICAL SENSOR : 3.1V or more

Not illuminated

OPTICAL SENSOR : 0.6V or less

NOTE:

Optical sensor must be completely subjected to work lamp light. If the optical sensor is insufficiently illuminated, the measured value may not satisfy the standard.

☒ Without CONSULT-III

OK or NG

OK >> Inspection End.

NG >> GO TO 2.

2. CHECK OPTICAL SENSOR POWER SUPPLY CIRCUIT

AUTO LIGHT SYSTEM


< SERVICE INFORMATION >

1. Turn ignition switch OFF.
2. Disconnect BCM connector and optical sensor connector.
3. Check continuity (open circuit) between BCM harness connector M18 terminal 17 and optical sensor harness connector M15 terminal 1.

17 - 1 : Continuity should exist.

4. Check continuity (short circuit) between BCM harness connector M18 terminal 17 and ground.

17 - Ground : Continuity should not exist.

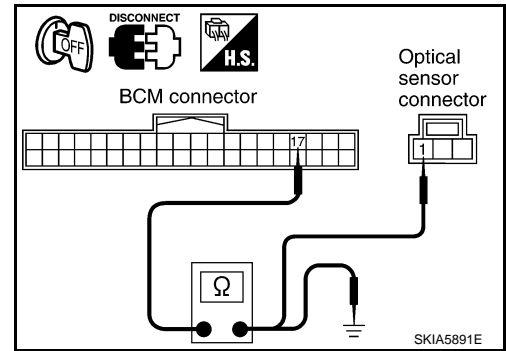

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.


3. CHECK OPTICAL SENSOR POWER SUPPLY CIRCUIT

1. Check continuity (open circuit) between BCM harness connector M18 terminal 14 and optical sensor harness connector M15 terminal 2.

14 - 2 : Continuity should exist.

2. Check continuity (short circuit) between BCM harness connector M18 terminal 14 and ground.

14 - Ground : Continuity should not exist.

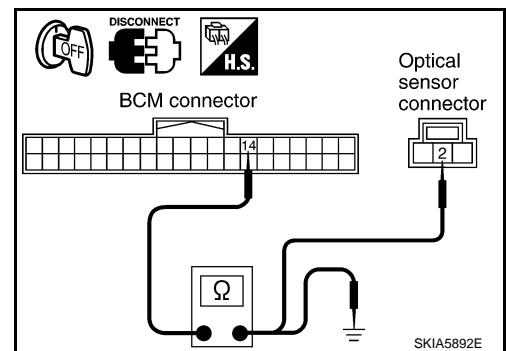

OK or NG

- OK >> GO TO 4.
- NG >> Repair harness or connector.


4. CHECK OPTICAL SENSOR POWER SUPPLY CIRCUIT

1. Check continuity (open circuit) between BCM harness connector M18 terminal 18 and optical sensor harness connector M15 terminal 3.

18 - 3 : Continuity should exist.

2. Check continuity (short circuit) between BCM harness connector M18 terminal 18 and ground.

18 - Ground : Continuity should not exist.

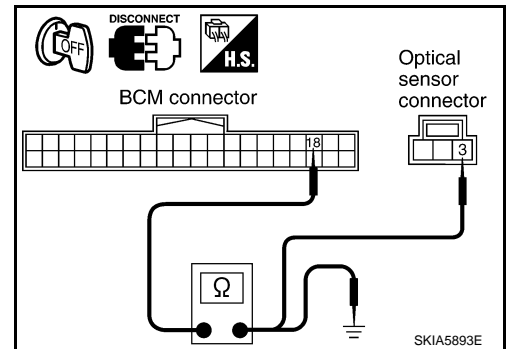

OK or NG

- OK >> GO TO 5.
- NG >> Repair harness or connector.


5. CHECK OPTICAL SENSOR VOLTAGE

1. Connect BCM connector.
2. Turn ignition switch ON.
3. Check voltage between BCM harness connector M18 terminal 17 and ground.

17 - Ground : Approx. 5V should exist.

OK or NG

- OK >> Replace the optical sensor. Refer to [LT-55, "Removal and Installation"](#).
- NG >> Replace BCM. Refer to [BCS-18, "BCM"](#).

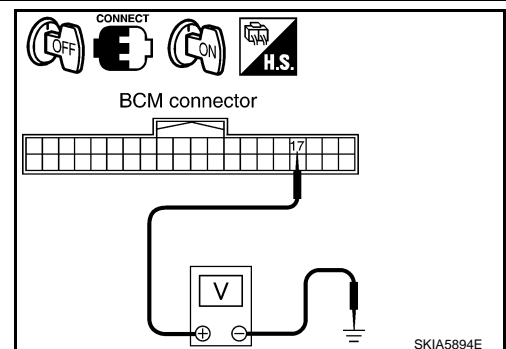

AUTO LIGHT SYSTEM

< SERVICE INFORMATION >


Removal and Installation

INFOID:000000001721556

OPTICAL SENSOR

Removal

1. Remove instrument mask LH. Refer to [IP-10. "Instrument Panel"](#).
2. While pressing pawl, remove the sensor unit from instrument mask.

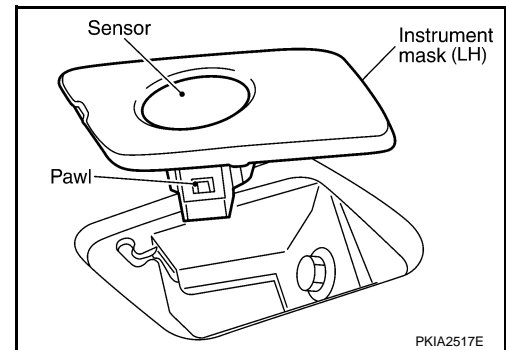

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P


FRONT FOG LAMP

< SERVICE INFORMATION >

FRONT FOG LAMP

Component Parts and Harness Connector Location

INFOID:000000001721557

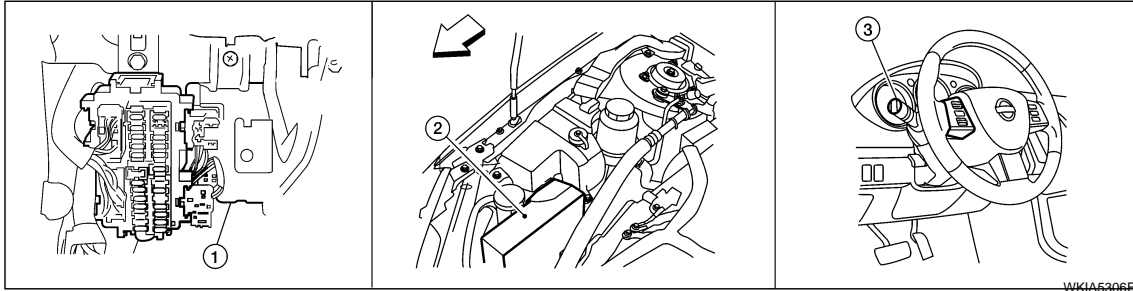

1. BCM M18
(View with instrument panel removed)
2. IPDM E/R E121, E124
3. Combination switch (lighting switch) M28

System Description

INFOID:000000001721558

Control of the fog lamps is dependent upon the position of the combination switch (lighting switch). The lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) for front fog lamp operation. When the lighting switch is placed in the fog lamp position, the BCM (body control module) receives input signal requesting the fog lamps to illuminate. When the headlamps are illuminated, this input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the front fog lamp relay coil. When activated, this relay directs power to the front fog lamps.

OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- through 15A fuse (No. 43, located in the IPDM E/R)
- to front fog lamp relay, located in the IPDM E/R, and
- through 15A fuses (No. 34, and 41, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter f, located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 21, located in the fuse block (J/B)]
- to BCM terminal 57.

When the ignition switch is in ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38.

When the ignition switch is in ACC or ON position, power is supplied

- through 10A fuse [No. 6, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E15 and E24.

FOG LAMP OPERATION

The fog lamp switch is built into the combination switch. The lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the fog lamp switch must be ON for fog lamp operation.

With the fog lamp switch in the ON position, the CPU of the IPDM E/R grounds the coil side of the fog lamp relay. The fog lamp relay then directs power

- through IPDM E/R terminal 37
- to front fog lamp LH terminal 1, and
- through IPDM E/R terminal 36

FRONT FOG LAMP

< SERVICE INFORMATION >

- to front fog lamp RH terminal 1.

Ground is supplied

- to front fog lamp LH and RH terminal 2
- through grounds E15 and E24.

With power and ground supplied, the front fog lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "System Description"](#).

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), the fog lamp switch is ON, and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the fog lamps (and headlamps) remain illuminated for 5 minutes, then the fog lamps (and headlamps) are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-III.

CAN Communication System Description

INFOID:000000001721559

Refer to [LAN-3](#).

A

B

C

D

E

F

G

H

I

J

LT

L

M

N

O

P

FRONT FOG LAMP





< SERVICE INFORMATION >

Wiring Diagram - F/FOG -

INFOID:000000001721560

LT-F/FOG-01

— : DATA LINE

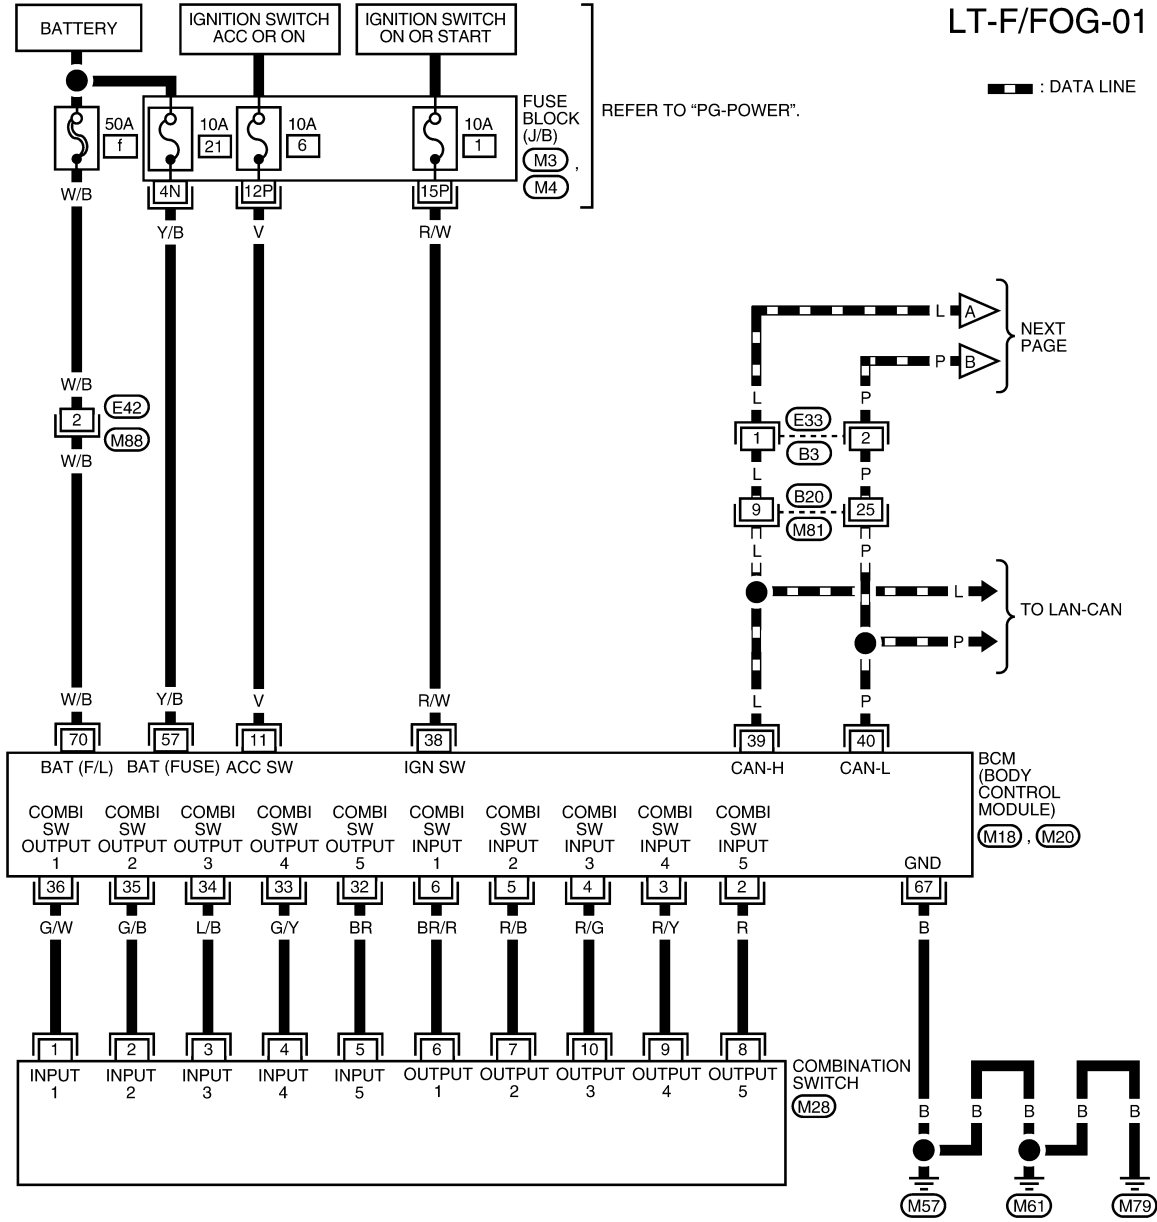


WKWA4862E

FRONT FOG LAMP


< SERVICE INFORMATION >

LT-F/FOG-02

— : DATA LINE

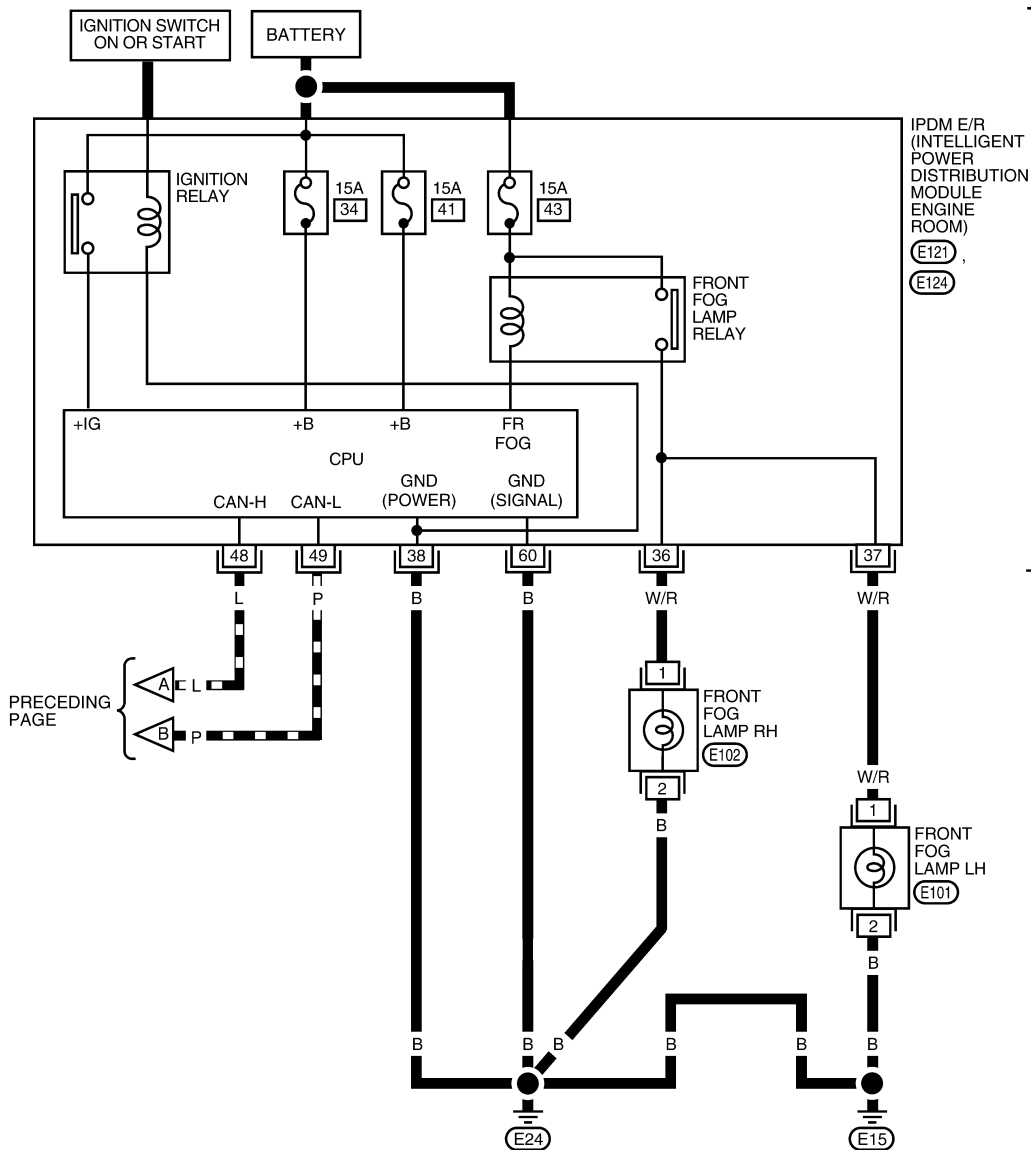

REFER TO "PG-POWER".

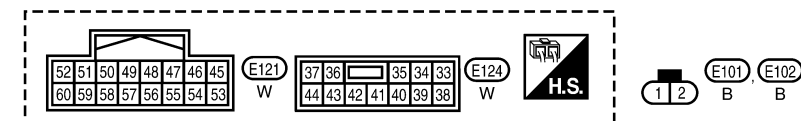

A
B
C
D
E
F
G
H
I
J
L
M
N
O

LT

Terminal and Reference Value for BCM

Refer to [BCS-11, "Terminal and Reference Value for BCM"](#).

Terminal and Reference Value for IPDM E/R

Refer to [PG-25, "Terminal and Reference Value for IPDM E/R"](#).

WKWA4863E

INFOID:000000001721561

INFOID:000000001721562

FRONT FOG LAMP

< SERVICE INFORMATION >

How to Proceed with Trouble Diagnosis

INFOID:000000001721563

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-56, "System Description"](#).
3. Perform the Preliminary Check. Refer to [LT-60, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the front fog lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

INFOID:000000001721564

CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-15, "BCM Power Supply and Ground Circuit Inspection"](#).

CONSULT-III Functions

INFOID:000000001721565

Refer to [LT-18, "CONSULT-III Function \(BCM\)"](#) in HEADLAMP (FOR USA).

Refer to [LT-19, "CONSULT-III Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

Front Fog Lamps Do Not Illuminate (Both Sides)

INFOID:000000001721566

1. CHECK COMBINATION SWITCH INPUT SIGNAL

With CONSULT-III

Select "BCM" on CONSULT-III. With "HEAD LAMP" data monitor, make sure "FR FOG SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in FOG position : FR FOG SW ON

Without CONSULT-III

Refer to [LT-89, "Combination Switch Inspection"](#).

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-89, "Combination Switch Inspection"](#).

2. FOG LAMP ACTIVE TEST

With CONSULT-III

1. Select "IPDM E/R" on CONSULT-III, and select "ACTIVE TEST".

2. Select "LAMPS".

3. Touch "FOG" on "ACTIVE TEST" screen.

4. Make sure fog lamps operate.

Fog lamp should operate.

Without CONSULT-III

1. Start auto active test. Refer to [PG-21, "Auto Active Test"](#).

2. Make sure fog lamps operate.

Fog lamp should operate.

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-III, and select "DATA MONITOR".

2. Make sure "FR FOG REQ" turns ON when lighting switch is in FOG position.

FRONT FOG LAMP

< SERVICE INFORMATION >

When lighting switch is in FOG position : FR FOG REQ ON

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).
- NG >> Replace BCM. Refer to [BCS-18, "BCM"](#).

4.CHECK FOG LAMP INPUT SIGNAL


☑ With CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect front fog lamp RH and LH connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-III, and select "ACTIVE TEST".
5. Select "LAMPS".
6. Touch "FOG" on "ACTIVE TEST" screen.
7. When fog lamp is operating, check voltage between front fog lamp RH and LH harness connectors and ground.

☒ Without CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect front fog lamp RH and LH connectors.
3. Start auto active test. Refer to [PG-21, "Auto Active Test"](#).
4. When fog lamp is operating, check voltage between front fog lamp RH and LH harness connectors and ground.

Terminals		Terminal	(-)	Voltage
(+)				
Front fog lamp connector		1	Ground	Battery voltage
RH	E102			
LH	E101			

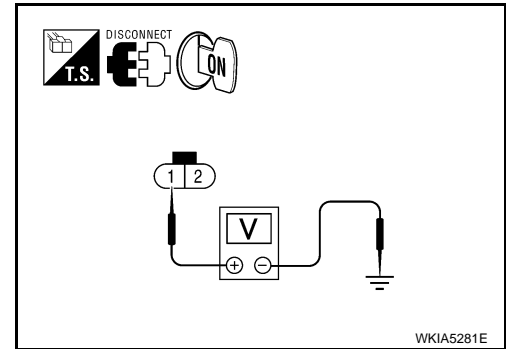

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 5.

5.CHECK FOG LAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R connector E124 (A) terminal 36 and front fog lamp RH connector E102 (B) terminal 1.

36 - 1 : Continuity should exist.

4. Check continuity between IPDM E/R connector E124 (A) terminal 37 and front fog lamp LH connector E101 (B) terminal 1.


37 - 1 : Continuity should exist.

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

6.CHECK FOG LAMP GROUND

1. Turn ignition switch OFF.

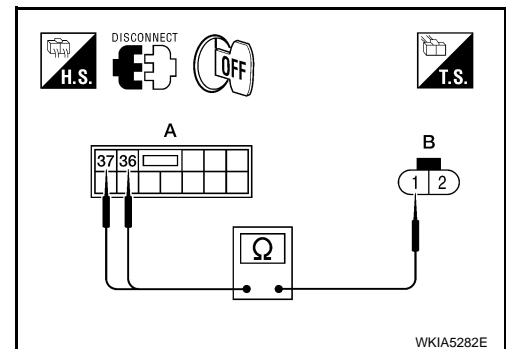

FRONT FOG LAMP

< SERVICE INFORMATION >

2. Check continuity between front fog lamp RH harness connector E102 terminal 2 and ground.


2 - Ground : Continuity should exist.

3. Check continuity between front fog lamp LH harness connector E101 terminal 2 and ground.

2 - Ground : Continuity should exist.

OK or NG

- OK >> Check front fog lamp bulbs.
NG >> Repair harness or connector.

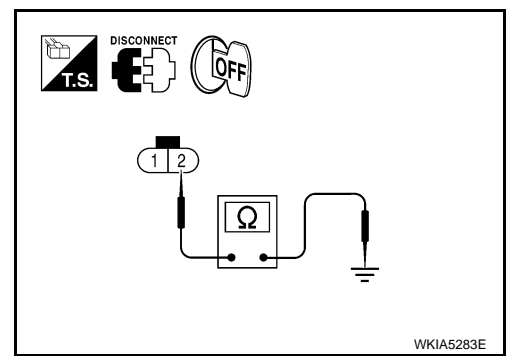

Front Fog Lamp Does Not Illuminate (One Side)

INFOID:000000001721567

1. CHECK BULB

Check bulb of lamp which does not illuminate.

OK or NG

- OK >> GO TO 2.
NG >> Replace front fog lamp bulb. Refer to [LT-64. "Bulb Replacement"](#).


2. CHECK FOG LAMP CIRCUIT

1. Disconnect IPDM E/R connector and front fog lamp RH or LH connector.
2. Check continuity between IPDM E/R connector E124 (A) terminal 36 and front fog lamp RH connector E102 (B) terminal 1.

36 - 1 : Continuity should exist.

3. Check continuity between IPDM E/R connector E124 (A) terminal 37 and front fog lamp LH connector E101 (B) terminal 1.

37 - 1 : Continuity should exist.

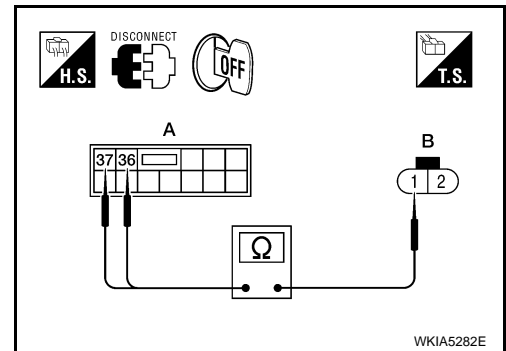

OK or NG

- OK >> GOTO 3.
NG >> Repair harness or connector.

3. CHECK FOG LAMP GROUND

1. Check continuity between front fog lamp RH harness connector E102 terminal 2 and ground.


2 - Ground : Continuity should exist.

2. Check continuity between front fog lamp LH harness connector E101 terminal 2 and ground.

2 - Ground : Continuity should exist.

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29. "Removal and Installation of IPDM E/R"](#).
NG >> Repair harness or connector.

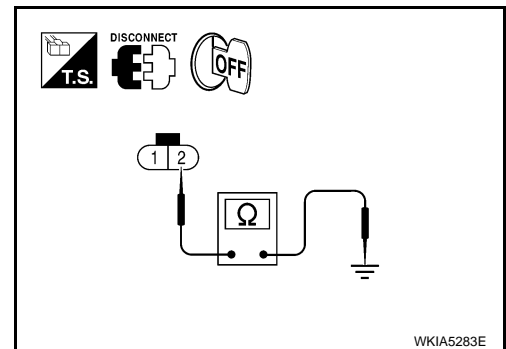


FRONT FOG LAMP

< SERVICE INFORMATION >

Aiming Adjustment

INFOID:000000001721568

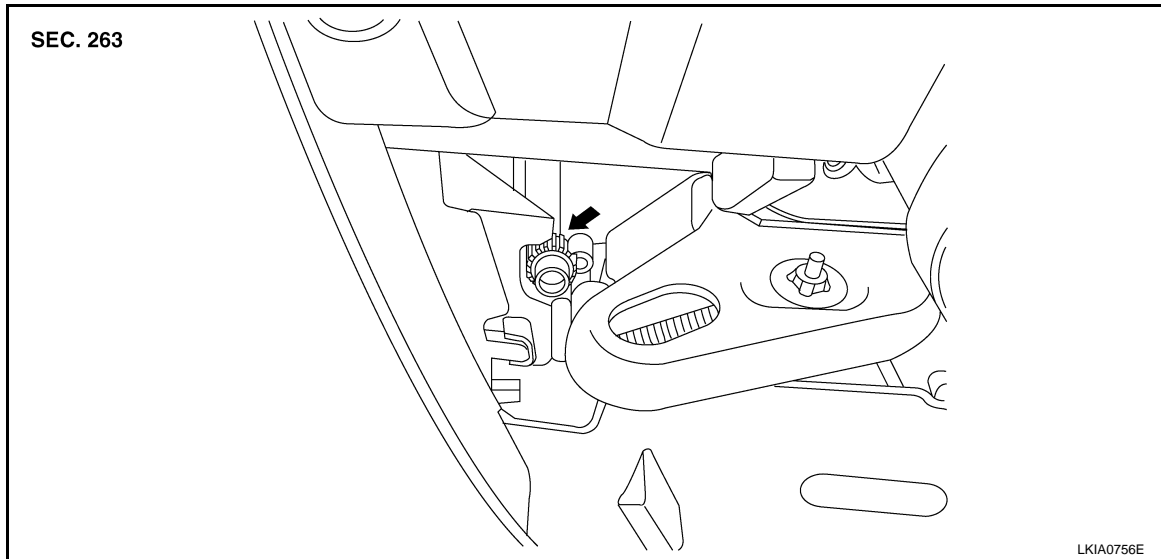

For details, refer to the regulations in your area.

NOTICE:


If the vehicle front body has been repaired and/or the front fog lamp assembly has been replaced, check front fog lamp aiming.

Front Fog Lamp Aiming

NOTE:

- Before performing front fog lamp aiming adjustment, check the following:
 - Ensure all tires are inflated to correct pressure.
 - Place vehicle and screen on level surface.
 - Ensure there is no load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant and engine oil filled to correct level and fuel tank full.
 - Confirm spare tire, jack and tools are properly stowed.
 - Aim each front fog lamp individually and ensure other front fog lamp beam pattern is blocked from screen.
 - Adjust front fog lamp aiming in the vertical direction by turning the adjusting screw.

1. Set the distance between the screen and the center of the fog lamp lens as shown.

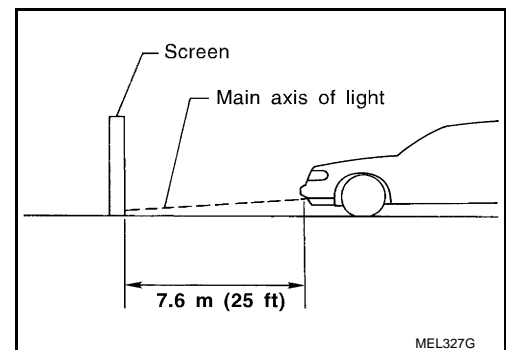


2. Turn front fog lamps ON.

FRONT FOG LAMP

< SERVICE INFORMATION >

- Adjust front fog lamps using adjusting screw so that the top edge of the high intensity zone is 100 mm (4 in) below the height of the fog lamp centers as shown.

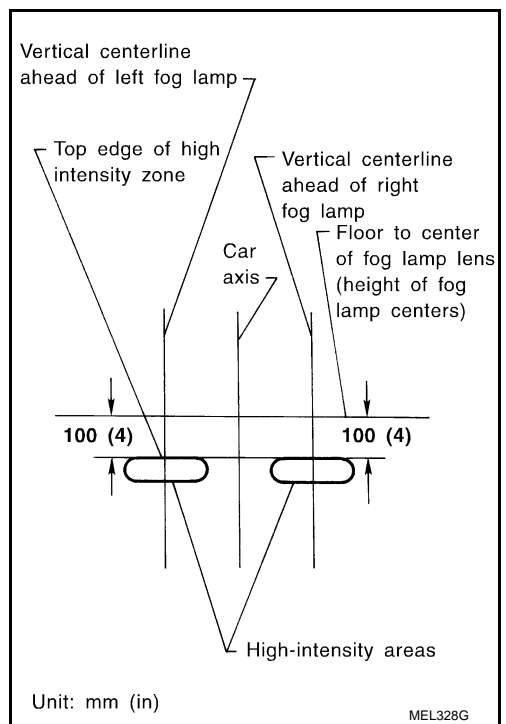

Bulb Replacement

INFOID:000000001721569


FRONT FOG LAMP

Removal

CAUTION:

Do not leave bulb out of fog lamp reflector for a long time because dust, moisture smoke, etc., may affect the performance of fog lamp. When replacing bulb, be sure to replace it with new one.

- Disconnect fog lamp bulb connector
- Turn the fog lamp bulb counterclockwise to unlock it from the fog lamp housing.
- Remove the fog lamp bulb.

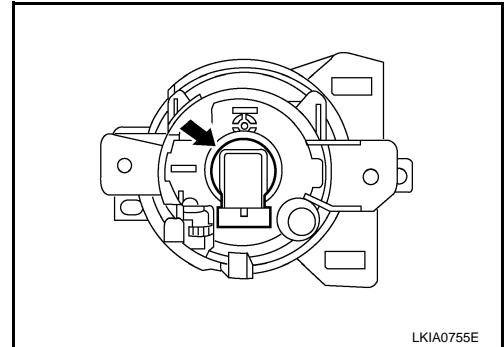

Installation

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.**
- Do not leave bulb out of fog lamp housing for a long time because dust, moisture smoke, etc., may affect the performance of fog lamp. When replacing bulb, be sure to replace it with new one.**

Installation is in the reverse order of removal.

Removal and Installation

INFOID:000000001721570


FRONT FOG LAMP

- Remove the front fascia cover. Refer to [EI-13](#).

FRONT FOG LAMP

< SERVICE INFORMATION >

2. Remove the bolt (1), remove the nuts (2), remove the retaining clips (3) and the front fog lamp assembly (4).

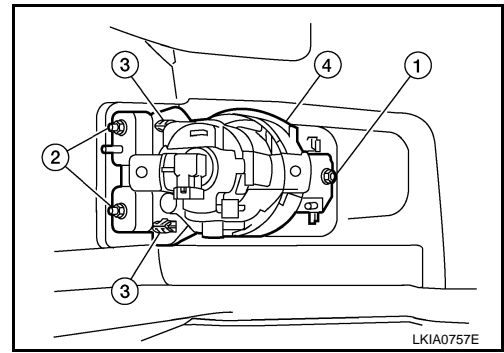

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P


TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

TURN SIGNAL AND HAZARD WARNING LAMPS

Component Parts and Harness Connector Location

INFOID:000000001721571

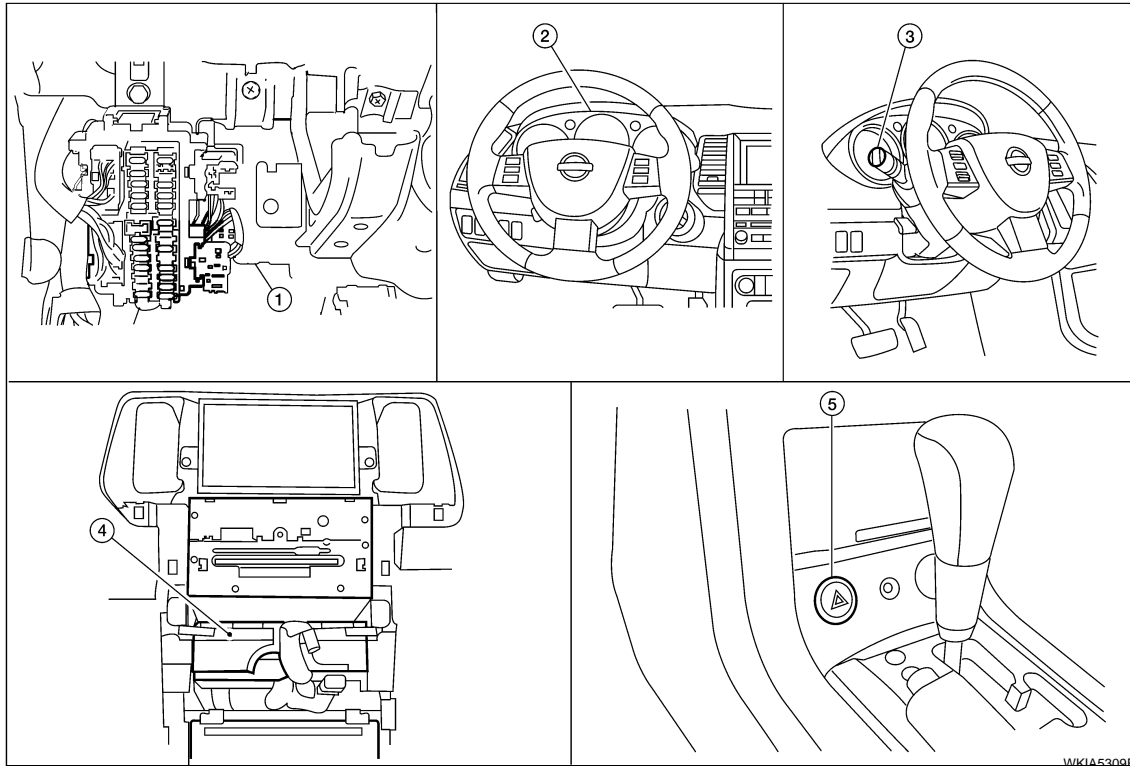

1. BCM M18 and M20 (View with instrument panel removed)
2. Combination meter M24
3. Combination switch (lighting switch) M28
4. Unified meter and A/C amp. M49 (View with center console and cluster lids removed)
5. Hazard switch M202

System Description

INFOID:000000001721572

OUTLINE

Power is supplied at all times

- through 50A fusible link (letter **f**, located in the fuse and fusible link box)
- to BCM (body control module) terminal 70, and
- through 10A fuse [No. 21, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 24.

TURN SIGNAL OPERATION

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 23.

Ground is supplied

- to BCM terminal 67, and
- to combination meter terminals 10, 11 and 12
- through grounds M57, M61 and M79.

LH Turn

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

When the turn signal switch is moved to the left position, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminal 60.

The BCM supplies power

- through BCM terminal 60
- to front combination lamp LH terminal 5
- through front combination lamp LH terminal 10
- to grounds E15 and E24, and
- to rear combination lamp LH terminal 3
- through rear combination lamp LH terminal 5
- to grounds B7 and B19.

BCM sends signal to unified meter and A/C amp through CAN communication lines and turns on turn signal indicator lamp within combination meter.

RH Turn

When the turn signal switch is moved to the right position, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminal 61.

The BCM supplies power

- through BCM terminal 61
- to front combination lamp RH terminal 5
- through front combination lamp RH terminal 10
- to grounds E15 and E24, and
- to rear combination lamp RH terminal 3
- through rear combination lamp RH terminal 5
- to grounds B7 and B19.

BCM sends signal to unified meter and A/C amp through CAN communication lines and turns on turn signal indicator lamp within combination meter.

HAZARD LAMP OPERATION

Power is supplied at all times

- through 50A fusible link (letter f, located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 24

Ground is supplied

- to BCM terminal 67, and
- to combination meter terminals 10, 11 and 12
- through grounds M57, M61 and M79.

When the hazard switch is depressed, ground is supplied

- to BCM terminal 29
- through hazard switch terminal 2
- through hazard switch terminal 1
- through grounds M57, M61 and M79.

When the hazard switch is depressed, the BCM, interpreting it as hazard warning lamps are ON, outputs turn signal from BCM terminals 60 and 61.

The BCM supplies power

- through BCM terminals 60 and 61
- to front combination lamp LH and RH terminal 5
- through front combination lamp LH and RH terminal 10
- to grounds E15 and E24, and
- to rear combination lamp LH and RH terminal 3
- through rear combination lamp LH and RH terminal 5
- to grounds B7 and B19.

BCM sends signal to unified meter and A/C amp through CAN communication lines and turns on turn signal indicator lamps within combination meter.

REMOTE KEYLESS ENTRY SYSTEM OPERATION

Power is supplied at all times

- through 50A fusible link (letter f, located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 21, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]

A

B

C

D

E

F

G

H

I

J

LT

L

M

N

O

P

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

- to combination meter terminal 24.

Ground is supplied

- to BCM terminal 67, and
- to combination meter terminals 10, 11 and 12
- through grounds M57, M61 and M79.

When the remote keyless entry system is triggered by input from the keyfob, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminals 60 and 61.

The BCM supplies power

- through BCM terminals 60 and 61
- to front combination lamp LH and RH terminal 5
- through front combination lamp LH and RH terminal 10
- to grounds E15 and E24, and
- to rear combination lamp LH and RH terminal 3
- through rear combination lamp LH and RH terminal 5
- to grounds B7 and B19.

BCM sends signal to unified meter and A/C amp. through CAN communication lines and turns on turn signal indicator lamps within combination meter.

With power and input supplied, the BCM controls the flashing of the hazard warning lamps when keyfob is used to activate the remote keyless entry system.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "System Description"](#).

CAN Communication System Description

INFOID:000000001721573


Refer to [LAN-3](#).

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

Schematic

INFOID:000000001721574

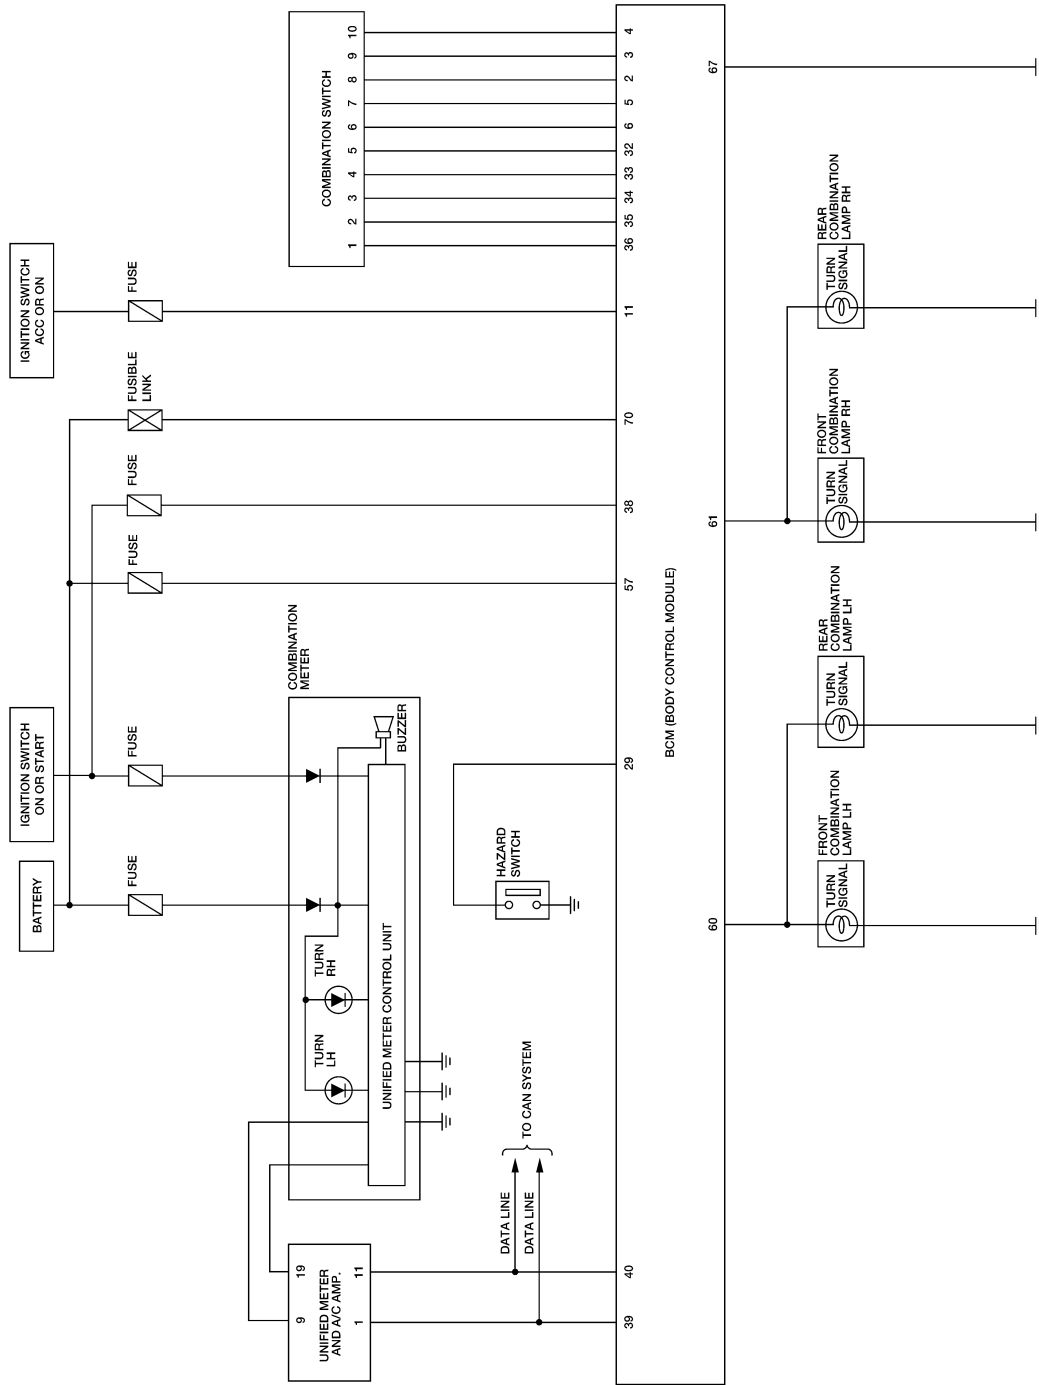

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P

WKWA4864E

TURN SIGNAL AND HAZARD WARNING LAMPS





< SERVICE INFORMATION >

Wiring Diagram - TURN -

INFOID:000000001721575

LT-TURN-01

— : DATA LINE




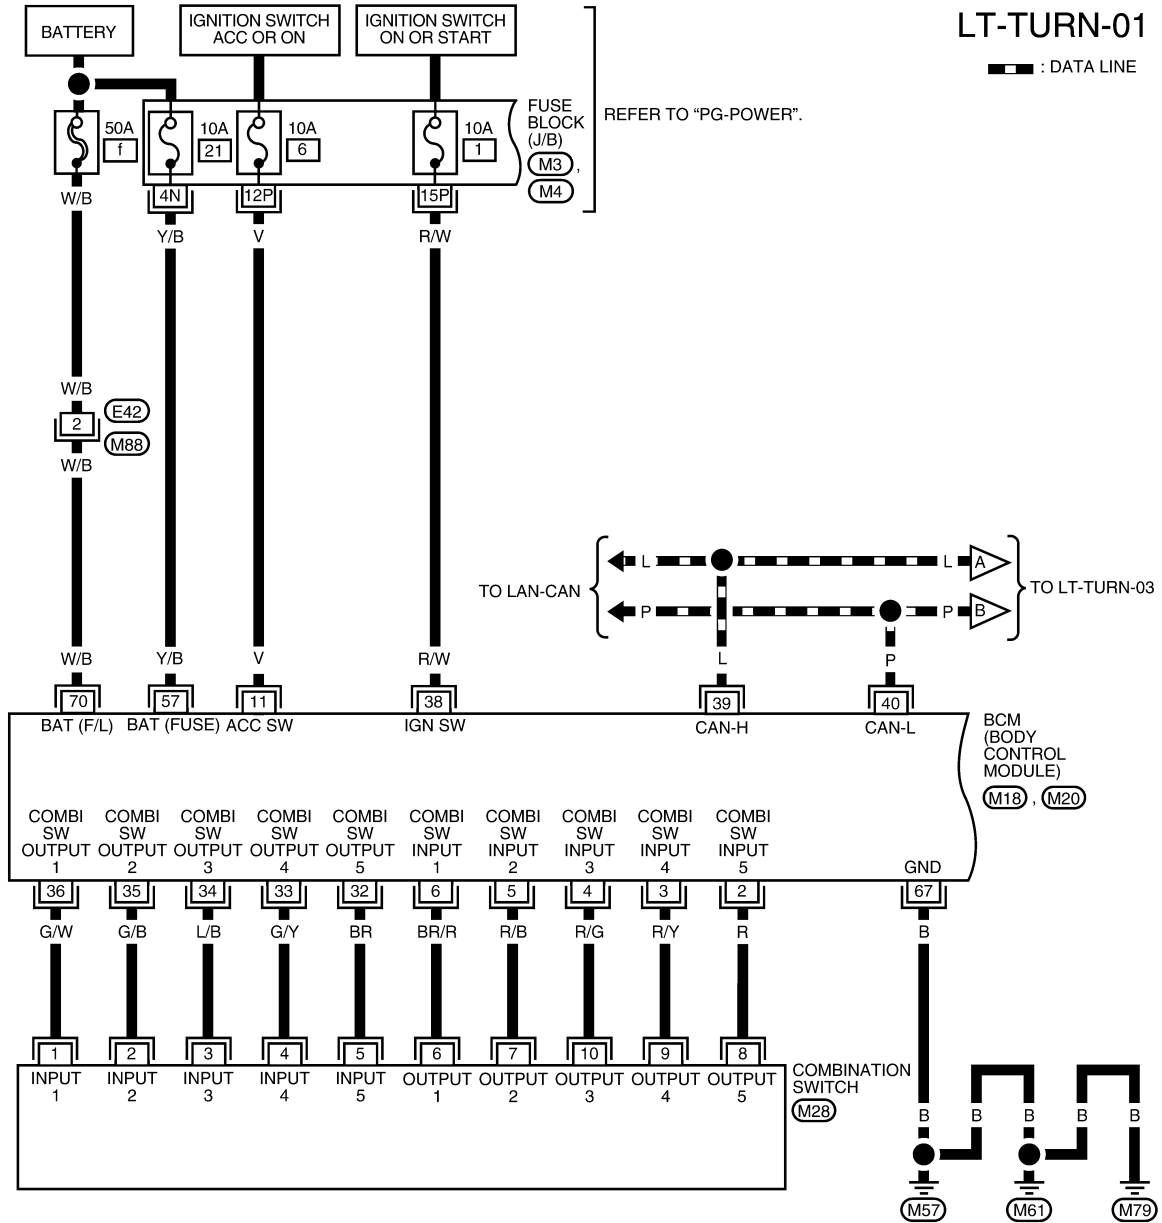


WKWA4865E

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >



LT-TURN-02

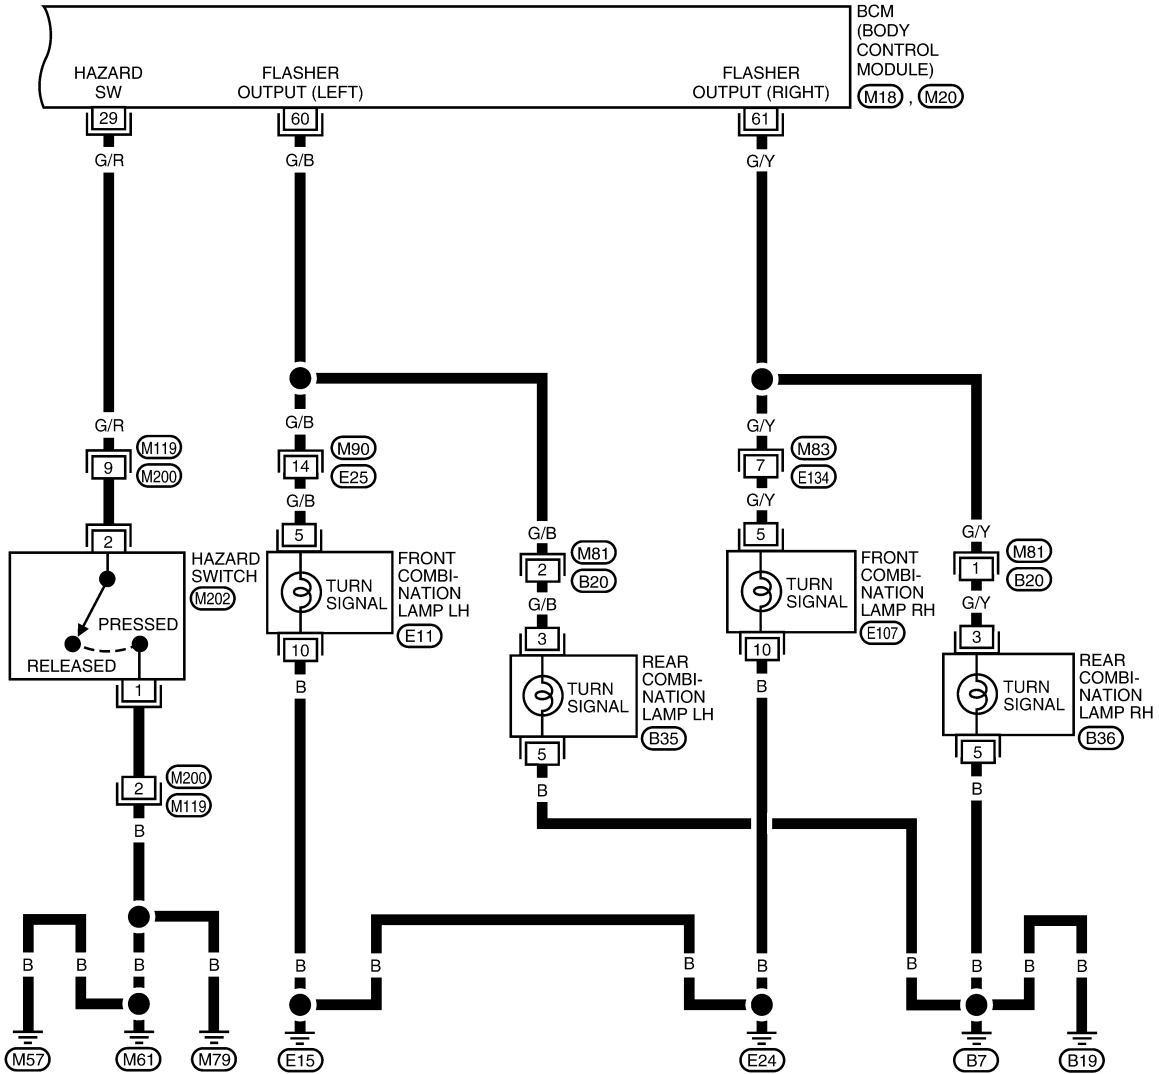

WKWA4866E

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

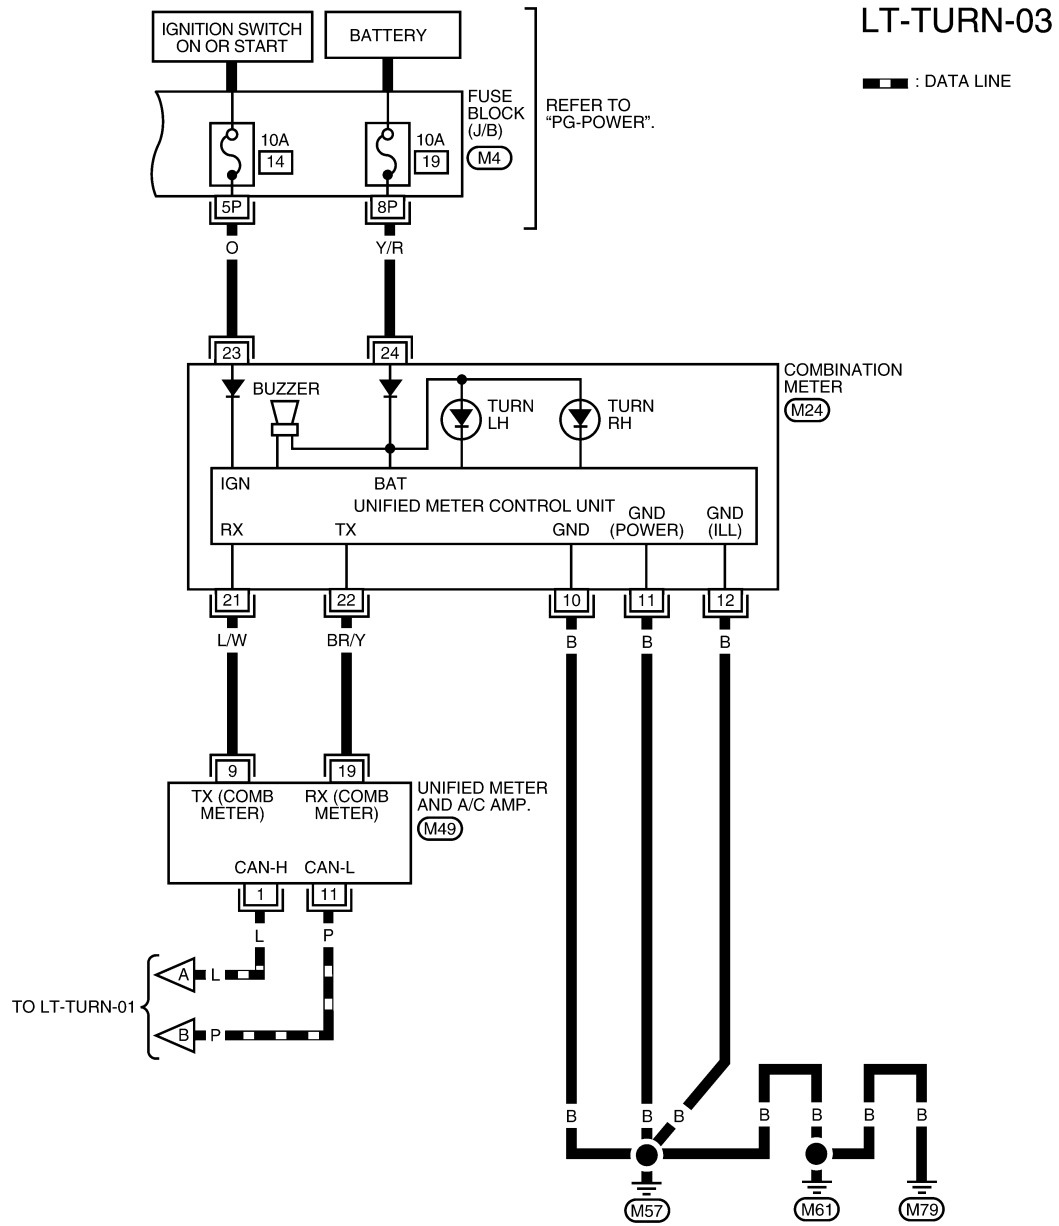

Terminal and Reference Value for BCM

Refer to [BCS-11, "Terminal and Reference Value for BCM"](#).

How to Proceed with Trouble Diagnosis

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-66, "System Description"](#).

WKWA4867E

INFOID:000000001721576

INFOID:000000001721577

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

3. Perform preliminary check. Refer to [LT-73, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Do turn signal and hazard warning lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

INFOID:000000001721578

CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-15, "BCM Power Supply and Ground Circuit Inspection"](#).

CONSULT-III Function (BCM)

INFOID:000000001721579

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

DATA MONITOR

Display Item List

Monitor item	Contents
IGN ON SW	"ON/OFF" Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
HAZARD SW	"ON/OFF" Displays "Hazard ON (ON)/Hazard OFF (OFF)" status, determined from hazard switch signal.
TURN SIGNAL R	"ON/OFF" Displays "Turn right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L	"ON/OFF" Displays "Turn left (ON)/Other (OFF)" status, determined from lighting switch signal.
BRAKE SW ^{Note}	"OFF" —

NOTE 1: This item is displayed, but cannot monitor it.

ACTIVE TEST

Display Item List

Test item	Description
FLASHER (RH)	Turn signal lamp (RH) can be operated by any ON-OFF operations.
FLASHER (LH)	Turn signal lamp (LH) can be operated by any ON-OFF operations.

Turn Signal Lamp Does Not Operate

INFOID:000000001721580

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Ⓜ With CONSULT-III

Select "BCM" on CONSULT-III. With "FLASHER" data monitor, make sure "TURN SIGNAL R" and "TURN SIGNAL L" turns ON-OFF linked with operation of lighting switch.

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

When lighting switch is in : TURN SIGNAL R ON
TURN RH position

When lighting switch is in : TURN SIGNAL L ON
TURN LH position

⊗ Without CONSULT-III

Refer to [LT-89, "Combination Switch Inspection"](#).

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-89, "Combination Switch Inspection"](#).

2. ACTIVE TEST

Ⓟ With CONSULT-III

1. Select "FLASHER" during active test. Refer to [LT-73, "CONSULT-III Function \(BCM\)"](#).

2. Make sure "FLASHER RH" and "FLASHER LH" operate.

⊗ Without CONSULT-III

GO TO 3.

OK or NG

OK >> Replace BCM. Refer to [BCS-18, "BCM"](#).

NG >> GO TO 3.

3. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Turn ignition switch OFF.


2. Disconnect BCM connector and front combination lamp LH and RH connectors.

3. Check continuity between BCM connector M19 (A) terminal 60 and front combination lamp LH connector E11 (B) terminal 5.

60 - 5 : Continuity should exist.

4. Check continuity between BCM connector M19 (A) terminal 61 and front combination lamp RH connector E107 (B) terminal 5.

61 - 5 : Continuity should exist.

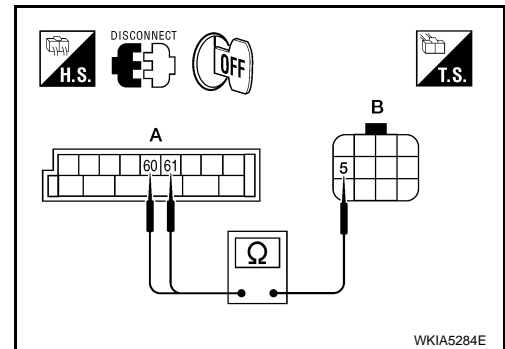

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

4. CHECK GROUND

1. Check continuity between front combination lamp LH harness connector E11 terminal 10 and ground.

10 - Ground : Continuity should exist.

2. Check continuity between front combination lamp RH harness connector E107 terminal 10 and ground.


10 - Ground : Continuity should exist.

OK or NG

OK >> GO TO 5.

NG >> Repair harness or connector.

5. CHECK TURN SIGNAL LAMPS SHORT CIRCUIT

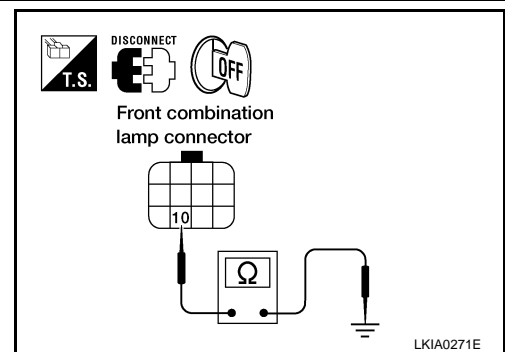

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

1. Disconnect rear combination lamp connectors.
2. Check continuity (short circuit) between front combination lamp LH harness connector E11 terminal 5 and ground.

5 - Ground : Continuity should not exist.

3. Check continuity (short circuit) between front combination lamp RH harness connector E107 terminal 5 and ground.

5 - Ground : Continuity should not exist.

OK or NG

- OK >> GO TO 6.
- NG >> Repair harness or connector.

6. CHECK BULB

Check bulb standard of each turn signal lamp is correct. Refer to [LT-141, "Exterior Lamp"](#).

OK or NG

- OK >> Replace BCM if turn signal lamp does not work after setting the connector again. Refer to [BCS-18, "BCM"](#).
- NG >> Replace turn signal lamp bulb. Refer to [LT-30, "Bulb Replacement"](#).

Rear Turn Signal Lamp Does Not Operate

INFOID:000000001721581

1. CHECK TAIL LAMPS AND STOP LAMPS

Check bulb standard of each turn signal lamp is correct. Refer to [LT-141, "Exterior Lamp"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Replace turn signal lamp bulb. Refer to [LT-109, "Bulb Replacement"](#).

2. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Disconnect BCM connector and rear combination lamp connector.
2. Check continuity between BCM connector M19 (A) terminal 61 and rear combination lamp RH connector B36 (B) terminal 3.

61 - 3 : Continuity should exist.

3. Check continuity between BCM connector M19 (A) terminal 60 and rear combination lamp LH connector B35 (B) terminal 3.

60 - 3 : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.




3. CHECK GROUND CIRCUIT

Check continuity between rear combination lamp harness connector B35 LH and B36 RH terminal 5 and ground.

5 - Ground : Continuity should exist.

OK or NG

- OK >> Check rear combination lamp connector for proper connection. Repair as necessary.
- NG >> Repair harness or connector.

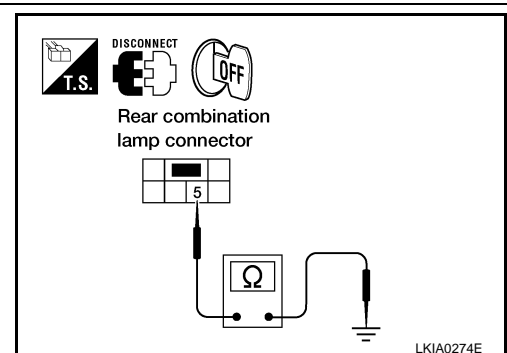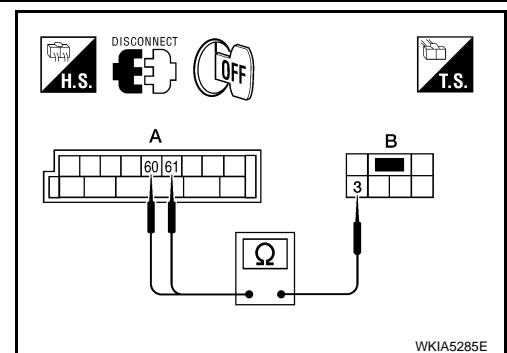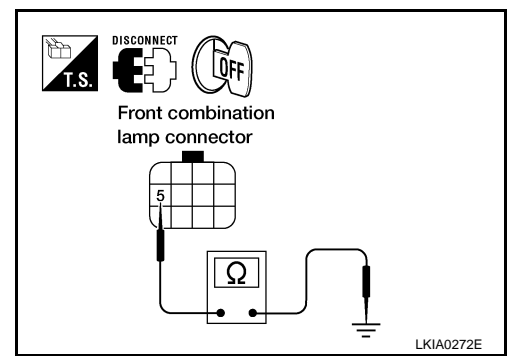

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

Hazard Warning Lamp Does Not Operate But Turn Signal Lamp Operates INFOID:000000001721582

1. CHECK BULB

Make sure bulb standard of each turn signal lamp is correct. Refer to [LT-141, "Exterior Lamp"](#).

OK or NG

OK >> GO TO 2.

NG >> Replace turn signal lamp bulb. Refer to [LT-30, "Bulb Replacement"](#) for front turn signal bulb. Refer to [LT-109, "Bulb Replacement"](#) for rear turn signal bulb.

2. CHECK HAZARD SWITCH INPUT SIGNAL

Ⓜ With CONSULT-III

Select "BCM" on CONSULT-III. With "FLASHER" data monitor, make sure "HAZARD SW" turns ON-OFF linked with operation of hazard switch.

**When hazard switch is in : HAZARD SW ON
ON position**

ⓧ Without CONSULT-III

Check voltage between BCM harness connector M18 terminal 29 and ground.

BCM (+)		(-)	Condition	Voltage (Approx.)
Connector	Terminal			
M18	29	Ground	Hazard switch is ON	0V
			Hazard switch is OFF	5V

OK or NG

OK >> Replace BCM. Refer to [BCS-18, "BCM"](#).

NG >> GO TO 3.

3. CHECK HAZARD SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and hazard switch connector.
3. Check continuity between BCM harness connector M18 terminal 29 and hazard switch harness connector M202 terminal 2.

29 - 2 : Continuity should exist.

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

4. CHECK GROUND




Check continuity between hazard switch harness connector M202 terminal 1 and ground.

1 - Ground : Continuity should exist.

OK or NG

OK >> GO TO 5.

NG >> Repair harness or connector.

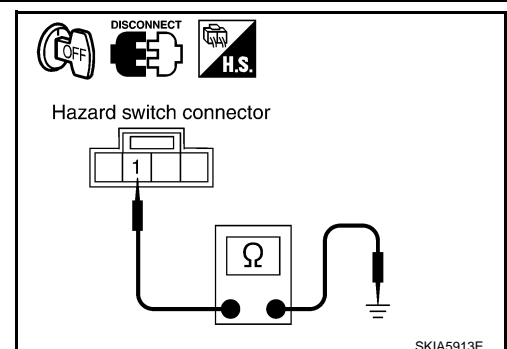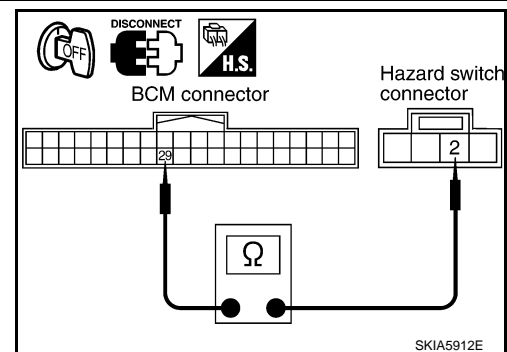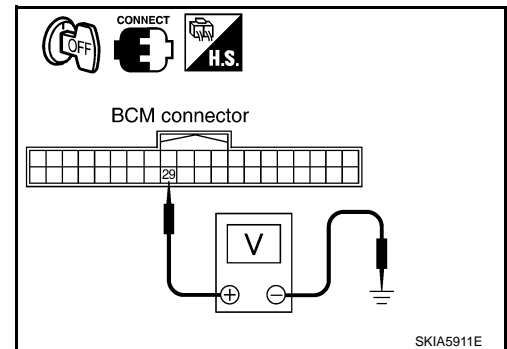

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >


5. CHECK HAZARD SWITCH

1. Disconnect hazard switch connector.
2. Check continuity of hazard switch.

Hazard switch		Condition	Continuity
Terminal			
1	2	Hazard switch is pressed	Yes
		Hazard switch is released	No

OK or NG

- OK >> Replace BCM if hazard warning lamps do not work after setting the connector again. Refer to [BCS-18, "BCM"](#).
- NG >> Replace hazard switch. Refer to [LT-87, "Removal and Installation"](#).

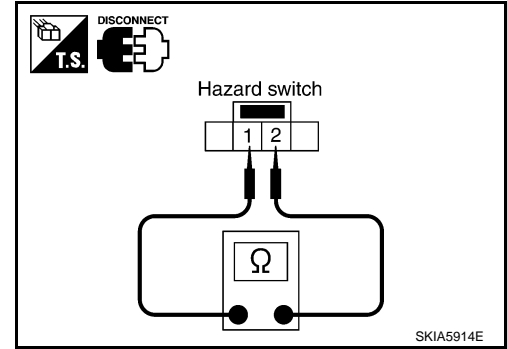

Turn Signal Indicator Lamp Does Not Operate

INFOID:000000001721583

1. CHECK BULB

Check CAN communication. Refer to [LAN-38](#).

OK or NG

- OK >> Replace combination meter. Refer to [DI-24, "Combination Meter"](#).
- NG >> Repair as necessary.

Bulb Replacement

INFOID:000000001721584

FRONT TURN SIGNAL LAMP

Refer to [LT-30, "Bulb Replacement"](#).

Bulb Replacement

INFOID:000000001721585

REAR TURN SIGNAL LAMP

Refer to [LT-109, "Bulb Replacement"](#).

Removal and Installation

INFOID:000000001721586

FRONT TURN SIGNAL LAMP

Refer to [LT-32, "Removal and Installation"](#).

Removal and Installation

INFOID:000000001721587

REAR TURN SIGNAL LAMP

Refer to [LT-109, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P


CORNERING LAMP

< SERVICE INFORMATION >

CORNERING LAMP

Component Parts and Harness Connector Location

INFOID:000000001721588

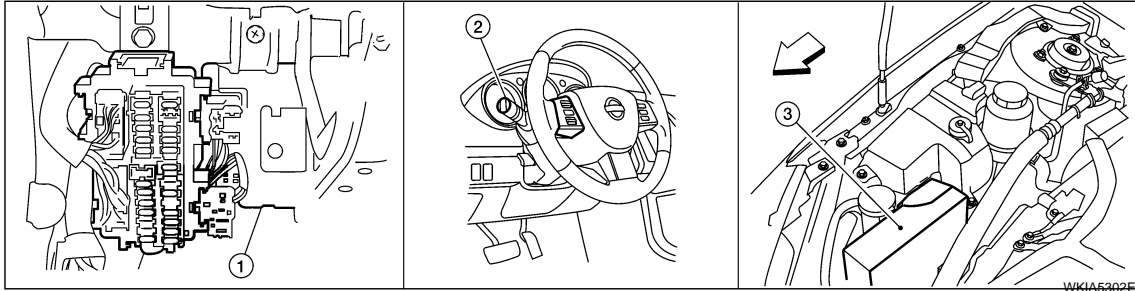

1. BCM M18 and M20
(View with instrument panel removed)
2. Combination switch (lighting switch) M28
3. IPDM E/R E121, E122, and E124
(←: Front)

System Description

INFOID:000000001721589

OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- through 50A fusible link (letter f, located in the fuse and fusible link box)
- to BCM (body control module) terminal 70, and
- through 10A fuse [No. 21, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 15A fuse (No. 34, located in the IPDM E/R)
- to CPU (central processing unit) of the IPDM E/R, and
- through 15A fuse (No. 41, located in the IPDM E/R)
- to CPU (central processing unit) of the IPDM E/R, and
- to cornering lamp relay LH and RH.

CORNERING LAMP OPERATION

When the ignition switch is in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E15 and E24.

LH Turn

When the lighting switch is in the 2nd position or in the AUTO position (headlamp ON) and turn signal switch is moved to the left position, BCM sends signal through CAN communication lines to IPDM E/R. IPDM E/R then operates cornering lamp relay LH. It sends power from IPDM E/R terminal 34 to front combination lamp LH terminal 11.

Ground is supplied

- to front combination lamp terminal 10
- through grounds E15 and E24.

RH Turn

When the lighting switch is in the 2nd position or in the AUTO position (headlamp ON) and turn signal switch is moved to the right position, BCM sends signal through CAN communication lines to IPDM E/R. IPDM E/R then operates cornering lamp relay RH. It sends power from IPDM E/R terminal 23 to front combination lamp RH terminal 11.

Ground is supplied

- to front combination lamp terminal 10

CORNERING LAMP

< SERVICE INFORMATION >

- through grounds E15 and E24.


COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "System Description"](#).

CAN Communication System Description

Refer to [LAN-3](#).

Schematic

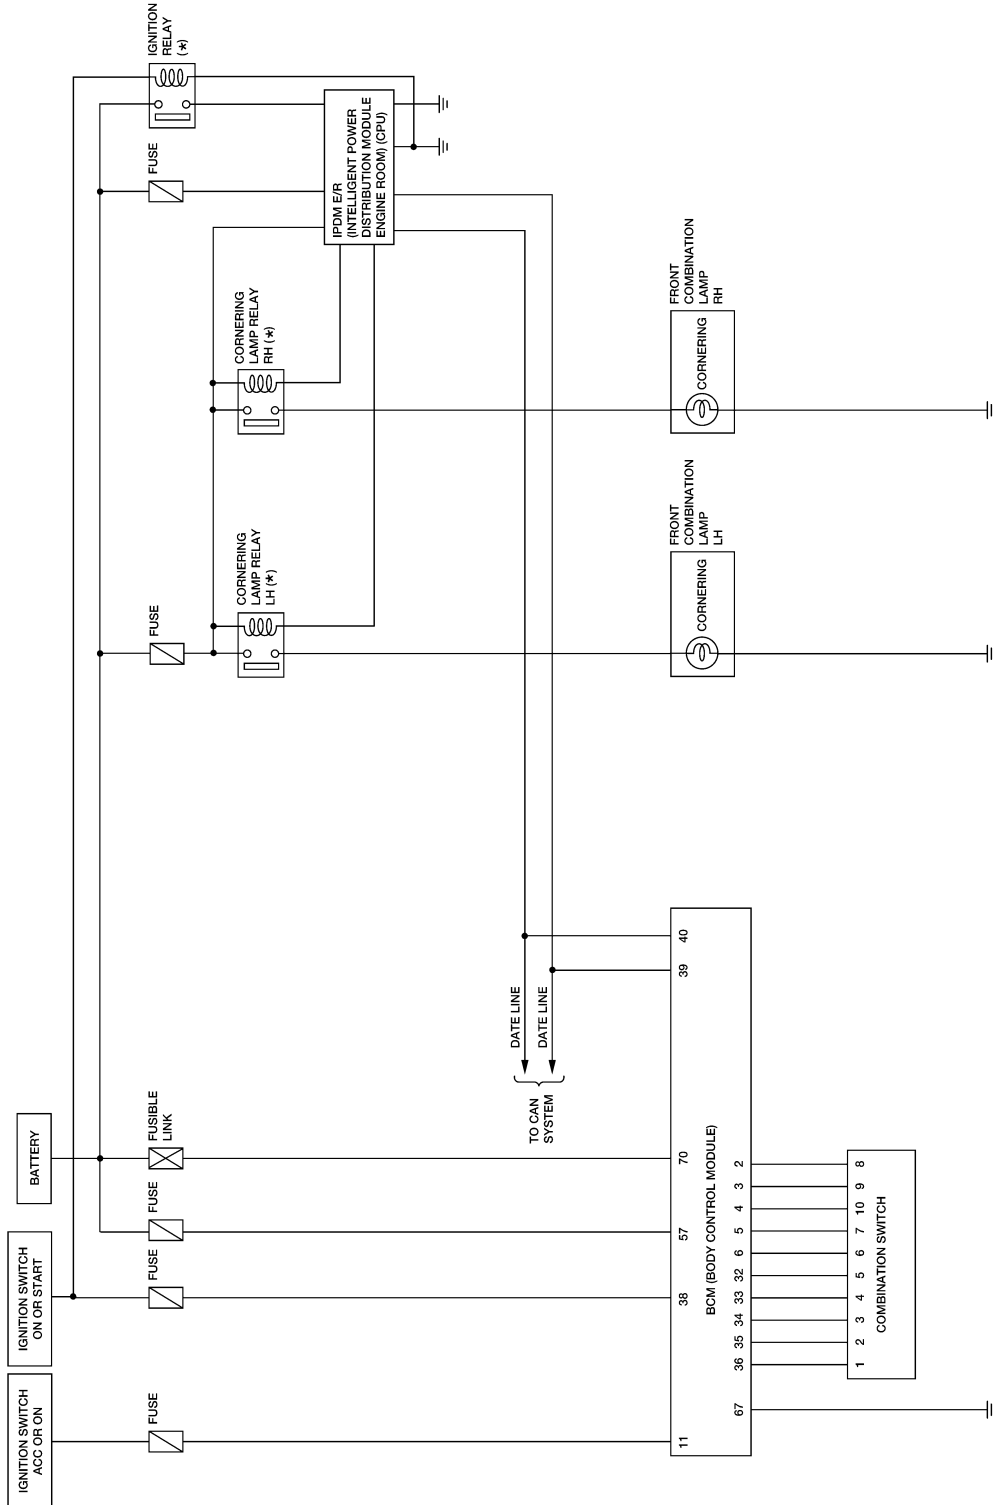

* : THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

WKWA4868E

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

LT





CORNERING LAMP

< SERVICE INFORMATION >

Wiring Diagram - CORNER -

INFOID:00000001721592

LT-CORNER-01



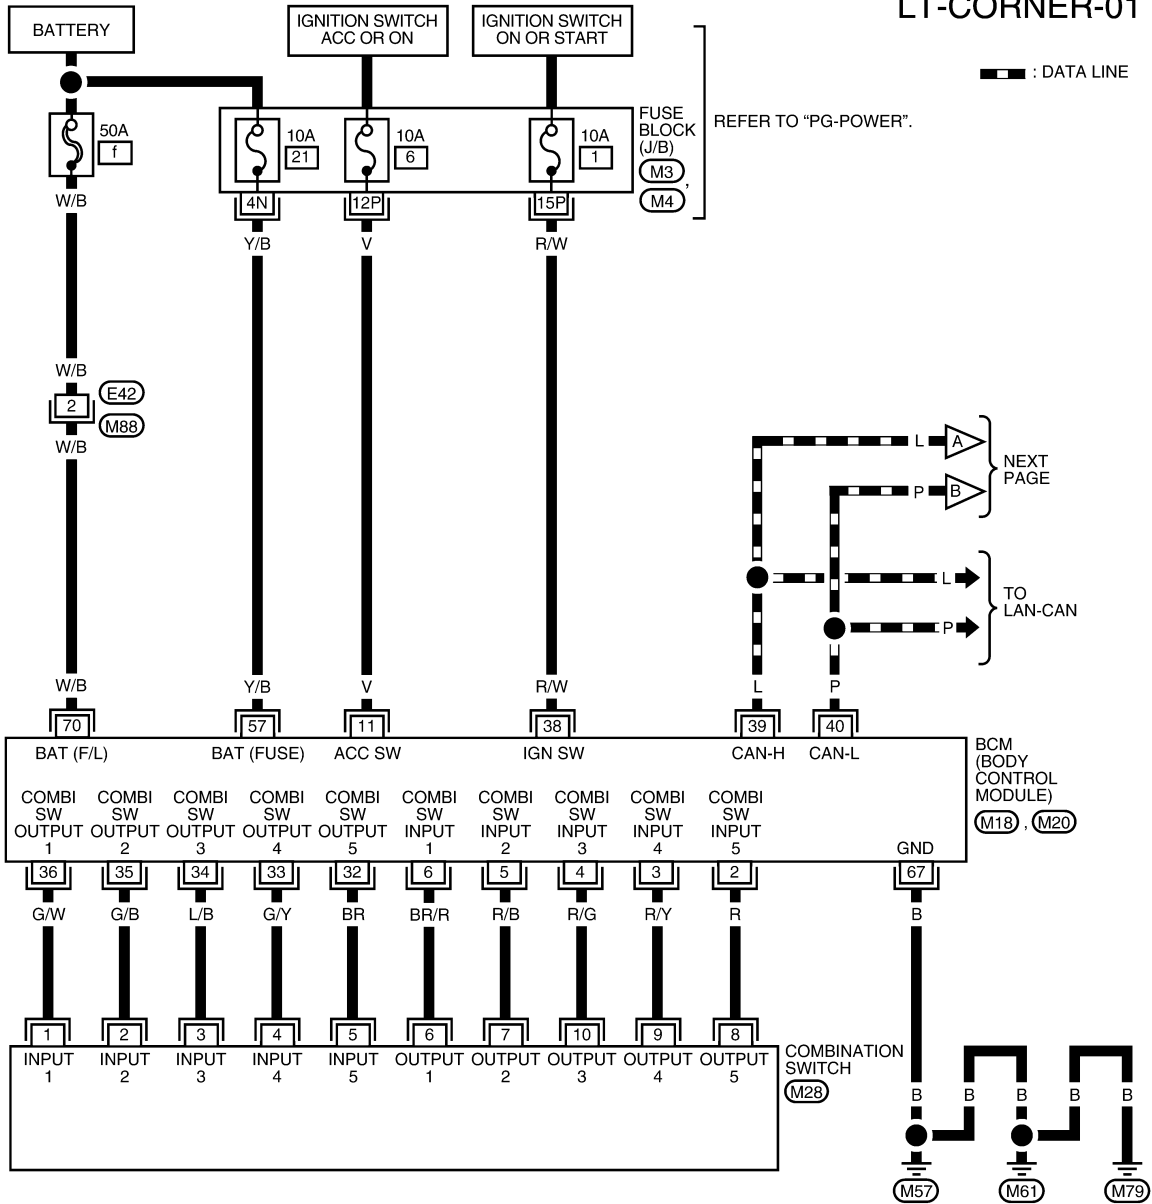


WKWA4869E

CORNERING LAMP

< SERVICE INFORMATION >

LT-CORNER-02

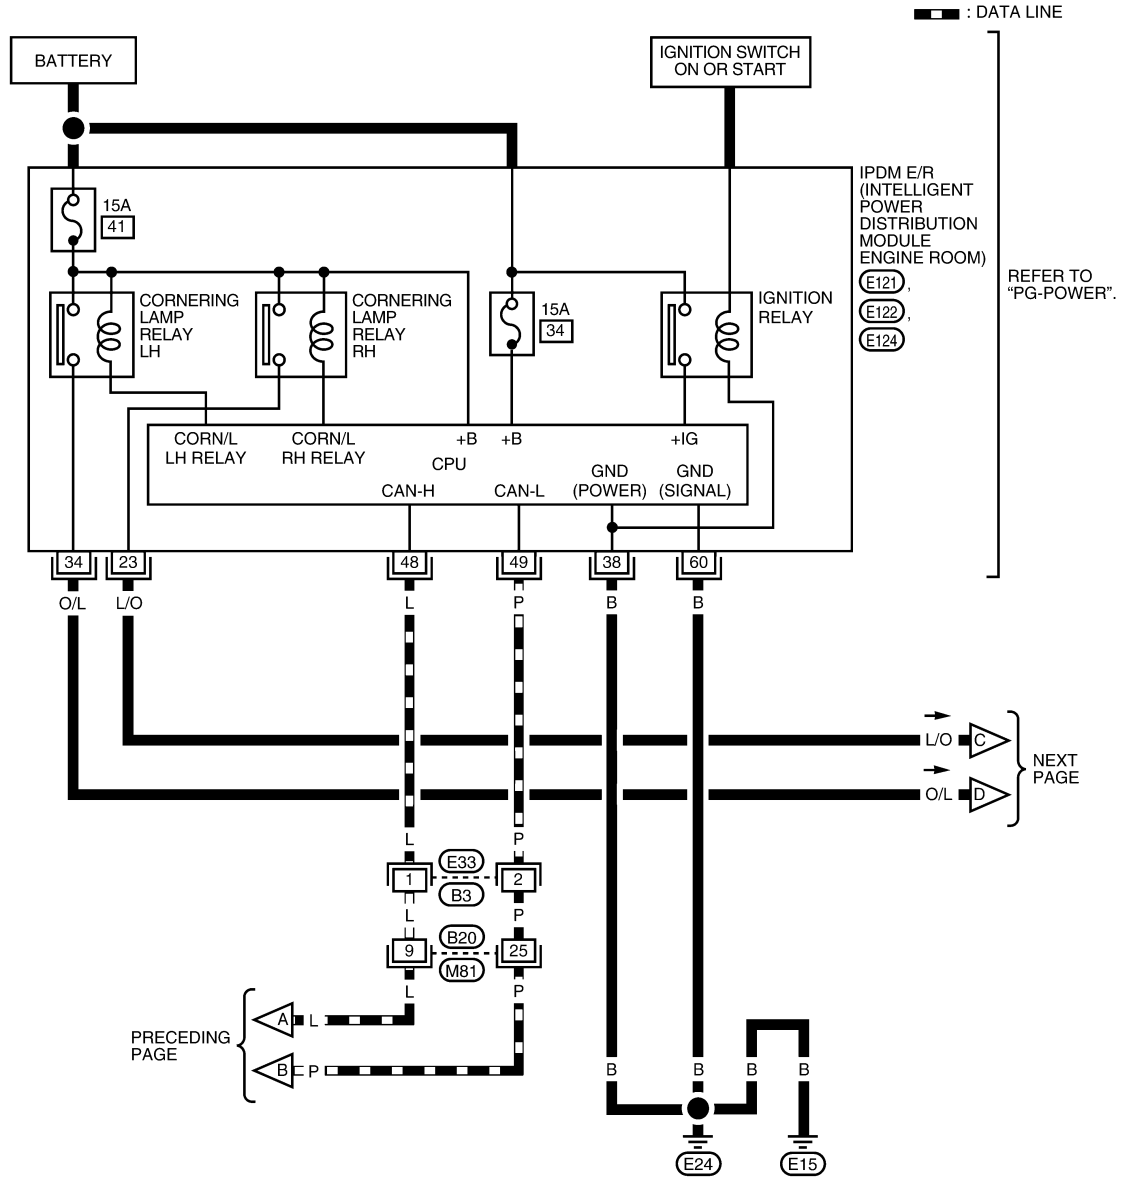

WKWA4870E



A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

LT

CORNERING LAMP

< SERVICE INFORMATION >

LT-CORNER-03

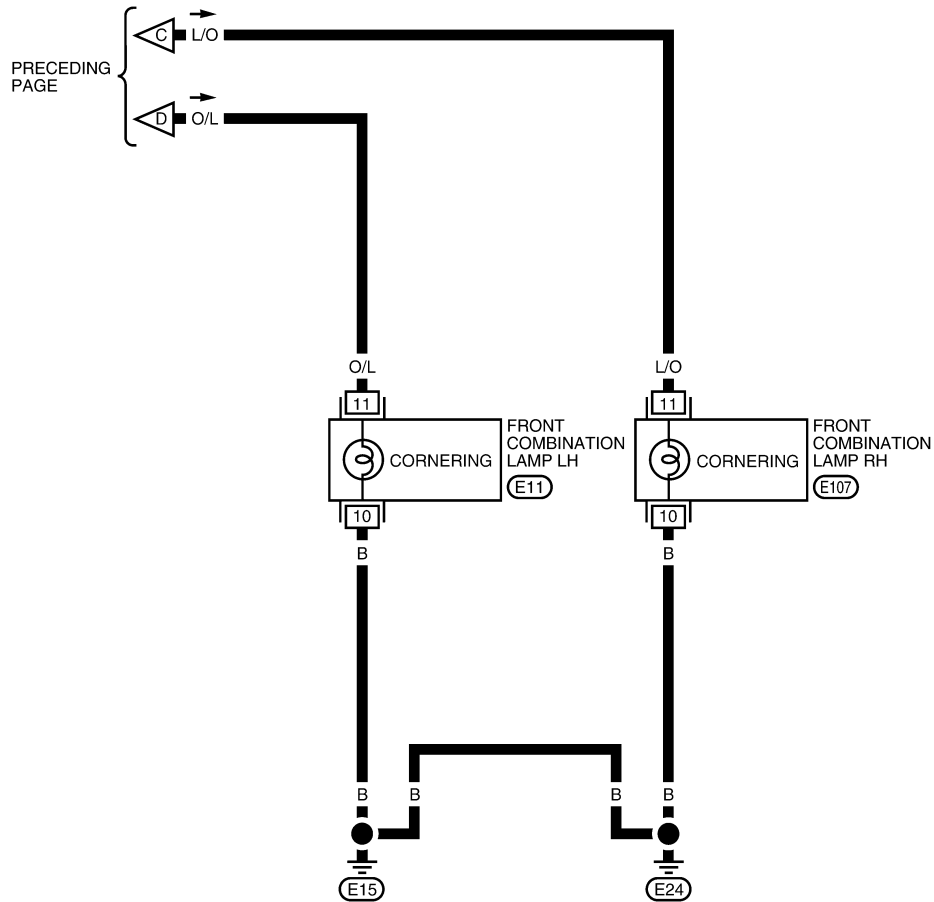

Terminal and Reference Value for BCM

Refer to [BCS-11, "Terminal and Reference Value for BCM"](#).

Terminal and Reference Value for IPDM E/R

Refer to [PG-25, "Terminal and Reference Value for IPDM E/R"](#).

WKWA4871E

INFOID:000000001721593

INFOID:000000001721594

CORNERING LAMP

< SERVICE INFORMATION >

How to Proceed with Trouble Diagnosis

INFOID:000000001721596

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-78, "System Description"](#).
3. Perform preliminary check. Refer to [LT-83, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Do cornering lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

INFOID:000000001721596

CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-15, "BCM Power Supply and Ground Circuit Inspection"](#).

CONSULT-III Function (IPDM E/R)

INFOID:000000001721597

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

IPDM E/R diagnostic Mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

DATA MONITOR

Display Item List

Item name	CONSULT-III screen display	Display or unit	Monitor item selection		Description
			ALL SIGNALS	SELECTION FROM MENU	
Cornering lamp	CRNRNG LMP REQ	ON/OFF	×	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Display Item List

Test item	Description
CORNERING LAMP (RH)	Cornering lamp (RH) can be operated by any ON-OFF operations.
CORNERING LAMP (LH)	Cornering lamp (LH) can be operated by any ON-OFF operations.

Cornering Lamp Does Not Operate

INFOID:000000001721598

1. ACTIVE TEST

☑ With CONSULT-III

1. Select "IPDM E/R" on CONSULT-III, and select "ACTIVE TEST".
2. Select "CORNERING LAMP".
3. Select "RH", then "LH" on "ACTIVE TEST" screen.
4. Make sure cornering lamp RH and cornering lamp LH operate.

☒ Without CONSULT-III

GO TO 3.

OK or NG

CORNERING LAMP

< SERVICE INFORMATION >

- OK >> GO TO 2.
- NG >> GO TO 3.

2.CHECK COMBINATION SWITCH INPUT SIGNAL

Select "IPDM E/R" on CONSULT-III, and select "DATA MONITOR". Make sure "CRNRNG LMP REQ" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : CRNRNG LMP REQ ON
TURN RH position**

**When lighting switch is in : CRNRNG LMP REQ ON
TURN LH position**

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).
- NG >> Replace BCM. Refer to [BCS-18, "BCM"](#).

3.CHECK BULB

Check bulb standard of each cornering lamp is correct. Refer to [LT-141, "Exterior Lamp"](#).

OK or NG

- OK >> GO TO 4.
- NG >> Replace cornering lamp bulb.


4.CHECK CORNERING LAMPS CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connectors and front combination lamp LH and RH connectors.
3. Check continuity between IPDM E/R connector E122 (A) terminal 23 and front combination lamp RH connector E107 (B) terminal 11.

11 - 23 : Continuity should exist.

4. Check continuity between IPDM E/R connector E124 (A) terminal 34 and front combination lamp LH connector E11 (B) terminal 11.

11 - 34 : Continuity should exist.

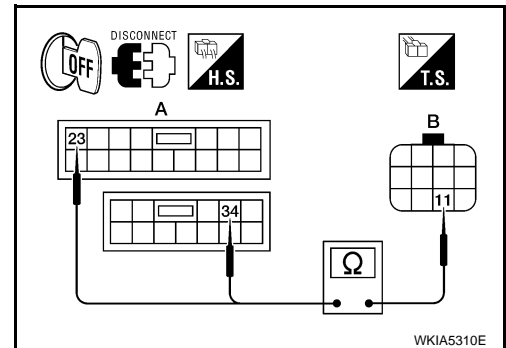

OK or NG

- OK >> GO TO 5.
- NG >> Repair harness or connector.

5.CHECK GROUND

1. Check continuity between front combination lamp LH harness connector E11 terminal 10 and ground.

10 - Ground : Continuity should exist.


2. Check continuity between front combination lamp RH harness connector E107 terminal 10 and ground.

10 - Ground : Continuity should exist.

OK or NG

- OK >> GO TO 6.
- NG >> Repair harness or connector.

6.CHECK CORNERING LAMPS SHORT CIRCUIT

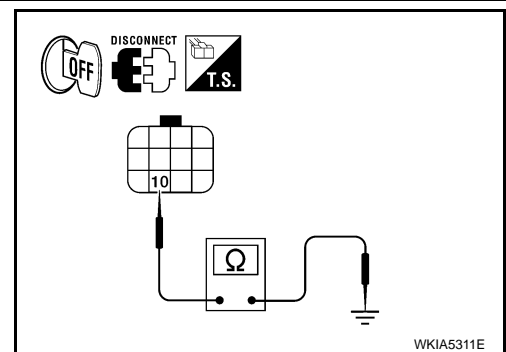

CORNERING LAMP

< SERVICE INFORMATION >

1. Check continuity (short circuit) between front combination lamp LH harness connector E11 terminal 11 and ground.

11 - Ground : Continuity should not exist.


2. Check continuity (short circuit) between front combination lamp RH harness connector E107 terminal 11 and ground.

11 - Ground : Continuity should not exist.

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).

NG >> Repair harness or connector.

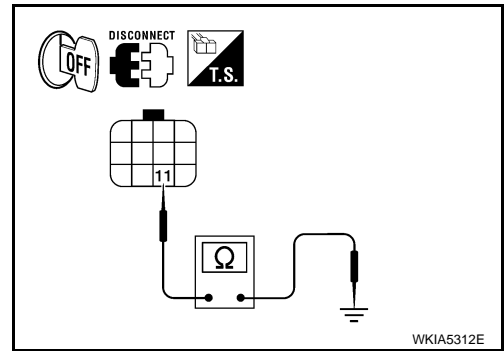

Removal and Installation

INFOID:000000001721599

CORNERING LAMP

Refer to [LT-32, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P

LIGHTING AND TURN SIGNAL SWITCH

< SERVICE INFORMATION >

LIGHTING AND TURN SIGNAL SWITCH

Removal and Installation

INFOID:000000001721600

Refer to "Removal and Installation".

HAZARD SWITCH

< SERVICE INFORMATION >


HAZARD SWITCH

Removal and Installation

INFOID:000000001721601

Removal

1. Remove cluster lid C. Refer to [IP-12. "Cluster Lid C"](#).
2. Remove screws from console finisher and remove the hazard switch.

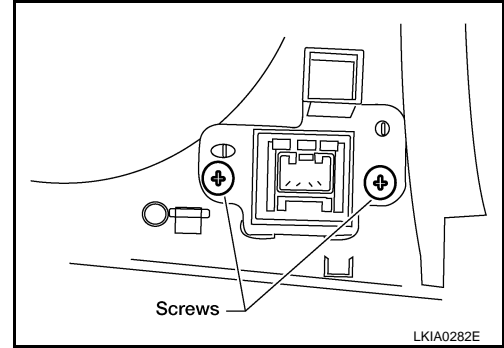

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P

COMBINATION SWITCH





< SERVICE INFORMATION >

COMBINATION SWITCH

Wiring Diagram - COMBSW -

INFOID:000000001721602

LT-COMBSW-01

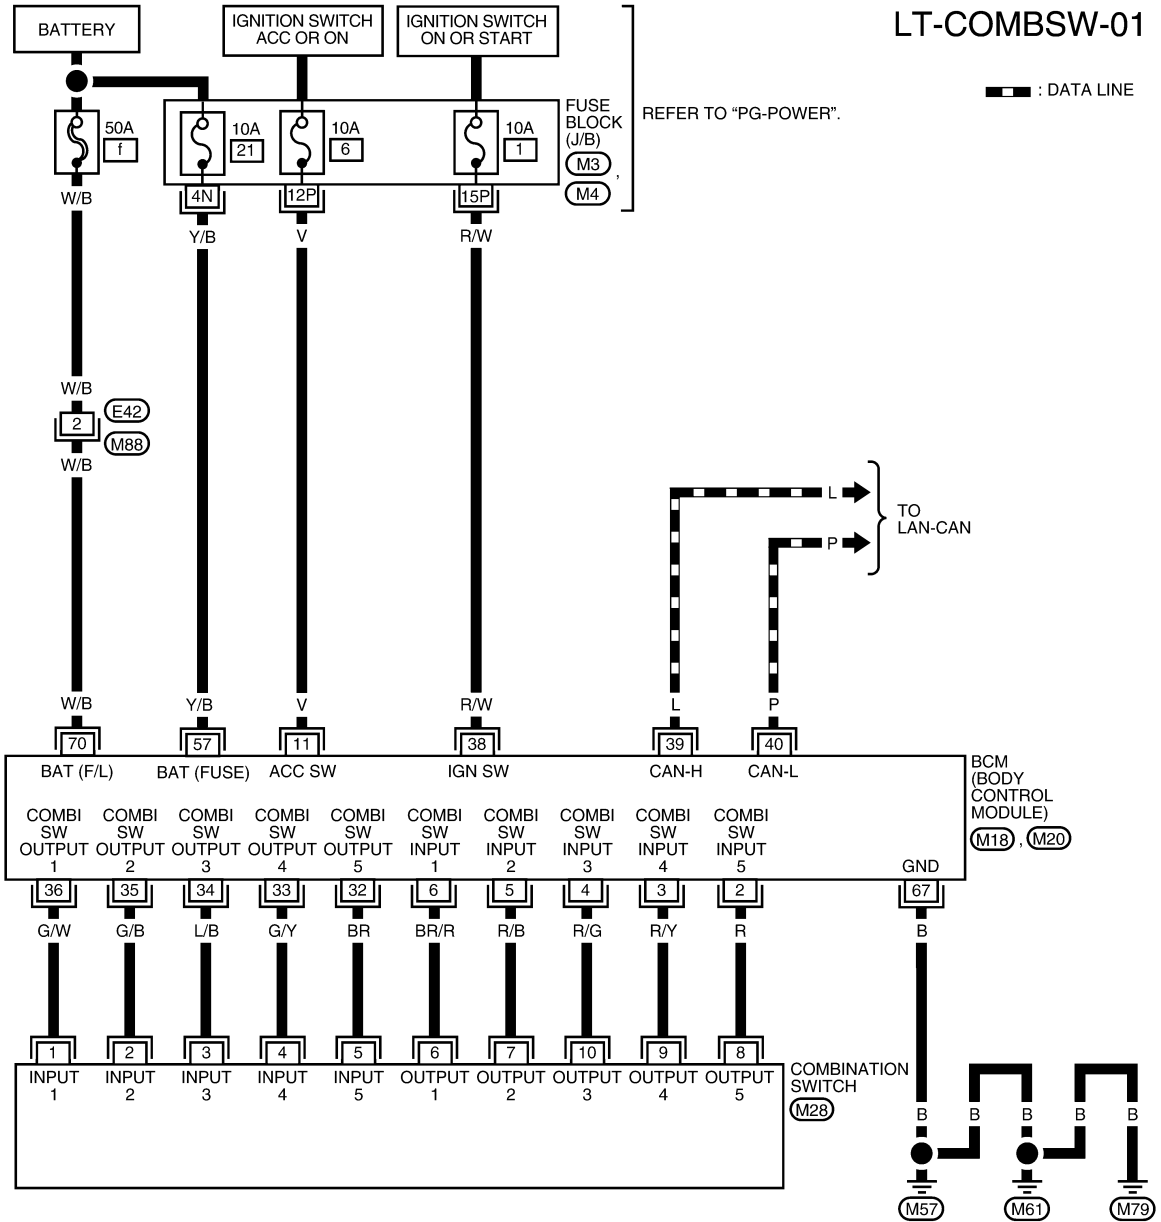

WKWA4872E

Combination Switch Reading Function

For details, refer to [BCS-3, "System Description"](#).

INFOID:000000001721603

COMBINATION SWITCH

< SERVICE INFORMATION >

CONSULT-III Function (BCM)

INFOID:000000001721604

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

DATA MONITOR

Display Item List

Monitor item name "OPERATION OR UNIT"	Contents
TURN SIGNAL R "ON/OFF"	Displays "Turn Right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn Left (ON)/Other (OFF)" status, determined from lighting switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays "Headlamp switch 1 (ON)/Other (OFF)" status, determined from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays "Auto light switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR FOG SW "ON/OFF"	Displays "Front fog lamp switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR WIPER HI "ON/OFF"	Displays "Front Wiper HI (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER LOW "ON/OFF"	Displays "Front Wiper LOW (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER INT "ON/OFF"	Displays "Front Wiper INT (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WASHER SW "ON/OFF"	Displays "Front Washer Switch (ON)/Other (OFF)" status, determined from wiper switch signal.
INT VOLUME [1 - 7]	Displays intermittent operation knob setting (1 - 7), determined from wiper switch signal.

Combination Switch Inspection

INFOID:000000001721605

1.SYSTEM CHECK

Referring to table below, check to which system the malfunctioning switch belongs.

System 1	System 2	System 3	System 4	System 5
—	FR WASHER	FR WIPER LO	TURN LH	TURN RH
FR WIPER HI	—	FR WIPER INT	PASSING	HEAD LAMP1
INT VOLUME 1	—	—	HEAD LAMP2	HI BEAM
—	INT VOLUME 3	AUTO LIGHT	—	TAIL LAMP
INT VOLUME 2	—	—	FR FOG	—

COMBINATION SWITCH

< SERVICE INFORMATION >

>> GO TO 2.

2.SYSTEM CHECK

With CONSULT-III

1. Connect CONSULT-III and select "COMB SW".
2. Select "DATA MONITOR".
3. Select "START" and confirm that other switches in malfunctioning system operate normally.
Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, turn ON-OFF normally.

Without CONSULT-III

Operate combination switch and confirm that other switches in malfunctioning system operate normally.
Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, operate normally.

Check results


Other switches in malfunctioning system operate normally.>> Replace lighting switch or wiper switch.

Other switches in malfunctioning system do not operate normally.>>GO TO 3.

3.HARNESS INSPECTION

1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check for continuity between BCM harness connector of the suspect system and the corresponding combination switch connector terminals.

Suspect system	BCM		Combination switch		Continuity	
	Connector	Terminal	Connector	Terminal		
1	M18	Input 1	6	M28	6	Yes
		Output 1	36		1	
2		Input 2	5		7	
		Output 2	35		2	
3		Input 3	4		10	
		Output 3	34		3	
4		Input 4	3		9	
		Output 4	33		4	
5		Input 5	2		8	
		Output 5	32		5	

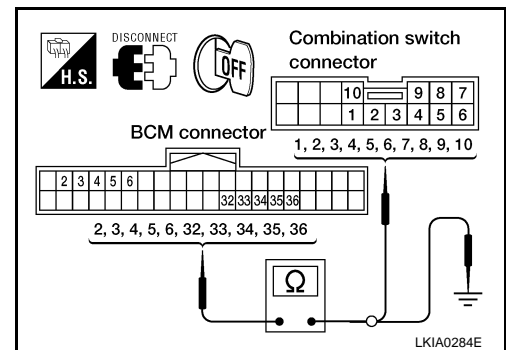

4. Check for continuity between each terminal of BCM harness connector in suspect malfunctioning system and ground.

COMBINATION SWITCH

< SERVICE INFORMATION >

Suspect system	BCM		Continuity		
	Connector	Terminal			
1	M18	Input 1	6	Ground	No
		Output 1	36		
2		Input 2	5		
		Output 2	35		
3		Input 3	4		
		Output 3	34		
4		Input 4	3		
		Output 4	33		
5		Input 5	2		
		Output 5	32		

OK or NG

OK >> GO TO 4.

NG >> Check harness between BCM and combination switch for open or short circuit.

4. BCM OUTPUT TERMINAL INSPECTION


1. Turn lighting switch and wiper switch to OFF.
2. Set wiper dial to position 4.
3. Connect BCM and combination switch connectors.
4. Turn ignition switch ON, and check combination switch input (BCM output) terminal voltage waveform of suspect malfunctioning system.

Suspect system	Combination switch		
	(+)		
	Connector	Terminal	
1	M28	Input 1	1
2		Input 2	2
3		Input 3	3
4		Input 4	4
5		Input 5	5

OK or NG

OK >> Open circuit in combination switch, GO TO 5.

NG >> Replace BCM. Refer to [BCS-18, "BCM"](#).

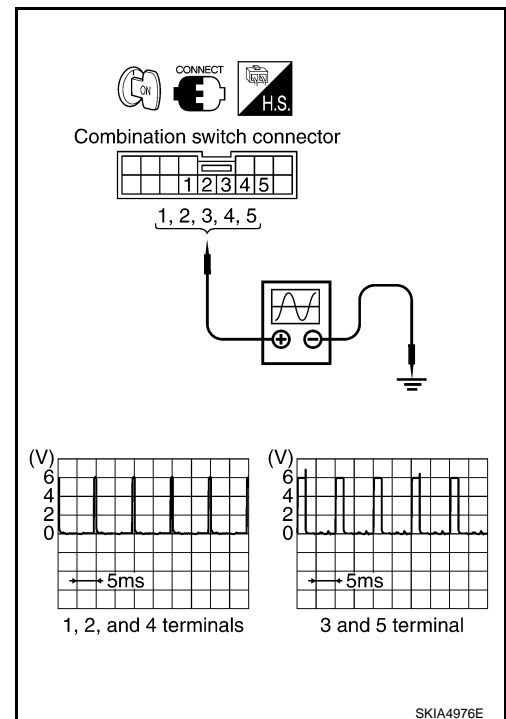

5. COMBINATION SWITCH INSPECTION

Referring to table below, perform combination switch inspection.

Procedure									
1	2		3	4		5	6		7
Replace lighting switch.	Confirm check results.	OK	INSPECTION END	Confirm check results.	OK	INSPECTION END	Confirm check results.	OK	INSPECTION END
		NG	Replace wiper switch.		NG	Replace switch base.		NG	Confirm symptom again.

COMBINATION SWITCH

< SERVICE INFORMATION >

>> Inspection End.


Removal and Installation

INFOID:000000001721606

COMBINATION SWITCH

Removal

1. Remove steering column cover.
2. While pressing tabs, pull lighting and turn signal switch towards driver door.
3. Remove combination switch.

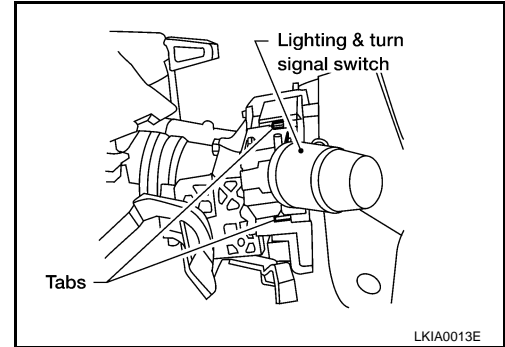

Installation

Installation is in the reverse order of removal.

Switch Circuit Inspection

INFOID:000000001721607

Refer to [LT-89. "Combination Switch Inspection"](#).

STOP LAMP

< SERVICE INFORMATION >

STOP LAMP

System Description

INFOID:000000001721608

Power is supplied at all times

- through 10A fuse [No. 20, located in fuse block (J/B)]
- to stop lamp switch terminal 1.

When the brake pedal is pressed, the stop lamp switch is closed and power is supplied

- through stop lamp switch terminal 2
- to rear combination lamp LH and RH terminal 1 and
- to high-mounted stop lamp terminal 1.

Ground is supplied

- to rear combination lamp LH and RH terminal 5
- through grounds B7 and B19, and
- to high-mounted stop lamp terminal 2
- through grounds B117 and B132 (without rear spoiler).
- through grounds B7 and B19 (with rear spoiler).

With power and ground supplied, the stop lamps illuminate.

A

B

C

D

E

F

G

H

I

J

LT

L

M

N

O

P

STOP LAMP



< SERVICE INFORMATION >

Wiring Diagram - STOP/L -

INFOID:000000001721609

LT-STOP/L-01

OS : WITHOUT REAR SPOILER
 SP : WITH REAR SPOILER

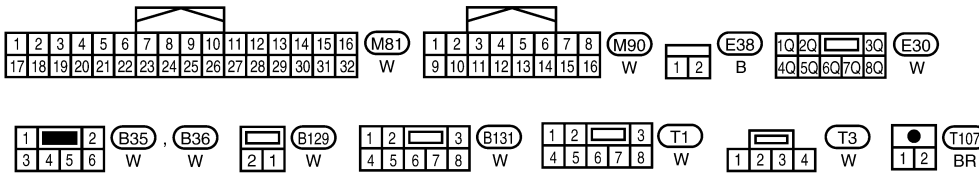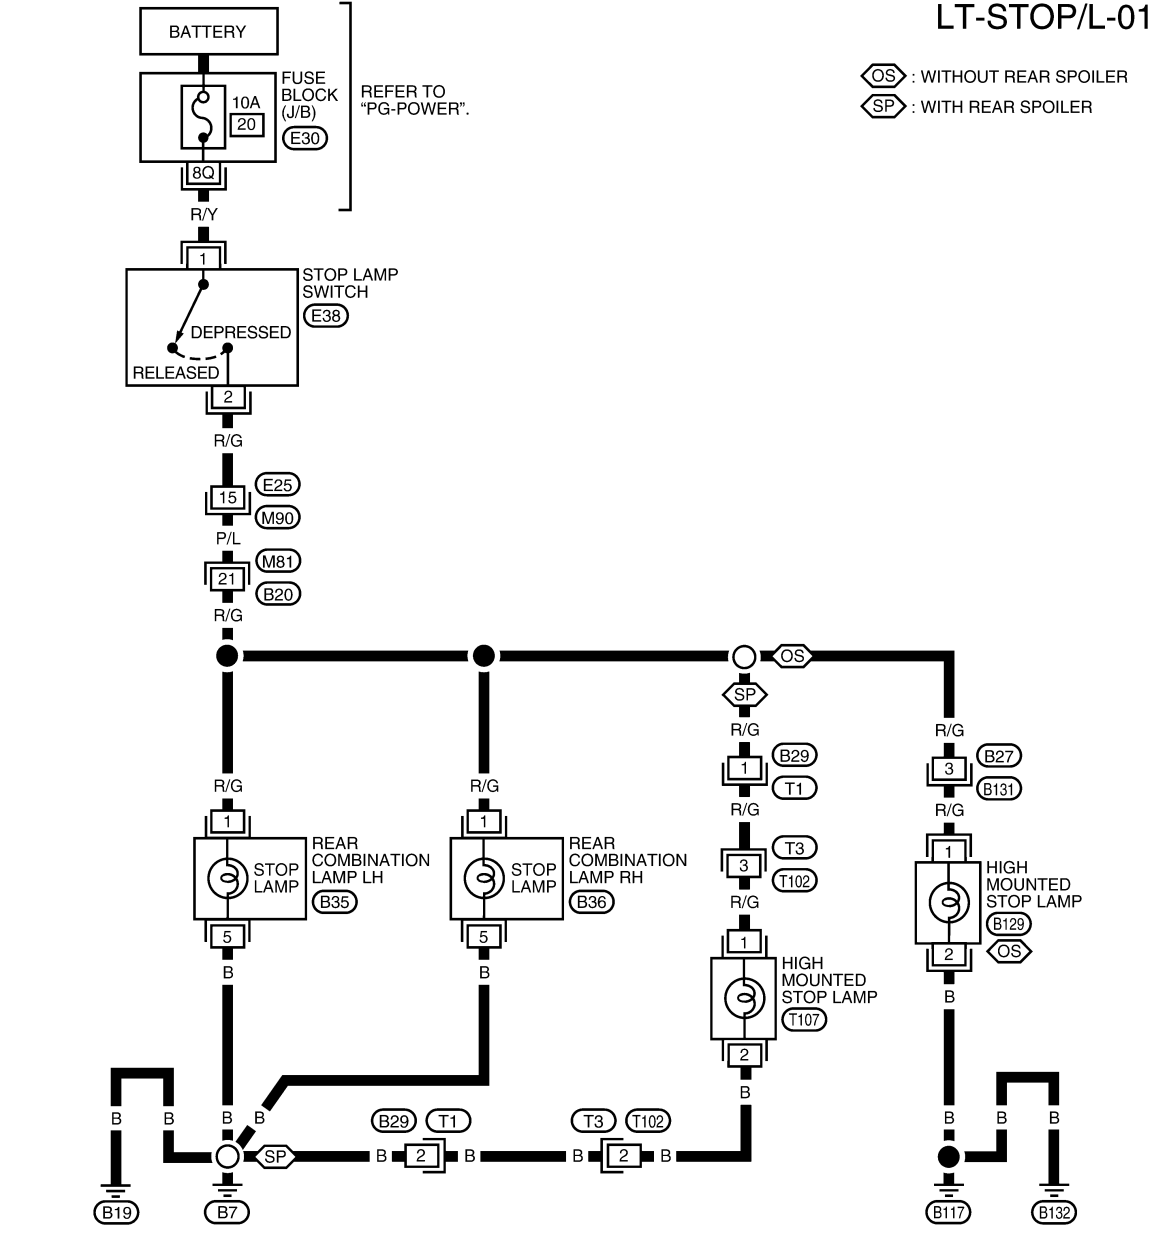

WKWA4873E

Bulb Replacement

INFOID:000000001721610

HIGH MOUNTED STOP LAMP

Refer to [EI-35. "Removal and Installation"](#).

STOP LAMP

STOP LAMP

< SERVICE INFORMATION >

Refer to [LT-109. "Bulb Replacement"](#).

Removal and Installation

INFOID:000000001721611

STOP LAMP

Refer to [LT-109. "Removal and Installation"](#)

A

B

C

D

E

F

G

H

I

J

LT

L

M

N

O

P

BACK-UP LAMP



< SERVICE INFORMATION >

BACK-UP LAMP

Wiring Diagram - BACK/L -

INFOID:000000001721612

LT-BACK/L-01

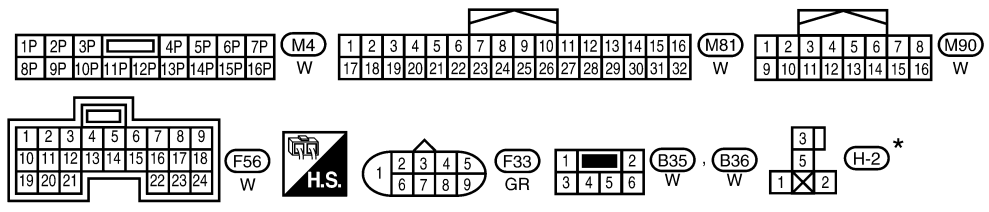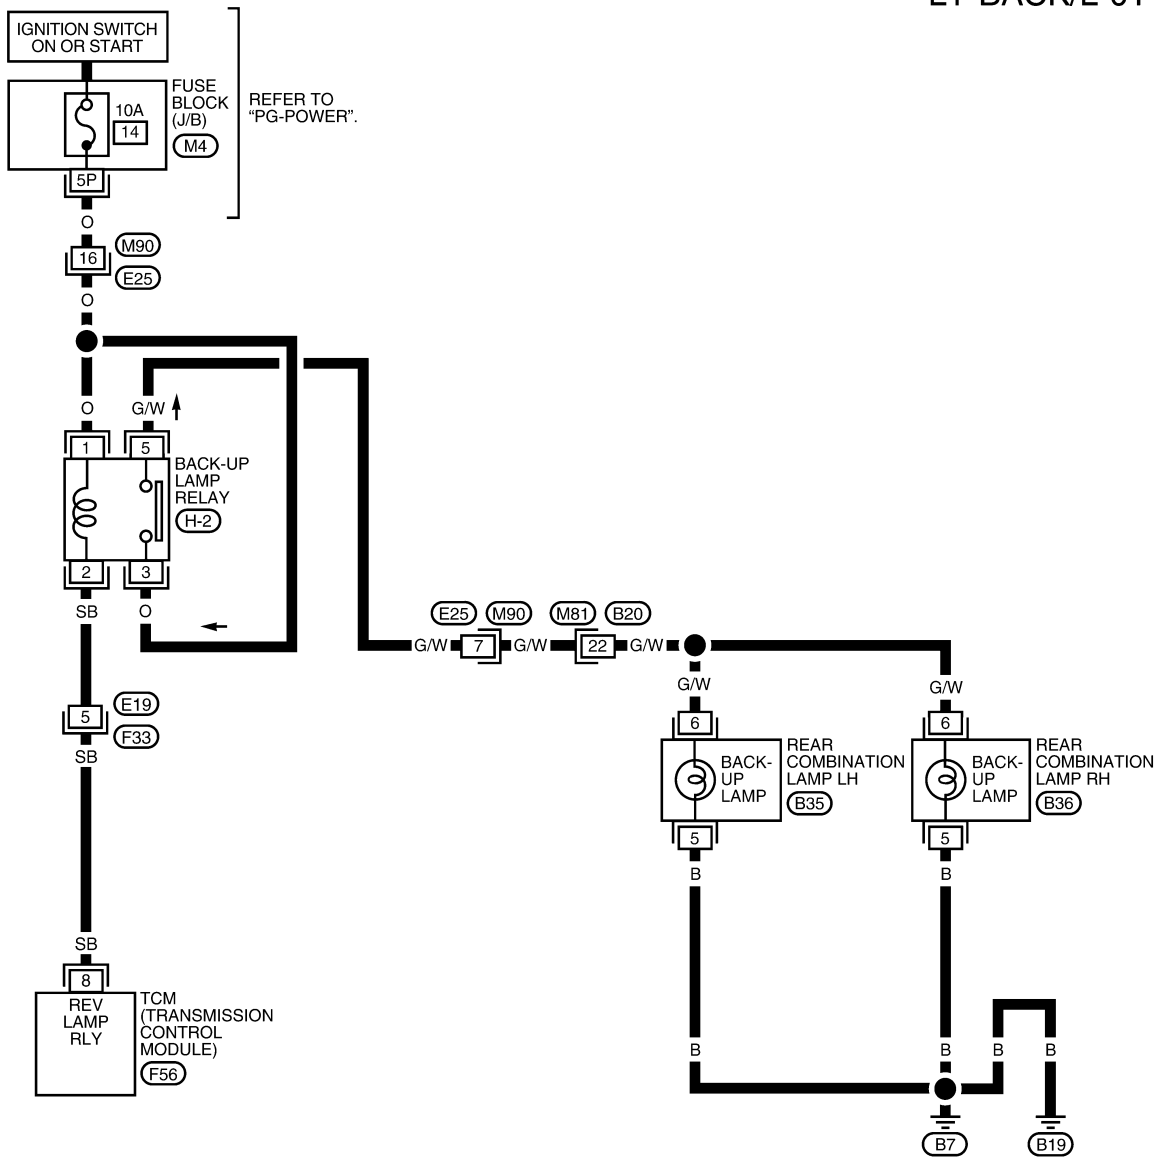

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA4874E

Bulb Replacement

BACK-UP LAMP
Refer to [LT-109. "Bulb Replacement"](#).

INFOID:000000001721613

BACK-UP LAMP

< SERVICE INFORMATION >

Removal and Installation

INFOID:000000001721614

BACK-UP LAMP

Refer to [LT-109. "Removal and Installation"](#).

- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- LT**
- L
- M
- N
- O
- P


PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

PARKING, LICENSE PLATE AND TAIL LAMPS

Component Parts and Harness Connector Location

INFOID:000000001721615

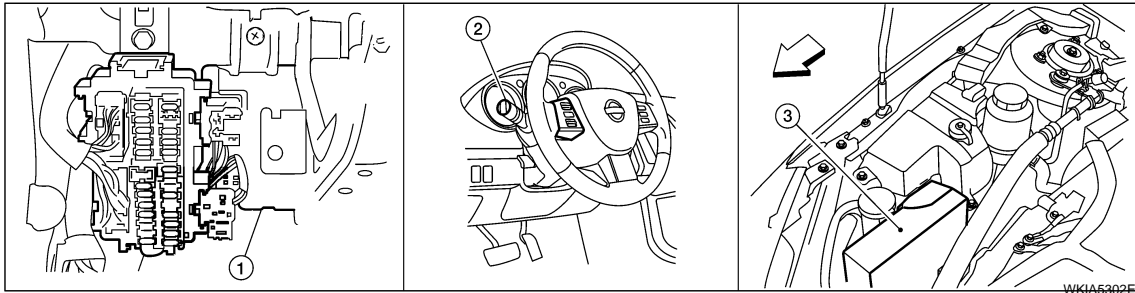

1. BCM M18 and M20
(View with instrument panel removed)
2. Combination switch (lighting switch) M28
3. IPDM E/R E121, E122 and E124

System Description

INFOID:000000001721616

Control of the parking, license plate, and tail lamp operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST position, the BCM (body control module) receives input signal requesting the parking, license plate, side marker and tail lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay. This relay, when energized, directs power to the parking, license plate, rear side marker and tail lamps, which then illuminate.

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- through 15A fuse (No. 41, located in the IPDM E/R)
- to tail lamp relay, located in the IPDM E/R, and
- to CPU of the IPDM E/R, and
- through 15A fuse (No. 34 located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter f, located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 21, located in the fuse block (J/B)]
- to BCM terminal 57.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 6, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E15 and E24.

OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the parking, license plate, side marker and tail lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the tail lamp relay coil, which when energized, directs power

- through IPDM E/R terminal 22
- to front combination lamp LH terminal 9
- to front combination lamp RH terminal 6

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

- to license plate lamp LH and RH terminal 1, and
 - to rear combination lamp LH and RH terminal 2.
- Ground is supplied

- to front combination lamp LH and RH terminal 10
- through grounds E15 and E24, and
- to license plate lamp LH and RH terminal 2
- to rear combination lamp LH and RH terminal 5
- through grounds B7 and B19

With power and ground supplied, the parking, license plate, rear side marker and tail lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3. "System Description"](#).

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST (or 2ND) position and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the parking, license, side marker and tail lamps remain illuminated for 5 minutes, then the parking, license plate, side marker and tail lamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-III.

CAN Communication System Description

INFOID:000000001721617

Refer to [LAN-3](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P


LT

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

Schematic

INFOID:000000001721618

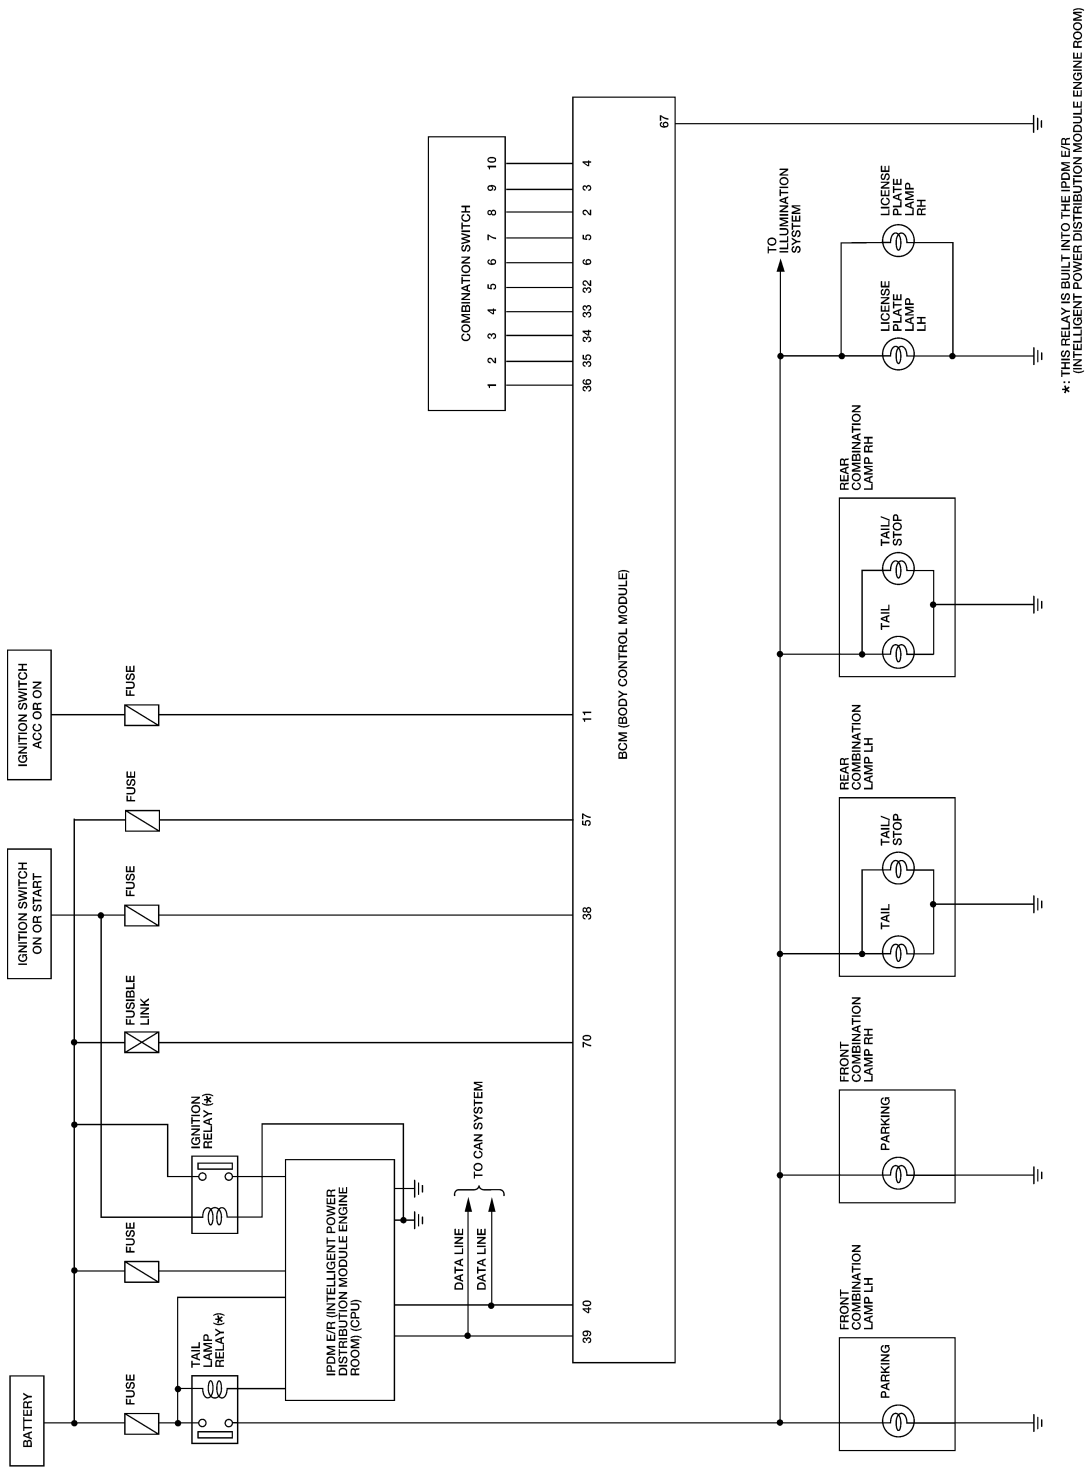

WKWA4875E





PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

Wiring Diagram - TAIL/L -

INFOID:000000001721619

LT-TAIL/L-01

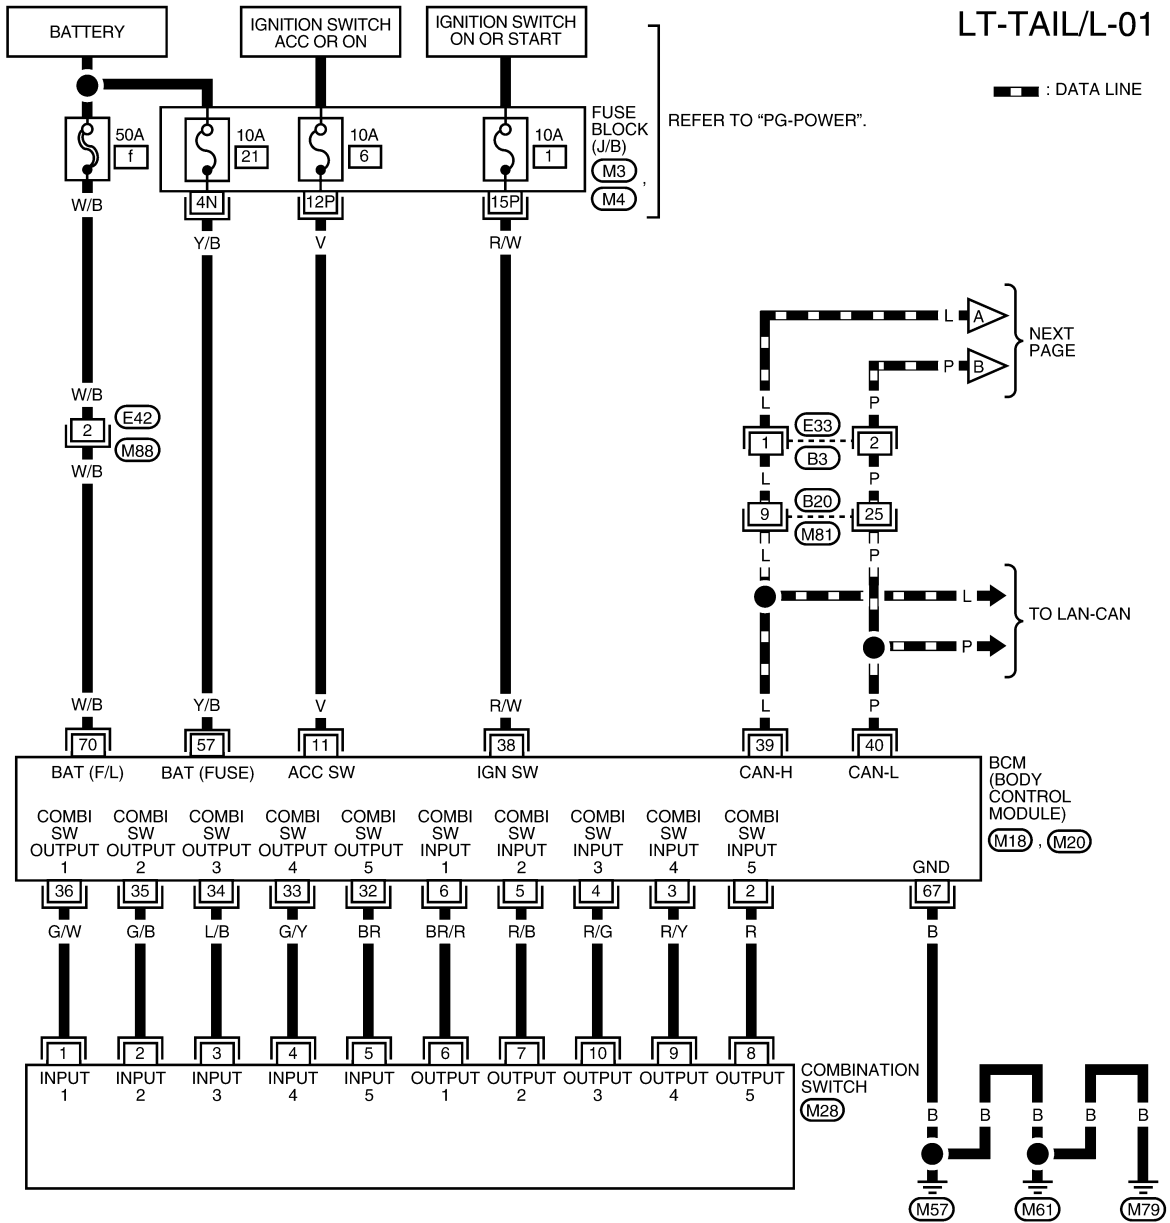

WKWA4876E

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P




LT

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

LT-TAIL/L-02

— : DATA LINE

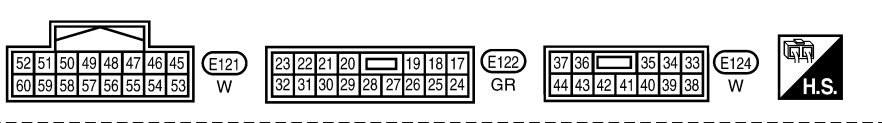
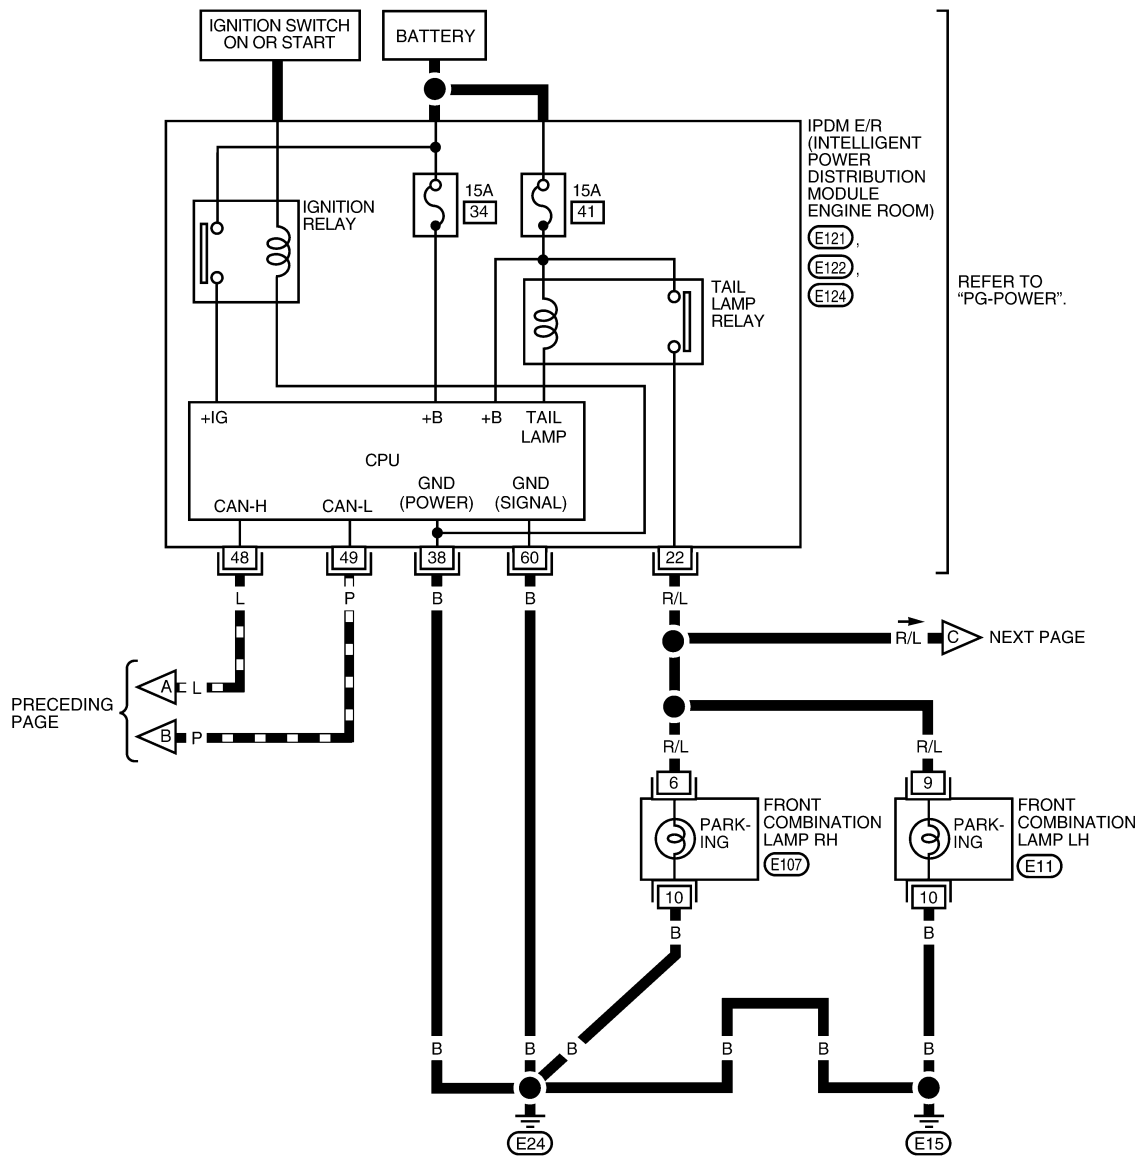


WKWA4877E

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

LT-TAIL/L-03

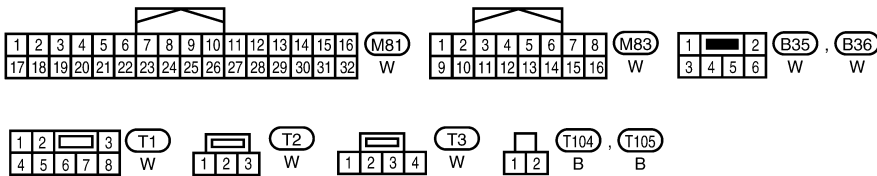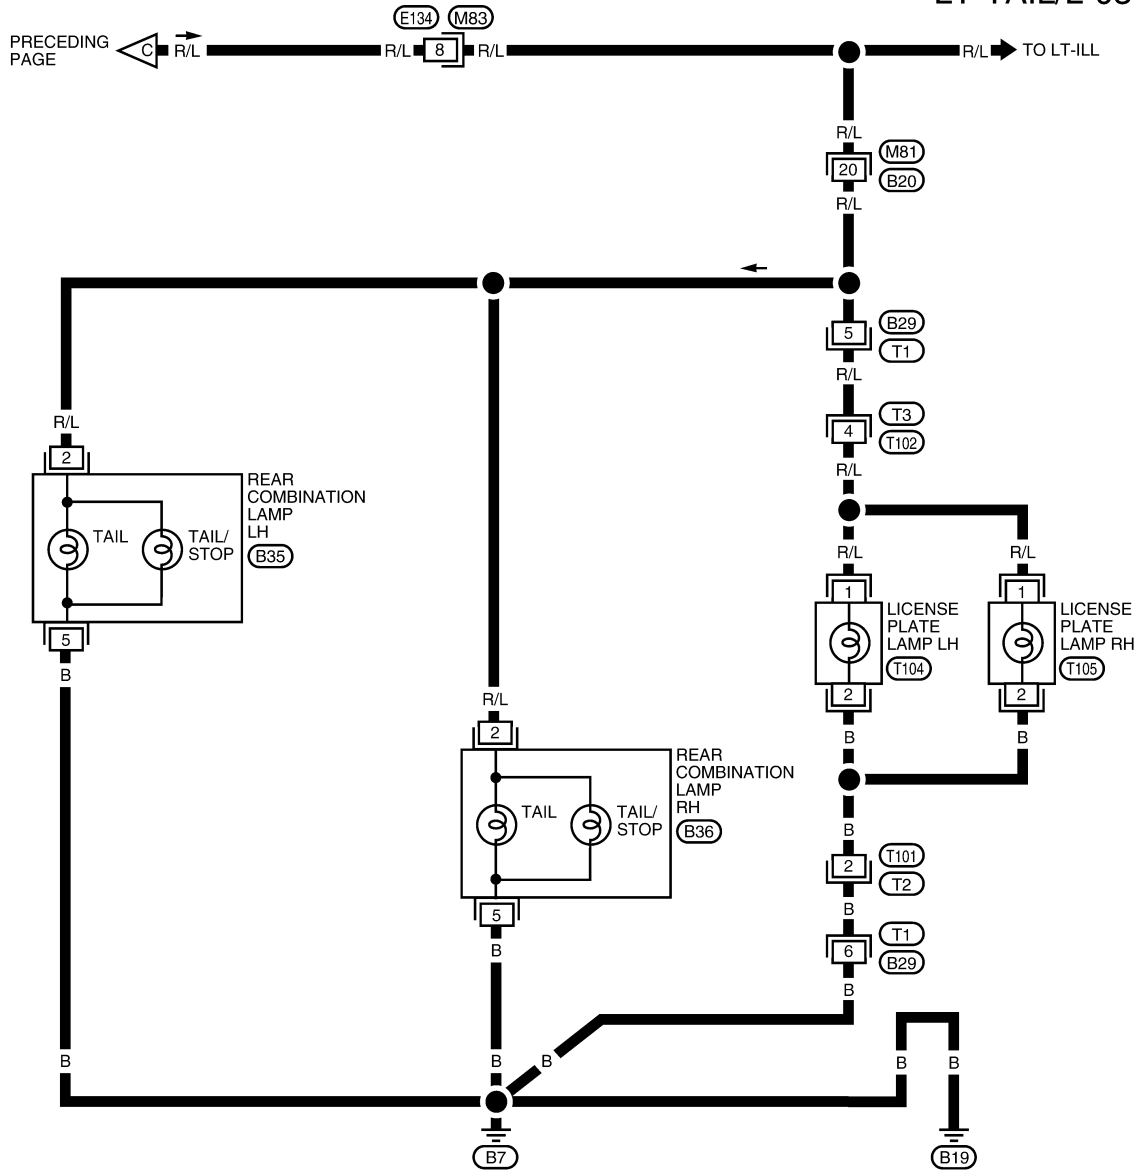

Terminal and Reference Value for BCM

Refer to [BCS-11, "Terminal and Reference Value for BCM"](#).

Terminal and Reference Value for IPDM E/R

Refer to [PG-25, "Terminal and Reference Value for IPDM E/R"](#).

WKWA4878E

INFOID:000000001721620

INFOID:000000001721621

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

How to Proceed with Trouble Diagnosis

INFOID:000000001721622

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-98, "System Description"](#).
3. Carry out the Preliminary Check. Refer to [LT-104, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Do the parking, license plate, rear marker and tail lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

INFOID:000000001721623

CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-15, "BCM Power Supply and Ground Circuit Inspection"](#).

CONSULT-III Functions

INFOID:000000001721624

Refer to [LT-18, "CONSULT-III Function \(BCM\)"](#) in HEADLAMP (FOR USA).

Refer to [LT-19, "CONSULT-III Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

Parking, License Plate and/or Tail Lamps Do Not Illuminate

INFOID:000000001721625

1. CHECK COMBINATION SWITCH INPUT SIGNAL

With CONSULT-III

Select "BCM" on CONSULT-III. With "HEAD LAMP" data monitor, make sure "LIGHT SW 1ST" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in 1ST position : LIGHT SW 1ST ON

Without CONSULT-III

Refer to [LT-89, "Combination Switch Inspection"](#).

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-89, "Combination Switch Inspection"](#).

2. ACTIVE TEST

With CONSULT-III

1. Select "IPDM E/R" on CONSULT-III, and select "ACTIVE TEST".

2. Select "TAIL LAMP".

3. Touch "ON" on "ACTIVE TEST" screen.

4. Verify parking, license plate, side marker and tail lamp operation.

Parking, license plate, side marker and tail lamp should operate

Without CONSULT-III

1. Start auto active test. Refer to [PG-21, "Auto Active Test"](#).

2. Verify parking, license plate, side marker and tail lamp operation.

Parking, license plate, side marker and tail lamp should operate

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-III, and select "DATA MONITOR".
2. Verify "TAIL&CLR REQ" turns ON when lighting switch is in 1ST position.

When lighting switch is in 1ST position : TAIL&CLR REQ ON

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).
- NG >> Replace BCM. Refer to [BCS-18, "BCM"](#).

4. CHECK INPUT SIGNAL


With CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect front combination lamp, license plate lamp and rear combination lamp connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-III, and select "ACTIVE TEST".
5. Select "TAIL LAMP".
6. Touch "ON" on "ACTIVE TEST" screen.
7. When tail lamp is operating, check voltage between front combination lamp, license plate lamp, rear combination lamp harness connectors and ground.


Without CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect front combination lamp, license plate lamp and rear combination lamp connectors.
3. Start auto active test. Refer to [PG-21, "Auto Active Test"](#).
4. When tail lamp is operating, check voltage between front combination lamp, license plate lamp, rear combination lamp harness connectors and ground.

Front combination lamp			(-)	Voltage
(+)				
Connector		Terminal	Ground	Battery voltage
RH	E107	6		
LH	E11	9		

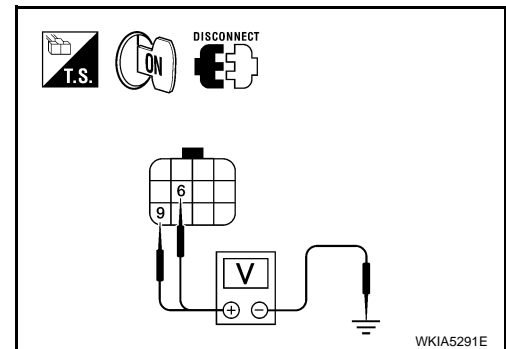

License plate lamp			(-)	Voltage
(+)				
Connector		Terminal	Ground	Battery voltage
RH	T105	1		
LH	T104			

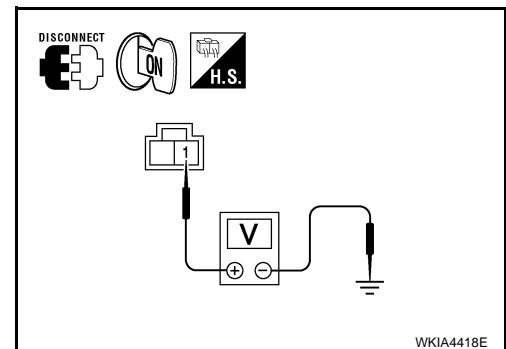


PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

Rear combination lamp (tail and side marker)		(-)	Voltage
(+) Connector			
RH	B36	2	Ground
LH	B35		
			Battery voltage

OK or NG


- OK >> GO TO 6.
- NG >> GO TO 5.

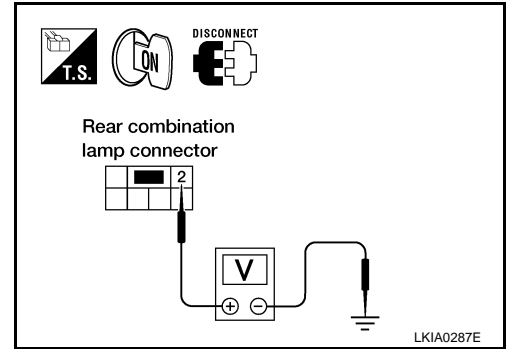

5. CHECK PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R (A) connector and front combination lamp (B) connector.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E122	22	RH	E107	Yes
		LH	E11	

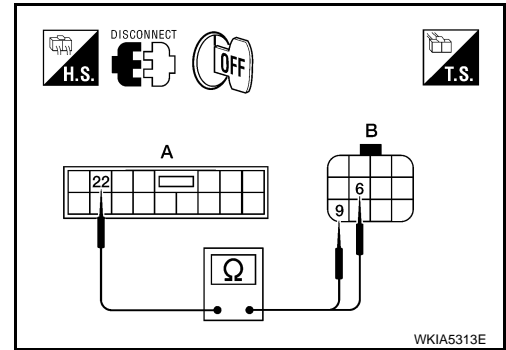


4. Check continuity between IPDM E/R harness connector and license plate lamp harness connector.

A		B		Continuity
IPDM E/R connector	Terminal	License plate lamp connector	Terminal	
E122	22	RH	T105	Yes
		LH	T104	

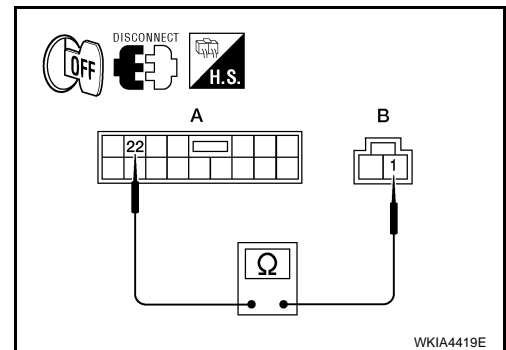

5. Check continuity between IPDM E/R harness connector and rear combination lamp harness connector.

IPDM E/R		Rear combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
E122	22	RH	B36	Yes
		LH	B35	

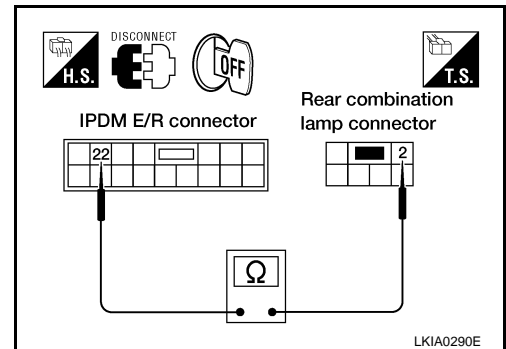

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

6. CHECK GROUND


1. Turn ignition switch OFF.

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >


- Check continuity between front combination lamp harness connector and ground.

Front combination lamp		Terminal	Ground	Continuity
Connector				
RH	E107	10	Ground	Yes
LH	E11			

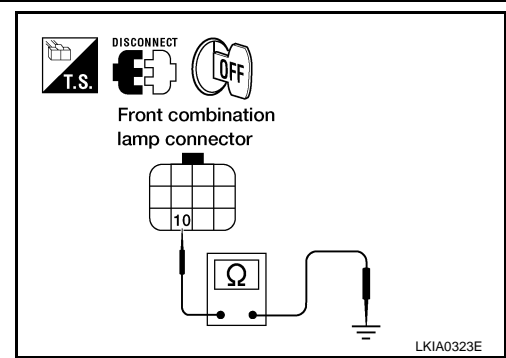


- Check continuity between license lamp plate harness connector and ground.

License plate lamp		Terminal	Ground	Continuity
Connector				
RH	T105	2	Ground	Yes
LH	T104			

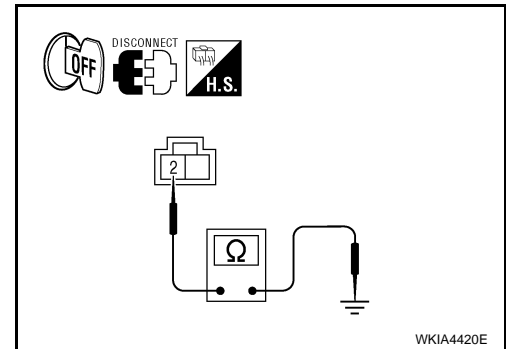

- Check continuity between rear combination lamp harness connector and ground.

Rear combination lamp (tail and side marker)		Terminal	Ground	Continuity
Connector				
RH	B36	5	Ground	Yes
LH	B35			

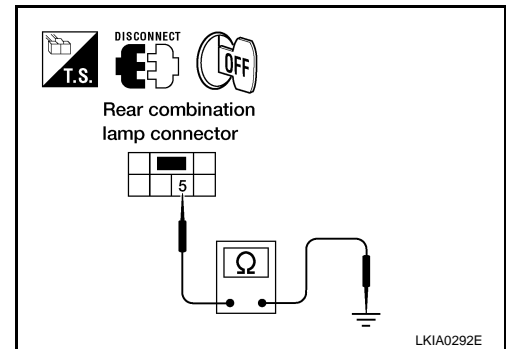

OK or NG

- OK >> Check bulbs.
- NG >> Repair harness or connector.

Parking, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)

INFOID:000000001721626

1. CHECK IPDM E/R

- Turn ignition switch ON. Turn the combination switch (lighting switch) to the OFF position. Turn ignition switch OFF.
- Verify that the parking, license plate, and tail lamps turn on and off after approximately 10 minutes.

OK or NG

- OK >> Ignition relay malfunction. Refer to [PG-18, "Function of Detecting Ignition Relay Malfunction"](#).
- NG >> Inspection End.

Bulb Replacement

INFOID:000000001721627

FRONT PARKING LAMP

Refer to [LT-30, "Bulb Replacement"](#).

TAIL LAMP

Refer to [LT-109, "Bulb Replacement"](#).

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

Bulb Replacement

INFOID:000000001721628

REAR SIDE MARKER LAMP

Refer to [LT-109. "Bulb Replacement"](#).

REAR COMBINATION LAMP

< SERVICE INFORMATION >

REAR COMBINATION LAMP

Bulb Replacement

INFOID:000000001721629

Removal

1. Remove rear combination lamp. Refer to [LT-109, "Removal and Installation"](#).
2. Turn bulb socket counterclockwise and unlock it.
3. Remove bulb.

Installation

Installation is in the reverse order of removal.


Removal and Installation

INFOID:000000001721630

REAR COMBINATION LAMP

Removal

1. Position trunk room trim aside. Refer to [EI-39, "Removal and Installation"](#).
2. Disconnect rear combination lamp connector.
3. Remove rear combination lamp mounting nuts.
4. Pull rear combination lamp to remove from the vehicle.

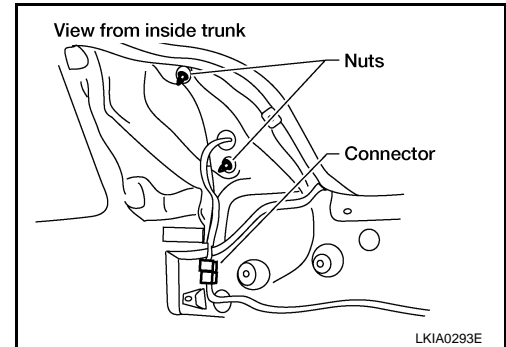

Installation

Installation is in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

LT

L

M

N

O

P


INTERIOR ROOM LAMP

< SERVICE INFORMATION >

INTERIOR ROOM LAMP

Component Parts and Harness Connector Location

INFOID:000000001721631

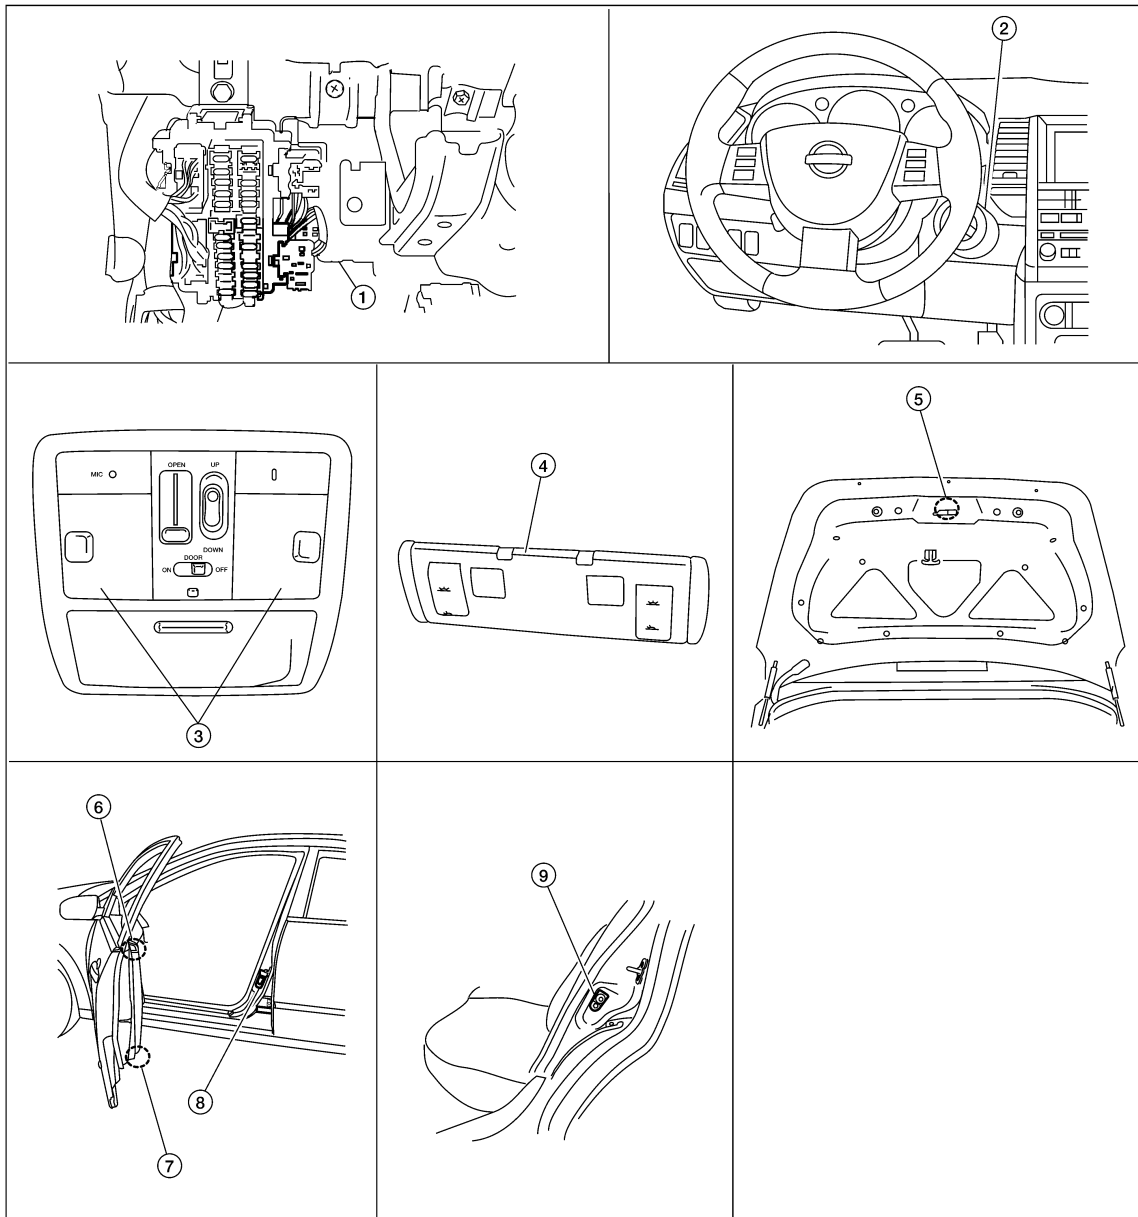

WKIA5365E

- | | | |
|---|---|--|
| 1. BCM M18, M19, and M20 (View with instrument panel removed) | 2. Key switch and ignition knob switch M73, and ignition keyhole illumination M25 | 3. Interior room lamp (room/map lamp) switch R14 |
| 4. Personal lamp R13 | 5. Trunk lamp switch and trunk release solenoid T103 | 6. Foot lamp LH M99, RH M100 |
| 7. Front step lamp LH D11, RH D109 | 8. Front door switch LH B8, RH B108 | 9. Rear door switch LH B18, RH B116 |

System Description

INFOID:000000001721632

When room lamp and personal lamp switch is in AUTO position, room lamp and personal lamp ON/OFF is controlled by timer according to signals from switches including key switch, front door switch LH, unlock signal from keyfob, door lock and unlock switch, key cylinder lock and unlock switch, ignition switch.

When room lamp and personal lamp turns ON, there is a gradual brightening over 1 second. When room lamp and personal lamp turns OFF, there is a gradual dimming over 1 second.

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

The room lamp and personal lamp timer is controlled by the BCM (body control module).
Room lamp and personal lamp timer control settings can be changed with CONSULT-III.
Ignition keyhole illumination turns ON when front door LH is opened (door switch ON) or key is removed from key cylinder. Illumination turns OFF when front door LH is closed (door switch OFF).
Step and foot lamps turn ON when a front or rear door is opened (door switch ON). Lamps turn OFF when front and rear doors are closed (all door switches OFF).

POWER SUPPLY AND GROUND

Power is supplied at all times

- through 10A fuse [No. 2, located in the fuse block (J/B)]
- to key switch and ignition knob switch terminal 3, and
- through 50A fusible link (letter f, located in the fuse and fusible link box)
- to BCM terminal 70.

When the key is inserted in key switch and ignition knob switch, power is supplied

- through the key switch and ignition knob switch terminal 4
- to BCM terminal 37.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38.

When the BCM receives input to supply power to terminal 56, power is supplied

- to front and rear step lamp LH and RH terminal 1
- to rear console lamp (with rear console) terminal 2
- to ignition keyhole illumination terminal 1
- to foot lamp LH and RH terminal 1
- to vanity mirror lamp LH and RH terminal 1
- to personal lamp terminal 2
- to interior room lamp terminal 7, and
- to trunk room lamp terminal 1.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79.

When the front door LH is opened, ground is supplied

- to BCM terminal 47
- through front door switch LH terminal 2
- through case ground of front door switch LH

When the front door RH is opened, ground is supplied

- to BCM terminal 12
- through front door switch RH terminal 2
- through case ground of front door switch RH.

When the rear door LH is opened, ground is supplied

- to BCM terminal 48
- through rear door switch LH terminal 1
- through case ground of rear door switch LH.

When the rear door RH is opened, ground is supplied

- to BCM terminal 13
- through rear door switch RH terminal 1
- through case ground of rear door switch RH.

When the front door LH is unlocked by the door lock and unlock switch, BCM receives serial data

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14 or power window and door lock/unlock switch RH terminal 16.

The main power window and door lock/unlock switch receives a ground signal

- to main power window and door lock/unlock switch terminal 17
- through grounds M57, M61 and M79.

The power window and door lock/unlock switch RH receives a ground signal

- to front power window and door lock/unlock switch terminal 11
- through grounds M57, M61 and M79.

When the front door LH is unlocked by the front door lock assembly LH (key cylinder switch), BCM receives serial data

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14.

And the main power window and door lock/unlock switch receives a ground signal

A

B

C

D

E

F

G

H

I

J

LT

L

M

N

O

P

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

- to main power window and door lock/unlock switch terminal 6
- through front door lock assembly LH (key cylinder switch) terminal 6
- through front door lock assembly LH (key cylinder switch) terminal 5
- through grounds M57, M61 and M79.

When a signal or combination of signals is received by BCM, ground is supplied

- to personal lamp terminals 4 and 6
- through interior room lamp (room/map lamps) terminal 5, and
- to interior room lamp (room/map lamps) when interior room lamp switch is in AUTO
- through interior room lamp (room/map lamps) terminal.

With power and ground supplied, the interior lamp illuminates.

SWITCH OPERATION

When front door switch LH is ON (door is open), ground is supplied

- to ignition keyhole illumination terminal 2
- through BCM terminal 1.

And power is supplied

- through BCM terminal 56
- to ignition keyhole illumination terminal 1.

When any door switch is ON (door is open), ground is supplied

- to front and rear step lamp LH and RH terminal 2
- to foot lamp LH and RH terminal 2
- through BCM terminal 62.

And power is supplied

- through BCM terminal 56
- to every step lamp terminal 1.

When personal lamp switch is HI/LO, ground is supplied

- to personal lamp terminal 5
- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 56
- to personal lamp LH and RH terminal 2.

When map lamp switch LH or RH is ON, ground is supplied

- to map lamp LH and RH terminal 4
- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 56
- to map lamp LH or RH terminal 7.

When vanity mirror lamp (LH or RH) is ON, ground is supplied

- to vanity mirror lamp (LH or RH) terminal 2
- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 56
- to vanity mirror lamp (LH and RH) terminal 1.

When rear console lamp switch (with rear console) is ON, ground is supplied

- to rear console lamp terminal 4
- through grounds B117 and B132.

And power is supplied

- through BCM terminal 56
- to rear console lamp terminal 2.

When trunk lamp switch and trunk release solenoid is ON, ground is supplied

- to BCM terminal 42
- through trunk lamp switch and trunk release solenoid (trunk lamp switch) terminal 1
- through trunk lamp switch and trunk release solenoid (trunk lamp switch) terminal 2
- through grounds B7 and B19.

When the BCM receives a ground signal on terminal 42, ground is supplied

- through BCM terminal 49
- to trunk room lamp terminal 2.

And power is supplied

- through BCM terminal 56
- to trunk room lamp terminal 1.

ROOM LAMP TIMER OPERATION

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

When interior room lamp/map lamp switch is in AUTO position and when all conditions below are met, BCM performs timer control (maximum 30 seconds) for interior room lamp/map lamp ON/OFF. In addition, when map lamp turns ON or OFF there is gradual brightening or dimming over 1 second.

Power is supplied

- through 10A fuse [No. 2, located in the fuse block (J/B)]
- to key switch and ignition knob switch terminal 3.

When key is removed from key switch and ignition knob switch (key switch OFF), power will not be supplied to BCM terminal 37.

Serial data is supplied

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14.

At the time that front door LH is opened, BCM detects that front door LH is unlocked. It determines that interior room lamp/map lamp timer operation conditions are met and turns the interior room lamp/map lamp ON for 30 seconds.

When key is in key switch and ignition knob switch (key switch ON), power is supplied

- through key switch and ignition knob switch terminal 4
- to BCM terminal 37.

When key is removed from key switch and ignition knob switch (key switch OFF), power supply to BCM terminal 37 is terminated. BCM detects that key has been removed, determines that interior room lamp and map lamp timer conditions are met, and turns the interior room lamp/map lamp ON for 30 seconds.

When front door LH opens → closes and the key is not inserted in the key switch and ignition knob switch (key switch OFF), BCM terminal 62 changes between 0V (door open) → 12V (door closed). The BCM determines that conditions for interior room lamp/map lamp operation are met and turns the interior room lamp/map lamp ON for 30 seconds.

Timer control is canceled under the following conditions.

- Front door LH is locked (when locked by keyfob, main power window and door lock/unlock switch, or front door lock assembly LH (key cylinder switch))
- Front door LH is opened (front door switch LH turns ON)
- Ignition switch ON.

INTERIOR LAMP BATTERY SAVER CONTROL

If interior lamp is left "ON", it will not be turned out even when door is closed.

BCM turns off interior lamp automatically to save battery 30 minutes after ignition switch is turned off.

BCM controls interior lamps listed below:

- Vanity mirror lamp
- Interior room lamp (room/map lamps)
- Personal lamp
- Step lamp
- Foot lamp
- Ignition keyhole illumination
- Rear console lamp (with rear console)
- Trunk room lamp

After lamps turn OFF by the battery saver system, the lamps illuminate again when

- signal received from keyfob, or main power window and door lock/unlock switch or front door lock assembly LH (key cylinder switch) is locked or unlocked
- door is opened or closed
- key is removed from or inserted in key switch and ignition knob switch.

Interior lamp battery saver control period can be changed by the function setting of CONSULT-III.


A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

Schematic

INFOID:000000001721633


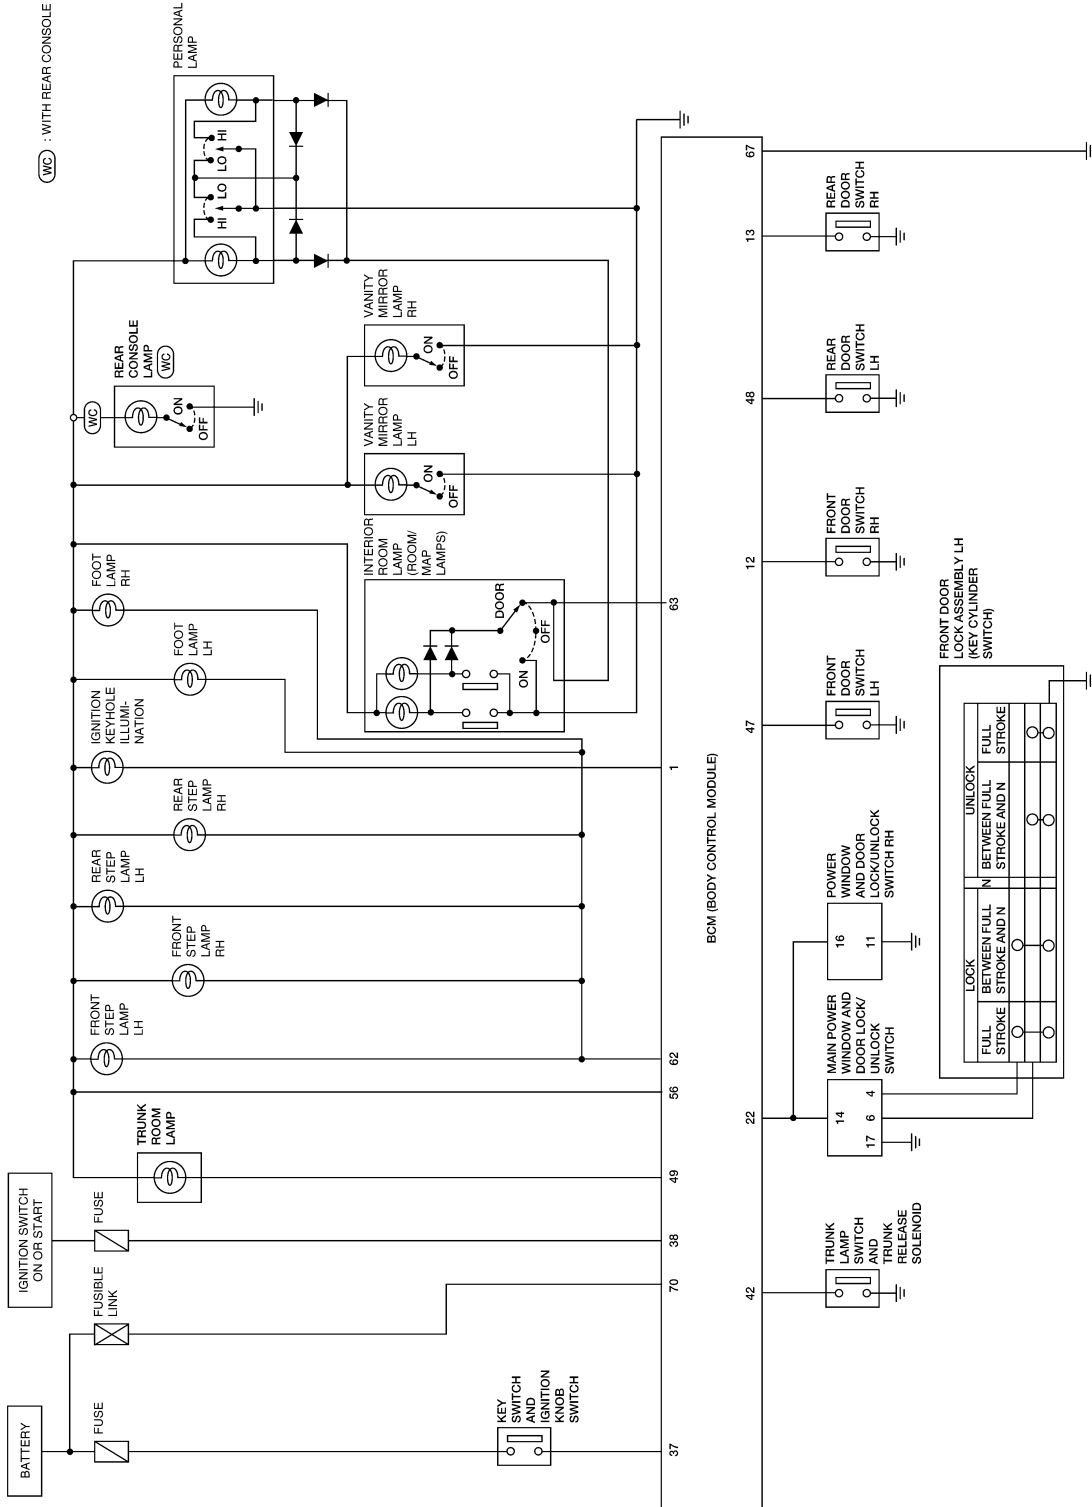


WKWA4879E

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

LT-INT/L-02

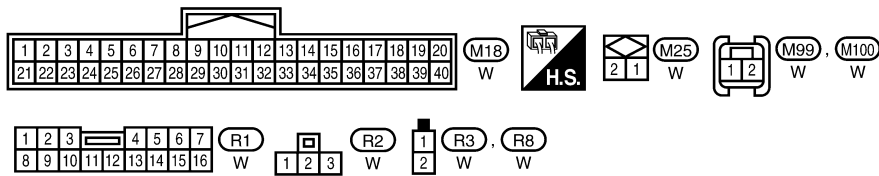
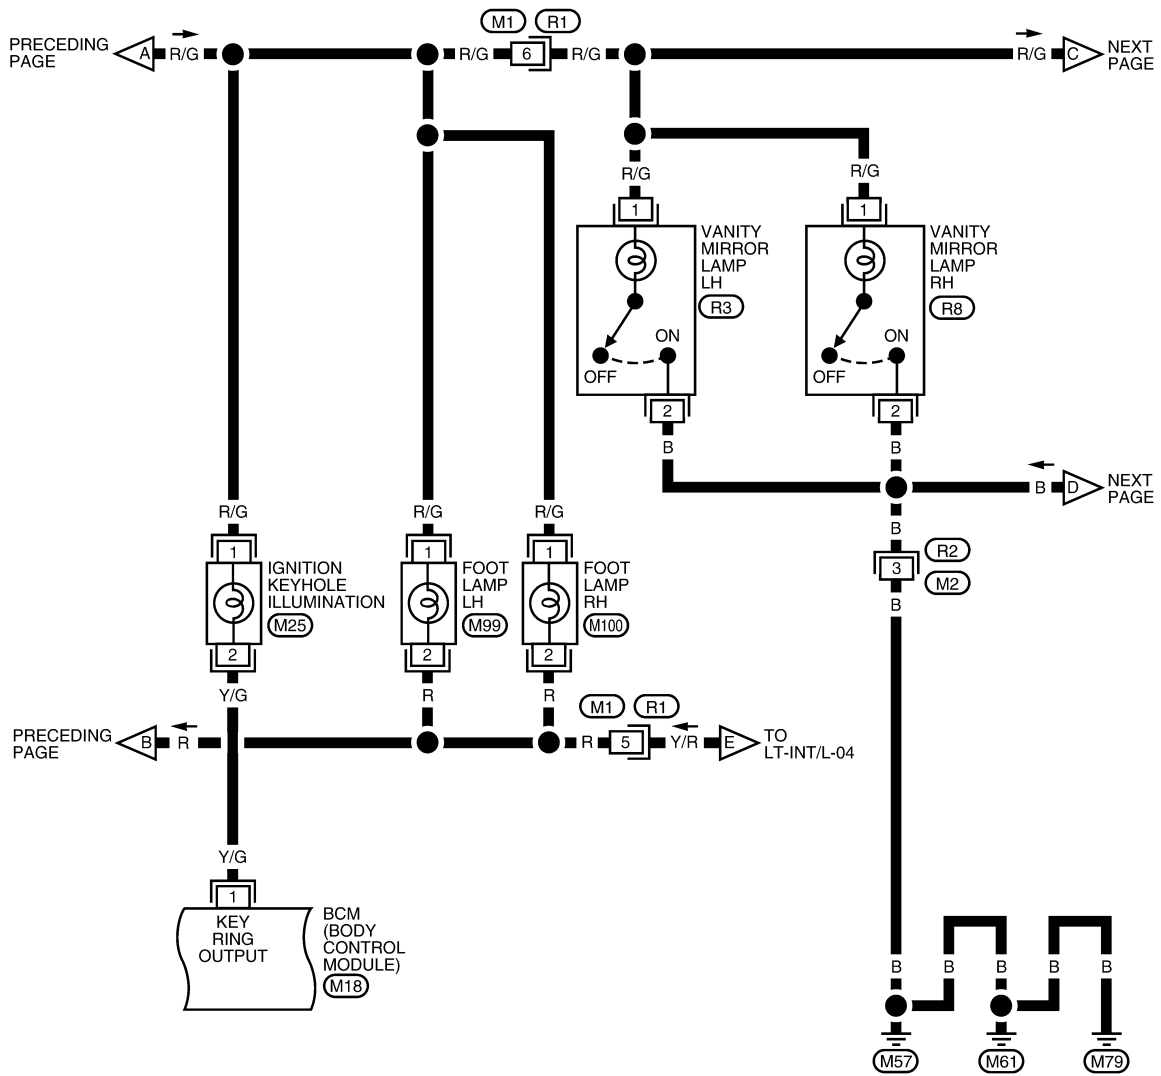


WKWA4881E

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

LT-INT/L-03

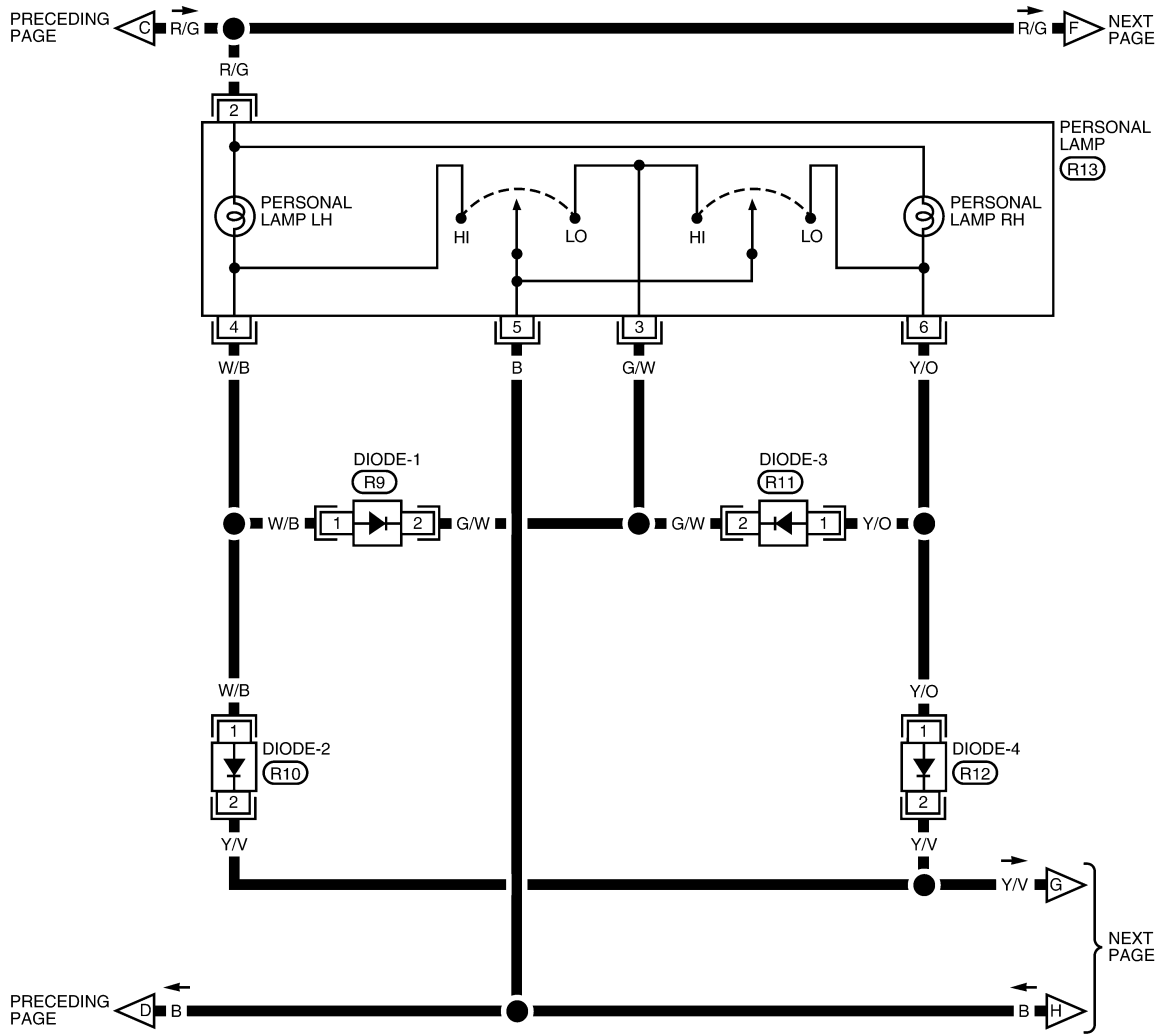

WKWA4882E



A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

LT

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

LT-INT/L-04


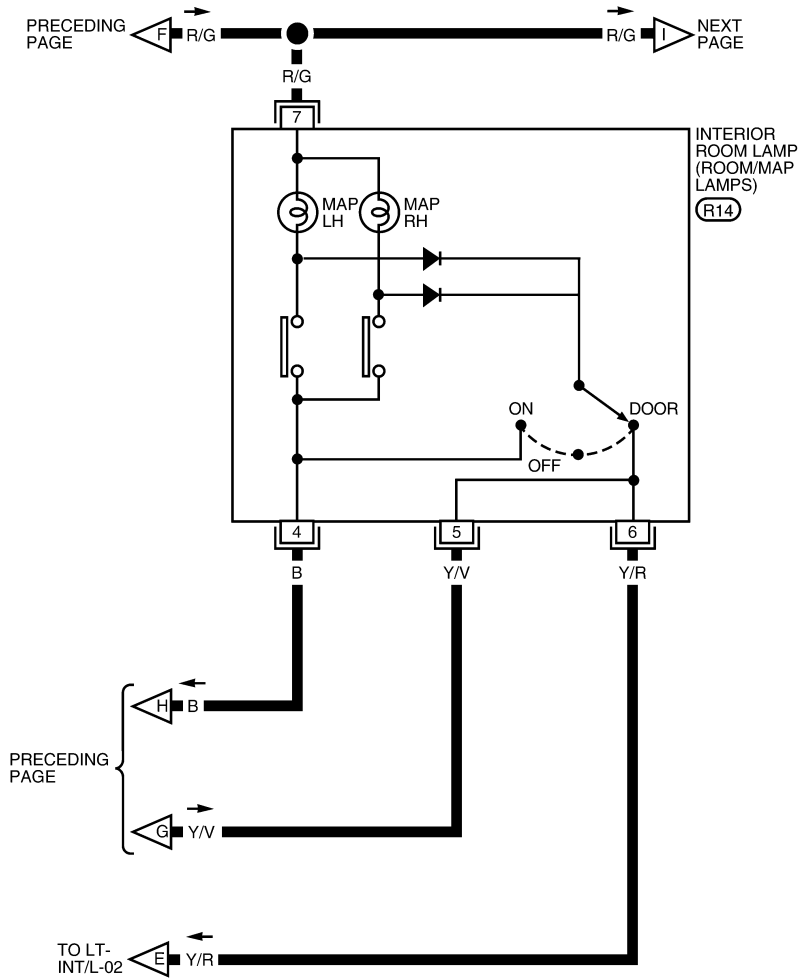


WKWA4883E

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

LT-INT/L-05


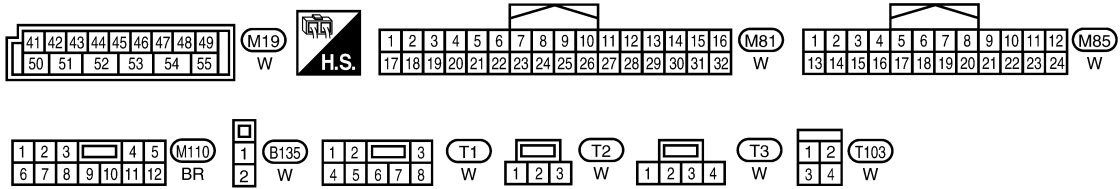
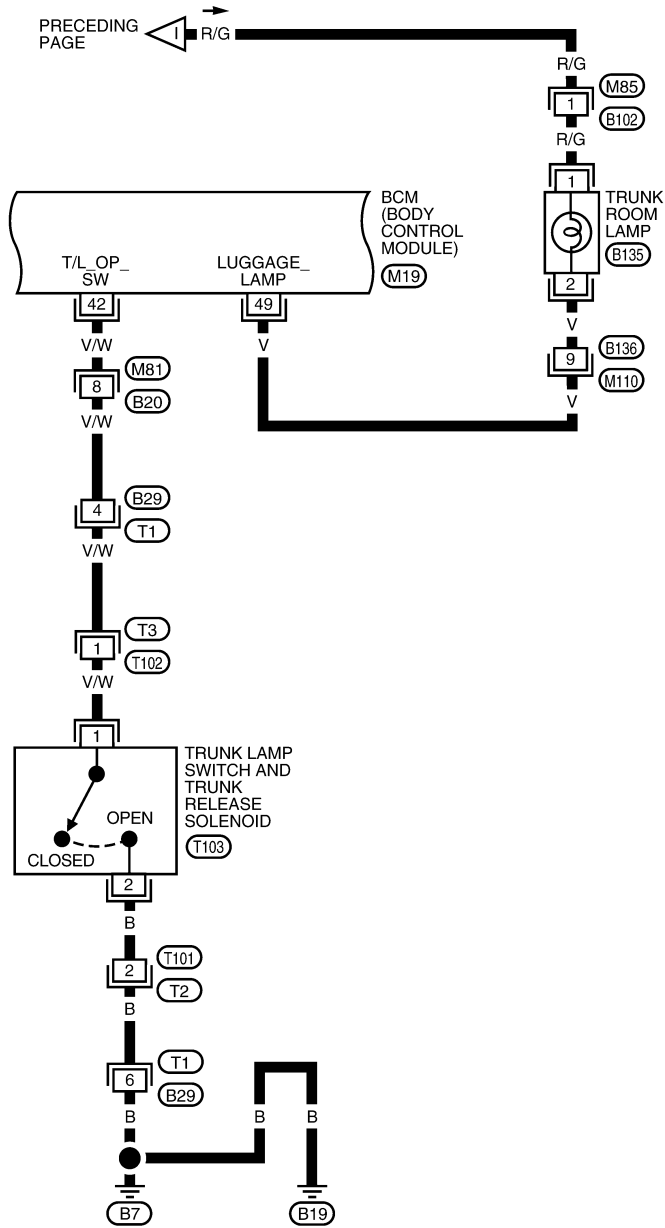


WKWA4884E

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

LT-INT/L-06

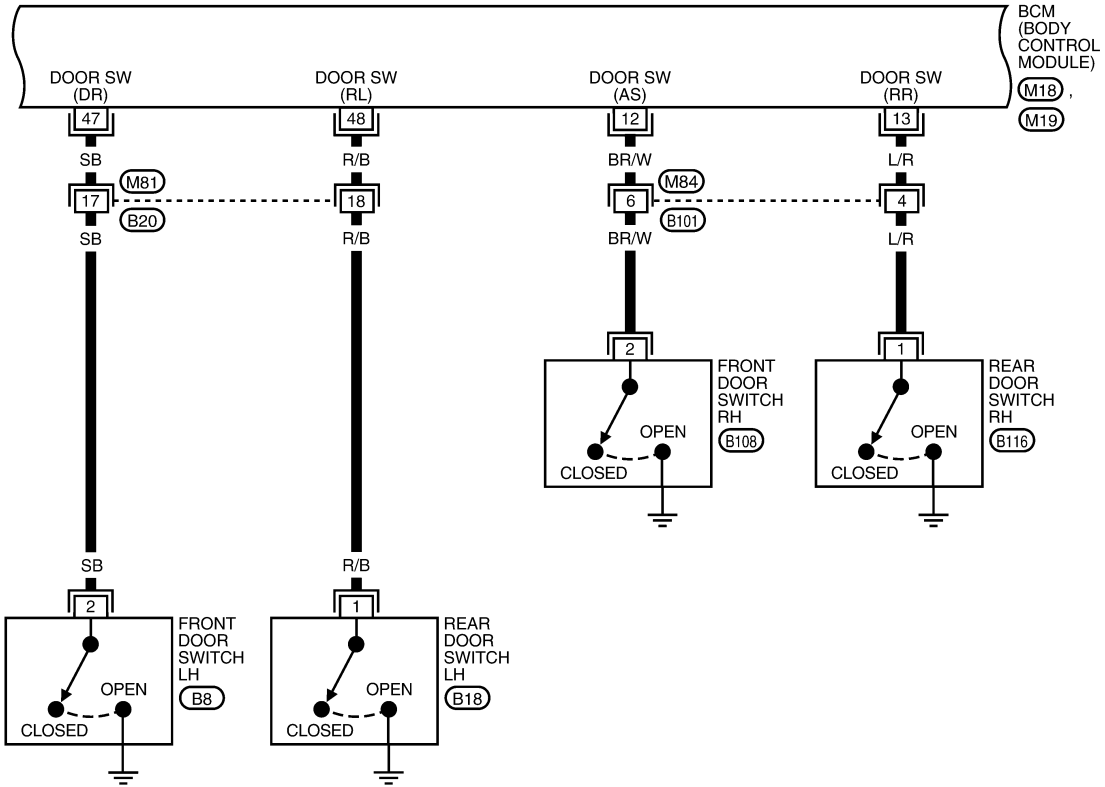

WKWA4885E

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

3. Carry out the Preliminary Check. Refer to [LT-122, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the interior room lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

INFOID:000000001721637

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-15, "BCM Power Supply and Ground Circuit Inspection"](#).

CONSULT-III Function (BCM)

INFOID:000000001721638

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

WORK SUPPORT

Display Item List

Item	Description	CONSULT-III
SET I/L D-UNLCK INTCON	The 30 seconds glowing function the interior room lamps and the ignition keyhole illumination can be selected when front door LH is released (unlocked).	ON/OFF
ROOM LAMP ON TIME SET	The time in order to escalate illumination can be adjusted when the interior room lamps and the ignition keyhole illumination is turned on.	MODE 1 - 7
ROOM LAMP OFF TIME SET	The time in order to diminish illumination can be adjusted when the interior room lamps and the ignition keyhole illumination is turned off.	MODE 1 - 7

Reference between "MODE" and "TIME" for "TURN ON/OFF".

MODE	1	2	3	4	5	6	7
Time (sec.)	0.5	1	2	3	4	5	0

DATA MONITOR

Display Item List

Monitor item	Contents
IGN ON SW	"ON/OFF" Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
KEY ON SW	"ON/OFF" Displays "Key inserted (ON)/key removed (OFF)" status judged from the key switch signal.
DOOR SW-DR	"ON/OFF" Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS	"ON/OFF" Displays "Door open (ON)/Door closed (OFF)" status, determined from front door switch RH signal.
DOOR SW-RR	"ON/OFF" Displays "Door open (ON)/Door closed (OFF)" status, determined from rear door switch RH signal.
DOOR SW-RL	"ON/OFF" Displays "Door open (ON)/Door closed (OFF)" status, determined from rear door switch LH signal.

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

Monitor item	Contents
KEY CYL LK-SW "ON/OFF"	Displays "Door locked (ON)" status, determined from key cylinder lock switch in front door LH.
KEY CYL UN-SW "ON/OFF"	Displays "Door unlocked (OFF)" status, determined from key cylinder lock switch in front door LH.
CDL LOCK SW "ON/OFF"	Displays "Door locked (ON)/Door unlocked (OFF)" status, determined from locking detection switch in front door LH.
CDL UNLOCK SW "ON/OFF"	Displays "Door unlocked (OFF)" status, determined from locking detection switch in front door RH.
KEYLESS LOCK "ON/OFF"	Displays "Locked (ON)/Other (OFF)" status, determined from lock signal.
KEYLESS UNLOCK "ON/OFF"	Displays "Unlocked (ON)/Other (OFF)" status, determined from unlock signal.

ACTIVE TEST

Display Item List

Test item	Description
INT LAMP	Interior room lamp can be operated by any ON-OFF operations.
IGN ILLUM	Ignition keyhole illumination can be operated by ON-OFF operation.

Interior Room Lamp Control Does Not Operate

INFOID:000000001721639

1. CHECK EACH SWITCH

Select "BCM" on CONSULT-III. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-122, "CONSULT-III Function \(BCM\)"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

2. ACTIVE TEST

1. With interior room lamp switch in the AUTO position, use active test to make sure interior room lamp operates.
2. Select "BCM" on CONSULT-III. Select "INT LAMP".
3. Select "ACTIVE TEST".
4. Select "INT LAMP".
5. Select "ON" on "ACTIVE TEST" screen.

OK or NG

- OK >> Replace BCM. Refer to [BCS-18, "BCM"](#).
- NG >> GO TO 3.


3. CHECK INTERIOR ROOM LAMP INPUT

1. Turn ignition switch OFF.
2. Check voltage between interior room lamp harness connector R14 terminal 7 and ground.

7 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 6.

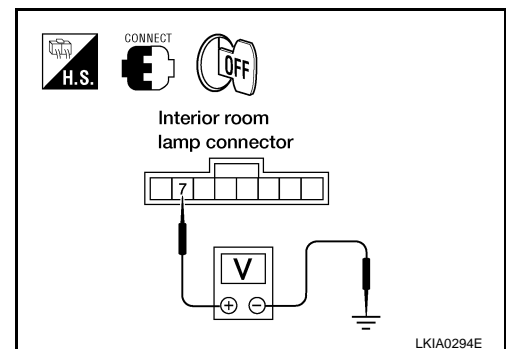

4. CHECK INTERIOR ROOM LAMP

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

1. Disconnect interior room lamp connector.
2. Check continuity between interior room lamp terminals.

Interior room lamp		Condition	Continuity
Terminal			
7	6	Interior room lamp switch is AUTO	Yes
		Interior room lamp switch is OFF	No

OK or NG

- OK >> GO TO 5.
 NG >> Replace interior room lamp.


5. CHECK INTERIOR ROOM LAMP CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM connector M20 (A) terminal 63 and interior room lamp connector R14 (B) terminal 6.

63 - 6 : Continuity should exist.

OK or NG

- OK >> Replace BCM if interior lamp does not work after setting the connector again. Refer to [BCS-18, "BCM"](#).
 NG >> Repair harness or connector.

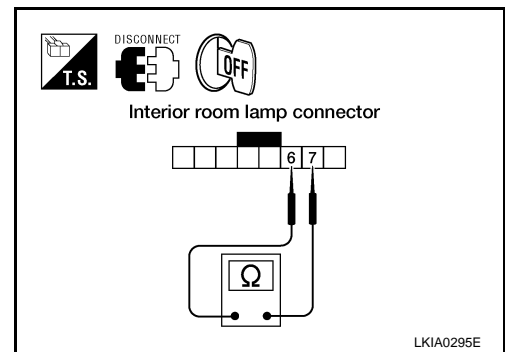



6. CHECK INTERIOR ROOM LAMP CIRCUIT

1. Disconnect BCM connector and interior room lamp connector.
2. Check continuity between BCM connector M20 (A) terminal 56 and interior room lamp connector R14 (B) terminal 7.

56 - 7 : Continuity should exist.

OK or NG

- OK >> Replace BCM if interior lamp does not work after setting the connector again. Refer to [BCS-18, "BCM"](#).
 NG >> Repair harness or connector.

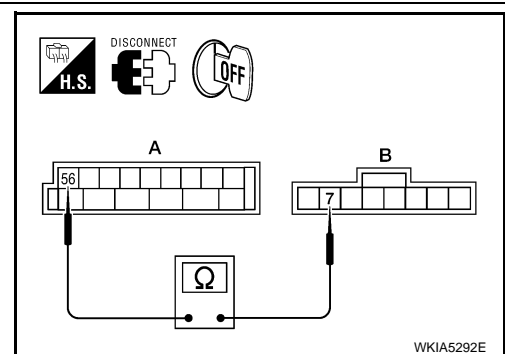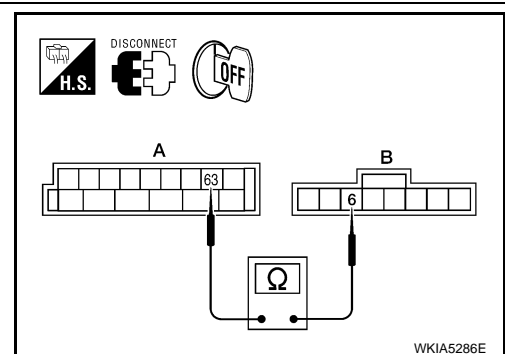

Map Lamp Control Does Not Operate

INFOID:000000001721640


1. CHECK MAP LAMP INPUT

1. Turn ignition switch OFF.
2. Check voltage between map lamp harness connector R14 terminal 7 and ground.

7 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 2.
 NG >> GO TO 4.

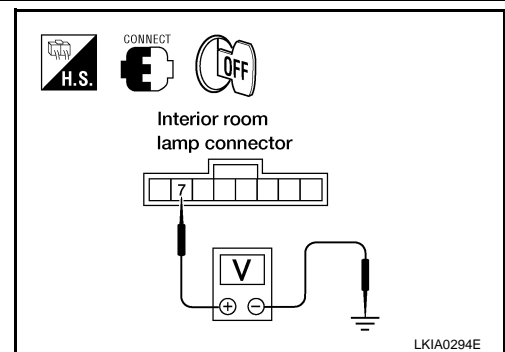

2. CHECK MAP LAMP

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

1. Disconnect map lamp connector.
2. Check continuity between map lamp terminals.

Map lamp		Condition	Continuity
Terminal			
4	7	Map lamp switch is ON	Yes
		Map lamp switch is OFF	No

OK or NG

- OK >> GO TO 3.
 NG >> Replace map lamp.

3.CHECK MAP LAMP CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between map lamp harness connector R14 terminal 4 and ground.

4 - Ground : Continuity should exist.

OK or NG

- OK >> Check connector for proper connection. Repair as necessary.
 NG >> Repair harness or connector.




4.CHECK MAP LAMP CIRCUIT

1. Disconnect BCM connector and map lamp connector.
2. Check continuity between BCM connector M20 (A) terminal 56 and map lamp connector R14 (B) terminal 7.

56 - 7 : Continuity should exist.

OK or NG

- OK >> Replace BCM if map lamp does not work after setting the connector again. Refer to [BCS-18, "BCM"](#).
 NG >> Repair harness or connector.

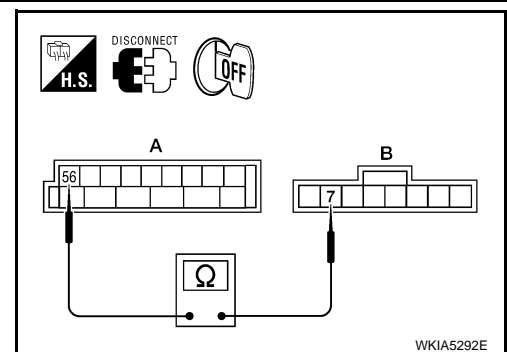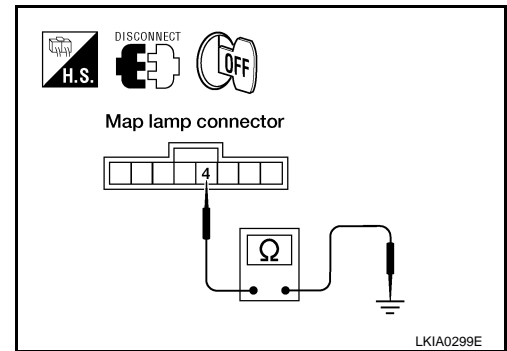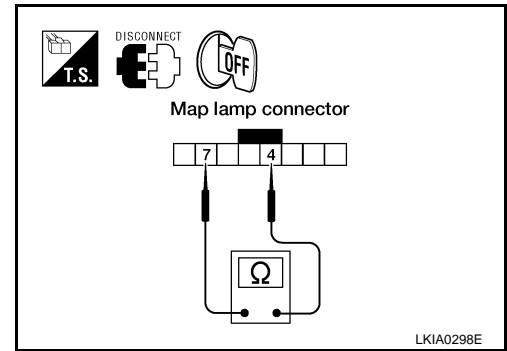

Personal Lamp Control Does Not Operate

INFOID:000000001721641

1.CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-III. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-110, "System Description"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
 NG >> Inspect malfunctioning door switch.

2.CHECK PERSONAL LAMP INPUT

1. Turn ignition switch OFF.
2. Disconnect personal lamp connector.
3. Open the rear door.

INTERIOR ROOM LAMP


< SERVICE INFORMATION >

- Check voltage between personal lamp harness connector R13 terminal 2 and ground.

2 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

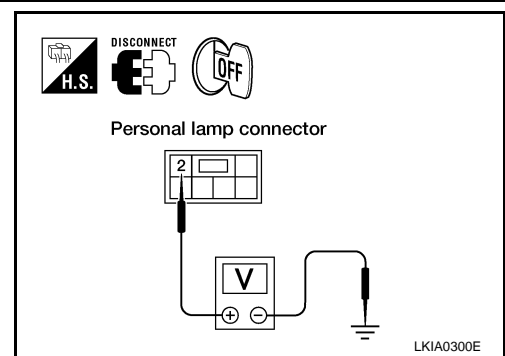


3.CHECK PERSONAL LAMP CIRCUIT

- Disconnect BCM connector.
- Check continuity between BCM connector M20 (A) terminal 56 and personal lamp connector R13 (B) terminal 2.

56 - 2 : Continuity should exist.

OK or NG

- OK >> Replace BCM if personal lamp does not work after setting the connector again. Refer to [BCS-18. "BCM"](#).
NG >> Repair harness or connector.

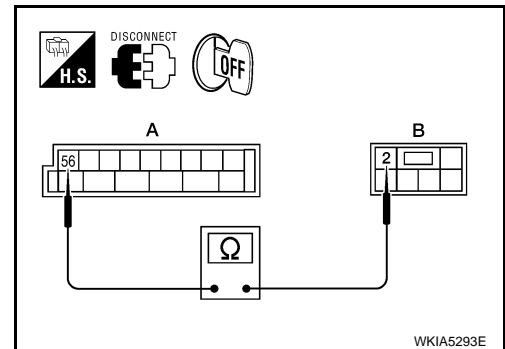


4.CHECK PERSONAL LAMP AND INTERIOR ROOM LAMP CIRCUIT

- Disconnect interior room lamp connector.
- Check continuity between personal lamp harness connector R13 terminals 4 and 6 and interior room lamp harness connector R14 terminal 5.

4, 6 - 5 : Continuity should exist.

OK or NG

- OK >> Replace personal lamp.
NG >> Repair harness or connector.

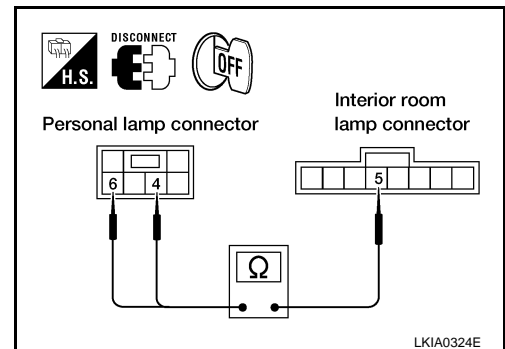

Ignition Keyhole Illumination Control Does Not Operate

INFOID:000000001721642

1.CHECK EACH SWITCH

Select "BCM" on CONSULT-III. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-122. "CONSULT-III Function \(BCM\)"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
NG >> Inspect malfunctioning switch system.

2.ACTIVE TEST

- Select "BCM" on CONSULT-III. Select "INT LAMP".
- Select "ACTIVE TEST".
- Select "IGN ILLUM".
- Select "ON" on "ACTIVE TEST" screen to make sure lamp operates.

OK or NG

- OK >> Replace BCM. Refer to [BCS-18. "BCM"](#).
NG >> GO TO 3.

3.CHECK IGNITION KEYHOLE ILLUMINATION INPUT

INTERIOR ROOM LAMP


< SERVICE INFORMATION >

1. Turn ignition switch OFF.
2. Check voltage between ignition keyhole illumination harness connector M25 terminal 1 and ground.

1 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 6.

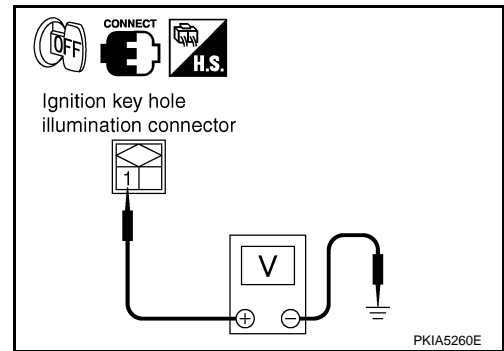


4. CHECK IGNITION KEYHOLE ILLUMINATION BULB

1. Disconnect ignition keyhole illumination connector.
2. Check continuity between ignition keyhole illumination terminals 1 and 2.

1 - 2 : Continuity should exist.

OK or NG

- OK >> GO TO 5.
NG >> Replace ignition keyhole illumination.

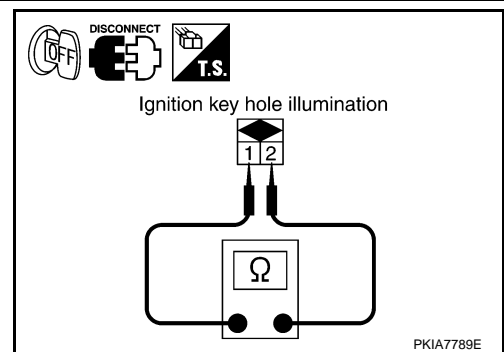


5. CHECK IGNITION KEYHOLE ILLUMINATION CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M18 terminal 1 and ignition keyhole illumination harness connector M25 terminal 2.

1 - 2 : Continuity should exist.

OK or NG

- OK >> Replace BCM if ignition keyhole illumination does not work after setting the connector again. Refer to [BCS-18, "BCM"](#).
NG >> Repair harness or connector.

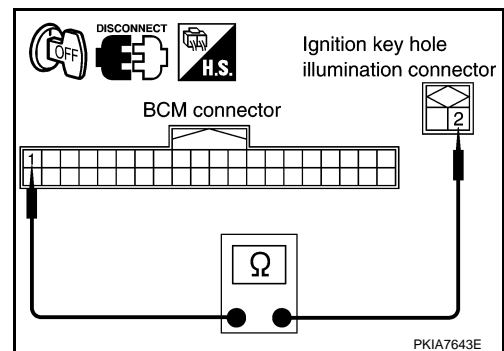


6. CHECK IGNITION KEYHOLE ILLUMINATION CIRCUIT

1. Disconnect BCM connector and ignition keyhole illumination connector.
2. Check continuity between BCM connector M20 (A) terminal 56 and ignition keyhole illumination connector M25 (B) terminal 1.

56 - 1 : Continuity should exist.

OK or NG

- OK >> Replace BCM if ignition keyhole illumination does not work after setting the connector again. Refer to [BCS-18, "BCM"](#).
NG >> Repair harness or connector.

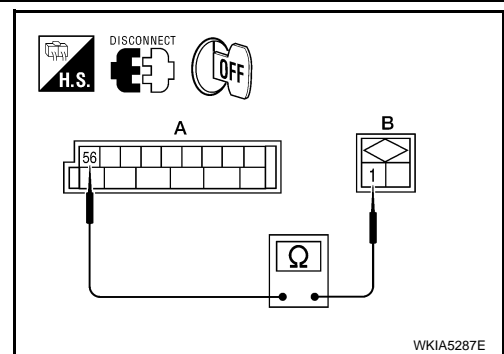

All Step Lamps Do Not Operate

INFOID:000000001721643

1. CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-III. With "INT LAMP" data monitor, make sure switches listed below turn ON-OFF linked with switch operation.

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

Switch name	CONSULT screen
Front door switch LH	DOOR SW-DR
Front door switch RH	DOOR SW-AS
Rear door switch RH	DOOR SW-RR
Rear door switch LH	DOOR SW-RL

OK or NG

- OK >> GO TO 2.
 NG >> Inspect malfunctioning switch system.


2.CHECK STEP LAMP INPUT

- Turn ignition switch OFF.
- Check voltage between front step lamp LH harness connector D11 terminal 1 and ground.

1 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 3.
 NG >> GO TO 4.

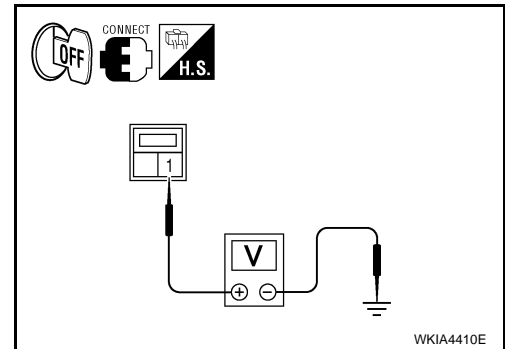


3.CHECK STEP LAMP CIRCUIT

- Disconnect BCM connector and front step lamp LH connector.
- Check continuity between BCM connector M20 (A) terminal 62 and front step lamp LH connector D11 (B) terminal 2.

2 - 62 : Continuity should exist.

OK or NG

- OK >> Replace BCM if front step lamp does not work after setting the connector again. Refer to [BCS-18, "BCM"](#).
 NG >> Repair harness or connector.

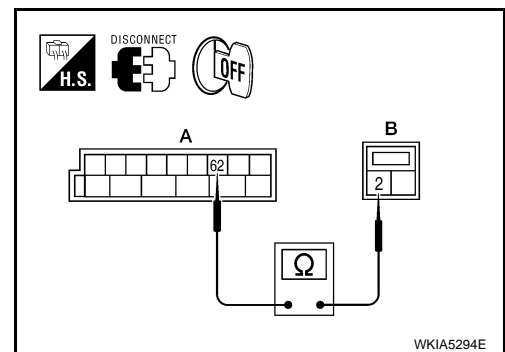


4.CHECK STEP LAMP CIRCUIT

- Disconnect BCM connector and front step lamp LH connector.
- Check continuity between BCM connector M20 (A) terminal 56 and front step lamp LH connector D11 (B) terminal 1.

56 - 1 : Continuity should exist.

OK or NG

- OK >> Replace BCM if front step lamp does not work after setting the connector again. Refer to [BCS-18, "BCM"](#).
 NG >> Repair harness or connector.

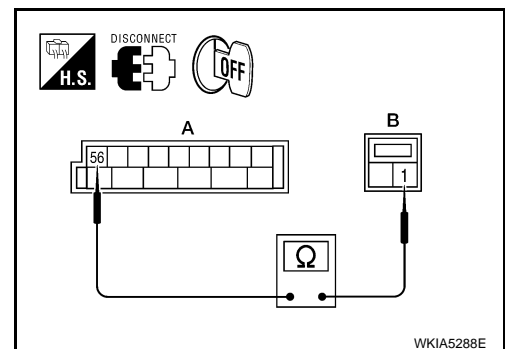

All Foot Lamps Do Not Operate

INFOID:000000001721644

1.CHECK INTERIOR ROOM LAMP OPERATION

Check interior room lamp operation.

OK or NG

- OK >> GO TO 2.
 NG >> Inspect malfunction. Refer to [LT-129, "All Interior Room Lamps Do Not Operate"](#).

INTERIOR ROOM LAMP

< SERVICE INFORMATION >


2. CHECK FOOT LAMP POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect foot lamp connector.
3. Open door.
4. Check voltage between foot lamp harness connector M99 (LH) or M100 (RH) terminal 1 and ground.

1 - Ground : **Battery voltage should exist.**

OK or NG

- OK >> GO TO 3.
NG >> Repair harness or connector.

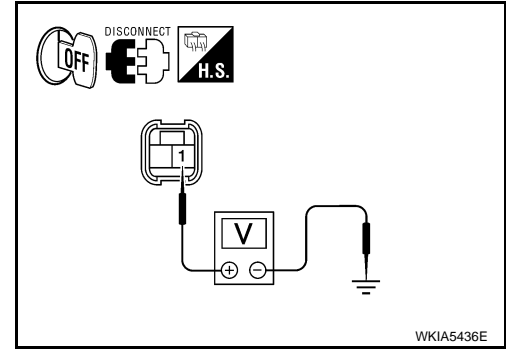


3. CHECK FOOT LAMP CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM connector M20 (A) terminal 63 and foot lamp connector M99 (B) (LH) and M100 (B) (RH) terminal 2.

63 - 2 : **Continuity should exist.**

OK or NG

- OK >> Replace foot lamp.
NG >> Repair harness or connector.

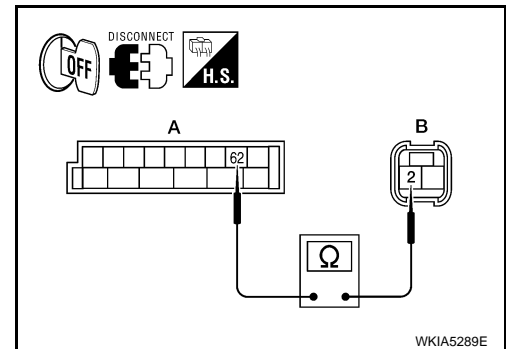

All Interior Room Lamps Do Not Operate

INFOID:000000001721645


1. CHECK POWER SUPPLY CIRCUIT

1. All interior room lamp switches are OFF.
2. Turn ignition switch ON.
3. Check voltage between BCM connector M20 terminal 56 and ground.

56 - Ground : **Battery voltage should exist.**

OK or NG

- OK >> Repair harness or connector. To prevent making a short circuit, be sure to disconnect battery negative cable after repairing harness, and then reconnect.
- NG >> Replace BCM. Refer to [BCS-18. "BCM"](#).

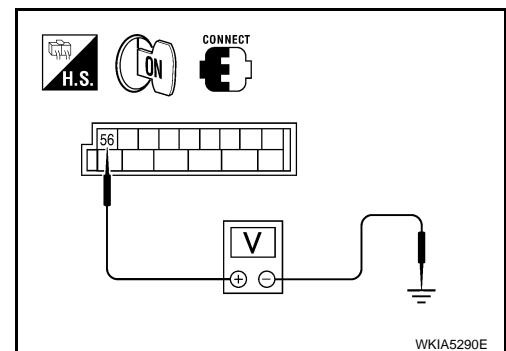

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P


ILLUMINATION

< SERVICE INFORMATION >

ILLUMINATION

Component Parts and Harness Connector Location

INFOID:000000001721646

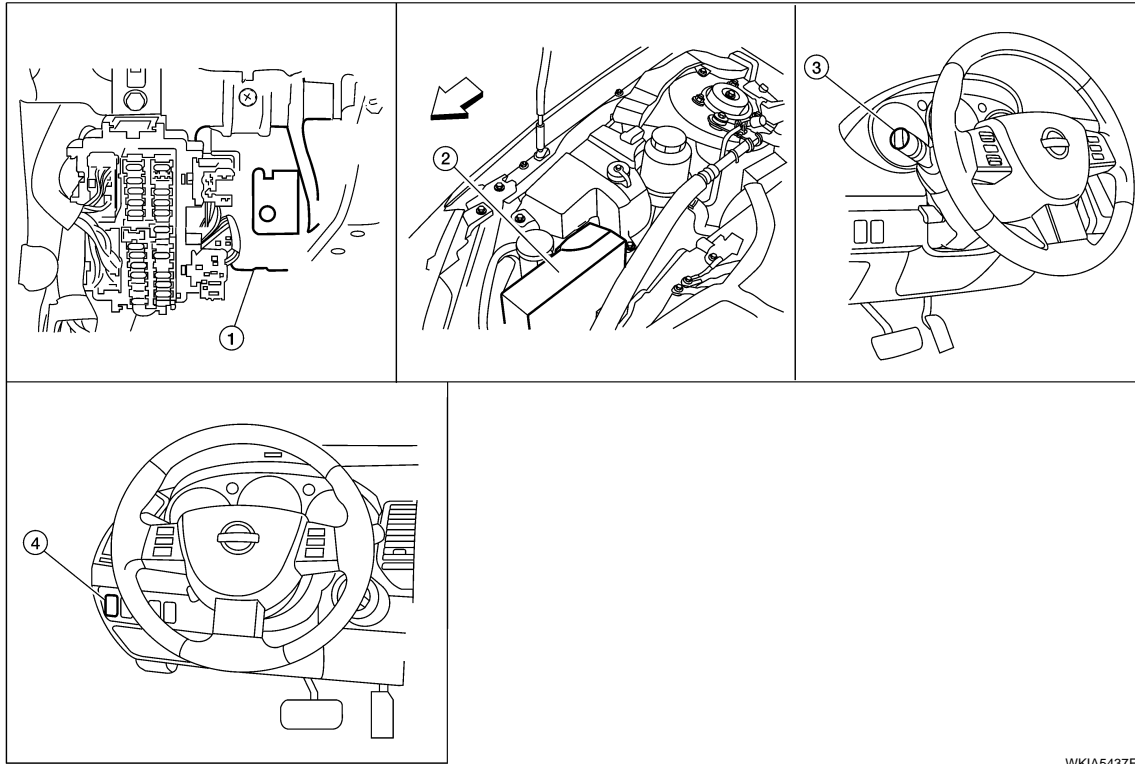

WKIA5437E

1. BCM M18, M19 and M20
(View with instrument panel removed)
2. IPDM E/R E121, E122 and E124
3. Combination switch (lighting switch) M28
4. Illumination control switch M5

System Description

INFOID:000000001721647

Control of the illumination lamps operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST or 2ND position (or if the auto light system is activated) the BCM (body control module) receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay. This relay, when energized, directs power to the illumination lamps, which then illuminate.

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- through 15A fuse (No. 34, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 15A fuse (No. 41, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- to tail lamp relay, located in the IPDM E/R, and
- through 50A fusible link (letter f, located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No.21, located in fuse block (J/B)]
- to BCM terminal 57.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38.

With the ignition switch in the ACC or ON position, power is supplied

ILLUMINATION

< SERVICE INFORMATION >

- through 10A fuse [No. 6, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61, and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E15 and E24.

ILLUMINATION OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the tail lamp relay which, when energized, directs power

- through IPDM E/R terminal 22
- to illumination control switch terminal 1
- to CVT device terminal 1
- to TCS OFF switch terminal 3 (without VDC)
- to VDC OFF switch terminal 3 (with VDC)
- to AV switch terminal 3
- to hazard switch terminal 3
- to NAVI control unit terminal 61 (with NAVI)
- to front air control switch terminal 5
- to audio unit terminal 9 (without NAVI), terminal 8 (with NAVI)
- to front heated seat switch (LH and RH) terminal 5 (with front heated seats)
- to heated steering wheel switch terminal 3 (with heated steering wheel)
- to Bluetooth ON indicator terminal 3 (with Bluetooth)
- to interior room lamp (console box illumination) terminal 2
- to glove box lamp terminal 1
- to main power window and door lock/unlock switch terminal 16
- to power window and door lock/unlock switch RH terminal 5
- to rear sunshade switch (front and rear) terminal 5 (with rear sunshade)
- to rear heated seat switch (LH and RH) terminal 5 (with rear sunshade)
- to door mirror remote control switch terminal 16
- to display control unit terminal 14 (with NAVI)
- to combination meter terminal 13
- to resistor-1 terminal 1
- through resistor-1 terminal 2
- to combination switch (spiral cable) terminal 26
- to steering switch through combination switch (spiral cable) terminal 18.

Illumination control

- through illumination control switch terminal 2
- to CVT device terminal 2
- to TCS OFF switch terminal 4 (without VDC)
- to VDC OFF switch terminal 4 (with VDC)
- to AV switch terminal 4 (with NAVI)
- to hazard switch terminal 4
- to front air control terminal 6
- to audio unit terminal 8 (without NAVI)
- to audio unit terminal 7 (with NAVI)
- to front heated seat switch (LH and RH) terminal 6 (with front heated seats)
- to heated steering wheel switch terminal 4 (with heated steering wheel)
- to interior room lamp (console box illumination) terminal 3
- to main power window and door lock/unlock switch terminal 12
- to power window and door lock/unlock switch RH terminal 1
- to rear sunshade switch (front and rear) terminal 6 (with rear sunshade)
- to rear heated seat switch (LH and RH) terminal 6 (with rear sunshade)
- to door mirror remote control switch terminal 15
- to combination meter terminal 14
- to combination switch (spiral cable) terminal 27
- to steering switch through spiral cable terminal 21.

Ground is supplied

- to illumination control switch terminal 3

A

B

C

D

E

F

G

H

I

J

LT

L

M

N

O

P

ILLUMINATION

< SERVICE INFORMATION >

- to glove box lamp terminal 2
- to NAVI control unit terminal 1 (with NAVI)
- through grounds M57, M61 and M79.

With power and ground supplied, illumination lamps illuminate.

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST or 2ND position (or if auto light system is activated) and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the illumination lamps remain illuminated for 5 minutes, then the illumination lamps are turned off.

When the lighting switch is turned from OFF to 1ST or 2ND position (or if auto light system is activated) after illumination lamps are turned off by the battery saver control, the illumination lamps illuminate again.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-III.

CAN Communication System Description

INFOID:000000001721648


Refer to [LAN-3](#).

ILLUMINATION

< SERVICE INFORMATION >

Schematic

INFOID:000000001721649

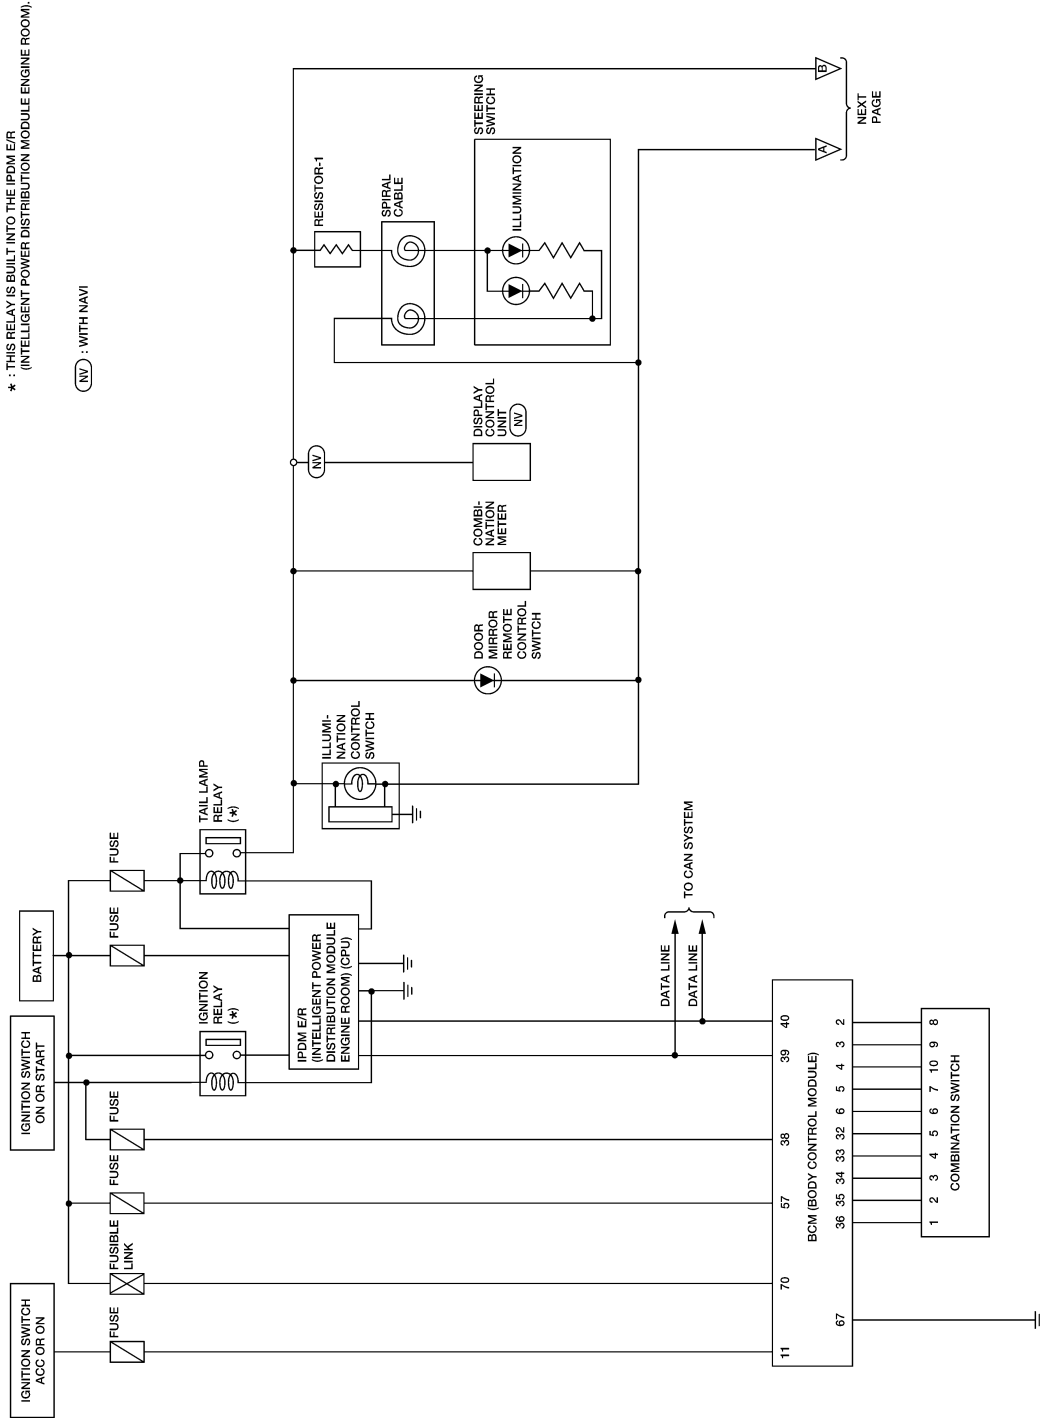

* : THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM).

(NV) : WITH NAVI

NEXT PAGE


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

LT

WKWA4887E

ILLUMINATION

< SERVICE INFORMATION >

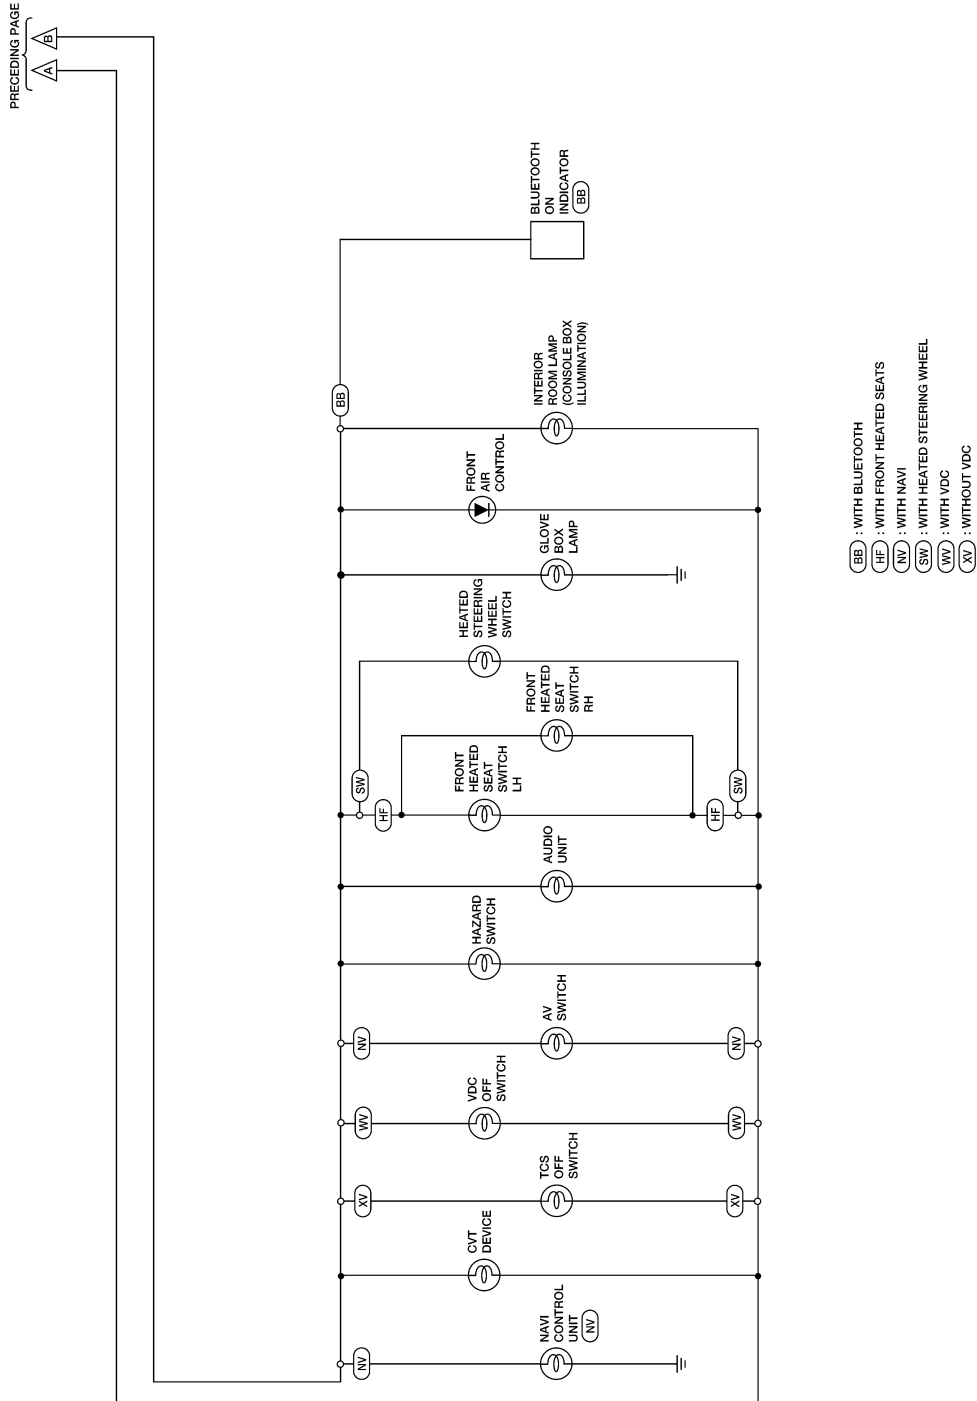

ALLWA0132GB

ILLUMINATION





< SERVICE INFORMATION >

Wiring Diagram - ILL -

INFOID:000000001721650

LT-ILL-01

— : DATA LINE

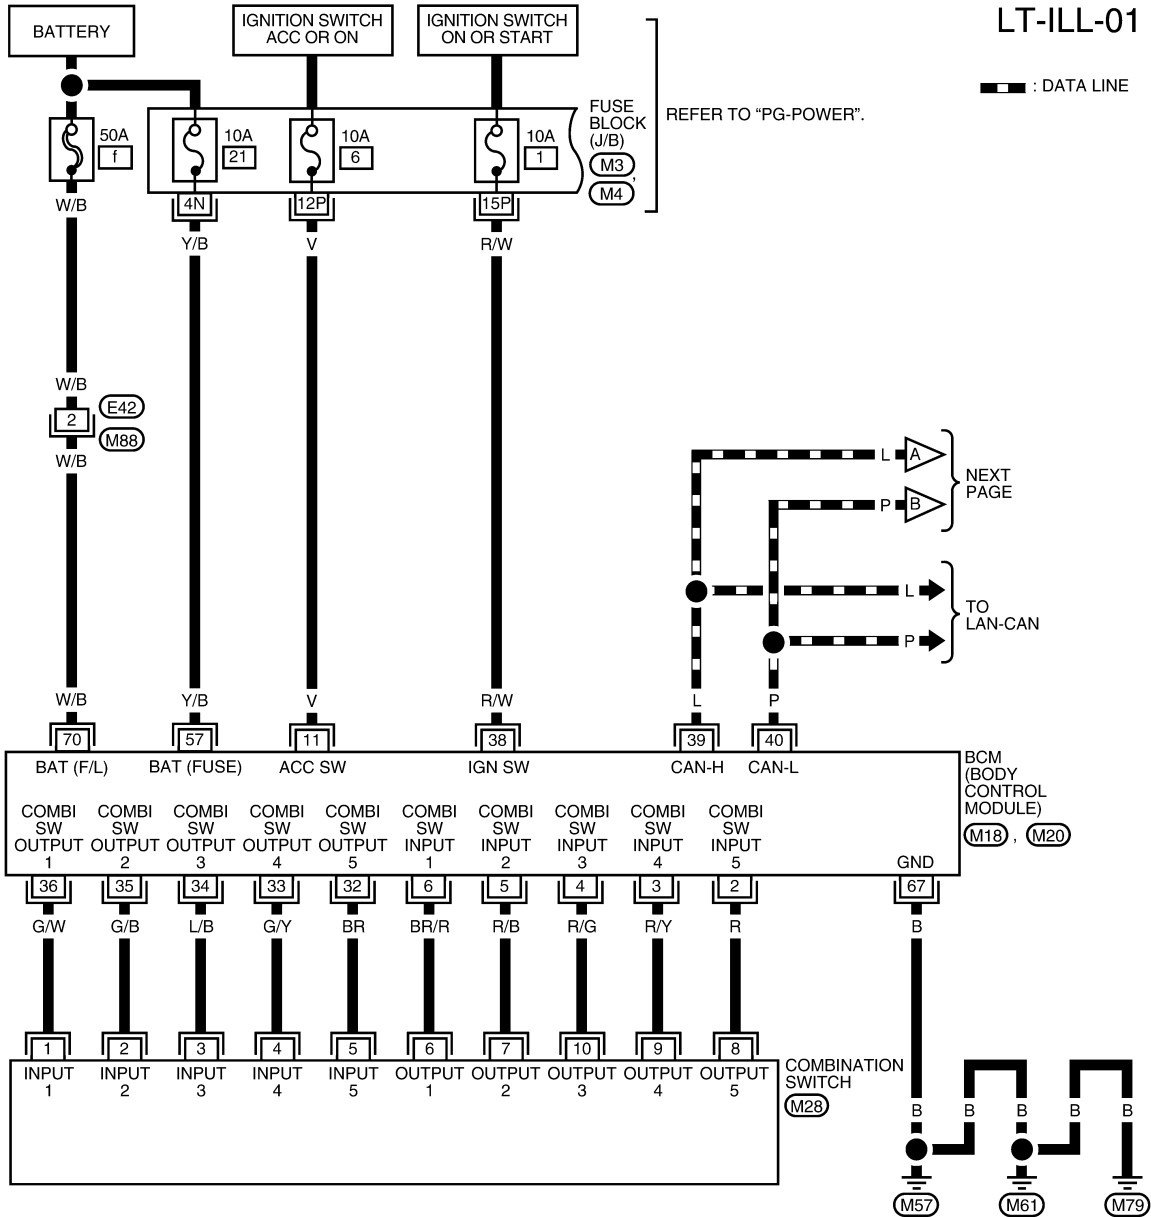

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P




LT

WKWA4889E

ILLUMINATION

< SERVICE INFORMATION >

LT-ILL-02


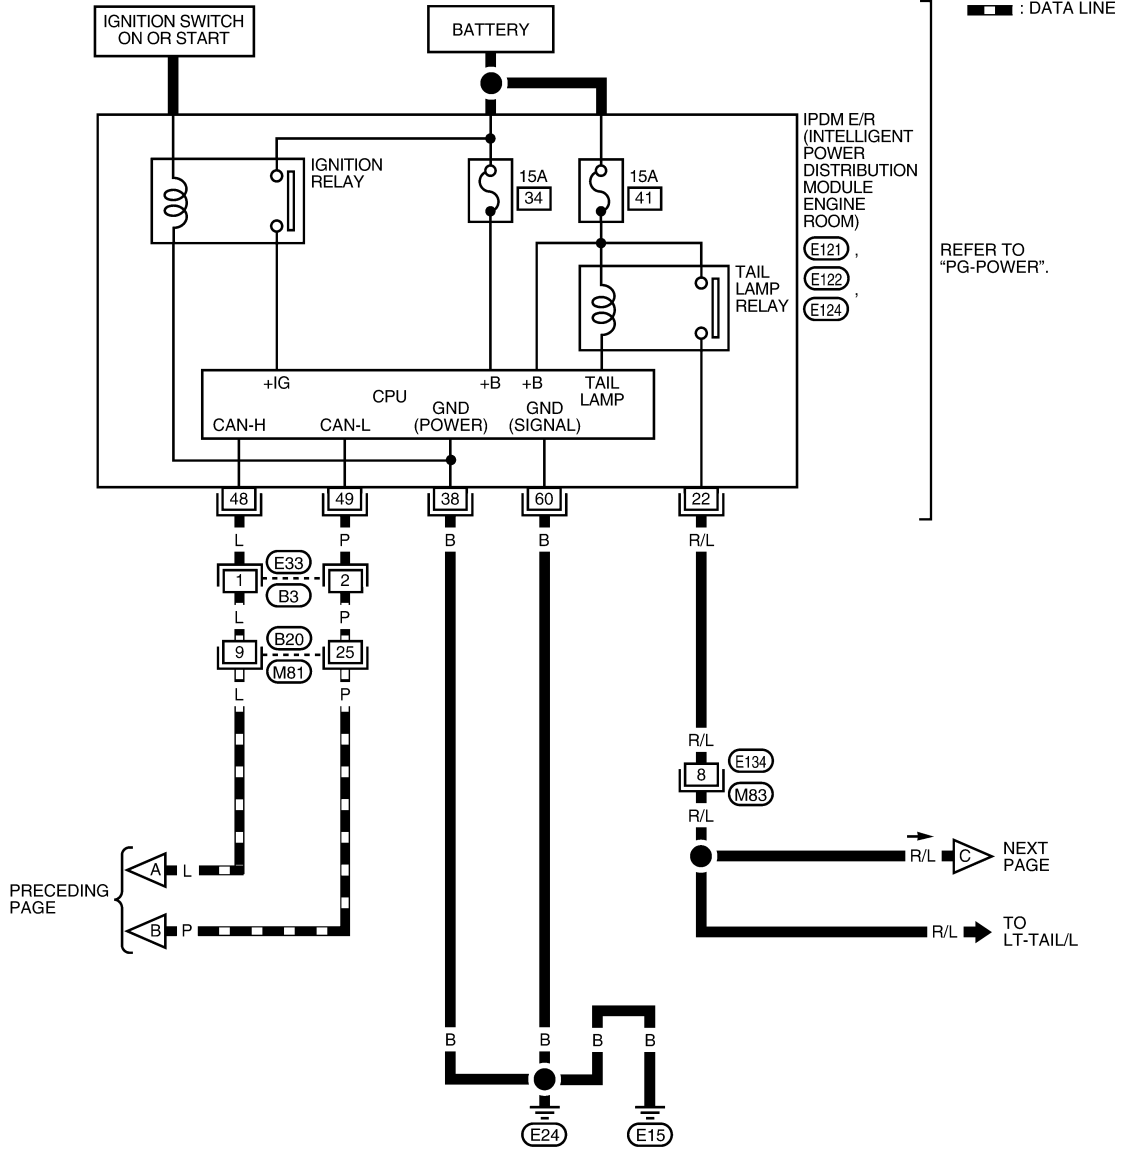


WKWA4890E

ILLUMINATION

< SERVICE INFORMATION >

LT-ILL-03

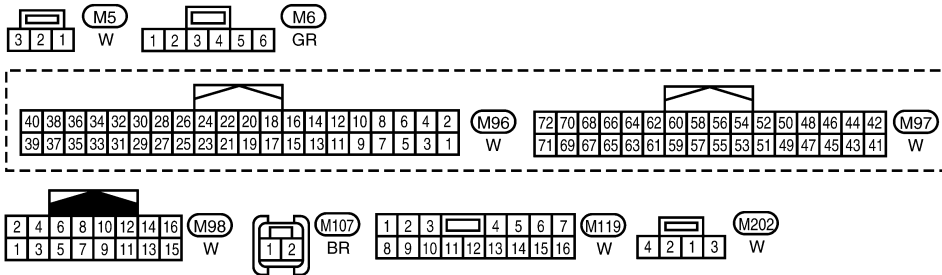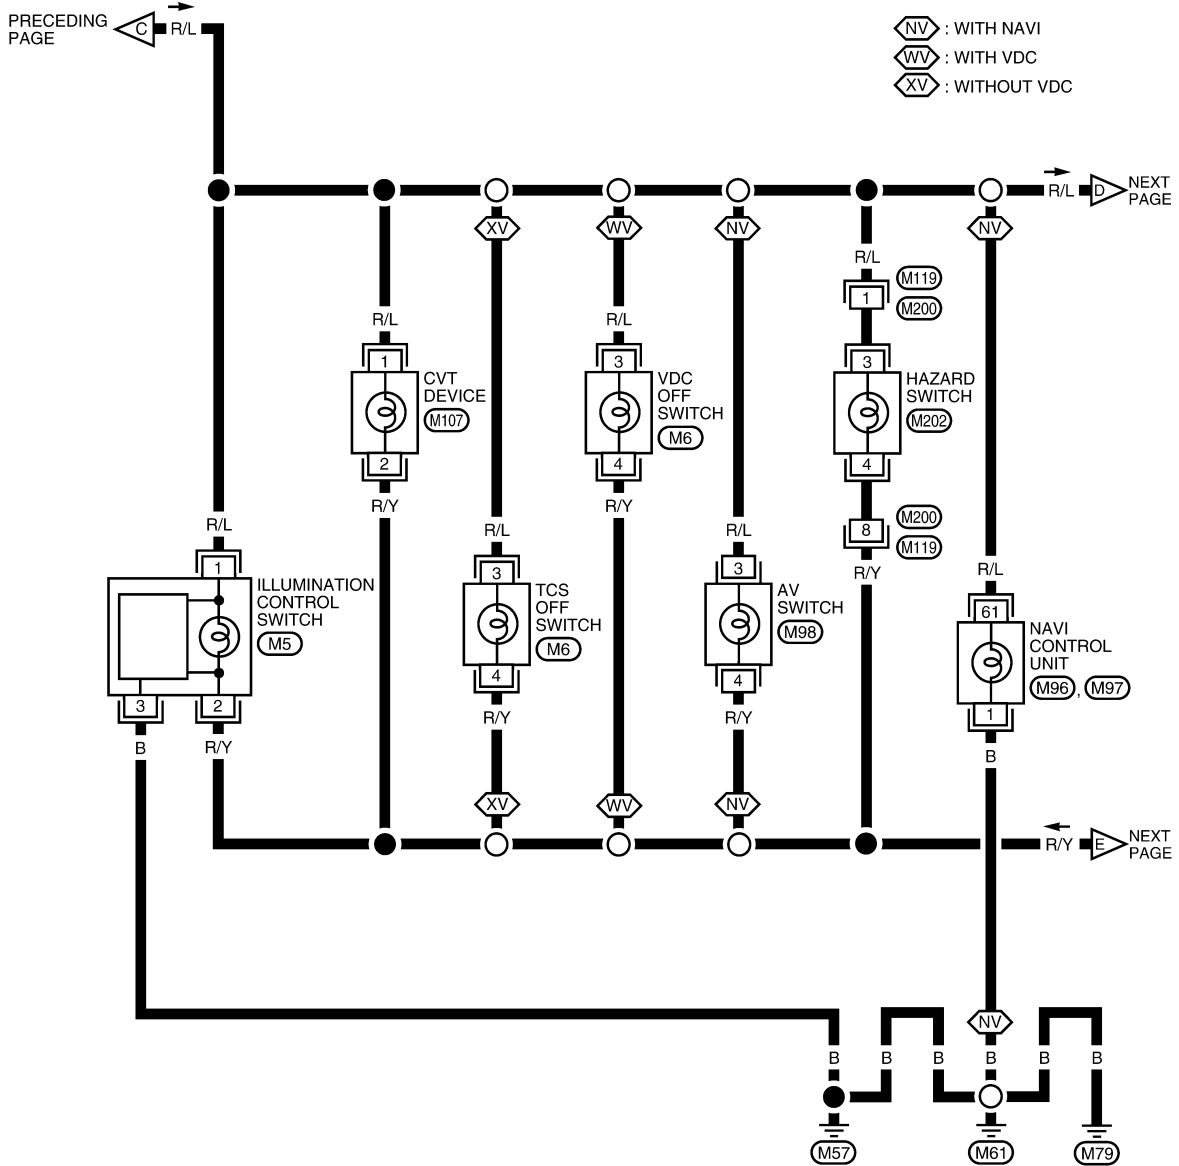

WKWA4891E

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P



LT

ILLUMINATION

< SERVICE INFORMATION >

LT-ILL-04

- ⬡BB⬡ : WITH BLUETOOTH
- ⬡EN⬡ : WITHOUT NAVI
- ⬡HF⬡ : WITH FRONT HEATED SEATS
- ⬡NV⬡ : WITH NAVI
- ⬡SW⬡ : WITH HEATED STEERING WHEEL

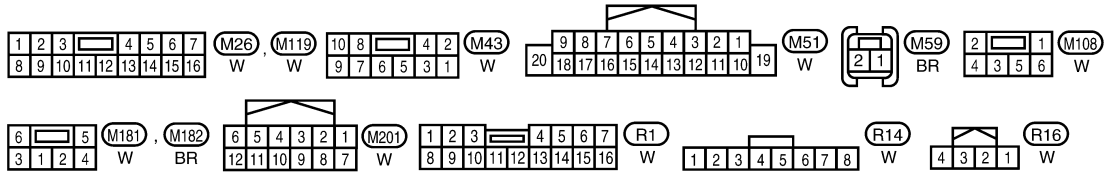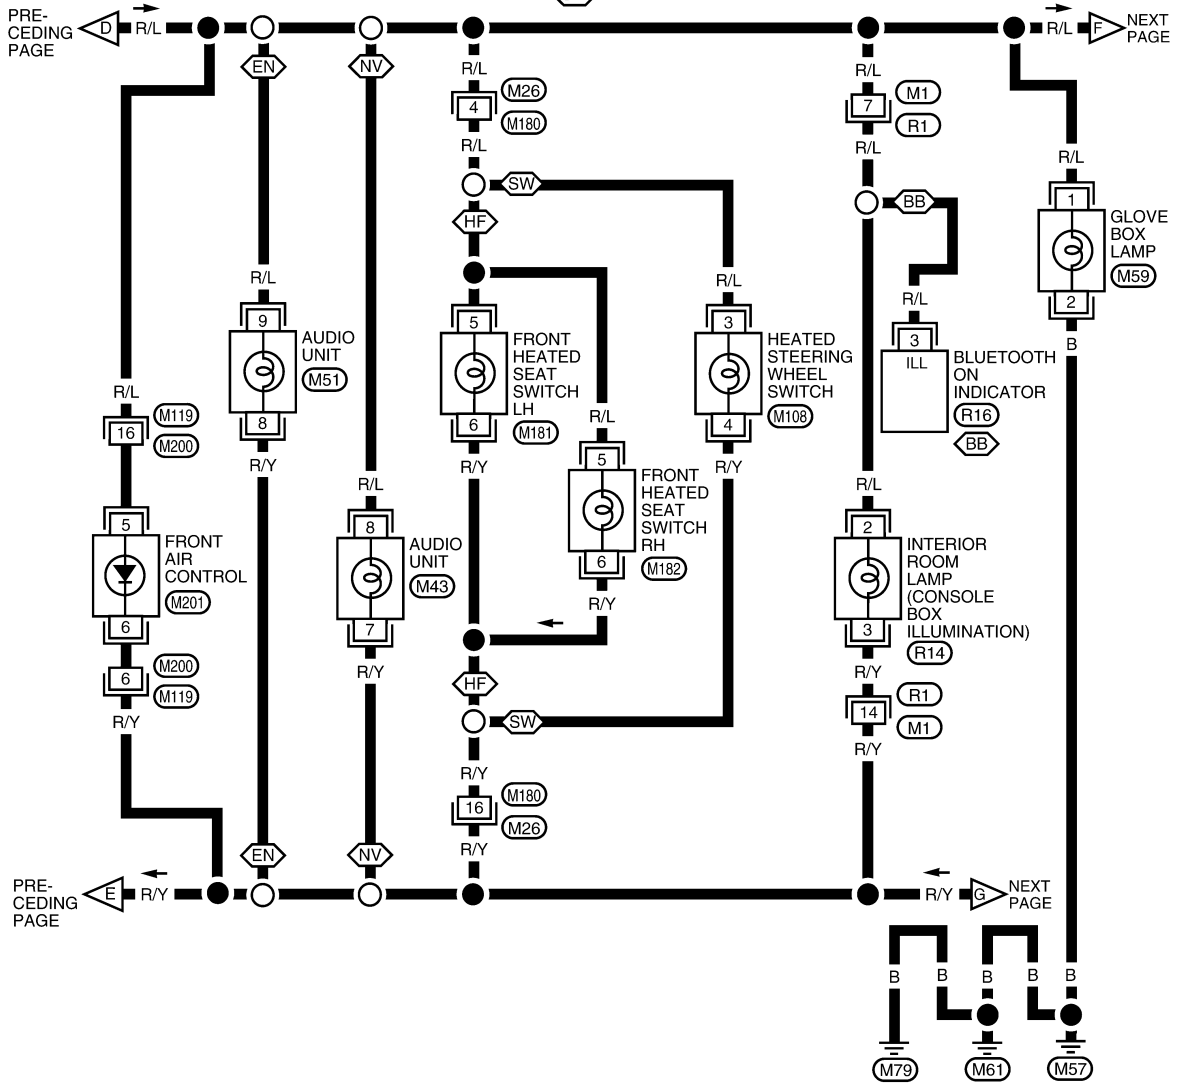



WKWA4892E

ILLUMINATION

< SERVICE INFORMATION >

LT-ILL-05

- ⬡AD : WITH AUTOMATIC DRIVE POSITIONER
- ⬡NV : WITH NAVI
- ⬡XA : WITHOUT AUTOMATIC DRIVE POSITIONER

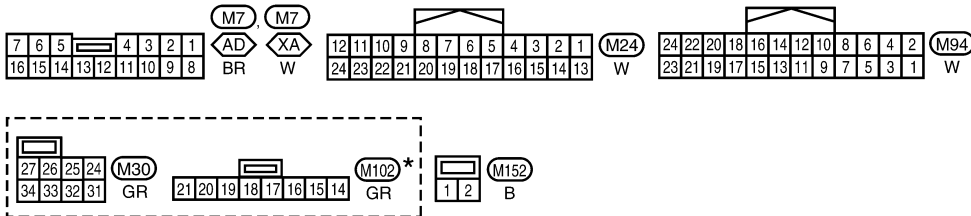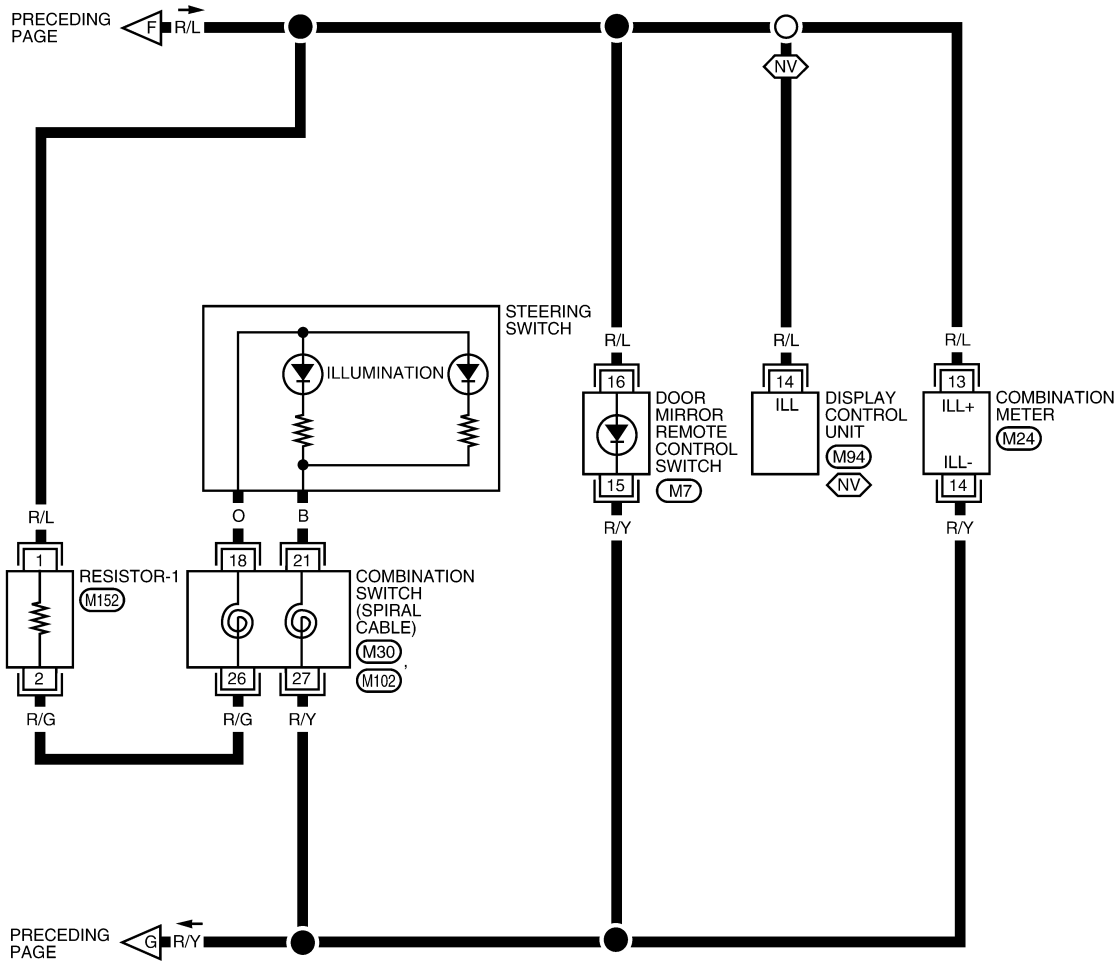

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

ALLWA0133GB

Removal and Installation

INFOID:000000001721651

ILLUMINATION CONTROL SWITCH

Removal

1. Remove lower driver instrument panel. Refer to [JP-14, "Lower Driver Instrument Panel"](#).
2. Press tabs and carefully push illumination control switch out of lower driver instrument panel.

ILLUMINATION

< SERVICE INFORMATION >

Installation

Installation is in the reverse order of removal.

BULB SPECIFICATIONS

< SERVICE INFORMATION >

BULB SPECIFICATIONS

Headlamp

INFOID:000000001721652

Item	Wattage (Bulb No.)*
High/Low (Halogen type)	55 (9012)
High/Low (Xenon type)	- (D2S)

*: Always check with the Parts Department for the latest parts information.

Exterior Lamp

INFOID:000000001721653

Item	Wattage (Bulb No.)	
Front combination lamp	Front Park/Turn signal lamp	27/8 (4157NAK)
	Daytime light (for Canada)	27 (3156K)
Front fog lamp	55 (H11)	
Rear combination lamp	Tail/Stop-Turn lamp	27/5 (3057K)
	Rear side marker lamp	5 (168)
Cornering lamp	27 (3156)	
Back-up lamp	13 (912)	
License plate lamp	5 (168)	
High-mounted stop lamp	5 (168)	

*: Always check with the Parts Department for the latest parts information.

Interior Lamp/Illumination

INFOID:000000001721654

Item	Wattage (Bulb No.)
Front personal/map lamp	3.4
Rear personal lamp	8
Trunk room lamp	3.4 (158)
Door step lamp	3.8 (194)
Foot lamp	3.4
Glove box lamp	3.4 (158)
Vanity mirror lamp	2.1
Ignition keyhole illumination	0.74
Console box illumination lamp	3.8 (194)
Rear console box lamp	5 (W5W)

*: Always check with the Parts Department for the latest parts information.