

RF  
**SECTION** RF  
**ROOF**

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

## CONTENTS

<p><b>BASIC INSPECTION</b> ..... 3</p> <p><b>DIAGNOSIS AND REPAIR WORKFLOW</b> ..... 3</p> <p style="padding-left: 20px;">WorkFlow .....3</p> <p><b>INSPECTION AND ADJUSTMENT</b> ..... 4</p> <p><b>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT</b> .....4</p> <p style="padding-left: 20px;">ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description .....4</p> <p style="padding-left: 20px;">ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement .....4</p> <p><b>FUNCTION DIAGNOSIS</b> ..... 5</p> <p><b>SUNROOF SYSTEM</b> ..... 5</p> <p style="padding-left: 20px;">System Diagram .....5</p> <p style="padding-left: 20px;">System Description .....5</p> <p style="padding-left: 20px;">Component Parts Location .....7</p> <p style="padding-left: 20px;">Component Description .....8</p> <p><b>DIAGNOSIS SYSTEM (BCM)</b> ..... 9</p> <p><b>COMMON ITEM</b> .....9</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM) .....9</p> <p><b>RETAIND PWR</b> .....10</p> <p style="padding-left: 20px;">RETAIND PWR : CONSULT-III Function (BCM - RETAINED PWR) ..... 10</p> <p><b>COMPONENT DIAGNOSIS</b> .....11</p> <p><b>POWER SUPPLY AND GROUND CIRCUIT</b> .....11</p> <p><b>BCM</b> .....11</p> <p style="padding-left: 20px;">BCM : Diagnosis Procedure ..... 11</p> <p><b>SUNROOF MOTOR ASSEMBLY</b> .....11</p> <p style="padding-left: 20px;">SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure .....11</p> <p><b>SUNSHADE MOTOR ASSEMBLY</b> .....12</p>	<p style="padding-left: 20px;">SUNSHADE MOTOR ASSEMBLY : Diagnosis Procedure .....12</p> <p><b>COMMUNICATION SIGNAL CIRCUIT</b> .....14</p> <p style="padding-left: 20px;">Description .....14</p> <p style="padding-left: 20px;">Diagnosis Procedure .....14</p> <p><b>SUNROOF SWITCH</b> .....15</p> <p style="padding-left: 20px;">Description .....15</p> <p style="padding-left: 20px;">Diagnosis Procedure .....15</p> <p style="padding-left: 20px;">Component Inspection .....16</p> <p><b>DOOR SWITCH</b> .....17</p> <p style="padding-left: 20px;">Description .....17</p> <p style="padding-left: 20px;">Component Function Check .....17</p> <p style="padding-left: 20px;">Diagnosis Procedure .....17</p> <p style="padding-left: 20px;">Component Inspection .....18</p> <p><b>ECU DIAGNOSIS</b> .....19</p> <p><b>BCM (BODY CONTROL MODULE)</b> .....19</p> <p style="padding-left: 20px;">Reference Value .....19</p> <p style="padding-left: 20px;">Wiring Diagram - BCM - .....43</p> <p style="padding-left: 20px;">Fail-safe .....57</p> <p style="padding-left: 20px;">DTC Inspection Priority Chart .....60</p> <p style="padding-left: 20px;">DTC Index .....61</p> <p><b>SUNROOF MOTOR ASSEMBLY</b> .....64</p> <p style="padding-left: 20px;">Reference Value .....64</p> <p style="padding-left: 20px;">Wiring Diagram - SUNROOF CONTROL SYSTEM - .....66</p> <p><b>SUNSHADE MOTOR ASSEMBLY</b> .....70</p> <p style="padding-left: 20px;">Reference Value .....70</p> <p style="padding-left: 20px;">Wiring Diagram - SUNROOF CONTROL SYSTEM - .....71</p> <p><b>SYMPTOM DIAGNOSIS</b> .....75</p> <p><b>SUNROOF DOES NOT OPERATE PROPERLY</b> .....75</p> <p style="padding-left: 20px;">Diagnosis Procedure .....75</p>
---	--

<b>SUNSHADE SYSTEM DOES NOT OPERATE PROPERLY</b> .....	<b>76</b>	<b>GLASS LID</b> .....	<b>89</b>
Diagnosis Procedure .....	76	Exploded View .....	89
<b>AUTO OPERATION DOES NOT OPERATE</b> ....	<b>77</b>	Removal and Installation .....	90
Diagnosis Procedure .....	77	Adjustment .....	91
<b>RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY</b> .....	<b>78</b>	<b>SUNROOF MOTOR ASSEMBLY</b> .....	<b>92</b>
Diagnosis Procedure .....	78	Exploded View .....	92
<b>ANTI-PINCH FUNCTION DOES NOT OPERATE</b> .....	<b>79</b>	Removal and Installation .....	93
Diagnosis Procedure .....	79	<b>SUNSHADE MOTOR ASSEMBLY</b> .....	<b>94</b>
<b>SQUEAK AND RATTLE TROUBLE DIAGNOSES</b> .....	<b>80</b>	Exploded View .....	94
Work Flow .....	80	Removal and Installation .....	95
Inspection Procedure .....	82	<b>SUNROOF UNIT ASSEMBLY</b> .....	<b>96</b>
Diagnostic Worksheet .....	84	Exploded View .....	96
<b>PRECAUTION</b> .....	<b>86</b>	Removal and Installation .....	98
<b>PRECAUTIONS</b> .....	<b>86</b>	Disassembly and Assembly .....	100
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	86	<b>FRONT SUNROOF GLASS</b> .....	<b>101</b>
Service Notice .....	86	Exploded View .....	101
Precaution for Work .....	86	Removal and Installation .....	101
<b>PREPARATION</b> .....	<b>88</b>	<b>REAR SUNROOF GLASS</b> .....	<b>104</b>
<b>PREPARATION</b> .....	<b>88</b>	Exploded View .....	104
Special Service Tool .....	88	Removal and Installation .....	104
Commercial Service Tool .....	88	<b>WIND DEFLECTOR</b> .....	<b>107</b>
<b>ON-VEHICLE REPAIR</b> .....	<b>89</b>	Exploded View .....	107
		Removal and Installation .....	107
		<b>SUNSHADE</b> .....	<b>109</b>
		Exploded View .....	109
		Removal and Installation .....	109
		<b>SUNROOF SWITCH</b> .....	<b>111</b>
		Exploded View .....	111
		Removal and Installation .....	111

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

WorkFlow

INFOID:000000003356091

DETAILED FLOW

#### 1.OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred) as much as possible when the customer brings the vehicle in.

>> GO TO 2.

#### 2.REPRODUCE THE MALFUNCTION INFORMATION

Check the malfunction on the vehicle that the customer describes.  
Inspect the relation of the symptoms and the condition when the symptoms occur.

>> GO TO 3.

#### 3.IDENTIFY THE MALFUNCTIONING SYSTEM WITH "SYMPTOM DIAGNOSIS"

Use "Symptom diagnosis" from the symptom inspection result in step 2 and then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 4.

#### 4.IDENTIFY THE MALFUNCTIONING PARTS WITH "COMPONENT DIAGNOSIS"

Perform the diagnosis with "Component diagnosis" of the applicable system.

>> GO TO 5.

#### 5.REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 6.

#### 6.FINAL CHECK

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 2.

Are the malfunctions corrected?

YES >> INSPECTION END

NO >> GO TO 3.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

---

## INSPECTION AND ADJUSTMENT

### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

#### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000003737796

Initialization of system should be conducted after the following conditions.

- When the sunroof motor or sunshade motor is changed.
- When the sunroof or sunshade does not operate normally. (Incomplete initialization conditions)

#### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000003737797

#### INITIALIZATION PROCEDURE

If the sunroof or sunshade does not close or open automatically, use the following procedure to return sunroof or sunshade operation to normal.

1. Close the sunroof and sunshade, then release the sunroof switch once.
2. Press and hold the sunroof switch CLOSE (1st or 2nd) again (for approx. 10 seconds), then sunroof will move to forward and it will be stopped mechanically.
3. Release the sunroof switch, and press and hold the sunroof switch CLOSE (1st or 2nd) again. then sunroof and sunshade will automatically move to fully closed⇒fully open⇒fully closed.
4. Release sunroof switch, after the sunroof is fully closed.
5. Check sunroof and sunshade operation.

#### CHECK ANTI-PINCH FUNCTION

1. Full open the sunroof.
2. Place a piece of wood near fully closed position.
3. Close the sunroof completely with auto-slide close.
4. Check that sunroof lowers for approximately 150 mm (5.91in) or 2 seconds with out pinching a piece of wood and stop.
5. Full open the sunshade.
6. Place a piece of wood near fully closed position.
7. Close the sunroof completely with auto-slide close.
8. Check that sunroof lowers for approximately 150 mm (5.91in) or 2 seconds with out pinching a piece of wood and stop.

#### **CAUTION:**

- **Never check with hands and other part of body because they may be pinched. Never get pinched.**
- **Depending on environment and driving conditions, if a similar impact or load is applied to the sunroof it may lower.**
- **Check that auto-slide operates before inspection when system initialization is performed.**
- **Perform initial setting when auto-slide operation or anti-pinch function does not operate normally.**

# SUNROOF SYSTEM

< FUNCTION DIAGNOSIS >

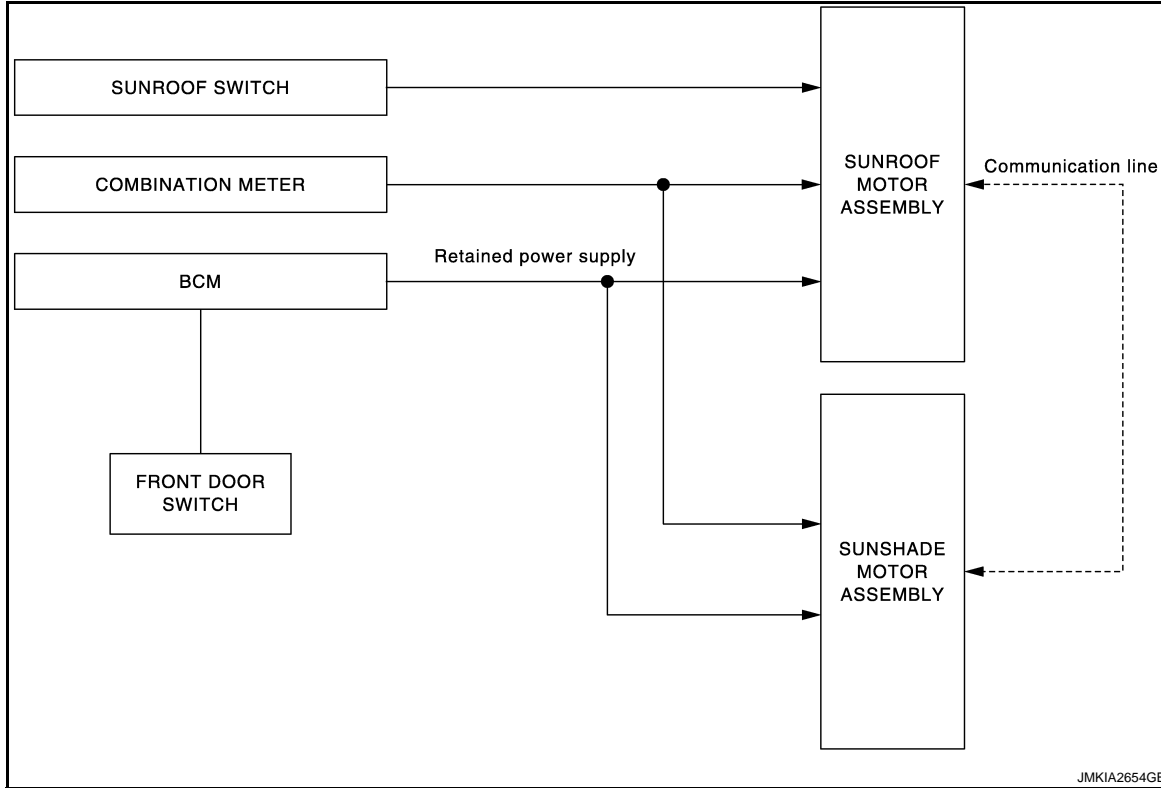
## FUNCTION DIAGNOSIS

### SUNROOF SYSTEM

#### System Diagram

INFOID:000000003356094

#### SUNROOF




#### System Description

INFOID:000000003356095

#### DESCRIPTION

- Sunroof motor assembly and sunshade motor assembly operate with the power supplied from BCM while ignition switch is ON or retained power is operating.
- Sunroof motor assembly receives an operation signal from sunroof switch, and sends the signal to sunshade motor by communication line.
- Sunroof motor assembly and sunshade motor assembly receive a vehicle speed signal from combination meter and controls the sunroof motor and sunshade motor torque at the time of high speed operation.
- The sunroof switch can be operated in the directions of push , open (1st, 2nd) and close (1st, 2nd). It can operate the sunroof and sunshade by one switch.

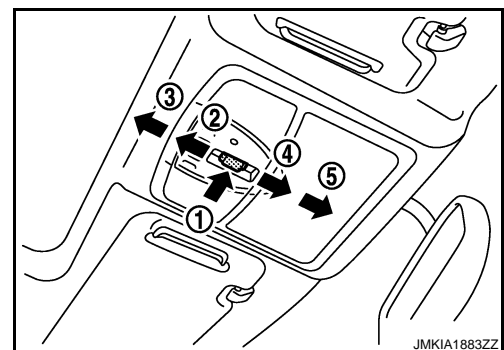- (1) **PUSH**
- (2) **OPEN 1st**
- (3) **OPEN 2nd**
- (4) **CLOSE 1st**
- (5) **CLOSE 2nd**

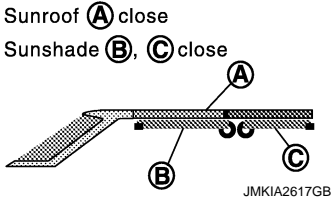

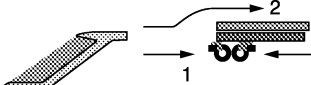
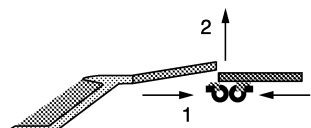
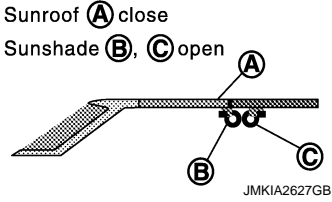
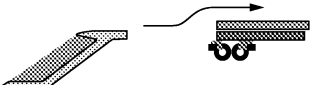
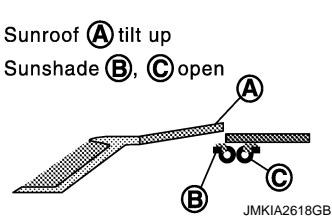
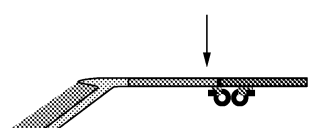
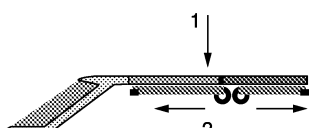


#### OPERATION DESCRIPTION

The sunroof and sunshade operate as per the following by operating the sunroof switch operation.

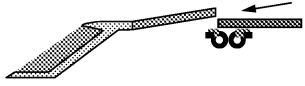
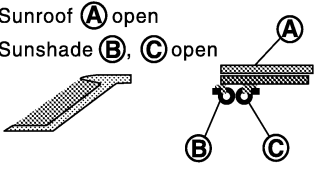
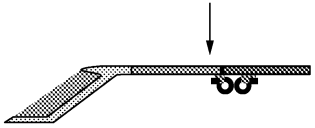
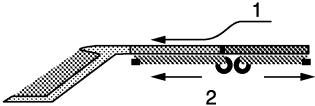
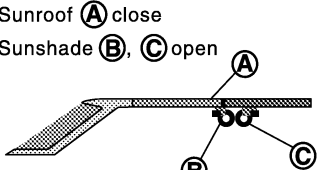
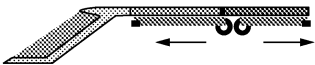
# SUNROOF SYSTEM

## < FUNCTION DIAGNOSIS >

Before Operation	Switch condition	Roof and sunshade operation	After Operation
<p>Sunroof (A) close Sunshade (B), (C) close</p>  <p>JMKIA2617GB</p>	OPEN: 1st	Opens the sunshade	 <p>JMKIA2619ZZ</p>
	OPEN: 2nd	The sunshade opens, and then the sunroof opens.	 <p>JMKIA2620ZZ</p>
	PUSH	The sunshade opens, and then the sunroof tilts up.	 <p>JMKIA2621ZZ</p>
<p>Sunroof (A) close Sunshade (B), (C) open</p>  <p>JMKIA2627GB</p>	OPEN: 1st	Opens the sunroof	 <p>JMKIA2628ZZ</p>
<p>Sunroof (A) tilt up Sunshade (B), (C) open</p>  <p>JMKIA2618GB</p>	PUSH		
	CLOSE: 1st	Tilts down	 <p>JMKIA2622ZZ</p>
	CLOSE: 2nd	The sunroof tilts down, and then sunshade closes.	 <p>JMKIA2623ZZ</p>

# SUNROOF SYSTEM

## < FUNCTION DIAGNOSIS >

Before Operation	Switch condition	Roof and sunshade operation	After Operation
	PUSH	Tilts up	 JMKIA2625ZZ
Sunroof (A) open Sunshade (B), (C) open  JMKIA2624GB	CLOSE: 1st	Closes the sunroof	 JMKIA2622ZZ
	CLOSE: 2nd	The sunroof closes, and then the sunshade closes.	 JMKIA2626ZZ
Sunroof (A) close Sunshade (B), (C) open  JMKIA2627GB	CLOSE: 1st	Closes the sunshade	 JMKIA2629ZZ

### AUTO OPERATION

The sunroof or sunshade operates automatically to the fully-open or fully-close position by operating the sunroof switch to the OPEN (2nd) or CLOSE (2nd) position.

### RETAINED POWER OPERATION

Retained power operation is an additional power supply function that enables sunroof system to operate for 45 seconds period after ignition switch is turned OFF.

#### Retained power function cancel conditions

- Front door CLOSE (door switch OFF)→OPEN (door switch ON)
- Ignition switch is ON again.
- Timer passed. (45 seconds)

### ANTI-PINCH FUNCTION

#### CAUTION:

**There are some small distances immediately before the closed position which cannot be detected.**

- The CPU of sunroof motor assembly monitor the sunroof condition by the signals from sunroof motor. When sunroof motor assembly detects an interruption during auto operation (close or tilt down operation), sunroof motor will tilt up or open [150 mm (5.91 in) or more] sunroof.
- The CPU of sunshade motor assembly monitor the sunshade condition by the signals from sunshade motor. When sunshade motor assembly detects an interruption during auto close operation, sunroof motor will open [150 mm (5.91 in) or more] sunshade.

### Component Parts Location

INFOID:000000003356096

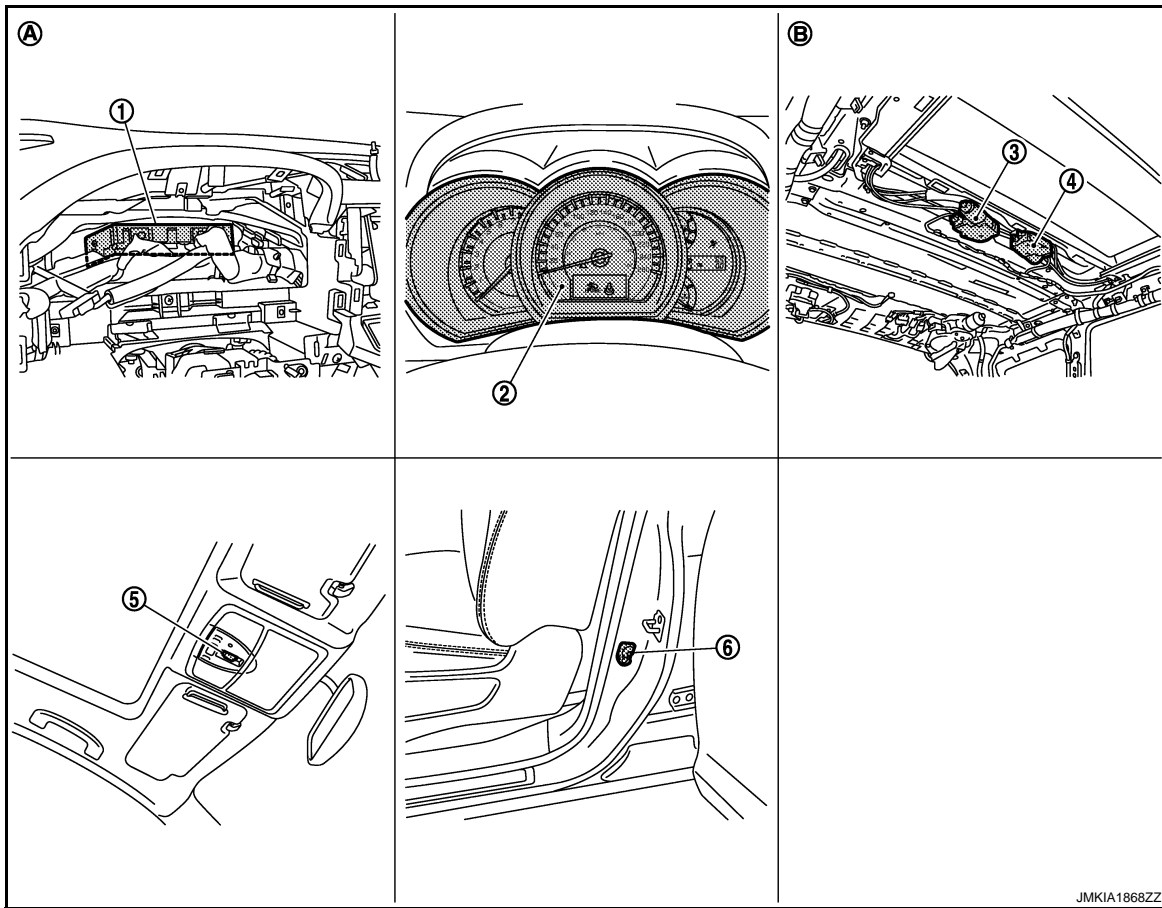
A  
B  
C  
D  
E  
F  
G  
H  
I  
J

RF

L  
M  
N  
O  
P

# SUNROOF SYSTEM

## < FUNCTION DIAGNOSIS >



JMKIA1868ZZ

- |                                 |                          |  |
|---------------------------------|--------------------------|--|
| 1. BCM M118, M119, M123         | 2. Combination meter M34 | 3. Sunroof motor assembly R101         |
| 4. Sunshade motor assembly R102 | 5. Sunroof switch R6     | 6. Front door switch (driver side) B34 |
| A. Behind the combination meter | B. Behind headlining     |  |

## Component Description

INFOID:000000003356097

Component	Function
BCM	Supplies power to sunroof motor assembly and sunshade motor assembly.
Combination meter	Transmits vehicle speed signal to sunroof motor assembly and sunshade motor assembly.
Sunroof motor assembly	It is sunroof motor and CPU integrated type that enables tilt up/down & slide open/close sunroof by sunroof switch operation. And sends sunroof switch operation signal to sunshade motor assembly via communication line.
Sunshade motor assembly	It is sunshade motor and CPU integrated type that enables open/close sunshade by sunroof switch operation.
Sunroof switch	Transmits switch operation signal to sunroof motor assembly.
Door switch	Detects door open/close condition and transmits to BCM.



# DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

### COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000003626048

### APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> <li>Read and save the vehicle specification.</li> <li>Write the vehicle specification when replacing BCM.</li> </ul>

### SYSTEM APPLICATION

BCM can perform the following functions for each system.

#### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

x: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Remote keyless entry system	MULTI REMOTE ENT*1	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×*2	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*3			
<ul style="list-style-type: none"> <li>Intelligent Key system</li> <li>Engine start system</li> </ul>	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NVIS - NATS	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door opener system	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	TPMS (AIR PRESSURE MONITOR)	×	×	×

#### NOTE:

- \*1: At models with Intelligent Key system this item is displayed, but is not used.
- \*2: At models with rain sensor this mode is displayed, but is not used.

# DIAGNOSIS SYSTEM (BCM)

## < FUNCTION DIAGNOSIS >

- \*3: This item is displayed, but is not used.

### FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT-III.

CONSULT screen item	Indication/Unit	Description	
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected	
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected	
Vehicle Condition	SLEEP>LOCK	Power position status of the moment a particular DTC is detected	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK")
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)
	LOCK>ACC		While turning power supply position from "LOCK" to "ACC"
	ACC>ON		While turning power supply position from "ACC" to "IGN"
	RUN>ACC		While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)
	CRANK>RUN		While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)
	RUN>URGENT		While turning power supply position from "RUN" to "ACC" (Emergency stop operation)
	ACC>OFF		While turning power supply position from "ACC" to "OFF"
	OFF>LOCK		While turning power supply position from "OFF" to "LOCK"
	OFF>ACC		While turning power supply position from "OFF" to "ACC"
	ON>CRANK		While turning power supply position from "IGN" to "CRANKING"
	OFF>SLEEP		While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode
	LOCK>SLEEP		While turning BCM status from normal mode (Power supply position is "LOCK".) to low power consumption mode
	LOCK		Power supply position is "LOCK" (Ignition switch OFF with steering is locked.)
	OFF		Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.)
	ACC		Power supply position is "ACC" (Ignition switch ACC)
	ON		Power supply position is "IGN" (Ignition switch ON with engine stopped)
ENGINE RUN	Power supply position is "RUN" (Ignition switch ON with engine running)		
CRANKING	Power supply position is "CRANKING" (At engine cranking)		
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> <li>The number is 0 when a malfunction is detected now.</li> <li>The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.</li> <li>The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.</li> </ul>	

## RETAINED PWR

### RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR)

INFOID:000000003626049

#### Data monitor

Monitor Item	Description
DOOR SW-DR	Indicates [ON/OFF] condition of driver side door switch.
DOOR SW-AS	Indicates [ON/OFF] condition of passenger side door switch.

# POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

## COMPONENT DIAGNOSIS

### POWER SUPPLY AND GROUND CIRCUIT

#### BCM

#### BCM : Diagnosis Procedure

INFOID:000000003685473

#### 1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse and fusible link No.
Battery power supply	L (40 A)
	10 (10 A)

#### Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

#### 2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground  Battery voltage
Connector	Terminal	
M118	1	
M119	11	

#### Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

#### 3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		Existed
M119	13		Existed

#### Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

### SUNROOF MOTOR ASSEMBLY

#### SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure

INFOID:000000003356101

#### 1. CHECK POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect sunroof motor assembly connector.
3. Turn ignition switch ON.
4. Check voltage between sunroof motor assembly harness connector and ground.

# POWER SUPPLY AND GROUND CIRCUIT

## < COMPONENT DIAGNOSIS >

(+)		(-)	Voltage (V) (Approx.)
Sunroof motor assembly			
Connector	Terminal	Ground	Battery voltage
R101	3		
	6		

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

## 2.CHECK SUNROOF MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and sunroof motor assembly harness connector.

BCM		Sunroof motor assembly		Continuity
Connector	Terminal	Connector	Terminal	
M118	2	R101	6	Existed
	3		3	

4. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M118	2		Not existed
	3		

Is the inspection result normal?

YES >> Refer to [BCS-96, "Removal and Installation"](#).

NO >> Repair or replace harness.

## 3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between sunroof motor assembly harness connector and ground.

Sunroof motor assembly		Ground	Continuity
Connector	Terminal		
R101	1		Existed
	2		

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

## 4.CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

## SUNSHADE MOTOR ASSEMBLY

### SUNSHADE MOTOR ASSEMBLY : Diagnosis Procedure

INFOID:000000003431576

## 1.CHECK POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect sunshade motor assembly connector.
3. Turn ignition switch ON.

# POWER SUPPLY AND GROUND CIRCUIT

## < COMPONENT DIAGNOSIS >

4. Check voltage between sunshade motor assembly harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Sunshade motor assembly			
Connector	Terminal	Ground	Battery voltage
R102	6		

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

## 2.CHECK SUNSHADE MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and sunshade motor assembly harness connector.

BCM		Sunshade motor assembly		Continuity
Connector	Terminal	Connector	Terminal	
M118	2	R102	6	Existed

4. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M118	2		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-96. "Removal and Installation"](#).

NO >> Repair or replace harness.

## 3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between sunshade motor assembly harness connector and ground.

Sunshade motor assembly		Ground	Continuity
Connector	Terminal		
R102	1		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

## 4.CHECK INTERMITTENT INCIDENT

Refer to [GI-40. "Intermittent Incident"](#).

>> INSPECTION END

# COMMUNICATION SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

## COMMUNICATION SIGNAL CIRCUIT

### Description

INFOID:000000003626060

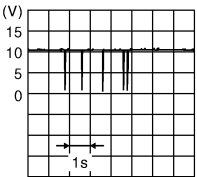
Detects door open/close condition.

### Diagnosis Procedure

INFOID:000000003626062

#### 1. CHECK DOOR SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect sunshade motor assembly connector.
3. Turn ignition switch ON.
4. Check signal between sunshade motor assembly harness connector and ground with oscilloscope.

(+)		(-)	Voltage (V) (Approx.)
Sunshade motor assembly			
Connector	Terminal		
R102	7	Ground	

JMKIA1869ZZ

Is the inspection result normal?

- YES >> INSPECTION END.  
 NO >> GO TO 2.

#### 2. CHECK COMMUNICATION SIGNAL CIRCUIT

1. Disconnect sunroof motor assembly connector.
2. Check continuity between sunshade motor assembly harness connector and sunroof motor assembly harness connector.

Sunshade motor assembly		Sunroof motor assembly		Continuity
Connector	Terminal	Connector	Terminal	
R102	7	R101	7	Existed

3. Check continuity between sunshade motor assembly harness connector and ground.

Sunshade motor assembly		Ground	Continuity
Connector	Terminal		
R102	7		Not existed

Is the inspection result normal?

- YES >> Replace sunroof motor assembly. Refer to [RF-95. "Removal and Installation"](#).  
 NO >> Repair or replace harness.

# SUNROOF SWITCH

< COMPONENT DIAGNOSIS >

## SUNROOF SWITCH

### Description

INFOID:000000003356102

Transmits switch operation signal to sunroof motor assembly.

### Diagnosis Procedure

INFOID:000000003356104

#### 1. CHECK SUNROOF SWITCH INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between sunroof motor assembly harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
Sunroof motor assembly				
Connector	Terminals			
R101	4	Ground	Sunroof switch is operated PUSH	0
			Other than above	Battery voltage
	5		Sunroof switch is operated OPEN (1st or 2nd)	0
			Other than above	Battery voltage
	9		Sunroof switch is operated OPEN (2nd) or OPEN (2nd)	0
			Other than above	Battery voltage
	10		Sunroof switch is operated CLOSE (1st or 2nd)	0
			Other than above	Battery voltage

Is the inspection result normal?

- YES >> Replace sunroof motor. Refer to [RF-93, "Removal and Installation"](#).  
 NO >> GO TO 2.

#### 2. CHECK SUNROOF SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect sunroof motor assembly connector and sunroof switch connector.
3. Check continuity between sunroof motor assembly harness connector and sunroof switch harness connector.

Sunroof motor assembly		Sunroof switch		Continuity
Connector	Terminal	Connector	Terminal	
R101	4	R6	5	Existed
	5		3	
	9		2	
	10		4	

4. Check continuity between sunroof motor assembly harness connector and ground.

Sunroof motor assembly		Ground	Continuity
Connector	Terminal		
R101	4	Ground	Not existed
	5		
	9		
	10		

Is the inspection result normal?

# SUNROOF SWITCH

## < COMPONENT DIAGNOSIS >

- YES >> GO TO 3.  
 NO >> Repair or the replace harness.

### 3.CHECK SUNROOF SWITCH GROUND CIRCUIT

Check continuity between sunroof switch harness connector and ground.

Sunroof switch		Ground	Continuity
Connector	Terminal		
R6	1		Existed

Is the inspection result normal?

- YES >> GO TO 4.  
 NO >> Repair or replace harness.

### 4.CHECK SUNROOF SWITCH

Check sunroof switch.

Refer to [RF-16, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.  
 NO >> Replace sunroof switch. Refer to [RF-111, "Removal and Installation"](#).

### 5.CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:000000003356105

## SUNROOF SWITCH

### 1.CHECK SUNROOF SWITCH

1. Turn ignition switch OFF.
2. Disconnect sunroof switch connector.
3. Check continuity sunroof switch terminals.

Terminals	Condition	Continuity
2	Sunroof switch is operated OPEN (2nd) or CLOSE (2nd)	Existed
	Other than above	Not existed
3	Sunroof switch is operated OPEN (1st) or OPEN (2nd)	Existed
	Other than above	Not existed
4	Sunroof switch is operated CLOSE (1st) or CLOSE (2nd)	Existed
	Other than above	Not existed
5	Sunroof switch is operated PUSH	Existed
	Other than above	Not existed

Is the inspection result normal?

- YES >> INSPECTION END  
 NO >> Replace sunroof switch. Refer to [RF-111, "Removal and Installation"](#).



# DOOR SWITCH

< COMPONENT DIAGNOSIS >

## DOOR SWITCH

### Description

INFOID:000000003626070

Detects door open/close condition.

### Component Function Check

INFOID:000000003356107

### 1.CHECK FUNCTION

Check door switches ("DOOR SW-DR", "DOOR SW-AS") in Data Monitor" mode with CONSULT-III.

Monitor item	Condition		Status
DOOR SW-DR	Front door (driver side)	OPEN	ON
		CLOSE	OFF
DOOR SW-AS	Front door (passenger side)	OPEN	ON
		CLOSE	OFF

Is the inspection result normal?

YES >> Door switch is OK.

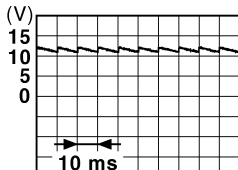
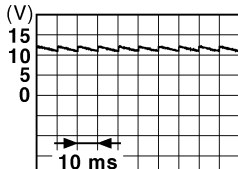
NO >> Refer to [RF-17. "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000003626071

### 1.CHECK DOOR SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect malfunctioning door switch connector.
3. Check signal between malfunctioning door switch harness connector and ground with oscilloscope.

(+)			(-)	Voltage (V) (Approx.)
Door switch				
Connector		Terminal		
Driver side	B34	2	Ground	 <p>JPMIA0011GB</p>
Passenger side	B220	2		 <p>JPMIA0011GB</p>

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

### 2.CHECK DOOR SWITCH CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and door switch harness connector.

# DOOR SWITCH

## < COMPONENT DIAGNOSIS >

BCM		Door switch		Continuity
Connector	Terminal	Connector	Terminal	
M123 (Driver side)	150	B34 (Driver side)	2	Existed
M123 (Passenger side)	124	B220 (Passenger side)		

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M123 (Driver side)	150		Not existed
M123 (Passenger side)	124		

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-96. "Removal and Installation"](#).

NO >> Repair or replace harness.

### 3.CHECK DOOR SWITCH

Refer to [RF-18. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace malfunctioning door switch. Refer to [DLK-368. "Removal and Installation"](#).

### 4.CHECK INTERMITTENT INCIDENT

Refer to [GI-40. "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:000000003626072

### 1.CHECK DOOR SWITCH

1. Turn ignition switch OFF.
2. Disconnect door switch connector.
3. Check door switch terminals.

Terminal		Condition	Continuity	
Door switch				
Each door	2	Ground part of door switch	Door switch pressed	Not existed
			Door switch released	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace malfunction door switch. Refer to [DLK-368. "Removal and Installation"](#).

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## ECU DIAGNOSIS

### BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000004754600

#### VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT/AUTO	Off
	Front wiper switch INT/AUTO	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
RR WIPER ON	Other than rear wiper switch ON	Off
	Rear wiper switch ON	On
RR WIPER INT	Other than rear wiper switch INT	Off
	Rear wiper switch INT	On
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On
RR WIPER STOP	Rear wiper is in STOP position	Off
	Rear wiper is not in STOP position	On
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
RR FOG SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	Rear RH door closed	Off
	Rear RH door opened	On
DOOR SW-RL	Rear LH door closed	Off
	Rear LH door opened	On
DOOR SW-BK	Back door closed	Off
	Back door opened	On
CDL LOCK SW	Other than power door lock switch LOCK	Off
	Power door lock switch LOCK	On
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off
	Power door lock switch UNLOCK	On
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off
	Driver door key cylinder LOCK position	On
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off
	Driver door key cylinder UNLOCK position	On
KEY CYL SW-TR	<b>NOTE:</b> The item is indicated, but not monitored.	Off
HAZARD SW	Hazard switch is OFF	Off
	Hazard switch is ON	On
REAR DEF SW	Rear window defogger switch OFF	Off
<b>NOTE:</b> At model with BOSE audio system this item is not monitored.	Rear window defogger switch ON	On
TR CANCEL SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off
TR/BD OPEN SW	Back door opener switch OFF	Off
	While the back door opener switch is turned ON	On
TRNK/HAT MNTR	<b>NOTE:</b> The item is indicated, but not monitored.	Off
RKE-LOCK	LOCK button of the key is not pressed	Off
	LOCK button of the key is pressed	On
RKE-UNLOCK	UNLOCK button of the key is not pressed	Off
	UNLOCK button of the key is pressed	On
RKE-TR/BD	BACK DOOR OPEN button of the key is not pressed	Off
	BACK DOOR OPEN button of the key is pressed	On
RKE-PANIC	PANIC button of the key is not pressed	Off
	PANIC button of the key is pressed	On
RKE-P/W OPEN	UNLOCK button of the key is not pressed	Off
	UNLOCK button of the key is pressed and held	On

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status	
RKE-MODE CHG	LOCK/UNLOCK button of the key is not pressed and held simultaneously	Off	A
	LOCK/UNLOCK button of the key is pressed and held simultaneously	On	B
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V	C
	Dark outside of the vehicle	Close to 0 V	
REQ SW -DR	Driver door request switch is not pressed	Off	D
	Driver door request switch is pressed	On	
REQ SW -AS	Passenger door request switch is not pressed	Off	E
	Passenger door request switch is pressed	On	
REQ SW -RR	<b>NOTE:</b> The item is indicated, but not monitored.	Off	F
REQ SW -RR	<b>NOTE:</b> The item is indicated, but not monitored.	Off	G
REQ SW -BD/TR	Back door request switch is not pressed	Off	H
	Back door request switch is pressed	On	
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off	I
	Push-button ignition switch (push switch) is pressed	On	
IGN RLY2 -F/B	Ignition switch in OFF or ACC position	Off	J
	Ignition switch in ON position	On	
ACC RLY -F/B	<b>NOTE:</b> The item is indicated, but not monitored.	Off	K
CLUCH SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off	L
BRAKE SW 1	The brake pedal is depressed when No. 7 fuse is blown	Off	M
	The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal	On	
BRAKE SW 2	The brake pedal is not depressed	Off	N
	Stop lamp switch 1 signal circuit is normal	On	
DETE/CANCL SW	Selector lever in P position	Off	O
	Selector lever in any position other than P	On	
SFT PN/N SW	Selector lever in any position other than P and N	Off	P
	Selector lever in P or N position	On	
S/L -LOCK	Steering is unlocked	Off	Q
	Steering is locked	On	
S/L -UNLOCK	Steering is locked	Off	R
	Steering is unlocked	On	
S/L RELAY-F/B	Ignition switch in OFF or ACC position	Off	S
	Ignition switch in ON position	On	
UNLK SEN -DR	Driver door is unlocked	Off	T
	Driver door is locked	On	
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off	U
	Push-button ignition switch (push-switch) is pressed	On	
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off	V
	Ignition switch in ON position	On	
DETE SW -IPDM	Selector lever in any position other than P	Off	W
	Selector lever in P position	On	

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
SFT PN -IPDM	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
SFT P -MET	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT N -MET	Selector lever in any position other than N	Off
	Selector lever in N position	On
ENGINE STATE	Engine stopped	Stop
	While the engine stalls	Stall
	At engine cranking	Crank
	Engine running	Run
S/L LOCK-IPDM	Steering is unlocked	Off
	Steering is locked	On
S/L UNLK-IPDM	Steering is locked	Off
	Steering is unlocked	On
S/L RELAY-REQ	Steering lock system is not the LOCK condition and the changing condition from LOCK to UNLOCK.	Off
	Steering lock system is the LOCK condition or the changing condition from LOCK to UNLOCK.	On
VEH SPEED 1	While driving	Equivalent to speedometer reading
VEH SPEED 2	While driving	Equivalent to speedometer reading
DOOR STAT-DR	Driver door is locked	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Driver door is unlocked	UNLOCK
DOOR STAT-AS	Passenger door is locked	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Passenger door is unlocked	UNLOCK
ID OK FLAG	Steering is locked	Reset
	Steering is unlocked	Set
PRMT ENG STRT	The engine start is prohibited	Reset
	The engine start is permitted	Set
PRMT RKE STRT	<b>NOTE:</b> The item is indicated, but not monitored.	Reset
KEY SW -SLOT	The key is not inserted into key slot	Off
	The key is inserted into key slot	On
RKE OPE COUN1	During the operation of the key	Operation frequency of the key
RKE OPE COUN2	<b>NOTE:</b> The item is indicated, but not monitored.	—
CONFIRM ID ALL	The key ID that the key slot receives is not recognized by any key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by any key ID registered to BCM.	Done
CONFIRM ID4	The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the fourth key ID registered to BCM.	Done

## BCM (BODY CONTROL MODULE)

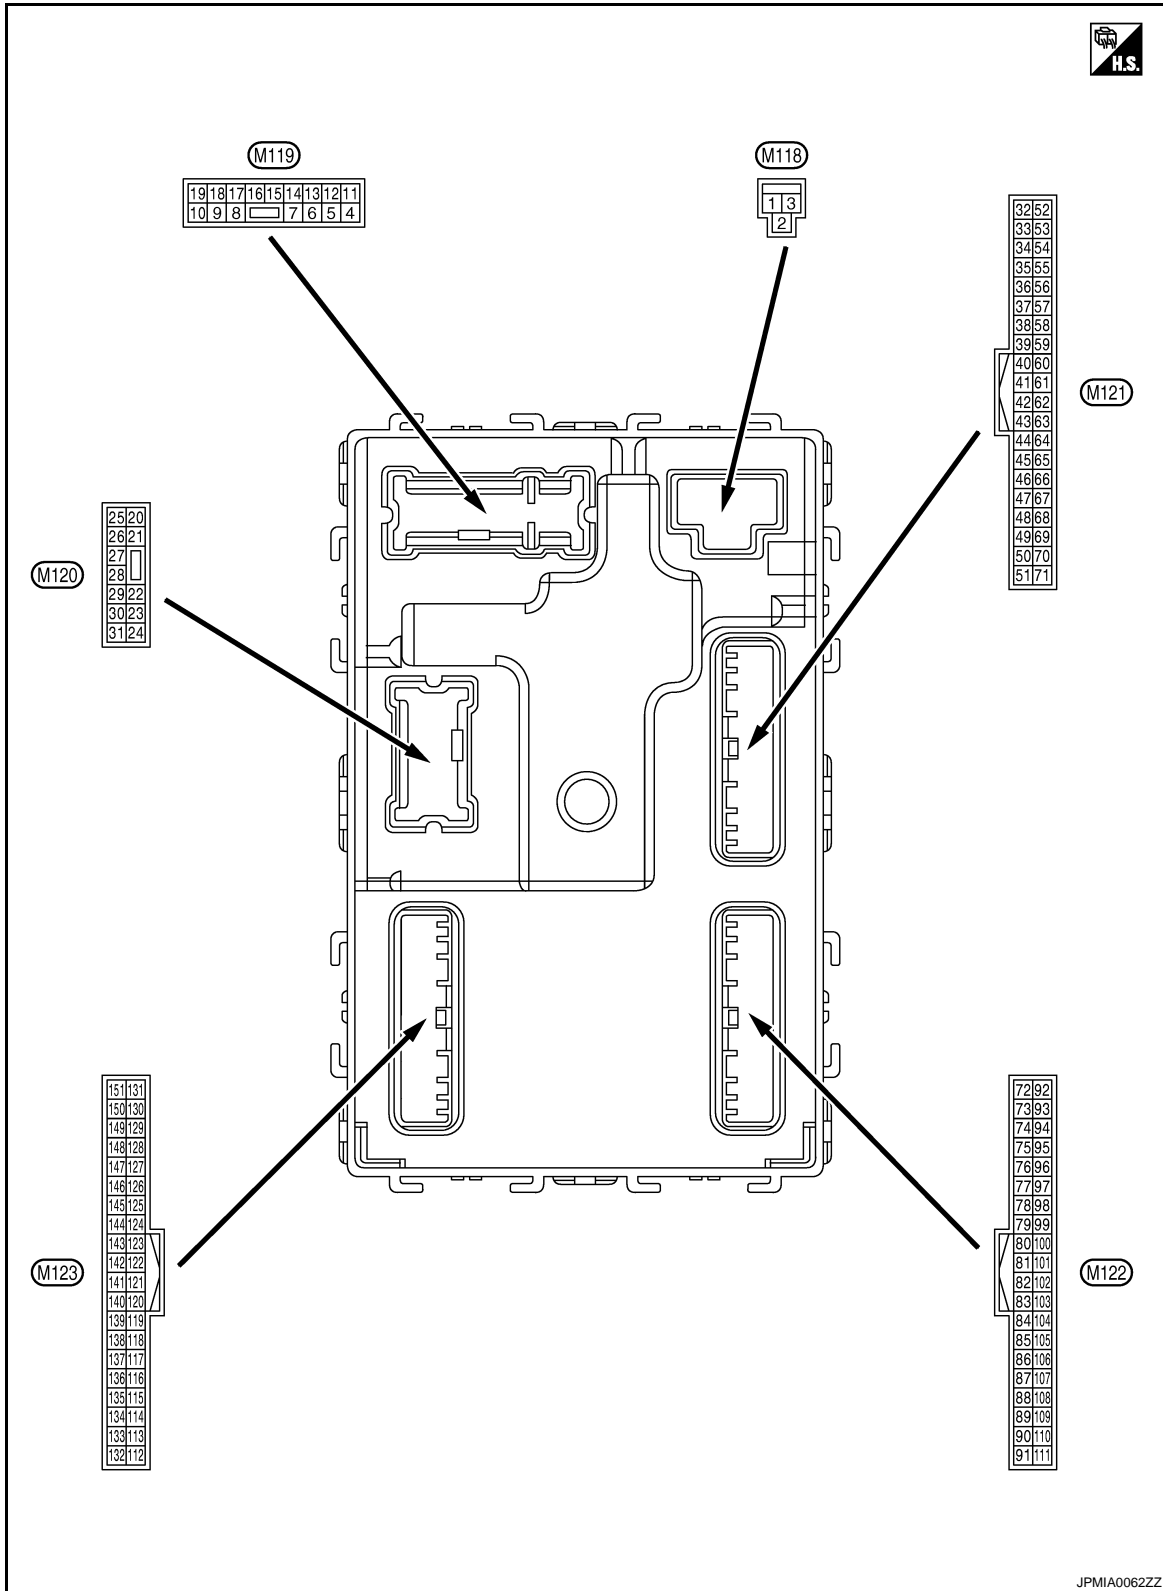
### < ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status	
CONFIRM ID3	The key ID that the key slot receives is not recognized by the third key ID registered to BCM.	Yet	A
	The key ID that the key slot receives is recognized by the third key ID registered to BCM.	Done	B
CONFIRM ID2	The key ID that the key slot receives is not recognized by the second key ID registered to BCM.	Yet	C
	The key ID that the key slot receives is recognized by the second key ID registered to BCM.	Done	
CONFIRM ID1	The key ID that the key slot receives is not recognized by the first key ID registered to BCM.	Yet	D
	The key ID that the key slot receives is recognized by the first key ID registered to BCM.	Done	
TP 4	The ID of fourth key is not registered to BCM	Yet	E
	The ID of fourth key is registered to BCM	Done	
TP 3	The ID of third key is not registered to BCM	Yet	F
	The ID of third key is registered to BCM	Done	
TP 2	The ID of second key is not registered to BCM	Yet	G
	The ID of second key is registered to BCM	Done	
TP 1	The ID of first key is not registered to BCM	Yet	H
	The ID of first key is registered to BCM	Done	
AIR PRESS FL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front LH tire	I
AIR PRESS FR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front RH tire	J
AIR PRESS RR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear RH tire	
AIR PRESS RL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear LH tire	
ID REGST FL1	ID of front LH tire transmitter is registered	Done	RF
	ID of front LH tire transmitter is not registered	Yet	
ID REGST FR1	ID of front RH tire transmitter is registered	Done	L
	ID of front RH tire transmitter is not registered	Yet	
ID REGST RR1	ID of rear RH tire transmitter is registered	Done	M
	ID of rear RH tire transmitter is not registered	Yet	
ID REGST RL1	ID of rear LH tire transmitter is registered	Done	N
	ID of rear LH tire transmitter is not registered	Yet	
WARNING LAMP	Tire pressure indicator OFF	Off	O
	Tire pressure indicator ON	On	
BUZZER	Tire pressure warning alarm is not sounding	Off	P
	Tire pressure warning alarm is sounding	On	

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## TERMINAL LAYOUT




## PHYSICAL VALUES



# BCM (BODY CONTROL MODULE)


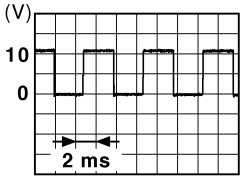
## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (GR)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		Battery voltage
3 (L)	Ground	P/W power supply (RAP)	Output	Ignition switch ON		Battery voltage
4 (P)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)		0 V
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)		Battery voltage
5 (G)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
7 (W)	Ground	Step lamp	Output	Step lamp	ON	0 V
					OFF	Battery voltage
8 (V)	Ground	All doors LOCK	Output	All doors	LOCK (Actuator is activated)	Battery voltage
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door UNLOCK	Output	Driver door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
10 (P)	Ground	Rear RH door and rear LH door UN- LOCK	Output	Rear RH door and rear LH door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
11 (LG)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
14 (O)	Ground	Push-button ignition switch illumination ground	Output	Tail lamp	OFF	0 V
					ON	<p><b>NOTE:</b> When the illumination brightening/dimming level is in the neutral position</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p>
15 (L)	Ground	ACC indicator lamp	Output	Ignition switch	OFF	Battery voltage
					ACC	0.2 V
					ON	0 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P







# BCM (BODY CONTROL MODULE)
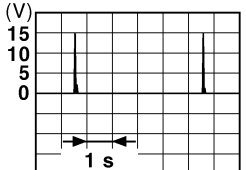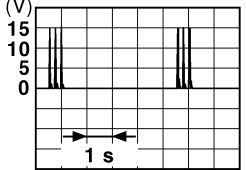
## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
17 (G)	Ground	Turn signal RH	Output	Ignition switch OFF	0 V
				Ignition switch ON	Turn signal switch RH
18 (BR)	Ground	Turn signal LH	Output	Ignition switch OFF	0 V
				Ignition switch ON	Turn signal switch LH
19 (Y)	Ground	Room lamp timer control	Output	Interior room lamp OFF	Battery voltage
				Interior room lamp ON	0 V
23 (BR)	Ground	Back door open	Output	Back door OPEN (Back door opener actuator is activated)	Battery voltage
				Back door Other than OPEN (Back door opener actuator is not activated)	0 V
26 (G)	Ground	Rear wiper	Output	Rear wiper OFF (Stopped)	0 V
				Rear wiper ON (Operated)	Battery voltage
34*1 (B)	Ground	Luggage room antenna (-)	Output	Ignition switch OFF	<p>When Intelligent Key is in the passenger compartment</p>  <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				Ignition switch OFF	<p>When Intelligent Key is not in the passenger compartment</p>  <p style="text-align: right; font-size: small;">JMKIA0063GB</p>

# BCM (BODY CONTROL MODULE)
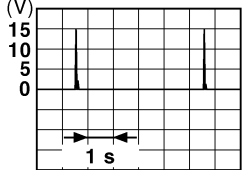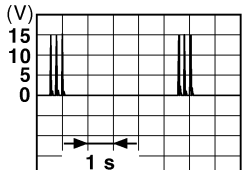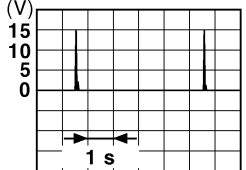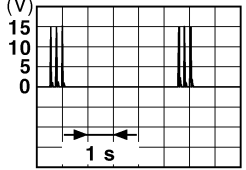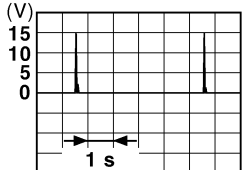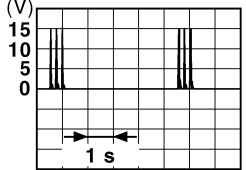
## < ECU DIAGNOSIS >





Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
35*1 (W)	Ground	Luggage room antenna (+)	Output	Ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
38*1 (L)	Ground	Rear bumper antenna (-)	Output	When the back door request switch is operated with ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
39*1 (BR)	Ground	Rear bumper antenna (+)	Output	When the back door request switch is operated with ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
47 (L)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC
				ON	Battery voltage
					0 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF





# BCM (BODY CONTROL MODULE)
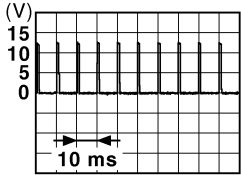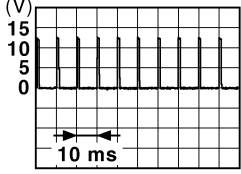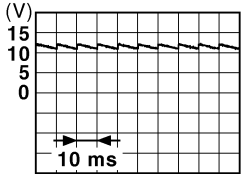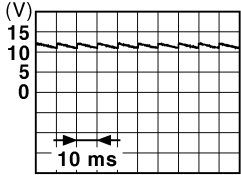
## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
52 (R)	Ground	Starter relay control	Output	Ignition switch ON	When selector lever is in P or N position	Battery voltage
					When selector lever is not in P or N position	0.3 V
				Ignition switch OFF		0 V
61*1 (R)	Ground	Back door request switch	Input	Back door re- quest switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: right; font-size: small;">JPMIA0016GB</p>
64*1 (GR)	Ground	Warning buzzer	Output	Warning buzzer	Sounding	0 V
					Not sounding	Battery voltage
65 (O)	Ground	Rear wiper stop posi- tion	Input	Rear wiper	In stop position	 <p style="text-align: right; font-size: small;">JPMIA0016GB</p>
						1.0 V
					Not in stop position	0 V
66 (Y)	Ground	Back door switch	Input	Back door switch	OFF (When back door closes)	 <p style="text-align: right; font-size: small;">JPMIA0011GB</p>
					11.8 V	
67 (LG)	Ground	Back door opener switch	Input	Back door opener switch	ON (When back door opens)	0 V
					Pressed	0 V
67 (LG)	Ground	Back door opener switch	Input	Back door opener switch	Not pressed	 <p style="text-align: right; font-size: small;">JPMIA0011GB</p>
					11.8 V	

# BCM (BODY CONTROL MODULE)
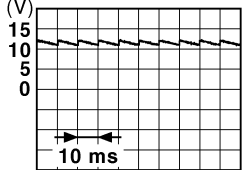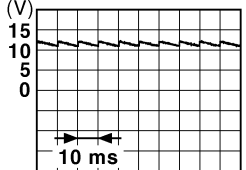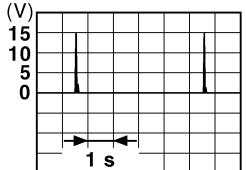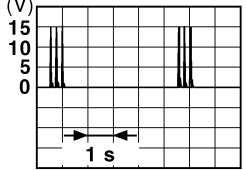
## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
68 (W)	Ground	Rear RH door switch	Input	Rear RH door switch	 <p>11.8 V</p>
				OFF (When rear RH door closes)	0 V
69 (R)	Ground	Rear LH door switch	Input	Rear LH door switch	 <p>11.8 V</p>
				OFF (When rear LH door closes)	0 V
72*1 (B)	Ground	Room antenna 2 (-) (Center console)	Output	Ignition switch OFF	
				When Intelligent Key is in the passenger compartment	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P







# BCM (BODY CONTROL MODULE)
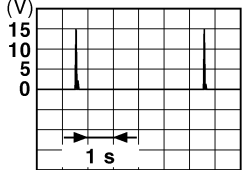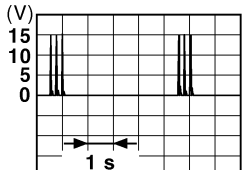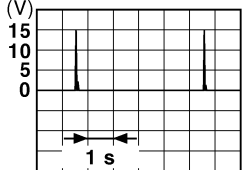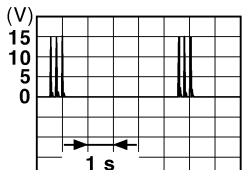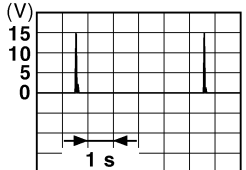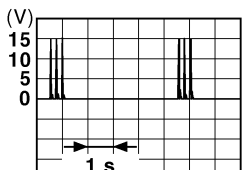
## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
73*1 (W)	Ground	Room antenna 2 (+) (Center console)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
74*1 (Y)	Ground	Passenger door an- tenna (-)	Output	When the pas- senger door re- quest switch is operated with ig- nition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
75*1 (LG)	Ground	Passenger door an- tenna (+)	Output	When the pas- senger door re- quest switch is operated with ig- nition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >





Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
76*1 (V)	Ground	Driver door antenna (-)	Output	When Intelligent Key is in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
77*1 (P)	Ground	Driver door antenna (+)	Output	When Intelligent Key is in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
78*1 (R)	Ground	Room antenna 1 (-) (Instrument panel)	Output	Ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

RF

# BCM (BODY CONTROL MODULE)

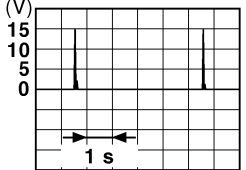
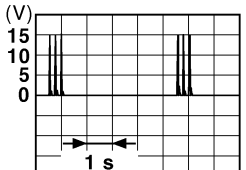
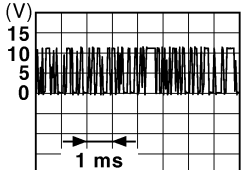
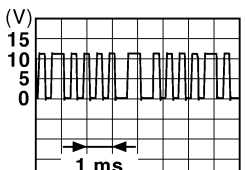
## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
79*1 (G)	Ground	Room antenna 1 (+) (Instrument panel)	Output	Ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>	
				When Intelligent Key is not in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>	
80 (SB)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
81 (O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
82 (BR)	Ground	Ignition relay [fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
83 (P)	Ground	Remote keyless entry receiver communica- tion	Input/ Output	During waiting		 <p style="text-align: right; font-size: small;">JMKIA0064GB</p>
				When operating either button on the key		 <p style="text-align: right; font-size: small;">JMKIA0065GB</p>



# BCM (BODY CONTROL MODULE)
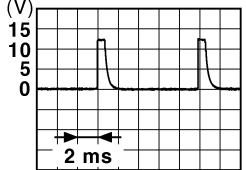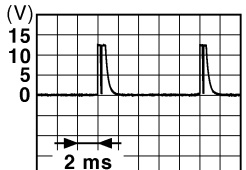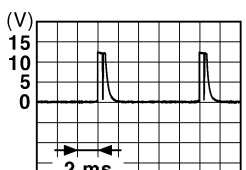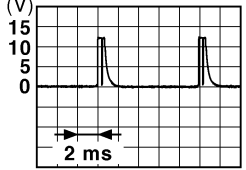
## < ECU DIAGNOSIS >






Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
87 (R)	Ground	Combination switch INPUT 5	Input	Combination switch	All switches OFF (Wiper intermittent dial 4) <div style="text-align: right;">  <p>1.4 V</p> </div>
					Front fog lamp switch ON (Wiper intermittent dial 4) <div style="text-align: right;">  <p>1.3 V</p> </div>
					Rear wiper switch ON (Wiper intermittent dial 4) <div style="text-align: right;">  <p>1.3 V</p> </div>
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 6</li> <li>• Wiper intermittent dial 7</li> </ul> <div style="text-align: right;">  <p>1.3 V</p> </div>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF




# BCM (BODY CONTROL MODULE)
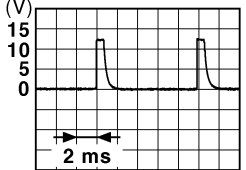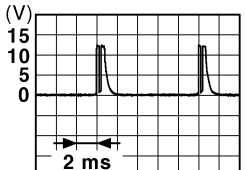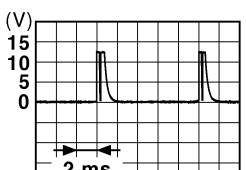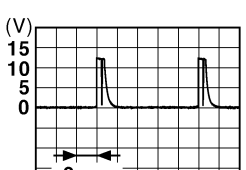
## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
88 (GR)	Ground	Combination switch INPUT 3	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>
					Lighting switch HI (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0036GB</p> <p style="text-align: center;">1.3 V</p>
					Lighting switch 2ND (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0037GB</p> <p style="text-align: center;">1.3 V</p>
					Rear washer switch ON (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0039GB</p> <p style="text-align: center;">1.3 V</p>
					Any of the conditions below with all switches OFF	 <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p>
89 (BR)	Ground	Push-button ignition switch (push switch)	Input	Push-button igni- tion switch (push switch)	Pressed	0 V
				Not pressed	Battery voltage	
90 (P)	Ground	CAN - L	Input/ Output	—	—	
91 (L)	Ground	CAN - H	Input/ Output	—	—	

# BCM (BODY CONTROL MODULE)

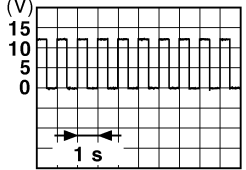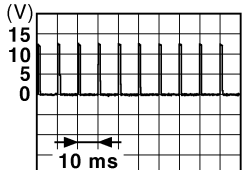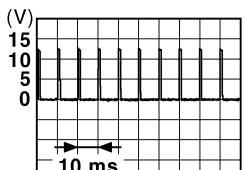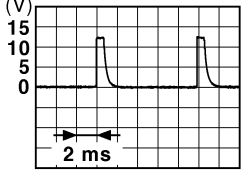

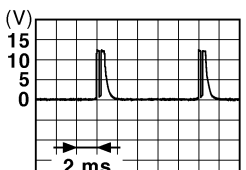
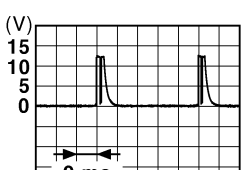
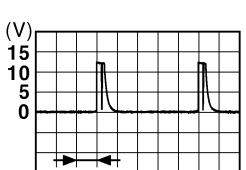
## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
92 (R)*1 (L)*2	Ground	Key slot illumination	Output	Key slot illumination	OFF	0 V
					Blinking	 6.5 V
					ON	Battery voltage
93 (L)	Ground	ON indicator lamp	Output	Ignition switch	OFF or ACC	Battery voltage
					ACC	0.2 V
					ON	0 V
95 (L)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
96 (Y)	Ground	Control device (de- tention switch) power supply	Output	—	Battery voltage	
97 (O)	Ground	Steering lock condi- tion No. 1	Input	Steering lock	LOCK status	0 V
					UNLOCK status	Battery voltage
98 (L)	Ground	Steering lock condi- tion No. 2	Input	Steering lock	LOCK status	Battery voltage
					UNLOCK status	0 V
99 (V)	Ground	Selector lever P posi- tion switch	Input	Selector lever	P position	0 V
					Any position other than P	Battery voltage
100*1 (P)	Ground	Passenger door re- quest switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 1.0 V
101*1 (W)	Ground	Driver door request switch	Input	Driver door re- quest switch	ON (Pressed)	0 V
					OFF (Not pressed)	 1.0 V
102 (Y)	Ground	Blower fan motor re- lay control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
103 (L)	Ground	Remote keyless entry receiver power sup- ply	Output	Ignition switch OFF	Battery voltage	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

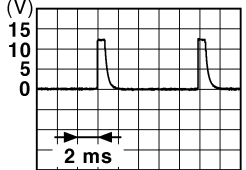
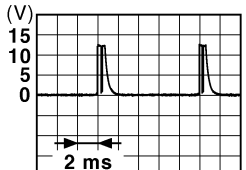

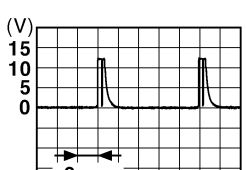

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
106 (Y)	Ground	Steering lock unit power supply	Output	Ignition switch	OFF or ACC 0 V ON	
107 (O)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper intermittent dial 4)	All switches OFF	 1.4 V
					Turn signal switch LH	 1.3 V
					Turn signal switch RH	 1.3 V
					Front wiper switch LO	 1.3 V
					Front washer switch ON	 1.3 V

# BCM (BODY CONTROL MODULE)

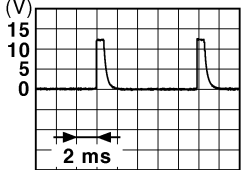

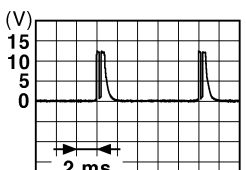
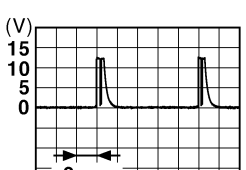
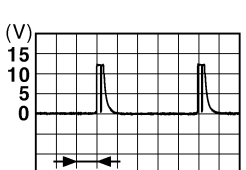
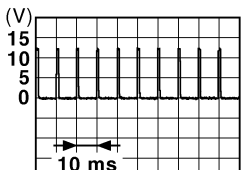
## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
108 (P)	Ground	Combination switch INPUT 4	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 1.4 V
					Lighting switch AUTO (Wiper intermittent dial 4)	 1.3 V
					Lighting switch 1ST (Wiper intermittent dial 4)	 1.3 V
					Rear wiper switch INT (Wiper intermittent dial 4)	 1.3 V
					Any of the conditions below with all switches OFF	 1.3 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
109 (SB)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper intermittent dial 4)	All switches OFF	 <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>
					Lighting switch PASS	 <p style="text-align: right; font-size: small;">JPMIA0037GB</p> <p style="text-align: center;">1.3 V</p>
					Lighting switch 2ND	 <p style="text-align: right; font-size: small;">JPMIA0036GB</p> <p style="text-align: center;">1.3 V</p>
					Front wiper switch INT/ AUTO	 <p style="text-align: right; font-size: small;">JPMIA0038GB</p> <p style="text-align: center;">1.3 V</p>
					Front wiper switch HI	 <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p>
					ON	0 V
110 (G)	Ground	Hazard switch	Input	Hazard switch	 <p style="text-align: right; font-size: small;">JPMIA0012GB</p> <p style="text-align: center;">1.1 V</p>	
				OFF		

# BCM (BODY CONTROL MODULE)

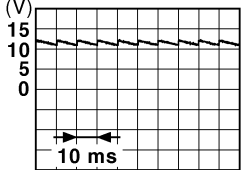
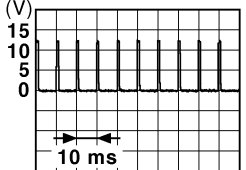
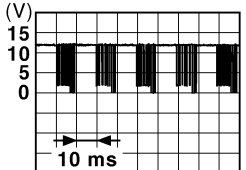
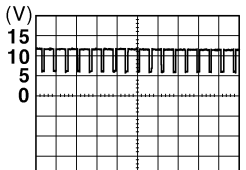
## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
111 (LG)	Ground	Steering lock unit communication	Input/ Output	Steering lock	LOCK status	Battery voltage
					LOCK or UNLOCK	<p style="text-align: right; font-size: small;">JMKIA0066GB</p>
					For 15 seconds after UN- LOCK	Battery voltage
				15 seconds or later after UNLOCK	0 V	
112 (R)	Ground	Rain sensor serial link	Input/ Output	Ignition switch ON	<p style="text-align: right; font-size: small;">JPMIA0156GB</p>	
					8.7 V	
113*3 (O)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
116 (GR)	Ground	Stop lamp switch 1	Input	—	Battery voltage	
118 (L)	Ground	Stop lamp switch 2	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is de- pressed)	Battery voltage
119*1 (W)	Ground	Front door lock as- sembly driver side (Unlock sensor)	Input	Driver door	LOCK status (unlock sen- sor switch OFF)	<p style="text-align: right; font-size: small;">JPMIA0012GB</p>
					UNLOCK status (unlock sensor switch ON)	0 V
121 (Y)	Ground	Key slot switch	Input	When the key is inserted into key slot	Battery voltage	
				When the key is not inserted into key slot	0 V	
122 (R)	Ground	ACC feedback	Input	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
123 (G)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)






## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
124 (R)	Ground	Passenger door switch	Input	Passenger door switch	OFF (When passenger door closes)	 <p style="text-align: right; font-size: small;">JPMIA0011GB</p> <p style="text-align: center;">11.8 V</p>
					ON (When passenger door opens)	0 V
130*4 (BR)	Ground	Rear window defog- ger switch	Input	Ignition switch ON	Rear window defogger switch OFF	 <p style="text-align: right; font-size: small;">JPMIA0012GB</p> <p style="text-align: center;">1.1 V</p>
					Rear window defogger switch ON	0 V
132 (G)	Ground	Power window switch communication	Input/ Output	Ignition switch ON	 <p style="text-align: right; font-size: small;">JPMIA0013GB</p> <p style="text-align: center;">10.2 V</p>	
					Ignition switch OFF or ACC	Battery voltage
133 (W)	Ground	Push-button ignition switch illumination	Output	Push-button igni- tion switch illumi- nation	ON (When tail lamps OFF)	9.5 V
					ON (When tail lamps ON)	<p style="text-align: center;"><b>NOTE:</b> The pulse width of this wave is varied by the illumination bright- ening/dimming level.</p>  <p style="text-align: right; font-size: small;">JPMIA0159GB</p>
					OFF	0 V
137 (P)	Ground	Receiver and sensor ground	Input	Ignition switch ON		0 V
138 (V)	Ground	Receiver and sensor power supply	Output	Ignition switch	OFF	0 V
					ACC or ON	5.0 V



# BCM (BODY CONTROL MODULE)
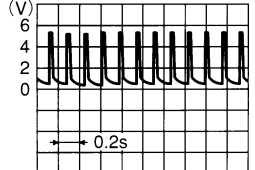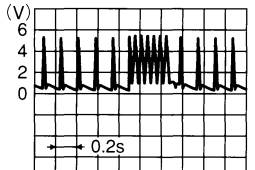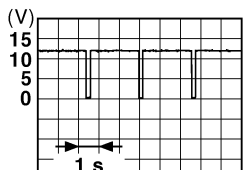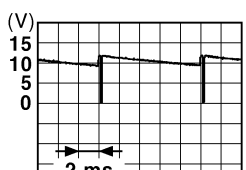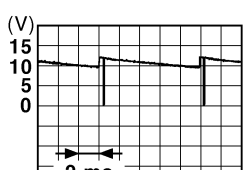
## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
139*5 (O)	Ground	Tire pressure receiver communication	Input/ Output	Ignition switch ON	Standby state  OCC3881D
				When receiving the signal from the transmitter  OCC3880D	
140 (GR)	Ground	Selector lever P/N position	Input	Selector lever	P or N position Battery voltage
				Except P and N positions	0 V
141 (O)	Ground	Security indicator	Output	Security indicator	ON 0 V
				Blinking  JPMIA0014GB 11.3 V	
				OFF Battery voltage	
142 (L)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper intermittent dial 4)	All switches OFF 0 V
				Lighting switch 1ST	 JPMIA0031GB 10.7 V
				Lighting switch HI	
				Lighting switch 2ND	
Turn signal switch RH					
143 (W)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switches OFF (Wiper intermittent dial 4) 0 V
				Front wiper switch HI (Wiper intermittent dial 4)	 JPMIA0032GB 10.7 V
				Rear wiper switch INT (Wiper intermittent dial 4)	
				Any of the conditions below with all switches OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 3</li> <li>• Wiper intermittent dial 6</li> <li>• Wiper intermittent dial 7</li> </ul>	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

RF

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)		
+	-	Signal name	Input/ Output				
144 (P)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switches OFF (Wiper intermittent dial 4)	0 V	
					Front washer switch ON (Wiper intermittent dial 4)		
					Rear wiper switch ON (Wiper intermittent dial 4)		
					Rear washer switch ON (Wiper intermittent dial 4)		
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 5</li> <li>• Wiper intermittent dial 6</li> </ul>		10.7 V
145 (V)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper intermit- tent dial 4)	All switches OFF	0 V	
					Front wiper switch INT/ AUTO		
					Front wiper switch LO		
					Lighting switch AUTO		10.7 V
146 (Y)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper intermit- tent dial 4)	All switches OFF	0 V	
					Front fog lamp switch ON		
					Lighting switch 2ND		
					Lighting switch PASS		
					Turn signal switch LH		10.7 V
149*5 (W)	Ground	Tire pressure warn- ing check switch	Input	Ignition switch ON		11.8 V	
150 (SB)	Ground	Driver door switch	Input	Driver door switch	OFF (When driver door closes)		11.8 V
					ON (When driver door opens)	0 V	

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
151 (G)	Ground	Rear window defogger relay control	Output	Rear window defogger	Active	0 V
					Not activated	Battery voltage

**NOTE:**

- \*1: With Intelligent Key system
- \*2: Without Intelligent Key system
- \*3: With auto light system
- \*4: Without BOSE audio system
- \*5: With TPMS

## Wiring Diagram - BCM -

INFOID:000000004754601

UP TO VIN: JN8AZ18U\*9W100000, JN8AZ18W\*9W200000 (EXCEPT FOR MEXICO),

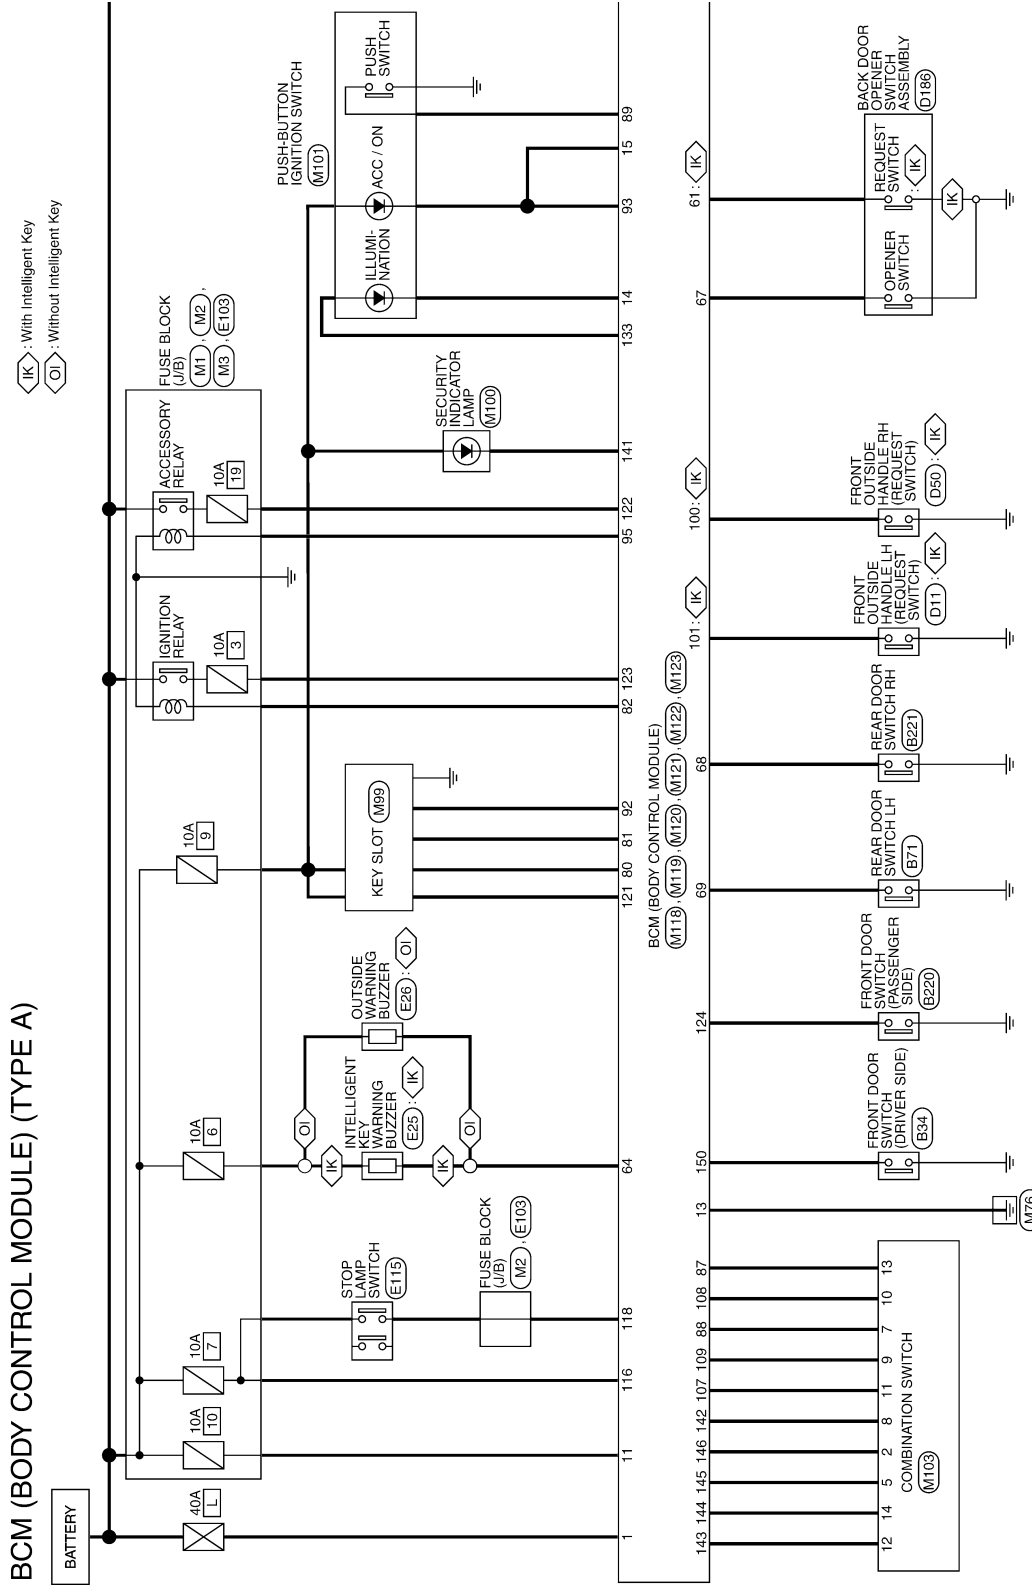
A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

JN8AZ18U\*9W710000, JN8AZ18W\*9W810000 (FOR MEXICO)



2008/09/23


JCMWM3152G

# BCM (BODY CONTROL MODULE)
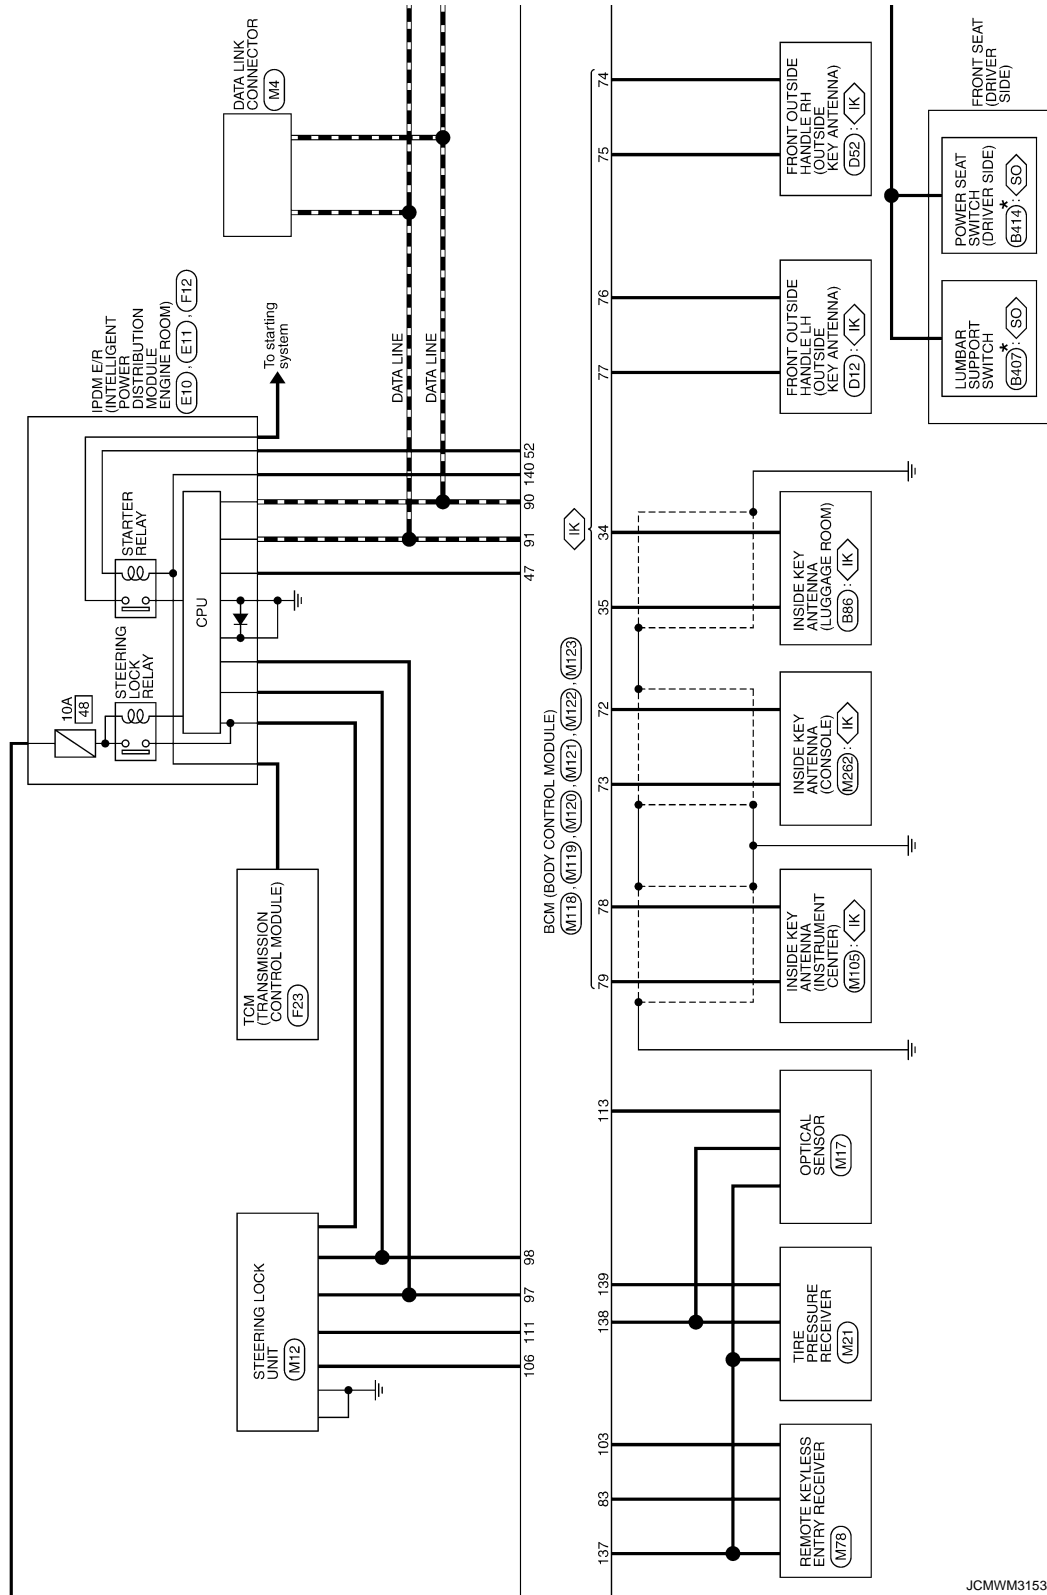
< ECU DIAGNOSIS >

◁ IK ▷ : With Intelligent Key  
 ▷ SO ▷ : With power seat without automatic drive positioner

\* : This connector is not shown in "Harness Layout".



JCMWM3153G1



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)
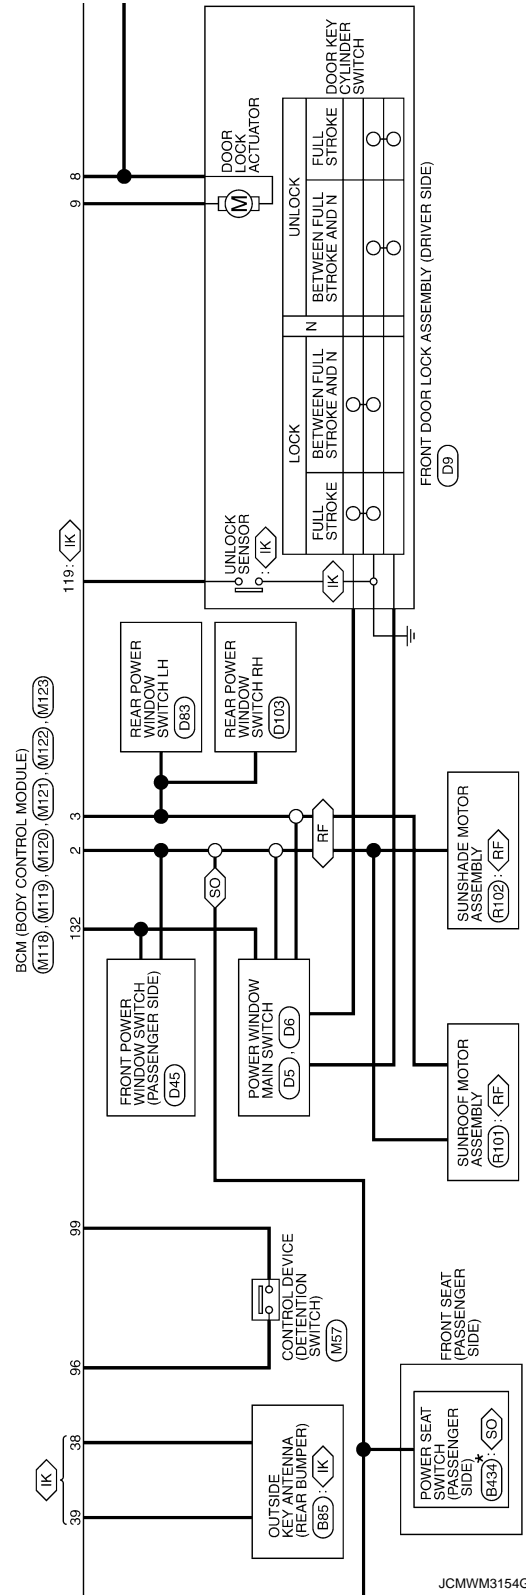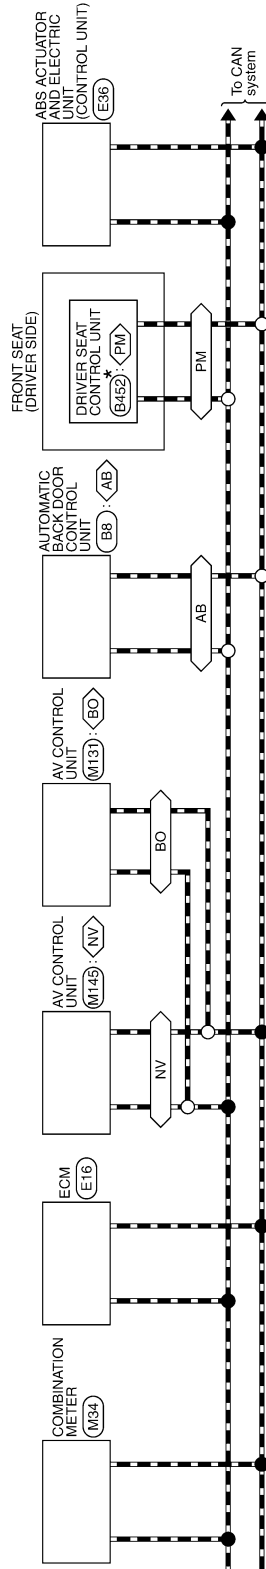
< ECU DIAGNOSIS >

- ◊ IK : With Intelligent Key
- ◊ NV : With navigation system
- ◊ BC : With BOSE system without navigation system
- ◊ FE : With sunroof
- ◊ PM : With automatic drive positioner
- ◊ SO : With power seat without automatic drive positioner
- ◊ AB : With automatic back door


\*: This connector is not shown in "Harness Layout".



JCMWWM3154G

# BCM (BODY CONTROL MODULE)
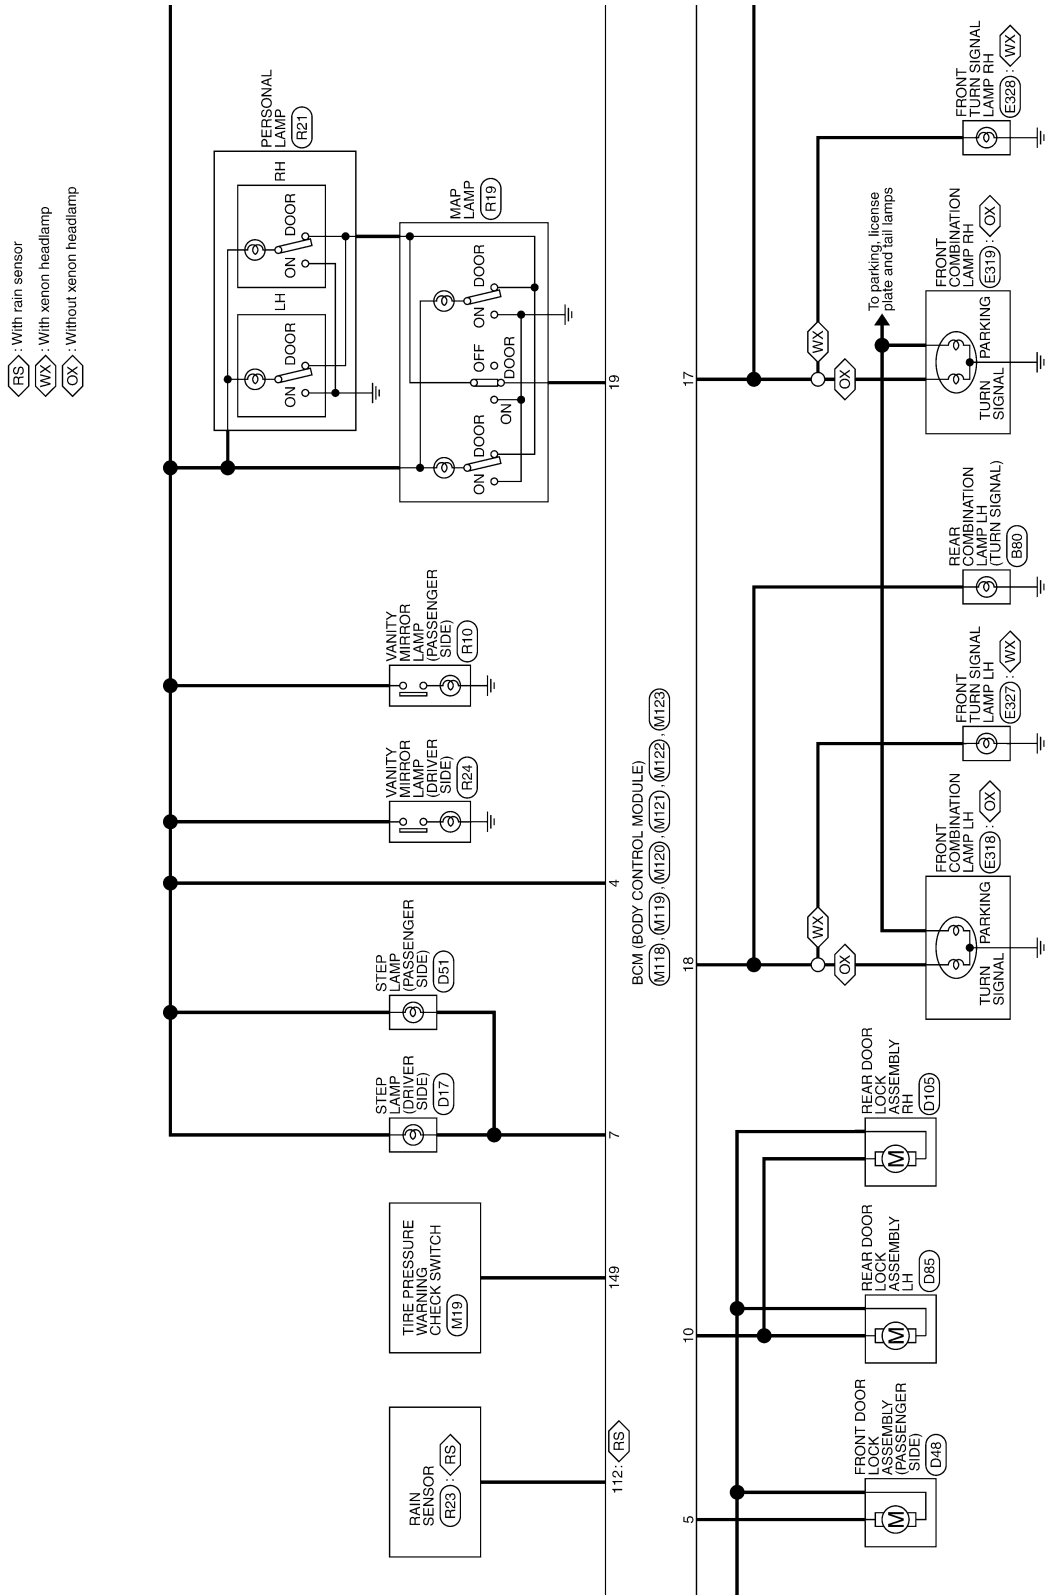
< ECU DIAGNOSIS >




JCMWM3155G1

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)
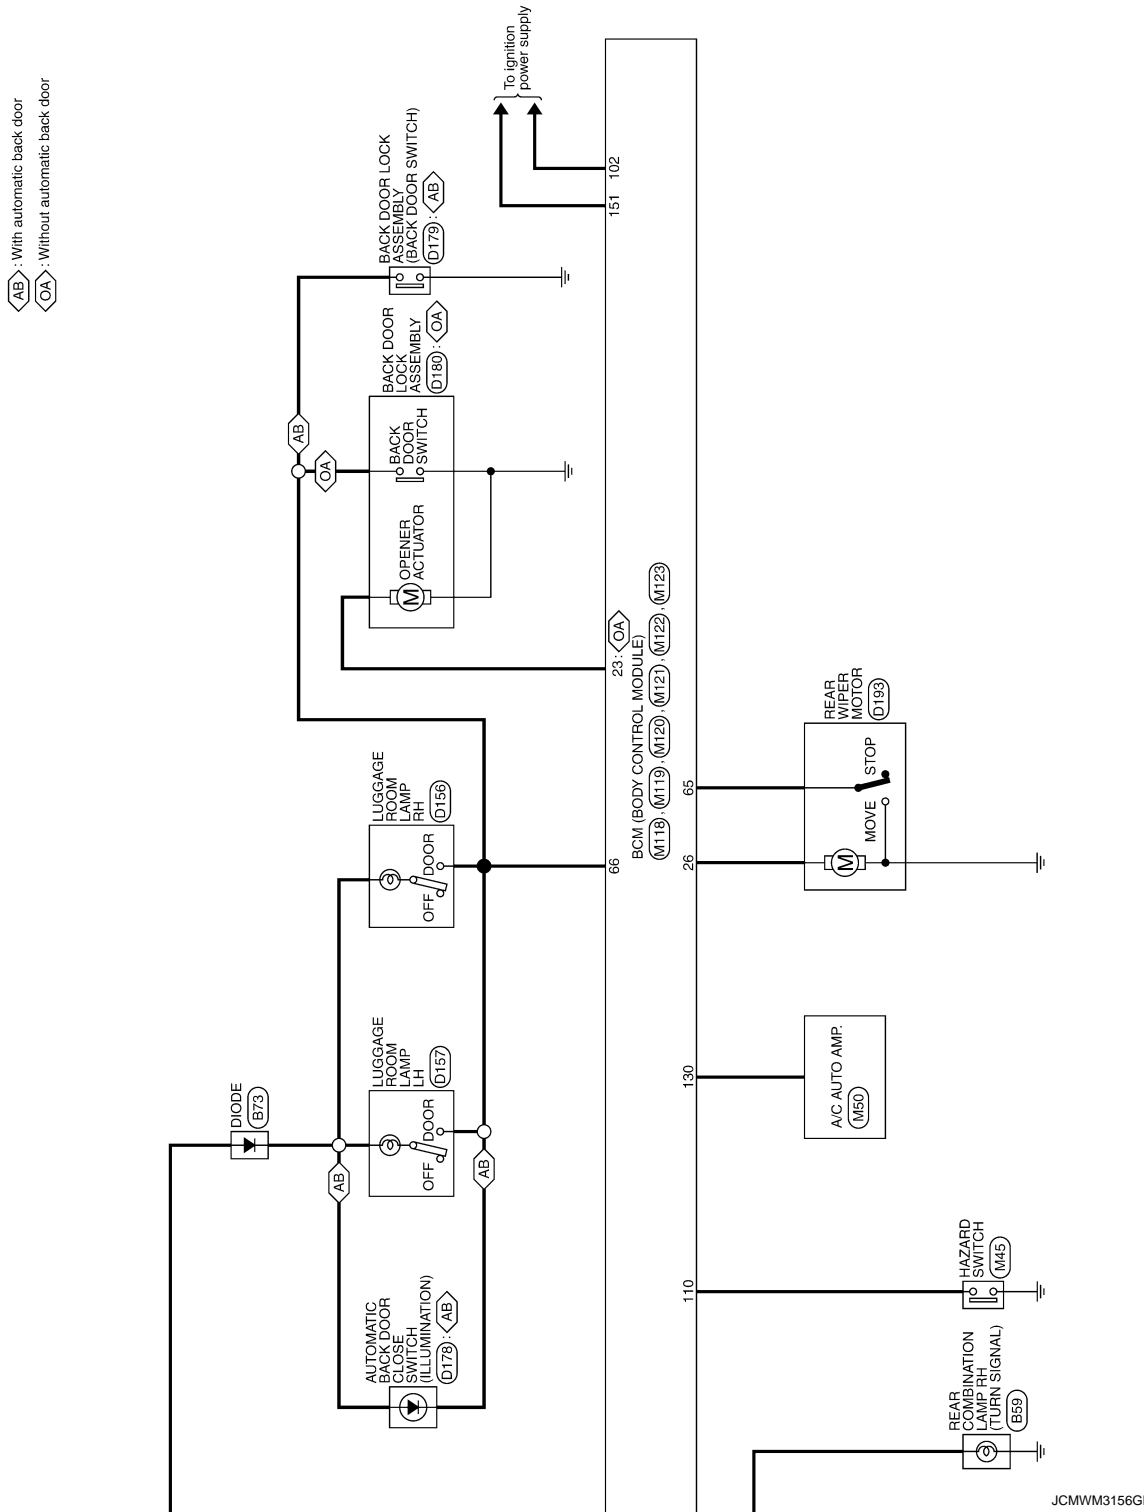
< ECU DIAGNOSIS >






# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## BCM (BODY CONTROL MODULE) (TYPE A)

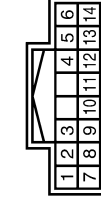Connector No.	M113
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
2	Y	OUTPUT 4
3	V	OUTPUT 3
5	GR	INPUT 3
7	L	OUTPUT 5
8	SB	INPUT 2
10	P	INPUT 4
11	O	INPUT 1
12	W	OUTPUT 1
13	R	INPUT 5
14	P	OUTPUT 2



Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS




Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC




Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	GR	POWER WINDOW POWER SUPPLY (BAT)
3	L	POWER WINDOW POWER SUPPLY (RAP)

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FGY-NH



Terminal No.	Color of Wire	Signal Name [Specification]
23	BR	BACK DOOR OPEN OUTPUT
26	G	REAR WIPER OUTPUT

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
4	P	INTERIOR ROOM LAMP POWER SUPPLY
5	G	PASSENGER DOOR UNLOCK OUTPUT
7	W	STEP LAMP OUTPUT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
10	P	REAR DOOR UNLOCK OUTPUT
11	LG	BAT (FUSE)
13	B	GND
14	O	PUSH-BUTTON IGNITION SW ILL GND
15	L	ACC IND
17	G	TURN SIGNAL RH

68	W	REAR RH DOOR SW
69	R	REAR LH DOOR SW

18	BR	TURN SIGNAL LH
19	Y	ROOM LAMP TIMER CONTROL

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


RF

# BCM (BODY CONTROL MODULE)
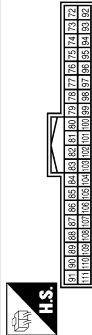
< ECU DIAGNOSIS >

## BCM (BODY CONTROL MODULE) (TYPE A)


Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color of Wire	Signal Name [Specification]
72	B	ROOM ANT2-
73	W	ROOM ANT2+
74	Y	PASSENGER DOOR ANT-
75	LG	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	P	DRIVER DOOR ANT+
78	R	ROOM ANT1-
79	G	ROOM ANT1+
80	SB	IMMOBI ANTENNA CONTROL
81	O	IMMOBI ANTENNA SIGNAL
82	BR	IGN RELAY (F/B) CONT

83	P	KEYLESS ENTRY RECEIVER SIGNAL
87	R	COMBI SW INPUT 5
88	GR	COMBI SW INPUT 3
89	BR	PUSH SW
90	P	CAN-L
91	L	CAN-H
92	R	KEY SLOT ILL[With Intelligent Key]
93	L	KEY SLOT ILL[Without Intelligent Key]
94	L	ON IND
95	L	ACC RELAY CONT
96	Y	A/T DEVICE POWER SUPPLY
97	O	S/L CONDITION 1
98	L	S/L CONDITION 2
99	V	SHIFT P
100	P	PASSENGER DOOR REQUEST SW
101	W	DRIVER DOOR REQUEST SW
102	Y	BLOWER FAN MOTOR RELAY CONT
103	L	KEYLESS ENTRY RECEIVER POWER SUPPLY
106	Y	S/L POWER SUPPLY
107	O	COMBI SW INPUT 1
108	P	COMBI SW INPUT 4
109	SB	COMBI SW INPUT 2
110	G	HAZARD SW
111	LG	S/L COMM

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH

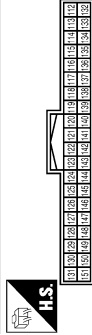

Terminal No.	Color of Wire	Signal Name [Specification]
112	R	RAIN SENSOR SERIAL LINK
113	O	OPTICAL SENSOR
116	GR	FUSE CHECK
118	L	STOP LAMP SW
119	W	DR DOOR UNLOCK SENSOR
121	Y	KEY SLOT SW
122	R	ACC F/B
123	G	IGN F/B
124	R	PASSENGER DOOR SW
130	BR	REAR DEFOGGER SW
132	G	POWER WINDOW SW COMM

133	W	PUSH-BUTTON IGNITION SW ILL POWER
137	P	RECEIVER SENSOR GND
138	V	RECEIVER SENSOR POWER SUPPLY
139	O	TIRE PRESS RECEIVER SIGNAL
140	GR	SHIFT N/P
141	O	SECURITY INDICATOR OUTPUT
142	L	COMBI SW OUTPUT 5
143	W	COMBI SW OUTPUT 1
144	P	COMBI SW OUTPUT 2
145	V	COMBI SW OUTPUT 3
146	Y	COMBI SW OUTPUT 4
149	W	TIRE PRESS WARNING CHECK SW
150	SB	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY


JCMW3158G

FROM VIN: JN8AZ18U\*9W100001, JN8AZ18W\*9W200001 (EXCEPT FOR MEXICO),

# BCM (BODY CONTROL MODULE)
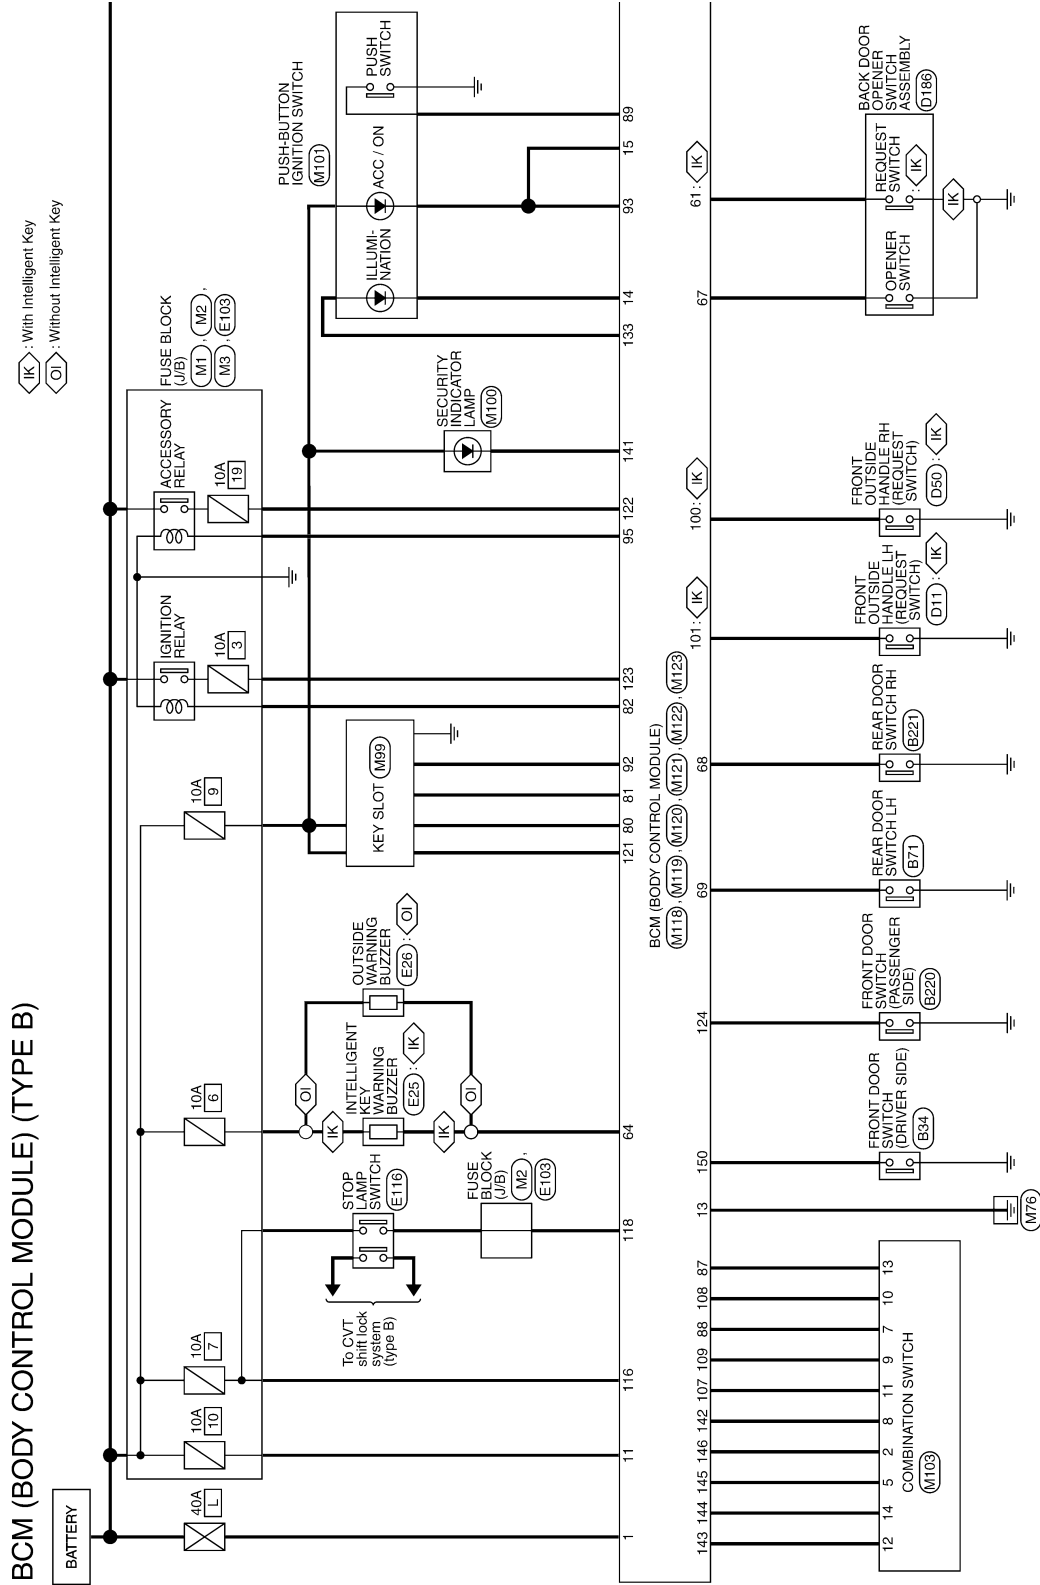
< ECU DIAGNOSIS >

JN8AZ18U\*9W710001, JN8AZ18W\*9W810001 (FOR MEXICO)



2008/09/23

JCMWM3159G1

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P




# BCM (BODY CONTROL MODULE)

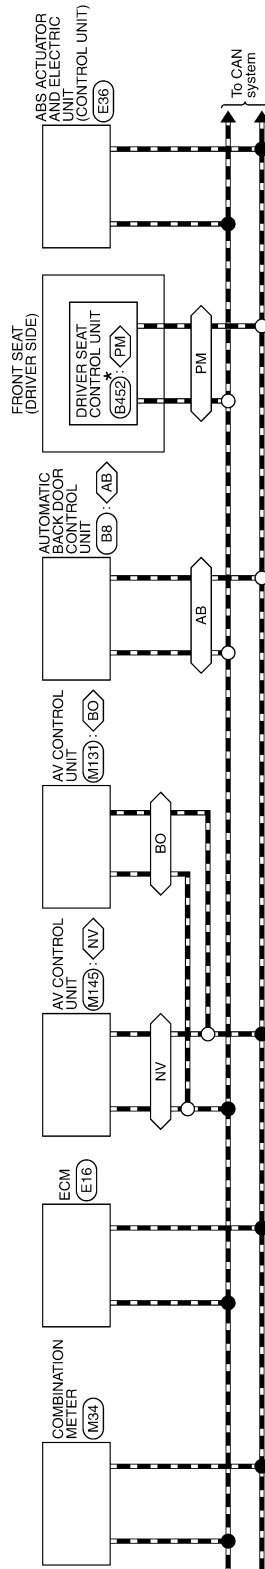
< ECU DIAGNOSIS >

- ◊ IK : With Intelligent Key
- ◊ NV : With navigation system
- ◊ BO : With BOSE system without navigation system
- ◊ PM : With sunroof
- ◊ SO : With automatic drive positioner
- ◊ AB : With power seat without automatic drive positioner
- ◊ AB : With automatic back door

\* : This connector is not shown in "Harness Layout".



BCM (BODY CONTROL MODULE)

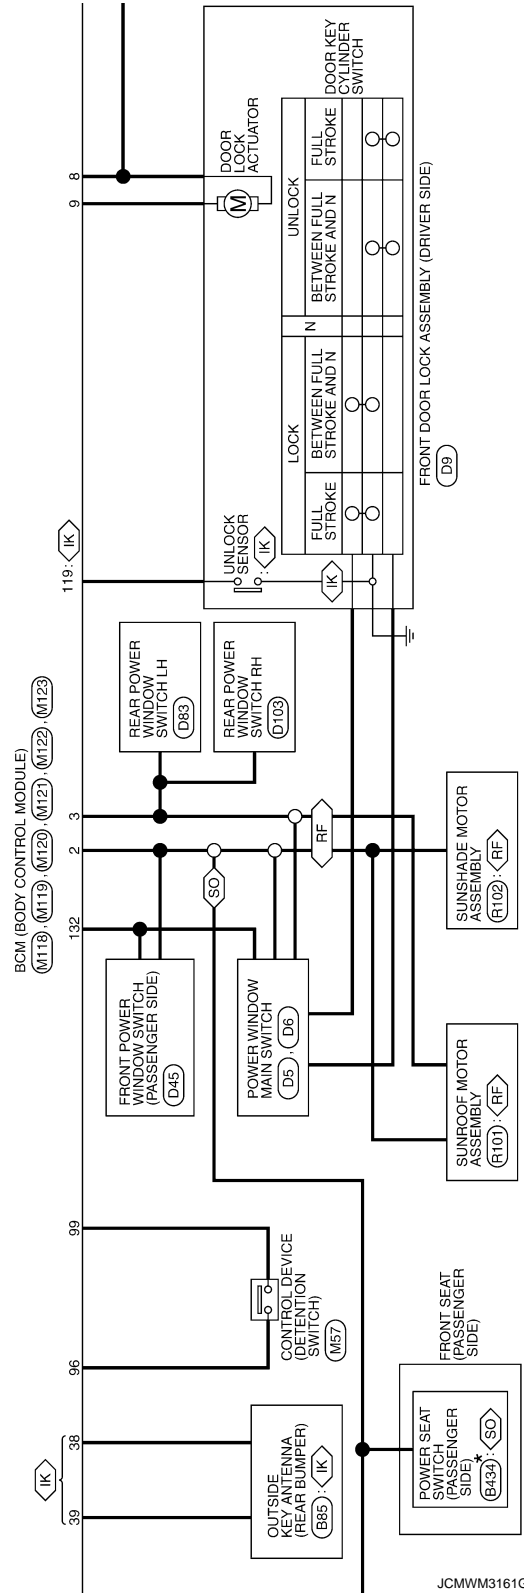


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

RF

# BCM (BODY CONTROL MODULE)

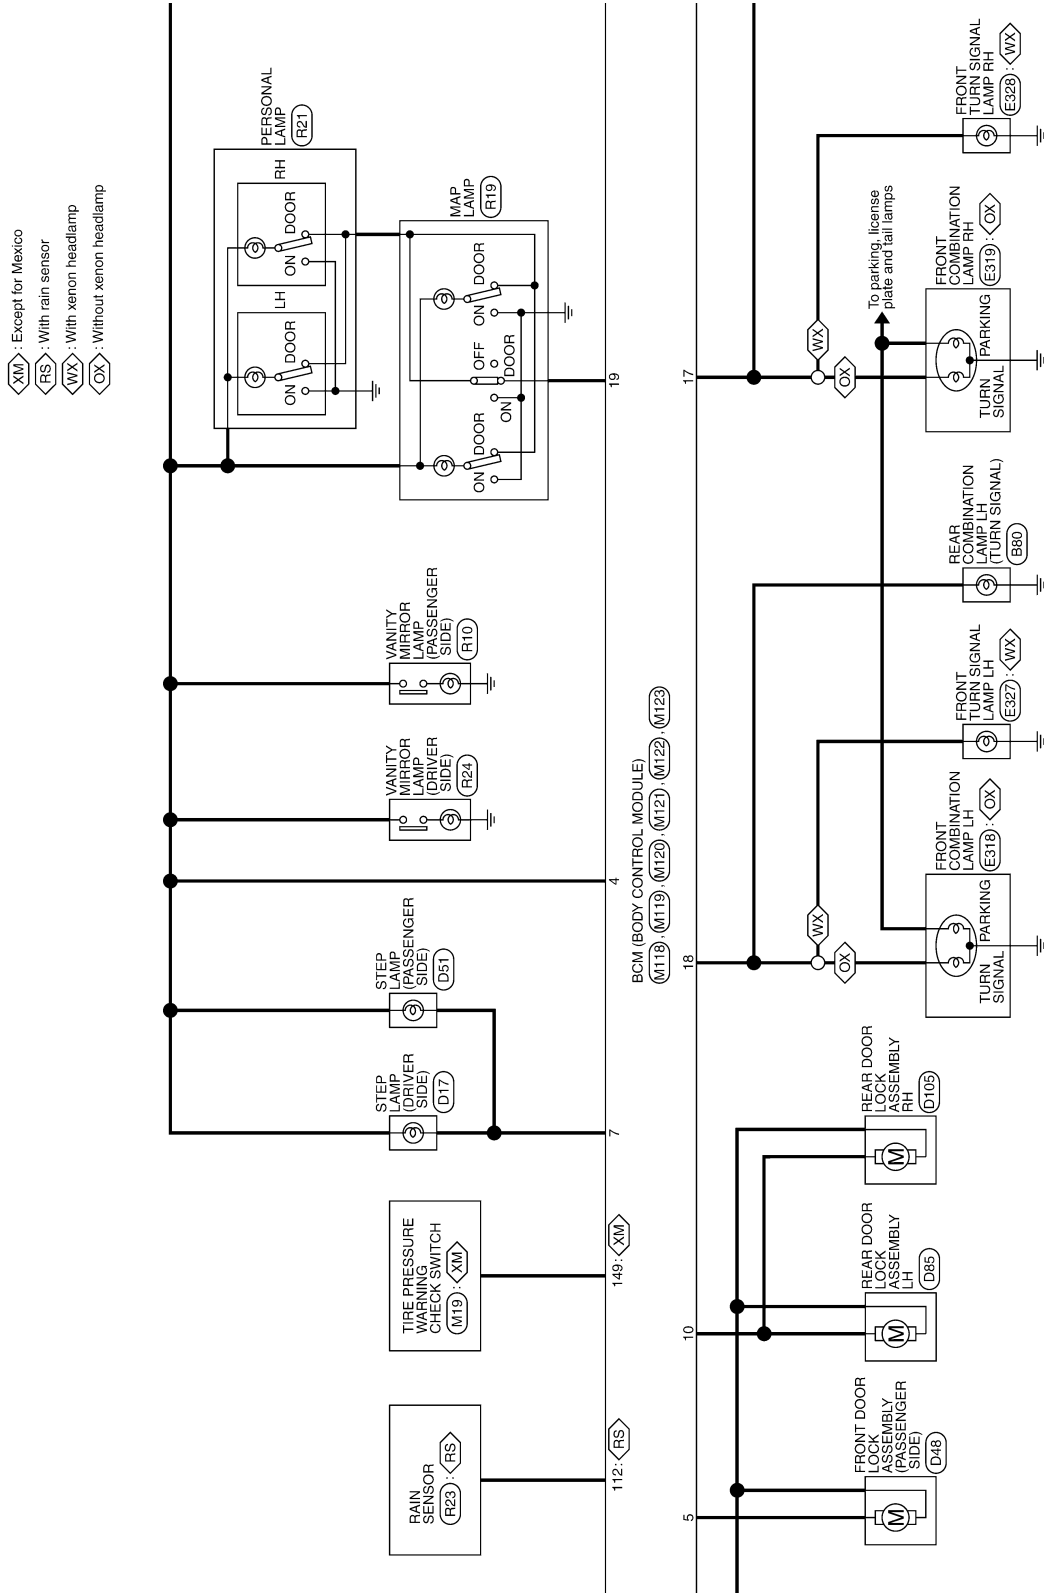
< ECU DIAGNOSIS >



JCMW3162G

# BCM (BODY CONTROL MODULE)
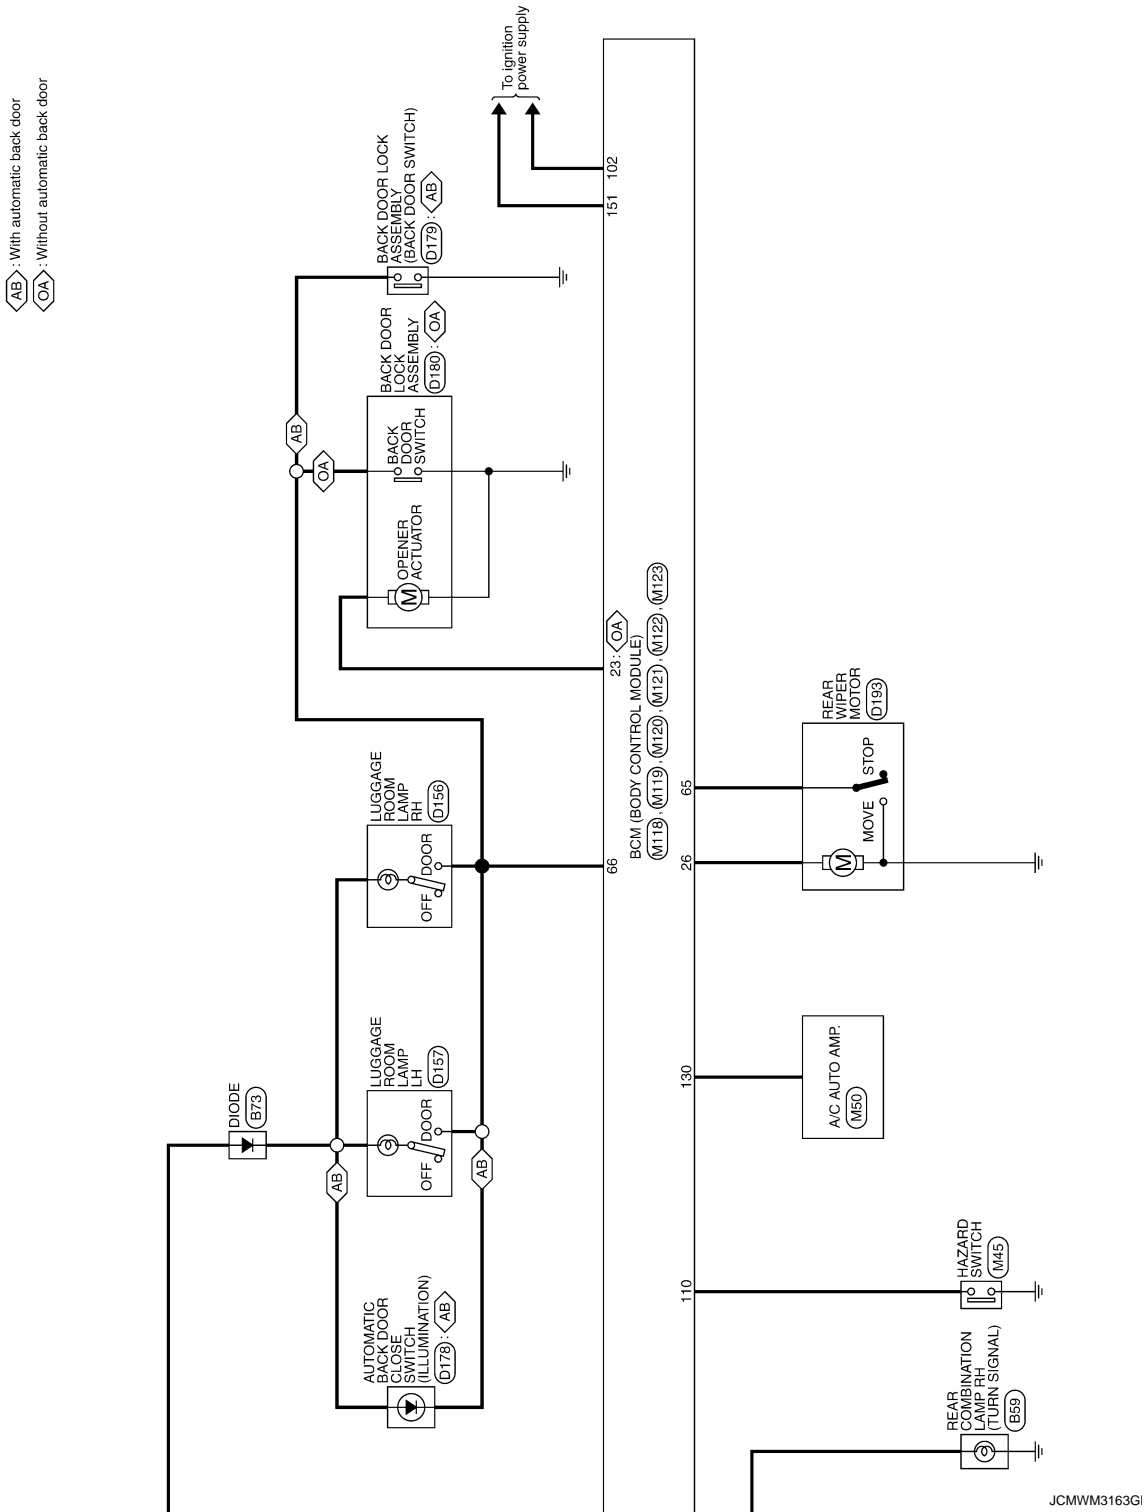
< ECU DIAGNOSIS >




A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## BCM (BODY CONTROL MODULE) (TYPE B)

Connector No.	M103
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
2	Y	OUTPUT 4
5	V	OUTPUT 3
7	GR	INPUT 3
8	L	OUTPUT 5
9	SB	INPUT 2
10	P	INPUT 4
11	O	INPUT 1
12	W	OUTPUT 1
13	R	INPUT 5
14	P	OUTPUT 2



Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS



Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	GR	POWER WINDOW POWER SUPPLY (BAT)
3	L	POWER WINDOW POWER SUPPLY (RAP)


Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FGY-NH



Terminal No.	Color of Wire	Signal Name [Specification]
23	BR	BACK DOOR OPEN OUTPUT
26	G	REAR WIPER OUTPUT

Terminal No.	Color of Wire	Signal Name [Specification]
34	B	LUGGAGE ROOM ANTI-
35	W	LUGGAGE ROOM ANTI+
38	L	REAR BUMPER ANTI-
39	BR	REAR BUMPER ANTI+
47	L	IGN RELAY /PDM E/R CONT
52	R	STARTER RELAY CONT
61	R	BACK DOOR OPENER REQUEST SW
64	GR	REQUEST SW BUZZER
65	O	REAR WIPER STOP POSITION
66	Y	BACK DOOR SW
67	LG	BACK DOOR OPENER SW

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
4	P	INTERIOR ROOM LAMP POWER SUPPLY
5	G	PASSENGER DOOR UNLOCK OUTPUT
7	W	STEP LAMP OUTPUT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
10	P	REAR DOOR UNLOCK OUTPUT
11	LG	BAT (GUSE)
13	B	GND
14	O	PUSH-BUTTON IGNITION SW ILL GND
15	L	ACC IND
17	G	TURN SIGNAL RH

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS

Terminal No.	68	W	REAR RH DOOR SW
69	R	REAR LH DOOR SW	

Terminal No.	18	BR	TURN SIGNAL LH
19	Y	ROOM LAMP TIMER CONTROL	

JCMWM3164G



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## BCM (BODY CONTROL MODULE) (TYPE B)

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303	304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319	320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	347	348	349	350	351	352	353	354	355	356	357	358	359	360	361	362	363	364	365	366	367	368	369	370	371	372	373	374	375	376	377	378	379	380	381	382	383	384	385	386	387	388	389	390	391	392	393	394	395	396	397	398	399	400	401	402	403	404	405	406	407	408	409	410	411	412	413	414	415	416	417	418	419	420	421	422	423	424	425	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	442	443	444	445	446	447	448	449	450	451	452	453	454	455	456	457	458	459	460	461	462	463	464	465	466	467	468	469	470	471	472	473	474	475	476	477	478	479	480	481	482	483	484	485	486	487	488	489	490	491	492	493	494	495	496	497	498	499	500	501	502	503	504	505	506	507	508	509	510	511	512	513	514	515	516	517	518	519	520	521	522	523	524	525	526	527	528	529	530	531	532	533	534	535	536	537	538	539	540	541	542	543	544	545	546	547	548	549	550	551	552	553	554	555	556	557	558	559	560	561	562	563	564	565	566	567	568	569	570	571	572	573	574	575	576	577	578	579	580	581	582	583	584	585	586	587	588	589	590	591	592	593	594	595	596	597	598	599	600	601	602	603	604	605	606	607	608	609	610	611	612	613	614	615	616	617	618	619	620	621	622	623	624	625	626	627	628	629	630	631	632	633	634	635	636	637	638	639	640	641	642	643	644	645	646	647	648	649	650	651	652	653	654	655	656	657	658	659	660	661	662	663	664	665	666	667	668	669	670	671	672	673	674	675	676	677	678	679	680	681	682	683	684	685	686	687	688	689	690	691	692	693	694	695	696	697	698	699	700	701	702	703	704	705	706	707	708	709	710	711	712	713	714	715	716	717	718	719	720	721	722	723	724	725	726	727	728	729	730	731	732	733	734	735	736	737	738	739	740	741	742	743	744	745	746	747	748	749	750	751	752	753	754	755	756	757	758	759	760	761	762	763	764	765	766	767	768	769	770	771	772	773	774	775	776	777	778	779	780	781	782	783	784	785	786	787	788	789	790	791	792	793	794	795	796	797	798	799	800	801	802	803	804	805	806	807	808	809	810	811	812	813	814	815	816	817	818	819	820	821	822	823	824	825	826	827	828	829	830	831	832	833	834	835	836	837	838	839	840	841	842	843	844	845	846	847	848	849	850	851	852	853	854	855	856	857	858	859	860	861	862	863	864	865	866	867	868	869	870	871	872	873	874	875	876	877	878	879	880	881	882	883	884	885	886	887	888	889	890	891	892	893	894	895	896	897	898	899	900	901	902	903	904	905	906	907	908	909	910	911	912	913	914	915	916	917	918	919	920	921	922	923	924	925	926	927	928	929	930	931	932	933	934	935	936	937	938	939	940	941	942	943	944	945	946	947	948	949	950	951	952	953	954	955	956	957	958	959	960	961	962	963	964	965	966	967	968	969	970	971	972	973	974	975	976	977	978	979	980	981	982	983	984	985	986	987	988	989	990	991	992	993	994	995	996	997	998	999	1000	1001	1002	1003	1004	1005	1006	1007	1008	1009	1010	1011	1012	1013	1014	1015	1016	1017	1018	1019	1020	1021	1022	1023	1024	1025	1026	1027	1028	1029	1030	1031	1032	1033	1034	1035	1036	1037	1038	1039	1040	1041	1042	1043	1044	1045	1046	1047	1048	1049	1050	1051	1052	1053	1054	1055	1056	1057	1058	1059	1060	1061	1062	1063	1064	1065	1066	1067	1068	1069	1070	1071	1072	1073	1074	1075	1076	1077	1078	1079	1080	1081	1082	1083	1084	1085	1086	1087	1088	1089	1090	1091	1092	1093	1094	1095	1096	1097	1098	1099	1100	1101	1102	1103	1104	1105	1106	1107	1108	1109	1110	1111	1112	1113	1114	1115	1116	1117	1118	1119	1120	1121	1122	1123	1124	1125	1126	1127	1128	1129	1130	1131	1132	1133	1134	1135	1136	1137	1138	1139	1140	1141	1142	1143	1144	1145	1146	1147	1148	1149	1150	1151	1152	1153	1154	1155	1156	1157	1158	1159	1160	1161	1162	1163	1164	1165	1166	1167	1168	1169	1170	1171	1172	1173	1174	1175	1176	1177	1178	1179	1180	1181	1182	1183	1184	1185	1186	1187	1188	1189	1190	1191	1192	1193	1194	1195	1196	1197	1198	1199	1200	1201	1202	1203	1204	1205	1206	1207	1208	1209	1210	1211	1212	1213	1214	1215	1216	1217	1218	1219	1220	1221	1222	1223	1224	1225	1226	1227	1228	1229	1230	1231	1232	1233	1234	1235	1236	1237	1238	1239	1240	1241	1242	1243	1244	1245	1246	1247	1248	1249	1250	1251	1252	1253	1254	1255	1256	1257	1258	1259	1260	1261	1262	1263	1264	1265	1266	1267	1268	1269	1270	1271	1272	1273	1274	1275	1276	1277	1278	1279	1280	1281	1282	1283	1284	1285	1286	1287	1288	1289	1290	1291	1292	1293	1294	1295	1296	1297	1298	1299	1300	1301	1302	1303	1304	1305	1306	1307	1308	1309	1310	1311	1312	1313	1314	1315	1316	1317	1318	1319	1320	1321	1322	1323	1324	1325	1326	1327	1328	1329	1330	1331	1332	1333	1334	1335	1336	1337	1338	1339	1340	1341	1342	1343	1344	1345	1346	1347	1348	1349	1350	1351	1352	1353	1354	1355	1356	1357	1358	1359	1360	1361	1362	1363	1364	1365	1366	1367	1368	1369	1370	1371	1372	1373	1374	1375	1376	1377	1378	1379	1380	1381	1382	1383	1384	1385	1386	1387	1388	1389	1390	1391	1392	1393	1394	1395	1396	1397	1398	1399	1400	1401	1402	1403	1404	1405	1406	1407	1408	1409	1410	1411	1412	1413	1414	1415	1416	1417	1418	1419	1420	1421	1422	1423	1424	1425	1426	1427	1428	1429	1430	1431	1432	1433	1434	1435	1436	1437	1438	1439	1440	1441	1442	1443	1444	1445	1446	1447	1448	1449	1450	1451	1452	1453	1454	1455	1456	1457	1458	1459	1460	1461	1462
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2557: VEHICLE SPEED	Inhibit steering lock	When normal vehicle speed signals are received from ABS actuator and electric unit (control unit) for 500 ms
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Starter control relay signal</li> <li>• Starter relay status signal</li> </ul>
B2601: SHIFT POSITION	Inhibit steering lock	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> <li>• Selector lever P position switch signal</li> <li>• P range signal (CAN)</li> </ul>
B2602: SHIFT POSITION	Inhibit steering lock	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position</li> <li>• Selector lever P position switch signal: Except P position (battery voltage)</li> <li>• Vehicle speed: 4 km/h (2.5 MPH) or more</li> </ul>
B2603: SHIFT POSI STATUS	Inhibit steering lock	500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position</li> <li>• Selector lever P position switch signal: Except P position (battery voltage)</li> <li>• Selector lever P/N position signal: Except P and N positions (0 V)</li> </ul>
B2604: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Status 1               <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Selector lever P/N position signal: P and N position (battery voltage)</li> <li>- P range signal or N range signal (CAN): ON</li> </ul> </li> <li>• Status 2               <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Selector lever P/N position signal: Except P and N positions (0 V)</li> <li>- P range signal and N range signal (CAN): OFF</li> </ul> </li> </ul>
B2605: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position               <ul style="list-style-type: none"> <li>- Power position: IGN</li> <li>- Selector lever P/N position signal: Except P and N positions (0 V)</li> <li>- Interlock/PNP switch signal (CAN): OFF</li> </ul> </li> <li>• Status 2               <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Selector lever P/N position signal: P or N position (battery voltage)</li> <li>- PNP switch signal (CAN): ON</li> </ul> </li> </ul>
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Steering lock relay signal (Request signal)</li> <li>• Steering lock relay signal (Condition signal)</li> </ul>

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Steering lock relay signal (Request signal)</li> <li>• Steering lock relay signal (Condition signal)</li> </ul>
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Starter motor relay control signal</li> <li>• Starter relay status signal (CAN)</li> </ul>
B2609: S/L STATUS	<ul style="list-style-type: none"> <li>• Inhibit engine cranking</li> <li>• Inhibit steering lock</li> </ul>	When the following steering lock conditions agree <ul style="list-style-type: none"> <li>• BCM steering lock control status</li> <li>• Steering lock condition No. 1 signal status</li> <li>• Steering lock condition No. 2 signal status</li> </ul>
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> <li>• IGN relay (IPDM E/R) control signal: OFF (Battery voltage)</li> <li>• Ignition ON signal (CAN to IPDM E/R): OFF (Request signal)</li> <li>• Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)</li> </ul>
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled <ul style="list-style-type: none"> <li>• Power position changes to ACC</li> <li>• Receives engine status signal (CAN)</li> </ul>
B2612: S/L STATUS	<ul style="list-style-type: none"> <li>• Inhibit engine cranking</li> <li>• Inhibit steering lock</li> </ul>	When any of the following conditions are fulfilled <ul style="list-style-type: none"> <li>• Steering lock unit status signal (CAN) is received normally</li> <li>• The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R)</li> </ul>
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the steering lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E9: S/L STATUS	<ul style="list-style-type: none"> <li>• Inhibit engine cranking</li> <li>• Inhibit steering lock</li> </ul>	When BCM transmits the LOCK request signal to steering lock unit, and receives LOCK response signal from steering lock unit, the following conditions are fulfilled <ul style="list-style-type: none"> <li>• Steering condition No. 1 signal: LOCK (0V)</li> <li>• Steering condition No. 2 signal: LOCK (Battery voltage)</li> </ul>

### HIGH FLASHER OPERATION

BCM detects the turn signal lamp circuit status by the current value.  
 BCM increases the turn signal lamp blinking speed if the bulb or harness open is detected with the turn signal lamp operating.

#### NOTE:

The blinking speed is normal while activating the hazard warning lamp.

### FAIL-SAFE CONTROL BY RAIN SENSOR MALFUNCTION

- BCM judges the rain sensor serial link error by the rain sensor serial link condition and detects the rain sensor malfunction by rain sensor malfunction signal.
- When BCM detects the rain sensor serial link error or the rain sensor malfunction while front wiper AUTO operation, BCM operates a fail-safe control.

#### NOTE:

If rain sensor malfunction is detected when ignition switch is turned OFF ⇒ ON and front wiper switch is INT/AUTO position, BCM operates a fail-safe control.

### REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper stop position signal.  
 When the rear wiper stop position signal does not change for more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

Condition of cancellation

1. More than 1 minute is passed after the rear wiper stop.

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

2. Turn rear wiper switch OFF.
3. Operate the rear wiper switch or rear washer switch.

## DTC Inspection Priority Chart

INFOID:000000004754603

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> <li>• U1000: CAN COMM CIRCUIT</li> <li>• U1010: CONTROL UNIT (CAN)</li> </ul>
3	<ul style="list-style-type: none"> <li>• B2190: NATS ANTENNA AMP</li> <li>• B2191: DIFFERENCE OF KEY</li> <li>• B2192: ID DISCORD BCM-ECM</li> <li>• B2193: CHAIN OF BCM-ECM</li> <li>• B2195: ANTI SCANNING</li> </ul>
4	<ul style="list-style-type: none"> <li>• B2013: ID DISCORD BCM-S/L</li> <li>• B2014: CHAIN OF S/L-BCM</li> <li>• B2553: IGNITION RELAY</li> <li>• B2555: STOP LAMP</li> <li>• B2556: PUSH-BTN IGN SW</li> <li>• B2557: VEHICLE SPEED</li> <li>• B2560: STARTER CONT RELAY</li> <li>• B2601: SHIFT POSITION</li> <li>• B2602: SHIFT POSITION</li> <li>• B2603: SHIFT POSI STATUS</li> <li>• B2604: PNP SW</li> <li>• B2605: PNP SW</li> <li>• B2606: S/L RELAY</li> <li>• B2607: S/L RELAY</li> <li>• B2608: STARTER RELAY</li> <li>• B2609: S/L STATUS</li> <li>• B260A: IGNITION RELAY</li> <li>• B260B: STEERING LOCK UNIT</li> <li>• B260C: STEERING LOCK UNIT</li> <li>• B260D: STEERING LOCK UNIT</li> <li>• B260F: ENG STATE SIG LOST</li> <li>• B2612: S/L STATUS</li> <li>• B2614: ACC RELAY CIRC</li> <li>• B2615: BLOWER RELAY CIRC</li> <li>• B2616: IGN RELAY CIRC</li> <li>• B2617: STARTER RELAY CIRC</li> <li>• B2618: BCM</li> <li>• B2619: BCM</li> <li>• B261A: PUSH-BTN IGN SW</li> <li>• B261E: VEHICLE TYPE</li> <li>• B26E9: S/L STATUS</li> <li>• B26EA: KEY REGISTRATION</li> <li>• C1729: VHCL SPEED SIG ERR</li> <li>• U0415: VEHICLE SPEED SIG</li> </ul>

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Priority	DTC	
5	<ul style="list-style-type: none"> <li>• C1704: LOW PRESSURE FL</li> <li>• C1705: LOW PRESSURE FR</li> <li>• C1706: LOW PRESSURE RR</li> <li>• C1707: LOW PRESSURE RL</li> <li>• C1708: [NO DATA] FL</li> <li>• C1709: [NO DATA] FR</li> <li>• C1710: [NO DATA] RR</li> <li>• C1711: [NO DATA] RL</li> <li>• C1712: [CHECKSUM ERR] FL</li> <li>• C1713: [CHECKSUM ERR] FR</li> <li>• C1714: [CHECKSUM ERR] RR</li> <li>• C1715: [CHECKSUM ERR] RL</li> <li>• C1716: [PRESSDATA ERR] FL</li> <li>• C1717: [PRESSDATA ERR] FR</li> <li>• C1718: [PRESSDATA ERR] RR</li> <li>• C1719: [PRESSDATA ERR] RL</li> <li>• C1720: [CODE ERR] FL</li> <li>• C1721: [CODE ERR] FR</li> <li>• C1722: [CODE ERR] RR</li> <li>• C1723: [CODE ERR] RL</li> <li>• C1724: [BATT VOLT LOW] FL</li> <li>• C1725: [BATT VOLT LOW] FR</li> <li>• C1726: [BATT VOLT LOW] RR</li> <li>• C1727: [BATT VOLT LOW] RL</li> <li>• C1734: CONTROL UNIT</li> </ul>	A B C D E F G
6	<ul style="list-style-type: none"> <li>• B2621: INSIDE ANTENNA</li> <li>• B2622: INSIDE ANTENNA</li> <li>• B2623: INSIDE ANTENNA</li> </ul>	H

## DTC Index

INFOID:000000004754604

### NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [BCS-17. "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)".](#)

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	—	<a href="#">BCS-40</a>
U1010: CONTROL UNIT (CAN)	—	—	—	—	<a href="#">BCS-41</a>
U0415: VEHICLE SPEED SIG	—	—	—	—	<a href="#">BCS-42</a>
B2013: ID DISCORD BCM-S/L	×	×	—	—	<a href="#">SEC-55</a>
B2014: CHAIN OF S/L-BCM	×	×	—	—	<a href="#">SEC-56</a>
B2190: NATS ANTENNA AMP	×	—	—	—	<a href="#">SEC-47</a>
B2191: DIFFERENCE OF KEY	×	—	—	—	<a href="#">SEC-50</a>
B2192: ID DISCORD BCM-ECM	×	—	—	—	<a href="#">SEC-51</a>
B2193: CHAIN OF BCM-ECM	×	—	—	—	<a href="#">SEC-53</a>
B2195: ANTI SCANNING	×	—	—	—	<a href="#">SEC-54</a>
B2553: IGNITION RELAY	—	×	—	—	<a href="#">PCS-49</a>

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
B2555: STOP LAMP	—	×	—	—	<a href="#">SEC-59</a>
B2556: PUSH-BTN IGN SW	—	×	×	—	<a href="#">SEC-61</a>
B2557: VEHICLE SPEED	×	×	×	—	<a href="#">SEC-63</a>
B2560: STARTER CONT RELAY	×	×	×	—	<a href="#">SEC-64</a>
B2562: LOW VOLTAGE	—	×	—	—	<a href="#">BCS-43</a>
B2601: SHIFT POSITION	×	×	×	—	<a href="#">SEC-65</a>
B2602: SHIFT POSITION	×	×	×	—	<a href="#">SEC-68</a>
B2603: SHIFT POSI STATUS	×	×	×	—	<a href="#">SEC-70</a>
B2604: PNP SW	×	×	×	—	<a href="#">SEC-73</a>
B2605: PNP SW	×	×	×	—	<a href="#">SEC-75</a>
B2606: S/L RELAY	×	×	×	—	<a href="#">SEC-77</a>
B2607: S/L RELAY	×	×	×	—	<a href="#">SEC-78</a>
B2608: STARTER RELAY	×	×	×	—	<a href="#">SEC-80</a>
B2609: S/L STATUS	×	×	×	—	<a href="#">SEC-82</a>
B260A: IGNITION RELAY	×	×	×	—	<a href="#">PCS-51</a>
B260B: STEERING LOCK UNIT	—	×	×	—	<a href="#">SEC-86</a>
B260C: STEERING LOCK UNIT	—	×	×	—	<a href="#">SEC-87</a>
B260D: STEERING LOCK UNIT	—	×	×	—	<a href="#">SEC-88</a>
B260F: ENG STATE SIG LOST	×	×	×	—	<a href="#">SEC-89</a>
B2612: S/L STATUS	×	×	×	—	<a href="#">SEC-92</a>
B2614: ACC RELAY CIRC	—	×	×	—	<a href="#">PCS-53</a>
B2615: BLOWER RELAY CIRC	—	×	×	—	<a href="#">PCS-56</a>
B2616: IGN RELAY CIRC	—	×	×	—	<a href="#">PCS-59</a>
B2617: STARTER RELAY CIRC	×	×	×	—	<a href="#">SEC-96</a>
B2618: BCM	×	×	×	—	<a href="#">PCS-62</a>
B2619: BCM	×	×	×	—	<a href="#">SEC-98</a>
B261A: PUSH-BTN IGN SW	—	×	×	—	<a href="#">SEC-99</a>
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-102</a>
B2621: INSIDE ANTENNA	—	×	—	—	<a href="#">DLK-95</a>
B2622: INSIDE ANTENNA	—	×	—	—	<a href="#">DLK-97</a>
B2623: INSIDE ANTENNA	—	×	—	—	<a href="#">DLK-99</a>
B26E9: S/L STATUS	×	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-90</a>
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-91</a>
C1704: LOW PRESSURE FL	—	—	—	×	<a href="#">WT-16</a>
C1705: LOW PRESSURE FR	—	—	—	×	
C1706: LOW PRESSURE RR	—	—	—	×	
C1707: LOW PRESSURE RL	—	—	—	×	

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
C1708: [NO DATA] FL	—	—	—	×	<a href="#">WT-18</a>
C1709: [NO DATA] FR	—	—	—	×	
C1710: [NO DATA] RR	—	—	—	×	
C1711: [NO DATA] RL	—	—	—	×	
C1712: [CHECKSUM ERR] FL	—	—	—	×	<a href="#">WT-21</a>
C1713: [CHECKSUM ERR] FR	—	—	—	×	
C1714: [CHECKSUM ERR] RR	—	—	—	×	
C1715: [CHECKSUM ERR] RL	—	—	—	×	
C1716: [PRESSDATA ERR] FL	—	—	—	×	<a href="#">WT-24</a>
C1717: [PRESSDATA ERR] FR	—	—	—	×	
C1718: [PRESSDATA ERR] RR	—	—	—	×	
C1719: [PRESSDATA ERR] RL	—	—	—	×	
C1720: [CODE ERR] FL	—	—	—	×	<a href="#">WT-26</a>
C1721: [CODE ERR] FR	—	—	—	×	
C1722: [CODE ERR] RR	—	—	—	×	
C1723: [CODE ERR] RL	—	—	—	×	
C1724: [BATT VOLT LOW] FL	—	—	—	×	<a href="#">WT-29</a>
C1725: [BATT VOLT LOW] FR	—	—	—	×	
C1726: [BATT VOLT LOW] RR	—	—	—	×	
C1727: [BATT VOLT LOW] RL	—	—	—	×	
C1729: VHCL SPEED SIG ERR	—	—	—	×	<a href="#">WT-32</a>
C1734: CONTROL UNIT	—	—	—	×	<a href="#">WT-33</a>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# SUNROOF MOTOR ASSEMBLY

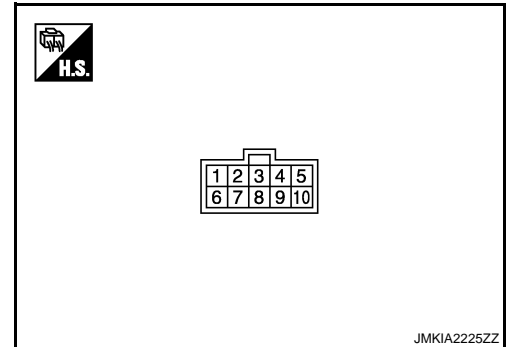
< ECU DIAGNOSIS >

## SUNROOF MOTOR ASSEMBLY

Reference Value

INFOID:000000003356115

### TERMINAL LAYOUT



### PHYSICAL VALUES

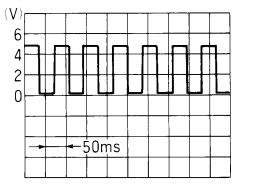
Terminal No. (Wire color)		Description		Condition	Voltage (V) (Approx.)
+	-	Signal name	Input/ Output		
1 (B)	Ground	Ground	—	—	0
2 (O)	Ground	Ground	—	—	0
3 (L)	Ground	RAP signal	Input	Ignition switch ON	Battery voltage
				Within 45 second after ignition switch is turned to OFF.	Battery voltage
				When driver side or passenger side door is opened during retained power operation or retained power operation is finished.	0
4 (Y)	Ground	Sunroof switch signal (PUSH)	Input	Sunroof switch	PUSH 0 Other than above Battery voltage
				Sunroof switch	OPEN (1st and 2nd) 0 Other than above Battery voltage
5 (LG)	Ground	Sunroof switch signal (OPEN)	Input	Sunroof switch	OPEN (1st and 2nd) 0 Other than above Battery voltage
				Sunroof switch	Other than above Battery voltage
6 (R)	Ground	Battery voltage	—	—	Battery voltage
7 (P)	Ground	Communication line	Input/ Output	Ignition switch ON	

JMKIA1869ZZ



# SUNROOF MOTOR ASSEMBLY

## < ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Voltage (V) (Approx.)				
+	-	Signal name	Input/ Output						
8 (BR)	Ground	Vehicle speed signal (2-pulse)	Input	Speed meter operated [When vehicle speed is approx. 40km/h (25MPH)]					
9 (W)	Ground	Sunroof switch signal (2nd)	Input	Sunroof switch	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">OPEN or CLOSE (2nd)</td> <td style="text-align: center;">0</td> </tr> <tr> <td style="text-align: center;">Other than above</td> <td style="text-align: center;">Battery voltage</td> </tr> </table>	OPEN or CLOSE (2nd)	0	Other than above	Battery voltage
				OPEN or CLOSE (2nd)	0				
Other than above	Battery voltage								
Sunroof switch	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">CLOSE (1st and 2nd)</td> <td style="text-align: center;">0</td> </tr> <tr> <td style="text-align: center;">Other than above</td> <td style="text-align: center;">Battery voltage</td> </tr> </table>	CLOSE (1st and 2nd)	0	Other than above	Battery voltage				
CLOSE (1st and 2nd)	0								
Other than above	Battery voltage								
10 (V)	Ground	Sunroof switch signal (CLOSE)	Input	Sunroof switch	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">CLOSE (1st and 2nd)</td> <td style="text-align: center;">0</td> </tr> <tr> <td style="text-align: center;">Other than above</td> <td style="text-align: center;">Battery voltage</td> </tr> </table>	CLOSE (1st and 2nd)	0	Other than above	Battery voltage
				CLOSE (1st and 2nd)	0				
Other than above	Battery voltage								
Sunroof switch	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">CLOSE (1st and 2nd)</td> <td style="text-align: center;">0</td> </tr> <tr> <td style="text-align: center;">Other than above</td> <td style="text-align: center;">Battery voltage</td> </tr> </table>	CLOSE (1st and 2nd)	0	Other than above	Battery voltage				
CLOSE (1st and 2nd)	0								
Other than above	Battery voltage								

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P


RF

# SUNROOF MOTOR ASSEMBLY
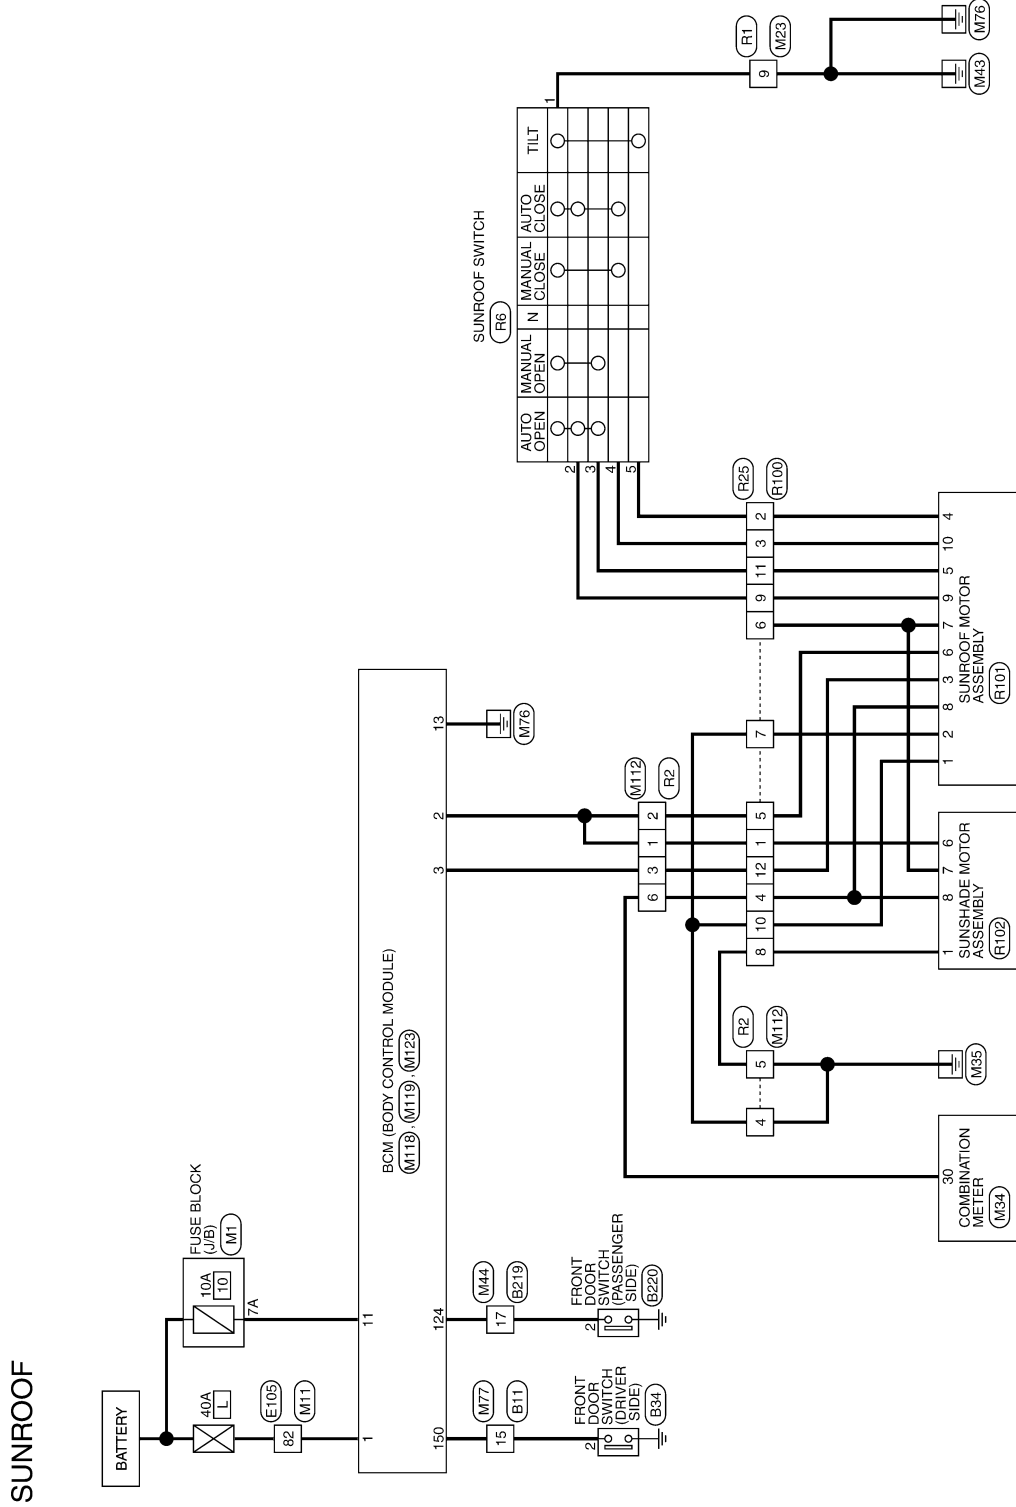
< ECU DIAGNOSIS >

## Wiring Diagram - SUNROOF CONTROL SYSTEM -

INFOID:000000003356111

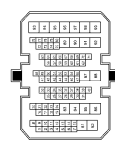

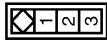

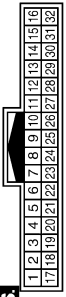

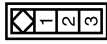

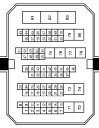









2008/09/23

JCKWM2258Gf

# SUNROOF MOTOR ASSEMBLY

< ECU DIAGNOSIS >

SUNROOF			Terminal No. [Specification]		
Connector No.	B11	WIRE TO WIRE	Terminal No.	15	SB
Connector Name	TH180MW-CS-9		Color of Wire	SB	
Connector Type			Signal Name [Specification]		
					
Connector No.	B34	FRONT DOOR SWITCH (DRIVER SIDE)	Terminal No.	2	SB
Connector Name	A03FW		Color of Wire	SB	
Connector Type			Signal Name [Specification]		
					
Connector No.	B219	WIRE TO WIRE	Terminal No.	17	R
Connector Name	TH152MW-NH		Color of Wire	R	
Connector Type			Signal Name [Specification]		
					
Connector No.	B220	FRONT DOOR SWITCH (PASSENGER SIDE)	Terminal No.	2	R
Connector Name	A03FW		Color of Wire	R	
Connector Type			Signal Name [Specification]		
					
Connector No.	E105	WIRE TO WIRE	Terminal No.	82	LG
Connector Name	TH170MW-CS10-M3		Color of Wire	LG	
Connector Type			Signal Name [Specification]		
					
Connector No.	M1	FUSE BLOCK (J/B)	Terminal No.	7A	LG
Connector Name	NS00FW-M2		Color of Wire	LG	
Connector Type			Signal Name [Specification]		
					
Connector No.	M11	WIRE TO WIRE	Terminal No.	82	W
Connector Name	TH170FW-CS10-M3		Color of Wire	W	
Connector Type			Signal Name [Specification]		
					
Connector No.	M23	WIRE TO WIRE	Terminal No.	9	B
Connector Name	TH16MW-NH		Color of Wire	B	
Connector Type			Signal Name [Specification]		
					

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

JCKWM2259Gf

# SUNROOF MOTOR ASSEMBLY

< ECU DIAGNOSIS >

## SUNROOF

Connector No. M34	COMBINATION METER	TH4DFW-NH		<table border="1"> <tr> <td>Terminal No.</td> <td>Color of Wire</td> <td>Signal Name [Specification]</td> </tr> <tr> <td>30</td> <td>P</td> <td>VEHICLE SPEED (2-PULSE)</td> </tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	30	P	VEHICLE SPEED (2-PULSE)															
Terminal No.	Color of Wire	Signal Name [Specification]																							
30	P	VEHICLE SPEED (2-PULSE)																							
Connector No. M44	WIRE TO WIRE	TH32FW-NH		<table border="1"> <tr> <td>Terminal No.</td> <td>Color of Wire</td> <td>Signal Name [Specification]</td> </tr> <tr> <td>17</td> <td>R</td> <td>-</td> </tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	17	R	-															
Terminal No.	Color of Wire	Signal Name [Specification]																							
17	R	-																							
Connector No. M77	WIRE TO WIRE	TH8DFW-CS19		<table border="1"> <tr> <td>Terminal No.</td> <td>Color of Wire</td> <td>Signal Name [Specification]</td> </tr> <tr> <td>15</td> <td>SB</td> <td>-</td> </tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	15	SB	-															
Terminal No.	Color of Wire	Signal Name [Specification]																							
15	SB	-																							
Connector No. M112	WIRE TO WIRE	NS36MM-CS		<table border="1"> <tr> <td>Terminal No.</td> <td>Color of Wire</td> <td>Signal Name [Specification]</td> </tr> <tr> <td>1</td> <td>GR</td> <td>-</td> </tr> <tr> <td>2</td> <td>GR</td> <td>-</td> </tr> <tr> <td>3</td> <td>L</td> <td>-</td> </tr> <tr> <td>4</td> <td>B</td> <td>-</td> </tr> <tr> <td>5</td> <td>B</td> <td>-</td> </tr> <tr> <td>6</td> <td>P</td> <td>-</td> </tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	1	GR	-	2	GR	-	3	L	-	4	B	-	5	B	-	6	P	-
Terminal No.	Color of Wire	Signal Name [Specification]																							
1	GR	-																							
2	GR	-																							
3	L	-																							
4	B	-																							
5	B	-																							
6	P	-																							
Connector No. M118	BCM (BODY CONTROL MODULE)	MG3FB-LC		<table border="1"> <tr> <td>Terminal No.</td> <td>Color of Wire</td> <td>Signal Name [Specification]</td> </tr> <tr> <td>1</td> <td>W</td> <td>BAT (F/L)</td> </tr> <tr> <td>2</td> <td>GR</td> <td>POWER WINDOW POWER SUPPLY (BAT)</td> </tr> <tr> <td>3</td> <td>L</td> <td>POWER WINDOW POWER SUPPLY (RAP)</td> </tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	1	W	BAT (F/L)	2	GR	POWER WINDOW POWER SUPPLY (BAT)	3	L	POWER WINDOW POWER SUPPLY (RAP)									
Terminal No.	Color of Wire	Signal Name [Specification]																							
1	W	BAT (F/L)																							
2	GR	POWER WINDOW POWER SUPPLY (BAT)																							
3	L	POWER WINDOW POWER SUPPLY (RAP)																							
Connector No. M119	BCM (BODY CONTROL MODULE)	NS16FW-CS		<table border="1"> <tr> <td>Terminal No.</td> <td>Color of Wire</td> <td>Signal Name [Specification]</td> </tr> <tr> <td>11</td> <td>LG</td> <td>BAT (FUSE)</td> </tr> <tr> <td>13</td> <td>B</td> <td>GND</td> </tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	11	LG	BAT (FUSE)	13	B	GND												
Terminal No.	Color of Wire	Signal Name [Specification]																							
11	LG	BAT (FUSE)																							
13	B	GND																							
Connector No. M123	BCM (BODY CONTROL MODULE)	TH4DFG-NH		<table border="1"> <tr> <td>Terminal No.</td> <td>Color of Wire</td> <td>Signal Name [Specification]</td> </tr> <tr> <td>124</td> <td>R</td> <td>PASSENGER DOOR SW</td> </tr> <tr> <td>150</td> <td>SB</td> <td>DRIVER DOOR SW</td> </tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	124	R	PASSENGER DOOR SW	150	SB	DRIVER DOOR SW												
Terminal No.	Color of Wire	Signal Name [Specification]																							
124	R	PASSENGER DOOR SW																							
150	SB	DRIVER DOOR SW																							
Connector No. RT	WIRE TO WIRE	TH16FW-NH		<table border="1"> <tr> <td>Terminal No.</td> <td>Color of Wire</td> <td>Signal Name [Specification]</td> </tr> <tr> <td>9</td> <td>B</td> <td>-</td> </tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	9	B	-															
Terminal No.	Color of Wire	Signal Name [Specification]																							
9	B	-																							


JCKWMM2260G1

# SUNROOF MOTOR ASSEMBLY

< ECU DIAGNOSIS >


## SUNROOF

Connector No.	R2
Connector Name	WIRE TO WIRE
Connector Type	NS06FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	R/Y	-
2	R/Y	-
3	L/W	-
4	B	-
5	B	-
6	L/B	-

Connector No.	R100
Connector Name	WIRE TO WIRE
Connector Type	NS12MW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	Y	-
3	V	-
4	BR	-
5	R	-
6	P	-
7	O	-
8	B	-
9	W	-
10	B	-
11	LG	-


Connector No.	R6
Connector Name	SUNROOF SWITCH
Connector Type	TH06FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	W/R	-
3	LG	-
4	V	-
5	Y	-


12	L	-
----	---	---

Connector No.	R25
Connector Name	WIRE TO WIRE
Connector Type	NS12FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	R/Y	-
2	Y	-
3	V	-
4	L/B	-
5	R/Y	-
7	B	-
8	B	-
9	W/R	-
10	B	-
11	LG	-
12	L/W	-

Connector No.	R101
Connector Name	SUNROOF MOTOR ASSEMBLY
Connector Type	YEA10FGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
2	O	GND
3	L	IGN
4	Y	PUSH SW
5	LG	OPEN SW
6	R	BAT
7	P	COMM
8	BR	SPEED(2P)
9	W	2ND SW
10	V	CLOSE SW

Connector No.	R102
Connector Name	SUNSHADE MOTOR ASSEMBLY
Connector Type	YEA10FGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
6	G	BAT
7	P	COMM
8	BR	SPEED(2P)

JCKWM2261G1

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

RF

# SUNSHADE MOTOR ASSEMBLY

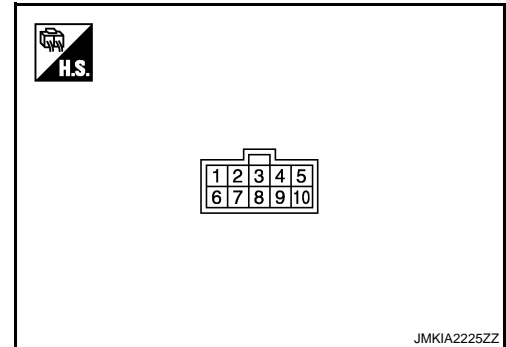
< ECU DIAGNOSIS >

## SUNSHADE MOTOR ASSEMBLY



Reference Value

INFOID:000000003356140

TERMINAL LAYOUT



PHYSICAL VALUES

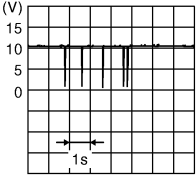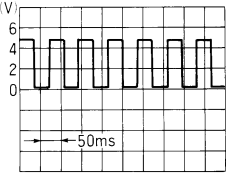
Terminal No. (Wire color)		Description		Condition	Voltage (V) (Approx.)
+	-	Signal name	Input/ Output		
1 (B)	Ground	Ground	—	—	0
6 (G)	Ground	Battery voltage	—	—	Battery voltage
7 (P)	Ground	Communication line	Input/ Output	Ignition switch ON	 <small>JMKIA1869ZZ</small>
8 (BR)	Ground	Vehicle speed signal (2-pulse)	Input	Speed meter operated [When vehicle speed is approx. 40km/h (25MPH)]	 <small>ELF1080D</small>

# SUNSHADE MOTOR ASSEMBLY
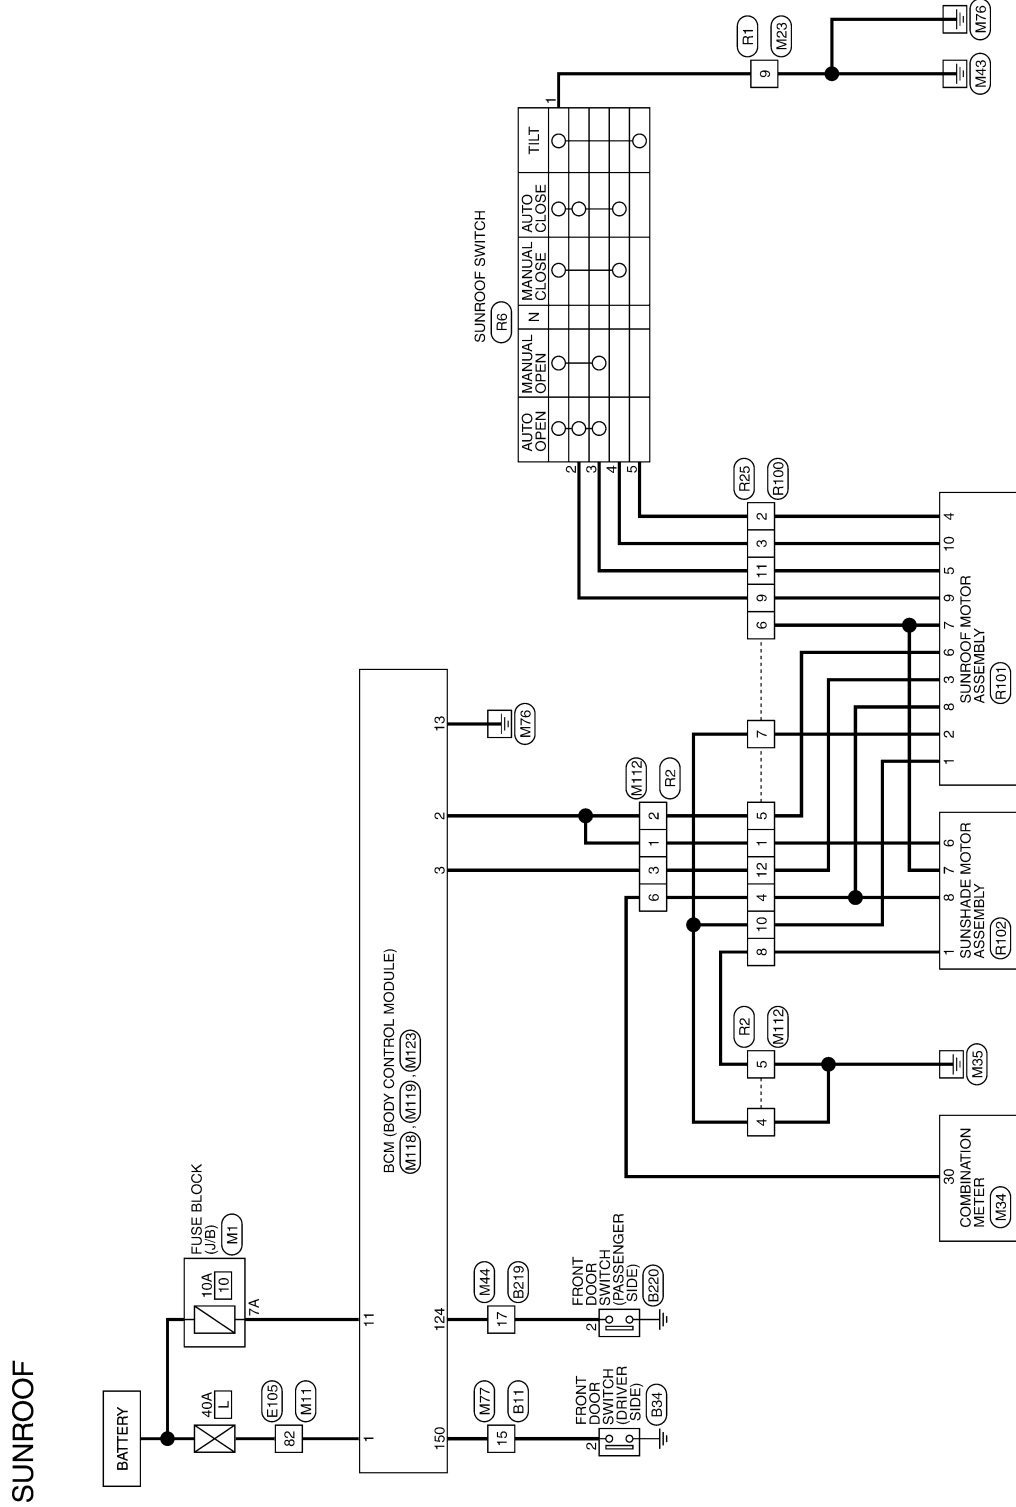
< ECU DIAGNOSIS >

## Wiring Diagram - SUNROOF CONTROL SYSTEM -

INFOID:000000003702837



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P









2008/09/23

JCKWM2258Gf

# SUNSHADE MOTOR ASSEMBLY
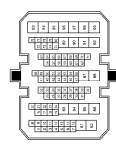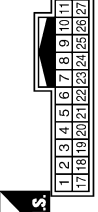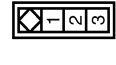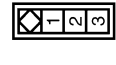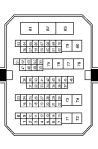
< ECU DIAGNOSIS >

## SUNROOF

Connector No. B11	Connector Name WIRE TO WIRE	Connector Type TH70MW-CS19		Terminal No. 15	Color of Wire SB	Signal Name [Specification]
Connector No. B219	Connector Name WIRE TO WIRE	Connector Type TH22MW-NH		Terminal No. 17	Color of Wire R	Signal Name [Specification]
Connector No. B220	Connector Name FRONT DOOR SWITCH (PASSENGER SIDE)	Connector Type A03FW		Terminal No. 2	Color of Wire R	Signal Name [Specification]
Connector No. B34	Connector Name FRONT DOOR SWITCH (DRIVER SIDE)	Connector Type A03FW		Terminal No. 2	Color of Wire SB	Signal Name [Specification]
Connector No. E105	Connector Name WIRE TO WIRE	Connector Type TH70MW-CS10-M3		Terminal No. 82	Color of Wire LG	Signal Name [Specification]
Connector No. M1	Connector Name FUSE BLOCK (J/B)	Connector Type NS06FW-M2		Terminal No. 7A	Color of Wire LG	Signal Name [Specification]
Connector No. M11	Connector Name WIRE TO WIRE	Connector Type TH70FW-CS10-M3		Terminal No. 82	Color of Wire W	Signal Name [Specification]
Connector No. M23	Connector Name WIRE TO WIRE	Connector Type TH16MW-NH		Terminal No. 9	Color of Wire B	Signal Name [Specification]

JCKKWM2259G1




# SUNSHADE MOTOR ASSEMBLY

< ECU DIAGNOSIS >


## SUNROOF

Connector No.	M112
Connector Name	WIRE TO WIRE
Connector Type	NS36MF-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	GR	-
3	L	-
4	B	-
5	B	-
6	P	-

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH6FW-CS19




Terminal No.	Color of Wire	Signal Name [Specification]
15	SB	-

Connector No.	M44
Connector Name	WIRE TO WIRE
Connector Type	TH32FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
17	R	-

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH4FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
30	P	VEHICLE SPEED (2-PULSE)

Connector No.	RT
Connector Name	WIRE TO WIRE
Connector Type	TH16FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
9	B	-

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



Terminal No.	Color of Wire	Signal Name [Specification]
124	R	PASSENGER DOOR SW
150	SB	DRIVER DOOR SW

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
11	LG	BAT (FUSE)
13	B	GND

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	GR	POWER WINDOW POWER SUPPLY (BAT)
3	L	POWER WINDOW POWER SUPPLY (RAP)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

JCKWM2260G1

# SUNSHADE MOTOR ASSEMBLY

< ECU DIAGNOSIS >

## SUNROOF

Connector No.	R2
Connector Name	WIRE TO WIRE
Connector Type	NS06FW-CS



2	1
6	5
4	3

Terminal No.	Color of Wire	Signal Name [Specification]
1	R/Y	-
2	R/Y	-
3	L/W	-
4	B	-
5	B	-
6	L/B	-

Connector No.	R100
Connector Name	WIRE TO WIRE
Connector Type	NS12MW-CS



1	2	3	4	5
6	7	8	9	10
11	12			

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	Y	-
3	V	-
4	BR	-
5	R	-
6	P	-
7	O	-
8	B	-
9	W	-
10	B	-
11	LG	-

Connector No.	R6
Connector Name	SUNROOF SWITCH
Connector Type	TI00FW-NH



1	2	3	4
5	6	7	8

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	W/R	-
3	LG	-
4	V	-
5	Y	-

12	L	-
----	---	---

Connector No.	R25
Connector Name	WIRE TO WIRE
Connector Type	NS12FW-CS



5	4	3	2	1
12	11	10	9	8
7	6			

Terminal No.	Color of Wire	Signal Name [Specification]
1	R/Y	-
2	Y	-
3	V	-
4	L/B	-
5	R/Y	-
7	B	-
8	B	-
9	W/R	-
10	B	-
11	LG	-
12	L/W	-

Connector No.	R101
Connector Name	SUNROOF MOTOR ASSEMBLY
Connector Type	YEA1DFGY



1	2	3	4	5
6	7	8	9	10

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
2	O	GND
3	L	IGN
4	Y	PUSH SW
5	LG	OPEN SW
6	R	BAT
7	P	COMM
8	BR	SPEED(2P)
9	W	2ND SW
10	V	CLOSE SW

Connector No.	R102
Connector Name	SUNSHADE MOTOR ASSEMBLY
Connector Type	YEA1DFGY



1	2	3	4	5
6	7	8	9	10

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
6	G	BAT
7	P	COMM
8	BR	SPEED(2P)

# SUNROOF DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### SUNROOF DOES NOT OPERATE PROPERLY

#### Diagnosis Procedure

INFOID:000000003356117

#### 1.CHECK SUNROOF MECHANISM

Check the following.

- Operation malfunction caused by sunroof mechanism deformation, pinched harness or other foreign materials
- Operation malfunction and interference with other parts by poor installation

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

#### 2.CHECK SUNROOF MOTOR ASSEMBLY POWER SUPPLY AND GROUND CIRCUIT

Check sunroof motor assembly power supply and ground circuit.

Refer to [RF-11, "SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure"](#)

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

#### 3.CHECK SUNROOF SWITCH

Check sunroof switch.

Refer to [RF-15, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

#### 4.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-40, "Intermittent Incident"](#).

NO >> GO TO 1.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# SUNSHADE SYSTEM DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

---

## SUNSHADE SYSTEM DOES NOT OPERATE PROPERLY

### Diagnosis Procedure

INFOID:000000003431606

---

#### 1.CHECK SUNSHADE MECHANISM

Check the following.

- Operation malfunction caused by sunshade mechanism deformation, pinched harness or other foreign materials
- Operation malfunction and interference with other parts by poor installation

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

---

#### 2.CHECK SUNSHADE MOTOR ASSEMBLY POWER SUPPLY AND GROUND CIRCUIT

Check sunshade motor assembly power supply and ground circuit.

Refer to [RF-12. "SUNSHADE MOTOR ASSEMBLY : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

---

#### 3.CHECK COMMUNICATION CIRCUIT

Check communication circuit.

Refer to [RF-14. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the harness.

---

#### 4.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-40. "Intermittent Incident"](#).

NO >> GO TO 1.

# AUTO OPERATION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

## AUTO OPERATION DOES NOT OPERATE

### Diagnosis Procedure

INFOID:000000003356118

#### 1.PERFORM INITIALIZATION PROCEDURE

Initialization procedure is executed and operation is confirmed.

Refer to [RF-4, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

Is the inspection result normal?

YES >> Sunroof and sunshade system is normal.

NO >> GO TO 2.

#### 2.CHECK SUNROOF SWITCH

Check sunroof switch.

Refer to [RF-15, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

#### 3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-40, "Intermittent Incident"](#).

NO >> GO TO 1.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

---

## RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

### Diagnosis Procedure

INFOID:000000003356120

#### 1.CHECK DOOR SWITCH

---

Check door switch.

Refer to [RF-17, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

#### 2.CONFIRM THE OPERATION

---

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-40, "Intermittent Incident"](#).

NO >> GO TO 1.

# ANTI-PINCH FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

## ANTI-PINCH FUNCTION DOES NOT OPERATE

### Diagnosis Procedure

INFOID:000000003356142

#### 1.CHECK SUNROOF AND SUNSHADE MECHANISM

Check the following.

- Operation malfunction caused by sunroof and sunshade mechanism deformation, pinched harness or other foreign materials
- Operation malfunction and interference with other parts by poor installation

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

#### 2.PERFORM INITIALIZATION

Perform initialization procedure.

Refer to [RF-4, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

Is the inspection result normal?

YES >> Sunroof and sunshade system is normal.

NO >> GO TO 1.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

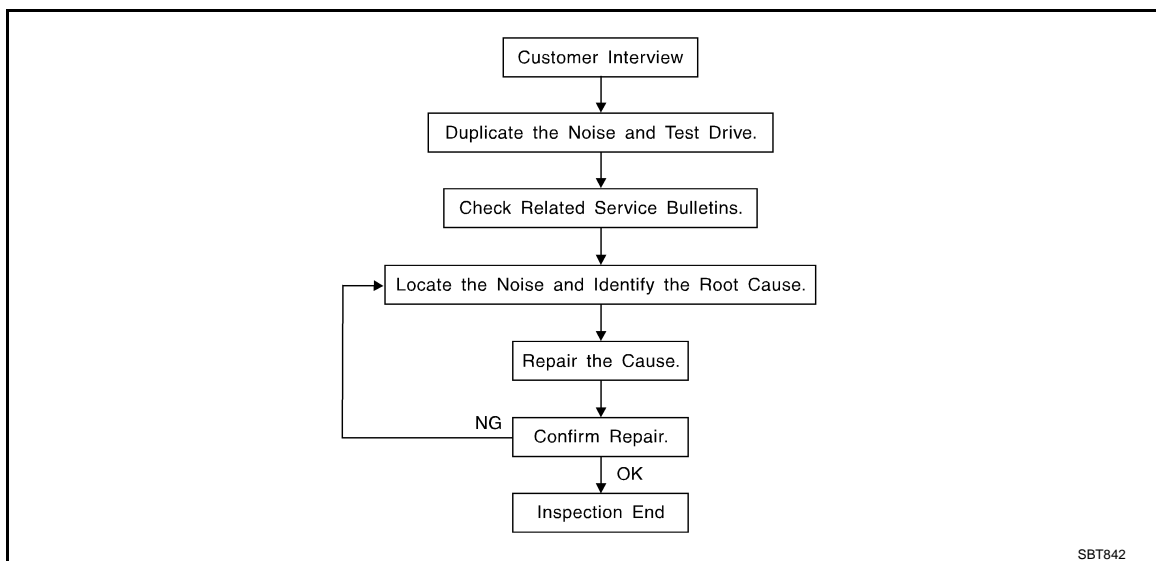
# SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

## SQUEAK AND RATTLE TROUBLE DIAGNOSES

### Work Flow

INFOID:000000004778670



### CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any of customer's comments; refer to [RF-84, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, perform a diagnosis and repair the noise that the customer is concerned about. This can be accomplished by performing a cruise test on the vehicle with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak – (Like tennis shoes on a clean floor)  
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces = higher pitch noise/softer surfaces = lower pitch noises/edge to surface = chirping
- Creak – (Like walking on an old wooden floor)  
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle – (Like shaking a baby rattle)  
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock – (Like a knock on a door)  
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick – (Like a clock second hand)  
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump – (Heavy, muffled knock noise)  
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz – (Like a bumblebee)  
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending up on the person. A noise that a technician may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

### DUPLICATE THE NOISE AND TEST DRIVE

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when the repair is reconfirmed.



# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## < SYMPTOM DIAGNOSIS >

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
  - 2) Tap or push/pull around the area where the noise appears to be coming from.
  - 3) Rev the engine.
  - 4) Use a floor jack to recreate vehicle "twist".
  - 5) At idle, apply engine load (electrical load, half-clutch on M/T models, drive position on A/T models).
  - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
  - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

## CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to that concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

## LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis ear: J-39570, Engine ear and mechanics stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
  - Removing the components in the area that is are suspected to be the cause of the noise.  
Do not use too much force when removing clips and fasteners, otherwise clips and fastener can be broken or lost during the repair, resulting in the creation of new noise.
  - Tapping or pushing/pulling the component that is are suspected to be the cause of the noise.  
Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
  - Feeling for a vibration by hand by touching the component(s) that is are suspected to be the cause of the noise.
  - Placing a piece of paper between components that are suspected to be the cause of the noise.
  - Looking for loose components and contact marks.  
Refer to [RF-82, "Inspection Procedure"](#).

## REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
  - Separate components by repositioning or loosening and retightening the component, if possible.
  - Insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. A Nissan Squeak and Rattle Kit (J-43980) is available through the authorized Nissan Parts Department.

### **CAUTION:**

**Never use excessive force as many components are constructed of plastic and may be damaged.**

### **NOTE:**

Always check with the Parts Department for the latest parts information.

The following materials are contained in the Nissan Squeak and Rattle Kit (J-43980). Each item can be ordered separately as needed.

URETHANE PADS [1.5 mm (0.059 in) thick]

Insulates connectors, harness, etc.

76268-9E005: 100 × 135 mm (3.94 × 5.31 in)/76884-71L01: 60 × 85 mm (2.36 × 3.35 in)/76884-71L02: 15 × 25 mm (0.59 × 0.98 in)

INSULATOR (Foam blocks)

Insulates components from contact. Can be used to fill space behind a panel.

73982-9E000: 45 mm (1.77 in) thick, 50 × 50 mm (1.97 × 1.97 in)/73982-

50Y00: 10 mm (0.39 in) thick, 50 × 50 mm (1.97 × 1.97 in)

INSULATOR (Light foam block)

80845-71L00: 30 mm (1.18 in) thick, 30 × 50 mm (1.18 × 1.97in)

FELT CLOTHTAPE

Used to insulate where movement does not occur. Ideal for instrument panel applications.

68370-4B000: 15 × 25 mm (0.59 × 0.98 in) pad/68239-13E00: 5 mm (0.20 in) wide tape roll

The following materials, not found in the kit, can also be used to repair squeaks and rattles.

UHMW (TEFLON) TAPE

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## < SYMPTOM DIAGNOSIS >

---

Insulates where slight movement is present. Ideal for instrument panel applications.

### SILICONE GREASE

Used in place of UHMW tape that is be visible or does not fit. Will only last a few months.

### SILICONE SPRAY

Used when grease cannot be applied.

### DUCT TAPE

Used to eliminate movement.

## CONFIRM THE REPAIR

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

## Inspection Procedure

INFOID:000000004778671

Refer to Table of Contents for specific component removal and installation information.

## INSTRUMENT PANEL

Most incidents are caused by contact and movement between:

1. The cluster lid A and instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar garnish
4. Instrument panel to windshield
5. Instrument panel mounting pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicon spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

### **CAUTION:**

**Never use silicone spray to isolate a squeak or rattle. If the area is saturated with silicone, the recheck of repair becomes impossible.**

## CENTER CONSOLE

Components to pay attention to include:

1. Shifter assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

## DOORS

Pay attention to the following:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. The areas can usually be insulated with felt cloth tape or insulator foam blocks from the Nissan Squeak and Rattle Kit (J-43980) to repair the noise.

## TRUNK

Trunk noises are often caused by a loose jack or loose items put into the trunk by the customer.

In addition look for the following:

1. Trunk lid dumpers out of adjustment
2. Trunk lid striker out of adjustment
3. The trunk lid torsion bars knocking together
4. A loose license plate or bracket

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## < SYMPTOM DIAGNOSIS >

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

### SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
2. Sunvisor shaft shaking in the holder
3. Front or rear windshield touching headlining and squeaking

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

### SEATS

When isolating seat noise it's important to note the position the seats in and the load placed on the seat when the noise occurs. These conditions should be duplicated when verifying and isolating the cause of the noise.

Cause of seat noise include:

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. The rear seatback lock and bracket

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

### UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

Causes of transmitted underhood noise include:

1. Any component mounted to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator mounting pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine RPM or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

## Diagnostic Worksheet

INFOID:000000003685435



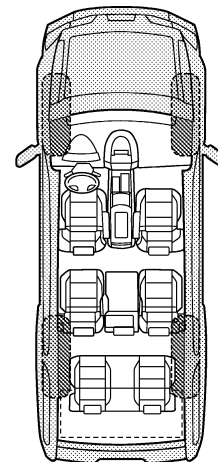
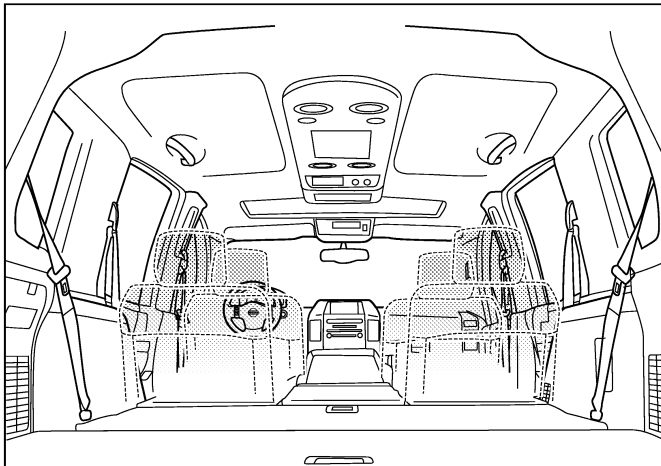
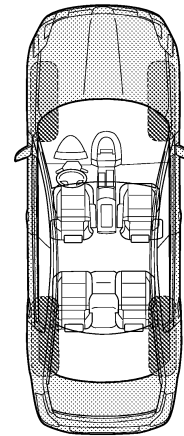
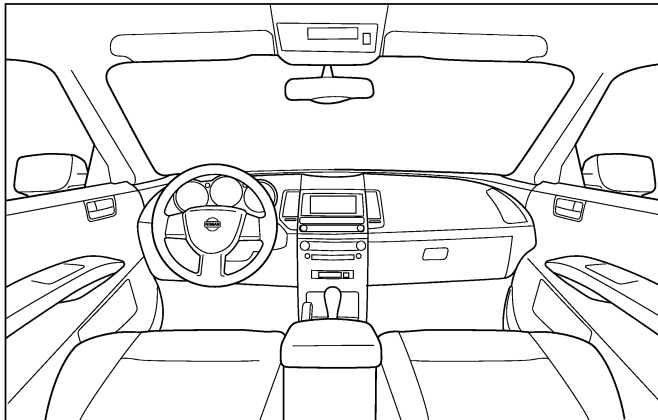
### SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

Dear Nissan Customer:

We are concerned about your satisfaction with your Nissan vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your Nissan right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service advisor or technician to ensure we confirm the noise you are hearing.

#### I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.



Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

PIIB8740E

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

## SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

---

---

### II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- |   |  |
|---|--|
| <input type="checkbox"/> anytime                      | <input type="checkbox"/> after sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning      | <input type="checkbox"/> when it is raining or wet     |
| <input type="checkbox"/> only when it is cold outside | <input type="checkbox"/> dry or dusty conditions       |
| <input type="checkbox"/> only when it is hot outside  | <input type="checkbox"/> other:                        |

### III. WHEN DRIVING:

- through driveways
- over rough roads
- over speed bumps
- only about \_\_\_\_ mph
- on acceleration
- coming to a stop
- on turns: left, right or either (circle)
- with passengers or cargo
- other: \_\_\_\_\_
- after driving \_\_\_\_ miles or \_\_\_\_ minutes

### IV. WHAT TYPE OF NOISE

- squeak (like tennis shoes on a clean floor)
- creak (like walking on an old wooden floor)
- rattle (like shaking a baby rattle)
- knock (like a knock at the door)
- tick (like a clock second hand)
- thump (heavy, muffled knock noise)
- buzz (like a bumble bee)

### TO BE COMPLETED BY DEALERSHIP PERSONNEL

#### Test Drive Notes:

---

---

---

	YES	NO	Initials of person performing
Vehicle test driven with customer	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise verified on test drive	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise source located and repaired	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Follow up test drive performed to confirm repair	<input type="checkbox"/>	<input type="checkbox"/>	_____

VIN: \_\_\_\_\_ Customer Name: \_\_\_\_\_  
W.O.# \_\_\_\_\_ Date: \_\_\_\_\_

This form must be attached to Work Order

PIIB8742E

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003703356

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

- **To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.**
- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".**
- **Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors while ignition switch is ON or engine is running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration may activate the sensor(s), deploy the airbag(s), possibly cause serious injury. When using air or electric power tools or hammers, always turn OFF ignition switch, disconnect the battery, and wait 3 minutes or more before performing any service.

#### Service Notice

INFOID:000000003356126

- When removing or installing various parts, place a cloth or padding onto the vehicle body to prevent scratches.
- Handle trim, molding, instruments, grille, etc. carefully during removing or installing. Be careful not to oil or damage them.
- Apply sealing compound where necessary when installing parts.
- When applying sealing compound, be careful that the sealing compound does not protrude from parts.
- When replacing any metal parts (for example body outer panel, members, etc.), be sure to take rust prevention measures.

#### Precaution for Work

INFOID:000000003356127

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and keep them.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After re-installation is completed, be sure to check that each part works normally.
- Follow the steps below to clean components.
  - Water soluble foul: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the fouled area.  
Then rub with a soft and dry cloth.
  - Oily foul: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the fouled area.

# PRECAUTIONS

## < PRECAUTION >

---

Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.

- Never use organic solvent such as thinner, benzene, alcohol, and gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

A

B

C

D

E

F

G

H

I

J

**RF**

L

M

N

O

P

# PREPARATION

< PREPARATION >

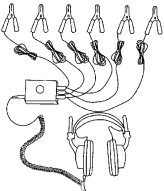
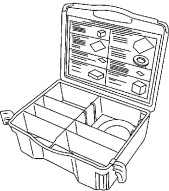
## PREPARATION

### PREPARATION

#### Special Service Tool



INFOID:000000004778673

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

Tool number (Kent-Moore No.) Tool name	Description
<p>(J39570) Chassis ear</p>  <p>SIIA0993E</p>	<p>Locates the noise</p>
<p>(J43980) NISSAN Squeak and Rattle Kit</p>  <p>SIIA0994E</p>	<p>Repairs the cause of noise</p>

#### Commercial Service Tool

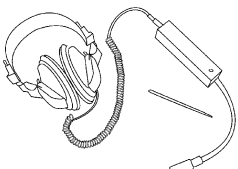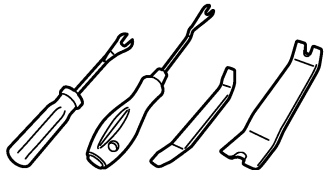INFOID:000000004778674

Tool name	Description
<p>Engine ear</p>  <p>SIIA0995E</p>	<p>Locates the noise</p>
<p>Remover tool</p>  <p>JMKIA3050ZZ</p>	<p>Removes the clips, pawls and metal clips</p>



# GLASS LID

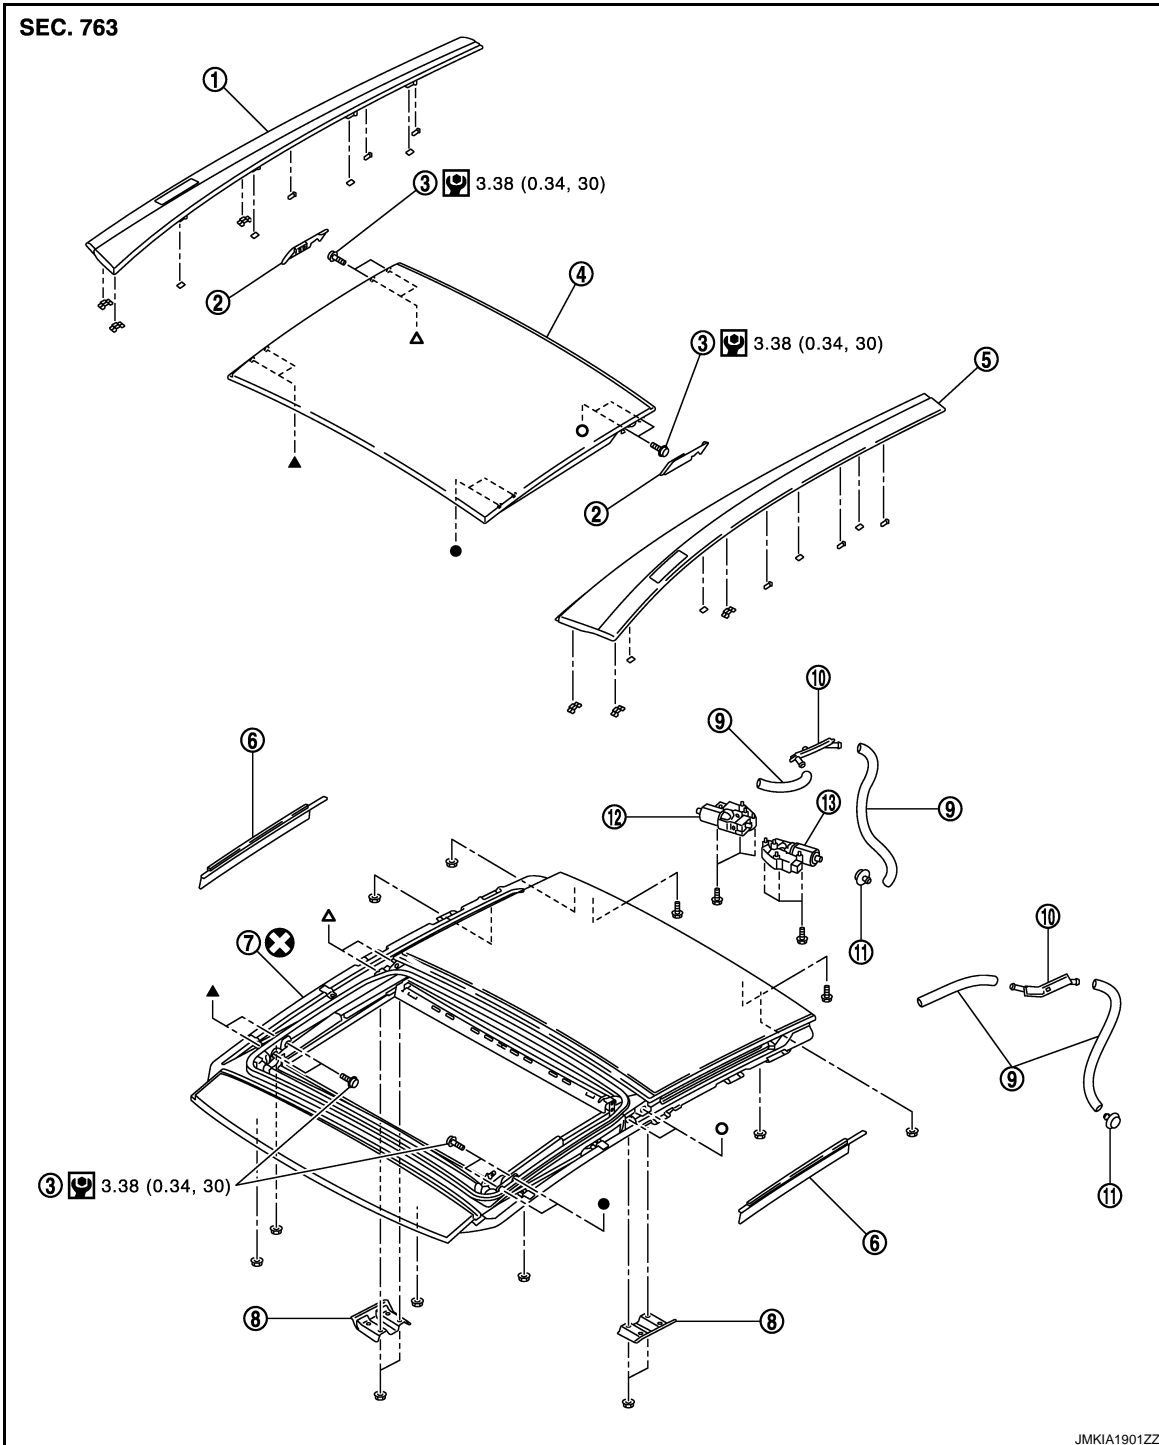
< ON-VEHICLE REPAIR >

## ON-VEHICLE REPAIR

### GLASS LID

Exploded View

INFOID:000000003465798



- |                          |                          |                            |
|--------------------------|--------------------------|----------------------------|
| 1. Roof side finisher RH | 2. Rear link cover       | 3. TORX bolt               |
| 4. Glass lid             | 5. Roof side finisher LH | 6. Inner blind             |
| 7. Sunroof unit assembly | 8. Sunroof bracket       | 9. Drain hose              |
| 10. Drain connector      | 11. Drain plug           | 12. Sunroof motor assembly |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# GLASS LID

## < ON-VEHICLE REPAIR >

### 13. Sunshade motor assembly

Refer to [GI-4, "Components"](#) for symbols in the figure.

## Removal and Installation


INFOID:000000003465799

### REMOVAL


#### CAUTION:

**Always work with a helper.**


1. Remove the roof rail assembly. Refer to [EXT-28, "Removal and Installation"](#).
2. Remove the roof side finisher.  
Remove the clips, and then pull out roof side finisher.




: Clip

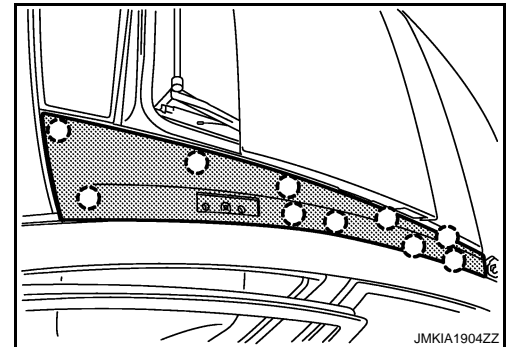

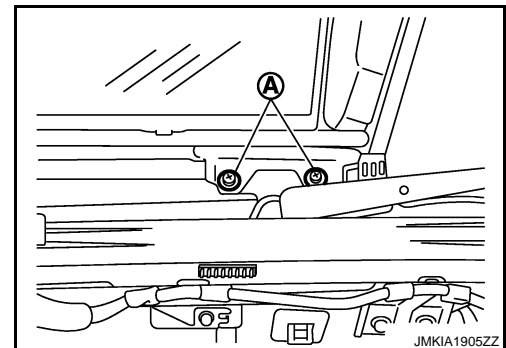
3. Half open the glass lid.
4. Remove the TORX bolts from inner side.
  - Remove the inner blind.
  - Remove the TORX bolts (A).



5. Remove the TORX bolts from outer side.
  - Remove the pawls, and then pull down rear link cover (1).




: Pawl

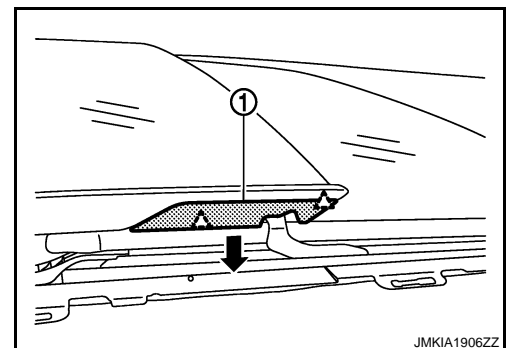

# GLASS LID

## < ON-VEHICLE REPAIR >

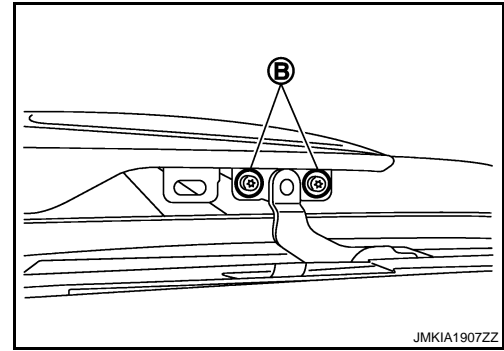- Remove the TORX bolts (B).



6. Remove the glass lid from the vehicle.

### INSTALLATION

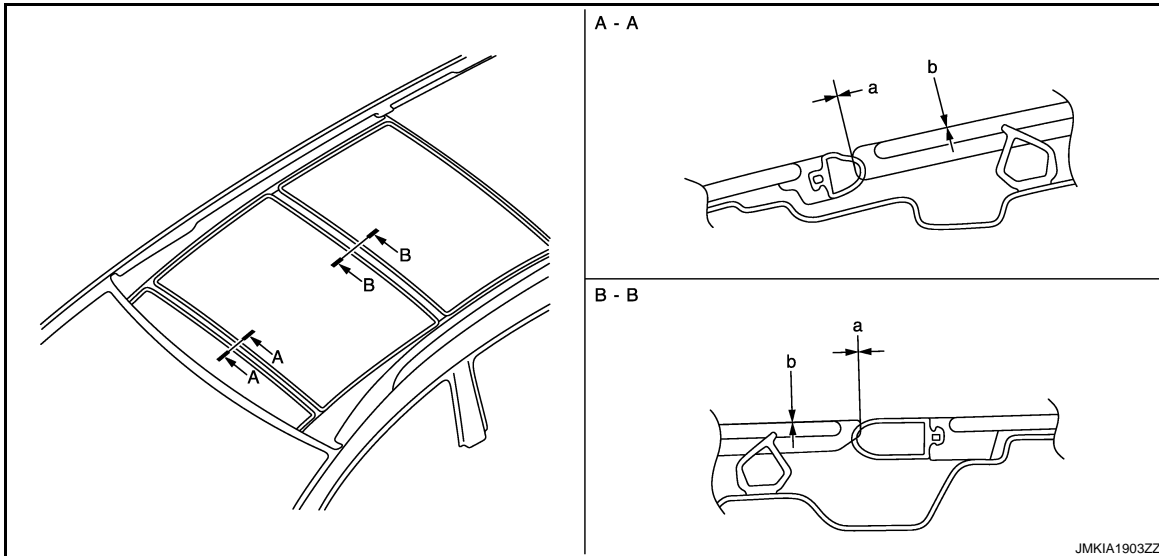
#### CAUTION:

After installing the glass lid, perform the leak test and check that there is no malfunction.

#### NOTE:

After installation carry out fitting adjustment. Refer to [RF-91, "Adjustment"](#).  
Install in the reverse order of removal.

### Adjustment



### WEATHER-STRIP OVERLAP ADJUSTMENT AND SURFACE MISMATCH ADJUSTMENT

1. Tilt up glass lid, and then remove inner blind and rear link cover.
2. After loosening glass lid from TORX bolts (left and right), tilt down glass lid.
3. Adjust glass lid from outside of vehicle so it resembles "A - A" "B - B" as shown in the figure.

	a	b
A - A	0.2 - 4.6 mm (0.008 - 0.181 in)	-1.5 - 1.5 mm (-0.059 - 0.059 in)
B - B	0.5 - 4.9 mm (0.020 - 0.193 in)	-1.5 - 1.5 mm (-0.059 - 0.059 in)

4. To prevent glass lid from moving after adjustment, first tighten the TORX bolts of front left, and then tighten the TORX bolts of rear right.
5. Tighten remaining TORX bolts, being careful to prevent glass lid from moving.
6. Tilt glass lid up and down several times to check that it moves smoothly.

#### NOTE:

After adjustment the sunroof unit assembly, perform additional service. Refer to [RF-4, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

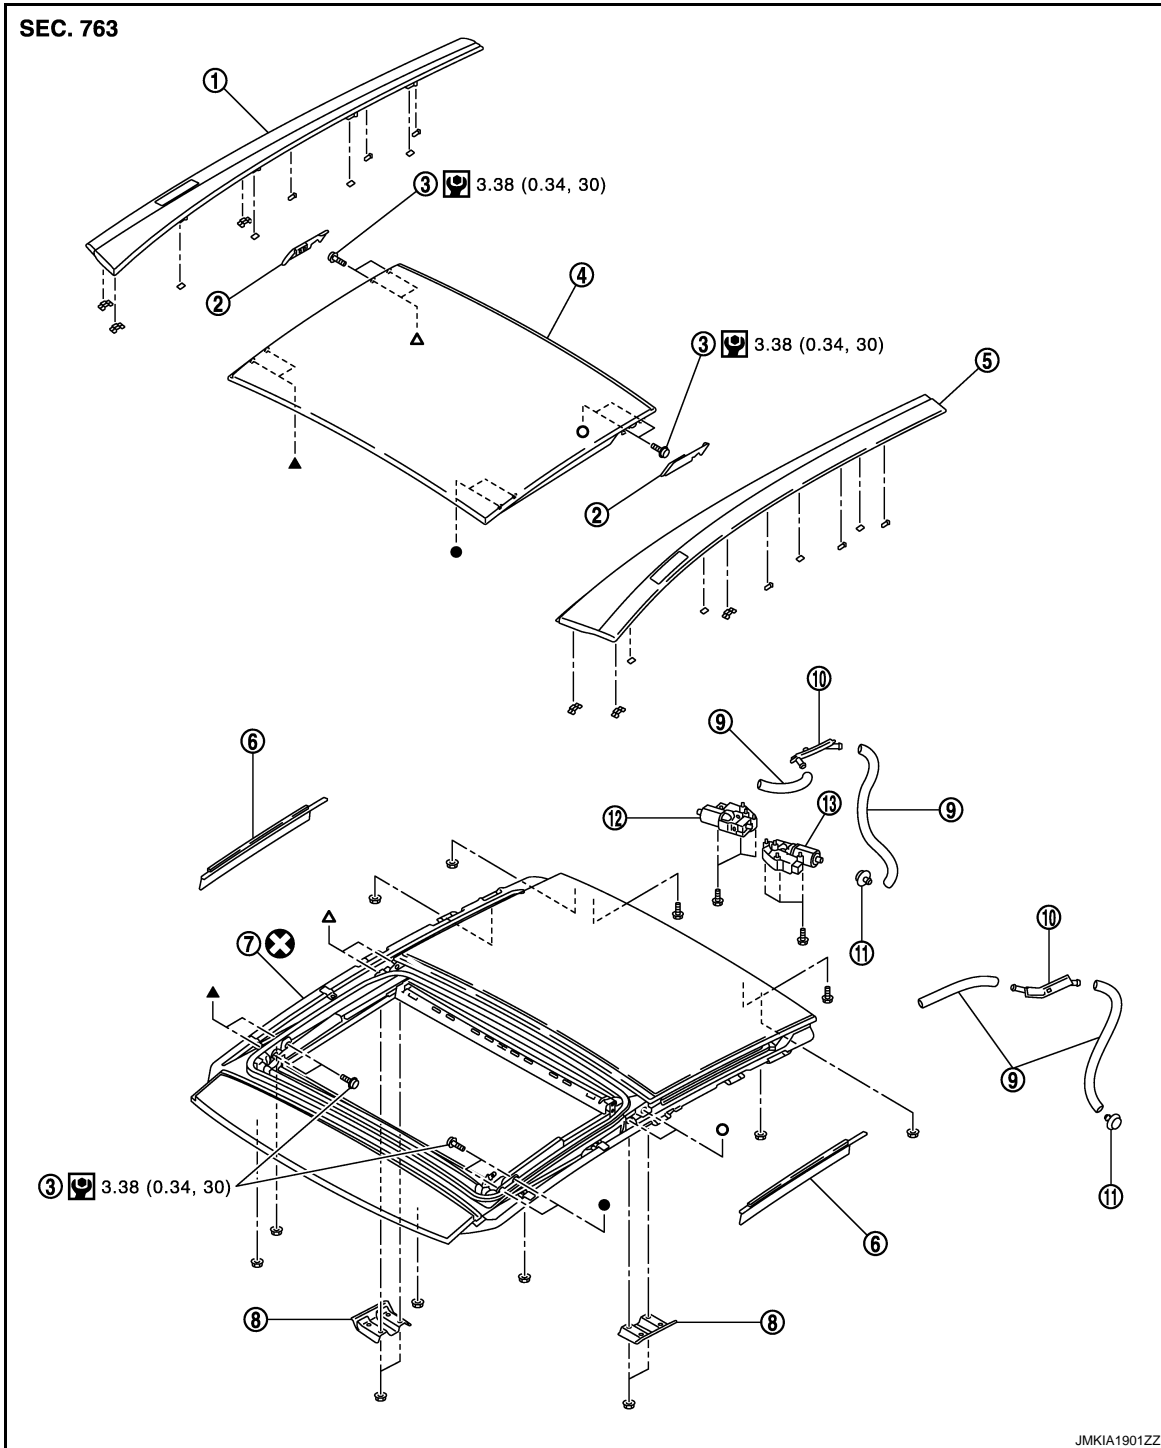
# SUNROOF MOTOR ASSEMBLY

< ON-VEHICLE REPAIR >

## SUNROOF MOTOR ASSEMBLY

Exploded View

INFOID:000000003468652



- |                             |                          |                            |
|-----------------------------|--------------------------|----------------------------|
| 1. Roof side finisher RH    | 2. Rear link cover       | 3. TORX bolt               |
| 4. Glass lid                | 5. Roof side finisher LH | 6. Inner blind             |
| 7. Sunroof unit assembly    | 8. Sunroof bracket       | 9. Drain hose              |
| 10. Drain connector         | 11. Drain plug           | 12. Sunroof motor assembly |
| 13. Sunshade motor assembly |                          |                            |

Refer to [GI-4. "Components"](#) for symbols in the figure.

# SUNROOF MOTOR ASSEMBLY

< ON-VEHICLE REPAIR >

## Removal and Installation

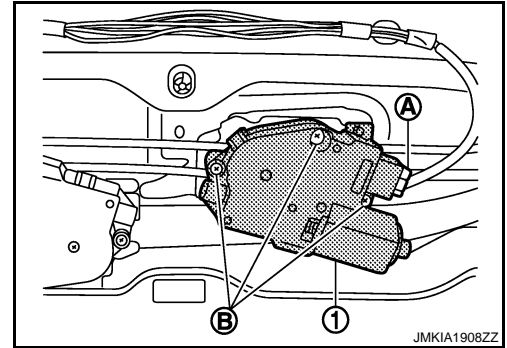
INFOID:000000003465802

### REMOVAL

#### CAUTION:

- Before removing sunroof motor, check that glass lid is fully closed.
- After removing sunroof motor, never attempt to rotate sunroof motor assembly as a single unit.

1. Remove the headlining. Refer to [INT-29, "SUNROOF : Removal and Installation"](#).
2. Disconnect connector (A) from sunroof motor assembly (1). Remove sunroof motor assembly mounting screws (B), and then remove sunroof motor assembly.



### INSTALLATION

#### CAUTION:

Before installing the sunroof motor assembly, be sure to place the link and wire assembly in the symmetrical and fully closed position.

1. Move the sunroof motor assembly laterally by little so that the gear is completely engaged into the wire on the sunroof unit assembly and mounting surface becomes parallel. Then secure the sunroof motor assembly with screws.
2. Install the headlining. Refer to [INT-29, "SUNROOF : Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF

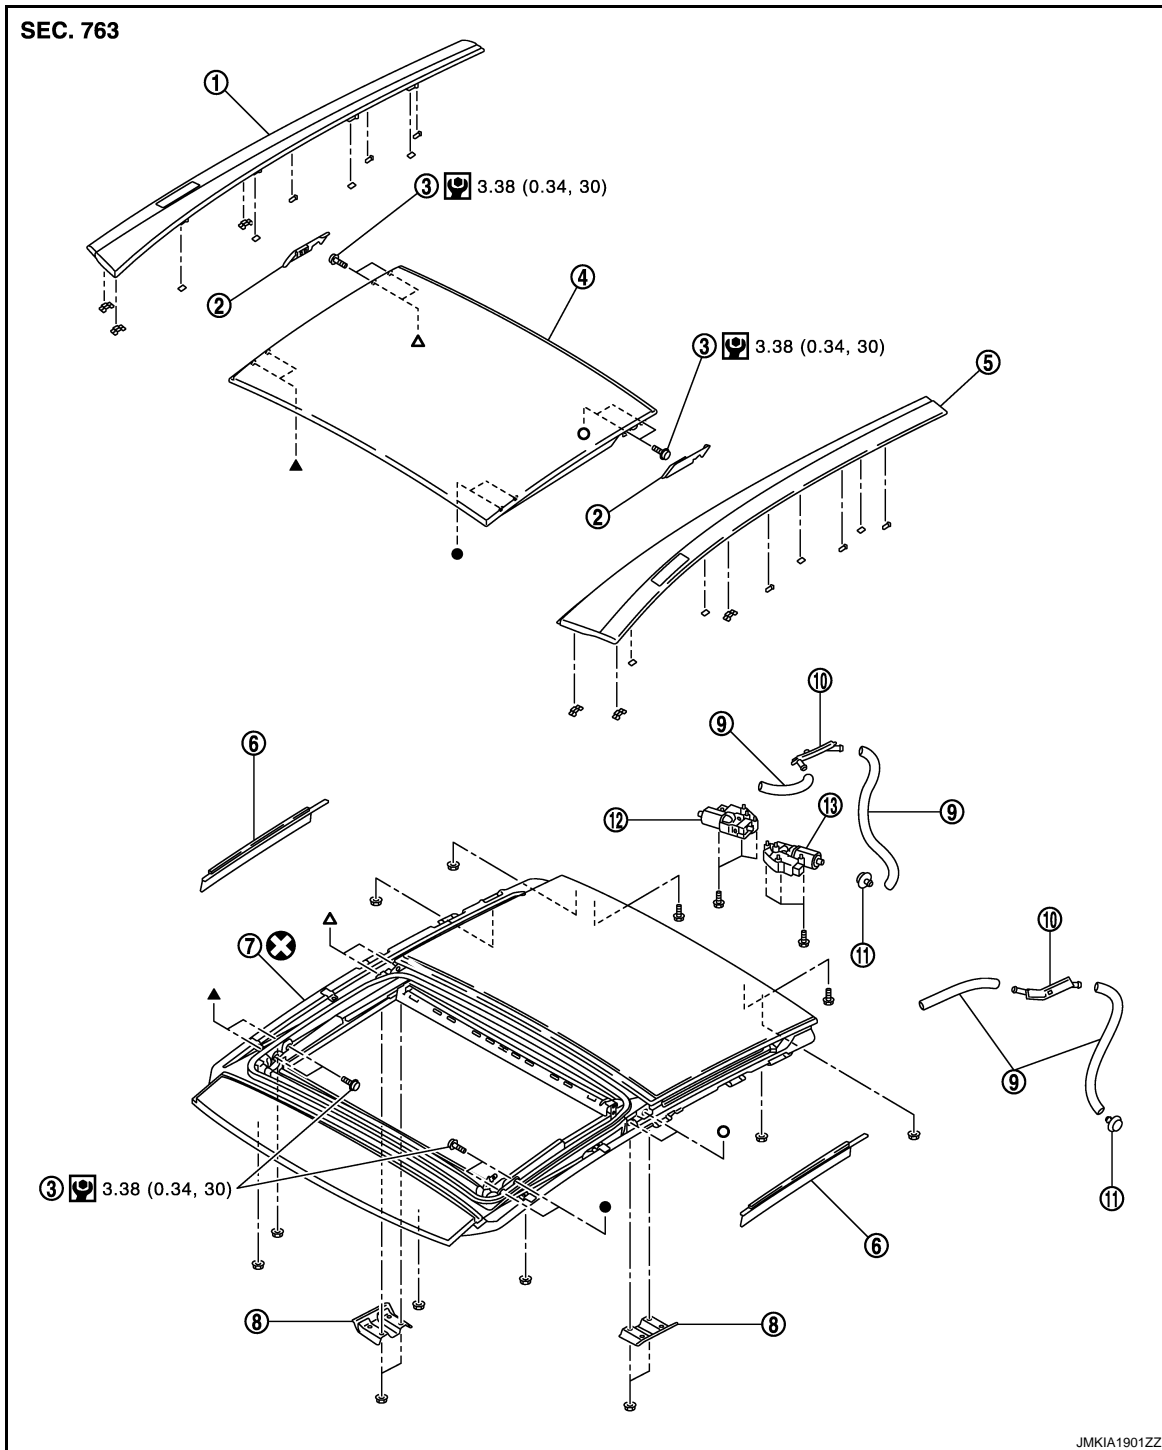
# SUNSHADE MOTOR ASSEMBLY

< ON-VEHICLE REPAIR >

## SUNSHADE MOTOR ASSEMBLY

Exploded View

INFOID:000000003468653



- |                             |                          |                            |
|-----------------------------|--------------------------|----------------------------|
| 1. Roof side finisher RH    | 2. Rear link cover       | 3. TORX bolt               |
| 4. Glass lid                | 5. Roof side finisher LH | 6. Inner blind             |
| 7. Sunroof unit assembly    | 8. Sunroof bracket       | 9. Drain hose              |
| 10. Drain connector         | 11. Drain plug           | 12. Sunroof motor assembly |
| 13. Sunshade motor assembly |                          |                            |

Refer to [GI-4. "Components"](#) for symbols in the figure.

# SUNSHADE MOTOR ASSEMBLY

< ON-VEHICLE REPAIR >

## Removal and Installation

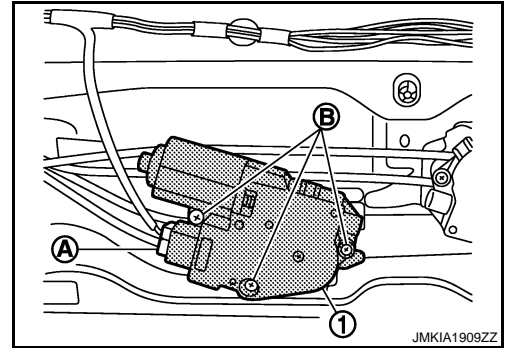
INFOID:000000003468654

### REMOVAL

#### CAUTION:

- Before removing sunshade motor, check that glass lid is fully closed.
- After removing sunshade motor, never attempt to rotate sunshade motor assembly as a single unit.

1. Remove the headlining. Refer to [INT-29, "SUNROOF : Removal and Installation"](#).
2. Disconnect connector (A) from sunshade motor assembly (1). Remove sunshade motor assembly mounting screws (B), and then remove sunshade motor assembly.



### INSTALLATION

#### CAUTION:

Before installing the sunshade motor assembly, be sure to place the link and wire assembly in the symmetrical and fully closed position.

1. Move the sunshade motor assembly laterally by little so that the gear is completely engaged into the wire on the sunroof unit assembly and mounting surface becomes parallel. Then secure the sunshade motor assembly with screws.
2. Install the headlining. Refer to [INT-29, "SUNROOF : Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF

# SUNROOF UNIT ASSEMBLY

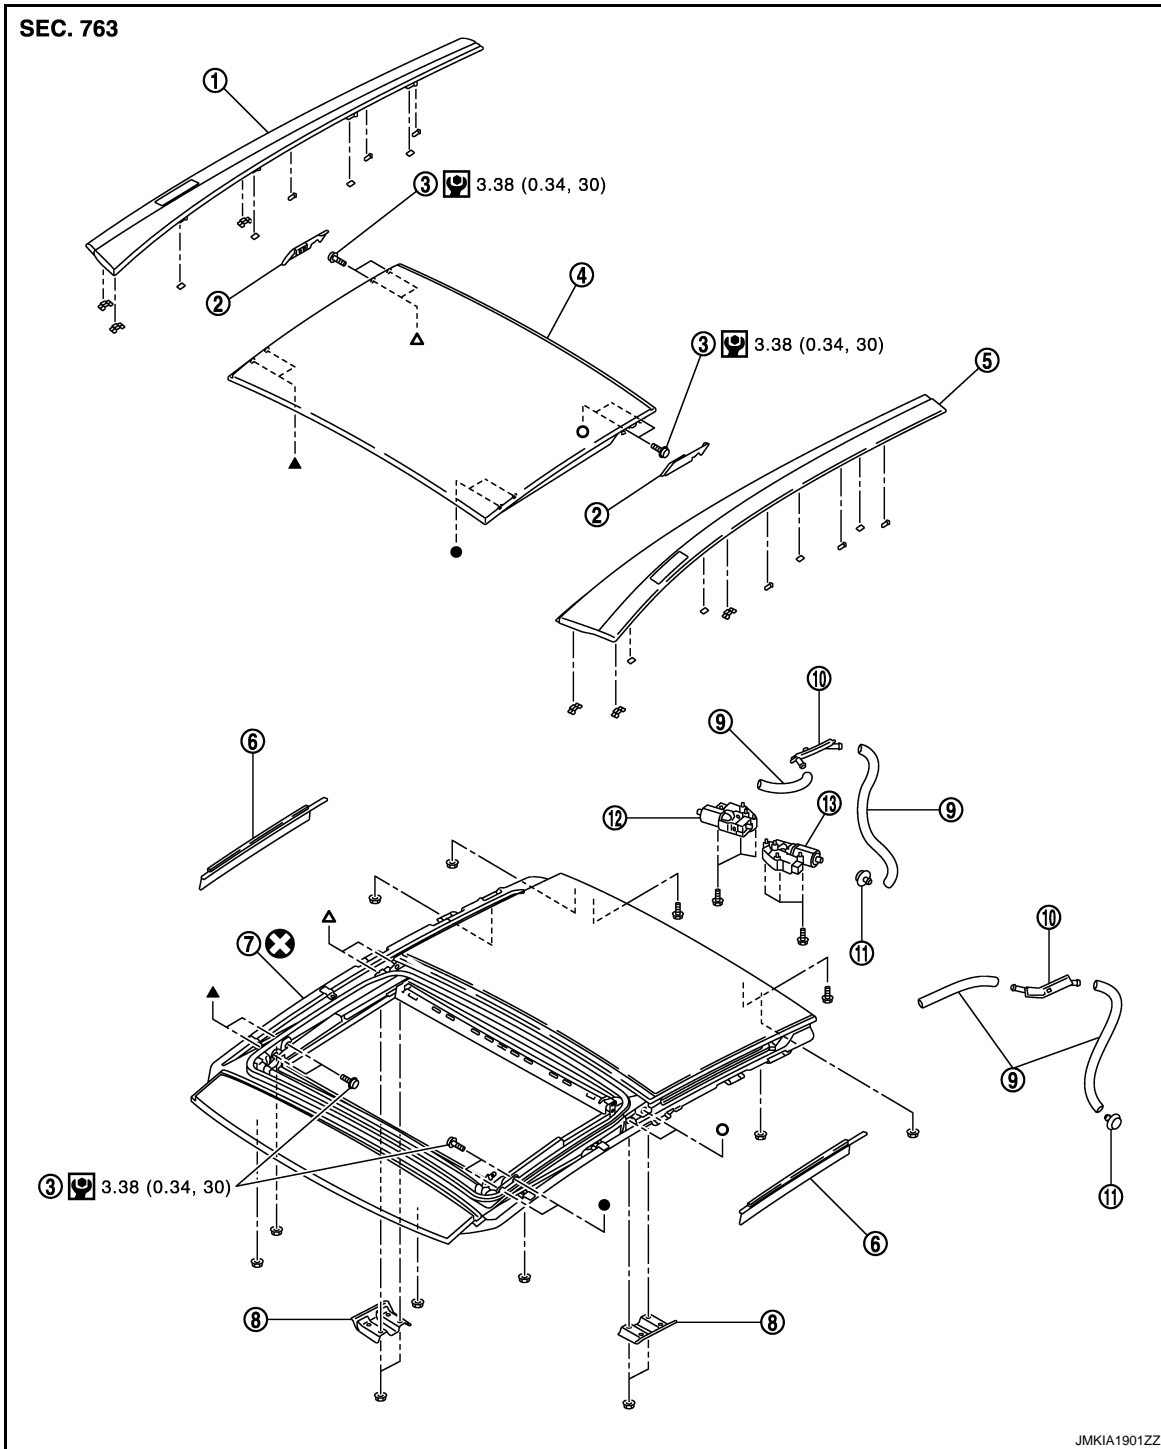
< ON-VEHICLE REPAIR >

## SUNROOF UNIT ASSEMBLY

Exploded View

INFOID:000000003465803

REMOVAL



- |                          |                          |                            |
|--------------------------|--------------------------|----------------------------|
| 1. Roof side finisher RH | 2. Rear link cover       | 3. TORX bolt               |
| 4. Glass lid             | 5. Roof side finisher LH | 6. Inner blind             |
| 7. Sunroof unit assembly | 8. Sunroof bracket       | 9. Drain hose              |
| 10. Drain connector      | 11. Drain plug           | 12. Sunroof motor assembly |




# SUNROOF UNIT ASSEMBLY
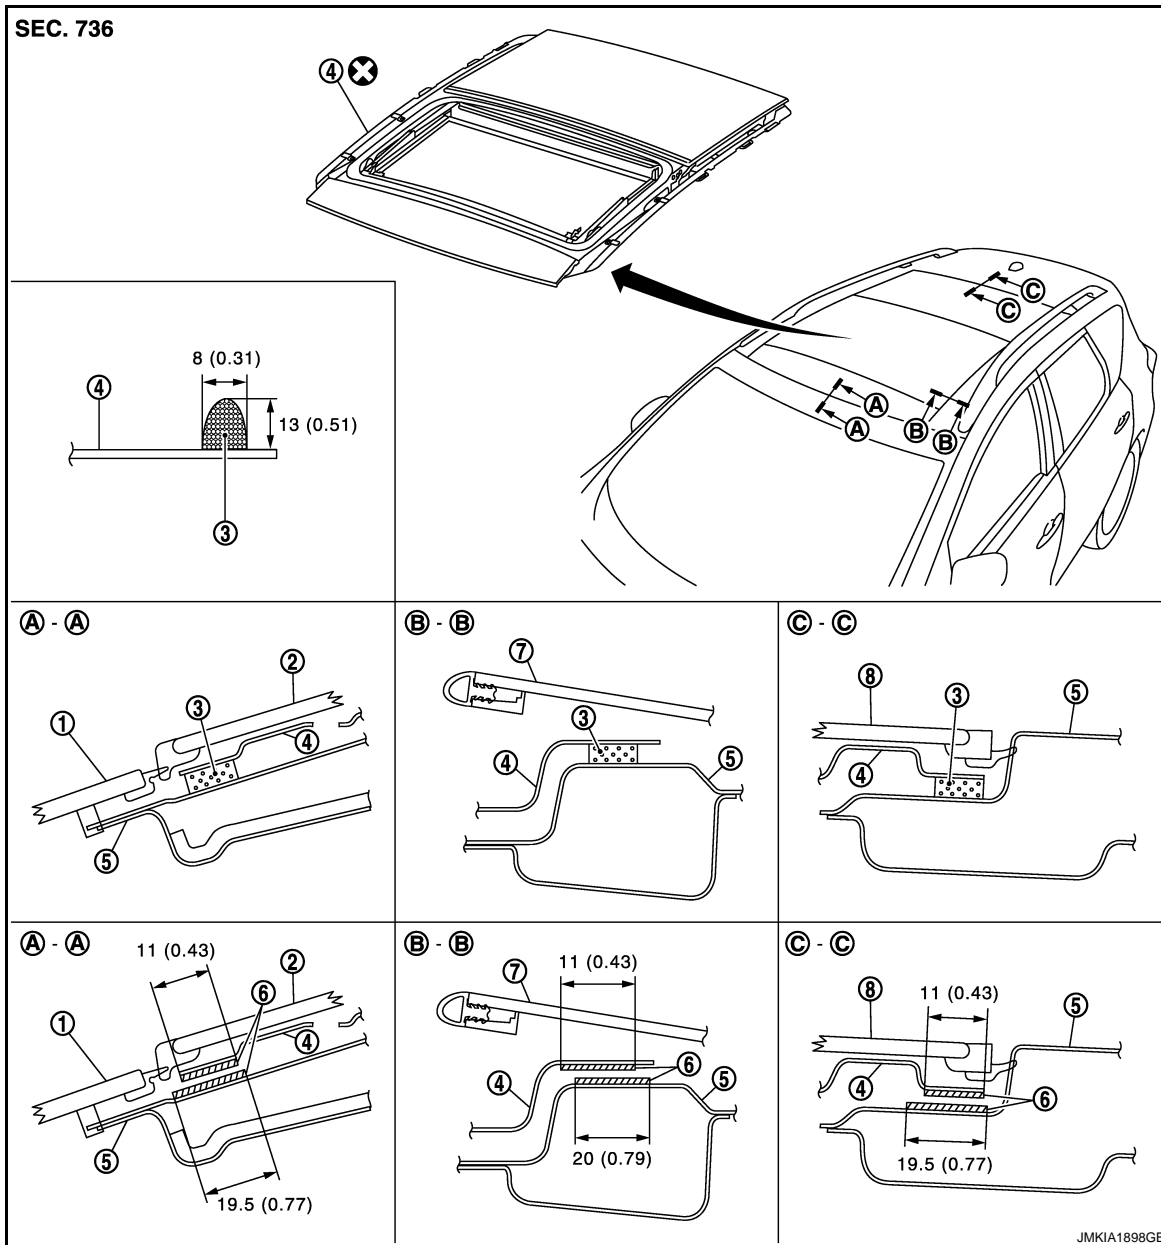
## < ON-VEHICLE REPAIR >

### 13. Sunshade motor assembly

Refer to [GI-4, "Components"](#) for symbols in the figure.



- |                       |                        |             |
|-----------------------|------------------------|-------------|
| 1. Windshield glass   | 2. Front sunroof glass | 3. Adhesive |
| 4. Sunroof frame      | 5. Roof panel          | 6. Primer   |
| 7. Roof side finisher | 8. Rear sunroof glass  |             |


Refer to [GI-4, "Components"](#) for symbols in the figure.

## DISASSEMBLY

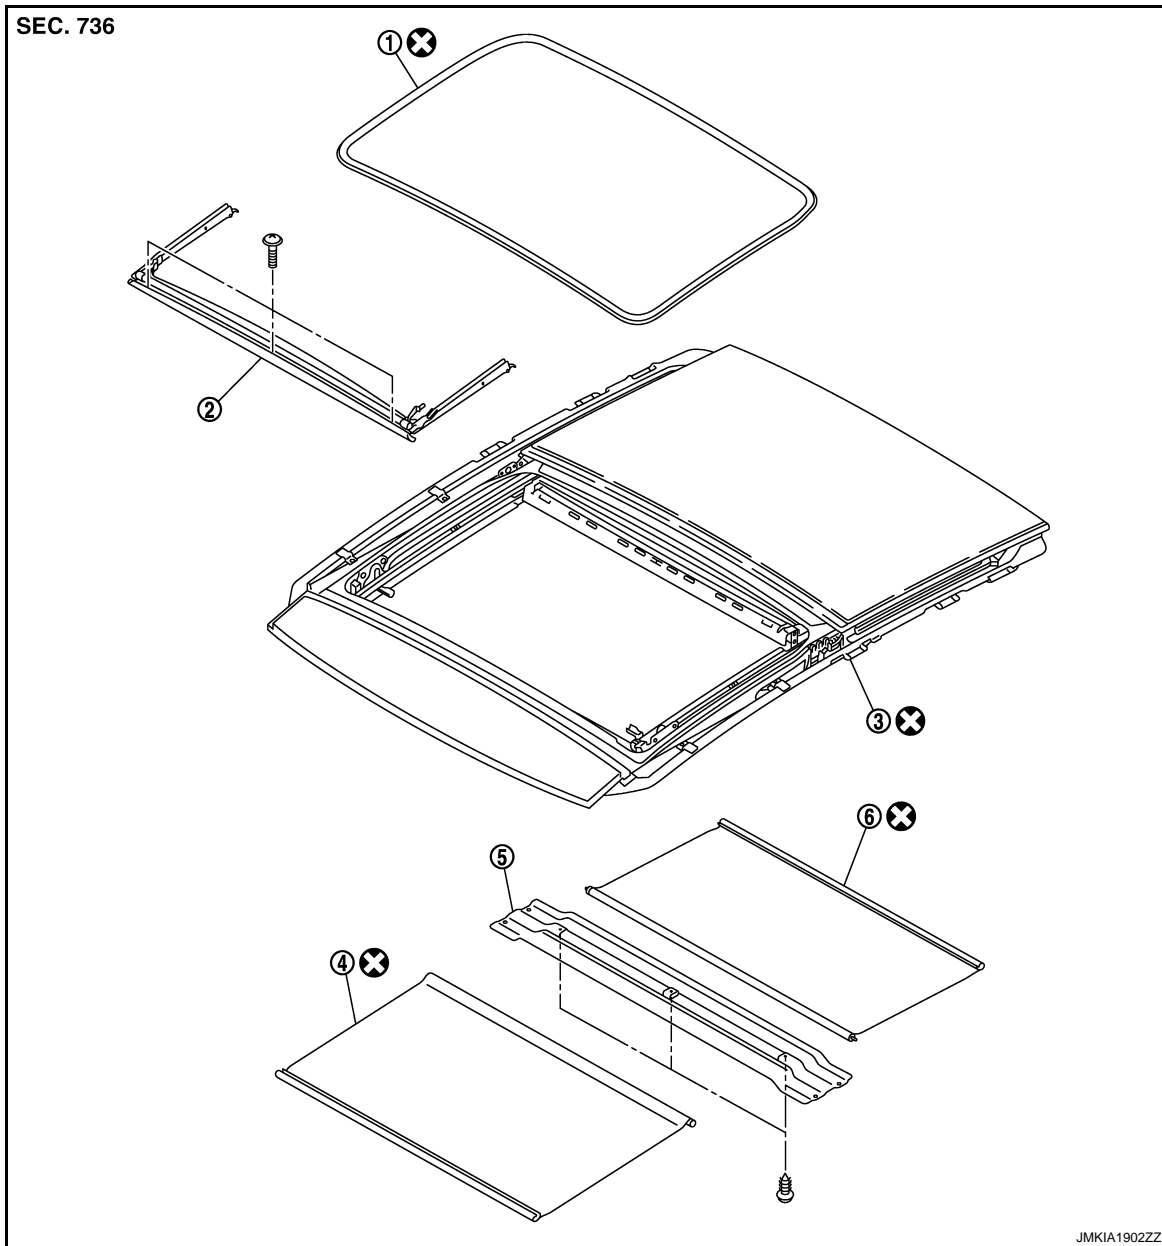A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# SUNROOF UNIT ASSEMBLY

< ON-VEHICLE REPAIR >



- |                   |                   |                  |
|-------------------|-------------------|------------------|
| 1. Weather-strip  | 2. Wind deflector | 3. Sunroof frame |
| 4. Front sunshade | 5. Sunshade cover | 6. Rear sunshade |

Refer to [GI-4, "Components"](#) for symbols in the figure.

## Removal and Installation

INFOID:000000003465804

### REMOVAL

#### CAUTION:

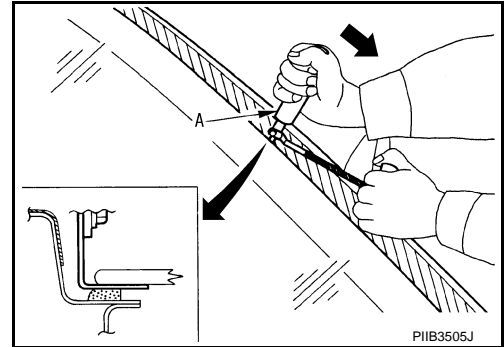
- Always work with a helper.
- When taking sunroof unit assembly out, use cloths to protect the seats and trim from damage.
- Never reuse the front and rear sunroof glass which has been removed once.

1. Remove the headlining. Refer to [INT-29, "SUNROOF : Removal and Installation"](#).
2. Remove the glass lid. Refer to [RF-90, "Removal and Installation"](#).
3. Disconnect drain hoses.
4. Remove the sunroof brackets (LH/RH).
5. Remove nuts and bolts from the front end, side rail and rear end.

# SUNROOF UNIT ASSEMBLY

## < ON-VEHICLE REPAIR >

6. Point matching marks on body before removing the sunroof unit assembly.
7. Apply protective tape around the roof panel to protect the surface from damage.
8. Remove the front sunroof glass. Refer to [RF-101. "Removal and Installation"](#).
9. Cut adhesive.
  - Cut the adhesive using windshield cutter (A).



- Pass piano wire through the adhesive with a wire pierce.
  - Tie piano wire both ends to wire grip.
  - Pull piano wire in turn and cut off adhesive.
10. Remove sunroof unit assembly from vehicle.

## INSTALLATION

### WARNING:

- Keep heat and open flames away as primers and adhesive are flammable.
- The materials contained in the kit are harmful if swallowed, and may irritate skin and eyes. Never let them in contact with the skin and eyes.
- Use in an open, well ventilated location. Never breathe the vapors. They may be harmful if inhaled. Move immediately to an area with fresh air if affected by vapor inhalation.

### CAUTION:

After installing the sunroof unit assembly and glass lid, perform the leak test and check that there is no malfunction.

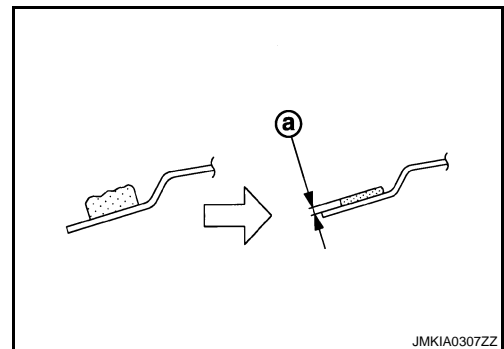
### NOTE:

- Use a genuine Nissan Urethane Adhesive Kit (if available) or an equivalent and follow the instructions furnished with it.
- Inform the customer that the vehicle should remain stationary until the urethane adhesive has completely cured (approximately 24 hours). Curing time varies with temperature and humidity.

1. Using a knife or spatula, trim the adhesive (sealant) remaining on body down to approximately 2 mm (0.08 in) thick (a) so that the contour becomes smooth.

### CAUTION:

If bonded area on body is scratched, be sure to repair it with a 2-component urethane. Never use lacquer.



2. Clean bonded area on sunroof frame with white gasoline.
3. Apply paint primer along the entire circumference of sunroof frame.
  - **CAUTION:**
  - There are 2 types of primer. Never confuse the application methods.
  - Paint primer: for painted surfaces
  - Glass primer: for glass
4. Apply paint primer on areas where adhesive contacts on the side of vehicle body.

### CAUTION:

If paint primer adheres to a painted surface other than bonding area, or if it overflows, quickly remove it with white gasoline.

# SUNROOF UNIT ASSEMBLY

## < ON-VEHICLE REPAIR >

---

5. After applying primers, apply the adhesive along the entire circumference of the sunroof unit assembly as shown in the figure, and within the time specified in the instructions for the adhesive.  
Open adhesive by cutting off the nozzle tip and set it in a sealant gun.
6. Align mating marks on body and sunroof unit assembly. Install sunroof unit assembly to the body.
7. Press entire surface of sunroof unit assembly lightly to fit it completely.
8. Using a spatula, repair any adhesive overflow or shortage to make the surface smooth.
9. Remove protective tape.
10. Temporarily tighten the mounting bolts and nuts to the of sunroof unit assembly.
11. Tighten the installation points diagonally excluding the installation point of the sunroof bracket around the roof opening.
12. Tighten the mounting bolts and nuts to the sunroof bracket.
13. Connect drain hoses.
14. Install the glass lid. Refer to [RF-90. "Removal and Installation"](#).

**NOTE:**

After installation, carry out fitting adjustment. Refer to [RF-91. "Adjustment"](#).

15. Install the headlining. Refer to [INT-29. "SUNROOF : Removal and Installation"](#).
16. Check for water leaks.

**NOTE:**

- Perform the water leakage check more than 2 hours after sunroof unit assembly installation.
- After glass lid fitting adjustment, carry out water leakage check by spreading water in the whole roof.

## Disassembly and Assembly

INFOID:000000003465805

### DISASSEMBLY

1. Remove the wind deflector. Refer to [RF-107. "Removal and Installation"](#).
2. Remove the front sunshade and rear sunshade. Refer to [RF-109. "Removal and Installation"](#).

### ASSEMBLY

Assemble in the reverse order of disassembly.

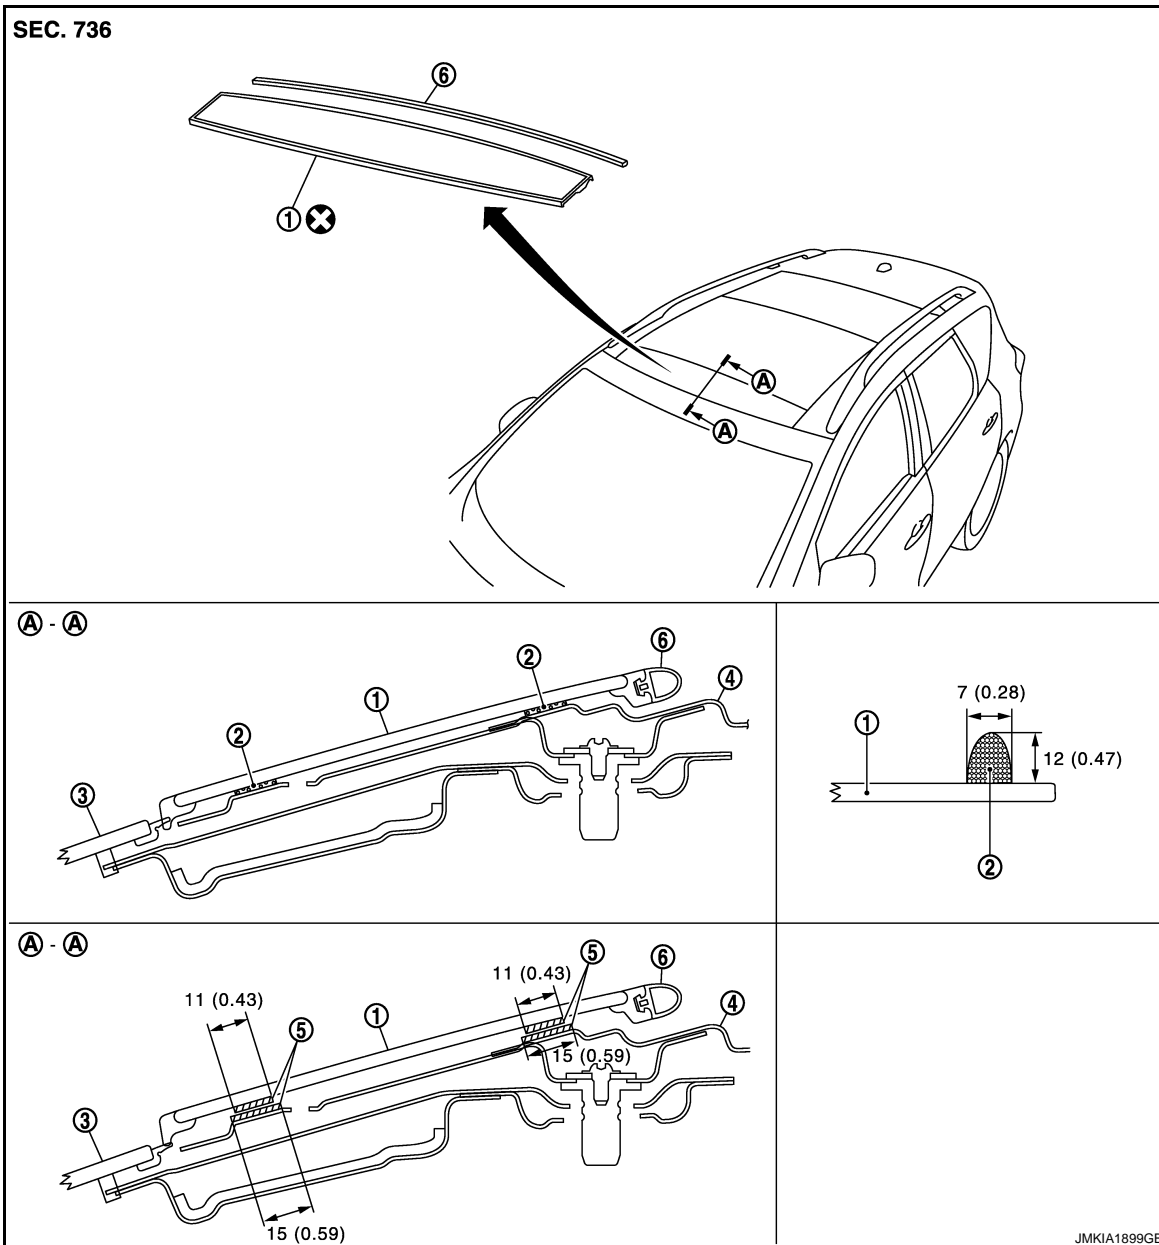
# FRONT SUNROOF GLASS

< ON-VEHICLE REPAIR >

## FRONT SUNROOF GLASS

Exploded View

INFOID:000000003468558



- |                        |             |                     |
|------------------------|-------------|---------------------|
| 1. Front sunroof glass | 2. Adhesive | 3. Windshield glass |
| 4. Sunroof frame       | 5. Primer   | 6. Weather-strip    |

Refer to [GI-4, "Components"](#) for symbols in the figure.

## Removal and Installation

INFOID:000000003468559

### REMOVAL

1. Remove the roof rail assembly. Refer to [EXT-28, "Removal and Installation"](#).
2. Remove the roof side finisher. Refer to [RF-90, "Removal and Installation"](#).
3. Fully open the glass lid.
4. Paint matching marks on body before removing the front sunroof glass.
5. Apply protective tape around the roof panel and front sunroof glass to protect the surface from damage.

# FRONT SUNROOF GLASS

## < ON-VEHICLE REPAIR >

6. Remove weather-strip.
7. Cut adhesive.
  - Pass piano wire through the adhesive with a wire pierce.
  - Tie piano wire both ends to wire grip.
  - Pull piano wire in turn and cut off adhesive.
8. Remove front sunroof glass from vehicle using suction lifter.

### **WARNING:**

Always wear safety glasses and heavy gloves to help prevent glass splinters from entering your eyes or cutting your hands when cutting the glass from the vehicle.

### **CAUTION:**

Never reuse the front sunroof glass which has been removed once.

## INSTALLATION

### **WARNING:**

- Keep heat and open flames away as primers and adhesive are flammable.
- The materials contained in the kit are harmful if swallowed, and may irritate skin and eyes. Never let them in contact with the skin and eyes.
- Use in an open, well ventilated location. Never breathe the vapors. They may be harmful if inhaled. Move immediately to an area with fresh air if affected by vapor inhalation.

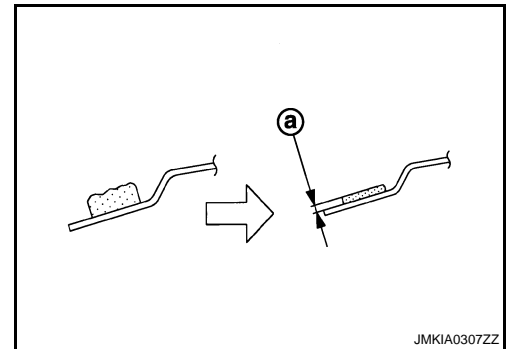
### **NOTE:**

- Use a genuine Nissan Urethane Adhesive Kit (if available) or an equivalent and follow the instructions furnished with it.
- Inform the customer that the vehicle should remain stationary until the urethane adhesive has completely cured (approximately 24 hours). Curing time varies with temperature and humidity.

1. Using a knife or spatula, trim the adhesive (sealant) remaining on body down to approximately 2 mm (0.08 in) thick (a) so that the contour becomes smooth.

### **CAUTION:**

If bonded area on body is scratched, be sure to repair it with a 2-component urethane. Never use lacquer.




2. Clean bonded area on glass with white gasoline.
3. Apply glass primer along the entire circumference of glass.  
**CAUTION:**  
There are 2 types of primer. Never confuse the application methods.  
Paint primer: for painted surfaces  
Glass primer: for glass
4. Apply paint primer on areas where adhesive contacts on the side of sunroof frame.  
**CAUTION:**  
If paint primer adheres to a painted surface other than bonding area, or if it overflows, quickly remove it with white gasoline.
5. After applying primers, apply the adhesive along the entire circumference of the glass as shown in the figure, and within the time specified in the instructions for the adhesive.
  - Open adhesive by cutting off the nozzle tip and set it in a sealant gun.
6. After setting suction lifter to glass, align mating marks on sunroof frame and glass. Install glass to the sunroof frame.

## FRONT SUNROOF GLASS
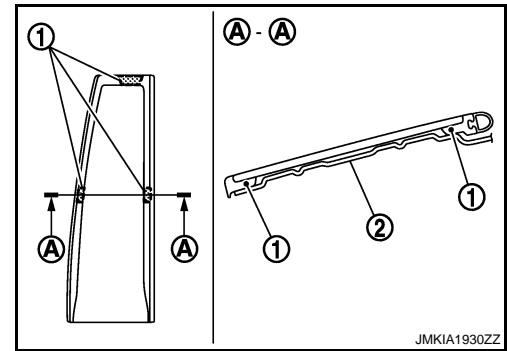
### < ON-VEHICLE REPAIR >

7. Press glass till positioning ribs (1) faces with a sunroof frame (2).



8. Using a spatula, repair any adhesive overflow or shortage to make the surface smooth.
9. Remove protective tape.
10. Install roof side finisher. Refer to [RF-90, "Removal and Installation"](#).
11. Install roof rail assembly. Refer to [EXT-28, "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P


# REAR SUNROOF GLASS
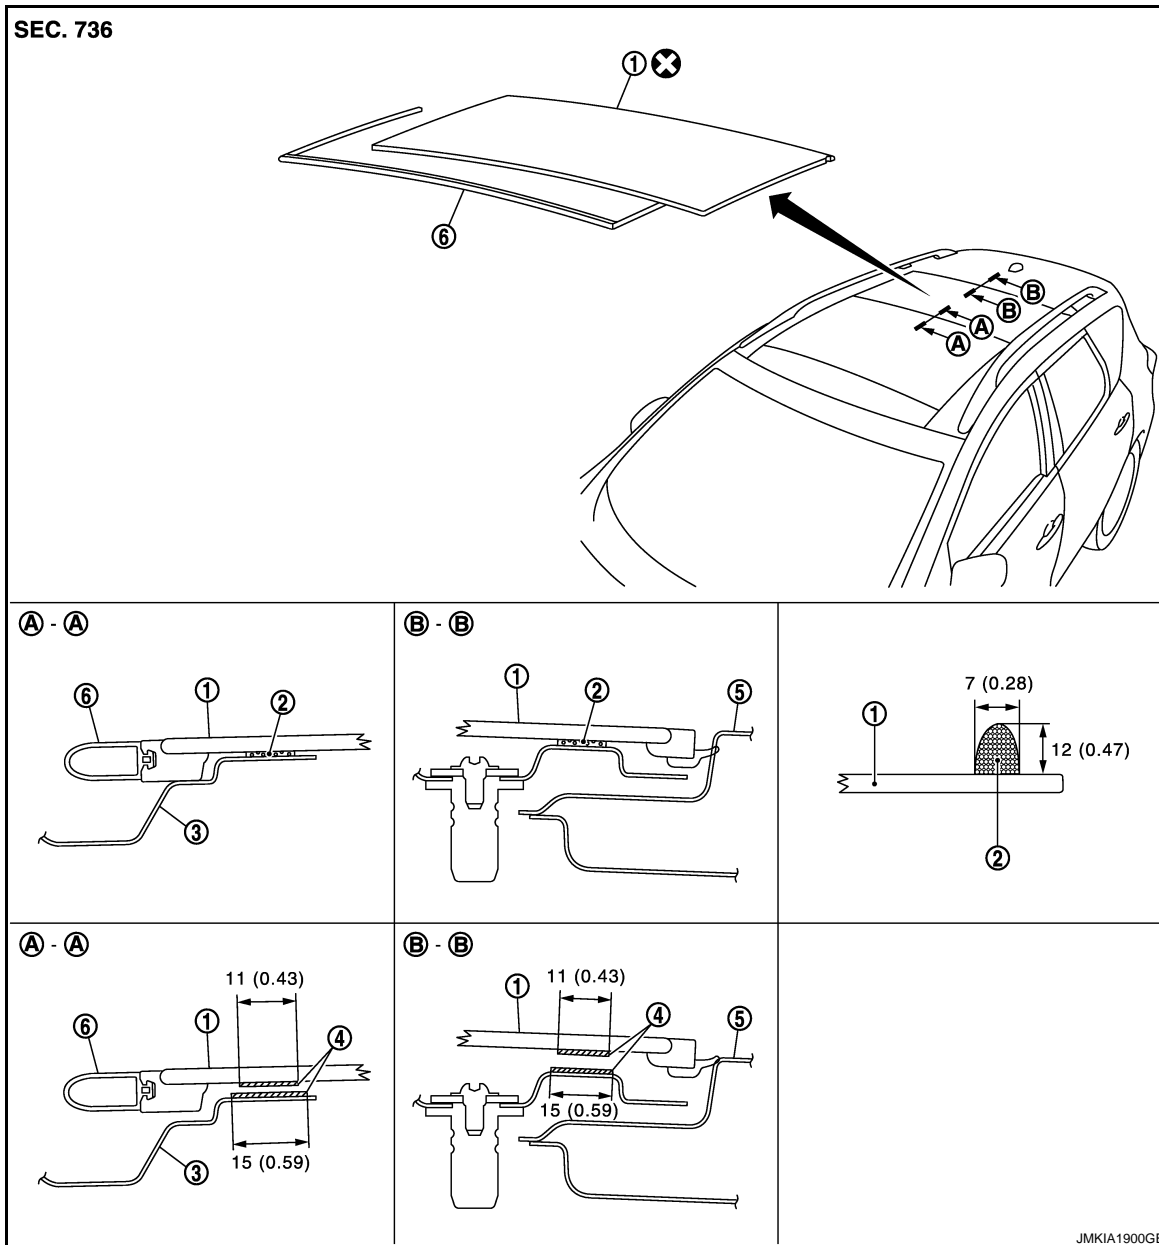
< ON-VEHICLE REPAIR >

## REAR SUNROOF GLASS

Exploded View

INFOID:000000003468560



- |                       |               |                  |
|-----------------------|---------------|------------------|
| 1. Rear sunroof glass | 2. Adhesive   | 3. Sunroof frame |
| 4. Primer             | 5. Roof panel | 6. Weather-strip |

Refer to [GI-4. "Components"](#) for symbols in the figure.

## Removal and Installation

INFOID:000000003468561

### REMOVAL

1. Remove the roof rail assembly. Refer to [EXT-28. "Removal and Installation"](#).
2. Remove the roof side finisher. Refer to [RF-90. "Removal and Installation"](#).
3. Remove the glass lid. Refer to [RF-90. "Removal and Installation"](#).
4. Paint matching marks on body before removing the rear sunroof glass.
5. Apply protective tape around the roof panel and sunroof unit to protect the surface from damage.



## REAR SUNROOF GLASS

### < ON-VEHICLE REPAIR >

6. Remove weather-strip.
7. Cut adhesive.
  - Pass piano wire through the adhesive with a wire pierce.
  - Tie piano wire both ends to wire grip.
  - Pull piano wire in turn and cut off adhesive.
8. Remove rear sunroof glass from vehicle using suction lifter.

#### **WARNING:**

Always wear safety glasses and heavy gloves to help prevent glass splinters from entering your eyes or cutting your hands when cutting the glass from the vehicle.

#### **CAUTION:**

Never reuse the rear sunroof glass which has been removed once.

### INSTALLATION

#### **WARNING:**

- Keep heat and open flames away as primers and adhesive are flammable.
- The materials contained in the kit are harmful if swallowed, and may irritate skin and eyes. Never let them in contact with the skin and eyes.
- Use in an open, well ventilated location. Never breathe the vapors. They may be harmful if inhaled. Move immediately to an area with fresh air if affected by vapor inhalation.

#### **CAUTION:**

After installing the rear sunroof glass, perform the leak test and check that there is no malfunction.

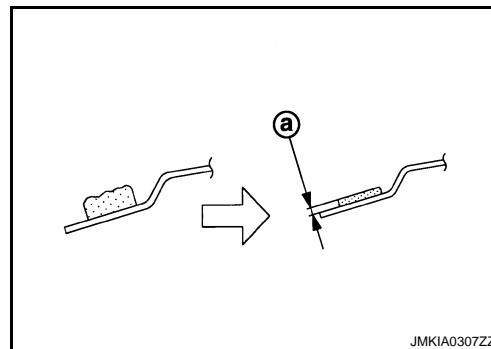
#### **NOTE:**

- Use a genuine Nissan Urethane Adhesive Kit (if available) or an equivalent and follow the instructions furnished with it.
- Inform the customer that the vehicle should remain stationary until the urethane adhesive has completely cured (approximately 24 hours). Curing time varies with temperature and humidity.

1. Using a knife or spatula, trim the adhesive (sealant) remaining on body down to approximately 2 mm (0.08 in) thick (a) so that the contour becomes smooth.

#### **CAUTION:**

If bonded area on body is scratched, be sure to repair it with a 2-component urethane. Never use lacquer.




2. Clean bonded area on glass with white gasoline.
3. Apply glass primer along the entire circumference of glass.  
**CAUTION:**  
There are 2 types of primer. Never confuse the application methods.  
Paint primer: for painted surfaces  
Glass primer: for glass
4. Apply paint primer on areas where adhesive contacts on the side of sunroof fram.  
**CAUTION:**  
If paint primer adheres to a painted surface other than bonding area, or if it overflows, quickly remove it with white gasoline.
5. After applying primers, apply the adhesive along the entire circumference of the glass as shown in the figure, and within the time specified in the instructions for the adhesive. Open adhesive by cutting off the nozzle tip and set it in a sealant gun.
6. After setting suction lifter to glass, align mating marks on sunroof fram and glass. Install glass to the sunroof fram.

## REAR SUNROOF GLASS
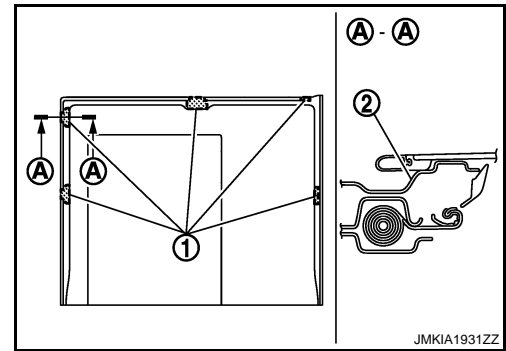
### < ON-VEHICLE REPAIR >

7. Press glass till positioning ribs (1) faces with a sunroof frame (2).



8. Using a spatula, repair any adhesive overflow or shortage to make the surface smooth.
9. Remove protective tape.
10. Install glass lid. Refer to [RF-90, "Removal and Installation"](#).
11. Install roof side finisher. Refer to [RF-90, "Removal and Installation"](#).
12. Install roof rail assembly. Refer to [EXT-28, "Removal and Installation"](#).
13. Check for water leaks.

#### **NOTE:**

- Perform the water leakage check more than 2 hours after rear sunroof glass installation.
- After glass lid fitting adjustment, carry out water leakage check by spreading water in the whole roof.

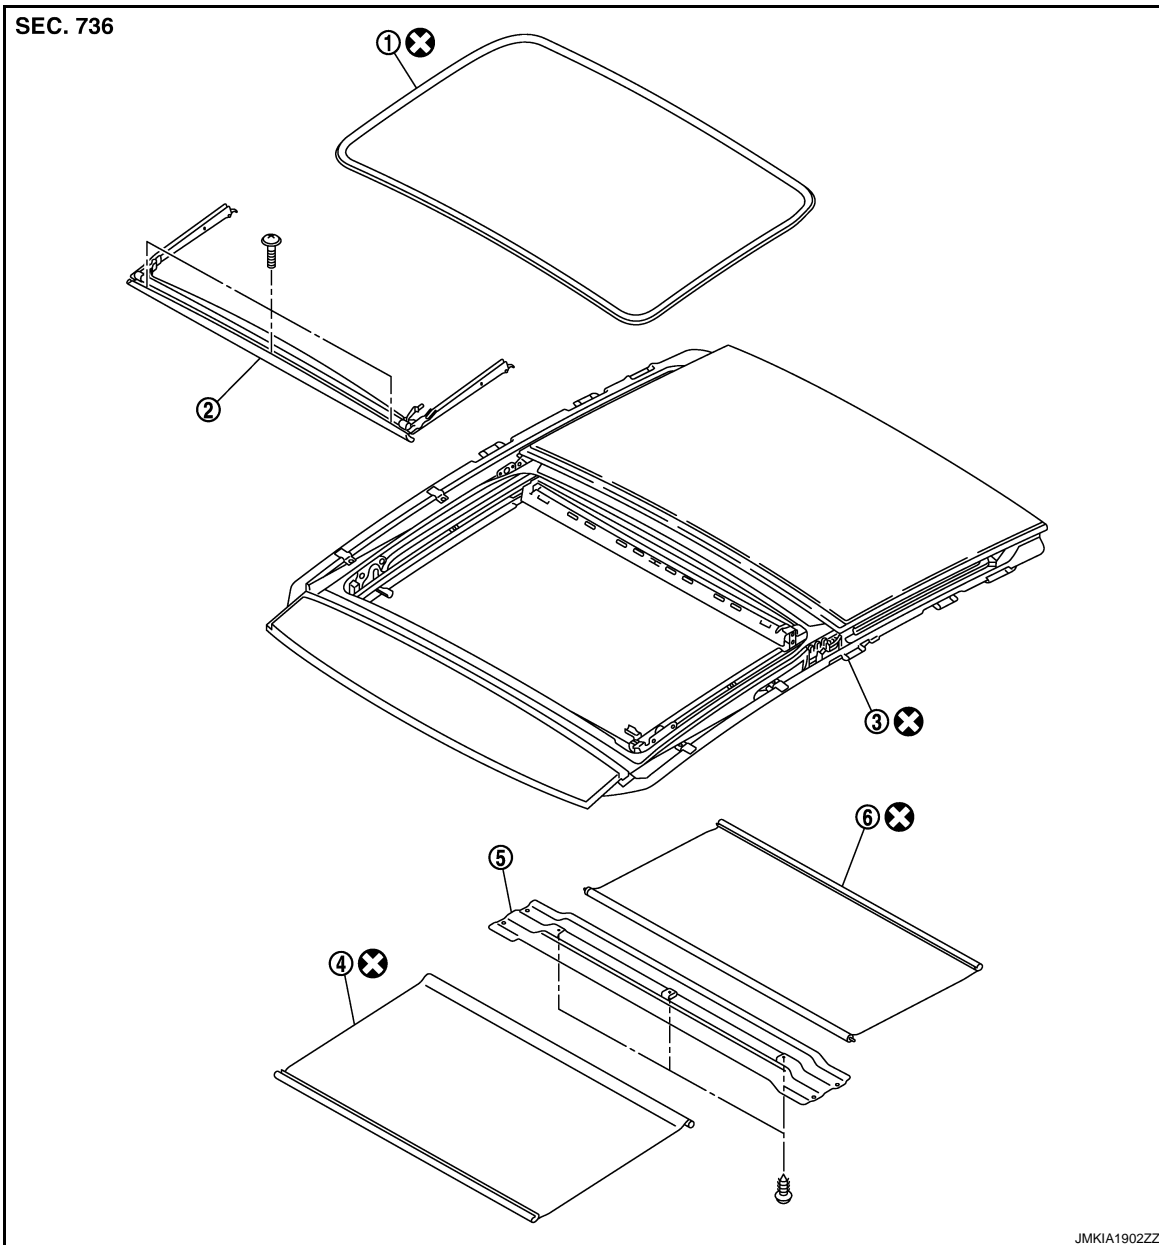
# WIND DEFLECTOR

< ON-VEHICLE REPAIR >

## WIND DEFLECTOR

Exploded View

INFOID:000000003486696



- |                   |                   |                  |
|-------------------|-------------------|------------------|
| 1. Weather-strip  | 2. Wind deflector | 3. Sunroof frame |
| 4. Front sunshade | 5. Sunshade cover | 6. Rear sunshade |

Refer to [GI-4. "Components"](#) for symbols in the figure.

### Removal and Installation

INFOID:000000003486695

#### REMOVAL

1. Fully open the glass lid.
2. Remove the wind deflector.

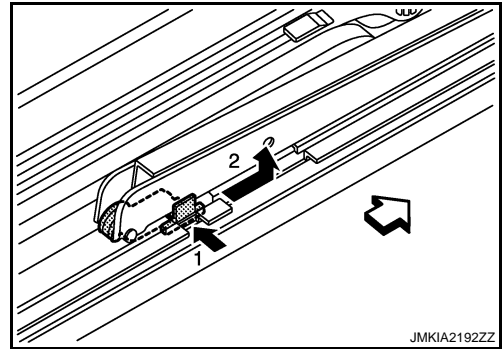
A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# WIND DEFLECTOR

## < ON-VEHICLE REPAIR >


- Push and slide the fastener as shown by the arrows (1) and (2) in the figure to remove.

⇐ : Vehicle front



- Remove the screws (A), and then remove wind deflector (1).

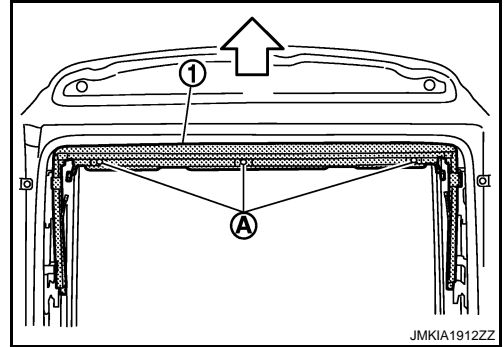⇐ : Vehicle front



## INSTALLATION

Install in the reverse order of removal.

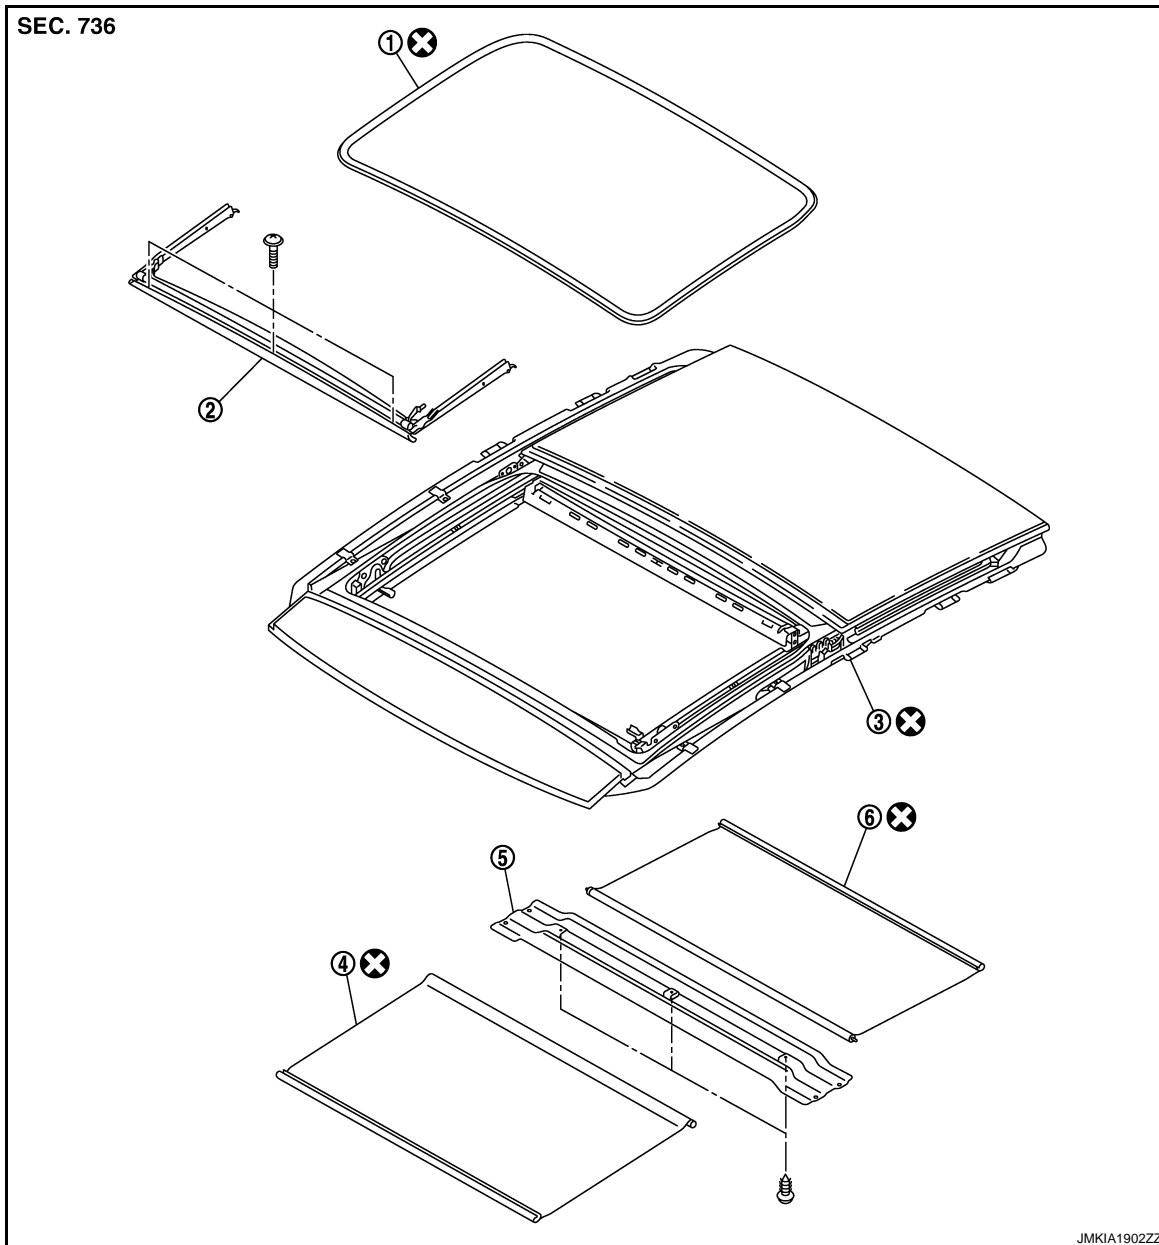
# SUNSHADE

< ON-VEHICLE REPAIR >

## SUNSHADE

### Exploded View

INFOID:000000003465806



- |                   |                   |                  |
|-------------------|-------------------|------------------|
| 1. Weather-strip  | 2. Wind deflector | 3. Sunroof frame |
| 4. Front sunshade | 5. Sunshade cover | 6. Rear sunshade |

Refer to [GI-4. "Components"](#) for symbols in the figure.

## Removal and Installation

INFOID:000000003465807

### REMOVAL

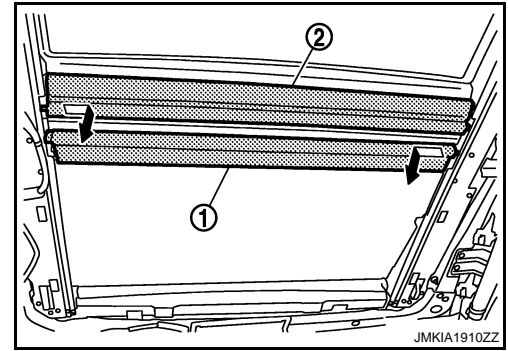
1. Remove the headlining. Refer to [INT-29. "SUNROOF : Removal and Installation"](#).
2. Remove the sunshade cover.
  - Remove the sunroof brackets (LH/RH).
  - Remove the screw, and then sunshade cover.
3. Remove the front sunshade and rear sunshade.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# SUNSHADE

## < ON-VEHICLE REPAIR >

Remove it to the lower part while pushing a front sunshade (1) and rear sunshade (2) to the arrow direction of the figure.



## INSTALLATION

Install in the reverse order of removal.

### **CAUTION:**

**Be careful not to release the spring when installing the sunshade.**

# SUNROOF SWITCH

< ON-VEHICLE REPAIR >

## SUNROOF SWITCH

---

### Exploded View

INFOID:000000003443433

Refer to [INT-29, "SUNROOF : Exploded View"](#).

### Removal and Installation

INFOID:000000003443434

#### Removal

Remove the sunroof switch. Refer to [INT-29, "SUNROOF : Removal and Installation"](#).

#### Installation

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

**RF**

L

M

N

O

P