

SECTION **AV**

AUDIO, VISUAL, NAVIGATION & TELEPHONE SYSTEM

CONTENTS

| | | | |
|---|----------|---|-----------|
| PRECAUTIONS | 4 | DIAGNOSIS FUNCTION | 33 |
| Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" | 4 | Trouble Diagnosis | 34 |
| PREPARATION | 5 | MALFUNCTION WITH RADIO AND CD (BASE AND MID LEVEL SYSTEM) | 34 |
| Commercial Service Tool | 5 | MALFUNCTION WITH RADIO AND CD (BOSE SYSTEM) | 34 |
| AUDIO | 6 | FOR RADIO ONLY | 35 |
| Component Parts and Harness Connector Location | 6 | FOR CD ONLY | 35 |
| System Description | 7 | FOR SATELLITE RADIO TUNER (FACTORY INSTALLED) ONLY | 36 |
| BASE AND MID LEVEL SYSTEM | 7 | Noise Inspection | 36 |
| BOSE® SYSTEM | 7 | TYPE OF NOISE AND POSSIBLE CAUSE | 36 |
| SPEED SENSITIVE VOLUME SYSTEM (IF EQUIPPED) | 8 | Power Supply Circuit Inspection | 37 |
| AUX IN JACK (IF EQUIPPED) | 8 | Satellite Radio Tuner (Factory Installed) Power and Ground Supply Circuit Inspection | 39 |
| Schematic | 9 | Satellite Radio Tuner (Factory Installed) Communication Circuit Inspection | 40 |
| BASE AND MID LEVEL SYSTEM | 9 | Satellite Radio Tuner (Factory Installed) Left Channel Audio Signal Circuit Inspection | 42 |
| BOSE SYSTEM (WITHOUT NAVI) | 10 | Satellite Radio Tuner (Factory Installed) Right Channel Audio Signal Circuit Inspection | 43 |
| BOSE SYSTEM (WITH NAVI) | 11 | Steering Switch Check (With NAVI) | 43 |
| Wiring Diagram — AUDIO — | 12 | Steering Switch Check (Without NAVI) | 45 |
| BASE AND MID LEVEL SYSTEM | 12 | AV Switch Check (With NAVI) | 46 |
| BOSE SYSTEM | 14 | Audio Communication Line Check (With Navigation System) | 47 |
| Terminals and Reference Values for Audio Unit (Base and Mid Level System) | 24 | Sound Is Not Heard From Front Door Speaker or Front Tweeter (Base and Mid Level System) | 47 |
| Terminals and Reference Values for Audio Unit (BOSE System) | 26 | Sound Is Not Heard From Rear Door Speaker (Base and Mid Level System) | 49 |
| Terminals and Reference Values for BOSE Speaker Amp. | 28 | Sound Is Not Heard From Front Door Speaker or Front Tweeter (BOSE System) | 51 |
| Terminals and Reference Values for AV Switch | 31 | Sound Is Not Heard From Rear Door Speaker or Rear Door Tweeter (BOSE System) | 55 |
| Terminals and Reference Values for Satellite Radio Tuner | 32 | Sound Is Not Heard From Subwoofer (BOSE Sys- | |
| AV Switch Self-Diagnosis Function | 33 | | |
| STARTING THE SELF-DIAGNOSIS MODE (MID LEVEL SYSTEM) | 33 | | |
| STARTING THE SELF-DIAGNOSIS MODE (BOSE SYSTEM WITH NAVI) | 33 | | |
| EXITING THE SELF-DIAGNOSIS MODE | 33 | | |

A
B
C
D
E
F
G
H
I
J
L
M



| | | | |
|--|-----------|--|-----|
| tem) | 58 | OPERATION PROCEDURE | 106 |
| Removal and Installation | 61 | SELF-DIAGNOSIS RESULT | 107 |
| AUDIO UNIT - WITH NAVI | 61 | Confirmation/Adjustment Mode | 108 |
| AUDIO UNIT - WITHOUT NAVI | 61 | OPERATION PROCEDURE | 108 |
| AV SWITCH | 61 | DISPLAY DIAGNOSIS | 109 |
| BOSE SPEAKER AMP. | 61 | VEHICLE SIGNALS | 109 |
| FRONT DOOR SPEAKER | 62 | NAVIGATION | 110 |
| FRONT TWEETER | 62 | DISPLAY DIAGNOSIS | 110 |
| REAR DOOR SPEAKER | 63 | VEHICLE SIGNALS | 111 |
| REAR DOOR TWEETER | 63 | ERROR HISTORY | 111 |
| SATELLITE RADIO ANTENNA | 63 | DIAGNOSIS BY ERROR HISTORY | 112 |
| SATELLITE RADIO TUNER | 64 | NAVIGATION | 113 |
| STEERING WHEEL AUDIO CONTROL | | CAN DIAG SUPPORT MONITOR | 115 |
| SWITCHES | 64 | OPERATION PROCEDURE | 115 |
| SUBWOOFER (BOSE SYSTEM) | 64 | AV Switch Self-Diagnosis Function | 115 |
| AUDIO ANTENNA | 66 | Power Supply and Ground Circuit Check for NAVI | |
| System Description | 66 | Control Unit | 116 |
| Wiring Diagram — W/ANT — | 67 | Power Supply and Ground Circuit Check for Display | |
| Location of Antenna | 68 | Control Unit | 117 |
| Window Antenna Repair | 68 | Power Supply and Ground Circuit Check for Display | |
| ELEMENT CHECK | 68 | Unit | 118 |
| ELEMENT REPAIR | 69 | Power Supply and Ground Circuit Check for AV | |
| DVD ENTERTAINMENT SYSTEM | 70 | Switch | 120 |
| Component Parts and Harness Connector Location.. | 70 | Vehicle Speed Signal Check for NAVI Control Unit | 121 |
| System Description | 70 | Vehicle Speed Signal Check for Display Control Unit | 122 |
| Schematic | 71 | Illumination Signal Check for NAVI Control Unit .. | 123 |
| Wiring Diagram — DVD — | 72 | Illumination Signal Check for Display Control Unit. | 123 |
| Trouble Diagnosis | 75 | Ignition Signal Check for NAVI Control Unit | 123 |
| Power Supply Circuit Inspection | 76 | Ignition Signal Check for Display Control Unit | 124 |
| Removal and Installation | 77 | Reverse Signal Check for NAVI Control Unit | 124 |
| DVD PLAYER | 77 | Reverse Signal Check for Display Control Unit ... | 124 |
| VIDEO MONITOR | 77 | AV Communication Line Check (Between Display | |
| NAVIGATION SYSTEM | 78 | Control Unit and NAVI Control Unit) | 125 |
| System Description | 78 | Audio Communication Line Check (Between Dis- | |
| TRAVEL DISTANCE | 78 | play Control Unit and Audio Unit) | 126 |
| TRAVEL DIRECTION | 78 | Display Communication Line Check (Between Dis- | |
| MAP-MATCHING | 79 | play Control Unit and Display Unit) | 128 |
| GPS (GLOBAL POSITIONING SYSTEM) | 79 | AV Communication Line Check (Between Display | |
| COMPONENT DESCRIPTION | 80 | Control Unit and AV Switch) | 129 |
| CAN Communication System Description | 80 | CAN Communication Line Check | 130 |
| Component Parts Location | 81 | If NAVI Control Unit Detects That DVD-ROM Map | |
| Schematic | 82 | is Not Inserted | 130 |
| Wiring Diagram — NAVI — | 83 | If NAVI Control Unit Detects That Inserted DVD- | |
| Schematic | 90 | ROM Map is Malfunctioning or If It is Impossible to | |
| Wiring Diagram — COMM — | 91 | Load Data from DVD-ROM Map | 131 |
| Terminals and Reference Values for NAVI Control | | If Connection Between NAVI Control Unit and GPS | |
| Unit | 94 | Antenna is Malfunctioning | 131 |
| Terminals and Reference Values for Display Control | | Operating Screen for Audio and A/C is Not Dis- | |
| Unit | 96 | played When Showing NAVI Screen | 132 |
| Terminals and Reference Values for Display Unit. | 100 | Color of RGB Image is Not Proper (Only NAVI | |
| Terminals and Reference Values for AV Switch ... | 102 | Screen Looks Bluish) | 133 |
| Terminals and Reference Values for BCM | 103 | Color of RGB Image is Not Proper (Only NAVI | |
| On Board Self-Diagnosis Function | 103 | Screen Looks Reddish) | 134 |
| DESCRIPTION | 103 | Color of RGB Image is Not Proper (Only NAVI | |
| DIAGNOSIS ITEM | 103 | Screen Looks Yellowish) | 135 |
| Self-Diagnosis Mode (DCU) | 104 | Color of RGB Image is Not Proper (All Screens Look | |
| OPERATION PROCEDURE | 104 | Bluish) | 136 |
| SELF-DIAGNOSIS RESULT | 105 | Color of RGB Image is Not Proper (All Screens Look | |
| Self-Diagnosis Mode (NAVI) | 106 | Reddish) | 137 |

| | | | | |
|---|-----|--|-----|----|
| Color of RGB Image is Not Proper (All Screens Look Yellowish) | 138 | Previous NAVI Conditions are Not Stored | 146 | |
| NAVI Screen is Rolling | 140 | Previous Vehicle Conditions are Not Stored | 146 | A |
| Guide Sound is Not Heard | 142 | Position of Current Location Mark is Not Correct . | 146 | |
| Screen is Not Shown | 142 | Radio Wave From GPS Satellite is Not Received. | 146 | |
| A/C Screen is Not Shown (NAVI Screen is Shown) | 143 | Driving Test | 147 | B |
| FUEL ECONOMY Screen is Not Shown | 143 | Example of Symptoms Judged Not Malfunction .. | 148 | |
| Average Fuel Economy Displayed is Not Shown (“***) is Shown) | 143 | BASIC OPERATION | 148 | |
| Distance to Empty Displayed is Not Shown (“***) is Shown) | 144 | VEHICLE MARK | 148 | C |
| Driving Distance or Average Speed Displayed is Not Shown (“***) is Shown) | 144 | DESTINATION, PASSING POINTS, AND MENU ITEMS CANNOT BE SELECTED/SET | 149 | |
| WARNING DOOR OPEN Screen is Not Shown . | 144 | VOICE GUIDE | 149 | |
| Unable to Operate All of AV Switches (Unable to Start Self-Diagnosis) | 145 | ROUTE SEARCH | 150 | D |
| Audio Does Not Work | 145 | Removal and Installation | 151 | |
| Navigation System Does Not Activate | 145 | NAVI CONTROL UNIT | 151 | |
| | | GPS ANTENNA | 152 | E |
| | | DISPLAY UNIT | 152 | |
| | | DISPLAY CONTROL UNIT | 153 | |
| | | | | F |
| | | | | G |
| | | | | H |
| | | | | I |
| | | | | J |
| | | | | AV |
| | | | | L |
| | | | | M |

PRECAUTIONS

PRECAUTIONS

PF0:00001

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EKS00KCN

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- **To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.**
- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.**
- **Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**


PREPARATION

PREPARATION

PF0:00002

Commercial Service Tool

EKS00G5A
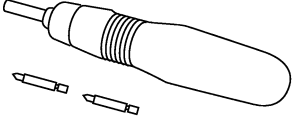
| Tool name | Description |
|--|---|
| <p data-bbox="162 298 272 323">Power tool</p>  <p data-bbox="852 499 925 514">PBIC0191E</p> | <p data-bbox="1015 298 1266 323">Loosening bolts and nuts</p> |

A
B
C
D
E
F
G
H
I
J
L
M

AV


AUDIO

AUDIO

PFP:28111

Component Parts and Harness Connector Location

EKS00G5B

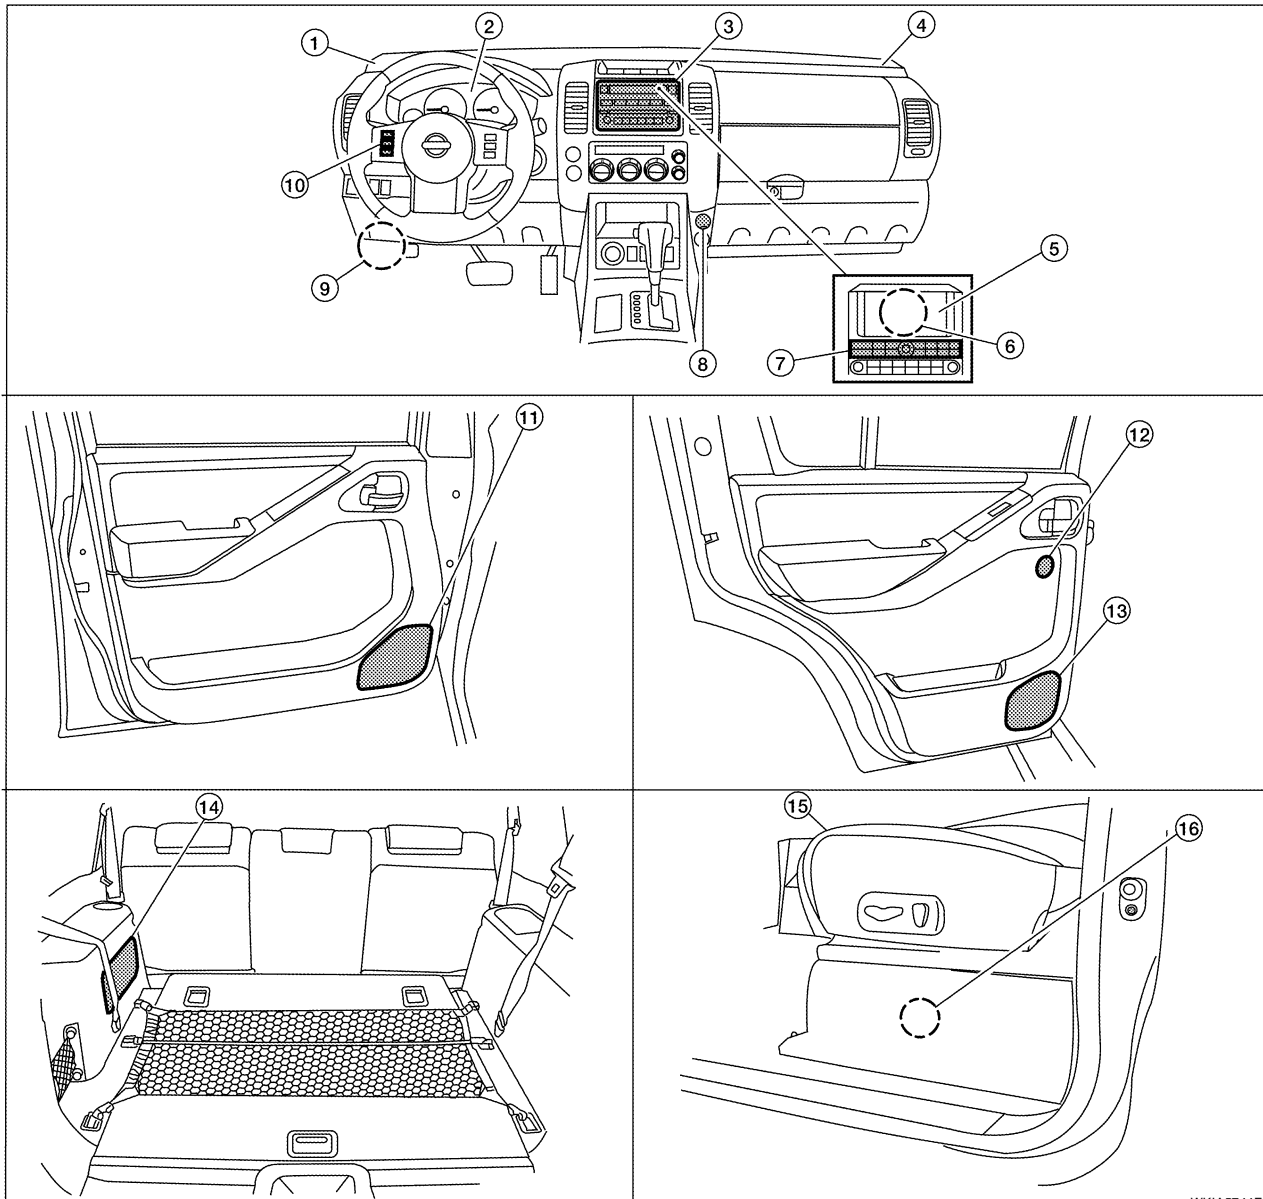

WIKIA5744E

- | | | |
|--|---|--|
| 1. Front tweeter LH M109 | 2. Combination meter M24 | 3. Audio unit M43, M44, M45, M46 |
| 4. Front tweeter RH M111 | 5. Display unit (with NAVI) M93 | 6. Display control unit (with NAVI) M94, M95 |
| 7. AV Switch (with NAVI) M98 | 8. AUX in jack M85 | 9. Satellite radio tuner (pre-wiring or factory installed, if equipped) M41 |
| 10. Steering wheel audio control switches | 11. Front door speaker LH D12 Front door speaker RH D112 | 12. Rear door tweeter LH D208 (with BOSE) Rear door tweeter RH D308 (with BOSE) |
| 13. Rear door speaker LH D207 Rear door speaker RH D307 | 14. Subwoofer (with BOSE) B72 | 15. Driver seat |
| 16. Subwoofer (with BOSE) B72 | | |

AUDIO

EKS00G5C

System Description BASE AND MID LEVEL SYSTEM

Refer to Owner's Manual for audio system operating instructions.
Power is supplied at all times

- through 20A fuse (No. 29, located in the fuse and fusible link box)
- to audio unit terminal 6.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to audio unit terminal 10.

Ground is supplied through the case of the audio unit.
Then audio signals are supplied

- through audio unit terminals 1, 2, 3, 4, 13, 14, 15 and 16
- to terminals + and - of front door speaker LH and RH
- to terminals + and - of front tweeter LH and RH
- to terminals + and - of rear door speaker LH and RH.

When one of the steering wheel audio control switches (with mid level system) is pushed, the resistance in steering switch circuit changes depending on which button is pushed.

BOSE® SYSTEM

Refer to Owner's Manual for audio system operating instructions.
Power is supplied at all times

- through 15A fuse [No. 17, located in the fuse block (J/B)]
- to subwoofer terminal 6
- through 20A fuse (No. 29, located in the fuse and fusible link box)
- to audio unit terminal 6
- to BOSE speaker amp. terminal 1
- to AV switch terminal 1 (with NAVI) and
- to display control unit terminal 1 (with NAVI).

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to audio unit terminal 10
- to AV switch terminal 2 (with NAVI) and
- to display control unit terminal 10 (with NAVI).

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 12, located in the fuse block (J/B)]
- to display control unit terminal 12 (with NAVI).

Ground is supplied through the case of the audio unit.
Ground is also supplied

- to subwoofer terminal 5 and
- to BOSE speaker amp. terminal 17
- through body grounds B7 and B19 and
- to AV switch terminal 5 (with NAVI)
- to display unit terminal 1 (with NAVI) and
- to display control unit terminal 3 (with NAVI)
- through body grounds M57, M61 and M79.

Then audio signals are supplied

- through audio unit terminals 1, 2, 3, 4, 13, 14, 15 and 16
- to BOSE speaker amp. terminals 23, 24, 25, 26, 27, 28, 29 and 30.

Audio signals are amplified by the BOSE speaker amp.
The amplified audio signals are supplied

A

B

C

D

E

F

G

H

I

J

AV

L

M

AUDIO

- through BOSE speaker amp. terminals 3, 9,10,11,12, 13, 14, 15, 16 and 19
- to terminals + and - of front door speaker LH and RH
- to terminals + and - of front tweeter LH and RH
- to terminals + and - of rear door speaker LH and RH
- to terminals + and - of rear door tweeter LH and RH and
- to terminals 1 and 2 of subwoofer.

When one of steering wheel audio control switches is pushed, the resistance in steering switch circuit changes depending on which button is pushed.

Satellite Radio Tuner (Pre-wiring)

The satellite radio tuner pre-wiring allows connection of a satellite radio tuner.

Power is supplied at all times

- through 15A fuse [No. 17, located in the fuse block (J/B)]
- to satellite radio tuner pre-wiring terminal 32.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to satellite radio tuner pre-wiring terminal 36.

Ground is supplied through the case of the satellite radio tuner.

Then audio signals are supplied

- through satellite radio tuner pre-wiring terminals 21, 22, 23 and 24
- to audio unit terminals 41, 42, 43 and 44.

Satellite Radio Tuner (Factory Installed)

Power is supplied at all times

- through 15A fuse [No. 17, located in the fuse block (J/B)]
- to satellite radio tuner terminal 32.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to satellite radio tuner terminal 36.

Radio signals are supplied from the satellite radio antenna to satellite radio tuner terminal 37.

Audio signals are supplied

- through satellite radio tuner terminals 21, 22, 23 and 24
- to terminals 41, 42, 43 and 44 of audio unit.

Ground is supplied through the case of the satellite radio tuner.

SPEED SENSITIVE VOLUME SYSTEM (IF EQUIPPED)

Volume level of this system goes up and down automatically in proportion to the vehicle speed. The control level can be selected by the customer. Refer to Owner's Manual for operating instructions.

AUX IN JACK (IF EQUIPPED)


The AUX in jack allows input of audio signals to the audio unit from an auxiliary audio device. Audio signals are supplied

- from AUX in jack terminals 1 and 4
- to audio unit terminals 74 and 75.

AUDIO

Schematic BASE AND MID LEVEL SYSTEM

EKS00G5D

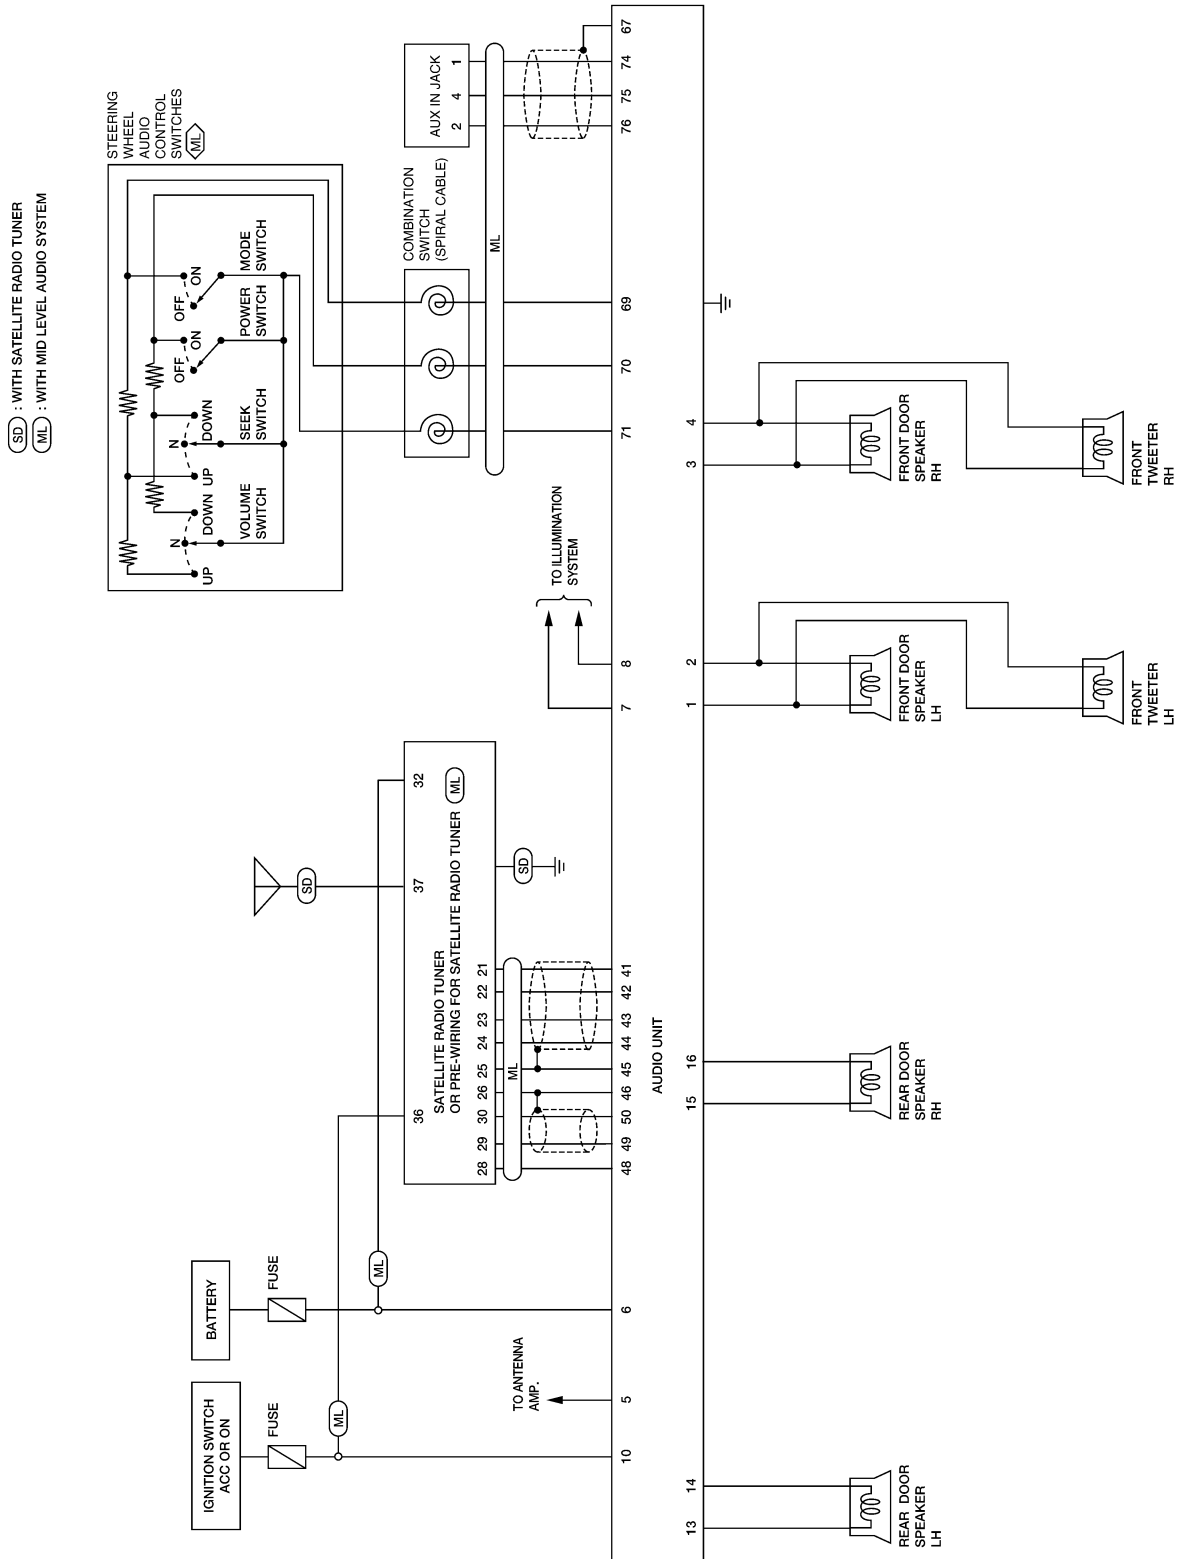


A
B
C
D
E
F
G
H
I
J
L
M

AV

AUDIO

BOSE SYSTEM (WITHOUT NAVI)


SD : WITH SATELLITE RADIO TUNER

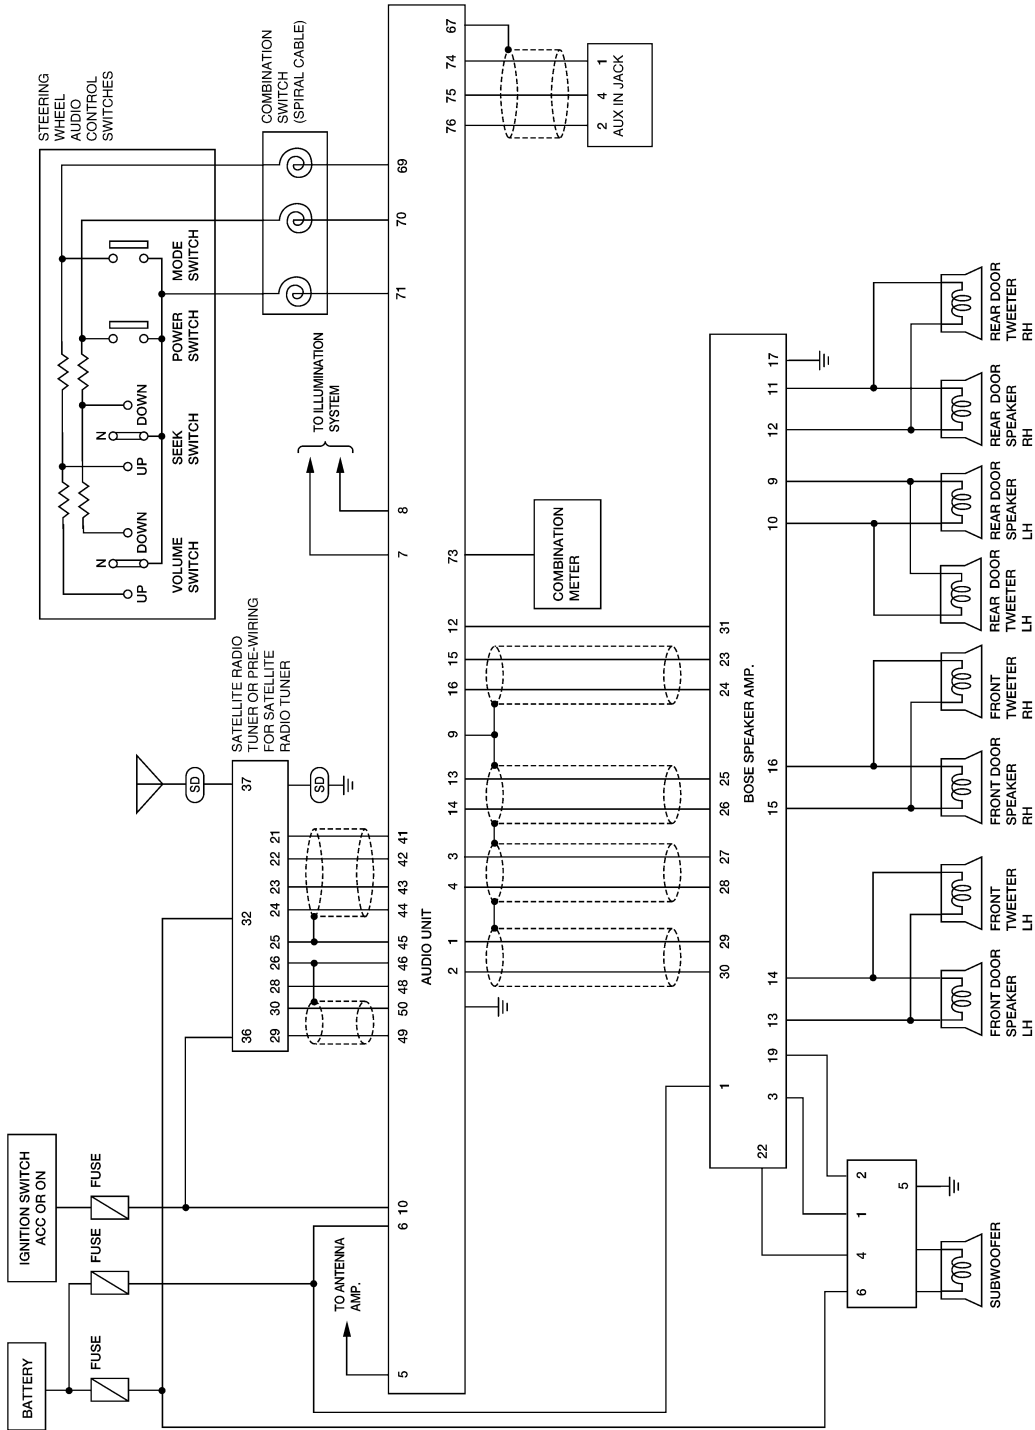

WKWA5377E

AUDIO

BOSE SYSTEM (WITH NAVI)

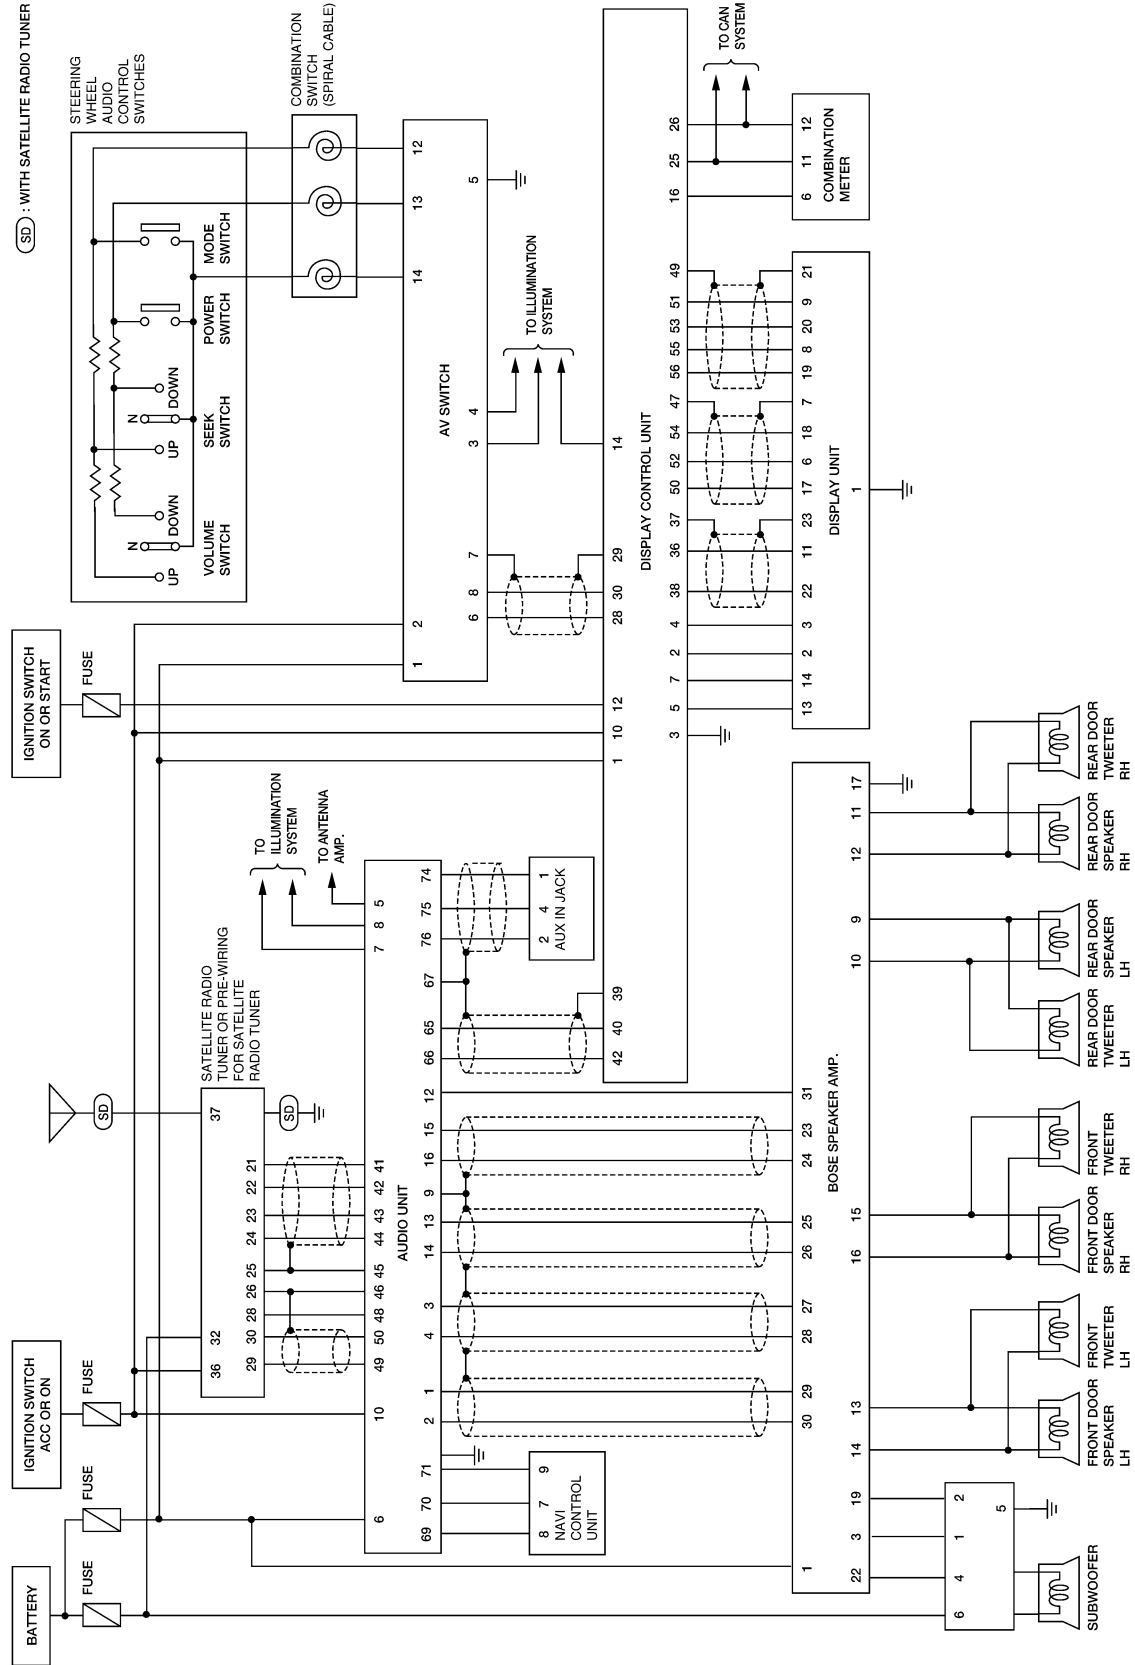

A
B
C
D
E
F
G
H
I
J
L
M


AV

WKWA5378E

AUDIO

EKS00G5E

Wiring Diagram — AUDIO — BASE AND MID LEVEL SYSTEM

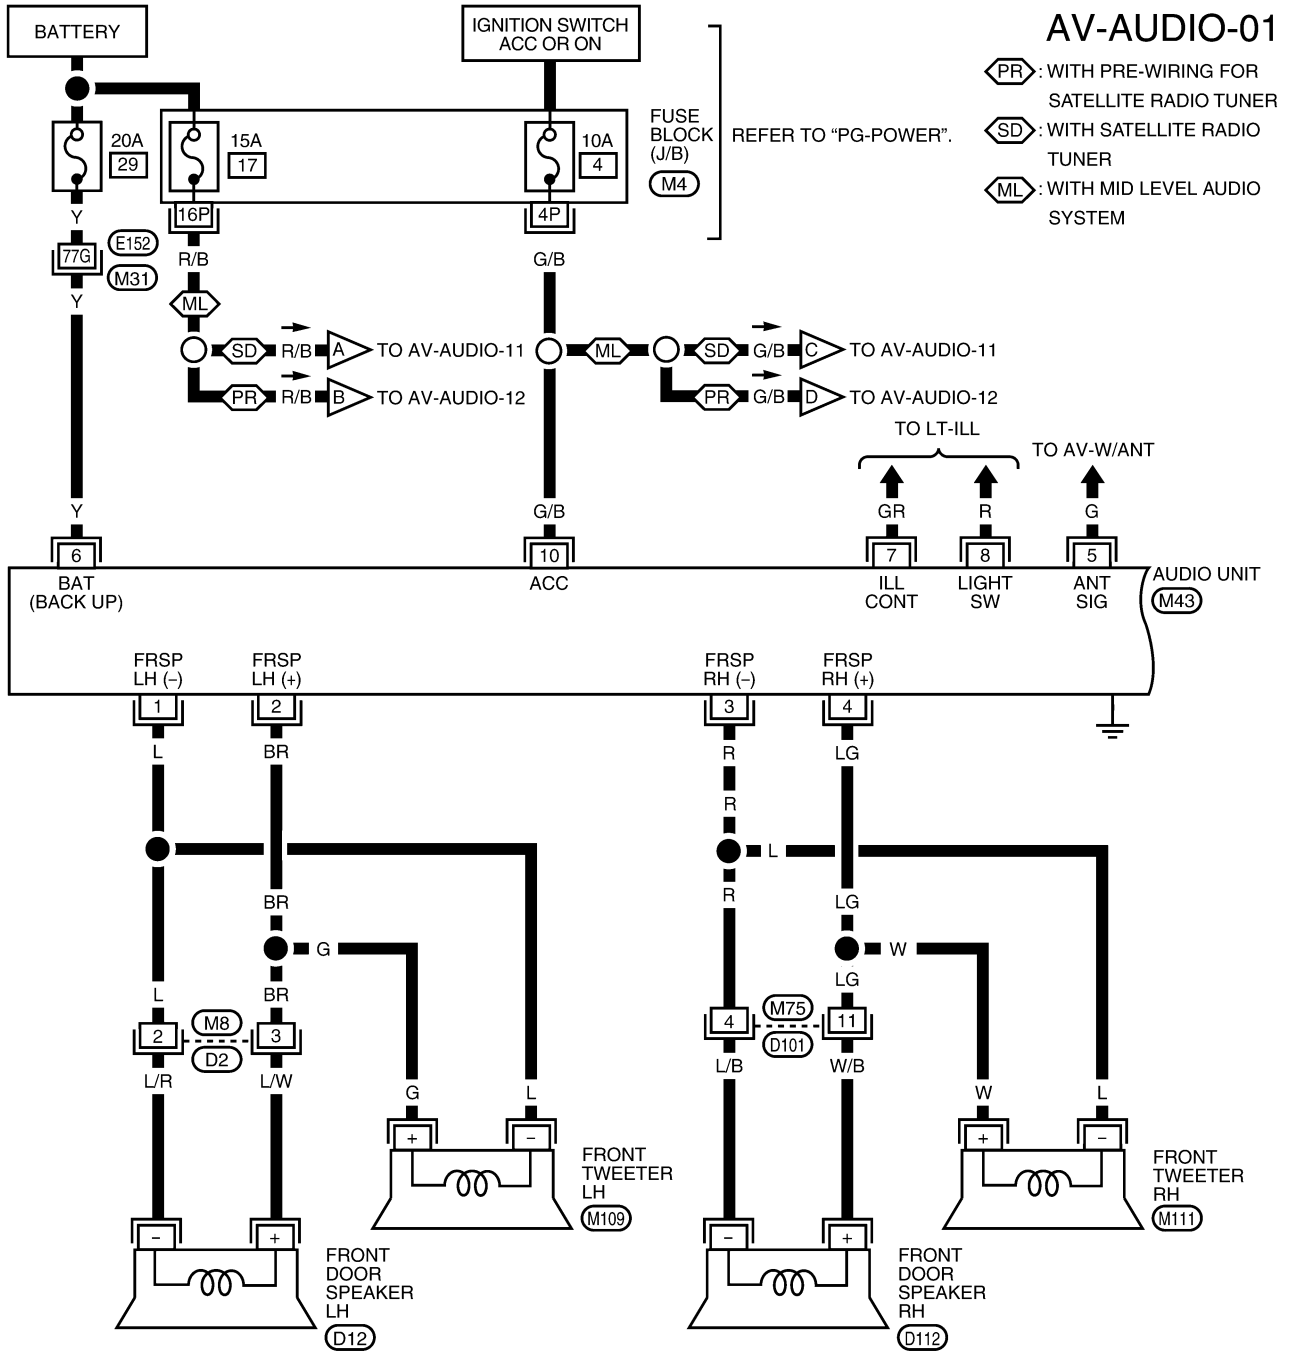

| | | | | | | | | |
|----|----|-----|-----|-----|-----|-----|-----|-----|
| 1P | 2P | 3P | 4P | 5P | 6P | 7P | | |
| 8P | 9P | 10P | 11P | 12P | 13P | 14P | 15P | 16P |

(M4)
W

| | | | | | |
|----|---|---|---|---|---|
| 10 | 8 | 4 | 2 | | |
| 9 | 7 | 6 | 5 | 3 | 1 |

(M43)
W

(M109)
+ -

(M111)
BR

(D12)
+ -

(D112)
W

(D112)
W

| | | | | | | | | |
|---|---|----|----|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | | |
| 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |

(D2)
W

| | | | | | | |
|---|---|---|---|----|----|----|
| 1 | 2 | 3 | 4 | 5 | | |
| 6 | 7 | 8 | 9 | 10 | 11 | 12 |



(D101)
W

REFER TO THE FOLLOWING.
(M31) - SUPER MULTIPLE JUNCTION (SMJ)

AUDIO

AV-AUDIO-02

ⓂL : WITH MID LEVEL
AUDIO SYSTEM

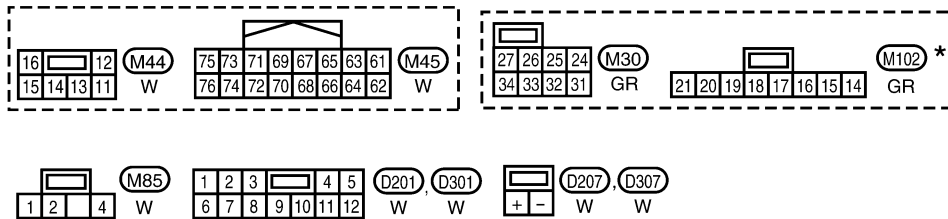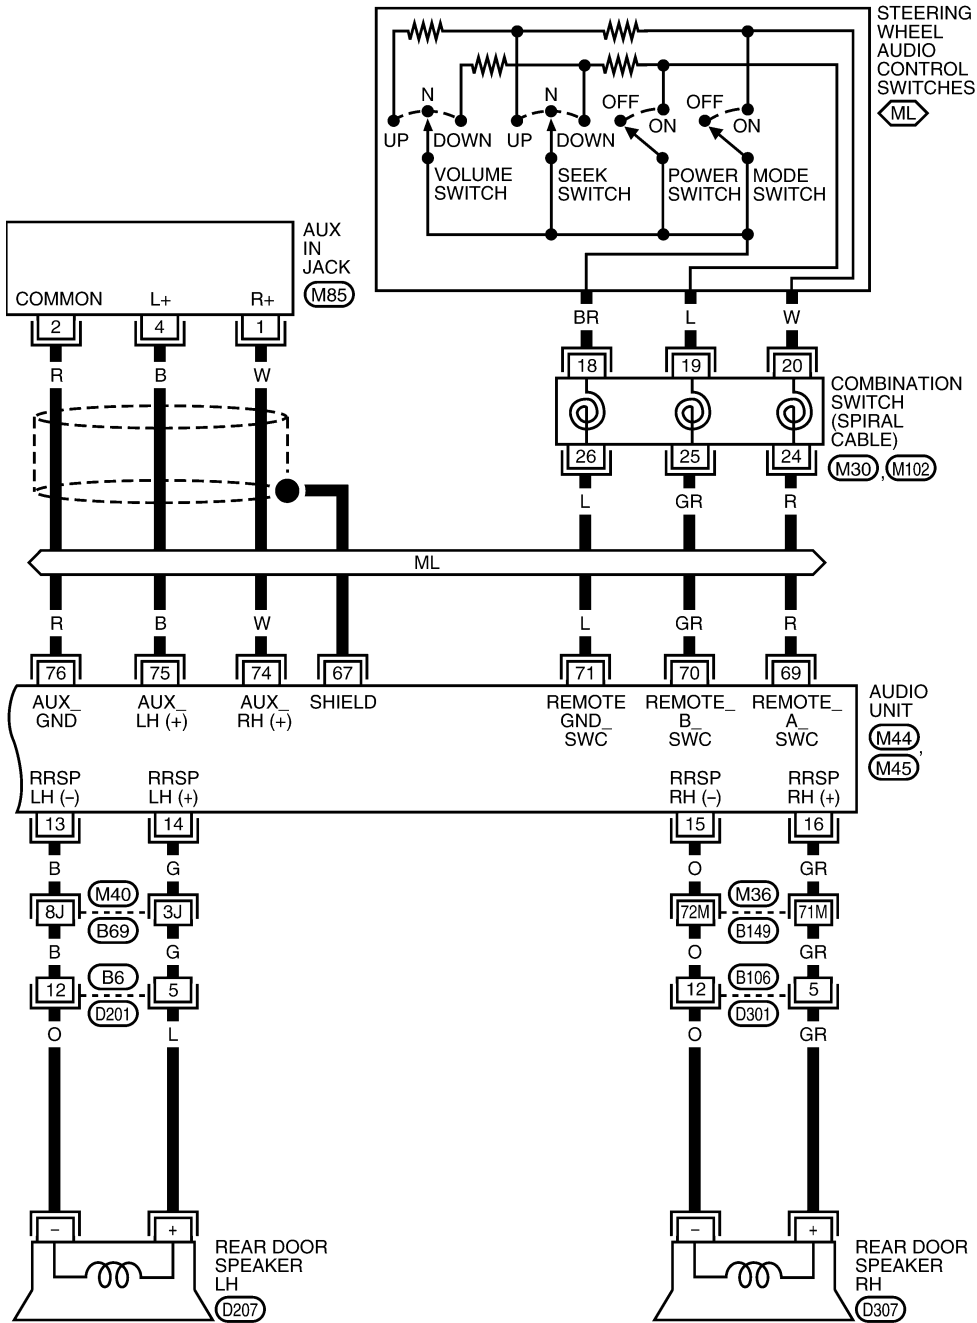




REFER TO THE FOLLOWING.
Ⓜ36, Ⓜ40 - SUPER
MULTIPLE JUNCTION (SMJ)

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.



WKWA5379E

AUDIO

BOSE SYSTEM

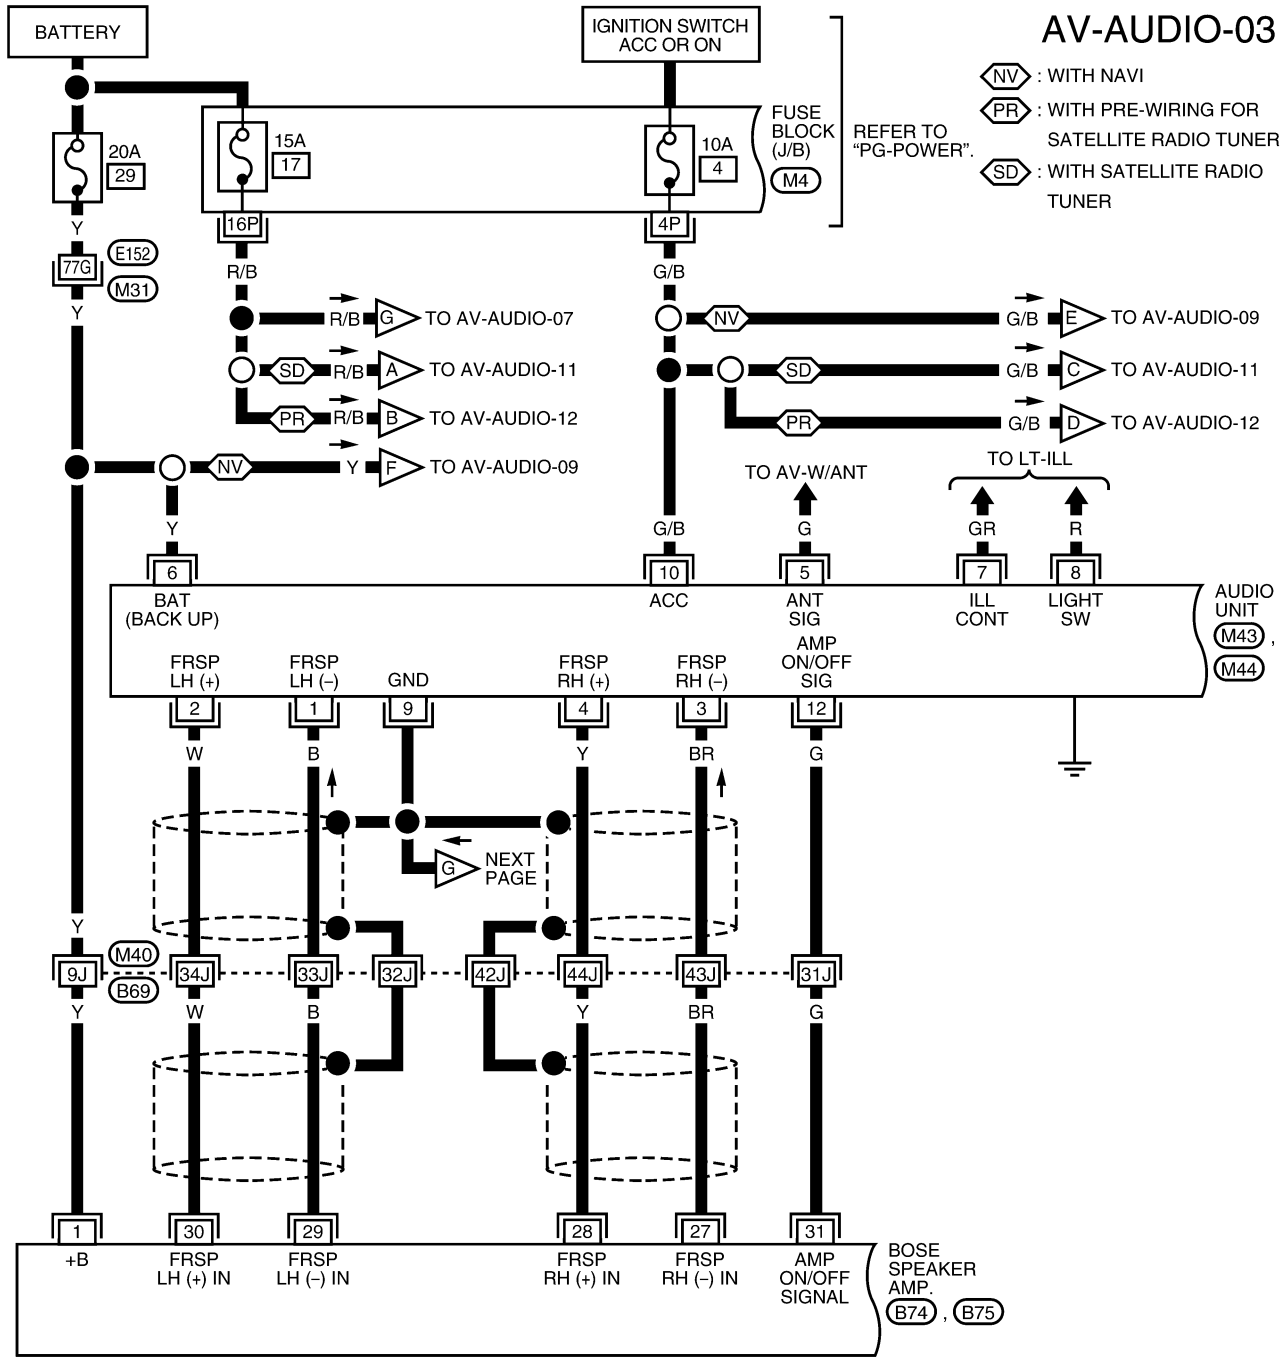


REFER TO THE FOLLOWING.
(M31), **(M40)** - SUPER MULTIPLE JUNCTION (SMJ)

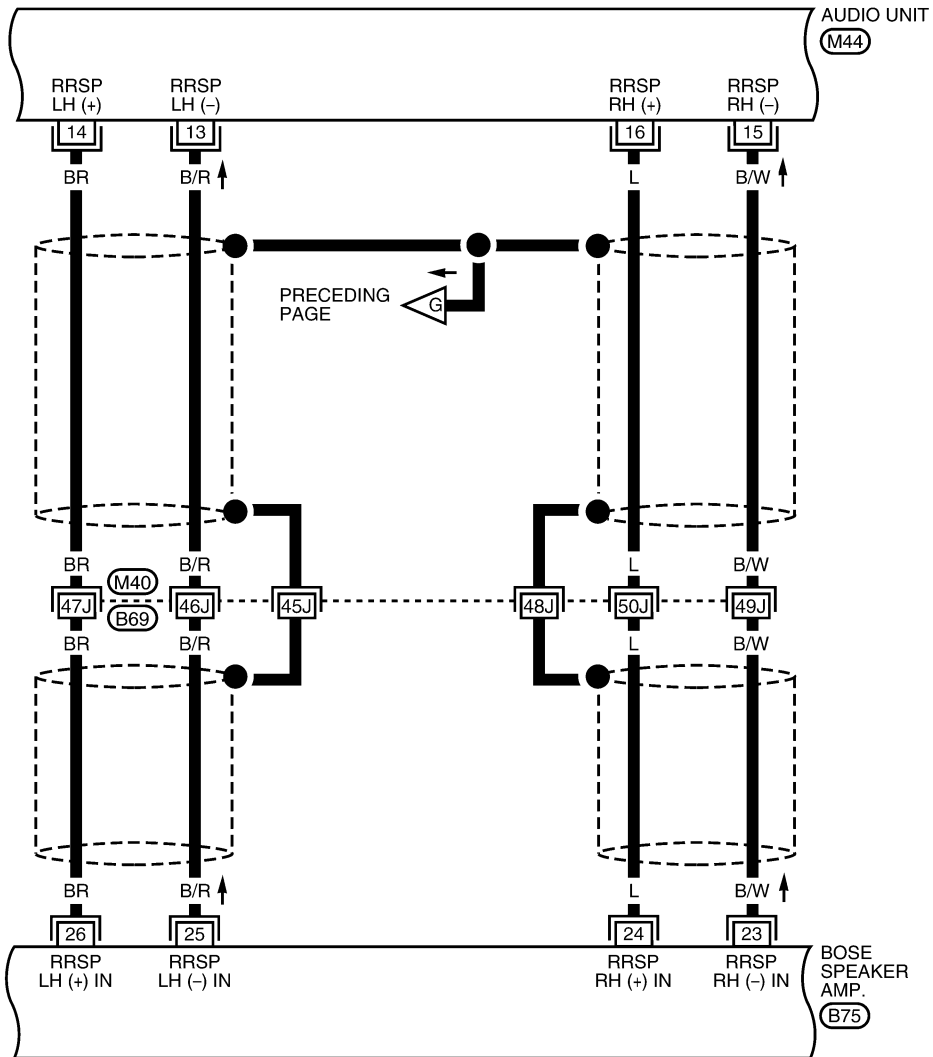

REFER TO THE FOLLOWING.
(M40) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4201E

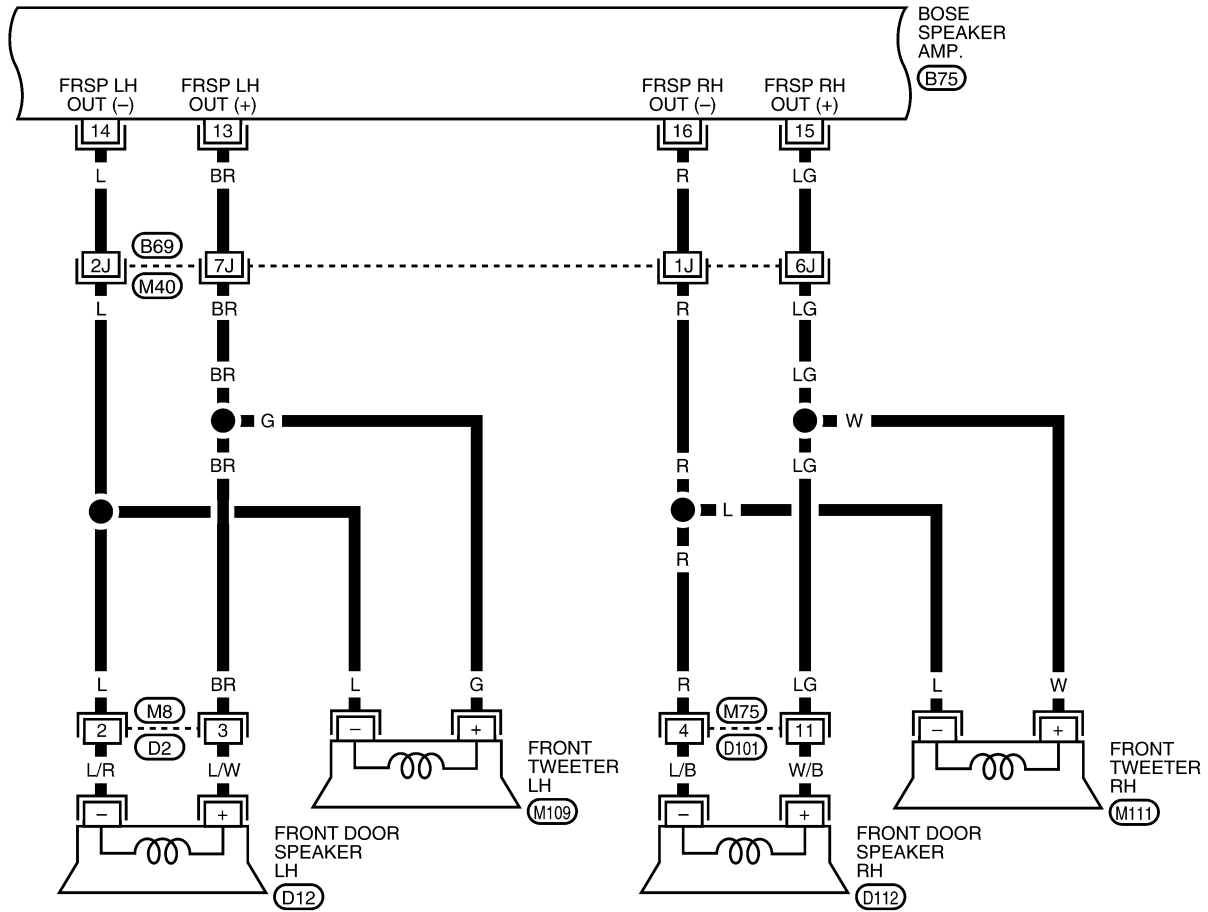

| | | | | | | |
|----|----|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| 8 | 9 | 10 | 11 | 12 | 13 | 14 |
| 15 | 16 | M8 | | W | | |

| | | | | |
|----|----|-----|---|----|
| 1 | 2 | 3 | 4 | 5 |
| 6 | 7 | 8 | 9 | 10 |
| 11 | 12 | M75 | | W |

| | |
|---|---|
| + | - |
|---|---|

| |
|-----|
| D12 |
| W |

| |
|------|
| D112 |
| W |

| | |
|---|---|
| + | - |
|---|---|

| |
|------|
| M109 |
| BR |



| |
|------|
| M111 |
| BR |

REFER TO THE FOLLOWING.
 (M40) - SUPER MULTIPLE JUNCTION (SMJ)

| | | | | | | | | | | | |
|-------|----|----|----|----|----|----|----|----|----|----|----|
| 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
| 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 |
| (B75) | | | | | | | | | | | |
| B | | | | | | | | | | | |

AUDIO

AV-AUDIO-06


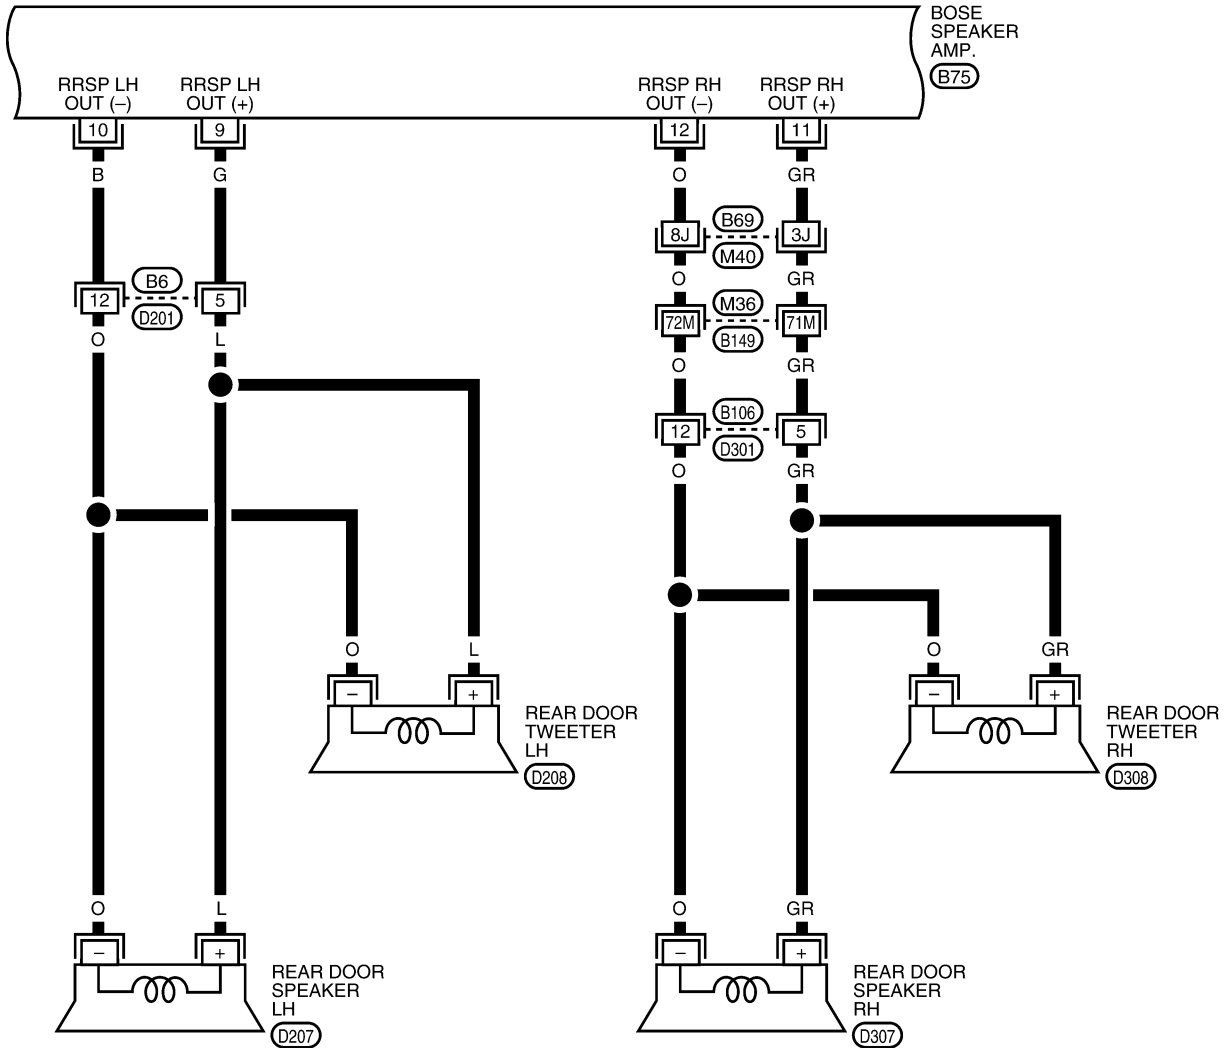


REFER TO THE FOLLOWING.
 (M36), (M40) - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA3035E

AUDIO

AV-AUDIO-07

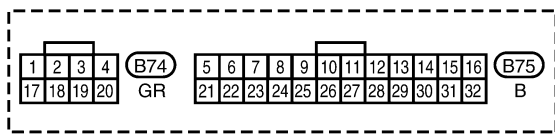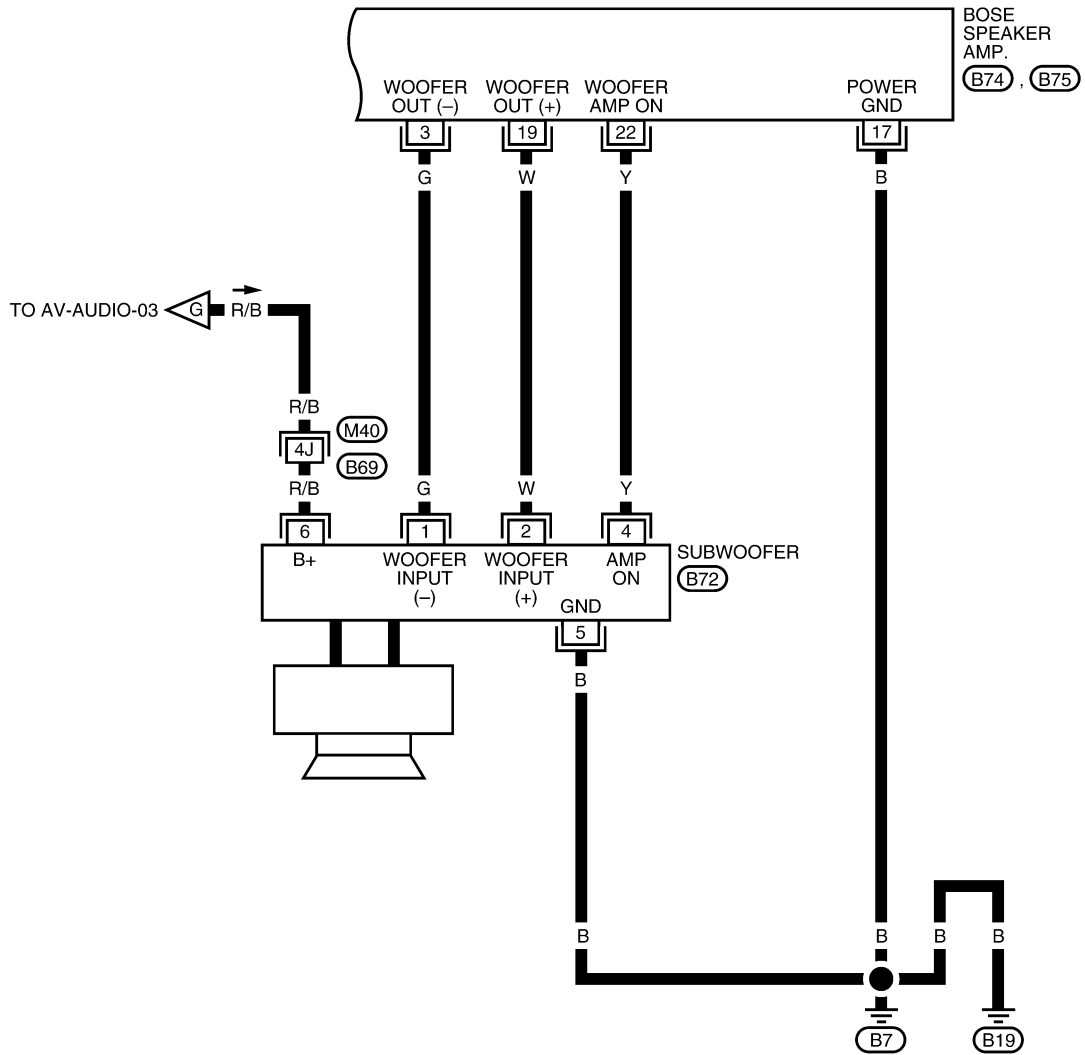



REFER TO THE FOLLOWING.
 (M40) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4203E

AUDIO

WITHOUT NAVI

AV-AUDIO-08

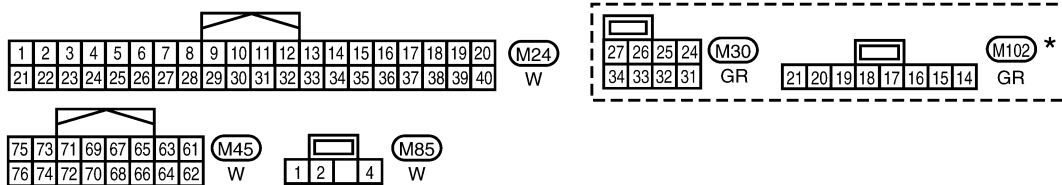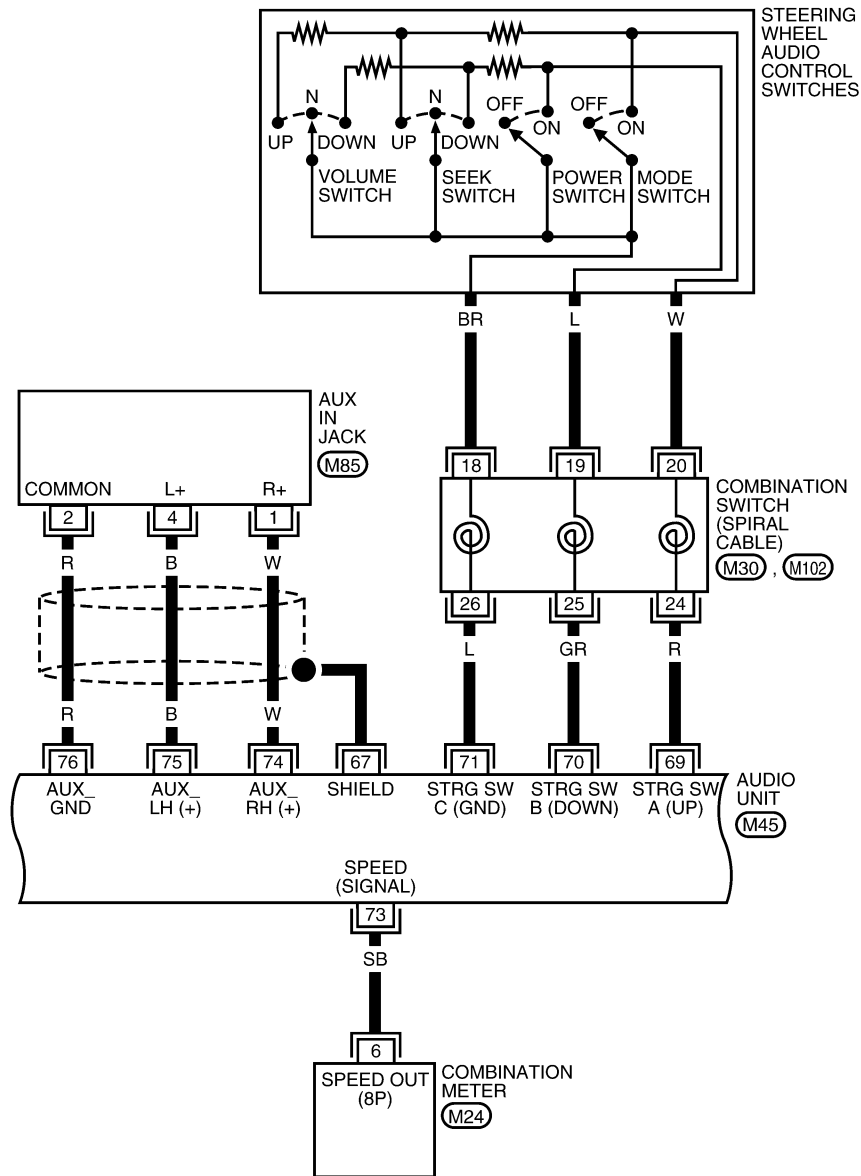



*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA5381E

AUDIO

WITH NAVI

AV-AUDIO-09


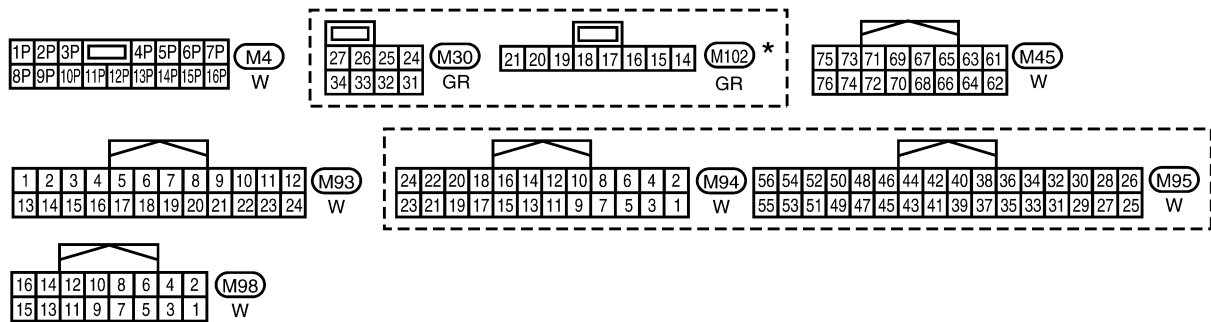
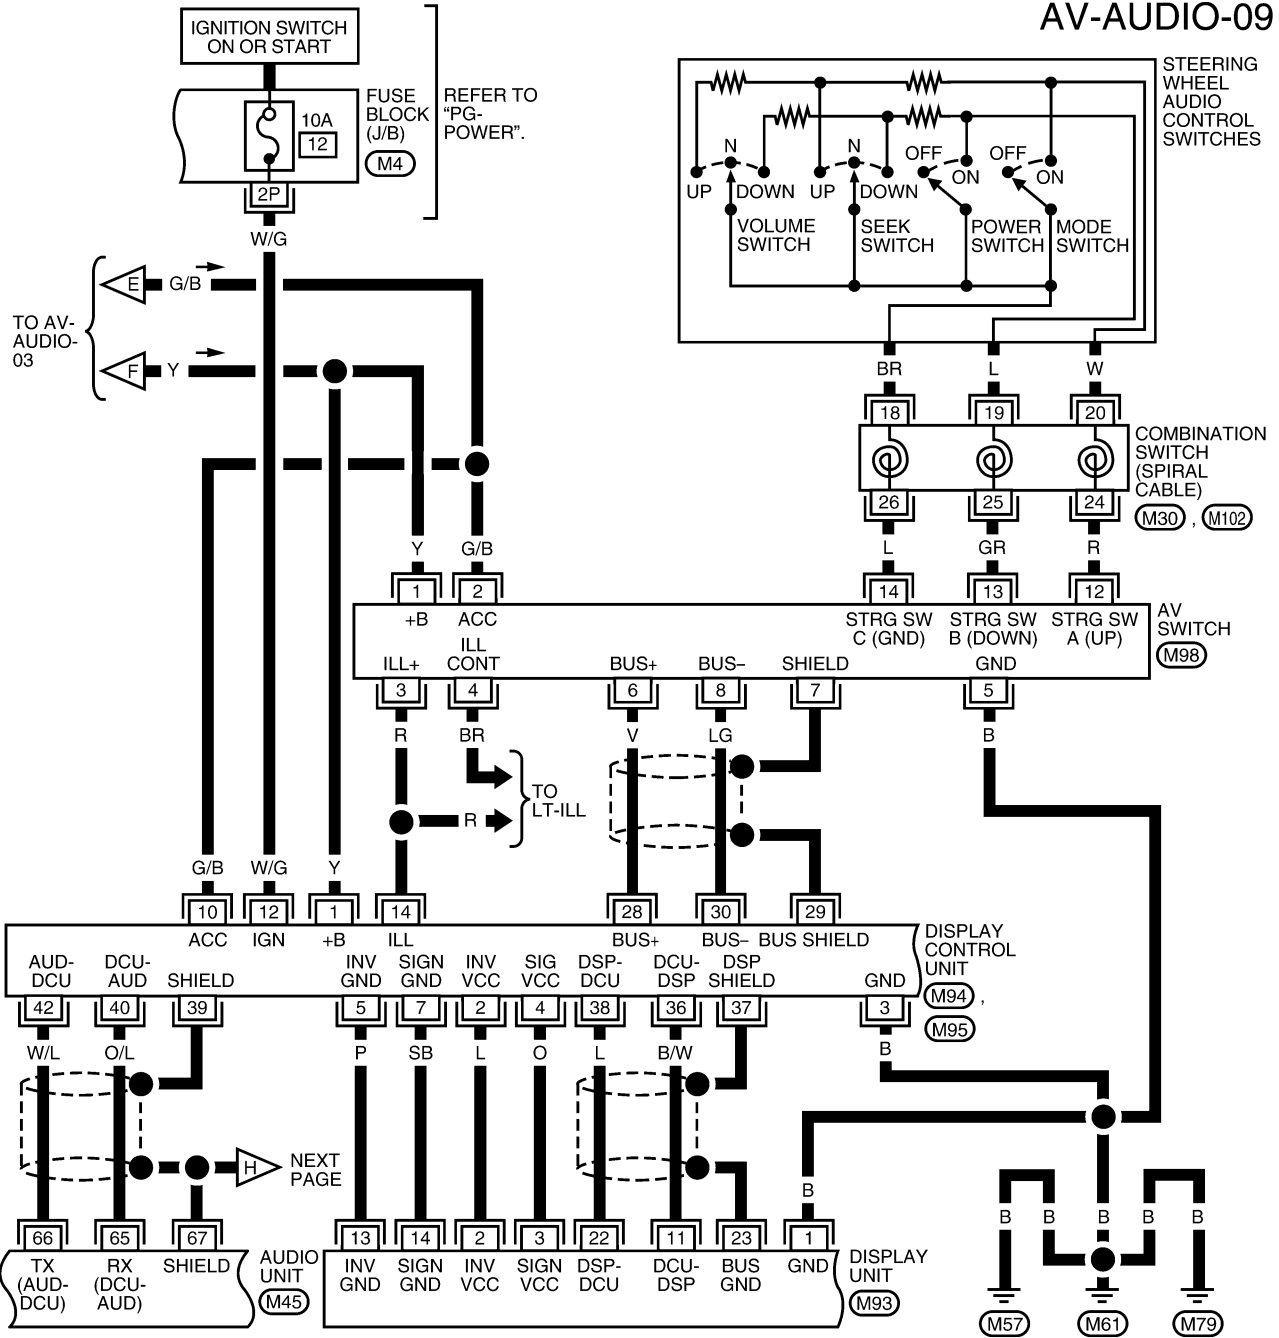


*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA5382E

AUDIO

AV-AUDIO-10


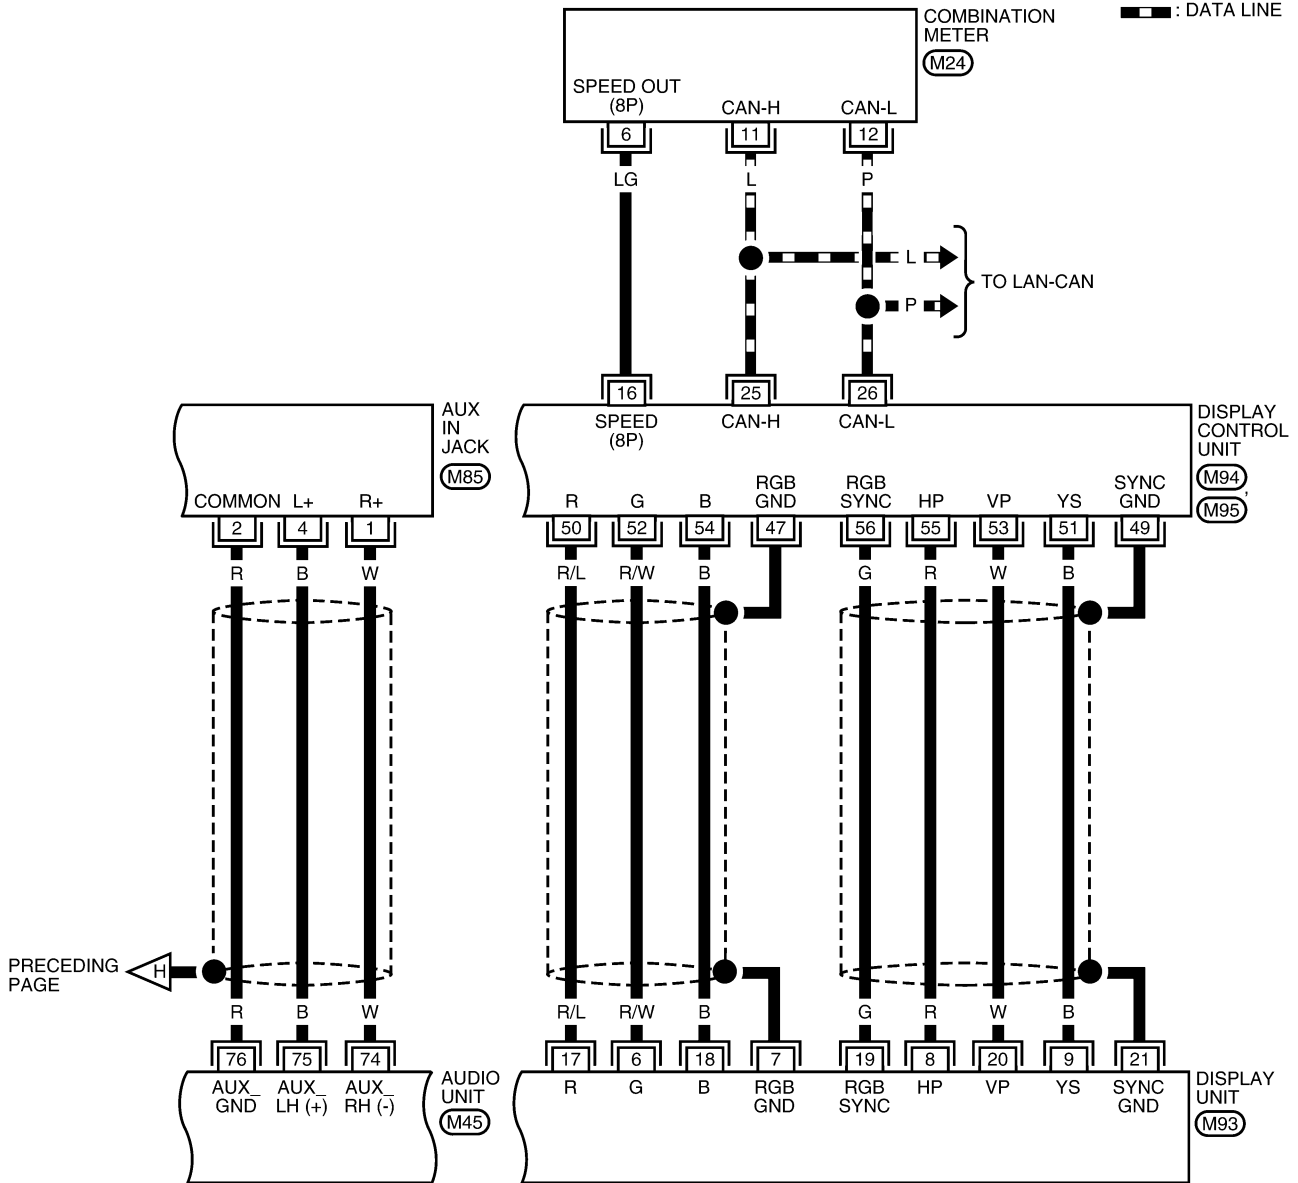


WKWA5383E

AUDIO

SATELLITE RADIO TUNER (FACTORY INSTALLED)

AV-AUDIO-11

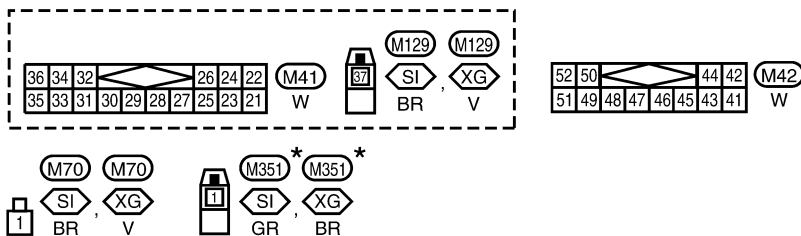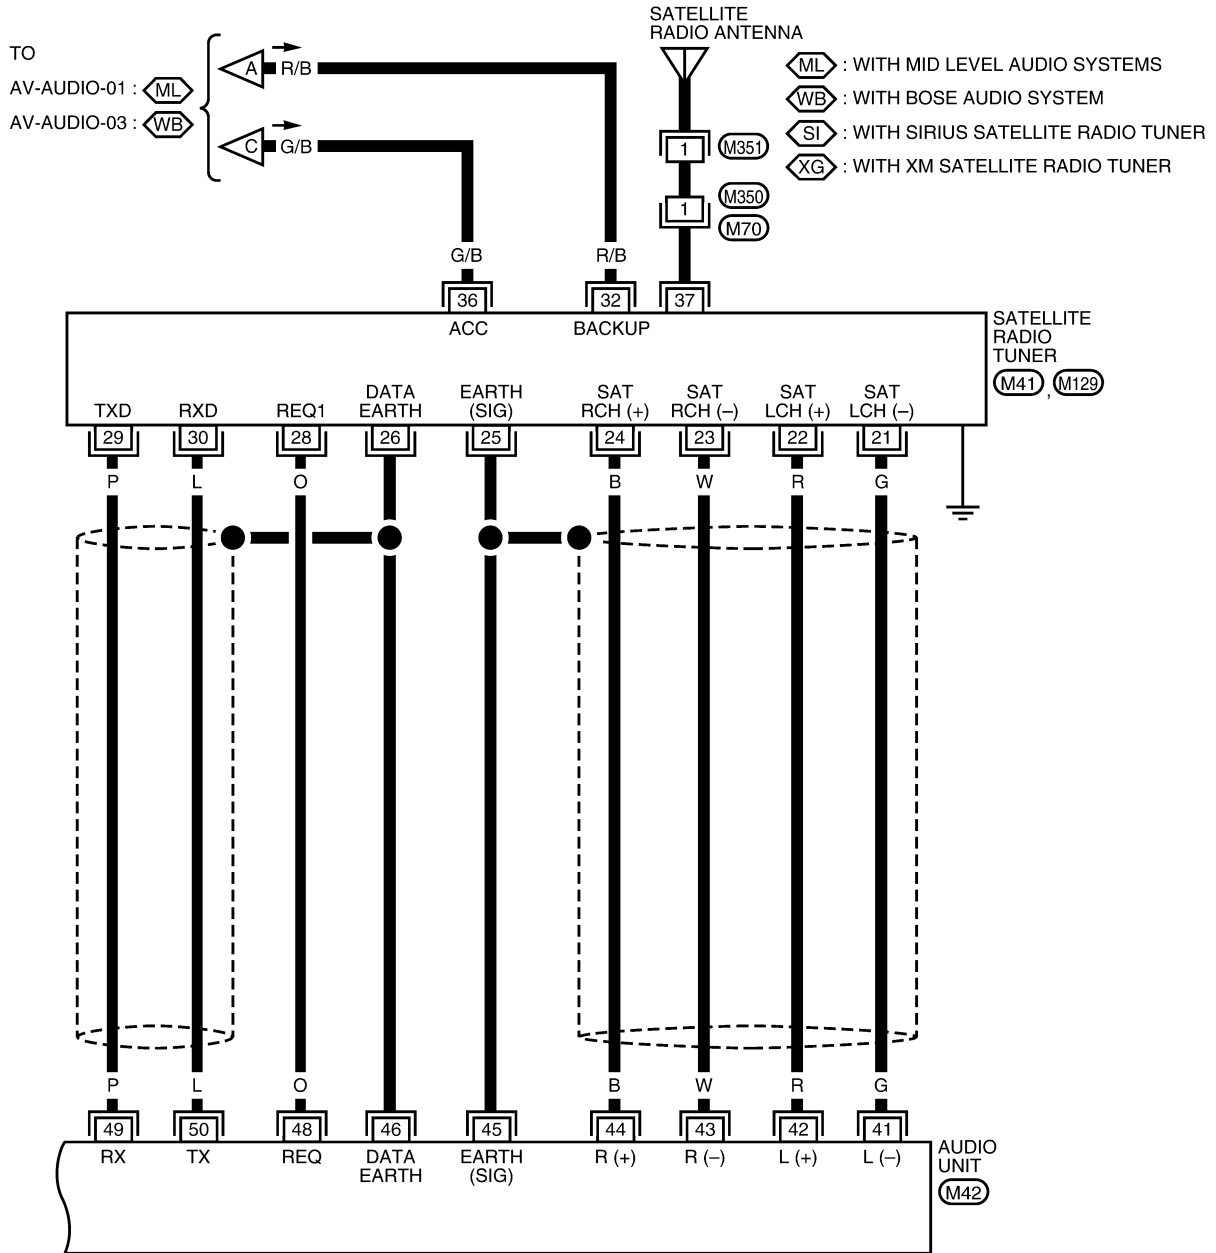



*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.



WKWA4191E

AUDIO

SATELLITE RADIO TUNER (PRE-WIRING)

AV-AUDIO-12





 : WITH MID LEVEL AUDIO SYSTEM
 : WITH BOSE AUDIO SYSTEM

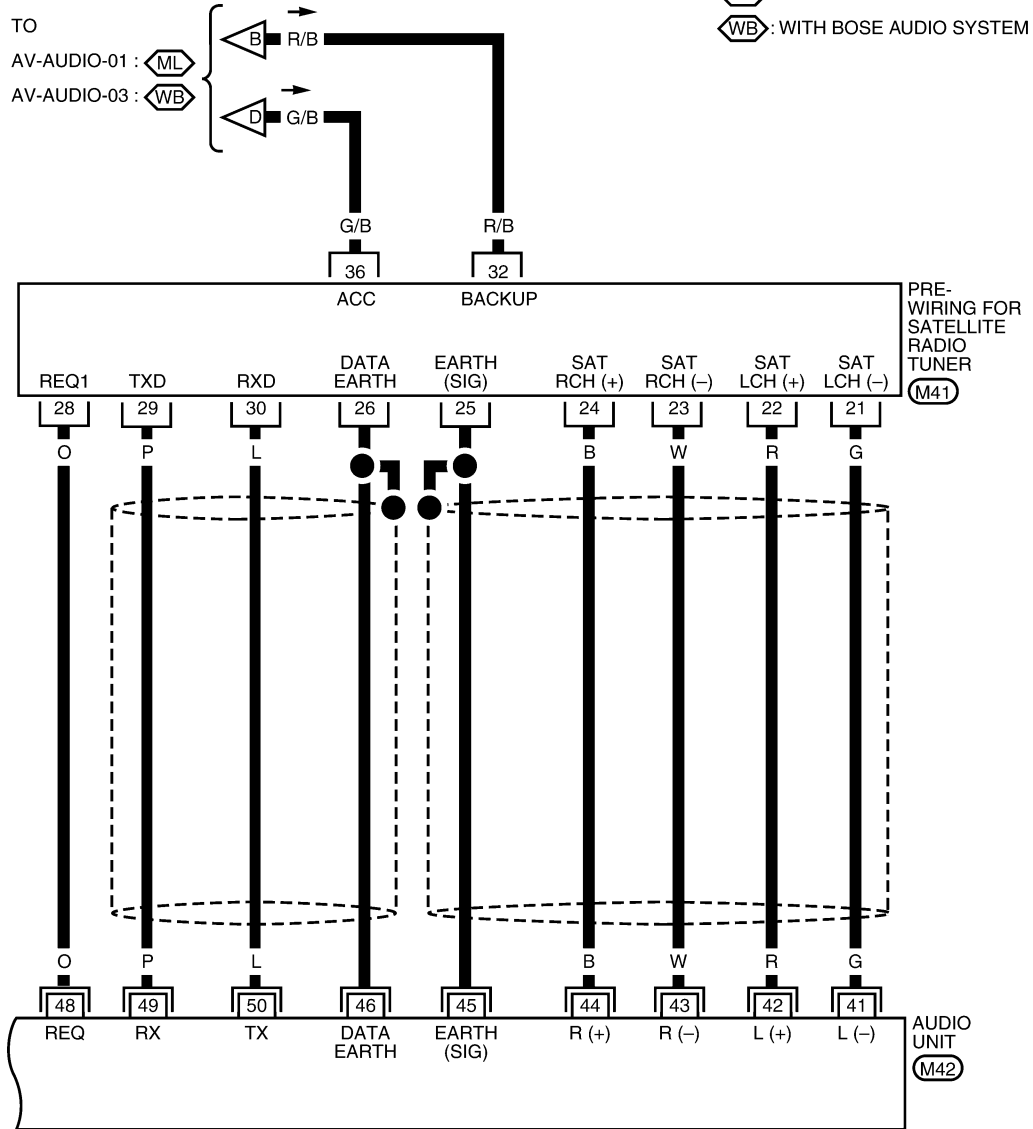



AUDIO

Terminals and Reference Values for Audio Unit (Base and Mid Level System)

EKS00G5F
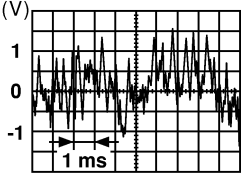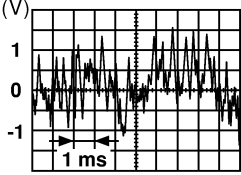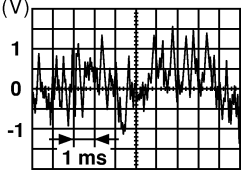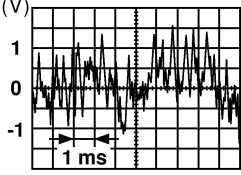
| Terminal (Wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symptom |
|--------------------------|--------|-----------------------------------|----------------------------|--------------------|---|--|---|
| + | - | | | Ignition switch | Operation | | |
| 2 (BR) | 1 (L) | Audio sound signal front LH | Output | ON | Receive audio signal |  <p style="text-align: right; font-size: small;">SKIA0177E</p> | No sound from front door speaker LH or tweeter LH. |
| 4 (LG) | 3 (R) | Audio sound signal front RH | Output | ON | Receive audio signal |  <p style="text-align: right; font-size: small;">SKIA0177E</p> | No sound from front door speaker RH or tweeter RH. |
| 5 (G) | Ground | Antenna signal | Output | ON | - | More than 10V | Poor radio reception. |
| 6 (Y) | Ground | Battery power | Input | - | - | Battery voltage | System does not work properly. |
| 7 (GR) | Ground | Illumination control signal | Input | ON | Illumination control switch is operated by lighting switch in 1st position. | Changes between 0 and 12V | Audio unit illumina- tion cannot be con- trolled. |
| 8 (R) | Ground | Illumination signal | Input | OFF | Lighting switch is in 1st posi- tion. | Battery voltage | Audio unit illumina- tion does not come on when lighting switch is in 1st posi- tion. |
| | | | | | Lighting switch is OFF. | 3V or less | |
| 10 (G/B) | Ground | ACC power | Input | ACC | Ignition switch ACC or ON | Battery voltage | System does not work properly. |
| 14 (G) | 13 (B) | Audio sound signal rear LH | Output | ON | Receive audio signal |  <p style="text-align: right; font-size: small;">SKIA0177E</p> | No sound from rear door speaker LH. |
| 16 (GR) | 15 (O) | Audio sound signal rear RH | Output | ON | Receive audio signal |  <p style="text-align: right; font-size: small;">SKIA0177E</p> | No sound from rear door speaker RH. |
| 67* | - | Shield | - | ON | - | 0V | Interference and dis- tortion heard from speakers. |

AUDIO
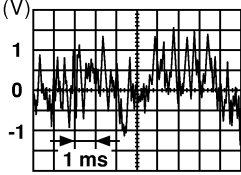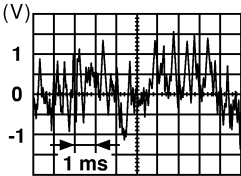
| Terminal (Wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symptom |
|--------------------------|--------|------------------------------------|----------------------------|--------------------|--|--|---|
| + | - | | | Ignition switch | Operation | | |
| 69 (R)* | Ground | Remote control A | Input | ON | Press MODE switch | 0V | Steering wheel audio controls do not func- tion. |
| | | | | | Press SEEK UP switch | 0.75V | |
| | | | | | Press VOL UP switch | 2V | |
| | | | | | Except for above | 5V | |
| 70 (GR)* | Ground | Remote control B | Input | ON | Press POWER switch | 0V | Steering wheel audio controls do not func- tion. |
| | | | | | Press SEEK DOWN switch | 0.75V | |
| | | | | | Press VOL DOWN switch | 2V | |
| | | | | | Except for above | 5V | |
| 71 (L)* | - | Remote control ground | - | - | - | - | Steering wheel audio controls do not func- tion. |
| 74 (W)* | Ground | Auxiliary audio input RH (+) | Input | ON | Receive audio signal (AUX input) |  <small>SKIA0177E</small> | No sound from auxil- iary audio source right channel. |
| 75 (B)* | Ground | Auxiliary audio input LH (+) | Input | ON | Receive audio signal (AUX input) |  <small>SKIA0177E</small> | No sound from auxil- iary audio source left channel. |
| 76 (R)* | - | Common (-) | - | ON | - | 0V | Interference and dis- tortion heard from speakers. |

*: With mid level system





A
B
C
D
E
F
G
H
I
J
L
M

AV






AUDIO

Terminals and Reference Values for Audio Unit (BOSE System)

EKS00G5G
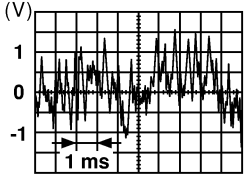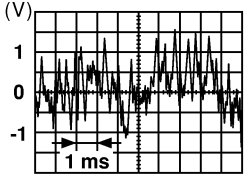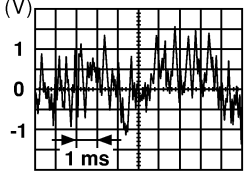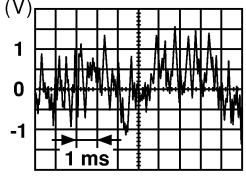
| Terminal (Wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symp- tom |
|--------------------------|----------|-------------------------------------|----------------------------|--------------------|---|---|---|
| + | - | | | Ignition switch | Operation | | |
| 2 (W) | 1 (B) | Audio sound signal front LH | Output | ON | Receive audio signal |  SKIA0177E | No sound from front door speaker LH or tweeter LH. |
| 4 (Y) | 3 (BR) | Audio sound signal front RH | Output | ON | Receive audio signal |  SKIA0177E | No sound from front door speaker RH or tweeter RH. |
| 5 (G) | Ground | Antenna signal | Output | ON | - | More than 10V | Poor radio recep- tion. |
| 6 (Y) | Ground | Battery power | Input | - | - | Battery voltage | System does not work properly. |
| 7 (GR) | Ground | Illumination control sig- nal | Input | ON | Illumination con- trol switch is operated by lighting switch in 1st position. | Changes between 0 and 12V | Audio unit illumina- tion cannot be con- trolled. |
| 8 (R) | Ground | Illumination signal | Input | OFF | Lighting switch is in 1st posi- tion. | Battery voltage | Audio unit illumina- tion does not come on when lighting switch is in 1st posi- tion. |
| 9 | - | Shield ground | - | - | - | - | - |
| 10 (G/B) | Ground | ACC power | Input | ACC | - | Battery voltage | System does not work properly. |
| 12 (G) | Ground | Amp. ON signal | Output | ON | - | More than 6.5V | Amp. does not work properly. |
| 14 (BR) | 13 (B/R) | Audio sound signal rear LH | Output | ON | Receive audio signal |  SKIA0177E | No sound from rear door speaker LH or rear door tweeter LH. |
| 16 (L) | 15 (B/W) | Audio sound signal rear RH | Output | ON | Receive audio signal |  SKIA0177E | No sound from rear door speaker RH or rear door tweeter RH. |


AUDIO
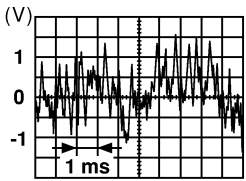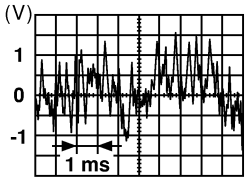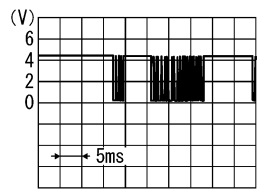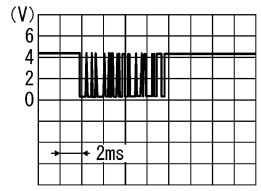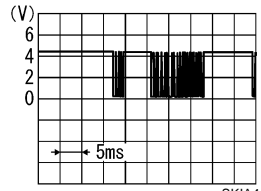
| Terminal (Wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symp- tom |
|--------------------------|--------|--|----------------------------|--------------------|-------------------------|---|---|
| + | - | | | Ignition switch | Operation | | |
| 42 (R) | 41 (G) | Audio left channel sound sig- nal from sat- ellite radio tuner | Input | ON | Receive audio signal |  SKIA0177E | No sound from sat- ellite radio tuner left channel. |
| 44 (B) | 43 (W) | Audio right channel sound sig- nal from sat- ellite radio tuner | Input | ON | Receive audio signal |  SKIA0177E | No sound from sat- ellite radio tuner right channel. |
| 45 | - | Shield ground (audio sig- nal) | - | - | - | - | - |
| 46 | - | Shield ground (data) | - | - | - | - | - |
| 48 (O) | Ground | Satellite radio tuner request to audio unit | Input | ON | Turn audio unit ON | 5V | Satellite radio tuner does not operate properly. |
| 49 (P) | Ground | Audio RX | Input | ON | Operate audio volume |  SKIA4403E | Satellite radio tuner audio information does not display properly. |
| 50 (L) | Ground | Audio TX | Output | ON | Operate audio volume |  SKIA4402E | Satellite radio tuner audio information does not display properly. |
| 65 (O/L)** | Ground | Audio RX | Input | ON | Operate audio volume |  SKIA4403E | Audio does not operate properly. |

A
B
C
D
E
F
G
H
I
J
L
M

AV

AUDIO

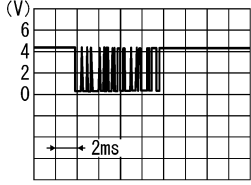
| Terminal (Wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symp- tom |
|--------------------------|--------|------------------------------|----------------------------|--------------------|---------------------------|--|--|
| + | - | | | Ignition switch | Operation | | |
| 66 (W/L)** | Ground | Audio TX | Output | ON | Operate audio volume |  | Audio does not operate properly. |
| 67** | - | Shield | - | ON | - | 0V | Interference and distortion heard from speakers. |
| 69 (R)* | Ground | Remote control A | Input | ON | Press MODE switch | 0V | Steering wheel audio controls do not function. |
| | | | | | Press SEEK UP switch | 0.75V | |
| | | | | | Press VOL UP switch | 2V | |
| | | | | | Except for above | 5V | |
| 70 (GR)* | Ground | Remote control B | Input | ON | Press POWER switch | 0V | Steering wheel audio controls do not function. |
| | | | | | Press SEEK DOWN switch | 0.75V | |
| | | | | | Press VOL DOWN switch | 2V | |
| | | | | | Except for above | 5V | |
| 71 (L)* | - | Remote control ground | - | - | - | - | Steering wheel audio controls do not function. |
| 73 (SB) | Ground | Vehicle speed sig- nal | Input | ON | - | Refer to AV-8, "SPEED SENSITIVE VOLUME SYSTEM (IF EQUIPPED)" . | Speed sensitive volume inoperative. |

*: Without NAVI.







** : With NAVI.

Terminals and Reference Values for BOSE Speaker Amp.

EKS00G5H
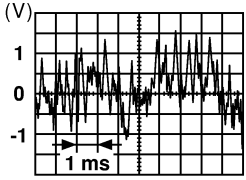
| Terminal (wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symptom |
|--------------------------|--------|--|----------------------------|--------------------|-------------------------|--|--|
| + | - | | | Ignition switch | Operation | | |
| 1 (Y) | Ground | Battery power | Input | - | - | Battery voltage | System does not work properly. |
| 9 (G) | 10 (B) | Rear door speaker LH and rear door tweeter LH | Output | ON | Receive audio signal |  | No sound from rear door speaker LH or rear door tweeter LH. |



AUDIO
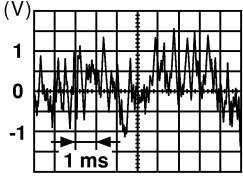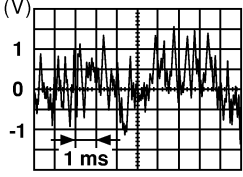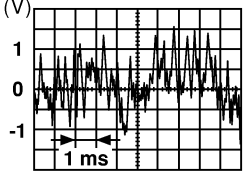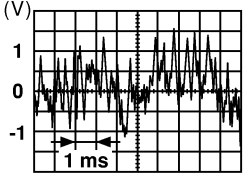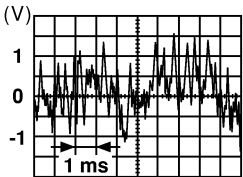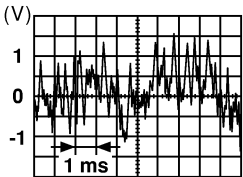
| Terminal (wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symptom |
|--------------------------|----------|---|----------------------------|--------------------|----------------------|---|---|
| + | - | | | Ignition switch | Operation | | |
| 11 (GR) | 12 (O) | Rear door speaker RH and rear door tweeter RH | Output | ON | Receive audio signal |  SKIA0177E | No sound from rear door speaker RH or rear door tweeter RH. |
| 13 (BR) | 14 (L) | Front door speaker LH and front tweeter LH | Output | ON | Receive audio signal |  SKIA0177E | No sound from front door speaker LH or front tweeter LH. |
| 15 (LG) | 16 (R) | Front door speaker RH and front tweeter RH | Output | ON | Receive audio signal |  SKIA0177E | No sound from front door speaker RH or front tweeter RH. |
| 17 (B) | Ground | Ground | - | ON | - | - | - |
| 19 (W) | 3 (G) | Subwoofer | Output | ON | Receive audio signal |  SKIA0177E | No sound from subwoofer. |
| 22 (Y) | Ground | Subwoofer ON signal | Output | ON | - | More than 6.5V | Subwoofer does not work properly. |
| 24 (L) | 23 (B/W) | Audio sound signal rear RH | Input | ON | Receive audio signal |  SKIA0177E | No sound from rear door speaker RH or rear door tweeter RH. |
| 26 (BR) | 25 (B/R) | Audio sound signal rear LH | Input | ON | Receive audio signal |  SKIA0177E | No sound from rear door speaker LH or rear door tweeter LH. |

A
B
C
D
E
F
G
H
I
J
K
L
M

AV



AUDIO
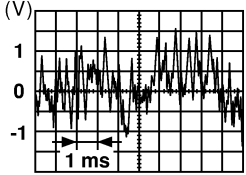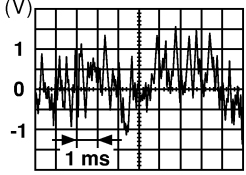
| Terminal (wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symptom |
|--------------------------|---------|--------------------------------|----------------------------|--------------------|-------------------------|--|---|
| + | - | | | Ignition switch | Operation | | |
| 28 (Y) | 27 (BR) | Audio sound signal front RH | Input | ON | Receive audio signal |  <p style="text-align: right; font-size: small;">SKIA0177E</p> | No sound from front door speaker RH or front tweeter RH. |
| 30 (W) | 29 (B) | Audio sound signal front LH | Input | ON | Receive audio signal |  <p style="text-align: right; font-size: small;">SKIA0177E</p> | No sound from front door speaker LH or front tweeter LH. |
| 31 (G) | Ground | Amp. ON sig- nal | Input | ON | - | More than 6.5V | System does not work properly. |

AUDIO

Terminals and Reference Values for AV Switch

EKS00G5I
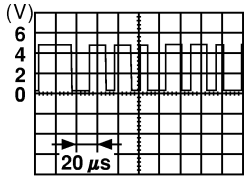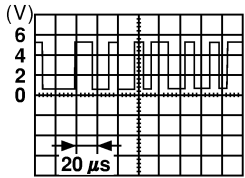
| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|--------|-----------------------------|----------------------------|--------------------|---|--|--|
| + | - | | | Ignition switch | Operation | | |
| 1 (Y) | Ground | Battery power | Input | - | - | Battery voltage | System does not work properly. |
| 2 (G/B) | Ground | ACC power | Input | ACC | - | Battery voltage | System does not work properly. |
| 3 (R) | Ground | Illumination signal | Input | OFF | Lighting switch is ON (position 1). | Battery voltage | AV switch illumination does not come on when lighting switch is ON (position 1). |
| | | | | | Turn lighting switch OFF. | Approx. 3.0V or less | |
| 4 (BR) | Ground | Illumination control signal | Input | ON | Illumination control switch is operated by lighting switch in 1st position. | Changes between 0 and 12V. | AV switch illumination cannot be controlled. |
| 5 (B) | Ground | Ground | - | ON | - | 0V | - |
| 6 (V) | Ground | Communication signal (+) | Input/output | ON | - |  <p style="text-align: right; font-size: small;">SKIA0175E</p> | System does not work properly. |
| 7 | - | Shield ground | - | - | - | - | - |
| 8 (LG) | Ground | Communication signal (-) | Input/output | ON | - |  <p style="text-align: right; font-size: small;">SKIA0176E</p> | System does not work properly. |
| 12 (R) | Ground | Remote control A | Input | ON | Press MODE switch | 0V | Steering wheel audio controls do not function. |
| | | | | | Press SEEK UP switch | 0.75V | |
| | | | | | Press VOL UP switch | 2V | |
| | | | | | Except for above | 5V | |
| 13 (GR) | Ground | Remote control B | Input | ON | Press POWER switch | 0V | Steering wheel audio controls do not function. |
| | | | | | Press SEEK DOWN switch | 0.75V | |
| | | | | | Press VOL DOWN switch | 2V | |
| | | | | | Except for above | 5V | |
| 14 (L) | - | Remote control ground | - | - | - | - | Steering wheel audio controls do not function. |






A
B
C
D
E
F
G
H
I
J
L
M

AV

AUDIO

Terminals and Reference Values for Satellite Radio Tuner

EKS00HK7
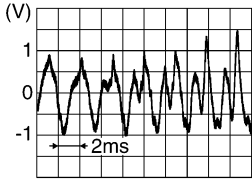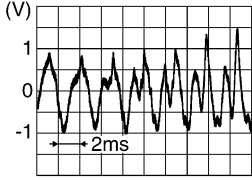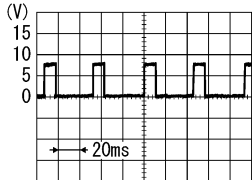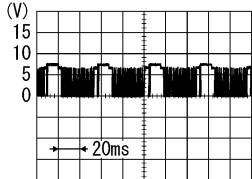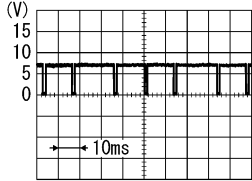
| Terminal (Wire color) | | Item | Signal input/ output | Condition | | Voltage (approx.) |
|--------------------------|--------|-------------------------------------|----------------------------|--------------------|---------------------------------|---|
| + | - | | | Ignition switch | Operation | |
| 22 (R) | 21 (G) | Audio signal LH | Output | ON | Receive audio signal. |  <p style="text-align: right; font-size: small;">SKIB3609E</p> |
| 24 (B) | 23 (W) | Audio signal RH | Output | ON | Receive audio signal. |  <p style="text-align: right; font-size: small;">SKIB3609E</p> |
| 25 | - | Shield | - | - | - | - |
| 26 | | | | ON | | Approx. 0 V |
| 28 (O) | Ground | REQ1 (SAT-AUDIO) | Output | ON | Set to the satellite radio mode |  <p style="text-align: right; font-size: small;">SKIB3825E</p> |
| 29 (P) | Ground | Communication signal (SAT-AUDIO) | Output | ON | Set to the satellite radio mode |  <p style="text-align: right; font-size: small;">SKIB3824E</p> |
| 30 (L) | Ground | Communication signal (AUDIO-SAT) | Input | ON | Set to the satellite radio mode |  <p style="text-align: right; font-size: small;">SKIB3826E</p> |
| 32 (R/B) | Ground | Battery power supply | Input | OFF | - | Battery voltage |
| 36 (G/B) | | ACC power supply | | ACC | | |
| 37 | - | Antenna signal | | - | - | - |

AUDIO


EKS00G5J

AV Switch Self-Diagnosis Function

It can check ON/OFF operation of each switch in the AV switch (with NAVI) or audio unit (without NAVI) and diagnose the input signals from the steering switch.

STARTING THE SELF-DIAGNOSIS MODE (MID LEVEL SYSTEM)

1. Turn ignition switch from OFF to ACC.
2. Press and hold the "DISP/CLOCK" switch and turn the volume control dial clockwise or counterclockwise for 30 clicks or more.

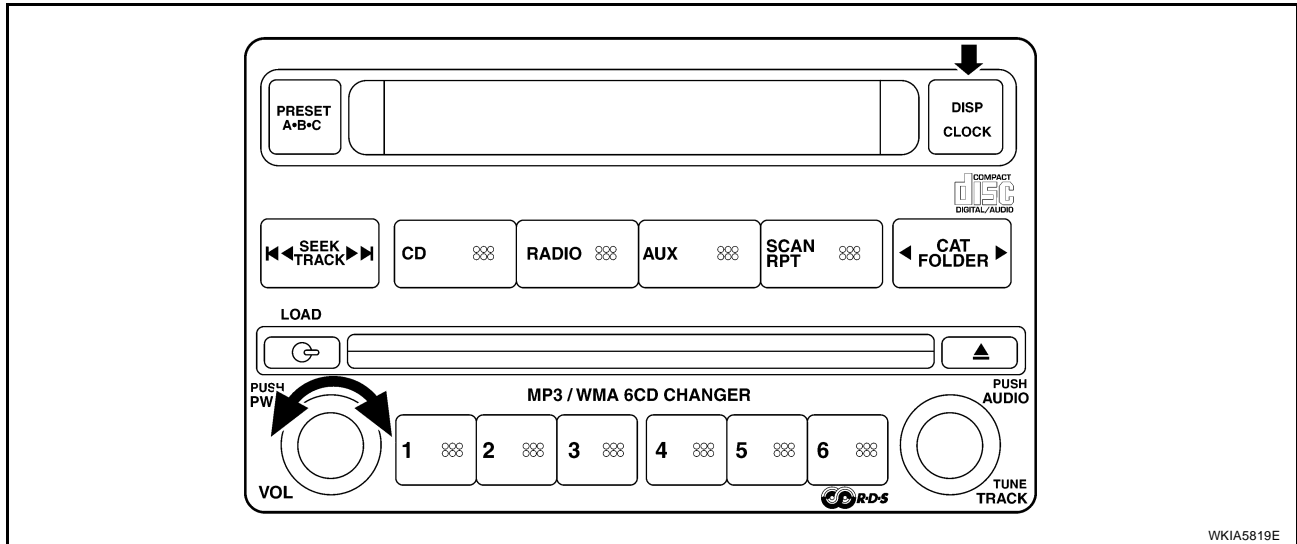

Then the self-diagnosis operates. A single beep indicates self-diagnosis mode is active.

3. Initially, all display segments will be illuminated.
4. Press each switch. When each switch is pressed, its name and communication code will be displayed.

NOTE:


CD player LOAD and EJECT buttons are not included in this test and will not change the display when pressed.

STARTING THE SELF-DIAGNOSIS MODE (BOSE SYSTEM WITH NAVI)

1. Turn ignition switch from OFF to ACC.
2. Within 10 seconds press and hold the switches "SCAN/RPT" and "DISP" simultaneously for 3 seconds. Then the self-diagnosis operates. A single beep indicates self-diagnosis mode is active.
3. Press each switch and listen for beep.

NOTE:

CD player LOAD and EJECT buttons are not included in this test and will not beep when pressed.

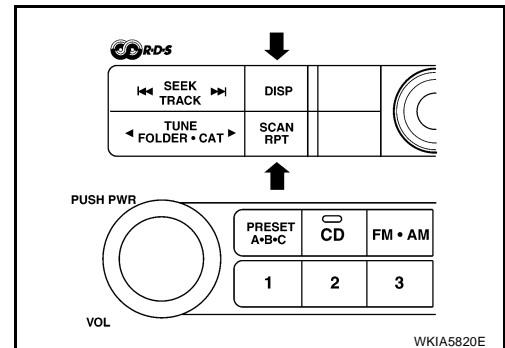

EXITING THE SELF-DIAGNOSIS MODE

Turn ignition switch OFF. Then the self-diagnosis ends.

DIAGNOSIS FUNCTION

- It can check for continuity of the switches by sounding the beep when each AV switch and steering switch is pressed.
- It can check for continuity of harness between AV switch and steering switch.

AUDIO

EKS00G5K

Trouble Diagnosis

The majority of the audio troubles are the result of outside causes (bad CD, electromagnetic interference, etc.). Check the inspection items below to diagnose the malfunction.

MALFUNCTION WITH RADIO AND CD (BASE AND MID LEVEL SYSTEM)

| Symptom | Possible cause |
|--|---|
| Inoperative | <ul style="list-style-type: none"> ● Audio unit power circuit check. Refer to AV-37, "Power Supply Circuit Inspection" . <p>If above check is OK, replace audio unit.</p> |
| Steering switch does not operate (with mid level audio system) | <ul style="list-style-type: none"> ● Steering switch check. Refer to AV-45, "Steering Switch Check (Without NAVI)" . <p>If above check is OK, replace audio unit.</p> |
| All speakers do not sound | <ul style="list-style-type: none"> ● Audio unit |
| One or several speakers do not sound | <ul style="list-style-type: none"> ● Front door speaker check. Refer to AV-47, "Sound Is Not Heard From Front Door Speaker or Front Tweeter (Base and Mid Level System)" . ● Rear door speaker check. Refer to AV-49, "Sound Is Not Heard From Rear Door Speaker (Base and Mid Level System)" . |
| Poor sound | <ul style="list-style-type: none"> ● Audio unit ● Speaker |
| Noisy | <ul style="list-style-type: none"> ● Audio unit ● Electrical equipment (generator, bonding wire, etc.) ● Open in shield circuit |

MALFUNCTION WITH RADIO AND CD (BOSE SYSTEM)

Before proceeding on models with NAVI, confirm that other AV switch functions (except audio functions) operate. If not, refer to [AV-145, "Unable to Operate All of AV Switches \(Unable to Start Self-Diagnosis\)"](#) .

| Symptom | Possible cause |
|--|--|
| Inoperative | <ul style="list-style-type: none"> ● Audio unit power circuit check. Refer to AV-37, "Power Supply Circuit Inspection" . ● Audio communication line check (with Navigation System). Refer to AV-126, "Audio Communication Line Check (Between Display Control Unit and Audio Unit)" . ● AV switch check. Refer to AV-46, "AV Switch Check (With NAVI)" . <p>If above check is OK, replace audio unit.</p> |
| Steering switch does not operate | <ul style="list-style-type: none"> ● Steering switch check. Refer to AV-43, "Steering Switch Check (With NAVI)" . ● AV switch check. Refer to AV-46, "AV Switch Check (With NAVI)" . ● Audio communication line check (with Navigation System). Refer to AV-126, "Audio Communication Line Check (Between Display Control Unit and Audio Unit)" . <p>If above check is OK, replace audio unit.</p> |
| Audio information is not displayed on screen (with NAVI) | <ul style="list-style-type: none"> ● Display unit check. Refer to AV-104, "Self-Diagnosis Mode (DCU)" . |
| All speakers do not sound | <ul style="list-style-type: none"> ● Audio unit ● BOSE speaker amp. power supply and ground circuit check. Refer to AV-37, "Power Supply Circuit Inspection" . ● BOSE speaker amp. ON signal ● BOSE speaker amp. |
| One or several speakers do not sound | <ul style="list-style-type: none"> ● Front door speaker check. Refer to AV-51, "Sound Is Not Heard From Front Door Speaker or Front Tweeter (BOSE System)" . ● Rear door speaker check. Refer to AV-55, "Sound Is Not Heard From Rear Door Speaker or Rear Door Tweeter (BOSE System)" . ● Subwoofer check. Refer to AV-58, "Sound Is Not Heard From Subwoofer (BOSE System)" . |

AUDIO

| Symptom | Possible cause |
|------------|---|
| Poor sound | <ul style="list-style-type: none"> ● Audio unit ● BOSE speaker amp. ● Speaker |
| Noisy | <ul style="list-style-type: none"> ● Audio unit ● BOSE speaker amp. ● Electrical equipment (generator, bonding wire, etc.) ● Open in shield circuit |

FOR RADIO ONLY

| Symptom | Possible cause |
|---|---|
| No sound | <ul style="list-style-type: none"> ● Audio unit ● Antenna feeder, wiring or connections ● Antenna amplifier, power supply, wiring or connections |
| Noisy | <ul style="list-style-type: none"> ● Audio unit ● Audio unit case ground ● Antenna feeder, wiring or connections ● Antenna amplifier, power supply, wiring or connections ● Noise prevention parts ● Electrical equipment ● Wire harness of each piece of electrical equipment ● Open in shield circuit |
| All radio stations stored in memory are deleted | <ul style="list-style-type: none"> ● Audio unit power circuit. Refer to AV-37, "Power Supply Circuit Inspection". ● Audio unit |

NOTE:

The following noise results from variations in field strength, such as fading noise and multi-path noise, or external noise from trains and other sources. It is not a malfunction.

- Fading noise: This noise occurs because of variations in the field strength in a narrow range due to mountains or buildings blocking the signal.
- Multi-path noise: This noise results from the waves sent directly from the broadcast station arriving at the antenna at a different time from the waves which reflect off mountains or buildings.

FOR CD ONLY

| Symptom | Possible cause |
|---|--|
| CD cannot be inserted. | <ul style="list-style-type: none"> ● CD ● Audio unit |
| CD cannot be ejected. | |
| The CD cannot be played. | |
| The sound skips, stops suddenly, or is distorted. | |

AUDIO

FOR SATELLITE RADIO TUNER (FACTORY INSTALLED) ONLY

| Symptom | Possible cause |
|--------------------------------------|--|
| Inoperative | <ul style="list-style-type: none"> ● Satellite radio tuner (factory installed) power and ground circuit inspection. Refer to AV-39, "Satellite Radio Tuner (Factory Installed) Power and Ground Supply Circuit Inspection" . ● Satellite radio tuner (factory installed) communication circuit inspection. Refer to AV-40, "Satellite Radio Tuner (Factory Installed) Communication Circuit Inspection" . <p>If above check is OK, replace satellite radio tuner. Refer to AV-64, "SATELLITE RADIO TUNER" .</p> |
| Right or left channel does not sound | <ul style="list-style-type: none"> ● Satellite radio tuner (factory installed) right channel audio signal circuit inspection. Refer to AV-43, "Satellite Radio Tuner (Factory Installed) Right Channel Audio Signal Circuit Inspection" . ● Satellite radio tuner (factory installed) left channel audio signal circuit inspection. Refer to AV-42, "Satellite Radio Tuner (Factory Installed) Left Channel Audio Signal Circuit Inspection" . <p>If above check is OK, replace satellite radio tuner. Refer to AV-64, "SATELLITE RADIO TUNER" .</p> |
| Poor reception | <ul style="list-style-type: none"> ● Location of vehicle. Make certain vehicle is in an open area. ● Satellite radio antenna or antenna feeder. Refer to AV-68, "Location of Antenna" . |
| Noisy | <ul style="list-style-type: none"> ● Satellite radio tuner (factory installed) ground. ● Satellite radio tuner (factory installed) harness shield wires. ● Electrical equipment (generator, bonding wire, etc.). Refer to AV-36, "Noise Inspection" . ● Open in shield circuit |

NOTE:

In vehicles equipped with NAVI, when pressing the SAT button, the display unit will display `NO SAT' when the following conditions exist:

- Loss of power to the satellite radio tuner
- Open or short in the REQ1, TXD, or RXD circuits.

If the satellite antenna is disconnected or inoperative, the display unit will display ANTENNA.

Noise Inspection

EKS00G5L

The vehicle itself can be a source of noise if noise prevention parts or electrical equipment is malfunctioning. Check if noise is caused and/or changed by engine speed, ignition switch turned to each position, and operation of each piece of electrical equipment, and determine the cause.

NOTE:

The source of the noise can be found easily by listening to the noise while removing the fuses of electrical components, one by one.

TYPE OF NOISE AND POSSIBLE CAUSE

| Occurrence condition | Possible cause | |
|--|--|---|
| Occurs only when engine is ON. | A continuous growling noise occurs. The speed of the noise varies with changes in the engine speed. | ● Ignition components |
| | A whistling noise occurs while the engine speed is high. A booming noise occurs while the engine is running and the lighting switch is ON. | ● Generator |
| The occurrence of the noise is linked with the operation of the fuel pump. | ● Fuel pump condenser | |
| Noise only occurs when various electrical components are operating. | A cracking or snapping sound occurs with the operation of various switches. | ● Relay malfunction, audio unit malfunction |
| | The noise occurs when various motors are operating. | ● Motor case ground ● Motor |

AUDIO

| Occurrence condition | Possible cause |
|---|---|
| The noise occurs constantly, not just under certain conditions. | <ul style="list-style-type: none"> ● Rear defogger coil malfunction ● Open circuit in printed heater ● Poor ground of antenna amplifier or antenna feeder line |
| A cracking or snapping sound occurs while the vehicle is being driven, especially when it is vibrating excessively. | <ul style="list-style-type: none"> ● Ground wire of body parts ● Ground due to improper part installation ● Wiring connections or a short circuit |

Power Supply Circuit Inspection

EKS00G5M

1. CHECK FUSES

Check that the following fuses are not blown.

| Unit | Terminals | Signal name | Fuse No. |
|-------------------------------|-----------|-----------------------------|----------|
| Audio unit | 6 | Battery power | 29 |
| | 10 | Ignition switch ACC or ON | 4 |
| AV switch | 1 | Battery power | 29 |
| | 2 | Ignition switch ACC or ON | 4 |
| BOSE speaker amp. (with BOSE) | 1 | Battery power | 29 |
| Display control unit | 12 | Ignition switch ON or START | 12 |
| Subwoofer (BOSE system) | 6 | Battery power | 17 |

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

A
B
C
D
E
F
G
H
I
J
L
M


AV

AUDIO

2. POWER SUPPLY CIRCUIT CHECK


1. Disconnect audio unit connector M43, subwoofer connector B72 (with BOSE) and BOSE speaker amp. connector B74 (with BOSE).
2. Check voltage between the audio unit and ground.

| Unit | Terminal No. | | | OFF | ACC | ON |
|------------|--------------|----------|--------|-----------------|-----------------|-----------------|
| | (+) | | (-) | | | |
| | Connector | Terminal | | | | |
| Audio unit | M43 | 6 | Ground | Battery voltage | Battery voltage | Battery voltage |
| | | 10 | Ground | 0V | Battery voltage | Battery voltage |

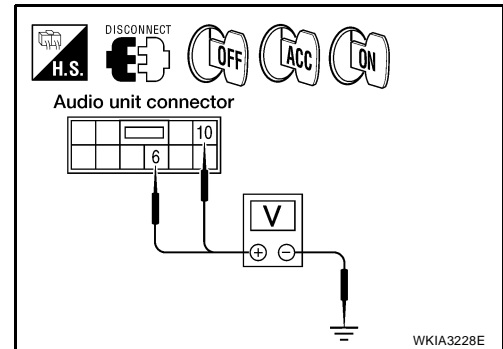


3. Check voltage between subwoofer (BOSE system) and ground.

| Unit | Terminal No. | | | OFF | ACC | ON |
|-----------|--------------|----------|--------|-----------------|-----------------|-----------------|
| | (+) | | (-) | | | |
| | Connector | Terminal | | | | |
| Subwoofer | B72 | 6 | Ground | Battery voltage | Battery voltage | Battery voltage |

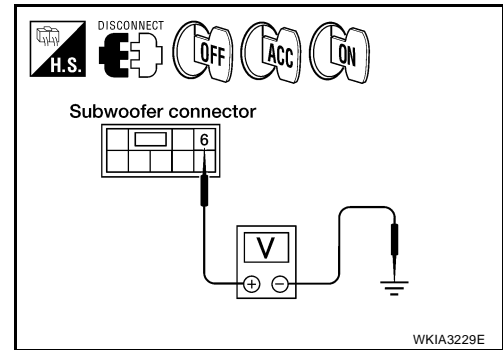

4. Check voltage between BOSE speaker amp. (with BOSE) and ground.

| Unit | Terminal No. | | | OFF | ACC | ON |
|-------------------|--------------|----------|--------|-----------------|-----------------|-----------------|
| | (+) | | (-) | | | |
| | Connector | Terminal | | | | |
| BOSE speaker amp. | B74 | 1 | Ground | Battery voltage | Battery voltage | Battery voltage |

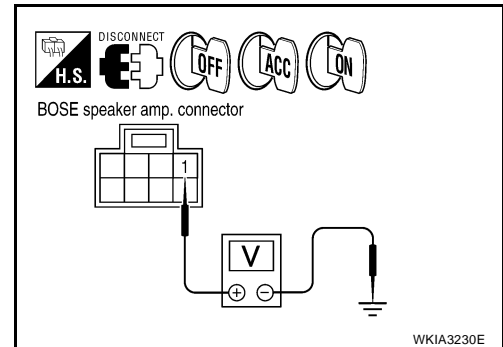

OK or NG

- OK >> GO TO 3.
 NG >> ● Check connector housings for disconnected or loose terminals.
 ● Repair harness or connector.


3. GROUND CIRCUIT CHECK

Check continuity between subwoofer (BOSE system) harness connector B72 terminal 5 and BOSE speaker amp. (with BOSE) harness connector B74 terminal 17 and ground.

Continuity should exist.

OK or NG

- OK >> Inspection End.
 NG >> ● Check connector housings for disconnected or loose terminals.
 ● Repair harness or connector.

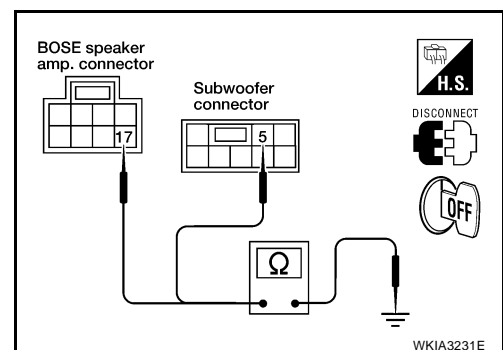

AUDIO

Satellite Radio Tuner (Factory Installed) Power and Ground Supply Circuit Inspection

EKS00HK9

1. CHECK FUSES

- Check that the following fuses are not blown.

| Unit | Terminals | Signal name | Fuse No. |
|---|-----------|---------------------------|----------|
| Satellite radio tuner (factory installed) | 32 | Battery power | 17 |
| | 36 | Ignition switch ACC or ON | 4 |

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

2. POWER SUPPLY CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect satellite radio tuner (factory installed) M41 connector.
3. Check voltage between the satellite radio tuner (factory installed) and ground.

| Unit | Terminal No. | | OFF | ACC | ON |
|---|--------------|----------|--------|-----------------|-----------------|
| | (+) | | | | |
| | Connector | Terminal | | | |
| Satellite radio tuner (factory installed) | M41 | 32 | Ground | Battery voltage | Battery voltage |
| | | 36 | Ground | 0V | Battery voltage |

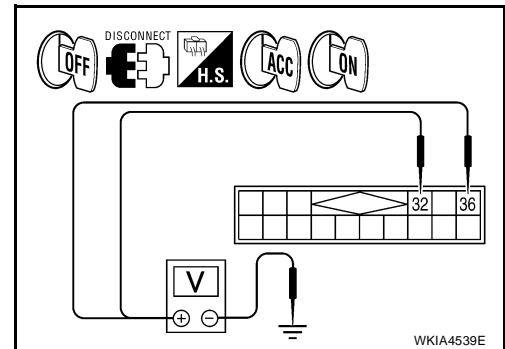

OK or NG

OK >> GO TO 3.


NG >> ● Check connector housings for disconnected or loose terminals.

- Repair harness or connector.

3. GROUND CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Inspect satellite radio tuner (factory installed) case ground.
3. Disconnect satellite radio tuner (factory installed) connector M41 (A) and audio unit connector M42 (B).
4. Check continuity between satellite radio tuner (factory installed) and audio unit.

| Terminals | | | | Continuity |
|-----------------------|----------|------------|----------|------------|
| Satellite radio tuner | | Audio unit | | |
| Connector | Terminal | Connector | Terminal | |
| A: M41 | 25 | B: M42 | 45 | Yes |
| | 26 | | 46 | |

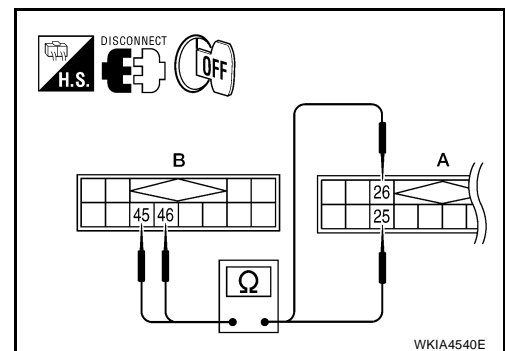

OK or NG

OK >> Inspection End.

NG >> ● Check connector housings for disconnected or loose terminals.

- Repair harness, connector or satellite radio tuner (factory installed) case ground.

AUDIO

Satellite Radio Tuner (Factory Installed) Communication Circuit Inspection EKS00HKA

1. CHECK HARNESS - 1

1. Turn ignition switch OFF.
2. Disconnect satellite radio tuner (factory installed) connector M41 and audio unit connector M42.
3. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 28 and audio unit harness connector M42 (B) terminal 48

Continuity should exist.


4. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 28 and ground.

Continuity should not exist.

OK or NG

OK >> GO TO 2.

NG >> Repair harness or connector.

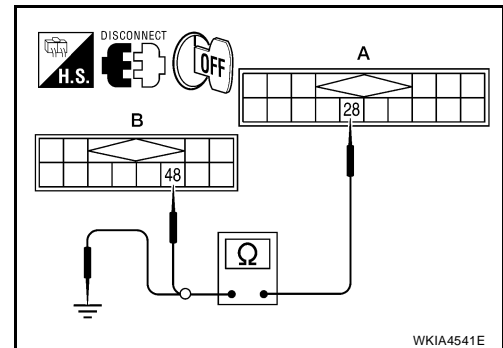

2. CHECK HARNESS - 2

1. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 29 and audio unit harness connector M42 (B) terminal 49

Continuity should exist.


2. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 29 and ground.

Continuity should not exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

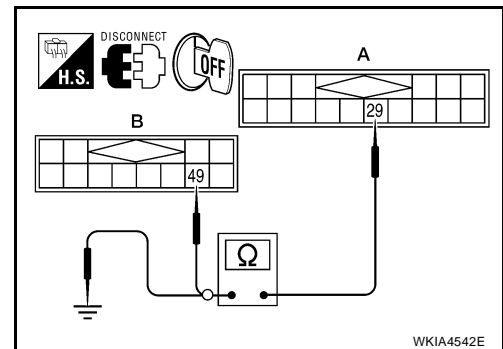

3. CHECK HARNESS - 3

1. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 30 and audio unit harness connector M42 (B) terminal 50

Continuity should exist.


2. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 30 and ground.

Continuity should not exist.

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

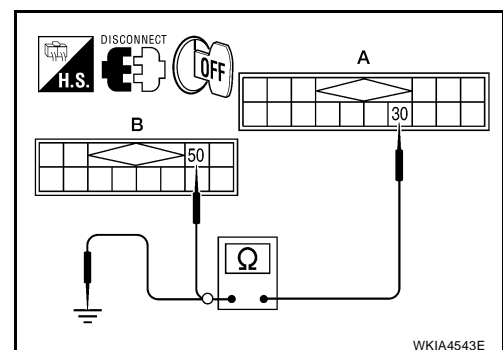

AUDIO

4. CHECK REQ1 SIGNAL

1. Connect satellite radio tuner (factory installed) connector and audio unit connector.
2. Turn ignition switch to ACC
3. Check signal between satellite radio tuner (factory installed) harness connector M41 terminal 28 and ground with CONSULT-II or oscilloscope.


28 - Ground

: Refer to [AV-32, "Terminals and Reference Values for Satellite Radio Tuner"](#) .

OK or NG

OK >> GO TO 5.

NG >> Replace audio unit. Refer too. [AV-61, "AUDIO UNIT - WITH NAVI"](#) or [AV-61, "AUDIO UNIT - WITHOUT NAVI"](#)

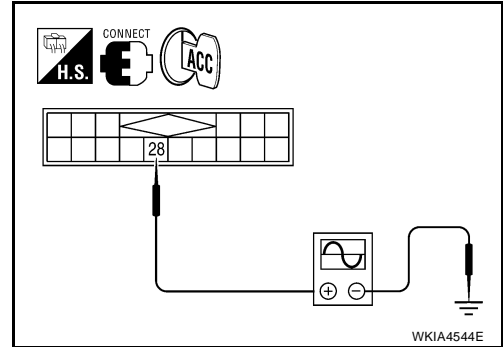

5. CHECK TXD SIGNAL

1. Check signal between satellite radio tuner (factory installed) harness connector M41 terminal 29 and ground with CONSULT-II or oscilloscope.


29 - Ground

: Refer to [AV-32, "Terminals and Reference Values for Satellite Radio Tuner"](#) .

OK or NG

OK >> GO TO 6.

NG >> Replace audio unit. Refer to [AV-61, "AUDIO UNIT - WITH NAVI"](#) or [AV-61, "AUDIO UNIT - WITHOUT NAVI"](#)

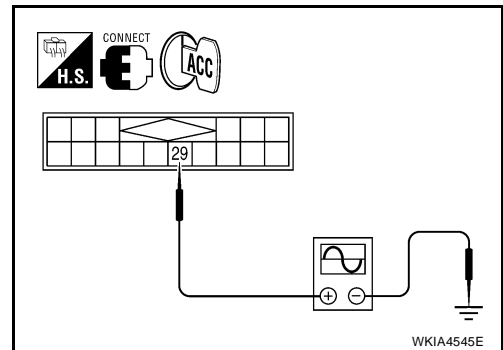

6. CHECK RXD SIGNAL

1. Check signal between satellite radio tuner (factory installed) harness connector M41 terminal 30 and ground with CONSULT-II or oscilloscope.


30 - Ground

: Refer to [AV-32, "Terminals and Reference Values for Satellite Radio Tuner"](#) .

OK or NG

OK >> Replace satellite radio tuner. Refer to [AV-64, "SATELLITE RADIO TUNER"](#) .

NG >> Replace audio unit. Refer to [AV-61, "AUDIO UNIT - WITH NAVI"](#) or [AV-61, "AUDIO UNIT - WITHOUT NAVI"](#)

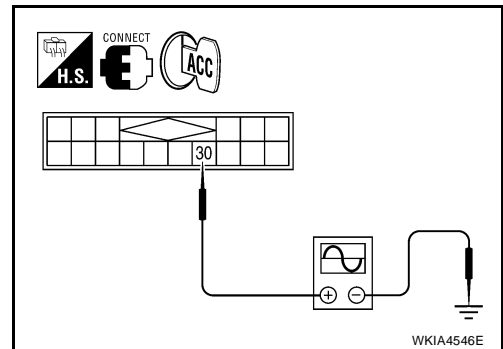

AUDIO

Satellite Radio Tuner (Factory Installed) Left Channel Audio Signal Circuit Inspection

EKS00HKB

1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect satellite radio tuner (factory installed) connector M41 (A) and audio unit connector M42 (B).
3. Check continuity between satellite radio tuner (factory installed) and audio unit.


| Terminals | | | | Continuity |
|-----------------------|----------|------------|----------|------------|
| Satellite radio tuner | | Audio unit | | |
| Connector | Terminal | Connector | Terminal | |
| A: M41 | 21 | B: M42 | 41 | Yes |
| | 22 | | 42 | |

4. Check continuity between satellite radio tuner (factory installed) and ground.

| Terminals | | | | Continuity |
|-----------------------|----------|--------|--|------------|
| Satellite radio tuner | | — | | |
| Connector | Terminal | | | |
| A: M41 | 21 | Ground | | No |
| | 22 | | | |

OK or NG

- OK >> GO TO 2.
 NG >> Repair harness or connector.

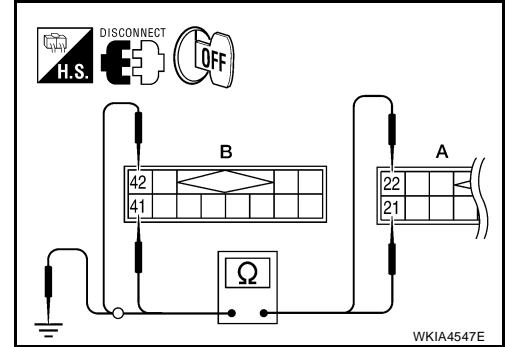


2. CHECK LEFT CHANNEL AUDIO SIGNAL

1. Connect satellite radio tuner (factory installed) and audio unit.
2. Turn ignition switch ON.
3. Check signal between satellite radio tuner (factory installed) connector M41 terminals 21 and 22 with CONSULT-II or oscilloscope.

21 - 22 : Refer to [AV-32, "Terminals and Reference Values for Satellite Radio Tuner"](#) .

OK or NG

- OK >> Replace satellite radio tuner. Refer to [AV-64, "SATELLITE RADIO TUNER"](#) .
 NG >> Replace audio unit. Refer to [AV-61, "AUDIO UNIT - WITH NAVI"](#) or [AV-61, "AUDIO UNIT - WITHOUT NAVI"](#)

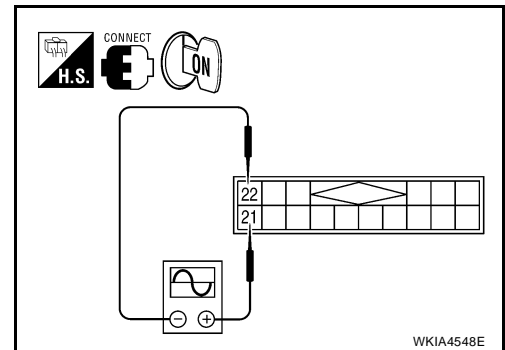

AUDIO

Satellite Radio Tuner (Factory Installed) Right Channel Audio Signal Circuit Inspection

EKS00HKC

1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect satellite radio tuner (factory installed) connector M41 (A) and audio unit connector M42 (B).
3. Check continuity between satellite radio tuner (factory installed) and audio unit.


| Terminals | | | | Continuity |
|-----------------------|----------|------------|----------|------------|
| Satellite radio tuner | | Audio unit | | |
| Connector | Terminal | Connector | Terminal | |
| A: M41 | 23 | B: M42 | 43 | Yes |
| | 24 | | 44 | |

4. Check continuity between satellite radio tuner (factory installed) and ground.

| Terminals | | | | Continuity |
|-----------------------|----------|--------|--|------------|
| Satellite radio tuner | | — | | |
| Connector | Terminal | | | |
| A: M41 | 23 | Ground | | No |
| | 24 | | | |

OK or NG

- OK >> GO TO 2.
 NG >> Repair harness or connector.

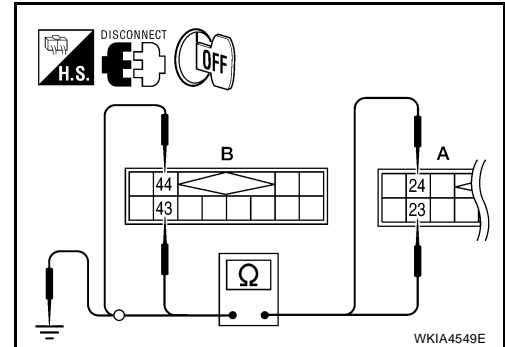


2. CHECK RIGHT CHANNEL AUDIO SIGNAL

1. Connect satellite radio tuner (factory installed) and audio unit.
2. Turn ignition switch ON.
3. Check signal between satellite radio tuner (factory installed) connector M41 terminals 23 and 24 with CONSULT-II or oscilloscope.

23 - 24 : Refer to [AV-32, "Terminals and Reference Values for Satellite Radio Tuner"](#).

OK or NG

- OK >> Replace satellite radio tuner. Refer to [AV-64, "SATELLITE RADIO TUNER"](#).
 NG >> Replace audio unit. Refer to [AV-61, "AUDIO UNIT - WITH NAVI"](#) or [AV-61, "AUDIO UNIT - WITHOUT NAVI"](#)

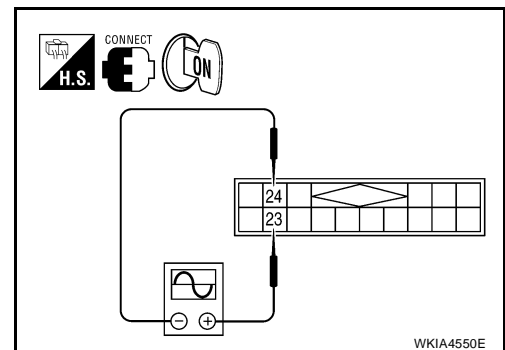

Steering Switch Check (With NAVI)

EKS00G5N

1. AV SWITCH SELF-DIAGNOSIS FUNCTION CHECK

1. Start AV switch self-diagnosis function. Refer to [AV-33, "AV Switch Self-Diagnosis Function"](#).
2. Operate steering switch.

Does steering switch operate normally?

- YES >> Inspection End.
 NO >> GO TO 2.

AUDIO

2. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect AV switch connector M98 and spiral cable connector M30.
3. Check continuity between spiral cable harness connector terminal and AV switch harness connector terminal.

| Terminals | | | | Continuity |
|--------------|----------|-----------|----------|------------|
| Spiral cable | | AV switch | | |
| Connector | Terminal | Connector | Terminal | |
| A: M30 | 24 | B: M98 | 12 | Yes |
| | 25 | | 13 | |
| | 26 | | 14 | |

4. Check continuity between AV switch and ground.

| Terminals | | | Continuity |
|-----------|----------|--------|------------|
| AV switch | | — | |
| Connector | Terminal | | |
| B: M98 | 12 | Ground | No |
| | 13 | | |
| | 14 | | |

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

3. SPIRAL CABLE CHECK



1. Disconnect spiral cable connector M102.
2. Check continuity between spiral cable terminals.

| Terminals | | | | Continuity |
|--------------|----------|-----------|----------|------------|
| Spiral cable | | | | |
| Connector | Terminal | Connector | Terminal | |
| A: M30 | 24 | B: M102 | 20 | Yes |
| | 25 | | 19 | |
| | 26 | | 18 | |

OK or NG

OK >> GO TO 4.

NG >> Replace spiral cable. Refer to [SRS-40, "SPIRAL CABLE"](#) .

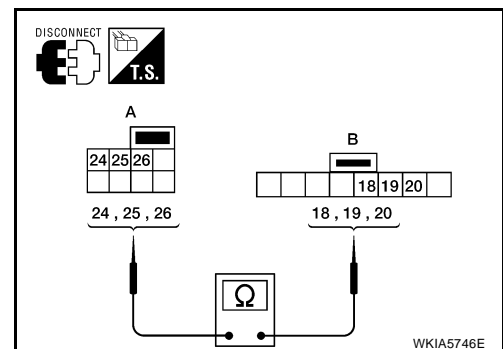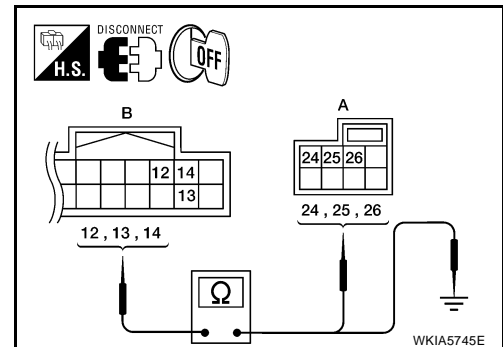


AUDIO

4. CHECK STEERING SWITCH RESISTANCE

Check resistance between steering switch terminals.

| Terminal | | Signal name | Condition | Resistance (Ω) (Approx.) |
|----------|----|---------------|--------------------------------|-----------------------------|
| 19 | 18 | Seek (down) | Depress (station) down switch. | 165 |
| | | Power | Depress power switch. | 0 |
| | | Volume (down) | Depress volume down switch. | 652 |
| 20 | 18 | Seek (up) | Depress (station) up switch. | 165 |
| | | Mode | Depress mode switch. | 0 |
| | | Volume (up) | Depress volume up switch. | 652 |

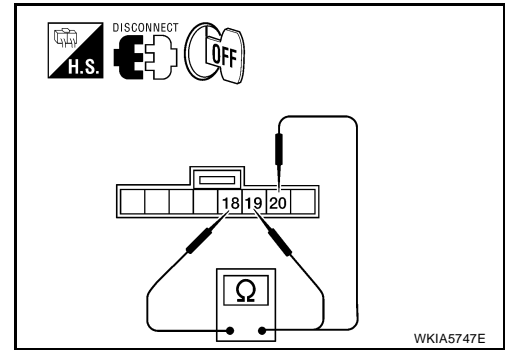

OK or NG

OK >> Inspection End.

NG >> Replace steering switch. Refer to [AV-64, "STEERING WHEEL AUDIO CONTROL SWITCHES"](#).


Steering Switch Check (Without NAVI)

EKS00G50

1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect audio unit connector M45 and spiral cable connector M30.
3. Check continuity between spiral cable harness connector terminal and audio unit harness connector terminal.

| Terminals | | | | Continuity |
|--------------|----------|------------|----------|------------|
| Spiral cable | | Audio unit | | |
| Connector | Terminal | Connector | Terminal | |
| A: M30 | 24 | B: M45 | 69 | Yes |
| | 25 | | 70 | |
| | 26 | | 71 | |

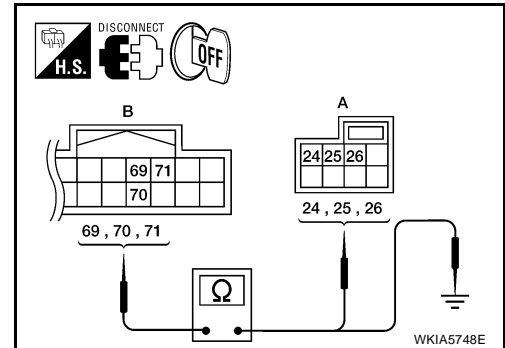

4. Check continuity between audio unit and ground.

| Terminals | | | Continuity |
|------------|----------|--------|------------|
| Audio unit | | | |
| Connector | Terminal | | |
| B: M45 | 69 | Ground | No |
| | 70 | | |
| | 71 | | |

OK or NG

OK >> GO TO 2.


NG >> Repair harness.

AUDIO

2. SPIRAL CABLE CHECK

1. Disconnect spiral cable connector M102.
2. Check continuity between spiral cable harness connector terminals.

| Terminals | | | | Continuity |
|--------------|----------|-----------|----------|------------|
| Spiral cable | | | | |
| Connector | Terminal | Connector | Terminal | |
| A: M30 | 24 | B: M102 | 20 | Yes |
| | 25 | | 19 | |
| | 26 | | 18 | |

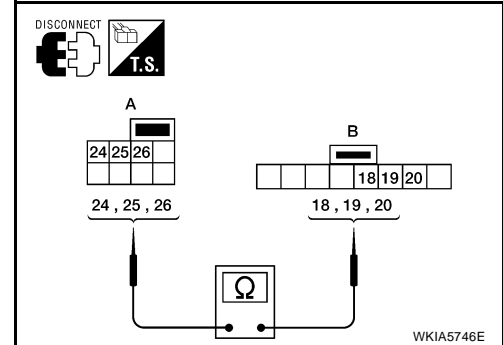


OK or NG

- OK >> GO TO 3.
 NG >> Replace spiral cable. Refer to [SRS-40, "SPIRAL CABLE"](#) .

3. CHECK STEERING SWITCH RESISTANCE

Check resistance between steering switch terminals.

| Terminal | Signal name | Condition | Resistance (Ω) (Approx.) |
|----------|-------------|---------------|------------------------------------|
| 19 | 18 | Seek (down) | Depress (station) down switch. 165 |
| | | Power | Depress power switch. 0 |
| | | Volume (down) | Depress volume down switch. 652 |
| 20 | 18 | Seek (up) | Depress (station) up switch. 165 |
| | | Mode | Depress mode switch. 0 |
| | | Volume (up) | Depress volume up switch. 652 |

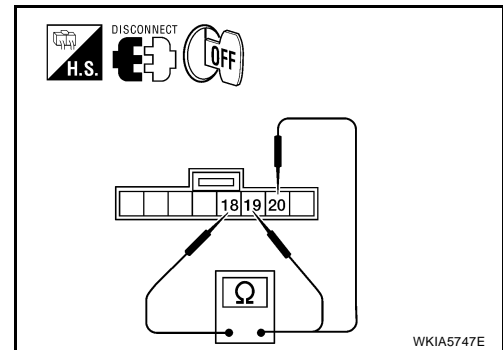

OK or NG

- OK >> Inspection End.
 NG >> Replace steering switch. Refer to [AV-64, "STEERING WHEEL AUDIO CONTROL SWITCHES"](#) .

AV Switch Check (With NAVI)

EKS00G5P

1. AV SWITCH SELF-DIAGNOSIS FUNCTION CHECK

Perform AV switch self-diagnosis function. Refer to [AV-33, "AV Switch Self-Diagnosis Function"](#) .

Does AV switch operate normally?

- YES >> Inspection End.
 NO >> GO TO 2.

2. CHECK AV SWITCH POWER SUPPLY AND GROUND CIRCUIT

Check AV switch power supply and ground circuit. Refer to [AV-37, "Power Supply Circuit Inspection"](#) .

OK or NG

- OK >> Replace AV switch. Refer to [AV-61, "AV SWITCH"](#) .
 NG >> Repair malfunctioning part.

AUDIO

Audio Communication Line Check (With Navigation System)

EKS00G5Q

1. CHECK AUDIO COMMUNICATION LINE

Start audio communication line check. Refer to [AV-126, "Audio Communication Line Check \(Between Display Control Unit and Audio Unit\)"](#).

OK or NG

- OK >> Inspection End.
- NG >> Replace malfunctioning part.

Sound Is Not Heard From Front Door Speaker or Front Tweeter (Base and Mid Level System)

EKS00G5R

1. HARNESS CHECK

1. Disconnect audio unit connector M43 and suspect speaker or tweeter connector.
2. Check continuity between audio unit harness connector M43 terminal and suspect speaker or tweeter harness connector terminal.

| Terminals | | | | Continuity |
|------------|----------|--------------------|----------|------------|
| Audio unit | | Speaker or tweeter | | |
| Connector | Terminal | Connector | Terminal | |
| M43 | 2 | D12 | + | Yes |
| | 1 | | - | |
| | 4 | D112 | + | |
| | 3 | | - | |
| | 2 | M109 | + | |
| | 1 | | - | |
| | 4 | M111 | + | |
| | 3 | | - | |


*: With mid-level system

3. Check continuity between audio unit harness connector M43 terminal and ground.

| Terminals | | | Continuity |
|------------|----------|--------|------------|
| Audio unit | | Ground | |
| Connector | Terminal | | |
| M43 | 2 | Ground | No |
| | 1 | | |
| | 4 | | |
| | 3 | | |

OK or NG

- OK >> GO TO 2.
- NG >>
 - Check connector housings for disconnected or loose terminals.
 - Repair harness or connector.

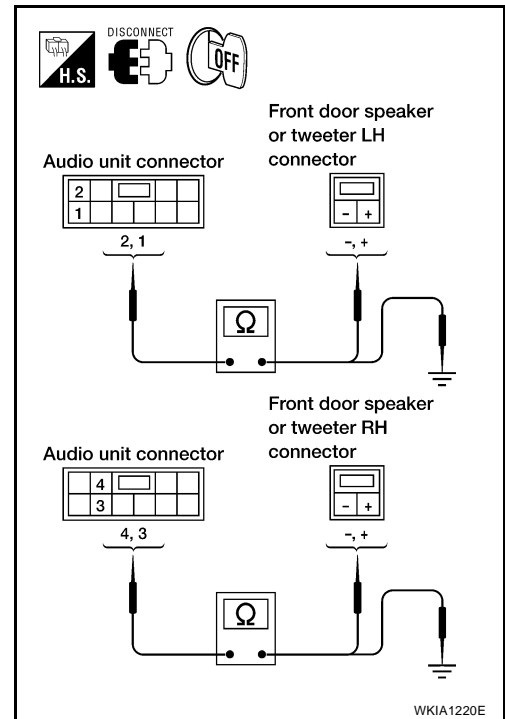


WKIA1220E

AUDIO

2. FRONT SPEAKER SIGNAL CHECK


1. Connect audio unit connector and front speaker or tweeter connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector terminal and ground with CONSULT-II or oscilloscope.
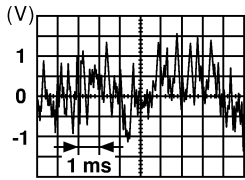
| Terminals | | | | Condi- tion | Reference signal |
|---------------------|---------------|---------------------|---------------|----------------------------|---|
| (+) | | (-) | | | |
| Con- nec- tor | Termi- nal | Con- nec- tor | Termi- nal | | |
| M43 | 2 | M43 | 1 | Receive audio signal |  |
| | 4 | | 3 | | |

SKIA0177E

OK or NG

- OK >> Replace speaker. Refer to [AV-62, "FRONT DOOR SPEAKER"](#).
- NG >> Replace audio unit. Refer to [AV-61, "Removal and Installation"](#).

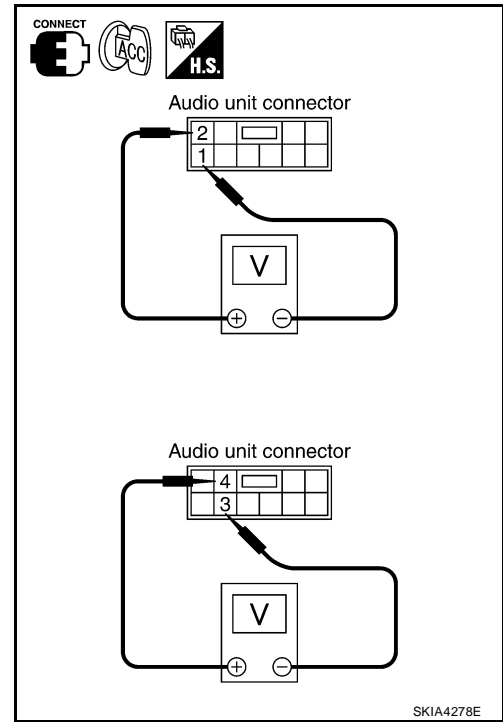

AUDIO

Sound Is Not Heard From Rear Door Speaker (Base and Mid Level System) EKS00G5S


1. HARNESS CHECK

1. Disconnect audio unit connector M44 and suspect speaker connector.
2. Check continuity between audio unit harness connector M44 terminal and suspect speaker harness connector terminal.

| Terminals | | | | Continuity |
|------------|----------|--------------------|----------|------------|
| Audio unit | | Speaker or tweeter | | |
| Connector | Terminal | Connector | Terminal | |
| M44 | 13 | D207 | - | Yes |
| | 14 | | + | |
| | 15 | D307 | - | |
| | 16 | | + | |

3. Check continuity between audio unit harness connector M44 terminal and ground.

| Terminals | | | Continuity |
|------------|----------|--------|------------|
| Audio unit | | — | |
| Connector | Terminal | | |
| M44 | 13 | Ground | No |
| | 14 | | |
| | 15 | | |
| | 16 | | |

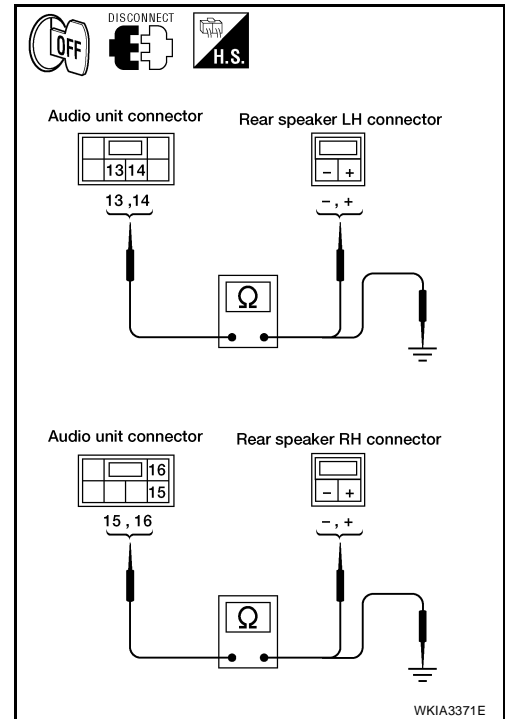

OK or NG

- OK >> GO TO 2.
 NG >> ● Check connector housings for disconnected or loose terminals.
 ● Repair harness or connector.


A
B
C
D
E
F
G
H
I
J
L
M

AV

AUDIO

2. REAR SPEAKER SIGNAL CHECK


1. Connect audio unit connector and rear speaker connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector terminals with CONSULT-II or oscilloscope.
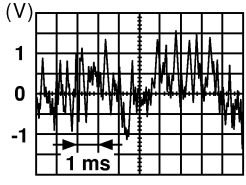
| Terminals | | | | Condi- tion | Reference signal |
|----------------|---------------|----------------|----------|----------------------------|---|
| (+) | | (-) | | | |
| Con- nector | Termi- nal | Con- nector | Terminal | | |
| M44 | 14 | M44 | 13 | Receive audio signal |  |
| | 16 | | 15 | | |

SKIA0177E

OK or NG

- OK >> Replace rear door speaker. Refer to [AV-63, "REAR DOOR SPEAKER"](#).
- NG >> Replace audio unit. Refer to [AV-61, "Removal and Installation"](#).

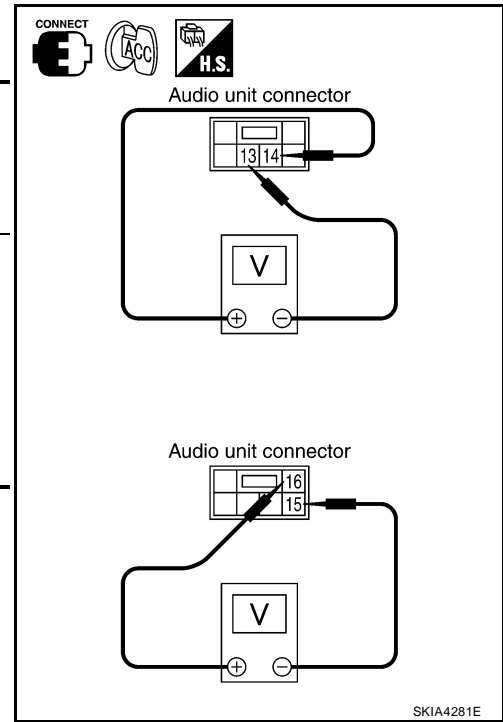

AUDIO

Sound Is Not Heard From Front Door Speaker or Front Tweeter (BOSE System)

EKS00G5T

1. HARNESS CHECK

1. Disconnect BOSE speaker amp. connector B75 and suspect speaker connector.
2. Check continuity between BOSE speaker amp. harness connector terminal B75 and suspect speaker harness connector terminal.


| Terminals | | | | Continuity |
|-------------------|----------|--------------------|----------|------------|
| BOSE speaker amp. | | Speaker or tweeter | | |
| Connector | Terminal | Connector | Terminal | |
| B75 | 13 | D12 | + | Yes |
| | 14 | | - | |
| | 15 | D112 | + | |
| | 16 | | - | |
| | 13 | M109 | + | |
| | 14 | | - | |
| | 15 | M111 | + | |
| | 16 | | - | |

3. Check continuity between BOSE speaker amp. harness connector terminal B75 and ground.

| Terminals | | | Continuity |
|-------------------|----------|--------|------------|
| BOSE speaker amp. | | — | |
| Connector | Terminal | | |
| B75 | 13 | Ground | No |
| | 14 | | |
| | 15 | | |
| | 16 | | |

OK or NG


- OK >> GO TO 2.
 NG >> ● Check connector housings for disconnected or loose terminals.
 ● Repair harness or connector.

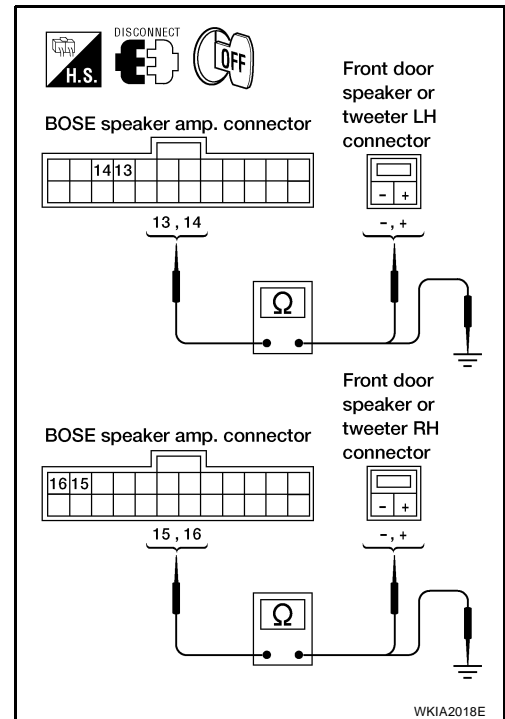

AUDIO

2. FRONT SPEAKER SIGNAL CHECK


1. Connect BOSE speaker amp. connector B75 and suspect speaker connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between BOSE speaker amp. harness connector B75 terminals with CONSULT-II or oscilloscope.
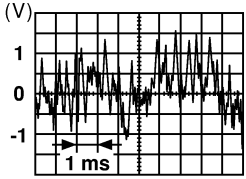
| Terminals | | | | Condi- tion | Reference signal |
|----------------|----------|----------------|---------------|----------------------------|---|
| (+) | | (-) | | | |
| Con- nector | Terminal | Con- nector | Termi- nal | | |
| B75 | 13 | B75 | 14 | Receive audio signal |  |
| | 15 | | 16 | | |

SKIA0177E

OK or NG

- OK >> Replace suspect speaker. Refer to [AV-62. "FRONT DOOR SPEAKER"](#).
- NG >> GO TO 3.

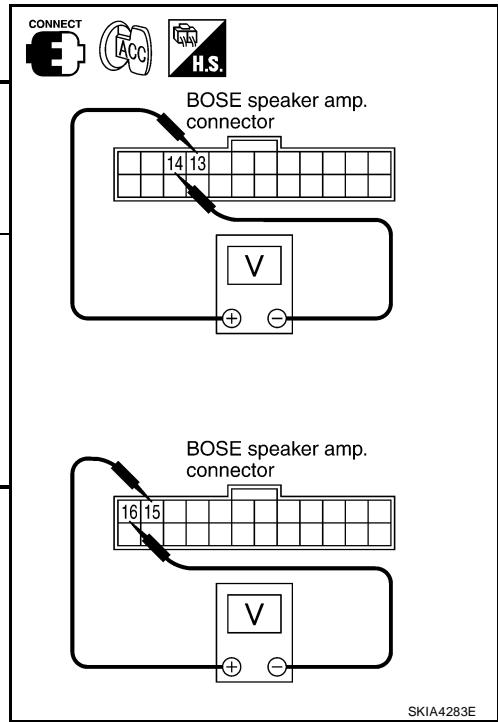

AUDIO


3. HARNESS CHECK

1. Disconnect audio unit connector M43 and BOSE speaker amp. connector B75.
2. Check continuity between audio unit harness connector terminals and BOSE speaker amp. harness connector terminals.

| Terminals | | | | Continuity |
|------------|----------|-------------------|----------|------------|
| Audio unit | | BOSE speaker amp. | | |
| Connector | Terminal | Connector | Terminal | |
| M43 | 1 | B75 | 29 | Yes |
| | 2 | | 30 | |
| | 3 | | 27 | |
| | 4 | | 28 | |

3. Check continuity between audio unit harness connector terminals and ground.

| Terminals | | | Continuity |
|------------|----------|--------|------------|
| Audio unit | | — | |
| Connector | Terminal | | |
| M43 | 1 | Ground | No |
| | 2 | | |
| | 3 | | |
| | 4 | | |

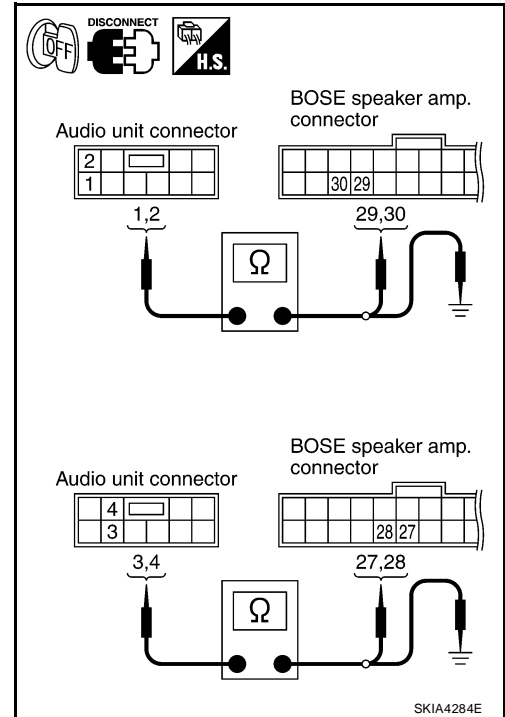

OK or NG

- OK >> GO TO 4.
- NG >> ● Check connector housings for disconnected or loose terminals.
- Repair harness or connector.


A
B
C
D
E
F
G
H
I
J
L
M

AV

AUDIO

4. FRONT SPEAKER SIGNAL CHECK


1. Connect audio unit connector and BOSE speaker amp. connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector terminals with CONSULT-II or oscilloscope.
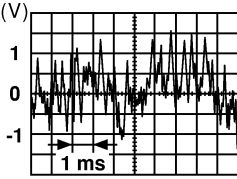
| Terminals | | | | Condition | Reference signal |
|-----------|----------|-----------|----------|----------------------|---|
| (+) | | (-) | | | |
| Connector | Terminal | Connector | Terminal | | |
| M43 | 2 | M43 | 1 | Receive audio signal |  |
| | 4 | | 3 | | |

SKIA0177E

OK or NG

- OK >> Replace BOSE speaker amp. Refer to [AV-61, "BOSE SPEAKER AMP."](#)
- NG >> Replace audio unit. Refer to [AV-61, "Removal and Installation"](#).

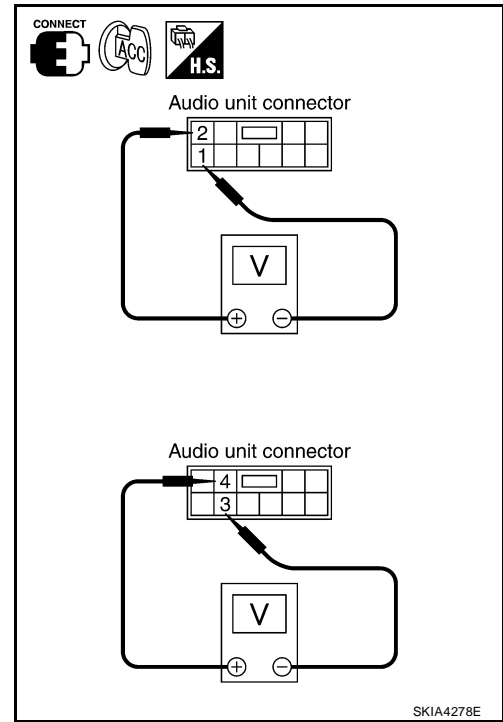

AUDIO

Sound Is Not Heard From Rear Door Speaker or Rear Door Tweeter (BOSE System)

EKS00G5U

1. HARNESS CHECK

1. Disconnect BOSE speaker amp. connector B75 and suspect speaker connector.
2. Check continuity between BOSE speaker amp. harness connector terminal B75 and suspect speaker harness connector terminal.

| Terminals | | | | Continuity |
|-------------------|----------|--------------------|----------|------------|
| BOSE speaker amp. | | Speaker or tweeter | | |
| Connector | Terminal | Connector | Terminal | |
| B75 | 9 | D207 | + | Yes |
| | 10 | | - | |
| | 11 | D307 | + | |
| | 12 | | - | |
| | 9 | D208 | + | |
| | 10 | | - | |
| | 11 | D308 | + | |
| | 12 | | - | |


3. Check continuity between BOSE speaker amp. harness connector B75 terminal and ground.

| Terminals | | | Continuity |
|-------------------|----------|--------|------------|
| BOSE speaker amp. | | — | |
| Connector | Terminal | | |
| B75 | 9 | Ground | No |
| | 10 | | |
| | 11 | | |
| | 12 | | |

OK or NG

OK >> GO TO 2.

- NG >> ● Check connector housings for disconnected or loose terminals.
 ● Repair harness or connector.

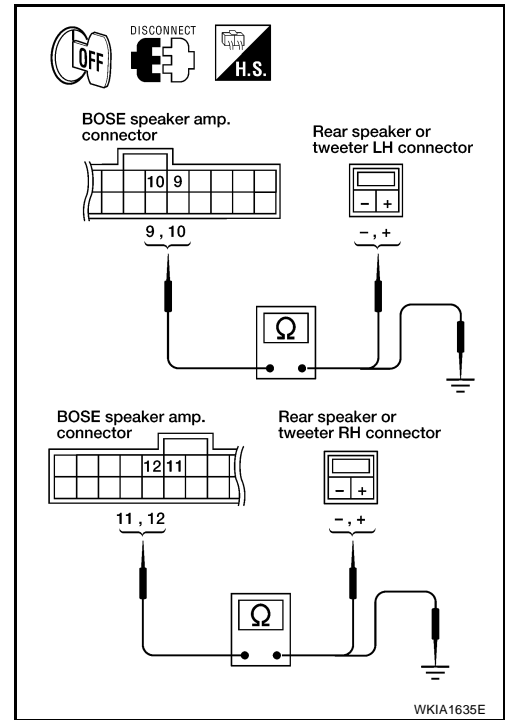


WKIA1635E

AUDIO

2. REAR SPEAKER SIGNAL CHECK


1. Connect BOSE speaker amp. connector B75 and suspect speaker connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between BOSE speaker amp. harness connector B75 terminals with CONSULT-II or oscilloscope.
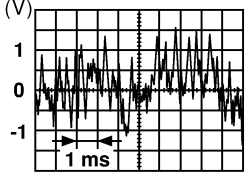
| Terminals | | | | Condi- tion | Reference signal |
|---------------------|----------|---------------------|----------|----------------------------|---|
| (+) | | (-) | | | |
| Con- nec- tor | Terminal | Con- nec- tor | Terminal | | |
| B75 | 9 | B75 | 10 | Receive audio signal |  |
| | 11 | | 12 | | |

SKIA0177E

OK or NG

- OK >> Replace suspect speaker. Refer to [AV-63, "REAR DOOR SPEAKER"](#).
- NG >> GO TO 3.

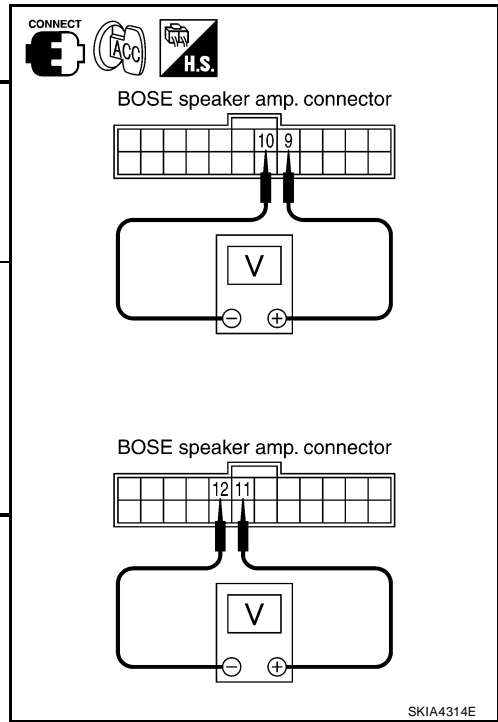

AUDIO


3. HARNESS CHECK

1. Disconnect audio unit connector M44 and BOSE speaker amp. connector B75.
2. Check continuity between audio unit harness connector M44 terminals and BOSE speaker amp. harness connector B75 terminals.

| Terminals | | | | Continuity |
|------------|----------|-------------------|----------|------------|
| Audio unit | | BOSE speaker amp. | | |
| Connector | Terminal | Connector | Terminal | |
| M44 | 13 | B75 | 25 | Yes |
| | 14 | | 26 | |
| | 15 | | 23 | |
| | 16 | | 24 | |

3. Check continuity between audio unit harness connector terminal and ground.

| Terminals | | | Continuity |
|------------|----------|--------|------------|
| Audio unit | | — | |
| Connector | Terminal | | |
| M44 | 13 | Ground | No |
| | 14 | | |
| | 15 | | |
| | 16 | | |

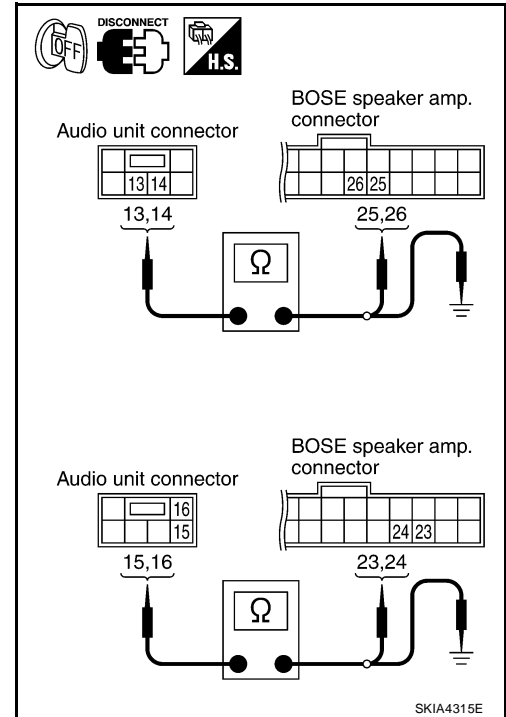

OK or NG

- OK >> GO TO 4.
 NG >> ● Check connector housings for disconnected or loose terminals.
 ● Repair harness or connector.


A
B
C
D
E
F
G
H
I
J
L
M


AV

AUDIO

4. REAR SPEAKER SIGNAL CHECK

1. Connect audio unit connector M44 and BOSE speaker amp. connector B75.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M44 terminals with CONSULT-II or oscilloscope.
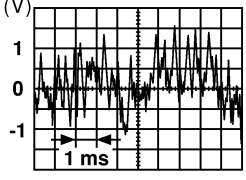
| Terminals | | | | Condition | Reference signal |
|---------------|----------|---------------|----------|----------------------|---|
| (+) | | (-) | | | |
| Con-connector | Terminal | Con-connector | Terminal | | |
| M44 | 14 | M44 | 13 | Receive audio signal |  |
| | 16 | | 15 | | |

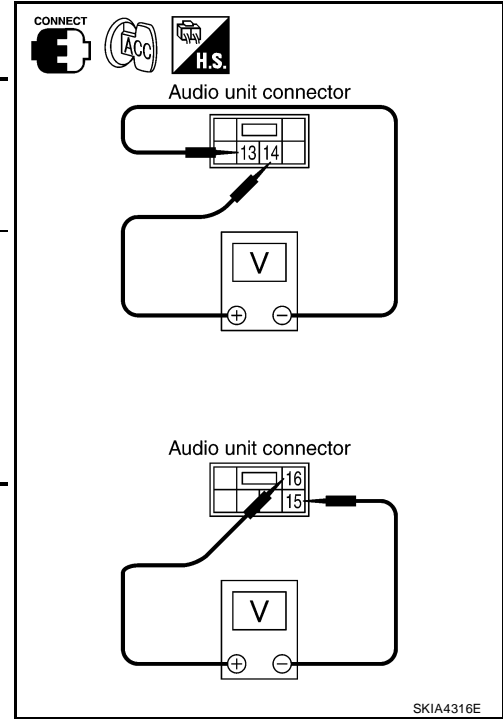

OK or NG

- OK >> Replace BOSE speaker amp. Refer to [AV-61, "BOSE SPEAKER AMP."](#)
- NG >> Replace audio unit. Refer to [AV-61, "Removal and Installation"](#).

Sound Is Not Heard From Subwoofer (BOSE System)

EKS00G5V

1. CHECK FUSE

Check that the following fuse is not blown.

| Unit | Terminal | Signal name | Fuse No. |
|-----------|----------|---------------|----------|
| Subwoofer | 6 | Battery power | 17 |

OK or NG

- OK >> GO TO 2.
- NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).


2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect subwoofer connector.
2. Check voltage between the subwoofer and ground.

| Unit | Terminal No. | | | OFF | ACC | ON |
|-----------|--------------|----------|--------|-----------------|-----------------|-----------------|
| | (+) | | (-) | | | |
| | Connector | Terminal | | | | |
| Subwoofer | B72 | 6 | Ground | Battery voltage | Battery voltage | Battery voltage |

OK or NG

- OK >> GO TO 3.
- NG >> ● Check connector housings for disconnected or loose terminals.
● Repair harness or connector.

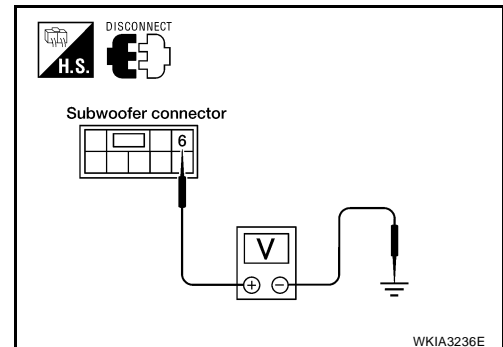

AUDIO


3. GROUND CIRCUIT CHECK

Check continuity between subwoofer harness connector B72 terminal 5 and ground.

Continuity should exist.

OK or NG

- OK >> GO TO 4.
 NG >> ● Check connector housings for disconnected or loose terminals.
 ● Repair harness or connector.

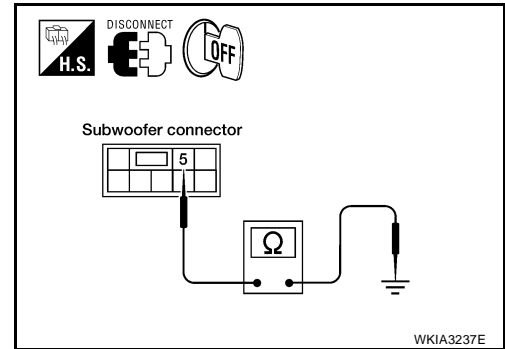


4. HARNESS CHECK

1. Disconnect BOSE speaker amp. connectors B74 and B75 and subwoofer connector B72.
2. Check continuity between BOSE speaker amp. and subwoofer.

| A | | B | | Continuity |
|------------------------|----------|----------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| BOSE speaker amp.: B75 | 22 | Subwoofer: B72 | 4 | Yes |

| C | | B | | Continuity |
|------------------------|----------|----------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| BOSE speaker amp.: B74 | 3 | Subwoofer: B72 | 1 | Yes |
| | 19 | | 2 | |

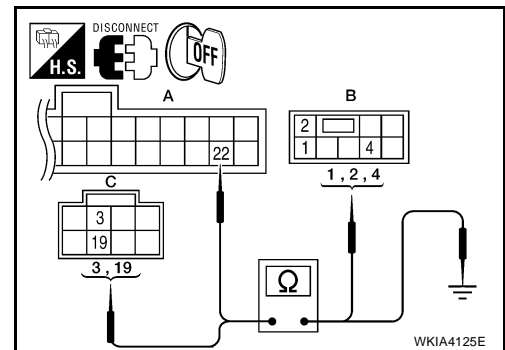

3. Check continuity between BOSE speaker amp. and ground.

| A | | Ground | Continuity |
|------------------------|----------|--------|------------|
| Connector | Terminal | | |
| BOSE speaker amp.: B75 | 22 | | No |

| C | | Ground | Continuity |
|------------------------|----------|--------|------------|
| Connector | Terminal | | |
| BOSE speaker amp.: B74 | 3 | | No |
| | 19 | | |

OK or NG

- OK >> GO TO 5.
 NG >> ● Check connector housings for disconnected or loose terminals.
 ● Repair harness or connector.

A
B
C
D
E
F
G
H
I
J
L
M

AV

AUDIO


5. CHECK SUBWOOFER AMP. ON SIGNAL

- Operate system and check voltage between subwoofer harness connector B72 terminal 4 and ground.

Voltage : More than approx. 6.5V

OK or NG


- OK >> GO TO 6.
 NG >> Replace BOSE speaker amp. Refer to [AV-61, "BOSE SPEAKER AMP."](#)

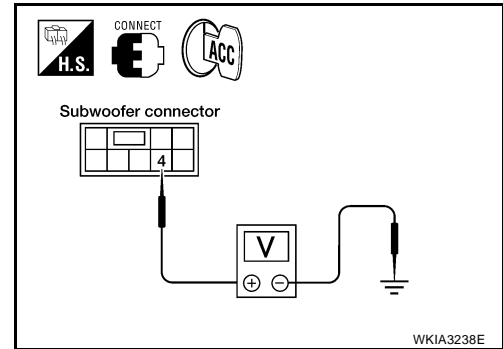

6. SUBWOOFER SIGNAL CHECK

- Connect BOSE speaker amp. connector and subwoofer connector.
- Turn ignition switch to ACC.
- Check the signal between BOSE speaker amp. terminals with CONSULT-II or oscilloscope.

| A | | | | Condi- tion | Reference signal |
|--------------------------------------|---------------|--------------------------------------|---------------|----------------------------|---|
| (+) | | (-) | | | |
| Con- nector | Termi- nal | Con- nector | Termi- nal | | |
| BOSE spea- ker amp.: B74 | 19 | BOSE spea- ker amp.: B74 | 3 | Receive audio signal | <p style="text-align: right; font-size: small;">SKIA0177E</p> |

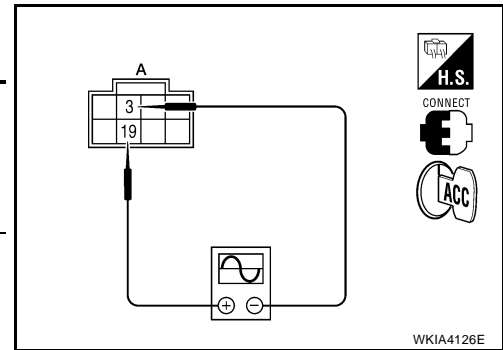

OK or NG

- OK >> Replace subwoofer. Refer to [AV-64, "SUBWOOFER \(BOSE SYSTEM\)"](#).
 NG >> Replace BOSE speaker amp. Refer to [AV-61, "BOSE SPEAKER AMP."](#)

AUDIO


EKS00G5W

Removal and Installation

AUDIO UNIT - WITH NAVI

Removal

1. Remove cluster lid C. Refer to [IP-11, "CLUSTER LID C -WITHOUT NAVIGATION SYSTEM"](#) .
2. Remove the audio unit screws, using power tool.
3. Remove audio unit and disconnect audio unit connectors.

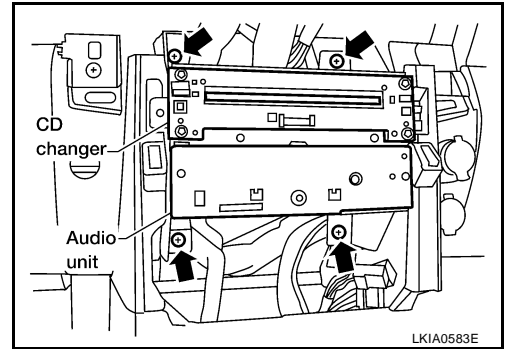


Installation

Installation is in the reverse order of removal.

AUDIO UNIT - WITHOUT NAVI

Removal

1. Remove cluster lid C. Refer to [IP-11, "CLUSTER LID C -WITHOUT NAVIGATION SYSTEM"](#) .
2. Remove the audio unit screws, using power tool.
3. Remove audio unit and disconnect audio unit connectors.

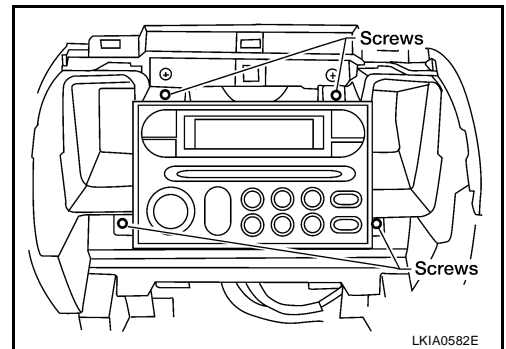


Installation

Installation is in the reverse order of removal.

AV SWITCH

Removal

1. Remove cluster lid C. Refer to [IP-11, "CLUSTER LID C -WITHOUT NAVIGATION SYSTEM"](#) .
2. Remove the AV switch screws.
3. Remove AV switch.

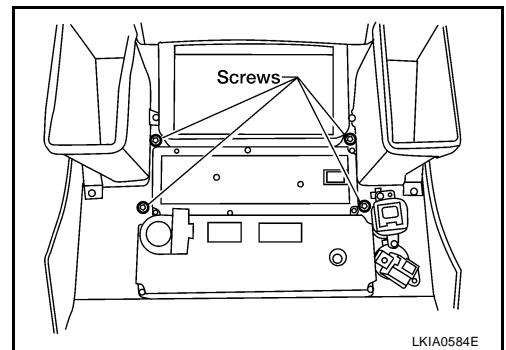

Installation

Installation is in the reverse order of removal.

BOSE SPEAKER AMP.


Removal

1. Remove driver seat. Refer to [SE-84, "FRONT SEAT"](#) .

A
B
C
D
E
F
G
H
I
J
AV
L
M

AUDIO

2. Remove kick shield screws, using power tool.
 - ⇒: Vehicle front
3. Disconnect Bose speaker amp. connectors (1) and remove Bose speaker amp.

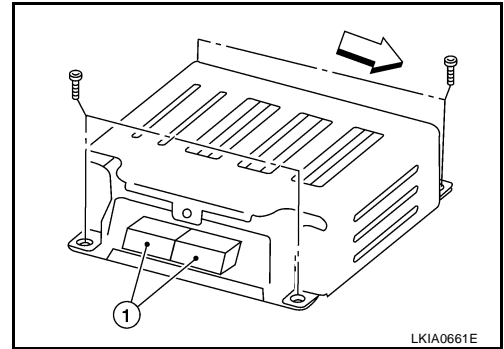


Installation

Installation is in the reverse order of removal.

FRONT DOOR SPEAKER

Removal

1. Remove front door finisher. Refer to [EI-26, "DOOR FINISHER"](#).
2. Remove the front door speaker screws.
3. Remove front door speaker and disconnect front door speaker connector.

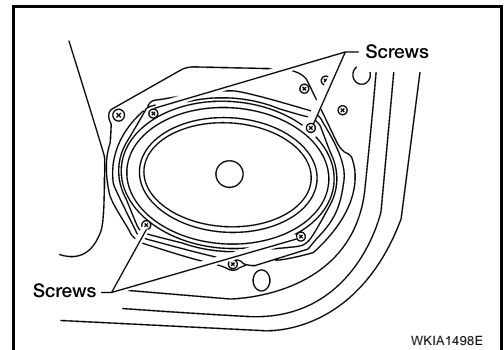

Installation

Installation is in the reverse order of removal.

FRONT TWEETER


Removal

1. Remove the front tweeter grille.
2. Remove the front tweeter screws.

NOTE:

The standard front tweeter has four screws, the optional Bose front tweeter has two screws as shown.

3. Remove front tweeter and disconnect front tweeter connector.

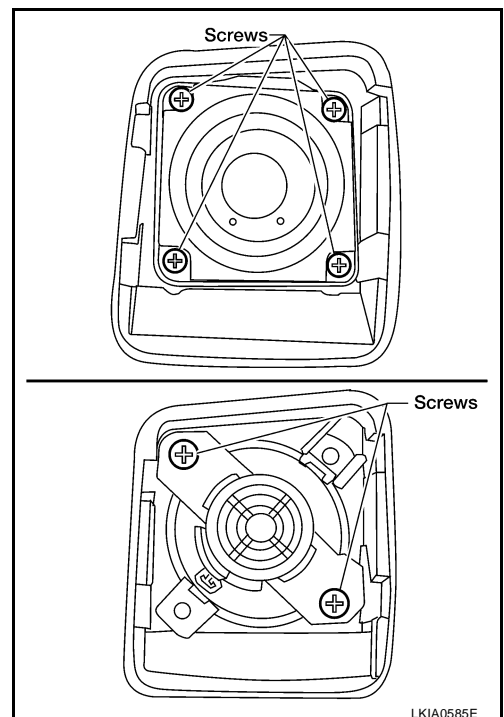

AUDIO


Installation

Installation is in the reverse order of removal.

REAR DOOR SPEAKER

Removal

1. Remove the rear door finisher. Refer to [EI-27, "REAR DOOR"](#) .
2. Remove the rear door speaker screws.
3. Remove rear door speaker and disconnect rear door connector.

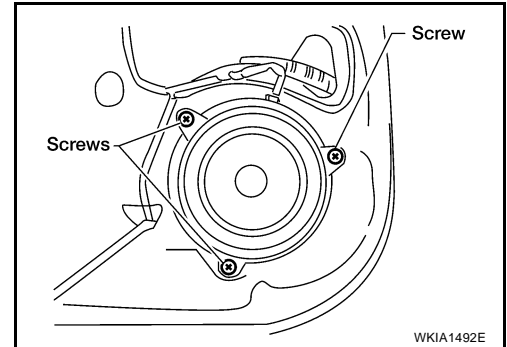


Installation

Installation is in the reverse order of removal.

REAR DOOR TWEETER

Removal

1. Remove rear door finisher. Refer to [EI-27, "REAR DOOR"](#) .
2. Remove the rear door tweeter screws.
3. Remove rear door tweeter.

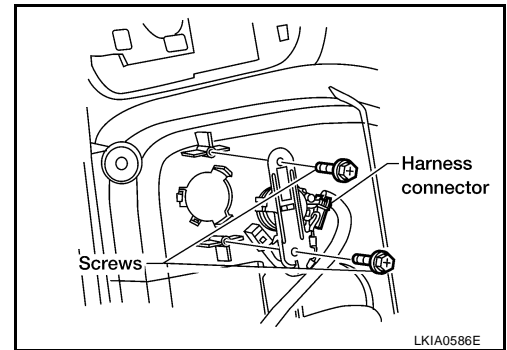


Installation

Installation is in the reverse order of removal.

SATELLITE RADIO ANTENNA

Removal

1. Lower headlining. Refer to [EI-31, "HEADLINING"](#) .
2. Disconnect satellite radio antenna connector.
3. Remove satellite radio antenna nut.
4. Remove satellite radio antenna.

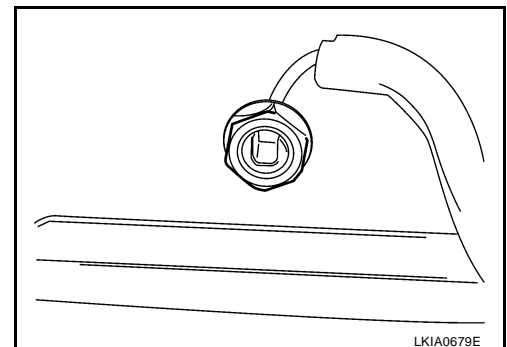

Installation


Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
AV
L
M

AUDIO

SATELLITE RADIO TUNER

1. Disconnect battery negative terminal.
2. Disconnect satellite radio tuner connectors.
3. Remove satellite radio tuner screws (A), and remove satellite radio tuner from above the parking brake pedal.

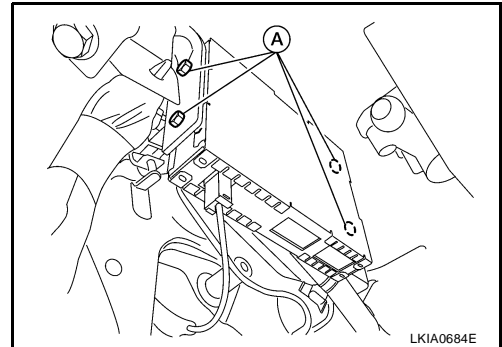


Installation

Installation is in the reverse order of removal.

STEERING WHEEL AUDIO CONTROL SWITCHES

Removal


1. Remove driver air bag module. Refer to [SRS-38, "Removal and Installation"](#).
2. Remove steering wheel audio control switch assembly screws.
3. Disconnect steering wheel audio control switches connector and remove steering wheel audio control switches.

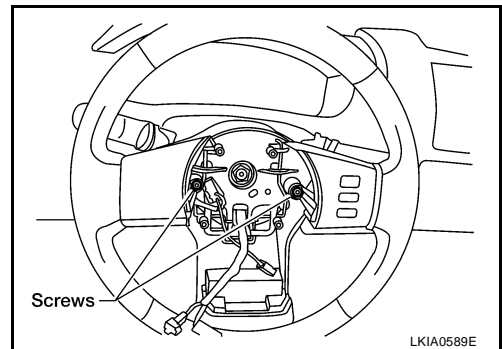

Installation

Installation is in the reverse order of removal.

SUBWOOFER (BOSE SYSTEM)

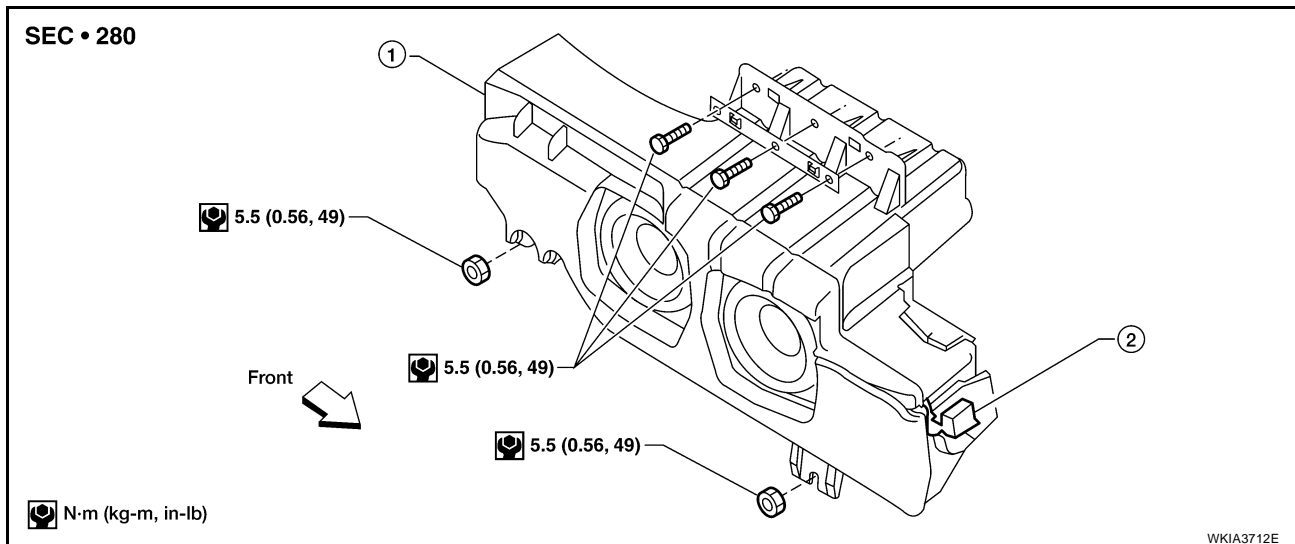

1. Subwoofer (Bose system)
2. Subwoofer (Bose system) connector

Removal

1. Disconnect battery negative terminal.
2. Remove the luggage side lower finisher LH. Refer to [EI-33, "LUGGAGE FLOOR TRIM"](#).

AUDIO

3. Remove subwoofer bolts and nuts.
4. Disconnect subwoofer connector and remove the subwoofer.

Installation

Installation is in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

AV

L

M

AUDIO ANTENNA

AUDIO ANTENNA

PFP:28200

System Description

EKS00G61

With the ignition switch in ACC or ON, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to audio unit terminal 10.

Ground is supplied through the case of the antenna amp.

When the audio unit switch is turned ON, antenna signal is supplied

- through audio unit terminal 5
- to the antenna amp. terminal 1.

Then the antenna amp. is activated.


The amplified radio signals are supplied to the audio unit through the antenna amp.

AUDIO ANTENNA



Wiring Diagram — W/ANT —

EKS00G62

AV-W/ANT-01

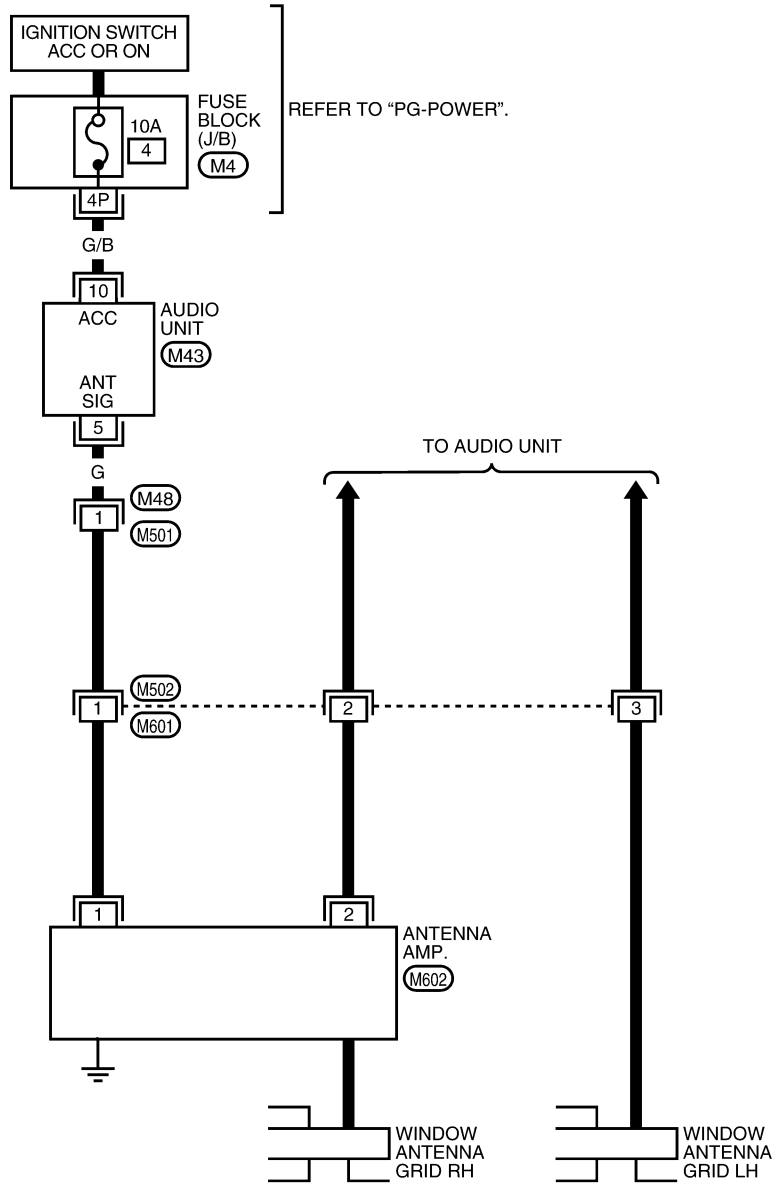

A
B
C
D
E
F
G
H
I
J
AV
L
M




*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA4207E

AUDIO ANTENNA

Location of Antenna

EKS00G63

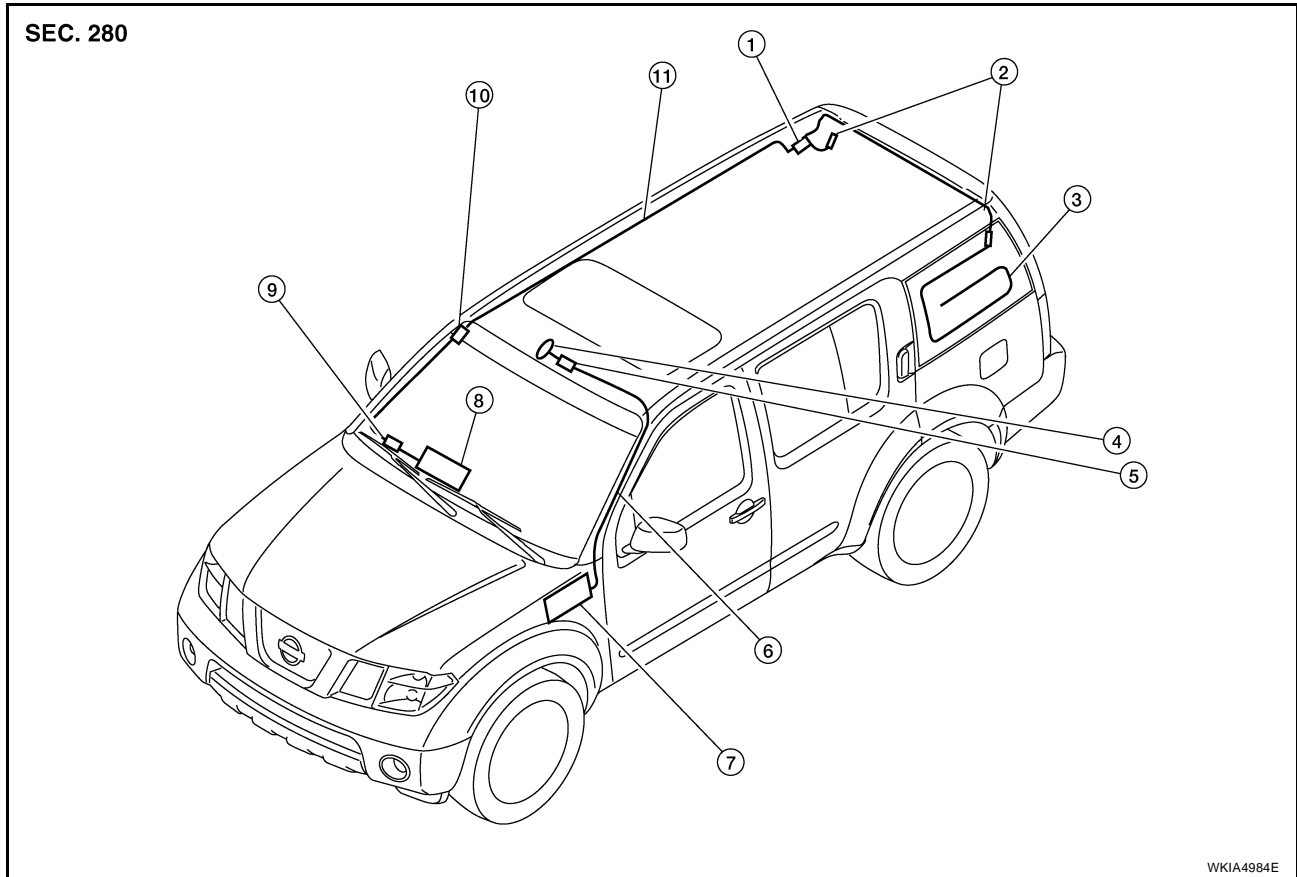


- | | | |
|---------------------------------------|--|-----------------------------------|
| 1. Antenna amp. M602 | 2. Window antenna grid connector bracket | 3. Window antenna grid |
| 4. Satellite antenna M351 | 5. Harness connector M70, M350 | 6. Satellite antenna feeder |
| 7. Satellite radio tuner M41, M129 | 8. Audio unit M43 | 9. Harness connector M48, M501 |
| 10. Harness connector M502, M601 | 11. Antenna feeder | |

Window Antenna Repair ELEMENT CHECK


EKS00G64

1. Attach probe circuit tester (ohm setting) to antenna terminal on each side.

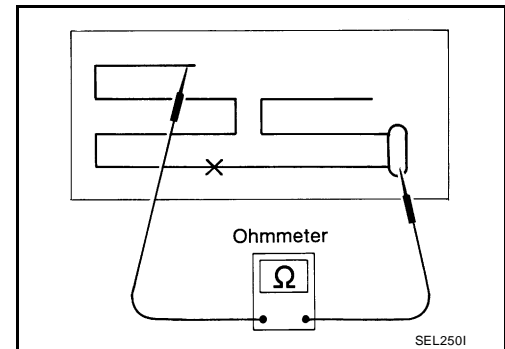


AUDIO ANTENNA


- When measuring continuity, wrap tin foil around the top of probe. Then, press the foil against the wire with your finger.

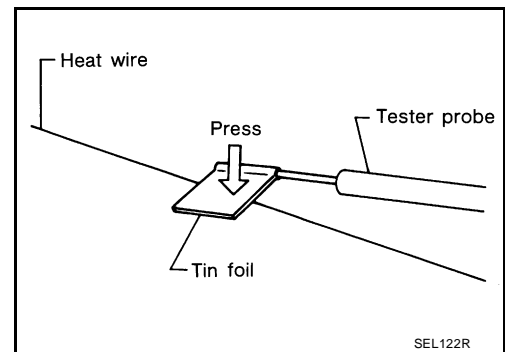

2. If an element is broken, no continuity will exist.

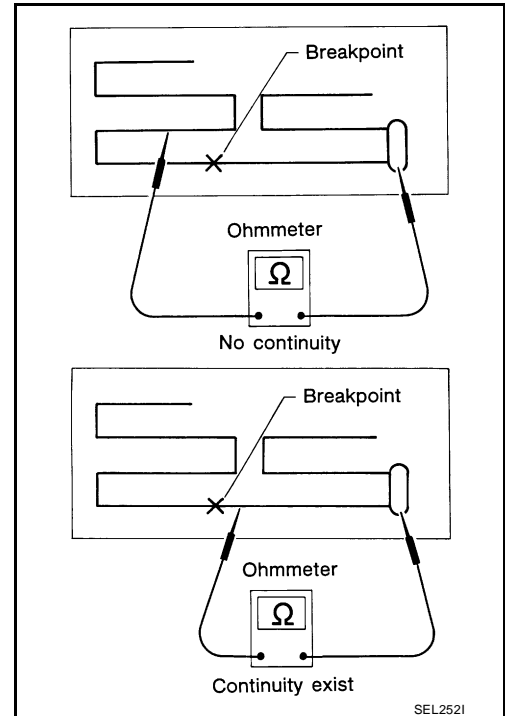

3. To locate a break, move probe along element. Tester indication will change abruptly when probe passes the broken point.

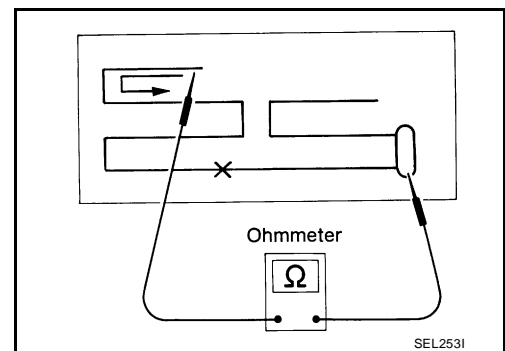

ELEMENT REPAIR

Refer to [GW-88, "Filament Repair"](#) .

A

B

C

D

E

F

G

H

I

J

AV

L

M


DVD ENTERTAINMENT SYSTEM

DVD ENTERTAINMENT SYSTEM

PF28184

Component Parts and Harness Connector Location

EKS00G65

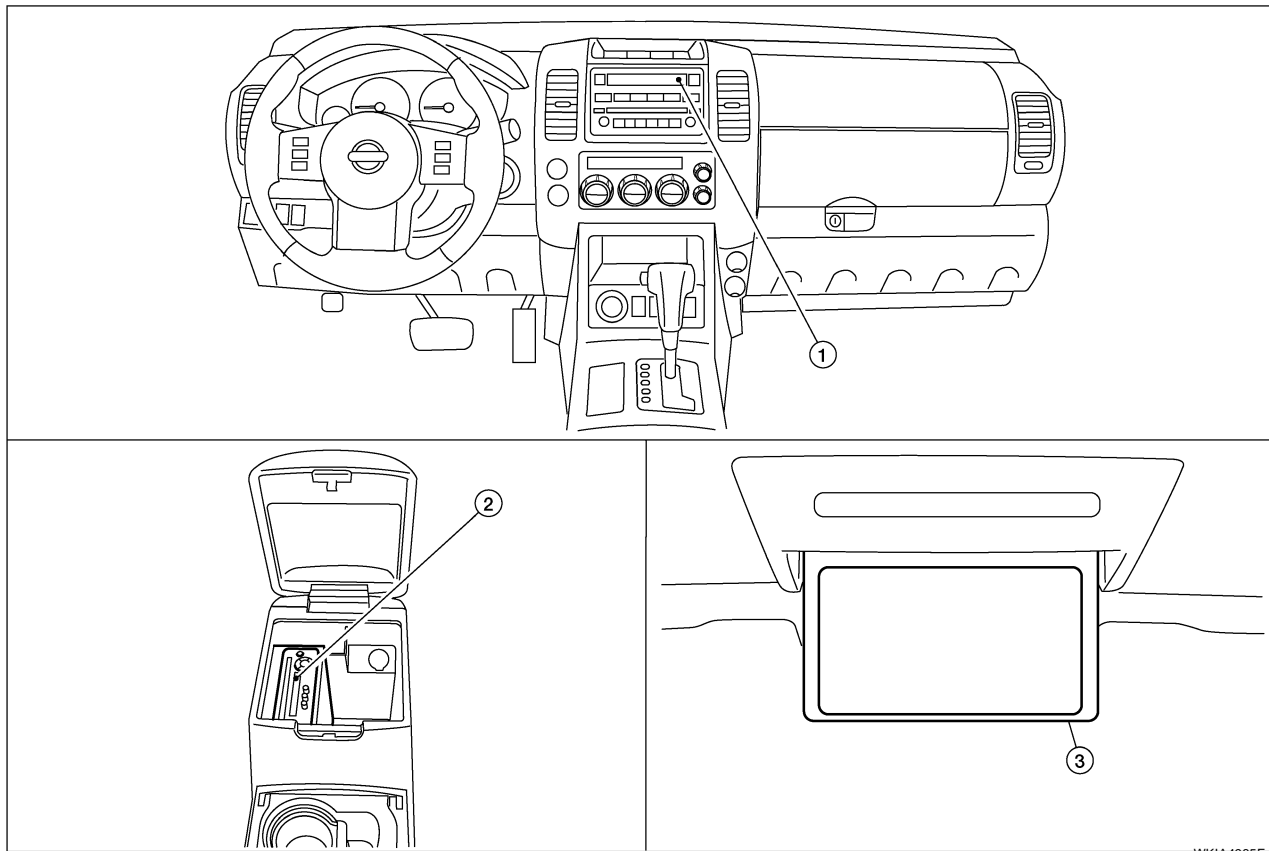

WK1A4985E

1. Audio unit
M46

2. DVD player M205, M206

3. Video monitor
B76

System Description

EKS00G66

Refer to Owner's Manual for DVD entertainment system operating instructions.
Power is supplied at all times

- through 20A fuse (No. 29, located in the fuse and fusible link box)
- to DVD player terminal 16.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to DVD player terminal 15.

Power is also supplied

- from DVD player terminal 32
- to video monitor terminal 16.

Ground is supplied

- to DVD player terminal 22
- through body grounds B7 and B19.

Audio signals are supplied

- through DVD player terminals 1, 2, 3 and 4
- to audio unit terminals 34, 35, 36 and 37.


Video signals are supplied

- through DVD player terminals 23, 24, 29 and 30
- to video monitor terminals 7, 8, 13 and 14.

DVD ENTERTAINMENT SYSTEM

Schematic

EKS00G67



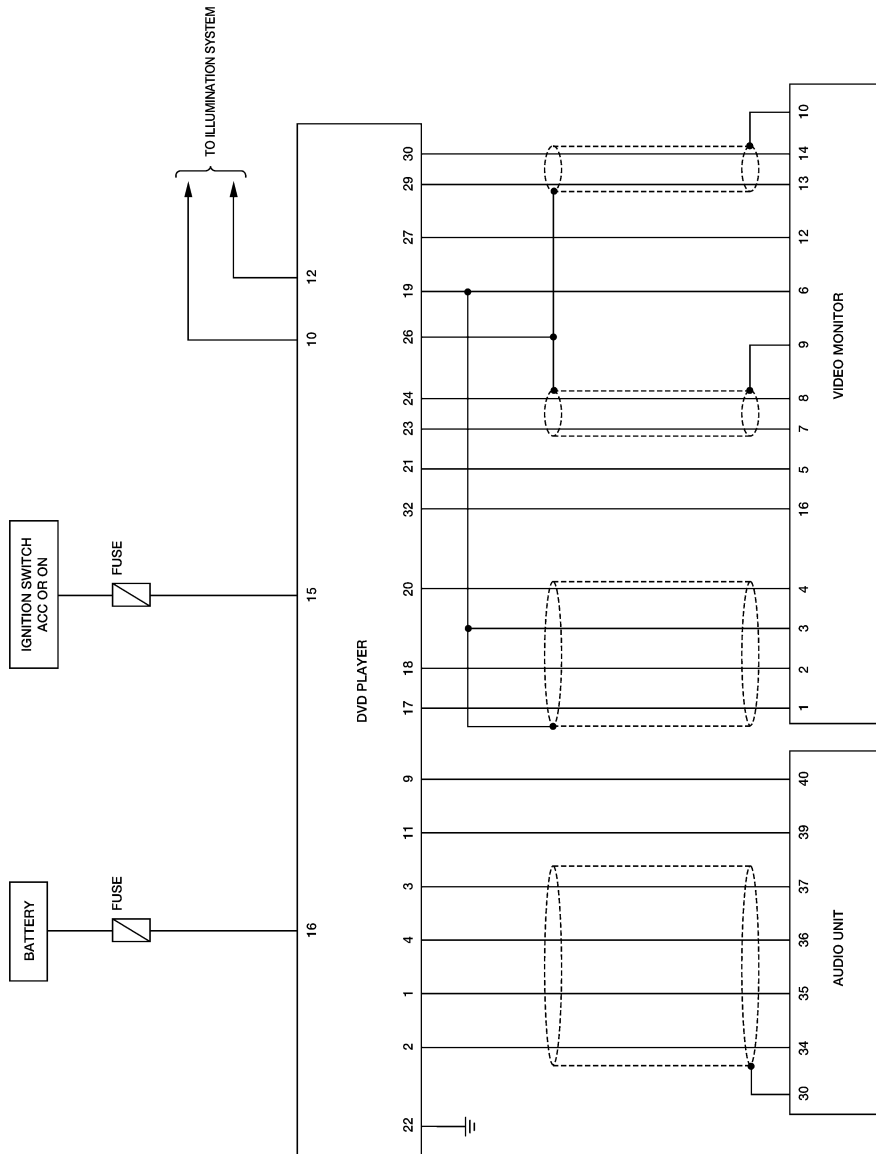


A
B
C
D
E
F
G
H
I
J
AV
L
M

WKWA5384E

DVD ENTERTAINMENT SYSTEM

AV-DVD-02


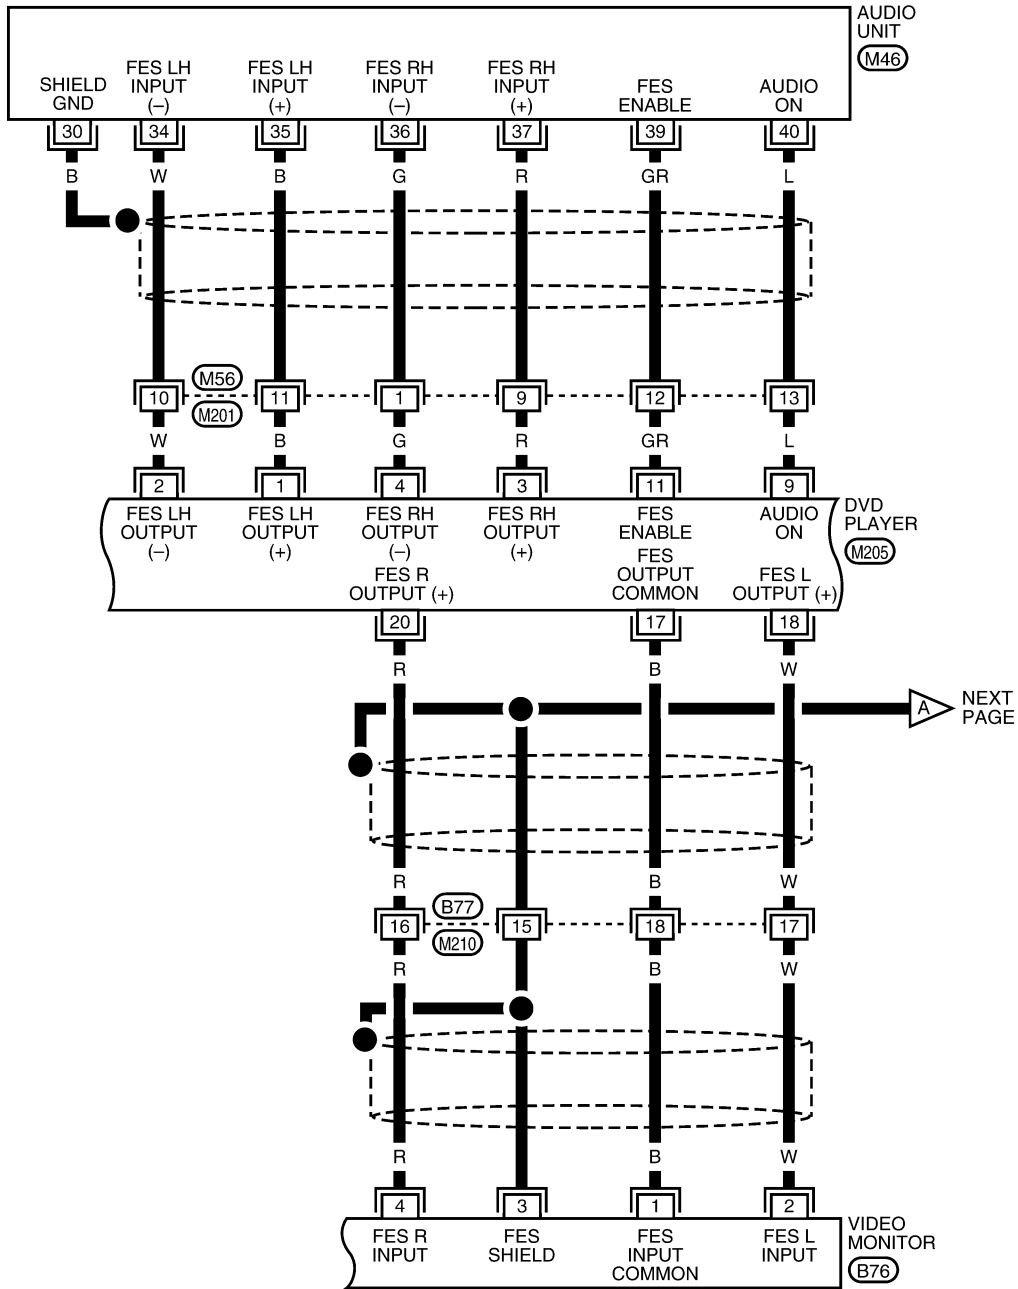


WKWA2002E

DVD ENTERTAINMENT SYSTEM

AV-DVD-03

▬ : DATA LINE

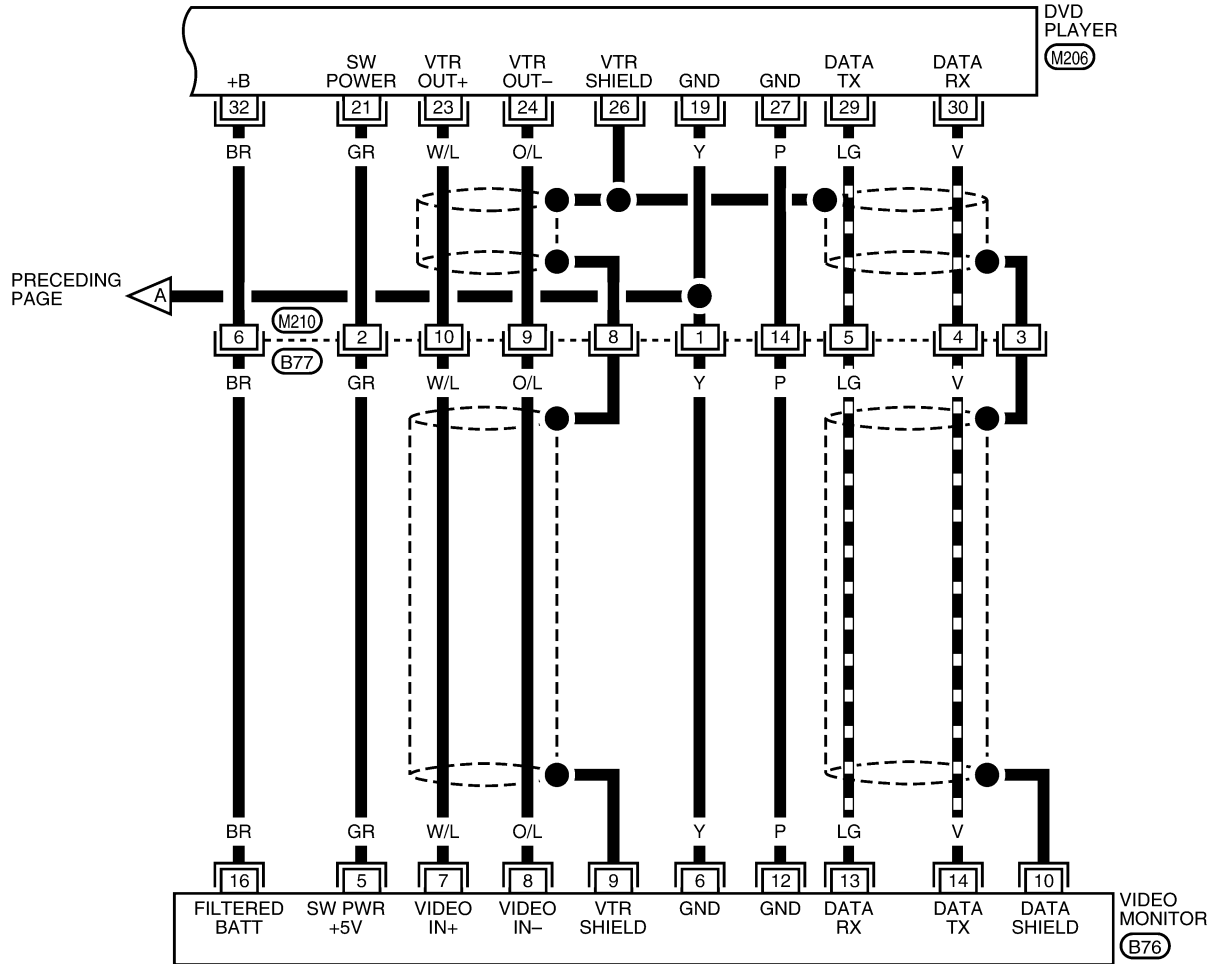

WKWA5386E

DVD ENTERTAINMENT SYSTEM

Trouble Diagnosis

EKS00G69

| Symptom | Possible causes | Repair order |
|---|---|--|
| DVD player inoperative | <ol style="list-style-type: none"> 1. Power supply 2. Ground circuit 3. Audio enable circuit 4. DVD enable signal 5. Audio enable signal 6. DVD player 7. Audio unit | <ol style="list-style-type: none"> 1. Refer to AV-76, "Power Supply Circuit Inspection". 2. Refer to AV-76, "Power Supply Circuit Inspection". 3. Check audio enable circuits for open or short between audio unit terminals 39, 40 and DVD player terminals 11, 9. 4. Push power switch of DVD player and verify approx. 5V is present at terminal 39 of audio unit. 5. Push power switch of DVD player and verify approx. 5V is present at terminal 9 of DVD player. 6. Remove DVD player for repair. 7. Remove audio unit for repair. |
| No sound when playing DVD | <ol style="list-style-type: none"> 1. Audio signal circuits 2. DVD player 3. Audio unit | <ol style="list-style-type: none"> 1. Check audio signal circuits for open or short between DVD player terminals 1, 2, 3 and 4 and audio unit terminals 34, 35, 36 and 37. 2. Remove DVD player for repair. 3. Remove audio unit for repair. |
| Video monitor is inoperative/does not operate properly | <ol style="list-style-type: none"> 1. Power supply 2. Video monitor ground circuit 3. Video circuits 4. Data signal 5. Video monitor 6. DVD player | <ol style="list-style-type: none"> 1. Operate DVD player and verify battery positive voltage is present at terminal 16 of video monitor. Verify approximately 5 volts is present at terminal 5 of video monitor. 2. Check video monitor ground circuits between DVD player terminals 19 and 27 and video monitor terminals 6 and 12. 3. Check video circuits between DVD player terminals 23 and 24 and video monitor terminals 7 and 8. 4. Check data signal circuit for open or short between DVD player terminal 29 and video monitor terminal 13. 5. Remove video monitor for repair. 6. Remove DVD player for repair. |
| DVD remote control is inoperative/does not operate properly | <ol style="list-style-type: none"> 1. Data signal 2. DVD player remote control batteries 3. DVD player remote control 4. Video monitor | <ol style="list-style-type: none"> 1. Check data signal circuit for open or short between DVD player terminal 30 and video monitor terminal 14. 2. Replace DVD player remote control batteries. 3. Replace DVD player remote control. 4. Remove video monitor for repair. |
| Headphones inoperative | <ol style="list-style-type: none"> 1. Headphone batteries 2. Headphones | <ol style="list-style-type: none"> 1. Replace headphone batteries. 2. Replace headphones. |
| Snowy video/poor audio | <ol style="list-style-type: none"> 1. Harness or connectors 2. DVD player | <ol style="list-style-type: none"> 1. Check harness and connectors for open or short. 2. Check DVD player. |
| Snowy video (audio OK) | <ol style="list-style-type: none"> 1. Harness or connectors 2. DVD player | <ol style="list-style-type: none"> 1. Check harness and connectors for open or short. 2. Check DVD player. |
| No video (audio OK) | <ol style="list-style-type: none"> 1. Harness or connectors 2. DVD player 3. Video monitor | <ol style="list-style-type: none"> 1. Check harness and connectors for open or short. 2. Check DVD player. 3. Check video monitor. |
| Dim video (audio OK) | <ol style="list-style-type: none"> 1. Harness or connectors 2. DVD player 3. Video monitor | <ol style="list-style-type: none"> 1. Check harness and connectors for open or short. 2. Check DVD player. 3. Check video monitor. |

A
B
C
D
E
F
G
H
I
J

AV

L

M

DVD ENTERTAINMENT SYSTEM

EKS00G6A

Power Supply Circuit Inspection

1. CHECK FUSES

Check that the following fuses are not blown.

| Unit | Terminals | Signal name | Fuse No. |
|------------|-----------|---------------------------|----------|
| DVD player | 16 | Battery power | 29 |
| | 15 | Ignition switch ACC or ON | 4 |

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect DVD player connector M205.
2. Check voltage between the DVD player and ground.

| Unit | Terminal No. | | | OFF | ACC | ON |
|------------|--------------|----------|--------|-----------------|-----------------|-----------------|
| | (+) | | (-) | | | |
| | Connector | Terminal | | | | |
| DVD player | M205 | 16 | Ground | Battery voltage | Battery voltage | Battery voltage |
| | | 15 | | 0V | Battery voltage | Battery voltage |

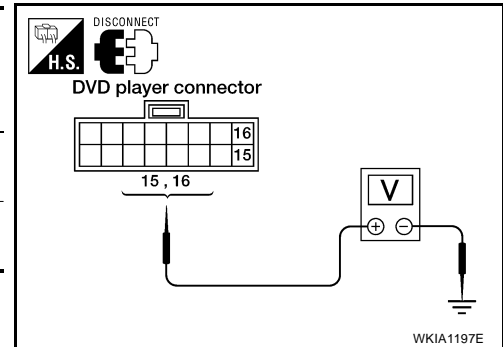

OK or NG

OK >> GO TO 3.

NG >> ● Check connector housings for disconnected or loose terminals.
● Repair harness or connector.

3. GROUND CIRCUIT CHECK


Check continuity between DVD player harness connector M206 terminal 22 and ground.

Continuity should exist.

OK or NG

OK >> Inspection End.

NG >> ● Check connector housings for disconnected or loose terminals.
● Repair harness or connector.

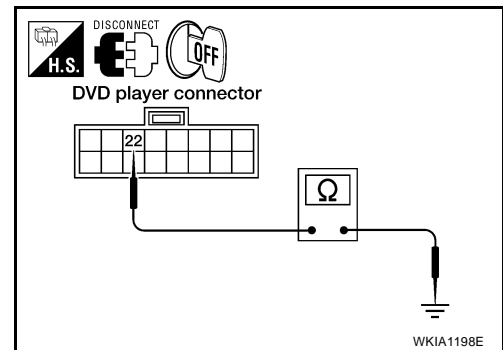

DVD ENTERTAINMENT SYSTEM


EKS00G6B

Removal and Installation

DVD PLAYER

Removal

1. Disconnect battery negative terminal.
2. Remove the center console assembly. Refer to [IP-18, "Center Console"](#) .
3. Remove the DVD player screws.
4. Disconnect the DVD player connectors, then remove from the center console assembly.

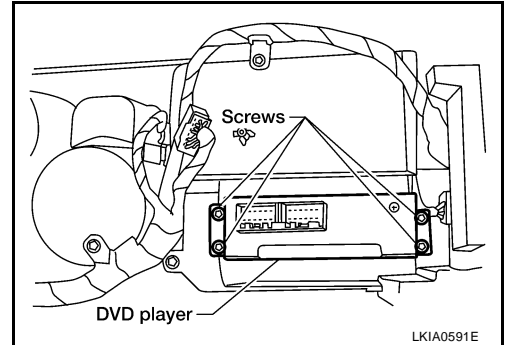


Installation

Installation is in reverse order of removal.

VIDEO MONITOR

Removal

1. Release the clips and remove DVD video monitor finisher from headlining.
2. Press the release tabs and remove the cover.
3. Remove the video monitor screws.
4. Gently lower the assembly and disconnect the connector, then remove the video monitor from the headlining.

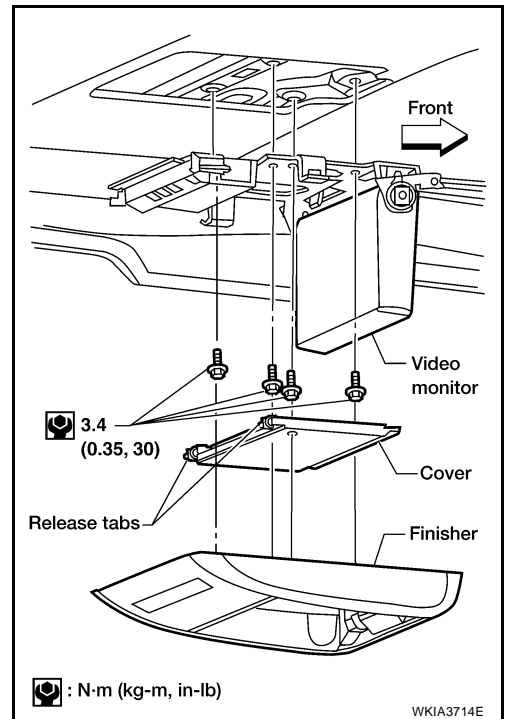

Installation

Installation is in reverse order of removal.

A
B
C
D
E
F
G
H
I
J
AV
L
M

NAVIGATION SYSTEM

PFP:25915

System Description


EKS00G6D

NOTE:

Refer to NAVI System Owner's Manual for system operation.


The navigation system periodically calculates the vehicle's current position according to the following three signals: Travel distance of the vehicle as determined by the vehicle speed sensor, turning angle of the vehicle as determined by the gyroscope (angular velocity sensor), and the direction of vehicle travel as determined by the GPS antenna (GPS information).

The current position of the vehicle is then identified by comparing the calculated vehicle position with map data read from the map DVD-ROM, which is stored in the DVD-ROM drive (map-matching), and indicated on the screen with a current-location mark.

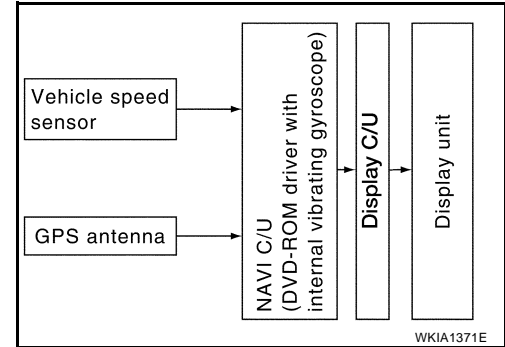

By comparing the vehicle position detection results found by the GPS and by map-matching, more accurate vehicle position data can be used.

The current vehicle position will be calculated by detecting the distance the vehicle moved from the previous calculation point and its direction.

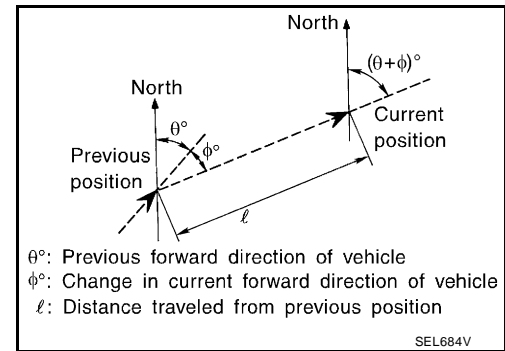

TRAVEL DISTANCE

Travel distance calculations are based on the vehicle speed sensor input signal. Therefore, the calculation may become incorrect as the tires wear down. To prevent this, an automatic distance fine adjustment function has been adopted. Adjustments can be made in extreme cases such as driving with tire chain fitted on tires. Refer to [AV-108, "Confirmation/Adjustment Mode"](#).

TRAVEL DIRECTION

Change in the travel direction of the vehicle is calculated by a gyroscope (angular velocity sensor) and a GPS antenna (GPS information). As the gyroscope and GPS antenna have both merit and demerit, input signals from them are prioritized in each situation. However, this order of priority may change in accordance with more detailed travel conditions so that the travel direction is detected more accurately.

| Type | Advantage | Disadvantage |
|-------------------------------------|--|---|
| Gyroscope (angular velocity sensor) | <ul style="list-style-type: none"> Can detect the vehicle's turning angle quite accurately. | <ul style="list-style-type: none"> Direction errors may accumulate when the vehicle is driven for long distances without stopping. |
| GPS antenna (GPS information) | <ul style="list-style-type: none"> Can detect the vehicle's travel direction (North/South/East/West). | <ul style="list-style-type: none"> Correct direction cannot be detected when the vehicle speed is low. |

NAVIGATION SYSTEM

MAP-MATCHING



Map-matching is a function that repositions the vehicle on the road map when a new location is judged to be the most accurate. This is done by comparing the current vehicle position, calculated by the method described in the position detection principle, with the road map data around the vehicle, read from the map DVD-ROM stored in the DVD-ROM drive.

Therefore, the vehicle position may not be corrected after the vehicle is driven over a certain distance or time in which GPS information is hard to receive. In this case, the current-location mark on the display must be corrected manually.


CAUTION:

The road map data is based on data stored in the map DVD-ROM.

- In map-matching, alternative routes to reach the destination will be shown and prioritized, after the road on which the vehicle is currently driven has been judged and the current-location mark has been repositioned.
If there is an error in distance and/or direction, the alternative routes will be shown in different order of priority, and the wrong road can be avoided.
If two roads are running in parallel, they are of the same priority. Therefore, the current-location mark may appear on either of them alternately, depending on maneuvering of the steering wheel and configuration of the road.

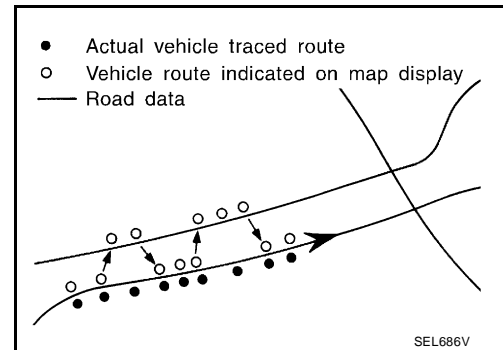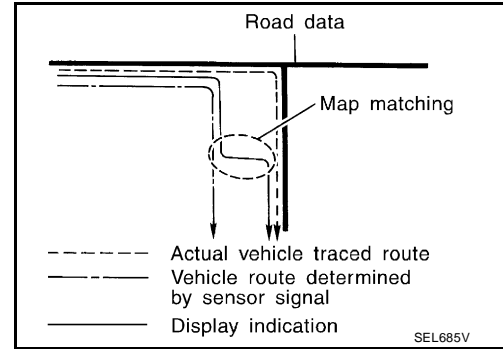

- Map-matching does not function correctly when the road on which the vehicle is driving is new and not recorded in the map DVD-ROM, or when the road pattern stored in the map data and the actual road pattern are different due to repair.
When driving on a road not present in the map, the map-matching function may find another road and position the current-location mark on it. Then, when the correct road is detected, the current-location mark may leap to it.
- Effective range for comparing the vehicle position and travel direction calculated by the distance and direction with the road data read from the map DVD-ROM is limited. Therefore, when there is an excessive gap between the current vehicle position and the position on the map, correction by map-matching is not possible.

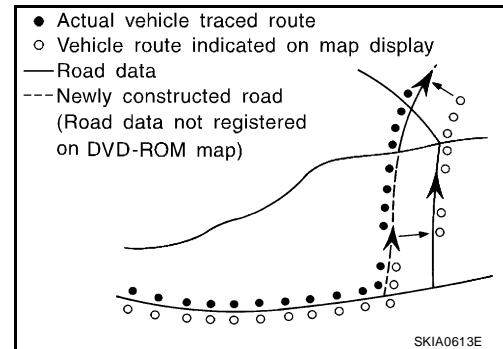


GPS (GLOBAL POSITIONING SYSTEM)

GPS (Global Positioning System) has been developed and controlled by the US Department of Defense. The system utilizes GPS satellite (NAVSTAR), sending out radio waves while flying on an orbit around the earth at the height of approx. 21,000 km (13,000 miles). The GPS receiver calculates the vehicle's position in three dimensions (latitude/longitude/altitude) according to the time lag of the radio waves received from four or more GPS satellites (three-dimensional positioning). If radio waves were received only from three GPS satellites, the GPS receiver calculates the vehicle's position in two dimensions (latitude/longitude), utilizing the altitude data calculated previously by using radio waves from four or more GPS satellites (two-dimensional positioning).

Accuracy of the GPS will deteriorate under the following conditions.

- In two-dimensional positioning, the GPS accuracy will deteriorate when the altitude of the vehicle position changes.
- There may be an error of approximately 10 m (30 ft) in position detected by three-dimensional positioning, which is more accurate than two-dimensional positioning. The accuracy can be even lower depending on the arrangement of the GPS satellites utilized for the positioning.

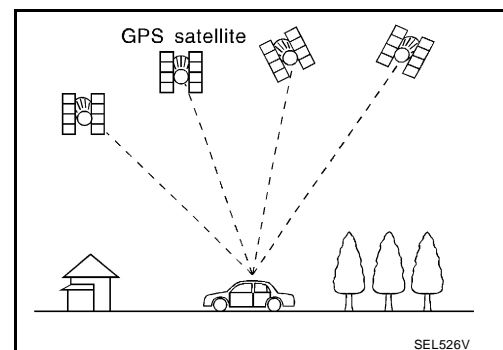


NAVIGATION SYSTEM

- Position detection is not possible when the vehicle is in an area where radio waves from the GPS satellite do not reach, such as in a tunnel, parking lot in a building, and under an elevated highway. Radio waves from the GPS satellites may not be received when some object is located over the GPS antenna.
- Position correction by GPS is not available while the vehicle is stopped.

COMPONENT DESCRIPTION

NAVI Control Unit

- The gyro (angular speed sensor) and the DVD-ROM drive are built-in units that control the navigation functions.
- Signals are received from the gyro, the vehicle speed sensor, and the GPS antenna. Vehicle location is determined by combining this data with the data contained in the DVD-ROM map. Location information is shown on liquid crystal display (display unit).
- Maps, traffic control regulations, and other pertinent information can be easily read from the DVD-ROM disc.
- The oscillator gyro sensor is used to detect changes in vehicle steering angle.

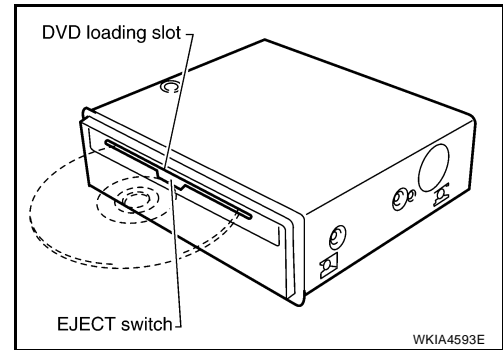

Map DVD-ROM

- The map DVD-ROM has maps, traffic control regulations, and other pertinent information.
- To improve DVD-ROM map matching and route determination functions, the DVD-ROM uses an exclusive Nissan format. Therefore, the use of a DVD-ROM provided by other manufacturers cannot be used.

Display Control Unit

The display control unit coordinates audio and video signals between the NAVI control unit and the display unit.

Display Unit

Displays NAVI system information.

AV Switch

AV switch allows user to input NAVI display settings. Self diagnostics are initiated using AV switch.

GPS Antenna

GPS antenna sends signals to NAVI control unit.

CAN Communication System Description


Refer to [LAN-4, "SYSTEM DESCRIPTION"](#) .

EKS00G6E

NAVIGATION SYSTEM

Component Parts Location

EKS00G6F

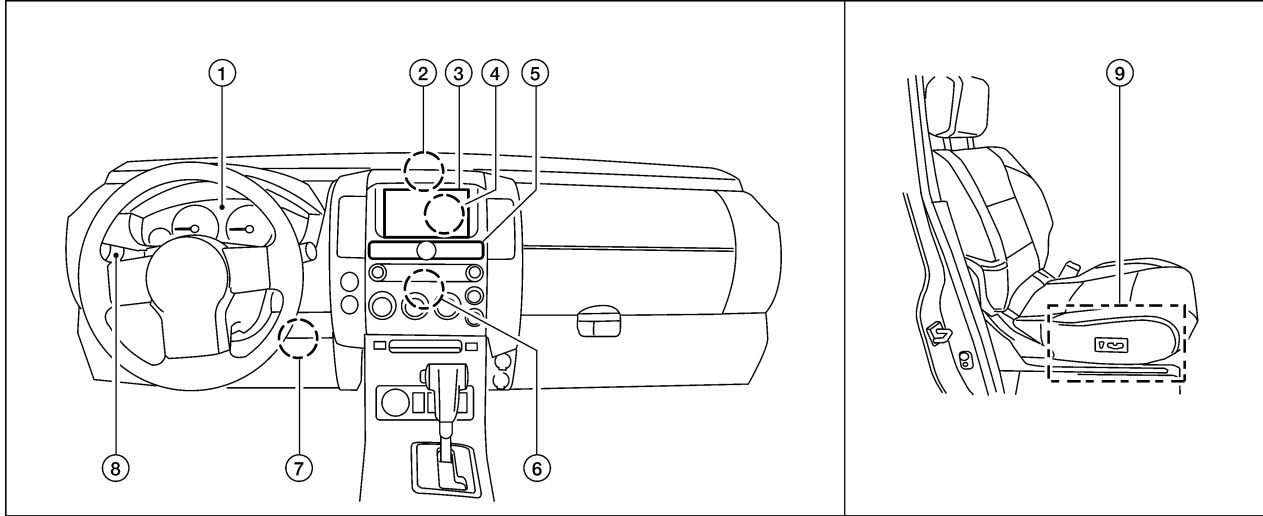

- 1. Combination meter
M24
- 4. Display control unit
M94, M95
- 7. BCM
M18, M20

- 2. GPS Antenna
- 5. AV switch
M98
- 8. Combination switch
M28

- 3. Display unit
M93
- 6. Audio unit
M45
- 9. NAVI control unit
B151, B152, B154
(located under front passenger seat)


A
B
C
D
E
F
G
H
I
J
L
M

AV

NAVIGATION SYSTEM

Schematic

EKS00G66

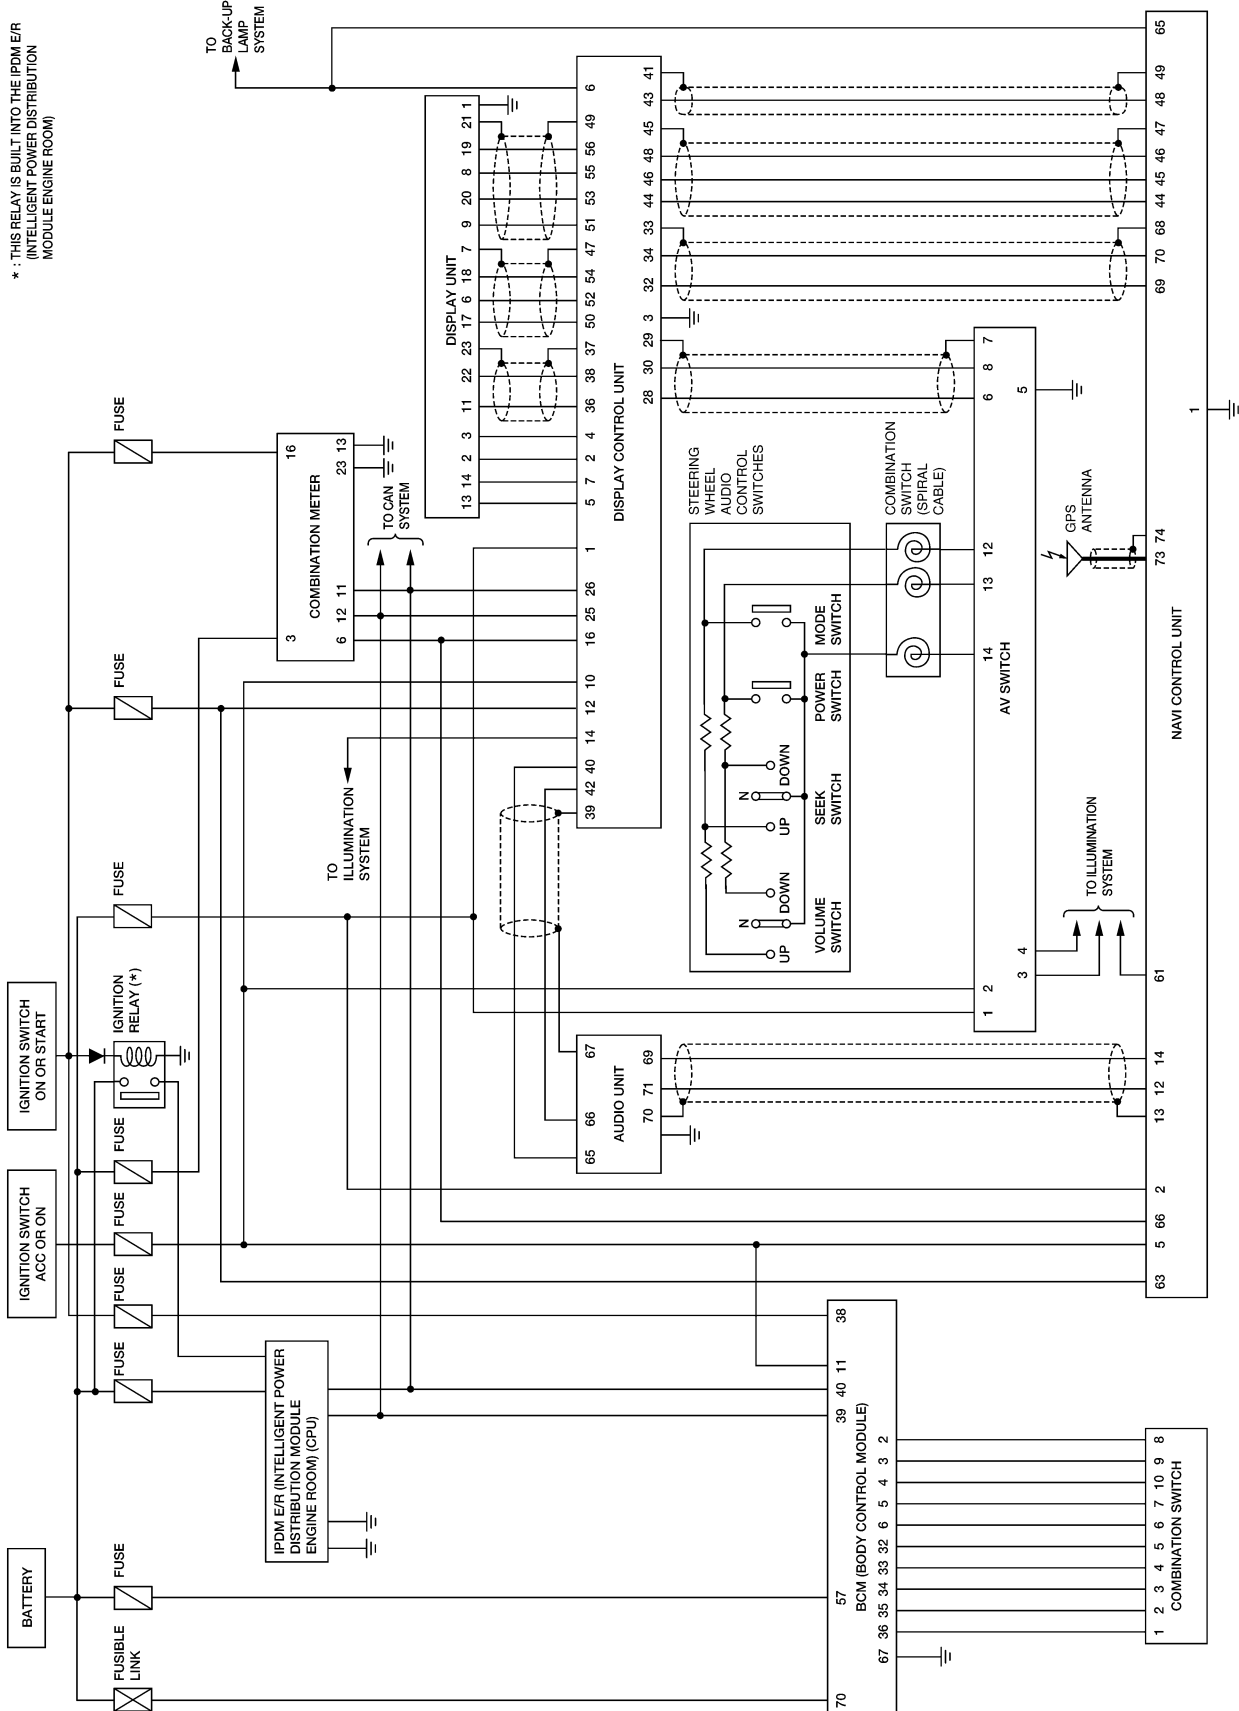


WKWA5452E

NAVIGATION SYSTEM


Wiring Diagram — NAVI —

EKS00G6H


AV-NAVI-01

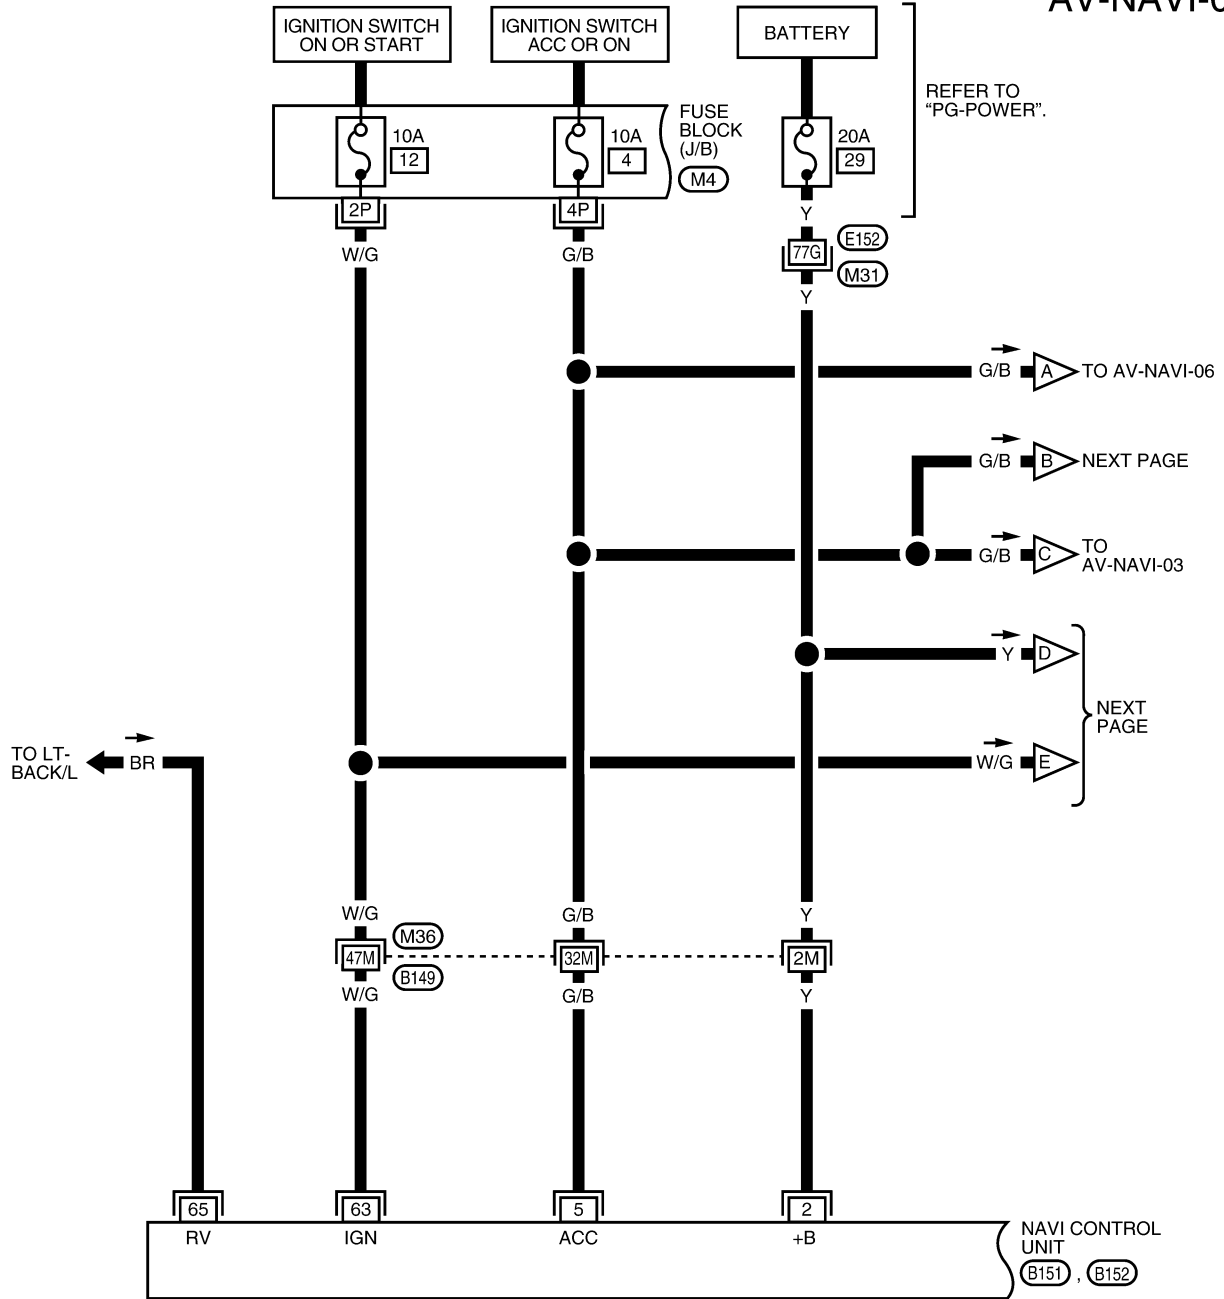

A
B
C
D
E
F
G
H
I
J
AV
L
M







REFER TO THE FOLLOWING.
 (M31), (M36) - SUPER
 MULTIPLE JUNCTION (SMJ)

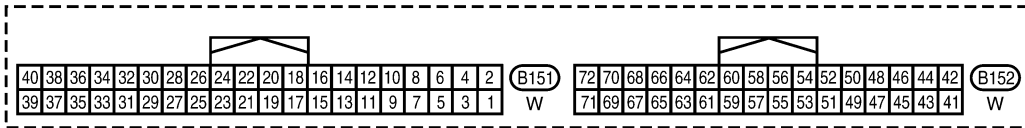

WKWA4195E

NAVIGATION SYSTEM

AV-NAVI-03


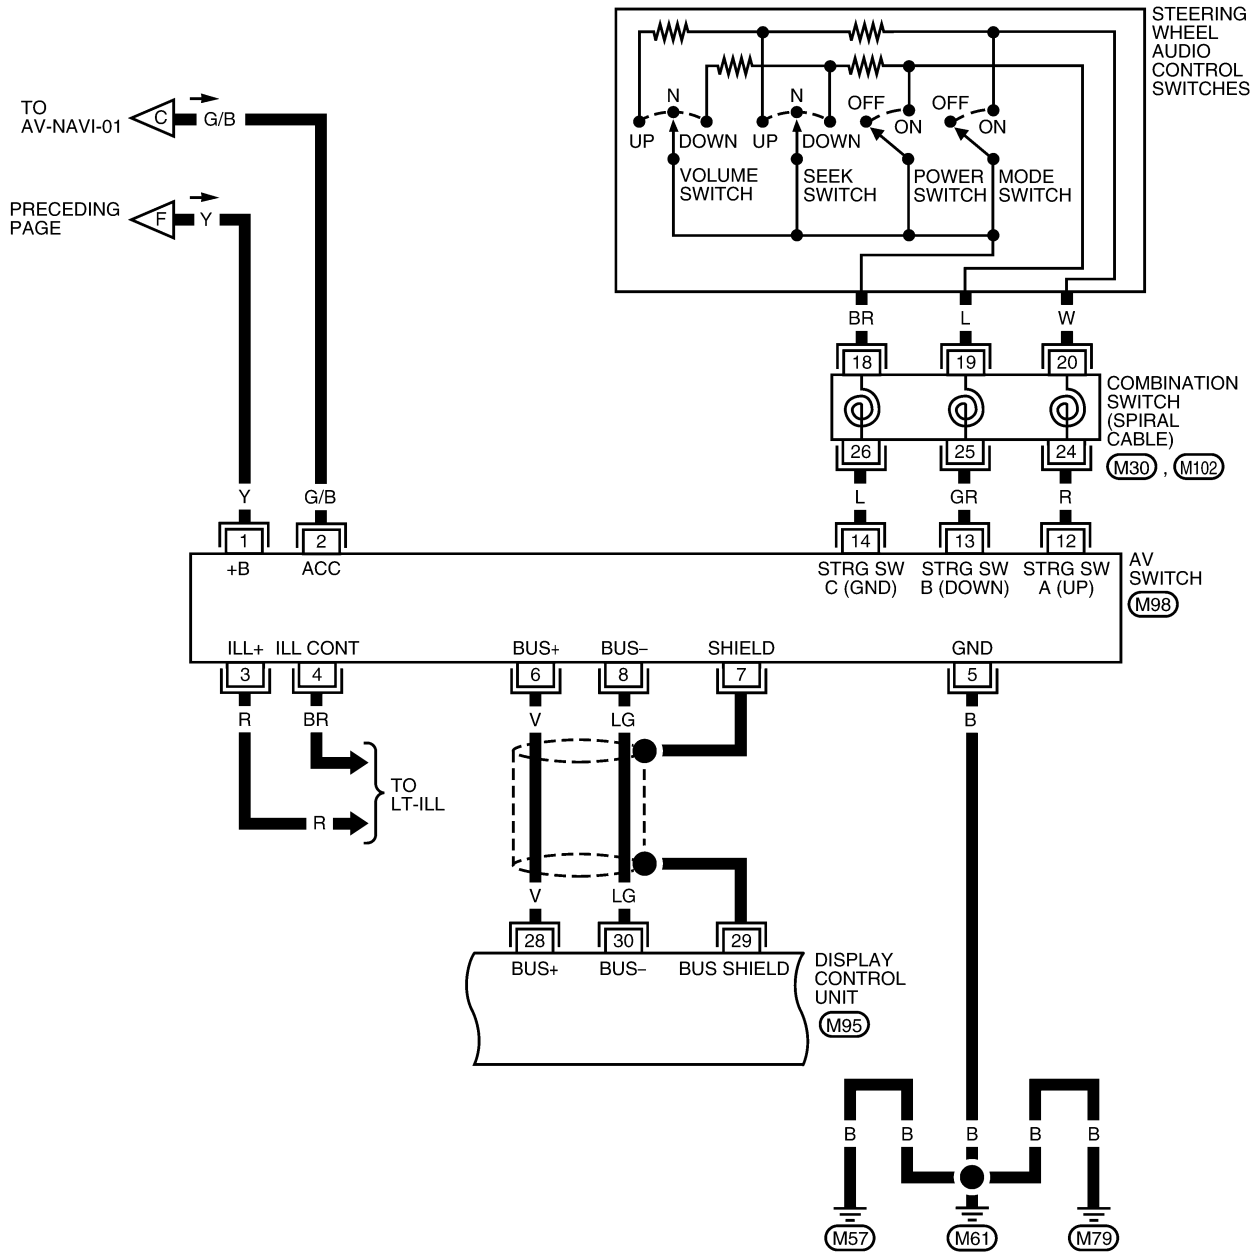


*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA5387E

NAVIGATION SYSTEM

AV-NAVI-04

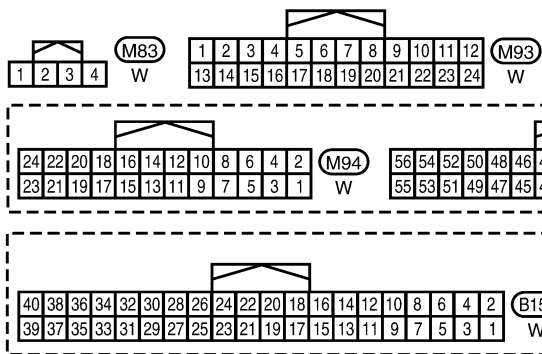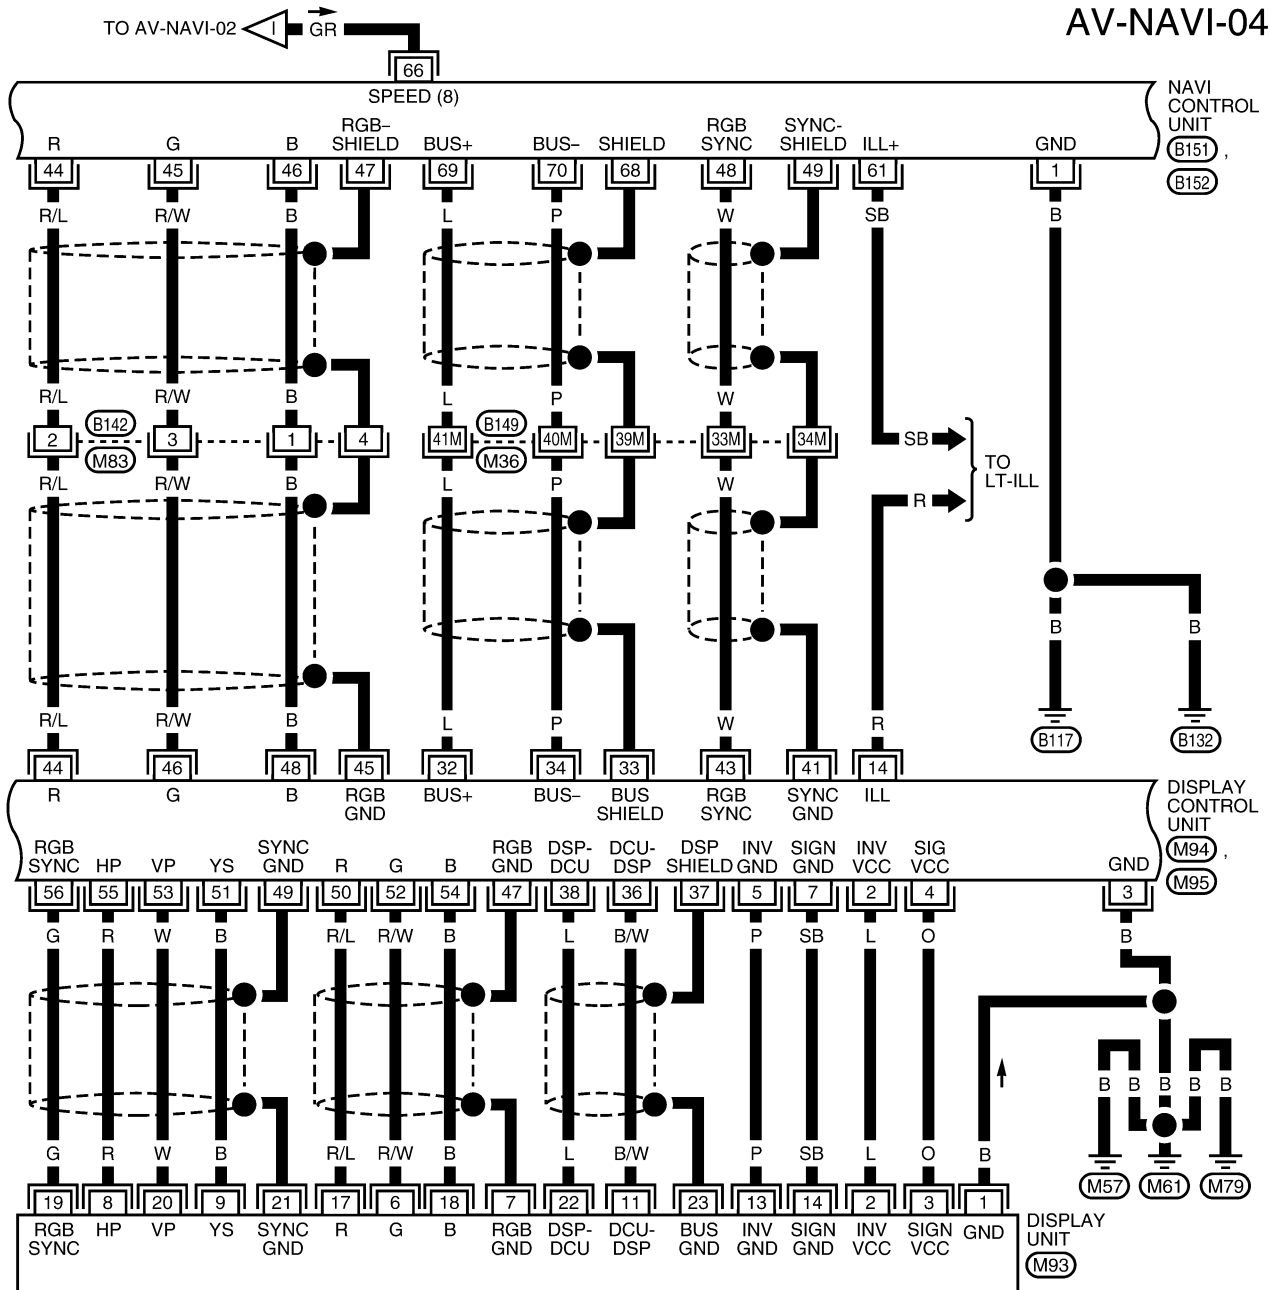


REFER TO THE FOLLOWING.
(M36) - SUPER MULTIPLE JUNCTION (SMJ)



WKWA5477E

NAVIGATION SYSTEM

AV-NAVI-05

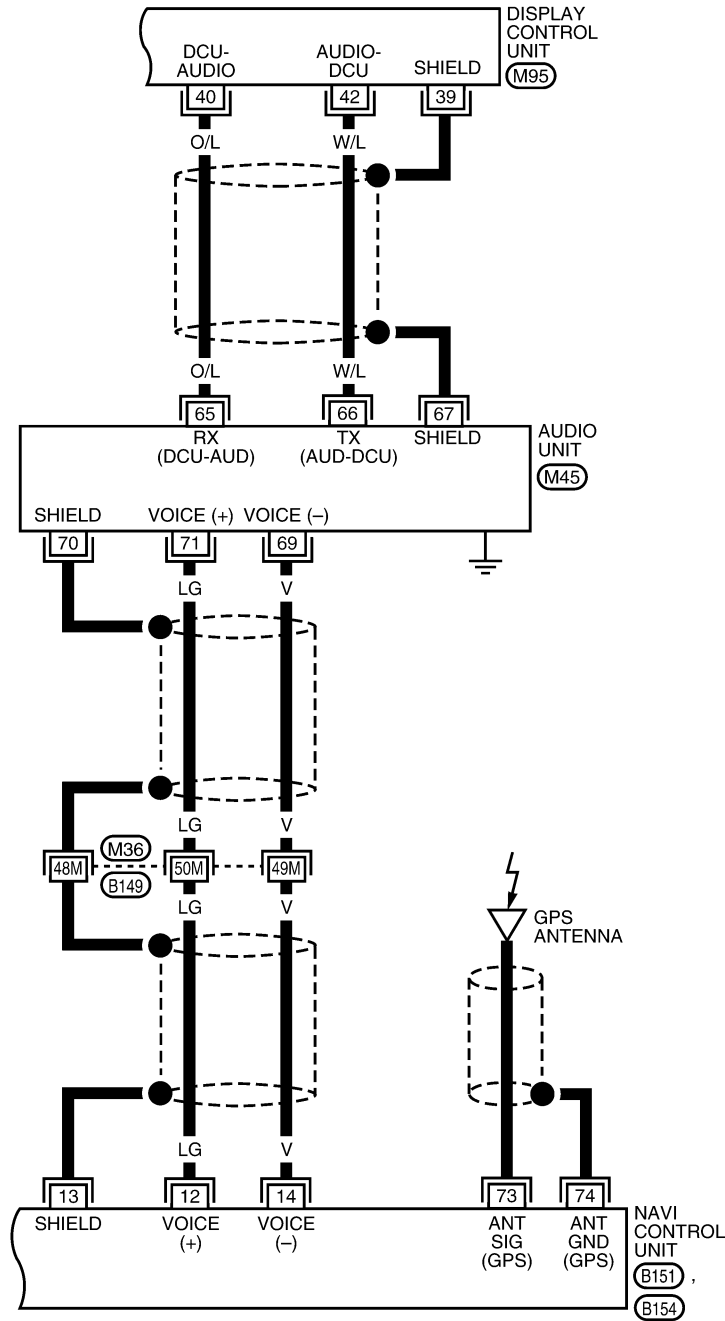

A
B
C
D
E
F
G
H
I
J
AV
L
M

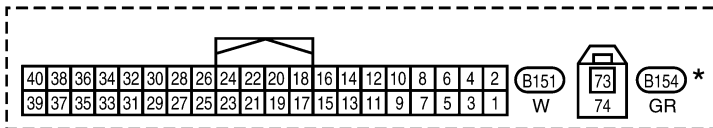

REFER TO THE FOLLOWING.
 (M36) - SUPER MULTIPLE JUNCTION (SMJ)



*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA4208E

NAVIGATION SYSTEM

AV-NAVI-06

■ : DATA LINE

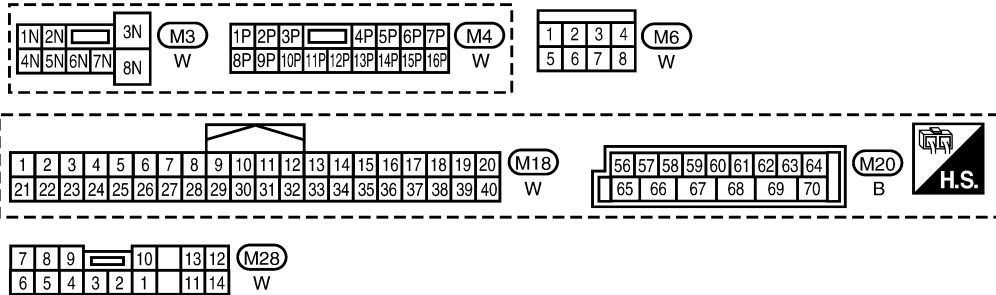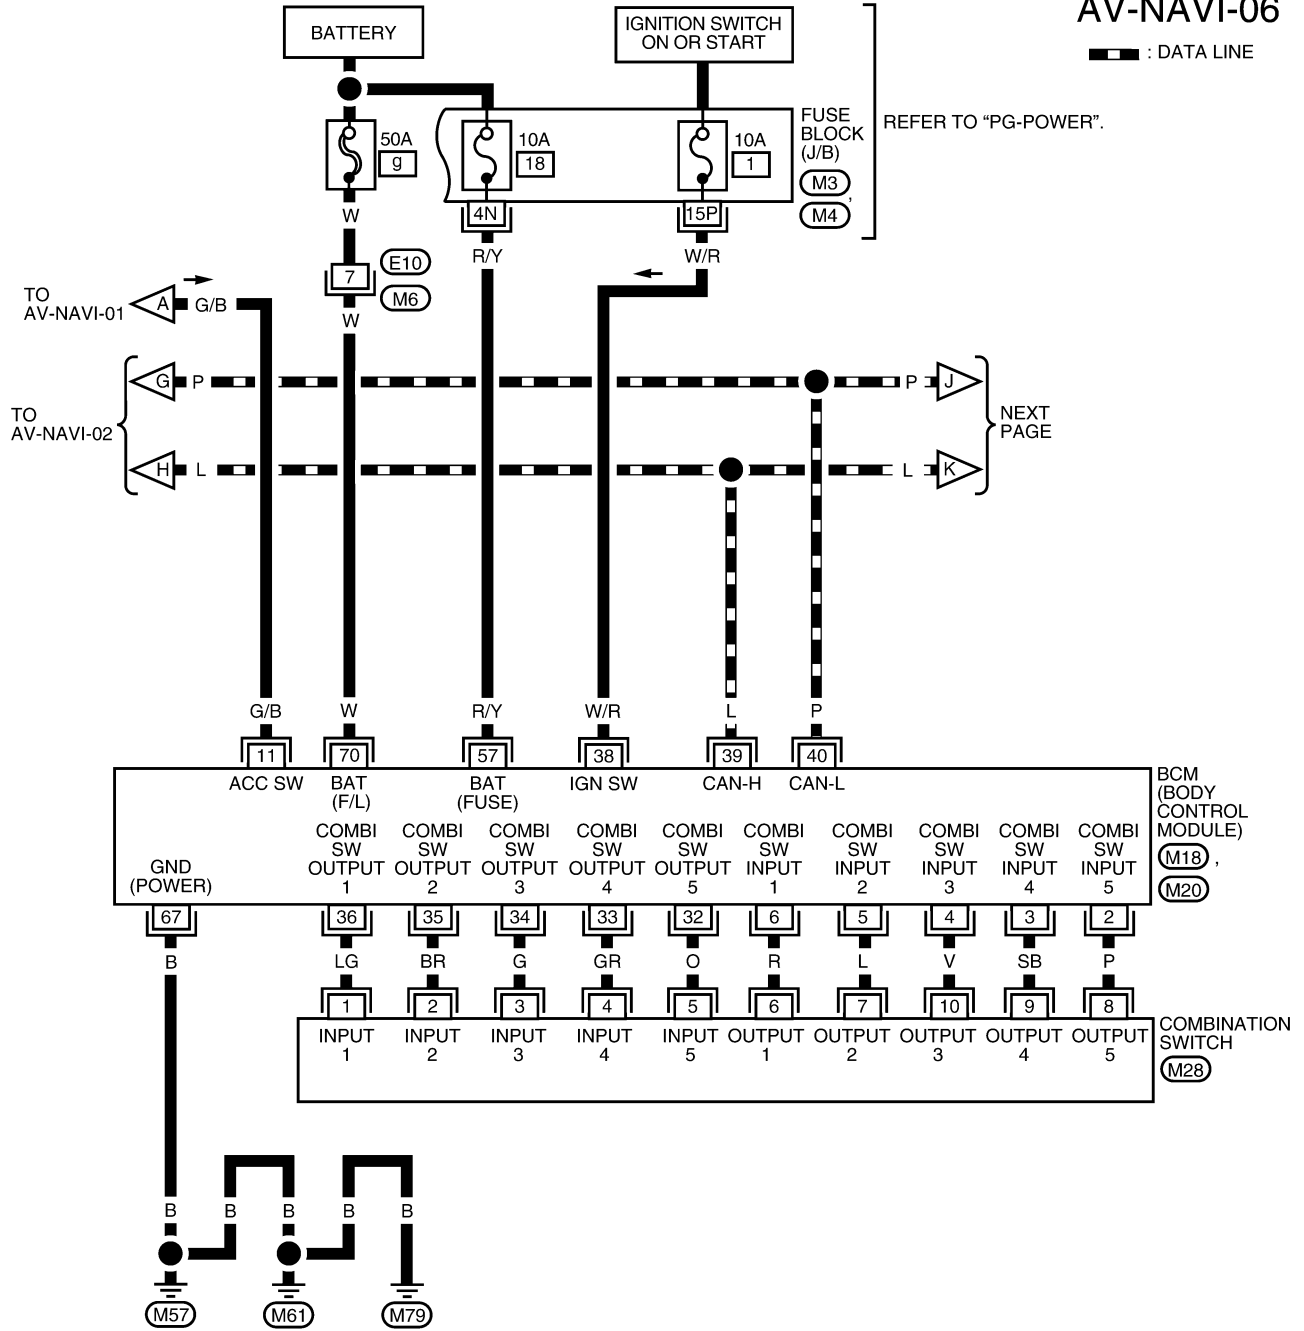


WKWA5453E

NAVIGATION SYSTEM

AV-NAVI-07

▬ : DATA LINE

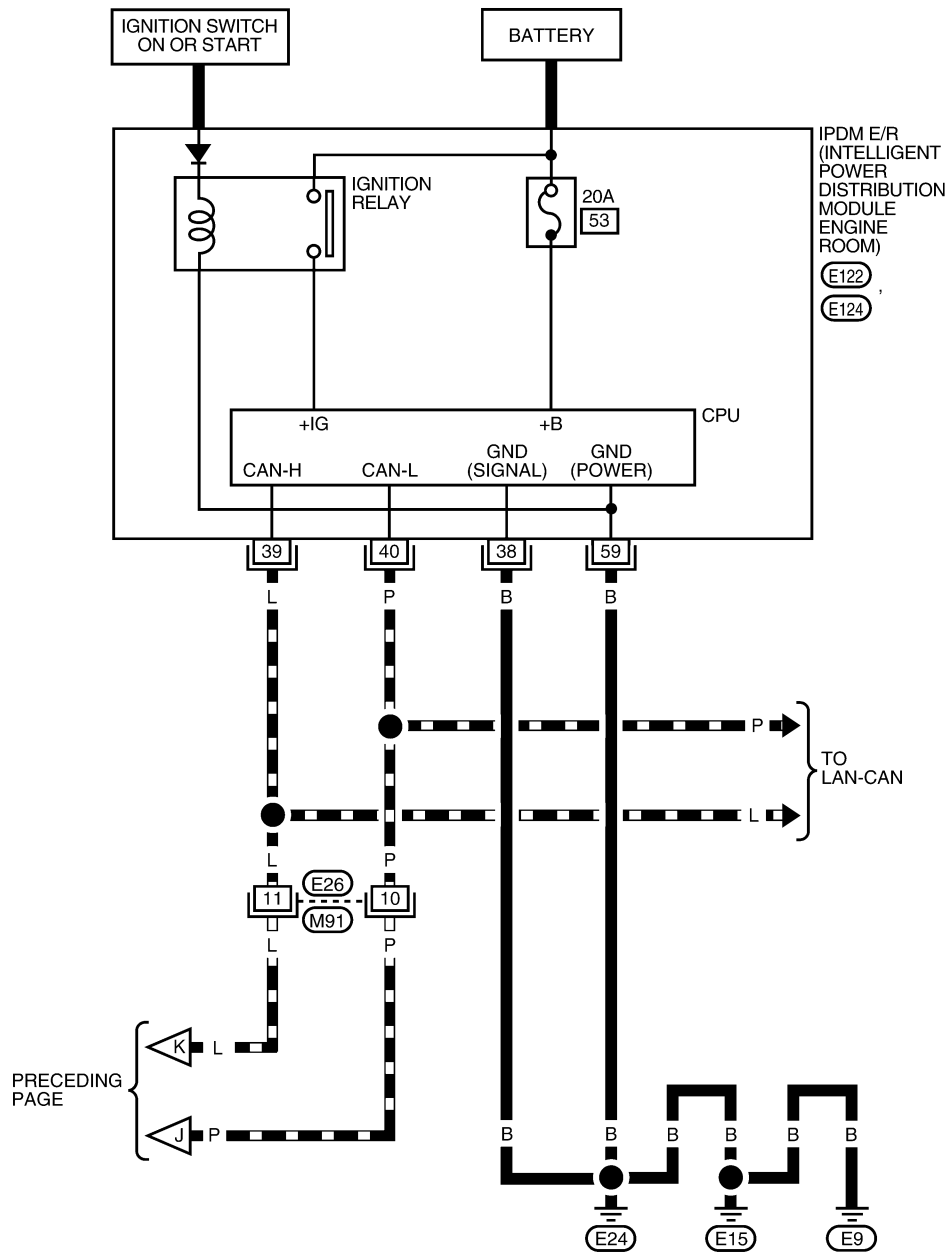

REFER TO "PG-POWER".

A
B
C
D
E
F
G
H
I
J
AV
L
M

| | | | | | | | | | |
|---|---|----|----|----|----|----|-------|----|---|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | (M91) | | |
| 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | W |


| | | | | | | | | | | |
|----|----|----|----|----|----|--------|----|----|----|--------|
| 37 | 38 | 39 | 40 | 41 | 42 | (E122) | 57 | 58 | 59 | (E124) |
| 43 | 44 | 45 | 46 | 47 | 48 | W | 60 | 61 | 62 | B |

WKWA5478E

NAVIGATION SYSTEM

Schematic

EKS00G6I

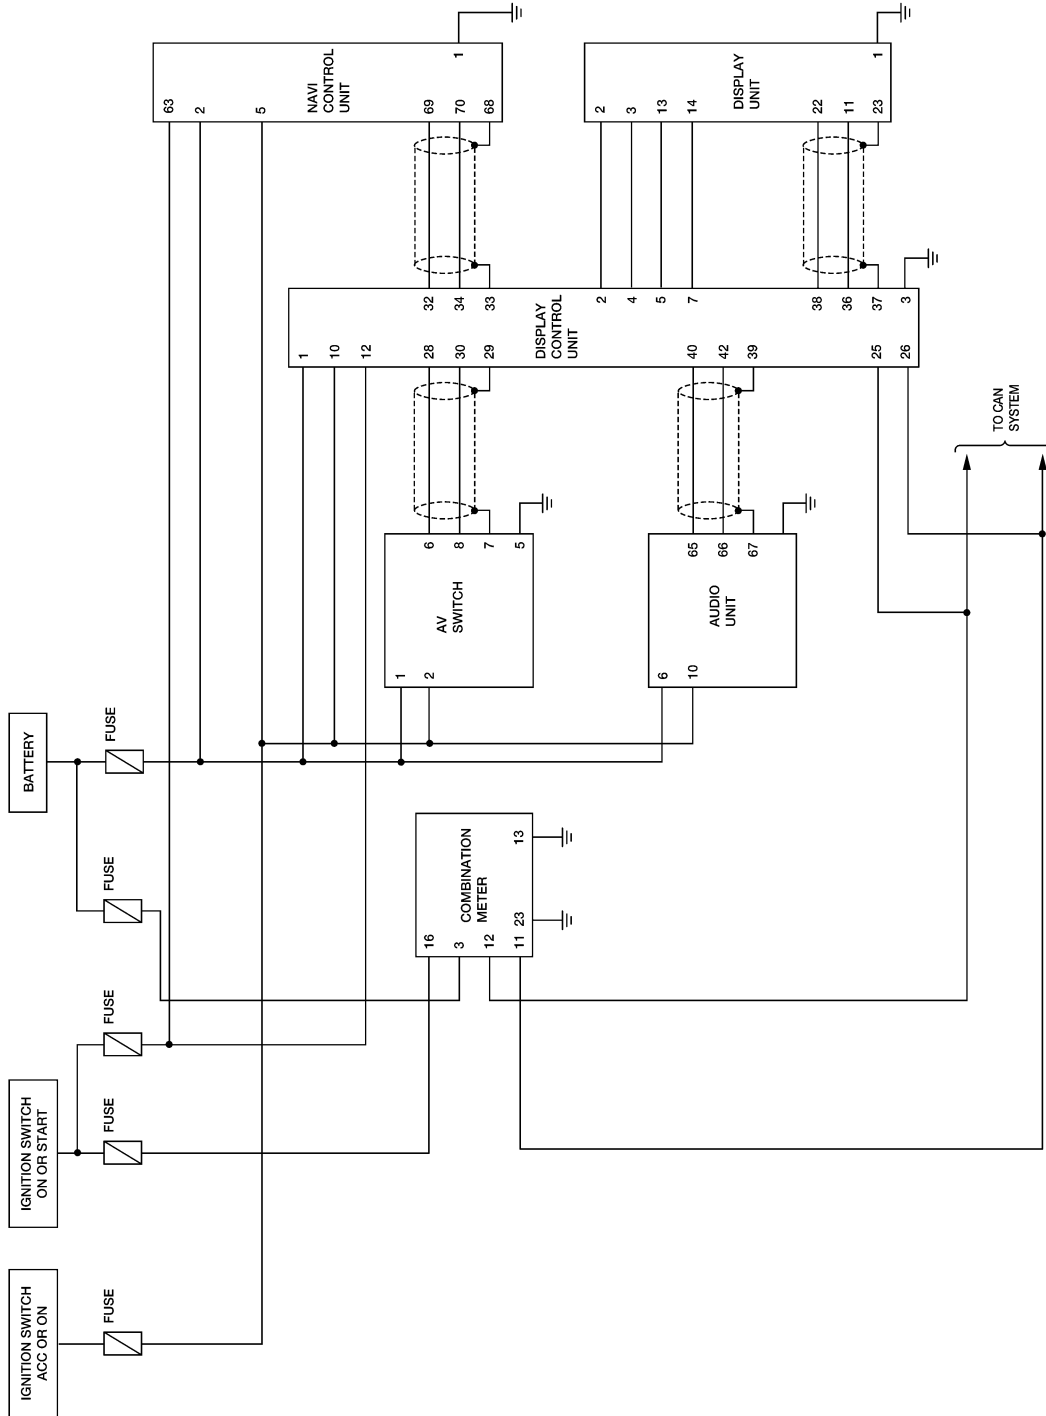


WKWA4209E

NAVIGATION SYSTEM

Wiring Diagram — COMM —

EKS00G6J

AV-COMM-01

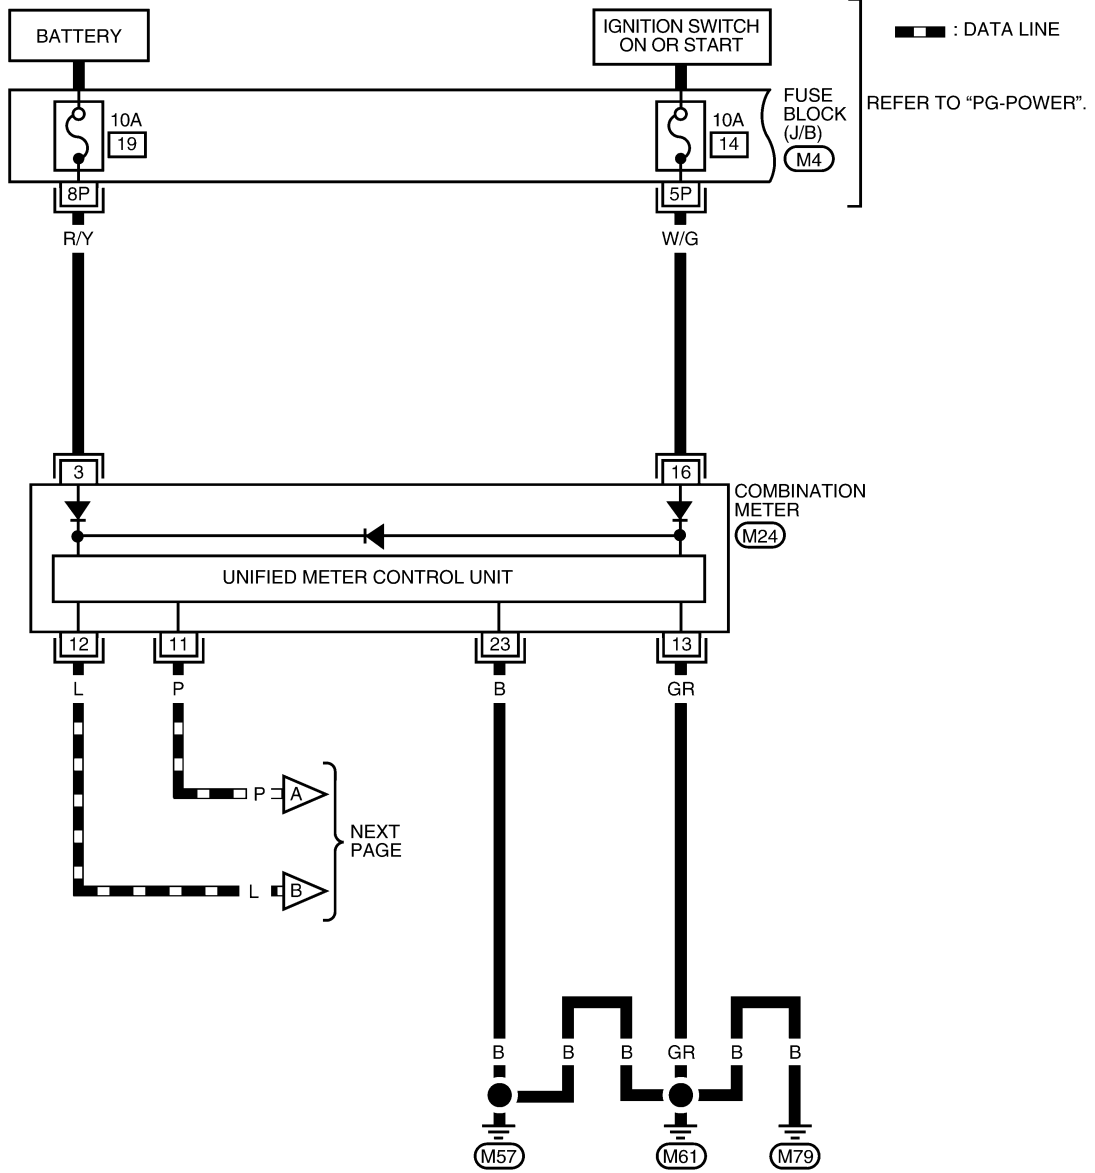

A
B
C
D
E
F
G
H
I
J
AV
L
M



| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|----|----|-----|-----|-----|-----|-----|------|-----|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-------|----|---|
| 1P | 2P | 3P | 4P | 5P | 6P | 7P | (M4) | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | (M24) | | |
| 8P | 9P | 10P | 11P | 12P | 13P | 14P | 15P | 16P | W | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | W |

WKWA4282E

NAVIGATION SYSTEM

AV-COMM-02

— : DATA LINE



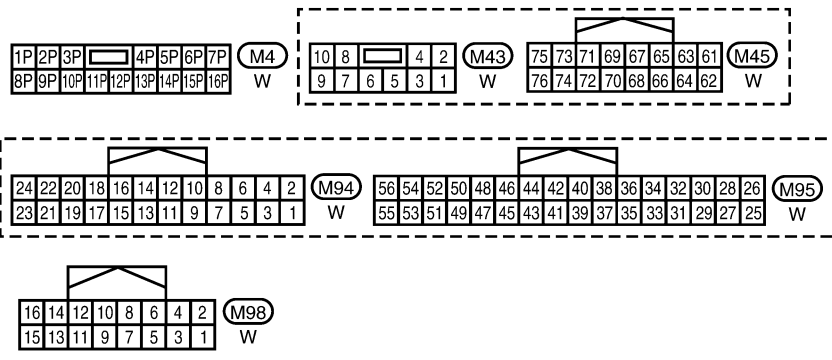
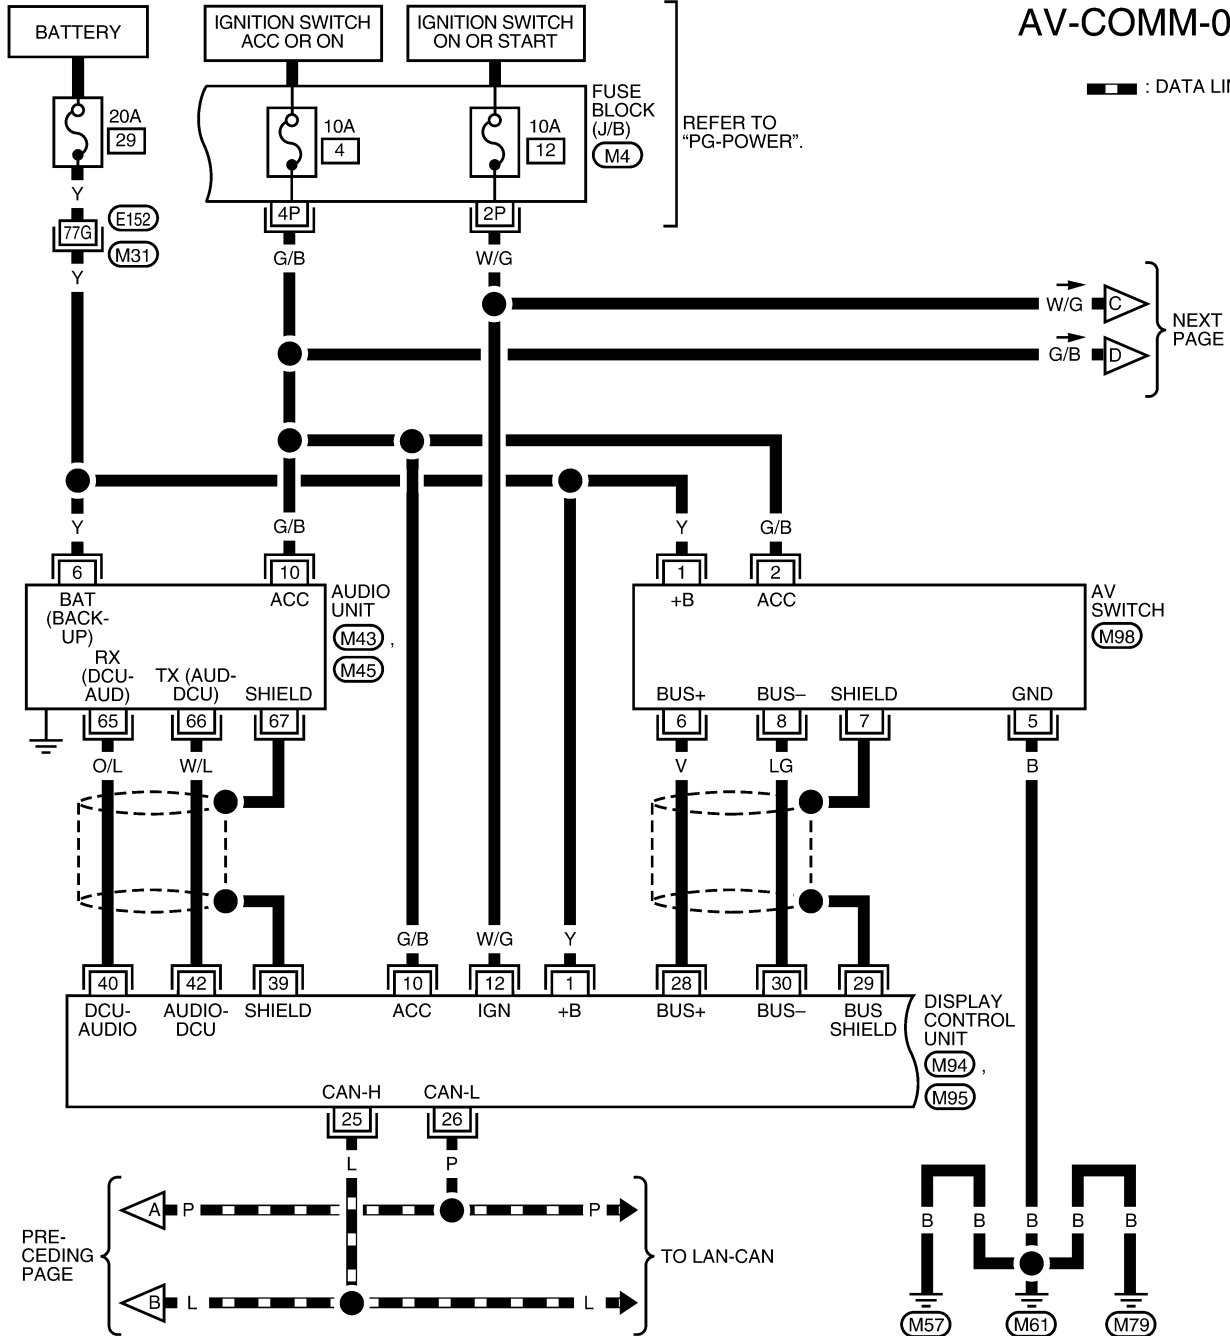


REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA5479E

NAVIGATION SYSTEM

AV-COMM-03

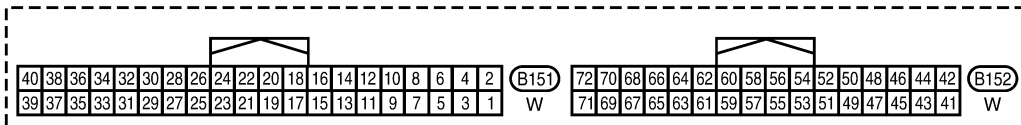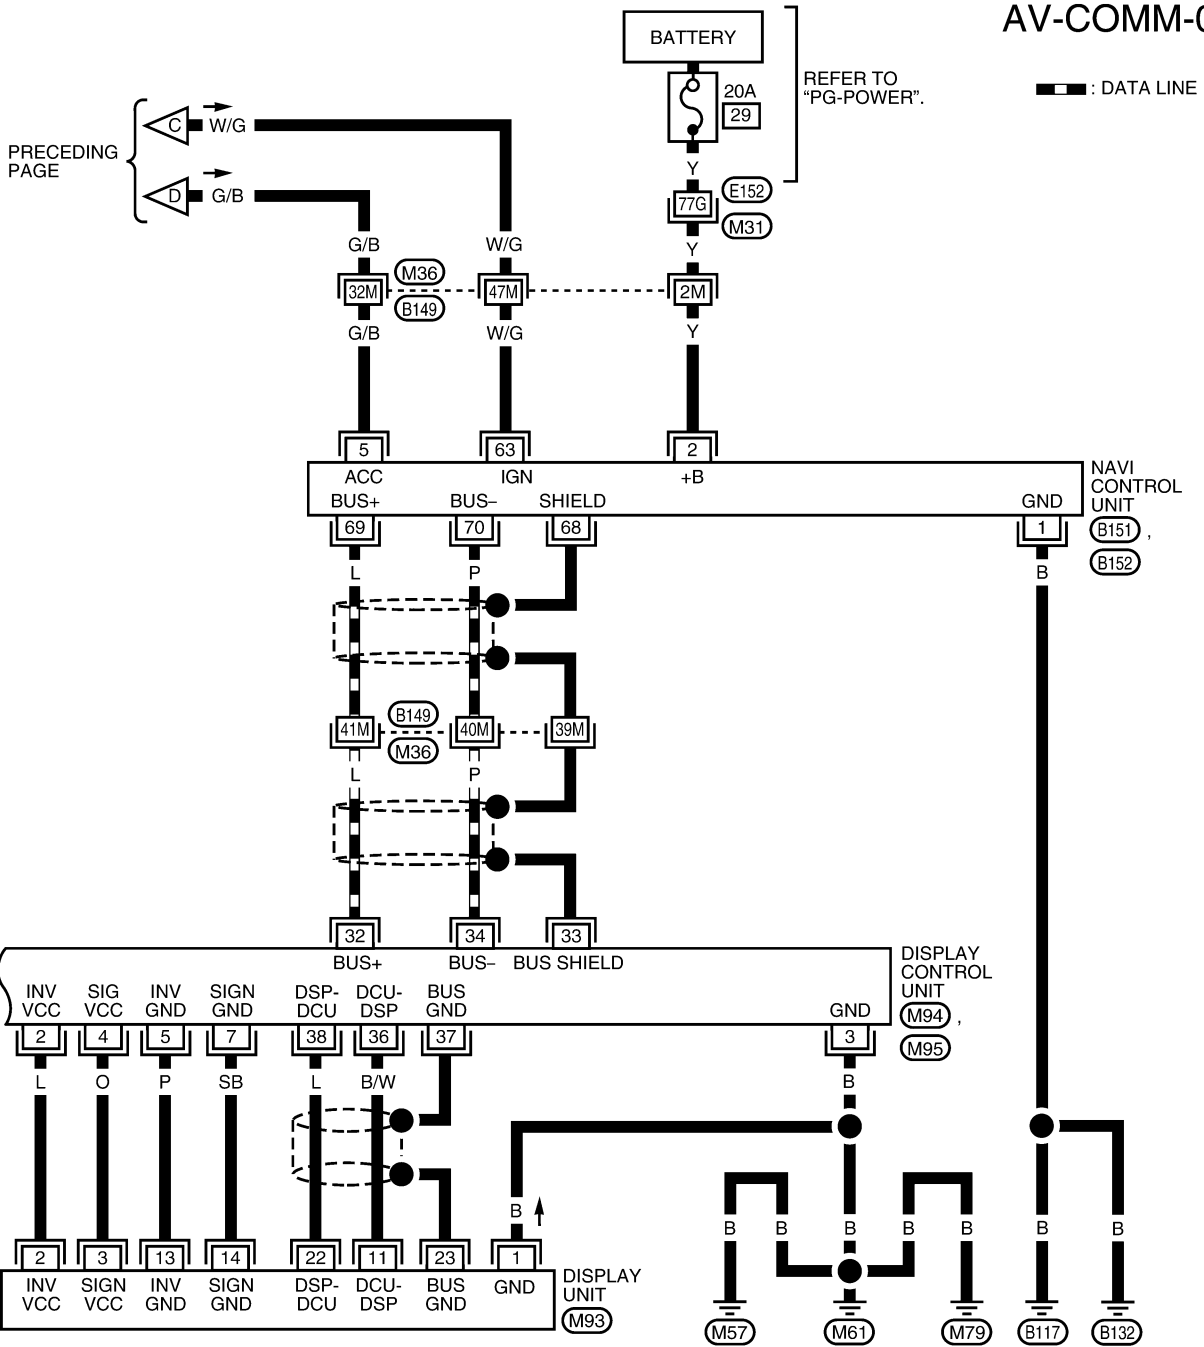

REFER TO THE FOLLOWING.
 (M31), (M36) - SUPER
 MULTIPLE JUNCTION (SMJ)






WKWA4196E

A
B
C
D
E
F
G
H
I
J
AV
L
M




NAVIGATION SYSTEM

Terminals and Reference Values for NAVI Control Unit

EKS00HKD
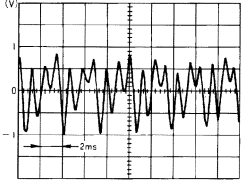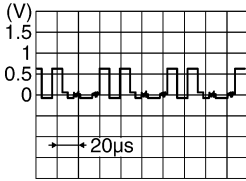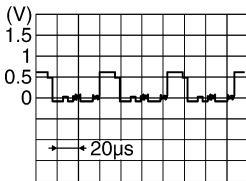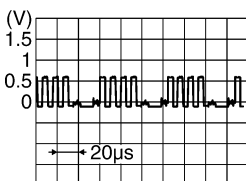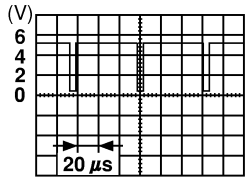
| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|--------|----------------------------------|----------------------------|-------------------------|---|--|--|
| + | - | | | Igni- tion switch | Operation | | |
| 1 (B) | Ground | Ground | - | ON | - | 0V | - |
| 2 (Y) | Ground | Battery power | Input | OFF | - | Battery voltage | System does not work properly. |
| 5 (G/B) | Ground | ACC signal | Input | ACC | - | Battery voltage | System does not work properly. |
| 12 (LG) | 14 (V) | Voice guide signal | Output | ON | Press the "GUIDE/ VOICE" button. |  | Only route guide and operation guide are not heard. |
| 13 | - | Shield ground | - | - | - | - | Audio noise interference. |
| 44 (R/L) | 47 | RGB signal (R: red) | Output | ON | Select "Display Diagnosis (NAVI)" of CONFIRMATION/ ADJUSTMENT function. |  | NAVI screen looks bluish. |
| 45 (R/W) | 47 | RGB signal (G: green) | Output | ON | Select "Display Diagnosis (NAVI)" of CONFIRMATION/ ADJUSTMENT function. |  | NAVI screen looks reddish. |
| 46 (B) | 47 | RGB signal (B: blue) | Output | ON | Select "Display Diagnosis (NAVI)" of CONFIRMATION/ ADJUSTMENT function. |  | NAVI screen looks yellowish. |
| 47 | - | Shield ground | - | - | - | - | Video display interference. |
| 48 (W) | 49 | RGB syn- chronizing signal | Output | ON | Press the "MAP" button. |  | NAVI screen is rolling. |
| 49 | - | Shield ground | - | - | - | - | Video display interference. |

NAVIGATION SYSTEM
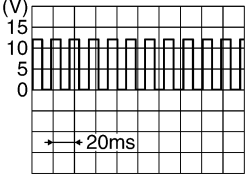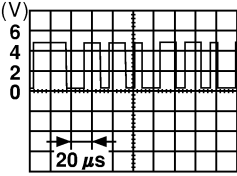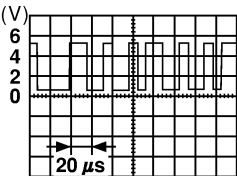
| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|--------|--------------------------------------|----------------------------|-------------------------|--|---|--|
| + | - | | | Igni- tion switch | Operation | | |
| 61 (SB) | Ground | Illumination signal | Input | ON | Lighting switch in 1st position | Battery voltage | Display unit illu- mination does not change when lighting switch is turned to 1st position.- |
| | | | | | Lighting switch is OFF | 3V or less | |
| 63 (W/G) | Ground | Ignition signal | Input | ON | - | Battery voltage | Navigation cur- rent location mark does not indicate the cor- rect position. |
| 65 (BR) | Ground | Reverse signal | Input | ON | A/T selector lever in R position | Battery voltage | The navigation current-location mark moves strangely when the vehicle is moving back- wards. |
| | | | | | A/T selector lever not in R position | 0V | |
| 66 (GR) | Ground | Vehicle speed signal (8-pulse) | Input | ON | When vehicle speed is approx. 40 km/h (25 MPH) |  PKIA1935E | Navigation cur- rent location mark does not indicate the cor- rect position. |
| 68 | - | Shield ground | - | - | - | - | - |
| 69 (L) | Ground | Communica- tion signal (+) | Input/ output | ON | - |  SKIA0175E | System does not work properly. |
| 70 (P) | Ground | Communica- tion signal (-) | Input/ output | ON | - |  SKIA0176E | System does not work properly. |
| 73 | 74 | GPS signal | Input | ON | Connector is not connected. | 5V | Navigation sys- tem GPS correc- tion is not possible. |

A
B
C
D
E
F
G
H
I
J
L
M

AV






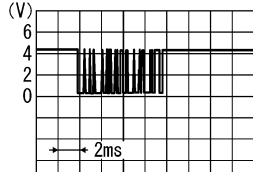
NAVIGATION SYSTEM

Terminals and Reference Values for Display Control Unit

EKS00G6L







| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|--------|--------------------------------|----------------------------|-------------------------|--|----------------------|--|
| + | - | | | Igni- tion switch | Operation | | |
| 1 (Y) | Ground | Battery Power | Input | OFF | - | Battery voltage | System does not work properly. |
| 2 (L) | Ground | Power Supply (Inverter) | Output | ON | - | 9V | Screen is not shown. |
| 3 (B) | Ground | Ground | - | ON | - | 0V | - |
| 4 (O) | Ground | Power Supply (Signal) | Output | ON | - | 9V | Screen is not shown. |
| 5 (P) | Ground | (Inverter) Ground | - | ON | - | 0V | - |
| 6 (SB) | Ground | Reverse signal | Input | ON | Selector lever in R position | Battery voltage | Impossible to gain direction of vehicle. |
| | | | | | Selector lever not in R position | 0V | |
| 7 (SB) | Ground | (Signal) Ground | - | ON | - | 0V | - |
| 10 (G/B) | Ground | ACC power | Input | ACC | - | Battery voltage | System does not work properly. |
| 12 (W/G) | Ground | Ignition signal | Input | ON | - | Battery voltage | Vehicle information setting is not possible. |
| 14 (R) | Ground | Illumination signal | Input | OFF | Lighting switch position 1st or 2nd | Battery voltage | Display unit does not change when lighting switch is turned to 1st position. |
| | | | | | Lighting switch position OFF | 0V | |
| 16 (LG) | Ground | Vehicle speed signal (8-pulse) | Input | ON | When vehicle speed is approx. 40 km/h (25 MPH) | | Value of vehicle speed information is not accurately displayed. |
| 25 (L) | - | CAN-H | - | - | - | - | - |
| 26 (P) | - | CAN-L | - | - | - | - | - |
| 28 (V) | Ground | Communication signal (+) | Input/Output | ON | - | | System does not work properly. |
| 29 | - | Shield ground | - | - | - | - | - |

NAVIGATION SYSTEM

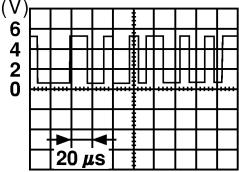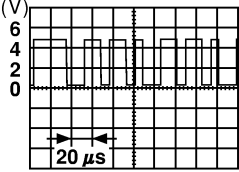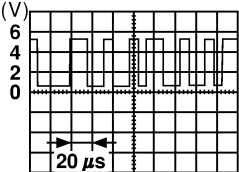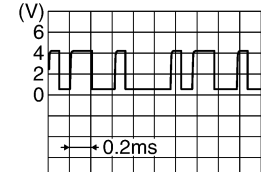

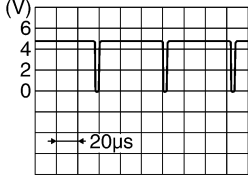
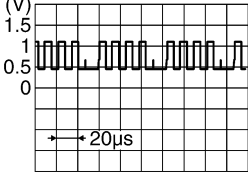
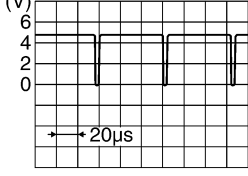
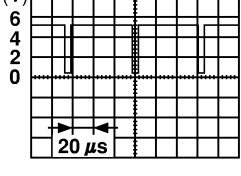
| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|--------|---|----------------------------|-------------------------|-----------------------------|---|--|
| + | - | | | Igni- tion switch | Operation | | |
| 30 (LG) | Ground | Communica- tion signal (-) | Input/ output | ON | - |  SKIA0176E | System does not work properly. |
| 32 (L) | Ground | Communica- tion signal (+) | Input/ output | ON | - |  SKIA0175E | System does not work properly. |
| 33 | - | Shield ground | - | - | - | - | - |
| 34 (P) | Ground | Communica- tion signal (-) | Input/ output | ON | - |  SKIA0176E | System does not work properly. |
| 36 (B/W) | 37 | Display Com- munication signal (DCU-DSP) | Output | ON | Press the "TRIP" button. |  SKIA4364E | Though a screen is displayed, it is impossible to adjust bright- ness. |
| 37 | - | Shield ground | - | - | - | - | - |
| 38 (L) | 37 | Display Com- munication signal (DSP-DCU) | Input | ON | Press the "TRIP" button. |  SKIA4363E | Though a screen is displayed, it is impossible to adjust bright- ness. |
| 39 | - | Shield ground | - | - | - | - | - |
| 40 (O/L) | Ground | Audio TX Communica- tion signal | Output | ON | Operate audio volume. |  SKIA4402E | Audio does not operate properly. |

A
B
C
D
E
F
G
H
I
J
AV
L
M

NAVIGATION SYSTEM
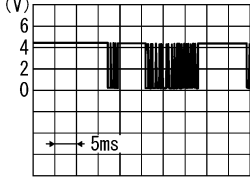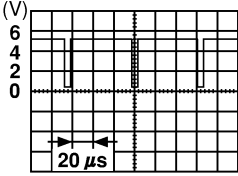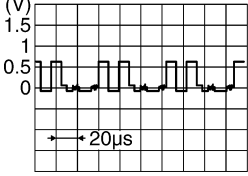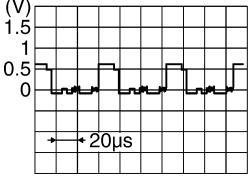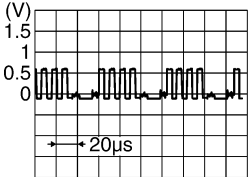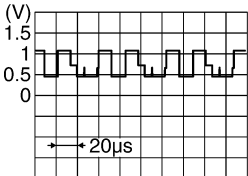
| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|--------|---------------------------------------|----------------------------|-------------------------|---|---|-------------------------------------|
| + | - | | | Igni- tion switch | Operation | | |
| 41 | - | Shield ground | - | - | - | - | - |
| 42 (W/L) | Ground | Audio RX communica- tion signal | Input | ON | Operate audio volume. |  SKIA4403E | Audio does not operate properly. |
| 43 (W) | 41 | RGB syn- chronizing signal | Input | ON | Press the "MAP" button. |  SKIA0164E | NAVI screen is rolling. |
| 44 (R/L) | 45 | RGB signal (R: red) | Input | ON | Select "Display Diagnosis (NAVI)" of CONFIRMATION/ ADJUSTMENT function. |  SKIA4977E | NAVI screen looks bluish. |
| 45 | - | Shield ground | - | - | - | - | - |
| 46 (R/W) | 45 | RGB signal (G: green) | Input | ON | Select "Display Diagnosis (NAVI)" of CONFIRMATION/ ADJUSTMENT function. |  SKIA4978E | NAVI screen looks reddish. |
| 47 | - | Shield ground | - | - | - | - | - |
| 48 (B) | 45 | RGB signal (B: blue) | Input | ON | Select "Display Diagnosis (NAVI)" of CONFIRMATION/ ADJUSTMENT function. |  SKIA4979E | NAVI screen looks yellowish. |
| 49 | - | Shield ground | - | - | - | - | - |
| 50 (R/L) | 47 | RGB signal (R: red) | Output | ON | Select "Display Diagnosis (DCU)" of CONFIRMATION/ ADJUSTMENT function. |  SKIA4980E | NAVI screen looks bluish. |

NAVIGATION SYSTEM
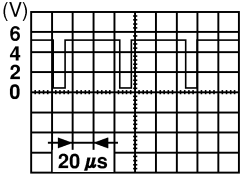
| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|----|---|----------------------------|-------------------------|--|--|--|
| + | - | | | Igni- tion switch | Operation | | |
| 51 (B) | 49 | RGB area (YS) signal | Output | ON | Press the "TRIP" button. |  <p style="text-align: right; font-size: small;">SKIA0162E</p> | RGB screen is not shown. |
| 52 (R/W) | 47 | RGB signal (G: green) | Output | ON | Select "Display Diagnosis (DCU)" of CONFIRMATION/ ADJUSTMENT function. |  <p style="text-align: right; font-size: small;">SKIA4981E</p> | Screen looks reddish. |
| 53 (W) | 49 | Vertical syn- chronizing (VP) signal | Input | ON | - |  <p style="text-align: right; font-size: small;">SKIA4983E</p> | Operating screen for audio and A/C is not displayed when showing NAVI screen. |
| 54 (B) | 47 | RGB signal (B: blue) | Output | ON | Select "Display Diagnosis (DCU)" of CONFIRMATION/ ADJUSTMENT function. |  <p style="text-align: right; font-size: small;">SKIA4982E</p> | Screen looks yellowish. |
| 55 (R) | 49 | Horizontal synchroniz- ing (HP) sig- nal | Input | ON | - |  <p style="text-align: right; font-size: small;">SKIA4983E</p> | Operating screen for audio and A/C is not displayed when showing NAVI screen. |
| 56 (G) | 49 | RGB syn- chronizing signal | Output | ON | Press the "TRIP" button. |  <p style="text-align: right; font-size: small;">SKIA0164E</p> | NAVI screen is rolling. |


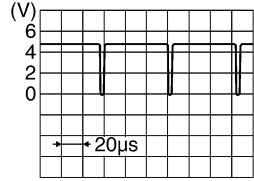
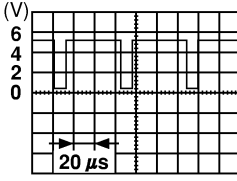

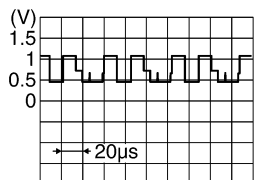
A
B
C
D
E
F
G
H
I
J
K
L
M

AV





NAVIGATION SYSTEM

Terminals and Reference Values for Display Unit

EKS00G6M

| Terminal No. (Wire color) | | Item | Signal input/output | Condition | | Voltage (Approx.) | Example of symptom |
|---------------------------|--------|--|---------------------|-----------------|---|---|---|
| + | - | | | Ignition switch | Operation | | |
| 1 (B) | Ground | Ground | - | ON | - | 0V | - |
| 2 (L) | Ground | Power supply (Inverter) | Input | ON | - | 9V | Screen is not shown. |
| 3 (O) | Ground | Power supply (Signal) | Input | ON | - | 9V | Screen is not shown. |
| 6 (R/W) | 7 | RGB signal (G: green) | Input | ON | Select "Display Diagnosis (DCU)" of CONFIRMATION/ADJUSTMENT function. |  SKIA4981E | Screen looks reddish. |
| 7 | - | Shield ground | - | - | - | - | - |
| 8 (R) | 21 | Horizontal synchronizing (HP) signal | Output | ON | - |  SKIA4983E | Operating screen for audio and A/C is not displayed when showing NAVI screen. |
| 9 (B) | 21 | RGB area (YS) signal | Input | ON | Press the "TRIP" button. |  SKIA0162E | Operating screen for audio and A/C is not displayed when showing NAVI screen. |
| 11 (B/W) | 23 | Display communication signal (DCU-DSP) | Input | ON | - |  SKIA4364E | Though a screen is displayed, it is impossible to adjust brightness. |
| 13 (P) | Ground | (Inverter) Ground | - | ON | - | 0V | - |
| 14 (SB) | Ground | (Signal) Ground | - | ON | - | 0V | - |
| 17 (R/L) | 7 | RGB signal (R: red) | Input | ON | Select "Display Diagnosis (DCU)" of CONFIRMATION/ADJUSTMENT function. |  SKIA4980E | Screen looks bluish. |

NAVIGATION SYSTEM
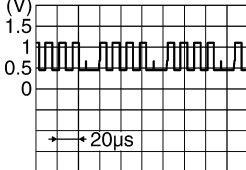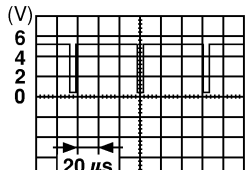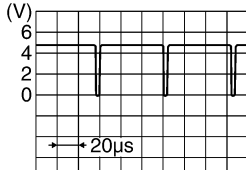
| Terminal No. (Wire color) | | Item | Signal input/output | Condition | | Voltage (Approx.) | Example of symptom |
|---------------------------|----|--|---------------------|-----------------|---|--|---|
| + | - | | | Ignition switch | Operation | | |
| 18 (B) | 7 | RGB signal (B: blue) | Input | ON | Select "Display Diagnosis (DCU)" of CONFIRMATION/ADJUSTMENT function. |  <p style="text-align: right; font-size: small;">SKIA4982E</p> | Screen looks yellowish. |
| 19 (G) | 21 | RGB synchronizing signal | Input | ON | Press the "TRIP" button. |  <p style="text-align: right; font-size: small;">SKIA0164E</p> | NAVI screen is rolling. |
| 20 (W) | 21 | Vertical synchronizing (VP) signal | Output | ON | - |  <p style="text-align: right; font-size: small;">SKIA4983E</p> | Operating screen for audio and A/C is not displayed when showing NAVI screen. |
| 21 | - | Shield ground | - | - | - | - | - |
| 22 (L) | 23 | Display communication signal (DSP-DCU) | Output | ON | - |  <p style="text-align: right; font-size: small;">SKIA4363E</p> | Though a screen is displayed, it is impossible to adjust brightness. |
| 23 | - | Shield ground | - | - | - | - | - |

A

B

C

D

E

F

G

H

I

J

AV



L

M

NAVIGATION SYSTEM

Terminals and Reference Values for AV Switch

EKS00G6N
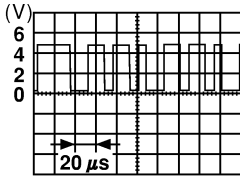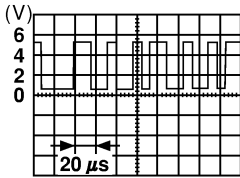
| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|--------|-----------------------------|----------------------------|--------------------|---|--|--|
| + | - | | | Ignition switch | Operation | | |
| 1 (Y) | Ground | Battery power | Input | OFF | - | Battery voltage | System does not work properly. |
| 2 (G/B) | Ground | ACC power | Input | ACC | - | Battery voltage | System does not work properly. |
| 3 (R) | Ground | Illumination signal | Input | OFF | Lighting switch is ON (position 1). | Battery voltage | AV switch illumination does not come on when lighting switch is ON (position 1). |
| | | | | | Turn lighting switch OFF. | 3.0V or less | |
| 4 (BR) | Ground | Illumination control signal | Input | ON | Illumination control switch is operated by lighting switch in 1st position. | Changes between 0 and 12V | AV switch illumination cannot be controlled. |
| 5 (B) | Ground | Ground | - | ON | - | 0V | - |
| 6 (V) | Ground | Communication signal (+) | Input/output | ON | - |  <p style="text-align: right; font-size: small;">SKIA0175E</p> | System does not work properly. |
| 7 | - | Shield ground | - | - | - | - | - |
| 8 (LG) | Ground | Communication signal (-) | Input/output | ON | - |  <p style="text-align: right; font-size: small;">SKIA0176E</p> | System does not work properly. |
| 12 (R) | Ground | Remote control A | Input | ON | Press MODE switch | 0V | Steering wheel audio controls do not function. |
| | | | | | Press SEEK UP switch | 0.75V | |
| | | | | | Press VOL UP switch | 2V | |
| | | | | | Except for above | 5V | |
| 13 (GR) | Ground | Remote control B | Input | ON | Press POWER switch | 0V | Steering wheel audio controls do not function. |
| | | | | | Press SEEK DOWN switch | 0.75V | |
| | | | | | Press VOL DOWN switch | 2V | |
| | | | | | Except for above | 5V | |
| 14 (L) | - | Remote control ground | - | - | - | - | Steering wheel audio controls do not function. |

NAVIGATION SYSTEM

Terminals and Reference Values for BCM

EKS00G60

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

On Board Self-Diagnosis Function

EKS00G6P

DESCRIPTION

- Diagnosis function consists of the self-diagnosis mode performed automatically and the CONFIRMATION/ADJUSTMENT mode operated manually.
- Self-diagnosis mode checks for connections between the units constituting this system, analyzes each individual unit at the same time, and displays the results on the LCD screen.
- CONFIRMATION/ADJUSTMENT mode is used to perform trouble diagnosis that require operation and judgment by an operator (trouble that cannot be automatically judged by the system), to check/change the set value, and to display the History of Errors of the navigation system.

DIAGNOSIS ITEM


| Mode | | Description | | |
|-----------------------------|----------------------|--|--|---|
| Self-diagnosis (DCU) | | <ul style="list-style-type: none"> ● Display control unit diagnosis. ● Perform connection diagnosis and unit diagnosis between display control unit and each unit. | | |
| Self-diagnosis (NAVI) | | <ul style="list-style-type: none"> ● NAVI Control unit diagnosis (DVD-ROM drive) will not be diagnosed when no map DVD-ROM is in it. ● Analyzes connection between the NAVI control unit and the GPS antenna and operation of each unit. | | |
| CONFIRMATION/ ADJUSTMENT | Display diagnosis | On display control unit mode, color tone and shading of the screen can be checked by the display of a color bar and a gray scale. | | |
| | Vehicle signals | On display control unit mode, analyzes the following vehicle signals: Vehicle speed signal, light signal ^{NOTE} , ignition switch signal, and reverse signal. | | |
| | Auto Climate Control | A/C self-diagnosis of A/C system. | | |
| | Navigation | Display diagnosis | On NAVI C/U mode, color tone and shading of the screen can be checked by the display of a color bar and a gray scale. | |
| | | Vehicle signals | On NAVI C/U mode, analyzes the following vehicle signals: Vehicle speed signal, light signal, ignition switch signal, and reverse signal. | |
| | | History of Errors | Diagnosis results previously stored in the memory (before turning ignition switch ON) are displayed in this mode. Time and location when/where the errors occurred are also displayed. | |
| | | Navigation | Display Longitude & Latitude | Display the map. Use the joystick to adjust position. Longitude and latitude will be displayed. |
| | | | Speed Calibration | Under ordinary conditions, the navigation system distance measuring function will automatically compensate for minute decreases in wheel and tire diameter caused by tire wear or low-pressure. Speed calibration immediately restores system accuracy in cases such as when distance calibration is needed because of the use of tire chains in inclement weather. |
| | Angle adjustment | | Corrects difference between actual turning angle of a vehicle and turning angle of the car mark on the display. | |
| | | Initialize Location | This mode is for initializing the current location. Use when the vehicle is transported a long distance on a trailer, etc. | |
| CAN DIAG SUPPORT MONITOR | | Display status of CAN communication. | | |

NOTE:


Make the status that is set by D/N function be shown.

Self-Diagnosis Mode (DCU) OPERATION PROCEDURE


1. Start the engine.
2. Turn the audio system off.
3. While pressing the "SCAN/RPT" button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
 - Shifting from current screen to previous screen is performed by pressing "DISP" button.

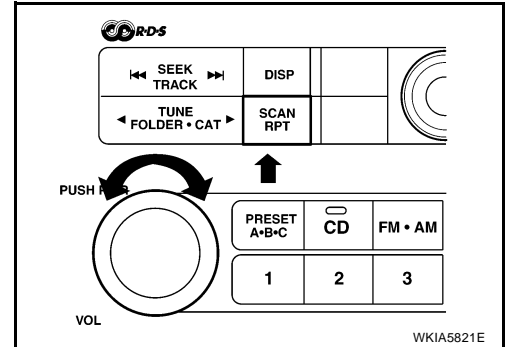


4. The initial self-diagnosis screen will be shown, and items "Self-Diagnosis (DCU)", "Self-Diagnosis (NAVI)", "Confirmation/Adjustment" and "CAN DIAG SUPPORT MONITOR" will become selective.

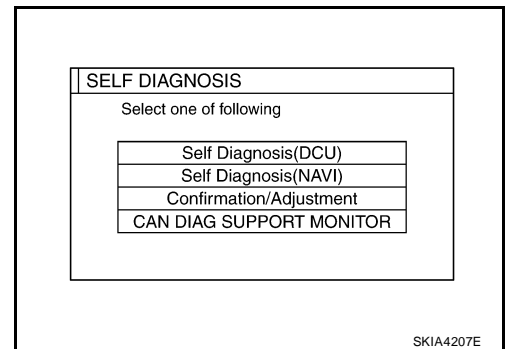

5. Perform self-diagnosis by selecting the "Self-diagnosis".
 - Self-diagnosis subdivision screen will be shown and the operation enters the self-diagnosis mode.
 - A bar graph shown below the self-diagnosis subdivision screen indicates progress of the diagnosis.

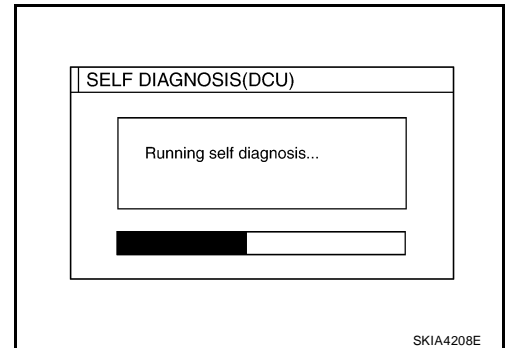

6. When the self-diagnosis completes, optional part confirmation screen will be shown.
 - When connection of an optional part is judged error, a screen to check if the optional part is actually fitted on the vehicle or not will be shown. When fitted, select the switch of the part on the screen and press "End". Then the "SELF DIAGNOSIS" screen will be shown.
 - When the optional part is connected normally, the switch for the part will not appear on the screen.

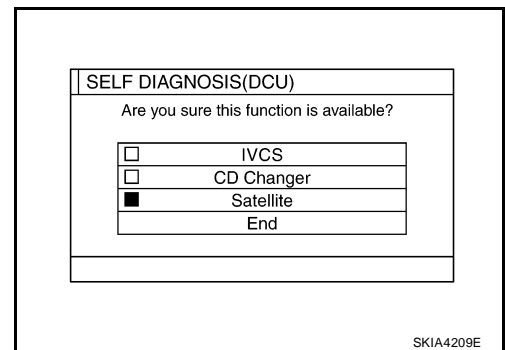


NAVIGATION SYSTEM

7. On the “SELF DIAGNOSIS” screen, each unit name will be colored according to the diagnosis result, as follows.


- Green** : Not malfunctioning.
- Yellow** : Cannot be judged by self-diagnosis results.
- Red** : Unit is malfunctioning.
- Gray** : Diagnosis has not been done.

- If several malfunctions are present in a unit, color of its switch on the screen will be either red, yellow, or gray, determined by the malfunction of the highest priority.

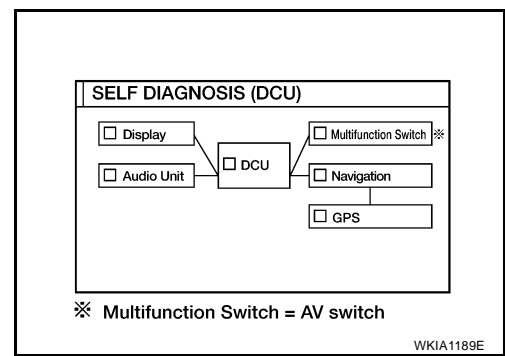

8. Select a switch on the “SELF DIAGNOSIS” screen and comments for the diagnosis results will be shown.

- When the switch is green, the following comment will be shown. “Self-diagnosis was successful. Further diagnosis and adjustments are recommended. Follow the “confirmation/adjustment” menu or refer to the service manual.”
- When the switch is yellow, the following comment will be shown. “Connection to the following unit is abnormal. See the service manual for further details”.
- When the switch is red, the following comment will be shown. “DCU is abnormal”.

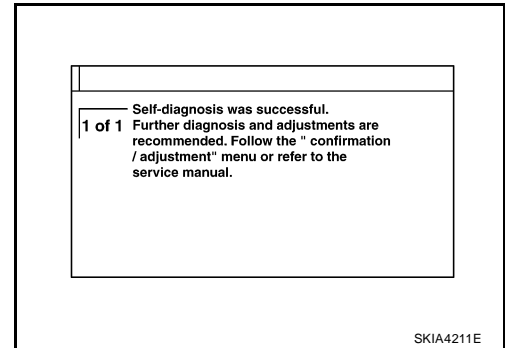

SELF-DIAGNOSIS RESULT

Quick reference table

1. Select a malfunctioning diagnosis No. in the diagnosis result quick reference table.
2. Find estimated malfunctioning system in the diagnosis No. table and perform check by referring to [AV-91, "Wiring Diagram — COMM —"](#).
3. Turn the ignition switch OFF and perform self-diagnosis again.

| Switch color | Screen switch | | | | | Diagnosis No. |
|--------------|---------------|---------|------------|------------|-------------|---------------|
| | DCU* | DISPLAY | Audio unit | Navigation | GPS antenna | |
| Red | × | | | | | 1 |
| Gray | × | x | | | | 2 |
| | x | | x | | | 3 |
| | × | | | x | x | 4 |

*: DCU = Display control unit

CAUTION:

- When AV switch has a malfunction, you cannot start. Refer to [AV-145, "Unable to Operate All of AV Switches \(Unable to Start Self-Diagnosis\)"](#).
- When display unit has a malfunction, you cannot start. Refer to [AV-142, "Screen is Not Shown"](#).

Self-Diagnosis Codes


| Diagnosis No. | Possible cause | Reference page |
|---------------|---|-----------------------------------|
| 1 | Display control unit malfunction | Refer to AV-153 . |
| 2 | Display communication line between display control unit and display unit | Refer to AV-128 . |
| 3 | Audio unit power supply and ground circuit Audio communication line between display control unit and audio unit | Refer to AV-126 . |
| 4 | NAVI control unit power supply and ground circuit AV communication line between display control unit and NAVI control unit | Refer to AV-125 . |

NAVIGATION SYSTEM


EKS00G6R

Self-Diagnosis Mode (NAVI) OPERATION PROCEDURE


1. Start the engine.
2. Turn the audio system off.
3. While pressing the "SCAN/RPT" button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
 - Shifting from current screen to previous screen is performed by pressing "DISP" button.

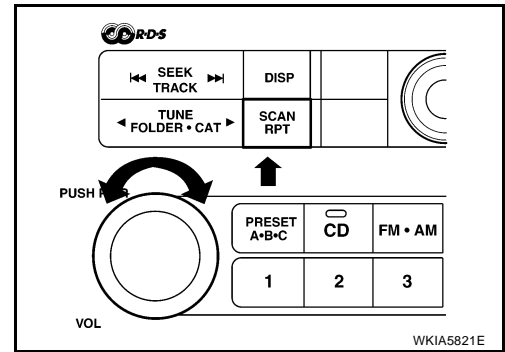

4. The initial self-diagnosis screen will be shown, and items "Self-Diagnosis (DCU)", "Self-Diagnosis (NAVI)", "Confirmation/Adjustment" and "CAN DIAG SUPPORT MONITOR" will become selective.

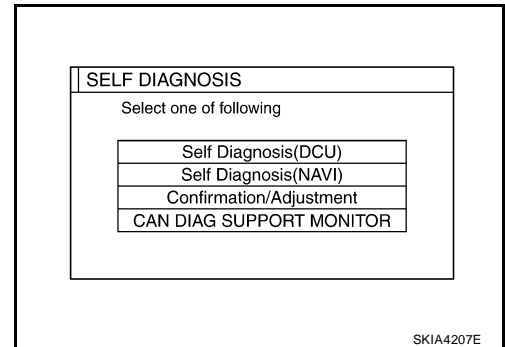


5. Perform self-diagnosis by selecting the "Self-diagnosis (NAVI)".
 - Self-diagnosis subdivision screen will be shown and the operation enters the self-diagnosis mode.
 - A bar graph will be shown on the screen to indicate progress of the diagnosis.

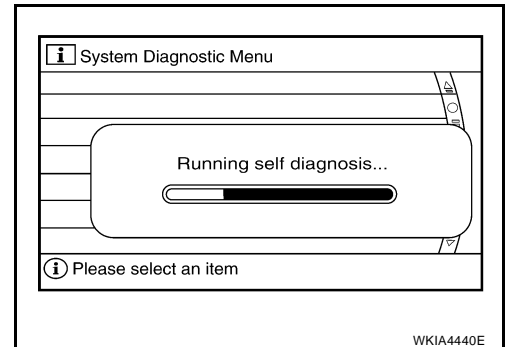

6. On the "SELF DIAGNOSIS" screen, each unit name will be colored according to the diagnosis result, as follows.

- Green** : Not malfunctioning.
- Yellow** : Cannot be judged by self-diagnosis results.
- Red** : Unit is malfunctioning.
- Gray** : Diagnosis has not been done.


- If several malfunctions are present in a unit, color of its switch on the screen will be either red, yellow, or gray, determined by the malfunction of the highest priority.

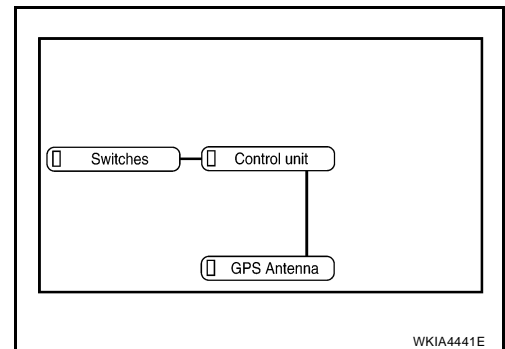

NAVIGATION SYSTEM

7. Select a switch on the “SELF DIAGNOSIS” screen and comments for the diagnosis results will be shown.

- When the switch is green, the following comment will be shown. “Connection is normal. Please refer to the Confirmation / Adjustment function or service manual for more detailed diagnosis information.”
- When the switch is yellow, the following comment will be shown. “Connection to the following unit is abnormal. See the service manual for further details”.
- When the switch is red, the following comment will be shown. “Center Control Unit is abnormal”.
- When the switch is gray, the following comment will be shown. “Self-diagnosis for DVD-ROM DRIVER of NAVI was not conducted because no DVD-ROM was available.”

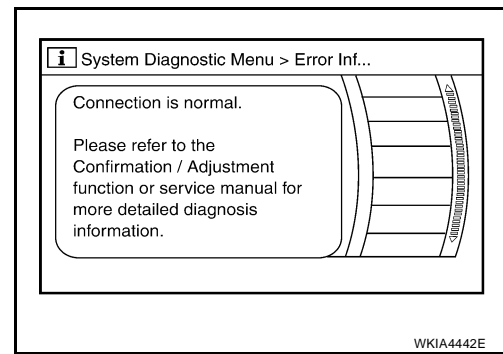

SELF-DIAGNOSIS RESULT

Quick reference table

1. Select an malfunctioning diagnosis No. in the diagnosis result quick reference table.
2. Find estimated malfunctioning system in the diagnosis No. table and perform check by referring to [AV-91, "Wiring Diagram — COMM —"](#).
3. Turn the ignition switch OFF and perform self-diagnosis again.

| Switch color | Screen switch | | Diagnosis No. |
|--------------|----------------------|-------------|---------------|
| | Center control unit* | GPS antenna | |
| Red | × | | 1 |
| Gray | × | | 2 |
| Yellow | × | | 3 |
| | × | | 4 |
| | × | × | 5 |

*: Center Control unit = NAVI control unit

CAUTION:

- When AV switch has a malfunction, you cannot start. Refer to [AV-145, "Unable to Operate All of AV Switches \(Unable to Start Self-Diagnosis\)"](#).
- When display unit has a malfunction, you cannot start. Refer to [AV-142, "Screen is Not Shown"](#).

Self-diagnosis codes


| Diagnosis No. | Possible cause | Reference page |
|---------------|--|---------------------------------|
| 1 | NAVI control unit malfunction. | Refer to AV-151 |
| 2 | No map DVD-ROM is inserted in the NAVI control unit. | Refer to AV-130 |
| 3 | When “DVD-ROM error. Please check disc.” is shown. 1. Eject map DVD-ROM and check if it is compatible with the system. 2. Check ejected DVD-ROM for dirt, damage, and warpage. 3. If no error is found, insert a known good map DVD-ROM of the same type and perform self-diagnosis again. If same result is shown, the NAVI control unit is malfunctioning. If result is normal, the map DVD-ROM is malfunctioning. | Refer to AV-131 |
| 4 | If “Error found in DVD-ROM or DVD-ROM driver in control unit. Please perform diagnosis in accordance with service manual” is shown, carry out same inspection as diagnosis No. 3. | Refer to AV-131 |
| 5 | GPS antenna system. 1. Visually check for a broken wire in the GPS antenna coaxial cable. 2. Disconnect GPS antenna connector, and make sure approximately 5V is supplied from the NAVI control unit. If not, the NAVI control unit is malfunctioning. If 5V is supplied, replace the GPS antenna. If the connection is still malfunction after the replacement of the GPS antenna, the NAVI control unit is malfunctioning. | Refer to AV-131 |

NAVIGATION SYSTEM


EKS00G6S

Confirmation/Adjustment Mode OPERATION PROCEDURE


1. Start the engine.
2. Turn the audio system off.
3. While pressing the “SCAN/RPT” button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
 - Shifting from current screen to previous screen is performed by pressing “DISP” button.

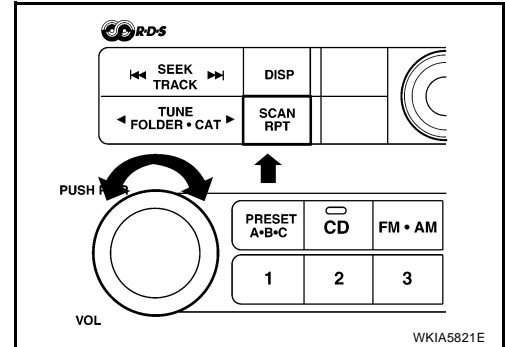

4. The initial self-diagnosis screen will be shown, and items “Self-Diagnosis (DCU)”, “Self-Diagnosis (NAVI)”, “Confirmation/Adjustment” and “CAN DIAG SUPPORT MONITOR” will become selective.

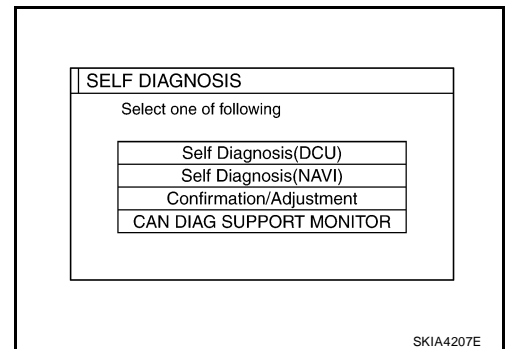


5. When “Confirmation/Adjustment” is selected on the initial self-diagnosis screen, the operation will enter the CONFIRMATION/ADJUSTMENT mode. In this mode, check and adjustment of each item will become possible.
6. The initial trouble diagnosis screen will be shown, and items “Display Diagnosis”, “Vehicle Signals”, “Auto Climate Control” and “Navigation” will become selective.
7. Select each switch on “CONFIRMATION/ADJUSTMENT” screen to display the relevant diagnosis screen.

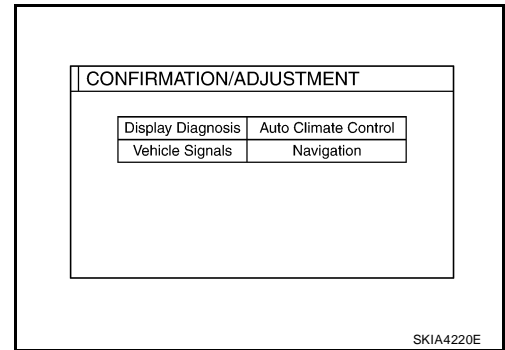

NAVIGATION SYSTEM

DISPLAY DIAGNOSIS

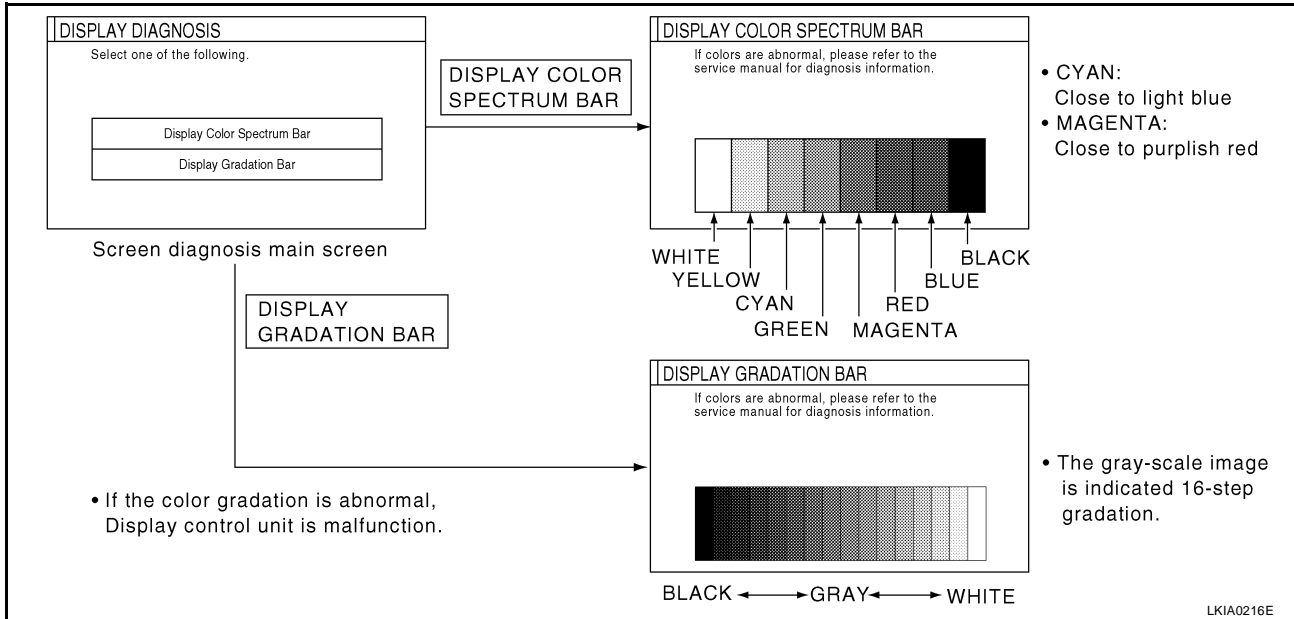

- When RGB signal error occurred in the RGB system, tone of the color bar will change as follows.

R (red) signal error : Screen looks bluish
G (green) signal error : Screen looks reddish
B (blue) signal error : Screen looks yellowish

- When the color of the screen looks unusual, refer to [AV-136, "Color of RGB Image is Not Proper \(All Screens Look Bluish\)"](#), [AV-137, "Color of RGB Image is Not Proper \(All Screens Look Reddish\)"](#) and [AV-138, "Color of RGB Image is Not Proper \(All Screens Look Yellowish\)"](#).

VEHICLE SIGNALS

- A comparison check can be made of each actual vehicle signal and the signals recognized by the system.

CAUTION:

In case of confirming light signal, set D/N mode to ON/OFF of lighting switch (normal setting).

- OFF: D (Day mode)
- ON: N (Night mode)

Unless above setting, light signal (ON/OFF) may not be accurately displayed.

| VEHICLE SIGNALS | |
|-----------------|-----|
| Vehicle Speed | OFF |
| IGN | ON |
| Reverse | OFF |
| IVCS | OFF |
| Light | OFF |

WKIA3250E

| Diagnosis item | Display | Condition | Remarks |
|----------------|---------|---------------------------------|--|
| Vehicle speed | ON | Vehicle speed > 0 km/h (0 MPH) | Changes in indication may be delayed by approx. 1.5 seconds. This is normal. |
| | OFF | Vehicle speed = 0 km/h (0 MPH) | |
| | – | Ignition switch in ACC position | |
| Light | ON | Lighting switch ON | – |
| | OFF | Lighting switch OFF | |
| IGN | ON | Ignition switch ON | – |
| | OFF | Ignition switch ACC | |


NAVIGATION SYSTEM

| Diagnosis item | Display | Condition | Remarks |
|----------------|---------|---|--|
| Reverse | ON | Selector lever in R position | Changes in indication may be delayed by approx. 1.5 seconds. This is normal. |
| | OFF | Selector lever in other than R position | |
| | – | Ignition switch in ACC position | |
| IVCS | OFF | Not used | – |

- If vehicle speed is NG, refer to [AV-122, "Vehicle Speed Signal Check for Display Control Unit"](#) .
- If light is NG, refer to [AV-123, "Illumination Signal Check for Display Control Unit"](#) .
- If IGN is NG, refer to [AV-124, "Ignition Signal Check for Display Control Unit"](#) .
- If reverse is NG, refer to [AV-124, "Reverse Signal Check for Display Control Unit"](#) .


NAVIGATION

1. The initial confirmation/adjustment screen will be shown, and items "Display Diagnosis", "Vehicle Signals", "Navigation", "Error History" and "Delete Unit Connection Log" will become selective.
2. Select each switch on "CONFIRMATION/ADJUSTMENT" screen to display the relevant diagnosis screen.

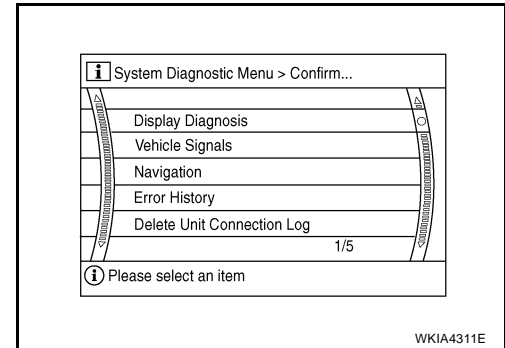

WKIA4311E

DISPLAY DIAGNOSIS

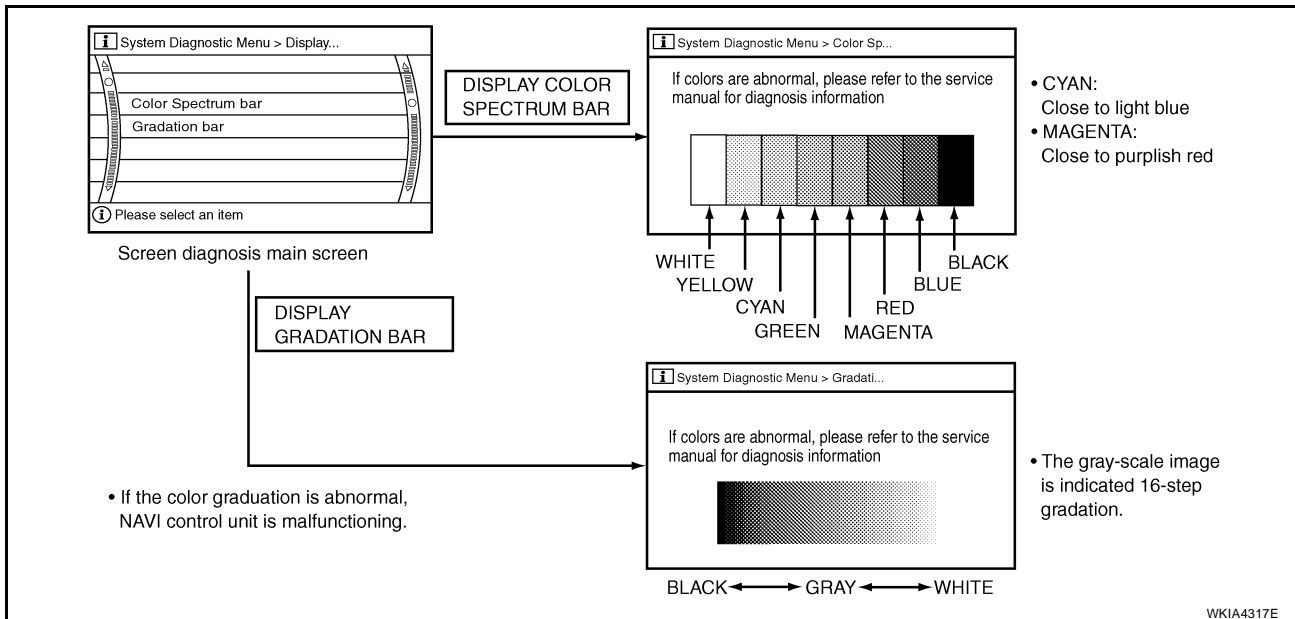

WKIA4317E

- When RGB signal error occurred in the RGB system, tone of the color bar will change as follows.
 - R (red) signal error** : Screen looks bluish
 - G (green) signal error** : Screen looks reddish
 - B (blue) signal error** : Screen looks yellowish
- When the color of the screen looks unusual, refer to [AV-133, "Color of RGB Image is Not Proper \(Only NAVI Screen Looks Bluish\)"](#) , [AV-134, "Color of RGB Image is Not Proper \(Only NAVI Screen Looks Reddish\)"](#) and [AV-135, "Color of RGB Image is Not Proper \(Only NAVI Screen Looks Yellowish\)"](#) .

NAVIGATION SYSTEM

VEHICLE SIGNALS


- A comparison check can be made of each actual vehicle signal and the signals recognized by the system.

CAUTION:

In case of confirming light signal, set D/N mode to ON/OFF of light switch (normal setting).

- OFF: D (Day mode)
- ON: N (Night mode)


Unless mode is in above setting, light signal (ON/OFF) may not be accurately displayed.

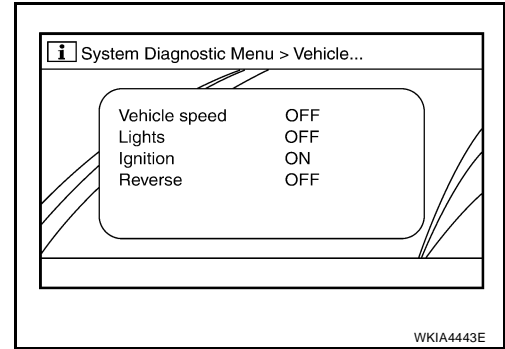

| Diagnosis item | Display | Condition | Remarks |
|----------------|---------|---|--|
| Vehicle speed | ON | Vehicle speed > 0 km/h (0 MPH) | Changes in indication may be delayed by approx. 1.5 seconds. This is normal. |
| | OFF | Vehicle speed = 0 km/h (0 MPH) | |
| | - | Ignition switch in ACC position | |
| Lights | ON | Lighting switch ON | - |
| | OFF | Lighting switch OFF | |
| Ignition | ON | Ignition switch ON | - |
| | OFF | Ignition switch ACC | |
| Reverse | ON | Selector lever in R position | Changes in indication may be delayed by approx. 1.5 seconds. This is normal. |
| | OFF | Selector lever in other than R position | |
| | - | Ignition switch in ACC position | |

- If vehicle speed is NG, refer to [AV-121, "Vehicle Speed Signal Check for NAVI Control Unit"](#) .
- If light is NG, refer to [AV-123, "Illumination Signal Check for NAVI Control Unit"](#) .
- If IGN is NG, refer to [AV-123, "Ignition Signal Check for NAVI Control Unit"](#) .
- If reverse is NG, refer to [AV-124, "Reverse Signal Check for NAVI Control Unit"](#) .

ERROR HISTORY

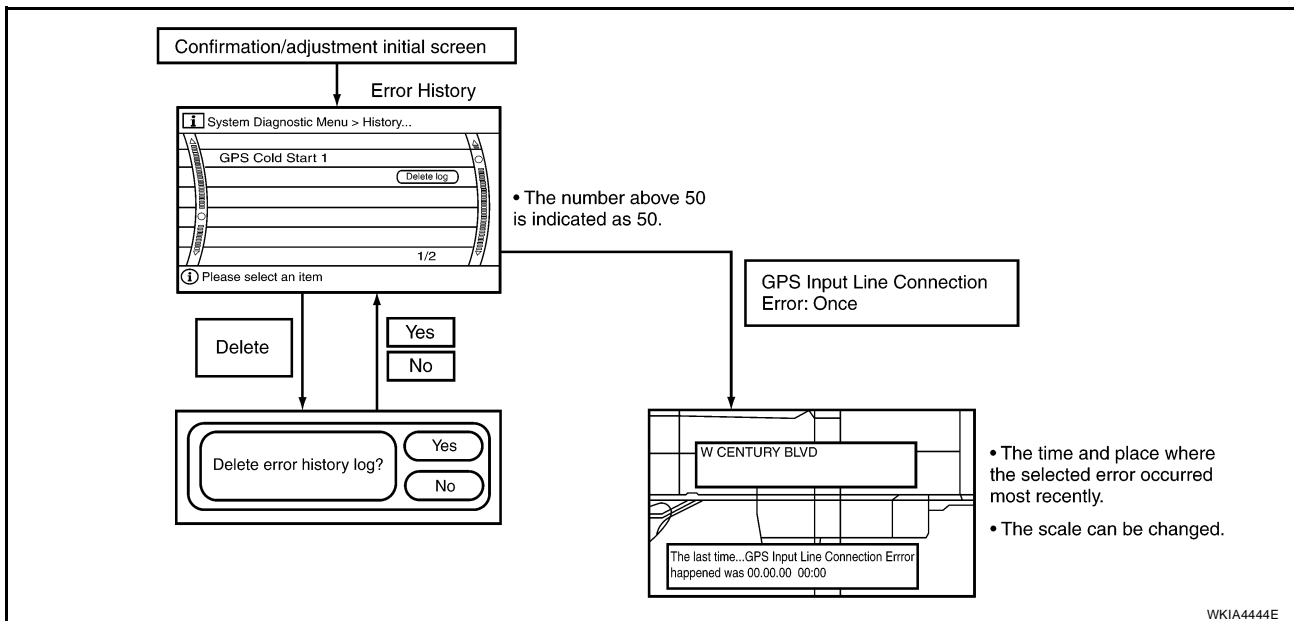

NAVIGATION SYSTEM

DIAGNOSIS BY ERROR HISTORY

The “Self-diagnosis” results indicate whether an error occurred during the period from when the ignition switch is turned to ON until “Self-diagnosis” is completed.

If an error occurred before the ignition switch was turned to ON and does not occur again until the “Self-diagnosis” is completed, the diagnosis result will be judged normal. Therefore, those errors in the past which cannot be found by the “Self-diagnosis” must be found by diagnosing the “Error History”.

The Error History displays the time and place of the most recent occurrence of that error. However, take note of the following points.

- Correct time of the error occurrence may not be displayed when the GPS antenna substrate within the NAVI control unit has malfunctioned.
- Place of the error occurrence is represented by the position of the current-location mark at the time when the error occurred. If the current-location mark has deviated from the correct position, then the place of the error occurrence may be located correctly.
- The maximum number of occurrences which can be stored is 50. For the 51st and later occurrences, the displayed number remains 50.

When a reproducible malfunction occurred but its cause cannot be identified because several errors are present, record the item, number and place (longitude/latitude) of error occurrence (or delete the Error History), then turn the ignition switch from OFF to ON to reproduce the malfunction. Check the Error History to find the items which show an increased number of occurrences, and diagnose the item.


| Error item | Possible causes | Example of symptom |
|------------------------------------|--|---|
| | Action/symptom | |
| Gyro sensor disconnected | Communications malfunction between NAVI control unit and internal gyro. | <ul style="list-style-type: none"> ● Navigation location detection performance has deteriorated. (Angular velocity cannot be detected.) |
| | <ul style="list-style-type: none"> ● Perform self-diagnosis. ● When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. | |
| GPS disconnected | Communication error between NAVI control unit and internal GPS substrate. | <ul style="list-style-type: none"> ● Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.) ● GPS receiving status remains gray. |
| | <ul style="list-style-type: none"> ● Perform self-diagnosis. ● When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. | |
| GPS transmission cable malfunction | Malfunctioning transmission wires to NAVI control unit and internal GPS substrate. | <ul style="list-style-type: none"> ● During self-diagnosis, GPS diagnosis is not performed. |
| | <ul style="list-style-type: none"> ● Perform self-diagnosis. ● When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. | |
| GPS input line connection error | Malfunctioning receiving wires to NAVI control unit and internal GPS substrate. | <ul style="list-style-type: none"> ● Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.) ● GPS receiving status remains gray. |
| | <ul style="list-style-type: none"> ● Perform self-diagnosis. ● When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. | |
| GPS TCX0 over GPS TCX0 under | Oscillating frequency of the GPS substrate frequency synchronizing oscillation circuit exceeded (or below) the specification | <ul style="list-style-type: none"> ● Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.) ● GPS receiving status remains gray. |
| | <ul style="list-style-type: none"> ● Perform self-diagnosis. ● When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference, or the control unit may have been subjected to excessively high or low temperatures. | |

NAVIGATION SYSTEM

| Error item | Possible causes | Example of symptom |
|---|---|--|
| | Action/symptom | |
| GPS ROM malfunction GPS RAM malfunction | Contents of ROM (or RAM) in GPS substrate are malfunctioning. | <ul style="list-style-type: none"> Location detection accuracy of the navigation system will deteriorate, depending on the error area in the memory, because GPS cannot make correct positioning. (Location correction using GPS is not performed.) |
| | <ul style="list-style-type: none"> Perform self-diagnosis. When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. | |
| GPS RTC malfunction | Clock IC in GPS substrate is malfunctioning. | <ul style="list-style-type: none"> Correct time may not be displayed. After the power is turned on, the system always takes some time until GPS positioning becomes possible. (The GPS receiver starts positioning without re-collecting the whole satellite information when it judged the data stored in the receiver is correct.) Correct time of error occurrence may not be stored in the "Error History". |
| | <ul style="list-style-type: none"> Perform self-diagnosis. When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. | |
| GPS antenna disconnected | Malfunctioning connection between GPS substrate in NAVI control unit and GPS antenna. | <ul style="list-style-type: none"> Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.) GPS receiving status remains gray. |
| | <ul style="list-style-type: none"> Perform self-diagnosis. When connection between NAVI control unit and GPS antenna is judged normal by self-diagnosis, the symptom may be intermittent, caused by impact or vibration. | |
| Low voltage of GPS | The power voltage supplied to the GPS circuit board has decreased. | <ul style="list-style-type: none"> Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.) GPS receiving status remains gray. |
| | <ul style="list-style-type: none"> Perform self-diagnosis. When connection between NAVI control unit and GPS antenna is judged normal by self-diagnosis, the symptom may be intermittent, caused by impact or vibration. | |
| DVD-ROM Malfunction DVD-ROM Read error DVD-ROM Response Error | Malfunctioning NAVI control unit. | - |
| | Dedicated map DVD-ROM is in the system, but the data cannot be read. <ul style="list-style-type: none"> Is map DVD-ROM damaged, warped, or dirty? <ul style="list-style-type: none"> If damaged or warped, the map DVD-ROM is malfunctioning. If dirty, wipe the DVD-ROM clean with a soft cloth. Perform self-diagnosis. When NAVI control unit is judged normal by self-diagnosis, the symptom is judged intermittent, caused by vibration. | <ul style="list-style-type: none"> The map of a particular location cannot be displayed. Specific guidance information cannot be displayed. Map display is slow. Guidance information display is slow. System has been affected by vibration. |

NAVIGATION


- The navigation screen will be shown, and items "Display Longitude & Latitude", "Speed Calibration", "Angle Adjustment" and "Initialize Location" will become selective.
- Select each switch on "NAVIGATION" screen to display the relevant diagnosis screen.

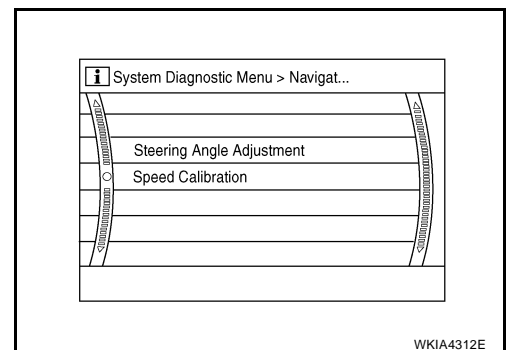

NAVIGATION SYSTEM


Angle adjustment

- Adjusts turning angle output detected by the gyroscope.

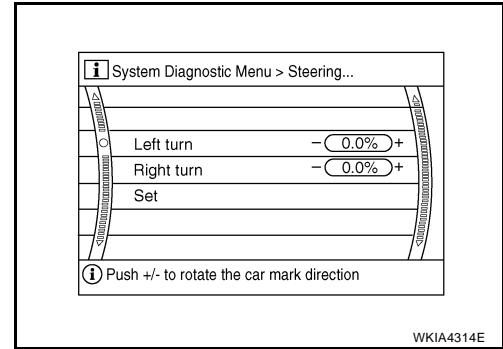


Speed Calibration

- During normal driving, distance error caused by tire wear and tire pressure change is automatically adjusted for by the automatic distance correction function. This function, on the other hand, is for immediate adjustment, in cases such as driving with tire chain fitted on tires.

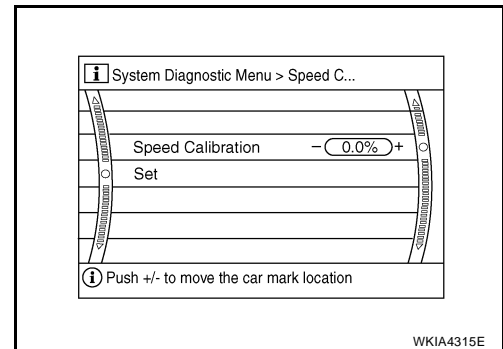


CAN DIAG SUPPORT MONITOR OPERATION PROCEDURE

1. Start the engine.
2. Turn the audio system off.
3. While pressing the "SCAN/RPT" button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
 - Shifting from current screen to previous screen is performed by pressing "DISP" button.

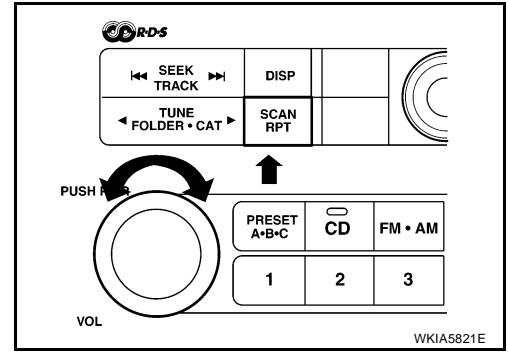


4. The initial self-diagnosis screen will be shown, and items "Self-Diagnosis (DCU)", "Self-Diagnosis (NAVI)", "Confirmation/Adjustment" and "CAN DIAG SUPPORT MONITOR" will become selective.
5. Select "CAN DIAG SUPPORT MONITOR".

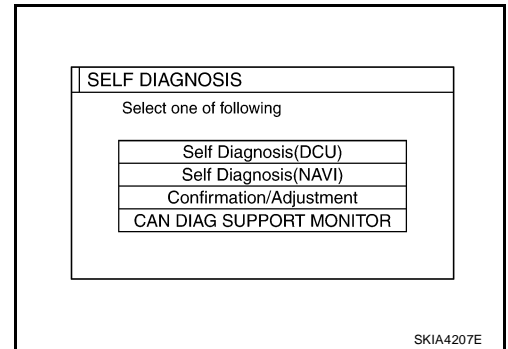

6. Display status of CAN communication.

| Item | Content | Error counter |
|------------|----------|---------------|
| CAN_COMM | OK/NG | 0-50 |
| CAN_CIRC_1 | OK/UNKWN | 0-50 |
| CAN_CIRC_2 | OK/UNKWN | 0-50 |
| CAN_CIRC_3 | OK/UNKWN | 0-50 |
| CAN_CIRC_4 | OK/UNKWN | 0-50 |
| CAN_CIRC_5 | OK/UNKWN | 0-50 |
| CAN_CIRC_6 | OK/UNKWN | 0-50 |
| CAN_CIRC_7 | OK/UNKWN | 0-50 |
| CAN_CIRC_8 | OK/UNKWN | 0-50 |
| CAN_CIRC_9 | OK/UNKWN | 0-50 |

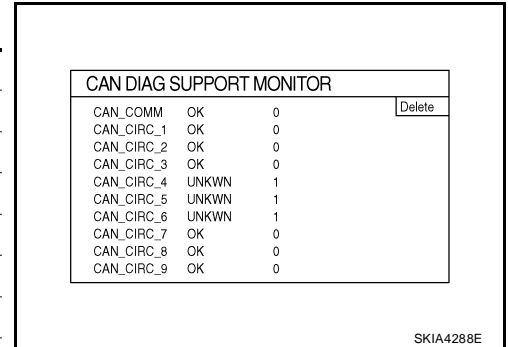

- If the ignition is turned on and UNKWN is shown on the screen, the value of the counter will be up. (MAX50)
- The value of the counter does not change if the ignition changes to OFF. (MAX50)
- If the counter shows the value of 50 and UNKWN is shown, the value of 50 will not be changed.

AV Switch Self-Diagnosis Function

Refer to [AV-33, "AV Switch Self-Diagnosis Function"](#) .

NAVIGATION SYSTEM

EKS00HKE

Power Supply and Ground Circuit Check for NAVI Control Unit

1. CHECK FUSE

Make sure the following fuses of the NAVI control unit are not blown.

| Terminals | | Power source | Fuse No. |
|-----------|----------|---------------|----------|
| Connector | Terminal | | |
| B151 | 2 | Battery power | 29 |
| | 5 | ACC/ON power | 4 |

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect NAVI control unit connector B151.
2. Check voltage between connector terminals and ground as follows.

| Terminals | | (-) | Ignition switch position | | |
|-----------|----------|--------|--------------------------|-----------------|-----------------|
| (+) | Terminal | | OFF | ACC | ON |
| B151 | 2 | Ground | Battery voltage | Battery voltage | Battery voltage |
| | 5 | | 0V | Battery voltage | Battery voltage |

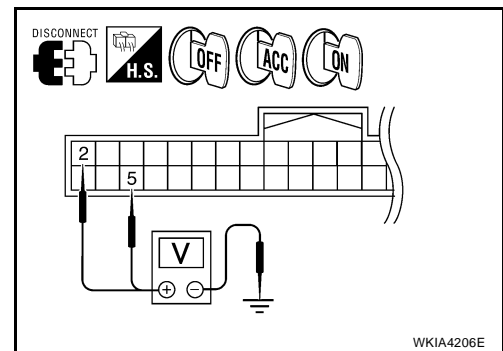

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between NAVI control unit and fuse.

3. CHECK GROUND CIRCUIT


1. Turn ignition switch OFF.
2. Check continuity between the following NAVI control unit connector terminals and ground.

| Terminals | | | Ignition switch | Continuity |
|-----------|----------|--------|-----------------|------------|
| Connector | Terminal | — | | |
| B151 | 1 | Ground | OFF | Yes |

OK or NG

OK >> Inspection End.

NG >> Repair or replace harness.

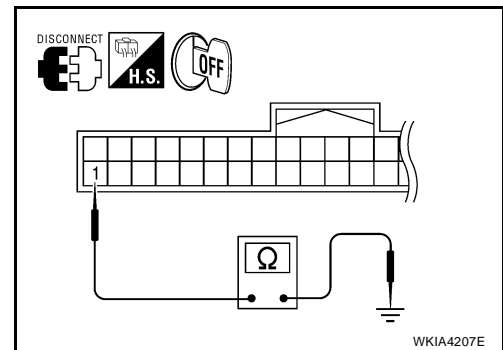

NAVIGATION SYSTEM

Power Supply and Ground Circuit Check for Display Control Unit

EKS00HKF

1. CHECK FUSE

Make sure the following fuses of the display control unit are not blown.

| Terminals | | Power source | Fuse No. |
|-----------|----------|---------------|----------|
| Connector | Terminal | | |
| M94 | 1 | Battery power | 29 |
| | 10 | ACC power | 4 |

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect display control unit connector M94.
2. Check voltage between connector terminals and ground as follows.

| Terminals | | (-) | Ignition switch position | | |
|-----------|----------|--------|--------------------------|-----------------|-----------------|
| (+) | Terminal | | OFF | ACC | ON |
| M94 | 1 | Ground | Battery voltage | Battery voltage | Battery voltage |
| | 10 | | 0V | Battery voltage | Battery voltage |

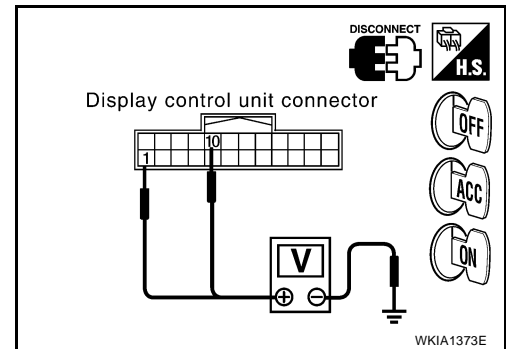

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between display control unit and fuse.

3. CHECK GROUND CIRCUIT


Check continuity between the following display control unit connector terminals and ground.

| Terminals | | | Ignition switch | Continuity |
|-----------|----------|--------|-----------------|------------|
| Connector | Terminal | — | | |
| M94 | 3 | Ground | OFF | Yes |

OK or NG

OK >> Inspection End.

NG >> Repair or replace harness.

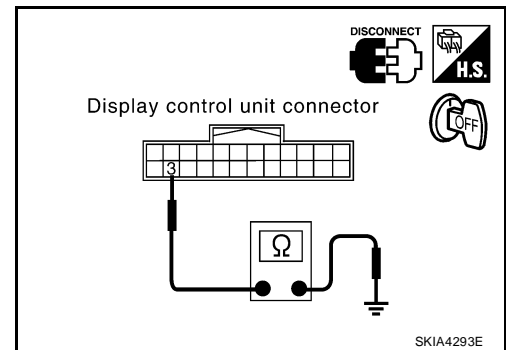

NAVIGATION SYSTEM

EKS00HKG

Power Supply and Ground Circuit Check for Display Unit

1. CHECK POWER SUPPLY AND GROUND CIRCUIT FOR DISPLAY CONTROL UNIT

1. Check power supply and ground circuit for display control unit. Refer to [AV-117, "Power Supply and Ground Circuit Check for Display Control Unit"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Repair malfunctioning part.


2. CHECK POWER SUPPLY CIRCUIT FOR DISPLAY UNIT

1. Disconnect display unit connector.
2. Turn ignition switch ON.
3. Check voltage between display unit harness connector M93 terminals 2, 3 and ground.

Approx. 9V

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 3.

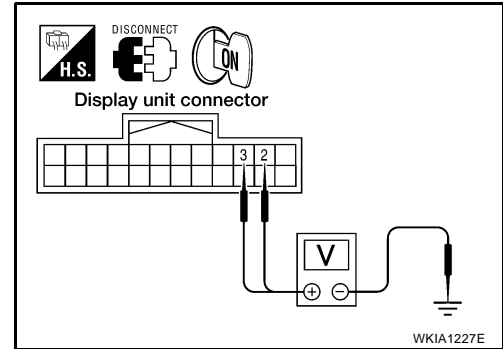

3. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect display unit connector M93 and display control unit connector M94.
3. Check continuity between display control unit harness connector M94 terminals 2, 4 and display unit harness connector M93 terminals 2, 3.


| Terminals | | | | Continuity |
|----------------------|----------|--------------|----------|------------|
| Display control unit | | Display unit | | |
| Connector | Terminal | Connector | Terminal | |
| M94 | 2 | M93 | 2 | Yes |
| | 4 | | 3 | |

4. Check continuity between display unit and ground.

| Terminals | | | | Continuity |
|--------------|----------|----------|----------|------------|
| Display unit | | — | | |
| Connector | Terminal | Terminal | Terminal | |
| M93 | 2 | Ground | 3 | No |
| | 3 | | 3 | |

OK or NG

- OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .
- NG >> Repair harness.

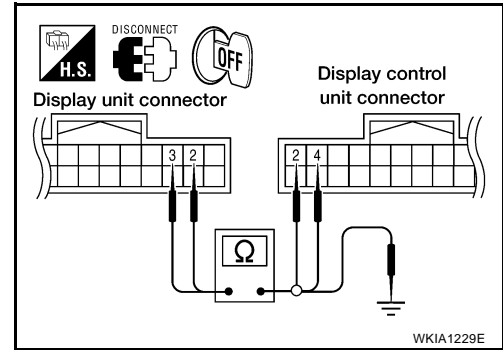

NAVIGATION SYSTEM


4. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between display unit harness connector M93 terminals 13, 14 and ground.

Continuity should exist.

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 5.

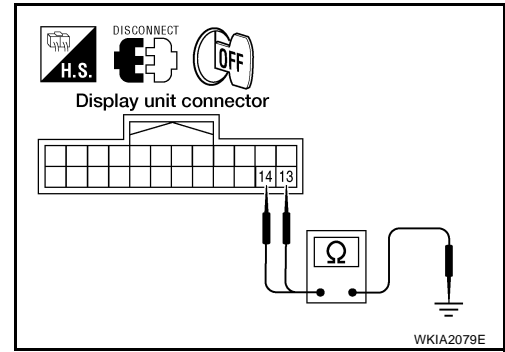


5. CHECK HARNESS

1. Disconnect display control unit connector M94.
2. Check continuity between display unit harness connector M93 terminals 13, 14 and display control unit harness connector M94 terminals 5, 7.

Continuity should exist.

OK or NG

- OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#).
- NG >> Repair harness.

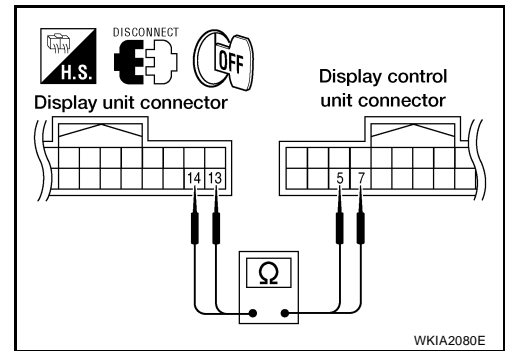


6. CHECK GROUND CIRCUIT

Check continuity between display unit and ground as follows.

| Terminals | | | Ignition switch | Continuity |
|-----------|----------|--------|-----------------|------------|
| Connector | Terminal | — | | |
| M93 | 1 | Ground | OFF | Yes |

OK or NG

- OK >> Inspection End.
 NG >> Repair harness.

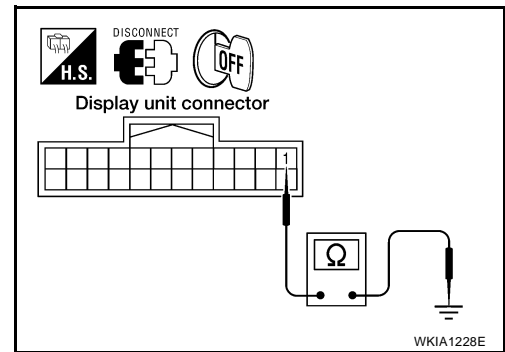

A
B
C
D
E
F
G
H
I
J
AV
L
M

NAVIGATION SYSTEM

Power Supply and Ground Circuit Check for AV Switch

EKS00HKH

1. CHECK FUSE

Make sure the following fuses of the AV switch are not blown.

| Terminals | | Power source | Fuse No. |
|-----------|----------|---------------|----------|
| Connector | Terminal | | |
| M98 | 1 | Battery power | 29 |
| | 2 | ACC power | 4 |

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect AV switch connector.
2. Check voltage between connector terminals and ground as follows.

| Terminals | | | Ignition switch position | | |
|-----------|----------|--------|--------------------------|-----------------|-----------------|
| (+) | | (-) | OFF | ACC | ON |
| Connector | Terminal | | Battery voltage | Battery voltage | Battery voltage |
| M98 | 1 | Ground | Battery voltage | Battery voltage | Battery voltage |
| | 2 | | 0V | Battery voltage | Battery voltage |

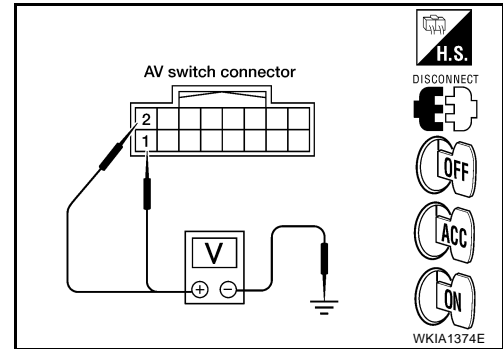

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between AV switch and fuse.

3. CHECK GROUND CIRCUIT


Check continuity between AV switch and ground as follows.

| Terminals | | | Ignition switch | Continuity |
|-----------|----------|--------|-----------------|------------|
| Connector | Terminal | — | | |
| M98 | 5 | Ground | OFF | Yes |

OK or NG

OK >> Inspection End.

NG >> Repair or replace harness.

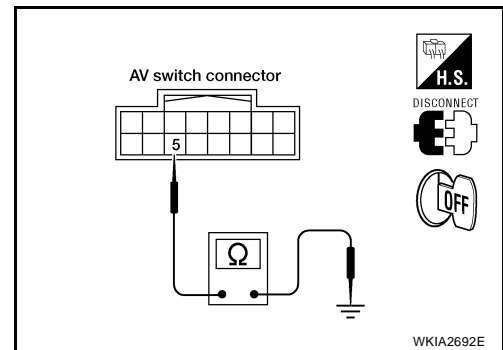

NAVIGATION SYSTEM

EKS00HKI

Vehicle Speed Signal Check for NAVI Control Unit


1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B152, combination meter connector M24 and display control unit connector M94.
3. Check continuity between NAVI control unit harness connector B152 (B) terminal 66 and combination meter harness connector M24 (A) terminal 6.

Continuity should exist.

4. Check continuity between NAVI control unit harness connector B152 (B) terminal 66 and ground.

Continuity should not exist.

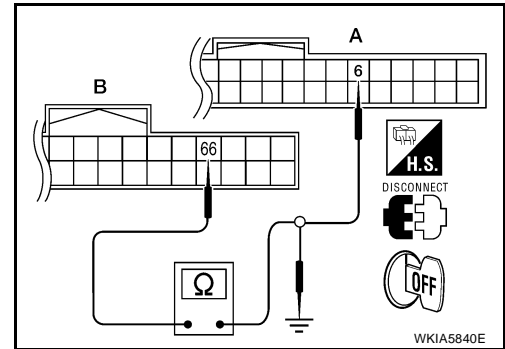

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness.


2. CHECK 1: VEHICLE SPEED SIGNAL

1. Connect NAVI control unit connector.
2. Turn ignition switch ON.
3. Check voltage between NAVI control unit harness connector B152 terminal 66 and ground.

Approx. 3.5V or more

OK or NG

- OK >> GO TO 3.
- NG >> Replace NAVI control unit. Refer to [AV-151, "NAVI CONTROL UNIT"](#).

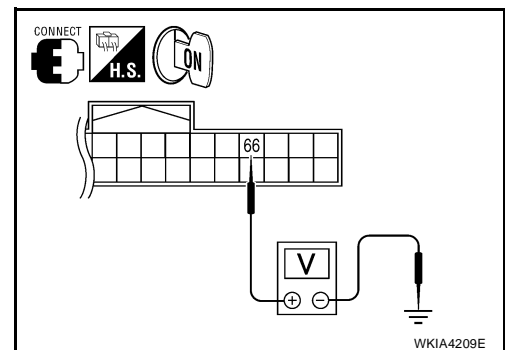


3. CHECK 2: VEHICLE SPEED SIGNAL

1. Connect combination meter connector and display control unit connector.
2. Drive vehicle at a constant speed.
3. Check signal between NAVI control unit harness connector B152 terminal 66 and ground with CONSULT-II or oscilloscope.

66 - Ground : Refer to [AV-94, "Terminals and Reference Values for NAVI Control Unit"](#).

OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-151, "NAVI CONTROL UNIT"](#).
- NG >> Check combination meter system. Refer to [DI-19, "Vehicle Speed Signal Inspection"](#).

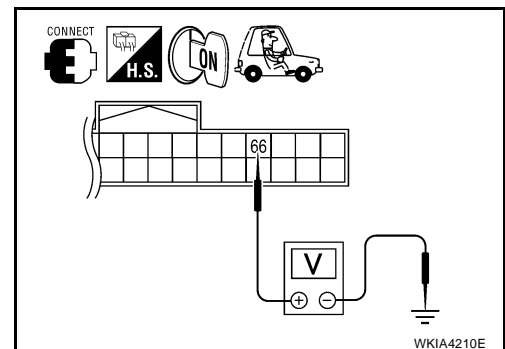

A
B
C
D
E
F
G
H
I
J
AV
L
M

NAVIGATION SYSTEM

EKS00HKJ

Vehicle Speed Signal Check for Display Control Unit

1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M94, combination meter connector M24, NAVI control unit connector B152.
3. Check continuity between display control unit harness connector M94 terminal 16 and combination meter harness connector M24 terminal 6.

Continuity should exist.


4. Check continuity between display control unit harness connector M94 terminal 16 and ground.

Continuity should not exist.

OK or NG

OK >> GO TO 2.

NG >> Repair harness.

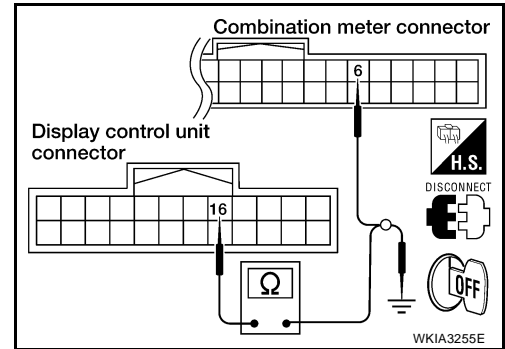

2. CHECK 1: VEHICLE SPEED SIGNAL


1. Connect display control unit connector.
2. Turn ignition switch ON.
3. Check voltage between display control unit harness connector M94 terminal 16 and ground.

Approx. 3.5V or more

OK or NG

OK >> GO TO 3.

NG >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#).

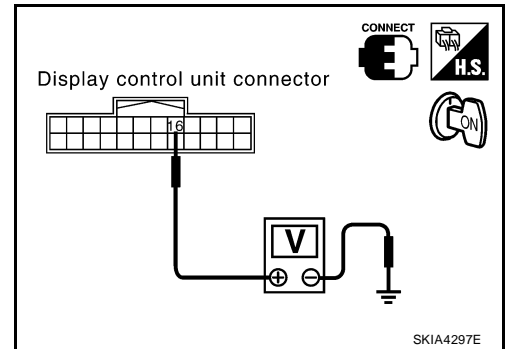

3. CHECK 2: VEHICLE SPEED SIGNAL


1. Connect combination meter connector and NAVI control unit connector.
2. Drive vehicle at a constant speed.
3. Check signal between display control unit harness connector M94 terminal 16 and ground with CONSULT-II or oscilloscope.

16 - Ground : Refer to [AV-96, "Terminals and Reference Values for Display Control Unit"](#).

OK or NG

OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#).

NG >> Check combination meter system. Refer to [DI-19, "Vehicle Speed Signal Inspection"](#).

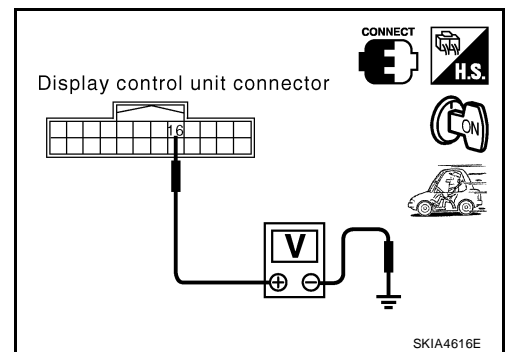

NAVIGATION SYSTEM

Illumination Signal Check for NAVI Control Unit

EKS00HKK


1. CHECK ILLUMINATION SIGNAL

1. Turn the ignition switch ON.
2. Check voltage between NAVI control unit and ground.

| Terminals | | Lighting switch position | | |
|-----------|----------|--------------------------|------------|-----|
| (+) | | | (-) | |
| Connector | Terminal | 1st or 2nd position | | OFF |
| B152 | 61 | Battery voltage | Approx. 0V | |

OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-151, "NAVI CONTROL UNIT"](#).
- NG >> Check harness for open or short between NAVI control unit and IPDM E/R.

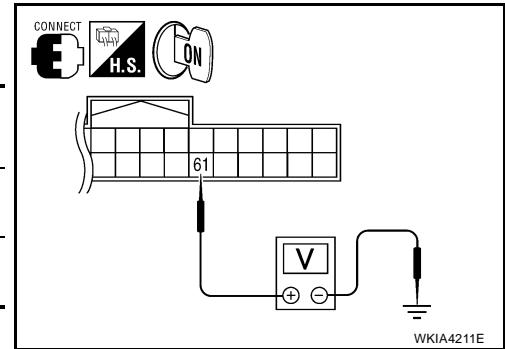

Illumination Signal Check for Display Control Unit

EKS00HKL


1. CHECK ILLUMINATION SIGNAL

1. Turn ignition switch ON.
2. Check voltage between display control unit and ground.

| Terminals | | Lighting switch position | | |
|-----------|----------|--------------------------|------------|-----|
| (+) | | | (-) | |
| Connector | Terminal | 1st or 2nd position | | OFF |
| M94 | 14 | Battery voltage | Approx. 0V | |

OK or NG

- OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#).
- NG >> Check harness for open or short between display control unit and IPDM E/R.

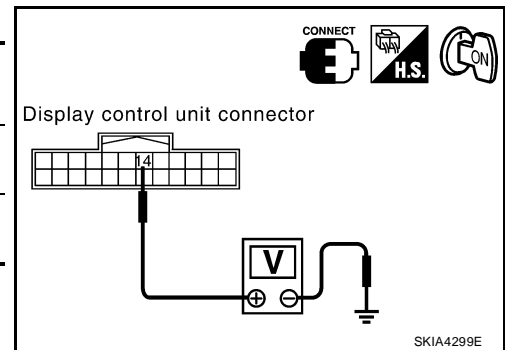

Ignition Signal Check for NAVI Control Unit

EKS00HKM


1. CHECK IGNITION SIGNAL

1. Disconnect NAVI control unit connector B152.
2. Turn ignition switch ON.
3. Check voltage between NAVI control unit harness connector B152 terminal 63 and ground.

Battery voltage should exist.

OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-151, "NAVI CONTROL UNIT"](#).
- NG >> Check harness for open or short between NAVI control unit and fuse.

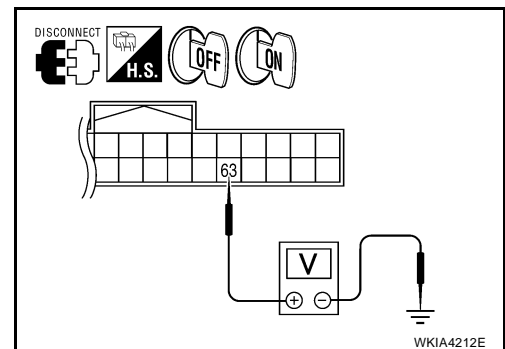

NAVIGATION SYSTEM

Ignition Signal Check for Display Control Unit

EKS00HKN


1. CHECK IGNITION SIGNAL

1. Disconnect display control unit connector M94.
2. Turn ignition switch ON.
3. Check voltage between display control unit harness connector M94 terminal 12 and ground.

Battery voltage should exist.

OK or NG

- OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#).
- NG >> Check harness for open or short between display control unit and fuse.

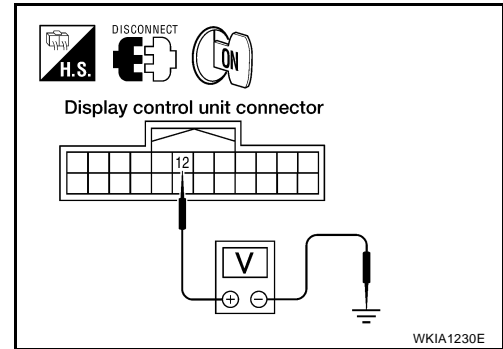

Reverse Signal Check for NAVI Control Unit

EKS00HKO

1. CHECK REVERSE LAMP

1. Turn ignition switch ON.
2. Place A/T selector lever into R-position. Do back-up lamps come on?


YES or NO

- YES >> GO TO 2.
- NO >> Check back-up lamp system. Refer to [LT-81, "BACK-UP LAMP"](#).

2. CHECK REVERSE SIGNAL

1. Disconnect NAVI control unit connector B152.
2. Turn ignition switch ON.
3. With the A/T selector lever in R-position, check voltage between NAVI control unit and ground.

| Terminals | | Selector lever position | | |
|-----------|----------|-------------------------|-----------------|-----------------------|
| (+) | | (-) | | |
| Connector | Terminal | | R-position | Other than R-position |
| B152 | 65 | Ground | Battery voltage | Approx. 0V |

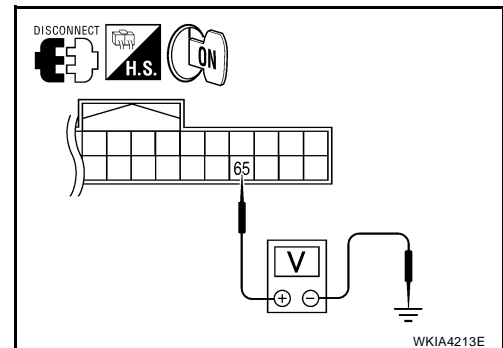

OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-151, "NAVI CONTROL UNIT"](#).
- NG >> Check harness for open or short between NAVI control unit and back-up lamp position relay.

Reverse Signal Check for Display Control Unit

EKS00HKP

1. CHECK REVERSE LAMP

1. Turn ignition switch ON.
2. Place selector lever into R-position. Do back-up lamps come on?

YES or NO

- YES >> GO TO 2.
- NO >> Check back-up lamp system. Refer to [LT-81, "BACK-UP LAMP"](#).

NAVIGATION SYSTEM


2. CHECK REVERSE SIGNAL

1. Disconnect display control unit connector M94.
2. Turn ignition switch ON.
3. With the selector lever in R-position, check voltage between display control unit and ground.

| Terminals | | Selector lever position | |
|-----------|----------|-------------------------|-----------------------|
| (+) | | (-) | |
| Connector | Terminal | R-position | Other than R-position |
| M94 | 6 | Battery voltage | Approx. 0V |

OK or NG

- OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#).
- NG >> Check harness for open or short between display control unit and back-up lamp position relay.

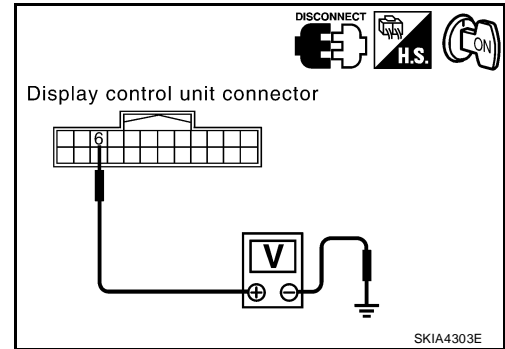

AV Communication Line Check (Between Display Control Unit and NAVI Control Unit)

EKS00HKQ

1. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit for NAVI control unit. Refer to [AV-116, "Power Supply and Ground Circuit Check for NAVI Control Unit"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Check the malfunctioning parts.

2. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B152 and display control unit connector M95.
3. Check continuity between NAVI control unit and display control unit.


| Terminals | | | | Continuity |
|-------------------------|----------|---------------------------|----------|------------|
| B | | A | | |
| Connector | Terminal | Connector | Terminal | |
| NAVI control unit: B152 | 69 | Display control unit: M95 | 32 | Yes |
| | 70 | | 34 | |

4. Check continuity between NAVI control unit and ground.

| Terminals | | | Continuity |
|-------------------------|----------|--|------------|
| B | | | |
| Connector | Terminal | | |
| NAVI control unit: B152 | 69 | | Ground |
| | 70 | | |

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

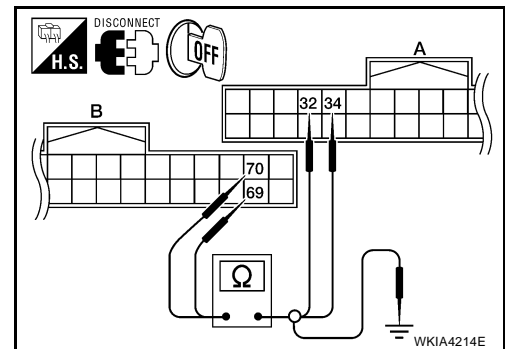

NAVIGATION SYSTEM

3. CHECK SELF-DIAGNOSIS OF DCU

1. Replace NAVI control unit.
2. Connect NAVI control unit connector and display control unit connector.
3. Turn ignition switch ON.
4. Start self-diagnosis of DCU and check the self-diagnosis result.

OK or NG

OK >> Inspection End.

NG >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .

Audio Communication Line Check (Between Display Control Unit and Audio Unit)

EKS00HKR

1. CHECK POWER SUPPLY AND GROUND CIRCUIT

1. Check power supply and ground circuit for audio unit. Refer to [AV-37, "Power Supply Circuit Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check the malfunctioning parts.

2. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect audio unit connector M45 and display control unit connector M95.
3. Check continuity between audio unit and display control unit.

| Terminals | | | | Continuity |
|----------------------|----------|------------|----------|------------|
| Display control unit | | Audio unit | | |
| Connector | Terminal | Connector | Terminal | |
| M95 | 40 | M45 | 65 | Yes |
| | 42 | | 66 | |

4. Check continuity between display control unit and ground.

| Terminals | | | | Continuity |
|----------------------|----------|--------|--|------------|
| Display control unit | | — | | |
| Connector | Terminal | | | |
| M95 | 40 | Ground | | No |
| | 42 | | | |

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

3. CHECK 1: AUDIO-TX COMMUNICATION SIGNAL



1. Connect display control unit connector.
2. Turn ignition switch ON.
3. Check voltage between display control unit harness connector M95 terminal 42 and ground.

Approx. 3.5V or more.

OK or NG

OK >> GO TO 4.

NG >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .

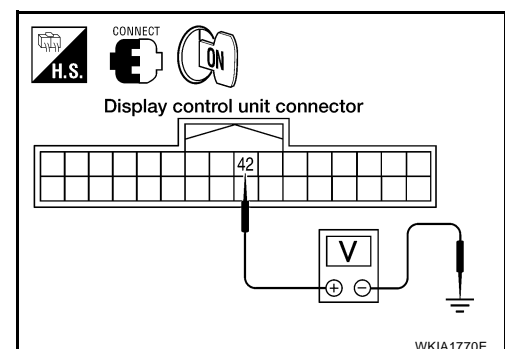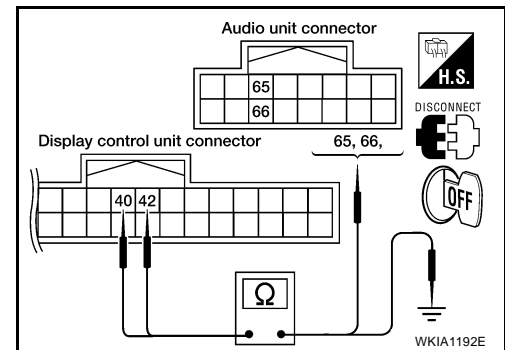

NAVIGATION SYSTEM

4. CHECK 2: AUDIO-RX COMMUNICATION SIGNAL


1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95.
3. Connect audio unit connector M45.
4. Turn ignition switch ON.
5. Check voltage between audio unit harness connector M45 terminal 65 and ground.

Approx. 3.5V or more.

OK or NG

OK >> GO TO 5.

NG >> Replace audio unit. Refer to [AV-61, "Removal and Installation"](#) .

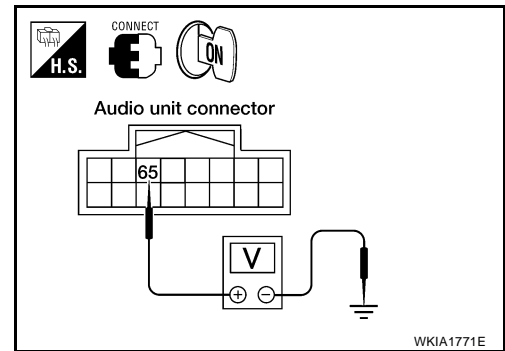

5. CHECK 3: AUDIO-TX COMMUNICATION SIGNAL

1. Turn ignition switch OFF.
2. Connect display control unit connector M95.
3. Turn ignition switch ON.
4. Check signal between display control unit harness connector M95 terminal 40 and ground with CONSULT-II or oscilloscope.


40 - Ground

: Refer to [AV-96, "Terminals and Reference Values for Display Control Unit"](#) .

OK or NG

OK >> GO TO 6.

NG >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .

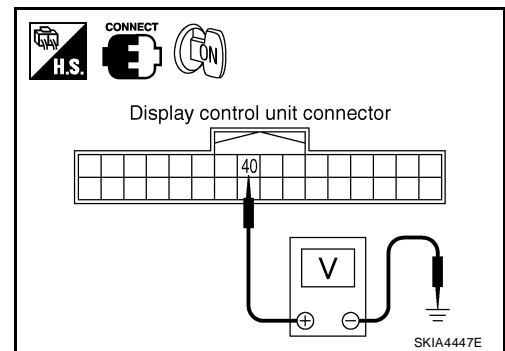

6. CHECK 4: AUDIO-RX COMMUNICATION SIGNAL

1. Turn ignition switch ON.
2. Check signal between display control unit harness connector M95 terminal 42 and ground with CONSULT-II or oscilloscope.


42 - Ground

: Refer to [AV-96, "Terminals and Reference Values for Display Control Unit"](#) .

OK or NG

OK >> Inspection End.

NG >> Replace audio unit. Refer to [AV-61, "Removal and Installation"](#) .

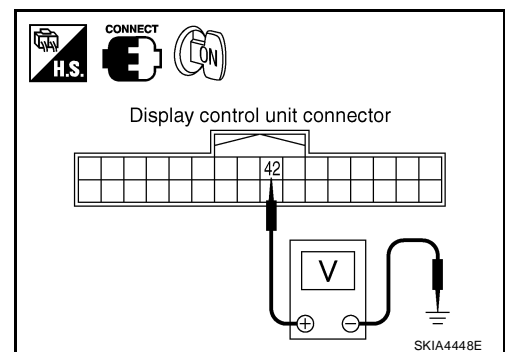

A
B
C
D
E
F
G
H
I
J

AV

L
M

NAVIGATION SYSTEM

Display Communication Line Check (Between Display Control Unit and Display Unit)

EKS00HKS


1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect display unit connector M93 and display control unit connector M95.
3. Check continuity between display control unit and display unit.

| Terminals | | | | Continuity |
|----------------------|----------|--------------|----------|------------|
| Display control unit | | Display unit | | |
| Connector | Terminal | Connector | Terminal | |
| M95 | 36 | M93 | 11 | Yes |
| | 38 | | 22 | |

4. Check continuity between display control unit and ground.

| Terminals | | | | Continuity |
|----------------------|----------|--------|--|------------|
| Display control unit | | — | | |
| Connector | Terminal | | | |
| M95 | 36 | Ground | | No |
| | 38 | | | |

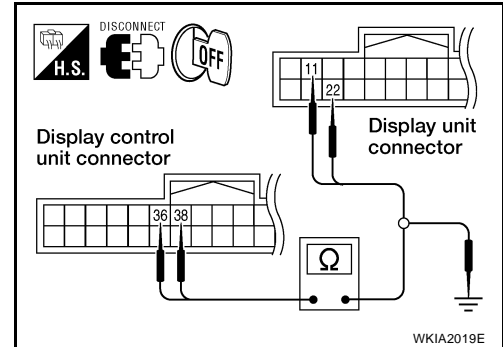

OK or NG

- OK >> GO TO 2.
 NG >> Repair harness or connector.


2. CHECK 1: COMMUNICATION SIGNAL (DCU–DSP)

1. Connect display unit connector.
2. Turn ignition switch ON.
3. Check voltage between display unit harness connector M93 terminal 11 and ground.

Approx. 3.5V or more.

OK or NG

- OK >> GO TO 3.
 NG >> Replace display unit. Refer to [AV-152, "DISPLAY UNIT"](#)

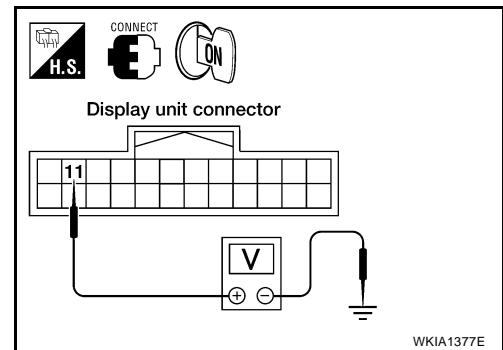


3. CHECK 2: COMMUNICATION SIGNAL (DSP–DCU)

1. Turn ignition switch OFF.
2. Connect display control unit connector.
3. Turn ignition switch ON.
4. Check voltage between display control unit harness connector M95 terminal 38 and ground.

Approx. 3.5V or more.

OK or NG

- OK >> GO TO 4.
 NG >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#).

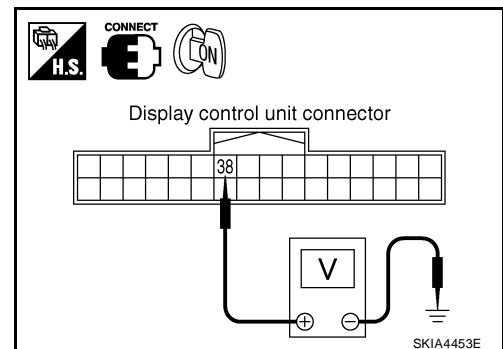

NAVIGATION SYSTEM


4. CHECK 3: COMMUNICATION SIGNAL (DCU-DSP)

Check signal between display control unit harness connector M95 terminal 36 and ground with CONSULT-II or oscilloscope.

36 - Ground : Refer to [AV-96, "Terminals and Reference Values for Display Control Unit"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .

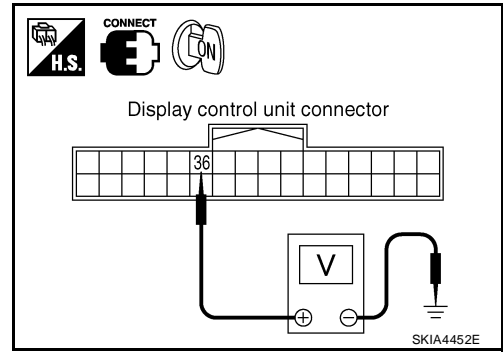


5. CHECK 4: COMMUNICATION SIGNAL (DSP-DCU)

Check signal between display control unit harness connector M95 terminal 38 and ground with CONSULT-II or oscilloscope.

38 - Ground : Refer to [AV-96, "Terminals and Reference Values for Display Control Unit"](#) .

OK or NG

- OK >> Inspection End.
- NG >> Replace display unit. Refer to [AV-152, "DISPLAY UNIT"](#)

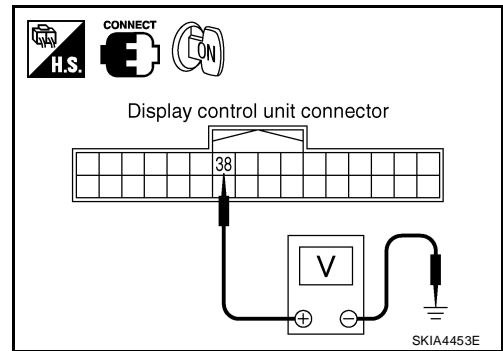

AV Communication Line Check (Between Display Control Unit and AV Switch)

EKS00HKT

1. CHECK AV SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95 and AV switch connector M98.
3. Check continuity between display control unit and AV switch.


| Terminals | | | | Continuity |
|----------------------|----------|-----------|----------|------------|
| Display control unit | | AV switch | | |
| Connector | Terminal | Connector | Terminal | |
| A: M95 | 28 | B: M98 | 6 | Yes |
| | 30 | | 8 | |

4. Check continuity between display control unit and ground.

| Terminals | | | | Continuity |
|----------------------|----------|--------|--|------------|
| Display control unit | | — | | |
| Connector | Terminal | | | |
| A: M95 | 28 | Ground | | No |
| | 30 | | | |

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness or connector.

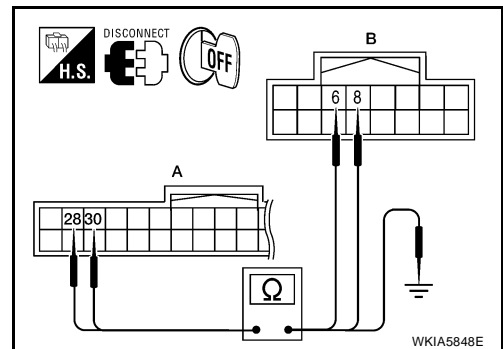

A
B
C
D
E
F
G
H
I
J
L
M

AV

NAVIGATION SYSTEM

2. CHECK SELF-DIAGNOSIS OF DCU

1. Replace AV switch.
2. Connect display control unit connector and AV switch connector.
3. Turn ignition switch ON.
4. Start self-diagnosis of DCU and check the self-diagnosis result.

OK or NG

OK >> Inspection End.

NG >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .


CAN Communication Line Check

EKS00HKU

1. CHECK MONITOR DESCRIPTION

1. Start display control unit self-diagnosis. Refer to [AV-104, "Self-Diagnosis Mode \(DCU\)"](#) .
2. Select "CAN DIAG SUPPORT MONITOR". Refer to [AV-115, "CAN DIAG SUPPORT MONITOR"](#) .

| Item | content | | Error counter |
|------------|------------------|-----------------|---------------|
| | Normal condition | Error (Example) | |
| CAN_COMM | OK | NG | 0-50 |
| CAN_CIRC_1 | OK | UNKWN | 0-50 |
| CAN_CIRC_2 | OK | UNKWN | 0-50 |
| CAN_CIRC_3 | OK | UNKWN | 0-50 |
| CAN_CIRC_4 | OK | UNKWN | 0-50 |
| CAN_CIRC_5 | OK | UNKWN | 0-50 |
| CAN_CIRC_6 | OK | UNKWN | 0-50 |
| CAN_CIRC_7 | OK | UNKWN | 0-50 |
| CAN_CIRC_8 | OK | UNKWN | 0-50 |
| CAN_CIRC_9 | OK | UNKWN | 0-50 |

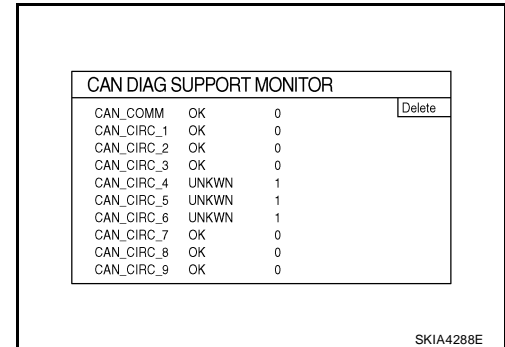

3. Record each item display description (OK/NG/UNKWN) displayed on the following CAN DIAG SUPPORT MONITOR Check Sheet.

CAN DIAG SUPPORT MONITOR Check Sheet

| Diagnosis item | Screen display | | Diagnosis item | Screen display | |
|----------------|----------------|-------|----------------|----------------|-------|
| CAN_COMM | OK | NG | CAN_CIRC_5 | OK | UNKWN |
| CAN_CIRC_1 | OK | UNKWN | CAN_CIRC_6 | OK | UNKWN |
| CAN_CIRC_2 | OK | UNKWN | CAN_CIRC_7 | OK | UNKWN |
| CAN_CIRC_3 | OK | UNKWN | CAN_CIRC_8 | OK | UNKWN |
| CAN_CIRC_4 | OK | UNKWN | CAN_CIRC_9 | OK | UNKWN |

>> After filling in CAN DIAG SUPPORT MONITOR Check Sheet, GO TO [LAN-44, "TROUBLE DIAGNOSIS"](#) .

If NAVI Control Unit Detects That DVD-ROM Map is Not Inserted

EKS00HKV

1. CHECK DVD-ROM

Make sure identified DVD-ROM map is inserted.

OK or NG

OK >> Replace NAVI control unit. Refer to [AV-151, "NAVI CONTROL UNIT"](#) .

NG >> Insert identified DVD-ROM map.

NAVIGATION SYSTEM

If NAVI Control Unit Detects That Inserted DVD-ROM Map is Malfunctioning or If It is Impossible to Load Data from DVD-ROM Map

EKS00HKW

1. CHECK 1: DVD-ROM

Remove inserted DVD-ROM map to check that it is identified.

OK or NG

OK >> GO TO 2.

NG >> Replace identified DVD-ROM map.

2. CHECK 2: DVD-ROM

Check DVD-ROM for dirt, scratches and warpage.

OK or NG

OK >> GO TO 3.

NG >> Replace DVD-ROM map.

3. CHECK 3: DVD-ROM

Insert same DVD-ROM to make sure same diagnosis result is found as last self-diagnosis.

OK or NG

OK >> Replace NAVI control unit. Refer to [AV-151, "NAVI CONTROL UNIT"](#) .

NG >> Replace DVD-ROM map.

If Connection Between NAVI Control Unit and GPS Antenna is Malfunctioning

EKS00HKX

1. CHECK GPS ANTENNA

Check cable for GPS antenna for damage.

OK or NG

OK >> GO TO 2.

NG >> Replace GPS antenna. Refer to [AV-152, "GPS ANTENNA"](#) .

2. CHECK BY REPLACEMENT OF GPS ANTENNA

Replace with other functional GPS antenna to try self-diagnosis again.

Result of self-diagnosis; Found same result?

YES >> Replace NAVI control unit. Refer to [AV-151, "NAVI CONTROL UNIT"](#) .

NO >> Replace GPS antenna. Refer to [AV-152, "GPS ANTENNA"](#) .

A

B

C

D

E

F

G

H

I

J

AV

L

M

NAVIGATION SYSTEM

Operating Screen for Audio and A/C is Not Displayed When Showing NAVI Screen

EKS00HKY


1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95 and display unit connector M93.
3. Check continuity between display control unit harness connector M95 terminal 49, 51, 53, 55 and display unit harness connector M93 terminal 21, 9, 20, 8.

Continuity should exist.

4. Check continuity between display control unit harness connector M95 terminal 49, 51, 53 55 and ground.

Continuity should not exist.

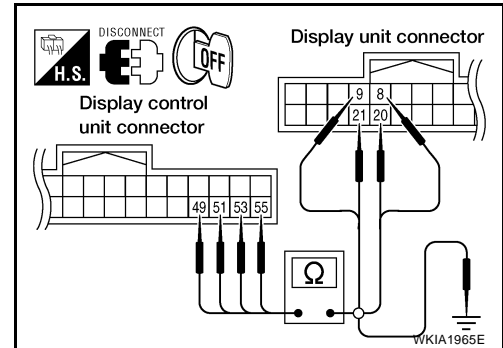

OK or NG

OK >> GO TO 2.

NG >> Repair harness.

2. CHECK HORIZONTAL SYNCHRONIZATION SIGNAL


1. Connect display control unit connector and display unit connector.
2. Turn ignition switch ON.
3. Check signal between display control unit connector M95 terminals 55 and 49 with CONSULT-II or oscilloscope.

55 - 49 : Refer to [AV-96, "Terminals and Reference Values for Display Control Unit"](#) .

OK or NG

OK >> GO TO 3.

NG >> Replace display unit. Refer to [AV-152, "DISPLAY UNIT"](#)

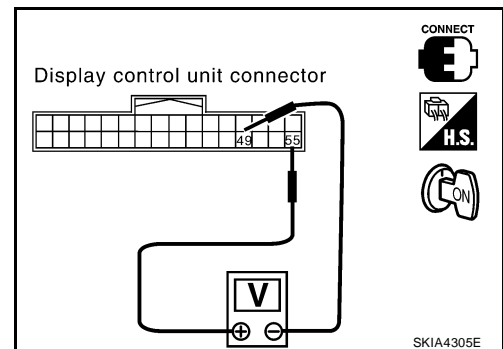

3. CHECK VERTICAL SYNCHRONIZATION SIGNAL


1. Turn ignition switch ON.
2. Check signal between display control unit connector M95 terminals 53 and 49 with CONSULT-II or oscilloscope.

53 - 49 : Refer to [AV-96, "Terminals and Reference Values for Display Control Unit"](#) .

OK or NG

OK >> GO TO 4.

NG >> Replace display unit. Refer to [AV-152, "DISPLAY UNIT"](#)

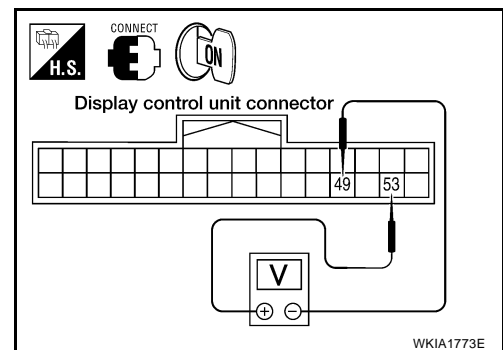

NAVIGATION SYSTEM

4. CHECK RGB AREA SIGNAL


1. Press the "TRIP" button.
2. Check signal between display control unit connector M95 terminals 51 and 49 with CONSULT-II or oscilloscope.

51 - 49 : Refer to [AV-96, "Terminals and Reference Values for Display Control Unit"](#) .

OK or NG

OK >> Replace display unit. Refer to [AV-152, "DISPLAY UNIT"](#)

NG >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .

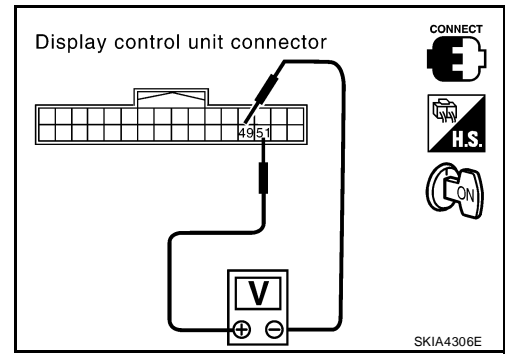

Color of RGB Image is Not Proper (Only NAVI Screen Looks Bluish)

EKS00HKZ


1. CHECK RGB HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B152 and display control unit connector M95.
3. Check continuity between NAVI control unit and display control unit.
4. Check continuity between NAVI control unit and ground.

● **When the screen looks bluish.**

| Terminals | | | | Continuity |
|-------------------------|----------|---------------------------|----------|------------|
| B | | A | | |
| Connector | Terminal | Connector | Terminal | |
| NAVI control unit: B152 | 44 | Display control unit: M95 | 44 | Yes |
| | 47 | | 45 | |

| Terminals | | | | Continuity |
|-------------------------|----------|--------|--|------------|
| B | | — | | |
| Connector | Terminal | | | |
| NAVI control unit: B152 | 44 | Ground | | No |
| | 47 | | | |

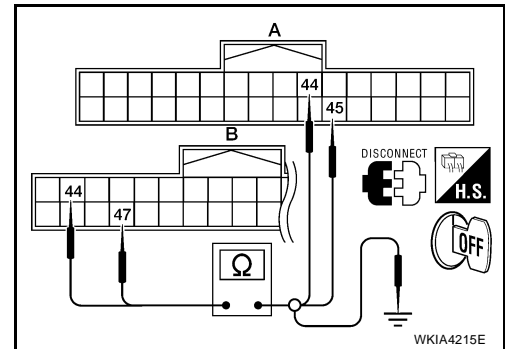

OK or NG

OK >> GO TO 2.

NG >> Repair harness or connector.


NAVIGATION SYSTEM

2. CHECK RGB SIGNAL

1. Connect NAVI control unit connector and display control unit connector.
 2. Turn ignition switch ON.
 3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
 4. Check signal between NAVI control unit connector B152 terminal 44 and 47 with CONSULT-II or oscilloscope.
- **When the screen looks bluish.**
Voltage signal between NAVI control unit connector B152 terminal 44 and 47.

44 - 47

: Refer to [AV-94, "Terminals and Reference Values for NAVI Control Unit"](#) .

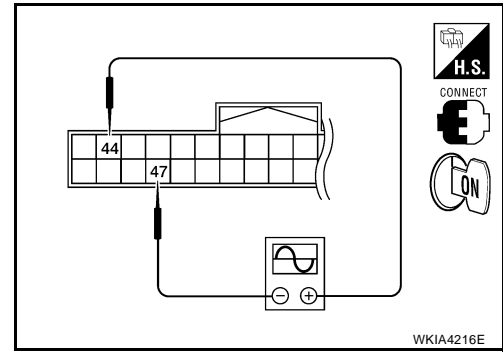

OK or NG

- OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .
 NG >> Replace NAVI control unit. Refer to [AV-151, "NAVI CONTROL UNIT"](#) .

Color of RGB Image is Not Proper (Only NAVI Screen Looks Reddish)


EKS00HL0

1. CHECK RGB HARNESS

1. Turn ignition switch OFF.
 2. Disconnect NAVI control unit connector B152 and display control unit connector M95.
 3. Check continuity between NAVI control unit and display control unit.
 4. Check continuity between NAVI control unit and ground.
- **When the screen looks reddish.**

| Terminals | | | | Continuity |
|-------------------------|----------|---------------------------|----------|------------|
| B | | A | | |
| Connector | Terminal | Connector | Terminal | |
| NAVI control unit: B152 | 45 | Display control unit: M95 | 46 | Yes |
| | 47 | | 45 | |

| Terminals | | | | Continuity |
|-------------------------|----------|--------|--|------------|
| B | | — | | |
| Connector | Terminal | | | |
| NAVI control unit: B152 | 45 | Ground | | No |
| | 47 | | | |

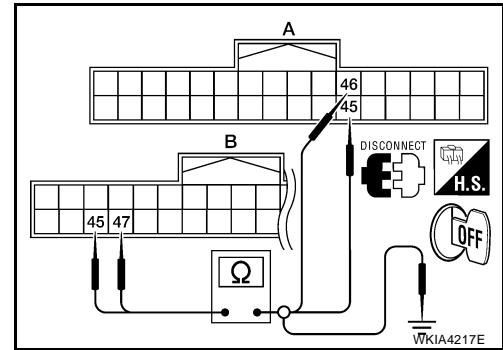


OK or NG

- OK >> GO TO 2.
 NG >> Repair harness or connector.

NAVIGATION SYSTEM

2. CHECK RGB SIGNAL

1. Connect NAVI control unit connector and display control unit connector.
 2. Turn ignition switch ON.
 3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
 4. Check signal between NAVI control unit connector B152 terminal 45 and 47 with CONSULT-II or oscilloscope.
- **When the screen looks reddish.**
Voltage signal between NAVI control unit connector B152 terminal 45 and 47.

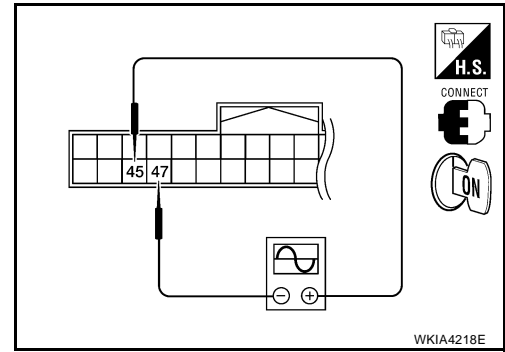

45 - 47

: Refer to [AV-94, "Terminals and Reference Values for NAVI Control Unit"](#) .

OK or NG

- OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .
 NG >> Replace NAVI control unit. Refer to [AV-151, "NAVI CONTROL UNIT"](#) .

Color of RGB Image is Not Proper (Only NAVI Screen Looks Yellowish)

EKS00HL1


1. CHECK RGB HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B152 and display control unit connector M95.
3. Check continuity between NAVI control unit and display control unit.
4. Check continuity between NAVI control unit and ground.

- **When the screen looks yellowish.**

| Terminals | | | | Continuity |
|-------------------------|----------|---------------------------|----------|------------|
| B | | A | | |
| Connector | Terminal | Connector | Terminal | |
| NAVI control unit: B152 | 46 | Display control unit: M95 | 48 | Yes |
| | 47 | | 45 | |

| Terminals | | | | Continuity |
|-------------------------|----------|--------|--|------------|
| B | | — | | |
| Connector | Terminal | | | |
| NAVI control unit: B152 | 46 | Ground | | No |
| | 47 | | | |

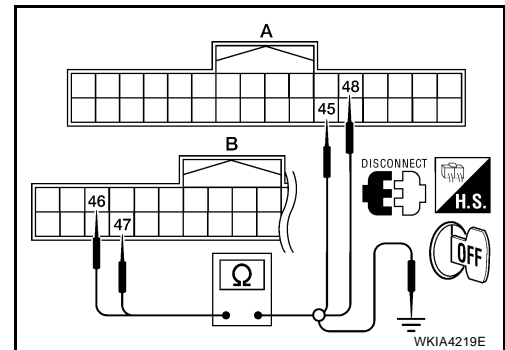


OK or NG

- OK >> GO TO 2.
 NG >> Repair harness or connector.

NAVIGATION SYSTEM

2. CHECK RGB SIGNAL

1. Connect NAVI control unit connector and display control unit connector.
 2. Turn ignition switch ON.
 3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
 4. Check signal between NAVI control unit connector B151 terminal 46 and 47 with CONSULT-II or oscilloscope.
- **When the screen looks yellowish.**
Voltage signal between NAVI control unit connector B151 terminal 46 and 47.

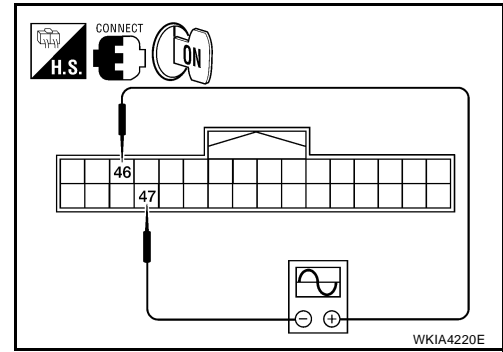

46 - 47

: Refer to [AV-94, "Terminals and Reference Values for NAVI Control Unit"](#) .

OK or NG

- OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .
- NG >> Replace NAVI control unit. Refer to [AV-151, "NAVI CONTROL UNIT"](#) .

Color of RGB Image is Not Proper (All Screens Look Bluish)


EKS00HL2

1. CHECK RGB HARNESS

1. Turn ignition switch OFF.
 2. Disconnect display control unit connector M95 and display unit connector M93.
 3. Check continuity between display control unit and display unit.
 4. Check continuity between display control unit and ground.
- **When the screen looks bluish.**

| Terminals | | | | Continuity |
|----------------------|----------|--------------|----------|------------|
| Display control unit | | Display unit | | |
| Connector | Terminal | Connector | Terminal | |
| M95 | 50 | M93 | 17 | Yes |
| | 47 | | 7 | |

| Terminals | | | | Continuity |
|----------------------|----------|--------|--|------------|
| Display control unit | | — | | |
| Connector | Terminal | | | |
| M95 | 50 | Ground | | No |
| | 47 | | | |

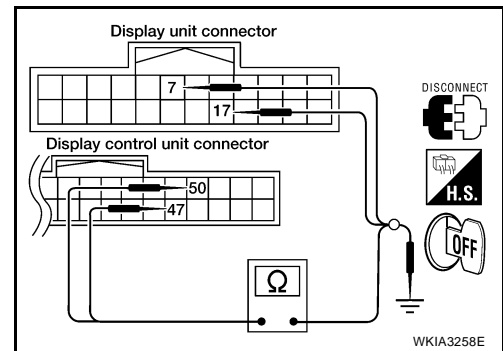

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness or connector.


NAVIGATION SYSTEM

2. CHECK RGB SIGNAL

1. Connect display control unit connector and display unit connector.
 2. Turn ignition switch ON.
 3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
 4. Check the following with CONSULT-II or oscilloscope.
- **When the screen looks bluish.**
Voltage signal between display control unit connector M95 terminal 50 and 47.

50 - 47

: Refer to [AV-96, "Terminals and Reference Values for Display Control Unit"](#) .

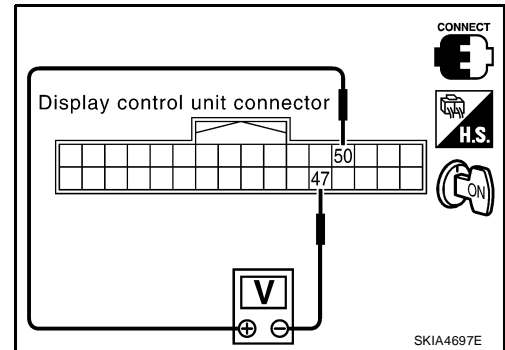

OK or NG

OK >> Replace display unit. Refer to [AV-152, "DISPLAY UNIT"](#)

NG >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .

Color of RGB Image is Not Proper (All Screens Look Reddish)

EKS00HL3


1. CHECK RGB HARNESS

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95 and display unit connector M93.
3. Check continuity between display control unit and display unit.
4. Check continuity between display control unit and ground.

- **When the screen looks reddish.**

| Terminals | | | | Continuity |
|----------------------|----------|--------------|----------|------------|
| Display control unit | | Display unit | | |
| Connector | Terminal | Connector | Terminal | |
| M95 | 52 | M93 | 6 | Yes |
| | 47 | | 7 | |

| Terminals | | | | Continuity |
|----------------------|----------|--------|--|------------|
| Display control unit | | — | | |
| Connector | Terminal | | | |
| M95 | 52 | Ground | | No |
| | 47 | | | |

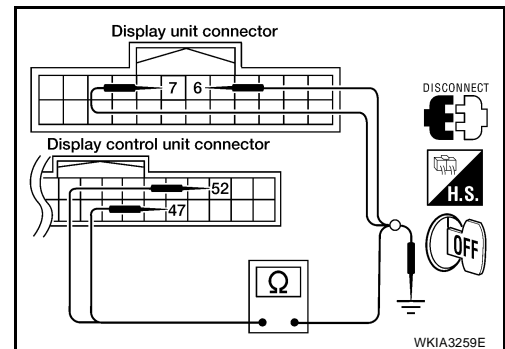

OK or NG

OK >> GO TO 2.

NG >> Repair harness or connector.


NAVIGATION SYSTEM

2. CHECK RGB SIGNAL

1. Connect display control unit connector and display unit connector.
2. Turn ignition switch ON.
3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
4. Check the following with CONSULT-II or oscilloscope.
 - **When the screen looks reddish.**
Voltage signal between display control unit connector M95 terminal 52 and 47.

52 - 47

: Refer to [AV-96, "Terminals and Reference Values for Display Control Unit"](#) .

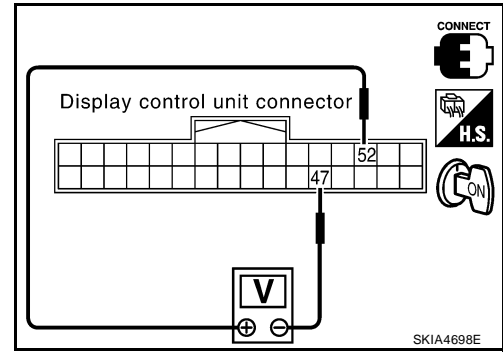

OK or NG

- OK >> Replace display unit. Refer to [AV-152, "DISPLAY UNIT"](#) .
- NG >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .

Color of RGB Image is Not Proper (All Screens Look Yellowish)

EKS00HL4


1. CHECK RGB HARNESS

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95 and display unit connector M93.
3. Check continuity between display control unit and display unit.
4. Check continuity between display control unit and ground.

- **When the screen looks yellowish.**

| Terminals | | | | Continuity |
|----------------------|----------|--------------|----------|------------|
| Display control unit | | Display unit | | |
| Connector | Terminal | Connector | Terminal | |
| M95 | 54 | M93 | 18 | Yes |
| | 47 | | 7 | |

| Terminals | | | | Continuity |
|----------------------|----------|--------|--|------------|
| Display control unit | | — | | |
| Connector | Terminal | | | |
| M95 | 54 | Ground | | No |
| | 47 | | | |

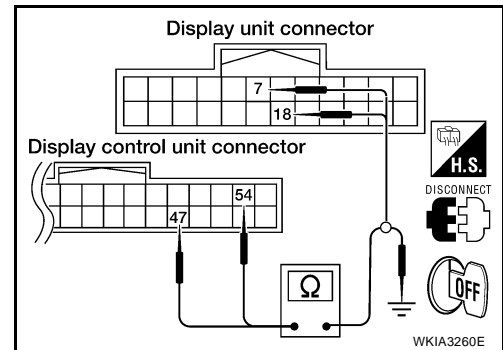

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness or connector.


NAVIGATION SYSTEM

2. CHECK RGB SIGNAL

1. Connect display control unit connector and display unit connector.
2. Turn ignition switch ON.
3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
4. Check the following with CONSULT-II or oscilloscope.
 - **When the screen looks yellowish.**
Voltage signal between display control unit connector M95 terminal 54 and 47.

54 - 47

: Refer to [AV-96, "Terminals and Reference Values for Display Control Unit"](#) .

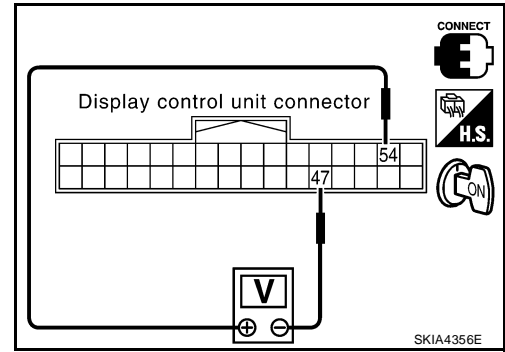

OK or NG

- OK >> Replace display unit. Refer to [AV-152, "DISPLAY UNIT"](#) .
- NG >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .

A
B
C
D
E
F
G
H
I
J
AV
L
M

NAVIGATION SYSTEM

EKS00HL5

NAVI Screen is Rolling


1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B152 and display control unit connector M95.
3. Check continuity between NAVI control unit and display control unit.

| Terminals | | | | Continuity |
|-------------------------|----------|---------------------------|----------|------------|
| B | | A | | |
| Connector | Terminal | Connector | Terminal | |
| NAVI control unit: B152 | 48 | Display control unit: M95 | 43 | Yes |
| | 49 | | 41 | |

4. Check continuity between NAVI control unit and ground.

| Terminals | | | | Continuity |
|-------------------------|----------|--------|--|------------|
| B | | — | | |
| Connector | Terminal | | | |
| NAVI control unit: B152 | 48 | Ground | | No |
| | 49 | | | |

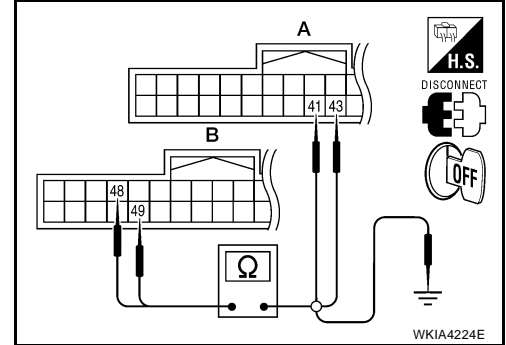

OK or NG


- OK >> GO TO 2.
 NG >> Repair harness.

2. CHECK RGB SYNCHRONIZING SIGNAL

1. Connect NAVI control unit connector and display control unit connector.
2. Turn ignition switch ON.
3. Check signal between NAVI control unit connector M95 terminals 48 and 49 with CONSULT-II or oscilloscope.

48 - 49

: Refer to [AV-94, "Terminals and Reference Values for NAVI Control Unit"](#) .

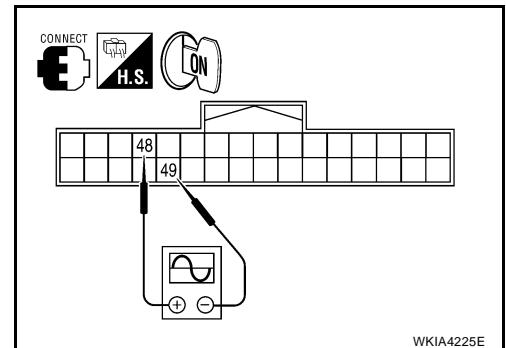

OK or NG

- OK >> GO TO 3.
 NG >> Replace NAVI control unit. Refer to [AV-151, "NAVI CONTROL UNIT"](#) .

NAVIGATION SYSTEM

3. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95 and display unit connector M93.
3. Check continuity between display control unit and display unit.


| Terminals | | | | Continuity |
|----------------------|----------|--------------|----------|------------|
| Display control unit | | Display unit | | |
| Connector | Terminal | Connector | Terminal | |
| M95 | 56 | M93 | 19 | Yes |
| | 49 | | 21 | |

4. Check continuity between display control unit and ground.

| Terminals | | | | Continuity |
|----------------------|----------|--------|--|------------|
| Display control unit | | — | | |
| Connector | Terminal | | | |
| M95 | 56 | Ground | | No |
| | 49 | | | |

OK or NG

- OK >> GO TO 4.
 NG >> Repair harness.

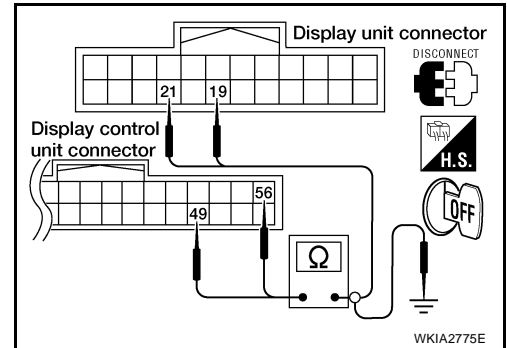


4. CHECK RGB SYNCHRONIZING SIGNAL

1. Connect display control unit connector and display unit connector.
2. Turn ignition switch ON.
3. Check signal between display unit connector M93 terminals 19 and 21 with CONSULT-II or oscilloscope.

19 - 21 : Refer to [AV-96, "Terminals and Reference Values for Display Control Unit"](#) .

OK or NG

- OK >> Replace display unit. Refer to [AV-152, "DISPLAY UNIT"](#)
 NG >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .

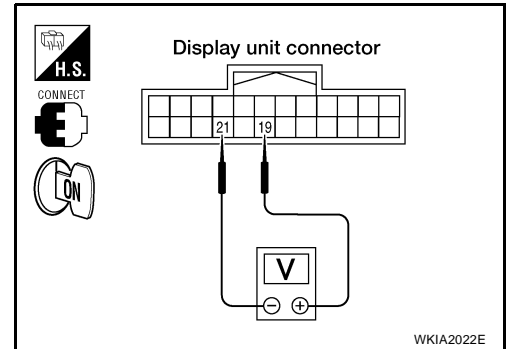

NAVIGATION SYSTEM

EKS00HLT

Guide Sound is Not Heard

1. CHECK VOICE GUIDE SETTING

While driving in the dark pink route, voice guide does not operate. (note)

NOTE:

Voice guide is only available at intersections that satisfy certain conditions (indicated by ● on the map). Therefore, guidance may not be given even when the route on the map changes direction.

Is volume setting switched OFF?

- YES >> Switch the setting ON and turn the volume up.
- NO >> GO TO 2.

2. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B151 and audio unit connector M45.
3. Check continuity between NAVI control unit and audio unit.


| Terminals | | | | Continuity |
|-------------------------|----------|-----------------|----------|------------|
| B | | A | | |
| Connector | Terminal | Connector | Terminal | |
| NAVI control unit: B151 | 12 | Audio unit: M45 | 71 | Yes |
| | 14 | | 69 | |

4. Check continuity between NAVI control unit and ground.

| Terminals | | | | Continuity |
|-------------------------|-----------------------|--------|--|------------|
| B | | — | | |
| Connector | Terminal (Wire color) | | | |
| NAVI control unit: B151 | 12 | Ground | | No |
| | 14 | | | |

Ok or NG

- OK >> GO TO 3.
- NG >> Repair harness.

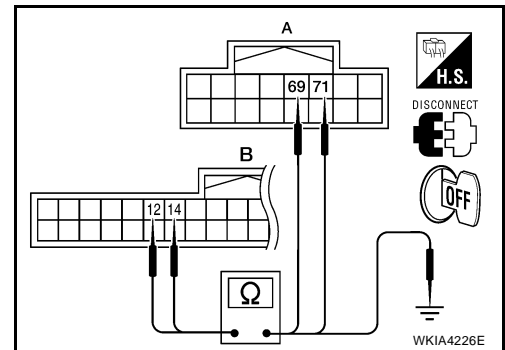

3. CHECK VOICE GUIDE


1. Connect NAVI control unit connector and audio unit connector.
2. Turn ignition switch ON.
3. Check signal between NAVI control unit harness connector B151 terminal 12 and 14 with CONSULT-II or oscilloscope.

12 - 14

: Refer to [AV-94, "Terminals and Reference Values for NAVI Control Unit"](#) .

OK or NG

- OK >> Replace audio unit. Refer to [AV-61, "AUDIO UNIT - WITH NAVI"](#) .
- NG >> Replace NAVI control unit. Refer to [AV-151, "NAVI CONTROL UNIT"](#) .

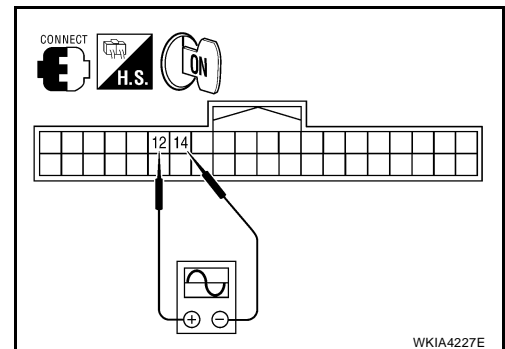

Screen is Not Shown

EKS00HL7

1. CHECK AUDIO SYSTEM

Check operation of audio system.

Does audio system operate correctly?

- YES >> GO TO 2.
- NO >> GO TO 3.

NAVIGATION SYSTEM

2. CHECK DISPLAY UNIT POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit for display unit. Refer to [AV-118, "Power Supply and Ground Circuit Check for Display Unit"](#) .

OK or NG

- OK >> Replace display unit. Refer to [AV-152, "DISPLAY UNIT"](#) .
- NG >> Check the malfunctioning parts.

3. CHECK DISPLAY CONTROL UNIT POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit for display control unit. Refer to [AV-117, "Power Supply and Ground Circuit Check for Display Control Unit"](#) .

OK or NG

- OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .
- NG >> Check the malfunctioning parts.

A/C Screen is Not Shown (NAVI Screen is Shown)

EKS00HL8

1. CHECK IGNITION SIGNAL

Check ignition signal. Refer to [AV-124, "Ignition Signal Check for Display Control Unit"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Check the malfunctioning parts.

2. CHECK CAN COMMUNICATION LINE

Check CAN communication line. Refer to [AV-130, "CAN Communication Line Check"](#) .

OK or NG

- OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .
- NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-44, "TROUBLE DIAGNOSIS"](#) .

FUEL ECONOMY Screen is Not Shown

EKS00HL9

1. CHECK IGNITION SIGNAL

Check ignition signal. Refer to [AV-124, "Ignition Signal Check for Display Control Unit"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Check the malfunctioning parts.

2. CHECK CAN COMMUNICATION LINE

Check CAN communication line. Refer to [AV-130, "CAN Communication Line Check"](#) .

OK or NG

- OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .
- NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-44, "TROUBLE DIAGNOSIS"](#) .

Average Fuel Economy Displayed is Not Shown (" *** " is Shown)

EKS00HLA

1. CHECK VEHICLE SPEED SIGNAL

Check vehicle speed signal. Refer to [AV-122, "Vehicle Speed Signal Check for Display Control Unit"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Check the malfunctioning parts.

NAVIGATION SYSTEM

2. CHECK CAN COMMUNICATION LINE

Check CAN communication line. Refer to [AV-130, "CAN Communication Line Check"](#) .

OK or NG

OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .

NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-44, "TROUBLE DIAG-NOSIS"](#) .

Distance to Empty Displayed is Not Shown (" *** " is Shown)

EKS00HLB

1. CHECK SPEEDOMETER

Confirm that speedometer is functioning.

Is speedometer functioning?

YES >> GO TO 2.

NO >> Refer to [DI-19, "Vehicle Speed Signal Inspection"](#) .

2. CHECK FUEL GAUGE

Confirm that fuel gauge is functioning.

Is fuel gauge functioning?

YES >> GO TO 3.

NO >> Refer to [DI-20, "Fuel Level Sensor Unit Inspection"](#) .

3. CHECK CAN COMMUNICATION LINE

Check CAN communication line. Refer to [AV-130, "CAN Communication Line Check"](#) .

OK or NG

OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .

NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-44, "TROUBLE DIAG-NOSIS"](#) .

Driving Distance or Average Speed Displayed is Not Shown (" *** " is Shown)

EKS00HLC

1. CHECK IGNITION SIGNAL

Check ignition signal. Refer to [AV-124, "Ignition Signal Check for Display Control Unit"](#) .

OK or NG

OK >> GO TO 2.

NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-44, "TROUBLE DIAG-NOSIS"](#) .

2. CHECK VEHICLE SPEED SIGNAL

Check vehicle speed signal. Refer to [AV-122, "Vehicle Speed Signal Check for Display Control Unit"](#) .

OK or NG

OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .

NG >> Check the malfunctioning parts.

WARNING DOOR OPEN Screen is Not Shown

EKS00HLD

1. CHECK IGNITION SIGNAL

Check ignition signal. Refer to [AV-124, "Ignition Signal Check for Display Control Unit"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check the malfunctioning parts.

NAVIGATION SYSTEM

2. CHECK VEHICLE SPEED SIGNAL

Check vehicle speed signal. Refer to [AV-122, "Vehicle Speed Signal Check for Display Control Unit"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Check the malfunctioning parts.

3. CHECK CAN COMMUNICATION LINE

Check CAN communication line. Refer to [AV-130, "CAN Communication Line Check"](#) .

OK or NG

- OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .
- NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-44, "TROUBLE DIAGNOSIS"](#) .

Unable to Operate All of AV Switches (Unable to Start Self-Diagnosis)

EKS00HLE

1. AV SWITCH SELF-DIAGNOSIS

AV switch self-diagnosis. Refer to [AV-115, "AV Switch Self-Diagnosis Function"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit for AV switch. Refer to [AV-120, "Power Supply and Ground Circuit Check for AV Switch"](#) .

OK or NG

- OK >> Replace AV switch. Refer to [AV-61, "AV SWITCH"](#) .
- NG >> Check the malfunctioning parts.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit for display control unit. Refer to [AV-117, "Power Supply and Ground Circuit Check for Display Control Unit"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Check the malfunctioning parts.

4. CHECK COMMUNICATION LINE

Check communication line. Refer to [AV-129, "AV Communication Line Check \(Between Display Control Unit and AV Switch\)"](#) .

OK or NG

- OK >> Replace AV switch. Refer to [AV-61, "AV SWITCH"](#) .
- NG >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .

Audio Does Not Work

EKS00HLF

Refer to [AV-34, "Trouble Diagnosis"](#) .

Navigation System Does Not Activate

EKS00HLG

1. POWER SUPPLY AND GROUND CIRCUIT CHECK

Check power supply and ground circuit for NAVI control unit. Refer to [AV-116, "Power Supply and Ground Circuit Check for NAVI Control Unit"](#) .

OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-151, "NAVI CONTROL UNIT"](#) .
- NG >> Check the malfunctioning parts.

NAVIGATION SYSTEM

Previous NAVI Conditions are Not Stored

EKS00HLH

1. CHECK BATTERY POWER

Check NAVI control unit battery power.

Refer to [AV-116, "Power Supply and Ground Circuit Check for NAVI Control Unit"](#) .

OK or NG

OK >> Replace NAVI control unit. Refer to [AV-151, "NAVI CONTROL UNIT"](#) .

NG >> Check NAVI control unit battery power system harness.

Previous Vehicle Conditions are Not Stored

EKS00HLI

1. CHECK BATTERY POWER

Check display control unit battery power.

Refer to [AV-117, "Power Supply and Ground Circuit Check for Display Control Unit"](#) .

OK or NG

OK >> Replace display control unit. Refer to [AV-153, "DISPLAY CONTROL UNIT"](#) .

NG >> Check display control unit battery power system harness.

Position of Current Location Mark is Not Correct

EKS00HLJ

1. SELF-DIAGNOSIS

Perform "Self-diagnosis mode" of the self-diagnosis function. Refer to [AV-106, "Self-Diagnosis Mode \(NAVI\)"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check the malfunctioning parts.

2. ERROR HISTORY DIAGNOSIS

Was any error stored in [AV-111, "ERROR HISTORY"](#) of the "CONFIRMATION/ADJUSTMENT" mode?

YES or NO

YES >> [AV-112, "DIAGNOSIS BY ERROR HISTORY"](#).

NO >> [AV-147, "Driving Test"](#).

Radio Wave From GPS Satellite is Not Received

EKS00HLK

1. CHECK ENVIRONMENT

Check if any metal object that intercepts radio waves or an object that emits radio waves (such as a portable phone) is located near the GPS antenna. Check if the vehicle is shielded by a building.

OK or NG

OK >> System is not malfunctioning. The GPS antenna may not be able to receive radio waves from the GPS satellite if it is shielded by metal object or an object emitting radio waves is placed near it.

NG >> GO TO 2.

2. SELF-DIAGNOSIS

Perform "Self-diagnosis mode" of the self-diagnosis function. Refer to [AV-106, "Self-Diagnosis Mode \(NAVI\)"](#) .

OK or NG

OK >> Replace GPS antenna. Refer to [AV-152, "GPS ANTENNA"](#) .

NG >> Check the malfunctioning parts.

Driving Test

1. DRIVING TEST 1

1. Scroll the map screen to display the area to make correction. Press "ENTER" and select "CURRENT LOCATION CORRECTION".
2. Correct direction of the vehicle mark.
3. Perform the distance correction of the "CONFIRMATION/ADJUSTMENT" mode.
Note: Normally, adjustment is not necessary because this system has automatic distance correction function. However, when a tire chain is fitted, adjustment in accordance with the tire diameter ratio must be made.
4. Are symptoms malfunctioning to the [AV-148, "Example of Symptoms Judged Not Malfunction"](#) after driving the vehicle?

YES or NO

- YES >> Limit of the location detection capacity of the navigation system.
NO >> GO TO 2.

2. DRIVING TEST 2

- Did any malfunction occur when the proper test in the following test patterns is performed?
- Test pattern
Driving test finds the difference between the symptoms monitored with and without each sensor.
 - Test pattern 1: Test method with no GPS location correction
Disconnect GPS antenna connector connected to the NAVI control unit. Accurately adjust the current location and the direction, then drive the vehicle.
 - Test pattern 2: Test method with no map-matching
Accurately adjust the current location and the direction. Eject the map DVD-ROM from the NAVI control unit with ignition switch turned to OFF, then drive the vehicle. After driving, insert the map DVD-ROM back in the unit, display the track of the vehicle on the map screen and compare it with the actual road configuration.
- Sample tests
 - <To determine if the current-location mark skips at the same position, if so, whether it is caused by map-matching or by GPS>
Perform test pattern 1.
 - <To determine if the pattern of streets displayed is correct or not>
Perform test pattern 1 & 2.
Compare the track of the vehicle on the map screen and the actual road configuration. For fairly accurate tracking, plotting shall be made every several hundred meters (feet).
 - <When the distance is adjusted accurately>
Perform test pattern 1 & 2.
Drive on a road of which distance is accurately known (by utilizing distance posts on a highway). Calculate the rate of change (increased/decreased) of the distance by comparing with the actual distance.
Correction = A/B
A: Distance shown on the screen
B: Actual distance

YES or NO

- YES >> ● If adjustment is insufficient, perform adjustment again.
● If any error is found in the map, please contact map data supplier. Refer to Navigation System Owner's Manual for contact information.
● Replace NAVI control unit. Refer to [AV-151, "NAVI CONTROL UNIT"](#) .
- NO >> Limit of the location detection capacity of the navigation system.

NAVIGATION SYSTEM

EKS00HLM

Example of Symptoms Judged Not Malfunction BASIC OPERATION

For Navigation system operation information, refer to Navigation system Owner's Manual.

| Symptom | Cause | Remedy |
|--|--|---|
| No image is shown. | Display brightness adjustment is set fully to DARK side. | Adjust the display brightness. |
| No guide sound is heard. Audio guide volume is too low or too high. | Volume control is set to OFF, MIN or MAX. | Adjust the audio guide volume. |
| | Audio guidance is not available while the vehicle is driving on a dark pink route. | System is not malfunctioning. |
| Screen is too dark. Motion of the image is too slow. | Temperature inside the vehicle is low. | Wait until the temperature inside the vehicle reaches the proper temperature. |
| Small black or bright spots appear on the screen. | Symptom peculiar to a liquid crystal display (display unit). | System is not malfunction. |

VEHICLE MARK

| Symptom | Cause | Remedy |
|--|--|--|
| Map screen and BIRDVIEW™ Name of the place varies with the screen. | Some thinning of the character data is done to prevent the display becoming to complex. In some cases and in some locations, the display contents may differ. The same place name, street name, etc. may not be displayed every time on account of the data processing. | System is not malfunctioning. |
| Vehicle mark is not positioned correctly. | Vehicle is transferred by ferry or by towing after its ignition switch is turned to OFF. | Drive the vehicle for a while in the GPS satellite signal receiving condition. |
| Screen will not switch to nighttime mode after the lighting switch is turned ON. | The daytime screen is selected by the "SWITCH SCREENS" when the last time the screen dimming setting is done. Switching between daytime/nighttime screen may be inhibited by the automatic illumination adjustment function. | Perform screen dimming and select the nighttime screen by "SWITCH SCREENS". |
| Map screen will not scroll in accordance with the vehicle travel. | Current location is not displayed. | Press "MAP" button to display the current location. |
| Vehicle mark will not be shown. | Current location is not displayed. | Press "MAP" button to display the current location. |
| Accuracy indicator (GPS satellite mark) on the map screen stays gray. | GPS satellite signal is intercepted because the vehicle is in or behind a building. | Move the vehicle out to an open space. |
| | GPS satellite signal cannot be received because an obstacle is placed on top of the instrument panel. | Do not place anything in the center on top of the display. |
| | GPS satellites are not visible from current location. | Wait until GPS satellites are visible by moving the vehicle. |
| Vehicle location accuracy is low. | Accuracy indicator (GPS satellite mark) on the map screen stays gray. | Current location is not determined. |
| | Vehicle speed setting by the vehicle speed pulse has been deviated (advanced or retarded) from the actual vehicle speed because tire chain is fitted or the system has been used on another vehicle. | Drive the vehicle for a while [for approx. 30 minutes at approx. 30 km/h (19 MPH)] and the deviation will be automatically adjusted. If advancement or retard still occur, perform the distance adjustment by CONFIRMATION/ADJUSTMENT mode of diagnosis function. |
| | Map data has error or omission. (Vehicle mark is always deviated to the same position.) | As a rule, an updated map DVD-ROM will be released once a year. |

NAVIGATION SYSTEM

DESTINATION, PASSING POINTS, AND MENU ITEMS CANNOT BE SELECTED/SET

| Symptom | Cause | Remedy | A |
|---|--|---|---|
| Destination cannot be set. | Destination to be set is on an expressway. | Set the destination on an ordinary road. | A |
| Passing point is not searched when re-searching the route. | The vehicle has already passed the passing point, or the system judged so. | To include the passing points that have been passed into the route again, set the route again. | B |
| Route information will not be displayed. | Route searching has not been done. | Set the destination and perform route searching. | C |
| | Vehicle mark is not on the recommended route. | Drive on the recommended route. | D |
| | Route guide is turned OFF. | Turn route guide ON. | D |
| | Route information is not available on the dark pink route. | System is not malfunctioning. | D |
| After the route searching, no guide sign will appear as the vehicle goes near the entrance/exit to the toll road. | Vehicle mark is not on the recommended route. (On the display, only guide signs related to the recommended route will be shown.) | Drive on the recommended route. | E |
| Automatic route searching is not possible. | Vehicle is driving on a highway (gray route), or no recommended route is available. | Drive on a road to be searched. Or re-search the route manually. In this case, however, the whole route will be searched. | F |
| Performed automatic detour search (or detour search). However, the result is the same as that of the previous search. | Performed search with every condition considered. However, the result is the same as that of the previous search. | System is not malfunctioning. | G |
| Passing points cannot be set. | More than five passing points were set. | Passing points can be set up to five. To stop at more than five points, perform sharing in several steps. | H |
| When setting the route, the starting point cannot be selected. | The current vehicle location is always set as the starting point of a route. | System is not malfunctioning. | I |
| Some menu items cannot be selected. | The vehicle is being driven. | Stop the vehicle at a safe place and then operate the system. | J |

VOICE GUIDE

| Symptom | Cause | Remedy | AV |
|---|--|---|----|
| Voice guide will not operate. | Note: Voice guide is only available at intersections that satisfy certain conditions (indicated by ● on the map). Therefore, guidance may not be given even when the route on the map changes direction. | System is not malfunctioning. | L |
| | The vehicle is not on the recommended route. | Return to the recommended route or re-search the route. | M |
| | Voice guide is turned OFF. | Turn voice guide ON. | M |
| | Route guide is turned OFF. | Turn route guide ON. | M |
| Voice guide does not match the actual road pattern. | Voice guide may vary with the direction to which the vehicle is turned and the connection of the road to other roads. | Drive in conformity to the actual traffic rules. | M |

NAVIGATION SYSTEM

ROUTE SEARCH

| Symptom | Cause | Remedy |
|--|---|---|
| No route is shown. | No road to be searched is found around the destination. | Find wider road (orange road or wider) nearby and reset the destination and passing points onto it. Take care of the traveling direction when there are separate up and down roads. |
| | Starting point and the destination are too close. | Set the destination at more distant point. |
| | Conditional traffic regulation (day of the week/ time of the day) is set at the area around the current location or the destination. | Turn the time-regulating search conditions OFF. Turn "Avoid regulation time" in the search conditions OFF. |
| Indicated route is intermittent. | In some areas, highways (gray routes) are not used for the search ^(Note) . Therefore, the route to the current location or the passing points may be intermittent. | System is not malfunctioning. |
| When the vehicle has passed the recommended route, it is deleted from the screen. | A recommended route is controlled by each section. When the vehicle has passed the passing point 1, then the map data from the starting point up to the passing point 1 will be deleted. (The data may remain undeleted in some areas.) | System is not malfunctioning. |
| Detouring route is recommended. | In some areas, highways (gray routes) are not used for the search. (Note). Therefore, detour route may be recommended. | Set the route closer to the basic route (gray route). |
| | A detour route may be shown when some traffic regulation (one-way traffic, etc.) is set at the area around the starting point or the destination. | Slightly move the starting point or the destination, or set the passing point on the route of your choice. |
| | In the area where highways (gray routes) are used for the search, left turn has priority around the current location and the destination (passing points). For this reason, the recommended route may be detouring. | System is not malfunctioning. |
| Landmarks on the map do not match the actual ones. | This can be happen due to omission or error in the map data. | As a rule, an updated map DVD-ROM will be released once a year. Wait until the latest map has become available. |
| Recommended route is far from the starting point, passing points, and destination. | Starting point, passing points, and destination of the route guide were set far from the desired points because route searching data around these area were not stored. | Reset the destination onto the road nearby. If this road is one of the highways (gray routes), an ordinary road nearby may be displayed as the recommended route. |


NOTE:

Except for the ordinance-designated cities. (Malfunctioning areas may be changed in the updated map disc.)

NAVIGATION SYSTEM

Removal and Installation NAVI CONTROL UNIT

EKS00HLO

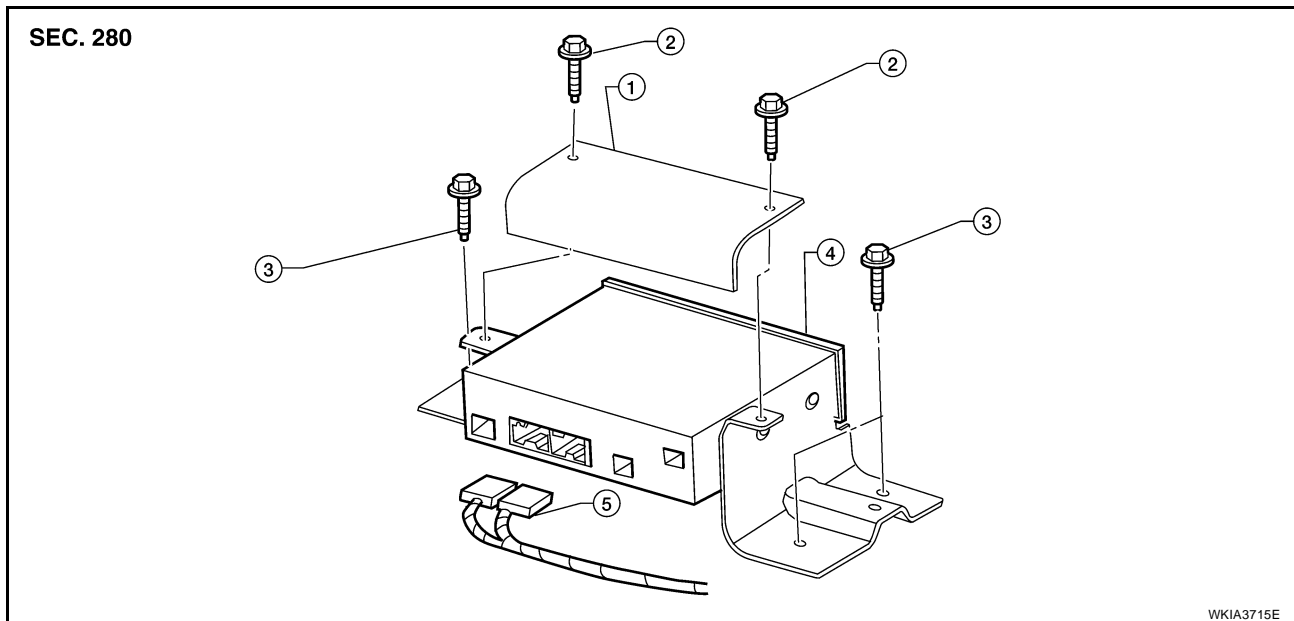

- | | | |
|----------------------|-----------------------|--|
| 1. Kick shield | 2. Kick shield screws | 3. NAVI control unit self-tapping screws |
| 4. NAVI control unit | 5. Connectors | |

Removal

CAUTION:

To avoid damage, eject map DVD-ROM before removing the NAVI control unit.

1. Remove passenger front seat. Refer to [SE-91, "Removal and Installation"](#).
2. Remove NAVI control unit kick shield screws.
3. Disconnect the NAVI control unit connectors.
4. Remove the NAVI control unit screws and remove NAVI control unit.

Installation

Installation is in the reverse order of removal.


A
B
C
D
E
F
G
H
I
J
AV
L
M

NAVIGATION SYSTEM

GPS ANTENNA

Removal

1. Remove lower instrument panel RH. Refer to [IP-15, "LOWER INSTRUMENT PANEL RH AND LOWER GLOVE BOX"](#).
2. Remove cluster lid C. Refer to [IP-11, "CLUSTER LID C -WITHOUT NAVIGATION SYSTEM"](#).
3. Reach through instrument panel and disconnect the GPS antenna connector.
4. Remove the GPS antenna screws.

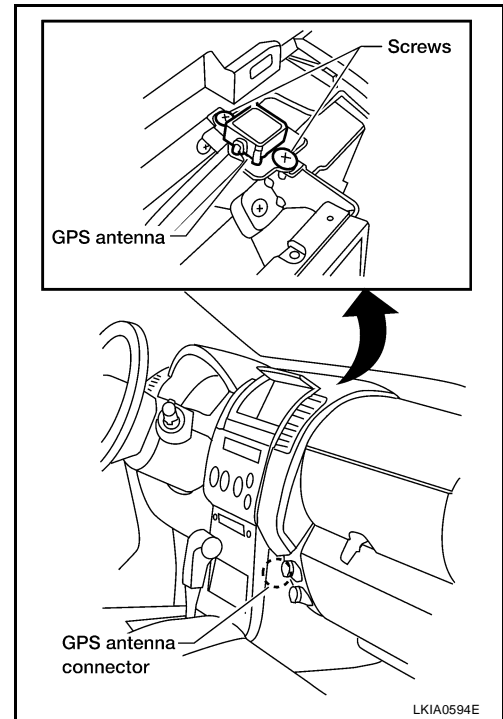

5. Remove GPS antenna and feeder assembly out the top of instrument panel.


Installation

Installation is in the reverse order of removal.

DISPLAY UNIT

Removal

1. Remove display control unit. Refer to [AV-152, "DISPLAY UNIT"](#).
2. Remove display unit from display control unit assembly brackets.

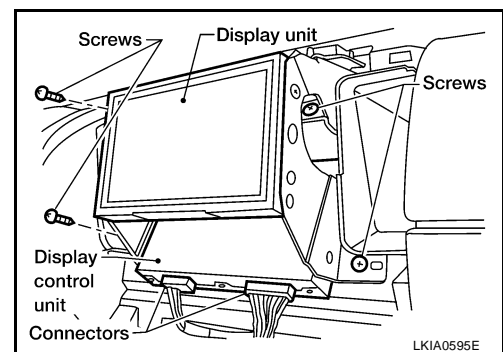

Installation


Installation is in reverse order of removal.

NAVIGATION SYSTEM

DISPLAY CONTROL UNIT

Removal

1. Remove cluster lid C. Refer to [IP-11, "CLUSTER LID C -WITHOUT NAVIGATION SYSTEM"](#).
2. Remove the display control unit assembly screws.
3. Disconnect the connectors and remove assembly from instrument panel.
4. Remove the screws, then remove the display control unit from the assembly brackets.

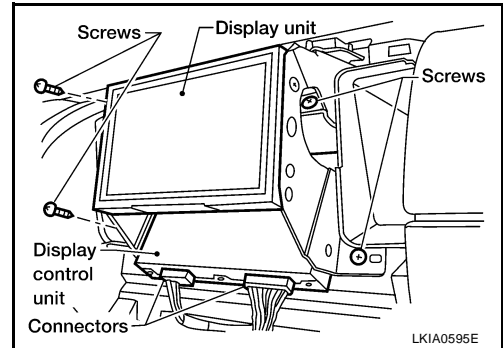

Installation

Installation is in reverse order of removal.

A
B
C
D
E
F
G
H
I
J
AV
L
M

NAVIGATION SYSTEM
