

LT  
**SECTION**  
**LIGHTING SYSTEM**

A  
B  
C  
D  
E

**CONTENTS**

<b>PRECAUTIONS</b> ..... 4	<b>HEADLAMP (OUTER SIDE), FOR LOW BEAM..</b> 25	F
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" ..... 4	<b>HEADLAMP (INNER SIDE), FOR HIGH BEAM..</b> 26	
General precautions for service operations ..... 4	<b>FRONT TURN SIGNAL/PARKING LAMP</b> ..... 26	
<b>HEADLAMP (FOR USA)</b> ..... <b>5</b>	Removal and Installation ..... 26	G
Component Parts and Harness Connector Location... 5	<b>FRONT COMBINATION LAMP</b> ..... 26	
System Description ..... 5	Disassembly and Assembly ..... 27	
OUTLINE ..... 5	<b>FRONT COMBINATION LAMP</b> ..... 27	
BATTERY SAVER CONTROL ..... 6	<b>HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -</b> ..... <b>28</b>	H
AUTO LIGHT OPERATION (IF EQUIPPED) ..... 7	Component Parts and Harness Connector Location.. 28	
VEHICLE SECURITY SYSTEM (PANIC ALARM)... 7	System Description ..... 28	I
CAN Communication System Description ..... 7	HEADLAMP OPERATION ..... 29	
Schematic ..... 8	BATTERY SAVER CONTROL ..... 30	
Wiring Diagram — H/LAMP — ..... 9	AUTO LIGHT OPERATION (IF EQUIPPED) ..... 30	J
Terminals and Reference Values for BCM ..... 13	DAYTIME LIGHT OPERATION ..... 30	
Terminals and Reference Values for IPDM E/R .... 13	CAN Communication System Description ..... 30	
How to Proceed With Trouble Diagnosis ..... 13	Schematic ..... 31	
Preliminary Check ..... 13	Wiring Diagram — DTRL — ..... 32	LT
CHECK POWER SUPPLY AND GROUND CIRCUIT ..... 13	Trouble Diagnoses ..... 35	
<b>CONSULT-II Function (BCM)</b> ..... 13	DAYTIME LIGHT CONTROL UNIT HARNESS CONNECTOR TERMINAL LAYOUT ..... 35	L
<b>CONSULT-II START PROCEDURE</b> ..... 13	DAYTIME LIGHT CONTROL UNIT INSPECTION TABLE ..... 35	
<b>WORK SUPPORT</b> ..... 13	Aiming Adjustment ..... 36	M
<b>DATA MONITOR</b> ..... 14	Bulb Replacement ..... 36	
<b>ACTIVE TEST</b> ..... 14	Removal and Installation ..... 36	
<b>SELF-DIAGNOSTIC RESULTS</b> ..... 15	<b>FRONT COMBINATION LAMP</b> ..... 36	
<b>CONSULT-II Function (IPDM E/R)</b> ..... 15	<b>DAYTIME LIGHT CONTROL UNIT</b> ..... 36	
<b>CONSULT-II START PROCEDURE</b> ..... 15	<b>DAYTIME LIGHT RELAY</b> ..... 36	
<b>DATA MONITOR</b> ..... 15	Disassembly and Assembly ..... 37	
<b>ACTIVE TEST</b> ..... 16	<b>FRONT COMBINATION LAMP</b> ..... 37	
Headlamp HI Does Not Illuminate (Both Sides) .... 16	<b>AUTO LIGHT SYSTEM</b> ..... <b>38</b>	
Headlamp HI Does Not Illuminate (One Side) ..... 18	Component Parts and Harness Connector Location.. 38	
High-Beam Indicator Lamp Does Not Illuminate ... 20	System Description ..... 38	
Headlamp LO Does Not Illuminate (Both Sides) ... 20	OUTLINE ..... 38	
Headlamp LO Does Not Illuminate (One Side) ..... 22	COMBINATION SWITCH READING FUNCTION.. 38	
Headlamps Do Not Turn OFF ..... 23	EXTERIOR LAMP BATTERY SAVER CONTROL.. 39	
Aiming Adjustment ..... 24	DELAY TIMER FUNCTION ..... 39	
HEADLAMP AIMING ..... 24	CAN Communication System Description ..... 39	
Bulb Replacement ..... 25	Major Components and Functions ..... 39	

Schematic .....	40	Schematic .....	65
Wiring Diagram — AUTO/L — .....	41	Wiring Diagram — TURN — .....	66
Terminals and Reference Values for BCM .....	44	Terminals and Reference Values for BCM .....	70
Terminals and Reference Values for IPDM E/R .....	44	How to Proceed With Trouble Diagnosis .....	70
How to Proceed With Trouble Diagnosis .....	44	BCM Power Supply and Ground Circuit Check .....	70
Preliminary Check .....	44	CONSULT-II Function (BCM) .....	70
SETTING CHANGE FUNCTIONS .....	44	CONSULT-II START PROCEDURE .....	70
CHECK BCM CONFIGURATION .....	44	DATA MONITOR .....	70
CHECK POWER SUPPLY AND GROUND CIR- CUIT .....	44	ACTIVE TEST .....	71
CONSULT-II Function (BCM) .....	44	Turn Signal Lamp Does Not Operate .....	71
CONSULT-II START PROCEDURE .....	44	Rear Turn Signal Lamp Does Not Operate .....	72
WORK SUPPORT .....	44	Hazard Warning Lamp Does Not Operate But Turn Signal Lamps Operate .....	73
DATA MONITOR .....	45	Turn Signal Indicator Lamp Does Not Operate .....	75
ACTIVE TEST .....	46	Bulb Replacement .....	76
CONSULT-II Function (IPDM E/R) .....	46	FRONT TURN SIGNAL LAMP .....	76
CONSULT-II START PROCEDURE .....	46	REAR TURN SIGNAL LAMP .....	76
DATA MONITOR .....	46	Removal and Installation .....	76
ACTIVE TEST .....	47	FRONT TURN SIGNAL LAMP .....	76
Trouble Diagnosis Chart by Symptom .....	47	REAR TURN SIGNAL LAMP .....	76
Lighting Switch Inspection .....	48	<b>CORNERING LAMP .....</b>	<b>77</b>
Optical Sensor System Inspection .....	48	Component Parts and Harness Connector Location ..	77
Removal and Installation .....	50	System Description .....	77
OPTICAL SENSOR .....	50	OUTLINE .....	77
<b>FRONT FOG LAMP .....</b>	<b>51</b>	CORNERING LAMP OPERATION .....	77
Component Parts and Harness Connector Location ..	51	COMBINATION SWITCH READING FUNCTION ..	78
System Description .....	51	CAN Communication System Description .....	78
OUTLINE .....	51	Schematic .....	79
COMBINATION SWITCH READING FUNCTION ..	52	Wiring Diagram — CORNER — .....	80
EXTERIOR LAMP BATTERY SAVER CONTROL ..	52	Terminals and Reference Values for BCM .....	83
CAN Communication System Description .....	52	Terminals and Reference Values for IPDM E/R .....	83
Wiring Diagram — F/FOG — .....	53	How to Proceed With Trouble Diagnosis .....	83
Terminals and Reference Values for BCM .....	55	Preliminary Check .....	83
Terminals and Reference Values for IPDM E/R .....	55	CHECK POWER SUPPLY AND GROUND CIR- CUIT .....	83
How to Proceed With Trouble Diagnosis .....	55	CONSULT-II Function (IPDM E/R) .....	83
Preliminary Check .....	55	CONSULT-II START PROCEDURE .....	83
CHECK BCM CONFIGURATION .....	55	DATA MONITOR .....	83
CHECK POWER SUPPLY AND GROUND CIR- CUIT .....	55	ACTIVE TEST .....	84
CONSULT-II Functions .....	55	Cornering Lamp Does Not Operate .....	84
Front Fog Lamps Do Not Illuminate (Both Sides) ...	55	Bulb Replacement .....	85
Front Fog Lamp Does Not Illuminate (One Side) ...	56	Removal and Installation .....	85
Aiming Adjustment .....	58	<b>LIGHTING AND TURN SIGNAL SWITCH .....</b>	<b>86</b>
Bulb Replacement .....	60	Removal .....	86
REMOVAL .....	60	Installation .....	86
INSTALLATION .....	60	<b>HAZARD SWITCH .....</b>	<b>87</b>
Front Fog Lamp Assembly .....	60	Removal and Installation .....	87
REMOVAL .....	60	REMOVAL .....	87
INSTALLATION .....	61	INSTALLATION .....	87
<b>TURN SIGNAL AND HAZARD WARNING LAMPS ..</b>	<b>62</b>	<b>COMBINATION SWITCH .....</b>	<b>88</b>
Component Parts and Harness Connector Location ..	62	Wiring Diagram — COMBSW — .....	88
System Description .....	62	Combination Switch Reading Function .....	89
OUTLINE .....	62	CONSULT-II Function (BCM) .....	89
TURN SIGNAL OPERATION .....	63	CONSULT-II START PROCEDURE .....	89
HAZARD LAMP OPERATION .....	63	DATA MONITOR .....	89
REMOTE KEYLESS ENTRY SYSTEM OPERA- TION .....	64	Combination Switch Inspection .....	91
COMBINATION SWITCH READING FUNCTION ..	64	Removal and Installation .....	93
CAN Communication System Description .....	64	Switch Circuit Inspection .....	93
		<b>STOP LAMP .....</b>	<b>94</b>

System Description .....	94	TRAILER TAIL LAMP OPERATION .....	114	
Wiring Diagram — STOP/L — .....	95	TRAILER STOP, TURN SIGNAL AND HAZARD		A
Bulb Replacement .....	97	LAMP OPERATION .....	114	
HIGH-MOUNTED STOP LAMP .....	97	Wiring Diagram — T/TOW — .....	116	
STOP LAMP .....	97	Trouble Diagnoses .....	117	B
Removal and Installation .....	97	TRAILER TOW CONTROL UNIT INSPECTION		
HIGH-MOUNTED STOP LAMP .....	97	TABLE .....	117	
STOP LAMP .....	97	<b>INTERIOR ROOM LAMP .....</b>	<b>118</b>	C
<b>BACK-UP LAMP .....</b>	<b>98</b>	Component Parts and Harness Connector Location	118	
Wiring Diagram — BACK/L — .....	98	System Description .....	119	
Bulb Replacement .....	99	POWER SUPPLY AND GROUND .....	119	
Removal and Installation .....	99	SWITCH OPERATION .....	120	D
<b>PARKING, LICENSE PLATE AND TAIL LAMPS ..</b>	<b>100</b>	ROOM LAMP TIMER OPERATION .....	121	
Component Parts and Harness Connector Location	100	INTERIOR LAMP BATTERY SAVER CONTROL	122	
System Description .....	100	Schematic .....	123	E
OPERATION BY LIGHTING SWITCH .....	100	Wiring Diagram — INT/L — .....	125	
COMBINATION SWITCH READING FUNCTION	101	WITHOUT REAR ROOF CONSOLE .....	130	
EXTERIOR LAMP BATTERY SAVER CONTROL	101	WITH REAR ROOF CONSOLE .....	131	F
CAN Communication System Description .....	101	Terminals and Reference Values for BCM .....	132	
Schematic .....	102	How to Proceed With Trouble Diagnosis .....	132	
Wiring Diagram — TAIL/L — .....	103	Preliminary Check .....	132	
Terminals and Reference Values for BCM .....	107	SWITCH INSPECTION .....	132	G
Terminals and Reference Values for IPDM E/R ..	107	BCM POWER SUPPLY AND GROUND CIRCUIT		
How to Proceed With Trouble Diagnosis .....	107	CHECK .....	132	
Preliminary Check .....	107	CONSULT-II Function (BCM) .....	132	H
CHECK POWER SUPPLY AND GROUND CIR-		CONSULT-II START PROCEDURE .....	132	
CUIT .....	107	WORK SUPPORT .....	132	
CONSULT-II Functions .....	107	DATA MONITOR .....	133	
Parking, License Plate and/or Tail Lamps Do Not		ACTIVE TEST .....	133	I
Illuminate .....	107	Room/Map Lamp Control Does Not Operate .....	134	
Parking, License Plate and Tail Lamps Do Not Turn		Personal Lamp Control Does Not Operate (Room/		
OFF (After Approx. 10 Minutes) .....	111	Map Lamps Operate) .....	136	J
Bulb Replacement .....	112	Ignition Keyhole Illumination Control Does Not		
FRONT PARKING LAMP .....	112	Operate .....	137	
LICENSE PLATE LAMP .....	112	All Step/Foot Lamps Do Not Operate .....	138	
TAIL LAMP .....	112	All Interior Room Lamps Do Not Operate .....	140	LT
Removal and Installation .....	112	<b>ILLUMINATION .....</b>	<b>141</b>	
FRONT PARKING LAMP .....	112	Component Parts and Harness Connector Location	141	L
LICENSE PLATE LAMP .....	112	System Description .....	141	
TAIL LAMP .....	112	ILLUMINATION OPERATION BY LIGHTING		
<b>REAR COMBINATION LAMP .....</b>	<b>113</b>	SWITCH .....	142	
Bulb Replacement .....	113	EXTERIOR LAMP BATTERY SAVER CONTROL	143	M
REMOVAL .....	113	CAN Communication System Description .....	143	
INSTALLATION .....	113	Schematic .....	144	
Removal and Installation .....	113	Wiring Diagram — ILL — .....	146	
REMOVAL .....	113	<b>BULB SPECIFICATIONS .....</b>	<b>154</b>	
INSTALLATION .....	113	Headlamp .....	154	
<b>TRAILER TOW .....</b>	<b>114</b>	Exterior Lamp .....	154	
Component Parts and Harness Connector Location	114	Interior Lamp/Illumination .....	154	
System Description .....	114			

# PRECAUTIONS

## PRECAUTIONS

PF0:00011

### Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EKS00FAP

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### General precautions for service operations

EKS00FAQ

- Never work with wet hands.
- Turn the lighting switch OFF before disconnecting and connecting the connector.
- When checking the headlamp on/off operation, check it on vehicle and with the power connected to the vehicle-side connector.
- Do not touch the headlamp bulb glass surface with bare hands or allow oil or grease to get on it. Do not touch the headlamp bulb just after the headlamp is turned off, because it is very hot.
- When the bulb has burned out, wrap it in a thick vinyl bag and discard. Do not break the bulb.
- Leaving the bulb removed from the headlamp housing for a long period of time can deteriorate the performance of the lens and reflector (dirt, clouding). Always prepare a new bulb and have it on hand when replacing the bulb.
- Do not use organic solvent (paint thinner or gasoline) to clean lamps and to remove old sealant.


# HEADLAMP (FOR USA)

## HEADLAMP (FOR USA)

PFP:26010

### Component Parts and Harness Connector Location

EKS00FAS

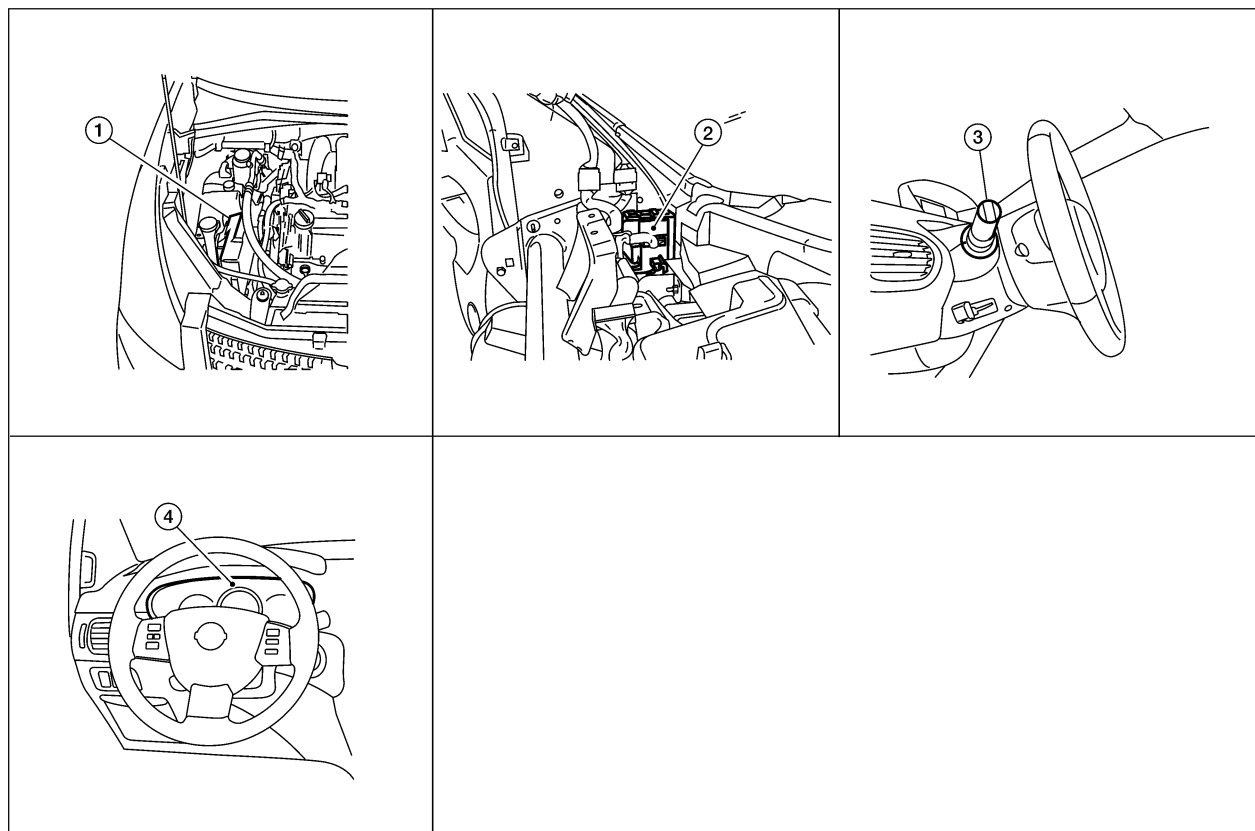

1. IPDM E/R

2. BCM M18, M20 (view with instrument panel removed)

3. Combination switch (lighting switch) M28

4. Combination meter M24

WKIA5259E

## System Description

EKS00FAT

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting switch). When the lighting switch is placed in the 2ND position, the BCM (body control module) receives input requesting the headlamps (and tail lamps) illuminate. This input is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp high and headlamp low relay coils. When energized, these relays direct power to the respective headlamps, which then illuminate.

## OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- to headlamp high relay, located in the IPDM E/R, and
- to headlamp low relay, located in the IPDM E/R, and
- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 15A fuse (No. 34, located in the IPDM E/R)
- to IPDM E/R CPU, and
- through 15A fuse (No. 41, located in the IPDM E/R)
- to IPDM E/R CPU, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 15A fuse [No. 19, located in the fuse block (J/B)]

## HEADLAMP (FOR USA)

---

- to combination meter terminal 40.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 38.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 67
- to combination meter terminal 20
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E9, E15 and E24.

### Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the headlamp low relay coil. When energized, this relay directs power

- through 15A fuse (No. 36, located in the IPDM E/R)
- through IPDM E/R terminal 20
- to front combination lamp RH terminal 1, and
- through 15A fuse (No. 45, located in the IPDM E/R)
- through IPDM E/R terminal 30
- to front combination lamp LH terminal 1.

Ground is supplied

- to front combination lamp LH and RH terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, low beam headlamps illuminate.

### High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input requesting the headlamp high beams to illuminate. This input is communicated to the IPDM E/R and combination meter across the CAN communication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil. When energized, this relay directs power

- through 10A fuse (No. 40, located in the IPDM E/R)
- through IPDM E/R terminal 27
- to front combination lamp RH terminal 3, and
- through 10A fuse (No. 38, located in the IPDM E/R)
- through IPDM E/R terminal 28
- to front combination lamp LH terminal 3.

Ground is supplied

- to front combination lamp LH and RH terminal 4
- through grounds E9, E15 and E24.

With power and ground supplied, the high beam headlamps illuminate.

### BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON) and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

# HEADLAMP (FOR USA)

Under this condition, the headlamps remain illuminated for 5 minutes, unless the combination switch (lighting switch) position is changed. If the combination switch (lighting switch) position is changed, then the headlamps are turned off.

A

## AUTO LIGHT OPERATION (IF EQUIPPED)

Refer to [LT-38, "System Description"](#) for auto light operation.

B

## VEHICLE SECURITY SYSTEM (PANIC ALARM)

The vehicle security system (panic alarm) will flash the high beams if the system is triggered. Refer to [BL-56, "Panic Alarm Operation"](#).

C

## CAN Communication System Description

EKS00FAU

Refer to [LAN-4, "SYSTEM DESCRIPTION"](#).

D

E

F

G

H

I

J

LT


L

M

# HEADLAMP (FOR USA)

## Schematic

EKS00FQG

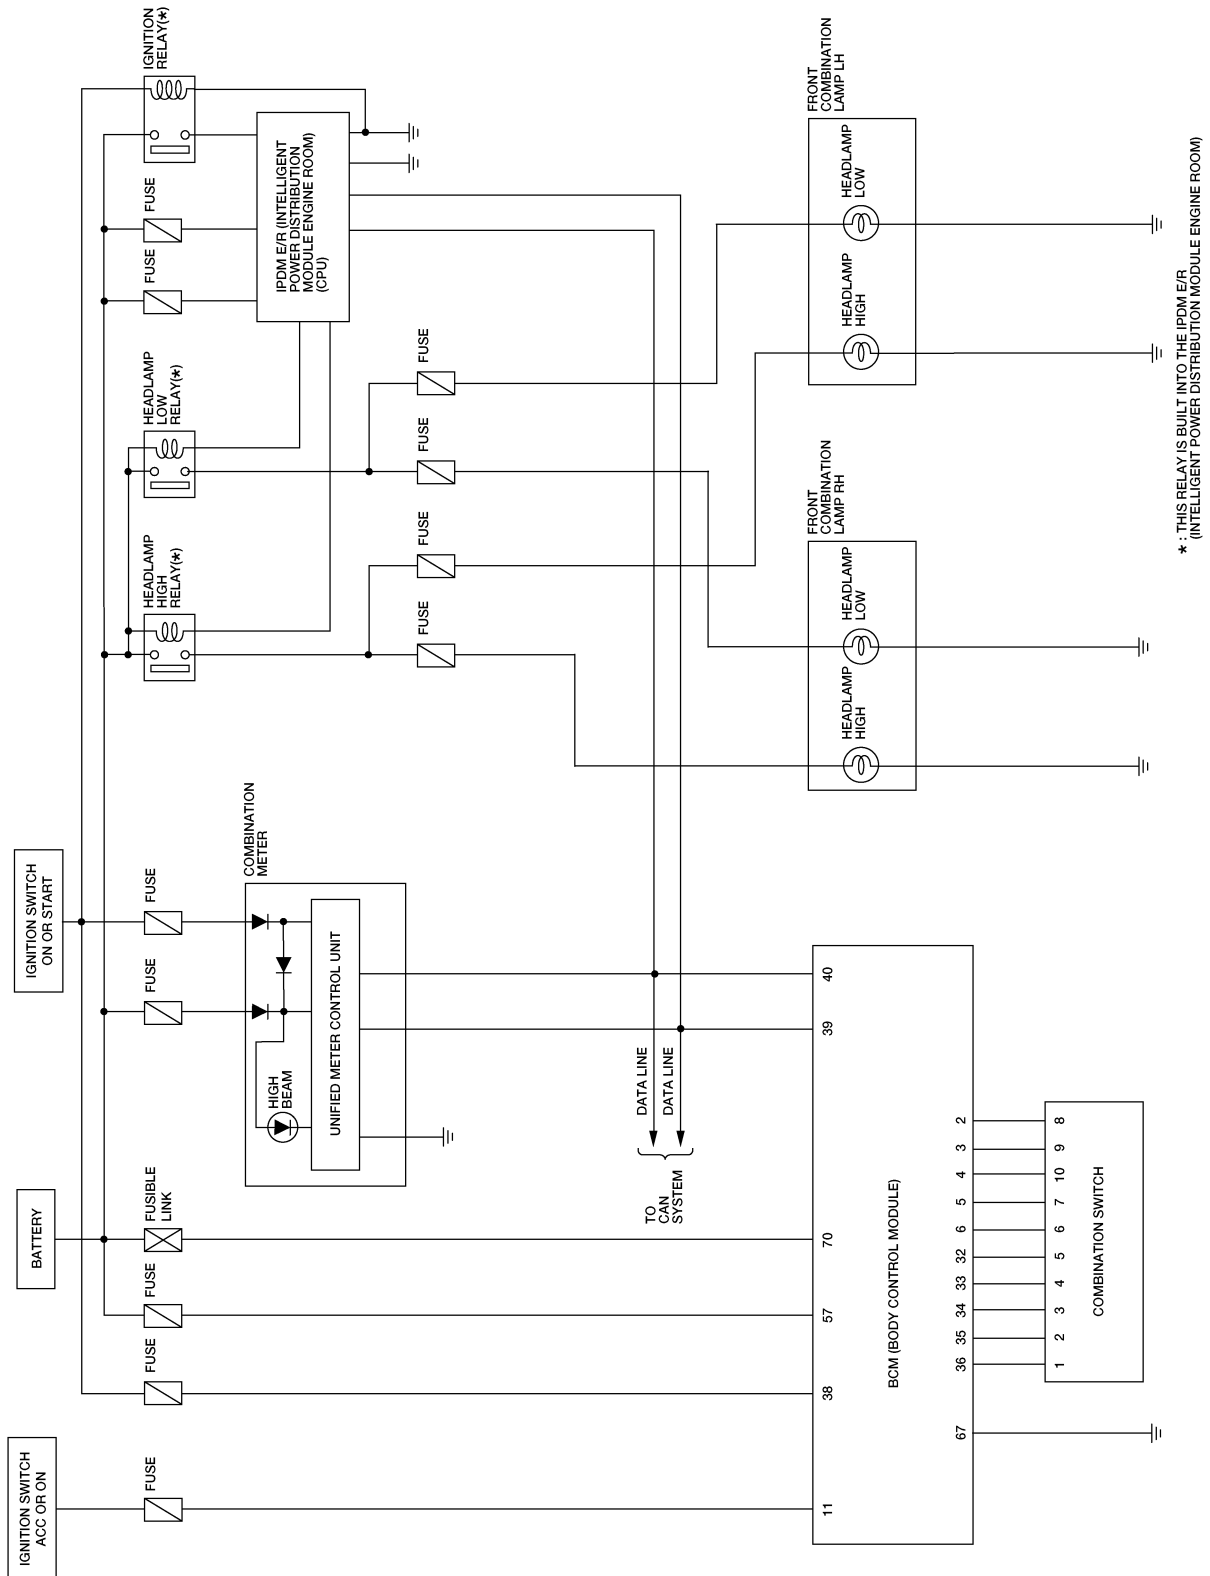

WKWA4679E





# HEADLAMP (FOR USA)

## Wiring Diagram — H/LAMP —

EKS00FAV

LT-H/LAMP-01

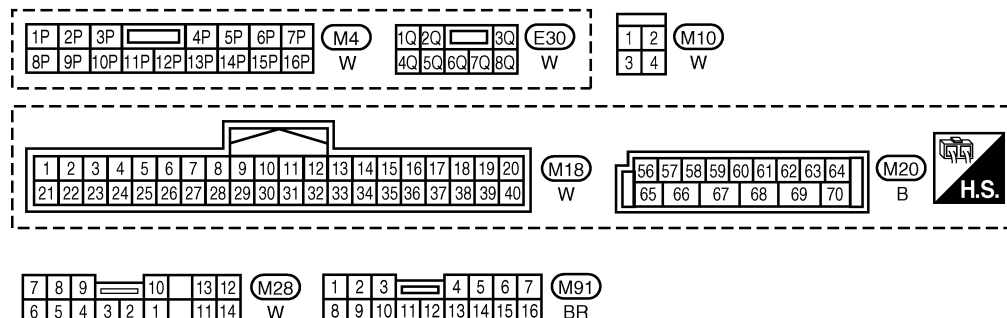
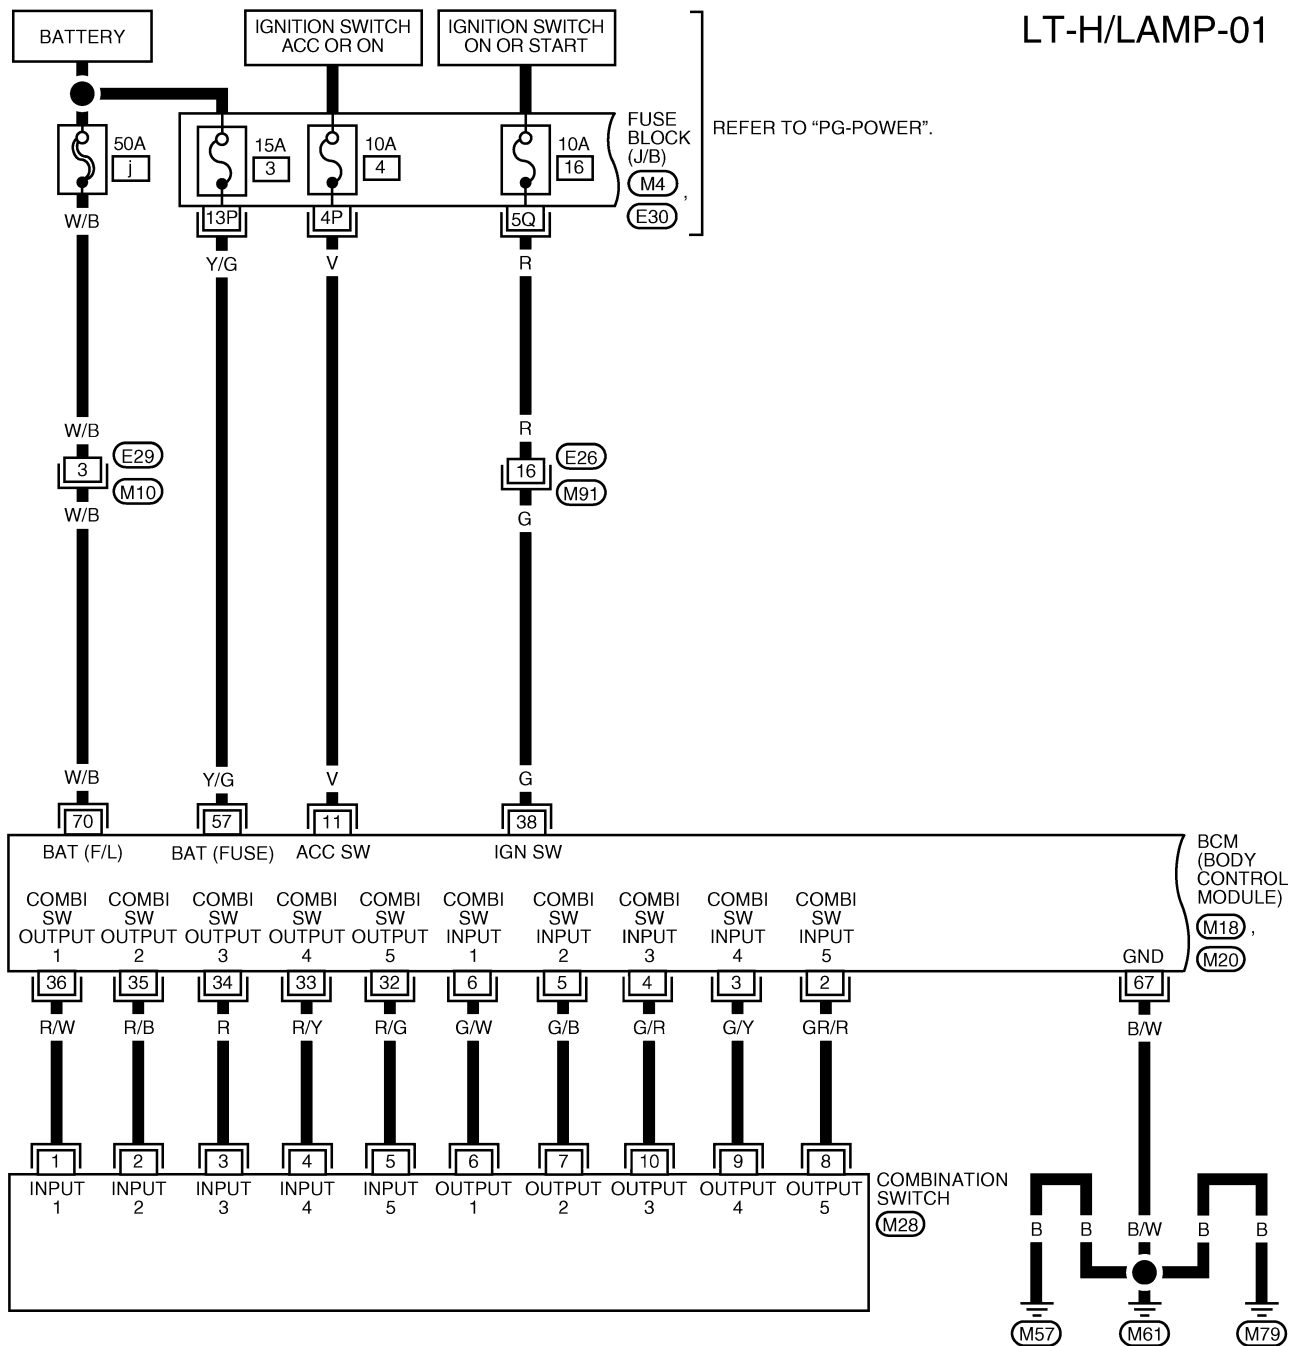


WKWA4680E

# HEADLAMP (FOR USA)

LT-H/LAMP-02



▬ : DATA LINE

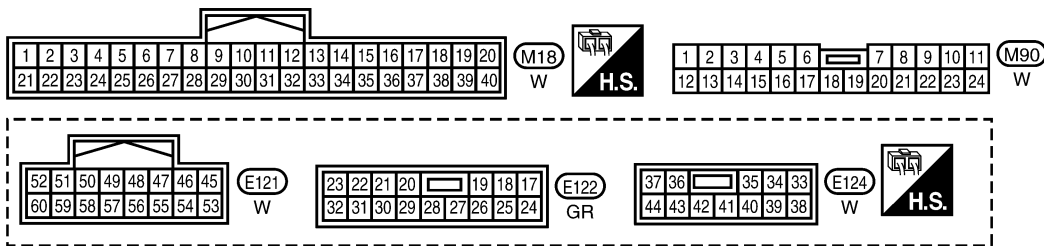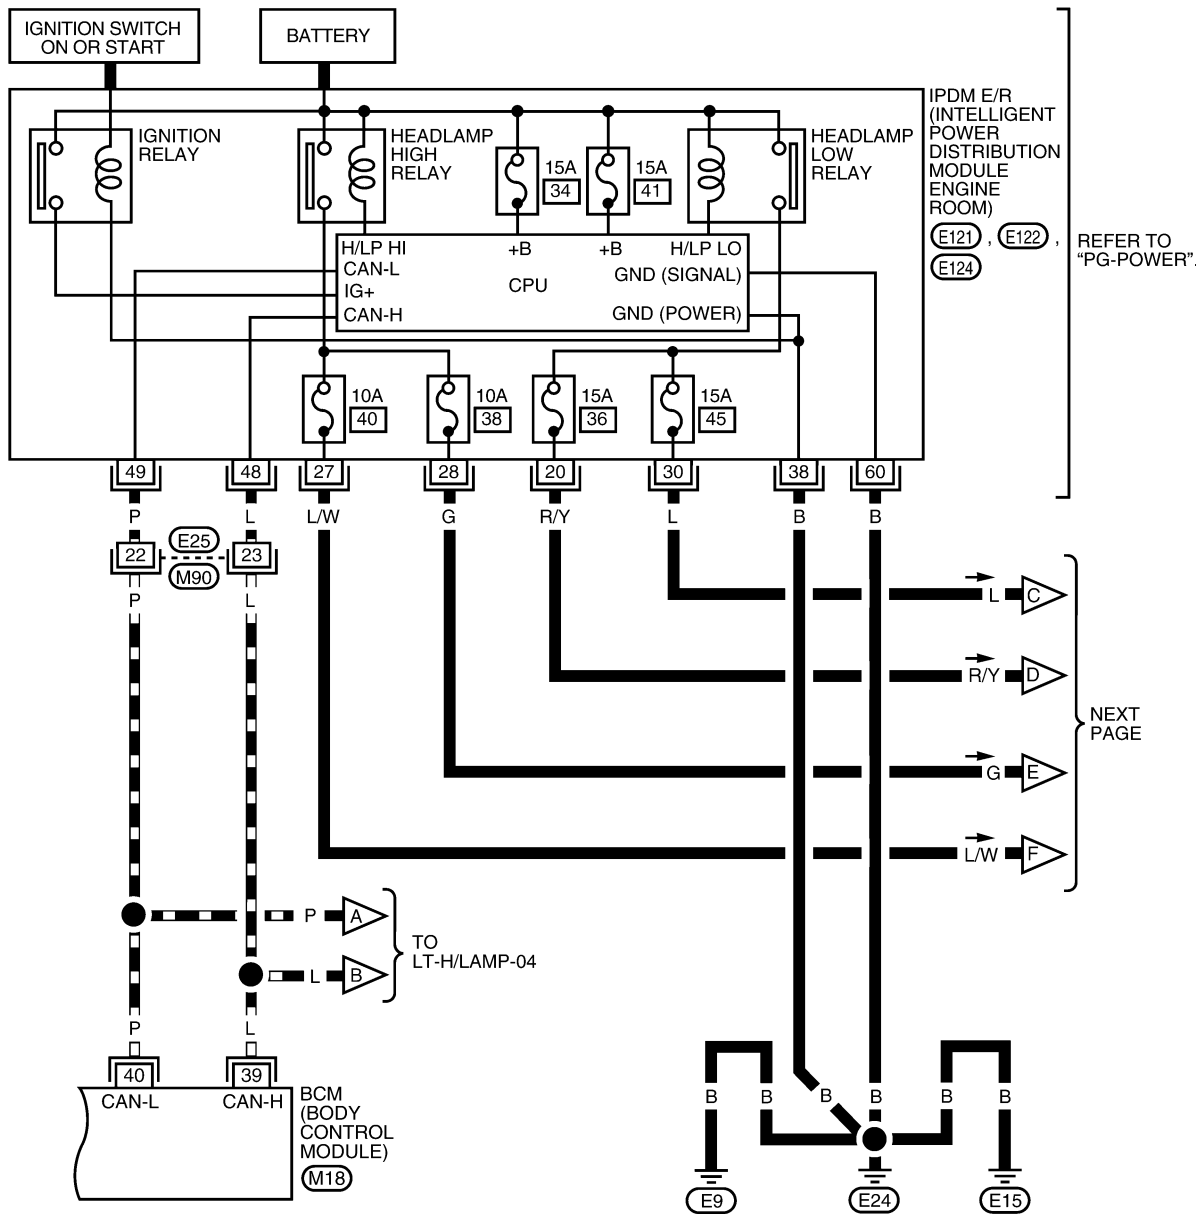

WKWA4681E

# HEADLAMP (FOR USA)



LT-H/LAMP-03

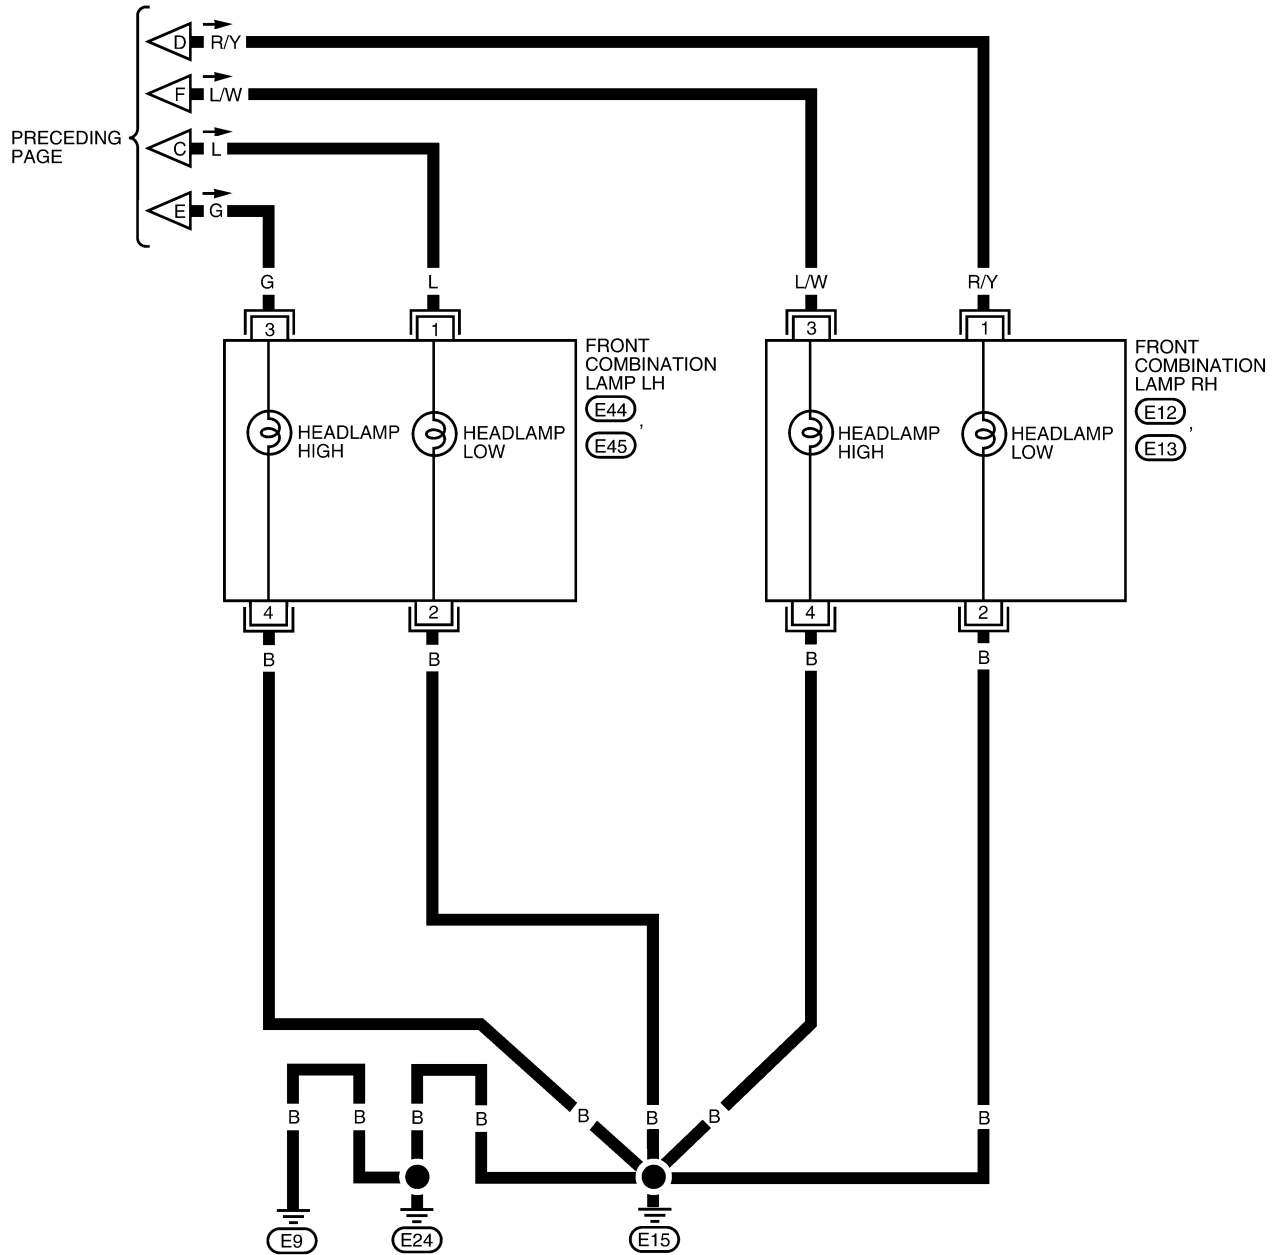

# HEADLAMP (FOR USA)

LT-H/LAMP-04

— : DATA LINE

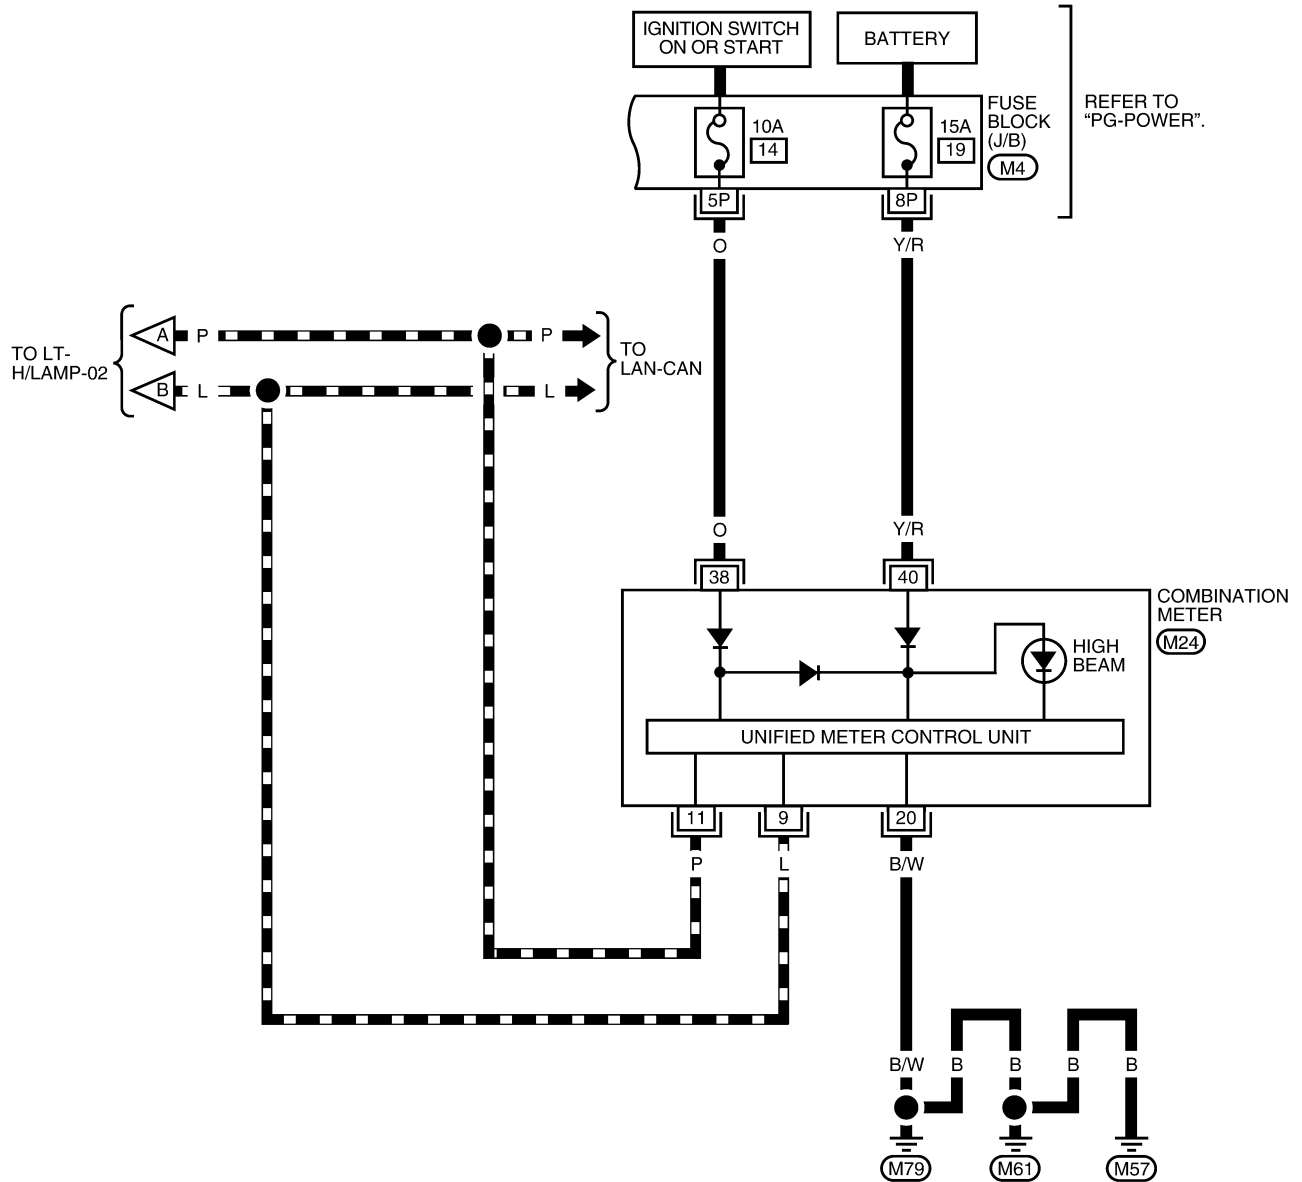

WKWA4683E

# HEADLAMP (FOR USA)

## Terminals and Reference Values for BCM

EKS00FAW

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

## Terminals and Reference Values for IPDM E/R

EKS00FAX

Refer to [PG-27, "Terminals and Reference Values for IPDM E/R"](#) .

## How to Proceed With Trouble Diagnosis

EKS00FAY

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-5, "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-13, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

## Preliminary Check

EKS00FAZ

### CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-15, "BCM Power Supply and Ground Circuit Check"](#) .

Refer to [PG-31, "IPDM E/R Power/Ground Circuit Inspection"](#) .

## CONSULT-II Function (BCM)

EKS00FB0

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

## CONSULT-II START PROCEDURE

Refer to [GI-37, "CONSULT-II Start Procedure"](#) .

## WORK SUPPORT

### Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch item on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

## Display Item List

Item	Description	CONSULT-II	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between ON/OFF.	ON	×
		OFF	—

# HEADLAMP (FOR USA)

## DATA MONITOR

### Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

### Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays status of the front door RH as judged from the front door switch RH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RR "ON/OFF"	Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RL "ON/OFF"	Displays status of the rear door as judged from the rear door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW "ON/OFF"	Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW "ON/OFF"	Displays status of cargo lamp switch.
OPTICAL SENSOR [0 - 5V]	Displays "ambient light (close to 5V when dark/close to 0V when light)" judged from optical sensor signal.

## ACTIVE TEST

### Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.

## HEADLAMP (FOR USA)

3. Touch item to be tested, and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

### Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay (HI, LO) to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CARGO LAMP	Allows cargo lamp to operate by switching ON-OFF.
CORNERING LAMP	Allows cornering lamp relay (RH, LH) to operate by switching ON-OFF.

### SELF-DIAGNOSTIC RESULTS

#### Operation Procedure

1. Touch "BCM" on "SELECT TEST ITEM" screen.
2. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
3. Self-diagnostic results are displayed.

### Display Item List

Monitored item	CONSULT-II display	Description
CAN communication	CAN communication [U1000]	Malfunction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfunction is detected in CAN system.

### CONSULT-II Function (IPDM E/R)

EKS00FB1

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

IPDM E/R diagnostic Mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

### CONSULT-II START PROCEDURE

Refer to [GI-37, "CONSULT-II Start Procedure"](#) .

### DATA MONITOR

#### Operation Procedure

1. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Touch "ALL SIGNALS", "MAIN SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	All items will be monitored.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Select any item for monitoring.

3. Touch "START".
4. Touch the required monitoring item on "SELECTION FROM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
5. Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

# HEADLAMP (FOR USA)

## All Signals, Main Signals, Selection From Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Parking, license plate and tail lamps request	TAIL&CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Cornering lamp	CRNRNG LMP REQ	ON/OFF	×	–	×	Signal status input from BCM
Front fog lamps request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

### NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

### ACTIVE TEST

#### Operation Procedure

1. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Touch item to be tested and check operation.
3. Touch "START".
4. Touch "STOP" while testing to stop the operation.

Test item	CONSULT-II screen display	Description
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI, LO) at your option (Head lamp high beam repeats ON-OFF every 1 second).
Front fog lamp relay (FOG) output		Allows fog lamp relay (FOG) to operate by switching operation ON-OFF at your option.
Cornering lamp relay (RH, LH) output	CORNERING LAMP	Allows cornering lamp relay (RH, LH) to operate by switching operation ON-OFF at your option.

## Headlamp HI Does Not Illuminate (Both Sides)

EKS00FQD

### 1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HI BEAM SW" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in HIGH position : HI BEAM SW ON**

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-91, "Combination Switch Inspection"](#).

DATA MONITOR	
MONITOR	
HI BEAM SW	ON

SKIA4193E



# HEADLAMP (FOR USA)


## 2. HEADLAMP ACTIVE TEST

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "HI" on "ACTIVE TEST" screen.
4. Make sure headlamp high beam operates.

**Headlamp high beam should operate.**

OK or NG

- OK >> GO TO 3.  
 NG >> GO TO 4.

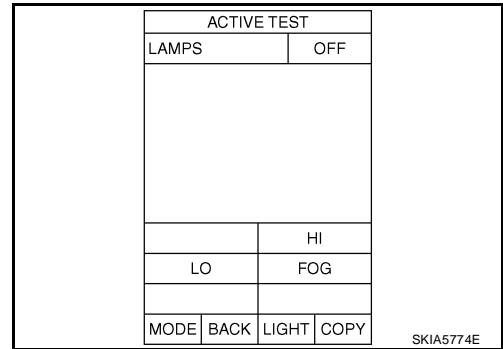


## 3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" and "HL HI REQ" turns ON when lighting switch is in HIGH position.

**When lighting switch is in HIGH position : HL LO REQ ON  
 : HL HI REQ ON**

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-33, "Removal and Installation of IPDM E/R"](#) .  
 NG >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#) .

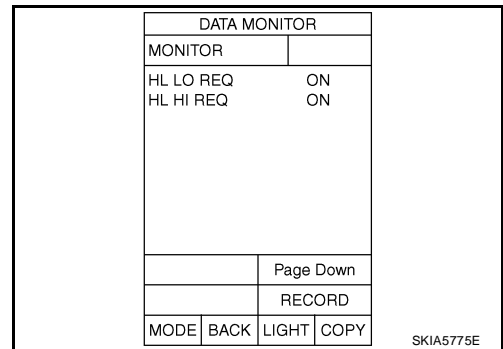


## 4. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "LAMPS" on "SELECT TEST ITEM" screen.
6. Touch "HI" on "ACTIVE TEST" screen.
7. When headlamp high beam is operating, check voltage between front combination lamp RH and LH harness connector terminals and ground.

Terminals		Terminal	(-)	Voltage
(+)				
Front combination lamp connector		3	Ground	Battery voltage
RH	E13			
LH	E45			

OK or NG

- OK >> GO TO 6.  
 NG >> GO TO 5.

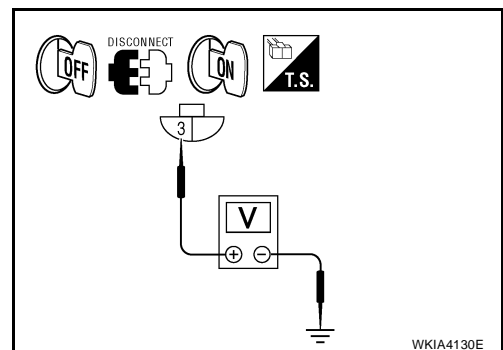


# HEADLAMP (FOR USA)

## 5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector terminals and front combination lamp RH and LH harness connector terminals.

A		B		Continuity
IPDM E/R connector	Terminal	Front combination lamp connector	Terminal	
E122	27	RH	E13	Yes
	28	LH	E45	

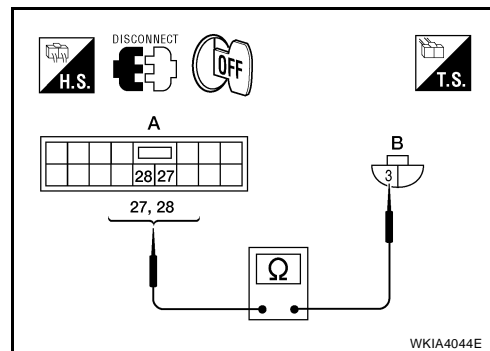


### OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-33, "Removal and Installation of IPDM E/R"](#) .
- NG >> Repair harness or connector.

## 6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp RH and LH harness connector terminals and ground.

Terminals		Terminal	Continuity
Front combination lamp connector			
RH	E13	4	Ground
LH	E45		

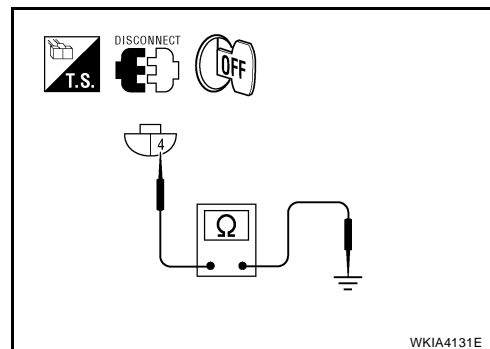

### OK or NG

- OK >> Check front combination lamp connector for damage or poor connection. Repair as necessary.
- NG >> Repair harness or connector.

## Headlamp HI Does Not Illuminate (One Side)

EKS00F0E

### 1. BULB INSPECTION

Inspect inoperative headlamp bulb.

### OK or NG

- OK >> GO TO 2.
- NG >> Replace headlamp bulb. Refer to [LT-26, "HEADLAMP \(INNER SIDE\), FOR HIGH BEAM"](#) .

# HEADLAMP (FOR USA)


## 2. CHECK POWER TO HEADLAMP

1. Disconnect inoperative front combination lamp connector.
2. Turn the high beam headlamps ON.
3. Check voltage between inoperative front combination lamp harness connector terminal and ground.

Terminals		Terminal	(-)	Voltage (Approx.)
(+)				
Front combination lamp connector		3	Ground	Battery voltage
RH	E13			
LH	E45			

OK or NG

- OK >> GO TO 3.  
 NG >> GO TO 4.

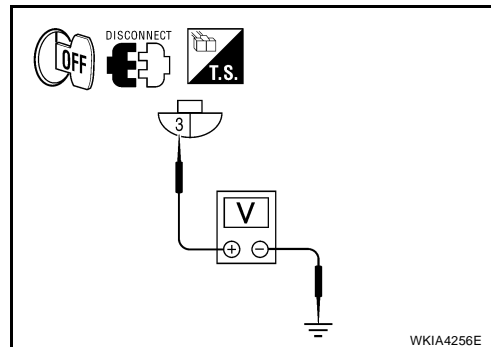


## 3. CHECK HEADLAMP GROUND

1. Turn the high beam headlamps OFF.
2. Check continuity between inoperative front combination lamp harness connector terminal and ground.

Terminals		Terminal	Ground	Continuity
Front combination lamp connector				
RH	E13	4	Ground	Yes
LH	E45			

OK or NG

- OK >> Check front combination lamp connector for damage or poor connection. Repair as necessary.  
 NG >> Repair open circuit in harness between inoperative headlamp and ground.

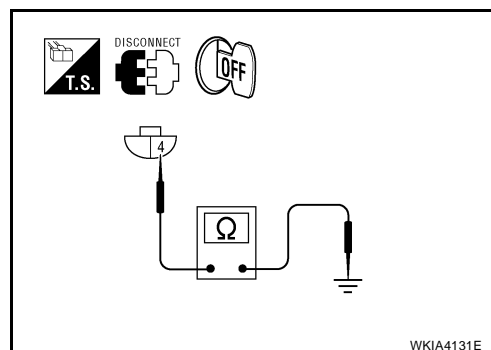


## 4. INSPECTION BETWEEN IPDM E/R AND HEADLAMPS

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector terminal and inoperative front combination lamp harness connector terminal.

A		B		Continuity
IPDM E/R connector	Terminal	Front combination lamp connector	Terminal	
E122	27	RH	E13	Yes
	28	LH	E45	

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-33, "Removal and Installation of IPDM E/R"](#).  
 NG >> Check for short circuits and open circuits in harness between IPDM E/R and headlamps. Repair as necessary.

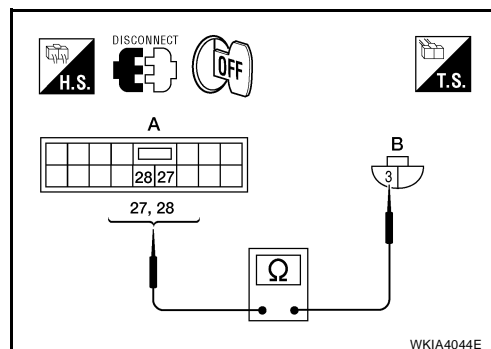

# HEADLAMP (FOR USA)

EKS00FB4

## High-Beam Indicator Lamp Does Not Illuminate

### 1. CAN COMMUNICATION SYSTEM INSPECTION

Inspect CAN communication system. Refer to [LAN-44, "TROUBLE DIAGNOSIS"](#) .

OK or NG

- OK >> Replace combination meter. Refer to [DI-25, "REMOVAL AND INSTALLATION"](#) .
- NG >> Repair as necessary.

## Headlamp LO Does Not Illuminate (Both Sides)

EKS00FB5

### 1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : HEAD LAMP SW 1 ON**  
**2ND position : HEAD LAMP SW 2 ON**

OK or NG

- OK >> GO TO 2.
- NG >> Check lighting switch. Refer to [LT-91, "Combination Switch Inspection"](#) .

DATA MONITOR			
MONITOR			
HEAD LAMP SW 1	ON		
HEAD LAMP SW 2	ON		
		Page Down	
		RECORD	
MODE	BACK	LIGHT	COPY

WKIA4262E

### 2. HEADLAMP ACTIVE TEST

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "LO" on "ACTIVE TEST" screen.
4. Make sure headlamp low beam operates.

**Headlamp low beam should operate.**

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

ACTIVE TEST			
LAMPS		OFF	
		HI	
LO		FOG	
MODE	BACK	LIGHT	COPY

SKIA5774E

### 3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" turns ON when lighting switch is in 2ND position.

**When lighting switch is in : HL LO REQ ON**  
**2ND position**

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-33, "Removal and Installation of IPDM E/R"](#) .
- NG >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#) .

DATA MONITOR			
MONITOR			
HL LO REQ	ON		
		Page Down	
		RECORD	
MODE	BACK	LIGHT	COPY

SKIA5780E

# HEADLAMP (FOR USA)


## 4. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "LAMPS" on "SELECT TEST ITEM" screen.
6. Touch "LO" on "ACTIVE TEST" screen.
7. When headlamp low beam is operating, check voltage between front combination lamp RH and LH harness connectors and ground.

Terminals		Terminal	(-)	Voltage
(+)				
Front combination lamp connector		1	Ground	Battery voltage
RH	E12			
LH	E44			

OK or NG

- OK >> GO TO 6.  
 NG >> GO TO 5.

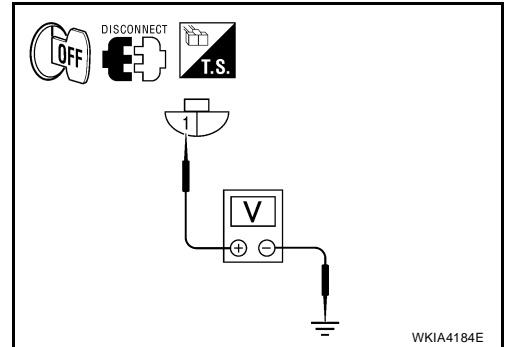


## 5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector terminal and front combination lamp harness connector terminal.

A		B		Continuity
IPDM E/R connector	Terminal	Front combination lamp connector	Terminal	
E122	20	RH	E12	Yes
	30	LH	E44	

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-33, "Removal and Installation of IPDM E/R"](#) .  
 NG >> Repair harness or connector.

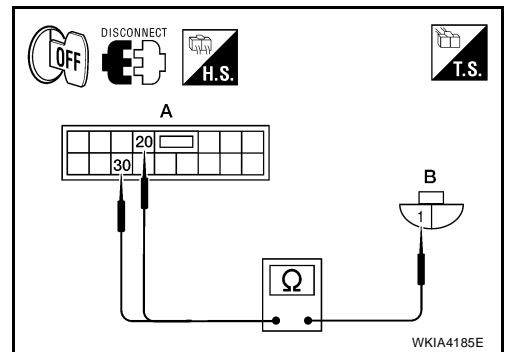


## 6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp harness connector terminal and ground.

Terminals		Terminal	(-)	Voltage
(+)				
Front combination lamp connector		2	Ground	Battery voltage
RH	E12			
LH	E44			

OK or NG

- OK >> Check front combination lamp connector for damage or poor connection. Repair as necessary.  
 NG >> Repair harness or connector.

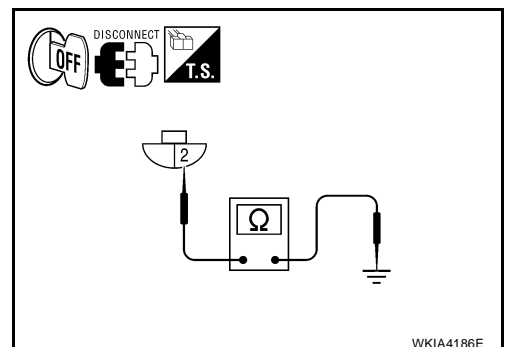

# HEADLAMP (FOR USA)

EKS00FB6

## Headlamp LO Does Not Illuminate (One Side)

### 1. BULB INSPECTION

Inspect inoperative headlamp bulb.

OK or NG

OK >> GO TO 2.

NG >> Replace headlamp bulb. Refer to [LT-25, "HEADLAMP \(OUTER SIDE\), FOR LOW BEAM"](#) .

### 2. CHECK POWER TO HEADLAMP


1. Disconnect inoperative front combination lamp connector.
2. Turn the low beam headlamps ON.
3. Check voltage between inoperative front combination lamp connector terminal and ground.

Terminals		Terminal	(-)	Voltage (Approx.)
(+)				
Front combination lamp connector		1	Ground	Battery voltage
RH	E12			
LH	E44			

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

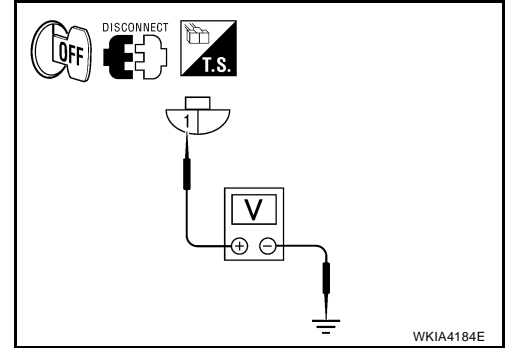

WKIA4184E

### 3. CHECK HEADLAMP GROUND


1. Turn the low beam headlamps OFF.
2. Check continuity between inoperative front combination lamp connector terminal and ground.

Terminals		Terminal	Ground	Continuity
Front combination lamp connector				
RH	E12	2	Ground	Yes
LH	E44			

OK or NG

OK >> Check headlamp and IPDM E/R connector. Repair as necessary.

NG >> Repair open circuit in harness between inoperative headlamp and ground.

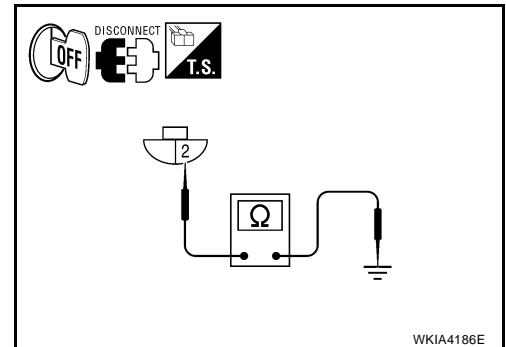

WKIA4186E

# HEADLAMP (FOR USA)

## 4. INSPECTION BETWEEN IPDM E/R AND HEADLAMPS


1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector terminals and inoperative front combination lamp harness connector terminals.

A		B		Continuity
IPDM E/R connector	Terminal	Front combination lamp connector	Terminal	
E122	20	RH	E12	Yes
	30	LH	E44	

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-33, "Removal and Installation of IPDM E/R"](#) .

NG >> Check for short circuits and open circuits in harness between IPDM E/R and headlamps. Repair as necessary.

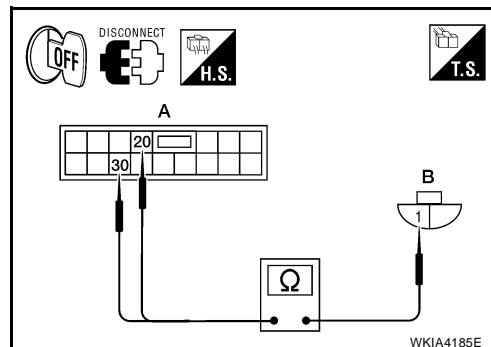

## Headlamps Do Not Turn OFF

EKS00FB7

### 1. CHECK COMBINATION SWITCH INPUT SIGNAL


Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in OFF position :**  
**HEAD LAMP SW 1 OFF**  
**HEAD LAMP SW 2 OFF**

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-33, "Removal and Installation of IPDM E/R"](#) .

NG >> GO TO 2.

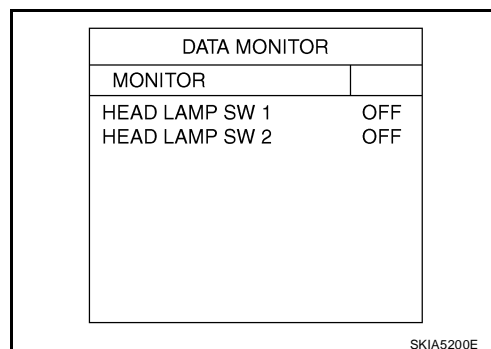

### 2. CHECK LIGHTING SWITCH

Check lighting switch. Refer to [LT-91, "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 3.

NG >> Replace lighting switch. Refer to [LT-93, "Removal and Installation"](#) .


### 3. CHECKING CAN COMMUNICATIONS BETWEEN BCM AND IPDM E/R

Select "BCM" on CONSULT-II and perform self-diagnosis for BCM.

Display of self-diagnosis results

NO DTC>>Replace IPDM E/R. Refer to [PG-33, "Removal and Installation of IPDM E/R"](#) .


CAN COMM CIRCUIT>> Refer to [BCS-18, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#) .

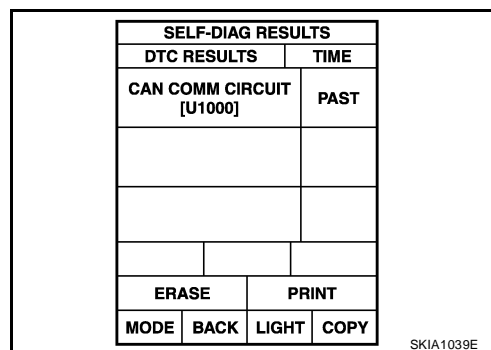

# HEADLAMP (FOR USA)

## Aiming Adjustment

EKS00FB8

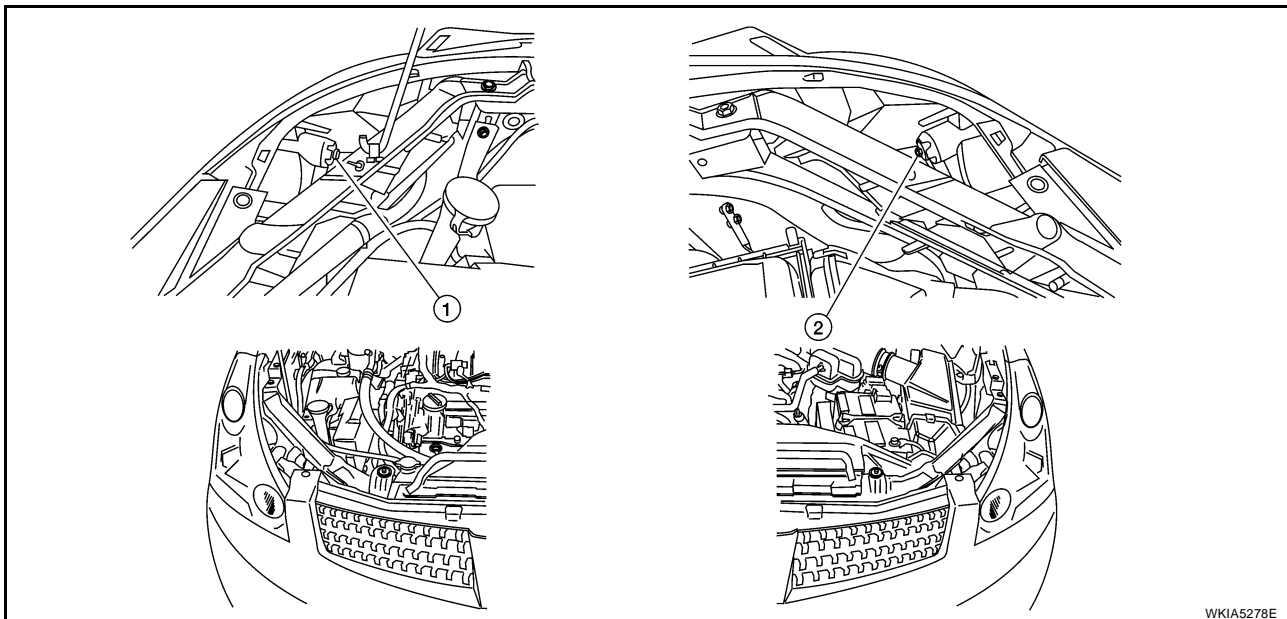

1. RH headlamp (low beam) adjustment screw 2. LH headlamp (low beam) adjustment screw

**For details, refer to the regulations in your area.**

### NOTE:

If vehicle front body has been repaired and /or the headlamp assembly has been replaced, check headlamp aiming.


### HEADLAMP AIMING

#### NOTE:

- Before performing aiming adjustment, check the following:
  - Confirm headlamp aiming switch is set to "0" (zero) position (if equipped).
  - Ensure all tires are inflated to correct pressure.
  - Place vehicle and screen on level surface.
  - Ensure there is no load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant and engine oil filled to correct level, and fuel tank full.
  - Confirm spare tire, jack and tools are properly stowed.
  - Use adjusting screw to perform aiming adjustment.



# HEADLAMP (FOR USA)

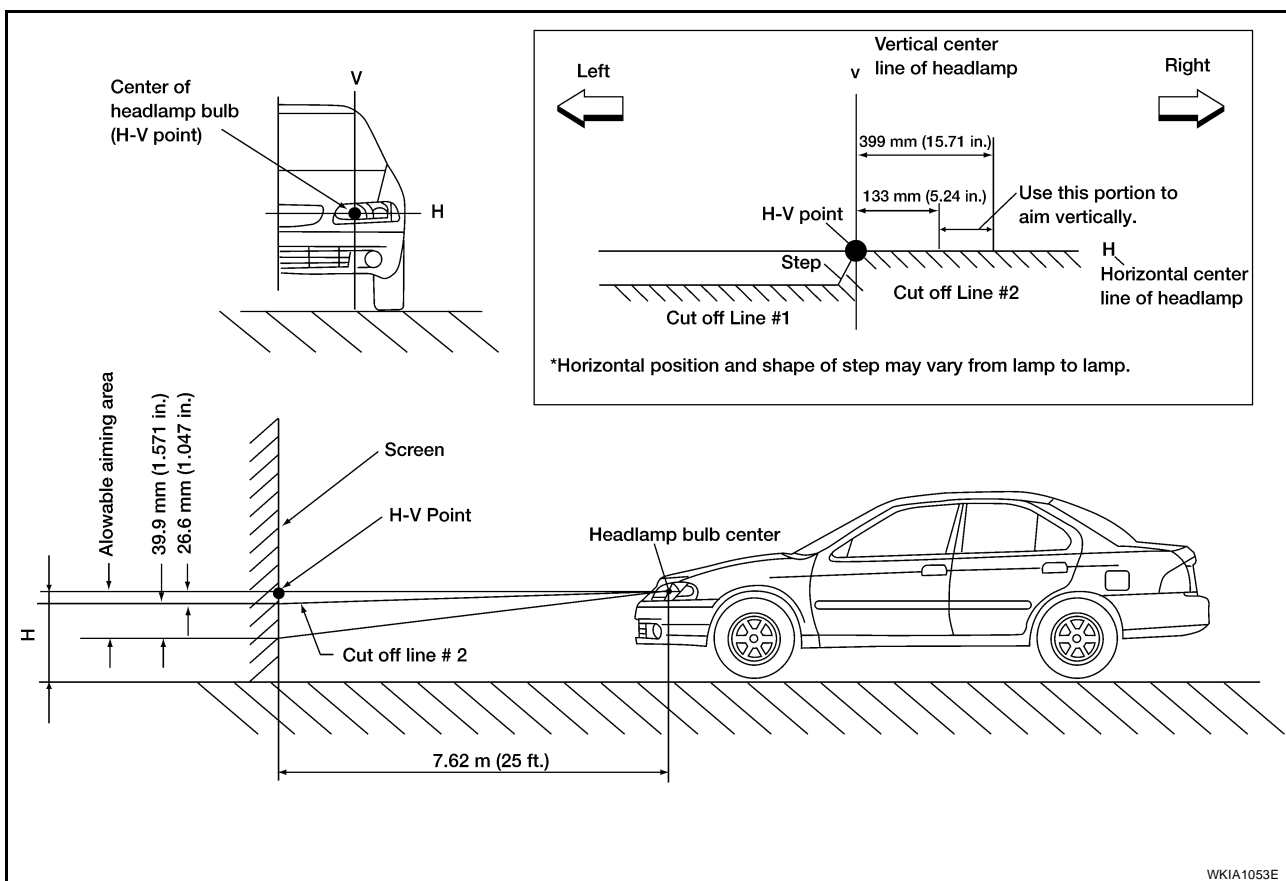

- Basic illuminating area for adjustment should be within the range shown on the aiming chart. Adjust headlamps accordingly.

## LOW BEAM AND HIGH BEAM

### NOTE:

Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.

1. Turn headlamp low beam on.
2. Use adjusting screw to perform aiming adjustment.

## Bulb Replacement

EKS00FB9

### CAUTION:

- Do not touch bulb by hand right after being turned off. Burning may result.
- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it.
- Do not leave bulb out of front combination lamp assembly for a long time because dust, moisture, smoke, etc. may affect the performance of the lamp. When replacing headlamp bulb, be sure to replace it with a new one.
- After installing the bulb, be sure to install the bulb socket securely to ensure watertightness.

## HEADLAMP (OUTER SIDE), FOR LOW BEAM

### Removal

1. Turn headlamp switch OFF.
2. Disconnect the electrical connector.
3. Turn bulb socket counterclockwise and remove bulb.

### Installation

Installation is in the reverse order of removal.

# HEADLAMP (FOR USA)

## HEADLAMP (INNER SIDE), FOR HIGH BEAM

### Removal

1. Turn headlamp switch OFF.
2. Disconnect the electrical connector.
3. Turn bulb socket counterclockwise and remove bulb.

### Installation

Installation is in the reverse order of removal.

## FRONT TURN SIGNAL/PARKING LAMP

### Removal

1. Turn the front turn signal/parking lamp bulb socket counterclockwise to unlock it.
2. Pull bulb to remove it from socket.

### Installation


Installation is in the reverse order of removal.

## Removal and Installation FRONT COMBINATION LAMP

EKS00FBA

### Removal


1. Remove front fascia. Refer to [EI-14, "Removal and Installation"](#).
2. Remove front combination lamp bolts.

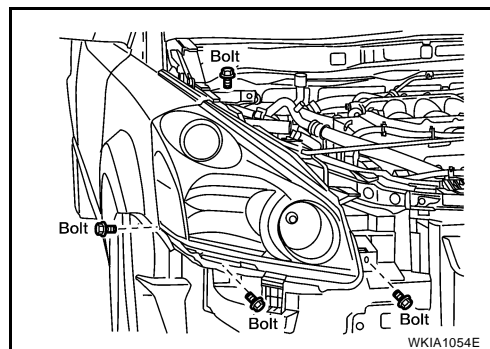

3. Pull front combination lamp toward front of the vehicle, disconnect connectors, and remove front combination lamp.

### Installation

1. Connect front combination lamp connectors.
2. Install front combination lamp bolts.

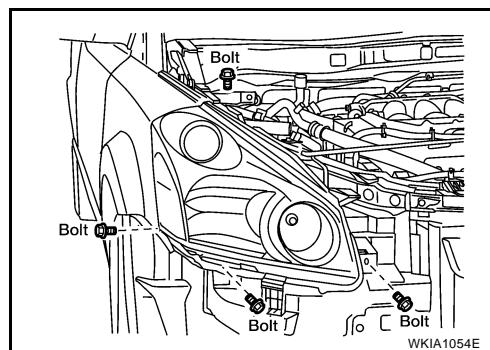


3. Install front fascia. Refer to [EI-14, "Removal and Installation"](#).
4. Verify headlamp aiming. Refer to [LT-24, "Aiming Adjustment"](#).

# HEADLAMP (FOR USA)

## Disassembly and Assembly FRONT COMBINATION LAMP

EKS00FBB

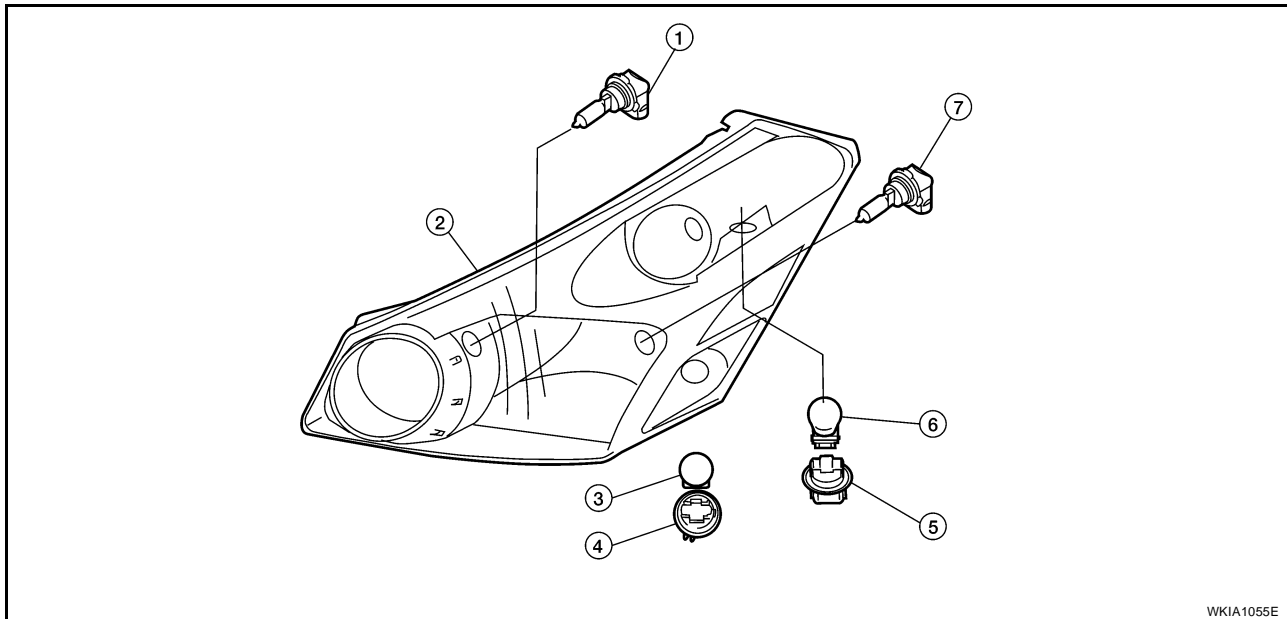

- |                               |   |                                  |
|-------------------------------|---|----------------------------------|
| 1. Headlamp bulb (High beam)  | 2. Headlamp assembly                    | 3. Cornering lamp bulb           |
| 4. Cornering lamp bulb socket | 5. Parking/turn signal lamp bulb socket | 6. Parking/turn signal lamp bulb |
| 7. Headlamp bulb (Low beam)   |   |                                  |

### Disassembly

1. Turn high beam bulb counterclockwise to unlock and remove high beam bulb.
2. Turn low beam bulb counterclockwise to unlock and remove low beam bulb.
3. Turn turn signal/parking lamp (front) bulb socket counterclockwise to unlock and remove turn signal/parking lamp (front) bulb.
4. Turn cornering lamp bulb socket counterclockwise to unlock and remove cornering lamp bulb.

### Assembly

Assembly is in the reverse order of disassembly.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M


# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

## HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

PF2:26010

### Component Parts and Harness Connector Location

EKS00FBC

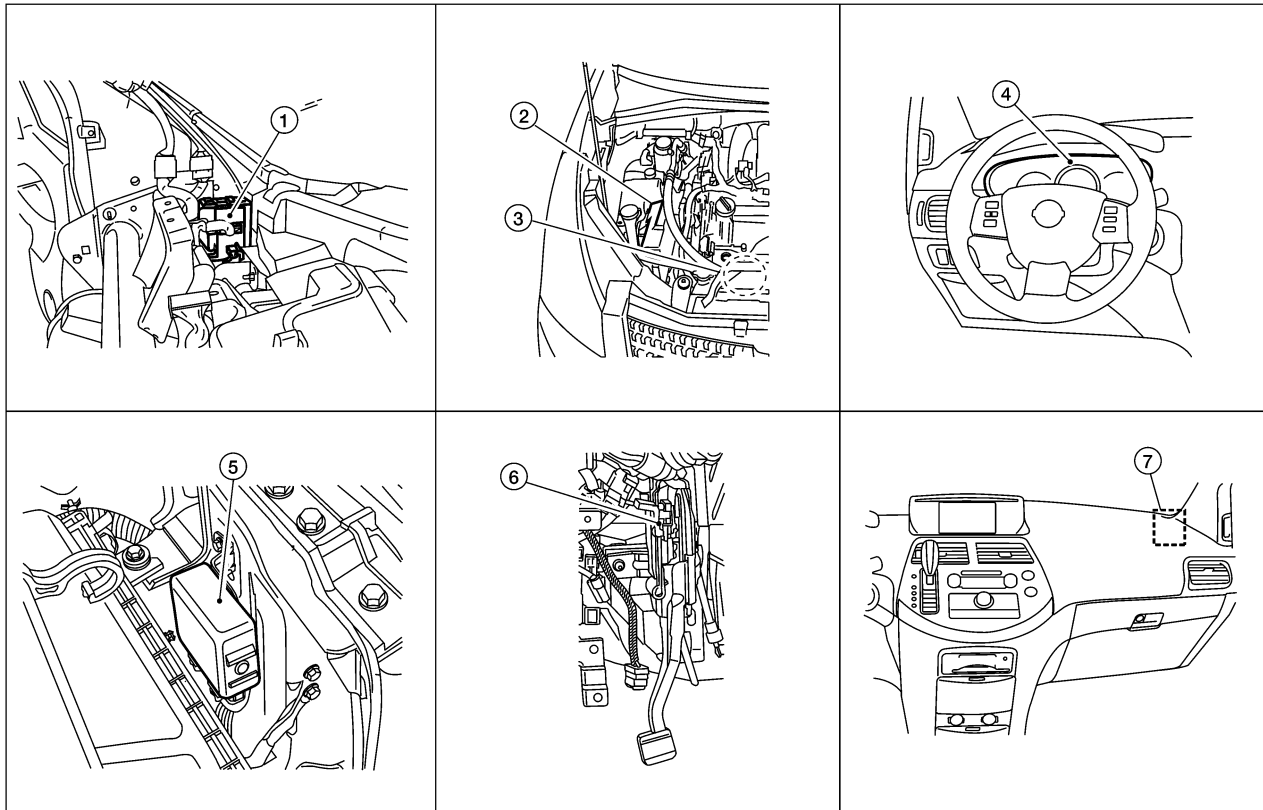

WKIA5260E

1. BCM M18, M20 (view with instrument panel removed)
2. IPDM E/R E121, E122, E124
3. Generator F1, E112
4. Combination meter M24
5. Daytime light control unit E103, E104
6. Parking brake switch E140
7. Daytime light relay E148

## System Description

EKS00FBD

The headlamp system for Canada vehicles is equipped with a daytime light control unit that activates the high beam headlamps at approximately half illumination whenever the engine is running and the lighting switch is in the OFF or 1st position. If the parking brake is applied before the engine is started the daytime lights will not be illuminated. The daytime lights will illuminate once the parking brake is released. Thereafter, the daytime lights will continue to operate when the parking brake is applied.

Power is supplied at all times

- to ignition relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- to headlamp high relay, located in the IPDM E/R, and
- to headlamp low relay, located in the IPDM E/R, and
- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 15A fuse (No. 29, located in the fuse and fusible link box)
- to daytime light control unit terminals 2 and 3, and
- through 15A fuse (No. 34, located in the IPDM E/R)
- to CPU in the IPDM E/R, and
- through 15A fuse (No. 41, located in the IPDM E/R)
- to CPU in the IPDM E/R.

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 12, located in the fuse block (J/B)]
- to daytime light control unit terminal 12, and
- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

With the ignition switch in the START position, power is supplied

- through 10A fuse [No. 9, located in the fuse block (J/B)]
- to daytime light control unit terminal 1.

Ground is supplied

- to IPDM E/R terminals 38 and 60, and
- to daytime light control unit terminal 9
- through grounds E9, E15 and E24, and
- to BCM terminal 67
- through grounds M57, M61 and M79.

## HEADLAMP OPERATION

### Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp low relay coil. When energized, this relay directs power

- through 15A fuse (No. 45, located in the IPDM E/R)
- through IPDM E/R terminal 30, and
- to front combination lamp LH terminal 1, and
- to daytime light control unit terminal 4
- through 15A fuse (No. 36, located in the IPDM E/R)
- through IPDM E/R terminal 20
- to front combination lamp RH terminal 1, and
- through diode 3
- to daytime light control unit terminal 1.

Ground is supplied

- to front combination lamp LH and RH terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, low beam headlamps illuminate.

### High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input requesting the headlamp high beams to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil. When energized, this relay directs power

- through 10A fuse (No. 40, located in the IPDM E/R)
- through IPDM E/R terminal 27
- to daytime light relay terminal 2, and
- through diode-3
- to daytime light control unit terminal 1, and

When energized, the daytime light relay directs power

- through daytime light relay terminal 3
- to daytime light control unit terminal 8 and
- to front combination lamp RH terminal 3.

A

B

C

D

E

F

G

H

I

J

LT

L

M

## HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

---

Also when the headlamp high relay is energized, it directs power

- through 10A fuse (No. 38, located in the IPDM E/R)
- through IPDM E/R terminal 28
- to daytime light control unit terminal 5
- through daytime light control unit terminal 6
- to front combination lamp LH terminal 3.

Ground is supplied

- to front combination lamp RH terminal 4
- through grounds E9, E15 and E24, and
- to front combination lamp LH terminal 4
- to daytime light control unit terminal 7
- through daytime light control unit terminal 9
- through grounds E9, E15 and E24.

With power and ground supplied, the high beam headlamps illuminate.

### BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes unless the combination switch (lighting switch) position is changed. If the combination switch (lighting switch) position is changed, then the headlamps are turned off.

### AUTO LIGHT OPERATION (IF EQUIPPED)

For auto light operation, refer to [LT-38, "System Description"](#) .

### DAYTIME LIGHT OPERATION

With the engine running, the lighting switch in the OFF or 1ST position and parking brake released, power is supplied

- through daytime light control unit terminal 6
- to front combination lamp LH terminal 3
- through front combination lamp LH terminal 4
- to daytime light control unit terminal 7, and
- through daytime light control unit terminal 8
- to front combination lamp RH terminal 3.

Ground is supplied

- to front combination lamp RH terminal 4
- through grounds E9, E15 and E24.

Because the high beam headlamps are now wired in series, they operate at half illumination.

### CAN Communication System Description


EKS00FBE

Refer to [LAN-4, "SYSTEM DESCRIPTION"](#) .

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

## Schematic

EKS00FBF

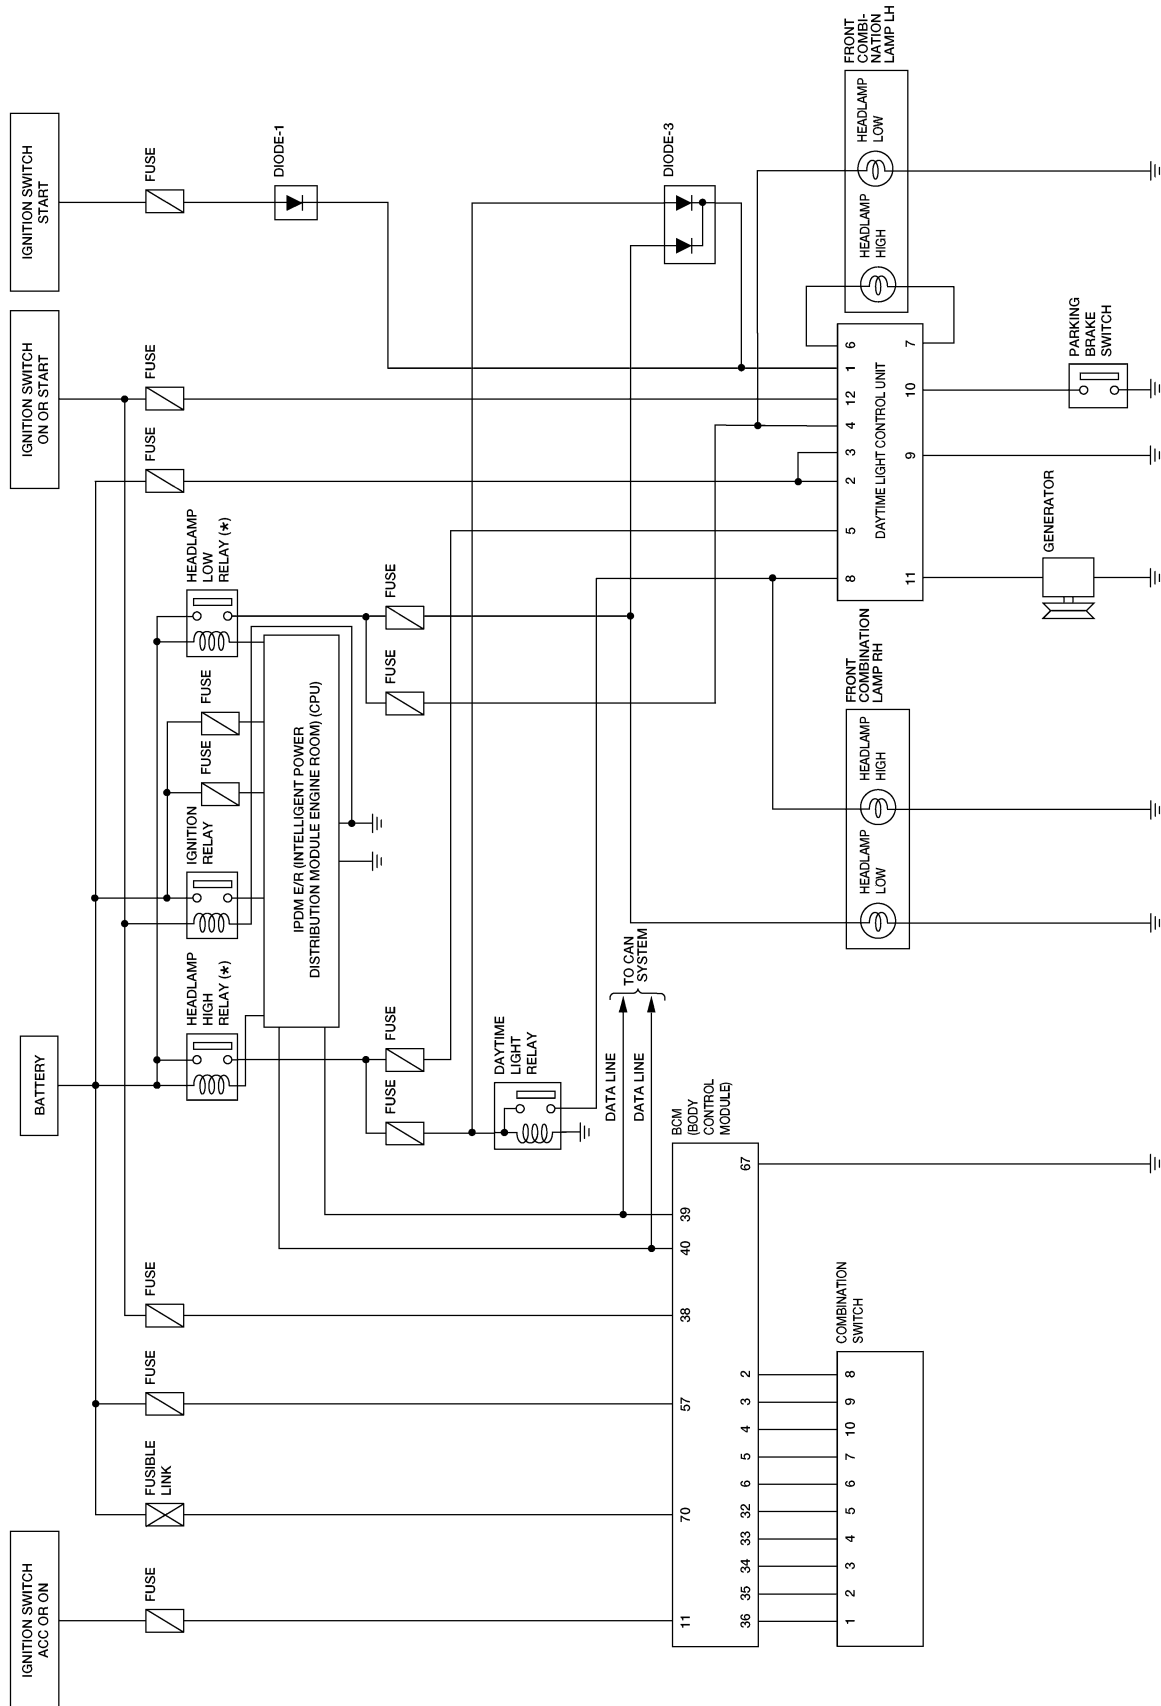

\*: THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

WKWA4684E



# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

EKS00FBG

## Wiring Diagram — DTRL —

LT-DTRL-01

▬ : DATA LINE

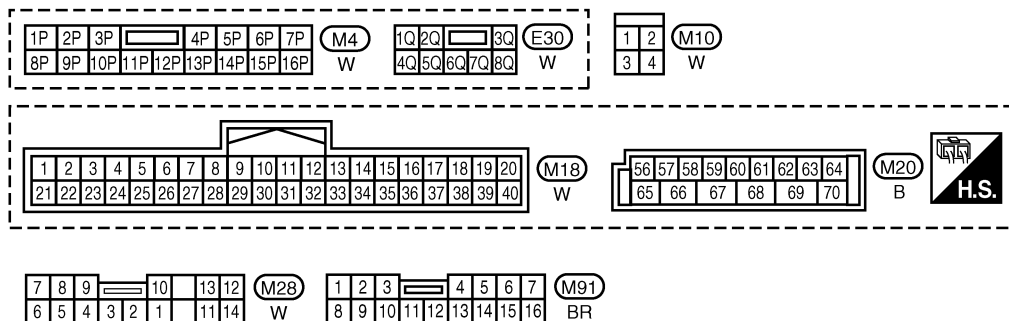
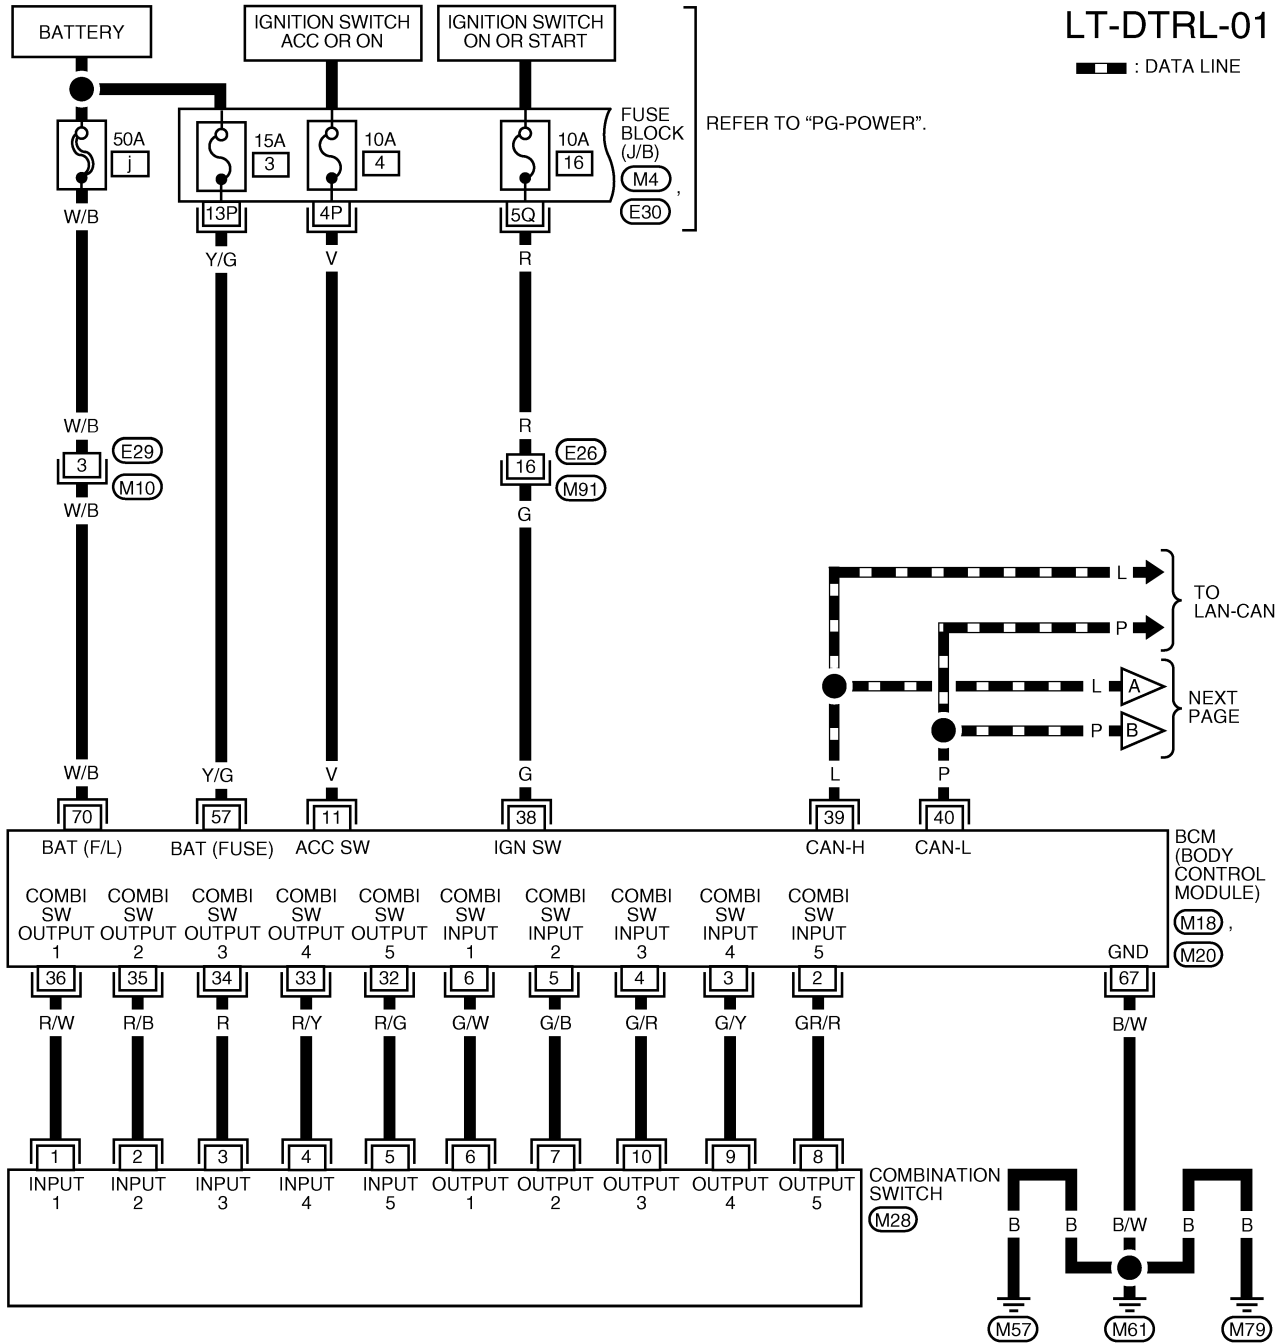


WKWA4685E



# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -








LT-DTRL-02

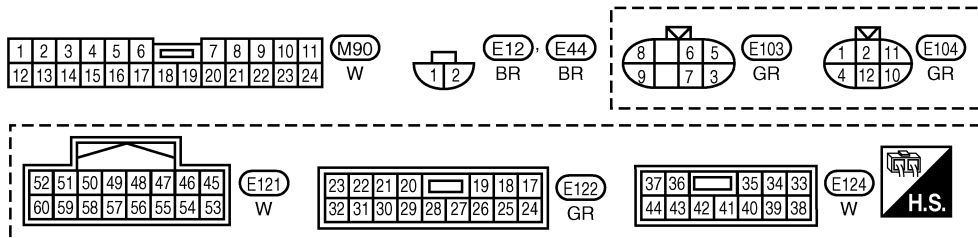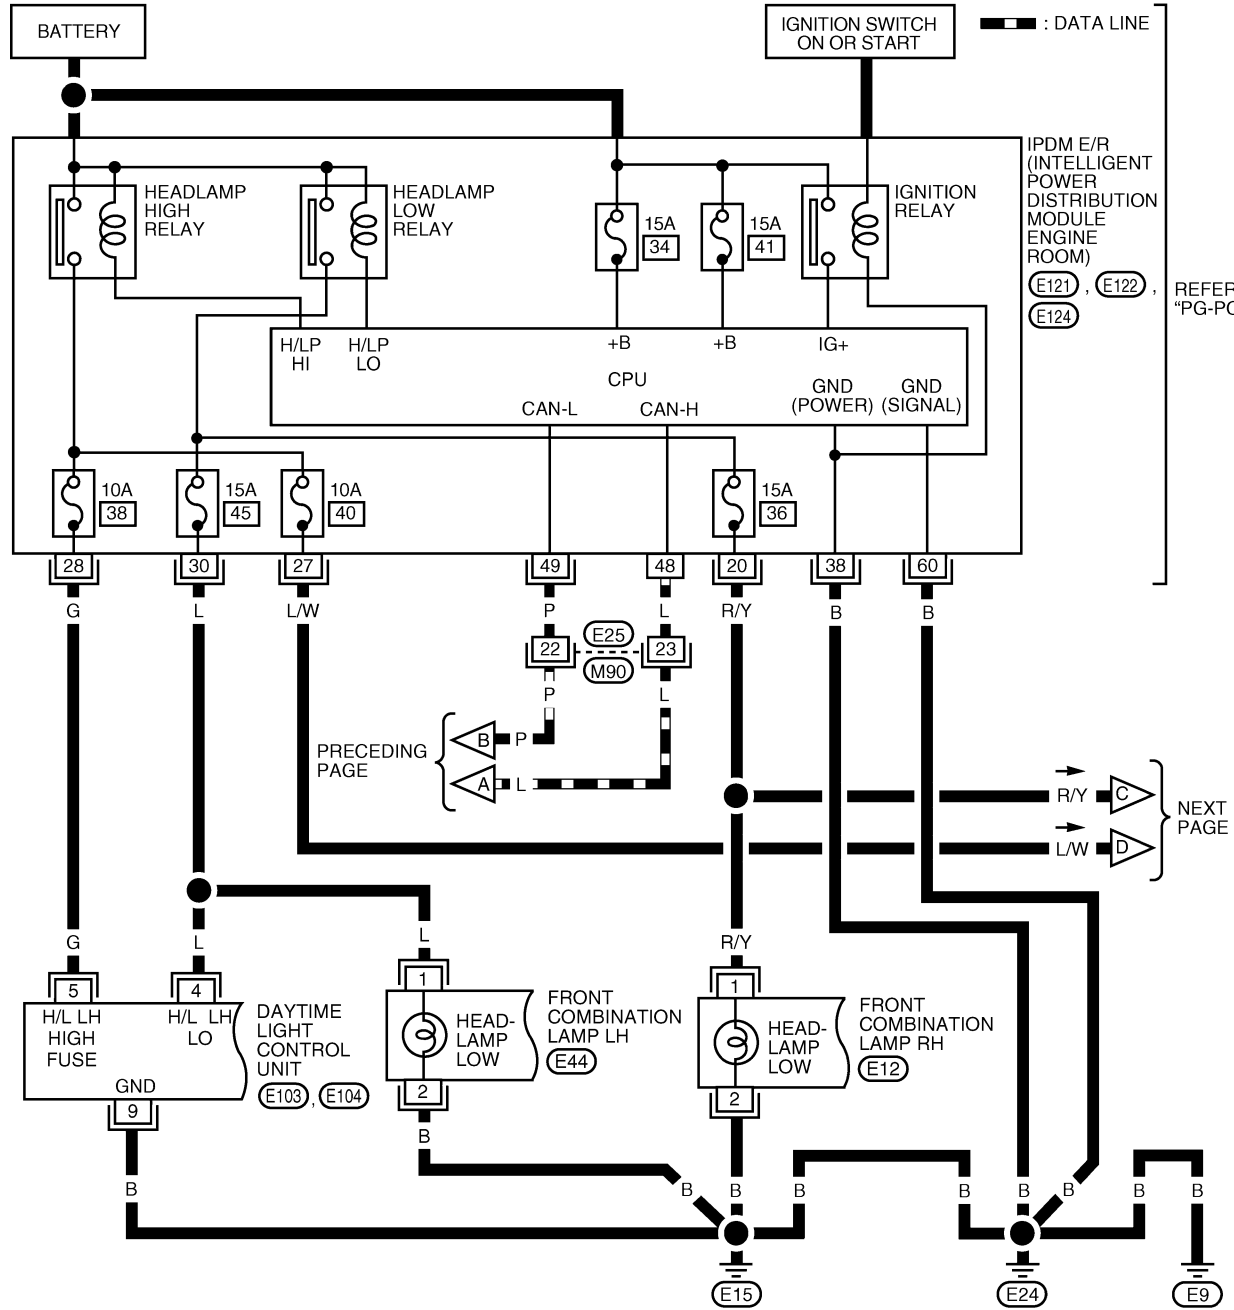

WKWA4686E

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-03

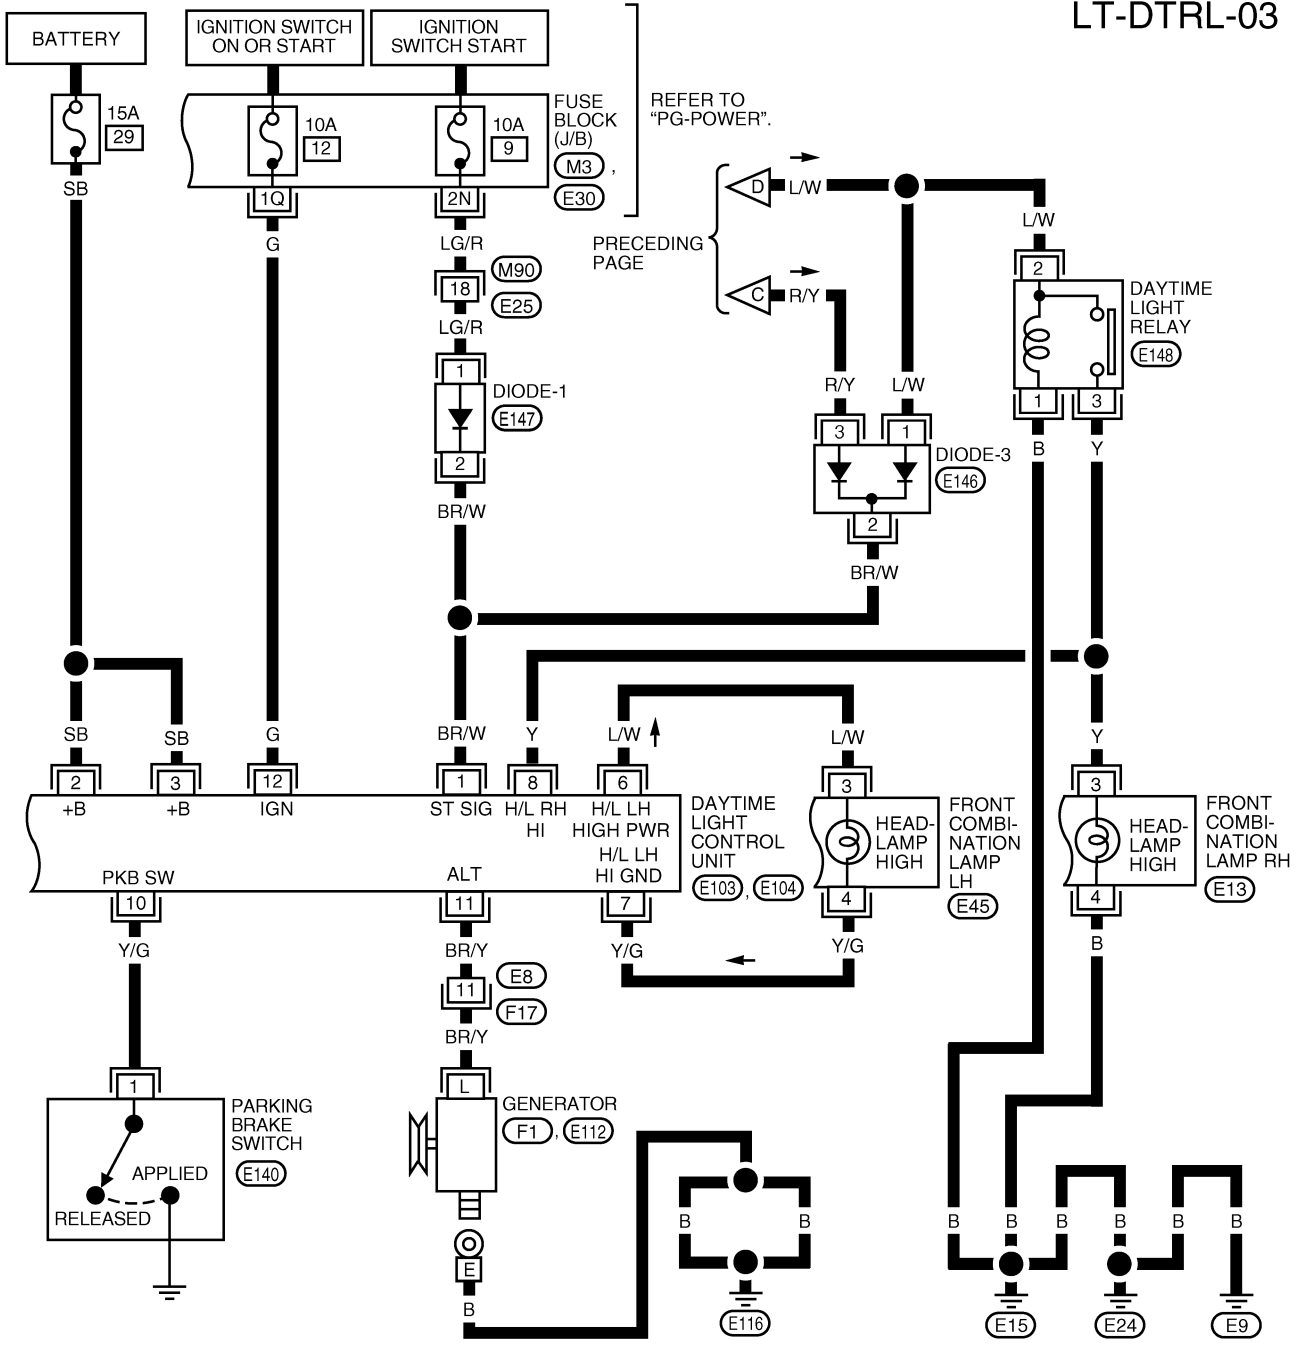


WKWA4687E

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

## Trouble Diagnoses

EKS00FBH

### DAYTIME LIGHT CONTROL UNIT HARNESS CONNECTOR TERMINAL LAYOUT

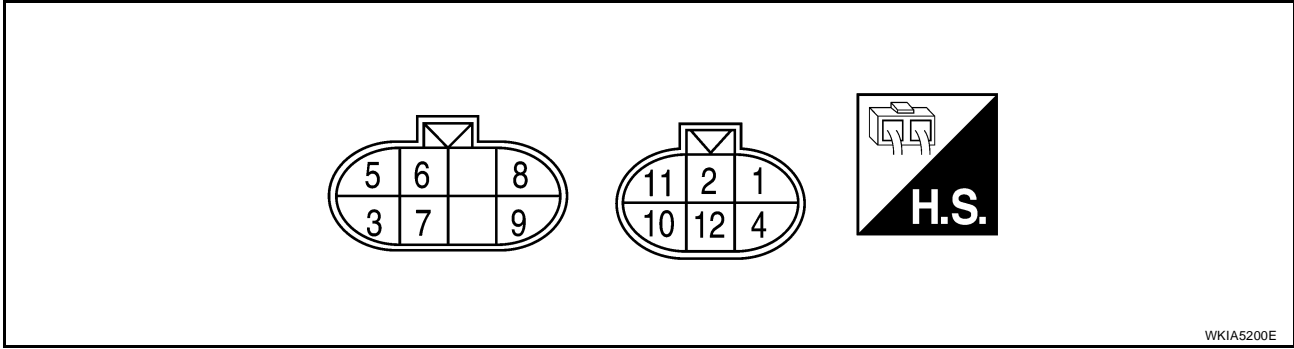

WKIA5200E

### DAYTIME LIGHT CONTROL UNIT INSPECTION TABLE

Terminal No.	Wire color	Item	Condition	Voltage (Approx.)
1	BR/W	Ignition switch start signal	Ignition switch in START position	Battery voltage
			All other conditions	0V
2	SB	Battery	Ignition switch in all positions	Battery voltage
3	SB	Battery	Ignition switch in all positions	Battery voltage
4	L	Lighting switch headlamp LH low beam output	Lighting switch in the headlamp ON (2ND) position and low beam (B) position	Battery voltage
			All other conditions	0V
5	G	Lighting switch headlamp LH high beam output	Lighting switch in the flash-to-pass (C) position or headlamp ON (2ND) position and high beam (A) position	Battery voltage
			All other conditions	0V
6	L/W	Headlamp LH high beam	Lighting switch in the flash-to-pass (C) position or headlamp ON (2ND) position and high beam (A) position	Battery voltage
			With parking brake released, engine running and lighting switch in OFF or parking and tail lamp ON (1ST) positions <b>CAUTION:</b> <b>Block wheels and ensure selector lever is in P or N position.</b>	Battery voltage
			All other conditions	0V
7	Y/G	Headlamp LH (high) control	Lighting switch in the flash-to-pass (C) position or headlamp ON (2ND) position and high beam (A) position and high beam position	0V
			With parking brake released, engine running and lighting switch in OFF or parking and tail lamp ON (1ST) positions <b>CAUTION:</b> <b>Block wheels and ensure selector lever is in P or N position.</b>	Battery voltage
			All other conditions	0V

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

8	Y	Lighting switch headlamp RH high beam output	Lighting switch in the flash-to-pass (C) position or headlamp ON (2ND) position and high beam (A) position	Battery voltage
			With parking brake released, engine running and lighting switch in OFF or parking and tail lamp ON (1ST) positions <b>CAUTION:</b> <b>Block wheels and ensure selector lever is in P or N position.</b>	6V
			All other conditions	0V
9	B	Ground	—	—
10	Y/G	Parking brake switch	Parking brake released	Battery voltage
			Parking brake set	0V
11	BR/Y	Generator (L terminal)	When engine is running	Battery voltage
			All other conditions	0V
12	G	Ignition switch on signal	Ignition switch OFF, ACC positions	0V
			Ignition switch ON, START positions	Battery voltage

## Aiming Adjustment

EKS00FBI

Refer to [LT-24, "Aiming Adjustment"](#) .

## Bulb Replacement

EKS00FBJ

Refer to [LT-25, "Bulb Replacement"](#) .

## Removal and Installation FRONT COMBINATION LAMP


EKS00FBK

Refer to [LT-26, "Removal and Installation"](#) .

### DAYTIME LIGHT CONTROL UNIT

#### Removal

1. Remove the daytime light control unit bolt.
2. Disconnect connectors.
3. Remove daytime light control unit.

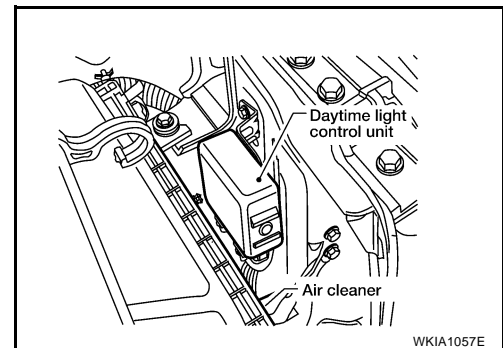

#### Installation

Installation is in the reverse order of removal.

### DAYTIME LIGHT RELAY

#### Removal


#### NOTE:

The daytime light relay is taped to the main wiring harness near the lower dash side finisher RH.

1. Remove the glove box assembly. Refer to [IP-14, "Glove Box"](#) .

## HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

- Carefully remove the tape holding the daytime light relay to the main harness.
- Disconnect the connector.
- Remove daytime light relay.

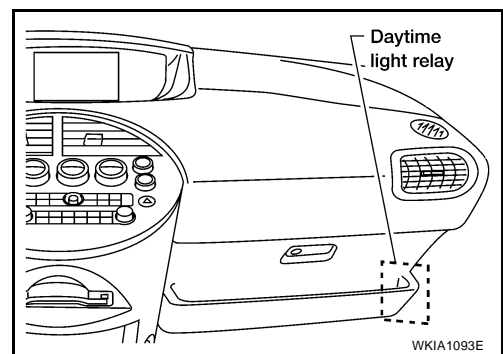

### INSTALLATION

Installation is in the reverse order of removal.

### Disassembly and Assembly FRONT COMBINATION LAMP

Refer to [LT-27, "Disassembly and Assembly"](#).

EKS00FBL

A  
B  
C  
D

E

F

G

H

I

J

LT

L

M


# AUTO LIGHT SYSTEM

## AUTO LIGHT SYSTEM

PF2:28491

### Component Parts and Harness Connector Location

EKS00FBO

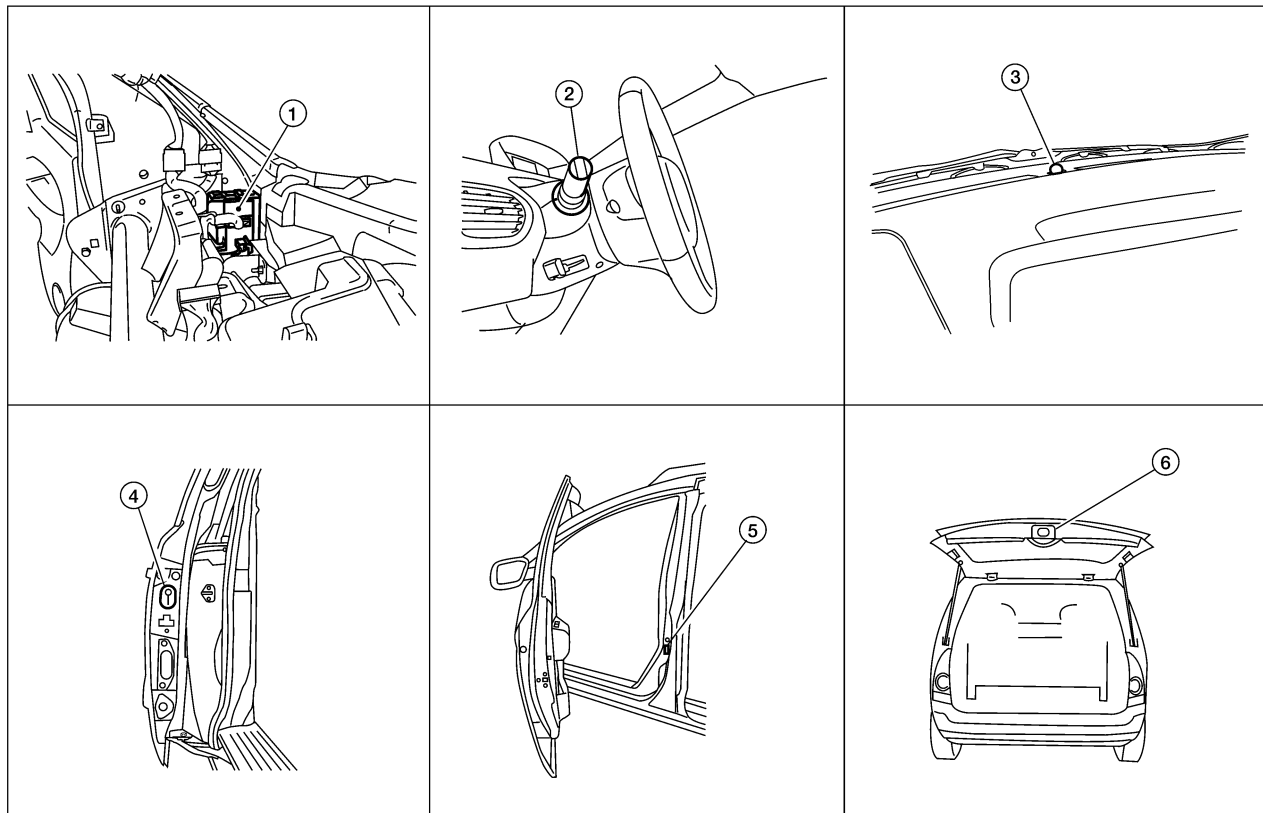

WKIA5261E

- |   |                                     |  |
|---|-------------------------------------|--|
| 1. BCM M18, M19, M20 (view with instrument panel removed) | 2. Combination switch M28           | 3. Optical sensor M16                      |
| 4. Sliding door switch LH B46, RH B135                    | 5. Front door switch LH B8, RH B108 | 6. Back door latch (door ajar switch) D511 |

## System Description

EKS00FBP

Automatically turns on/off the parking lamps and the headlamps in accordance with ambient light. Timing for when the lamps turn on/off can be selected using eight modes. Mode selections are accessed through the vehicle electronic settings menu of the color display (refer to owners manual) or with CONSULT-II.

### OUTLINE

The auto light control system uses an optical sensor that detects outside brightness. When the lighting switch is in "AUTO" position, it automatically turns on/off the parking lamps and the headlamps in accordance with the ambient light. Sensitivity can be adjusted using four modes. For the details of the setting, refer to [LT-44, "WORK SUPPORT"](#).

Optical sensor ground is supplied

- to optical sensor terminal 3
- through BCM (body control module) terminal 18.

When ignition switch is turned to "ON" position and when outside brightness is darker than prescribed level, input is supplied

- to BCM terminal 58
- from optical sensor terminal 4.

The headlamps will then illuminate. For a description of headlamp operation, refer to [LT-5, "System Description"](#).

### COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

# AUTO LIGHT SYSTEM

## EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the AUTO position, the ignition switch is turned from ON or ACC to OFF, and one of the front doors is opened, the battery saver control feature is activated. Under this condition, the headlamps remain illuminated for 5 minutes, then the headlamp are turned off. Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

## DELAY TIMER FUNCTION

When the ignition switch is ON and auto light switch is ON, the BCM turns on/off the headlamps. In delay timer function, ignition is OFF, auto light sensor power source is OFF and the headlamps are not turned on/off by the BCM. On condition that:

- when the state of ignition switch ON or ACC is ON and output judgment by auto light function is headlamp ON changes to ignition switch and ACC are OFF and any door switch is ON, output judgment by BCM should be headlamp ON for 5 minutes by timer. After time out, output judgment by BCM should be headlamp OFF.
- when the state of any door switch is turned to ON from OFF while 45 second or 5 minute timer is counting, timer stops, and restarts counting for 5 minutes, then BCM judges output as headlamp ON. After time out, BCM judges output as headlamp OFF.
- when the state of front door switch LH, front door switch RH, rear door switch LH, rear door switch RH or back door latch (door ajar switch) is ON turns to all door switches are OFF while 45 second or 5 minute timer is counting, timer stops, and restarts counting for 45 seconds, then BCM judges output as headlamp ON. After timer out, BCM judges output as headlamp OFF.
- when the state is ignition switch ON or ACC is ON or auto light switch OFF while timer is counting, timer stops counting and BCM turns on/off lamps according to headlamp function, front fog lamp function, auto light function and headlamp battery save function.

Delay timer control mode can be changed by the function setting of CONSULT-II or with the display (with color display).

## CAN Communication System Description

EKS00FBQ

Refer to [LAN-4, "SYSTEM DESCRIPTION"](#).

## Major Components and Functions


EKS00FBR

Components	Functions
BCM	<ul style="list-style-type: none"><li>• Turns on/off circuits of tail light and headlamp according to signals from light sensor, lighting switch (AUTO), front door switch LH, front door switch RH, sliding door switch LH and RH, back door latch (door ajar switch), and ignition switch (ON, OFF).</li></ul>
Optical sensor	<ul style="list-style-type: none"><li>• Converts ambient light (lux) to voltage and sends it to BCM. (Detects lightness of 50 to 1,300 lux)</li></ul>

# AUTO LIGHT SYSTEM

## Schematic

EKS00FBS

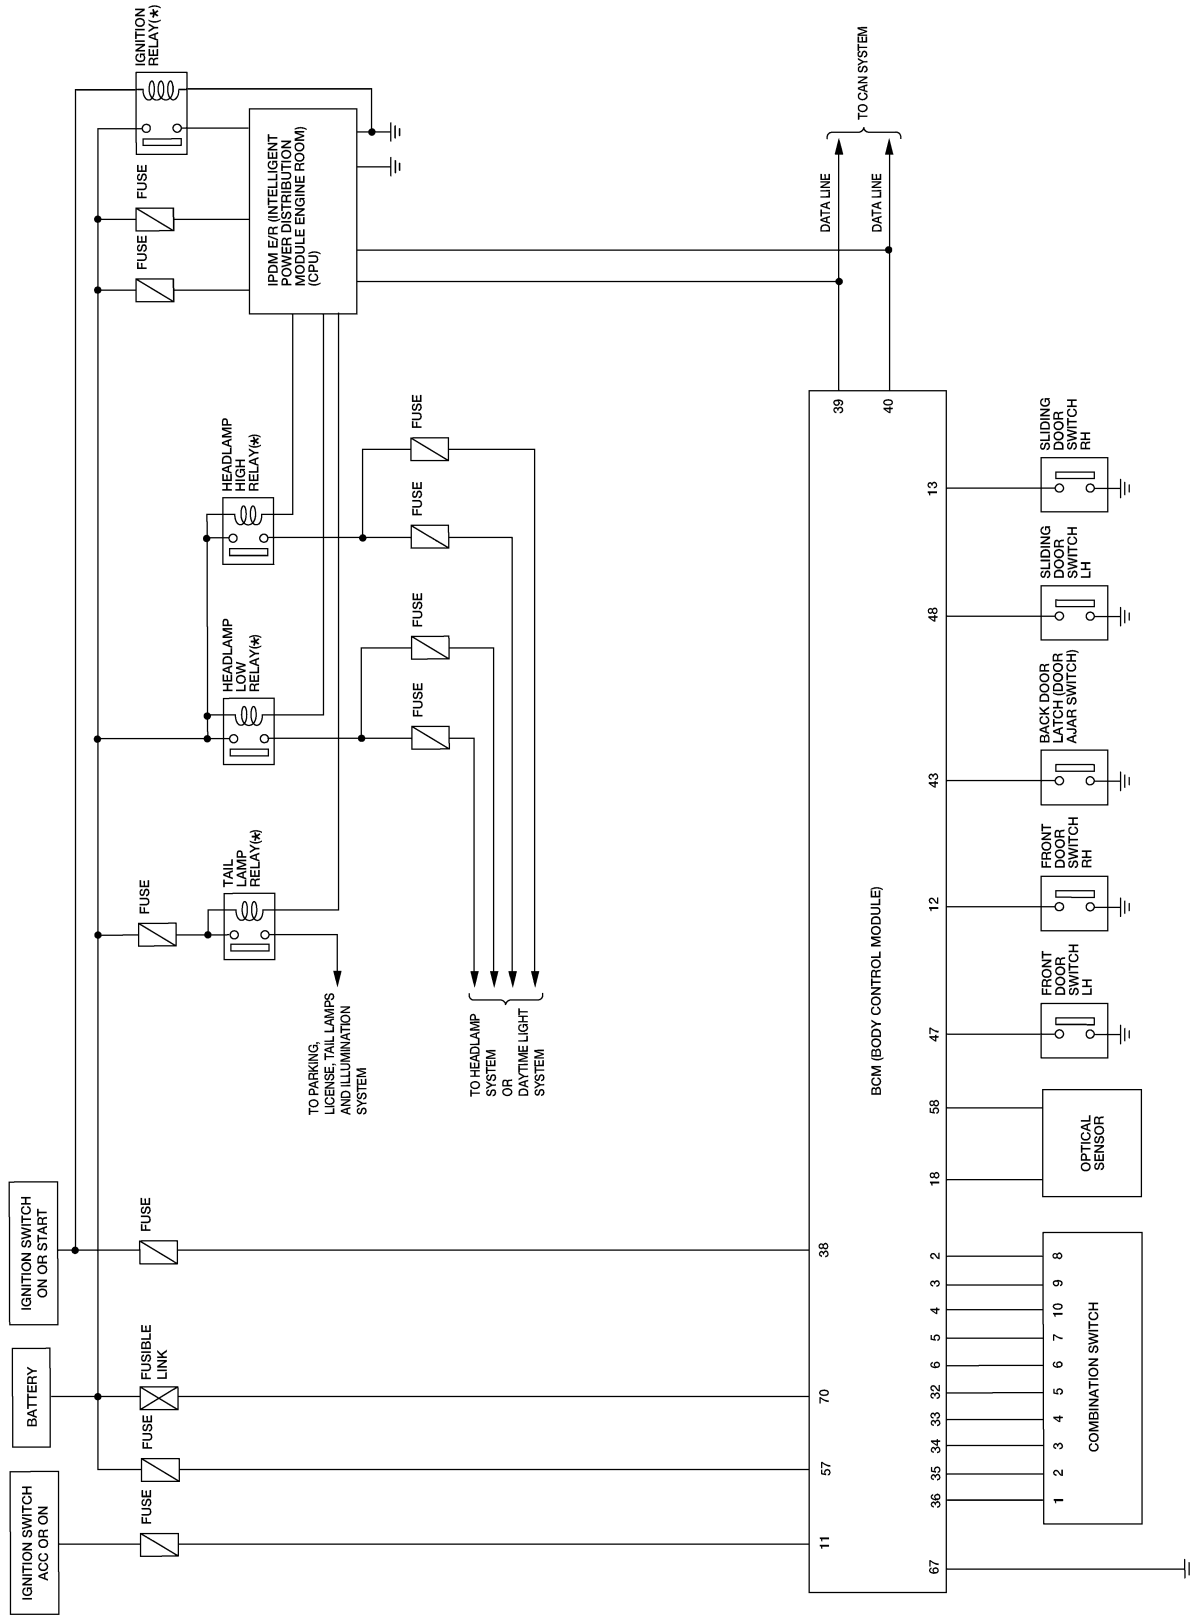

\*: THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM).

WKWA4688E





# AUTO LIGHT SYSTEM

## Wiring Diagram — AUTO/L —

EKS00FBT

LT-AUTO/L-01

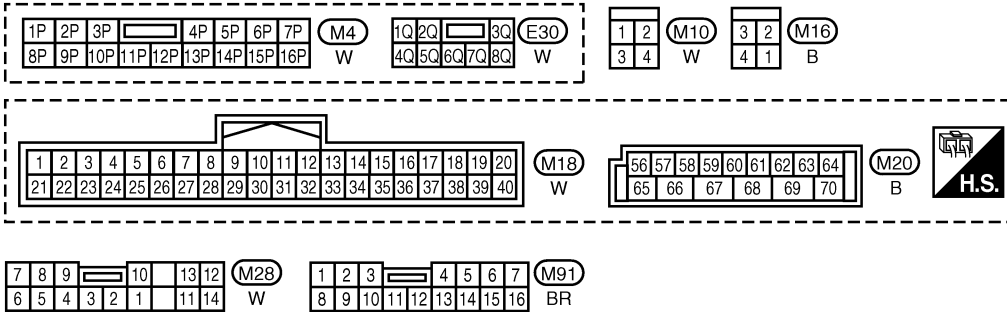
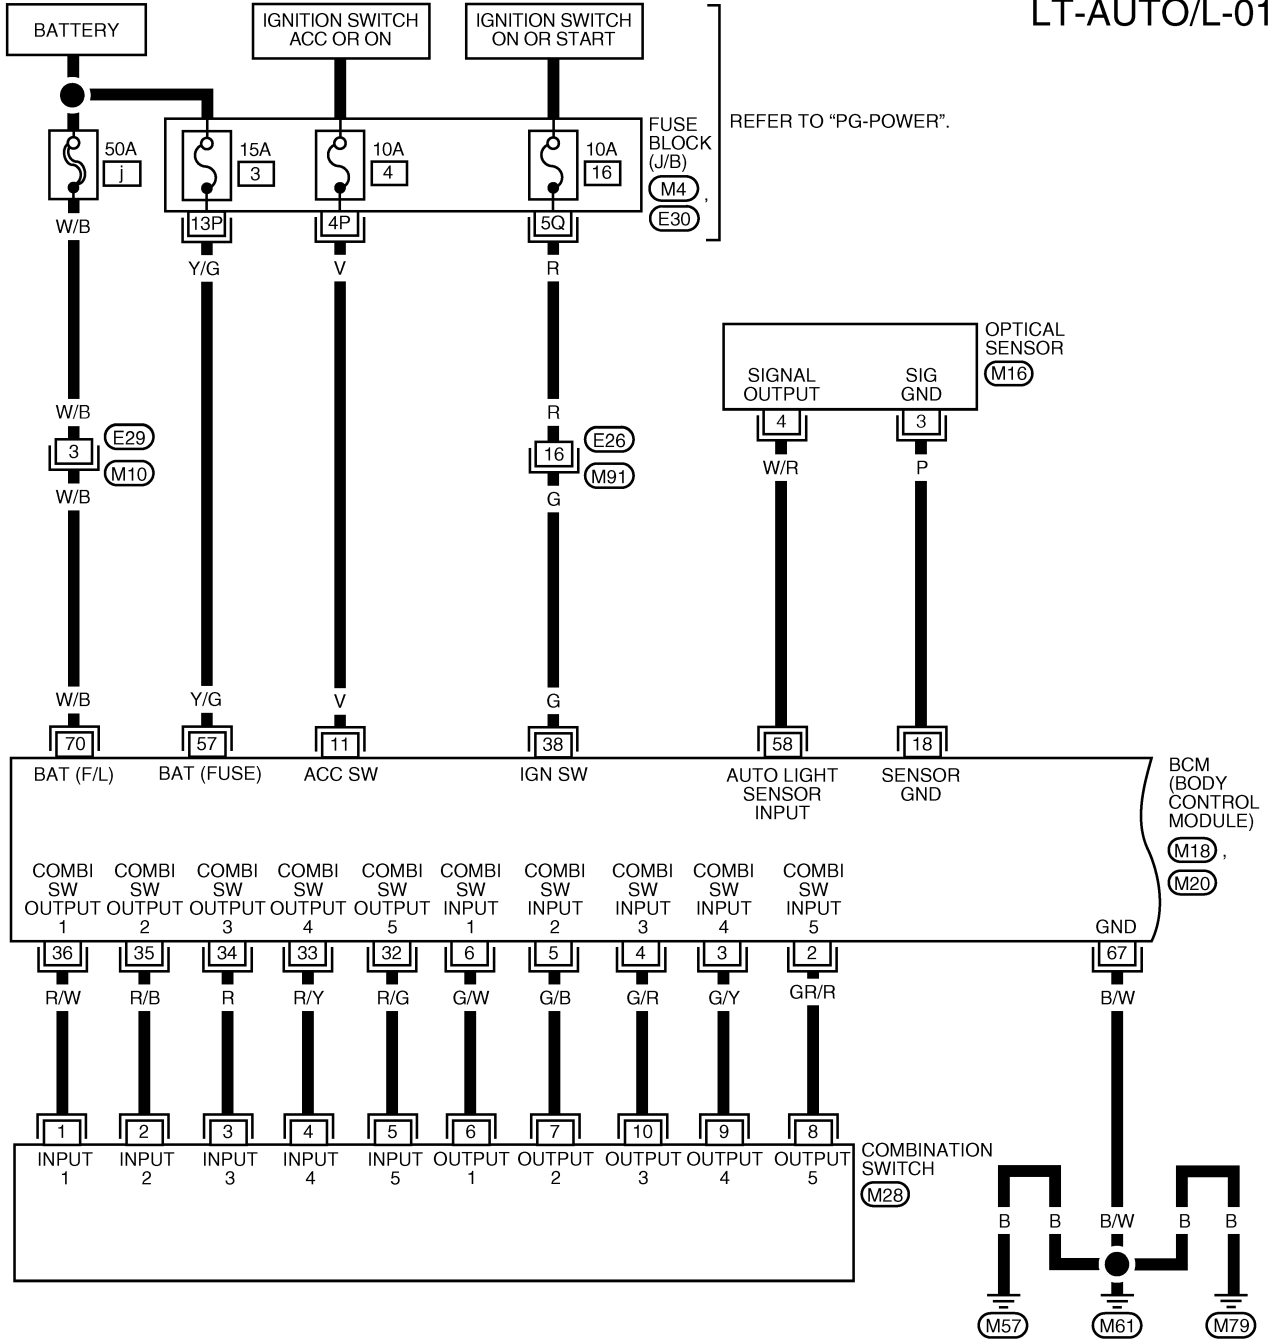


WKWA4689E

# AUTO LIGHT SYSTEM

LT-AUTO/L-02




— : DATA LINE

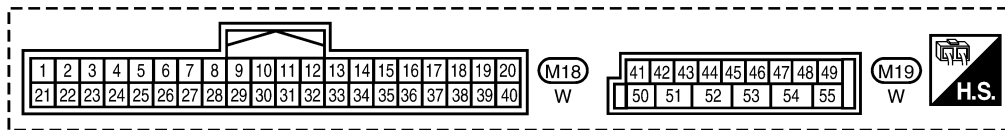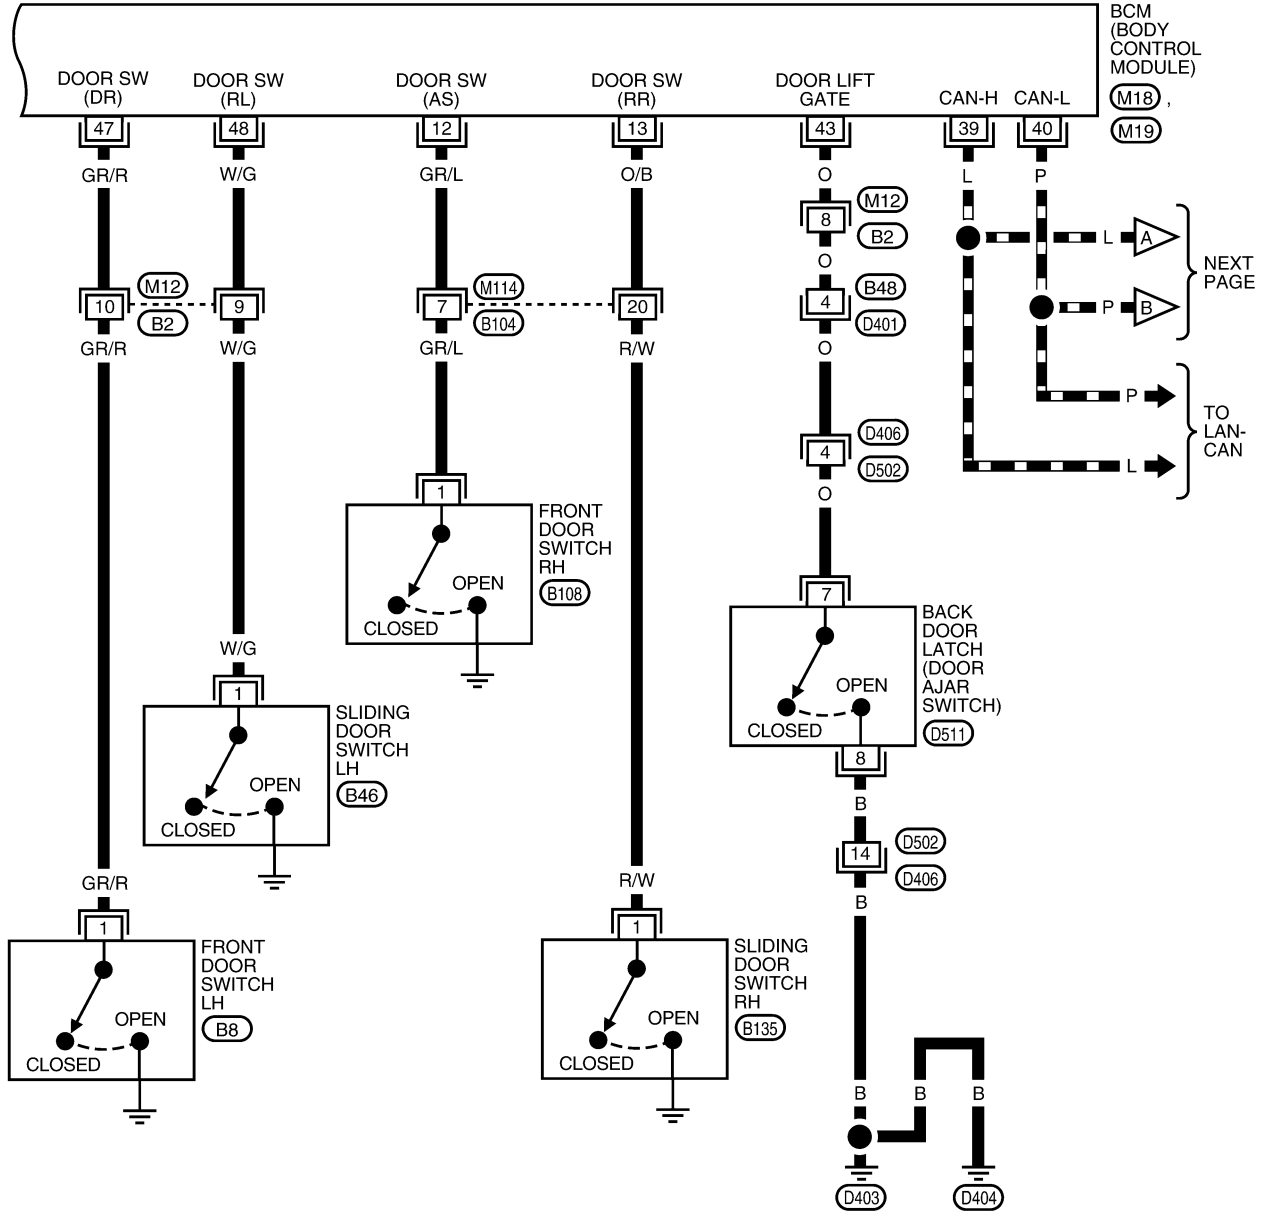

WKWA4690E

# AUTO LIGHT SYSTEM

LT-AUTO/L-03

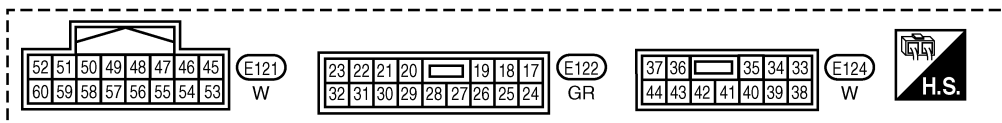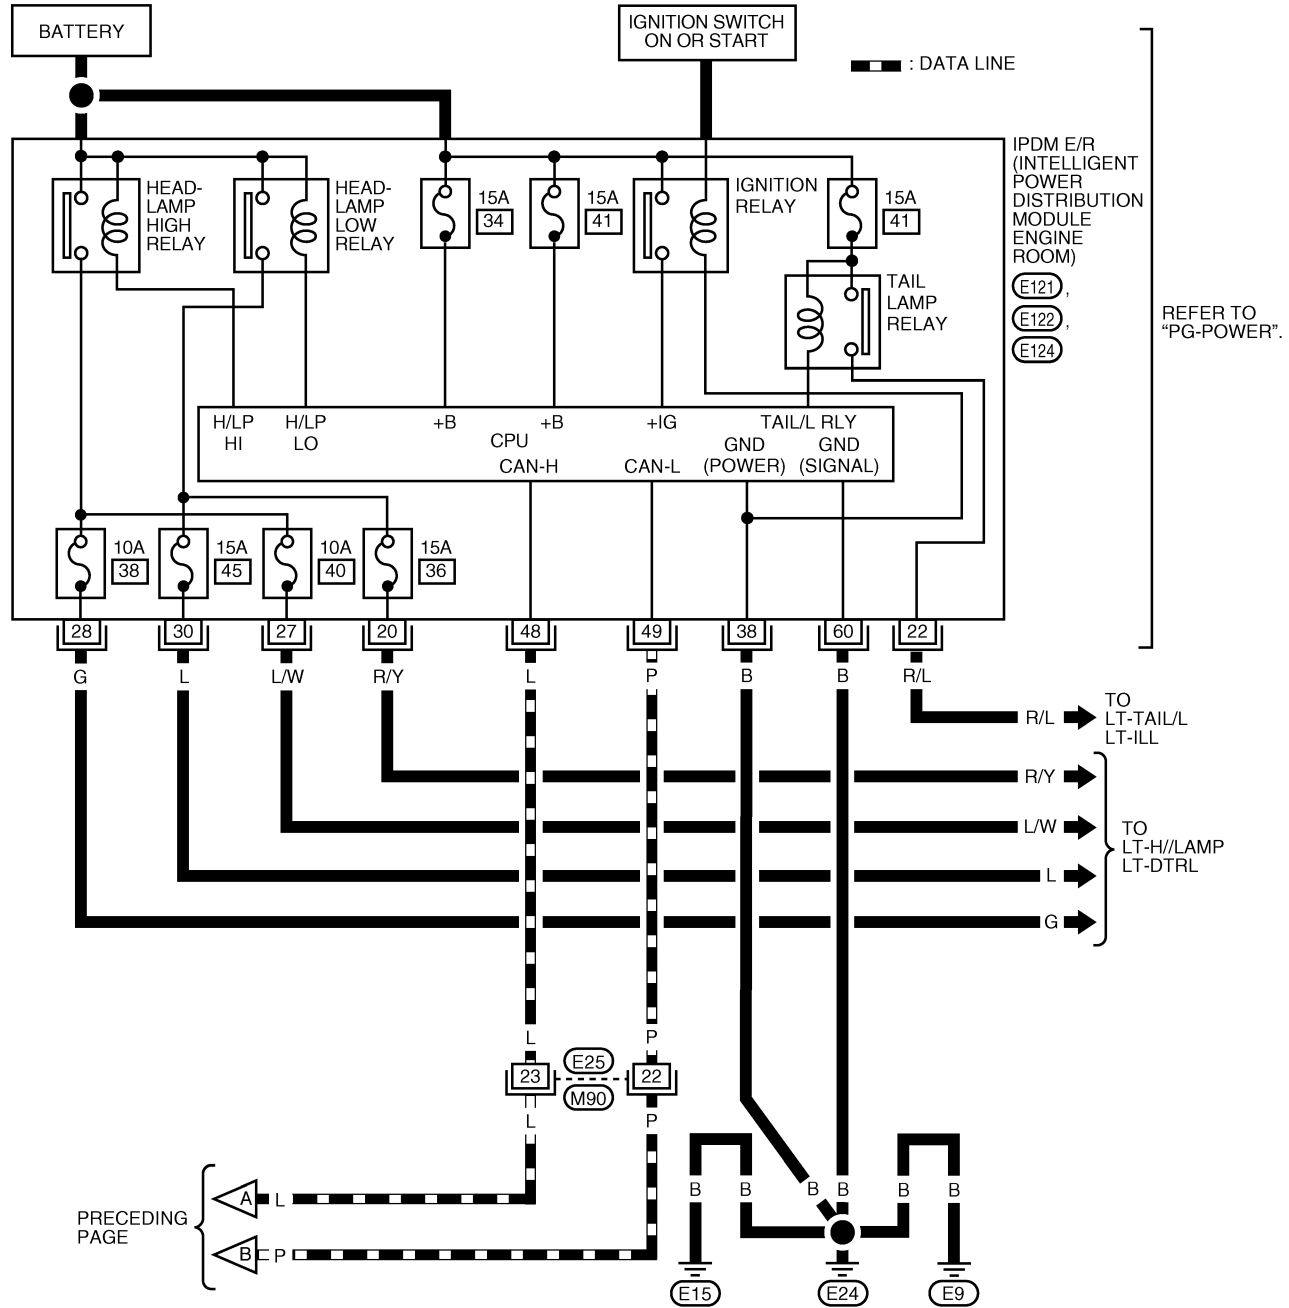

WKWA4691E

# AUTO LIGHT SYSTEM

## Terminals and Reference Values for BCM

EKS00FBU

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

## Terminals and Reference Values for IPDM E/R

EKS00FBV

Refer to [PG-27, "Terminals and Reference Values for IPDM E/R"](#) .

## How to Proceed With Trouble Diagnosis

EKS00FBW

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-38, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-44, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction. Refer to [LT-47, "Trouble Diagnosis Chart by Symptom"](#) .
5. Does the auto light system operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

## Preliminary Check

EKS00FBX

### SETTING CHANGE FUNCTIONS

- Sensitivity of auto light system can be adjusted using CONSULT-II. Refer to [LT-44, "WORK SUPPORT"](#) .

### CHECK BCM CONFIGURATION

#### 1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "AUTO LIGHT" is set to "WITH". Refer to [BCS-19, "READ CONFIGURATION PROCEDURE"](#) .

OK or NG

- OK >> Continue preliminary check. Refer to [LT-44, "CHECK POWER SUPPLY AND GROUND CIRCUIT"](#) .
- NG >> Change BCM configuration for "AUTO LIGHT" to "WITH". Refer to [BCS-21, "WRITE CONFIGURATION PROCEDURE"](#) .

### CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-15, "BCM Power Supply and Ground Circuit Check"](#) .

Refer to [PG-31, "IPDM E/R Power/Ground Circuit Inspection"](#) .

## CONSULT-II Function (BCM)

EKS00FBY

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

## CONSULT-II START PROCEDURE

Refer to [GI-37, "CONSULT-II Start Procedure"](#) .

## WORK SUPPORT

### Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.

# AUTO LIGHT SYSTEM

3. Touch "CUSTOM A/LIGHT SETTING" or "ILL DELAY SET" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "MODE 1-4" of setting to be changed (CUSTOM A/LIGHT SETTING). Touch "MODE1-8" of setting to be changed (ILL DELAY SET).
6. Touch "CHANGE SETT".
7. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
8. Touch "END".

## Work Support Setting Item

- Sensitivity of auto light can be selected and set from four modes.

Work item	Description
CUSTOM A/LIGHT SETTING	Auto light sensitivity can be changed in this mode. Sensitivity can be adjusted in four modes. ● MODE 1 (Normal)/ MODE 2 (Sensitive)/MODE 3 (Desensitized)/MODE4 (Insensitive)
ILL DELAY SET	Auto light delay off timer period can be changed in this mode. Selects auto light delay off timer period among eight modes. ● MODE 1 (45 sec.)/MODE 2 (OFF)/MODE 3 (30 sec.)/MODE 4 (60 sec.)/MODE 5 (90 sec.)/MODE 6 (120 sec.)/MODE 7 (150 sec.)/MODE 8 (180 sec.)

## DATA MONITOR

### Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

### Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)

# AUTO LIGHT SYSTEM

Monitor item	Contents
DOOR SW-AS      "ON/OFF"	Displays status of the front door RH as judged from the front door switch RH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RR      "ON/OFF"	Displays status of the sliding door as judged from the sliding door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RL      "ON/OFF"	Displays status of the sliding door as judged from the sliding door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW    "ON/OFF"	Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R    "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L    "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW   "ON/OFF"	Displays status of cargo lamp.
OPTICAL SENSOR   [0 - 5V]	Displays "ambient light (close to 5V when dark/close to 0V when light)" judged from optical sensor signal.

## ACTIVE TEST

### Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

### Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay (HI, LO) to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CARGO LAMP	Allows cargo lamp to operate by switching ON-OFF.
CORNERING LAMP	Allows cornering lamp relay (RH, LH) to operate by switching ON-OFF.

## CONSULT-II Function (IPDM E/R)

EKS00FBZ

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

IPDM E/R diagnostic Mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

## CONSULT-II START PROCEDURE

Refer to [GI-37, "CONSULT-II Start Procedure"](#) .

### DATA MONITOR

#### Operation Procedure

1. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Touch "ALL SIGNALS", "MAIN SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	All items will be monitored.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Select any item for monitoring.

3. Touch "START".

# AUTO LIGHT SYSTEM

4. Touch the required monitoring item on "SELECTION FROM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
5. Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

## All Signals, Main Signals, Selection From Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Parking, license plate and tail lamps request	TAIL&CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Cornering lamp	CRNRNG LMP REQ	ON/OFF	×	-	×	Signal status input from BCM
Front fog lamps request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

### NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

## ACTIVE TEST

### Operation Procedure

1. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Touch item to be tested, and check operation.
3. Touch "START".
4. Touch "STOP" while testing to stop the operation.

Test item	CONSULT-II screen display	Description
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI, LO) at your option (Headlamp high beam repeats ON-OFF every 1 second).
Front fog lamp relay output		Allows fog lamp relay to operate by switching operation ON-OFF at your option.
Cornering lamp relay (RH, LH) output	CORNERING LAMP	Allows cornering lamp relay (RH, LH) to operate by switching operation ON-OFF at your option.

## Trouble Diagnosis Chart by Symptom

EKS00FC0

Trouble phenomenon	Malfunction system and reference
<ul style="list-style-type: none"> <li>● Parking lamps and headlamps will not illuminate when outside of the vehicle becomes dark. (Lighting switch 1st position and 2nd position operate normally.)</li> <li>● Parking lamps and headlamp will not go out when outside of the vehicle becomes light. (Lighting switch 1st position and 2nd position operate normally.)</li> <li>● Headlamps go out when outside of the vehicle becomes light, but parking lamps stay on.</li> </ul>	<ul style="list-style-type: none"> <li>● Refer to <a href="#">LT-44, "WORK SUPPORT"</a> .</li> <li>● Refer to <a href="#">LT-48, "Lighting Switch Inspection"</a> .</li> <li>● Refer to <a href="#">LT-48, "Optical Sensor System Inspection"</a> .</li> </ul> <p>If above systems are normal, replace BCM. Refer to <a href="#">BCS-25, "Removal and Installation of BCM"</a> .</p>
<p>Parking lamps illuminate when outside of the vehicle becomes dark, but headlamps stay off. (Lighting switch 1st position and 2nd position operate normally.)</p>	<ul style="list-style-type: none"> <li>● Refer to <a href="#">LT-44, "WORK SUPPORT"</a> .</li> <li>● Refer to <a href="#">LT-48, "Optical Sensor System Inspection"</a> .</li> </ul> <p>If above systems are normal, replace BCM. Refer to <a href="#">BCS-25, "Removal and Installation of BCM"</a> .</p>

# AUTO LIGHT SYSTEM

Trouble phenomenon	Malfunction system and reference
Auto light adjustment system will not operate. (Lighting switch AUTO, 1st position and 2nd position operate normally.)	<ul style="list-style-type: none"> <li>Refer to <a href="#">LT-48, "Optical Sensor System Inspection"</a> .</li> </ul> If above systems is normal, replace BCM. Refer to <a href="#">BCS-25, "Removal and Installation of BCM"</a> .
Auto light adjustment system will not operate.	<ul style="list-style-type: none"> <li>CAN communication line to BCM inspection. Refer to <a href="#">BCS-18, "CAN Communication Inspection Using CONSULT-II (Self-Diagnosis)"</a> .</li> </ul>
Shut off delay feature will not operate.	<ul style="list-style-type: none"> <li>CAN communication line inspection between BCM and combination meter. Refer to <a href="#">BCS-18, "CAN Communication Inspection Using CONSULT-II (Self-Diagnosis)"</a> .</li> <li>Refer to <a href="#">BL-39, "Door Switch Check (Without Automatic Back Door System)"</a> .</li> </ul> If above systems is normal, replace BCM. Refer to <a href="#">BCS-25, "Removal and Installation of BCM"</a> .

## Lighting Switch Inspection

EKS00FC1

### 1. CHECK LIGHTING SWITCH INPUT SIGNAL

Ⓜ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "AUTO LIGHT SW" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in AUTO position : AUTO LIGHT SW ON**

DATA MONITOR	
MONITOR	
AUTO LIGHT SW	ON

SKIA4196E

ⓧ Without CONSULT-II

Refer to [LT-91, "Combination Switch Inspection"](#) .

OK or NG

OK >> Inspection End.

NG >> Check lighting switch. Refer to [LT-91, "Combination Switch Inspection"](#) .

## Optical Sensor System Inspection

EKS00FC2

### 1. CHECK OPTICAL SENSOR INPUT SIGNAL

Ⓜ With CONSULT-II

Select "BCM" on CONSULT-II. With "OPTICAL SENSOR" data monitor, check difference in the voltage when the optical sensor is illuminated and not illuminated.

**Illuminated**  
**OPTICAL SENSOR : 3.1V or more**  
**Not illuminated**  
**OPTICAL SENSOR : 0.6V or less**

DATA MONITOR	
MONITOR	
OPTICAL SENSOR	XXXV

WKIA0486E

**CAUTION:**

**Optical sensor must be completely subjected to work lamp light. If the optical sensor is insufficiently illuminated, the measured value may not satisfy the standard.**

ⓧ Without CONSULT-II

GO TO 2.

OK or NG

OK >> Inspection End.

NG >> GO TO 2.



# AUTO LIGHT SYSTEM


## 2. CHECK OPTICAL SENSOR SIGNAL GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and optical sensor connector.
3. Check continuity (open circuit) between BCM harness connector M18 terminal 18 and optical sensor harness connector M16 terminal 3.

**18 - 3** : Continuity should exist.

4. Check continuity (short circuit) between BCM harness connector M18 terminal 18 and ground.

**18 - Ground** : Continuity should not exist.

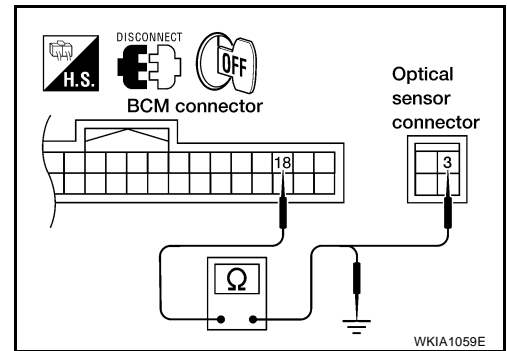

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.


## 3. CHECK OPTICAL SENSOR SIGNAL CIRCUIT

1. Check continuity (open circuit) between BCM connector M20 (A) terminal 58 and optical sensor connector M16 (B) terminal 4.

**58 - 4** : Continuity should exist.

2. Check continuity (short circuit) between BCM harness connector M20 terminal 58 and ground.

**58 - Ground** : Continuity should not exist.

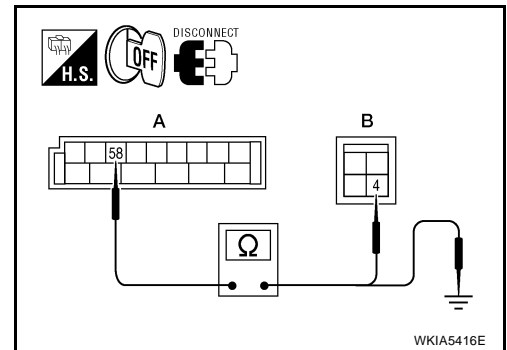

OK or NG

OK >> Replace optical sensor. Refer to [LT-50, "Removal and Installation"](#) . Recheck sensor output with CONSULT-II.  
If NG, replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#) .

NG >> Repair harness or connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

LT


# AUTO LIGHT SYSTEM

EKS00FC3

## Removal and Installation OPTICAL SENSOR

### Removal

1. Remove defrost grille. Refer to [IP-10, "Instrument Panel"](#) .
2. Disconnect the connector.
3. Turn the optical sensor counterclockwise to remove it from defroster grille.

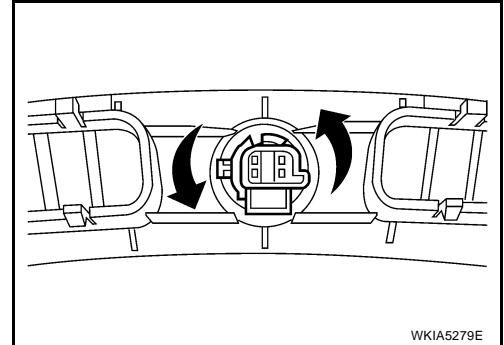

WKIA5279E

### Installation

Installation is in the reverse order of removal.


# FRONT FOG LAMP

PFP:26150

## FRONT FOG LAMP

### Component Parts and Harness Connector Location

EKS00FC4

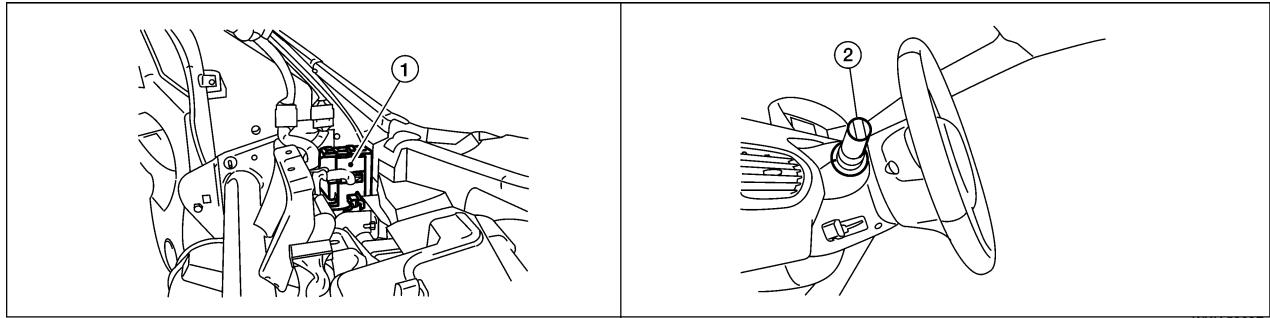

1. BCM M18, M20 (view with instrument panel removed)
2. Combination switch (lighting switch) M28

### System Description

EKS00FC5

Control of the fog lamps is dependent upon the position of the combination switch (lighting switch). The lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) for front fog lamp operation. When the lighting switch is placed in the fog lamp position, the BCM (body control module) receives input signal requesting the fog lamps to illuminate. When the headlamps are illuminated, this input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the front fog lamp relay coil. When activated, this relay directs power to the front fog lamps.

### OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- through 15A fuse (No. 43, located in the IPDM E/R)
- to front fog lamp relay, located in the IPDM E/R, and
- through 15A fuse (No. 34, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 15A fuse (No. 41, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 57.

When the ignition switch is in ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38.

When the ignition switch is in ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E9, E15 and E24.

# FRONT FOG LAMP

---

## FOG LAMP OPERATION

The fog lamp switch is built into the combination switch. The lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the fog lamp switch must be ON for fog lamp operation.

With the fog lamp switch in the ON position, the CPU of the IPDM E/R grounds the coil side of the fog lamp relay. The fog lamp relay then directs power

- through IPDM E/R terminal 37
- to front fog lamp LH terminal +, and
- through IPDM E/R terminal 36
- to front fog lamp RH terminal +.

Ground is supplied

- to front fog lamp LH and RH terminal –
- through grounds E9, E15 and E24.

With power and ground supplied, the front fog lamps illuminate.

## COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

## EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), the fog lamp switch is ON and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the fog lamps (and headlamps) remain illuminated for 5 minutes, then the fog lamps (and headlamps) are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

## CAN Communication System Description

EKS00FC6



Refer to [LAN-4, "SYSTEM DESCRIPTION"](#) .

# FRONT FOG LAMP

## Wiring Diagram — F/FOG —

EKS00FC7

LT-F/FOG-01

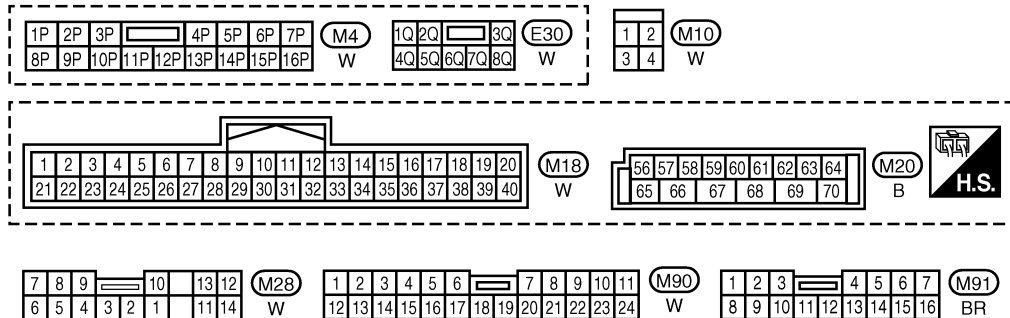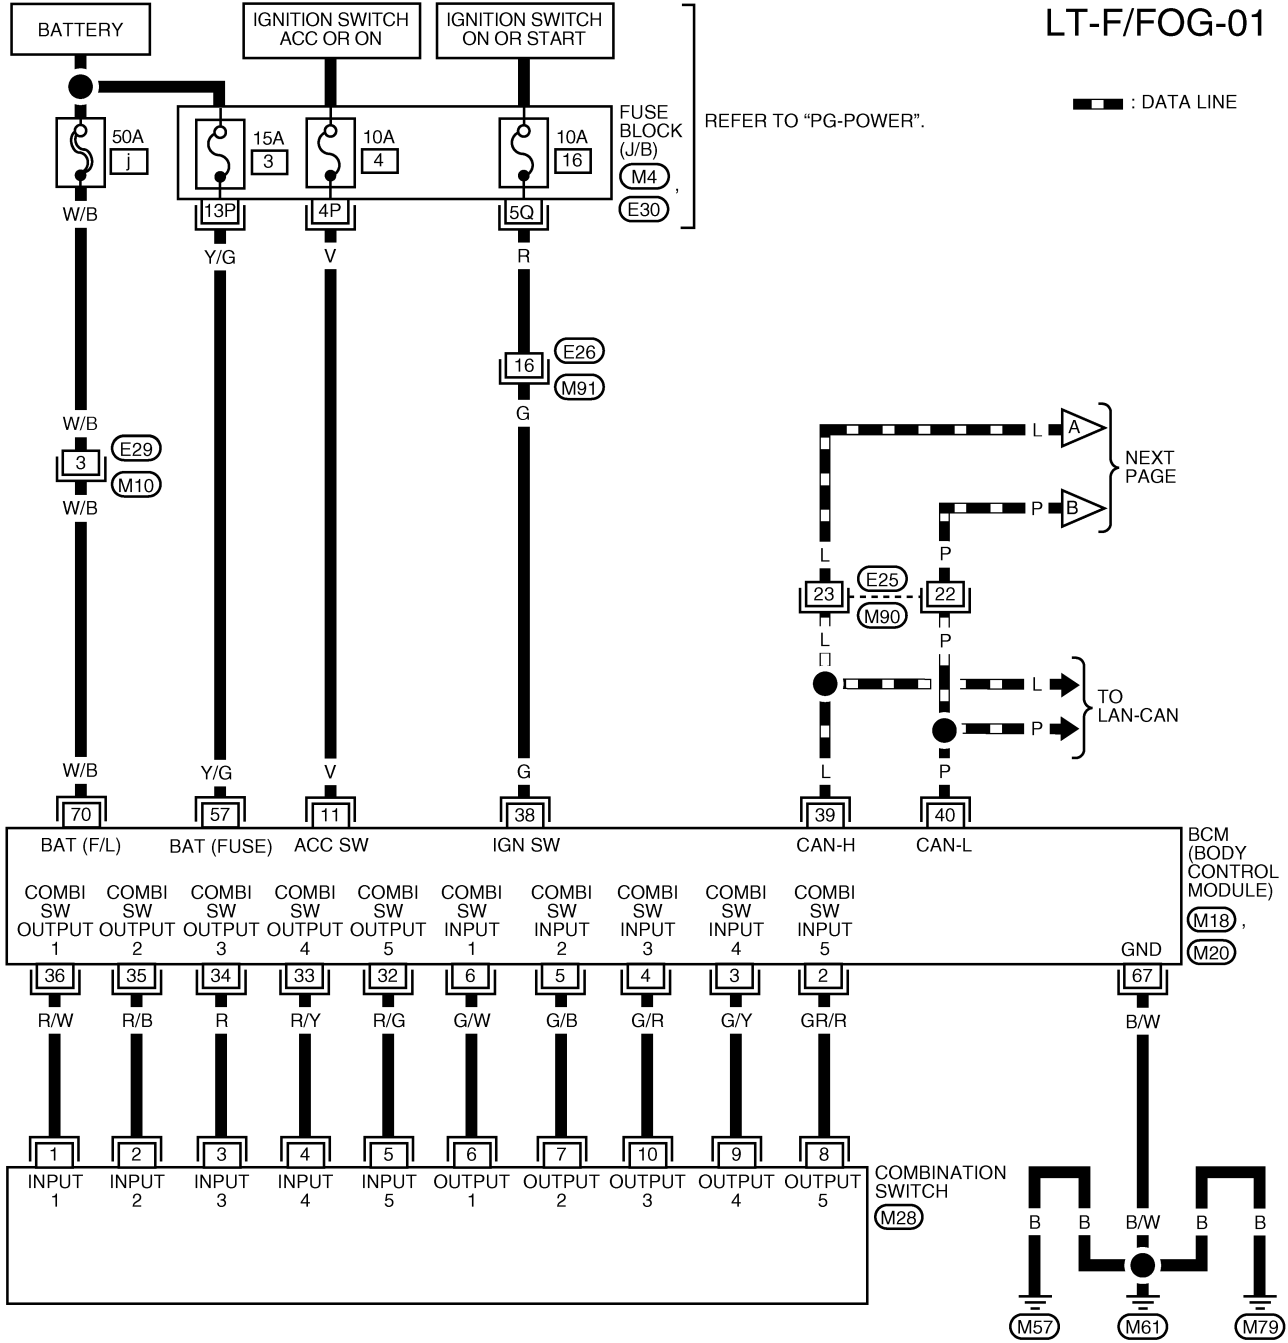


WKWA4692E

# FRONT FOG LAMP

LT-F/FOG-02


— : DATA LINE

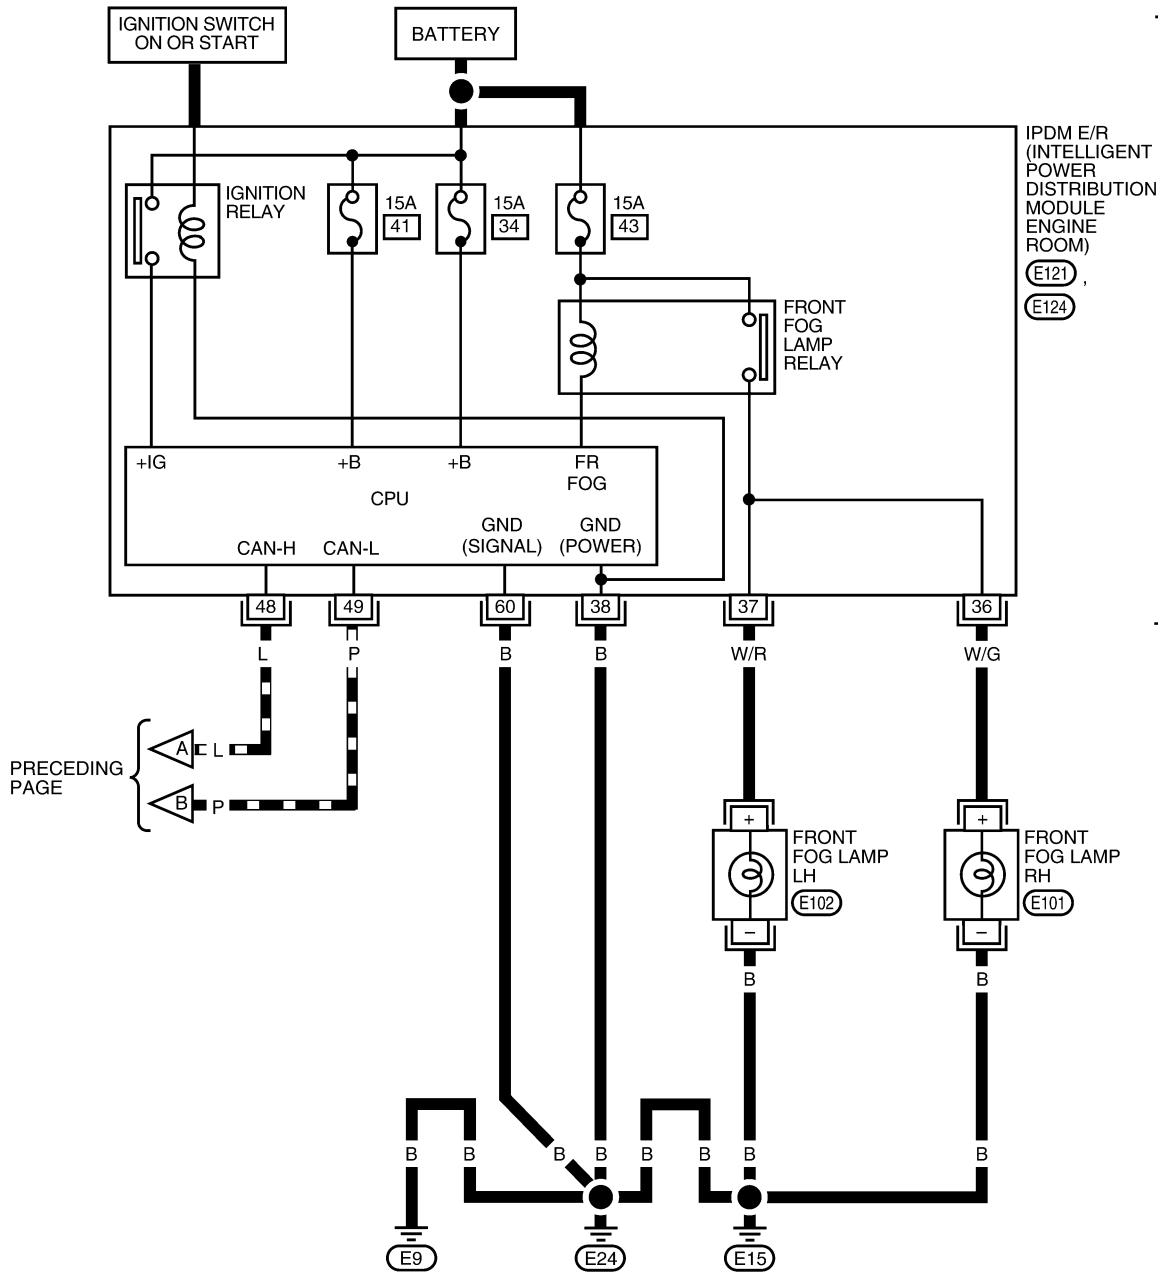

IPDM E/R  
(INTELLIGENT  
POWER  
DISTRIBUTION  
MODULE  
ENGINE  
ROOM)  
E121  
E124

REFER TO  
"PG-POWER".

PRECEDING  
PAGE

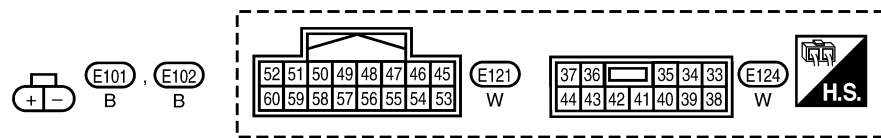

WKWA4693E

# FRONT FOG LAMP

## Terminals and Reference Values for BCM

EKS00FC8

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

## Terminals and Reference Values for IPDM E/R

EKS00FC9

Refer to [PG-27, "Terminals and Reference Values for IPDM E/R"](#) .

## How to Proceed With Trouble Diagnosis

EKS00FCA

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-51, "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-55, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the front fog lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

## Preliminary Check

EKS00FCB

### CHECK BCM CONFIGURATION

#### 1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "FR FOG LAMP" is set to "WITH". Refer to [BCS-19, "READ CONFIGURATION PROCEDURE"](#) .

OK or NG

- OK >> Continue preliminary check. Refer to [LT-55, "CHECK POWER SUPPLY AND GROUND CIRCUIT"](#) .
- NG >> Change BCM configuration for "FR FOG LAMP" to "WITH". Refer to [BCS-21, "WRITE CONFIGURATION PROCEDURE"](#) .

### CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-15, "BCM Power Supply and Ground Circuit Check"](#) .  
Refer to [PG-31, "IPDM E/R Power/Ground Circuit Inspection"](#) .

## CONSULT-II Functions

EKS00FCC

Refer to [LT-13, "CONSULT-II Function \(BCM\)"](#) in HEADLAMP (FOR USA).  
Refer to [LT-15, "CONSULT-II Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

## Front Fog Lamps Do Not Illuminate (Both Sides)

EKS00FCD

#### 1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "FR FOG SW" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in FOG position : FR FOG SW ON**

OK or NG

- OK >> GO TO 2.
- NG >> Check lighting switch. Refer to [LT-91, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
FR FOG SW	ON

SKIA5897E

# FRONT FOG LAMP


## 2. FOG LAMP ACTIVE TEST

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "FOG" on "ACTIVE TEST" screen.
4. Make sure fog lamps operate.

**Fog lamps should operate.**

OK or NG

- OK >> GO TO 3.  
 NG >> GO TO 4.

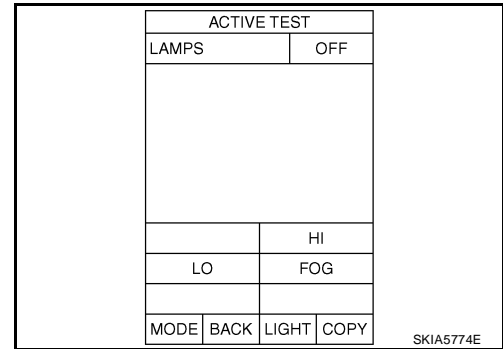


## 3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "FR FOG REQ" turns ON when lighting switch is in FOG position.

**When lighting switch is in FOG position : FR FOG REQ ON**

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-33, "Removal and Installation of IPDM E/R"](#) .  
 NG >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#) .

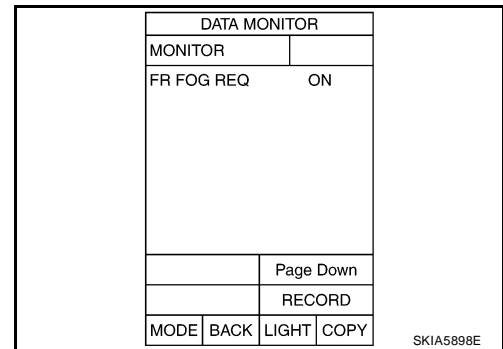


## 4. IPDM E/R INSPECTION

1. Disconnect front fog lamp LH/RH harness connector.
2. Start auto active test. Refer to [PG-23, "Auto Active Test"](#) . When front fog lamp relay is operating, check voltage between left/right front fog lamp connector terminals and ground.

Front fog lamp		(-)	Voltage (Approx.)
(+) Connector			
Terminal			
RH	E101	+	Ground
LH	E102		
			Battery voltage

OK or NG

- OK >> Check front fog lamp bulbs and replace as necessary.  
 NG >> Replace IPDM E/R. Refer to [PG-33, "Removal and Installation of IPDM E/R"](#) .

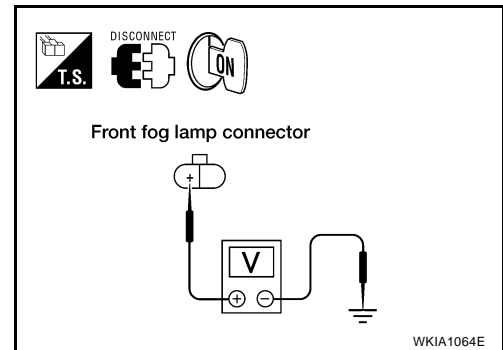

## Front Fog Lamp Does Not Illuminate (One Side)

EKS00FCE

### 1. BULB INSPECTION

Inspect bulb of lamp which does not illuminate.

OK or NG

- OK >> GO TO 2.  
 NG >> Replace fog lamp bulb. Refer to [LT-60, "Bulb Replacement"](#) .



# FRONT FOG LAMP


## 2. INSPECTION BETWEEN IPDM E/R AND FRONT FOG LAMPS

1. Disconnect IPDM E/R connector and inoperative front fog lamp connector.
2. Check continuity between harness connector terminals of IPDM E/R and inoperative front fog lamp harness connector terminal.

IPDM E/R		Front fog lamp		Continuity
Connector	Terminal	Connector	Terminal	
E124	36	RH	E101	+
	37	LH	E102	

### OK or NG

- OK >> Check ground circuit. If NG, repair harness or connector. If OK, replace IPDM E/R. Refer to [PG-33, "Removal and Installation of IPDM E/R"](#).
- NG >> Check for short circuits and open circuits in harness between IPDM E/R and inoperative front fog lamp.

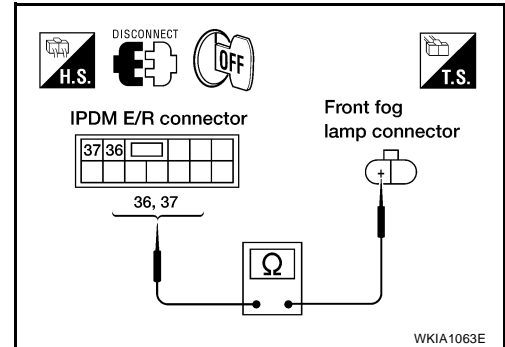

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M


# FRONT FOG LAMP

EKS00FCF


## Aiming Adjustment

### NOTE:


- If vehicle front body has been repaired and /or the fog lamp assembly has been replaced, check fog lamp aiming.
  - Before performing aiming adjustment, check the following:
    - Ensure all tires are inflated to correct pressure.
    - Place vehicle and screen on level surface.
    - Ensure there is no load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant and engine oil is filled to correct level, and fuel tank full.
    - Confirm spare tire, jack and tools are properly stowed.
1. Set the distance between the screen and the center of the front fog lamp lens as shown.

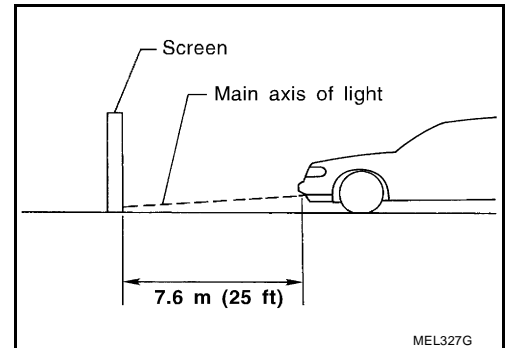

2. Position fender protector aside. Refer to [EI-22. "FENDER PROTECTOR"](#) .
3. Turn front fog lamps ON and adjust front fog lamps using adjusting screw (1) so that the top edge of the high intensity zone is 100 mm (4 in) below the height of the front fog lamp centers as shown.

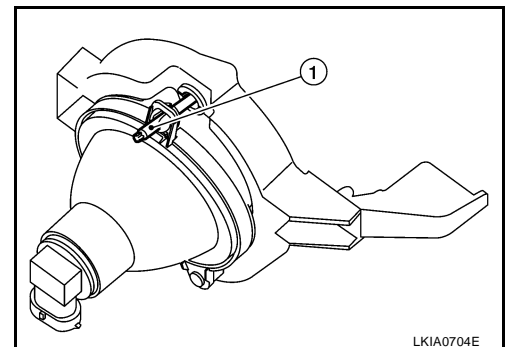

# FRONT FOG LAMP

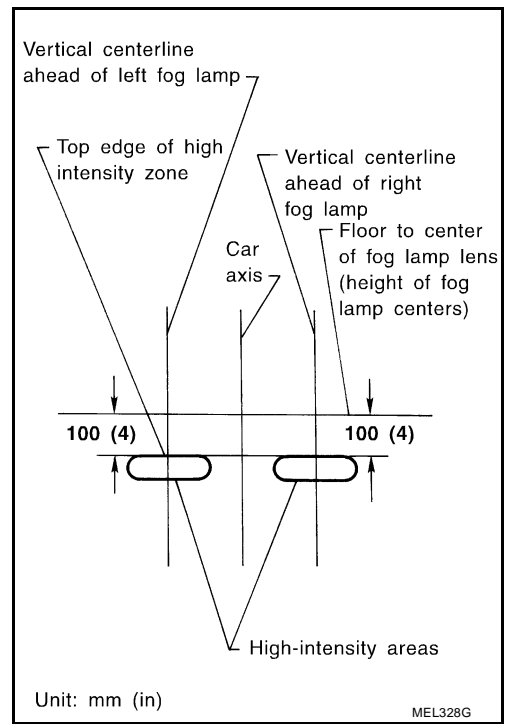

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# FRONT FOG LAMP

## Bulb Replacement

EKS00FCG


The front fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb.

### REMOVAL

#### CAUTION:

- Turn fog lamp switch OFF before disconnecting and connecting the connector.
- Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.
- Grasp only the plastic base when handling the bulb. Never touch the glass envelope. Touching the glass could significantly affect the bulb life and/or fog lamp performance. Keep grease and other oily substances away from bulb.
- Do not leave bulb out of fog lamp reflector for a long time because dust, moisture, smoke, etc., may affect the performance of fog lamp. When replacing bulb, be sure to replace it with new one.

1. Position the front fender protector aside. Refer to [EI-22, "FENDER PROTECTOR"](#) .
2. Disconnect electrical connector.
3. Turn the bulb socket counterclockwise and remove bulb.

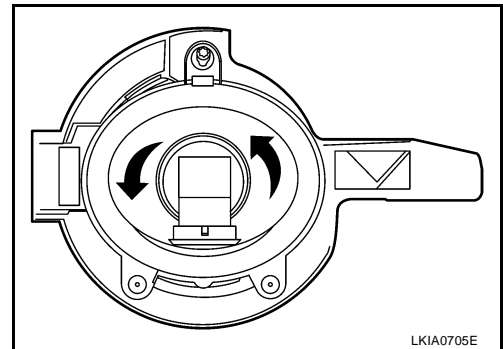

### INSTALLATION

Installation is in the reverse order of removal.

## Front Fog Lamp Assembly


EKS00FCH

### REMOVAL

#### CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.
- Grasp only the plastic base when handling the bulb. Never touch the glass envelope. Touching the glass could significantly affect the bulb life and/or fog lamp performance.
- Do not leave bulb out of fog lamp reflector for a long time because dust, moisture smoke, etc., may affect the performance of fog lamp. When replacing bulb, be sure to replace it with new one.


1. Position the fender protector aside. Refer to [EI-22, "FENDER PROTECTOR"](#) .
2. Disconnect the electrical connector.
3. Remove the front fog lamp assembly.
  - Remove the screw (5).
  - Pull the bracket (2) toward the rear of vehicle to release the snap clip (1).
  - Remove the front fog lamp screws (3) and remove the front fog lamp housing (4).

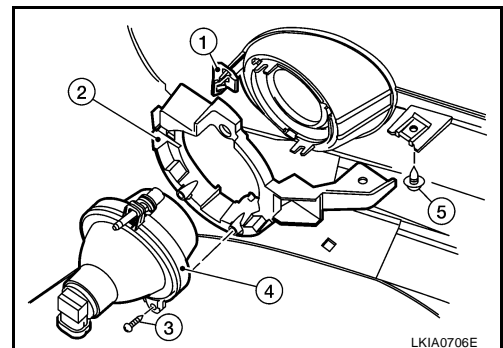

# FRONT FOG LAMP

## INSTALLATION

1. Install front fog lamp assembly.
  - Position the front fog lamp housing (4) and install the front fog lamp screws (3)
  - Press the bracket (2) onto the snap clip (1).
  - Install the screws (5).
2. Connect the electrical connector.
3. Verify fog lamp aiming. Refer to [LT-58, "Aiming Adjustment"](#) .
4. Install the fender protector. Refer to [EI-22, "FENDER PROTECTOR"](#) .

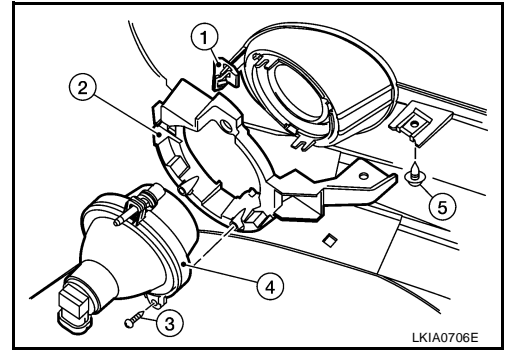

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M


# TURN SIGNAL AND HAZARD WARNING LAMPS

## TURN SIGNAL AND HAZARD WARNING LAMPS

PF2:26120

### Component Parts and Harness Connector Location

EKS00FCI

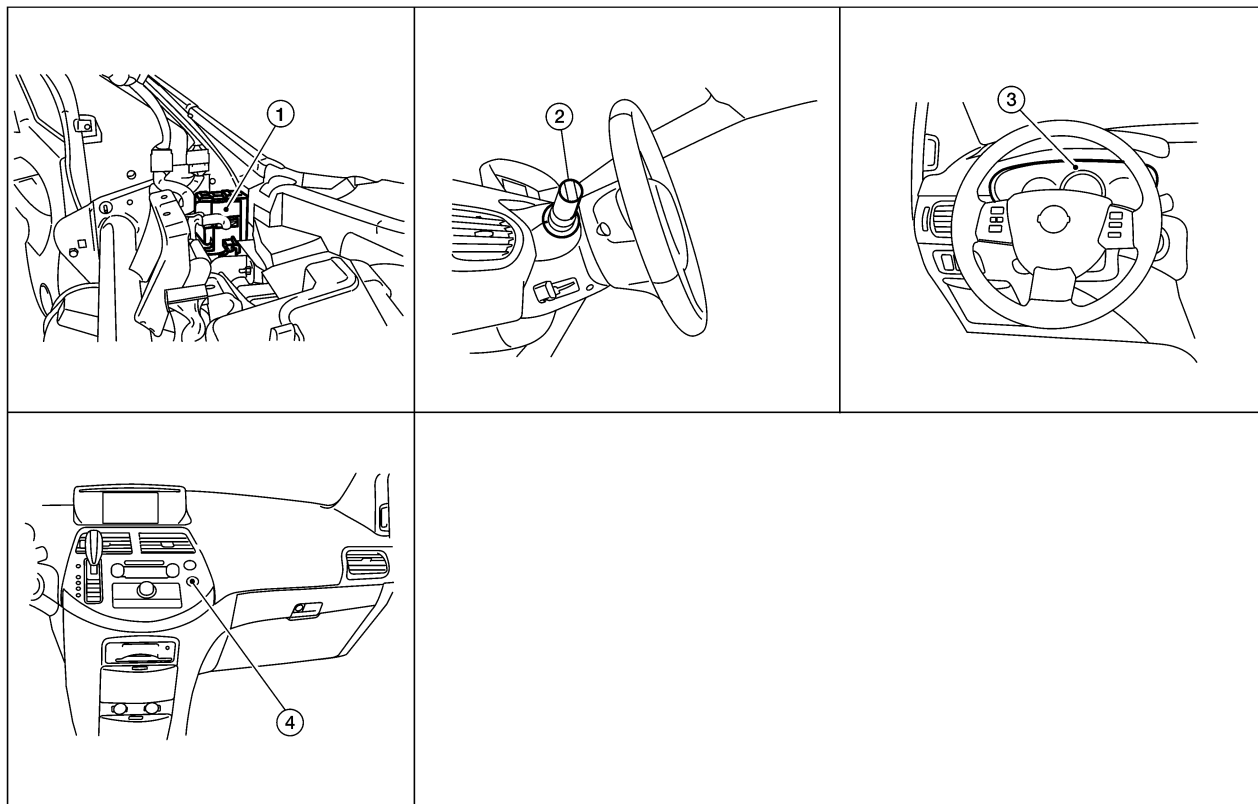

1. BCM M18, M19, M20 (view with instrument panel removed)      2. Combination switch (lighting switch)      3. Combination meter M24  
4. Hazard switch M55      M28

WKIA5263E

### System Description OUTLINE

EKS00FCJ

Power is supplied at all times

- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM (body control module) terminal 70, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 15A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 40.

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 38.

When the ignition switch is in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 20

# TURN SIGNAL AND HAZARD WARNING LAMPS

- through grounds M57, M61 and M79.

## TURN SIGNAL OPERATION

### LH Turn

When the turn signal switch is moved to the left position, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminal 60.

The BCM supplies power

- through BCM terminal 60
- to front combination lamp LH terminal 7
- through front combination lamp LH terminal 6
- to grounds E9, E15 and E24, and
- to rear combination lamp LH terminal 3
- through rear combination lamp LH terminal 5
- to grounds B7 and B19.

BCM sends signal to combination meter through CAN communication lines and turns on turn signal indicator lamp within combination meter.

### RH Turn

When the turn signal switch is moved to the right position, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminal 61.

The BCM supplies power

- through BCM terminal 61
- to front combination lamp RH terminal 7
- through front combination lamp RH terminal 6
- to grounds E9, E15 and E24, and
- to rear combination lamp RH terminal 3
- through rear combination lamp RH terminal 5
- to grounds B117 and B132.

BCM sends signal to combination meter through CAN communication lines and turns on turn signal indicator lamp within combination meter.

## HAZARD LAMP OPERATION

When the hazard switch is depressed, ground is supplied

- to BCM terminal 29
- through hazard switch terminal 2
- through hazard switch terminal 1
- through grounds M57, M61 and M79.

When the hazard switch is depressed, the BCM, interpreting it as hazard warning lamps are ON, outputs turn signal from BCM terminals 60 and 61.

The BCM supplies power

- through BCM terminals 60 and 61
- to front combination lamp LH and RH terminal 7
- through front combination lamp LH and RH terminal 6
- to grounds E9, E15 and E24, and
- to rear combination lamp LH terminal 3
- through rear combination lamp LH terminal 5
- to grounds B7 and B19, and
- to rear combination lamp RH terminal 3
- through rear combination lamp RH terminal 5
- to grounds B117 and B132.

BCM sends signal to combination meter through CAN communication lines and turns on turn signal indicator lamps within combination meter.

A

B

C

D

E

F

G

H

I

J

LT

L

M

# TURN SIGNAL AND HAZARD WARNING LAMPS

---

## REMOTE KEYLESS ENTRY SYSTEM OPERATION

When the remote keyless entry system is triggered by input from the keyfob, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminals 60 and 61.

The BCM supplies power

- through BCM terminals 60 and 61
- to front combination lamp LH and RH terminal 7
- through front combination lamp LH and RH terminal 6
- to grounds E9, E15 and E24, and
- to rear combination lamp LH terminal 3
- through rear combination lamp LH terminal 5
- to grounds B7 and B19, and
- to rear combination lamp RH terminal 3
- through rear combination lamp RH terminal 5
- to grounds B117 and B132.

BCM sends signal to combination meter through CAN communication lines and turns on turn signal indicator lamps within combination meter.

With power and input supplied, the BCM controls the flashing of the hazard warning lamps when keyfob is used to activate the remote keyless entry system.

## COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

## CAN Communication System Description

Refer to [LAN-4, "SYSTEM DESCRIPTION"](#) .


EKS00FCK



# TURN SIGNAL AND HAZARD WARNING LAMPS

## Schematic

EKS00FCL

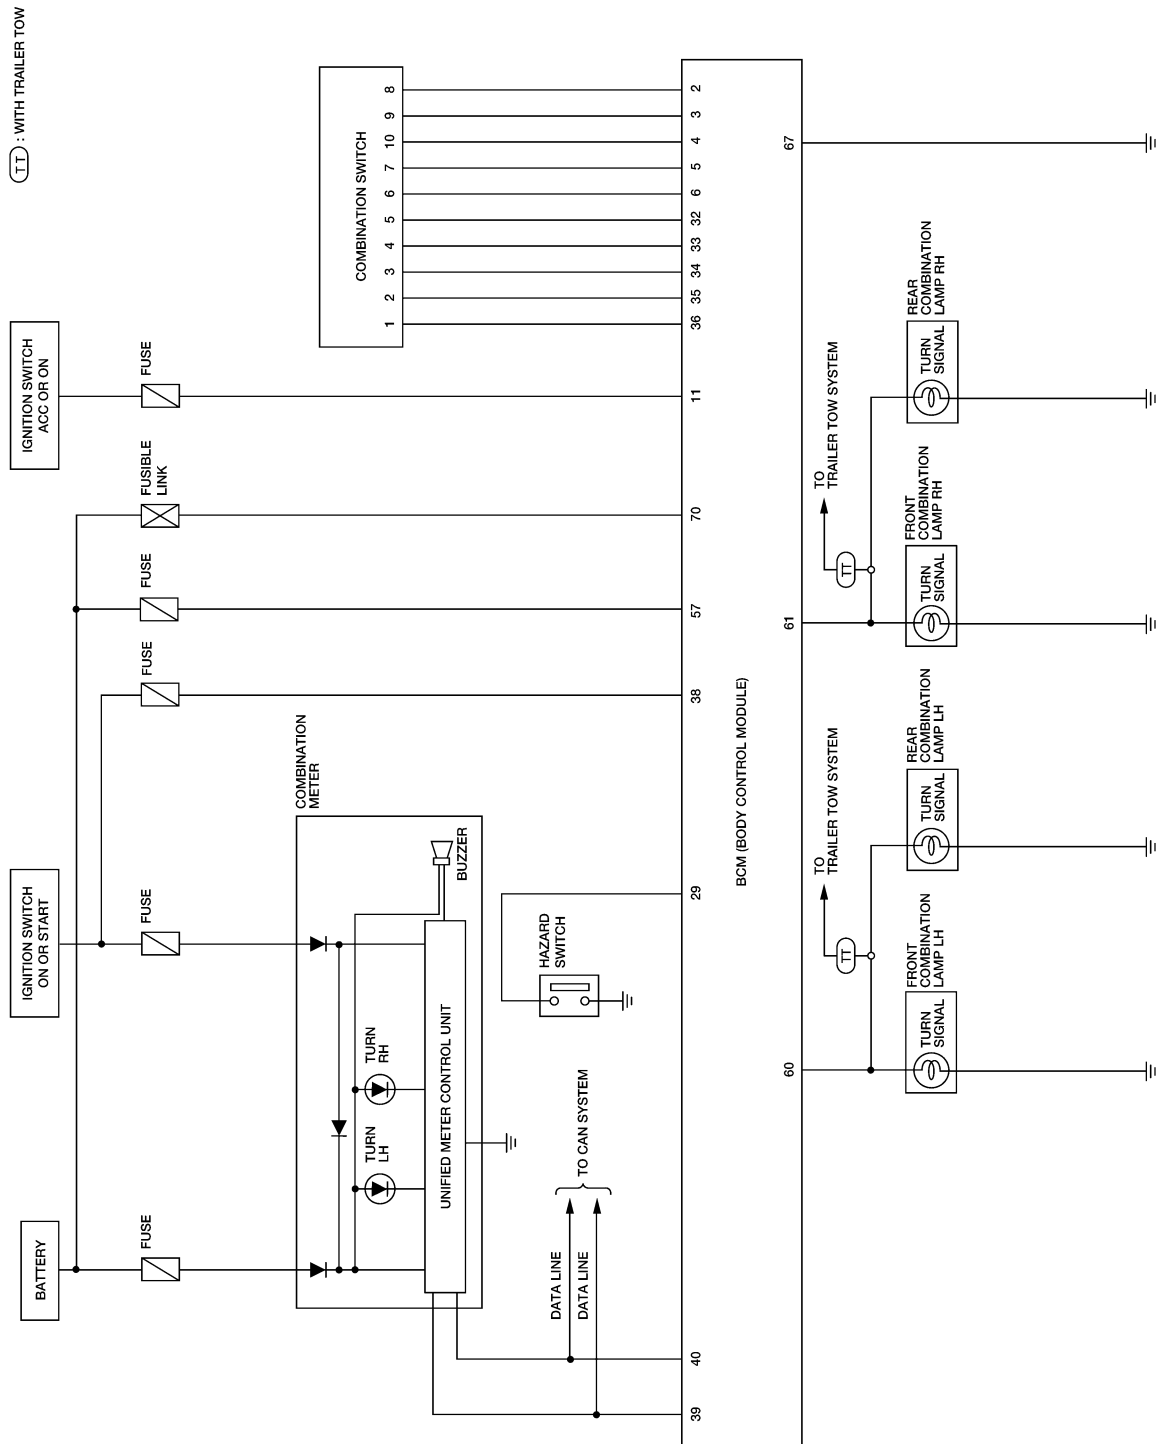

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M






# TURN SIGNAL AND HAZARD WARNING LAMPS

EKS00FCM

## Wiring Diagram — TURN —

LT-TURN-01


— : DATA LINE

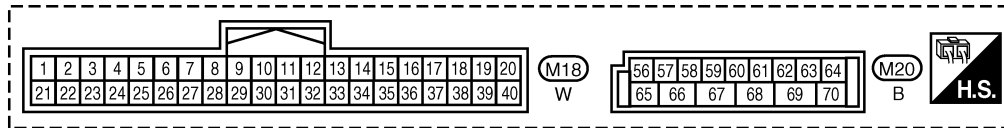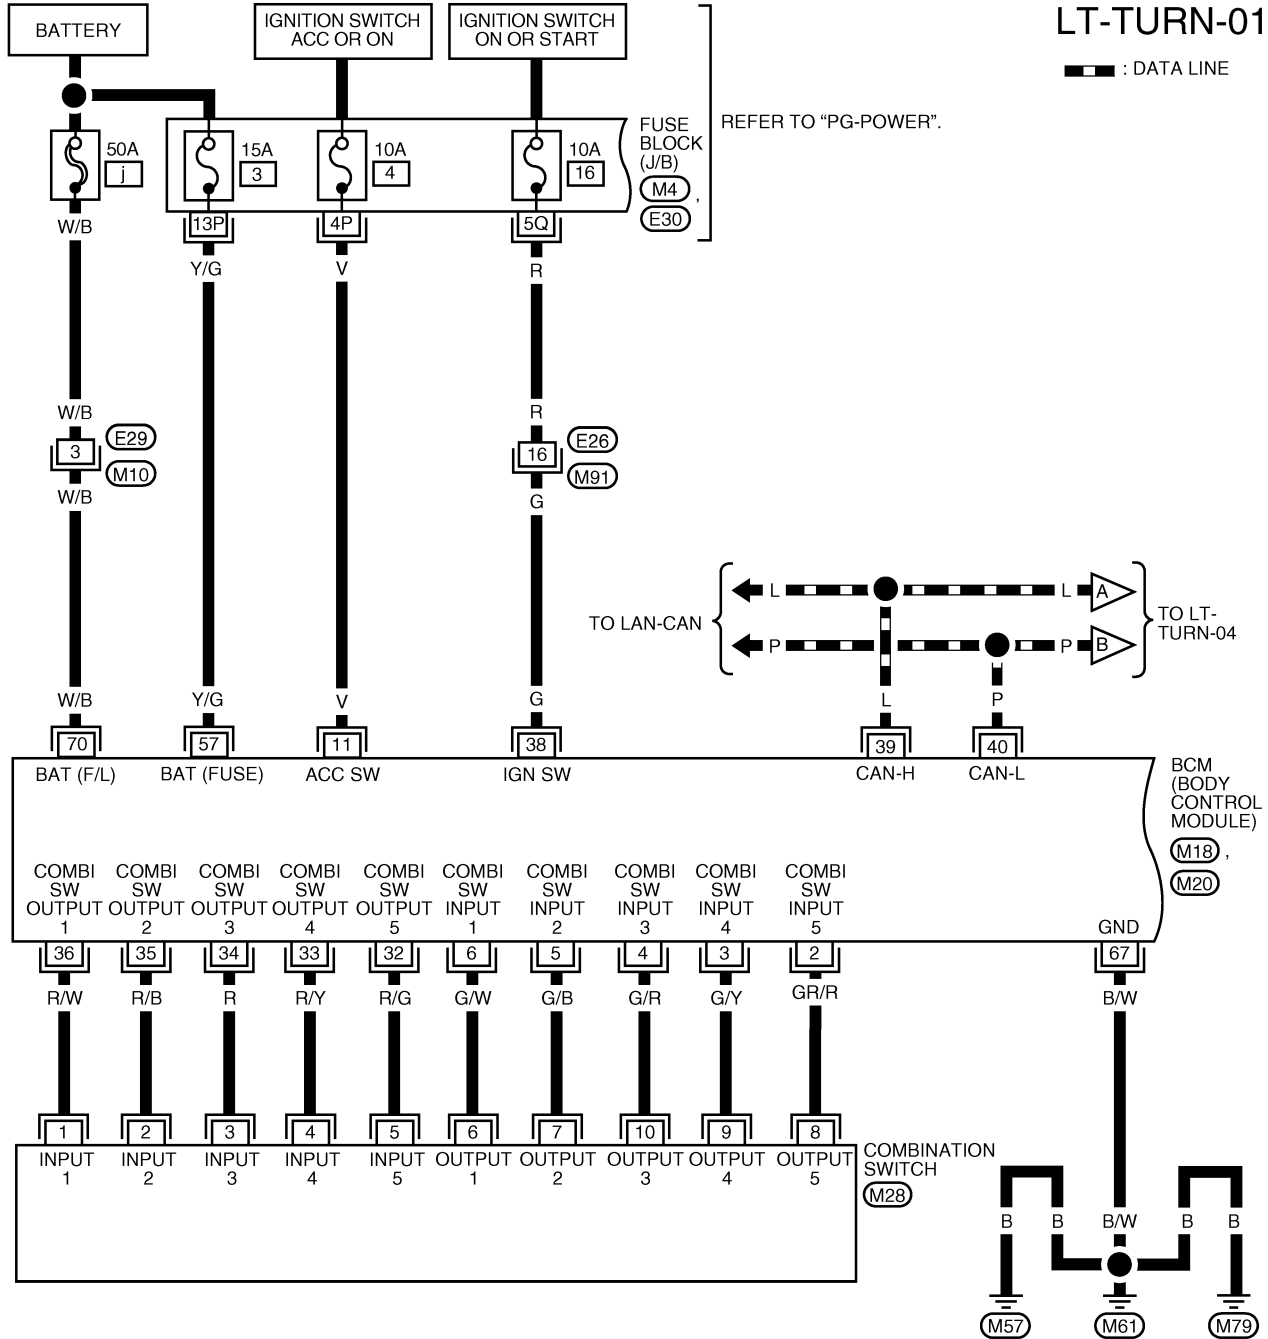


WKWA4695E

# TURN SIGNAL AND HAZARD WARNING LAMPS

## LT-TURN-02

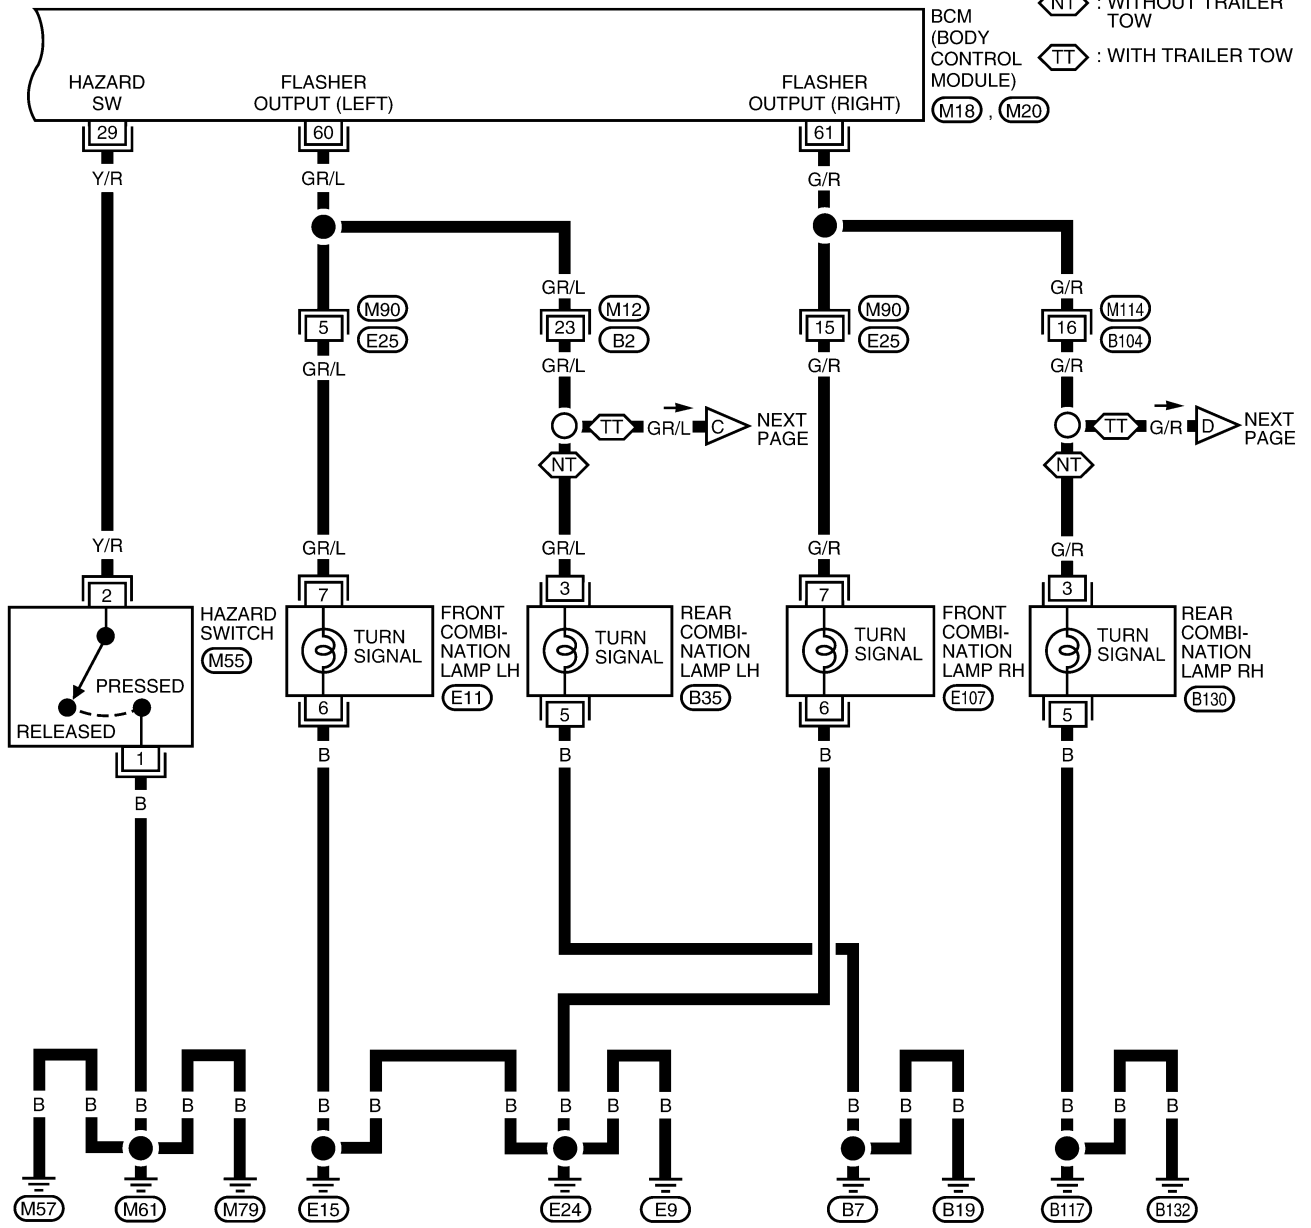

1	2	3	4	5	6	7	8	9	10	11	(M12), (M90), (M114)		
12	13	14	15	16	17	18	19	20	21	22	23	24	GR W W


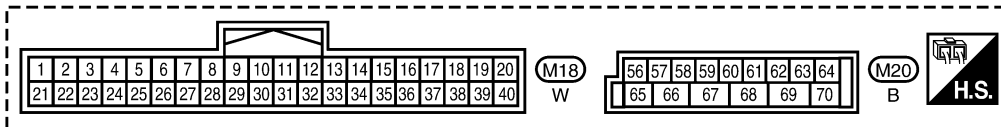


4	2	1	3	(M55)	5	6	7	(E11), (E107)	1	2	(B35), (B130)		
				W				GR GR	3	4	5	6	W W

WKWA4696E

# TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-03

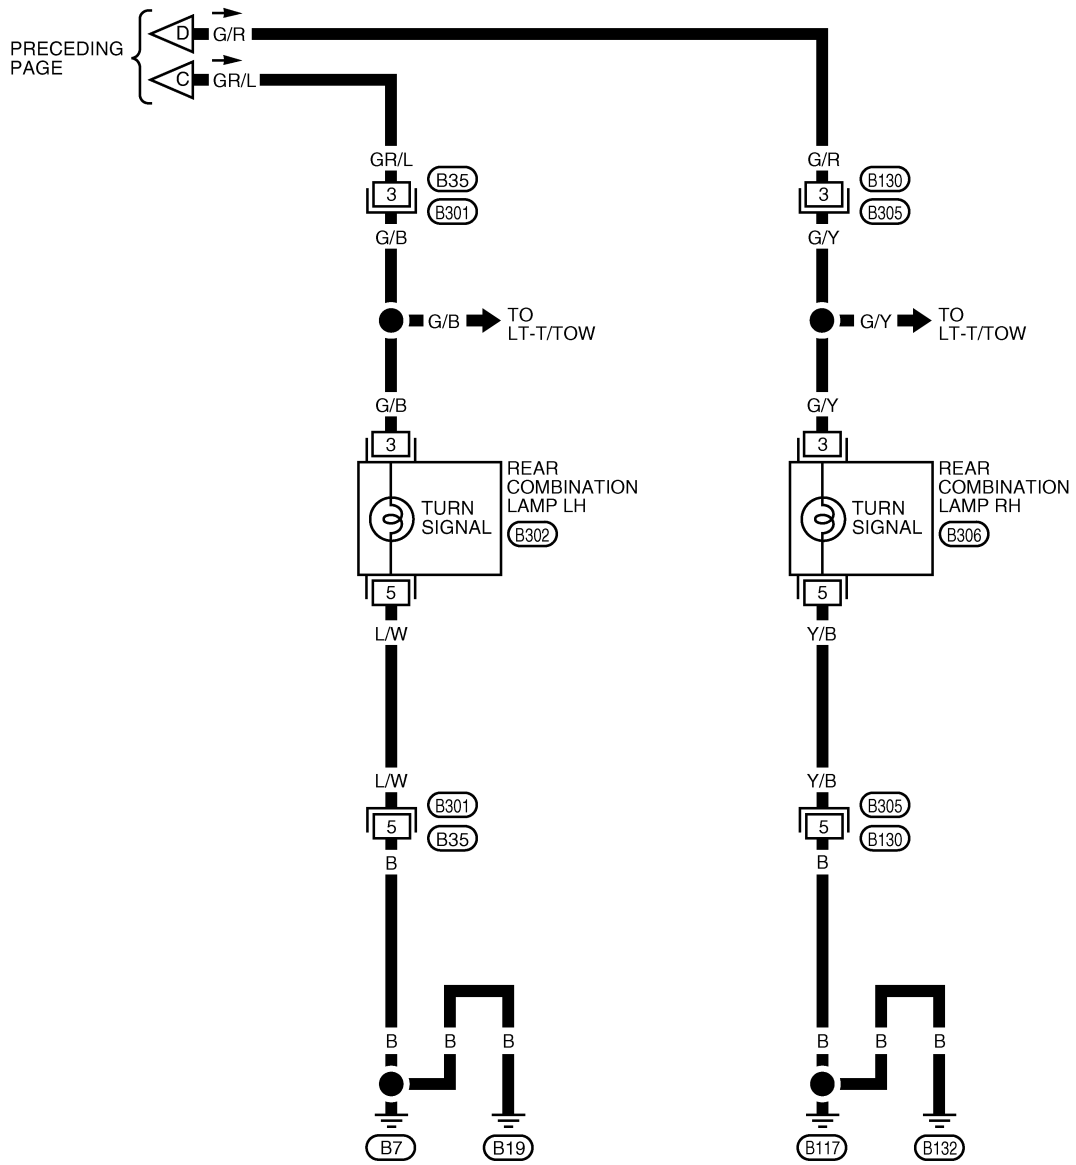


WKWA4697E

# TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-04

— : DATA LINE

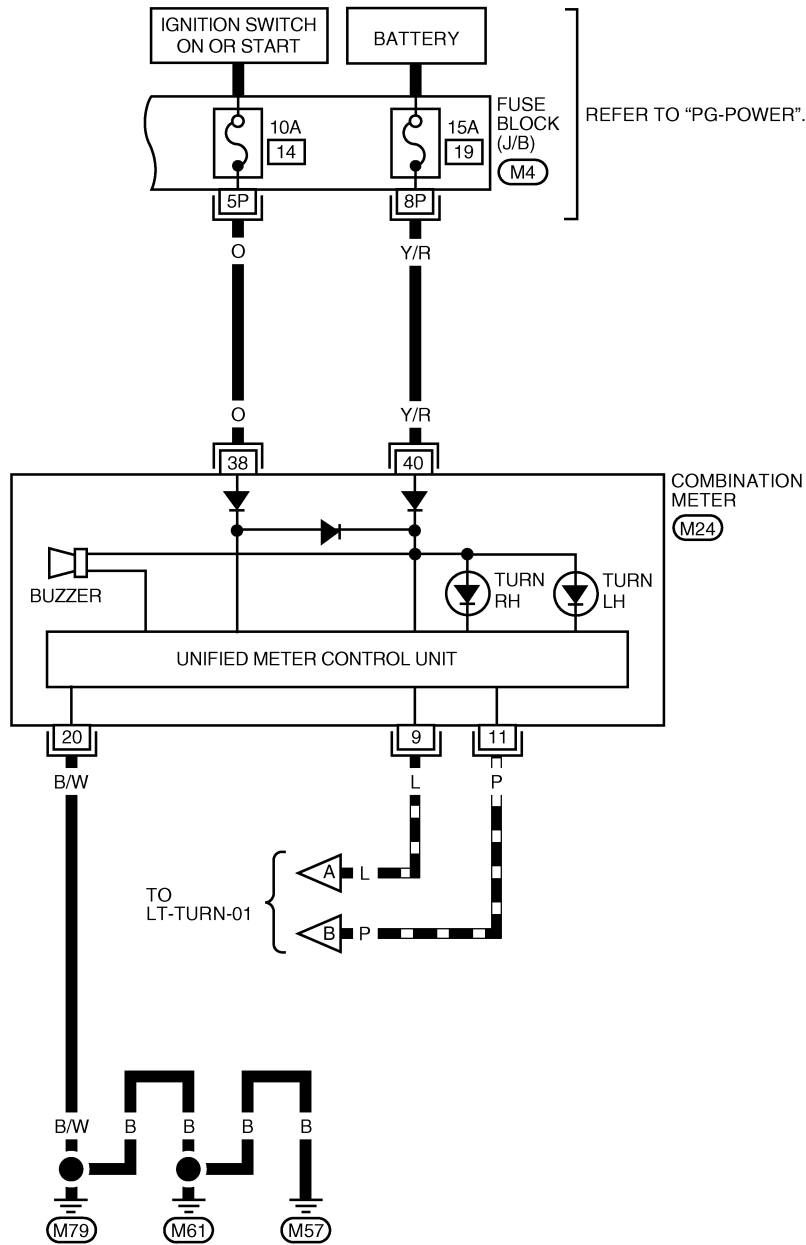

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

1P	2P	3P	4P	5P	6P	7P	M4	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	M24		
8P	9P	10P	11P	12P	13P	14P	15P	16P	W	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	W

WKWA4698E

# TURN SIGNAL AND HAZARD WARNING LAMPS

## Terminals and Reference Values for BCM

EKS00FCN

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

## How to Proceed With Trouble Diagnosis

EKS00FCO

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-62, "System Description"](#) .
3. Perform preliminary check. Refer to [LT-70, "BCM Power Supply and Ground Circuit Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do turn signal and hazard warning lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

## BCM Power Supply and Ground Circuit Check

EKS00FCP

Refer to [BCS-15, "BCM Power Supply and Ground Circuit Check"](#) .

## CONSULT-II Function (BCM)

EKS00FCQ

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

## CONSULT-II START PROCEDURE

Refer to [GI-37, "CONSULT-II Start Procedure"](#) .

### DATA MONITOR

#### Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors the individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

#### Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
HAZARD SW "ON/OFF"	Displays "Hazard ON (ON)/Hazard OFF (OFF)" status, determined from hazard switch signal.
TURN SIGNAL R "ON/OFF"	Displays "Turn right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn left (ON)/Other (OFF)" status, determined from lighting switch signal.
BRAKE SW "OFF"	Displays status of parking brake switch.

# TURN SIGNAL AND HAZARD WARNING LAMPS

## ACTIVE TEST

### Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

### Display Item List

Test item	Description
FLASHER (RH)	Turn signal lamp (RH) can be operated by any ON-OFF operations.
FLASHER (LH)	Turn signal lamp (LH) can be operated by any ON-OFF operations.

## Turn Signal Lamp Does Not Operate

EKS00FQF

### 1. CHECK COMBINATION SWITCH INPUT SIGNAL

☐ With CONSULT-II

Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "TURN SIGNAL R" and "TURN SIGNAL L" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : TURN SIGNAL R ON  
TURN RH position**

**When lighting switch is in : TURN SIGNAL L ON  
TURN LH position**

⊗ Without CONSULT-II

Refer to [LT-91, "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-91, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
TURN SIGNAL R	ON
TURN SIGNAL L	ON

SKIA4499E

### 2. ACTIVE TEST

☐ With CONSULT-II

1. Select "FLASHER" during active test. Refer to [LT-71, "ACTIVE TEST"](#) .

2. Make sure "FLASHER RH" and "FLASHER LH" operate.

⊗ Without CONSULT-II

GO TO 3.

OK or NG

OK >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#) .

NG >> GO TO 3.

ACTIVE TEST			
FLASHER		OFF	
RH	LH		
MODE	BACK	LIGHT	COPY


SKIA6190E

# TURN SIGNAL AND HAZARD WARNING LAMPS

## 3. CHECK TURN SIGNAL LAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and inoperative front combination lamp harness connector.
3. Check continuity between BCM harness connector terminal and inoperative front combination lamp harness connector terminal.

A		B			Continuity
BCM connector	Terminal	Front combination lamp connector		Terminal	
RH	M20	61	RH	E107	Yes
LH		60	LH	E11	

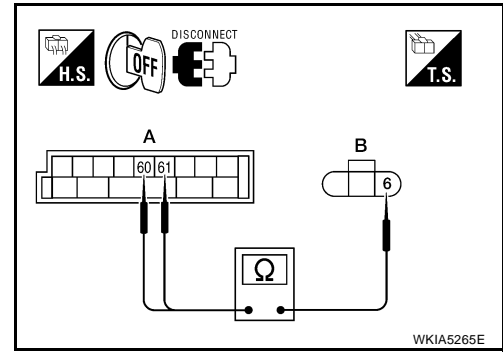


OK or NG

- OK >> GO TO 4.
- NG >> Repair harness or connector.

## 4. CHECK GROUND

Check continuity between inoperative front combination lamp harness connector terminal and ground.

Terminals			Continuity
Front combination lamp connector	Terminal		
RH	E107	5	Yes
LH	E11		

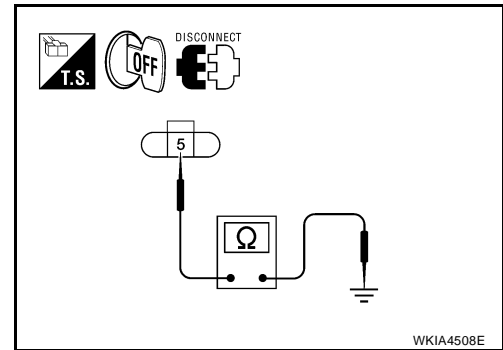

OK or NG

- OK >> GO TO 5.
- NG >> Repair harness or connector.

## 5. CHECK BULB

Check bulb standard of each turn signal lamp is correct. Refer to [LT-154, "Exterior Lamp"](#) .

OK or NG

- OK >> Replace BCM if turn signal lamps do not work after setting the connector again. Refer to [BCS-25, "Removal and Installation of BCM"](#) .
- NG >> Replace turn signal lamp bulb. Refer to [LT-76, "Bulb Replacement"](#) .

## Rear Turn Signal Lamp Does Not Operate

EKS00FCS

### 1. CHECK TAIL LAMPS AND STOP LAMPS

Check bulb standard of each turn signal lamp is correct. Refer to [LT-154, "Exterior Lamp"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Replace turn signal lamp bulb. Refer to [LT-76, "REAR TURN SIGNAL LAMP"](#) .



# TURN SIGNAL AND HAZARD WARNING LAMPS


## 2. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Disconnect BCM connector and rear combination lamp connector.
2. Check continuity between BCM (A) connector M20 terminal 61 and rear combination lamp RH (B) connector B130 (without trailer tow), B306 (with trailer tow) terminal 3.

**61 - 3** : Continuity should exist.

3. Check continuity between BCM (A) connector M20 terminal 60 and rear combination lamp LH harness connector B35 (without trailer tow), B302 (with trailer tow) terminal 3.

**60 - 3** : Continuity should exist.

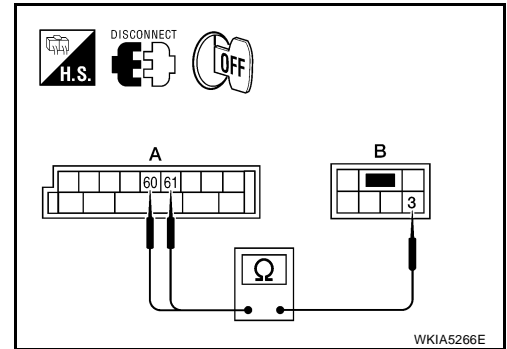

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.


## 3. CHECK GROUND CIRCUIT

Check continuity between rear combination lamp harness connector B35 (without trailer tow), B302 (with trailer tow) LH and B130 (without trailer tow), B306 (with trailer tow) RH terminal 5 and ground.

**5 - Ground** : Continuity should exist.

OK or NG

- OK >> Check rear combination lamp connector for proper connection. Repair as necessary.
- NG >> Repair harness or connector.

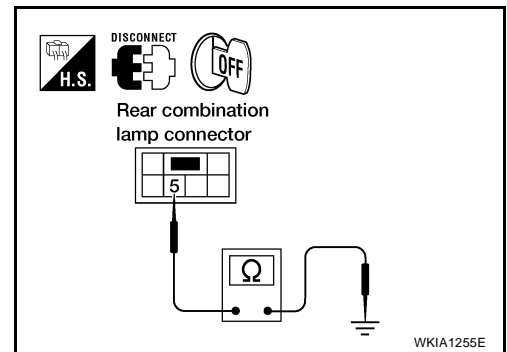

## Hazard Warning Lamp Does Not Operate But Turn Signal Lamps Operate

EKS00FCT

### 1. CHECK BULB

Make sure bulb standard of each turn signal lamp is correct. Refer to [LT-154, "Exterior Lamp"](#).

OK or NG


- OK >> GO TO 2.
- NG >> Replace turn signal lamp bulb. Refer to [LT-76, "Bulb Replacement"](#) for front turn signal bulb. Refer to [LT-76, "REAR TURN SIGNAL LAMP"](#) for rear turn signal bulb.

# TURN SIGNAL AND HAZARD WARNING LAMPS

## 2. CHECK HAZARD SWITCH INPUT SIGNAL

With CONSULT-II  
 Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "HAZARD SW" turns ON-OFF linked with operation of hazard switch.

**When hazard switch is in ON position : HAZARD SW ON**

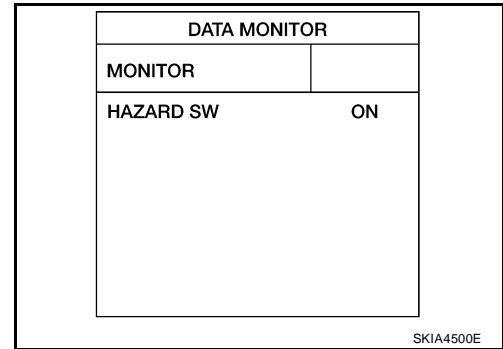


Without CONSULT-II  
 Check voltage between BCM harness connector M18 terminal 29 and ground.

BCM (+)		(-)	Condition	Voltage (Approx.)
Connector	Terminal			
M18	29	Ground	Hazard switch is ON	0V
			Hazard switch is OFF	5V

OK or NG

- OK >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#).
- NG >> GO TO 3.

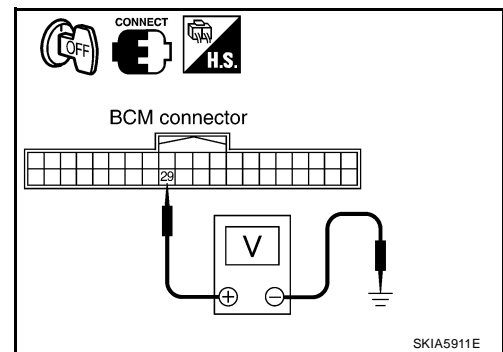


## 3. CHECK HAZARD SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and hazard switch connector.
3. Check continuity between BCM harness connector M18 terminal 29 and hazard switch harness connector M55 terminal 2.

**29 - 2 : Continuity should exist.**

OK or NG

- OK >> GO TO 4.
- NG >> Repair harness or connector.

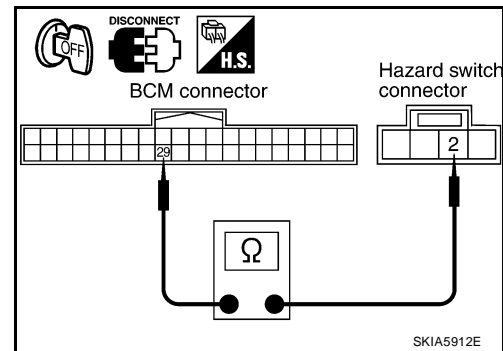


## 4. CHECK GROUND

Check continuity between hazard switch harness connector M55 terminal 1 and ground.

**1 - Ground : Continuity should exist.**

OK or NG

- OK >> GO TO 5.
- NG >> Repair harness or connector.

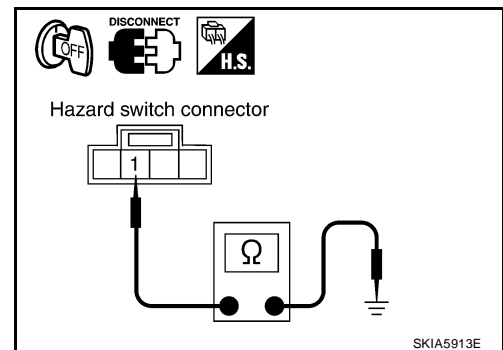

# TURN SIGNAL AND HAZARD WARNING LAMPS

## 5. CHECK HAZARD SWITCH


Check continuity of hazard switch.

Hazard switch		Condition	Continuity
Terminal			
1	2	Hazard switch is ON	Yes
		Hazard switch is OFF	No

OK or NG

OK >> Replace BCM if hazard warning lamps do not work after setting the connector again. Refer to [BCS-25, "Removal and Installation of BCM"](#).

NG >> Replace hazard switch. Refer to [LT-87, "Removal and Installation"](#).

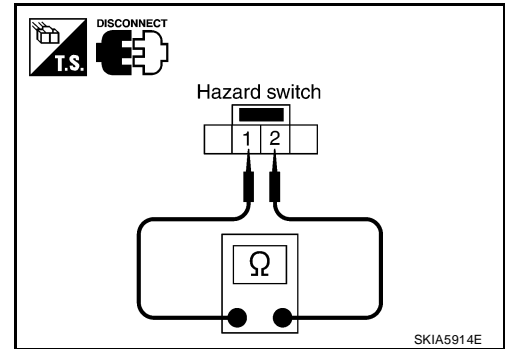

## Turn Signal Indicator Lamp Does Not Operate

EKS00FCU

### 1. CHECK CAN COMMUNICATION SYSTEM

Check CAN communication. Refer to [LAN-7, "TROUBLE DIAGNOSIS"](#).

OK or NG

OK >> Replace combination meter. Refer to [DI-25, "REMOVAL AND INSTALLATION"](#).

NG >> Repair as necessary.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

LT

# TURN SIGNAL AND HAZARD WARNING LAMPS

---

## **Bulb Replacement**

### **FRONT TURN SIGNAL LAMP**

EKS00FCV

Refer to [LT-26, "FRONT TURN SIGNAL/PARKING LAMP"](#) .

### **REAR TURN SIGNAL LAMP**

Refer to [LT-113, "Bulb Replacement"](#) .

## **Removal and Installation**

### **FRONT TURN SIGNAL LAMP**

EKS00FCX

Refer to [LT-26, "Removal and Installation"](#) .

### **REAR TURN SIGNAL LAMP**

Refer to [LT-113, "Removal and Installation"](#) .


# CORNERING LAMP

## CORNERING LAMP

PFP:26100

### Component Parts and Harness Connector Location

EKS00FCZ

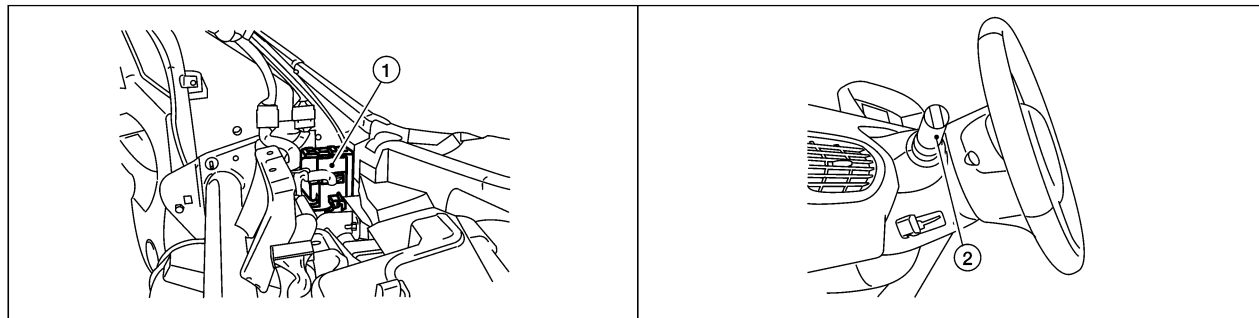

1. BCM M18, M20 (view with instrument panel removed)
2. Combination switch (lighting switch) M28

### System Description OUTLINE

EKS00FD0

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- through 50A fusible link (letter j, located in the fuse and fusible link box)
- to BCM (body control module) terminal 70, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 15A fuse (No. 34, located in the IPDM E/R)
- to CPU (central processing unit) of the IPDM E/R, and
- through 15A fuse (No. 41, located in the IPDM E/R)
- to cornering lamp relay LH and RH, and
- to CPU (central processing unit) of the IPDM E/R.

When the ignition switch is in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38.

When the ignition switch is in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E9, E15 and E24.

### CORNERING LAMP OPERATION

#### LH Turn

When the lighting switch is in the 2nd position or in the AUTO position (headlamp ON) and turn signal switch is moved to the left position, BCM sends signal through CAN communication lines to IPDM E/R. IPDM E/R then operates cornering lamp relay LH. When this relay is energized, power is supplied

- through IPDM E/R terminal 34
- to front combination lamp LH terminal 9.

Ground is supplied

- to front combination lamp LH terminal 8
- through grounds E9, E15 and E24.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# CORNERING LAMP

---

## **RH Turn**

When the lighting switch is in the 2nd position or in the AUTO position (headlamp ON) and turn signal switch is moved to the right position, BCM sends signal through CAN communication lines to IPDM E/R. IPDM E/R then operates cornering lamp relay RH. When this relay is energized, power is supplied

- through IPDM E/R terminal 23
- to front combination lamp RH terminal 9.

Ground is supplied

- to front combination lamp RH terminal 8
- through grounds E9, E15 and E24.

## **COMBINATION SWITCH READING FUNCTION**

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

## **CAN Communication System Description**


Refer to [LAN-4, "SYSTEM DESCRIPTION"](#) .

EKS00FD1

# CORNERING LAMP

## Schematic

EKS00FD2

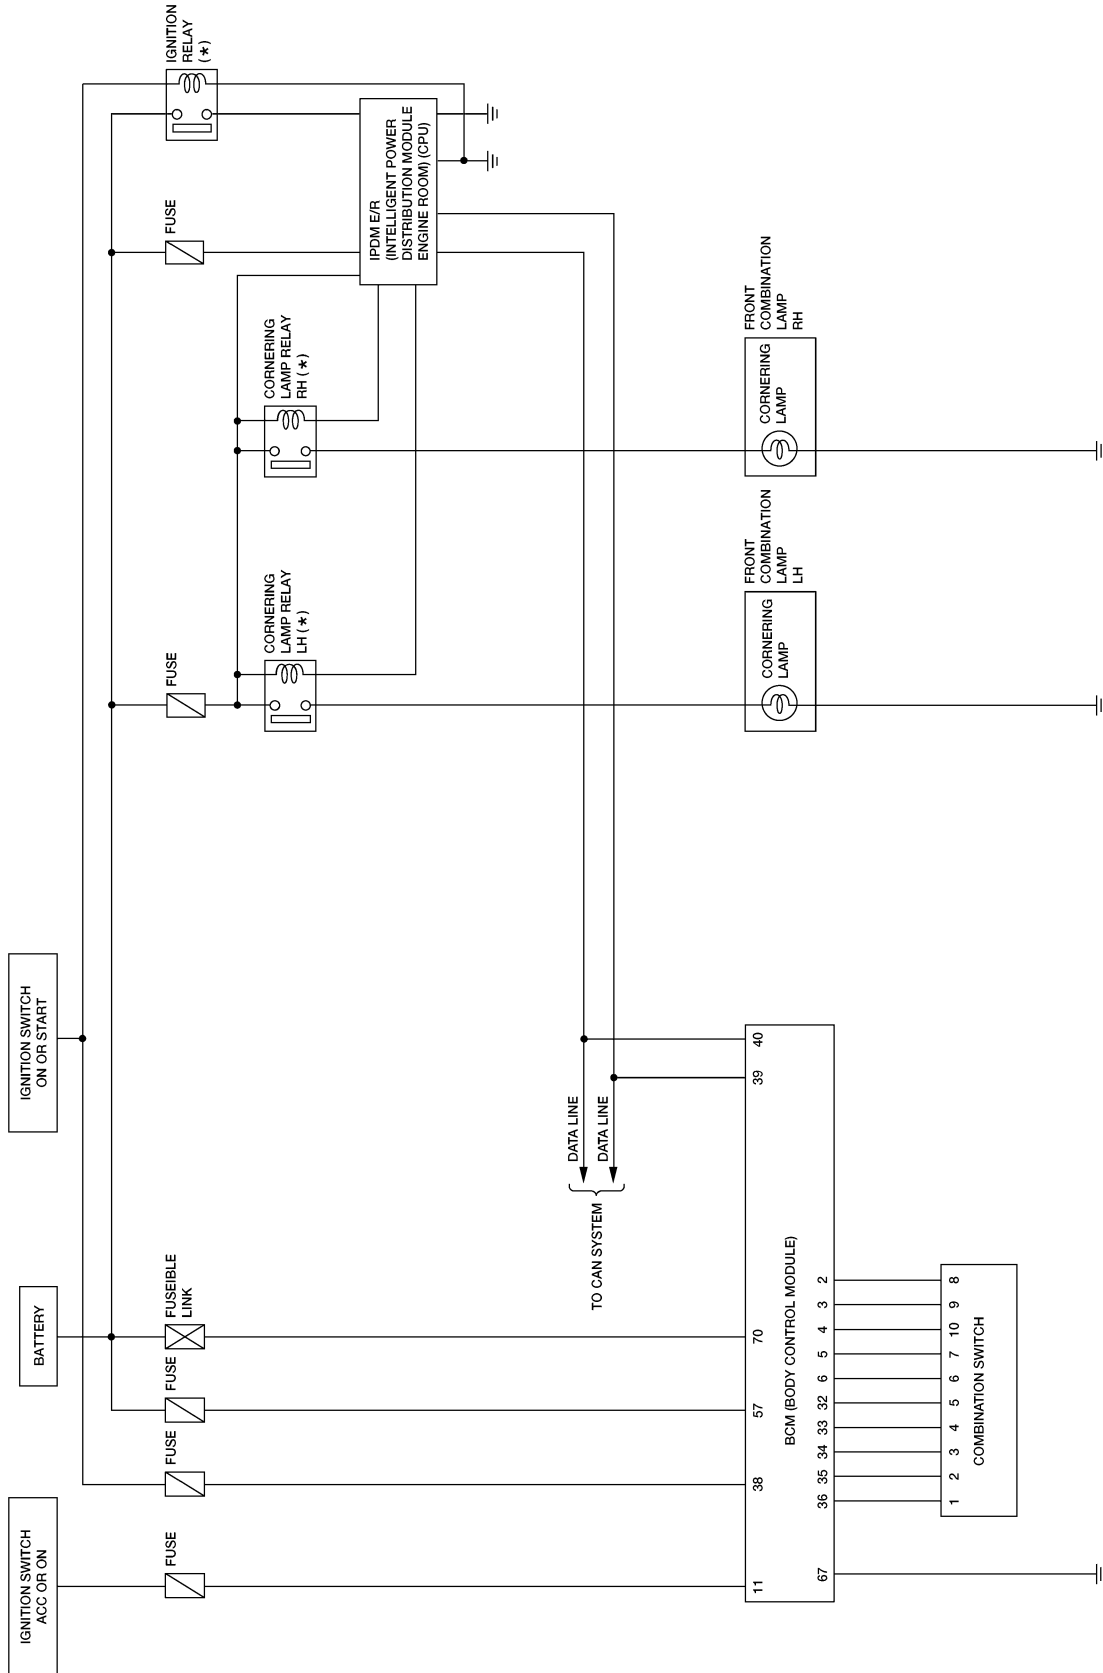

\* : THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# CORNERING LAMP

EKS00FD3

## Wiring Diagram — CORNER —

LT-CORNER-01

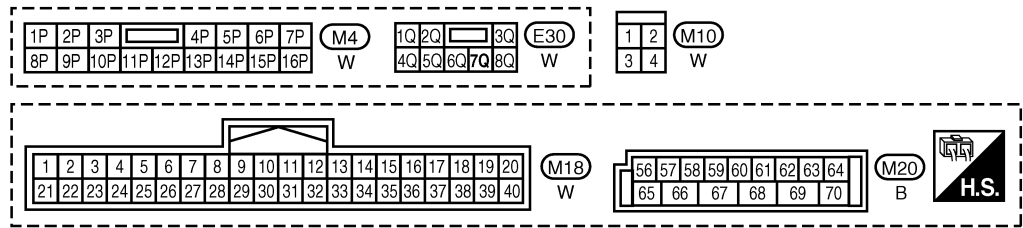
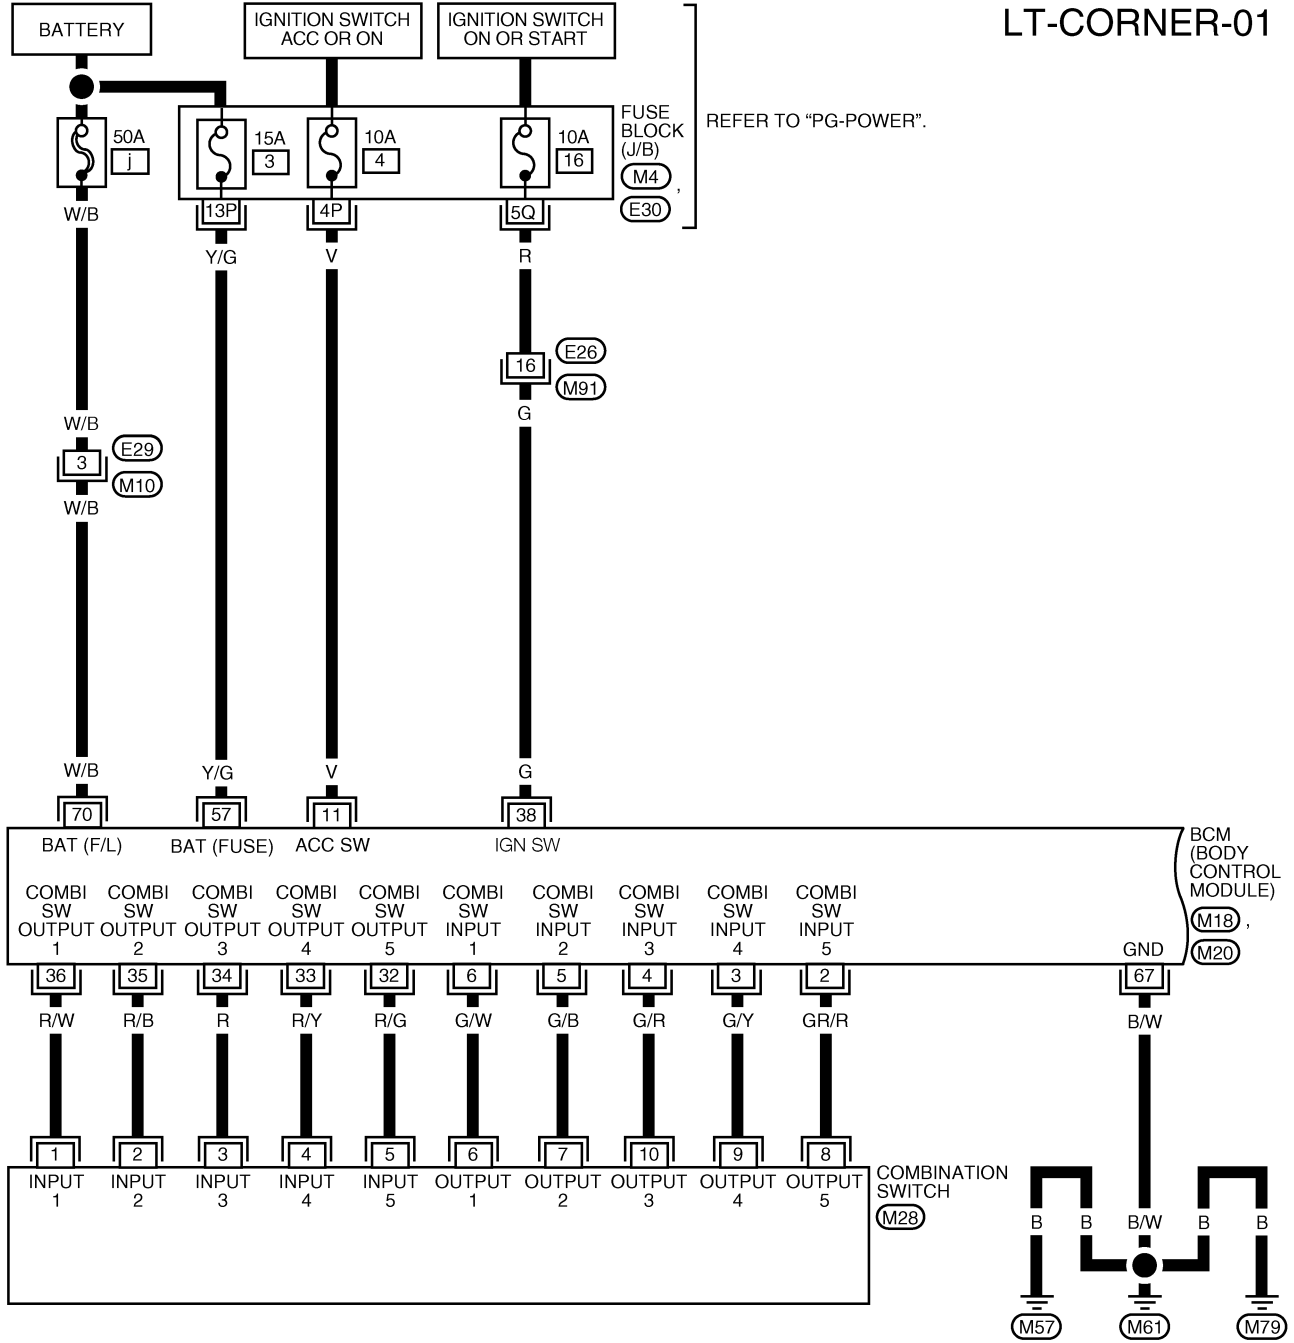


WKWA4700E



# CORNERING LAMP



LT-CORNER-02

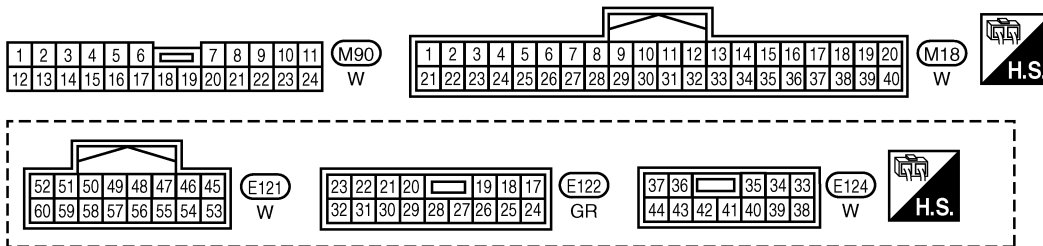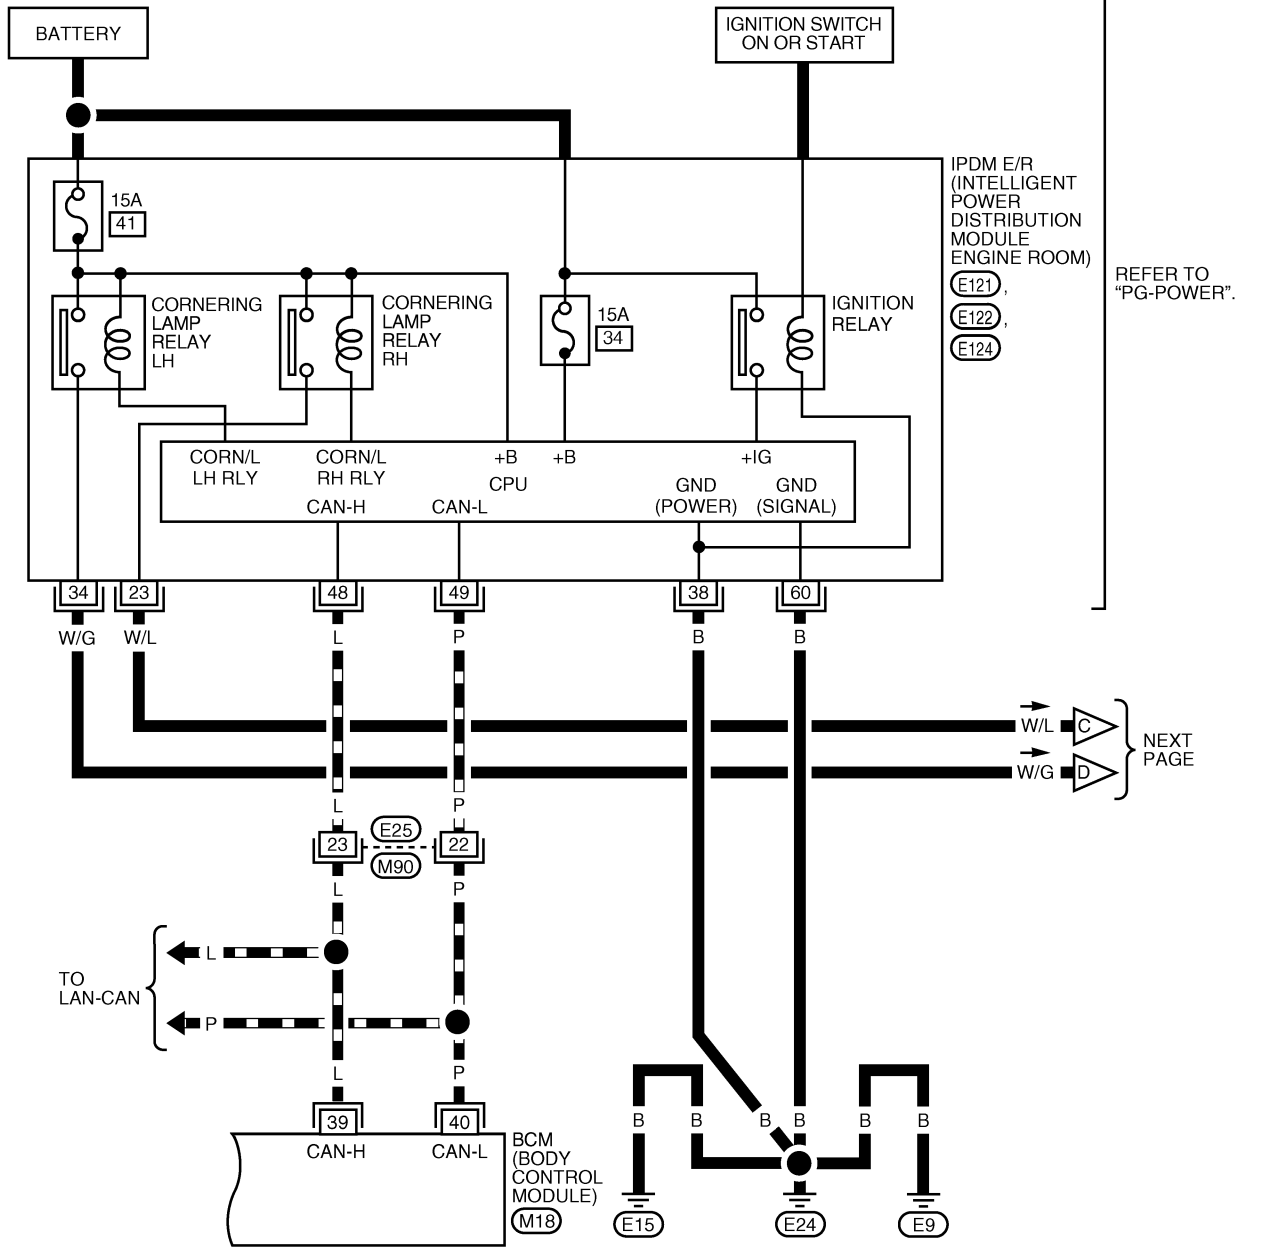

WKWA4701E

# CORNERING LAMP

LT-CORNER-03

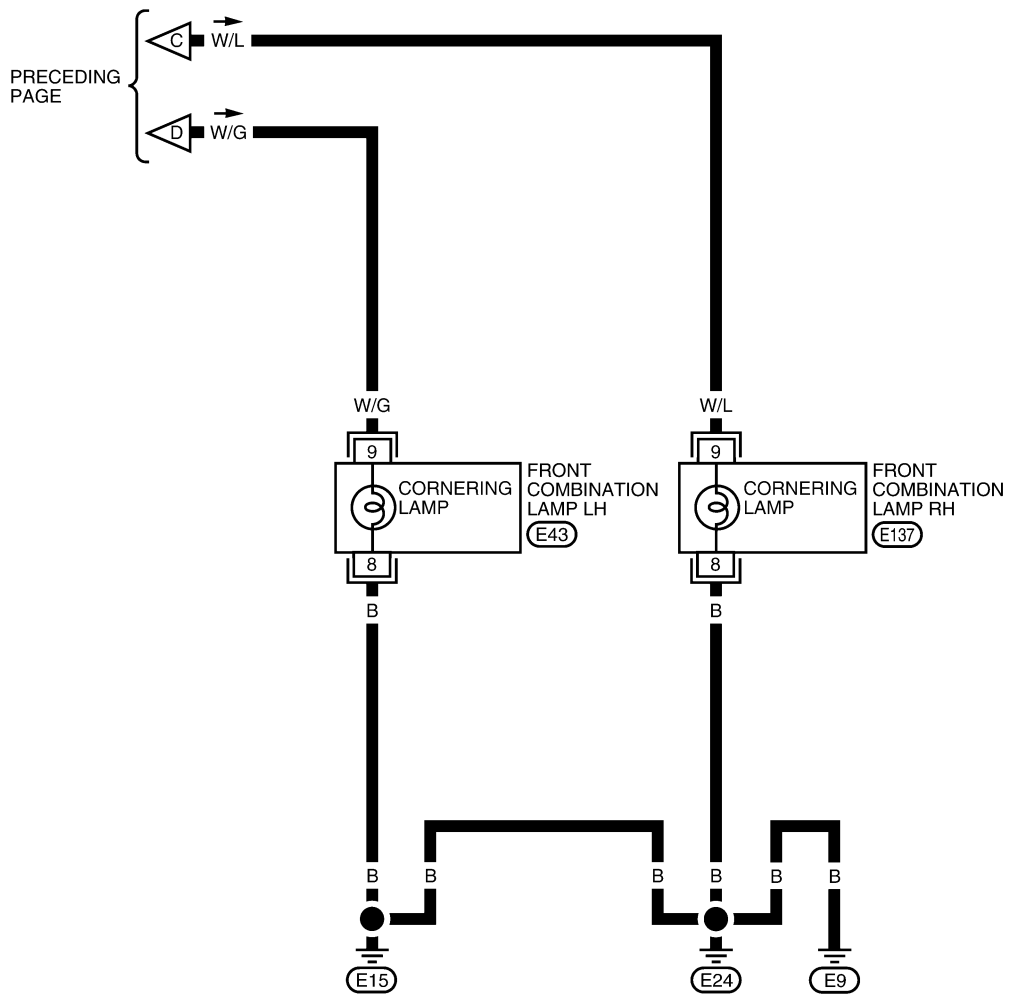

WKWA4702E

# CORNERING LAMP

## Terminals and Reference Values for BCM

EKS00FD4

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

## Terminals and Reference Values for IPDM E/R

EKS00FD5

Refer to [PG-27, "Terminals and Reference Values for IPDM E/R"](#) .

## How to Proceed With Trouble Diagnosis

EKS00FD6

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-77, "System Description"](#) .
3. Perform preliminary check. Refer to [LT-83, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do turn signal and hazard warning lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

## Preliminary Check

EKS00FD7

### CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-15, "BCM Power Supply and Ground Circuit Check"](#) and [PG-31, "IPDM E/R Power/Ground Circuit Inspection"](#)

## CONSULT-II Function (IPDM E/R)

EKS00FD8

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

IPDM E/R diagnostic Mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

## CONSULT-II START PROCEDURE

Refer to [GI-37, "CONSULT-II Start Procedure"](#) .

## DATA MONITOR

### Operation Procedure

1. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Touch "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors the individual signal.

3. Touch "START".
4. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
5. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

### All Signals, Main Signals, Selection From Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Cornering lamp	CRNRNG LMP REQ	ON/OFF	×	—	×	Signal status input from BCM

### NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

# CORNERING LAMP

## ACTIVE TEST

### Operation Procedure

1. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Touch "CORNERING LAMP" on "SELECT TEST ITEM" screen.
3. Touch "RH" or "LH" item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

### Display Item List

Test item	Description
CORNERING LAMP (RH)	Cornering lamp (RH) can be operated by any ON-OFF operations.
CORNERING LAMP (LH)	Cornering lamp (LH) can be operated by any ON-OFF operations.


## Cornering Lamp Does Not Operate

EKS00FD9

### 1. ACTIVE TEST

☑ With CONSULT-II

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "CORNERING LAMP" during active test.
3. Select "RH", then "LH" on "ACTIVE TEST" screen.
4. Make sure cornering lamp LH and RH operate.

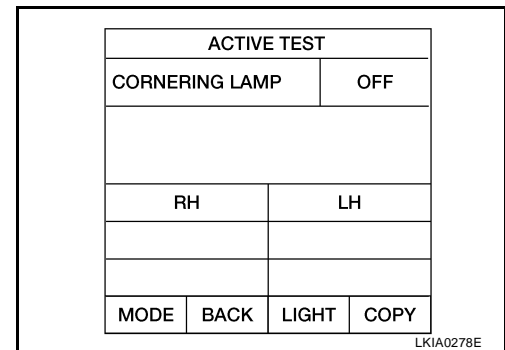

☒ Without CONSULT-II

GO TO 3.

OK or NG

- OK >> GO TO 2.  
 NG >> GO TO 3.

### 2. CHECK COMBINATION SWITCH INPUT SIGNAL


1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "CRNRNG LMP REQ" turns ON-OFF linked with operation of lighting switch.

#### NOTE:

Lighting switch must not be in OFF position.

**When lighting switch is in TURN RH position : CRNRNG LMP REQ R**

**When lighting switch is in TURN LH position : CRNRNG LMP REQ L**

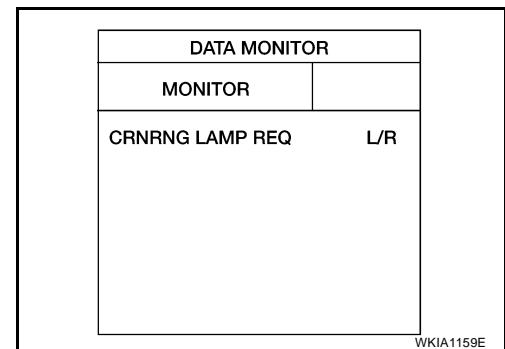

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-33, "Removal and Installation of IPDM E/R"](#) .  
 NG >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#) .

### 3. CHECK BULB

Check bulb standard of each cornering lamp is correct. Refer to [LT-154, "Exterior Lamp"](#) .

OK or NG

- OK >> GO TO 4.  
 NG >> Replace cornering lamp bulb. Refer to [LT-85, "Bulb Replacement"](#) .

# CORNERING LAMP

## 4. CHECK CORNERING LAMPS CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connectors and front combination lamp LH and RH connectors.
3. Check continuity between IPDM E/R harness connector terminal and front combination lamp harness connector terminal.

A			B			Continuity
IPDM E/R connector	Terminal	Front combination lamp connector	Terminal			
RH	E122	23	RH	E137	7	Yes
LH	E124	34	LH	E43		

OK or NG

OK >> GO TO 5.

NG >> Repair harness or connector.

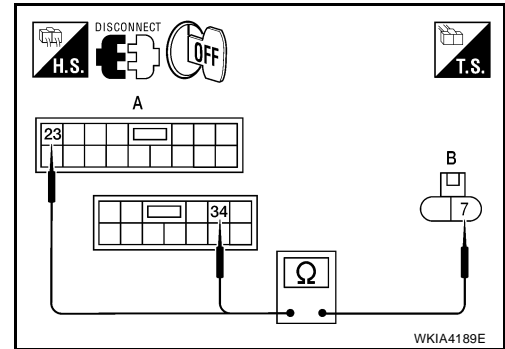

## 5. CHECK GROUND


Check continuity between front combination lamp harness connector terminal and ground.

Terminals			Continuity
Front combination lamp connector	Terminal		
RH	E137	8	Ground
LH	E43		

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-33, "Removal and Installation of IPDM E/R"](#) .

NG >> Repair harness or connector.

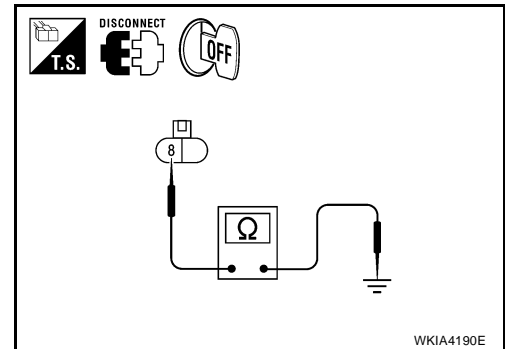

## Bulb Replacement

Refer to [LT-85, "Bulb Replacement"](#) .

## Removal and Installation

Refer to [LT-26, "Removal and Installation"](#) .

EKS00FDA

LT

EKS00I8H

L

M

# LIGHTING AND TURN SIGNAL SWITCH


## LIGHTING AND TURN SIGNAL SWITCH

PF2:25540

### Removal

EKS00FDB

1. Remove steering column cover. Refer to [IP-12, "Steering Column Cover"](#) .
2. While pressing tabs, pull lighting and turn signal switch toward driver door and disconnect from the base.

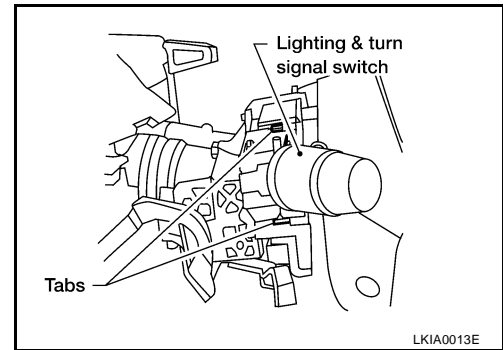

LKIA0013E

### Installation

EKS00IB1

Installation is in the reverse order of removal.

# HAZARD SWITCH

## HAZARD SWITCH


PF2P:25290

### Removal and Installation

EKS00FDC

#### REMOVAL

1. Remove cluster lid C. Refer to [IP-13, "Cluster Lid C"](#) .
2. Press tabs and remove hazard switch (1).

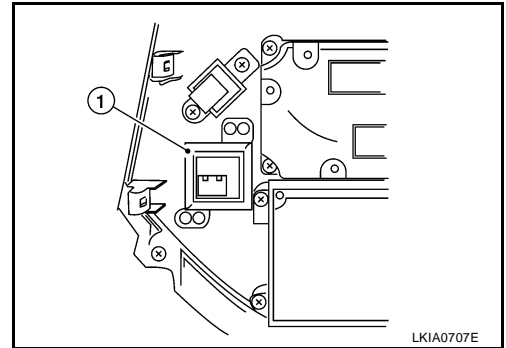

#### INSTALLATION

Installation is in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

LT

# COMBINATION SWITCH





PF2:25567

EKS00FDD

## COMBINATION SWITCH

### Wiring Diagram — COMBSW —

## LT-COMBSW-01

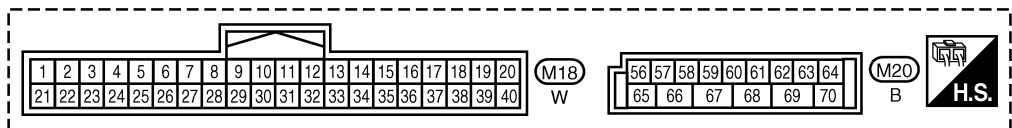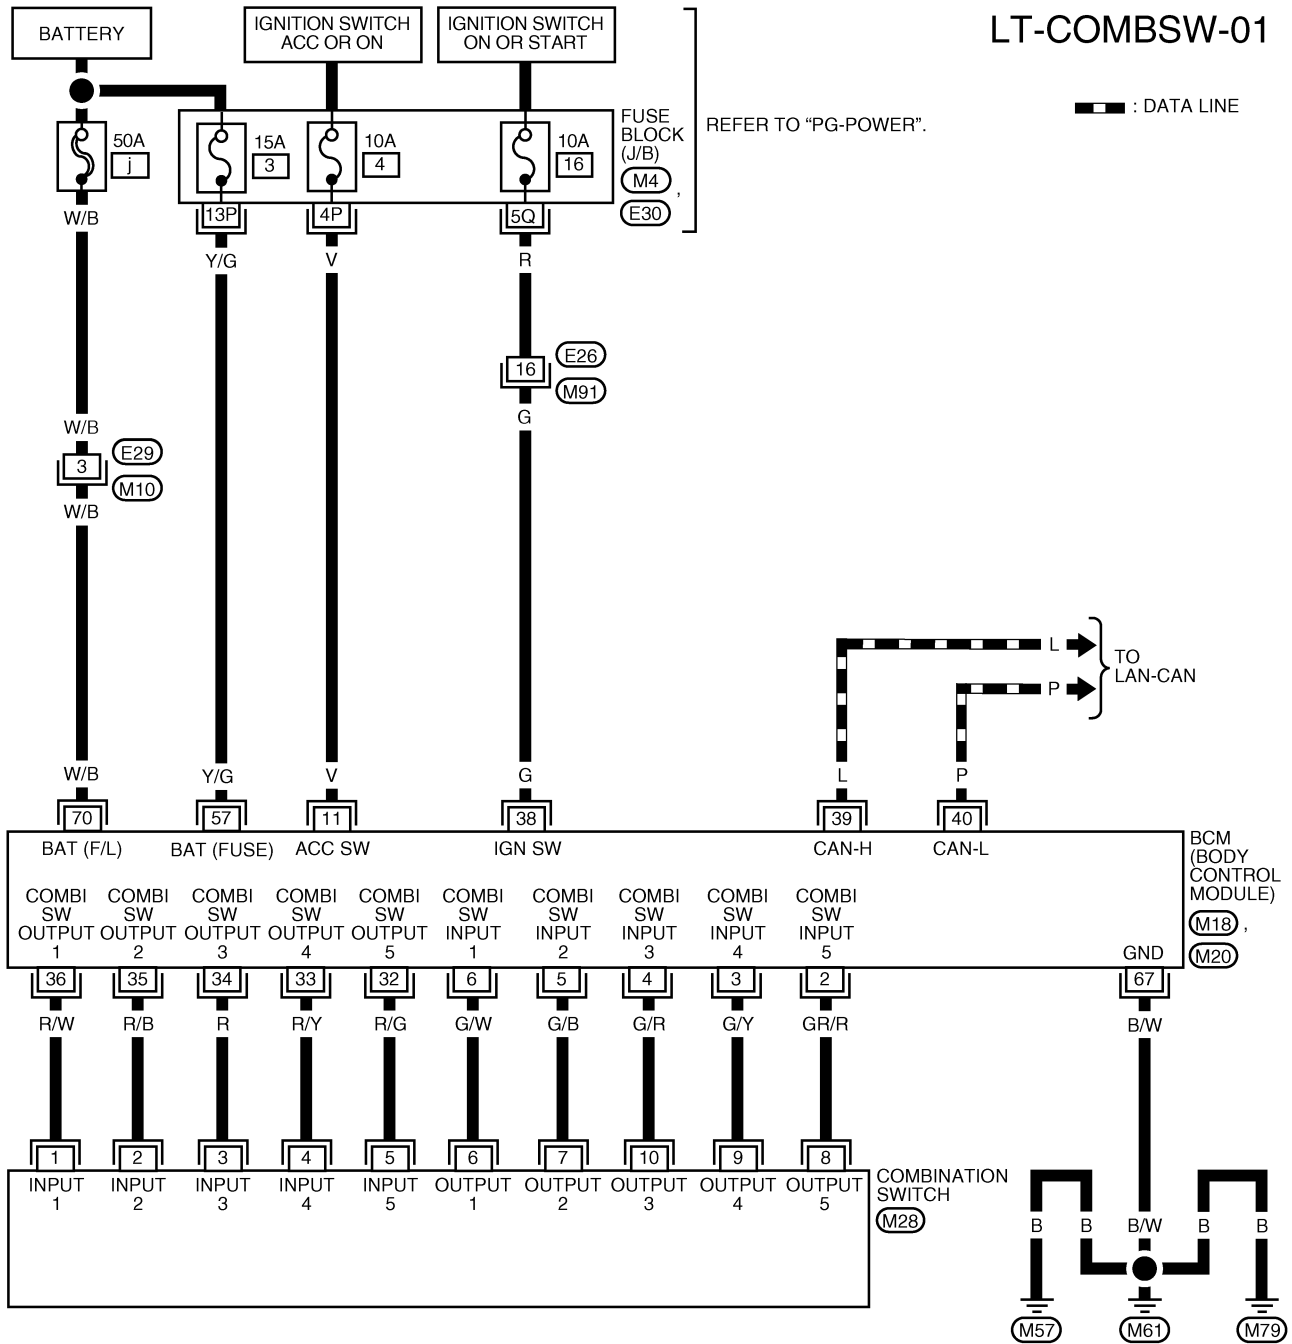

WKWA4703E



# COMBINATION SWITCH

## Combination Switch Reading Function

EKS00FDE

For details, refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

## CONSULT-II Function (BCM)

EKS00FDF

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

## CONSULT-II START PROCEDURE

Refer to [GI-37, "CONSULT-II Start Procedure"](#).

### DATA MONITOR

#### Operation Procedure

1. Touch "COMB SW" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the signals will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

#### Display Item List

Monitor item name "OPERATION OR UNIT"	Contents
TURN SIGNAL R "ON/OFF"	Displays "Turn Right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn Left (ON)/Other (OFF)" status, determined from lighting switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays "Headlamp switch 1 (ON)/Other (OFF)" status, determined from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays "Auto light switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR FOG SW "ON/OFF"	Displays "Front fog lamp switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR WIPER HI "ON/OFF"	Displays "Front Wiper HI (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER LOW "ON/OFF"	Displays "Front Wiper LOW (ON)/Other (OFF)" status, determined from wiper switch signal.

## COMBINATION SWITCH

Monitor item name "OPERATION OR UNIT"		Contents
FR WIPER INT	"ON/OFF"	Displays "Front Wiper INT (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WASHER SW	"ON/OFF"	Displays "Front Washer Switch (ON)/Other (OFF)" status, determined from wiper switch signal.
INT VOLUME	[1 - 7]	Displays intermittent operation knob setting (1 - 7), determined from wiper switch signal.
RR WIPER ON	"ON/OFF"	Displays "Rear Wiper (ON)/(OFF)" status, determined from wiper switch signal.
RR WIPER INT	"ON/OFF"	Displays "Rear Wiper INT (ON)/(OFF)" status, determined from wiper switch signal.
RR WASHER SW	"ON/OFF"	Displays "Rear Washer (ON)/(OFF)" status, determined from wiper switch signal.

# COMBINATION SWITCH

EKS00FDG

## Combination Switch Inspection

### 1. SYSTEM CHECK

1. Referring to table below, check to which system the malfunctioning switch belongs.

System 1	System 2	System 3	System 4	System 5
—	FR WASHER	FR WIPER LO	TURN LH	TURN RH
FR WIPER HI	—	FR WIPER INT	PASSING	HEAD LAMP1
INT VOLUME 1	RR WASHER	—	HEAD LAMP2	HI BEAM
RR WIPER INT	INT VOLUME 3	AUTO LIGHT	—	TAIL LAMP
INT VOLUME 2	RR WIPER ON	—	FR FOG	—

>> GO TO 2.

### 2. SYSTEM CHECK

 With CONSULT-II

#### CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

1. Connect CONSULT-II, and select "COMB SW" on "SELECT TEST ITEM" screen.
2. Select "DATA MONITOR".
3. Select "START" and confirm that other switches in malfunctioning system operate normally.

Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, turn ON-OFF normally.

DATA MONITOR	
MONITOR	
TURN SIGNAL R	OFF
TURN SIGNAL L	OFF
HIBEAM SW	OFF
HEAD LAMP SW1	OFF
HEAD LAMP SW2	OFF
LIGHT SW 1ST	OFF
PASSING SW	OFF
AUTO LIGHT SW	OFF
FR FOG SW	OFF
	Page Down
	RECORD
MODE	BACK
LIGHT	COPY

SKIA7075E

 Without CONSULT-II

Operate combination switch and confirm that other switches in malfunctioning system operate normally.

Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, operate normally.

#### Check results

Other switches in malfunctioning system operate normally.>>Replace lighting switch or wiper switch.


Other switches in malfunctioning system do not operate normally.>>GO TO 3.

# COMBINATION SWITCH

## 3. HARNESS INSPECTION

1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check for continuity between BCM harness connector of the suspect system and the corresponding combination switch connector terminals.

Suspect system	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
1	M18	Input 1	6	M28	6
		Output 1	36		1
2		Input 2	5		7
		Output 2	35		2
3		Input 3	4		10
		Output 3	34		3
4		Input 4	3		9
		Output 4	33		4
5		Input 5	2		8
		Output 5	32		5

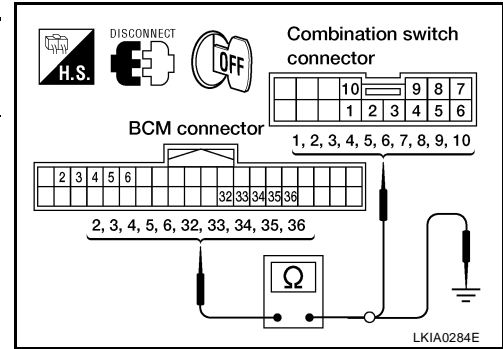

4. Check for continuity between each terminal of BCM harness connector in suspect malfunctioning system and ground.

Suspect system	BCM		Continuity		
	Connector	Terminal			
1	M18	Input 1	6	Ground	No
		Output 1	36		
2		Input 2	5		
		Output 2	35		
3		Input 3	4		
		Output 3	34		
4		Input 4	3		
		Output 4	33		
5		Input 5	2		
		Output 5	32		

**OK or NG**

OK >> GO TO 4.

NG >> Check harness between BCM and combination switch for open or short circuit.

# COMBINATION SWITCH


## 4. BCM OUTPUT TERMINAL INSPECTION

1. Turn lighting switch and wiper switch to OFF.
2. Set wiper dial to position 4.
3. Connect BCM and combination switch connectors.
4. Turn ignition switch ON, and check combination switch input (BCM output) terminal voltage waveform of suspect malfunctioning system.

Suspect system	Combination switch		
	(+)		
	Connector	Terminal	
1	M28	Input 1	1
2		Input 2	2
3		Input 3	3
4		Input 4	4
5		Input 5	5

### OK or NG

- OK >> Open circuit in combination switch, GO TO 5.  
 NG >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#) .

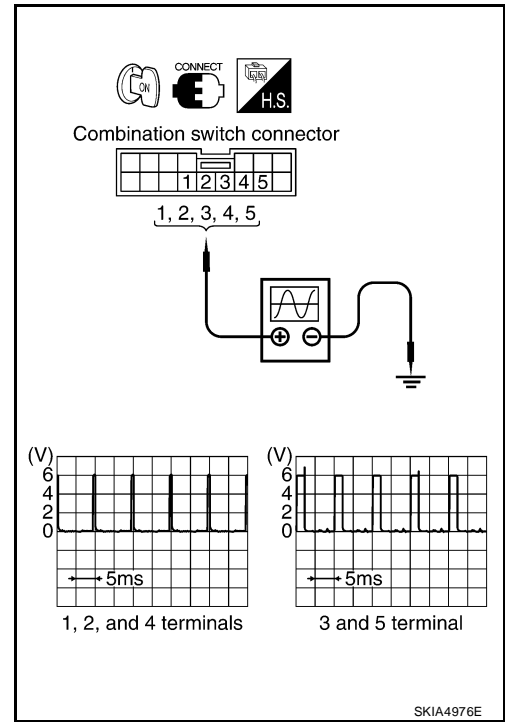

## 5. COMBINATION SWITCH INSPECTION

Referring to table below, perform combination switch inspection.

Procedure									
1	2		3	4		5	6		7
Replace lighting switch.	Confirm check results.	OK	INSPECTION END	Confirm check results.	OK	INSPECTION END	Confirm check results.	OK	INSPECTION END
		NG	Replace wiper switch.		NG	Replace switch base.		NG	Confirm symptom again.

>> Inspection End.

### Removal and Installation

Refer to [LT-86, "Removal"](#) .

### Switch Circuit Inspection

Refer to [LT-91, "Combination Switch Inspection"](#) .

# STOP LAMP

---

## STOP LAMP

PF2:26550

### System Description

EKS00FDJ

Power is supplied at all times

- through 10A fuse [No. 20, located in fuse block (J/B)]
- to stop lamp switch terminal 1.

When the brake pedal is pressed, the stop lamp switch is closed and power is supplied

- through stop lamp switch terminal 2
- to rear combination lamp LH and RH terminal 1, and
- to high-mounted stop lamp terminal +.

Ground is supplied

- to rear combination lamp LH terminal 5
- through grounds B7 and B19, and
- to rear combination lamp RH terminal 5
- through grounds B117 and B132, and
- to high-mounted stop lamp terminal –
- through grounds D403 and D404.


With power and ground supplied, the stop lamps illuminate.

# STOP LAMP

## Wiring Diagram — STOP/L —


EKS00FDK

### LT-STOP/L-01

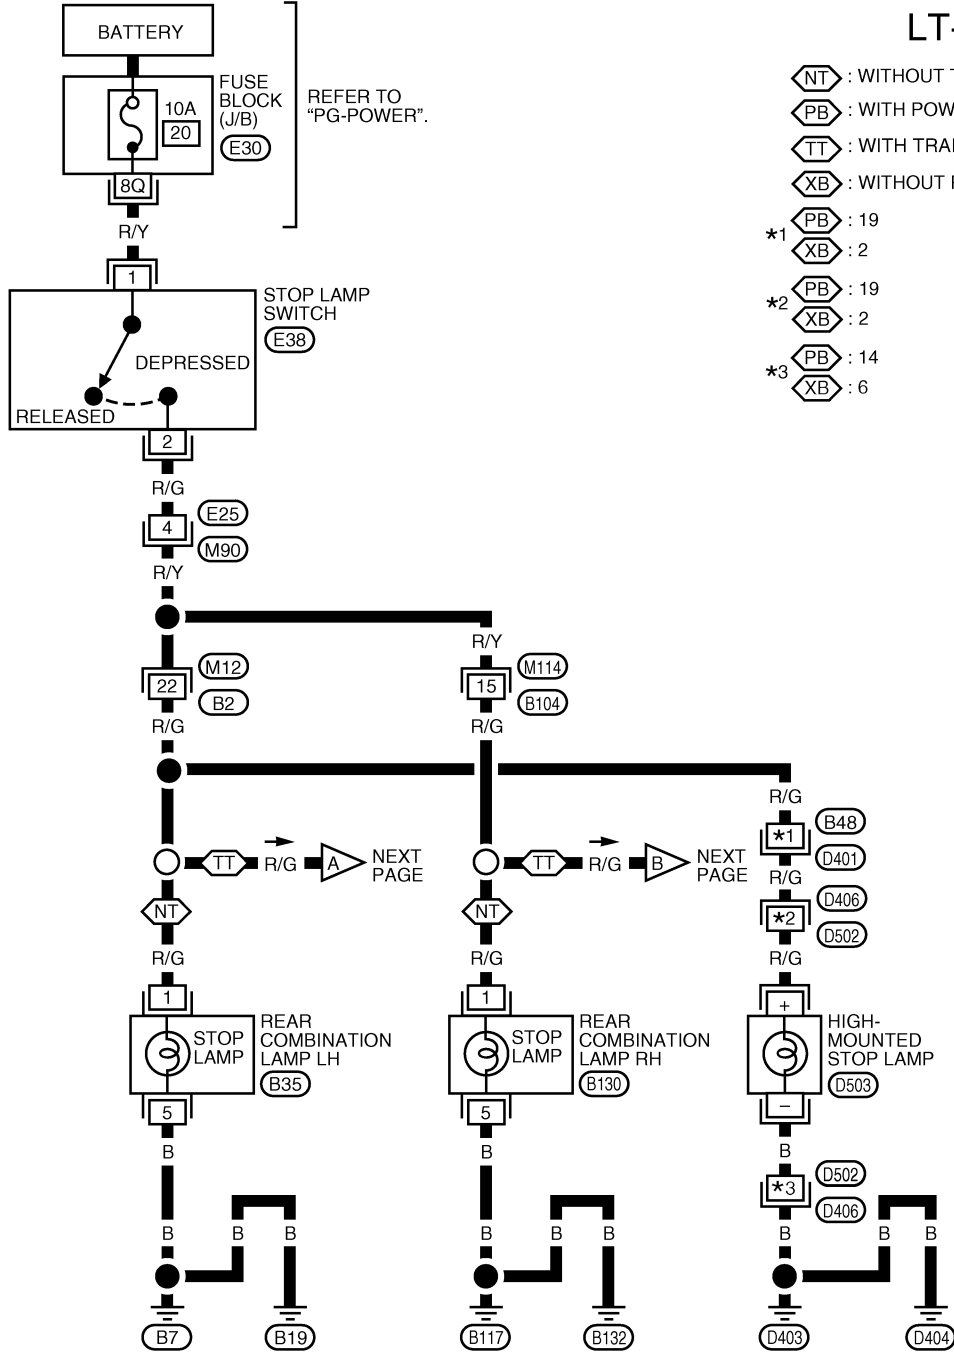

- ⬡NT : WITHOUT TRAILER TOW
- ⬡PB : WITH POWER BACK DOOR
- ⬡TT : WITH TRAILER TOW
- ⬡XB : WITHOUT POWER BACK DOOR
- \*1 ⬡PB : 19
- ⬡XB : 2
- \*2 ⬡PB : 19
- ⬡XB : 2
- \*3 ⬡PB : 14
- ⬡XB : 6

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

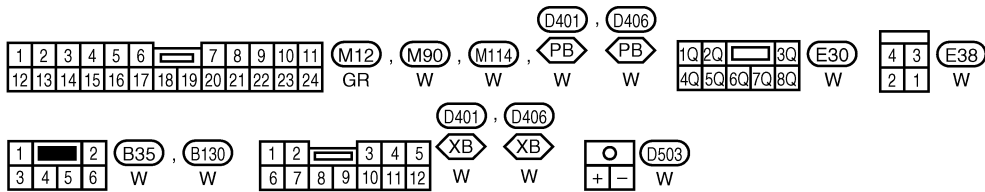

WKWA4704E






# STOP LAMP

## Bulb Replacement HIGH-MOUNTED STOP LAMP

EKS00FDL

### Removal

1. Remove the rear washer nozzle. Refer to [WW-42, "Rear Washer Nozzle"](#).
2. Disconnect the electrical connector.
3. Remove the nuts and remove the high-mounted stop lamp.
4. Turn the bulb socket counterclockwise to remove it from the high-mounted stop lamp housing.
5. Pull the bulb from the socket.

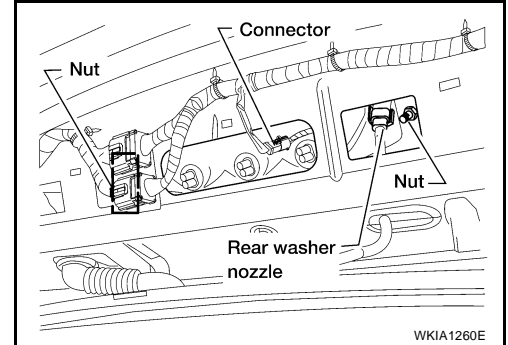

### Installation

Installation is in the reverse order of removal.

## STOP LAMP


Refer to [LT-113, "Bulb Replacement"](#).

## Removal and Installation HIGH-MOUNTED STOP LAMP

EKS00FDM

### Removal

1. Remove the rear washer nozzle. Refer to [WW-42, "Rear Washer Nozzle"](#).
2. Disconnect the electrical connector.
3. Remove the nuts and remove the high-mounted stop lamp.

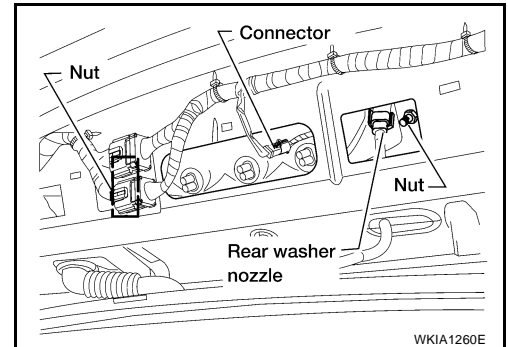

### Installation

Installation is in the reverse order of removal.

## STOP LAMP

Refer to [LT-113, "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# BACK-UP LAMP

PF2:26550




## BACK-UP LAMP

### Wiring Diagram — BACK/L —

EKS00FDN

#### LT-BACK/L-01

⬡(NT) : WITHOUT TRAILER TOW  
 ⬡(TT) : WITH TRAILER TOW

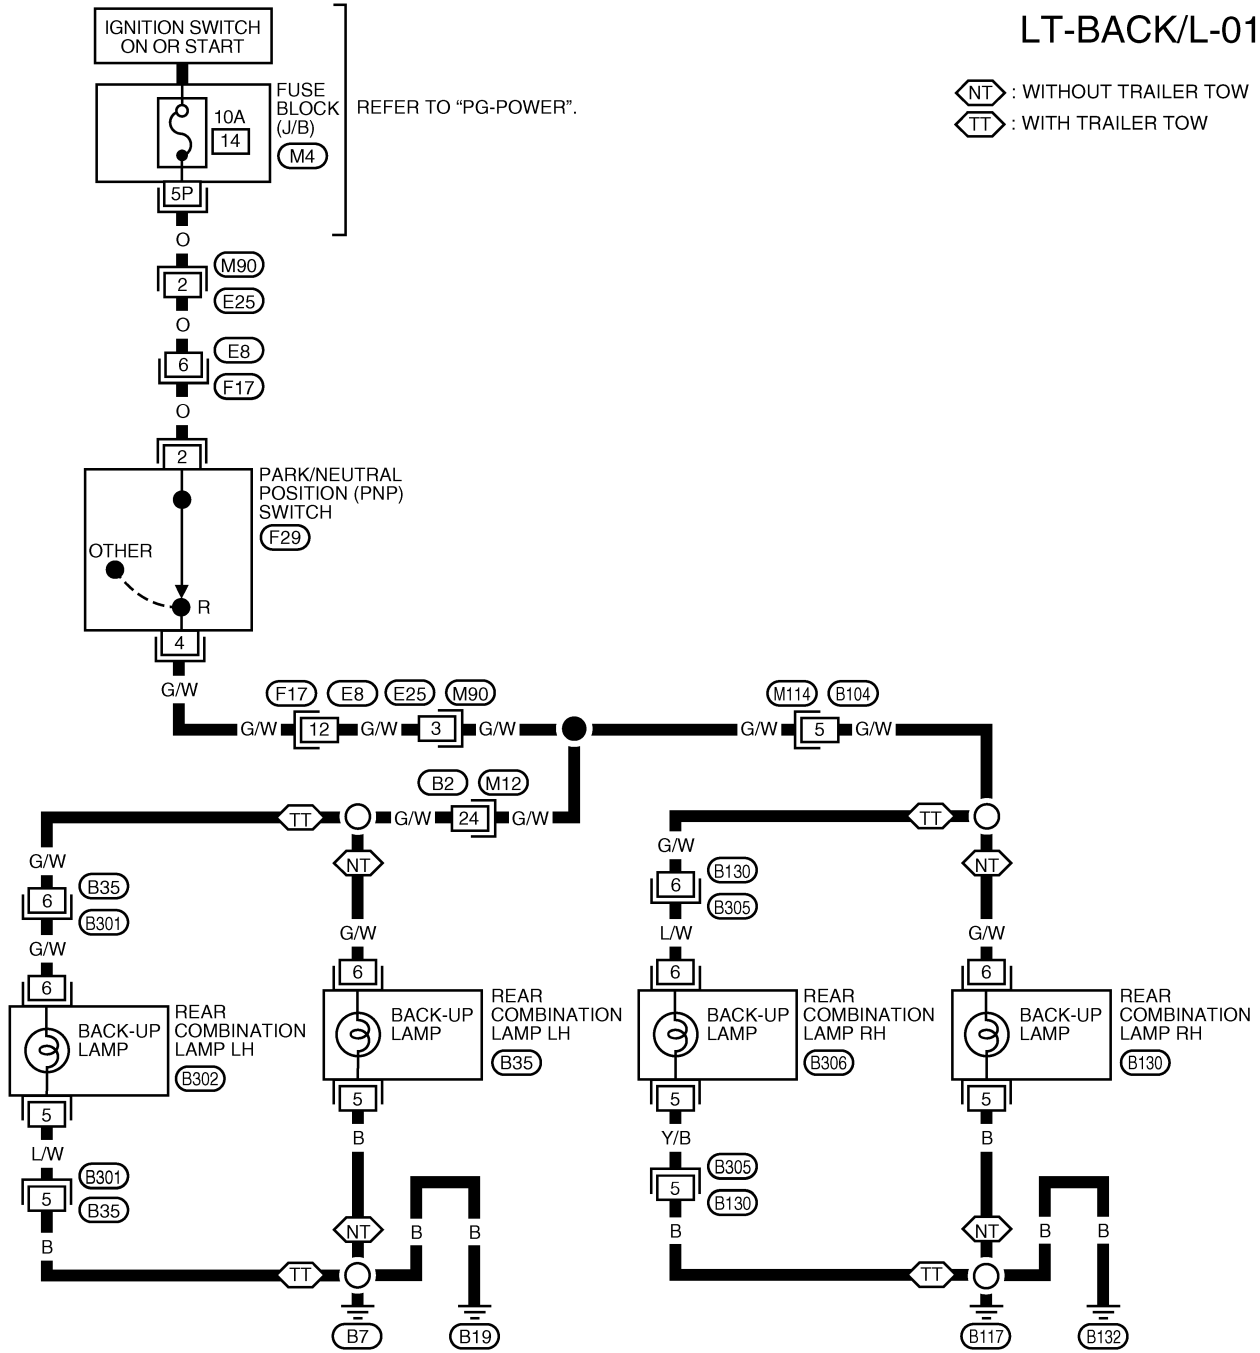

WKWA4706E

# BACK-UP LAMP

---

## Bulb Replacement

EKS00FDO

Refer to [LT-113, "Bulb Replacement"](#) .

A

## Removal and Installation

EKS00FDP

Refer to [LT-113, "Removal and Installation"](#) .

B

C

D

E

F

G

H

I

J

LT

L

M


# PARKING, LICENSE PLATE AND TAIL LAMPS

## PARKING, LICENSE PLATE AND TAIL LAMPS

PF2:26550

### Component Parts and Harness Connector Location

EKS00F00

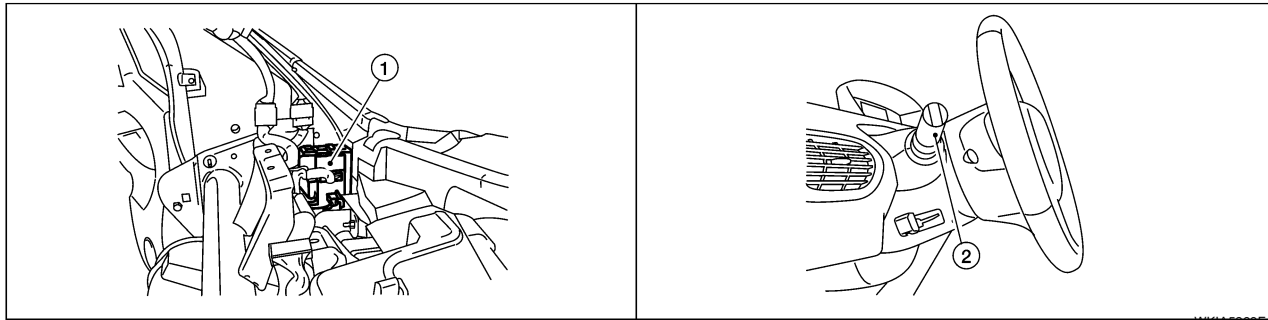

WKTAS268E

1. BCM M18, M20 (view with instrument panel removed)
2. Combination switch (lighting switch) M28

### System Description

EKS00FDR

Control of the parking, license plate, and tail lamp operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST position, the BCM (body control module) receives input signal requesting the parking, license plate and tail lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the parking, license plate and tail lamps, which then illuminate. Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- through 15A fuse (No. 41, located in the IPDM E/R)
- to tail lamp relay, located in the IPDM E/R, and
- to CPU of the IPDM E/R, and
- through 15A fuse (No. 34 located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 57.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E9, E15 and E24.

### OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the parking, license plate and tail lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU in the IPDM E/R controls the tail lamp relay coil, which when energized, directs power

- through IPDM E/R terminal 22

# PARKING, LICENSE PLATE AND TAIL LAMPS

- to front combination lamp LH and RH terminal 5
- to license plate lamp LH and RH terminal +
- to rear combination lamp LH and RH terminal 2.

Ground is supplied

- to front combination lamp LH and RH terminal 6
- through grounds E9, E15 and E24, and
- to license plate lamp LH and RH terminal –
- through grounds D403 and D404, and
- to rear combination lamp LH terminal 5
- through grounds B7 and B19, and
- to rear combination lamp RH terminal 5
- through grounds B117 and B132.

With power and ground supplied, the parking, license plate and tail lamps illuminate.

## COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

## EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST (or 2ND) position and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the parking, license and tail lamps remain illuminated for 5 minutes, then the parking, license plate and tail lamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

## CAN Communication System Description

EKS00FDS

Refer to [LAN-4, "SYSTEM DESCRIPTION"](#) .

A

B

C

D

E

F

G

H

I

J

LT


L

M

# PARKING, LICENSE PLATE AND TAIL LAMPS

## Schematic

EKS00FDT

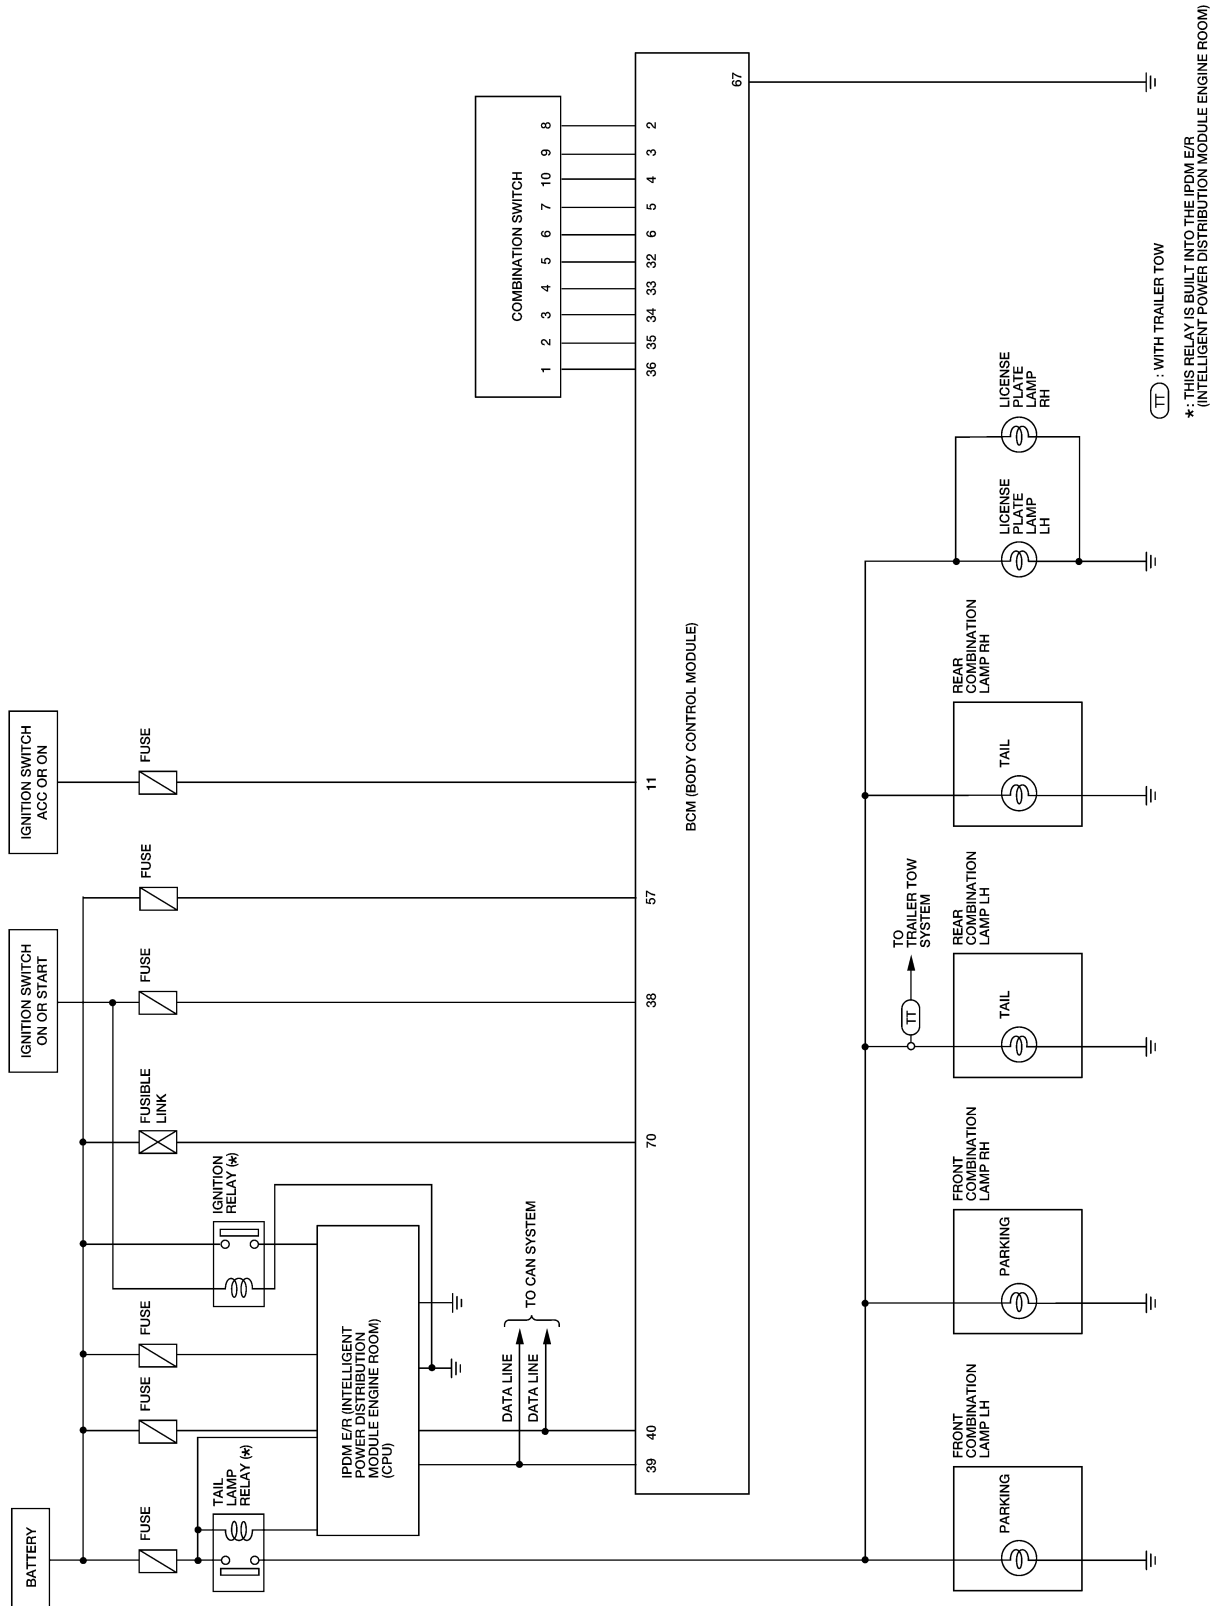

WKWA4707E

# PARKING, LICENSE PLATE AND TAIL LAMPS



EKS00FDU

## Wiring Diagram — TAIL/L —




### LT-TAIL/L-01

— : DATA LINE

REFER TO "PG-POWER".

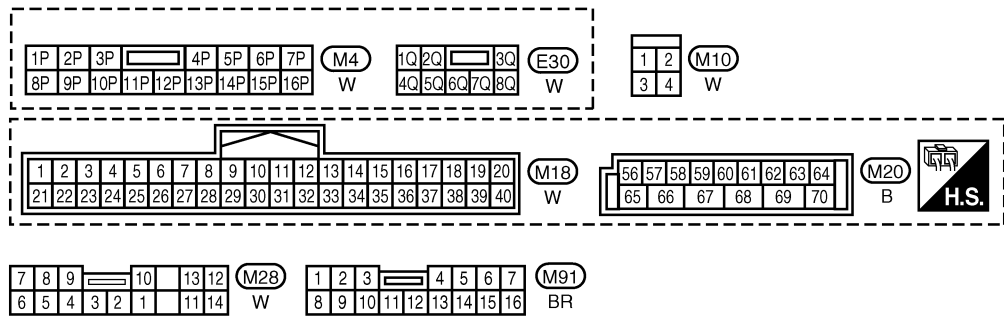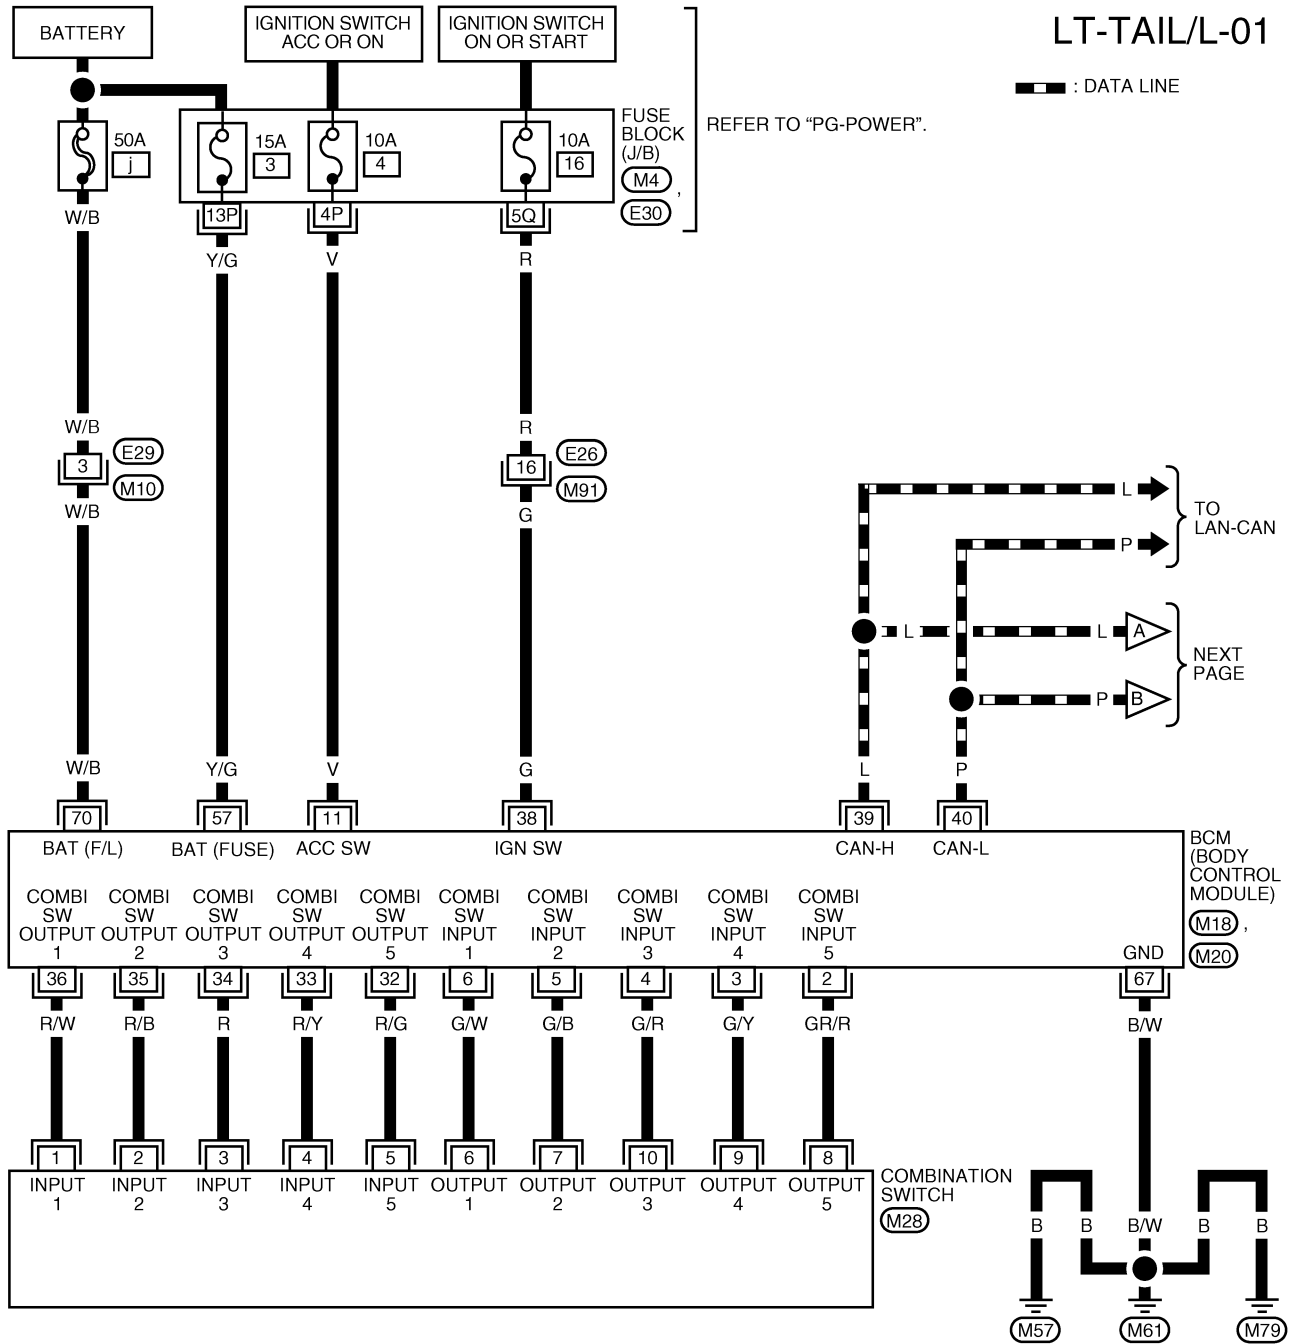

# PARKING, LICENSE PLATE AND TAIL LAMPS

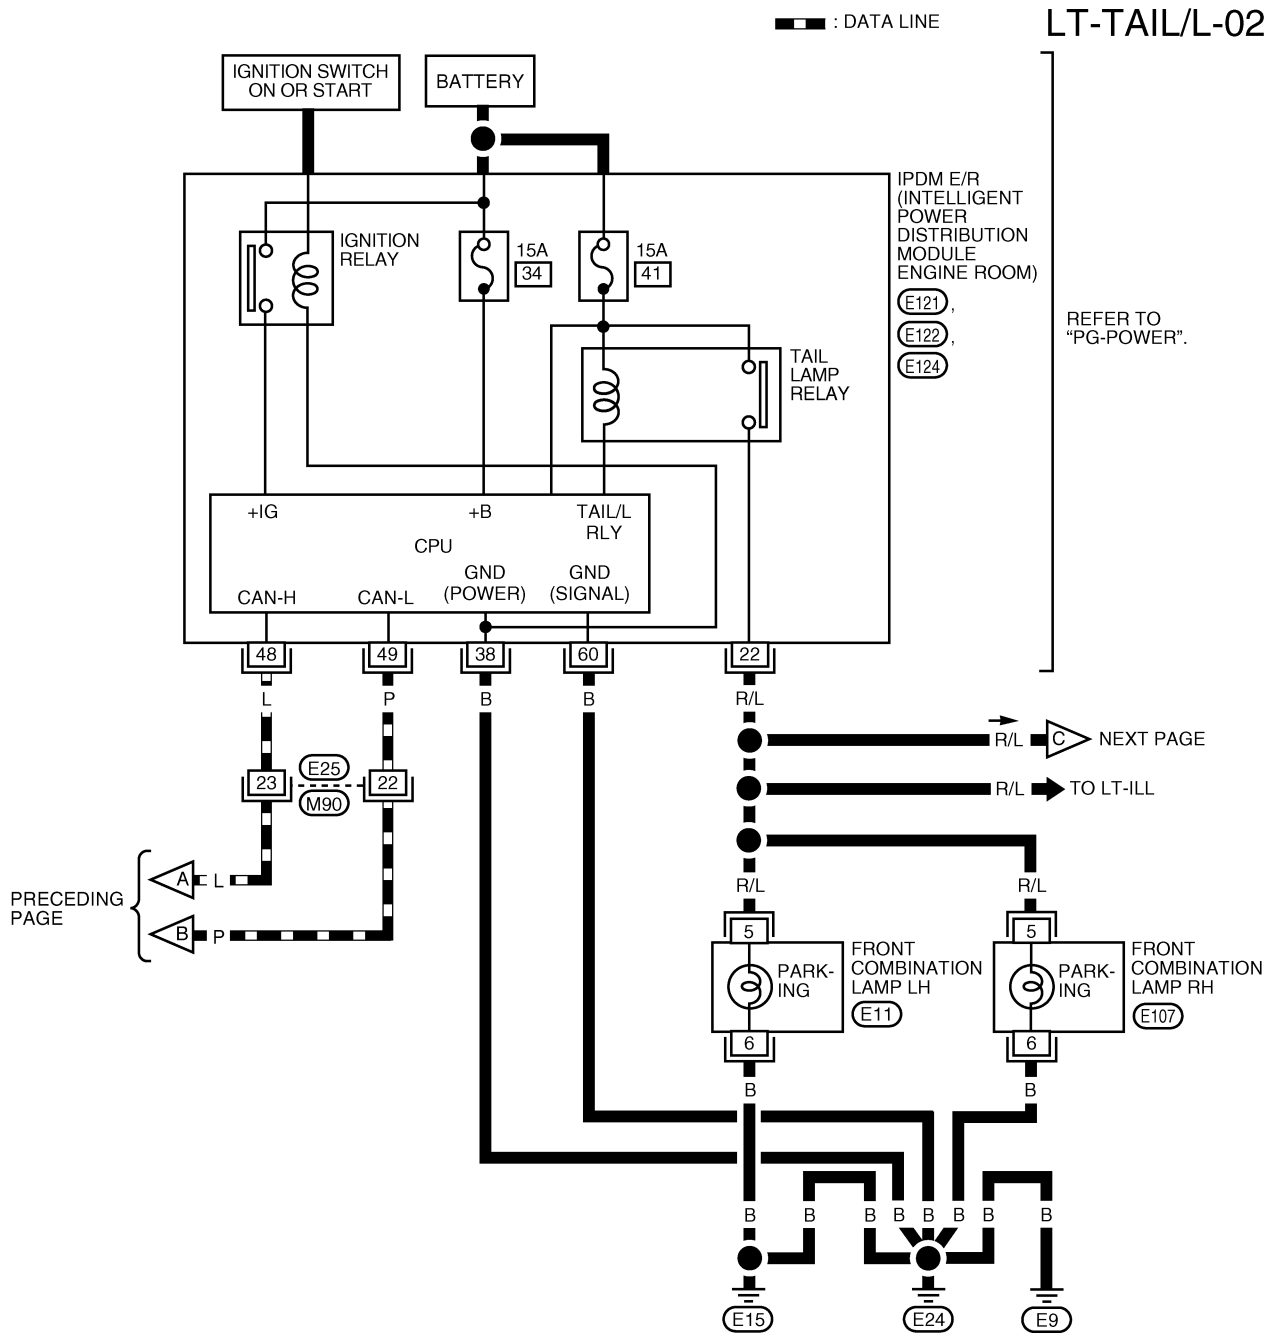


WKWA4709E




# PARKING, LICENSE PLATE AND TAIL LAMPS

## LT-TAIL/L-03

PRECEDING PAGE


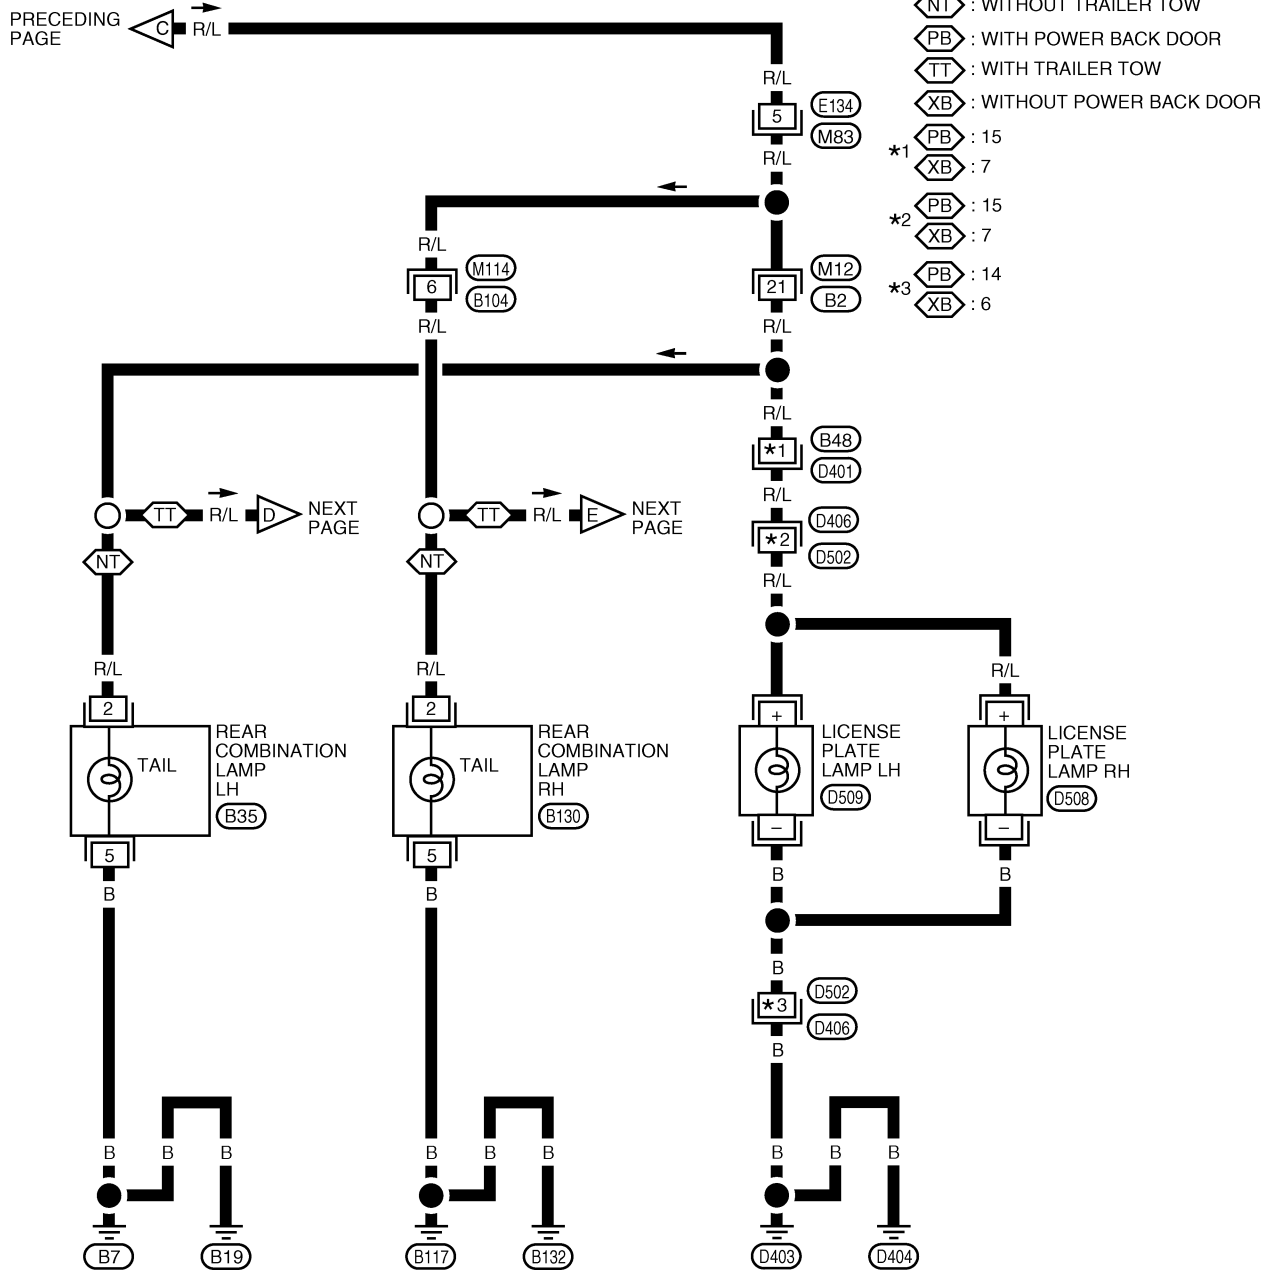


- (NT) : WITHOUT TRAILER TOW
- (PB) : WITH POWER BACK DOOR
- (TT) : WITH TRAILER TOW
- (XB) : WITHOUT POWER BACK DOOR
- \*1 (PB) : 15  
(XB) : 7
- \*2 (PB) : 15  
(XB) : 7
- \*3 (PB) : 14  
(XB) : 6

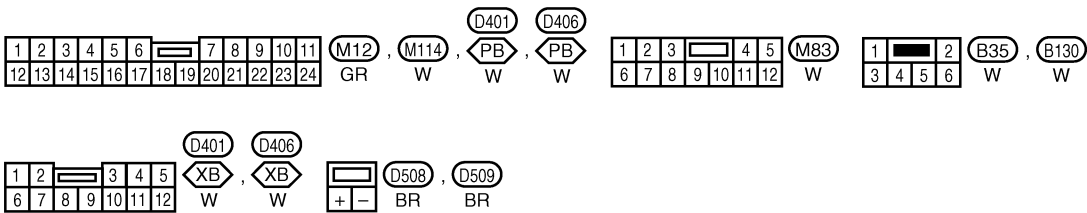

# PARKING, LICENSE PLATE AND TAIL LAMPS

LT-TAIL/L-04

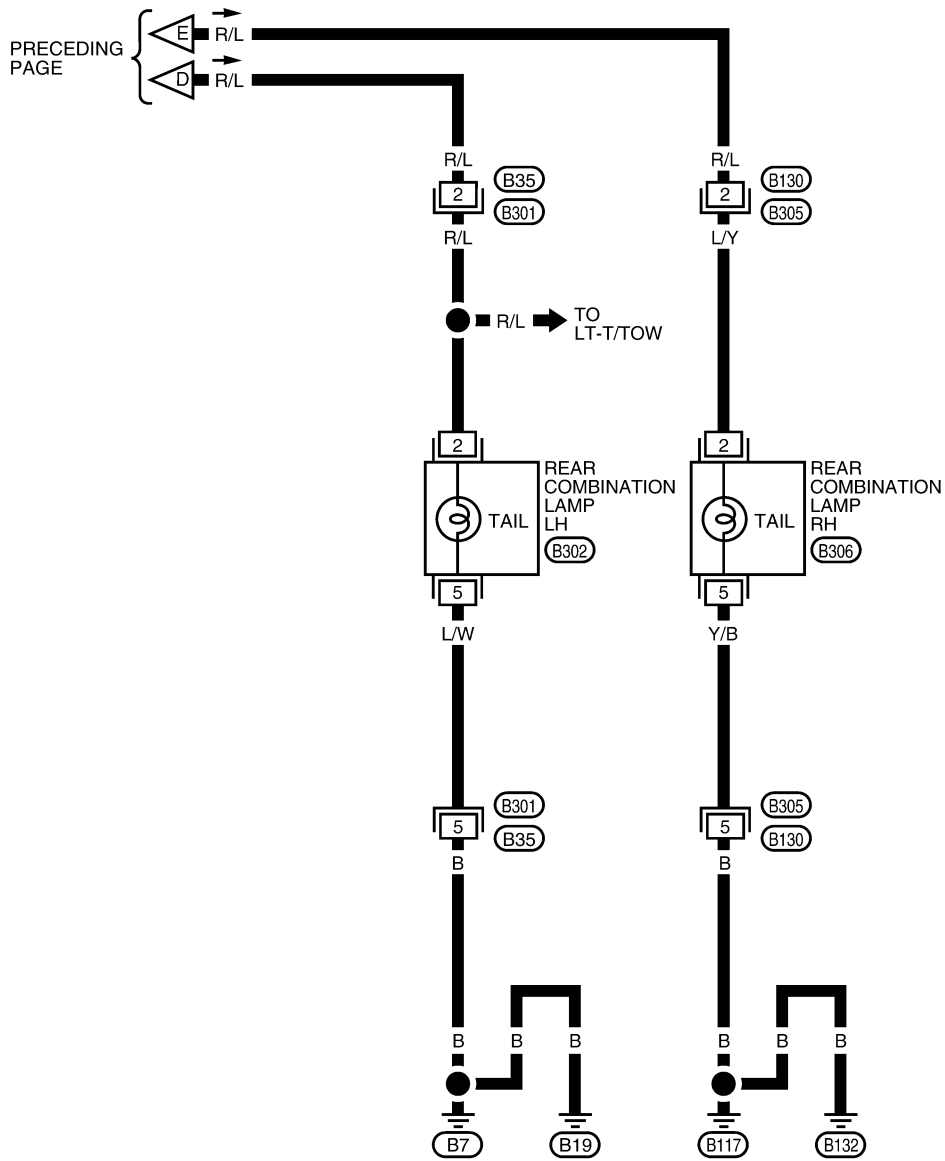

WKWA4711E

# PARKING, LICENSE PLATE AND TAIL LAMPS

## Terminals and Reference Values for BCM

EKS00FDV

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

## Terminals and Reference Values for IPDM E/R

EKS00FDW

Refer to [PG-27, "Terminals and Reference Values for IPDM E/R"](#) .

## How to Proceed With Trouble Diagnosis

EKS00FDX

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-100, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-107, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do the parking, license and tail lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

## Preliminary Check

EKS00FDY

### CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-15, "BCM Power Supply and Ground Circuit Check"](#) and [PG-31, "IPDM E/R Power/Ground Circuit Inspection"](#) .

## CONSULT-II Functions

EKS00FDZ

Refer to [LT-13, "CONSULT-II Function \(BCM\)"](#) in HEADLAMP (FOR USA).

Refer to [LT-15, "CONSULT-II Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

## Parking, License Plate and/or Tail Lamps Do Not Illuminate

EKS00FE0

### 1. CHECK COMBINATION SWITCH INPUT SIGNAL

☐ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "LIGHT SW 1ST" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in 1ST position : LIGHT SW 1ST ON**

☒ Without CONSULT-II

Refer to [LT-91, "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-91, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
LIGHT SW 1ST	ON

SKIA5956E

# PARKING, LICENSE PLATE AND TAIL LAMPS

## 2. ACTIVE TEST

① With CONSULT-II

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "TAIL LAMP" on "SELECT TEST ITEM" screen.
3. Touch "ON" on "ACTIVE TEST" screen.
4. Make sure parking, license plate and tail lamp operation.

**Parking, license plate and tail lamp should operate**

⊗ Without CONSULT-II

1. Start auto active test. Refer to [PG-23, "Auto Active Test"](#).
2. Make sure parking, license plate and tail lamp operation.

**Parking, license plate and tail lamp should operate**

ACTIVE TEST			
TAIL LAMP		OFF	
ON			
MODE	BACK	LIGHT	COPY

SKIA5957E

OK or NG

- OK >> GO TO 3.  
 NG >> GO TO 4.

## 3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "TAIL&CLR REQ" turns ON when lighting switch is in 1ST position.

**When lighting switch is in 1ST position : TAIL&CLR REQ ON**

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-33, "Removal and Installation of IPDM E/R"](#).
- NG >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#).

DATA MONITOR			
MONITOR			
TAIL&CLR REQ		ON	
RECORD			
MODE	BACK	LIGHT	COPY

SKIA5958E

# PARKING, LICENSE PLATE AND TAIL LAMPS

## 4. CHECK INPUT SIGNAL


Ⓜ With CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp, license plate lamp and rear combination lamp connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "TAIL LAMP" on "SELECT TEST ITEM" screen.
6. Touch "ON" on "ACTIVE TEST" screen.
7. When tail lamp is operating, check voltage between front combination lamp, license plate lamp, rear combination lamp harness connector and ground.


ⓧ Without CONSULT-II

1. Start auto active test. Refer to [PG-23, "Auto Active Test"](#).
2. When tail lamp is operating, check voltage between front combination lamp, license plate lamp, rear combination lamp harness connector and ground.


Terminals		Terminal	(-)	Voltage
(+)				
Front combination lamp connector		4	Ground	Battery voltage
RH	E107			
LH	E11			

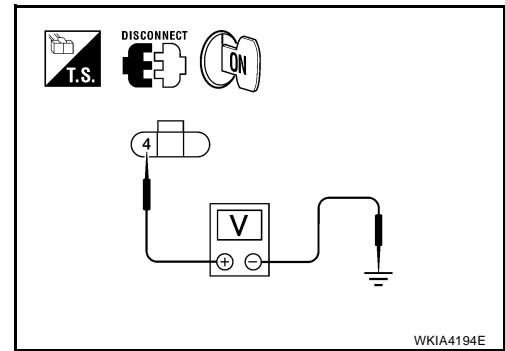

License plate lamp		Terminal	(-)	Voltage
(+)				
Connector		+	Ground	Battery voltage
RH	D508			
LH	D509			

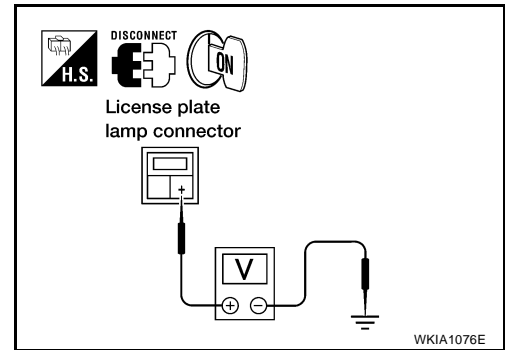

Rear combination lamp			Terminal	(-)	Voltage
(+)					
Connector			2	Ground	Battery voltage
RH	B130 (without trailer tow) B306 (with trailer tow)				
LH	B35 (without trailer tow) B302 (with trailer tow)				

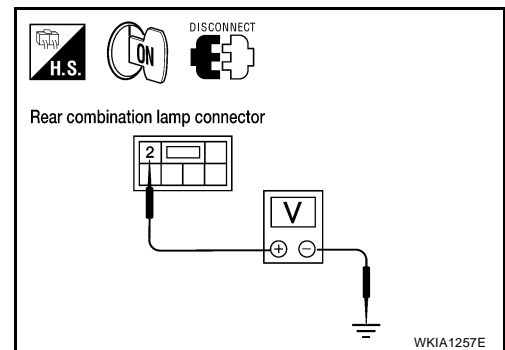

OK or NG


- OK >> GO TO 6.  
NG >> GO TO 5.

# PARKING, LICENSE PLATE AND TAIL LAMPS

## 5. CHECK PARKING, LICENSE PLATE AND TAIL LAMP CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp harness connector.

A		B		Continuity	
IPDM E/R connector	Terminal	Front combination lamp connector	Terminal		
E122	22	RH	E107	4	Yes
		LH	E11		

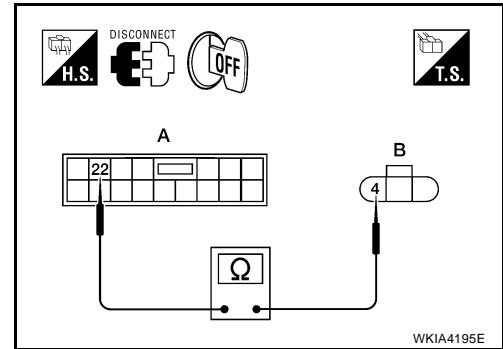


4. Check continuity between IPDM E/R harness connector and license plate lamp harness connector.

IPDM E/R		License plate lamp		Continuity	
Connector	Terminal	Connector	Terminal		
E122	22	RH	D508	+	Yes
		LH	D509		

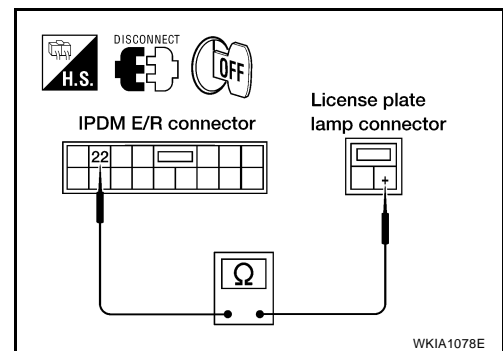

5. Check continuity between IPDM E/R harness connector and rear combination lamp harness connector.

IPDM E/R		Rear combination lamp		Continuity	
Connector	Terminal	Connector	Terminal		
E122	22	RH	B130 (without trailer tow) B306 (with trailer tow)	2	Yes
		LH	B35 (without trailer tow) B302 (with trailer tow)		

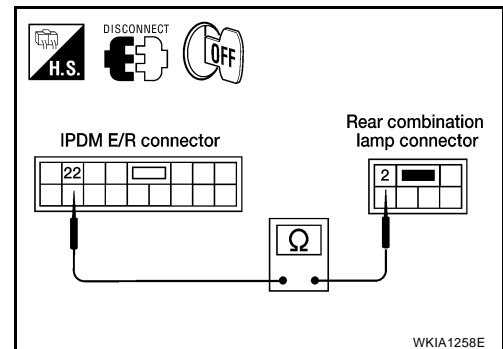

### OK or NG


- OK >> Replace IPDM E/R. Refer to [PG-33, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

# PARKING, LICENSE PLATE AND TAIL LAMPS

## 6. CHECK GROUND


1. Turn ignition switch OFF.
2. Check continuity between front combination lamp harness connector and ground.

Front combination lamp connector		Terminal	Ground	Continuity
RH	E107	5		
LH	E11			

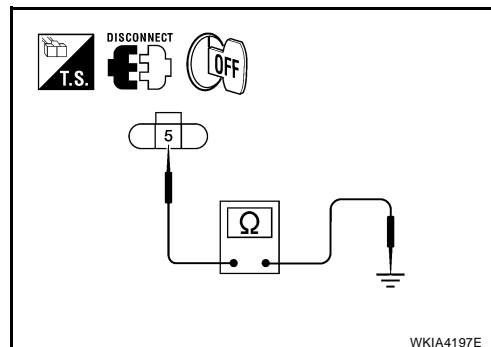


3. Check continuity between license lamp plate harness connector and ground.

License plate lamp		Terminal	Ground	Continuity
RH	D508	-		
LH	D509			

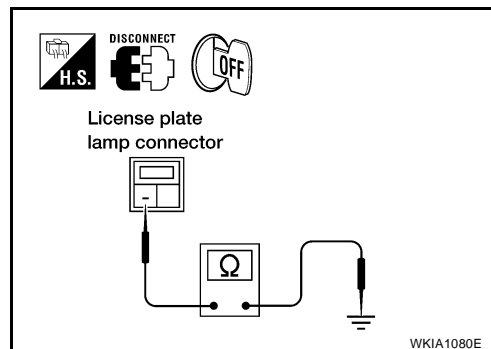

4. Check continuity between rear combination lamp harness connector and ground.

Rear combination lamp		Terminal	Ground	Continuity
RH	B130 (without trailer tow) B306 (with trailer tow)	5		
LH	B35 (without trailer tow) B302 (with trailer tow)			

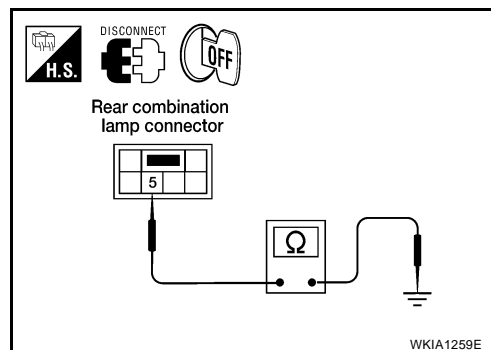

### OK or NG

- OK >> Check bulbs.
- NG >> Repair harness or connector.

## Parking, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)

EKS00FE1

### 1. CHECK IPDM E/R

1. Turn ignition switch ON. Turn the combination switch (lighting switch) to the OFF position. Turn ignition switch OFF.
2. Verify that the parking, license plate, and tail lamps turn on and off after approximately 10 minutes.

### OK or NG

- OK >> Ignition relay malfunction. Refer to [PG-20, "Function of Detecting Ignition Relay Malfunction"](#).
- NG >> Inspection End.

# PARKING, LICENSE PLATE AND TAIL LAMPS

---

EKS00FE2

## **Bulb Replacement FRONT PARKING LAMP**

Refer to [LT-26, "FRONT TURN SIGNAL/PARKING LAMP"](#) .

## **LICENSE PLATE LAMP**

### **Removal**

1. Remove back door lower finisher. Refer to [EI-37, "BACK DOOR LOWER FINISHER"](#) .
2. Remove license plate lamp socket.
3. Remove license plate lamp.

### **Installation**

Installation is in the reverse order of removal.

## **TAIL LAMP**

Refer to [LT-113, "Bulb Replacement"](#) .

## **Removal and Installation FRONT PARKING LAMP**

EKS00IBJ

Refer to [LT-26, "Removal and Installation"](#) .

## **LICENSE PLATE LAMP**

### **Removal**

1. Remove license plate finisher. Refer to [EI-24, "LICENSE LAMP FINISHER"](#) .
2. Remove license plate lamp.

### **Installation**

Installation is in the reverse order of removal.

## **TAIL LAMP**

Refer to [LT-113, "Removal and Installation"](#) .



# REAR COMBINATION LAMP

PF2:26554

## REAR COMBINATION LAMP

### Bulb Replacement REMOVAL

EKS00FE4

1. Remove rear lower finisher assembly. Refer to [EI-37, "REAR LOWER FINISHER ASSEMBLY"](#) .
2. Turn rear combination lamp socket counterclockwise and remove from rear combination lamp.
3. Remove bulb from rear combination lamp socket. .


### INSTALLATION

Installation is in the reverse order of removal.

### Removal and Installation REMOVAL

EKS00FE5

1. Remove rear lower finisher assembly. Refer to [EI-37, "REAR LOWER FINISHER ASSEMBLY"](#) .
2. Turn rear combination lamp socket counterclockwise and remove rear combination lamp.
3. Remove rear combination lamp bolts.
4. Pull rear combination lamp to remove from vehicle.

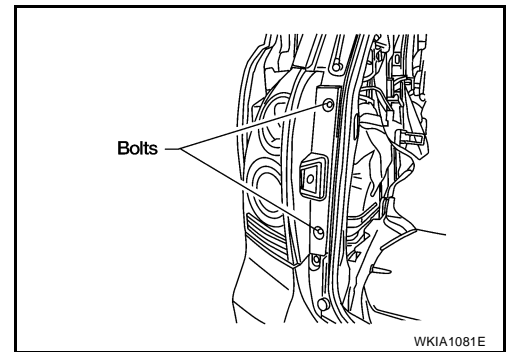


### INSTALLATION

Installation is in the reverse order of removal.

#### NOTE:

- Install rear combination lamp harness and grommet so that paint mark on grommet is at top and harness points down.

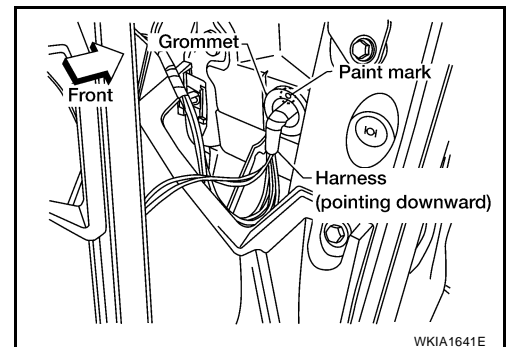

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M


# TRAILER TOW

PF9:93020

## TRAILER TOW

### Component Parts and Harness Connector Location

EKS00FE6

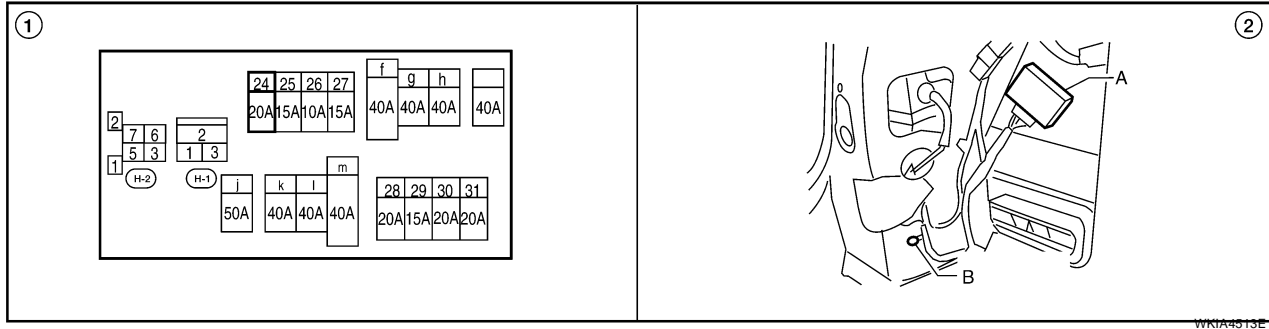

1. Fuse and fusible link box

2. A. Trailer tow control unit B303  
B. Trailer tow ground  
(View with rear lower finisher assembly LH removed)

WKT44513E

## System Description

EKS00FE7

Power is supplied at all times

- through 20A fuse (No. 24, located in the fuse and fusible link box)
- to trailer tow control unit terminal 7.

Ground is supplied

- to trailer tow control unit terminal 5, and
- to trailer connector terminal 4
- through grounds B7 and B19.

## TRAILER TAIL LAMP OPERATION

With the lighting switch in the parking and tail lamp ON (1ST) position, AUTO position (and the auto light system is activated) or headlamp ON (2ND) position, power is supplied

- through rear combination lamp LH
- to trailer tow control unit terminal 3.

The trailer tail lamps are controlled by the trailer tow control unit. The trailer tow control unit supplies power

- through trailer tow control unit terminal 1
- to trailer connector terminal 3.

## TRAILER STOP, TURN SIGNAL AND HAZARD LAMP OPERATION

The trailer stop, turn signal and hazard lamps are all controlled by the trailer tow control unit. The trailer tow control unit regulates the amount of voltage supplied to the trailer lamps. If either turn signal or the hazard lamps are turned on and the trailer tow control unit gets a brake lamp input, the trailer tow control unit supplies more voltage to the trailer lamps to make them illuminate brighter.

Stop lamp input is supplied

- through rear combination lamp LH
- to trailer tow control unit terminal 8.

Left turn signal and hazard lamp input is supplied

- through rear combination lamp LH
- to trailer tow control unit terminal 4.

Right turn signal and hazard lamp input is supplied

- through rear combination lamp RH
- to trailer tow control unit terminal 9.

Based on the stop lamp, turn signal lamp and hazard lamp inputs to the trailer tow control unit, power is supplied to trailer stop/turn lamp LH

- through trailer tow control unit terminal 2
- to trailer harness connector terminal 2.

## TRAILER TOW

---

Power is also supplied to trailer stop/turn lamp RH

- through trailer tow control unit terminal 6
- to trailer harness connector terminal 1.

A

B

C

D

E

F

G

H

I

J

**LT**

L



M

# TRAILER TOW

## Wiring Diagram — T/TOW —

EKS00FEB

LT-T/TOW-01

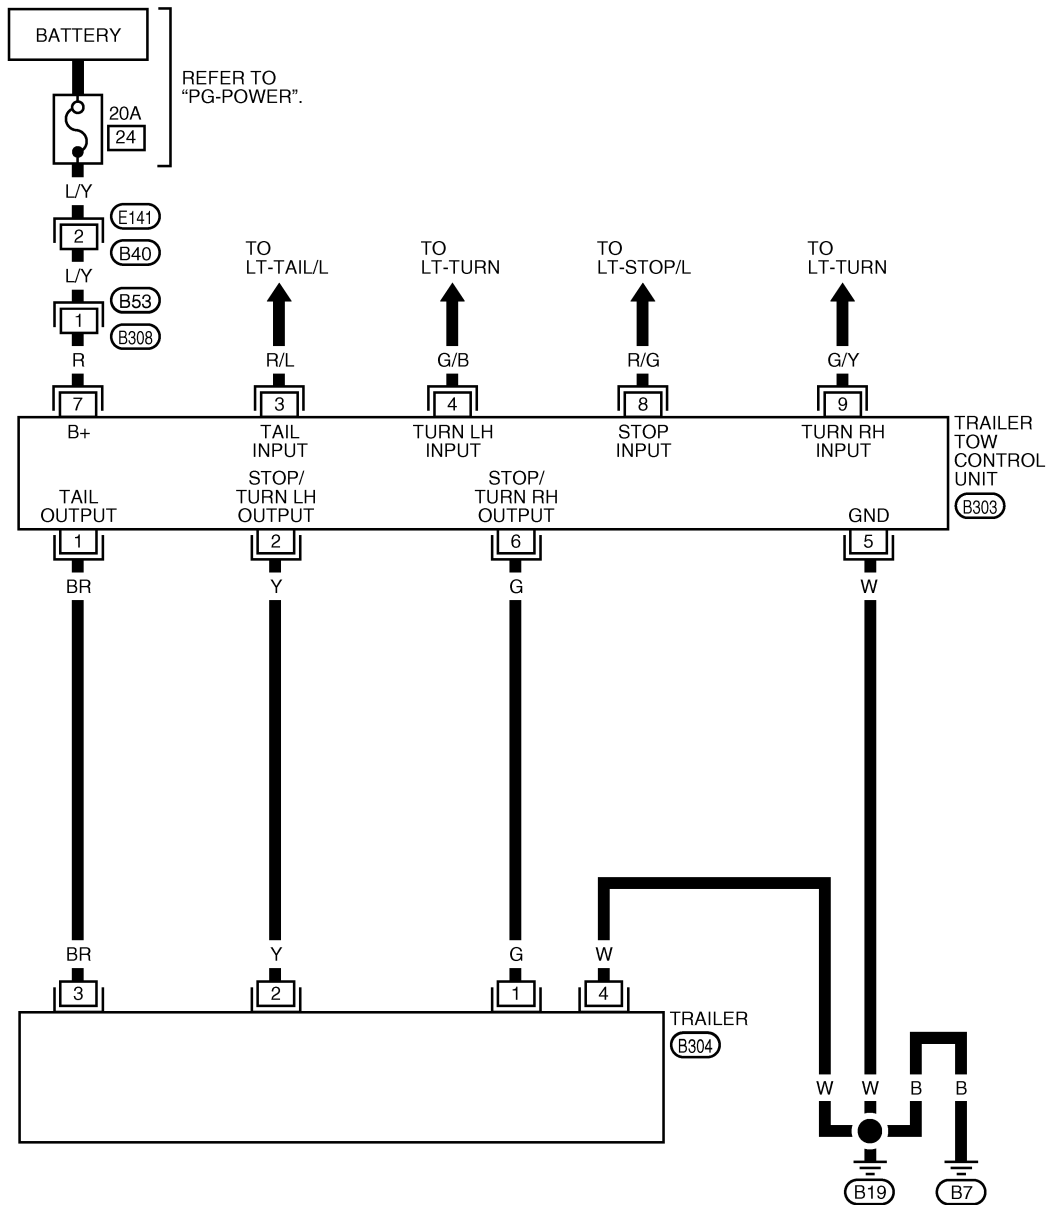

WKWA4712E

# TRAILER TOW

EKS00FE9

## Trouble Diagnoses TRAILER TOW CONTROL UNIT INSPECTION TABLE

Terminal No.	Wire color	Item	Condition	Voltage (Approx.)
1	BR	Tail lamps signal output	When tail lamps operate	Battery voltage
			All other conditions	0V
2	Y	Stop/LH turn lamp (output)	When brake pedal is depressed	Battery voltage
			When LH turn lamps or hazard lamps operate	Battery voltage (intermittently)
			All other conditions	0V
3	R/L	Tail lamps signal input	When tail lamps operate	Battery voltage
			All other conditions	0V
4	G/B	LH turn lamps input	When LH turn lamps or hazard lamps operate	Battery voltage (intermittently)
			All other conditions	0V
5	W	Ground	—	—
6	G	Stop/RH turn lamp (output)	When brake pedal is depressed	Battery voltage
			When RH turn lamps or hazard lamps operate	Battery voltage (intermittently)
			All other conditions	0V
7	R	Power supply	—	Battery voltage
8	R/G	Stop lamps signal input	When brake pedal is depressed	Battery voltage
			When brake pedal is released	0V
9	G/Y	RH turn lamps input	When RH turn lamps or hazard lamps operate	Battery voltage (intermittently)
			All other conditions	0V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

LT


# INTERIOR ROOM LAMP

PFP:26410

## INTERIOR ROOM LAMP

### Component Parts and Harness Connector Location

EKS00FEA

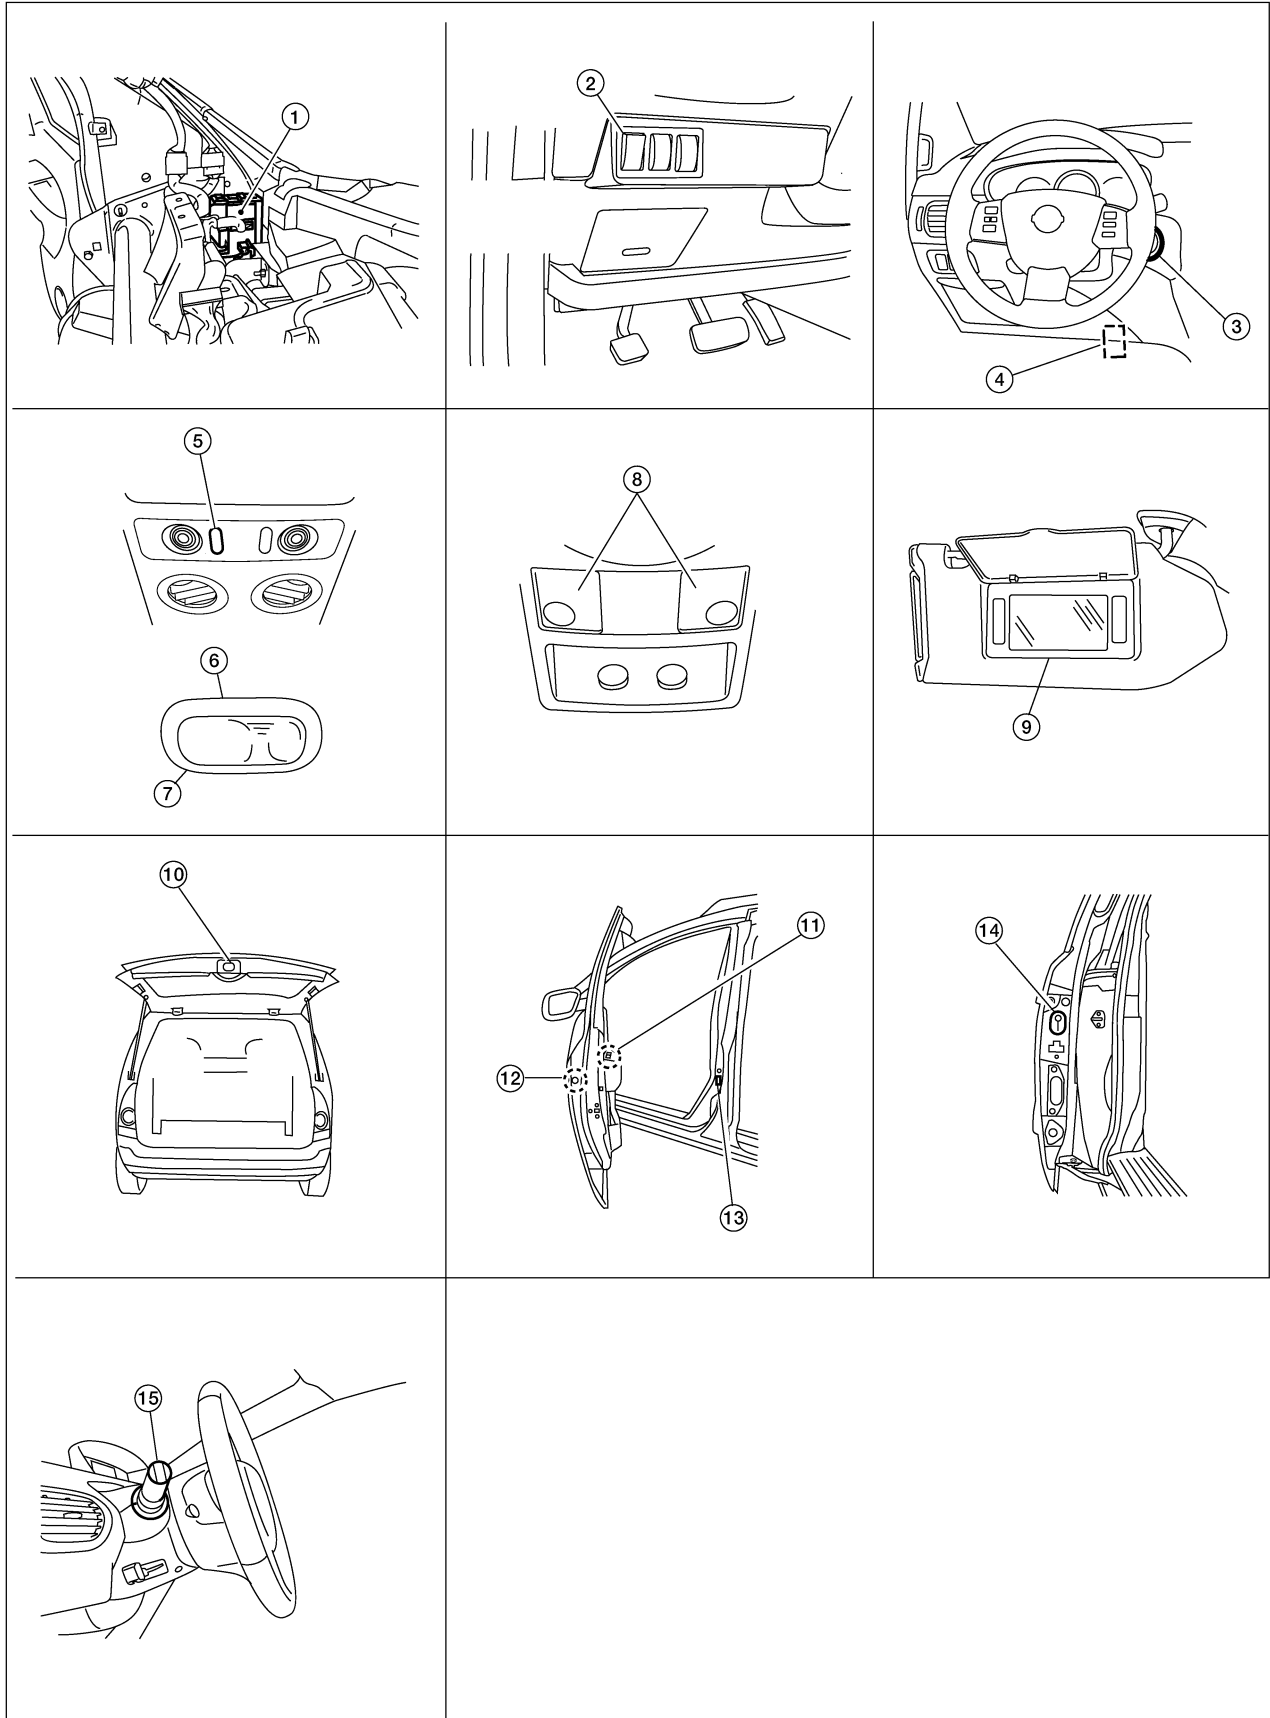

WKIA5269E

# INTERIOR ROOM LAMP

- |   |  |   |   |
|---|--|---|---|
| 1. BCM M18, M19, M20 (view with instrument panel removed)   | 2. Lamps on demand switch M108   | 3. Key switch M27<br>Ignition keyhole illumination M25      | A |
| 4. Foot lamp LH M99<br>RH M100  | 5. Personal lamp with rear roof console R52, R54   | 6. Personal lamp without rear roof console R2, R7, R12, R13 | B |
| 7. Cargo lamp R11   | 8. Room/map lamps R9   | 9. Vanity lamp LH R3<br>RH R8                               | C |
| 10. Back door switch (without power back door) D512<br>Back door latch (door ajar switch) (with power back door) D511 | 11. Main power window and door lock/unlock switch D7, D8<br>Power window and door lock/unlock switch RH D105 | 12. Front door lock assembly LH (key cylinder switch) D14   | D |
| 13. Front door switch LH B8<br>RH B108  | 14. Sliding door switch LH B46<br>RH B135  | 15. Combination switch (lighting switch) M28                | E |

## System Description

*EKS00FEB*

When lamps on demand switch is in DOOR position, room/map lamp and personal lamp ON/OFF is controlled by timer according to signals from switches including key switch, door switches, unlock signal from keyfob, door lock and unlock switch, key cylinder switch, and ignition switch.

When room/map lamp and personal lamp turns ON, there is a gradual brightening over 1 second. When room/map lamp and personal lamp turns OFF, there is a gradual dimming over 1 second.

The room/map lamp and personal lamp timer is controlled by the BCM (body control module).

Room/map lamp and personal lamp timer control settings can be changed with CONSULT-II.

Ignition keyhole illumination turns ON when front door LH is opened (door switch ON) or key is removed from key cylinder. Illumination turns OFF when front door LH is closed (door switch OFF).

Step and foot lamp turns ON when any door is opened (door switch ON). Lamp turns OFF when all doors are closed (all door switches OFF).

## POWER SUPPLY AND GROUND

Power is supplied at all times

- through 15A fuse [No. 19, located in the fuse block (J/B)]
- to key switch terminal 1, and
- through 15A fuse [No. 3, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM terminal 70.

When the key is inserted in key switch, power is supplied

- through the key switch terminal 2
- to BCM terminal 37.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79.

When the front door LH is opened, ground is supplied

- to BCM terminal 47
- through front door switch LH terminal 1
- through case ground of front door switch LH.

When the front door RH is opened, ground is supplied

- to BCM terminal 12
- through front door switch RH terminal 1
- through case ground of front door switch RH.

When the sliding door LH is opened, ground is supplied

- to BCM terminal 48
- through sliding door switch LH terminal 1

## INTERIOR ROOM LAMP

---

- through case ground of sliding door switch LH.

When the sliding door RH is opened, ground is supplied

- to BCM terminal 13
- through sliding door switch RH terminal 1
- through case ground of sliding door switch RH.

When the liftgate is opened, ground is supplied

- to BCM terminal 43
- through back door switch terminal 1 (without power back door) or back door latch (door ajar switch) terminal 7 (with power back door)
- through back door switch terminal 3 (without power back door) or back door latch (door ajar switch) terminal 8 (with power back door)
- through grounds D403 and D404.

When doors are locked or unlocked by either door lock/unlock switch, BCM receives a ground signal

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14 (with rear power vent windows) or terminal 12 (without rear power vent windows)
- through main power window and door lock/unlock switch terminal 17 (with rear power vent windows) or terminal 15 (without rear power vent windows), or
- through power window and door lock/unlock switch RH terminal 16
- through power window and door lock/unlock switch RH terminal 11
- through grounds M57, M61 and M79.

When the front door LH is unlocked by the key, the BCM receives a ground signal

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14 (with rear power vent windows) or terminal 12 (without rear power vent windows)
- through main power window and door lock/unlock switch terminal 6 (with rear power vent windows) or terminal 7 (without rear power vent windows)
- through front door lock assembly LH (key cylinder switch) terminal 6
- through front door lock assembly LH (key cylinder switch) terminal 5
- through grounds M57, M61 and M79.

When the front door LH is locked by the key, the BCM receives a ground signal

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14 (with rear power vent windows) or terminal 12 (without rear power vent windows)
- through main power window and door lock/unlock switch terminal 4 (with rear power vent windows) or terminal 6 (without rear power vent windows)
- through front door lock assembly LH (key cylinder switch) terminal 1
- through front door lock assembly LH (key cylinder switch) terminal 5
- through grounds M57, M61 and M79.

When a signal, or combination of signals is received by BCM, ground is supplied

- through BCM terminal 63
- to lamps on demand switch terminal 3
- through lamps on demand switch terminal 4 (with switch in DOOR position)
- to room/map lamps terminal 2
- to personal lamps 2nd and 3rd row terminal 2 (without rear roof console) or personal lamps 2nd and 3rd row terminal 3 (with rear roof console).

With power and ground supplied, the lamps illuminate.

### SWITCH OPERATION

When front door switch LH is ON (door is opened), ground is supplied

- to ignition keyhole illumination terminal –



# INTERIOR ROOM LAMP

- through BCM terminal 1.

And power is supplied

- through BCM terminal 56

- to ignition keyhole illumination terminal +.

When any door switch is ON (door is opened), ground is supplied

- to front step lamp LH and RH terminal 1, and

- to foot lamp LH and RH terminal –

- through BCM terminal 62.

And power is supplied

- through BCM terminal 56

- to front step lamp LH and RH terminal 2

- to foot lamp LH and RH terminal +.

When room/map lamps switch is ON, ground is supplied

- to room/map lamps terminal 3

- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 56

- to room/map lamps terminal 1.

When vanity lamp LH or RH is ON, ground is supplied

- to vanity lamp LH and RH terminal –

- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 56

- to vanity lamp LH and RH terminal +.

When personal lamps 2nd row LH or RH is ON, ground is supplied

- to personal lamps 2nd row LH or RH terminal 3 (without rear roof console assembly) or personal lamps 2nd row terminal 2 (with rear roof console assembly)

- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 56

- to personal lamps 2nd row LH or RH terminal 1 (without rear roof console assembly) or personal lamps 2nd row terminal 1 (with rear roof console assembly).

When personal lamps 3rd row LH or RH is ON, ground is supplied

- to personal lamps 3rd row LH or RH terminal 3 (without rear roof console assembly) or personal lamps 3rd row terminal 2 (with rear roof console assembly)

- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 56

- to personal lamps 3rd row LH or RH terminal 1 (without rear roof console assembly) or personal lamps 3rd row terminal 1 (with rear roof console assembly).

When cargo lamp is ON, ground is supplied

- to cargo lamp terminal 1

- through grounds M57, M61 and M79.

And power is supplied

- through BCM terminal 56

- to cargo lamp terminal 2.

## ROOM LAMP TIMER OPERATION

When lamps on demand switch is in DOOR position and when all conditions below are met, BCM performs timer control (maximum 30 seconds) for interior room/map lamp ON/OFF.

Power is supplied at all times

A

B

C

D

E

F

G

H

I

J

LT

L

M

## INTERIOR ROOM LAMP

---

- through 15A fuse [No. 19, located in the fuse block (J/B)]
- to key switch terminal 1.

Key is removed from ignition key cylinder (key switch OFF), power will not be supplied to BCM terminal 37. Ground is supplied

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14 (with rear power vent windows) or 12 (without rear power vent windows).

At the time that front door LH is opened, BCM detects that front door LH is unlocked. It determines that interior room/map lamp timer operation conditions are met and turns the interior room/map lamp ON for 30 seconds. Key is in ignition key cylinder (key switch ON), power is supplied

- through key switch terminal 2
- to BCM terminal 37.

When key is removed from key switch (key switch OFF), power supply to BCM terminal 37 is terminated. BCM detects that key has been removed, determines that interior room/map lamp timer conditions are met, and turns the interior room/map lamp ON for 30 seconds.

When front door LH opens → closes and the key is not inserted in the key switch (key switch OFF), BCM terminal 47 changes between 0V (door open) → 12V (door closed). The BCM determines that conditions for interior room/map lamp operation are met and turns the interior room/map lamp ON for 30 seconds.

Timer control is canceled under the following conditions.

- Front door LH is locked [when locked with keyfob, main power window and door lock/unlock switch or front door lock assembly LH (key cylinder switch)]
- Front door LH is opened (front door switch LH turns ON)
- Ignition switch ON.

### INTERIOR LAMP BATTERY SAVER CONTROL

If interior lamp is left "ON", it will not be turned out even when door is closed.

BCM turns off interior lamp automatically to save battery 30 minutes after ignition switch is turned OFF.

BCM controls interior lamps listed below:

- Vanity lamp
- Room/map lamp
- Cargo lamp
- Personal lamp
- Step lamps
- Foot lamps
- Ignition keyhole illumination

After lamps turn OFF by the battery saver system, the lamps illuminate again when


- signal received from keyfob, or main power window and door lock/unlock switch or front door lock assembly LH (key cylinder switch) is locked or unlocked
- door is opened or closed
- key is removed from or inserted in ignition key cylinder.

Interior lamp battery saver control period can be changed by the function setting of CONSULT-II and through the display (with color display).

# INTERIOR ROOM LAMP

## Schematic


EKS00FEC

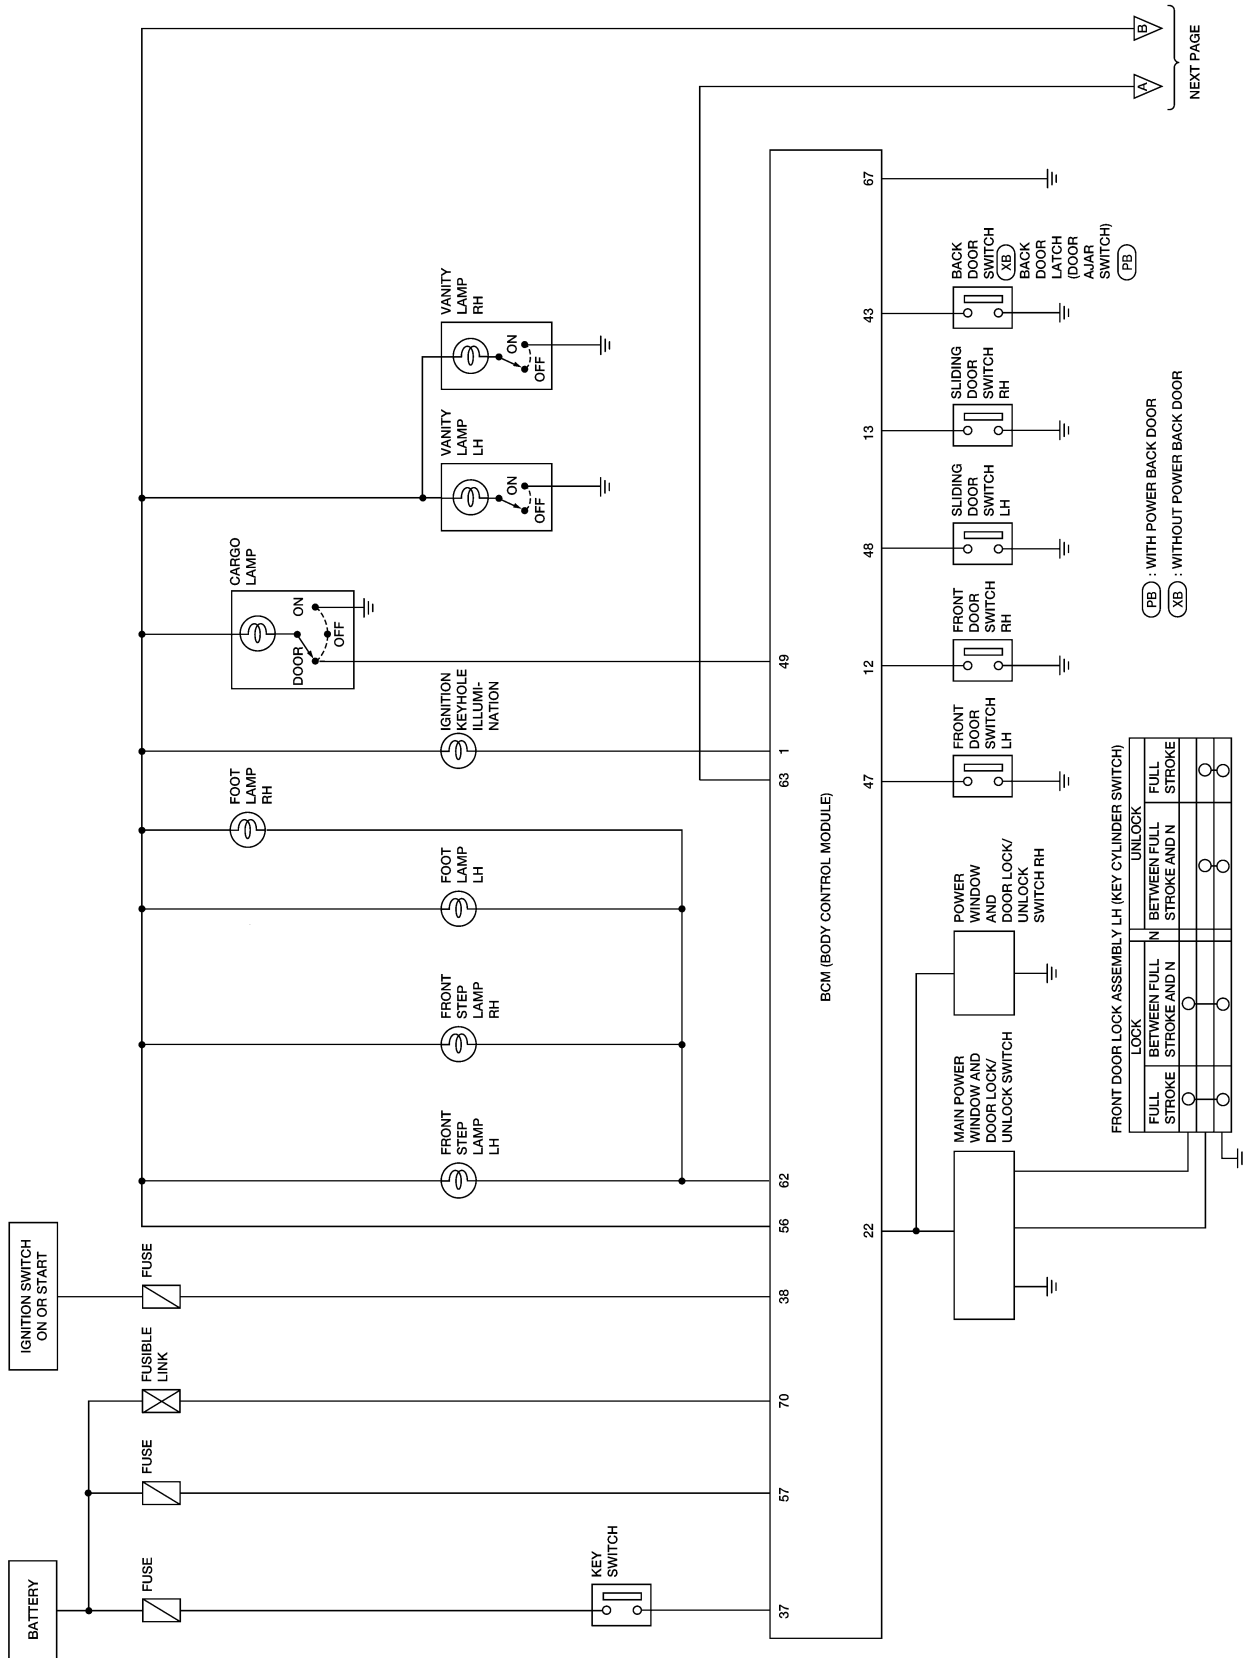

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

LT

# INTERIOR ROOM LAMP

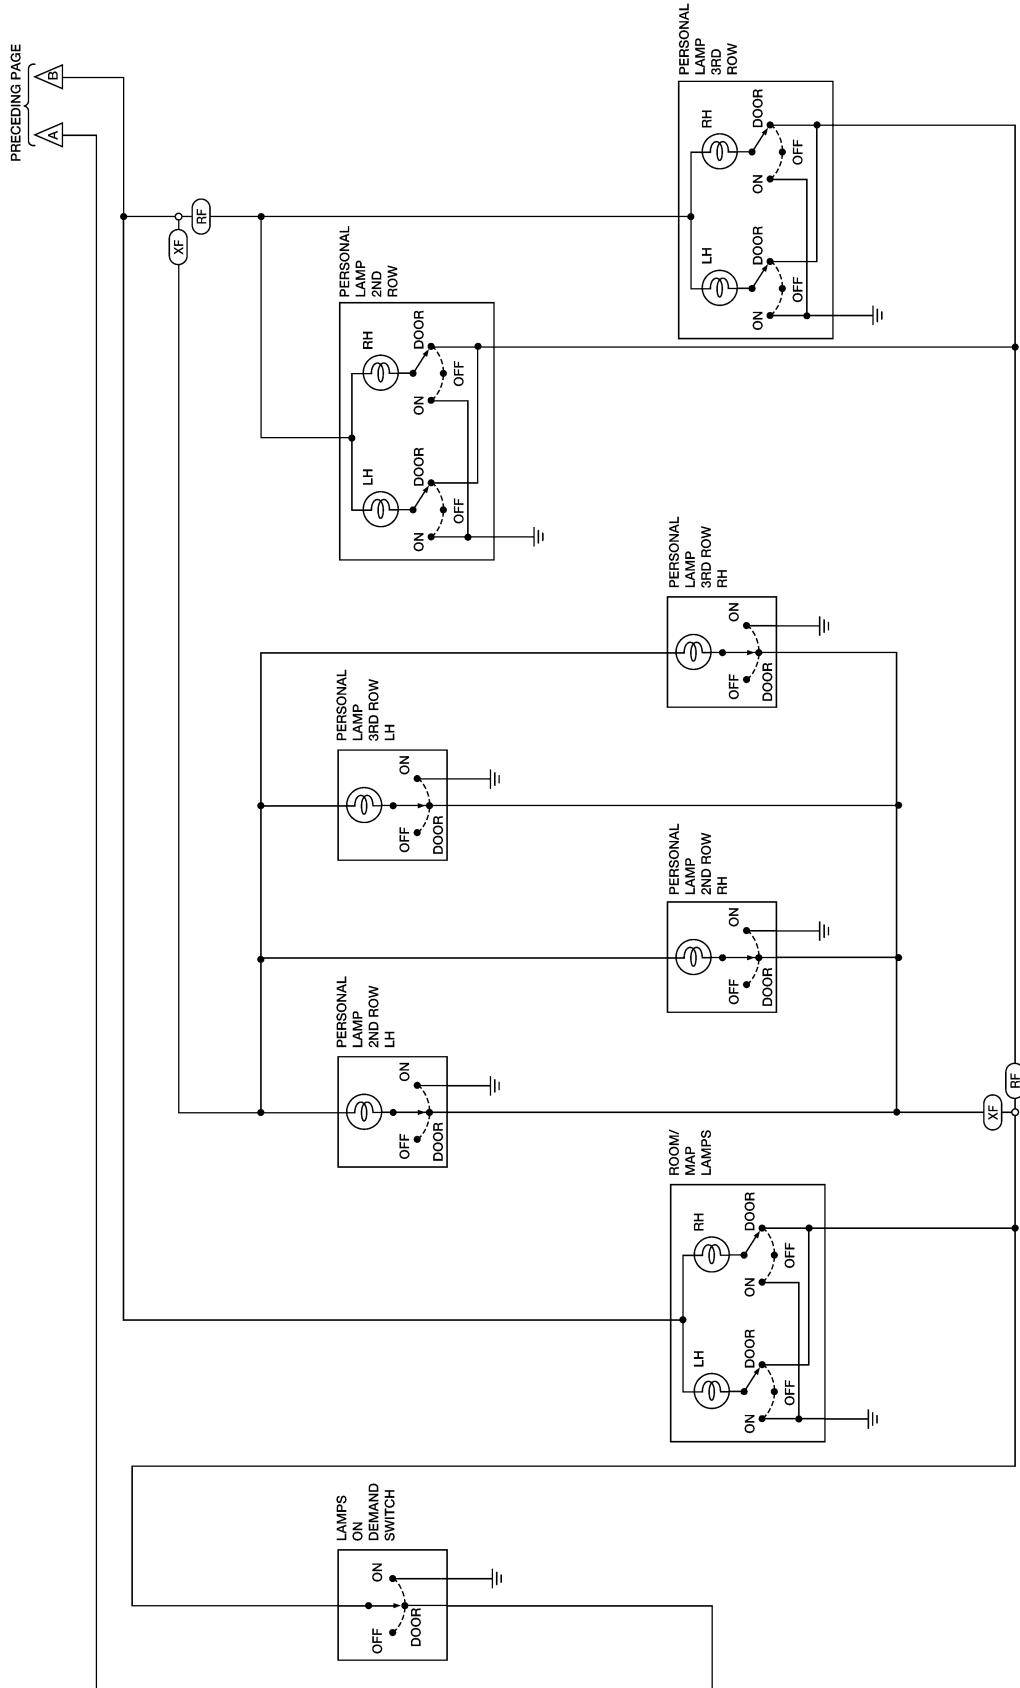

RF : WITH REAR ROOF CONSOLE  
 XF : WITHOUT REAR ROOF CONSOLE

WKWA4714E



# INTERIOR ROOM LAMP

## Wiring Diagram — INT/L —

EKS00FED

LT-INT/L-01

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

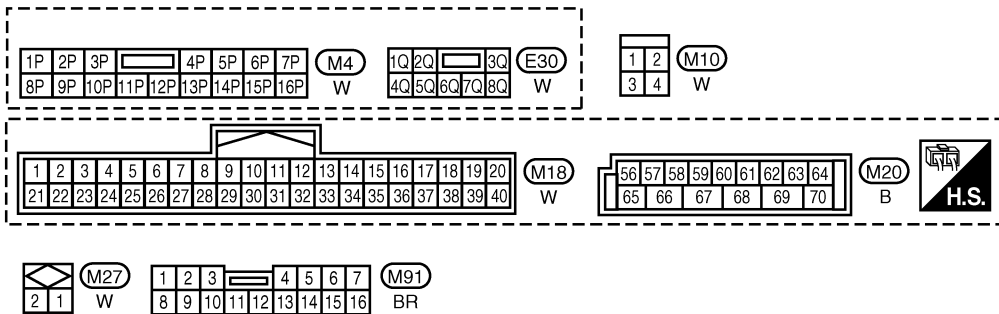
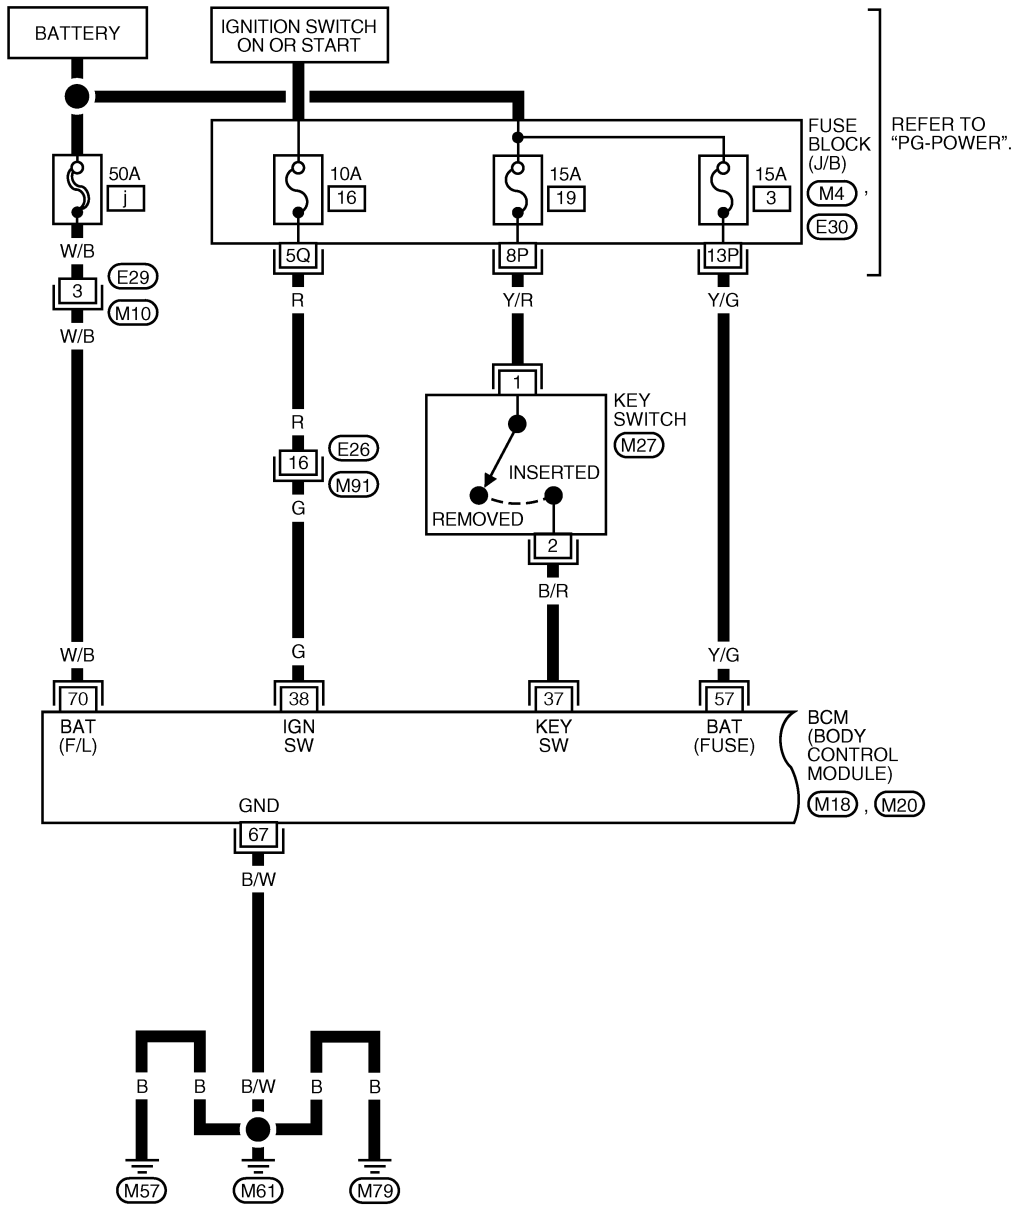


WKWA4715E

# INTERIOR ROOM LAMP

LT-INT/L-02



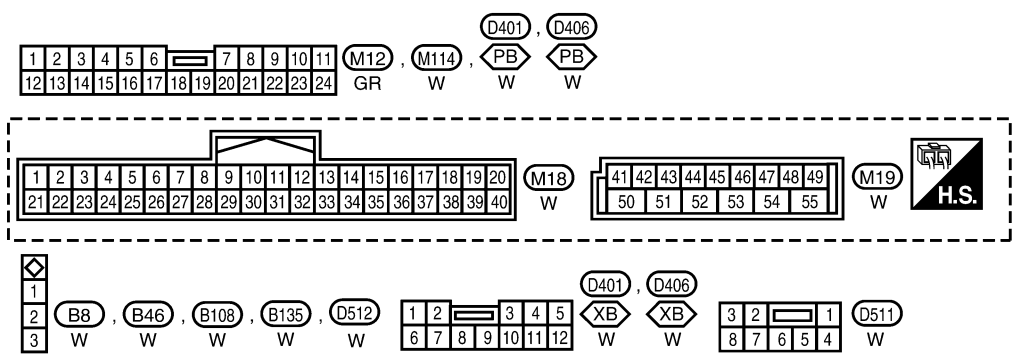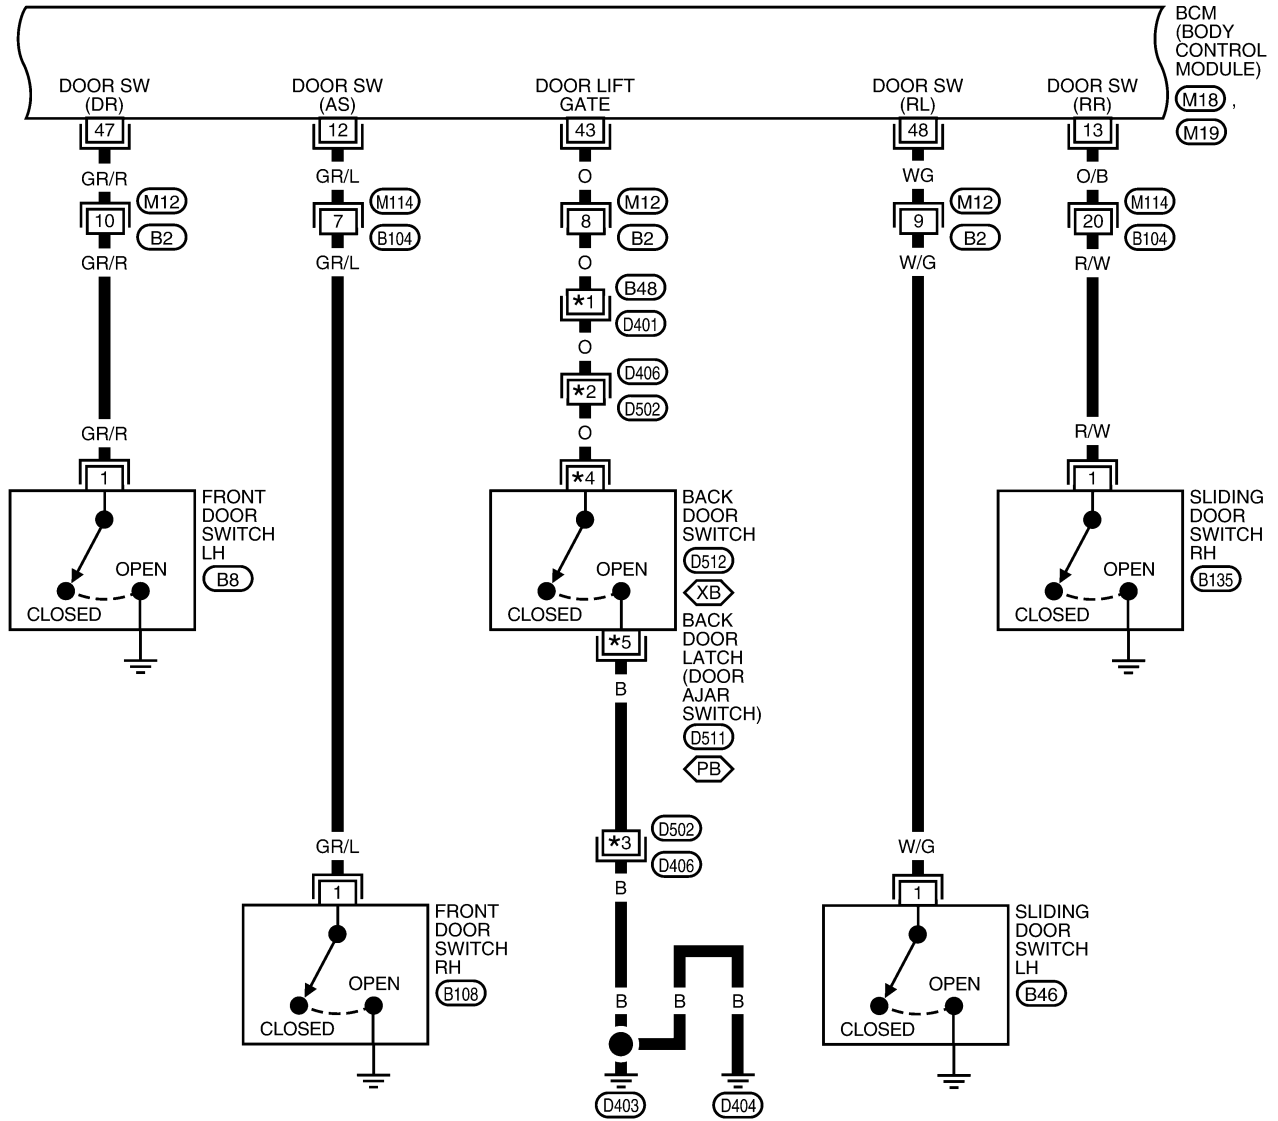

- PB : WITH POWER BACK DOOR  
XB : WITHOUT POWER BACK DOOR
- \*1 PB : 4    \*2 PB : 4    \*3 PB : 14    \*4 PB : 7    \*5 PB : 8  
XB : 1    XB : 1    XB : 6    XB : 1    XB : 3





WKWA4716E

# INTERIOR ROOM LAMP

LT-ILL-03

-  : WITH ADJUSTABLE PEDALS
-  : WITH HEATED SEATS
-  : WITH VDC
-  : WITHOUT VDC


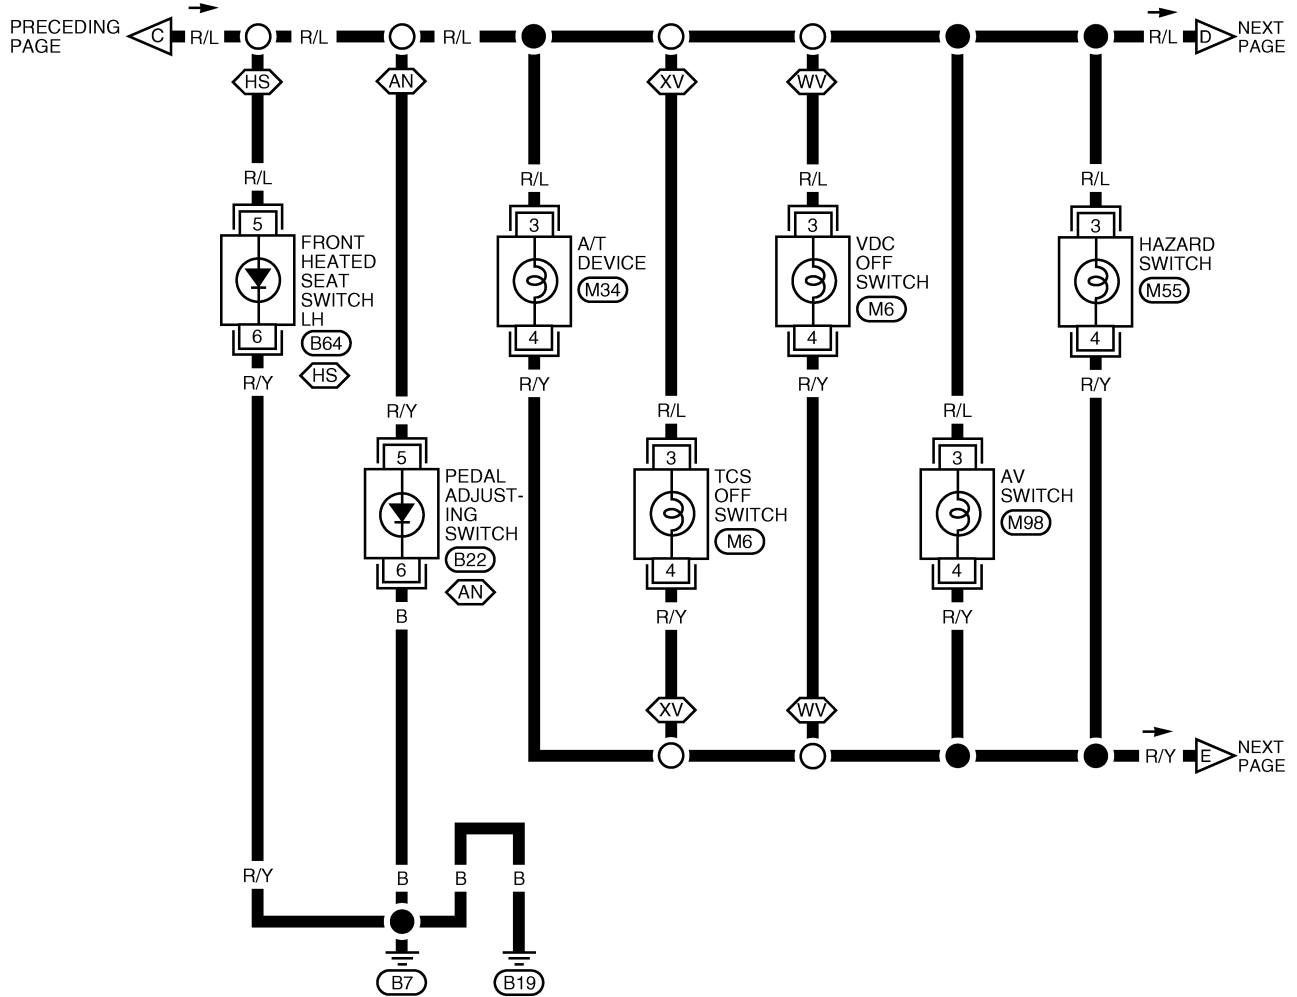


WKWA4726E

# INTERIOR ROOM LAMP

LT-ILL-04

: WITH REAR SONAR SYSTEM  
 : WITH DVD ENTERTAINMENT SYSTEM

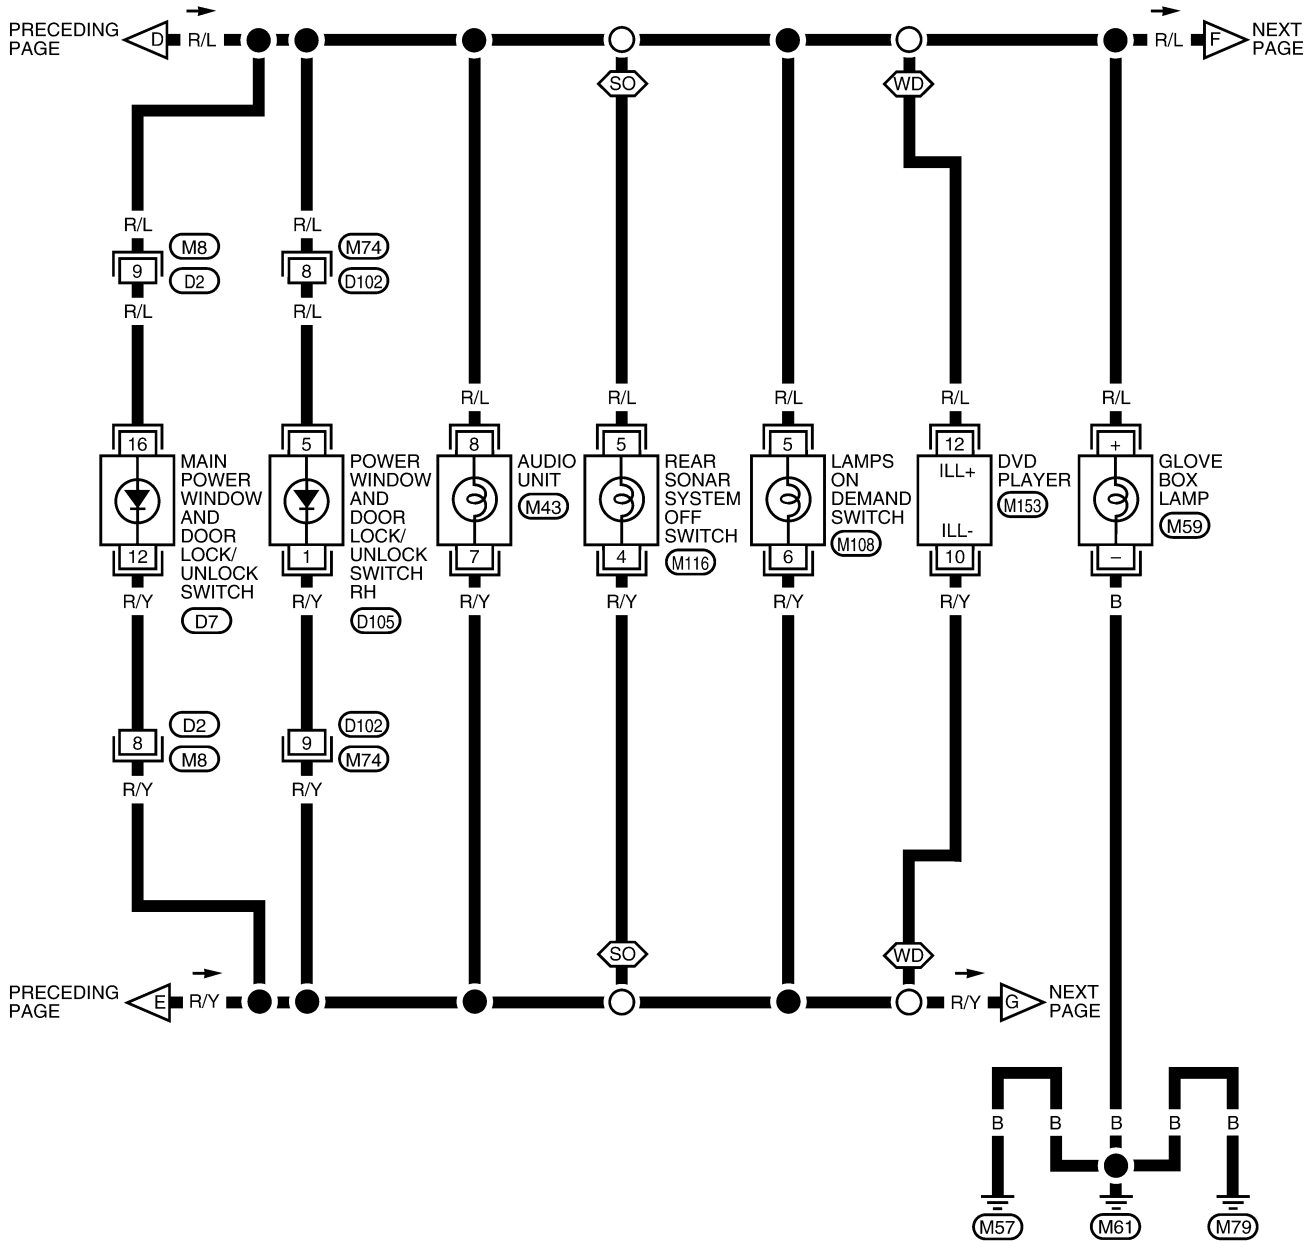

WKWA4727E





# INTERIOR ROOM LAMP

LT-ILL-05

⬡CD : WITH COLOR DISPLAY

⬡MC : WITH MONOCHROME DISPLAY

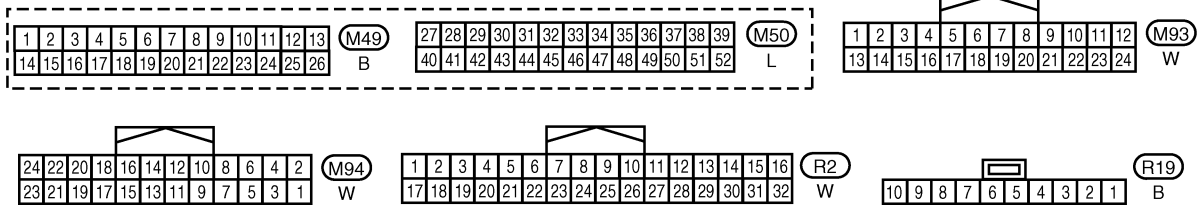
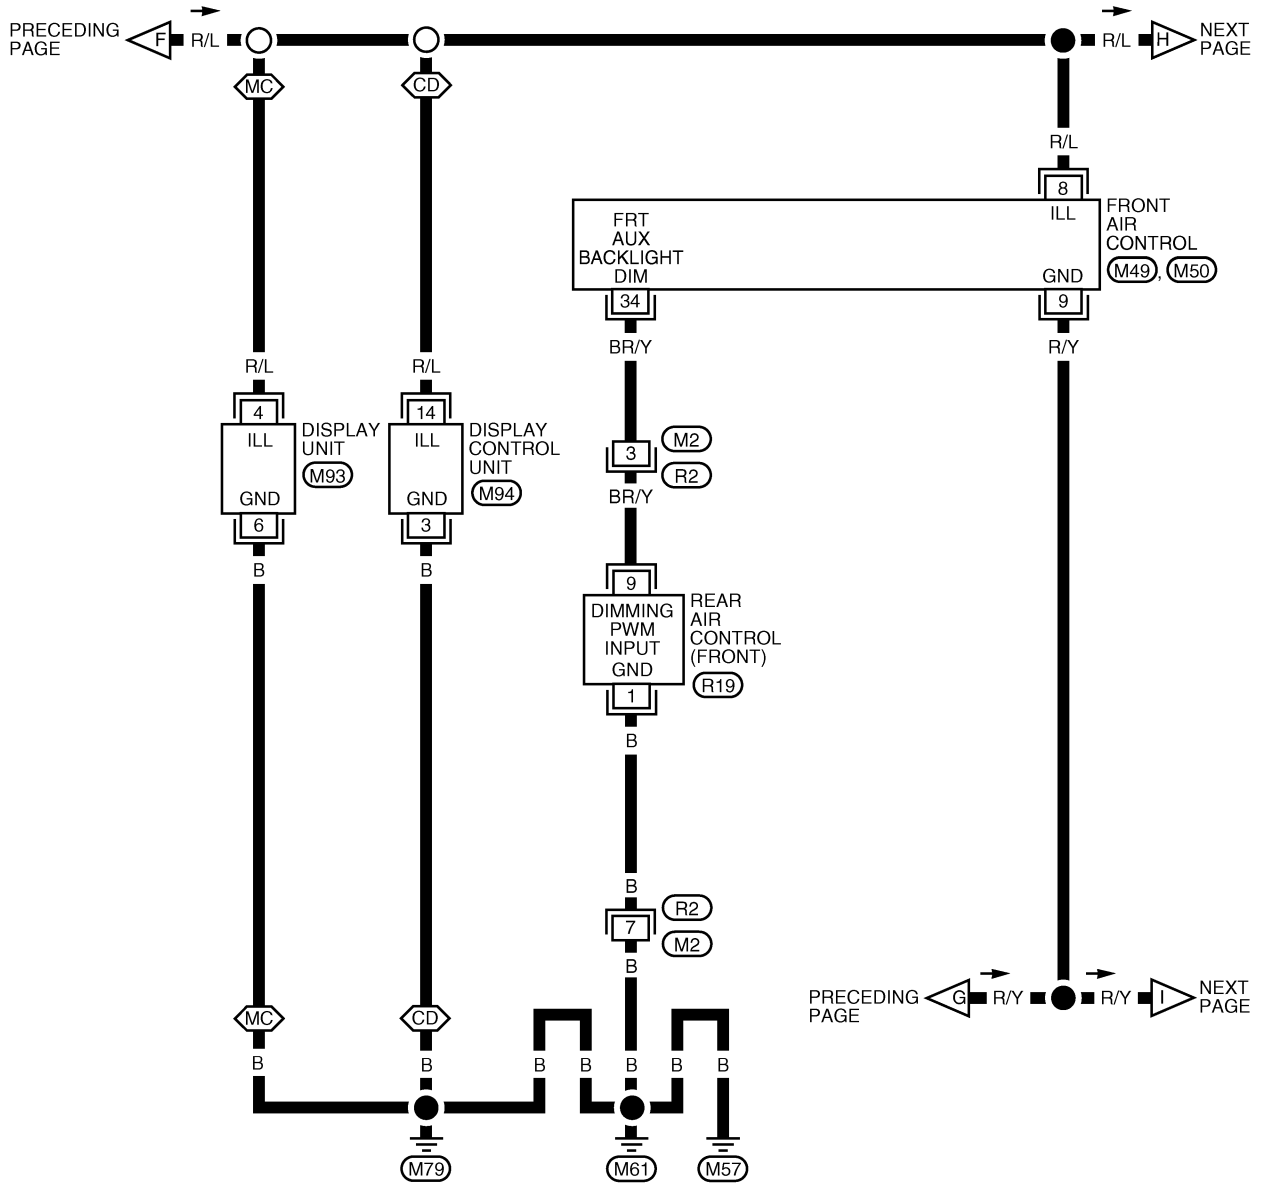


WKWA4728E

# INTERIOR ROOM LAMP

WITHOUT REAR ROOF CONSOLE

LT-INT/L-06

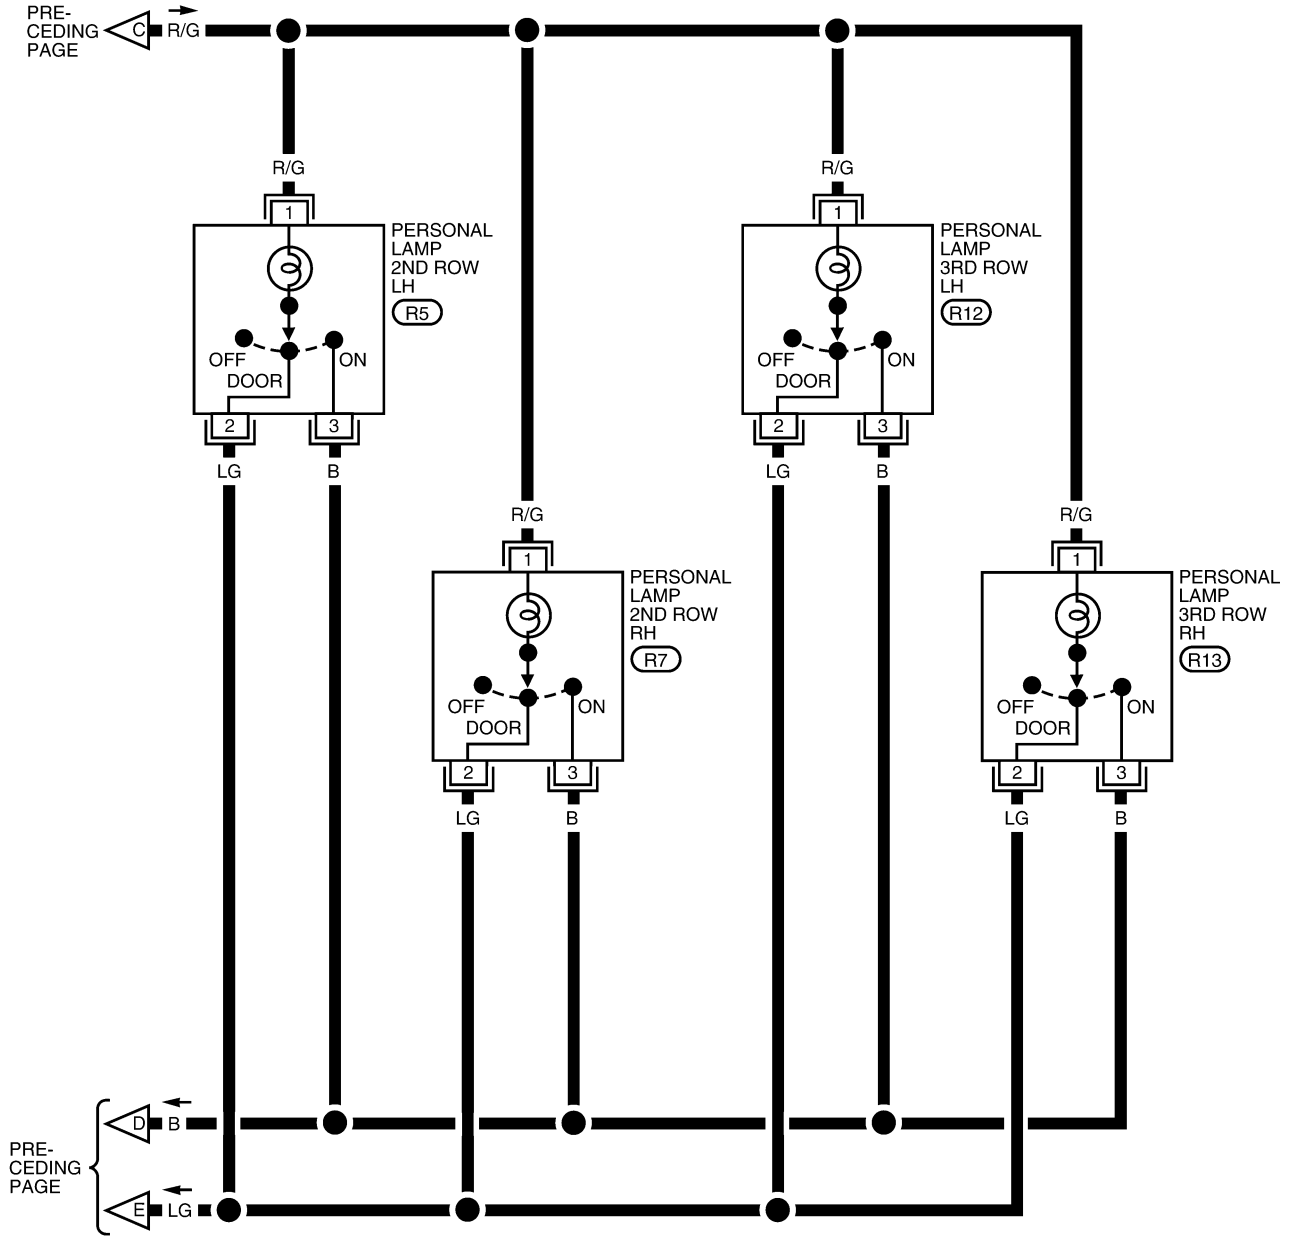





WKWA4720E

# INTERIOR ROOM LAMP

WITH REAR ROOF CONSOLE

LT-INT/L-07

 : WITH DVD ENTERTAINMENT SYSTEM  
 : WITHOUT DVD ENTERTAINMENT SYSTEM

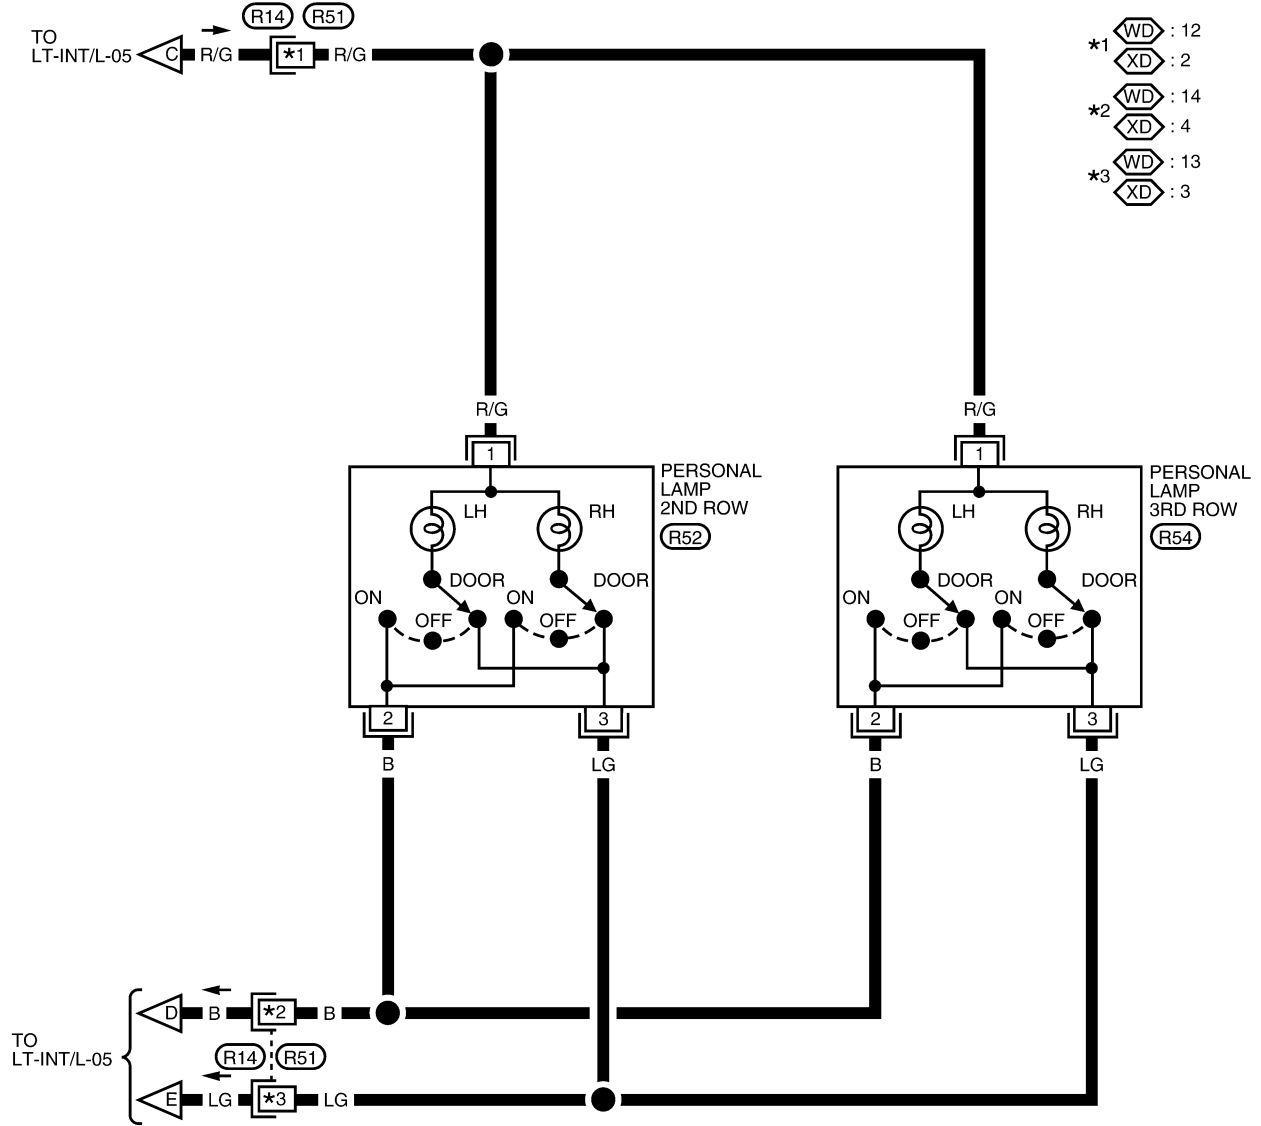

WKWA4721E

# INTERIOR ROOM LAMP

## Terminals and Reference Values for BCM

EKS00FEE

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

## How to Proceed With Trouble Diagnosis

EKS00FEF

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-119, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-132, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the interior room lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

## Preliminary Check SWITCH INSPECTION

EKS00FEG

- Ensure lamps on demand switch is in the DOOR or ON position.

## BCM POWER SUPPLY AND GROUND CIRCUIT CHECK

Refer to [BCS-15, "BCM Power Supply and Ground Circuit Check"](#) .

## CONSULT-II Function (BCM)

EKS00FEH

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

## CONSULT-II START PROCEDURE

Refer to [GI-37, "CONSULT-II Start Procedure"](#) .

## WORK SUPPORT

### Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "SET I/L D-UNLCK INTCON" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

## Display Item List

Item	Description	CONSULT-II
SET I/L D-UNLCK INTCON	The 30 seconds operating function of the interior room lamps and the ignition keyhole illumination can be selected when front door LH is released (unlocked).	ON/OFF

# INTERIOR ROOM LAMP

Item	Description	CONSULT-II
ROOM LAMP ON TIME SET	The time in order to escalate illumination can be adjusted when the interior room lamps and the ignition keyhole illumination is turned on.	MODE 1 - 7
ROOM LAMP OFF TIME SET	The time in order to diminish illumination can be adjusted when the interior room lamps and the ignition keyhole illumination is turned off.	MODE 1 - 7

Reference between "MODE" and "TIME" for "TURN ON/OFF".

MODE	1	2	3	4	5	6	7
Time (sec.)	0.5	1	2	3	4	5	0

## DATA MONITOR

### Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors the individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

### Display Item List

Monitor item	Contents
IGN ON SW	"ON/OFF" Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
KEY ON SW	"ON/OFF" Displays "Key inserted (ON)/key removed (OFF)" status judged from the key switch signal.
DOOR SW-DR	"ON/OFF" Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS	"ON/OFF" Displays "Door open (ON)/Door closed (OFF)" status, determined from front door switch RH signal.
DOOR SW-RR	"ON/OFF" Displays "Door open (ON)/Door closed (OFF)" status, determined from sliding door switch RH signal.
DOOR SW-RL	"ON/OFF" Displays "Door open (ON)/Door closed (OFF)" status, determined from sliding door switch LH signal.
BACK DOOR SW	"ON/OFF" Displays "Door open (ON)/Door closed (OFF)" status, determined from back door switch signal.
KEY CYL LK-SW	"ON/OFF" Displays "Door locked (ON)" status, determined from key cylinder lock switch in front door LH.
KEY CYL UN-SW	"ON/OFF" Displays "Door unlocked (OFF)" status, determined from key cylinder lock switch in front door LH.
CDL LOCK SW	"ON/OFF" Displays "Door locked (ON)/Door unlocked (OFF)" status, determined from locking detection switch in front door LH.
CDL UNLOCK SW	"ON/OFF" Displays "Door unlocked (OFF)" status, determined from locking detection switch in front door RH.
KEYLESS LOCK	"ON/OFF" Displays "Locked (ON)/Other (OFF)" status, determined from lock signal.
KEYLESS UNLOCK	"ON/OFF" Displays "Unlocked (ON)/Other (OFF)" status, determined from unlock signal.

## ACTIVE TEST

### Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.

# INTERIOR ROOM LAMP

2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

## Display Item List

Test item	Description
INT LAMP	Interior room lamp can be operated by any ON-OFF operations.
IGN ILLUM	Ignition keyhole illumination can be operated by ON-OFF operation.
STEP LAMP TEST	Step lamps can be operated by any ON-OFF operations.
LUGGAGE LAMP TEST	Cargo lamp can be operated by any ON-OFF operations.

## Room/Map Lamp Control Does Not Operate

EKS00FEI

### 1. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-133, "Display Item List"](#) for switches and their functions.

#### OK or NG

- OK >> GO TO 2.  
 NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E

### 2. ACTIVE TEST

1. Select "BCM" on CONSULT-II. Select "INT LAMP" active test.
2. When lamps on demand switch is in DOOR position, use active test to make sure interior room lamp operates.

#### OK or NG

- OK >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#) .  
 NG >> GO TO 3.

ACTIVE TEST	
INT LAMP	ON
	OFF

LKIA0092E


### 3. CHECK ROOM/MAP LAMPS INPUT

1. Turn ignition switch OFF.
2. Check voltage between room/map lamps harness connector terminal and ground.

Terminals		(-)	Voltage (approx.)
(+)			
Room/map lamps connector	Terminal		
R9	1	Ground	Battery voltage

#### OK or NG

- OK >> GO TO 4.  
 NG >> GO TO 6.

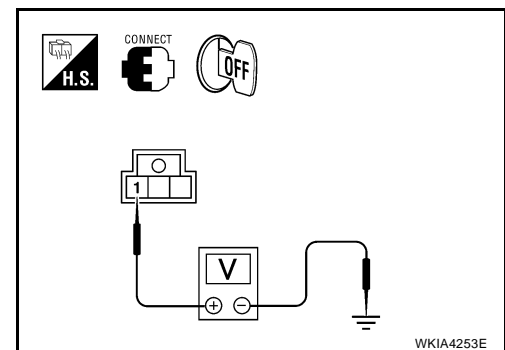

# INTERIOR ROOM LAMP


## 4. CHECK LAMPS ON DEMAND SWITCH

1. Disconnect lamps on demand switch connector.
2. Check continuity between lamps on demand switch terminals.

Lamps on demand switch		Condition	Continuity
Terminal			
3	4	Lamps on demand switch position: DOOR	Yes
		Lamps on demand switch position: OFF	No

OK or NG

- OK >> GO TO 5.  
 NG >> Replace lamps on demand switch.

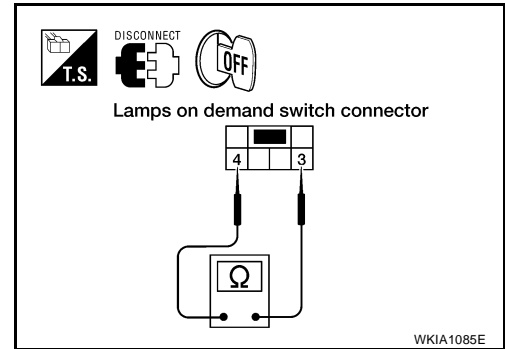


## 5. CHECK LAMPS ON DEMAND CIRCUIT

1. Connect lamps on demand switch connector.
2. Turn lamps on demand switch to DOOR position.
3. Disconnect BCM connector.
4. Check continuity between BCM harness connector terminal and lamps on demand switch harness connector terminal.

A		B		Continuity
BCM connector	Terminal	Lamps on demand switch connector	Terminal	
M20	63	M108	3	Yes

OK or NG

- OK >> Replace BCM if room/map lamps do not work after setting the connector again. Refer to [BCS-25, "Removal and Installation of BCM"](#) .  
 NG >> Repair harness or connector.

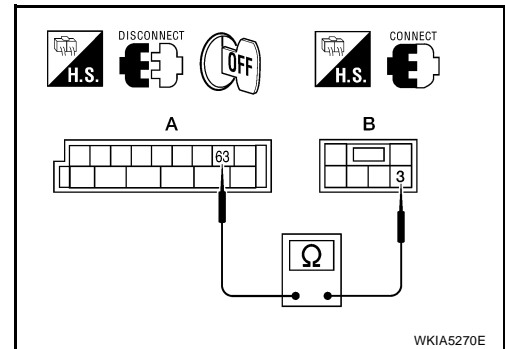


## 6. CHECK ROOM/MAP LAMPS CIRCUIT

1. Disconnect BCM connector and room/map lamps connector.
2. Check continuity between BCM harness connector terminal and room/map lamps harness connector terminal.

A		B		Continuity
BCM connector	Terminal	Room/map lamps connector	Terminal	
M20	56	R9	1	Yes

OK or NG

- OK >> Replace BCM if room/map lamps do not work after setting the connector again. Refer to [BCS-25, "Removal and Installation of BCM"](#) .  
 NG >> Repair harness or connector between BCM and room/map lamps or between room/map lamps and lamps on demand switch.

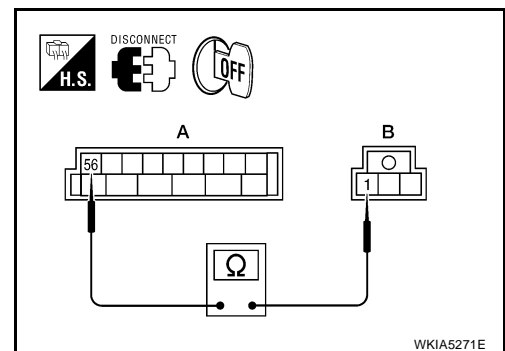

# INTERIOR ROOM LAMP

EKS00FEJ

## Personal Lamp Control Does Not Operate (Room/Map Lamps Operate)

### 1. CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-120, "SWITCH OPERATION"](#) for switches and their function.

#### OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning door switch.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E


### 2. CHECK PERSONAL LAMP OUTPUT

1. Turn ignition switch OFF.
2. Confirm lamps on demand switch is in the DOOR position.
3. Disconnect personal lamp connector.
4. Open any door.
5. Check voltage between personal lamp harness connector terminal 1 and ground.

**1 - Ground : Battery voltage should exist.**

#### OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

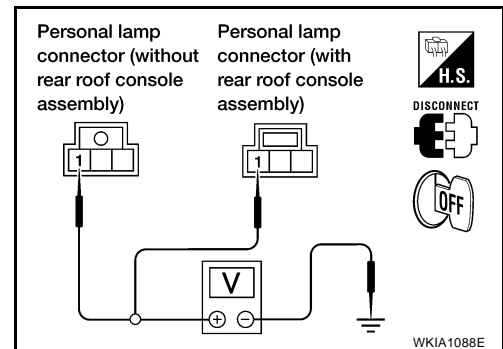


### 3. CHECK PERSONAL LAMP CONTROL CIRCUIT

1. Disconnect lamps on demand switch connector.
2. Check continuity between lamps on demand switch harness connector M108 terminal 4 and personal lamp harness connector terminal 2 (without rear roof console assembly) or terminal 3 (with rear roof console assembly).

**4 - 2 or 3 : Continuity should exist.**

#### OK or NG

- OK >> Replace personal lamp.
- NG >> Repair harness or connector.

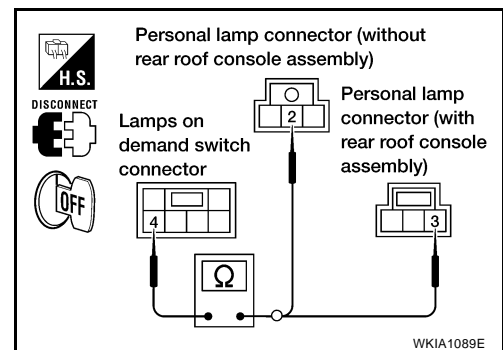



# INTERIOR ROOM LAMP

## Ignition Keyhole Illumination Control Does Not Operate

EKS00FEK

### 1. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-133, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E

### 2. ACTIVE TEST

1. Select "BCM" on CONSULT-II. Select "INT LAMP".
2. Select "IGN ILLUM" active test to make sure lamp operates.

OK or NG

- OK >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#).
- NG >> GO TO 3.

ACTIVE TEST	
IGN ILLUM	ON
	OFF

SKIA3992E


### 3. CHECK IGNITION KEYHOLE ILLUMINATION INPUT

1. Check voltage between ignition keyhole illumination harness connector M25 terminal + and ground.

**+ - Ground : Battery voltage should exist.**

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 6.

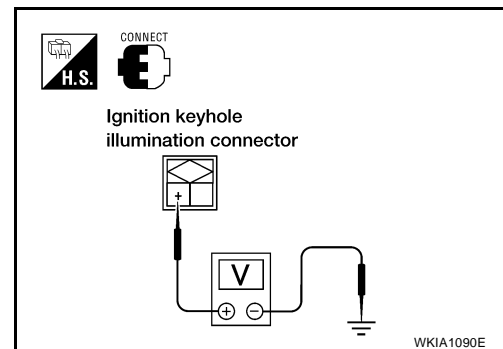


### 4. CHECK IGNITION KEYHOLE ILLUMINATION BULB

1. Turn ignition switch OFF.
2. Disconnect ignition keyhole illumination connector.
3. Check continuity between ignition keyhole illumination terminals + and -.

**+ - - : Continuity should exist.**

OK or NG

- OK >> GO TO 5.
- NG >> Replace ignition keyhole illumination bulb.

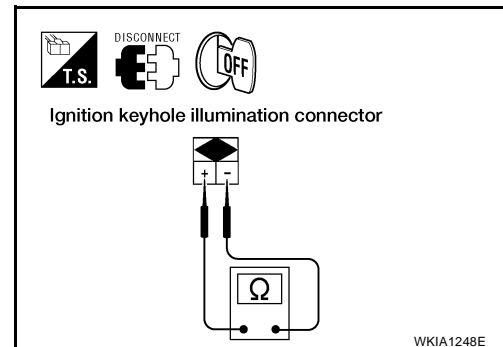

# INTERIOR ROOM LAMP


## 5. CHECK IGNITION KEYHOLE ILLUMINATION CONTROL CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M18 terminal 1 and ignition keyhole illumination harness connector M25 terminal -.

**- - 1 : Continuity should exist.**

### OK or NG

- OK >> Replace BCM if ignition keyhole illumination does not work after setting the connector again. Refer to [BCS-25, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

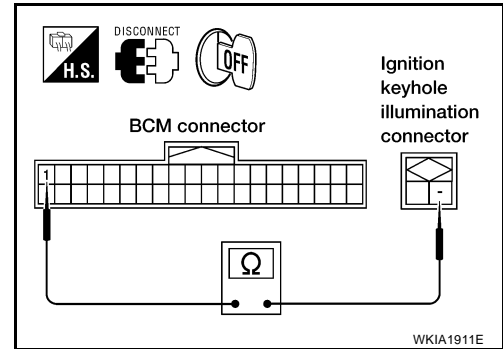


## 6. CHECK IGNITION KEYHOLE ILLUMINATION POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and ignition keyhole illumination connector.
3. Check continuity between BCM connector M20 (A) terminal 56 and ignition keyhole illumination connector M25 (B) terminal +.

**+ - 56 : Continuity should exist.**

### OK or NG

- OK >> Replace BCM if ignition keyhole illumination does not work after setting the connector again. Refer to [BCS-25, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

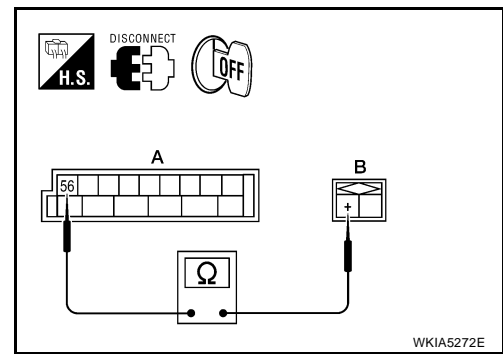

## All Step/Foot Lamps Do Not Operate

EKS00FEL

### 1. CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-133, "Display Item List"](#) for switches and their functions.

### OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E

# INTERIOR ROOM LAMP


## 2. CHECK STEP LAMP POWER SUPPLY

1. Turn ignition switch OFF.
2. Check voltage between front step lamp LH harness connector terminal and ground.

Terminals		(-)	Voltage (approx.)
(+)			
Front step lamp LH connector	Terminal		
D11	2	Ground	Battery voltage

OK or NG

- OK >> GO TO 3.  
 NG >> GO TO 4.

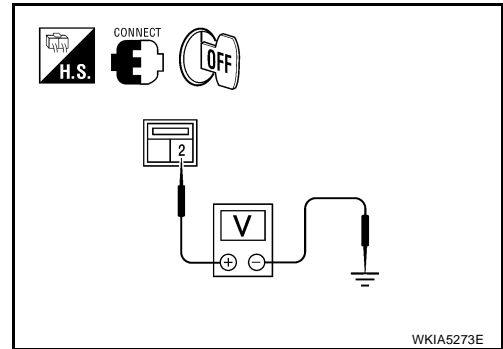


## 3. CHECK STEP LAMP CONTROL CIRCUIT

1. Disconnect BCM connector and front step lamp LH connector.
2. Check continuity between BCM harness connector terminal and front step lamp LH harness connector terminal.

A		B		Continuity
BCM connector	Terminal	Front step lamp LH connector	Terminal	
M20	62	D11	1	Yes

OK or NG

- OK >> Replace BCM if front step lamp does not work after setting the connector again. Refer to [BCS-25, "Removal and Installation of BCM"](#) .  
 NG >> Repair harness or connector.

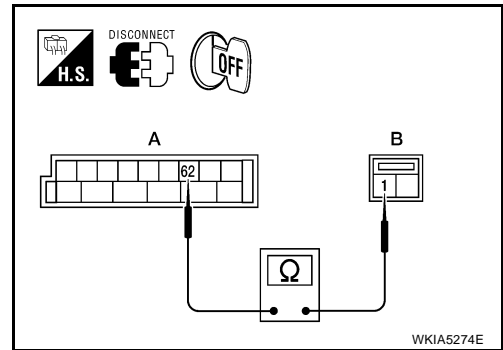


## 4. CHECK STEP LAMP POWER SUPPLY CIRCUIT

1. Disconnect BCM connector and front step lamp LH connector.
2. Check continuity between BCM harness connector terminal and front step lamp LH harness connector terminal.

A		B		Continuity
BCM connector	Terminal	Front step lamp LH connector	Terminal	
M20	56	D11	2	Yes

OK or NG

- OK >> Replace BCM if front step lamp does not work after setting the connector again. Refer to [BCS-25, "Removal and Installation of BCM"](#) .  
 NG >> Repair harness or connector.

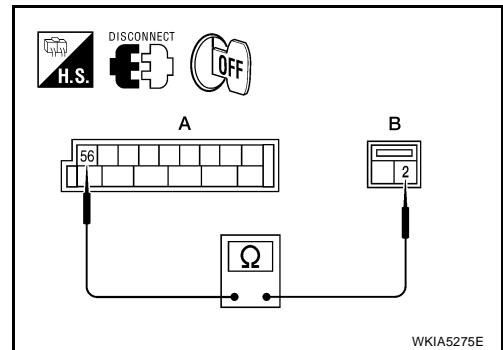

# INTERIOR ROOM LAMP

## All Interior Room Lamps Do Not Operate

EKS00FEM


### 1. CHECK POWER SUPPLY CIRCUIT

1. All interior room lamps switch are OFF.
2. Turn ignition switch ON.
3. Check voltage between BCM harness connector M20 terminal 56 and ground.

**56 - Ground : Battery voltage should exist.**

#### OK or NG


- OK >> Repair harness or connector. In a case of making a short circuit, be sure to disconnect battery negative cable after repairing harness and then reconnect.
- NG >> Replace BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#).

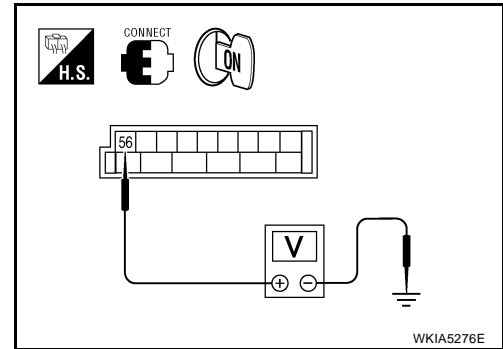

## ILLUMINATION

## Component Parts and Harness Connector Location

EKS00FEN

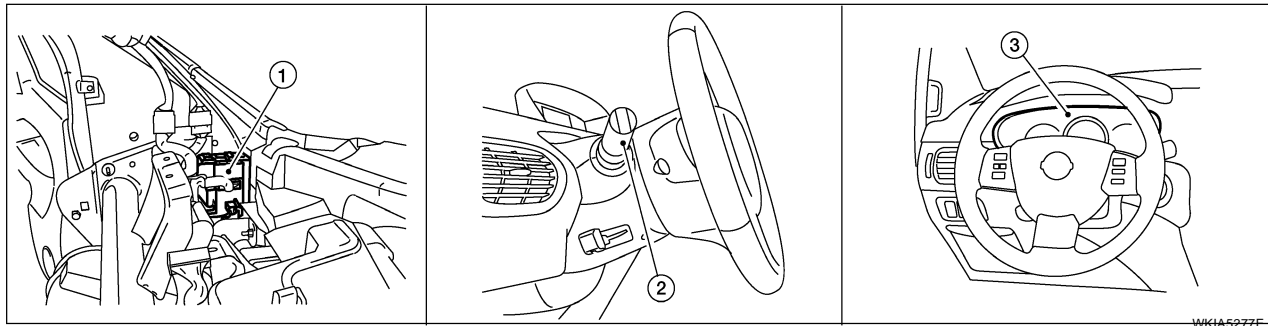

1. BCM M18, M20 (view with instrument panel removed)
2. Combination switch (lighting switch) M28
3. Combination meter M24 (illumination control)

## System Description

EKS00FEO

Control of the illumination lamps operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST or 2ND position or if the auto light system (if equipped) is activated the BCM (body control module) receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay. This relay, when energized, directs power to the illumination lamps, which then illuminate. Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- through 15A fuse (No. 41, located in the IPDM E/R)
- to tail lamp relay, located in the IPDM E/R, and
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter j , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 15A fuse [No. 3, located in fuse block (J/B)]
- to BCM terminal 57, and
- through 15A fuse (No. 34, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 15A fuse [No.19, located in fuse block (J/B)]
- to combination meter terminal 40.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 16, located in the fuse block (J/B)]
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 38.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminals 20 and 21
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 60
- through grounds E9, E15 and E24.

# ILLUMINATION

## ILLUMINATION OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position or if the auto light system (if equipped) is activated, the BCM receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the tail lamp relay which, when energized, directs power

- through IPDM E/R terminal 22
- to A/T device (illumination) terminal 3
- to front heated seat switch LH (illumination) terminal 5 (with heated seats)
- to pedal adjusting switch (illumination) terminal 5 (with adjustable pedals)
- to TCS OFF switch (illumination) terminal 3 (without VDC)
- to VDC OFF switch (illumination) terminal 3 (with VDC)
- to AV switch (illumination) terminal 3
- to hazard switch (illumination) terminal 3
- to main power window and door lock/unlock switch terminal 16
- to power window and door lock/unlock switch RH terminal 5
- to audio unit terminal 8
- to rear sonar system OFF switch terminal 5 (with rear sonar system)
- to lamps on demand switch terminal 5
- to DVD player terminal 12 (with DVD entertainment system)
- to glove box lamp terminal +
- to display unit terminal 4 (with monochrome display unit)
- to display control unit terminal 14 (with color display unit)
- to front air control terminal 8
- to NAVI control unit terminal 61 (with NAVI)
- to rear air control (rear) terminal 10
- to front heated seat switch RH (illumination) terminal 5 (with heated seats)
- to console lamp terminal 2
- to automatic door main switch terminal 5 (with power sliding door)
- to Bluetooth on indicator terminal 3 (with Bluetooth)
- to rear audio remote control unit terminal 6 (with rear audio remote control unit)
- through resistor-1 terminal 2 (with steering wheel audio control switches)
- through resistor-1 terminal 1 (with steering wheel audio control switches)
- through combination switch (spiral cable) terminal 26 (with steering wheel audio control switches)
- to spiral cable (steering switch) terminal 18 (with steering wheel audio control switches).

Illumination is controlled

- through combination meter (illumination control) terminal 1
- to A/T device terminal 4
- to TCS OFF switch terminal 4 (without VDC)
- to VDC OFF switch terminal 4 (with VDC)
- to AV switch terminal 4
- to hazard switch terminal 4
- to main power window and door lock/unlock switch terminal 12
- to power window and door lock/unlock switch RH terminal 1
- to audio unit terminal 7
- to rear sonar system OFF switch terminal 4 (with rear sonar system)
- to lamps on demand switch terminal 6
- to DVD player terminal 10 (with DVD entertainment system)
- to front air control terminal 9
- through combination switch (spiral cable) terminal 27 (with steering wheel audio control switches)

# ILLUMINATION

- to spiral cable (steering switch) terminal 21 (with steering wheel audio control switches).
- to console lamp terminal 1 (with power sliding door) and
- to automatic door main switch terminal 7 (with power sliding door).

Ground is supplied

- to glove box lamp terminal –
- to display unit terminal 6 (with monochrome display unit)
- to display control unit terminal 3 (with color display unit)
- to console lamp terminal 1 (without power sliding door)
- to rear air control (front) terminal 1
- to combination meter terminals 20 and 21
- through grounds M57, M61 and M79, and
- to rear audio remote control unit terminal 15 (with rear audio remote control unit)
- through grounds B7 and B19, and
- to NAVI control unit terminal 1 (with NAVI)
- to rear air control (rear) terminal 9
- through grounds B117 and B132.

With power and ground supplied, illumination lamps illuminate.

## EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST or 2ND position or if auto light system (if equipped) is activated and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the illumination lamps remain illuminated for 5 minutes, then the illumination lamps are turned off.

When the lighting switch is turned from OFF to 1ST or 2ND position (or if auto light system is activated) after illumination lamps are turned off by the battery saver control, the illumination lamps illuminate again.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II and the display (with NAVI).

## CAN Communication System Description

EKS00FEP

Refer to [LAN-4, "SYSTEM DESCRIPTION"](#) .

A

B

C

D

E

F

G

H

I

J

LT


L

M

# ILLUMINATION

## Schematic


EKS00FEQ

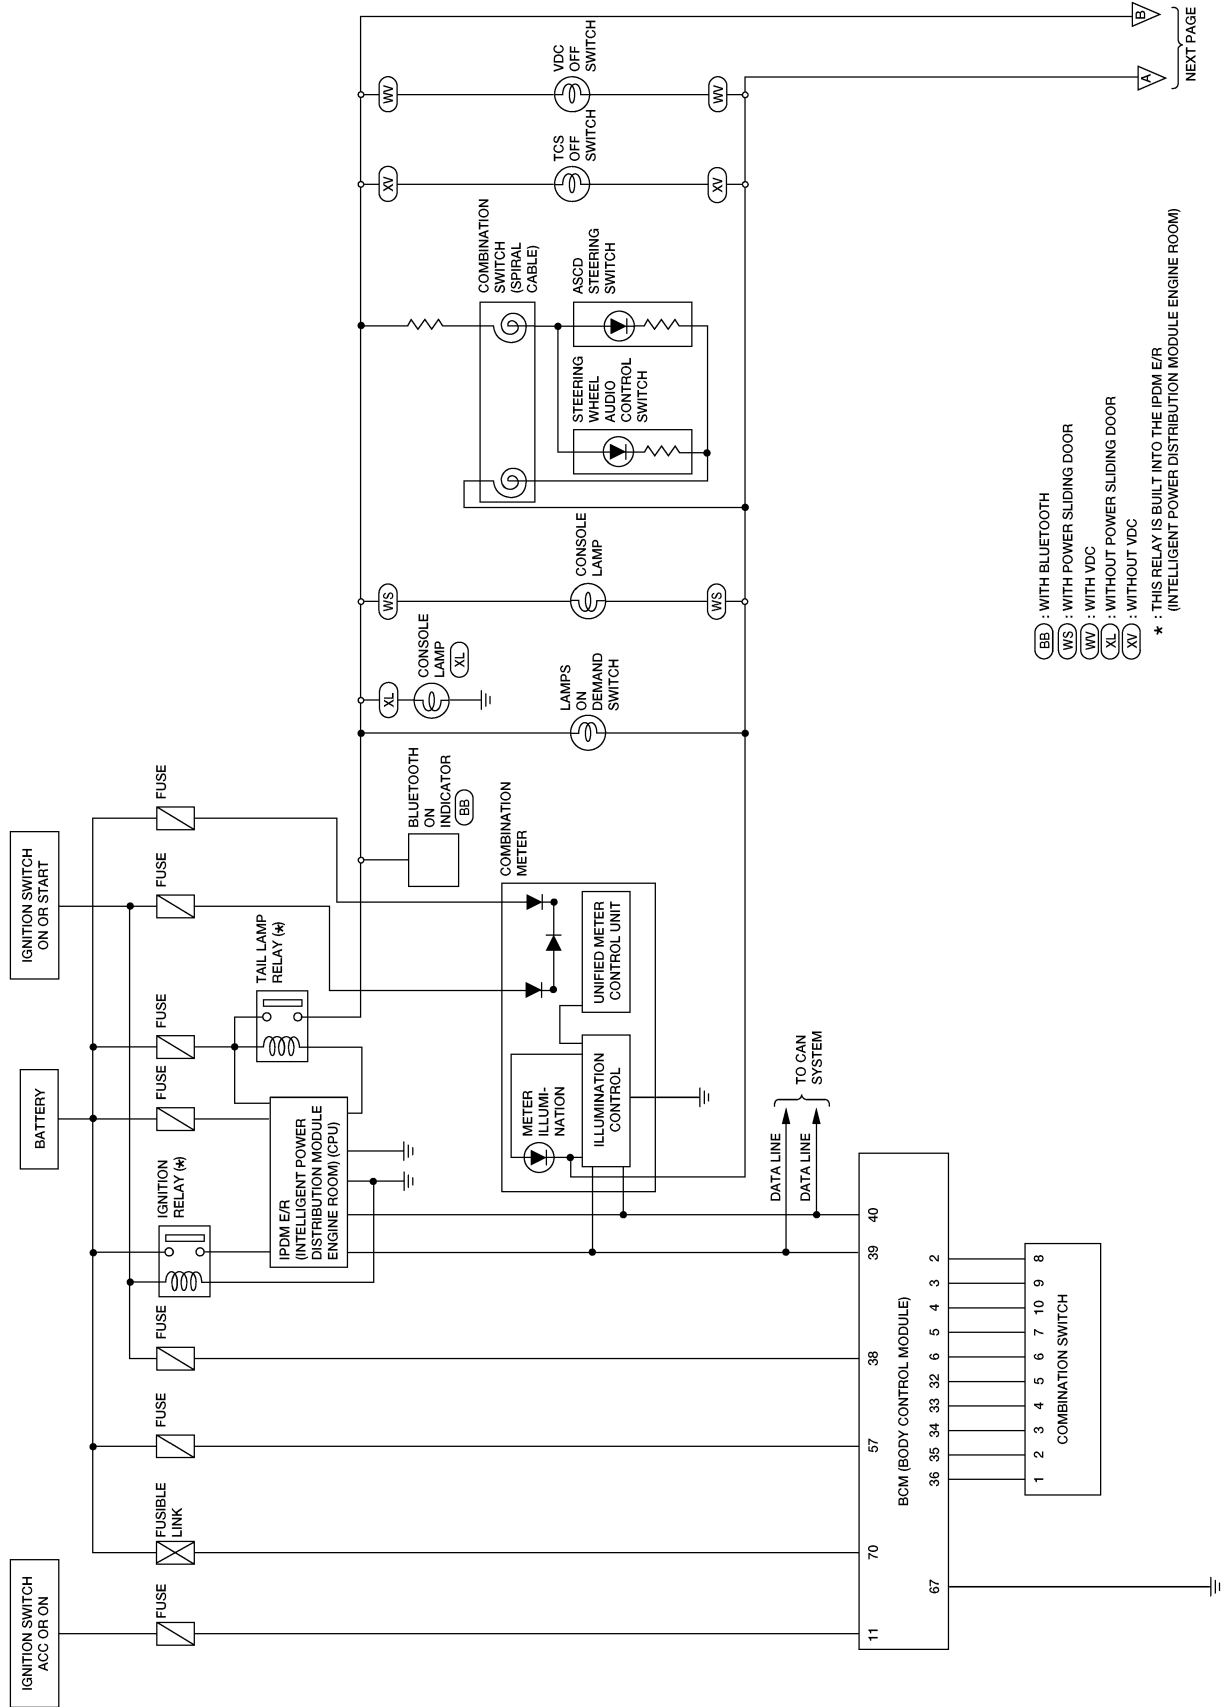

- (BB) : WITH BLUETOOTH
  - (WS) : WITH POWER SLIDING DOOR
  - (WV) : WITH VDC
  - (XL) : WITHOUT POWER SLIDING DOOR
  - (XV) : WITHOUT VDC
- \* : THIS RELAY IS BUILT INTO THE IPDM E/R  
(INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)



# ILLUMINATION

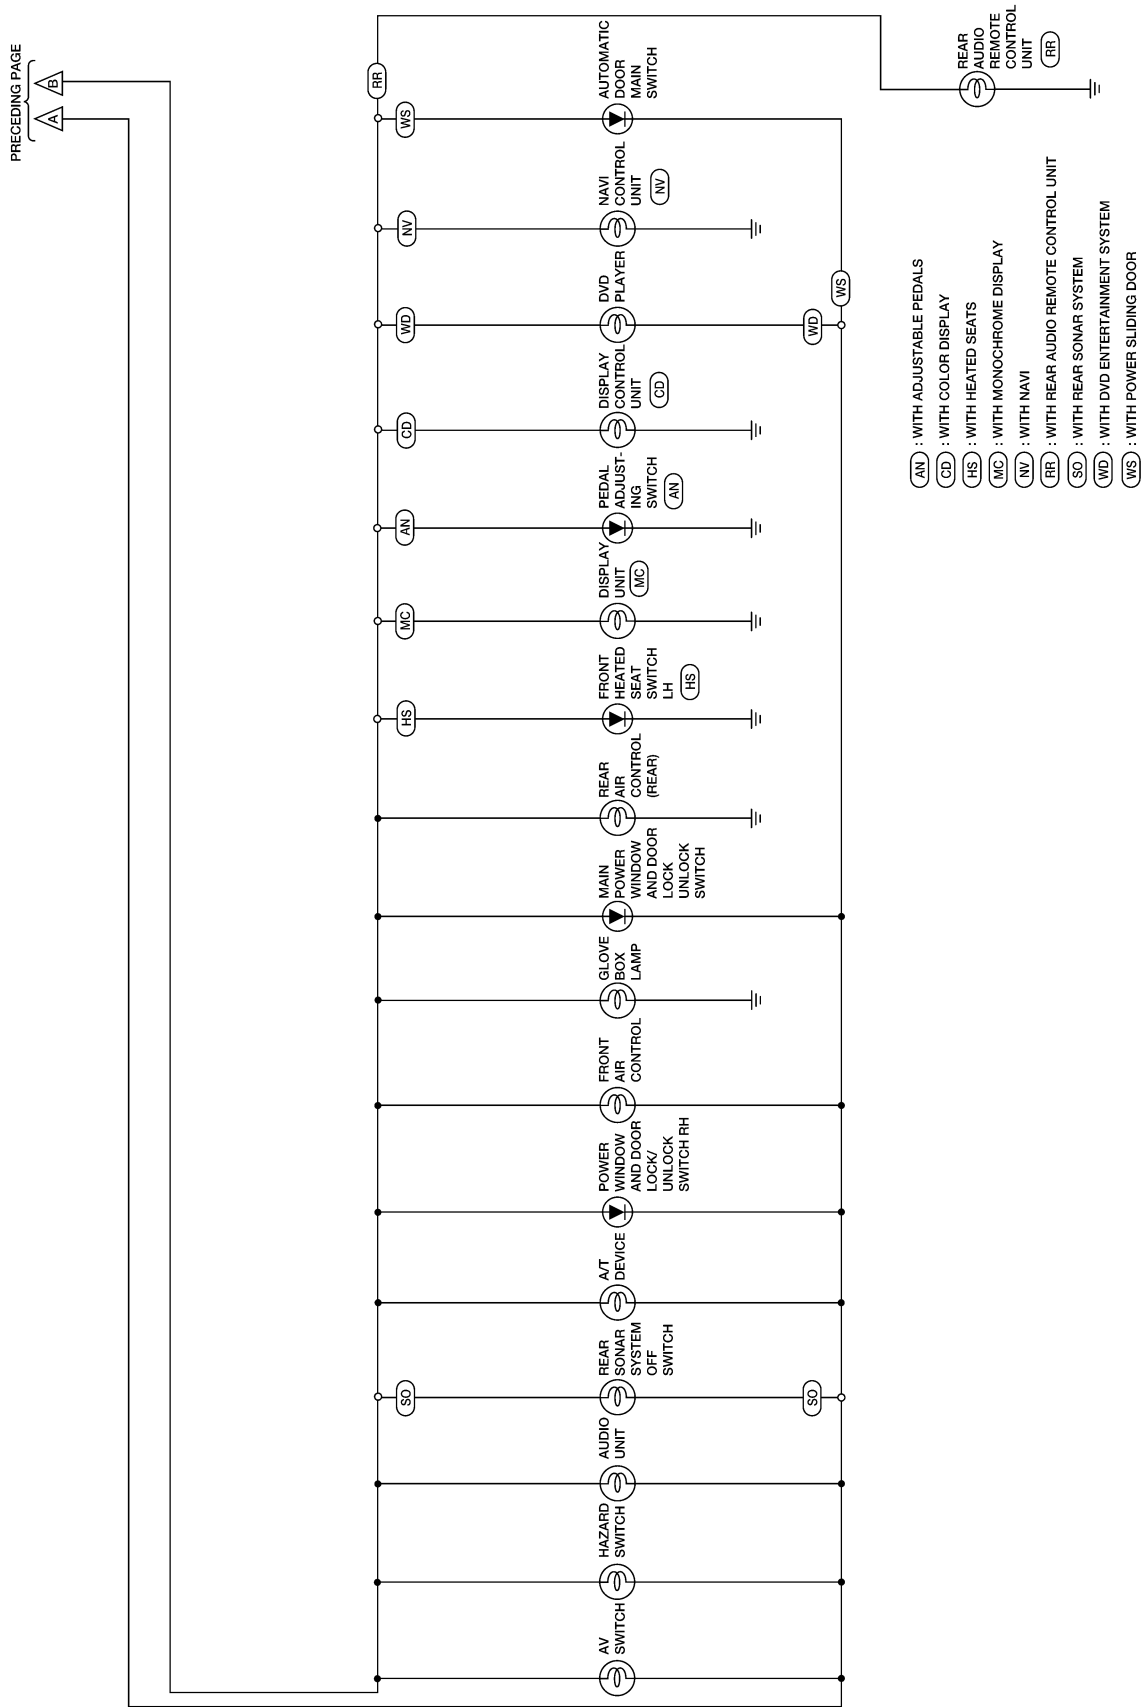



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# ILLUMINATION

## Wiring Diagram — ILL —

EKS00FER

LT-ILL-01

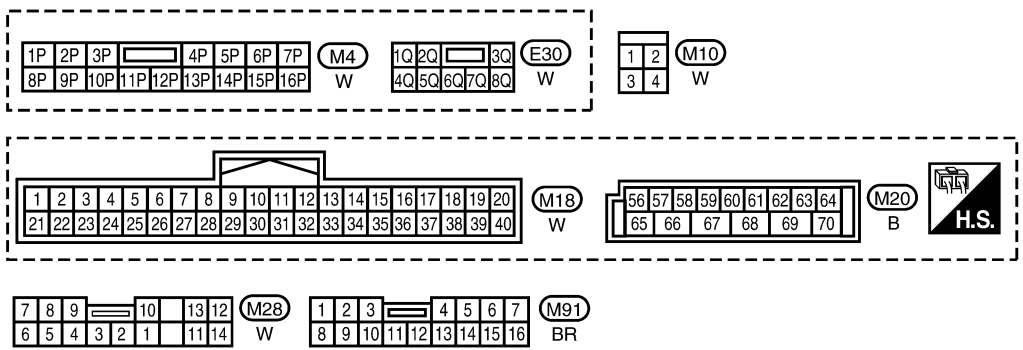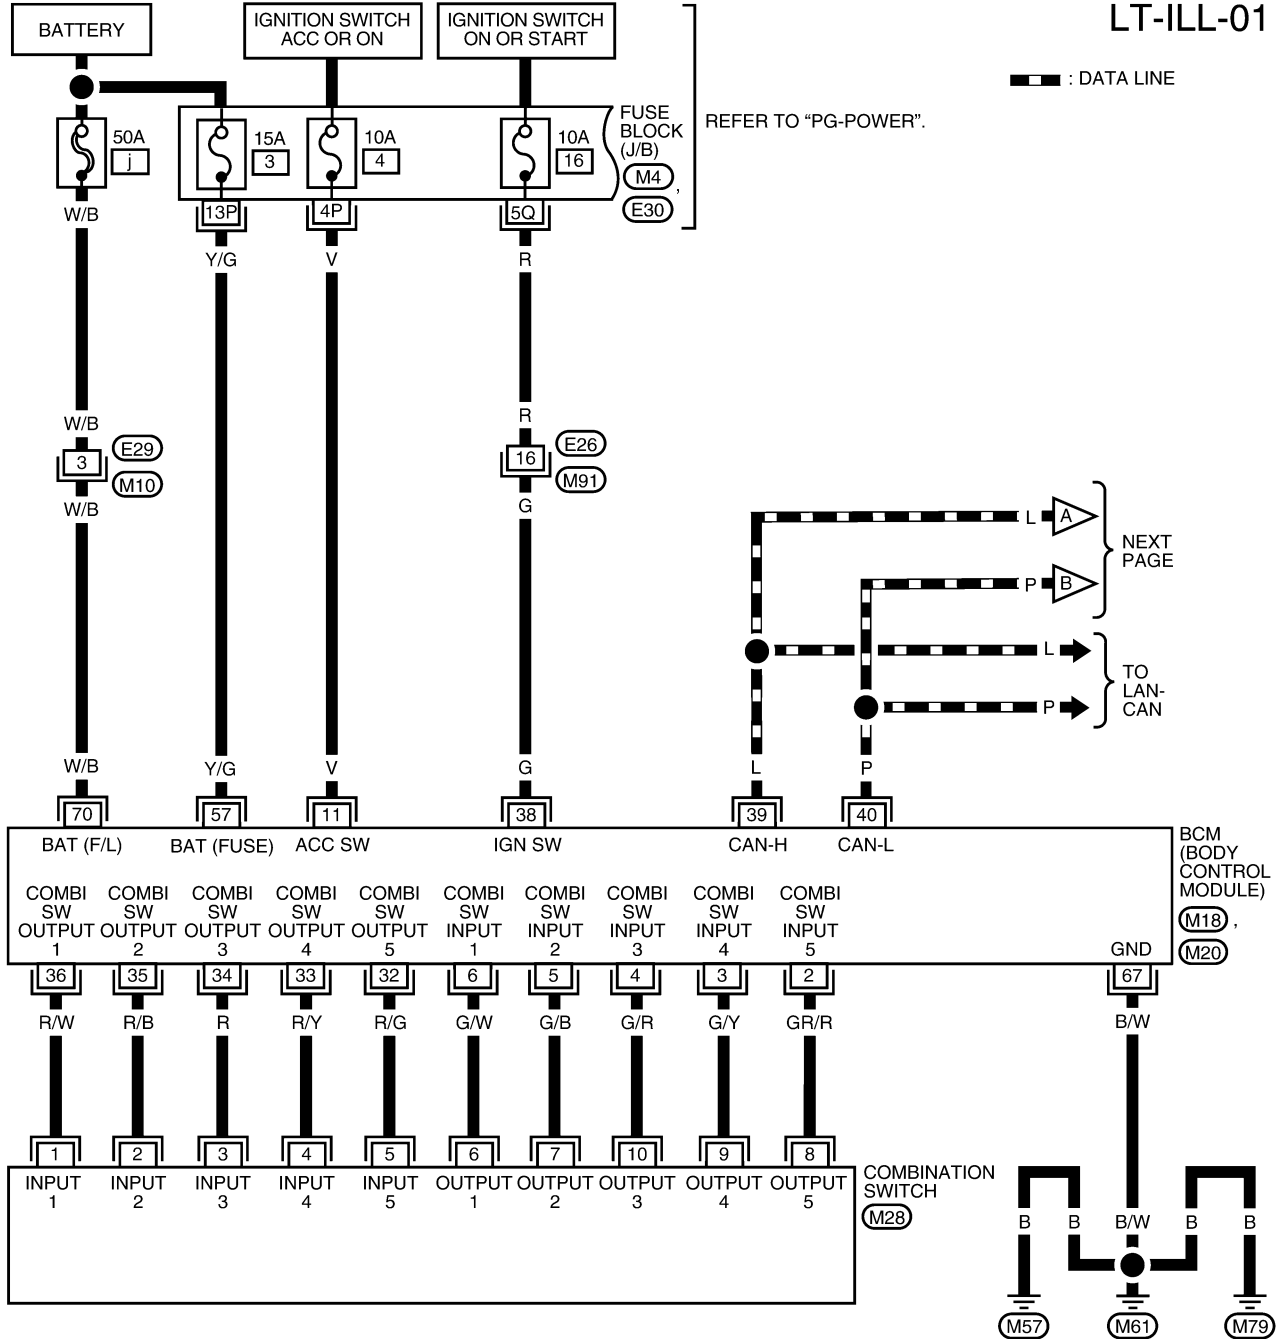


WKWA4724E


# ILLUMINATION

LT-ILL-02

▬ : DATA LINE

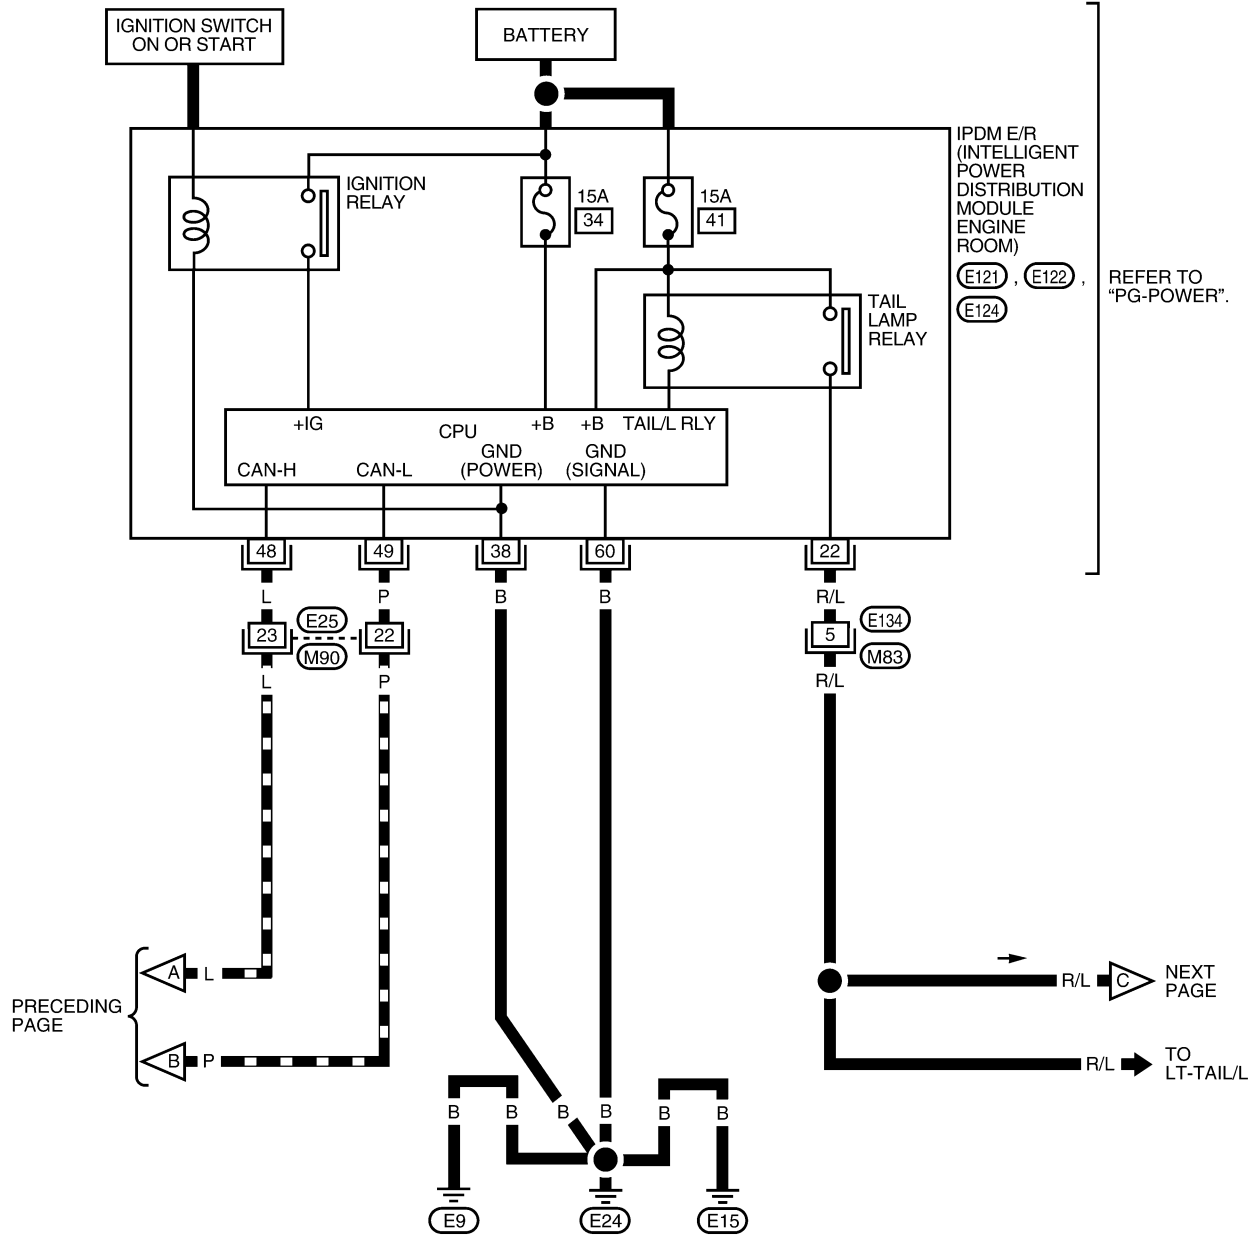



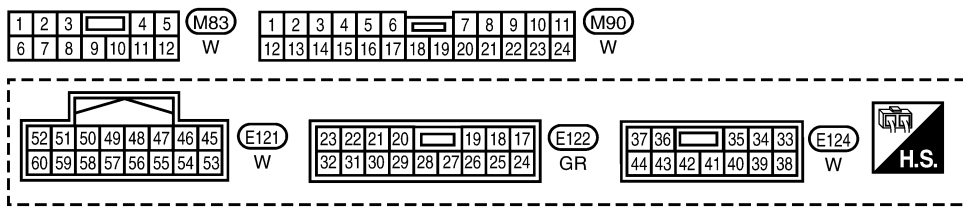

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M





WKWA4725E

# ILLUMINATION

LT-ILL-03

-  : WITH ADJUSTABLE PEDALS
-  : WITH HEATED SEATS
-  : WITH VDC
-  : WITHOUT VDC

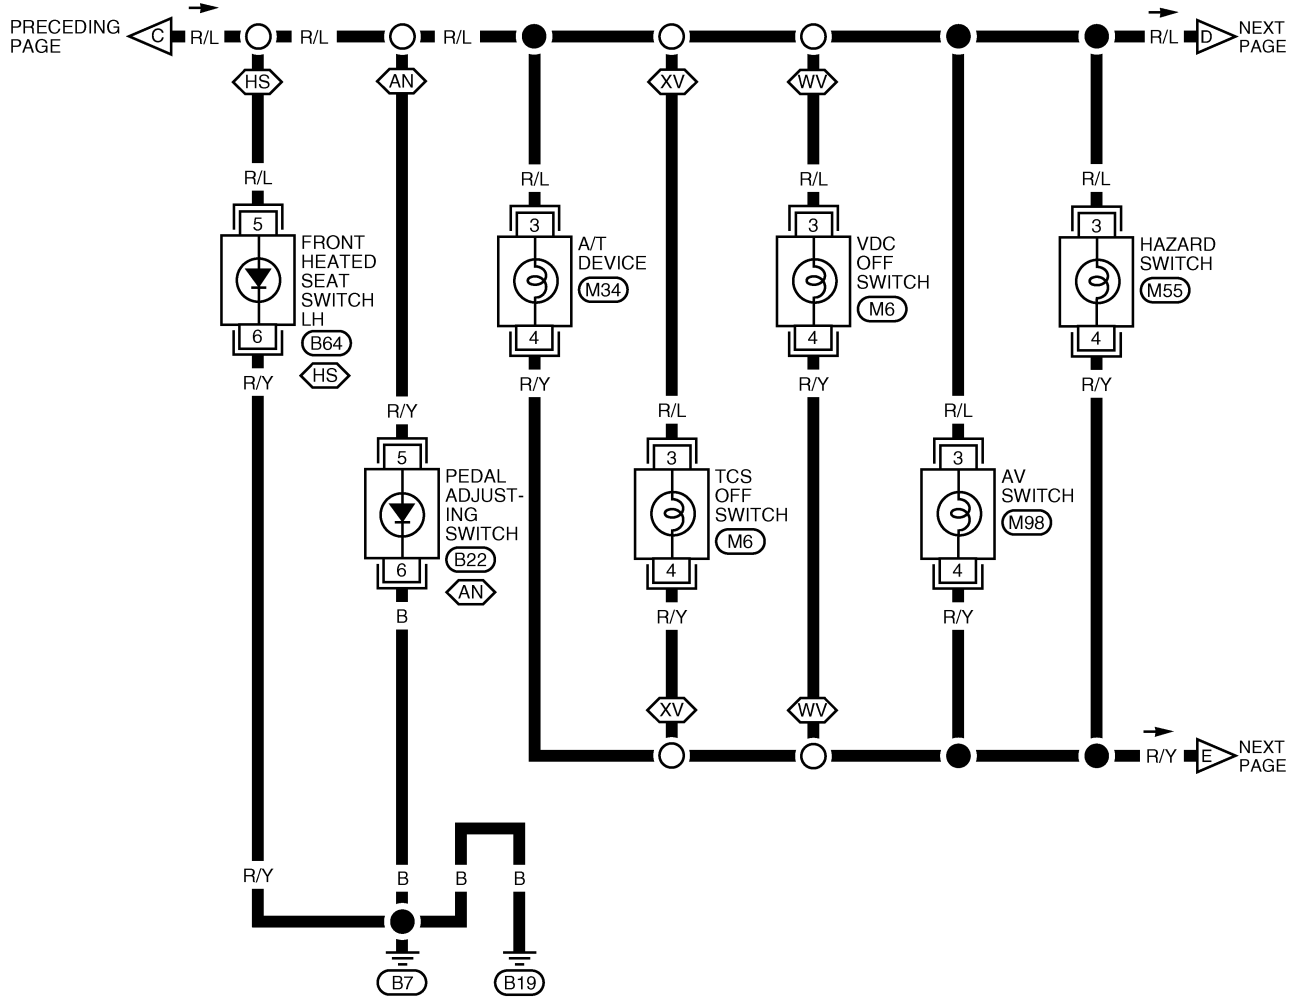



WKWA4726E

# ILLUMINATION

LT-ILL-04

SO : WITH REAR SONAR SYSTEM  
 WD : WITH DVD ENTERTAINMENT SYSTEM

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

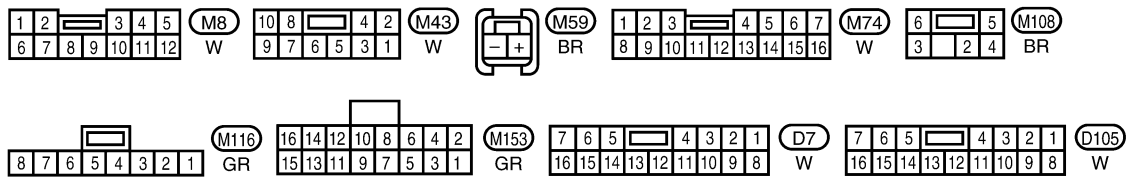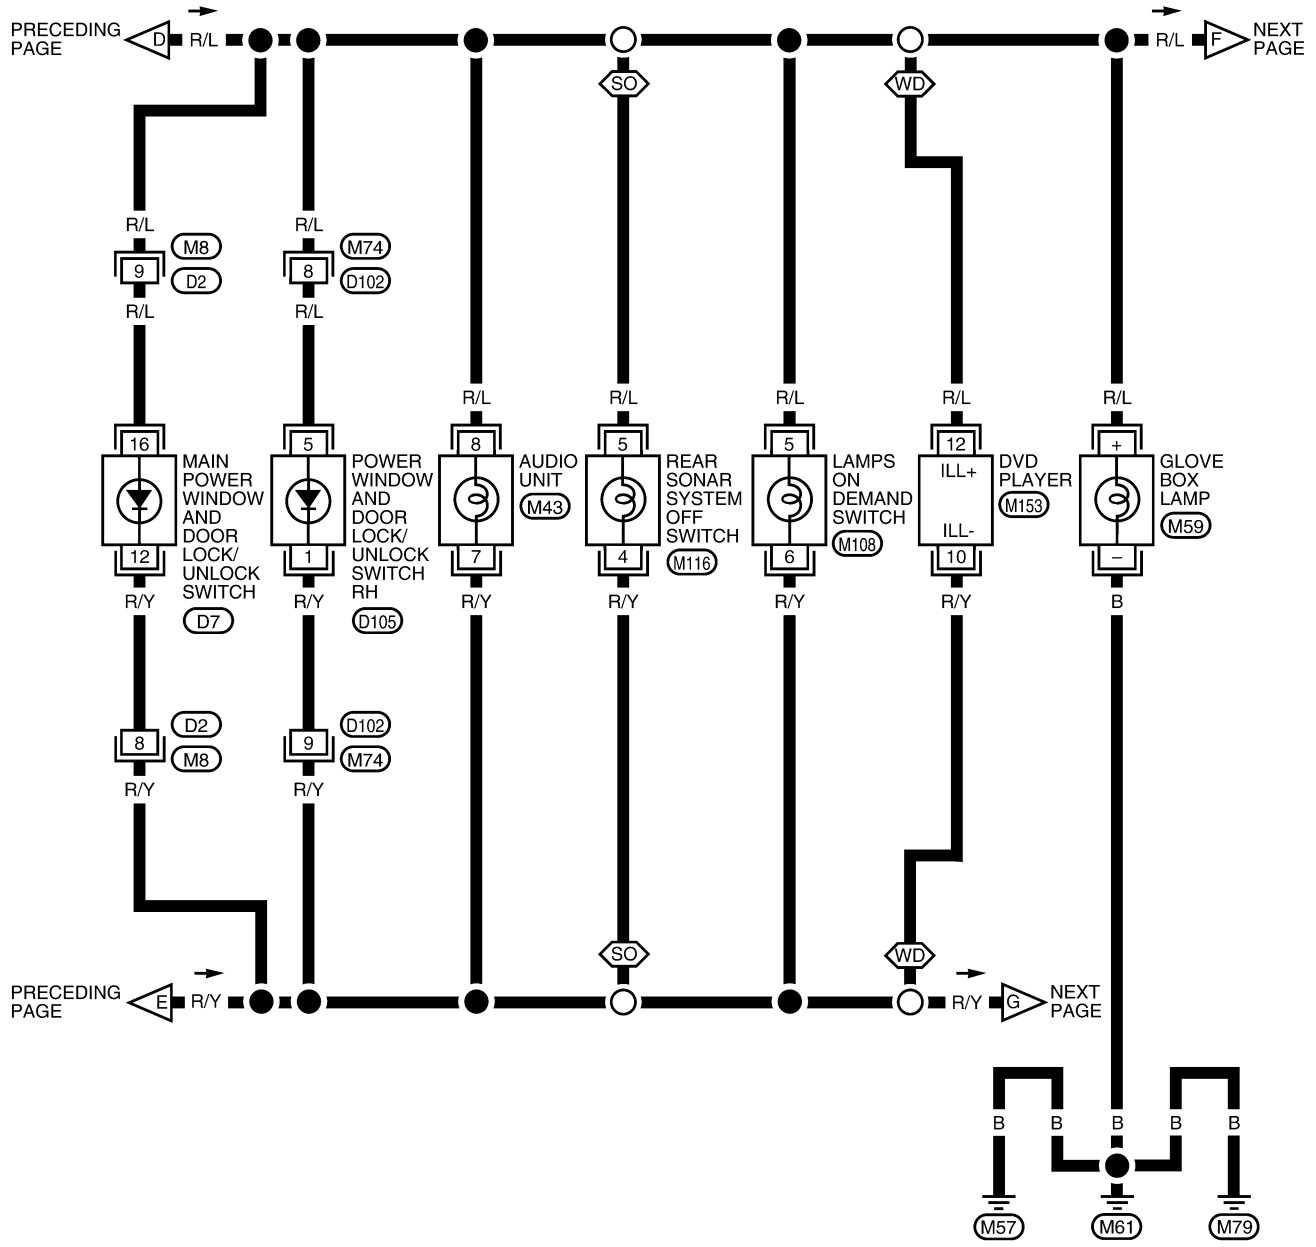



WKWA4727E

# ILLUMINATION

LT-ILL-05

⬡CD⬡ : WITH COLOR DISPLAY

⬡MC⬡ : WITH MONOCHROME DISPLAY


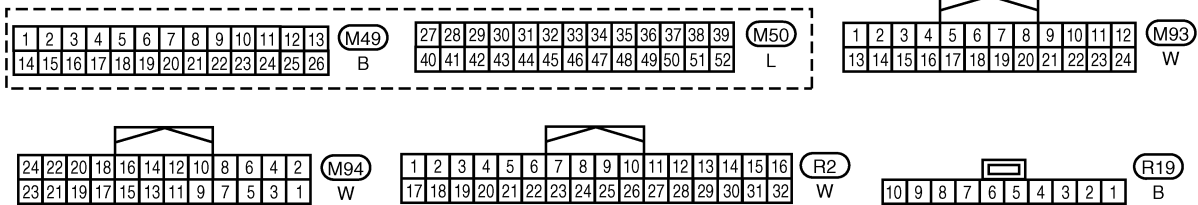
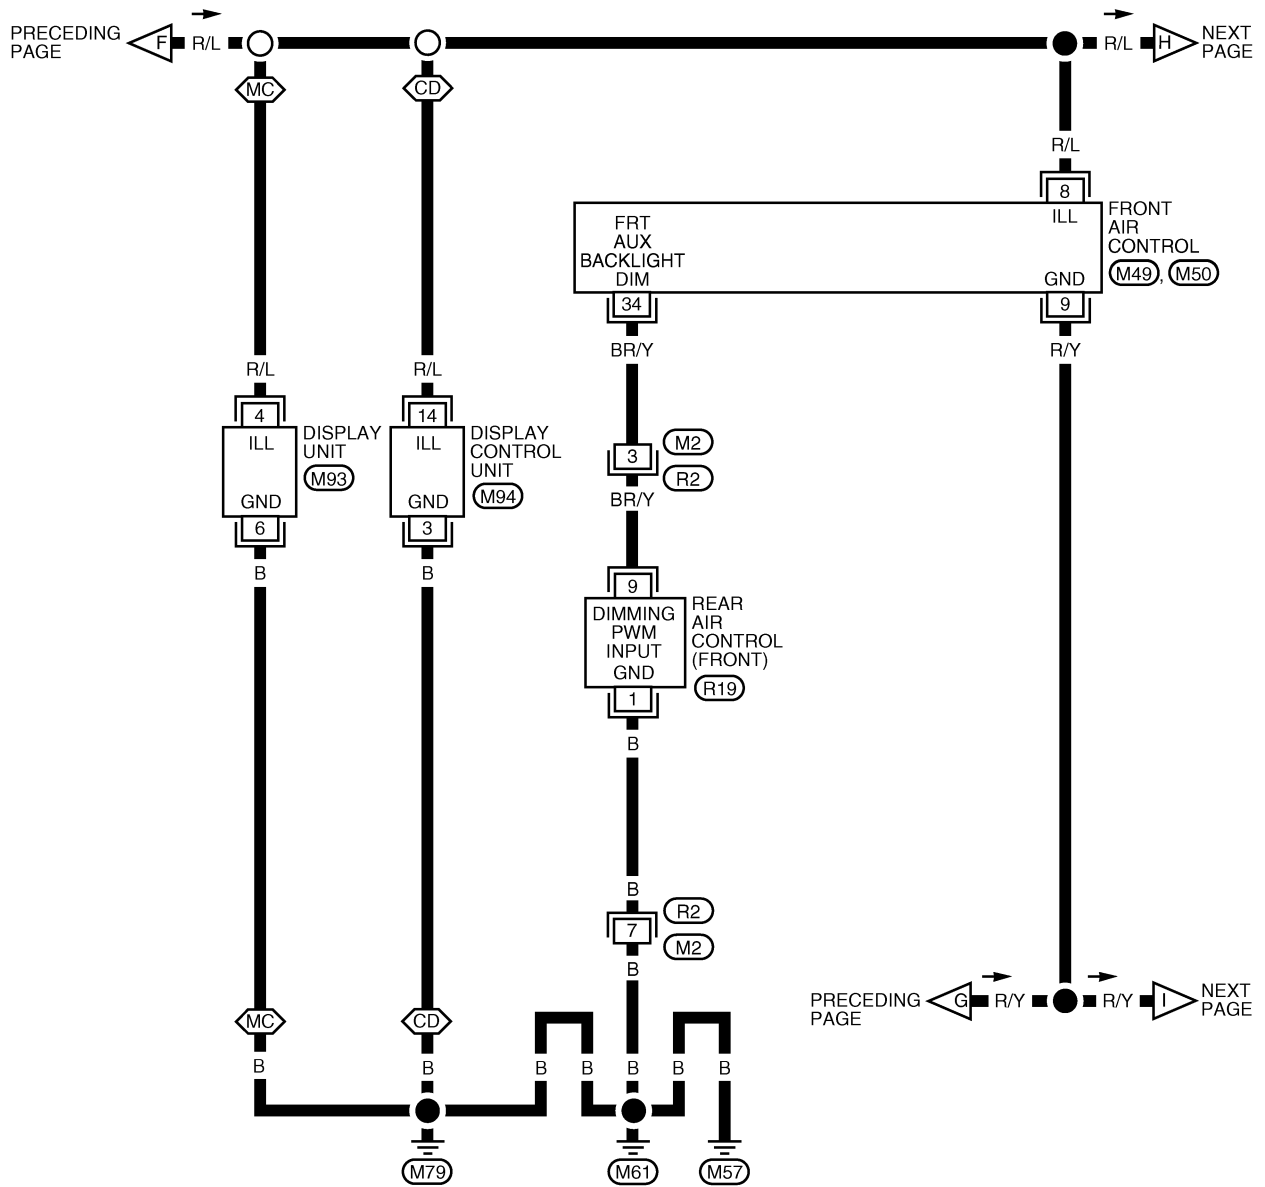


WKWA4728E



# ILLUMINATION

LT-ILL-06

(NV) : WITH NAVI  
(HS) : WITH HEATED SEATS

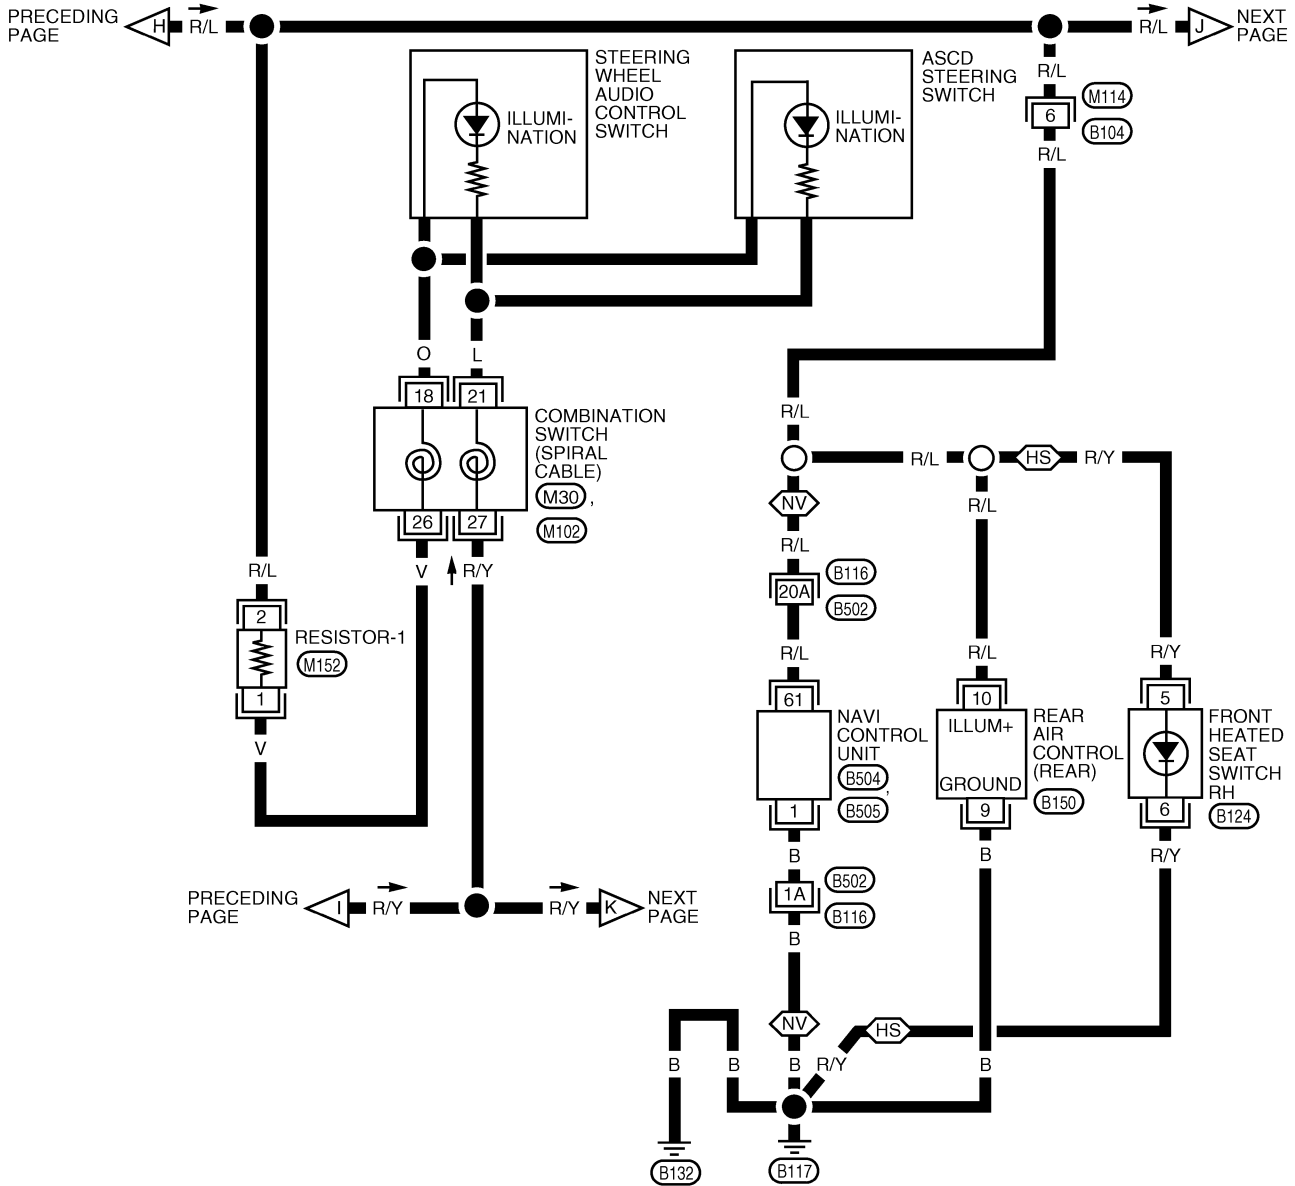

REFER TO THE FOLLOWING.  
(B116) - SUPER MULTIPLE JUNCTION (SMJ)







\* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA4729E

# ILLUMINATION

LT-ILL-07

- ⬡BB : WITH BLUETOOTH
- ⬡RR : WITH REAR AUDIO REMOTE CONTROL UNIT
- ⬡WS : WITH POWER SLIDING DOOR
- ⬡XL : WITHOUT POWER SLIDING DOOR

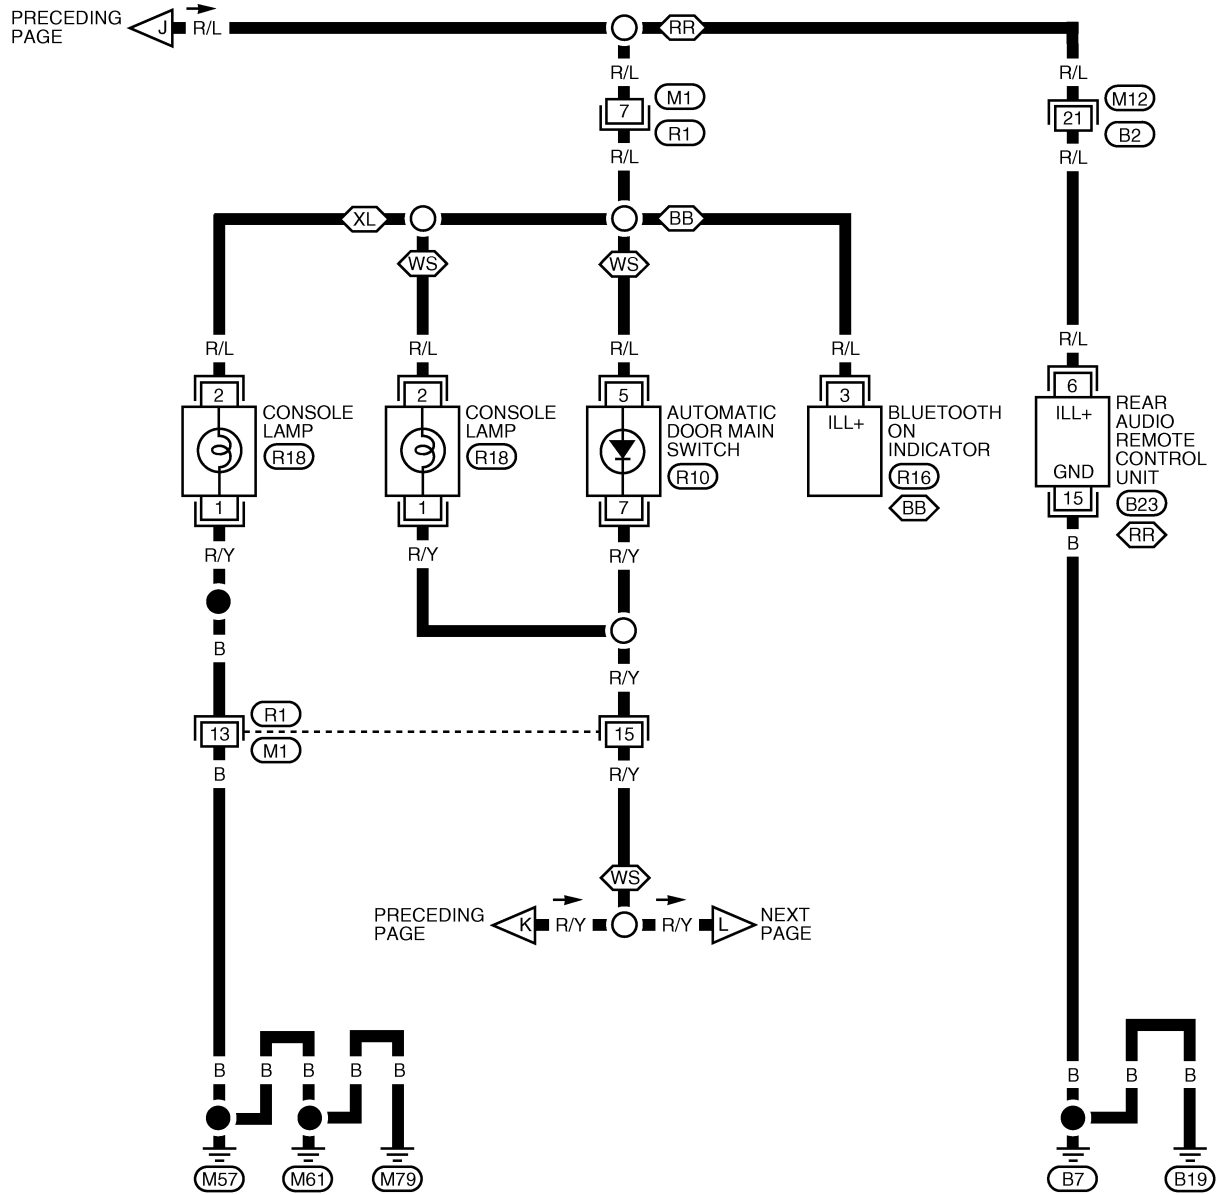


WKWA4730E




# ILLUMINATION

LT-ILL-08

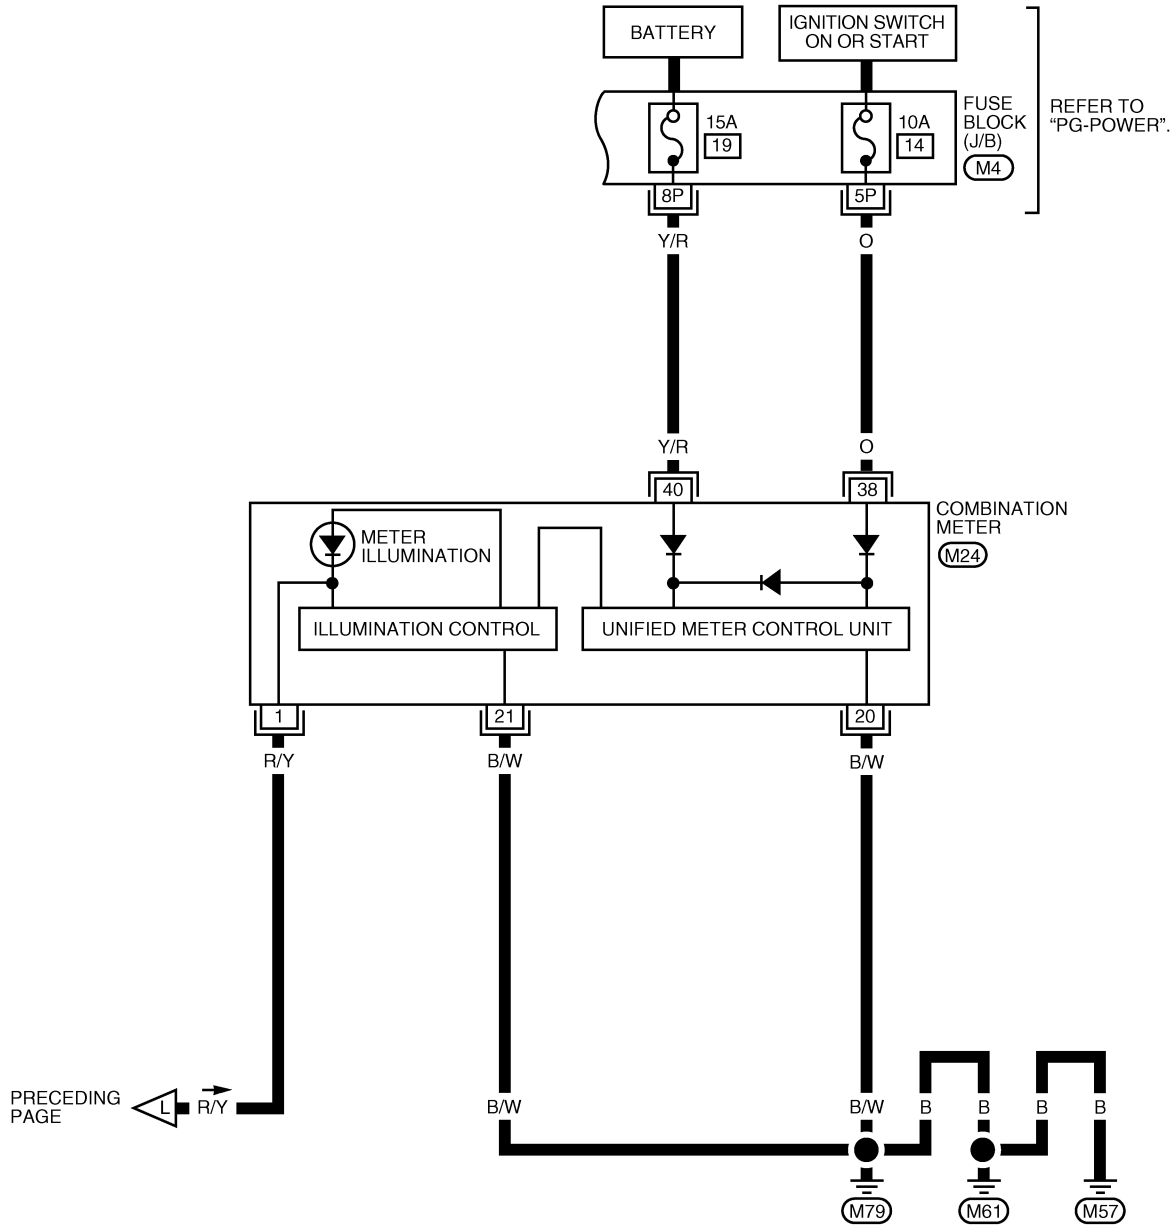

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M



WKWA4731E

# BULB SPECIFICATIONS

## BULB SPECIFICATIONS

PFP:26297

### Headlamp

EKS00FET

Item	Wattage (W)*
Low	51 (HB4)
High	60 (HB3)

\*: Always check with the Parts Department for the latest parts information.

### Exterior Lamp

EKS00FEU

Item	Wattage (W)*	
Front combination lamp	Turn signal lamp/parking lamp	29/8
	Cornering lamp	27
Rear combination lamp	Stop/Tail lamp	27/7
	Turn signal lamp	27
	Back-up lamp	18
Fog lamp	55 (H11)	
License plate lamp	5	
High-mounted stop lamp	13	

\*: Always check with the Parts Department for the latest parts information.

### Interior Lamp/Illumination

EKS00FEV

Item	Wattage (W)*
Glove box lamp	3.4
Ignition keyhole illumination lamp	0.74
Room/Map lamp	8
Console lamp	LED
A/T device lamp	3
Foot lamp	3.4
Step lamp	3.8
Cargo lamp	7
Vanity lamp	1.32
Personal lamp (with rear roof console assembly)	8
Personal lamp (without rear roof console assembly)	8
Running board lamp	3.4

\*: Always check with the Parts Department for the latest parts information.