

SECTION **CVT**
CVT

A
B
CVT

CONTENTS

| | | | |
|---|-----------|--|--|
| INDEX FOR DTC | 6 | | |
| Alphabetical Index | 6 | | |
| DTC No. Index | 7 | | |
| PRECAUTIONS | 8 | | |
| Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" | 8 | | |
| Precautions Necessary for Steering Wheel Rotation After Battery Disconnect | 8 | | |
| OPERATION PROCEDURE | 8 | | |
| Precautions for On Board Diagnostic (OBD) System of CVT and Engine | 9 | | |
| Service After Replacing TCM and Transaxle Assembly | 9 | | |
| SERVICE AFTER REPLACING TCM AND TRANSAXLE ASSEMBLY | 9 | | |
| PATTERN A | 9 | | |
| PATTERN B | 9 | | |
| PATTERN C | 11 | | |
| Removal and Installation Procedure for CVT Unit Connector | 11 | | |
| REMOVAL | 11 | | |
| INSTALLATION | 12 | | |
| Precautions | 13 | | |
| Service Notice or Precautions | 13 | | |
| CVT FLUID COOLER SERVICE | 13 | | |
| OBD-II SELF-DIAGNOSIS | 14 | | |
| PREPARATION | 15 | | |
| Special Service Tools | 15 | | |
| Commercial Service Tools | 15 | | |
| CVT FLUID | 16 | | |
| Checking CVT Fluid | 16 | | |
| FLUID LEVEL CHECK | 16 | | |
| FLUID CONDITION CHECK | 17 | | |
| Changing CVT Fluid | 17 | | |
| CVT Fluid Cooler Cleaning | 18 | | |
| CVT FLUID COOLER CLEANING PROCEDURE | 18 | | |
| CVT FLUID COOLER DIAGNOSIS PROCEDURE | 19 | | |
| DURE | 19 | | |
| CVT FLUID COOLER INSPECTION PROCEDURE | 20 | | |
| DURE | 20 | | |
| CVT FLUID COOLER FINAL INSPECTION | 20 | | |
| CVT SYSTEM | 21 | | |
| Cross-sectional View - RE0F08A | 21 | | |
| Control System | 22 | | |
| Hydraulic Control System | 23 | | |
| TCM Function | 24 | | |
| CONTROL SYSTEM OUTLINE | 24 | | |
| CONTROL SYSTEM DIAGRAM | 24 | | |
| CAN Communication | 25 | | |
| SYSTEM DESCRIPTION | 25 | | |
| Input/Output Signal of TCM | 25 | | |
| Line Pressure and Secondary Pressure Control | 26 | | |
| NORMAL CONTROL | 26 | | |
| FEEDBACK CONTROL | 26 | | |
| Shift Control | 26 | | |
| "D" POSITION | 27 | | |
| OVERDRIVE-OFF MODE | 27 | | |
| "L" POSITION | 27 | | |
| DOWNHILL ENGINE BRAKE CONTROL (AUTO ENGINE BRAKE CONTROL) | 27 | | |
| ACCELERATION CONTROL | 27 | | |
| Lock-up and Select Control | 28 | | |
| TORQUE CONVERTER CLUTCH AND SELECT CONTROL VALVE CONTROL | 28 | | |
| Control Valve | 29 | | |
| FUNCTION OF CONTROL VALVE | 29 | | |
| ON BOARD DIAGNOSTIC (OBD) SYSTEM | 30 | | |
| Introduction | 30 | | |
| OBD-II Function for CVT System | 30 | | |
| One or Two Trip Detection Logic of OBD-II | 30 | | |
| ONE TRIP DETECTION LOGIC | 30 | | |
| TWO TRIP DETECTION LOGIC | 30 | | |
| OBD-II Diagnostic Trouble Code (DTC) | 30 | | |
| HOW TO READ DTC AND 1ST TRIP DTC | 30 | | |
| HOW TO ERASE DTC | 31 | | |
| HOW TO ERASE DTC (WITH CONSULT-II) | 32 | | |

D
E
F
G
H
I
J
K
L
M

| | | | |
|--|-----------|---|-----------|
| HOW TO ERASE DTC (WITH GST) | 32 | Description | 72 |
| Malfunction Indicator Lamp (MIL) | 33 | CONSULT-II Reference Value | 72 |
| DESCRIPTION | 33 | On Board Diagnosis Logic | 72 |
| TROUBLE DIAGNOSIS | 34 | Possible Cause | 72 |
| DTC Inspection Priority Chart | 34 | DTC Confirmation Procedure | 72 |
| Fail-safe | 34 | WITH CONSULT-II | 72 |
| FAIL-SAFE FUNCTION | 34 | Wiring Diagram — CVT — STSIG | 73 |
| How to Perform Trouble Diagnosis for Quick and | | Diagnostic Procedure | 74 |
| Accurate Repair | 35 | DTC P0703 STOP LAMP SWITCH CIRCUIT | 76 |
| INTRODUCTION | 35 | Description | 76 |
| WORK FLOW | 36 | CONSULT-II Reference Value | 76 |
| DIAGNOSTIC WORKSHEET | 37 | On Board Diagnosis Logic | 76 |
| CVT Electrical Parts Location | 40 | Possible Cause | 76 |
| Circuit Diagram | 42 | DTC Confirmation Procedure | 76 |
| Inspections before Trouble Diagnosis | 43 | WITH CONSULT-II | 76 |
| CVT FLUID CHECK | 43 | Diagnostic Procedure | 77 |
| STALL TEST | 43 | DTC P0705 PARK/NEUTRAL POSITION SWITCH... 78 | |
| LINE PRESSURE TEST | 45 | Description | 78 |
| Road Test | 46 | CONSULT-II Reference Value | 78 |
| DESCRIPTION | 46 | On Board Diagnosis Logic | 78 |
| CONSULT-II OPERATION PROCEDURE | 47 | Possible Cause | 78 |
| Check before Engine Is Started | 49 | DTC Confirmation Procedure | 78 |
| Check at Idle | 49 | WITH CONSULT-II | 79 |
| Cruise Test | 50 | WITH GST | 79 |
| Vehicle Speed When Shifting Gears | 53 | Wiring Diagram — CVT — PNP/SW | 80 |
| TCM Input/Output Signal Reference Values | 54 | Diagnostic Procedure | 82 |
| TCM TERMINAL CONNECTOR LAYOUT | 54 | Component Inspection | 84 |
| TCM INSPECTION TABLE | 54 | PNP SWITCH | 84 |
| CONSULT-II Function (TRANSMISSION) | 57 | DTC P0710 CVT FLUID TEMPERATURE SENSOR | |
| FUNCTION | 57 | CIRCUIT | 85 |
| CONSULT-II REFERENCE VALUE | 57 | Description | 85 |
| CONSULT-II SETTING PROCEDURE | 59 | CONSULT-II Reference Value | 85 |
| WORK SUPPORT MODE | 59 | On Board Diagnosis Logic | 85 |
| SELF-DIAGNOSTIC RESULT MODE | 60 | Possible Cause | 85 |
| DATA MONITOR MODE | 64 | DTC Confirmation Procedure | 85 |
| CAN DIAGNOSTIC SUPPORT MONITOR | | WITH CONSULT-II | 85 |
| MODE | 66 | WITH GST | 85 |
| Diagnostic Procedure without CONSULT-II | 67 | Wiring Diagram — CVT — FTS | 86 |
| OBD-II SELF-DIAGNOSTIC PROCEDURE | | Diagnostic Procedure | 87 |
| (WITH GST) | 67 | Component Inspection | 89 |
| DTC U1000 CAN COMMUNICATION LINE | 68 | CVT FLUID TEMPERATURE SENSOR | 89 |
| Description | 68 | DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI | |
| On Board Diagnosis Logic | 68 | SPEED SENSOR) | 90 |
| Possible Cause | 68 | Description | 90 |
| DTC Confirmation Procedure | 68 | CONSULT-II Reference Value | 90 |
| WITH CONSULT-II | 68 | On Board Diagnosis Logic | 90 |
| WITH GST | 68 | Possible Cause | 90 |
| Wiring Diagram — CVT — CAN | 69 | DTC Confirmation Procedure | 90 |
| Diagnostic Procedure | 70 | WITH CONSULT-II | 90 |
| DTC U1010 TRANSMISSION CONTROL MODULE | | WITH GST | 90 |
| (CAN) | 71 | Wiring Diagram — CVT — PRSCVT | 91 |
| Description | 71 | Diagnostic Procedure | 92 |
| On Board Diagnosis Logic | 71 | DTC P0720 VEHICLE SPEED SENSOR CVT (SEC- | |
| Possible Cause | 71 | ONDARY SPEED SENSOR) | 95 |
| DTC Confirmation Procedure | 71 | Description | 95 |
| WITH CONSULT-II | 71 | CONSULT-II Reference Value | 95 |
| WITH GST | 71 | On Board Diagnosis Logic | 95 |
| Diagnostic Procedure | 71 | Possible Cause | 95 |
| DTC P0615 START SIGNAL CIRCUIT | 72 | DTC Confirmation Procedure | 95 |

| | | | | |
|---|------------|---|------------|------------|
| WITH CONSULT-II | 95 | Description | 118 | |
| WITH GST | 95 | CONSULT-II Reference Value | 118 | A |
| Wiring Diagram — CVT — SESCOVT | 96 | On Board Diagnosis Logic | 118 | |
| Diagnostic Procedure | 97 | Possible Cause | 118 | |
| DTC P0725 ENGINE SPEED SIGNAL | 101 | DTC Confirmation Procedure | 118 | B |
| Description | 101 | WITH CONSULT-II | 118 | |
| CONSULT-II Reference Value | 101 | WITH GST | 118 | |
| On Board Diagnosis Logic | 101 | Diagnostic Procedure | 119 | |
| Possible Cause | 101 | DTC P0776 PRESSURE CONTROL SOLENOID B | | CVT |
| DTC Confirmation Procedure | 101 | PERFORMANCE (SEC PRESSURE SOLENOID | | |
| WITH CONSULT-II | 101 | VALVE) | 121 | |
| Diagnostic Procedure | 101 | Description | 121 | D |
| DTC P0730 BELT DAMAGE | 103 | CONSULT-II Reference Value | 121 | |
| Description | 103 | On Board Diagnosis Logic | 121 | |
| CONSULT-II Reference Value | 103 | Possible Cause | 121 | E |
| On Board Diagnosis Logic | 103 | DTC Confirmation Procedure | 121 | |
| Possible Cause | 103 | WITH CONSULT-II | 121 | |
| DTC Confirmation Procedure | 103 | WITH GST | 121 | F |
| WITH CONSULT-II | 103 | Diagnostic Procedure | 122 | |
| Diagnostic Procedure | 104 | DTC P0778 PRESSURE CONTROL SOLENOID B | | |
| DTC P0740 TORQUE CONVERTER CLUTCH | | ELECTRICAL (SEC PRESSURE SOLENOID | | |
| SOLENOID VALVE | 105 | VALVE) | 124 | G |
| Description | 105 | Description | 124 | |
| CONSULT-II Reference Value | 105 | CONSULT-II Reference Value | 124 | |
| On Board Diagnosis Logic | 105 | On Board Diagnosis Logic | 124 | H |
| Possible Cause | 105 | Possible Cause | 124 | |
| DTC Confirmation Procedure | 105 | DTC Confirmation Procedure | 124 | |
| WITH CONSULT-II | 105 | WITH CONSULT-II | 124 | I |
| WITH GST | 105 | WITH GST | 124 | |
| Wiring Diagram — CVT — TCV | 106 | Wiring Diagram — CVT — SECPSV | 125 | |
| Diagnostic Procedure | 107 | Diagnostic Procedure | 126 | J |
| Component Inspection | 109 | Component Inspection | 128 | |
| TORQUE CONVERTER CLUTCH SOLENOID | | PRESSURE CONTROL SOLENOID VALVE B | | |
| VALVE | 109 | (SECONDARY PRESSURE SOLENOID VALVE) | | |
| DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP) | 110 | | 128 | K |
| Description | 110 | DTC P0840 TRANSMISSION FLUID PRESSURE | | |
| CONSULT-II Reference Value | 110 | SENSOR A CIRCUIT (SEC PRESSURE SENSOR) | 129 | |
| On Board Diagnosis Logic | 110 | Description | 129 | L |
| Possible Cause | 110 | CONSULT-II Reference Value | 129 | |
| DTC Confirmation Procedure | 110 | On Board Diagnosis Logic | 129 | |
| WITH CONSULT-II | 110 | Possible Cause | 129 | |
| WITH GST | 110 | DTC Confirmation Procedure | 129 | M |
| Diagnostic Procedure | 111 | WITH CONSULT-II | 129 | |
| DTC P0745 LINE PRESSURE SOLENOID VALVE | 113 | WITH GST | 129 | |
| Description | 113 | Wiring Diagram — CVT — SECPS | 130 | |
| CONSULT-II Reference Value | 113 | Diagnostic Procedure | 131 | |
| On Board Diagnosis Logic | 113 | DTC P0841 PRESSURE SENSOR FUNCTION | 134 | |
| Possible Cause | 113 | Description | 134 | |
| DTC Confirmation Procedure | 113 | CONSULT-II Reference Value | 134 | |
| WITH CONSULT-II | 113 | On Board Diagnosis Logic | 134 | |
| WITH GST | 113 | Possible Cause | 134 | |
| Wiring Diagram — CVT — LPSV | 114 | DTC Confirmation Procedure | 134 | |
| Diagnostic Procedure | 115 | WITH CONSULT-II | 134 | |
| Component Inspection | 117 | Diagnostic Procedure | 135 | |
| PRESSURE CONTROL SOLENOID VALVE A | | DTC P0845 TRANSMISSION FLUID PRESSURE | | |
| (LINE PRESSURE SOLENOID VALVE) | 117 | SENSOR B CIRCUIT (PRI PRESSURE SENSOR) | 137 | |
| DTC P0746 PRESSURE CONTROL SOLENOID A | | Description | 137 | |
| PERFORMANCE (LINE PRESSURE SOLENOID | | CONSULT-II Reference Value | 137 | |
| VALVE) | 118 | On Board Diagnosis Logic | 137 | |

| | | | |
|--|------------|--|------------|
| Possible Cause | 137 | Possible Cause | 158 |
| DTC Confirmation Procedure | 137 | DTC Confirmation Procedure | 158 |
| WITH CONSULT-II | 137 | WITH CONSULT-II | 158 |
| WITH GST | 137 | WITH GST | 158 |
| Wiring Diagram — CVT — PRIPS | 138 | Wiring Diagram — CVT — L/USSV | 159 |
| Diagnostic Procedure | 139 | Diagnostic Procedure | 160 |
| DTC P0868 SECONDARY PRESSURE DOWN | 142 | Component Inspection | 162 |
| Description | 142 | LOCK-UP SELECT SOLENOID VALVE | 162 |
| CONSULT-II Reference Value | 142 | DTC P1745 LINE PRESSURE CONTROL | 163 |
| On Board Diagnosis Logic | 142 | Description | 163 |
| Possible Cause | 142 | On Board Diagnosis Logic | 163 |
| DTC Confirmation Procedure | 142 | Possible Cause | 163 |
| WITH CONSULT-II | 142 | DTC Confirmation Procedure | 163 |
| Diagnostic Procedure | 143 | WITH CONSULT-II | 163 |
| DTC P1701 TRANSMISSION CONTROL MODULE | | Diagnostic Procedure | 163 |
| (POWER SUPPLY) | 145 | DTC P1777 STEP MOTOR - CIRCUIT | 164 |
| Description | 145 | Description | 164 |
| On Board Diagnosis Logic | 145 | CONSULT-II Reference Value | 164 |
| Possible Cause | 145 | On Board Diagnosis Logic | 164 |
| DTC Confirmation Procedure | 145 | Possible Cause | 164 |
| WITH CONSULT-II | 145 | DTC Confirmation Procedure | 164 |
| Wiring Diagram — CVT — POWER | 146 | WITH CONSULT-II | 164 |
| Diagnostic Procedure | 147 | WITH GST | 164 |
| DTC P1705 THROTTLE POSITION SENSOR | 150 | Wiring Diagram — CVT — STM | 165 |
| Description | 150 | Diagnostic Procedure | 166 |
| CONSULT-II Reference Value | 150 | Component Inspection | 167 |
| On Board Diagnosis Logic | 150 | STEP MOTOR | 167 |
| Possible Cause | 150 | DTC P1778 STEP MOTOR - FUNCTION | 168 |
| DTC Confirmation Procedure | 150 | Description | 168 |
| WITH CONSULT-II | 150 | CONSULT-II Reference Value | 168 |
| Diagnostic Procedure | 151 | On Board Diagnosis Logic | 168 |
| DTC P1722 ESTM VEHICLE SPEED SIGNAL | 152 | Possible Cause | 168 |
| Description | 152 | DTC Confirmation Procedure | 168 |
| CONSULT-II Reference Value | 152 | WITH CONSULT-II | 168 |
| On Board Diagnosis Logic | 152 | WITH GST | 169 |
| Possible Cause | 152 | Diagnostic Procedure | 169 |
| DTC Confirmation Procedure | 152 | OVERDRIVE CONTROL SWITCH | 170 |
| WITH CONSULT-II | 152 | Description | 170 |
| Diagnostic Procedure | 153 | CONSULT-II Reference Value | 170 |
| DTC P1723 CVT SPEED SENSOR FUNCTION | 154 | Wiring Diagram — CVT — ODSW | 171 |
| Description | 154 | Diagnostic Procedure | 172 |
| On Board Diagnosis Logic | 154 | Component Inspection | 174 |
| Possible Cause | 154 | OVERDRIVE CONTROL SWITCH | 174 |
| DTC Confirmation Procedure | 154 | SHIFT POSITION INDICATOR CIRCUIT | 175 |
| WITH CONSULT-II | 154 | Description | 175 |
| Diagnostic Procedure | 155 | CONSULT-II Reference Value | 175 |
| DTC P1726 ELECTRIC THROTTLE CONTROL | | Diagnostic Procedure | 175 |
| SYSTEM | 156 | SHIFT POSITION INDICATOR SYMPTOM | |
| Description | 156 | CHART | 175 |
| On Board Diagnosis Logic | 156 | TROUBLE DIAGNOSIS FOR SYMPTOMS | 176 |
| Possible Cause | 156 | Wiring Diagram — CVT — NONDTC | 176 |
| DTC Confirmation Procedure | 156 | O/D OFF Indicator Lamp Does Not Come On | 180 |
| WITH CONSULT-II | 156 | SYMPTOM: | 180 |
| Diagnostic Procedure | 157 | DIAGNOSTIC PROCEDURE | 180 |
| DTC P1740 LOCK-UP SELECT SOLENOID VALVE | | Engine Cannot Be Started in “P” and “N” Position. | 181 |
| CIRCUIT | 158 | SYMPTOM: | 181 |
| Description | 158 | DIAGNOSTIC PROCEDURE | 181 |
| CONSULT-II Reference Value | 158 | In “P” Position, Vehicle Moves Forward or Backward | |
| On Board Diagnosis Logic | 158 | When Pushed | 182 |

| | | | | |
|---|------------|---|------------|-----|
| SYMPTOM: | 182 | ASSEMBLY | 194 | |
| DIAGNOSTIC PROCEDURE | 182 | Selector Lever Knob Removal and Installation | 195 | A |
| In "N" Position, Vehicle Moves | 182 | REMOVAL | 195 | |
| SYMPTOM: | 182 | INSTALLATION | 195 | |
| DIAGNOSTIC PROCEDURE | 182 | Adjustment of CVT Position | 195 | B |
| Large Shock "N" → "R" Position | 183 | Checking of CVT Position | 196 | |
| SYMPTOM: | 183 | CVT SHIFT LOCK SYSTEM | 197 | |
| DIAGNOSTIC PROCEDURE | 183 | Description | 197 | CVT |
| Vehicle Does Not Creep Backward in "R" Position | 184 | Shift Lock System Electrical Parts Location | 197 | |
| SYMPTOM: | 184 | Wiring Diagram — CVT — SHIFT | 198 | |
| DIAGNOSTIC PROCEDURE | 184 | Diagnostic Procedure | 199 | |
| Vehicle Does Not Creep Forward in "D" or "L" Position | 185 | KEY INTERLOCK CABLE | 202 | D |
| SYMPTOM: | 185 | Removal and Installation | 202 | |
| DIAGNOSTIC PROCEDURE | 185 | COMPONENTS | 202 | |
| Vehicle Speed Does Not Change in "L" Position | 186 | REMOVAL | 202 | E |
| SYMPTOM: | 186 | INSTALLATION | 203 | |
| DIAGNOSTIC PROCEDURE | 186 | AIR BREATHER HOSE | 205 | |
| Vehicle Speed Does Not Change in overdrive-off mode | 187 | Removal and Installation | 205 | F |
| SYMPTOM: | 187 | REMOVAL | 205 | |
| DIAGNOSTIC PROCEDURE | 187 | INSTALLATION | 205 | |
| Vehicle Speed Does Not Change in "D" Position | 188 | DIFFERENTIAL SIDE OIL SEAL | 206 | G |
| SYMPTOM: | 188 | Removal and Installation | 206 | |
| DIAGNOSTIC PROCEDURE | 188 | COMPONENTS | 206 | |
| Vehicle Does Not Decelerate by Engine Brake ... | 189 | REMOVAL | 206 | |
| SYMPTOM: | 189 | INSTALLATION | 206 | H |
| DIAGNOSTIC PROCEDURE | 189 | TRANSAXLE ASSEMBLY | 207 | |
| TRANSMISSION CONTROL MODULE | 190 | Removal and Installation | 207 | I |
| Removal and Installation | 190 | COMPONENTS | 207 | |
| COMPONENTS | 190 | REMOVAL | 207 | |
| REMOVAL | 190 | INSTALLATION | 208 | |
| INSTALLATION | 190 | SERVICE DATA AND SPECIFICATIONS (SDS) ... | 210 | J |
| SHIFT CONTROL SYSTEM | 191 | General Specifications | 210 | |
| Removal and Installation | 191 | Vehicle Speed When Shifting Gears | 210 | |
| CONTROL DEVICE COMPONENTS | 191 | Stall Speed | 210 | |
| CONTROL CABLE COMPONENTS | 192 | Line Pressure | 210 | K |
| REMOVAL | 192 | Solenoid Valves | 210 | |
| INSTALLATION | 194 | CVT Fluid Temperature Sensor | 211 | |
| Control Device Disassembly and Assembly | 194 | Primary Speed Sensor | 211 | L |
| DISASSEMBLY | 194 | Secondary Speed Sensor | 211 | |
| | | Removal and Installation | 211 | M |

INDEX FOR DTC

PFP:00024

INDEX FOR DTC

Alphabetical Index

UCS005XB

NOTE:

If DTC “U1000 CAN COMM CIRCUIT” is displayed with other DTCs, first perform the trouble diagnosis for “DTC U1000 CAN COMMUNICATION LINE”. Refer to [CVT-68](#) .

| Items (CONSULT-II screen terms) | DTC | | Reference page |
|------------------------------------|---------------------|-----------------------------------|-------------------------|
| | OBD-II | Except OBD-II | |
| | CONSULT-II GST*1 | CONSULT-II only “TRANSMISSION” | |
| A/T TCC S/V FNCTN | P0744 | P0744 | CVT-110 |
| ATF TEMP SEN/CIRC | P0710 | P0710 | CVT-85 |
| BELT DAMG | — | P0730 | CVT-103 |
| BRAKE SW/CIRC | — | P0703 | CVT-76 |
| CAN COMM CIRCUIT | U1000 | U1000 | CVT-68 |
| CONTROL UNIT(CAN) | U1010 | U1010 | CVT-71 |
| CVT SPD SEN/FNCTN | — | P1723 | CVT-154 |
| ENGINE SPEED SIG | — | P0725 | CVT-101 |
| ELEC TH CONTROL | — | P1726 | CVT-156 |
| ESTM VEH SPD SIG*2 | — | P1722 | CVT-152 |
| INPUT SPD SEN/CIRC | P0715 | P0715 | CVT-90 |
| L/PRESS CONTROL | — | P1745 | CVT-163 |
| L/PRESS SOL/CIRC | P0745 | P0745 | CVT-113 |
| LU-SLCT SOL/CIRC | P1740 | P1740 | CVT-158 |
| PNP SW/CIRC | P0705 | P0705 | CVT-78 |
| PRESS SEN/FNCTN | — | P0841 | CVT-134 |
| PRS CNT SOL/A FCTN | P0746 | P0746 | CVT-118 |
| PRS CNT SOL/B CIRC | P0778 | P0778 | CVT-124 |
| PRS CNT SOL/B FCTN | P0776 | P0776 | CVT-121 |
| SEC/PRESS DOWN | — | P0868 | CVT-142 |
| STARTER RELAY/CIRC | — | P0615 | CVT-72 |
| STEP MOTR CIRC | P1777 | P1777 | CVT-164 |
| STEP MOTR/FNC | P1778 | P1778 | CVT-168 |
| TCC SOLENOID/CIRC | P0740 | P0740 | CVT-105 |
| TCM-POWER SUPPLY | — | P1701 | CVT-145 |
| TP SEN/CIRC A/T | — | P1705 | CVT-150 |
| TR PRS SENS/A CIRC | P0840 | P0840 | CVT-129 |
| TR PRS SENS/B CIRC | P0845 | P0845 | CVT-137 |
| VEH SPD SEN/CIR AT | P0720 | P0720 | CVT-95 |

*1: These numbers are prescribed by SAE J2012.

*2: Models without ABS does not indicate.

INDEX FOR DTC

UCS005XC

DTC No. Index

NOTE:

If DTC “U1000 CAN COMM CIRCUIT” is displayed with other DTCs, first perform the trouble diagnosis for “DTC U1000 CAN COMMUNICATION LINE”. Refer to [CVT-68](#).

| DTC | | Items (CONSULT-II screen terms) | Reference page |
|-------------------------------|--|------------------------------------|-------------------------|
| OBD-II CONSULT-II GST*1 | Except OBD-II CONSULT-II only “TRANSMISSION” | | |
| — | P0615 | STARTER RELAY/CIRC | CVT-72 |
| — | P0703 | BRAKE SW/CIRC | CVT-76 |
| P0705 | P0705 | PNP SW/CIRC | CVT-78 |
| P0710 | P0710 | ATF TEMP SEN/CIRC | CVT-85 |
| P0715 | P0715 | INPUT SPD SEN/CIRC | CVT-90 |
| P0720 | P0720 | VEH SPD SEN/CIR AT | CVT-95 |
| — | P0725 | ENGINE SPEED SIG | CVT-101 |
| — | P0730 | BELT DAMG | CVT-103 |
| P0740 | P0740 | TCC SOLENOID/CIRC | CVT-105 |
| P0744 | P0744 | A/T TCC S/V FNCTN | CVT-110 |
| P0745 | P0745 | L/PRESS SOL/CIRC | CVT-113 |
| P0746 | P0746 | PRS CNT SOL/A FCTN | CVT-118 |
| P0776 | P0776 | PRS CNT SOL/B FCTN | CVT-121 |
| P0778 | P0778 | PRS CNT SOL/B CIRC | CVT-124 |
| P0840 | P0840 | TR PRS SENS/A CIRC | CVT-129 |
| — | P0841 | PRESS SEN/FNCTN | CVT-134 |
| P0845 | P0845 | TR PRS SENS/B CIRC | CVT-137 |
| — | P0868 | SEC/PRESS DOWN | CVT-142 |
| — | P1701 | TCM-POWER SUPPLY | CVT-145 |
| — | P1705 | TP SEN/CIRC A/T | CVT-150 |
| — | P1722 | ESTM VEH SPD SIG*2 | CVT-152 |
| — | P1723 | CVT SPD SEN/FNCTN | CVT-154 |
| — | P1726 | ELEC TH CONTROL | CVT-156 |
| P1740 | P1740 | LU-SLCT SOL/CIRC | CVT-158 |
| — | P1745 | L/PRESS CONTROL | CVT-163 |
| P1777 | P1777 | STEP MOTR CIRC | CVT-164 |
| P1778 | P1778 | STEP MOTR/FNC | CVT-168 |
| U1000 | U1000 | CAN COMM CIRCUIT | CVT-68 |
| U1010 | U1010 | CONTROL UNIT(CAN) | CVT-71 |

*1: These numbers are prescribed by SAE J2012.

*2: Models without ABS does not indicate.

PRECAUTIONS

PRECAUTIONS

PF0:00001

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

UCS005XD

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions Necessary for Steering Wheel Rotation After Battery Disconnect

UCS006Y0

NOTE:

- This Procedure is applied only to models with Intelligent Key system and NVIS/IVIS (NISSAN/INFINITI VEHICLE IMMOBILIZER SYSTEM - NATS).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the “LOCK” position.
- Always use CONSULT-II to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NVIS/IVIS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the “ACC” position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.
5. When the repair work is completed, return the ignition switch to the “LOCK” position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT-II.

PRECAUTIONS

Precautions for On Board Diagnostic (OBD) System of CVT and Engine

UCS005XG

The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

CAUTION:

- Be sure to turn the ignition switch OFF and disconnect the battery cable from the negative terminal before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to an open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Be sure to route and secure the harnesses properly after work. Interference of the harness with a bracket, etc. may cause the MIL to light up due to a short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to a malfunction of the EVAP system or fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the TCM and ECM before returning the vehicle to the customer.

Service After Replacing TCM and Transaxle Assembly

UCS006L3

Perform the applicable service in the following sheet when replacing TCM or transaxle assembly

CAUTION:

- Do not start the engine until the service is completed.
- “A/T C/U POWER SUPPLY [P1701]” may be indicated soon after replacing TCM or transaxle assembly (after erasing the memory at the pattern B). Restart the self-diagnosis after erasing the self-diagnosis result. Check that no error is detected.

| TCM | CVT assembly | Service pattern |
|--------------------------|------------------------------|-------------------------------------|
| Replace the new unit. | Do not replace the unit. | CVT-9, "PATTERN A" |
| Do not replace the unit. | Replace the new or old unit. | CVT-9, "PATTERN B" |
| Replace the old unit. | Do not replace the unit. | |
| | Replace the new or old unit. | |
| Replace the new unit. | Replace the new or old unit. | CVT-11, "PATTERN C" |

NOTE:

Old unit means that the unit has been already used for another vehicle.

PATTERN A

1. Shift the selector lever to “P” position after replacing TCM. Turn the ignition switch ON.
2. Check that the shift position indicator in the combination meter turns ON (It indicates approximately 1 or 2 seconds after turning the ignition switch ON.)
 - Check the following items if the shift position indicator does not turn ON. Repair or replace the shift position indicator if necessary.
 - The harness between TCM and ROM ASSY in the transaxle assembly is open or short.
 - Cable disconnected, loosen, or bent from the connector housing.

PATTERN B

1. Turn the ignition switch ON after replacing each part.
2. Connect CONSULT-II connector to data link connector. Refer to [GI-38, "CONSULT-II Start Procedure"](#).
3. Start engine.

CAUTION:

Do not start the driving.

4. Touch CONSULT-II screen in the order of “START (NISSAN BASED VHCL)”, “TRANSMISSION”, “DATA MONITOR”, and “MAIN SIGNALS”.
5. Warm up the transaxle assembly until “ATF TEMP” indicates 48 (approximately 20°C) or more. Turn the ignition switch OFF.

PRECAUTIONS

6. Turn the ignition switch ON.

CAUTION:

Do not start engine.

7. Select "SELF-DIAG RESULTS".

8. Shift the selector lever to "R" position.

9. Depress slightly the accelerator pedal (Pedal angle: 2/8) while depressing the brake pedal.

10. Perform "ERASE".

11. Shift the selector lever to "R" position after replacing TCM. Turn the ignition switch OFF.

12. Wait approximately 10 minutes after turning the ignition switch OFF.

13. Turn the ignition switch ON while shifting the selector lever to "R" position.

CAUTION:

Do not start engine.

14. Select "CALIBRATION DATA".

15. Check that the value on "CALIBRATION DATA" is same as the data after erasing [CVT-11, "Calibration Data"](#) .

- Restart the procedure from step 3 if the values are not same.

16. Shift the selector lever to "P" position.

17. Check that the shift position indicator in the combination meter turns ON (It indicates approximately 1 or 2 seconds after shifting the selector lever to "P" position.)

- Check the following items if the shift position indicator does not turn ON. Repair or replace the shift position indicator if necessary.
 - The harness between TCM and ROM ASSY in the transaxle assembly is open or short.
 - Cable disconnected, loosen, or bent from the connector housing.
 - Power supply and ground of TCM. Refer to [CVT-145, "DTC P1701 TRANSMISSION CONTROL MODULE \(POWER SUPPLY\)"](#) .

PRECAUTIONS

Calibration Data

| Data before deletion (Example) | | | | Data after deletion | | | |
|--------------------------------|-------|-------------|------|---------------------|------|-------------|------|
| CALIB DATA | | | | CALIB DATA | | | |
| UNIT CLB ID1 | 0001 | | | UNIT CLB ID1 | 0000 | | |
| UNIT CLB ID2 | 0005 | | | UNIT CLB ID2 | 0000 | | |
| UNIT CLB ID3 | 0043 | | | UNIT CLB ID3 | 0000 | | |
| UNIT CLB ID4 | 0021 | | | UNIT CLB ID4 | 0000 | | |
| UNIT CLB ID5 | 0023 | | | UNIT CLB ID5 | 0000 | | |
| UNIT CLB ID6 | 0000 | | | UNIT CLB ID6 | 0000 | | |
| MAP NO LU | 29 | | | MAP NO LU | 33 | | |
| GAIN LU | 592 | | | GAIN LU | 256 | | |
| OFFSET LU | 7076 | | | OFFSET LU | 40 | | |
| OFFSET2 LU | 0 | | | OFFSET2 LU | 0 | | |
| | | Scroll Down | | | | Scroll Down | |
| MODE | BACK | LIGHT | COPY | MODE | BACK | LIGHT | COPY |
| CALIB DATA | | | | CALIB DATA | | | |
| MAP NO PL | 07 | | | MAP NO PL | 32 | | |
| GAIN PL | -157 | | | GAIN PL | 256 | | |
| OFFSET PL | 117 | | | OFFSET PL | 40 | | |
| OFFSET2 PL | 0 | | | OFFSET2 PL | 0 | | |
| MAP NO SEC | 13 | | | MAP NO SEC | 32 | | |
| GAIN SEC | -114 | | | GAIN SEC | 256 | | |
| OFFSET SEC | 89 | | | OFFSET SEC | 40 | | |
| OFFSET2 SEC | 0 | | | OFFSET2 SEC | 0 | | |
| MAP NO SL | 08 | | | MAP NO SL | 32 | | |
| GAIN SL | -980 | | | GAIN SL | 256 | | |
| OFFSET SL | 22586 | | | OFFSET SL | 40 | | |
| OFFSET2 SL | 0 | | | OFFSET2 SL | 0 | | |
| Scroll Up | | | | Scroll Up | | | |
| MODE | BACK | LIGHT | COPY | MODE | BACK | LIGHT | COPY |

SCIA7411E

PATTERN C


1. Replace the transaxle assembly first, and then replace TCM.
2. Perform the service of "PATTERN A".
(Perform the service of "Pattern B" if TCM is replaced first.)

Removal and Installation Procedure for CVT Unit Connector

UCS005X1

REMOVAL


Rotate bayonet ring counterclockwise, pull out CVT unit harness connector upward and disconnect it.

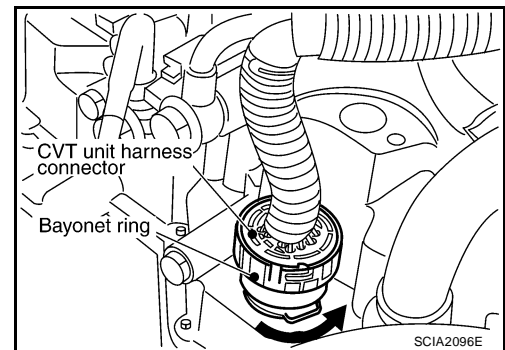


PRECAUTIONS

INSTALLATION

1. Align CVT unit harness connector terminal body marking with bayonet ring marking, insert CVT unit harness connector, and then rotate bayonet ring clockwise.

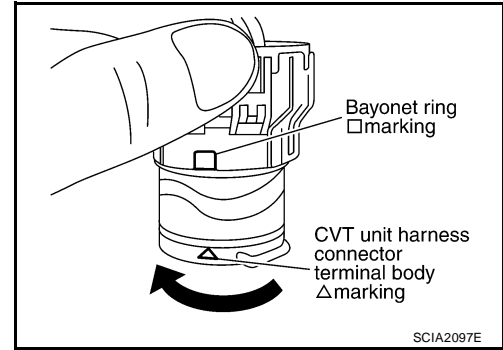


2. Rotate bayonet ring clockwise until CVT unit harness connector terminal body marking is aligned with the bayonet ring marking (linear slit) as shown.

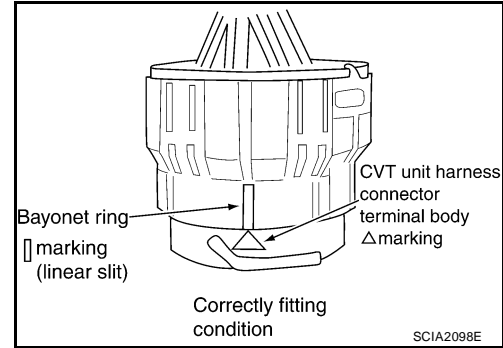

CAUTION:

- Securely align CVT unit harness connector terminal body marking with bayonet ring marking (linear slit). Do not make a half fit condition as shown.
- Do not mistake the bayonet ring marking (linear slit) for other dent portion.

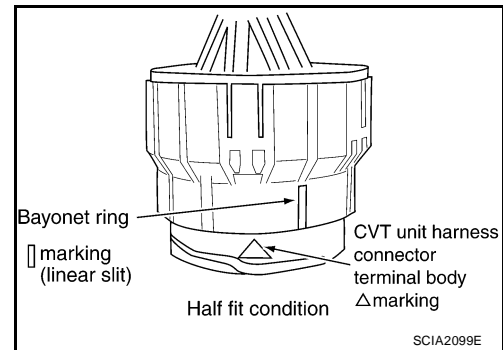

PRECAUTIONS


UCS005XJ

Precautions


NOTE:

If any malfunction occurs in the RE0F08A model transaxle, replace the entire transaxle assembly.


- Before connecting or disconnecting the TCM harness connector, turn ignition switch OFF and disconnect negative battery cable. Because battery voltage is applied to TCM even if ignition switch is turned OFF.

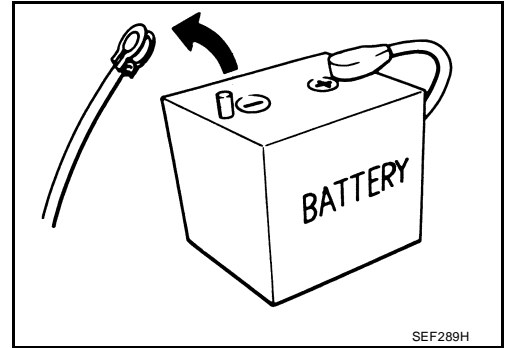


- When connecting or disconnecting pin connectors into or from TCM, take care not to damage pin terminals (bend or break).
When connecting pin connectors make sure that there are not any bends or breaks on TCM pin terminal.

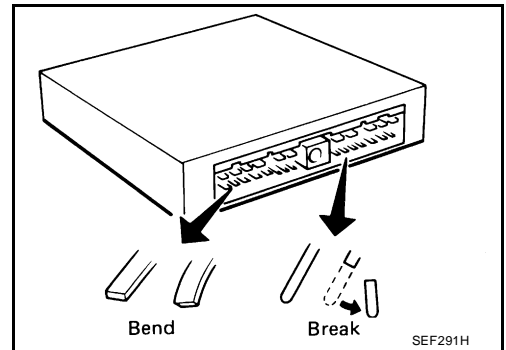

- Before replacing TCM, perform TCM input/output signal inspection and make sure whether TCM functions properly or not. [CVT-54, "TCM INSPECTION TABLE"](#).

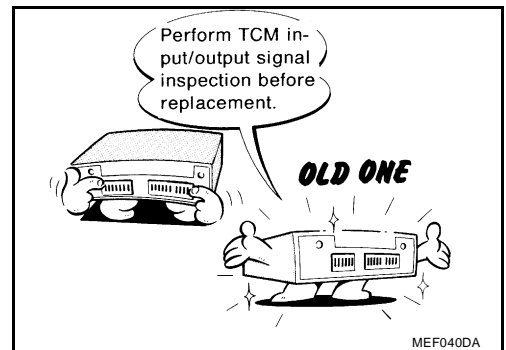

- After performing each TROUBLE DIAGNOSIS, perform "DTC Confirmation Procedure".
If the repair is completed the DTC should not be displayed in the "DTC Confirmation Procedure".
- Always use the specified brand of CVT fluid. Refer to [MA-11, "Fluids and Lubricants"](#).
- Use lint-free paper, not cloth rags, during work.
- After replacing the CVT fluid, dispose of the waste oil using the methods prescribed by law, ordinance, etc.

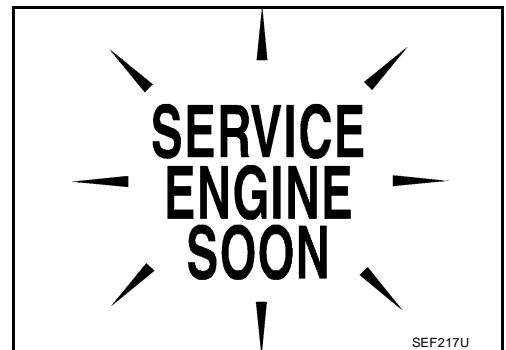

Service Notice or Precautions CVT FLUID COOLER SERVICE

UCS005XK

If CVT fluid contains friction material (clutches, brakes, etc.), or if an CVT is replaced, inspect and clean the CVT fluid cooler mounted in the radiator or replace the radiator. Flush cooler lines using cleaning solvent and compressed air after repair. For CVT fluid cooler cleaning procedure, refer to [CVT-18, "CVT Fluid Cooler Cleaning"](#). For radiator replacement, refer to [CO-11, "RADIATOR"](#).

A
B
CVT
D
E
F
G
H
I
J
K
L
M

PRECAUTIONS

OBD-II SELF-DIAGNOSIS

- CVT self-diagnosis is performed by the TCM in combination with the ECM. The results can be read through the blinking pattern of the malfunction indicator lamp (MIL). Refer to the table on [CVT-61, "Display Items List"](#) for the indicator used to display each self-diagnostic result.
- The self-diagnostic results indicated by the MIL are automatically stored in both the ECM and TCM memories.
Always perform the procedure on [CVT-31, "HOW TO ERASE DTC"](#) to complete the repair and avoid unnecessary blinking of the MIL.

For details of OBD-II, refer to [EC-47, "ON BOARD DIAGNOSTIC \(OBD\) SYSTEM"](#) .

- **Certain systems and components, especially those related to OBD, may use the new style slide-locking type harness connector. For description and how to disconnect, refer to [PG-68, "HARNESS CONNECTOR"](#) .**

PREPARATION

PREPARATION

PFP:00002

Special Service Tools

UCS005XL

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

| Tool number (Kent-Moore No.) Tool name | Description |
|--|--|
| — (OTC3492) Oil pressure gauge set | Measuring line pressure |
| — (J-47244) Drift | Installing differential side oil seal <ul style="list-style-type: none"> ● Transaxle case side (left) a: 65.83 mm (2.59 in) dia. b: 53.85 mm (2.12 in) dia. |
| ST33400001 (J-47005) Drift | Installing differential side oil seal <ul style="list-style-type: none"> ● Converter housing side (right) a: 69.85 mm (2.75 in) dia. b: 49.53 mm (1.95 in) dia. |

Commercial Service Tools

UCS006XI


| Tool number Tool name | Description |
|--------------------------|--------------------------|
| Power tool | Loosening nuts and bolts |

CVT FLUID


Checking CVT Fluid FLUID LEVEL CHECK

Fluid level should be checked with the fluid warmed up to 50 to 80°C (122 to 176°F).

1. Check for fluid leakage.
2. With the engine warmed up, drive the vehicle to warm up the CVT fluid. When ambient temperature is 20°C (68°F), it takes about 10 minutes for the CVT fluid to warm up to 50 to 80°C (122 to 176°F).
3. Park the vehicle on a level surface and set the parking brake.
4. With engine at idle, while depressing brake pedal, move the selector lever throughout the entire shift range and return it to the "P" position.

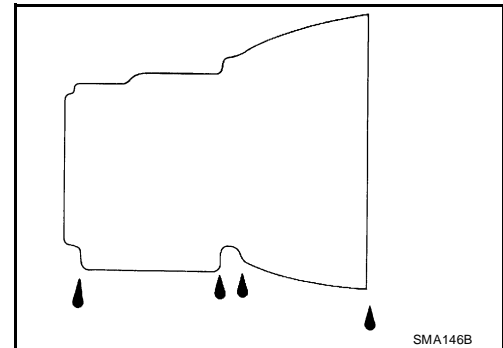


5. Press the tab on the CVT fluid level gauge to release the lock and pull out the CVT fluid level gauge from the CVT fluid charging pipe.

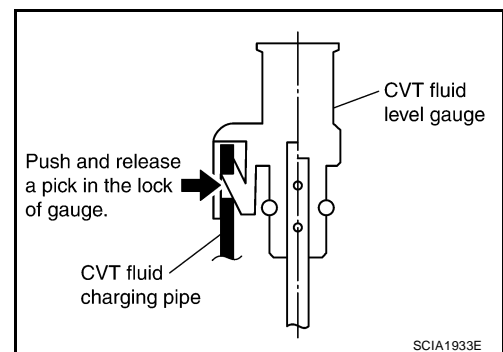

6. Wipe fluid off the CVT fluid level gauge. Then rotate the CVT fluid level gauge 180° and re-insert it into the CVT charging pipe as far as it will go.

CAUTION:

Always use lint free paper towels to wipe fluid off the CVT fluid level gauge.

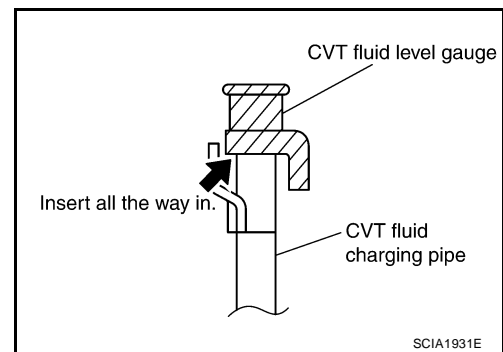


7. Remove the CVT fluid level gauge and check that the fluid level is within the specified range as shown. If the fluid level is at or below the low side of the range, add the necessary specified NISSAN CVT fluid through the CVT charging pipe.

Fluid grade: Refer to [MA-11, "Fluids and Lubricants"](#).

CAUTION:

- Only use specified NISSAN CVT fluid.
- Do not overfill the CVT.

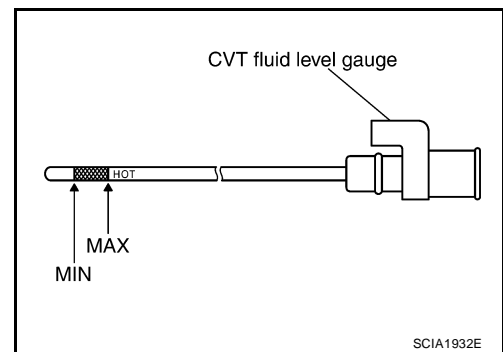

8. Install the CVT fluid level gauge to the CVT fluid charging pipe until it locks.


CAUTION:

When CVT fluid level gauge is installed into the CVT fluid charging pipe, make sure that the CVT fluid level gauge is securely locked in place.

CVT FLUID

FLUID CONDITION CHECK

| Fluid status | Conceivable cause | Required operation |
|---|--|---|
| Varnished (viscous varnish state) | Clutch, brake scorched | Replace the CVT fluid and check the CVT main unit and the vehicle for malfunctions (wire harness, cooler pipes, etc.) |
| Milky white or cloudy | Water in the fluid | Replace the CVT fluid and check for places where water is getting in. |
| Large amount of metal powder mixed in fluid | Unusual wear of sliding parts within CVT | Replace the CVT fluid and check for improper operation of the CVT. |

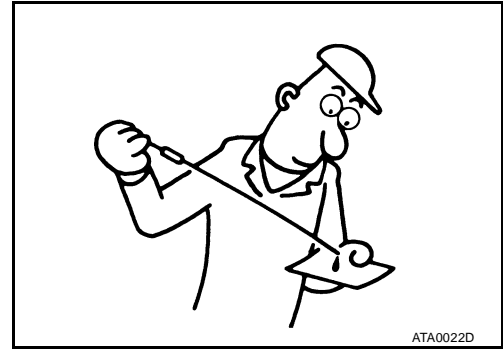


Changing CVT Fluid

UCS005X0

- Warm up CVT fluid by driving the vehicle for 10 minutes.
 - ↔: Vehicle front
 - Radiator (2)
 - CVT fluid cooler hose [inlet side (3)]
 - Transaxle assembly (4)
- Drain CVT fluid from CVT fluid cooler hose [outlet side (1)] and refill with new specified NISSAN CVT fluid in the CVT fluid charging pipe with the engine running at idle speed.

Fluid capacity and grade: Refer to [MA-11, "Fluids and Lubricants"](#) .

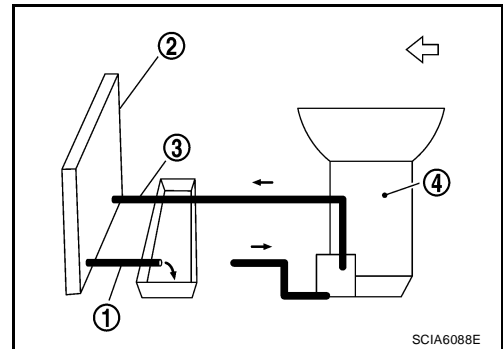

CAUTION:

Only use the specified NISSAN CVT fluid.

- Refill until new CVT fluid comes out from CVT fluid cooler hose [outlet side (1)].

NOTE:

About 30 to 50% extra fluid will be required for this procedure.

- Check fluid level and condition. Refer to [CVT-16, "Checking CVT Fluid"](#) .

CAUTION:

Delete CVT fluid deterioration date with CONSULT-II after changing CVT fluid. Refer to [CVT-60, "Check CVT Fluid Deterioration Date"](#) .

CVT Fluid Cooler Cleaning

Whenever a CVT is repaired, overhauled, or replaced, the CVT fluid cooler mounted in the radiator must be inspected and cleaned.

Metal debris and friction material, if present, can be trapped or become deposit in the CVT fluid cooler. This debris can contaminate the newly serviced CVT or, in severe cases, can block or restrict the flow of CVT fluid. In either case, malfunction of the newly serviced CVT may occur.

Debris, if present, may deposit as CVT fluid enters the cooler inlet. It will be necessary to back flush the cooler through the cooler outlet in order to flush out any built up debris.


CVT FLUID COOLER CLEANING PROCEDURE

1. Identify the CVT inlet and outlet fluid cooler hoses.
2. Position an oil pan under the inlet and outlet cooler hoses.
3. Disconnect the fluid cooler inlet and outlet rubber hoses from the steel cooler tubes.

NOTE:

Replace the cooler hoses if rubber material from the hose remains on the tube fitting.


4. Allow any CVT fluid that remains in the cooler hoses to drain into the oil pan.

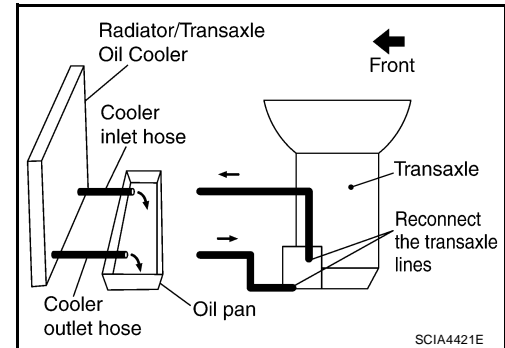

5. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

CAUTION:

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
- Spray Transmission Cooler Cleaner only with adequate ventilation.
- Avoid contact with eyes and skin.
- Do not breath vapors or spray mist.

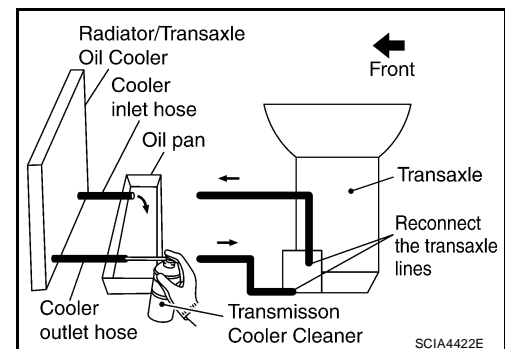

6. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until CVT fluid flows out of the cooler inlet hose for 5 seconds.

7. Insert the tip of an air gun into the end of the cooler outlet hose.

8. Wrap a shop rag around the air gun tip and of the cooler outlet hose.

9. Blow compressed air regulated to 5 to 9 kg/cm² (70 to 130 psi) through the cooler outlet hose for 10 seconds to force out any remaining CVT fluid.

10. Repeat steps 5 through 9 three additional times.

11. Position an oil pan under the banjo bolts that connect the CVT fluid cooler steel lines to the transaxle.

12. Remove the banjo bolts.


13. Flush each steel line from the cooler side back toward the transaxle by spraying Transmission Cooler Cleaner in a continuous stream for 5 seconds.

14. Blow compressed air regulated to 5 to 9 kg/cm² (70 to 130 psi) through each steel line from the cooler side back toward the transaxle for 10 seconds to force out any remaining CVT fluid.

15. Ensure all debris is removed from the steel cooler lines.

16. Ensure all debris is removed from the banjo bolts and fittings.

17. Perform [CVT-19, "CVT FLUID COOLER DIAGNOSIS PROCEDURE"](#).

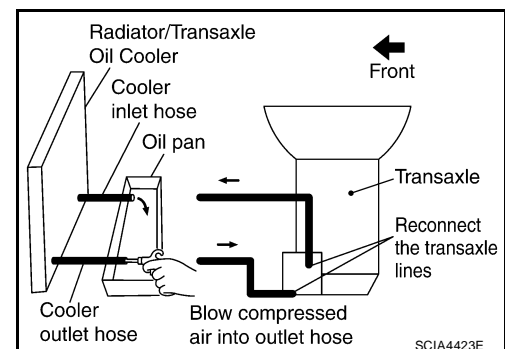

CVT FLUID

CVT FLUID COOLER DIAGNOSIS PROCEDURE

NOTE:



Insufficient cleaning of the cooler inlet hose exterior may lead to inaccurate debris identification.

1. Position an oil pan under the transaxle's inlet and outlet cooler hoses.
2. Clean the exterior and tip of the cooler inlet hose.
3. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.


CAUTION:

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
- Spray Transmission Cooler Cleaner only with adequate ventilation.
- Avoid contact with eyes and skin.
- Do not breath vapors or spray mist.

4. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until CVT fluid flows out of the cooler inlet hose for 5 seconds.
5. Tie a common white, basket-type coffee filter to the end of the cooler inlet hose.

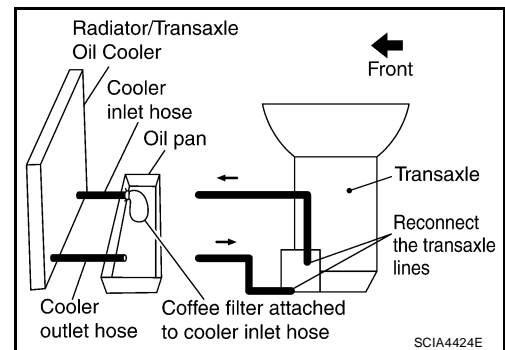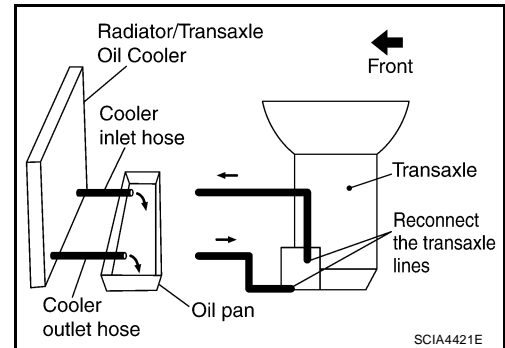


6. Insert the tip of an air gun into the end of the cooler outlet hose.
7. Wrap a shop rag around the air gun tip and end of cooler outlet hose.
8. Blow compressed air regulated to 5 to 9 kg/cm² (70 to 130 psi) through the cooler outlet hose to force any remaining CVT fluid into the coffee filter.
9. Remove the coffee filter from the end of the cooler inlet hose.
10. Perform [CVT-20, "CVT FLUID COOLER INSPECTION PROCEDURE"](#).

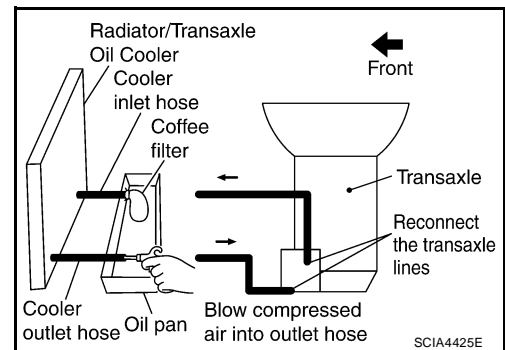


CVT FLUID

CVT FLUID COOLER INSPECTION PROCEDURE

1. Inspect the coffee filter for debris.
 - a. If small metal debris less than 1 mm (0.040 in) in size or metal powder is found in the coffee filter, this is normal. If normal debris is found, the CVT fluid cooler/radiator can be re-used and the procedure is ended.

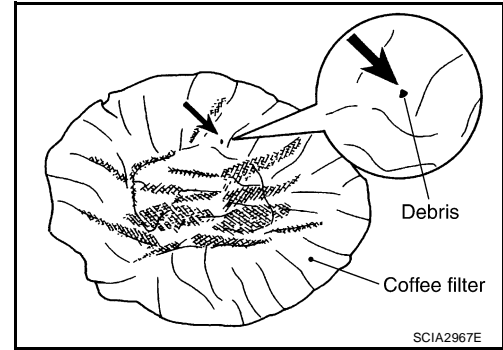

- b. If one or more pieces of debris are found that are over 1 mm (0.040 in) in size and/or peeled clutch facing material is found in the coffee filter, the fluid cooler is not serviceable. The radiator/ fluid cooler must be replaced and the inspection procedure is ended.

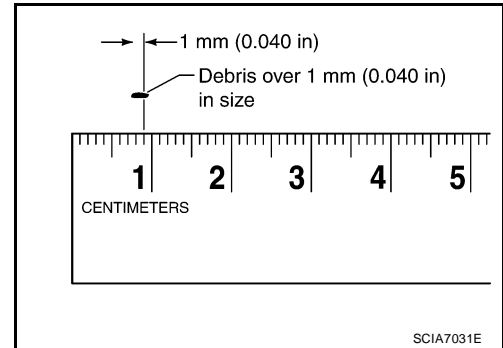

CVT FLUID COOLER FINAL INSPECTION

After performing all procedures, ensure that all remaining oil is cleaned from all components.

CVT SYSTEM


PPF:31036

CVT SYSTEM

Cross-sectional View - RE0F08A

UCS005XQ

A
B
CVT
D
E
F
G
H
I
J
K
L
M

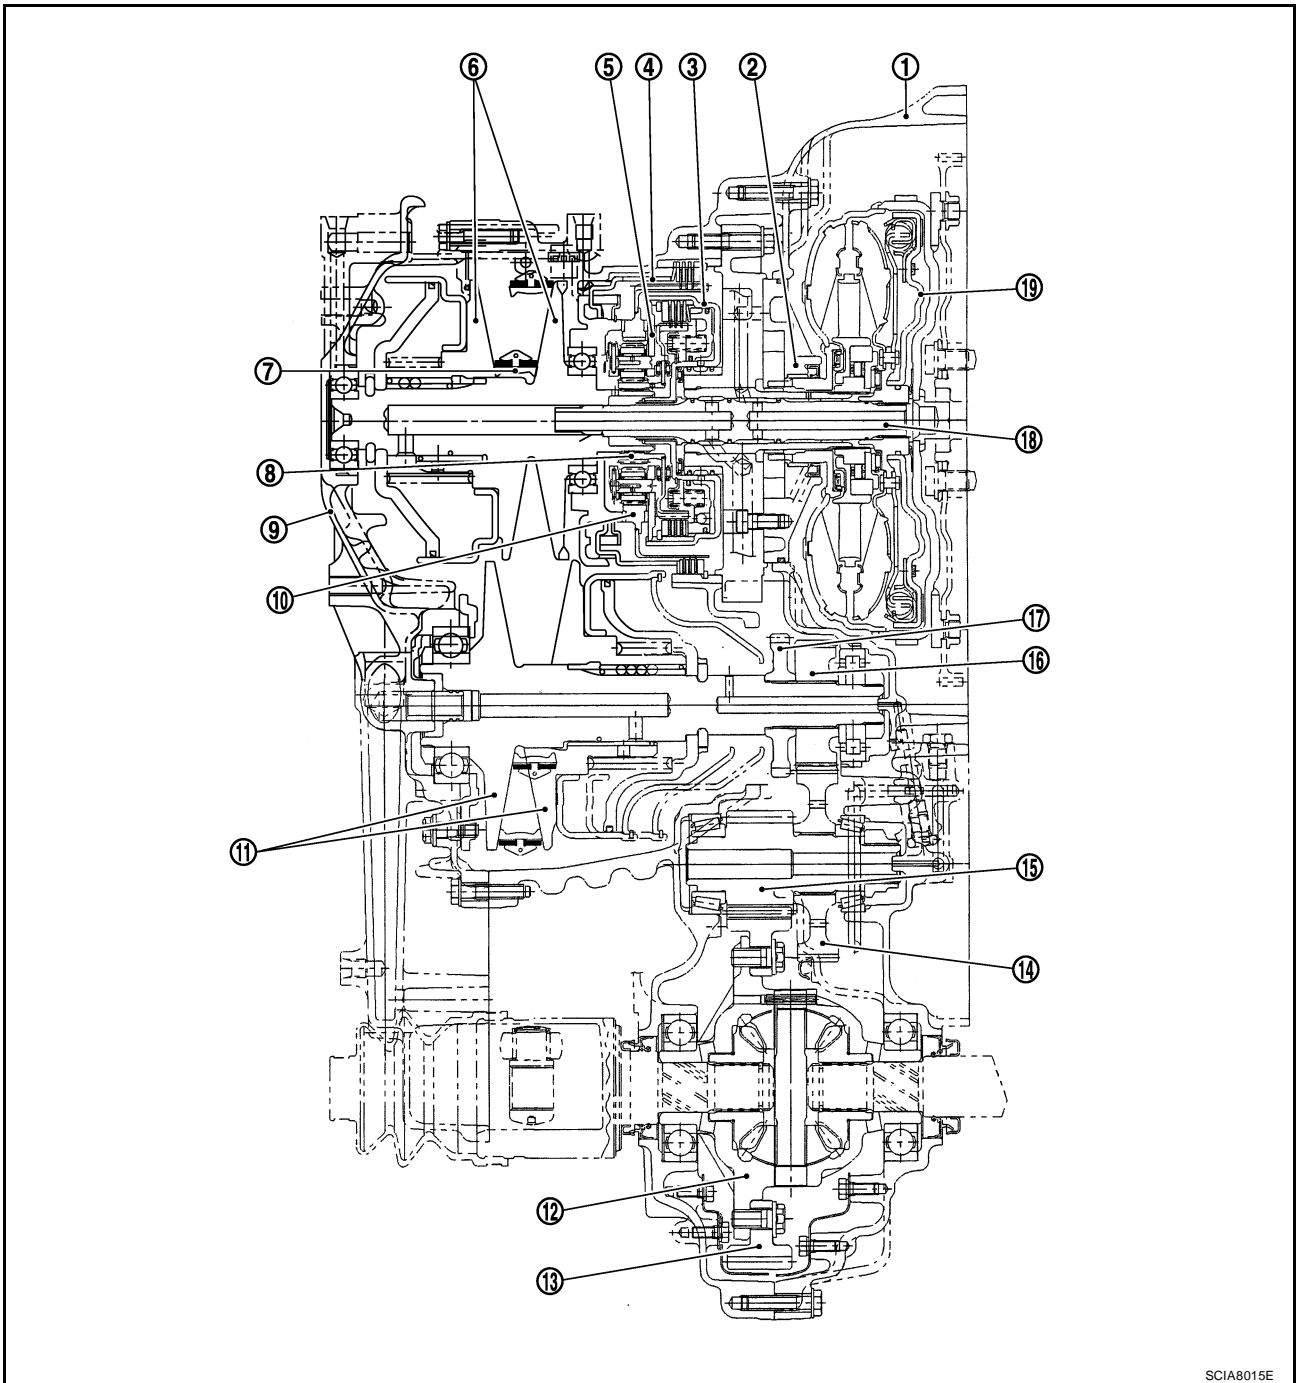


SCIA8015E

- | | | |
|----------------------|----------------------|-----------------------|
| 1. Converter housing | 2. Oil pump | 3. Forward clutch |
| 4. Reverse brake | 5. Planetary carrier | 6. Primary pulley |
| 7. Steel belt | 8. Sun gear | 9. Side cover |
| 10. Internal gear | 11. Secondary pulley | 12. Differential case |
| 13. Final gear | 14. Idler gear | 15. Reduction gear |
| 16. Output gear | 17. Parking gear | 18. Input shaft |
| 19. Torque converter | | |

CVT SYSTEM

Control System


UCS005XR

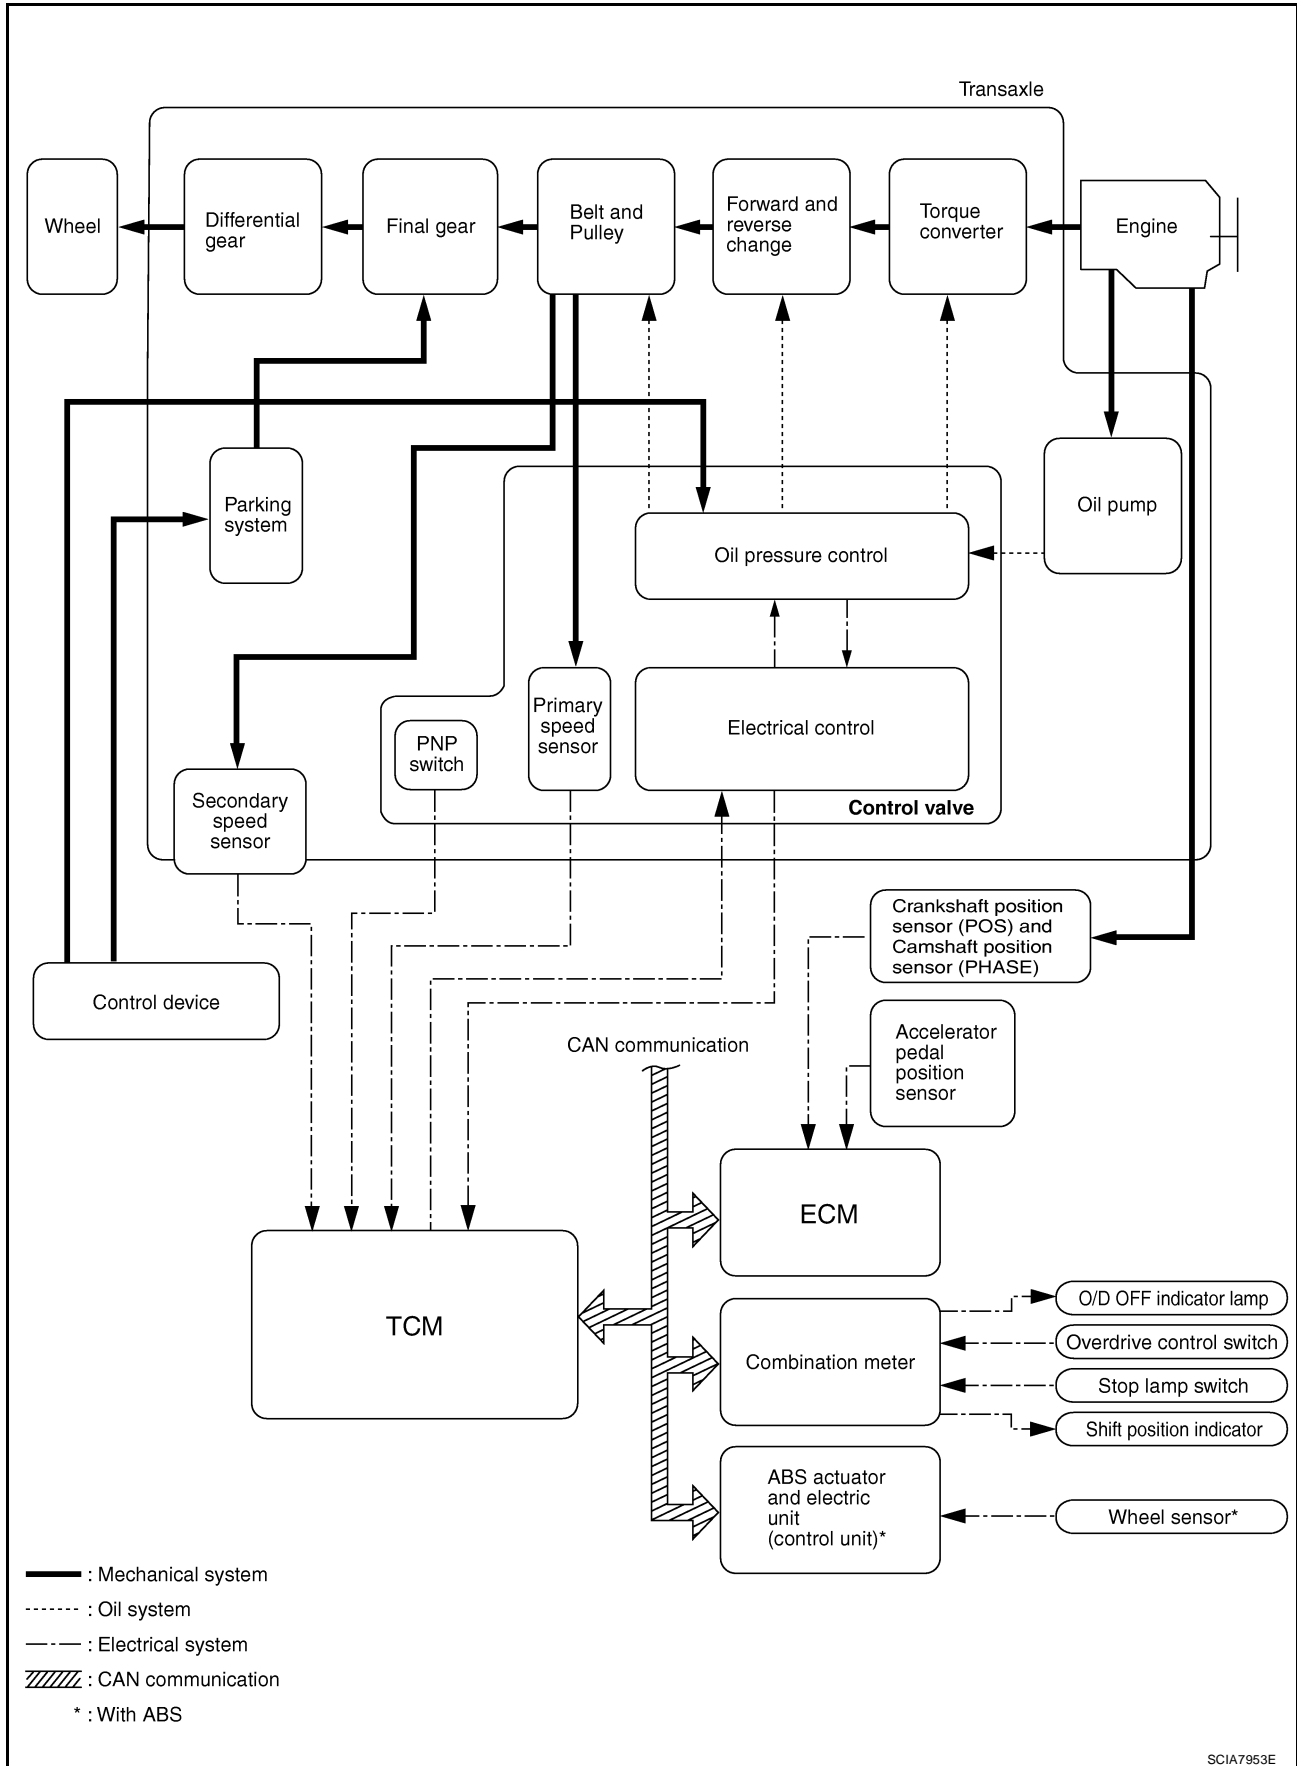

CVT SYSTEM

Hydraulic Control System

UCS005XS

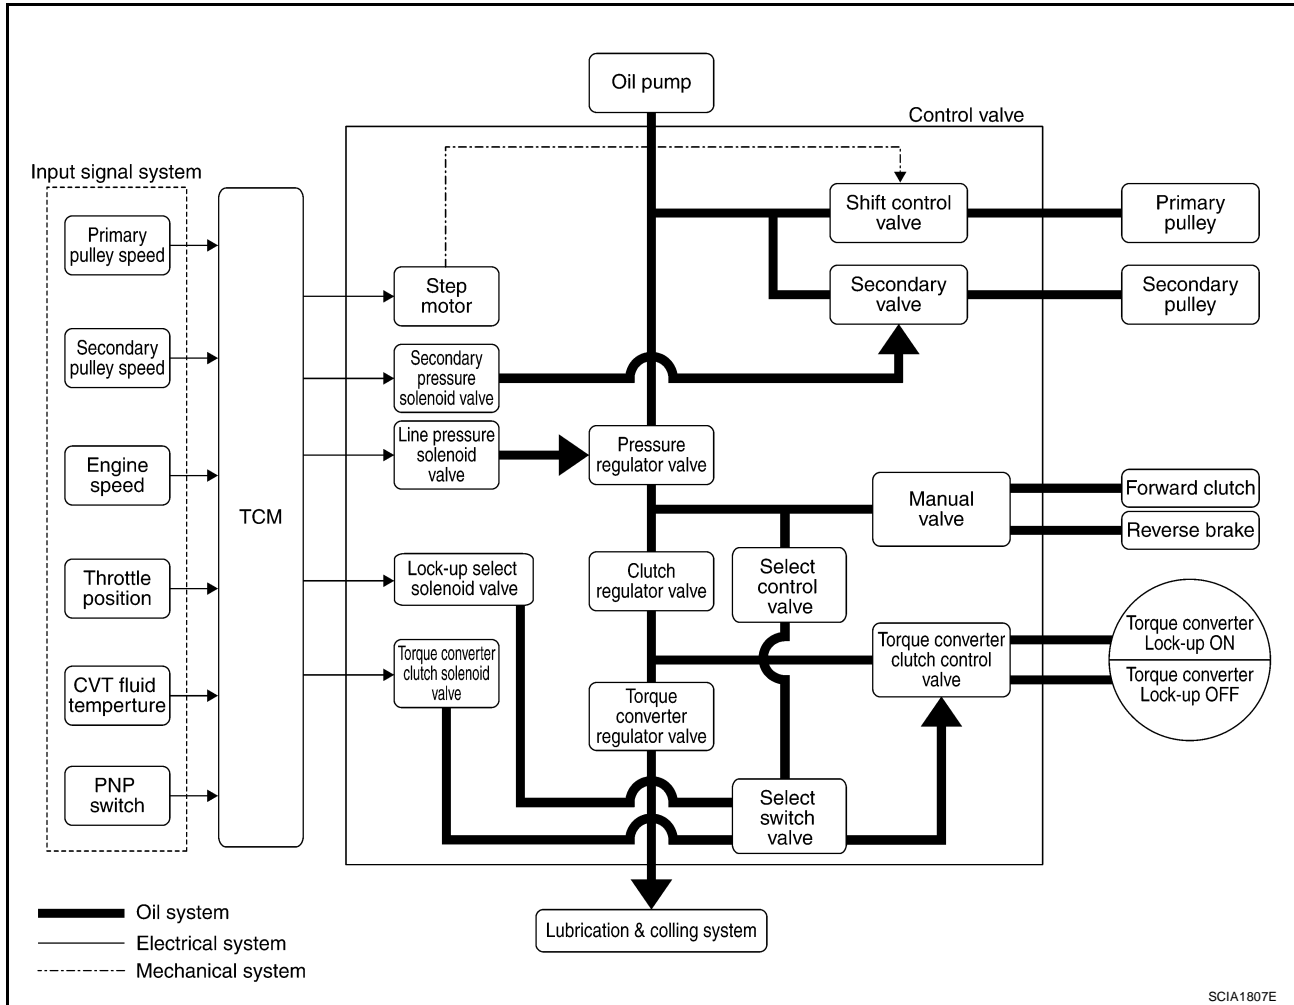

SCIA1807E

A
B
CVT
D
E
F
G
H
I
J
K
L
M

CVT SYSTEM

UCS005XT

TCM Function

The function of the TCM is to:


- Receive input signals sent from various switches and sensors.
- Determine required line pressure, shifting point, and lock-up operation.
- Send required output signals to the step motor and the respective solenoids.

CONTROL SYSTEM OUTLINE

The CVT senses vehicle operating conditions through various sensors. It always controls the optimum shift position and reduces shifting and lock-up shocks.

| SENSORS (or SIGNAL) | | TCM | | ACTUATORS |
|--|---|---|---|---|
| PNP switch Accelerator pedal position signal Closed throttle position signal Engine speed signal CVT fluid temperature sensor Vehicle speed signal Overdrive control signal Stop lamp switch signal Primary speed sensor Secondary speed sensor Primary pressure sensor Secondary pressure sensor | ⇒ | Shift control Line pressure control Primary pressure control Secondary pressure control Lock-up control Engine brake control Vehicle speed control Fail-safe control Self-diagnosis CONSULT-II communication line Duet-EA control CAN system On board diagnosis | ⇒ | Step motor Torque converter clutch solenoid valve Lock-up select solenoid valve Line pressure solenoid valve Secondary pressure solenoid valve Shift position indicator O/D OFF indicator lamp Starter relay |

CONTROL SYSTEM DIAGRAM

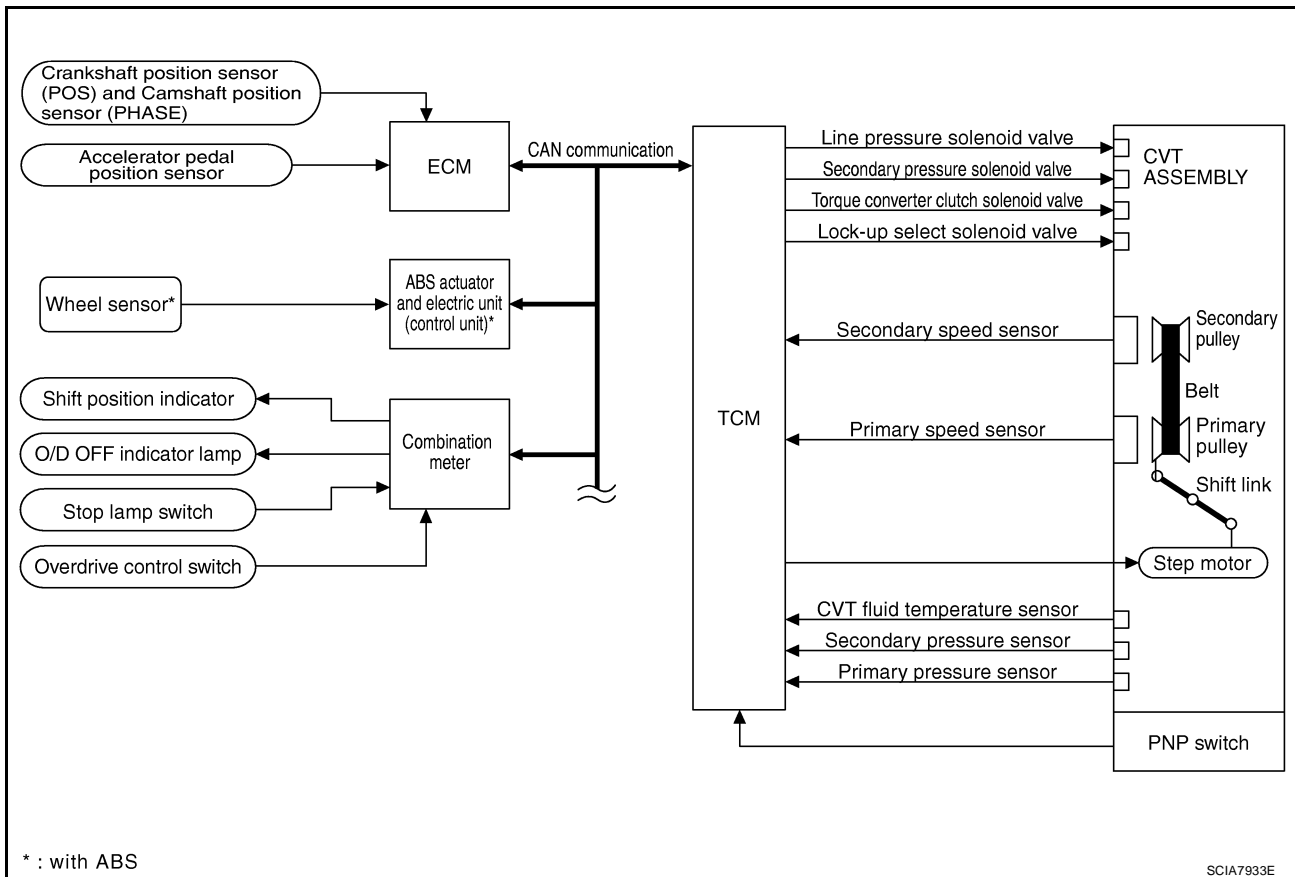

CVT SYSTEM

CAN Communication SYSTEM DESCRIPTION

UCS005XU

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only. For details, refer to [LAN-47. "CAN System Specification Chart"](#) .

Input/Output Signal of TCM

UCS005XV

| Control item | | Fluid pressure control | Select control | Shift control | Lock-up control | CAN communication control | Fail-safe function (*3) |
|--------------|--|------------------------|----------------|---------------|-----------------|---------------------------|-------------------------|
| Input | PNP switch | X | X | X | X | X | X |
| | Accelerator pedal position signal (*1) | X | X | X | X | X | X |
| | Closed throttle position signal(*1) | X | | X | X | X | |
| | Engine speed signal(*1) | X | X | | X | X | X |
| | CVT fluid temperature sensor | X | X | X | X | | X |
| | Stop lamp switch signal(*1) | X | | X | X | X | |
| | Overdrive control signal(*1) | | | X | | X | |
| | Primary speed sensor | X | | X | X | X | X |
| | Secondary speed sensor | X | X | X | X | X | X |
| | Primary pressure sensor | X | | X | | | |
| | Secondary pressure sensor | X | | X | | | X |
| | TCM power supply voltage signal | X | X | X | X | X | X |
| Out-put | Step motor | | | X | | | X |
| | TCC solenoid valve | | X | | X | | X |
| | Lock-up select solenoid valve | | X | | X | | X |
| | Line pressure solenoid valve | X | X | X | | | X |
| | Secondary pressure solenoid valve | X | | X | | | X |
| | O/D OFF indicator signal(*2) | | | X | | X | |

*1: Input by CAN communications.

*2: Output by CAN communications.


*3: If these input and output signals are different, the TCM triggers the fail-safe function.

CVT SYSTEM

Line Pressure and Secondary Pressure Control

UCS005XW

- When an input torque signal equivalent to the engine drive force is sent from the ECM to the TCM, the TCM controls the line pressure solenoid valve and secondary pressure solenoid valve.
- This line pressure solenoid controls the pressure regulator valve as the signal pressure and adjusts the pressure of the operating oil discharged from the oil pump to the line pressure most appropriate to the driving state. Secondary pressure is controlled by decreasing line pressure.

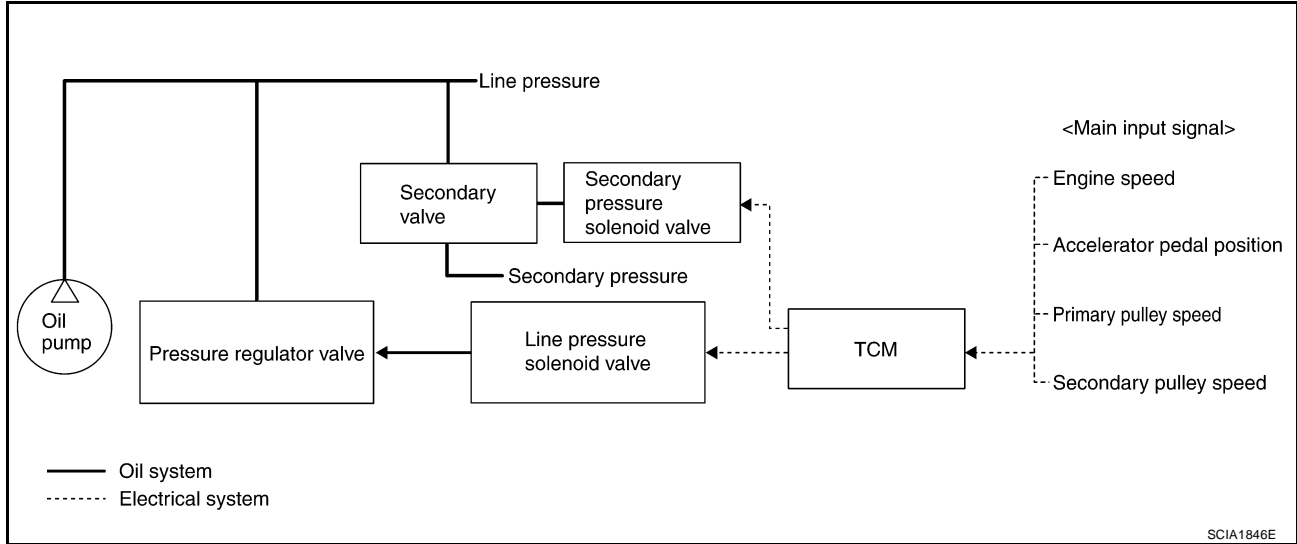

NORMAL CONTROL

Optimize the line pressure and secondary pressure, depending on driving conditions, on the basis of the throttle position, the engine speed, the primary pulley (input) revolution speed, the secondary pulley (output) revolution speed, the brake signal, the PNP switch signal, the lock-up signal, the voltage, the target gear ratio, the fluid temperature, and the fluid pressure.


FEEDBACK CONTROL

When controlling the normal fluid pressure or the selected fluid pressure, the secondary pressure can be set more accurately by using the fluid pressure sensor to detect the secondary pressure and controlling the feedback.

Shift Control

UCS005XX

In order to select the gear ratio which can obtain the driving force in accordance with driver's intention and the vehicle condition, TCM monitors the driving conditions, such as the vehicle speed and the throttle position and selects the optimum gear ratio, and determines the gear change steps to the gear ratio. Then send the command to the step motor, and control the flow-in/flow-out of line pressure from the primary pulley to determine the position of the moving-pulley and control the gear ratio.

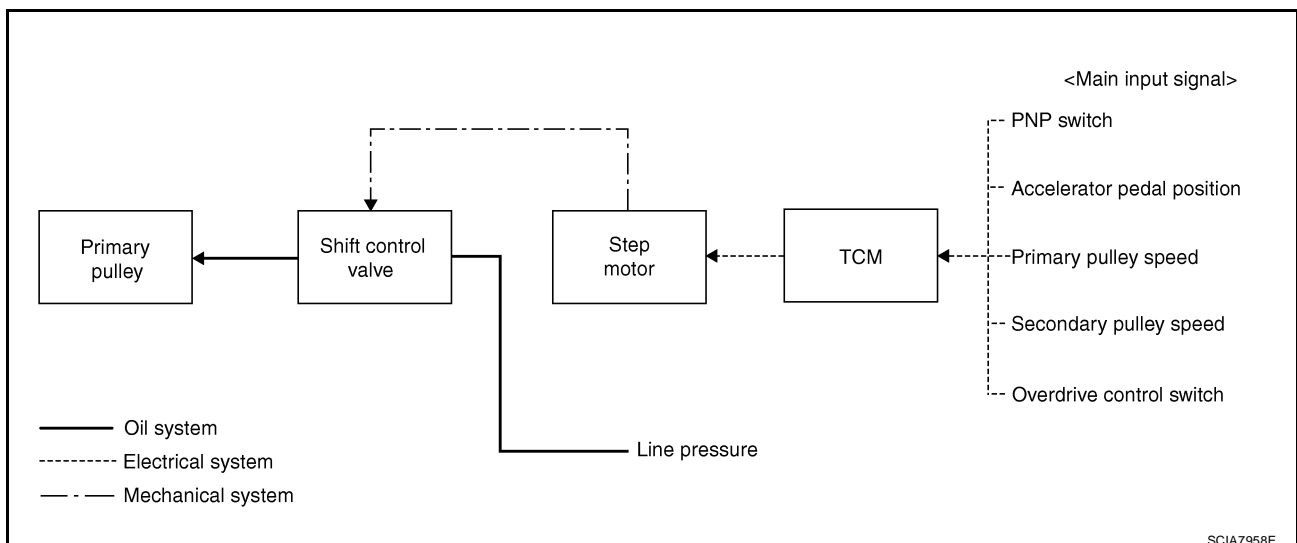


CVT SYSTEM

NOTE:

The gear ratio is set for every position separately.

“D” POSITION

Shifting over all the ranges of gear ratios from the lowest to the highest.

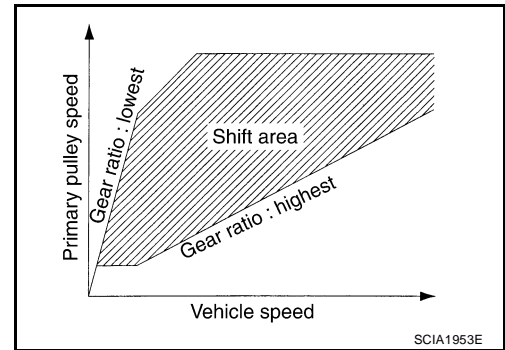


OVERDRIVE-OFF MODE

Use this position for the improved engine braking.

“L” POSITION

By limiting the gear range to the lowest position, the strong driving force and the engine brake can be secured.

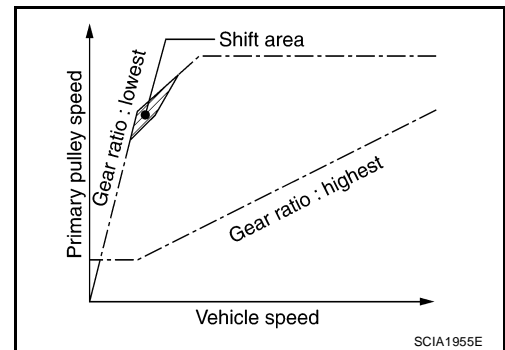

DOWNHILL ENGINE BRAKE CONTROL (AUTO ENGINE BRAKE CONTROL)

When downhill is detected with the accelerator pedal released, the engine brake will be strengthened up by downshifting so as not to accelerate the vehicle more than necessary.

ACCELERATION CONTROL

According to vehicle speed and a change of accelerator pedal angle, driver's request for acceleration and driving scene are judged. This function assists improvement in acceleration feeling by making the engine speed proportionate to the vehicle speed. And a shift map which can gain a larger driving force is available for compatibility of mileage with driveability.


A
B
CVT
D
E
F
G
H
I
J
K
L
M

CVT SYSTEM

UCS005XY


Lock-up and Select Control

- The torque converter clutch piston in the torque converter is engaged to eliminate torque converter slip to increase power transmission efficiency.
- The torque converter clutch control valve operation is controlled by the torque converter clutch solenoid valve, which is controlled by a signal from TCM. The torque converter clutch control valve engages or releases the torque converter clutch piston.
- When shifting between “N” (“P”) ⇔ “D” (“R”), torque converter clutch solenoid controls engagement power of forward clutch and reverse brake.
- The lock-up applied gear range was expanded by locking up the torque converter at a lower vehicle speed than conventional CVT models.

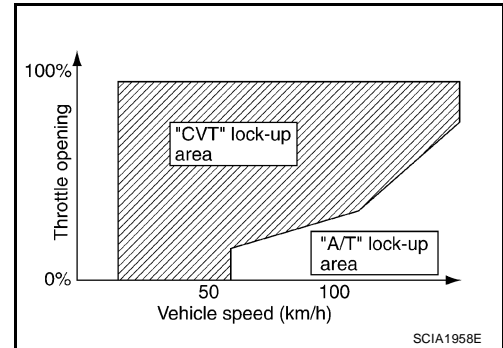

TORQUE CONVERTER CLUTCH AND SELECT CONTROL VALVE CONTROL

Lock-up and Select Control System Diagram

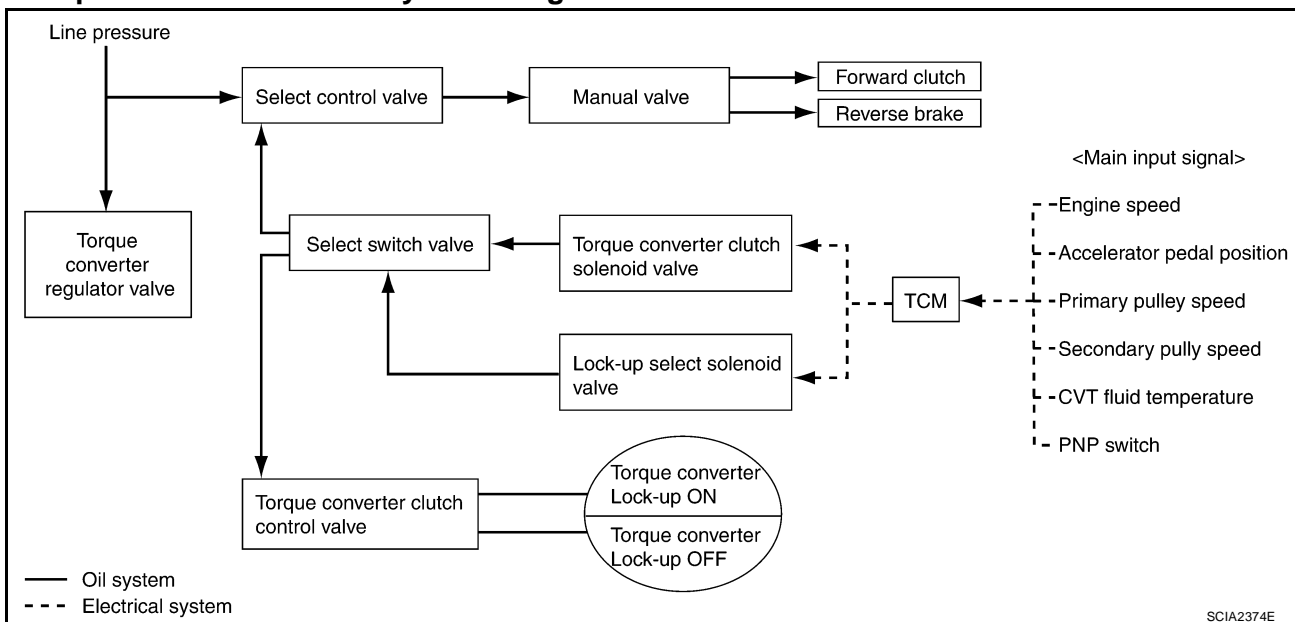

Lock-up Released

In the lock-up released state, the torque converter clutch control valve is set into the unlocked state by the torque converter clutch solenoid and the lock-up apply pressure is drained. In this way, the torque converter clutch piston is not coupled.

Lock-up Applied

In the lock-up applied state, the torque converter clutch control valve is set into the locked state by the torque converter clutch solenoid and lock-up apply pressure is generated. In this way, the torque converter clutch piston is pressed and coupled.

Select Control

When shifting between “N” (“P”) ⇔ “D” (“R”), optimize the operating pressure on the basis of the throttle position, the engine speed, and the secondary pulley (output) revolution speed to lessen the shift shock.

CVT SYSTEM

Control Valve FUNCTION OF CONTROL VALVE

UCS005XZ

| Name | Function |
|-----------------------------------|--|
| Torque converter regulator valve | Optimizes the supply pressure for the torque converter depending on driving conditions. |
| Pressure regulator valve | Optimizes the discharge pressure from the oil pump depending on driving conditions. |
| TCC control valve | <ul style="list-style-type: none"> ● Activates or deactivate the lock-up. ● Lock-up smoothly by opening lock-up operation excessively. |
| TCC solenoid valve | Controls the TCC control valve or select control valve. |
| Shift control valve | Controls flow-in/out of line pressure from the primary pulley depending on the stroke difference between the stepping motor and the primary pulley. |
| Secondary valve | Controls the line pressure from the secondary pulley depending on operating conditions. |
| Clutch regulator valve | Adjusts the clutch operating pressure depending on operating conditions. |
| Secondary pressure solenoid valve | Controls the secondary valve. |
| Line pressure solenoid valve | Controls the line pressure control valve. |
| Step motor | Controls the pulley ratio. |
| Manual valve | Transmits the clutch operating pressure to each circuit in accordance with the selected position. |
| Select control valve | Engages forward clutch, reverse brake smoothly depending on select operation. |
| Select switch valve | Switches torque converter clutch solenoid valve control pressure use to torque converter clutch control valve or select control valve. |
| Lock-up select solenoid valve | Controls the select switch valve. |

A

B

CVT

D

E

F

G

H

I

J

K

L

M

ON BOARD DIAGNOSTIC (OBD) SYSTEM

PFP:00028

Introduction

UCS005Y0

The CVT system has two self-diagnostic systems.

The first is the emission-related on board diagnostic system (OBD-II) performed by the TCM in combination with the ECM. The malfunction is indicated by the MIL (malfunction indicator lamp) and is stored as a DTC in the ECM memory, and the TCM memory.

The second is the TCM original self-diagnosis performed by the TCM. The malfunction is stored in the TCM memory. The detected items are overlapped with OBD-II self-diagnostic items. For detail, refer to [CVT-61, "Display Items List"](#).

OBD-II Function for CVT System

UCS005Y1

The ECM provides emission-related on board diagnostic (OBD-II) functions for the CVT system. One function is to receive a signal from the TCM used with OBD-related parts of the CVT system. The signal is sent to the ECM when a malfunction occurs in the corresponding OBD-related part. The other function is to indicate a diagnostic result by means of the MIL (malfunction indicator lamp) on the instrument panel. Sensors, switches and solenoid valves are used as sensing elements.

The MIL automatically illuminates in One or Two Trip Detection Logic when a malfunction is sensed in relation to CVT system parts.

One or Two Trip Detection Logic of OBD-II ONE TRIP DETECTION LOGIC

UCS005Y2

If a malfunction is sensed during the first test drive, the MIL will illuminate and the malfunction will be stored in the ECM memory as a DTC. The TCM is not provided with such a memory function.

TWO TRIP DETECTION LOGIC

When a malfunction is sensed during the first test drive, it is stored in the ECM memory as a 1st trip DTC (diagnostic trouble code) or 1st trip freeze frame data. At this point, the MIL will not illuminate. — 1st trip



If the same malfunction as that experienced during the first test drive is sensed during the second test drive, the MIL will illuminate. — 2nd trip

The “trip” in the “One or Two Trip Detection Logic” means a driving mode in which self-diagnosis is performed during vehicle operation.

OBD-II Diagnostic Trouble Code (DTC) HOW TO READ DTC AND 1ST TRIP DTC

UCS005Y3


DTC and 1st trip DTC can be read by the following methods.

( with **CONSULT-II** or ( **GST**) CONSULT-II or GST (Generic Scan Tool) Examples: P0705, P0720 etc. These DTC are prescribed by SAE J2012.

(CONSULT-II also displays the malfunctioning component or system.)

- **1st trip DTC No. is the same as DTC No.**
- **Output of the diagnostic trouble code indicates that the indicated circuit has a malfunction. However, in case of the Mode II and GST, they do not indicate whether the malfunction is still occurring or occurred in the past and returned to normal.**
CONSULT-II can identify them as shown below, therefore, CONSULT-II (if available) is recommended.

A sample of CONSULT-II display for DTC and 1st trip DTC is shown on the next page. DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode for “ENGINE” with CONSULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.

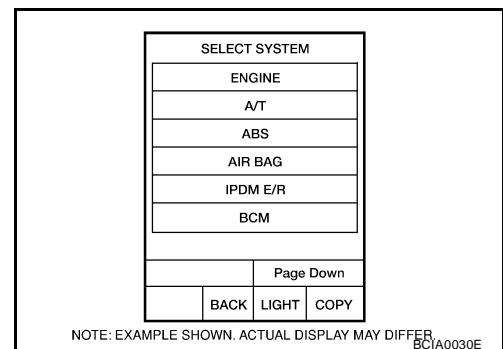

ON BOARD DIAGNOSTIC (OBD) SYSTEM

If the DTC is being detected currently, the time data will be "0".

| SELF-DIAG RESULTS | |
|---------------------|------|
| DTC RESULTS | TIME |
| PNP SW/CIRC [P0705] | 0 |
| | |
| | |

SAT015K

If a 1st trip DTC is stored in the ECM, the time data will be "1t".

| SELF-DIAG RESULTS | |
|---------------------|------|
| DTC RESULTS | TIME |
| PNP SW/CIRC [P0705] | 1 t |
| | |
| | |

SAT016K

Freeze Frame Data and 1st Trip Freeze Frame Data

The ECM has a memory function, which stores the driving condition such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed and vehicle speed at the moment the ECM detects a malfunction.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data, and the data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-II screen, not on the GST. For details, refer to [EC-113, "CONSULT-II Function \(ENGINE\)"](#).

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data, and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

| Priority | Items | |
|----------|----------------------------|--|
| 1 | Freeze frame data | Misfire — DTC: P0300 - P0306 Fuel Injection System Function — DTC: P0171, P0172, P0174, P0175 |
| 2 | | Except the above items (Includes CVT related items) |
| 3 | 1st trip freeze frame data | |

Both 1st trip freeze frame data and freeze frame data (along with the DTC) are cleared when the ECM memory is erased.

HOW TO ERASE DTC

The diagnostic trouble code can be erased by CONSULT-II, GST or ECM DIAGNOSTIC TEST MODE as described following.

- **If the battery cable is disconnected, the diagnostic trouble code will be lost within 24 hours.**
- **When you erase the DTC, using CONSULT-II or GST is easier and quicker than switching the mode selector on the ECM.**

The following emission-related diagnostic information is cleared from the ECM memory when erasing DTC related to OBD-II. For details, refer to [EC-48, "Emission-related Diagnostic Information"](#).

- **Diagnostic trouble codes (DTC)**
- **1st trip diagnostic trouble codes (1st trip DTC)**
- **Freeze frame data**

A
B
CVT
D
E
F
G
H
I
J
K
L
M

ON BOARD DIAGNOSTIC (OBD) SYSTEM

- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values


HOW TO ERASE DTC (WITH CONSULT-II)

- If a DTC is displayed for both ECM and TCM, it is necessary to be erased for both ECM and TCM.
1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
 2. Turn CONSULT-II ON and touch "TRANSMISSION".
 3. Touch "SELF-DIAG RESULTS".
 4. Touch "ERASE". (The DTC in the TCM will be erased.) Then touch "BACK" twice.
 5. Touch "ENGINE".
 6. Touch "SELF-DIAG RESULTS".
 7. Touch "ERASE". (The DTC in the ECM will be erased.)


How to erase DTC (With CONSULT-II)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.

| |
|----------------------|
| SELECT SYSTEM |
| IPDM E/R |
| BCM |
| AUTO DRIVE POS |
| AIR PRESSURE MONITOR |
| TRANSMISSION |
| METER A/C AMP |
| |



| |
|-----------------------|
| SELECT DIAG MODE |
| WORK SUPPORT |
| SELF-DIAG RESULTS |
| DATA MONITOR |
| CAN DIAG SUPPORT MNTR |
| CALIB DATA |
| FUNCTION TEST |
| |




| | |
|---------------------------|------|
| SELF-DIAG RESULTS | |
| DTC RESULTS | TIME |
| TCC SOLENOID/CIRC [P0740] | PAST |
| | |
| | |
| | |
| | |


2. Turn CONSULT -II "ON", and touch "TRANSMISSION".

3. Touch "SELF-DIAG RESULTS".


4. Touch "ERASE". (The DTC in the TCM will be erased.)




Touch "BACK".




Touch "BACK".



| |
|------------------|
| SELECT SYSTEM |
| ENGINE |
| ABS |
| AIR BAG |
| ALL MODE AWD/4WD |
| IPDM E/R |
| BCM |
| |



| |
|-----------------------|
| SELECT DIAG MODE |
| WORK SUPPORT |
| SELF-DIAG RESULTS |
| DATA MONITOR |
| DATA MONITOR (SPEC) |
| CAN DIAG SUPPORT MNTR |
| ACTIVE TEST |
| |



| | |
|---------------------------|------|
| SELF-DIAG RESULTS | |
| DTC RESULTS | TIME |
| TCC SOLENOID/CIRC [P0740] | 0 |
| | |
| | |
| | |
| | |

5. Touch "ENGINE".

6. Touch "SELF-DIAG RESULTS".

7. Touch "ERASE". (The DTC in the ECM will be erased.)

SCIA7508E

HOW TO ERASE DTC (WITH GST)

1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
2. Select Mode 4 with GST (Generic Scan Tool). For details, refer to [EC-126, "Generic Scan Tool \(GST\) Function"](#).

ON BOARD DIAGNOSTIC (OBD) SYSTEM


Malfunction Indicator Lamp (MIL)

UCS005Y4

DESCRIPTION

The MIL is located on the instrument panel.

1. The MIL will light up when the ignition switch is turned ON without the engine running. This is a bulb check.
 - If the MIL does not light up, refer to [DI-24, "WARNING LAMPS"](#) , or see [EC-592, "MIL AND DATA LINK CONNECTOR"](#) .
2. When the engine is started, the MIL should go off. If the MIL remains on, the on board diagnostic system has detected an engine system malfunction.

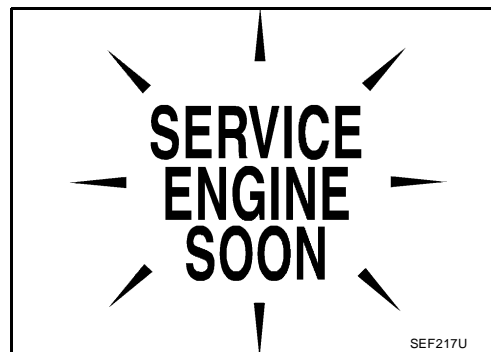

A

B

CVT

D

E

F

G

H

I

J

K

L

M

TROUBLE DIAGNOSIS

PFP:00004

DTC Inspection Priority Chart

UCS005Y5

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

NOTE:

If DTC “U1000 CAN COMM CIRCUIT” is displayed with other DTCs, first perform the trouble diagnosis for “DTC U1000 CAN COMMUNICATION LINE”. Refer to [CVT-68](#) .

| Priority | Detected items (DTC) |
|----------|------------------------------|
| 1 | U1000 CAN communication line |
| 2 | Except above |

Fail-safe

UCS005Y6

The TCM has an electrical fail-safe mode. This mode makes it possible to operate even if there is an error in a main electronic control input/output signal circuit.

FAIL-SAFE FUNCTION

If any malfunction occurs in a sensor or solenoid, this function controls the CVT to make driving possible.

Output Speed Sensor (Secondary Speed Sensor)

The shift pattern is changed in accordance with throttle position when an unexpected signal is sent from the output speed sensor (secondary speed sensor) to the TCM. The overdrive-off mode is inhibited, and the transaxle is put in “D”.

Input Speed Sensor (Primary Speed Sensor)

The shift pattern is changed in accordance with throttle position and secondary speed (vehicle speed) when an unexpected signal is sent from the input speed sensor (primary speed sensor) to the TCM. The sport mode is inhibited, and the transaxle is put in “D”.

PNP Switch

If an unexpected signal is sent from the PNP switch to the TCM, the transaxle is put in “D”.

CVT Fluid Temperature Sensor

If an unexpected signal is sent from the CVT fluid temperature sensor to the TCM, the gear ratio in use before receiving the unexpected signal is maintained or the gear ratio is controlled to keep engine speed under 3500 rpm.

Transmission Fluid Pressure Sensor A (Secondary Pressure Sensor)

- If an unexpected signal is sent from the transmission fluid pressure sensor A (secondary pressure sensor) to the TCM, the secondary pressure feedback control is stopped and the offset value obtained before the non-standard condition occurs is used to control line pressure.
- If transmission fluid pressure sensor A (secondary pressure sensor) error signal is input to TCM, secondary pressure feedback control stops, but line pressure is controlled normally.

Pressure Control Solenoid A (Line Pressure Solenoid)

If an unexpected signal is sent from the solenoid to the TCM, the pressure control solenoid A (line pressure solenoid) is turned OFF to achieve the maximum fluid pressure.

Pressure Control Solenoid B (Secondary Pressure Solenoid)

If an unexpected signal is sent from the solenoid to the TCM, the pressure control solenoid B (secondary pressure solenoid) is turned OFF to achieve the maximum fluid pressure.

Torque Converter Clutch Solenoid

If an unexpected signal is sent from the solenoid to the TCM, the torque converter clutch solenoid is turned OFF to cancel the lock-up.

Step Motor

If an unexpected signal is sent from the step motor to the TCM, the step motor coil phases “A” through “D” are all turned OFF to hold the gear ratio used right before the non-standard condition occurred.

TROUBLE DIAGNOSIS

CVT Lock-up Select Solenoid

If an unexpected signal is sent from the solenoid to the TCM, the CVT lock-up select solenoid is turned OFF to cancel the lock-up.

TCM Power Supply (Memory Back-up)

Transaxle assembly is protected by limiting the engine torque when the memory back-up power supply (for controlling) from the battery is not supplied to TCM. Normal status is restored when turning the ignition switch OFF to ON after the normal power supply.

How to Perform Trouble Diagnosis for Quick and Accurate Repair


UCS005Y7

A
B
CVT

The TCM receives a signal from the vehicle speed sensor, PNP switch and provides shift control or lock-up control via CVT solenoid valves.

The TCM also communicates with the ECM by means of a signal sent from sensing elements used with the OBD-related parts of the CVT system for malfunction-diagnostic purposes. The TCM is capable of diagnosing malfunctioning parts while the ECM can store malfunctions in its memory.


Input and output signals must always be correct and stable in the operation of the CVT system. The CVT system must be in good operating condition and be free of valve seizure, solenoid valve malfunction, etc.

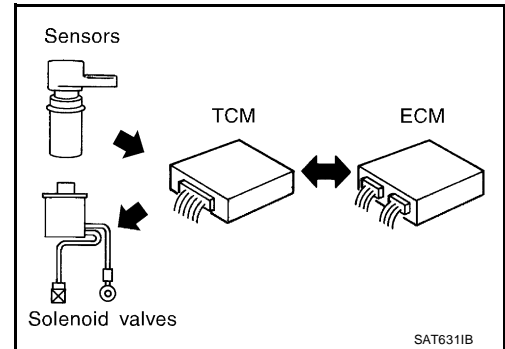

D
E
F
G

It is much more difficult to diagnose an error that occurs intermittently rather than continuously. Most intermittent errors are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.

A visual check only may not find the cause of the errors. A road test with CONSULT-II (or GST) or a circuit tester connected should be performed. Follow the [CVT-36. "WORK FLOW"](#) .

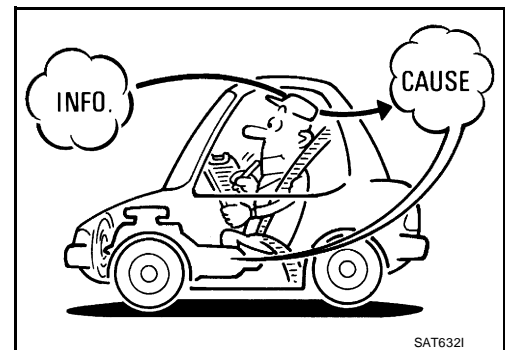


H
I
J
K

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such errors, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "DIAGNOSTIC WORKSHEET" as shown on the example (Refer to [CVT-37](#)) should be used.

Start your diagnosis by looking for "conventional" errors first. This will help troubleshoot driveability errors on an electronically controlled engine vehicle.

Also check related Service bulletins.

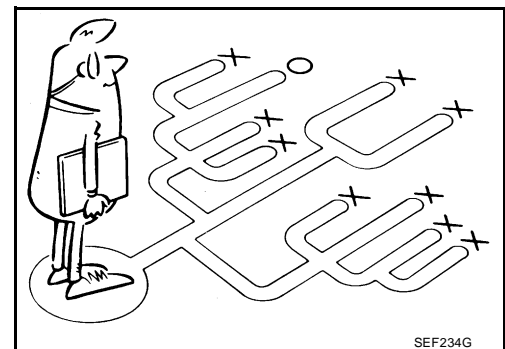

L
M


TROUBLE DIAGNOSIS

WORK FLOW

A good understanding of the malfunction conditions can make troubleshooting faster and more accurate. In general, each customer feels differently about a malfunction. It is important to fully understand the symptoms or conditions for a customer complaint.

Make good use of the two sheets provided, [CVT-37, "Information From Customer"](#) and [CVT-37, "Diagnostic Worksheet Chart"](#), to perform the best troubleshooting possible.

Work Flow Chart

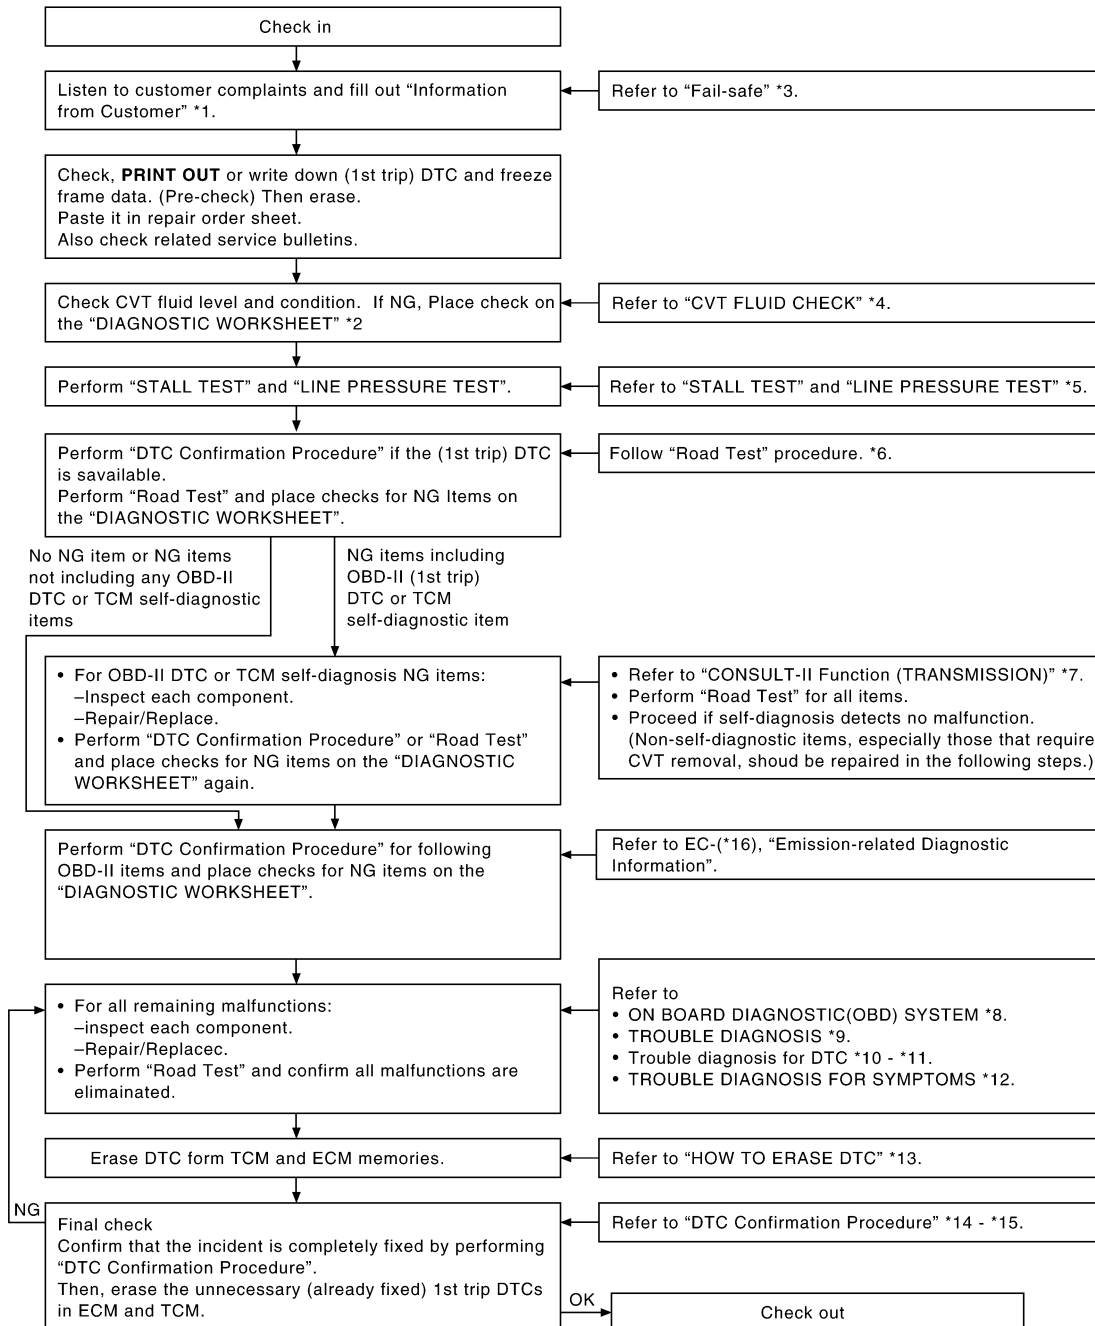

*1. [CVT-37](#)

*4. [CVT-43](#)

*7. [CVT-57](#)

*10. [CVT-68](#)

*13. [CVT-31](#)

*16. [EC-48](#)

*2. [CVT-37](#)

*5. [CVT-43](#), [CVT-45](#)

*8. [CVT-30](#)

*11. [CVT-168](#)

*14. [CVT-68](#)

*3. [CVT-34](#)

*6. [CVT-46](#)

*9. [CVT-34](#)

*12. [CVT-176](#)

*15. [CVT-168](#)

SCIA6877E

TROUBLE DIAGNOSIS

| | | |
|---|---|------------------------|
| | <input type="checkbox"/> Perform road test. | CVT-46 |
| 4 | 4-1. <input type="checkbox"/> Check before engine is started <input type="checkbox"/> CVT-180, "O/D OFF Indicator Lamp Does Not Come On" <input type="checkbox"/> Perform self-diagnosis. Enter checks for detected items. CVT-60 | CVT-49 |
| | <input type="checkbox"/> CVT-68, "DTC U1000 CAN COMMUNICATION LINE" <input type="checkbox"/> CVT-72, "DTC P0615 START SIGNAL CIRCUIT" <input type="checkbox"/> CVT-76, "DTC P0703 STOP LAMP SWITCH CIRCUIT" <input type="checkbox"/> CVT-78, "DTC P0705 PARK/NEUTRAL POSITION SWITCH" <input type="checkbox"/> CVT-85, "DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT" <input type="checkbox"/> CVT-90, "DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)" <input type="checkbox"/> CVT-95, "DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)" <input type="checkbox"/> CVT-101, "DTC P0725 ENGINE SPEED SIGNAL" <input type="checkbox"/> CVT-103, "DTC P0730 BELT DAMAGE" <input type="checkbox"/> CVT-105, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE" <input type="checkbox"/> CVT-110, "DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)" <input type="checkbox"/> CVT-113, "DTC P0745 LINE PRESSURE SOLENOID VALVE" <input type="checkbox"/> CVT-118, "DTC P0746 PRESSURE CONTROL SOLENOID A PERFORMANCE (LINE PRESSURE SOLENOID VALVE)" <input type="checkbox"/> CVT-121, "DTC P0776 PRESSURE CONTROL SOLENOID B PERFORMANCE (SEC PRESSURE SOLENOID VALVE)" <input type="checkbox"/> CVT-124, "DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)" <input type="checkbox"/> CVT-129, "DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)" <input type="checkbox"/> CVT-134, "DTC P0841 PRESSURE SENSOR FUNCTION" <input type="checkbox"/> CVT-137, "DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)" <input type="checkbox"/> CVT-142, "DTC P0868 SECONDARY PRESSURE DOWN" <input type="checkbox"/> CVT-145, "DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)" <input type="checkbox"/> CVT-150, "DTC P1705 THROTTLE POSITION SENSOR" <input type="checkbox"/> CVT-152, "DTC P1722 ESTM VEHICLE SPEED SIGNAL" <input type="checkbox"/> CVT-154, "DTC P1723 CVT SPEED SENSOR FUNCTION" <input type="checkbox"/> CVT-156, "DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM" <input type="checkbox"/> CVT-158, "DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT" <input type="checkbox"/> CVT-164, "DTC P1777 STEP MOTOR - CIRCUIT" <input type="checkbox"/> CVT-168, "DTC P1778 STEP MOTOR - FUNCTION" | |
| | 4-2. <input type="checkbox"/> Check at idle <input type="checkbox"/> CVT-181, "Engine Cannot Be Started in "P" and "N" Position" <input type="checkbox"/> CVT-182, "In "P" Position, Vehicle Moves Forward or Backward When Pushed" <input type="checkbox"/> CVT-182, "In "N" Position, Vehicle Moves" <input type="checkbox"/> CVT-183, "Large Shock "N" → "R" Position" <input type="checkbox"/> CVT-184, "Vehicle Does Not Creep Backward in "R" Position" <input type="checkbox"/> CVT-185, "Vehicle Does Not Creep Forward in "D" or "L" Position" | CVT-49 |


TROUBLE DIAGNOSIS

| | | | | |
|---|------|---|--|---|
| | | <p>Cruise test</p> <ul style="list-style-type: none"> <input type="checkbox"/> CVT-186, "Vehicle Speed Does Not Change in "L" Position" <input type="checkbox"/> CVT-187, "Vehicle Speed Does Not Change in overdrive-off mode" <input type="checkbox"/> CVT-188, "Vehicle Speed Does Not Change in "D" Position" <input type="checkbox"/> CVT-189, "Vehicle Does Not Decelerate by Engine Brake" <input type="checkbox"/> perform self-diagnosis. Enter checks for detected items. CVT-60 | CVT-50 | A |
| 4 | 4-3. | <ul style="list-style-type: none"> <input type="checkbox"/> CVT-68, "DTC U1000 CAN COMMUNICATION LINE" <input type="checkbox"/> CVT-72, "DTC P0615 START SIGNAL CIRCUIT" <input type="checkbox"/> CVT-76, "DTC P0703 STOP LAMP SWITCH CIRCUIT" <input type="checkbox"/> CVT-78, "DTC P0705 PARK/NEUTRAL POSITION SWITCH" <input type="checkbox"/> CVT-85, "DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT" <input type="checkbox"/> CVT-90, "DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)" <input type="checkbox"/> CVT-95, "DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)" <input type="checkbox"/> CVT-101, "DTC P0725 ENGINE SPEED SIGNAL" <input type="checkbox"/> CVT-103, "DTC P0730 BELT DAMAGE" <input type="checkbox"/> CVT-105, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE" <input type="checkbox"/> CVT-110, "DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)" <input type="checkbox"/> CVT-113, "DTC P0745 LINE PRESSURE SOLENOID VALVE" <input type="checkbox"/> CVT-118, "DTC P0746 PRESSURE CONTROL SOLENOID A PERFORMANCE (LINE PRESSURE SOLENOID VALVE)" <input type="checkbox"/> CVT-121, "DTC P0776 PRESSURE CONTROL SOLENOID B PERFORMANCE (SEC PRESSURE SOLENOID VALVE)" <input type="checkbox"/> CVT-124, "DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)" <input type="checkbox"/> CVT-129, "DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)" <input type="checkbox"/> CVT-134, "DTC P0841 PRESSURE SENSOR FUNCTION" <input type="checkbox"/> CVT-137, "DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)" <input type="checkbox"/> CVT-142, "DTC P0868 SECONDARY PRESSURE DOWN" <input type="checkbox"/> CVT-145, "DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)" <input type="checkbox"/> CVT-150, "DTC P1705 THROTTLE POSITION SENSOR" <input type="checkbox"/> CVT-152, "DTC P1722 ESTM VEHICLE SPEED SIGNAL" <input type="checkbox"/> CVT-154, "DTC P1723 CVT SPEED SENSOR FUNCTION" <input type="checkbox"/> CVT-156, "DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM" <input type="checkbox"/> CVT-158, "DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT" <input type="checkbox"/> CVT-164, "DTC P1777 STEP MOTOR - CIRCUIT" <input type="checkbox"/> CVT-168, "DTC P1778 STEP MOTOR - FUNCTION" | | B D E F G H I J K |
| 5 | | <input type="checkbox"/> Inspect each system for items found to be NG in the self-diagnosis and repair or replace the malfunctioning parts. | | |
| 6 | | <input type="checkbox"/> Perform all road tests and enter the checks again for the required items. | CVT-46 | L |
| 7 | | <input type="checkbox"/> For any remaining NG items, perform the "diagnosis procedure" and repair or replace the malfunctioning parts. | | |
| 8 | | <input type="checkbox"/> Erase the results of the self-diagnosis from the TCM. | CVT-32 , CVT-32 | M |

TROUBLE DIAGNOSIS

CVT Electrical Parts Location

UCS005Y9

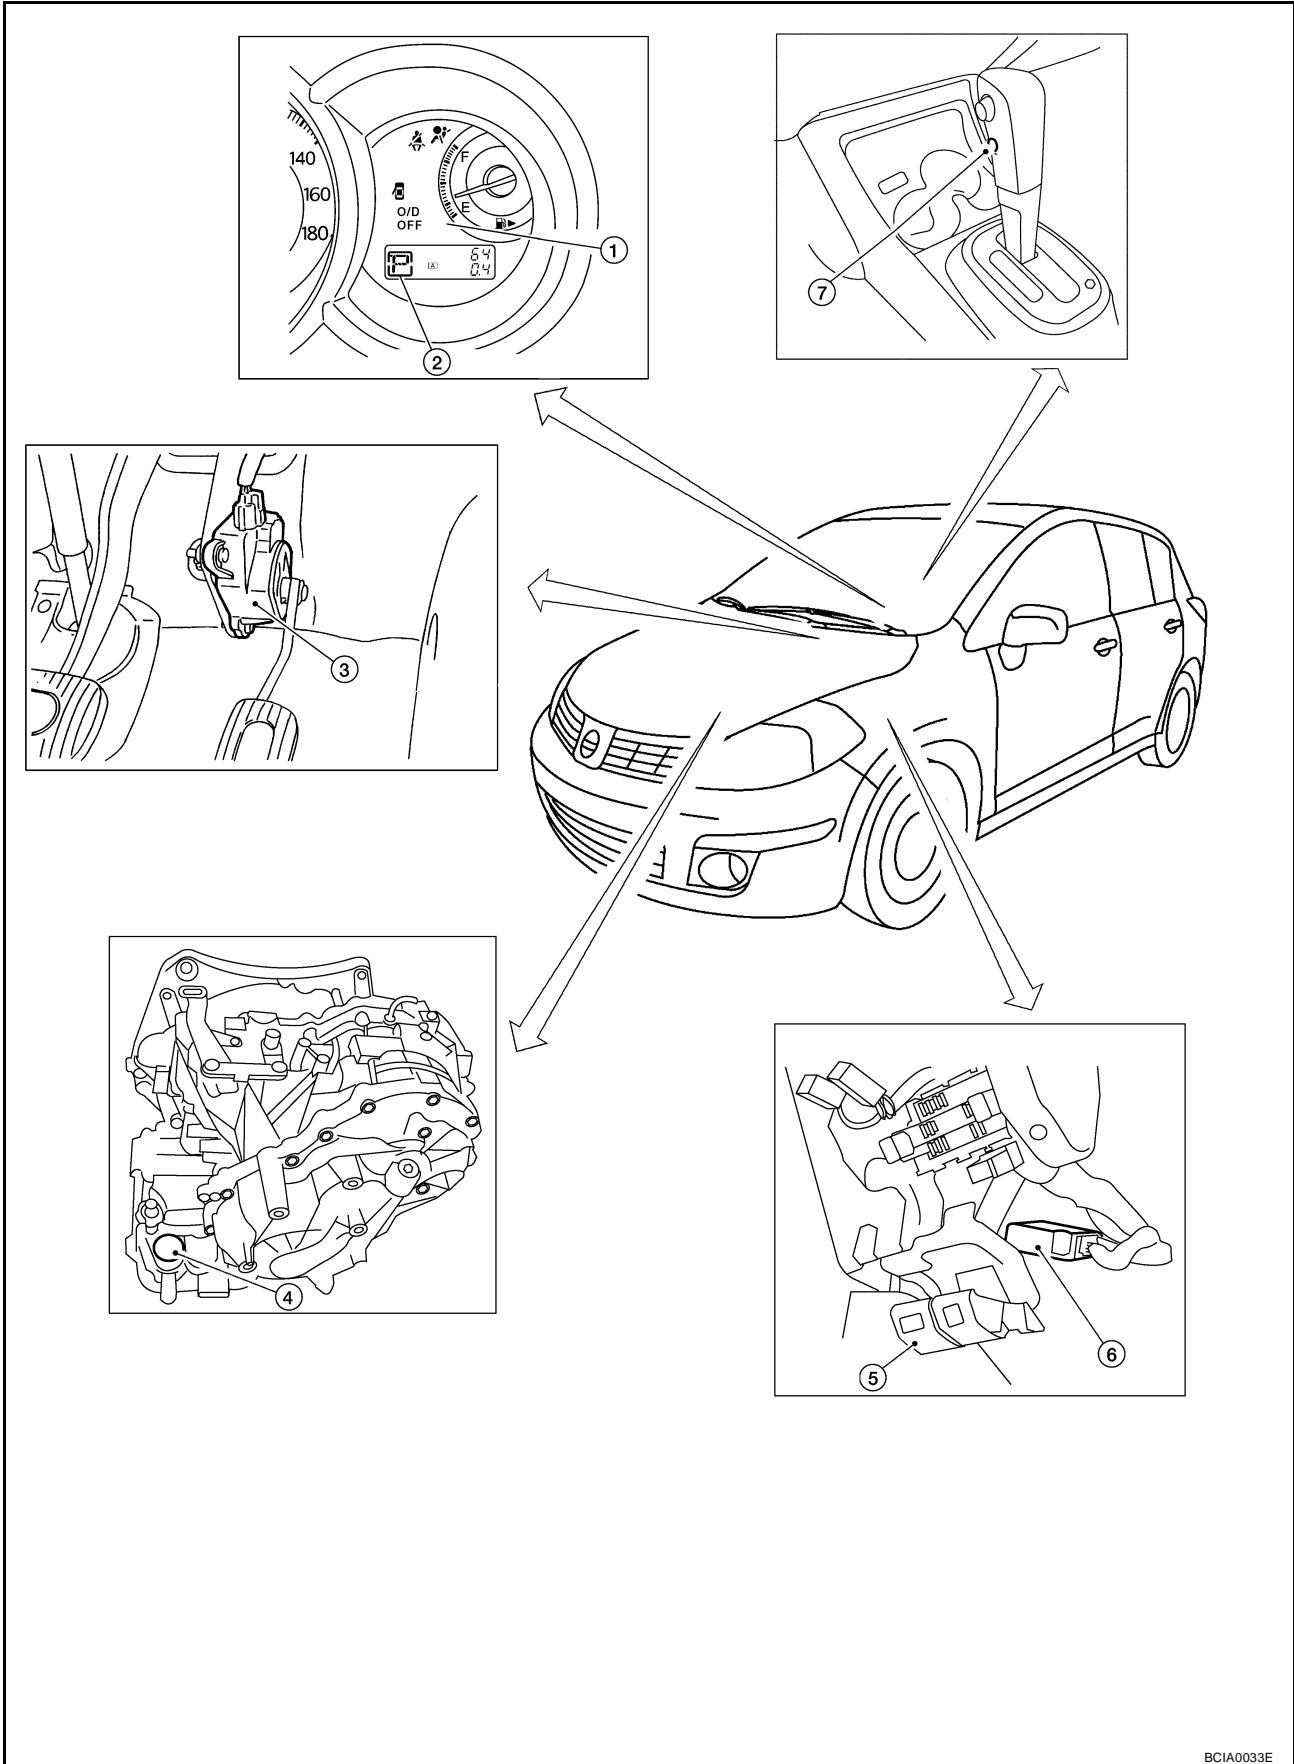

BCIA0033E

TROUBLE DIAGNOSIS

- | | | |
|-------------------------------|-----------------------------|--------------------------------------|
| 1. O/D OFF indicator lamp | 2. Shift position indicator | 3. Accelerator pedal position sensor |
| 4. CVT unit harness connector | 5. Hood release | 6. TCM |
| 7. Overdrive control switch | | |

A

B

CVT

D

E

F

G

H

I

J

K

L


M

TROUBLE DIAGNOSIS

Circuit Diagram

UCS005YA

*: THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM).

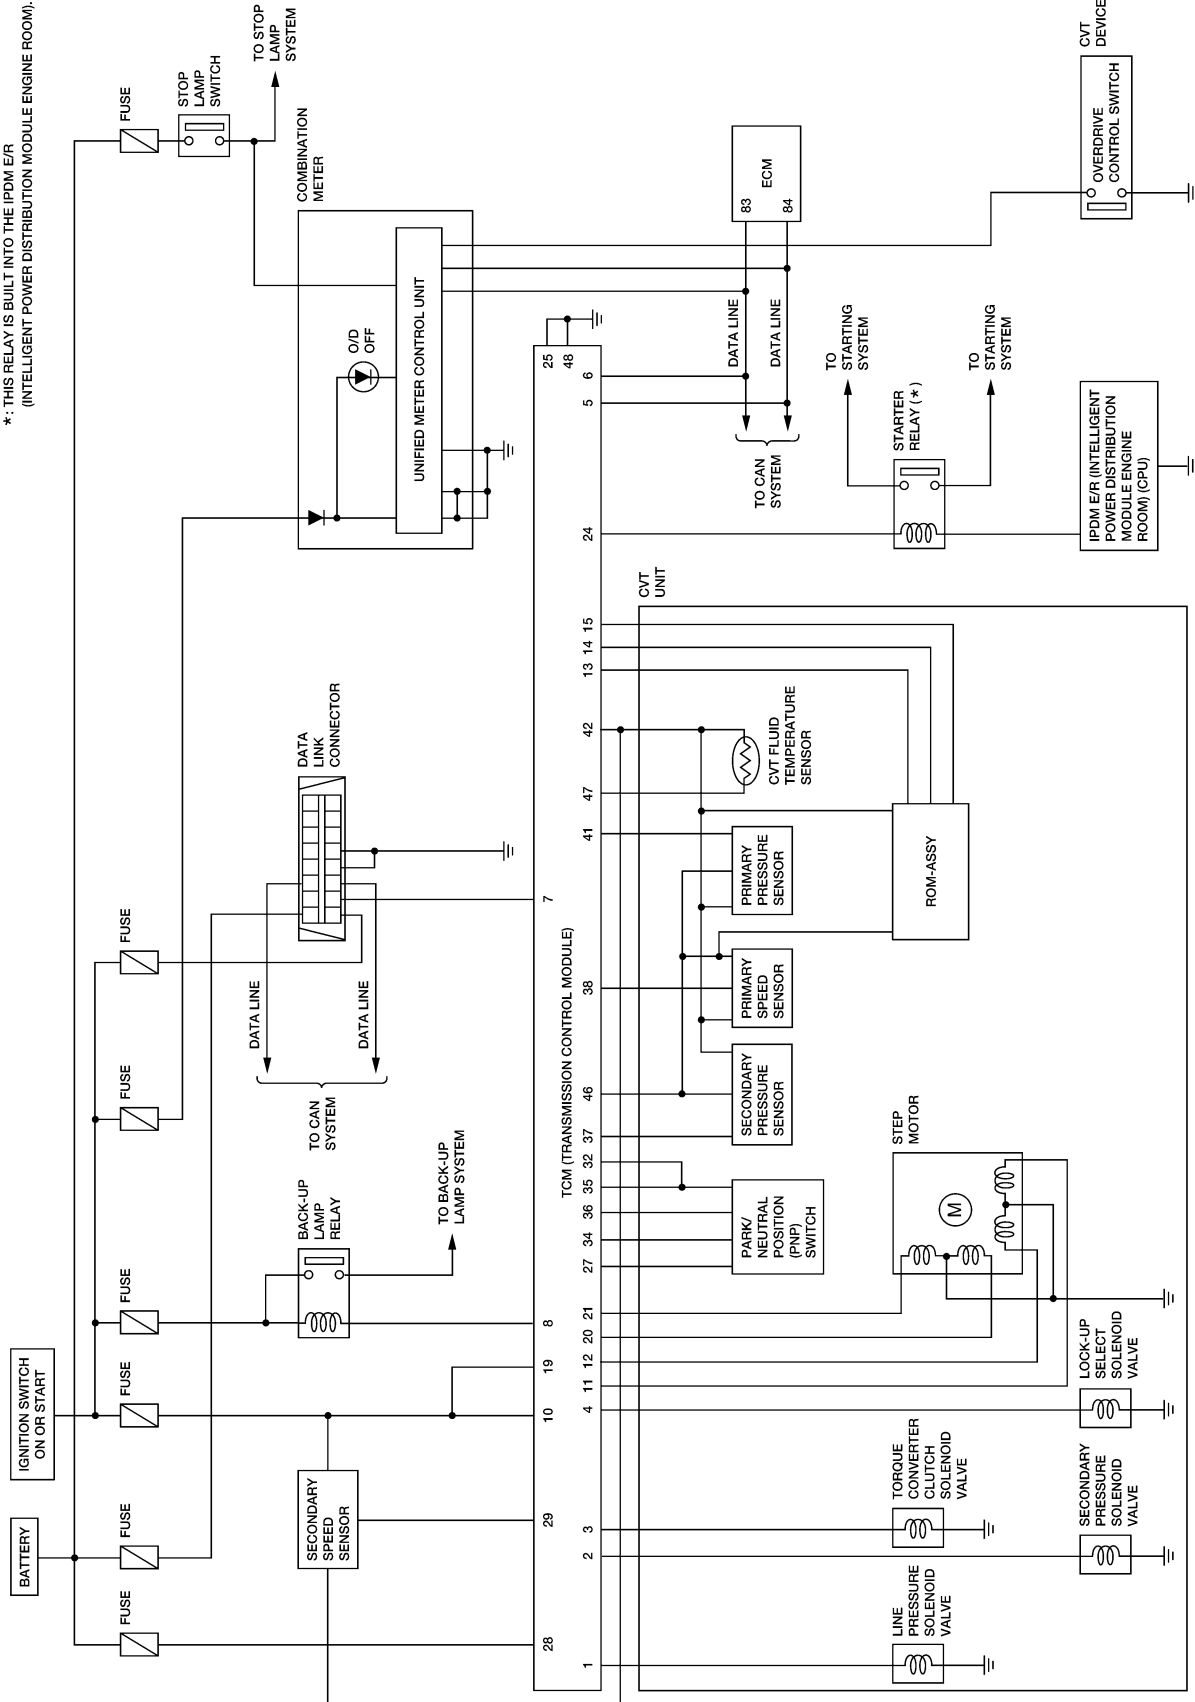

BCWA0667E

TROUBLE DIAGNOSIS

UCS005YB

Inspections before Trouble Diagnosis

CVT FLUID CHECK


Fluid Leakage and Fluid Level Check

- Inspect for fluid leakage and check the fluid level. Refer to [CVT-16, "Checking CVT Fluid"](#).

Fluid Condition Check

Inspect the fluid condition.


| Fluid status | Conceivable cause | Required operation |
|---------------------------------------|--|---|
| Varnished (viscous varnish state) | Clutch, brake scorched | Replace the CVT fluid and check the CVT main unit and the vehicle for malfunctions (wire harnesses, cooler pipes, etc.) |
| Milky white or cloudy | Water in the fluid | Replace the CVT fluid and check for places where water is getting in. |
| Large amount of metal powder mixed in | Unusual wear of sliding parts within CVT | Replace the CVT fluid and check for improper operation of the CVT. |

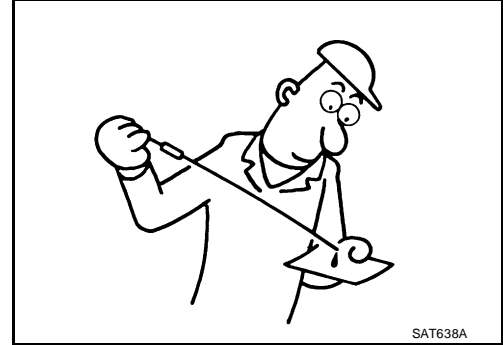


STALL TEST

Stall Test Procedure


- Inspect the amount of engine oil. Replenish the engine oil if necessary.
- Drive for about 10 minutes to warm up the vehicle so that the CVT fluid temperature is 50 to 80°C (122 to 176°F). Inspect the amount of CVT fluid. Replenish if necessary.

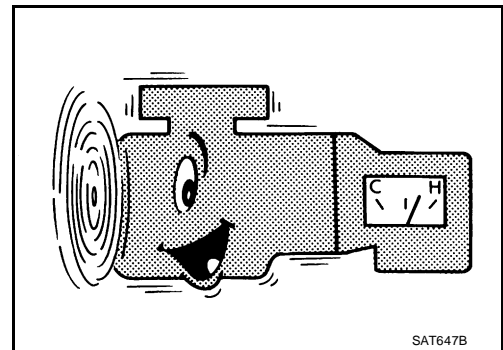

- Securely engage the parking brake so that the tires do not turn.
- Install a tachometer where it can be seen by driver during test.
 - It is good practice to mark the point of specified engine rpm on indicator.

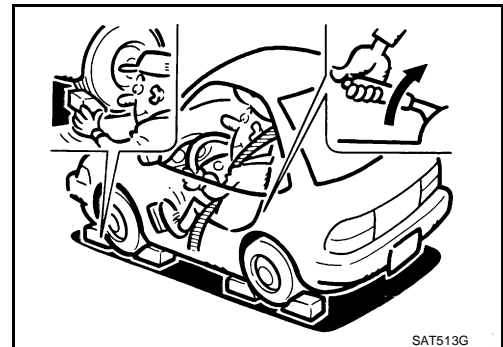

- Start engine, apply foot brake, and place selector lever in "D" position.

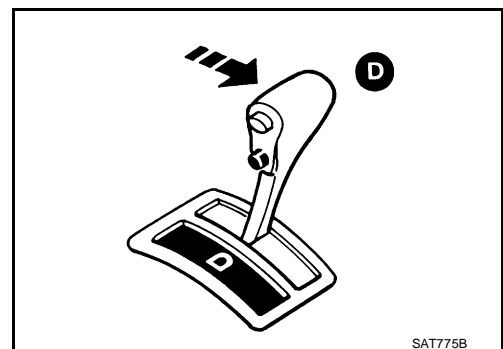

A
B
CVT
D
E
F
G
H
I
J
K
L
M


TROUBLE DIAGNOSIS

6. While holding down the foot brake, gradually press down the accelerator pedal.
7. Quickly read off the stall speed, and then quickly remove your foot from the accelerator pedal.


CAUTION:

Do not hold down the accelerator pedal for more than 5 seconds during this test.

Stall speed: 2,600 - 3,150 rpm

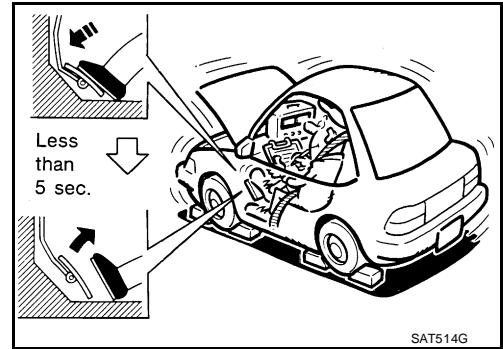

8. Move the selector lever to the "N" position.
9. Cool down the CVT fluid.
CAUTION:
Run the engine at idle for at least 1 minute.
10. Repeat steps 6 through 9 with selector lever in "R" position.

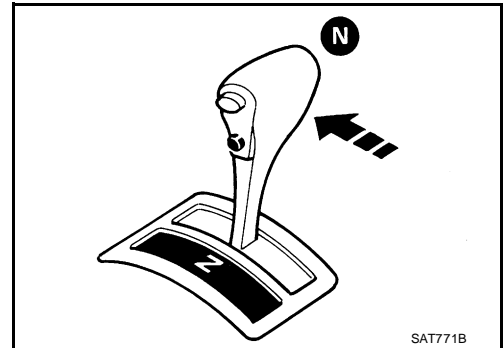

Judgement Stall Test

| | Selector lever position | | Expected problem location |
|----------------|-------------------------|-----|---|
| | "D" | "R" | |
| Stall rotation | H | O | ● Forward clutch |
| | O | H | ● Reverse brake |
| | L | L | ● Engine and torque converter one-way clutch |
| | H | H | <ul style="list-style-type: none"> ● Line pressure low ● Primary pulley ● Secondary pulley ● Steel belt |

O: Stall speed within standard value position.


H: Stall speed is higher than standard value.

L: Stall speed is lower than standard value.

TROUBLE DIAGNOSIS

LINE PRESSURE TEST

Line Pressure Test Port

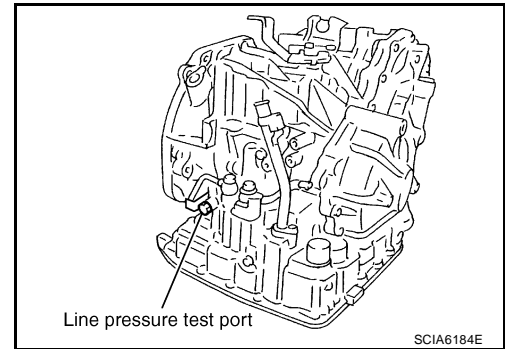

A
B
CVT

Line Pressure Test Procedure

1. Inspect the amount of engine oil and replenish if necessary.
2. Drive the car for about 10 minutes to warm it up so that the CVT fluid reaches in the range of 50 to 80°C (122 to 176°F), then inspect the amount of CVT fluid and replenish if necessary.

NOTE:


The CVT fluid temperature rises in the range of 50 - 80°C (122 - 176°F) during 10 minutes of driving.

3. After warming up CVT, remove the oil pressure detection plug and install the oil pressure gauge [special service tool: - (OTC3492)].

CAUTION:

When using the oil pressure gauge, be sure to use the O-ring attached to the oil pressure detection plug.

4. Securely engage the parking brake so that the tires do not turn.

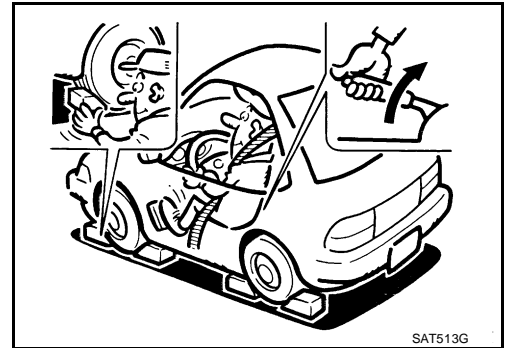

5. Start the engine, and then measure the line pressure at both idle and the stall speed.

CAUTION:


- Keep the brake pedal pressed all the way down during measurement.
- When measuring the line pressure at the stall speed, refer to [CVT-43. "STALL TEST"](#).

6. After the measurements are complete, install the oil pressure detection plug and tighten to the specified torque below.

 : 7.5 N·m (0.77 kg·m, 66 in-lb)

CAUTION:

- Do not reuse O-ring.
- Apply CVT fluid to O-ring.

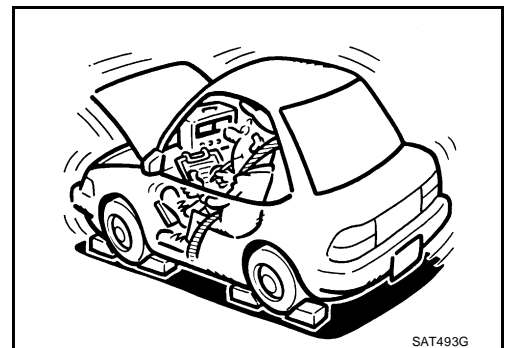

D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

Line Pressure

| Engine speed | Line pressure kPa (kg/cm ² , psi) |
|--------------|--|
| | "R", "D" and "L" positions |
| At idle | 650 (6.63, 94.3) |
| At stall | 4,250 (43.35, 616.3)* |

*: Reference values


Judgement of Line Pressure Test

| Judgement | Possible cause |
|-------------|--|
| Idle speed | Possible causes include malfunctions in the pressure supply system and low oil pump output. For example <ul style="list-style-type: none"> ● Oil pump wear ● Pressure regulator valve or plug sticking or spring fatigue ● Oil strainer ⇒ oil pump ⇒ pressure regulator valve passage oil leak ● Engine idle speed too low |
| | Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve. |
| | Possible causes include a sensor malfunction or malfunction in the line pressure adjustment function. For example <ul style="list-style-type: none"> ● Accelerator pedal position signal malfunction ● CVT fluid temperature sensor malfunction ● Pressure control solenoid A (line pressure solenoid) malfunction (sticking in OFF state, filter clog, cut line) ● Pressure regulator valve or plug sticking |
| Stall speed | Possible causes include a sensor malfunction or malfunction in the pressure adjustment function. For example <ul style="list-style-type: none"> ● Accelerator pedal position signal malfunction ● TCM malfunction ● Pressure control solenoid A (line pressure solenoid) malfunction (shorting, sticking in ON state) ● Pressure regulator valve or plug sticking |
| | Possible causes include malfunctions in the pressure supply system and malfunction in the pressure adjustment function. For example <ul style="list-style-type: none"> ● Accelerator pedal position signal malfunction ● Pressure control solenoid A (line pressure solenoid) malfunction (sticking, filter clog) ● Pressure regulator valve or plug sticking |
| | Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve. |

Road Test DESCRIPTION

UCS005YC

- The purpose of the test is to determine overall performance of CVT and analyze causes of problems.
- The road test consists of the following three parts:
 1. "Check Before Engine Is Started" [CVT-49](#) .
 2. "Check at Idle" [CVT-49](#) .
 3. "Cruise Test" [CVT-50](#) .

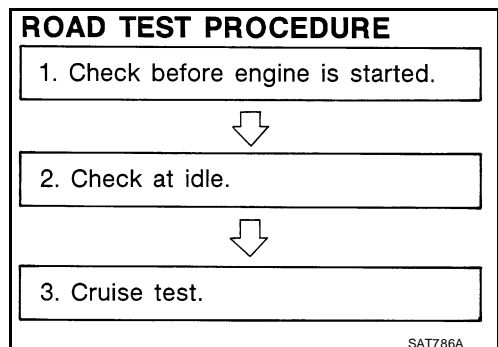

TROUBLE DIAGNOSIS

- Before road test, familiarize yourself with all test procedures and items to check.
- Perform tests on all items until specified symptom is found. Troubleshoot items which check out No Good after road test.




A
B
CVT

CONSULT-II OPERATION PROCEDURE

CAUTION:


If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which performs CAN communication.

- Using CONSULT-II, perform a cruise test and record the result.
 - Print the result and ensure that shifts and lock-ups take place as per Shift Schedule.
1. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.

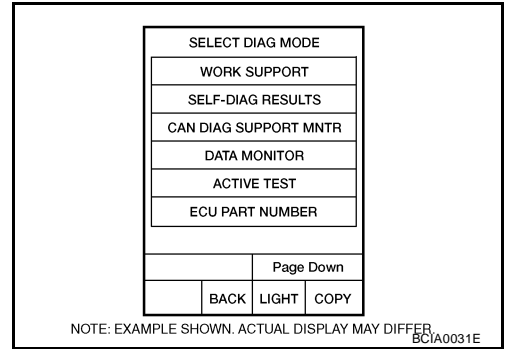


D
E
F
G
H
I

2. Touch "MAIN SIGNALS" to set recording condition.
3. See "Numerical Display", "Barchart Display" or "Line Graph Display".
4. Touch "START".

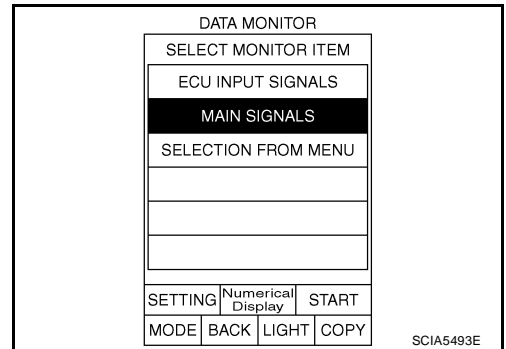


J
K
L
M

5. When performing cruise test. Refer to [CVT-50. "Cruise Test"](#).
6. After finishing cruise test part, touch "RECORD".

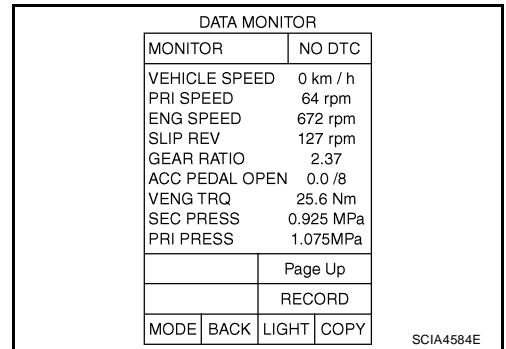


TROUBLE DIAGNOSIS


7. Touch "STORE".

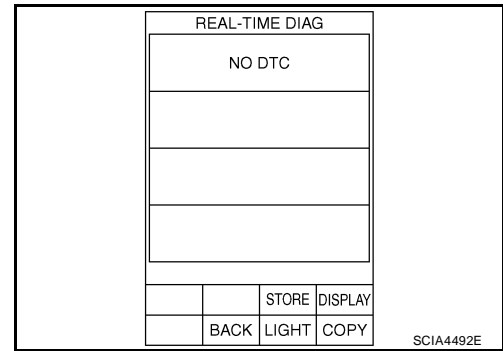

8. Touch "BACK".

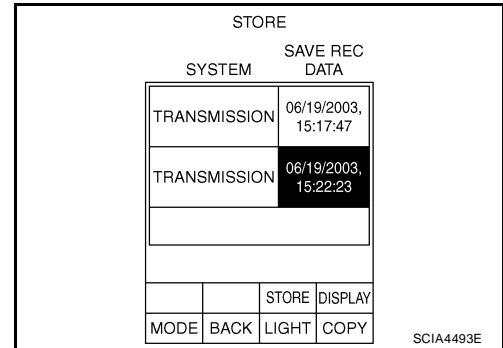


9. Touch "DISPLAY".

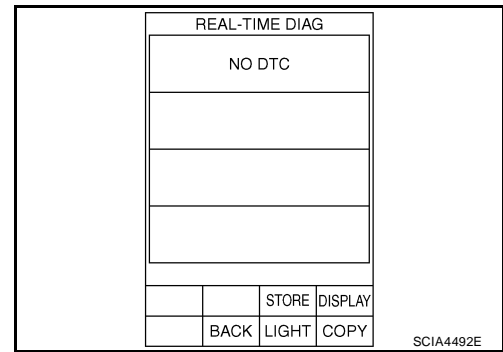

10. Touch "PRINT".

11. Check the monitor data printed out.

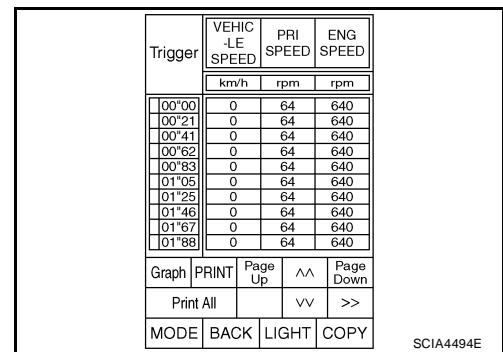

TROUBLE DIAGNOSIS

Check before Engine Is Started

UCS005YD

1. CHECK O/D OFF INDICATOR LAMP

1. Park vehicle on flat surface.
2. Move selector lever to "P" position.
3. Turn ignition switch OFF. Wait at least 5 seconds.
4. Turn ignition switch ON. (Do not start engine.)

Does O/D OFF indicator lamp come on for about 2 seconds?

YES >> 1. Turn ignition switch OFF.

2. Perform self-diagnosis and note NG items.

Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

3. Go to [CVT-49, "Check at Idle"](#) .

NO >> Stop "Road Test". Go to [CVT-180, "O/D OFF Indicator Lamp Does Not Come On"](#) .

Check at Idle

UCS005YE

1. CHECK STARTING THE ENGINE

1. Park vehicle on flat surface.
2. Move selector lever to "P" or "N" position.
3. Turn ignition switch OFF.
4. Turn ignition switch START.

Is engine started?

YES >> GO TO 2.

NO >> Stop "Road Test". Mark the box on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#) . Go to [CVT-181, "Engine Cannot Be Started in "P" and "N" Position"](#) .

2. CHECK STARTING THE ENGINE

1. Turn ignition switch ON.
2. Move selector lever to "D", "L" or "R" position.
3. Turn ignition switch START.

Is engine started?

YES >> Stop "Road Test". Mark the box on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#) . Go to [CVT-181, "Engine Cannot Be Started in "P" and "N" Position"](#) .

NO >> GO TO 3.

3. CHECK "P" POSITION FUNCTION

1. Move selector lever to "P" position.
2. Turn ignition switch OFF.
3. Release parking brake.
4. Push vehicle forward or backward.
5. Apply parking brake.

Does vehicle move when it is pushed forward or backward?

YES >> Mark the box [CVT-182, "In "P" Position, Vehicle Moves Forward or Backward When Pushed"](#) on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#) . Continue "Road Test".

NO >> GO TO 4.

TROUBLE DIAGNOSIS

4. CHECK "N" POSITION FUNCTION

1. Start engine.
2. Move selector lever to "N" position.
3. Release parking brake.

Does vehicle move forward or backward?

- YES >> Mark the box [CVT-182, "In "N" Position, Vehicle Moves"](#) on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#). Continue "Road Test".
- NO >> GO TO 5.

5. CHECK SHIFT SHOCK

1. Apply foot brake.
2. Move selector lever to "R" position.

Is there large shock when changing from "N" to "R" position?

- YES >> Mark the box [CVT-183, "Large Shock "N" → "R" Position"](#) on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#). Continue "Road Test".
- NO >> GO TO 6.

6. CHECK "R" POSITION FUNCTION

Release foot brake for several seconds.

Does vehicle creep backward when foot brake is released?

- YES >> GO TO 7.
- NO >> Mark the box [CVT-184, "Vehicle Does Not Creep Backward in "R" Position"](#) on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#). Continue "Road Test".

7. CHECK "D", "L" POSITIONS FUNCTION

Move selector lever to "D" and "L" positions and check if vehicle creeps forward.

Does vehicle creep forward in all positions?

- YES >> Go to [CVT-50, "Cruise Test"](#).
- NO >> Stop "Road Test". Mark the box on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#). Go to [CVT-185, "Vehicle Does Not Creep Forward in "D" or "L" Position"](#).

Cruise Test

UCS005YF

1. CHECK VEHICLE SPEED WHEN SHIFTING GEARS — PART 1

1. Drive vehicle for approximately 10 minutes to warm engine oil and CVT fluid up to operating temperature.


CVT fluid operating temperature: 50 - 80°C (122 - 176°F)

2. Park vehicle on flat surface.
3. Move selector lever to "P" position.
4. Start engine.
5. Move selector lever to "L" position.
6. Accelerate vehicle to 2/8-way throttle depressing accelerator pedal constantly.

 Read vehicle speed and engine speed. Refer to [CVT-53, "Vehicle Speed When Shifting Gears"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Mark the box of [CVT-186, "Vehicle Speed Does Not Change in "L" Position"](#) on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#). Continue "Road Test".

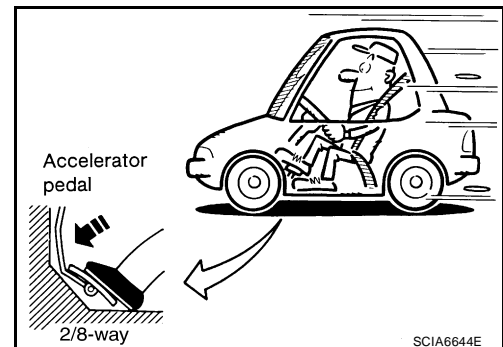

TROUBLE DIAGNOSIS

2. CHECK VEHICLE SPEED WHEN SHIFTING GEARS — PART 2


1. Park vehicle on flat surface.
2. Move selector lever to "D" position.
3. Push overdrive control switch. (O/D OFF indicator lamp is on.)
4. Accelerate vehicle to 2/8-way throttle depressing accelerator pedal constantly.

Ⓜ Read vehicle speed and engine speed. Refer to [CVT-53, "Vehicle Speed When Shifting Gears"](#) .

OK or NG

OK >> GO TO 3.

NG >> Mark the box of [CVT-187, "Vehicle Speed Does Not Change in overdrive-off mode"](#) on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#) . Continue "Road Test".

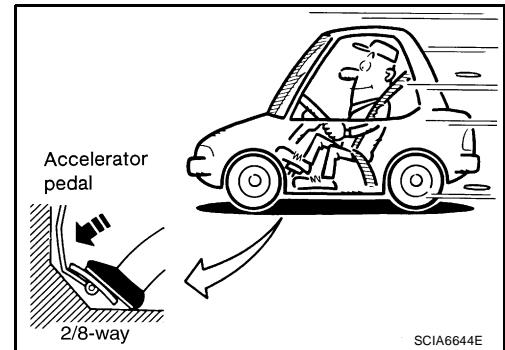

3. CHECK VEHICLE SPEED WHEN SHIFTING GEARS — PART 3


1. Park vehicle on flat surface.
2. Move selector lever to "D" position.
3. Push overdrive control switch. (O/D OFF indicator lamp is off.)
4. Accelerate vehicle to 2/8-way throttle depressing accelerator pedal constantly.

Ⓜ Read vehicle speed and engine speed. Refer to [CVT-53, "Vehicle Speed When Shifting Gears"](#) .

OK or NG

OK >> GO TO 4.

NG >> Mark the box of [CVT-188, "Vehicle Speed Does Not Change in "D" Position"](#) on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#) . Continue "Road Test".

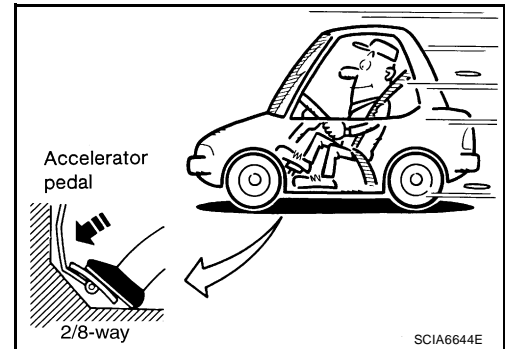

4. CHECK VEHICLE SPEED WHEN SHIFTING GEARS — PART 4


1. Park vehicle on flat surface.
2. Move selector lever to "L" position.
3. Accelerate vehicle to full depression depressing accelerator pedal constantly.

Ⓜ Read vehicle speed and engine speed. Refer to [CVT-53, "Vehicle Speed When Shifting Gears"](#) .

OK or NG

OK >> GO TO 5.

NG >> Mark the box of [CVT-186, "Vehicle Speed Does Not Change in "L" Position"](#) on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#) . Continue "Road Test".

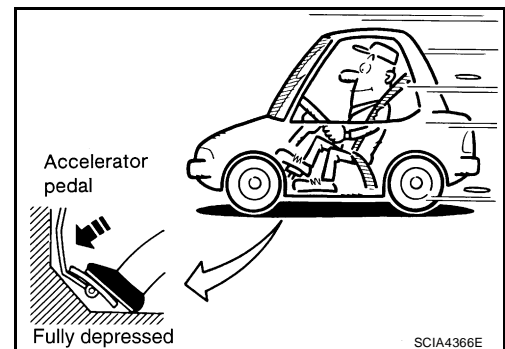

TROUBLE DIAGNOSIS

5. CHECK VEHICLE SPEED WHEN SHIFTING GEARS — PART 5


1. Park vehicle on flat surface.
2. Move selector lever to "D" position.
3. Push overdrive control switch. (O/D OFF indicator lamp is on.)
4. Accelerate vehicle to full depression depressing accelerator pedal constantly.

Ⓜ Read vehicle speed and engine speed. Refer to [CVT-53, "Vehicle Speed When Shifting Gears"](#).

OK or NG

OK >> GO TO 6.

NG >> Mark the box of [CVT-187, "Vehicle Speed Does Not Change in overdrive-off mode"](#) on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#). Continue "Road Test".

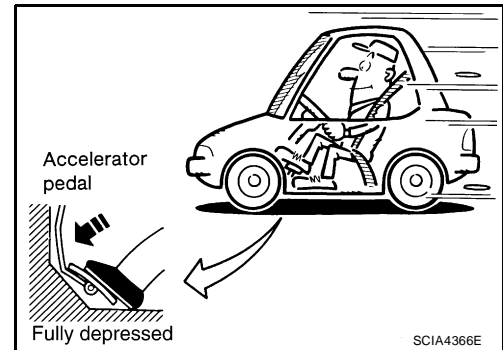

6. CHECK VEHICLE SPEED WHEN SHIFTING GEARS — PART 6


1. Park vehicle on flat surface.
2. Move selector lever to "D" position.
3. Push overdrive control switch. (O/D OFF indicator lamp is off.)
4. Accelerate vehicle to full depression depressing accelerator pedal constantly.

Ⓜ Read vehicle speed and engine speed. Refer to [CVT-53, "Vehicle Speed When Shifting Gears"](#).

OK or NG

OK >> GO TO 7.

NG >> Mark the box of [CVT-188, "Vehicle Speed Does Not Change in "D" Position"](#) on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#). Continue "Road Test".

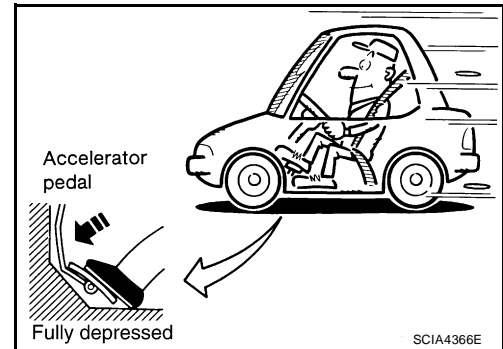

7. CHECK ENGINE BRAKE FUNCTION — PART 1

1. Release accelerator pedal.
 2. Check engine brake. (O/D OFF indicator lamp is off.)
- Does engine braking effectively reduce speed in "D" position?

YES >> GO TO 8.

NO >> Mark the box of [CVT-189, "Vehicle Does Not Decelerate by Engine Brake"](#) on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#). Continue "Road Test".

8. CHECK ENGINE BRAKE FUNCTION — PART 2

1. Push overdrive control switch. (O/D OFF indicator lamp is on.)
2. Check engine brake.

Does engine braking effectively reduce speed in "D" position?

YES >> GO TO 9.

NO >> Mark the box of [CVT-189, "Vehicle Does Not Decelerate by Engine Brake"](#) on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#). Continue "Road Test".

TROUBLE DIAGNOSIS

9. CHECK ENGINE BRAKE FUNCTION — PART 3

1. Move selector lever to "L" position.
2. Check engine brake.

Does engine braking effectively reduce speed in "L" position?

YES >> 1. Stop the vehicle.

2. Perform self-diagnosis. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

NO >> Mark the box of [CVT-189, "Vehicle Does Not Decelerate by Engine Brake"](#) on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#) . Then continue trouble diagnosis.

Vehicle Speed When Shifting Gears

UCS005YG

Numerical value data are reference values.

| Engine type | Throttle position | Shift pattern | Engine speed (rpm) | |
|-------------|-------------------|--|---------------------|---------------------|
| | | | At 40 km/h (25 MPH) | At 60 km/h (37 MPH) |
| MR18DE | 8/8 | "D" position Overdrive-off mode "L" position | 3,600 - 4,400 | 4,400 - 5,200 |
| | | "D" position | 1,400 - 2,400 | 1,500 - 2,500 |
| | 2/8 | Overdrive-off mode | 2,200 - 3,000 | 2,800 - 3,600 |
| | | "L" position | 3,200 - 4,000 | 3,900 - 4,700 |


CAUTION:

Lock-up clutch is engaged when vehicle speed is approximately 18 km/h (11 MPH) to 90 km/h (56 MPH).

TROUBLE DIAGNOSIS

TCM Input/Output Signal Reference Values TCM TERMINAL CONNECTOR LAYOUT

UCS005YH

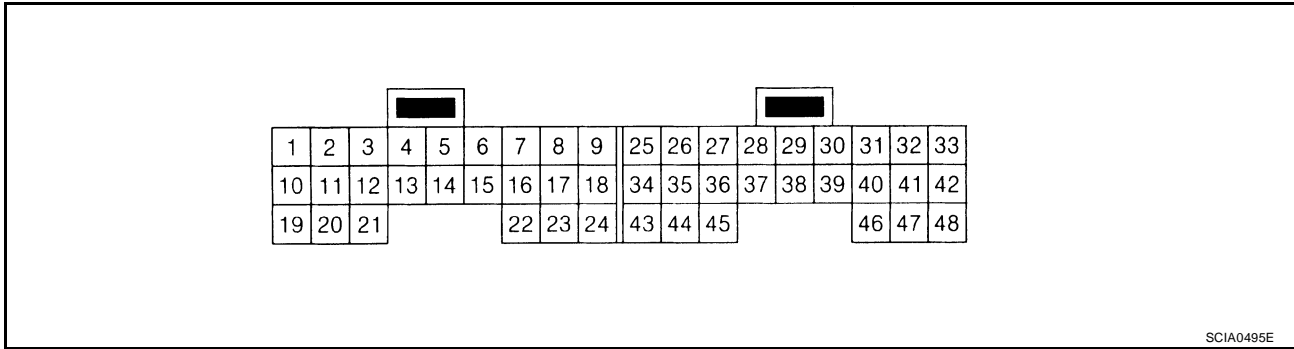













SCIA0495E

TCM INSPECTION TABLE

Data are reference values and are measured between each terminal and ground.






| Terminal | Wire color | Item | Condition | | Data (Approx.) |
|----------|------------|---|---|---|--|
| 1 | GR | Pressure control solenoid valve A (Line pressure solenoid valve) | | Release your foot from the accelerator pedal. | 5.0 - 7.0 V |
| | | | | Press the accelerator pedal all the way down. | 1.0 - 3.0 V |
| 2 | LG | Pressure control solenoid valve B (Secondary pressure solenoid valve) | | Release your foot from the accelerator pedal. | 5.0 - 7.0 V |
| | | | | Press the accelerator pedal all the way down. | 3.0 - 4.0 V |
| 3 | SB | Torque converter clutch solenoid valve | | When vehicle cruises in "D" position. | When CVT performs lock-up. 6.0 V |
| | | | | | When CVT does not perform lock-up. 1.0 V |
| 4 | BR | Lock-up select solenoid valve | | Selector lever in "P" and "N" positions | Battery voltage |
| | | | | Wait at least for 5 seconds with the selector lever in "R", "D" and "L" positions | 0 V |
| 5 | L | CAN-H | — | | — |
| 6 | P | CAN-L | — | | — |
| 8 | V | Back-up lamp relay | | Selector lever in "R" position. | 0 V |
| | | | | Selector lever in other positions. | Battery voltage |
| 10 | R | Power supply | | — | Battery voltage |
| | | | | | — |
| 11 | L | Step motor A | Within 2 seconds after ignition switch ON, the time measurement by using the pulse width measurement function (Hi level) of CONSULT-II.*1 CAUTION: Connect the diagnosis data link cable to the vehicle diagnosis connector. *1: A circuit tester cannot be used to test this item. | | 30.0 msec |
| 12 | Y | Step motor B | | | 10.0 msec |
| 13 | G | ROM assembly | — | | — |
| 14 | Y | ROM assembly | — | | — |
| 15 | G | ROM assembly | — | | — |

TROUBLE DIAGNOSIS

| Terminal | Wire color | Item | Condition | | Data (Approx.) |
|----------|------------|--|--|--|--------------------------|
| 19 | R | Power supply |  | — | Battery voltage |
| | | |  | — | 0 V |
| 20 | W | Step motor C | Within 2 seconds after ignition switch ON, the time measurement by using the pulse width measurement function (Hi level) of CONSULT-II.*1 CAUTION: Connect the diagnosis data link cable to the vehicle diagnosis connector. *1: A circuit tester cannot be used to test this item. | | 30.0 msec |
| 21 | P | Step motor D | | | 10.0 msec |
| 24 | BR | Starter relay |  | Selector lever in "N" and "P" positions. | Battery voltage |
| | | | | Selector lever in other positions. | 0 V |
| 25 | B | Ground | Always | | 0 V |
| 27 | GR | PNP switch 1 |  | Selector lever in "R", "N" and "D" positions. | 0 V |
| | | | | Selector lever in "P" and "L" positions. | Battery voltage |
| 28 | Y | Power supply (memory back-up) | Always | | Battery voltage |
| 29 | R | Output speed sensor (Secondary speed sensor) |  | When driving ["D" position, 20 km/h (12 MPH)]. | 570 Hz |
| 31 | LG | K-LINE | — | | — |
| 32 | Y | PNP switch 3 (monitor) |  | Selector lever in "D" and "L" positions. | 0 V |
| | | | | Selector lever in "P", "R" and "N" positions. | 8.0 V - Battery voltage |
| 34 | SB | PNP switch 2 |  | Selector lever in "N", "D" and "L" positions. | 0 V |
| | | | | Selector lever in "P" and "R" positions. | 10.0 V - Battery voltage |
| 35 | W | PNP switch 3 |  | Selector lever in "D" and "L" positions. | 0 V |
| | | | | Selector lever in "P", "R" and "N" positions. | 8.0 V - Battery voltage |
| 36 | W | PNP switch 4 |  | Selector lever in "R" and "D" positions. | 0 V |
| | | | | Selector lever in "P", "N" and "L" positions. | 10.0 V - Battery voltage |
| 37 | L | Transmission fluid pressure sensor A (Secondary pressure sensor) |  and  | "N" position idle | 1.0 V |
| 38 | V | Input speed sensor (Primary speed sensor) |  | When driving ["L" position, 20 km/h (12 MPH)]. | 1000 Hz |

A
B
CVT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS

| Terminal | Wire color | Item | Condition | | Data (Approx.) |
|----------|------------|--|---|--|----------------|
| 41 | G | Transmission fluid pressure sensor B (Primary pressure sensor) |  and  | "N" position idle | 0.7 V |
| 42 | LG | Sensor ground | Always | | 0 V |
| 46 | O | Sensor power |  | — | 5.0 V |
| | | |  | — | 0 V |
| 47 | G | CVT fluid temperature sensor |  | When CVT fluid temperature is 20°C (68°F) | 2.0 V |
| | | | | When CVT fluid temperature is 80°C (176°F) | 1.0 V |
| 48 | B | Ground | Always | | 0 V |

TROUBLE DIAGNOSIS

UCS005YI

CONSULT-II Function (TRANSMISSION)

CONSULT-II can display each diagnostic item using the diagnostic test modes shown below.

FUNCTION

| Diagnostic test mode | Function | Reference page |
|--------------------------------|--|------------------------|
| Work support | This mode enables a technician to adjust some devices faster and more accurately by following the indications on CONSULT-II. | CVT-59 |
| Self-diagnostic results | Self-diagnostic results can be read and erased quickly. | CVT-60 |
| Data monitor | Input/Output data in the TCM can be read. | CVT-64 |
| CAN diagnostic support monitor | The results of transmit/receive diagnosis of CAN communication can be read. | CVT-66 |
| CALIB data | Characteristic information for TCM and CVT assembly can be read. | — |
| Function test | Performed by CONSULT-II instead of a technician to determine whether each system is "OK" or "NG". | — |
| ECU part number | TCM part number can be read. | — |

CONSULT-II REFERENCE VALUE

| Item name | Condition | Display value (Approx.) |
|----------------|--|---|
| VSP SENSOR | During driving | Approximately matches the speedometer reading. |
| ESTM VSP SIG* | | |
| PRI SPEED SEN | During driving (lock-up ON) | Approximately matches the engine speed. |
| ENG SPEED SIG | Engine running | Closely matches the tachometer reading. |
| SEC HYDR SEN | "N" position idle | 1.0 V |
| PRI HYDR SEN | "N" position idle | 0.7 V |
| ATF TEMP SEN | When CVT fluid temperature is 20°C (68°F). | 2.0 V |
| | When CVT fluid temperature is 80°C (176°F). | 1.0 V |
| VIGN SEN | Ignition switch: ON | Battery voltage |
| VEHICLE SPEED | During driving | Approximately matches the speedometer reading. |
| PRI SPEED | During driving (lock-up ON) | Approximately matches the engine speed. |
| SEC SPEED | During driving | 50 X Approximately matches the speedometer reading. |
| ENG SPEED | Engine running | Closely matches the tachometer reading. |
| GEAR RATIO | During driving | 2.56 - 0.43 |
| ACC PEDAL OPEN | Released accelerator pedal - Fully depressed accelerator pedal | 0.0/8 - 8.0/8 |
| SEC PRESS | "N" position idle | 0.8 MPa |
| PRI PRESS | "N" position idle | 0.4 MPa |
| STM STEP | During driving | -20 step - 180 step |
| ISOLT1 | Lock-up OFF | 0.0 A |
| | Lock-up ON | 0.7 A |
| ISOLT2 | Release your foot from the accelerator pedal. | 0.8 A |
| | Press the accelerator pedal all the way down. | 0.0 A |
| ISOLT3 | Secondary pressure low - Secondary pressure high. | 0.8 - 0.0 A |
| SOLMON1 | Lock-up OFF | 0.0 A |
| | Lock-up ON | 0.7 A |
| SOLMON2 | "N" position idle | 0.8 A |
| | When stalled | 0.3 - 0.6 A |

TROUBLE DIAGNOSIS

| Item name | Condition | Display value (Approx.) |
|---------------|---|-------------------------|
| SOLMON3 | "N" position idle | 0.6 - 0.7 A |
| | When stalled | 0.4 - 0.6 A |
| INH SW3M | Selector lever in "D" and "L" positions | ON |
| | Selector lever in "P", "R" and "N" positions | OFF |
| INH SW4 | Selector lever in "R" and "D" positions | ON |
| | Selector lever in "P", "N" and "L" positions | OFF |
| INH SW3 | Selector lever in "D" and "L" positions | ON |
| | Selector lever in "P", "R" and "N" positions | OFF |
| INH SW2 | Selector lever in "N", "D" and "L" positions | ON |
| | Selector lever in "P" and "R" positions | OFF |
| INH SW1 | Selector lever in "R", "N" and "D" positions | ON |
| | Selector lever in "P" and "L" positions | OFF |
| BRAKE SW | Depressed brake pedal | ON |
| | Released brake pedal | OFF |
| FULL SW | Fully depressed accelerator pedal | ON |
| | Released accelerator pedal | OFF |
| IDLE SW | Released accelerator pedal | ON |
| | Fully depressed accelerator pedal | OFF |
| SPORT MODE SW | While pushing overdrive cancel switch | ON |
| | Other conditions | OFF |
| INDDRNG | Selector lever in "D" position | ON |
| | Selector lever in other positions | OFF |
| INDLRNG | Selector lever in "L" position | ON |
| | Selector lever in other positions | OFF |
| INDNRNG | Selector lever in "N" position | ON |
| | Selector lever in other positions | OFF |
| INDRRNG | Selector lever in "R" position | ON |
| | Selector lever in other positions | OFF |
| INDPRNG | Selector lever in "P" position | ON |
| | Selector lever in other positions | OFF |
| SMCOIL D | During driving | Changes ON ⇔ OFF. |
| SMCOIL C | | |
| SMCOIL B | | |
| SMCOIL A | | |
| LUSEL SOL OUT | Selector lever in "P" and "N" positions | ON |
| | Wait at least for 5 seconds with the selector lever in "R", "D" and "L" positions | OFF |
| STRTR RLY OUT | Selector lever in "P" and "N" positions | ON |
| | Selector lever in other positions | OFF |
| STRTR RLY MON | Selector lever in "P" and "N" positions | ON |
| | Selector lever in other positions | OFF |
| RANGE | Selector lever in "N" or "P" position. | N·P |
| | Selector lever in "R" position. | R |
| | Selector lever in "D" position. | D |
| | Selector lever in "L" position. | L |

TROUBLE DIAGNOSIS

*: Models without ABS does not indicate.

CONSULT-II SETTING PROCEDURE

Refer to [GI-38, "CONSULT-II Start Procedure"](#) .


WORK SUPPORT MODE

Display Item List


| Item name | Description |
|-------------------------|---|
| ENGINE BRAKE ADJ. | The engine brake level setting can be canceled. |
| CONFORM CVTF DETERIORTN | The CVT fluid deterioration level can be checked. |

Engine Brake Adjustment


1. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.

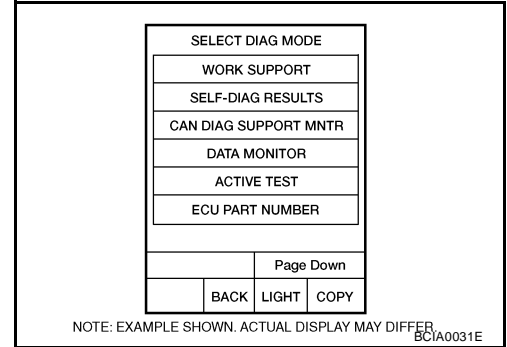

2. Touch "ENGINE BRAKE ADJ".

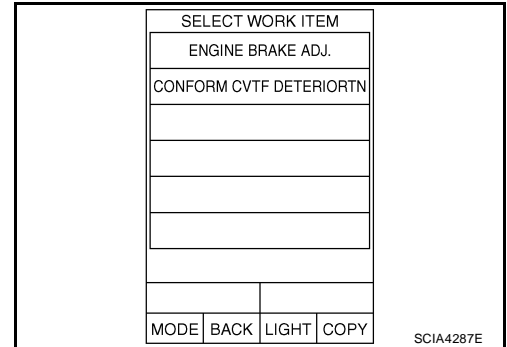

3. Touch "START".

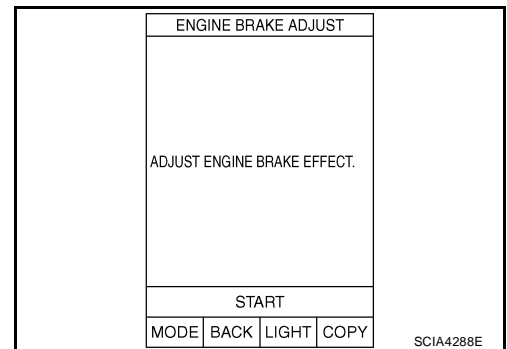

4. Set "ENGINE BRAKE LEVEL" by touching "UP" or "DOWN".


"ENGINE BRAKE LEVEL"

0: Initial set value (Engine brake level control is activated)

OFF: Engine brake level control is deactivated.

5. Turn ignition switch OFF, wait at least 5 seconds and then turn ignition switch ON.

6. Engine brake level set is completed.

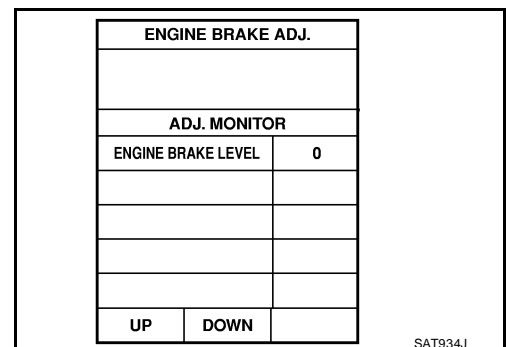


TROUBLE DIAGNOSIS

CAUTION:


Mode of “+1” “0” “-1” “-2” “OFF” can be selected by pressing the “UP” “DOWN” on CONSULT-II screen. However, do not select mode other than “0” and “OFF”. If the “+1” or “-1” or “-2” is selected, that might cause the irregular driveability.

Check CVT Fluid Deterioration Date

1. Touch “WORK SUPPORT” on “SELECT DIAG MODE” screen.

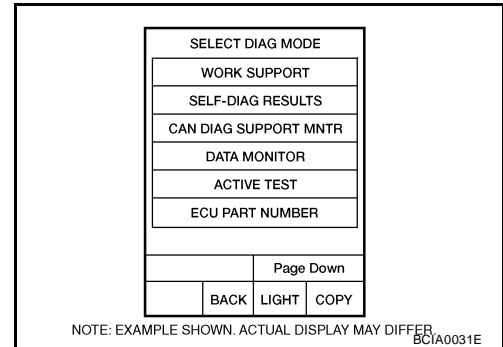

2. Touch “CONFORM CVTF DETERIORTN”.

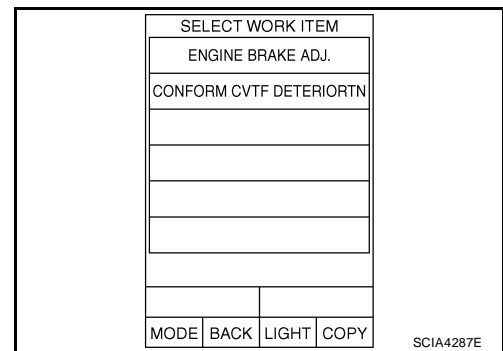

3. Check “CVTF DETERIORATION DATE”.


“CVTF DETERIORATION DATE”

More than 210000:

It is necessary to change CVT fluid.


Less than 210000:

It is not necessary to change CVT fluid.

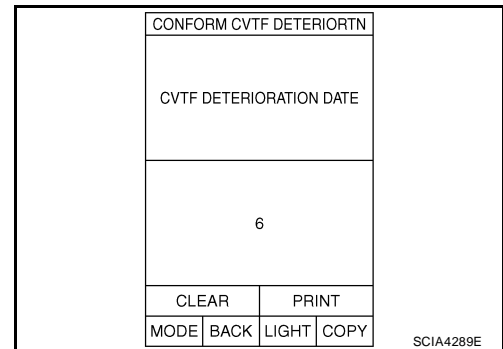

CAUTION:

Touch “CLEAR” after changing CVT fluid, and then erase “CVTF DETERIORATION DATE”.

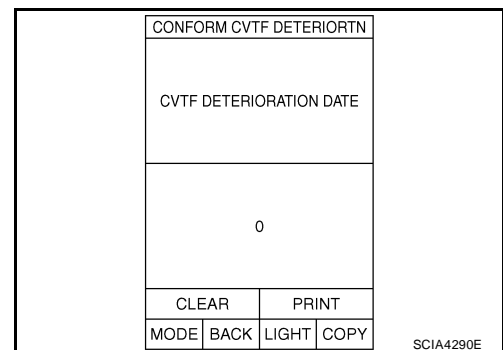


SELF-DIAGNOSTIC RESULT MODE

After performing self-diagnosis, place check marks for results on the [CVT-37, "DIAGNOSTIC WORKSHEET"](#). Reference pages are provided following the items.

TROUBLE DIAGNOSIS

Operation Procedure

1. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE".
Display shows malfunction experienced since the last erasing operation.

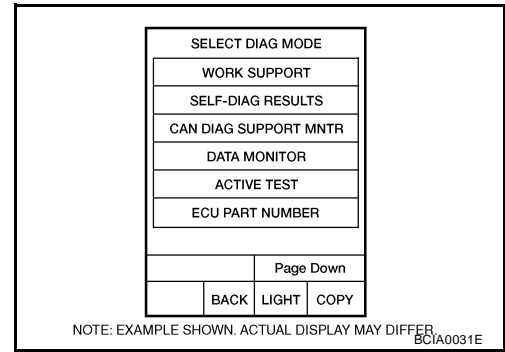

Display Items List

X: Applicable —: Not applicable

| Items (CONSULT-II screen terms) | Malfunction is detected when... | TCM self-diagnosis | OBD-II (DTC) | Reference page |
|---------------------------------|--|--------------------------------|---|-------------------------|
| | | "TRANSMISSION" with CONSULT-II | MIL indicator lamp*1, "ENGINE" with CONSULT-II or GST | |
| CAN COMM CIR-CUIT | When TCM is not transmitting or receiving CAN communication signal for 2 seconds or more | U1000 | U1000 | CVT-68 |
| CONTROL UNIT(CAN) | When detecting error during the initial diagnosis of CAN controller of TCM | U1010 | U1010 | CVT-71 |
| STARTER RELAY/CIRC | If this signal is ON other than in "P" or "N" position, this is judged to be a malfunction (And if it is OFF in "P" or "N" position, this is judged to be a malfunction too) | P0615 | — | CVT-72 |
| BRAKE SW/CIRC | When the brake switch does not switch to ON or OFF | P0703 | — | CVT-76 |
| PNP SW/CIRC | <ul style="list-style-type: none"> ● PNP switch 1-4 signals input with impossible pattern ● PNP switch 3 monitor terminal open or short circuit | P0705 | P0705 | CVT-78 |
| ATF TEMP SEN/CIRC | During running, the CVT fluid temperature sensor signal voltage is excessively high or low | P0710 | P0710 | CVT-85 |
| INPUT SPD SEN/CIRC | <ul style="list-style-type: none"> ● Input speed sensor (primary speed sensor) signal is not input due to an open circuit ● An unexpected signal is input when vehicle is being driven | P0715 | P0715 | CVT-90 |
| VEH SPD SEN/CIR AT | <ul style="list-style-type: none"> ● Signal from vehicle speed sensor CVT [Output speed sensor (Secondary speed sensor)] not input due to open or short circuit ● Unexpected signal input during running | P0720 | P0720 | CVT-95 |
| ENGINE SPEED SIG | <ul style="list-style-type: none"> ● TCM does not receive the CAN communication signal from the ECM ● Engine speed is too low while driving | P0725 | — | CVT-101 |
| BELT DAMG | Unexpected gear ratio detected | P0730 | — | CVT-103 |
| TCC SOLENOID/CIRC | Normal voltage not applied to solenoid due to open or short circuit | P0740 | P0740 | CVT-105 |
| A/T TCC S/V FNCTN | <ul style="list-style-type: none"> ● CVT cannot perform lock-up even if electrical circuit is good ● TCM detects as irregular by comparing difference value with slip rotation ● There is big difference engine speed and primary speed when TCM lock-up signal is on | P0744 | P0744 | CVT-110 |

TROUBLE DIAGNOSIS

| Items (CONSULT-II screen terms) | Malfunction is detected when... | TCM self-diagnosis | OBD-II (DTC) | Reference page |
|---------------------------------|--|--------------------------------|---|-------------------------|
| | | "TRANSMISSION" with CONSULT-II | MIL indicator lamp*1, "ENGINE" with CONSULT-II or GST | |
| L/PRESS SOL/CIRC | <ul style="list-style-type: none"> Normal voltage not applied to solenoid due to open or short circuit TCM detects as irregular by comparing target value with monitor value | P0745 | P0745 | CVT-113 |
| PRS CNT SOL/A FCTN | Unexpected gear ratio was detected in the LOW side due to excessively low line pressure | P0746 | P0746 | CVT-118 |
| PRS CNT SOL/B FCTN | Secondary pressure is too high or too low compared with the commanded value while driving | P0776 | P0776 | CVT-121 |
| PRS CNT SOL/B CIRC | <ul style="list-style-type: none"> Normal voltage not applied to solenoid due to cut line, short, or the like TCM detects as irregular by comparing target value with monitor value | P0778 | P0778 | CVT-124 |
| TR PRS SENS/A CIRC | Signal voltage of the transmission fluid pressure sensor A (secondary pressure sensor) is too high or too low while driving | P0840 | P0840 | CVT-129 |
| PRESS SEN/FNCTN | Correlation between the values of the transmission fluid pressure sensor A (secondary pressure sensor) and the transmission fluid pressure sensor B (primary pressure sensor) is out of specification | P0841 | — | CVT-134 |
| TR PRS SENS/B CIRC | Signal voltage of the transmission fluid pressure sensor B (primary pressure sensor) is too high or too low while driving | P0845 | P0845 | CVT-137 |
| SEC/PRESS DOWN | Secondary fluid pressure is too low compared with the commanded value while driving | P0868 | — | CVT-142 |
| TCM-POWER SUPPLY | <ul style="list-style-type: none"> When the power supply to the TCM is cut OFF, for example because the battery is removed, and the self-diagnosis memory function stops This is not a malfunction message (Whenever shutting OFF a power supply to the TCM, this message appears on the screen) | P1701 | — | CVT-145 |
| TP SEN/CIRC A/T | TCM does not receive the proper accelerator pedal position signals (input by CAN communication) from ECM | P1705 | — | CVT-150 |
| ESTM VEH SPD SIG*2 | <ul style="list-style-type: none"> CAN communication with the ABS actuator and the electric unit (control unit) is malfunctioning There is a great difference between the vehicle speed signal from the ABS actuator and the electric unit (control unit), and the vehicle speed sensor signal | P1722 | — | CVT-152 |
| CVT SPD SEN/FNCTN | <p>A rotation sensor error is detected because the gear does not change in accordance with the position of the stepping motor</p> <p>CAUTION: One of the "P0720 VEH SPD SEN/CIR AT", the "P0715 INPUT SPD SEN/CIRC" or the "P0725 ENGINE SPEED SIG" is displayed with the DTC at the same time</p> | P1723 | — | CVT-154 |
| ELEC TH CONTROL | The electronically controlled throttle for ECM is malfunctioning | P1726 | — | CVT-156 |
| LU-SLCT SOL/CIRC | <ul style="list-style-type: none"> Normal voltage not applied to solenoid due to cut line, short, or the like TCM detects as irregular by comparing target value with monitor value | P1740 | P1740 | CVT-158 |

TROUBLE DIAGNOSIS


| Items (CONSULT-II screen terms) | Malfunction is detected when... | TCM self-diagnosis | OBD-II (DTC) | Reference page |
|---|--|--------------------------------|---|-------------------------|
| | | "TRANSMISSION" with CONSULT-II | MIL indicator lamp*1, "ENGINE" with CONSULT-II or GST | |
| L/PRESS CONTROL | TCM detects the unexpected line pressure | P1745 | — | CVT-163 |
| STEP MOTR CIRC | Each coil of the step motor is not energized properly due to an open or a short | P1777 | P1777 | CVT-164 |
| STEP MOTR/FNC | There is a great difference between the number of steps for the stepping motor and for the actual gear ratio | P1778 | P1778 | CVT-168 |
| NO DTC IS DETECTED: FURTHER TESTING MAY BE REQUIRED | No NG item has been detected | X | X | — |

*1: Refer to [CVT-33, "Malfunction Indicator Lamp \(MIL\)"](#).


*2: Models without ABS does not indicate.

How to Erase Self-diagnostic Results

1. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE".

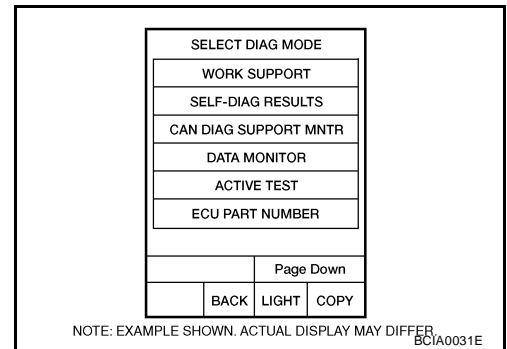

2. Touch "ERASE". (The self-diagnostic results will be erased.)

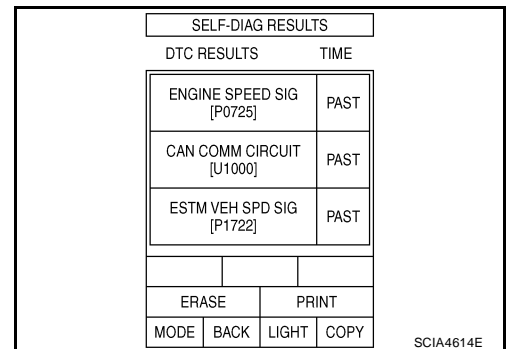

TROUBLE DIAGNOSIS


DATA MONITOR MODE

Operation Procedure

1. Touch "DATA MONITOR" on "SELECT DIAG MODE".

NOTE:

When malfunction is detected, CONSULT-II performs "REAL-TIME DIAGNOSIS". Also, any malfunction detected while in this mode will be displayed at real time.

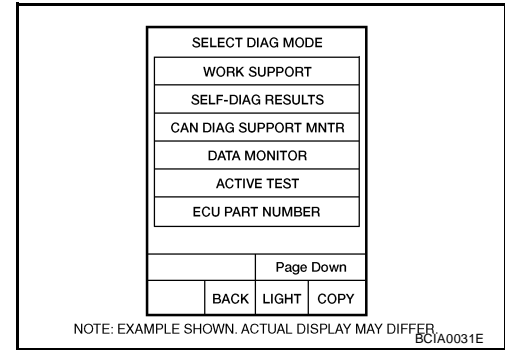

Display Items List

X: Standard, —: Not applicable, ▼: Option

| Monitored item (Unit) | Monitor item selection | | | Remarks |
|------------------------|------------------------|--------------|---------------------|---|
| | ECU INPUT SIGNALS | MAIN SIGNALS | SELECTION FROM MENU | |
| VSP SENSOR (km/h) | X | — | ▼ | Output speed sensor (secondary speed sensor). |
| ESTM VSP SIG (km/h) | X | — | ▼ | Models without ABS does not indicate. |
| PRI SPEED SEN (rpm) | X | — | ▼ | |
| ENG SPEED SIG (rpm) | X | — | ▼ | |
| SEC HYDR SEN (V) | X | — | ▼ | |
| PRI HYDR SEN (V) | X | — | ▼ | |
| ATF TEMP SEN (V) | X | — | ▼ | CVT fluid temperature sensor |
| VIGN SEN (V) | X | — | ▼ | |
| VEHICLE SPEED (km/h) | — | X | ▼ | Vehicle speed recognized by the TCM. |
| PRI SPEED (rpm) | — | X | ▼ | Primary pulley speed. |
| SEC SPEED (rpm) | — | — | ▼ | Secondary pulley speed. |
| ENG SPEED (rpm) | — | X | ▼ | |
| SLIP REV (rpm) | — | X | ▼ | Difference between engine speed and primary pulley speed |
| GEAR RATIO | — | X | ▼ | |
| G SPEED (G) | — | — | ▼ | |
| ACC PEDAL OPEN (0.0/8) | X | X | ▼ | Degree of opening for accelerator recognized by the TCM For fail-safe operation, the specific value used for control is displayed. |
| TRQ RTO | — | — | ▼ | |
| SEC PRESS (MPa) | — | X | ▼ | |
| PRI PRESS (MPa) | — | X | ▼ | |
| ATF TEMP | — | X | ▼ | |
| DSR REV (rpm) | — | — | ▼ | |
| DGEAR RATIO | — | — | ▼ | |

TROUBLE DIAGNOSIS

| Monitored item (Unit) | Monitor item selection | | | Remarks | |
|------------------------|------------------------|--------------|---------------------|---|-----|
| | ECU INPUT SIGNALS | MAIN SIGNALS | SELECTION FROM MENU | | |
| DSTM STEP (step) | — | — | ▼ | | A |
| STM STEP (step) | — | X | ▼ | | B |
| LU PRS (MPa) | — | — | ▼ | | CVT |
| LINE PRS (MPa) | — | — | ▼ | | |
| TGT SEC PRESS (MPa) | — | — | ▼ | | D |
| ISOLT1 (A) | — | X | ▼ | Torque converter clutch solenoid valve output current | E |
| ISOLT2 (A) | — | X | ▼ | Pressure control solenoid valve A (line pressure solenoid valve) output current | |
| ISOLT3 (A) | — | X | ▼ | Pressure control solenoid valve B (secondary pressure solenoid valve) output current | F |
| SOLMON1 (A) | X | X | ▼ | Torque converter clutch solenoid valve monitor current | G |
| SOLMON2 (A) | X | X | ▼ | Pressure control solenoid valve A (line pressure solenoid valve) monitor current | |
| SOLMON3 (A) | X | X | ▼ | Pressure control solenoid valve B (secondary pressure solenoid valve) monitor current | H |
| INH SW3M (ON/OFF) | X | — | ▼ | PNP switch 3 ON-OFF status monitor | |
| INH SW4 (ON/OFF) | X | — | ▼ | PNP switch 4 ON-OFF status | I |
| INH SW3 (ON/OFF) | X | — | ▼ | PNP switch 3 ON-OFF status | |
| INH SW2 (ON/OFF) | X | — | ▼ | PNP switch 2 ON-OFF status | J |
| INH SW1 (ON/OFF) | X | — | ▼ | PNP switch 1 ON-OFF status | |
| BRAKE SW (ON/OFF) | X | X | ▼ | Stop lamp switch (Signal input with CAN communication) | K |
| FULL SW (ON/OFF) | X | X | ▼ | Signal input with CAN communications | |
| IDLE SW (ON/OFF) | X | X | ▼ | | L |
| SPORT MODE SW (ON/OFF) | X | X | ▼ | Overdrive control switch (Signal input with CAN communication) | |
| STRDWNSW (ON/OFF) | X | — | ▼ | Not mounted but displayed. | M |
| STRUPSW (ON/OFF) | X | — | ▼ | | |
| DOWNLVR (ON/OFF) | X | — | ▼ | | |
| UPLVR (ON/OFF) | X | — | ▼ | | |
| NONMMODE (ON/OFF) | X | — | ▼ | | |
| MMODE (ON/OFF) | X | — | ▼ | | |
| INDLRNG (ON/OFF) | — | — | ▼ | "L" position indicator output | |
| INDDRNG (ON/OFF) | — | — | ▼ | "D" position indicator output | |
| INDNRNG (ON/OFF) | — | — | ▼ | "N" position indicator output | |
| INDRRNG (ON/OFF) | — | — | ▼ | "R" position indicator output | |
| INDPRNG (ON/OFF) | — | — | ▼ | "P" position indicator output | |


TROUBLE DIAGNOSIS

| Monitored item (Unit) | Monitor item selection | | | Remarks |
|-------------------------|------------------------|--------------|---------------------|--|
| | ECU INPUT SIGNALS | MAIN SIGNALS | SELECTION FROM MENU | |
| CVT LAMP (ON/OFF) | — | — | ▼ | |
| SPORT MODE IND (ON/OFF) | — | — | ▼ | |
| MMODE IND (ON/OFF) | — | — | ▼ | Not mounted but displayed. |
| SMCOIL D (ON/OFF) | — | — | ▼ | Step motor coil "D" energizing status |
| SMCOIL C (ON/OFF) | — | — | ▼ | Step motor coil "C" energizing status |
| SMCOIL B (ON/OFF) | — | — | ▼ | Step motor coil "B" energizing status |
| SMCOIL A (ON/OFF) | — | — | ▼ | Step motor coil "A" energizing status |
| LUSEL SOL OUT (ON/OFF) | — | — | ▼ | |
| REV LAMP (ON/OFF) | — | X | ▼ | |
| STRTR RLY OUT (ON/OFF) | — | — | ▼ | Starter relay |
| LUSEL SOL MON (ON/OFF) | — | — | ▼ | |
| STRTR RLY MON (ON/OFF) | — | — | ▼ | Starter relay |
| VDC ON (ON/OFF) | X | — | ▼ | Not mounted but displayed. |
| TCS ON (ON/OFF) | X | — | ▼ | |
| ABS ON (ON/OFF) | X | — | ▼ | |
| ACC ON (ON/OFF) | X | — | ▼ | Not mounted but displayed. |
| RANGE | — | X | ▼ | Indicates position is recognized by TCM. Indicates a specific value required for control when fail-safe function is activated. |
| M GEAR POS | — | X | ▼ | |
| Voltage (V) | — | — | ▼ | Displays the value measured by the voltage probe. |
| Frequency (Hz) | — | — | ▼ | The value measured by the pulse probe is displayed. |
| DUTY-HI (high) (%) | — | — | ▼ | |
| DUTY-LOW (low) (%) | — | — | ▼ | |
| PLS WIDTH-HI (ms) | — | — | ▼ | |
| PLS WIDTH-LOW (ms) | — | — | ▼ | |

CAN DIAGNOSTIC SUPPORT MONITOR MODE

Operation Procedure

1. Touch "CAN DAIG SUPPORT MNTR" on "SELECT DIAG MODE" screen. Refer to [LAN-44, "CAN Diagnostic Support Monitor"](#).

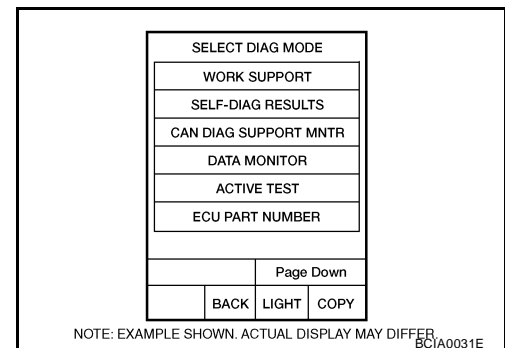

TROUBLE DIAGNOSIS

Diagnostic Procedure without CONSULT-II

UCS005YJ



OBD-II SELF-DIAGNOSTIC PROCEDURE (WITH GST)

Refer to [EC-126. "Generic Scan Tool \(GST\) Function"](#) .

A

B

CVT

D

E

F

G

H

I

J

K

L

M

DTC U1000 CAN COMMUNICATION LINE

DTC U1000 CAN COMMUNICATION LINE

PFP:23710

Description

UCS005YK

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

On Board Diagnosis Logic

UCS005YL

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "U1000 CAN COMM CIRCUIT" with CONSULT-II is detected when TCM cannot communicate to other control units.

Possible Cause

UCS005YM

Harness or connectors
(CAN communication line is open or shorted.)

DTC Confirmation Procedure

UCS005YN


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and wait for at least 6 seconds.
4. If DTC is detected, go to [CVT-70, "Diagnostic Procedure"](#).

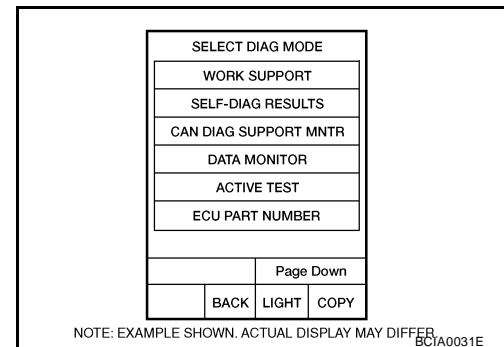

④ WITH GST




Follow the procedure "WITH CONSULT-II".



DTC U1000 CAN COMMUNICATION LINE

Wiring Diagram — CVT — CAN

UCS005Y0

CVT-CAN-01

-  : DETECTABLE LINE FOR DTC
-  : NON-DETECTABLE LINE FOR DTC
-  : DATA LINE

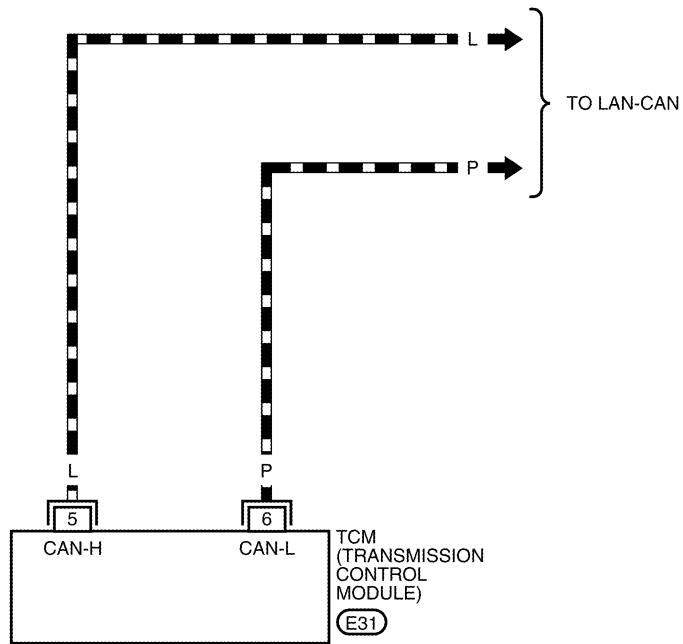

BCWA0668E

DTC U1000 CAN COMMUNICATION LINE

TCM terminal data are reference values, measured between each terminal and ground.

| Terminal | Wire color | Item | Condition | Data (Approx.) |
|----------|------------|-------|-----------|----------------|
| 5 | L | CAN-H | — | — |
| 6 | P | CAN-L | — | — |

Diagnostic Procedure

UCS005YP

1. CHECK CAN COMMUNICATION CIRCUIT

④ With CONSULT-II

1. Turn ignition switch ON and start engine.
2. Select "SELF-DIAG RESULTS" mode for "TRANSMISSION" with CONSULT-II.

Is any malfunction of the "U1000 CAN COMM CIRCUIT" indicated?

- YES >> Print out CONSULT-II screen, go to LAN section. Refer to [LAN-47, "CAN System Specification Chart"](#) .
- NO >> **INSPECTION END**

| | | | |
|-----------------------------|------|-------|------|
| SELF-DIAG RESULTS | | | |
| DTC RESULTS | | TIME | |
| CAN COMM CIRCUIT [U1000] | PAST | | |
| | | | |
| ERASE | | PRINT | |
| MODE | BACK | LIGHT | COPY |

SCIA5982E

DTC U1010 TRANSMISSION CONTROL MODULE (CAN)

DTC U1010 TRANSMISSION CONTROL MODULE (CAN)

PFP:31036

Description

UCS006KU

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

On Board Diagnosis Logic

UCS006KV

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "U1010 CONTROL UNIT(CAN)" with CONSULT-II is detected when TCM cannot communicate to other control units.

Possible Cause

UCS006KW

Harness or connectors
(CAN communication line is open or shorted.)

DTC Confirmation Procedure

UCS006KX


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and wait for at least 6 seconds.
4. If DTC is detected, go to [CVT-71, "Diagnostic Procedure"](#).

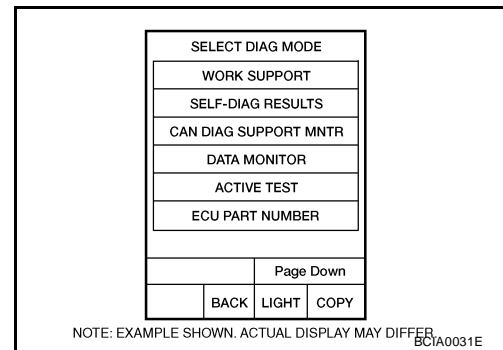

WITH GST

Follow the procedure "WITH CONSULT-II".

Diagnostic Procedure

UCS006KY

1. CHECK DTC

With CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "SELF-DIAG RESULTS" mode for "TRANSMISSION" with CONSULT-II.
3. Touch "ERASE".
4. Turn ignition switch OFF and wait for at least 10 seconds.
5. Perform "DTC confirmation procedure". Refer to [CVT-71, "DTC Confirmation Procedure"](#).

Is any malfunction of the "U1010 CONTROL UNIT(CAN)" indicated?

- YES >> Replace the TCM. Refer to [CVT-190, "Removal and Installation"](#).
NO >> **INSPECTION END**

DTC P0615 START SIGNAL CIRCUIT

DTC P0615 START SIGNAL CIRCUIT

PF2:25230

Description

UCS005YQ

- TCM controls starter relay in IPDM E/R.
- TCM switches starter relay ON at “P” or “N” position and allows to crank engine.
- Then it prohibits cranking other than at “P” or “N” position.

CONSULT-II Reference Value

UCS005YR

| Item name | Condition | Display value |
|---------------|---|---------------|
| STRTR RLY OUT | Selector lever in “P” and “N” positions | ON |
| | Selector lever in other positions | OFF |
| STRTR RLY MON | Selector lever in “P” and “N” positions | ON |
| | Selector lever in other positions | OFF |

On Board Diagnosis Logic

UCS005YS

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code “P0615 STARTER RELAY/CIRC” with CONSULT-II is detected when starter relay switched ON other than at “P” or “N” position. (or when switched OFF at “P” or “N” position).

Possible Cause

UCS005YT

- Harness or connectors
(Starter relay and TCM circuit is open or shorted.)
- Starter relay

DTC Confirmation Procedure

UCS005YU

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch “ERASE” on “SELF-DIAG RESULTS” and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select “DATA MONITOR” mode for “TRANSMISSION” with CONSULT-II.
3. Start engine.
4. Drive vehicle for at least 2 consecutive seconds.
5. If DTC is detected, go to [CVT-74, "Diagnostic Procedure"](#) .

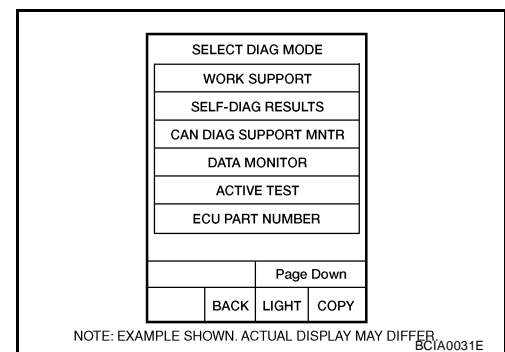



DTC P0615 START SIGNAL CIRCUIT

Wiring Diagram — CVT — STSIG

UCS005YV

CVT-STSIG-01


: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

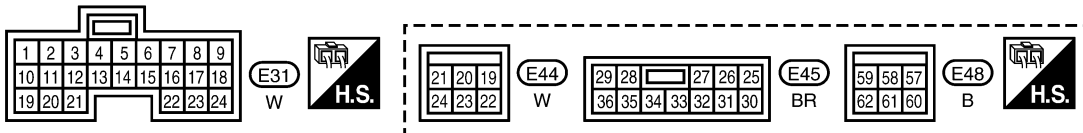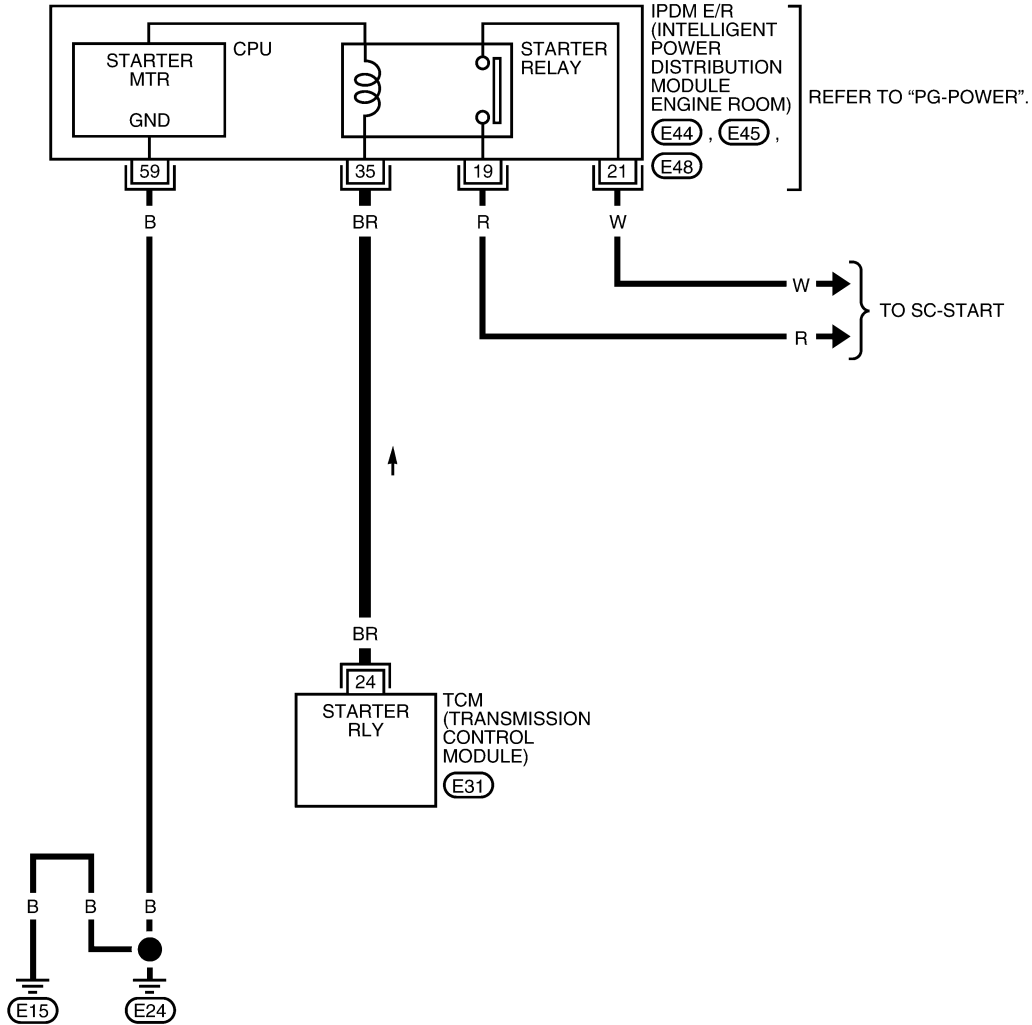

BCWA0669E

DTC P0615 START SIGNAL CIRCUIT

TCM terminal data are reference values, measured between each terminal and ground.

| Terminal | Wire color | Item | Condition | Data (Approx.) |
|----------|------------|---------------|---|-----------------|
| 24 | BR | Starter relay |  Selector lever in "N" and "P" positions | Battery voltage |
| | | | Selector lever in other positions | 0 V |


Diagnostic Procedure

UCS005YW

1. CHECK STARTER RELAY SIGNAL

④ With CONSULT-II


- Turn ignition switch ON. (Do not start engine.)
- Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II and check monitor "STRTR RLY OUT", "STRTR RLY MON"(PNP relay) ON/OFF.

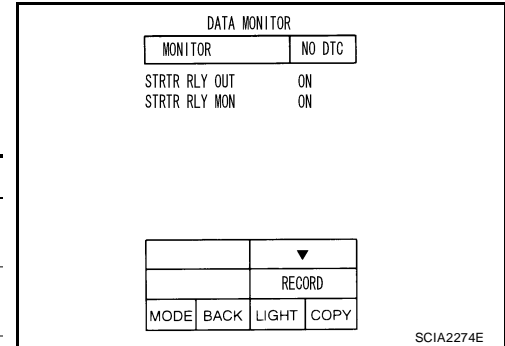


| Item name | Condition | Display value |
|---------------|---|---------------|
| STRTR RLY OUT | Selector lever in "P" and "N" positions | ON |
| | Selector lever in other positions | OFF |
| STRTR RLY MON | Selector lever in "P" and "N" positions | ON |
| | Selector lever in other positions | OFF |

⊗ Without CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Check voltage between the TCM connector terminal and ground.

| Terminal | Item | Condition | Data (Approx.) |
|----------|---------------|---|-----------------|
| 24 | Starter relay |  Selector lever in "N" and "P" positions | Battery voltage |
| | | Selector lever in other positions | 0 V |

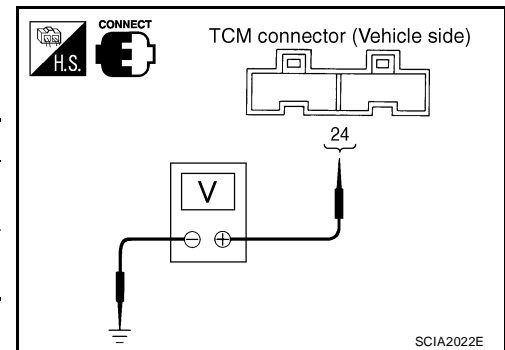

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. DETECT MALFUNCTIONING ITEM

Check the following:

- Starter relay. Refer to [PG-73, "STANDARDIZED RELAY"](#) .
- Open or short-circuit in the harness between TCM and the starter relay. Refer to [CVT-73, "Wiring Diagram — CVT — STSIG"](#) .
- Ground circuit for the starter relay. Refer to [SC-12, "Wiring Diagram — START —"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

DTC P0615 START SIGNAL CIRCUIT

3. CHECK DTC

Perform [CVT-72, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 4.

4. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

A

B

CVT

D

E

F

G

H

I

J

K

L

M

DTC P0703 STOP LAMP SWITCH CIRCUIT

DTC P0703 STOP LAMP SWITCH CIRCUIT

PF0:25320

Description

UCS005YX

ON, OFF status of the stop lamp switch is sent via the CAN communication from the combination meter to TCM using the signal.

CONSULT-II Reference Value

UCS005YY

| Item name | Condition | Display value |
|-----------|-----------------------|---------------|
| BRAKE SW | Depressed brake pedal | ON |
| | Released brake pedal | OFF |

On Board Diagnosis Logic

UCS005YZ

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code “P0703 BRAKE SW/CIRC” with CONSULT-II is detected when the stop lamp switch does not switch to ON and OFF.
- The stop lamp switch does not switch to ON, OFF.

Possible Cause

UCS005Z0

- Harness or connectors
(Stop lamp switch, and combination meter circuit are open or shorted.)
(CAN communication line is open or shorted.)
- Stop lamp switch

DTC Confirmation Procedure

UCS005Z1

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch “ERASE” on “SELF-DIAG RESULTS” and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select “DATA MONITOR” mode for “TRANSMISSION” with CONSULT-II.
3. Start engine.
4. Start vehicle for at least 3 consecutive seconds.
5. If DTC is detected, go to [CVT-77, "Diagnostic Procedure"](#) .

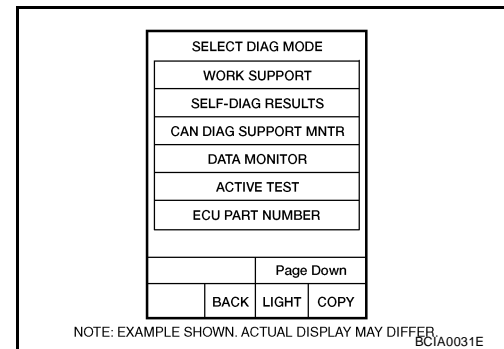

DTC P0703 STOP LAMP SWITCH CIRCUIT

UCS005Z2

Diagnostic Procedure

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis check. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction of the "U1000 CAN COMM CIRCUIT" indicated?

- YES >> Check CAN communication line. Refer to [CVT-68, "DTC U1000 CAN COMMUNICATION LINE"](#) .
 NO >> GO TO 2.

2. CHECK STOP LAMP SWITCH CIRCUIT


With CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Read out ON/OFF switching action of the "BRAKE SW".

| Item name | Condition | Display value |
|-----------|-----------------------|---------------|
| BRAKE SW | Depressed brake pedal | ON |
| | Released brake pedal | OFF |

OK or NG

- OK >> **INSPECTION END**
 NG >> GO TO 3.

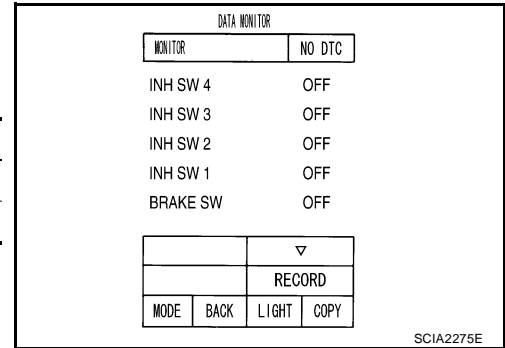

3. CHECK STOP LAMP SWITCH


Check continuity between stop lamp switch harness connector E13 terminals 1 and 2. Refer to [CVT-176, "Wiring Diagram — CVT — NONDTC"](#) .

| Condition | Continuity |
|-------------------------------|------------|
| When brake pedal is depressed | Yes |
| When brake pedal is released | No |

Check stop lamp switch after adjusting brake pedal — refer to [BR-6, "BRAKE PEDAL"](#) .

OK or NG

- OK >> Check the following. If NG, repair or replace damaged parts.
- Harness for short or open between battery and stop lamp switch.
 - Harness for short or open between stop lamp switch and combination meter.
- NG >> Repair or replace the stop lamp switch.

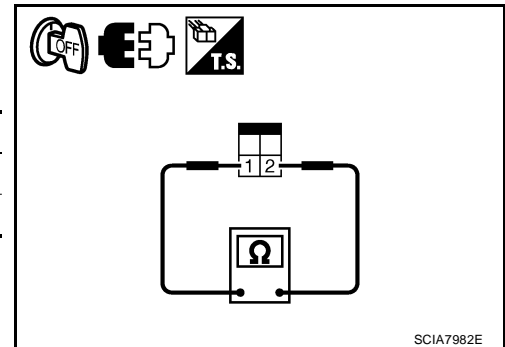

DTC P0705 PARK/NEUTRAL POSITION SWITCH

DTC P0705 PARK/NEUTRAL POSITION SWITCH

PF3:32006

Description

UCS005Z3

- The PNP switch is included in the control valve assembly.
- The PNP switch includes 4 transmission position switches.
- TCM judges the selector lever position by the PNP switch signal.

| Shift position | PNP switch 1 | PNP switch 2 | PNP switch 3 | PNP switch 4 | PNP switch 3 (monitor) |
|----------------|--------------|--------------|--------------|--------------|------------------------|
| P | OFF | OFF | OFF | OFF | OFF |
| R | ON | OFF | OFF | ON | OFF |
| N | ON | ON | OFF | OFF | OFF |
| D | ON | ON | ON | ON | ON |
| L | OFF | ON | ON | OFF | ON |

CONSULT-II Reference Value

UCS005Z4

| Item name | Condition | Display value |
|-----------|--|---------------|
| INH SW3M | Selector lever in "D" and "L" positions | ON |
| | Selector lever in "P", "R" and "N" positions | OFF |
| INH SW4 | Selector lever in "R" and "D" positions | ON |
| | Selector lever in "P", "N" and "L" positions | OFF |
| INH SW3 | Selector lever in "D" and "L" positions | ON |
| | Selector lever in "P", "R" and "N" positions | OFF |
| INH SW2 | Selector lever in "N", "D" and "L" positions | ON |
| | Selector lever in "P" and "R" positions | OFF |
| INH SW1 | Selector lever in "R", "N" and "D" positions | ON |
| | Selector lever in "P" and "L" positions | OFF |

On Board Diagnosis Logic

UCS005Z5

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0705 PNP SW/CIRC" with CONSULT-II is detected under the following conditions.
 - When TCM does not receive the correct voltage signal from the PNP switches 1, 2, 3 and 4 based on the gear position.
 - When the signal from monitor terminal of PNP switch 3 is different from PNP switch 3.

Possible Cause

UCS005Z6

- Harness or connectors (PNP switches 1, 2, 3, 4 and TCM circuit is open or shorted.)
- PNP switches 1, 2, 3, 4
- PNP switch 3 monitor terminal is open or shorted

DTC Confirmation Procedure

UCS005Z7

CAUTION:

Always drive vehicle at a safe speed.

NOTE:


If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

DTC P0705 PARK/NEUTRAL POSITION SWITCH

Ⓟ WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 2 consecutive seconds.
VEHICLE SPEED: More than 10 km/h (6 MPH)
ENG SPEED: More than 450 rpm
ACC PEDAL OPEN: More than 1.0/8
5. If DTC is detected, go to [CVT-82, "Diagnostic Procedure"](#) .

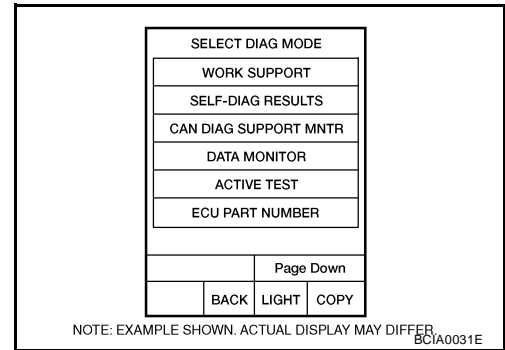

Ⓟ WITH GST

Follow the procedure "WITH CONSULT-II".

A
B
CVT
D
E
F
G
H
I
J
K
L
M



DTC P0705 PARK/NEUTRAL POSITION SWITCH

Wiring Diagram — CVT — PNP/SW

UCS005Z8

CVT-PNP/SW-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

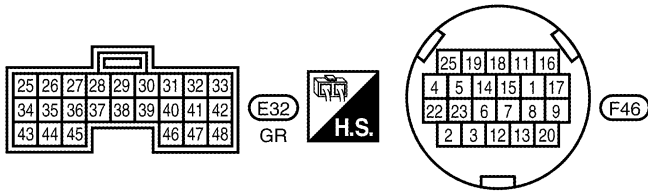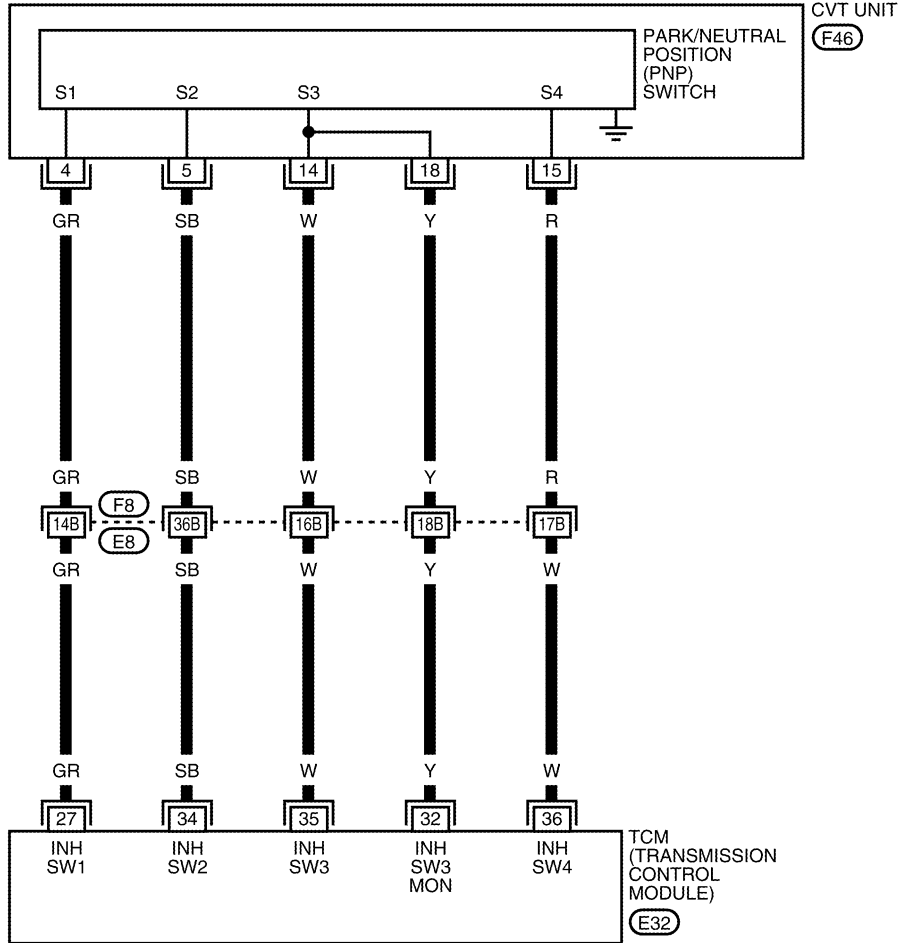

REFER TO THE FOLLOWING.
 (F8) - SUPER MULTIPLE JUNCTION (SMJ)

BCWA0670E

DTC P0705 PARK/NEUTRAL POSITION SWITCH

TCM terminal data are reference values, measured between each terminal and ground.

| Terminal | Wire color | Item | Condition | Data (Approx.) |
|----------|------------|------------------------|---|--------------------------|
| 27 | GR | PNP switch 1 | Selector lever in "R", "N" and "D" positions. | 0 V |
| | | | Selector lever in "P" and "L" positions. | Battery voltage |
| 32 | Y | PNP switch 3 (monitor) | Selector lever in "D" and "L" positions. | 0 V |
| | | | Selector lever in "P", "R" and "N" positions. | 8.0 V - Battery voltage |
| 34 | SB | PNP switch 2 | Selector lever in "N", "D" and "L" positions. | 0 V |
| | | | Selector lever in "P" and "R" positions. | 10.0 V - Battery voltage |
| 35 | W | PNP switch 3 | Selector lever in "D" and "L" positions. | 0 V |
| | | | Selector lever in "P", "R" and "N" positions. | 8.0 V - Battery voltage |
| 36 | W | PNP switch 4 | Selector lever in "R" and "D" positions. | 0 V |
| | | | Selector lever in "P", "N" and "L" positions. | 10.0 V - Battery voltage |



A
B
CVT
D
E
F
G
H
I
J
K
L
M

DTC P0705 PARK/NEUTRAL POSITION SWITCH

UCS005Z9

Diagnostic Procedure

1. CHECK PNP SW SIGNALS

With CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Change selector lever to "P", "R", "N", "D" and "L" positions to check the value of "INH SW1" "INH SW2" "INH SW3" "INH SW4" and "INH SW3M".

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO. DTC |
| INH SW 3M | OFF |
| INH SW 4 | OFF |
| INH SW 3 | OFF |
| INH SW 2 | OFF |
| INH SW 1 | OFF |


| | |
|--------|------|
| Δ | ▽ |
| RECORD | |
| MODE | BACK |
| LIGHT | COPY |

SCIA2276E

| Shift position | "INH SW1" | "INH SW2" | "INH SW3" | "INH SW4" | "INH SW3M" |
|----------------|-----------|-----------|-----------|-----------|------------|
| P | OFF | OFF | OFF | OFF | OFF |
| R | ON | OFF | OFF | ON | OFF |
| N | ON | ON | OFF | OFF | OFF |
| D | ON | ON | ON | ON | ON |
| L | OFF | ON | ON | OFF | ON |

Without CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Change selector lever to "P", "R", "N", "D" and "L" positions to check voltage between the TCM connector terminals and ground.

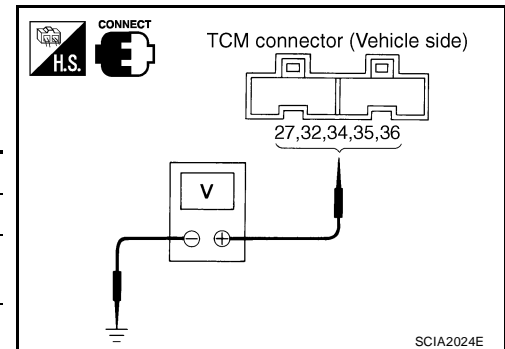

| Shift position | Connector | | E32 | | |
|----------------|-----------------|--------------------------|-------------------------|--------------------------|-------------------------|
| | Terminal | | | | |
| | 27 - Ground | 34 - Ground | 35 - Ground | 36 - Ground | 32 - Ground |
| P | Battery voltage | 10.0 V - Battery voltage | 8.0 V - Battery voltage | 10.0 V - Battery voltage | 8.0 V - Battery voltage |
| R | 0 V | 10.0 V - Battery voltage | 8.0 V - Battery voltage | 0 V | 8.0 V - Battery voltage |
| N | 0 V | 0 V | 8.0 V - Battery voltage | 10.0 V - Battery voltage | 8.0 V - Battery voltage |
| D | 0 V | 0 V | 0 V | 0 V | 0 V |
| L | Battery voltage | 0 V | 0 V | 10.0 V - Battery voltage | 0 V |

OK or NG


- OK >> GO TO 5.
 NG >> GO TO 2.

DTC P0705 PARK/NEUTRAL POSITION SWITCH

2. CHECK PNP SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM connector terminals and ground.

| Connector | Terminal | Condition | Continuity |
|-----------|-------------|--|------------|
| E32 | 27 - ground | Select lever in "P" and "L" positions | No |
| | | Select lever in other positions | Yes |
| | 34 - ground | Select lever in "P" and "R" positions | No |
| | | Select lever in other positions | Yes |
| | 35 - ground | Select lever in "P", "R" and "N" positions | No |
| | | Select lever in other positions | Yes |
| | 36 - ground | Select lever in "P", "N" and "L" positions | No |
| | | Select lever in other positions | Yes |
| | 32 - ground | Select lever in "P", "R" and "N" positions | No |
| | | Select lever in other positions | Yes |

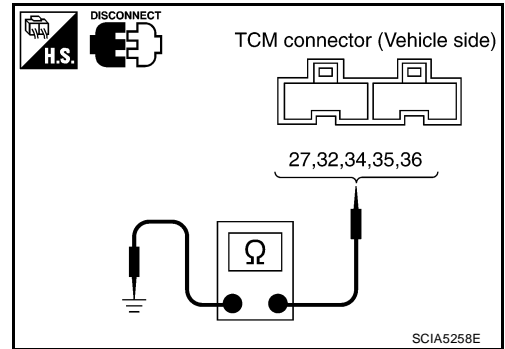

4. If OK, check harness for short-circuit to ground or power supply.


OK or NG

- OK >> GO TO 5.
 NG >> GO TO 3.

3. CHECK HARNESS BETWEEN TCM AND PNP SWITCH

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminals and CVT unit harness connector terminals.

| Item | Connector | Terminal | Continuity |
|----------------------------|-----------|----------|------------|
| TCM | E32 | 27 | Yes |
| CVT unit harness connector | F46 | 4 | |
| TCM | E32 | 34 | Yes |
| CVT unit harness connector | F46 | 5 | |
| TCM | E32 | 35 | Yes |
| CVT unit harness connector | F46 | 14 | |
| TCM | E32 | 32 | Yes |
| CVT unit harness connector | F46 | 18 | |
| TCM | E32 | 36 | Yes |
| CVT unit harness connector | F46 | 15 | |

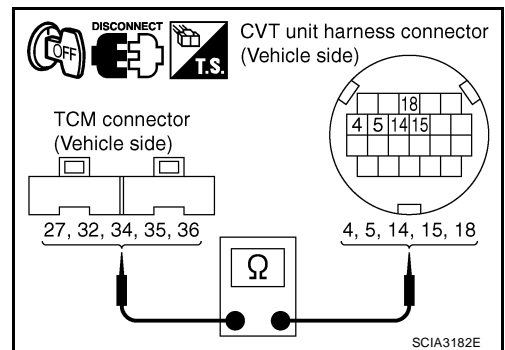

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

- OK >> GO TO 4.
 NG >> Repair or replace damaged parts.

DTC P0705 PARK/NEUTRAL POSITION SWITCH

4. DETECT MALFUNCTIONING ITEM

Check PNP switch. Refer to [CVT-84, "Component Inspection"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. CHECK DTC

Perform [CVT-78, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 6.

6. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG


- OK >> **INSPECTION END**
- NG >> 1. Repair or replace damaged parts.
2. Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .

Component Inspection PNP SWITCH

UCS005ZA

1. Change selector lever to various positions to check the continuity between terminals on the PNP switch and ground.

| PNP SW | Shift position | Connector | Terminal | Continuity |
|--------------|-----------------|-----------|-------------|------------|
| SW 1 | "R", "N", "D" | F46 | 4 - Ground | Yes |
| | other positions | | | No |
| SW 2 | "N", "D", "L" | | 5 - Ground | Yes |
| | other positions | | | No |
| SW 3 | "D", "L" | | 14 - Ground | Yes |
| | other positions | | | No |
| SW 4 | "R", "D" | | 15 - Ground | Yes |
| | other positions | | | No |
| SW 3 Monitor | "D", "L" | | 18 - Ground | Yes |
| | other positions | | | No |

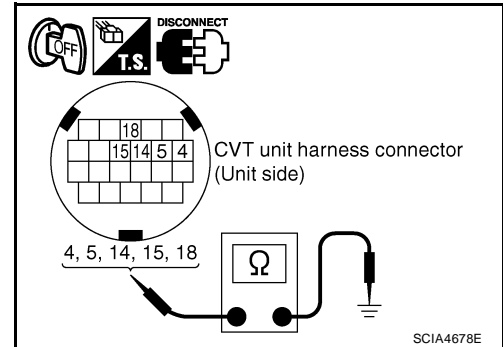

2. If NG, check continuity with control cable disconnected. (Refer to step 1 above.)
3. If OK, with the control cable disconnected, adjust the control cable. Refer to [CVT-195, "Adjustment of CVT Position"](#) .
4. If NG, even when the control cable is disconnected, replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .

DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT

DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT

PF0:31020

Description

UCS005ZB

- The CVT fluid temperature sensor is included in the control valve assembly.
- The CVT fluid temperature sensor detects the CVT fluid temperature and sends a signal to the TCM.

CONSULT-II Reference Value

UCS005ZC

Remarks: Specification data are reference values.

| Item name | Condition | Display value (Approx.) |
|--------------|---|-------------------------|
| ATF TEMP SEN | When CVT fluid temperature is 20°C (68°F). | 2.0 V |
| | When CVT fluid temperature is 80°C (176°F). | 1.0 V |

On Board Diagnosis Logic

UCS005ZD

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0710 ATF TEMP SEN/CIRC" with CONSULT-II is detected when TCM receives an excessively low or high voltage from the sensor.

Possible Cause

UCS005ZE

- Harness or connectors
(Sensor circuit is open or shorted.)
- CVT fluid temperature sensor

DTC Confirmation Procedure

UCS005ZF

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 10 minutes (Total).

VEHICLE SPEED: 10 km/h (6 MPH) or more

ENG SPEED: 450 rpm more than


ACC PEDAL OPEN: More than 1.0/8

RANGE: "D" position

4. If DTC is detected, go to [CVT-87, "Diagnostic Procedure"](#).

WITH GST

Follow the procedure "WITH CONSULT-II".

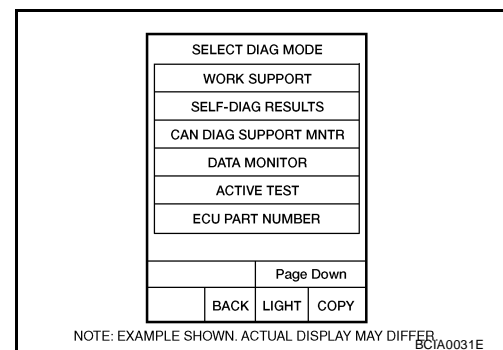



DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT

Wiring Diagram — CVT — FTS

UCS005ZG

CVT-FTS-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

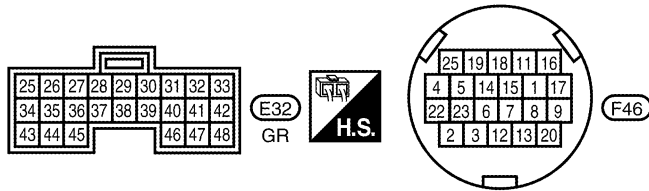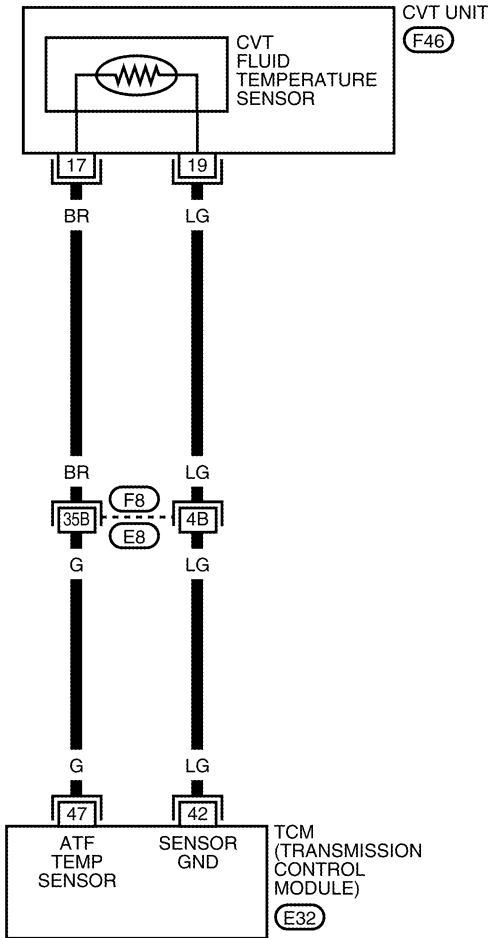

REFER TO THE FOLLOWING.
 (F8) - SUPER MULTIPLE JUNCTION (SMJ)

BCWA0671E

DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT

TCM terminal data are reference values, measured between each terminal and ground.

| Terminal | Wire color | Item | Condition | Data (Approx.) |
|----------|------------|------------------------------|---|----------------|
| 42 | LG | Sensor ground | Always | 0 V |
| 47 | G | CVT fluid temperature sensor | When CVT fluid temperature is 20°C (68°F). | 2.0 V |
| | | | When CVT fluid temperature is 80°C (176°F). | 1.0 V |

Diagnostic Procedure


UCS005ZH

1. CHECK CVT FLUID TEMPERATURE SENSOR SIGNAL

With CONSULT-II

- Start engine.
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Read out the value of "ATF TEMP SEN".


| Item name | Condition | Display value (Approx.) |
|--------------|---|-------------------------|
| ATF TEMP SEN | When CVT fluid temperature is 20°C (68°F). | 2.0 V |
| | When CVT fluid temperature is 80°C (176°F). | 1.0 V |

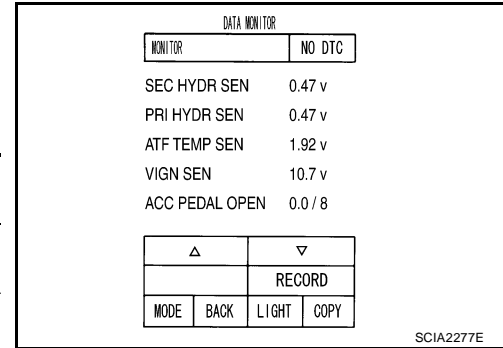

Without CONSULT-II

- Start engine.
- Check voltage between TCM connector terminals.

| Name | Connector | Terminal | Temperature °C (°F) | Voltage (Approx.) |
|------------------------------|-----------|----------|---------------------|-------------------|
| CVT fluid temperature sensor | E32 | 47 - 42 | 20 (68) | 2.0 V |
| | | | 80 (176) | 1.0 V |

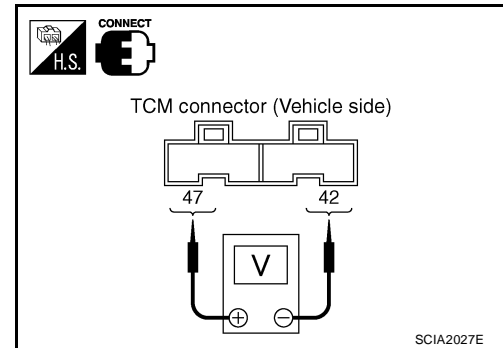

- Turn ignition switch OFF.
- Disconnect TCM connector.
- Check if there is continuity between connector terminal and ground.


OK or NG

- OK >> GO TO 5.
 NG >> GO TO 2.

2. CHECK CVT FLUID TEMPERATURE SENSOR CIRCUIT

- Turn ignition switch OFF.
- Disconnect the TCM connector.
- Check resistance between TCM connector terminals.

| Name | Connector | Terminal | Temperature °C (°F) | Resistance (Approx.) |
|------------------------------|-----------|----------|---------------------|----------------------|
| CVT fluid temperature sensor | E32 | 47 - 42 | 20 (68) | 6.5 kΩ |
| | | | 80 (176) | 0.9 kΩ |

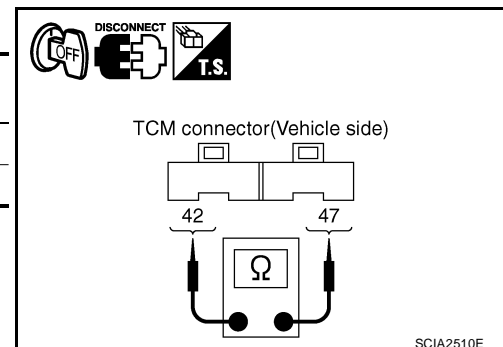

OK or NG

- OK >> GO TO 5.
 NG >> GO TO 3.

DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT

3. CHECK CVT FLUID TEMPERATURE SENSOR


1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminals.

| Name | Connector | Terminal | Temperature °C (°F) | Resistance (Approx.) |
|------------------------------|-----------|----------|---------------------|----------------------|
| CVT fluid temperature sensor | F46 | 17 - 19 | 20 (68) | 6.5 kΩ |
| | | | 80 (176) | 0.9 kΩ |

4. Reinstall any part removed.

OK or NG

- OK >> GO TO 4.
 NG >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#).

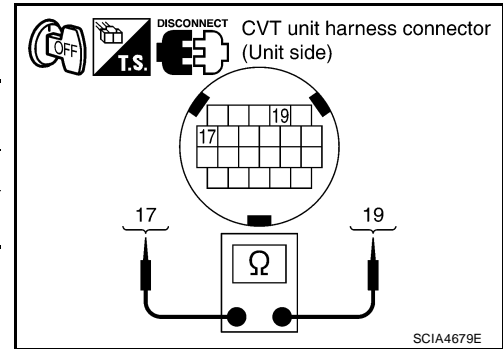

4. CHECK HARNESS BETWEEN TCM AND CVT FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF.
2. Disconnect the TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminals and CVT unit harness connector terminals.

| Item | Connector | Terminal | Continuity |
|----------------------------|-----------|----------|------------|
| TCM | E32 | 42 | Yes |
| CVT unit harness connector | F46 | 19 | |
| TCM | E32 | 47 | Yes |
| CVT unit harness connector | F46 | 17 | |

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

- OK >> GO TO 5.
 NG >> Repair or replace damaged parts.

5. CHECK DTC

Perform [CVT-85, "DTC Confirmation Procedure"](#).

OK or NG


- OK >> **INSPECTION END**
 NG >> GO TO 6.

6. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#).
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
 NG >> Repair or replace damaged parts.

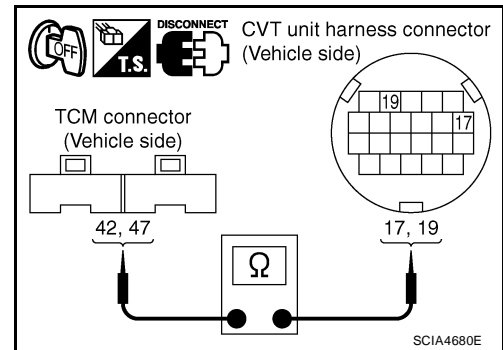

DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT


UCS005Z1

Component Inspection CVT FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminals.

| Name | Connector | Terminal | Temperature °C (°F) | Resistance (Approx.) |
|------------------------------|-----------|----------|---------------------|----------------------|
| CVT fluid temperature sensor | F46 | 17 - 19 | 20 (68) | 6.5 kΩ |
| | | | 80 (176) | 0.9 kΩ |

4. If NG, replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#).

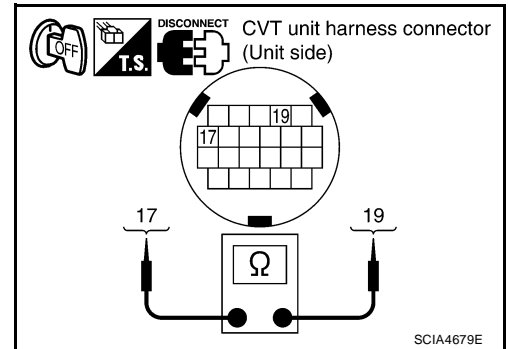

A
B
CVT
D
E
F
G
H
I
J
K
L
M

DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)

DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)

PFP:31935

Description

UCS005ZJ

- The input speed sensor (primary speed sensor) is included in the control valve assembly.
- The input speed sensor (primary speed sensor) detects the primary pulley revolution speed and sends a signal to the TCM.

CONSULT-II Reference Value

UCS005ZK

Remarks: Specification data are reference values.

| Item name | Condition | Display value |
|---------------|-----------------------------|---|
| ENG SPEED SIG | Engine running | Closely matches the tachometer reading. |
| PRI SPEED SEN | During driving (lock-up ON) | Approximately matches the engine speed. |

On Board Diagnosis Logic

UCS005ZL

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0715 INPUT SPD SEN/CIRC" with CONSULT-II is detected when TCM does not receive the proper signal from the sensor.

Possible Cause

UCS005ZM

- Harness or connectors
(Sensor circuit is open or shorted.)
- Input speed sensor (Primary speed sensor)

DTC Confirmation Procedure

UCS005ZN

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 5 consecutive seconds.
VEHICLE SPEED: 10 km/h (6 MPH) or more
ACC PEDAL OPEN: More than 1.0/8
RANGE: "D" position
ENG SPEED: 450 rpm or more
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. If DTC is detected, go to [CVT-92, "Diagnostic Procedure"](#).

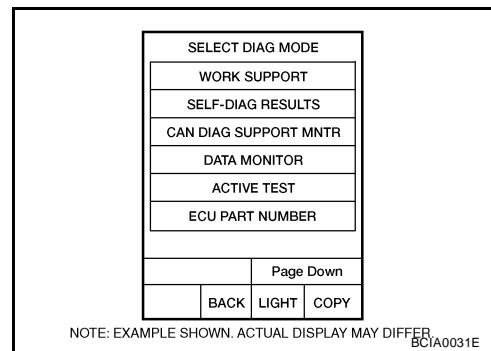

WITH GST

Follow the procedure "WITH CONSULT-II".


DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)

Wiring Diagram — CVT — PRSCVT


UCS005Z0

CVT-PRSCVT-01

— : DETECTABLE LINE FOR DTC
- - - : NON-DETECTABLE LINE FOR DTC

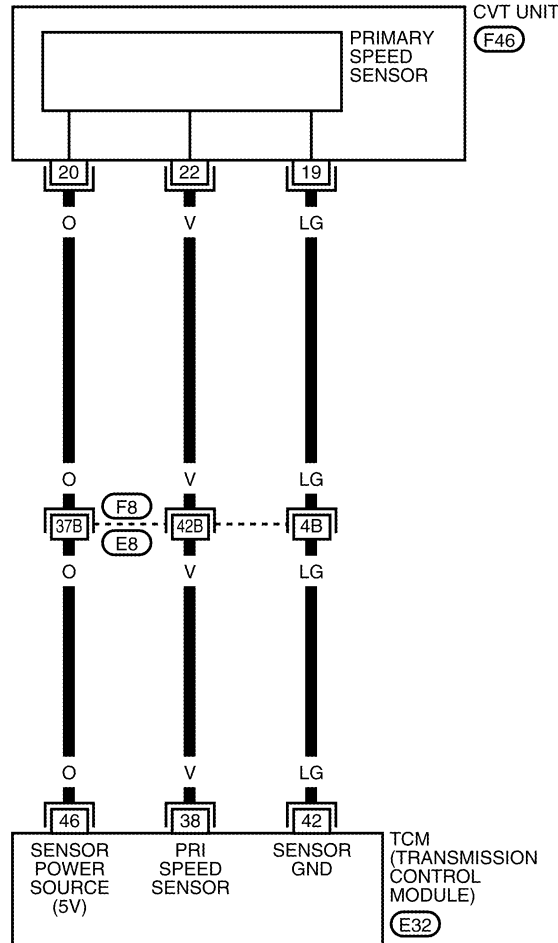

A
B
CVT
D
E
F
G
H
I
J
K
L
M

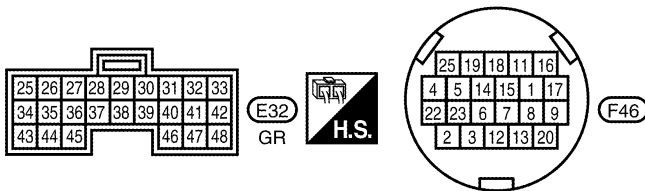




REFER TO THE FOLLOWING.
(F8) - SUPER MULTIPLE JUNCTION (SMJ)

BCWA0672E

DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)

TCM terminal data are reference values, measured between each terminal and ground.

| Terminal | Wire color | Item | Condition | Data (Approx.) |
|----------|------------|---|--|----------------|
| 38 | V | Input speed sensor (Primary speed sensor) |  When driving ["L" position, 20 km/h (12 MPH)]. | 1000 Hz |
| 42 | LG | Sensor ground | Always | 0 V |
| 46 | O | Sensor power |  | 5.0 V |
| | | |  | 0 V |

Diagnostic Procedure

UCS0052P

1. CHECK INPUT SIGNALS

With CONSULT-II

- Start engine.
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Start vehicle and read out the value of "PRI SPEED SEN".

| Item name | Condition | Display value |
|---------------|-----------------------------|---|
| PRI SPEED SEN | During driving (lock-up ON) | Approximately matches the engine speed. |

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 2.

| DATA MONITOR | |
|---------------|--------|
| MONITOR | NO DTC |
| PRI SPEED SEN | 32 rpm |
| ENG SPEED SIG | 0 rpm |
| SEC HYDR SEN | 0.47 V |
| PRI HYDR SEN | 0.47 V |
| ATF TEMP SEN | 1.92 V |

| | | | |
|--------|------|-------|------|
| ▼ | | | |
| RECORD | | | |
| MODE | BACK | LIGHT | COPY |

SCIA2278E

2. CHECK INPUT SPEED SENSOR (PRIMARY SPEED SENSOR)

- Start engine.
- Check voltage between TCM connector terminals.

| Item | Connector | Terminal | Data (Approx.) |
|------|-----------|----------|----------------|
| TCM | E32 | 46 - 42 | 5.0 V |


- Check the pulse with CONSULT-II or oscilloscope, when vehicle cruises.

| Name | Condition |
|---|--|
| Input speed sensor (Primary speed sensor) | When running at 20 km/h (12 MPH) in "L" position with the closed throttle position signal OFF, use the CONSULT-II pulse frequency measuring function. CAUTION: Connect the data link connector to the vehicle-side diagnosis connector. |

| Item | Connector | Terminal | Name | Data (Approx.) |
|------|-----------|----------|---|----------------|
| TCM | E32 | 38 | Input speed sensor (Primary speed sensor) | 1000 Hz |

OK or NG

- OK >> GO TO 6.
 NG - 1 >> Battery voltage is not supplied: GO TO 3.
 NG - 2 >> Battery voltage is supplied, but there is a malfunction in the frequency: GO TO 4.

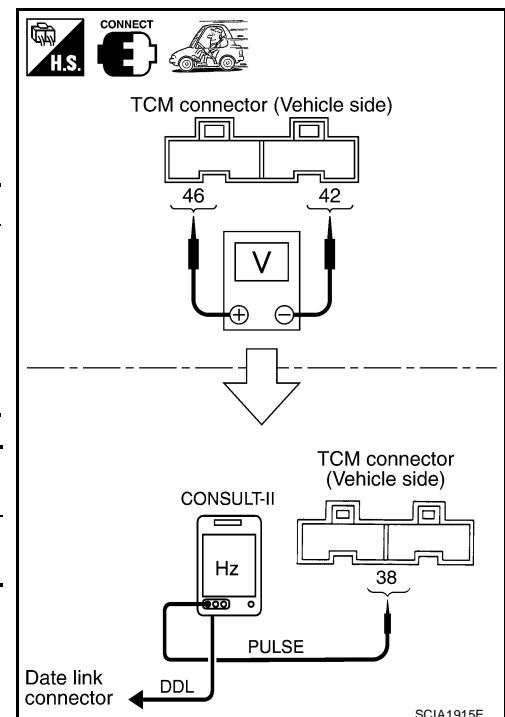

DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)

3. CHECK HARNESS BETWEEN TCM AND CVT UNIT HARNESS CONNECTOR (SENSOR POWER AND SENSOR GROUND)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminals and CVT unit harness connector terminals.


| Item | Connector | Terminal | Continuity |
|----------------------------|-----------|----------|------------|
| TCM | E32 | 42 | Yes |
| CVT unit harness connector | F46 | 19 | |
| TCM | E32 | 46 | Yes |
| CVT unit harness connector | F46 | 20 | |

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

OK >> GO TO 6.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

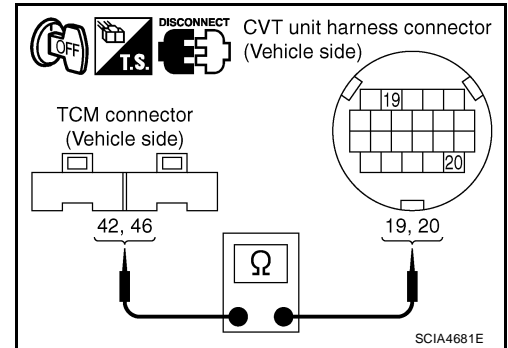

4. CHECK HARNESS BETWEEN TCM AND CVT UNIT HARNESS CONNECTOR [INPUT SPEED SENSOR (PRIMARY SPEED SENSOR)]

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.


| Item | Connector | Terminal | Continuity |
|----------------------------|-----------|----------|------------|
| TCM | E32 | 38 | Yes |
| CVT unit harness connector | F46 | 22 | |

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

OK >> GO TO 5.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

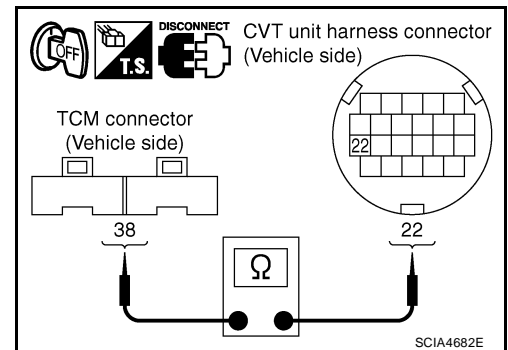

5. CHECK THE TCM SHORT

Replace same type TCM, perform self-diagnosis check. Erase self-diagnostic results and then drive the vehicle [10 km/h (6 MPH) or more], perform self-diagnosis check. Refer to [CVT-90, "DTC Confirmation Procedure"](#).

Is the "P0715 INPUT SPD SEN/CIRC" detected again?

YES >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#).

NO >> Replace TCM. Refer to [CVT-9, "Service After Replacing TCM and Transaxle Assembly"](#).

6. CHECK DTC

Perform [CVT-90, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 7.

DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)

7. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)

DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)

PFP:31935

Description

UCS005ZQ

The vehicle speed sensor CVT [output speed sensor (secondary speed sensor)] detects the revolution of the CVT output shaft and emits a pulse signal. The pulse signal is sent to the TCM, which converts it into vehicle speed.

CONSULT-II Reference Value

UCS005ZR

Remarks: Specification data are reference values.

| Item name | Condition | Display value |
|------------|----------------|--|
| VSP SENSOR | During driving | Approximately matches the speedometer reading. |

On Board Diagnosis Logic

UCS005ZS

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0720 VEH SPD SEN/CIR AT" with CONSULT-II is detected TCM does not receive the proper signal from the sensor.

Possible Cause

UCS005ZT

- Harness or connectors
(Sensor circuit is open or shorted.)
- Output speed sensor (Secondary speed sensor)

DTC Confirmation Procedure

UCS005ZU

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 12 consecutive seconds.
ACC PEDAL OPEN: More than 1.0/8
RANGE: "D" position
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. If DTC is detected, go to [CVT-97, "Diagnostic Procedure"](#).

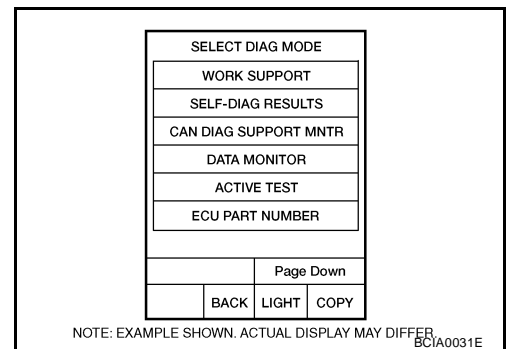


WITH GST

Follow the procedure "WITH CONSULT-II".

DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)

TCM terminal data are reference values, measured between each terminal and ground.

| Terminal | Wire color | Item | Condition | Data (Approx.) |
|----------|------------|--|--|----------------|
| 29 | R | Output speed sensor (Secondary speed sensor) |  When driving ["D" position, 20 km/h (12 MPH)]. | 570 Hz |
| 42 | LG | Sensor ground | Always | 0 V |

Diagnostic Procedure

UCS005ZW

1. CHECK INPUT SIGNAL

With CONSULT-II

- Start engine.
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Start vehicle and read out the value of "VSP SENSOR".

| DATA MONITOR | |
|---------------|----------|
| MONITOR | NO DTC |
| VSP SENSOR | 1 km / h |
| ESTM VSP SIG | 0 km / h |
| PRI SPEED SEN | 32 rpm |
| ENG SPEED SIG | 0 rpm |
| SEC HYDR SEN | 0.47 V |

| | |
|--------|------|
| ▼ | |
| RECORD | |
| MODE | BACK |
| LIGHT | COPY |

SCIA2279E

| Item name | Condition | Display value |
|------------|----------------|--|
| VSP SENSOR | During driving | Approximately matches the speedometer reading. |

OK or NG

- OK >> GO TO 8.
 NG >> GO TO 2.

2. CHECK SECONDARY SPEED SENSOR

With CONSULT-II

- Start engine.
- Check power supply to output speed sensor (secondary speed sensor) by voltage between TCM connector terminals 10, 19 and 42. Refer to [CVT-42, "Circuit Diagram"](#).

| Item | Connector | Terminal | Data (Approx.) |
|------|-----------|----------|-----------------|
| TCM | E31, E32 | 10 - 42 | Battery voltage |
| | | 19 - 42 | |


- If OK, check the pulse when vehicle cruises.

| Name | Condition |
|--|---|
| Output speed sensor (Secondary speed sensor) | When running at 20 km/h (12 MPH) in "D" position, use the CONSULT-II pulse frequency measuring function. CAUTION: Connect the data link connector to the vehicle-side diagnosis connector. |

| Item | Connector | Terminal | Name | Data (Approx.) |
|------|-----------|----------|--|----------------|
| TCM | E32 | 29 | Output speed sensor (Secondary speed sensor) | 570 Hz |

OK or NG

- OK >> GO TO 8.
 NG >> GO TO 3.

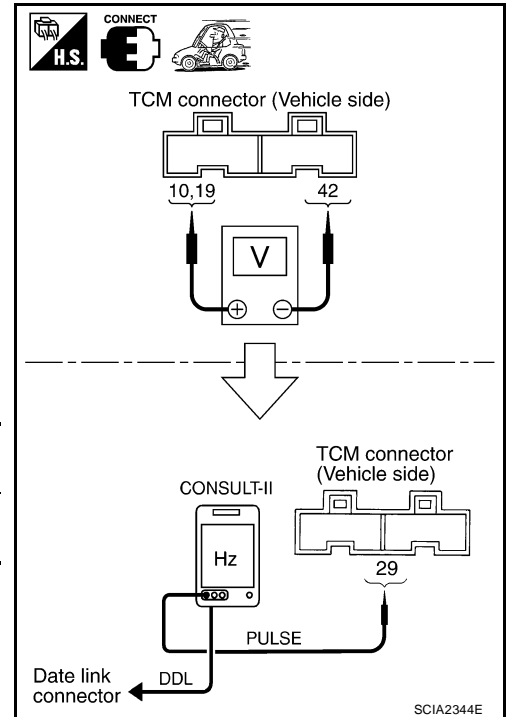


DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)

3. CHECK POWER AND SENSOR GROUND


1. Turn ignition switch OFF.
2. Disconnect the output speed sensor (secondary speed sensor) harness connector.
3. Turn ignition switch ON.
4. Check voltage between output speed sensor (secondary speed sensor) harness connector terminals.

| Item | Connector | Terminal | Data (Approx.) |
|--|-----------|----------|-----------------|
| Output speed sensor (Secondary speed sensor) | F48 | 3 - 1 | Battery voltage |

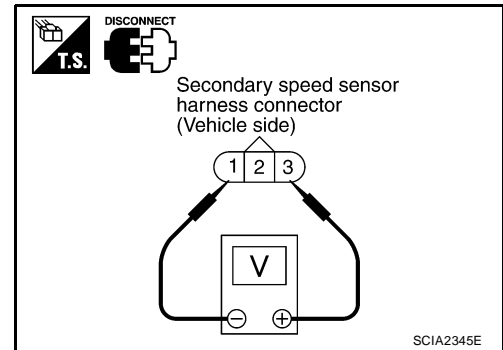

5. Check voltage between output speed sensor (secondary speed sensor) harness connector terminal and ground.

| Item | Connector | Terminal | Data (Approx.) |
|--|-----------|------------|-----------------|
| Output speed sensor (Secondary speed sensor) | F48 | 3 - ground | Battery voltage |

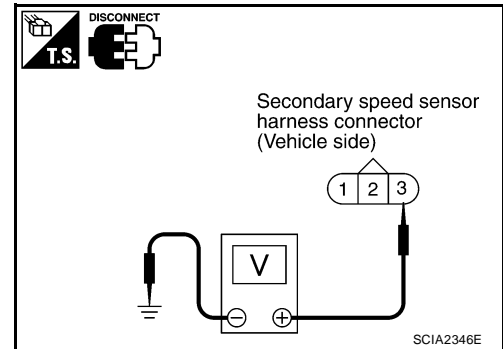

6. If OK, check harness for short to ground and short to power.
7. Reinstall any part removed.

OK or NG

OK >> GO TO 4.

NG - 1 >> Battery voltage is not supplied between terminals 1 and 3, terminals 1 and ground.: GO TO 6.

NG - 2 >> Battery voltage is not supplied between terminals 1 and 3 only.: GO TO 7.

4. CHECK HARNESS BETWEEN TCM AND OUTPUT SPEED SENSOR (SECONDARY SPEED SENSOR)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and output speed sensor (secondary speed sensor) harness connector.
3. Check continuity between TCM connector terminal and output speed sensor (secondary speed sensor) harness connector terminal.


| Item | Connector | Terminal | Continuity |
|--|-----------|----------|------------|
| TCM | E32 | 29 | Yes |
| Output speed sensor (Secondary speed sensor) | F48 | 2 | |

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

OK >> GO TO 5.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

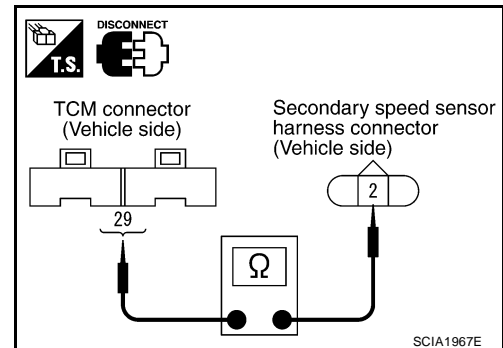

DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)

5. CHECK THE TCM SHORT

Replace same type TCM, perform self-diagnosis check. Erase self-diagnostic results and then drive the vehicle [more than 40 km/h (25 MPH)], perform self-diagnosis check. Refer to [CVT-95, "DTC Confirmation Procedure"](#).


Is "P0720 VEH SPD SEN/CIR AT" detected again?

- YES >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#).
- NO >> Replace TCM. Refer to [CVT-9, "Service After Replacing TCM and Transaxle Assembly"](#).

6. CHECK HARNESS BETWEEN TCM AND OUTPUT SPEED SENSOR (SECONDARY SPEED SENSOR) (POWER)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and output speed sensor (secondary speed sensor) harness connector.
3. Check continuity between TCM connector terminals and output speed sensor (secondary speed sensor) harness connector terminal. Refer to [CVT-42, "Circuit Diagram"](#).

| Item | Connector | Terminal | Continuity |
|--|-----------|----------|------------|
| TCM | E31 | 10 | Yes |
| Output speed sensor (Secondary speed sensor) | F48 | 3 | |
| TCM | E31 | 19 | Yes |
| Output speed sensor (Secondary speed sensor) | F48 | 3 | |

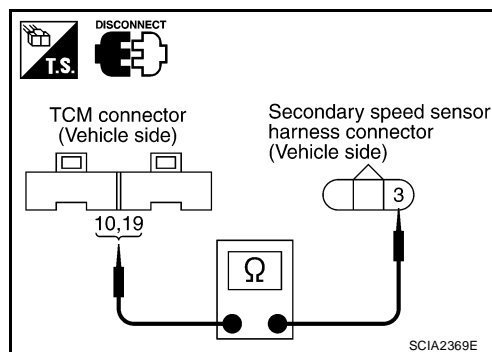

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.


OK or NG

- OK >> 10 A fuse (No. 49, located in the IPDM E/R) or ignition switch are malfunctioning.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK HARNESS BETWEEN TCM AND OUTPUT SPEED SENSOR (SECONDARY SPEED SENSOR) (SENSOR GROUND)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and output speed sensor (secondary speed sensor) harness connector.
3. Check continuity between TCM connector terminal and output speed sensor (secondary speed sensor) harness connector terminal.

| Item | Connector | Terminal | Continuity |
|--|-----------|----------|------------|
| TCM | E32 | 42 | Yes |
| Output speed sensor (Secondary speed sensor) | F48 | 1 | |

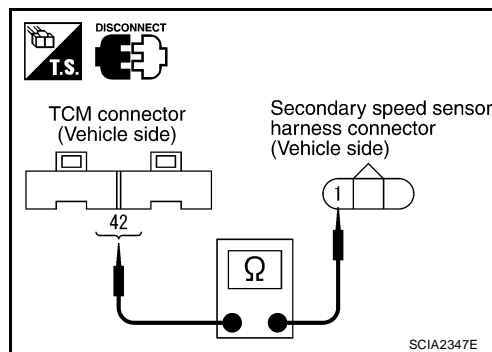

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

- OK >> GO TO 8.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK DTC

Perform [CVT-95, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 9.

DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)

9. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

DTC P0725 ENGINE SPEED SIGNAL

DTC P0725 ENGINE SPEED SIGNAL

PFP:24825

Description

UCS005ZX

The engine speed signal is sent from the ECM to the TCM.

CONSULT-II Reference Value

UCS005ZY

Remarks: Specification data are reference values.

| Item name | Condition | Display value |
|----------------|--|---|
| ENG SPEED SIG | Engine running | Closely matches the tachometer reading. |
| ACC PEDAL OPEN | Released accelerator pedal - Fully depressed accelerator pedal | 0.0/8 - 8.0/8 |

CVT

On Board Diagnosis Logic

UCS005ZZ

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0725 ENGINE SPEED SIG" with CONSULT-II is detected when TCM does not receive the engine speed signal (input by CAN communication) from ECM.

Possible Cause

UCS00600

Harness or connectors
(The ECM to the TCM circuit is open or shorted.)

DTC Confirmation Procedure

UCS00601

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 10 consecutive seconds.
PRI SPEED SEN: More than 1000 rpm
3. If DTC is detected, go to [CVT-101, "Diagnostic Procedure"](#).

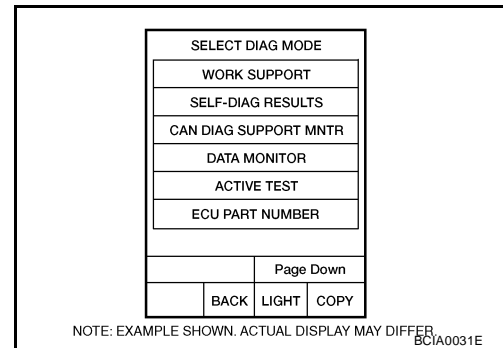

Diagnostic Procedure

UCS00602

1. CHECK DTC WITH ECM

With CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "SELF-DIAG RESULTS" mode for "ENGINE" with CONSULT-II. Refer to [EC-116, "SELF-DIAG RESULTS MODE"](#).

OK or NG

OK >> GO TO 2.

NG >> Check the DTC detected item. Refer to [EC-116, "SELF-DIAG RESULTS MODE"](#).

DTC P0725 ENGINE SPEED SIGNAL

2. CHECK DTC WITH TCM

With CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "SELF-DIAG RESULTS" mode for "TRANSMISSION" with CONSULT-II. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Check the DTC detected item. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .
- If DTC of CAN communication line is detected, go to [CVT-68, "DTC U1000 CAN COMMUNICATION LINE"](#) .

3. CHECK INPUT SIGNALS

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. While monitoring "ENG SPEED SIG", check for engine speed change corresponding to "ACC PEDAL OPEN".

| Item name | Condition | Display value |
|----------------|--|---|
| ENG SPEED SIG | Engine running | Closely matches the tachometer reading. |
| ACC PEDAL OPEN | Released accelerator pedal - Fully depressed accelerator pedal | 0.0/8 - 8.0/8 |

| DATA MONITOR | | | |
|----------------|---------|-------|------|
| MONITOR | NO DTC | | |
| VSP SENSOR | 1 km/h | | |
| ESTM VSP SIG | 0 km/h | | |
| PRI SPEED SEN | 32 rpm | | |
| ENG SPEED SIG | 768 rpm | | |
| SEC HYDR SEN | 1.06 V | | |
| PRI HYDR SEN | 1.57 V | | |
| ATF TEMP SEN | 1.79 V | | |
| VIGN SEN | 13.5 V | | |
| ACC PEDAL OPEN | 0.0/8 | | |
| Page DOWN | | | |
| RECORD | | | |
| MODE | BACK | LIGHT | COPY |

SCIA4504E

OK or NG

- OK >> GO TO 4.
- NG >> Check ignition signal circuit. Refer to [EC-576, "IGNITION SIGNAL"](#) .

4. CHECK DTC

Perform [CVT-101, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 5.

5. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

DTC P0730 BELT DAMAGE

DTC P0730 BELT DAMAGE

PDF:31935

Description

UCS00603

TCM selects the gear ratio using the engine load (throttle position), the primary pulley revolution speed, and the secondary pulley revolution speed as input signal. Then it changes the operating pressure of the primary pulley and the secondary pulley and changes the groove width of the pulley.

CONSULT-II Reference Value

UCS00604

Remarks: Specification data are reference values.

| Item name | Condition | Display value (Approx.) |
|------------|----------------|-------------------------|
| GEAR RATIO | During driving | 2.56 - 0.43 |

On Board Diagnosis Logic

UCS00605

- This is not an OBD-II self-diagnostic item.
- TCM calculates the actual gear ratio with input speed sensor (primary speed sensor) and output speed sensor (secondary speed sensor).
- Diagnostic trouble code "P0730 BELT DAMG" with CONSULT-II is detected, when TCM receives an unexpected gear ratio signal.

Possible Cause

UCS00606

Transaxle assembly

DTC Confirmation Procedure

UCS00607

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that output voltage of CVT fluid temperature sensor is within the range below.
ATF TEMP SEN: 1.0 - 2.0 V
If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)
3. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
4. Start engine and maintain the following conditions for at least 30 consecutive seconds.
TEST START FROM 0 km/h (0 MPH)
CONSTANT ACCELERATION: Keep 30 sec or more
VEHICLE SPEED: 10 km/h (6 MPH) or more
ACC PEDAL OPEN: More than 1.0/8
RANGE: "D" position
ENG SPEED: 450 rpm or more
5. If DTC is detected, go to [CVT-104, "Diagnostic Procedure"](#).

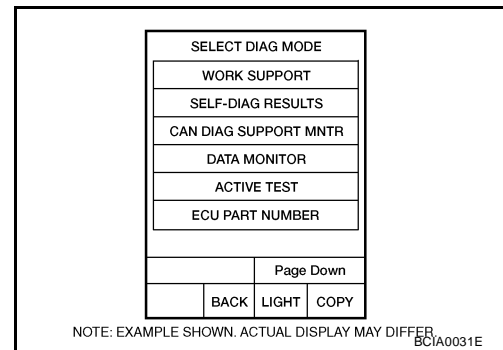

DTC P0730 BELT DAMAGE

Diagnostic Procedure

UCS00608

1. CHECK DTC

Perform [CVT-103, "DTC Confirmation Procedure"](#) .

Are any DTC displayed?

YES - 1>> DTC except for "P0730 BELT DAMG" is displayed: Go to Check the DTC detected item. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

YES - 2>> DTC for "P0730 BELT DAMG" is displayed: Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .

NO >> **INSPECTION END**

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

PFP:31940

Description

UCS00609

- The torque converter clutch solenoid valve is included in the control valve assembly.
- The torque converter clutch solenoid valve is activated by the TCM in response to signals sent from the vehicle speed and accelerator pedal position sensors. Lock-up piston operation will then be controlled.
- Lock-up operation, however, is prohibited when CVT fluid temperature is too low.
- When the accelerator pedal is depressed (less than 2.0/8) in lock-up condition, the engine speed should not change abruptly. If there is a big jump in engine speed, there is no lock-up.

A

B

CVT

CONSULT-II Reference Value

UCS0060A

Remarks: Specification data are reference values.

| Item name | Condition | Display value (Approx.) |
|-----------|-------------|-------------------------|
| ISOLT1 | Lock-up OFF | 0.0 A |
| | Lock-up ON | 0.7 A |

D

E

On Board Diagnosis Logic

UCS0060B

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0740 TCC SOLENOID/CIRC" with CONSULT-II is detected under the following conditions.
 - TCM detects an improper voltage drop when it tries to operate the solenoid valve.

F

G

Possible Cause

UCS0060C

- Torque converter clutch solenoid valve
- Harness or connectors
(Solenoid circuit is open or shorted.)

H

I

DTC Confirmation Procedure

UCS0060D

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

J


K

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II and wait at least 10 consecutive seconds.
3. If DTC is detected, go to [CVT-107, "Diagnostic Procedure"](#).

L

M

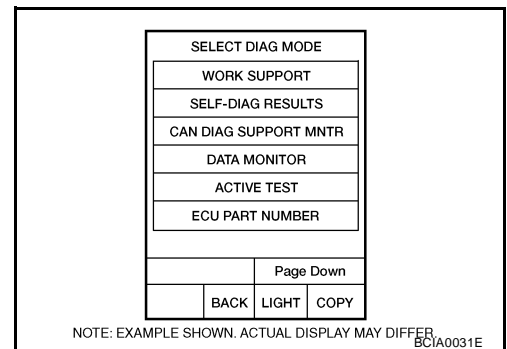

WITH GST



Follow the procedure "WITH CONSULT-II".



DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

Wiring Diagram — CVT — TCV

UCS0060E

CVT-TCV-01

-  : DETECTABLE LINE FOR DTC
-  : NON-DETECTABLE LINE FOR DTC

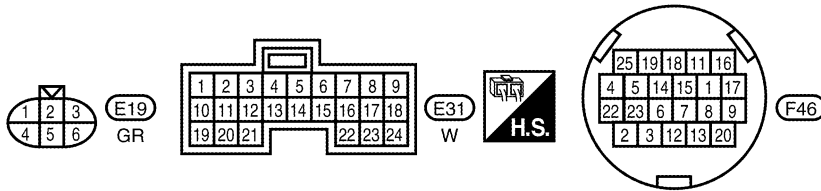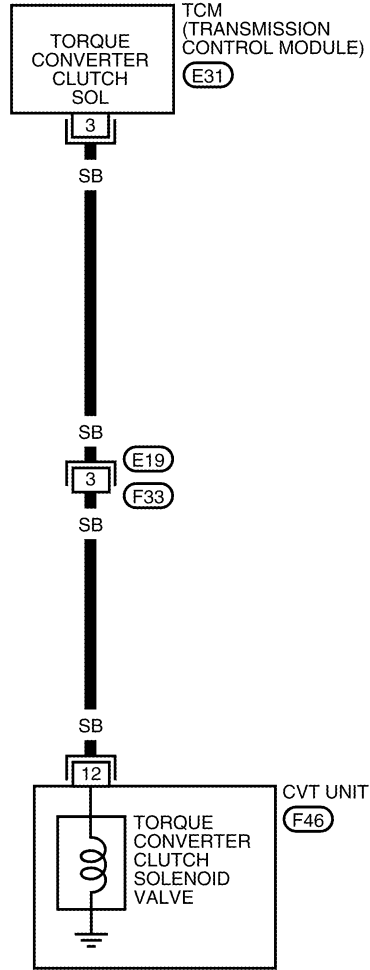

BCWA0674E

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

TCM terminal data are reference values, measured between each terminal and ground.

| Terminal | Wire color | Item | Condition | Data (Approx.) |
|----------|------------|--|---------------------------------------|----------------|
| 3 | SB | Torque converter clutch solenoid valve | When vehicle cruises in "D" position. | 6.0 V |
| | | | When CVT performs lock-up. | 1.0 V |

Diagnostic Procedure


1. CHECK INPUT SIGNAL

UCS0060F

With CONSULT-II

- Start engine.
- Select "MAIN SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Start vehicle and read out the value of "ISOLT1".

| Item name | Condition | Display value (Approx.) |
|-----------|-------------|-------------------------|
| ISOLT1 | Lock-up OFF | 0.0 A |
| | Lock-up ON | 0.7 A |

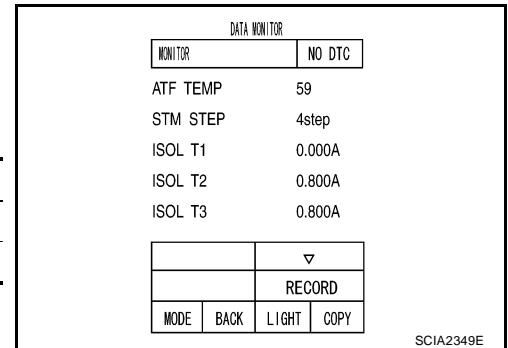

Without CONSULT-II


- Start engine.
- Check voltage between TCM connector terminal and ground.

| Name | Connector | Terminal | Condition | Voltage (Approx.) |
|--|-----------|------------|--------------------------------------|-------------------|
| Torque converter clutch solenoid valve | E31 | 3 - ground | When vehicle cruises in "D" position | Lock-up ON: 6.0 V |
| | | | Lock-up OFF: 1.0 V | |

- Turn ignition switch OFF.
- Disconnect TCM connector.
- Check if there is continuity between the connector terminal and ground.

OK or NG

- OK >> GO TO 5.
NG >> GO TO 2.

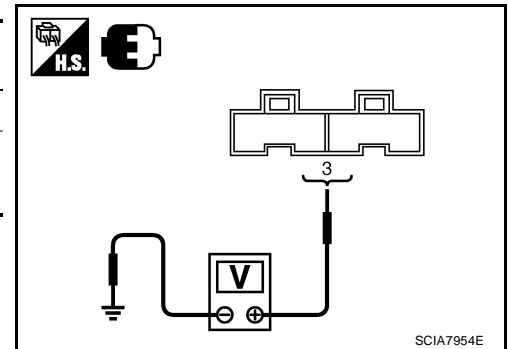


2. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE CIRCUIT

- Turn ignition switch OFF.
- Disconnect TCM connector.
- Check resistance between TCM connector terminal and ground.

| Solenoid valve | Connector | Terminal | Resistance (Approx.) |
|--|-----------|------------|----------------------|
| Torque converter clutch solenoid valve | E31 | 3 - Ground | 5 - 20 Ω |

OK or NG

- OK >> GO TO 5.
NG >> GO TO 3.

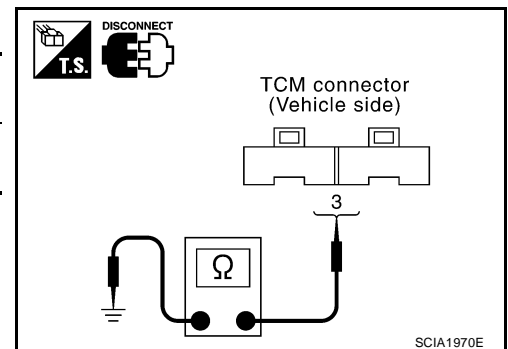

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

3. CHECK HARNESS BETWEEN TCM AND TORQUE CONVERTER CLUTCH SOLENOID VALVE


1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

| Item | Connector | Terminal | Continuity |
|----------------------------|-----------|----------|------------|
| TCM | E31 | 3 | Yes |
| CVT unit harness connector | F46 | 12 | |

4. If OK, check harness for short to ground and short to power.
5. If OK, check continuity between ground and CVT assembly.
6. Reinstall any part removed.

OK or NG

- OK >> GO TO 4.
NG >> Repair or replace damaged parts.

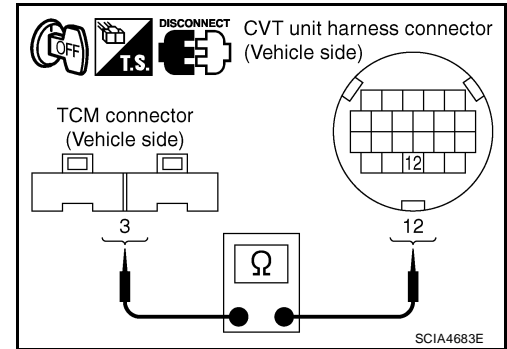


4. CHECK VALVE RESISTANCE

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

| Solenoid Valve | Connector | Terminal | Resistance (Approx.) |
|--|-----------|-------------|----------------------|
| Torque converter clutch solenoid valve | F46 | 12 - Ground | 5 - 20 Ω |

OK or NG

- OK >> GO TO 5.
NG >> Repair or replace damaged parts.

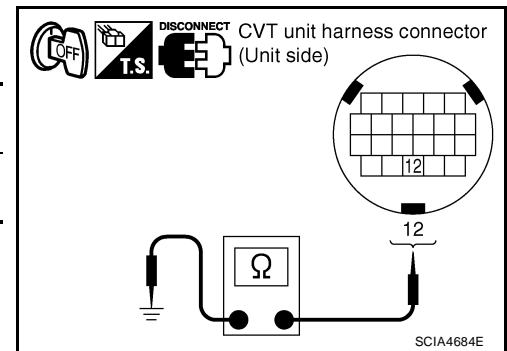

5. CHECK DTC

Perform [CVT-105, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 6.

6. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

UCS0060G


Component Inspection

TORQUE CONVERTER CLUTCH SOLENOID VALVE

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

| Solenoid Valve | Connector | Terminal | Resistance (Approx.) |
|--|-----------|-------------|----------------------|
| Torque converter clutch solenoid valve | F46 | 12 - Ground | 5 - 20 Ω |

4. If NG, replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#).

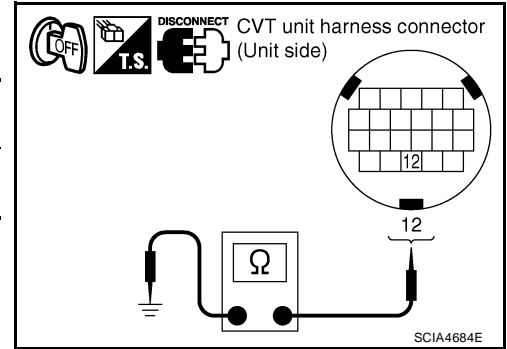

A
B
CVT
D
E
F
G
H
I
J
K
L
M

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

PF:31940

Description

UCS0060H

- The torque converter clutch solenoid valve is included in the control valve assembly.
- This malfunction is detected when the torque converter clutch does not lock-up as instructed by the TCM. This is not only caused by electrical malfunction (circuits open or shorted), but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

CONSULT-II Reference Value

UCS0060I

Remarks: Specification data are reference values.

| Item name | Condition | Display value |
|---------------|-----------------------------|---|
| ENG SPEED SIG | Engine running | Closely matches the tachometer reading. |
| PRI SPEED SEN | During driving (lock-up ON) | Approximately matches the engine speed. |

On Board Diagnosis Logic

UCS0060J

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0744 A/T TCC S/V FNCTN" with CONSULT-II is detected under the following conditions.
 - When CVT cannot perform lock-up even if electrical circuit is good.
 - When TCM compares difference value with slip revolution and detects an irregularity.

Possible Cause

UCS0060K

- Torque converter clutch solenoid valve
- Hydraulic control circuit

DTC Confirmation Procedure

UCS0060L

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and maintain the following condition for at least 30 seconds.
ACC PEDAL OPEN: More than 1.0/8
RANGE: "D" position
[Vehicle speed: Constant speed of more than 40 km/h (25 MPH)]
4. If DTC is detected go to [CVT-111, "Diagnostic Procedure"](#).

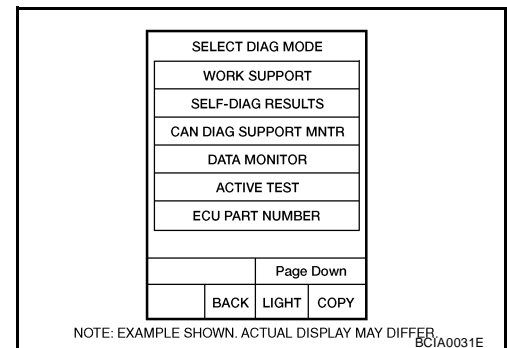

WITH GST

Follow the procedure "WITH CONSULT-II".

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

UCS0060M

Diagnostic Procedure

1. CHECK INPUT SIGNALS

With CONSULT-II

1. Start engine.
2. Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start vehicle.
4. Check if there is a great difference between "ENG SPEED SIG" and "PRI SPEED SEN". (Lock-up ON.)

| DATA MONITOR | |
|---------------|----------|
| MONITOR | NO DTC |
| VSP SENSOR | 1 km / h |
| ESTM VSP SIG | 0 km / h |
| PRI SPEED SEN | 32 rpm |
| ENG SPEED SIG | 0 rpm |
| SEC HYDR SEN | 0.47 V |

| | | | |
|--------|------|-------|------|
| ▽ | | | |
| RECORD | | | |
| MODE | BACK | LIGHT | COPY |

SCIA2279E

| Item name | Condition | Display value |
|---------------|-----------------------------|---|
| ENG SPEED SIG | Engine running | Closely matches the tachometer reading. |
| PRI SPEED SEN | During driving (lock-up ON) | Approximately matches the engine speed. |

OK or NG

- OK >> GO TO 5.
NG >> GO TO 2.

2. CHECK LINE PRESSURE

Perform line pressure test. Refer to [CVT-45, "LINE PRESSURE TEST"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts. Refer to [CVT-46, "Judgement of Line Pressure Test"](#).

3. DETECT MALFUNCTIONING ITEM

Check the following:

- Torque converter clutch solenoid valve. Refer to [CVT-109, "Component Inspection"](#).
- Lock-up select solenoid valve. Refer to [CVT-162, "Component Inspection"](#).

OK or NG

- OK >> GO TO 4.
NG >> Repair or replace damaged parts.

4. CHECK OUTPUT SPEED SENSOR (SECONDARY SPEED SENSOR) SYSTEM AND INPUT SPEED SENSOR (PRIMARY SPEED SENSOR) SYSTEM

Check output speed sensor (secondary speed sensor) system and input speed sensor (primary speed sensor) system. Refer to [CVT-95, "DTC P0720 VEHICLE SPEED SENSOR CVT \(SECONDARY SPEED SENSOR\)"](#), [CVT-90, "DTC P0715 INPUT SPEED SENSOR CIRCUIT \(PRI SPEED SENSOR\)"](#).

OK or NG

- OK >> GO TO 5.
NG >> Repair or replace damaged parts.

5. CHECK DTC

Perform [CVT-110, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 6.

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

6. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> 1. Repair or replace damaged parts.

2. Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .

DTC P0745 LINE PRESSURE SOLENOID VALVE

DTC P0745 LINE PRESSURE SOLENOID VALVE

PDF:31940

Description

UCS0060N

- The pressure control solenoid valve A (line pressure solenoid valve) is included in the control valve assembly.
- The pressure control solenoid valve A (line pressure solenoid valve) regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

CONSULT-II Reference Value

UCS00600

Remarks: Specification data are reference values.

| Item name | Condition | Display value (Approx.) |
|-----------|---|-------------------------|
| ISOLT2 | Release your foot from the accelerator pedal. | 0.8 A |
| | Press the accelerator pedal all the way down. | 0.0 A |

On Board Diagnosis Logic

UCS0060P

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0745 L/PRESS SOL/CIRC" with CONSULT-II is detected under the following conditions.
 - TCM detects an improper voltage drop when it tries to operate the solenoid valve.
 - When TCM compares target value with monitor value and detects an irregularity.

Possible Cause

UCS0060Q

- Harness or connectors
(Solenoid circuit is open or shorted.)
- Pressure control solenoid valve A (Line pressure solenoid valve)

DTC Confirmation Procedure

UCS0060R


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine and wait at least 5 seconds.
3. If DTC is detected, go to [CVT-115, "Diagnostic Procedure"](#).

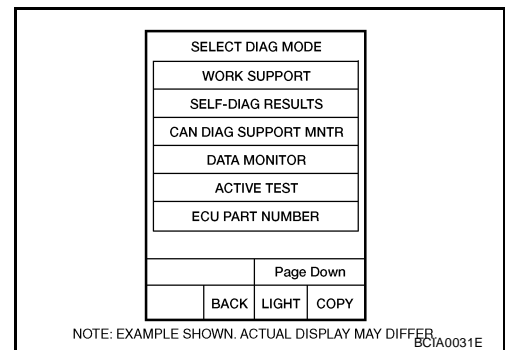

④ WITH GST

Follow the procedure "WITH CONSULT-II".



DTC P0745 LINE PRESSURE SOLENOID VALVE

Wiring Diagram — CVT — LPSV

UCS0060S

CVT-LPSV-01


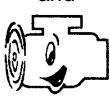
: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

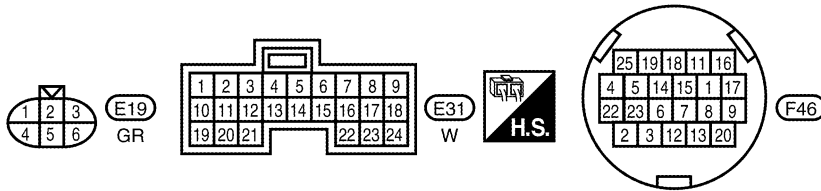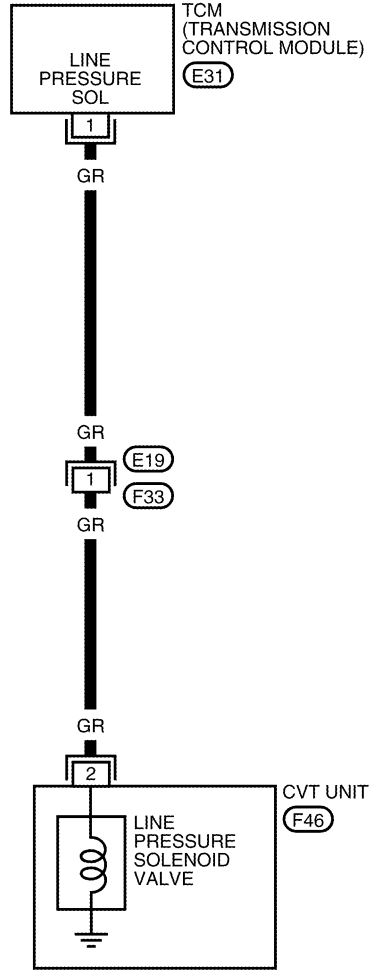

BCWA0675E

DTC P0745 LINE PRESSURE SOLENOID VALVE

TCM terminal data are reference values, measured between each terminal and ground.

| Terminal | Wire color | Item | Condition | Data (Approx.) |
|----------|------------|--|--|----------------|
| 1 | GR | Pressure control solenoid valve A (Line pressure solenoid valve) |  ON | 5.0 - 7.0 V |
| | | | and  | 1.0 - 3.0 V |

Diagnostic Procedure


UCS0060T

1. CHECK INPUT SIGNAL

Ⓜ With CONSULT-II

- Start engine.
- Select "MAIN SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Read out the value of "ISOLT2".

| Item name | Condition | Display value (Approx.) |
|-----------|---|-------------------------|
| ISOLT2 | Release your foot from the accelerator pedal. | 0.8 A |
| | Press the accelerator pedal all the way down. | 0.0 A |

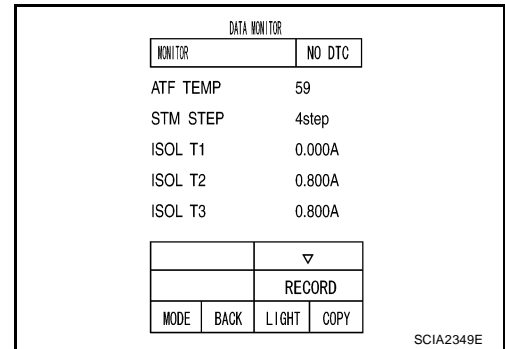

⊗ Without CONSULT-II


- Start engine.
- Check voltage between TCM connector terminal and ground.

| Name | Connector | Terminal | Condition | Voltage (Approx.) |
|--|-----------|------------|---|-------------------|
| Pressure control solenoid valve A (Line pressure solenoid valve) | E31 | 1 - ground | Release your foot from the accelerator pedal. | 5.0 - 7.0 V |
| | | | Press the accelerator pedal all the way down. | 1.0 - 3.0 V |

- Turn ignition switch OFF.
- Disconnect TCM connector.
- Check if there is continuity between connector terminal and ground.

OK or NG

- OK >> GO TO 5.
NG >> GO TO 2.

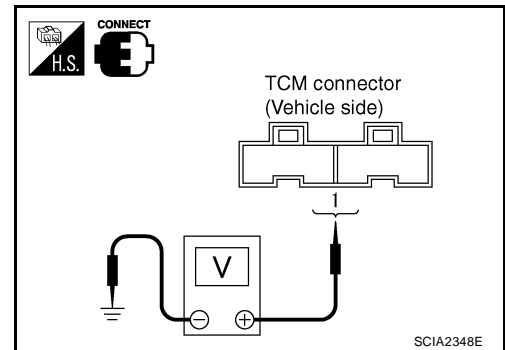

DTC P0745 LINE PRESSURE SOLENOID VALVE


2. CHECK PRESSURE CONTROL SOLENOID VALVE A (LINE PRESSURE SOLENOID VALVE) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check resistance between TCM connector terminal and ground.

| Solenoid valve | Connector | Terminal | Resistance (Approx.) |
|--|-----------|------------|----------------------|
| Pressure control solenoid valve A (Line pressure solenoid valve) | E31 | 1 - ground | 2.5 - 5.0 Ω |

OK or NG

- OK >> GO TO 5.
 NG >> GO TO 3.

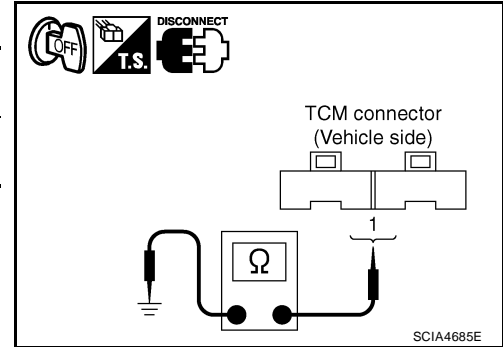


3. CHECK VALVE RESISTANCE

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

| Solenoid valve | Connector | Terminal | Resistance (Approx.) |
|--|-----------|------------|----------------------|
| Pressure control solenoid valve A (Line pressure solenoid valve) | F46 | 2 - Ground | 2.5 - 5.0 Ω |

OK or NG

- OK >> GO TO 4.
 NG >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#).

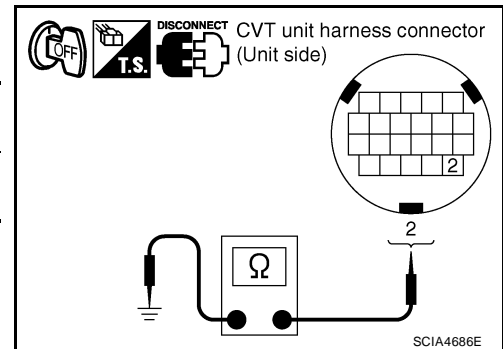

4. CHECK HARNESS BETWEEN TCM AND PRESSURE CONTROL SOLENOID VALVE A (LINE PRESSURE SOLENOID VALVE)


1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector and TCM connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

| Item | Connector | Terminal | Continuity |
|----------------------------|-----------|----------|------------|
| TCM | E31 | 1 | Yes |
| CVT unit harness connector | F46 | 2 | |

4. If OK, check harness for short to ground and short to power.
5. If OK, check continuity between ground and CVT assembly.
6. Reinstall any part removed.

OK or NG

- OK >> GO TO 5.
 NG >> Repair open circuit or short to ground or short to power in harness or connectors.

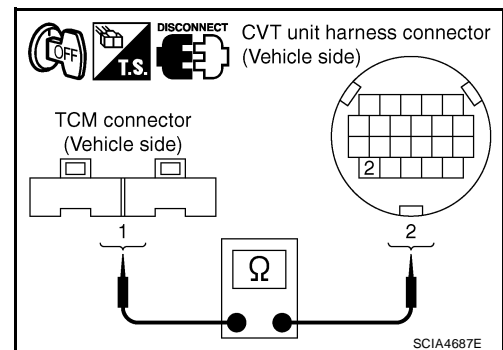

5. CHECK DTC

Perform [CVT-113, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
 NG >> GO TO 6.

DTC P0745 LINE PRESSURE SOLENOID VALVE

6. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> 1. Repair or replace damaged parts.

2. Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .

Component Inspection


PRESSURE CONTROL SOLENOID VALVE A (LINE PRESSURE SOLENOID VALVE)

UCS0060U

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

| Solenoid valve | Connector | Terminal | Resistance (Approx.) |
|--|-----------|------------|----------------------|
| Pressure control solenoid valve A (Line pressure solenoid valve) | F46 | 2 - Ground | 2.5 - 5.0 Ω |

4. If NG, replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .

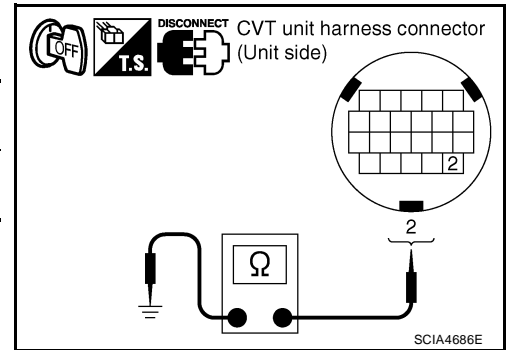

DTC P0746 PRESSURE CONTROL SOLENOID A PERFORMANCE (LINE PRESSURE SOLENOID VALVE)

DTC P0746 PRESSURE CONTROL SOLENOID A PERFORMANCE (LINE PRESSURE SOLENOID VALVE)

PFP:31941

Description

UCS0060V

- The pressure control solenoid valve A (line pressure solenoid valve) are included in the control valve assembly.
- The pressure control solenoid valve A (line pressure solenoid valve) regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

CONSULT-II Reference Value

UCS0060W

Remarks: Specification data are reference values.

| Item name | Condition | Display value (Approx.) |
|-----------|-------------------|-------------------------|
| PRI PRESS | "N" position idle | 0.4 MPa |

On Board Diagnosis Logic

UCS0060X

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0746 PRS CNT SOL/A FCTN" with CONSULT-II is detected under the following conditions.
 - Unexpected gear ratio was detected in the LOW side due to excessively low line pressure.

Possible Cause

UCS0060Y

- Line pressure control system
- Output speed sensor (Secondary speed sensor)
- Input speed sensor (Primary speed sensor)

DTC Confirmation Procedure

UCS0060Z

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.

2. Start engine and maintain the following conditions for at least 10 consecutive seconds. Test start from 0 km/h (0 MPH).

ATF TEMP SEN: 1.0 - 2.0 V

ACC PEDAL OPEN: More than 1.0/8

RANGE: "D" position


VEHICLE SPEED: 10 km/h (6 MPH) More than

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

3. If DTC is detected, go to [CVT-119, "Diagnostic Procedure"](#).

WITH GST

Follow the procedure "WITH CONSULT-II".

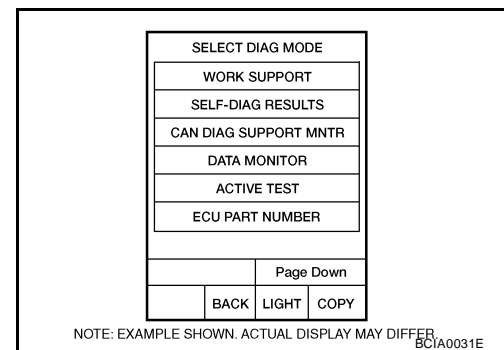

DTC P0746 PRESSURE CONTROL SOLENOID A PERFORMANCE (LINE PRESSURE SOLENOID VALVE)

UCS00610

Diagnostic Procedure

1. CHECK INPUT SIGNAL

With CONSULT-II

1. Start engine.
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start vehicle and read out the value of "PRI PRESS".

| Item name | Condition | Display value (Approx.) |
|-----------|-------------------|-------------------------|
| PRI PRESS | "N" position idle | 0.4 MPa |

| DATA MONITOR | |
|----------------|-----------|
| MONITOR | NO DTC |
| GEAR RATIO | 2.37 |
| ACC PEDAL OPEN | 0.0 / 8 |
| VENG TRQ | 217.6 Nm |
| SEC PRESS | 0.000 MPa |
| PRI PRESS | 0.000 MPa |

| | |
|--------|------|
| Δ | ▽ |
| RECORD | |
| MODE | BACK |
| LIGHT | COPY |

SCIA2366E


Without CONSULT-II

1. Start engine.
2. Check voltage between TCM connector terminal and ground.

| Name | Connector | Terminal | Condition | Voltage (Approx.) |
|--|-----------|-------------|-------------------|-------------------|
| Transmission fluid pressure sensor B (Primary pressure sensor) | E32 | 41 - Ground | "N" position idle | 0.7 V |

OK or NG

- OK >> GO TO 5.
 NG >> GO TO 2.

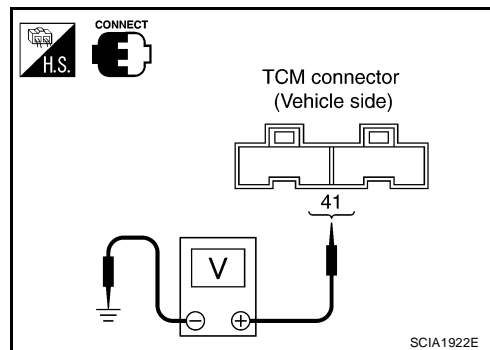

2. CHECK LINE PRESSURE

Perform line pressure test. Refer to [CVT-45, "LINE PRESSURE TEST"](#).

OK or NG

- OK >> GO TO 3.
 NG >> Repair or replace damaged parts. Refer to [CVT-46, "Judgement of Line Pressure Test"](#).

3. DETECT MALFUNCTIONING ITEM

Check pressure control solenoid valve A (line pressure solenoid valve). Refer to [CVT-117, "Component Inspection"](#).

OK or NG

- OK >> GO TO 4.
 NG >> Repair or replace damaged parts.

4. CHECK OUTPUT SPEED SENSOR (SECONDARY SPEED SENSOR) SYSTEM AND INPUT SPEED SENSOR (PRIMARY SPEED SENSOR) SYSTEM

Check output speed sensor (secondary speed sensor) system and input speed sensor (primary speed sensor) system. Refer to [CVT-95, "DTC P0720 VEHICLE SPEED SENSOR CVT \(SECONDARY SPEED SENSOR\)"](#), [CVT-90, "DTC P0715 INPUT SPEED SENSOR CIRCUIT \(PRI SPEED SENSOR\)"](#).

OK or NG

- OK >> GO TO 5.
 NG >> Repair or replace damaged parts.

DTC P0746 PRESSURE CONTROL SOLENOID A PERFORMANCE (LINE PRESSURE SOLENOID VALVE)

5. DETECT MALFUNCTIONING ITEM

Check the following:

- Power supply and ground circuit for TCM. Refer to [CVT-146, "Wiring Diagram — CVT — POWER"](#).
- The TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

6. CHECK DTC

Perform [CVT-118, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace the transaxle assembly or TCM. Refer to [CVT-207, "Removal and Installation"](#).

DTC P0776 PRESSURE CONTROL SOLENOID B PERFORMANCE (SEC PRESSURE SOLENOID VALVE)

DTC P0776 PRESSURE CONTROL SOLENOID B PERFORMANCE (SEC PRESSURE SOLENOID VALVE)

PFP:31941

Description

UCS00611

- The pressure control solenoid valve B (secondary pressure solenoid valve) is included in the control valve assembly.
- The pressure control solenoid valve B (secondary pressure solenoid valve) regulates the secondary pressure to suit the driving condition in response to a signal sent from the TCM.

CONSULT-II Reference Value

UCS00612

Remarks: Specification data are reference values.

| Item name | Condition | Display value (Approx.) |
|-----------|-------------------|-------------------------|
| SEC PRESS | "N" position idle | 0.8 MPa |

On Board Diagnosis Logic

UCS00613

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0776 PRS CNT SOL/B FCTN" with CONSULT-II is detected when secondary pressure is too high or too low compared with the commanded value while driving.

Possible Cause

UCS00614

- Harness or connectors (Solenoid circuit is open or shorted.)
- Pressure control solenoid valve B (Secondary pressure solenoid valve system)
- Transmission fluid pressure sensor A (Secondary pressure sensor)
- Line pressure control system

DTC Confirmation Procedure

UCS00615

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.

2. Start engine and maintain the following conditions for at least 30 consecutive seconds.

ATF TEMP SEN: 1.0 - 2.0 V


ACC PEDAL OPEN: More than 1.0/8

RANGE: "D" position

VEHICLE SPEED: 10 km/h (6 MPH) More than

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

3. If DTC is detected, go to [CVT-122, "Diagnostic Procedure"](#).

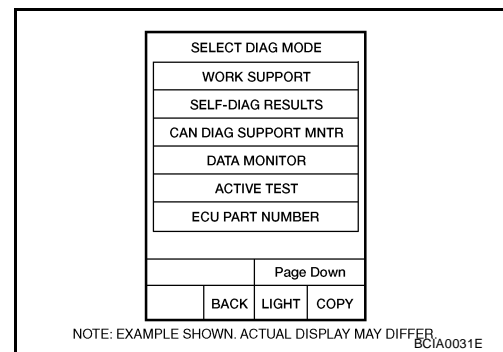

WITH GST

Follow the procedure "WITH CONSULT-II".

DTC P0776 PRESSURE CONTROL SOLENOID B PERFORMANCE (SEC PRESSURE SOLENOID VALVE)

UCS00616

Diagnostic Procedure

1. CHECK INPUT SIGNAL

With CONSULT-II

1. Start engine.
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start vehicle and read out the value of "SEC PRESS".

| Item name | Condition | Display value (Approx.) |
|-----------|-------------------|-------------------------|
| SEC PRESS | "N" position idle | 0.8 MPa |

OK or NG

- OK >> GO TO 5.
NG >> GO TO 2.

| DATA MONITOR | |
|----------------|-----------|
| MONITOR | NO DTC |
| GEAR RATIO | 2.37 |
| ACC PEDAL OPEN | 0.0 / 8 |
| VENG TRQ | 217.6 Nm |
| SEC PRESS | 0.000 MPa |
| PRI PRESS | 0.000 MPa |

| | |
|--------|------|
| Δ | ▽ |
| RECORD | |
| MODE | BACK |
| LIGHT | COPY |

SCIA2366E

2. CHECK LINE PRESSURE

Perform line pressure test. Refer to [CVT-45, "LINE PRESSURE TEST"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts. Refer to [CVT-46, "Judgement of Line Pressure Test"](#).

3. DETECT MALFUNCTIONING ITEM

Check the following:

- Pressure control solenoid valve B (Secondary pressure solenoid valve). Refer to [CVT-128, "Component Inspection"](#).
- Pressure control solenoid valve A (Line pressure solenoid valve). Refer to [CVT-117, "Component Inspection"](#).

OK or NG

- OK >> GO TO 4.
NG >> Repair or replace damaged parts.

4. CHECK TRANSMISSION FLUID PRESSURE SENSOR A (SECONDARY PRESSURE SENSOR) SYSTEM

Check transmission fluid pressure sensor A (secondary pressure sensor) system. Refer to [CVT-129, "DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT \(SEC PRESSURE SENSOR\)"](#).

OK or NG

- OK >> GO TO 5.
NG >> Repair or replace damaged parts.

5. DETECT MALFUNCTIONING ITEM

Check the following:

- Power supply and ground circuit for TCM. Refer to [CVT-146, "Wiring Diagram — CVT — POWER"](#).
- The TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 6.
NG >> Repair or replace damaged parts.

DTC P0776 PRESSURE CONTROL SOLENOID B PERFORMANCE (SEC PRESSURE SOLENOID VALVE)

6. CHECK DTC

Perform [CVT-121, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .

A

B

CVT

D

E

F

G

H

I

J

K

L

M

DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRES- SURE SOLENOID VALVE)

DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)

PF:31941

Description

UCS00617

- The pressure control solenoid valve B (secondary pressure solenoid valve) is included in the control valve assembly.
- The pressure control solenoid valve B (secondary pressure solenoid valve) regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

CONSULT-II Reference Value

UCS00618

Remarks: Specification data are reference values.

| Item name | Condition | Display value (Approx.) |
|-----------|--|-------------------------|
| ISOLT3 | Secondary pressure low - Secondary pressure high | 0.8 - 0.0 A |
| SOLMON3 | "N" position idle | 0.6 - 0.7 A |
| | When stalled | 0.4 - 0.6 A |

On Board Diagnosis Logic

UCS00619

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0778 PRS CNT SOL/B CIRC" with CONSULT-II is detected under the following conditions.
 - TCM detects an improper voltage drop when it tries to operate the solenoid valve.
 - When TCM compares target value with monitor value and detects an irregularity.

Possible Cause

UCS0061A

- Harness or connectors
(Solenoid circuit is open or shorted.)
- Pressure control solenoid valve B (Secondary pressure solenoid valve)

DTC Confirmation Procedure

UCS0061B


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and wait at least 5 seconds.
4. If DTC is detected, go to [CVT-126, "Diagnostic Procedure"](#).

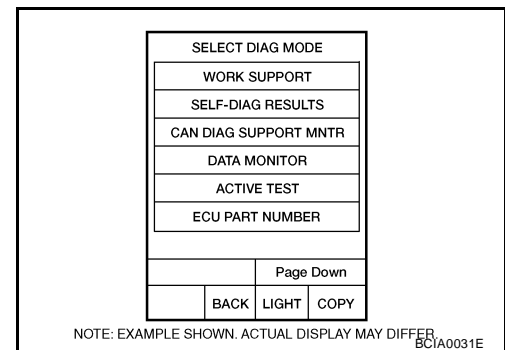

WITH GST

Follow the procedure "WITH CONSULT-II".


DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)

Wiring Diagram — CVT — SECPSV

UCS0061C


CVT-SECPSV-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

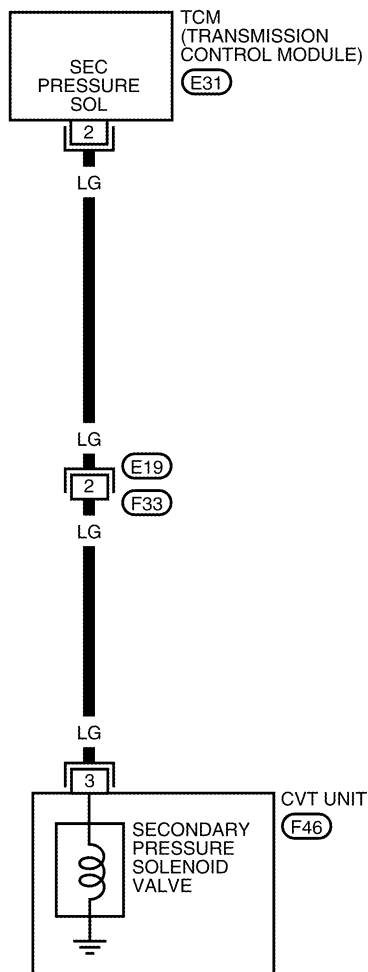

CVT

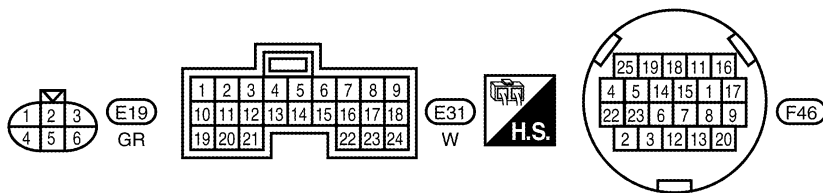

A
B
D
E
F
G
H
I
J
K
L
M



BCWA0676E

DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRES- SURE SOLENOID VALVE)

TCM terminal data are reference values, measured between each terminal and ground.

| Terminal | Wire color | Item | Condition | Data (Approx.) | |
|----------|------------|---|--|---|-------------|
| 2 | LG | Pressure control solenoid valve B (Secondary pressure solenoid valve) |  and  | Release your foot from the accelerator pedal. | 5.0 - 7.0 V |
| | | | | Press the accelerator pedal all the way down. | 3.0 - 4.0 V |

Diagnostic Procedure


UCS0061D

1. CHECK INPUT SIGNAL

Ⓜ With CONSULT-II

- Start engine.
- Select "MAIN SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Read out the value of "ISOLT3".


| Item name | Condition | Display value (Approx.) |
|-----------|---|-------------------------|
| ISOLT3 | Secondary pressure low - Secondary pressure high | 0.8 - 0.0 A |

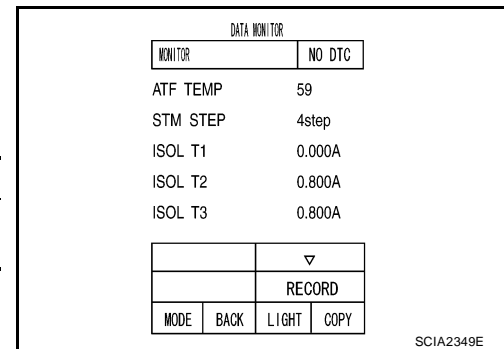

⊗ Without CONSULT-II

- Start engine.
- Check voltage between TCM connector terminal and ground.

| Name | Connector | Terminal | Condition | Voltage (Approx.) |
|---|-----------|------------|---|-------------------|
| Pressure control solenoid valve B (Secondary pressure solenoid valve) | E31 | 2 - ground | Release your foot from the accelerator pedal. | 5.0 - 7.0 V |
| | | | Press the accelerator pedal all the way down. | 3.0 - 4.0 V |

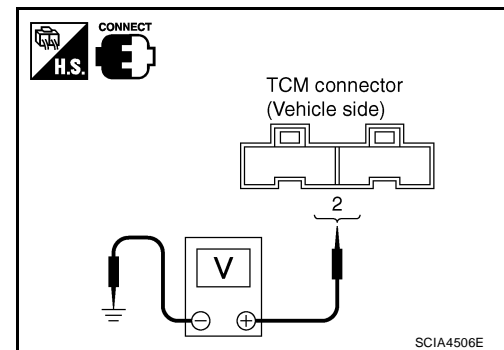

- Turn ignition switch OFF.
- Disconnect TCM connector.
- Check if there is continuity between connector terminal and ground.

OK or NG

- OK >> GO TO 5.
NG >> GO TO 2.

DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)


2. CHECK PRESSURE CONTROL SOLENOID VALVE B (SECONDARY PRESSURE SOLENOID VALVE) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check resistance between TCM connector terminal and ground.

| Solenoid valve | Connector | Terminal | Resistance (Approx.) |
|---|-----------|------------|----------------------|
| Pressure control solenoid valve B (Secondary pressure solenoid valve) | E31 | 2 - Ground | 2.5 - 5.0 Ω |

OK or NG

- OK >> GO TO 5.
 NG >> GO TO 3.

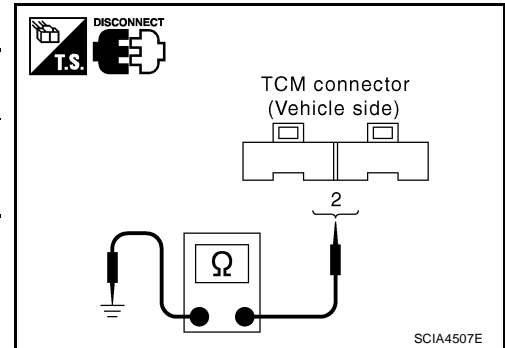


3. CHECK VALVE RESISTANCE

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

| Solenoid valve | Connector | Terminal | Resistance (Approx.) |
|---|-----------|------------|----------------------|
| Pressure control solenoid valve B (Secondary pressure solenoid valve) | F46 | 3 - Ground | 2.5 - 5.0 Ω |

OK or NG

- OK >> GO TO 4.
 NG >> Repair or replace damaged parts.

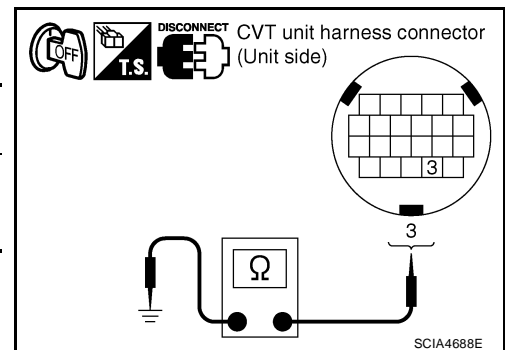

4. CHECK HARNESS BETWEEN TCM AND PRESSURE CONTROL SOLENOID VALVE B (SECONDARY PRESSURE SOLENOID VALVE)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

| Item | Connector | Terminal | Continuity |
|----------------------------|-----------|----------|------------|
| TCM connector | E31 | 2 | Yes |
| CVT unit harness connector | F46 | 3 | |

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

- OK >> GO TO 5.
 NG >> Repair or replace damaged parts.

5. CHECK DTC

Perform [CVT-124, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
 NG >> GO TO 6.

A
B
CVT
D
E
F
G
H
I
J
K
L
M

DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)

6. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> 1. Repair or replace damaged parts.

2. Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .

Component Inspection


PRESSURE CONTROL SOLENOID VALVE B (SECONDARY PRESSURE SOLENOID VALVE)

UCS0061E

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

| Solenoid Valve | Connector | Terminal | Resistance (Approx.) |
|---|-----------|------------|----------------------|
| Pressure control solenoid valve B (Secondary pressure solenoid valve) | F46 | 3 - Ground | 2.5 - 5.0 Ω |

4. If NG, replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .

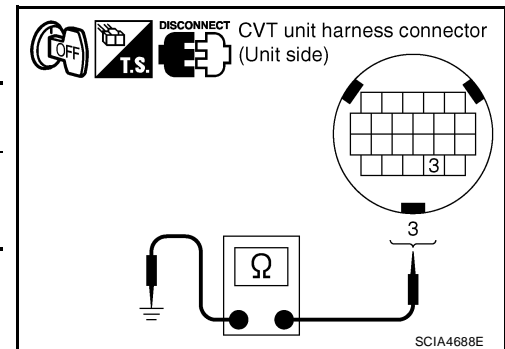

DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)

DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)

PFPP:31936

Description

UCS0061N

- The transmission fluid pressure sensor A (secondary pressure sensor) is included in the control valve assembly.
- The transmission fluid pressure sensor A (secondary pressure sensor) detects secondary pressure of CVT and sends TCM the signal.

CONSULT-II Reference Value

UCS0061O

Remarks: Specification data are reference values.

| Item name | Condition | Display value (Approx.) |
|--------------|-------------------|-------------------------|
| SEC HYDR SEN | "N" position idle | 1.0 V |
| SEC PRESS | | 0.8 MPa |

On Board Diagnosis Logic

UCS0061P

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0840 TR PRS SENS/A CIRC" with CONSULT-II is detected when TCM detects an improper voltage drop when it receives the sensor signal.

Possible Cause

UCS0061Q

- Transmission fluid pressure sensor A (Secondary pressure sensor)
- Harness or connectors
(Switch circuit is open or shorted.)

DTC Confirmation Procedure

UCS0061R


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that output voltage of line temperature sensor is within the range below.
ATF TEMP SEN: 1.0 - 2.0 V
If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)
3. Start engine and wait for at least 5 consecutive seconds.
4. If DTC is detected, go to [CVT-131, "Diagnostic Procedure"](#).

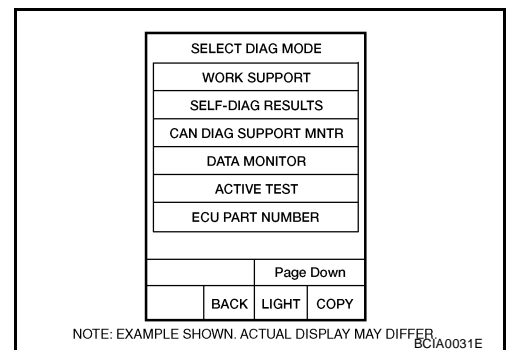

WITH GST

Follow the procedure "WITH CONSULT-II".



DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)

Wiring Diagram — CVT — SECPS

UCS0061S

CVT-SECPS-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

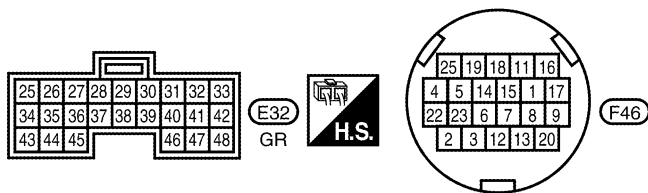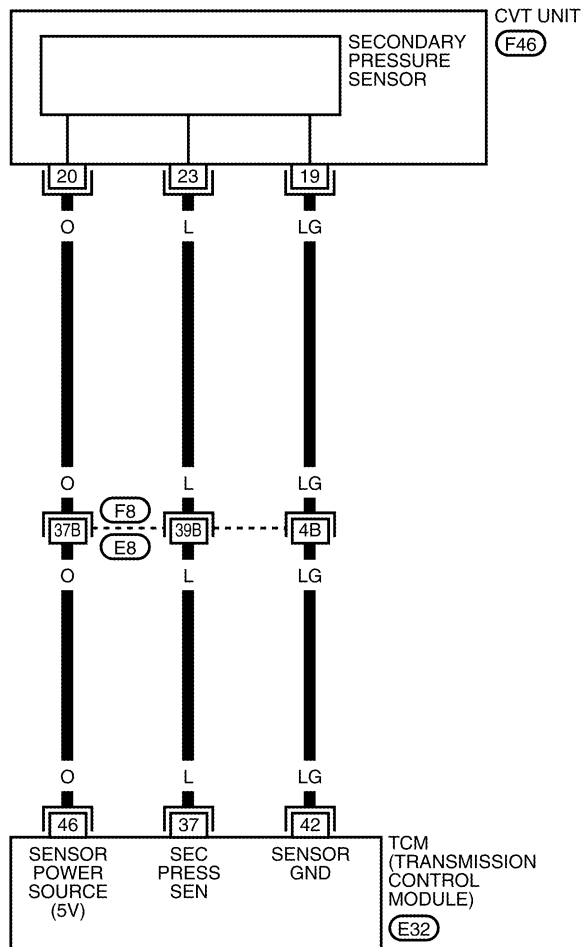





REFER TO THE FOLLOWING.
 (F8) - SUPER MULTIPLE JUNCTION (SMJ)

BCWA0677E

DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)

TCM terminal data are reference values, measured between each terminal and ground.

| Terminal | Wire color | Item | Condition | Data (Approx.) |
|----------|------------|--|---|--------------------------------|
| 37 | L | Transmission fluid pressure sensor A (Secondary pressure sensor) |  and  | "N" position idle 1.0 V |
| 42 | LG | Sensor ground | Always | 0 V |
| 46 | O | Sensor power |  | — 5.0 V |
| | | |  | — 0 V |

Diagnostic Procedure


UCS0061T

1. CHECK INPUT SIGNAL

Ⓜ With CONSULT-II

- Start engine.
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Start vehicle and read out the value of "SEC HYDR SEN".

| Item name | Condition | Display value (Approx.) |
|--------------|-------------------|-------------------------|
| SEC HYDR SEN | "N" position idle | 1.0 V |

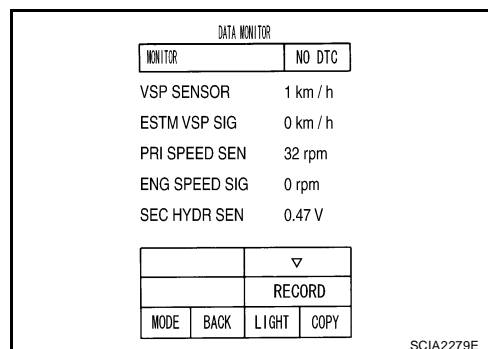

SCIA2279E


⊗ Without CONSULT-II

- Start engine.
- Check voltage between TCM connector terminal and ground.

| Name | Connector | Terminal | Condition | Voltage (Approx.) |
|--|-----------|-------------|-------------------|-------------------|
| Transmission fluid pressure sensor A (Secondary pressure sensor) | E32 | 37 - Ground | "N" position idle | 1.0 V |

OK or NG

- OK >> GO TO 5.
 NG >> GO TO 2.

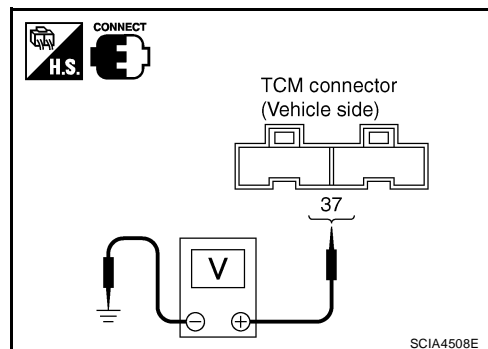

SCIA4508E

DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)


2. CHECK SENSOR POWER AND SENSOR GROUND

1. Turn ignition switch ON. (Do not start engine)
2. Check voltage between TCM connector terminals.

| Item | Connector | Terminal | Data (Approx.) |
|---------------|-----------|----------|----------------|
| TCM connector | E32 | 46 - 42 | 5.0 V |

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 3.

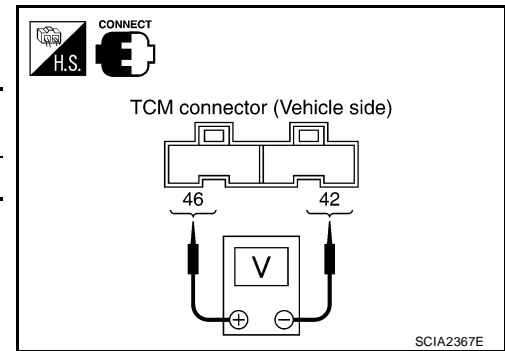

3. CHECK HARNESS BETWEEN TCM AND CVT UNIT HARNESS CONNECTOR (SENSOR POWER AND SENSOR GROUND)


1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminals and CVT unit harness connector terminals.

| Item | Connector | Terminal | Continuity |
|----------------------------|-----------|----------|------------|
| TCM | E32 | 42 | Yes |
| CVT unit harness connector | F46 | 19 | |
| TCM | E32 | 46 | Yes |
| CVT unit harness connector | F46 | 20 | |

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

- OK >> Replace TCM. Refer to [CVT-9, "Service After Replacing TCM and Transaxle Assembly"](#).
 NG >> Repair open circuit or short to ground or short to power in harness or connectors.

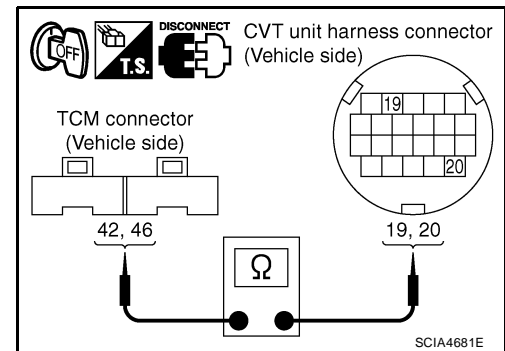

4. CHECK HARNESS BETWEEN TCM AND TRANSMISSION FLUID PRESSURE SENSOR A (SECONDARY PRESSURE SENSOR)


1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

| Item | Connector | Terminal | Continuity |
|----------------------------|-----------|----------|------------|
| TCM | E32 | 37 | Yes |
| CVT unit harness connector | F46 | 23 | |

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

- OK >> GO TO 5.
 NG >> Repair open circuit or short to ground or short to power in harness or connectors.

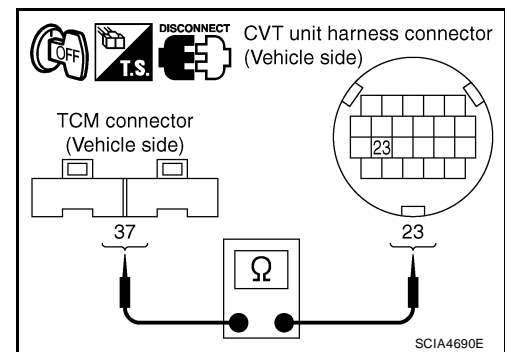

DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)

5. CHECK DTC

Perform [CVT-129, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 6.

6. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .
NG >> Repair or replace damaged parts.

A
B
CVT
D
E
F
G
H
I
J
K
L
M

DTC P0841 PRESSURE SENSOR FUNCTION

DTC P0841 PRESSURE SENSOR FUNCTION

PF:31936

Description

UCS0061U

Using the engine load (throttle position), the primary pulley revolution speed, and the secondary pulley revolution speed as input signal, TCM changes the operating pressure of the primary pulley and the secondary pulley and changes the groove width of the pulley to control the gear ratio.

CONSULT-II Reference Value

UCS0061V

Remarks: Specification data are reference values.

| Item name | Condition | Display value (Approx.) |
|--------------|-------------------|-------------------------|
| PRI HYDR SEN | "N" position idle | 0.7 V |
| SEC HYDR SEN | | 1.0 V |

On Board Diagnosis Logic

UCS0061W

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0841 PRESS SEN/FNCTN" with CONSULT-II is detected when correlation between the values of the secondary pressure sensor and the primary pressure sensor is out of specification.

Possible Cause

UCS0061X

- Transmission fluid pressure sensor A (Secondary pressure sensor)
- Transmission fluid pressure sensor B (Primary pressure sensor)
- Harness or connectors
(Sensor circuit is open or shorted.)

DTC Confirmation Procedure

UCS0061Y

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 12 consecutive seconds.
VEHICLE SPEED: 40 km/h (25 MPH) More than
RANGE: "D" position
3. If DTC is detected, go to [CVT-135, "Diagnostic Procedure"](#).

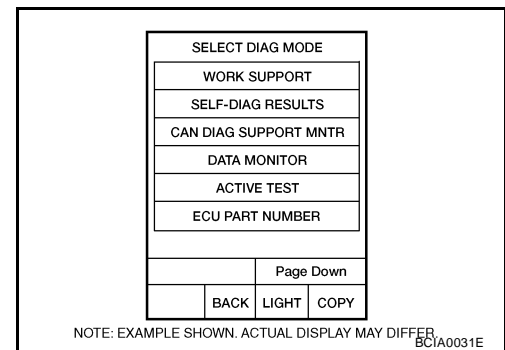

DTC P0841 PRESSURE SENSOR FUNCTION

UCS0061Z

Diagnostic Procedure

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction of the "U1000 CAN COMM CIRCUIT" indicated?

- YES >> Check CAN communication line. Refer to [CVT-68, "DTC U1000 CAN COMMUNICATION LINE"](#).
 NO >> GO TO 2.

2. CHECK INPUT SIGNALS

With CONSULT-II

- Start engine.
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Start vehicle and read out the value of "SEC HYDR SEN" and "PRI HYDR SEN".

| Item name | Condition | Display value (Approx.) |
|--------------|-------------------|-------------------------|
| PRI HYDR SEN | "N" position idle | 0.7 V |
| SEC HYDR SEN | | 1.0 V |

| DATA MONITOR | |
|----------------|---------|
| MONITOR | NO DTC |
| SEC HYDR SEN | 0.47 v |
| PRI HYDR SEN | 0.47 v |
| ATF TEMP SEN | 1.92 v |
| VIGN SEN | 10.7 v |
| ACC PEDAL OPEN | 0.0 / 8 |


| | |
|--------|------|
| △ | ▽ |
| RECORD | |
| MODE | BACK |
| LIGHT | COPY |

SCIA2277E

Without CONSULT-II

- Start engine.
- Check voltage between TCM connector terminals and ground.

| Name | Connector | Terminal | Condition | Voltage (Approx.) |
|--|-----------|-------------|-------------------|-------------------|
| Transmission fluid pressure sensor B (Primary pressure sensor) | E32 | 41 - Ground | "N" position idle | 0.7 V |
| Transmission fluid pressure sensor A (Secondary pressure sensor) | | 37 - Ground | | 1.0 V |

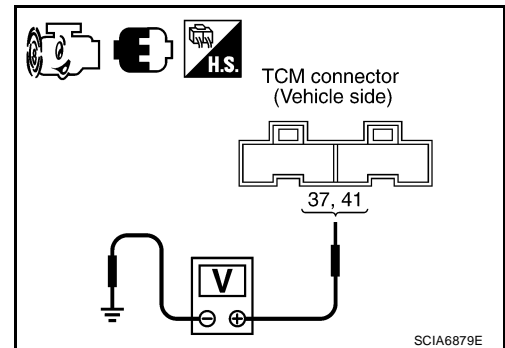

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 3.

3. CHECK LINE PRESSURE

Perform line pressure test. Refer to [CVT-45, "LINE PRESSURE TEST"](#).

OK or NG

- OK >> GO TO 4.
 NG >> Repair or replace damaged parts. Refer to [CVT-46, "Judgement of Line Pressure Test"](#).

4. CHECK TRANSMISSION FLUID PRESSURE SENSOR A (SECONDARY PRESSURE SENSOR) SYSTEM AND TRANSMISSION FLUID PRESSURE SENSOR B (PRIMARY PRESSURE SENSOR) SYSTEM

Check transmission fluid pressure sensor A (secondary pressure sensor) system and transmission fluid pressure sensor B (primary pressure sensor) system. Refer to [CVT-129, "DTC P0840 TRANSMISSION FLUID"](#).

DTC P0841 PRESSURE SENSOR FUNCTION

[PRESSURE SENSOR A CIRCUIT \(SEC PRESSURE SENSOR\)](#) , [CVT-137, "DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT \(PRI PRESSURE SENSOR\)"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.

5. DETECT MALFUNCTIONING ITEM

Check the following:

- Pressure control solenoid valve A (Line pressure solenoid valve). Refer to [CVT-117, "Component Inspection"](#) .
- Pressure control solenoid valve B (Secondary pressure solenoid valve). Refer to [CVT-128, "Component Inspection"](#) .
- Step motor. Refer to [CVT-167, "Component Inspection"](#) .

OK or NG6

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

6. CHECK DTC

Perform [CVT-134, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace TCM or transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .

DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)

DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)

PF3:31936

Description

UCS00620

- The transmission fluid pressure sensor B (primary pressure sensor) is included in the control valve assembly.
- The transmission fluid pressure sensor B (primary pressure sensor) detects primary pressure of CVT and sends TCM the signal.

A
B
CVT

CONSULT-II Reference Value

UCS00621

Remarks: Specification data are reference values.

| Item name | Condition | Display value (Approx.) |
|--------------|-------------------|-------------------------|
| PRI HYDR SEN | "N" position idle | 0.7 V |

D

On Board Diagnosis Logic

UCS00622

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0845 TR PRS SENS/B CIRC" with CONSULT-II is detected under the following conditions.
 - When TCM detects an improper voltage drop when it receives the sensor signal.
 - When TCM compares target value with monitor value and detects an irregularity.

E

Possible Cause

UCS00623

- Transmission fluid pressure sensor B (Primary pressure sensor)
- Harness or connectors
(Sensor circuit is open or shorted.)

F

G

H

DTC Confirmation Procedure

UCS00624

NOTE:


If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

J

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that output voltage of line temperature sensor is within the range below.
ATF TEMP SEN: 1.0 - 2.0 V
If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)
3. Start engine and wait for at least 5 consecutive seconds.
4. If DTC is detected, go to [CVT-139, "Diagnostic Procedure"](#).

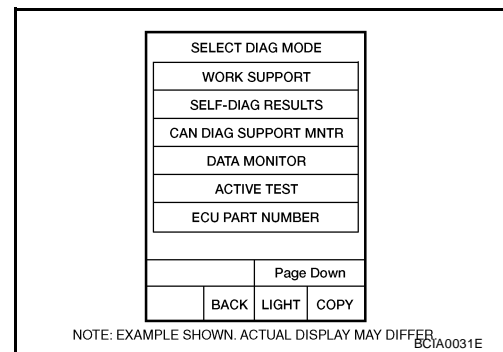

K

L

M

WITH GST

Follow the procedure "WITH CONSULT-II".



DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)

Wiring Diagram — CVT — PRIPS

UCS00625

CVT-PRIPS-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

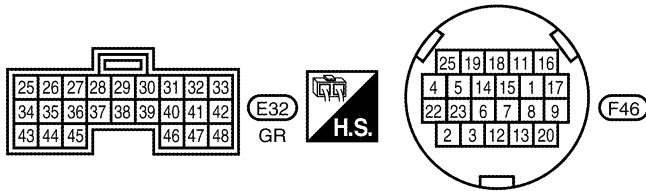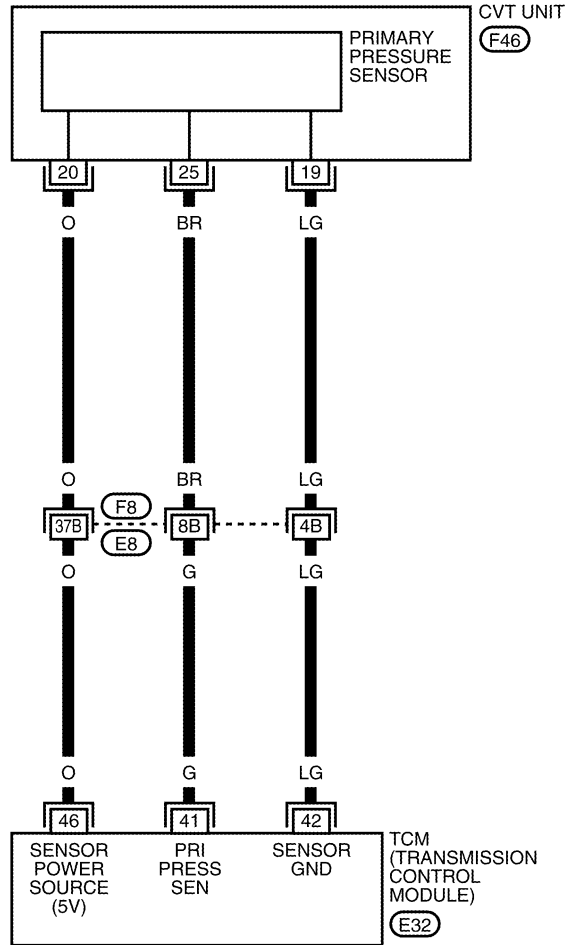





REFER TO THE FOLLOWING.
(F8) - SUPER MULTIPLE JUNCTION (SMJ)

BCWA0678E

DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)

TCM terminal data are reference values, measured between each terminal and ground.

| Terminal | Wire color | Item | Condition | Data (Approx.) |
|----------|------------|--|---|--------------------------------|
| 41 | G | Transmission fluid pressure sensor B (Primary pressure sensor) |  and  | "N" position idle 0.7 V |
| 42 | LG | Sensor ground | Always | 0 V |
| 46 | O | Sensor power |  | — 5.0 V |
| | | |  | — 0 V |

Diagnostic Procedure

UCS00626

1. CHECK INPUT SIGNAL

Ⓜ With CONSULT-II

- Start engine.
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Start vehicle and read out the value of "PRI HYDR SEN".

DATA MONITOR

| MONITOR | NO DTC |
|----------------|---------|
| SEC HYDR SEN | 0.47 v |
| PRI HYDR SEN | 0.47 v |
| ATF TEMP SEN | 1.92 v |
| VIGN SEN | 10.7 v |
| ACC PEDAL OPEN | 0.0 / 8 |

| | |
|--------|------|
| △ | ▽ |
| RECORD | |
| MODE | BACK |
| LIGHT | COPY |


SCIA2277E

| Item name | Condition | Display value (Approx.) |
|--------------|-------------------|-------------------------|
| PRI HYDR SEN | "N" position idle | 0.7 V |

⊗ Without CONSULT-II

- Start engine.
- Check voltage between TCM connector terminal and ground.

| Name | Connector | Terminal | Condition | Voltage (Approx.) |
|--|-----------|-------------|-------------------|-------------------|
| Transmission fluid pressure sensor B (Primary pressure sensor) | E32 | 41 - Ground | "N" position idle | 0.7 V |

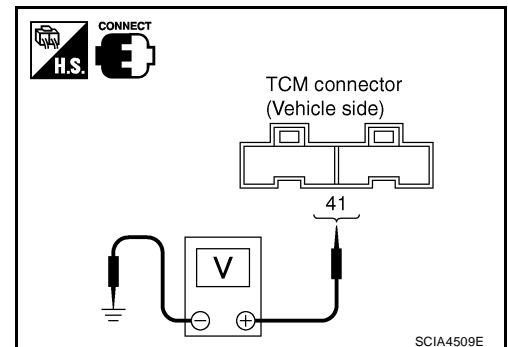

OK or NG

- OK >> GO TO 5.
 NG >> GO TO 2.

DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)


2. CHECK SENSOR POWER AND SENSOR GROUND

1. Turn ignition switch ON. (Do not start engine)
2. Check voltage between TCM connector terminals.

| Item | Connector | Terminal | Data (Approx.) |
|---------------|-----------|----------|----------------|
| TCM connector | E32 | 46 - 42 | 5.0 V |

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 3.

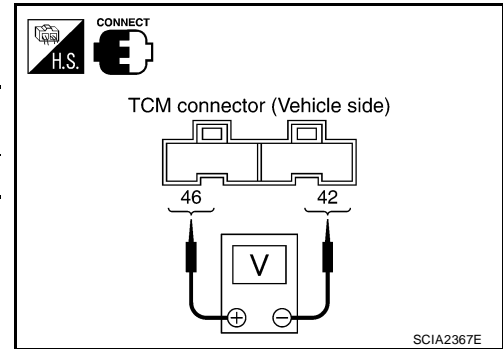

3. CHECK HARNESS BETWEEN TCM AND CVT UNIT HARNESS CONNECTOR (SENSOR POWER AND SENSOR GROUND)


1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminals and CVT unit harness connector terminals.

| Item | Connector | Terminal | Continuity |
|----------------------------|-----------|----------|------------|
| TCM | E32 | 42 | Yes |
| CVT unit harness connector | F46 | 19 | |
| TCM | E32 | 46 | Yes |
| CVT unit harness connector | F46 | 20 | |

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

- OK >> Replace TCM. Refer to [CVT-9, "Service After Replacing TCM and Transaxle Assembly"](#).
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

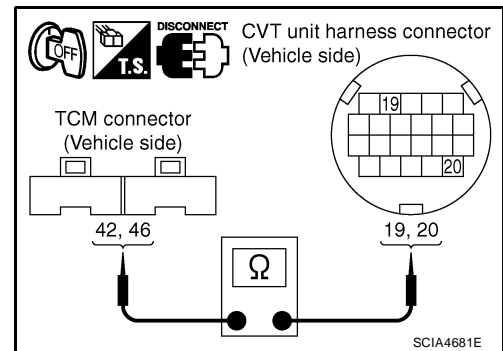

4. CHECK HARNESS BETWEEN TCM AND TRANSMISSION FLUID PRESSURE SENSOR B (PRIMARY PRESSURE SENSOR)


1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit harness connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

| Item | Connector | Terminal | Continuity |
|----------------------------|-----------|----------|------------|
| TCM | E32 | 41 | Yes |
| CVT unit harness connector | F46 | 25 | |

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

- OK >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

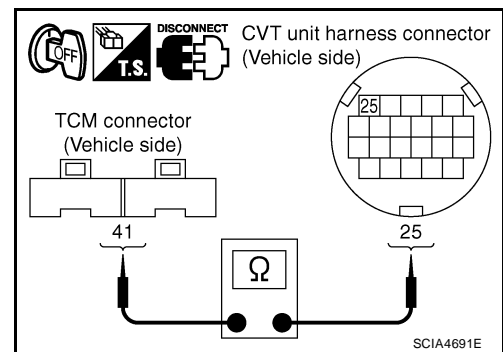

DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)

5. CHECK DTC

Perform [CVT-137, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 6.

6. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .
NG >> Repair or replace damaged parts.

A
B
CVT
D
E
F
G
H
I
J
K
L
M

DTC P0868 SECONDARY PRESSURE DOWN

DTC P0868 SECONDARY PRESSURE DOWN

PF:31941

Description

UCS00627

- The pressure control solenoid valve B (secondary pressure solenoid valve) is included in the control valve assembly.
- The pressure control solenoid valve B (secondary pressure solenoid valve) regulates the secondary pressure to suit the driving condition in response to a signal sent from the TCM.

CONSULT-II Reference Value

UCS00628

Remarks: Specification data are reference values.

| Item name | Condition | Display value (Approx.) |
|-----------|-------------------|-------------------------|
| SEC PRESS | "N" position idle | 0.8 MPa |

On Board Diagnosis Logic

UCS00629

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P0868 SEC/PRESS DOWN" with CONSULT-II is detected when secondary fluid pressure is too low compared with the commanded value while driving.

Possible Cause

UCS0062A

- Harness or connectors
(Solenoid circuit is open or shorted.)
- Pressure control solenoid valve B (Secondary pressure solenoid valve) system
- Transmission fluid pressure sensor A (Secondary pressure sensor)
- Line pressure control system

DTC Confirmation Procedure

UCS0062B

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that output voltage of CVT fluid temperature sensor is within the range below.
ATF TEMP SEN: 1.0 - 2.0 V
If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)
3. Start engine and maintain the following conditions for at least 10 consecutive seconds.
VEHICLE SPEED (accelerate slowly): 0 → 50 km/h (31 MPH)
ACC PEDAL OPEN: 0.5/8 - 1.0/8
RANGE: "D" position
4. If DTC is detected, go to [CVT-143, "Diagnostic Procedure"](#).

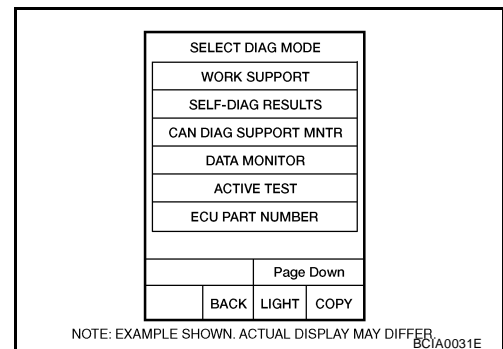

DTC P0868 SECONDARY PRESSURE DOWN

UCS0062C

Diagnostic Procedure

1. CHECK INPUT SIGNAL

With CONSULT-II

1. Start engine.
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start vehicle and read out the value of "SEC PRESS".

| Item name | Condition | Display value (Approx.) |
|-----------|-------------------|-------------------------|
| SEC PRESS | "N" position idle | 0.8 MPa |

OK or NG

- OK >> GO TO 5.
NG >> GO TO 2.

| DATA MONITOR | |
|----------------|-----------|
| MONITOR | NO DTC |
| GEAR RATIO | 2.37 |
| ACC PEDAL OPEN | 0.0 / 8 |
| VENG TRQ | 217.6 Nm |
| SEC PRESS | 0.000 MPa |
| PRI PRESS | 0.000 MPa |

| | |
|--------|------|
| △ | ▽ |
| RECORD | |
| MODE | BACK |
| LIGHT | COPY |

SCIA2366E

2. CHECK LINE PRESSURE

Perform line pressure test. Refer to [CVT-45, "LINE PRESSURE TEST"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts. Refer to [CVT-46, "Judgement of Line Pressure Test"](#).

3. DETECT MALFUNCTIONING ITEM

Check the following:

- Pressure control solenoid valve B (Secondary pressure solenoid valve). Refer to [CVT-128, "Component Inspection"](#).
- Pressure control solenoid valve A (Line pressure solenoid valve). Refer to [CVT-117, "Component Inspection"](#).

OK or NG

- OK >> GO TO 4.
NG >> Repair or replace damaged parts.

4. CHECK TRANSMISSION FLUID PRESSURE SENSOR A (SECONDARY PRESSURE SENSOR) SYSTEM

Check transmission fluid pressure sensor A (secondary pressure sensor) system. Refer to [CVT-129, "DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT \(SEC PRESSURE SENSOR\)"](#).

OK or NG

- OK >> GO TO 5.
NG >> Repair or replace damaged parts.

5. DETECT MALFUNCTIONING ITEM

Check the following:

- Power supply and ground circuit for TCM. Refer to [CVT-146, "Wiring Diagram — CVT — POWER"](#).
- The TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> GO TO 6.
NG >> Repair or replace damaged parts.

DTC P0868 SECONDARY PRESSURE DOWN

6. CHECK DTC

Perform [CVT-142, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .

DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)

DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)

PFP:31036

Description

UCS0062D

When the power supply to the TCM is cut OFF, for example because the battery is removed, and the self-diagnosis memory function stops, malfunction is detected.

NOTE:

Since "P1701 TCM-POWER SUPPLY" will be indicated when replacing TCM, perform diagnosis after erasing "SELF-DIAG RESULTS"

On Board Diagnosis Logic

UCS0062E

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1701 TCM-POWER SUPPLY" with CONSULT-II is detected when TCM does not receive the voltage signal from the battery power supply.
- This is not a malfunction message. (Whenever shutting OFF a power supply to the TCM, this message appears on the screen.)

Possible Cause

UCS0062F

Harness or connectors
(Battery or ignition switch and TCM circuit is open or shorted.)

DTC Confirmation Procedure

UCS0062G


NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Wait for at least 2 consecutive seconds.
4. If DTC is detected, go to [CVT-147, "Diagnostic Procedure"](#).

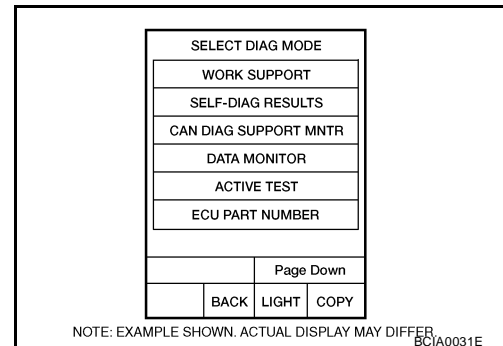



DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)

UCS0062H

Wiring Diagram — CVT — POWER

CVT-POWER-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

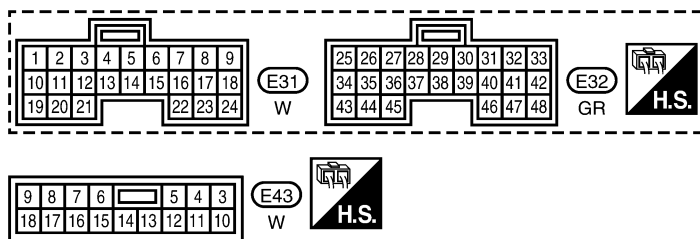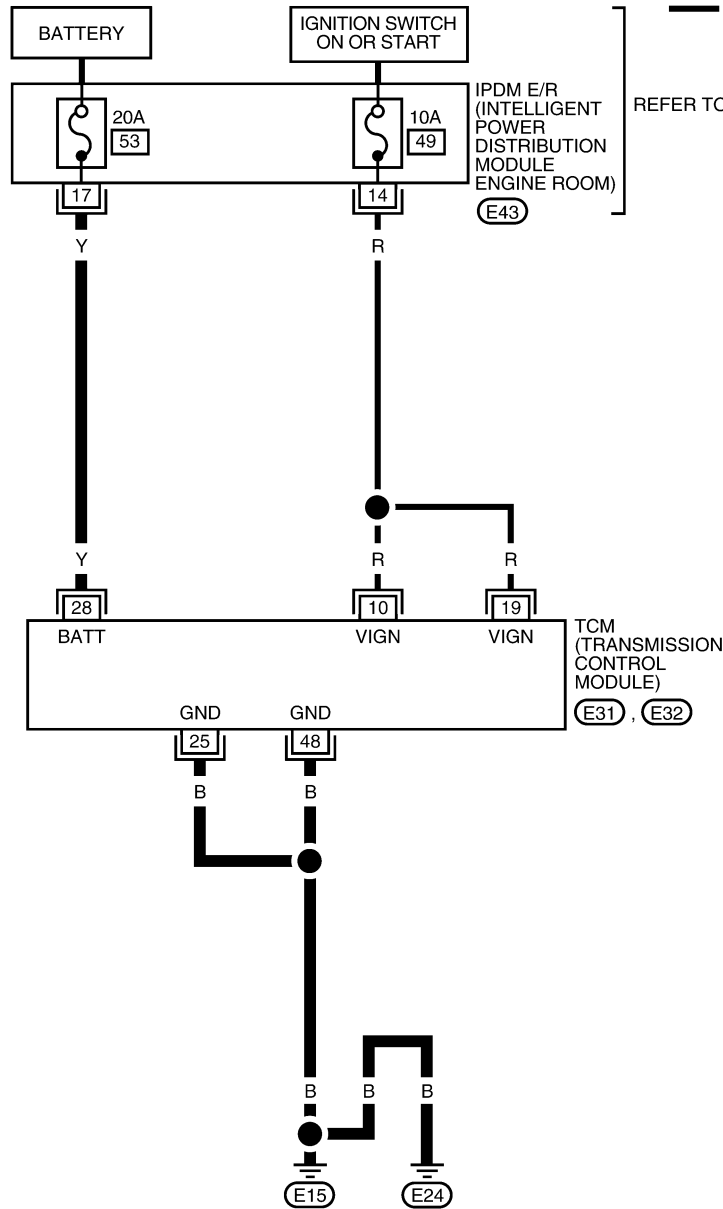





REFER TO THE FOLLOWING.
 (F8) - SUPER MULTIPLE JUNCTION (SMJ)

BCWA0679E

DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)

TCM terminals data are reference values, measured between each terminal and ground.


| Terminal | Wire color | Item | Condition | Data (Approx.) |
|----------|------------|-------------------------------|---|-----------------|
| 10 | R | Power supply |  | Battery voltage |
| | | |  | 0 V |
| 19 | R | Power supply |  | Battery voltage |
| | | |  | 0 V |
| 25 | B | Ground | Always | 0 V |
| 28 | Y | Power supply (memory back-up) | Always | Battery voltage |
| 48 | B | Ground | Always | 0 V |

Diagnostic Procedure

UCS00621

1. CHECK DTC

- Turn ignition switch ON. (Do not start engine.)
- Select "SELF-DIAG RESULTS" mode for "TRANSMISSION" with CONSULT-II.
- Erase self-diagnostic results. Refer to [CVT-32, "HOW TO ERASE DTC \(WITH CONSULT-II\)"](#).
- Turn ignition switch OFF, and wait for 5 seconds or more.
- Start engine.
- Confirm self-diagnostic results again. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#).

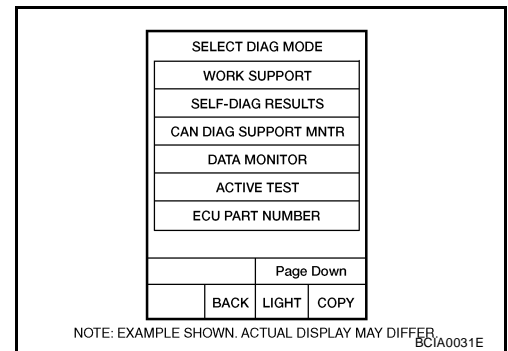

Is the "P1701 TCM-POWER SUPPLY" displayed?

YES >> GO TO 2.

NO >> **INSPECTION END**

2. CHECK TCM POWER SOURCE, STEP 1


- Turn ignition switch OFF.
- Check voltage between TCM connector terminal and ground.

| Name | Connector | Terminal | Condition | Voltage (Approx.) |
|-------------------------------|-----------|-------------|-----------|-------------------|
| Power supply (memory back-up) | E32 | 28 - Ground | Always | Battery voltage |

OK or NG

OK >> GO TO 3.



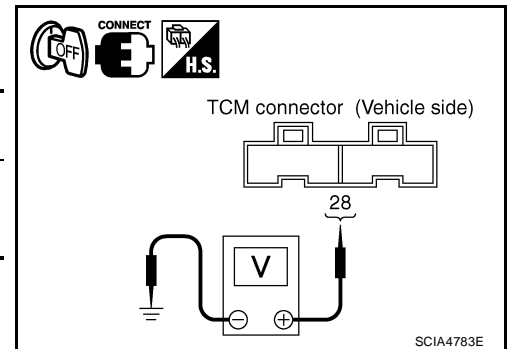

NG >> GO TO 4.




DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)

3. CHECK TCM POWER SOURCE, STEP 2

1. Turn ignition switch ON. (Do not start engine.)
2. Check voltage between TCM connector terminals and ground.

| Name | Connector | Terminal | Condition | Voltage (Approx.) |
|-------------------------------|-----------|-------------|---|-------------------|
| Power supply | E31 | 10 - Ground |  | Battery voltage |
| | | |  | 0 V |
| Power supply | | 19 - Ground |  | Battery voltage |
| | | |  | 0 V |
| Power supply (memory back-up) | E32 | 28 - Ground | Always | Battery voltage |

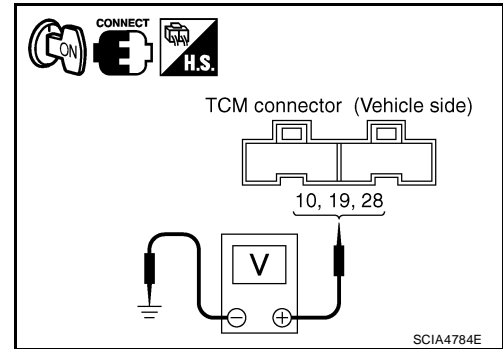

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 4.

4. DETECT MALFUNCTIONING ITEM

Check the following.

- Harness for short or open between battery and TCM connector terminal 28
- Harness for short or open between ignition switch and TCM connector terminal 10, 19
- 10 A fuse (No.49, located in the IPDM E/R)
- 20 A fuse (No.53, located in the IPDM E/R)
- Ignition switch. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace damaged parts.


5. CHECK TCM GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM connector terminals and ground.

| Name | Connector | Terminal | Continuity |
|--------|-----------|----------|------------|
| Ground | E32 | 25 | Yes |
| | | 48 | |

OK or NG

- OK >> GO TO 6.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

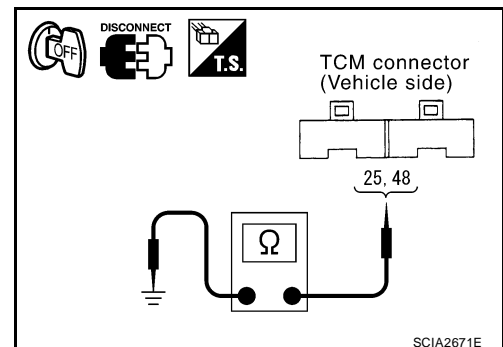

DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)

6. CHECK DTC

Perform [CVT-145, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**
NG >> GO TO 7.

7. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

A

B

CVT

D

E

F

G

H

I

J

K

L

M

DTC P1705 THROTTLE POSITION SENSOR

DTC P1705 THROTTLE POSITION SENSOR

PFP:22620

Description

UCS0062J

Electric throttle control actuator consists of throttle control motor, accelerator pedal position sensor, throttle position sensor etc. The actuator sends a signal to the ECM, and ECM sends the signal to TCM with CAN communication.

CONSULT-II Reference Value

UCS0062K

Remarks: Specification data are reference values.

| Item name | Condition | Display value (Approx.) |
|----------------|--|-------------------------|
| ACC PEDAL OPEN | Released accelerator pedal - Fully depressed accelerator pedal | 0.0/8 - 8.0/8 |

On Board Diagnosis Logic

UCS0062L

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1705 TP SEN/CIRC A/T" with CONSULT-II is detected when TCM does not receive the proper accelerator pedal position signals (input by CAN communication) from ECM.

Possible Cause

UCS0062M

- ECM
- Harness or connectors
(CAN communication line is open or shorted.)

DTC Confirmation Procedure

UCS0062N


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Depress accelerator pedal fully and release it, then wait for 5 seconds.
4. If DTC is detected, go to [CVT-151, "Diagnostic Procedure"](#).

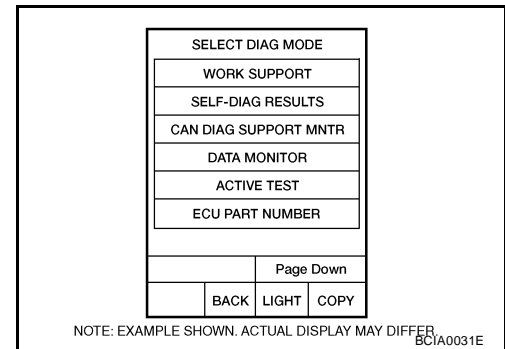

DTC P1705 THROTTLE POSITION SENSOR

UCS00620

Diagnostic Procedure

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis check. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction of the "U1000 CAN COMM CIRCUIT" indicated?

YES >> Check the CAN communication line. Refer to [CVT-68, "DTC U1000 CAN COMMUNICATION LINE"](#).

NO >> GO TO 2.

2. CHECK INPUT SIGNAL

With CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Read out the value of "ACC PEDAL OPEN".

| Item name | Condition | Display value (Approx.) |
|----------------|--|-------------------------|
| ACC PEDAL OPEN | Release accelerator pedal. | 0.0/8 |
| | ↓ Fully depressed accelerator pedal | ↓ 8.0/8 |

| DATA MONITOR | |
|----------------|---------|
| MONITOR | NO DTC |
| SEC HYDR SEN | 0.47 v |
| PRI HYDR SEN | 0.47 v |
| ATF TEMP SEN | 1.92 v |
| VIGN SEN | 10.7 v |
| ACC PEDAL OPEN | 0.0 / 8 |

| | |
|--------|------|
| △ | ▽ |
| RECORD | |
| MODE | BACK |
| LIGHT | COPY |

SCIA2277E

OK or NG

OK >> GO TO 4.

NG >> GO TO 3.

3. CHECK DTC WITH ECM

With CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Select "SELF-DIAG RESULTS" mode for "ENGINE" with CONSULT-II. Refer to [EC-116, "SELF-DIAG RESULTS MODE"](#).

OK or NG

OK >> GO TO 4.

NG >> Check the DTC Detected Item. Go to [EC-116, "SELF-DIAG RESULTS MODE"](#).

| SELECT SYSTEM | |
|---------------|--|
| ENGINE | |
| A/T | |
| ABS | |
| AIR BAG | |
| IPDM E/R | |
| BCM | |

| | | |
|-----------|-------|------|
| Page Down | | |
| BACK | LIGHT | COPY |

NOTE: EXAMPLE SHOWN. ACTUAL DISPLAY MAY DIFFER.
BCIA0030E

4. CHECK DTC

Perform [CVT-150, "DTC Confirmation Procedure"](#).

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

DTC P1722 ESTM VEHICLE SPEED SIGNAL

DTC P1722 ESTM VEHICLE SPEED SIGNAL

PF:47660

Description

UCS0062P

The vehicle speed signal is transmitted from ABS actuator and electric unit (control unit) to TCM by CAN communication line.

CONSULT-II Reference Value

UCS0062Q

Remarks: Specification data are reference values.

| Item name | Condition | Display value |
|---------------|----------------|--|
| ESTM VSP SIG | During driving | Approximately matches the speedometer reading. |
| VEHICLE SPEED | | |

On Board Diagnosis Logic

UCS0062R

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1722 ESTM VEH SPD SIG" with CONSULT-II is detected when TCM does not receive the proper vehicle speed signal (input by CAN communication) from ABS actuator and electric unit (control unit).

Possible Cause

UCS0062S

- Harness or connectors
(Sensor circuit is open or shorted.)
- ABS actuator and electric unit (control unit)

DTC Confirmation Procedure

UCS0062T

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 5 consecutive seconds.
ACC PEDAL OPEN: 1.0/8 or less
VEHICLE SPEED SE: 30 km/h (17 MPH) or more
4. If DTC is detected, go to [CVT-153, "Diagnostic Procedure"](#).

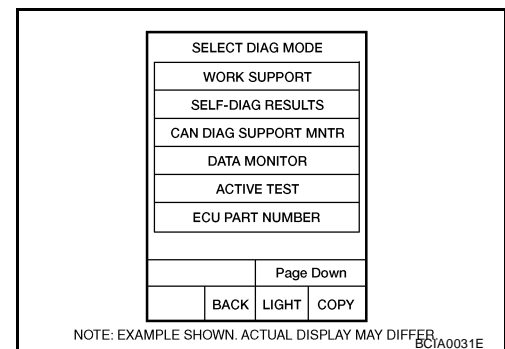

DTC P1722 ESTM VEHICLE SPEED SIGNAL

UCS0062U

Diagnostic Procedure

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis check. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction of the "U1000 CAN COMM CIRCUIT" indicated?

- YES >> Check CAN communication line. Refer to [CVT-68, "DTC U1000 CAN COMMUNICATION LINE"](#).
NO >> GO TO 2.

2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform ABS actuator and electric unit (control unit) self-diagnosis check. Refer to [BRC-20, "SELF-DIAGNOSIS"](#).

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace damaged parts.

3. CHECK INPUT SIGNALS

Ⓜ With CONSULT-II

1. Start engine.
2. Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Drive vehicle and read out the value of "VEHICLE SPEED" and "ESTM VSP SIG".

| Item name | Condition | Display value |
|---------------|----------------|--|
| ESTM VSP SIG | During driving | Approximately matches the speedometer reading. |
| VEHICLE SPEED | | |

4. Check if there is a great difference between the two values.

| DATA MONITOR | | | |
|---------------|----------|-------|------|
| MONITOR | NO DTC | | |
| VEHICLE SPEED | 1 km / h | | |
| ESTM VSP SIG | 0 km / h | | |
| ▽ | | | |
| RECORD | | | |
| MODE | BACK | LIGHT | COPY |

SCIA4510E

OK or NG

- OK >> GO TO 5.
NG >> GO TO 4.

4. CHECK TCM

Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#).

OK or NG

- OK >> GO TO 5.
NG >> Repair or replace damaged parts.

5. CHECK DTC

Perform [CVT-152, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 2.

DTC P1723 CVT SPEED SENSOR FUNCTION

DTC P1723 CVT SPEED SENSOR FUNCTION

PF3:31907

Description

UCS0062V

- The input speed sensor (primary speed sensor) is included in the control valve assembly.
- The vehicle speed sensor CVT [output speed sensor (secondary speed sensor)] detects the revolution of the parking gear and generates a pulse signal. The pulse signal is sent to the TCM, which converts it into vehicle speed.
- The input speed sensor (primary speed sensor) detects the primary pulley revolution speed and sends a signal to the TCM.

On Board Diagnosis Logic

UCS0062W

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code “P1723 CVT SPD SEN/FNCTN” with CONSULT-II is detected when there is a great difference between the vehicle speed signal and the secondary speed sensor signal.

CAUTION:

One of the “P0720 VEH SPD SEN/CIR AT”, the “P0715 INPUT SPD SEN/CIRC” or the “P0725 ENGINE SPEED SIG” is displayed with the DTC at the same time.

Possible Cause

UCS0062X

- Harness or connectors
(Sensor circuit is open or shorted.)
- Output speed sensor (Secondary speed sensor)
- Input speed sensor (Primary speed sensor)
- Engine speed signal system

DTC Confirmation Procedure

UCS0062Y

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch “ERASE” on “SELF-DIAG RESULTS” and then perform the following procedure to confirm the malfunction is eliminated.

④ WITH CONSULT-II

1. Turn ignition switch ON and select “DATA MONITOR” mode for “TRANSMISSION” with CONSULT-II.

2. Start engine and maintain the following conditions for at least 5 consecutive seconds.

VEHICLE SPEED SE: 10 km/h (6 MPH) or more


ACC PEDAL OPEN: More than 1.0/8

RANGE: “D” position

ENG SPEED: 450 rpm or more

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

3. If DTC is detected, go to [CVT-155, "Diagnostic Procedure"](#) .

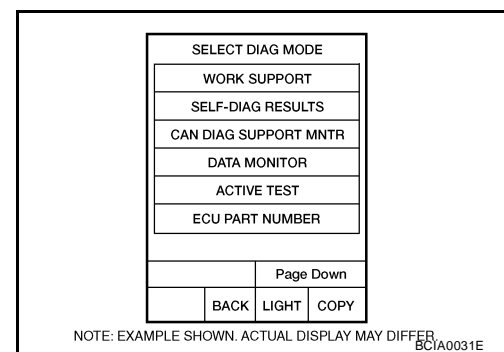

DTC P1723 CVT SPEED SENSOR FUNCTION

UCS0062Z

Diagnostic Procedure

1. CHECK STEP MOTOR FUNCTION

Perform the self-diagnosis check. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is a malfunction in the step motor function indicated in the results?

YES >> Repair or replace damaged parts. (Check the step motor function. Refer to [CVT-168, "DTC P1778 STEP MOTOR - FUNCTION"](#) .)

NO >> GO TO 2.

2. CHECK OUTPUT SPEED SENSOR (SECONDARY SPEED SENSOR SYSTEM) AND INPUT SPEED SENSOR (PRIMARY SPEED SENSOR) SYSTEM

Check output speed sensor (secondary speed sensor) system and input speed sensor (primary speed sensor) system. Refer to [CVT-95, "DTC P0720 VEHICLE SPEED SENSOR CVT \(SECONDARY SPEED SENSOR\)"](#) , [CVT-90, "DTC P0715 INPUT SPEED SENSOR CIRCUIT \(PRI SPEED SENSOR\)"](#) .

OK or NG

OK >> GO TO 3.

NG >> Repair or replace damaged parts.

3. CHECK ENGINE SPEED SIGNAL SYSTEM

Check engine speed signal system. Refer to [CVT-101, "DTC P0725 ENGINE SPEED SIGNAL"](#) .

OK or NG

OK >> GO TO 4.

NG >> Repair or replace damaged parts. Refer to [EC-576, "IGNITION SIGNAL"](#) .

4. DETECT MALFUNCTIONING ITEM

Check the following:

- Power supply and ground circuit for TCM. Refer to [CVT-145, "DTC P1701 TRANSMISSION CONTROL MODULE \(POWER SUPPLY\)"](#) .
- The TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> GO TO 5.

NG >> Repair or replace damaged parts.

5. CHECK DTC

Perform [CVT-154, "DTC Confirmation Procedure"](#) .

OK or NG

OK >> **INSPECTION END**

NG >> Replace TCM or transaxle assembly. Refer to [CVT-9, "Service After Replacing TCM and Transaxle Assembly"](#) , [CVT-207, "Removal and Installation"](#) .

DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM

DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM

PF#:23710

Description

UCS00630

Electric throttle control actuator consists of throttle control motor, accelerator pedal position sensor, throttle position sensor etc. The actuator sends a signal to the ECM, and ECM sends the signal to TCM with CAN communication.

On Board Diagnosis Logic

UCS00631

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1726 ELEC TH CONTROL" with CONSULT-II is detected when the electronically controlled throttle for ECM is malfunctioning.

Possible Cause

UCS00632

Harness or connectors
(Sensor circuit is open or shorted.)

DTC Confirmation Procedure

UCS00633


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and let it idle for 5 second.
4. If DTC is detected, go to [CVT-157, "Diagnostic Procedure"](#).

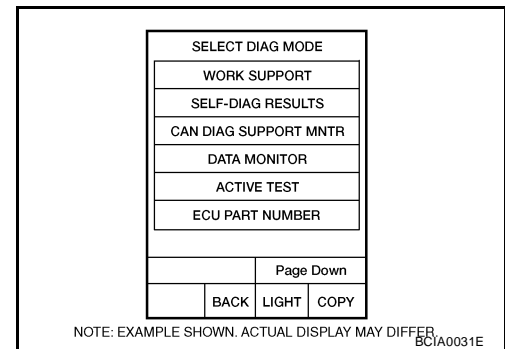

DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM

UCS00634

Diagnostic Procedure


1. CHECK DTC WITH ECM

With CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "SELF-DIAG RESULTS" mode for "ENGINE" with CONSULT-II. Refer to [EC-116, "SELF-DIAG RESULTS MODE"](#).

OK or NG

- OK >> GO TO 2.
NG >> Check the DTC Detected Item. Refer to [EC-116, "SELF-DIAG RESULTS MODE"](#).
- If CAN communication line is detected, go to [CVT-68, "DTC U1000 CAN COMMUNICATION LINE"](#).

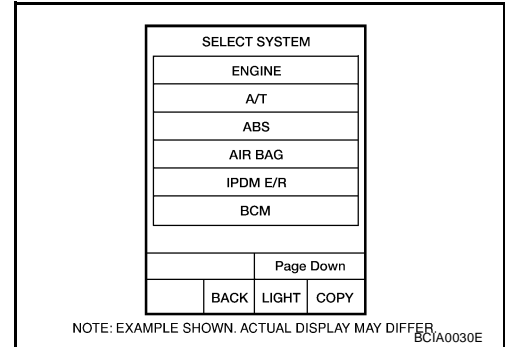

2. CHECK DTC

Perform [CVT-156, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 3.

3. DETECT MALFUNCTIONING ITEM

Check the following:

- The TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace TCM. Refer to [CVT-9, "Service After Replacing TCM and Transaxle Assembly"](#).
NG >> Repair or replace damaged parts.

DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT

DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT

PF3:31941

Description

UCS00635

- The lock-up select solenoid valve is included in the control valve assembly.
- The lock-up select solenoid valve controls lock-up clutch pressure or forward clutch pressure (reverse brake pressure).
- When controlling lock-up clutch, the valve is turned OFF. When controlling forward clutch, it is turned ON.

CONSULT-II Reference Value

UCS00636

| Item name | Condition | Display value |
|---------------|---|---------------|
| LUSEL SOL OUT | Selector lever in "P" and "N" positions | ON |
| | Wait at least for 5 seconds with the selector lever in "R", "D" and "L" positions | OFF |

On Board Diagnosis Logic

UCS00637

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1740 LU-SLCT SOL/CIRC" with CONSULT-II is detected under the following conditions.
 - When TCM compares target value with monitor value and detects an irregularity.

Possible Cause

UCS00638

- Lock-up select solenoid valve
- Harness or connectors
(Solenoid circuit is open or shorted.)

DTC Confirmation Procedure

UCS00639

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 5 consecutive seconds.
**RANGE: "D" position and "N" position
(At each time, wait for 5 seconds.)**
4. If DTC is detected, go to [CVT-160, "Diagnostic Procedure"](#).

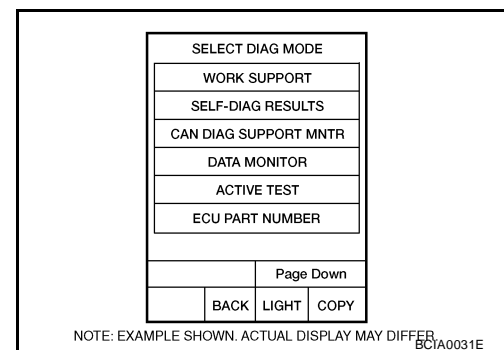


WITH GST

Follow the procedure "WITH CONSULT-II".

DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT

TCM terminal data are reference values, measured between each terminal and ground.

| Terminal | Wire color | Item | Condition | Data (Approx.) |
|----------|------------|-------------------------------|---|-----------------|
| 4 | BR | Lock-up select solenoid valve |  | Battery voltage |
| | | | Wait at least for 5 seconds with the selector lever in "R", "D" and "L" positions | 0 V |


Diagnostic Procedure

UCS0063B

1. CHECK INPUT SIGNAL

Ⓜ With CONSULT-II

- Turn ignition switch ON.
- Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Read out the value of "LUSEL SOL OUT".

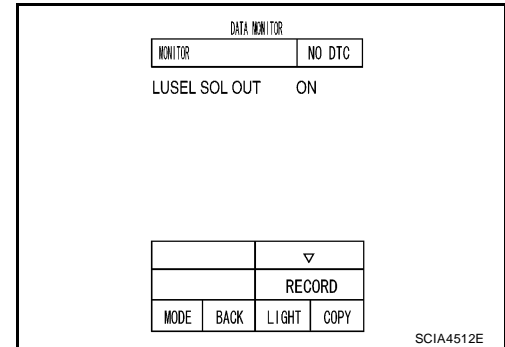


| Item name | Condition | Display value |
|---------------|---|---------------|
| LUSEL SOL OUT | Selector lever in "P" and "N" positions | ON |
| | Wait at least for 5 seconds with the selector lever in "R", "D" and "L" positions | OFF |

ⓧ Without CONSULT-II

- Turn ignition switch ON.
- Check voltage between TCM connector terminal and ground.

| Name | Connector | Terminal | Condition | Voltage (Approx.) |
|-------------------------------|-----------|------------|---|-------------------|
| Lock-up select solenoid valve | E31 | 4 - Ground | Selector lever in "P" and "N" positions | Battery voltage |
| | | | Wait at least for 5 seconds with the selector lever in "R", "D" and "L" positions | 0 V |

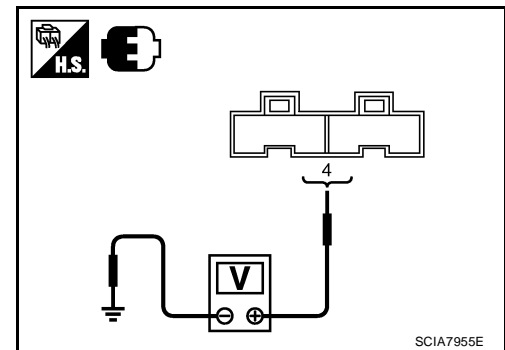

- Turn ignition switch OFF.
- Disconnect the TCM connector.
- Check if there is continuity between connector terminal and ground.

OK or NG

- OK >> GO TO 5.
 NG >> GO TO 2.

DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT


2. CHECK LOCK-UP SELECT SOLENOID VALVE CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check resistance between TCM connector terminal and ground.

| Solenoid valve | Connector | Terminal | Resistance (Approx.) |
|-------------------------------|-----------|------------|----------------------|
| Lock-up select solenoid valve | E31 | 4 - Ground | 5 - 20 Ω |

OK or NG

- OK >> GO TO 5.
 NG >> GO TO 3.

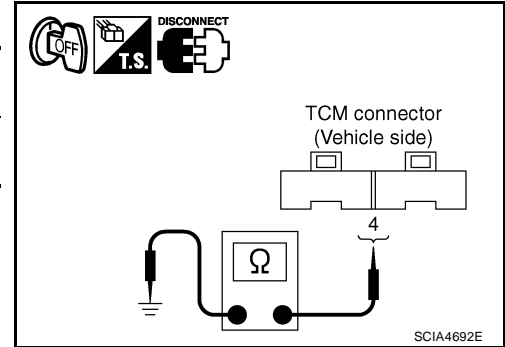


3. CHECK VALVE RESISTANCE

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

| Solenoid valve | Connector | Terminal | Resistance (Approx.) |
|-------------------------------|-----------|-------------|----------------------|
| Lock-up select solenoid valve | F46 | 13 - Ground | 5 - 20 Ω |

OK or NG

- OK >> GO TO 4.
 NG >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#).

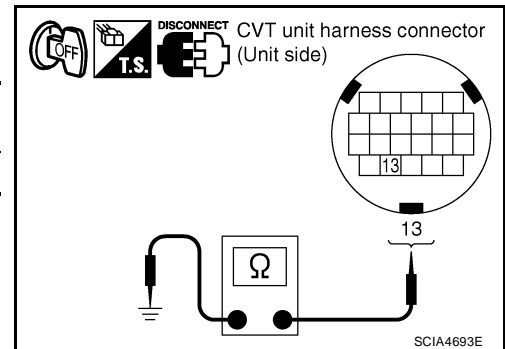

4. CHECK HARNESS BETWEEN TCM AND LOCK-UP SELECT SOLENOID VALVE


1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM connector terminal and CVT unit harness connector terminal.

| Item | Connector | Terminal | Continuity |
|----------------------------|-----------|----------|------------|
| TCM | E31 | 4 | Yes |
| CVT unit harness connector | F46 | 13 | |

4. If OK, check harness for short to ground and short to power.
5. Reinstall any part removed.

OK or NG

- OK >> GO TO 5.
 NG >> Repair open circuit or short to ground or short to power in harness or connectors.

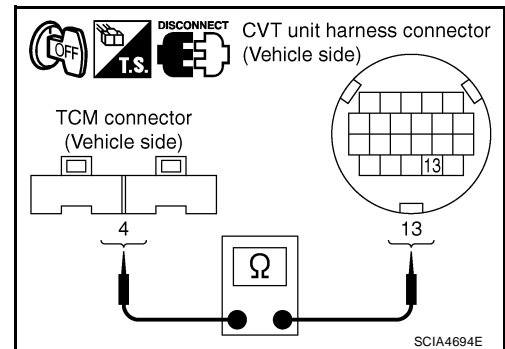

5. CHECK DTC

Perform [CVT-158, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> **INSPECTION END**
 NG >> GO TO 6.

DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT

6. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> **INSPECTION END**

NG >> 1. Repair or replace damaged parts.

2. Replace TCM. Refer to [CVT-9, "Service After Replacing TCM and Transaxle Assembly"](#) .


Component Inspection LOCK-UP SELECT SOLENOID VALVE

UCS0063C

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

| Solenoid valve | Connector | Terminal | Resistance (Approx.) |
|-------------------------------|-----------|-------------|----------------------|
| Lock-up select solenoid valve | F46 | 13 - Ground | 5 - 20 Ω |

4. If NG, replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .

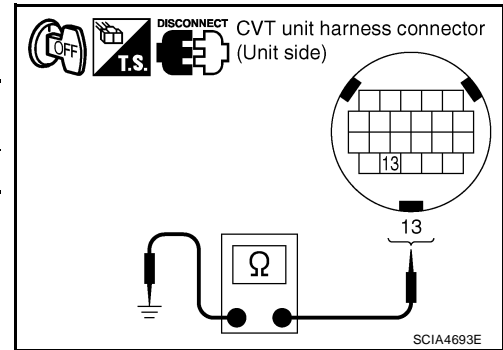

DTC P1745 LINE PRESSURE CONTROL

DTC P1745 LINE PRESSURE CONTROL

PFP:31036

Description

UCS0063D

The pressure control solenoid valve A (line pressure solenoid valve) regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

On Board Diagnosis Logic

UCS0063E

- This is not an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1745 L/PRESS CONTROL" with CONSULT-II is detected when TCM detects the unexpected line pressure.

Possible Cause

UCS0063F

TCM

DTC Confirmation Procedure

UCS0063G


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that output voltage of CVT fluid temperature sensor is within the range below.
ATF TEMP SEN: 1.0 - 2.0 V
If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)
3. If DTC is detected, go to [CVT-163, "Diagnostic Procedure"](#).

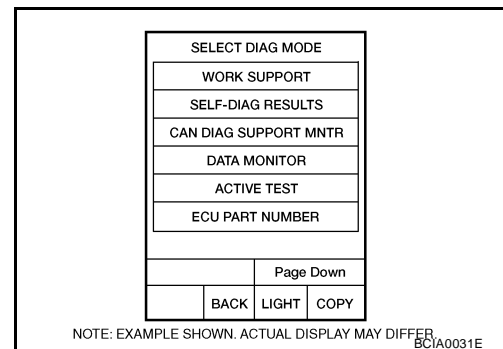

Diagnostic Procedure

UCS0063H

1. CHECK DTC

1. Turn ignition switch ON. (Do not start engine.)
2. Select "SELF-DIAG RESULTS" mode for "TRANSMISSION" with CONSULT-II.
3. Erase self-diagnostic results. Refer to [CVT-63, "How to Erase Self-diagnostic Results"](#).
4. Turn ignition switch OFF, and wait for 10 seconds or more.
5. Start engine.
6. Confirm self-diagnostic results again. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is the "P1745 L/PRESS CONTROL" displayed?

- YES >> Replace TCM. Refer to [CVT-9, "Service After Replacing TCM and Transaxle Assembly"](#).
- NO >> **INSPECTION END**

DTC P1777 STEP MOTOR - CIRCUIT

DTC P1777 STEP MOTOR - CIRCUIT

PF3:31020

Description

UCS0063I

- The step motor is included in the control valve assembly.
- The step motor changes the step with turning 4 coils ON/OFF according to the signal from TCM. As a result, the flow of line pressure to primary pulley is changed and pulley ratio is controlled

CONSULT-II Reference Value

UCS0063J

Remarks: Specification data are reference values.

| Item name | Condition | Display value (Approx.) |
|-----------|----------------|-------------------------|
| STM STEP | During driving | -20 step - 180 step |
| SMCOIL A | | Changes ON↔OFF. |
| SMCOIL B | | |
| SMCOIL C | | |
| SMCOIL D | | |

On Board Diagnosis Logic

UCS0063K

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1777 STEP MOTR CIRC" with CONSULT-II is detected under the following conditions.
 - When operating step motor ON and OFF, there is no proper change in the voltage of TCM terminal which corresponds to it.

Possible Cause

UCS0063L

- Step motor
- Harness or connectors
(Step motor circuit is open or shorted.)

DTC Confirmation Procedure

UCS0063M

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Drive vehicle for at least 5 consecutive seconds.
3. If DTC is detected, go to [CVT-166, "Diagnostic Procedure"](#).

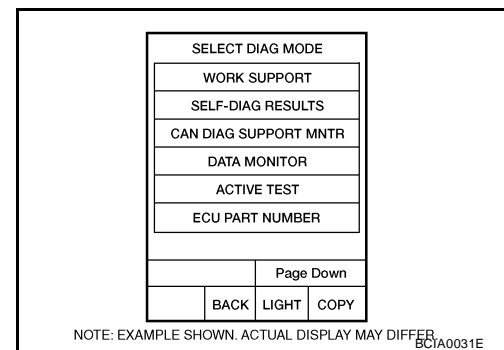

WITH GST

Follow the procedure "WITH CONSULT-II".


DTC P1777 STEP MOTOR - CIRCUIT

Wiring Diagram — CVT — STM


UCS0063N

CVT-STM-01

— : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC

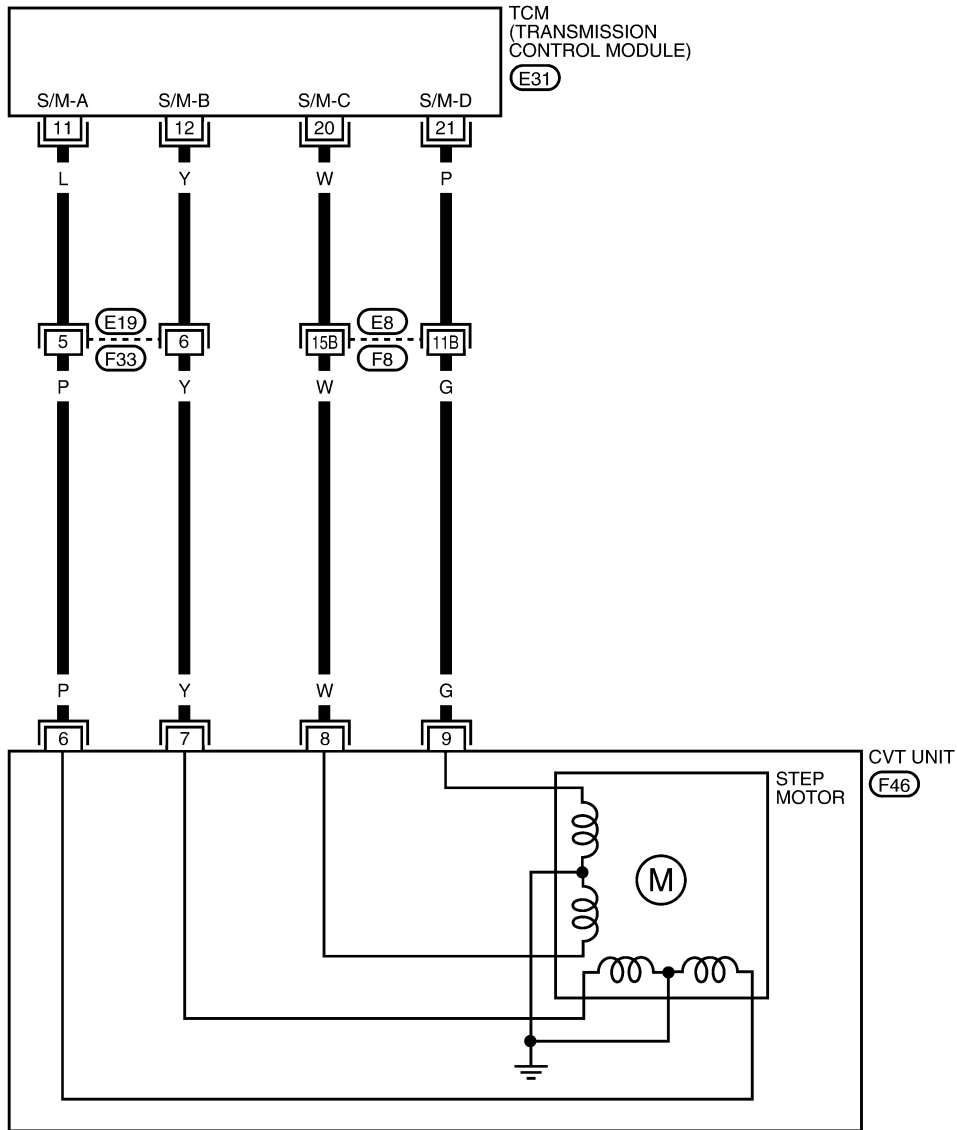

A
B
CVT
D
E
F
G
H
I
J
K
L
M

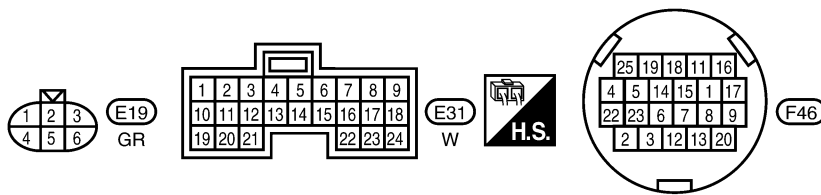

REFER TO THE FOLLOWING.
(F8) - SUPER MULTIPLE JUNCTION (SMJ)

BCWA0681E

DTC P1777 STEP MOTOR - CIRCUIT

TCM terminals data are reference values, measured between each terminal and ground.

| Terminal | Wire color | Item | Condition | Data (Approx.) |
|----------|------------|--------------|---|----------------|
| 11 | L | Step motor A | Within 2 seconds after ignition switch ON, the time measurement by using the pulse width measurement function (Hi level) of CONSULT-II.*1 CAUTION: Connect the diagnosis data link cable to the vehicle diagnosis connector. *1: A circuit tester cannot be used to test this item. | 30.0 msec |
| 12 | Y | Step motor B | | 10.0 msec |
| 20 | W | Step motor C | | 30.0 msec |
| 21 | P | Step motor D | | 10.0 msec |


Diagnostic Procedure

UCS00630

1. CHECK INPUT SIGNALS

Ⓟ With CONSULT-II

- Start engine.
- Select "SELECTION FROM MENU" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Start vehicle and read out the value of "STM STEP", "SMCOIL A", "SMCOIL B", "SMCOIL C", and "SMCOIL D".

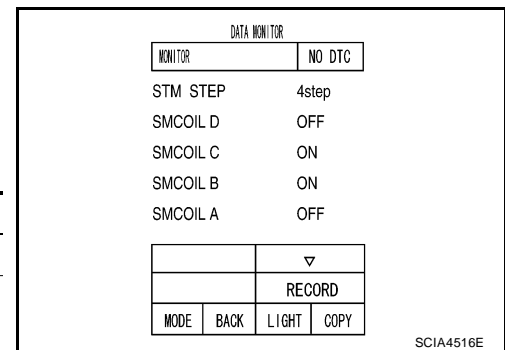

| Item name | Condition | Display value (Approx.) |
|-----------|----------------|-------------------------|
| STM STEP | During driving | -20 step - 180 step |
| SMCOIL A | | Changes ON↔OFF. |
| SMCOIL B | | |
| SMCOIL C | | |
| SMCOIL D | | |


OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.

2. CHECK HARNESS BETWEEN TCM AND STEP MOTOR

- Turn ignition switch OFF.
- Disconnect CVT unit connector and TCM connector.
- Check continuity between TCM connector terminals and CVT unit harness connector terminals.

| Item | Connector | Terminal | Continuity |
|----------------------------|-----------|----------|------------|
| TCM | E31 | 11 | Yes |
| CVT unit harness connector | F46 | 6 | |
| TCM | E31 | 12 | Yes |
| CVT unit harness connector | F46 | 7 | |
| TCM | E31 | 20 | Yes |
| CVT unit harness connector | F46 | 8 | |
| TCM | E31 | 21 | Yes |
| CVT unit harness connector | F46 | 9 | |

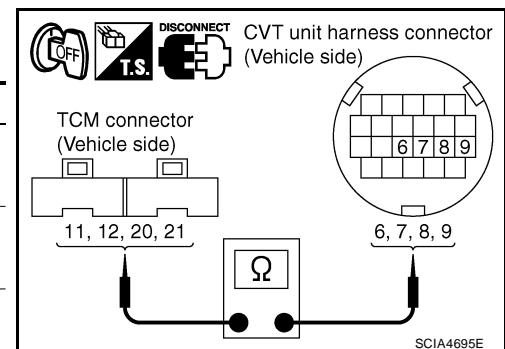

- If OK, check harness for short to ground and short to power.
- If OK, check continuity between body ground and CVT assembly.
- Reinstall any part removed.

OK or NG

- OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1777 STEP MOTOR - CIRCUIT

3. CHECK STEP MOTOR

Check step motor. Refer to [CVT-167, "Component Inspection"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.

4. CHECK DTC

Perform [CVT-164, "DTC Confirmation Procedure"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 5.

5. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG


- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

Component Inspection STEP MOTOR

UCS0063P

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminals and ground.

| Name | Connector | Terminal | Resistance (Approx.) |
|------------|-----------|------------|----------------------|
| Step motor | F46 | 6 - 7 | 30 Ω |
| | | 8 - 9 | |
| | | 6 - Ground | 15 Ω |
| | | 7 - Ground | |
| | | 8 - Ground | |
| | | 9 - Ground | |

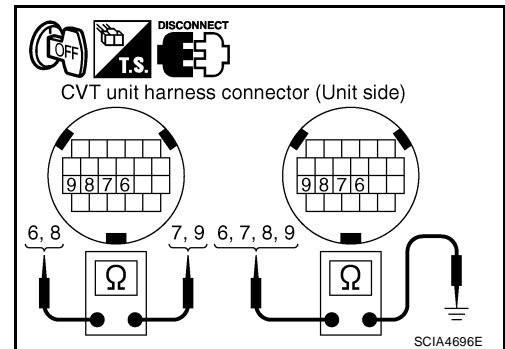

4. If NG, replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .

DTC P1778 STEP MOTOR - FUNCTION

DTC P1778 STEP MOTOR - FUNCTION

PFP:31947

Description

UCS0063Q

- The step motor is included in the control valve assembly.
- The step motor's 4 aspects of ON/OFF change according to the signal from TCM. As a result, the flow of line pressure to primary pulley is changed and pulley ratio is controlled.
- This diagnosis item is detected when electrical system is OK, but mechanical system is NG.
- This diagnosis item is detected when the state of the changing the speed mechanism in unit does not operate normally.

CONSULT-II Reference Value

UCS0063R

Remarks: Specification data are reference values.

| Item name | Condition | Display value (Approx.) |
|------------|----------------|-------------------------|
| STM STEP | During driving | -20 step - 180 step |
| GEAR RATIO | | 2.56 - 0.43 |

On Board Diagnosis Logic

UCS0063S

- This is an OBD-II self-diagnostic item.
- Diagnostic trouble code "P1778 STEP MOTR/FNC" with CONSULT-II is detected under the following conditions.
 - When not changing the pulley ratio according to the instruction of TCM.

Possible Cause

UCS0063T

Step motor

DTC Confirmation Procedure

UCS0063U

CAUTION:

- Always drive vehicle at a safe speed.
- Before starting "DTC Confirmation Procedure", confirm "Hi" or "Mid" or "Low" fixation by "PRI SPEED" and "VEHICLE SPEED" on "DATA MONITOR MODE".
- If hi-gear fixation occurred, go to [CVT-169, "Diagnostic Procedure"](#).


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that output voltage of CVT fluid temperature sensor is within the range below.
ATF TEMP SEN: 1.0 - 2.0 V
If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)
3. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
4. Start engine and maintain the following conditions for at least 30 consecutive seconds.
TEST START FROM 0 km/h (0 MPH)
CONSTANT ACCELERATION: Keep 30 sec or more
VEHICLE SPEED: 10 km/h (6 MPH) or more
ACC PEDAL OPEN: More than 1.0/8
RANGE: "D" position
ENG SPEED: 450 rpm or more
5. If DTC is detected, go to [CVT-169, "Diagnostic Procedure"](#).

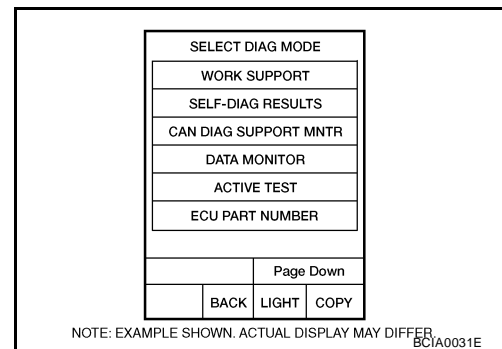

DTC P1778 STEP MOTOR - FUNCTION

WITH GST

Follow the procedure "WITH CONSULT-II".

Diagnostic Procedure

UCS0063V

1. CHECK STEP MOTOR

With CONSULT-II

It is monitoring whether "GEAR RATIO: 2.56 - 0.43" changes similarly to "STM STEP: -20 - 180" by DATA MONITOR mode. Refer to [CVT-64, "DATA MONITOR MODE"](#).

Without CONSULT-II

Inspect the engine speed (rise and descend), vehicle speed, throttle position, and check shift change. Refer to [CVT-210, "Vehicle Speed When Shifting Gears"](#).

OK or NG

OK >> **INSPECTION END**

NG >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#).

A

B

CVT

D

E

F

G

H

I

J

K

L

M

OVERDRIVE CONTROL SWITCH

OVERDRIVE CONTROL SWITCH

PF2:25130

Description

UCS006XK

- Overdrive control switch is installed to the selector lever.
- O/D OFF indicator turns ON, and overdrive driving activates when pressing the overdrive control switch while driving in "D" position. O/D OFF indicator turns OFF, and "D" position driving starts when pressing the overdrive control switch while driving in the overdrive-off mode. Shifting the selector lever in any position other than "D" releases the overdrive-off mode.

CONSULT-II Reference Value

UCS006KP



| Item name | Condition | Display value |
|---------------|---------------------------------------|---------------|
| SPORT MODE SW | While pushing overdrive cancel switch | ON |
| | Other conditions | OFF |

OVERDRIVE CONTROL SWITCH

Wiring Diagram — CVT — ODSW

UCS006KQ

CVT-ODSW-01

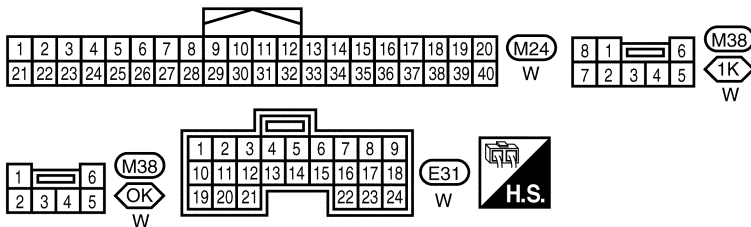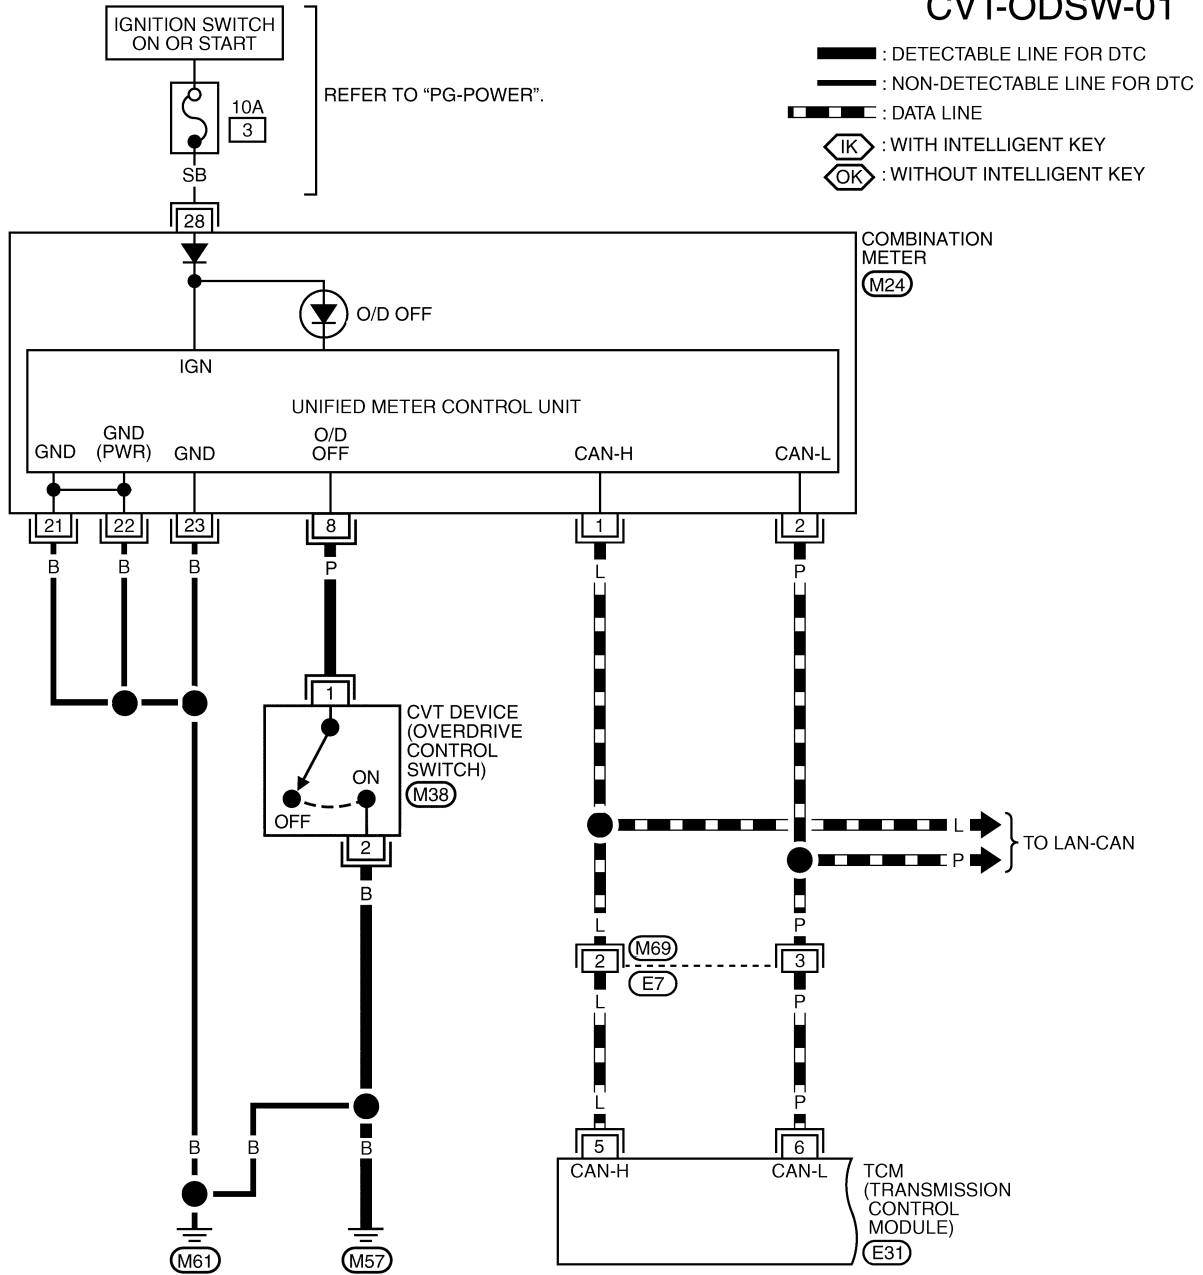

REFER TO THE FOLLOWING.

M69 -SUPER MULTIPLE JUNCTION (SMJ)

BCWA0686E

OVERDRIVE CONTROL SWITCH

TCM terminal data are reference values, measured between each terminal and ground.

| Terminal | Wire color | Item | Condition | Data (Approx.) |
|----------|------------|-------|-----------|----------------|
| 5 | L | CAN-H | — | — |
| 6 | P | CAN-L | — | — |

Diagnostic Procedure

UCS006KR

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis check. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction of the "U1000 CAN COMM CIRCUIT" indicated in the results?

- YES >> Check CAN communication line. Refer to [CVT-68, "DTC U1000 CAN COMMUNICATION LINE"](#) .
 NO >> GO TO 2.

2. CHECK OVERDRIVE CONTROL SWITCH SIGNAL

With CONSULT-II

- Turn ignition switch ON.
- Select "ECU INPUT SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Read out ON/OFF switching action of the "SPORT MODE SW".

| Item name | Condition | Display value |
|---------------|---------------------------------------|---------------|
| SPORT MODE SW | While pushing overdrive cancel switch | ON |
| | Other conditions | OFF |

| DATA MONITOR | |
|---------------|--------|
| MONITOR | NO DTC |
| FULL SW | OFF |
| IDLE SW | ON |
| SPORT MODE SW | OFF |
| STR DWN SW | OFF |
| STR UP SW | OFF |
| ▼ | |
| RECORD | |
| MODE | BACK |
| LIGHT | COPY |

SCIA4517E

OK or NG

- OK >> **INSPECTION END**
 NG >> GO TO 3.

3. CHECK OVERDRIVE CONTROL SWITCH

Check overdrive control switch. Refer to [CVT-174, "Component Inspection"](#)

OK or NG

- OK >> GO TO 4.
 NG >> Repair or replace damaged parts.

4. CHECK SELF-DIAGNOSTIC RESULTS (COMBINATION METER)

Perform self-diagnosis check. Refer to [DI-13, "Self-Diagnosis Mode of Combination Meter"](#) .

Is any malfunction detected by self-diagnostic?


- YES >> Check the malfunctioning system.
 NO - 1 >> With intelligent key: GO TO 5.
 NO - 2 >> Without intelligent key: GO TO 6.

OVERDRIVE CONTROL SWITCH

5. CHECK OVERDRIVE CONTROL SWITCH CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect CVT device connector and combination meter connector.
3. Check continuity between CVT device harness connector (A) terminal and combination meter harness connector (B) terminal.

| Item | Connector | Terminal | Continuity |
|-------------------------------------|-----------|----------|------------|
| CVT device harness connector | M38 | 1 | Yes |
| Combination meter harness connector | M24 | 8 | |

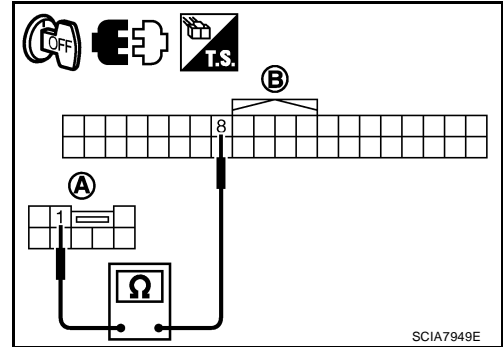

4. Check continuity between CVT device harness connector terminal and ground.

| Item | Connector | Terminal | Continuity |
|------------------------------|-----------|------------|------------|
| CVT device harness connector | M38 | 2 - ground | Yes |

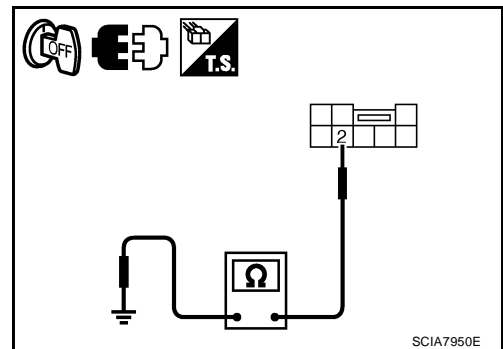

5. If OK, check harness for short to ground and short to power.
6. Reinstall any part removed.

OK or NG


OK >> **INSPECTION END**

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK OVERDRIVE CONTROL SWITCH CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect CVT device connector and combination meter connector.
3. Check continuity between CVT device harness connector (A) terminal and combination meter harness connector (B) terminal.

| Item | Connector | Terminal | Continuity |
|-------------------------------------|-----------|----------|------------|
| CVT device harness connector | M38 | 1 | Yes |
| Combination meter harness connector | M24 | 8 | |

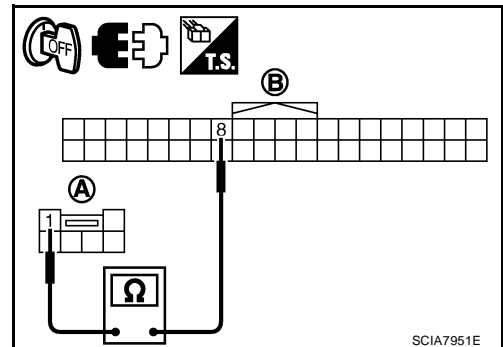

4. Check continuity between CVT device harness connector terminal and ground.

| Item | Connector | Terminal | Continuity |
|------------------------------|-----------|------------|------------|
| CVT device harness connector | M38 | 2 - ground | Yes |

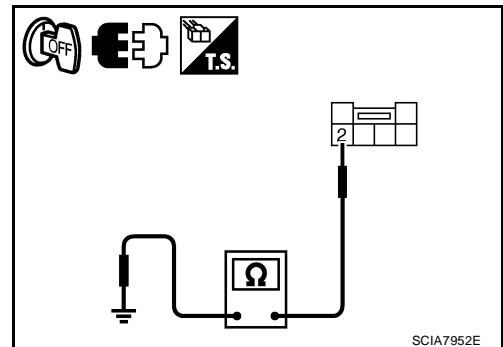

5. If OK, check harness for short to ground and short to power.
6. Reinstall any part removed.

OK or NG

OK >> **INSPECTION END**

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

OVERDRIVE CONTROL SWITCH


UCS006KS

Component Inspection OVERDRIVE CONTROL SWITCH

With Intelligent Key

Check continuity between CVT device harness connector terminals.


| Item | Condition | Connector | Terminal | Continuity |
|--------------------------|--|-----------|----------|------------|
| Overdrive control switch | While pushing overdrive control switch | M38 | 1 - 2 | Yes |
| | Other conditions | | | No |

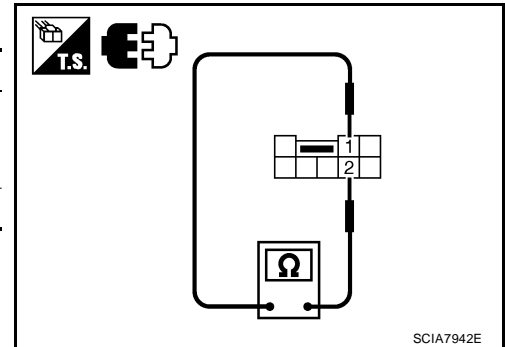

Without Intelligent Key

Check continuity between CVT device harness connector terminals.

| Item | Condition | Connector | Terminal | Continuity |
|--------------------------|--|-----------|----------|------------|
| Overdrive control switch | While pushing overdrive control switch | M38 | 1 - 2 | Yes |
| | Other conditions | | | No |

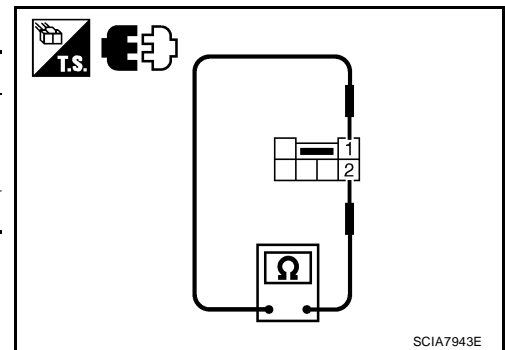

SHIFT POSITION INDICATOR CIRCUIT

SHIFT POSITION INDICATOR CIRCUIT

PF:24810

Description

UCS006XJ

TCM sends the switch signals to combination meter via CAN communication line. Then selector lever position is indicated on the shift position indicator.

CONSULT-II Reference Value

UCS00642

| Item name | Condition | Display value |
|-----------|--|---------------|
| RANGE | Selector lever in "N" or "P" position. | N·P |
| | Selector lever in "R" position. | R |
| | Selector lever in "D" position. | D |
| | Selector lever in "L" position. | L |

Diagnostic Procedure

UCS00643

1. CHECK INPUT SIGNALS

Ⓜ With CONSULT-II

1. Start engine.
2. Select "MAIN SIGNALS" in "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II and read out the value of "RANGE".
3. Check that the following three positions or indicators are same.
 - Actual position of the selector lever
 - "RANGE" on CONSULT-II screen
 - Shift position indicator in the combination meter

OK or NG

OK >> **INSPECTION END**

NG >> Check the following.

SHIFT POSITION INDICATOR SYMPTOM CHART

| Items | Presumed location of trouble |
|---|---|
| Actual position does not change. | Park/neutral position switch <ul style="list-style-type: none"> ● Refer to CVT-78, "DTC P0705 PARK/NEUTRAL POSITION SWITCH". CVT main system (Fail-safe function actuated) <ul style="list-style-type: none"> ● Refer to CVT-60, "SELF-DIAGNOSTIC RESULT MODE". |
| Shift position indicator in the combination meter does not indicate any position. | Perform the self-diagnosis for CVT and the combination meter. <ul style="list-style-type: none"> ● Refer to CVT-60, "SELF-DIAGNOSTIC RESULT MODE" and DI-5, "COMBINATION METERS". |
| Actual position changes, but the shift position indicator in the combination meter does not change. | |
| Actual position differs from the shift position indicator in the combination meter. | |
| Shift position indicator in the combination meter does not indicate specific position only. | Check the combination meter. <ul style="list-style-type: none"> ● Refer to DI-5, "COMBINATION METERS". |

TROUBLE DIAGNOSIS FOR SYMPTOMS

TROUBLE DIAGNOSIS FOR SYMPTOMS



PF0:00007

Wiring Diagram — CVT — NONDTC

UCS00644

CVT-NONDTC-01

- : DETECTABLE LINE FOR DTC
- : NON-DETECTABLE LINE FOR DTC
- : DATA LINE

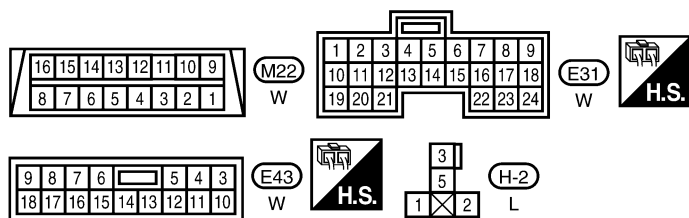
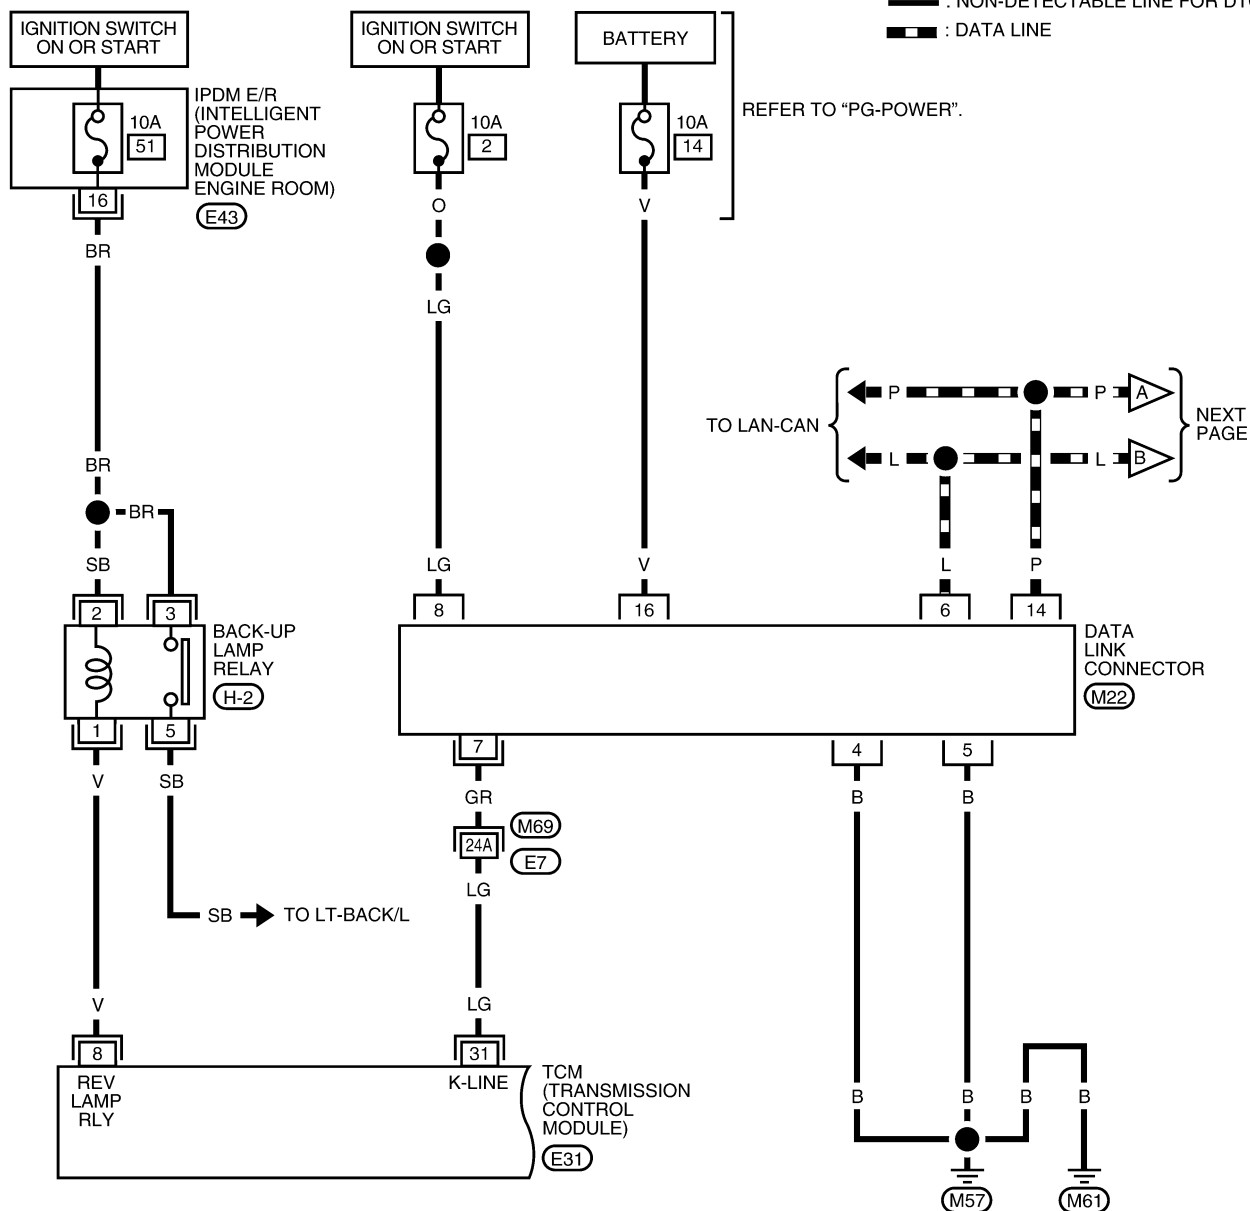


REFER TO THE FOLLOWING.

(M69) - SUPER MULTIPLE JUNCTION (SMJ)

TROUBLE DIAGNOSIS FOR SYMPTOMS

CVT-NONDTC-02

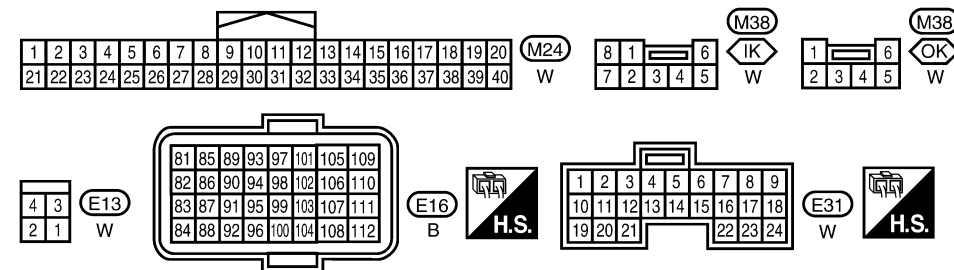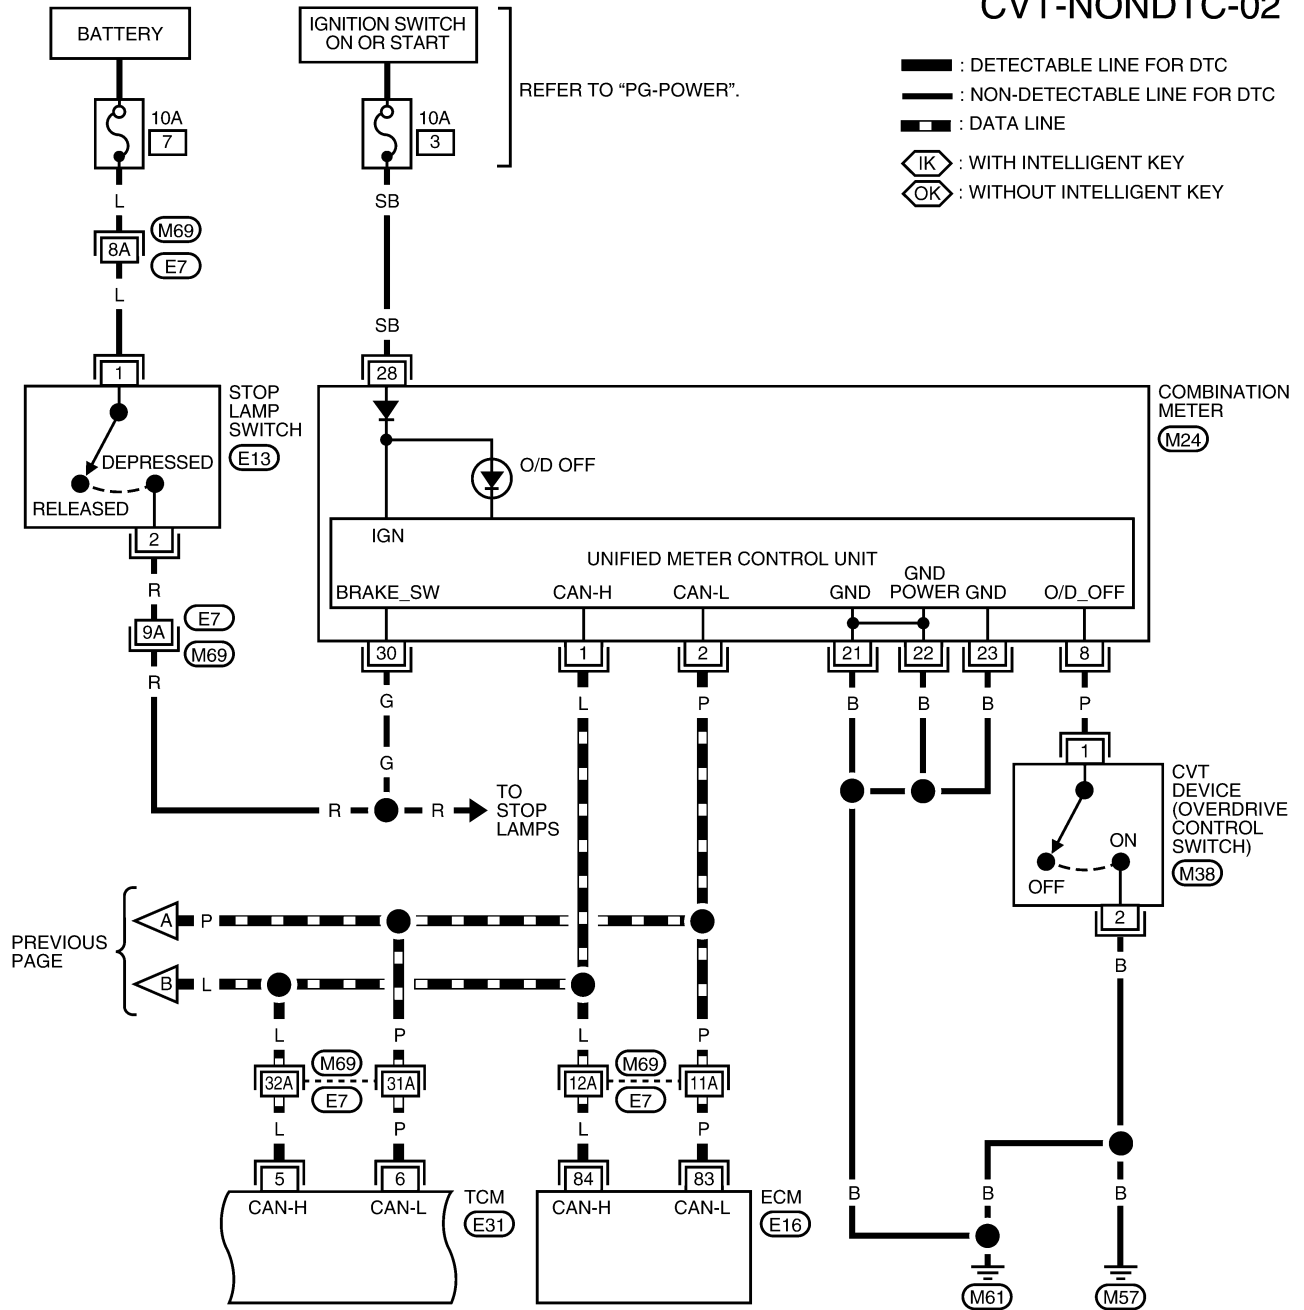

REFER TO THE FOLLOWING.




M69 - SUPER MULTIPLE JUNCTION (SMJ)

BCWA0683E

TROUBLE DIAGNOSIS FOR SYMPTOMS

CVT-NONDTC-03

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

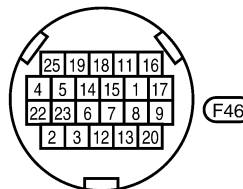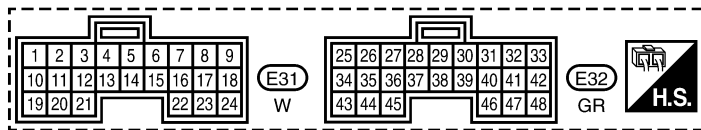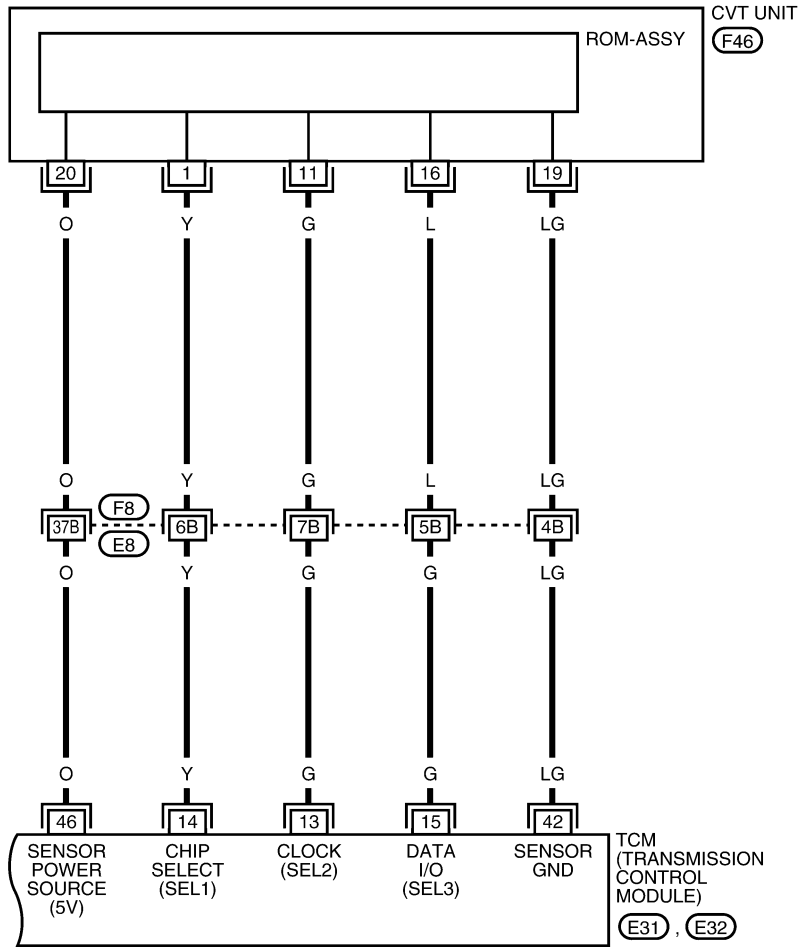




REFER TO THE FOLLOWING.
 (F8) - SUPER MULTIPLE JUNCTION (SMJ)

BCWA0684E

TROUBLE DIAGNOSIS FOR SYMPTOMS

TCM terminal data are reference values, measured between each terminal and ground.

| Terminal | Wire color | Item | Condition | | Data (Approx.) |
|----------|------------|--------------------|---|---|-----------------|
| 5 | L | CAN-H | — | | — |
| 6 | P | CAN-L | — | | — |
| 8 | V | Back-up lamp relay |  | Selector lever in "R" position. | 0 V |
| | | | | Selector lever in other positions. | Battery voltage |
| 13 | G | ROM assembly | — | | — |
| 14 | Y | ROM assembly | — | | — |
| 15 | G | ROM assembly | — | | — |
| 31 | LG | K-LINE | — | | — |
| 42 | LG | Sensor ground | Always | | 0 V |
| 46 | O | Sensor power |  | — | 5.0 V |
| | | | |  | — |

A
B
CVT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS00645

O/D OFF Indicator Lamp Does Not Come On

SYMPTOM:

O/D OFF indicator lamp does not come on for about 2 seconds when turning ignition switch ON.

DIAGNOSTIC PROCEDURE

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis check. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction of the "U1000 CAN COMM CIRCUIT" indicated in the results?

- YES >> Check CAN communication line. Refer to [CVT-68, "DTC U1000 CAN COMMUNICATION LINE"](#) .
- NO >> GO TO 2.


2. CHECK TCM POWER SOURCE

1. Turn ignition switch ON.
2. Check voltage between TCM connector terminals and ground. Refer to [CVT-146, "Wiring Diagram — CVT — POWER"](#) .

| Name | Connector | Terminal | Voltage (Approx.) |
|--------------|-----------|----------|-------------------|
| Power supply | E31 | 10 | Battery voltage |
| | | 19 | Battery voltage |

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 3.

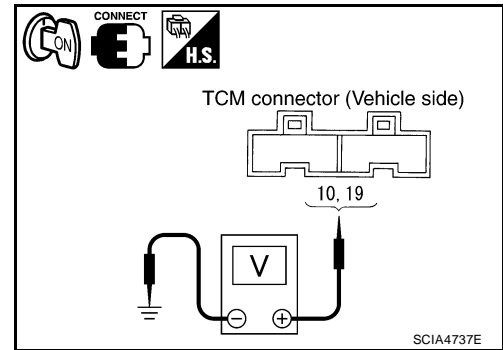

3. DETECT MALFUNCTIONING ITEM

Check the following.

- Harness for short or open between ignition switch and TCM connector terminal 10, 19 Refer to [CVT-146, "Wiring Diagram — CVT — POWER"](#) .
- 10 A fuse (No.49, located in the IPDM E/R). Refer to [CVT-146, "Wiring Diagram — CVT — POWER"](#) .
- Ignition switch. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.


4. CHECK TCM GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM connector terminals and ground. Refer to [CVT-146, "Wiring Diagram — CVT — POWER"](#) .

| Name | Connector | Terminal | Continuity |
|--------|-----------|----------|------------|
| Ground | E32 | 25 | Yes |
| | | 48 | |

OK or NG

- OK >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

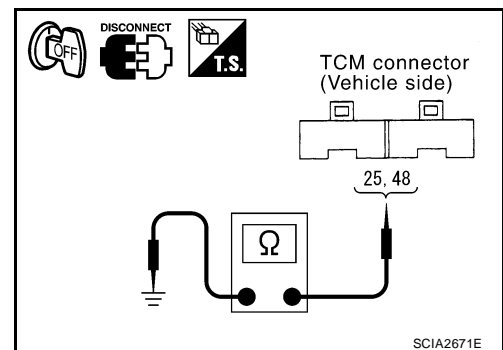

TROUBLE DIAGNOSIS FOR SYMPTOMS

5. DETECT MALFUNCTIONING ITEM

Check the following.

- Harness and fuse for short or open between ignition switch and O/D OFF indicator lamp
Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

6. CHECK SYMPTOM

Check again. Refer to [CVT-49, "Check before Engine Is Started"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 7.

7. CHECK COMBINATION METERS

Check combination meters. Refer to [DI-5, "COMBINATION METERS"](#)

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

Engine Cannot Be Started in “P” and “N” Position

SYMPTOM:

UCS00646

- Engine cannot be started with selector lever in “P” or “N” position.
- Engine can be started with selector lever in “D”, “L” or “R” position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate PNP switch circuit or start signal circuit?

- YES >> Check PNP switch circuit or start signal circuit. Refer to [CVT-78, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) or [CVT-72, "DTC P0615 START SIGNAL CIRCUIT"](#) .
- NO >> GO TO 2.

2. CHECK CVT POSITION

Check CVT position. Refer to [CVT-196, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust CVT position. Refer to [CVT-195, "Adjustment of CVT Position"](#) .

3. CHECK STARTING SYSTEM

Check starting system. Refer to [SC-10, "STARTING SYSTEM"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS00647

In "P" Position, Vehicle Moves Forward or Backward When Pushed SYMPTOM:

Vehicle moves when it is pushed forward or backward with selector lever in "P" position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate PNP switch circuit?

- YES >> Check PNP switch circuit. Refer to [CVT-78, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .
- NO >> GO TO 2.

2. CHECK CVT POSITION

Check CVT position. Refer to [CVT-196, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust CVT position. Refer to [CVT-195, "Adjustment of CVT Position"](#) .

3. CHECK SYMPTOM

Check again. Refer to [CVT-49, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .

In "N" Position, Vehicle Moves SYMPTOM:

UCS00648

Vehicle moves forward or backward when selecting "N" position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate PNP switch circuit?

- YES >> Check PNP switch circuit. Refer to [CVT-78, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .
- NO >> GO TO 2.

2. CHECK CVT POSITION

Check CVT position. Refer to [CVT-196, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust CVT position. Refer to [CVT-195, "Adjustment of CVT Position"](#) .

3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-16, "Checking CVT Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.

4. CHECK SYMPTOM

Check again. Refer to [CVT-49, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 5.

TROUBLE DIAGNOSIS FOR SYMPTOMS

5. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .
NG >> Repair or replace damaged parts.

Large Shock “N” → “R” Position

SYMPTOM:

There is large shock when shifting from “N” to “R” position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system. Refer to [CVT-61, "Display Items List"](#) .
NO >> GO TO 2.

2. CHECK ENGINE IDLE SPEED

Check the engine idle speed. Refer to [EC-75, "Idle Speed and Ignition Timing Check"](#) .

OK or NG

- OK >> GO TO 3.
NG >> Repair.

3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-16, "Checking CVT Fluid"](#) .

OK or NG

- OK >> GO TO 4.
NG >> Refill CVT fluid.

4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-45, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 5.
NG >> Check the malfunctioning item. Refer to [CVT-46, "Judgement of Line Pressure Test"](#) .

5. SYMPTOM CHECK

Check again. Refer to [CVT-49, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 6.

6. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .
NG >> Repair or replace damaged parts.

A
B
CVT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0064A

Vehicle Does Not Creep Backward in “R” Position

SYMPTOM:

Vehicle does not creep backward when selecting “R” position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnosis

- YES >> Check the malfunctioning system. Refer to [CVT-61, "Display Items List"](#) .
- NO >> GO TO 2.

2. CHECK CVT POSITION

Check CVT position. Refer to [CVT-196, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust CVT position. Refer to [CVT-195, "Adjustment of CVT Position"](#) .

3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-16, "Checking CVT Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.

4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-45, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Check the malfunctioning item. Refer to [CVT-46, "Judgement of Line Pressure Test"](#) .

5. CHECK STALL REVOLUTION

Check stall revolution. Refer to [CVT-43, "STALL TEST"](#) .

OK or NG

- OK >> GO TO 6.
- NG >> Check the malfunctioning item. Refer to [CVT-44, "Judgement Stall Test"](#) .

6. CHECK SYMPTOM

Check again. Refer to [CVT-49, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 7.

7. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0064B

Vehicle Does Not Creep Forward in “D” or “L” Position

SYMPTOM:

Vehicle does not creep forward when selecting “D” or “L” position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system. Refer to [CVT-61, "Display Items List"](#) .
- NO >> GO TO 2.

2. CHECK CVT POSITION

Check CVT position. Refer to [CVT-196, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust CVT position. Refer to [CVT-195, "Adjustment of CVT Position"](#) .

3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-16, "Checking CVT Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.

4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-45, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Check the malfunctioning item. Refer to [CVT-46, "Judgement of Line Pressure Test"](#) .

5. CHECK STALL REVOLUTION

Check stall revolution. Refer to [CVT-43, "STALL TEST"](#) .

OK or NG

- OK >> GO TO 6.
- NG >> Check the malfunctioning item. Refer to [CVT-44, "Judgement Stall Test"](#) .

6. CHECK SYMPTOM

Check again. Refer to [CVT-49, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 7.

7. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

A
B
CVT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS006KE

Vehicle Speed Does Not Change in "L" Position

SYMPTOM:

Vehicle speed does not change in "L" position while the cruise test.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system. Refer to [CVT-61, "Display Items List"](#) .
- NO >> GO TO 2.

2. CHECK CVT POSITION

Check CVT position. Refer to [CVT-196, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust CVT position. Refer to [CVT-195, "Adjustment of CVT Position"](#) .

3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-16, "Checking CVT Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.

4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-45, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Check the malfunctioning item. Refer to [CVT-46, "Judgement of Line Pressure Test"](#) .

5. CHECK STALL REVOLUTION

Check stall revolution. Refer to [CVT-43, "STALL TEST"](#) .

OK or NG

- OK >> GO TO 6.
- NG >> Check the malfunctioning item. Refer to [CVT-44, "Judgement Stall Test"](#) .

6. CHECK SYMPTOM

Check again. Refer to [CVT-50, "Cruise Test"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 7.

7. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS006KF

Vehicle Speed Does Not Change in overdrive-off mode

SYMPTOM:

Vehicle speed does not change in overdrive-off mode while the cruise test.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system. Refer to [CVT-61, "Display Items List"](#) .
- NO >> GO TO 2.

2. CHECK OVERDRIVE CONTROL SWITCH

Check overdrive control switch. Refer to [CVT-170, "OVERDRIVE CONTROL SWITCH"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-16, "Checking CVT Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.

4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-45, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Check the malfunctioning item. Refer to [CVT-46, "Judgement of Line Pressure Test"](#) .

5. CHECK STALL REVOLUTION

Check stall revolution. Refer to [CVT-43, "STALL TEST"](#) .

OK or NG

- OK >> GO TO 6.
- NG >> Check the malfunctioning item. Refer to [CVT-44, "Judgement Stall Test"](#) .

6. CHECK SYMPTOM

Check again. Refer to [CVT-50, "Cruise Test"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 7.

7. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

A
B
CVT
D
E
F
G
H
I
J
K
L
M

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS006KG

Vehicle Speed Does Not Change in “D” Position

SYMPTOM:

Vehicle speed does not change in “D” position while the cruise test.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system. Refer to [CVT-61, "Display Items List"](#) .
- NO >> GO TO 2.

2. CHECK CVT POSITION

Check CVT position. Refer to [CVT-196, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust CVT position. Refer to [CVT-195, "Adjustment of CVT Position"](#) .

3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-16, "Checking CVT Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.

4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-45, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Check the malfunctioning item. Refer to [CVT-46, "Judgement of Line Pressure Test"](#) .

5. CHECK STALL REVOLUTION

Check stall revolution. Refer to [CVT-43, "STALL TEST"](#) .

OK or NG

- OK >> GO TO 6.
- NG >> Check the malfunctioning item. Refer to [CVT-44, "Judgement Stall Test"](#) .

6. CHECK SYMPTOM

Check again. Refer to [CVT-50, "Cruise Test"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 7.

7. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

TROUBLE DIAGNOSIS FOR SYMPTOMS

UCS0064H

Vehicle Does Not Decelerate by Engine Brake

SYMPTOM:

Engine brake does not operate when releasing the accelerator pedal while the cruise test.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-60, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system. Refer to [CVT-61, "Display Items List"](#) .
- NO >> GO TO 2.

2. CHECK CVT POSITION

Check CVT position. Refer to [CVT-196, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust CVT position. Refer to [CVT-195, "Adjustment of CVT Position"](#) .

3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-16, "Checking CVT Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.

4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-45, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Check the malfunctioning item. Refer to [CVT-46, "Judgement of Line Pressure Test"](#) .

5. CHECK SYMPTOM

Check again. Refer to [CVT-50, "Cruise Test"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 6.

6. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-54, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transaxle assembly. Refer to [CVT-207, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

A
B
CVT
D
E
F
G
H
I
J
K
L
M


TRANSMISSION CONTROL MODULE

TRANSMISSION CONTROL MODULE

PF3:31036

Removal and Installation COMPONENTS


UCS006KZ

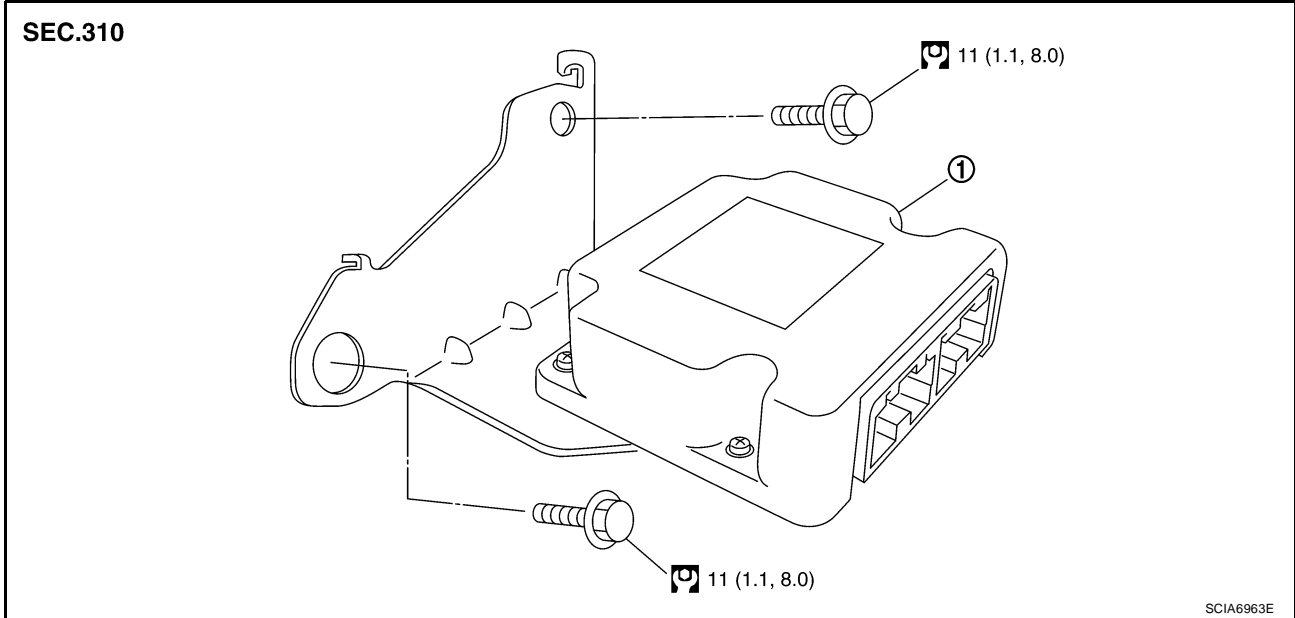

1. TCM

REMOVAL

1. Disconnect the battery negative terminal.
2. Disconnect the TCM harness connector (1) from the TCM (2).
 - Instrument lower finisher (3)
3. Remove the TCM (2).

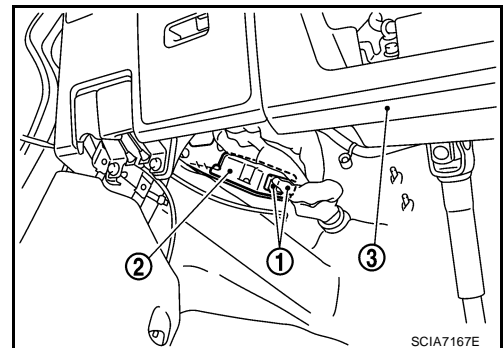

INSTALLATION

Installation is in the reverse order of removal.

SHIFT CONTROL SYSTEM


SHIFT CONTROL SYSTEM

PF3:34901

Removal and Installation CONTROL DEVICE COMPONENTS

UCS00641

SEC.349

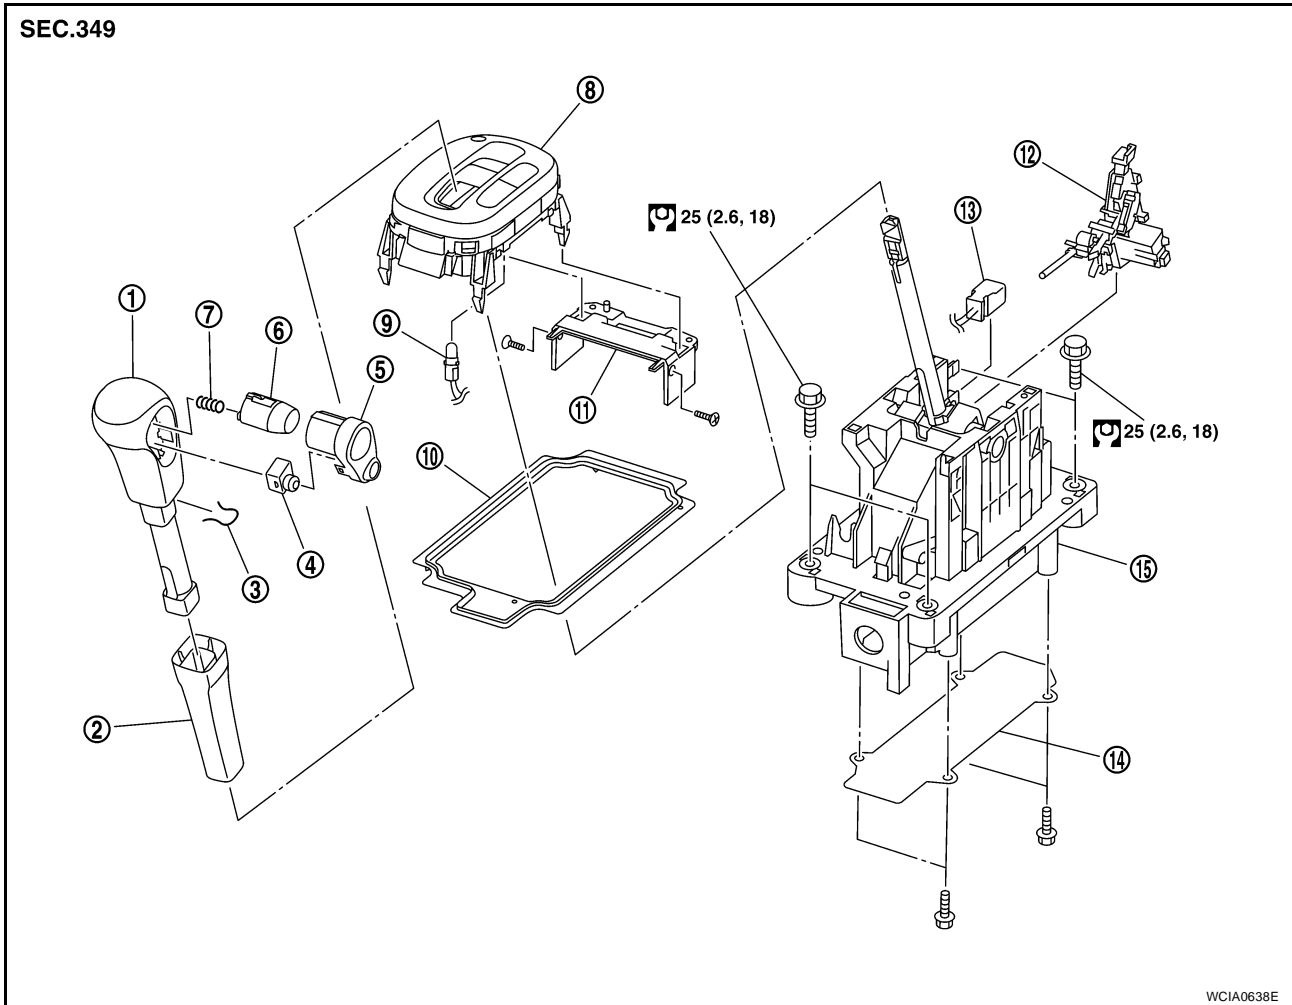


WCIA0638E

- | | | |
|----------------------------------|-----------------------------|---|
| 1. Selector lever knob | 2. Knob cover | 3. Lock pin |
| 4. Overdrive control switch | 5. Knob finisher | 6. Selector button |
| 7. Selector button return spring | 8. Position indicator plate | 9. Position lamp |
| 10. Dust cover | 11. Bracket | 12. Shift lock solenoid and park position switch assembly |
| 13. CVT device harness connector | 14. Plate | 15. Control device assembly |

SHIFT CONTROL SYSTEM

CONTROL CABLE COMPONENTS

Refer to the figure below for control cable removal and installation procedure.

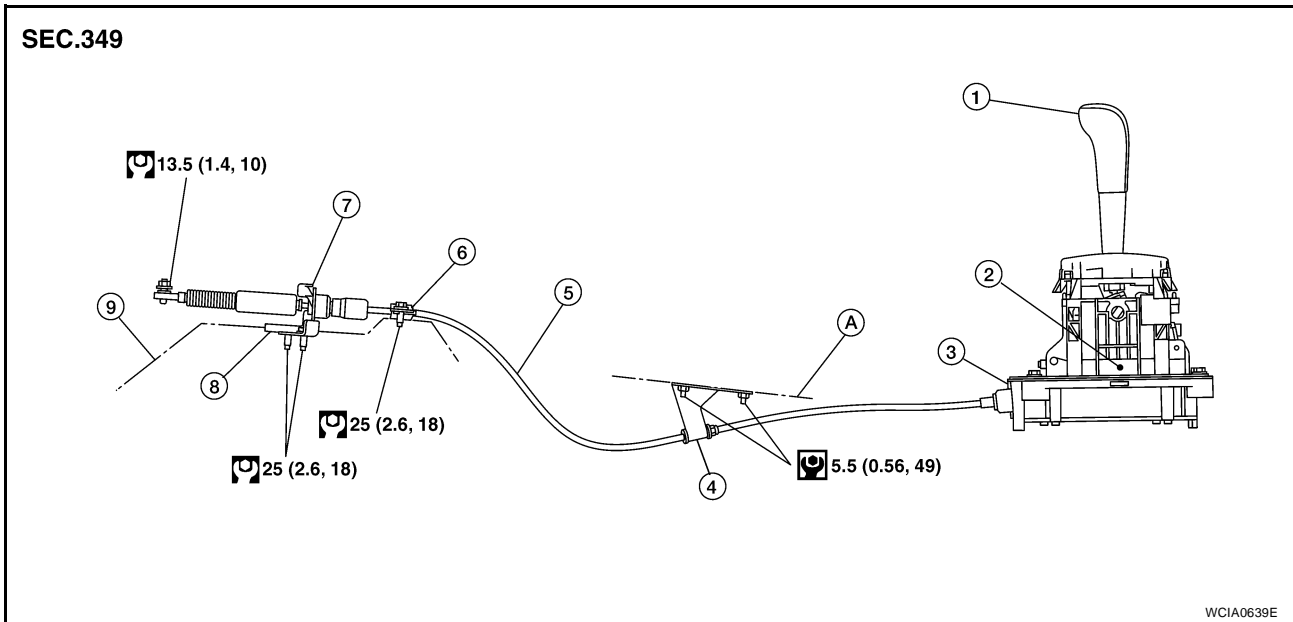


- | | | |
|------------------------|----------------------------|-----------------------|
| 1. Selector lever knob | 2. Control device assembly | 3. Lock plate |
| 4. Bracket | 5. Control cable | 6. Bracket |
| 7. Lock plate | 8. Bracket | 9. Transaxle assembly |
| A. Floor | | |

REMOVAL


CAUTION:

Make sure that parking brake is applied before removal and installation.

1. Place the selector lever in the "N" position.
2. Remove the center console assembly. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#).
3. Disconnect the CVT device harness connector (1).
4. Remove the key interlock cable from the control device assembly. Refer to [CVT-202, "Removal and Installation"](#).

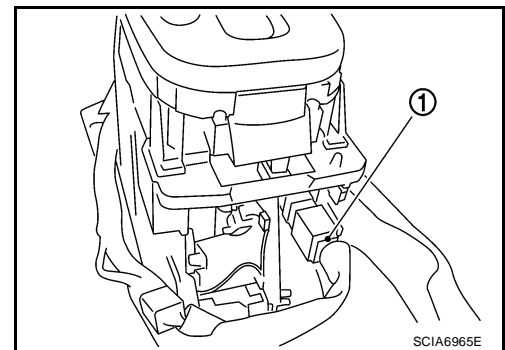


5. Remove the bolts (A) from the control device assembly (1).
6. Remove exhaust front tube, center muffler and heat plates. Refer to [EM-21, "EXHAUST MANIFOLD"](#).

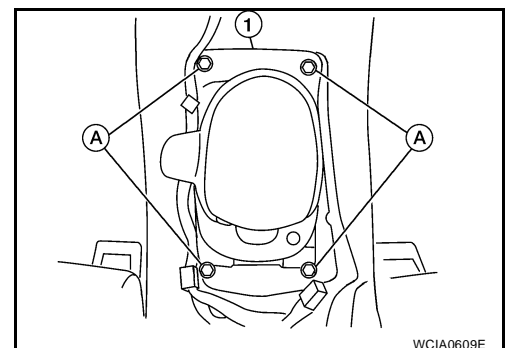

SHIFT CONTROL SYSTEM

7. Remove the plate (1) from the control device assembly.


⇐: Vehicle front

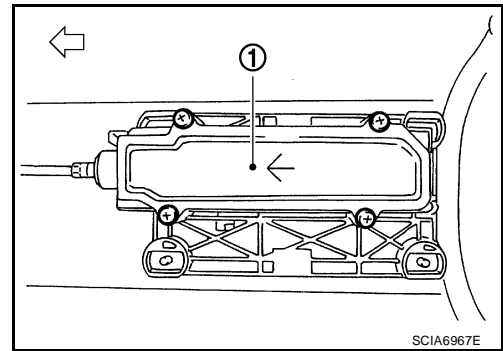

8. Remove the lock plate (1) from the control cable (2).


⇐: Vehicle front

9. Remove the control cable (2) from the control device assembly.

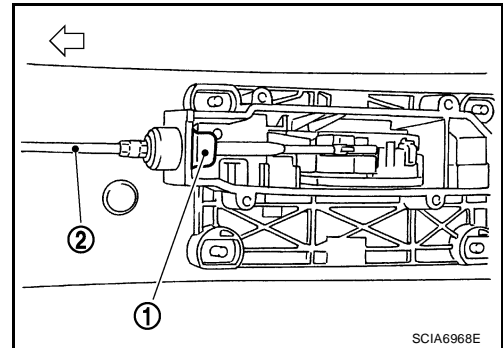

10. Insert flat-bladed screwdrivers at points (A) and (B) as shown, and press both tabs (E) and (F) at the front (C) and rear (D) slightly toward the center of the control device assembly to remove the control device assembly from the underside of the vehicle.

⇐: Vehicle front

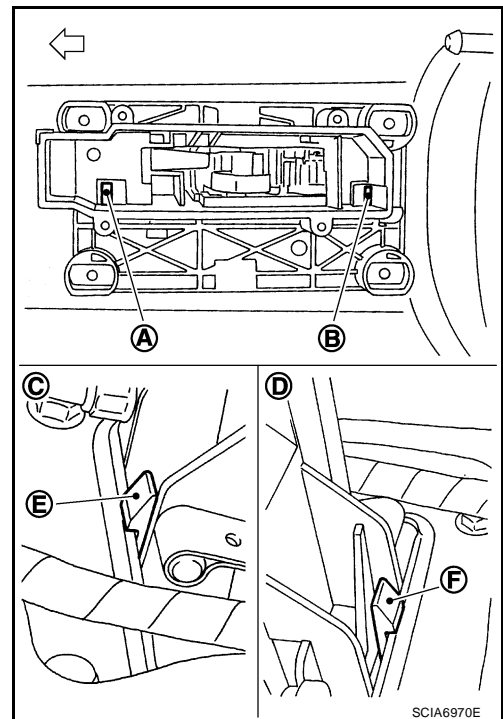


A
B
CVT
D
E
F
G
H
I
J
K
L
M

SHIFT CONTROL SYSTEM

INSTALLATION

Installation is in the reverse order of removal.

- When installing the control cable (1) to the control device assembly (2), make sure that the control cable (1) is fully pressed in with the ribbed surface (A) facing downward from the vehicle.
⇐: Vehicle front
- After installation is completed, adjust and check the CVT position. Refer to [CVT-195, "Adjustment of CVT Position"](#) and [CVT-196, "Checking of CVT Position"](#).

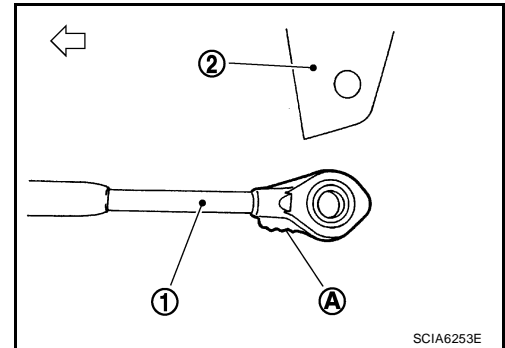



Control Device Disassembly and Assembly

DISASSEMBLY

NOTE:

Refer to [CVT-191, "CONTROL DEVICE COMPONENTS"](#) to disassemble.

1. Remove selector lever knob from control device assembly. Refer to [CVT-195, "Selector Lever Knob Removal and Installation"](#).
 2. Remove position lamp from position indicator plate (1).
 3. Insert a flat-bladed screwdriver to (A) (at 4 locations) as shown, and bend each hook slightly to raise position indicator plate (1) and remove from control device assembly (2).
 4. Remove bracket from control device assembly (2).
 5. Remove CVT device harness connector from control device assembly (2).
6. Release tabs (A) on shift lock solenoid and park position switch assembly from hooks (B) on control device assembly to shift lock solenoid and park position switch assembly.

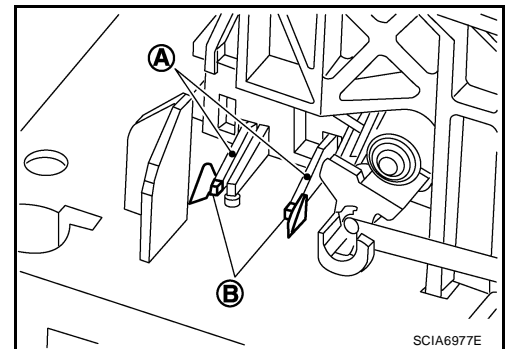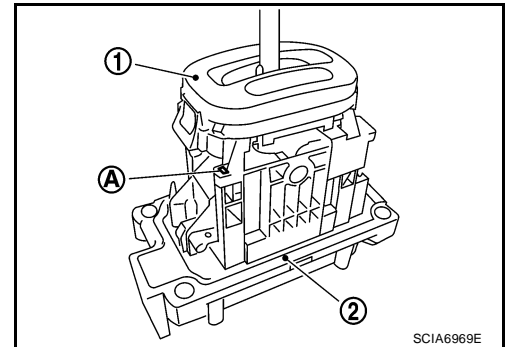

ASSEMBLY

Assembly is in the reverse order of disassembly.

SHIFT CONTROL SYSTEM

Selector Lever Knob Removal and Installation REMOVAL

UCS006XQ


CAUTION:

Make sure that parking brake is applied before removal/installation.

1. Set selector lever knob (1) in "N" position.
2. Slide knob cover (2) downward.
3. Pull out lock pin (3) from selector lever knob (1).
4. Remove selector lever knob (1) and knob cover (2) as a set from selector lever.

CAUTION:

Do not push selector button.

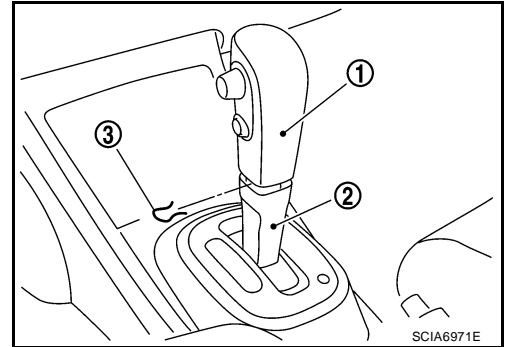


INSTALLATION

1. Insert lock pin (1) to selector lever knob (2).
2. Install knob cover (3) to selector lever knob (2).
3. Set selector lever in "N" position.
4. Install selector lever knob over selector lever until a click is felt.

CAUTION:

- Do not tilt selector lever knob when installing. Install it straight, and do not tap or apply any shock to install it.
- Do not push selector button.

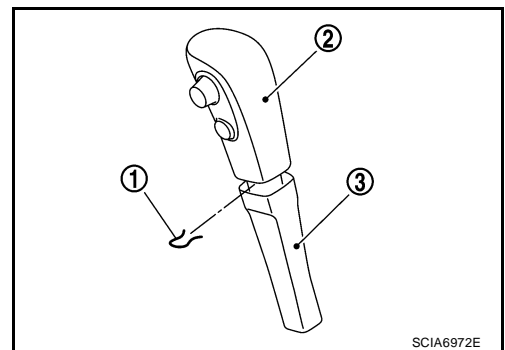

Adjustment of CVT Position

UCS0064J

CAUTION:

Make sure that parking brake is applied before adjustment.

1. Loosen the control cable nut (A) and place the manual lever (1) in "P" position.
2. Place selector lever in "P" position.
3. Push the control cable (2) in with a load of 9.8 N (approximately 1 kg, 2.2 lb). Release the control cable and temporarily tighten the control cable nut.

NOTE:

Do not move the manual lever. Make sure the manual lever stays in the "P" position.


4. Tighten the control cable nut.

CAUTION:

Secure the manual lever when tightening nut.

Control cable nut: Refer to [CVT-192, "CONTROL CABLE COMPONENTS"](#).

5. Check the operation of the CVT. Refer to [CVT-196, "Checking of CVT Position"](#).

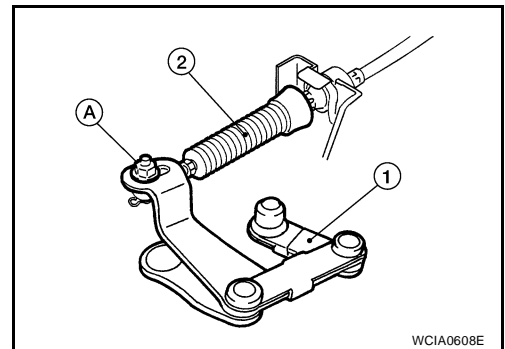


SHIFT CONTROL SYSTEM

UCS0064K

Checking of CVT Position

1. Place selector lever in "P" position, and turn ignition switch ON. (Do not start engine.)
2. Make sure selector lever can be shifted to other than "P" position when brake pedal is depressed. Also make sure selector lever can be shifted from "P" position only when brake pedal is depressed.
3. Move the selector lever and check for excessive effort, sticking, noise or rattle.
4. Confirm the selector lever stops at each position with the feel of engagement when it is moved through all the positions. Check that the actual position of the selector lever matches the position shown by the shift position indicator and the manual lever on the transaxle.
5. The method of operating the selector lever to individual positions correctly should be as shown.
 - (A): Press selector button to operate selector lever, while depressing the brake pedal.
 - (B): Press selector button to operate selector lever.
 - (C): Selector lever can be operated without pressing selector button.
6. Confirm the back-up lamps illuminate only when selector lever is placed in the "R" position. Confirm the back-up lamps do not illuminate when the selector lever is pushed toward the "R" position side with the gear position remained in the "P" or "N" position.
7. Confirm the engine can only be started with the selector lever in the "P" and "N" positions.
8. Make sure transaxle is locked completely in "P" position.

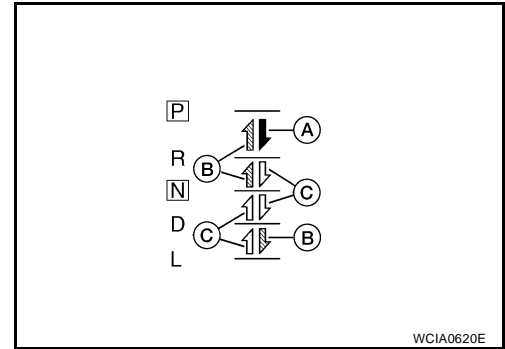

CVT SHIFT LOCK SYSTEM

CVT SHIFT LOCK SYSTEM

PFP:00000


Description

UCS0064L

- The mechanical key interlock mechanism also operates as a shift lock:
With the ignition switch turned to ON, selector lever cannot be shifted from "P" position to any other position unless brake pedal is depressed.
With the key removed, selector lever cannot be shifted from "P" position to any other position.
The key cannot be removed unless selector lever is placed in "P" position.
- The shift lock and key interlock mechanisms are controlled by the ON-OFF operation of the shift lock solenoid and by the operation of the rotator and slider located inside key cylinder, respectively.

Shift Lock System Electrical Parts Location

UCS0064M

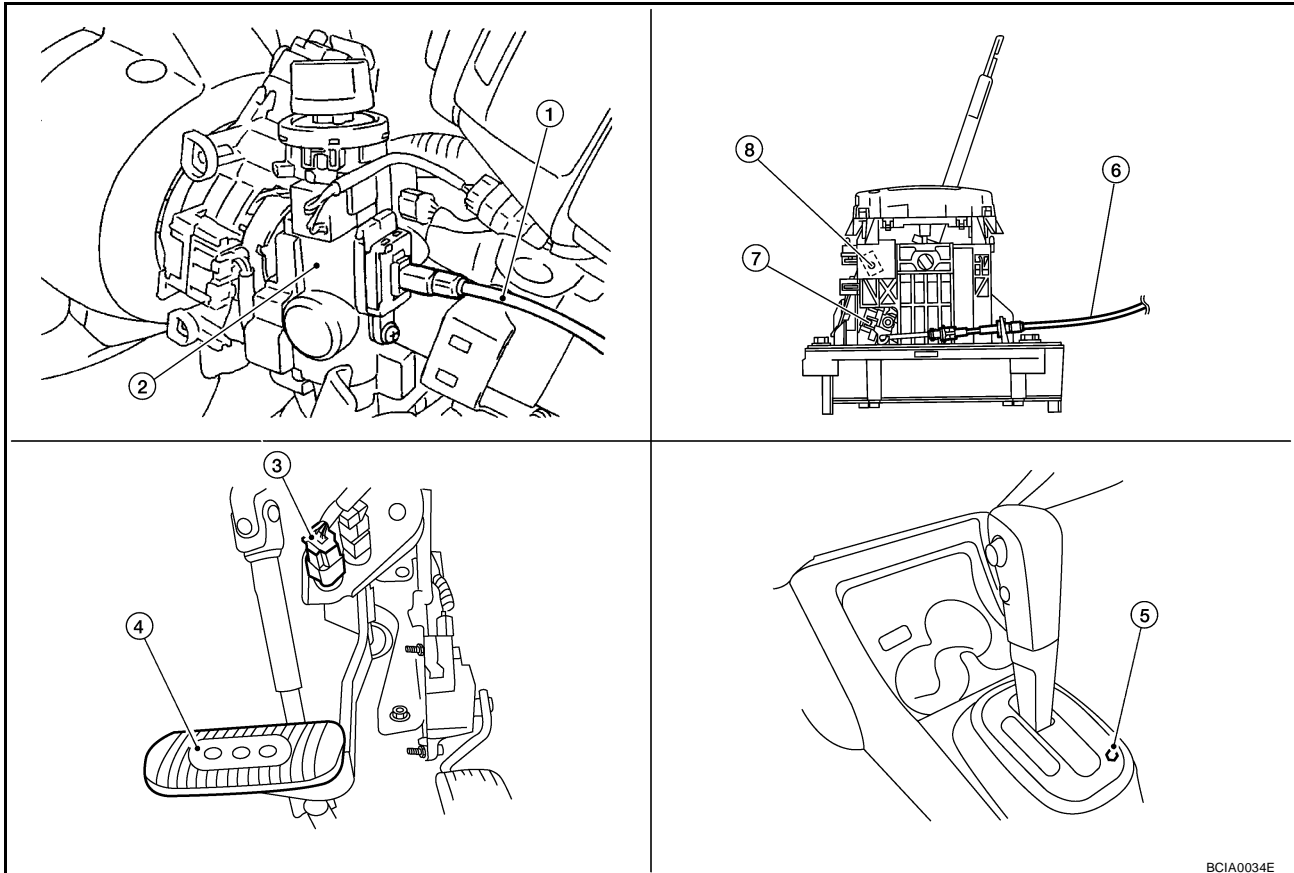

1. Key interlock cable
4. Brake pedal
7. Shift lock solenoid

2. Key cylinder
5. Shift lock release button
8. Park position switch



3. Stop lamp switch
6. Key interlock cable

CVT SHIFT LOCK SYSTEM

Wiring Diagram — CVT — SHIFT

UCS0064N

CVT-SHIFT-01

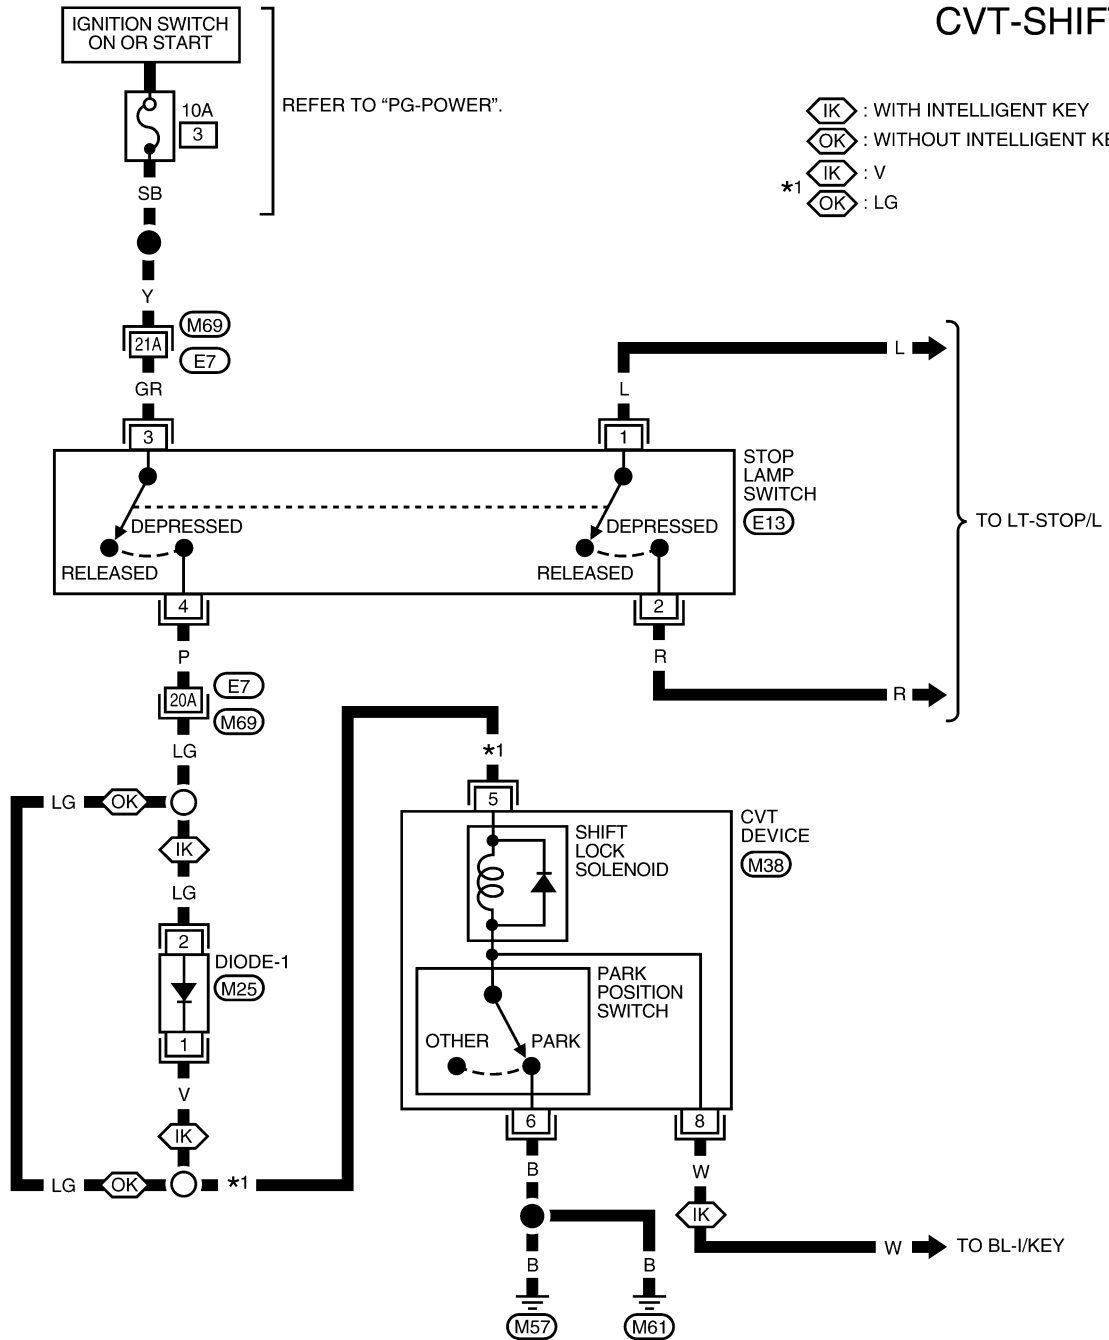

REFER TO THE FOLLOWING.
 (M69) - SUPER MULTIPLE JUNCTION (SMJ)

BCWA0685E

CVT SHIFT LOCK SYSTEM

UCS006KN

Diagnostic Procedure

SYMPTOM 1:

- Selector lever cannot be moved from “P” position with ignition switch in ON position and brake pedal depressed.
- Selector lever can be moved from “P” position with ignition key in ON position and brake pedal released.
- Selector lever can be moved from “P” position when ignition switch is removed from key cylinder.

SYMPTOM 2:

- Ignition key cannot be removed when selector lever is set to “P” position.
- Ignition key can be removed when selector lever is set to any position except “P” position.

1. CHECK KEY INTERLOCK CABLE

Check key interlock cable for damage.

OK or NG

OK >> GO TO 2.

NG >> Repair key interlock cable. Refer to [AT-239, "Removal and Installation"](#).

2. CHECK CVT POSITION

Check CVT position. Refer to [CVT-196, "Checking of CVT Position"](#).

OK or NG

OK >> GO TO 3.

NG >> Adjust control cable. Refer to [CVT-195, "Adjustment of CVT Position"](#).

3. CHECK SHIFT LOCK SOLENOID AND PARK POSITION SWITCH

1. Turn ignition switch ON. (Do not start engine.)
2. Selector lever is set in “P” position.
3. Check operation sound.

| Condition | Brake pedal | Operation sound |
|--|-------------|-----------------|
| When ignition switch is turned to ON position and selector lever is set in “P” position. | Depressed | Yes |
| | Released | No |

OK or NG

OK >> **INSPECTION END**

NG - 1 >> With intelligent key: GO TO 4.

NG - 2 >> Without intelligent key: GO TO 5.

4. CHECK POWER SOURCE

1. Turn ignition switch ON. (Do not start engine.)
2. Check voltage between CVT device harness connector terminal 5 and ground.

Voltage:


Brake pedal depressed: Battery voltage

Brake pedal released: 0V

OK or NG

OK >> GO TO 8.

NG >> GO TO 6.

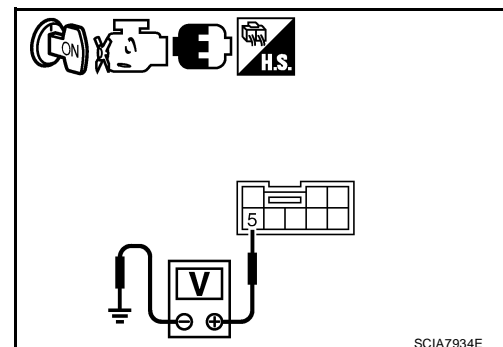

CVT SHIFT LOCK SYSTEM

5. CHECK POWER SOURCE

1. Turn ignition switch ON. (Do not start engine.)
2. Check voltage between CVT device harness connector terminal 5 and ground.

Voltage:


Brake pedal depressed: Battery voltage

Brake pedal released: 0V

OK or NG

OK >> GO TO 9.

NG >> GO TO 6.

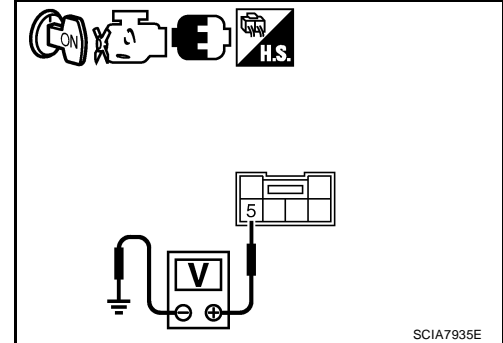

6. CHECK STOP LAMP SWITCH

1. Turn ignition switch OFF.
2. Disconnect stop lamp switch harness connector.
3. Check continuity between stop lamp switch harness connector terminals 3 and 4.


| Condition | Continuity |
|-------------------------------|------------|
| When brake pedal is depressed | Yes |
| When brake pedal is released | No |

Check stop lamp switch after adjusting brake pedal. Refer to [BR-6, "BRAKE PEDAL"](#).

OK or NG

OK >> GO TO 7.

NG >> Repair or replace damaged parts.

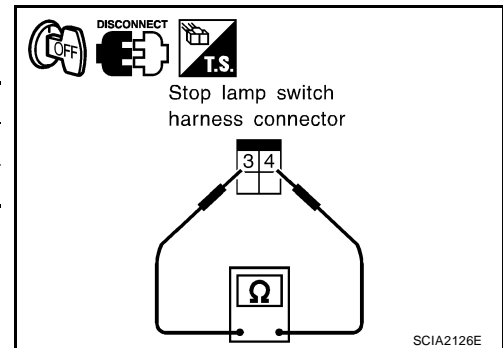

7. DETECT MALFUNCTIONING ITEM

Check the following. If any items are damaged, repair or replace damaged parts.

- Harness for short or open between ignition switch and stop lamp switch harness connector
- Harness for short or open between stop lamp switch harness connector and CVT device harness connector
- 10A fuse [No.3, located in the fuse block (J/B)]
- Ignition switch, Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace damaged parts.

CVT SHIFT LOCK SYSTEM

8. CHECK GROUND CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect CVT device harness connector.
3. Check continuity between CVT device harness connector terminal 6 and ground.

Continuity should exist.

4. Connect CVT device harness connector.

OK or NG

- OK >> Replace shift lock solenoid and park position switch assembly.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

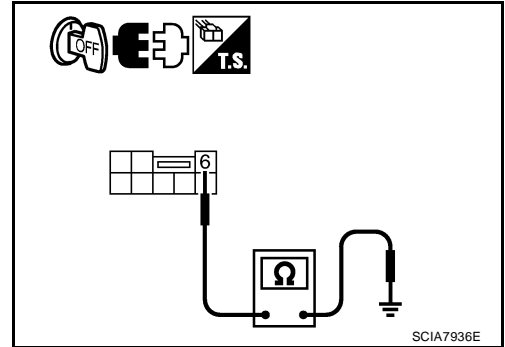

9. CHECK GROUND CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect CVT device harness connector.
3. Check continuity between CVT device harness connector terminal 6 and ground.

Continuity should exist.

4. Connect CVT device harness connector.

OK or NG

- OK >> Replace shift lock solenoid and park position switch assembly.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

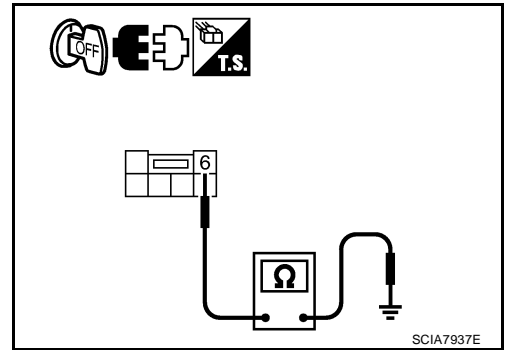

A
B
CVT
D
E
F
G
H
I
J
K
L
M


KEY INTERLOCK CABLE

PFP:34908

KEY INTERLOCK CABLE

Removal and Installation COMPONENTS

UCS006XR

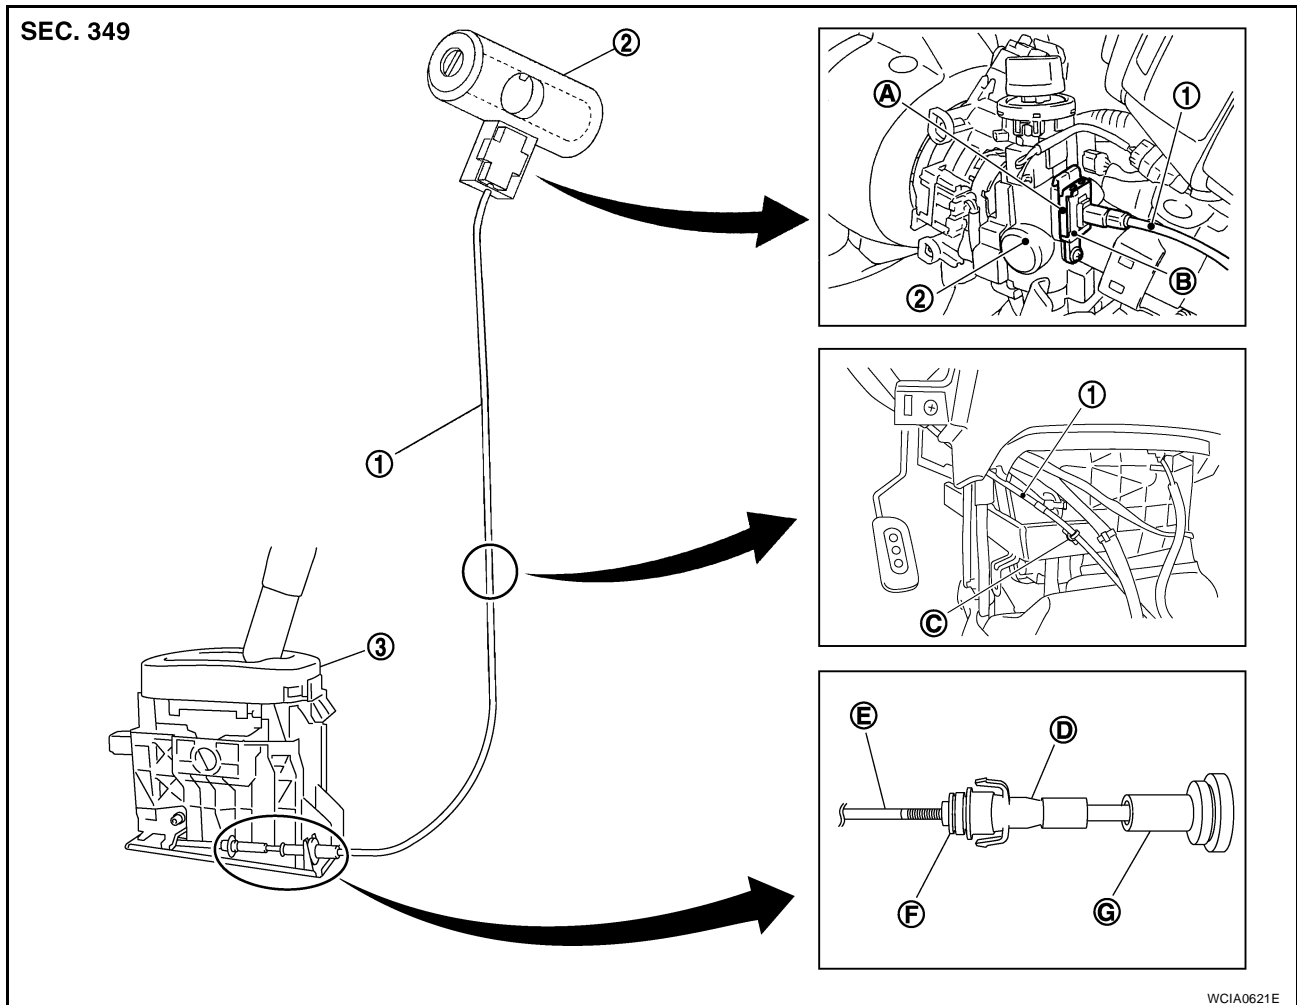

REMOVAL

Refer to the figure for key interlock cable removal procedure.


CAUTION:

Make sure that parking brake is applied before removal/installation.


1. Place the selector lever in the "N" position.
2. Remove the selector lever knob. Refer to [CVT-195, "Selector Lever Knob Removal and Installation"](#).
3. Remove the center console assembly. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#).

KEY INTERLOCK CABLE


- Slide the slider (A) toward the casing cap (B) while pressing tabs (C) on the slider to separate the slider (A) from the adjust holder (D).
- Remove the casing cap (B) from the cable bracket on the control device assembly.
- Remove the key interlock cable from the key interlock rod (E).

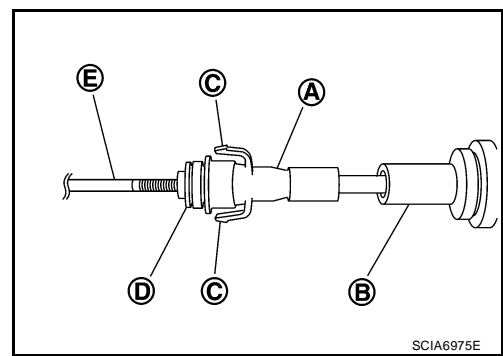

- Remove steering column cover (upper and lower) and instrument lower finisher. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#).
- Pull out the lock plate (A) from the holder (B).
- Remove the key interlock cable (1) from the key cylinder (2).

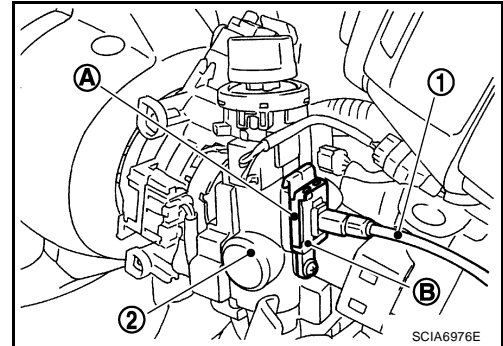


- Remove the clip (A), and then remove the key interlock cable (1).

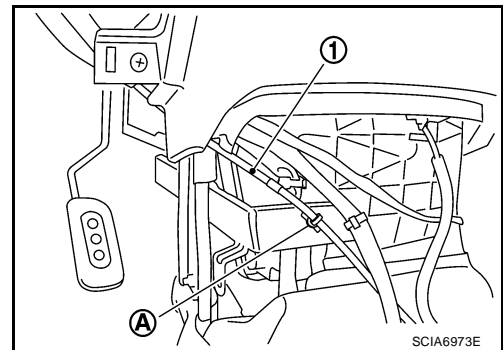

INSTALLATION

CAUTION:

- Install key interlock cable in such a way that it will not be damaged by sharp bends, twists or interference with adjacent parts.
 - After installing key interlock cable to control device assembly, make sure that casing cap and bracket are firmly secured in their positions.
- Place the selector lever in the "P" position.
 - Turn ignition switch to "ACC" or "ON" position.
 - Set the key interlock cable (1) to the key cylinder (2).
 - Install the lock plate (A) to the holder (B).
 - Turn ignition switch to "LOCK" position.

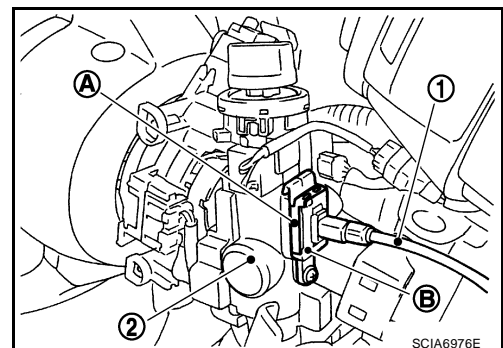

KEY INTERLOCK CABLE

- Temporarily install the adjust holder (A) to the key interlock rod (B).
- Install the casing cap (C) to the cable bracket (D) on the control device assembly.

CAUTION:



- Do not bend or twist key interlock cable excessively when installing.
- After installing key interlock cable to cable bracket (D) on control device assembly, make sure casing caps (C) is firmly secured in cable bracket (D) on control device assembly.

- If casing cap (C) is loose [less than 39.2 N (4.0 kg, 8.8 lb) removing force], replace key interlock cable.


- Slide the slider (A) toward the key interlock rod (D) while pressing the pull lock (B) down to securely connect the adjust holder (C) with the key interlock rod (D).

CAUTION:

- Do not press tabs when holding slider (A).
- Do not apply any side to side force to key interlock rod (D) when sliding slider (A).

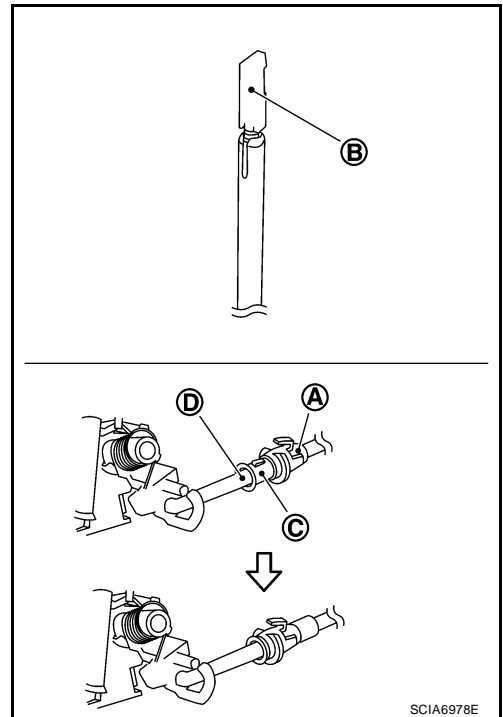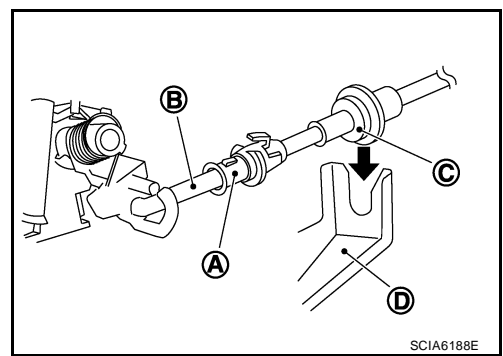

- Secure the key interlock cable (1) with the clip (A).
- Install steering column cover (upper and lower) and instrument lower finisher. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#).
- Install the center console assembly. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#).
- Install the selector lever knob. Refer to [CVT-195, "Selector Lever Knob Removal and Installation"](#).
- Check shift lock system. Refer to [CVT-197, "Description"](#).

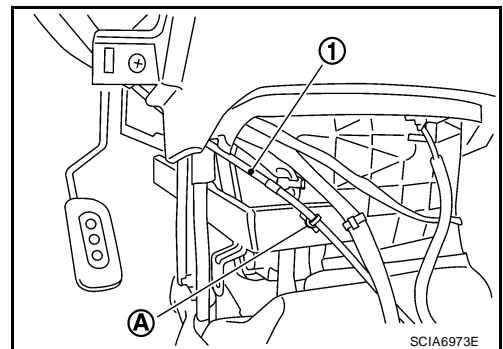


AIR BREATHER HOSE

PF3:31098

AIR BREATHER HOSE

Removal and Installation

UCS0064R

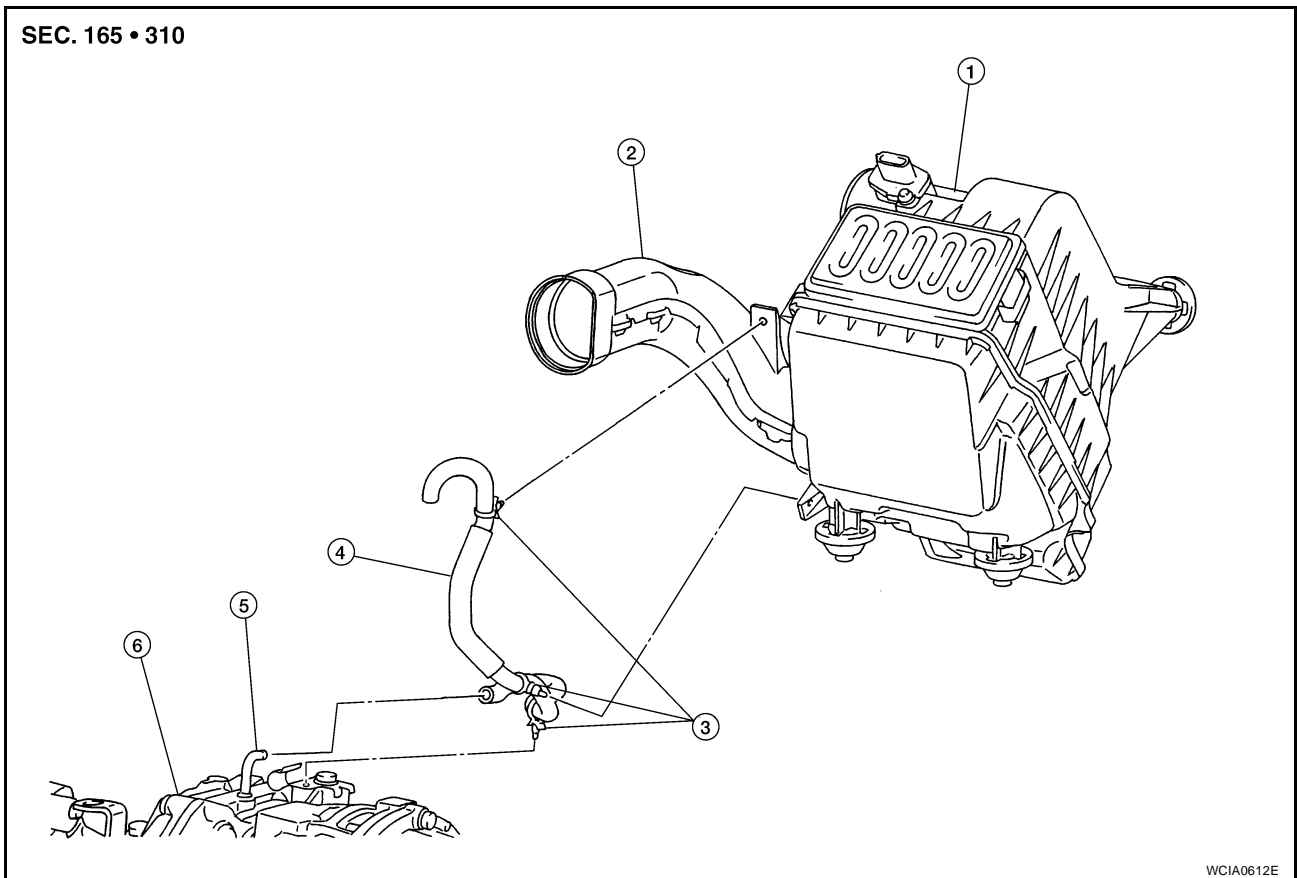

1. Air cleaner case
4. Air breather hose

2. Air duct
5. Air breather tube

3. Clip
6. CVT

REMOVAL

1. Remove air duct (inlet), air duct and air cleaner case. Refer to [EM-16, "AIR CLEANER AND AIR DUCT"](#).
2. Remove air breather hose.

INSTALLATION


Installation is in the reverse order of removal.

CAUTION:

Make sure air breather hose is not collapsed or blocked due to folding or bending when installed.

NOTE:

- Install the air breather hose (1) to the air breather tube (2) so that the paint mark (A) faces upward. Also make sure the air breather hose end is pushed up to the tube bend portion.
- When installing air breather hose (1) to air duct and air cleaner case, make sure to fully insert the hose clips.

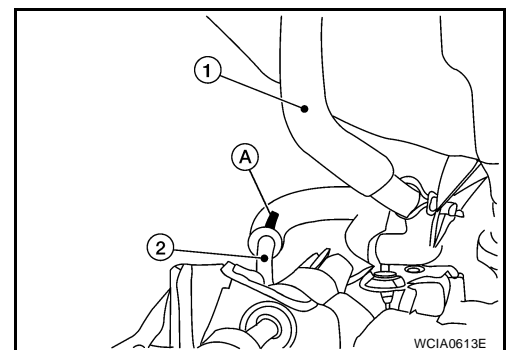


DIFFERENTIAL SIDE OIL SEAL

PF3:33111

UCS0064S

DIFFERENTIAL SIDE OIL SEAL

Removal and Installation COMPONENTS

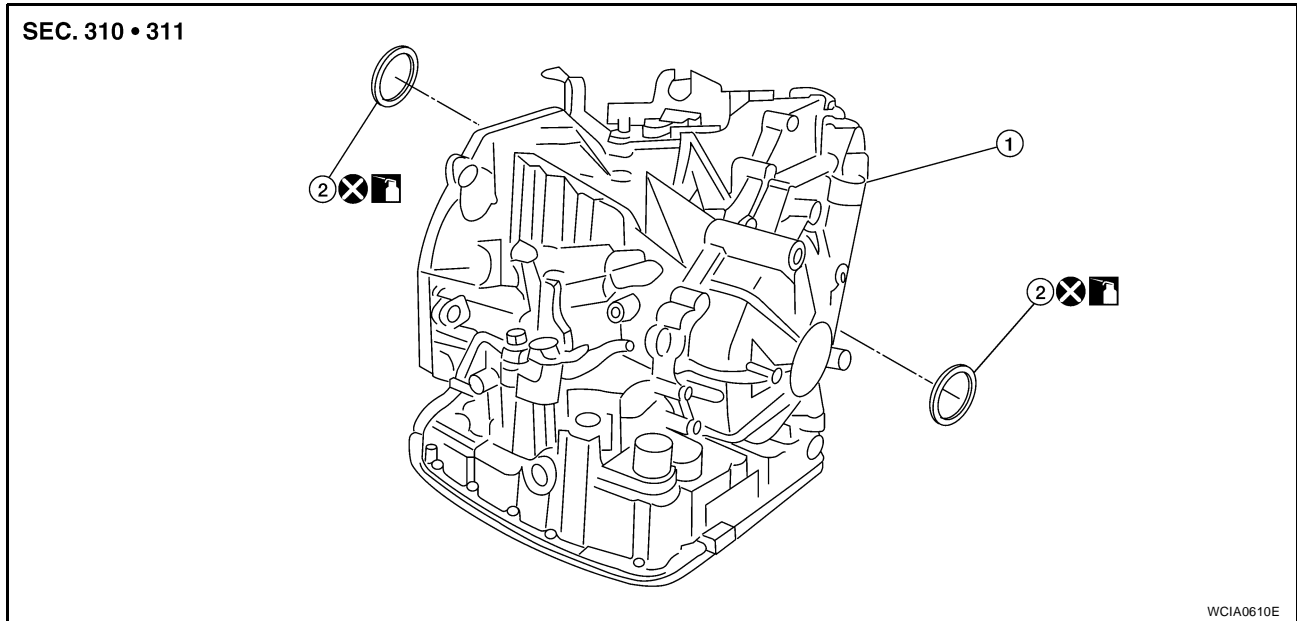

1. CVT

2. Differential side oil seal


: Apply CVT Fluid NS-2.

REMOVAL

1. Remove drive shaft assembly. Refer to [FAX-8, "FRONT DRIVE SHAFT"](#).
2. Remove differential side oil seal using a suitable tool.

CAUTION:

Do not scratch transaxle case or converter housing.

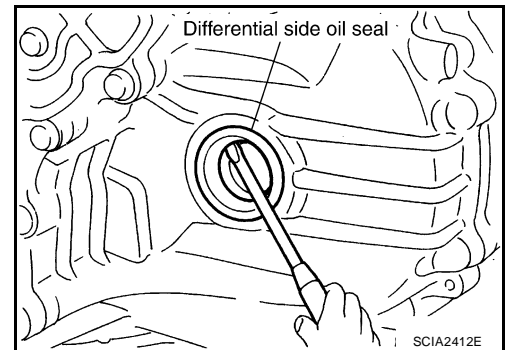


INSTALLATION

1. Drive the new differential side oil seal into the transaxle case side (B) and converter housing side (C) until it is flush using tool.
Unit: mm (in)

| | |
|------------------------------|----------------------|
| Tool number (Kent-Moore No.) | — (J-47244) |
| | ST33400001 (J-47005) |
| Dimensions A | 0±0.5 (0±0.020) |

CAUTION:

- Do not reuse differential side oil seals.
- Apply specified NISSAN CVT fluid to side oil seals.

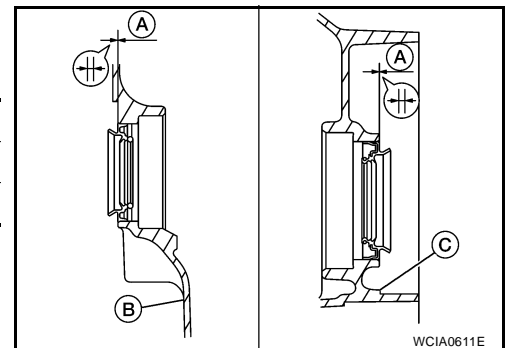

2. Install drive shaft assembly. Refer to [FAX-8, "FRONT DRIVE SHAFT"](#).
3. Check CVT fluid level and leakage. Refer to [CVT-16, "Checking CVT Fluid"](#).


TRANSAXLE ASSEMBLY

PFP:32020

UCS0064V

TRANSAXLE ASSEMBLY


Removal and Installation COMPONENTS

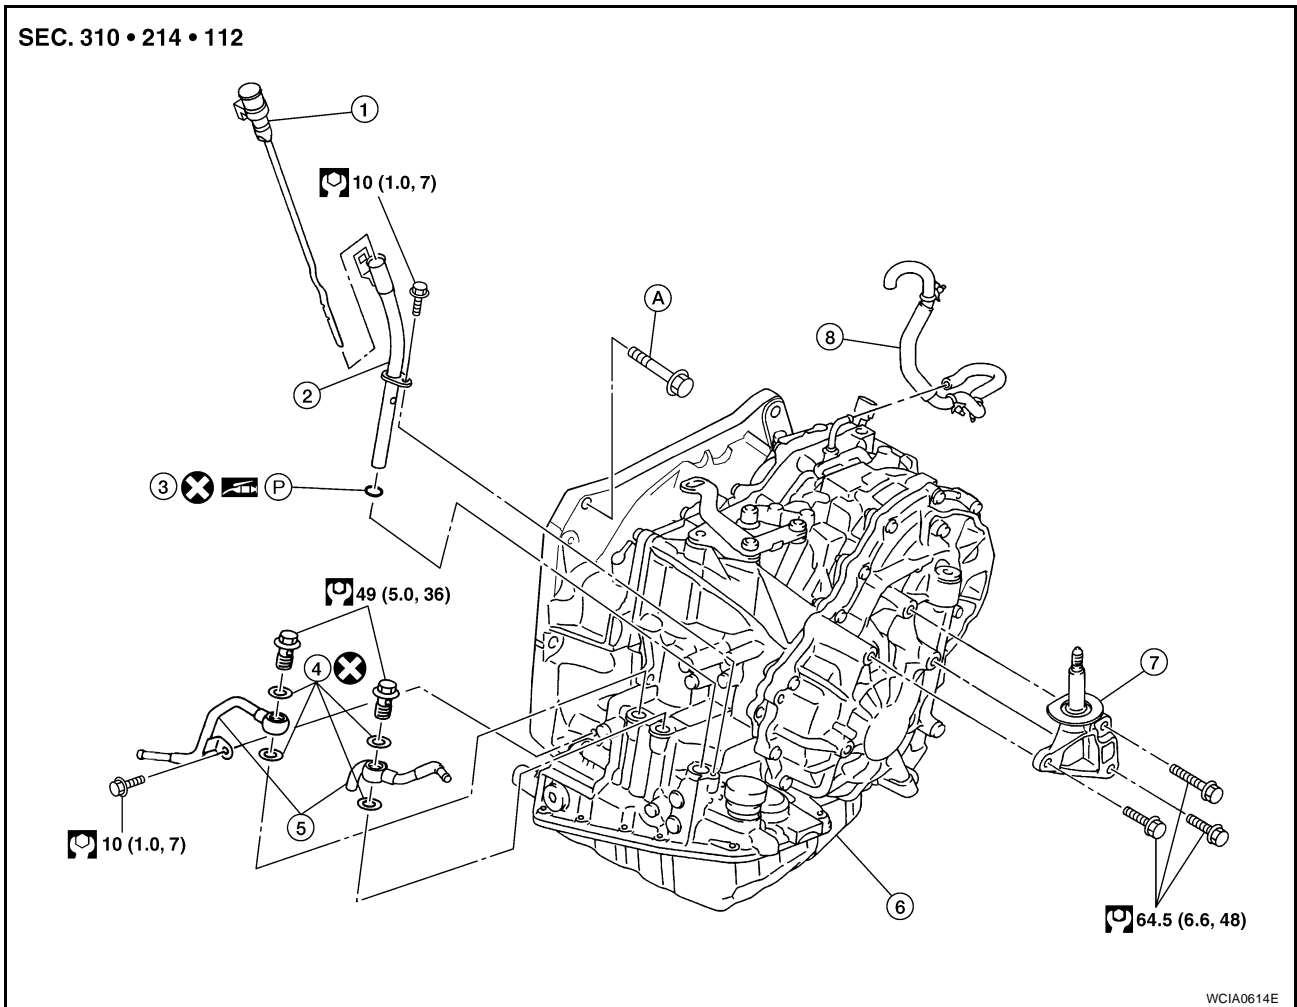

- | | | |
|---------------------------------|----------------------------|---|
| 1. CVT fluid level gauge | 2. CVT fluid charging pipe | 3. O-ring |
| 4. Copper washer | 5. Fluid cooler tube | 6. Transaxle assembly |
| 7. Engine mounting bracket (LH) | 8. Air breather hose | A. Refer to CVT-208, "INSTALLATION" . |

REMOVAL

1. Remove the engine and transaxle as an assembly. Refer to [EM-73, "Removal and Installation"](#).
2. Disconnect the secondary speed sensor connector (A) and CVT unit connector (B). Refer to [CVT-11, "Removal and Installation Procedure for CVT Unit Connector"](#).
3. Remove the harness from the transaxle.

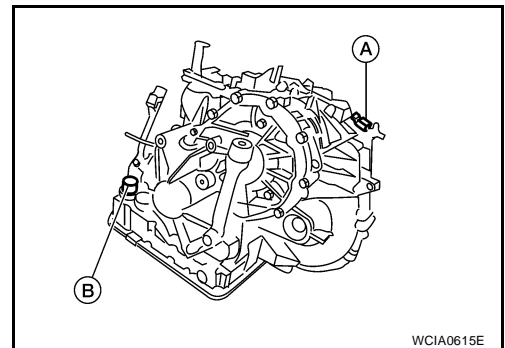


WCIA0615E

TRANSAXLE ASSEMBLY

4. Remove the four drive plate to torque converter nuts.

NOTE:

Rotate the crankshaft clockwise as viewed from front of engine for access to drive plate to torque converter nuts.

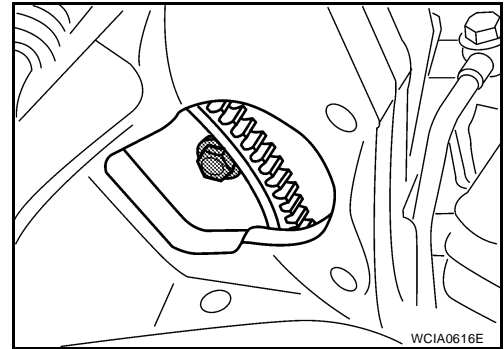

5. Put matching marks on the drive plate and torque converter alignment stud.

CAUTION:

For matching marks, use paint. Never damage the drive plate or torque converter.

6. Remove the transaxle to engine and engine to transaxle bolts.
7. Separate the transaxle from the engine.
8. If necessary, remove the following from the transaxle:

- CVT fluid charging pipe
- Engine mounting bracket (LH)
- Fluid cooler tubes
- Air breather hose
- Any necessary brackets


INSTALLATION

Installation is in the reverse order of removal.

CAUTION:


- When replacing an engine or transmission you must make sure any dowels are installed correctly during re-assembly.
- Improper alignment caused by missing dowels may cause vibration, oil leaks or breakage of drive train components.
- Do not reuse O-rings and copper washers.
- When turning crankshaft, turn it clockwise as viewed from the front of the engine.
- When tightening the nuts for the torque converter while securing the crankshaft pulley bolt, be sure to confirm the tightening torque of the crankshaft pulley bolt. Refer to [EM-37, "TIMING CHAIN"](#).
- After converter is installed to drive plate, rotate crankshaft several turns to check that transaxle rotates freely without binding.
- When installing the torque converter to the transaxle measure distance A.

Distance A: 14.4 mm (0.57 in) or more

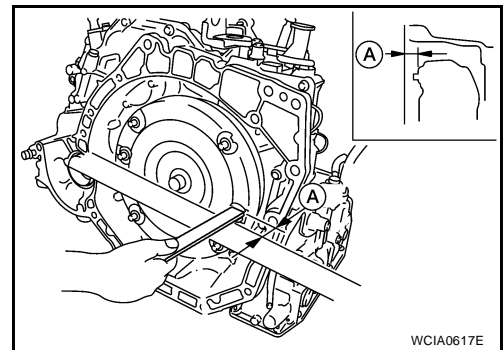


TRANSAXLE ASSEMBLY

- When installing the cooler outlet tube (1) to the transaxle assembly (2), align the cooler tube bracket (A) against the transaxle as shown.

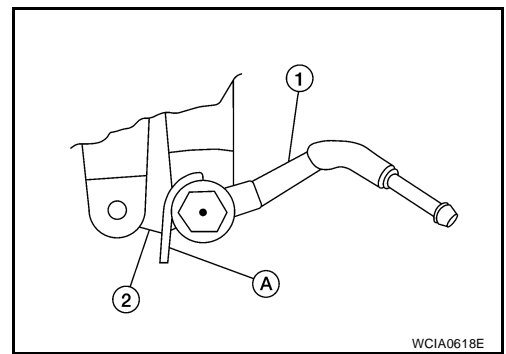


- When installing the transaxle to the engine, align the matching mark on the drive plate with the matching mark on the torque converter alignment stud.
- When securing the transaxle to the engine, attach the bolts in accordance with the following standard.

| Bolt No. | 1 (Transaxle to engine) | 2 (Engine to transaxle) |
|--|-------------------------|-------------------------|
| Number of bolts | 2 | 7 |
| Bolt length "A" mm (in) | 55 (2.17) | 50 (1.97) |
| Tightening torque N-m (kg-m, ft-lb) | 62 (6.3, 46) | |

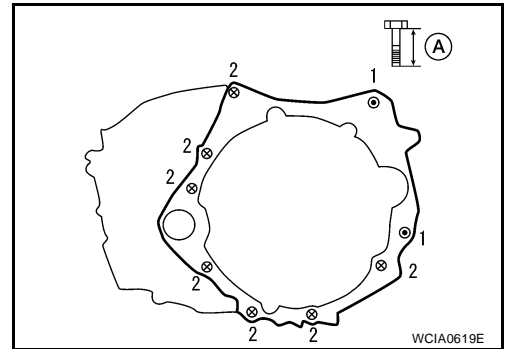

- When installing the drive plate to torque converter nuts, tighten them temporarily. Then tighten the nuts to the specified torque.

Converter nuts: : 51 N-m (5.2 kg-m, 38 ft-lb)

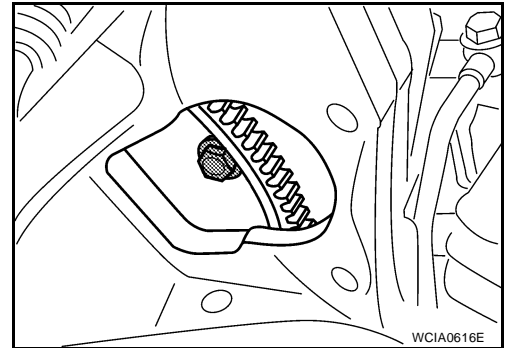

- After completing installation check for fluid level, fluid leakage, and the positions of CVT. Refer to [CVT-16, "Checking CVT Fluid"](#) , [CVT-195, "Adjustment of CVT Position"](#) and [CVT-196, "Checking of CVT Position"](#) .
- When replacing the CVT assembly, erase EEPROM in TCM. Refer to [CVT-9, "Service After Replacing TCM and Transaxle Assembly"](#) .

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

PFP:00030

General Specifications

UCS0064W

| | | |
|-------------------------|-------------------|---------------------------------------|
| Applied model | | MR18DE engine |
| CVT model | | RE0F08A |
| CVT assembly | Model code number | 1XB6B |
| Transmission gear ratio | "D" position | Variable |
| | Reverse | 2.689 |
| | Final drive | 5.473 |
| Recommended fluid | | NISSAN CVT Fluid NS-2*1 |
| Fluid capacity | | 8.3 liter (8-3/4 US qt, 7-1/4 Imp qt) |

CAUTION:

- Use only Genuine NISSAN CVT Fluid NS-2. Do not mix with other fluid.
- Using CVT fluid other than Genuine NISSAN CVT Fluid NS-2 will deteriorate in driveability and CVT durability, and may damage the CVT, which is not covered by the warranty.

*1: Refer to [MA-11, "Fluids and Lubricants"](#) .

Vehicle Speed When Shifting Gears

UCS0064X

Numerical value data are reference values.

| Engine type | Throttle position | Shift pattern | Engine speed (rpm) | |
|-------------|-------------------|------------------------------------|---------------------|---------------------|
| | | | At 40 km/h (25 MPH) | At 60 km/h (37 MPH) |
| MR18DE | 8/8 | "D" position | 3,600 - 4,400 | 4,400 - 5,200 |
| | | Overdrive-off mode "L" position | | |
| | 2/8 | "D" position | 1,400 - 2,400 | 1,500 - 2,500 |
| | | Overdrive-off mode | 2,200 - 3,000 | 2,800 - 3,600 |
| | | "L" position | 3,200 - 4,000 | 3,900 - 4,700 |

CAUTION:

Lock-up clutch is engaged when vehicle speed is approximately 18 km/h (11 MPH) to 90 km/h (56 MPH).

Stall Speed

UCS0064Y

| | |
|-------------|-------------------|
| Stall speed | 2,300 - 3,200 rpm |
|-------------|-------------------|

Line Pressure

UCS0064Z

| Engine speed | Line pressure kPa (kg/cm ² , psi) |
|--------------|--|
| | "R", "D" and "L" positions |
| At idle | 650 (6.63, 94.3) |
| At stall | 4,250 (43.35, 616.3)* |

*: Reference values

Solenoid Valves

UCS00650

| Name | Resistance (Approx.) | Terminal |
|---|----------------------|----------|
| Pressure control solenoid valve B (secondary pressure solenoid valve) | 2.5 - 5.0 Ω | 3 |
| Pressure control solenoid valve A (line pressure solenoid valve) | | 2 |
| Torque converter clutch solenoid valve | 5 - 20 Ω | 12 |
| Lock-up select solenoid valve | | 13 |

SERVICE DATA AND SPECIFICATIONS (SDS)

CVT Fluid Temperature Sensor

UCS00651

| Name | Condition | CONSULT-II "DATA MONITOR" (Approx.) | Resistance (Approx.) |
|--------------|--------------|-------------------------------------|----------------------|
| ATF TEMP SEN | 20°C (68°F) | 2.0 V | 6.5 kΩ |
| | 80°C (176°F) | 1.0 V | 0.9 kΩ |

Primary Speed Sensor

UCS00652

| Name | Condition | Data (Approx.) |
|----------------------|--|----------------|
| Primary speed sensor | When driving ["L" position, 20 km/h (12 MPH)]. | 1000 Hz |

Secondary Speed Sensor

UCS00653

| Name | Condition | Data (Approx.) |
|------------------------|--|----------------|
| Secondary speed sensor | When driving ["D" position, 20 km/h (12 MPH)]. | 570 Hz |

Removal and Installation

UCS00654

| | |
|--|---------------------------|
| Distance between end of converter housing and torque converter | 14.4 mm (0.57 in) or more |
|--|---------------------------|

A
B
CVT
D
E
F
G
H
I
J
K
L
M

SERVICE DATA AND SPECIFICATIONS (SDS)
