

---

MANUAL PART NUMBER: 400-0001-003  
PRODUCT REVISION: 1

## **DA1902SX**

**1 RGBHV - IN, 2 VGA - OUT**

**DISTRIBUTION AMPLIFIER**

**USER'S GUIDE**

# DISTRIBUTION AMPLIFIERS

## INTRODUCTION

Altinex appreciates your purchase of the **DA1902SX** Distribution Amplifier. We are sure you will find it a reliable and useful product.

Superior performance for the right price backed by solid technical and customer support is what we have to offer.

The product you are holding in your hands is designed using state-of-the-art technology and is superior to anything available on the market. You will find this and our other products reliable, long lasting, and simple to operate.

We are committed to providing our customers with solutions to the most demanding audio-visual installations at very competitive pricing.

We appreciate your selection of our products and are confident that you will join the ranks of our many satisfied customers throughout the world.

This manual covers:

**DA1902SX** – 1 RGBHV – in, 2 VGA - out  
Distribution Amplifier

## TABLE OF CONTENTS

	Page
PRECAUTIONS / SAFETY WARNINGS .....	2
GENERAL .....	2
RACK MOUNT SAFETY GUIDELINES .....	2
INSTALLATION .....	2
CLEANING .....	2
FCC / CE NOTICE .....	2
ABOUT YOUR DISTRIBUTION AMPLIFIER .....	3
TECHNICAL SPECIFICATION .....	3
DESCRIPTION OF <b>DA1902SX</b> .....	4
INPUT AND OUTPUTS .....	4
APPLICATION DIAGRAM .....	5
THE SERIAL DISTRIBUTION SYSTEM.....	5
INSTALLING YOUR DISTRIBUTION AMPLIFIER.....	6
OPERATION .....	7
ACCESSORIES.....	7
FREQUENTLY ASKED QUESTIONS.....	7
TROUBLESHOOTING GUIDE .....	8
ALTINEX POLICY .....	8
LIMITED WARRANTY.....	8
RETURN POLICY .....	8
CONTACT INFORMATION .....	8

# DISTRIBUTION AMPLIFIERS

## PRECAUTIONS / SAFETY WARNINGS 1

Please read this manual carefully before using your **DA1902SX** Distribution Amplifier. Keep this manual handy for future reference. These safety instructions are to ensure the long life of your **DA1902SX** and to prevent fire and shock hazard. Please read them carefully and heed all warnings.

### 1.1 GENERAL

- Unauthorized personnel shall not open the unit since there are high-voltage components inside.
- Qualified Altinex service personnel, or its authorized representative must perform all service.

### 1.2 SAFETY GUIDELINES FOR THE RACK-MOUNTING OF THE DA1902SX

- Maximum operating ambient temperature is 35 (degrees C).
- Never restrict the air flow through the devices' fan or vents.
- When installing equipment into a rack, distribute the units evenly. Otherwise, hazardous conditions may be created by an uneven weight distribution.
- Connect the unit to a properly rated supply circuit.
- Reliable Earthing (Grounding) of Rack-Mounted Equipment should be maintained.

### 1.3 INSTALLATION

- For best results, place the **DA1902SX** Distribution Amplifier on a flat, level surface in a dry area away from dust and moisture.
- To prevent fire or shock, do not expose this unit to rain or moisture. Do not place the **DA1902SX** Distribution Amplifier in direct sunlight, near heaters or heat radiating appliances, or near any liquid. Exposure to direct sunlight, smoke, or steam can harm internal components.
- Handle the **DA1902SX** Distribution Amplifier carefully because dropping or jarring can damage internal components.

- Do not place heavy objects on top of the **DA1902SX**. If the **DA1902SX** is to be mounted to a table or wall, use only Altinex made mounting accessories, such as mount mini-brackets **DA1295SX** and cables for optimum setup.
- To turn off the main power, be sure to remove the cord from the power outlet. The power outlet socket should be installed as close to the equipment as possible, and should be easily accessible.
- Do not pull the power cord or any cable that is attached to the **DA1902SX** Distribution Amplifier.
- If the **DA1902SX** Distribution Amplifier is not used for an extended period, disconnect the power cord from the power outlet.

### 1.4 CLEANING

- Unplug the **DA1902SX** power cord before cleaning. Clean surfaces with a dry cloth. Never use strong detergents or solvents, such as alcohol or thinner. Do not use a wet cloth or water to clean the unit.

### 1.5 FCC / CE NOTICE

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be

# DISTRIBUTION AMPLIFIERS

required to correct the interference at his/her own expense.

- Any changes or modifications to the unit not expressly approved by Altinex, Inc. could void the user's authority to operate the equipment.

## ABOUT YOUR DISTRIBUTION AMPLIFIER 2

The **DA1902SX** is essentially a 1-in 2-out RGBHV distribution amplifier, which is unique due to the fact that it offers 5 BNC connectors for the inputs and two 15-pin HD (VGA - type) connectors for the outputs. This makes it perfect for special applications where a RGBHV signal on 5 BNC connectors is connected to two VGA type monitors. If desired, the 15-pin HD connectors can also be adapted to 5 BNC connectors using adapter cables.

Though primarily designed for RGBHV format signals, the **DA1902SX** is capable of passing RGSB and RGSB signals as well. With its compact design and very low cost, the **DA1902SX** makes for an ideal distribution amplifier in either a small or a large system.

In addition to being used for applications with two displays, the **DA1902SX** also acts as an input module for the Altinex Serial Distribution System. This is a system, which uses the concept of creating a high-resolution video bus in large distribution applications with many displays. This system provides a lower cost and a higher performance alternative to the concept of feeding home runs (a run of cable) to a single large distribution amplifier. In the Serial Distribution System, the **DA1902SX** is the starting point of the bus, which feeds up to thirty output modules (**DA1904SX**), through its 15-pin HD connectors with VGA type cables.

## TECHNICAL SPECIFICATION 3

FEATURES/DESCRIPTION	DA1902SX
<b>GENERAL</b>	
<b>Inputs</b>	1
Input Connector	5 BNC Female
<b>Outputs</b>	2
Output Connectors	Two 15-pin HD Female
<b>Compatibility</b>	High Resolution RGBHV, RGSB, RGSB and RGSBs

Table 1. **DA1902SX** General

MECHANICAL	DA1902SX
Material	0.1" Al
Finish	Gray
Top Panel	Lexan
Height (inches)	3.00in (76mm)
Width (inches)	4.50in (114mm)
Depth (inches)	1.00in (25mm)
Weight (pounds)	0.4in (0.18kg)
Ship Weight (pounds)	2.0lbs (0.91kg)
T° Operating	10°C-35°C
T° Maximum	50°C
Humidity	90% non-condensing
MTBF (calculations)	40,000 hrs

Table 2. **DA1902SX** Mechanical


ELECTRICAL	DA1902SX
<b>Input Video Signal</b>	
Analog Signal	1.5V p-p max
Impedance	75 Ohms
<b>Input Sync Signals</b>	
Horizontal, Vertical, & C-Sync	TTL(+/-)
Sync on Green	-0.3V
Impedance	10 k Ohms
<b>Output Video Signals</b>	
Analog Signal	Gain of 1.05 (+/-5%)
Fall/Rise Time (ns)	1.4
Impedance	75 Ohms
<b>Output Sync Signals</b>	
Composite Sync	TTL(+/-)
Sync on Green	-0.3V
Impedance	22 Ohms
<b>Frequency Compatibility</b>	
Typical Video Bandwidth	380 MHz
Minimum Video Bandwidth	350 MHz
Horizontal	15-200 kHz

# DISTRIBUTION AMPLIFIERS

Vertical	47-180 Hz
<b>Power</b>	
External Power Adapter	9V 500mA

Table 3. DA1902SX Electrical

## DESCRIPTION OF DA1902SX 4

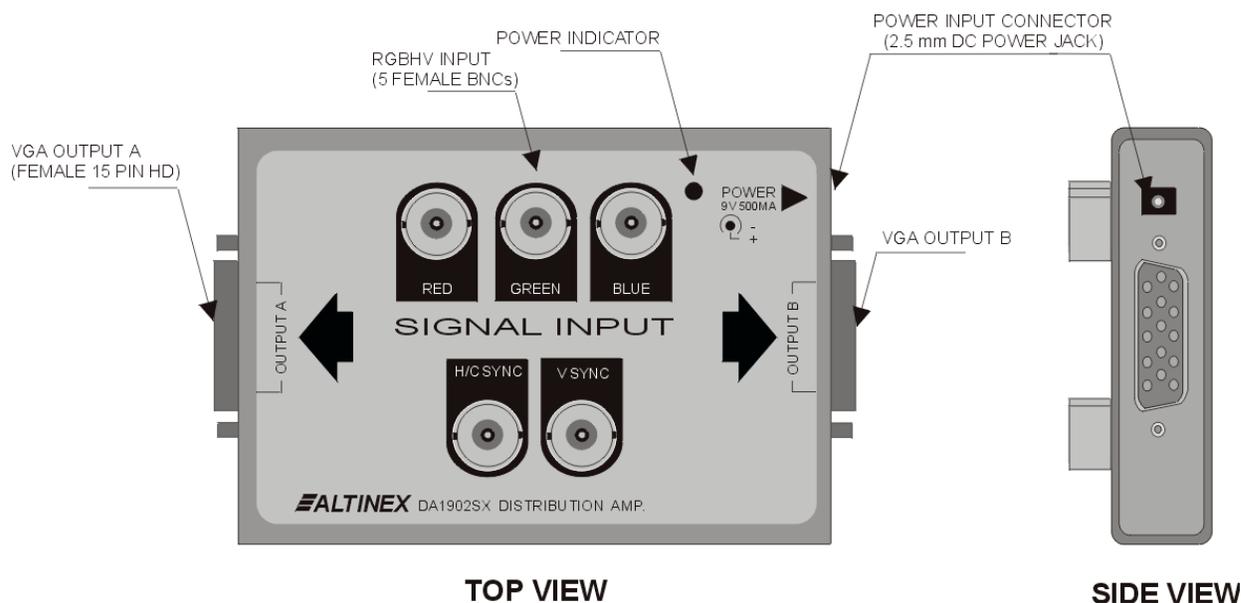

### INPUT AND OUTPUTS

The outputs of the **DA1902SX** allow signals to be driven through up to 100 feet of cable or more depending on the cable quality and the signal source resolution.

The **DA1902SX** may be used with a variety of input cable types. Generally, 5 BNC RGBHV to RGBHV cables will be used. If it is necessary to adapt from a standard VGA output to the input of the distribution amplifiers, it is also possible to use a 15-pin HD to 5 BNC adaptor as an input cable (MS8100 series adaptor cables).


PIN No.	Input signals on 15-pin HD female connector
1	Red
2	Green
3	Blue
4	No connection
5	No connection
6	Ground
7	Ground
8	Ground
9	No connection
10	Ground
11	No connection
12	No connection
13	Horizontal Sync
14	Vertical Sync
15	No connection

Table 1. The **DA1902SX** Outputs pin-out



# DISTRIBUTION AMPLIFIERS

## SERIAL DISTRIBUTION SYSTEM

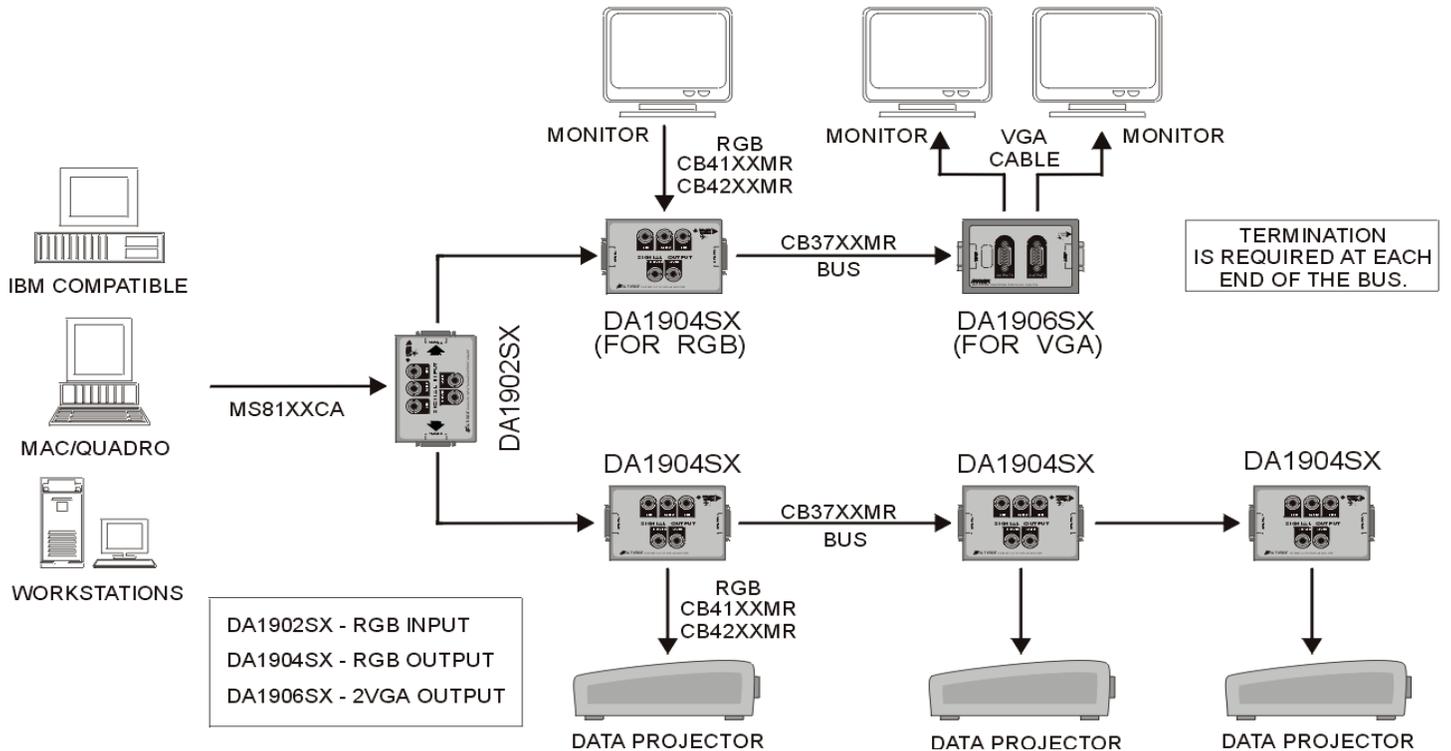

### INSTALLING YOUR DISTRIBUTION AMPLIFIER 6

- Step 1.** Make sure that the correct power adapter is connected to the unit. A red LED will light to indicate that the unit is receiving power.
- Step 2.** Connect the video output of the source (computer or other high-resolution source) to the input of the **DA1902SX** using a short, high, quality coaxial-type cable. If the source offers a VGA type 15-pin HD connector, Altinex part # **MS8102CA** (6' 15-pin HD male to 5 BNC male) may be used.
- Step 3.** Connect monitors or projectors to the outputs of the **DA1902SX** using the appropriate VGA type cables or adapter cables. If the **DA1902SX** were being used in the Serial Distribution System, the outputs of the **DA1902SX** would typically

be connected to the units of the **DA1904SX** by using VGA type cables (Altinex **CB3700** Series Cables).

- Step 4.** If the **DA1902SX** is being used in the Serial Distribution System, make sure that the end of the video bus is properly terminated with a monitor or with a termination plug. This would usually be done on the loop end of the **DA1904SX**.
- Step 5.** Verify that the quality of the picture on all displays is perfect. If you are not receiving a signal, make sure that the display is compatible with the resolution of the computer graphics card.

**CONGRATULATIONS! YOU ARE DONE.**

**If you experience any problems, please call 1-800-258-4623 or 1-714-990-2300 for international calls.**

# DISTRIBUTION AMPLIFIERS

## OPERATION 7

The **DA1902SX** will operate successfully as long as the cables are attached properly and other technical specifications are followed. There are no other adjustments necessary to operate the unit.

## ACCESSORIES 8

Model No.	Description
	<b>RACK MOUNTING ACCESSORIES</b>
<b>DA1295RM</b>	Mount mini-brackets (2 – “L” shape)
	<b>VGA MALE TO MALE CABLES (15-PIN HD TO 15-PIN HD)</b>
<b>CB3703MR</b>	3 ft
<b>CB3706MR</b>	6 ft
<b>CB3715MR</b>	15 ft
<b>CB3725MR</b>	25 ft
<b>CB3750MR</b>	50 ft (Super High Resolution Coaxes)
<b>CB3775MR</b>	75 ft (Super High Resolution Coaxes)
<b>CB37100MR</b>	100 ft (Super High Resolution Coaxes)
<b>CB37150MR</b>	150 ft (Super High Resolution Coaxes)
	<b>VGA MALE TO FEMALE CABLES (15-PIN HD TO 15-PIN HD)</b>
<b>CB3903MR</b>	3 ft
<b>CB3906MR</b>	6 ft
<b>CB3915MR</b>	15 ft
<b>CB3925MR</b>	25 ft
<b>CB3950MR</b>	50 ft (Super High Resolution Coaxes)
<b>CB3975MR</b>	75 ft (Super High Resolution Coaxes)
<b>CB39100MR</b>	100 ft (Super High Resolution Coaxes)
<b>CB39150MR</b>	150 ft (Super High Resolution Coaxes)
	<b>VGA TO RGB ADAPTOR CABLES</b>
<b>MS8102CA</b>	15-pin HD Male to 5 BNC Male, 6ft
<b>MS8104CA</b>	15-pin HD Male to 5 BNC Male, 15ft
<b>MS8105CA</b>	15-pin HD Male to 5 BNC Male, 50 ft
<b>MS8106CA</b>	15-pin HD Male to 5 BNC Female, 6 ft
<b>MS8112CA</b>	15-pin HD Female to 5 BNC Male, 6ft
<b>MS8114CA</b>	15-pin HD Female to 5 BNC Male, 15ft
	<b>POWER ADAPTERS</b>
<b>PC5502US</b>	9V 500mA Power Supply for US
<b>PS5503US</b>	9V 500mA Power Supply for US w/50 ft wire
<b>PS5512UK</b>	9V 500mA Power Supply for UK
<b>PS5522AU</b>	9V 500mA Power Supply for Australia
<b>PS5532GR</b>	9V 500mA Power Supply for Germany
<b>PS5542JP</b>	9V 500mA Power Supply for Japan

## FREQUENTLY ASKED QUESTIONS 9

No:	Question	Answer
1	What is a Distribution Amplifier?	A Distribution Amplifier is a device that allows you to connect a single video source to multiple display devices, such as monitors or projectors used in presentation applications.
2	What should I have when I use the <b>DA1902SX</b> ?	The <b>DA1902SX</b> offers 5 BNC connectors for the input of the unit and two 15-pin HD (VGA type) connectors for the output. This makes it perfect for special applications where an RGBHV signal on 5 BNC connectors must be connected to two VGA type monitors. Many display devices, which use a 15-pin HD (VGA type) connector, can only accept RGBHV format signals. Make sure that the capability of the display equipment to be used in the system is compatible.
3	Are the outputs of the <b>DA1902SX</b> buffered?	Yes, the <b>DA1902SX</b> has two individually buffered 15-pin HD outputs.
4	What does buffered output mean?	Buffered output means that the output signal is isolated from the input signal. That is, the loaded output does not affect the input, or any other output on the device. A buffered output may vary in terms of the gain or peaking adjustments made to the video signal.
5	Which type of format signal may I pass through	The <b>DA1902SX</b> can pass high-resolution RGBHV, RGSB, RGsB, and RsGsBs format computer video

# DISTRIBUTION AMPLIFIERS

the <b>DA1902SX?</b>	signals.
-------------------------	----------

## TROUBLESHOOTING GUIDE 10

We have carefully tested and have found no problems in the **DA1902SX** supplied unit; however, we would like to offer the following suggestions:

- Make sure that the correct power adapter is connected to the unit.
- Please make sure that the input amplitude analog signal is less than 1.5V.
- Please use the Altinex supplied external adapter (9V, 500mA).
- Please make sure that the proper quality of cables is used. We recommend the Altinex made cables for the best results.
- If a problem arises after continuous usage at higher voltage, higher temperature, higher humidity, at other extreme environmental conditions, please correct the problem.

## ALTINEX POLICY 11

### 11.1 LIMITED WARRANTY

Altinex warrants that its products and cables are free from defects in materials under normal use and service. This warranty is limited to repairing at company's factory any part or parts of the product, which upon company's examination shall disclose to be, thus defective. Products considered defective should be returned to company with transportation charges pre-paid within 2 years (90 days for cables) from date of shipment to the purchaser. The warranty is expressly instead of all other warranties expressed or implied. Altinex neither assumes nor authorizes any other person to assume for it any other liability in connection with the sale of the products. This warranty shall not apply to any product that shall have been repaired or altered outside of company's factory in any way so as, in its judgment, to affect its stability or reliability, or that has been subject to misuse, negligence or accident.

### 11.2 RETURN POLICY

It is very important to Altinex that you receive the products that you have ordered and that this product fulfills your need. In the unlikely event, that an Altinex product needs to be returned please follow the policy below:

Altinex will accept product returns for a period of 30 days from authorized Altinex dealers. Products should be returned in an unopened package.

If a product has been opened, the restocking fees will apply. For the restocking fee amount, please contact an Altinex Sales Representative.

If the product is in your possession for more than 30 days, the restocking fees will apply.

Altinex will not accept any returns on cables, or custom products.

If your product is in warranty and needs service, contact the Altinex Sales Department for an RMA (Return Material Authorization). Products returned without an RMA number may experience a delay in service.

If your product is out of warranty and needs service, contact the Altinex Sales Department for an RMA (Return Material Authorization). Products returned without an RMA number may experience a delay in service. The service charges will be quoted to you before the actual repairs are done.

### 11.3 CONTACT INFORMATION

#### Sales Department

Phone: 714-990-2300  
Fax: 714-990-3303

#### Accounting Department

Phone: 714-990-6088  
Fax: 714-990-5778