

**Kramer Electronics, Ltd.**



# **USER MANUAL**

**Model:**

***VP-724DS, Seamless Switcher / Scaler***

## Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
<b>2</b>	<b>Getting Started</b>	<b>1</b>
<b>3</b>	<b>Overview</b>	<b>2</b>
<b>4</b>	<b>Your VP-724DS Seamless Switcher / Scaler</b>	<b>3</b>
<b>5</b>	<b>Connecting the VP-724DS Seamless Switcher / Scaler</b>	<b>7</b>
5.1	Connecting a PC	8
<b>6</b>	<b>Understanding the VP-724DS Seamless Switcher / Scaler</b>	<b>10</b>
6.1	Understanding the OUT Button Functionality	10
6.2	Understanding the PIP Button Feature	12
6.2.1	Activating the PIP Feature	12
6.2.2	PIP Characteristics	13
6.2.3	Toggleing between the PIP and the Screen Source (SWAP)	13
6.2.4	Resizing the PIP	14
6.2.5	Moving the Position of the PIP	14
6.3	Locking and Unlocking the Front Panel	14
<b>7</b>	<b>Operating the VP-724DS Seamless Switcher / Scaler</b>	<b>15</b>
7.1	Switching and Scaling	15
7.1.1	Switching an Input	15
7.1.2	Choosing the Output Resolution	16
7.2	Controlling the Seamless Switcher / Scaler	16
7.3	Operating via the OSD MENU Screen	16
7.3.1	Controlling the Brightness and Contrast	17
7.3.2	Controlling the Gamma and Color	18
7.3.3	Selecting the Source	19
7.3.4	Controlling the Scale Geometry	19
7.3.5	Adjusting the Zoom Ratio and Position	21
7.3.5.1	Adjusting the Zoom Ratio	22
7.3.5.2	Adjusting the Zoom Position	22
7.3.6	Configuring via the Utility Screens	24
7.3.6.1	Choosing the Graphic Utility Settings	24
7.3.6.2	Choosing the Video Utility Settings	25
7.3.6.3	Choosing the Audio Utility Settings	26
7.3.6.4	Choosing the PIP Utility Settings	27
7.3.6.5	Choosing the Seamless Switch Utility Settings	28
7.3.6.6	Choosing the OSD Utility Settings	29
7.3.6.7	Choosing the Output Utility Settings	30
7.3.6.8	Choosing Factory Reset	32
7.3.7	Verifying Configuration Details via the Information Screen	32

7.3.8	Operating via the Infra-red Remote Control Transmitter	32
7.4	Upgrading Firmware	35
<b>8</b>	<b>Technical Specifications</b>	<b>35</b>
<b>9</b>	<b>VP-724DS Communication Protocol</b>	<b>36</b>

## Figures

Figure 1:	VP-724DS Seamless Switcher / Scaler	4
Figure 2:	Connecting the PC	8
Figure 3:	Connecting the VP-724DS Rear Panel	9
Figure 4:	VP-724DS OUT LED Sequence	11
Figure 5:	OSD PIP Status	13
Figure 6:	OSD SWAP Status	13
Figure 7:	Locking / Unlocking the Front Panel	14
Figure 8:	OSD Input Status	15
Figure 9:	OSD Output Status	16
Figure 10:	MENU Screen	17
Figure 11:	Menu Screen Icons	17
Figure 12:	Brightness and Contrast Screen	17
Figure 13:	Gamma and Color Screen	18
Figure 14:	Gamma, Color Temperature/Manager User 1/2 Screen	18
Figure 15:	Source Selection Screen	19
Figure 16:	Geometry (Scale and Zoom) Screen	19
Figure 17:	Geometry (Scale: Aspect Ratio and Nonlinear) Screen	20
Figure 18:	Geometry (Scale: Aspect Ratio) Screen	20
Figure 19:	Geometry (Zoom) Screen	21
Figure 20:	OSD Enlarge Status	21
Figure 21:	Zoom Ratio Adjustment Example	22
Figure 22:	Zoom Position Adjustment Example	22
Figure 23:	Geometry (Zoom Ratio) Screen	22
Figure 24:	Preset Position Control Keys	23
Figure 25:	Navigation Control Keys	23
Figure 26:	Geometry (Zoom Position Adjustment) Screen	23
Figure 27:	Utility Screen	24
Figure 28:	Graphic Setting Utility Screen	24
Figure 29:	Graphic Setting Color Format Utility Screen	25
Figure 30:	Video Setting Utility Screen	25
Figure 31:	Video Setting Standard Utility Screen	25
Figure 32:	Audio Setting Utility Screen	26
Figure 33:	Audio Setting Stereo Utility Screen	26
Figure 34:	PIP Utility Screen	27
Figure 35:	PIP Activation Utility Screen	27
Figure 36:	PIP Source Utility Screen	27
Figure 37:	PIP Size Utility Screen	28

Figure 38: Seamless Switch Utility Screen	28
Figure 39: OSD Setting Utility Screen	29
Figure 40: OSD Size Utility Screen	29
Figure 41: OSD Source Prompt Activation Utility Screen	29
Figure 42: OSD Blank Color Utility Screen	30
Figure 43: Output Setting Utility Screen	30
Figure 44: Output Setting Resolution Utility Screen	30
Figure 45: Output Setting Refresh Rate Utility Screen	31
Figure 46: Output Setting User Mode Setting Utility Screen	31
Figure 47: Factory Reset Utility Screen	32
Figure 48: Information Screen	32
Figure 49: Infra-red Remote Control Transmitter	33

## Tables

Table 1: Front Panel VP-724DS Seamless Switcher / Scaler Features	5
Table 2: Rear Panel VP-724DS Seamless Switcher / Scaler Features	6
Table 3: Selecting the Output Resolution	10
Table 4: User Mode Setting Definitions	31
Table 5: Infra-red Remote Control Transmitter Functions	34
Table 6: Technical Specifications of the VP-724DS	35
Table 7: RS-232 Protocol	36
Table 8: RS-232 Communication Code	36
Table 9: RS-232 Read Command	38

## 1 Introduction

Dedication by Kramer Electronics since 1981, to the development and manufacture of high quality video/audio equipment, makes the Kramer line an integral part of the finest production and presentation facilities in the world. In recent years, Kramer has redesigned and upgraded most of the line, making the best even better! The Kramer line of professional video/audio electronics is one of the most versatile and complete available, and is a true leader in terms of quality, workmanship, price/performance ratio and innovation. In addition to our high quality Kramer seamless switcher / scaler, we also offer excellent switchers and matrices, as well as distribution amplifiers, remote controllers, processors, interfaces and computer-related products.

Congratulations on purchasing your Kramer **VP-724DS** *Seamless Switcher / Scaler*, which is ideal for the following typical applications:

- Presentation and conference room systems
- Production studios, rental and staging

The **VP-724DS** is an enhanced version of our popular **VP-720DS** and **VP-723DS** models, and includes an additional VGA HD15 input connector, as well as a stereo audio terminal block connector for each of the 8 inputs.

The package includes the following items:

- **VP-724DS** Seamless Switcher / Scaler
- Power cord
- Infra-red remote control transmitter
- Null-modem adapter
- This user manual<sup>1</sup> and the Kramer concise product catalog/CD

## 2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual
- Use Kramer high performance high resolution cables<sup>2</sup>

---

<sup>1</sup> Download up-to-date Kramer user manuals from the Internet at this URL: <http://www.kramerelectronics.com/manuals.html>

<sup>2</sup> The complete list of Kramer cables is on our Web site at <http://www.kramerelectronics.com> (click "Cables and Connectors" in the Products section)

### 3 Overview

The **VP-724DS** is a *Seamless Switcher / Scaler* designed for a wide variety of presentation and multimedia applications. It is a true multi-standard video to RGBHV (pixel) scaler that converts composite video, s-Video, component video, VGA/SVGA/XGA/UXGA, and DVI signals to the following 17 user-selectable pixel rates:

- VGA (640x480)
- SVGA (800x600)
- XGA (1024x768)
- SXGA (1280x1024)
- UXGA (1600x1200)
- 852x1024
- 1024x1024
- 1366x768
- 1365x1024<sup>1</sup>
- 1280x720<sup>1</sup>
- 720x483<sup>1</sup>
- 852x480<sup>1</sup>
- 1400x1050<sup>1</sup>

The **VP-724DS** also has 3 additional output modes used for high definition television (HDTV): 480p, 720p, and 1080i, as well as a user definable output mode<sup>2</sup>.

The **VP-724DS** is an 8-input Seamless Presentation Switcher, that:

- Digitally reprocesses the signal to correct mastering errors, and regenerates the video at a chosen line and pixel rate format, providing, for example, native-resolution video for LCD, DLP and Plasma displays
- Facilitates scaling of any graphics resolution to any other resolution<sup>3</sup>
- Incorporates a unique graphics-scaling engine with image enhancement algorithms, which are built into the firmware
- Includes a built-in Picture-in-Picture inserter<sup>4</sup>, letting you insert a video source into a graphics background or vice versa, allowing the user to size and position the shrunken inserted image anywhere on the screen

---

<sup>1</sup> Not shown on the front panel

<sup>2</sup> Recommended for advanced users only – non-standard settings may not be recognized by the display device

<sup>3</sup> For example, scaling a VGA input to an UXGA output, or an SXGA input to an SVGA output

<sup>4</sup> See section 6.2

- Is specifically designed to improve video quality by reducing chroma noise
- Scales and zooms (to up to 400% of the original size)

In addition, the **VP-724DS**:

- Switches the 8 audio channels in audio-follow-video mode
- Includes an OSD (on-screen display) for making the adjustments that can be located anywhere on the screen, and can be doubled in size. The OSD can be used to deactivate the source prompt, choose the color of the blank screen, and choose from three seamless switching image transition speeds
- Includes eight multi-functional input buttons that cycle between selecting a source, freezing that source, or deactivating that source (and displaying a blank screen)
- Includes a front panel lock
- Incorporates full ProcAmp<sup>1</sup> processing for video and audio correction
- Offers high quality de-interlacing 3:2/2:2 pull down<sup>2</sup>
- Can provide non-linear scaling for 4:3, 16:9 transformation<sup>3</sup>
- Supports firmware upgrade via RS-232
- Includes non-volatile memory that retains the last setting, after switching the power off and then on again

Control the **VP-724DS**:

- From the front panel OSD control buttons
- Remotely, from the infra-red remote control transmitter
- Remotely, via RS-232

Achieving the best performance means:

- Connecting only good quality connection cables, thus avoiding interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables)
- Avoiding interference from neighboring electrical appliances and positioning your **VP-724DS** away from moisture, excessive sunlight and dust

## 4 Your VP-724DS Seamless Switcher / Scaler

Figure 1, and Table 1 and Table 2, define the **VP-724DS Seamless Switcher / Scaler**:

---

<sup>1</sup> Processing amplification enables adjustment of different video and audio signal parameters

<sup>2</sup> Accommodates the frame-rate of a converted movie (24 frames per second) to video frequencies (25 frames per second (PAL); 30 frames per second (NTSC))

<sup>3</sup> See Figure 18

## Your VP-724DS Seamless Switcher / Scaler

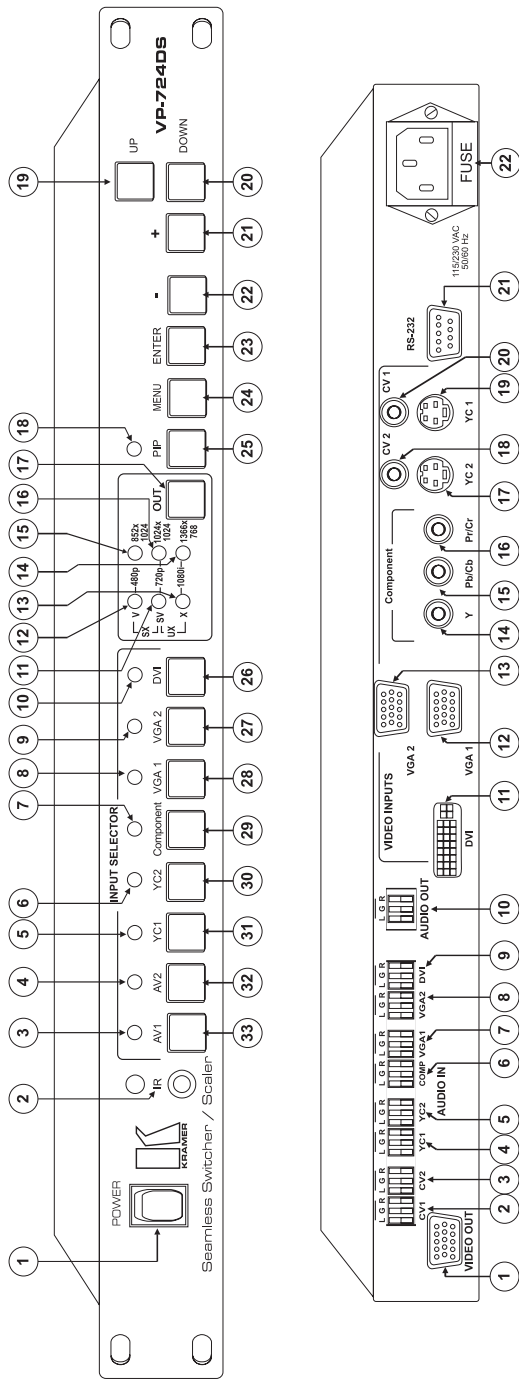


Figure 1: VP-724DS Seamless Switcher / Scaler



Table 1: Front Panel VP-724DS Seamless Switcher / Scaler Features

#	Feature	Function
1	POWER Switch	Illuminated switch supplying power to the unit
2	IR Receiver / LED	Green when the unit will accept IR remote commands
3	INPUT SELECTOR LEDs	AV1 Illuminates <sup>1</sup> when the composite video / audio source 1 is selected
4		AV2 Illuminates <sup>1</sup> when the composite video / audio source 2 is selected
5		YC1 Illuminates <sup>1</sup> when the s-Video (Y/C) / audio source 1 is selected
6		YC2 Illuminates <sup>1</sup> when the s-Video (Y/C) / audio source 2 is selected
7		Component Illuminates <sup>1</sup> when the component video / audio source is selected
8		VGA 1 Illuminates <sup>1</sup> when the VGA / audio source 1 is selected
9		VGA 2 Illuminates <sup>1</sup> when the VGA / audio source 2 is selected
10		DVI Illuminates <sup>1</sup> when the DVI / audio source is selected
11	OUT LEDs	SV Illuminates when the SVGA resolution is selected <sup>2</sup>
12		V Illuminates when the VGA resolution is selected <sup>3</sup>
13		X Illuminates when the XGA resolution is selected <sup>4</sup>
14		1366x768 Illuminates when the 1366x768 resolution is selected <sup>5</sup>
15		852x1024 Illuminates when the 852x1024 resolution is selected <sup>6</sup>
16		1024x1024 Illuminates when the 1024x1024 resolution is selected <sup>7</sup>

1 Flashes when the image is frozen, and flashes more slowly when a blank screen is displayed

2 Illuminates with the V LED when the SXGA resolution is selected, with the X LED when the UXGA resolution is selected, with the 852x1024, 1024x1024 and 1366x768 LEDs when the 852x480 resolution is selected, with the 1024x1024 LED when 720p is selected, and with all the other LEDs when UserDefine is selected

3 Illuminates with the SV LED when the SXGA resolution is selected, with the 852x1024, 1024x1024 and 1366x768 LEDs when the 720x483 resolution is selected, with the 852x1024 LED when 480p is selected, and with all the other LEDs when UserDefine is selected

4 Illuminates with the SV LED when the UXGA resolution is selected, with the 852x1024, 1024x1024 and 1366x768 LEDs when the 1400x1050 resolution is selected, with the 1366x768 LED when 1080i is selected, and with all the other LEDs when UserDefine is selected

5 Illuminates with the 1024x1024 LED when the 1280x720 (not shown on the front panel) resolution is selected, with the V, 852x1024, and 1024x1024 LEDs when the 720x483 resolution is selected, with the SV, 852x1024, and 1024x1024 LEDs when the 852x480 resolution is selected, with the X, 852x1024, and 1024x1024 LEDs when the 1400x1050 resolution is selected, with the X LED when 1080i is selected, and with all the other LEDs when UserDefine is selected

6 Illuminates with the 1024x1024 LED when the 1365x1024 (not shown on the front panel) resolution is selected, with the V, 1024x1024, and 1366x768 LEDs when the 720x483 resolution is selected, with the SV, 1024x1024, and 1366x768 LEDs when the 852x480 resolution is selected, with the X, 1024x1024, and 1366x768 LEDs when the 1400x1050 resolution is selected, with the V LED when 480p is selected, and with all the other LEDs when UserDefine is selected

7 Illuminates with the 852x1024 LED when 1365x1024 (not shown on the front panel) resolution is selected, with the 1366x768 LED when the 1280x720 (not shown on the front panel) is selected, with the V, 852x1024, and 1366x768 LEDs when the 720x483 resolution is selected, with the SV, 852x1024, and 1366x768 LEDs when the 852x480 resolution is selected, with the X, 852x1024, and 1366x768 LEDs when the 1400x1050 resolution is selected, with the SV LED when the 720p is selected, and with all the other LEDs when UserDefine is selected

## Your VP-724DS Seamless Switcher / Scaler

#	Feature	Function	
17	OUT Button	Selects the output resolution and illuminates the appropriate LED <sup>1</sup>	
18	PIP LED	Illuminates when the picture-in-picture function is selected	
19	UP Button	Moves up one step (in the same level) in the OSD screen	
20	DOWN Button	Moves down one step (in the same level) in the OSD screen	
21	+ Button	Increases the range by one step in the OSD screen	
22	- Button	Decreases the range by one step in the OSD screen	
23	ENTER Button	Moves to the next level in the OSD screen	
24	MENU Button	Displays the OSD Menu screen <sup>2</sup> and locks/unlocks the front panel <sup>3</sup>	
25	PIP Button	Selects the picture-in-picture function and illuminates the PIP LED <sup>4</sup>	
26	INPUT SELECTOR Buttons	DVI	Press <sup>5</sup> to select the DVI / audio source and illuminate the DVI LED
27		VGA 2	Press <sup>5</sup> to select the VGA / audio source 2 and illuminate the VGA 2 LED
28		VGA 1	Press <sup>5</sup> to select the VGA / audio source 1 and illuminate the VGA 1 LED
29		Component	Press <sup>5</sup> to select the component video/audio source and illuminate the component LED
30		YC2	Press <sup>5</sup> to select the s-Video (Y/C) / audio source 2 and illuminate the YC2 LED
31		YC1	Press <sup>5</sup> to select the s-Video (Y/C) / audio source 1 and illuminate the YC1 LED
32		AV2	Press <sup>5</sup> to select the composite video / audio source 2 and illuminate the AV2 LED
33		AV1	Press <sup>5</sup> to select the composite video / audio source 1 and illuminate the AV1 LED

*Table 2: Rear Panel VP-724DS Seamless Switcher / Scaler Features*

#	Feature	Function	
1	VIDEO OUT HD15 Connector	Connects to the video acceptor (for example, Plasma display, projector or monitor) that displays the scaled output (with the OSD superimposed over it) In the HDTV mode, the signal goes out via 3 PINS: PIN 1 is Y, PIN 2 is P <sub>b</sub> , and PIN 3 is P <sub>r</sub>	
2	AUDIO IN Terminal Block Connectors	CV1	Connects to the stereo audio input from composite video source 1
3		CV2	Connects to the stereo audio input from composite video source 2
4		YC1	Connects to the stereo audio input from s-Video source 1
5		YC2	Connects to the stereo audio input from s-Video source 2
6		COMP	Connects to the stereo audio input from the component video source
7		VGA1	Connects to the stereo audio input from the VGA graphics source 1
8		VGA2	Connects to the stereo audio input from the VGA graphics source 2
9		DVI	Connects to the stereo audio input from the DVI (digital video interface) graphics source
10	AUDIO OUT Terminal Block Connector	Connects to the stereo audio acceptor	

<sup>1</sup> See section 6.1

<sup>2</sup> Or moves to the previous level in the OSD screen

<sup>3</sup> See section 6.3

<sup>4</sup> See section 6.2

<sup>5</sup> Press again (when the LED illuminates) to freeze the image; the LED flashes. Press once again (when the LED flashes), to display a blank screen; the LED flashes more slowly. Alternatively, to freeze the image, press the FREEZE key on the infra-red remote control transmitter (see Figure 49)

#	Feature	Function	
11	DVI Connector	Connects to the DVI (digital video interface) graphics source	
12	VGA 1 HD15 Connector	Connects to the VGA (analog interface) graphics source 1 <sup>1</sup>	
13	VGA 2 HD15 Connector	Connects to the VGA (analog interface) graphics source 2 <sup>1</sup>	
14	Component	Connect to the component video source <sup>2</sup>	
15			Y RCA Connector
16			Pb/Cb RCA Connector
17	YC 2 4p Connector	Connects to the s-Video source 2	
18	CV 2 RCA Connector	Connects to the composite video source 2	
19	YC 1 4p Connector	Connects to the s-Video source 1	
20	CV 1 RCA Connector	Connects to the composite video source 1	
21	RS-232 DB 9 Connector	Connects to PC or Serial Controller	
22	Power Connector with FUSE	AC connector enabling power supply to the unit	

## 5 Connecting the VP-724DS Seamless Switcher / Scaler

Using the **VP-724DS** you can select any one of the 8 inputs and scale that input to the output at the set<sup>3</sup> resolution.

To connect the **VP-724DS**, connect the following<sup>4</sup> to the rear panel, as the example in Figure 3 illustrates:

1. Connect one or more of the following video sources:
  - 2 composite video sources: “CV Source 1” and “CV Source 2”, to the RCA connectors CV 1 and CV2, respectively
  - 2 s-Video sources: “s-Video Source 1” and “s-Video Source 2”, to the 4p connectors, YC 1 and YC 2, respectively
  - A component video<sup>5</sup> source, for example, a “Betacam VCR”, to the 3 RCA connectors, Y, P<sub>b</sub>/C<sub>b</sub>, and P<sub>r</sub>/C<sub>r</sub><sup>6</sup>
  - 2 VGA graphics sources: “VGA Graphics Source 1” and “VGA Graphics Source 2”, to the HD15 connectors VGA 1 and VGA 2, respectively<sup>7</sup>
  - A DVI graphics source, to the DVI connector

1 Or to a YUV signal; connect the “Y” connector to PIN 1, the “Pb/Cb” connector to PIN 2, and the “Pr/Cr” connector to PIN 3

2 Or to an RGB signal; connect RED to the “Y” connector, GREEN to the “Pb/Cb” connector, and BLUE to the “Pr/Cr” connector

3 For details of how to set the output resolution on the VP -724DS, refer to section 6.1

4 Switch OFF the power on each device before connecting it to your VP -724DS. After connecting your VP-724DS, switch on its power and then switch on the power on each device

5 Sometimes called YUV, or Y, B-Y, R-Y, or Y, Pb, Pr

6 Alternatively, you can connect an RGB signal (not shown in Figure 3), as follows: RED to the “Y” connector, GREEN to the “Pb/Cb” connector, and BLUE to the “Pr/Cr” connector

7 Alternatively, you can connect a YUV signal to each HD15 connector (not shown in Figure 3), by connecting the “Y” connector to PIN 1, the “Pb/Cb” connector to PIN 2, and the “Pr/Cr” connector to PIN 3

2. Connect the stereo audio sources, as illustrated in Figure 3. In particular:
  - The audio of “CV Source 1” and “CV Source 2” to the AUDIO IN CV1 and CV2 terminal block connectors, respectively
  - The audio of “s-Video 1” and “s-Video 2” to the AUDIO IN YC1 and YC2 terminal block connectors, respectively
  - The audio of the component video source, the “Betacam VCR”, to the AUDIO IN COMP terminal block connector
  - The audio of “VGA Graphics Source 1” and “VGA Graphics Source 2” to the AUDIO IN VGA1 and VGA 2 terminal block connectors, respectively
  - The audio of the “DVI Graphics Source ” to the AUDIO IN DVI terminal block connector
3. Connect the VIDEO OUT HD15F connector<sup>1</sup> to the video acceptor, for example, a Plasma monitor, and connect the AUDIO OUT terminal block connector to the audio acceptor, for example, a power amplifier.
4. The power cord (the power connector is not illustrated in Figure 3).
5. A PC (optional), as section 5.1 describes.

## 5.1 Connecting a PC

You can connect a PC (or other controller) to the **VP-724DS** via the RS-232 port for remote control, and for upgrading the firmware ( see section 7.4).

To connect a PC to a **VP-724DS** unit, using the Null-modem adapter provided with the machine (recommended):

- Connect the RS-232 DB9 rear panel port on the **VP-724DS** unit to the Null-modem adapter and connect the Null-modem adapter with a 9 wire flat cable to the RS-232 DB9 port on your PC

To connect a PC to a **VP-724DS** unit, without using a Null-modem adapter:

- Connect the RS-232 DB9 port on your PC to the RS-232 DB9 rear panel port on the **VP-724DS** unit, forming a cross-connection<sup>2</sup>, as Figure 2 illustrates

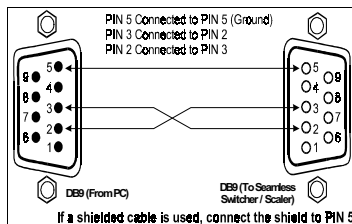


Figure 2: Connecting the PC

<sup>1</sup> In the HDTV mode, the signal goes out via 3 PINS: PIN 1 is Y, PIN 2 is Pb, and PIN 3 is Pr

<sup>2</sup> Also known as a Null-modem connection

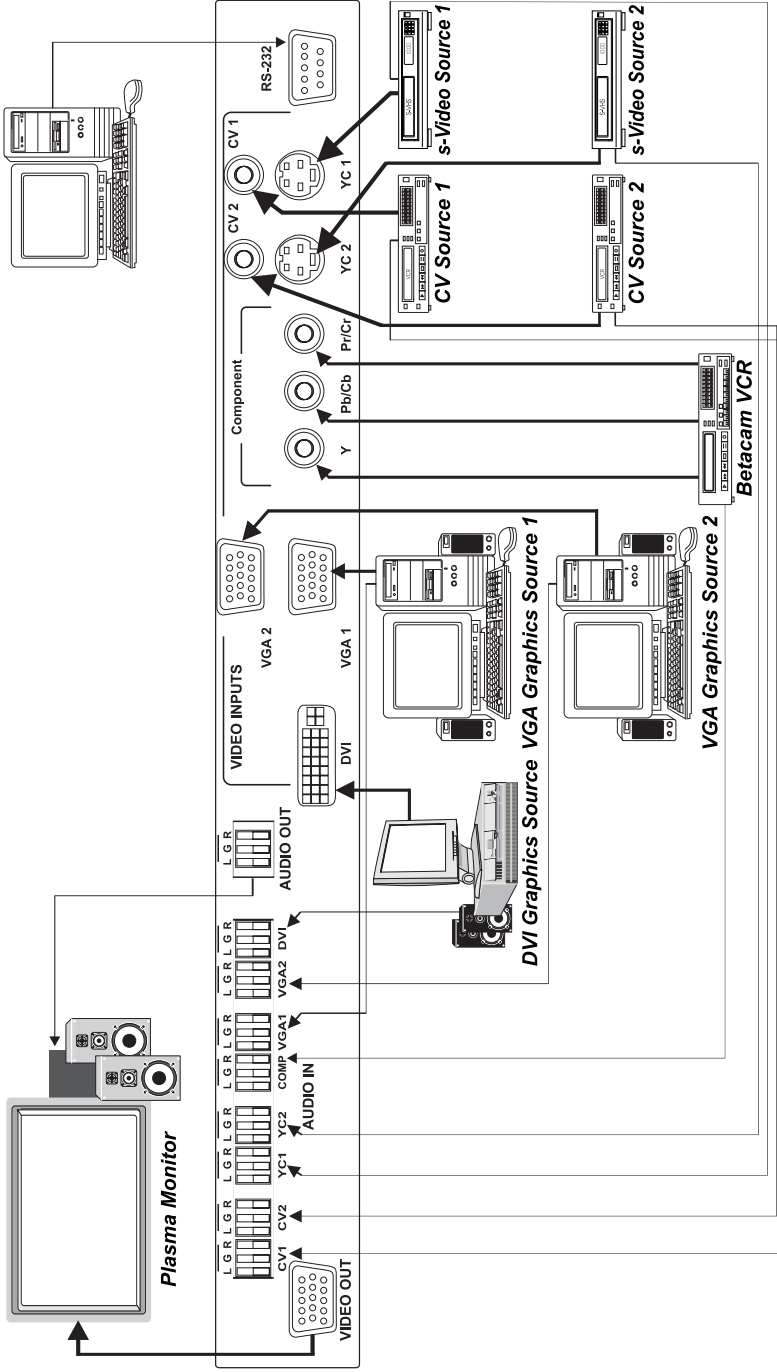


Figure 3: Connecting the VP-724DS Rear Panel

## 6 Understanding the VP-724DS Seamless Switcher / Scaler

The **VP-724DS** includes the following front panel buttons:

- A set of 8 INPUT SELECTOR buttons (*AV1, AV2, YC1, YC2, Component, VGA 1, VGA 2* and *DVI*)
- An OUT button (see section 6.1)
- A PIP button (see section 6.2)
- A set of 6 OSD buttons, which are described in Table 1: *MENU, ENTER, -, +, UP, and DOWN*

### 6.1 Understanding the OUT Button Functionality

Press the OUT button<sup>1</sup> to choose the desired output resolution.

Table 3 and Figure 4 define how to select the **VP-724DS** output resolution:

Table 3: Selecting the Output Resolution

To scale to this pixel resolution rate:	Press the OUT button to illuminate this LED sequence:
VGA (640x480)	V
SVGA (800x600)	SV
XGA (1024x768)	X
SXGA (1280x1024)	V and SV
UXGA (1600x1200)	SV and X
852x1024i	852x1024
1024x1024i	1024x1024
1366x768	1366x768
1365x1024 <sup>2</sup>	852x1024 and 1024x1024
1280x720 <sup>2</sup>	1024x1024 and 1366x768
720x483 <sup>2</sup>	V and 852x1024 and 1024x1024 and 1366x768
852x480 <sup>2</sup>	SV and 852x1024 and 1024x1024 and 1366x768
1400x1050 <sup>2</sup>	X and 852x1024 and 1024x1024 and 1366x768

To output to this high definition television (HDTV) mode:	Press the OUT button to illuminate this LED sequence:
480p	V and 852x1024
720p	SV and 1024x1024
1080i	X and 1366x768


To scale to this pixel resolution rate:	Press the OUT button to illuminate this LED sequence:
UserDefine <sup>2</sup>	All LEDs <sup>3</sup>

<sup>1</sup> Item 17 in Figure 1

<sup>2</sup> Not shown on the front panel

<sup>3</sup> Recommended for advanced users only – non-standard settings may not be recognized by the display device

## Understanding the VP-724DS Seamless Switcher / Scaler

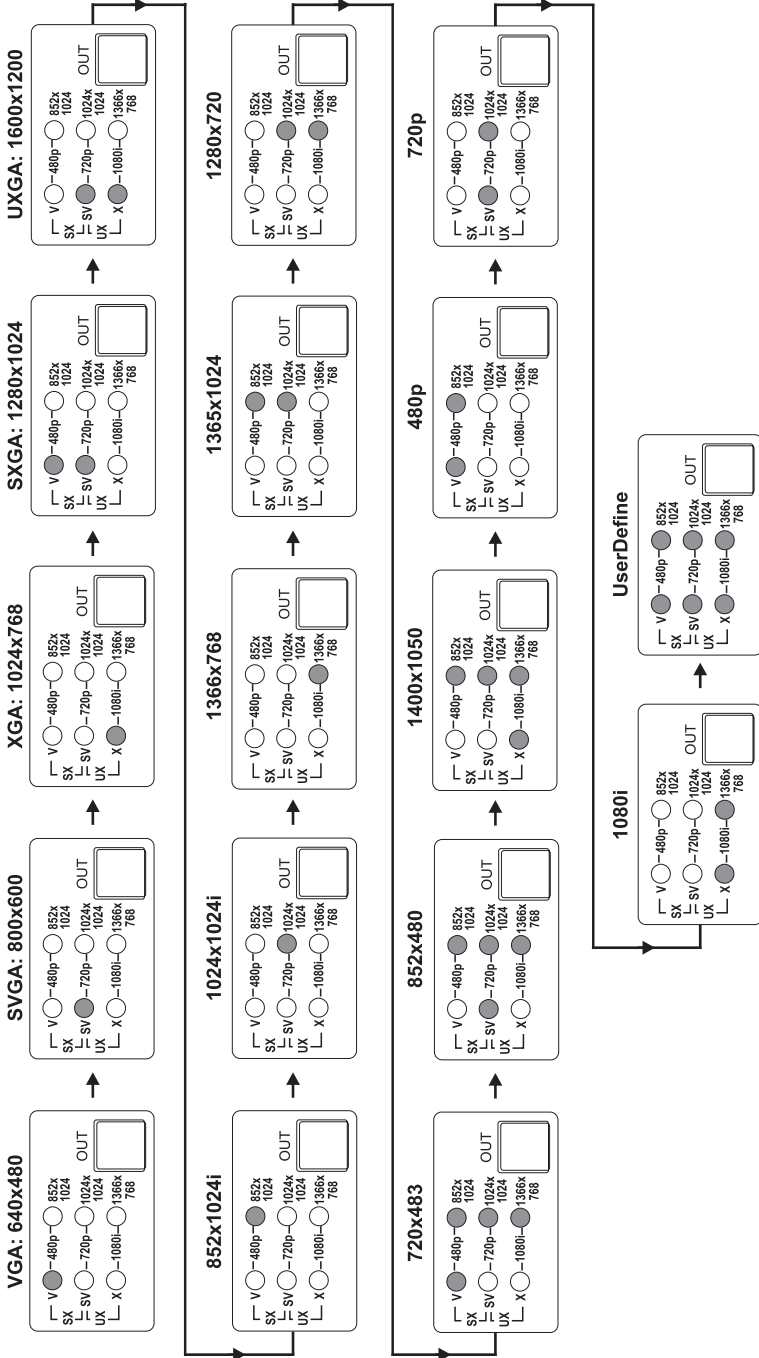

*Figure 4: VP-724DS OUT LED Sequence*

## 6.2 Understanding the PIP Button Feature

The Picture-in-Picture inserter (PIP) is used for the simultaneous display of video and graphic sources, and lets you display:

- An inserted video source<sup>1</sup> PIP over a graphic source<sup>2</sup> display
- An inserted graphic source<sup>2</sup> PIP over a video source<sup>1</sup> display

Your Seamless Switcher / Scaler automatically recognizes and displays only the relevant sources, as the following 2 examples illustrate:

- Choosing the AV 1 PIP source when the VGA input is selected, will insert the composite video source over the VGA graphic displayed on the screen. You can choose a component, YC 1, YC 2 or AV 2 PIP source<sup>3</sup> (instead of the AV 1). You cannot choose VGA 1, VGA 2 or DVI<sup>4</sup>
- Choosing the VGA 1 PIP source when the AV 1 input is selected, will insert the VGA graphic source over the composite video displayed on the screen. You can choose a VGA 2 or DVI PIP source<sup>3</sup> (instead of the VGA 1). You cannot choose AV 2, YC 1, YC 2 or component<sup>5</sup>

### 6.2.1 Activating the PIP Feature

To activate the PIP (which illuminates the PIP LED), do one of the following:

- Press the PIP button<sup>6</sup>
- Switch on the PIP functionality via the OSD Menu (see Figure 35)
- Press the PIP key on the infra-red remote control transmitter (see Figure 49)

When the Source Prompt is ON (see Figure 41), the PIP is enclosed by an orange frame, and the OSD PIP status appears superimposed over the top right corner of the screen for a few seconds, as Figure 5 illustrates. After a few seconds<sup>7</sup>, the orange frame and the OSD PIP status automatically disappear<sup>8</sup>.

Activating the PIP subsequently cycles between the PIP with the orange frame and no PIP.

---

1 That is, composite, s-Video or component

2 That is, DVI or VGA

3 As long as it is connected and switched on. Otherwise, choosing it will display a blank screen

4 As these are graphics sources and you cannot insert a graphics PIP over a graphics source

5 As these are video sources and you cannot insert a video PIP over a video source

6 Item 25 in Figure 1

7 By default, 20 seconds. But you can reset the timeout (from 3 to 60 seconds), see section 7.3.6.6

8 Trying to activate the PIP again while the PIP is still enclosed by an orange frame deactivates the PIP





Figure 5: OSD PIP Status

When the Source Prompt is OFF (see Figure 41), activating the PIP toggles between the PIP (with no frame and no OSD PIP status) and no PIP.

### 6.2.2 PIP Characteristics

You can determine the following PIP characteristics:

- PIP Source
- PIP Size (1/4, 1/9, 1/16, 1/25 or split screen)
- Horizontal and Vertical position, placing it anywhere on the screen

### 6.2.3 Toggling between the PIP and the Screen Source (SWAP)

To toggle back and forth between the PIP content and the screen source content, do the following:

- Press the SWAP key on the Infra-red remote control transmitter (see Figure 49)

The OSD SWAP status appears superimposed over the top right corner of the screen for a few seconds<sup>1</sup>, as Figure 6 illustrates



Figure 6: OSD SWAP Status

<sup>1</sup> By default, 20 seconds. But you can reset the timeout (from 3 to 60 seconds), see section 7.3.6.6

### 6.2.4 Resizing the PIP

To resize the PIP (1/4, 1/9, 1/16, 1/25 or split screen):

- When the Source Prompt is ON and the PIP is enclosed by an orange frame, use the Up and/or Down navigation control keys on the infra-red remote control transmitter (see Figure 49) or the *UP* and/or *DOWN* front panel OSD buttons
- Use the OSD Menu buttons (see Figure 37)

### 6.2.5 Moving the Position of the PIP

To move the location of the PIP:

- When the Source Prompt is OFF, use the four navigation control keys (see Figure 25) on the infra-red remote control transmitter (see Figure 49)
- When the Source Prompt is ON and the PIP is enclosed by an orange frame, use the preset position control keys (see Figure 24) on the infra-red remote control transmitter (see Figure 49), to instantly move the position of the PIP window to up to nine preset fixed locations<sup>1</sup>. When the Source Prompt is OFF, the preset position control keys have no effect

## 6.3 Locking and Unlocking the Front Panel

You can lock the front panel<sup>2</sup> and control from the infra-red remote control transmitter to safeguard the settings on the **VP-724DS**.

To lock the front panel:

- Press and hold the *MENU* front panel OSD button<sup>3</sup> or the MENU key on the infra-red remote control transmitter (see Figure 49) for a few seconds, until the Key Lock On OSD status appears superimposed over the top right corner of the screen for a few seconds<sup>4</sup>, as Figure 7 illustrates



Figure 7: Locking / Unlocking the Front Panel

1 For example, to move to the lower right corner of the image, press the  $\text{Ⓜ}$  button

2 However, operation via RS-232 serial commands (remote controller or PC) is still available

3 Item 24 in Figure 1

4 By default, 20 seconds. But you can reset the timeout (from 3 to 60 seconds), see section 7.3.6.6

To unlock the front panel (releasing the protection mechanism):

- Press and hold the *MENU* front panel OSD button<sup>1</sup> or the MENU key on the infra-red remote control transmitter (see Figure 49) for a few seconds, until the Key Lock Off OSD status appears superimposed over the top right corner of the screen for a few seconds<sup>2</sup>

## 7 Operating the VP-724DS Seamless Switcher / Scaler


Section 7.1 describes how to switch and scale an input. Section 7.2 describes the methods of controlling the Seamless Switcher / Scaler.

### 7.1 Switching and Scaling

Section 7.1.1 describes how to switch an input. Section 7.1.2 describes how to select the output resolution.

#### 7.1.1 Switching an Input

You can switch seamlessly<sup>3</sup> between each input<sup>4</sup> that is connected to a source, by pressing the appropriate INPUT SELECTOR button. The OSD status appears superimposed over the top right corner of the screen for a few seconds<sup>2</sup>, as Figure 8 illustrates:

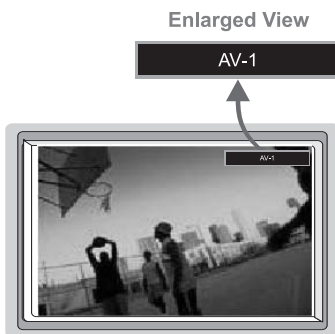

*Figure 8: OSD Input Status*

You can also use the INPUT SELECTOR button to freeze<sup>5</sup> the image or to display a blank screen<sup>6</sup>.

---

1 Item 24 in Figure 1

2 By default, 20 seconds. But you can reset the timeout (from 3 to 60 seconds), see section 7.3.6.6

3 For glitchless transitions between inputs

4 To set the image transition speed (fast, safe or moderate), see section 7.3.6.5

5 By pressing the INPUT SELECTOR button again when the appropriate LED illuminates

6 By pressing the INPUT SELECTOR button once again when the appropriate LED flashes

### 7.1.2 Choosing the Output Resolution

You can select the output resolution (choosing the pixel resolution, as section 6.1 describes), by pressing the OUT button<sup>1</sup> on the front panel or the OUT key on the infra-red remote control transmitter (see Figure 49). The OSD status appears superimposed over the top right corner of the screen for a few seconds<sup>2</sup>, as Figure 9 illustrates<sup>3</sup>:

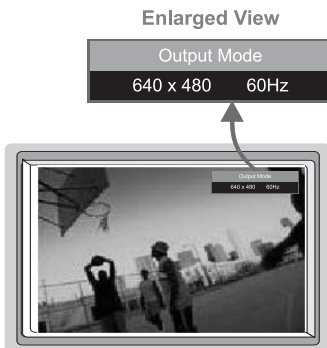


Figure 9: OSD Output Status

### 7.2 Controlling the Seamless Switcher / Scaler

You can control the Seamless Switcher / Scaler via:

- The front panel OSD control buttons (see section 7.3)
- The infra-red remote control transmitter (see section 7.3.8)
- RS-232 remote control

### 7.3 Operating via the OSD MENU Screen

The OSD superimposes a menu on the screen from which you can control your **VP-724DS**, using the *MENU*, *ENTER*, *-*, *+*, *UP* and *DOWN* front panel OSD buttons.

Pressing the *MENU* front panel OSD button or the *MENU* key on the infra-red remote control transmitter (see Figure 49) displays the first OSD

---

1 Item 17 in Figure 1

2 By default, 20 seconds. But you can reset the timeout (from 3 to 60 seconds), see section 7.3.6.6

3 Adjusting the output resolution results in a corresponding adjustment to the size of the OSD status window

screen, the “Menu screen” (see Figure 10), which displays six interactive icons<sup>1</sup> (defined in Figure 11).

After initially pressing the *MENU* front panel OSD button or the MENU key on the infra-red remote control transmitter, each subsequent press moves to the previous level in the OSD screen (Esc.).

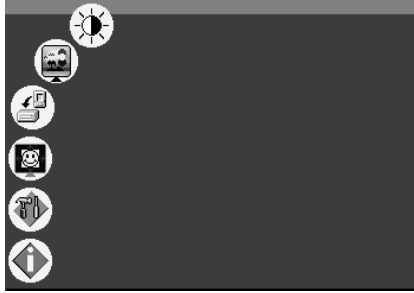


Figure 10: MENU Screen

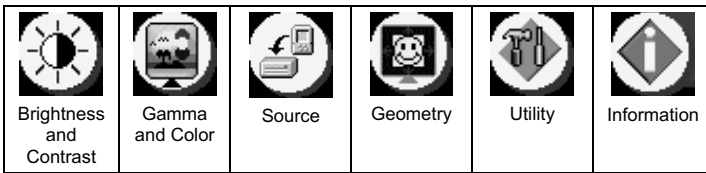


Figure 11: Menu Screen Icons

### 7.3.1 Controlling the Brightness and Contrast

Figure 12 illustrates the Brightness and Contrast Screen:

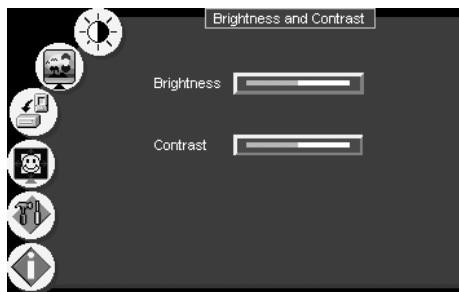


Figure 12: Brightness and Contrast Screen

<sup>1</sup> Each icon represents a Level 1 function. In addition to Level 1, the OSD structure includes Level 2 (a subset of level 1), Level 3 (a subset of level 2), Level 4 (a subset of level 3) and Range

### 7.3.2 Controlling the Gamma and Color

Figure 13 illustrates the Gamma and Color Screen. You can choose Normal (average setting), Presentation (higher black level), Cinema (higher white balance), Nature (higher green level), User 1 or User 2.

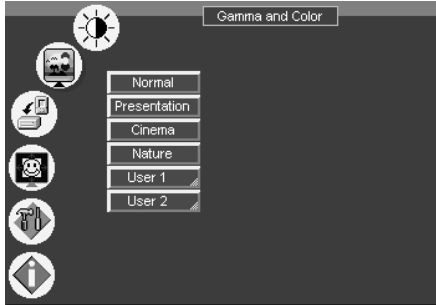


Figure 13: Gamma and Color Screen

Choosing User 1 or User 2 from the Gamma and Color Screen illustrated in Figure 13, displays the Gamma, Color Temperature and Color Manager Screen in Figure 14. Each user setting is customized to the applicable environment. The user sets the parameters and saves them for recall later.

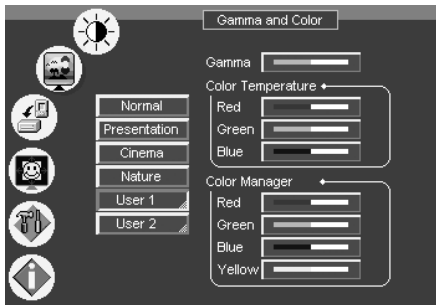


Figure 14: Gamma, Color Temperature/Manager User 1/2 Screen

### 7.3.3 Selecting the Source

Figure 15 illustrates the Source Screen, displaying the active source, as well as facilitating changing of the source.

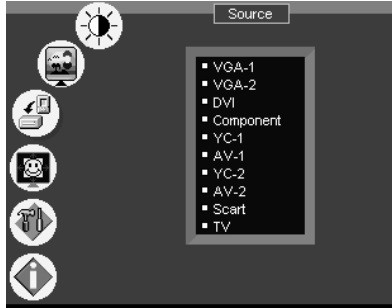


Figure 15: Source Selection Screen

### 7.3.4 Controlling the Scale Geometry

Figure 16 illustrates the main Geometry Screen, from which you can scale and zoom.

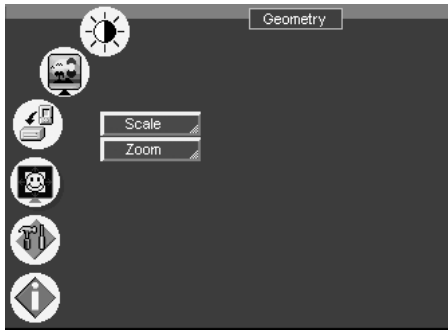


Figure 16: Geometry (Scale and Zoom) Screen

Figure 17 illustrates the Geometry (Scale) Screen, from which you can scale (Aspect Ratio and Nonlinear):

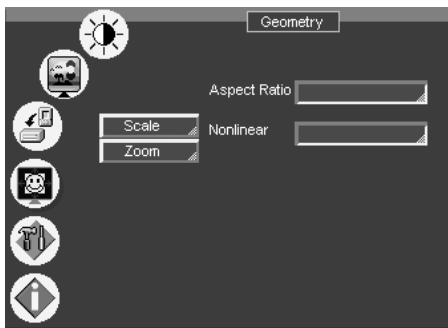


Figure 17: Geometry (Scale: Aspect Ratio and Nonlinear) Screen

Set the aspect ratio according to your specific requirements—the native resolution—that is, depending on the specifications of the Plasma screen or projector.

When using a VGA, DVI and/or component video<sup>1</sup> source, you can choose an aspect ratio from the following: Full Screen, Native, 4:3 Output<sup>2</sup>, and 16:9 Output<sup>3</sup>.

When using a composite video source and/or an s-Video source and/or component video<sup>1</sup> source, you can choose an aspect ratio from the following: Normal, Wide Screen, Pan<sup>4</sup> & Scan, 4:3 Output<sup>2</sup>, and 16:9 Output<sup>3</sup>, as Figure 18 illustrates:

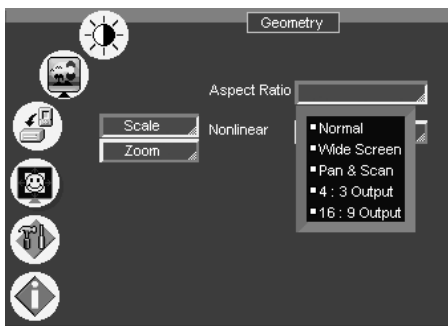


Figure 18: Geometry (Scale: Aspect Ratio) Screen

1 Depending on the resolution of the component source

2 In this standard, the ratio between the length and height is 4:3

3 In this standard (a Cinema mode standard used for movies and DVDs), the ratio between the length and height is 16:9 (or sometimes 1:2.35)

4 Panning the picture refers to resizing and cropping it



### 7.3.5 Adjusting the Zoom Ratio and Position

Figure 19 illustrates the Geometry (Zoom) Screen:

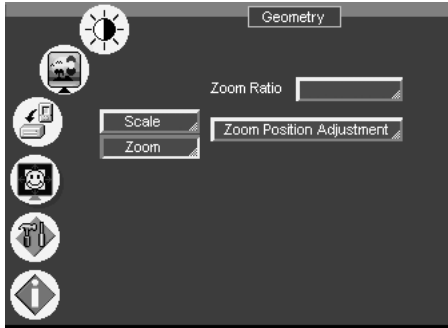


Figure 19: Geometry (Zoom) Screen

The zoom ratio and the zoom position are illustrated by a small rectangle inside a transparent pop-up OSD Enlarge status box that appears at the top right corner of the screen, as the example in Figure 20 illustrates:

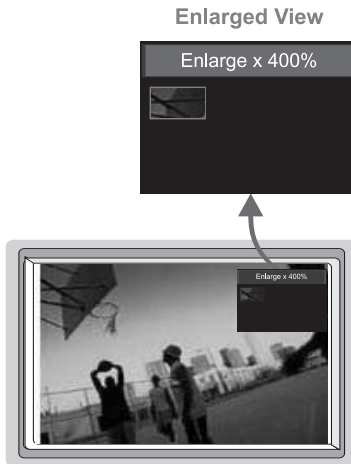


Figure 20: OSD Enlarge Status

When you change the zoom ratio or zoom position, the screen image is adjusted correspondingly, and the change is reflected in the pop-up OSD Enlarge status box. For example, Figure 21 illustrates a zoom ratio increase from 200% (Image A) to 400% (Image B):




Figure 21: Zoom Ratio Adjustment Example

Figure 22 illustrates how the pop-up OSD Enlarge status box shows a zoom position adjustment from the top left corner (Image C) to the lower right corner (Image D):




Figure 22: Zoom Position Adjustment Example

### 7.3.5.1 Adjusting the Zoom Ratio

You can adjust the zoom ratio to up to 400% via one or both of these methods:

- Using the Zoom + and/or the Zoom - control keys<sup>1</sup> on the infra-red remote control transmitter (see Figure 49). The pop-up OSD Enlarge status box continuously displays the zoom ratio and position, as Figure 20 illustrates
- Using the OSD Menu buttons, as Figure 23 illustrates

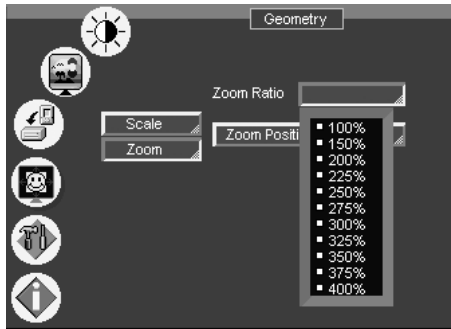




Figure 23: Geometry (Zoom Ratio) Screen

### 7.3.5.2 Adjusting the Zoom Position

You can adjust the zoom position (see the example in Figure 22) via one or more of the following methods:

- Using the preset position control keys<sup>2</sup> (see Figure 24) on the infra-red

<sup>1</sup> The  and the  buttons

<sup>2</sup> Which also set the position for the PIP window location (when the Source Prompt is ON)

remote control transmitter (see Figure 49), which instantly move the position of the zoom to up to nine preset fixed locations<sup>1</sup>

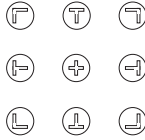


Figure 24: Preset Position Control Keys

- Using the navigation control keys on the infra-red remote control transmitter (see Figure 49), to fine tune the zoom position (that is, to slowly zoom-in at any location on the screen)<sup>2</sup>, as Figure 25 illustrates

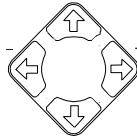


Figure 25: Navigation Control Keys

- Using the OSD Menu buttons (see Figure 26)<sup>3</sup>

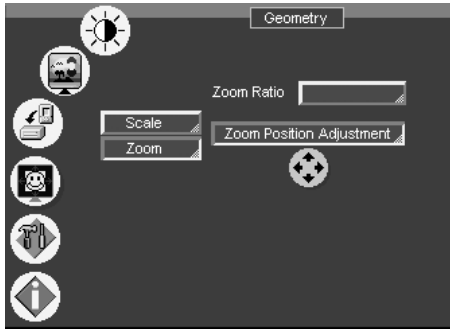





Figure 26: Geometry (Zoom Position Adjustment) Screen

1 For example, to zoom-in to the lower right corner of the image, press the  button

2 For example, to zoom-in toward the lower right of the image, press the  and the  buttons separately, as required

3 For example, to zoom-in to the lower right part of the image instead of the top left part, press the + and DOWN OSD Menu buttons (items 21 and 20, respectively, in Figure 1) separately, as required

### 7.3.6 Configuring via the Utility Screens

You can determine how your **VP-724DS** will function either generally or on a specific occasion, via the Utility screen settings (see Figure 27):

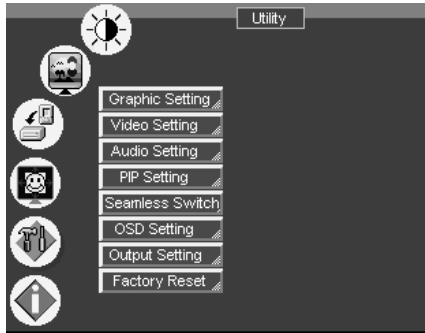


Figure 27: Utility Screen

#### 7.3.6.1 Choosing the Graphic Utility Settings

From the Graphic<sup>1</sup> Setting Utility screen (see Figure 28), you can set the color format (see Figure 29), position, saturation, hue, sharpness, frequency and phase, as well as auto image<sup>2</sup> and auto gain<sup>3</sup>.

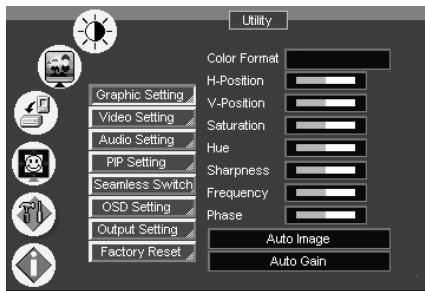


Figure 28: Graphic Setting Utility Screen

Selecting the color format (see Figure 29) lets you select RGB or YUV<sup>4</sup> colorspace. When the Default setting is chosen, the colorspace is set according to the detected input resolution.

1 When a VGA source is selected, “Graphic Setting” will be shown (or “PC Data Setting” in earlier versions). “HDTV Setting” (illustrated in Figure 46) will appear when an HDTV source is selected

2 Assesses the image and improves the quality accordingly, by automatically adjusting the phase, frequency and position

3 Automatically adjusts the brightness and contrast

4 That is Y, B-Y, R-Y colorspace, also known as Y, C<sub>b</sub>, C<sub>r</sub> or Y, P<sub>b</sub>, P<sub>r</sub>

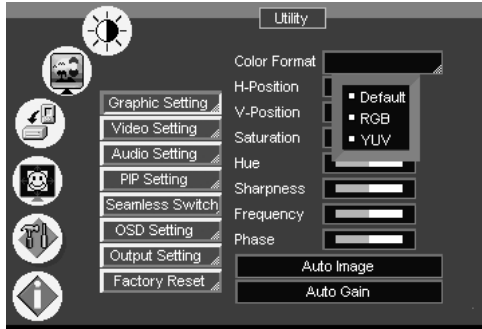


Figure 29: Graphic Setting Color Format Utility Screen

### 7.3.6.2 Choosing the Video Utility Settings

From the Video Setting Utility screen (see Figure 30), you can set the Standard (see Figure 31), color, hue, sharpness, and position.

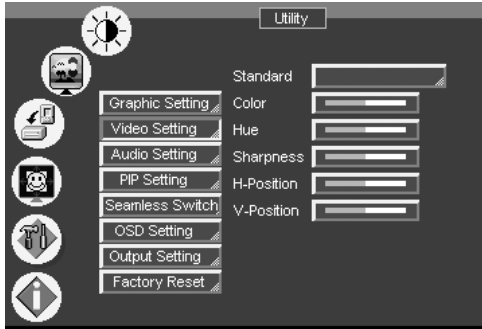


Figure 30: Video Setting Utility Screen

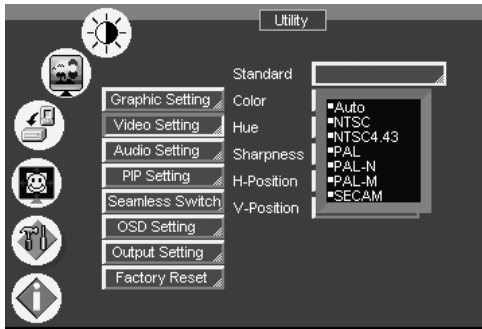


Figure 31: Video Setting Standard Utility Screen

### 7.3.6.3 Choosing the Audio Utility Settings

From the Audio Setting Utility screen (see Figure 32), you can set the volume, treble, bass, and choose between stereo and mono (see Figure 33).

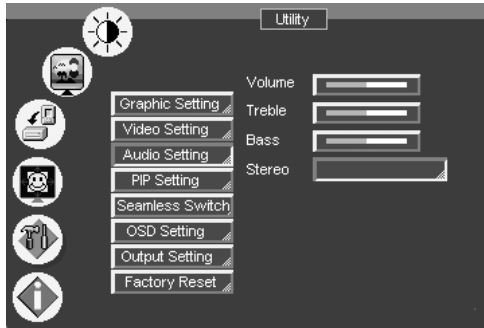


Figure 32: Audio Setting Utility Screen

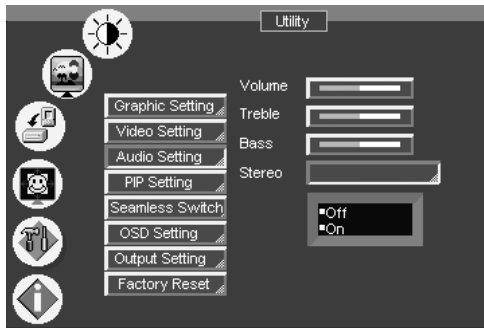


Figure 33: Audio Setting Stereo Utility Screen

### 7.3.6.4 Choosing the PIP Utility Settings

From the PIP Setting Utility screen (see Figure 34), you can activate the PIP (see Figure 35), and choose the source (see Figure 36), the size (see Figure 37) and the position of the PIP.

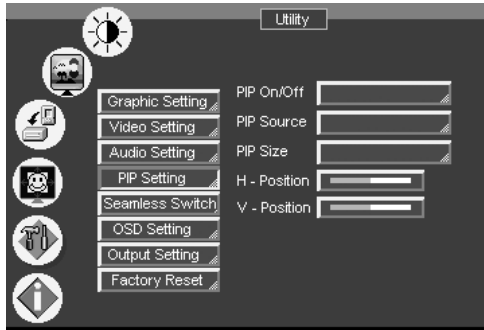


Figure 34: PIP Utility Screen

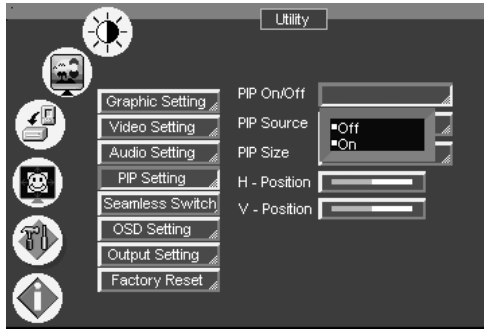


Figure 35: PIP Activation Utility Screen

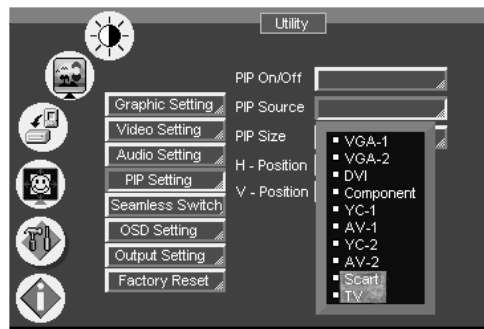


Figure 36: PIP Source Utility Screen

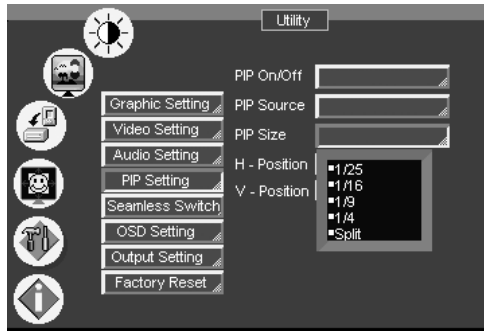


Figure 37: PIP Size Utility Screen

### 7.3.6.5 Choosing the Seamless Switch Utility Settings

From the Seamless Switch Utility screen (see Figure 38), you can choose a fast<sup>1</sup>, safe<sup>2</sup> (takes longer than fast) or moderate (between fast and safe) image transition speed:

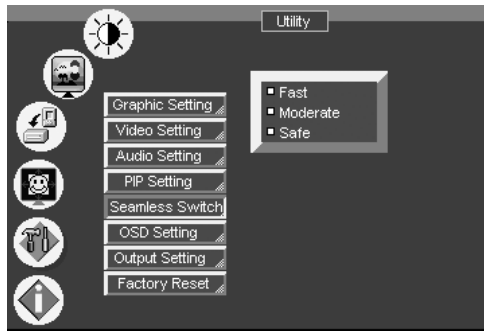


Figure 38: Seamless Switch Utility Screen


1 An immediate switch, without checking the resolution. However, the image transition may appear unstable

2 A smooth image transition (the input resolution at the input is checked and out putted after a few seconds delay)




**7.3.6.6 Choosing the OSD Utility Settings**


From the OSD Setting Utility screen (see Figure 39), you can set the OSD position, time out, size (see Figure 40), source prompt<sup>1</sup> (see Figure 41), and choose the blank color (blue or black - see Figure 42).

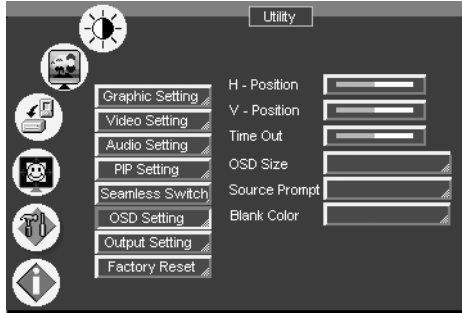

*Figure 39: OSD Setting Utility Screen*

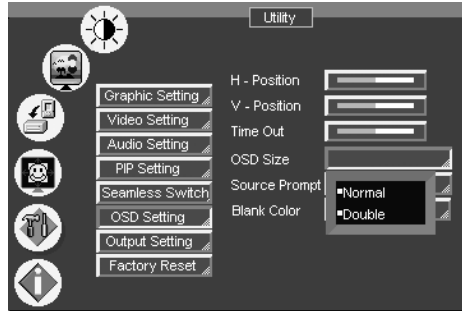

*Figure 40: OSD Size Utility Screen*

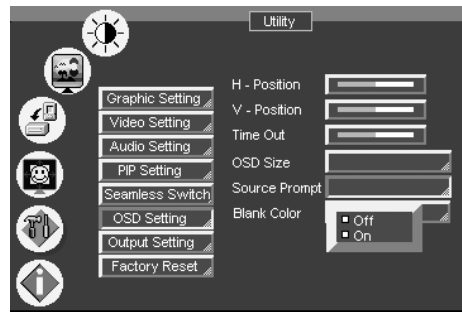

*Figure 41: OSD Source Prompt Activation Utility Screen*

<sup>1</sup> We recommend that you set the source prompt ON, when adjusting the system. During a presentation, set the source prompt OFF to avoid the appearance of OSD screen labels

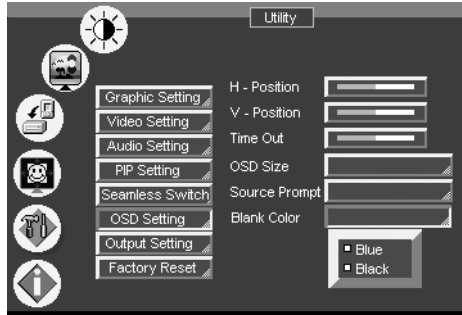


Figure 42: OSD Blank Color Utility Screen

### 7.3.6.7 Choosing the Output Utility Settings

From the Output Setting Utility screen (see Figure 43), you can set the resolution (see Figure 44), refresh rate (see Figure 45), and a user definable output mode<sup>1</sup> (see Figure 46 and Table 4).

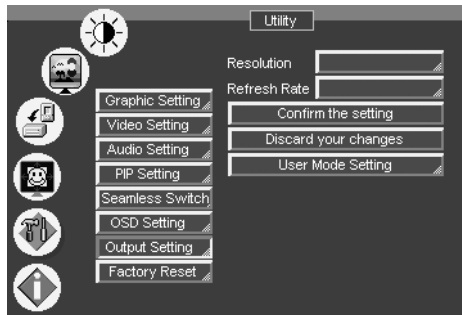


Figure 43: Output Setting Utility Screen

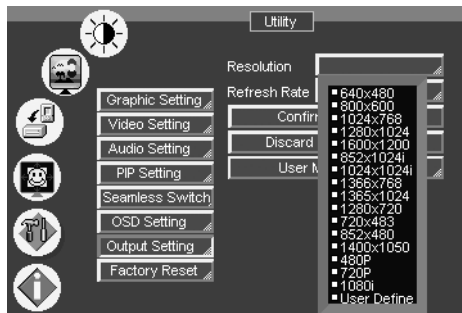


Figure 44: Output Setting Resolution Utility Screen

<sup>1</sup> Recommended for advanced users only – non-standard settings may not be recognized by the display device

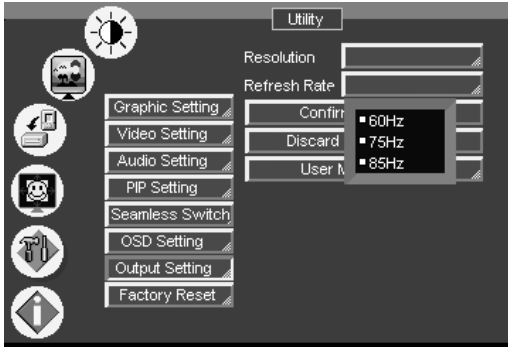


Figure 45: Output Setting Refresh Rate Utility Screen

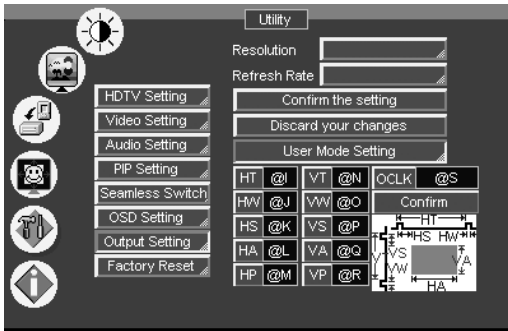


Figure 46: Output Setting User Mode Setting Utility Screen

Table 4: User Mode Setting Definitions

User Mode Setting Definitions	
HT:	Horizontal total
HW:	Horizontal sync pulse width
HS:	Horizontal active start point
HA:	Horizontal active region
HP:	Horizontal polarity
VT:	Vertical total
VW:	Vertical sync pulse width
VS:	Vertical active start point
VA:	Vertical active region
VP:	Vertical polarity
OCLK:	Output clock

### 7.3.6.8 Choosing Factory Reset

From the Factory Reset Utility screen (see Figure 47), you can reset your VP-724DS to its preset default setting:

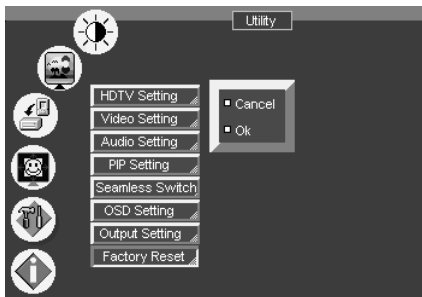


Figure 47: Factory Reset Utility Screen

### 7.3.7 Verifying Configuration Details via the Information Screen

From the Information screen (see Figure 48), you can verify the main source, PIP source, whether mute is activated, output mode, as well as the firmware version number:

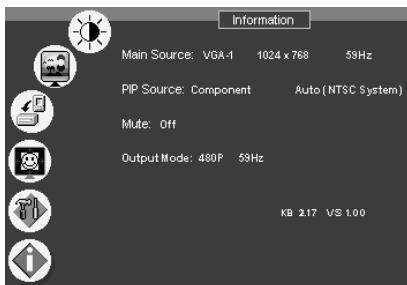


Figure 48: Information Screen

### 7.3.8 Operating via the Infra-red Remote Control Transmitter

You can control the Seamless Switcher / Scaler remotely, from the Infra-red remote control transmitter, which:

- Is a hand held wireless instrument with a convenient keypad that receives its power from 2 AAA size 1.5V DC batteries
- Has a range of up to 15 meters
- Delivers instantaneous results

Figure 49 and Table 5 define<sup>1</sup> the Infra-red Remote Control Transmitter:

<sup>1</sup> The illustration in Figure 49 shows an enlarged view of 3 separate parts of the Infra-red remote control transmitter

## Operating the VP-724DS Seamless Switcher / Scaler

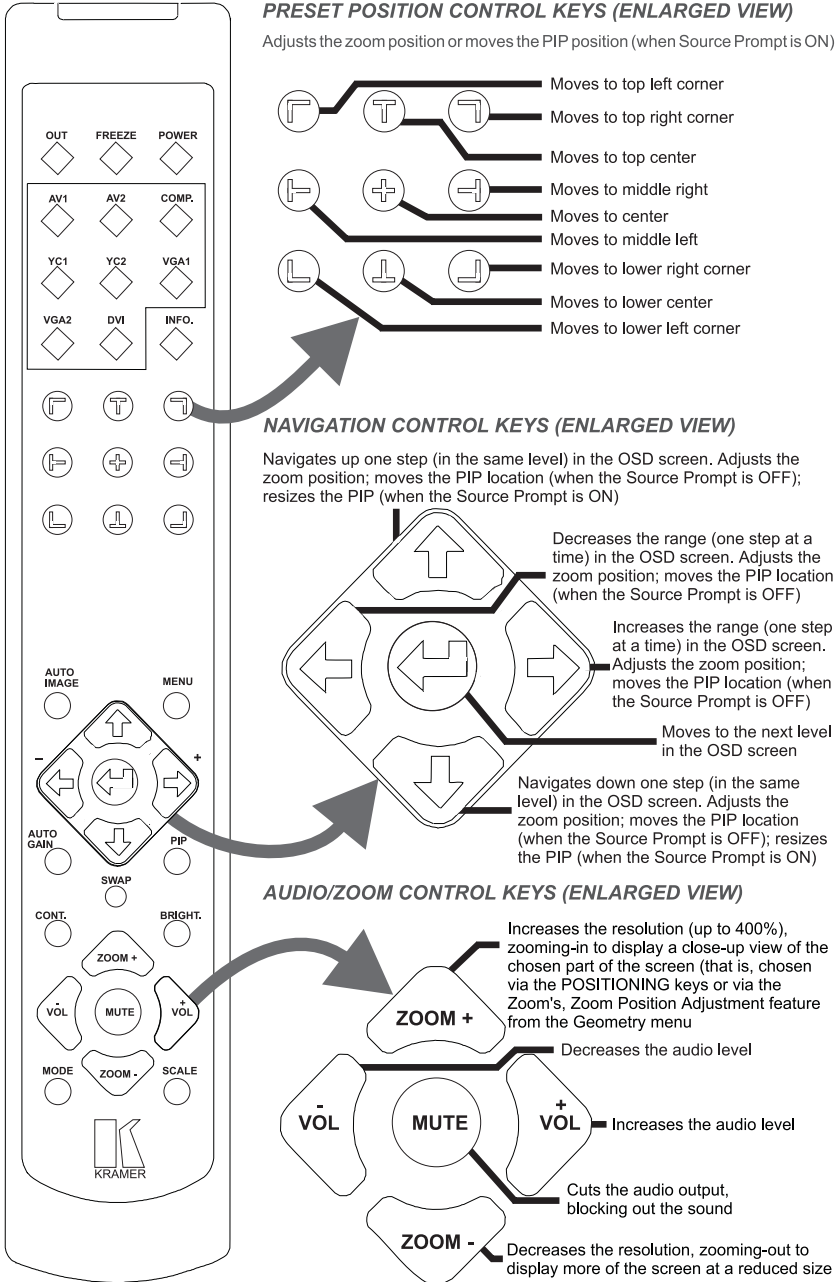


Figure 49: Infra-red Remote Control Transmitter


Table 5: *Infra-red Remote Control Transmitter Functions*

<b>Keys</b>	<b>Function</b>
OUT	Selects the output resolution and illuminates the appropriate LED
FREEZE	Pauses the output video
POWER	Cycles power
INPUT SELECTOR <sup>1</sup>	8 separate keys for selecting each of the following sources: AV1, AV2, COMP. (Component) YC1, YC2, VGA1, VGA2 and DVI
INFO.	Defines the main source, PIP source, whether mute is activated, output mode, as well as the firmware version number
PRESET POSITION CONTROL <sup>2</sup>	Adjusts the zoom <sup>3</sup> position <sup>4</sup> or moves the PIP position when the Source Prompt is ON
AUTO IMAGE	Assesses the image and improves the quality accordingly, by automatically adjusting the phase, frequency and position
MENU	Displays the OSD Menu screen <sup>5</sup> and locks/unlocks the front panel <sup>6</sup>
NAVIGATION CONTROL <sup>7</sup>	Allow maneuvering within an OSD screen (all keys); adjusts the zoom position (4 keys); moves the PIP location when the Source Prompt is OFF (4 keys); resizes the PIP when the Source Prompt is ON (2 keys)
AUTO GAIN	Automatically adjusts the brightness and contrast
SWAP <sup>8</sup>	Toggles between the PIP content and the screen source content
PIP <sup>9</sup>	Selects the picture-in-picture function and illuminates the PIP LED
CONT.	Displays the contrast status <sup>10</sup>
BRIGHT.	Displays the brightness status <sup>10</sup>
AUDIO/ZOOM CONTROL <sup>7</sup>	Allow volume and zoom control
MODE	Toggles between each of the following modes: Normal, Presentation, Cinema, Nature, User 1 and User 2
SCALE	Toggles between each of the following Aspect Ratios: Normal, Wide Screen, Pan & Scan, 4:3 Output, and 16:9 Output <sup>11</sup>

1 Press to select the source; the LED illuminates. Press again to freeze the image; the LED flashes. Press once again to display a blank screen; the LED flashes more slowly

2 Consists of a set of 9 separate keys. See the illustration in Figure 49 which shows an enlarged view of this part of the Infra-red remote control transmitter

3 A small rectangle inside a transparent pop-up OSD Enlarge status box appears at the top right corner of the screen showing the position of the zoom within a picture

4 For example, when enlarging the display, press this button:  to go to the lower right corner of the display area

5 As Figure 10 illustrates

6 See section 6.3

7 Consists of a set of 5 separate keys. See the illustration in Figure 49 which shows an enlarged view of this part of the Infra-red remote control transmitter

8 See section 6.2.3

9 See section 6.2

10 Adjust using the +/- keys

11 See Figure 18

## 7.4 Upgrading Firmware

To install the latest Kramer firmware version on a **VP-724DS** unit, connect the COM port on your PC to the RS-232 port on the **VP-724DS** unit, as section 5.1 describes, and go to the Kramer Web site at this URL: <http://www.kramerelectronics.com> for the latest information.

## 8 Technical Specifications

Table 6 includes the technical specifications:

*Table 6: Technical Specifications<sup>1</sup> of the VP-724DS*

Inputs:	<b>VIDEO:</b> 2 x composite video 1 Vpp/75 Ω on RCA connectors; 2 x Y/C (s-Video) 1 Vpp (Y), 0.3Vpp (C) / 75 Ω on 4 pin connectors; 1 x Component (Y, Pb/Cb, Pr/Cr) on RCA connectors; 2x VGA (VGA/SVGA/XGA/UXGA) on HD15F connectors; and 1x DVI connector <b>AUDIO:</b> 2 x stereo audio on terminal block connectors (CV); 2 x stereo audio on terminal block connectors (YC); 2 x stereo audio on terminal block connectors (VGA); 1 x stereo audio on a terminal block connector (component); and 1 x stereo audio on a terminal block connector (DVI)
Outputs:	<b>VIDEO:</b> 1 x VGA/SVGA/XGA/UXGA as well as additional modes: 480p, 720, 1080i on an HD15F connector; <b>AUDIO:</b> 1 x stereo audio on a terminal block connector
Output Resolutions:	VGA (640x480), SVGA (800x600), XGA (1024x768), SXGA (1280x1024), UXGA (1600x1200), 1024x852, 1024x1024, 1366x768, 1365x1024, 1280x720, 720x483, 852x480, 1400x1050. Also supports 480p, 720p, and 1080i, as well as a user definable output mode
Control:	Front panel buttons/ OSD, IR remote control, RS-232 on a DB-9 connector
Additional Controls:	Different vertical refresh rates, ProcAmp control, output image scaling and aspect ratio change
Firmware:	Frame freeze, digital zoom 4X, PIP (video-in-graphics or graphics-in-video, in sizes of up to half a screen, located anywhere on the screen), Flesh tone (special color processing), Gamma setting
H Frequency:	15.63~90kHz
V Frequency:	50~100Hz
Computer Resizing:	Auto-resizing to panel pixel number
RGB Video Signal:	RGB, 1.0 Vpp, 75 Ω
RGB Sync Signal:	Separate H/VTTTL, composite sync, analog
Audio Input Voltage:	0~0.5 Vrms
Audio Output Voltage:	0~0.5 Vrms
Plug and Play:	DDC1 / DDC2B
De-interlacing:	Adaptive and pixel based
Film mode detection:	2:2 / 3:2 pull down reverse
Power Source:	100-240 VAC, 50/60 Hz, 30VA automatic power supply
Dimensions:	19" (W), 9.3" (D) 1U (H)
Accessories:	IR remote control, power cord
Weight:	3 kg (6.6 lbs.) approx.

<sup>1</sup> Specifications are subject to change without notice

## 9 VP-724DS Communication Protocol

The Com port setting details are: Baud Rate: 9600/115200, Parity: none, Data Bits: 8 bits, Stop Bits: 1 bit, Set CTS Mode: Off, and Set XON/XOFF: Off.

Table 7: RS-232 Protocol

Field 1	Field 2	Field 3	Field 4	Field 5
"L"	" "	"Code"	"~Code"	0x0d
"L" ASCII Code, 1 byte	" " ASCII space, 1 byte	"xx" Code Str, 2 byte	"xx" is 1's complement of Code str, 2 byte	0x0d, 1 byte

Example: Menu On Command is "L 12ED" + Enter

Table 8: RS-232 Communication Code

Item	Code	Code(Hex)	~Code(Hex)	Function	Command
1	0	0x00	0xFF	0	L 00EF
2	1	0x01	0xFE	1	L 01FE
3	2	0x02	0xFD	2	L 02FD
4	3	0x03	0xFC	3	L 03FC
5	4	0x04	0xFB	4	L 04FB
6	5	0x05	0xFA	5	L 05FA
7	6	0x06	0xF9	6	L 06F9
8	7	0x07	0xF8	7	L 07F8
9	8	0x08	0xF7	8	L 08F7
10	9	0x09	0xF6	9	L 09F6
11	10	0x0A	0xF5	100	L 0AF5
12	11	0x0B	0xF4	Cancel	L 0BF4
13	12	0x0C	0xF3	Recall	L 0CF3
14	13	0x0D	0xF2	Scan	L 0DF2
15	14	0x0E	0xF1	Channel +	L 0EF1
16	15	0x0F	0xF0	Channel -	L 0FF0
17	16	0x10	0xEF	TV	L 10EF
18	17	0x11	0xEE	Power Button	L 11EE
19	18	0x12	0xED	Menu	L 12ED
20	19	0x13	0xEC	Volume +	L 13EC
21	20	0x14	0xEB	Volume -	L 14EB
22	21	0x15	0xEA	Source	L 15EA
23	22	0x16	0xE9	VGA1	L 16E9
24	23	0x17	0xE8	VGA2	L 17E8
25	24	0x18	0xE7	DVI	L 18E7
26	25	0x19	0xE6	Component	L 19E6
27	26	0x1A	0xE5	Video 1	L 1AE5
28	27	0x1B	0xE4	Video 2	L 1BE4
29	28	0x1C	0xE3	Freeze	L 1CE3
30	29	0x1D	0xE2	PIP	L 1DE2
31	30	0x1E	0xE1	Auto Image	L 1EE1
32	31	0x1F	0xE0	Auto Gain	L 1FE0
33	32	0x20	0xDF	Zoom +	L 20DF
34	33	0x21	0xDE	Zoom -	L 21DE
35	34	0x22	0xDD	Mute	L 22DD
36	35	0x23	0xDC	Brightness	L 23DC
37	36	0x24	0xDB	Contrast	L 24DB
38	37	0x25	0xDA	Mode	L 25DA
39	38	0x26	0xD9	Normal	L 26D9
41	40	0x27	0xD8	Presentation	L 27D8
40	39	0x28	0xD7	Cinema	L 28D7



## VP-724DS Communication Protocol

Item	Code	Code(Hex)	~Code(Hex)	Function	Command
42	41	0x29	0xD6	Nature	L 29D6
43	42	0x2A	0xD5	USER 1	L 2AD5
44	43	0x2B	0xD4	USER 2	L 2BD4
45	44	0x2C	0xD3	SWAP	L 2CD3
46	45	0x2D	0xD2	Scale	L 2DD2
47	46	0x2E	0xD1	Normal	L 2ED1
48	47	0x2F	0xD0	WideScreen	L 2FD0
49	48	0x30	0xCF	Pan & Scan	L 30CF
50	49	0x31	0xCE	4:3	L 31CE
51	50	0x32	0xCD	Up	L 32CD
52	51	0x33	0xCC	Down	L 33CC
53	52	0x34	0xCB	Left	L 34CB
54	53	0x35	0xCA	Right	L 35CA
55	54	0x36	0xC9	Enter	L 36C9
56	55	0x37	0xC8	Status	L 37C8
57	56	0x38	0xC7	Enter+UP	L 38C7
58	57	0x39	0xC6	C-Video 1	L 39C6
59	58	0x3A	0xC5	C-Video 2	L 3AC5
60	59	0x3B	0xC4	S-Video 1	L 3BC4
61	60	0x3C	0xC3	S-Video 2	L 3CC3
62	61	0x3D	0xC2	OUT	L 3DC2
63	62	0x3E	0xC1	Blank	L 3EC1
64	70	0x46	0xB9	Factory Reset	L 46B9
65	71	0x47	0xB8	Key Lock	L 47B8
66	176	0xB0	0x4F	PIP On	L B04F
67	177	0xB1	0x4E	PIP Off	L B14E
68	178	0xB2	0x4D	Freeze On	L B24D
69	179	0xB3	0x4C	Freeze Off	L B34C
70	180	0xB4	0x4B	Mute On	L B44B
71	181	0xB5	0x4A	Mute Off	L B54A
72	182	0xB6	0x49	Blank On	L B649
73	183	0xB7	0x48	Blank Off	L B748
74	184	0xB8	0x47	Key Lock On	L B847
75	185	0xB9	0x46	Key Lock Off	L B946
76	186	0xBA	0x45	Output Resolution	L BA45 **
77	227	0xE3	0x1C	PIP Size	L E31C **

\*\* is Resolution index

\*\* is PIP size index

	0x60	0x60	0x9F	Firmware Version	L 609F
	0x61	0x61	0x9E	NOP code	L 619E

Table 9: RS-232 Read Command

Command Sent		Return	
Source	K 15EA	VGA1	K 16E9
		VGA2	K 17E8
		DVI	K 18E7
		Component	K 19E6
		C-Video 1	K 39C6
		C-Video 2	K 3AC5
		S-Video 1	K 3BC4
		S-Video 2	K 3CC3
Freeze	K 1CE3	Freeze On	K B24D
		Freeze Off	K B34C
PIP	K 1DE2	PIP On	K B04F
		PIP Off	K B14E
Mute	K 22DD	Mute On	K B44B
		Mute Off	K B54A
Blank	K 3EC1	Blank On	K B649
		Blank Off	K B748
Key Lock	K 47B8	Key Lock On	K B847
		Key Lock Off	K B946
Output Resolution	K BA45	640x480	K 00FF
		800x600	K 01FE
		1024x768	K 02FD
		1280x1024	K 03FC
		1600x1200	K 04FB
		852x1024i	K 05FA
		1024x1024i	K 06F9
		1366x768	K 07F8
		1366x1024	K 08F7
		1280x720	K 09F6
		720x483	K 0AF5
		480P	K 0BF4
		720P	K 0CF3
		1080i	K 0DF2
VGA/DVI Resolution	K E01F	640x480	K 00FF
		NTSC 60	K 01FE
		PAL 50	K 02FD
		720x400	K 03FC
		800x600	K 04FB
		832x624	K 05FA
		1024x768	K 06F9
		1024x800	K 07F8
		1152x870	K 08F7
		1280x960	K 09F6
		1280x1024	K 0AF5
		1600x1200	K 0BF4
		1280x720P	K 0CF3
		853x480P	K 0DF2
		1920x1080I	K 0EF1
		720x576P	K 0FF0
		1152x900	K 10EF
		1400x1050	K 11EE
		No Signal	K FF00
VGA/DVI Refresh rate	K E11E	Refresh rate(Hex)	K ###&&
		No Signal	K FF00
Video Standard	K E21D	NTSC	K 01FE
		NTSC 4.43	K 02FD
		PAL	K 03FC
		PAL N	K 04FB
		PAL M	K 05FA
		SECAM	K 06F9
		PAL 60	K 07F8
		NTSC 4.43 50	K 08F7
		No Signal	K FF00
PIP Size	K E31C	1/25	K 00FF
		1/16	K 01FE
		1/9	K 02FD
		1/4	K 03FC
		Split	K 04FB
PIP H position	K E41B	H position(Hex)	K ###&&
PIP V position	K E51A	V position(Hex)	K ###&&

## is Value,&& is ## invert

## is Value,&& is ## invert

---

## LIMITED WARRANTY

Kramer Electronics (hereafter *Kramer*) warrants this product free from defects in material and workmanship under the following terms.

### HOW LONG IS THE WARRANTY

Labor and parts are warranted for three years from the date of the first customer purchase.

### WHO IS PROTECTED?

Only the first purchase customer may enforce this warranty.

### WHAT IS COVERED AND WHAT IS NOT COVERED

Except as below, this warranty covers all defects in material or workmanship in this product. The following are not covered by the warranty:

1. Any product which is not distributed by Kramer, or which is not purchased from an authorized Kramer dealer. If you are uncertain as to whether a dealer is authorized, please contact Kramer at one of the agents listed in the web site [www.kramerelectronics.com](http://www.kramerelectronics.com).
2. Any product, on which the serial number has been defaced, modified or removed.
3. Damage, deterioration or malfunction resulting from:
  - i) Accident, misuse, abuse, neglect, fire, water, lightning or other acts of nature
  - ii) Product modification, or failure to follow instructions supplied with the product
  - iii) Repair or attempted repair by anyone not authorized by Kramer
  - iv) Any shipment of the product (claims must be presented to the carrier)
  - v) Removal or installation of the product
  - vi) Any other cause, which does not relate to a product defect
  - vii) Cartons, equipment enclosures, cables or accessories used in conjunction with the product

### WHAT WE WILL PAY FOR AND WHAT WE WILL NOT PAY FOR

We will pay labor and material expenses for covered items. We will not pay for the following:

1. Removal or installations charges.
2. Costs of initial technical adjustments (set-up), including adjustment of user controls or programming. These costs are the responsibility of the Kramer dealer from whom the product was purchased.
3. Shipping charges.

### HOW YOU CAN GET WARRANTY SERVICE

1. To obtain service on you product, you must take or ship it prepaid to any authorized Kramer service center.
2. Whenever warranty service is required, the original dated invoice (or a copy) must be presented as proof of warranty coverage, and should be included in any shipment of the product. Please also include in any mailing a contact name, company, address, and a description of the problem(s).
3. For the name of the nearest Kramer authorized service center, consult your authorized dealer.

### LIMITATION OF IMPLIED WARRANTIES

All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this warranty.

### EXCLUSION OF DAMAGES

The liability of Kramer for any effective products is limited to the repair or replacement of the product at our option. Kramer shall not be liable for:

1. Damage to other property caused by defects in this product, damages based upon inconvenience, loss of use of the product, loss of time, commercial loss; or
2. Any other damages, whether incidental, consequential or otherwise. Some countries may not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from place to place.

**NOTE:** All products returned to Kramer for service must have prior approval. This may be obtained from your dealer.

This equipment has been tested to determine compliance with the requirements of:

- EN-50081: "Electromagnetic compatibility (EMC);  
generic emission standard.  
Part 1: Residential, commercial and light industry"
- EN-50082: "Electromagnetic compatibility (EMC) generic immunity standard.  
Part 1: Residential, commercial and light industry environment".
- CFR-47: FCC Rules and Regulations:  
Part 15: "Radio frequency devices  
Subpart B – Unintentional radiators"

### CAUTION!

- ☒ Servicing the machines can only be done by an authorized Kramer technician. Any user who makes changes or modifications to the unit without the expressed approval of the manufacturer will void user authority to operate the equipment.
- ☒ Use the supplied DC power supply to feed power to the machine.
- ☒ Please use recommended interconnection cables to connect the machine to other components.



**For the latest information on our products and a list of Kramer distributors, visit our Web site: [www.kramerelectronics.com](http://www.kramerelectronics.com).  
Updates to this user manual may be found at  
<http://www.kramerelectronics.com/manuals.html>.  
We welcome your questions, comments and feedback.**

---

**Kramer Electronics, Ltd.**

3 Am VeOlamo Street. Jerusalem 95463, Israel Tel: (+972-2)-654-4000

Fax: (+972-2)-653-5369, E-mail: [info@kramerel.com](mailto:info@kramerel.com)

**P/N: 2900 – 0137320 REV 2**